

2009 ENGINE**Engine Mechanical - Sienna****ENGINE****ON-VEHICLE INSPECTION****1. INSPECT ENGINE COOLANT**

- a. Inspect the engine coolant (See ON-VEHICLE INSPECTION).

2. INSPECT ENGINE OIL

- a. Inspect the engine oil (See ON-VEHICLE INSPECTION).

3. INSPECT BATTERY

- a. Inspect the battery (See ON-VEHICLE INSPECTION).

4. INSPECT AIR CLEANER FILTER ELEMENT SUB-ASSEMBLY

- a. Remove the air cleaner filter element sub-assembly.
- b. Visually check that there is no dirt, blockage, and/or damage to the air cleaner filter element.

HINT:

- If there is any dirt or a blockage in the air cleaner filter element, clean it with compressed air.
- If any dirt or a blockage remains even after cleaning the air cleaner filter element with compressed air, replace it.

5. INSPECT SPARK PLUG

- a. Inspect the spark plugs (See ON-VEHICLE INSPECTION).

6. INSPECT VALVE LASH ADJUSTER NOISE

- a. Rev up the engine several times. Check that the engine does not emit unusual noises.

If unusual noises occur, warm up the engine and idle it for over 30 minutes. Then repeat this procedure.

HINT:

If any defects or problems are found during the inspection above, perform lash adjuster inspection (See INSPECTION).

7. INSPECT IGNITION TIMING

- a. Warm up the engine.
- b. When using Techstream:

Check the ignition timing.

1. Connect Techstream to the DLC3.

2. Enter DATA LIST mode with Techstream.

Ignition timing: 8 to 12° BTDC at idle

HINT:

Refer to Techstream operator's manual for help when selecting the DATA LIST.

- c. When not using Techstream:

Check the ignition timing.

1. Using SST, connect terminals 13 (TC) and 4 (CG) of the DLC3.

SST 09843-18040

NOTE:

- **Confirm the terminal numbers before connecting them. Connection with a wrong terminal can damage the engine.**
- **Turn off all electrical systems before connecting the terminals.**
- **Perform this inspection after the cooling fan motor is turned off.**

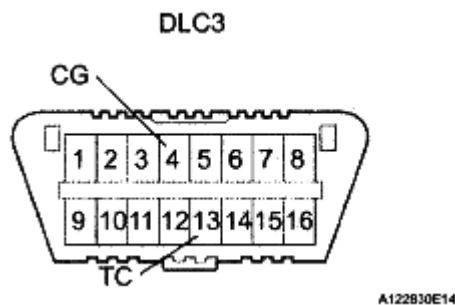


Fig. 1: Identifying DLC3 Connector Terminals
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

2. Remove the V-bank cover.
3. Pull out the red lead wire harness.
4. Connect the tester terminal of the timing light to the red lead wire as shown in the illustration.

NOTE: Use a timing light which can detect the first signal.

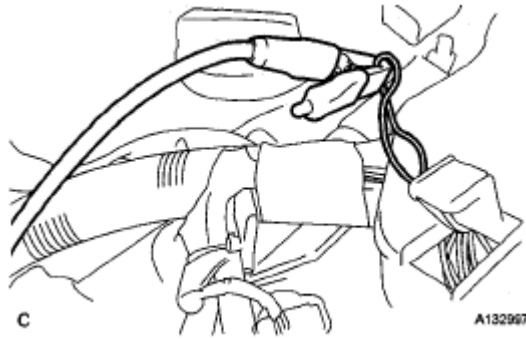


Fig. 2: Connecting Tester Terminal Of Timing Light To Red Lead Wire
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

5. Check the ignition timing at idle.

Ignition timing: 8 to 12° BTDC at idle

NOTE: When checking the ignition timing, the transmission should be in neutral.

HINT:

Run the engine at 1000 to 1300 rpm for 5 seconds, and then check that the engine rpm returns to idle speed.

6. Disconnect terminals 13 (TC) and 4 (CG) of the DLC3.
7. Check the ignition timing at idle.

Ignition timing: 7 to 24° BTDC at idle

8. Confirm that the ignition timing moves to the advanced angle side when the engine rpm is increased.
9. Remove the timing light.

8. INSPECT ENGINE IDLE SPEED

- a. Warm up the engine.
- b. When using Techstream:

Check the idle speed.

1. Connect Techstream to the DLC3.
2. Enter DATA LIST mode with Techstream.

Idle speed: 600 to 700 rpm

NOTE:

- When checking the idle speed, the transmission should be in neutral.
- Check the idle speed with the cooling fan off.
- Switch off all accessories and air conditioning before connecting Techstream.

HINT:

Refer to Techstream operator's manual for further details.

- c. When not using Techstream:

Check the idle speed.

1. Using SST, connect the tachometer test probe to terminal 9 (TAC) of the DLC3.

SST 09843-18030

2. Check the idle speed.

Idle speed: 600 to 700 rpm

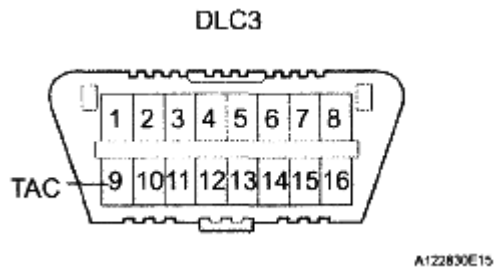


Fig. 3: Identifying DLC3 Connector Terminals
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

9. INSPECT COMPRESSION

- a. Warm up and stop the engine.
- b. Disconnect the injector connectors.
- c. Remove the intake air surge tank (See **REMOVAL**).
- d. Remove the 6 ignition coils.
- e. Remove the 6 spark plugs.
- f. Check the cylinder compression pressure.
 1. Insert a compression gauge into the spark plug hole.
 2. While cranking the engine, measure the compression pressure.

Compression pressure: 1.3 MPa (13 kgf/cm² , 189 psi)

Minimum pressure: 0.98 MPa (10 kgf/cm² , 142 psi)

Difference between each cylinder: 0.1 MPa (1.0 kgf/cm² , 15 psi)

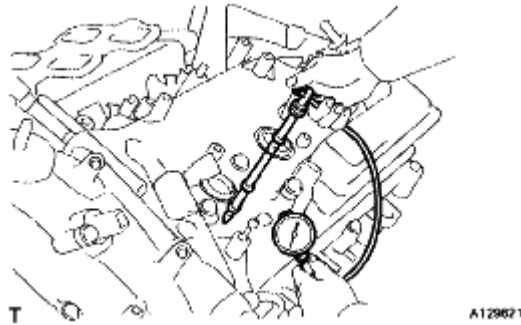


Fig. 4: Checking Cylinder Compression Pressure
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

NOTE:

- Always use a fully charged battery to obtain an engine speed of 250 rpm or more.
- Check the other cylinders' compression pressure in the same way.
- This measurement must be done as quickly as possible.

3. If the cylinder compression is low, pour a small amount of engine oil into the cylinder through the spark plug hole and inspect again.

HINT:

- If adding oil increases the compression, the piston rings and/or cylinder bore may be worn or damaged.
- If pressure stays low, a valve may be stuck or seated improperly, or there may be leakage in the gasket.

- g. Install the 6 spark plugs.

Torque: 18 N*m (184 kgf*cm, 13 ft.*lbf)

- h. Install the 6 ignition coils.

Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf)

- i. Install the intake air surge tank (See **INSTALLATION**).

10. INSPECT CO/HC

- a. Start the engine.
- b. Run the engine at 2500 rpm for approximately 180 seconds.

- c. Insert the CO/HC meter testing probe at least 40 cm (1.3 ft.) into the tailpipe during idling.
- d. Check CO/HC concentration at idle and/or 2500 rpm.

HINT:

Check regulations and restrictions in your area when performing 2 mode CO/HC concentration testing (engine check at both idle speed and at 2500 rpm).

If the CO/HC concentration does not comply with regulations, perform troubleshooting in the order given below.


1. Check air fuel ratio sensor and heated oxygen sensor operation.
2. See the table below for possible causes, and then inspect and repair.

CO AND HC SPECIFICATIONS

CO	HC	Problems	Causes
Normal	High	Rough idle	1. Faulty ignitions: ○ Incorrect timing ○ Fouled, shorted or improperly gapped plugs 2. Incorrect valve clearance 3. Leaks in intake and exhaust valves 4. Leaks in cylinders
Low	High	Rough idle (fluctuating HC reading)	1. Vacuum leaks: ○ PCV hoses ○ Intake manifold ○ Throttle body ○ Brake booster line 2. Lean mixture causing misfire
High	High	Rough idle (black smoke from exhaust)	1. Restricted air filter 2. Plugged PCV valve 3. Faulty SFI system: ○ Faulty fuel pressure regulator ○ Defective ECT sensor ○ Defective MAF meter ○ Faulty ECM ○ Faulty injectors ○ Faulty throttle position sensor

DRIVE BELT

COMPONENTS

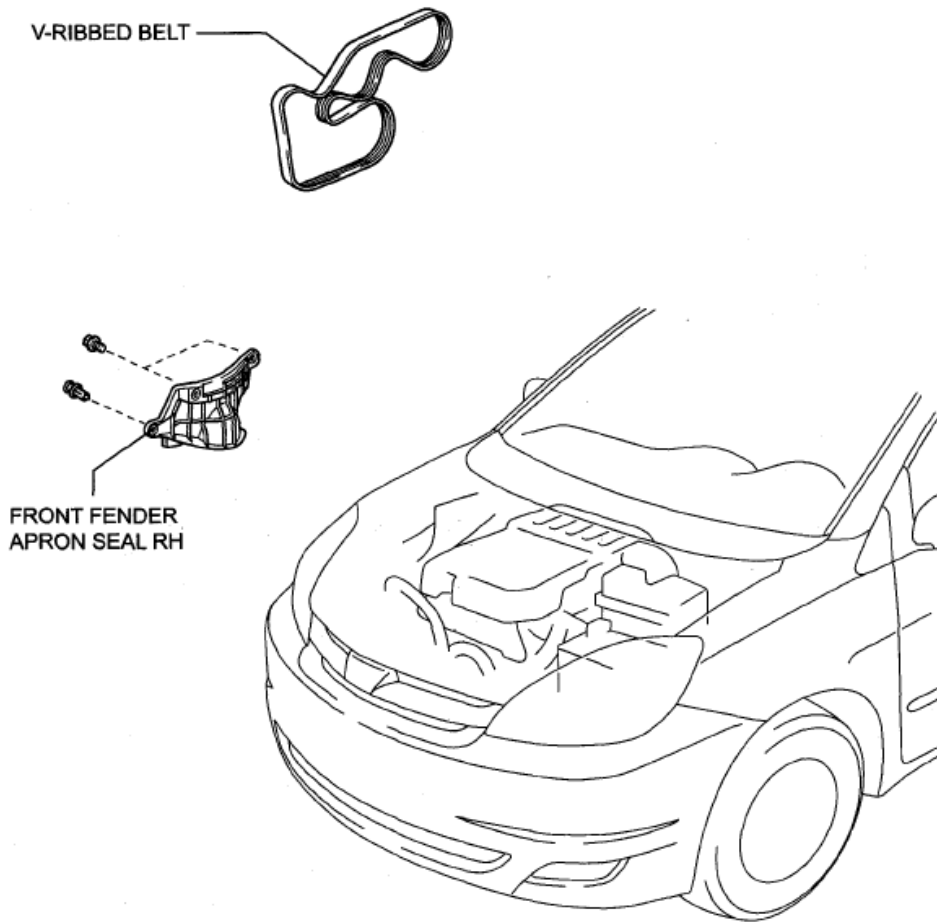

N

A162376E01

Fig. 5: Identifying Drive Belt Components

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

REMOVAL

1. **REMOVE FRONT WHEEL RH**
2. **REMOVE FRONT FENDER APRON SEAL RH** (See **REMOVAL**)
3. **REMOVE V-RIBBED BELT**
 - a. Using SST, release the belt tension by turning the belt tensioner counterclockwise, and remove the V-ribbed belt from the belt tensioner.

SST 09249-63010

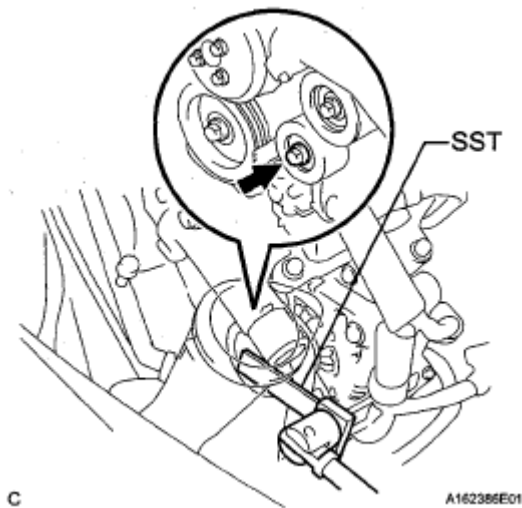


Fig. 6: Identifying SST 09249-63010

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. While turning the belt tensioner counterclockwise, align with its holes, and then insert the 5 mm bi-hexagon wrench into the holes to fix the V-ribbed belt tensioner.

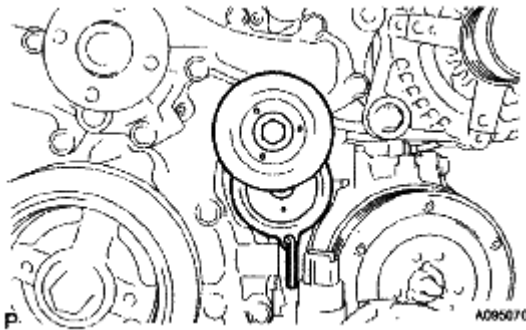


Fig. 7: Inserting Bi-Hexagon Wrench Into Holes To Fix V-Ribbed Belt Tensioner

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

INSPECTION

1. INSPECT V-RIBBED BELT

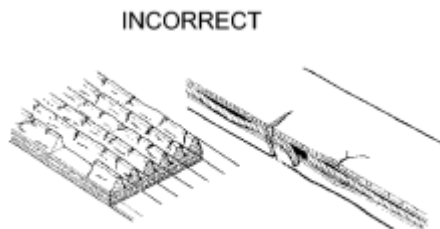


Fig. 8: Check The Belt For Wear, Cracks Or Other Signs Of Damage


Courtesy of TOYOTA

- a. Check the belt for wear, cracks or other signs of damage.

If any defect has been found, replace the V-ribbed belt.

- The belt is cracked.
- The belt is worn out to the extent that the cords are exposed.
- The belt has chunks missing from the ribs.

REPLACE

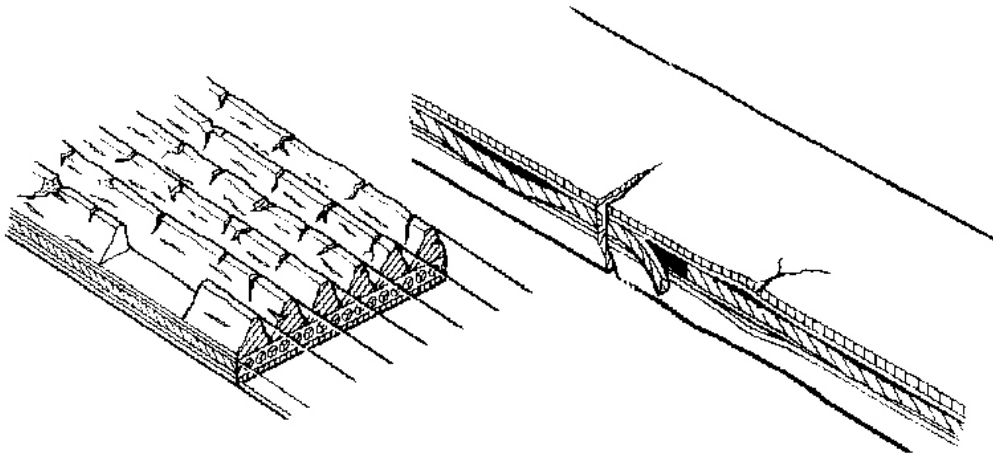

CORRECT



INCORRECT

A131418E01

Fig. 9: Check That The Belt Fits Properly In The Ribbed Grooves

- b. Check that the belt fits properly in the ribbed grooves.

NOTE: Check with your hand to confirm that the belt has not slipped out of the grooves on the bottom to the pulley. If it has slipped out, replace the V-ribbed belt. Install a new V-ribbed belt correctly.

2. INSPECT V-RIBBED BELT TENSIONER ASSEMBLY

- a. Check that nothing gets caught in the tensioner by turning it clockwise and counterclockwise. If a malfunction exists, replace the tensioner.

INSTALLATION

1. INSTALL V-RIBBED BELT

- a. Install the V-ribbed belt.
- b. Using SST, turn the belt tensioner counterclockwise and remove the bar.

SST 09249-63010


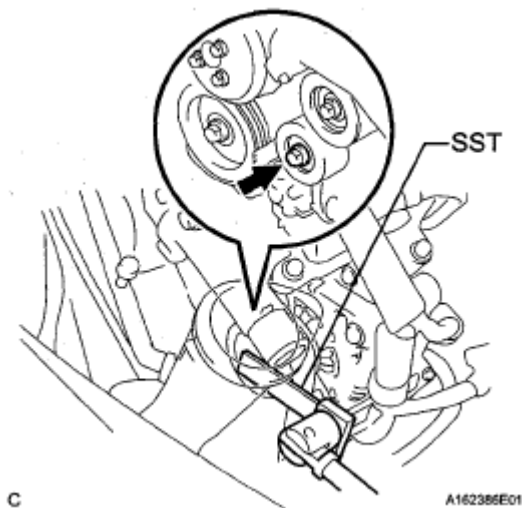


Fig. 10: Identifying SST 09249-63010

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. If it is difficult to install the V-ribbed belt, perform the following procedure:
 1. Put the V-ribbed belt on every pulley except the tensioner pulley as shown in the illustration.

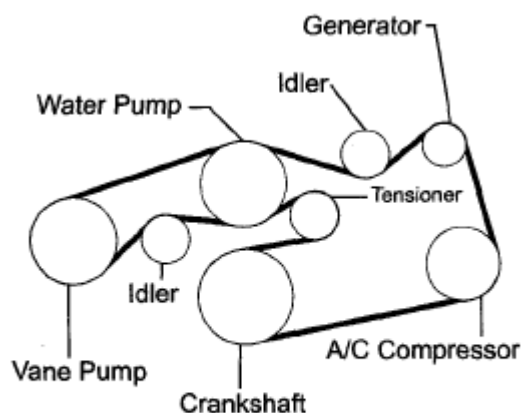

T

A120623E02

Fig. 11: Identifying Drive Belt Routing

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

2. While releasing the belt tension by turning the belt tensioner counterclockwise, put the V-ribbed belt on the tensioner pulley.

NOTE:

- Put the backside of the V-ribbed belt on the tensioner pulley and idler pulley.
- Check that the V-ribbed belt is properly set to each pulley.

3. After installing the V-ribbed belt, check that it fits properly in the ribbed grooves. Confirm that the belt has not slipped out of the grooves on the bottom of the crank pulley by hand.


2. **INSTALL FRONT FENDER APRON SEAL RH** (See **INSTALLATION**)

3. **INSTALL FRONT WHEEL RH**

Torque: 103 N*m (1050 kgf*cm, 76 ft.*lbf)

ENGINE FRONT OIL SEAL

COMPONENTS

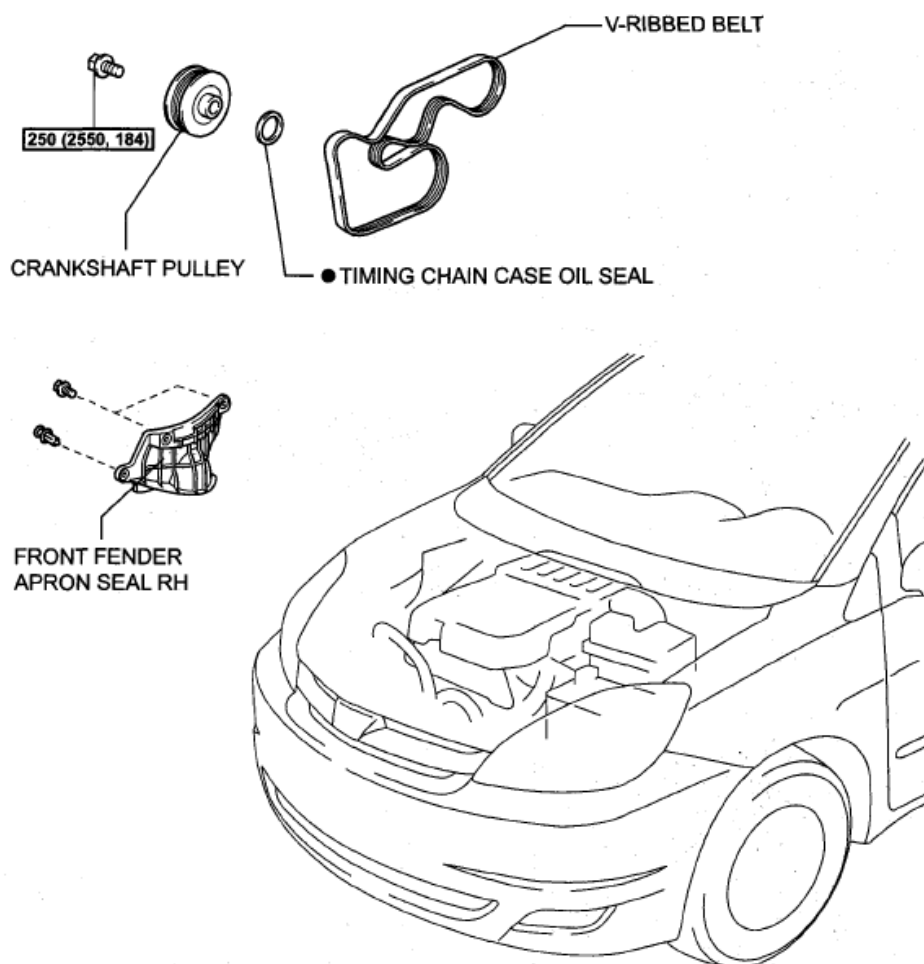

N*m (kgf*cm, ft.*lbf): Specified torque

● Non-reusable part

N

A162377E01

Fig. 12: Identifying Engine Front Oil Seal Components With Torque Specifications
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

REMOVAL

1. REMOVE FRONT WHEEL RH
2. REMOVE FRONT FENDER APRON SEAL RH (See REMOVAL)
3. REMOVE V-RIBBED BELT (See REMOVAL)
4. REMOVE CRANKSHAFT PULLEY
 - a. Using SST, loosen the crankshaft pulley bolt.

SST 09213-70011 (09213-70020), 09330-00021

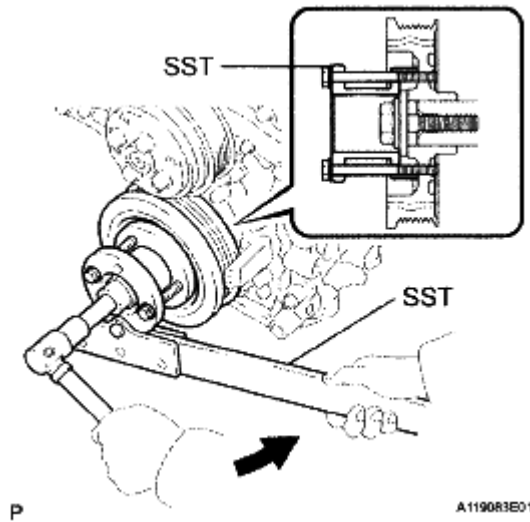


Fig. 13: Loosening Crankshaft Pulley Bolt Using SST
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Using SST, remove the crankshaft pulley bolt and crankshaft pulley.

SST 09950-50013 (09951 -05010, 09952-05010, 09953-05020, 09954-05021)

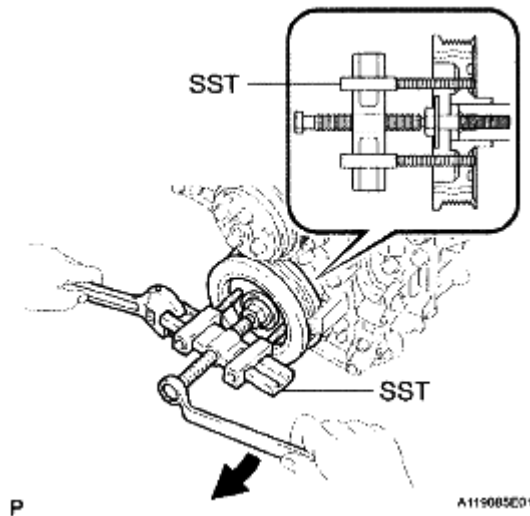


Fig. 14: Identifying Pulley Bolt & Pulley
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

5. REMOVE TIMING CHAIN CASE OIL SEAL

- a. Using a screwdriver, pry out the oil seal.

HINT:

Tape the screwdriver tip before use.

NOTE: After the removal, check the crankshaft for damage. If it is damaged, smooth the surface with 400-grit sandpaper.

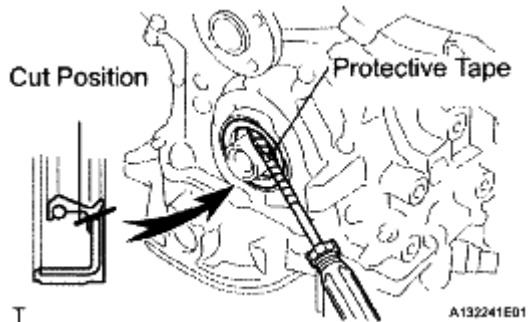


Fig. 15: Prying Out Oil Seal

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

INSTALLATION

1. INSTALL TIMING CHAIN CASE OIL SEAL

- Apply MP grease to a new oil seal lip.
- Using SST and a hammer, tap in the oil seal until its surface is flush with the timing chain cover edge.

SST 09223-22010,09506-35010

NOTE:

- Keep the lip free of foreign matter.
- Do not tap the oil seal at an angle.

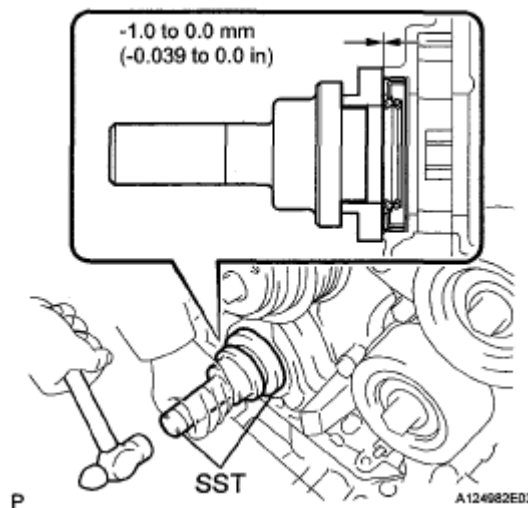


Fig. 16: Taping Oil Seal

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

2. INSTALL CRANKSHAFT PULLEY

- a. Align the pulley set key with the key groove of the pulley, and slide on the pulley.
- b. Using SST, install the pulley bolt.

SST 09213-70011 (09213-70020), 09330-00021

Torque: 250 N*m (2550 kgf*cm, 184 ft.*lbf)

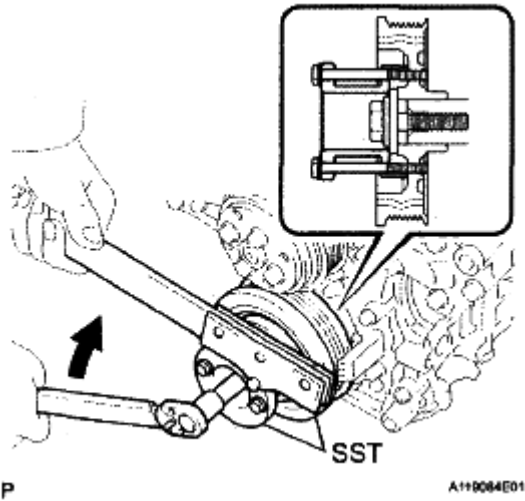



Fig. 17: Installing Crankshaft Pulley Bolt

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

3. **INSTALL V-RIBBED BELT** (See INSTALLATION)
4. **INSTALL FRONT FENDER APRON SEAL RH** (See INSTALLATION)
5. **INSTALL FRONT WHEEL RH**

Torque: 103 N*m (1050 kgf*cm, 76 ft.*lbf)

ENGINE REAR OIL SEAL**COMPONENTS**

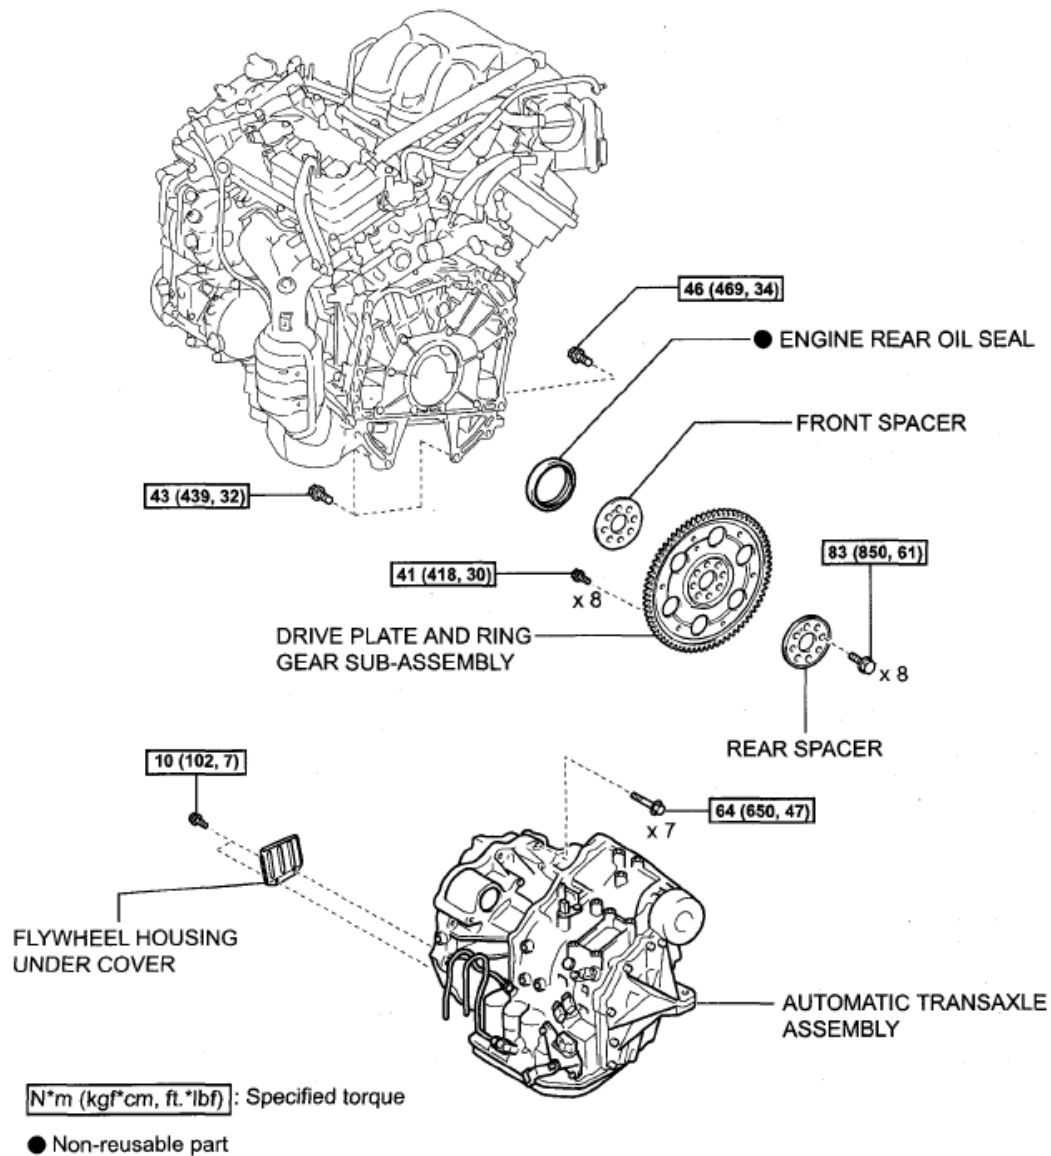

A166809E01

Fig. 18: Identifying Engine Rear Oil Seal Components With Torque Specifications
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

REMOVAL

1. REMOVE AUTOMATIC TRANSAXLE ASSEMBLY (for 2WD)

HINT:

See **REMOVAL** .

2. REMOVE AUTOMATIC TRANSAXLE ASSEMBLY (for 4WD)

HINT:

See **REMOVAL** .

3. REMOVE DRIVE PLATE AND RING GEAR SUB-ASSEMBLY

- a. Using SST, hold the crankshaft.

SST 09213-70011 (09213-70020), 09330-00021

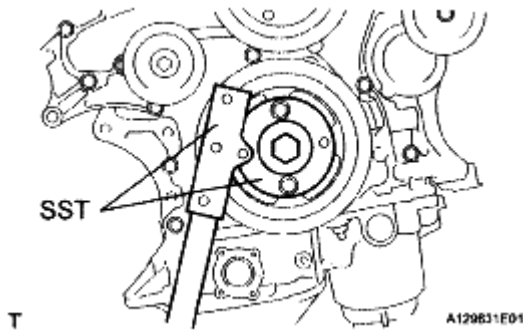


Fig. 19: Holding Crankshaft Using SST

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Remove the 8 bolts, front spacer, drive plate and rear spacer.

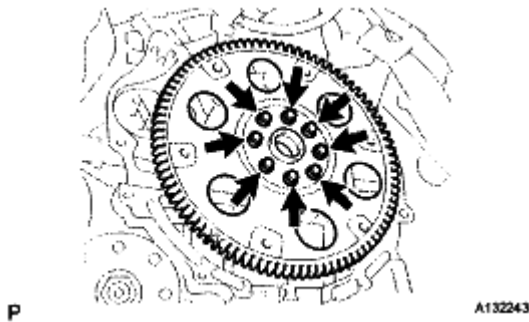


Fig. 20: Removing Bolts, Front Spacer, Drive Plate And Rear Spacer

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

4. REMOVE ENGINE REAR OIL SEAL

- a. Using a knife, cut off the oil seal lip.
- b. Using a screwdriver, pry out the oil seal.

NOTE: Be careful not to damage the crankshaft. Tape the screwdriver tip before use.

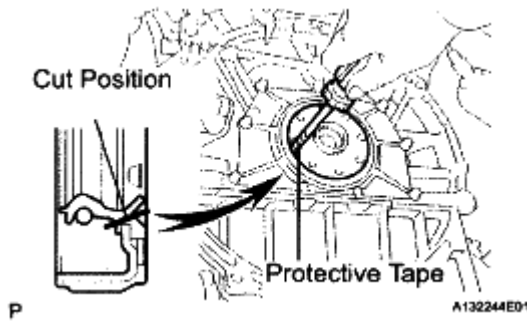


Fig. 21: Prying Out Oil Seal

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

INSTALLATION

1. INSTALL ENGINE REAR OIL SEAL

- Apply MP grease to a new oil seal lip.
- Using SST and a hammer, tap in the oil seal.

SST 09223-15030, 09950-70010 (09951 -07150)

Oil seal tap in depth: -0.5 to 0.5 mm (-0.020 to 0.020 in.)

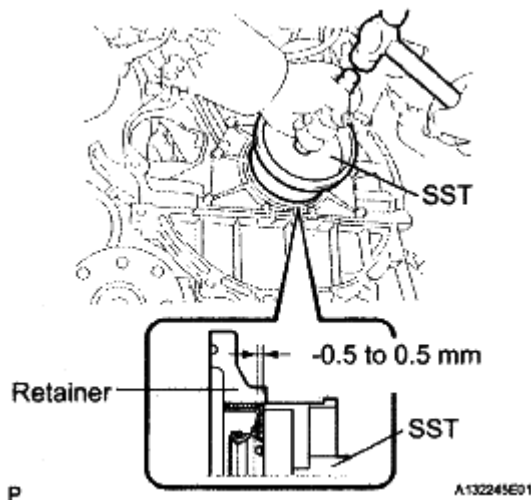


Fig. 22: Tapping In Oil Seal

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

2. INSTALL DRIVE PLATE AND RING GEAR SUB-ASSEMBLY

- Using SST, hold the crankshaft.

SST 09213-70011 (09213-70020), 09330-00021

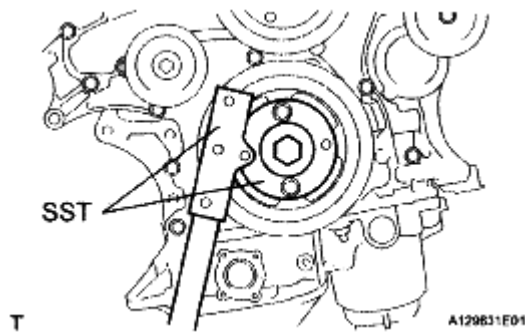


Fig. 23: Holding Crankshaft Using SST
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Apply adhesive to 2 or 3 threads of the mounting bolt end.

Adhesive: Part No. 08833-00070, THREE BOND 1324 or equivalent

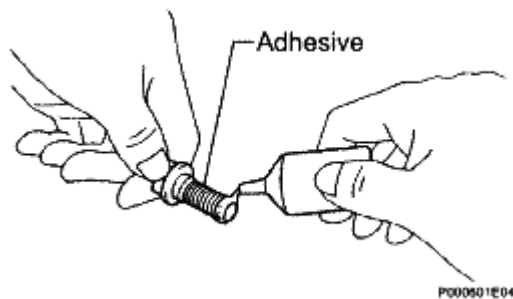


Fig. 24: Applying Adhesive To 2 Or 3 Threads Of Mounting Bolt End
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

1. Install the front spacer, drive plate and rear spacer on the crankshaft.
2. Install and tighten the 8 mounting bolts uniformly in several steps.

Torque: 83 N*m (850 kgf*cm, 61 ft.*lbf)

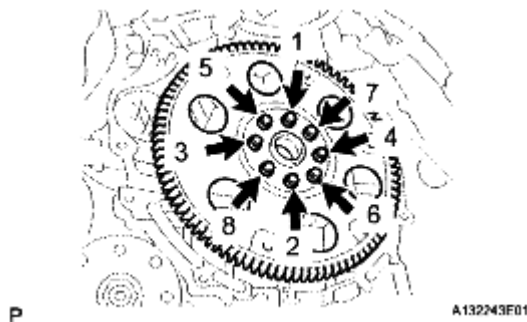


Fig. 25: Locating Mounting Bolts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

3. INSTALL AUTOMATIC TRANSAXLE ASSEMBLY (for 2WD)

HINT:

See **REMOVAL** .


4. INSTALL AUTOMATIC TRANSAXLE ASSEMBLY (for 4WD)

HINT:

See **INSTALLATION** .

ENGINE ASSEMBLY

COMPONENTS

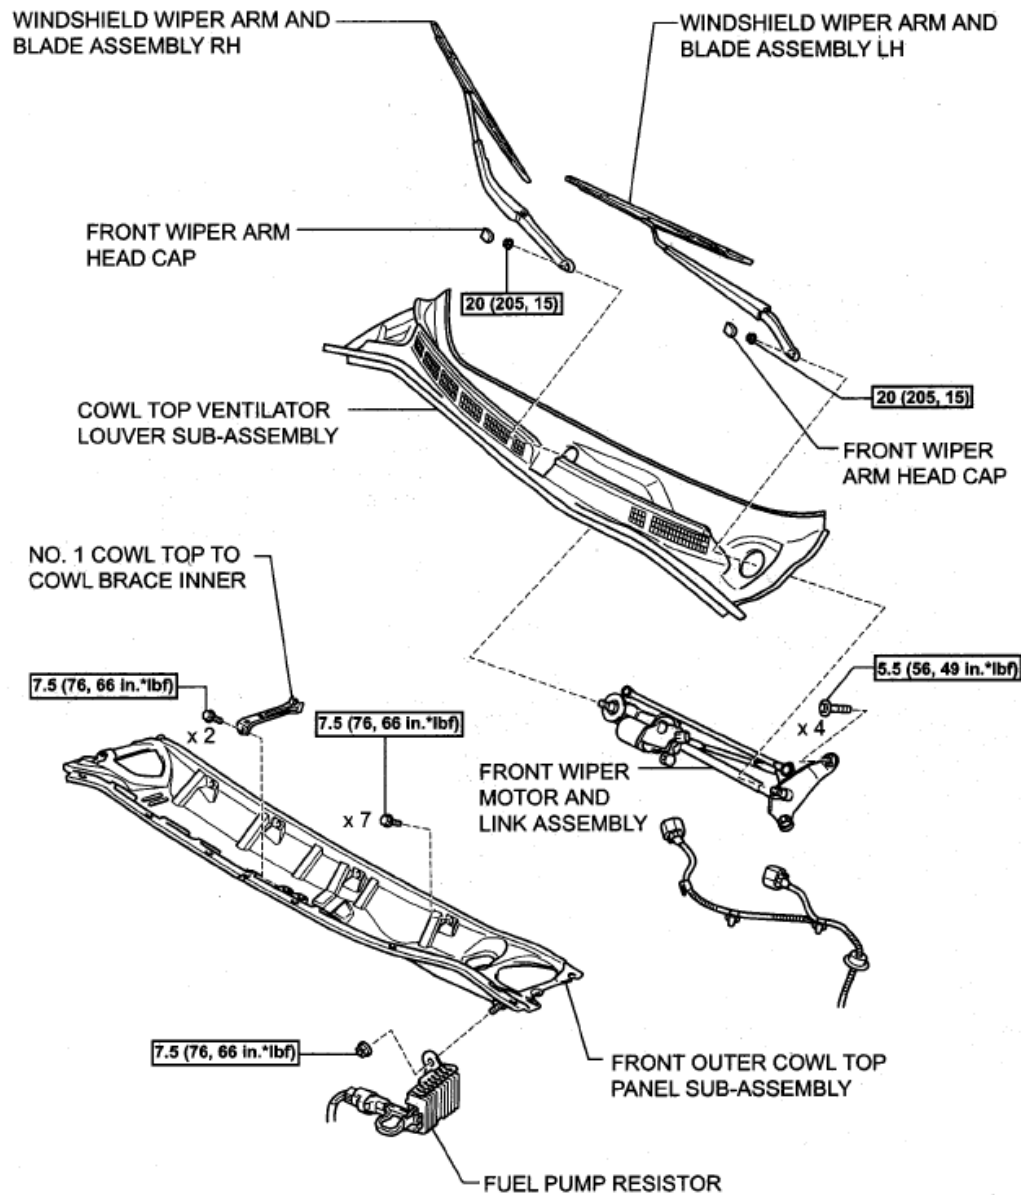


[N*m (kgf*cm, ft.*lbf)]: Specified torque

N

A162385E01


Fig. 26: Identifying Engine Assembly Replacement Components With Torque Specifications (1 Of 12)
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

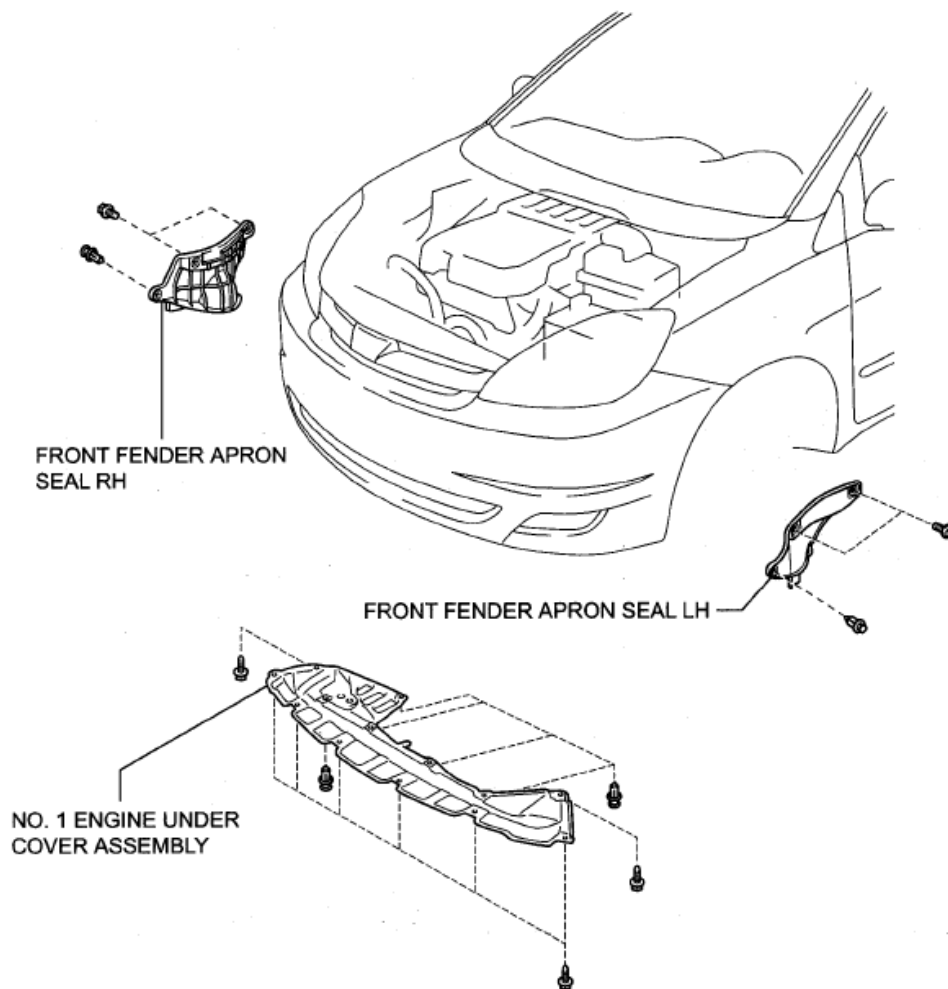

N

A162378E01

Fig. 27: Identifying Engine Assembly Replacement Components (2 Of 12)
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

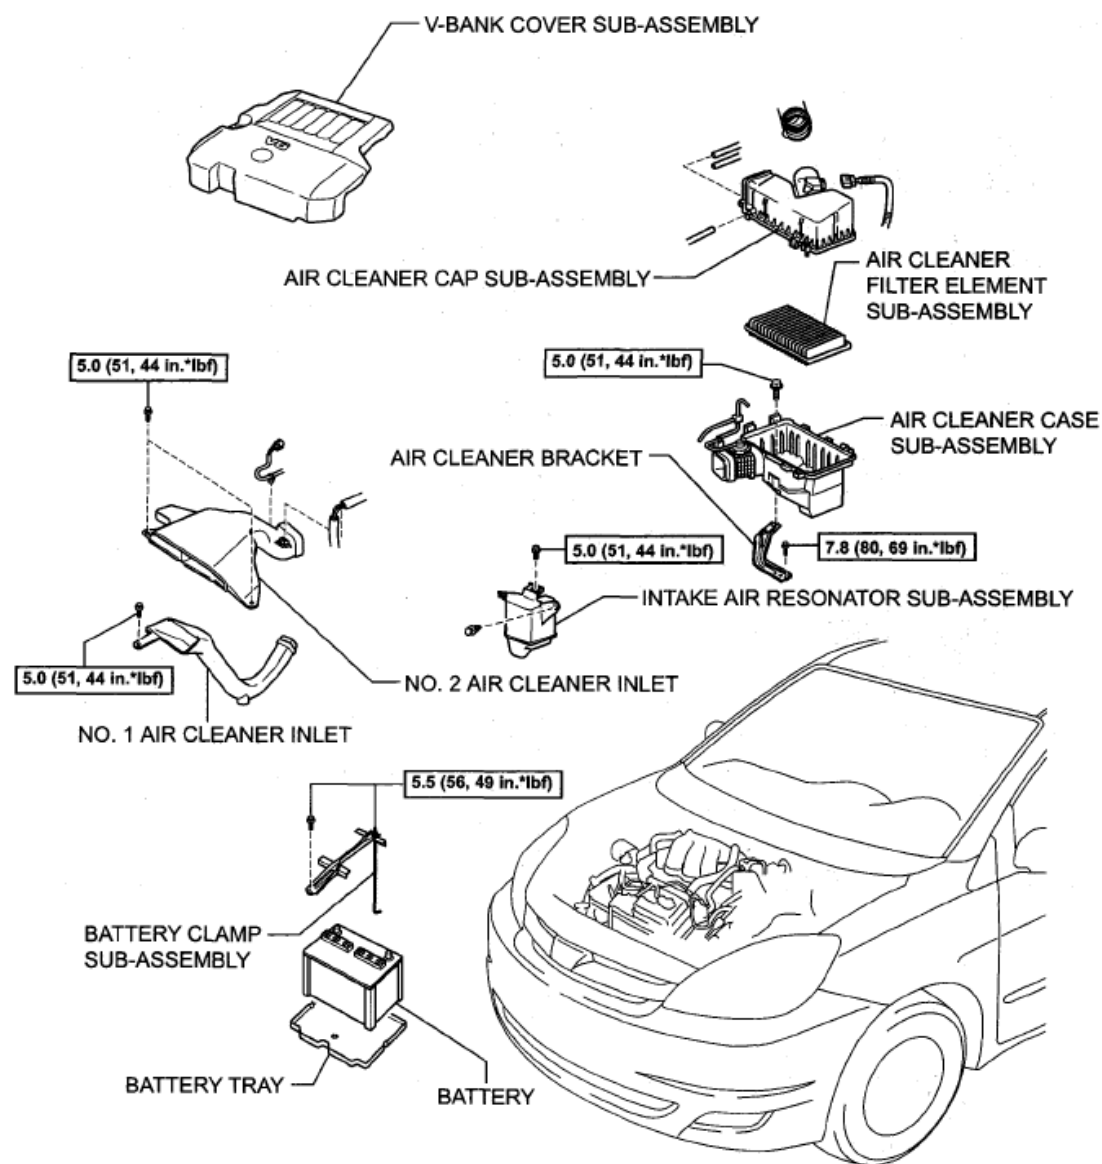

N*m (kgf*cm, ft.*lbf) : Specified torque

N

A162379E01

Fig. 28: Identifying Engine Assembly Replacement Components With Torque Specifications (3 Of 12)
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

2009 Toyota Sienna LE

2009 ENGINE Engine Mechanical - Sienna


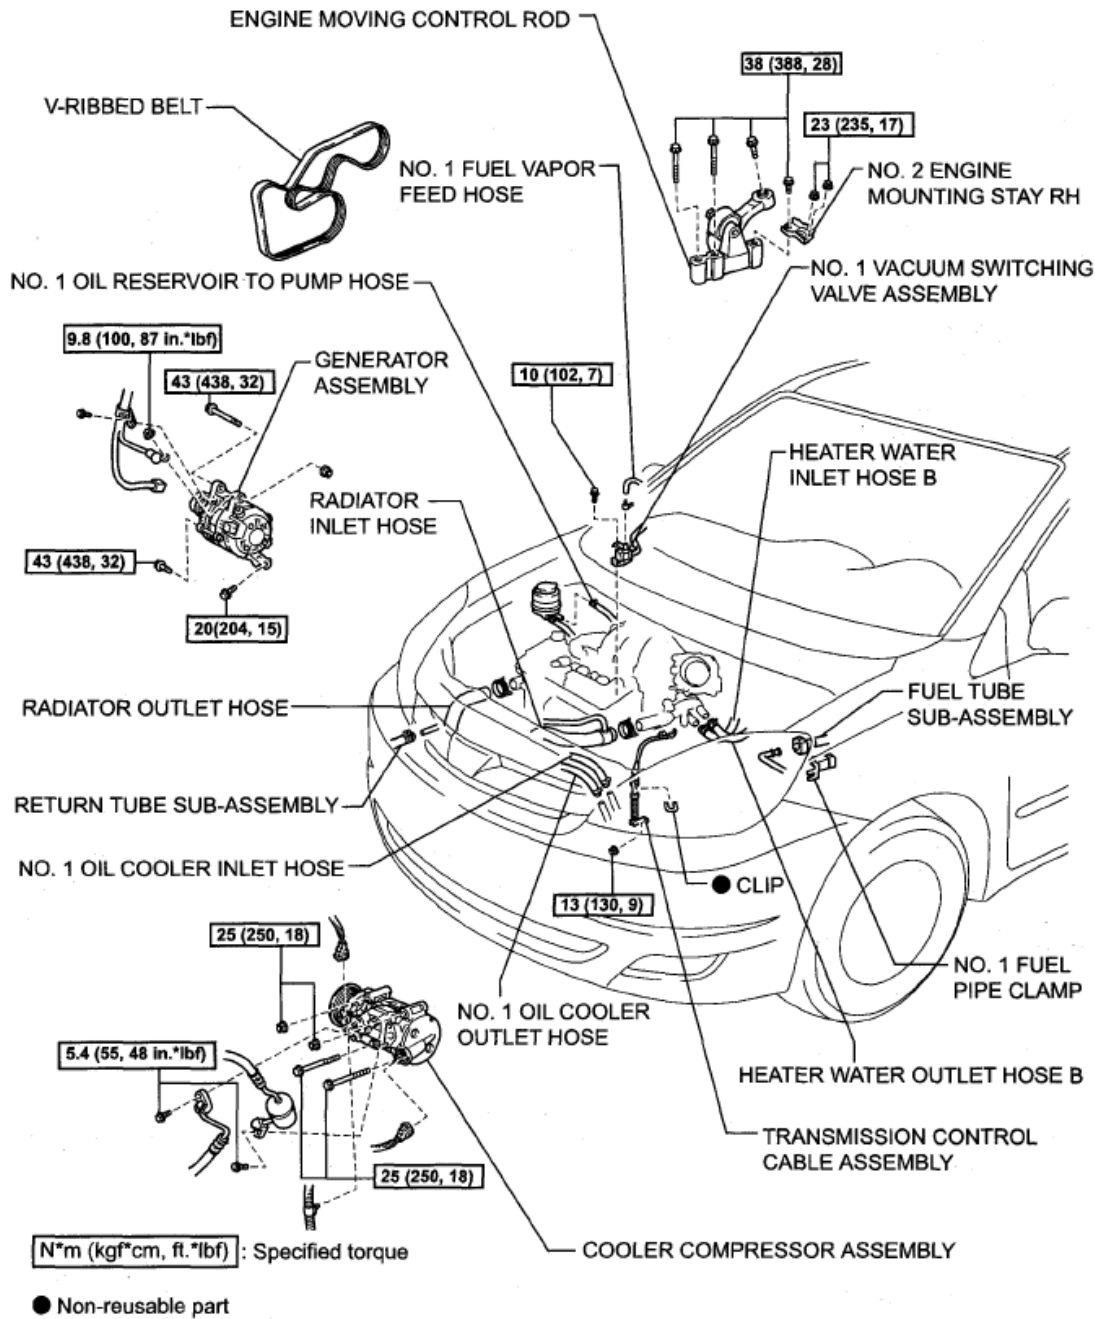


Fig. 29: Identifying Engine Assembly Replacement Components With Torque Specifications (4 Of 12)
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


for 2WD:

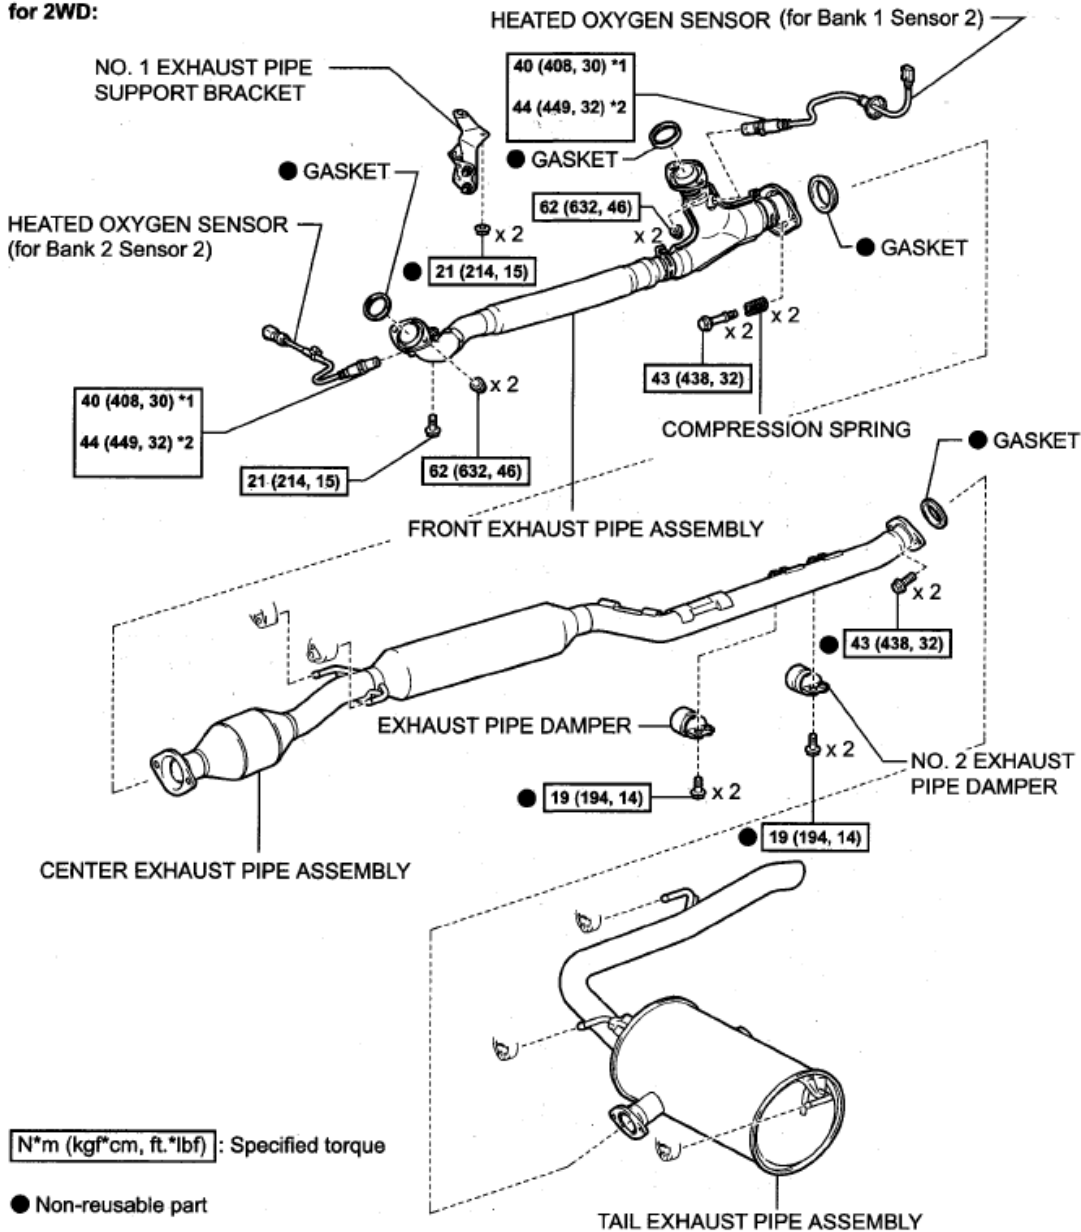

A162480E04

Fig. 30: Identifying Engine Assembly Replacement Components With Torque Specifications (5 Of 12)
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

for 4WD:

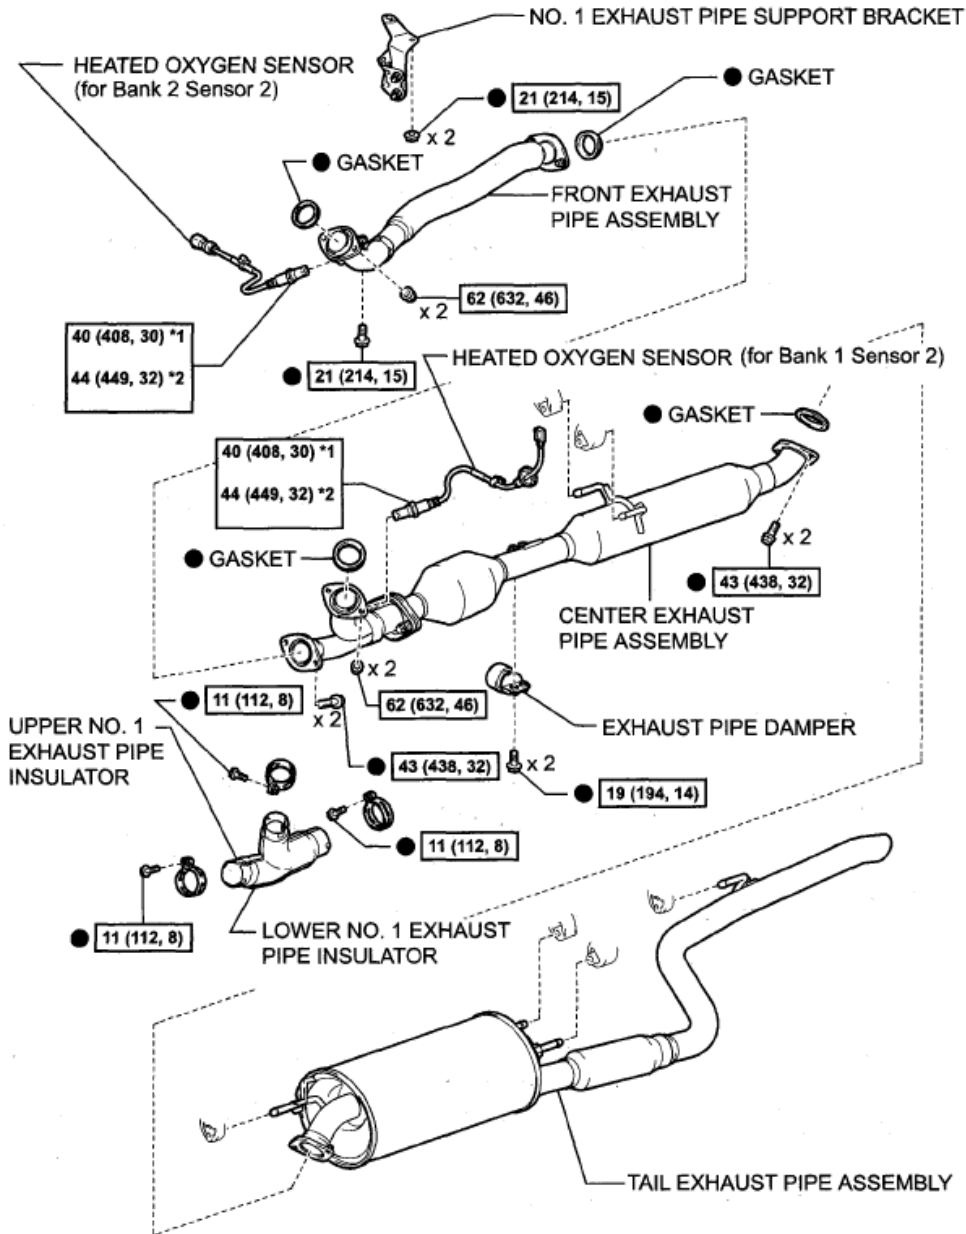


N*m (kgf*cm, ft.*lbf) : Specified torque ● Non-reusable part *1: For use with SST *2: For use without SST

P

A162160E06

Fig. 31: Identifying Engine Assembly Replacement Components With Torque Specifications (6 Of 12)
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

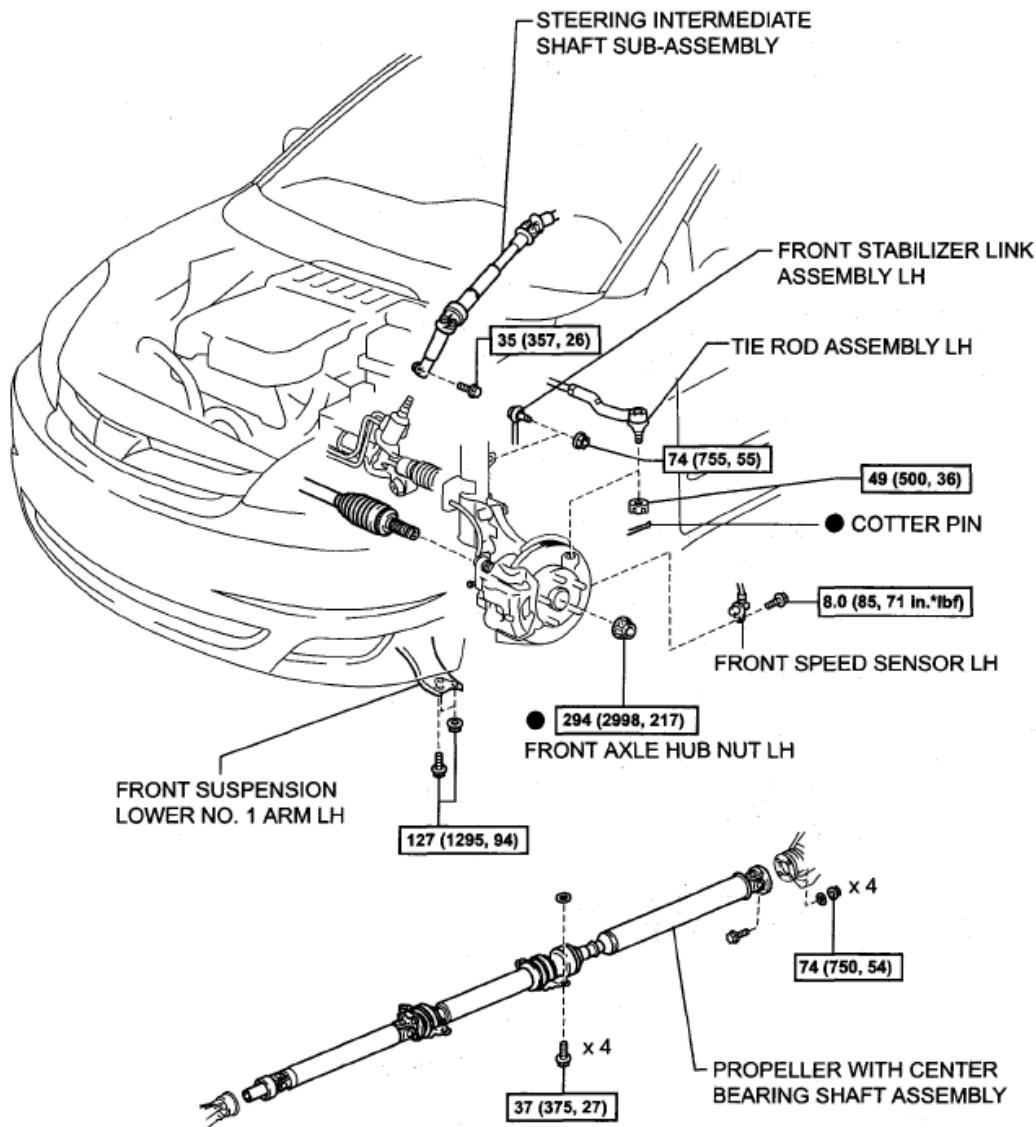


N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part

N

A162381E01


Fig. 32: Identifying Engine Assembly Replacement Components With Torque Specifications (7 Of 12)
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

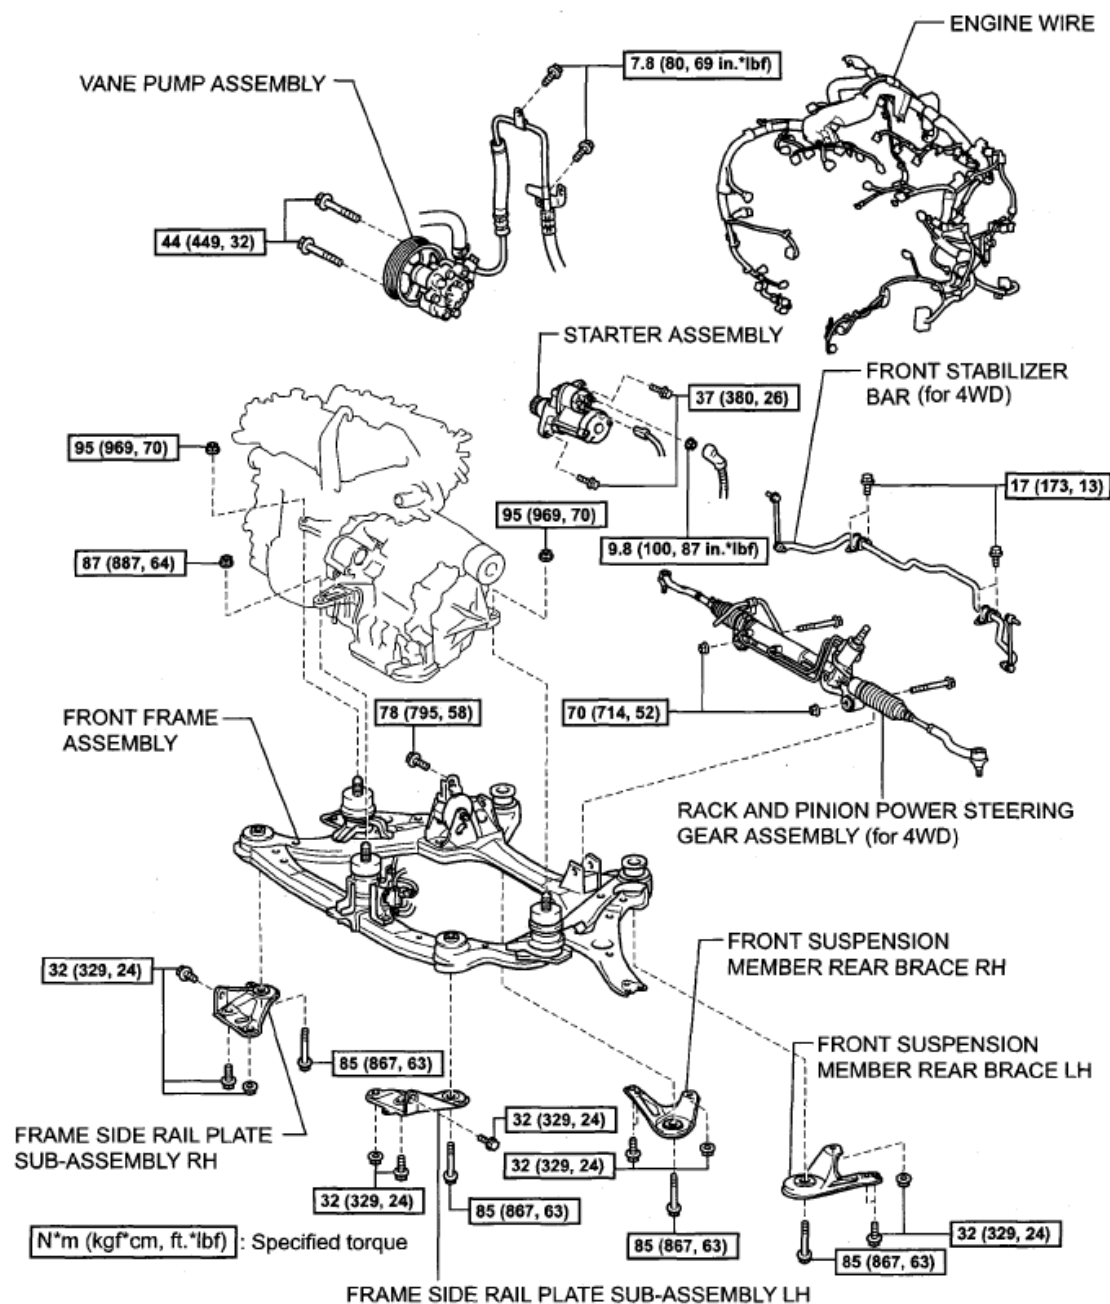

N

A162383E01


Fig. 33: Identifying Engine Assembly Replacement Components With Torque Specifications (8 Of 12)
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

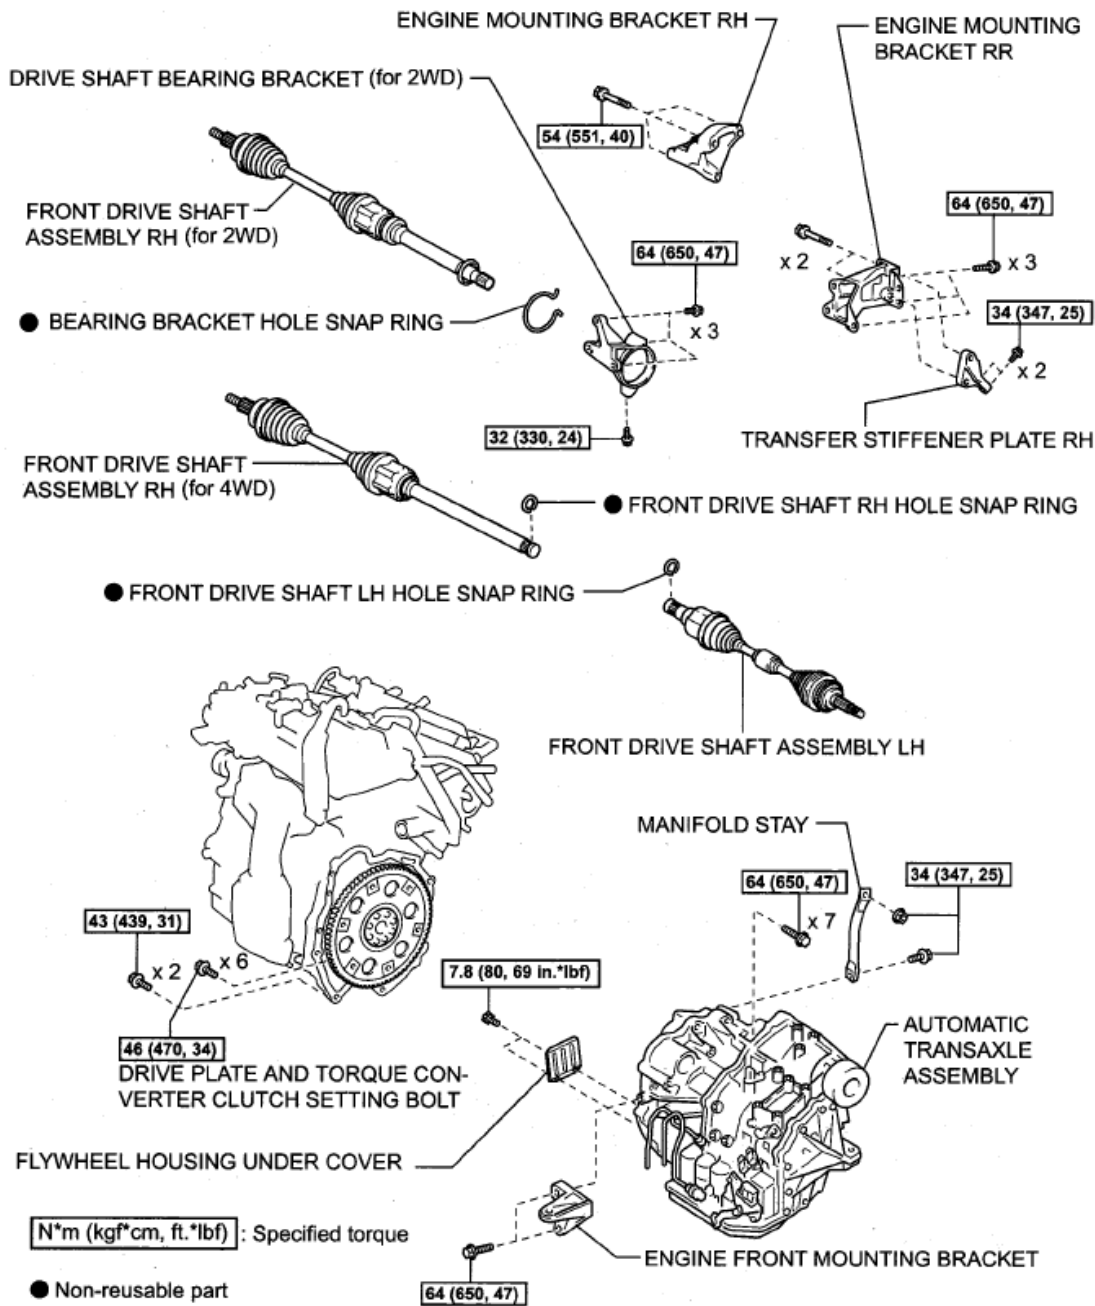

N

A162382E01

Fig. 34: Identifying Engine Assembly Replacement Components With Torque Specifications (9 Of 12)
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

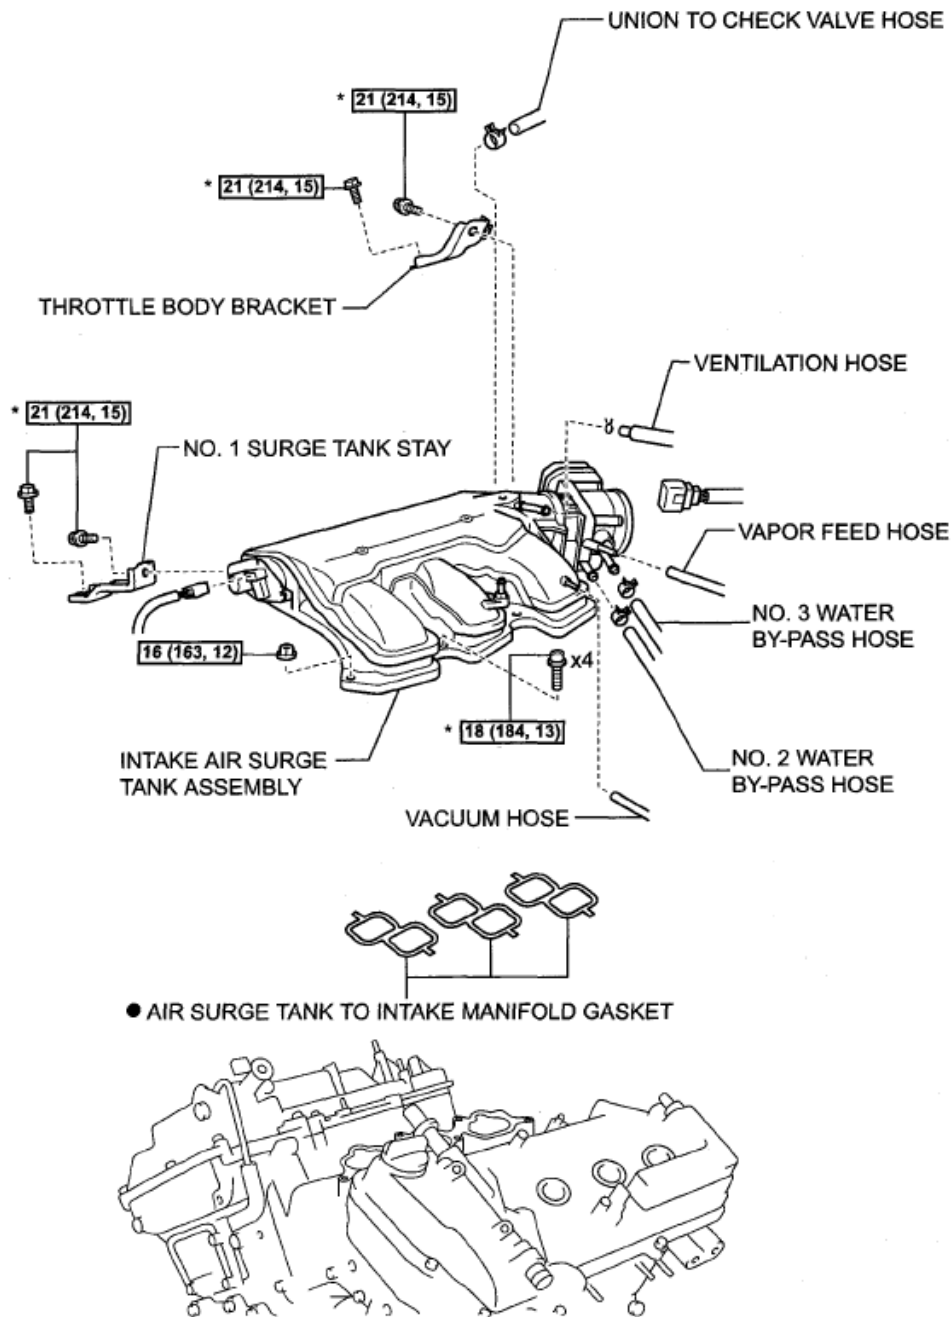


N*m (kgf*cm, ft.*lbf): Specified torque

● Non-reusable part

* DO NOT apply oil

A139213E02

Fig. 35: Identifying Engine Assembly Replacement Components With Torque Specifications (10 Of 12)
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

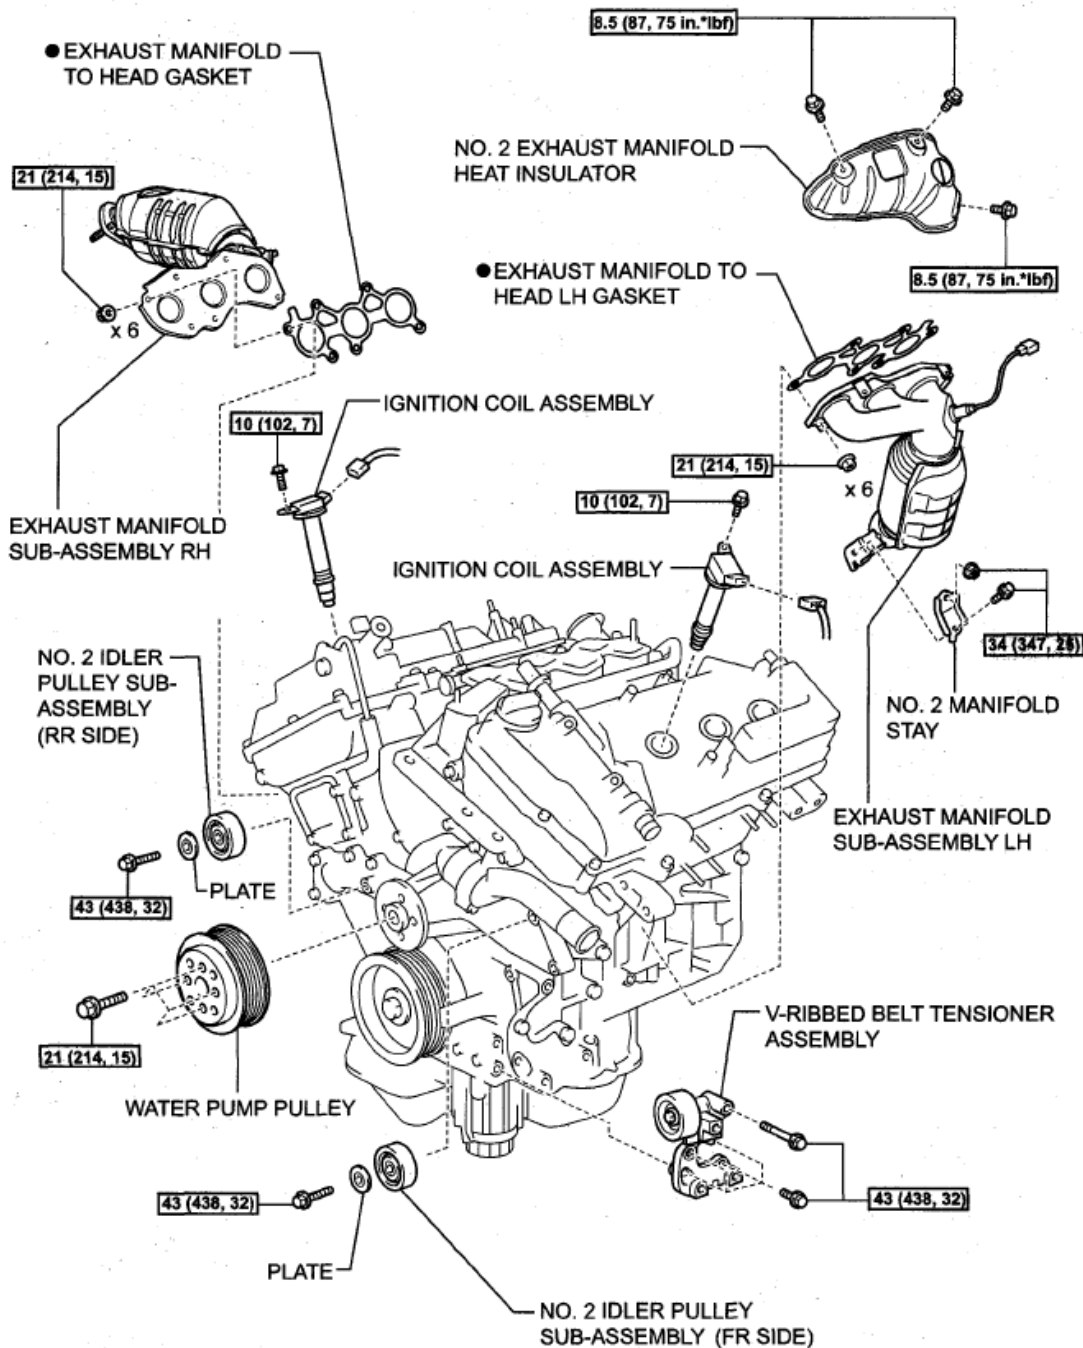


N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part

A139199E02

Fig. 36: Identifying Engine Assembly Replacement Components With Torque Specifications (11 Of 12)
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

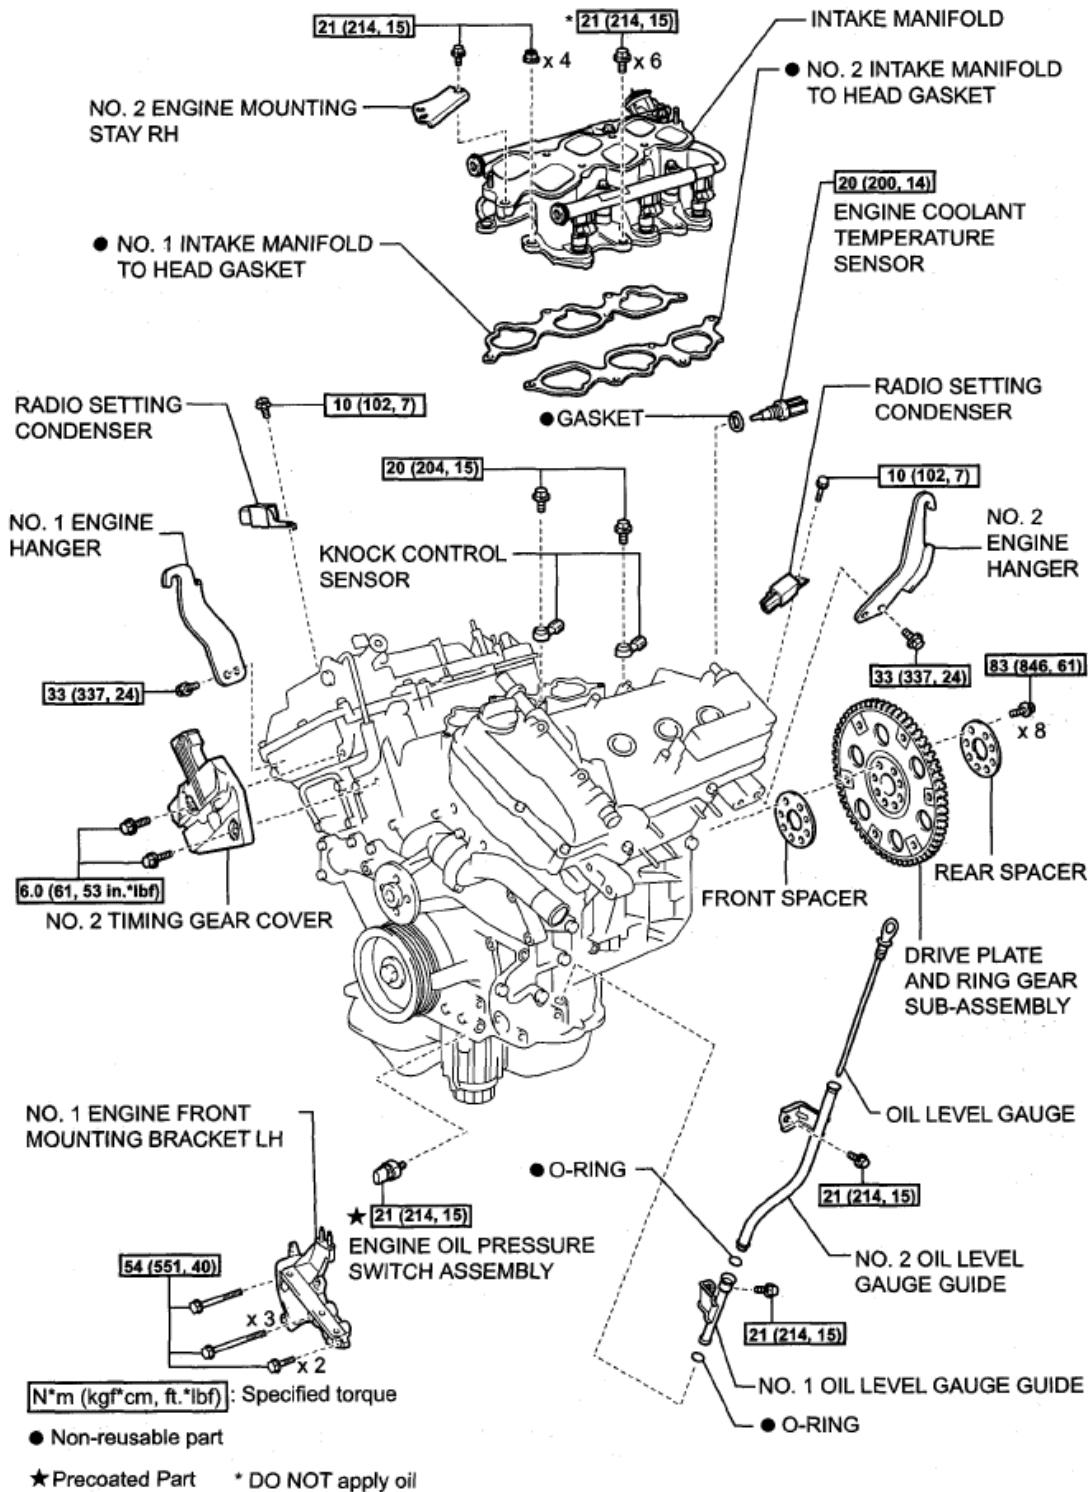

A163262E01

Fig. 37: Identifying Engine Assembly Replacement Components With Torque Specifications (12 Of 12)
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

REMOVAL

1. **DISCHARGE FUEL SYSTEM PRESSURE** (See REMOVAL)
2. **DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM** (See REPLACEMENT)
3. **REMOVE BATTERY**
 - a. Disconnect the negative battery terminal.
 - b. Disconnect the positive battery terminal.
 - c. Loosen the nut, and remove the bolt and battery clamp.
 - d. Remove the battery and battery tray.

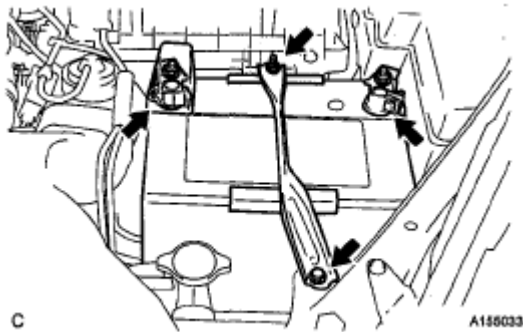


Fig. 38: Locating Bolts On Battery And Battery Tray
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

4. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**
5. **REMOVE FRONT WHEELS**
6. **REMOVE NO. 1 ENGINE UNDER COVER ASSEMBLY**
 - a. Remove the 8 bolts, 4 clips and No. 1 engine under cover assembly.

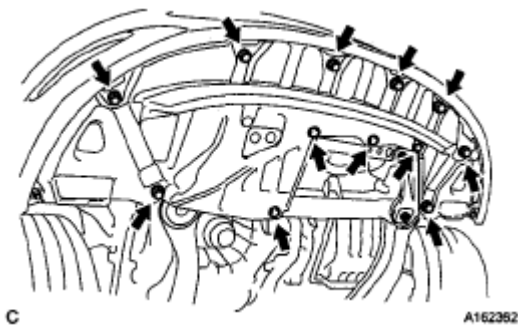


Fig. 39: Locating No. 1 Engine Under Cover Assembly Bolts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

7. **REMOVE FRONT FENDER APRON SEAL RH**
 - a. Remove the 2 bolts, clip and front fender apron seal RH.

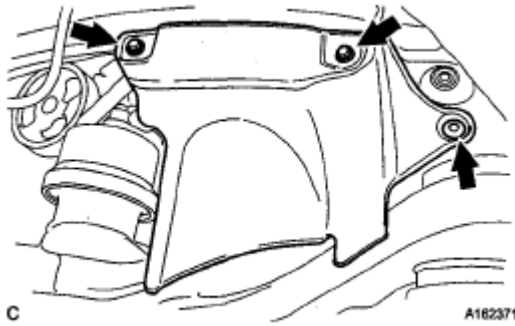


Fig. 40: Locating Bolts And Clip For Front Fender Apron Seal RH
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

8. REMOVE FRONT FENDER APRON SEAL LH

- a. Remove the 2 bolts, clip and front fender apron seal LH.

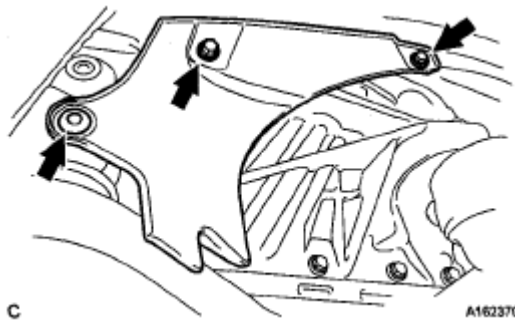


Fig. 41: Locating Bolts And Clip For Front Fender Apron Seal LH
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

9. **DRAIN ENGINE OIL** (See REPLACEMENT)
10. **DRAIN ENGINE COOLANT** (See REPLACEMENT)
11. **DRAIN AUTOMATIC TRANSAXLE FLUID** (See REMOVAL)
12. **REMOVE FRONT WIPER ARM HEAD CAP** (See REMOVAL)
13. **REMOVE WINDSHIELD WIPER ARM AND BLADE ASSEMBLY RH** (See REMOVAL)
14. **REMOVE WINDSHIELD WIPER ARM AND BLADE ASSEMBLY LH** (See REMOVAL)
15. **REMOVE COWL TOP VENTILATOR LOUVER SUB-ASSEMBLY** (See REMOVAL)
16. **REMOVE FRONT WIPER MOTOR AND LINK ASSEMBLY** (See REMOVAL)
17. **REMOVE NO. 1 COWL TOP TO COWL BRACE INNER**
 - a. Remove the 2 bolts, 2 clips and No. 1 cowl top to cowl brace inner.

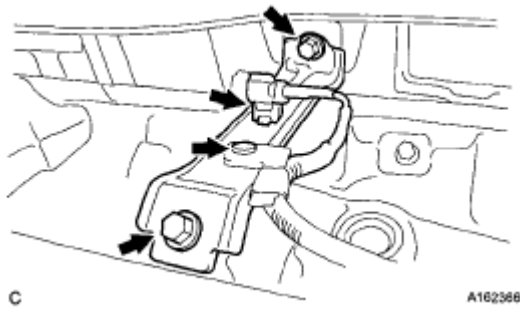


Fig. 42: Locating No. 1 Cowl Top To Cowl Brace Inner Bolts And Clips
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

18. REMOVE FRONT OUTER COWL TOP PANEL SUB-ASSEMBLY

- a. Remove the nut, and separate the fuel pump resistor.

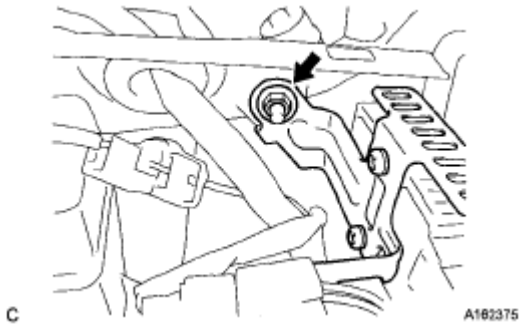


Fig. 43: Locating Nut On Fuel Pump Resistor
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Remove the 2 clips, and separate the engine wire.

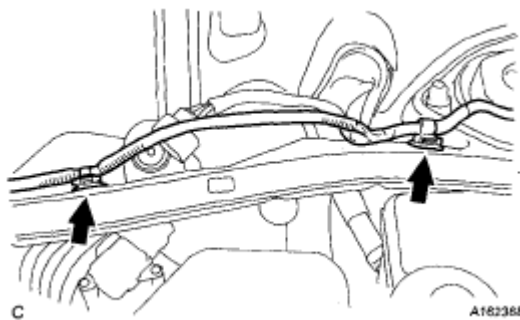


Fig. 44: Locating Clips For Engine Wire
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Remove the 7 bolts and front outer cowl top panel sub-assembly.

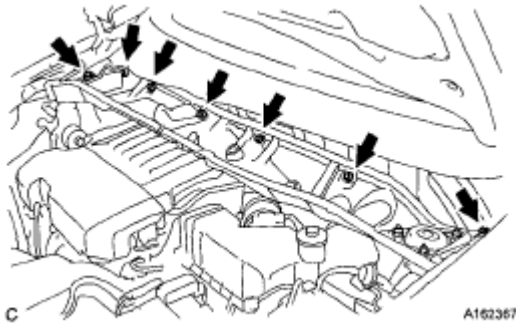


Fig. 45: Locating Bolts On Front Outer Cowl Top Panel Sub-Assembly
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

19. REMOVE V-BANK COVER SUB-ASSEMBLY

- a. Hold the front of the V-bank cover and raise it to disengage the 2 clips on the front of the cover. Continue to raise the cover to disengage the clip on the rear of the cover and remove the cover.

NOTE: Attempting to disengage both front and rear clips at the same time may cause the cover to break.

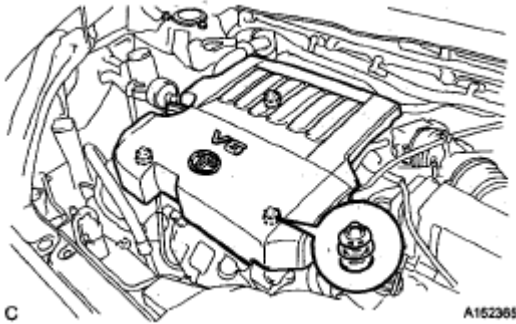


Fig. 46: Identifying Clip On Rear Of Cover
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

20. REMOVE NO. 2 AIR CLEANER INLET

- a. Disconnect the vacuum switching valve clamp.
- b. Disconnect the 2 vacuum hoses.
- c. Remove the 2 bolts and No. 2 air cleaner inlet.

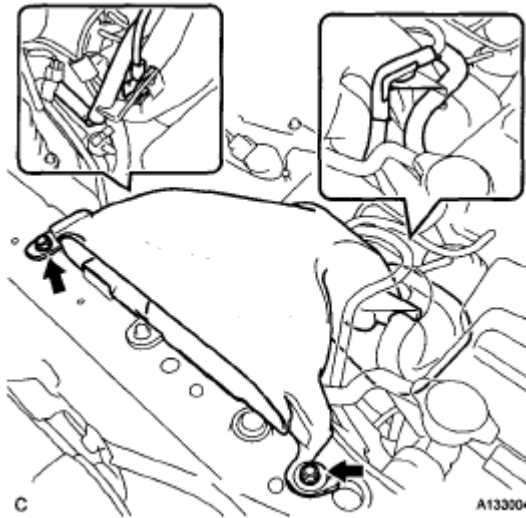


Fig. 47: Locating Bolts On No. 2 Air Cleaner Inlet
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

21. REMOVE NO. 1 AIR CLEANER INLET

- a. Remove the bolt and No. 1 air cleaner inlet.

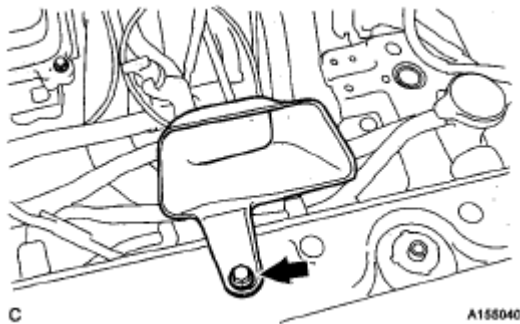


Fig. 48: Locating Bolt On No. 1 Air Cleaner Inlet
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

22. REMOVE AIR CLEANER CAP SUB-ASSEMBLY (See REMOVAL)

23. REMOVE AIR CLEANER FILTER ELEMENT SUB-ASSEMBLY

- a. Remove the air cleaner filter element sub-assembly.

24. REMOVE AIR CLEANER CASE SUB-ASSEMBLY

- a. Disconnect the vacuum switching valve connector.
- b. Disconnect the vacuum hose.
- c. Remove the 3 bolts and air cleaner case.

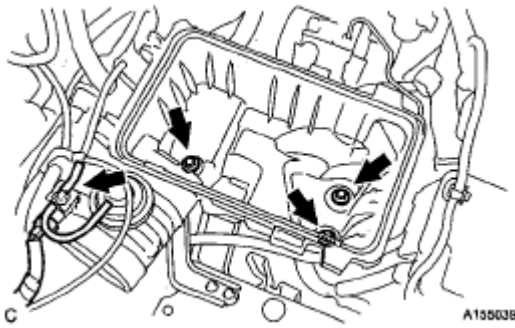


Fig. 49: Locating Bolts On Air Cleaner Case
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

25. REMOVE AIR CLEANER BRACKET

- a. Remove the 2 bolts and air cleaner bracket.

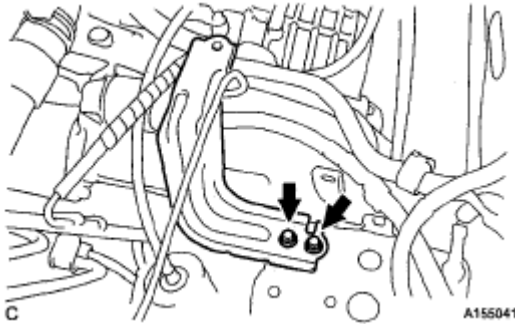


Fig. 50: Locating Bolts For Air Cleaner Bracket
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

26. REMOVE INTAKE AIR RESONATOR SUB-ASSEMBLY

- a. Remove the clip, bolt and intake air resonator.

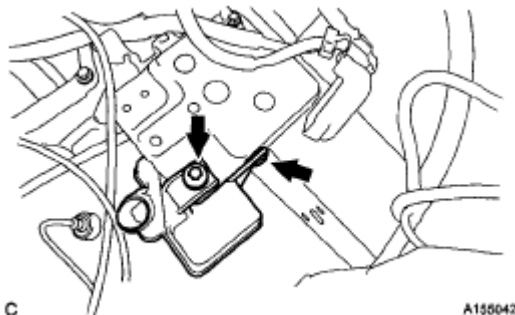


Fig. 51: Locating Clip And Bolt On Intake Air Resonator
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

27. REMOVE NO. 2 ENGINE MOUNTING STAY RH

- a. Remove bolt, 2 nuts and No. 2 engine mounting stay RH.

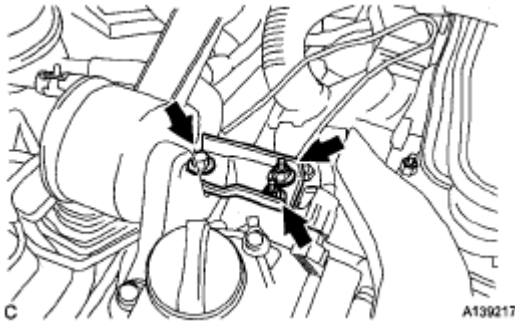


Fig. 52: Locating Nuts On No. 2 Engine Mounting Stay RH
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

28. REMOVE ENGINE MOVING CONTROL ROD

- a. Remove the 3 bolts and engine moving control rod.

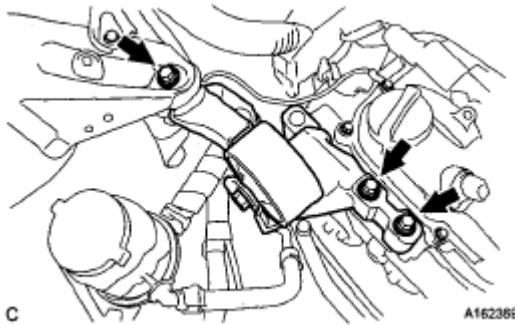


Fig. 53: Locating Bolts On Engine Moving Control Rod
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

29. DISCONNECT NO. 1 FUEL VAPOR FEED HOSE

- a. Remove the clamp and disconnect the No. 1 fuel vapor feed hose.



Fig. 54: Locating No. 1 Fuel Vapor Feed Hose Clamp
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

30. DISCONNECT RADIATOR INLET HOSE

- a. Using pliers, grip the claws of the clip and slide the clip to disconnect radiator inlet hose from the

water outlet.

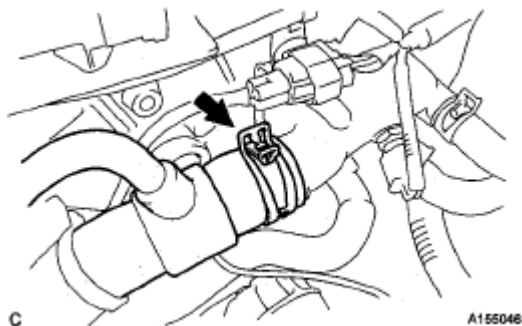


Fig. 55: Locating Radiator Inlet Hose Clip

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

31. DISCONNECT RADIATOR OUTLET HOSE

- a. Using pliers, grip the claws of the clip and slide the clip to disconnect the radiator outlet hose from the water inlet.

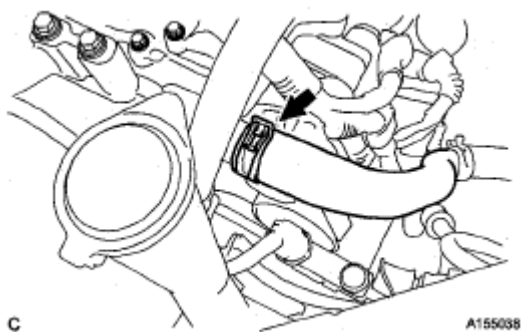


Fig. 56: Locating Radiator Outlet Hose Clip

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

32. DISCONNECT HEATER WATER OUTLET HOSE B

- a. Using pliers, grip the claws of the clip and slide the clip to disconnect heater water inlet hose B from the water inlet.

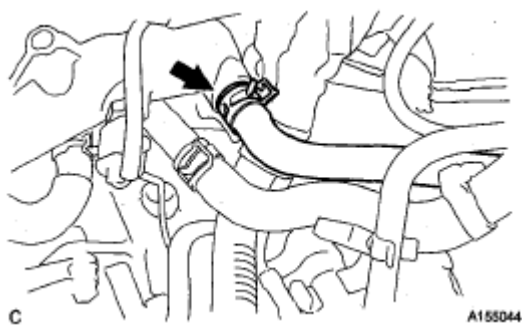


Fig. 57: Locating Heater Water Outlet Hose Clip

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

33. DISCONNECT HEATER WATER INLET HOSE B

- a. Using pliers, grip the claws of the clip and slide the clip to disconnect heater water outlet hose B from the water outlet.

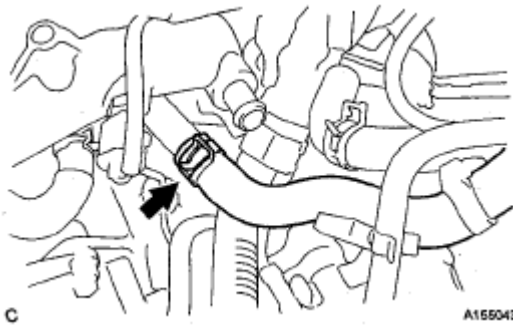


Fig. 58: Locating Heater Water Inlet Hose Clip

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

34. DISCONNECT FUEL TUBE SUB-ASSEMBLY

- a. Remove the No. 1 fuel pipe clamp.

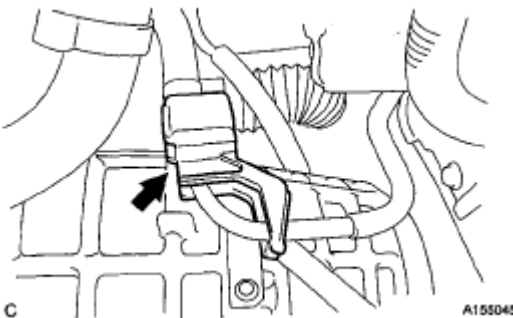


Fig. 59: Locating No. 1 Fuel Pipe Clamp

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Disconnect the fuel tube from the fuel pipe while pinching part A with your fingers as shown in the illustration.

NOTE:

- Check for contamination in the pipe and around the connector. Clean if necessary and then disconnect the connector.
- Disconnect the connector by hand.
- Do not bend, fold or rotate the nylon tube.
- If the pipe and connector are stuck together, push and pull the connector until it becomes free.
- Put the pipe and connector ends in vinyl bags to prevent

damage and contamination.

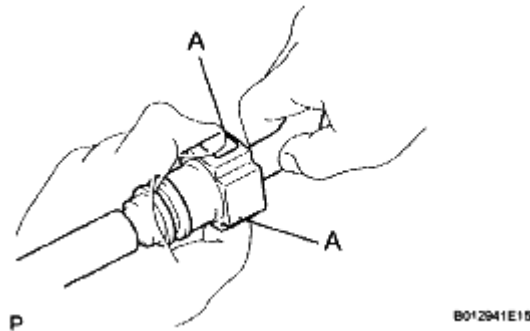


Fig. 60: Identifying Connector & Tube
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

35. DISCONNECT NO. 1 OIL COOLER INLET HOSE

- a. Using pliers, grip the claws of the clip and slide the clip to disconnect the No. 1 oil cooler inlet hose from the No. 1 oil cooler inlet tube.

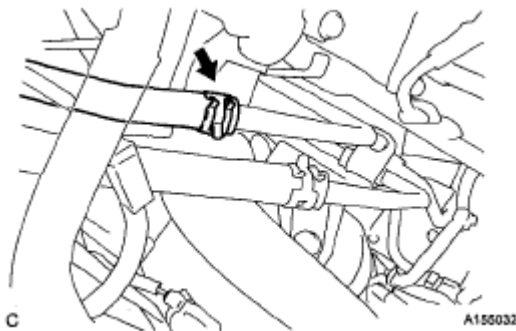


Fig. 61: Locating No. 1 Oil Cooler Inlet Hose Clip
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

36. REMOVE NO. 1 OIL COOLER OUTLET HOSE

- a. Using pliers, grip the claws of the clip and slide the clip to disconnect the No. 1 oil cooler outlet hose from the No. 1 oil cooler outlet tube.

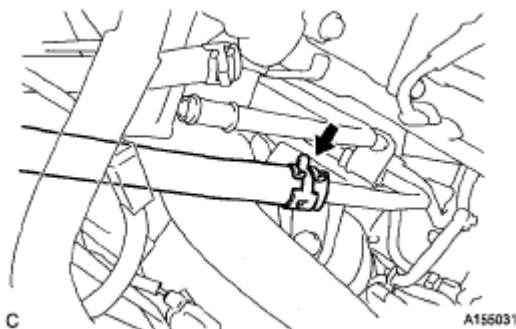


Fig. 62: Locating No. 1 Oil Cooler Outlet Hose Clip
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

37. DISCONNECT TRANSMISSION CONTROL CABLE ASSEMBLY

- a. Remove the nut from the control shaft lever.
- b. Disconnect the transmission control cable assembly from the control shaft lever.

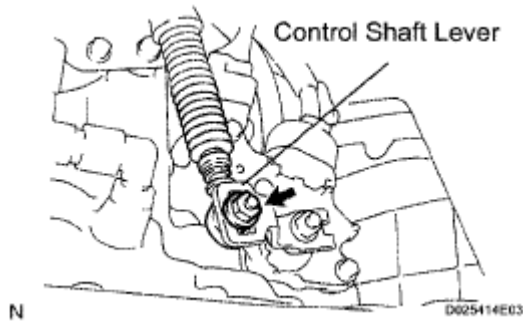


Fig. 63: Locating Nut And Control Shaft Lever
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Remove the clip and disconnect the transmission control cable assembly from the control cable bracket.

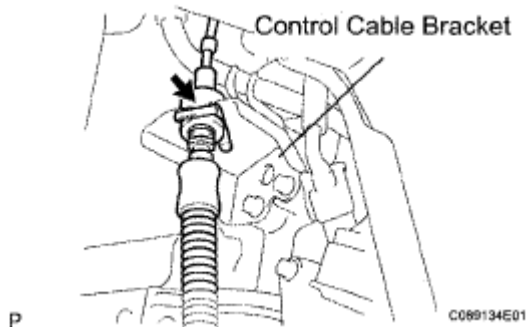


Fig. 64: Locating Transmission Control Cable Assembly Clip
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Disconnect the control cable from the control cable clamp.

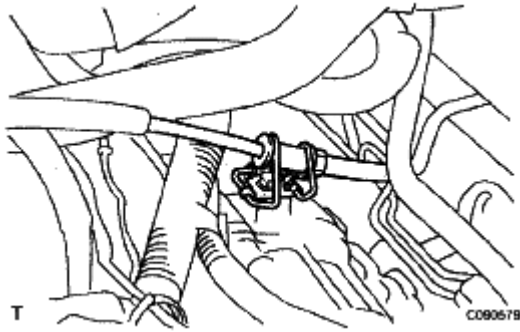


Fig. 65: Identifying Control Cable And Control Cable Clamp
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

38. DISCONNECT RETURN TUBE SUB-ASSEMBLY

- a. Using pliers, grip the claws of the 2 clips and slide the 2 clips to disconnect the 2 return tube sub-assemblies.
- b. Drain the power steering fluid.

NOTE: Take care not to damage the hose protector.

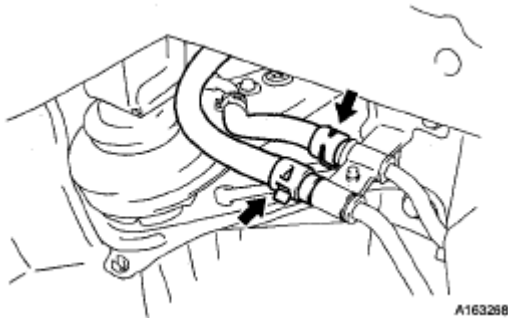


Fig. 66: Locating Return Tube Sub-Assembly Clips
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

39. DISCONNECT NO. 1 OIL RESERVOIR TO PUMP HOSE

- a. Using pliers, grip the claws of the clip and slide the clip to disconnect the No. 1 oil reservoir to pump hose from the oil reservoir tank.

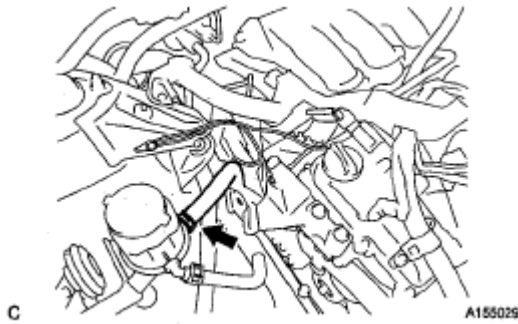


Fig. 67: Locating No. 1 Oil Reservoir To Pump Hose Clip
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

40. DISCONNECT ENGINE WIRE

- a. Disconnect the engine wire from the engine room junction block.
 1. Remove the nut and separate the wire harness.
 2. Using a screwdriver, unlock the engine room junction block. Pull the engine room junction block upward.

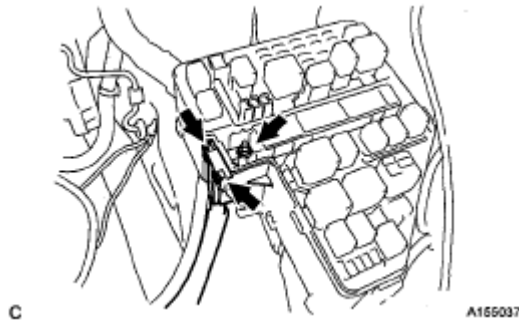


Fig. 68: Separating Wire Harness
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Remove the bolt and 2 clamps from the body.



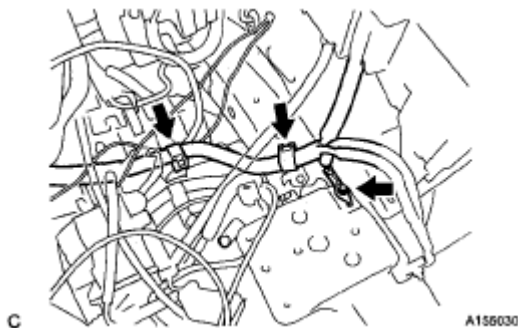


Fig. 69: Locating Bolt And Clamps On Body
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Remove the 2 bolts and 2 ground cables.
- d. Disconnect the engine wire from the ECM and passenger side junction block.

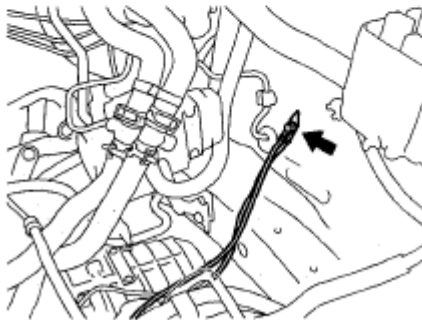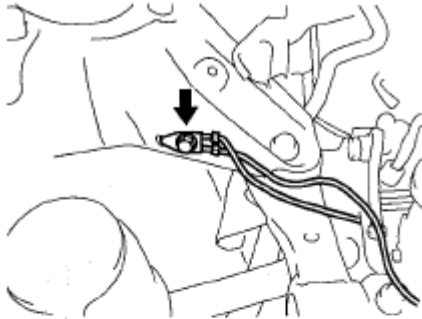


A163267

Fig. 70: Locating Bolts And Ground Cables

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

41. DISCONNECT UNION TO CHECK VALVE HOSE

- a. Using pliers, grip the claws of the clip and slide the clip to disconnect the union to check valve hose.

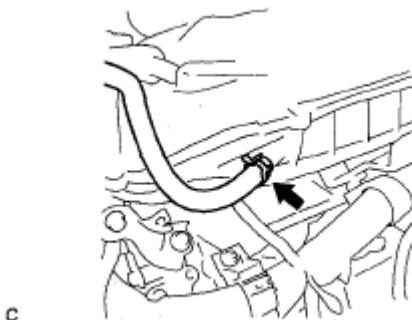

C

A162374

Fig. 71: Locating Union To Check Valve Hose Clip

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

42. REMOVE CENTER EXHAUST PIPE ASSEMBLY (for 4WD)

- a. Remove the center exhaust pipe assembly (See **REMOVAL**).
- 43. **REMOVE FRONT EXHAUST PIPE ASSEMBLY (for 4WD)**
 - a. Remove the front exhaust pipe assembly (See **REMOVAL**).
- 44. **REMOVE FRONT EXHAUST PIPE ASSEMBLY (for 2WD)**
 - a. Remove the front exhaust pipe assembly (See **REMOVAL**).
- 45. **REMOVE PROPELLER WITH CENTER BEARING SHAFT ASSEMBLY (See **REMOVAL**)**
- 46. **DISCONNECT FRONT STABILIZER LINK ASSEMBLY LH (See **REMOVAL**)**
- 47. **DISCONNECT FRONT STABILIZER LINK ASSEMBLY RH**

HINT:

Use the same procedures described for the LH side.

- 48. **REMOVE FRONT AXLE HUB NUT LH (See **REMOVAL**)**
- 49. **REMOVE FRONT AXLE HUB NUT RH**

HINT:

Use the same procedures described for the LH side.

- 50. **DISCONNECT FRONT SPEED SENSOR LH (See **REMOVAL**)**
- 51. **DISCONNECT FRONT SPEED SENSOR RH**

HINT:

Use the same procedures described for the LH side.

- 52. **DISCONNECT TIE ROD ASSEMBLY LH (See **REMOVAL**)**
- 53. **DISCONNECT TIE ROD ASSEMBLY RH**

HINT:

Use the same procedures described for the LH side.

- 54. **SEPARATE FRONT SUSPENSION LOWER NO. 1 ARM LH (See **REMOVAL**)**
- 55. **SEPARATE FRONT SUSPENSION LOWER NO. 1 ARM RH**

HINT:

Use the same procedures described for the LH side.

- 56. **SEPARATE FRONT AXLE ASSEMBLY LH (See **REMOVAL**)**
- 57. **SEPARATE FRONT AXLE ASSEMBLY RH**

HINT:

Use the same procedures described for the LH side.

58. **DISCONNECT STEERING INTERMEDIATE SHAFT SUB-ASSEMBLY**
59. **DISCONNECT DISCHARGE HOSE SUB-ASSEMBLY** (See **REMOVAL**)
60. **DISCONNECT SUCTION HOSE SUB-ASSEMBLY** (See **REMOVAL**)
61. **REMOVE ENGINE ASSEMBLY WITH TRANSAXLE**
 - a. Set the engine lifter.
 - b. Remove the 6 bolts, 2 nuts, and frame side rail plates RH and LH.

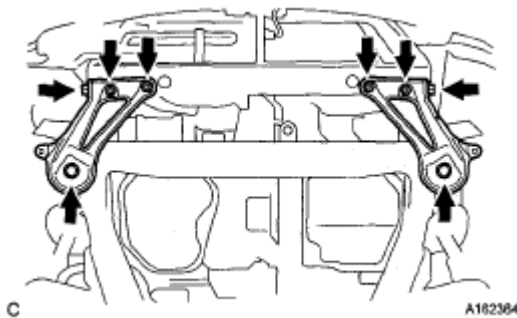


Fig. 72: Locating Bolts, Nuts, And Frame Side Rail Plates RH And LH
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Remove the 6 bolts, 2 nuts, and front suspension member brace rear RH and LH.

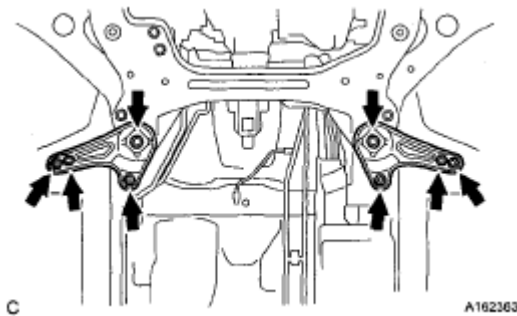


Fig. 73: Locating Bolts, Nuts, And Front Suspension Member Brace Rear RH And LH
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Operate the engine lifter, then remove the engine assembly from the vehicle.

NOTE: Make sure that the engine is clear of all wiring and hoses.

62. **REMOVE V-RIBBED BELT** (See **REMOVAL**)
63. **REMOVE VANE PUMP ASSEMBLY**
 - a. Disconnect the power steering oil pressure switch connector.

- b. Remove the 2 nuts.



Fig. 74: Locating Power Steering Oil Pressure Switch Connector
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Loosen the bolt A.
- d. Remove the bolt B.
- e. Remove the bolt A and vane pump assembly.

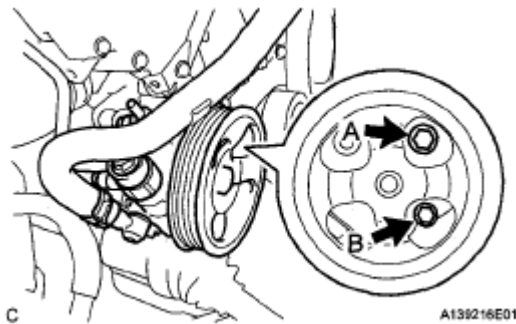


Fig. 75: Locating Bolts And Power Steering Link With Vane Pump
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

64. REMOVE FRONT STABILIZER BAR (for 4WD)

HINT:

See **REMOVAL** .

65. REMOVE POWER STEERING LINK

- a. Remove the 2 bolts and power steering link with vane pump.

66. INSTALL ENGINE HANGERS

- a. Install the 2 engine hangers with the 4 bolts as shown in the illustration.

Part No.:

No. 1 Engine hanger 12281-31120

No. 2 Engine hanger 12282-31100

Bolts 91671-10825

Torque: 33 N*m (337 kgf*cm, 24 ft.*lbf)

- b. Attach the engine sling device and hang the engine with the chain block.

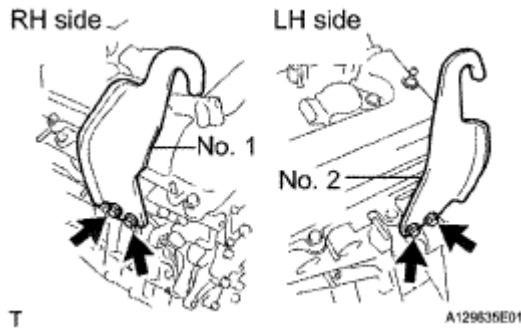


Fig. 76: Locating Engine Hangers With Bolts

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

67. REMOVE FRONT FRAME ASSEMBLY

- a. Disconnect the active mount VSV connector and harness clamp.


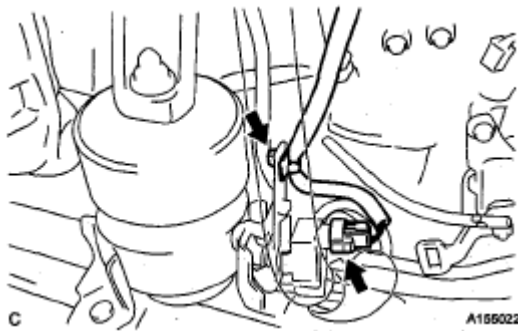


Fig. 77: Locating Active Mount VSV Connector And Harness Clamp


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Remove the 2 nuts and disconnect the engine mounting insulators RH and LH.

RH Side:

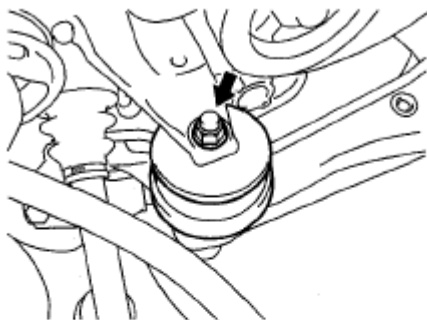

LH Side:

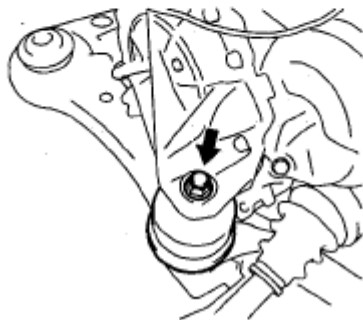

A163266E01

Fig. 78: Locating Nuts And Engine Mounting Insulators RH And LH
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Remove the bolt and disconnect the engine mounting insulator FR.

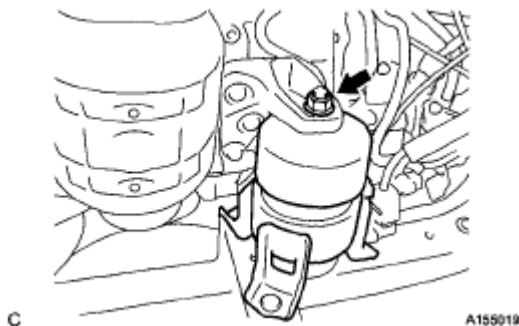


Fig. 79: Locating Bolt And Engine Mounting Insulator FR
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Remove the 2 bolts and separate the engine mounting insulator RR (for 4WD).

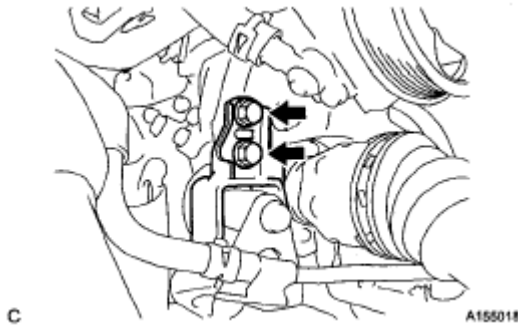


Fig. 80: Locating Engine Mounting Insulator RR (For 4WD)
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

68. REMOVE FRONT DRIVE SHAFT ASSEMBLY LH (See REMOVAL)
69. REMOVE FRONT DRIVE SHAFT ASSEMBLY RH (for 2WD) (See REMOVAL)
70. REMOVE FRONT DRIVE SHAFT ASSEMBLY RH (for 4WD) (See REMOVAL)
71. REMOVE ENGINE WIRE
72. REMOVE STARTER ASSEMBLY (See REMOVAL)
73. REMOVE ENGINE FRONT MOUNTING BRACKET (See REMOVAL)
74. REMOVE MANIFOLD STAY
 - a. Remove the bolt, nut, and manifold stay.

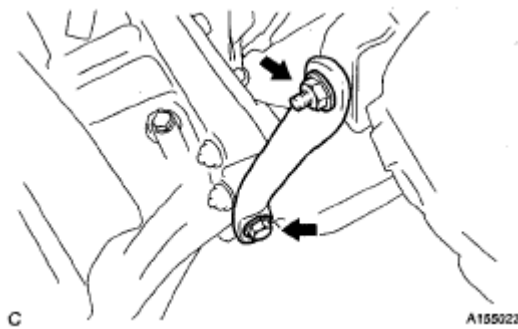


Fig. 81: Locating Bolt, Nut, And Manifold Stay
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

75. REMOVE TRANSFER STIFFENER PLATE RH (See REMOVAL)
76. REMOVE AUTOMATIC TRANSAXLE ASSEMBLY (for 2WD)

HINT:

See REMOVAL .

77. REMOVE AUTOMATIC TRANSAXLE ASSEMBLY (for 4WD)

REMOVAL

78. REMOVE DRIVE PLATE AND RING GEAR SUB-ASSEMBLY (See REMOVAL)

79. SECURE ENGINE

- a. Secure the engine onto an engine stand with the bolts.
- b. Remove the engine hangers.

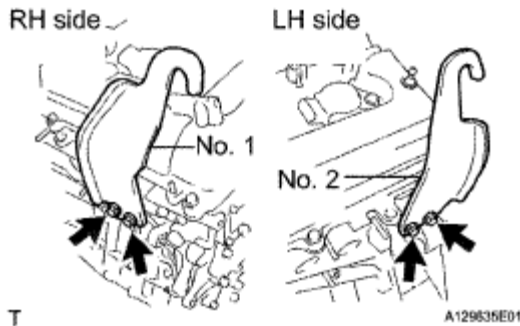


Fig. 82: Locating Engine Hangers With Bolts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

80. REMOVE VENTILATION HOSE

- a. Using pliers, grip the claws of the 2 clips and slide the 2 clips to remove the ventilation hose.

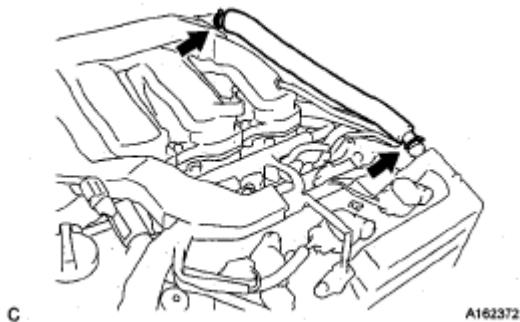


Fig. 83: Locating Ventilation Hose
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

81. REMOVE INTAKE AIR SURGE TANK ASSEMBLY

- a. Disconnect the 2 water by-pass hoses from the throttle with motor body assembly (*1).
- b. Disconnect the vapor feed hose (*2).
- c. Disconnect the throttle with motor body assembly connector and clamp (*3).
- d. Disconnect the No. 1 ventilation hose.

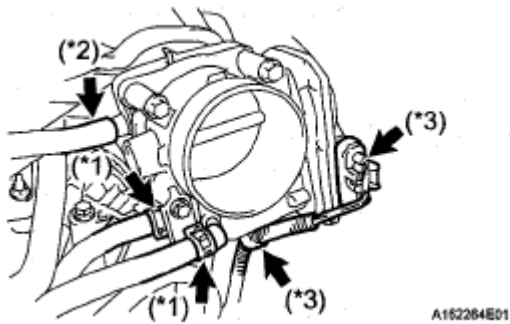


Fig. 84: Locating No. 1 Ventilation Hose
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- e. Disconnect the connector.
- f. Remove the 4 bolts, No. 1 surge tank stay and throttle body bracket.

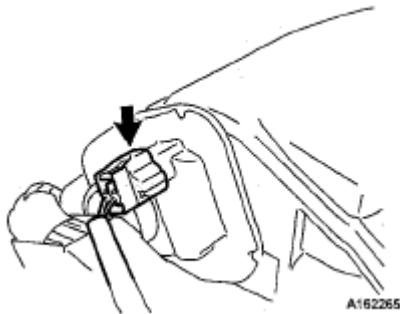


Fig. 85: Locating Bolts, No. 1 Surge Tank Stay And Throttle Body Bracket
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- g. Using a 5 mm socket hexagon wrench, remove the 4 bolts.
- h. Remove the 2 nuts and intake air surge tank (*4).
- i. Remove the gasket from the intake air surge tank (*5).

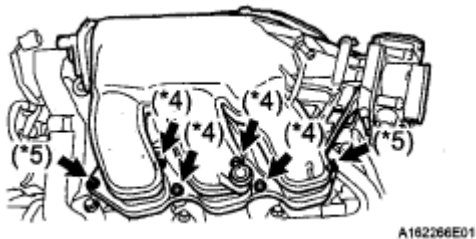


Fig. 86: Locating Bolts, Nuts, And Air Surge Tank Gasket
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

82. REMOVE IGNITION COIL ASSEMBLY

- a. Remove the 6 bolts and 6 ignition coils.

83. REMOVE NO. 2 ENGINE MOUNTING STAY RH

- a. Remove the bolt and No. 2 engine mounting stay RH.

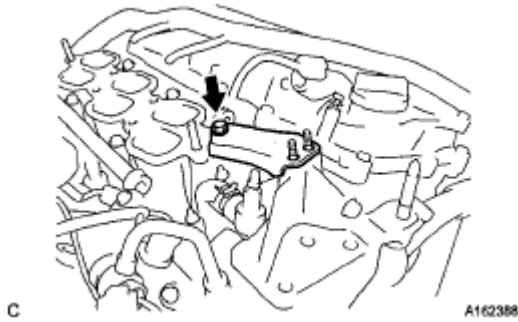


Fig. 87: Locating Bolt And No. 2 Engine Mounting Stay RH
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

84. REMOVE INTAKE MANIFOLD

- a. Uniformly loosen and remove the 6 bolts and 4 nuts.
- b. Remove the intake manifold and 2 gaskets.

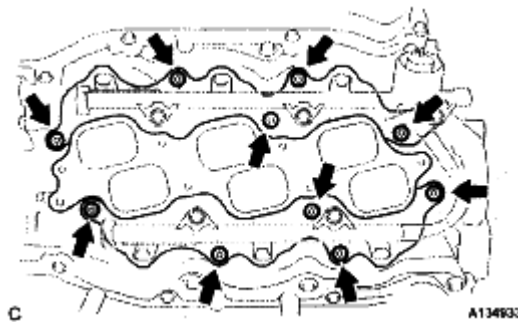


Fig. 88: Locating Intake Manifold Bolts And Nuts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

85. REMOVE EXHAUST MANIFOLD SUB-ASSEMBLY RH

- a. Disconnect the A/F sensor connector clamp.
- b. Uniformly loosen and remove the 6 nuts.
- c. Remove the manifold and gasket.

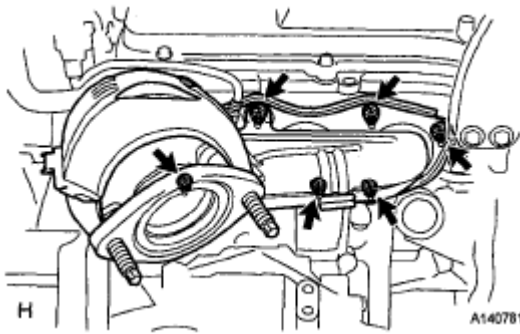


Fig. 89: Locating Exhaust Manifold And Gasket
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

86. REMOVE OIL LEVEL GAUGE GUIDE SUB-ASSEMBLY

- a. Remove the oil level gauge.
- b. Remove the 2 bolts, No. 1 and No. 2 oil level gauge guides.
- c. Remove the O-rings from the oil level gauge guide.

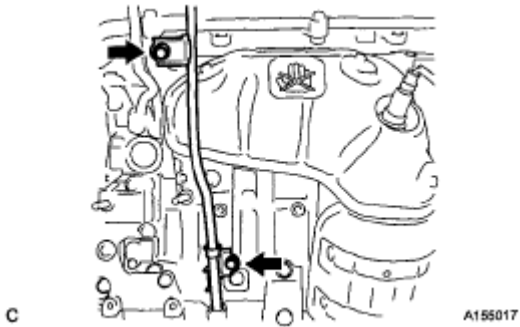


Fig. 90: Locating Oil Level Gauge Guide Sub-Assembly
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

87. REMOVE NO. 2 MANIFOLD STAY

- a. Remove the bolt, nut and No. 2 manifold stay.

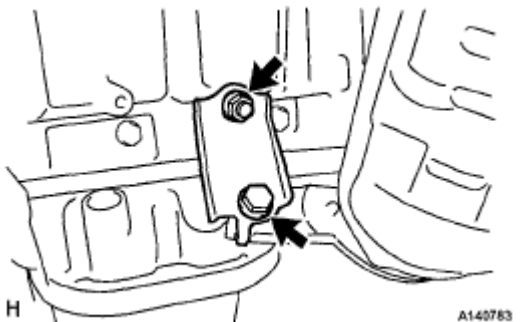


Fig. 91: Locating No. 2 Manifold Stay With Bolt And Nut
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

88. REMOVE NO. 2 EXHAUST MANIFOLD HEAT INSULATOR

- a. Remove the 3 bolts and No. 2 insulator.

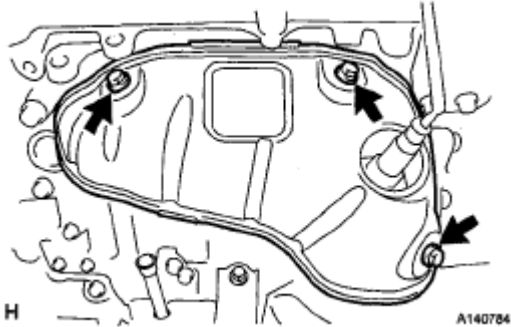


Fig. 92: Locating No. 2 Exhaust Manifold Heat Insulator
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

89. REMOVE EXHAUST MANIFOLD SUB-ASSEMBLY LH

- a. Uniformly loosen and remove the 6 nuts.
- b. Remove the manifold and gasket.

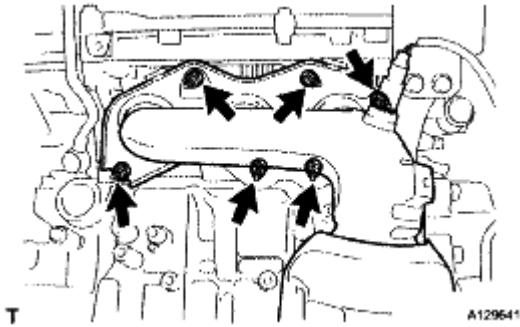


Fig. 93: Locating Exhaust Manifold Sub-Assembly
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

90. REMOVE ENGINE MOUNTING BRACKET RH

- a. Remove the engine mounting bracket and 3 bolts.


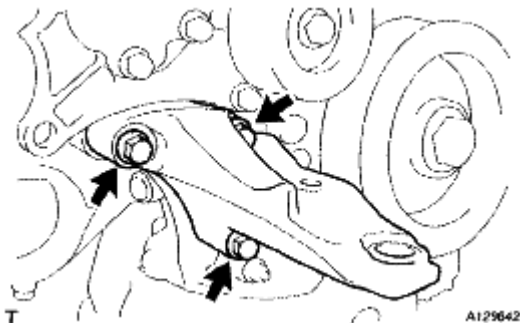


Fig. 94: Locating Engine Mounting Bracket RH With Bolts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

91. REMOVE DRIVE SHAFT BEARING BRACKET (for 2WD)

- a. Remove the 3 bolts and drive shaft bearing bracket.

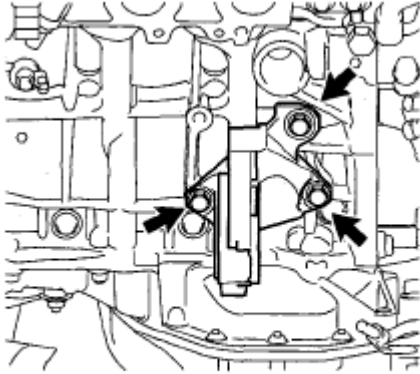


A183583

Fig. 95: Locating Drive Shaft Bearing Bracket (For 2WD)
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

92. REMOVE ENGINE MOUNTING BRACKET RR (for 4WD)

- a. Remove the 3 bolts and engine mounting bracket RR.

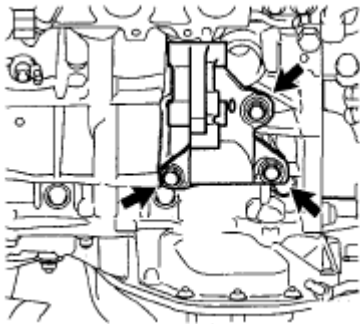

A142881

Fig. 96: Locating Bolts And Engine Mounting Bracket RR
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

93. REMOVE GENERATOR ASSEMBLY (See REMOVAL)

94. REMOVE COOLER COMPRESSOR ASSEMBLY

95. REMOVE V-RIBBED BELT TENSIONER ASSEMBLY

- a. Remove the 5 bolts and V-ribbed belt tensioner assembly.

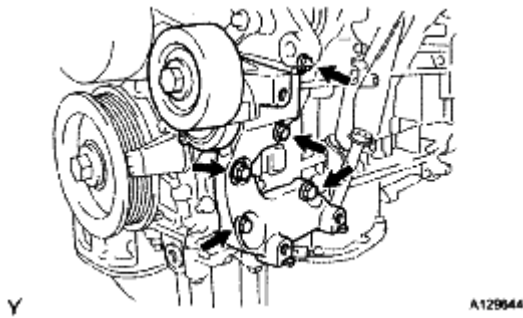


Fig. 97: Locating Bolts And V-Ribbed Belt Tensioner Assembly
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

96. REMOVE NO. 2 TIMING GEAR COVER

- a. Remove the 2 bolts and No. 2 timing gear cover.

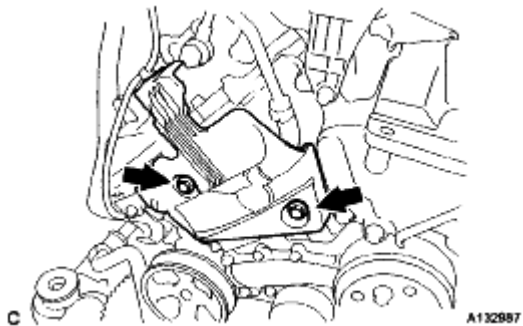


Fig. 98: Locating No. 2 Timing Gear Cover With Bolts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

97. REMOVE NO. 2 IDLER PULLEY SUB-ASSEMBLY

- a. Remove the bolt, plate and No. 2 idler pulley sub-assembly.

98. REMOVE WATER PUMP PULLEY (See REMOVAL)

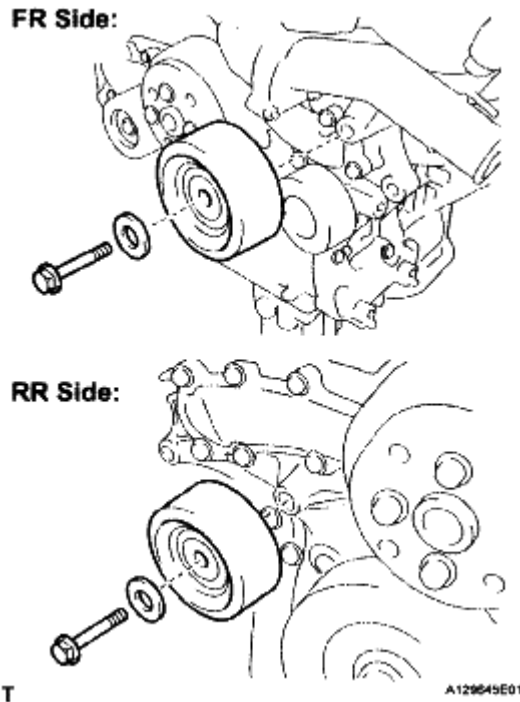


Fig. 99: Identifying Bolts, Idler Pulley Cover Plates And Idler Pulley Sub-Assemblies
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

99. **REMOVE NO. 1 ENGINE FRONT MOUNTING BRACKET LH**
 - a. Remove the 6 bolts and No. 1 engine front mounting bracket LH.

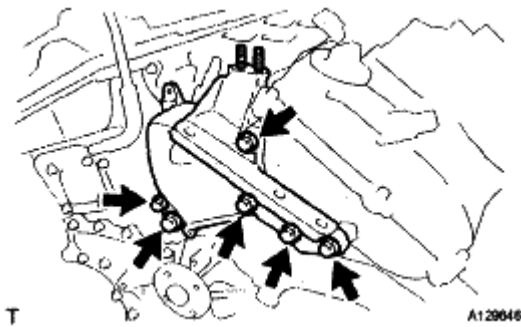


Fig. 100: Locating Engine Mounting Bracket Front
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

100. **REMOVE RADIO SETTING CONDENSER**
 - a. Remove the 2 bolts and 2 radio setting condensers.

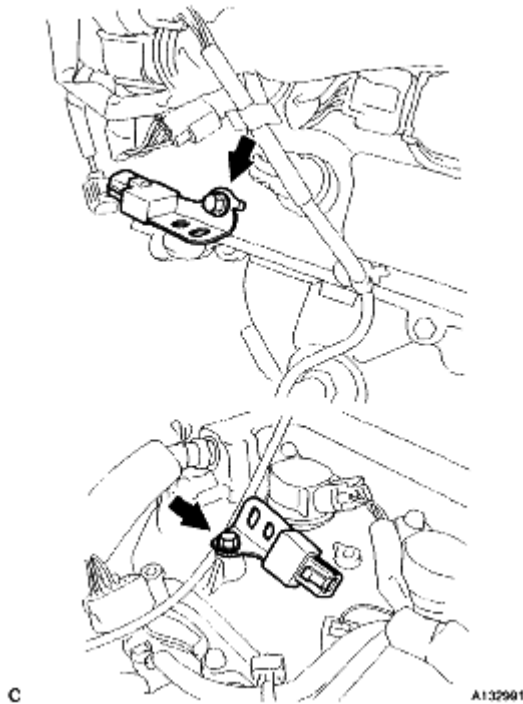


Fig. 101: Locating Bolts And Radio Setting Condensers
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

101. REMOVE NO. 1 VACUUM SWITCHING VALVE ASSEMBLY

- a. Remove the bolt and No. 1 vacuum switching valve.

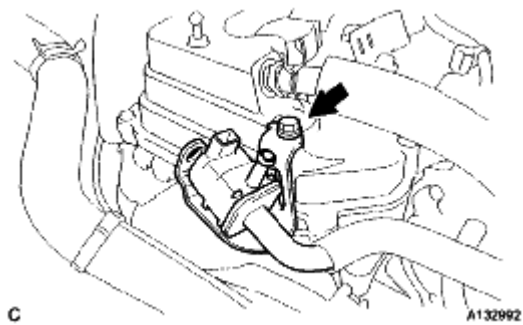


Fig. 102: Locating Bolt And No. 1 Vacuum Switching Valve
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

102. REMOVE ENGINE OIL PRESSURE SWITCH ASSEMBLY

- a. Using a 24 mm deep socket wrench, remove the engine oil pressure switch assembly.

103. REMOVE KNOCK CONTROL SENSOR (See REMOVAL)

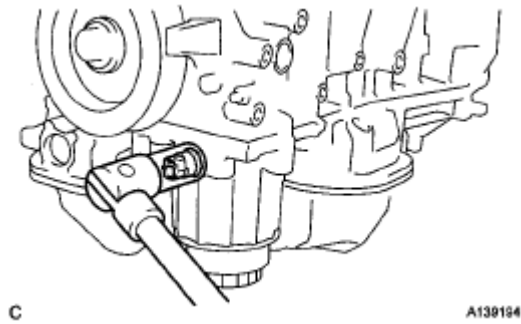


Fig. 103: Locating Engine Oil Pressure Switch Assembly
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

104. REMOVE ENGINE COOLANT TEMPERATURE SENSOR

- a. Using a 19 mm deep socket wrench, remove the EFI engine coolant temperature sensor and gasket.

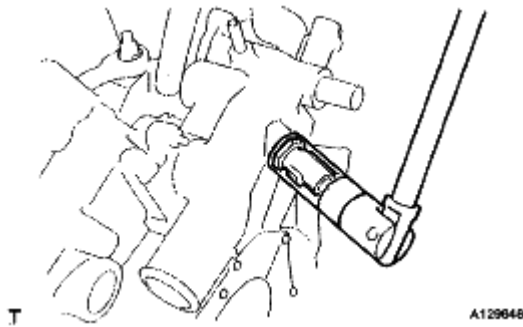


Fig. 104: Identifying EFI Engine Coolant Temperature Sensor
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

INSPECTION

1. INSPECT EXHAUST MANIFOLD SUB-ASSEMBLY LH


- a. Using a precision straightedge and feeler gauge, measure the warpage on the contact surface of the cylinder head.

Maximum warpage: 0.7 mm (0.028 in.)

HINT:

The maximum allowable warpage of each installation surface is 0.3 mm (0.012 in.).

If the warpage is greater than the maximum, replace the manifold.

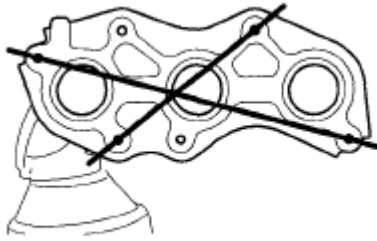

A138214

Fig. 105: Inspecting Exhaust Manifold Sub-Assembly LH
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

2. INSPECT EXHAUST MANIFOLD SUB-ASSEMBLY RH


- a. Using a precision straightedge and feeler gauge, measure the warpage on the contact surface of the cylinder head.

Maximum warpage: 0.7 mm (0.028 in.)

HINT:

The maximum allowable warpage of each installation surface is 0.3 mm (0.012 in.).

If the warpage is greater than the maximum, replace the manifold.

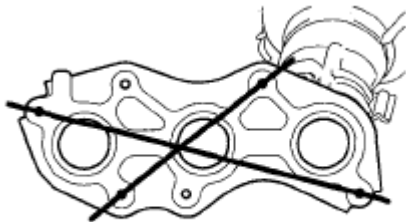

A138215

Fig. 106: Inspecting Exhaust Manifold Sub-Assembly RH
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

3. INSPECT INTAKE AIR SURGE TANK ASSEMBLY

- a. Using a precision straightedge and feeler gauge, measure the warpage on the contact surface of the intake manifold.

Maximum warpage: 2.5 mm (0.098 in.)

If the warpage is greater than the maximum, replace the surge tank.

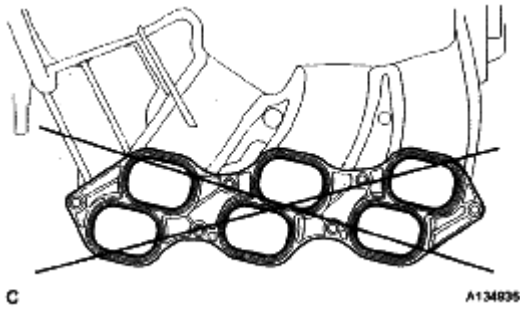


Fig. 107: Inspecting Intake Air Surge Tank Assembly
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

4. INSPECT INTAKE MANIFOLD

a. Cylinder head side:

1. Using a precision straightedge and feeler gauge, measure the surface contacting the cylinder head for warpage.

Maximum warpage: 0.1 mm (0.003 in.)

If the warpage is greater than the maximum, replace the intake manifold.


b. Surge tank side:

1. Using a precision straightedge and feeler gauge, measure the surface contacting the surge tank for warpage.


Maximum warpage: 0.1 mm (0.003 in.)

If the warpage is greater than the maximum, replace the intake manifold.

Cylinder head side:

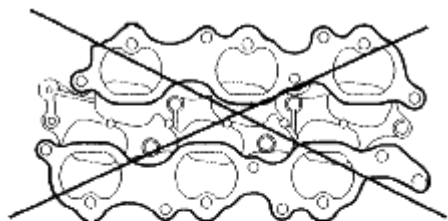

Surge tank side:

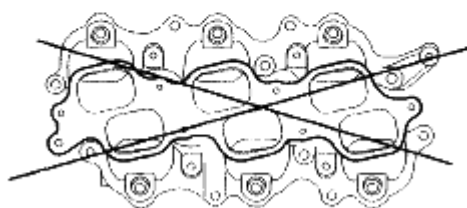

C

A134834E01

Fig. 108: Inspecting Intake Manifold

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

INSTALLATION

1. INSTALL ENGINE COOLANT TEMPERATURE SENSOR

- Using a 19 mm deep socket wrench, install the engine coolant temperature sensor and a new gasket.

Torque: 20 N*m (200 kgf*cm, 14 ft.*lbf)

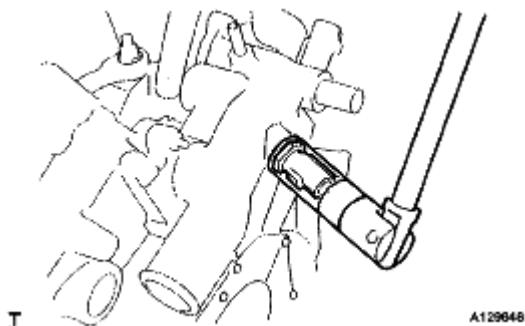


Fig. 109: Identifying EFI Engine Coolant Temperature Sensor

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


2. INSTALL KNOCK CONTROL SENSOR (See INSTALLATION)

3. INSTALL ENGINE OIL PRESSURE SWITCH ASSEMBLY

- Clean the threads of the oil pressure switch. Apply adhesive to 2 or 3 threads of the oil pressure

switch.

Adhesive: Part No. 08833-00080, THREE BOND 1344, LOCTITE 242 or equivalent

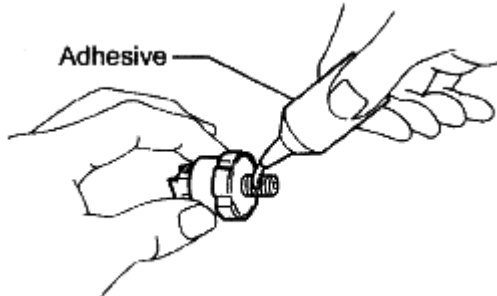

P012478E01

Fig. 110: Applying Adhesive On Threads Of Oil Pressure Switch
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Using a 24 mm deep socket wrench, install the oil pressure switch.

Torque: 21 N*m (214 kgf*cm, 15 ft.*lbf)

NOTE: Do not start the engine within 1 hour after installation to prevent oil leaks.

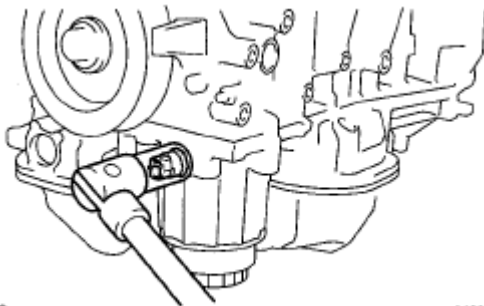


Fig. 111: Locating Engine Oil Pressure Switch Assembly
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

4. INSTALL NO. 1 VACUUM SWITCHING VALVE ASSEMBLY

- a. Install the bolt and No. 1 vacuum switching valve.

Torque: 10 N*m (102 kgf*cm, 7 ft.lbf)

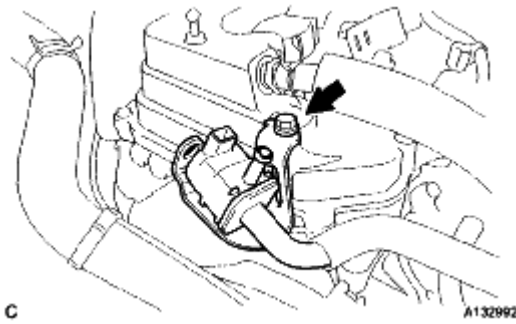


Fig. 112: Locating Bolt And No. 1 Vacuum Switching Valve
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

5. INSTALL RADIO SETTING CONDENSER

- a. Install the 2 bolts and 2 radio setting condensers.

Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf)

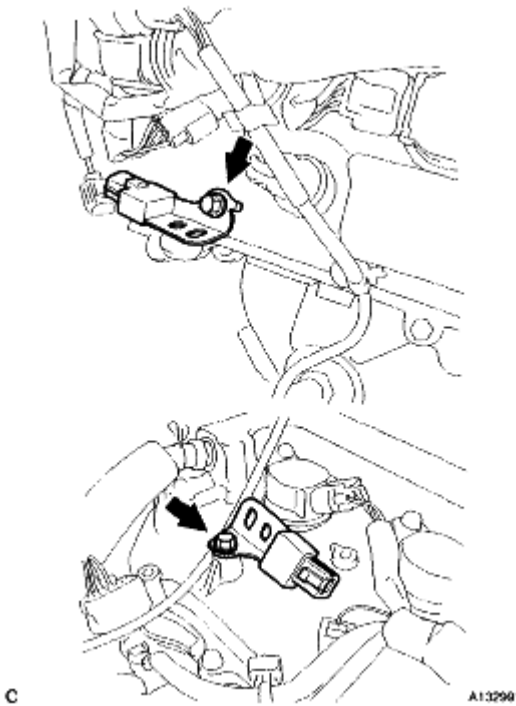


Fig. 113: Locating Bolts And Radio Setting Condensers
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

6. INSTALL NO. 1 ENGINE FRONT MOUNTING BRACKET LH

- a. Install the No. 1 engine front mounting bracket LH with the 6 bolts.

Torque: 54 N*m (551 kgf*cm, 40 ft.*lbf)

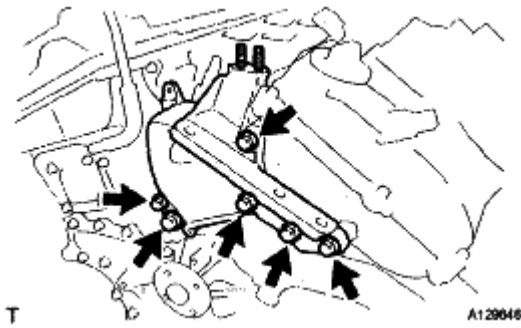



Fig. 114: Locating Engine Mounting Bracket Front
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

7. **INSTALL WATER PUMP PULLEY** (See INSTALLATION)
8. **INSTALL NO. 2 IDLER PULLEY SUB-ASSEMBLY**
 - a. Install the No. 2 idler pulley sub-assembly and cover plate with the bolt.

Torque: 43 N*m (438 kgf*cm, 32 ft.*lbf)

NOTE: **Plate diameter:**
 Idler pulley cover plate: 33.6 mm (1.32 in.) No. 2 idler pulley cover
 plate: 37.8 mm (1.49 in.)

FR Side:

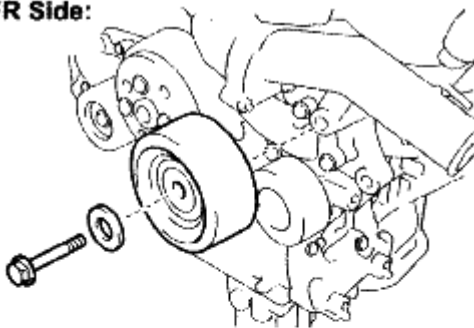

RR Side:

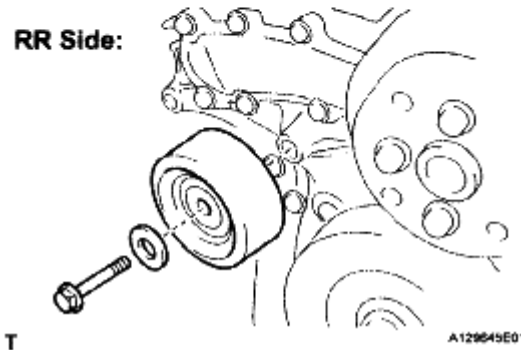


Fig. 115: Identifying Bolts, Idler Pulley Cover Plates And Idler Pulley Sub-Assemblies
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

9. INSTALL NO. 2 TIMING GEAR COVER

- a. Install the No. 2 timing gear cover with the 2 bolts.

Torque: 6.0 N*m (61 kgf*cm, 53 in.*lbf)

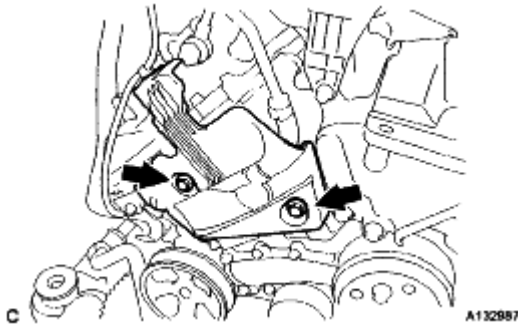


Fig. 116: Locating No. 2 Timing Gear Cover With Bolts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

10. INSTALL V-RIBBED BELT TENSIONER ASSEMBLY

- a. Temporarily install the V-ribbed belt tensioner with the 5 bolts.

HINT:

Each bolt length is as follows:

- A. 70 mm (2.76 in.)
- B. 33 mm (1.30 in.)
- b. Install the V-ribbed belt tensioner by tightening the bolt 1 and bolt 2 in the order shown in the illustration.

Torque: 43 N*m (438 kgf*cm, 32 ft.*lbf)

- c. Tighten the other bolts.

Torque: 43 N*m (438 kgf*cm, 32 ft.*lbf)

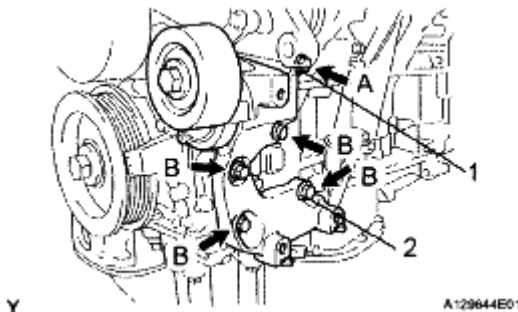


Fig. 117: Locating Bolts And V-Ribbed Belt Tensioner Assembly
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

11. **INSTALL GENERATOR ASSEMBLY** (See **INSTALLATION**)
12. **INSTALL COOLER COMPRESSOR ASSEMBLY** (See **INSTALLATION**)
13. **INSTALL ENGINE MOUNTING BRACKET RR (for 4WD)**
 - a. Install the engine mounting bracket RR with the 3 bolts.

Torque: 64 N*m (650 kgf*cm, 47 ft.*lbf)

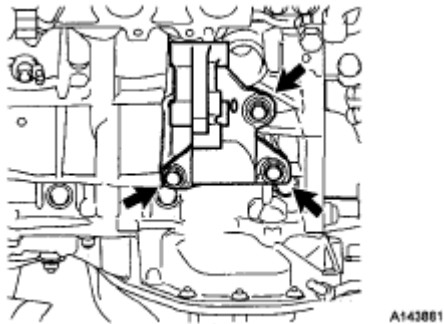


Fig. 118: Locating Bolts And Engine Mounting Bracket RR
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

14. **INSTALL DRIVE SHAFT BEARING BRACKET (for 2WD)**
 - a. Install the drive shaft bearing bracket with the 3 bolts.

Torque: 64 N*m (650 kgf*cm, 47 ft.lbf)

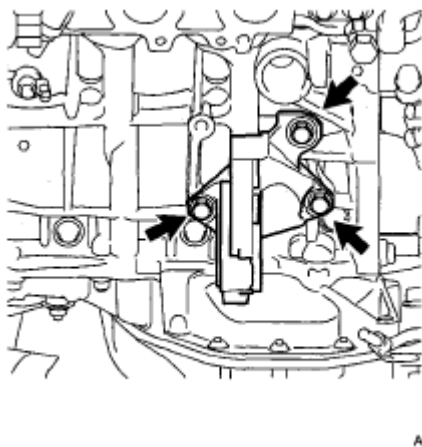


Fig. 119: Locating Drive Shaft Bearing Bracket (For 2WD)
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

15. **INSTALL ENGINE MOUNTING BRACKET RH**
 - a. Install the engine mounting bracket RH with the 3 bolts.

Torque: 54 N*m (551 kgf*cm, 40 ft.*lbf)

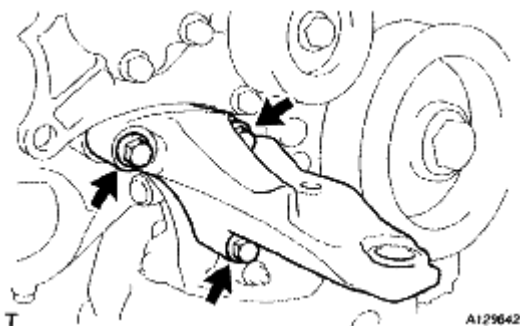


Fig. 120: Locating Engine Mounting Bracket RH With Bolts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

16. INSTALL EXHAUST MANIFOLD SUB-ASSEMBLY LH

- a. Install a new gasket as shown in the illustration.

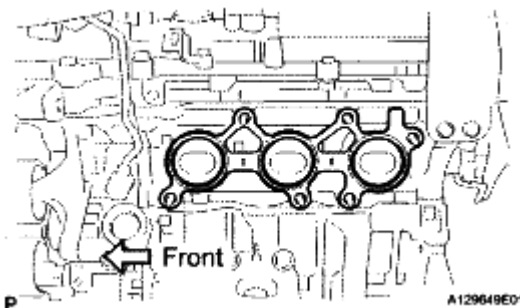


Fig. 121: Installing Exhaust Manifold Sub-Assembly RH With Nuts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Install the exhaust manifold sub-assembly LH with the 6 nuts in the order shown in the illustration.

Torque: 21 N*m (214 kgf*cm, 15 ft.*lbf)

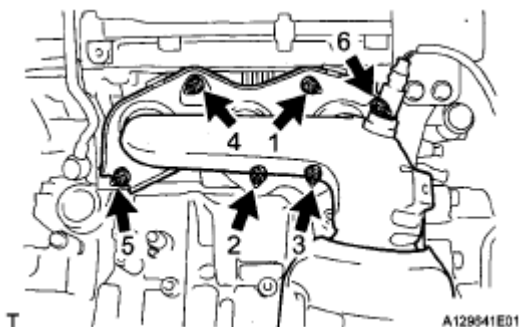


Fig. 122: Installing Exhaust Manifold Sub-Assembly LH With Nuts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

17. INSTALL NO. 2 EXHAUST MANIFOLD HEAT INSULATOR

- a. Install the No. 2 insulator with the 3 bolts.

Torque: 8.5 N*m (87 kgf*cm, 75 in.*lbf)

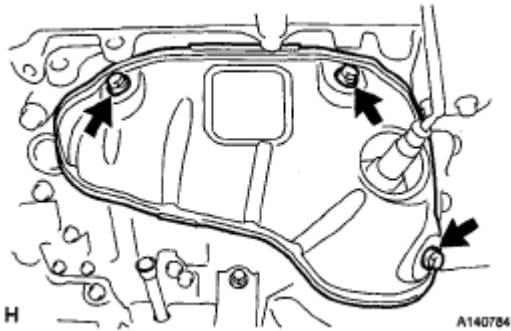


Fig. 123: Locating No. 2 Exhaust Manifold Heat Insulator
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

18. INSTALL NO. 2 MANIFOLD STAY

- a. Install the No. 2 manifold stay with the bolt and nut in the order shown in the illustration.

Torque: 34 N*m (347 kgf*cm, 25 ft.*lbf)

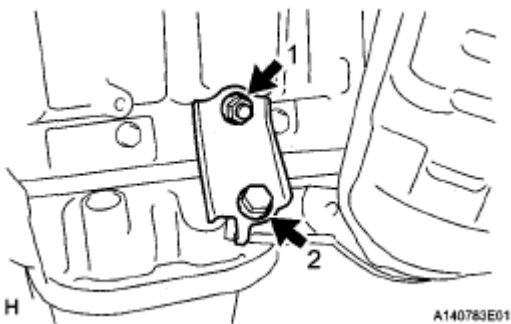


Fig. 124: Locating No. 2 Manifold Stay With Bolt And Nut
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

19. INSTALL OIL LEVEL GAUGE GUIDE SUB-ASSEMBLY

- a. Install 2 new O-rings to the oil level gauge guide.
- b. Apply a light coat of engine oil to the O-rings.
- c. Push in the oil level gauge guide end into the guide hole.
- d. Install the No. 1 oil level gauge guide with the bolt.

Torque: 21 N*m (214 kgf*cm, 15 ft.*lbf)

- e. Install the No. 2 oil level gauge guide with the bolt.

Torque: 21 N*m (214 kgf*cm, 15 ft.*lbf)

- f. Install the oil level gauge.

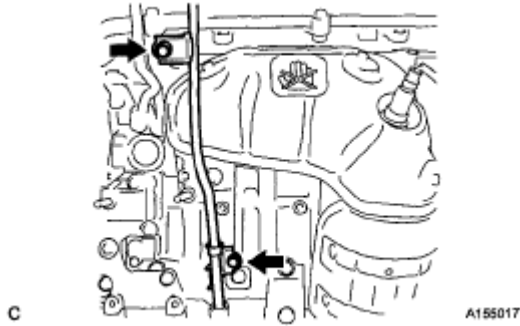


Fig. 125: Locating Oil Level Gauge Guide Sub-Assembly
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

20. INSTALL EXHAUST MANIFOLD SUB-ASSEMBLY RH

- a. Install a new gasket as shown in the illustration.

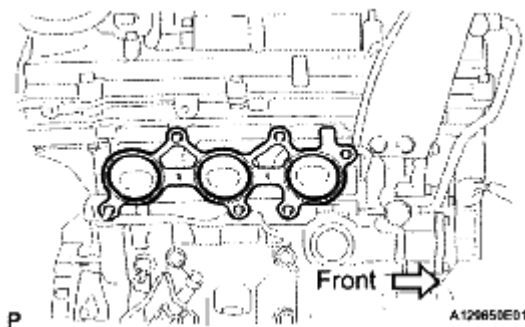


Fig. 126: Locating Exhaust Manifold Sub-Assembly RH Gasket
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Install the exhaust manifold sub-assembly RH with the 6 nuts in the order shown in the illustration.

Torque: 21 N*m (214 kgf*cm, 15 ft.*lbf)

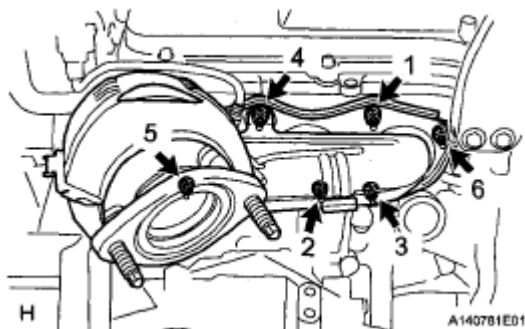


Fig. 127: Identifying Exhaust Manifold Sub-Assembly RH With Nuts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

21. INSTALL INTAKE MANIFOLD

NOTE: DO NOT apply oil to the bolts listed below:

TIGHTENING TORQUE SPECIFICATIONS

Tightening Parts
Intake Manifold and Cylinder Head Sub-assembly RH
Intake Manifold and Cylinder Head Sub-assembly LH

- a. Set a new gasket on each cylinder head.

NOTE:

- Align the port holes of the gasket and cylinder head.
- Make sure that the gasket is installed in the correct direction.

- b. Set the intake manifold on the cylinder heads.
- c. Install and tighten the 6 bolts and 4 nuts uniformly in several steps.

Torque: 21 N*m (214 kgf*cm, 15 ft.*lbf)

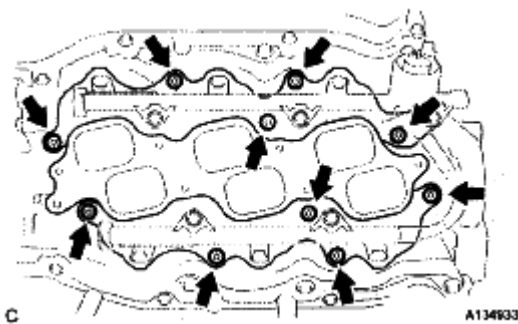


Fig. 128: Locating Intake Manifold Bolts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

22. INSTALL NO. 2 ENGINE MOUNTING STAY RH

- a. Install the No. 2 mounting stay RH with the bolt.

Torque: 21 N*m (214 kgf*cm, 15 ft.*lbf)

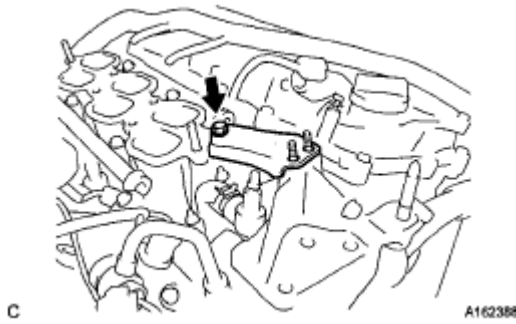


Fig. 129: Locating Bolt And No. 2 Engine Mounting Stay RH
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

23. INSTALL IGNITION COIL ASSEMBLY

- a. Install the 6 ignition coil assemblies with the 6 bolts.

Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf)

24. INSTALL INTAKE AIR SURGE TANK ASSEMBLY

NOTE: DO NOT apply oil to the bolts listed below:

TIGHTENING TORQUE SPECIFICATIONS

Tightening Parts
Surge Tank and Intake Manifold
No. 1 Surge Tank Stay and Cylinder Head Cover
No. 1 Surge Tank Stay and Surge Tank
Throttle Body Bracket and Cylinder Head Cover
Throttle Body Bracket and Surge Tank

- a. Install a new gasket to the intake air surge tank.
- b. Using a 5 mm hexagon socket wrench, install the 4 bolts and 2 nuts.

Torque: Bolt 18 N*m (184 kgf*cm, 13 ft.*lbf)

Nut 16 N*m (163 kgf*cm, 12 ft.*lbf)

- c. Install the throttle body bracket, No. 1 surge tank stay and 4 bolts.

Torque: 21 N*m (214 kgf*cm, 15 ft.*lbf)

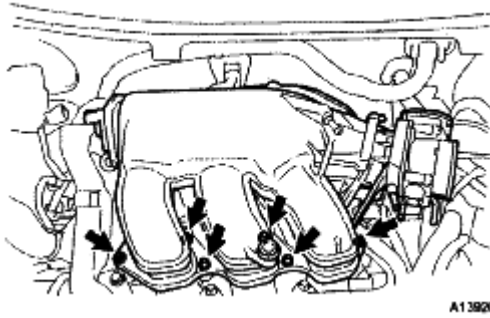


Fig. 130: Locating Throttle Body Bracket, No. 1 Surge Tank Stay And Bolts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Connect the connector.
- e. Connect the No. 1 ventilation hose.

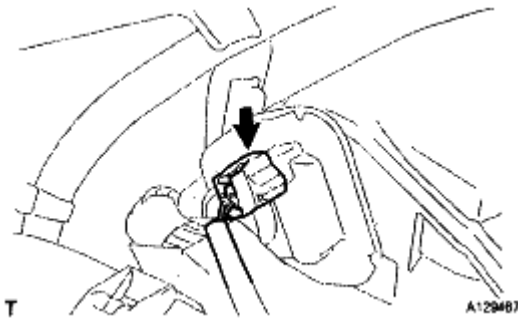


Fig. 131: Locating Connector
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- f. Install the clamp and connect the throttle with motor body assembly connector.
- g. Connect the vapor feed hose.
- h. Connect the 2 water by-pass hoses to the throttle with motor body assembly.

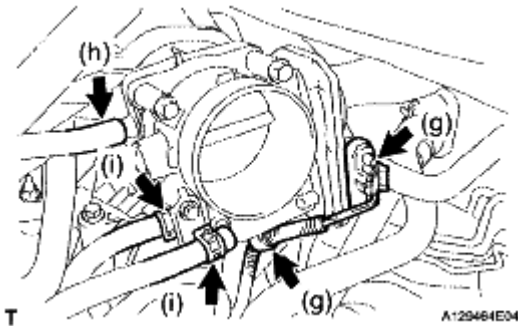


Fig. 132: Locating Water By-Pass Hoses To Throttle With Motor Body Assembly
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

25. INSTALL VENTILATION HOSE

- a. Using pliers, grip the claws of the 2 clips and slide the 2 clips to the intake air surge tank assembly and ventilation valve.

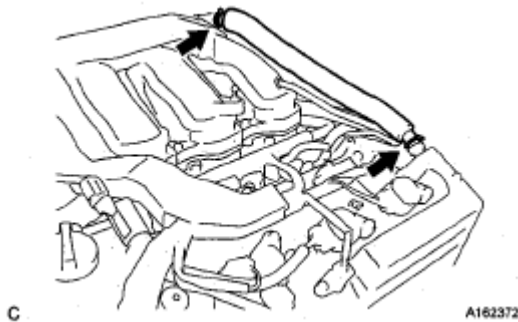


Fig. 133: Locating Ventilation Hose

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

26. INSTALL ENGINE HANGERS

- a. Install the 4 bolts, and 2 engine hangers.

27. REMOVE ENGINE STAND

28. INSTALL DRIVE PLATE AND RING GEAR SUB-ASSEMBLY (See INSTALLATION)

29. INSTALL AUTOMATIC TRANSAXLE ASSEMBLY (for 2WD)

HINT:

See REMOVAL .

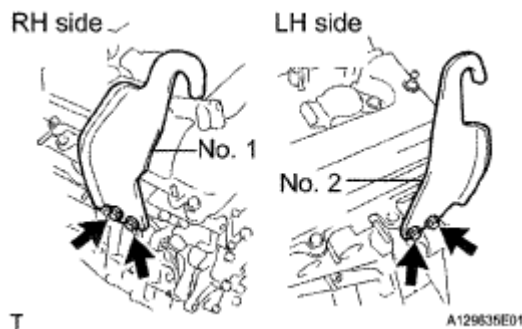


Fig. 134: Locating Engine Hangers With Bolts

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

30. INSTALL AUTOMATIC TRANSAXLE ASSEMBLY (for 4WD)

HINT:

(See INSTALLATION).

31. INSTALL TRANSFER STIFFENER PLATE RH (See INSTALLATION)

32. INSTALL MANIFOLD STAY

- a. Install the bolt, nut, and manifold stay.

Torque: 34 N*m (347 kgf*cm, 25 ft.*lbf)

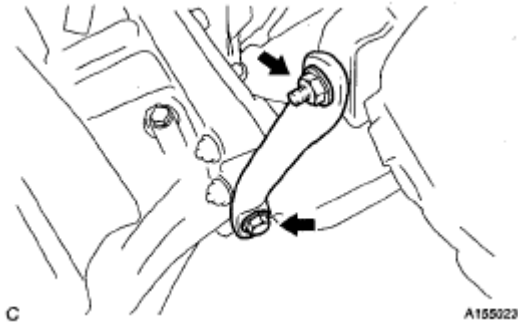



Fig. 135: Locating Bolt, Nut, And Manifold Stay
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

33. **INSTALL ENGINE FRONT MOUNTING BRACKET** (See INSTALLATION)
34. **INSTALL STARTER ASSEMBLY** (See INSTALLATION)
35. **INSTALL ENGINE WIRE**
36. **INSTALL FRONT DRIVE SHAFT ASSEMBLY LH** (See INSTALLATION)
37. **INSTALL FRONT DRIVE SHAFT ASSEMBLY RH (for 2WD)** (See INSTALLATION)
38. **INSTALL FRONT DRIVE SHAFT ASSEMBLY RH (for 4WD)** (See INSTALLATION)
39. **INSTALL FRONT FRAME ASSEMBLY**

- a. Install the engine mounting insulators RH and LH with the 2 nuts.

Torque: 95 N*m (969 kgf*cm, 70 ft.*lbf)

RH Side:

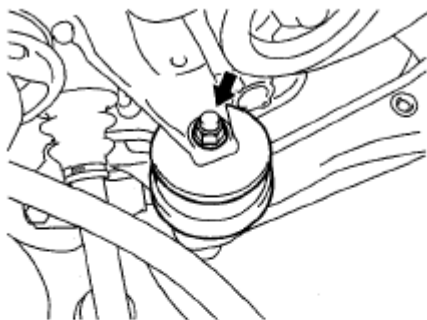

LH Side:



A163266ED1

Fig. 136: Locating Nuts And Engine Mounting Insulators RH And LH
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Install the engine mounting insulator FR with the bolt.

Torque: 87 N*m (887 kgf*cm, 64 ft.*lbf)

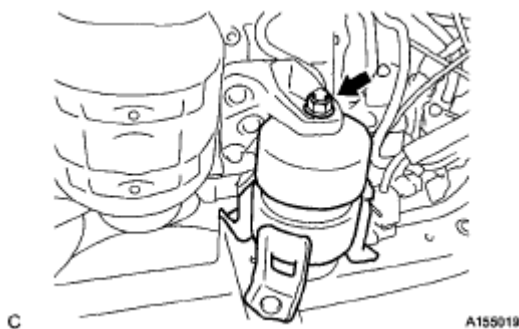


Fig. 137: Locating Bolt And Engine Mounting Insulator FR
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Install the engine mounting insulator RR with the 2 bolts.

Torque: 78 N*m (795 kgf*cm, 58 ft.*lbf)

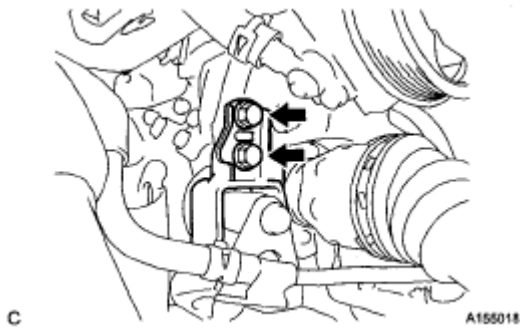


Fig. 138: Locating Engine Mounting Insulator RR (For 4WD)
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Connect the connector and clamp.

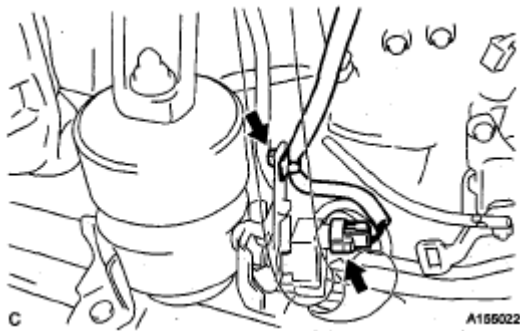


Fig. 139: Locating Active Mount VSV Connector And Harness Clamp
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- 40. **INSTALL POWER STEERING LINK** (See INSTALLATION)
- 41. **INSTALL FRONT STABILIZER BAR**

HINT:

(See INSTALLATION).

- 42. **REMOVE ENGINE HANGERS**
 - a. Remove the 4 bolts and 2 engine hangers.

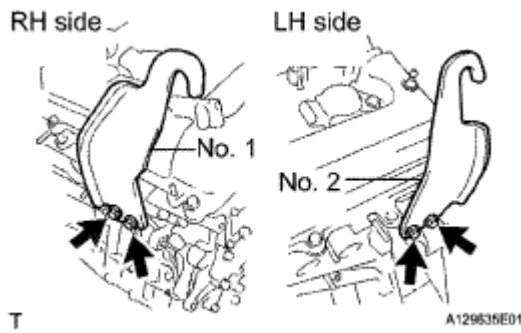


Fig. 140: Locating Engine Hangers With Bolts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

43. INSTALL VANE PUMP ASSEMBLY

- a. Install the vane pump with the 2 bolts and nut.

Torque: 43 N*m (438 kgf*cm, 32 ft.*lbf)

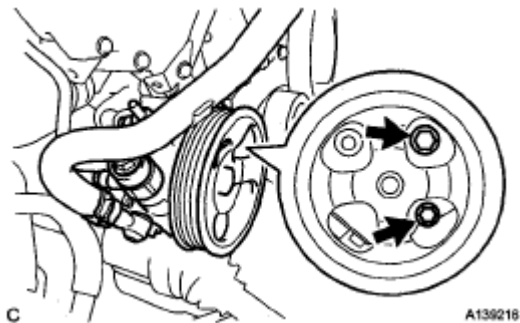


Fig. 141: Locating Vane Pump With Bolts And Nut
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Install the 2 pressure feed tube clamp nuts.

Torque: 7.8 N*m (80 kgf*cm, 69 in.*lbf)

- c. Connect the power steering oil pressure switch connector.

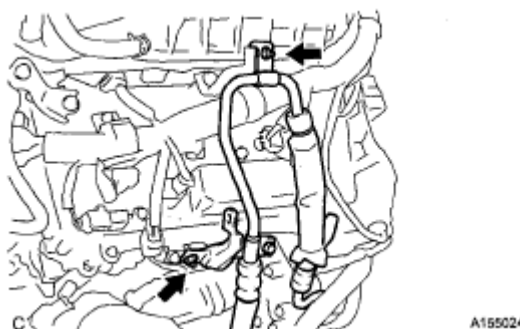


Fig. 142: Locating Power Steering Oil Pressure Switch Connector
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

44. INSTALL ENGINE ASSEMBLY WITH TRANSAXLE

- a. Set the engine assembly with transaxle on the engine lifter.
- b. Install the engine assembly to the vehicle.
- c. Install the frame side rail plates RH and LH with the 6 bolts and 2 nuts.

Torque: A 85 N*m (867 kgf*cm, 63 ft.*lbf)

B 32 N*m (329 kgf*cm, 24 ft.*lbf)

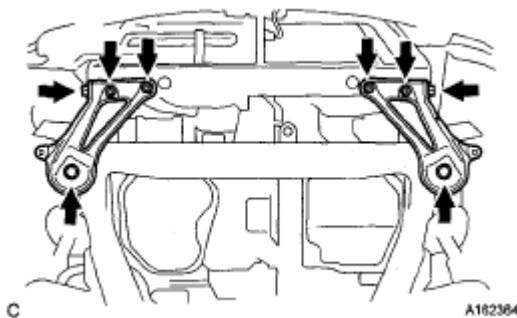


Fig. 143: Locating Bolts, Nuts, And Frame Side Rail Plates RH And LH
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Install the front suspension member brace rear RH and LH with the 6 bolts and 2 nuts.

Torque: A 85 N*m (867 kgf*cm, 63 ft.*lbf)

B 32 N*m (329 kgf*cm, 24 ft.*lbf)

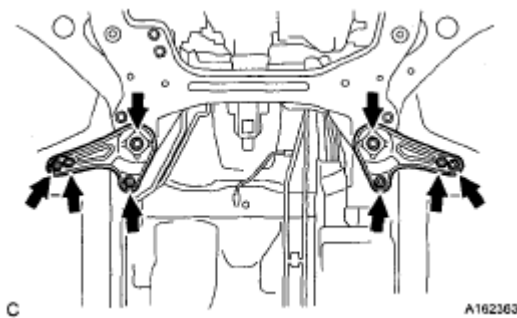


Fig. 144: Locating Bolts, Nuts, And Front Suspension Member Brace Rear RH AND LH
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

45. RECONNECT SUCTION HOSE SUB-ASSEMBLY (See INSTALLATION)
46. RECONNECT DISCHARGE HOSE SUB-ASSEMBLY (See INSTALLATION)
47. INSTALL STEERING INTERMEDIATE SHAFT SUB-ASSEMBLY (See INSTALLATION)

48. INSTALL FRONT AXLE ASSEMBLY LH (See INSTALLATION)**49. INSTALL FRONT AXLE ASSEMBLY RH****HINT:**

Use the same procedures described for the LH side.

50. INSTALL FRONT SUSPENSION LOWER NO. 1 ARM LH (See INSTALLATION)**51. INSTALL FRONT SUSPENSION LOWER NO. 1 ARM RH****HINT:**

Use the same procedures described for the LH side.

52. INSTALL TIE ROD ASSEMBLY LH (See INSTALLATION)**53. INSTALL TIE ROD ASSEMBLY RH****HINT:**

Use the same procedures described for the LH side.

54. INSTALL FRONT SPEED SENSOR LH (See INSTALLATION)**55. INSTALL FRONT SPEED SENSOR RH****HINT:**

Use the same procedures described for the LH side.

56. INSTALL FRONT AXLE HUB NUT LH (See INSTALLATION)**57. INSTALL FRONT AXLE HUB NUT RH****HINT:**

Use the same procedures described for the LH side.

58. INSTALL FRONT STABILIZER LINK ASSEMBLY LH (See INSTALLATION)**59. INSTALL FRONT STABILIZER LINK ASSEMBLY RH****HINT:**



Use the same procedures described for the LH side.

60. INSTALL PROPELLER WITH CENTER BEARING SHAFT ASSEMBLY (See INSTALLATION)**61. FULLY TIGHTEN PROPELLER WITH CENTER BEARING SHAFT ASSEMBLY (See**

INSTALLATION)

62. **INSTALL FRONT EXHAUST PIPE ASSEMBLY (for 2WD)**
 - a. Install the front exhaust pipe assembly (See **INSTALLATION**).
63. **INSTALL FRONT EXHAUST PIPE ASSEMBLY (for 4WD)**
 - a. Install front exhaust pipe assembly (See **INSTALLATION**).
64. **INSTALL CENTER EXHAUST PIPE ASSEMBLY**
 - a. Install center exhaust pipe assembly (See **INSTALLATION**).
65. **CONNECT ENGINE WIRE**
 - a. Install the 2 bolts and 2 ground cables.

Torque: 8.4 N*m (85 kgf*cm, 74 in.*lbf)

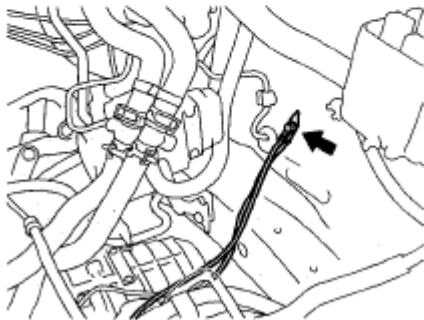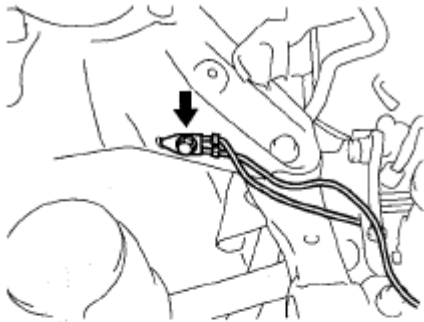

A163267

Fig. 145: Locating Bolts And Ground Cables
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Install the bolt and 2 clamps to the body.

Torque: 8.4 N*m (85 kgf*cm, 74 in.*lbf)



Fig. 146: Locating Bolt And Clamps On Body
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Connect the wire to the engine room junction block.

Then, install it with the nut.

Torque: 8.4 N*m (85 kgf*cm, 74 in.*lbf)

- d. Install the engine wire to the body with the 2 nuts.

Torque: 8.4 N*m (85 kgf*cm, 74 in.*lbf)

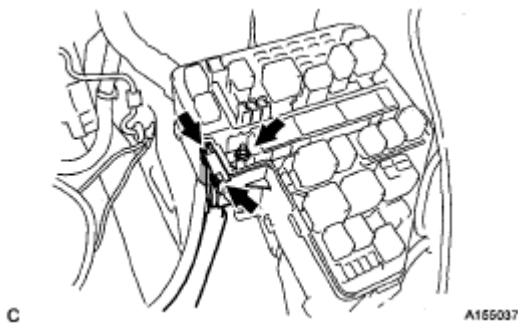


Fig. 147: Locating Wire Harness
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

66. CONNECT NO. 1 OIL RESERVOIR TO PUMP HOSE

- a. Using pliers, grip the claws of the clip and slide the clip to connect the No. 1 oil reservoir to pump hose to the oil reservoir tank.

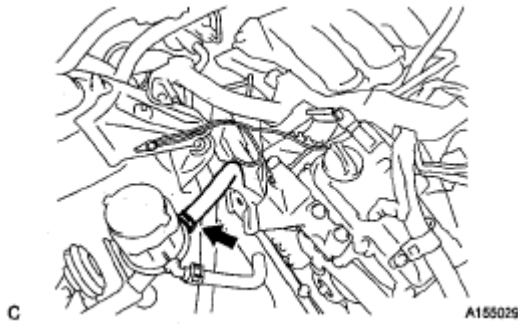


Fig. 148: Locating No. 1 Oil Reservoir To Pump Hose Clip
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

67. CONNECT RETURN TUBE SUB-ASSEMBLY

- a. Using pliers, grip the claws of the 2 clips and slide the 2 clips to connect 2 return tube sub-assemblies.

NOTE: Take care not to damage the hose protector.

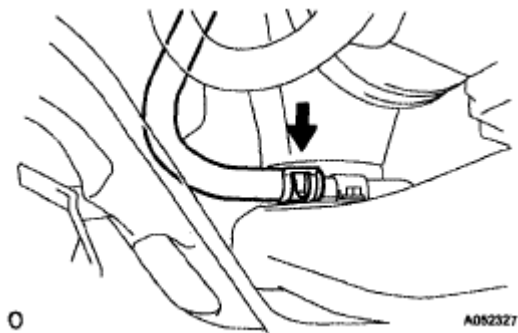


Fig. 149: Locating Steering Gear Outlet Return Tube
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

68. CONNECT TRANSMISSION CONTROL CABLE ASSEMBLY

- a. Connect the control cable to the control cable clamp.

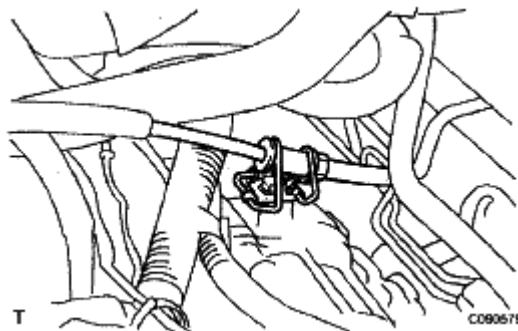


Fig. 150: Identifying Control Cable And Control Cable Clamp

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Install the transmission control cable assembly to the control shaft lever with the nut.

Torque: 12 N*m (122 kgf*cm, 9 ft.*lbf)

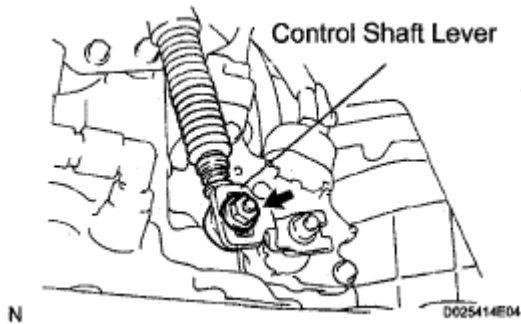


Fig. 151: Locating Control Shaft Lever With Nut

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Connect the transmission control cable assembly to the bracket with a new clip.

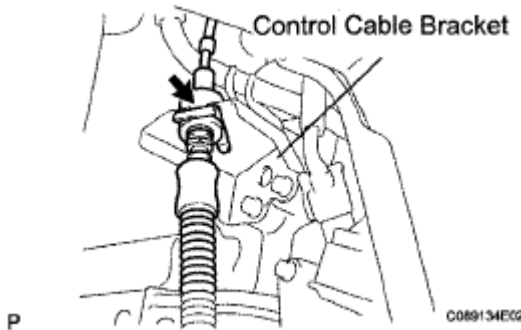


Fig. 152: Locating Control Cable Assembly Clip

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

69. CONNECT FUEL TUBE SUB-ASSEMBLY

- a. Push in the fuel tube connector to the fuel pipe until the fuel tube makes a "click" sound.

NOTE:

- Check for damage or contamination on the connected part of the pipe.
- Check if the pipe and the connector are securely connected by trying to pull them apart.

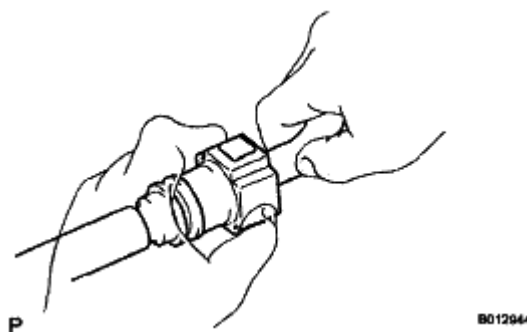


Fig. 153: Identifying Fuel Tube Connector
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Install the No. 1 fuel pipe clamp.

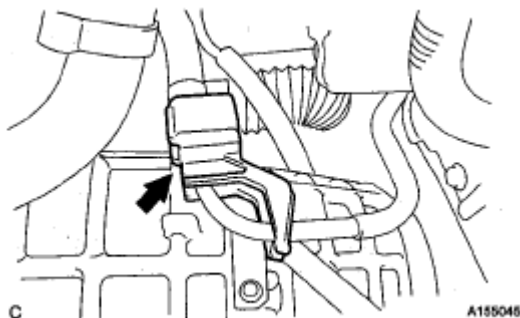


Fig. 154: Locating No. 1 Fuel Pipe Clamp
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

70. CONNECT NO. 1 OIL COOLER OUTLET HOSE

- a. Using pliers, grip the claws of the clip and slide the clip to connect the No. 1 oil cooler outlet hose to the No. 1 oil cooler outlet tube.

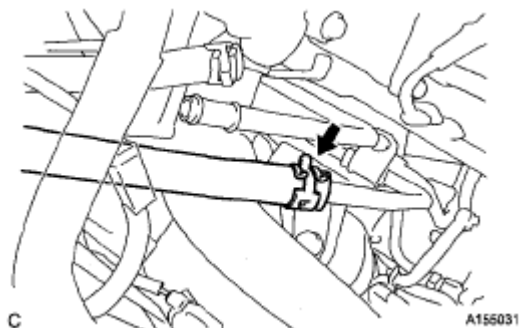


Fig. 155: Locating No. 1 Oil Cooler Outlet Hose Clip
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

71. CONNECT NO. 1 OIL COOLER INLET HOSE

- a. Using pliers, grip the claws of the clip and slide the clip to connect the No. 1 oil cooler inlet hose to the No. 1 oil cooler inlet tube.

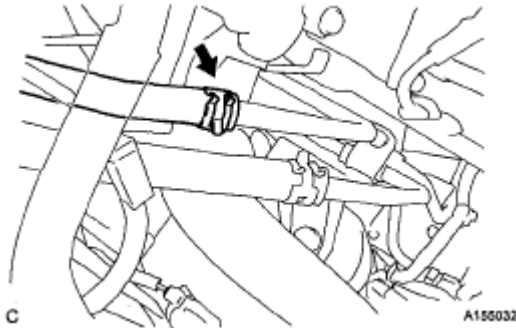


Fig. 156: Locating No. 1 Oil Cooler Inlet Hose Clip
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

72. CONNECT HEATER WATER INLET HOSE B

- a. Using pliers, grip the claws of the clip and slide the clip to connect the heater water inlet hose to water outlet.

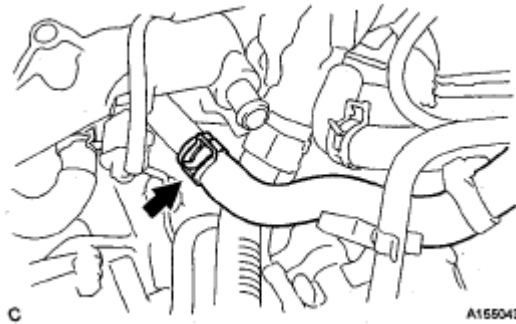


Fig. 157: Locating Heater Water Inlet Hose Clip
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

73. CONNECT HEATER WATER OUTLET HOSE B

- a. Using pliers, grip the claws of the clip and slide the clip to connect the heater water outlet hose to water outlet.

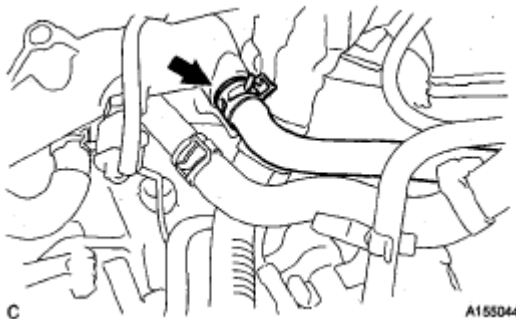


Fig. 158: Locating Heater Water Outlet Hose Clip

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

74. INSTALL RADIATOR INLET HOSE

- a. Using pliers, grip the claws of the clip and slide the clip to connect the radiator inlet hose to the water outlet.

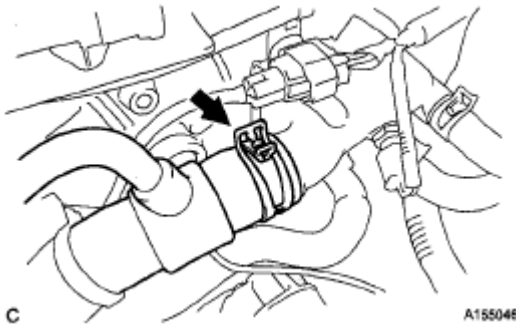


Fig. 159: Locating Radiator Inlet Hose Clip

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

75. INSTALL RADIATOR OUTLET HOSE

- a. Using pliers, grip the claws of the clip and slide the clip to connect the radiator outlet hose to the water inlet.

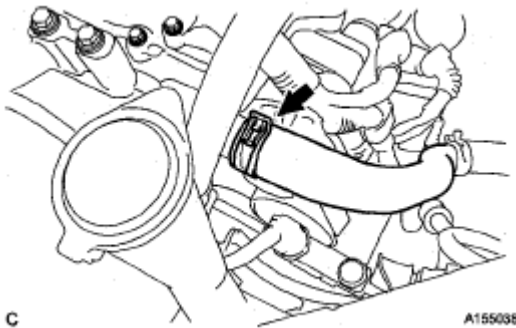


Fig. 160: Locating Radiator Outlet Hose Clip

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

76. CONNECT UNION TO CHECK VALVE HOSE

- a. Using pliers, grip the claws of the clip and slide the clip to connect the union to check valve hose to the intake air surge tank assembly.

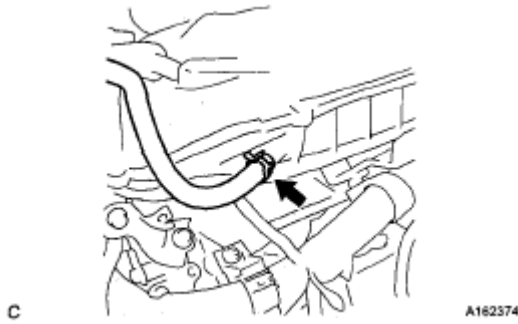


Fig. 161: Locating Union To Check Valve Hose Clip
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

77. CONNECT NO. 1 FUEL VAPOR FEED HOSE

- a. Install the clamp and connect the No. 1 fuel vapor feed hose.



Fig. 162: Locating No. 1 Fuel Vapor Feed Hose Clamp
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

78. INSTALL ENGINE MOVING CONTROL ROD

- a. Temporarily install the engine moving control rod with the 3 bolts.
- b. First install the bolts A, and then the remaining bolt B.

Torque: 38 N*m (388 kgf*cm, 28 ft.*lbf)

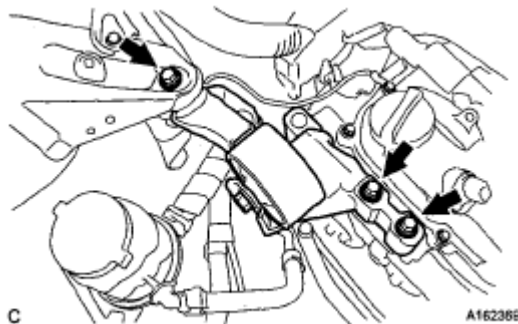


Fig. 163: Locating Bolts On Engine Moving Control Rod
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

79. INSTALL NO. 2 ENGINE MOUNTING STAY RH

- a. Temporarily install the No. 2 engine mounting stay RH with the bolt.

Torque: 38 N*m (388 kgf*cm, 28 ft.*lbf)

- b. Tighten the 2 nuts.

Torque: 23 N*m (235 kgf*cm, 17 ft.*lbf)

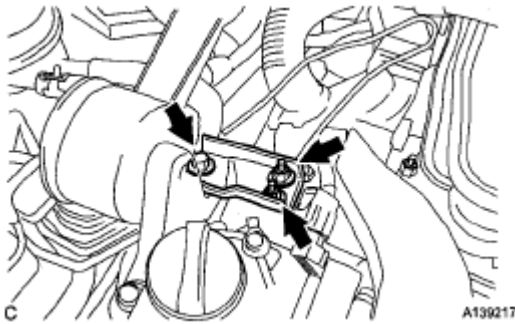


Fig. 164: Locating Nuts On No. 2 Engine Mounting Stay RH
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

80. INSTALL INTAKE AIR RESONATOR SUB-ASSEMBLY

- a. Install the intake air resonator with the bolt and clip.

Torque: 5.0 N*m (51 kgf*cm, 44 in.*lbf)

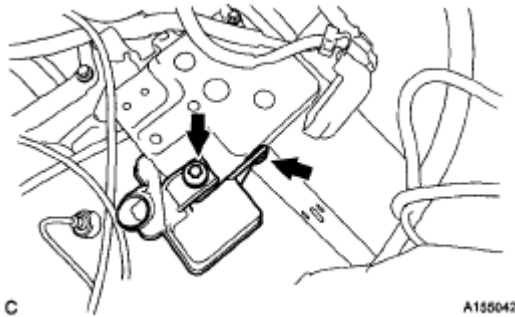


Fig. 165: Locating Clip And Bolt On Intake Air Resonator
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

81. INSTALL AIR CLEANER BRACKET

- a. Remove the 2 bolts and air cleaner bracket.

Torque: 12 N*m (122 kgf*cm, 9 ft.*lbf)

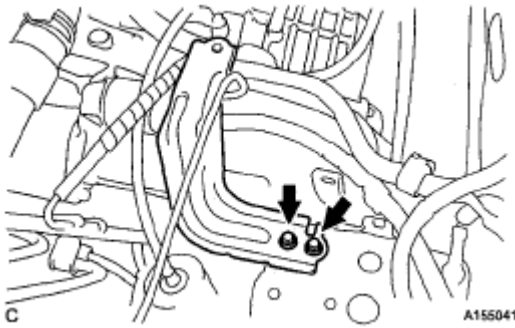


Fig. 166: Locating Bolts For Air Cleaner Bracket
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

82. INSTALL BATTERY

- Install the battery and battery tray.
- Install the battery clamp with the bolt and nut.

Torque: Bolt 9.0 N*m (92 kgf*cm, 80 in.*lbf)

Nut 3.5 N*m (36 kgf*cm, 31 in.*lbf)

- Connect the positive battery terminal.
- Connect the negative battery terminal.

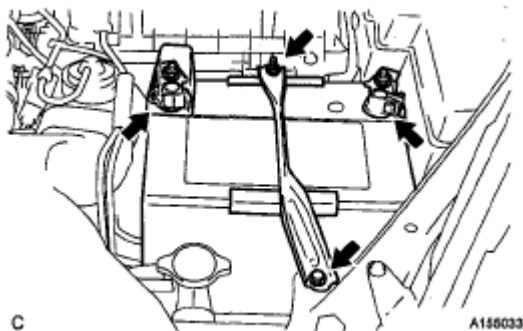


Fig. 167: Locating Bolts On Battery And Battery Tray
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

83. INSTALL AIR CLEANER CASE SUB-ASSEMBLY

- Install the air cleaner case with the 3 bolts.

Torque: 5.0 N*m (51 kgf*cm, 44 in.*lbf)

- Connect the vacuum hose.
- Connect the vacuum switching valve connector.

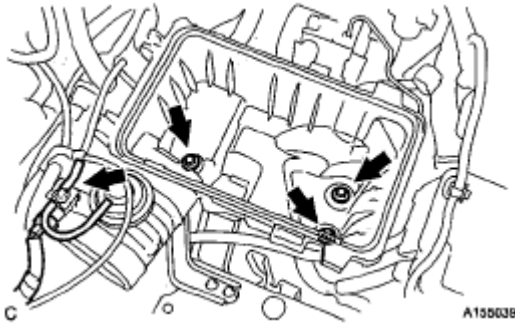


Fig. 168: Locating Bolts On Air Cleaner Case
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

84. **INSTALL AIR CLEANER FILTER ELEMENT SUB-ASSEMBLY**
 - a. Install the air cleaner filter element sub-assembly.
85. **INSTALL AIR CLEANER CAP SUB-ASSEMBLY** (See **INSTALLATION**)
86. **INSTALL NO. 1 AIR CLEANER INLET**
 - a. Install the No. 1 air cleaner inlet with the bolt.

Torque: 7.0 N*m (71 kgf*cm, 62 in.*lbf)

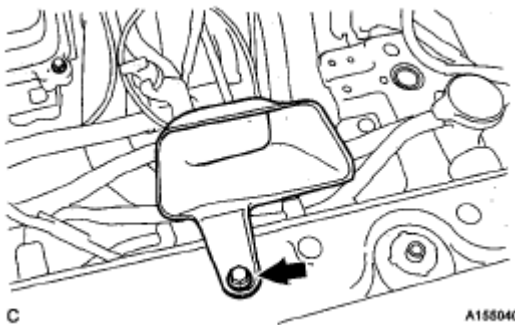


Fig. 169: Locating Bolt On No. 1 Air Cleaner Inlet
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

87. **INSTALL NO. 2 AIR CLEANER INLET**
 - a. Install the No. 2 air cleaner inlet with the 2 clamps and 2 bolts.

Torque: 7.0 N*m (71 kgf*cm, 62 in.*lbf)

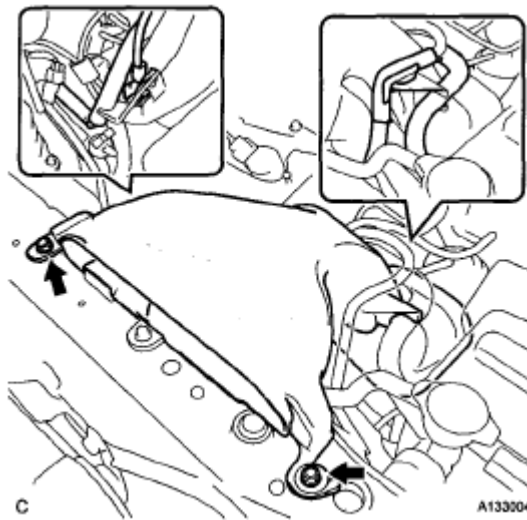


Fig. 170: Locating Bolts On No. 2 Air Cleaner Inlet
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

88. CONNECT VACUUM HOSES

Vacuum Hose Routing Diagram

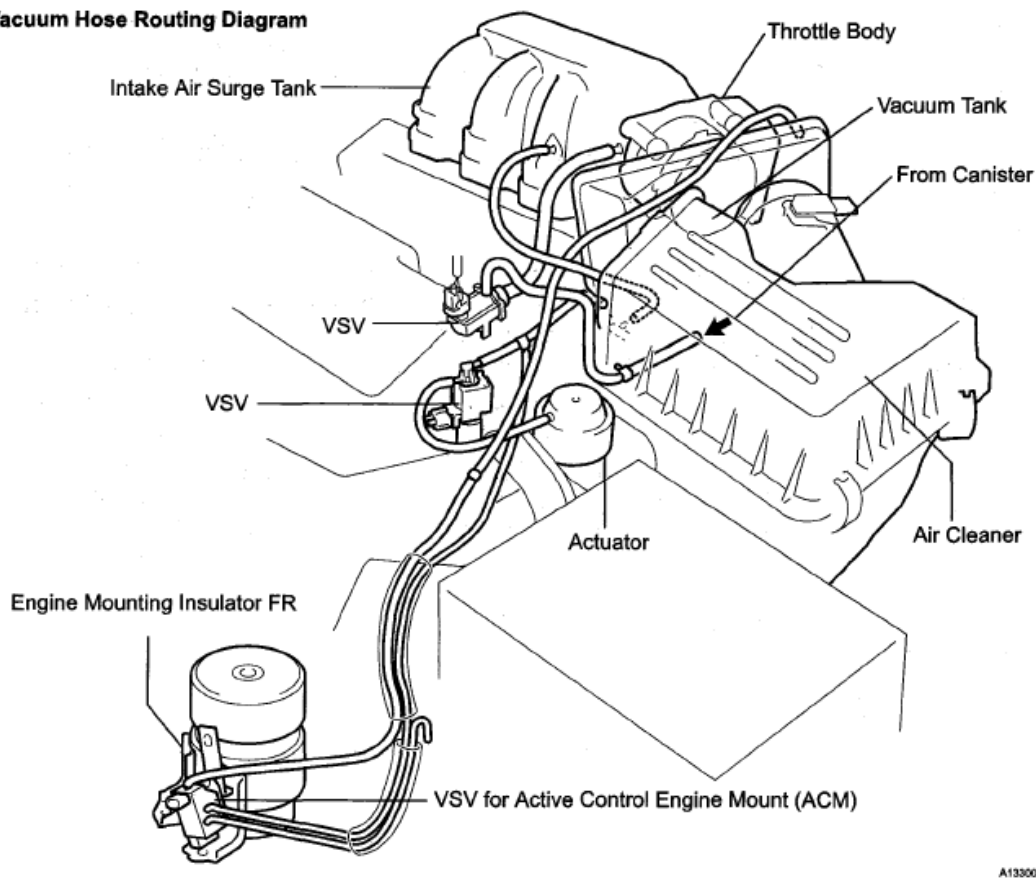


Fig. 171: Vacuum Hoses Routing Diagram
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

89. **INSTALL V-RIBBED BELT** (See **INSTALLATION**)
90. **INSTALL FRONT OUTER COWL TOP PANEL SUB-ASSEMBLY**
 - a. Install the front outer cowl top panel sub-assembly with the 7 bolts.

Torque: 7.5 N*m (76 kgf*cm, 66 in.*lbf)

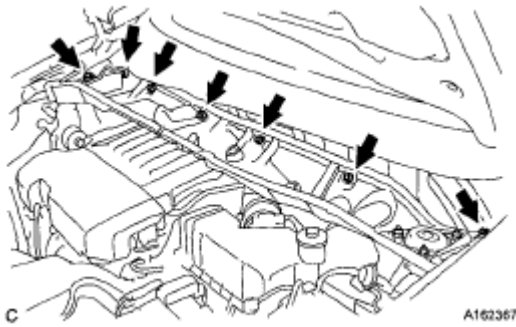


Fig. 172: Locating Bolts On Front Outer Cowl Top Panel Sub-Assembly
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Install the 2 clips.
- c. Install the fuel pump resistor with the nut.

Torque: 7.5 N*m (76 kgf*cm, 66 in.*lbf)

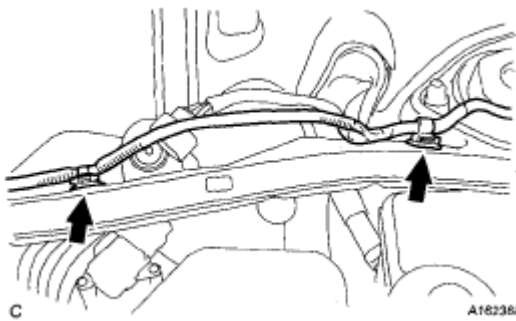


Fig. 173: Locating Clips For Engine Wire
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

91. **INSTALL NO. 1 COWL TOP TO COWL BRACE INNER**
 - a. Install the No. 1 cowl top to cowl brace inner.

Torque: 7.5 N*m (76 kgf*cm, 66 in.*lbf)

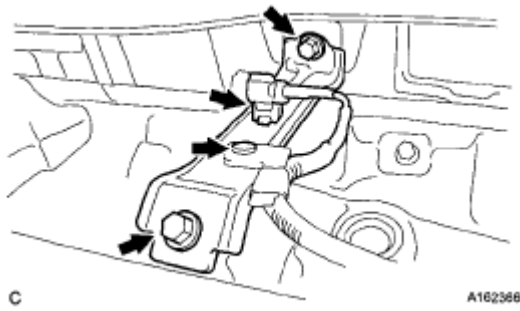


Fig. 174: Locating No. 1 Cowl Top To Cowl Brace Inner Bolts And Clips
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

92. **INSTALL FRONT WIPER MOTOR AND LINK (See INSTALLATION)**

93. **INSTALL COWL TOP VENTILATOR LOUVER SUB-ASSEMBLY**

- a. Push the ventilator louver in the direction indicated by the arrow in the illustration. Attach the 6 claws to install the ventilator louver.

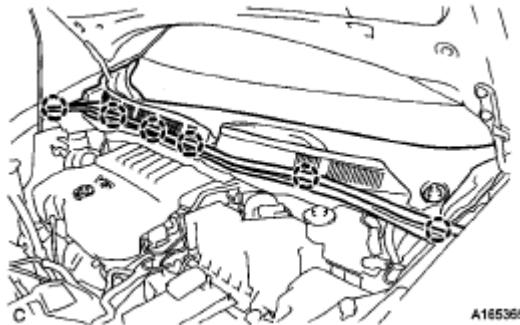


Fig. 175: Locating Cowl Top Ventilator Louver Sub-Assembly
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

94. **INSTALL WINDSHIELD WIPER ARM AND BLADE ASSEMBLY LH (See INSTALLATION)**

95. **INSTALL WINDSHIELD WIPER ARM AND BLADE ASSEMBLY RH (See INSTALLATION)**

96. **INSTALL FRONT WIPER ARM HEAD CAP**

- a. Install the front wiper arm head caps.

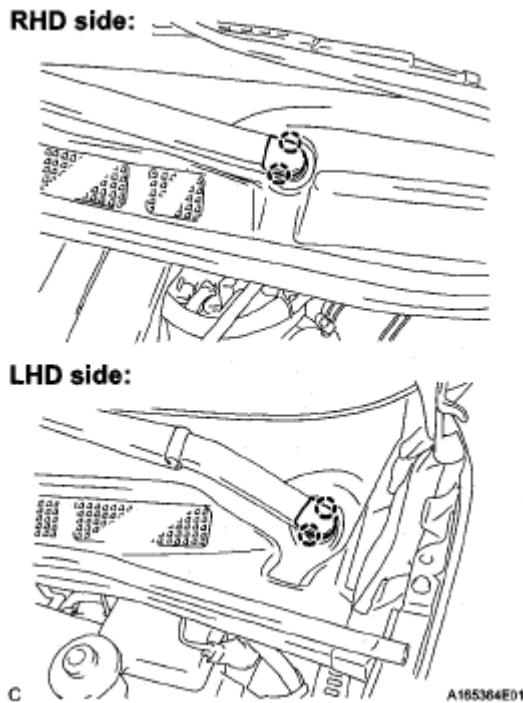


Fig. 176: Locating Front Wiper Arm Head Caps
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

97. INSTALL FRONT WHEELS

Torque: 103 N*m (1050 kgf*cm, 76 ft.*lbf)

- 98. ADD ENGINE OIL (See REPLACEMENT)**
- 99. ADD ENGINE COOLANT (See REPLACEMENT)**
- 100. ADD AUTOMATIC TRANSAXLE FLUID**
- 101. CHECK AUTOMATIC TRANSAXLE FLUID (See ON-VEHICLE INSPECTION)**
- 102. ADD POWER STEERING FLUID**
- 103. BLEED POWER STEERING FLUID (See BLEEDING)**
- 104. INSPECT FOR FUEL LEAK (See ON-VEHICLE INSPECTION)**
- 105. INSPECT FOR ENGINE OIL LEAK**
- 106. INSPECT FOR ENGINE COOLANT LEAK (See ON-VEHICLE INSPECTION)**
- 107. INSPECT FOR EXHAUST GAS LEAK**
- 108. CHECK SHIFT LEVER POSITION (See INSPECTION)**
- 109. CHECK AND ADJUST FRONT WHEEL ALIGNMENT**

HINT:

(See ADJUSTMENT).

- 110. **CHECK IGNITION TIMING** (See ON-VEHICLE INSPECTION)
- 111. **CHECK ENGINE IDLE SPEED** (See ON-VEHICLE INSPECTION)
- 112. **CHECK CO/HC** (See ON-VEHICLE INSPECTION)
- 113. **CHECK FUNCTION OF THROTTLE BODY ASSEMBLY** (See ON-VEHICLE INSPECTION)
- 114. **INSTALL FRONT FENDER APRON SEAL RH**
 - a. Install the front fender apron seal RH with the 2 bolts and clip.

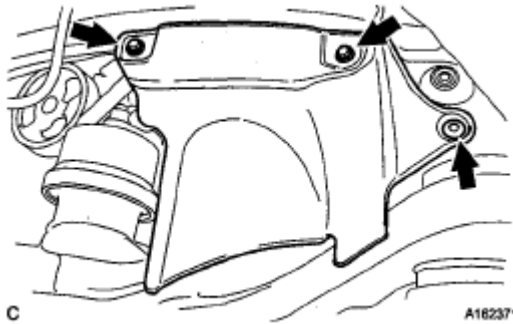


Fig. 177: Locating Bolts And Clip For Front Fender Apron Seal RH
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- 115. **INSTALL FRONT FENDER APRON SEAL LH**
 - a. Install the front fender apron seal LH with the 2 bolts and clip.

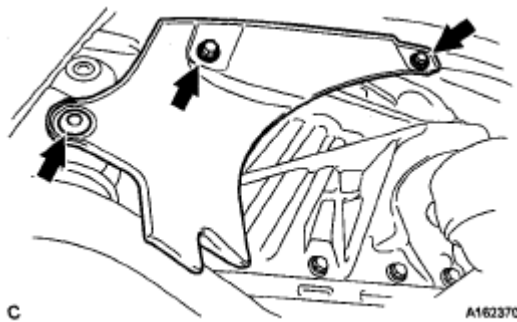


Fig. 178: Locating Bolts And Clip For Front Fender Apron Seal LH
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- 116. **INSTALL NO. 1 ENGINE UNDER COVER ASSEMBLY**
 - a. Install the No. 1 engine under cover sub-assembly with the 8 bolts and 4 clips.

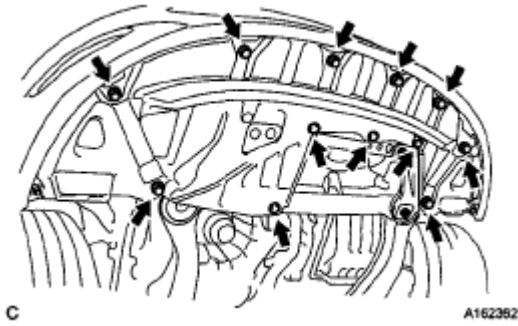


Fig. 179: Locating No. 1 Engine Under Cover Assembly Bolts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

117. INSTALL V-BANK COVER SUB-ASSEMBLY

- a. Fit the 3 retainers and install the V-bank cover.

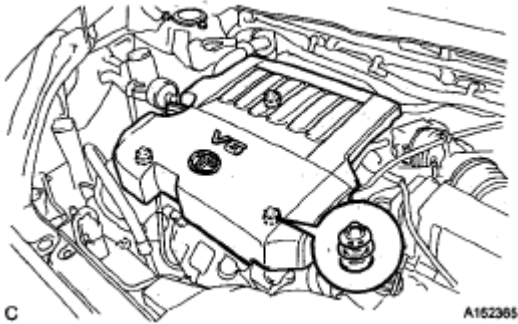


Fig. 180: Identifying Clip On Rear Of Cover
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

118. CHECK ABS SPEED SENSOR SIGNAL

TEST MODE PROCEDURE

119. RESET MEMORY

HINT:

See **INITIALIZATION** .

ENGINE UNIT

COMPONENTS

This diagram illustrates the assembly of the cylinder head cover sub-assembly and the oil control valve assembly. The components are shown in their relative positions as they would be installed on the engine block.


- Cylinder Head Cover Sub-Assembly:** The main component being installed, shown in an exploded view.
- Camshaft Timing Oil Control Valve Assembly:** Located at the top of the diagram, it includes:
 - Spark Plug (18 (184, 13)) x 3:** Three spark plugs are shown being installed into the cylinder head cover.
 - O-Ring:** Two O-rings are shown being installed into the valve assembly.
 - Seal Washer (21 (214, 15)):** One seal washer is shown being installed into the valve assembly.
- Camshaft Position Sensor:** Two sensors are shown being installed into the cylinder head cover. One is labeled **10 (102, 7)** and the other is labeled **10 (102, 7)**.
- Cylinder Head Cover Gasket:** A large rectangular gasket is shown being installed between the cylinder head cover and the engine block.
- Oil Pipe:** A curved pipe is shown being installed into the engine block.
- Oil Control Valve Filter RH (65 (663, 48)):** A filter is shown being installed into the oil pipe.
- Gaskets:** Several gaskets are shown being installed into the oil pipe and the engine block.

The diagram uses dashed lines to indicate the assembly path and the location of each component. The engine block is shown at the bottom right, and the cylinder head cover is shown in the center.

N*m (kgf*cm, ft.*lbf): Specified torque ● Non-reusable part

A132493E08

© 2011 Mitchell Repair Information Company, LLC.

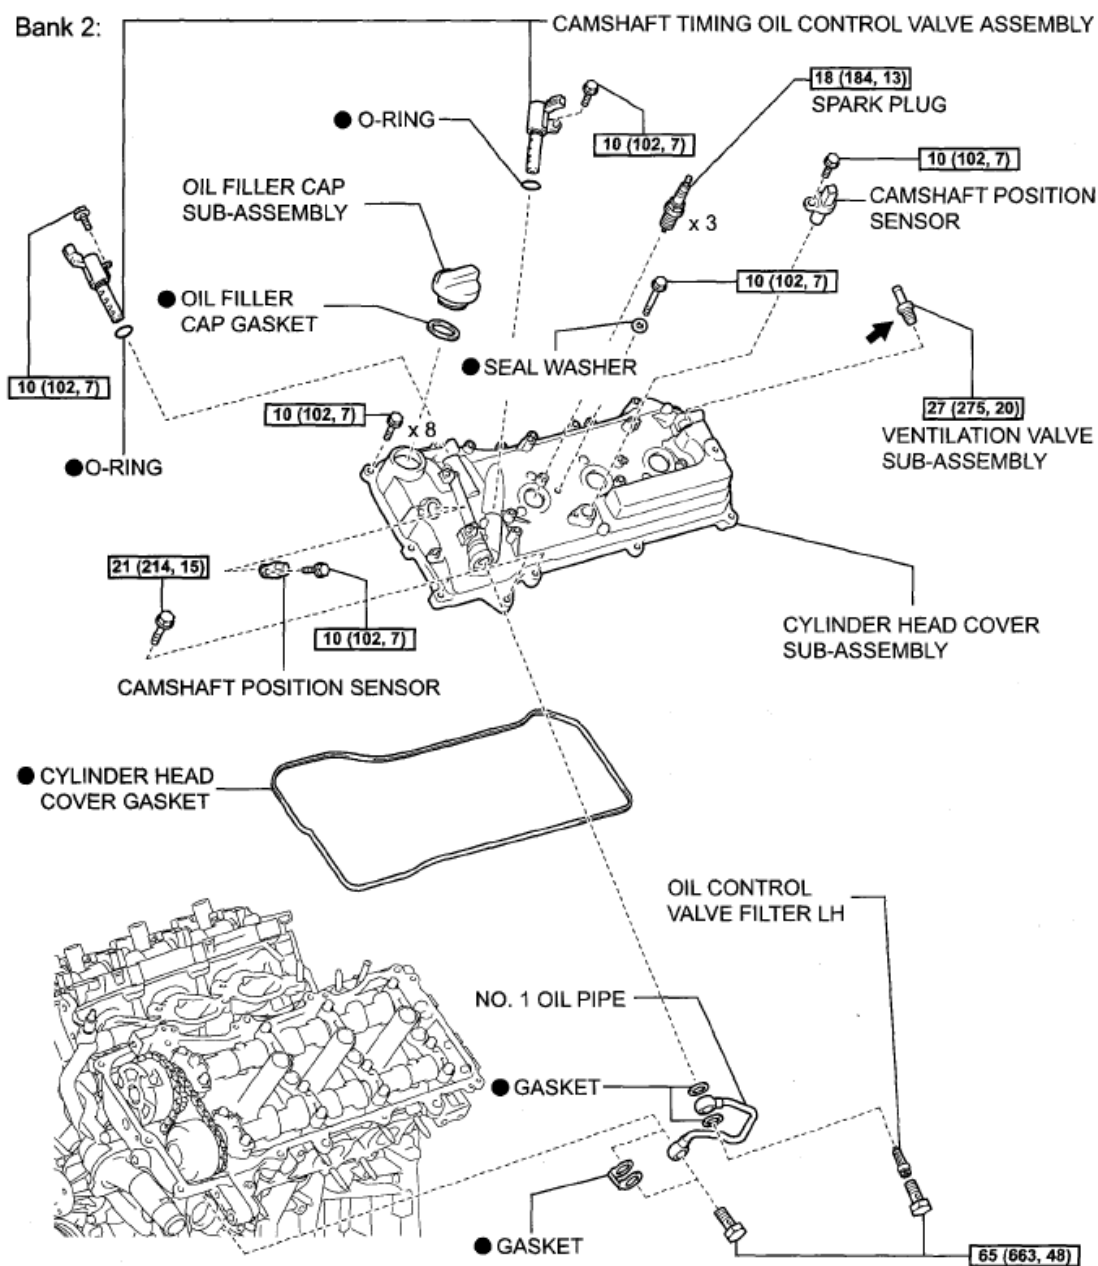


[N*m (kgf*cm, ft.*lbf)]: Specified torque

● Non-reusable part

◀ Precoated part


A132484E06

 Fig. 182: Identifying Engine Unit Components With Torque Specifications (2 Of 12)
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.



A13526GE04

domingo, 8 de diciembre de 2019 10:44:07 p. m.

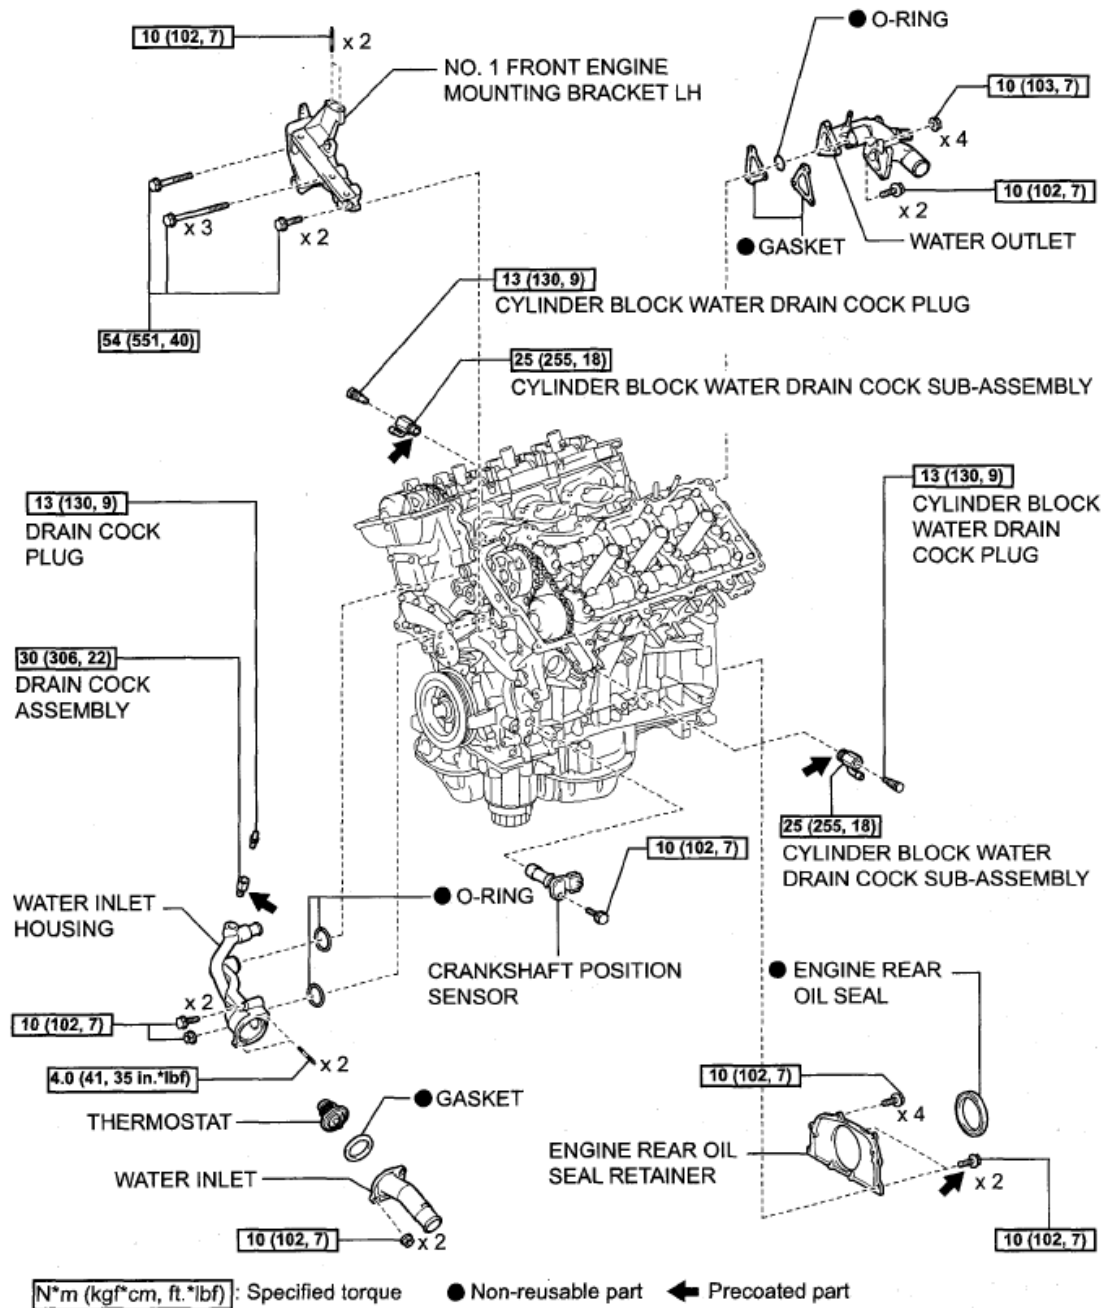

A132405E06

Fig. 184: Identifying Engine Unit Components With Torque Specifications (4 Of 12)
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

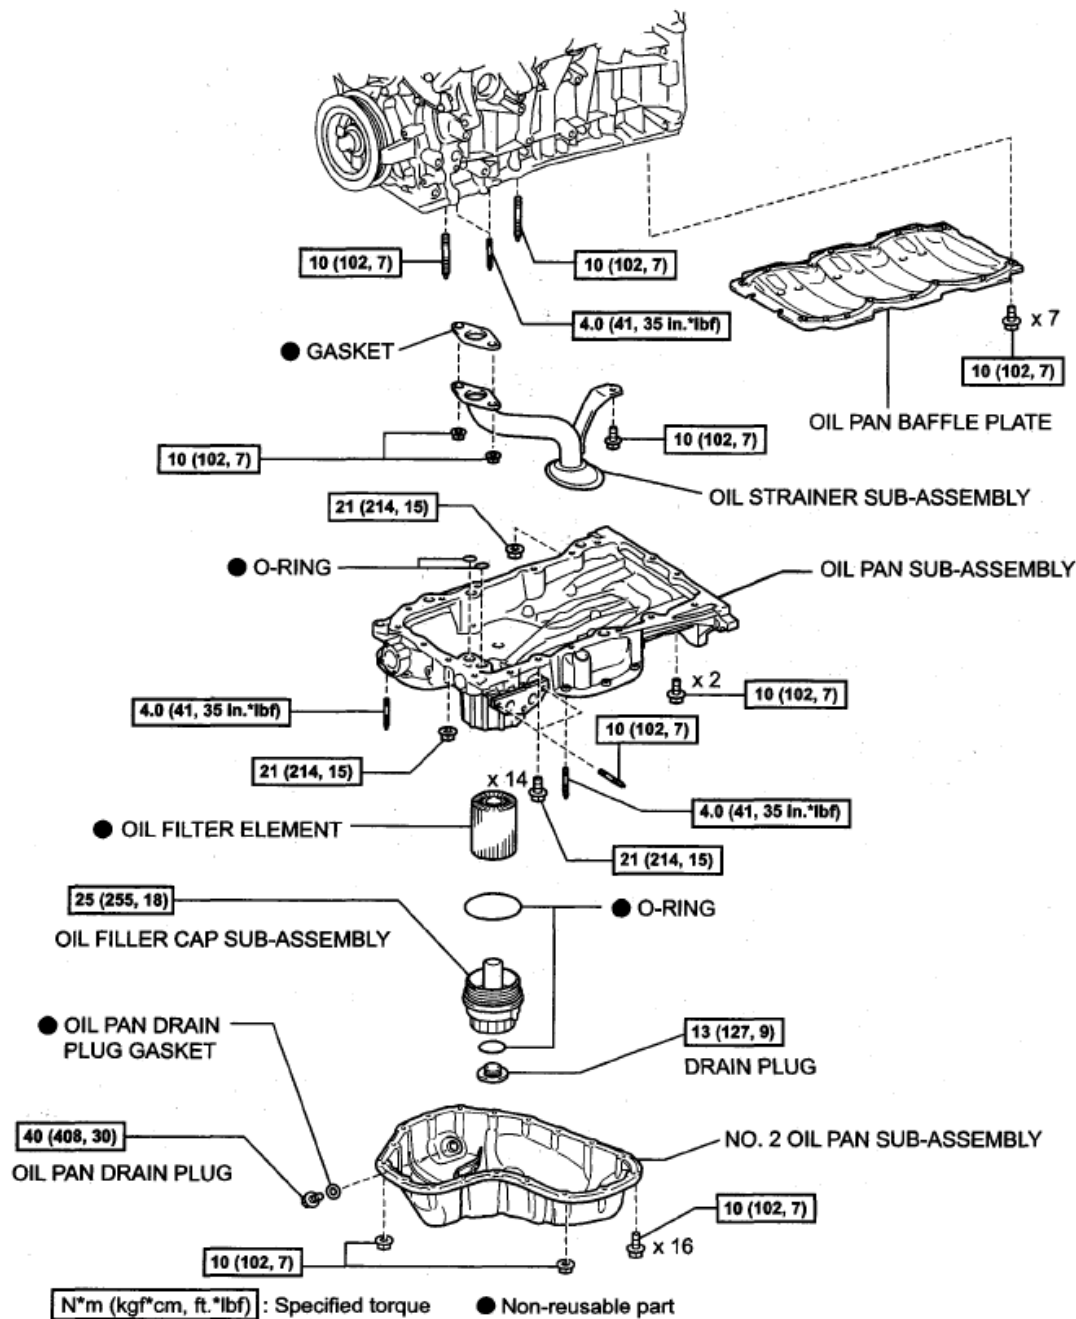


Fig. 185: Identifying Engine Unit Components With Torque Specifications (5 Of 12)
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


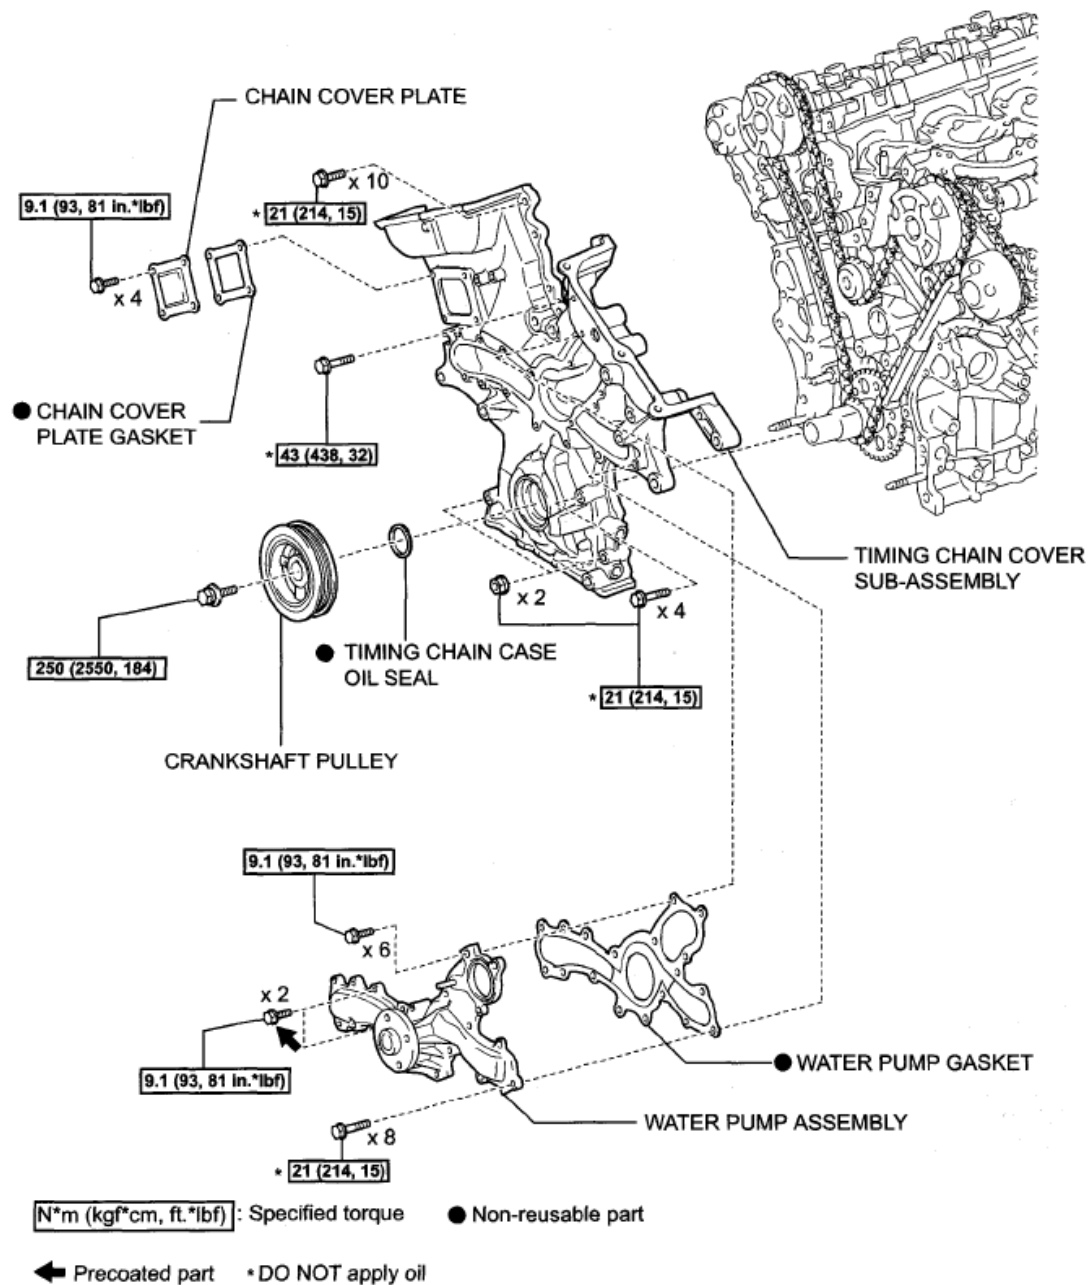


Fig. 186: Identifying Engine Unit Components With Torque Specifications (6 Of 12)
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

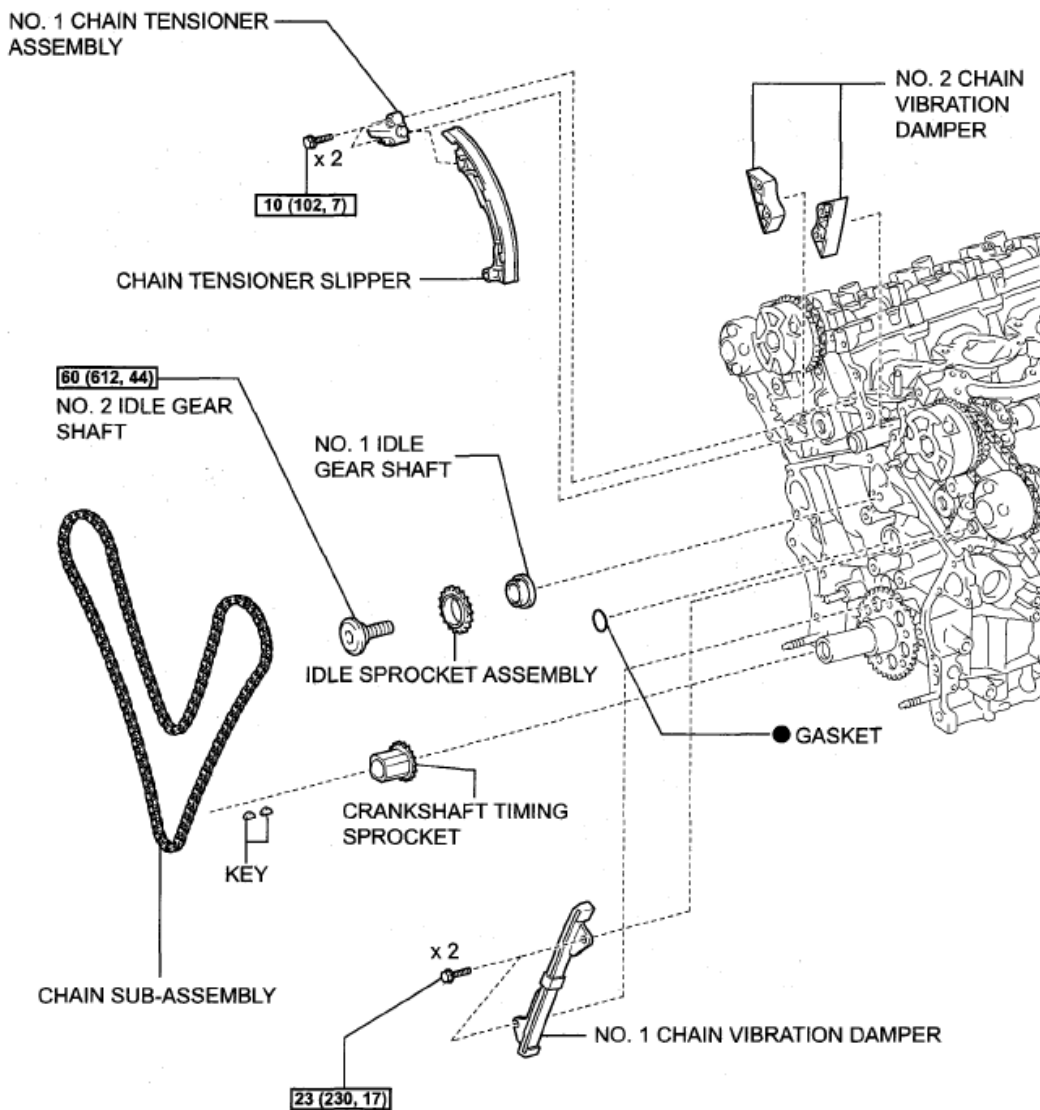


N*m (kgf*cm, ft.*lbf) : Specified torque ● Non-reusable part

A132498E09

Fig. 187: Identifying Engine Unit Components With Torque Specifications (7 Of 12)
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

Bank 1:

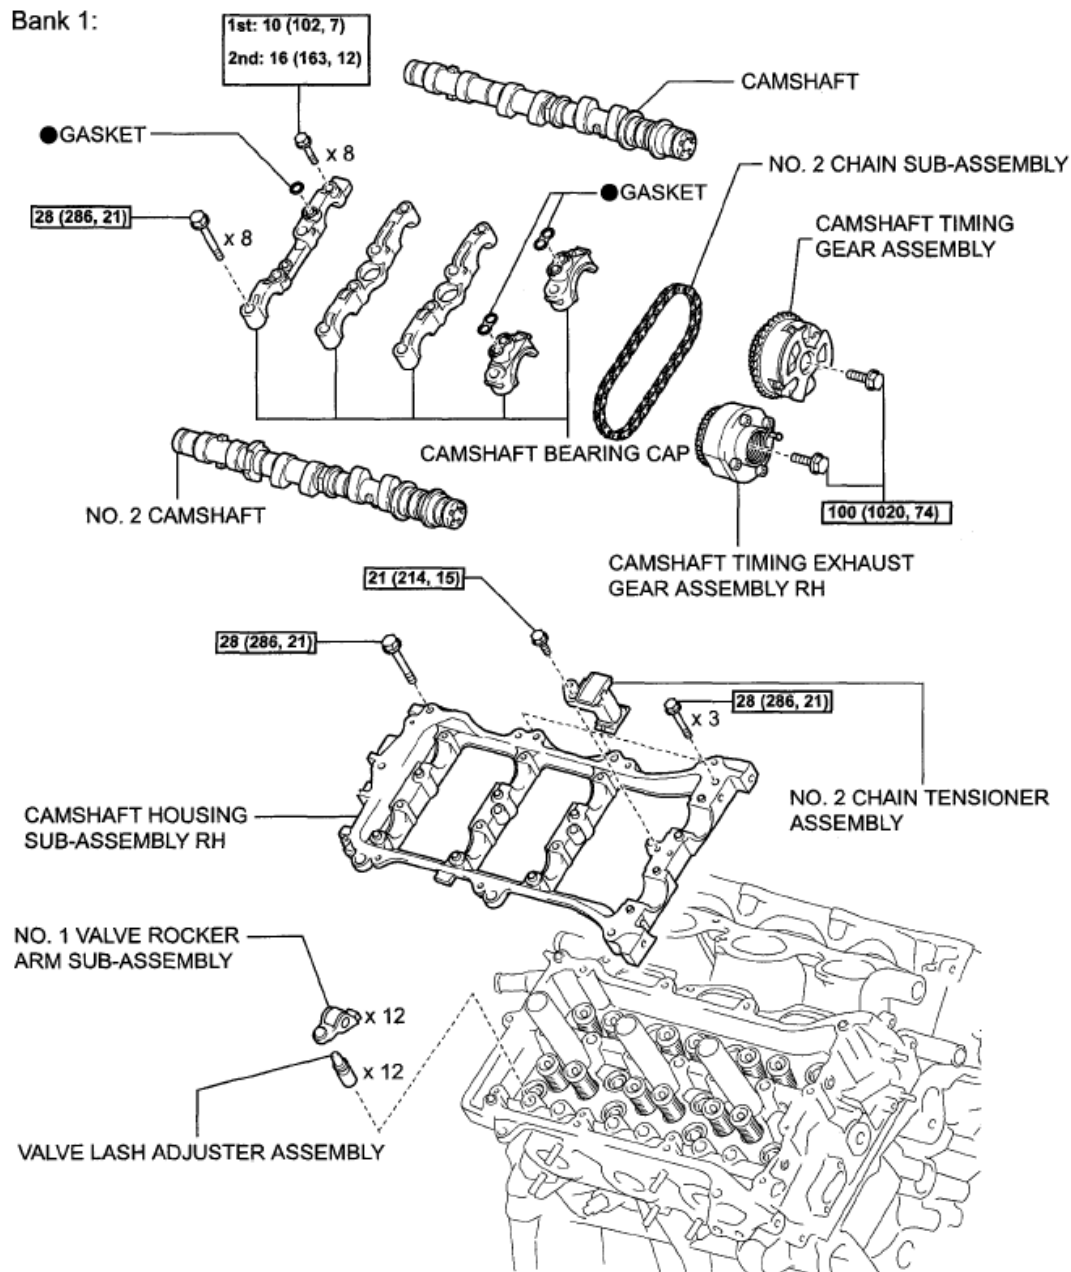

[N*m (kgf*cm, ft.*lbf)]: Specified torque

● Non-reusable part

P

A132499E10

Fig. 188: Identifying Engine Unit Components With Torque Specifications (8 Of 12)
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

Bank 2:


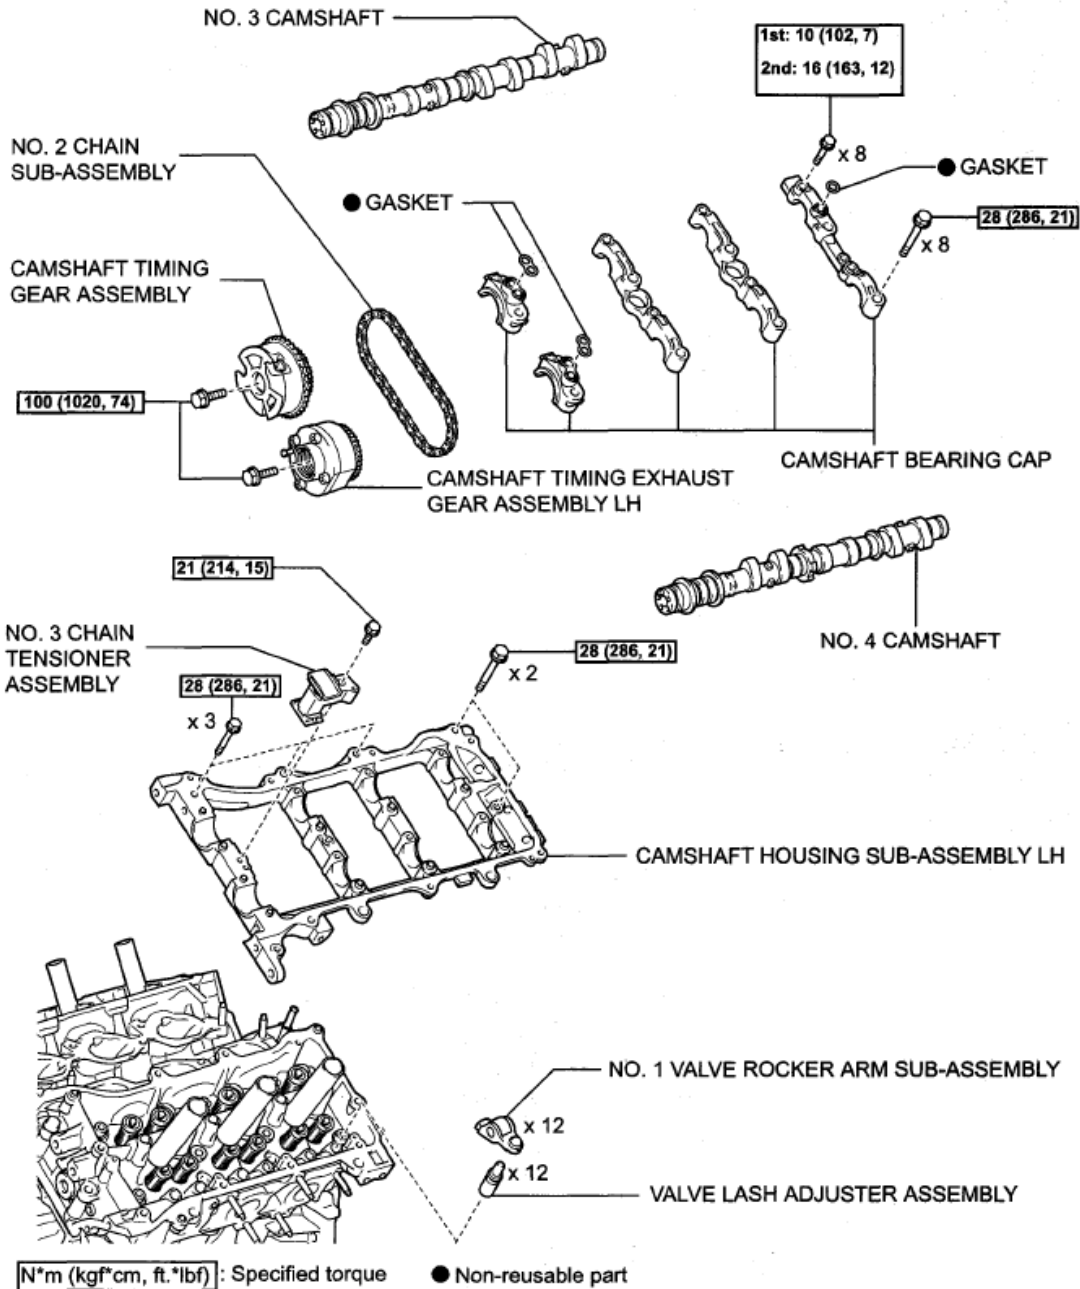



Fig. 189: Identifying Engine Unit Components With Torque Specifications (9 Of 12)
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

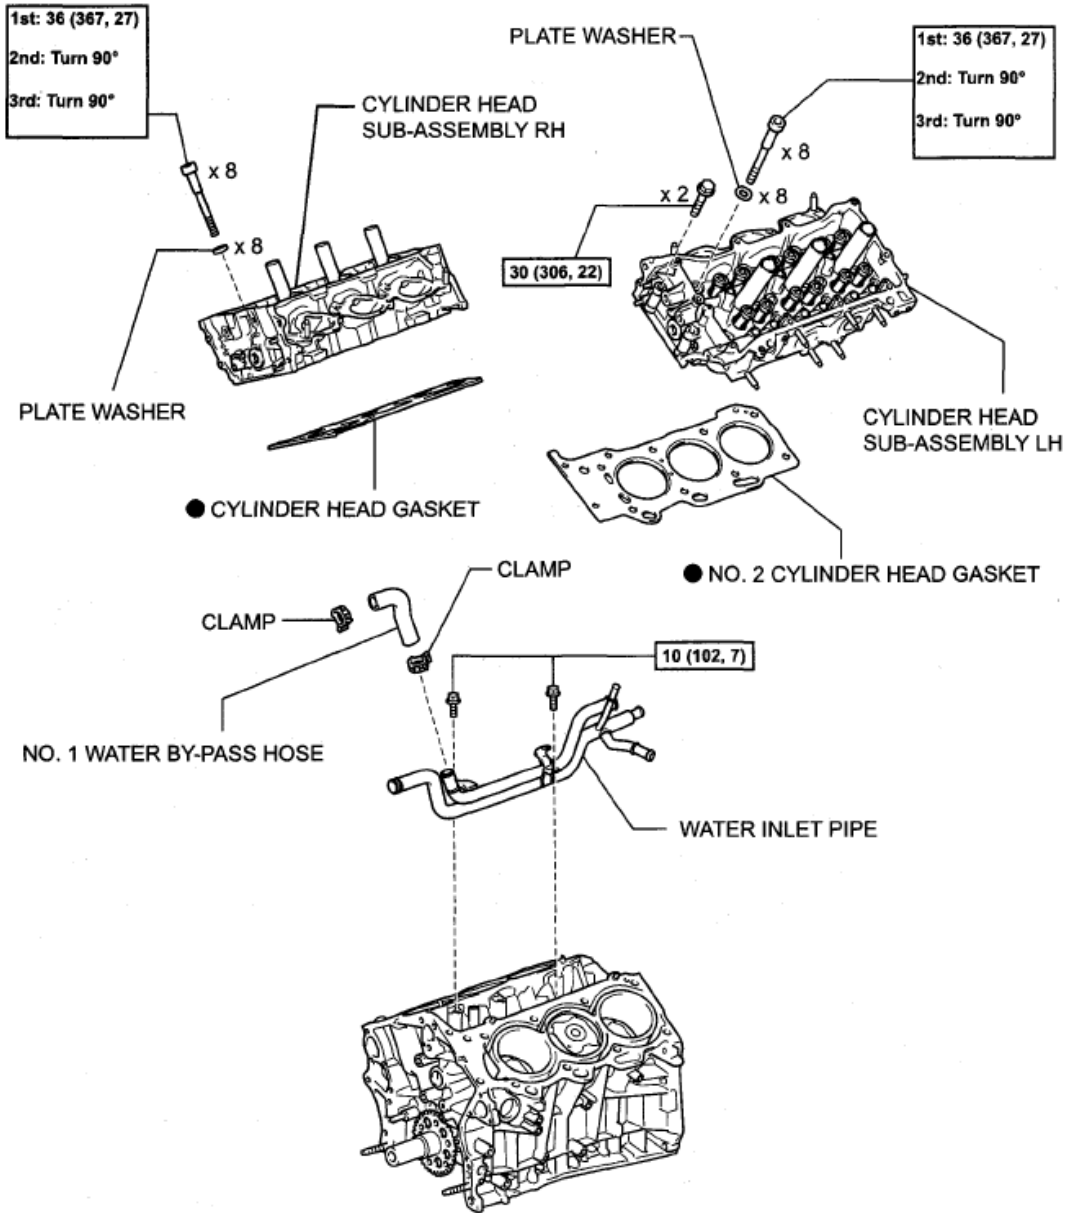

N

A162203E01

Fig. 190: Identifying Engine Unit Components With Torque Specifications (10 Of 12)
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

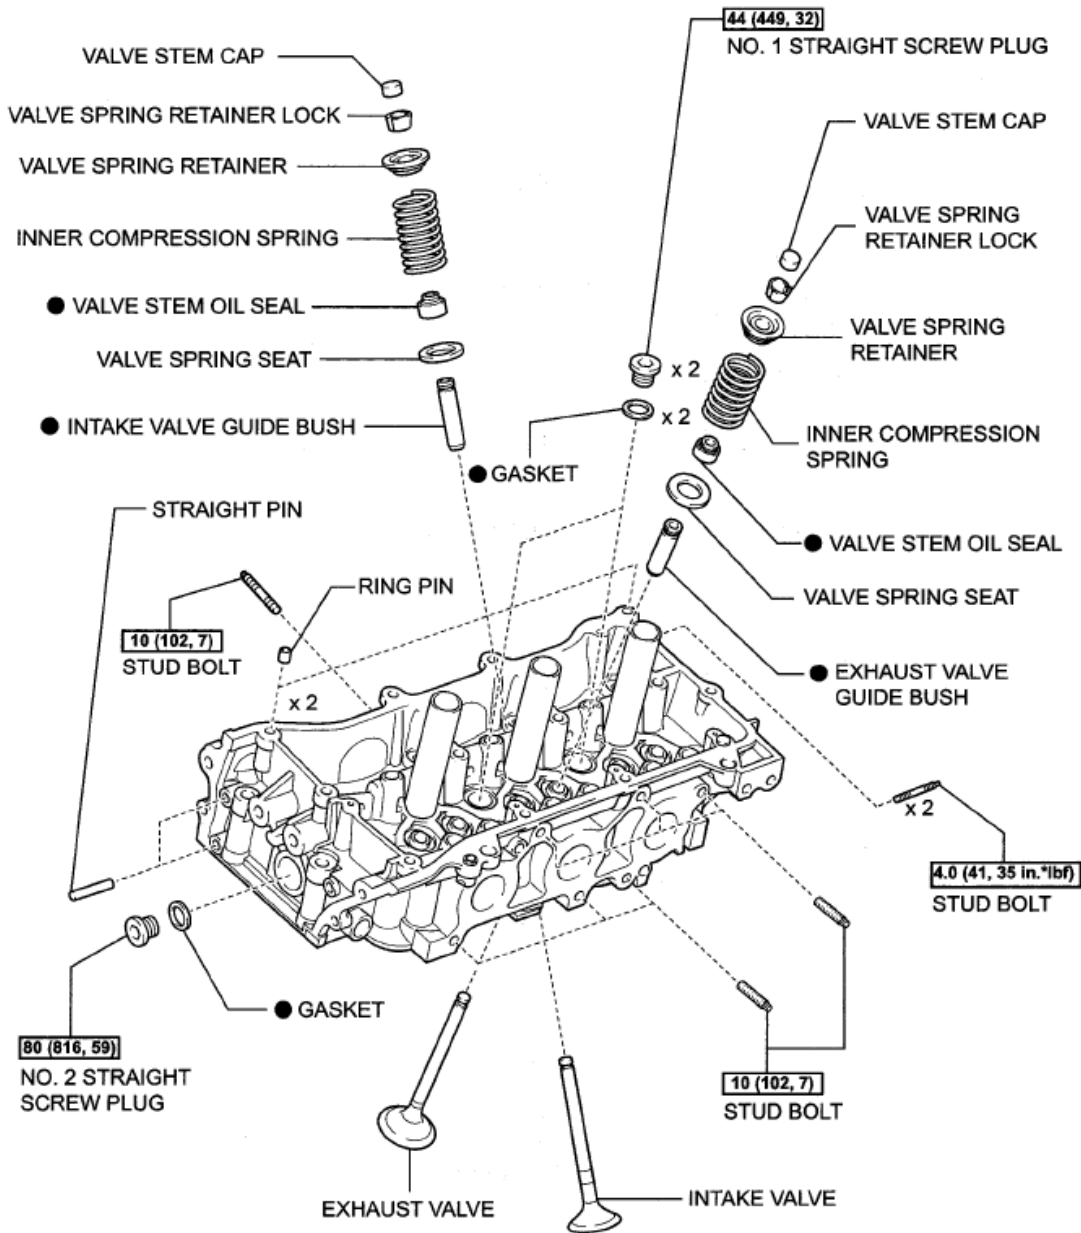

N*m (kgf*cm, ft.*lbf) : Specified torque ● Non-reusable part

A132502E09

Fig. 191: Identifying Engine Unit Components With Torque Specifications (11 Of 12)
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

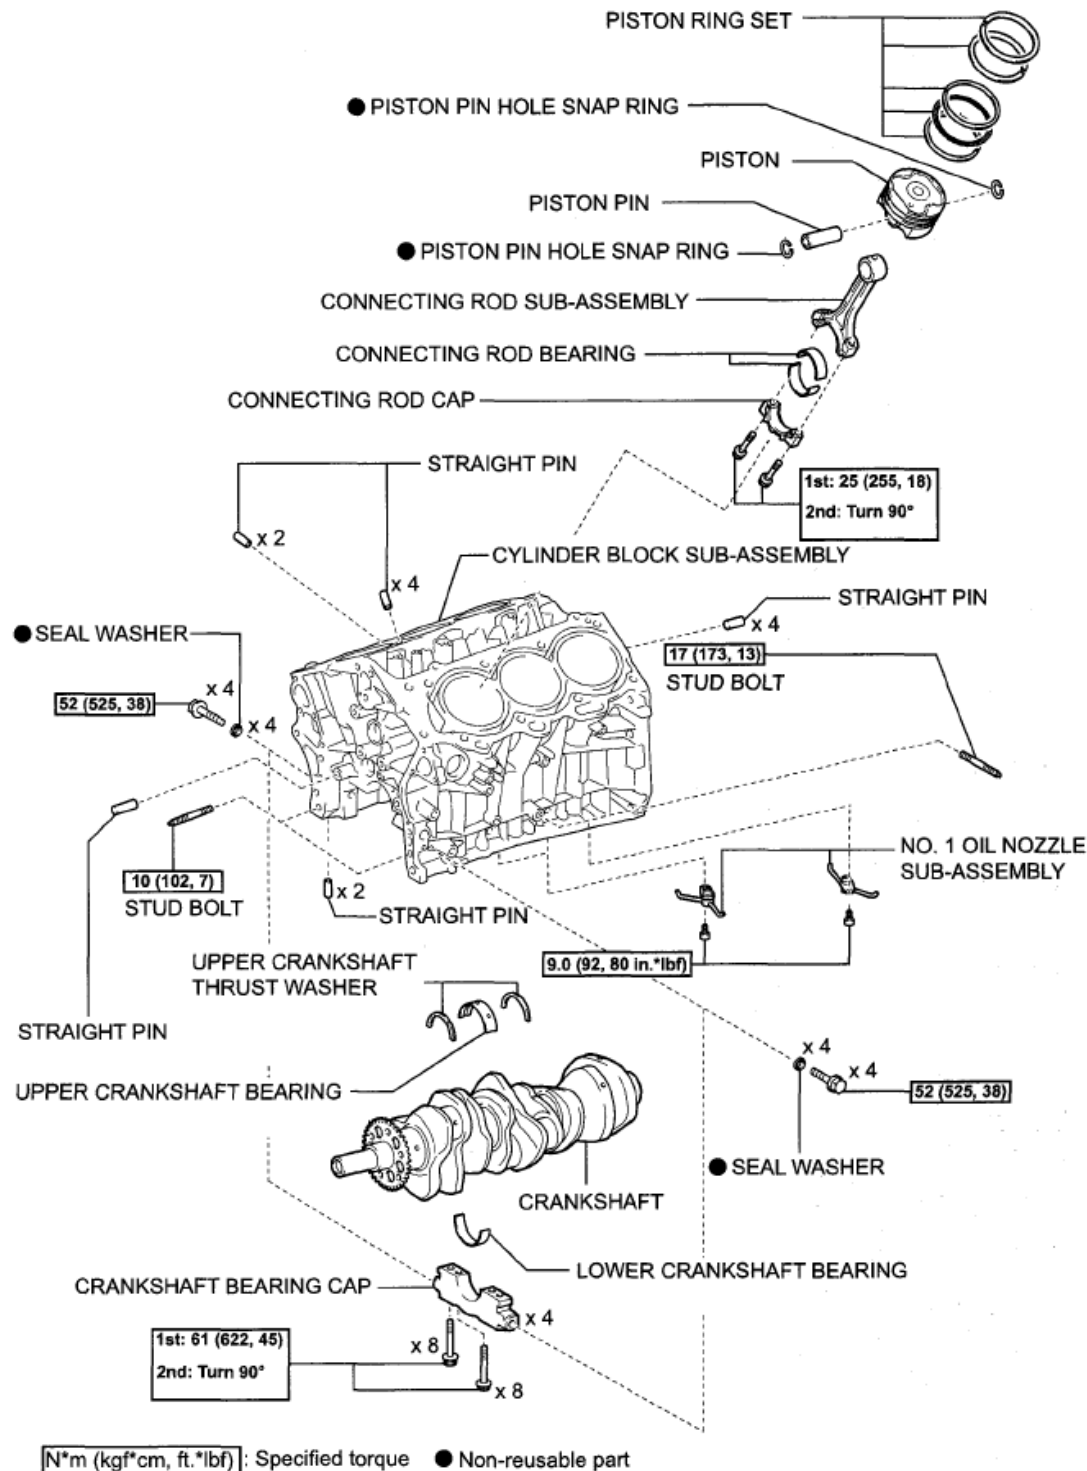


Fig. 192: Identifying Engine Unit Components With Torque Specifications (12 Of 12)
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

DISASSEMBLY

CAUTION: For additional information on timing chain/gear removal guidelines, installation and camshaft timing gear alignment, see 2GR-FE VALVE TIMING PROCEDURE.

1. REMOVE OIL FILLER CAP SUB-ASSEMBLY

- a. Remove the oil filler cap sub-assembly and oil filler gasket.

2. REMOVE SPARK PLUG

- a. Remove the spark plugs.

3. REMOVE OIL PAN DRAIN PLUG

- a. Remove the oil pan drain plug and oil pan drain plug gasket.

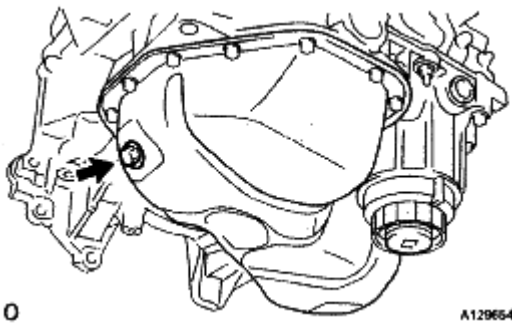


Fig. 193: Locating Oil Pan Drain Plug

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

4. REMOVE VENTILATION VALVE SUB-ASSEMBLY

- a. Remove the ventilation valve sub-assembly.

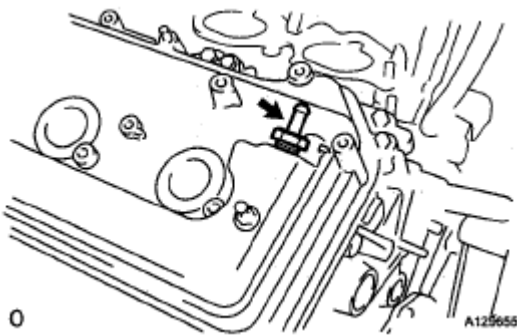


Fig. 194: Locating Ventilation Valve Sub-Assembly

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

5. REMOVE CAMSHAFT POSITION SENSOR

- a. Remove the 4 bolts and 4 camshaft position sensors.

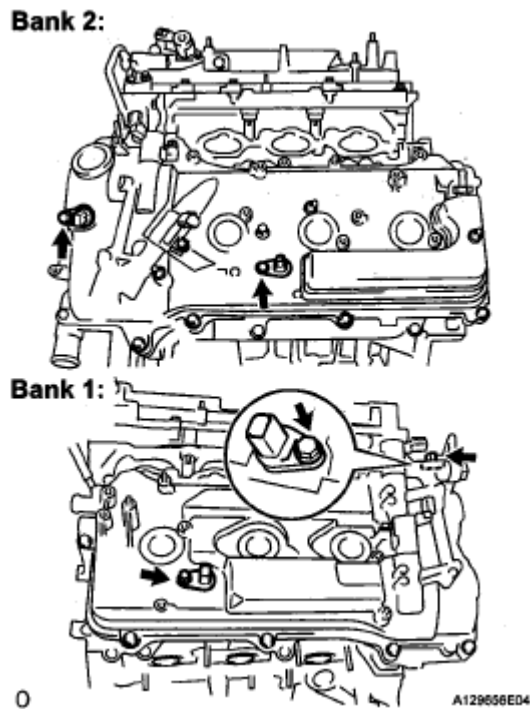


Fig. 195: Locating Bolts And Camshaft Position Sensors
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

6. REMOVE CAMSHAFT TIMING OIL CONTROL VALVE ASSEMBLY

- a. Remove the 4 bolts and 4 camshaft oil control valves.

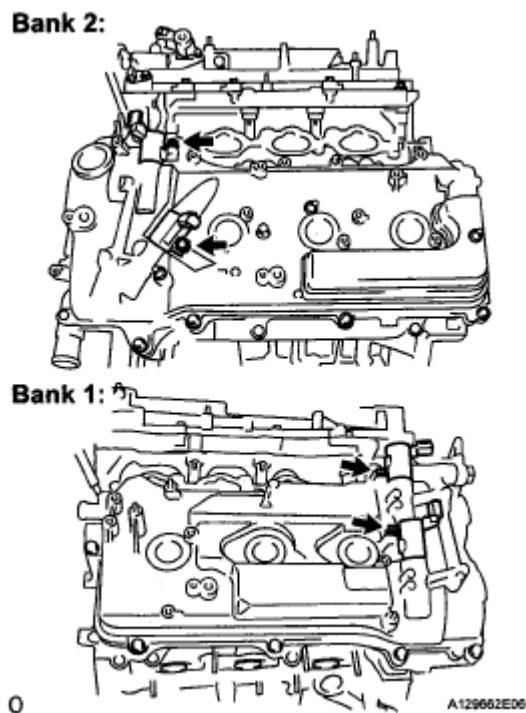


Fig. 196: Locating Bolts And Camshaft Oil Control Valves
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

7. REMOVE CRANKSHAFT POSITION SENSOR

- a. Remove the bolt and crankshaft position sensor.

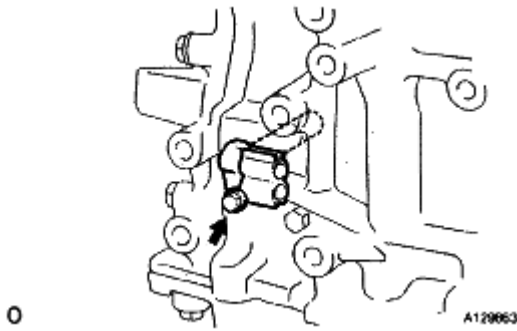


Fig. 197: Locating Crankshaft Position Sensor
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

8. REMOVE NO. 1 OIL PIPE

- a. Remove the 2 oil pipe unions, gaskets and oil pipe.
- b. Remove the oil control valve filter LH and gaskets.

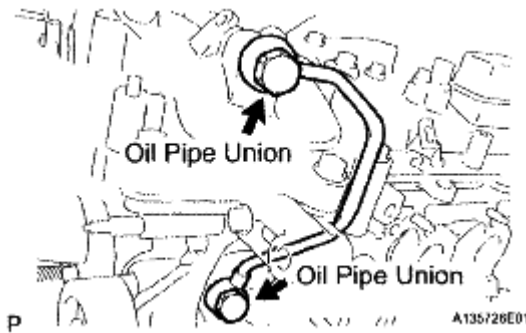


Fig. 198: Locating Oil Pipe Unions And Oil Pipe
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

9. REMOVE OIL PIPE

- a. Remove the bolt.
- b. Remove the 2 oil pipe unions and oil pipe.
- c. Remove the oil control valve filter RH and gaskets.

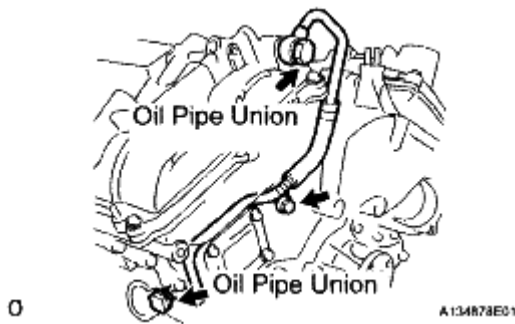


Fig. 199: Locating Oil Pipe Unions And Oil Pipe
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

10. REMOVE CYLINDER BLOCK WATER DRAIN COCK SUB-ASSEMBLY

- a. Remove the cylinder block water drain cocks from the cylinder block.
- b. Remove the cylinder block water drain cock plugs from the water drain cocks.

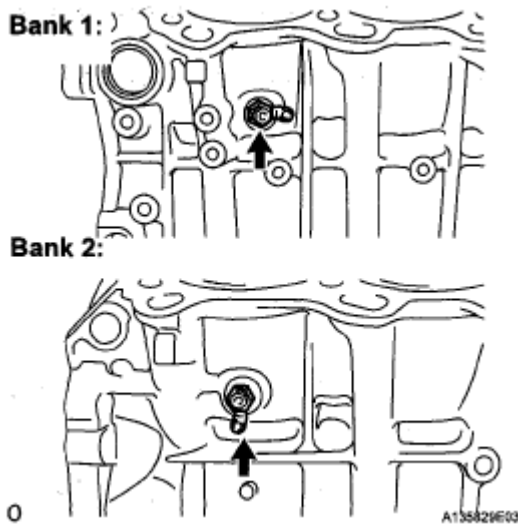


Fig. 200: Locating Cylinder Block Water Drain Cock Sub-Assembly
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

11. REMOVE OIL FILTER ELEMENT

- a. Remove the drain plug.

NOTE: Do not remove the O-ring from the oil filter cap.

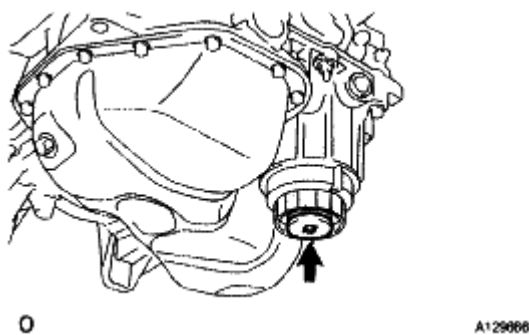


Fig. 201: Locating Drain Plug

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Connect the hose to the pipe.
- c. Insert the pipe with the hose into the oil filter cap.
- d. Make sure that the oil is completely drained and remove the pipe and O-ring.

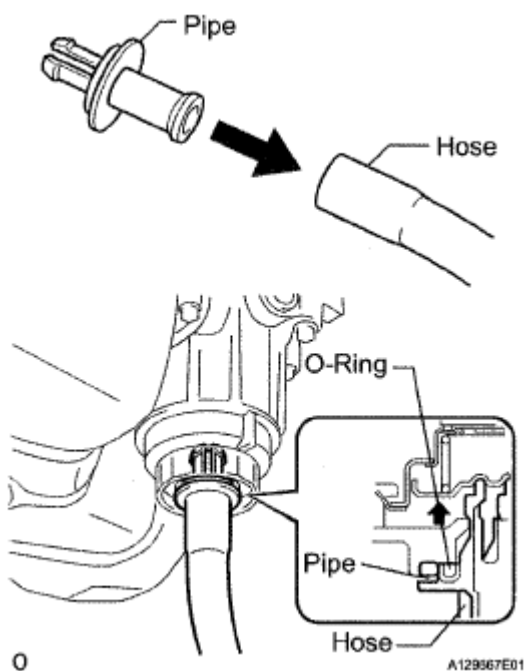


Fig. 202: Connecting Hose To Pipe

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- e. Using SST, remove the oil filter cap sub-assembly.

SST 09228-06501

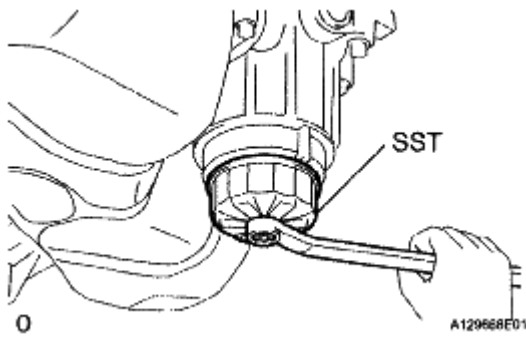


Fig. 203: Locating Oil Filter Cap Sub-Assembly
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- f. Remove the oil filter element and O-ring from the oil filter cap sub-assembly.

NOTE: Do not use any tools when removing the O-ring to prevent the O-ring groove from being damaged.

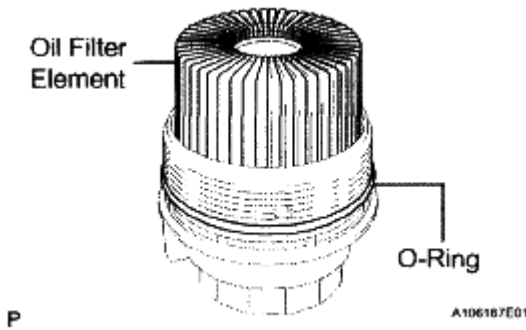


Fig. 204: View Of Oil Filter Element And O-Ring
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

12. REMOVE CRANKSHAFT PULLEY

- a. Using SST, loosen the crankshaft pulley bolt.

SST 09213-70011 (09213-70020), 09330-00021

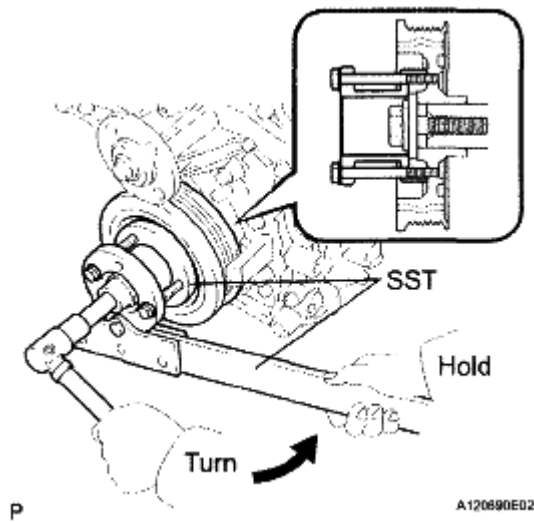


Fig. 205: Loosening Crankshaft Pulley Bolt

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Using SST, remove the crankshaft pulley bolt and crankshaft pulley.

SST 09950-50013 (09951 -05010, 09952-05010, 09953-05020, 09954-05021)

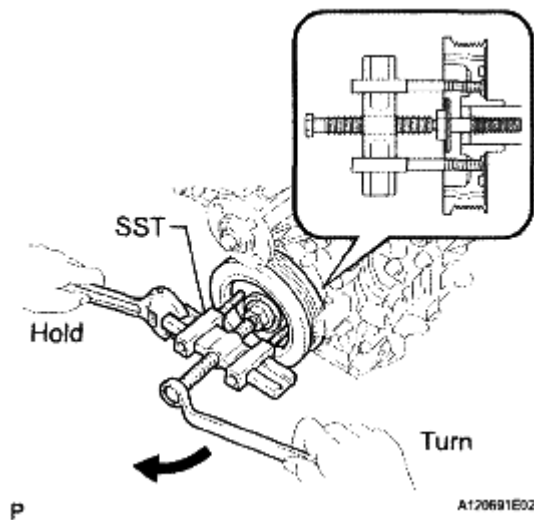


Fig. 206: Removing Crankshaft Pulley Bolt And Crankshaft Pulley

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

13. REMOVE OIL COOLER ASSEMBLY

- a. Remove the bolt, 2 clamps, and 4 clips and disconnect the 2 water by-pass hoses.

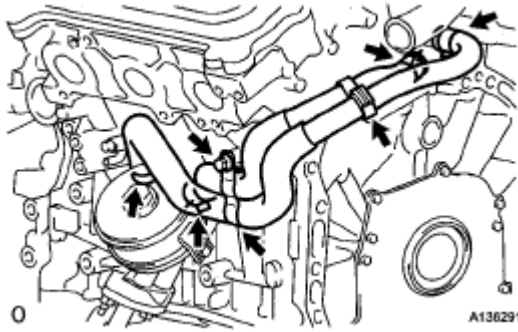


Fig. 207: Locating Bolt, Clamps, And Clips

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Remove the union bolt, oil cooler assembly, and O-ring.

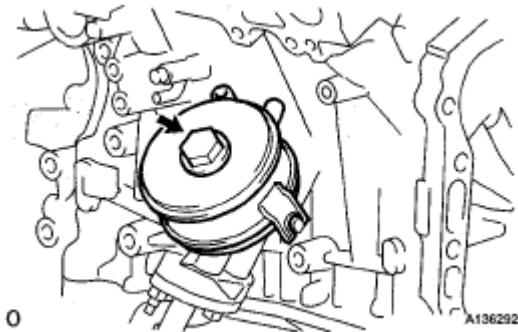


Fig. 208: Locating Oil Cooler Union Bolt

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

14. REMOVE NO. 1 OIL COOLER BRACKET

- a. Remove the 3 bolts, 3 nuts, and oil cooler pipe with No. 1 oil cooler bracket.

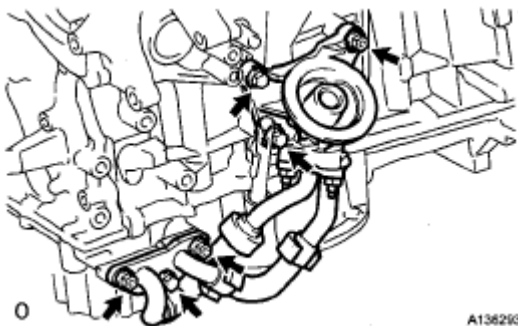


Fig. 209: Locating Bolts, Nuts, And Oil Cooler Pipe With No. 1 Oil Cooler Bracket

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Remove the bolt, 2 nuts, No. 1 oil cooler bracket, and gasket.
- c. Using a "TORX" socket wrench E8, remove the 2 stud bolts.

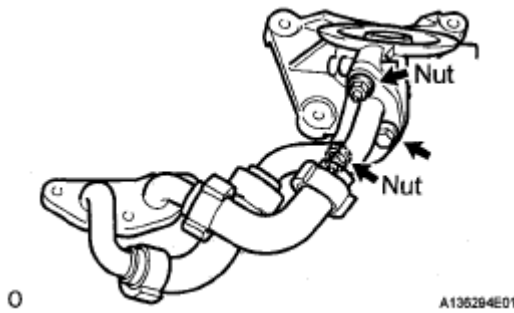


Fig. 210: Locating Bolt, Nuts, No. 1 Oil Cooler Bracket, And Gasket
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

15. REMOVE NO. 1 FRONT ENGINE MOUNTING BRACKET LH

- a. Remove the 6 bolts and No. 1 front engine mounting bracket LH.
- b. Using a "TORX" socket wrench E8, remove the 2 stud bolts.

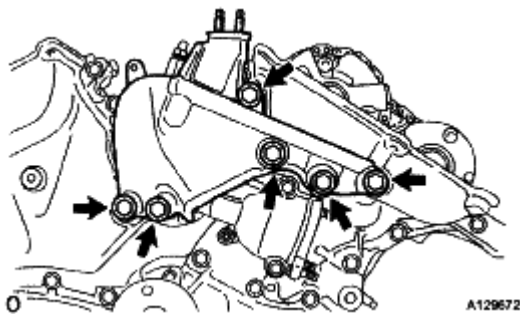


Fig. 211: Locating Engine Mounting Bracket Front And Bolts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

16. REMOVE WATER INLET HOUSING

- a. Remove the 2 nuts, water inlet and thermostat.
- b. Remove the gasket.
- c. Remove the drain cock plug.
- d. Remove the drain cock assembly.
- e. Remove the 2 stud bolts.
- f. Separate the No. 1 water by-pass hose.

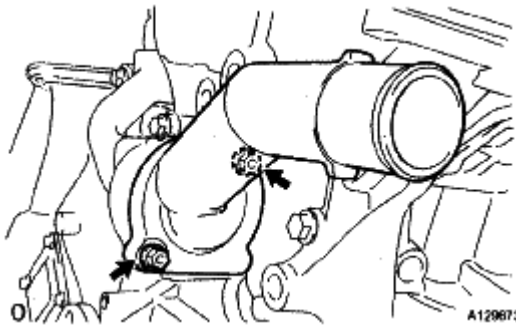


Fig. 212: Locating Water Inlet With Nuts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- g. Remove the 2 bolts, nut, and water inlet housing.

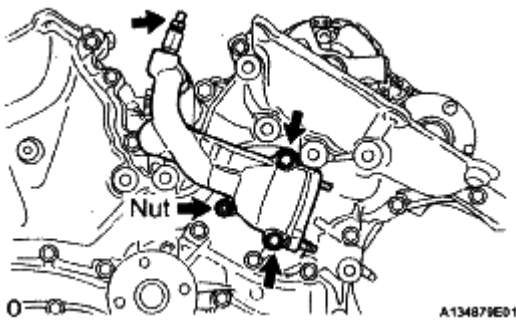


Fig. 213: Locating Bolts, Nut, And Water Inlet Housing
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- h. Remove the 2 O-rings.

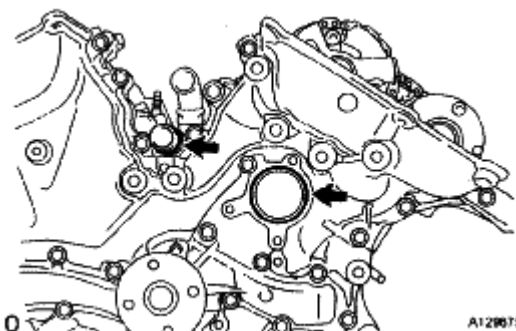


Fig. 214: Locating O-Rings
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

17. REMOVE WATER OUTLET

- a. Remove the 2 bolts, 4 nuts and water outlet.

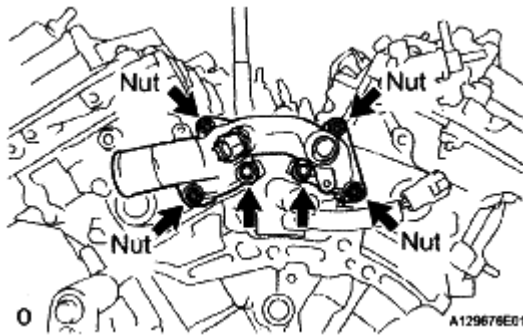


Fig. 215: Locating Bolts, Nuts And Water Outlet
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Remove the 2 gaskets and O-ring.

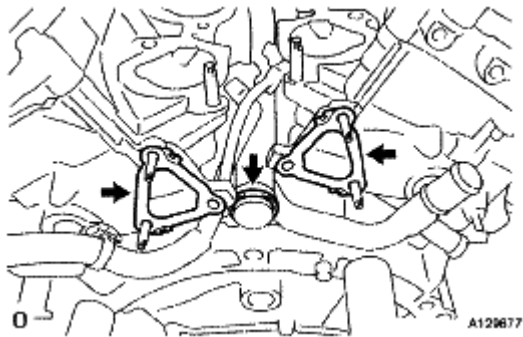


Fig. 216: Locating Gaskets And O-Ring
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

18. REMOVE CYLINDER HEAD COVER SUB-ASSEMBLY (for Bank 1)

- a. Remove the 12 bolts, seal washer, cylinder head cover sub-assembly and cylinder head cover gasket.

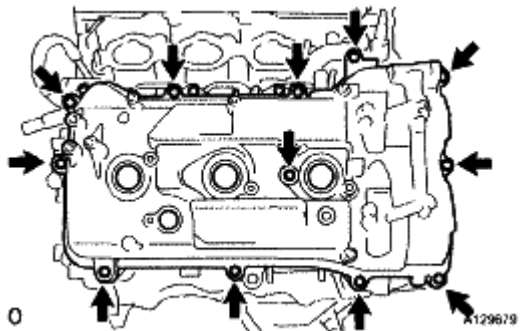


Fig. 217: Locating Bolts, Head Cover And Gasket
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Remove the 3 gaskets.

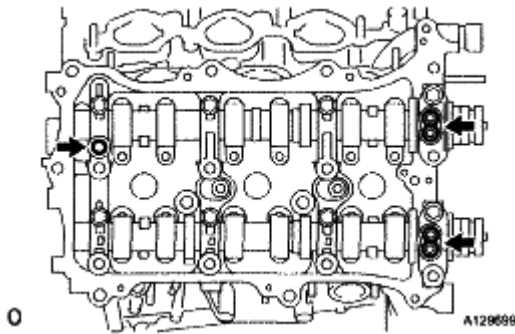


Fig. 218: Locating Gaskets

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

19. REMOVE CYLINDER HEAD COVER SUB-ASSEMBLY (for Bank 2)

- a. Remove the 12 bolts, seal washer, cylinder head cover sub-assembly and cylinder head cover gasket.

NOTE: The baffle plate is located on the back of the portion shown in the illustration. Do not damage the baffle plate when removing the head cover.

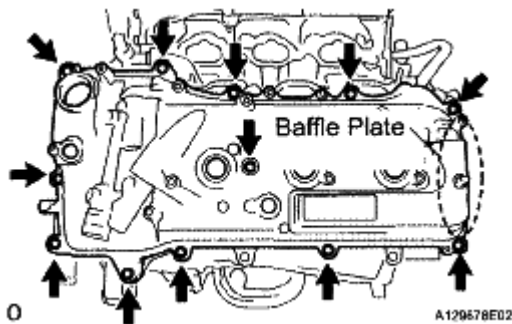


Fig. 219: Locating Bolts, Seal Washer, Head Cover And Gasket

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Remove the 3 gaskets.

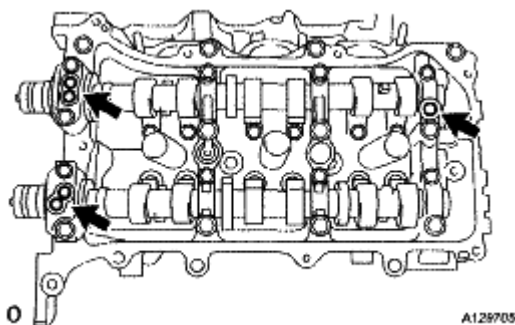


Fig. 220: Locating Gaskets

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

20. REMOVE NO. 2 OIL PAN SUB-ASSEMBLY

- a. Remove the 16 bolts and 2 nuts.

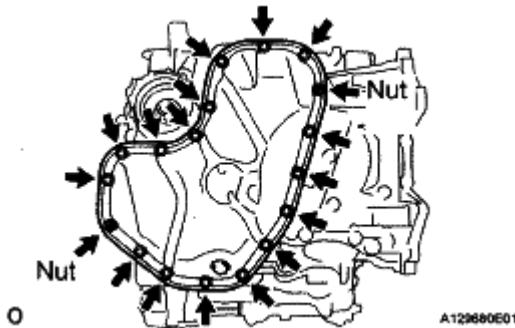


Fig. 221: Identifying Oil Pan With Bolts And Nuts

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Insert the blade of SST between the oil pans. Cut through the applied sealer and remove the No. 2 oil pan sub-assembly.

SST 09032-00100

NOTE: Be careful not to damage the contact surfaces of the oil pans.

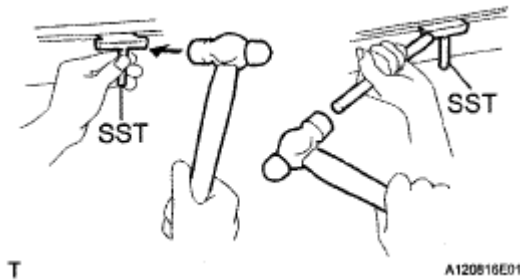


Fig. 222: Inserting Blade Of SST Between Oil Pans

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Using a "TORX" socket wrench E6, remove the 2 stud bolts.

21. REMOVE OIL STRAINER SUB-ASSEMBLY

- a. Remove the bolt, 2 nuts, oil strainer sub-assembly and gasket.
- b. Using a "TORX" socket wrench E6, remove the 2 stud bolts.

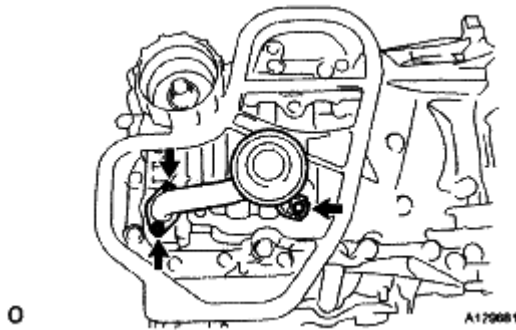


Fig. 223: Identifying Oil Strainer With Bolt And Nuts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

22. REMOVE OIL PAN SUB-ASSEMBLY

- a. Remove the 16 bolts and 2 nuts.

HINT:

Be sure to clean the bolts and stud bolts and check the threads for cracks or other damage.

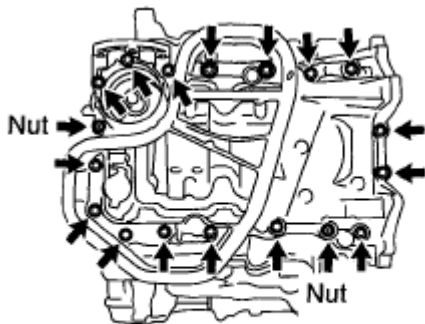


Fig. 224: Locating Bolts And Nuts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Remove the oil pan sub-assembly by prying between the oil pan sub-assembly and cylinder block sub-assembly with a screwdriver.

NOTE: Be careful not to damage the contact surfaces of the cylinder block and oil pan.

HINT:

Tape the screwdriver tip before use.

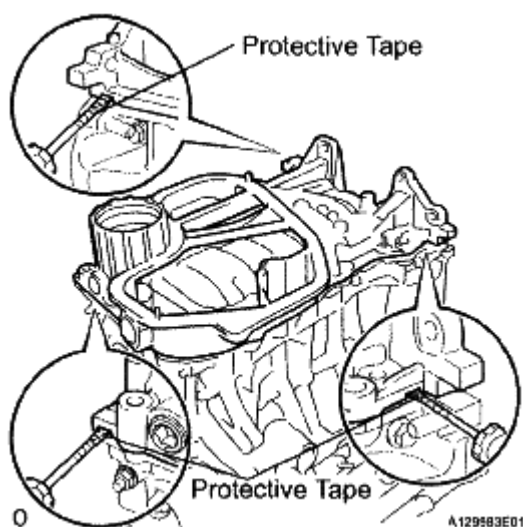


Fig. 225: Removing Oil Pan Sub-Assembly By Prying Oil Pan Sub-Assembly
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Remove the 2 O-rings.
- d. Using a "TORX" socket wrench E8, remove the 2 stud bolts.

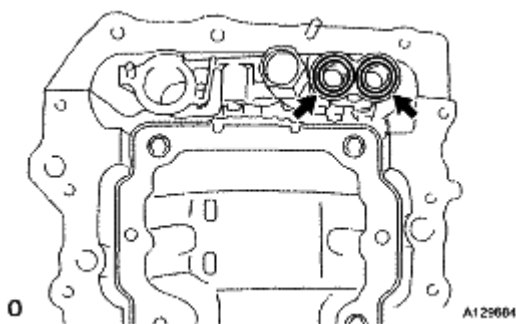


Fig. 226: Locating O-Rings
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

23. REMOVE OIL PAN BAFFLE PLATE

- a. Remove the 7 bolts and oil pan baffle plate.

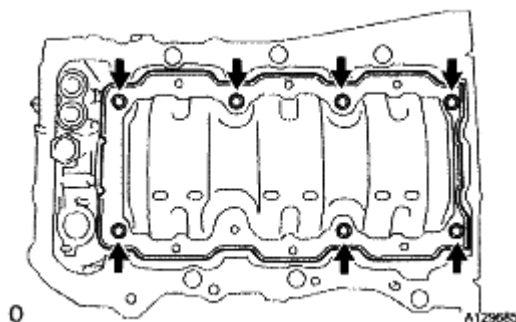


Fig. 227: Locating Oil Pan Baffle Plate Bolts

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

24. REMOVE ENGINE REAR OIL SEAL RETAINER

- a. Remove the 6 bolts.

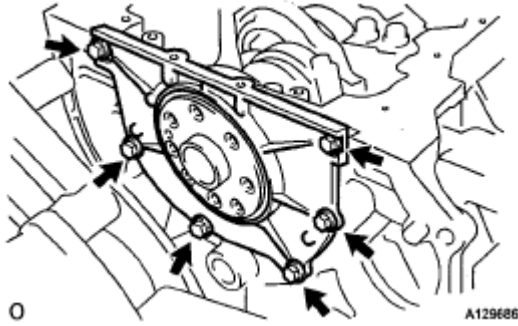


Fig. 228: Locating Engine Rear Oil Seal Retainer Bolts

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Using a screwdriver, pry out the engine rear oil seal retainer.

NOTE: Be careful not to damage the engine rear oil seal retainer.

HINT:

Tape the screwdriver tip before use.

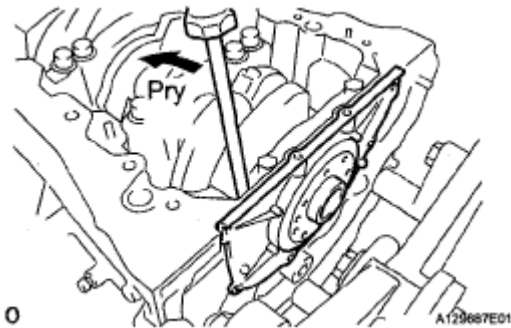


Fig. 229: Prying Out Oil Seal Retainer

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

25. REMOVE ENGINE REAR OIL SEAL

- a. Place the oil seal retainer on wooden blocks.

NOTE: Be careful not to damage the engine rear oil seal retainer.

- b. Using a screwdriver and a hammer, tap out the oil seal.

HINT:

Tape the screwdriver tip before use.

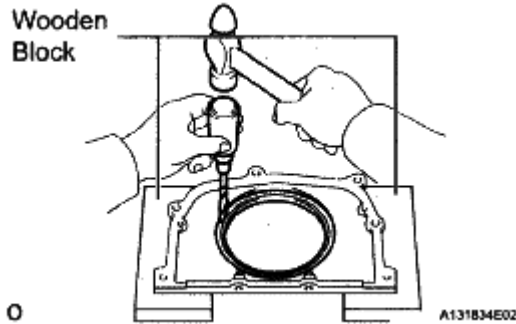


Fig. 230: Taping Out Oil Seal
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

26. REMOVE WATER PUMP ASSEMBLY

- a. Remove the 16 bolts, water pump assembly and gasket.

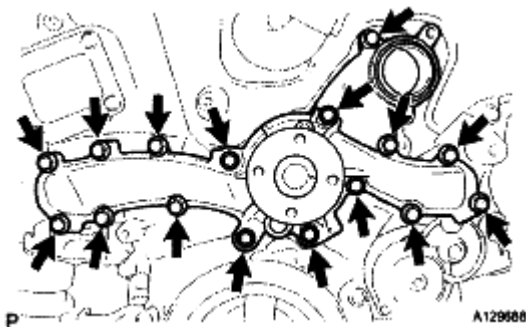


Fig. 231: Locating Bolts, Water Pump And Gasket
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

27. REMOVE TIMING CHAIN COVER SUB-ASSEMBLY

- a. Remove the 15 bolts and 2 nuts as shown in the illustration.

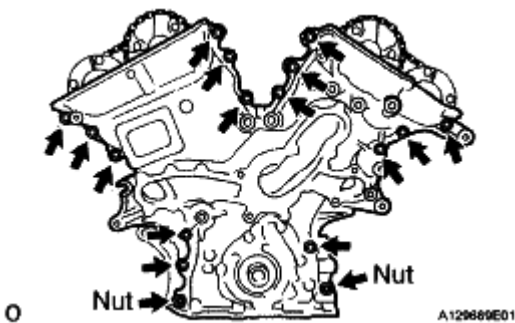


Fig. 232: Locating Timing Chain Cover Bolts And Nuts

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Remove the timing chain cover sub-assembly by prying between the timing chain cover and cylinder head sub-assembly or cylinder block sub-assembly with a screwdriver.

NOTE: Be careful not to damage the contact surfaces of the cylinder head, cylinder block and chain cover.

HINT:

Tape the screwdriver tip before use.

- c. Remove the 4 bolts, chain cover plate and chain cover plate gasket.

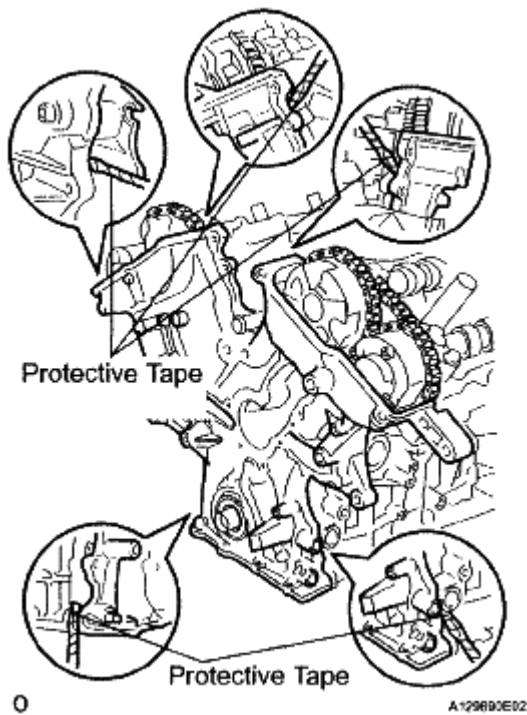


Fig. 233: Prying Between Timing Chain Cover And Cylinder Head Or Cylinder Block
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Remove the gasket.

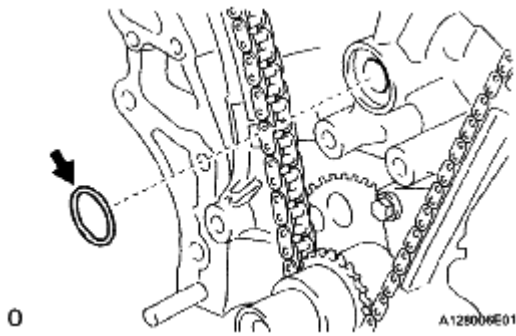


Fig. 234: Locating Gasket

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

28. REMOVE TIMING CHAIN CASE OIL SEAL

- a. Using a screwdriver, pry out the timing chain case oil seal.

HINT:

Tape the screwdriver tip before use.

29. SET NO. 1 CYLINDER TO TDC / COMPRESSION

CAUTION: For additional information on timing chain/gear removal guidelines, installation and camshaft timing gear alignment, see 2GR-FE VALVE TIMING PROCEDURE .

- a. Temporarily tighten the pulley set bolt.

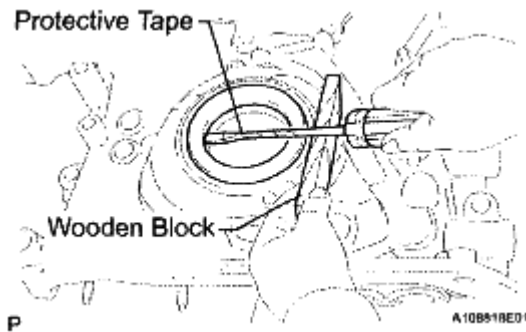


Fig. 235: Prying Out Oil Seal Using Screwdriver

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Set the timing mark on the crank angle sensor plate to the RH block bore center line (TDC / compression).

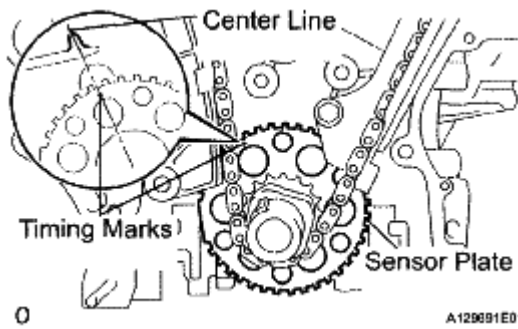


Fig. 236: Identifying Timing Mark On Crank Angle Sensor Plate
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Check that the timing marks of the camshaft timing gears are aligned with those of the bearing cap as shown in the illustration.

If not, turn the crankshaft 1 revolution (360°) and align the timing marks as above.

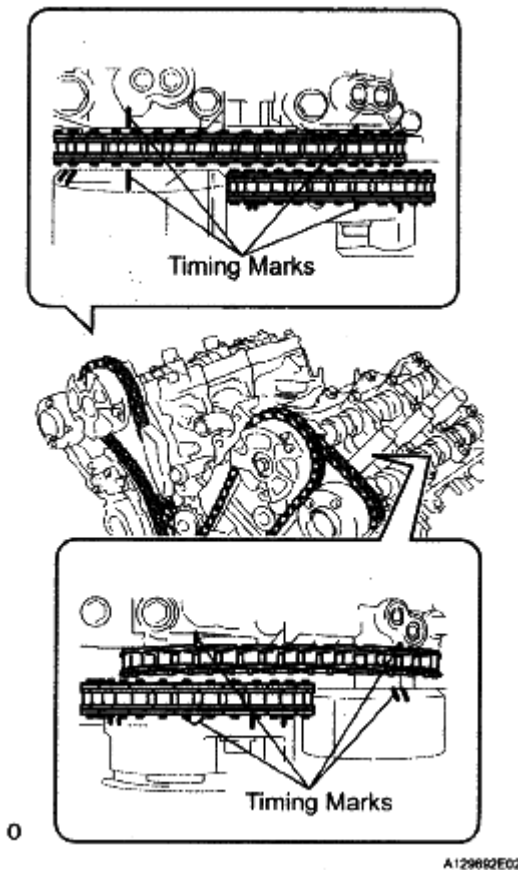


Fig. 237: Identifying Bearing Cap Timing Marks
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

30. REMOVE NO. 1 CHAIN TENSIONER ASSEMBLY

- a. Move the stopper plate upward to release the lock, and push the plunger deep into the tensioner.
- b. Move the stopper plate downward to set the lock, and insert a pin of $\varnothing$ 1.27 mm (0.05 in.) into the stopper plate's hole.

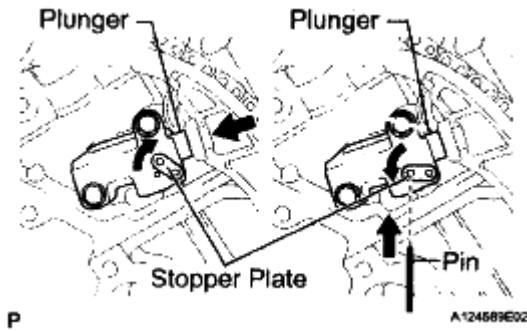


Fig. 238: Locating No.1 Chain Tensioner Assembly
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Remove the 2 bolts and No. 1 chain tensioner assembly.

31. REMOVE CHAIN TENSIONER SLIPPER

- a. Remove the chain tensioner slipper.

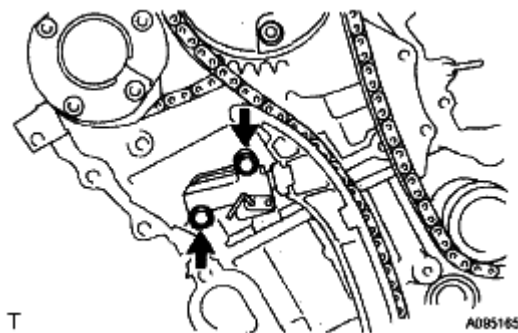


Fig. 239: Locating Chain Tensioner With Bolts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

32. REMOVE CHAIN SUB-ASSEMBLY

- a. Turn the crankshaft counterclockwise 10° to loosen the chain sub-assembly of the crankshaft timing sprocket.
- b. Remove the pulley set bolt.

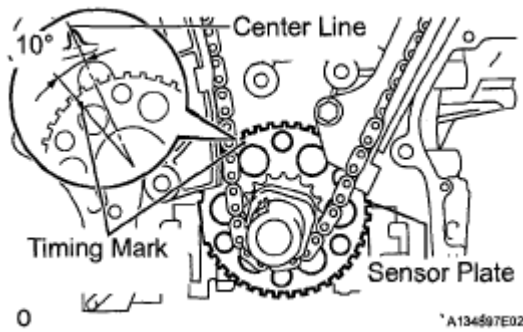


Fig. 240: Identifying Timing Mark On Crankshaft Timing Sprocket
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Remove the chain sub-assembly from the crankshaft timing sprocket and place it on the crankshaft.

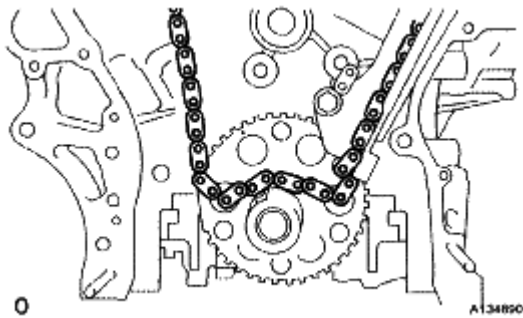


Fig. 241: Identifying Chain Set
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Turn the camshaft timing gear assembly on the bank 1 clockwise (approximately 60°) and set it as shown in the illustration. Be sure to loosen the chain between the banks.
- e. Remove the chain.

Bank 1:

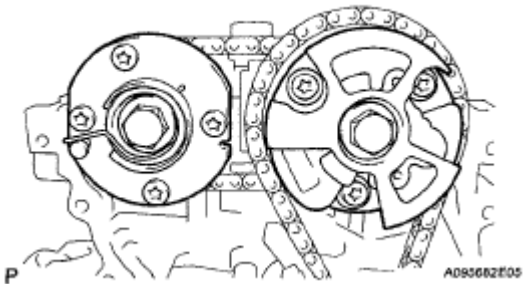


Fig. 242: Identifying Camshaft Timing Gear Assembly Position
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

33. REMOVE IDLE SPROCKET ASSEMBLY

- a. Using a 10 mm hexagon wrench, remove the No. 2 idle gear shaft, idle sprocket assembly and No.

1 idle gear shaft.

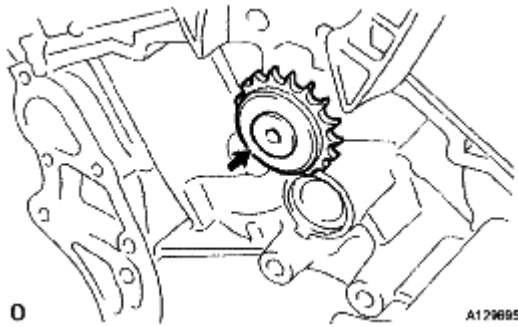


Fig. 243: Locating Idle Gear Shaft No. 2, Idle Sprocket And Idle Gear Shaft
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

34. REMOVE NO. 1 CHAIN VIBRATION DAMPER

- a. Remove the 2 bolts and No. 1 chain vibration damper.

35. REMOVE NO. 2 CHAIN VIBRATION DAMPER

- a. Remove the 2 No. 2 chain vibration dampers.

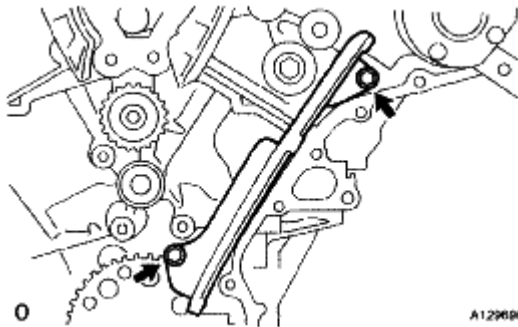


Fig. 244: Locating Chain Vibration Damper With Bolts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

36. REMOVE CRANKSHAFT TIMING SPROCKET

- a. Remove the crankshaft timing sprocket from the crankshaft.
- b. Remove the 2 keys from the crankshaft.

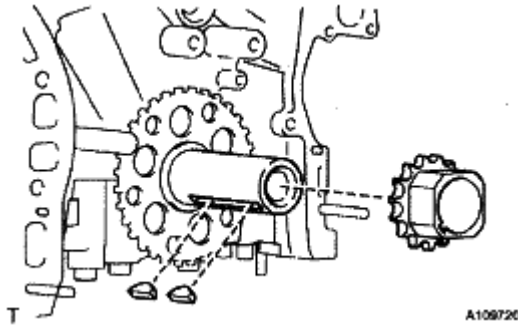


Fig. 245: Identifying Crankshaft Timing Sprocket
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

37. REMOVE CAMSHAFT TIMING GEARS AND NO. 2 CHAIN (for Bank 1)

- a. While raising the No. 2 chain tensioner assembly, insert a pin of $\varnothing$ 1.0 mm (0.039 in.) into the hole to fix the No. 2 chain tensioner.

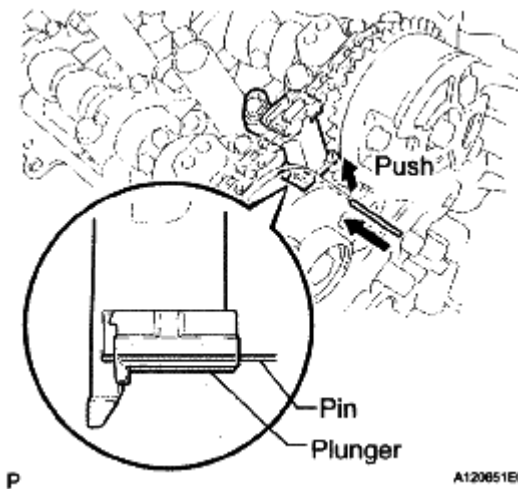


Fig. 246: Inserting Pin Into Hole For Fixing No 2 Chain Tensioner
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Using SST to hold the hexagonal portion of each camshaft, loosen the bolts of the camshaft timing gear assembly and the camshaft timing exhaust gear assembly RH.

SST: 09922-10010

NOTE: Do not loosen the other 4 bolts. If any of the 4 bolts is loosened, replace the camshaft timing gear assembly and/or the camshaft timing exhaust gear assembly with a new one.

- c. Remove the 2 bolts, the camshaft timing gear assembly and the camshaft timing exhaust gear assembly RH together with the No. 2 chain.

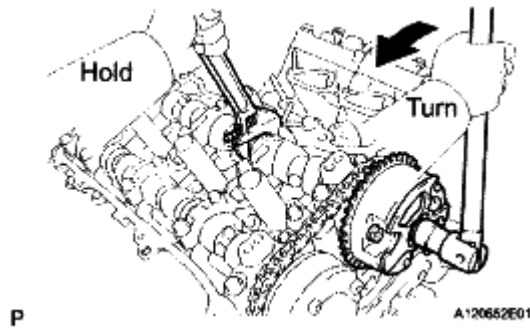


Fig. 247: Identifying Camshaft Timing Gear Assemblies
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

38. REMOVE NO. 2 CHAIN TENSIONER ASSEMBLY

- a. Remove the bolt and No. 2 chain tensioner assembly.

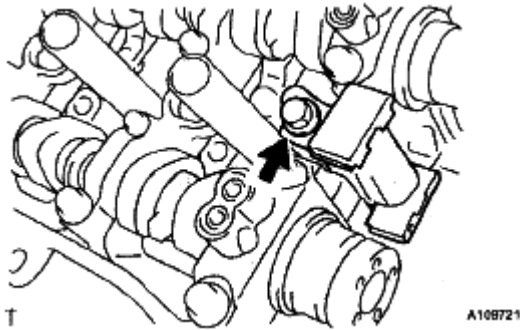


Fig. 248: Locating No.2 Chain Tensioner Bolt
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

39. REMOVE CAMSHAFT BEARING CAP (for Bank 1)

- a. Check that the camshafts are positioned as shown in the illustration.

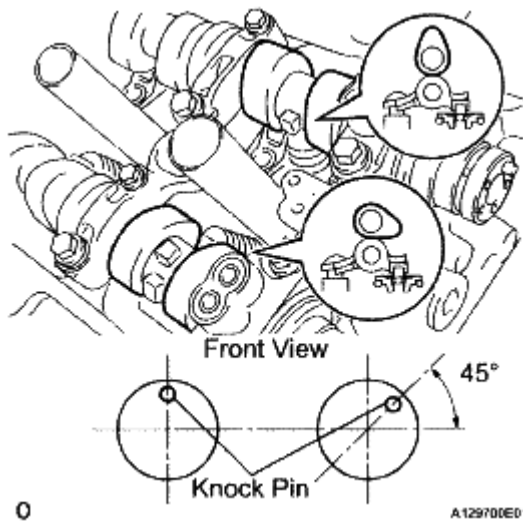


Fig. 249: Identifying Knock Pin Of Camshaft

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Uniformly loosen and remove the 8 bearing cap bolts in the sequence shown in the illustration.

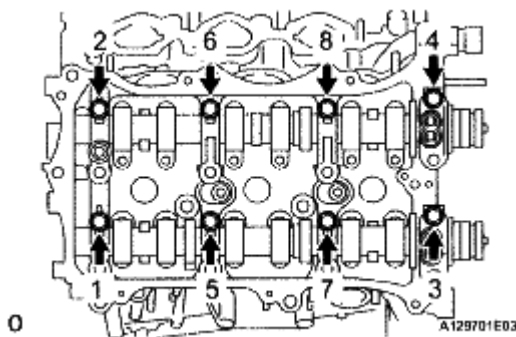


Fig. 250: Identifying Bearing Cap Bolts Loosening Sequence

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Uniformly loosen and remove the 12 bearing cap bolts in the sequence shown in the illustration.

NOTE: Uniformly loosen the bolts while keeping the camshaft level.

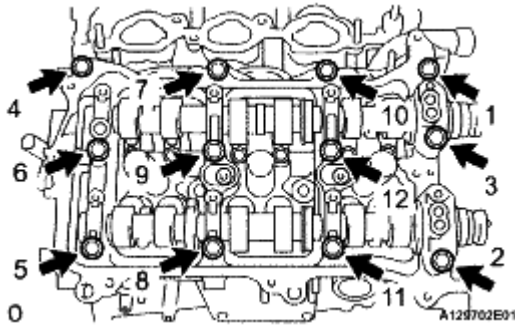


Fig. 251: Locating Bearing Cap Bolts

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Remove the 5 bearing caps.

40. REMOVE CAMSHAFT

- a. Remove the camshaft.

41. REMOVE NO. 2 CAMSHAFT

- a. Remove the No. 2 camshaft.


42. REMOVE CAMSHAFT HOUSING SUB-ASSEMBLY RH

- a. Remove the camshaft housing sub-assembly RH by prying between the cylinder head and camshaft housing sub-assembly RH with a screwdriver.

NOTE: Be careful not to damage the contact surfaces of the cylinder head and camshaft housing.

HINT:

Tape the screwdriver tip before use.

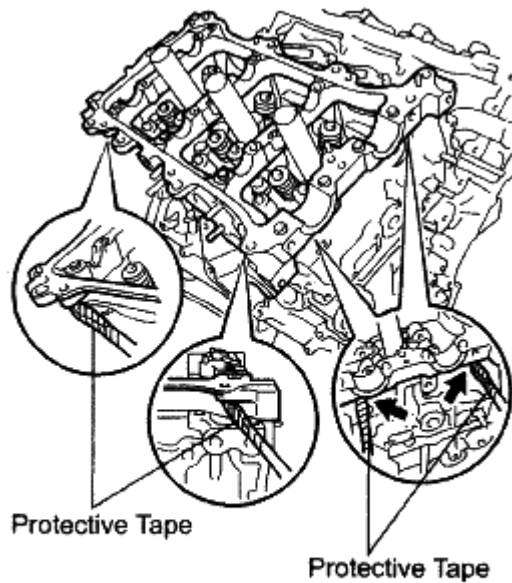


O

A129703E01

Fig. 252: Prying Between Cylinder Head And Camshaft Housing Sub-Assembly
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

43. REMOVE CAMSHAFT TIMING GEARS AND NO. 2 CHAIN (for Bank 2)

- a. While pushing down the No. 3 chain tensioner assembly, insert a pin of $\phi 1.0$ mm (0.039 in.) into the hole to fix the No. 3 chain tensioner assembly.

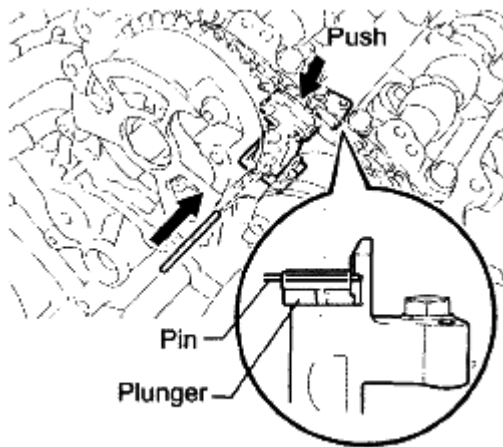

P

A120657E01

Fig. 253: Inserting Pin Into Hole For Fixing No 3 Chain Tensioner
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Hold the hexagonal portion of the camshaft with a wrench, and remove the 2 bolts and 2 camshaft timing gear assemblies. Using SST to hold the hexagonal portion of each camshaft, loosen the bolts of the camshaft timing gear assembly and the camshaft timing exhaust gear assembly LH.

SST: 09922-10010

NOTE: Do not loosen the other 4 bolts. If any of the 4 bolts is loosened, replace the camshaft timing gear assembly and/or the camshaft timing exhaust gear assembly with a new one.

- c. Remove the 2 bolts, the camshaft timing gear assembly and the camshaft timing exhaust gear assembly LH together with the No. 2 chain.

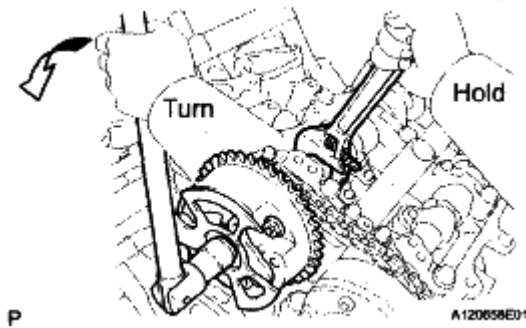


Fig. 254: Identifying Camshaft Timing Gears & No. 2 Chain (For Bank 2)
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

44. REMOVE NO. 3 CHAIN TENSIONER ASSEMBLY

- a. Remove the bolt and No. 3 chain tensioner assembly.

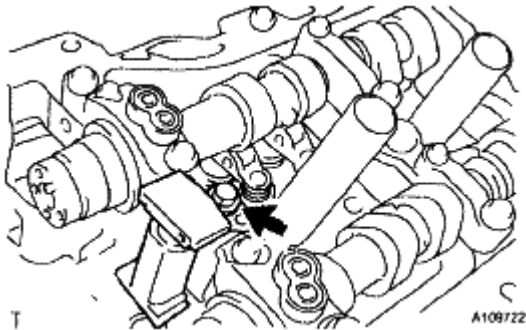


Fig. 255: Identifying No.3 Chain Tensioner Bolt
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

45. REMOVE CAMSHAFT BEARING CAP (for Bank 2)

- a. Check that the camshafts are positioned as shown in the illustration.

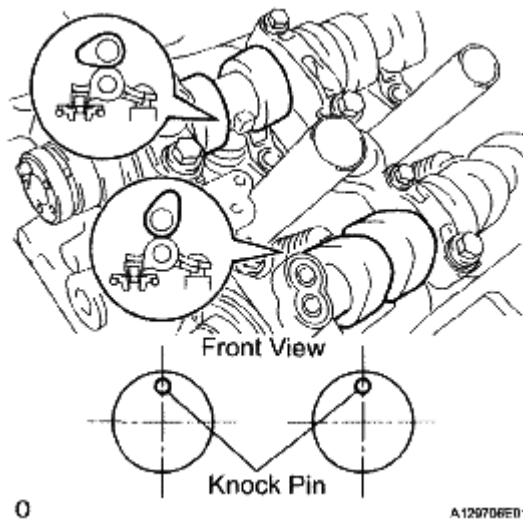


Fig. 256: Identifying Knock Pin Of Camshaft

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Uniformly loosen and remove the 8 bearing cap bolts in the sequence shown in the illustration.

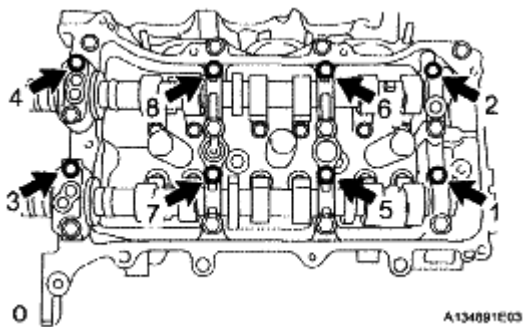


Fig. 257: Identifying Bearing Cap Bolts Loosening Sequence

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Uniformly loosen and remove, the 13 bearing cap bolts in the sequence shown in the illustration.

NOTE: Uniformly loosen the bolts while keeping the camshaft level.

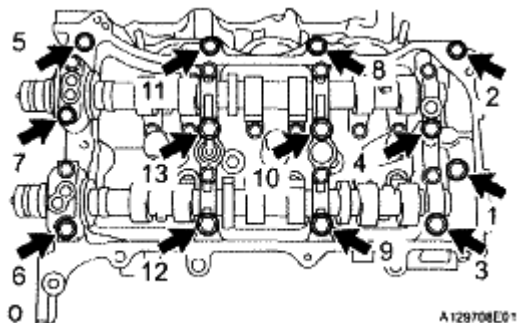


Fig. 258: Locating Bearing Cap Bolts


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Remove the 5 bearing caps.
- 46. **REMOVE NO. 3 CAMSHAFT**
 - a. Remove the No. 3 camshaft.
- 47. **REMOVE NO. 4 CAMSHAFT**
 - a. Remove the No. 4 camshaft.
- 48. **REMOVE CAMSHAFT HOUSING SUB-ASSEMBLY LH**
 - a. Remove the camshaft housing sub-assembly LH by prying between the cylinder head and camshaft housing sub-assembly LH with a screwdriver.

NOTE: Be careful not to damage the contact surfaces of the cylinder head and camshaft housing.

HINT:

Tape the screwdriver tip before use.

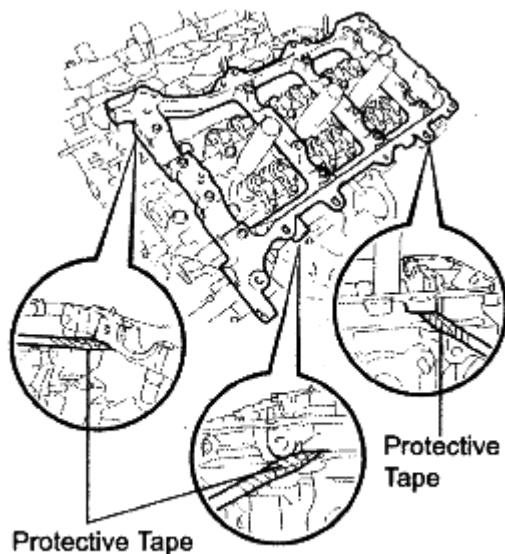

P

A129709E01

Fig. 259: Prying Between Cylinder Head And Camshaft Housing

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- 49. **REMOVE NO. 1 VALVE ROCKER ARM SUB-ASSEMBLY**
 - a. Remove the 24 No. 1 valve rocker arm sub-assemblies.

HINT:

Arrange the removed parts in the correct order.

50. REMOVE VALVE LASH ADJUSTER ASSEMBLY

- a. Remove the 24 valve lash adjuster assemblies from the cylinder head.

HINT:

Arrange the removed parts in the correct order.

51. REMOVE CYLINDER HEAD SUB-ASSEMBLY RH

- a. Using a 10 mm bi-hexagon wrench, uniformly loosen the 8 bolts in the sequence shown in the illustration. Remove the 8 cylinder head bolts and plate washers.

NOTE:

- Be careful not to drop washers into the cylinder head.
- Cylinder head warpage or cracking could result from removing bolts in an incorrect order.

HINT:

Be sure to keep separate the removed parts for each installation position.

- b. Remove the cylinder head sub-assembly RH and cylinder head gasket.

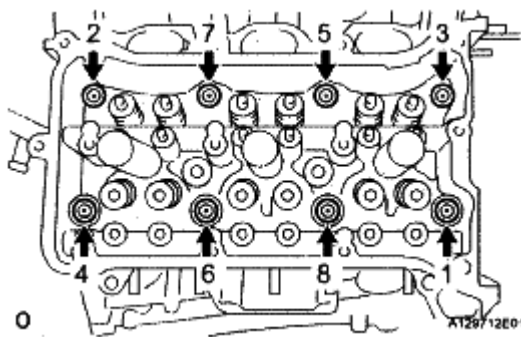


Fig. 260: Locating Cylinder Head Bolts And Plate Washers
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

52. REMOVE CYLINDER HEAD SUB-ASSEMBLY LH

- a. Uniformly loosen and remove the cylinder head set bolts in the sequence shown in the illustration.

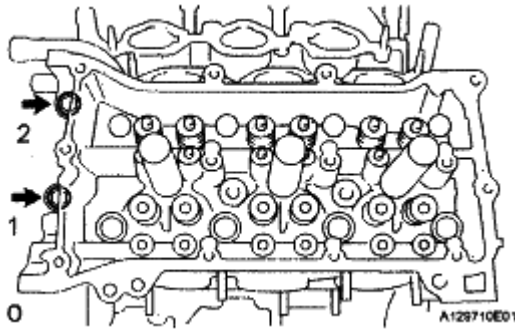


Fig. 261: Identifying Bolts In Sequence

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Using a 10 mm bi-hexagon wrench, uniformly loosen the 8 bolts in the sequence shown in the illustration. Remove the 8 cylinder head bolts and plate washers.

NOTE:

- Be careful not to drop washers into the cylinder head.
- Cylinder head warpage or cracking could result from removing bolts in an incorrect order.

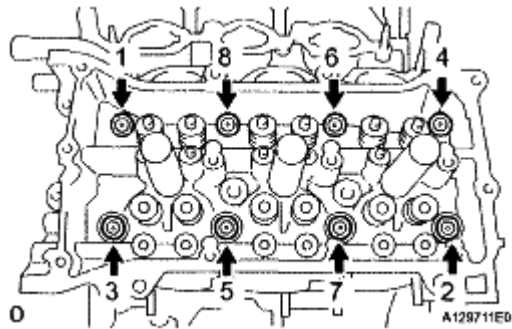


Fig. 262: Locating Cylinder Head Bolts And Plate Washers

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


HINT:

Be sure to keep separate the removed parts for each installation position.

- c. Remove the cylinder head sub-assembly LH and No. 2 cylinder head gasket.

53. REMOVE WATER INLET PIPE

- a. Remove 2 clamps and separate the No. 1 water bypass hose.
- b. Remove the 2 bolts and water inlet pipe.

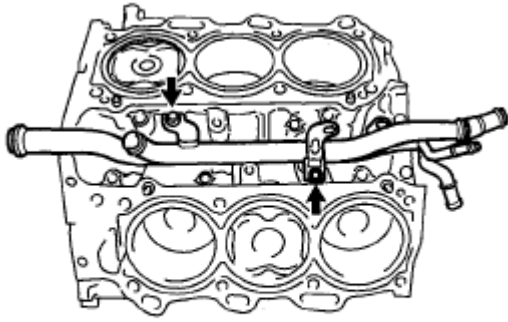

A162835

Fig. 263: Locating Bolts And Water Inlet Pipe
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

54. REMOVE VALVE STEM CAP

- a. Remove the valve stem caps from the cylinder heads.

HINT:

Arrange the removed parts in the correct order.

55. REMOVE INTAKE VALVE


- a. Using SST, compress the inner compression spring and remove the valve spring retainer locks.

SST 09202-70020 (09202-00010)

- b. Remove the valve spring retainer, inner compression spring and intake valve.

HINT:

Arrange the removed parts in the correct order.

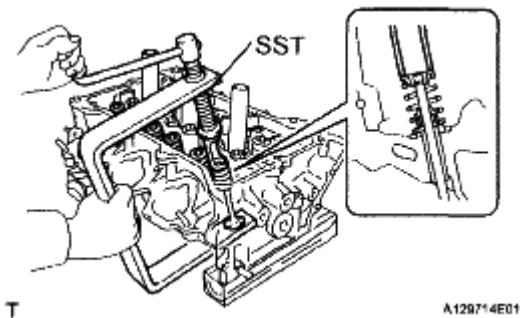

A129714E01

Fig. 264: Using SST To Compress Inner Compression Spring To Remove Intake Valve
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

56. REMOVE EXHAUST VALVE

- a. Using SST, compress the inner compression spring and remove the valve spring retainer locks.

SST 09202-70020 (09202-00010)

- b. Remove the valve spring retainer, inner compression spring and exhaust valve.

HINT:

Arrange the removed parts in the correct order.

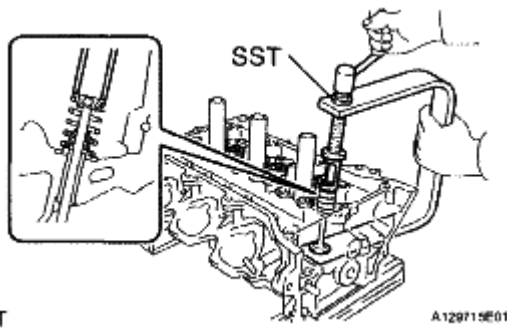


Fig. 265: Using SST To Compress Inner Compression Spring To Remove Exhaust Valve
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

57. REMOVE VALVE STEM OIL SEAL

- a. Using needle-nose pliers, remove the valve stem oil seals.

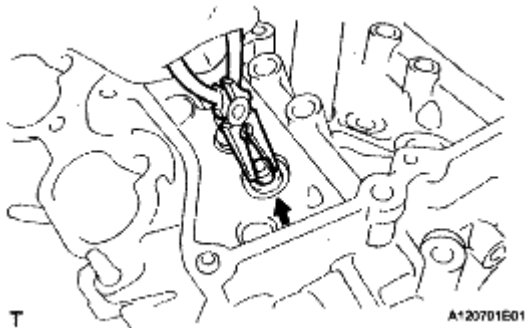


Fig. 266: Removing Valve Stem Oil Seal Using Needle-Nose Pliers
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

58. REMOVE VALVE SPRING SEAT

- a. Using compressed air and a magnetic finger, remove the valve spring seats by blowing air onto them.

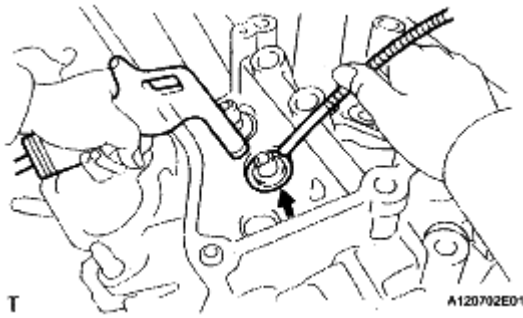



Fig. 267: Identifying Valve Spring Seat
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

59. REMOVE NO. 1 STRAIGHT SCREW PLUG


- a. Using a 10 mm hexagon wrench, remove the 4 No. 1 straight screw plugs and 4 gaskets.

NOTE: If water leaks from the straight screw plug or the plug corrodes, replace it.

Bank 1:

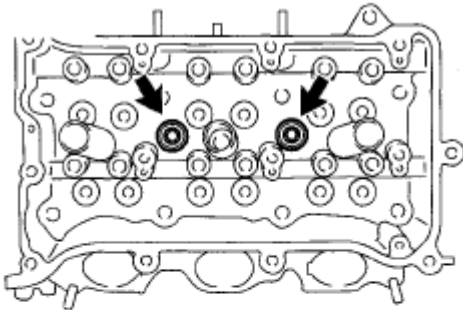

Bank 2:

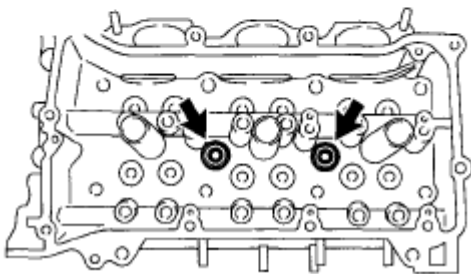

T A129718E04

Fig. 268: Locating No. 1 Straight Screw Plugs And Gaskets
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


60. REMOVE NO. 2 STRAIGHT SCREW PLUG

- a. Using a 14 mm hexagon wrench, remove the 2 No. 2 straight screw plugs and 2 gaskets.

NOTE: If water leaks from the straight screw plug or the plug corrodes,

replace it.

Bank 2:

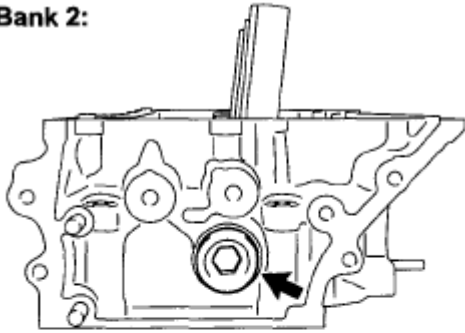

Bank 1:

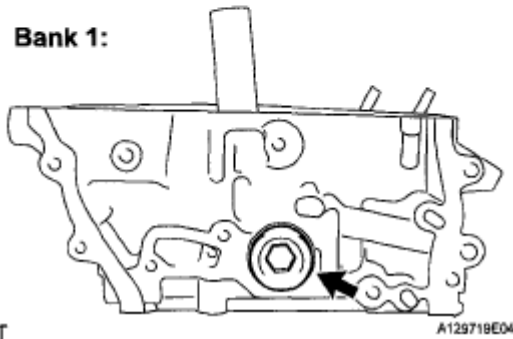


Fig. 269: Locating No. 2 Straight Screw Plugs And Gaskets
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

61. REMOVE RING PIN

NOTE: It is not necessary to remove the ring pin unless it is being replaced.

62. REMOVE STUD BOLT

NOTE: If the stud bolt is deformed or the threads are damaged, replace it.

63. REMOVE STRAIGHT PIN

NOTE: If the straight pin is deformed or the threads are damaged, replace it.

64. REMOVE INTAKE VALVE GUIDE BUSH

- Heat the cylinder head to 80 to 100°C (176 to 212°F).
- Place the cylinder head on wooden blocks.
- Using SST and a hammer, tap out the intake valve guide bushes.

SST 09201-10000 (09201-01050), 09950-70010 (09951-07100)

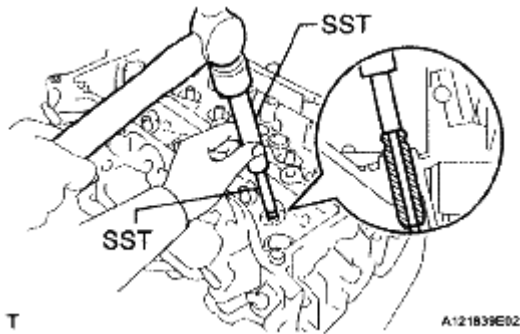


Fig. 270: Tapping Out Intake Valve Guide Bushes
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

65. REMOVE EXHAUST VALVE GUIDE BUSH

- a. Heat the cylinder head to 80 to 100°C (176 to 212°F).
- b. Place the cylinder head on wooden blocks.
- c. Using SST and a hammer, tap out the exhaust valve guide bushes.

SST 09201-10000 (09201-01050), 09950-70010 (09951-07100)

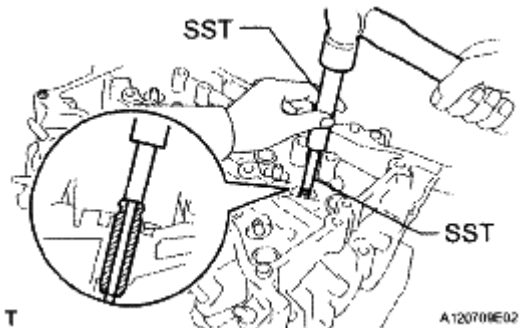


Fig. 271: Tapping Exhaust Valve Guide Bush
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

66. REMOVE PISTON SUB-ASSEMBLY WITH CONNECTING ROD

- a. Check that the matchmarks on the connecting rod sub-assembly and connecting rod cap are aligned.

HINT:

The matchmarks on the connecting rod sub-assembly and connecting rod cap are for ensuring the correct reassembly.

- b. Remove the 2 connecting rod cap bolts.

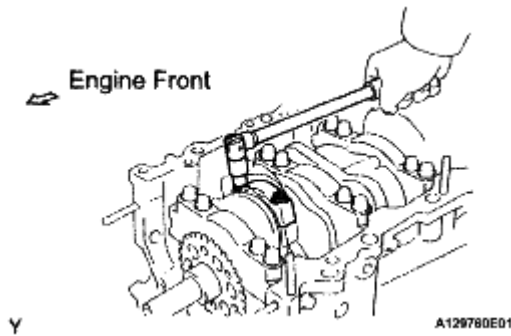


Fig. 272: Locating Connecting Rod Cap Bolts

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Using the 2 removed connecting rod cap bolts, remove the connecting rod cap and lower bearing by wiggling the connecting rod cap right and left.

HINT:

Keep the lower bearing inserted to the connecting rod cap.

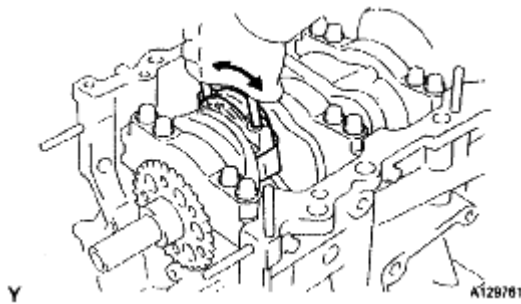


Fig. 273: Locating Connecting Rod Cap

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Using a ridge reamer, remove all the carbon from the top of the cylinder.

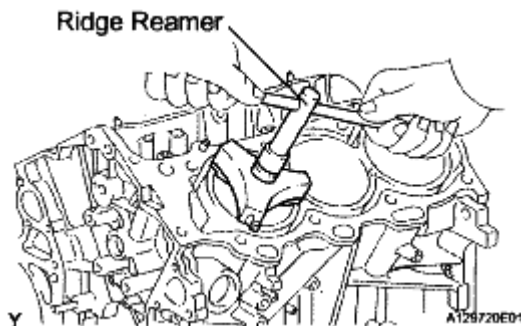


Fig. 274: Removing Carbon From Top Of Cylinder

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- e. Push the piston, connecting rod assembly and upper bearing through the top of the cylinder block.

HINT:

- Keep the bearing, connecting rod and cap together.
- Arrange the piston and connecting rod assemblies in the correct order.

67. REMOVE CONNECTING ROD BEARING

HINT:

Arrange the removed parts in the correct order.

68. REMOVE CRANKSHAFT

- a. Uniformly loosen and remove the 8 crankshaft bearing cap bolts and seal washers in several steps and in the sequence shown in the illustration.

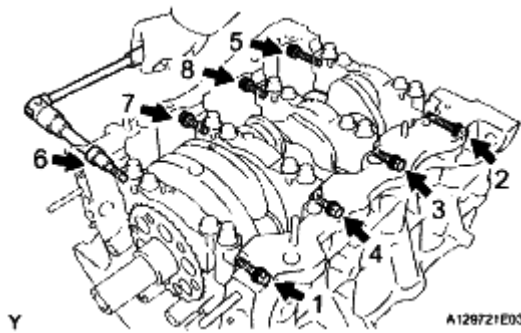


Fig. 275: Locating Connecting Rod Bearing Cap Bolts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Uniformly loosen the 16 crankshaft bearing cap bolts, in several steps and in the sequence shown in the illustration.

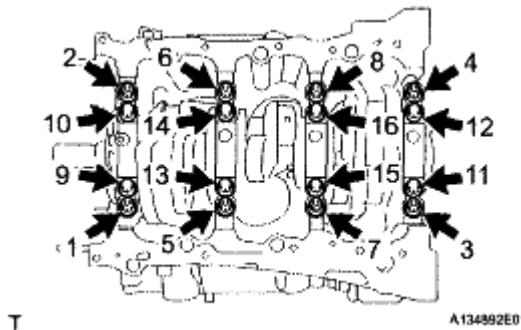



Fig. 276: Identifying Bearing Cap Bolts Loosening Sequence
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Using a screwdriver, pry out the main bearing caps. Remove the 4 crankshaft bearing caps and

lower crankshaft bearings.

NOTE:

- Push up on the cap little by little, from the right and left side alternately so that the cap can be removed.
- Be careful not to damage the joint surface of the cylinder block and the main bearing cap.

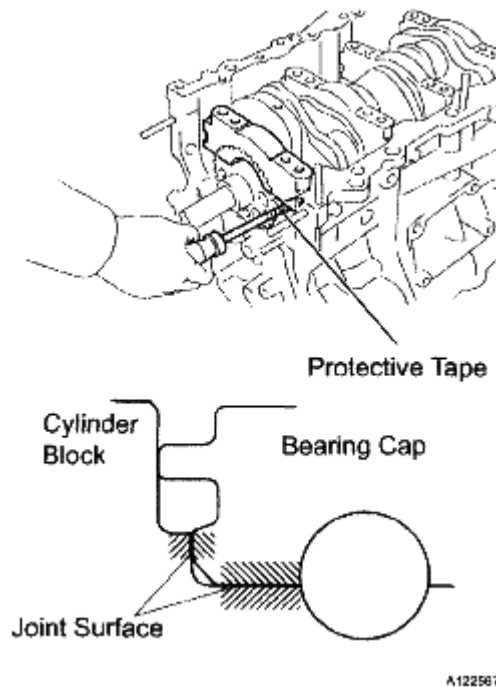

A122567E01

Fig. 277: Identifying Bearing Caps And Lower Bearings
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

d. Remove the crankshaft.

69. REMOVE CRANKSHAFT BEARING

- Remove the upper crankshaft bearing and lower crankshaft bearing.

HINT:

Arrange the removed parts in the correct order.

70. REMOVE CRANKSHAFT THRUST WASHER SET

- Remove the upper crankshaft bearings and upper crankshaft thrust washers from the cylinder block sub-assembly.

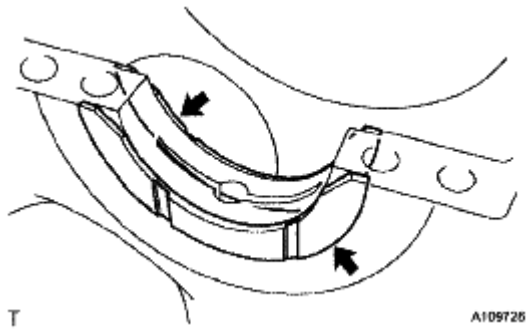


Fig. 278: Identifying Upper Bearings & Upper Thrust Washers
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

71. REMOVE PISTON RING SET

- a. Using a piston ring expander, remove the 2 compression rings.
- b. Remove the oil ring expander and 2 side rails by hand.

HINT:

Arrange the removed parts in the correct order.


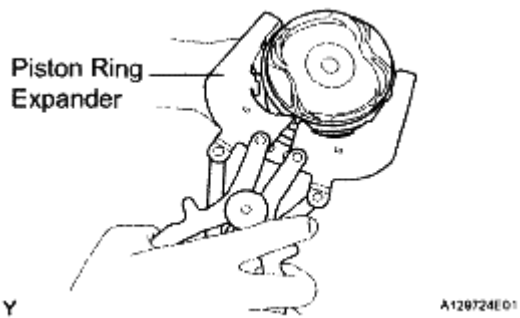


Fig. 279: Identifying Compression Rings
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

72. REMOVE PISTON SUB-ASSEMBLY WITH PIN

- a. Check the fitting condition between the piston and piston pin.
 1. Try to move the piston back and forth on the piston pin.

If any movement is felt, replace the piston and pin as a set.

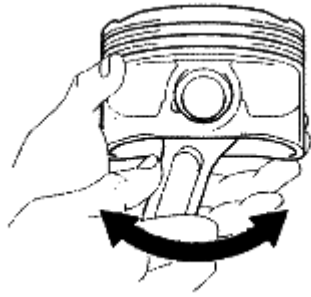


Y

A128726

Fig. 280: Checking Fitting Condition Between Piston And Piston Pin
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Disconnect the connecting rod from the piston.
 1. Using a screwdriver, pry off the piston pin hole snap rings from the piston.

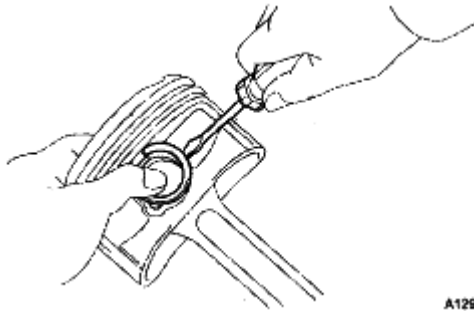


Y

A128728

Fig. 281: Prying Off Snap Rings From Piston
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

2. Gradually heat the piston to approximately 80°C(176°F).

80°C (176°F)

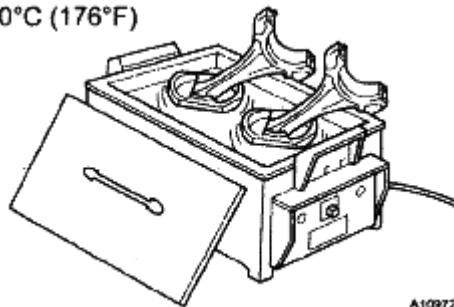

Y

A109728E02

Fig. 282: Heating Piston
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

3. Using a brass bar and plastic hammer, lightly tap out the piston pin and remove the connecting rod.

HINT:

- The piston and pin are a matched set.
- Arrange the pistons, pins, rings, connecting rods and bearings in the correct order.

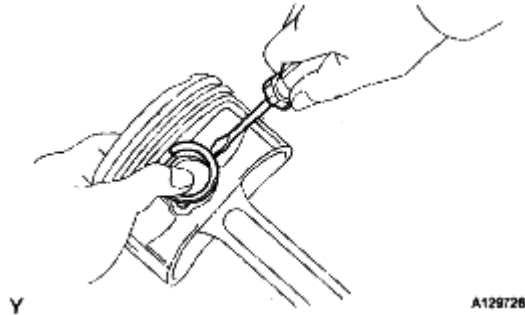


Fig. 283: Prying Off Snap Rings From Piston
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Using a gasket scraper, remove the carbon from the piston top.

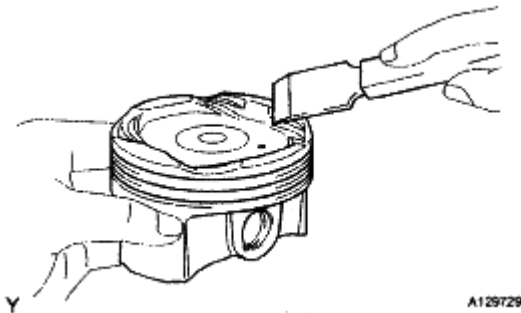


Fig. 284: Removing Carbon From Piston Top
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Using a groove cleaning tool or broken ring, clean the piston ring grooves.

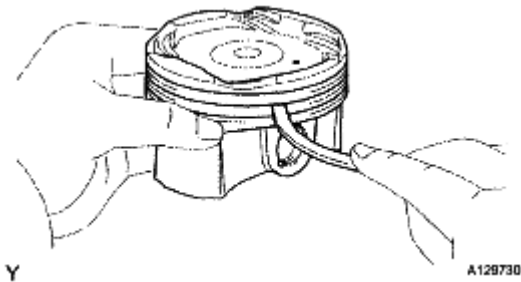


Fig. 285: Cleaning Piston Ring Grooves
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- e. Using solvent and a brush, thoroughly clean the piston.

NOTE: Do not use a wire brush.

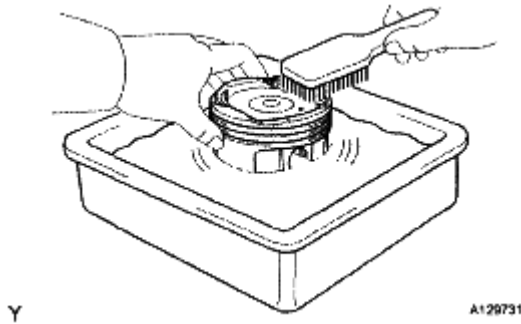


Fig. 286: Cleaning Piston Using Solvent And Brush
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

73. REMOVE NO. 1 OIL NOZZLE SUB-ASSEMBLY

- Using a 5 mm hexagon wrench, remove the bolts and No. 1 oil nozzle sub-assembly.
- Check the 3 oil nozzles for damage or clogging. If necessary, replace the No. 1 oil nozzle sub-assembly.

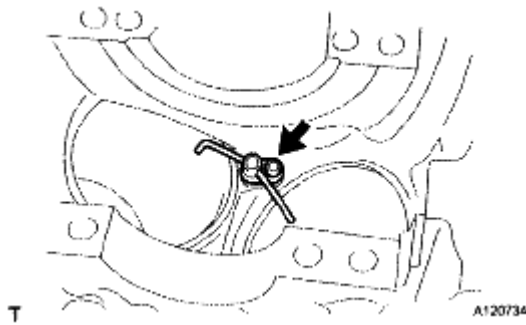


Fig. 287: Identifying Bolt And Oil Nozzle
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

74. CLEAN CYLINDER BLOCK


INSPECTION

1. INSPECT NO. 1 VALVE ROCKER ARM SUB-ASSEMBLY

- Turn the roller by hand to check that it turns smoothly.

HINT:

If the roller does not turn smoothly, replace the valve rocker arm sub-assembly.

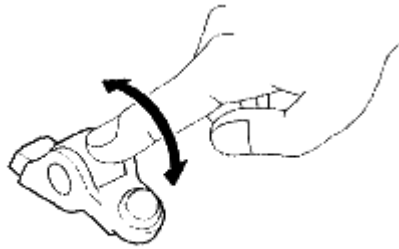

T

A125485

Fig. 288: Inspecting Valve Rocker Arm Sub-Assembly
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

2. INSPECT VALVE LASH ADJUSTER ASSEMBLY

NOTE:

- Keep the lash adjuster free of dirt and foreign objects.
- Only use clean engine oil.

- Place the valve lash adjuster assembly into a container filled with engine oil.
- Insert SST's tip into the valve lash adjuster assembly's plunger and use the tip to press down on the check ball inside the plunger.

SST 09276-75010

- Squeeze SST and valve lash adjuster assembly together to move the plunger up and down 5 to 6 times.
- Check the movement of the plunger and bleed the air.

OK: Plunger moves up and down.


NOTE:

When bleeding air from the high-pressure chamber, make sure that the tip of SST is actually pressing the check ball as shown in the illustration. If the check ball is not pressed, air will not bleed.

- After bleeding the air, remove SST. Then try to quickly and firmly press the plunger with a finger.

OK: Plunger is very difficult to move.

If the result is not as specified, replace the lash adjuster.

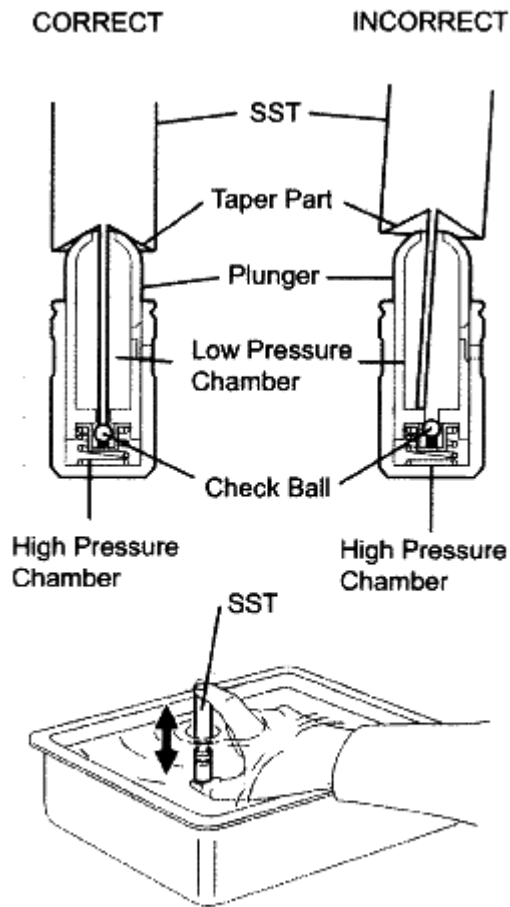

T

A100E30E01

Fig. 289: Checking Valve Lash Adjuster Assembly
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

3. INSPECT CAMSHAFT

- a. Inspect the camshaft for runout.
 1. Place the camshaft on V-blocks.
 2. Using a dial indicator, measure the circle runout at the center journal.

Maximum circle runout: 0.04 mm (0.0016 in.)

If the circle runout is greater than the maximum, replace the camshaft.

HINT:

Check the oil clearance after replacing the camshaft.

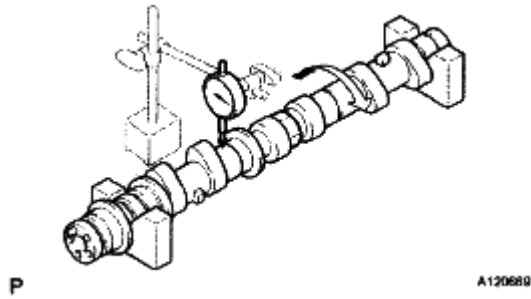


Fig. 290: Measuring Circle Runout At Center Journal
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Using a micrometer, measure the cam lobe height.

Standard cam lobe height

STANDARD CAM LOBE HEIGHT SPECIFICATIONS

Item	Specification
Intake camshaft	44.316 to 44.416 mm (1.7447 to 1.7487 in.)
Exhaust camshaft	44.262 to 44.362 mm (1.7426 to 1.7465 in.)

Maximum cam lobe height

MAXIMUM CAM LOBE HEIGHT SPECIFICATIONS

Item	Specification
Intake camshaft	44.166 mm (1.7388 in.)
Exhaust camshaft	44.112 mm (1.7367 in.)

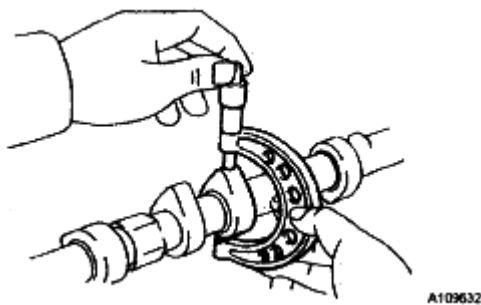


Fig. 291: Checking Cam Lobe Height
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Using a micrometer, measure the journal diameter.

Standard journal diameter

STANDARD JOURNAL DIAMETER SPECIFICATIONS

Item	Specification
No. 1 journal	35.946 to 35.960 mm (1.4152 to 1.4157 in.)
Other journals	25.959 to 25.975 mm (1.0220 to 1.0226 in.)

If the journal diameter is not as specified, check the oil clearance.

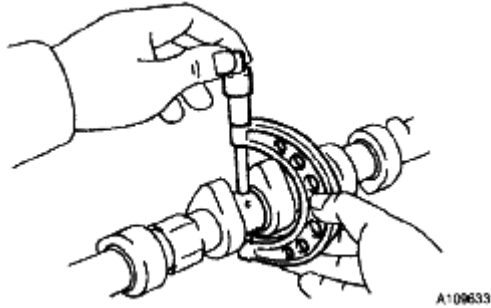


Fig. 292: Checking Journal Diameter

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

4. INSPECT CAMSHAFT TIMING GEAR ASSEMBLY

- Clamp the camshaft in a vise.

NOTE: Be careful not to damage the camshaft in the vise.

- Put the camshaft timing gear assembly and camshaft together by aligning the key groove and straight pin.
- Lightly press the camshaft timing gear assembly against the camshaft, and turn the camshaft timing gear assembly. Push further at the position where the pin enters the groove.

NOTE: Be sure not to turn the camshaft timing gear in the retard direction (the right angle).

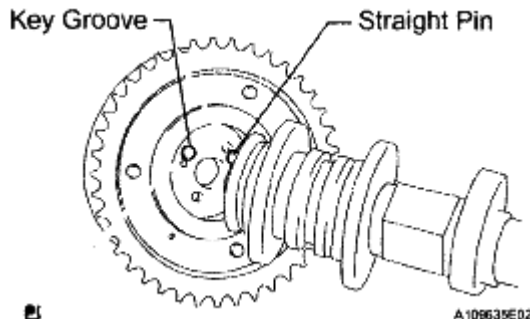


Fig. 293: Identifying Key Groove And Straight Pin

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- Check that there is no clearance between the camshaft timing gear assembly's flange and the

camshaft.

- e. Tighten the flange bolt with the camshaft timing gear fixed.

Torque: 100 N*m (1,020 kgf*cm, 74 ft.*lbf)

- f. Check the lock of the camshaft timing gear assembly.
 1. Clamp the camshaft in a vise, and confirm that the camshaft timing gear assembly is locked.

NOTE: Be careful not to damage the camshaft.

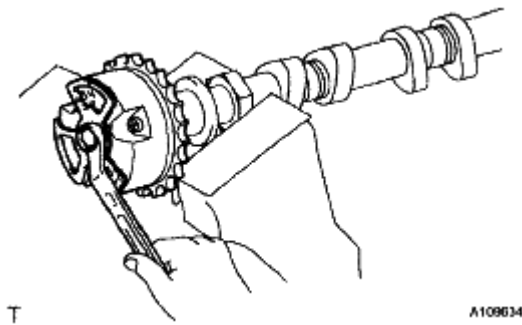


Fig. 294: Checking Lock Of Camshaft Timing Gear
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- g. Release the lock pin.
 1. Cover the 4 oil paths of the cam journal with vinyl tape as shown in the illustration.

HINT:

2 advance side paths are provided in the groove of the camshaft. Plug one of the paths with a rubber piece.

2. Break through the tape of the advance side path and the retard side path on the opposite side to the hole of the advance side path, as shown in the illustration.

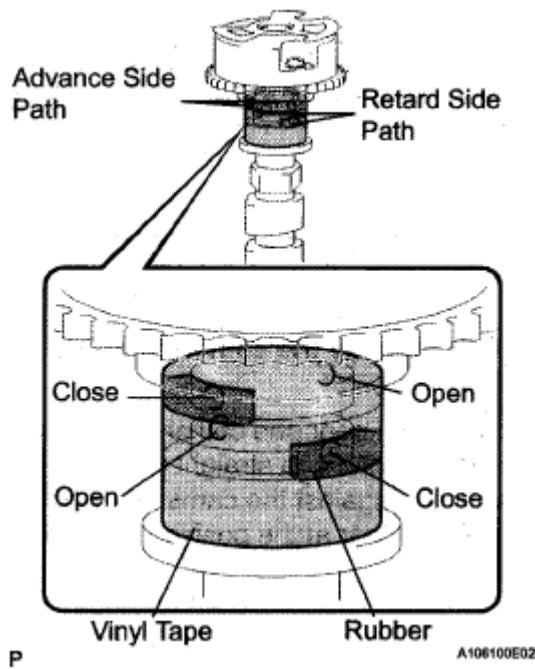


Fig. 295: Covering Oil Paths Of Cam Journal With Vinyl Tape
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

3. Apply approximately 200 kPa (2.0 kgf/cm² 28 psi) of air pressure to the 2 broken paths.

CAUTION: Cover the paths with a piece of cloth when applying pressure to keep oil from splashing.

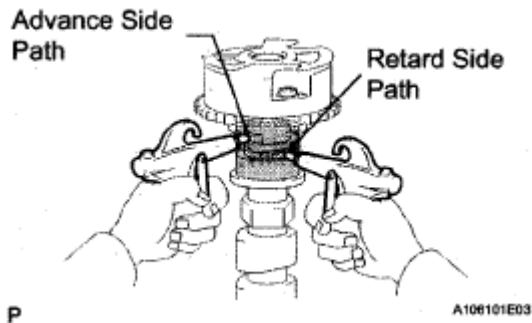


Fig. 296: Applying Air Pressure To Two Broken Paths
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

4. Check that the camshaft timing gear assembly revolves in the advance direction when reducing the air pressure applied to the retard side path.

HINT:

This operation releases the lock pin for the most retarded position.

5. When the camshaft timing gear assembly reaches the most advanced position, release the air pressure from the retard side path and advance side path, in that order.

NOTE: Do not release the air pressure from the advance side path first. The gear may abruptly shift in the retard direction and break the lock pin.

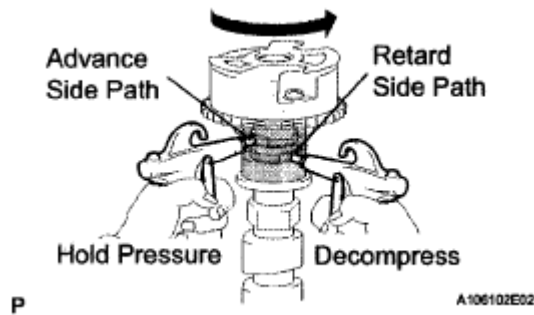


Fig. 297: Checking Camshaft Timing Gear Revolves In Advance Direction
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- h. Check for smooth rotation.
 1. Turn the camshaft timing gear assembly within its movable range (21°) 2 or 3 times, but do not turn it to the most retarded position. Make sure that the gear turns smoothly.

NOTE: Do not use air pressure to perform the smooth operation check.

- i. Check the lock in the most retarded position.
 1. Confirm that the camshaft timing gear assembly is locked at the most retarded position.
- j. Remove the flange bolt and camshaft timing gear assembly.

NOTE:

- Do not remove the other 3 bolts.
- If planning to reuse the gear, be sure to release the straight pin lock before installing the gear.

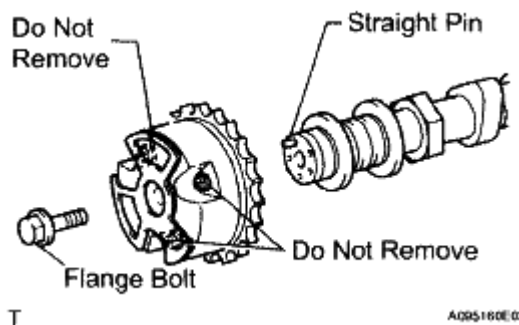


Fig. 298: Removing Flange Bolt And Camshaft Timing Gear

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

5. INSPECT CAMSHAFT TIMING EXHAUST GEAR ASSEMBLY

- a. Clamp the camshaft in a vise.

NOTE: Be careful not to damage the camshaft in the vise.

- b. Put the camshaft timing exhaust gear assembly and camshaft together by aligning the key groove and straight pin.
- c. Lightly press the camshaft timing gear against the camshaft, and turn the camshaft timing gear assembly. Push further at the position where the pin enters the groove.

NOTE: Be sure not to turn the camshaft timing exhaust gear in the retard direction (the right angle).

- d. Check that there is no clearance between the gear's flange and the camshaft.

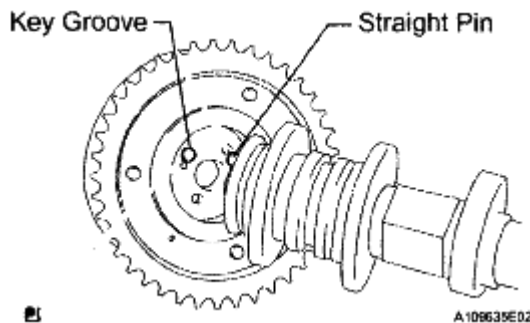


Fig. 299: Identifying Key Groove And Straight Pin
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- e. Tighten the flange bolt with the camshaft timing exhaust gear assembly fixed.

Torque: 100 N*m (1020 kgf*cm, 74 ft.*lbf)

- f. Check the camshaft timing exhaust gear lock.
 1. Make sure that the camshaft timing exhaust gear assembly is locked.

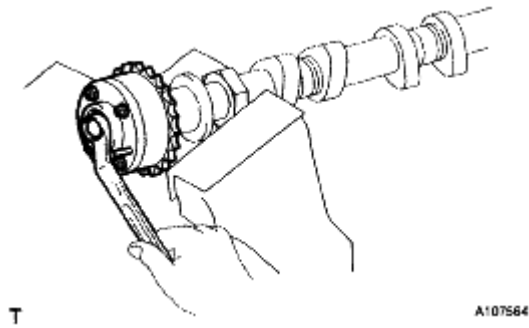


Fig. 300: Checking Camshaft Timing Exhaust Gear Lock
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

g. Release the lock pin.

1. Cover the 4 oil paths of the cam journal with vinyl tape as shown in the illustration.

HINT:

4 oil paths are provided in the groove. Plug 2 paths with rubber pieces.

2. Prick a hole in the tape placed on the advance side path. Prick a hole in the tape placed on the retard side path, on the opposite side to that of the advance side path, as shown in the illustration.

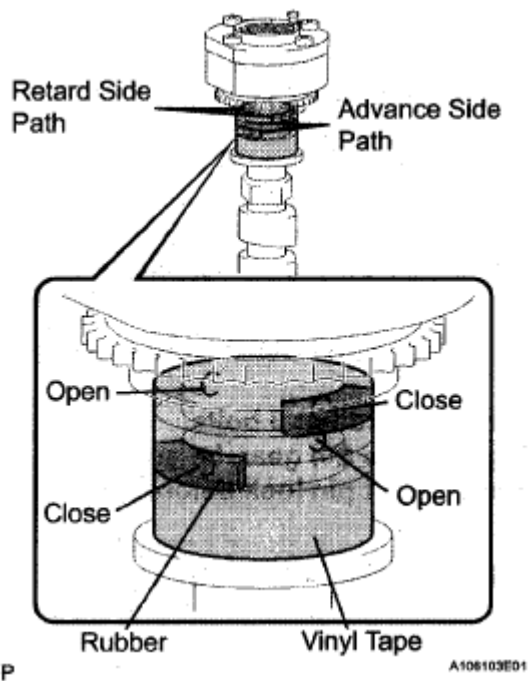


Fig. 301: Covering Oil Paths Of Cam Journal With Vinyl Tape
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

3. Apply approximately 200 kPa (2.0 kgf/cm² , 28 psi) of air pressure to the 2 broken paths (the advance side path and the retard side path).

CAUTION: Cover the paths with a piece of cloth when applying pressure to keep oil from splashing.

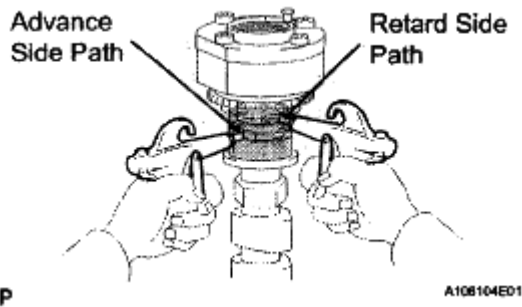


Fig. 302: Applying Air Pressure To Two Broken Paths
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

4. Make sure that the camshaft timing exhaust gear turns in the retard direction when reducing the air pressure applied to the advance side path.

HINT:

The lock pin is released and the camshaft timing exhaust gear turns in the retard direction.

5. When the camshaft timing exhaust gear moves to the most retarded position, release the air pressure from the advance side path, and then release the air pressure from the retard side path.

NOTE: Be sure to release the air pressure from the advance side path first. If the air pressure of the retard side path is released first, the camshaft timing exhaust gear may abruptly shift in the advance direction and break the lock pin or other parts.

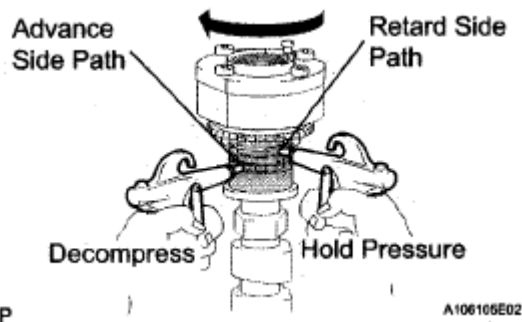


Fig. 303: Checking Camshaft Timing Exhaust Gear Turns In Retard Direction

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

h. Check for smooth rotation.

1. Turn the camshaft timing exhaust gear within its movable range (18.5°) 2 or 3 times, but do not turn it to the most advanced position. Make sure that the gear turns smoothly.

NOTE: When the air pressure is released from the advance side path and then from the retard side path, the gear automatically returns to the most advanced position due to the advance assist spring operation and locks. Gradually release the air pressure from the retard side path before performing the smooth rotation check.

i. Check the lock at the most advanced position.

1. Make sure that the camshaft timing exhaust gear is locked at the most advanced position.

j. Remove the flange bolt and camshaft timing exhaust gear.

NOTE:

- Be sure not to remove the other 4 bolts.
- If planning to reuse the gear, be sure to release the straight pin lock before installing the gear.

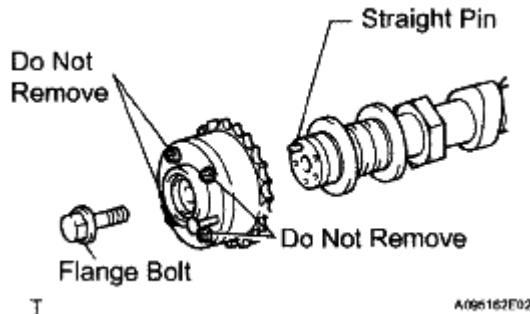


Fig. 304: Removing Flange Bolt And Camshaft Timing Exhaust Gear

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

6. INSPECT CYLINDER HEAD SET BOLT

- a. Using vernier calipers, measure the minimum diameter of the elongated thread at the measuring point.

Standard outside diameter: 10.85 to 11.00 mm (0.4272 to 0.4331 in.)


Minimum outside diameter: 10.70 mm (0.4213 in.)

Measuring Point: 103 mm (4.06 in.)

HINT:

If a visual check reveals no excessively thin areas, check the center of the bolt and find the area that has the lowest diameter.

If the diameter is less than the minimum, replace the cylinder head bolt.

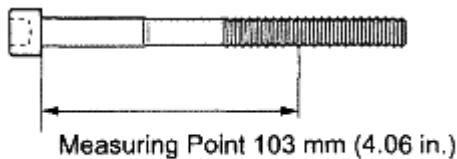

P

A122880E03

Fig. 305: Identifying Cylinder Head Bolt Dimension
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

7. INSPECT CHAIN SUB-ASSEMBLY

- a. Pull the chain with a force of 147 N (15 kgf, 33 lbf) as shown in the illustration.
- b. Using vernier calipers, measure the length of 15 links.

Maximum chain elongation: 136.9 mm (5.390 in.)

NOTE: Perform the measurement at 3 random places. Use the average of the measurements.

If the elongation is greater than the maximum, replace the chain.

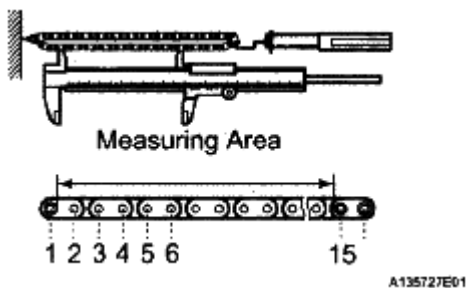


Fig. 306: Measuring Chain Elongation
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

8. INSPECT NO. 2 CHAIN SUB-ASSEMBLY

- a. Pull the chain with a force of 147 N (15 kgf, 33 lbf) as shown in the illustration.
- b. Using vernier calipers, measure the length of 15 links.

Maximum chain elongation: 137.6 mm (5.417 in.)

NOTE: Perform the measurement at 3 random places. Use the average of the measurements.

If the elongation is greater than the maximum, replace the chain.

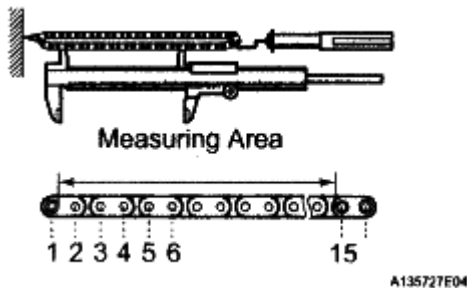


Fig. 307: Measuring No. 2 Chain Elongation
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

9. INSPECT CRANKSHAFT TIMING SPROCKET

- Wrap the chain around the sprocket.
- Using vernier calipers, measure the sprocket diameter with the chain.

Minimum sprocket diameter (with chain): 61.4 mm (2.417 in.)

HINT:

The vernier calipers must contact the chain rollers for the measurement.

If the diameter is less than the minimum, replace the chain and sprocket.

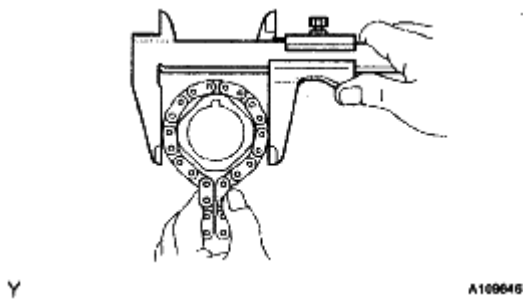


Fig. 308: Checking Crankshaft Timing Sprocket Diameter With Chain
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

10. INSPECT IDLE SPROCKET ASSEMBLY


- Wrap the chain around the sprocket.
- Using vernier calipers, measure the sprocket diameter with the chain.

Minimum sprocket diameter (with chain): 61.4 mm (2.417 in.)

HINT:

The vernier calipers must contact the chain rollers for the measurement.

If the diameter is less than the minimum, replace the chain and sprocket.

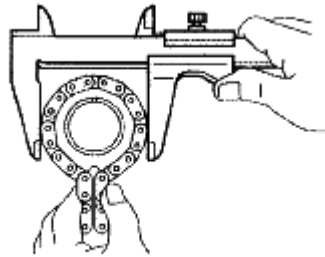

Y


A10B647

Fig. 309: Checking Idle Sprocket Diameter With Chain
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

11. INSPECT IDLE GEAR SHAFT OIL CLEARANCE

- a. Using a micrometer, measure the idle gear shaft diameter.

Idle gear shaft diameter: 22.987 to 23.000 mm (0.9050 to 0.9055 in.)

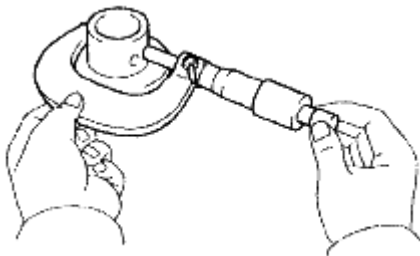

Y

A10B648

Fig. 310: Checking Idle Gear Shaft Diameter
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Using a caliper gauge, measure the inside diameter of the idle sprocket.

Idle gear inside diameter: 23.020 to 23.030 mm (0.9063 to 0.9067 in.)

- c. Subtract the idle gear shaft diameter measurement from the idle sprocket inside diameter measurement.

Standard oil clearance: 0.020 to 0.043 mm (0.0008 to 0.0017 in.)

Maximum oil clearance: 0.093 mm (0.0037 in.)

If the thrust oil clearance is greater than the maximum, replace the idle gear shaft and idle sprocket.

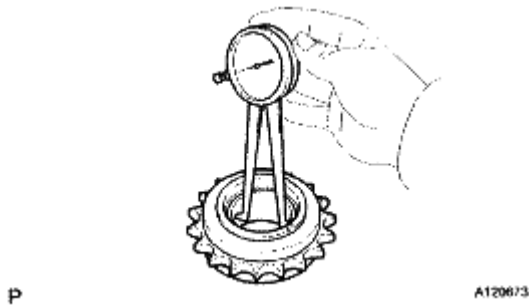


Fig. 311: Checking Inside Diameter Of Idle Gear
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

12. INSPECT NO. 1 CHAIN TENSIONER ASSEMBLY

- Move the stopper plate upward to release the lock. Push the plunger and check that it moves smoothly. If necessary, replace the No. 1 chain tensioner assembly.

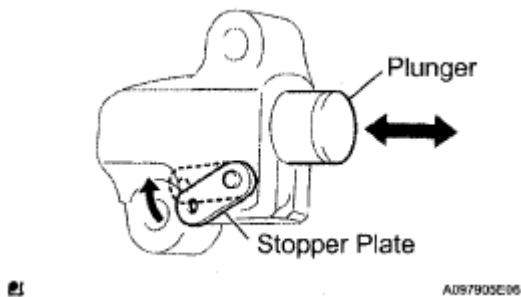


Fig. 312: Inspecting No. 1 Chain Tensioner Assembly
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

13. INSPECT NO. 2 CHAIN TENSIONER ASSEMBLY

- Check that the plunger moves smoothly.
- Measure the worn depth of the No. 2 chain tensioner.

Maximum depth: 0.9 mm (0.035 in.)

If the depth is greater than the maximum, replace the No. 2 chain tensioner assembly.

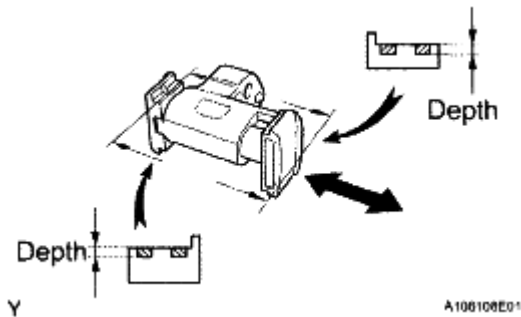


Fig. 313: Checking No 2 Chain Tensioner Assembly
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

14. INSPECT NO. 3 CHAIN TENSIONER ASSEMBLY

- a. Check that the plunger moves smoothly.
- b. Measure the worn depth of the No. 3 chain tensioner.

Maximum depth: 0.9 mm (0.035 in.)

If the depth is greater than the maximum, replace the No. 3 chain tensioner assembly.

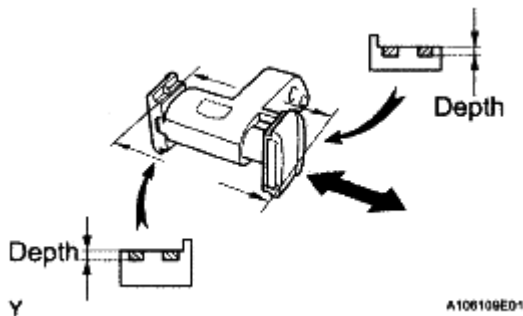


Fig. 314: Checking No 3 Chain Tensioner Assembly
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

15. INSPECT CHAIN TENSIONER SLIPPER

- a. Measure the worn depth of the chain tensioner slipper.

Maximum depth: 1.0 mm (0.039 in.)

If the depth is greater than the maximum, replace the chain tensioner slipper.

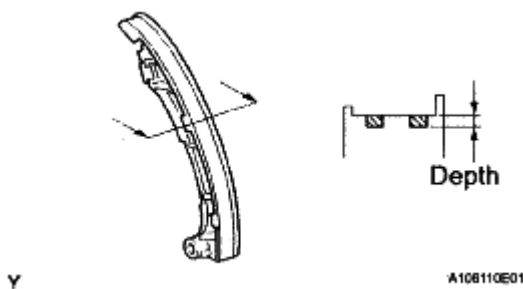


Fig. 315: Inspecting Chain Tensioner Slipper
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

16. INSPECT NO. 1 CHAIN VIBRATION DAMPER

- a. Measure the worn depth of the No. 1 chain vibration damper.

Maximum depth: 1.0 mm (0.039 in.)

If the depth is greater than the maximum, replace the No. 1 chain vibration damper.

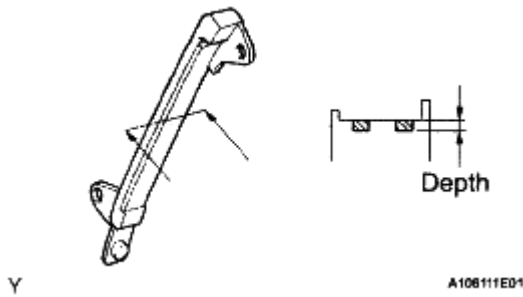


Fig. 316: Inspecting No. 1 Chain Vibration Damper
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

17. INSPECT NO. 2 CHAIN VIBRATION DAMPER

- a. Measure the worn depth of the No. 2 chain vibration damper.

Maximum depth: 1.0 mm (0.039 in.)

If the depth is greater than the maximum, replace the No. 2 chain vibration damper.

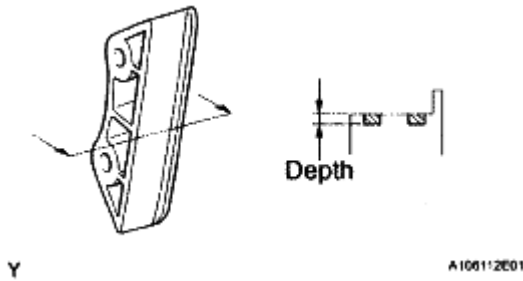


Fig. 317: Inspecting No. 2 Chain Vibration Damper
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

18. INSPECT CYLINDER HEAD SUB-ASSEMBLY

- a. Using a precision straight edge and feeler gauge, measure the warpage of the contact surface of the cylinder block and manifolds.

Standard warpage

WARPAGE SPECIFICATIONS


Item	Warpage
Cylinder head lower	0.05 mm (0.0020 in.)
Intake	0.08 mm (0.0031 in.)
Exhaust	0.08 mm (0.0031 in.)

Maximum warpage


WARPAGE SPECIFICATIONS

Item	Warpage
Cylinder head lower	0.10 mm (0.0039 in.)
Intake	0.10 mm (0.0039 in.)
Exhaust	0.10 mm (0.0039 in.)

If the warpage is greater than the maximum, replace the cylinder head assembly.

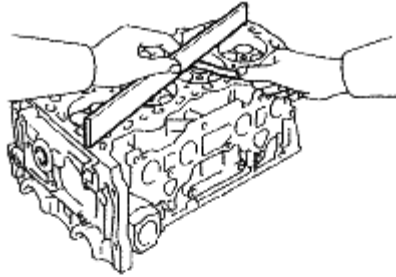


Cylinder head lower side:

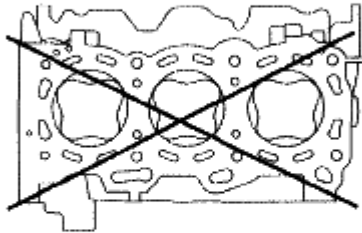

Intake side:



 Exhaust side:

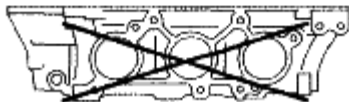

T

A12B747E01

Fig. 318: Measuring Warpage Of Contact Surface Of Cylinder Block And Manifolds
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Using a dye penetrant, check the intake ports, exhaust ports and cylinder surface for cracks. If cracked, replace the cylinder head assembly.

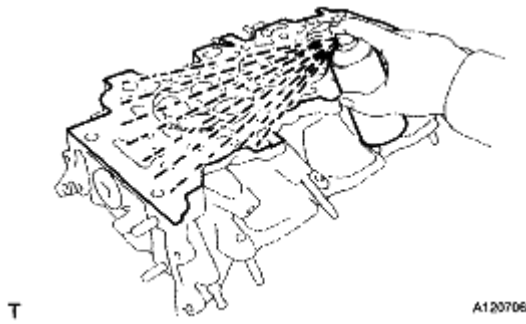


Fig. 319: Checking Intake Ports, Exhaust Ports And Cylinder Surface For Cracks
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

19. INSPECT INTAKE VALVE

- a. Using a micrometer, measure the diameter of the valve stem.

Valve stem diameter: 5.470 to 5.485 mm (0.2154 to 0.2159 in.)

If the valve stem is not as specified, check the oil clearance.

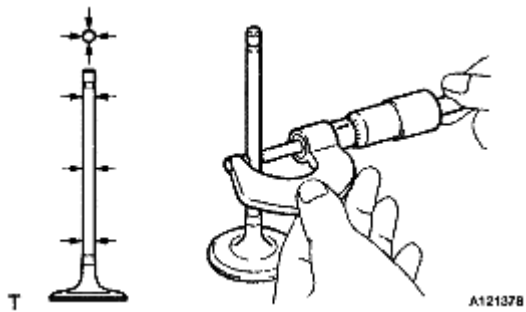


Fig. 320: Checking Valve Stem Diameter
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Using vernier calipers, measure the valve head margin thickness.

Standard margin thickness: 1.0 mm (0.039 in.)

Minimum margin thickness: 0.5 mm (0.0197 in.)

If the margin thickness is less than the minimum, replace the intake valve.

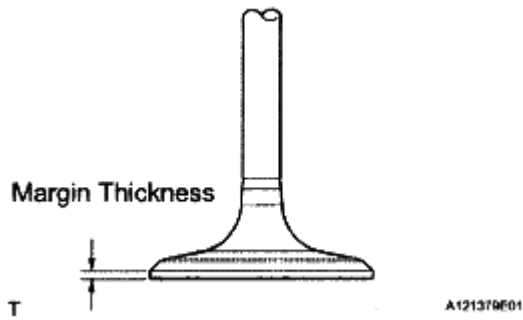


Fig. 321: Inspecting Head Margin Thickness

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Using vernier calipers, measure the valve's overall length.

Standard overall length: 105.85 mm (4.1673 in.)

Minimum overall length: 105.35 mm (4.1476 in.)

If the overall length is less than the minimum, replace the intake valve.

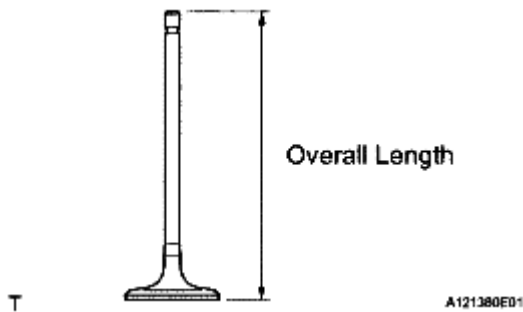


Fig. 322: Inspecting Valve Overall Length

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

20. INSPECT EXHAUST VALVE

- a. Using a micrometer, measure the diameter of the valve stem.

Valve stem diameter: 5.465 to 5.480 mm (0.2151 to 0.2157 in.)

If the valve stem is not as specified, check the oil clearance.

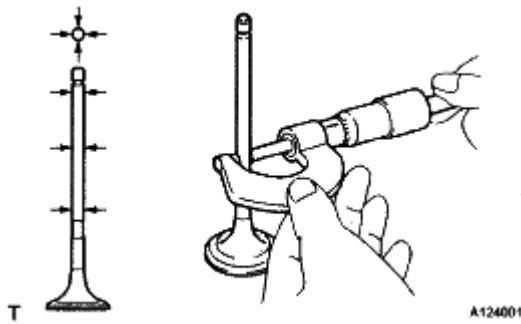


Fig. 323: Checking Diameter Of Exhaust Valve Stem
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Using vernier calipers, measure the valve head margin thickness.

Standard margin thickness: 1.0 mm (0.039 in.)

Minimum margin thickness: 0.5 mm (0.0197 in.)

If the margin thickness is less than the minimum, replace the exhaust valve.

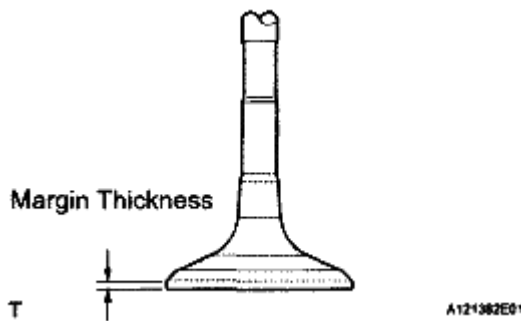


Fig. 324: Inspecting Valve Head Margin Thickness
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Using vernier calipers, measure the valve's overall length.

Standard overall length: 110.40 mm (4.3464 in.)

Minimum overall length: 109.90 mm (4.3268 in.)

If the overall length is less than the minimum, replace the exhaust valve.

21. INSPECT INTAKE VALVE SEAT

- a. Apply a light coat of Prussian blue to the valve face.

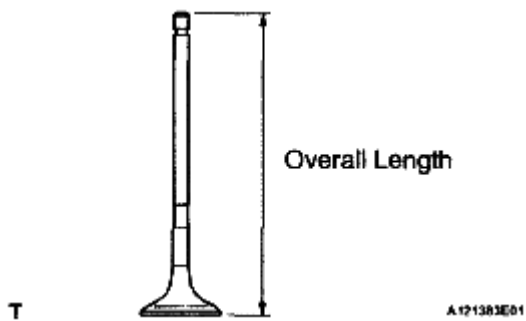


Fig. 325: Identifying Valve Overall Length
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Lightly press the valve face against the valve seat.
- c. Check the valve face and valve spring seat by using the following procedure:
 1. If Prussian blue appears around the entire valve face, the valve face is concentric. If not, replace the valve.
 2. If Prussian blue appears around the entire valve seat, the guide and valve face are concentric. If not, resurface the valve spring seat.
 3. Check that the valve spring seat contacts in the middle of the valve face with the width between 1.1 and 1.5 mm (0.043 and 0.059 in.).

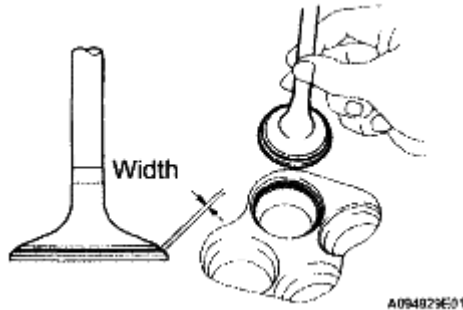


Fig. 326: Applying Light Coat Of Prussian Blue (Or White Lead) To Valve Face
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

22. INSPECT EXHAUST VALVE SEAT

- a. Apply a light coat of Prussian blue to the valve face.
- b. Lightly press the valve face against the valve spring seat.
- c. Check the valve face and valve spring seat by using the following procedure:
 1. If Prussian blue appears around the entire valve face, the valve face is concentric. If not, replace the valve.
 2. If Prussian blue appears around the entire valve seat, the guide and valve face are concentric. If not, resurface the valve spring seat.
 3. Check that the valve spring seat contacts in the middle of the valve face with the width between 1.1 and 1.5 mm (0.043 and 0.059 in.).

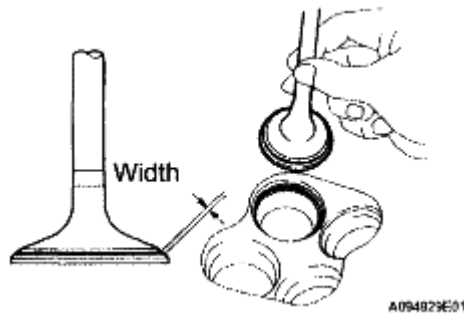


Fig. 327: Applying Light Coat Of Prussian Blue (Or White Lead) To Valve Face
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

23. REPAIR INTAKE VALVE SEAT

NOTE:

- Repair the seat while checking the seating position.
- Keep the lip free of foreign matter.

- a. Using a 45° cutter, resurface the valve spring seat so that the valve spring seat width is more than the specification.

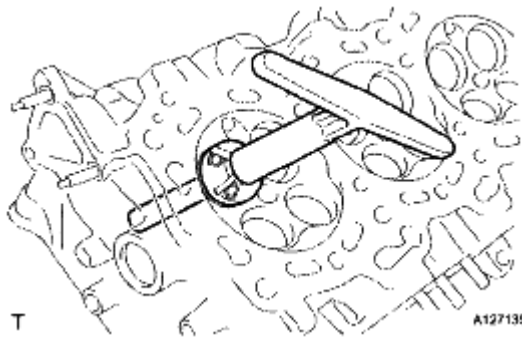


Fig. 328: Surfacing Valve Seat
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Using 30° and 60° cutters, correct the valve seat so that the valve contacts the entire circumference of the seat. The contact should be in the center of the valve spring seat, and the valve spring seat width should be maintained within the specified range around the entire circumference of the seat.

Width: 1.1 to 1.5 mm (0.043 to 0.059 in.)

- c. Handrub the valve and valve seat with an abrasive compound.
- d. Check the valve seating position.

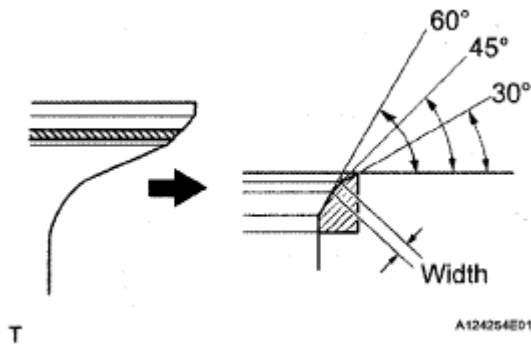


Fig. 329: Identifying Valve Seat Width

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

24. REPAIR EXHAUST VALVE SEAT

NOTE:

- Repair the seat while checking the seating position.
- Keep the lip free of foreign matter.

- a. Using a 45° cutter, resurface the valve spring seat so that the valve spring seat width is more than the specification.

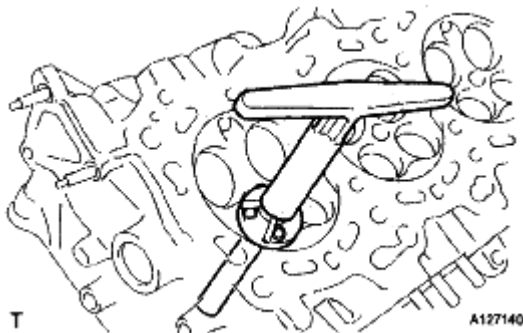


Fig. 330: Surfacing Valve Seat

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Using 30° and 75° cutters, correct the valve seat so that the valve contacts the entire circumference of the seat. The contact should be in the center of the valve seat, and the valve seat width should be maintained within the specified range around the entire circumference of the seat.

Width: 1.1 to 1.5 mm (0.043 to 0.059 in.)

- c. Handrub the valve and valve seat with an abrasive compound.
- d. Check the valve seating position.

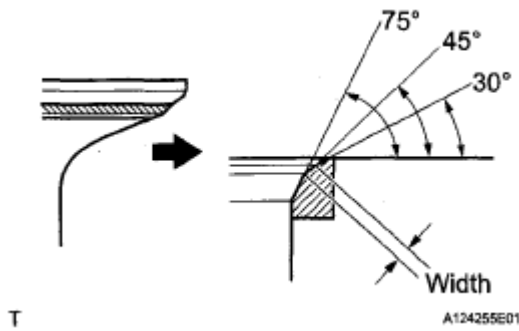


Fig. 331: Checking Valve Seating Position
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

25. INSPECT INNER COMPRESSION SPRING

- a. Using vernier calipers, measure the free length of the inner compression spring.

Free length: 45.46 mm (1.7898 in.)

If the free length is not as specified, replace the inner compression spring.

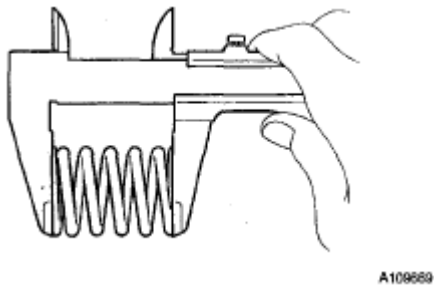


Fig. 332: Checking Inner Compression Spring Free Length
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Using a steel square, measure the deviation of the inner compression spring.

Maximum deviation: 1.0 mm (0.039 in.)

Maximum angle (reference): 2°

If the deviation is greater than the maximum, replace the inner compression spring.

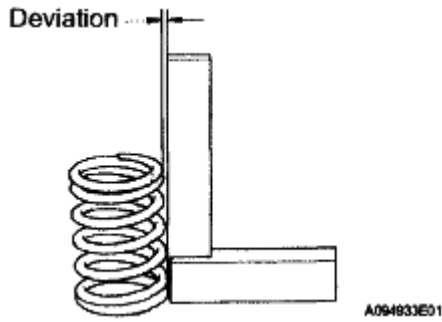


Fig. 333: Measuring Deviation Of Inner Compression Spring
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

26. INSPECT VALVE GUIDE BUSH OIL CLEARANCE

- Using a caliper gauge, measure the inside diameter of the valve guide bush.

Bush inside diameter: 5.510 to 5.530 mm (0.2169 to 0.2177 in.)

- Subtract the valve stem diameter measurement from the valve guide bush inside diameter measurement.

Standard clearance

CLEARANCE SPECIFICATIONS

Item	Clearance
Intake	0.025 to 0.060 mm (0.0010 to 0.0024 in.)
Exhaust	0.030 to 0.065 mm (0.0012 to 0.0026 in.)

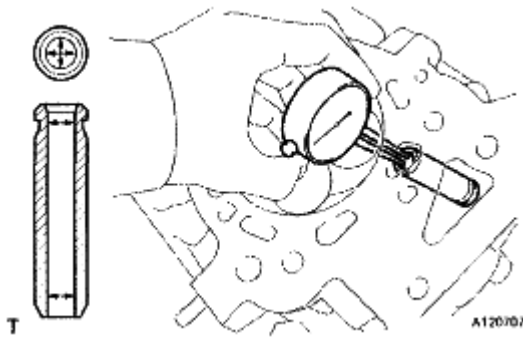


Fig. 334: Checking Inside Diameter Of Guide Bush
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

Maximum oil clearance

MAXIMUM OIL CLEARANCE

Item	Clearance
Intake	0.08 mm (0.0032 in.)

Exhaust 0.10 mm (0.0039 in.)

For intake side:

If the clearance is greater than the maximum, replace the intake valve and intake valve guide bush.

For exhaust side:

If the clearance is greater than the maximum, replace the exhaust valve and exhaust valve guide bush.

27. INSPECT CAMSHAFT THRUST CLEARANCE

a. Inspect the bank 1 camshaft thrust clearance.

1. Install the bank 1 camshaft (See **REASSEMBLY**).
2. Using a dial indicator, measure the thrust clearance while moving the camshaft back and forth.

Standard thrust clearance: 0.08 to 0.13 mm (0.0031 to 0.0051 in.)

Maximum thrust clearance: 0.15 mm (0.006 in.)

If the thrust clearance is greater than the maximum, replace the cylinder head. If the thrust surface is damaged, replace the camshaft.

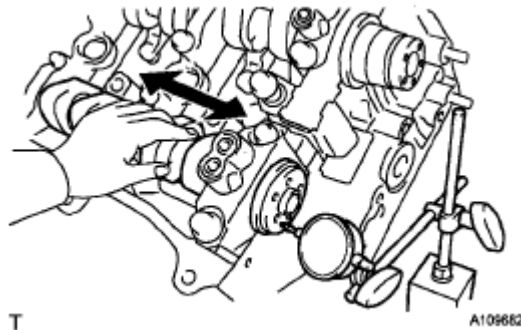


Fig. 335: Checking Camshaft Thrust Clearance
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

b. Inspect the bank 2 camshaft thrust clearance.

1. Install the bank 2 camshaft (See **REASSEMBLY**).
2. Using a dial indicator, measure the thrust clearance while moving the camshaft back and forth.

Standard thrust clearance: 0.08 to 0.13 mm (0.0031 to 0.0051 in.)

Maximum thrust clearance: 0.15 mm (0.006 in.)

If the thrust clearance is greater than the maximum, replace the cylinder head. If the thrust surface is damaged, replace the camshaft.

28. INSPECT CAMSHAFT OIL CLEARANCE

- Clean the camshaft bearing caps, camshaft housing and camshaft journals.
- Place the camshafts on the camshaft housing.
- Lay a strip of Plastigage across each of the camshaft journals.
- Install the camshaft bearing caps (See **REASSEMBLY**).

NOTE: Do not turn the camshaft.

- Remove the camshaft bearing caps (See **DISASSEMBLY**).

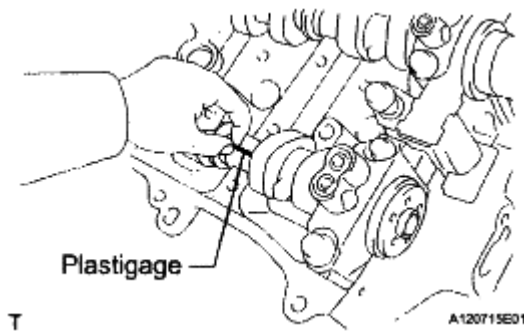


Fig. 336: Checking Camshaft Oil Clearance
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- Measure the Plastigage at its widest point.

Standard oil clearance

STANDARD OIL CLEARANCE

Item	Oil Clearance
No. 1 journal	0.040 to 0.079 mm (0.0016 to 0.0031 in.)
Other journals	0.025 to 0.062 mm (0.00098 to 0.0024 in.)

Maximum oil clearance

MAXIMUM OIL CLEARANCE

Item	Oil Clearance
No. 1 journal	0.10 mm (0.0039 in.)
Other journals	0.09 mm (0.0035 in.)

If the oil clearance is greater than the maximum, replace the camshaft. If necessary, replace the camshaft housing.

- g. Clean the camshaft bearing caps, camshaft housing and camshaft journals.
- h. Place the camshafts on the camshaft housing.

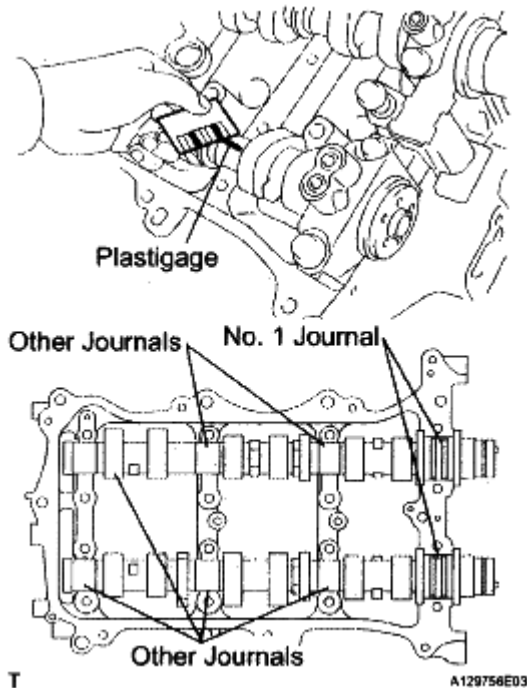


Fig. 337: Measuring Plastigage At Camshaft Widest Point
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- i. Lay a strip of Plastigage across each of the camshaft journals.
- j. Install the bearing caps (See **REASSEMBLY**).

NOTE: Do not turn the camshaft.

- k. Remove the bearing caps (See **DISASSEMBLY**).

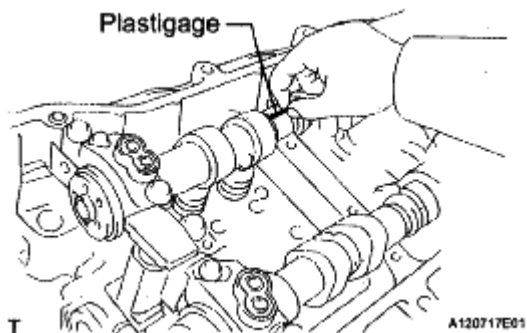


Fig. 338: Laying Strip Of Plastigage Across Each Of Camshaft Journals
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

1. Measure the Plastigage at its widest point.

Standard oil clearance

STANDARD OIL CLEARANCE

Item	Oil Clearance
No. 1 journal	0.040 to 0.079 mm (0.0016 to 0.0031 in.)
Other journals	0.025 to 0.062 mm (0.00098 to 0.0024 in.)

Maximum oil clearance

MAXIMUM OIL CLEARANCE

Item	Oil Clearance
No. 1 journal	0.10 mm (0.0039 in.)
Other journals	0.09 mm (0.0035 in.)

If the oil clearance is greater than the maximum, replace the camshaft. If necessary, replace the camshaft housing.

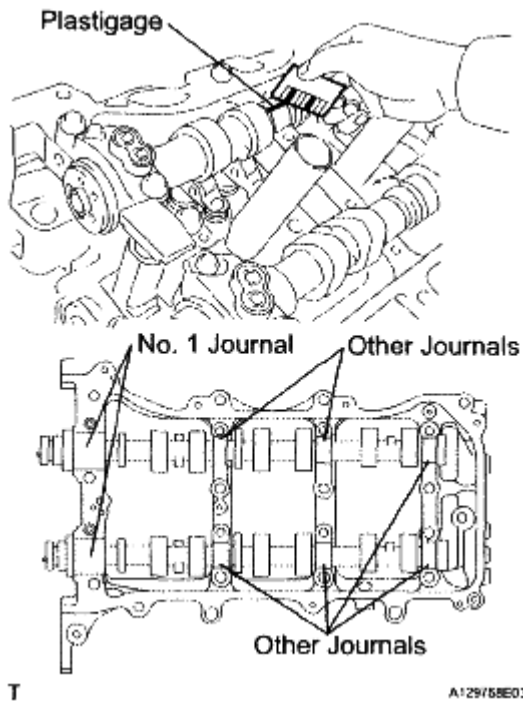


Fig. 339: Measuring Plastigage At Camshaft Widest Point
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

29. INSPECT CONNECTING ROD THRUST CLEARANCE

- a. Install the connecting rod cap (See **REASSEMBLY**).
- b. Using a dial indicator, measure the thrust clearance while moving the connecting rod back and

forth.

Standard thrust clearance: 0.15 to 0.40 mm (0.0059 to 0.0157 in.)

Maximum thrust clearance: 0.50 mm (0.020 in.)

If the thrust clearance is greater than the maximum, replace the connecting rod assemblies as necessary. If necessary, replace the crankshaft.

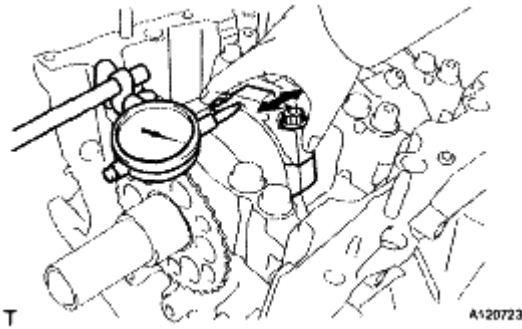


Fig. 340: Checking Connecting Rod Thrust Clearance
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

30. INSPECT CONNECTING ROD OIL CLEARANCE

- a. Clean the crank pin and bearing.
- b. Check the crank pin and bearing for pitting and scratches.
- c. Lay a strip of Plastigage on the crank pin.

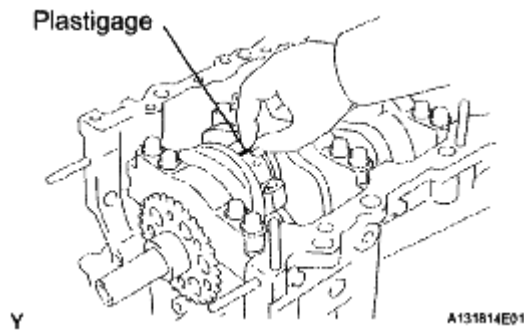


Fig. 341: Laying Strip Of Plastigage On Crank Pin
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Check that the front mark of the connecting rod cap is facing forward.
- e. Install the connecting rod cap (See **REASSEMBLY**).

NOTE: Do not turn the crankshaft.

- f. Remove the 2 bolts and connecting rod cap (See **DISASSEMBLY**).

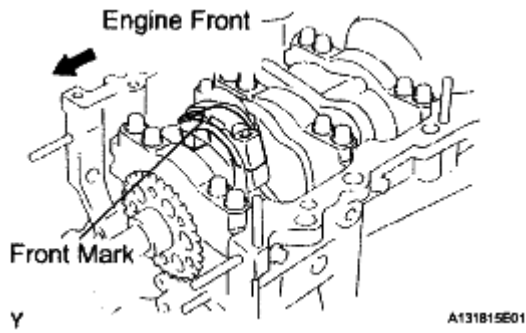


Fig. 342: Checking Front Mark Of Connecting Rod Cap
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- g. Measure the Plastigage at its widest point.

Standard oil clearance: 0.045 to 0.067 mm (0.0018 to 0.0026 in.)

Maximum oil clearance: 0.070 mm (0.0028 in.)

If the oil clearance is greater than the maximum, replace the connecting rod bearings. If necessary, inspect the crankshaft.

HINT:

If replacing a bearing, replace it with one that has the same number as its respective connecting rod cap. Each bearing's standard thickness is indicated by a 1, 2, 3 or 4 mark on its surface.

Connecting rod diameter

CONNECTING ROD DIAMETER

Mark	Diameter
1	56.000 to 56.006 mm (2.2047 to 2.2050 in.)
2	56.007 to 56.012 mm (2.2050 to 2.2052 in.)
3	56.013 to 56.018 mm (2.2052 to 2.2054 in.)
4	56.019 to 56.024 mm (2.2055 to 2.2057 in.)

Connecting rod bearing center wall thickness

CONNECTING ROD BEARING CENTER WALL THICKNESS

Mark	Thickness
1	1.481 to 1.484 mm (0.0583 to 0.0584 in.)
2	1.484 to 1.487 mm (0.0584 to 0.0585 in.)
3	1.487 to 1.490 mm (0.0585 to 0.0587 in.)
4	1.490 to 1.493 mm (0.0587 to 0.0588 in.)

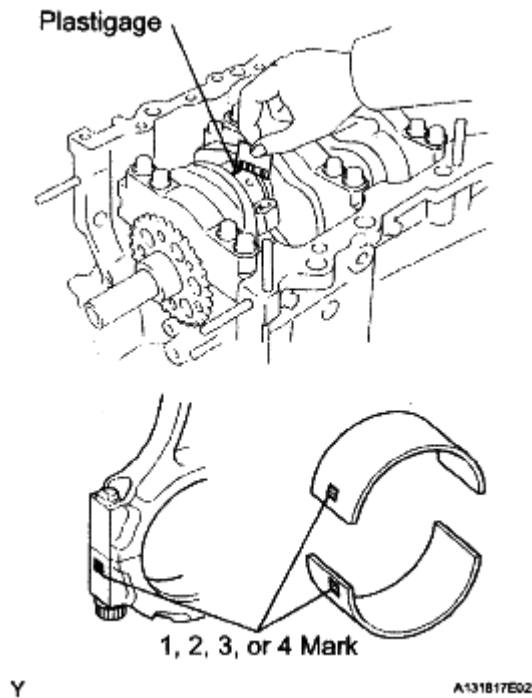


Fig. 343: Measuring Plastigage Widest Point
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

Crankshaft pin diameter: 52.992 to 53.000 mm (2.0863 to 2.0866 in.)

NOTE: Completely remove the Plastigage after the measurement.

31. INSPECT CRANKSHAFT THRUST CLEARANCE

- Install the crankshaft bearing cap (See **REASSEMBLY**).
- Using a dial indicator, measure the thrust clearance while prying the crankshaft back and forth with a screwdriver.

Standard thrust clearance: 0.04 to 0.24 mm (0.0016 to 0.0094 in.)

Maximum thrust clearance: 0.30 mm (0.0118 in.)

If the thrust clearance is greater than the maximum, replace the thrust washers as a set. If necessary, replace the crankshaft.

Thrust washer thickness: 2.43 to 2.48 mm (0.0957 to 0.0976 in.)

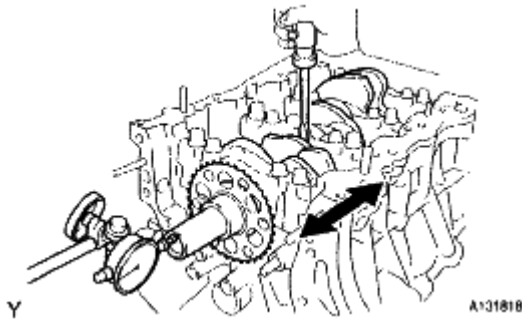


Fig. 344: Measuring Crankshaft Thrust Clearance
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

32. INSPECT CYLINDER BLOCK FOR WARPAGE

- a. Using a precision straight edge and feeler gauge, measure the warpage of the contact surface of the cylinder head gasket.

Maximum warpage: 0.07 mm (0.0028 in.)

If the warpage is greater than the maximum, replace the cylinder block.

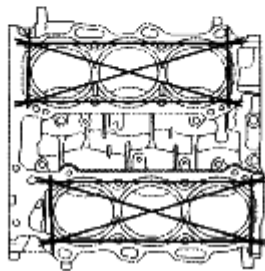
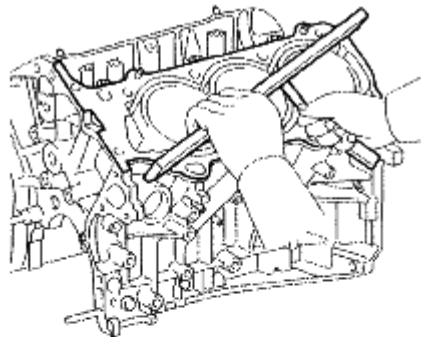


Fig. 345: Measuring Warpage Of Contact Surface Of Cylinder Head Gasket
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

33. INSPECT CYLINDER BORE

- a. Visually check the cylinder for vertical scratches. If deep scratches are present, rebore all the 6 cylinders. If necessary, replace the cylinder block.

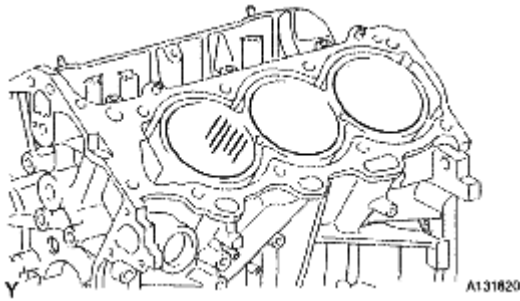


Fig. 346: Checking Cylinder For Vertical Scratches
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Using a cylinder gauge, measure the cylinder bore diameter at positions A and B in the thrust and axial directions.

Standard diameter: 94.000 to 94.012 mm (3.7008 to 3.7013 in.)

Maximum diameter: 94.200 mm (3.7087 in.)

If the average diameter of 4 positions is greater than the maximum, replace the cylinder block.

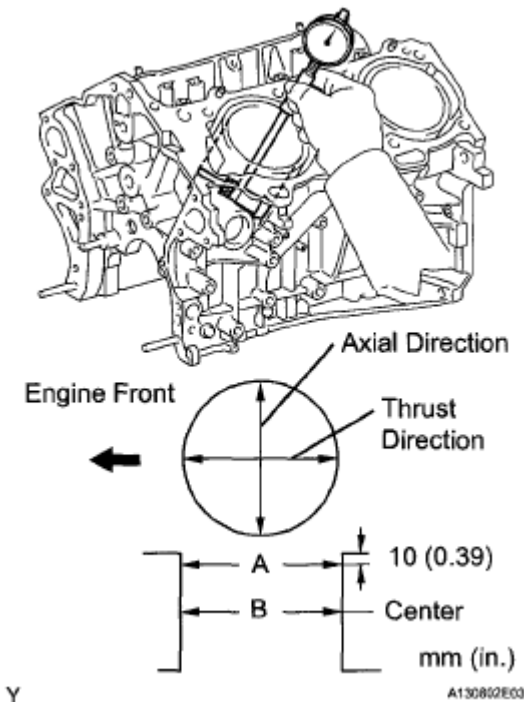


Fig. 347: Measuring Cylinder Bore Diameter
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

34. INSPECT PISTON SUB-ASSEMBLY WITH PIN

- a. Using a micrometer, measure the piston diameter at right angles to the piston center line where the

distance from the piston end is as specified.

Distance: 9.8 mm (0.3858 in.)

Standard diameter: 93.960 to 93.980 mm (3.6992 to 3.7000 in.)

Maximum diameter: 93.830 mm (3.6941 in.)

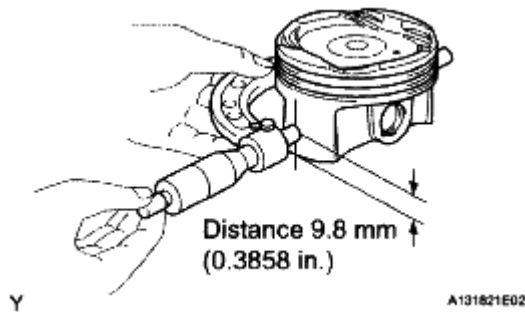


Fig. 348: Checking Piston Diameter

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

35. INSPECT PISTON OIL CLEARANCE

- Measure the cylinder bore diameter in the thrust directions.
- Subtract the piston diameter measurement from the cylinder bore diameter measurement.

Standard oil clearance: 0.020 to 0.052 mm (0.0008 to 0.0020 in.)

Maximum oil clearance: 0.060 mm (0.0024 in.)

If the oil clearance is greater than the maximum, replace all the pistons. If necessary, replace the cylinder block.

36. INSPECT RING GROOVE CLEARANCE


- Using a feeler gauge, measure the clearance between a new piston ring and the wall of the ring groove.

Ring groove clearance

RING GROOVE CLEARANCE

Item	Clearance
No. 1	0.020 to 0.070 mm (0.0008 to 0.0028 in.)
No. 2	0.020 to 0.060 mm (0.0008 to 0.0024 in.)
Oil	0.070 to 0.150 mm (0.0028 to 0.0059 in.)


If the clearance is not as specified, replace the piston.

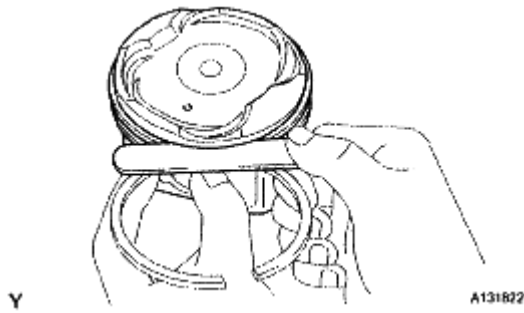**Fig. 349: Measuring Ring Groove**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

37. INSPECT PISTON RING END GAP

- a. Insert the piston ring into the cylinder bore.
- b. Using a piston, push the piston ring a little beyond the bottom of the ring travel, 110 mm (4.33 in.) from the top of the cylinder block.

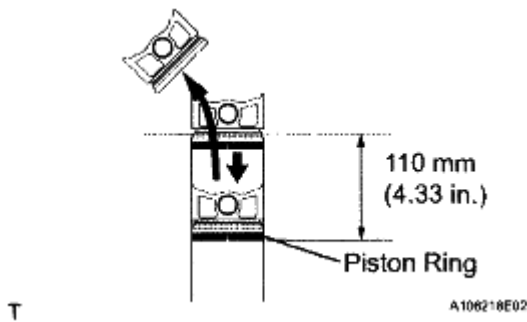**Fig. 350: Inserting Piston Ring Into Cylinder Bore**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Using a feeler gauge, measure the end gap.

Standard end gap**STANDARD END GAP SPECIFICATIONS**

Item	End Gap
No. 1	0.25 to 0.35 mm (0.0098 to 0.0138 in.)
No. 2	0.50 to 0.60 mm (0.0197 to 0.0236 in.)
Oil	0.10 to 0.40 mm (0.0039 to 0.0157 in.)

Maximum end gap**MAXIMUM END GAP**

Item	End Gap
No. 1	0.50 mm (0.0197 in.)

No. 2	0.85 mm (0.0335 in.)
Oil	0.60 mm (0.0236 in.)

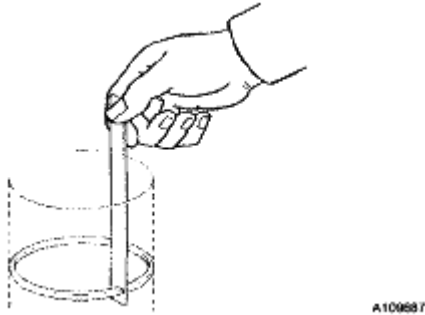


Fig. 351: Checking End Gap
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

If the end gap is greater than the maximum, replace the piston ring. If the end gap is greater than the maximum even with a new piston ring, rebore all the 6 cylinders or replace the cylinder block.

38. INSPECT PISTON PIN OIL CLEARANCE

- Using a caliper gauge, measure the inside diameter of the piston pin hole.

Piston pin hole inside diameter

PISTON PIN HOLE INSIDE DIAMETER

Mark	Diameter
A	22.001 to 22.004 mm (0.8662 to 0.8663 in.)
B	22.004 to 22.007 mm (0.8663 to 0.8664 in.)
C	22.007 to 22.010 mm (0.8664 to 0.8665 in.)

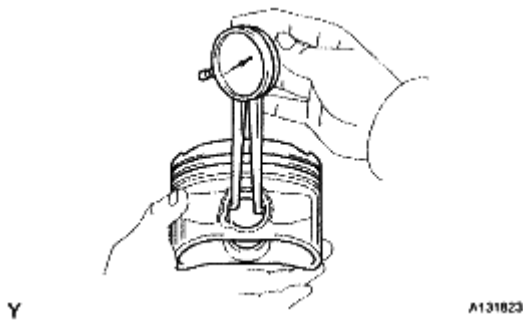


Fig. 352: Measuring Inside Diameter Of Piston Pin Hole
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- Using a micrometer, measure the piston pin diameter.

Piston pin diameter

PISTON PIN DIAMETER

Mark	Diameter
A	21.997 to 22.000 mm (0.8660 to 0.8661 in.)
B	22.000 to 22.003 mm (0.8661 to 0.8663 in.)
C	22.003 to 22.006 mm (0.8663 to 0.8664 in.)

- c. Subtract the piston pin diameter measurement from the piston pin hole diameter measurement.

Standard oil clearance: 0.001 to 0.007 mm (0.00004 to 0.00028 in.)

Maximum oil clearance: 0.015 mm (0.0006 in.)

If the oil clearance is greater than the maximum, replace the piston and piston pin as a set.

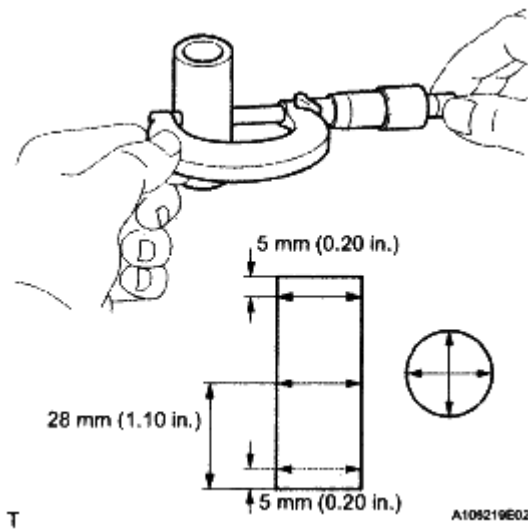


Fig. 353: Checking Piston Pin Diameter

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Using a caliper gauge, measure the inside diameter of the connecting rod bushing.

Bushing inside diameter

BUSHING INSIDE DIAMETER

Mark	Diameter
A	22.005 to 22.008 mm (0.8663 to 0.8665 in.)
B	22.009 to 22.011 mm (0.8665 to 0.8666 in.)
C	22.012 to 22.014 mm (0.8666 to 0.8667 in.)

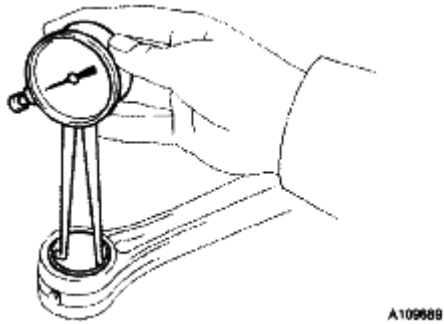


Fig. 354: Checking Inside Diameter Of Connecting Rod Bushing
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- e. Subtract the piston pin diameter measurement from the bushing inside diameter measurement.

Standard oil clearance: 0.005 to 0.011 mm (0.0002 to 0.0004 in.)

Maximum oil clearance: 0.030 mm (0.0012 in.)

If the oil clearance is greater than the maximum, replace the bushing. If necessary, replace the connecting rod and piston pin as a set.

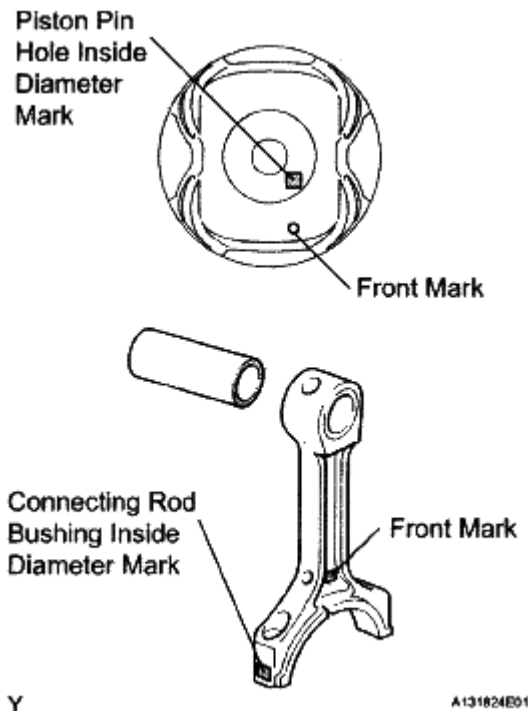


Fig. 355: Identifying Front Mark Of Piston Pin
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

39. INSPECT CONNECTING ROD

- a. Using a rod aligner and feeler gauge, check the connecting rod alignment.

1. Check for out-of-alignment.

Maximum out-of-alignment: 0.05 mm (0.0020 in.) per 100 mm (3.94 in.)

If the out-of-alignment is greater than the maximum, replace the connecting rod assembly.

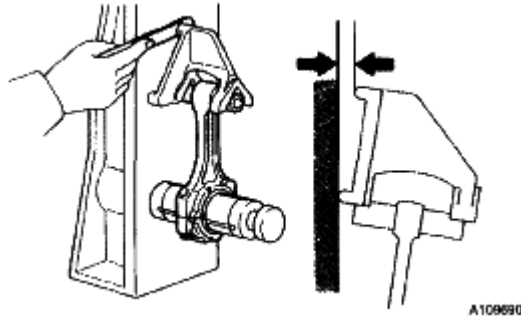


Fig. 356: Checking Connecting Rod Alignment
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

2. Check for twist.

Maximum twist: 0.15 mm (0.0059 in.) per 100 mm (3.94 in.)

If the twist is greater than the maximum, replace the connecting rod assembly.

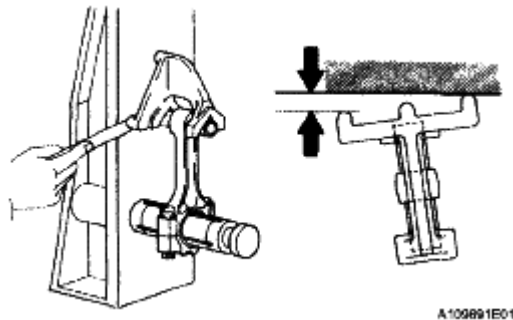


Fig. 357: Checking Connecting Rod For Twist
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


40. INSPECT CONNECTING ROD BOLT

- a. Using vernier calipers, measure the tension portion diameter of the bolt.

Standard diameter: 7.2 to 7.3 mm (0.284 to 0.287 in.)

Minimum diameter: 7.0 mm (0.276 in.)

If the diameter is less than the minimum, replace the bolt.

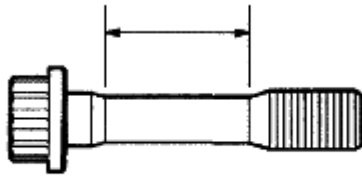

2

A109602


Fig. 358: Identifying Tension Portion Diameter Of Bolt
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

41. INSPECT CRANKSHAFT

- a. Inspect for circle runout.
 1. Clean the crank journal.
 2. Place the crankshaft on V-blocks.
 3. Using a dial indicator, measure the circle runout at the center journal.

Maximum circle runout: 0.06 mm (0.0024 in.)

If the circle runout is greater than the maximum, replace the crankshaft.

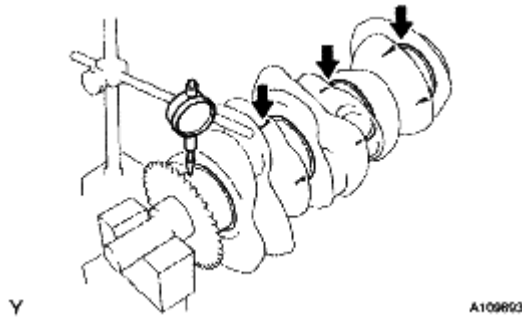

Y

A109603

Fig. 359: Checking Circle Runout At Center Journal
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Inspect the main journals.
 1. Using a micrometer, measure the diameter of each main journal.

Standard journal diameter: 60.988 to 61.000 mm (2.4011 to 2.4016 in.)

If the diameter is not as specified, check the oil clearance. If necessary, replace the crankshaft.

2. Check each main journal for taper and out-of-round as shown in the illustration.

Maximum taper and out-of-round: 0.02 mm (0.0008 in.)

If the taper and out-of-round is greater than the maximum, replace the crankshaft.

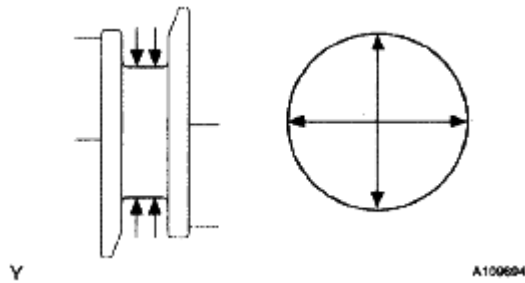


Fig. 360: Checking Main Journal For Taper And Out-Of Round
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Inspect the crank pin.
1. Using a micrometer, measure the diameter of each crank pin.

Crankshaft pin diameter: 52.992 to 53.000 mm (2.0863 to 2.0866 in.)

If the diameter is not as specified, check the oil clearance. If necessary, replace the crankshaft.

2. Check each crank pin for taper and out-of-round as shown in the illustration.

Maximum taper and out-of-round: 0.02 mm (0.0008 in.)

If the taper and out-of-round is greater than the maximum, replace the crankshaft.

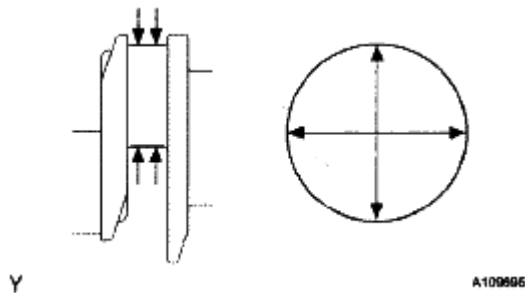


Fig. 361: Checking Crank Pin For Taper And Out-Of Round
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

42. INSPECT CRANKSHAFT OIL CLEARANCE

- a. Check the crank journal and bearing for pitting and scratches.
- b. Install the crankshaft bearing (See **REASSEMBLY**).
- c. Place the crankshaft on the cylinder block.
- d. Lay a strip of Plastigage across each journal.
- e. Examine the front marks and numbers and install the bearing caps on the cylinder block.

HINT:

A number is marked on each main bearing cap to indicate the installation position.

- f. Install the main bearing cap (See **REASSEMBLY**).

NOTE: Do not turn the crankshaft.

- g. Remove the main bearing caps (See **DISASSEMBLY**).

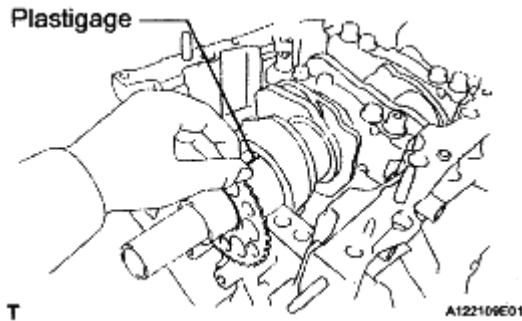


Fig. 362: Laying Strip Of Plastigage Across Each Journal
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- h. Measure the Plastigage at its widest point.

Standard oil clearance: 0.026 to 0.047 mm (0.0010 to 0.0019 in.)

Maximum oil clearance: 0.050 mm (0.0020 in.)

If the oil clearance is greater than the maximum, replace the bearings. If necessary, replace the crankshaft.

NOTE: Completely remove the Plastigage after the measurement.

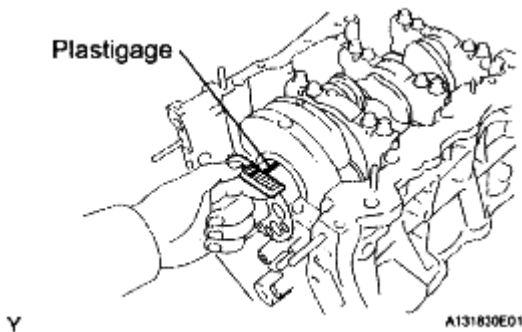


Fig. 363: Measuring Plastigage At Widest Point
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- i. If replacing a bearing, replace it with one having the same number. If the number of the bearing cannot be determined, select the correct bearing by adding together the numbers imprinted on the

cylinder block and crankshaft, then refer to the table below for the appropriate bearing number. There are 5 sizes of standard bearings, marked "1", "2", "3", "4" and "5" accordingly.

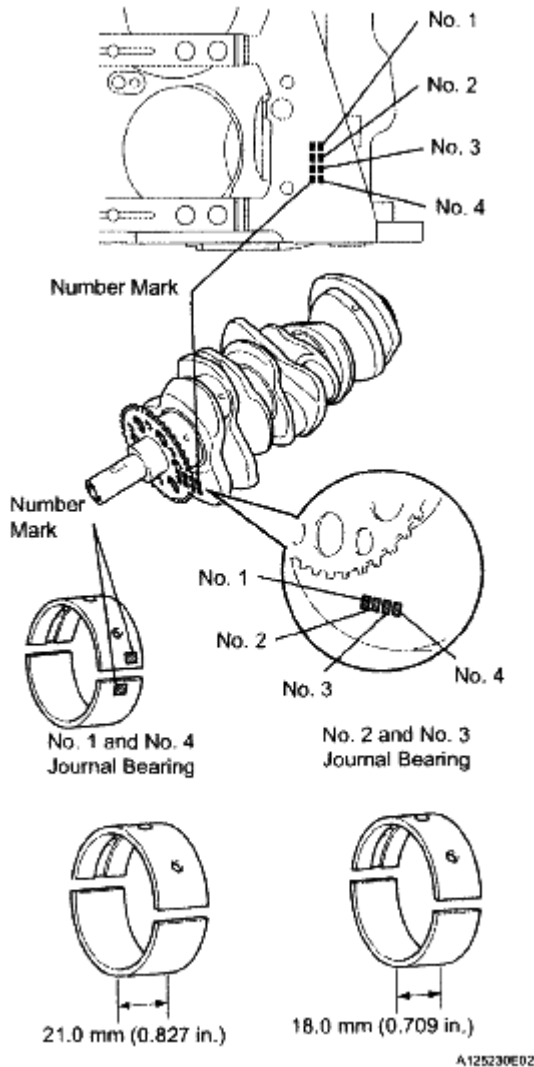


Fig. 364: Identifying Journal Bearing Diameter
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

Journal bearings:

JOURNAL BEARINGS SPECIFICATIONS

Cylinder block + Crankshaft	0 - 5	6 - 11	12 - 17	18 - 23	24 - 28
Bearing to be used	"1"	"2"	"3"	"4"	"5"

HINT:

EXAMPLE: Cylinder block "11" + Crankshaft "06" Total number 17 (Use bearing "3")

Crankshaft main journal diameter

CRANKSHAFT MAIN JOURNAL DIAMETER

Mark	Diameter
"00"	60.999 to 61.000 mm (2.4015 to 2.4016 in.)
"01"	60.998 to 60.999 mm (2.4015 to 2.4015 in.)
"02"	60.997 to 60.998 mm (2.4015 to 2.4015 in.)
"03"	60.996 to 60.997 mm (2.4014 to 2.4015 in.)
"04"	60.995 to 60.996 mm (2.4014 to 2.4014 in.)
"05"	60.994 to 60.995 mm (2.4013 to 2.4014 in.)
"06"	60.993 to 60.994 mm (2.4013 to 2.4013 in.)
"07"	60.992 to 60.993 mm (2.4013 to 2.4013 in.)
"08"	60.991 to 60.992 mm (2.4012 to 2.4013 in.)
"09"	60.990 to 60.991 mm (2.4012 to 2.4012 in.)
"10"	60.989 to 60.990 mm (2.4011 to 2.4012 in.)
"11"	60.988 to 60.989 mm (2.4011 to 2.4011 in.)

Standard upper bearing center wall thickness (No. 1 and No. 4 journal)

STANDARD UPPER BEARING CENTER WALL THICKNESS (NO. 1 AND NO. 4 JOURNAL)

Mark	Thickness
"1"	2.500 to 2.503 mm (0.0984 to 0.0985 in.)
"2"	2.503 to 2.506 mm (0.0985 to 0.0987 in.)
"3"	2.506 to 2.509 mm (0.0987 to 0.0988 in.)
"4"	2.509 to 2.512 mm (0.0988 to 0.0989 in.)
"5"	2.512 to 2.515 mm (0.0989 to 0.0990 in.)

Standard lower bearing center wall thickness (No. 1 and No. 4 journal)

STANDARD LOWER BEARING CENTER WALL THICKNESS (NO. 1 AND NO. 4 JOURNAL)

Mark	Thickness
"1"	2.478 to 2.481 mm (0.0976 to 0.0977 in.)
"2"	2.481 to 2.484 mm (0.0977 to 0.0978 in.)
"3"	2.484 to 2.487 mm (0.0978 to 0.0979 in.)
"4"	2.487 to 2.490 mm (0.0979 to 0.0980 in.)
"5"	2.490 to 2.493 mm (0.0980 to 0.0981 in.)

Standard upper bearing center wall thickness (No. 2 and No. 3 journal)

STANDARD UPPER BEARING CENTER WALL THICKNESS (NO. 2 AND NO. 3 JOURNAL)

--	--

Mark	Thickness
"1"	2.478 to 2.481 mm (0.0976 to 0.0977 in.)
"2"	2.481 to 2.484 mm (0.0977 to 0.0978 in.)
"3"	2.484 to 2.487 mm (0.0978 to 0.0979 in.)
"4"	2.487 to 2.490 mm (0.0979 to 0.0980 in.)
"5"	2.490 to 2.493 mm (0.0980 to 0.0981 in.)

Standard lower bearing center wall thickness (No. 2 and No. 3 journal)

STANDARD LOWER BEARING CENTER WALL THICKNESS (NO. 2 AND NO. 3 JOURNAL)

Mark	Thickness
"1"	2.500 to 2.503 mm (0.0984 to 0.0985 in.)
"2"	2.503 to 2.506 mm (0.0985 to 0.0987 in.)
"3"	2.506 to 2.509 mm (0.0987 to 0.0988 in.)
"4"	2.509 to 2.512 mm (0.0988 to 0.0989 in.)
"5"	2.512 to 2.515 mm (0.0989 to 0.0990 in.)

43. INSPECT CRANKSHAFT BEARING CAP SET BOLT


- Using vernier calipers, measure the minimum diameter of the compressed thread at the measuring point.

Standard diameter: 10.8 to 11.0 mm (0.4252 to 0.4331 in.)

Minimum diameter: 10.7 mm (0.4213 in.)

Measuring Point: 40 mm (1.57 in.)

If the diameter is less than the minimum, replace the bolt.

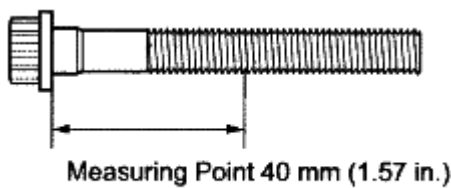

A125160E02

Fig. 365: Identifying Crankshaft Bearing Cap Bolt Dimension
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

REASSEMBLY

CAUTION: For additional information on timing chain/gear removal guidelines, installation and camshaft timing gear alignment, see 2GR-FE VALVE

TIMING PROCEDURE .

1. INSTALL STRAIGHT PIN

- Using a plastic hammer, tap in new straight pins to the cylinder block.

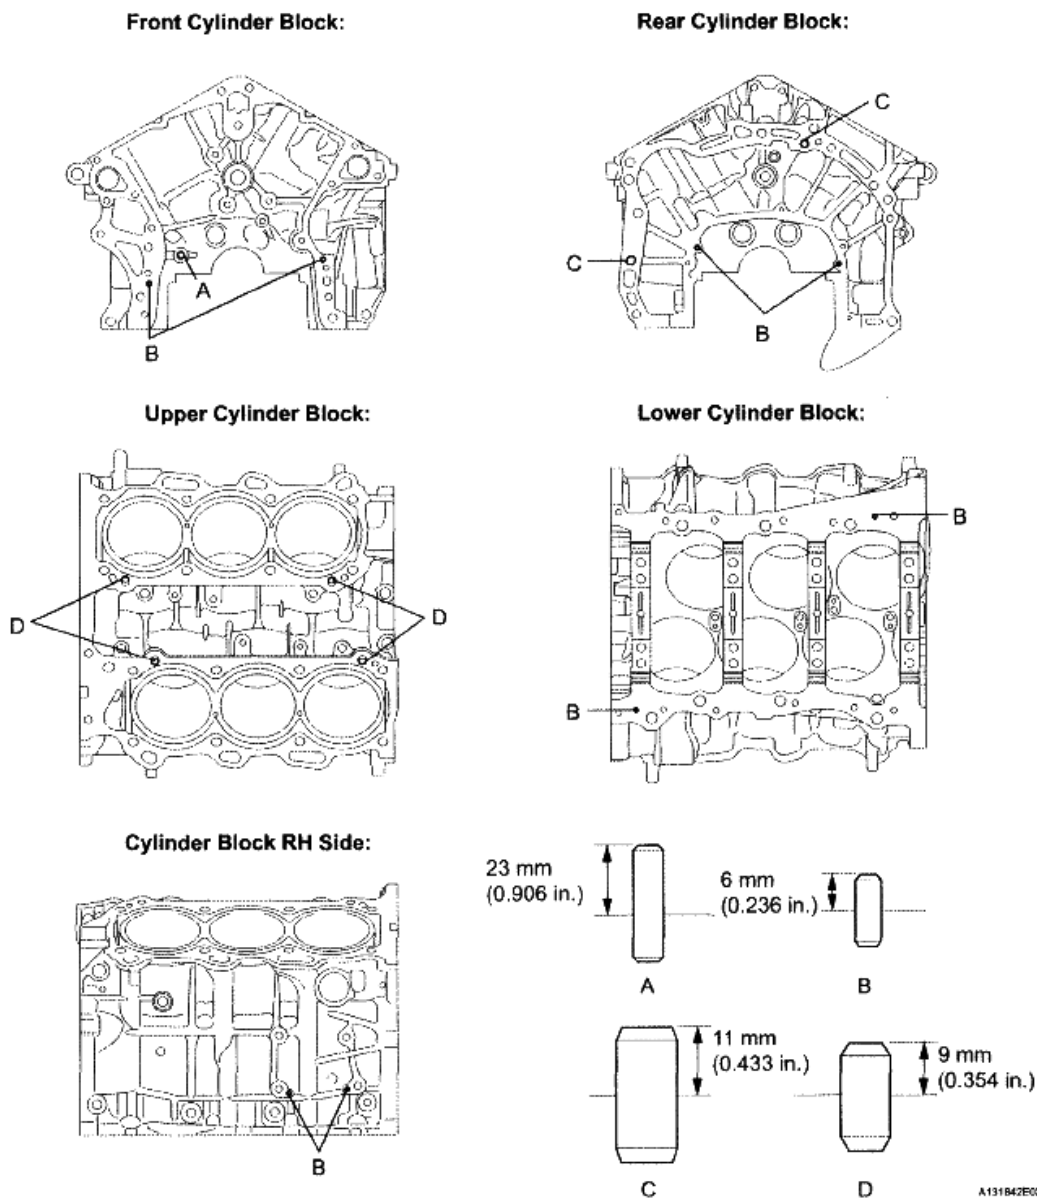


Fig. 366: Identifying Straight Pin Installation Position
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

Standard protrusion

STANDARD PROTRUSION



Item	Protrusion

Pin A	23 mm (0.906 in.)
Pin B	6 mm (0.236 in.)
Pin C	11 mm (0.433 in.)
Pin D	9 mm (0.354 in.)



2. INSTALL STUD BOLT

- Using E8 and E10 "TORX" sockets, install the stud bolts.

Front Cylinder Block:

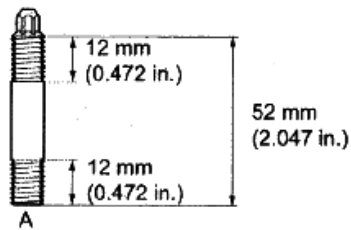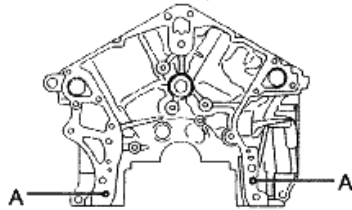

LH Side:

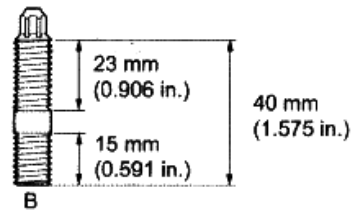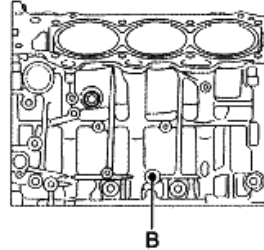

Y

A134058E01

Fig. 367: Identifying Stud Bolt Installation Position
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf) for bolt A

17 N*m (173 kgf*cm, 13 ft.*lbf) for bolt B

3. INSTALL NO. 1 OIL NOZZLE SUB-ASSEMBLY

- Using a 5 mm hexagon wrench, install the No. 1 oil nozzle sub-assembly.

Torque: 9.0 N*m (92 kgf*cm, 80 in.*lbf)

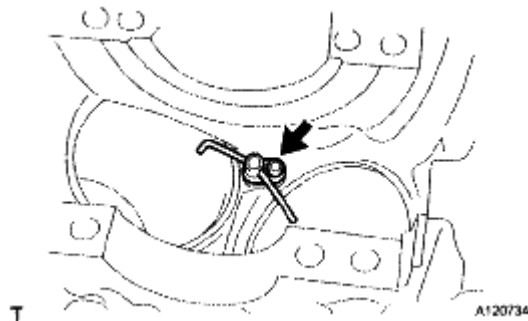


Fig. 368: Identifying Bolt And Oil Nozzle

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

4. INSTALL PISTON SUB-ASSEMBLY WITH PIN

- a. Using a screwdriver, install a new piston pin hole snap ring at one end of the piston pin hole.

HINT:

Be sure that the end gap of the snap ring is not aligned with the pin hole cutout portion of the piston.

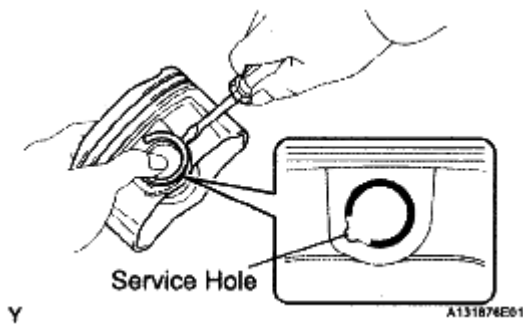


Fig. 369: Aligning Snap Ring

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Gradually heat the piston to approximately 80°C (176°F).
- c. Coat the piston pin with engine oil.

80°C (176°F)

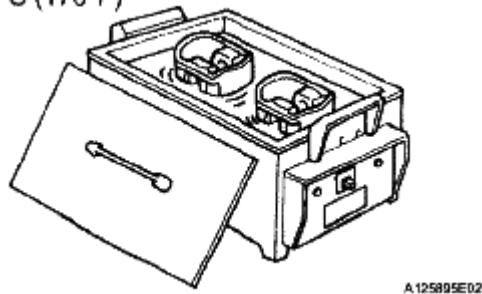


Fig. 370: Heating Piston

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Align the front marks of the piston and connecting rod, and push in the piston pin with your thumb.

HINT:

The piston and pin are a matched set.

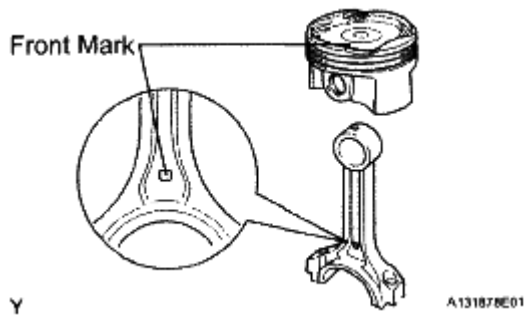


Fig. 371: Aligning Front Marks Of Piston And Connecting Rod
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- e. Check the fitting condition between the piston and piston pin by trying to move the piston back and forth on the piston pin.

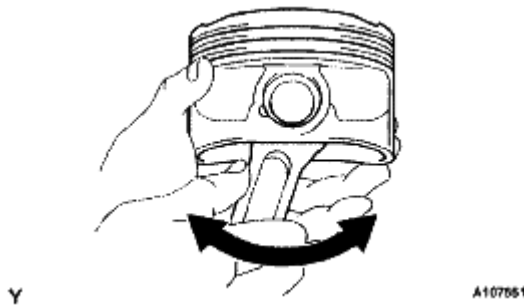


Fig. 372: Checking Fitting Condition Between Piston And Piston Pin
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- f. Using a screwdriver, install a new piston pin hole snap ring at the other end of the piston pin hole.

HINT:

Be sure that the end gap of the snap ring is not aligned with the pin hole cutout portion of the piston.

5. INSTALL PISTON RING SET

- a. Install the oil ring expander and 2 side rails by hand.

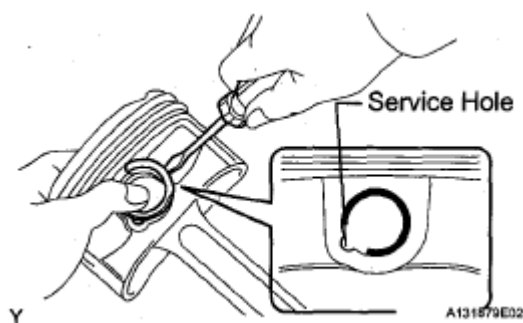


Fig. 373: Identifying Piston Pin Hole Snap Ring
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Using a piston ring expander, install the compression ring as shown in the illustration.


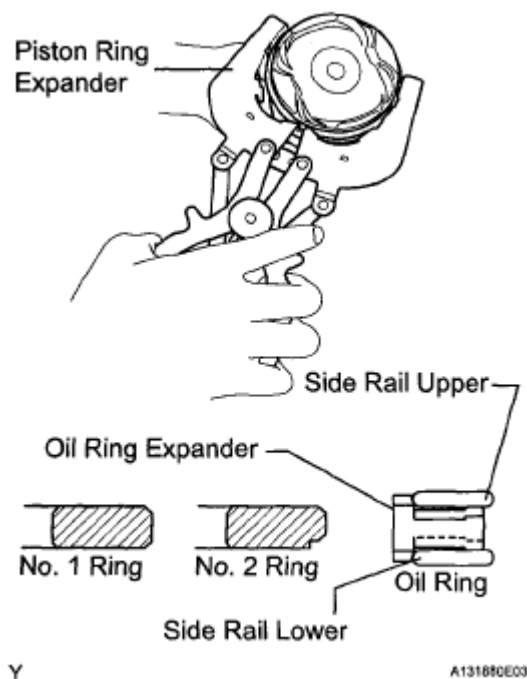


Fig. 374: Identifying Compression Ring
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Position the piston rings so that the ring ends are as shown in the illustration.

NOTE: Do not align the ring ends.

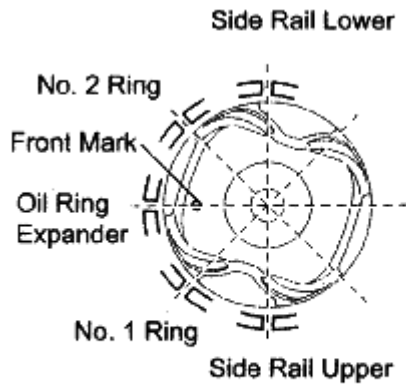

Y

A131881E01

Fig. 375: Identifying Piston Rings Gap Position
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


6. INSTALL CRANKSHAFT BEARING

- a. Clean the main journal and both surfaces of the bearing.

NOTE: Main bearings come in widths between 18.0 mm (0.709 in.) and 21.0 mm (0.827 in.). Install the 21.0 mm (0.827 in.) bearings in the No. 1 and No. 4 cylinder block journal positions with the main bearing cap. Install the 18.0 mm (0.709 in.) bearings in the No. 2 and No. 3 positions.

No. 1 and No. 4
Journal Bearing

No. 2 and No. 3
Journal Bearing

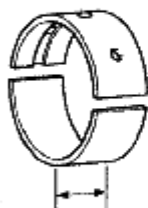

21.0 mm
(0.827 in.)



18.0 mm
(0.709 in.)

A124282E02

Fig. 376: Inspecting Journal Bearings Diameter
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Install the upper bearing.
 1. Install the upper crankshaft bearings to the cylinder block as shown in the illustration.

NOTE:

- Do not apply engine oil to the bearings and the contact surfaces.
- Both sides of the oil groove in the cylinder block should be visible through the oil feed holes in the bearing. The amount visible on each side of the holes should be equal.

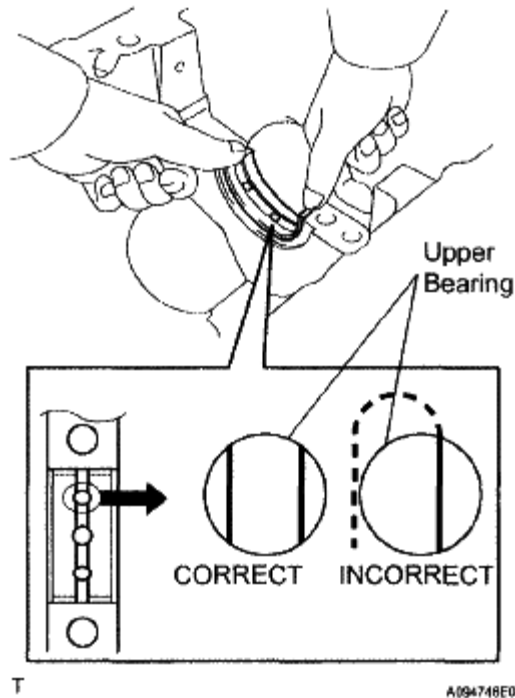


Fig. 377: Identifying Upper Bearing
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- Install the lower crankshaft bearing.
 - Install the lower crankshaft bearings to the crankshaft bearing caps.
 - Using vernier calipers, measure the distance between the crankshaft bearing cap's edge and the lower crankshaft bearing's edge.

Dimension (A - B): 0.7 mm (0.0276 in.) or less

NOTE:

Do not apply engine oil to the crankshaft bearings and the contact surfaces.

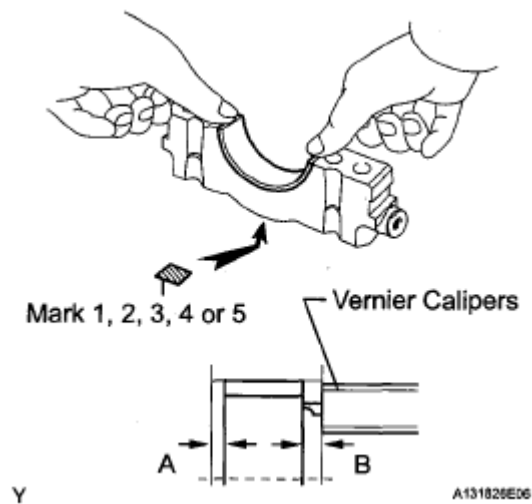


Fig. 378: Locating Lower Crankshaft Bearing
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

7. INSTALL CRANKSHAFT THRUST WASHER SET

- Apply engine oil to the crankshaft thrust washer.
- Install the 2 upper crankshaft thrust washers under the No. 2 journal position of the cylinder block sub-assembly with the oil grooves facing outward.

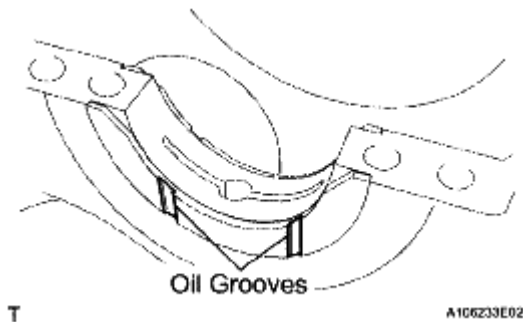


Fig. 379: Identifying Oil Grooves
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

8. INSTALL CRANKSHAFT

- Apply engine oil to the upper bearing, then place the crankshaft on the cylinder block.
- Confirm the projection and numbers of the main bearing caps and install the bearing caps on the cylinder block.

HINT:

A number is marked on each main bearing cap to indicate the installation position.



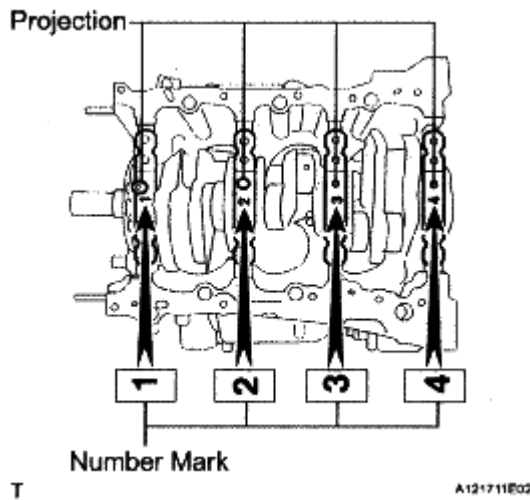


Fig. 380: Identifying Projection And Numbers Of Main Bearing Caps
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Apply a light coat of engine oil to the threads and under the heads of the crankshaft bearing cap bolts.
- d. Temporarily install the 8 crankshaft bearing cap bolts to the inside positions.
- e. Insert the crankshaft bearing cap with your hand until the clearance between the crankshaft bearing cap and the cylinder block is less than 6 mm (0.23 in.) by marking the 2 internal crankshaft bearing cap bolts as a guide.

Bolt length: 100 to 102 mm (3.94 to 4.02 in.)

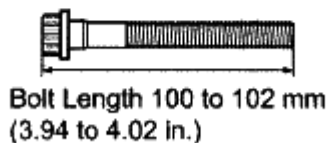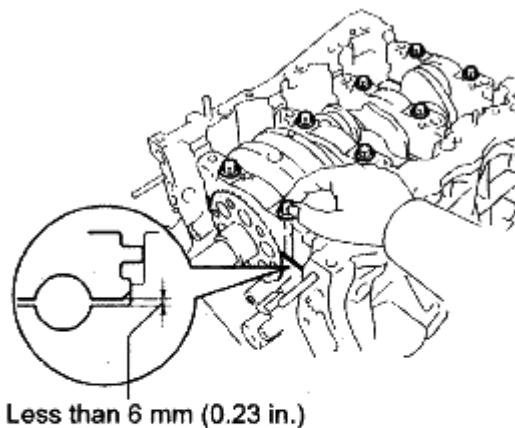


A134893E01

Fig. 381: Identifying Bolt Length

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- f. Using a plastic hammer, lightly tap the crankshaft bearing cap to ensure a proper fit.
- g. Apply a light coat of engine oil to the threads and under the heads of the 8 crankshaft bearing cap bolts.

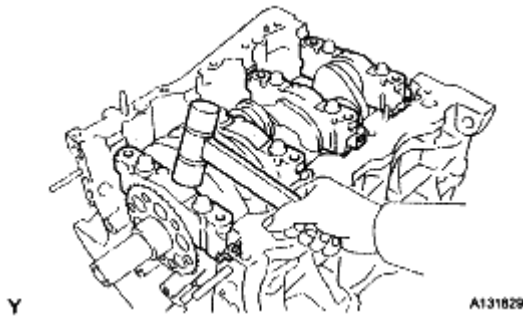
**Fig. 382: Tapping Bearing Cap**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- h. Install the 8 crankshaft bearing cap bolts to the outside positions.
- i. Install the crankshaft bearing cap bolts.

HINT:

The crankshaft bearing cap bolts are tightened in 2 progressive steps.

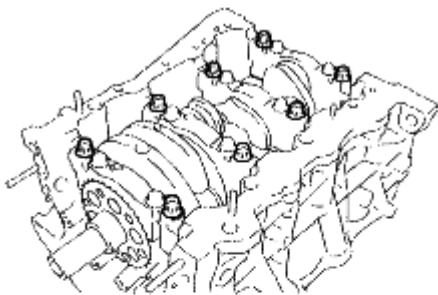

Bolt Length 105.5 to 107.5 mm
(4.15 to 4.23 in.)

A134894E01

Fig. 383: Identifying Main Bearing Cap Bolt Length

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

j. Step 1

1. Install and uniformly tighten the 16 crankshaft bearing cap bolts in the sequence shown in the illustration.

Torque: 61 N*m (622 kgf*cm, 45 ft.*lbf)

If any of the crankshaft bearing cap bolts does not meet the torque specified, replace it.

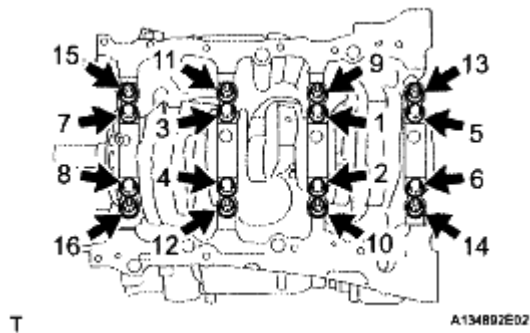


Fig. 384: Locating Main Bearing Cap Bolts Loosening Sequence
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

k. Step 2

1. Mark the front of the bearing cap bolts with paint.
2. Retighten the bearing cap bolts 90° in the order above.
3. Check that the painted mark is now at a 90° angle to the front.

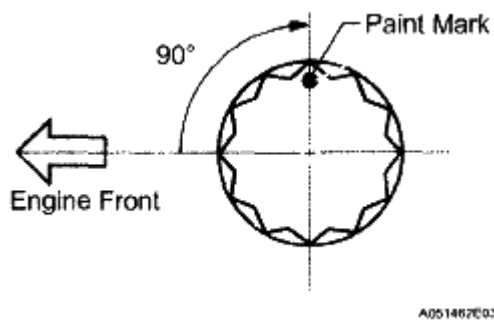


Fig. 385: Identifying Paint Mark
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

1. Install 8 new seal washers and uniformly tighten the 8 crankshaft bearing cap bolts in several steps and in the sequence shown in the illustration.

Torque: 52 N*m (525 kgf*cm, 38 ft.*lbf)

Bolt length**BOLT LENGTH**

Item	Length
Bolt A	45 mm (1.77 in.)
Except bolt A	30 mm (1.18 in.)

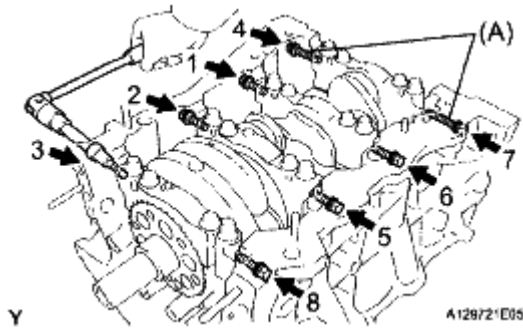


Fig. 386: Locating Connecting Rod Bearing Cap Bolts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- m. Check that the crankshaft turns smoothly.
- n. Check the crankshaft thrust clearance (See **INSPECTION**).

9. INSTALL CONNECTING ROD BEARING

- a. Install the connecting rod bearing to the connecting rod and connecting rod cap.
- b. Using vernier calipers, measure the distance between the connecting rod's and bearing cap's edges and the connecting rod bearing's edge.

Dimension (A - B): 0.7 mm (0.0276 in.) or less

NOTE: Do not apply engine oil to the bearings and the contact surfaces.


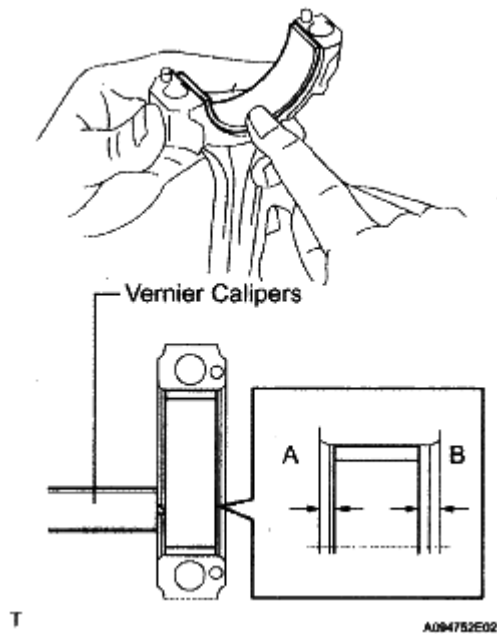


Fig. 387: Measuring Distance Between Connecting Rod And Bearing Cap Edges
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

10. INSTALL PISTON SUB-ASSEMBLY WITH CONNECTING ROD

- a. Apply engine oil to the cylinder walls, the pistons, and the surfaces of the connecting rod bearings.
- b. Position the piston rings so that the ring ends are as shown in the illustration.

NOTE: Do not align the ring ends.

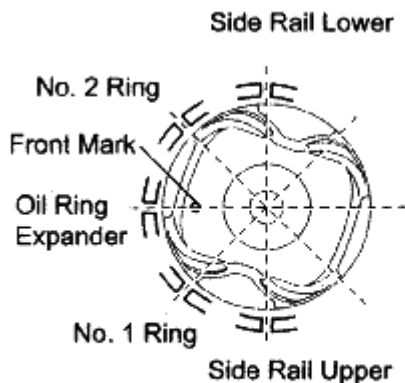

Y

A131881E01

Fig. 388: Identifying Piston Rings Gap Position
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Using a piston ring compressor, push the correctly numbered piston and connecting rod assembly into the cylinder with the front mark of the piston facing forward.

NOTE: Match the numbered connecting rod cap with the connecting rod.

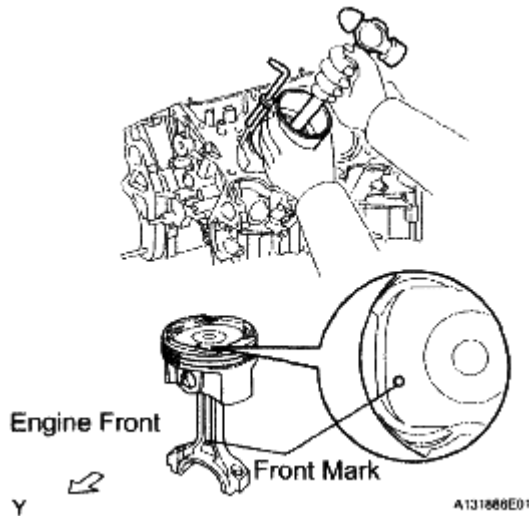


Fig. 389: Pushing Piston And Connecting Rod Assembly Into Cylinder
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Check that the front mark of the connecting rod cap is facing forward.
- e. Apply a light coat of engine oil to the threads and under the heads of the connecting rod cap bolts.
- f. Install the connecting cap bolts.

HINT:

The connecting cap bolts are tightened in 2 progressive steps.

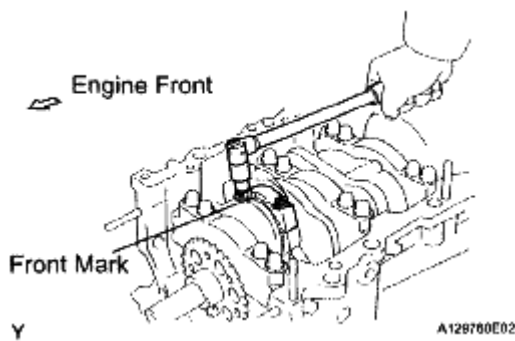


Fig. 390: Locating Connecting Rod Cap Bolts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- g. Step 1
 1. Install and alternately tighten the bolts of the connecting rod cap in several steps.

Torque: 25 N*m (255 kgf*cm, 18 ft.*lbf)

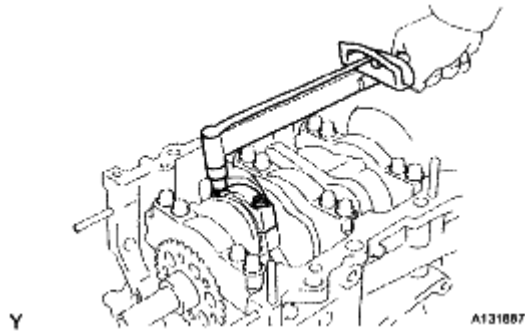


Fig. 391: Tightening Connecting Cap Bolts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- h. Step 2
 - 1. Mark the front side of each connecting cap bolt with paint.
 - 2. Retighten the cap bolts 90° as shown in the illustration.
 - 3. Check the painted mark is now at a 90° angle to the front.
- i. Check that the crankshaft turns smoothly.
- j. Check the connecting rod thrust clearance (See **INSPECTION**).

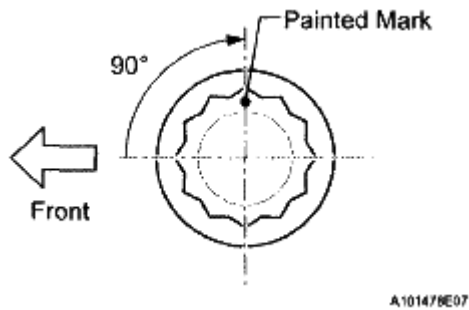


Fig. 392: Identifying Retightening Angle Of Connecting Rod Cap Bolt
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

11. INSTALL INTAKE VALVE GUIDE BUSH

- a. Using a caliper gauge, measure the intake valve guide bush bore diameter of the cylinder head.

Cylinder bore diameter: 10.285 to 10.306 mm (0.4049 to 0.4057 in.)

Select a new guide bush (STD or O/S 0.05)

BUSH BORE DIAMETER

Bush size	Bush bore diameter
STD	10.285 to 10.306 mm (0.4049 to 0.4057 in.)
O/S 0.05	10.335 to 10.356 mm (0.4069 to 0.4077 in.)



Fig. 393: Checking Bush Bore Diameter Of Cylinder Head
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

If the bush bore diameter of the cylinder head is greater than 10.306 mm (0.4057 in.), machine the bush bore to the dimension of 10.335 to 10.356 mm (0.4069 to 0.4077 in.) to install an O/S 0.05 valve guide bush.

If the bush bore diameter of the cylinder head is greater than 10.356 mm (0.4077 in.), replace the cylinder head.

- b. Heat the cylinder head to 80 to 100°C (176 to 212°F).
- c. Place the cylinder head on wooden blocks.
- d. Using SST, tap in new intake valve guide bushes to the specified protrusion height.

SST 09201 -10000 (09201 -01050), 09950-70010 (09951-07100)

Protrusion height: 9.30 to 9.70 mm (0.3661 to 0.3819 in.)

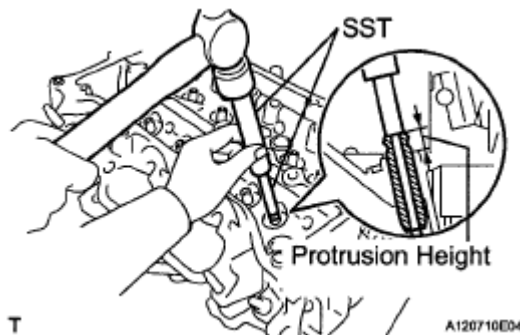


Fig. 394: Tapping In Intake Valve Guide Bushes
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- e. Using a sharp 5.5 mm reamer, ream the valve guide bushings to obtain the Specified clearance.

Standard oil clearance: 0.025 to 0.060 mm (0.0010 to 0.0023 in.)

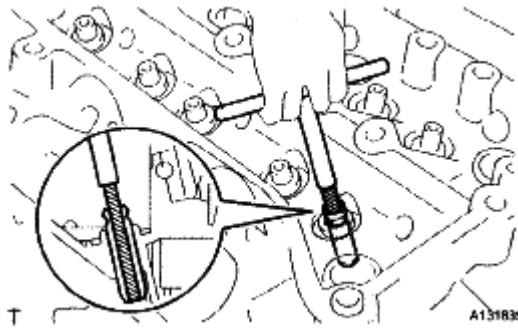


Fig. 395: Reaming Valve Guide Bush

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

12. INSTALL EXHAUST VALVE GUIDE BUSH

- a. Using a caliper gauge, measure the exhaust valve guide bush bore diameter of the cylinder head.

Cylinder bore diameter: 10.285 to 10.306 mm (0.4049 to 0.4057 in.)

Select a new guide bush (STD or O/S 0.05)

BUSH BORE DIAMETER

Bush size	Bush bore diameter
STD	10.285 to 10.306 mm (0.4049 to 0.4057 in.)
O/S 0.05	10.335 to 10.356 mm (0.4069 to 0.4077 in.)



Fig. 396: Checking Bush Bore Diameter Of Cylinder Head

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

If the bush bore diameter of the cylinder head is greater than 10.306 mm (0.4057 in.), machine the bush bore to the dimension of 10.335 to 10.356 mm (0.4069 to 0.4077 in.) to install an O/S 0.05 valve guide bush.

If the bush bore diameter of the cylinder head is greater than 10.356 mm (0.4077 in.), replace the cylinder head.

- b. Heat the cylinder head to 80 to 100°C (176 to 212°F).

- c. Place the cylinder head on wooden blocks.
- d. Using SST, tap in new exhaust valve guide bushes to the specified protrusion height.

SST 09201-10000 (09201-01050), 09950-70010 (09951-07100)

Protrusion height: 9.30 to 9.70 mm (0.3661 to 0.3819 in.)

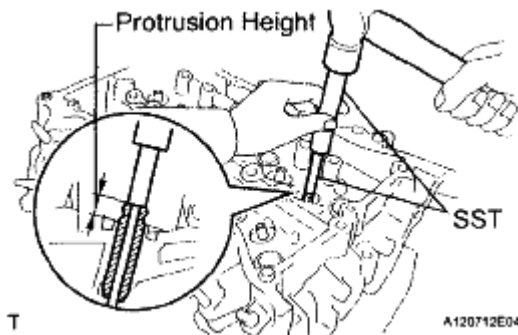


Fig. 397: Tapping Valve Guide Bushes

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- e. Using a sharp 5.5 mm reamer, ream the valve guide bushings to obtain the specified clearance.

Standard oil clearance: 0.030 to 0.065 mm (0.0012 to 0.0026 in.)

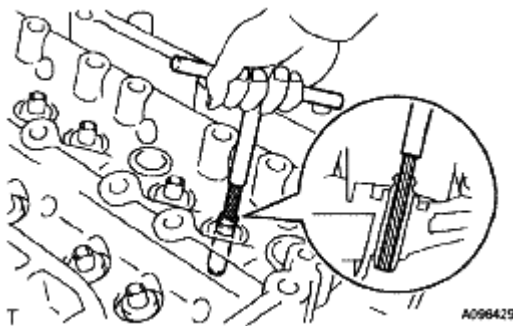


Fig. 398: Reaming Valve Guide Bushing

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

13. INSTALL RING PIN

- a. Using a plastic hammer, tap in new ring pins to the specified protrusion height.

Specified protrusion height: 2.5 to 3.5 mm (0.098 to 0.138 in.)

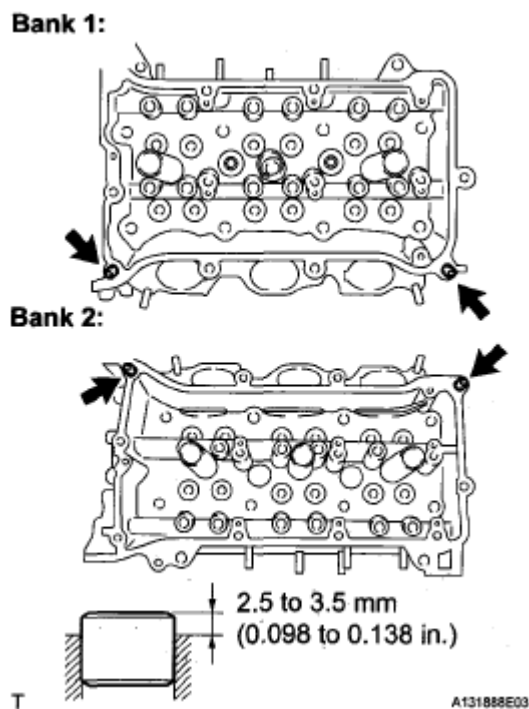



Fig. 399: Identifying Protrusion Height
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

14. INSTALL NO. 1 STRAIGHT SCREW PLUG


- a. Using a 10 mm hexagon wrench, install 4 new gaskets and the 4 No. 1 straight screw plugs.

Torque: 44 N*m (449 kgf*cm, 32 ft.*lbf)

Bank 1:

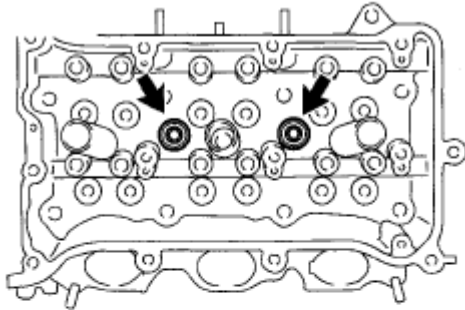

Bank 2:

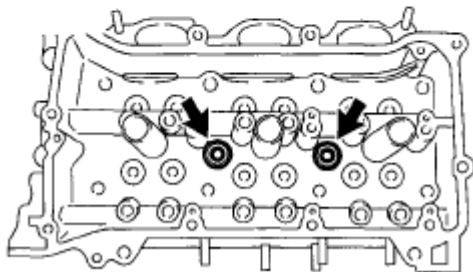

T

A129718EQ4


Fig. 400: Locating No. 1 Straight Screw Plugs And Gaskets
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

15. INSTALL NO. 2 STRAIGHT SCREW PLUG

- a. Using a 14 mm hexagon wrench, install 2 new gaskets and the 2 No. 2 straight screw plugs.

Torque: 80 N*m (816 kgf*cm, 59 ft.*lbf)

Bank 2:

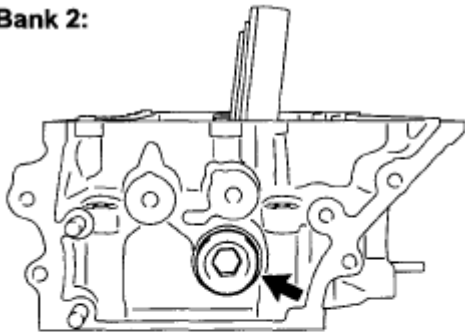

Bank 1:


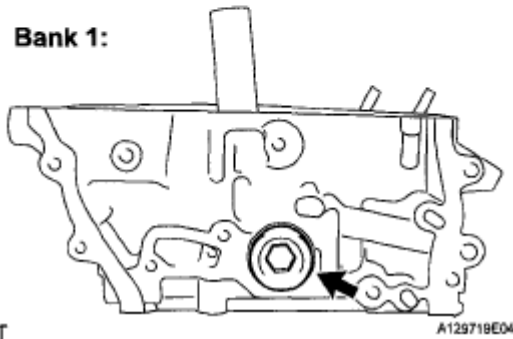


Fig. 401: Locating No. 2 Straight Screw Plugs And Gaskets
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

16. INSTALL STUD BOLT

NOTE: If the stud bolt is deformed or the threads are damaged, replace it.

- a. Using E6 and E8 "TORX" sockets, install the stud bolts.

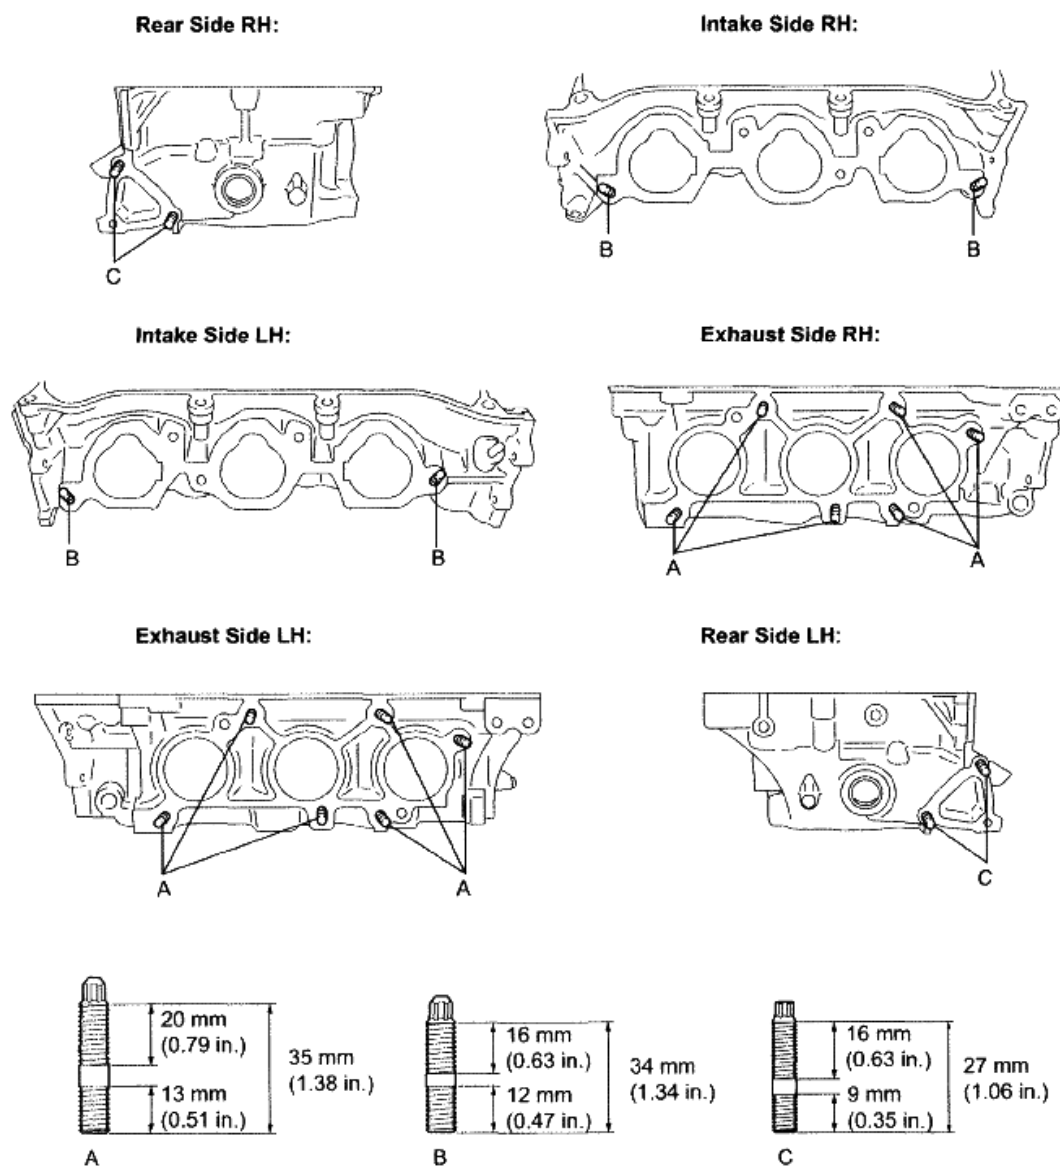

T

A134987E01

Fig. 402: Identifying Stud Bolts Installation Position
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf) for bolts A and B

4.0 N*m (41 kgf*cm, 35 in.*lbf) for bolt C

17. INSTALL STRAIGHT PIN

- Using a plastic hammer, tap in new straight pins as shown in the illustration.



Fig. 403: Identifying Straight Pin Installation Procedure
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

Protrusion height: 17.5 to 19.5 mm (0.689 to 0.768 in.)

18. INSTALL VALVE SPRING SEAT

- a. Install the valve spring seats to the cylinder head.

19. INSTALL VALVE STEM OIL SEAL

- a. Apply a light coat of engine oil to new valve stem oil seals.

NOTE: Pay attention when installing the intake and exhaust valve stem oil seals. For example, installing the intake valve stem oil seal into the exhaust side or installing the exhaust valve stem oil seal to the intake side can cause installation problems later.

HINT:

The intake valve oil seals are gray and the exhaust valve oil seals are black.

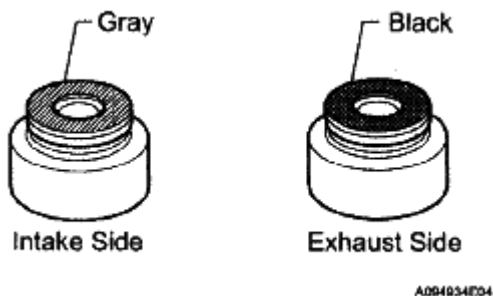


Fig. 404: Identifying Intake And Exhaust Valve Oil Seals
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Using SST, push in the oil seals.

SST 09201-41020

NOTE: Failure to use SST will cause the seal to be damaged or improperly seated.

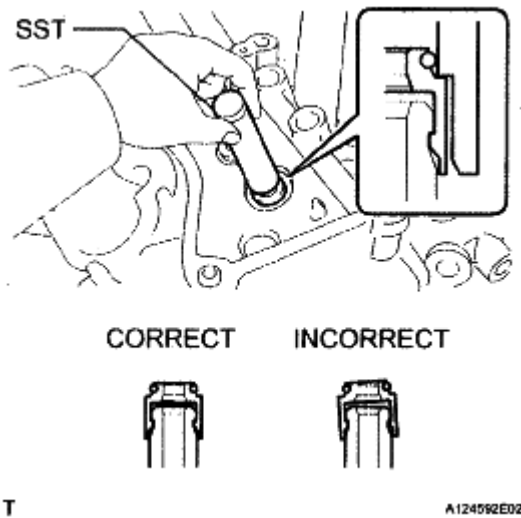


Fig. 405: Pushing In Oil Seals Using SST
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

20. INSTALL EXHAUST VALVE

- Apply a sufficient coat of engine oil to the tip area of the exhaust valve shown in the illustration.
- Install the exhaust valve, inner compression spring and valve spring retainer to the cylinder head.

NOTE: Install the same parts in the same combination to the original locations.

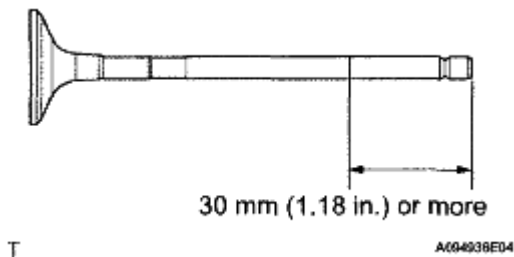


Fig. 406: Identifying Intake Valve Tip Area Length
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- Using SST, compress the inner compression spring and install the 2 valve spring retainer locks.

SST 09202-70020 (09202-00010)

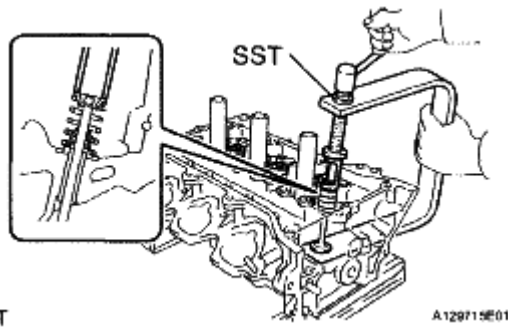


Fig. 407: Using SST To Compress Inner Compression Spring To Install Exhaust Valve
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Using a plastic hammer, lightly tap the valve stem tip to ensure a proper fit.

NOTE: Be careful not to damage the retainer.

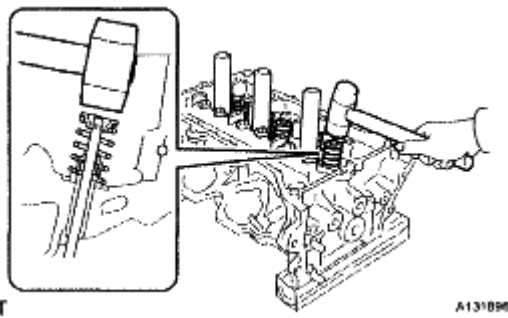


Fig. 408: Tapping Valve Stem Tip To Ensure Proper Fit
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

21. INSTALL INTAKE VALVE

- a. Apply a sufficient coat of engine oil to the tip area of the intake valve shown in the illustration.
- b. Install the intake valve, inner compression spring and valve spring retainer to the cylinder head.

NOTE: Install the same parts in the same combination to the original locations.

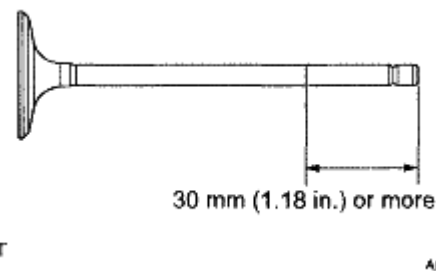


Fig. 409: Identifying Intake Valve Tip Area Length

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Using SST, compress the inner compression spring and install the 2 valve spring retainer locks.

SST 09202-70020 (09202-00010)

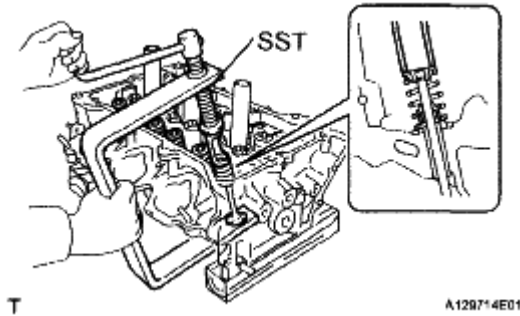


Fig. 410: Using SST To Compress Inner Compression Spring To Install Intake Valve
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Using a plastic hammer, lightly tap the valve stem tip to ensure a proper fit.

NOTE: Be careful not to damage the retainer.

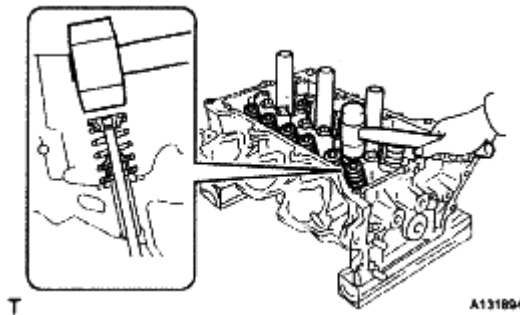


Fig. 411: Tapping Valve Stem Tip To Ensure Proper Fit
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

22. INSTALL VALVE STEM CAP

- a. Apply a light coat of engine oil to the valve stem caps.
- b. Install the valve stem caps on the valves.

23. INSTALL ENGINE REAR OIL SEAL

- a. Place the oil seal retainer on wooden blocks.
- b. Using SST, tap in a new engine rear oil seal until its surface is flush with the engine rear oil seal retainer edge.

SST 09223-15030, 09950-70010 (09951 -07100)

NOTE:

- Keep the lip free of foreign matter.
- Do not tap on the oil seal at an angle.

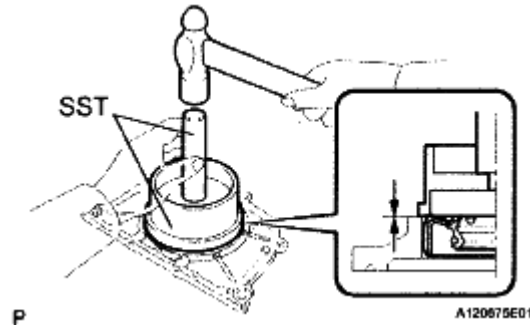


Fig. 412: Identifying Engine Rear Oil Seal
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

24. INSTALL ENGINE REAR OIL SEAL RETAINER


- Apply seal packing in a continuous line as shown in the illustration.

Seal packing: Toyota Genuine Seal Packing Black, Three Bond 1207B or equivalent

Seal Diameter: 2.0 to 3.0 mm (0.079 to 0.118 in.)

NOTE:

- Remove any oil from the contact surface.
- Install the oil seal retainer within 3 minutes after applying seal packing.
- Do not start the engine for at least 2 hours after installation.

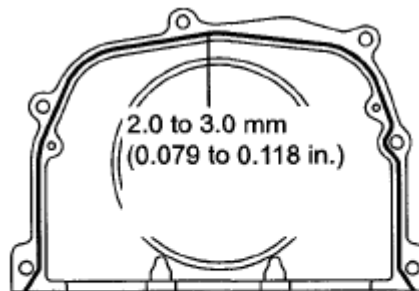

— : Seal Packing

A141351E02

Fig. 413: Identifying Seal Packing
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- Install the engine rear oil seal retainer with the 6 bolts.

Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf)

NOTE: Be sure to apply adhesive 1324 to the bolts in the places indicated by A before installing them.

Adhesive: Toyota Genuine Adhesive 1324, Three Bond 1324 or equivalent

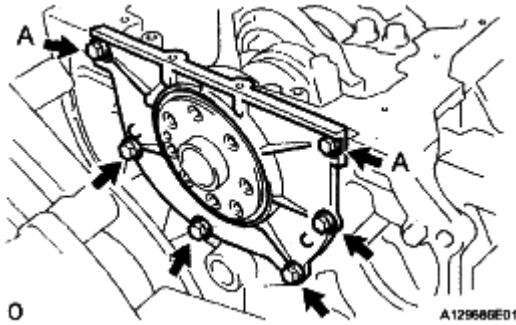


Fig. 414: Locating Oil Seal Retainer
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

25. INSTALL WATER INLET PIPE

- Install the water inlet pipe with the 2 bolts.

Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf)

- Install the No. 1 water by-pass hose.

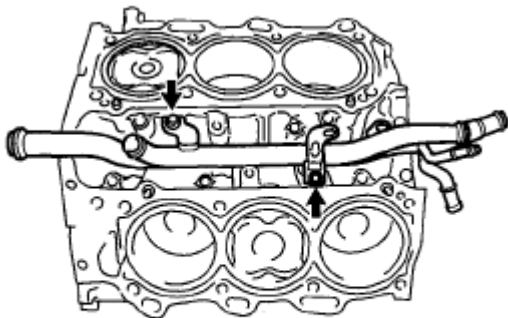


Fig. 415: Locating Bolts And Water Inlet Pipe
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

26. INSTALL CYLINDER HEAD SUB-ASSEMBLY RH

- Place the cylinder head gasket on the cylinder block surface with the Lot No. stamp upward.

NOTE:

- Be careful of the installation direction.
- Gently place the cylinder head in order not to damage the gasket with the bottom part of the head.

b. Place the cylinder head on the cylinder block.

NOTE: Be careful not to allow oil to adhere to the bottom part of the cylinder head.

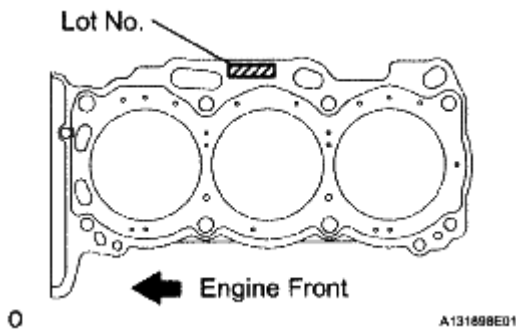


Fig. 416: Identifying Cylinder Head Gasket
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

HINT:

The cylinder head bolts are tightened in 3 progressive steps.

- Apply a light coat of engine oil to the threads and under the heads of the cylinder head bolts.
- Step 1
 - Using a 10 mm bi-hexagon wrench, install and uniformly tighten the 8 cylinder head bolts with the plate washers in several steps and in the sequence shown in the illustration.

Torque: 36 N*m (367 kgf*cm, 27 ft.*lbf)

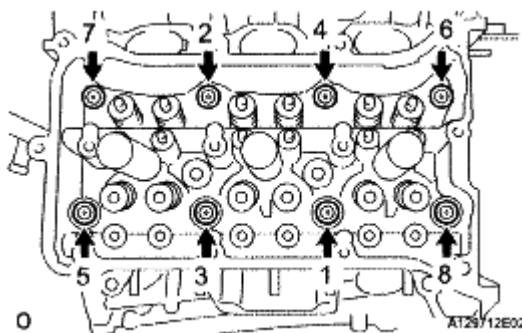


Fig. 417: Locating Cylinder Head Bolts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- e. Step 2
 1. Mark the cylinder head bolt head with paint as shown in the illustration.
 2. Tighten the cylinder head bolts another 90°.
- f. Step 3
 1. Tighten the cylinder head bolts an additional 90°.
 2. Check that the painted mark is now facing rearward.

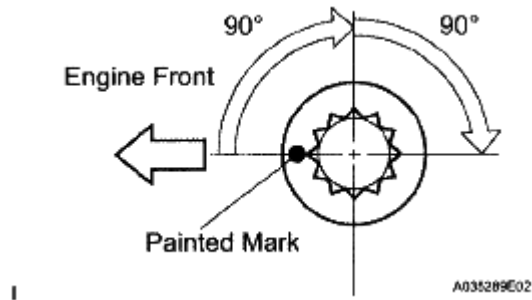


Fig. 418: Identifying Painted Mark
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

27. INSTALL CYLINDER HEAD SUB-ASSEMBLY LH

- a. Place the cylinder head gasket on the cylinder block surface with the Lot No. stamp upward.

NOTE:

- Be careful of the installation direction.
- Gently place the cylinder head in order not to damage the gasket with the bottom part of the head.

- b. Place the cylinder head on the cylinder block.

NOTE:

Be careful not to allow oil to adhere to the bottom part of the cylinder head.

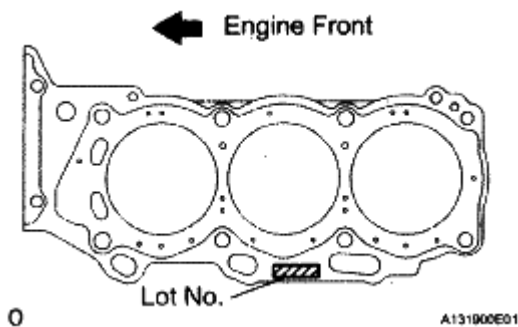


Fig. 419: Identifying Cylinder Head Gasket
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

HINT:

The cylinder head bolts are tightened in 3 progressive steps.

- c. Apply a light coat of engine oil to the threads and under the heads of the cylinder head bolts.
- d. Step 1
 - 1. Using a 10 mm bi-hexagon wrench, install and uniformly tighten the 8 cylinder head bolts with the plate washers in several steps in the sequence shown in the illustration.

Torque: 36 N*m (367 kgf*cm, 27 ft.*lbf)

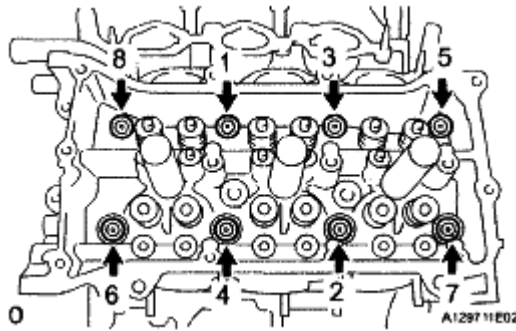


Fig. 420: Locating Cylinder Head Bolts

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- e. Step 2
 - 1. Mark the cylinder head bolt head with paint as shown in the illustration.
 - 2. Tighten the cylinder head bolts another 90°.
- f. Step 3
 - 1. Tighten the cylinder head bolts an additional 90°.
 - 2. Check that the painted mark is now facing rearward.

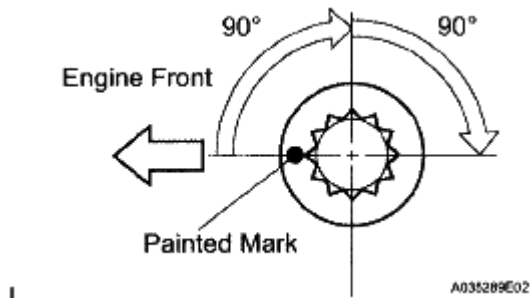


Fig. 421: Identifying Painted Mark

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- g. Tighten the 2 bolts in the order shown in the illustration.

Torque: 30 N*m (306 kgf*cm, 22 ft.*lbf)

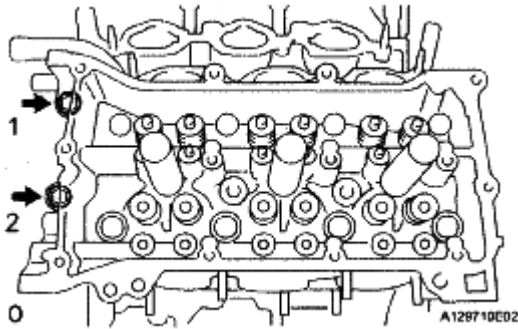



Fig. 422: Identifying Bolts Tightening Sequence
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

28. INSTALL VALVE LASH ADJUSTER ASSEMBLY

NOTE:

- Keep the lash adjuster free of dirt and foreign objects.
 - Only use clean engine oil.
- a. Place the lash adjuster into a container filled with engine oil.
 - b. Insert SST's tip into the lash adjuster's plunger and use the tip to press down on the check ball inside the plunger.

SST 09276-75010

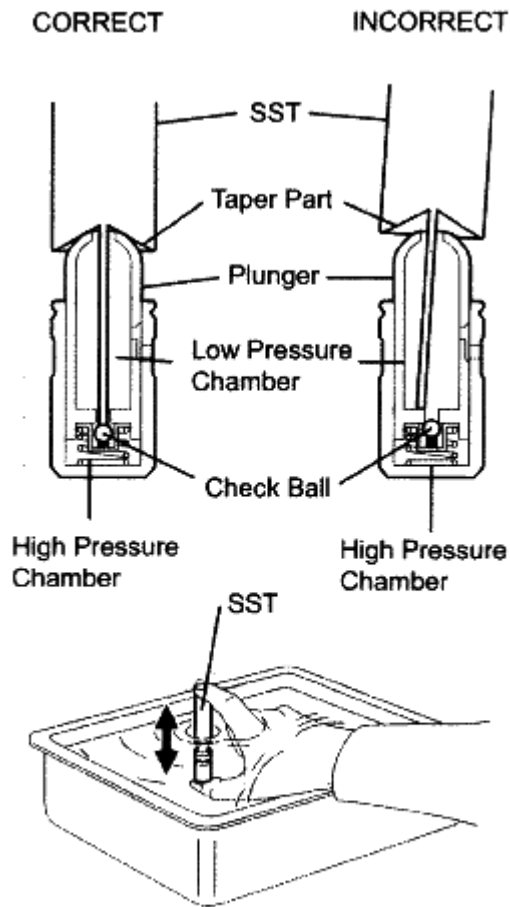

T

A100630ED1

Fig. 423: Pressing Check Ball Using SST

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Squeeze SST and lash adjuster together to move the plunger up and down 5 to 6 times.
- d. Check the movement of the plunger and bleed the air.

OK: Plunger moves up and down.

NOTE: When bleeding air from the high-pressure chamber, make sure that the tip of SST is actually pressing the check ball as shown in the illustration. If the check ball is not pressed, air will not bleed.

- e. After bleeding the air, remove SST. Then, try to press the plunger quickly and firmly with a finger.

OK: Plunger is very difficult to move.

If the result is not as specified, replace the lash adjuster.

- f. Install the lash adjusters.

NOTE: Install the lash adjuster to the same place where it was removed from.

29. INSTALL NO. 1 VALVE ROCKER ARM SUB-ASSEMBLY

- a. Apply engine oil to the lash adjuster tip and valve stem cap end.
- b. Make sure that the 24 No. 1 valve rocker arms are installed as shown in the illustration.

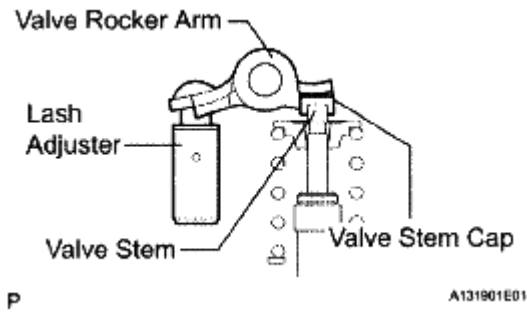


Fig. 424: Identifying Valve Rocker Arm Assembly
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

30. INSTALL CAMSHAFT BEARING CAP (for Bank 1)

- a. Apply engine oil to the camshaft journals, camshaft housing sub-assembly RH and camshaft bearing caps.
- b. Install the camshaft and No. 2 camshaft to the camshaft housing sub-assembly RH.
- c. Make sure of the marks and numbers on the camshaft bearing caps and place them in each proper position and direction.

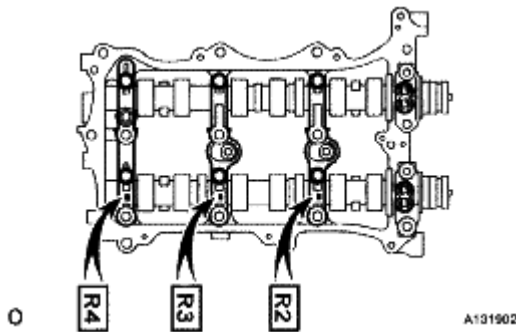


Fig. 425: Identifying Marks And Numbers On Camshaft Bearing Caps
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Temporarily tighten the 8 bolts in the order shown in the illustration.

Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf)

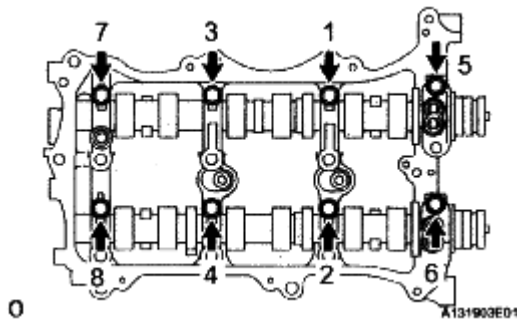


Fig. 426: Identifying Bolts Tightening Sequence
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

31. INSTALL CAMSHAFT HOUSING SUB-ASSEMBLY RH

- a. Make sure that the valve rocker arm is installed as shown in the illustration.

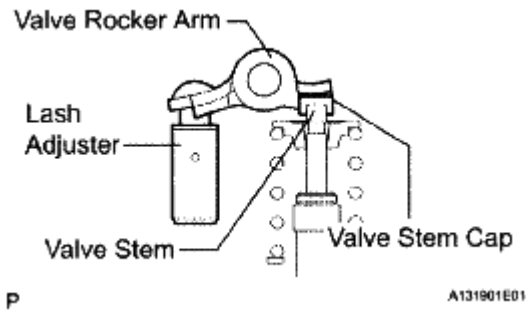


Fig. 427: Identifying Valve Rocker Arm Assembly
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Apply seal packing in a continuous line as shown in the illustration.

Seal packing: Toyota Genuine Seal Packing Black, Three Bond 1207B or equivalent

Seal diameter: 3.5 to 4.5 mm (0.138 to 0.177 in.)

NOTE:

- Remove any oil from the contact surface.
- Install the camshaft housing sub-assembly RH within 3 minutes.
- Do not start the engine for at least 2 hours after installing.

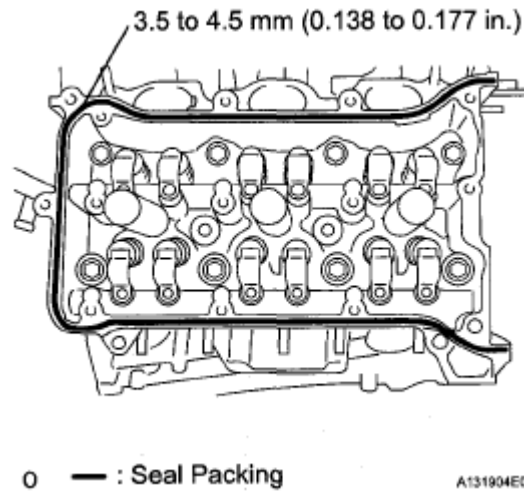


Fig. 428: Identifying Seal Packing

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Install the camshaft housing sub-assembly RH and tighten the 12 bolts in the order shown in the illustration.

Torque: 28 N*m (286 kgf*cm, 21 ft.*lbf)

NOTE:

- When installing the camshaft housing RH, it is necessary to correctly position the camshafts as shown in the illustration. Failure to correctly position these parts may result in damage due to contact between the pistons and valves. If a camshaft is rotated with a piston at TDC, valve contact will occur.
- If any of the bolts are loosened during installation, remove the camshaft housing, clean the installation surfaces, and reapply seal packing.
- If the camshaft housing is removed because any of the bolts are loosened during installation, make sure that the previously applied seal packing does not enter any oil passages.

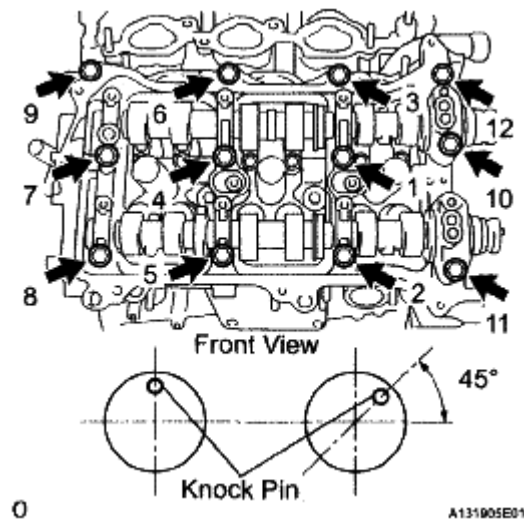


Fig. 429: Identifying Bolts Tightening Sequence
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Tighten the 8 bolts in the order shown in the illustration.

Torque: 16 N*m (163 kgf*cm, 12 ft.*lbf)

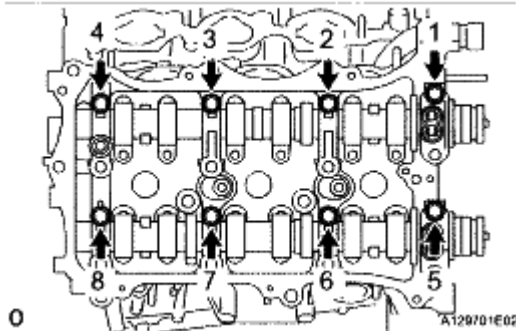


Fig. 430: Identifying Bolts Tightening Sequence
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

32. INSTALL CAMSHAFT BEARING CAP (for Bank 2)

- a. Apply engine oil to the camshaft journals, camshaft housing sub-assembly LH and camshaft bearing caps.
- b. Install the No. 3 camshaft and No. 4 camshaft to the camshaft housing LH.
- c. Make sure of the marks and numbers on the camshaft bearing caps and place them in each proper position and direction.

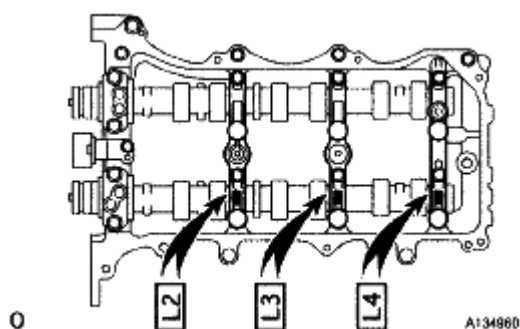


Fig. 431: Identifying Marks And Numbers On Camshaft Bearing Caps
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Temporarily tighten the 8 bolts in the order shown in the illustration.

Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf)

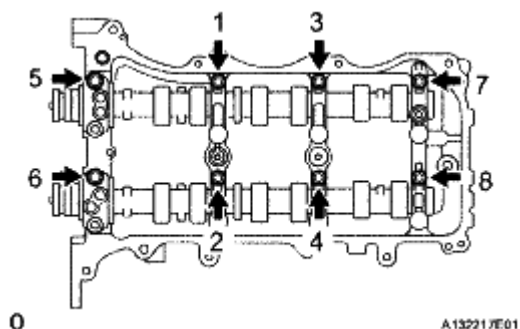


Fig. 432: Identifying Bolts Tightening Sequence
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

33. INSTALL CAMSHAFT HOUSING SUB-ASSEMBLY LH

- a. Make sure that the valve rocker arm is installed as shown in the illustration.

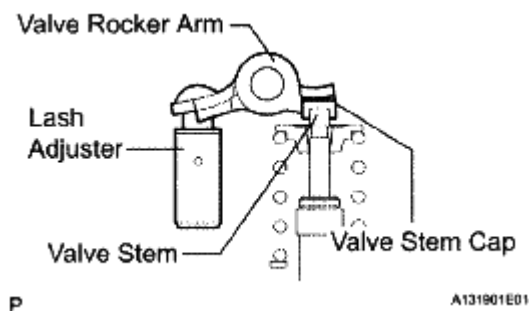


Fig. 433: Identifying Valve Rocker Arm Assembly
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Apply seal packing in a continuous line as shown in the illustration.

Seal packing: Toyota Genuine Seal Packing Black, Three Bond 1207B or equivalent

Seal diameter: 3.5 to 4.5 mm (0.138 to 0.177 in.)

NOTE:

- **Remove any oil from the contact surface.**
- **Install the camshaft housing sub-assembly LH within 3 minutes.**
- **Do not start the engine for at least 2 hours after installing.**

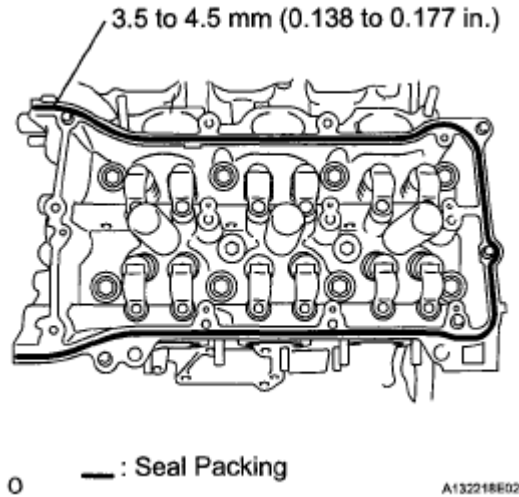


Fig. 434: Identifying Seal Packing

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Install the camshaft housing sub-assembly LH and tighten the 13 bolts in the order shown in the illustration.

Torque: 28 N*m (286 kgf*cm, 21 ft.*lbf)

NOTE:

- **When installing the camshaft housing LH, it is necessary to correctly position the camshafts as shown in the illustration. Failure to correctly position these parts may result in damage due to contact between the pistons and valves. If a camshaft is rotated with a piston at TDC, valve contact will occur.**
- **If any of the bolts are loosened during installation, remove the camshaft housing, clean the installation surfaces, and reapply seal packing.**
- **If the camshaft housing is removed because any of the bolts are loosened during installation, make sure that the previously applied seal packing does not enter any oil passages.**

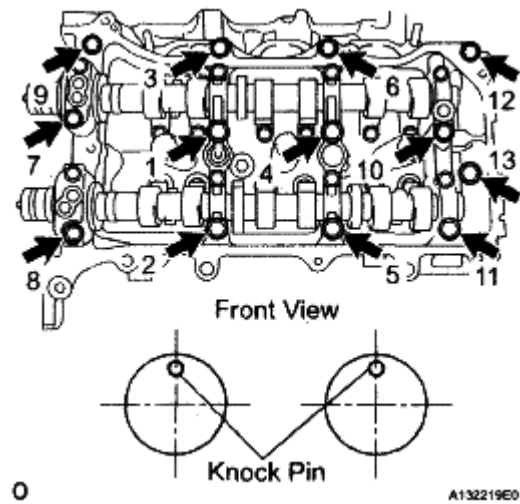


Fig. 435: Identifying Bolts Tightening Sequence
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Tighten the 8 bolts in the order shown in the illustration.

Torque: 16 N*m (163 kgf*cm, 12 ft.*lbf)

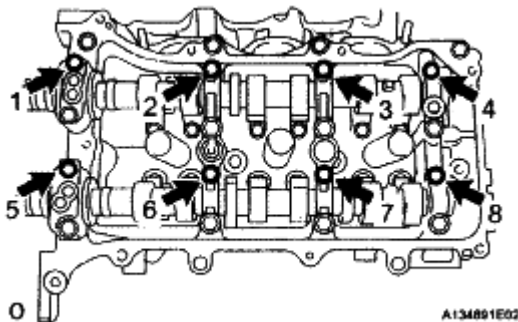


Fig. 436: Locating Bolts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

34. INSTALL NO. 2 CHAIN TENSIONER ASSEMBLY

- a. Install the No. 2 chain tensioner assembly with the bolt.

Torque: 21 N*m (214 kgf*cm, 15 ft.*lbf)

- b. While pushing in the tensioner, insert a pin of $\varnothing 1.0$ mm (0.039 in.) into the hole to fix it.

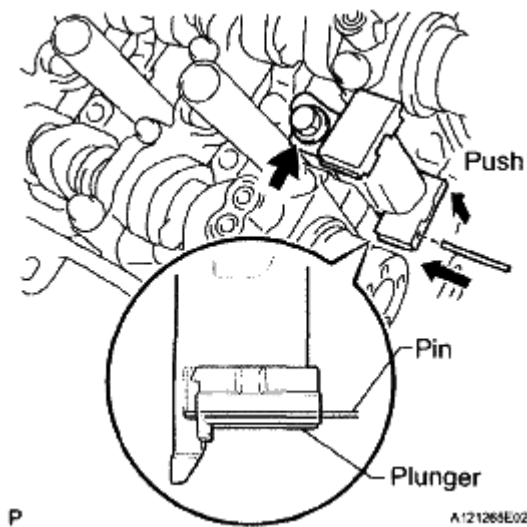


Fig. 437: Installing No 2 Chain Tensioner

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

35. INSTALL CAMSHAFT TIMING GEARS AND NO. 2 CHAIN (for Bank 1)

CAUTION: For additional information on timing chain/gear removal guidelines, installation and camshaft timing gear alignment, see 2GR-FE VALVE TIMING PROCEDURE .

- Align the mark plate (yellow) with the timing marks (1-dot mark) of the camshaft timing gears as shown in the illustration.
- Apply a light coat of engine oil to the bolt threads and bolt-seating surface.
- Align the knock pin of the camshaft with the pin hole of the camshaft timing gear. Install the camshaft timing gear and camshaft timing exhaust gear RH with the No. 2 chain sub-assembly installed.

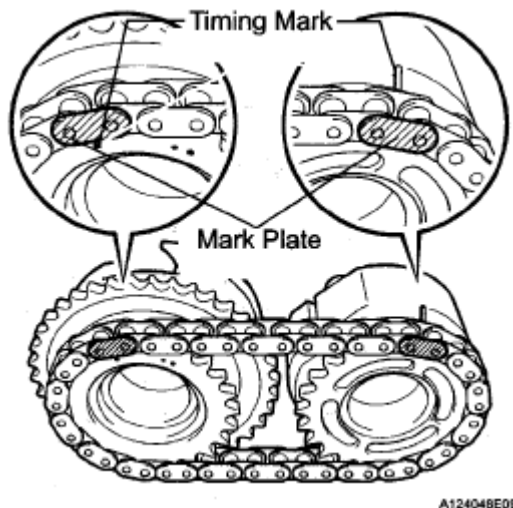


Fig. 438: Identifying Timing Mark

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Hold the hexagonal portion of the camshaft with a wrench, and tighten the 2 bolts and camshaft timing gear assemblies.

Torque: 100 N*m (1020 kgf*cm, 74 ft.*lbf)

- e. Remove the pin from the No. 2 chain tensioner assembly.

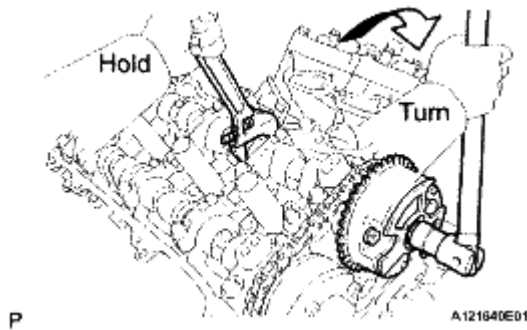


Fig. 439: Tightening Camshaft Bolt

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

36. INSTALL NO. 3 CHAIN TENSIONER ASSEMBLY

- a. Install the No. 3 chain tensioner assembly with the bolt.

Torque: 21 N*m (214 kgf*cm, 15 ft.*lbf)

- b. While pushing in the tensioner, insert a pin of $\varnothing$ 1.0 mm (0.039 in.) into the hole to hold it.

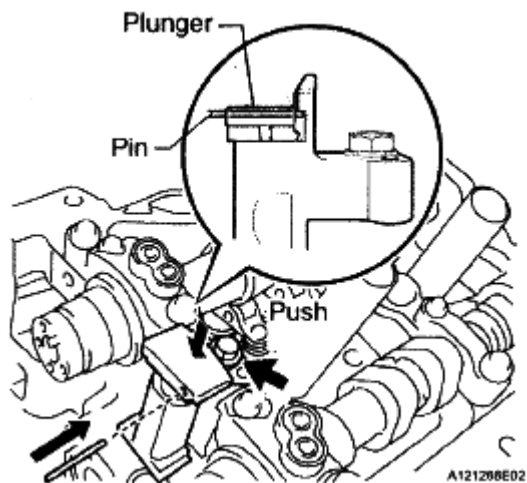



Fig. 440: Identifying No.3 Chain Tensioner Assembly

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

37. INSTALL CAMSHAFT TIMING GEARS AND NO. 2 CHAIN (for Bank 2)

CAUTION: For additional information on timing chain/gear removal guidelines, installation and camshaft timing gear alignment, see 2GR-FE VALVE TIMING PROCEDURE.

- a. Align the mark plate (yellow) with the timing marks (2-dot mark) of the camshaft timing gears as shown in the illustration.
- b. Apply a light coat of engine oil to the bolt threads and bolt-seating surface.
- c. Align the knock pin of the camshaft with the pin hole of the camshaft timing gear. Install the camshaft timing gear and camshaft timing exhaust gear LH with the No. 2 chain sub-assembly installed.

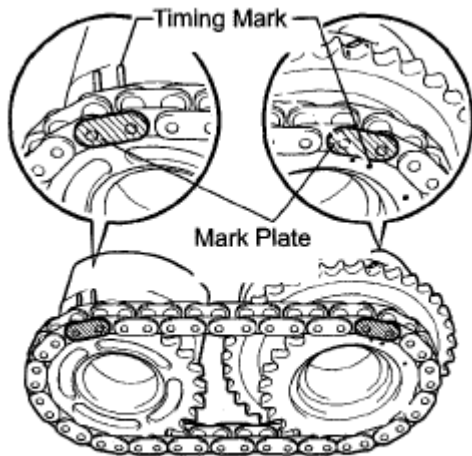

A124049E06

Fig. 441: Identifying Timing Mark

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Using SST to hold the hexagonal portion of each camshaft, tighten the bolts of the camshaft timing gear assembly and the camshaft timing exhaust gear assembly LH.

SST: 09922-10010

Torque: 100 N*m (1020 kgf*cm, 74 ft.*lbf)

- e. Remove the pin from the No. 3 chain tensioner assembly.

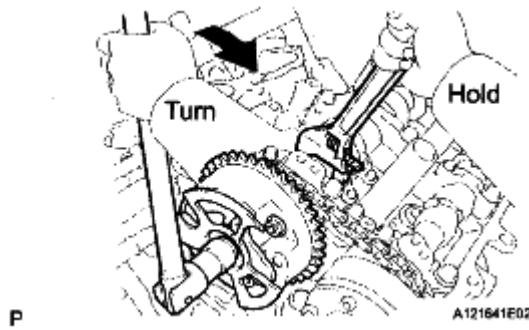


Fig. 442: Holding Hexagonal Portion Of Camshaft Using Wrench
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

38. INSTALL NO. 1 CHAIN VIBRATION DAMPER

- a. Install the No. 1 chain vibration damper with the 2 bolts.

Torque: 23 N*m (230 kgf*cm, 17 ft.*lbf)

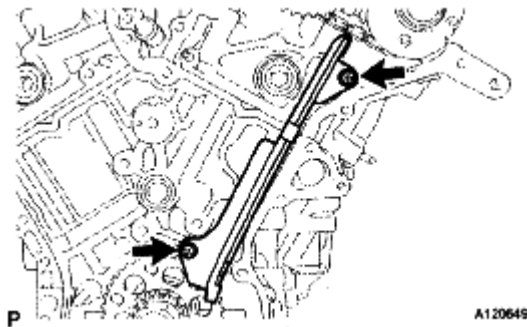


Fig. 443: Identifying No.1 Chain Vibration Damper Bolts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

39. INSTALL NO. 2 CHAIN VIBRATION DAMPER

- a. Install the 2 No. 2 chain vibration dampers.

40. INSTALL CRANKSHAFT TIMING SPROCKET

- a. Install the 2 keys and crankshaft timing sprocket as shown in the illustration.

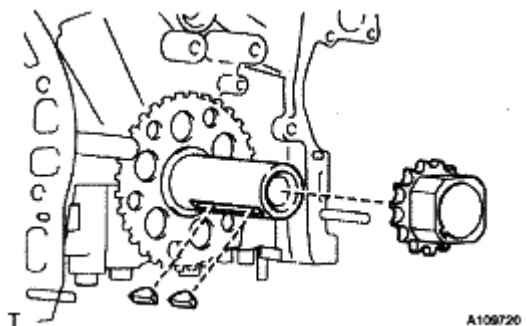


Fig. 444: Identifying Crankshaft Timing Sprocket

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

41. INSTALL IDLE SPROCKET ASSEMBLY

- a. Apply a light coat of engine oil to the rotating surface of the No. 1 idle gear shaft.
- b. Temporarily install the No. 1 idle gear shaft and idle sprocket with the No. 2 idle gear shaft while aligning the knock pin of the No. 1 idle gear with the knock pin groove of the cylinder block.


NOTE: Be careful of the idle gear direction.**HINT:**

Check that no foreign objects are on the No. 1 and No. 2 idle gear shafts.

- c. Using a 10 mm hexagon wrench, tighten the No. 2 idle gear shaft.

Torque: 60 N*m (612 kgf*cm, 44 ft.*lbf)**HINT:**

After installing the idle sprocket assembly, check that the idle sprocket turns smoothly.

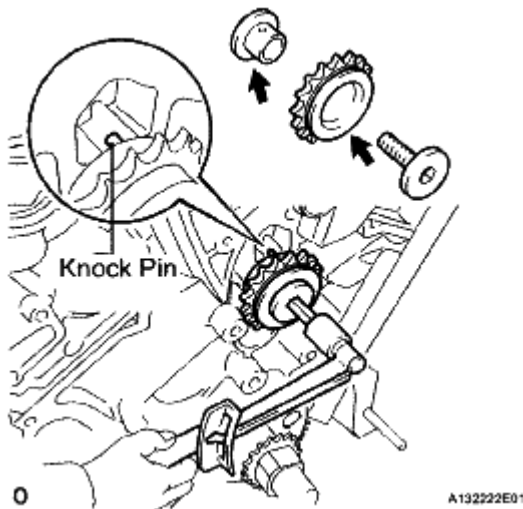**Fig. 445: Installing Idle Sprocket Assembly**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

42. INSTALL CHAIN SUB-ASSEMBLY

- a. Align the mark plate and timing marks as shown in the illustration and install the chain.

HINT:

The camshaft mark plate is orange.

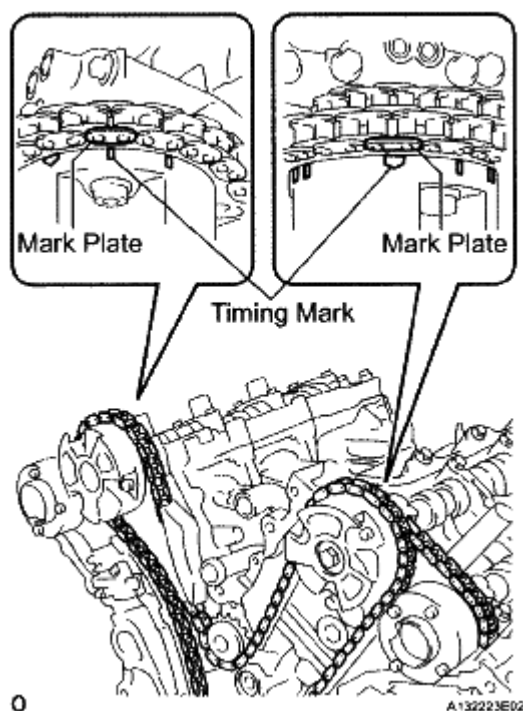


Fig. 446: Identifying Timing Mark On Marking Plate
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Do not pass the chain over the crankshaft, just put it on it.


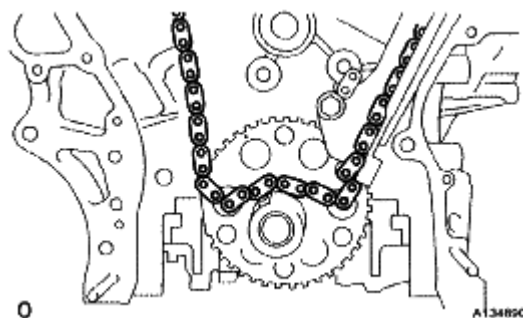


Fig. 447: Identifying Chain Set
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Turn the camshaft timing gear assembly on the bank 1 counterclockwise to tighten the chain between the banks.

NOTE: When the idle sprocket assembly is reused, align the chain plate with the mark where the plate had been in order to tighten the chain between the banks.

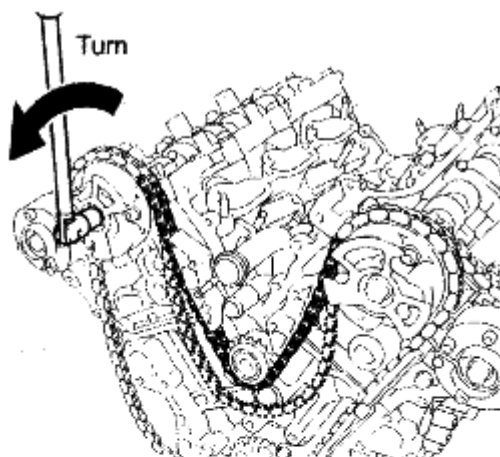

When the Idle sprocket is reused:

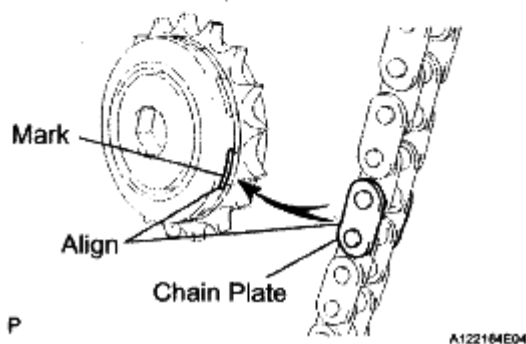


Fig. 448: Turning Camshaft Timing Gear Assembly
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Align the mark plate and timing marks as shown in the illustration and install the chain onto the crankshaft timing sprocket.

HINT:

The crankshaft mark plate is yellow.

- e. Temporarily tighten the pulley set bolt.

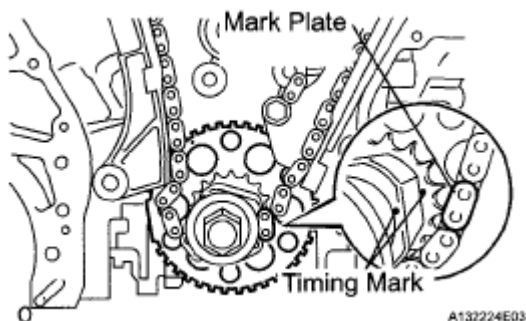


Fig. 449: Identifying Timing Mark

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- f. Turn the crankshaft clockwise to set it to the RH block bore center line (TDC / compression).

43. INSTALL CHAIN TENSIONER SLIPPER

- a. Install the chain tensioner slipper.

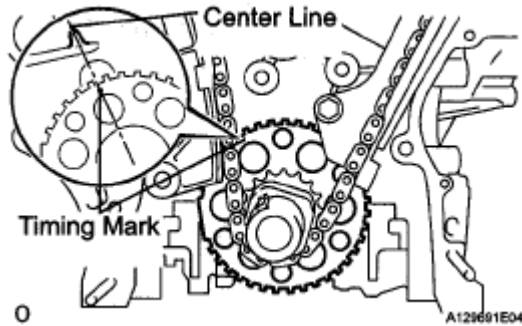


Fig. 450: Identifying Timing Mark

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

44. INSTALL NO. 1 CHAIN TENSIONER ASSEMBLY

- a. Move the stopper plate upward to release the lock, and push the plunger deep into the tensioner.
- b. Move the stopper plate downward to set the lock, and insert a hexagon wrench into the hole of the stopper plate.

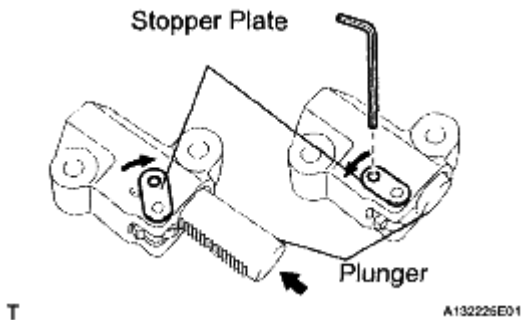


Fig. 451: Identifying Stopper Plate And Plunger

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Install the chain tensioner with the 2 bolts.

Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf)

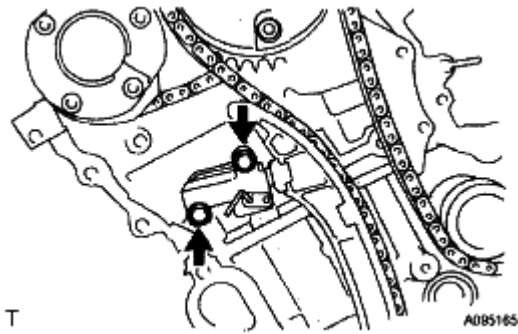


Fig. 452: Locating Chain Tensioner With Bolts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Remove the hexagon wrench of the chain tensioner.


45. INSPECT VALVE TIMING

- a. Check the camshaft timing marks.

NOTE:

- Check each timing mark from a viewpoint directly inline with the center of the camshaft and the timing mark on each camshaft timing gear.
- If the timing marks are checked from any other viewpoint, the valve timing may appear misaligned.


- b. Check that each camshaft timing mark is positioned as shown in the illustration.

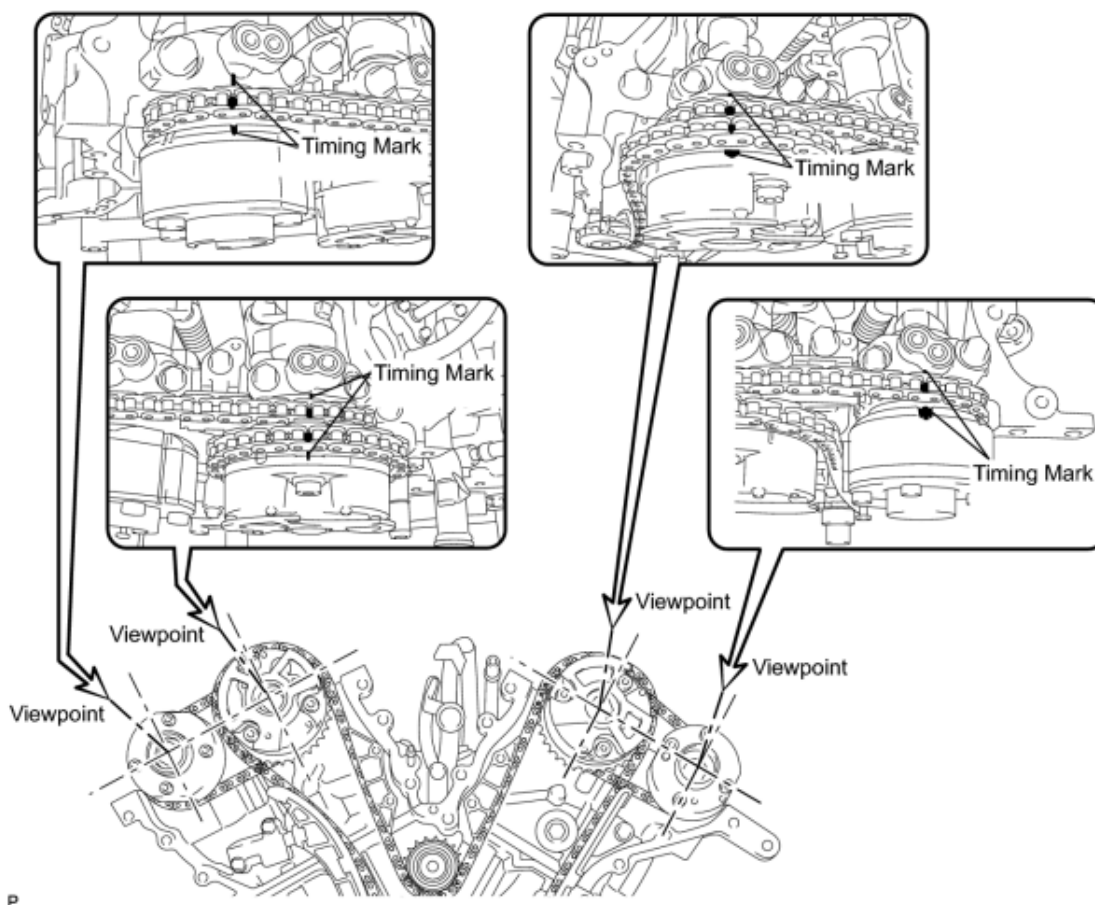

P

Fig. 453: Timing Mark for Intake Camshaft
Courtesy of TOYOTA

NOTE: For the intake camshaft:
Be sure to check mark A at the point when marks B, C, and D are positioned in line. If the marks are checked from any other viewpoint, they cannot be checked correctly.

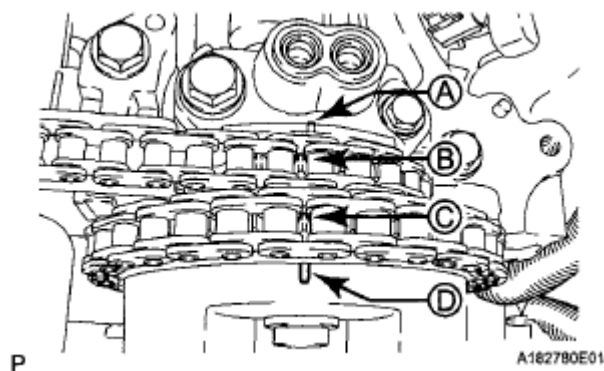

P

Fig. 454: Identifying Camshaft Timing Chain Check Mark
Courtesy of TOYOTA

- c. If the valve timing is misaligned, reinstall the timing chain.
- d. Remove the pulley set bolt.

46. INSTALL TIMING CHAIN CASE OIL SEAL

- a. Using SST, tap in a new oil seal until its surface is flush with the timing gear case edge.

SST 09223-22010,09506-35010

NOTE:

- Keep the lip free of foreign matter.
- Do not tap on the oil seal at an angle.
- Make sure that the oil seal edge does not stick out of the timing chain case.

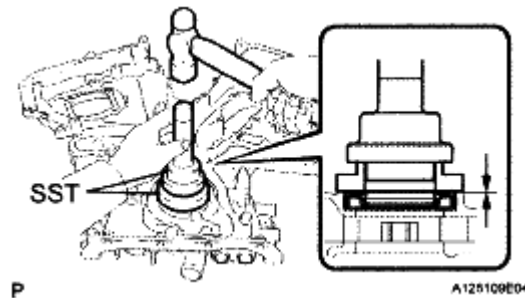


Fig. 455: Installing Timing Chain Case Oil Seal
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

47. INSTALL WATER PUMP ASSEMBLY

- a. Install a new gasket and the water pump assembly with the 8 bolts.

Torque: 9.1 N*m (93 kgf*cm, 81 in.*lbf)

NOTE:

Be sure to replace the bolts indicated by A with new ones or reuse them after applying adhesive 1344.


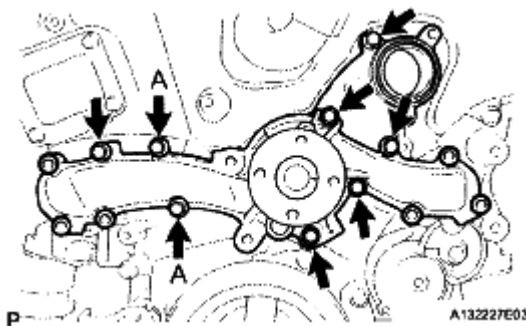


Fig. 456: Locating Water Pump With Bolts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

48. INSTALL TIMING CHAIN COVER SUB-ASSEMBLY

- a. Apply seal packing in a continuous line to the engine unit as shown in the following illustration.

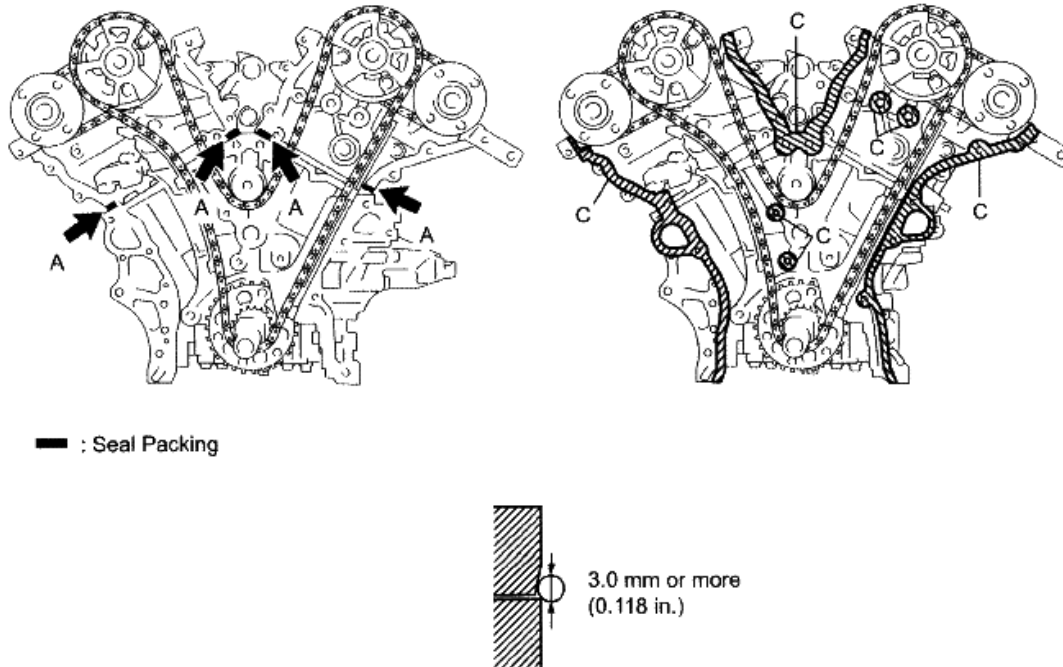

0

A132226E01

Fig. 457: Applying Seal Packing

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

Seal packing: Toyota Genuine Seal Packing Black, Three Bond 1207B or equivalent

Seal diameter: 3.0 mm (0.118 in.)

NOTE:

- Be sure to clean and degrease the contact surfaces, especially the surfaces indicated by C in the illustration.
- When the contact surfaces are wet, wipe them with an oil-free cloth before applying seal packing.
- Install the chain cover within 3 minutes.
- Do not start the engine for at least 2 hours after installing.

- b. Apply seal packing in a continuous line to the timing chain cover as shown in the following illustration.

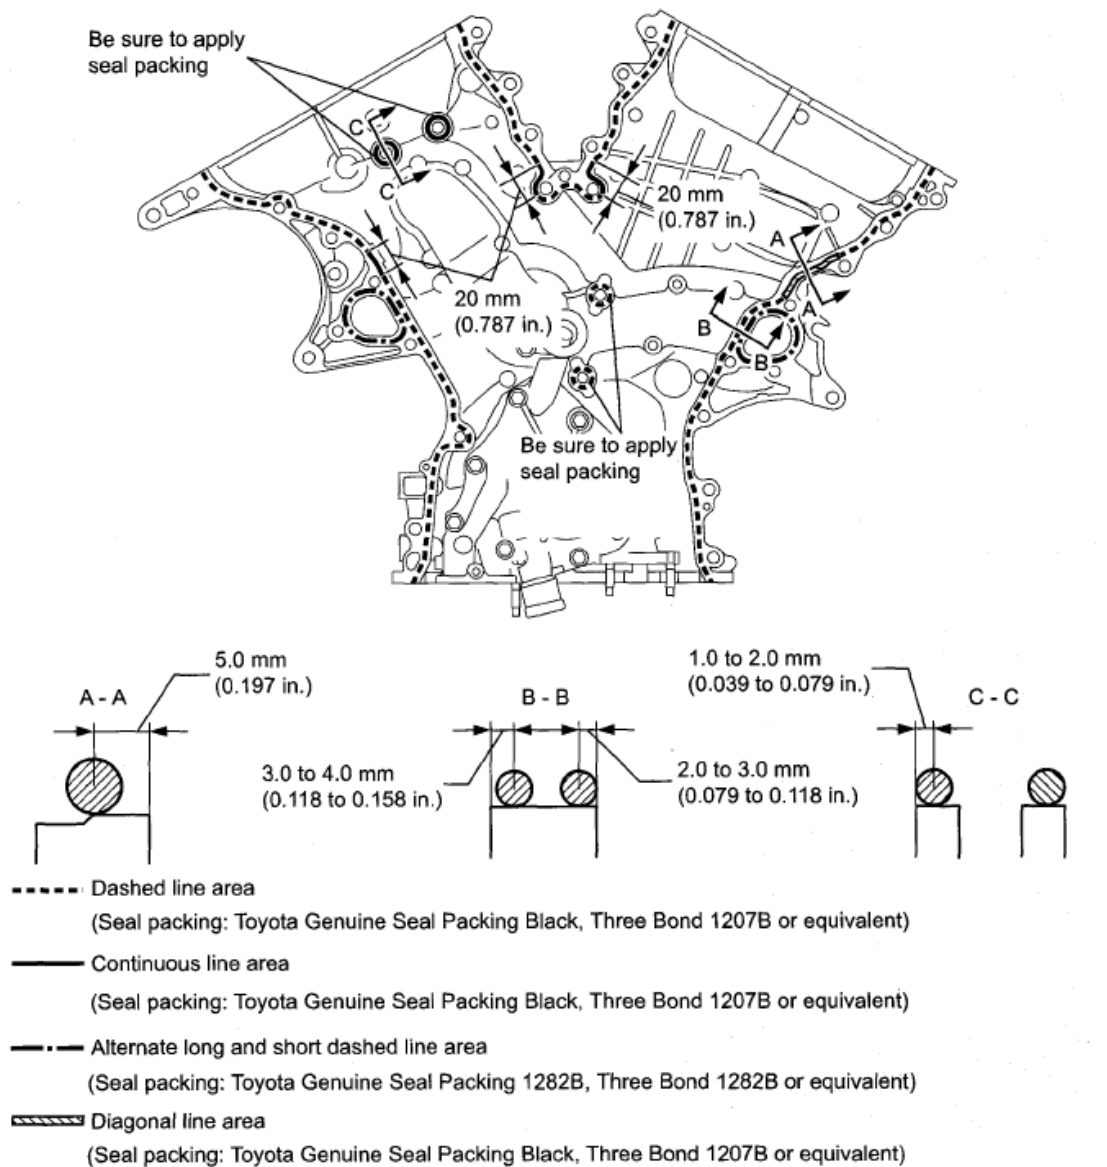


Fig. 458: Applying Seal Packing In Continuous Line To Timing Chain Cover
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

Seal packing:

Toyota Genuine Seal Packing Black, Three Bond 1207B or equivalent

Toyota Genuine Seal Packing 1282B, Three Bond 1282B or equivalent

NOTE:

- When the contact surfaces are wet, wipe them with an oil-free cloth before applying seal packing.
- Install the chain cover within 3 minutes and tighten the bolts within 15 minutes after applying seal packing.

- Do not start the engine for at least 2 hours after installing.

Apply seal packing as follows

SEAL SPECIFICATIONS

Area	Seal Packing Diameter	Application Position from Inside Seal Line
Continuous Line Area	4.5 mm or more (0.177 in.)	3.0 to 4.0 mm (0.118 to 0.158 in.)
Alternate Long and Dashed Line Area	3.5 mm or more (0.138 in.)	2.0 to 3.0 mm (0.079 to 0.118 in.)
Dashed Line Area	3.5 mm or more (0.138 in.)	3.0 to 4.0 mm (0.118 to 0.158 in.)
Diagonal Line Area	6.0 mm or more (0.236 in.)	5.0 mm (0.197 in.)

- c. Install a new gasket.

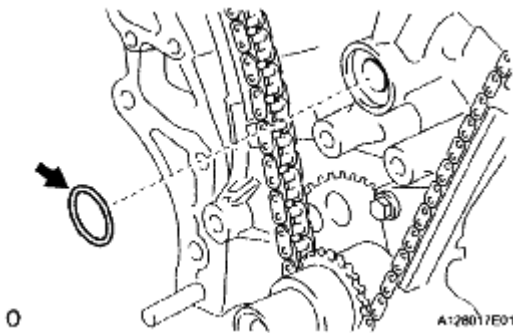


Fig. 459: Locating Gasket

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Align the oil pump's drive rotor spline and the crankshaft as shown in the illustration. Install the spline and chain cover to the crankshaft.

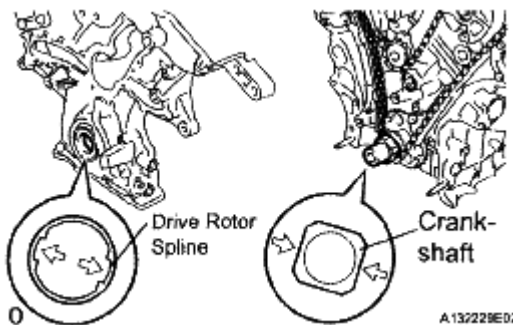


Fig. 460: Aligning Oil Pump Drive Rotor Spline And Crankshaft

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- e. Temporarily tighten the timing chain cover with the 23 bolts and 2 nuts.

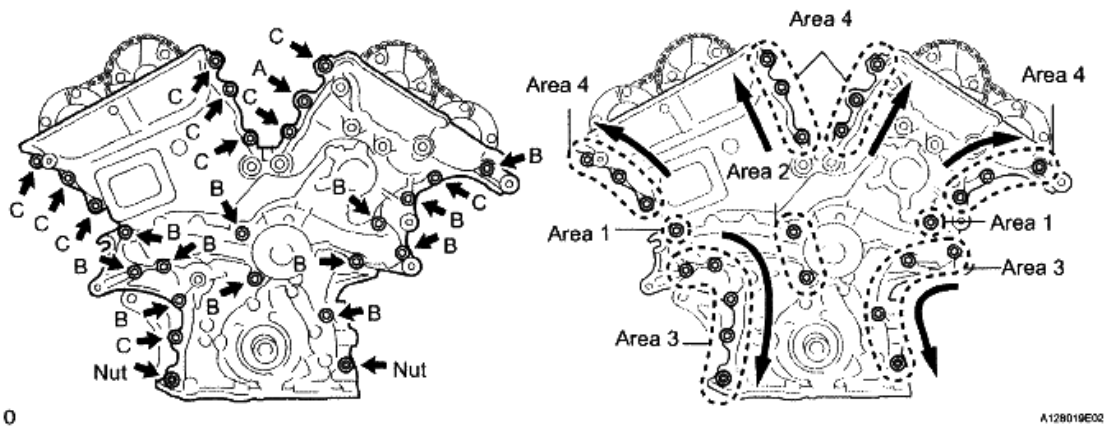


Fig. 461: Locating Timing Chain Cover With Bolts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

Bolt length

BOLT LENGTH

Item	Length
Bolt A	40 mm (1.57 in.)
Bolt B	55 mm (2.17 in.)
Bolt C	25 mm (0.98 in.)

NOTE: Make sure that there is no oil on the bolt and nut threads.

- f. Fully tighten the bolts in this order: Area 1 and Area 2.

Torque: 21 N*m (214 kgf*cm, 15 ft.*lbf)

- g. Fully tighten the bolts in Area 3.

Torque: 21 N*m (214 kgf*cm, 15 ft.*lbf)

HINT:

Tighten the bolts and nuts in the order of upper to lower as shown in the illustration.

- h. Fully tighten the bolts in Area 4.

Torque: 43 N*m (438 kgf*cm, 32 ft.*lbf) for bolt A

21 N*m (214 kgf*cm, 15 ft.*lbf) for bolts except bolt A

HINT:

Tighten the bolts in the order of lower to upper as shown in the illustration.

- i. Install a new chain cover plate gasket and the chain cover plate with the 4 bolts.

Torque: 9.1 N*m (93 kgf*cm, 81 in.*lbf)

49. INSTALL WATER INLET HOUSING

- a. Install 2 new O-rings.

HINT:

Apply a small amount of water or soapy water to O-ring (A) in the illustration before installing it.


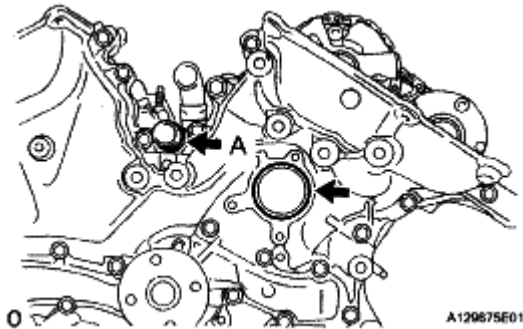


Fig. 462: Locating O-Ring

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Install the stud bolts.

Torque: 4.0 N*m (41 kgf*cm, 35 in.*lbf)

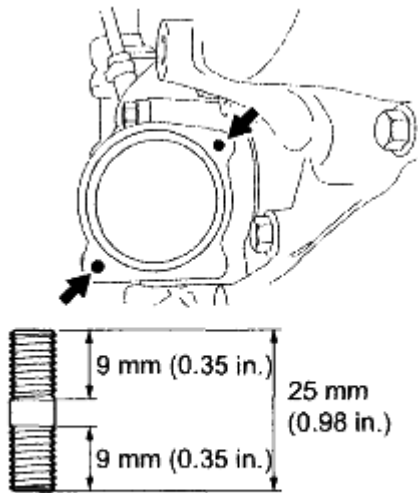

A137975E01

Fig. 463: Identifying Stud Bolt Length

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Install the water inlet housing with the 2 bolts and nut.

Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf)

NOTE: Be careful that the O-ring does not get caught between the parts.

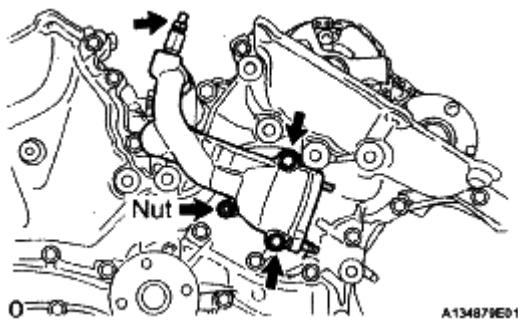


Fig. 464: Locating Bolts, Nut, And Water Inlet Housing

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Connect the No. 1 water by-pass hose.
- e. Apply adhesive around the drain cock.

Adhesive: Toyota Genuine Adhesive 1324, Three Bond 1324 or equivalent

- f. Install the drain cock assembly to the water inlet housing.

Torque: 30 N*m (306 kgf*cm, 22 ft.*lbf)

- g. Install the drain cock plug to the water drain cock assembly.

Torque: 13 N*m (130 kgf*cm, 9 ft.*lbf)

- h. Install a new gasket to the thermostat.
- i. Align the thermostat jiggle valve with the upper stud bolt, and insert the thermostat in the water inlet housing.

HINT:

The jiggle valve may be set within 10° of either side of the prescribed positions.

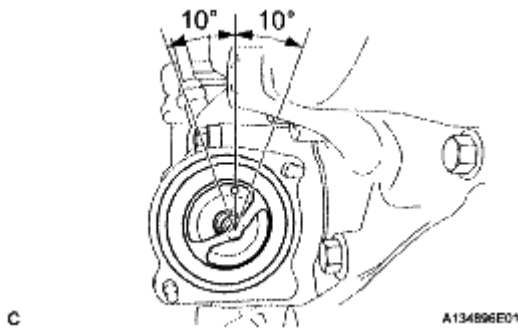


Fig. 465: Identifying Jiggle Valve Angles
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- j. Install the water inlet with the 2 nuts.

Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf)

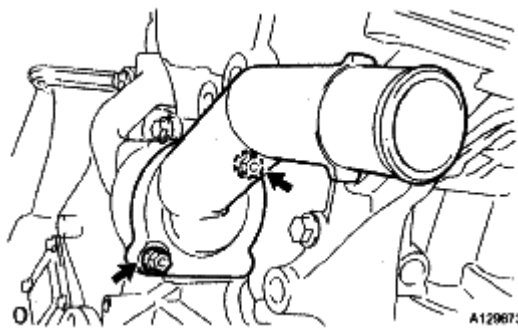


Fig. 466: Locating Water Inlet With Nuts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

50. INSTALL NO. 1 FRONT ENGINE MOUNTING BRACKET LH

- a. Install the No. 1 front engine mounting bracket LH with the 6 bolts.


Torque: 54 N*m (551 kgf*cm, 40 ft.*lbf)

NOTE:

- Install the water inlet and mounting bracket within 15 minutes after installing the chain cover.
- Do not start the engine for at least 2 hours after installation.

- b. When replacing a stud bolt, install it by using an E8 "TORX" socket wrench.

Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf)

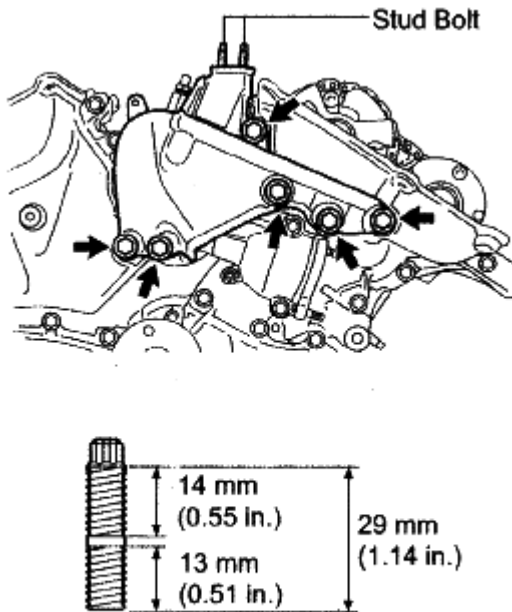

A134961E01

Fig. 467: Identifying Stud Bolt Length

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

51. INSTALL OIL PAN BAFFLE PLATE

- a. Install the oil pan baffle plate with the 7 bolts.

Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf)

HINT:

Temporarily tighten the 7 bolts. Fully tighten 2 bolts (A) as shown in the illustration before tightening the other bolts.


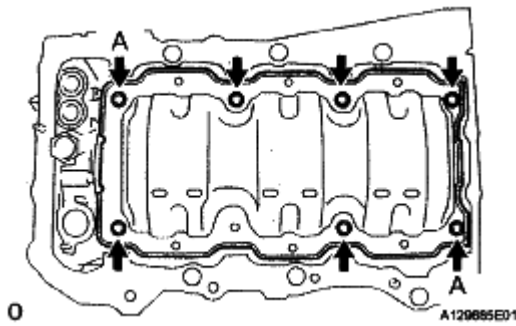


Fig. 468: Locating Oil Pan Baffle Plate Bolts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

52. INSTALL OIL PAN SUB-ASSEMBLY

- When replacing a stud bolt, install it by using an E8 "TORX" socket wrench.

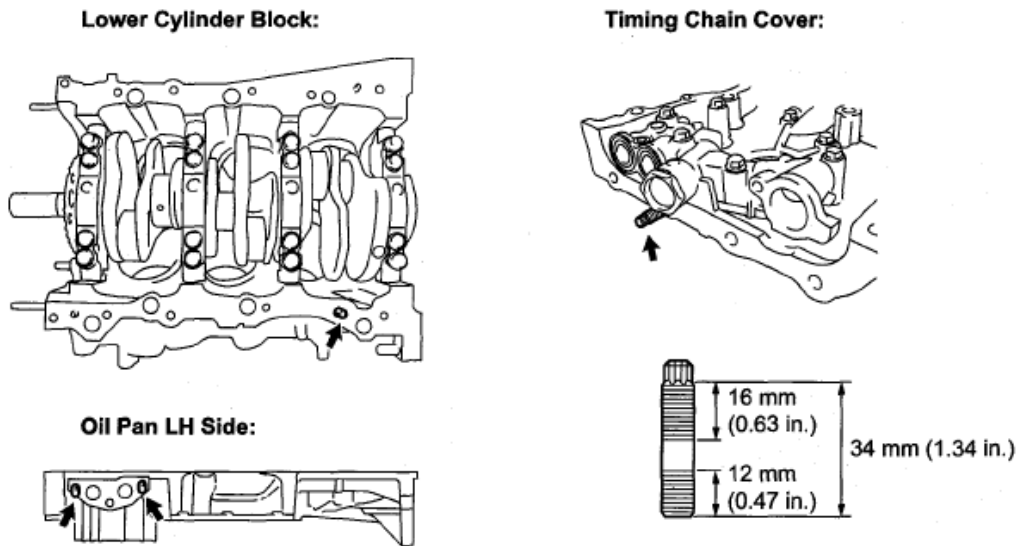

A13828E01

Fig. 469: Identifying Stud Bolt Installation Procedure
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf)

- Install 2 new O-rings.

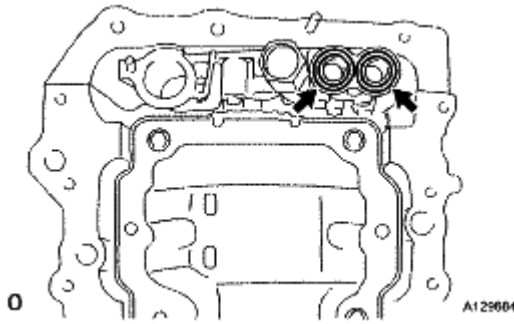


Fig. 470: Locating O-Rings

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


- c. Apply seal packing in a continuous line as shown in the illustration.

Seal packing: Toyota Genuine Seal Packing Black, Three Bond 1207B or equivalent

Seal diameter: 3.0 to 4.0 mm (0.118 to 0.156 in.)

NOTE:

- Remove any oil from the contact surface.
- Install the oil pan within 3 minutes after applying seal packing.
- Do not start the engine for at least 2 hours after installing.

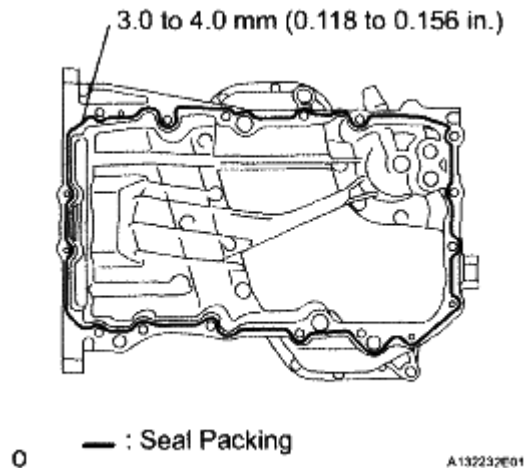

— : Seal Packing


Fig. 471: Applying Seal Packing

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Install the oil pan with the 16 bolts and 2 nuts.

Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf) for bolt A

21 N*m (214 kgf*cm, 15 ft.*lbf) for bolts except A

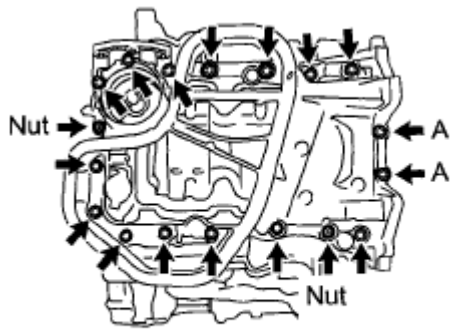

A162634E02

Fig. 472: Locating Bolts And Nuts



Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

53. INSTALL OIL STRAINER SUB-ASSEMBLY

- a. Using an E6 "TORX" socket, install the stud bolts as shown in the illustration.

Torque: 4.0 N*m (41 kgf*cm, 35 in.*lbf)

Timing Chain Cover:

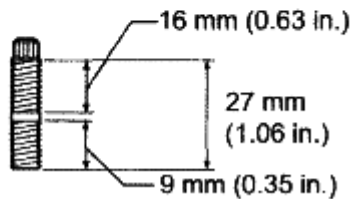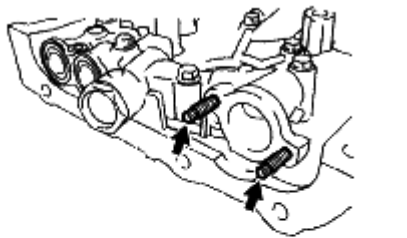

0

A134903E01

Fig. 473: Locating Stud Bolts And Length

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Install a new gasket and the oil strainer sub-assembly with the bolt and 2 nuts.

Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf)

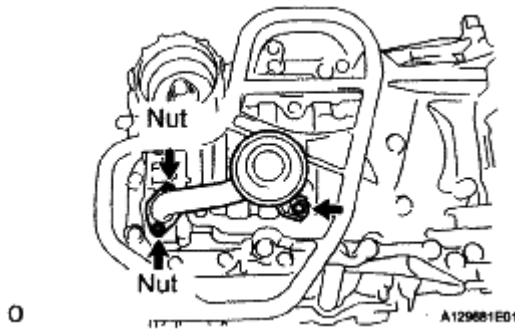


Fig. 474: Locating Gasket And Oil Strainer With Bolt And Nuts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

54. INSTALL NO. 2 OIL PAN SUB-ASSEMBLY

- a. Using an E6 "TORX" socket, install the stud bolts as shown in the illustration.

Torque: 4.0 N*m (41 kgf*cm, 35 in.*lbf)

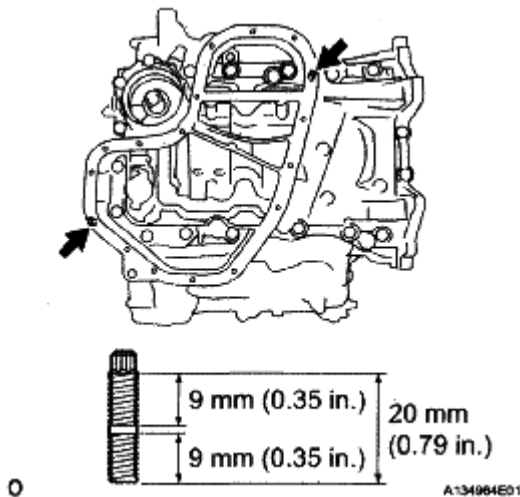


Fig. 475: Locating No. 2 Oil Pan Sub-Assembly Stud Bolts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Apply seal packing in a continuous line as shown in the illustration.

Seal packing: Toyota Genuine Seal Packing Black, Three Bond 1207B or equivalent

Seal diameter: 3.0 to 4.0 mm (0.118 to 0.158 in.)

NOTE:

- Remove any oil from the contact surface.
- Install the oil pan No. 2 within 3 minutes after applying seal packing.
- Do not start the engine for at least 2 hours after installing.

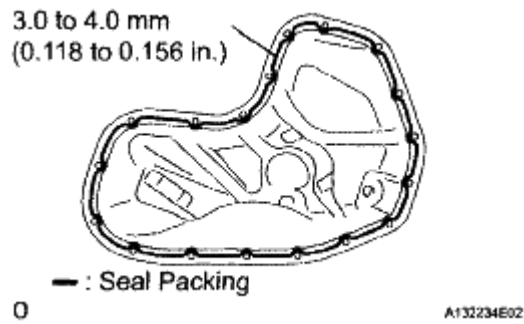


Fig. 476: Identifying Seal Packing
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Install the oil pan with the 16 bolts and 2 nuts.

Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf)

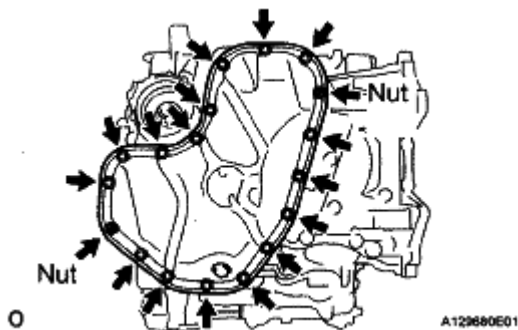


Fig. 477: Identifying Oil Pan With Bolts And Nuts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

55. INSTALL OIL PAN DRAIN PLUG

- a. Install a new oil pan drain plug gasket and the oil pan drain plug.

Torque: 40 N*m (408 kgf*cm, 30 ft.*lbf)

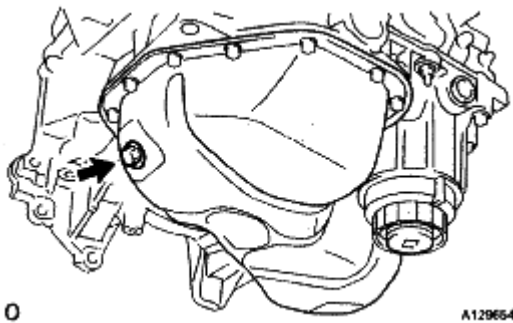


Fig. 478: Locating Oil Pan Drain Plug

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

56. INSTALL CYLINDER HEAD COVER SUB-ASSEMBLY (for Bank 1)

- a. Apply seal packing as shown in the illustration.

Seal packing: Toyota Genuine Seal Packing Black, Three Bond 1207B or equivalent

NOTE:

- Remove any oil from the contact surface.
- Install the head cover within 3 minutes after applying seal packing.
- Do not start the engine for at least 2 hours after installing.

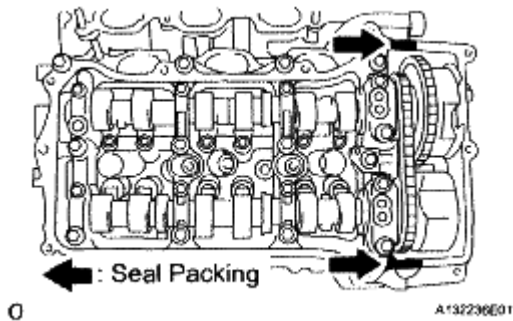


Fig. 479: Identifying Seal Packing

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Install 3 new gaskets as shown in the illustration.
- c. Install a new gasket to the head cover.

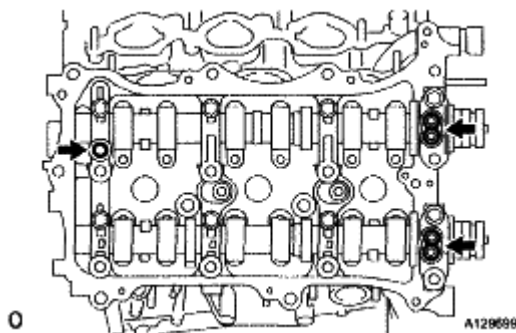


Fig. 480: Locating Gaskets

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Install a head cover with the 12 bolts and a new washer.

Torque: 21 N*m (214 kgf*cm, 15 ft.*lbf) for bolt A

10 N*m (102 kgf*cm, 7 ft.*lbf) for bolts except A

HINT:

After tightening all bolts, check the tightening torque of 1 and 11. Retighten the bolt if necessary.

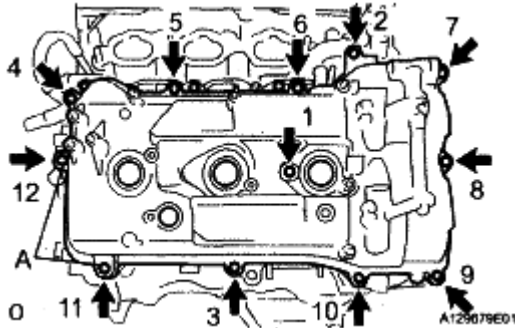


Fig. 481: Identifying Head Cover With Bolts
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

57. INSTALL CYLINDER HEAD COVER SUB-ASSEMBLY (for Bank 2)

- a. Apply seal packing as shown in the illustration.

Seal packing: Toyota Genuine Seal Packing Black, Three Bond 1207B or equivalent

NOTE:

- Remove any oil from the contact surface.
- Install the head cover within 3 minutes after applying seal packing.
- Do not start the engine for at least 2 hours after installing.

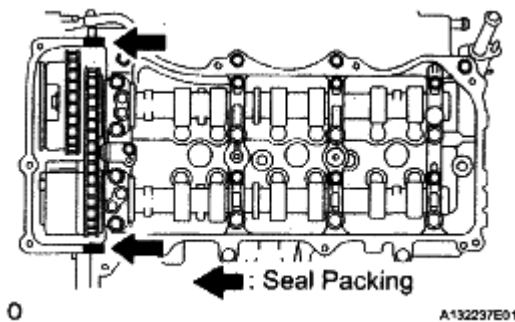


Fig. 482: Identifying Seal Packing
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Install 3 new gaskets as shown in the illustration.
- c. Install a new cylinder head cover gasket to the cylinder head cover sub-assembly.

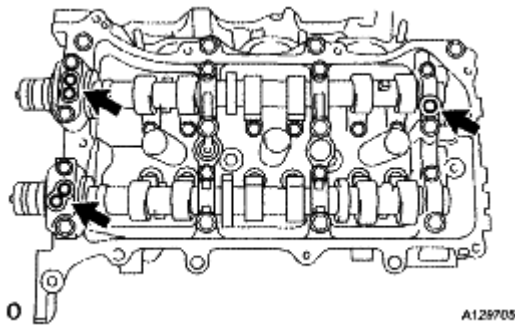


Fig. 483: Locating Gaskets

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Install the cylinder head cover with the 12 bolts and a new washer.

Torque: 21 N*m (214 kgf*cm, 15 ft.*lbf) for bolt A

10 N*m (102 kgf*cm, 7 ft.*lbf) for bolts except A

HINT:

After tightening all bolts, check the tightening torque of 1 and 10. Retighten the bolt if necessary.

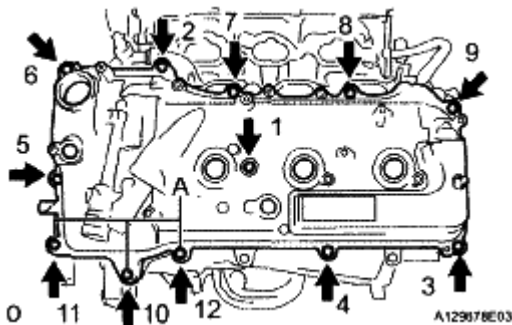


Fig. 484: Locating Head Cover With Bolts And Washer

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

58. INSTALL WATER OUTLET

- a. Install 2 new gaskets and a new O-ring.

HINT:

Apply soapy water to the O-ring.

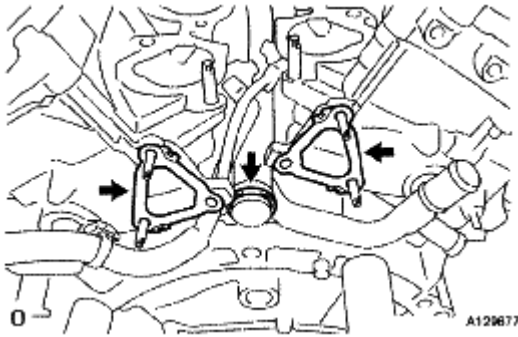


Fig. 485: Locating Water Outlet Gaskets And O-Ring
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Install the water outlet with the 2 bolts and 4 nuts.

Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf) for bolts

10 N*m (103 kgf*cm, 7 ft.*lbf) for nuts

NOTE: Be careful that the O-ring does not get caught between the parts.

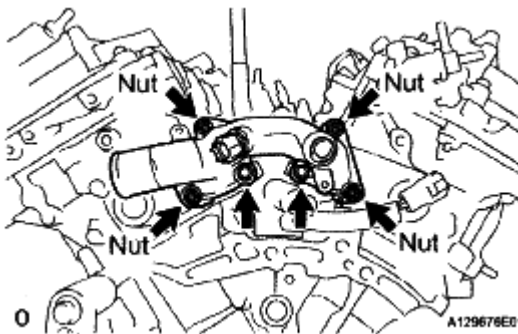


Fig. 486: Locating Bolts, Nuts And Water Outlet
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

59. INSTALL NO. 1 OIL COOLER BRACKET

- a. Using an E8 "TORX" socket, install the stud bolts as shown in the illustration.

Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf)

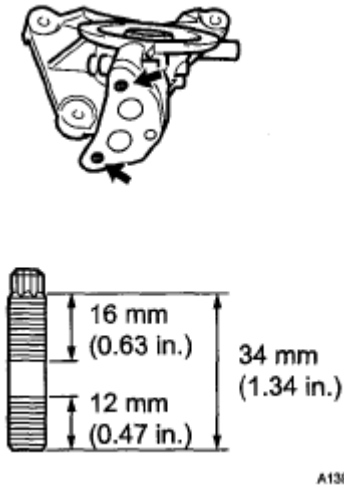


Fig. 487: Locating Stud Bolts

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Install a new gasket to the No. 1 oil cooler bracket.
- c. Install the oil cooler pipe with the bolt and 2 nuts.

Torque: 21 N*m (214 kgf*cm, 16 ft.*lbf)

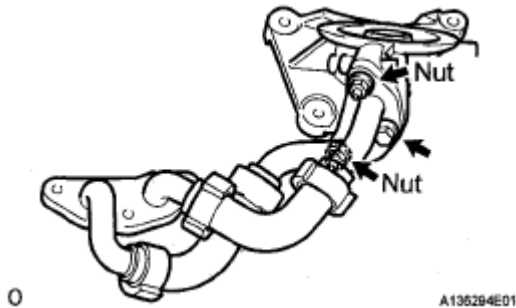


Fig. 488: Locating Bolt, Nuts, No. 1 Oil Cooler Bracket, And Gasket

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Install a new gasket to the No. 1 oil pan.
- e. Install the No. 1 oil cooler bracket with oil cooler pipe with the 3 bolts and 3 nuts.

Torque: 21 N*m (214 kgf*cm, 16 ft.*lbf)

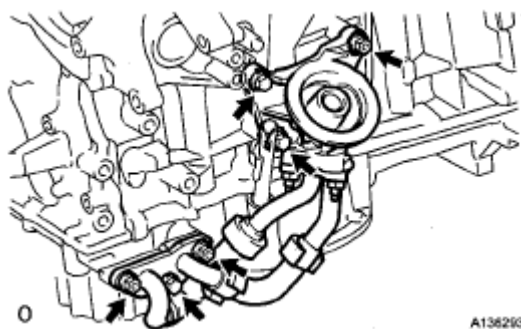


Fig. 489: Locating Bolts, Nuts, And Oil Cooler Pipe With No. 1 Oil Cooler Bracket
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

60. INSTALL OIL COOLER ASSEMBLY

- a. Install a new O-ring.
- b. Install the oil cooler assembly with the union bolt.

Torque: 68 N*m (693 kgf*cm, 50 ft.*lbf)

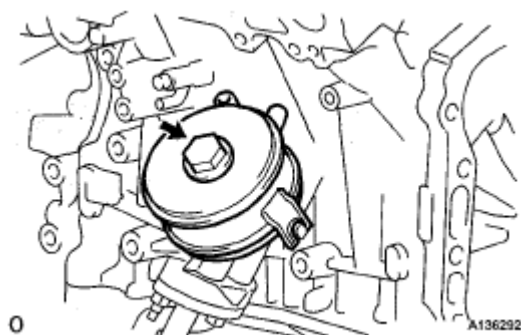


Fig. 490: Locating Oil Cooler Union Bolt
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Install the 2 water by-pass hoses with the bolt, 2 clamps, and 4 clips.

Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf)

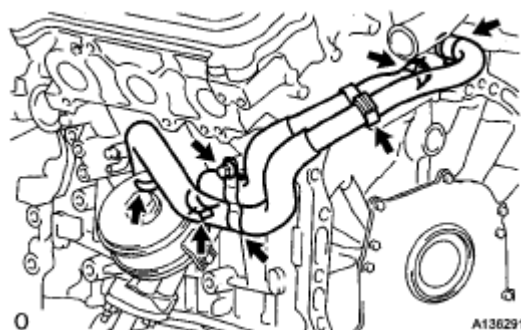


Fig. 491: Locating Bolt, Clamps, And Clips

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

61. INSTALL CRANKSHAFT PULLEY

- a. Align the pulley set key with the key groove of the pulley, and slide on the pulley.
- b. Using SST, install the pulley bolt.

SST 09213-70011 (09213-70020), 09330-00021

Torque: 250 N*m (2550 kgf*cm, 184 ft.*lbf)

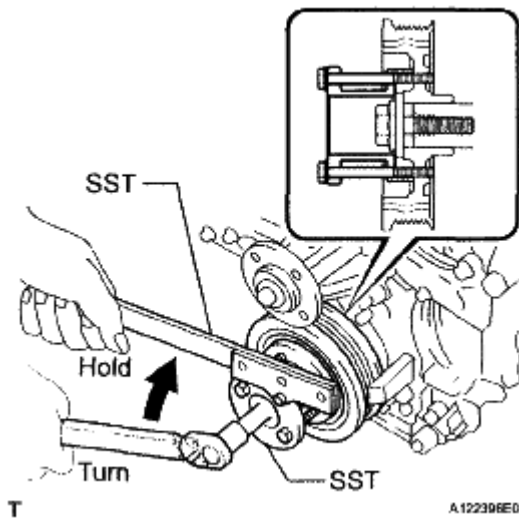


Fig. 492: Installing Crankshaft Pulley Bolt Using SST

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

62. INSTALL OIL FILTER ELEMENT

- a. Clean the inside of the oil filter cap sub-assembly, the threads and O-ring groove.
- b. Apply a light coat of engine oil to a new O-ring and install it to the oil filter cap sub-assembly.
- c. Set a new oil filter element to the oil filter cap.
- d. Remove dirt or foreign matter from the installation surface of the engine.
- e. Apply a light coat of engine oil to the O-ring again and install the oil filter cap sub-assembly.

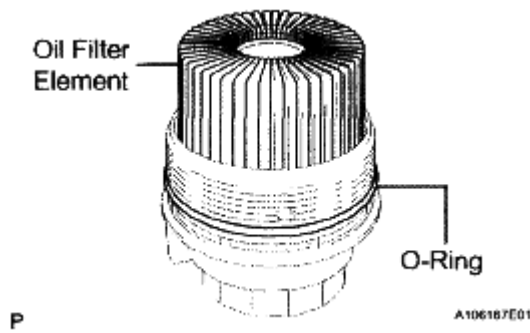


Fig. 493: View Of Oil Filter Element And O-Ring
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

NOTE:

- Be careful that the O-ring does not get caught between the parts.
- The O-ring must not be twisted on the groove.

f. Using SST, tighten the oil filter cap.

SST 09228-06501

Torque: 25 N*m (255 kgf*cm, 18 ft.*lbf)

NOTE:

Make sure that the oil filter is installed securely as shown in the illustration.

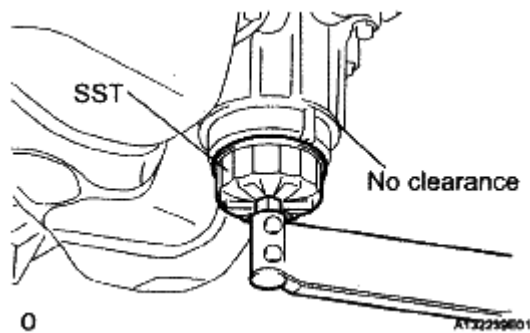


Fig. 494: Tightening Oil Filter Cap
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

g. Apply a light coat of engine oil to a new O-ring and install it to the oil filter cap.

NOTE:

Remove all dirt and foreign matter from the installation surface.

h. Install the oil filter drain plug to the oil filter cap.

Torque: 13 N*m (127 kgf*cm, 9 ft.*lbf)

NOTE: Make sure that the O-ring does not get caught between the parts.

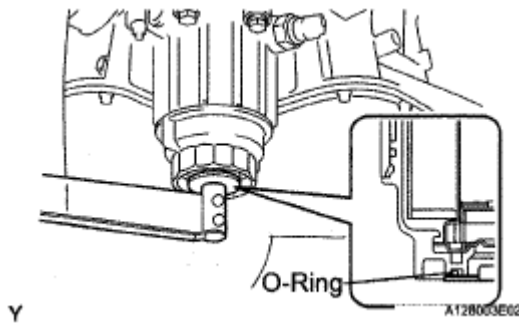


Fig. 495: Locating Oil Filter Drain Plug To Oil Filter Cap
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

63. INSTALL CYLINDER BLOCK WATER DRAIN COCK SUB-ASSEMBLY

- a. Apply adhesive around the drain cocks.

Adhesive: Toyota Genuine Adhesive 1324, Three Bond 1324 or equivalent

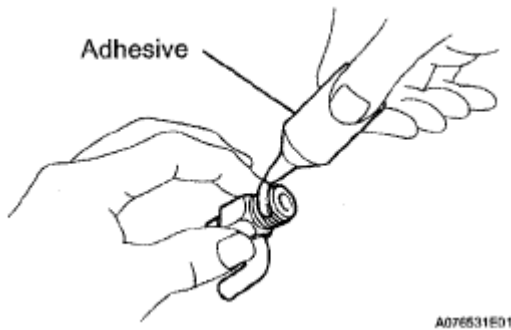


Fig. 496: Applying Adhesive Around Drain Cocks
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Install the water drain cocks as shown in the illustration.

Torque: 25 N*m (255 kgf*cm, 18 ft.*lbf)

NOTE: Do not rotate the drain cocks more than 1 revolution (360°) after tightening the drain cocks with the specified torque.

- c. Install the water drain cock plugs to the water drain cocks.

Torque: 13 N*m (130 kgf*cm, 9 ft.*lbf)

64. INSTALL NO. 1 OIL PIPE

- a. Make sure that there is no foreign matter on the mesh of the oil control valve filter LH.

NOTE: Do not touch the mesh when installing the oil control valve filter.

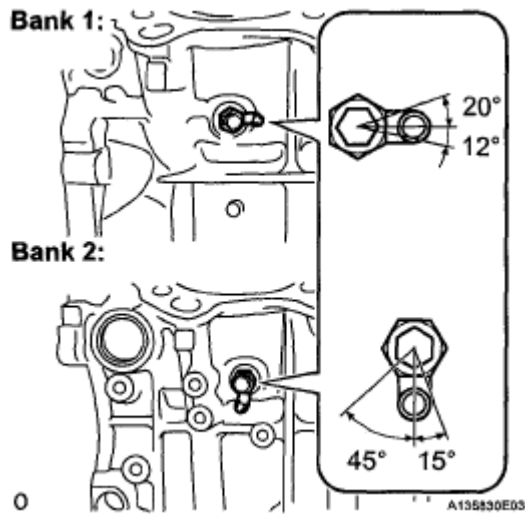


Fig. 497: Installing Water Drain Cocks

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- Install the oil control valve filter LH to the oil pipe union. Install new gaskets and temporarily install the oil pipe (on the head cover side).
- Install a new gasket and temporarily install the oil pipe (on the cylinder head side) with the oil check valve bolt.
- Tighten the oil pipe union (on the head cover side).

Torque: 65 N*m (663 kgf*cm, 48 ft.*lbf)

- Tighten the oil pipe union (on the cylinder head side).

Torque: 65 N*m (663 kgf*cm, 48 ft.*lbf)

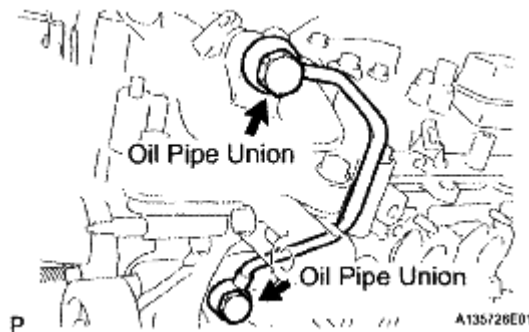


Fig. 498: Locating Oil Pipe Unions And Oil Pipe

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

NOTE: If the link that connects the gaskets is broken, remove the

connecting link by using nippers or similar tools.

65. INSTALL OIL PIPE

- a. Make sure that there is no foreign matter on the mesh of the oil control valve filter RH.

NOTE: Do not touch the mesh when installing the oil control valve filter.

- b. Install the oil control valve filter RH to the oil pipe union. Install new gaskets and temporarily install the oil pipe (on the head cover side).
- c. Install a new gasket and temporarily install the oil pipe (on the cylinder head side) with the oil check valve bolt.
- d. Install the bolt (A) to the cylinder head.

Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf)

- e. Tighten the oil pipe union (on the head cover side).

Torque: 65 N*m (663 kgf*cm, 48 ft.*lbf)

- f. Tighten the oil pipe union (on the cylinder head side).

Torque: 65 N*m (663 kgf*cm, 48 ft.*lbf)

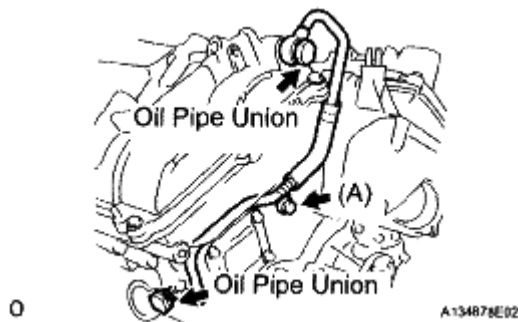


Fig. 499: Locating Oil Pipe Unions

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

NOTE: If the link that connects the gaskets is broken, remove the connecting link by using nippers or similar tools.

66. INSTALL CRANKSHAFT POSITION SENSOR

- a. Install the crankshaft position sensor with the bolt.

Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf)

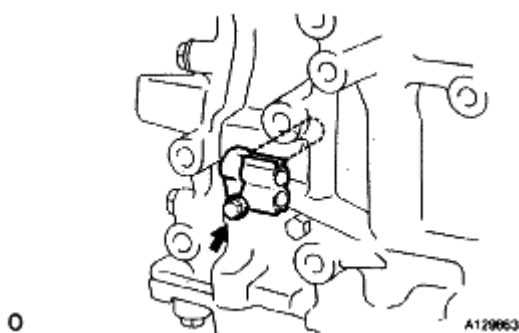


Fig. 500: Locating Crankshaft Position Sensor


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

67. INSTALL CAMSHAFT TIMING OIL CONTROL VALVE ASSEMBLY

- a. Install the 4 camshaft timing oil control valves with the 4 bolts.

Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf)

Bank 2:

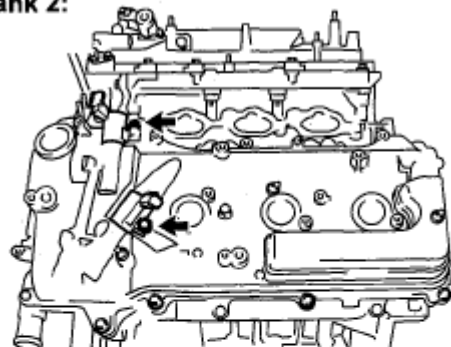

Bank 1:

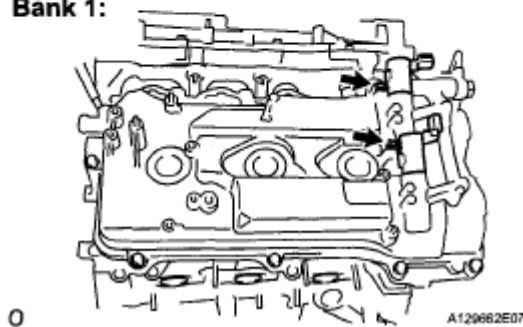


Fig. 501: Locating Bolts And Camshaft Oil Control Valves

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

68. INSTALL CAMSHAFT POSITION SENSOR

- a. Install the 4 camshaft position sensors with the 4 bolts.

Torque: 10 N*m (102 kgf*cm, 7 ft.*lbf)

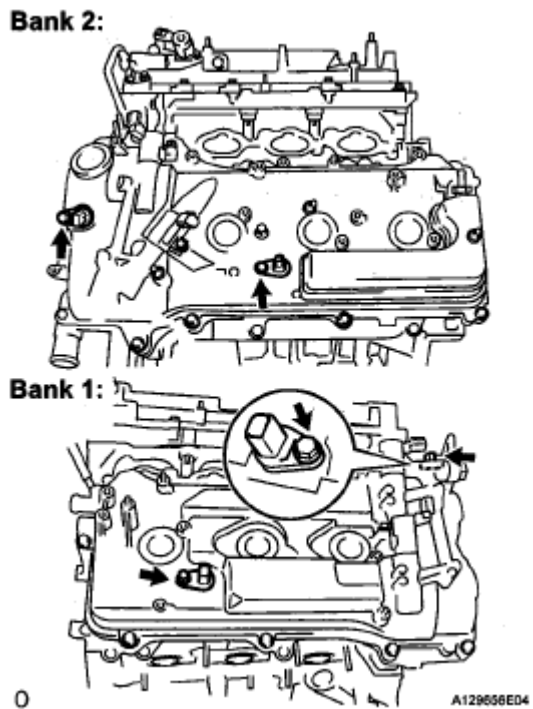


Fig. 502: Locating Bolts And Camshaft Position Sensors
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

69. INSTALL VENTILATION VALVE SUB-ASSEMBLY

- a. Apply adhesive around the ventilation valve sub-assembly.

Adhesive: Toyota Genuine Adhesive 1324, Three Bond 1324 or equivalent

- b. Install the ventilation valve sub-assembly.

Torque: 27 N*m (275 kgf*cm, 20 ft.*lbf)

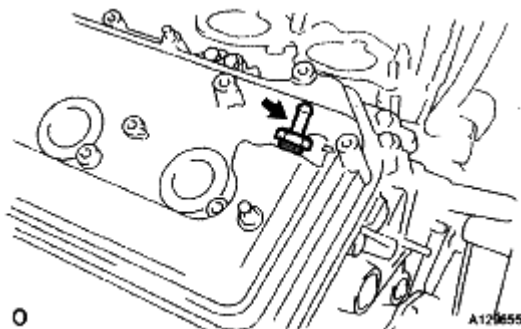


Fig. 503: Identifying Ventilation Valve Sub-Assembly
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

70. INSTALL SPARK PLUG

- a. Install the 6 spark plugs.

Torque: 18 N*m (184 kgf*cm, 13 ft.*lbf)

71. INSTALL OIL FILLER CAP SUB-ASSEMBLY

- a. Install a new oil filler gasket.
- b. Install the oil filler cap sub-assembly.