2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

#### **2014 ENGINE**

## Engine Mechanical - 4.3L (LU3) - Express/Savana

## **SPECIFICATIONS**

#### FASTENER TIGHTENING SPECIFICATIONS

**Fastener Tightening Specifications** 

	Specification	
Application	Metric	English
Accelerator Control Cable Bracket Nut to Stud	12 N.m	106 lb in
Accelerator Control Cable Bracket Nut to Throttle Body	9 N.m	80 lb in
Accelerator Control Cable Bracket Stud to Intake Manifold	6 N.m	53 lb in
Accelerator Control Cable Bracket Stud to Throttle Body	12 N.m	106 lb in
Air Cleaner Adapter Stud	8 N.m	71 lb in
Balance Shaft Driven Gear Bolt		
• First Pass	20 N.m	15 lb ft
• Final Pass	35 de	egrees
Balance Shaft Retainer Bolt	12 N.m	106 lb in
Battery Cable Bracket Bolt to Oil Pan	12 N.m	106 lb in
Battery Negative Cable Bolt to Engine	25 N.m	18 lb ft
Battery Positive Cable Junction Block Bracket Bolt	25 N.m	18 lb ft
Belt Idler Pulley Bolt	50 N.m	37 lb ft
Camshaft Position Sensor Bolt	10 N.m	89 lb in
Camshaft Retainer Bolt	12 N.m	106 lb in
Camshaft Sprocket Bolt	25 N.m	18 lb ft
Connecting Rod Bolt		
• First Pass	20 N.m	15 lb ft
• Final Pass	100 d	egrees
Crankshaft Balancer Bolt	95 N.m	70 lb ft
Crankshaft Bearing Cap Bolt- Preferred Method		
• First Pass	20 N.m	15 lb ft
Final Pass	73 de	egrees
Crankshaft Bearing Cap Bolt	105 N.m	77 lb ft
Crankshaft Position Sensor Bolt	10 N.m	89 lb in
Crankshaft Pulley Bolt	58 N.m	43 lb ft
Crankshaft Rear Oil Seal Housing Bolt and Nut	12 N.m	106 lb in
Crankshaft Rear Oil Seal Housing Retainer Stud	6 N.m	53 lb in
Crossmember Bolt	100 N.m	74 lb ft
Cylinder Head Bolt- Preferred Method		

All Bolts First Pass in Sequence	30 N.m	22 lb ft
<ul> <li>Long Bolts Final Pass in Sequence</li> </ul>	75 degrees	
<ul> <li>Medium Bolts Final Pass in Sequence</li> </ul>	65 degrees	
Short Bolts Final Pass in Sequence	55 d	egrees
Cylinder Head Core Hole Plug	20 N.m	15 lb ft
Distributor Cap Bolt	2.4 N.m	21 lb in
Distributor Clamp Bolt	25 N.m	18 lb ft
Drive Belt Idler Pulley Bolt	50 N.m	37 lb ft
Drive Belt Tensioner Bolt	50 N.m	37 lb ft
Engine Block Left Side Oil Gallery Plug	20 N.m	15 lb ft
Engine Block Left Rear Oil Gallery Plug	30 N.m	22 lb ft
Engine Block Right Rear Oil Gallery Plug	20 N.m	15 lb ft
Engine Block Coolant Drain Hole Plug	20 N.m	15 lb ft
Engine Block Oil Gallery Plug	20 N.m	15 lb ft
Engine Coolant Heater Bolt/Screw	2 N.m	18 lb in
Engine Coolant Temperature (ECT) Sensor	20 N.m	15 lb ft
Engine Flywheel Bolt	100 N.m	74 lb ft
Engine Front Cover Bolt	12 N.m	106 lb in
Engine Lift Front Bracket Stud	35 N.m	26 lb ft
Engine Mount Bolt to Engine Bracket	50 N.m	37 lb ft
Engine Mount Engine Bracket Bolt to Engine	50 N.m	37 lb ft
Engine Mount Frame Side Mount Bolt	70 N.m	52 lb ft
Engine Oil Level Sensor	13 N.m	115 lb in
Engine Oil Pressure Gauge Sensor	30 N.m	22 lb ft
Engine Oil Pressure Gauge Sensor Fitting- Plus Required Angle	15 N.m	11 lb ft
Engine Shield Bolt	20 N.m	15 lb ft
Engine Wiring Harness Bracket Bolt to Battery Positive Cable Junction Block Bracket	9 N.m	80 lb in
Engine Wiring Harness Bracket Bolt to Generator and Drive Belt Tensioner Bracket	25 N.m	18 lb ft
Engine Wiring Harness Bracket Nut to Evaporative Emission (EVAP) Canister Purge Solenoid Valve Stud	9 N.m	80 lb in
Engine Wiring Harness Bracket Nut to Intake Manifold Stud	12 N.m	106 lb in
Engine Wiring Harness Bracket Stud	25 N.m	18 lb ft
Engine Wiring Harness Clip Bolt	9 N.m	80 lb in
Engine Wiring Harness Ground Nut	16 N.m	12 lb ft
Evaporative Emission (EVAP) Canister Purge Solenoid Valve Stud to Intake Manifold	10 N.m	89 lb in
Exhaust Manifold Bolt/Stud		
• First Pass	15 N.m	11 lb ft

• Final Pass	30 N.m	22 lb ft
Exhaust Manifold Heat Shield Bolt	12 N.m	106 lb in
Fan and Water Pump Pulley Bolt	25 N.m	18 lb ft
Frame Cross Bar Bolt	100 N.m	74 lb ft
Fuel Meter Body Bracket Bolt	10 N.m	89 lb in
Fuel Pipe Bracket Bolt	6 N.m	53 lb in
Fuel Pipe Retainer Nut	3 N.m	27 lb in
Fuel Supply Pipe Nut- Fuel Tank Side	30 N.m	22 lb ft
Generator and Drive Belt Tensioner Bracket Bolt to Engine	41 N.m	30 lb ft
Generator and Drive Belt Tensioner Bracket Stud to Engine	20 N.m	15 lb ft
Generator and Drive Belt Tensioner Bracket Stud Nut	41 N.m	30 lb ft
Ground Wire Bolt to Rear of Left Side Cylinder Head	16 N.m	12 lb ft
Ground Wire Nut to Rear of Right Side Cylinder Head	16 N.m	12 lb ft
Heater Hose Bracket Bolt to Generator and Drive Belt Tensioner Bracket	25 N.m	18 lb ft
Hood Hinge Bolt	25 N.m	18 lb ft
Ignition Coil Stud	12 N.m	106 lb in
Junction Block Bracket Bolt	25 N.m	18 lb ft
Knock Sensor	25 N.m	18 lb ft
Lift Bracket Bolts	15 N.m	11 lb ft
Lower Intake Manifold Bolt		
First Pass in Sequence	3 N.m	27 lb in
Second Pass in Sequence	12 N.m	106 lb in
Final Pass in Sequence	15 N.m	11 lb ft
Oil Cooler Pipe Bracket to Oil Pan Bolt	12 N.m	106 lb in
Oil Filter	30 N.m	22 lb ft
Oil Filter Adapter	55 N.m	41 lb ft
Oil Filter Adapter Bolt	21 N.m	15 lb ft
Oil Filter Adapter Stud	15 N.m	11 lb ft
Oil Filter Adapter Nut	20 N.m	15 lb ft
Oil Filter Adapter Threaded Plug	24 N.m	17 lb ft
Oil Filter Fitting	55 N.m	41 lb ft
Oil Level Indicator Tube Bolt	12 N.m	106 lb in
Oil Pan Baffle Bolt	12 N.m	106 lb in
Oil Pan Bolt and Nut	25 N.m	18 lb ft
Oil Fill Tube Bolt	21 N.m	15 lb ft
Oil Pan Drain Plug	25 N.m	18 lb ft
Oil Pan Skid Plate Bolt	20 N.m	15 lb ft
Oil Pump Bolt to Rear Crankshaft Bearing Cap	90 N.m	66 lb ft
Oil Pump Cover Bolt	12 N.m	106 lb in

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

Positive Battery Cable Clip Bolt	9 N.m	80 lb in
Positive Cable Generator Nut	18 N.m	13 lb ft
Power Steering Pump Bracket Bolt to Engine	41 N.m	30 lb ft
Power Steering Pump Bracket Stud to Engine	20 N.m	15 lb ft
Power Steering Pump Bracket Stud Nut	41 N.m	30 lb ft
Power Steering Pump Bolt	50 N.m	37 lb ft
Power Steering Pump Nut to Engine- Rear Bracket to Engine	41 N.m	30 lb ft
Power Steering Pump Rear Bracket Nut	41 N.m	30 lb ft
Secondary Air Injection (AIR) Check Valve Pipe Bracket Bolt to Exhaust Manifold	10 N.m	89 lb in
Secondary Air Injection (AIR) Check Valve Pipe Stud Nut	25 N.m	18 lb ft
Spark Plug	15 N.m	11 lb ft
Spark Plug Wire Support Bolt	12 N.m	106 lb in
Starter Motor Wiring Harness/Transmission Cooler Pipe Bracket to Oil Pan Bolt	9 N.m	80 lb in
Throttle Body Stud	10 N.m	89 lb in
Timing Chain Tensioner Bolt	12 N.m	106 lb in
Torque Converter Bolt	63 N.m	47 lb ft
Transmission Bolt	50 N.m	37 lb ft
Transmission Cover Bolt	12 N.m	106 lb in
Transmission Oil Cooler Line Bracket	9 N.m	80 lb in
Transmission to Oil Pan Bolt	47 N.m	35 lb ft
Upper Intake Manifold Stud		
• First Pass	5 N.m	44 lb in
Final Pass	9 N.m	80 lb in
Valve Lifter Pushrod Guide Bolt	16 N.m	12 lb ft
Valve Rocker Arm Bolt	30 N.m	22 lb ft
Valve Rocker Arm Cover Bolt	12 N.m	106 lb in
Water Outlet Stud	25 N.m	18 lb ft
Water Pump Bolt	45 N.m	33 lb ft

## ENGINE MECHANICAL SPECIFICATIONS

**Engine Mechanical Specifications** 

	Speci	ification		
Application	Metric	Metric English		
General	·	•		
• Engine Type	90 de	90 degree V6		
• Displacement	4.3 L	262 CID		
• RPO	I	LU3		

miércoles, 29 de septiembre de 2021 03:25:18 p. m.	Page 4	© 2011 Mitchell Repair Information Company, LLC.
----------------------------------------------------	--------	--------------------------------------------------

• VIN	X	
• Bore	101.60 mm 4.012 in	
• Stroke	88.39 mm	3.480 in
Compression Ratio	9.2	2:1
Firing Order	1-6-5-	4-3-2
Spark Plug Gap	1.35-1.50 mm	0.053-0.059 in
Balance Shaft		
Bearing Journal Diameter - Rear	38.085-38.100 mm	1.4994-1.500 in
Bushing Bore Diameter - Rear	0.050-0.088 mm	0.0020-0.0035 in
Block		
Crankshaft Main Bearing Bore Out-of-Round	0.050 mm	0.002 in
Cylinder Bore Diameter	101.618-101.643 mm	4.0007-4.0017 in
Cylinder Bore Out-of-Round - Production	0.017 mm	0.0007 in
Cylinder Bore Out-of-Round - Service	0.05 mm	0.002 in
Cylinder Bore Taper - Production Relief Side	0.025 mm	0.0010 in
Cylinder Bore Taper - Production Thrust Side	0.012 mm	0.0005 in
Cylinder Bore Taper - Service	0.025 mm	0.0010 in
Cylinder Head Deck Surface Flatness	0.050-0.152 mm	0.002-0.006 in
Camshaft		
Camshaft End Play	0.0254-0.2286 mm	0.0010-0.0090 in
Camshaft Journal Diameter	47.440-47.490 mm	1.8677-1.8696 in
Camshaft Journal Out-of-Round	0.008 mm	0.0003 in
Camshaft Lobe Lift - Exhaust	7.0953 mm	0.2793 in
Camshaft Lobe Lift - Intake	6.8678 mm	0.2704 in
Camshaft Runout	0.100 mm	0.0039 in
Connecting Rod		
Connecting Rod Bearing Clearance - Production	0.038-0.078 mm	0.0015-0.0031 in
Connecting Rod Bearing Clearance - Service	0.025-0.063 mm	0.0010-0.0025 in
Connecting Rod Side Clearance	0.15-0.44 mm	
Crankshaft		
Connecting Rod Journal Diameter	57.116-57.148 mm	2.2487-2.2497 in
• Connecting Rod Journal Out-of-Round - Production	0.008 mm	0.0003 in
Connecting Rod Journal Out-of-Round - Service	0.025 mm	0.0010 in
Connecting Rod Journal Taper - Production	0.010 mm	0.0004 in

Connecting Rod Journal Taper - Service	0.025 mm	0.0010 in
Crankshaft End Play	0.050-0.20 mm	0.002-0.008 in
• Crankshaft Main Bearing Clearance #1 - Production	0.02-0.05 mm	0.0008-0.0020 in
• Crankshaft Main Bearing Clearance #2, #3 and #4 - Production	0.028-0.058 mm	0.0011-0.0023 in
Crankshaft Main Bearing Clearance #1 - Service	0.0254-0.05 mm	0.0010-0.0020 in
• Crankshaft Main Bearing Clearance #2, #3 and #4 - Service	0.025-0.063 mm	0.0010-0.0025 in
Crankshaft Main Journal Diameter #1	62.199-62.217 mm	2.4488-2.4495 in
<ul> <li>Crankshaft Main Journal Diameter #2 and #3</li> </ul>	62.191-62.215 mm	2.4485-2.4494 in
<ul> <li>Crankshaft Main Journal Diameter #4</li> </ul>	62.179-62.203 mm	2.4480-2.4489 in
Crankshaft Main Journal Out-of-Round - Production	0.005 mm	0.0002 in
Crankshaft Main Journal Out-of-Round - Service	0.025 mm	0.0010 in
Crankshaft Main Journal Taper	0.007 mm	0.0003 in
Exhaust Manifold		
<ul> <li>Surface Flatness - Flange to Flange</li> </ul>	0.25 mm	0.010 in
Surface Flatness - Individual Flange	0.05 mm	0.002 in
Intake Manifold		0.004 in
Surface Flatness	0.10 mm	
Lubrication System	I	I
Oil Capacity with Filter	4.3 L	4.5 qt
Oil Capacity without Filter	3.8 L	4 qt
• Oil Pressure - at 1, 000 RPM	42 kPa	6 psi
• Oil Pressure - at 2, 000 RPM	125 kPa	18 psi
• Oil Pressure - at 4, 000 RPM	166 kPa	24 psi
Piston Rings		
<ul> <li>Piston Ring End Gap - First Compression Ring - Production</li> </ul>	0.25-0.40 mm	0.010-0.016 in
<ul> <li>Piston Ring End Gap - Second Compression Ring - Production</li> </ul>	0.38-0.58 mm	0.015-0.023 in
Piston Ring End Gap - Oil Control Ring - Production	0.25-0.76 mm	0.010-0.029 in
Piston Ring End Gap - First Compression Ring - Service	0.25-0.50 mm	0.010-0.020 in
Piston Ring End Gap - Second Compression Ring - Service	0.38-0.80 mm	0.015-0.031 in
Piston Ring End Gap - Oil Control Ring - Service	0.005-0.090 mm	0.0002-0.0035 in
1	ı	1

Piston Ring to Groove Clearance - First Compression Ring - Production	0.030-0.070 mm	0.0012-0.0027 in
Piston Ring to Groove Clearance - Second Compression Ring - Production	0.076-0.280 mm	0.0030-0.0110 in
Piston Ring to Groove Clearance - Oil Control Ring - Production	0.046-0.196 mm	0.0018-0.0077 in
Piston Ring to Groove Clearance - First Compression Ring - Service	0.030-0.085 mm	0.0012-0.0033 in
Piston Ring to Groove Clearance - Second Compression Ring - Service	0.030-0.085 mm	0.0012-0.0033 in
Piston Ring to Groove Clearance - Oil Control Ring - Service	0.076-0.200 mm	0.0030-0.0079 in
Pistons and Pins		
Piston - Piston to Bore Clearance - Production	0.018-0.061 mm	0.0007-0.0024 in
Piston - Piston to Bore Clearance - Service	0.075 mm	0.0029 in
Pin - Piston Pin Clearance to Connecting Rod Bore - Press Fit	0.012-0.048 mm	0.0005-0.0019 in
Pin - Piston Pin Clearance to Piston Pin Bore - Production	0.013-0.023 mm	0.0005-0.0009 in
Pin - Piston Pin Clearance to Piston Pin Bore - Service	0.025 mm	0.0010 in
Pin - Piston Pin Diameter	23.545-23.548 mm	0.9270-0.9271 in
Valve System		
<ul> <li>Valves - Valve Face Angle</li> </ul>	45 de	egrees
<ul> <li>Valves - Valve Seat Angle</li> </ul>	46 de	egrees
Valves - Valve Seat Runout	0.05 mm	0.002 in
Valves - Valve Seat Width - Intake	1.016-1.651 mm	0.040-0.065 in
Valves - Valve Seat Width - Exhaust	1.651-2.489 mm	0.065-0.098 in
Valves - Valve Stem Oil Seal Installed Height	1-2 mm	0.03937-0.07874 in
Valves - Valve Stem-to-Guide Clearance - Intake -     Production	0.025-0.069 mm	0.0010-0.0027 in
Valves - Valve Stem-to-Guide Clearance - Intake - Service	0.025-0.094 mm	0.0010-0.0037 in
Valves - Valve Stem-to-Guide Clearance - Exhaust - Production	0.025-0.069 mm	0.0010-0.0027 in
Valves - Valve Stem-to-Guide Clearance - Exhaust - Service	0.025-0.094 mm	0.0010-0.0037 in
	1.5	5:1

miércoles, 29 de septiembre de 2021 03:25:18 p. m.	Page 7	© 2011 Mitchell Repair Information Company, LLC.
----------------------------------------------------	--------	--------------------------------------------------

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

<ul> <li>Rocker Arms - Valve Rocker Arm Ratio</li> </ul>		
<ul> <li>Valve Springs - Valve Spring Free Length</li> </ul>	51.3 mm	2.02 in
<ul> <li>Valve Springs - Valve Spring Installed Height - Intake</li> </ul>	42.92-43.43 mm	1.670-1.700 in
<ul> <li>Valve Springs - Valve Spring Installed Height - Exhaust</li> </ul>	42.92-43.43 mm	1.670-1.700 in
Valve Springs - Valve Spring Load - Closed	338-374 N @ 43.2 mm	76-84 lb @ 1.70 in
Valve Springs - Valve Spring Load - Open	832-903 N @ 32.3 mm	187-203 lb @ 1.27 in

## ADHESIVES, FLUIDS, LUBRICANTS AND SEALERS

## Adhesives, Fluids, Lubricants and Sealers

			GM Part Number		
Application	<b>Type of Material</b>	<b>United States</b>	Canada		
Balancer Shaft Driven Gear Bolt	Threadlocker	12345382	10953489		
Camshaft Retainer Bolt	Threadlocker	12345382	10953489		
Crankshaft Balancer Keyway	Sealant	12378521	89022195		
Cylinder Head Bolt	Sealant	12346004	10953480		
Engine Block to the Crankshaft Rear Oil Seal Housing Junction at the Oil Pan Sealing Surfaces	Sealant	12346141	89022195		
Engine Block to the Engine Front Cover Junction at the Oil Pan Sealing Surfaces	Sealant	12346141	89022195		
Engine Block at the Lower Intake Manifold Sealing Surfaces	Sealant	12346141	89022195		
Engine Block Coolant Drain Hole Plug	Sealant	12346004	10953480		
Engine Block Core Hole Plug	Threadlocker	12345382	10953489		
Engine Block Oil Gallery Plug	Sealant	12346004	10953480		
Engine Coolant Temperature (ECT) Gauge Sensor	Sealant	12346004	10953480		
Engine Coolant Temperature (ECT) Sensor	Sealant	12346004	10953480		
Engine Oil	5W-30	19293000	19386321		
Engine Oil Pressure Sensor	Sealant	12346004	10953480		
Engine Oil Pressure Sensor Fitting	Sealant	12346004	10953480		
Engine Oil Supplement	Lubricant	1052367	992869		
Evaporative Emission (EVAP) Canister Purge Solenoid Valve Stud	Threadlocker	12345382	10953489		
Exhaust Manifold Bolt/Stud	Threadlocker	89021297	10953488		
Expansion Cup Plug- Balance Shaft Rear Bearing Hole	Sealant	12346004	10953480		

miércoles, 29 de septiembre de 2021 03:25:18 p. m.	Page 8	© 2011 Mitchell Repair Information Company, LLC.
----------------------------------------------------	--------	--------------------------------------------------

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

Expansion Cup Plug- Camshaft Rear Bearing Hole	Sealant	12346004	10953480
Fuel Meter Body Bracket Bolt	Threadlocker	12345382	10953489
Fuel Pipe Bolt	Threadlocker	12345382	10953489
Lower Intake Manifold Bolt	Threadlocker	12345382	10953489
Oil Level Indicator Tube	Sealant	12346004	10953480
Oil Pump Screen Tube	Sealant	12346004	10953480
Spark Plug Wires	Lubricant	19260901	19260902
Throttle Body Stud	Threadlocker	12345382	10953489
Upper Intake Manifold Stud	Threadlocker	12345382	10953489
Valve Train Component Prelube	Lubricant	88862586	88862827
Water Pump Bolt	Sealant	12346004	10953480

## **COMPONENT LOCATOR**

**DISASSEMBLED VIEWS** 

**Upper and Lower Intake Manifold View** 

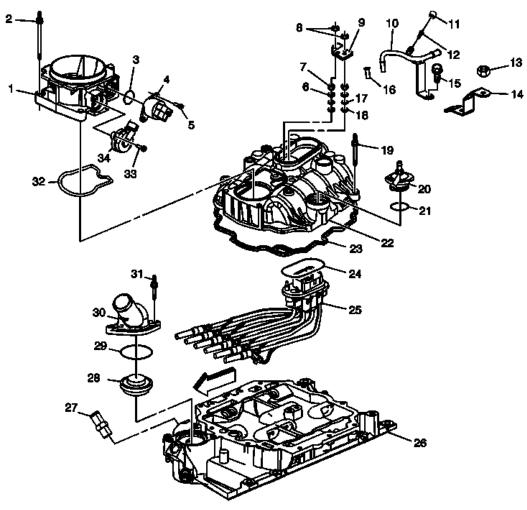


Fig. 1: Upper and Lower Intake Manifold View Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Throttle Body
2	Throttle Body Stud
3	Idle Air Control Valve Seal
4	Idle Air Control Valve
5	Idle Air Control Valve Bolt
6	O-ring
7	Spacer
8	Fuel Injection Fuel Feed and Return Pipe Retainer Nut
9	Fuel Injection Fuel Feed and Return Pipe Retainer
10	Fuel Injection Fuel Feed and Return Pipe
11	Fuel Service Port Cap
12	Fuel Schrader Valve
13	Engine Wiring Harness Bracket Nut
<u> </u>	l I

14	Engine Wiring Harness Bracket
15	Fuel Injection Fuel Feed and Return Pipe Bolt
16	Fuel Injector Fuel Meter Fuel Passage Plug
17	Spacer
18	O-ring
19	Upper Intake Manifold Stud
20	Positive Crankcase Ventilation Valve Cover
21	Positive Crankcase Ventilation Valve Cover Seal
22	Upper Intake Manifold
23	Upper Intake Manifold Gasket
24	Fuel Injector Fuel Meter Body Seal
25	Fuel Injector Fuel Meter Body
26	Lower Intake Manifold
27	Heater Hose Fitting
28	Engine Coolant Thermostat
29	Engine Coolant Thermostat Seal
30	Water Outlet
31	Water Outlet Stud
32	Throttle Body Seal
33	Throttle Position Sensor Bolt
34	Throttle Position Sensor

**Upper Engine View 1** 

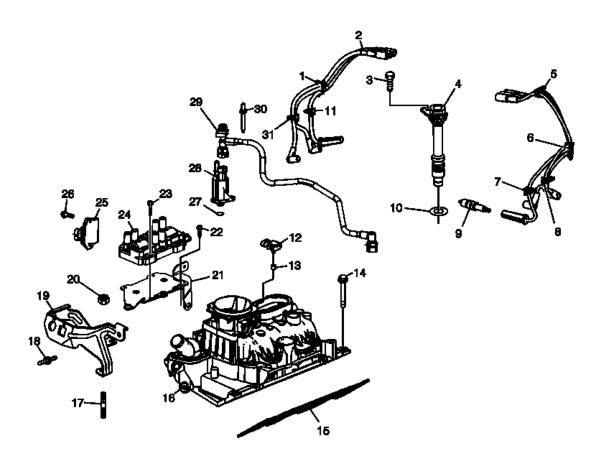


Fig. 2: Upper Engine View 1
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Spark Plug Wire Retainer
2	Spark Plug Wire Harness
3	Oil Pump Drive Shaft Clamp Bolt
4	Oil Pump Drive Shaft
5	Spark Plug Wire Harness
6	Spark Plug Wire Retainer
7	Spark Plug Wire Retainer
8	Spark Plug Wire Retainer
9	Spark Plug
10	Oil Pump Drive Shaft Gasket
11	Spark Plug Wire Retainer
12	Manifold Absolute Pressure Sensor
13	Manifold Absolute Pressure Sensor Seal

## 2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

14	Lower Intake Manifold Bolt
15	Lower Intake Manifold Gasket
16	Intake Manifold Assembly
17	Accelerator Control Cable Bracket Stud
18	Accelerator Control Cable Bracket Bolt
19	Accelerator Control Cable Bracket
20	Accelerator Control Cable Bracket Nut
21	Ignition Coil Bracket
22	Ignition Coil Bracket Bolt
23	Ignition Coil Assembly to Bracket Bolt
24	Ignition Coil Assembly
25	Ignition Coil Module
26	Ignition Coil Module Bolt
27	EVAP Purge Valve Seal
28	EVAP Purge Valve
29	EVAP Purge Valve Hose
30	EVAP Purge Valve Bolt
31	Spark Plug Wire Retainer

**Upper Engine View 2** 

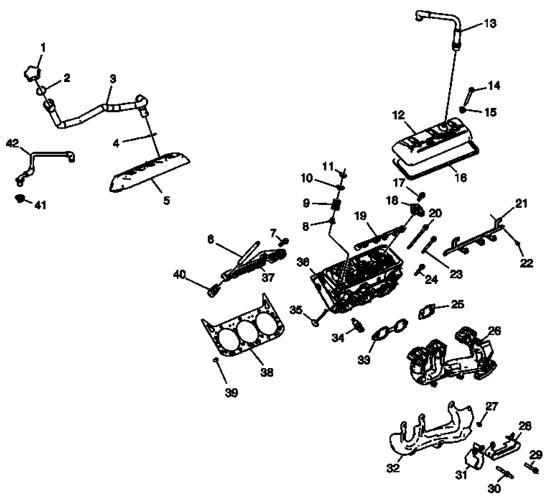


Fig. 3: Upper Engine View 2
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Oil Filler Cap
2	Oil Filler Cap Seal
3	Oil Filler Tube
4	Oil Filler Tube Seal
5	Valve Rocker Arm Cover
6	Valve Push Rod
7	Valve Lifter Guide Bolt
8	Valve Stem Oil Seal
9	Valve Spring
10	Valve Spring Cap
11	Valve Stem Key
12	Valve Rocker Arm Cover
13	Positive Crankcase Ventilation Tube

## 2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

14	Valve Rocker Arm Cover Bolt
15	Valve Rocker Arm Cover Bolt Grommet
16	Valve Rocker Arm Cover Gasket
17	Valve Rocker Arm Bolt
18	Valve Rocker Arm
19	Valve Rocker Arm Pivot Support
20	Cylinder Head Bolt
21	Spark Plug Wire Support
22	Spark Plug Wire Support Bolt
23	Cylinder Head Bolt
24	Cylinder Head Bolt
25	Exhaust Manifold Gasket
26	Exhaust Manifold
27	Exhaust Manifold Heat Shield Bolt
28	Spark Plug Wire Shield
29	Exhaust Manifold Bolt
30	Exhaust Manifold Stud
31	Spark Plug Wire Shield
32	Exhaust Manifold Heat Shield
33	Exhaust Manifold Gasket
34	Engine Coolant Temperature Sensor
35	Valve
36	Cylinder Head
37	Valve Lifter Guide
38	Cylinder Head Gasket
39	Cylinder Head Location Pin
40	Valve Lifter
41	Positive Crankcase Ventilation Tube Grommet
42	Positive Crankcase Ventilation Tube

**Lower Engine View 1** 

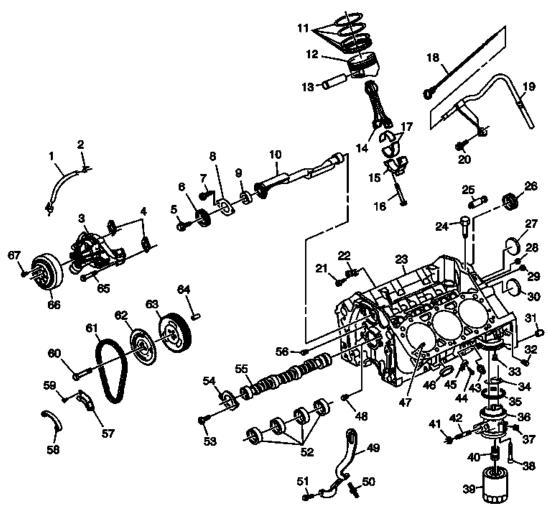


Fig. 4: Lower Engine View 1
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Thermostat Bypass Hose
2	Thermostat Bypass Pipe Clamp
3	Water Pump
4	Water Pump Gasket
5	Balance Shaft Gear Bolt
6	Balancer Shaft Driven Gear
7	Balance Shaft Retainer Bolt
8	Balancer Shaft Retainer
9	Balancer Shaft Front Bearing
10	Balance Shaft
11	Piston Ring Set
12	Piston
13	Piston Pin

14	Connecting Rod
15	Connecting Rod Bearing Cap
16	Connecting Rod Bolt
17	Connecting Rod Bearing
18	Oil Level Indicator
19	Oil Level Indicator Tube
20	Oil Level Indicator Tube Bolt
21	Knock Sensor Bolt
22	Knock Sensor
23	Engine Block
24	Engine Oil Pressure Indicator Switch Fitting
25	Engine Oil Pressure Indicator Switch
26	Balancer Shaft Rear Bearing
27	Engine Block Coolant Hole Plug
28	Engine Block Oil Gallery Plug
29	Engine Block Oil Gallery Plug
30	Engine Block Oil Gallery Plug
31	Transmission Locating Pin
32	Engine Block Oil Gallery Plug
33	Oil Filter Bypass Valve
34	Engine Oil Filter Adapter Gasket
35	Engine Oil Filter Adapter Seal
36	Engine Oil Filter Adapter
37	Engine Oil Filter Adapter Plug
38	Engine Oil Filter Adapter Bolt
39	Oil Filter
40	Oil Pressure Relief Valve Spring Seat Pin
41	Engine Oil Filter Adapter Nut
42	Engine Oil Filter Adapter Stud
43	Block Heater
44	Knock Sensor Bolt
45	Knock Sensor
46	Engine Block Coolant Hole Plug
47	Cylinder Head Location Pin
48	Engine Block Oil Gallery Plug
49	Engine Lift Front Bracket
50	Engine Lift Front Bracket Stud
51	Engine Lift Front Bracket Bolt
52	Camshaft Bearing
53	Camshaft Thrust Bearing Bolt
54	Camshaft Thrust Plate

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

	Camshaft
56	Engine Block Oil Gallery Plug
57	Timing Chain Tensioner Bracket
58	Timing Chain Tensioner Shoe
59	Timing Chain Tensioner Bolt
60	Camshaft Sprocket Bolt
61	Timing Chain
62	Camshaft Sprocket
63	Balancer Shaft Drive Gear
64	Camshaft Sprocket Location Pin
65	Water Pump Bolt
66	Water Pump Pulley
67	Water Pump Pulley Bolt

#### **Lower Engine View 2**

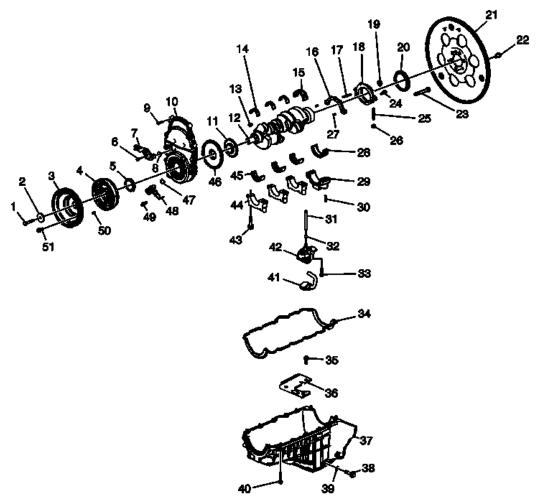


Fig. 5: Lower Engine View 2

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

## **Courtesy of GENERAL MOTORS COMPANY**

Callout	Component Name
1	Crankshaft Balancer Bolt
2	Crankshaft Balancer Washer
3	Drive Belt Pulley
4	Crankshaft Balancer
5	Crankshaft Front Oil Seal
6	Camshaft Sensor Bolt
7	Camshaft Position Sensor Assembly
8	Camshaft Sensor Seal
9	Engine Front Cover Bolt
10	Engine Front Cover
11	Crankshaft Sprocket
12	Crankshaft
13	Crankshaft Balancer Key
14	Crankshaft Lower Bearing
15	Crankshaft Upper Bearing
16	Crankshaft Rear Oil Seal Housing Gasket
17	Crankshaft Rear Oil Seal Retainer Stud
18	Crankshaft Rear Oil Seal Housing
19	Crankshaft Rear Oil Seal Housing Bolt
20	Crankshaft Rear Oil Seal
21	Flywheel
22	Flywheel Bolt
23	Crankshaft Rear Oil Seal Housing Bolt
24	Crankshaft Rear Oil Seal Housing Bolt
25	Crankshaft Rear Oil Seal Housing Stud
26	Oil Pan Nut
27	Crankshaft Rear Oil Seal Housing Locating Pin
28	Crankshaft Upper Bearing
29	Crankshaft Bearing Cap
30	Oil Pump Location Pin
31	Oil Pump Drive Shaft
32	Oil Pump Drive Clamp Bolt
33	Oil Pump Bolt
34	Oil Pan Gasket
35	Oil Pan Baffle Bolt
36	Oil Pan Baffle
37	Oil Pan
38	Oil Pan Drain Plug

# 2014 GMC Savana 1500 2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

39	Oil Pan Drain Plug Seal
40	Oil Pan Bolt
41	Oil Pump Screen
42	Oil Pump
43	Crankshaft Bearing Cap Bolt
44	Crankshaft Bearing Cap
45	Crankshaft Lower Bearing
46	Crankshaft Position Sensor Reluctor Ring
47	Crankshaft Position Sensor Seal
48	Crankshaft Position Sensor
49	Crankshaft Position Sensor Bolt
50	Crankshaft Balancer Weight
51	Drive Belt Pulley Bolt

#### **ENGINE IDENTIFICATION**


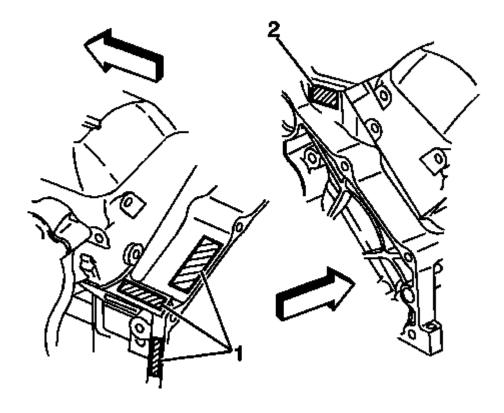


Fig. 6: Engine VIN Locations
Courtesy of GENERAL MOTORS COMPANY

• The Vehicle Identification Number (VIN) Derivative is located on the left side rear of the engine block

#### 2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- (1) or on the right side rear (2) and typically is a 9 digit number stamped or laser etched onto the engine at the vehicle assembly plant.
  - o The first digit identifies the division.
  - o The second digit identifies the model year.
  - o The third digit identifies the assembly plant.
  - o The fourth through ninth digits are the last six digits of the VIN.

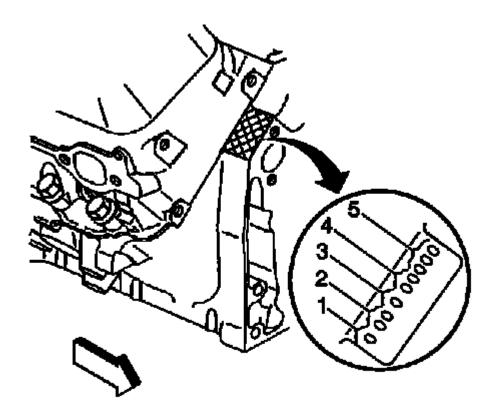

## Fig. 7: Engine VIN Numerical Positions Courtesy of GENERAL MOTORS COMPANY

- Engines built at the Romulus engine plant have the engine identification number located at the right front top of the engine block.
  - The first digit (1) is the source code.
  - The second and third digits (2) are the month of build.
  - o The fourth digit (3) is the hour of the build.
  - o The fifth and sixth digits (4) are the date of build.
  - o The seventh, eighth and ninth digits (5) are the broadcast code.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

#### DIAGNOSTIC INFORMATION AND PROCEDURES

#### **SYMPTOMS - ENGINE MECHANICAL**

#### **Strategy Based Diagnostics**

- 1. Perform the **Diagnostic System Check Vehicle** before using the symptom tables, if applicable.
- 2. Review the system operations in order to familiarize yourself with the system functions. Refer to <a href="Disassembled Views">Disassembled Views</a>, <a href="Engine Component Description">Engine Component Description</a>, <a href="Lubrication Description">Lubrication Description</a> and to <a href="New Product Information">New Product Information</a>.

All diagnosis on a vehicle should follow a logical process. Strategy based diagnostics is a uniform approach for repairing all systems. The diagnostic flow may always be used in order to resolve a system problem. The diagnostic flow is the place to start when repairs are necessary. For a detailed explanation, refer to **Strategy Based Diagnosis**.

#### Visual/Physical Inspection

- Inspect for aftermarket devices which could affect the operation of the Engine. Refer to **Checking Aftermarket Accessories**.
- Inspect the easily accessible or visible system components for obvious damage or conditions which could cause the symptom.
- Check for the correct oil level, proper oil viscosity and correct filter application.
- Verify the exact operating conditions under which the concern exists. Note factors such as engine RPM, ambient temperature, engine temperature, amount of engine warm-up time and other specifics.
- Compare the engine sounds, if applicable, to a known good engine and make sure you are not trying to correct a normal condition.

#### Intermittent

Test the vehicle under the same conditions that the customer reported in order to verify the system is operating properly.

#### **Symptom List**

Refer to a symptom diagnostic procedure from the following list in order to diagnose the symptom:

- Base Engine Misfire without Internal Engine Noises
- Base Engine Misfire with Abnormal Internal Lower Engine Noises
- Base Engine Misfire with Abnormal Valve Train Noise
- Base Engine Misfire with Coolant Consumption
- Base Engine Misfire with Excessive Oil Consumption
- Engine Noise on Start-Up, but Only Lasting a Few Seconds
- Upper Engine Noise, Regardless of Engine Speed
- Lower Engine Noise, Regardless of Engine Speed

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- Engine Noise Under Load
- Engine Will Not Crank Crankshaft Will Not Rotate
- Engine Compression Test
- Oil Consumption Diagnosis
- Oil Pressure Diagnosis and Testing
- Oil Leak Diagnosis
- Drive Belt Chirping, Squeal and Whine Diagnosis
- Drive Belt Rumbling and Vibration Diagnosis
- Drive Belt Falls Off and Excessive Wear Diagnosis
- Drive Belt Tensioner Diagnosis

#### BASE ENGINE MISFIRE WITHOUT INTERNAL ENGINE NOISES

**Base Engine Misfire without Internal Engine Noises** 

Cause	Correction
High oil pressure	<ul> <li>Verify oil pressure. Refer to <u>Oil Pressure</u> <u>Diagnosis and Testing</u>.</li> <li>Repair or replace damaged components as required.</li> </ul>
Worn, damaged or improperly installed accessory drive belt - severe cracking, bumps or missing segments  A misfire DTC may be present without an actual misfire condition.  Worn, damaged or improperly installed accessory drive system components	<ul> <li>Inspect the accessory drive system components.</li> <li>Repair or replace damaged components as required. Refer to <u>Drive Belt Replacement</u>.</li> <li>Inspect the accessory drive system components.</li> </ul>
A misfire DTC may be present without an actual misfire condition.	Repair or replace damaged components as required.
Damaged, loose or improperly installed crankshaft balancer A misfire DTC may be present without an actual misfire condition.	<ul> <li>Inspect the crankshaft balancer.</li> <li>Repair or replace damaged components as required. Refer to <u>Crankshaft Balancer</u> <u>Replacement</u>.</li> </ul>
Worn, damaged or improperly installed crankshaft reluctor wheel A worn or damaged crankshaft reluctor wheel can result in different symptoms depending on the severity and location of the wear or damage.  • Systems with electronic communications, DIS or coil per cylinder and severe reluctor ring damage may exhibit periodic loss of crankshaft position, stop delivering a signal	<ul> <li>Inspect the crankshaft position sensor.</li> <li>Inspect the crankshaft reluctor wheel.</li> <li>Inspect the crankshaft.</li> <li>Repair or replace damaged components as required.</li> </ul>

<ul> <li>and then re-sync the crankshaft position.</li> <li>Systems with electronic communication, DIS or coil per cylinder and slight reluctor ring damage may exhibit no loss of crankshaft position and no misfire may occur. However, a DTC P0300 may be set.</li> <li>Systems with mechanical communications, high voltage switch and severe reluctor ring damage may cause additional pulses and effect fuel and spark delivery. A DTC P0300 or P0336 may be set.</li> <li>Damaged, loose or improperly installed engine</li> </ul>	
flywheel A misfire DTC may be present without an actual misfire condition.	<ul> <li>Inspect the flywheel.</li> <li>Repair or replace damaged components as required. Refer to Engine Flywheel Replacement.</li> </ul>
Damaged, improperly installed or restricted exhaust system, collapsed or dented pipes, plugged mufflers or malfunctioning catalytic converters A DTC may be present without an actual fault condition.	<ul> <li>Inspect the exhaust system components.</li> <li>Repair or replace damaged components as required.</li> </ul>
Worn, damaged or improperly installed vacuum hoses	<ul> <li>Inspect the vacuum system components.</li> <li>Repair or replace damaged components as required.</li> </ul>
Damaged or improperly installed MAP sensor, sealing grommet nicked, torn or missing	<ul> <li>Inspect the MAP sensor.</li> <li>Repair or replace damaged components as required.</li> </ul>
Damaged or improperly installed throttle body	<ul> <li>Inspect the throttle body.</li> <li>Repair or replace damaged components as required.</li> </ul>
Damaged or improperly installed intake manifold	<ul> <li>Inspect the intake manifold.</li> <li>Repair or replace damaged components as required.</li> </ul>
Damaged or improperly installed cylinder head Oil consumption may or may not cause the engine to misfire.	<ul> <li>Inspect the spark plugs. Refer to Spark Plug Inspection use for the 4.3L engine.</li> <li>Verify engine compression. Refer to Engine Compression Test.</li> <li>Inspect the cylinder heads.</li> <li>Inspect the engine block.</li> <li>Repair or replace damaged components as required.</li> </ul>
Worn, damaged or loose valve rocker arm	Inspect the valve rocker arms.

	<ul> <li>Repair or replace damaged components as required.</li> </ul>
Worn, damaged or loose valve rotator	<ul> <li>Inspect the valve rotators.</li> <li>Repair or replace damaged components as required.</li> </ul>
Worn, damaged, loose or broken valve spring	<ul> <li>Inspect the valve springs.</li> <li>Repair or replace damaged components as required.</li> </ul>
Worn, damaged or stuck valve, carbon on the valve stem or valve seat	<ul> <li>Inspect the valves.</li> <li>Inspect the valve guides.</li> <li>Repair or replace damaged components as required.</li> </ul>
Worn or damaged valve guide	<ul> <li>Inspect the valve guides.</li> <li>Inspect the valves.</li> <li>Repair or replace damaged components as required.</li> </ul>
Worn, damaged, loose or bent valve push rod	<ul> <li>Inspect the valve push rods.</li> <li>Repair or replace damaged components as required.</li> </ul>
Worn, damaged or dirty valve lifter	<ul> <li>Inspect the valve lifters.</li> <li>Inspect the camshaft.</li> <li>Repair or replace damaged components as required.</li> </ul>
Worn or damaged camshaft lobe	<ul> <li>Inspect the camshaft.</li> <li>Inspect the valve lifters.</li> <li>Repair or replace damaged components as required.</li> </ul>
Worn, damaged or loose timing chain and sprockets	<ul> <li>Inspect the timing chain and sprockets.</li> <li>Repair or replace damaged components as required.</li> </ul>
Worn, damaged or improperly installed piston Pistons must be installed with the mark or dimple, on the top of the piston, facing the front of the engine; piston pins must be centered in the connecting rod pin bore. Oil consumption may or may not cause the engine to misfire.	<ul> <li>Inspect the spark plugs. Refer to <u>Spark Plug Inspection</u> use for the 4.3L engine.</li> <li>Verify engine compression. Refer to <u>Engine Compression Test</u>.</li> <li>Inspect the cylinder bores.</li> <li>Inspect the pistons.</li> <li>Inspect the piston pins.</li> <li>Inspect the connecting rods.</li> <li>Repair or replace damaged components as</li> </ul>

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

required.

### BASE ENGINE MISFIRE WITH ABNORMAL INTERNAL LOWER ENGINE NOISES

**Base Engine Misfire with Abnormal Internal Lower Engine Noises** 

Base Engine Mistire with Abnormal Internal Lo  Cause	Correction
Worn, damaged or improperly installed accessory drive belt - severe cracking, bumps or missing segments A misfire DTC may be present without an actual misfire condition.	<ul> <li>Inspect the accessory drive system components.</li> <li>Repair or replace damaged components as required. Refer to <u>Drive Belt Replacement</u>.</li> </ul>
Worn, damaged or improperly installed accessory drive system components A misfire DTC may be present without an actual misfire condition.	<ul> <li>Inspect the accessory drive system components.</li> <li>Repair or replace damaged components as required.</li> </ul>
Worn, damaged, improperly installed or loose crankshaft balancer A misfire code may be present without an actual misfire condition.	<ul> <li>Inspect the crankshaft balancer.</li> <li>Repair or replace damaged components as required. Refer to <u>Crankshaft Balancer</u> <u>Replacement</u>.</li> </ul>
Worn, damaged, improperly installed or loose engine flywheel A misfire code may be present without an actual misfire condition.	<ul> <li>Inspect the engine flywheel.</li> <li>Repair or replace damaged components as required. Refer to <u>Engine Flywheel</u> <u>Replacement</u>.</li> </ul>
Worn, damaged or improperly installed piston Pistons must be installed with the mark or dimple, on the top of the piston, facing the front of the engine; piston pins must be centered in the connecting rod pin bore.  Oil consumption may or may not cause the engine to misfire.	<ul> <li>Inspect the spark plugs. Refer to Spark Plug Inspection use for the 4.3L engine.</li> <li>Verify engine compression. Refer to Engine Compression Test.</li> <li>Inspect the cylinder bores.</li> <li>Inspect the pistons.</li> <li>Inspect the piston pins.</li> <li>Inspect the connecting rods.</li> <li>Repair or replace damaged components as required.</li> </ul>
Worn, damaged or improperly installed crankshaft thrust bearing A misfire code may be present without an actual misfire condition.	<ul> <li>Inspect the crankshaft.</li> <li>Inspect the crankshaft thrust bearing.</li> <li>Repair or replace damaged components as required.</li> </ul>

#### BASE ENGINE MISFIRE WITH ABNORMAL VALVE TRAIN NOISE

**Base Engine Misfire with Abnormal Valve Train Noise** 

Cause	Correction

miércoles, 29 de septiembre de 2021 03:25:19 p. m.	Page 26	© 2011 Mitchell Repair Information Company, LLC.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

Worn, damaged or loose rocker arm	Inspect the valve rocker arms.
	<ul> <li>Repair or replace damaged components as required.</li> </ul>
Worn, damaged, loose or bent valve push rod	<ul> <li>Inspect the valve push rods.</li> </ul>
	<ul> <li>Repair or replace damaged components as required.</li> </ul>
Worn, damaged or stuck valve, carbon on the	Inspect the valves.
valve stem or valve seat	Inspect the valve guides.
	<ul> <li>Repair or replace damaged components as required.</li> </ul>
Worn, damaged or dirty valve lifter	Inspect the valve lifters.
	Inspect the camshaft.
	<ul> <li>Repair or replace damaged components as required.</li> </ul>
Worn or damaged camshaft lobe	Inspect the camshaft.
	Inspect the valve lifters.
	<ul> <li>Repair or replace damaged components as required.</li> </ul>
Worn, damaged or loose timing chain and sprockets	<ul> <li>Inspect the timing chain and sprockets.</li> <li>Repair or replace damaged components as required.</li> </ul>

#### BASE ENGINE MISFIRE WITH COOLANT CONSUMPTION

**Base Engine Misfire with Coolant Consumption** 

base Engine with Coolant Consumption			
Cause	Correction		
Damaged or improperly installed cylinder head Coolant consumption may or may not cause the engine to misfire.	• Inspect the spark plugs. Refer to <b>Spark Plug Inspection</b> use for the 4.3L engine.		
	<ul> <li>Verify engine compression. Refer to <u>Engine</u> <u>Compression Test</u>.</li> </ul>		
	<ul> <li>Inspect the cylinder heads.</li> </ul>		
	Inspect the engine block.		
	<ul> <li>Repair or replace damaged components as required.</li> </ul>		

## BASE ENGINE MISFIRE WITH EXCESSIVE OIL CONSUMPTION

**Base Engine Misfire with Excessive Oil Consumption** 

Cause	Correction
Worn or damaged valve	• Inspect the valves.

miércoles, 29 de septiembre de 2021 03:25:19 p. m.	Page 27	© 2011 Mitchell Repair Information Company, LLC.
----------------------------------------------------	---------	--------------------------------------------------

2014	<b>GMC</b>	Savana	1500
<b>4</b> 01 <b>T</b>		Javana	1300

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

	<ul> <li>Inspect the valve guides.</li> <li>Repair or replace damaged components as required.</li> </ul>
Worn, damaged or improperly installed piston rings Piston rings must be installed with the mark or dimple, on the top of the piston ring, facing up.	<ul> <li>Inspect the spark plugs. Refer to Spark Plug Inspection use for the 4.3L engine.</li> <li>Verify engine compression. Refer to Engine Compression Test.</li> <li>Inspect the cylinder bores.</li> <li>Inspect the pistons.</li> <li>Inspect the piston pins.</li> <li>Inspect the connecting rods.</li> <li>Repair or replace damaged components as required.</li> </ul>

## ENGINE NOISE ON START-UP, BUT ONLY LASTING A FEW SECONDS

Engine Noise on Start-Up, but Only Lasting a Few Seconds

Cause	Correction		
Incorrect engine oil, viscosity	Install the correct engine oil and oil filter. Refer to <b>Engine Oil and Oil Filter Replacement</b> .		
Incorrect oil filter, without anti-drainback feature	Install the correct engine oil and oil filter. Refer to <b>Engine Oil and Oil Filter Replacement</b> .		
Worn, damaged or improperly installed oil filter by-pass valve	<ol> <li>Inspect the oil filter by-pass valve.</li> <li>Repair or replace damaged components as required.</li> </ol>		
High valve lifter leak down rate	<ol> <li>Inspect the valve lifters.</li> <li>Repair or replace damaged components as required.</li> </ol>		
Worn, damaged or improperly installed crankshaft thrust bearing	<ol> <li>Inspect the crankshaft.</li> <li>Inspect the crankshaft thrust bearing.</li> <li>Repair or replace damaged components as required.</li> </ol>		

## UPPER ENGINE NOISE, REGARDLESS OF ENGINE SPEED

Upper Engine Noise, Regardless of Engine Speed

Cause	Correction
Low oil pressure	<ul> <li>Verify oil pressure. Refer to <u>Oil Pressure</u> <u>Diagnosis and Testing</u>.</li> <li>Repair or replace damaged components as required.</li> </ul>

miércoles, 29 de septiembre de 2021 03:25:19 p. m.	Page 28	© 2011 Mitchell Repair Information Company, LLC.
----------------------------------------------------	---------	--------------------------------------------------

Improper lubrication of the valve train components	<ul> <li>Verify oil pressure. Refer to Oil Pressure Diagnosis and Testing.</li> <li>Inspect the valve rocker arms.</li> <li>Inspect the valve push rods.</li> <li>Inspect the valve lifters.</li> <li>Inspect the oil filter bypass valve.</li> <li>Inspect the oil pump and pump screen.</li> <li>Inspect the engine block oil galleries.</li> <li>Repair or replace damaged components as required.</li> </ul>
Worn, damaged or improperly installed valve rocker arm	<ul> <li>Inspect the valve rocker arms.</li> <li>Repair or replace damaged components as required.</li> </ul>
Worn or damaged valve rotator	<ul> <li>Inspect the valve rotators.</li> <li>Repair or replace damaged components as required.</li> </ul>
Broken valve spring	<ul> <li>Inspect the valve springs.</li> <li>Repair or replace damaged components as required.</li> </ul>
Worn, damaged or stuck valves, carbon on the valve stem or valve seat	<ul> <li>Inspect the valves.</li> <li>Inspect the valve guides.</li> <li>Repair or replace damaged components as required.</li> </ul>
Worn or damaged valve guide	<ul> <li>Inspect the valve guides.</li> <li>Inspect the valves.</li> <li>Repair or replace damaged components as required.</li> </ul>
Worn, damaged or bent valve push rod	<ul> <li>Inspect the valve rocker arms.</li> <li>Inspect the valve push rods.</li> <li>Inspect the valve lifters.</li> <li>Repair or replace damaged components as required.</li> </ul>
Worn, damaged or dirty valve lifter	<ul> <li>Inspect the valve lifters.</li> <li>Repair or replace damaged components as required.</li> </ul>
Worn or damaged camshaft lobes	<ul> <li>Inspect the engine camshaft lobes.</li> <li>Repair or replace damaged components as required.</li> </ul>
Worn, damaged, improperly installed or loose	

miércoles, 29 de septiembre de 2021 03:25:19 p. m.	Page 29	© 2011 Mitchell Repair Information Company, LLC.
----------------------------------------------------	---------	--------------------------------------------------

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

timing chain and sprockets	<ul> <li>Inspect the timing chain and sprockets.</li> <li>Repair or replace damaged components as required.</li> </ul>
Worn, damaged or improperly installed timing chain tensioner, if equipped	<ul> <li>Inspect the timing chain tensioner.</li> <li>Repair or replace damaged components as required.</li> </ul>

## LOWER ENGINE NOISE, REGARDLESS OF ENGINE SPEED

Lower Engine Noise, Regardless of Engine Speed

Cause	Correction
Low oil pressure	<ol> <li>Verify oil pressure. Refer to <u>Oil Pressure</u> <u>Diagnosis and Testing</u>.</li> </ol>
	2. Repair or replace damaged components as required.
Detonation or spark knock	<ol> <li>Verify the operation of the ignition controls system. Refer to <u>Diagnostic System Check - Vehicle</u>.</li> </ol>
	<ol><li>Repair or replace damaged components as required.</li></ol>
Worn, damaged or improperly installed accessory	1. Inspect the accessory drive system components.
drive belt - severe cracking, bumps or missing segments in the accessory drive belt	2. Repair or replace damaged components as required.
Worn, damaged or improperly installed accessory drive system components	1. Inspect the accessory drive system components.
	<ol><li>Repair or replace damaged components as required.</li></ol>
Worn, damaged or improperly installed crankshaft	1. Inspect the crankshaft balancer.
balancer	2. Inspect the crankshaft.
	3. Repair or replace damaged components as required.
Worn, damaged or improperly installed engine	1. Inspect the engine flywheel.
flywheel	2. Inspect the engine flywheel bolts.
	3. Inspect the torque converter.
	4. Inspect the torque converter bolts.
	5. Inspect the crankshaft.
	<ol><li>Repair or replace damaged components as required.</li></ol>
Worn, damaged or improperly installed torque	1. Inspect the torque converter.
converter	2. Inspect the torque converter bolts.
l I	

miércoles, 29 de septiembre de 2021 03:25:19 p. m.	Page 30	© 2011 Mitchell Repair Information Company, LLC.
----------------------------------------------------	---------	--------------------------------------------------

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

	<ul><li>3. Inspect the engine flywheel.</li><li>4. Repair or replace damaged components as</li></ul>
Damaged oil pan, contacting the oil pump screen-An oil pan that has been damaged may loosen, improperly position or restrict oil flow at the oil pump screen, preventing proper oil flow to the oil pump  Worn, damaged, improperly installed or restricted oil pump screen-An oil pan that has been damaged may loosen, improperly position or restrict oil flow at the oil pump screen, preventing proper oil flow to the oil pump	required.  1. Inspect the oil pan. 2. Inspect the oil pump screen. 3. Repair or replace damaged components as required.  1. Inspect the oil pan. 2. Inspect the oil pump screen. 3. Repair or replace damaged components as required.
Worn, damaged or improperly installed piston-Pistons must be installed with the mark or dimple, on the top of the piston, facing the front of the engine Piston pins must be centered in the connecting rod pin bore.	<ol> <li>Inspect the spark plugs. Refer to Spark Plug Inspection.</li> <li>Verify engine compression. Refer to Engine Compression Test.</li> <li>Inspect the cylinder bores.</li> <li>Inspect the pistons.</li> <li>Inspect the piston pins.</li> <li>Inspect the connecting rods.</li> <li>Repair or replace damaged components as required.</li> </ol>
Worn, damaged or improperly installed connecting rod bearing	<ol> <li>Inspect the connecting rods.</li> <li>Inspect the connecting rod bearings.</li> <li>Inspect the crankshaft connecting rod journals.</li> <li>Repair or replace damaged components as required.</li> </ol>
Worn, damaged or improperly installed crankshaft bearing	<ol> <li>Inspect the crankshaft bearings.</li> <li>Inspect the crankshaft journals.</li> <li>Repair or replace damaged components as required.</li> </ol>

## **ENGINE NOISE UNDER LOAD**

**Engine Noise Under Load** 

Cause	Correction	
Low oil pressure	1. Perform an oil pressure test. Refer to Oil Pressure Diagnosis and Testing.	
	2. Repair or replace as required.	
Detonation or spark knock	1. Verify the correct operation of the ignition	

miércoles, 29 de septiembre de 2021 03:25:19 p. m.	Page 31	© 2011 Mitchell Repair Information Company, LLC.
----------------------------------------------------	---------	--------------------------------------------------

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

	controls. Refer to <u>Diagnostic System Check - Vehicle</u> .  2. Repair or replace damaged components as required.
Worn, damaged or improperly installed engine flywheel	<ol> <li>Inspect the engine flywheel.</li> <li>Inspect the engine flywheel bolts.</li> <li>Inspect the torque converter.</li> <li>Inspect the torque converter bolts.</li> <li>Inspect the crankshaft.</li> <li>Repair or replace damaged components as required.</li> </ol>
Worn, damaged or improperly installed torque converter	<ol> <li>Inspect the torque converter.</li> <li>Inspect the torque converter bolts.</li> <li>Inspect the engine flywheel.</li> <li>Repair or replace damaged components as required.</li> </ol>
Worn, damaged or improperly installed pistons-Pistons must be installed with the mark or dimple, on the top of the piston, facing the front of the engine Piston pins must be centered in the connecting rod pin bore.	<ol> <li>Inspect the cylinder bores.</li> <li>Inspect the pistons.</li> <li>Inspect the piston pins.</li> <li>Inspect the connecting rods.</li> <li>Repair or replace damaged components as required.</li> </ol>
Worn, damaged or improperly installed connecting rod bearing	<ol> <li>Inspect the connecting rods.</li> <li>Inspect the connecting rod bearings.</li> <li>Inspect the crankshaft connecting rod journals.</li> <li>Repair or replace damaged components as required.</li> </ol>
Worn, damaged or improperly installed crankshaft bearing	<ol> <li>Inspect the crankshaft bearings.</li> <li>Inspect the crankshaft journals.</li> <li>Repair or replace damaged components as required.</li> </ol>

## ENGINE WILL NOT CRANK - CRANKSHAFT WILL NOT ROTATE

#### Engine Will Not Crank - Crankshaft Will Not Rotate

Engine (fin 1 tot Grand Grandshare (fin 1 tot 1 totale		
Cause	Correction	
Seized accessory drive system component	Remove accessory drive belts.	
	2. Rotate crankshaft by hand at the balancer or flywheel location.	

- 1			
	miércoles, 29 de septiembre de 2021 03:25:19 p. m.	Page 32	© 2011 Mitchell Repair Information Company, LLC.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

Hydraulically locked cylinder	<ol> <li>Remove spark plugs and check for fluid.</li> <li>Inspect for broken head gasket.</li> <li>Inspect for cracked engine block or cylinder head.</li> <li>Inspect for a sticking fuel injector.</li> <li>Remove the torque converter bolts.</li> <li>Rotate crankshaft by hand at the balancer or flywheel location.</li> </ol>
Seized manual transmission	Disengage the clutch.     Rotate crankshaft by hand at the balancer or flywheel location.
Broken timing chain and/or gears	<ul><li>Inspect timing chain and gears.</li><li>Repair as required.</li></ul>
Seized balance shaft	<ul><li>Inspect balance shaft.</li><li>Repair as required.</li></ul>
Material in cylinder  • Broken valve  • Piston material  • Foreign material	<ul> <li>Inspect cylinder for damaged components and/or foreign materials.</li> <li>Repair or replace as required.</li> </ul>
Seized crankshaft or connecting rod bearings	<ul> <li>Inspect crankshaft and connecting rod bearings.</li> <li>Repair as required.</li> </ul>
Bent or broken connecting rod	<ul><li>Inspect connecting rods.</li><li>Repair as required.</li></ul>
Broken crankshaft	<ul><li>Inspect crankshaft.</li><li>Repair as required.</li></ul>

#### **COOLANT IN ENGINE OIL**

#### Coolant in Engine Oil

Contait in Englis On		
Cause	Correction	

DEFINITION: Foamy or discolored oil or an engine oil "overfill" condition may indicate coolant entering the engine crankcase. Low coolant levels, an inoperative cooling fan or a faulty thermostat may lead to an "overtemperature" condition which may cause engine component damage. Contaminated engine oil and oil filter should be changed.

1. Inspect the oil for excessive foaming or an overfill condition. Oil diluted by coolant may not properly lubricate the crankshaft bearings and may lead to component damage. Refer to <u>Lower Engine Noise</u>, Regardless of Engine Speed.

miércoles, 29 de septiembre de 2021 03:25:19 p. m.	Page 33	© 2011 Mitchell Repair Information Company, LLC.
----------------------------------------------------	---------	--------------------------------------------------

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- 2. Inspect by performing a cylinder leak-down test. During this test, excessive air bubbles within the cooling system may indicate a faulty gasket or damaged component.
- 3. Inspect by performing a cylinder compression test. Two cylinders "side-by-side" on the engine block with low compression may indicate a failed cylinder head gasket. Refer to **Engine Compression Test**.

Faulty external engine oil cooler	Replace the components as required.
Faulty cylinder head gasket	Replace the head gasket and components as required. Refer to Cylinder Head Cleaning and Inspection and Cylinder Head Replacement - Left Side or Cylinder Head Replacement - Right Side.
Warped cylinder head	Machine the cylinder head to proper flatness, if applicable and replace the cylinder head gasket. Refer to <b>Cylinder Head Cleaning and Inspection</b> .
Cracked cylinder head	Replace the cylinder head and gasket.
Cracked cylinder liner or engine block	Replace the components as required.
Cylinder head, block or manifold porosity	Replace the components as required.

#### ENGINE COMPRESSION TEST

- 1. Ensure that the vehicle batteries are in good condition and fully charged.
- 2. Operate the vehicle until the engine is at normal operating temperature.
- 3. Disconnect the positive ignition coil wire plug from the ignition coil.
- 4. Disconnect the fuel injector electrical connector.
- 5. Remove all of the spark plugs.

## CAUTION: Do not insert objects into the throttle plate opening. Damage to the throttle body can result, requiring replacement of the throttle body assembly.

- 6. Block the throttle linkage wide open.
- 7. Install the engine cylinder compression gauge to the cylinder being tested.
- 8. Using the vehicle starter motor, rotate or crank the engine for 4 compression strokes or puffs, for the cylinder being tested. If the engine rotates for more than 4 compression strokes, test the cylinder again.
- 9. Record the compression reading.
- 10. Remove the engine cylinder compression gauge from the cylinder being tested.
- 11. Repeat steps 8-11 for each additional cylinder. All cylinders must be tested to obtain valid test results.
- 12. If any cylinders have low compression, inject approximately 15 ml (1 oz) of engine oil into the cylinder through the spark plug hole.
- 13. Repeat steps 8-11 for all low compression cylinders.
- 14. The minimum compression in any one cylinder should not be less than 70 percent of the highest cylinder. No cylinder should read less than 690 kpa (100 psi). For example, if the highest pressure in any one cylinder is 1035 kPa (150 psi), the lowest allowable pressure for any other cylinder would be 725 kPa

miércoles, 29 de septiembre de 2021 03:25:19 p. m.	Page 34	© 2011 Mitchell Repair Information Company, LLC.
----------------------------------------------------	---------	--------------------------------------------------

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

(105 psi). Multiply the highest cylinder pressure by 70 percent,  $1035 \text{ kPa} \times 70 \text{ percent} = 725 \text{ kPa}$  (150 psi x 70 percent = 105 psi), in order to determine the lowest allowable pressure in any other cylinder.

Normal

The compression builds up quickly and evenly to the specified compression.

Piston rings leaking

Compression is low on the first compression stroke. The compression builds up on the following strokes, but does not reach normal. Compression improves considerably when you add oil.

• Valves leaking

Compression is low on the first compression stroke. The compression does not build up on the following strokes and does not reach normal. Compression does not improve much, if at all, when you add oil.

Head gasket leaking

Compression is low on the first stroke. The compression does not build up on the following strokes and does not reach normal. Compression does not improve much, if at all, when you add oil. Adjacent cylinders have the same or similar, low compression readings.

15. If one or more cylinders fails to meet the minimum specified compression, repair or replace all damaged or worn components and test the engine again.

#### CYLINDER LEAKAGE TEST

#### **Special Tools**

J 35667-A Cylinder Head Leakdown Tester

For equivalent regional tools, refer to **Special Tools**.

With the use of air pressure, a cylinder leakage test will aid in the diagnosis. Use the cylinder leakage test in conjunction with the engine compression test in order to isolate the cause of leaking cylinders.

#### **WARNING: Refer to Battery Disconnect Warning.**

- 1. Disconnect the battery ground negative cable.
- 2. Remove the spark plugs. Refer to **Spark Plug Replacement** use for the 4.3L engine.
- 3. Rotate the crankshaft to place the piston in the cylinder being tested at top dead center (TDC) of the compression stroke, with both valves closed.
- 4. Install the J 35667-A tester.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

NOTE: It may be necessary to hold the crankshaft balancer bolt to prevent piston movement.

5. Apply shop air pressure to the **J 35667-A** tester and adjust according to the manufacturer instructions.

NOTE: Perform the leakage test on all cylinders and record the values before doing any repairs.

- 6. Record the cylinder leakage value. Cylinder leakage that exceeds 25 percent is considered excessive and may require component service. In excessive leakage situations, inspect for the following conditions:
  - 1. Air leakage from the intake or exhaust system may indicate a worn or burnt valve or a broken valve spring.
    - 1. Remove the valve rocker arm cover of the suspect cylinder head. Refer to <u>Valve Rocker</u>
      <u>Arm Cover Replacement Left Side</u> or <u>Valve Rocker Arm Cover Replacement Right Side</u>.
    - 2. Ensure that both valves are closed.
    - 3. Inspect the cylinder head for a broken valve spring.
    - 4. Remove and inspect the suspect cylinder head. Refer to <u>Cylinder Head Replacement Left Side</u> or <u>Cylinder Head Replacement Right Side</u>.
  - 2. Air leakage from the crankcase, oil level indicator or oil fill tube may indicate worn piston rings, a damaged piston, a worn or scored cylinder bore, a damaged engine block or a damaged cylinder head.
    - 1. Remove the piston from the suspect cylinder. Refer to <u>Piston, Connecting Rod and Bearing Removal</u> or <u>Piston, Connecting Rod and Bearing Installation</u>.
    - 2. Inspect the piston and connecting rod assembly. Refer to <u>Piston, Connecting Rod and Bearing Cleaning and Inspection</u>.
    - 3. Inspect the engine block. Refer to Engine Block Cleaning and Inspection.
    - 4. Inspect the cylinder head. Refer to Cylinder Head Cleaning and Inspection.
  - 3. Air bubbles in the cooling system may indicate a damaged cylinder head or a damaged cylinder head gasket.
    - 1. Remove both cylinder heads. Refer to <u>Cylinder Head Replacement Left Side</u> or <u>Cylinder Head Replacement Right Side</u>.
    - 2. Inspect both cylinder heads. Refer to Cylinder Head Cleaning and Inspection.
    - 3. Inspect the engine block. Refer to **Engine Block Cleaning and Inspection**.
- 7. Remove the **J 35667-A** tester.
- 8. Install the spark plugs. Refer to **Spark Plug Replacement** use for the 4.3L engine.
- 9. Connect the battery ground negative cable.

#### **OIL CONSUMPTION DIAGNOSIS**

Excessive oil consumption, not due to leaks, is the use of 1 liter (1 quart) of engine oil within 3 200 kilometers (2, 000 miles). However, during initial engine break-in periods 4 828-6 437 kilometers (3, 000-4, 000 miles), oil consumption may exceed 1 liter (1 quart) or more. The causes of excessive oil consumption include the

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

## following conditions:

• External oil leaks

Tighten the bolts and/or replace gaskets and oil seals as necessary.

Incorrect oil level or improper reading of oil level indicator

With the vehicle on a level surface, allow adequate drain down time and check for the correct oil level.

Improper oil viscosity

Use recommended SAE viscosity for the prevailing temperatures.

- Continuous high speed driving and/or severe usage
- Crankcase ventilation system restrictions or malfunctioning components
- Valve guides and/or valve stem oil seals worn, damaged or the seal omitted

Ream the valve guides and install oversize service valves and/or new valve stem oil seals.

• Piston rings broken, improperly installed, worn or not seated properly

Allow adequate time for the piston rings to seat. Replace broken or worn piston rings as necessary.

Piston improperly installed or miss-fitted

#### OIL PRESSURE DIAGNOSIS AND TESTING

1. With the vehicle on a level surface, allow adequate drain down time, 2-3 minutes and measure for a low engine oil level.

Add the recommended grade engine oil and fill the crankcase until the oil level measures FULL on the oil level indicator.

2. Operate the engine and verify low or no oil pressure on the vehicle oil pressure gauge or the oil indicator light.

Listen for a noisy valve train or a knocking noise.

- 3. Inspect for the following:
  - Engine oil diluted by moisture or unburned fuel mixtures
  - Improper engine oil viscosity for the expected temperature
  - Incorrect or faulty oil pressure gauge sensor
  - Incorrect or faulty oil pressure gauge
  - Plugged oil filter

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- Malfunctioning oil filter bypass valve
- 4. Remove the oil pressure gauge sensor or another engine block oil gallery plug.
- 5. Install an oil pressure gauge.
- 6. Start the engine and then allow the engine to reach normal operation temperature.
- 7. Measure the engine oil pressure at the following RPM:

## **Specification**

- 1. 42 kPa (6 psig) minimum, at 1, 000 RPM
- 2. 125 kPa (18 psig) minimum, at 2, 000 RPM
- 3. 166 kPa (24 psig) minimum, at 4, 000 RPM
- 8. If the engine oil pressure is below minimum specifications, inspect the engine for one or more of the following:
  - Oil pump worn or dirty
  - Malfunctioning oil pump pressure relief valve
  - Oil pump screen loose, plugged or damaged
  - Excessive bearing clearance
  - Cracked, porous or restricted oil galleries
  - Engine block oil gallery plugs missing or incorrectly installed
  - Broken valve lifters

#### OIL LEAK DIAGNOSIS

Oil Leak Diagnosis

Step	Action	Yes	No
IMPOR	TANT:		
compo	n repair most fluid leaks by first visually locating the leak nent or by resealing the gasket surface. Once the leak is epair the cause of the leak as well as the leak itself.		
	1. Operate the vehicle until it reaches normal operating temperature.		
1	2. Park the vehicle on a level surface, over a large sheet of paper or other clean surface.		
1	3. Wait 15 minutes.		
	4. Inspect for drippings.		
	Are drippings present?	Go to Step 2	System OK
2	Can you identify the type of fluid and the approximate location of the leak?	Go to Step 10	Go to <b>Step 3</b>
	Visually inspect the suspected area. Use a small mirror to assist in looking at hard to see areas.		

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

3	<ul> <li>2. Inspect for leaks at the following locations:</li> <li>Sealing surfaces</li> <li>Fittings</li> <li>Cracked or damaged components</li> </ul> Can you identify the type of fluid and the approximate location of the leak?	Go to <b>Step 10</b>	Go to <b>Step 4</b>
4	<ol> <li>Completely clean the entire engine and surrounding components.</li> <li>Operate the vehicle for several kilometers, miles, at normal operating temperature and at varying speeds.</li> <li>Park the vehicle on a level surface, over a large sheet of paper or other clean surface.</li> <li>Wait 15 minutes.</li> <li>Identify the type of fluid and the approximate location of the leak.</li> </ol>		
	Can you identify the type of fluid and the approximate location of the leak?	Go to Step 10	Go to Step 5
5	<ol> <li>Visually inspect the suspected area. Use a small mirror to assist in looking at hard to see areas.</li> <li>Inspect for leaks at the following locations:         <ul> <li>Sealing surfaces</li> <li>Fittings</li> <li>Cracked or damaged components</li> </ul> </li> <li>Can you identify the type of fluid and the approximate location of the leak?</li> </ol>	Go to <b>Step 10</b>	Go to <b>Step 6</b>
6	<ol> <li>Completely clean the entire engine and surrounding components.</li> <li>Apply an aerosol-type powder, baby powder, foot powder, etc., to the suspected area.</li> <li>Operate the vehicle for several kilometers, miles, at normal operating temperature and at varying speeds.</li> <li>Identify the type of fluid and the approximate location of the leak, from the discolorations in the powder surface.</li> </ol> Can you identify the type of fluid and the approximate location of the leak?	Go to Step 10	Go to Step 7

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

7	<ol> <li>Visually inspect the suspected area. Use a small mirror to assist in looking at hard to see areas.</li> <li>Inspect for leaks at the following locations:         <ul> <li>Sealing surfaces</li> <li>Fittings</li> <li>Cracked or damaged components</li> </ul> </li> </ol>		
	Can you identify the type of fluid and the approximate location of the leak?	Go to <b>Step 10</b>	Go to <b>Step 8</b>
8	Use the <b>J 28428-E</b> high-intensity black light kit in order to identify the type of fluid and the approximate location of the leak. Refer to the manufacturer's instructions when using the tool.  Can you identify the type of fluid and the approximate location of the leak?	Go to Step 10	Go to Step 9
9	<ol> <li>Visually inspect the suspected area. Use a small mirror to assist in looking at hard to see areas.</li> <li>Inspect for leaks at the following locations:         <ul> <li>Sealing surfaces</li> <li>Fittings</li> <li>Cracked or damaged components</li> </ul> </li> <li>Can you identify the type of fluid and the approximate location of the leak?</li> </ol>	Go to <b>Step 10</b>	System OK
10	<ol> <li>Inspect the engine for mechanical damage. Special attention should be shown to the following areas:         <ul> <li>Higher than recommended fluid levels</li> <li>Higher than recommended fluid pressures</li> <li>Plugged or malfunctioning fluid filters or pressure bypass valves</li> <li>Plugged or malfunctioning engine ventilation system</li> <li>Improperly tightened or damaged fasteners</li> <li>Cracked or porous components</li> <li>Improper sealants or gaskets, where required</li> <li>Improper sealant or gasket installation</li> <li>Damaged or worn gaskets or seals</li> <li>Damaged or worn sealing surfaces</li> <li>Inspect the engine for customer modifications.</li> <li>Is there mechanical damage or customer modifications to</li> <li>Is there mechanical damage or customer modifications to</li> <li>Is there mechanical damage or customer modifications to</li> <li>Inspect the engine for customer modifications to</li></ul></li></ol>		

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

	the engine?	Go to Step 11	System OK
11	Repair or replace all damaged or modified components.		
11	Does the engine still leak oil?	Go to Step 1	System OK

#### CRANKCASE VENTILATION SYSTEM INSPECTION/DIAGNOSIS

#### **Results Of Incorrect Operation**

- A plugged positive crankcase ventilation (PCV) orifice or hose may cause the following conditions:
  - o Rough idle
  - o Stalling or slow idle speed
  - o Oil leaks
  - o Oil in air cleaner
  - o Sludge in engine
- A leaking PCV orifice or hose may cause the following conditions:
  - o Rough idle
  - o Stalling
  - o High idle speed

#### **Functional Check**

With these systems, any blow-by in excess of the system capacity, from a badly worn engine, sustained heavy load, etc., is exhausted into the air cleaner and is drawn into the engine.

Proper operation of the crankcase ventilation system depends upon a sealed engine. If oil slugging or dilution is noted and the crankcase ventilation system is functioning properly, check the engine for a possible cause. Correct any problems.

If an engine is idling rough, inspect for a clogged PCV orifice, a dirty vent filter, air cleaner element or plugged hose. Replace as required. Use the following procedure:

- 1. Remove the PCV hose from the rocker arm cover.
- 2. Operate the engine at idle.
- 3. Place your thumb over the end of the hose in order to check for a vacuum. If there is no vacuum at the hose, inspect for the following items:
  - Plugged hoses
  - The manifold port
- 4. Turn OFF the engine.
- 5. Inspect the PCV orifice in the valve cover for debris or blockage.

## DRIVE BELT CHIRPING, SQUEAL AND WHINE DIAGNOSIS

#### **Diagnostic Aids**

miércoles, 29 de septiembre de 2021 03:25:19 p. m.	Page 41	© 2011 Mitchell Repair Information Company, LLC.

#### 2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- A chirping or squeal noise may be intermittent due to moisture on the drive belts or the pulleys. It may be necessary to spray a small amount of water on the drive belts in order to duplicate the customers concern. If spraying water on the drive belt duplicates the symptom, cleaning the belt pulleys may be the probable solution.
- If the noise is intermittent, verify the accessory drive components by varying their loads making sure they are operated to their maximum capacity. An overcharged A/C system, power steering system with a pinched hose or wrong fluid or a generator failing are suggested items to inspect.
- A chirping, squeal or whine noise may be caused by a loose or improper installation of a body or suspension component. Other items of the vehicle may also cause the noise.
- The drive belts will not cause a whine noise.

#### **Test Description**

The numbers below refer to the step numbers on the diagnostic table.

2

The noise may not be engine related. This step is to verify that the engine is making the noise. If the engine is not making the noise do not proceed further with this table.

3

The noise may be an internal engine noise. Removing the drive belts one at a time and operating the engine for a brief period will verify the noise is related to the drive belt. When removing the drive belt the water pump may not be operating and the engine may overheat. Also DTCs may set when the engine is operating with the drive belts removed.

4

Inspect all drive belt pulleys for pilling. Pilling is the small balls or pills or it can be strings in the drive belt grooves from the accumulation of rubber dust.

6

Misalignment of the pulleys may be caused from improper mounting of the accessory drive component, incorrect installation of the accessory drive component pulley or the pulley bent inward or outward from a previous repair. Test for a misaligned pulley using a straight edge in the pulley grooves across two or three pulleys. If a misaligned pulley is found refer to that accessory drive component for the proper installation procedure for that pulley.

10

Inspecting of the fasteners can eliminate the possibility that a wrong bolt, nut, spacer or washer was installed.

12

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

Inspecting the pulleys for being bent should include inspecting for a dent or other damage to the pulleys that would prevent the drive belt from not seating properly in all of the pulley grooves or on the smooth surface of a pulley when the back side of the belt is used to drive the pulley.

#### 14

This test is to verify that the drive belt tensioner operates properly. If the drive belt tensioner is not operating properly, proper belt tension may not be achieved to keep the drive belt from slipping which could cause a squeal noise.

#### 15

This test is to verify that the drive belt is not too long, which would prevent the drive belt tensioner from working properly. Also if an incorrect length drive belt was installed, it may not be routed properly and may be turning an accessory drive component in the wrong direction.

#### 16

Misalignment of the pulleys may be caused from improper mounting of the accessory drive component, incorrect installation of the accessory drive component pulley or the pulley bent inward or outward from a previous repair. Test for a misaligned pulley using a straight edge in the pulley grooves across two or three pulleys. If a misaligned pulley is found refer to that accessory drive component for the proper installation procedure for that pulley.

#### 17

This test is to verify that the pulleys are the correct diameter or width. Using a known good vehicle compare the pulley sizes.

#### 19

Replacing the drive belt when it is not damaged or there is not excessive pilling will only be a temporary repair.

## Drive Belt Chirping, Squeal and Whine Diagnosis

D11, C D	or one ping, square and wine brighten	7	
Step	Action	Yes	No
CAUTIO	ON:		
Refer to	Rolf Dressing Caution		

DEFINITION: The following items are indications of chirping:

- A high pitched noise that is heard once per revolution of the drive belt or a pulley.
- Chirping may occur on cold damp start-ups and will subside once the vehicle reaches normal operating temp.

DEFINITION: The following items are indications of drive belt squeal:

## 2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- A loud screeching noise that is caused by a slipping drive belt. This is unusual for a drive belt with multiple ribs.
- The noise occurs when a heavy load is applied to the drive belt, such as an air conditioning compressor engagement snapping the throttle or slipping on a seized pulley or a faulty accessory drive component.

DEFINITION: The following items are indications of drive belt whine:

• A high pitched continuous noise.

• The noise may be caused by an accessory drive component failed bearing.

	Did you review the drive belt symptom operation	licht fairea boaring.	Go to Symptoms
1	_ · · · · · · · · · · · · · · · · · · ·	Co to Ston 2	Go to Symptoms -
	and perform the necessary inspections?	Go to Step 2	<b>Engine Mechanical</b>
	Verify that there is a chirping, squeal or whine		
2	noise.		Co to Diagnostic
	Does the engine make the chirping squeal or whine	C - 4 - C4 2	Go to Diagnostic
	noise?	Go to Step 3	Aids
	1. Remove the drive belt.		
	If the engine has multiple drive belts, remove		
	the belts one at a time and perform the test		
	below each time a belt is removed.		
3			
3	2. Operate the engine for no longer than 30-40 seconds.		
	3. Repeat this test if necessary by removing the remaining belt(s).		
	Temaming vericity.	Go to <b>Symptoms</b> -	
	Does the chirping, squeal or whine noise still exist?	Engine Mechanical	Go to Step 4
	If diagnosing a chirping noise, inspect for severe		
	pilling exceeding 1/3 of the belt groove depth.		
4	If diagnosing a squeal or whine noise, proceed to		
	step 13.	C - 4 - 84 5	Carta Stara C
	Do the belt grooves have pilling?	Go to Step 5	Go to Step 6
_	Clean the drive belt pulleys with a suitable wire		
5	brush.	Co to Ston 20	Co to Ston 6
	Did you complete the repair?	Go to Step 20	Go to Step 6
6	Inspect for misalignment of the pulleys.	Co to Ston 7	Co to Ston 0
	Are any of the pulleys misaligned?	Go to Step 7	Go to Step 8
7	Replace or repair any misaligned pulleys.	Ca to Ston 20	Ca ta Stan 0
	Did you complete the repair?	Go to Step 20	Go to Step 8
8	Inspect for bent or cracked brackets.	C - 4 - C4 0	C - 4 - C4 10
	Did you find any bent or cracked brackets?	Go to Step 9	Go to Step 10
9	Replace any bent or cracked brackets.	C - 4 - C4 - 20	C - 4 - C4 - 10
	Did you complete the repair?	Go to Step 20	Go to Step 10
	Inspect for improper, loose or missing fasteners.		

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

10	Did you find the condition?	Go to Step 11	Go to Step 12
	CAUTION:		
11	1. Tighten any loose fasteners. Refer to  Fastener Tightening Specifications.		
	<ol><li>Replace any improper or missing fasteners.</li><li>Did you complete the repair?</li></ol>	Go to Step 20	Go to Step 12
12	Inspect for a bent pulley. Did you find the condition?	Go to Step 18	Go to Step 19
13	Inspect for an accessory drive component seized bearing or a faulty accessory drive component. If diagnosing a whine noise and the condition still exist, proceed to Diagnostic Aids. Did you find and correct the condition?	Go to <b>Step 20</b>	Go to Step 14
14	Test the drive belt tensioner for proper operation. Refer to <b>Drive Belt Tensioner Diagnosis</b> . Did you find and correct the condition?	Go to Step 20	Go to Step 15
15	Inspect for the correct drive belt length. Did you find and correct the condition?	Go to Step 20	Go to Step 16
16	Inspect for misalignment of a pulley. Did you find and correct the condition?	Go to Step 20	Go to Step 17
17	Inspect for the correct pulley size. Did you find and correct the condition?	Go to Step 20	Go to Diagnostic Aids
18	Replace the bent pulley. Did you complete the repair?	Go to Step 20	Go to Step 19
19	Replace the drive belt. Refer to <b>Drive Belt</b> Replacement.  Did you complete the repair?	Go to Step 20	Go to Diagnostic Aids
20	Operate the system in order to verify the repair. Did you correct the condition?	System OK	Go to Step 3

#### DRIVE BELT RUMBLING AND VIBRATION DIAGNOSIS

#### Diagnostic Aids

The accessory drive components can have an affect on engine vibration. Vibration from the engine operating may cause a body component or another part of the vehicle to make rumbling noise. Vibration can be caused by, but not limited to the air conditioning (A/C) system over charged, the power steering system restricted or the incorrect fluid or an extra load on the generator. To help identify an intermittent or an improper condition, vary the loads on the accessory drive components.

The drive belt may have a rumbling condition that can not be seen or felt. Sometimes replacing the drive belt may be the only repair for the symptom.

miércoles, 29 de septiembre de 2021 03:25:19 p. m.	Page 45	© 2011 Mitchell Repair Information Company, LLC.
----------------------------------------------------	---------	--------------------------------------------------

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

If replacing the drive belt, completing the diagnostic table and the noise is only heard when the drive belts are installed, there might be an accessory drive component with a failure. Varying the load on the different accessory drive components may aid in identifying which component is causing the rumbling noise.

## **Test Description**

The numbers below refer to the step numbers on the diagnostic table.

2

This test is to verify that the symptom is present during diagnosing. Other vehicle components may cause a similar symptom.

3

This test is to verify that one of the drive belts is causing the rumbling noise or vibration. Rumbling noise may be confused with an internal engine noise due to the similarity in the description. Remove only one drive belt at a time if the vehicle has multiple drive belts. When removing the drive belts the water pump may not be operating and the engine may overheat. Also DTCs may set when the engine is operating with the drive belts removed.

4

Inspecting the drive belts is to ensure that they are not causing the noise. Small cracks across the ribs of the drive belt will not cause the noise. Belt separation is identified by the plys of the belt separating and may be seen at the edge of the belt our felt as a lump in the belt.

5

Small amounts of pilling is normal condition and acceptable. When the pilling is severe the drive belt does not have a smooth surface for proper operation.

9

Inspecting of the fasteners can eliminate the possibility that the wrong bolt, nut, spacer or washer was installed.

11

This step should only be performed if the water pump is driven by the drive belt. Inspect the water pump shaft for being bent. Also inspect the water pump bearings for smooth operation and excessive play. Compare the water pump with a known good water pump.

12

Accessory drive component brackets that are bent, cracked or loose may put extra strain on that accessory component causing it to vibrate.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

## **Drive Belt Rumbling and Vibration Diagnosis**

Step	Action	Yes	No
_			

#### **CAUTION:**

## Refer to Belt Dressing Caution .

DEFINITION: The following items are indications of drive belt rumbling:

- A low pitch tapping, knocking or thumping noise heard at or just above idle.
- Heard once per revolution of the drive belt or a pulley.
- Rumbling may be caused from:
  - o Pilling, the accumulation of rubber dust that forms small balls (pills) or strings in the drive belt pulley groove
  - o The separation of the drive belt
  - o A damaged drive belt

DEFINITION: The following items are indications of drive belt vibration:

- The vibration is engine-speed related.
- The vibration may be sensitive to accessory load.

	the violation may be benefit to to decemberly roud.		
1	Did you review the drive belt symptom operation and perform the necessary inspections?	Go to Step 2	Go to <b>Symptoms</b> - <b>Engine Mechanical</b>
2	Verify that there is a rumbling noise or that the vibration is engine related.  Does the engine make the rumbling noise or vibration?	Go to Step 3	Go to Diagnostic Aids
	NOTE:  If the engine has multiple drive belts, remove the belts one at a time and perform the test below each time a belt is removed.	•	
3	<ol> <li>Remove the drive belt.</li> <li>Operate the engine for no longer than 30-40 seconds.</li> <li>Repeat this test if necessary by removing the remaining belt(s).</li> </ol>	Go to <u>Symptoms -</u> Engine Mechanical or	
	Does the rumbling or vibration still exist?	Go to <u>Vibration</u> <u>Analysis - Engine</u>	Go to Step 4
4	Inspect the drive belts for wear, damage, separation, sections of missing ribs and debris build-up. Did you find any of these conditions?	Go to <b>Step 7</b>	Go to <b>Step 5</b>
5	Inspect for severe pilling of more than 1/3 of the drive belt pulley grooves. Did you find severe pilling?	Go to <b>Step 6</b>	Go to Step 7

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

6	<ol> <li>Clean the drive belt pulleys using a suitable wire brush.</li> <li>Reinstall the drive belts. Refer to <u>Drive Belt Replacement</u>.</li> </ol>		
	Did you correct the condition?	Go to Step 8	Go to Step 7
7	Install a new drive belt. Refer to <b>Drive Belt Replacement</b> . Did you complete the replacement?	Go to <b>Step 8</b>	Go to Step 9
8	Operate the system in order to verify the repair. Did you correct the condition?	System OK	Go to Step 9
9	Inspect for improper, loose or missing fasteners. Did you find any of these conditions?	Go to Step 10	Go to Step 11
10	CAUTION: Refer to Fastener Caution.  1. Tighten any loose fasteners. Refer to Fastener Tightening Specifications. 2. Replace improper or missing fasteners.  Did you complete the repair?	Go to <b>Step 13</b>	Go to <b>Step 11</b>
11	Inspect for a bent water pump shaft. Refer to Water Pump Replacement (V6), Water Pump Replacement (V8), Water Pump Replacement (LMF/LY2), Water Pump Replacement (Diesel). Did you find and correct the condition?	Go to Step 13	Go to Step 12
12	Inspect for bent or cracked brackets. Did you find and correct the condition?	Go to Step 13	Go to Diagnostic Aids
13	Operate the system in order to verify the repair.  Did you correct the condition?	System OK	Go to Step 3

## DRIVE BELT FALLS OFF AND EXCESSIVE WEAR DIAGNOSIS

## **Diagnostic Aids**

If the drive belt repeatedly falls off the drive belt pulleys, this is because of pulley misalignment.

An extra load that is quickly applied on released by an accessory drive component may cause the drive belt to fall off the pulleys. Verify the accessory drive components operate properly.

If the drive belt is the incorrect length, the drive belt tensioner may not keep the proper tension on the drive belt.

Excessive wear on a drive belt is usually caused by an incorrect installation or the wrong drive belt for the application.

miércoles, 29 de septiembre de 2021 03:25:19 p. m.	Page 48	© 2011 Mitchell Repair Information Company, LLC.
----------------------------------------------------	---------	--------------------------------------------------

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

Minor misalignment of the drive belt pulleys will not cause excessive wear, but will probably cause the drive belt to make a noise or to fall off.

Excessive misalignment of the drive belt pulleys will cause excessive wear but may also make the drive belt fall off.

#### **Test Description**

The numbers below refer to the step numbers on the diagnostic table.

2

This inspection is to verify the condition of the drive belt. Damage may of occurred to the drive belt when the drive belt fell off. The drive belt may of been damaged, which caused the drive belt to fall off. Inspect the belt for cuts, tears, sections of ribs missing or damaged belt plys.

4

Misalignment of the pulleys may be caused from improper mounting of the accessory drive component, incorrect installation of the accessory drive component pulley or the pulley bent inward or outward from a previous repair. Test for a misaligned pulley using a straight edge in the pulley grooves across two or three pulleys. If a misaligned pulley is found refer to that accessory drive component for the proper installation procedure of that pulley.

5

Inspecting the pulleys for being bent should include inspecting for a dent or other damage to the pulleys that would prevent the drive belt from not seating properly in all of the pulley grooves or on the smooth surface of a pulley when the back side of the belt is used to drive the pulley.

6

Accessory drive component brackets that are bent or cracked will let the drive belt fall off.

7

Inspection of the fasteners can eliminate the possibility that a wrong bolt, nut, spacer or washer was installed. Missing, loose or the wrong fasteners may cause pulley misalignment from the bracket moving under load. Over tightening of the fasteners may cause misalignment of the accessory component bracket.

13

The inspection is to verify the drive belt is correctly installed on all of the drive belt pulleys. Wear on the drive belt may be caused by mis-positioning the drive belt by one groove on a pulley.

14

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

The installation of a drive belt that is too wide or too narrow will cause wear on the drive belt. The drive belt ribs should match all of the grooves on all of the pulleys.

**15** 

This inspection is to verify the drive belt is not contacting any parts of the engine or body while the engine is operating. There should be sufficient clearance when the drive belt accessory drive components load varies. The drive belt should not come in contact with an engine or a body component when snapping the throttle.

**Drive Belt Falls Off and Excessive Wear Diagnosis** 

Step	elt Falls Off and Excessive Wear Diagnosis  Action	Yes	No
-		1 (3	110
CAUTIO			
Refer to	Belt Dressing Caution .		
5 N	TYON THE 1 . 1 . 1 . 1 . 1 . 1 . 1 . 1 . 1 . 1		11
	TION: The drive belt falls off the pulleys or may not ric		bulleys.DEFINITION:
wear at	the outside ribs of the drive belt due to an incorrectly in	istalled drive belt.	
1	Did you review the drive belt symptom operation and	G . G. •	Go to Symptoms -
	perform the necessary inspections?	Go to Step 2	Engine Mechanical
	<ul> <li>If diagnosing excessive wear, proceed to step</li> </ul>		
	13.		
2	• If diagnosing a drive belt that falls off, inspect		
	for a damaged drive belt.		
	Did you find the condition?	Go to Step 3	Go to Step 4
	Install a new drive belt. Refer to <b>Drive Belt</b>		
3	Replacement.		
	Does the drive belt continue to fall off?	Go to Step 4	System OK
4	Inspect for misalignment of the pulleys.		
	Did you find and repair the condition?	Go to Step 12	Go to Step 5
5	Inspect for a bent or dented pulley.		
	Did you find and repair the condition?	Go to Step 12	Go to Step 6
6	Inspect for a bent or a cracked bracket.		
	Did you find and repair the condition?	Go to Step 12	Go to Step 7
7	Inspect for improper, loose or missing fasteners.		
	Did you find loose or missing fasteners?	Go to Step 8	Go to Step 9
	CAUTION:		
	Refer to <u>Fastener Caution</u> .		
8	1. Tighten any loose fasteners. Refer to <u>Fastener</u>		
	<u>Tightening Specifications</u> .		
	2. Replace improper or missing fasteners.		
	Does the drive belt continue to fall off?	Go to Step 9	System OK

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

9	Test the drive belt tensioner for operating correctly. Refer to <b>Drive Belt Tensioner Diagnosis</b> .		
	Does the drive belt tensioner operate correctly?	Go to Step 11	Go to Step 10
10	Replace the drive belt tensioner. Refer to <b>Drive Belt Tensioner Replacement</b> .  Does the drive belt continue to fall off?	Go to <b>Step 11</b>	System OK
11	Inspect for failed drive belt idler and drive belt tensioner pulley bearings.  Did you find and repair the condition?	Go to Step 12	Go to Diagnostic Aids
12	Operate the system in order to verify the repair. Did you correct the condition?	System OK	Go to Step 2
13	Inspect the drive belt for the proper installation. Refer to <b>Drive Belt Replacement</b> . Did you find this condition?	Go to <b>Step 16</b>	Go to Step 14
14	Inspect for the proper drive belt. Did you find this condition?	Go to Step 16	Go to Step 15
15	Inspect for the drive belt rubbing against a bracket, hose or wiring harness.  Did you find and repair the condition?	Go to Step 17	Go to Diagnostic
16	Replace the drive belt. Refer to <u>Drive Belt</u> Replacement.  Did you complete the replacement?	Go to <b>Step 17</b>	-
17	Operate the system in order to verify the repair. Did you correct the condition?	System OK	-

## DRIVE BELT TENSIONER DIAGNOSIS

## **Inspection Procedure**

NOTE: When the engine is operating the belt tensioner arm will move. Do not replace the belt tensioner because of movement in the belt tensioner arm.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

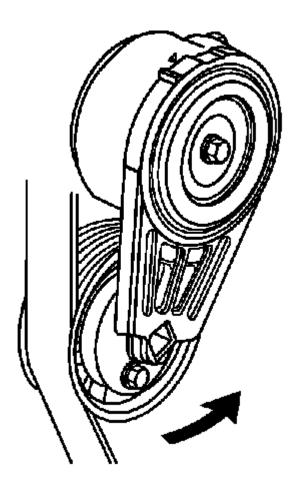


Fig. 8: Releasing Drive Belt Tension
Courtesy of GENERAL MOTORS COMPANY

CAUTION: Allowing the drive belt tensioner to snap into the free position may result in damage to the tensioner.

- 1. Remove the drive belt. Refer to **Drive Belt Replacement**.
- 2. Position a 3/8 inch drive wrench on the drive belt tensioner arm and rotate the arm counterclockwise.
- 3. Move the drive belt tensioner through it's full travel.
  - The movement should feel smooth.
  - There should be no binding.
  - The tensioner should return freely.
- 4. If any binding is observed, replace the drive belt tensioner. Refer to **Drive Belt Tensioner Replacement**.
- 5. Install the drive belt. Refer to **Drive Belt Replacement**.

## REPAIR INSTRUCTIONS - ON VEHICLE

#### DRIVE BELT REPLACEMENT

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

#### **Removal Procedure**

1. Remove the coolant air cleaner outlet resonator duct. Refer to <u>Air Cleaner Outlet Resonator</u> Replacement.

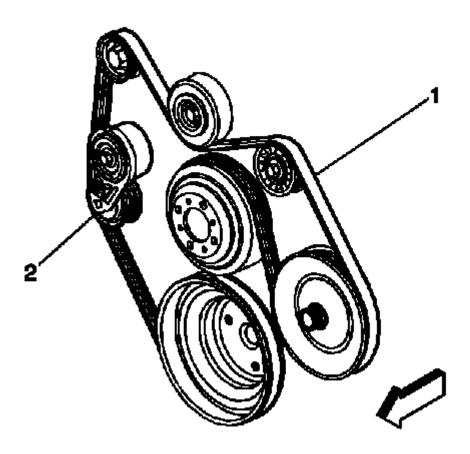


Fig. 9: Drive Belt Routing & Tensioner (W/O A/C) Courtesy of GENERAL MOTORS COMPANY

- 2. Install a 3/8 inch drive breaker bar to the drive belt tensioner arm.
- 3. Rotate the drive belt tensioner (2) counterclockwise in order to relieve tension on the belt.
- 4. If equipped without air conditioning (A/C), remove the belt (1) from the pulleys and the drive belt tensioner.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

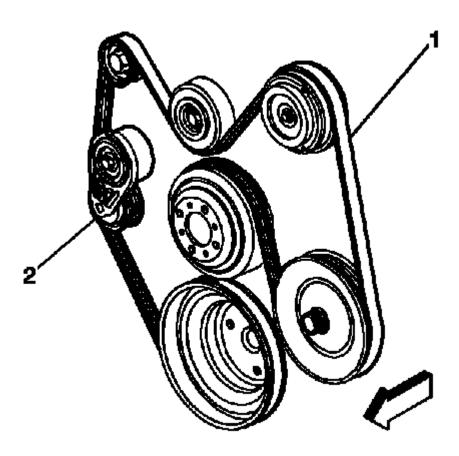


Fig. 10: Drive Belt Routing & Tensioner (W/ A/C)
Courtesy of GENERAL MOTORS COMPANY

- 5. If equipped with A/C, remove the belt (1) from the pulleys and the drive belt tensioner.
- 6. Slowly release the tension on the drive belt tensioner (2).
- 7. Remove the breaker bar from the drive belt tensioner.
- 8. Clean and inspect the belt surfaces of all the pulleys.

#### **Installation Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

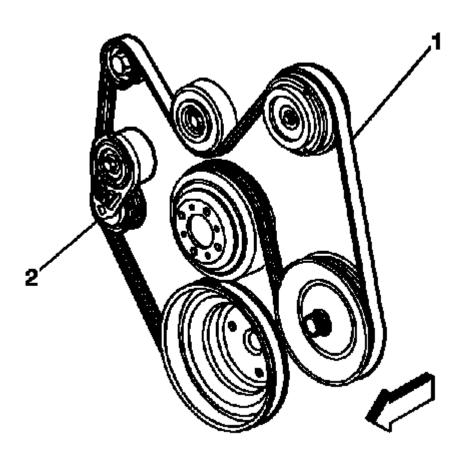


Fig. 11: Drive Belt Routing & Tensioner (W/ A/C)
Courtesy of GENERAL MOTORS COMPANY

- 1. Route the belt (1) around all the pulleys except the flat idler pulley.
- 2. Install a 3/8 inch drive breaker bar to the drive belt tensioner arm.
- 3. Rotate the belt tensioner (2) counterclockwise in order to relieve the tension on the tensioner.
- 4. If equipped with A/C, install the belt under the flat idler pulley.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

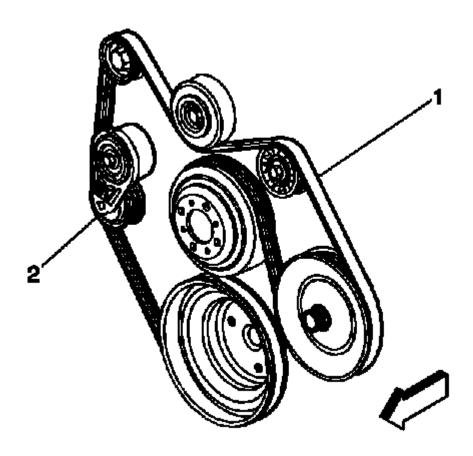


Fig. 12: Drive Belt Routing & Tensioner (W/O A/C)
Courtesy of GENERAL MOTORS COMPANY

- 5. If equipped without A/C, install the belt (1) to the pulleys and the drive belt tensioner.
- 6. Slowly release the tension on the belt tensioner (2).
- 7. Remove the breaker bar from the drive belt tensioner.
- 8. Inspect the drive belt for proper installation and alignment.
- 9. Install the coolant air cleaner outlet resonator duct. Refer to <u>Air Cleaner Outlet Resonator</u> Replacement.

#### DRIVE BELT TENSIONER REPLACEMENT

#### **Removal Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

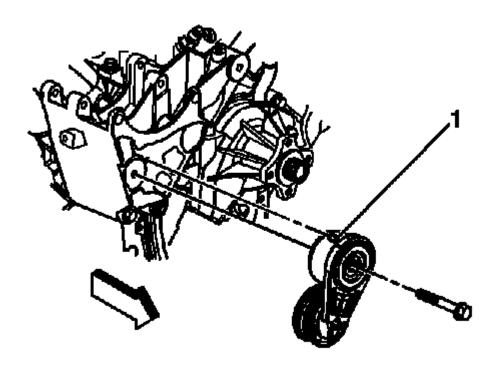


Fig. 13: Drive Belt Tensioner Locating Pin Courtesy of GENERAL MOTORS COMPANY

- 1. Remove the drive belt. Refer to **Drive Belt Replacement**.
- 2. Remove the belt tensioner bolt.
- 3. Remove the belt tensioner.

Ensure that there is a locating pin (1) on the tensioner.

#### **Installation Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

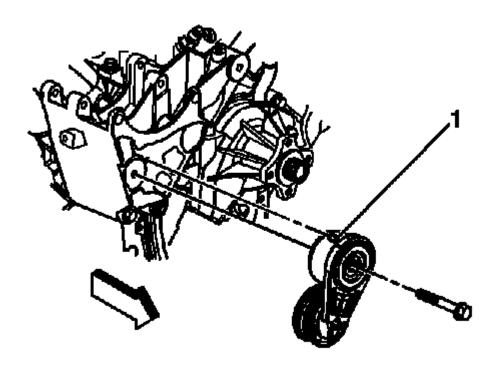


Fig. 14: Drive Belt Tensioner Locating Pin Courtesy of GENERAL MOTORS COMPANY

1. Install the belt tensioner. Position the locating pin (1) on the tensioner into the hole in the generator bracket.

**CAUTION: Refer to Fastener Caution**.

- 2. Install the belt tensioner bolt and tighten to 50 N.m (37 lb ft).
- 3. Install the drive belt. Refer to **Drive Belt Replacement**.

#### DRIVE BELT IDLER PULLEY REPLACEMENT - RIGHT SIDE

## Removal Procedure

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

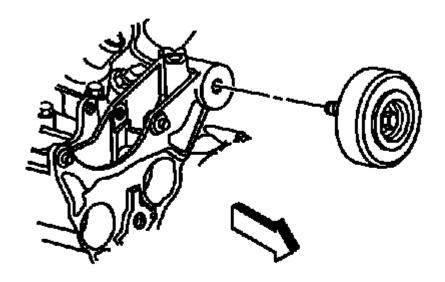


Fig. 15: Drive Belt Right Idler Pulley
Courtesy of GENERAL MOTORS COMPANY

- 1. Loosen the idler pulley bolt.
- 2. Remove the drive belt. Refer to **Drive Belt Replacement**.
- 3. Remove the idler pulley.

## **Installation Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

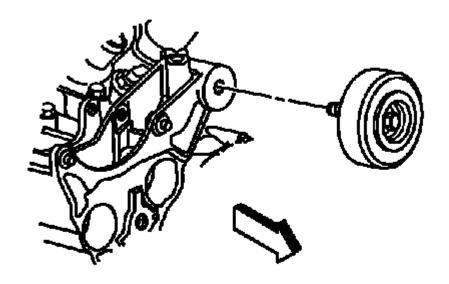


Fig. 16: Drive Belt Right Idler Pulley
Courtesy of GENERAL MOTORS COMPANY

- 1. Install the idler pulley.
- 2. Install the idler pulley bolt until snug.
- 3. Install the drive belt. Refer to **Drive Belt Replacement**.

**CAUTION: Refer to Fastener Caution**.

4. Tighten the idler pulley bolt to 50 N.m (37 lb ft).

## DRIVE BELT IDLER PULLEY REPLACEMENT - WITHOUT AIR CONDITIONING

#### **Removal Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

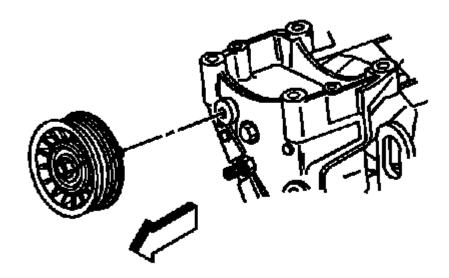


Fig. 17: Drive Belt Idler Pulley (W/O AC)
Courtesy of GENERAL MOTORS COMPANY

- 1. Loosen the idler pulley bolt.
- 2. Remove the drive belt. Refer to **Drive Belt Replacement**.
- 3. Remove the idler pulley.

## **Installation Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

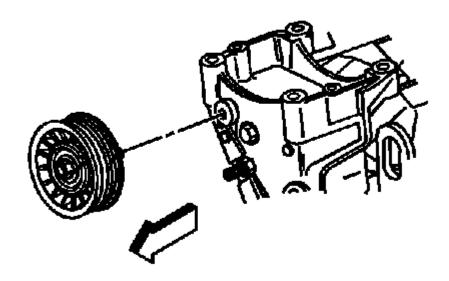


Fig. 18: Drive Belt Idler Pulley (W/O AC)
Courtesy of GENERAL MOTORS COMPANY

- 1. Install the idler pulley.
- 2. Install the idler pulley bolt until snug.
- 3. Install the drive belt. Refer to **Drive Belt Replacement**.

**CAUTION: Refer to Fastener Caution.** 

4. Tighten the idler pulley bolt to 50 N.m (37 lb ft).

## **ENGINE MOUNT INSPECTION**

**CAUTION: Refer to Engine Mounting Caution.** 

- 1. Raise and suitably support the vehicle. Refer to Lifting and Jacking the Vehicle.
- 2. Inspect for loose or missing bolts at the following locations:

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- Engine mount bracket to engine
- Engine mount frame bracket to frame
- Engine mount to engine mount bracket
- Engine mount to engine mount frame bracket
- 3. Replace missing or loose bolts.

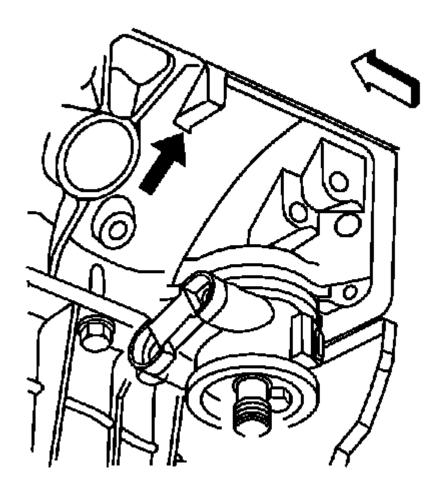


Fig. 19: View Of Square Tab At Rear Of Engine Block Courtesy of GENERAL MOTORS COMPANY

**CAUTION:** Refer to **Engine Lifting Caution**.

- 4. In order to access the square tab on the right side of the engine remove the starter. Refer to **Starter Replacement (V6)**.
- 5. Using a jack on the square tab at the rear of the engine block (left side shown) raise the engine in order to complete the following tasks:
  - Remove weight from the engine mount.
  - Place a slight tension on the rubber cushion.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- Observe the engine mount while raising the engine.
- 6. Replace the engine mount if the following conditions exist:
  - Heat check cracks cover the hard rubber surface.
  - The rubber cushion is separated from the metal plate of the engine mount.
  - There is a split through the rubber cushion.
- 7. Install the starter, if removed. Refer to, **Starter Replacement (V6)**.

#### ENGINE MOUNT REPLACEMENT - LEFT SIDE

#### Removal Procedure

**CAUTION: Refer to Engine Mounting Caution.** 

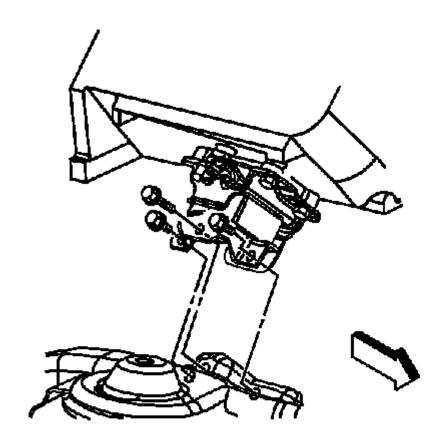


Fig. 20: View Of Right Side (Left Side Similar) Engine Mount To Engine Mount Bracket Bolts Courtesy of GENERAL MOTORS COMPANY

1. From under the hood, remove the engine mount to engine mount bracket bolts.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

2. Raise and suitably support the vehicle. Refer to <u>Lifting and Jacking the Vehicle</u>.


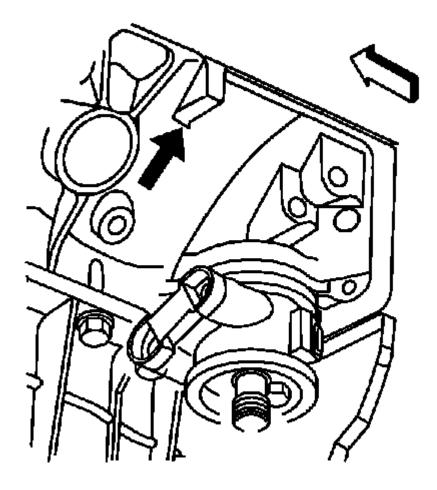


Fig. 21: View Of Square Tab At Rear Of Engine Block Courtesy of GENERAL MOTORS COMPANY

**CAUTION: Refer to Engine Lifting Caution**.

3. Using an adjustable jack on the square tab at the rear of the engine block, raise the engine.


2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

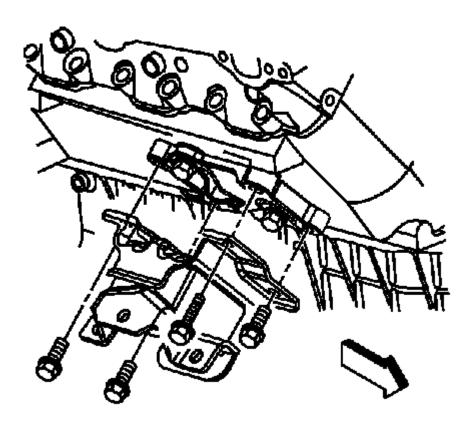

<u>Fig. 22: View Of Right Side (Left Side Similar) Engine Mount Bolts</u> Courtesy of GENERAL MOTORS COMPANY

- 4. Remove the engine mount bolts.
- 5. Remove the engine mount.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

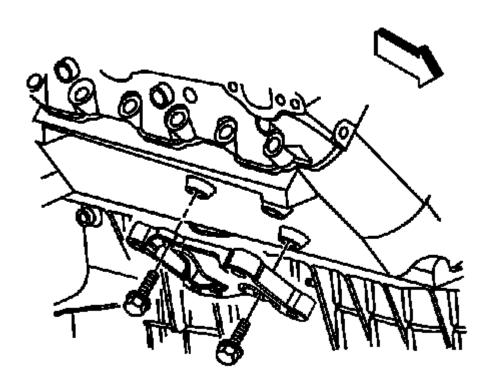

<u>Fig. 23: View Of Right Side (Left Side Similar) Engine Mount Side Bracket & Bolts Courtesy of GENERAL MOTORS COMPANY</u>

6. If equipped and necessary, remove the engine mount side bracket bolts and bracket.

## **Installation Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

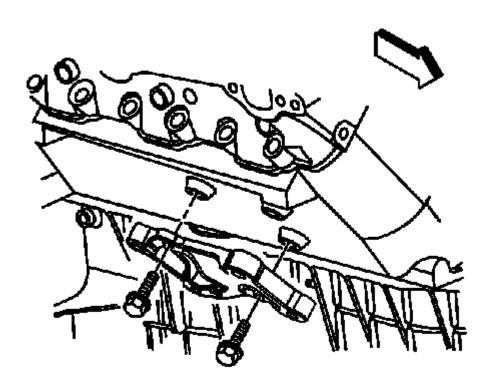



Fig. 24: View Of Right Side (Left Side Similar) Engine Mount Side Bracket & Bolts Courtesy of GENERAL MOTORS COMPANY

1. Position the engine mount side bracket to the engine, if removed and equipped.

**CAUTION: Refer to Fastener Caution**.

2. Install the engine mount side bracket bolts and tighten to 50 (37 lb ft).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

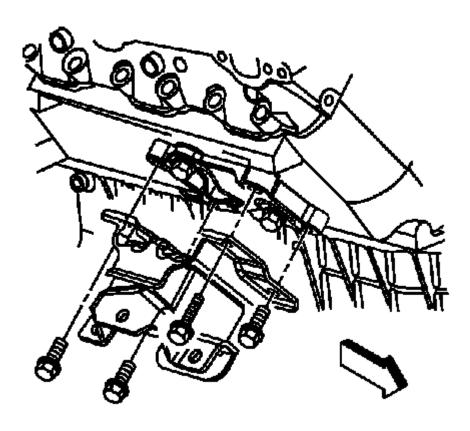

<u>Fig. 25: View Of Right Side (Left Side Similar) Engine Mount Bolts</u> Courtesy of GENERAL MOTORS COMPANY

- 3. Install the engine mount.
- 4. Install the engine mount bolts and tighten to 50 (37 lb ft).
- 5. Lower the engine.
- 6. Lower the vehicle.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

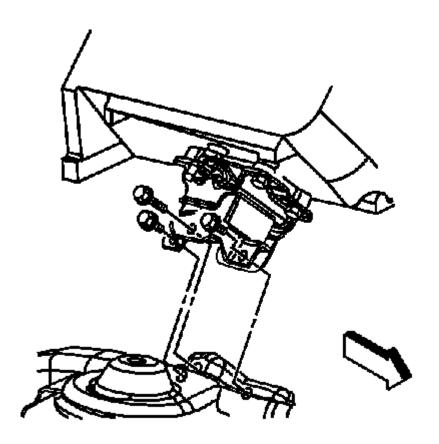


Fig. 26: View Of Right Side (Left Side Similar) Engine Mount To Engine Mount Bracket Bolts Courtesy of GENERAL MOTORS COMPANY

7. Install the engine mount to engine mount bracket bolts and tighten to 70 (52 lb ft).

## **ENGINE MOUNT REPLACEMENT - RIGHT SIDE**

#### **Removal Procedure**

**CAUTION: Refer to Engine Mounting Caution.** 

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


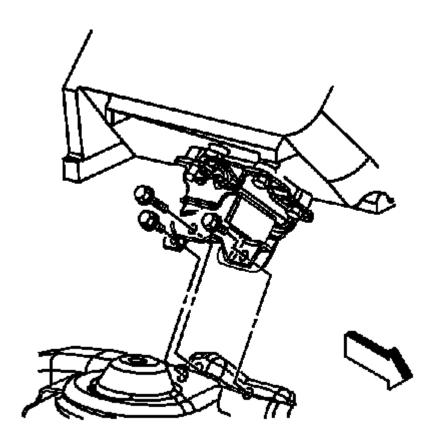


Fig. 27: View Of Right Side (Left Side Similar) Engine Mount To Engine Mount Bracket Bolts Courtesy of GENERAL MOTORS COMPANY

- 1. From under the hood, remove the engine mount to engine mount bracket bolts.
- 2. Raise and suitably support the vehicle. Refer to <u>Lifting and Jacking the Vehicle</u>.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

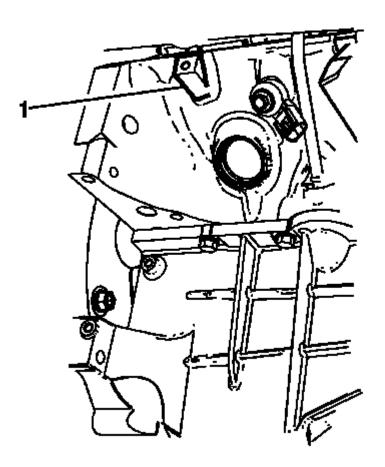


<u>Fig. 28: Starter And Bolts</u> Courtesy of GENERAL MOTORS COMPANY

3. Remove the starter. Refer to, **Starter Replacement (V6)**.

**CAUTION: Refer to Engine Lifting Caution.** 


4. Using an adjustable jack on the square tab (1) at the rear of the engine block, raise the engine. In order to access the square tab, remove the starter.

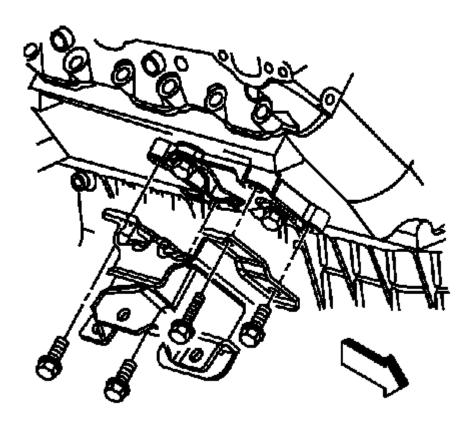

<u>Fig. 29: View Of Right Side (Left Side Similar) Engine Mount Bolts</u> Courtesy of GENERAL MOTORS COMPANY

- 5. Remove the engine mount bolts.
- 6. Remove the engine mount.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

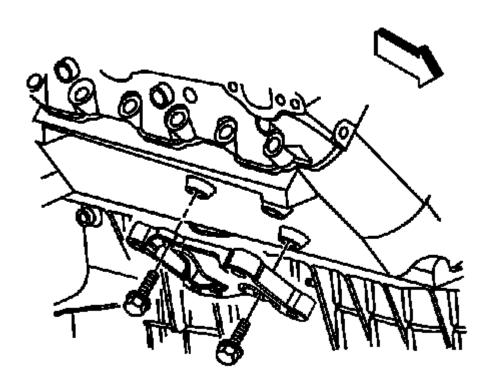

<u>Fig. 30: View Of Right Side (Left Side Similar) Engine Mount Side Bracket & Bolts Courtesy of GENERAL MOTORS COMPANY</u>

7. If necessary, remove the engine mount side bracket bolts and bracket.

### **Installation Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

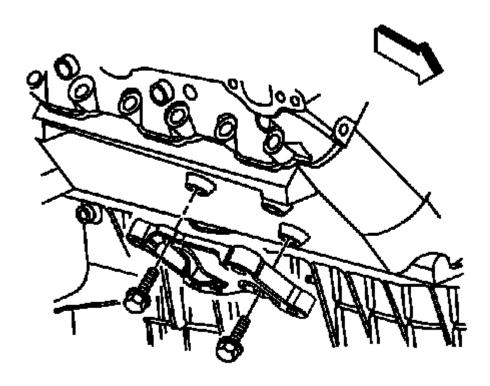


Fig. 31: View Of Right Side (Left Side Similar) Engine Mount Side Bracket & Bolts Courtesy of GENERAL MOTORS COMPANY

1. Position the engine mount side bracket to the engine, if removed.

**CAUTION: Refer to Fastener Caution.** 

2. Install the engine mount side bracket bolts and tighten to 50 N.m (37 lb ft).

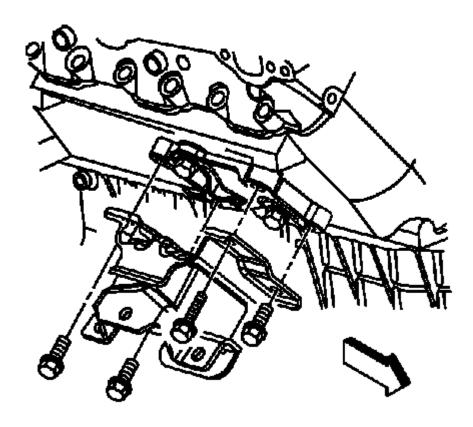


Fig. 32: View Of Right Side (Left Side Similar) Engine Mount Bolts Courtesy of GENERAL MOTORS COMPANY

- 3. Install the engine mount.
- 4. Install the engine mount bolts and tighten to 50 N.m (37 lb ft).
- 5. Lower the engine.
- 6. Install the starter. Refer to **Starter Replacement (V6)**.
- 7. Lower the vehicle.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

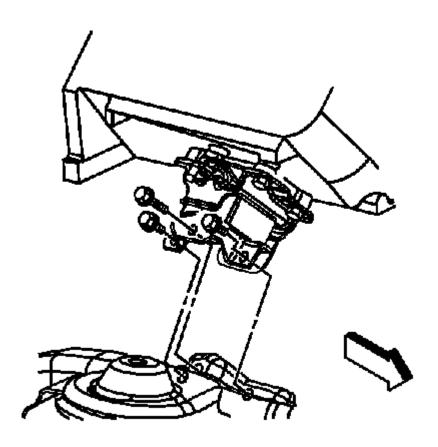


Fig. 33: View Of Right Side (Left Side Similar) Engine Mount To Engine Mount Bracket Bolts Courtesy of GENERAL MOTORS COMPANY

8. Install the engine mount to engine mount bracket bolts and tighten to 70 N.m (52 lb ft).

### ENGINE MOUNT ADAPTER REPLACEMENT

Removal Procedure

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

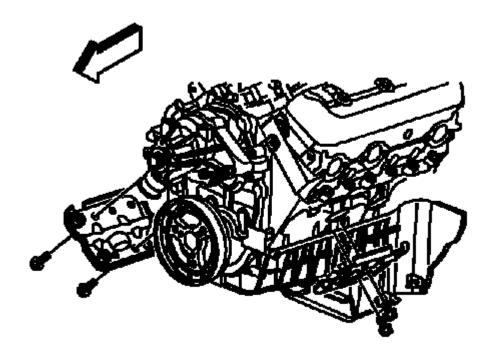


Fig. 34: Engine Mount Adapter Mounting Bolts Courtesy of GENERAL MOTORS COMPANY

- 1. Raise and support the vehicle. Refer to Lifting and Jacking the Vehicle.
- 2. Remove the engine mount. Refer to **Engine Mount Replacement Left Side** or **Engine Mount Replacement Right Side**.
- 3. Remove the engine mount adapter mounting bolts.
- 4. Remove the engine mount adapter.

#### **Installation Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

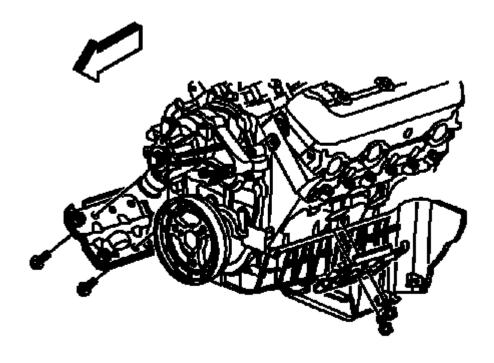


Fig. 35: Engine Mount Adapter Mounting Bolts Courtesy of GENERAL MOTORS COMPANY

1. Install the engine mount adapter.

**CAUTION: Refer to Fastener Caution.** 

- 2. Install the engine mount adapter mounting bolts and tighten to 50 N.m (37 lb ft).
- 3. Install the engine mount. Refer to **Engine Mount Replacement Left Side** or **Engine Mount Replacement Right Side**.
- 4. Lower the vehicle.

### OIL FILLER TUBE REPLACEMENT

#### **Removal Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

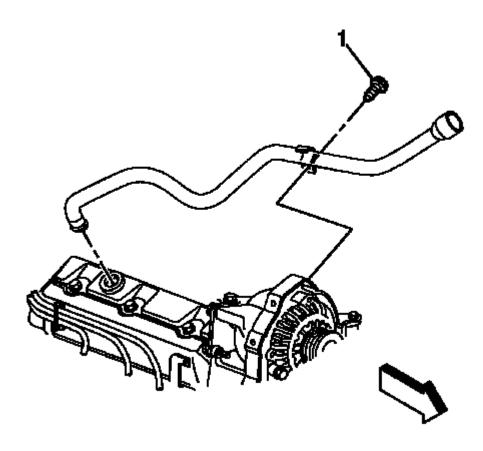


Fig. 36: View Oil Fill Tube Bolt Courtesy of GENERAL MOTORS COMPANY

- 1. Remove the engine cover. Refer to **Engine Cover Replacement**.
- 2. Remove the oil fill tube bolt (1).
- 3. Remove the oil fill tube.

### **Installation Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

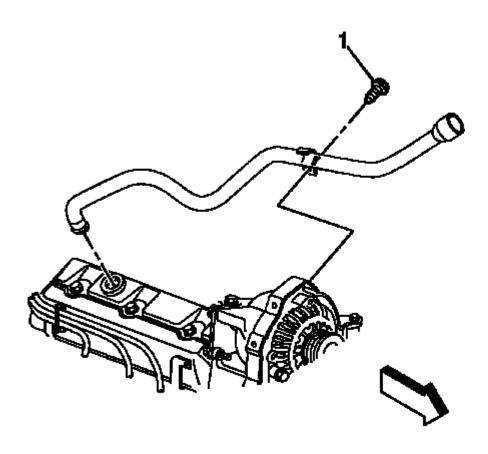


Fig. 37: View Oil Fill Tube Bolt Courtesy of GENERAL MOTORS COMPANY

1. Install the oil fill tube.

**CAUTION: Refer to Fastener Caution.** 

- 2. Install the oil fill tube bolt (1) and tighten to 21 N.m (15 lb ft).
- 3. Install the engine cover. Refer to **Engine Cover Replacement**.

### UPPER INTAKE MANIFOLD REPLACEMENT

#### Removal Procedure

- 1. Remove the engine cover. Refer to **Engine Cover Replacement**.
- 2. Remove the air cleaner assembly. Refer to Air Cleaner Assembly Replacement.
- 3. Remove the fuel pipes/hoses. Refer to **Fuel Line Replacement Engine**.
- 4. Disconnect the air conditioning (A/C) compressor clutch, if equipped.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

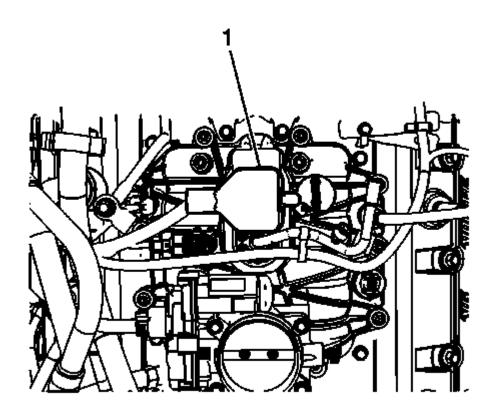


Fig. 38: View Of Control Port Injector Module Courtesy of GENERAL MOTORS COMPANY

5. Disconnect the control port injector module (1).

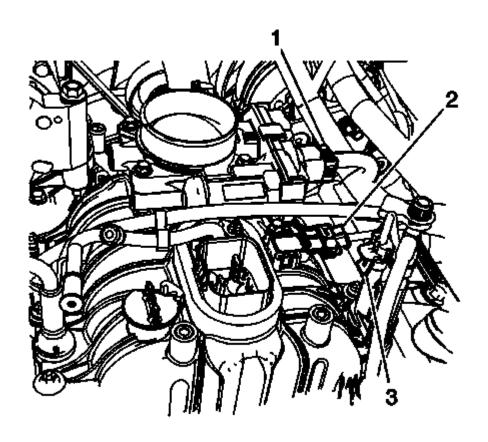


Fig. 39: View Of Throttle Body Actuator, Manifold Absolute Pressure (MAP) Sensor & Evaporative Emission (EVAP) Canister Purge Solenoid Valve Courtesy of GENERAL MOTORS COMPANY

- 6. Disconnect the following electrical connectors:
  - The throttle body actuator (1)
  - The manifold absolute pressure (MAP) sensor (2)
  - The evaporative emission (EVAP) canister purge solenoid valve (3)

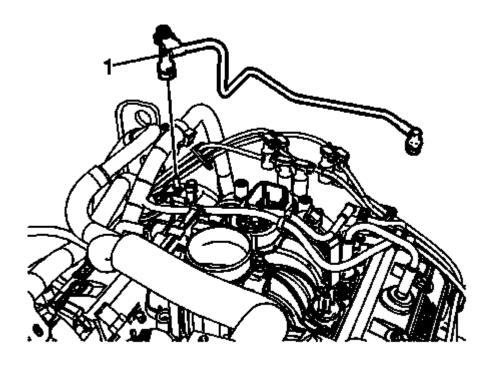


Fig. 40: View Of Tube Quick Connect Fitting Courtesy of GENERAL MOTORS COMPANY

- 7. Disconnect EVAP canister purge solenoid valve tube quick connect fitting (1) from the EVAP purge solenoid valve. Refer to <u>Plastic Collar Quick Connect Fitting Service</u>.
- 8. Reposition the tube out of the way.

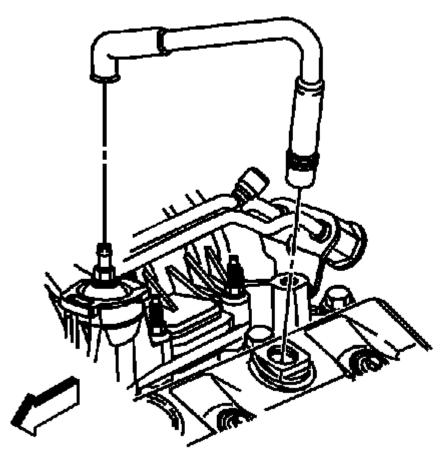


Fig. 41: Locating PCV Valve Hose At Valve & Rocker Cover Courtesy of GENERAL MOTORS COMPANY

- 9. Remove the positive crankcase ventilation (PCV) valve hose from the valve and rocker cover.
- 10. Reposition the engine wiring harness aside.
- 11. Disconnect the power brake booster vacuum hose from the vacuum fitting.


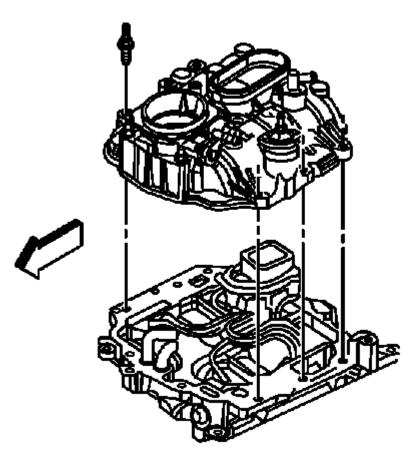


Fig. 42: Upper Intake Manifold Courtesy of GENERAL MOTORS COMPANY

- 12. Remove the intake manifold upper studs.
- 13. Remove the front 2 throttle body studs.
- 14. Remove the intake manifold upper.


2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

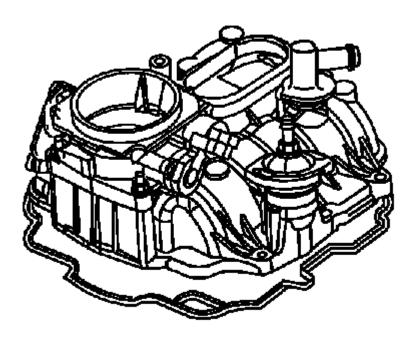

<u>Fig. 43: Intake Manifold Upper Gasket</u> Courtesy of GENERAL MOTORS COMPANY


15. Remove and discard the intake manifold - upper gasket.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

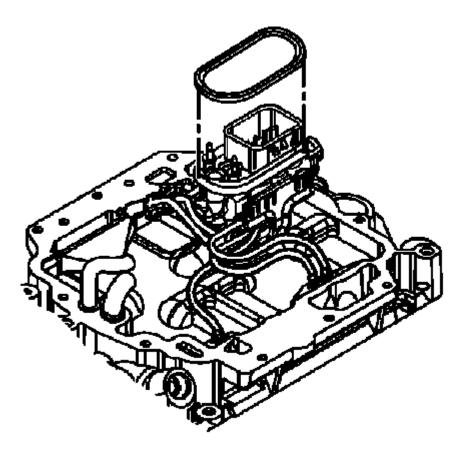

<u>Fig. 44: Fuel Meter Body O-Ring Seal</u> Courtesy of GENERAL MOTORS COMPANY

16. Remove and discard the O-ring seal from the fuel meter body.

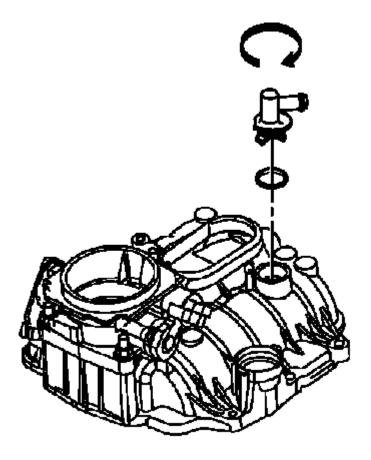

<u>Fig. 45: View Of Power Brake Booster Vacuum O-Ring Seal</u> Courtesy of GENERAL MOTORS COMPANY

- 17. If required, remove the power brake booster vacuum fitting.
- 18. Remove and discard the O-ring seal.

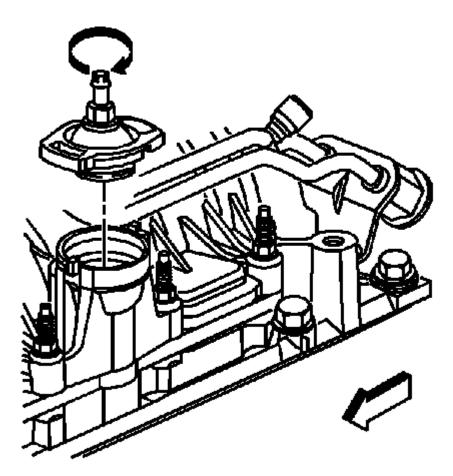


Fig. 46: PCV Valve Cover Courtesy of GENERAL MOTORS COMPANY

- 19. If required, remove the PCV valve cover.
- 20. Remove and discard the O-ring seal.

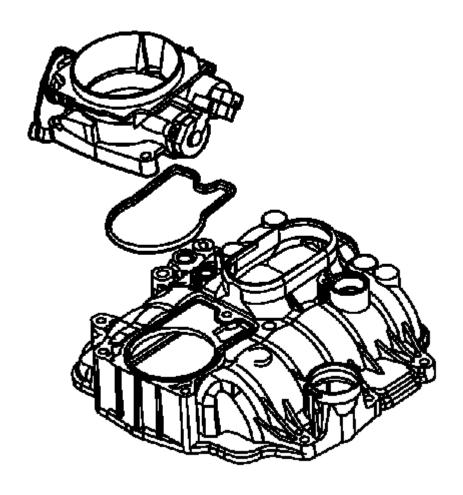


Fig. 47: View Of Throttle Body & Gasket Courtesy of GENERAL MOTORS COMPANY

- 21. If required, remove the rear throttle body stud.
- 22. Remove the throttle body.
- 23. Remove and discard the throttle body gasket.

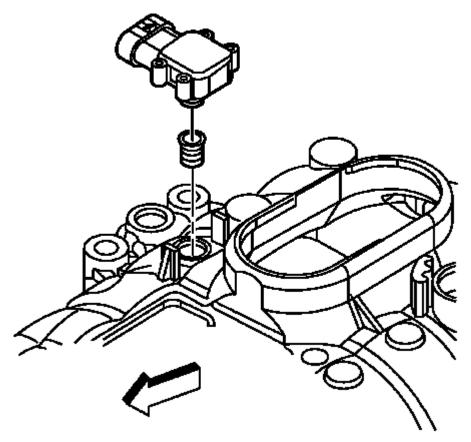


Fig. 48: MAP Sensor Courtesy of GENERAL MOTORS COMPANY

- 24. If required, remove the MAP sensor.
- 25. Remove and discard the MAP sensor seal.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

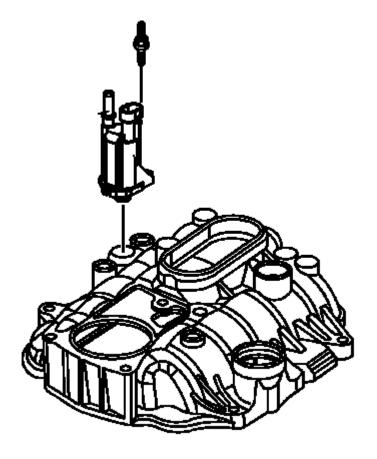


Fig. 49: Purge Solenoid & Nut Courtesy of GENERAL MOTORS COMPANY

- 26. If required, remove the EVAP canister purge solenoid valve studs.
- 27. Remove the purge solenoid valve.
- 28. Clean and inspect the intake manifold upper, if necessary. Refer to <u>Intake Manifold Cleaning and Inspection</u>.

### **Installation Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

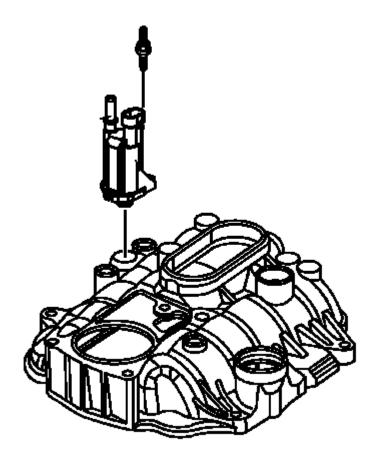


Fig. 50: Purge Solenoid & Nut Courtesy of GENERAL MOTORS COMPANY

1. If required, install the purge solenoid valve.

**CAUTION: Refer to Fastener Caution.** 

2. Install the EVAP canister purge solenoid valve studs. If reusing the old studs, apply threadlock to the threads. Refer to <u>Adhesives, Fluids, Lubricants and Sealers</u> for the correct part number. Tighten the studs to 10 N.m (89 lb in).

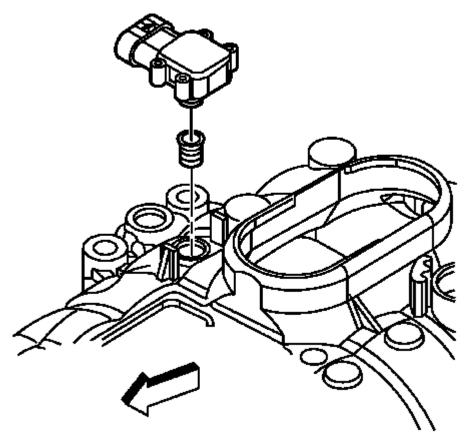


Fig. 51: MAP Sensor Courtesy of GENERAL MOTORS COMPANY

- 3. If required, install a NEW MAP sensor seal. Apply a small drop of clean engine oil to the seal.
- 4. Install the MAP sensor.

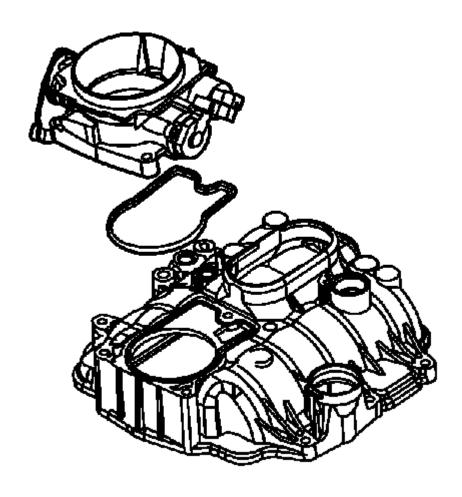


Fig. 52: View Of Throttle Body & Gasket Courtesy of GENERAL MOTORS COMPANY

- 5. If required, install a NEW throttle body gasket.
- 6. Install the throttle body.
- 7. Install the rear throttle body stud. If reusing the old stud, apply threadlock to the threads. Refer to **Adhesives, Fluids, Lubricants and Sealers** for the correct part number. Tighten the stud to 9 N.m (80 lb in).


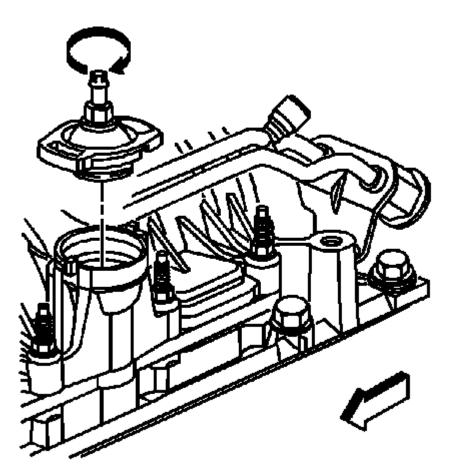


Fig. 53: PCV Valve Cover Courtesy of GENERAL MOTORS COMPANY


- 8. If required, install a NEW O-ring seal to the PCV cover. Apply clean engine oil to the seal.
- 9. Install the PCV valve cover.

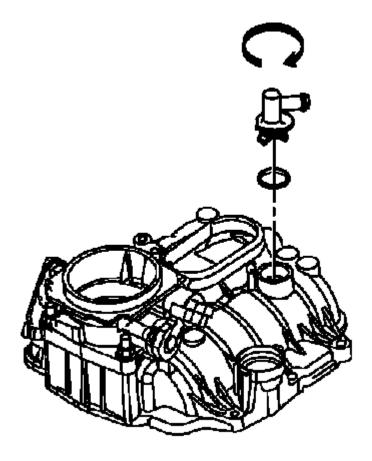

<u>Fig. 54: View Of Power Brake Booster Vacuum O-Ring Seal</u> Courtesy of GENERAL MOTORS COMPANY

- 10. If required, install a NEW O-ring seal. Apply clean engine oil to the seal.
- 11. Install the power brake booster vacuum fitting.


2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

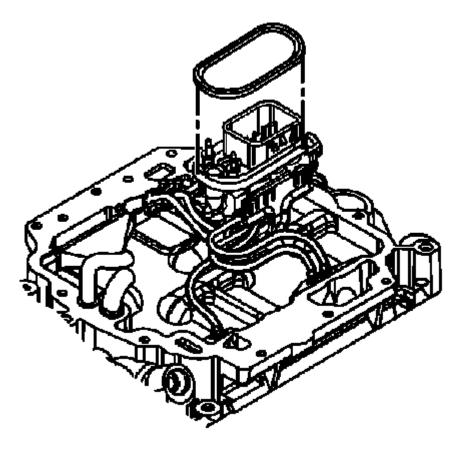

<u>Fig. 55: Fuel Meter Body O-Ring Seal</u> Courtesy of GENERAL MOTORS COMPANY

12. Install a NEW O-ring seal to the fuel meter body.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

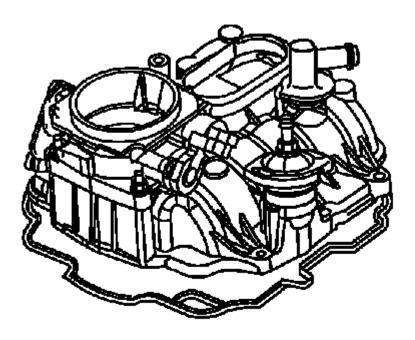

<u>Fig. 56: Intake Manifold Upper Gasket</u> Courtesy of GENERAL MOTORS COMPANY

13. Install a NEW upper intake manifold gasket.

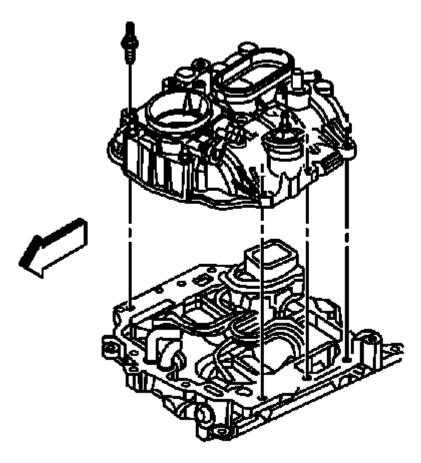


Fig. 57: Upper Intake Manifold Courtesy of GENERAL MOTORS COMPANY

- 14. Install the intake manifold upper.
- 15. If reusing the old throttle body/intake manifold studs, apply threadlock to the threads. Refer to <u>Adhesives</u>, <u>Fluids</u>, <u>Lubricants and Sealers</u> for the correct part number.
- 16. Install the front two throttle body studs.
- 17. Install the intake manifold upper studs and tighten.
  - 1. Tighten first pass to 5 N.m (44 lb in).
  - 2. Tighten second pass to 9 N.m (80 lb in).
- 18. Connect the power brake booster vacuum hose to the vacuum fitting.

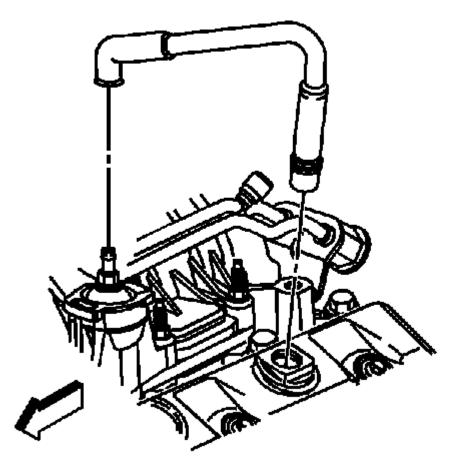


Fig. 58: Locating PCV Valve Hose At Valve & Rocker Cover Courtesy of GENERAL MOTORS COMPANY

- 19. Position the engine wiring harness.
- 20. Install the PCV valve hose to the valve cover and rocker cover.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

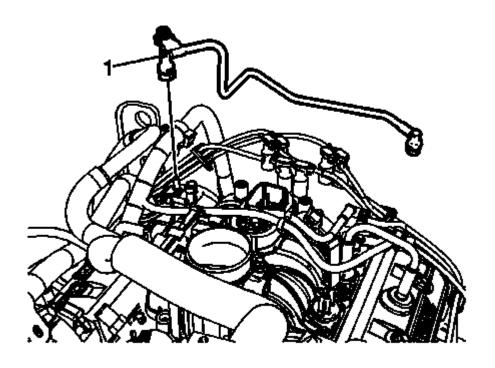


Fig. 59: View Of Tube Quick Connect Fitting Courtesy of GENERAL MOTORS COMPANY

21. Position the EVAP canister purge solenoid tube and connect the tube quick connect fitting (1) to the EVAP purge solenoid valve. Refer to <u>Plastic Collar Quick Connect Fitting Service</u>.

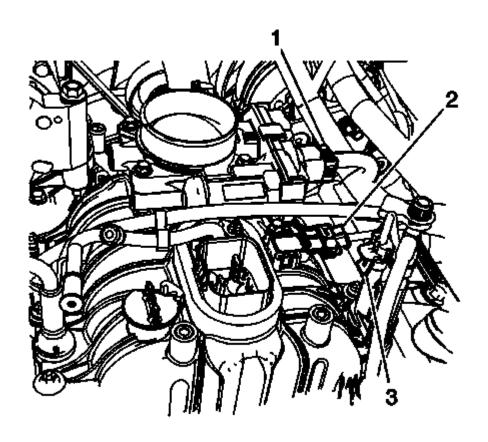


Fig. 60: View Of Throttle Body Actuator, Manifold Absolute Pressure (MAP) Sensor & Evaporative Emission (EVAP) Canister Purge Solenoid Valve Courtesy of GENERAL MOTORS COMPANY

- 22. Connect the following electrical connectors:
  - The EVAP canister purge solenoid valve (3)
  - The MAP sensor (2)
  - The throttle body actuator (1)

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

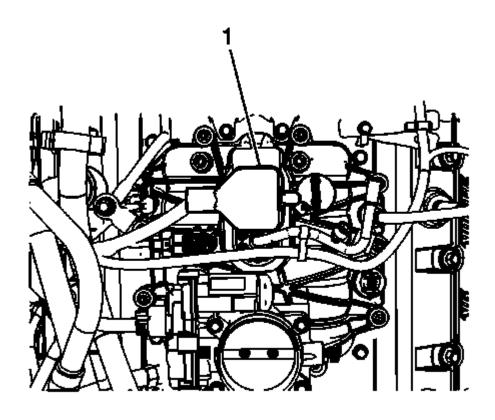


Fig. 61: View Of Control Port Injector Module Courtesy of GENERAL MOTORS COMPANY

- 23. Connect the control port injector module (1).
- 24. Connect the A/C compressor clutch, if equipped.
- 25. Install the fuel pipes/hoses. Refer to Fuel Line Replacement Engine.
- 26. Install the air cleaner assembly. Refer to Air Cleaner Assembly Replacement.
- 27. Install the engine cover. Refer to Engine Cover Replacement.

### LOWER INTAKE MANIFOLD REPLACEMENT

### Removal Procedure

# NOTE:

- The intake manifold may be removed as an assembly. Do not remove the specific intake manifold components unless component service is required.
- It is not necessary to remove the upper intake manifold in order to remove the lower intake manifold.
- Do not allow dirt or debris to enter the fuel system. Ensure that the ends of the fuel system are properly sealed.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- Do not disassemble the central sequential fuel injection (SFI) unit, unless service is required.
- 1. Remove the engine cover. Refer to **Engine Cover Replacement**.
- 2. Remove the air cleaner assembly. Refer to Air Cleaner Assembly Replacement.
- 3. Drain the cooling system. Refer to <u>Cooling System Draining and Filling (Static Fill)</u>, <u>Cooling System Draining and Filling (Vac N Fill)</u>.
- 4. Remove the fuel pipes/hoses. Refer to Fuel Line Replacement Engine.
- 5. Remove the ignition coil assembly. Refer to **Ignition Coil Replacement** .
- 6. Remove the evaporative emission (EVAP) canister tube. Refer to **Evaporative Emission Line Replacement Engine**.

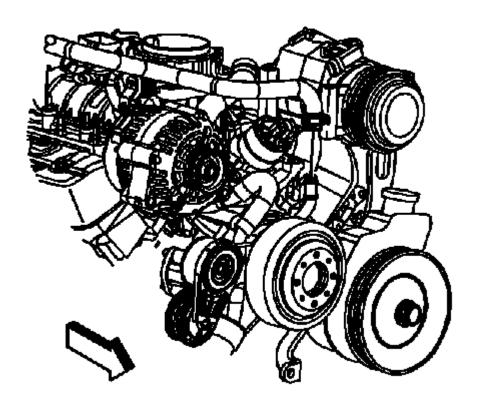


Fig. 62: Intake Manifold Hose Courtesy of GENERAL MOTORS COMPANY

7. Open the heater outlet hose clamp and remove the hose from the intake manifold.

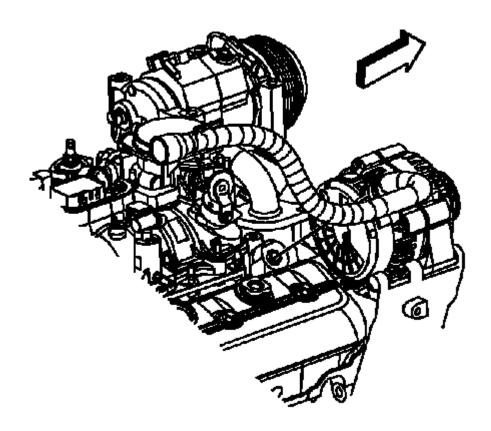


Fig. 63: Heater Inlet Hose At Water Pump Courtesy of GENERAL MOTORS COMPANY

- 8. Open the heater inlet hose clamp and remove the hose from the water pump.
- 9. Reposition the heater inlet and outlet hoses.

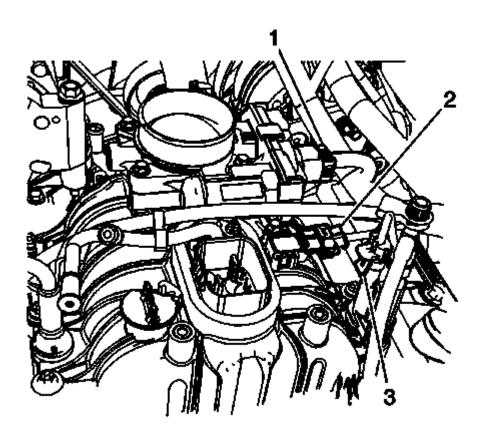


Fig. 64: View Of Throttle Body Actuator, Manifold Absolute Pressure (MAP) Sensor & Evaporative Emission (EVAP) Canister Purge Solenoid Valve Courtesy of GENERAL MOTORS COMPANY

- 10. Disconnect the following electrical connectors:
  - The throttle body actuator (1)
  - The manifold absolute pressure (MAP) sensor (2)
  - The evaporative emission (EVAP) canister purge solenoid valve (3)
- 11. Disconnect the A/C pressure switch, if equipped.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


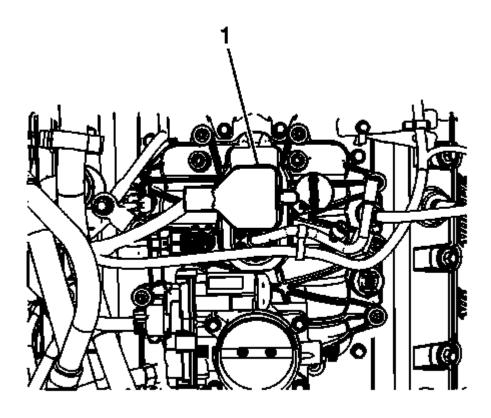


Fig. 65: View Of Control Port Injector Module Courtesy of GENERAL MOTORS COMPANY

12. Disconnect the control port injector module (1).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

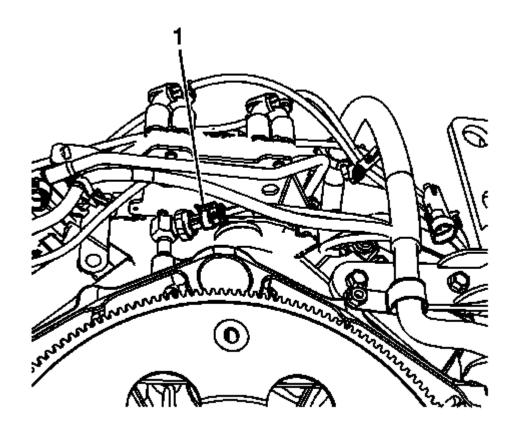

<u>Fig. 66: View Of Oil Pressure Sensor Electrical Connector</u> Courtesy of GENERAL MOTORS COMPANY

13. Disconnect the oil pressure sensor electrical connector (1).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

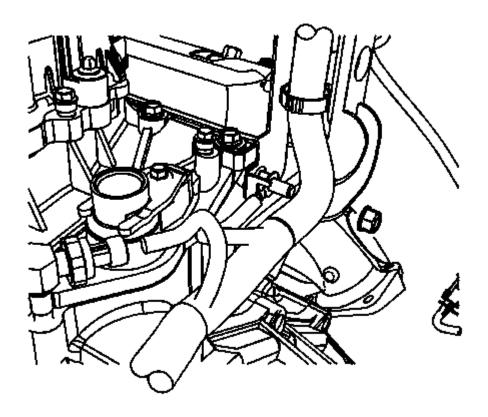


Fig. 67: Engine Wiring Harness Ground Nut Courtesy of GENERAL MOTORS COMPANY

14. Remove the engine wiring harness ground nut and ground wire (1) from the rear of the right cylinder head.


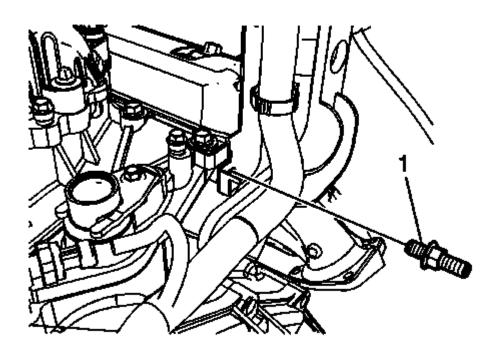


Fig. 68: Engine Wiring Harness Bracket Stud Courtesy of GENERAL MOTORS COMPANY

- 15. Remove the stud (1) holding the engine wiring harness bracket.
- 16. Reposition the engine wiring harness with the bracket aside.

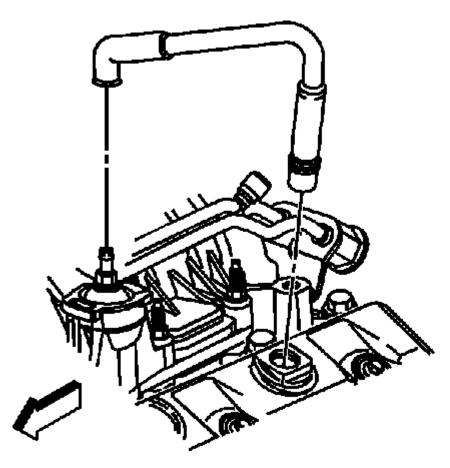

<u>Fig. 69: Locating PCV Valve Hose At Valve & Rocker Cover</u> Courtesy of GENERAL MOTORS COMPANY

- 17. Remove the positive crankcase ventilation (PCV) valve hose from the valve cover and rocker cover.
- 18. Disconnect the power brake booster vacuum hose from the vacuum fitting.

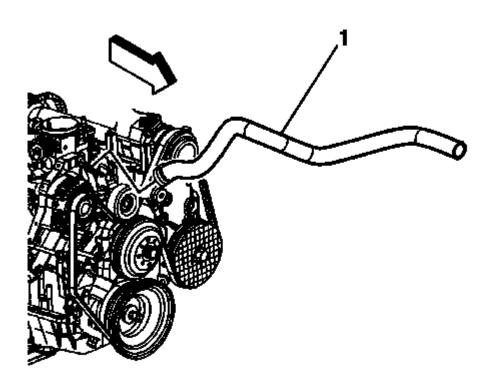


Fig. 70: View Of Radiator Inlet Hose Courtesy of GENERAL MOTORS COMPANY

- 19. Reposition the radiator inlet hose clamps.
- 20. Remove the radiator inlet hose (1) from the thermostat housing.

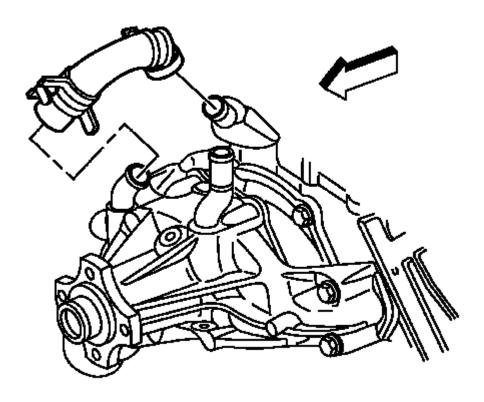


Fig. 71: View Of Water Pump Inlet Hose & Clamps Courtesy of GENERAL MOTORS COMPANY

- 21. Reposition the water pump inlet hose clamps.
- 22. Remove the water pump inlet hose.

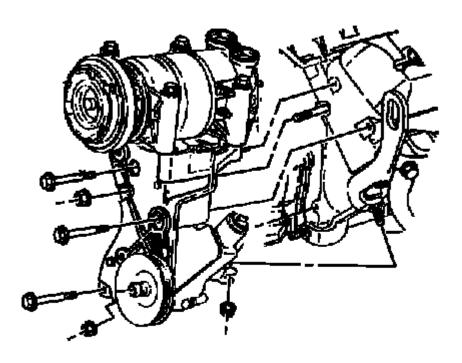


Fig. 72: View Of Power Steering Pump Bracket Courtesy of GENERAL MOTORS COMPANY

- 23. In order to remove the front intake manifold bolt, perform the following:
  - 1. Remove the drive belt. Refer to **Drive Belt Replacement**.
  - 2. Loosen the power steering (P/S) pump rear bracket nut.
  - 3. Remove the P/S pump rear bracket front nut.
  - 4. Remove the bolts and the nut for the P/S pump bracket.
  - 5. Leave the A/C compressor, if equipped and the P/S pump on the bracket.
  - 6. Slide the P/S pump bracket forward to access the front intake manifold bolt.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

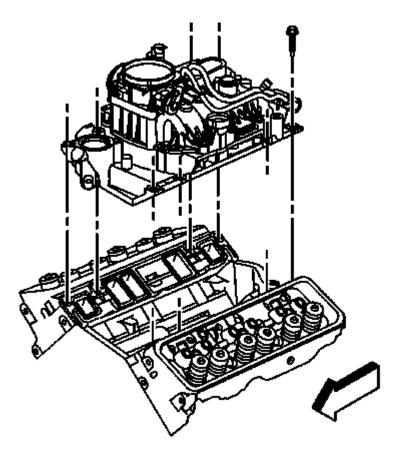



Fig. 73: Intake Manifold Courtesy of GENERAL MOTORS COMPANY

- 24. Remove the intake manifold lower bolts.
- 25. Remove the intake manifold.
- 26. Remove and discard the intake manifold gaskets.
- 27. Clean and inspect the intake manifold lower, if necessary. Refer to <u>Intake Manifold Cleaning and Inspection</u>.

#### **Installation Procedure**

CAUTION: Apply the proper amount of the sealant when assembling this component. Excessive use of the sealant can prohibit the component from sealing properly. A component that is not sealed properly can leak leading to extensive engine damage.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

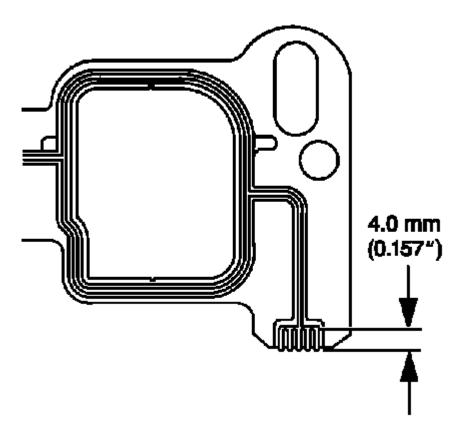


<u>Fig. 74: Applying Patch Of Adhesive To Cylinder Head Side Of Intake Manifold Gasket Courtesy of GENERAL MOTORS COMPANY</u>

NOTE: The intake manifold gasket must be installed while the adhesive is still wet to the touch.

- 1. Apply a 4.0 mm (0.157 in) patch of adhesive to the cylinder head side of the intake manifold gasket at each end. Refer to **Adhesives, Fluids, Lubricants and Sealers** for the correct part number.
- 2. Install the intake manifold gasket onto the cylinder head. Use the gasket locating pins in order to properly seat the gasket.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

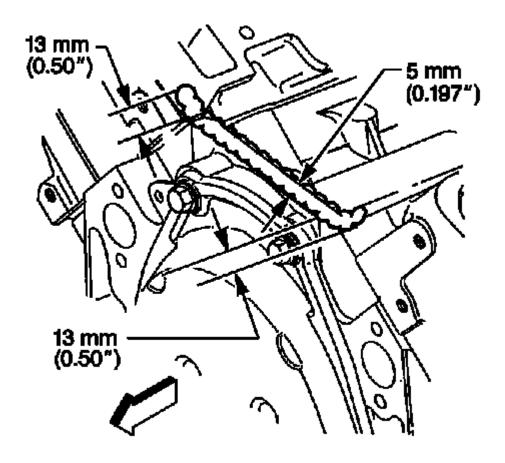

<u>Fig. 75: Applying Adhesive To Front Top Of Engine Block</u> Courtesy of GENERAL MOTORS COMPANY

NOTE: The intake manifold must be installed and the fasteners tightened while the adhesive is still wet to the touch.

- 3. Apply a 5 mm (0.197 in) bead of adhesive to the front top of the engine block. Refer to <u>Adhesives</u>, <u>Fluids</u>, <u>Lubricants and Sealers</u> for the correct part number.
- 4. Extend the adhesive bead 13 mm (0.50 in) up onto each intake manifold gasket.

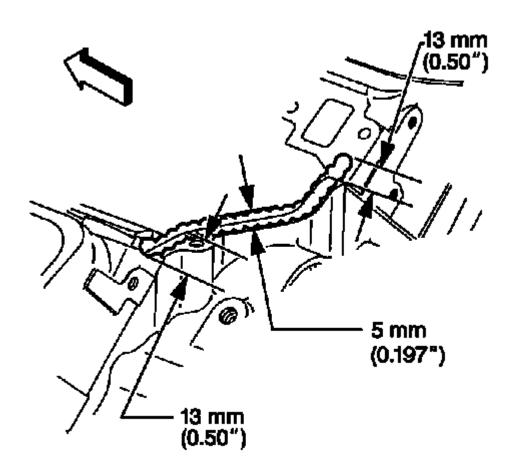


Fig. 76: Applying Adhesive To Rear Top Of Engine Block **Courtesy of GENERAL MOTORS COMPANY** 

- 5. Apply a 5 mm (0.197 in) bead of adhesive to the rear top of the engine block. Refer to Adhesives, Fluids, <u>Lubricants and Sealers</u> for the correct part number.
- 6. Extend the adhesive bead 13 mm (0.50 in) up onto each intake manifold gasket.


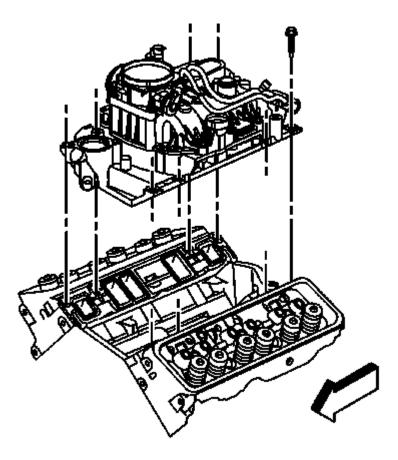


Fig. 77: Intake Manifold Courtesy of GENERAL MOTORS COMPANY

- 7. Install the intake manifold.
- 8. If reusing the old fasteners, apply threadlock to the threads of the intake manifold lower bolts. Refer to **Adhesives, Fluids, Lubricants and Sealers** for the correct part number.
- 9. Install the intake manifold lower bolts.

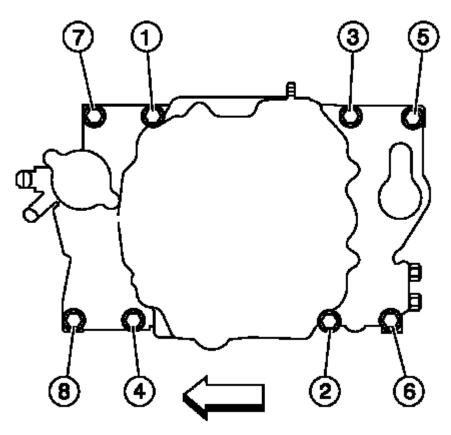

<u>Fig. 78: Intake Manifold Lower Bolt Tightening Sequence</u> Courtesy of GENERAL MOTORS COMPANY

CAUTION: Proper lower intake manifold fastener tightening sequence and torque is critical. Always follow the tightening sequence and torque the intake manifold bolts using the 3 step method. Failing to do so may distort the crankshaft bearing bore alignment and cause damage to the crankshaft bearings.

**CAUTION: Refer to Fastener Caution.** 

- 10. Tighten the intake manifold lower bolts in the sequence shown.
  - 1. Tighten the bolts a first pass to 3 N.m (27 lb in).
  - 2. Tighten the bolts a second pass to 12 N.m (106 lb in).
  - 3. Tighten the bolts a final pass to 15 N.m (11 lb ft).

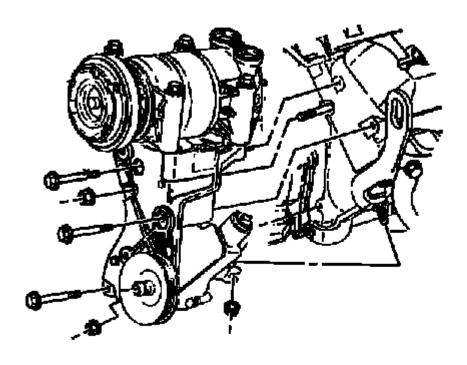


Fig. 79: View Of Power Steering Pump Bracket Courtesy of GENERAL MOTORS COMPANY

- 11. Slide the P/S pump bracket rearward.
- 12. Install the bolts and the nut for the P/S pump bracket.
- 13. Install the P/S pump rear bracket front nut.
- 14. Tighten the P/S pump rear bracket nuts and bolts to 41 N.m (30 lb ft).
- 15. Install the drive belt. Refer to **Drive Belt Replacement**.

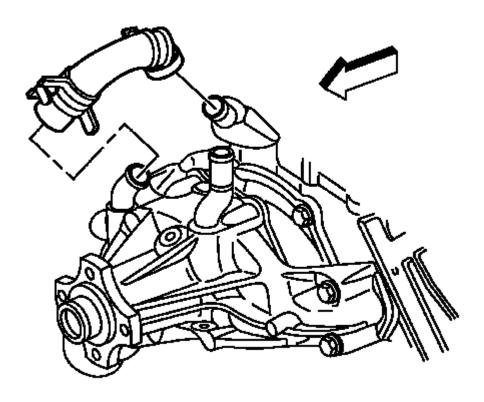


Fig. 80: View Of Water Pump Inlet Hose & Clamps Courtesy of GENERAL MOTORS COMPANY

- 16. Install the water pump inlet hose.
- 17. Position the water pump inlet hose clamps.

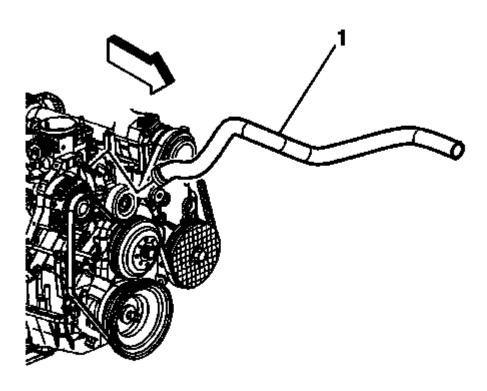


Fig. 81: View Of Radiator Inlet Hose Courtesy of GENERAL MOTORS COMPANY

- 18. Install the radiator inlet hose (1) to the thermostat housing.
- 19. Position the radiator inlet hose clamps.
- 20. Connect the power brake booster vacuum hose to the vacuum fitting.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

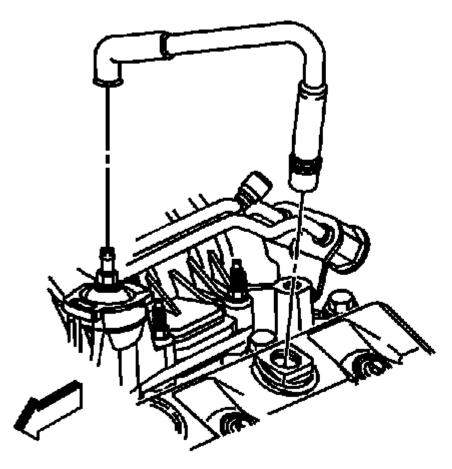


Fig. 82: Locating PCV Valve Hose At Valve & Rocker Cover Courtesy of GENERAL MOTORS COMPANY

21. Install the PCV valve hose to the valve cover and rocker cover.

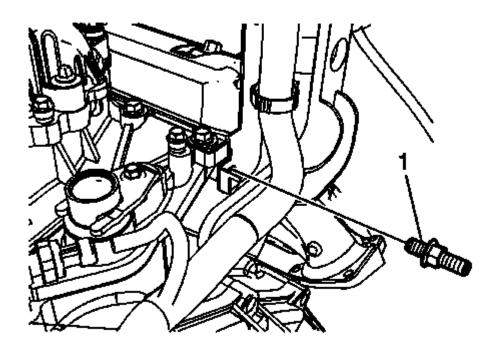


Fig. 83: Engine Wiring Harness Bracket Stud Courtesy of GENERAL MOTORS COMPANY

- 22. Position the engine wiring harness and bracket.
- 23. Install the engine wiring harness bracket stud (1) and tighten to 25 N.m (18 lb ft).
- 24. Install the engine wiring harness rear bracket nut at the EVAP canister purge solenoid valve and tighten to 9 N.m (80 lb in).

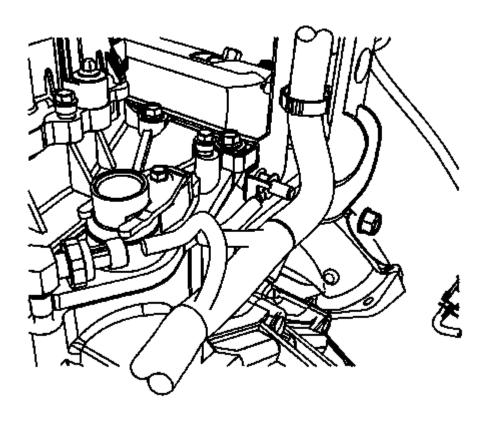


Fig. 84: Engine Wiring Harness Ground Nut Courtesy of GENERAL MOTORS COMPANY

- 25. Install the engine wiring harness ground nut and ground wire (1) to the rear of the right cylinder head and tighten to 16 N.m (12 lb ft).
- 26. Install the EVAP canister tube. Refer to **Evaporative Emission Line Replacement Engine**.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

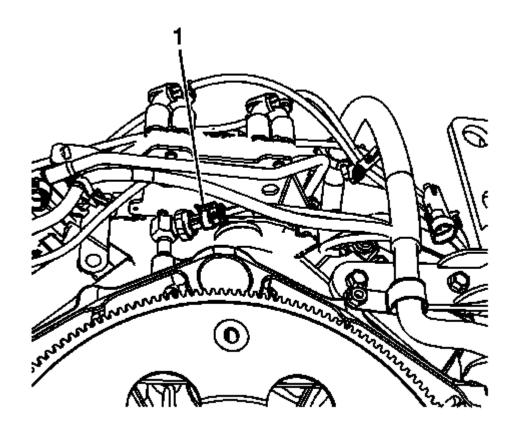


Fig. 85: View Of Oil Pressure Sensor Electrical Connector Courtesy of GENERAL MOTORS COMPANY

27. Connect the oil pressure sensor electrical connector (1).

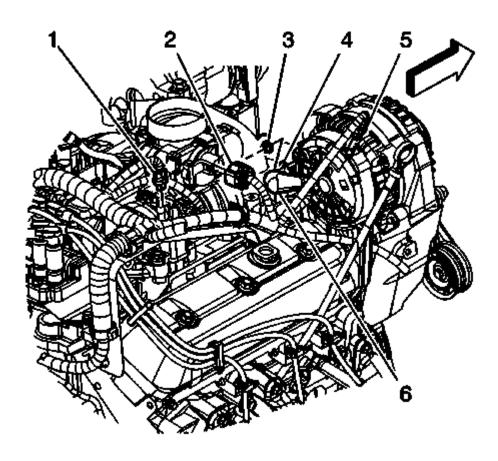


Fig. 86: View Of Engine Wiring Harness & Components Courtesy of GENERAL MOTORS COMPANY

- 28. Connect the following electrical connectors:
  - The EVAP canister purge solenoid valve (1)
  - The MAP sensor

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

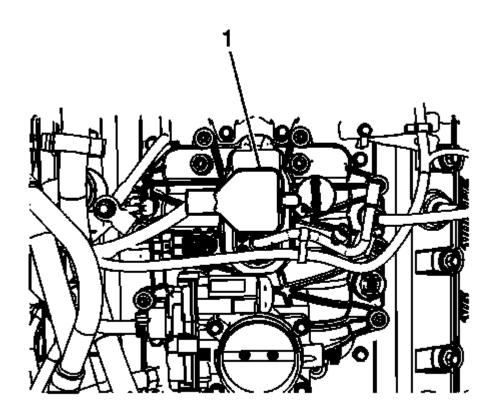


Fig. 87: View Of Control Port Injector Module Courtesy of GENERAL MOTORS COMPANY

29. Connect the control port injector module (1).

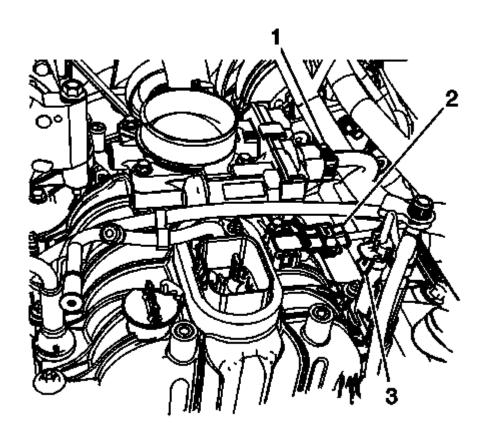


Fig. 88: View Of Throttle Body Actuator, Manifold Absolute Pressure (MAP) Sensor & Evaporative Emission (EVAP) Canister Purge Solenoid Valve Courtesy of GENERAL MOTORS COMPANY

- 30. Connect A/C compressor clutch, if equipped.
- 31. Connect the following electrical connectors:
  - The EVAP canister purge solenoid valve (3)
  - The MAP sensor (2)
  - The throttle body actuator (1)

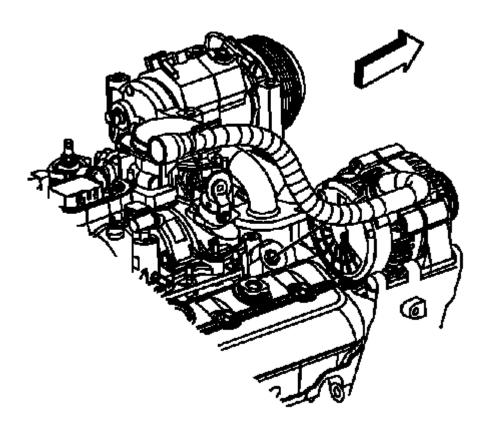


Fig. 89: Heater Inlet Hose At Water Pump Courtesy of GENERAL MOTORS COMPANY

- 32. Position the heater inlet and outlet hoses.
- 33. Open the heater inlet hose clamp and install the hose to the water pump.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

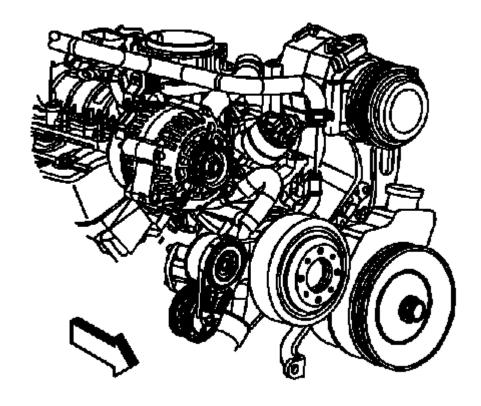


Fig. 90: Intake Manifold Hose Courtesy of GENERAL MOTORS COMPANY

- 34. Open the heater outlet hose clamp and install the hose to the intake manifold.
- 35. Install the fuel pipes/hoses. Refer to **Fuel Line Replacement Engine**.
- 36. Install the ignition coil assembly. Refer to **Ignition Coil Replacement** .
- 37. Fill the cooling system. Refer to <u>Cooling System Draining and Filling (Static Fill)</u>, <u>Cooling System Draining and Filling (Vac N Fill)</u>.
- 38. Install the air cleaner assembly. Refer to **Air Cleaner Assembly Replacement**.
- 39. Install the engine cover. Refer to Engine Cover Replacement.

### VALVE ROCKER ARM COVER REPLACEMENT - LEFT SIDE

#### **Removal Procedure**

1. Remove the engine cover. Refer to **Engine Cover Replacement**.

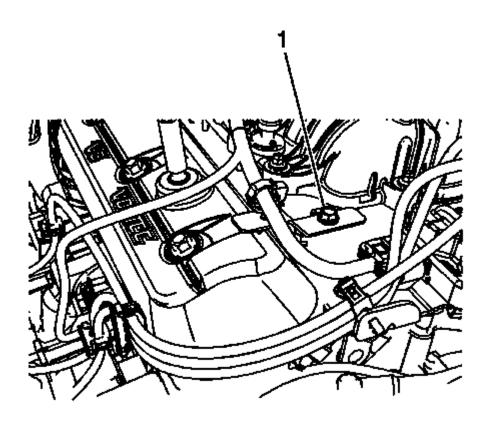


Fig. 91: View Coil Wiring Harness Bracket Nut Courtesy of GENERAL MOTORS COMPANY

- 2. Remove the coil wiring harness bracket nut (1).
- 3. Remove the coil wiring harness bracket and set aside.

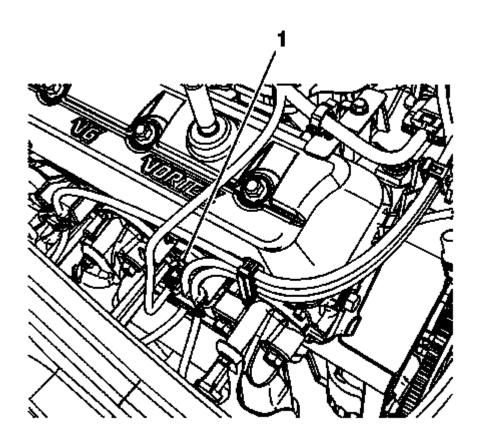


Fig. 92: View Of Engine Coolant Temperature (ECT) Sensor Electrical Connector Courtesy of GENERAL MOTORS COMPANY

- 4. Disconnect the engine coolant temperature (ECT) sensor electrical connector (1).
- 5. Disconnect the power brake booster vacuum hose from the vacuum fitting.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

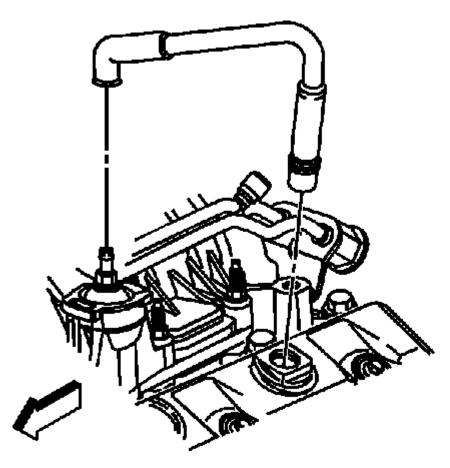


Fig. 93: Locating PCV Valve Hose At Valve & Rocker Cover Courtesy of GENERAL MOTORS COMPANY

6. Remove the positive crankcase ventilation (PCV) valve hose from the valve cover and rocker cover.

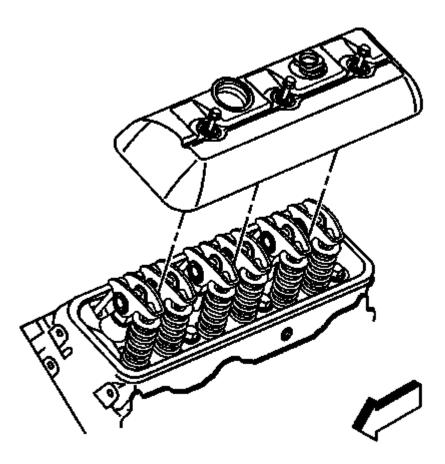


Fig. 94: Rocker Arm Cover Courtesy of GENERAL MOTORS COMPANY

- 7. Remove the rocker arm cover bolts.
- 8. Remove and discard the rocker arm cover bolt grommets, if necessary.
- 9. Remove the rocker arm cover.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

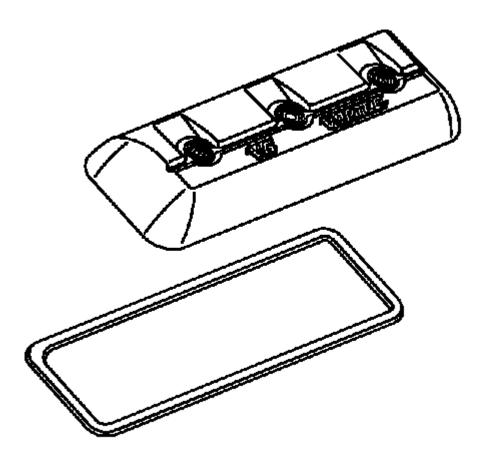


Fig. 95: View Of Rocker Arm Cover And Gasket Courtesy of GENERAL MOTORS COMPANY

- 10. Remove and discard the rocker arm cover gasket.
- 11. Clean and inspect the rocker arm cover, if necessary. Refer to <u>Valve Rocker Arm Cover Cleaning and Inspection</u>.

#### **Installation Procedure**

NOTE: Do not reuse the rocker cover gasket or the rocker arm cover bolt grommets.

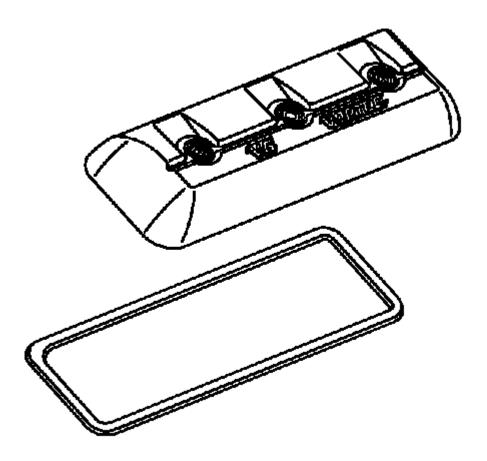


Fig. 96: View Of Rocker Arm Cover And Gasket Courtesy of GENERAL MOTORS COMPANY

- 1. Install a NEW rocker arm cover gasket to the cover.
- 2. Install NEW rocker arm cover bolt grommets to the cover, if necessary.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

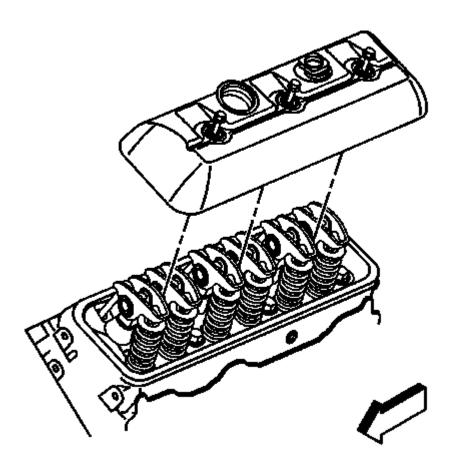


Fig. 97: Rocker Arm Cover Courtesy of GENERAL MOTORS COMPANY

3. Install the rocker arm cover.

**CAUTION: Refer to Fastener Caution**.

4. Install the rocker arm cover bolts and tighten to 12 N.m (106 lb in).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

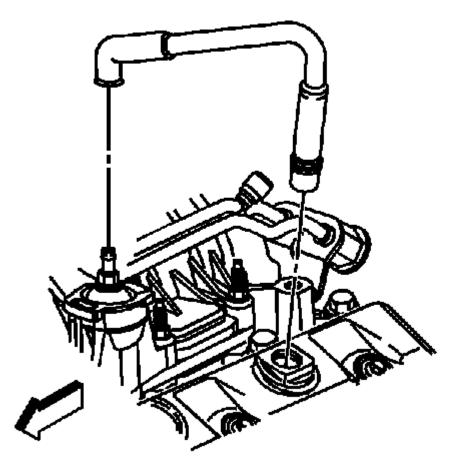


Fig. 98: Locating PCV Valve Hose At Valve & Rocker Cover Courtesy of GENERAL MOTORS COMPANY

5. Install the PCV valve hose to the valve cover and rocker cover.

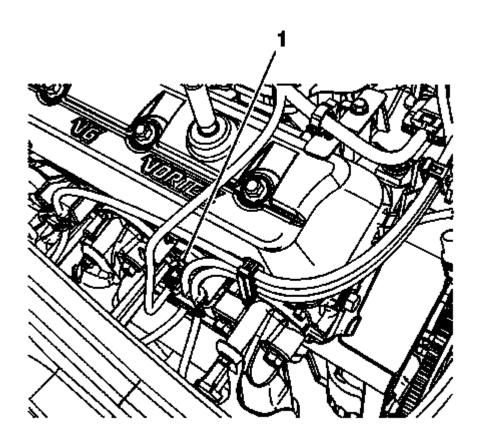


Fig. 99: View Of Engine Coolant Temperature (ECT) Sensor Electrical Connector Courtesy of GENERAL MOTORS COMPANY

- 6. Connect the power brake booster vacuum hose to the vacuum fitting.
- 7. Connect the ECT sensor electrical connector (1).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

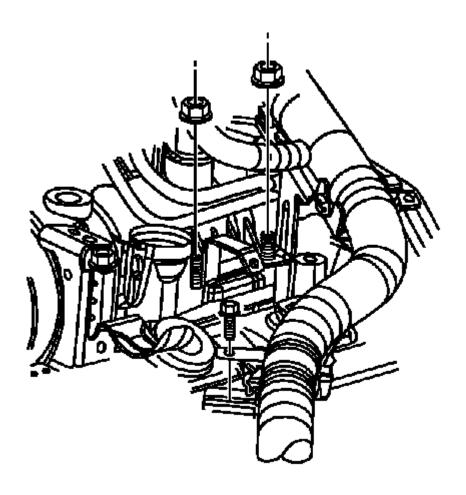


Fig. 100: View Of Engine Wiring Harness Bracket & Nuts Courtesy of GENERAL MOTORS COMPANY

- 8. Install the coil wiring harness bracket.
- 9. Install the coil wiring harness bracket nut and tighten to 9 N.m (80 lb in).
- 10. Install the engine cover. Refer to **Engine Cover Replacement**.

### VALVE ROCKER ARM COVER REPLACEMENT - RIGHT SIDE

#### **Removal Procedure**

- 1. Remove the engine cover. Refer to **Engine Cover Replacement**.
- 2. Remove the oil filler tube.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

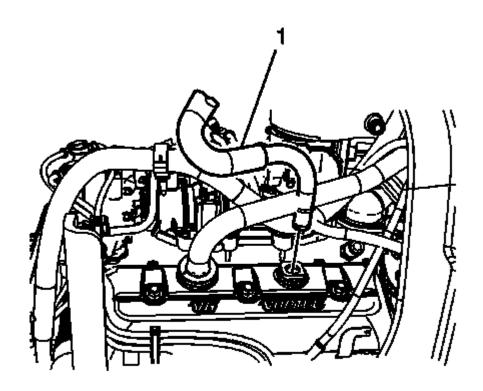


Fig. 101: View Of Positive Crankcase Ventilation (PCV) Hose Courtesy of GENERAL MOTORS COMPANY

3. Remove the positive crankcase ventilation (PCV) hose (1).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

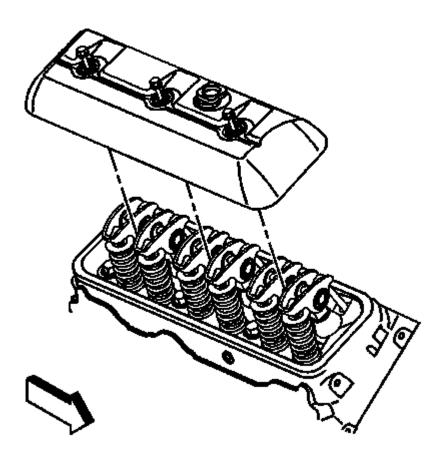


Fig. 102: Rocker Arm Cover Courtesy of GENERAL MOTORS COMPANY

- 4. Remove the rocker arm cover bolts.
- 5. Remove and discard the rocker arm cover bolt grommets, if necessary.
- 6. Remove the rocker arm cover.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

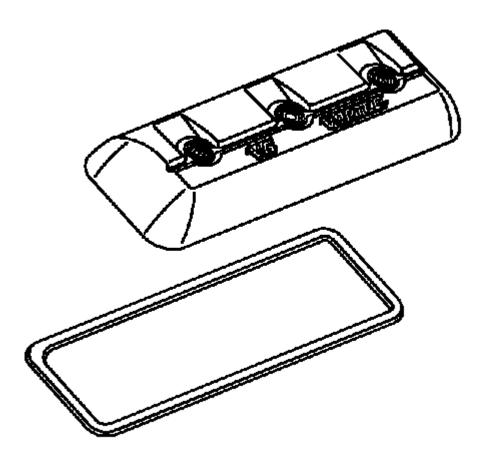


Fig. 103: View Of Rocker Arm Cover And Gasket Courtesy of GENERAL MOTORS COMPANY

- 7. Remove and discard the rocker arm cover gasket.
- 8. Clean and inspect the rocker arm cover, if necessary. Refer to <u>Valve Rocker Arm Cover Cleaning and Inspection</u>.

#### **Installation Procedure**

NOTE: Do not reuse the cover gasket or the valve rocker arm cover bolt grommets.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

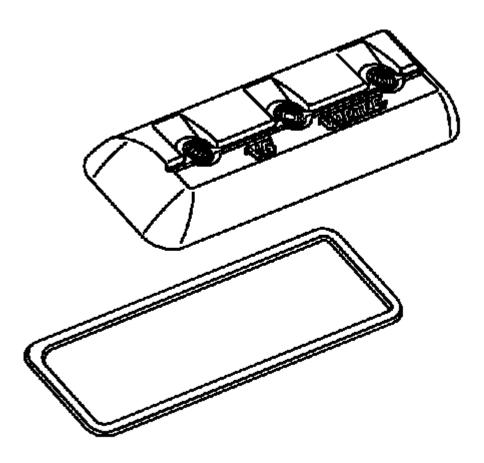


Fig. 104: View Of Rocker Arm Cover And Gasket Courtesy of GENERAL MOTORS COMPANY

- 1. Install a NEW rocker arm cover gasket.
- 2. Install NEW rocker arm cover bolt grommets, if necessary.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

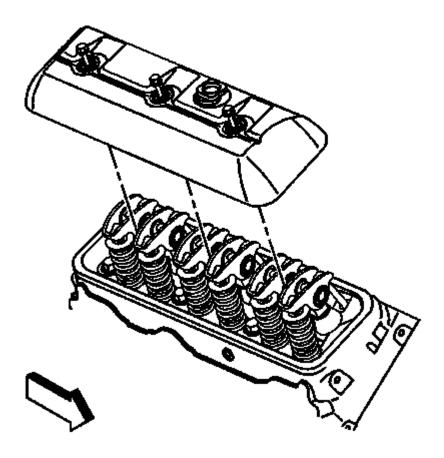


Fig. 105: Rocker Arm Cover Courtesy of GENERAL MOTORS COMPANY

**CAUTION: Refer to Fastener Caution.** 

- 3. Install the rocker arm cover.
- 4. Install the rocker arm cover bolts and tighten to 12 N.m (106 lb in).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

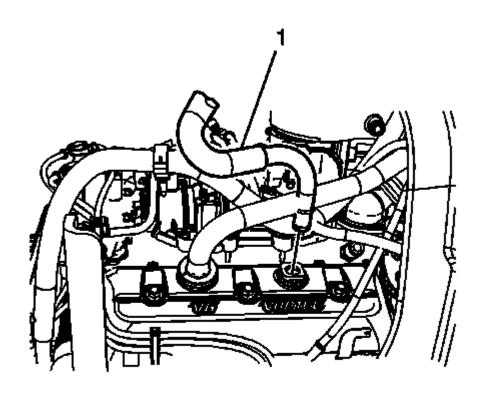


Fig. 106: View Of Positive Crankcase Ventilation (PCV) Hose Courtesy of GENERAL MOTORS COMPANY


- 5. Install the PCV hose (1).
- 6. Install the oil filler tube.
- 7. Install the engine cover. Refer to **Engine Cover Replacement**.

## VALVE ROCKER ARM AND PUSH ROD REPLACEMENT

#### **Removal Procedure**

NOTE: Mark, sort and organize all the components for assembly.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

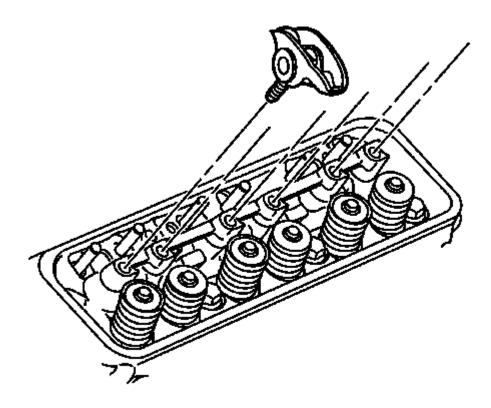

<u>Fig. 107: Identifying Valve Rocker Arms</u> Courtesy of GENERAL MOTORS COMPANY

- 1. Remove the rocker arm cover. Refer to <u>Valve Rocker Arm Cover Replacement Left Side</u> or <u>Valve Rocker Arm Cover Replacement Right Side</u>.
- 2. Remove the rocker arms.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


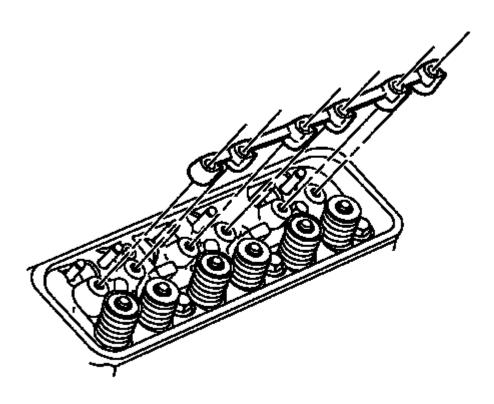


Fig. 108: View Of Valve Rocker Arm Supports
Courtesy of GENERAL MOTORS COMPANY

3. Remove the rocker arm supports.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

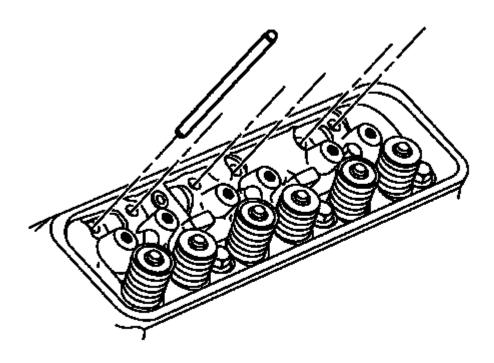


<u>Fig. 109: View Of Valve Pushrods</u> Courtesy of GENERAL MOTORS COMPANY

- 4. Remove the pushrods.
- 5. Clean and inspect the rocker arms and/or pushrods, if necessary. Refer to <u>Valve Rocker Arm and Push Rod Cleaning and Inspection</u>.

### **Installation Procedure**

NOTE: Be sure to keep parts in order. Parts must be reinstalled into the original location and position.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

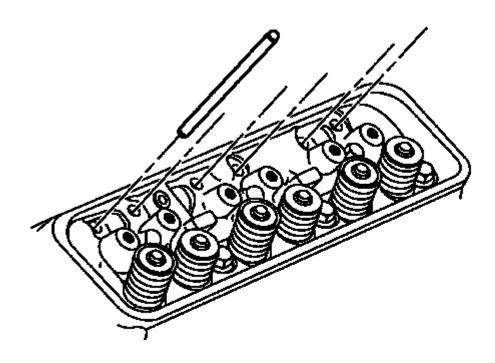

<u>Fig. 110: View Of Valve Pushrods</u> Courtesy of GENERAL MOTORS COMPANY

1. Install the pushrods.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


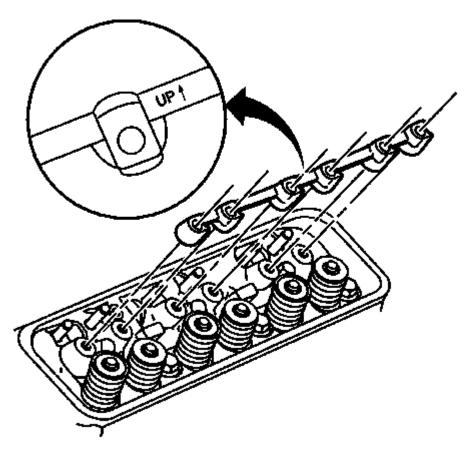


Fig. 111: Locating Arrow On Valve Rocker Arm Support **Courtesy of GENERAL MOTORS COMPANY** 

Be sure that the arrow on the rocker arm support is in the up position. NOTE:

2. Install the rocker arm supports.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

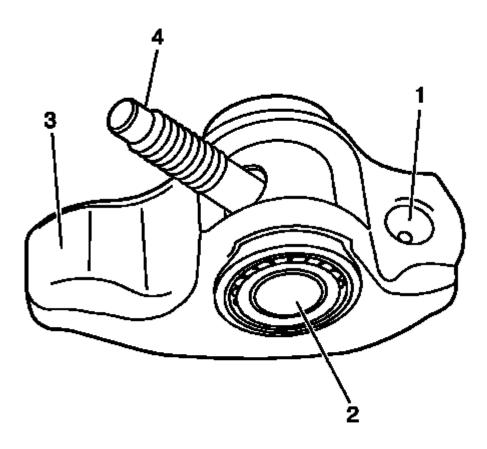

<u>Fig. 112: Pushrod Socket, Roller Pivot & Valve Stem Tip</u> Courtesy of GENERAL MOTORS COMPANY

- 3. Apply lubricant to the following rocker arm contact surfaces:
  - Pushrod socket (1)
  - Roller pivot (2)
  - Valve stem tip (3)

Refer to Adhesives, Fluids, Lubricants and Sealers for the correct part number.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

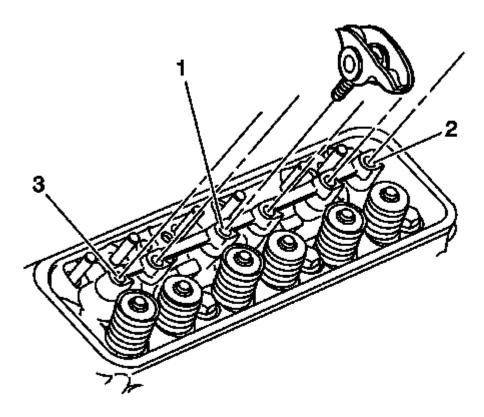


Fig. 113: Valve Rocker Arm Assemblies
Courtesy of GENERAL MOTORS COMPANY

**CAUTION: Refer to Fastener Caution**.

- 4. Install the rocker arms as follows:
  - 1. Finger start the bolt at location (1)
  - 2. Finger start the bolt at location (2)
  - 3. Finger start the bolt at location (3)
  - 4. Finger start the remaining rocker arm bolts

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

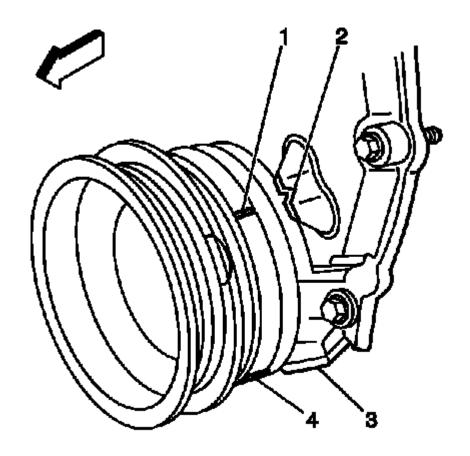


Fig. 114: View Of Crankshaft Balancer Alignment Mark & Engine Front Cover Alignment Tab Courtesy of GENERAL MOTORS COMPANY

5. Rotate the crankshaft balancer to position the crankshaft balancer alignment mark (1) 57-63 degrees clockwise or counterclockwise from the engine front cover alignment tab (2).

NOTE: Once the rocker arms are installed and properly torqued, no additional valve lash adjustment is required.

- 6. Tighten the rocker arm bolts to 30 N.m (22 lb ft).
- 7. Install the rocker arm cover. Refer to <u>Valve Rocker Arm Cover Replacement Left Side</u> or <u>Valve Rocker Arm Cover Replacement Right Side</u>.

## VALVE STEM OIL SEAL AND VALVE SPRING REPLACEMENT

#### **Special Tools**

- J 5892-D Valve Spring Compressor
- J 22794 Spark Plug Port Adapter
- J 38606 Valve Spring Compressor

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

• J 42073 Valve Stem Oil Seal Installer

### **Removal Procedure**

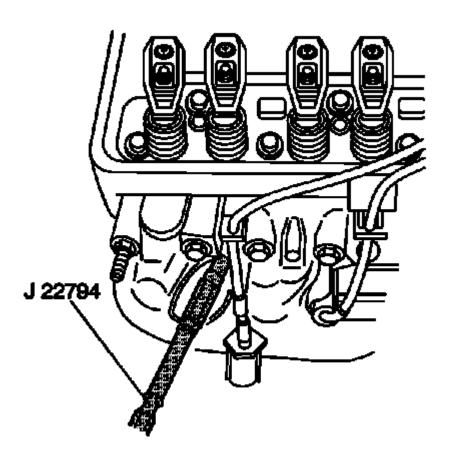


Fig. 115: View Of J 22794 In Spark Plug Hole **Courtesy of GENERAL MOTORS COMPANY** 

- 1. Remove the required valve rocker arms. Refer to Valve Rocker Arm and Push Rod Replacement.
- Remove the required spark plugs. Refer to **Spark Plug Replacement**.
- Install the J 22794 adapter into the spark plug hole.
- 4. Connect a shop air supply hose and apply compressed air in order to hold the valves in place.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

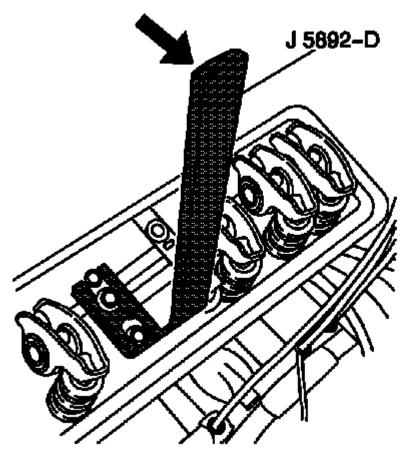


Fig. 116: View Of J 5892--D, Valve Rocker Arm Bolt & Washer Courtesy of GENERAL MOTORS COMPANY

- 5. Install a flat washer onto the removed rocker arm bolt.
- 6. Install the bolt and rocker arm for the valve spring requiring removal.

WARNING: Compressed valve springs have high tension against the valve spring compressor. Valve springs that are not properly compressed by or released from the valve spring compressor can be ejected from the valve spring compressor with intense force. Use care when compressing or releasing the valve spring with the valve spring compressor and when removing or installing the valve stem keys. Failing to use care may cause personal injury.

- 7. Using J 5892-D compressor compress the valve spring.
  - 1. Hook the slotted end of **J 5892-D** compressor under the washer on the rocker arm bolt.
  - 2. Apply steady pressure on the valve spring cap until the valve keys are accessible.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

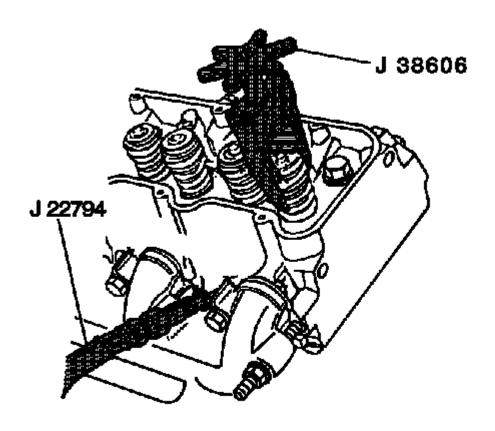


Fig. 117: Using J 38606 & J 5892-D To Remove Valve Spring Courtesy of GENERAL MOTORS COMPANY

CAUTION: Completely engage the J 38606 jaws on the valve spring. The J 38606 may slip off and scratch the valve spring. Replace the valve spring if the valve spring becomes scratch.

8. Use J 38606 compressor when J 5892-D compressor will not fit.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

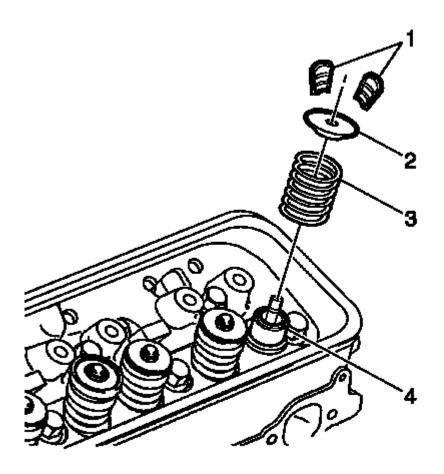


Fig. 118: Identifying Valve Components
Courtesy of GENERAL MOTORS COMPANY

- 9. Remove the valve keys (1).
- 10. Carefully release the valve spring tension.
- 11. Remove the  $J\ 5892\text{-}D\ \text{compressor}$  or the  $J\ 38606\ \text{compressor}.$
- 12. Remove the valve spring cap (2) and valve spring (3).
- 13. Remove the valve stem oil seal (4).

### **Installation Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

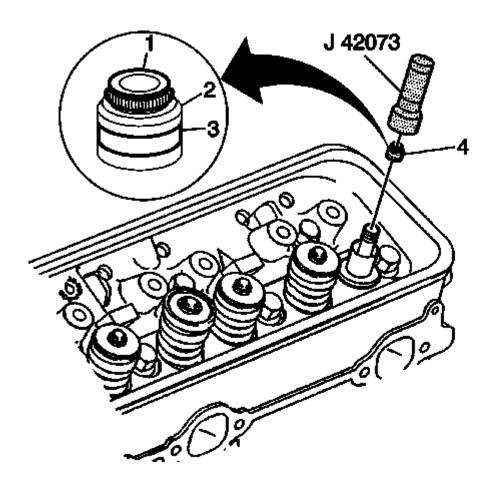



Fig. 119: Exhaust Valve Oil Stem Seal Courtesy of GENERAL MOTORS COMPANY

### NOTE:

The exhaust valve oil stem seal has the letters EX (1) molded into the top of the seal. The exhaust valve oil stem seal material is brown in color (2) with a white stripe (3) painted onto the outside diameter of the seal or the material may be red in color (2) with no paint stripe. The intake valve oil seal is black in color.

- 1. Assemble the valve into the proper valve guide.
- 2. Select the proper valve stem oil seal for the specific valve guide.
- 3. Lubricate the valve stem oil seal and the outside diameter of the valve guide with clean engine oil.
- 4. Assemble the valve stem oil seal onto the valve stem.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

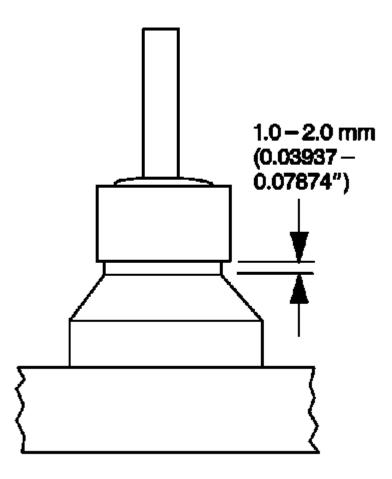

<u>Fig. 120: Valve Stem Oil Seal Proper Installation Position</u> Courtesy of GENERAL MOTORS COMPANY

- 5. Using the J 42073 installer, install the valve stem oil seal onto the valve guide.
  - 1. Tap the valve stem oil seal onto the valve guide until the **J 42073** installer bottoms against the valve spring seat.
  - 2. Inspect the valve stem oil seal. The valve stem oil seal should not be bottomed against the valve guide.

There should be a 1-2 mm (0.03937-0.07874 in) gap between the bottom edge of the valve stem oil seal and the valve guide.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


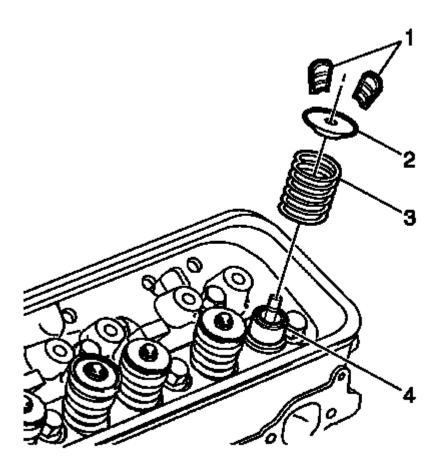


Fig. 121: Identifying Valve Components
Courtesy of GENERAL MOTORS COMPANY

- 6. Install the valve spring (3).
- 7. Install the valve spring cap (2) onto the valve spring (3), over the valve stem.

WARNING: Compressed valve springs have high tension against the valve spring compressor. Valve springs that are not properly compressed by or released from the valve spring compressor can be ejected from the valve spring compressor with intense force. Use care when compressing or releasing the valve spring with the valve spring compressor and when removing or installing the valve stem keys. Failing to use care may cause personal injury.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

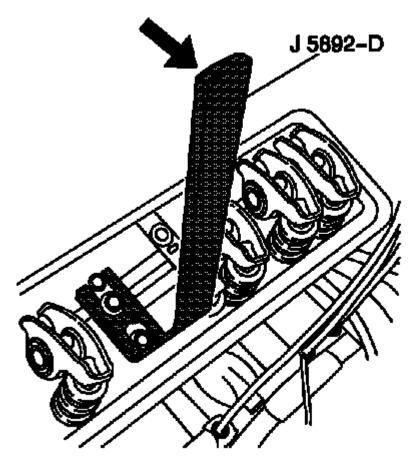

<u>Fig. 122: View Of J 5892--D, Valve Rocker Arm Bolt & Washer</u> Courtesy of GENERAL MOTORS COMPANY

8. Use the J 5892-D compressor in order to compress the valve spring.

Hook the slotted end of J 5892-D compressor under the washer on the valve rocker arm bolt.

9. Apply steady pressure on the valve spring cap until the valve keys are accessible.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

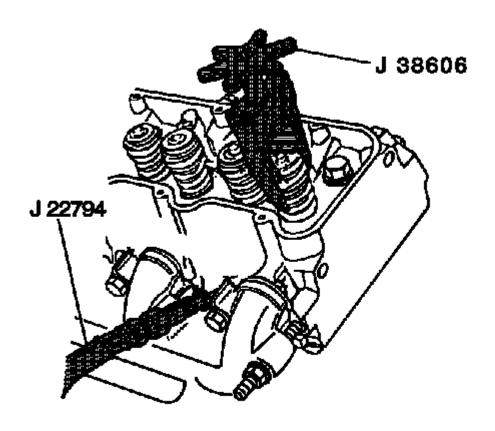


Fig. 123: Using J 38606 & J 5892-D To Remove Valve Spring Courtesy of GENERAL MOTORS COMPANY

CAUTION: Completely engage the J 38606 jaws on the valve spring. The J 38606 may slip off and scratch the valve spring. Replace the valve spring if the valve spring becomes scratch.

- 10. Use the **J 38606** compressor if the clearance does not permit use of the **J 5892-D** compressor.
- 11. Install the valve stem O-ring seal.
- 12. Install the valve stem keys.

Use grease in order to hold the valve stem keys in place.

13. Carefully release the valve spring pressure, making sure the valve stem keys stay in place.

CAUTION: The valve stem keys must correctly seat in the valve spring cap. Engine damage may occur by not installing properly.

14. Remove the **J 5892-D** compressor or the **J 38606** compressor.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- 1. Look to ensure that the valve stem keys seat properly in the upper groove of the valve stem.
- 2. Tap the end of the valve stem with a plastic faced hammer in order to seat the valve stem keys, if necessary.

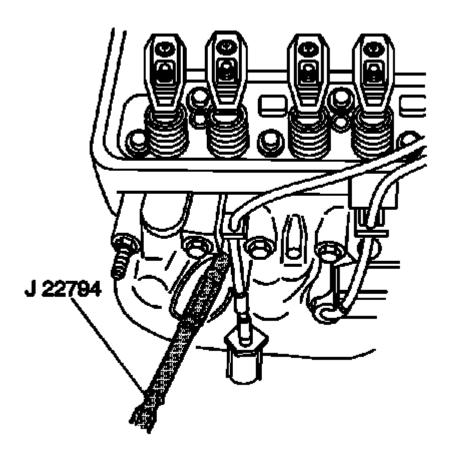


Fig. 124: View Of J 22794 In Spark Plug Hole Courtesy of GENERAL MOTORS COMPANY

- 15. Remove the **J 22794** adapter.
- 16. Install the spark plugs. Refer to **Spark Plug Replacement**.
- 17. Install the valve rocker arms. Refer to **Valve Rocker Arm and Push Rod Replacement**.

## VALVE LIFTER REPLACEMENT

**Special Tools** 

J 3049-A Valve Lifter Remover

Removal Procedure

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

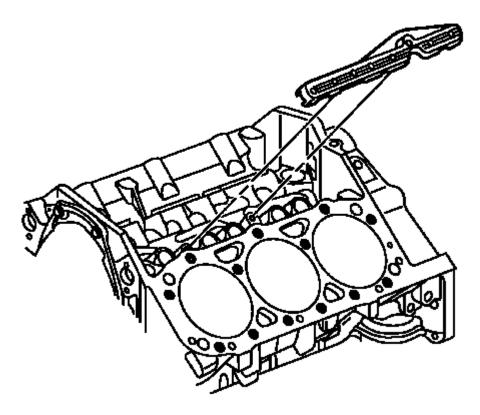


Fig. 125: View Of Valve Lifter Pushrod Guides Courtesy of GENERAL MOTORS COMPANY

1. Remove the intake manifold. Refer to **Lower Intake Manifold Replacement**.

NOTE: Place the components in a rack so that the components can be installed to their original location.

- 2. Remove the pushrods. Refer to **Valve Rocker Arm and Push Rod Replacement**.
- 3. Remove the bolts and lifter pushrod guide.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

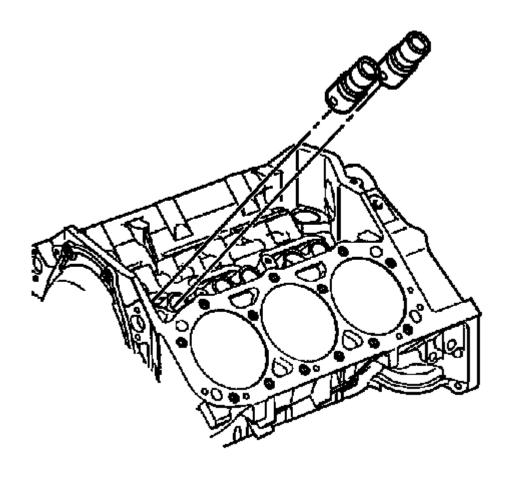


Fig. 126: View Of Valve Lifters
Courtesy of GENERAL MOTORS COMPANY

NOTE: Place the valve lifters in the rack in the upright position in order to maintain the oil inside the valve lifters.

4. Remove the lifters.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

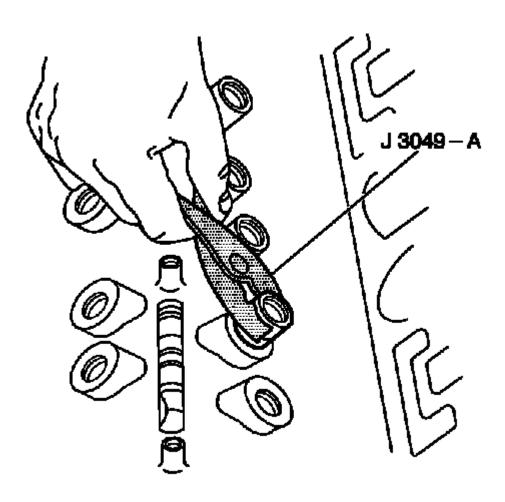


Fig. 127: Using J 3049-A To Remove Sticking Valve Lifters Courtesy of GENERAL MOTORS COMPANY

NOTE: Some valve lifters may be stuck in the valve lifter bores because of gum or varnish deposits and may require the use of J 3049-A remover for removal.

- 5. Use the **J 3049-A** remover in order to remove the stuck valve lifters.
- 6. Use a cleaning solvent and a shop towel to clean any varnish from the valve lifter bores.
- 7. Inspect the lifter bores for excessive wear or scoring. Replace the engine block if there is excessive wear or deep scoring.
- 8. Inspect the camshaft for wear or damage. If the wear is questionable remove the camshaft and inspect. Refer to <u>Camshaft and Bearings Cleaning and Inspection</u>.
- 9. Clean and inspect the lifters, if necessary. Refer to **Valve Lifter and Guide Cleaning and Inspection**.

### **Installation Procedure**

NOTE:

It is normal for NEW lifters to make a slight ticking noise when the engine is first started. Increasing the engine RPM slightly to raise oil pressure should stop the noise.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

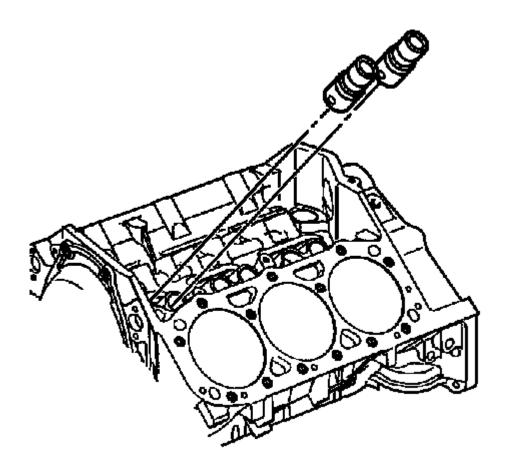


Fig. 128: View Of Valve Lifters
Courtesy of GENERAL MOTORS COMPANY

1. Apply lubricant to the lifter rollers. Refer to <u>Adhesives, Fluids, Lubricants and Sealers</u> for the correct part number.

NOTE: If reusing the lifters, install the lifters to their original positions.

2. Install the lifters.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

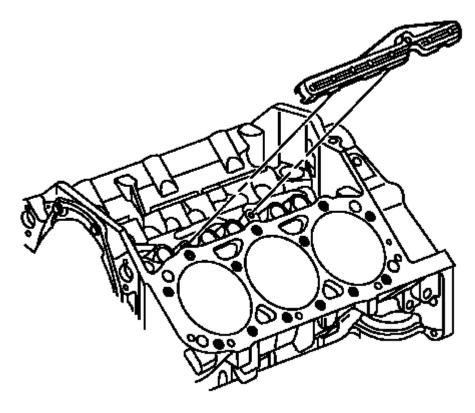


Fig. 129: View Of Valve Lifter Pushrod Guides Courtesy of GENERAL MOTORS COMPANY

**CAUTION: Refer to Fastener Caution.** 

- 3. Install the lifter pushrod guides and tighten the bolts to 16 N.m (12 lb ft).
- 4. Install the pushrods. Refer to Valve Rocker Arm and Push Rod Replacement.
- 5. Install the intake manifold. Refer to Lower Intake Manifold Replacement.

### CYLINDER HEAD REPLACEMENT - LEFT SIDE

**Special Tools** 

J 45059 Angle Meter

#### **Removal Procedure**

- 1. Remove the engine cover. Refer to **Engine Cover Replacement**.
- 2. Drain the cooling system. Refer to <u>Cooling System Draining and Filling (Static Fill)</u>, <u>Cooling System Draining and Filling (Vac N Fill)</u>.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- 3. Remove the drive belt. Refer to **Drive Belt Replacement**.
- 4. Remove the lower fan shroud. Refer to Engine Coolant Fan Lower Shroud Replacement (4.3L, 4.8L, 5.3L, 6.0L, 6.2L, 7.0L).
- 5. Remove the lower intake manifold. Refer to **Lower Intake Manifold Replacement**.
- 6. Remove the left exhaust manifold. Refer to Exhaust Manifold Replacement Left Side (V6).
- 7. Remove the left side pushrods. Refer to <u>Valve Rocker Arm and Push Rod Replacement</u>.

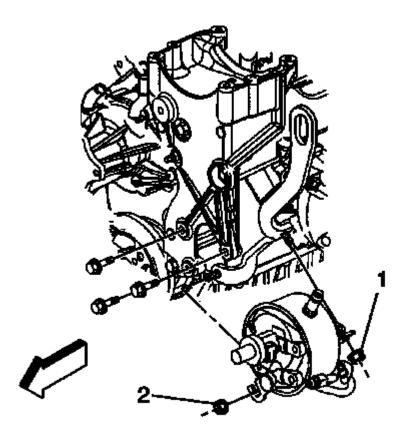


Fig. 130: View Of Power Steering (P/S) Pump Rear Bracket Nut And P/S Pump Rear Bracket Front Nut
Courtesy of GENERAL MOTORS COMPANY

- 8. Loosen the power steering (P/S) pump rear bracket nut (1).
- 9. Remove the P/S pump rear bracket front nut (2).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


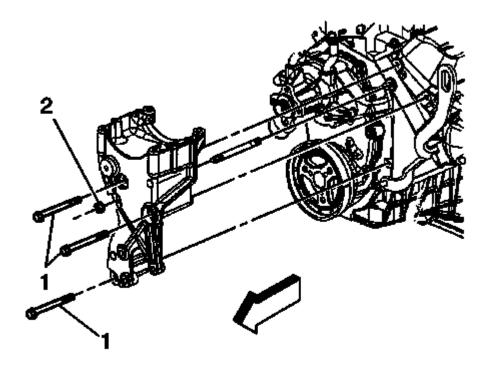


Fig. 131: P/S Pump Rear Bracket Front Nut **Courtesy of GENERAL MOTORS COMPANY** 

- 10. Remove the bolts (1) and nut (2) for the P/S pump bracket.
- 11. Leave the air conditioning (A/C) compressor, if equipped and the P/S pump on the bracket.
- 12. Slide the P/S pump bracket off of the stud and set aside.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

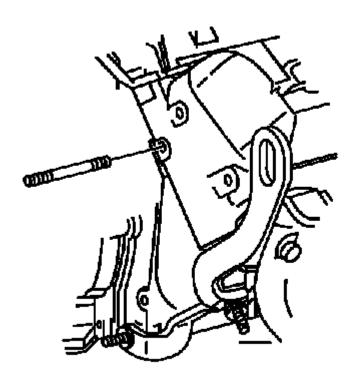

<u>Fig. 132: Locating Power Steering Pump Mounting Bracket Stud</u> Courtesy of GENERAL MOTORS COMPANY

13. Remove the P/S pump bracket stud.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

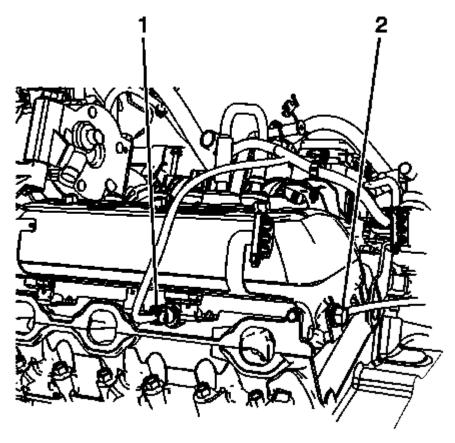


Fig. 133: View Of Harness Ground Bolt Courtesy of GENERAL MOTORS COMPANY

- 14. Disconnect the engine coolant temperature (ECT) sensor electrical connector (1).
- 15. Remove the harness ground bolt (2).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

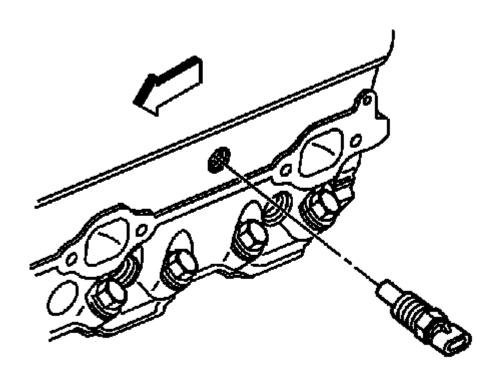


Fig. 134: View Of Engine Coolant Temperature Sensor Courtesy of GENERAL MOTORS COMPANY

16. Remove the engine coolant temperature (ECT) sensor.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

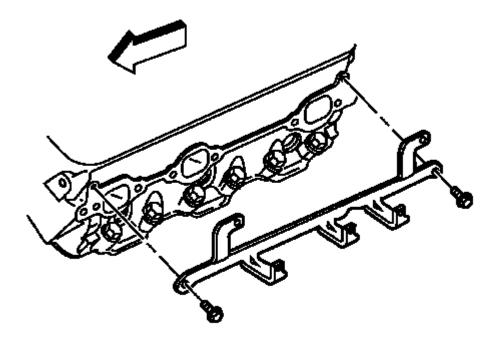


Fig. 135: Locating Spark Plug Wire Support Courtesy of GENERAL MOTORS COMPANY

17. Remove the spark plug wire support bolts and support.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

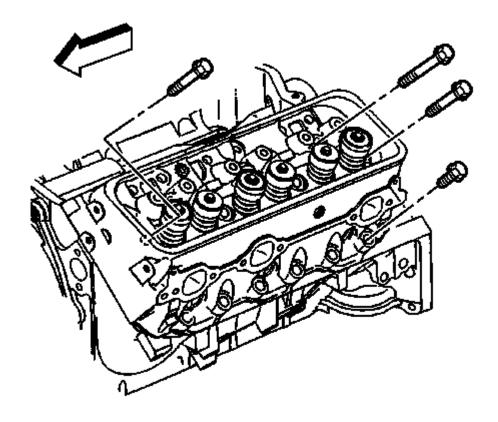


Fig. 136: Locating Cylinder Head Bolts (Left)
Courtesy of GENERAL MOTORS COMPANY

18. Remove and discard the cylinder head bolts.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

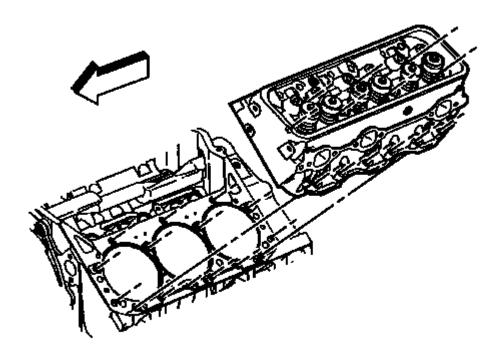


Fig. 137: View of Cylinder Head (Left)
Courtesy of GENERAL MOTORS COMPANY

19. Remove the cylinder head.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

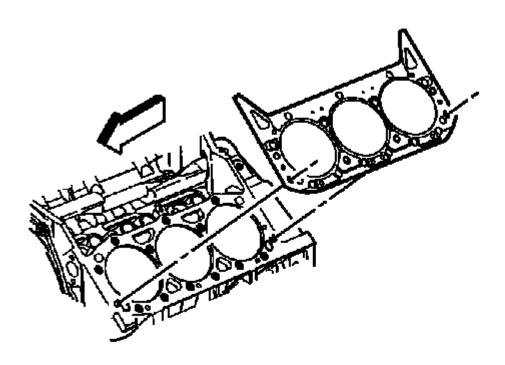


Fig. 138: View Of Cylinder Head Gasket And Alignment Pins - Left Courtesy of GENERAL MOTORS COMPANY

20. Remove and discard the cylinder head gasket.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

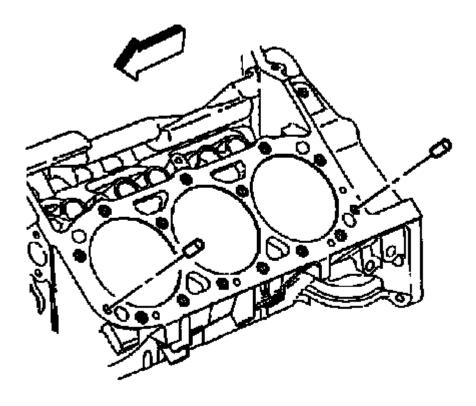


Fig. 139: View Of Cylinder Head Locator Pins Courtesy of GENERAL MOTORS COMPANY

- 21. Remove the cylinder head locator pins, if necessary.
- 22. Clean and inspect the cylinder head, if necessary. Refer to Cylinder Head Cleaning and Inspection.
- 23. Disassemble the cylinder head, if necessary. Refer to **Cylinder Head Disassemble**.

### **Installation Procedure**


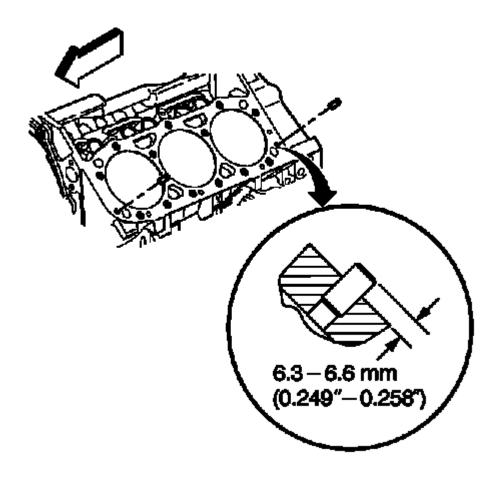


Fig. 140: Installing Cylinder Head Locator Pins Courtesy of GENERAL MOTORS COMPANY

- 1. Assemble the cylinder head, if necessary. Refer to **Cylinder Head Assemble**.
- 2. Install the cylinder head locator pins, if necessary.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

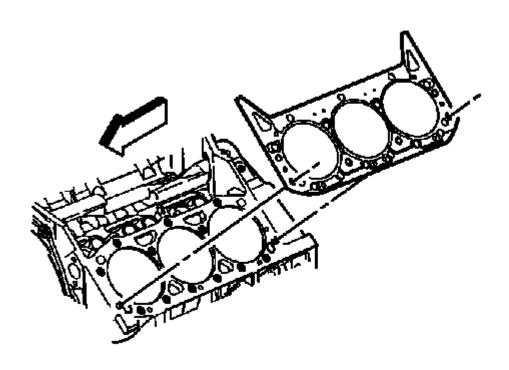

<u>Fig. 141: View Of Cylinder Head Gasket And Alignment Pins - Left</u> Courtesy of GENERAL MOTORS COMPANY

NOTE: Do not use any type of sealer on the cylinder head gasket.

3. Install a NEW cylinder head gasket.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

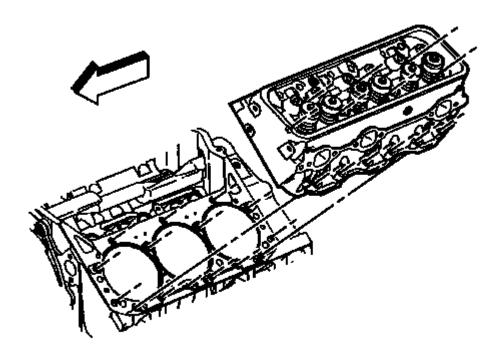


Fig. 142: View of Cylinder Head (Left)
Courtesy of GENERAL MOTORS COMPANY

4. Install the cylinder head.

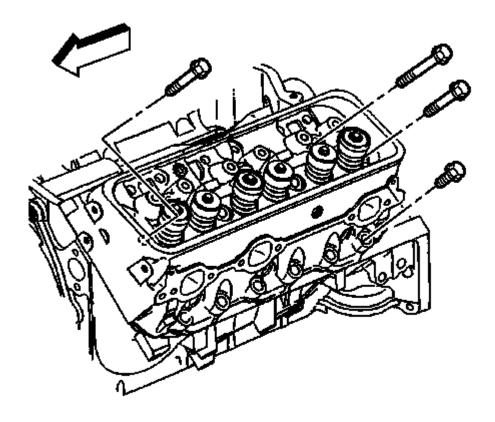


Fig. 143: Locating Cylinder Head Bolts (Left)
Courtesy of GENERAL MOTORS COMPANY

- 5. Apply sealant to the threads of the NEW cylinder head bolts. Refer to <u>Adhesives, Fluids, Lubricants</u> <u>and Sealers</u>.
- 6. Install the cylinder head bolts finger tight.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

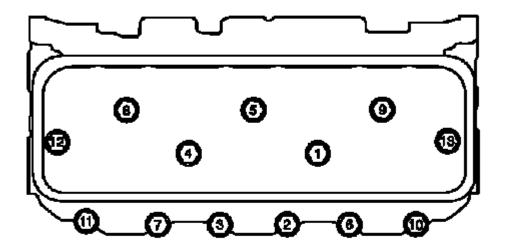


Fig. 144: Identifying Cylinder Head Bolt Tightening Sequence Courtesy of GENERAL MOTORS COMPANY

**CAUTION: Refer to Fastener Caution**.

- 7. Tighten the cylinder head bolts using the sequence shown.
  - 1. Tighten the bolts a first pass to 30 N.m (22 lb ft).
  - 2. Tighten the long bolts (1, 4, 5, 8, 9) a final pass to 75 degrees using **J 45059** meter.
  - 3. Tighten the medium bolts (12, 13) a final pass to 65 degrees using **J 45059** meter.
  - 4. Tighten the short bolts (2, 3, 6, 7, 10, 11) a final pass to 55 degrees using **J 45059** meter.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


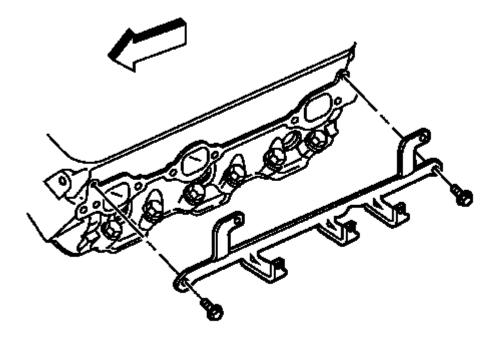


Fig. 145: Locating Spark Plug Wire Support Courtesy of GENERAL MOTORS COMPANY

8. Install the spark plug wire support and bolts and tighten to 12 N.m (106 lb in).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

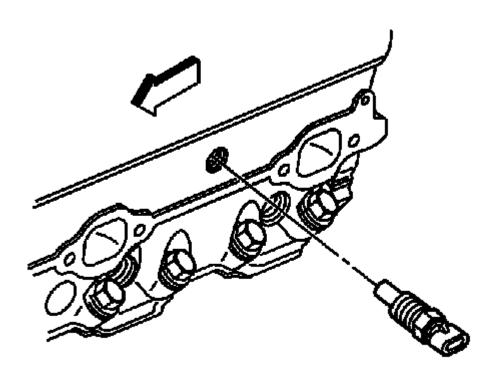

<u>Fig. 146: View Of Engine Coolant Temperature Sensor</u> Courtesy of GENERAL MOTORS COMPANY

9. Install the ECT sensor. If reusing the old sensor, apply sealant to the threads. Refer to <u>Adhesives, Fluids</u>, <u>Lubricants and Sealers</u> for the correct part number. Tighten the sensor to 20 N.m (15 lb ft).

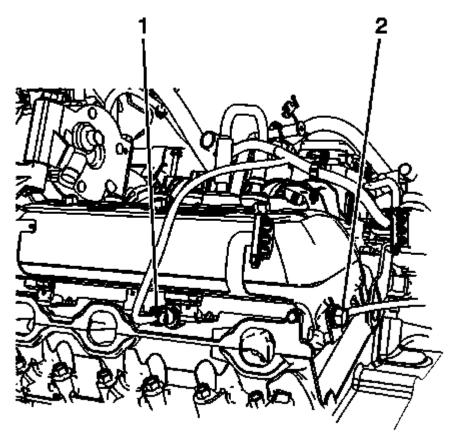


Fig. 147: View Of Harness Ground Bolt Courtesy of GENERAL MOTORS COMPANY

- 10. Install the harness ground bolt (2) and tighten to 16 N.m (12 lb ft).
- 11. Connect the engine coolant temperature (ECT) sensor electrical connector (1).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

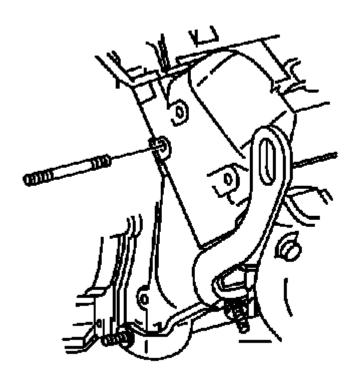


Fig. 148: Locating Power Steering Pump Mounting Bracket Stud Courtesy of GENERAL MOTORS COMPANY

12. Install the P/S pump bracket stud and tighten to 20 N.m (15 lb ft).

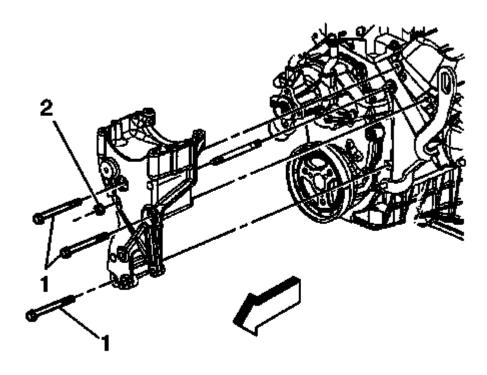


Fig. 149: P/S Pump Rear Bracket Front Nut Courtesy of GENERAL MOTORS COMPANY

- 13. Slide the P/S pump bracket rearward.
- 14. Install the bolts and nut (2) for the P/S pump bracket.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

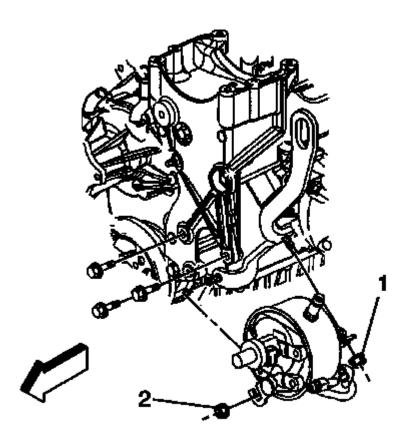


Fig. 150: View Of Power Steering (P/S) Pump Rear Bracket Nut And P/S Pump Rear Bracket Front Nut
Courtesy of GENERAL MOTORS COMPANY

- 15. Install the P/S pump rear bracket front nut (2).
- 16. Tighten the P/S pump rear bracket nut (1) to 41 N.m (30 lb ft).
- 17. Install the left side pushrods. Refer to <u>Valve Rocker Arm and Push Rod Replacement</u>.
- 18. Install the left exhaust manifold. Refer to Exhaust Manifold Replacement Left Side (V6).
- 19. Install the lower intake manifold. Refer to **Lower Intake Manifold Replacement**.
- 20. Install the lower fan shroud. Refer to Engine Coolant Fan Lower Shroud Replacement (4.3L, 4.8L, 5.3L, 6.0L, 6.2L, 7.0L).
- 21. Install the drive belt. Refer to **Drive Belt Replacement**.
- 22. Fill the cooling system. Refer to <u>Cooling System Draining and Filling (Static Fill)</u>, <u>Cooling System Draining and Filling (Vac N Fill)</u>.
- 23. Install the engine cover. Refer to **Engine Cover Replacement**.

#### CYLINDER HEAD REPLACEMENT - RIGHT SIDE

#### **Special Tools**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

J 45059 Angle Meter

Removal Procedure

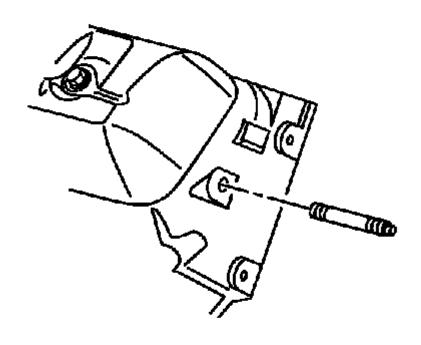


Fig. 151: View Of Generator Bracket Stud Courtesy of GENERAL MOTORS COMPANY

- 1. Remove the engine cover. Refer to **Engine Cover Replacement**.
- 2. Drain the cooling system. Refer to <u>Cooling System Draining and Filling (Static Fill)</u>, <u>Cooling System Draining and Filling (Vac N Fill)</u>.
- 3. Remove the oil filler tube.
- 4. Remove the generator bracket. Refer to, Generator Bracket Replacement (V6) .
- 5. Remove the intake manifold. Refer to Lower Intake Manifold Replacement.
- 6. Remove the right exhaust manifold. Refer to Exhaust Manifold Replacement Right Side (V6).
- 7. Remove the right pushrods. Refer to Valve Rocker Arm and Push Rod Replacement.
- 8. Remove the generator bracket stud from the cylinder head.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

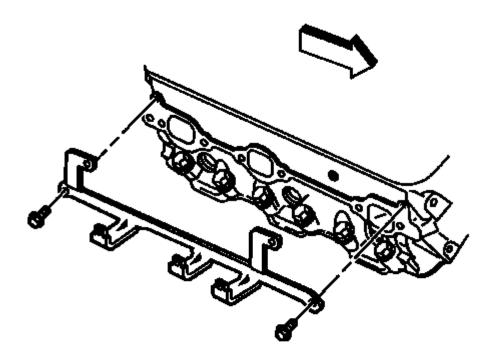


Fig. 152: Spark Plug Wire Support
Courtesy of GENERAL MOTORS COMPANY

9. Remove the spark plug wire support bolts and support.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

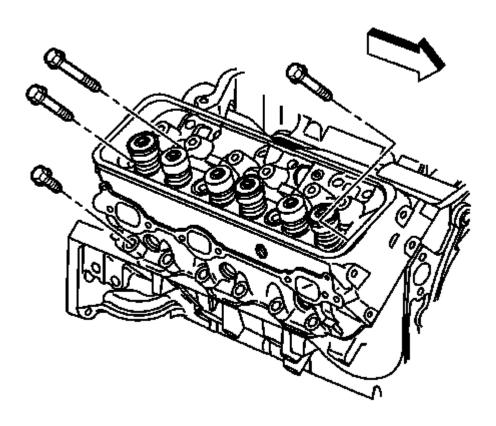


Fig. 153: Locating Cylinder Head Bolts (Right)
Courtesy of GENERAL MOTORS COMPANY

10. Remove and discard the cylinder head bolts.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


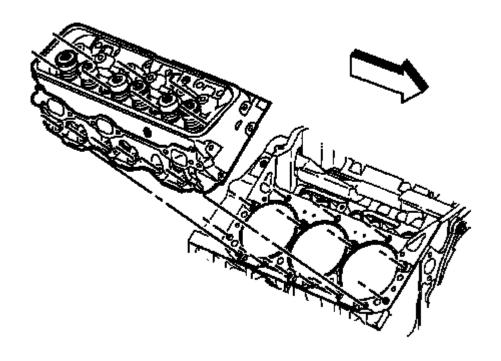


Fig. 154: View Of Cylinder Head (Right)
Courtesy of GENERAL MOTORS COMPANY

11. Remove the cylinder head.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

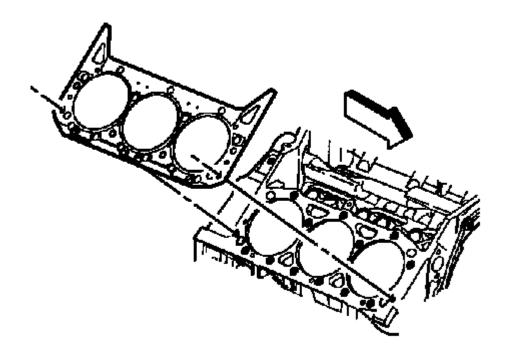

<u>Fig. 155: View Of Cylinder Head Gasket And Alignment Pins - Right Courtesy of GENERAL MOTORS COMPANY</u>

12. Remove and discard the cylinder head gasket.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

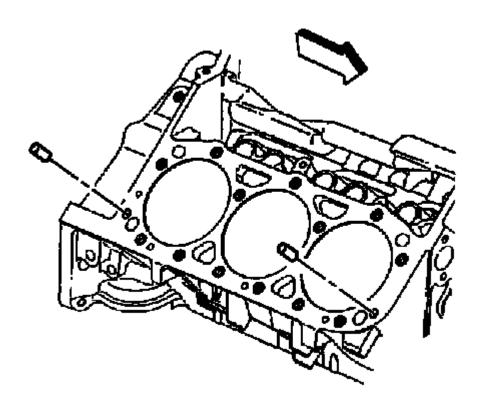


Fig. 156: Cylinder Head Locator Pins Courtesy of GENERAL MOTORS COMPANY

- 13. Remove the cylinder head locator pins, if necessary.
- 14. Clean and inspect the cylinder head, if necessary. Refer to **Cylinder Head Cleaning and Inspection**.
- 15. Disassemble the cylinder head, if necessary. Refer to **Cylinder Head Disassemble**.

#### **Installation Procedure**


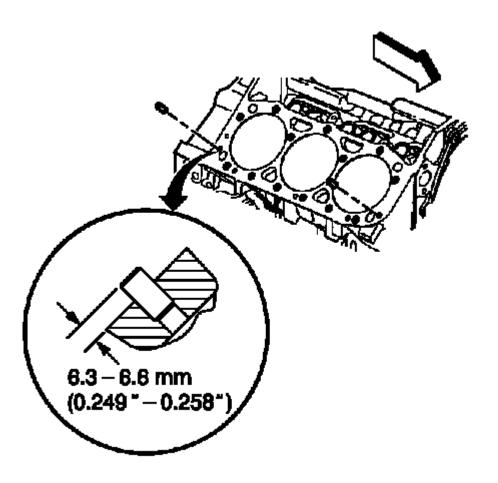


Fig. 157: Installing Cylinder Head Locator Pins Courtesy of GENERAL MOTORS COMPANY

- 1. Assemble the cylinder head, if necessary. Refer to **Cylinder Head Assemble**.
- 2. Install the cylinder head locator pins, if necessary.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

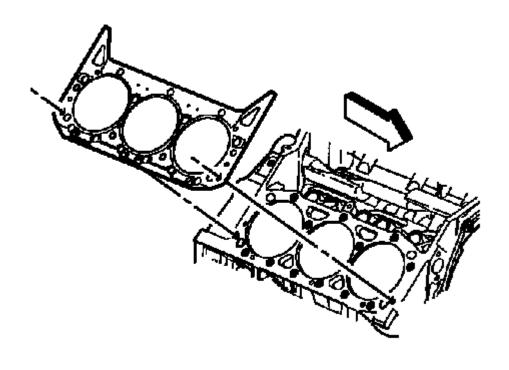

<u>Fig. 158: View Of Cylinder Head Gasket And Alignment Pins - Right</u> Courtesy of GENERAL MOTORS COMPANY

NOTE: Do not use any type of sealer on the cylinder head gasket.

3. Install a NEW cylinder head gasket.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

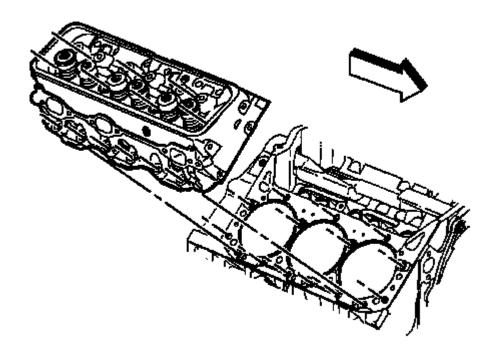


Fig. 159: View Of Cylinder Head (Right)
Courtesy of GENERAL MOTORS COMPANY

4. Install the cylinder head.

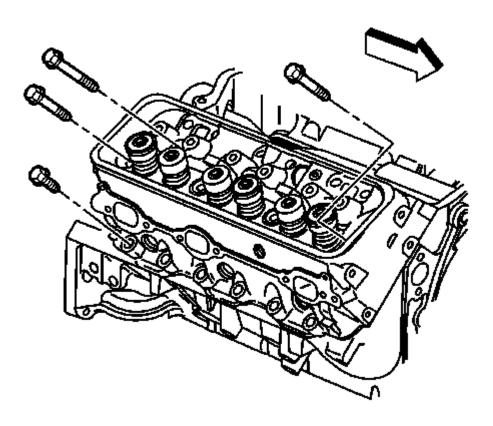


Fig. 160: Locating Cylinder Head Bolts (Right)
Courtesy of GENERAL MOTORS COMPANY

- 5. Apply sealant to the threads of the **NEW** cylinder head bolts. Refer to <u>Adhesives, Fluids, Lubricants</u> and <u>Sealers</u> for the correct part number.
- 6. Install the cylinder head bolts finger tight.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


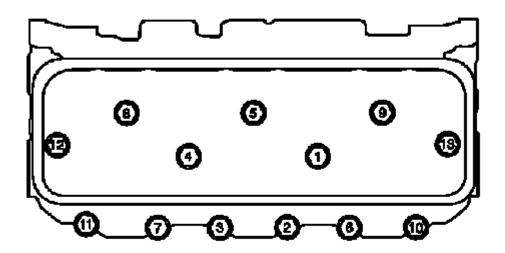


Fig. 161: Identifying Cylinder Head Bolt Tightening Sequence Courtesy of GENERAL MOTORS COMPANY

**CAUTION: Refer to Fastener Caution.** 

- 7. Tighten the cylinder head bolts using the sequence shown.
  - Tighten the bolts a first pass to 30 N.m (22 lb ft).
  - Tighten the long bolts (1, 4, 5, 8, 9) a final pass to 75 degrees using **J 45059** meter.
  - Tighten the medium bolts (12, 13) a final pass to 65 degrees using J 45059 meter.
  - Tighten the short bolts (2, 3, 6, 7, 10, 11) a final pass to 55 degrees using **J 45059** meter.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

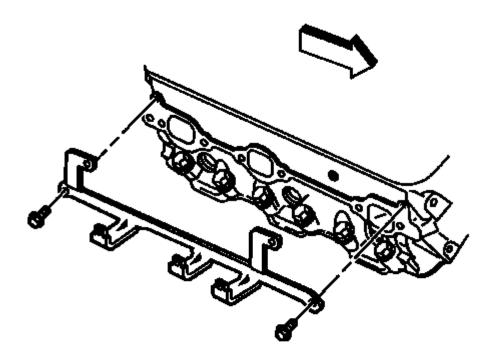

<u>Fig. 162: Spark Plug Wire Support</u> Courtesy of GENERAL MOTORS COMPANY

8. Install the spark plug wire support and bolts and tighten to 12 N.m (106 lb in).

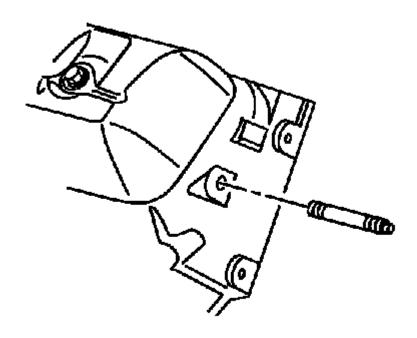


Fig. 163: View Of Generator Bracket Stud Courtesy of GENERAL MOTORS COMPANY

- 9. Install the generator bracket stud and tighten to 20 N.m (15 lb ft).
- 10. Install the right pushrods. Refer to **Valve Rocker Arm and Push Rod Replacement**.
- 11. Install the exhaust manifold. Refer to Exhaust Manifold Replacement Right Side (V6).
- 12. Install the intake manifold. Refer to Lower Intake Manifold Replacement.
- 13. Install the generator bracket. Refer to Generator Bracket Replacement (V6).
- 14. Install the oil filler tube.
- 15. Fill the cooling system. Refer to <u>Cooling System Draining and Filling (Static Fill)</u>, <u>Cooling System Draining and Filling (Vac N Fill)</u>.
- 16. Install the engine cover. Refer to **Engine Cover Replacement**.


#### CRANKSHAFT BALANCER REPLACEMENT

#### **Special Tools**

J 23523-F Crankshaft Balancer Remover and Installer

#### Removal Procedure

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

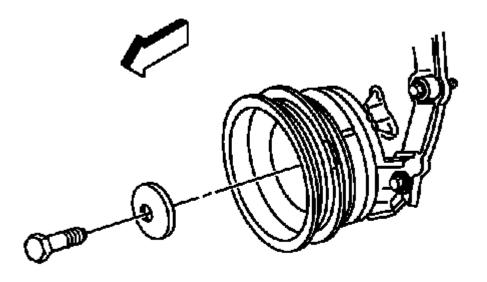

<u>Fig. 164: View Of Crankshaft Balancer Washer & Bolt</u> Courtesy of GENERAL MOTORS COMPANY

- 1. Remove the drive belt. Refer to **Drive Belt Replacement**.
- 2. Remove the cooling fan. Refer to **Fan Replacement**.

CAUTION: To prevent damage to the end of the crankshaft when using a crankshaft balancer removal tool install a bolt in the crankshaft. Use a shorter bolt with the same threads as the crankshaft balancer bolt. This bolt will allow a place for the tool to push against. The shorter bolt is to keep from going past the threads in the crankshaft and damaging the crankshaft threads.

3. Remove the crankshaft balancer bolt and washer.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

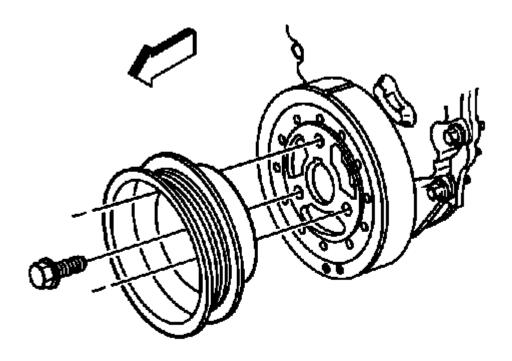


Fig. 165: View Of Crankshaft Pulley & Bolts Courtesy of GENERAL MOTORS COMPANY

4. Remove the crankshaft pulley bolts and pulley.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

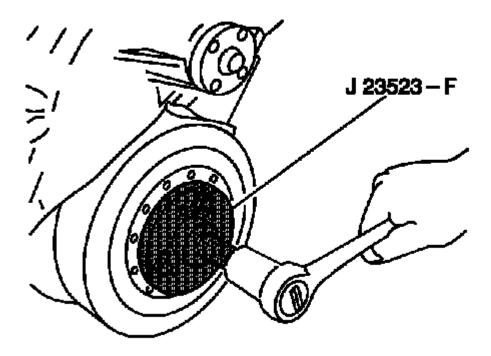


Fig. 166: Removing Crankshaft Balancer Using J 23523-F Courtesy of GENERAL MOTORS COMPANY

5. Using J 23523-F installer, remove the crankshaft balancer.

## **CAUTION: Refer to Fastener Caution.**

- 1. Install the J 23523-F installer plate and bolts onto the crankshaft balancer and tighten the bolts to 25 N.m (18 lb ft).
- 2. Install the J 23523-F installer forcing screw into the plate.
- 3. Rotate the J 23523-F installer forcing screw clockwise in order to remove the crankshaft balancer.
- 6. Remove the J 23523-F installer from the crankshaft balancer.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

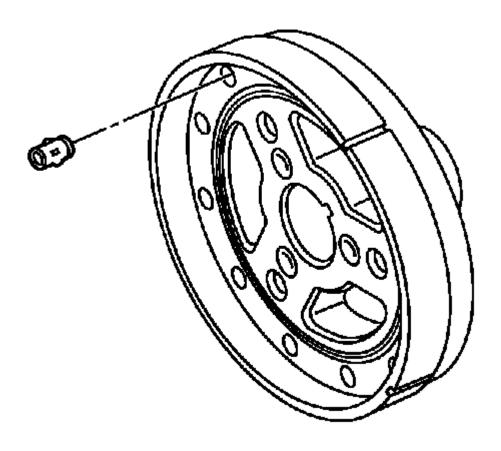


Fig. 167: View Of Crankshaft Balancer Weights Courtesy of GENERAL MOTORS COMPANY

- 7. Note the position and length of any crankshaft balancer weights, if necessary.
- 8. Clean and inspect the crankshaft balancer, if necessary. Refer to **Crankshaft Balancer Cleaning and Inspection**.

#### **Installation Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

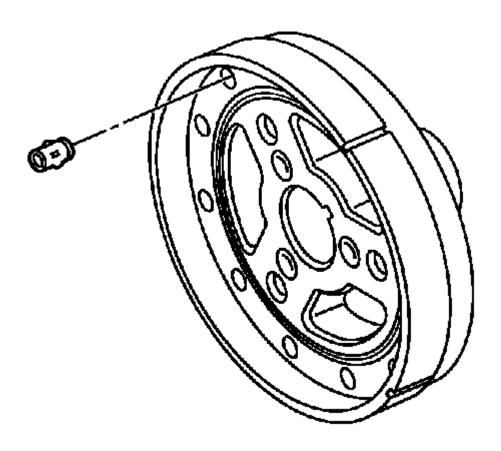



Fig. 168: View Of Crankshaft Balancer Weights Courtesy of GENERAL MOTORS COMPANY

1. Apply a small amount of grease to the crankshaft front cover seal sealing surface if reusing the seal.

NOTE: The length and location of the weight(s) must be the same as the original.

2. Ensure that the crankshaft balancer weight(s) is installed in the proper location, if necessary.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

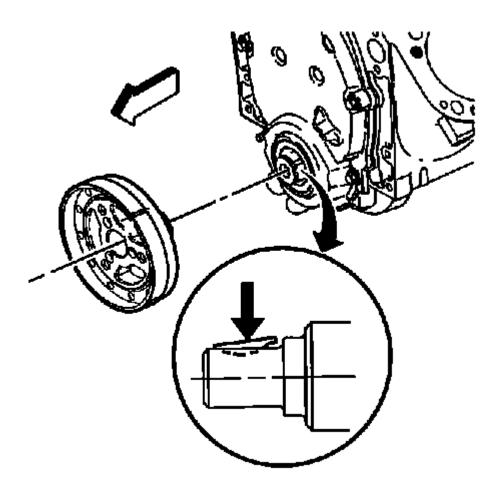

<u>Fig. 169: Identifying Crankshaft Balancer & Key</u> Courtesy of GENERAL MOTORS COMPANY

CAUTION: The inertial weight section of the crankshaft balancer is assembled to the hub with a rubber type material. The correct installation procedures (with the proper tool) must be followed or movement of the inertial weight section of the hub will destroy the tuning of the crankshaft balancer.

- 3. Apply a small amount of adhesive into the crankshaft balancer keyway in order to seal the crankshaft balancer keyway and crankshaft joint. Refer to <u>Adhesives, Fluids, Lubricants and Sealers</u> for the correct part number.
- 4. Align the keyway of the crankshaft balancer with the crankshaft balancer key.
- 5. Install the crankshaft balancer onto the end of the crankshaft.

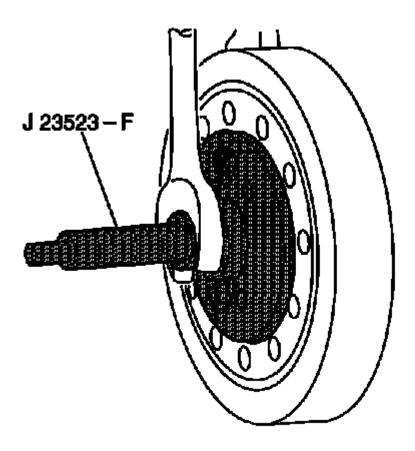


Fig. 170: Installing Crankshaft Balancer Using J 23523-F Courtesy of GENERAL MOTORS COMPANY

- 6. Using J 23523-F installer, press the crankshaft balancer onto the crankshaft.
  - 1. Install the J 23523-F installer plate and bolts onto the front of the crankshaft balancer and tighten the bolts to 25 N.m (18 lb ft).
  - 2. Install the J 23523-F installer forcing screw into the end for the crankshaft.
  - 3. Install the J 23523-F installer bearing, the washer and the nut onto the forcing screw.
  - 4. Rotate the **J 23523-F** installer nut clockwise until the crankshaft balancer hub is completely seated against the crankshaft position sensor reluctor ring.
- 7. Remove the J 23523-F installer.


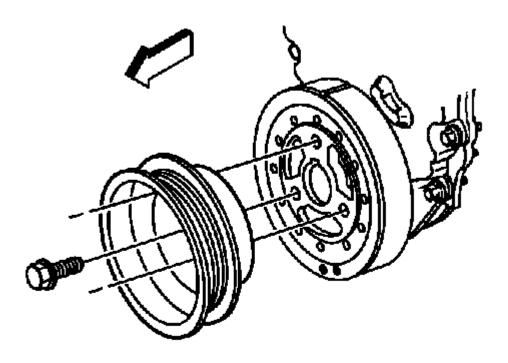


Fig. 171: View Of Crankshaft Pulley & Bolts
Courtesy of GENERAL MOTORS COMPANY

- 8. Install the crankshaft pulley and bolts. Finger tighten all bolts until snug in order to fully seat the pulley.
- 9. Tighten the bolts to 58 N.m (43 lb ft).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

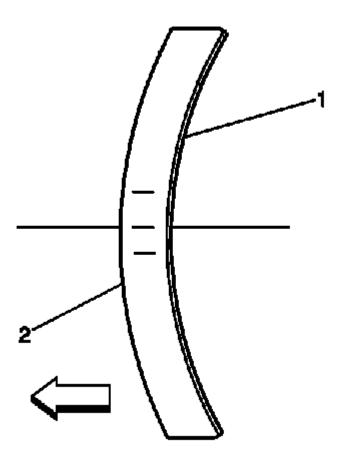

<u>Fig. 172: Crankshaft Balancer Washer</u> Courtesy of GENERAL MOTORS COMPANY

10. Ensure that the crown of the crankshaft balancer washer (2) is faced away from the engine.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

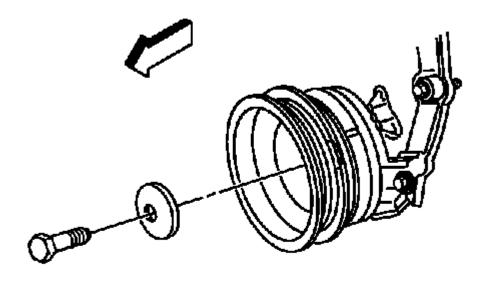


Fig. 173: View Of Crankshaft Balancer Washer & Bolt Courtesy of GENERAL MOTORS COMPANY

- 11. Install the crankshaft balancer washer and bolt and tighten to 95 N.m (70 lb ft).
- 12. Install the cooling fan. Refer to Fan Replacement.
- 13. Install the drive belt. Refer to **Drive Belt Replacement**.

### CRANKSHAFT FRONT OIL SEAL REPLACEMENT

**Special Tools** 

J 35468 Cover Aligner and Seal Installer

**Removal Procedure** 

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


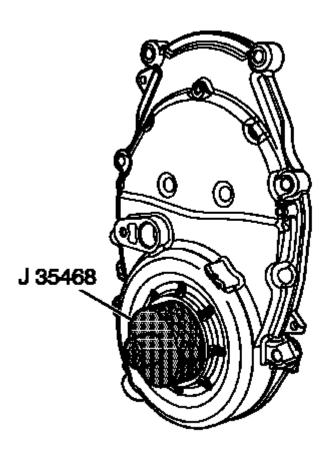


Fig. 174: Installing Front Seal Courtesy of GENERAL MOTORS COMPANY

- 1. Remove the crankshaft balancer. Refer to **Crankshaft Balancer Replacement**.
- 2. Inspect the engine front cover seal bore area for damage.
- 3. Use a suitable seal puller, remove the crankshaft front oil seal.

### **Installation Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

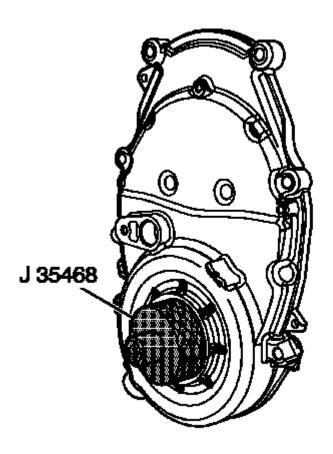

<u>Fig. 175: Installing Front Seal</u> Courtesy of GENERAL MOTORS COMPANY

- 1. Lubricate the exterior of the NEW seal with clean engine oil.
- 2. Using **J 35468** installer and a hammer, install the crankshaft front oil seal.
- 3. Ensure the crankshaft front oil seal is flush and square to the engine front cover.
- 4. Install the crankshaft balancer. Refer to **Crankshaft Balancer Replacement**.

### ENGINE FRONT COVER REPLACEMENT

#### **Removal Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

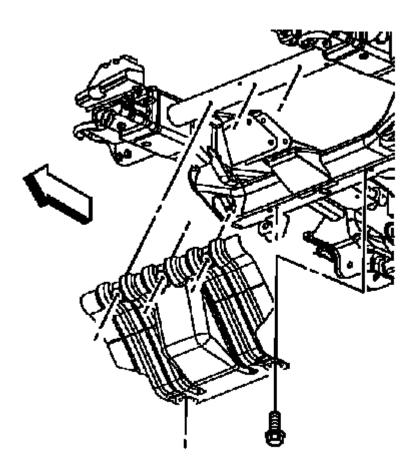


Fig. 176: View Of Engine Protection Shield **Courtesy of GENERAL MOTORS COMPANY** 

- 1. Remove the water pump. Refer to Water Pump Replacement (V6).
- 2. Remove the crankshaft balancer. Refer to **Crankshaft Balancer Replacement**.
- Remove the oil pan. Refer to Oil Pan Replacement.
- 4. Remove the engine shield bolts and shield.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

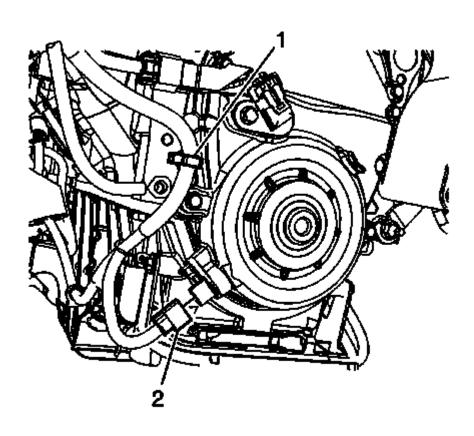


Fig. 177: Crankshaft Position (CKP) Sensor Electrical Connector & Clip Courtesy of GENERAL MOTORS COMPANY

- 5. Remove engine wire harness clip (1) from front cover.
- 6. Disconnect the crankshaft position (CKP) sensor electrical connector (2).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


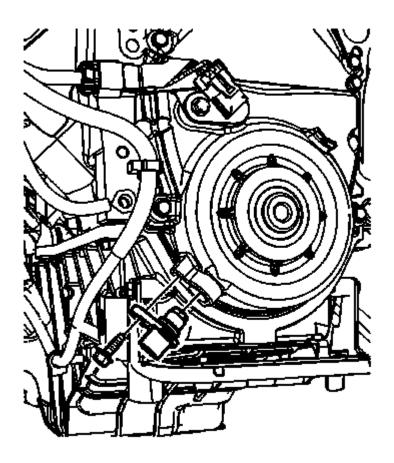


Fig. 178: CKP Sensor Bolt And Sensor Courtesy of GENERAL MOTORS COMPANY

7. Remove the CKP sensor bolt and sensor.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

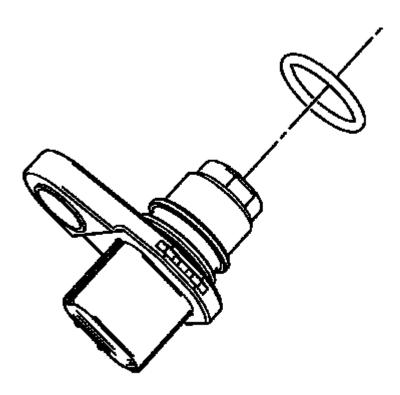

<u>Fig. 179: CKP Sensor O-Ring Seal</u> Courtesy of GENERAL MOTORS COMPANY

8. Remove and discard the CKP sensor O-ring seal.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

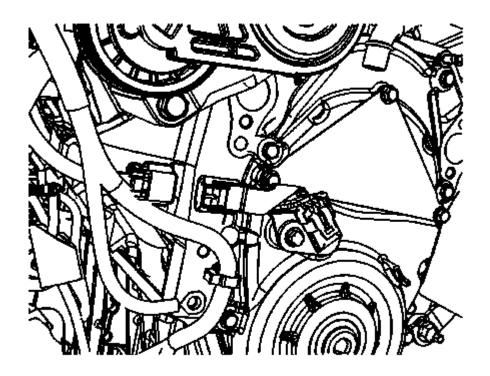


Fig. 180: Camshaft Position (CMP) Sensor Wiring Harness Jumper Courtesy of GENERAL MOTORS COMPANY

9. Disconnect the engine wiring harness electrical connector from the camshaft position (CMP) sensor wiring harness jumper.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


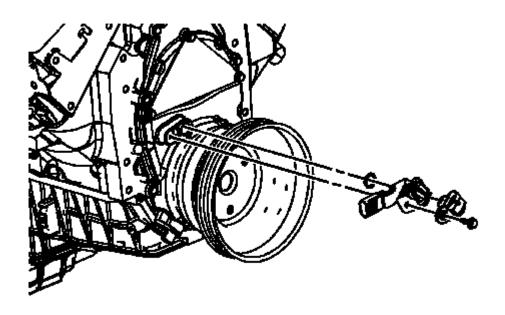


Fig. 181: View Of CMP Sensor & Bolt Courtesy of GENERAL MOTORS COMPANY

- 10. Remove the CMP sensor bolt.
- 11. Remove the CMP sensor and wiring harness jumper from the engine front cover.
- 12. Disconnect the CMP sensor wiring harness jumper from the CMP sensor.
- 13. Remove the CMP sensor from the wiring harness jumper.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

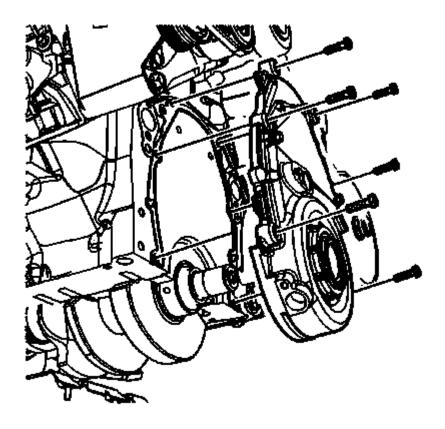

<u>Fig. 182: Front Cover And Bolts</u> Courtesy of GENERAL MOTORS COMPANY

14. Remove the front cover bolts.

NOTE: After the composite front cover is removed do not reinstall the front cover. Always install a NEW front cover.

- 15. Remove and discard the front cover.
- 16. Clean all sealing surfaces.

### **Installation Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

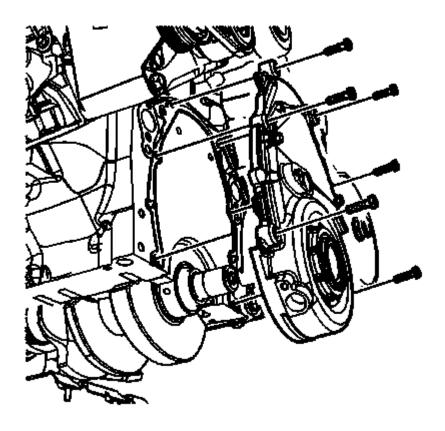


Fig. 183: Front Cover And Bolts
Courtesy of GENERAL MOTORS COMPANY

**CAUTION: Refer to Fastener Caution**.

- 1. Install a NEW front cover.
- 2. Install the front cover bolts and tighten to 12 N.m (106 lb in).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

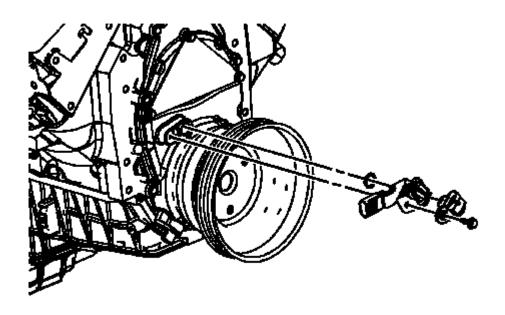


Fig. 184: View Of CMP Sensor & Bolt Courtesy of GENERAL MOTORS COMPANY

# NOTE: Do not reuse the original O-ring seal.

- 3. If reinstalling the old CMP sensor, install a NEW O-ring seal onto the sensor.
- 4. Install the CMP sensor to the wiring harness jumper.
- 5. Connect the CMP sensor wiring harness jumper to the CMP sensor.
- 6. Lubricate the O-ring seal with clean engine oil.
- 7. Install the CMP sensor and wiring harness jumper to the engine front cover.
- 8. Install the CMP sensor bolt and tighten to 10 N.m (89 lb in).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

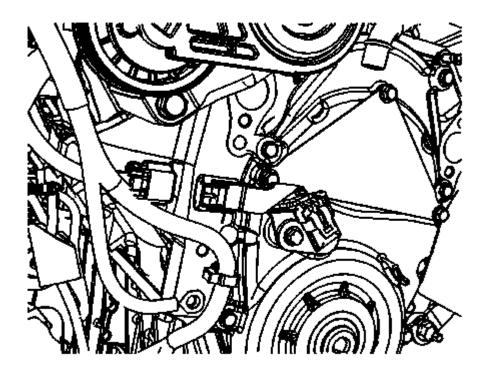


Fig. 185: Camshaft Position (CMP) Sensor Wiring Harness Jumper Courtesy of GENERAL MOTORS COMPANY

9. Connect the engine wiring harness electrical connector from the CMP sensor wiring harness jumper.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


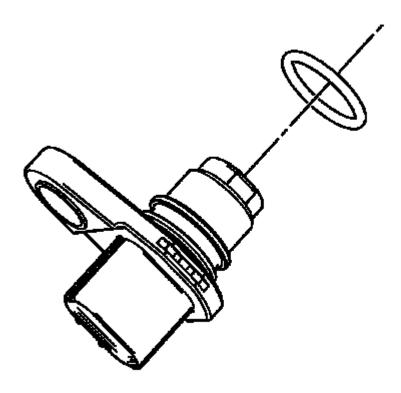


Fig. 186: CKP Sensor O-Ring Seal Courtesy of GENERAL MOTORS COMPANY

NOTE: DO NOT reuse the original CKP sensor O-ring seal.

- 10. Lubricate a NEW CKP sensor O-ring seal with clean engine oil.
- 11. Install the NEW O-ring seal onto the CKP sensor.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

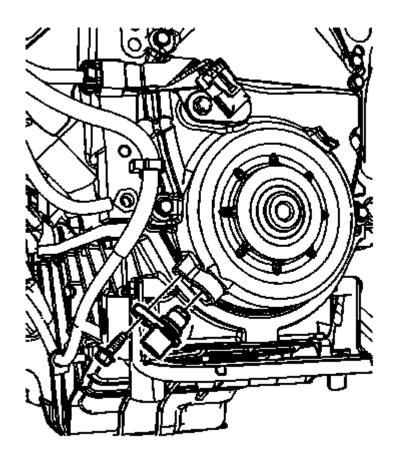

<u>Fig. 187: CKP Sensor Bolt And Sensor</u> Courtesy of GENERAL MOTORS COMPANY

NOTE: When installing the CKP sensor, make sure the sensor is fully seated

before tightening the bolt. A poorly seated sensor may perform erratically

and may set false DTCs.

12. Install the CKP sensor and bolt and tighten to 8 N.m (71 lb in).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

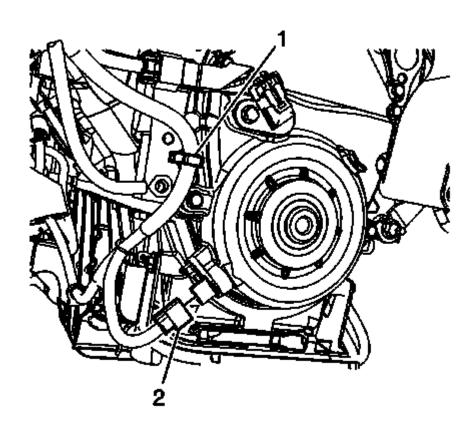


Fig. 188: Crankshaft Position (CKP) Sensor Electrical Connector & Clip Courtesy of GENERAL MOTORS COMPANY

- 13. Connect the CKP sensor electrical connector (2).
- 14. Install the engine wire harness clip (1) to front cover.
- 15. Install the oil pan. Refer to Oil Pan Replacement.
- 16. Install the crankshaft balancer. Refer to Crankshaft Balancer Replacement.
- 17. Install the water pump. Refer to Water Pump Replacement (V6).

# CRANKSHAFT POSITION SENSOR RELUCTOR RING REPLACEMENT

### **Special Tools**

J 5590 Rear Pinion Bearing Race Installer

#### Removal Procedure

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

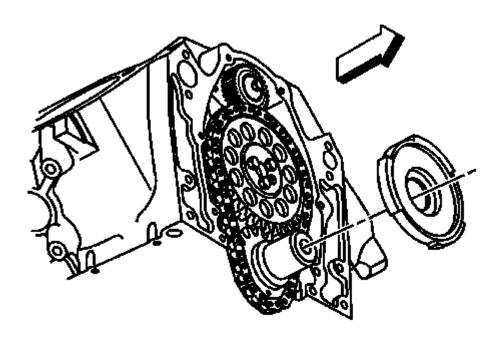


Fig. 189: CKP Sensor Reluctor Ring Courtesy of GENERAL MOTORS COMPANY

- 1. Remove the engine front cover. Refer to **Engine Front Cover Replacement**.
- 2. Remove the crankshaft position (CKP) sensor reluctor ring.

#### **Installation Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

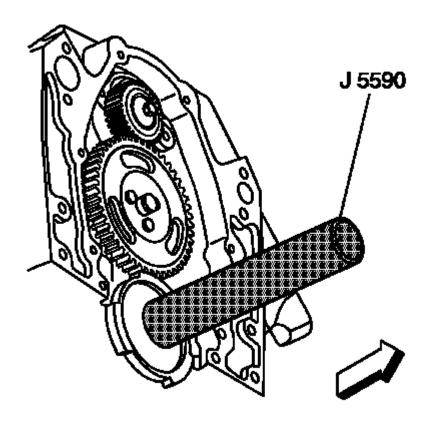


Fig. 190: View Of CKP Sensor Ring Courtesy of GENERAL MOTORS COMPANY

CAUTION: Failure to properly align the crankshaft position sensor reluctor ring may result in component damage and effect OBD II system performance.

NOTE: The reluctor ring is shaped like a dish. The dish must face the engine front cover.

- 1. Install the CKP sensor reluctor ring.
  - 1. Align the keyway on the CKP sensor reluctor ring with the key in the crankshaft.
  - 2. Using **J 5590** installer, push the CKP sensor reluctor ring onto the crankshaft until completely seated against the crankshaft sprocket.
- 2. Install the engine front cover. Refer to **Engine Front Cover Replacement**.

### CAMSHAFT TIMING CHAIN, SPROCKET AND TENSIONER REPLACEMENT

#### **Special Tools**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- J 5590 Bearing and Seal Driver
- J 5825-A Crankshaft Gear Remover

#### **Removal Procedure**

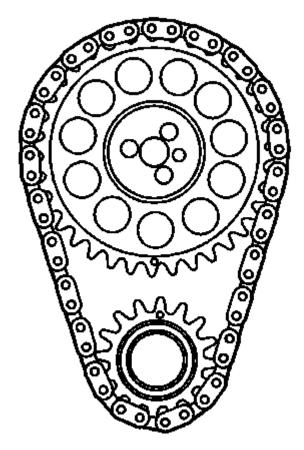


Fig. 191: View Of Camshaft & Crankshaft Sprocket Timing Marks Courtesy of GENERAL MOTORS COMPANY


- 1. Remove the crankshaft position (CKP) sensor reluctor ring. Refer to <u>Crankshaft Position Sensor</u> <u>Reluctor Ring Replacement</u>.
- 2. Install a  $7/16-20 \times 1$  inch bolt into the end of the crankshaft.

CAUTION: Align the timing marks before removing the timing chain. If it is necessary to turn either the camshaft or the crankshaft with the timing chain removed, loosen or remove the valve rocker arms. Turning either the crankshaft or camshaft with the timing chain removed may cause the pistons to contact the valves, resulting in damage.

- 3. Rotate the crankshaft until:
  - The timing marks on both sprockets line up.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


• The number 4 cylinder is at top dead center (TDC) of the compression stroke.

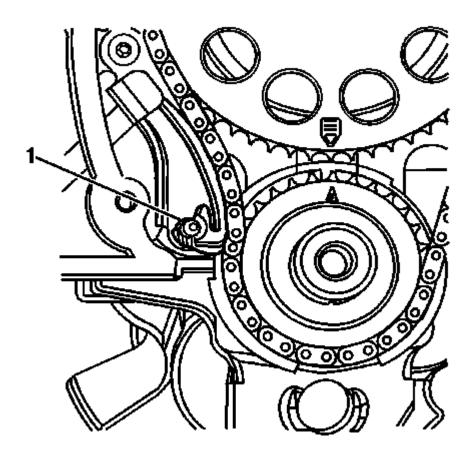

<u>Fig. 192: Timing Chain Tensioner Shoe</u> Courtesy of GENERAL MOTORS COMPANY

4. Unsnap the timing chain tensioner shoe from the pin (1).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

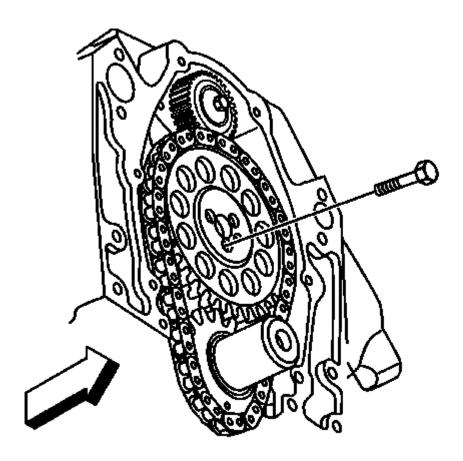

<u>Fig. 193: Camshaft Sprocket Bolts</u> Courtesy of GENERAL MOTORS COMPANY

5. Remove the camshaft sprocket bolts.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


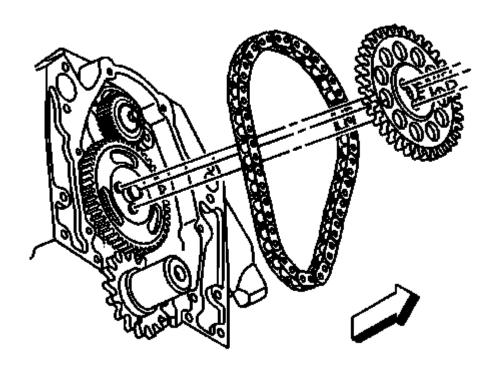


Fig. 194: Camshaft Sprocket & Camshaft Timing Chain Courtesy of GENERAL MOTORS COMPANY

6. Remove the camshaft sprocket and the camshaft timing chain.


2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

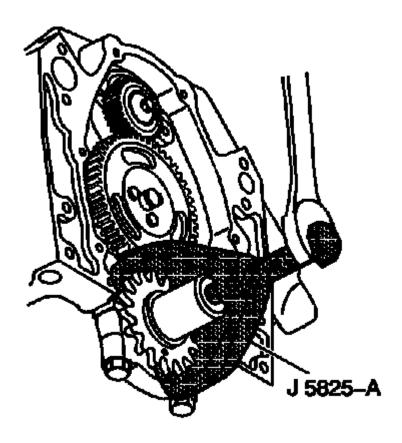

<u>Fig. 195: Removing Crankshaft Sprocket Using J 5825-A</u> Courtesy of GENERAL MOTORS COMPANY

7. Using J 5825-A remover and an open end wrench, remove the crankshaft sprocket.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

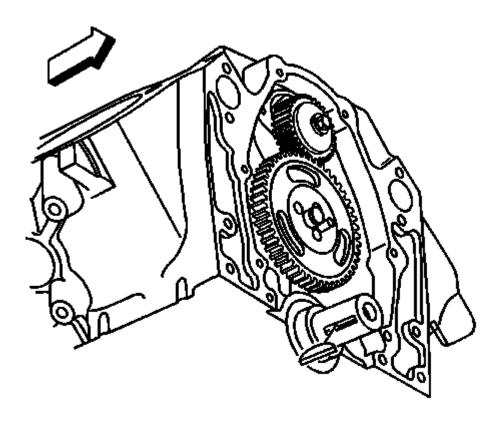

<u>Fig. 196: Crankshaft Balancer Key</u> Courtesy of GENERAL MOTORS COMPANY

8. Remove the crankshaft balancer key.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

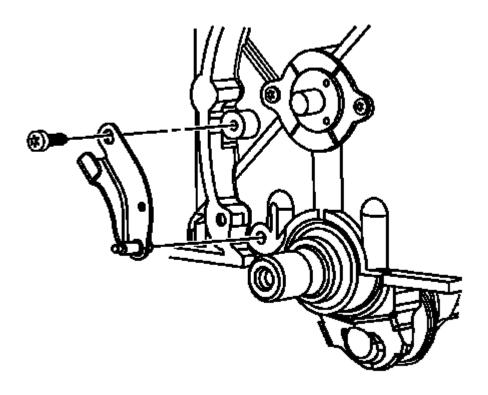


Fig. 197: Timing Chain Tensioner Bracket
Courtesy of GENERAL MOTORS COMPANY

- 9. If necessary, remove the timing chain tensioner bracket bolt and bracket.
- 10. Clean and inspect the timing chain and sprockets, if necessary. Refer to <u>Camshaft Timing Chain and Sprocket Cleaning and Inspection</u>.

### **Installation Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

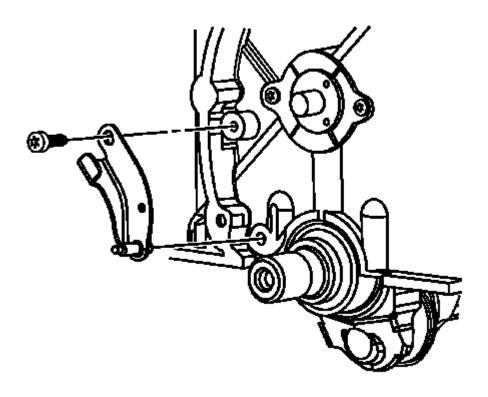


Fig. 198: Timing Chain Tensioner Bracket
Courtesy of GENERAL MOTORS COMPANY

**CAUTION: Refer to Fastener Caution**.

1. If necessary, install the timing chain tensioner bracket and bolt and tighten the bolt to 12 N.m (106 lb in).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

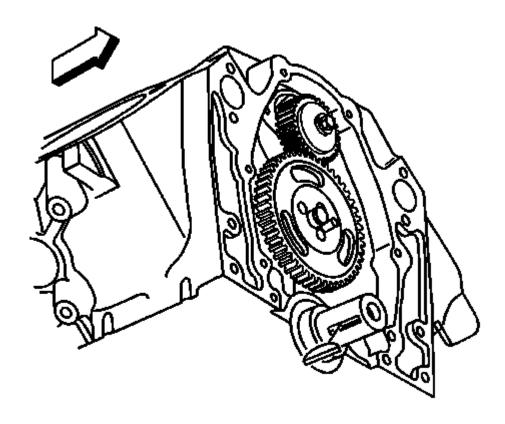


Fig. 199: Crankshaft Balancer Key Courtesy of GENERAL MOTORS COMPANY

2. Install the key into the crankshaft keyway.

The crankshaft balancer key should be parallel to the crankshaft or with a slight incline.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

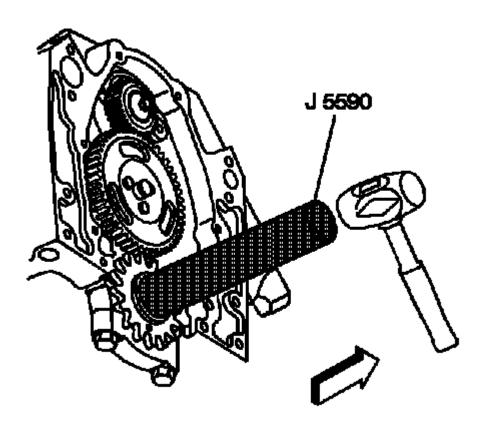


Fig. 200: Crankshaft Sprocket Courtesy of GENERAL MOTORS COMPANY

- 3. Align the keyway of the crankshaft sprocket with the crankshaft balancer key.
- 4. Using J 5590 driver, install the crankshaft sprocket.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

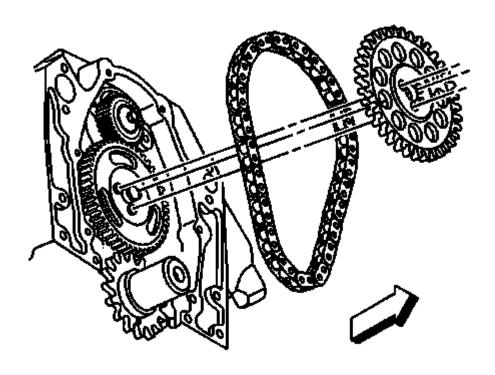


Fig. 201: Camshaft Sprocket & Camshaft Timing Chain Courtesy of GENERAL MOTORS COMPANY

NOTE: Install the camshaft sprocket with the alignment mark at the 6 o'clock position.

5. Install the camshaft sprocket and the camshaft timing chain. Wrap the timing chain around the crankshaft sprocket and position to the driver side of the engine.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

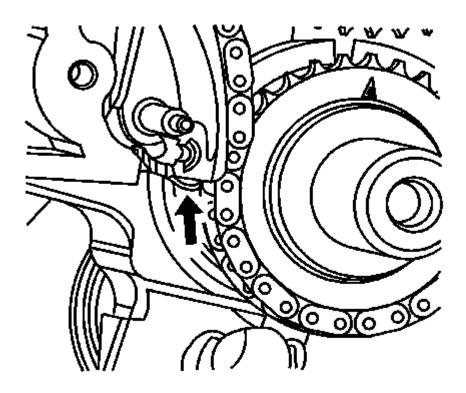


Fig. 202: Timing Chain Tensioner Shoe Courtesy of GENERAL MOTORS COMPANY

6. Install the timing chain tensioner shoe onto the bracket and position the top of the shoe under the tab at the top of the bracket.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

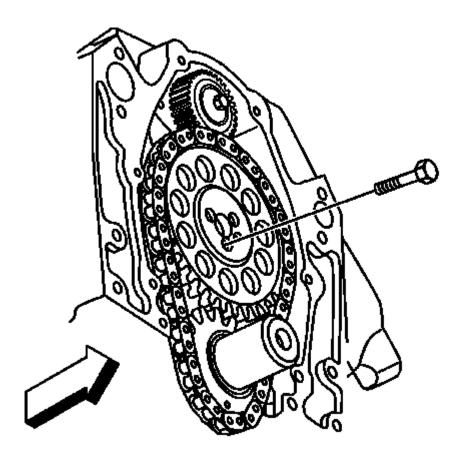


Fig. 203: Camshaft Sprocket Bolts
Courtesy of GENERAL MOTORS COMPANY

NOTE: Do not use a hammer to install the camshaft sprocket onto the camshaft. To do so may dislodge the expansion cup plug.

- 7. Insert the camshaft timing chain sprocket into the timing chain and position so when the camshaft timing chain sprocket is installed on the camshaft, the camshaft timing marks will line up.
- 8. Install the camshaft sprocket bolts and tighten to 25 N.m (18 lb ft).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

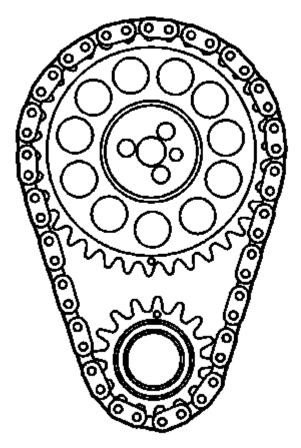


Fig. 204: View Of Camshaft & Crankshaft Sprocket Timing Marks Courtesy of GENERAL MOTORS COMPANY

- 9. Ensure that the crankshaft sprocket is aligned at the 12 o'clock position and camshaft sprocket is aligned at the 6 o'clock position.
- 10. Remove the bolt that was installed in the end of the crankshaft.
- 11. Install the CKP sensor reluctor ring. Refer to Crankshaft Position Sensor Reluctor Ring Replacement.

### BALANCER SHAFT REPLACEMENT

### **Special Tools**

- J 8092 Driver Handle
- J 36996 Balance Shaft Installer
- **J 45059** Angle Meter

### Removal Procedure

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

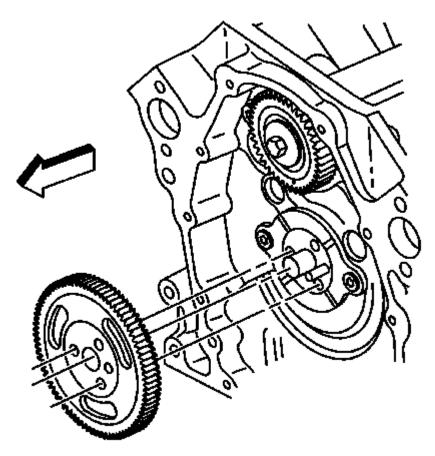


Fig. 205: View Of Balance Shaft Drive Gear **Courtesy of GENERAL MOTORS COMPANY** 

- 1. Remove the lifter pushrod guide. Refer to **Valve Lifter Replacement**.
- 2. Remove the timing chain and camshaft sprocket. Refer to **Camshaft Timing Chain, Sprocket and Tensioner Replacement**.
- 3. Remove the balance shaft drive gear.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

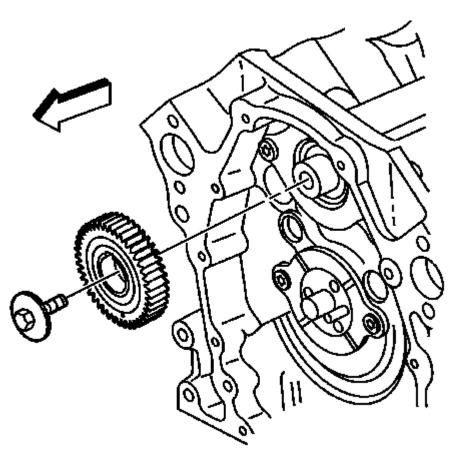


Fig. 206: Locating Balance Shaft Driven Gear Courtesy of GENERAL MOTORS COMPANY

- 4. Remove the balance shaft driven gear bolt.
  - 1. Use a wrench in order to secure the balance shaft.

Place the wrench onto the balance shaft near to the balance shaft front bearing.

- 2. Remove the balance shaft bolt.
- 3. Remove the wrench from the balance shaft.
- 5. Remove the balance shaft driven gear.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

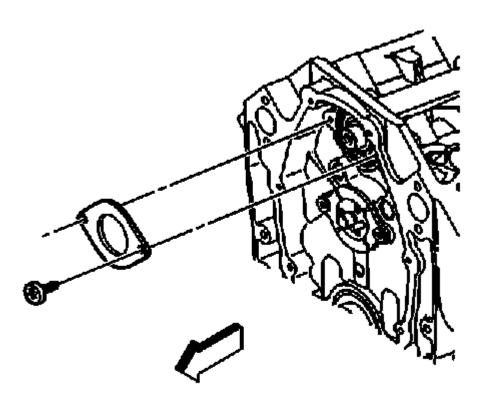


Fig. 207: View of Balance Shaft Retainer & Bolts Courtesy of GENERAL MOTORS COMPANY

6. Remove the balance shaft retainer bolts and retainer.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

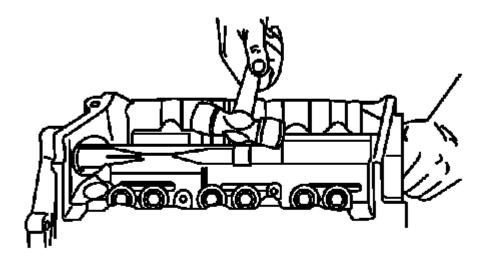


Fig. 208: Removing Balance Shaft
Courtesy of GENERAL MOTORS COMPANY

NOTE: The balance shaft and the balance shaft front bearing are serviced only as

a package. Do not remove the balance shaft front bearing from the balance

shaft.

7. Use a soft-faced hammer in order to remove the balance shaft from the engine block.

8. Clean and inspect the balance shaft, if necessary. Refer to Balance Shaft Cleaning and Inspection.

#### **Installation Procedure**

NOTE: The balance shaft drive and balance shaft driven gears are serviced as a set. The set includes the balance shaft driven gear bolt.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

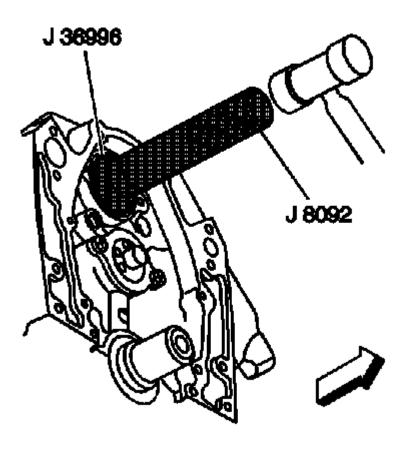


Fig. 209: Installing Balance Shaft
Courtesy of GENERAL MOTORS COMPANY

- 1. Apply clean engine oil to the balance shaft front bearing.
- 2. Using J 36996 installer and J 8092 handle, install the balance shaft.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

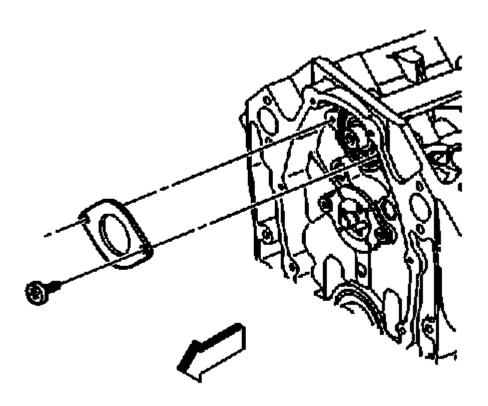


Fig. 210: View of Balance Shaft Retainer & Bolts Courtesy of GENERAL MOTORS COMPANY

**CAUTION: Refer to Fastener Caution.** 

3. Install the balance shaft retainer and bolts and tighten to 12 N.m (106 lb in).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

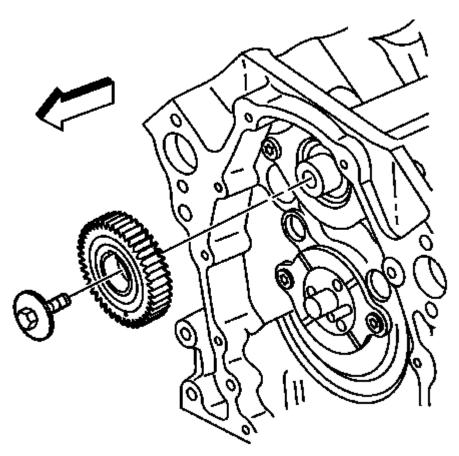


Fig. 211: Locating Balance Shaft Driven Gear Courtesy of GENERAL MOTORS COMPANY

- 4. Install the balance shaft driven gear.
- 5. If reusing the fastener, apply threadlocker to the threads of the balance shaft driven gear bolt. Refer to **Adhesives, Fluids, Lubricants and Sealers** for the correct part number.
- 6. Install the balance shaft driven gear bolt.
  - 1. Use a wrench to secure the balance shaft.

Place the wrench onto the balance shaft near to the balance shaft front bearing.

- 2. Install the balance shaft driven gear bolt.
  - 1. Tighten the bolt a first pass to 20 N.m (15 lb ft).
  - 2. Tighten the bolt a final pass an additional 35 degrees using **J 45059** meter.
- 7. Remove the wrench from the balance shaft.
- 8. Rotate the balance shaft by hand in order to ensure that there is clearance between the balance shaft and the valve lifter pushrod guide. If the balance shaft does not rotate freely, check to ensure that the retaining ring on the balance shaft front bearing is seated on the case.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


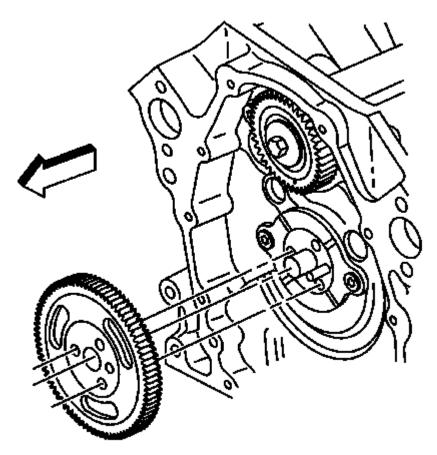


Fig. 212: View Of Balance Shaft Drive Gear Courtesy of GENERAL MOTORS COMPANY

9. Install the balance shaft drive gear. DO NOT install the camshaft sprocket bolts at this time.


2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

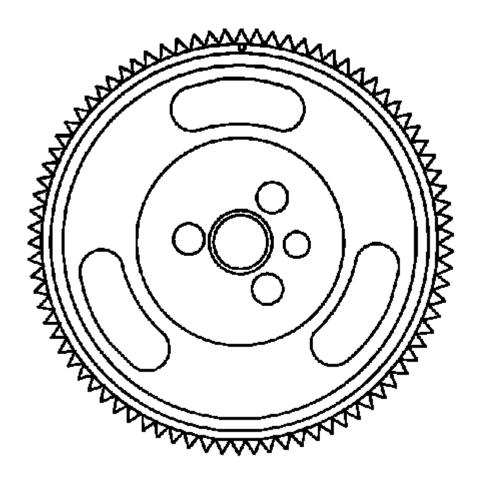

<u>Fig. 213: Balance Shaft Drive Gear Camshaft Timing Mark</u> Courtesy of GENERAL MOTORS COMPANY

10. Rotate the camshaft so that the timing mark on the balance shaft drive gear is in the 12 o'clock position.


2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

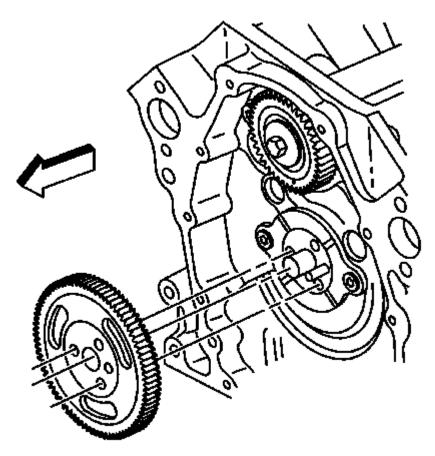

<u>Fig. 214: View Of Balance Shaft Drive Gear</u> Courtesy of GENERAL MOTORS COMPANY

11. Remove the balance shaft drive gear.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

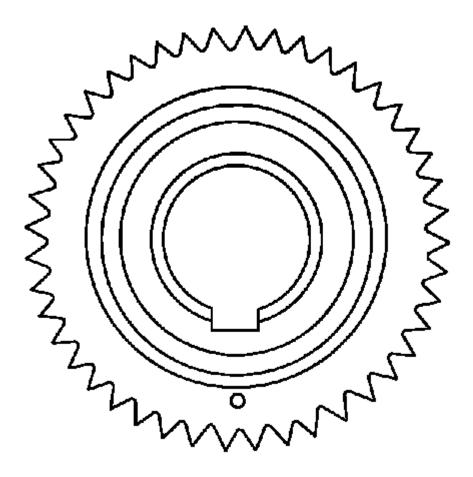

<u>Fig. 215: Balance Shaft Driven Gear Timing Mark</u> Courtesy of GENERAL MOTORS COMPANY

12. Rotate the balance shaft so that the timing mark on the balance shaft driven gear is in the 6 o'clock position.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

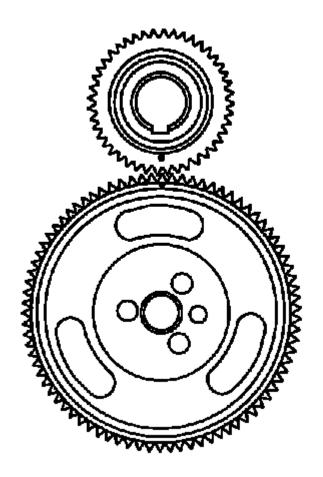


Fig. 216: Aligning Balance Shaft Drive Gear & Balance Shaft Driven Gear Timing Marks Courtesy of GENERAL MOTORS COMPANY

- 13. Position the balance shaft drive gear onto the engine camshaft.
- 14. Look to ensure that the balance shaft drive gear and the balance shaft driven gear timing marks are aligned.
- 15. Install the timing chain and the camshaft sprocket. Refer to <u>Camshaft Timing Chain</u>, <u>Sprocket and Tensioner Replacement</u>.
- 16. Install the valve lifter pushrod guide. Refer to **Valve Lifter Replacement**.

#### BALANCER SHAFT FRONT BEARING AND REAR BEARING REPLACEMENT

## **Special Tools**

- J 26941 Bushing and Bearing Remover
- J 38834 Balance Shaft Service Kit

#### Removal Procedure

# 2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

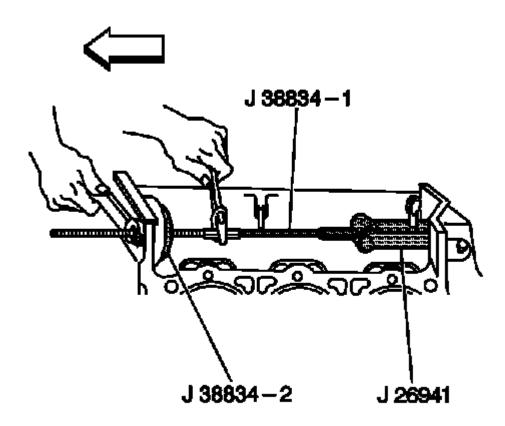


Fig. 217: Balance Shaft Rear Bearing Courtesy of GENERAL MOTORS COMPANY

IMPORTANT: The balance shaft and the front bearing are serviced only as a package. Do not remove the bearing from the balance shaft.

- 1. Remove the balance shaft. Refer to **Balancer Shaft Replacement**.
- 2. Using J 26941 remover and the J 38834 kit, remove the balance shaft rear bearing.
  - 1. Install the **J 26941** remover legs behind the balance shaft rear bearing and secure.
  - 2. Install the J 38834-1 with the short threaded end through the balance shaft bore in the front of the engine block.
  - 3. Install J 38834-1 into the **J 26941** remover.
  - 4. Slide the J 38834-2 onto the J 38834-1 and into the balance shaft bore of the engine block.
  - 5. Install the **J 38834** kit bearing, washer and nut onto the J 38834-1.
  - 6. Using a wrench, secure the J 38834-1 and then rotate the **J 38834** kit nut clockwise until the balance shaft rear bearing is removed from the engine block.
  - 7. Remove the **J 26941** remover from the balance shaft rear bearing.
- 3. Discard the balance shaft rear bearing.

#### **Installation Procedure**

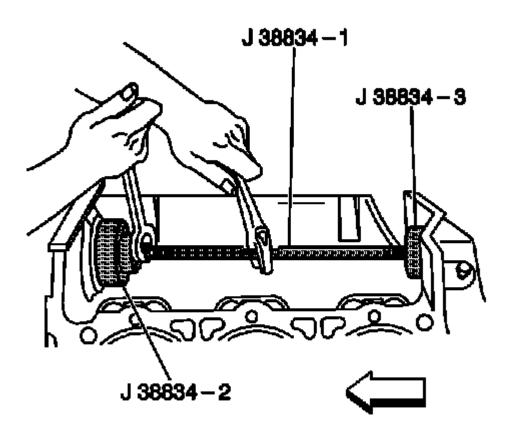


Fig. 218: Installing Balance Shaft Rear Bearing Courtesy of GENERAL MOTORS COMPANY

- 1. Using J 38834 kit, install the balance shaft rear bearing.
  - 1. Install the J 38834-3 onto the short threaded end of the J 38834-1.
  - 2. Install the J 38834 kit nut, the washer and the bearing on the long threaded end of the J 38834-1.
  - 3. Install the J 38834-2 onto the J 38834-1 so that the smaller diameter of the J 38834-2 will be facing the front of the engine block.
  - 4. Install the J 38834-2 on the inside of the balance shaft front bearing bore.
  - 5. Lubricate the NEW balance shaft rear bearing with clean engine oil.
  - 6. Install the balance shaft rear bearing onto the J 38834-2.
  - 7. Align the balance shaft rear bearing for installation.
  - 8. Using a wrench, secure the J 38834-1 into place.
  - 9. Rotate the **J 38834** kit nut until the balance shaft rear bearing is properly and completely pushed into the balance shaft rear bearing bore.
- 2. Remove the **J 38834** kit.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

3. Install the balance shaft. Refer to **Balancer Shaft Replacement**.

## **CAMSHAFT REPLACEMENT**

#### **Removal Procedure**

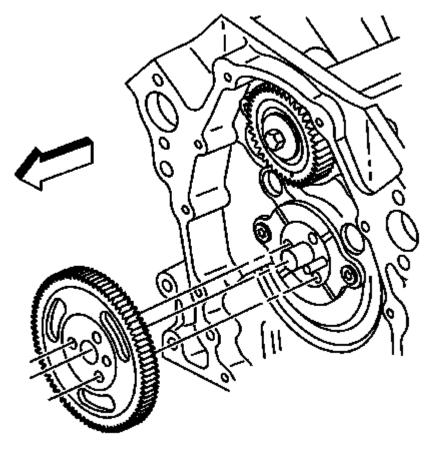


Fig. 219: View Of Balance Shaft Drive Gear Courtesy of GENERAL MOTORS COMPANY

- 1. Remove the lifters. Refer to Valve Lifter Replacement.
- 2. Remove the timing chain and the camshaft sprocket. Refer to <u>Camshaft Timing Chain</u>, <u>Sprocket and Tensioner Replacement</u>.
- 3. Remove the balance shaft drive gear.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

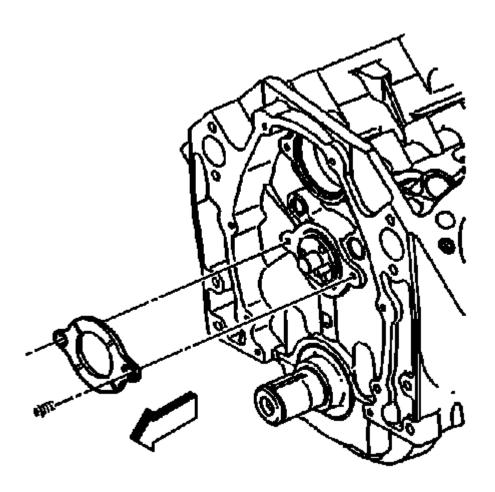


Fig. 220: View Of Camshaft Retainer & Bolts Courtesy of GENERAL MOTORS COMPANY

4. Remove the camshaft retainer bolts and retainer.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

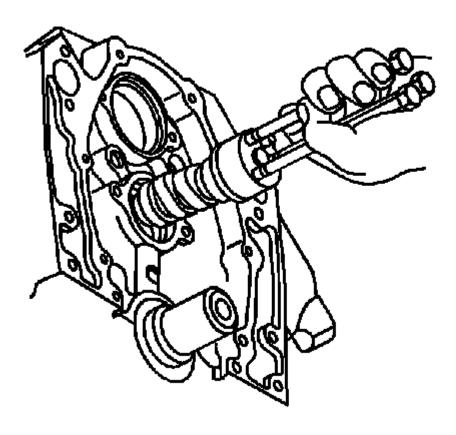


Fig. 221: Using Bolts To Handle Camshaft
Courtesy of GENERAL MOTORS COMPANY

CAUTION: All camshaft journals are the same diameter, so care must be used in removing or installing the camshaft to avoid damage to the camshaft bearings.

- 5. Remove the engine camshaft.
  - 1. Install the three  $5/16-18 \times 4.0$  inch bolts into the engine camshaft front bolt holes.
  - 2. Using the bolts as a handle, carefully rotate and pull the engine camshaft out of the camshaft bearings.
  - 3. Remove the bolts from the front of the engine camshaft.
  - 4. Clean and inspect the camshaft and/or bearings, if necessary. Refer to <u>Camshaft and Bearings</u> <u>Cleaning and Inspection</u>.

#### **Installation Procedure**

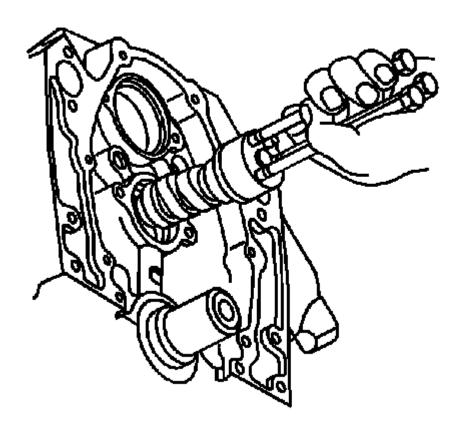


Fig. 222: Using Bolts To Handle Camshaft
Courtesy of GENERAL MOTORS COMPANY

NOTE: Whenever a new camshaft is installed, perform the following:

- Change the engine oil and filter.
- Add engine oil supplement to the engine oil. Refer to <u>Adhesives</u>, <u>Fluids</u>, <u>Lubricants and Sealers</u> for the correct part number.
- 1. Apply lubricant or engine oil supplement to the following components:
  - The engine camshaft lobes
  - The camshaft bearing journals
  - The camshaft bearings

Refer to Adhesives, Fluids, Lubricants and Sealers for the correct part number.

2. Install three  $5/16-18 \times 4.0$  inch bolts into the engine camshaft front bolt holes.

CAUTION: All camshaft journals are the same diameter, so care must be used in removing or installing the camshaft to avoid damage to the camshaft

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

## bearings.

- 3. Using the bolts as a handle, install the engine camshaft.
- 4. Remove the 3 bolts from the front of the engine camshaft.

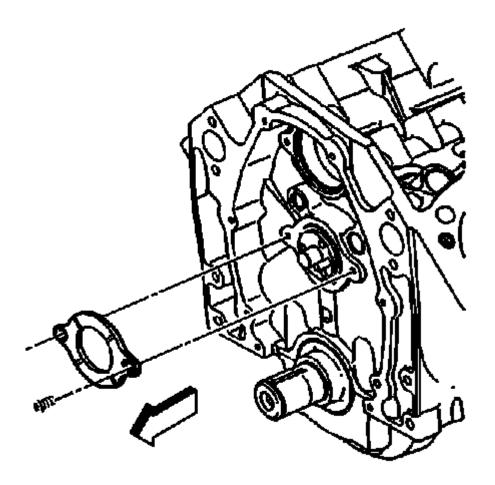


Fig. 223: View Of Camshaft Retainer & Bolts Courtesy of GENERAL MOTORS COMPANY

5. If reusing the fasteners, apply threadlocker to the threads of the camshaft retainer bolts. Refer to **Adhesives, Fluids, Lubricants and Sealers** for the correct part number.

# **CAUTION: Refer to Fastener Caution.**

- 6. Install the camshaft retainer and bolts and tighten to 12 N.m (106 lb in).
- 7. Install the balance shaft drive gear. Refer to **Balance Shaft Installation**, for alignment of the balance shaft drive gear and the driven gear.
- 8. Install the timing chain and camshaft sprocket. Refer to <u>Camshaft Timing Chain</u>, <u>Sprocket and Tensioner Replacement</u>.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

9. Install the lifters. Refer to Valve Lifter Replacement.

## OIL FILTER ADAPTER REPLACEMENT (WITH ENGINE OIL COOLER)

#### **Removal Procedure**

- 1. Raise the vehicle. Refer to Lifting and Jacking the Vehicle.
- 2. Position a suitable container to catch the engine oil.
- 3. Remove the engine oil filter.
- 4. Disconnect the engine oil cooler hoses from the oil filter adapter. Refer to Engine Oil Cooler Hose/Pipe Replacement (LR4, LM7, LQ4), Engine Oil Cooler Hose/Pipe Replacement (LU3).


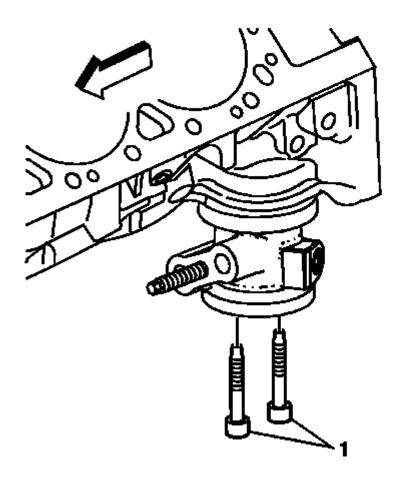


Fig. 224: Identifying Oil Filter Adapter Bolts Courtesy of GENERAL MOTORS COMPANY

5. Remove the oil filter adapter bolts (1).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

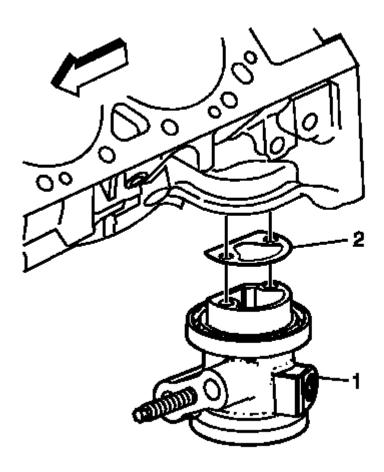

<u>Fig. 225: Identifying Oil Filter Adapter And Oil Filter Adapter Gasket</u> Courtesy of GENERAL MOTORS COMPANY

- 6. Remove the oil filter adapter (1) and the oil filter adapter gasket (2).
- 7. Discard the oil filter adapter gasket.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

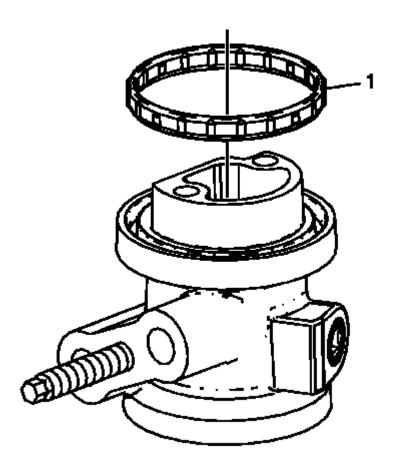


Fig. 226: Identifying Oil Filter Adapter Seal O-Ring Courtesy of GENERAL MOTORS COMPANY

8. Remove and discard the oil filter adapter seal, O-ring (1).

## **Installation Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

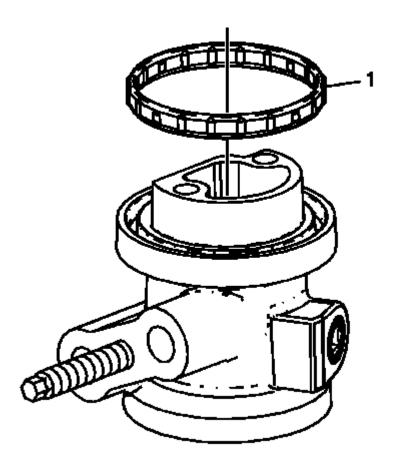


Fig. 227: Identifying Oil Filter Adapter Seal O-Ring Courtesy of GENERAL MOTORS COMPANY

1. Install the NEW oil filter adapter O-ring seal (1) into the groove in the oil filter adapter.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

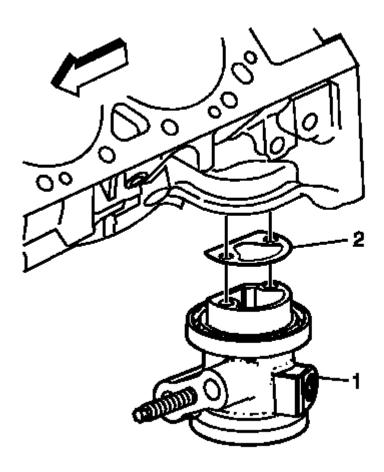


Fig. 228: Identifying Oil Filter Adapter And Oil Filter Adapter Gasket Courtesy of GENERAL MOTORS COMPANY

2. Install the oil filter adapter (1) and NEW oil filter adapter gasket (2).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

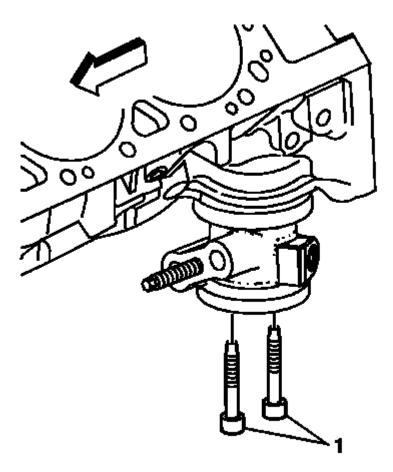


Fig. 229: Identifying Oil Filter Adapter Bolts
Courtesy of GENERAL MOTORS COMPANY

**CAUTION: Refer to Fastener Caution.** 


- 3. Install the oil filter adapter bolts (1) and tighten to 21 N.m (15 lb ft).
- 4. Connect the engine oil cooler hoses to the oil filter adapter. Refer to **Engine Oil Cooler Hose/Pipe Replacement (LU3)**.
- 5. Install the engine oil filter. Refer to **Engine Oil and Oil Filter Replacement**.
- 6. Lower the vehicle.
- 7. Operate the engine and check for leaks.
- 8. Inspect the engine oil level and fill to the proper level,

## OIL FILTER ADAPTER REPLACEMENT (W/O ENGINE OIL COOLER)

## Removal Procedure

- 1. Raise and suitably support the vehicle. Refer to Lifting and Jacking the Vehicle.
- 2. Position a suitable container under the vehicle.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

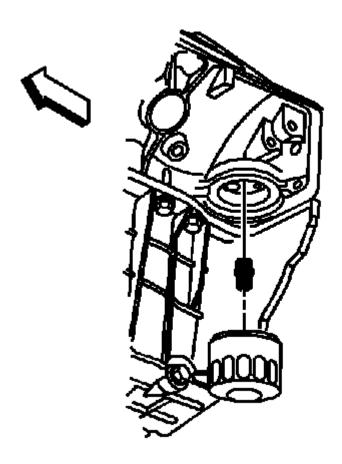

<u>Fig. 230: View Of Oil Filter & Adapter</u> Courtesy of GENERAL MOTORS COMPANY

- 3. Remove the oil filter.
- 4. Remove the oil filter adapter.

## **Installation Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

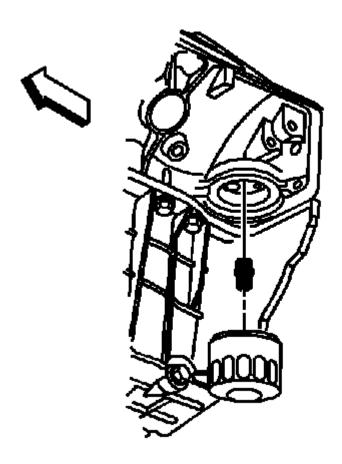


Fig. 231: View Of Oil Filter & Adapter Courtesy of GENERAL MOTORS COMPANY

**CAUTION: Refer to Fastener Caution.** 

- 1. Install the oil filter adapter and tighten to 55 N.m (41 lb ft).
- 2. Install the oil filter and tighten to 30 N.m (22 lb ft).
- 3. Lower the vehicle.
- 4. Start the engine and check for leaks.
- 5. Fill the engine with the proper quantity and quality of engine oil. Refer to **Approximate Fluid Capacities**.
- 6. Shut the engine OFF and check the oil level, add if needed.

## OIL FILTER BYPASS VALVE REPLACEMENT

#### Removal Procedure

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

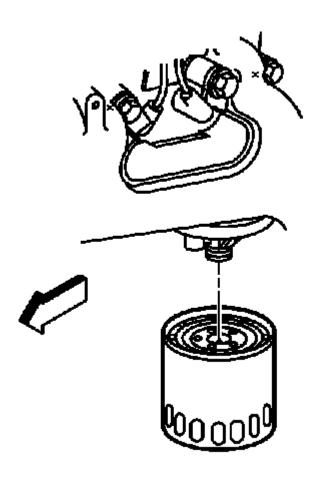


Fig. 232: View Of Oil Filter
Courtesy of GENERAL MOTORS COMPANY

- 1. Raise and suitably support the vehicle. Refer to Lifting and Jacking the Vehicle.
- 2. Position a suitable container under the vehicle to catch the oil.
- 3. Remove the oil filter.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

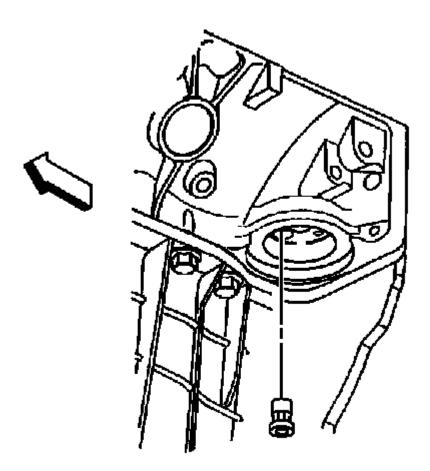


Fig. 233: View Of Oil Filter Bypass Valve Courtesy of GENERAL MOTORS COMPANY

- 4. Using a suitable prying tool, remove the oil filter bypass valve.
- 5. Clean and inspect the valve bore for damage.

#### **Installation Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

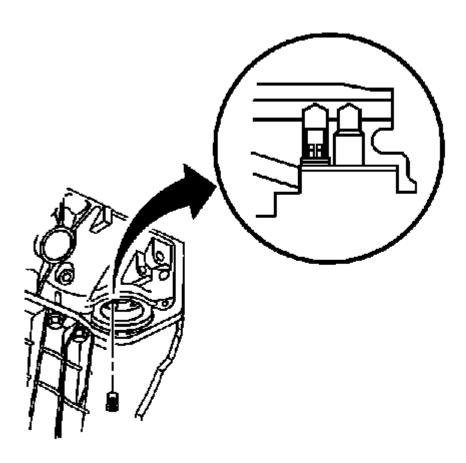


Fig. 234: View Of Oil Filter Bypass Valve Courtesy of GENERAL MOTORS COMPANY

- 1. Install a NEW oil filter bypass valve using the following procedure:
  - 1. Use a brass drift that is the same diameter as the outside diameter of the oil filter bypass valve.
  - 2. Install the oil filter bypass valve into the oil gallery bore until slightly below flush with the surface of the engine block.
  - 3. Using a pointed punch, stake the engine block area around the oil filter bypass valve.

Stake in 3 locations 120 degrees apart.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

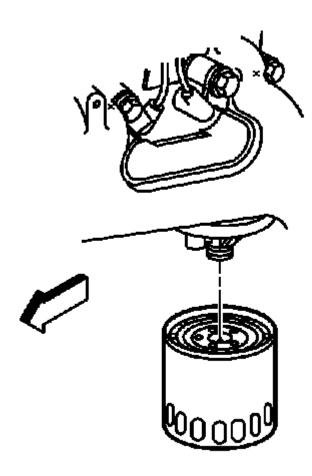


Fig. 235: View Of Oil Filter
Courtesy of GENERAL MOTORS COMPANY

- 2. Install the oil filter. Refer to **Engine Oil and Oil Filter Replacement**.
- 3. Lower the vehicle.

## **OIL PAN REPLACEMENT**

**Removal Procedure** 

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

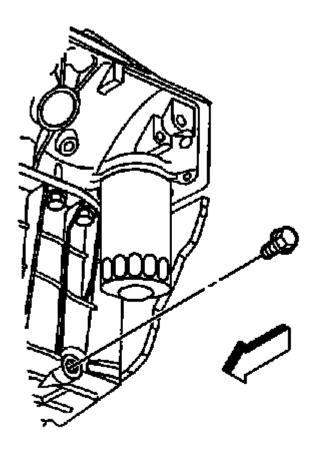


Fig. 236: Identifying Oil Drain Plug Courtesy of GENERAL MOTORS COMPANY

- 1. Raise and suitably support the vehicle. Refer to <u>Lifting and Jacking the Vehicle</u>.
- 2. Remove the drain plug and drain the oil into a suitable container.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

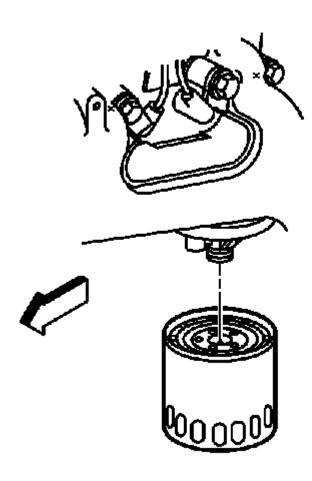


Fig. 237: View Of Oil Filter
Courtesy of GENERAL MOTORS COMPANY

3. Remove the oil filter.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

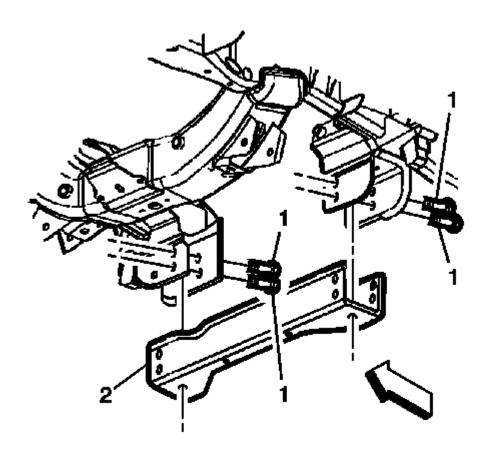


Fig. 238: View Of Crossbar Bolts & Bar (2WD)
Courtesy of GENERAL MOTORS COMPANY

4. Remove the crossmember bolts and bar.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

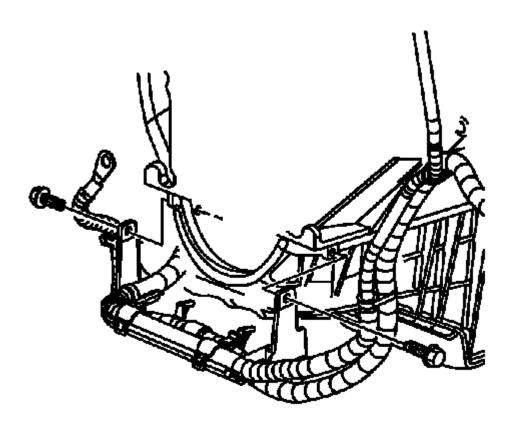


Fig. 239: View Of Battery Cable Bracket Bolts Courtesy of GENERAL MOTORS COMPANY

- 5. Remove the engine harness bracket bolts.
- 6. Remove the starter. Refer to **Starter Replacement (V6)**.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

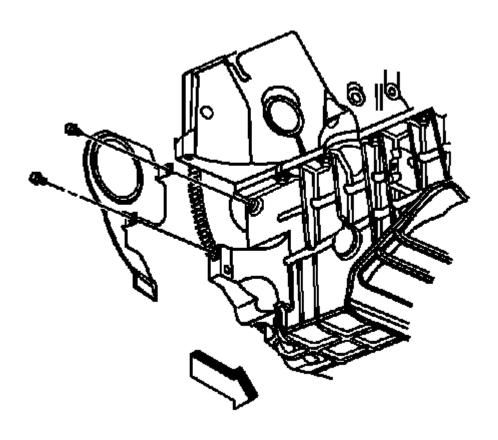


Fig. 240: Transmission Cover Courtesy of GENERAL MOTORS COMPANY

7. Remove the transmission cover.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


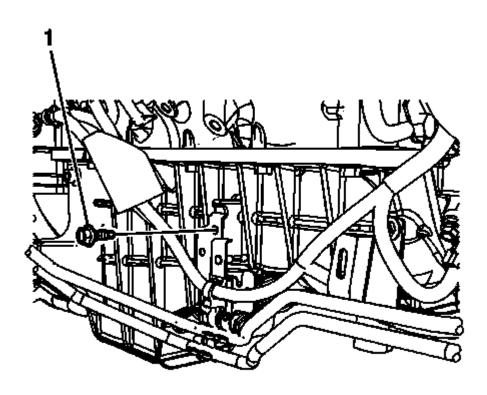


Fig. 241: Transmission Tube Bracket Courtesy of GENERAL MOTORS COMPANY

8. Remove the engine harness and transmission tube bracket (1).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

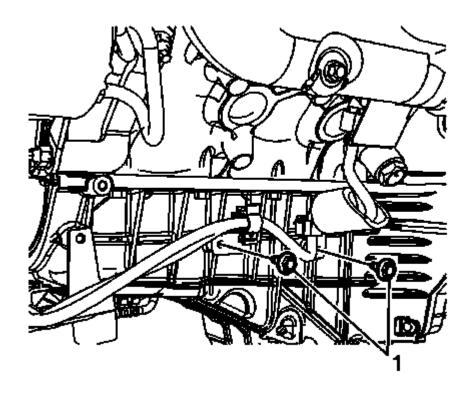

<u>Fig. 242: Engine Wire Harness Bracket Bolts</u> Courtesy of GENERAL MOTORS COMPANY

9. Remove two engine wire harness bracket bolts (1).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


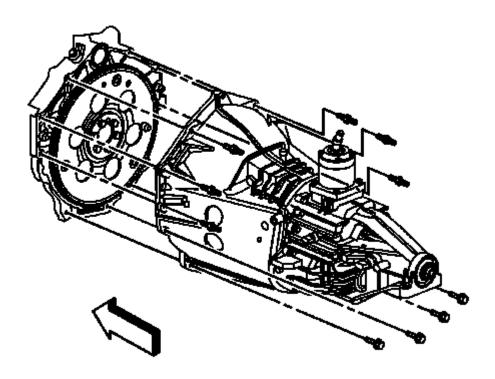


Fig. 243: Manual Transmission Bolts
Courtesy of GENERAL MOTORS COMPANY

10. Remove the manual transmission bolts, if equipped.


2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

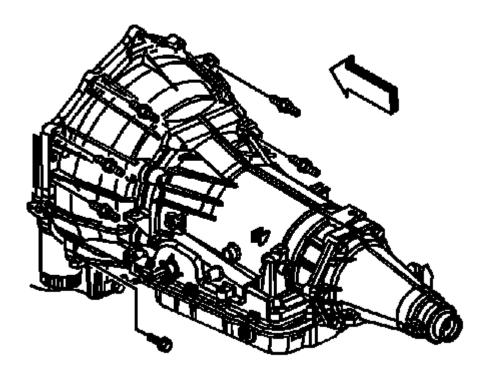

<u>Fig. 244: Automatic Transmission Bolts</u> Courtesy of GENERAL MOTORS COMPANY

11. Remove the automatic transmission bolts, if equipped.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

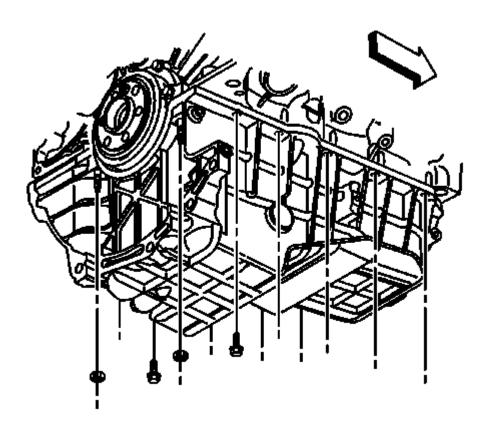

<u>Fig. 245: Oil Pan Bolts & Nuts</u> Courtesy of GENERAL MOTORS COMPANY

12. Remove the oil pan bolts and nuts.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

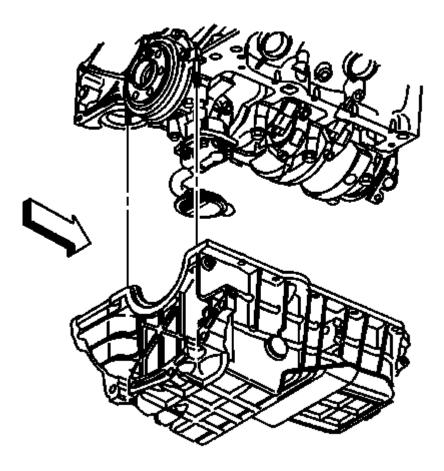


Fig. 246: Oil Pan Courtesy of GENERAL MOTORS COMPANY

13. Remove the oil pan.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

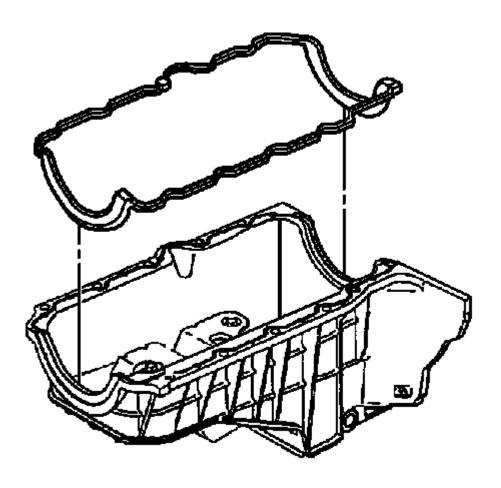


Fig. 247: View Of Oil Pan Gasket **Courtesy of GENERAL MOTORS COMPANY** 

- 14. Remove and discard the oil pan gasket.
- 15. Clean and inspect the oil pan, if necessary. Refer to Oil Pan Cleaning and Inspection.

#### **Installation Procedure**

CAUTION: Any time the transmission and the engine oil pan are off of the engine at the same time, install the transmission before the oil pan. This is to allow for the proper oil pan alignment. Failure to achieve the correct oil pan alignment can result in transmission failure.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

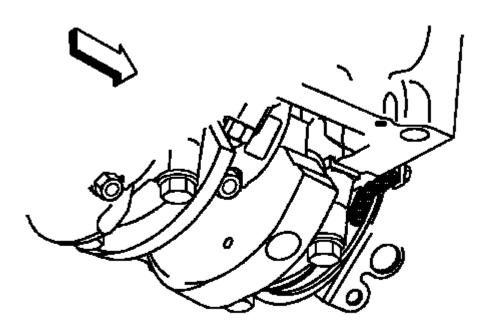


Fig. 248: Applying Adhesive To Sides Of Front Cover To Engine Block Junction At Oil Pan Sealing **Surfaces** 

**Courtesy of GENERAL MOTORS COMPANY** 

1. Apply a 5 mm (0.197 in) wide and 25 mm (1.0 in) long bead of adhesive to both the right and left sides of the front cover to engine block junction at the oil pan sealing surfaces. Refer to Adhesives, Fluids, Lubricants and Sealers for the correct part number.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

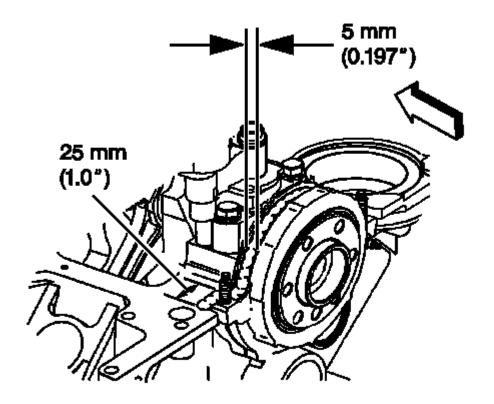


Fig. 249: Applying Adhesive To Entire Length Of Rear Oil Seal Housing To Engine Block Junction At Oil Pan Sealing Surfaces
Courtesy of GENERAL MOTORS COMPANY

2. Apply a 5 mm (0.197 in) wide and 25 mm (1.0 in) long bead of adhesive to the entire length of rear oil seal housing to engine block junction at the oil pan sealing surfaces. Refer to **Adhesives, Fluids, Lubricants and Sealers** for the correct part number.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

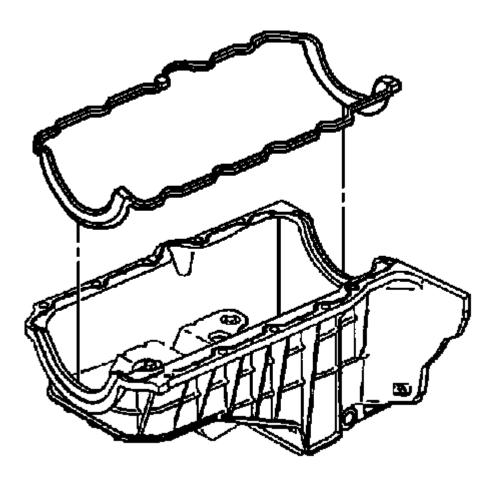


Fig. 250: View Of Oil Pan Gasket Courtesy of GENERAL MOTORS COMPANY

NOTE: Always install a NEW oil pan gasket.

The oil pan gasket and oil pan must be installed and the fasteners tightened while the adhesive is still wet to the touch.

3. Install a NEW oil pan gasket into the groove in the oil pan.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

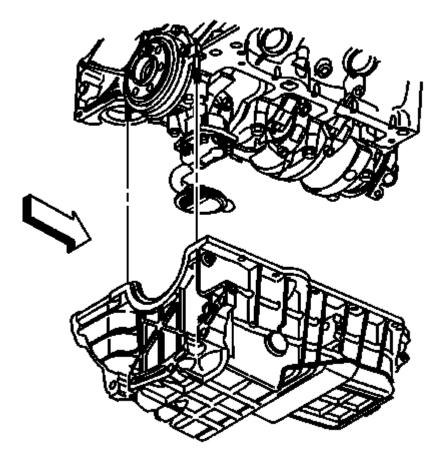


Fig. 251: Oil Pan
Courtesy of GENERAL MOTORS COMPANY


NOTE: The oil pan alignment must always be flush or forward no more than 0.3 mm (0.011 in) from the rear face of the engine block.

4. Install the oil pan.

Press the oil pan gasket into the grooves of the engine front cover and crankshaft rear oil seal housing.

5. Slide the oil pan back against a suitable straight edge.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

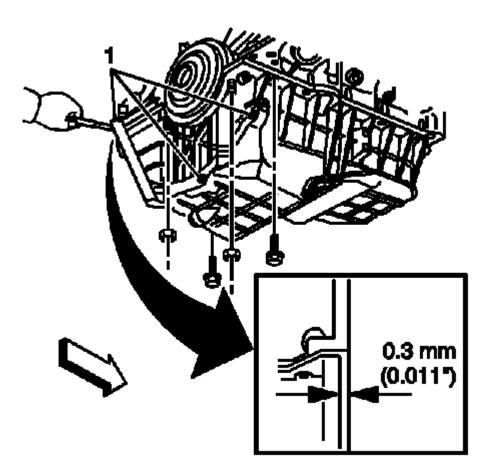


<u>Fig. 252: Installing Oil Pan</u> Courtesy of GENERAL MOTORS COMPANY

- 6. Install the oil pan bolts and nuts until snug.
- 7. Measure the oil pan-to-transmission housing clearance using a feeler gauge and a straight edge.

Use the feeler gauge to check the clearance at the oil pan-to-transmission housing measurement points (1). If the clearance exceeds 0.3 mm (0.011 in) at any of the oil pan-to-transmission housing measurement points (1), then repeat the step until the oil pan-to-transmission housing clearance is within specifications. The oil pan must always be forward of the rear face of the engine block.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

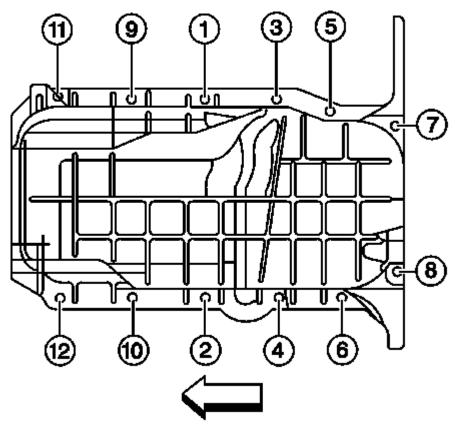

<u>Fig. 253: Oil Pan Bolts & Nuts Tightening Sequence</u> Courtesy of GENERAL MOTORS COMPANY

**CAUTION: Refer to Fastener Caution.** 

- 8. Tighten the oil pan bolts and nuts in the sequence shown to 25 N.m (18 lb ft).
- 9. Measure the clearance at the oil pan-to-transmission housing measurement points in order to ensure proper alignment.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

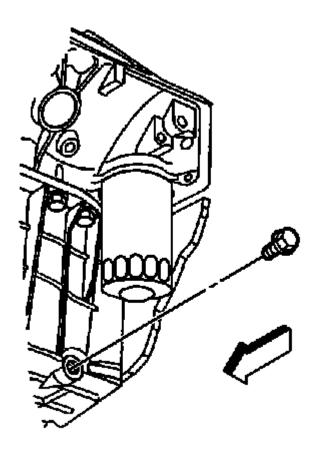


Fig. 254: Identifying Oil Drain Plug Courtesy of GENERAL MOTORS COMPANY

- 10. Install a NEW drain plug O-ring seal onto the drain plug.
- 11. Install the drain plug and tighten to 25 N.m (18 lb ft).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


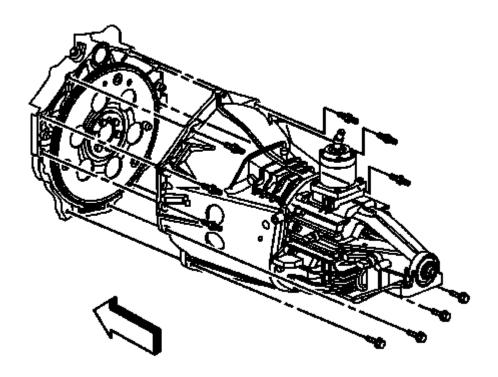


Fig. 255: Manual Transmission Bolts
Courtesy of GENERAL MOTORS COMPANY

12. Install the transmission cover and tighten the bolts to 12 N.m (106 lb in).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

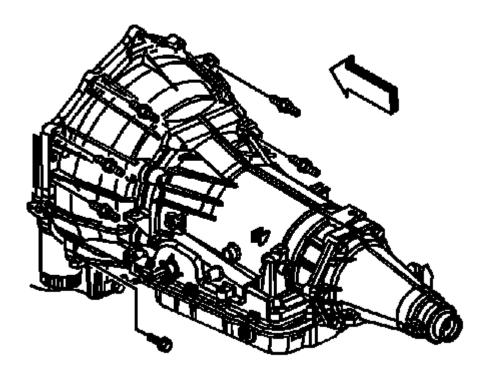

<u>Fig. 256: Automatic Transmission Bolts</u> Courtesy of GENERAL MOTORS COMPANY

13. Install the automatic transmission bolts, if equipped.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


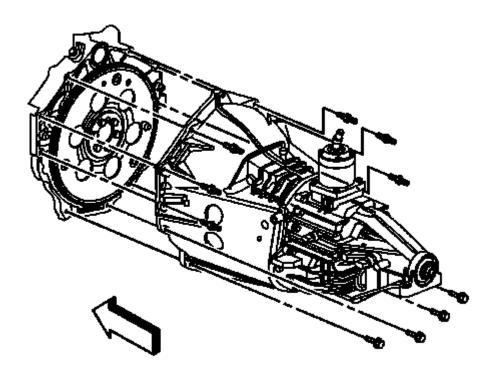


Fig. 257: Manual Transmission Bolts
Courtesy of GENERAL MOTORS COMPANY

14. Install the manual transmission bolts, if equipped and tighten to 50 N.m (37 lb ft).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

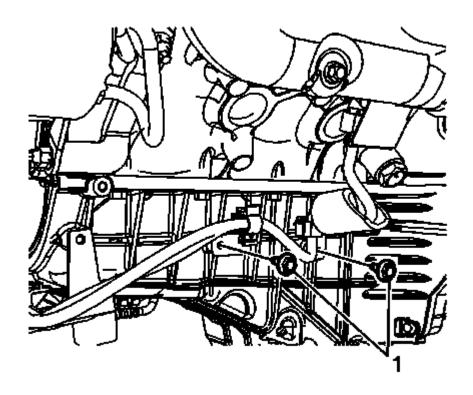

<u>Fig. 258: Engine Wire Harness Bracket Bolts</u> Courtesy of GENERAL MOTORS COMPANY

15. Install two engine wire harness bracket bolts (1).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

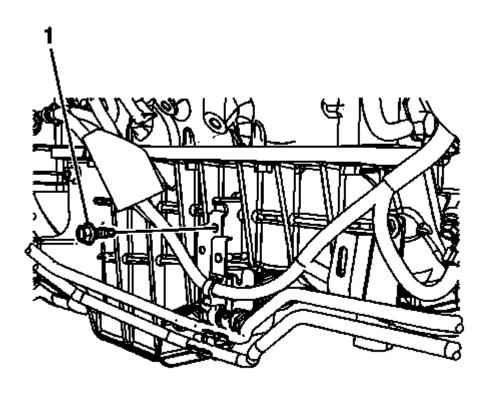


Fig. 259: Transmission Tube Bracket
Courtesy of GENERAL MOTORS COMPANY

16. Install the engine harness and transmission tube bracket bolt (1) and tighten to 9 N.m (80 lb in).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

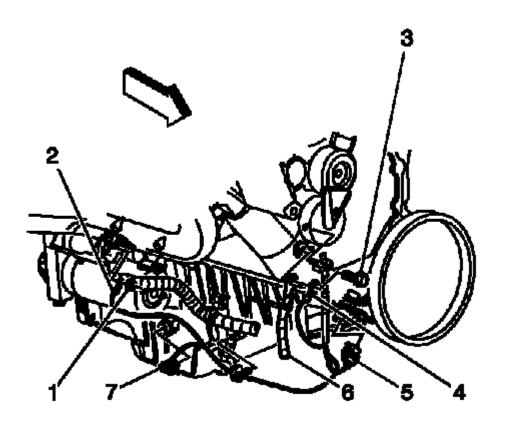


Fig. 260: View Of Oil Level Sensor Electrical Connector, CKP Electrical Connector & Battery Ground Bolt
Courtesy of GENERAL MOTORS COMPANY

- 17. Install the starter. Refer to, **Starter Replacement (V6)**.
- 18. Connect the oil level sensor electrical connector (7).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


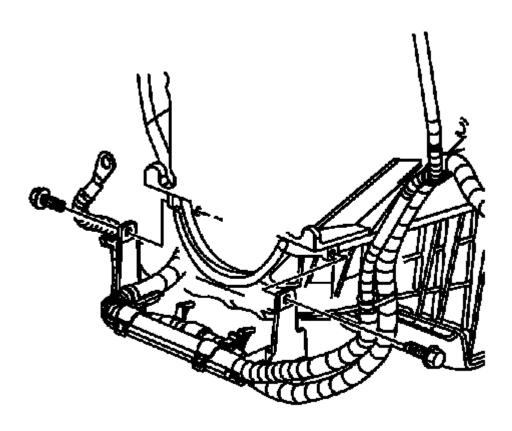


Fig. 261: View Of Battery Cable Bracket Bolts Courtesy of GENERAL MOTORS COMPANY

19. Install the engine harness bracket bolts and tighten to 12 N.m (106 lb in).


2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

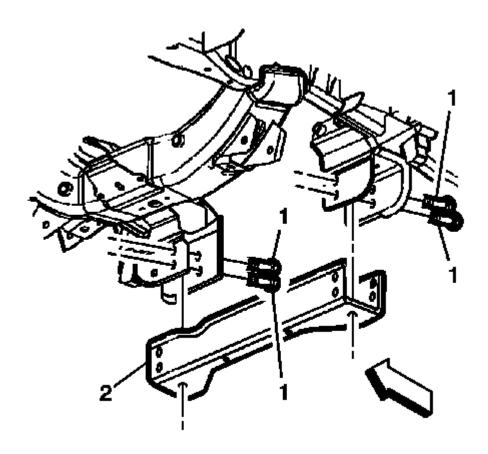

<u>Fig. 262: View Of Crossbar Bolts & Bar (2WD)</u> Courtesy of GENERAL MOTORS COMPANY

 $20. \;\;$  Install the crossmember and bolts and tighten to  $100\;N.m$  (74 lb ft).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

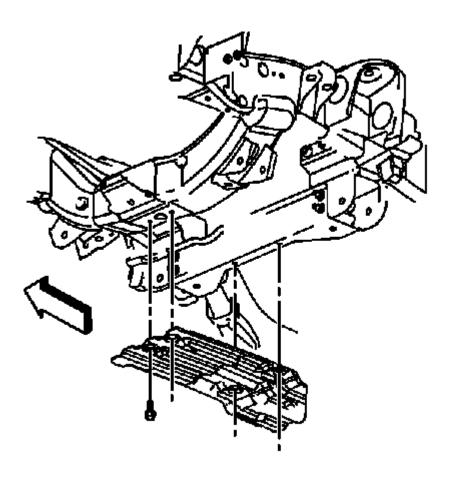

<u>Fig. 263: Identifying Oil Pan Skid Plate</u> Courtesy of GENERAL MOTORS COMPANY

21. If equipped, install the oil pan skid plate and bolts and tighten to 20 N.m (15 lb ft).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

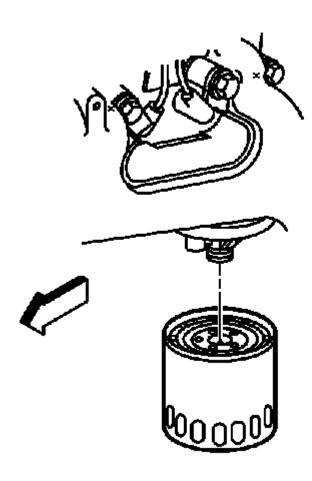


Fig. 264: View Of Oil Filter
Courtesy of GENERAL MOTORS COMPANY

- 22. Lubricate the oil filter gasket with clean engine oil.
- 23. Install the oil filter and tighten to 30 N.m (22 lb ft).
- 24. Lower the vehicle.
- 25. Fill the engine with the proper capacity and quality of engine oil. Refer to **Approximate Fluid Capacities**.

#### ENGINE OIL PRESSURE SENSOR AND/OR SWITCH REPLACEMENT

**Special Tools** 

J 41712 Oil Pressure Switch Socket

Removal Procedure

NOTE: Clean the area around the oil pressure sensor. Do not allow debris to enter the engine.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

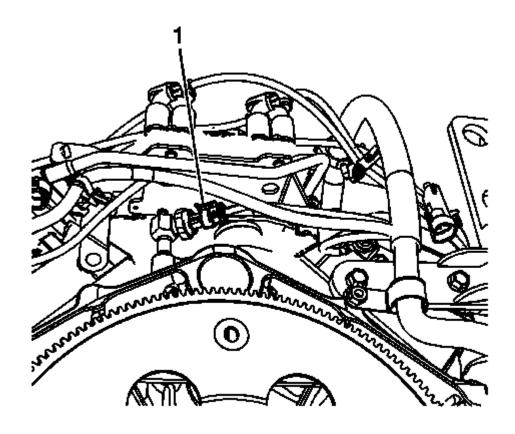


Fig. 265: View Of Oil Pressure Sensor Electrical Connector Courtesy of GENERAL MOTORS COMPANY

1. Disconnect the oil pressure sensor electrical connector (1).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

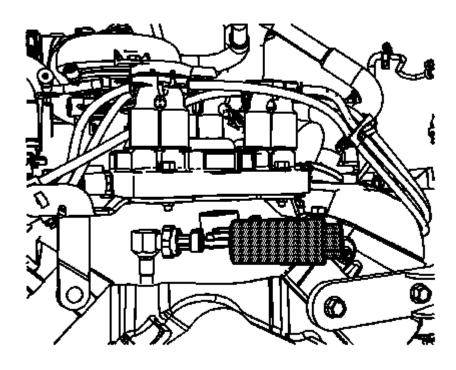


Fig. 266: Fuel Pump/Oil Pressure Sensor Courtesy of GENERAL MOTORS COMPANY

2. Using  $\mathbf{J}$  41712 socket, remove the fuel pump/oil pressure sensor.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

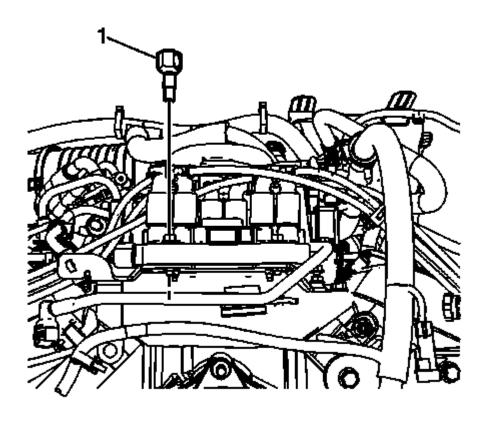


Fig. 267: Oil Pressure Sensor Fitting Courtesy of GENERAL MOTORS COMPANY

NOTE: Note the alignment of the engine oil pressure sensor fitting prior to removal.

3. Remove the oil pressure sensor fitting (1), if necessary.

#### **Installation Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

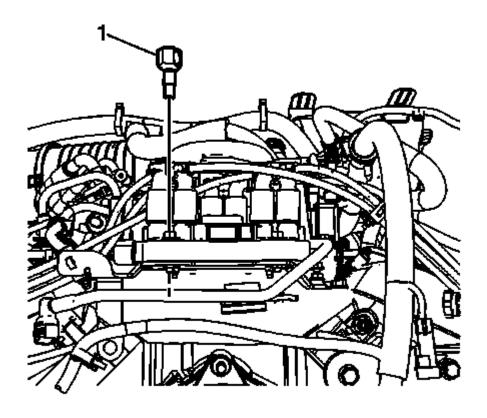


Fig. 268: Oil Pressure Sensor Fitting
Courtesy of GENERAL MOTORS COMPANY

- 1. If installing the old oil pressure sensor fitting (1), apply sealant to the threads of the fitting. Refer to **Adhesives, Fluids, Lubricants and Sealers** for the correct part number.
- 2. Install the old oil pressure sensor fitting until snug, if necessary.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


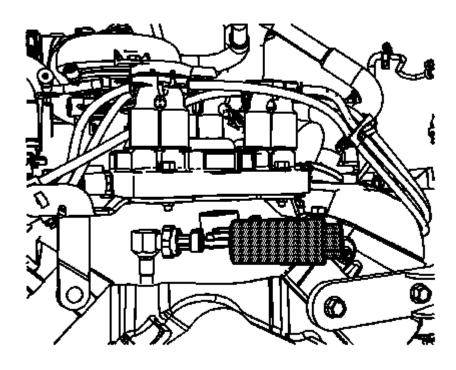


Fig. 269: Fuel Pump/Oil Pressure Sensor Courtesy of GENERAL MOTORS COMPANY

**CAUTION: Refer to Fastener Caution**.

- 3. Tighten the oil pressure sensor fitting.
  - 1. Tighten the fitting to 15 N.m (11 lb ft).
  - 2. Increase torque until the centerline of the fitting is 50 degrees from the centerline of the crankshaft.


2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

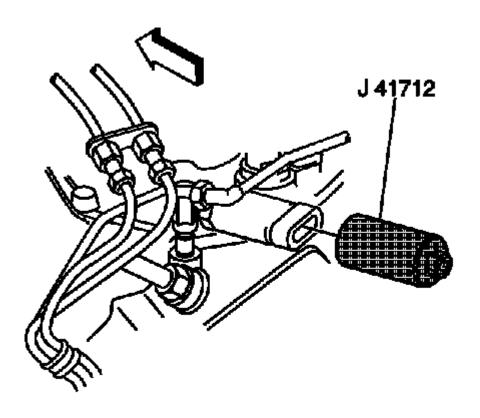

<u>Fig. 270: Special Tools And Fuel Pump/Oil Pressure Sensor</u> Courtesy of GENERAL MOTORS COMPANY

- 4. If installing the old sensor, apply sealant to the threads of the sensor. Refer to <u>Adhesives, Fluids, Lubricants and Sealers</u> for the correct part number.
- 5. Using **J 41712** socket, install the sensor and tighten to 30 N.m (22 lb ft).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

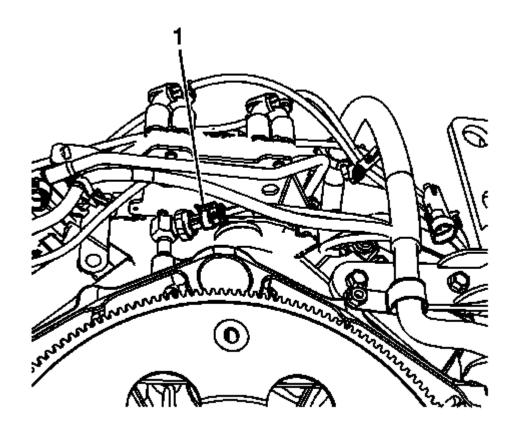

<u>Fig. 271: View Of Oil Pressure Sensor Electrical Connector</u> Courtesy of GENERAL MOTORS COMPANY

- 6. Connect the oil pressure sensor electrical connector (1).
- 7. Check and adjust the engine oil level, if necessary.

## OIL LEVEL INDICATOR TUBE REPLACEMENT

#### **Removal Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

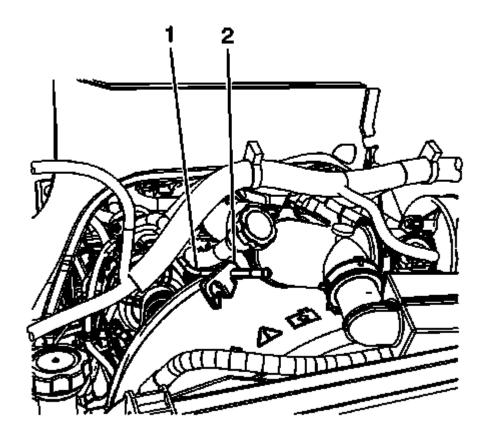


Fig. 272: View Of Oil Level Indicator Tube & Air Conditioning Line Retainer Clip Courtesy of GENERAL MOTORS COMPANY

- 1. Remove the engine cover. Refer to **Engine Cover Replacement**.
- 2. Remove the oil level indicator.
- 3. Remove the coolant reservoir. Refer to **Coolant Recovery Reservoir Replacement** .
- 4. Remove the oil level indicator tube (1) from the air conditioning line retainer clip (2).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

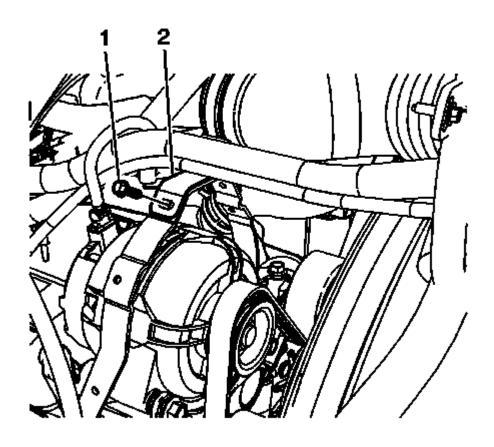


Fig. 273: Oil Level Indicator Tube Bolt & Bracket Courtesy of GENERAL MOTORS COMPANY

5. Remove the oil level indicator tube bolt (1) from the oil indicator tube bracket (2).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

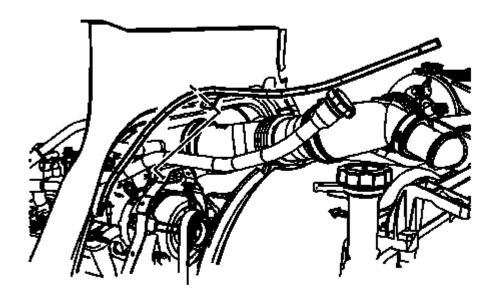


Fig. 274: Oil Indicator Tube Courtesy of GENERAL MOTORS COMPANY

6. Remove the upper half of the oil indicator tube from the lower half of the oil indicator tube.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


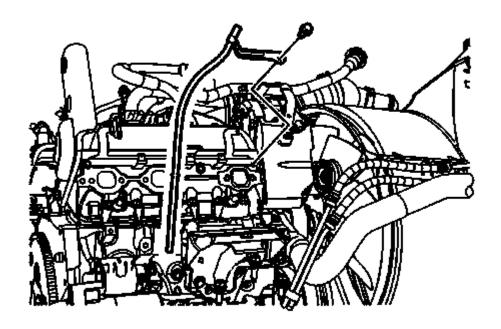


Fig. 275: Oil Level Indicator Tube Bolt & Tube Courtesy of GENERAL MOTORS COMPANY

- 7. Remove the right exhaust manifold. Refer to Exhaust Manifold Replacement Right Side (V6).
- 8. Remove the oil level indicator tube bolt.
- 9. Remove the oil level indicator tube using a twisting motion.
- 10. Clean the old sealer from the indicator tube and engine block.

#### **Installation Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

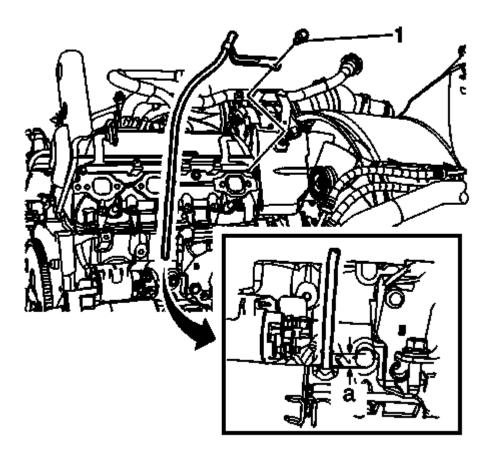

<u>Fig. 276: Indicator Tube Bolt</u> Courtesy of GENERAL MOTORS COMPANY

- 1. Apply sealant around the indicator tube 13 mm (0.5 in) below the tube bead. Refer to **Adhesives, Fluids, Lubricants and Sealers** for the correct part number.
- 2. Install the indicator tube. Rotate the oil level indicator tube into position.

# **CAUTION: Refer to Fastener Caution.**

- 3. Install the indicator tube bolt (1) and tighten to 12 N.m (106 lb in).
- 4. Install the right exhaust manifold. Refer to Exhaust Manifold Replacement Right Side (V6).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

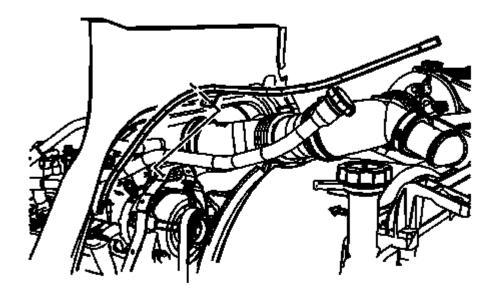


Fig. 277: Oil Indicator Tube Courtesy of GENERAL MOTORS COMPANY

5. Install the upper half of the oil indicator tube into the lower half of the oil indicator tube.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

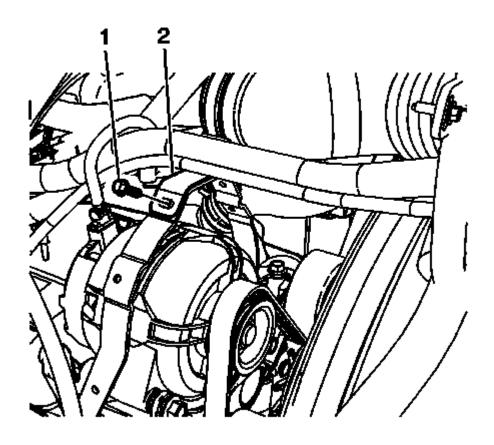


Fig. 278: Oil Level Indicator Tube Bolt & Bracket Courtesy of GENERAL MOTORS COMPANY

6. Install the oil level indicator tube bolt (1) to the oil indicator tube bracket (2).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

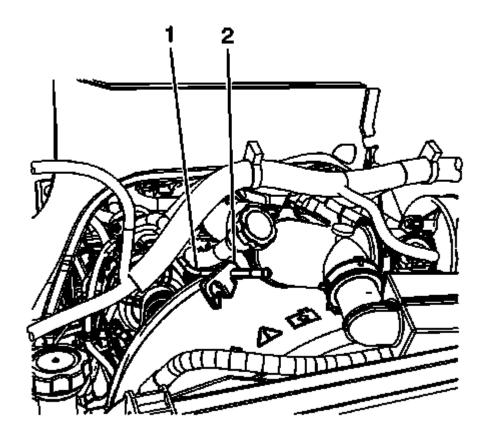


Fig. 279: View Of Oil Level Indicator Tube & Air Conditioning Line Retainer Clip Courtesy of GENERAL MOTORS COMPANY

- 7. Install the oil level indicator tube (1) to the air conditioning line retainer clip (2).
- 8. Install the oil level indicator.
- 9. Install the coolant reservoir. Refer to **Coolant Recovery Reservoir Replacement**.
- 10. Install the engine cover. Refer to **Engine Cover Replacement**.

# **OIL PUMP REPLACEMENT**

#### **Removal Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

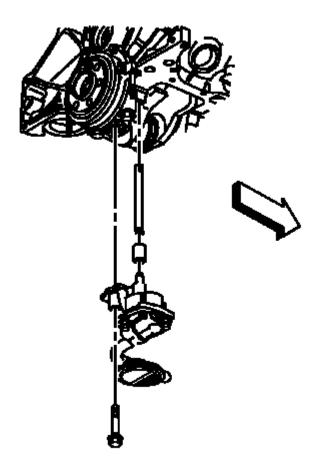


Fig. 280: Oil Pump & Mounting Bolt Courtesy of GENERAL MOTORS COMPANY

- 1. Remove the oil pan. Refer to Oil Pan Replacement.
- 2. Remove the oil pump bolt.
- 3. Remove the oil pump.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

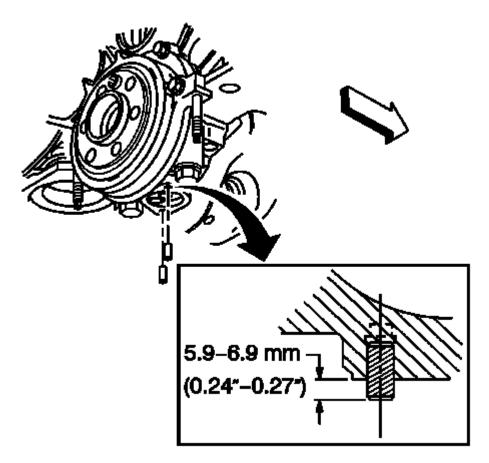


Fig. 281: Oil Pump Locator Pins
Courtesy of GENERAL MOTORS COMPANY

- 4. Inspect the oil pump locator pins for damage and replace if required.
- 5. Clean and inspect the oil pump, if necessary.

#### **Installation Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

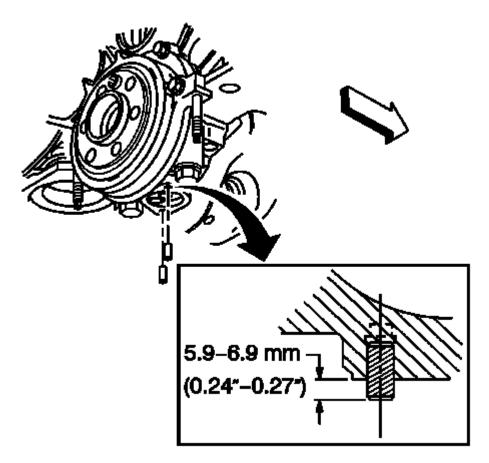


Fig. 282: Oil Pump Locator Pins
Courtesy of GENERAL MOTORS COMPANY

1. Inspect for properly installed oil pump locator pins.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

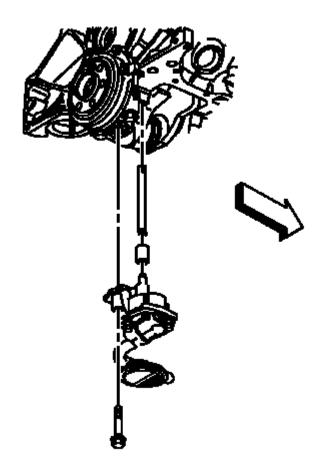


Fig. 283: Oil Pump & Mounting Bolt Courtesy of GENERAL MOTORS COMPANY

NOTE: Do not reuse the oil pump driveshaft retainer. During assembly, install a NEW oil pump driveshaft retainer.

2. Install the oil pump. Position the oil pump onto the locator pins.

**CAUTION: Refer to Fastener Caution.** 

- 3. Install the oil pump bolt and tighten to 90 N.m (66 lb ft).
- 4. Install the oil pan. Refer to Oil Pan Replacement.

#### CRANKSHAFT REAR OIL SEAL REPLACEMENT

**Special Tools** 

J 35621-B Rear Main Seal Installer

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

For equivalent regional tools, refer to **Special Tools**.

#### **Removal Procedure**


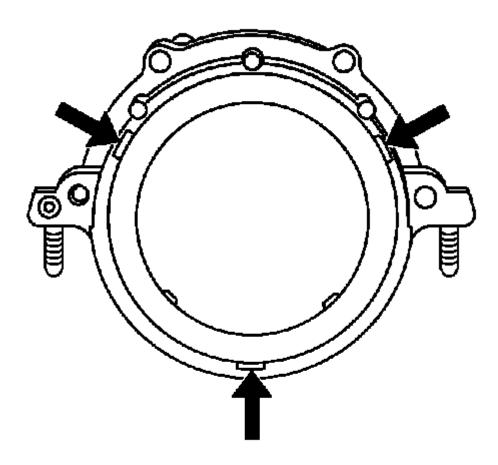


Fig. 284: Crankshaft Rear Oil Seal Notches
Courtesy of GENERAL MOTORS COMPANY

- 1. Remove the flywheel. Refer to **Engine Flywheel Replacement**.
- 2. Insert a flat-bladed tool into the access notches and carefully pry the seal from the housing.
- 3. Discard the seal.
- 4. Clean off any dirt or rust in the area.

## **Installation Procedure**

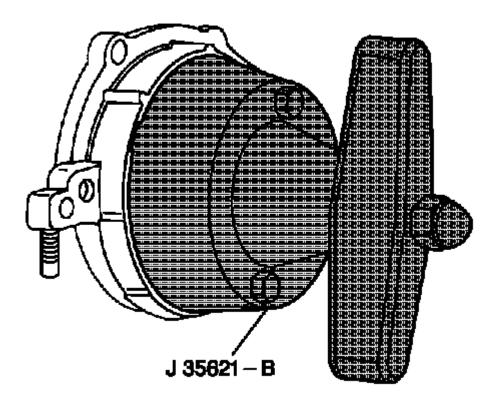

<u>Fig. 285: Installing Crankshaft Rear Oil Seal Using J 35621-B</u> Courtesy of GENERAL MOTORS COMPANY

- 1. Apply 2 to 3 drops of clean engine oil to the bore of the housing.
- 2. Apply 2 to 3 drops of clean engine oil to the outside diameter of the engine flywheel pilot flange.
- 3. Apply 1 drop of clean engine oil to the outside diameter of the flywheel locator pin.
- 4. Apply 2 to 3 drops of clean engine oil to the crankshaft seal surface.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

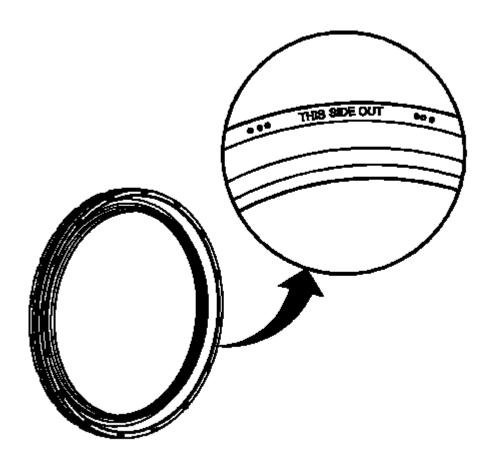


Fig. 286: Identifying Crankshaft Rear Oil Seal Courtesy of GENERAL MOTORS COMPANY

NOTE: Notice the direction of the rear oil seal. The new design seal is a reverse

style as opposed to what has been used in the past. THIS SIDE OUT has

been stamped into the seal as shown in the graphic.

5. Inspect the J 35621-B installer flange for imperfections that may damage the NEW seal.

Minor imperfections may be removed with a fine grade emery cloth.

NOTE: DO NOT allow oil or any other lubricants to contact the seal lip surface of

the seal.

- 6. Remove the sleeve from the seal.
- 7. Apply 2 to 3 drops of clean engine oil to the outside diameter of the seal.
- 8. Install the seal onto the J 35621-B installer.
- 9. Install the J 35621-B installer onto the rear of the crankshaft and hand tighten the tool bolts until snug.

CAUTION: Proper alignment of the crankshaft rear oil seal is critical. Install the

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

crankshaft rear oil seal near to flush and square to the crankshaft rear oil seal housing. Failing to do so may cause the crankshaft rear oil seal or the crankshaft rear oil seal installation tool to fail.

- 10. Install the seal onto the crankshaft and into the housing:
  - 1. Turn the **J 35621-B** installer wing nut clockwise until the seal is installed close to flush and square to the housing.

Increased resistance will be felt when the seal has reached the bottom of the housing bore.

- 2. Turn the J 35621-B installer wing nut counterclockwise to release the J 35621-B installer from the seal.
- 11. Remove the J 35621-B installer.
- 12. Wipe off any excess engine oil with a clean rag.
- 13. Install the engine flywheel. Refer to Engine Flywheel Replacement.

#### CRANKSHAFT REAR OIL SEAL HOUSING REPLACEMENT

#### Removal Procedure

NOTE: Do not remove the crankshaft rear oil seal housing if only replacing the crankshaft rear oil seal.


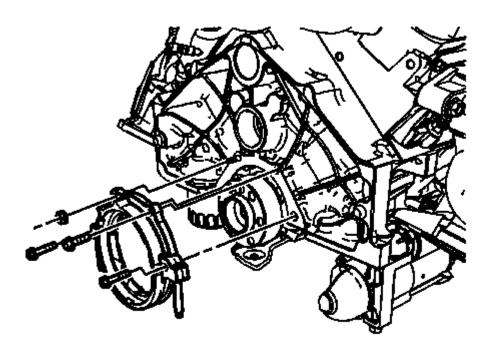


Fig. 287: Crankshaft Rear Oil Seal Housing Courtesy of GENERAL MOTORS COMPANY

- 1. Remove the oil pan. Refer to Oil Pan Replacement.
- 2. Remove the engine flywheel. Refer to **Engine Flywheel Replacement**.
- 3. Remove the housing bolts and nut.
- 4. Remove the housing.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

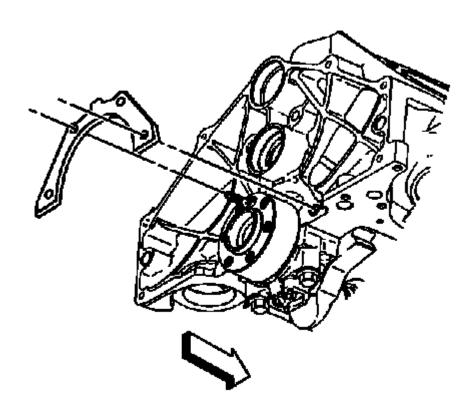

<u>Fig. 288: Locating Crankshaft Rear Oil Seal Housing Gasket</u> Courtesy of GENERAL MOTORS COMPANY

- 5. Remove and discard the housing gasket.
- 6. Clean all the sealing surfaces.
- 7. Inspect and replace the housing for warping, cracks, wear or damage.

#### **Installation Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

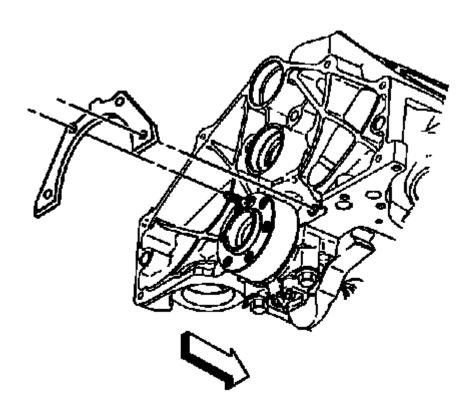



Fig. 289: Locating Crankshaft Rear Oil Seal Housing Gasket Courtesy of GENERAL MOTORS COMPANY

NOTE:

When installing a NEW housing the seal will come with the housing. If reusing the housing and then installing a NEW seal follow the instructions for installing the housing and than refer to <a href="Crankshaft Rear Oil Seal">Crankshaft Rear Oil Seal</a> Replacement to install the seal.

1. Install a NEW housing gasket.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

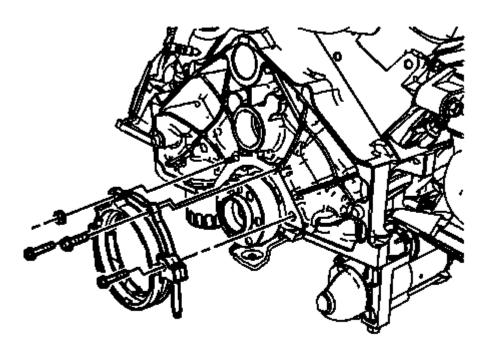

# Fig. 290: Crankshaft Rear Oil Seal Housing Courtesy of GENERAL MOTORS COMPANY

2. Install the NEW housing with the seal using the following procedure.

# NOTE: Do not oil or grease the seal lip or the crankshaft seal area.

- 1. Leave the sleeve in the seal and use the sleeve as a guide to ease installing the seal lip over the end of the crankshaft.
- 2. Push the housing fully onto the crankshaft until the housing is against the seal gasket and the engine.
- 3. Remove the sleeve.

# **CAUTION: Refer to Fastener Caution.**

- 3. Install the crankshaft rear oil seal housing bolts and nut and tighten to 12 N.m (106 lb in).
- 4. Install the engine flywheel. Refer to **Engine Flywheel Replacement**.
- 5. Install the oil pan. Refer to Oil Pan Replacement.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

#### ENGINE FLYWHEEL REPLACEMENT

#### **Removal Procedure**

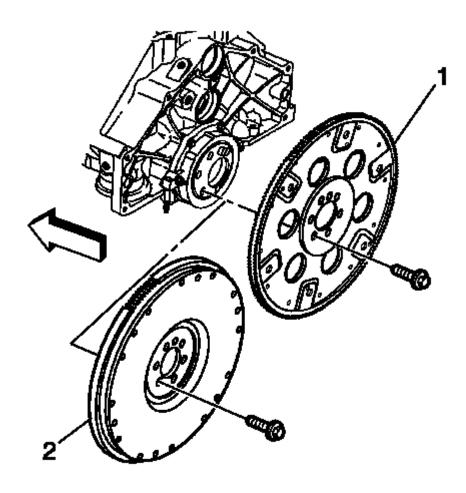


Fig. 291: View Of Flywheels
Courtesy of GENERAL MOTORS COMPANY

- 1. Remove the automatic transmission. Refer to **Transmission Replacement**.
- 2. Remove the flywheel bolts.
- 3. Remove the flywheel (1 or 2).
- 4. Clean and inspect the flywheel, if necessary. Refer to **Engine Flywheel Cleaning and Inspection**.

# **Installation Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

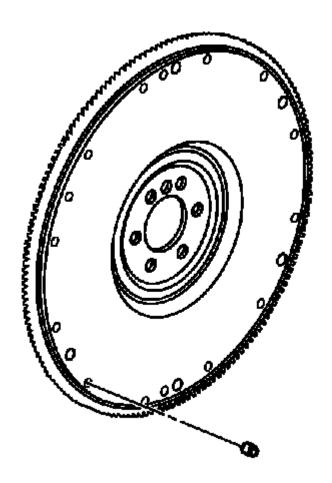


Fig. 292: Locating Flywheel Weights (Manual Transmission)
Courtesy of GENERAL MOTORS COMPANY

NOTE: Flywheel weights of the same length must be installed into the NEW flywheel in the same location as the old weights were in the old flywheel.

1. Note the position of the old flywheel weights and install the NEW flywheel weights as required.

A properly installed flywheel weight will be flush or slightly below flush with the face of the flywheel.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


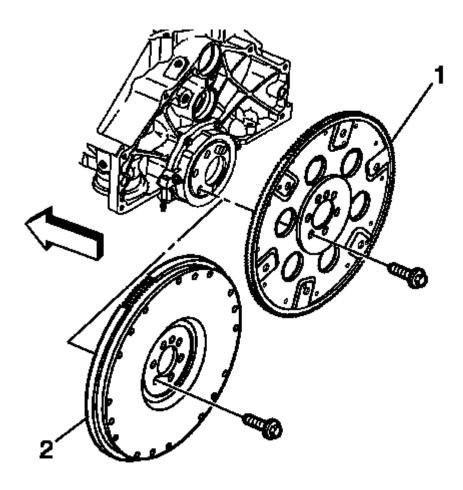


Fig. 293: View Of Flywheels
Courtesy of GENERAL MOTORS COMPANY

2. Install the flywheel (1 or 2).

Align the flywheel locator hole to the flywheel locator pin.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

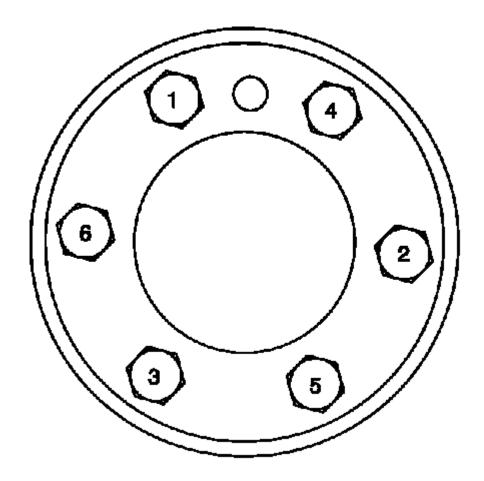

<u>Fig. 294: Identifying Flywheel Bolt Tightening Sequence</u> Courtesy of GENERAL MOTORS COMPANY

**CAUTION: Refer to Fastener Caution.** 

- 3. Install the flywheel bolts and tighten in the sequence shown to 100 N.m (74 lb ft).
- 4. Install the automatic transmission. Refer to **Transmission Replacement**.

## **ENGINE REPLACEMENT**

**Special Tools** 

J 41427 Engine Lift Brackets

**Removal Procedure** 


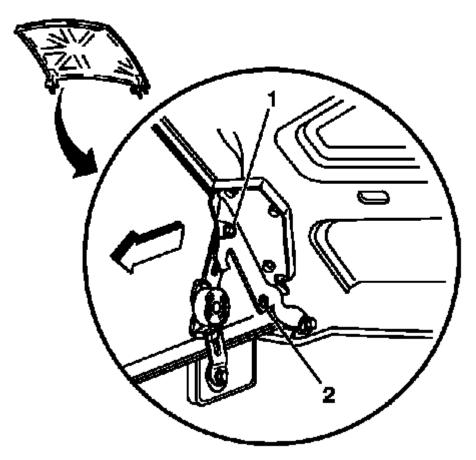


Fig. 295: Identifying Hood Hinge Normal And Service Position Bolt Holes Courtesy of GENERAL MOTORS COMPANY


- 1. Raise the hood to the service position, perform the following:
  - 1. Remove the hood hinge bolts (1).
  - 2. Raise the hood until vertical.
  - 3. Install the hood hinge bolts until snug in the service position (2).
- 2. Disconnect the negative battery cable. Refer to <u>Battery Negative Cable Disconnection and</u> Connection .
- 3. Remove the cooling layer. Refer to **Cooling Layer Removal**.
- 4. Drain the cooling system. Refer to <u>Cooling System Draining and Filling (Static Fill)</u>, <u>Cooling System Draining and Filling (Vac N Fill)</u>.
- 5. Remove the fuel pipes/hoses. Refer to Fuel Line Replacement Engine.
- 6. Remove the lower fan shroud. Refer to Engine Coolant Fan Lower Shroud Replacement (4.3L, 4.8L, 5.3L, 6.0L, 6.2L, 7.0L).
- 7. Remove the drive belt. Refer to **Drive Belt Replacement**.
- 8. Raise and suitably support the vehicle. Refer to Lifting and Jacking the Vehicle.
- 9. Remove the starter. Refer to Starter Replacement (V6).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

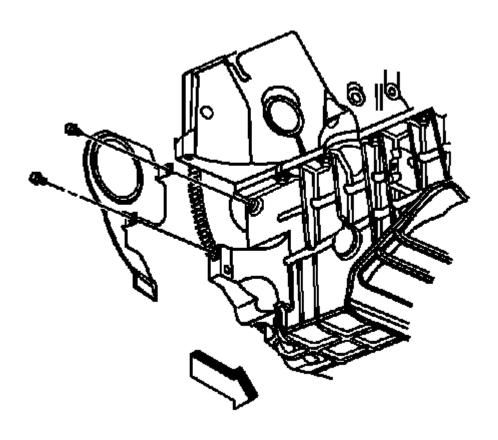

<u>Fig. 296: Transmission Cover</u> Courtesy of GENERAL MOTORS COMPANY

10. Remove the transmission cover.

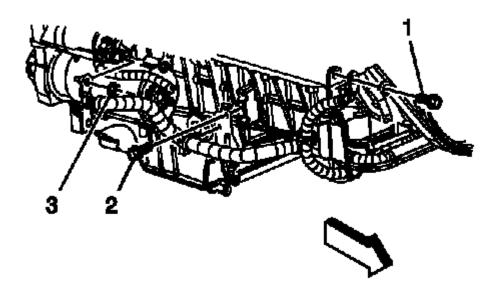

<u>Fig. 297: Positive Battery Cable Clip Bolt</u> Courtesy of GENERAL MOTORS COMPANY

- 11. Remove the positive battery cable clip bolt (2).
- 12. Remove the catalytic converter. Refer to Catalytic Converter Replacement (V6).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

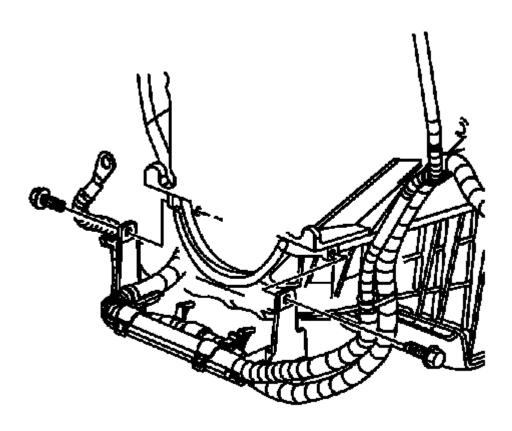


Fig. 298: View Of Battery Cable Bracket Bolts Courtesy of GENERAL MOTORS COMPANY

13. Remove the battery cable bracket bolts.


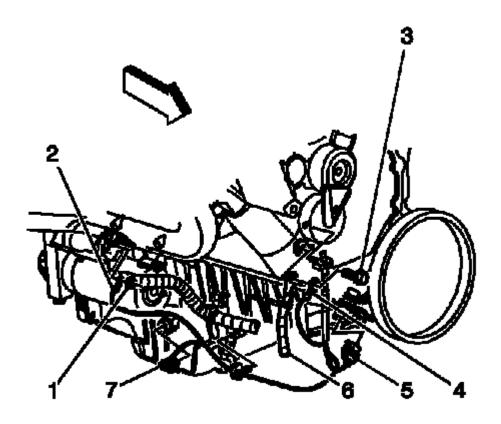


Fig. 299: View Of Oil Level Sensor Electrical Connector, CKP Electrical Connector & Battery Ground Bolt
Courtesy of GENERAL MOTORS COMPANY

- 14. Disconnect the crankshaft position (CKP) sensor electrical connector (5) and remove the harness from the retainer clip.
- 15. Remove the ground bolt (3) holding the negative battery cable (6) and ground cable (4) to the engine.

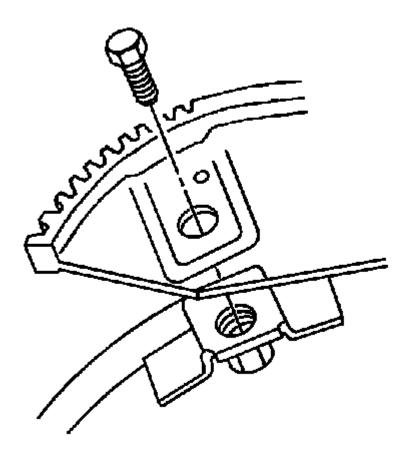

<u>Fig. 300: Flywheel-To-Torque Converter Bolts</u> Courtesy of GENERAL MOTORS COMPANY

- 16. If equipped, remove the torque converter bolts.
- 17. Remove the transmission bolts.
- 18. Lower the vehicle.

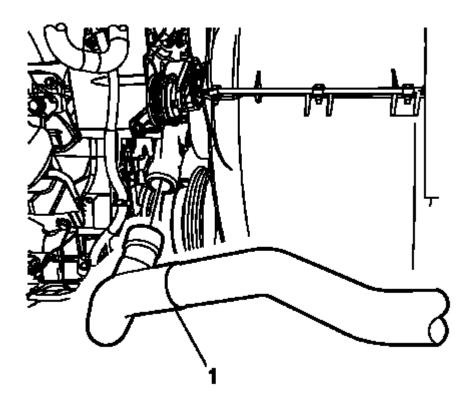


Fig. 301: Radiator Outlet Hose Courtesy of GENERAL MOTORS COMPANY

- 19. Reposition the radiator outlet hose clamps.
- 20. Remove the radiator outlet hose (1) from the water pump.

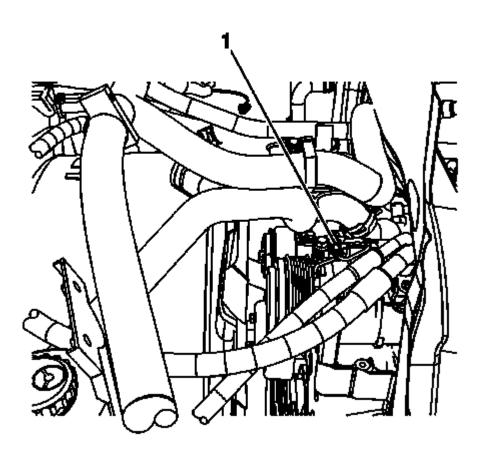


Fig. 302: A/C Compressor Clutch Courtesy of GENERAL MOTORS COMPANY

- 21. Disconnect the air conditioning (A/C) compressor clutch (1), if equipped.
- 22. If equipped, remove the air conditioning (A/C) hoses.
- 23. Remove the positive cable nut and cable from the generator.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

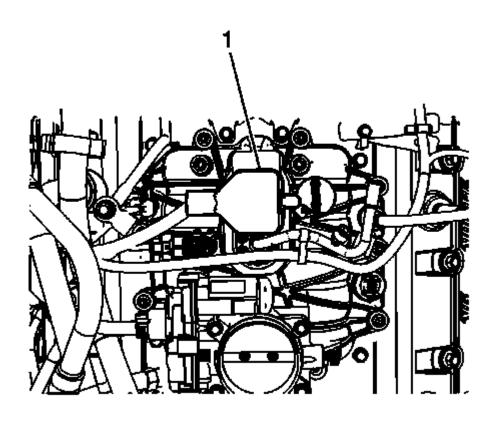


Fig. 303: View Of Control Port Injector Module Courtesy of GENERAL MOTORS COMPANY

24. Disconnect the control port injector module (1).

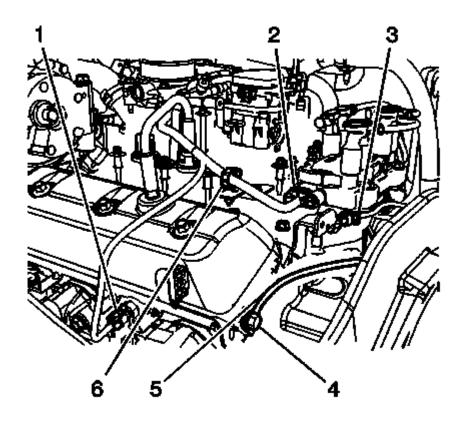


Fig. 304: Engine Coolant Temperature Sensor, Ignition Coil & Oil Pressure Sensor Courtesy of GENERAL MOTORS COMPANY

- 25. Disconnect the following electrical connectors:
  - Engine coolant temperature sensor (1)
  - Ignition coil (2)
  - Oil pressure sensor (3)
- 26. Remove the harness ground bolt (4).
- 27. Reposition the harness ground (5).
- 28. Remove the ignition coil wiring harness clip (6) from the engine wiring bracket.
- 29. Unclip the ignition coil wiring harness from the fuel feed pipe.

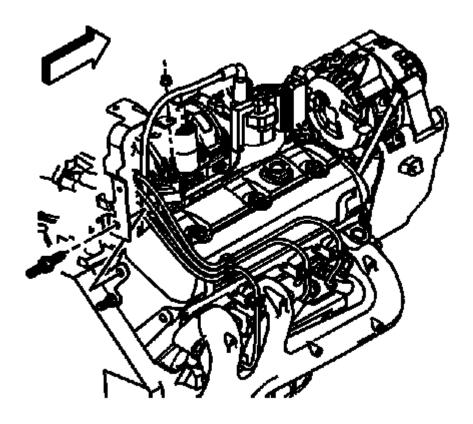


Fig. 305: View Of Engine Wiring Harness Rear Bracket Nut Courtesy of GENERAL MOTORS COMPANY

- 30. Remove the engine wiring harness rear bracket nut at the EVAP canister purge solenoid valve.
- 31. Remove the stud holding the engine wiring harness bracket.
- 32. Reposition the engine wiring harness with the bracket aside.
- 33. Remove the heater hoses. Refer to <u>Heater Inlet Hose Replacement (4.3L)</u>, <u>Heater Outlet Hose Replacement (4.3L)</u>.

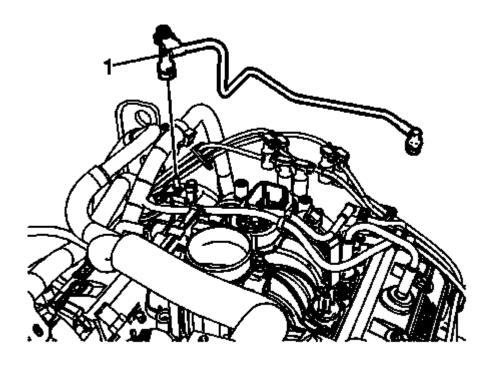


Fig. 306: View Of Tube Quick Connect Fitting Courtesy of GENERAL MOTORS COMPANY

- 34. Disconnect the EVAP canister harness (1) from the purge solenoid valve.
- 35. Disconnect the power brake booster vacuum hose from the vacuum fitting.
- 36. Remove the thermostat and water outlet. Refer to **Engine Coolant Thermostat Replacement (V6)**.
- 37. Remove the lower intake manifold. Refer to Lower Intake Manifold Replacement.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

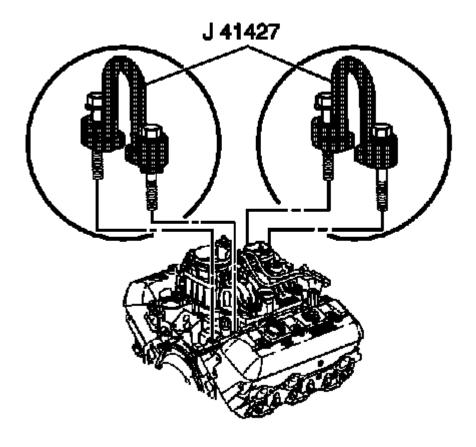



Fig. 307: Engine Lift Brackets J 41427 Courtesy of GENERAL MOTORS COMPANY

- 38. Remove the left front and right rear intake manifold lower bolts.
- 39. Install **J 41427** brackets to the left front and right rear intake manifold bolts, using the following procedure:
  - 1. Install the J 41427 brackets marked RIGHT REAR.

# **CAUTION: Refer to Fastener Caution**.

- 2. Install the lift bracket bolts and tighten to 15 N.m (11 lb ft).
- 3. Install the **J 41427** brackets marked LEFT FRONT with the arrow pointing to the front of the engine.
- 4. Install the lift bracket bolts and tighten to 15 N.m (11 lb ft).
- 40. Install a suitable lifting devise to the engine lift brackets.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

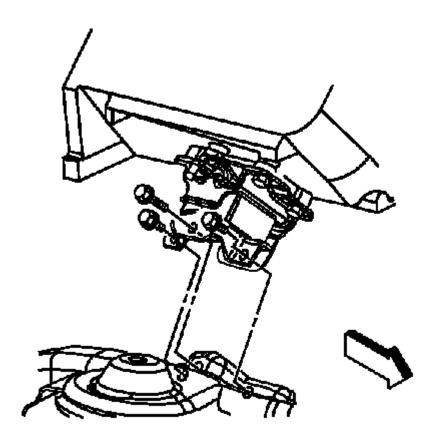

<u>Fig. 308: View Of Right Side (Left Side Similar) Engine Mount To Engine Mount Bracket Bolts</u> Courtesy of GENERAL MOTORS COMPANY

- 41. Remove the engine mount to engine mount bracket nuts.
- 42. Support the transmission with a suitable floor jack.
- 43. Remove the engine.

#### **Installation Procedure**

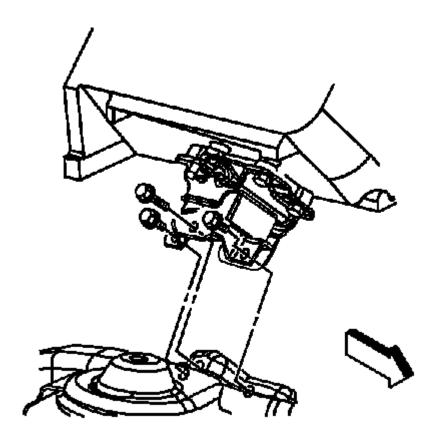


Fig. 309: View Of Right Side (Left Side Similar) Engine Mount To Engine Mount Bracket Bolts Courtesy of GENERAL MOTORS COMPANY

- 1. Install the engine.
- 2. Install the engine mount to engine mount bracket bolts and tighten to 65 N.m (48 lb ft).

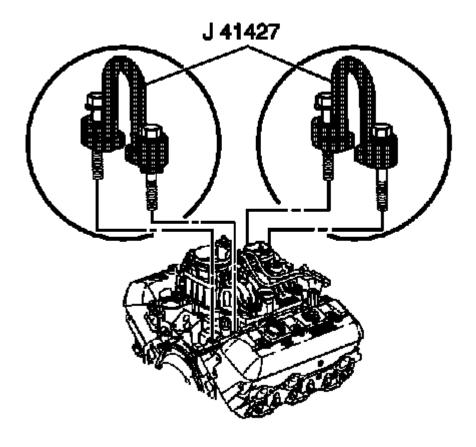


Fig. 310: Engine Lift Brackets J 41427 Courtesy of GENERAL MOTORS COMPANY

- 3. Remove the lifting devise and the J 41427 brackets.
- 4. Install the lower intake manifold. Refer to **Lower Intake Manifold Replacement**.
- 5. Install one transmission bolt until snug.
- 6. Remove the support jack from under the transmission.
- 7. Install the thermostat and water outlet. Refer to Engine Coolant Thermostat Replacement (V6).

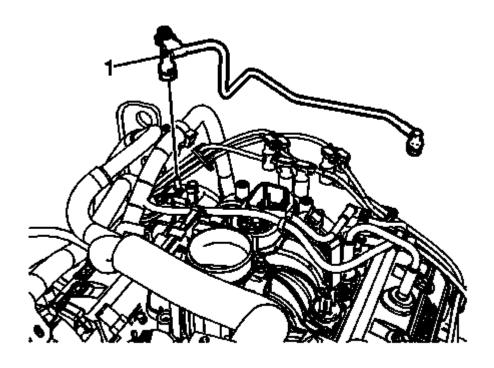


Fig. 311: View Of Tube Quick Connect Fitting Courtesy of GENERAL MOTORS COMPANY

- 8. Connect the power brake booster vacuum hose to the vacuum fitting.
- 9. Connect the EVAP canister harness (1) to the purge solenoid valve.
- 10. Install the heater hoses. Refer to <u>Heater Inlet Hose Replacement (4.3L)</u>, <u>Heater Outlet Hose Replacement (4.3L)</u>.

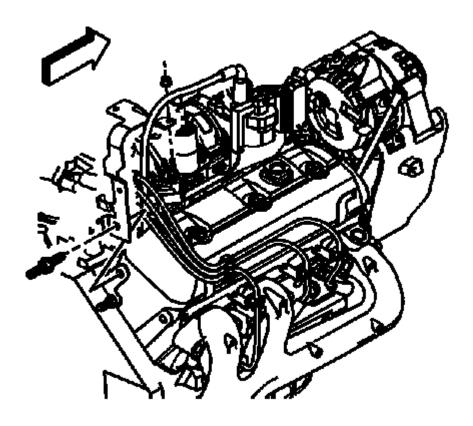


Fig. 312: View Of Engine Wiring Harness Rear Bracket Nut Courtesy of GENERAL MOTORS COMPANY

- 11. Position the engine wiring harness.
- 12. Install the stud holding the engine wiring harness bracket.
- 13. Install the engine wiring harness rear bracket nut at the EVAP canister purge solenoid valve and tighten to 9 N.m (80 lb in).

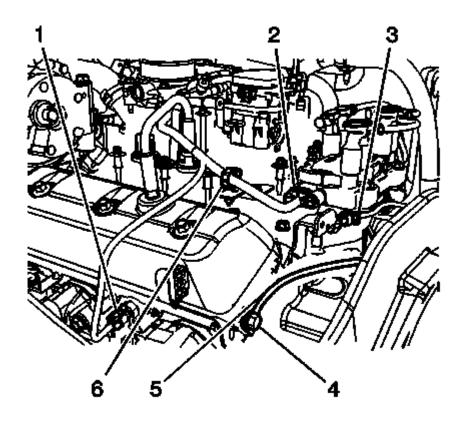


Fig. 313: Engine Coolant Temperature Sensor, Ignition Coil & Oil Pressure Sensor Courtesy of GENERAL MOTORS COMPANY

- 14. Reposition the harness ground (5).
- 15. Install the harness ground bolt (4) and tighten to 16 N.m (12 lb ft).
- 16. Connect the following electrical connectors:
  - Oil pressure sensor (3)
  - Ignition coil (2)
  - Engine coolant temperature sensor (1)
- 17. Install the ignition coil harness retaining clip (6) into the engine wiring harness bracket.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

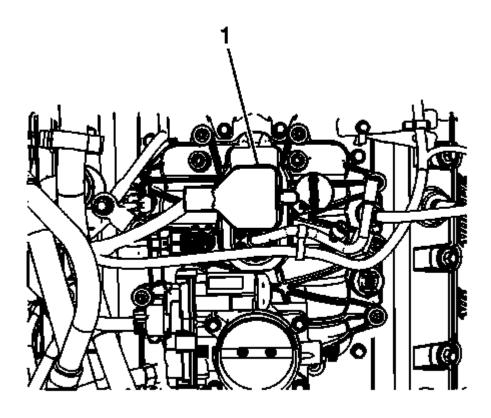


Fig. 314: View Of Control Port Injector Module Courtesy of GENERAL MOTORS COMPANY

18. Connect the control port injector module (1).

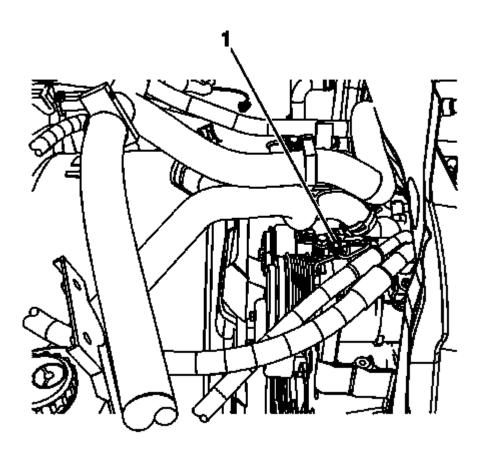


Fig. 315: A/C Compressor Clutch Courtesy of GENERAL MOTORS COMPANY

- 19. If equipped, install the A/C hoses.
- 20. Connect the A/C compressor clutch (1), if equipped.

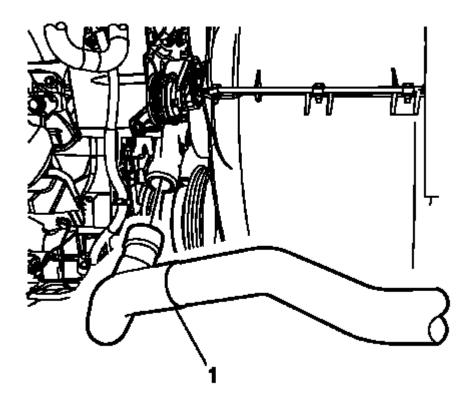


Fig. 316: Radiator Outlet Hose Courtesy of GENERAL MOTORS COMPANY

- 21. Install the radiator outlet hose (1) to the water pump.
- 22. Position the radiator outlet hose clamps.
- 23. Install the drive belt. Refer to **Drive Belt Replacement**.
- 24. Install the lower fan shroud. Refer to Engine Coolant Fan Lower Shroud Replacement (4.3L, 4.8L, 5.3L, 6.0L, 6.2L, 7.0L).
- 25. Install the fuel pipes/hoses. Refer to Fuel Line Replacement Engine.

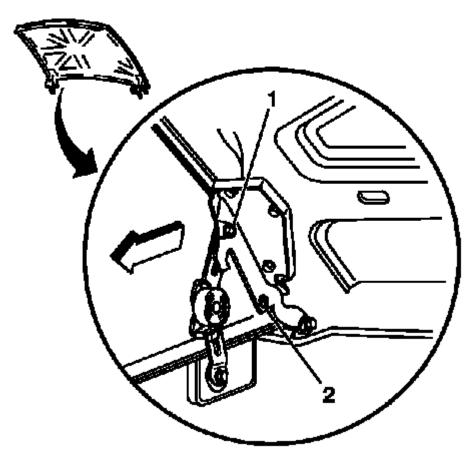


Fig. 317: Identifying Hood Hinge Normal And Service Position Bolt Holes Courtesy of GENERAL MOTORS COMPANY

- 26. Remove the hood hinge bolt from the service position (2).
- 27. Lower the hood to the normal position.
- 28. Install the hood hinge bolts and tighten to 25 N.m (18 lb ft).
- 29. Raise the vehicle.

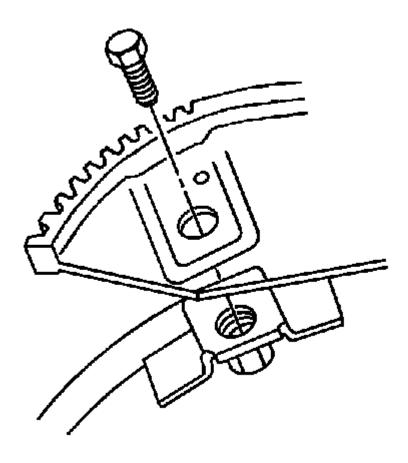


Fig. 318: Flywheel-To-Torque Converter Bolts
Courtesy of GENERAL MOTORS COMPANY

- 30. Install the transmission bolts and tighten to 50 N.m (37 lb ft).
- 31. If equipped, install the torque converter bolts and tighten to 63 N.m (47 lb ft).

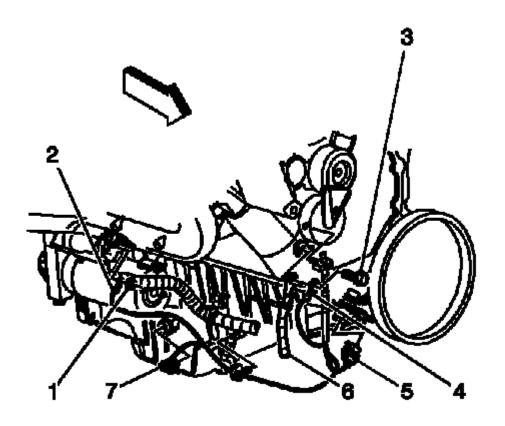


Fig. 319: View Of Oil Level Sensor Electrical Connector, CKP Electrical Connector & Battery Ground Bolt
Courtesy of GENERAL MOTORS COMPANY

- 32. Install the ground bolt (3) holding the negative battery cable (6) and ground cable (4) to the engine.
- 33. Connect the CKP sensor electrical connector (5) and install the harness to the retainer clip.

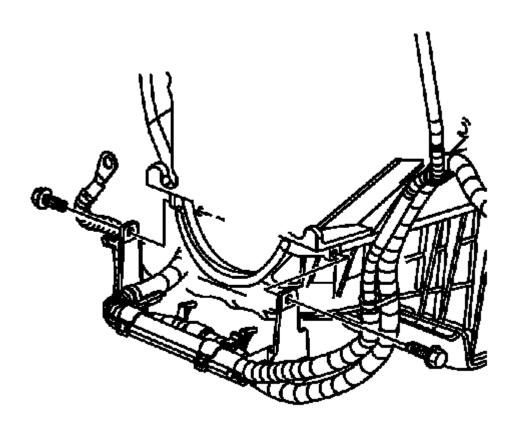


Fig. 320: View Of Battery Cable Bracket Bolts Courtesy of GENERAL MOTORS COMPANY

- 34. Install the battery cable bracket bolts and tighten to 12 N.m (106 lb in).
- 35. Install the catalytic converter. Catalytic Converter Replacement (V6).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


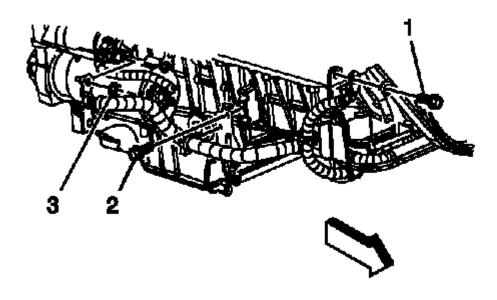


Fig. 321: Positive Battery Cable Clip Bolt Courtesy of GENERAL MOTORS COMPANY

36. Install the positive battery cable clip bolt (2).

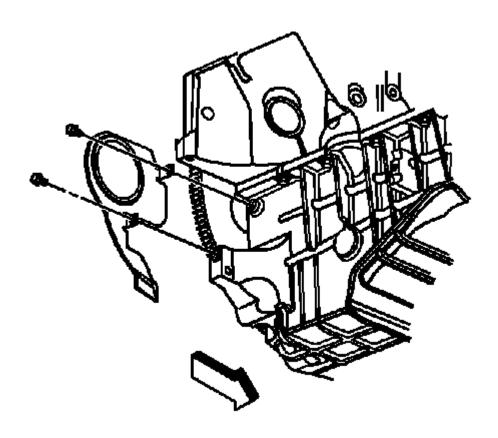

<u>Fig. 322: Transmission Cover</u> Courtesy of GENERAL MOTORS COMPANY

- 37. Install the transmission cover and tighten the bolts to 12 N.m (106 lb in).
- 38. Install the starter. Refer to **Starter Replacement (V6)**.
- 39. Lower the vehicle.
- 40. Install the cooling layer. Refer to Cooling Layer Installation.
- 41. Connect the negative battery cable. Refer to **Battery Negative Cable Disconnection and Connection**.
- 42. Perform the engine prelube procedure. Refer to **Engine Prelubing**.
- 43. Add engine oil supplement to the engine oil. Refer to <u>Adhesives, Fluids, Lubricants and Sealers</u> for the correct part number.
- 44. Disable the ignition system.
- 45. Crank the engine several times. Listen for any unusual noises or evidence that parts are binding.
- 46. Start the engine and listen for unusual noises.
- 47. Check the oil pressure gauge or light and confirm that the engine has acceptable oil pressure.
- 48. If necessary, install an oil pressure gauge and measure the oil pressure.
- 49. Run the engine speed at about 1,000 RPM until the engine has reached normal operating temperature.
- 50. Listen for sticking valve lifters or other unusual noises.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- 51. Inspect for fuel, oil, and/or coolant leaks while the engine is running.
- 52. Perform a final inspection for the proper oil and coolant levels.
- 53. Close the hood.

## ENGINE OIL AND OIL FILTER REPLACEMENT

## **Removal Procedure**

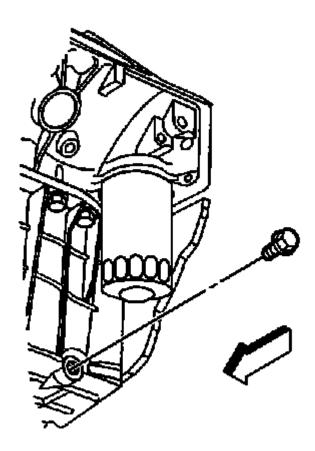


Fig. 323: Identifying Oil Drain Plug Courtesy of GENERAL MOTORS COMPANY

- 1. Raise and suitably support the vehicle. Refer to Lifting and Jacking the Vehicle.
- 2. Remove the drain plug and drain the engine oil in a suitable container.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

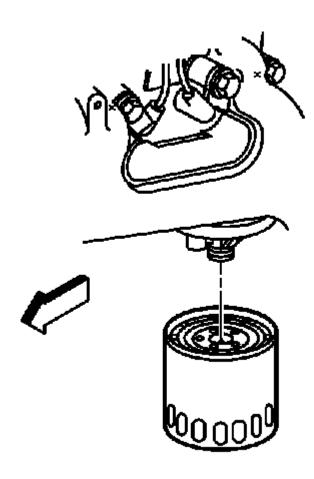


Fig. 324: View Of Oil Filter
Courtesy of GENERAL MOTORS COMPANY

- 3. Remove the oil filter.
- 4. Inspect to ensure the engine oil filter gasket is removed.

## **Installation Procedure**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

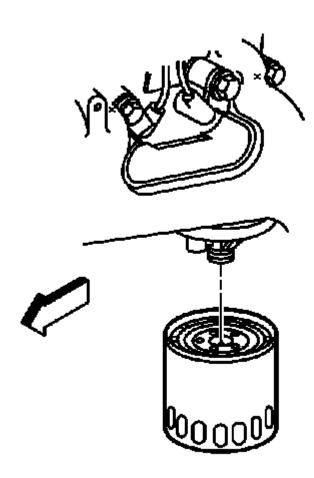


Fig. 325: View Of Oil Filter
Courtesy of GENERAL MOTORS COMPANY

1. Lubricate the oil filter gasket with clean engine oil.

**CAUTION:** Refer to <u>Fastener Caution</u>.

2. Install the oil filter and tighten to 30 N.m (22 lb ft).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

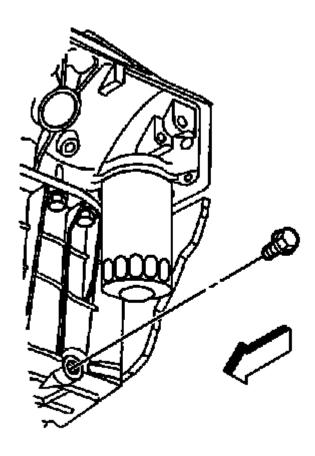


Fig. 326: Identifying Oil Drain Plug Courtesy of GENERAL MOTORS COMPANY

- 3. Install the drain plug and tighten to 25 N.m (18 lb ft).
- 4. Lower the vehicle.
- 5. Fill the engine with the proper capacity and quality of engine oil. Refer to **Approximate Fluid Capacities**.
- 6. Operate the engine, check for leaks and oil pressure.

# **REPAIR INSTRUCTIONS - OFF VEHICLE**

DRAINING FLUIDS AND OIL FILTER REMOVAL

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


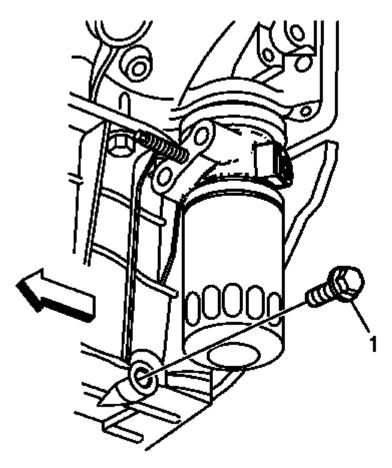


Fig. 327: Identifying Oil Pan Drain Plug Courtesy of GENERAL MOTORS COMPANY


1. Remove the oil pan drain plug (1) and allow the engine oil to drain into a suitable container.

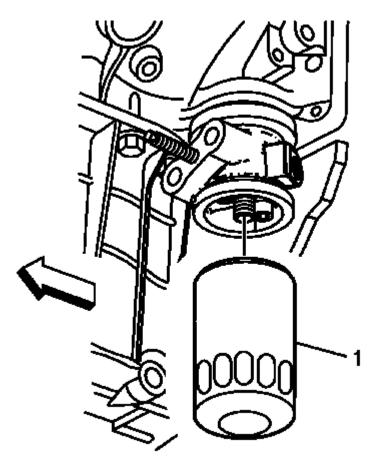

<u>Fig. 328: Identifying Oil Filter</u> Courtesy of GENERAL MOTORS COMPANY

- 2. Remove the oil filter (1).
- 3. Discard the oil filter.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

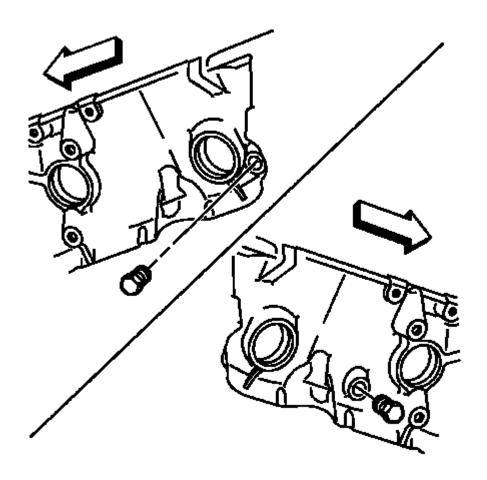


<u>Fig. 329: View Of Engine Block Coolant Drain Hole Plugs</u> Courtesy of GENERAL MOTORS COMPANY

4. Remove both the engine block coolant drain hole plugs and allow the coolant to drain into a suitable container.

## ENGINE FLYWHEEL REMOVAL

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

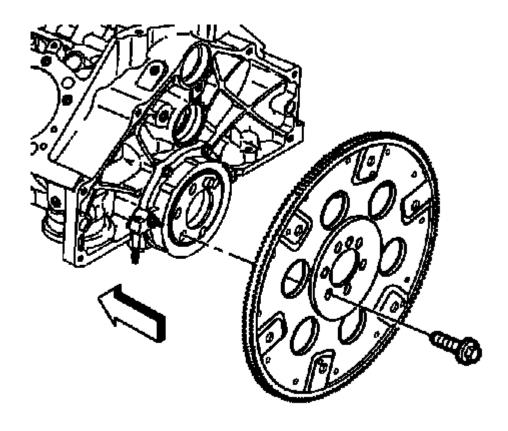

<u>Fig. 330: Engine Flywheel & Bolts</u> Courtesy of GENERAL MOTORS COMPANY

- 1. Remove the engine flywheel bolts.
- 2. Remove the engine flywheel.

## **EXHAUST MANIFOLD REMOVAL - LEFT SIDE**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

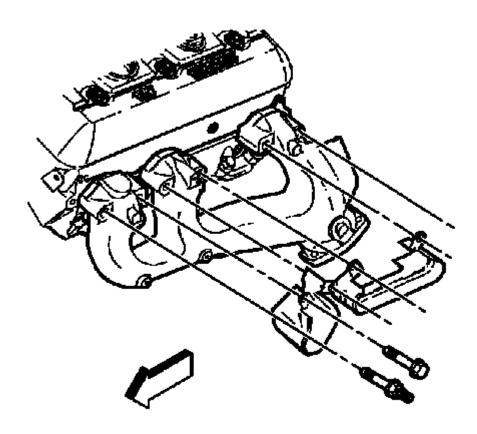


Fig. 331: View Of Exhaust Manifold Bolts & Studs Courtesy of GENERAL MOTORS COMPANY

CAUTION: Twist the spark plug boot one-half turn in order to release the boot. Pull on the spark plug boot only. Do not pull on the spark plug wire or the wire could be damaged.

- 1. Remove the spark plug wires from the spark plugs.
  - 1. Rotate the spark plug wire boot one half turn.
  - 2. Pull outward on the spark plug wire boot to release from the spark plug.
- 2. Remove the spark plug wires from the spark plug wire retainers.
- 3. Remove the exhaust manifold bolts and the stud.
- 4. Remove the spark plug wire shields, if applicable and the exhaust manifold.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

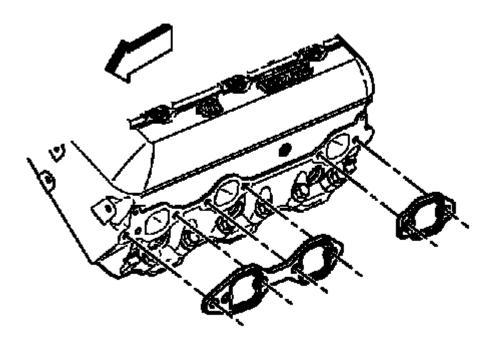


Fig. 332: Exhaust Manifold Gaskets
Courtesy of GENERAL MOTORS COMPANY

5. Remove and discard the exhaust manifold gaskets.

## **EXHAUST MANIFOLD REMOVAL - RIGHT SIDE**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

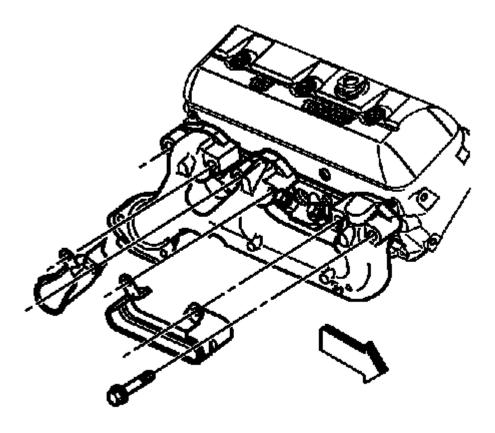


Fig. 333: Exhaust Manifold Bolts
Courtesy of GENERAL MOTORS COMPANY

CAUTION: Twist the spark plug boot one-half turn in order to release the boot. Pull on the spark plug boot only. Do not pull on the spark plug wire or the wire could be damaged.

- 1. Remove the spark plug wires from the spark plugs.
  - 1. Rotate the spark plug wire boot one half turn.
  - 2. Pull outward on the spark plug wire boot to release from the spark plug.
- 2. Remove the spark plug wires from the spark plug wire retainers.
- 3. Remove the exhaust manifold bolts.
- 4. Remove the spark plug wire shields and the exhaust manifold.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


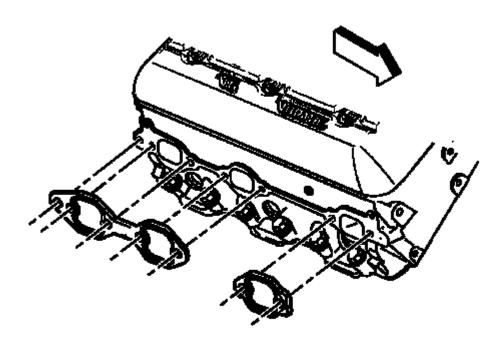


Fig. 334: Exhaust Manifold Gaskets
Courtesy of GENERAL MOTORS COMPANY

5. Remove and discard the exhaust manifold gaskets.

# OIL LEVEL INDICATOR AND TUBE REMOVAL

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

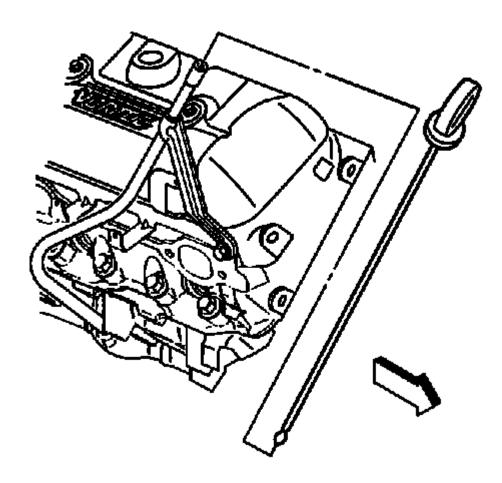

<u>Fig. 335: Locating Oil Level Indicator</u> Courtesy of GENERAL MOTORS COMPANY

1. Remove the oil level indicator from the oil level indicator tube, if required.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

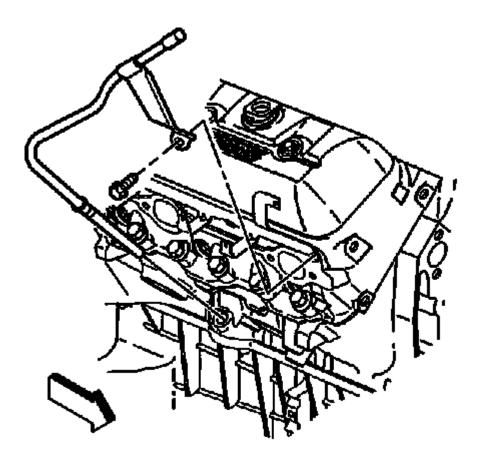


Fig. 336: Oil Level Indicator Tube
Courtesy of GENERAL MOTORS COMPANY

- 2. Remove the oil level indicator tube bolt.
- 3. Remove the oil level indicator tube from the engine block.

## WATER PUMP REMOVAL

# **Tools Required**

J 41240 Fan Clutch Remover and Installer

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


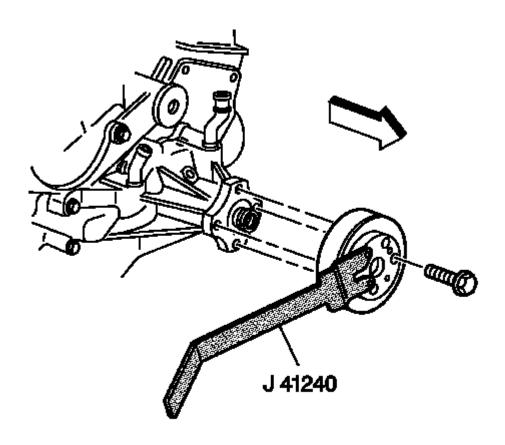


Fig. 337: View Of Fan, Water Pump Pulley & Bolts Courtesy of GENERAL MOTORS COMPANY

1. Remove the bolts and the fan and water pump pulley using the  ${\bf J}$  41240 installer.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

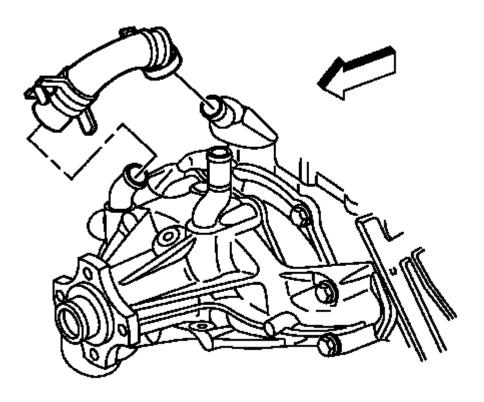

<u>Fig. 338: View Of Water Pump Inlet Hose & Clamps</u> Courtesy of GENERAL MOTORS COMPANY

2. Remove the clamps and the water pump inlet hose.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

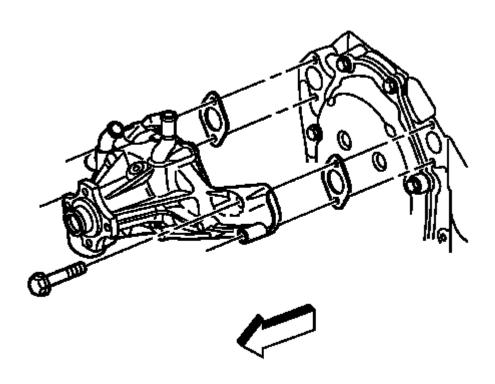


Fig. 339: View Of Water Pump & Bolts
Courtesy of GENERAL MOTORS COMPANY

- 3. Remove the water pump bolts.
- 4. Remove the water pump.
- 5. Remove the water pump gaskets.
- 6. Discard the water pump gaskets.

## CRANKSHAFT BALANCER REMOVAL

## **Special Tools**

J 23523-F Balancer Remover and Installer

For equivalent regional tools, refer to **Special Tools**.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

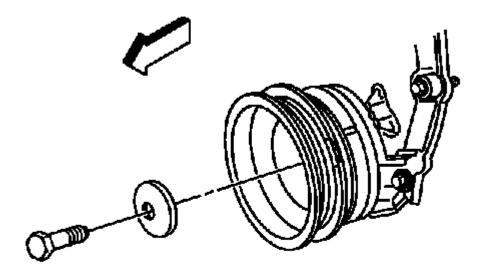


Fig. 340: View Of Crankshaft Balancer Washer & Bolt Courtesy of GENERAL MOTORS COMPANY

1. Remove the crankshaft balancer bolt and washer.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

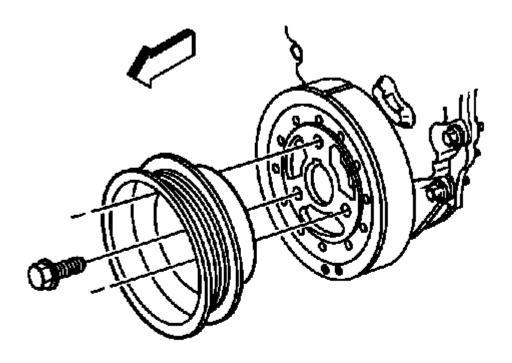


Fig. 341: View Of Crankshaft Pulley & Bolts Courtesy of GENERAL MOTORS COMPANY

2. Remove the bolts and the crankshaft pulley.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

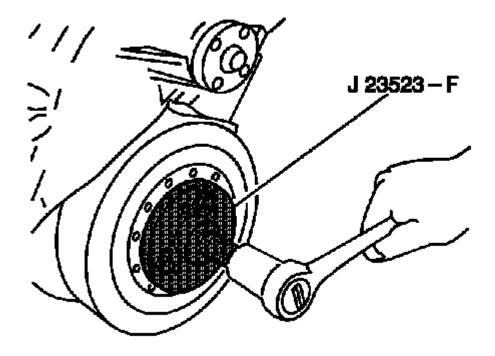


Fig. 342: Removing Crankshaft Balancer Using J 23523-F Courtesy of GENERAL MOTORS COMPANY

**CAUTION: Refer to Fastener Caution.** 

- 3. Use the J 23523-F installer in order to remove the crankshaft balancer.
  - 1. Install the **J 23523-F** installer plate and bolts onto the crankshaft balancer and tighten to 25 N.m (18 lb ft).
  - 2. Install the J 23523-F installer forcing screw into the plate.
  - 3. Rotate the J 23523-F installer forcing screw clockwise in order to remove the crankshaft balancer.
- 4. Remove the J 23523-F installer from the crankshaft balancer.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

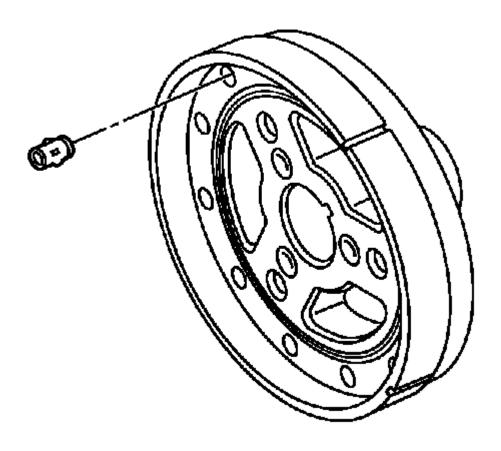


Fig. 343: View Of Crankshaft Balancer Weights Courtesy of GENERAL MOTORS COMPANY

NOTE: If replacing the crankshaft balancer, NEW weights must be installed into

the NEW crankshaft balancer, in the same location as the old weights in

the old balancer.

5. Note the position and length of any crankshaft balancer front groove pins, if applicable.

## VALVE ROCKER ARM COVER REMOVAL - LEFT SIDE

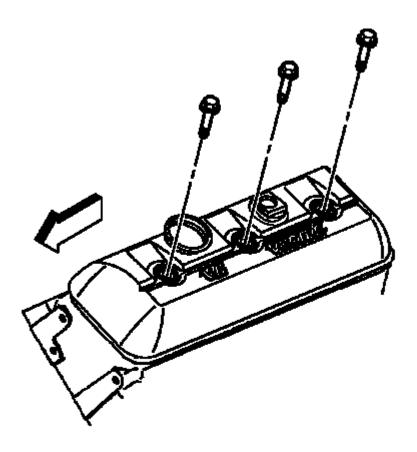


Fig. 344: Valve Rocker Arm Cover Bolts (Left)
Courtesy of GENERAL MOTORS COMPANY

- 1. Remove the valve rocker arm cover bolts.
- 2. Remove and discard the valve rocker arm cover gasket, valve rocker arm cover grommets and valve rocker arm cover bolts if they are serviced with the grommet.
- 3. Remove the valve rocker arm cover bolt grommets.
- 4. Discard the valve rocker arm cover bolt grommets.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

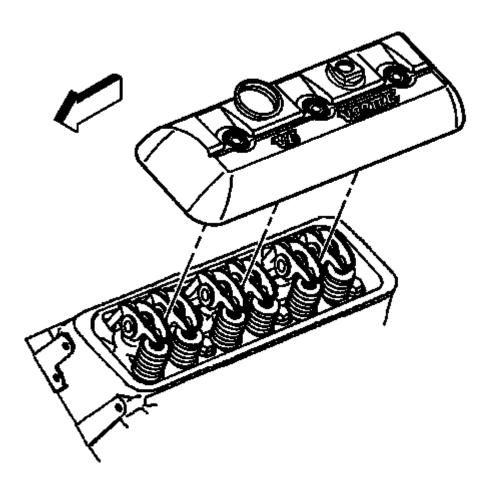


Fig. 345: Valve Rocker Arm Cover (Left)
Courtesy of GENERAL MOTORS COMPANY

5. Remove the valve rocker arm cover.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


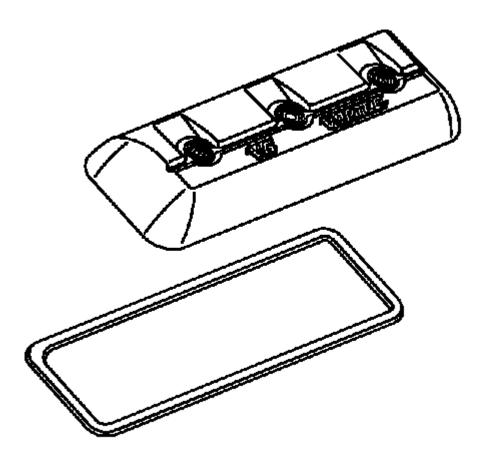


Fig. 346: View Of Rocker Arm Cover And Gasket Courtesy of GENERAL MOTORS COMPANY

- 6. Remove the valve rocker arm cover gasket.
- 7. Discard the valve rocker arm cover gasket.

## VALVE ROCKER ARM COVER REMOVAL - RIGHT SIDE

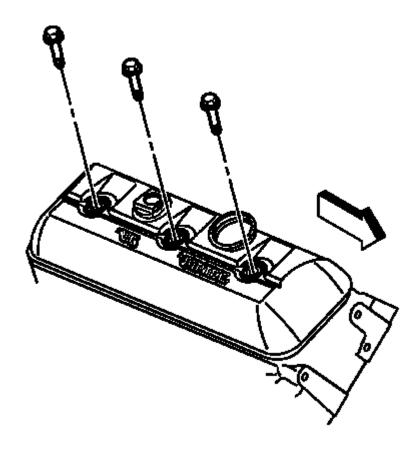

<u>Fig. 347: View Of Valve Rocker Arm Cover Bolts (Right)</u> Courtesy of GENERAL MOTORS COMPANY

- 1. Remove the valve rocker arm cover bolts.
- 2. Remove and discard the valve rocker arm cover gasket, valve rocker arm cover grommets and valve rocker arm cover bolts if they are serviced with the grommet.
- 3. Remove the valve rocker arm cover bolt grommets.
- 4. Discard the valve rocker arm cover bolt grommets.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

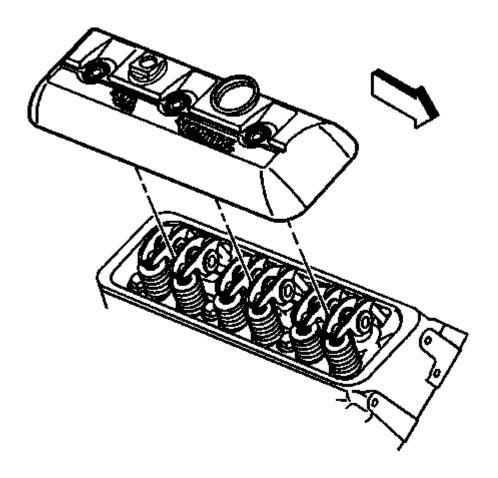


Fig. 348: Valve Rocker Arm Cover (Right)
Courtesy of GENERAL MOTORS COMPANY

5. Remove the valve rocker arm cover.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


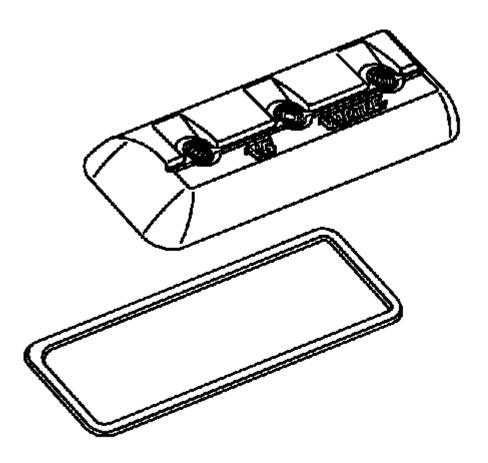


Fig. 349: View Of Rocker Arm Cover And Gasket Courtesy of GENERAL MOTORS COMPANY

- 6. Remove the valve rocker arm cover gasket.
- 7. Discard the valve rocker arm cover gasket.

## INTAKE MANIFOLD REMOVAL

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

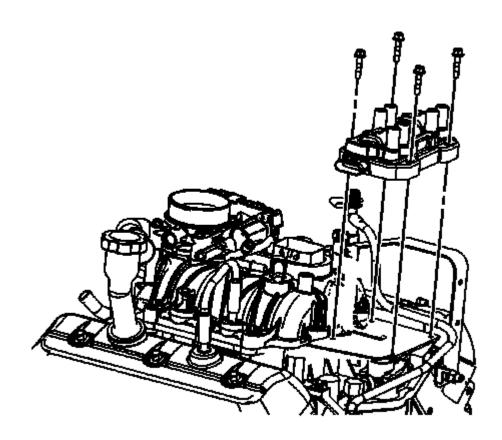

<u>Fig. 350: View Of Ignition Coil & Bolts</u> Courtesy of GENERAL MOTORS COMPANY

1. Remove the ignition coil bolts and coil from the bracket.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

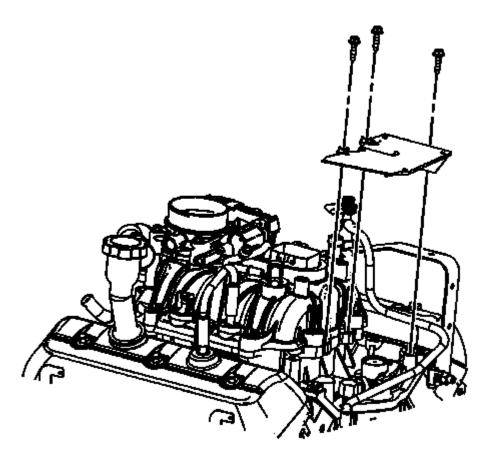


Fig. 351: View Of Ignition Coil Bracket & Bolts Courtesy of GENERAL MOTORS COMPANY

2. If required, remove the ignition coil bracket bolts and bracket.

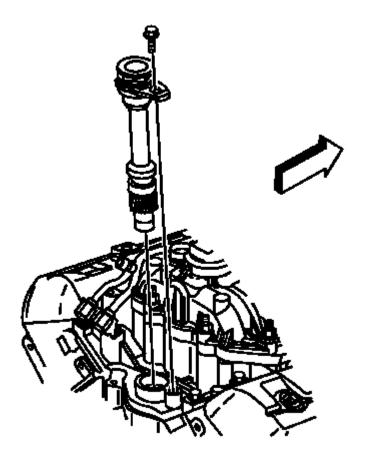


Fig. 352: View Of Oil Pump Drive Shaft Courtesy of GENERAL MOTORS COMPANY

- 3. Remove the oil pump drive shaft bolt.
- 4. Remove the oil pump drive shaft with clamp.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


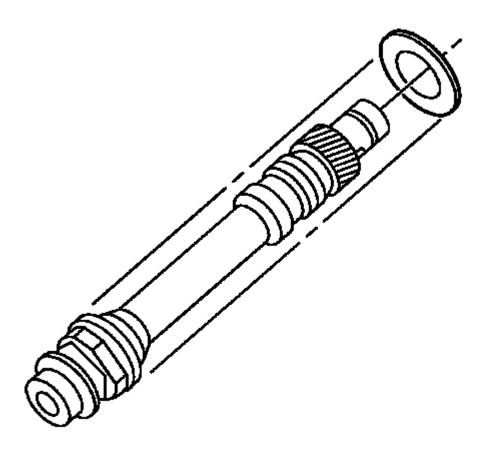


Fig. 353: Oil Pump Drive Shaft & Gasket Courtesy of GENERAL MOTORS COMPANY

5. Remove the oil pump drive shaft gasket and discard.

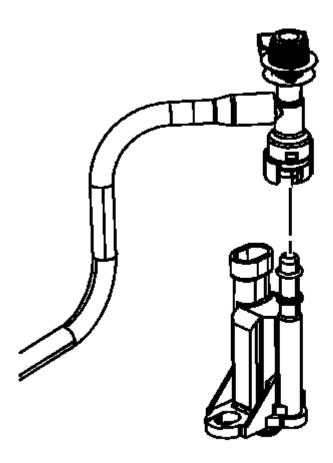

<u>Fig. 354: Evaporative Emission Canister Solenoid Valve & Harness Courtesy of GENERAL MOTORS COMPANY</u>

- 6. Remove the evaporative emission (EVAP) canister purge solenoid valve harness.
  - 1. Push the quick disconnect clip and hold in place.
  - 2. Pull outward on the harness elbow.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

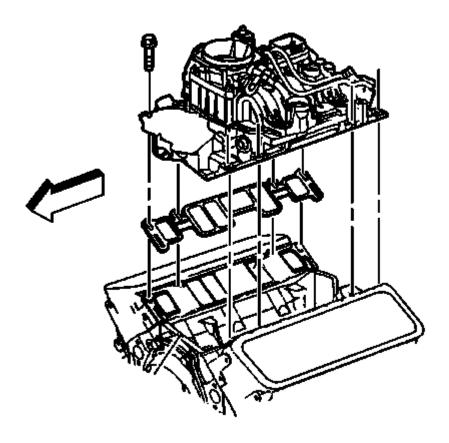


Fig. 355: View Of Intake Manifold Assembly & Bolts Courtesy of GENERAL MOTORS COMPANY

- 7. Remove the engine coolant temperature (ECT) sensor wire connector, if equipped, from the engine wiring harness bracket.
- 8. Remove the lower intake manifold bolts.

#### **IMPORTANT:**

- The intake manifold may be removed as an assembly. Do not remove the specific intake manifold components unless component service is required.
- Do not allow dirt or debris to enter the fuel system. Ensure that the ends of the fuel system are properly sealed.
- 9. Remove the intake manifold assembly.
- 10. Remove and discard the lower intake manifold gaskets.

#### VALVE ROCKER ARM AND PUSH ROD REMOVAL

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

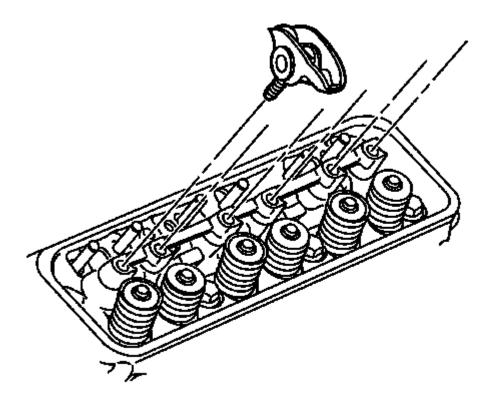


Fig. 356: Identifying Valve Rocker Arms
Courtesy of GENERAL MOTORS COMPANY

IMPORTANT: Mark, sort and organize all the components for assembly.

1. Remove the valve rocker arms.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


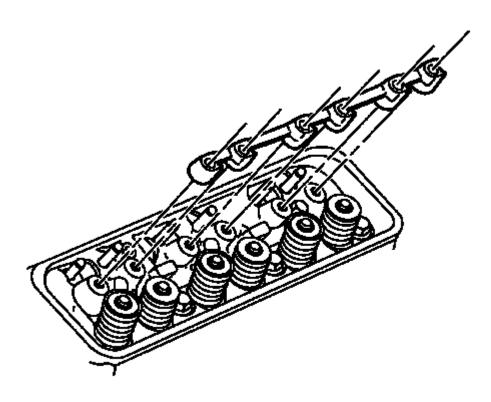


Fig. 357: View Of Valve Rocker Arm Supports
Courtesy of GENERAL MOTORS COMPANY

2. Remove the valve rocker arm supports.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

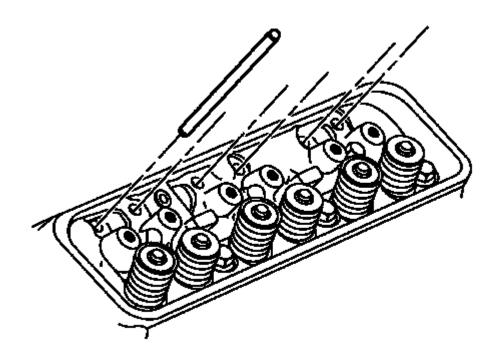

<u>Fig. 358: View Of Valve Pushrods</u> Courtesy of GENERAL MOTORS COMPANY

3. Remove the valve pushrods.

CYLINDER HEAD REMOVAL - LEFT SIDE

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


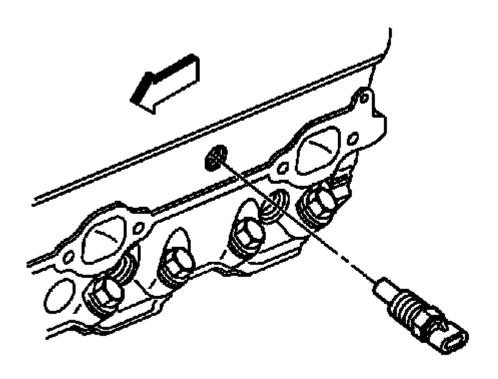


Fig. 359: View Of Engine Coolant Temperature Sensor Courtesy of GENERAL MOTORS COMPANY

1. Remove the engine coolant temperature sensor, if applicable.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

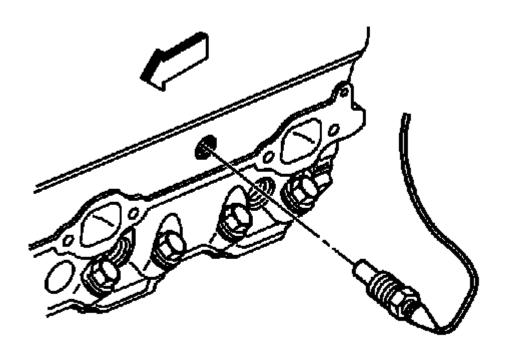

<u>Fig. 360: Engine Coolant Temperature Gage Sensor</u> Courtesy of GENERAL MOTORS COMPANY

2. Remove the engine coolant temperature gauge sensor, if applicable.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


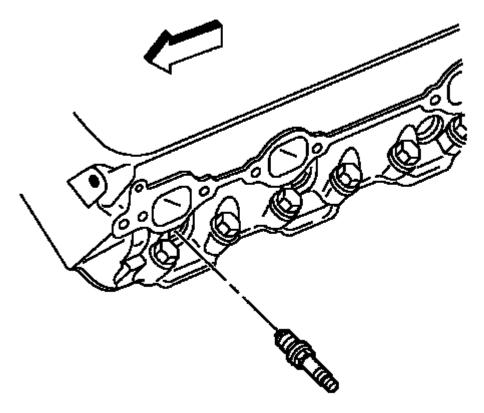


Fig. 361: View Of Spark Plugs (Left)
Courtesy of GENERAL MOTORS COMPANY

3. Remove the spark plugs.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

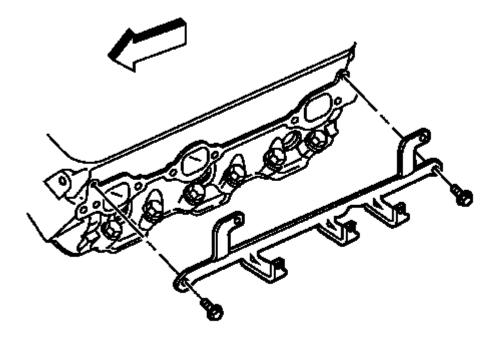

<u>Fig. 362: Locating Spark Plug Wire Support</u> Courtesy of GENERAL MOTORS COMPANY

4. Remove the bolts and the spark plug wire support.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

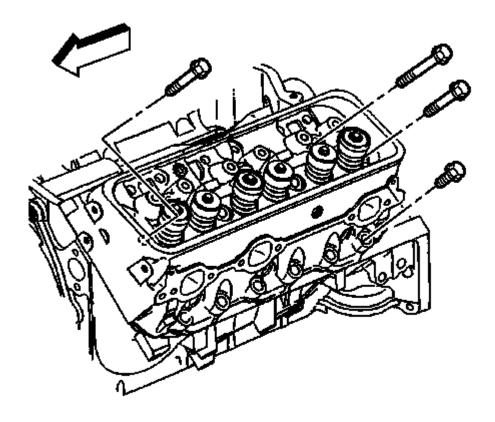


Fig. 363: Locating Cylinder Head Bolts (Left)
Courtesy of GENERAL MOTORS COMPANY

5. Remove the cylinder head bolts and discard.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


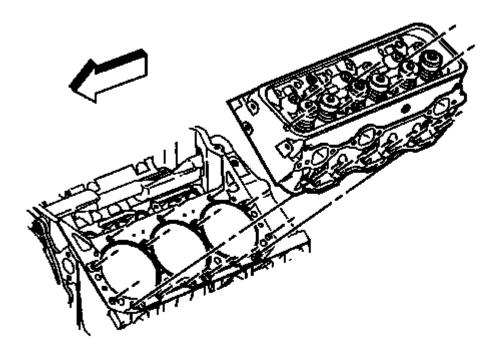


Fig. 364: View of Cylinder Head (Left)
Courtesy of GENERAL MOTORS COMPANY

CAUTION: After removal, place the cylinder head on 2 wood blocks in order to prevent damage to the sealing surfaces.

6. Remove the cylinder head.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

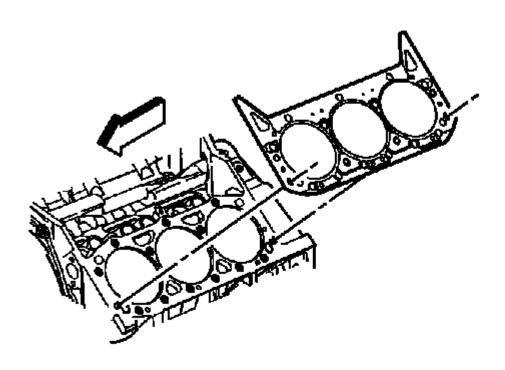

<u>Fig. 365: View Of Cylinder Head Gasket And Alignment Pins - Left Courtesy of GENERAL MOTORS COMPANY</u>

7. Remove and discard the cylinder head gasket.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

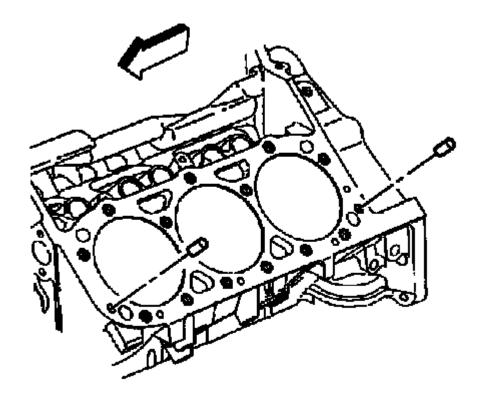


Fig. 366: View Of Cylinder Head Locator Pins Courtesy of GENERAL MOTORS COMPANY

8. Remove the cylinder head locator dowel pins, if required.

## CYLINDER HEAD REMOVAL - RIGHT SIDE

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

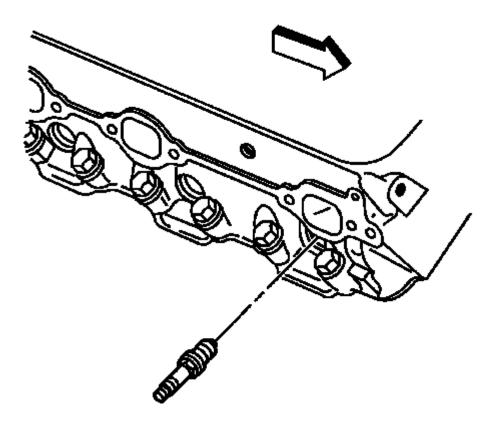


Fig. 367: Locating Spark Plugs Courtesy of GENERAL MOTORS COMPANY

1. Remove the spark plugs.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

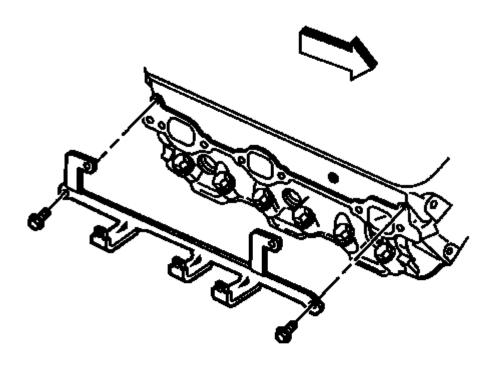


Fig. 368: Spark Plug Wire Support
Courtesy of GENERAL MOTORS COMPANY

2. Remove the rear bolt and the spark plug wire support.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

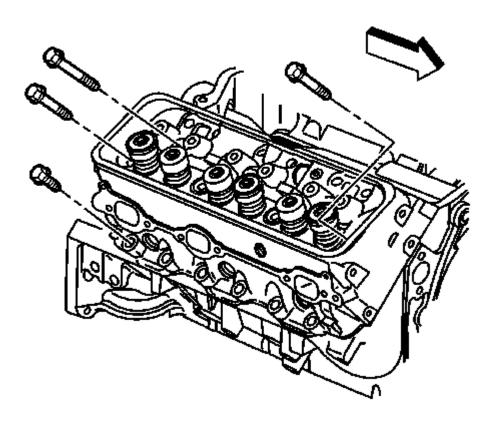


Fig. 369: Locating Cylinder Head Bolts (Right)
Courtesy of GENERAL MOTORS COMPANY

3. Remove the cylinder head bolts and discard.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


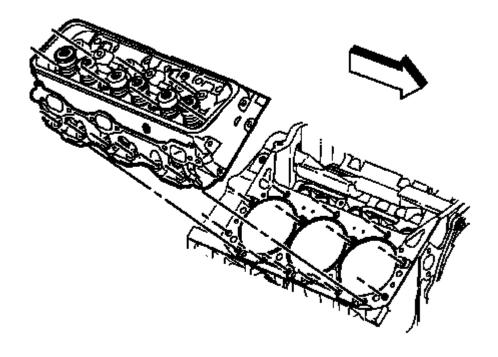


Fig. 370: View Of Cylinder Head (Right)
Courtesy of GENERAL MOTORS COMPANY

CAUTION: After removal, place the cylinder head on 2 wood blocks in order to prevent damage to the sealing surfaces.

4. Remove the cylinder head.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

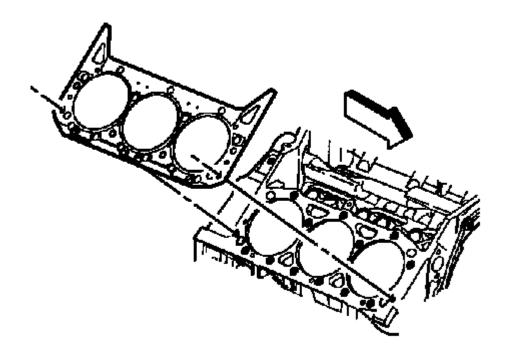

<u>Fig. 371: View Of Cylinder Head Gasket And Alignment Pins - Right Courtesy of GENERAL MOTORS COMPANY</u>

5. Remove and discard the cylinder head gasket.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

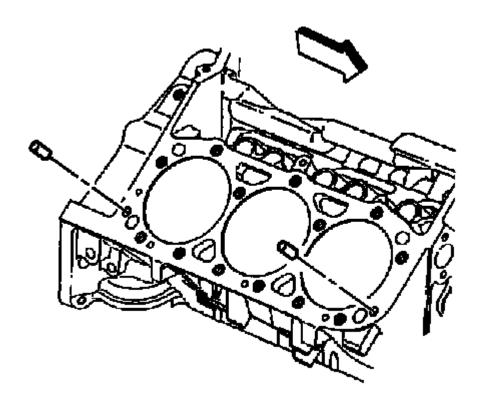


Fig. 372: Cylinder Head Locator Pins Courtesy of GENERAL MOTORS COMPANY

6. Remove the cylinder head locator dowel pins, if required.

## VALVE LIFTER REMOVAL

# **Tools Required**

J 3049-A Valve Lifter Remover

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

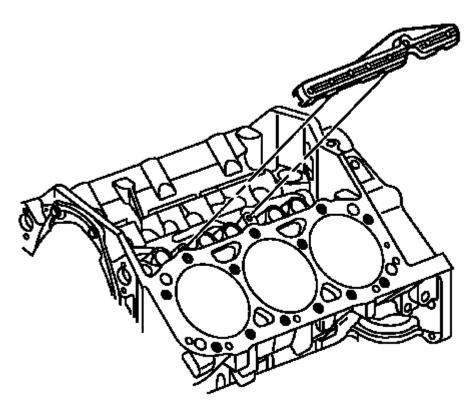


Fig. 373: View Of Valve Lifter Pushrod Guides Courtesy of GENERAL MOTORS COMPANY

IMPORTANT: Place the components in a rack so that the components can be reinstalled to their original location.

1. Remove the bolts and valve lifter pushrod guide.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


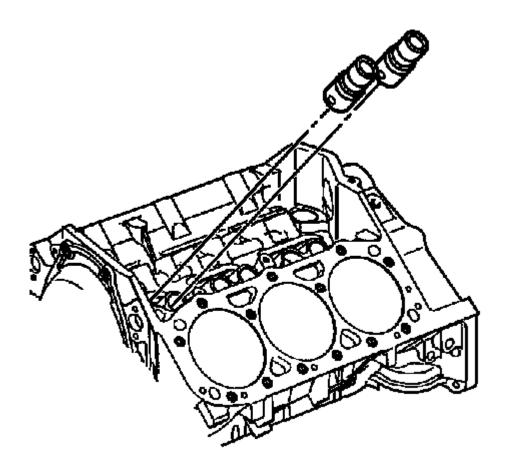


Fig. 374: View Of Valve Lifters
Courtesy of GENERAL MOTORS COMPANY

IMPORTANT: Place the valve lifters in the rack in the upright position in order to maintain the oil inside the valve lifters.

2. Remove the valve lifters.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

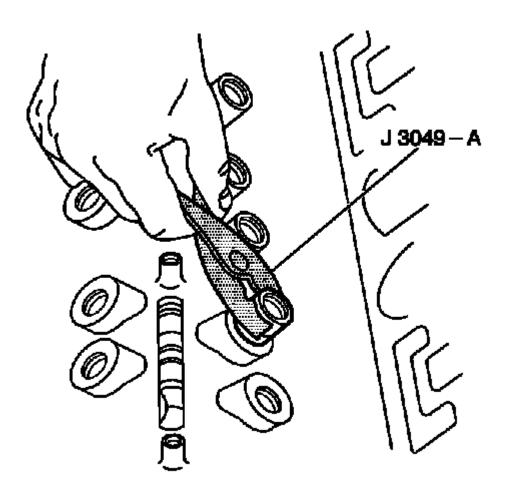


<u>Fig. 375: Using J 3049-A To Remove Sticking Valve Lifters</u> Courtesy of GENERAL MOTORS COMPANY

IMPORTANT: Some valve lifters may be stuck in the valve lifter bores because of gum or varnish deposits and may require the use of J 3049-A remover for removal.

3. Use the J 3049-A remover in order to remove the stuck valve lifters.

## OIL FILTER ADAPTER REMOVAL

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

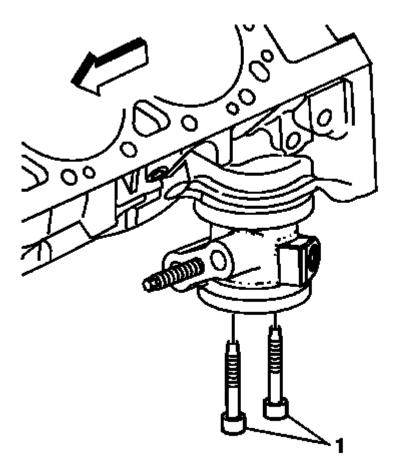

<u>Fig. 376: Identifying Oil Filter Adapter Bolts</u> Courtesy of GENERAL MOTORS COMPANY

1. Remove the oil filter adapter bolts (1).

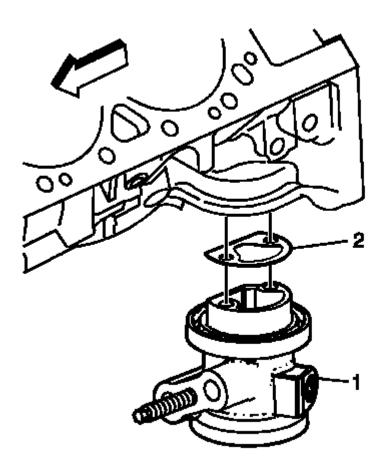


Fig. 377: Identifying Oil Filter Adapter And Oil Filter Adapter Gasket Courtesy of GENERAL MOTORS COMPANY

- 2. Remove the oil filter adapter (1) and the oil filter adapter gasket (2).
- 3. Discard the oil filter adapter gasket.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

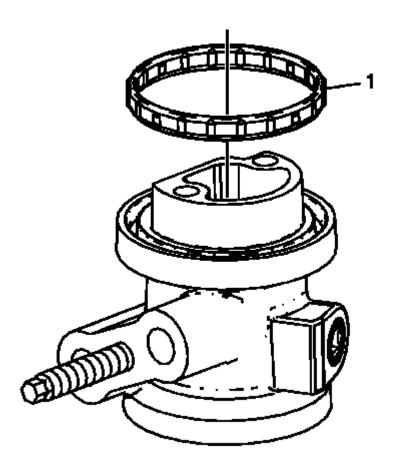


Fig. 378: Identifying Oil Filter Adapter Seal O-Ring Courtesy of GENERAL MOTORS COMPANY

4. Remove and discard the oil filter adapter seal, O-ring (1).

## **OIL PAN REMOVAL**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

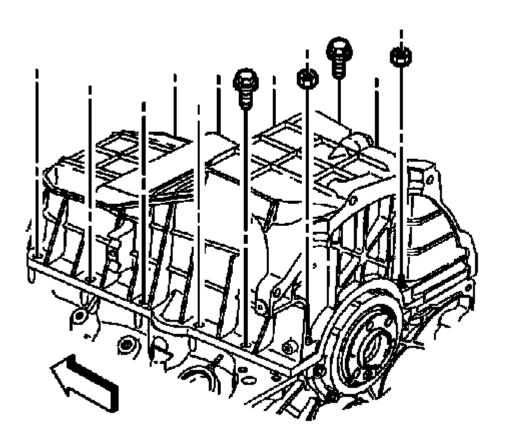


Fig. 379: Locating Oil Pan Bolts & Nuts Courtesy of GENERAL MOTORS COMPANY

1. Remove the oil pan bolts and nuts.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

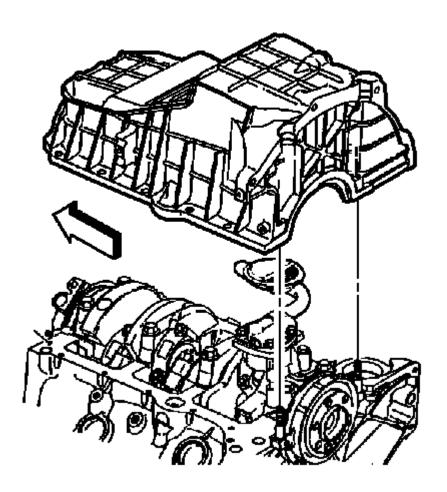


Fig. 380: View Of Oil Pan Courtesy of GENERAL MOTORS COMPANY

2. Remove the oil pan.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

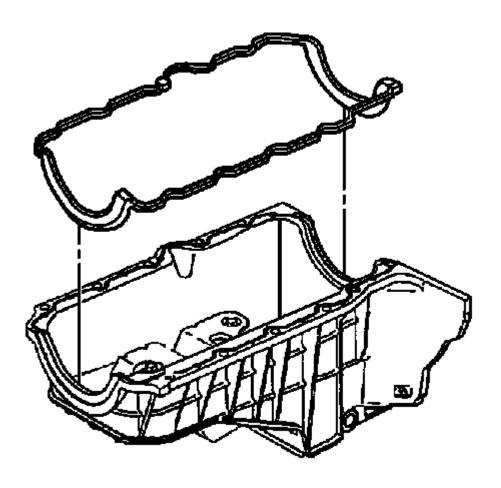


Fig. 381: View Of Oil Pan Gasket Courtesy of GENERAL MOTORS COMPANY

- 3. Remove the oil pan gasket.
- 4. Discard the oil pan gasket.

## OIL PUMP REMOVAL

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

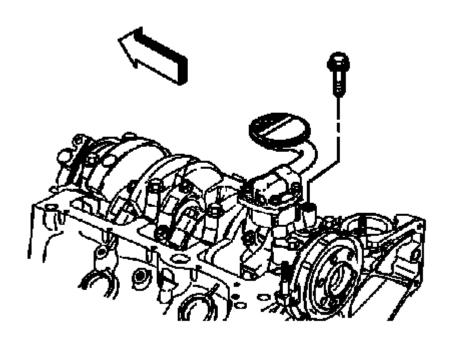


Fig. 382: View Of Oil Pump Bolt Courtesy of GENERAL MOTORS COMPANY

1. Remove the oil pump bolt.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

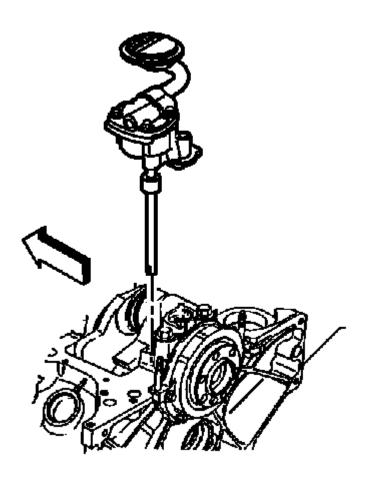


Fig. 383: View Of Oil Pump Courtesy of GENERAL MOTORS COMPANY

2. Remove the oil pump.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

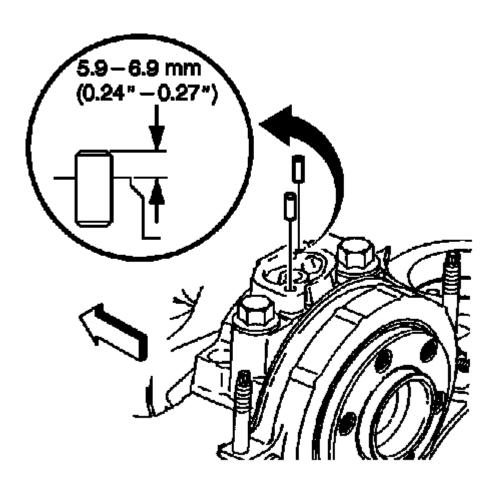


Fig. 384: Oil Pump Locator Pins
Courtesy of GENERAL MOTORS COMPANY

3. Inspect the oil pump locator pins for damage and replace the pins if required.

## ENGINE FRONT COVER REMOVAL

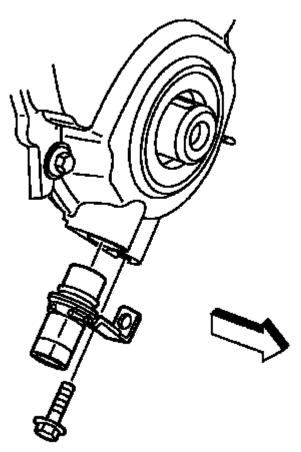


Fig. 385: View Of CKP Sensor & Bolt Courtesy of GENERAL MOTORS COMPANY

- 1. Remove the crankshaft position sensor bolt.
- 2. Remove the crankshaft position sensor.

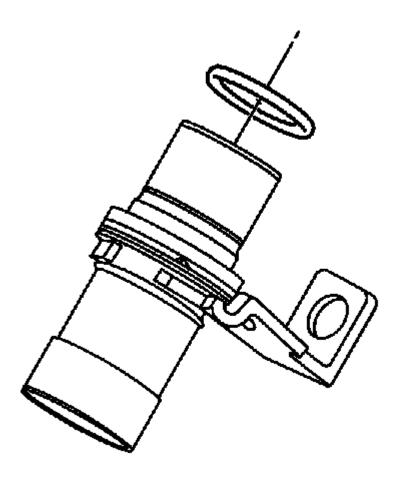


Fig. 386: View Of Crankshaft Position Sensor Seal O-Ring Courtesy of GENERAL MOTORS COMPANY

- 3. Remove the crankshaft position sensor seal, O-ring.
- 4. Discard the crankshaft position sensor seal, O-ring.

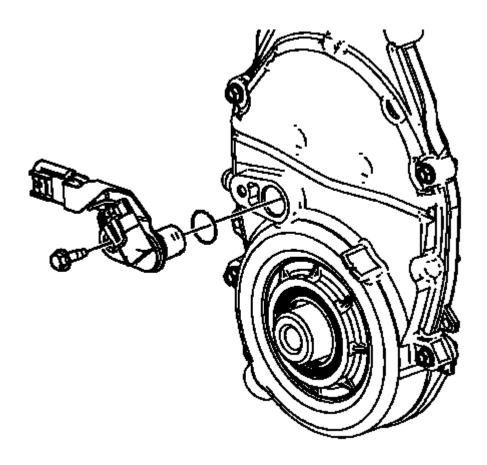


Fig. 387: Camshaft Position Sensor & Bolt Courtesy of GENERAL MOTORS COMPANY

- 5. Remove the camshaft position sensor bolt.
- 6. Remove the camshaft position sensor assembly.
- 7. Remove the camshaft position sensor O-ring seal and discard.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

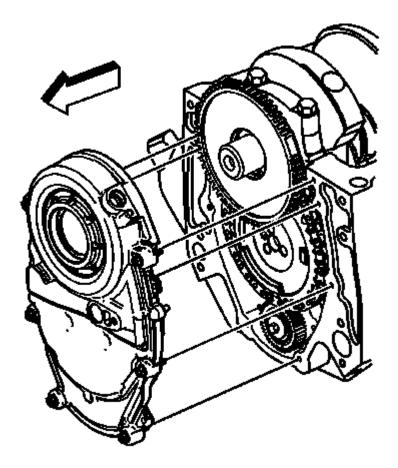


Fig. 388: Engine Front Cover Courtesy of GENERAL MOTORS COMPANY

8. Remove the engine front cover bolts.

IMPORTANT: If the composite engine front cover is removed do not reinstall the used engine front cover.

- 9. Remove the engine front cover.
- 10. Discard the engine front cover.

#### TIMING CHAIN AND SPROCKET REMOVAL

# **Special Tools**

J 5825-A Crankshaft Gear Remover

For equivalent regional tools, refer to **Special Tools**.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

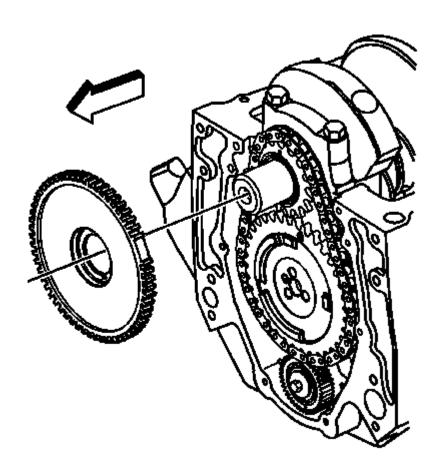


Fig. 389: View Of Crankshaft Position Sensor Reluctor Ring Courtesy of GENERAL MOTORS COMPANY

1. Remove the crankshaft position sensor reluctor ring.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

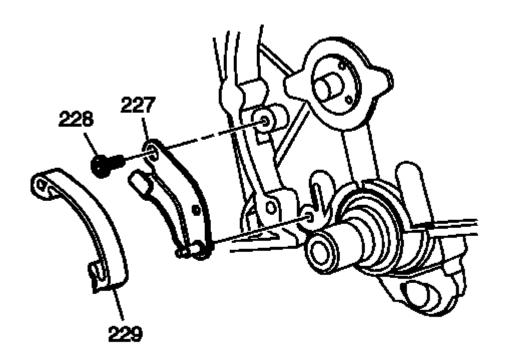


Fig. 390: View Of Timing Chain Tensioner Bracket, Bolt & Shoe Courtesy of GENERAL MOTORS COMPANY

- 2. Remove the timing chain tensioner shoe (229) using a downward motion.
- 3. Remove the timing chain tensioner bracket bolt and bracket (227 and 228).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


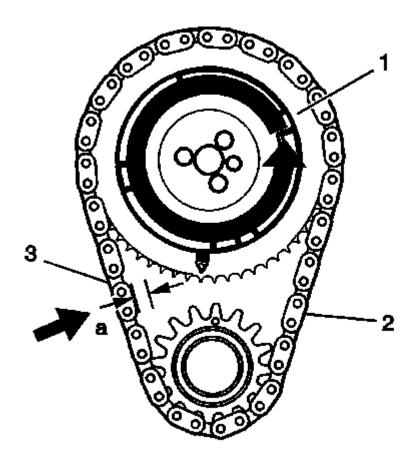


Fig. 391: Checking Camshaft Timing Chain Free Play Courtesy of GENERAL MOTORS COMPANY

- 4. Check the camshaft timing chain free play.
  - 1. Rotate the camshaft sprocket (1) counterclockwise until all slack is removed from the camshaft timing chain (2).
  - 2. Measure the free play on the slack side (3) of the camshaft timing chain.

If the camshaft timing chain can be moved side to side in excess of 11 mm (0.43 in), dimension a, replacement of the camshaft timing chain and the sprockets is recommended during assembly.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

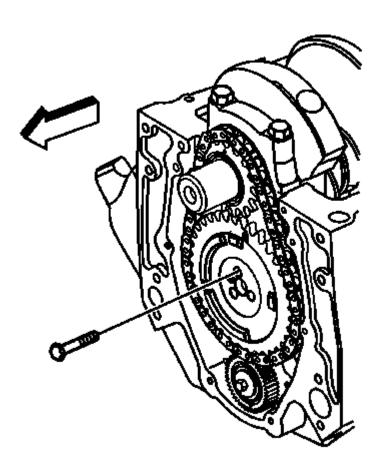

<u>Fig. 392: Camshaft Sprocket & Bolts</u> Courtesy of GENERAL MOTORS COMPANY

5. Remove the camshaft sprocket bolts.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


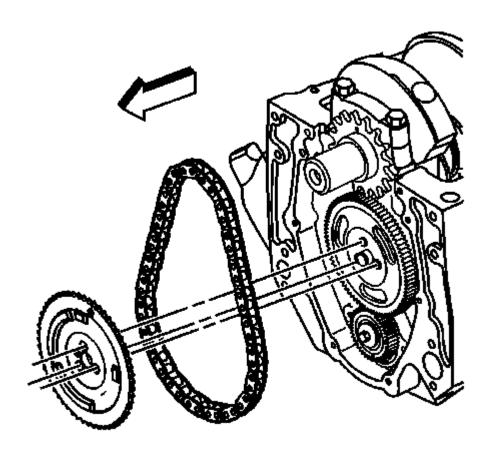


Fig. 393: Camshaft Sprocket And Camshaft Timing Chain Courtesy of GENERAL MOTORS COMPANY

6. Remove the camshaft sprocket and the camshaft timing chain.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

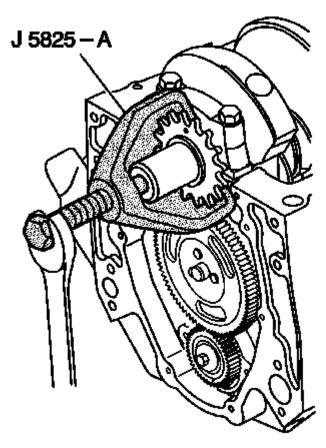

<u>Fig. 394: Removing Crankshaft Sprocket Using J 5825-A</u> Courtesy of GENERAL MOTORS COMPANY

WARNING: Refer to Safety Glasses Warning.

7. Remove the crankshaft sprocket using the **J 5825-A** remover.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


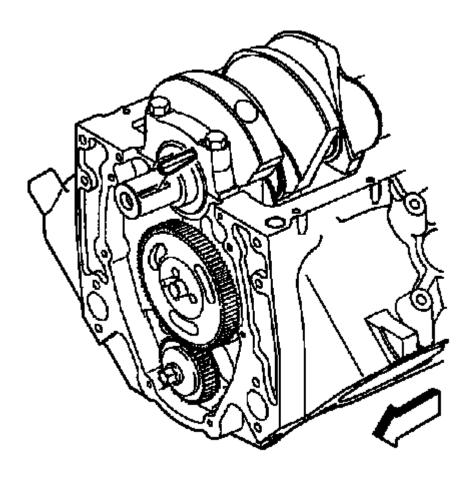


Fig. 395: Locating Crankshaft Balancer Key Courtesy of GENERAL MOTORS COMPANY

8. Remove the crankshaft balancer key.

# **BALANCE SHAFT REMOVAL**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

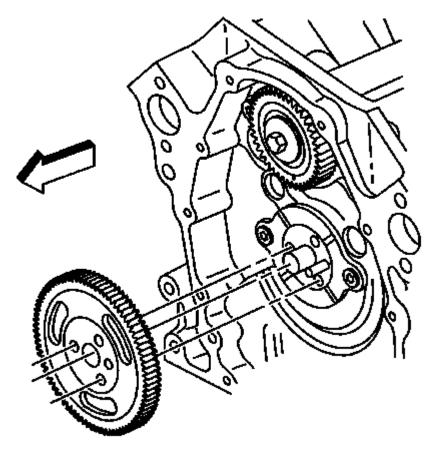

<u>Fig. 396: View Of Balance Shaft Drive Gear</u> Courtesy of GENERAL MOTORS COMPANY

1. Remove the balance shaft drive gear.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

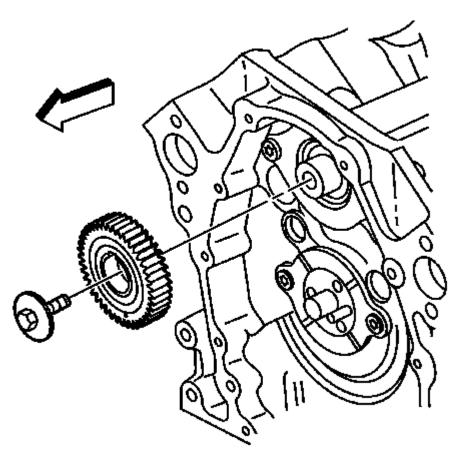


Fig. 397: Locating Balance Shaft Driven Gear Courtesy of GENERAL MOTORS COMPANY

IMPORTANT: The balance shaft drive and balance shaft driven gears are serviced as a set. The set includes the balance shaft driven gear bolt.

- 2. Remove the balance shaft driven gear bolt from the balance shaft.
  - 1. Use a wrench in order to secure the balance shaft.

Place the wrench onto the balance shaft near to the balance shaft front bearing.

- 2. Remove the balance shaft bolt.
- 3. Remove the wrench from the balance shaft.
- 3. Remove the balance shaft driven gear from the balance shaft.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

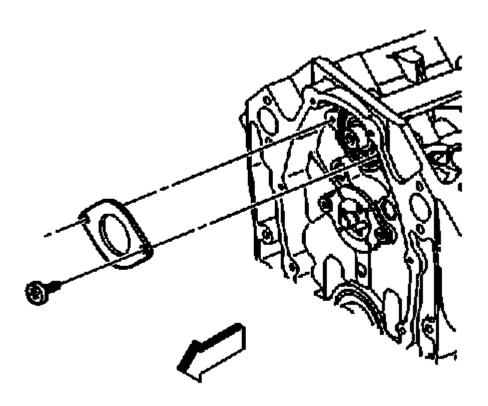


Fig. 398: View of Balance Shaft Retainer & Bolts Courtesy of GENERAL MOTORS COMPANY

4. Remove the bolts and the balance shaft retainer.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

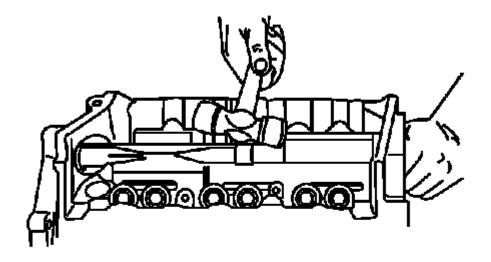


Fig. 399: Removing Balance Shaft
Courtesy of GENERAL MOTORS COMPANY

IMPORTANT: The balance shaft and the balance shaft front bearing are serviced only as a package. Do not remove the balance shaft front bearing from the balance shaft.

5. Use a soft-faced hammer in order to remove the balance shaft from the engine block.

# **CAMSHAFT REMOVAL**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

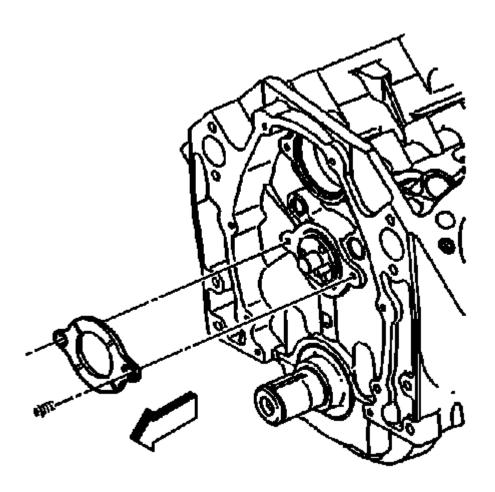


Fig. 400: View Of Camshaft Retainer & Bolts Courtesy of GENERAL MOTORS COMPANY

1. Remove the camshaft retainer bolts and retainer.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

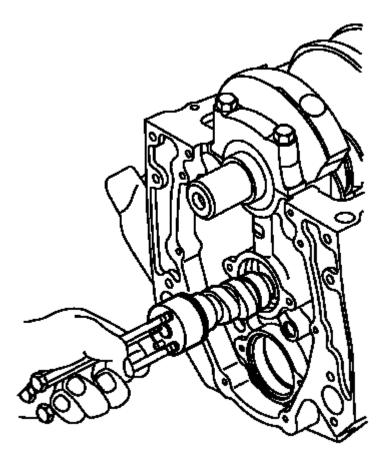


Fig. 401: Handling Camshaft Using Three 5/16-18 X 4.0 Inch Bolts Courtesy of GENERAL MOTORS COMPANY

CAUTION: All camshaft journals are the same diameter, so care must be used in removing or installing the camshaft to avoid damage to the camshaft bearings.


- 2. Remove the engine camshaft.
  - 1. Install the three  $5/16-18 \times 4.0$  inch bolts into the engine camshaft front bolt holes.
  - 2. Using the bolts as a handle, carefully rotate and pull the engine camshaft out of the camshaft bearings.
  - 3. Remove the bolts from the front of the engine camshaft.

# PISTON, CONNECTING ROD AND BEARING REMOVAL

### **Special Tools**

J 24270 Cylinder Bore Ridge Reamer

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

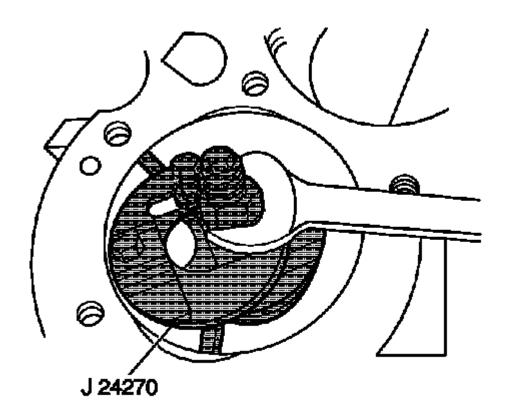

<u>Fig. 402: Removing Cylinder Bore Ring Ridge</u> Courtesy of GENERAL MOTORS COMPANY

# IMPORTANT: Powdered metal connecting rod, piston and piston pin are to be serviced as an assembly.

- 1. Use the J 24270 reamer in order to remove the cylinder ring ridge.
  - 1. Turn the crankshaft until the piston is at the bottom of the stroke.
  - 2. Place a cloth on top of the piston.
  - 3. Use the J 24270 reamer to remove all of the cylinder ring ridge.
  - 4. Turn the crankshaft so the piston is at the top of the stroke.
  - 5. Remove the cloth.
  - 6. Remove the cutting debris.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

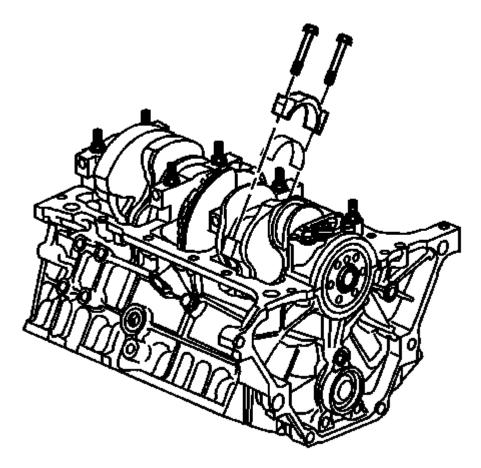


Fig. 403: View Of Bearing, Bearing Cap & Bolts Courtesy of GENERAL MOTORS COMPANY

IMPORTANT: The connecting rods and rod bearing caps are NOT interchangeable.

Using a paint stick or etching tool, place match marks or numbers on the connecting rods and the connecting rod bearing caps prior to removal to ensure that they are assembled in their original position and direction, with the connecting rod/rod bearing cap mating surfaces properly oriented and aligned.

2. Remove the connecting rod bolts, cap and bearing.


IMPORTANT: Wrap a clean, lint free towel around the connecting rod ends when removing the piston from the cylinder so as not to damage the crankshaft journals or cylinder bore.

- 3. Remove the connecting rod and the piston out of the top of the engine block.
- 4. Remove the connecting rod bearings from the connecting rod.
  - Keep all connecting rod bearings and rod bearing caps with the original connecting rods and in the original orientation at the connecting rod/rod bearing cap mating area.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- Wipe the oil from the connecting rod bearings.
- Wipe the oil from the crankpins.

# CRANKSHAFT REAR OIL SEAL AND HOUSING REMOVAL

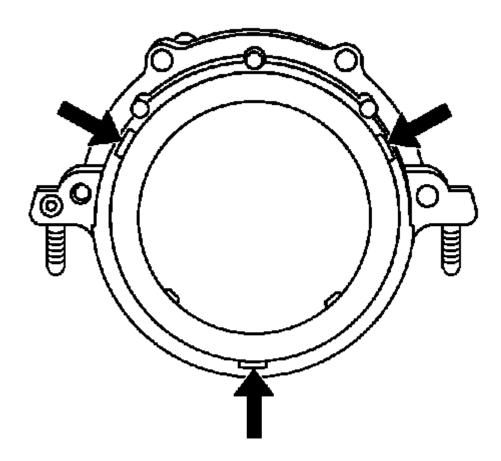


<u>Fig. 404: Crankshaft Rear Oil Seal Notches</u> Courtesy of GENERAL MOTORS COMPANY

1. Remove the crankshaft rear oil seal from the crankshaft rear oil seal housing.

Insert a suitable tool into the access notches and then carefully pry the crankshaft rear oil seal from the crankshaft rear oil seal housing.

2. Discard the crankshaft rear oil seal.


2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

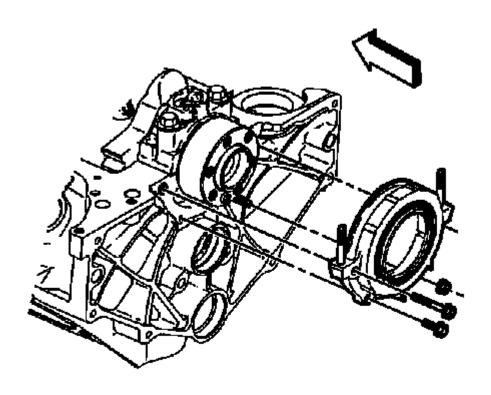

<u>Fig. 405: View Of Crankshaft Rear Oil Seal Housing Nut & Bolts</u> Courtesy of GENERAL MOTORS COMPANY

- 3. Remove the crankshaft rear oil seal housing nut and bolts.
- 4. Remove the crankshaft rear oil seal housing.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

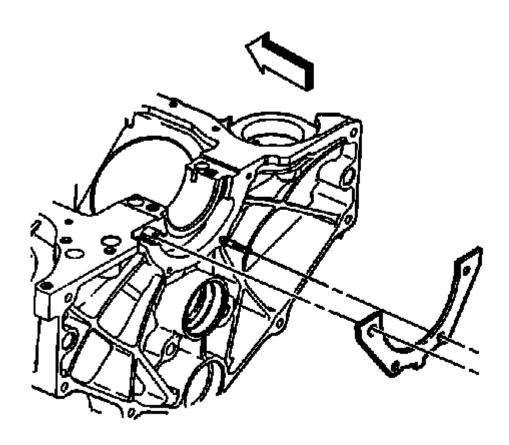

<u>Fig. 406: Identifying Crankshaft Rear Oil Seal Housing Gasket</u> Courtesy of GENERAL MOTORS COMPANY

- 5. Remove the crankshaft rear oil seal housing gasket.
- 6. Discard the crankshaft rear oil seal housing gasket.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


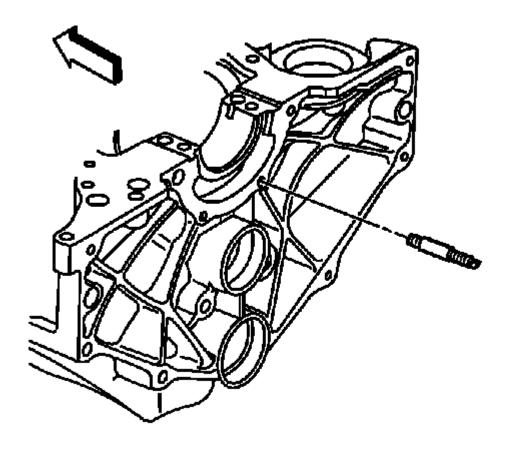


Fig. 407: Locating Crankshaft Rear Oil Seal Housing Retainer Stud **Courtesy of GENERAL MOTORS COMPANY** 

7. Remove the crankshaft rear oil seal housing retainer stud from the engine block.

# CRANKSHAFT AND BEARING REMOVAL

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

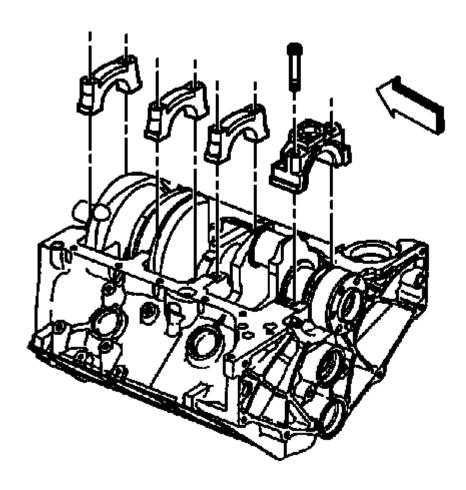

<u>Fig. 408: Crankshaft Bearing Caps</u> Courtesy of GENERAL MOTORS COMPANY

- 1. Mark or identify the crankshaft bearing cap locations, direction and positions for assembly.
- 2. Remove the crankshaft bearing cap bolts and discard.
- 3. Remove the crankshaft bearing caps.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


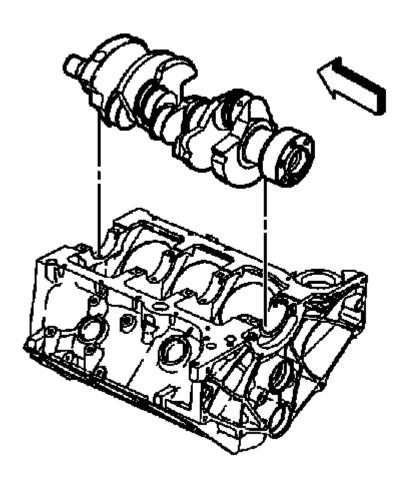


Fig. 409: View Of Crankshaft
Courtesy of GENERAL MOTORS COMPANY

4. Remove the crankshaft.


2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

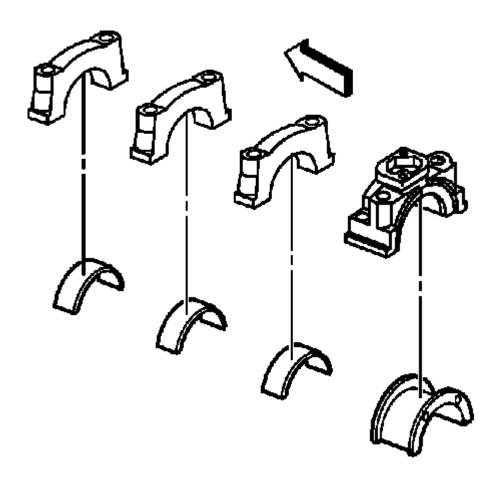

<u>Fig. 410: View Of Crankshaft Bearings & Crankshaft Bearing Caps</u> Courtesy of GENERAL MOTORS COMPANY

5. Remove the crankshaft bearings from the crankshaft bearing caps.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

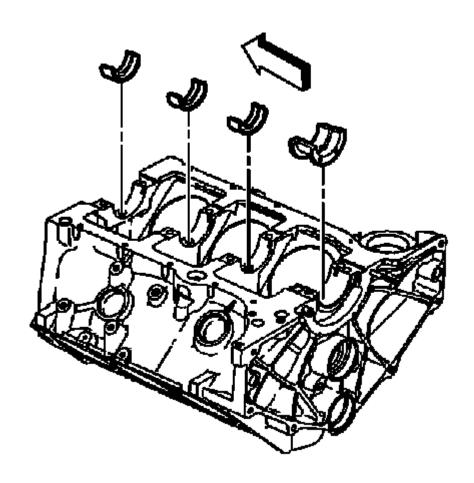

<u>Fig. 411: View Of Crankshaft Bearings At Engine Block</u> Courtesy of GENERAL MOTORS COMPANY

6. Remove the crankshaft bearings from the engine block.

# ENGINE BLOCK PLUG REMOVAL

# **Special Tools**

J 41712 Oil Pressure Switch Socket

For equivalent regional tools, refer to **Special Tools**.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

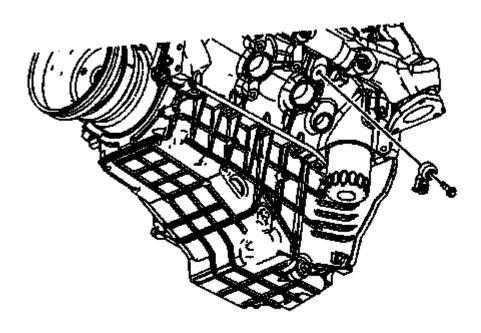


Fig. 412: View Of Knock Sensor & Bolt Courtesy of GENERAL MOTORS COMPANY

WARNING: Refer to Safety Glasses Warning.

1. Remove the knock sensor bolt and knock sensor from the left side of the lower engine block.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


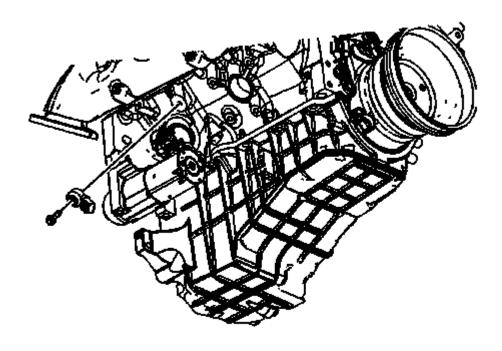


Fig. 413: View Of Knock Sensor & Bolt Courtesy of GENERAL MOTORS COMPANY

2. Remove the knock sensor bolt and knock sensor from the right side of the lower engine block.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

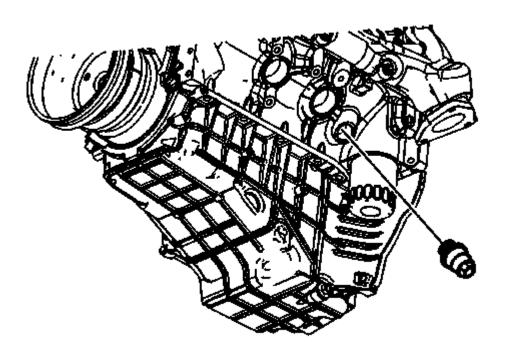

<u>Fig. 414: Block Heater</u> Courtesy of GENERAL MOTORS COMPANY

3. Remove the block heater from the right side of the lower engine block.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


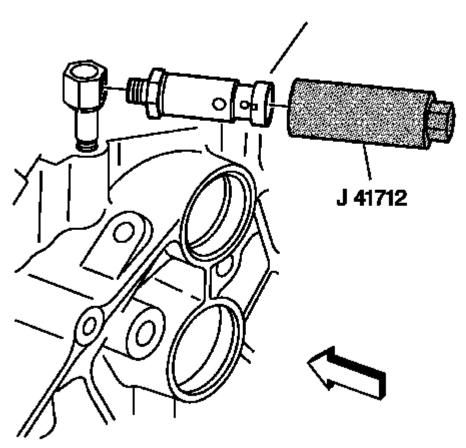


Fig. 415: View Of Engine Oil Pressure Gage Sensor Courtesy of GENERAL MOTORS COMPANY

4. Remove the engine oil pressure gauge sensor using the  ${\bf J}$  41712 socket.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

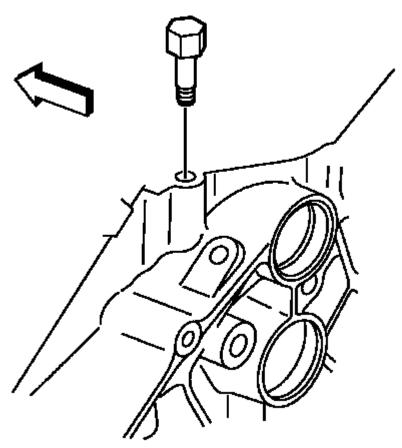

<u>Fig. 416: Engine Oil Pressure Sensor Fitting</u> Courtesy of GENERAL MOTORS COMPANY

5. Remove the engine oil pressure sensor fitting.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

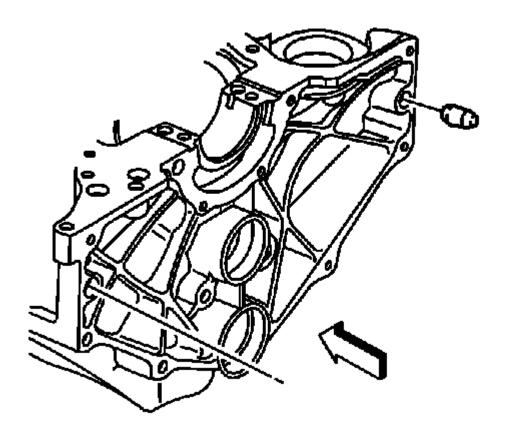


Fig. 417: Identifying Transmission Locator Dowel Straight Pin Courtesy of GENERAL MOTORS COMPANY

6. Remove the transmission locator dowel straight pins, if required.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


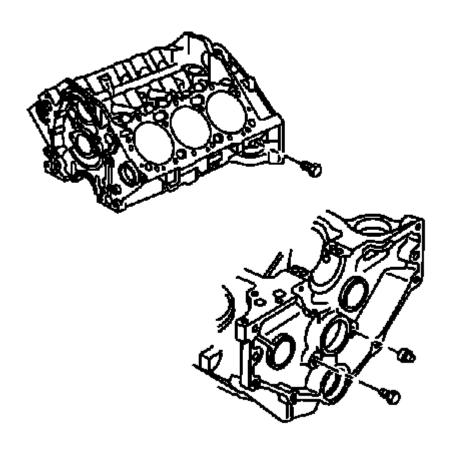


Fig. 418: Engine Block Oil Gallery Plugs Courtesy of GENERAL MOTORS COMPANY

- 7. Remove the engine block left side oil gallery plug.
- 8. Remove the engine block left rear oil gallery plug.
- 9. Remove the engine block right rear oil gallery plug.


2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

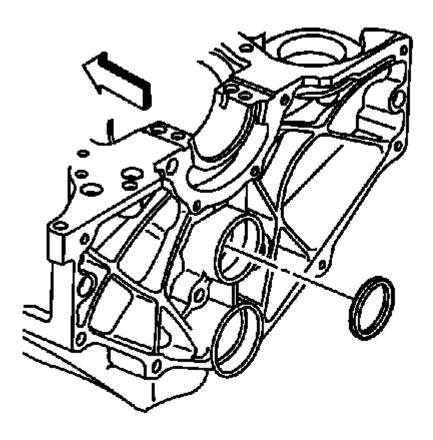

<u>Fig. 419: Identifying Camshaft Rear Bearing Hole Expansion Cup Plug</u> Courtesy of GENERAL MOTORS COMPANY

10. Remove the expansion cup plug from the camshaft rear bearing hole and discard.


2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

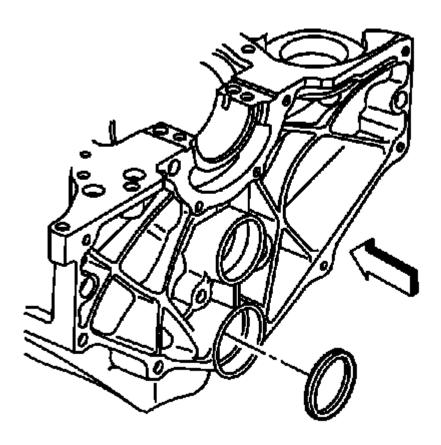

<u>Fig. 420: View Of Balance Shaft Rear Bearing Hole Expansion Cup Plug</u> Courtesy of GENERAL MOTORS COMPANY

11. Remove the expansion cup plug from the balance shaft rear bearing hole and discard.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

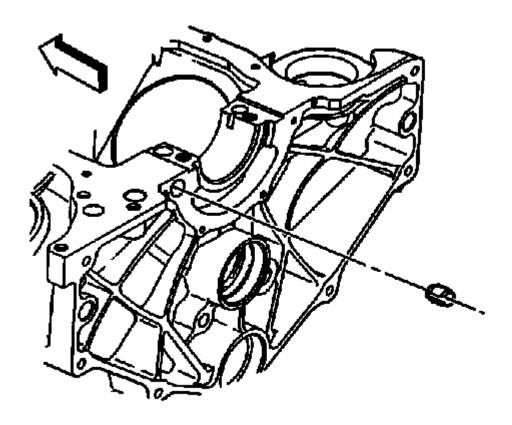

<u>Fig. 421: Locating Crankshaft Rear Oil Seal Housing Locator Spring Type S Pin</u> Courtesy of GENERAL MOTORS COMPANY

12. Remove the crankshaft rear oil seal housing locator spring type S pin, if required.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


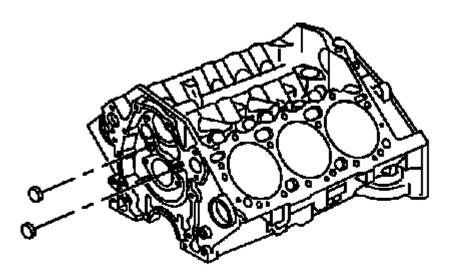


Fig. 422: Front Of Engine Block Front Oil Gallery Plugs Or Balls Courtesy of GENERAL MOTORS COMPANY

13. Remove the front oil gallery plugs or balls from the front of the engine block and discard.

Insert a 3/8 x 26 inch rod into the rear oil gallery holes in order to drive out the front oil gallery plugs or balls.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

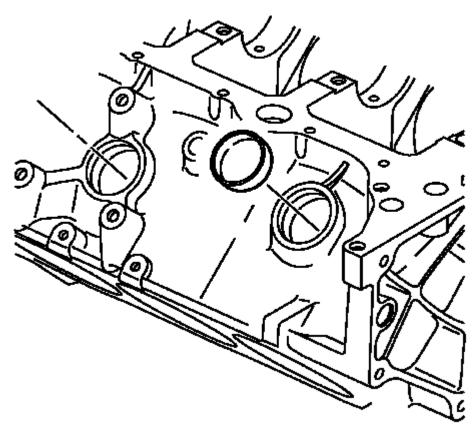

<u>Fig. 423: Engine Block Core Hole Plugs</u> Courtesy of GENERAL MOTORS COMPANY

- 14. Remove the engine block core hole plugs.
  - 1. Use a suitable tool in order to drive the engine block core hole plugs into the coolant jacket.
  - 2. Use a suitable tool in order to pull the engine block core hole plugs from the coolant jacket.
  - 3. Discard the engine block core hole plugs.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

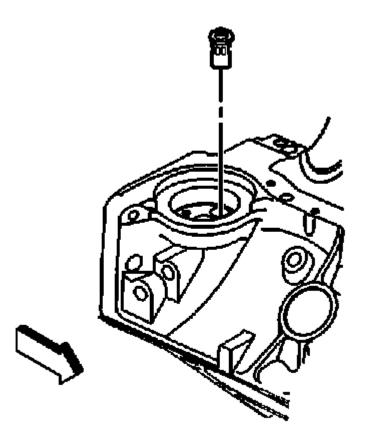


Fig. 424: Identifying Oil Filter Bypass Valve Courtesy of GENERAL MOTORS COMPANY

15. Remove the oil filter bypass valve and discard.

# ENGINE BLOCK CLEANING AND INSPECTION

# **Special Tools**

J 8087 Cylinder Bore Gauge

For equivalent regional tools, refer to **Special Tools**.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

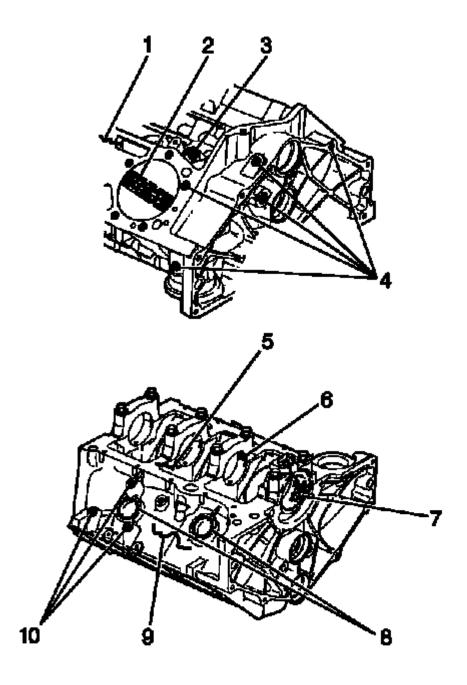


Fig. 425: Engine Inspection Areas
Courtesy of GENERAL MOTORS COMPANY

WARNING: Refer to <u>Safety Glasses Warning</u>.

1. Clean all the remaining sealing or gasket material from the sealing surfaces.


#### 2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- 2. Clean the engine block with cleaning solvent.
- 3. Flush the engine block with clean water or steam.
- 4. Clean the cylinder bores.
- 5. Clean the oil galleries and the oil passages.
- 6. Clean the scale and the deposits from the coolant passages.

CAUTION: Clean all dirt, debris and coolant from the engine block cylinder head bolt holes. Failure to remove all foreign material may result in damaged threads, improperly tightened fasteners or damage to components.

- 7. Clean the engine block cylinder head bolt holes.
- 8. After cleaning the engine block, spray or wipe the cylinder bores and the machined surfaces with clean engine oil.
- 9. Inspect the following areas:
  - Coolant jackets (1) for cracks
  - Cylinder bores (2) for scratches or gouging
  - Valve lifter bores (3) for excessive scoring or wear
  - Threaded holes (4) for damage
  - Crankshaft bearing webs (5) for cracks
  - Crankshaft bearing caps (6) and the crankshaft bearing bores (7) for damage
    - o The crankshaft bearing bores should be round and uniform when measuring the inside diameter (ID).
    - o The surface where the crankshaft bearings contact the crankshaft bearing bore should be smooth.
    - o If a crankshaft bearing cap is damaged and requires replacement, replace the crankshaft bearing cap first, then rebore the engine block crankshaft bearing bores and check for the proper alignment. Finally, check the crankshaft for the proper clearances.
  - Engine block core hole plug bores (8) for damage
  - Engine block (9) for cracks or damage
  - Engine mount bosses (10) for damage

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

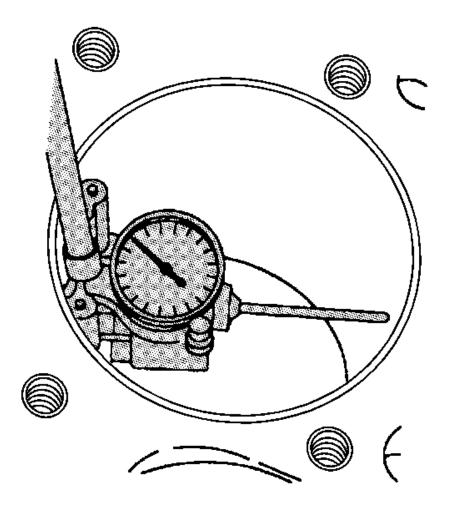


<u>Fig. 426: Measuring Cylinder Bore</u> Courtesy of GENERAL MOTORS COMPANY

- 10. Measure the cylinder bores for taper and out-of-round.
  - 1. Depress the plunger on the **J 8087** gauge to 7 mm (0.275 in) or until the **J 8087** gauge enters the cylinder bore.
  - 2. Center the **J 8087** gauge in the cylinder bore and turn the indicator dial to 0.
  - 3. Move the **J 8087** gauge up and down the cylinder bore to determine the cylinder bore taper. Refer to **Engine Mechanical Specifications**.
  - 4. Turn the **J 8087** gauge to different points around the cylinder bore to determine the cylinder bore out-of-round condition. Refer to **Engine Mechanical Specifications**.

#### CYLINDER BORING AND HONING

#### **Honing Procedure**

# 2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

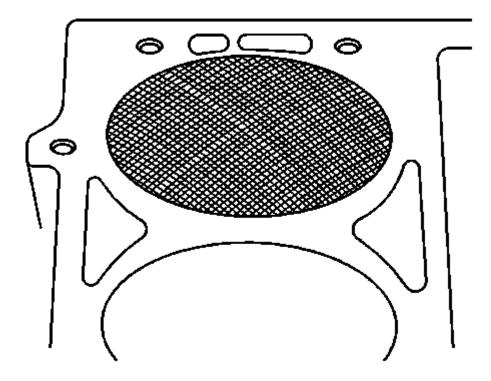

<u>Fig. 427: Identifying Cylinder Bore Cross Hatch Pattern</u> Courtesy of GENERAL MOTORS COMPANY

WARNING: Refer to Safety Glasses Warning.

- 1. When honing the cylinder bores, follow the manufacturer's recommendations for equipment use, cleaning and lubrication.
  - Use only clean sharp stones of the proper grade for the amount of material to be removed.
  - Dull, dirty stones cut unevenly and generate excessive heat.
  - DO NOT hone to a final grade with a coarse or medium-grade stone.
  - Leave sufficient metal so that all the stone marks will be removed with the fine grade stones.
  - Perform the final honing with a fine-grade stone and hone the cylinder bore in a cross hatch pattern at 45-65 degrees to obtain the proper clearance.
- 2. During the honing operation, thoroughly check the cylinder bore.
  - Repeatedly check the cylinder bore fit with the selected piston.
  - All measurements of the piston or cylinder bore should be made with the components at normal room temperature.
- 3. When honing to eliminate taper in the cylinder bore, use full strokes the complete length of the cylinder bore.

#### 2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

Repeatedly check the measurement at the top, the middle and the bottom of the cylinder bore.

- The finish marks should be clean but not sharp.
- The finish marks should be free from imbedded particles or torn or folded metal.
- 4. When finished, the reconditioned cylinder bores should have less than or meet the specified out-of-round and taper requirements.
- 5. After the final honing and before the piston is checked for fit, clean the cylinder bore with hot water and detergent.
  - 1. Scrub the cylinder bores with a stiff bristle brush.
  - 2. Rinse the cylinder bores thoroughly with clean hot water.
  - 3. Dry the cylinder bores with a clean rag.
  - 4. Do not allow any abrasive material to remain in the cylinder bores.
    - Abrasive material may cause premature wear of the new piston rings and the cylinder bores.
    - Abrasive material will contaminate the engine oil and may cause premature wear of the bearings.
- 6. Perform final measurements of the piston and the cylinder bore.
- 7. Permanently mark the top of the piston for the specified cylinder to which it has been fitted.
- 8. Apply clean engine oil to each cylinder bore in order to prevent rusting.

#### **Boring Procedure**

# WARNING: Refer to Safety Glasses Warning.

- 1. Before starting the honing or reboring operation, measure all the new pistons with the micrometer contacting at points exactly 90 degrees from the piston pin centerline.
- 2. File the top of the cylinder block in order to remove any dirt or burrs before using any type of boring bar.
- 3. Follow the instructions furnished by the manufacturer regarding use of the boring equipment.
- 4. When reboring the cylinders, make sure all the crankshaft bearing caps are installed in the original position and direction.
- 5. Tighten the crankshaft bearing caps to the proper torque specifications in order to avoid distortion of the cylinder bores in the final assembly.
- 6. When making the final cut with the boring bar, leave 0.03 mm (0.001 in) on the cylinder bore diameter for finish honing. This gives the required position to the cylinder clearance specifications. Carefully perform the honing and boring operation in order to maintain the specified clearances between the pistons, the piston rings and the cylinder bores.


#### PISTON AND CONNECTING ROD DISASSEMBLE

# **Special Tools**

J 24086-C Piston Pin Remover/Installer

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

For equivalent regional tools, refer to **Special Tools**.

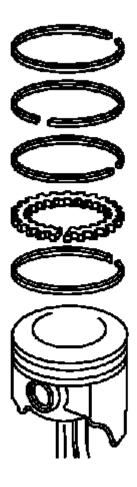


<u>Fig. 428: Exploded View Of Piston Rings</u> Courtesy of GENERAL MOTORS COMPANY

WARNING: Refer to <u>Safety Glasses Warning</u>.

1. Remove the piston rings from the pistons.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

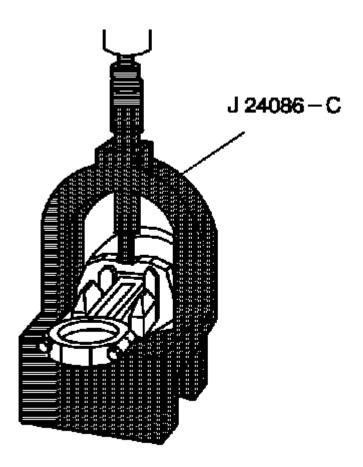

<u>Fig. 429: Identifying J 24086-C</u> Courtesy of GENERAL MOTORS COMPANY

2. Press the piston pin from the connecting rod using the J 24086-C remover/installer.

The piston pin has an interference fit into the connecting rod and is full floating in the piston.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

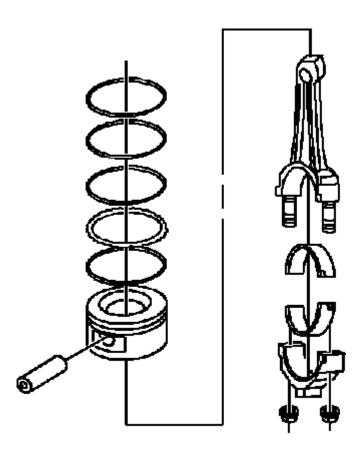


Fig. 430: Piston & Connecting Rod Components Courtesy of GENERAL MOTORS COMPANY

3. Mark, separate and organize the parts for assembly.

# PISTON, CONNECTING ROD AND BEARING CLEANING AND INSPECTION

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

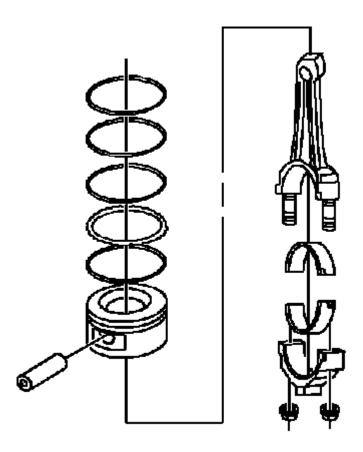


Fig. 431: Piston & Connecting Rod Components Courtesy of GENERAL MOTORS COMPANY

NOTE: Measurement of all components should be taken with the components at

room temperature.


Do not use a wire brush in order to clean any part of the piston.

1. Clean the piston and connecting rod in solvent.

WARNING: Refer to Safety Glasses Warning .

2. Dry the components with compressed air.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

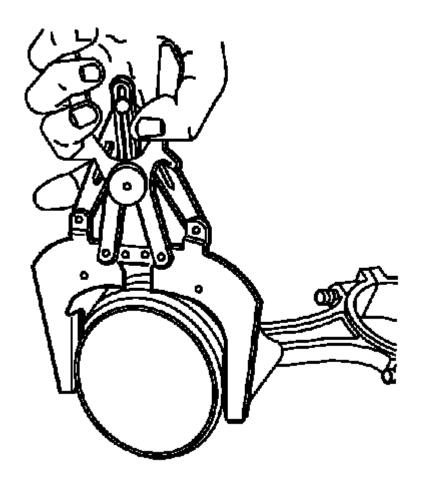

<u>Fig. 432: Cleaning Piston Ring Grooves</u> Courtesy of GENERAL MOTORS COMPANY

3. Clean the piston ring grooves with a suitable ring groove cleaning tool.

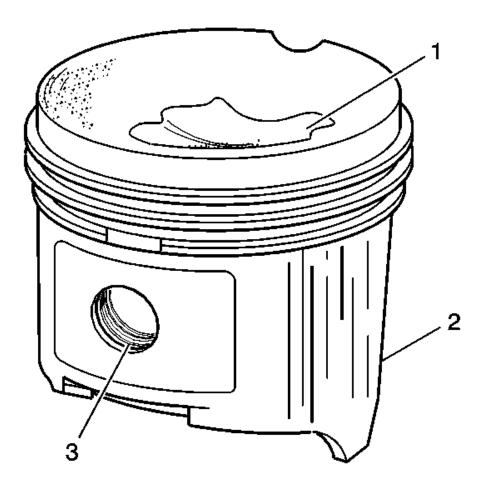


Fig. 433: Identifying Piston Damage Inspection Areas Courtesy of GENERAL MOTORS COMPANY

- 4. Clean the piston oil lubrication holes and slots.
- 5. Inspect the piston for the following:
  - Eroded areas (1) on the top of the piston
  - Scuffed or damaged skirt (2)
  - Damage to the pin bore (3)
  - Cracks in the piston ring lands, the piston skirt or the pin bosses
  - Piston ring grooves for nicks, burrs or other warpage which may cause the piston ring to bind
- 6. Inspect the piston pin for scoring, wear or other damage.

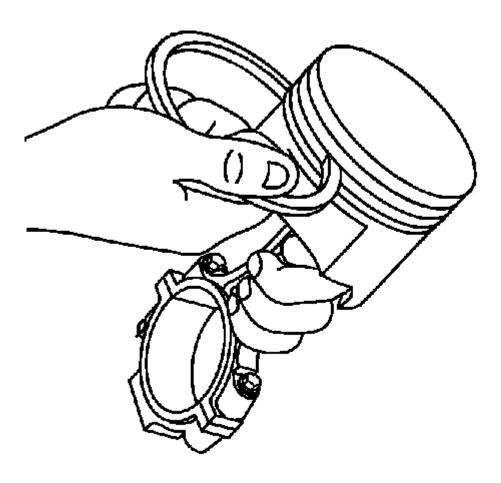


Fig. 434: Inserting Piston Ring Into Ring Groove Courtesy of GENERAL MOTORS COMPANY

- 7. Measure the piston ring-to-piston ring groove side clearance.
  - 1. Insert the edge of the piston ring into the piston ring groove.
  - 2. Roll the piston ring completely around the piston.
    - If binding is caused by a distorted piston ring groove, MINOR imperfections may be removed with a fine file.
    - If binding is caused by a distorted piston ring, replace the piston ring.

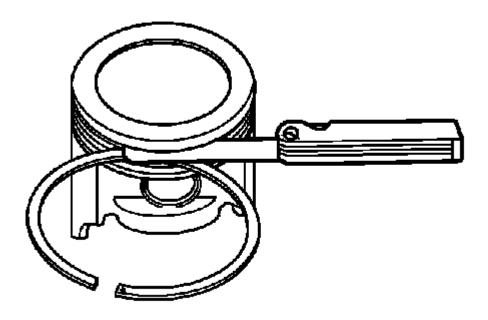


Fig. 435: Measuring Piston Ring Side Clearance Courtesy of GENERAL MOTORS COMPANY

- 8. Measure the piston ring side clearance with a feeler gauge.
- 9. If the side clearance is too small, try another piston ring set.
- 10. If the proper piston ring-to-piston ring groove clearance cannot be achieved, replace the piston and pin assembly.
- 11. To determine the proper piston ring side clearance, refer to **Engine Mechanical Specifications**.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

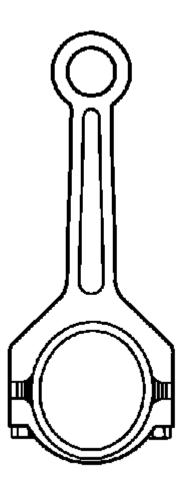


Fig. 436: View Of Connecting Rod Courtesy of GENERAL MOTORS COMPANY

12. Inspect the connecting rod for an out-of-round bearing bore. Refer to **Engine Mechanical Specifications**.

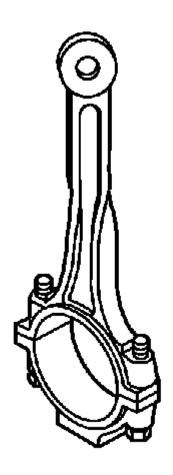


Fig. 437: Identifying Twisted Connecting Rod Courtesy of GENERAL MOTORS COMPANY

- 13. Inspect the connecting rod for twisting.
- 14. Inspect the connecting rod for damage to the bearing cap and bolt threads.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

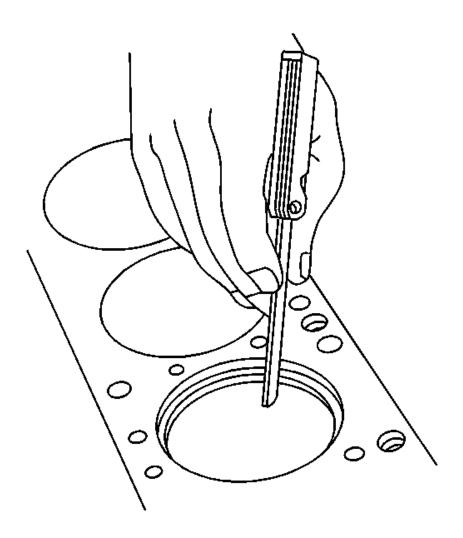


Fig. 438: Measuring Piston Ring End Gap Courtesy of GENERAL MOTORS COMPANY

15. Measure the piston compression ring end gap.

# NOTE: Fit each compression ring to the cylinder in which it will be used.

- 1. Place the compression ring into the cylinder bore.
- 2. Push the compression ring into the cylinder bore to approximately 6.5 mm (0.25 in) above the ring travel.

The ring must be square to the cylinder wall.

- 3. Use a feeler gauge in order to measure the end gap.
- 4. Select another size ring set if the end gap exceeds specifications. Refer to **Engine Mechanical Specifications**.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

#### PISTON AND CONNECTING ROD ASSEMBLE

# **Special Tools**

J 24086-C Piston Pin Remover/Installer

For equivalent regional tools, refer to **Special Tools**.

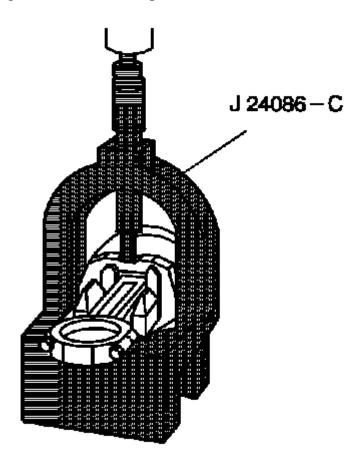


Fig. 439: Removing/Installing Piston Pin
Courtesy of GENERAL MOTORS COMPANY

WARNING: Avoid contact with HOT components. Wear safety glasses and protective gloves to avoid personal injury.

CAUTION: Applying excessive heat to the connecting rod may damage or distort the rod. Rod temperature SHOULD NOT exceed 315°C (600°F). At this temperature the end of the connecting rod will turn a straw color upon visual inspection.

CAUTION: After the J 24086-C installer hub bottoms on the support assembly,

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

DO NOT exceed 35, 000 kPa (5, 000 psi) or the tool may be damaged.


NOTE:

When assembling the piston and connecting rod, the mark on the top of the piston must point to the front of the engine block. The left bank connecting rods should have the flange face toward the front of the engine block. The right bank connecting rods should have the flange face toward the rear of the engine block.

The new piston pin has an interference fit into the connecting rod and is full floating in the piston.

- 1. Install the new piston pin and connecting rod assembly.
  - 1. Lubricate the piston pin bores with clean engine oil.
  - 2. Use a torch and apply MILD heat to the piston pin end of the connecting rod.
  - 3. Use the **J 24086-**C remover/installer in order to press the new piston pin into the piston and connecting rod assembly.
  - 4. Inspect for the proper installation of the piston and piston pin.

The piston must move freely on the new piston pin with no binding or interference.

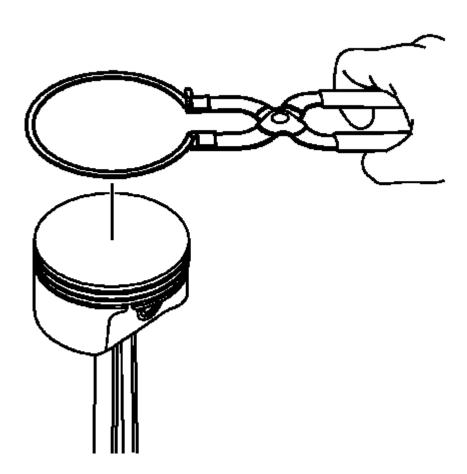

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

# Fig. 440: Removing/Installing Piston Rings Courtesy of GENERAL MOTORS COMPANY

CAUTION: Use a piston ring expander to install the piston rings. The rings may be damaged if expanded more than necessary.

- 2. Install the piston rings onto the piston.
  - 1. Install the oil control piston ring spacer.
  - 2. Install the lower oil control piston ring.
  - 3. Install the upper oil control piston ring.
  - 4. Install the lower compression piston ring.

The mark on the side of the piston ring should face the top of the piston.

5. Install the upper compression piston ring.

The mark on the side of the piston ring should face the top of the piston.

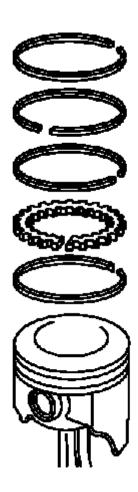


Fig. 441: Exploded View Of Piston Rings

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

# **Courtesy of GENERAL MOTORS COMPANY**

- 3. Space the compression piston ring end gaps 120 degrees apart.
- 4. Space the oil control piston ring end gaps a minimum of 90 degrees apart.

# CRANKSHAFT AND BEARING CLEANING AND INSPECTION

# **Special Tools**

- J 7872 Magnetic Base Dial Indicator
- **J 45059** Angle Meter
- J 43690 Rod Bearing Clearance Checking Tool

For equivalent regional tools, refer to **Special Tools**.

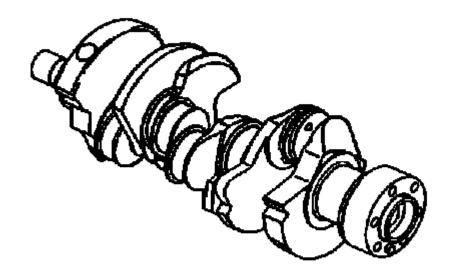


Fig. 442: Crankshaft
Courtesy of GENERAL MOTORS COMPANY

WARNING: Refer to Safety Glasses Warning.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

# NOTE: Use care when handling the crankshaft. Avoid damage to the crankshaft bearing surfaces.

- 1. Clean the crankshaft in cleaning solvent. Remove all sludge or restrictions from the oil passages.
- 2. Dry the crankshaft with compressed air.

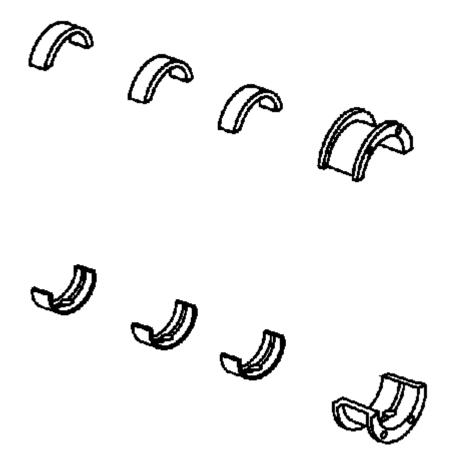


Fig. 443: Crankshaft Bearings Courtesy of GENERAL MOTORS COMPANY

- 3. Clean the crankshaft bearings in cleaning solvent. Wipe the crankshaft bearings clean with a soft cloth, do not scratch the crankshaft bearing surfaces.
- 4. Dry the crankshaft bearings with compressed air.


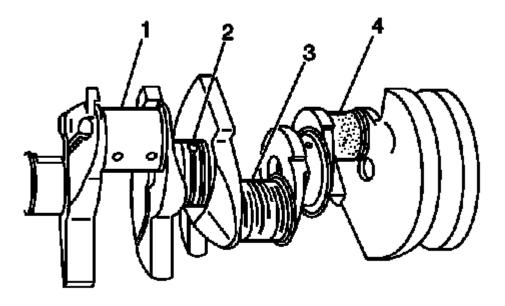


Fig. 444: Identifying Different Crankshaft Journal Wear Patterns Courtesy of GENERAL MOTORS COMPANY

- 5. Inspect the crankshaft for the following:
  - Crankshaft journals (1) should be smooth with no evidence of scoring or damage.
  - Deep grooves (2)
  - Scratches or uneven wear (3)
  - Pitted surfaces (4)
  - Wear or damage to the thrust journal surfaces
  - Scoring or damage to the rear seal surface
  - Restrictions to the oil passages
  - Damage to the threaded bolt holes

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

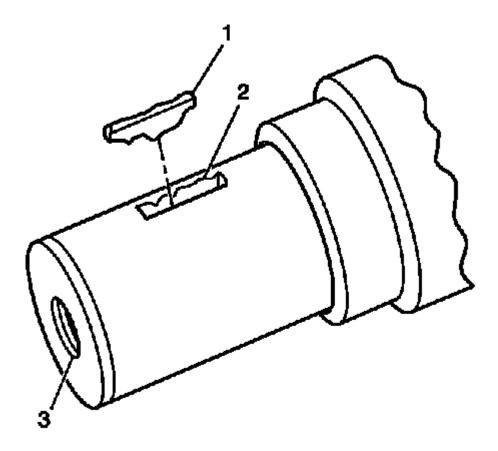


<u>Fig. 445: Crankshaft Balancer Key, Keyway & Threaded Hole</u> Courtesy of GENERAL MOTORS COMPANY

6. Inspect the crankshaft balancer key (1), the keyway (2) and the threaded hole (3) for damage.

Repair or replace the crankshaft as necessary.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

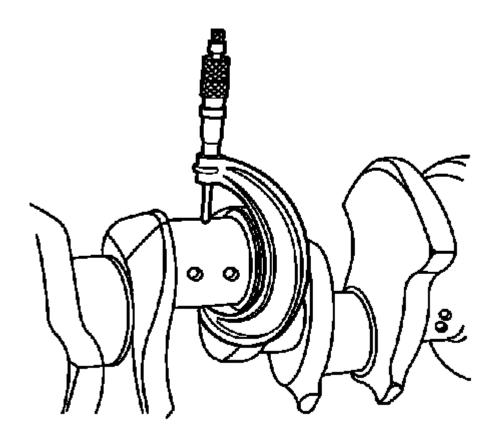

<u>Fig. 446: Measuring Crankpins For Out-Of-Round & Taper</u> Courtesy of GENERAL MOTORS COMPANY

7. Measure the crankpins for out-of-round and taper. Refer to **Engine Mechanical Specifications**.

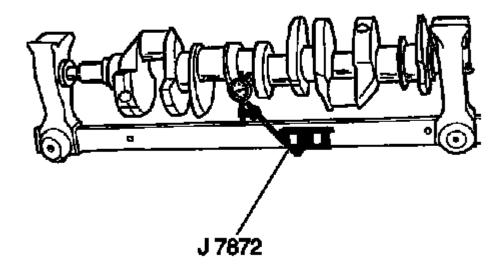


Fig. 447: Measuring Crankshaft Runout Courtesy of GENERAL MOTORS COMPANY

- 8. Use a suitable support to support the crankshaft on the front and rear journals.
- 9. Use the **J 7872** indicator in order to measure the crankshaft journal runout. The proper crankshaft journal runout is 0.025 mm maximum (0.0010 in maximum).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

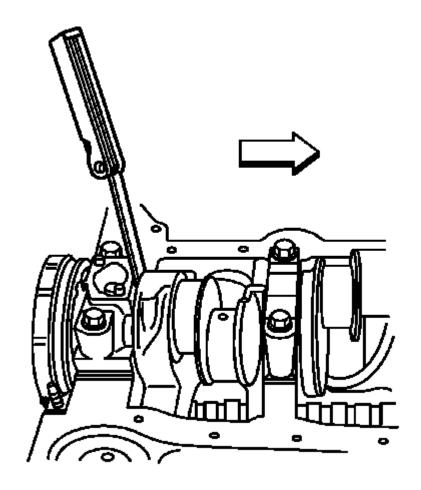


Fig. 448: Measuring Crankshaft End Play Courtesy of GENERAL MOTORS COMPANY

#### 10. Measure the crankshaft end play.

#### NOTE:

In order to properly measure the crankshaft end play, the crankshaft, the crankshaft bearings, the crankshaft bearing caps and the crankshaft bearing cap bolts must be installed into the engine block and the bolts tightened using J 45059 meter. The proper crankshaft bearing cap bolt tightening specification first pass is 20 N.m (15 lb ft), final pass is 73 degrees.

- 1. Firmly thrust the crankshaft first rearward, then forward. This will align the crankshaft rear bearings and the crankshaft thrust surfaces.
- 2. With the crankshaft pushed forward, insert a feeler gauge between the crankshaft and the crankshaft bearing surface and then measure the clearance. The proper crankshaft end play clearance specification is 0.050-0.20 mm (0.002-0.008 in).
- 3. Turn the crankshaft to check for binding. If the crankshaft does not turn freely, then loosen the crankshaft bearing cap bolts, one crankshaft bearing cap at a time, until the tight crankshaft bearing is located.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

Burrs on the crankshaft bearing cap or engine block, foreign matter between the crankshaft bearing and the crankshaft bearing cap or the engine block or a faulty crankshaft bearing could cause a lack of clearance between the crankshaft and crankshaft bearing.


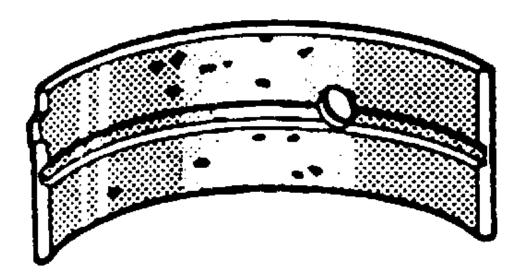


Fig. 449: Identifying Crankshaft Bearing Craters Or Pockets Courtesy of GENERAL MOTORS COMPANY


11. Inspect the crankshaft bearings for craters or pockets. Flattened sections on the crankshaft bearing halves also indicate fatigue.

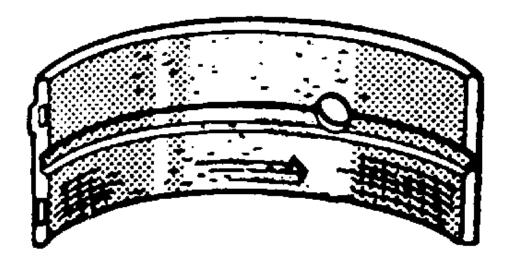

<u>Fig. 450: Identifying Connecting Rod Bearing Scoring Or Discoloration</u> Courtesy of GENERAL MOTORS COMPANY

- 12. Inspect the crankshaft bearings for excessive scoring or discoloration.
- 13. Inspect the crankshaft bearings for dirt or debris imbedded into the crankshaft bearing material.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

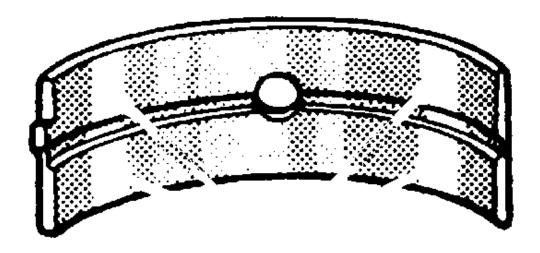

# Fig. 451: View Of Improper Seating Courtesy of GENERAL MOTORS COMPANY

- 14. Inspect the crankshaft bearings for improper seating indicated by bright, polished sections of the crankshaft bearings.
  - If the lower half of the crankshaft bearing is worn or damaged, both the upper and lower halves of the crankshaft bearing should be replaced.
  - Generally, if the lower half of the crankshaft bearing is suitable for use, the upper half of the crankshaft bearing should also be suitable for use.


#### **Measuring Crankshaft Bearing Clearances**

• The crankshaft bearings are of the precision insert type and do not use shims for adjustment. If the clearances are excessive, then new upper and lower crankshaft bearings will be required. The service crankshaft bearings are available in the standard size and an undersize.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- The selective fitting of the crankshaft bearings are necessary in production in order to obtain close tolerances. For this reason, in one journal bore you may use one-half of a standard crankshaft bearing with one-half of an undersize crankshaft bearing.
- In order to determine the correct replacement bearing size, the bearing clearance must be measured accurately. When checking main bearing clearances, either the micrometer or plastic gauge method may be used; however, the micrometer method gives more reliable results and is preferred. When checking connecting rod bearing clearances, the plastic gauge method will result in unreliable measurements. The use of **J** 43690 tool is preferred.
- Normally the crankshaft bearing journals wear evenly and are not out-of-round. However, if a crankshaft bearing is being fitted to an out-of-round crankshaft bearing journal, be sure to fit to the maximum diameter of the crankshaft bearing journal. If the crankshaft bearing is fitted to the minimum diameter and the crankshaft bearing journal is excessively out-of-round, the interference between the crankshaft bearing and the crankshaft bearing journal will result in rapid crankshaft bearing failure.
- If the crankshaft bearing clearance is within specifications, the crankshaft bearing is satisfactory. If the clearance is not within specifications, replace the crankshaft bearing. Always replace both the upper and lower crankshaft bearings as a set.
- A standard or undersize crankshaft bearing combination may result in the proper clearance. If the proper crankshaft bearing clearance cannot be achieved using the standard or the undersize crankshaft bearings, it may be necessary to repair or replace the crankshaft.

Measuring Crankshaft Bearing Clearances - Micrometer Method

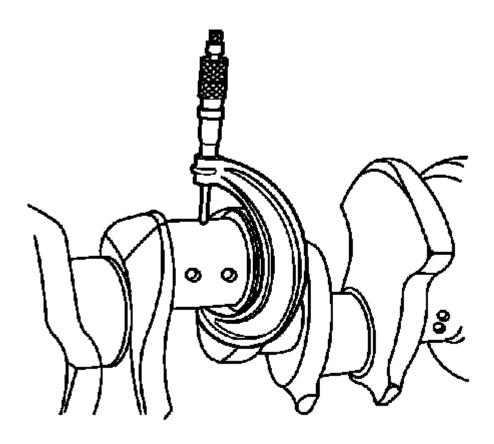

<u>Fig. 452: Measuring Crankpins For Out-Of-Round & Taper</u> Courtesy of GENERAL MOTORS COMPANY

- 1. Measure the crankshaft journal diameter with a micrometer in several places, approximately 90 degrees apart. Average the measurements.
- 2. Determine the taper and out-of-round of the journal. Refer to **Engine Mechanical Specifications**.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


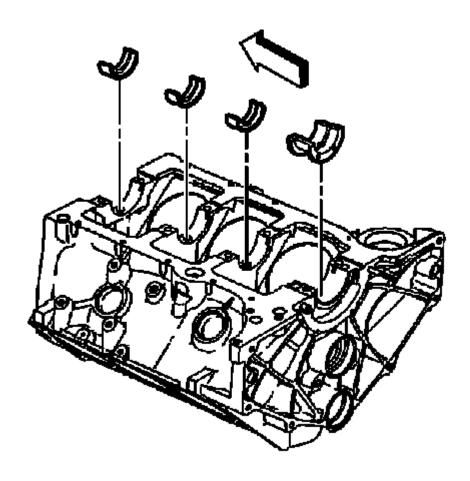


Fig. 453: View Of Crankshaft Bearings At Engine Block Courtesy of GENERAL MOTORS COMPANY

3. Install the bearings into the engine block or connecting rod assembly.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

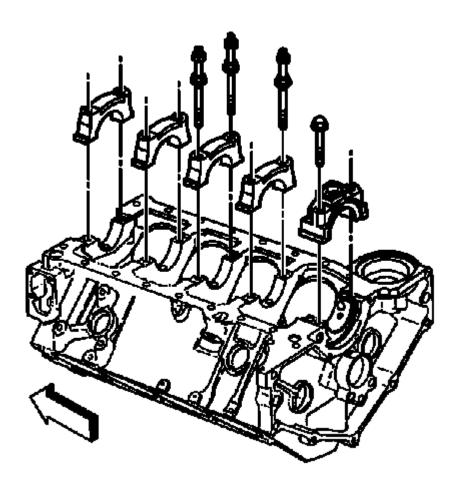

<u>Fig. 454: Bearing Cap Bolts</u> Courtesy of GENERAL MOTORS COMPANY

- 4. Install the bearing cap bolts and tighten to specifications. Refer to **Fastener Tightening Specifications**.
- 5. Measure the bearing inside diameter (ID) at two points 90 degrees apart. Average the measurements.
- 6. In order to determine the bearing clearance, subtract the average journal diameter from the average bearing inside diameter.
- 7. Compare the readings to specifications. Refer to **Engine Mechanical Specifications**.
- 8. Replace bearing halves as required to obtain the proper bearing clearances.

# Measuring Connecting Rod Bearing Clearances - J 43690 Method

- 1. Remove the oil pan and other necessary components to gain access to the connecting rods. Remove the oil pump, screen and deflector, when applicable.
- 2. Rotate the crankshaft until the crankshaft journal/connecting rod to be measured is in the 10 o'clock position.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

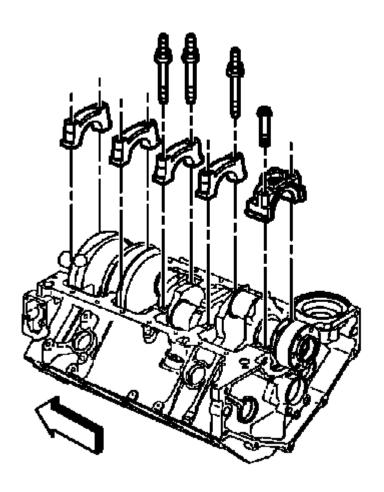


Fig. 455: Bearing Cap Bolts, Cap & Bearing Half Courtesy of GENERAL MOTORS COMPANY

NOTE:

The crankshaft must be secure with no movement or rotation in order to obtain an accurate reading. Remove an intermediate bearing cap, as required, in order to secure the crankshaft and allow measurement of connecting rod bearing clearances.

3. Remove the bearing cap bolts, cap and bearing half.

**CAUTION: Refer to Fastener Caution.** 

4. Insert a piece of paper card stock onto the crankshaft journal. Install the bearing half, bearing cap and bolts. Refer to **Fastener Tightening Specifications**.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

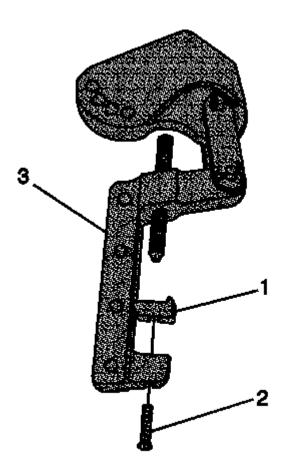


Fig. 456: Pivot Arm Assembly Foot & Bolt Courtesy of GENERAL MOTORS COMPANY

5. Install the foot (1) and bolt (2) to the pivot arm assembly (3). Tighten the bolt until snug.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

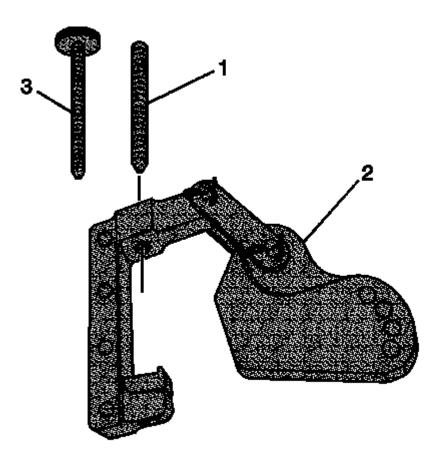


Fig. 457: Pivot Arm Assembly Screw
Courtesy of GENERAL MOTORS COMPANY

6. Install the screw (1 or 3) to the pivot arm assembly (2).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

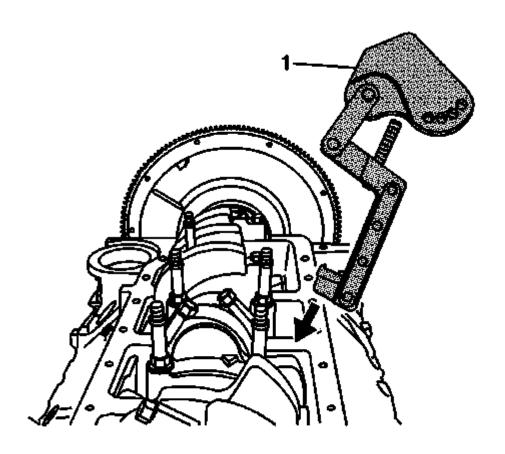


Fig. 458: Pivot Arm Assembly & Connecting Rod Courtesy of GENERAL MOTORS COMPANY

7. Install the pivot arm assembly (1) onto the connecting rod.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


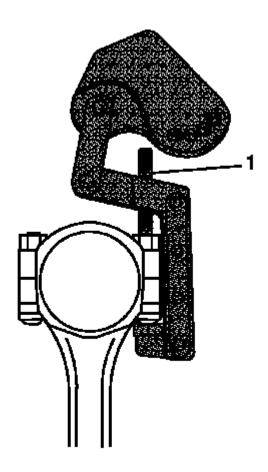


Fig. 459: Small End Of Connecting Rod Bolt Screw Courtesy of GENERAL MOTORS COMPANY

- 8. Position the foot of the pivot arm assembly over the large end of the connecting rod bolt.
- 9. Position the screw (1) onto the small end of the connecting rod bolt and tighten securely.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

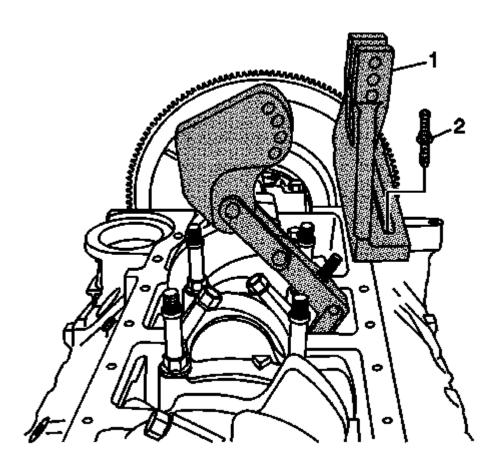

<u>Fig. 460: Oil Pan Rail Base & Bolt</u> Courtesy of GENERAL MOTORS COMPANY

10. Install the base (1) and bolt (2) to the oil pan rail.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

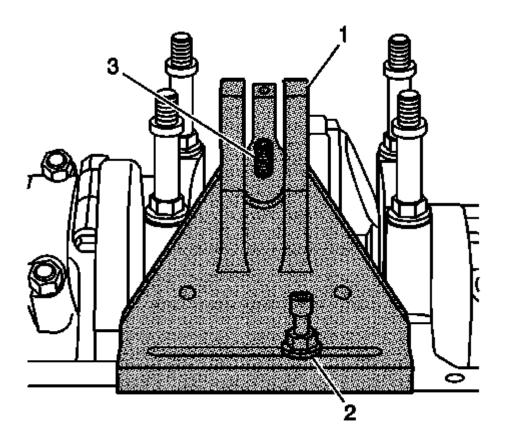


Fig. 461: Aligning Center Of Base W/Pivot Arm Assembly Screw Courtesy of GENERAL MOTORS COMPANY

11. Align the center of the base (1) with the screw (3) of the pivot arm assembly. Tighten the bolt (2) until snug.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

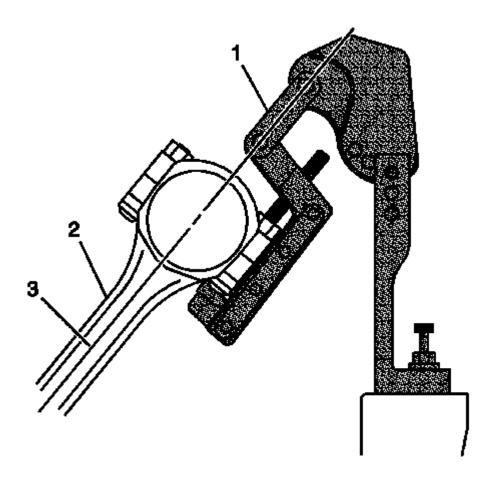


Fig. 462: Pivot Arm Assembly Link, Plane & Connecting Rod Beam Courtesy of GENERAL MOTORS COMPANY

12. Align the link (1) of the pivot arm assembly on a plane (3) equal to that of the connecting rod beam (2).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

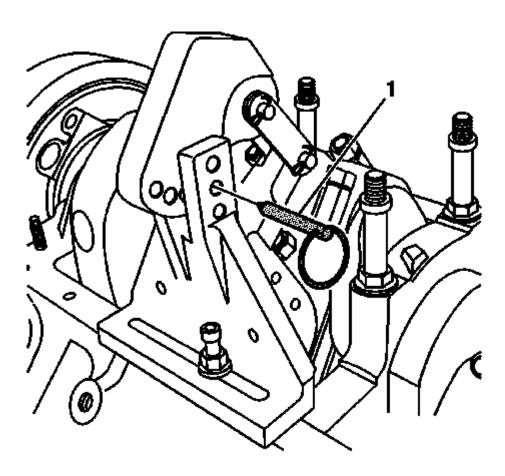


Fig. 463: Inserting Pin Courtesy of GENERAL MOTORS COMPANY

13. With the link of the pivot arm assembly aligned to the beam of the connecting rod, position the pivot arm to the base and insert the pin (1).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


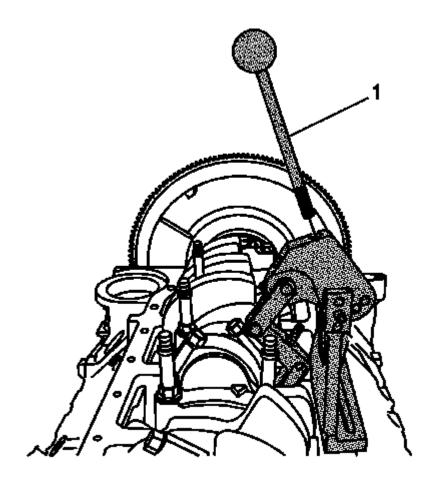


Fig. 464: Pivot Arm Assembly Handle Courtesy of GENERAL MOTORS COMPANY

14. Insert the handle (1) to the pivot arm assembly.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

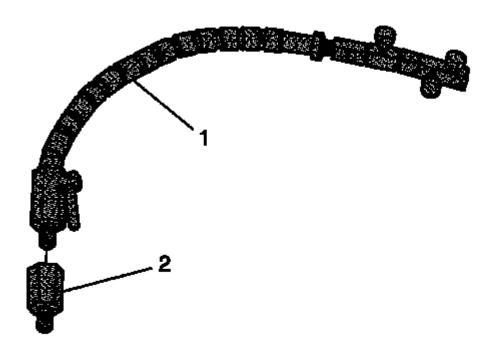

<u>Fig. 465: View Of Adapter & Swivel Base</u> Courtesy of GENERAL MOTORS COMPANY

15. Select the adapter (2), as required and install to the swivel base (1). Tighten until snug.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

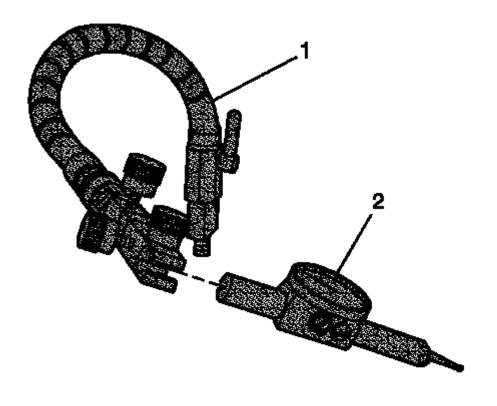


Fig. 466: View Of Swivel Base & Dial Indicator Courtesy of GENERAL MOTORS COMPANY

NOTE: The clamp of the swivel base and the shaft of the indicator should be free of oil or other debris. A loose or improperly clamped indicator may

indicate incorrect readings.

16. Install the indicator (2) to the swivel base (1). Tighten the clamp of the base until snug.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


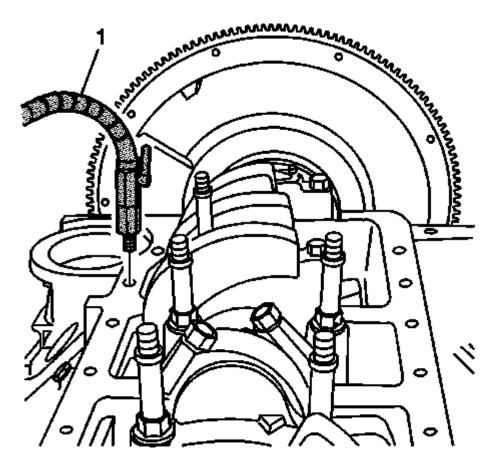


Fig. 467: View Of Swivel Base & Oil Pan Rail Courtesy of GENERAL MOTORS COMPANY

17. Install the swivel base (1) to the oil pan rail of the engine block. Tighten until snug.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

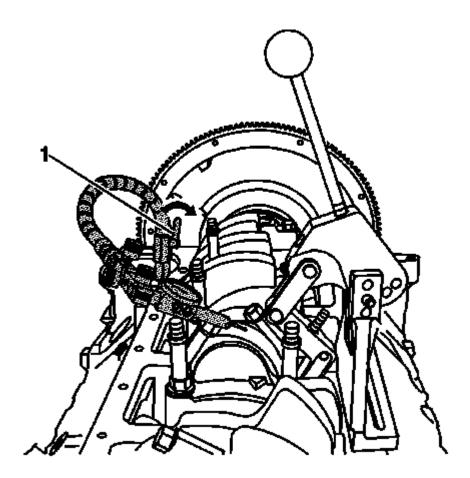

<u>Fig. 468: Swivel Base Locking Lever</u> Courtesy of GENERAL MOTORS COMPANY

18. Adjust the swivel base as required and position the indicator tip slightly above the connecting rod cap. Lock the swivel base in position by rotating the locking lever (1). Do not allow the tip of the indicator to contact the connecting rod at this time.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


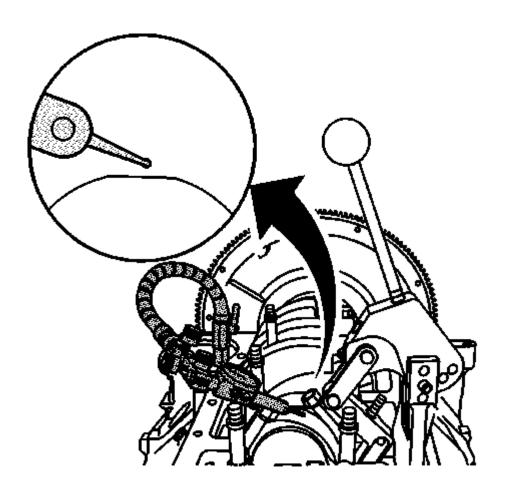


Fig. 469: Proper Indicator Positioning Courtesy of GENERAL MOTORS COMPANY

19. The tip of the indicator should be positioned above and NOT in contact with the cap end of the connecting rod.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

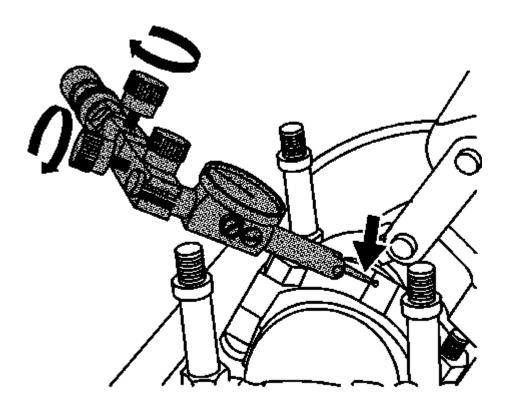

<u>Fig. 470: Swivel Base Fine Adjustment Knobs</u> Courtesy of GENERAL MOTORS COMPANY

20. Rotate the fine adjustment knobs on the dial indicator end of the swivel base to position the tip of the indicator in contact with the connecting rod.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


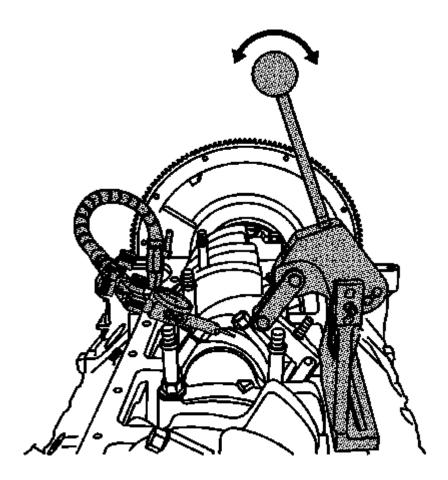


Fig. 471: Actuating Pivot Arm Assembly Handle Courtesy of GENERAL MOTORS COMPANY

21. Lightly actuate the handle of the pivot arm assembly, multiple times in both directions, to ensure the oil film is removed from the journal.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

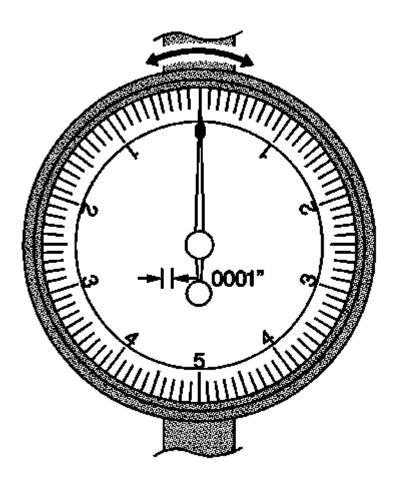

<u>Fig. 472: Dial Indicator</u> Courtesy of GENERAL MOTORS COMPANY

22. Load the handle in the forward position and zero the dial indicator. Load the handle multiple times in both directions and record the reading.

NOTE: During this procedure, card stock may enter the crankshaft journal oil galleries. Be sure to remove all card stock from the bearing journal and oil galleries prior to reassembly.

- 23. Remove the bearing cap bolts, cap and paper stock.
- 24. Replace bearing halves as required to obtain the proper bearing clearances.
- 25. Install the bearings, cap and bolts. Refer to **Fastener Tightening Specifications**.

Measuring Crankshaft Bearing Clearances - Plastic Gauge Method

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

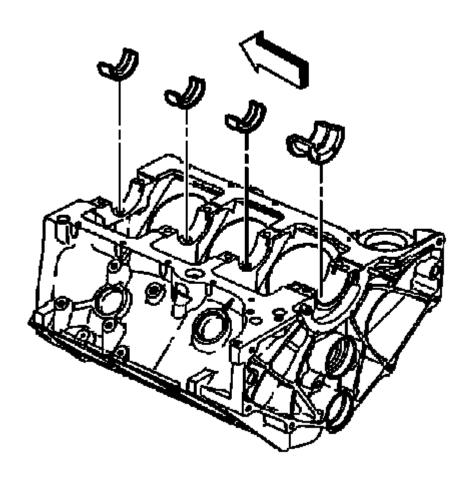


Fig. 473: View Of Crankshaft Bearings At Engine Block Courtesy of GENERAL MOTORS COMPANY

1. Install the crankshaft bearings into the engine block.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

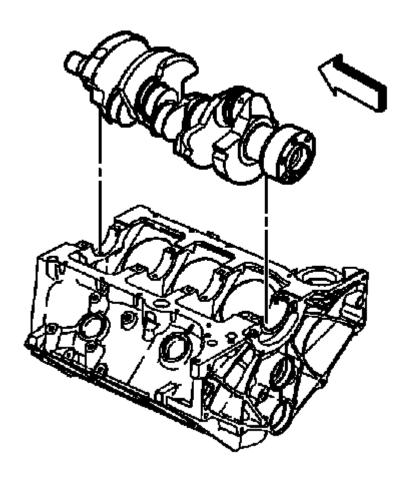


Fig. 474: View Of Crankshaft
Courtesy of GENERAL MOTORS COMPANY

2. Install the crankshaft.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


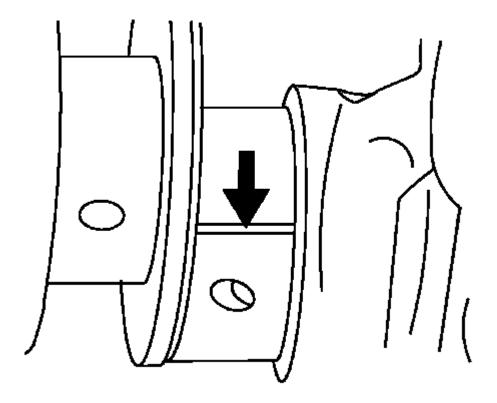


Fig. 475: View Of Plastic Gage Over Crankshaft Journal Courtesy of GENERAL MOTORS COMPANY

3. Install the gaging plastic the full width of the journal.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

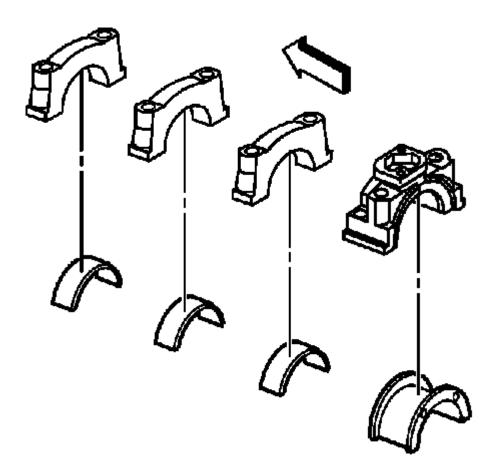

<u>Fig. 476: View Of Crankshaft Bearings & Crankshaft Bearing Caps</u> Courtesy of GENERAL MOTORS COMPANY

4. Install the crankshaft bearings into the crankshaft bearing caps.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

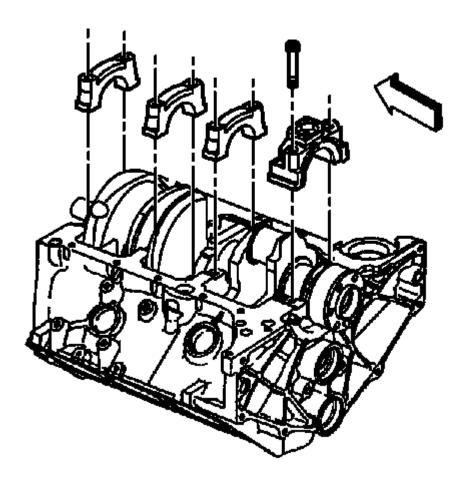



Fig. 477: Crankshaft Bearing Caps Courtesy of GENERAL MOTORS COMPANY

5. Install the crankshaft bearing caps in the original positions and with the arrow on the crankshaft bearing caps in the direction of the front of the engine block.

# **CAUTION: Refer to Fastener Caution.**

- 6. Install the crankshaft bearing cap bolts and tighten to 105 N.m (77 lb ft).
- 7. Remove the crankshaft bearing cap bolts.
- 8. Remove the crankshaft bearing caps. The gaging plastic may adhere to either the crankshaft bearing journal or the crankshaft bearing surface.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

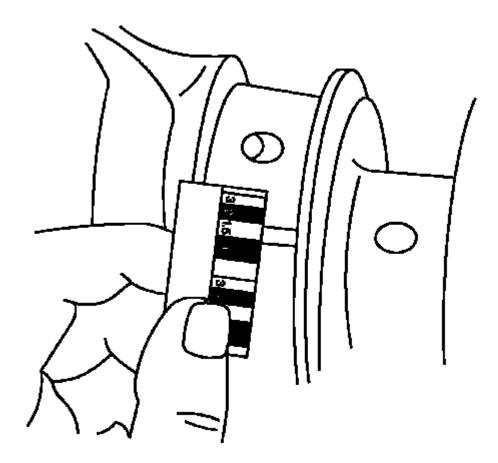

<u>Fig. 478: Measuring Compressed Width</u> Courtesy of GENERAL MOTORS COMPANY

9. Without removing the gaging plastic, measure the compressed width at the widest point using the graduated scale on the edge of the gaging plastic envelope.

If the flattened gaging plastic tapers toward the middle or the ends, there may be a difference in clearance indicating taper, low spot or other irregularity of the crankshaft bearing or the crankshaft bearing journal.

- 10. Remove the flattened gaging plastic.
- 11. Measure the remaining crankshaft bearing journals.

Measuring Connecting Rod Bearing Side Clearance

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

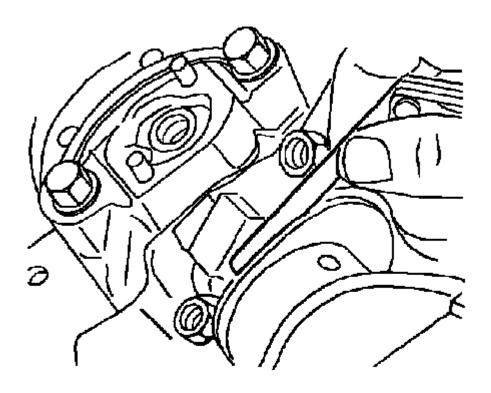


Fig. 479: Measuring Connecting Rod Side Clearance Courtesy of GENERAL MOTORS COMPANY

- 1. Insert a feeler gauge between the connecting rod caps and measure the connecting rod side clearance. The proper connecting rod side clearance specification is 0.15-0.44 mm (0.006-0.017 in).
- 2. Connecting rod side clearances may also be measured with a dial indicator set.

## CRANKSHAFT BALANCER CLEANING AND INSPECTION

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

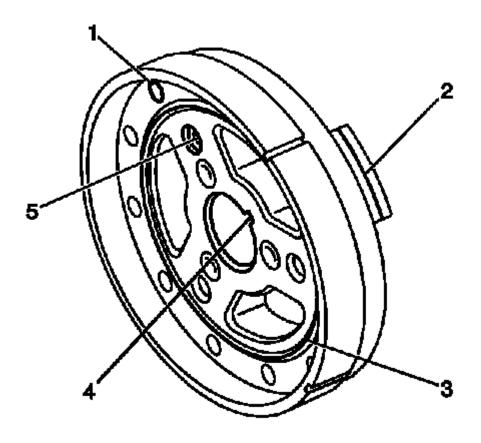


Fig. 480: Crankshaft Balancer Cleaning & Inspection Areas Courtesy of GENERAL MOTORS COMPANY

WARNING: Refer to <u>Safety Glasses Warning</u>.

- 1. Clean the crankshaft balancer in cleaning solvent.
- 2. Dry the crankshaft balancer with compressed air.
- 3. Inspect the crankshaft balancer for the following:
  - Loose or improperly installed crankshaft balancer front groove pin (1)

A properly installed front groove pin should be installed until flush or below flush with the face of the crankshaft balancer.

NOTE: A crankshaft front oil sealing surface with excessive scoring, grooves, rust or other damage must be replaced.

• Worn, grooved or damaged crankshaft front oil sealing surface (2)

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

Minor imperfections on the crankshaft balancer crankshaft front oil seal surface may be removed with a polishing compound or fine grade emery cloth.

- Worn, chunking or deteriorated rubber (3) between the hub and the outer ring
- Worn or damaged keyway (4)
- Worn or damaged bolt hole threads (5)

## ENGINE FLYWHEEL CLEANING AND INSPECTION

NOTE: In order to maintain the proper component balance, contact surface taper and heat transfer, manual transmission flywheels are NOT to be machined.

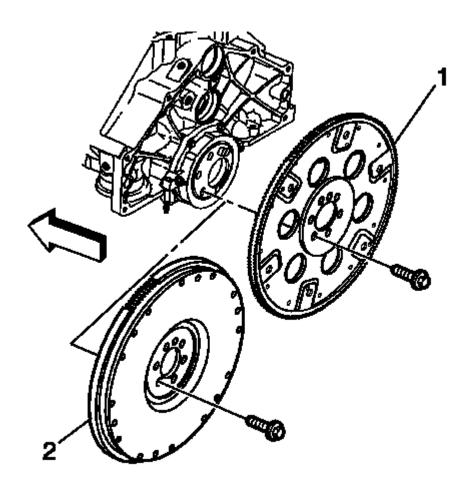


Fig. 481: View Of Flywheels
Courtesy of GENERAL MOTORS COMPANY

WARNING: Refer to Safety Glasses Warning.

1. Clean the engine flywheel (1 or 2) in cleaning solvent.

2. Dry the engine flywheel with compressed air.

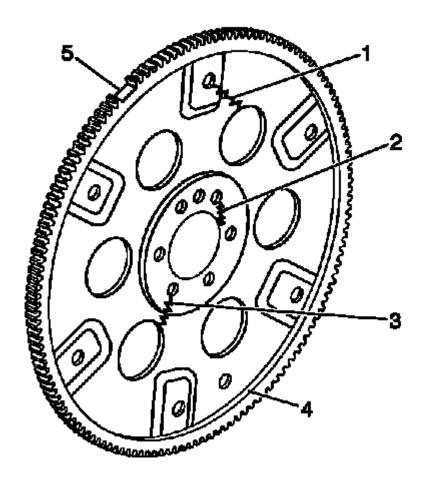


Fig. 482: Flywheel Inspection Areas (Automatic Transmission)
Courtesy of GENERAL MOTORS COMPANY

NOTE: Do not attempt to repair the welded areas, if present, that retain the ring gear to the engine flywheel plate. Always install a NEW engine flywheel.

- 3. Inspect the engine flywheel, automatic transmission, if equipped, for the following:
  - Stress cracks around the engine flywheel-to-torque converter bolt hole locations (1)
  - Missing balance weights
  - Stress cracks around the engine flywheel-to-crankshaft bolt hole locations (2 or 3)
  - Welded areas that retain the ring gear onto the engine flywheel for cracking (4), if present
  - Damaged ring gear teeth (5)

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

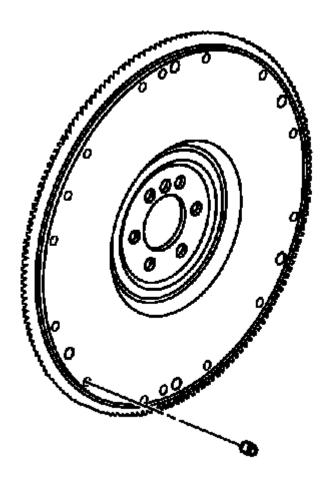


Fig. 483: Locating Flywheel Weights (Manual Transmission)
Courtesy of GENERAL MOTORS COMPANY

4. Inspect the engine flywheel, manual transmission, if equipped, for loose or improperly installed flywheel weights, if applicable.

A properly installed flywheel weight should be installed until flush or below flush with the face of the engine flywheel.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

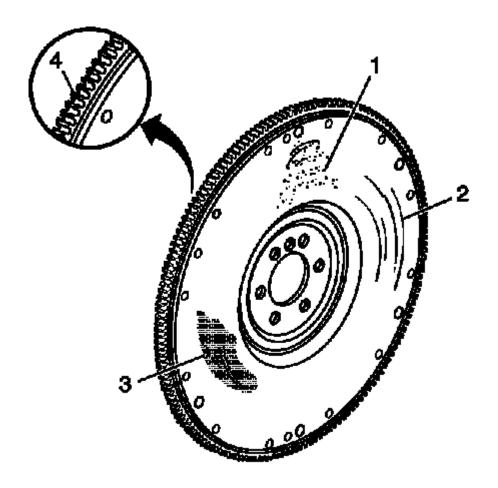


Fig. 484: Flywheel Inspection Areas (Manual Transmission)
Courtesy of GENERAL MOTORS COMPANY

- 5. Inspect the engine flywheel, manual transmission, if equipped, for the following:
  - Pitted friction surface (1)
  - Scoring or grooves (2)
  - Rust or other surface damage (3)
  - Damaged ring gear teeth (4)
  - Loose or improperly positioned ring gear

The ring gear has an interference fit onto the engine flywheel and the ring gear should be positioned completely flat against the flange of the engine flywheel.

## CAMSHAFT AND BEARINGS CLEANING AND INSPECTION

## **Special Tools**

J 7872 Magnetic Base Dial Indicator

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

For equivalent regional tools, refer to **Special Tools**.

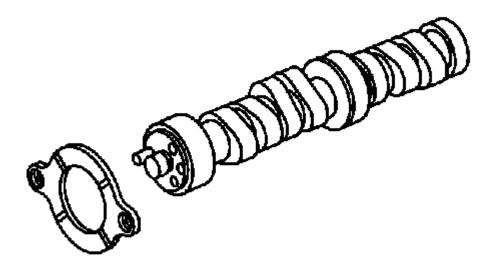


Fig. 485: Camshaft & Retainer Plate
Courtesy of GENERAL MOTORS COMPANY

WARNING: Refer to <u>Safety Glasses Warning</u>.

- 1. Clean the engine camshaft in cleaning solvent.
- 2. Dry the engine camshaft with compressed air.
- 3. Inspect the camshaft retainer plate for damage.

If the camshaft retainer plate is damaged, replace as necessary.


4. Inspect the camshaft bearings for correct fit into the engine block camshaft bearing bores.

The camshaft bearings have an interference fit to the engine block camshaft bearing bores and must not be loose in the engine block camshaft bearing bores.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

NOTE: If any camshaft bearing is excessively worn or scored, replace all the camshaft bearings.

5. Inspect the camshaft bearings for excessive wear or scoring.

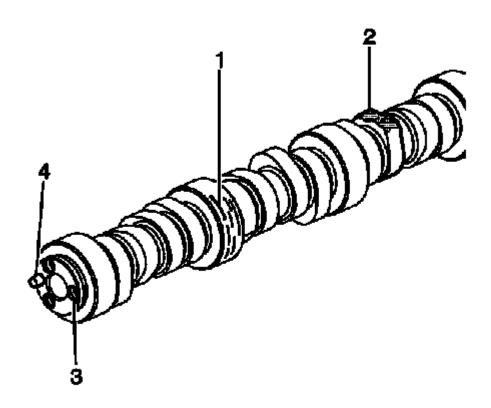

<u>Fig. 486: Camshaft Inspection Areas</u> Courtesy of GENERAL MOTORS COMPANY

- 6. Inspect the engine camshaft for the following:
  - Worn, scored or damaged bearing journals (1)
  - Worn engine camshaft lobes (2)
  - Damaged bolt hole threads (3)
  - Damaged camshaft sprocket locator pin (4)

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


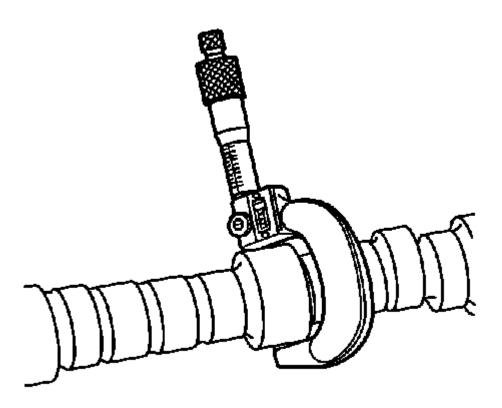


Fig. 487: Measuring Engine Camshaft Journals Courtesy of GENERAL MOTORS COMPANY

7. Measure the engine camshaft journals with a micrometer.

If the camshaft journals are more than  $0.025~\mathrm{mm}$  ( $0.0010~\mathrm{in}$ ) out-of-round, then replace the engine camshaft.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

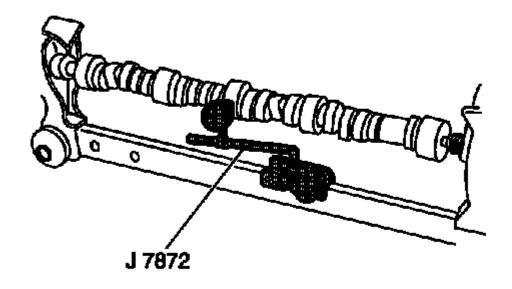

# Fig. 488: Checking Camshaft With J 7872 Courtesy of GENERAL MOTORS COMPANY

- 8. Measure for a bent engine camshaft or excessive engine camshaft runout using the J 7872 indicator.
  - 1. Mount the engine camshaft in a suitable stand between centers.
  - 2. Use the **J 7872** indicator in order to check the intermediate engine camshaft journals.

If the runout exceeds 0.065 mm (0.0026 in), the engine camshaft is bent and must be replaced.


- 9. Measure the engine camshaft lobe lift using the **J 7872** indicator.
  - 1. Place the engine camshaft on the V-blocks.
  - 2. Use the J 7872 indicator in order to measure the engine camshaft lobe lift.
- 10. Replace the engine camshaft if the engine camshaft lobe lift is not within specifications. Refer to **Engine Mechanical Specifications**.

## **CAMSHAFT BEARING REMOVAL**

## **Special Tools**

## J 33049 Camshaft Bearing Service Kit

For equivalent regional tools, refer to **Special Tools**.

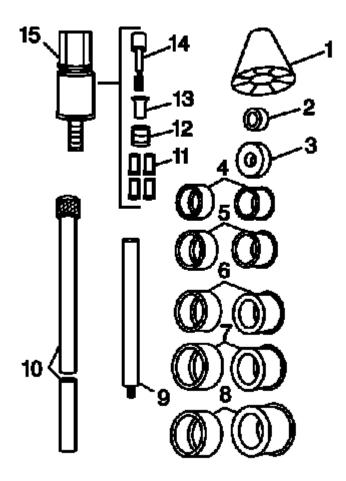

<u>Fig. 489: Camshaft Bearing Service Kit Components</u> Courtesy of GENERAL MOTORS COMPANY

- 1. Select the cone (1), the handle (10), the expanding driver (4-8), the washer (2 or 3) and the expander assembly (15) from the **J 33049** kit.
- 2. Assemble the J 33049 kit.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

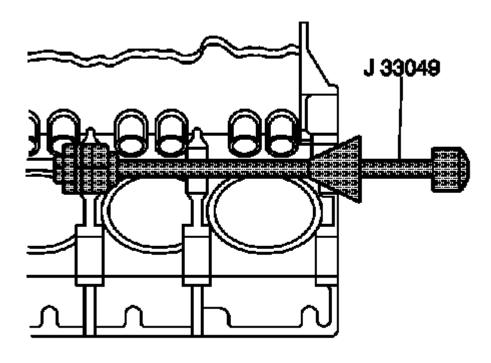


Fig. 490: Removing/Installation Camshaft Inner Bearing Using J 33049 Courtesy of GENERAL MOTORS COMPANY

WARNING: Refer to <u>Safety Glasses Warning</u>.

### NOTE:

- A loose camshaft bearing may be caused by an enlarged, out-ofround or damaged engine block camshaft bearing bore.
- Always remove the camshaft inner bearings #2 and #3 first. The camshaft outer bearings #1 and #4 serve as a guide for the J 33049 kit.
- 3. Remove the camshaft inner bearings #2 and #3.
  - 1. Insert the **J 33049** kit through the front of the engine block and into the camshaft inner bearing #2.
  - 2. Tighten the **J 33049** kit expander assembly nut until snug.
  - 3. Push the J 33049 kit guide cone into the camshaft front bearing in order to align the J 33049 kit.
  - 4. Drive the camshaft inner bearing #2 from the camshaft inner bearing bore #2.
  - 5. Loosen the **J 33049** kit expander assembly nut.

#### 2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- 6. Remove the camshaft inner bearing #2 from the **J 33049** kit expander assembly.
- 7. Insert the **J 33049** kit expander assembly into the camshaft inner bearing #3.
- 8. Tighten the **J 33049** kit expander assembly nut until snug.
- 9. Push the J 33049 kit guide cone into the camshaft front bearing in order to align the J 33049 kit.
- 10. Drive the camshaft inner bearing #3 from the camshaft inner bearing bore #3.
- 11. Loosen the **J 33049** kit expander assembly nut.
- 12. Remove the camshaft inner bearing #3 from the **J 33049** kit expander assembly.
- 4. Remove the **J 33049** kit from the engine block.
- 5. Remove the camshaft outer bearings #1 and #4.
  - 1. Insert the **J 33049** kit into the camshaft outer bearing #1.
  - 2. Tighten the J 33049 kit expander assembly nut until snug.
  - 3. Drive the camshaft outer bearing #1 from the camshaft outer bearing bore #1.
  - 4. Loosen the J 33049 kit expander assembly nut.
  - 5. Remove the camshaft outer bearing #1 from the J 33049 kit expander assembly.
  - 6. Remove the **J 33049** kit from the engine block.
  - 7. Insert the **J 33049** kit into the camshaft outer bearing #4.
  - 8. Tighten the **J 33049** kit expander assembly nut until snug.
  - 9. Drive the camshaft outer bearing #4 from the camshaft outer bearing bore #4.
  - 10. Loosen the J 33049 kit expander assembly nut.
  - 11. Remove the camshaft outer bearing #4 from the **J 33049** kit expander assembly.
- 6. Remove the **J 33049** kit from the engine block.
- 7. Discard the camshaft bearings.

## **CAMSHAFT BEARING INSTALLATION**

#### **Special Tools**

J 33049 Camshaft Bearing Service Kit

For equivalent regional tools, refer to **Special Tools**.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

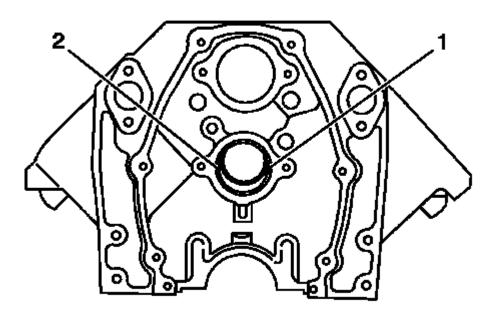


Fig. 491: Locating Camshaft Bearing Lubrication Hole At 3 & 9 O'clock Positions Courtesy of GENERAL MOTORS COMPANY

NOTE:

When installing the camshaft bearings, always look in order to ensure that the camshaft bearing lubrication hole is located above the 3 o'clock position (1) or the 9 o'clock position (2). The proper positioning of the camshaft bearing lubrication hole is in order to ensure the best lubrication of the engine camshaft journals.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

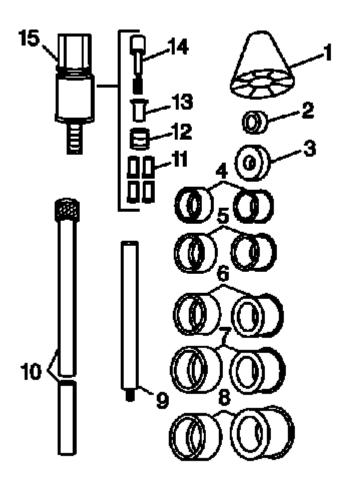


Fig. 492: Camshaft Bearing Service Kit Components Courtesy of GENERAL MOTORS COMPANY

1. Assemble the **J 33049** kit handle (10), the expanding driver (4-8), the washer (2 or 3) and the expander assembly (15).

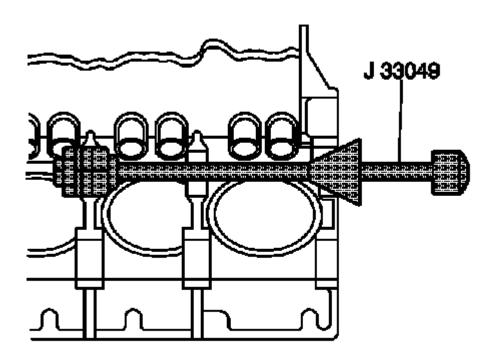


Fig. 493: Removing/Installation Camshaft Inner Bearing Using J 33049 Courtesy of GENERAL MOTORS COMPANY

WARNING: Refer to <u>Safety Glasses Warning</u>.

NOTE:

The camshaft bearings vary in size. When ordering the new camshaft bearings, be sure to order the correct camshaft bearings for the application to be serviced.

Always install the camshaft outer bearings #1 and #4 first. The camshaft outer bearings serve as a guide for the J 33049 kit and help center the camshaft inner bearings during the installation process.

- 2. Install the NEW camshaft outer bearings #4 and #1.
  - 1. Install the NEW camshaft outer bearing #4 onto the **J 33049** kit expander assembly.
  - 2. Tighten the **J 33049** kit expander assembly nut until snug.
  - 3. Align the lubrication hole of the camshaft outer bearing #4 above the 3 o'clock position or the 9 o'clock position of the camshaft outer bearing bore #4 at the rear of the engine block.

#### 2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- 4. Drive the camshaft outer bearing #4 into the camshaft outer bearing bore #4 at the rear of the engine block.
- 5. Loosen the **J 33049** kit expander assembly nut.
- 6. Remove the camshaft outer bearing #4 from the J 33049 kit expander assembly.
- 7. Install the NEW camshaft outer bearing #1 onto the **J 33049** kit expander assembly.
- 8. Tighten the **J 33049** kit expander assembly nut until snug.
- 9. Align the lubrication hole of the camshaft outer bearing #1 above the 3 o'clock position or the 9 o'clock position of the camshaft outer bearing bore #1 at the front of the engine block.
- 10. Drive the camshaft outer bearing #1 into the camshaft outer bearing bore #1 at the front of the engine block.
- 11. Loosen the J 33049 kit expander assembly nut.
- 12. Carefully slide the **J 33049** kit into the engine block until the **J 33049** kit expander assembly is positioned between the camshaft inner bearing bores.
- 3. Install the NEW camshaft inner bearings #3 and #2.
  - 1. Install the NEW camshaft inner bearing #3 onto the J 33049 kit expander assembly.
  - 2. Tighten the **J 33049** kit expander assembly nut until snug.
  - 3. Align the lubrication hole of the camshaft inner bearing #3 above the 3 o'clock position or the 9 o'clock position of the camshaft inner bearing bore #3 of the engine block.
  - 4. Push the **J 33049** kit guide cone into the camshaft front bearing bore #1 in order to align the **J 33049** kit.
  - 5. Drive the camshaft inner bearing #3 into the camshaft inner bearing bore #3.
  - 6. Loosen the **J 33049** kit expander assembly nut.
  - 7. Carefully slide the **J 33049** kit until the **J 33049** kit expander assembly is positioned between the camshaft inner bearing bore #2 and the camshaft outer bearing bore #1.
  - 8. Install the NEW camshaft inner bearing #2 onto the **J 33049** kit expander assembly.
  - 9. Tighten the **J 33049** kit expander assembly nut until snug.
  - 10. Align the lubrication hole of the camshaft inner bearing #2 above the 3 o'clock position or the 9 o'clock position of the camshaft inner bearing bore #2 of the engine block.
  - 11. Push the **J 33049** kit guide cone into the camshaft front bearing bore #1 in order to align the **J 33049** kit.
  - 12. Drive the camshaft inner bearing #2 into the camshaft inner bearing bore #2.
  - 13. Loosen the J 33049 kit expander assembly nut.
- 4. Carefully remove the **J 33049** kit from the engine block.

#### BALANCER SHAFT BEARING REMOVAL

#### **Special Tools**

- J 26941 Bushing/Bearing Remover
- J 38834 Balance Shaft Service Kit

For equivalent regional tools, refer to **Special Tools**.

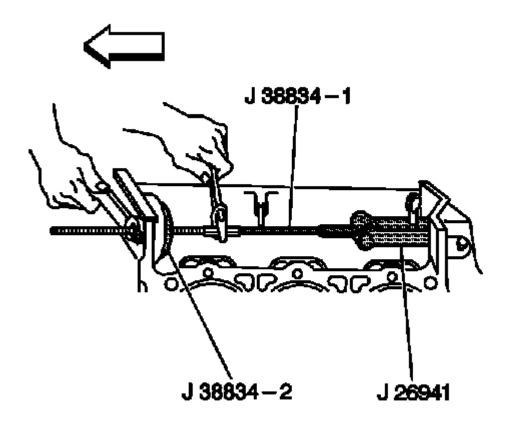


Fig. 494: Balance Shaft Rear Bearing Courtesy of GENERAL MOTORS COMPANY

WARNING: Refer to <u>Safety Glasses Warning</u>.

- 1. Use the J 38834 kit and the J 26941 remover in order to remove the balance shaft rear bearing.
  - 1. Install J 26941 remover legs behind the balance shaft rear bearing and secure.
  - 2. Install the J 38834-1 with the short threaded end through the balance shaft bore in the front of the engine block.
  - 3. Install the J 38834-1 into **J 26941** remover.
  - 4. Slide the J 38834-2 onto the J 38834-1 and into the balance shaft bore of the engine block.
  - 5. Install the **J 38834** kit bearing, washer and nut onto the J 38834-1.
  - 6. Using a wrench secure the J 38834-1 and then rotate the **J 38834** kit nut clockwise until the balance shaft rear bearing is removed from the engine block.
  - 7. Remove the J 26941 remover from the balance shaft rear bearing.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

2. Discard the balance shaft rear bearing.

## BALANCE SHAFT CLEANING AND INSPECTION

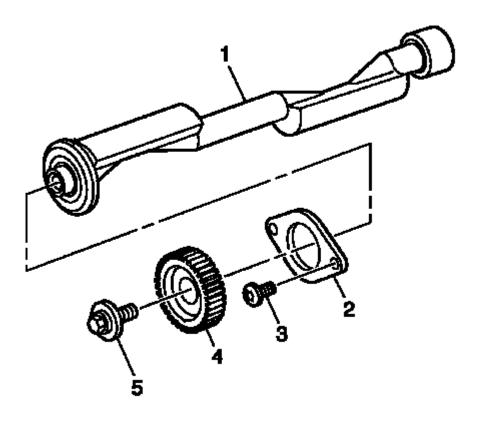


Fig. 495: Balance Shaft Cleaning & Inspection Areas Courtesy of GENERAL MOTORS COMPANY

WARNING: Refer to Safety Glasses Warning .

NOTE: The balance shaft and the balance shaft front bearing are serviced only as an assembly. Do not remove the balance shaft front bearing from the balance shaft.

- 1. Clean the following components in cleaning solvent:
  - The balance shaft (1)
  - The balance shaft retainer (2)
  - The balance shaft rear bearing
  - The balance shaft driven gear (4)
  - The balance shaft drive gear

#### 2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- 2. Dry the following components with compressed air:
  - The balance shaft (1)
  - The balance shaft retainer (2)
  - The balance shaft rear bearing
  - The balance shaft driven gear (4)
  - The balance shaft drive gear
- 3. Inspect the balance shaft bearings for the following:
  - Front ball bearing for damage or wear
  - Front ball bearing for smoothness of operation
  - Rear sleeve bearing for wear, scoring or other damage
- 4. Inspect the balance shaft (1) for the following:
  - Wear or scoring on the rear bearing journal
  - Damaged bolt hole threads
  - Damage to the balance shaft driven gear locator pin
- 5. Inspect the balance shaft retainer (2) for wear or damage.
- 6. Inspect the balance shaft retainer bolts (3) for damaged threads.
- 7. Inspect the driven gear (4) for the following:
  - Excessive wear or damage
  - Nicks, burrs or scoring
- 8. Inspect the driven gear bolt (5) for damaged threads.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

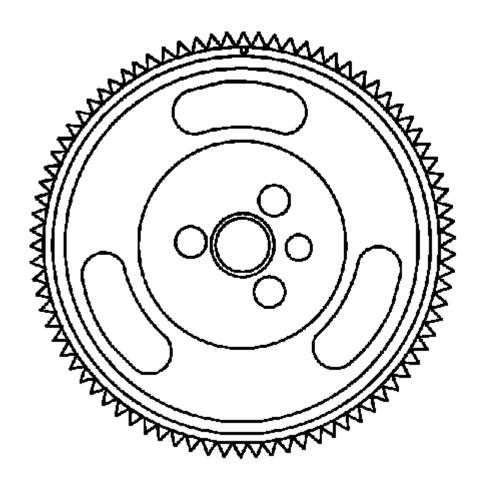


Fig. 496: Balance Shaft Drive Gear Camshaft Timing Mark Courtesy of GENERAL MOTORS COMPANY

- 9. Inspect the balance shaft drive gear for the following:
  - Excessive wear or damage
  - Nicks, burrs or scoring

## **BALANCER SHAFT BEARING INSTALLATION**

## **Special Tools**

J 38834 Balance Shaft Service Kit

For equivalent regional tools, refer to **Special Tools**.

# 2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

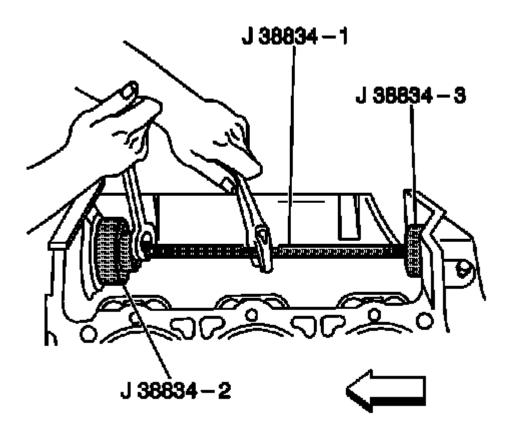


Fig. 497: Installing Balance Shaft Rear Bearing Courtesy of GENERAL MOTORS COMPANY

WARNING: Refer to Safety Glasses Warning.

- 1. Use the J 38834 kit in order to install the balance shaft rear bearing.
  - 1. Install the J 38834-3 onto the short threaded end of the J 38834-1.
  - 2. Install the J 38834 kit nut, the washer and the bearing on the long threaded end of the J 38834-1.
  - 3. Install the J 38834-2 onto the J 38834-1 so that the smaller diameter of the J 38834-2 will be facing the front of the engine block.
  - 4. Install the J 38834-2 on the inside of the balance shaft front bearing bore.
  - 5. Lubricate the NEW balance shaft rear bearing with clean engine oil.
  - 6. Install the balance shaft rear bearing onto the J 38834-2.
  - 7. Align the balance shaft rear bearing for installation.
  - 8. Using a wrench secure the J 38834-1 into place.
  - 9. Rotate the **J 38834** kit nut until the balance shaft rear bearing is properly and completely pushed into the balance shaft rear bearing bore.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

2. Remove the **J 38834** kit.

## CAMSHAFT TIMING CHAIN AND SPROCKET CLEANING AND INSPECTION

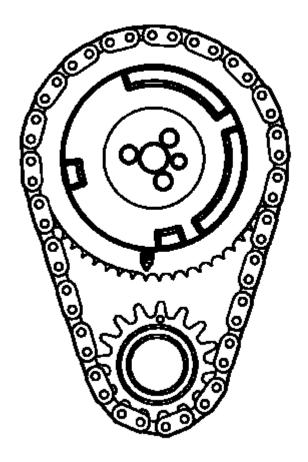


Fig. 498: View Of Sprockets & Chain Courtesy of GENERAL MOTORS COMPANY

WARNING: Refer to Safety Glasses Warning.

- 1. Clean the components with cleaning solvent.
- 2. Dry the components with compressed air.
- 3. Inspect the camshaft timing chain for binding or wear.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

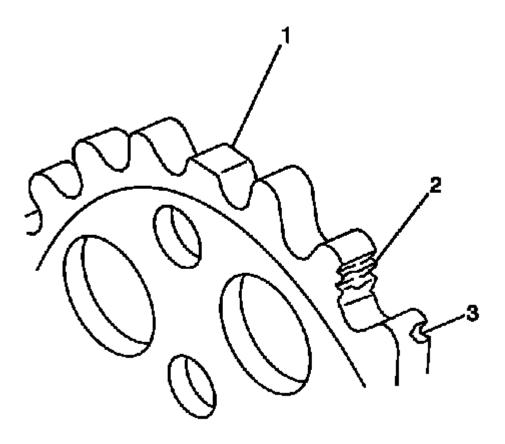


Fig. 499: Identifying Damaged Sprocket Teeth Courtesy of GENERAL MOTORS COMPANY

- 4. Inspect the camshaft sprocket and the crankshaft sprocket for:
  - Broken teeth (1)
  - Damaged teeth (2)
  - Chipped teeth (3)
  - Worn teeth
  - Uneven wear on the edge of the teeth
  - Worn valleys between the sprocket teeth
  - Crankshaft sprocket keyway for wear
- 5. Inspect the timing chain tensioner bracket and shoe for cracking and wear.

## VALVE ROCKER ARM AND PUSH ROD CLEANING AND INSPECTION

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

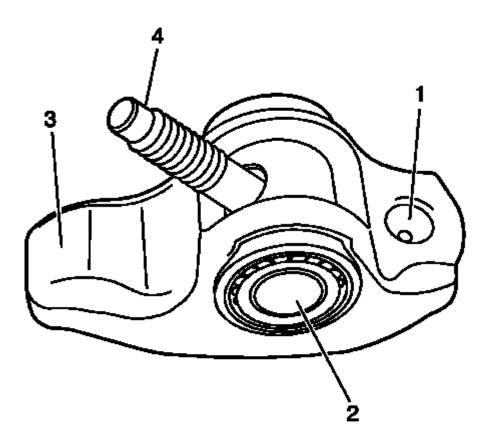


Fig. 500: Pushrod Socket, Roller Pivot & Valve Stem Tip Courtesy of GENERAL MOTORS COMPANY

NOTE: Parts that are to be reused must be marked, sorted and organized for assembly.

1. Mark, sort and organize the components for assembly.

# WARNING: Refer to Safety Glasses Warning.

- 2. Clean the components with cleaning solvent.
- 3. Dry the components with compressed air.
- 4. Inspect the valve rocker arm components for the following:
  - Valve rocker arm valve pushrod socket contact surface (1)


The contact surface must be smooth with no scoring or excessive wear.

- Valve rocker arm roller pivot for binding or damage (2)
- Valve rocker arm valve stem contact surface (3)

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

The contact surface should be smooth with no scoring or excessive wear.

• Valve rocker arm bolt threads for damage (4)

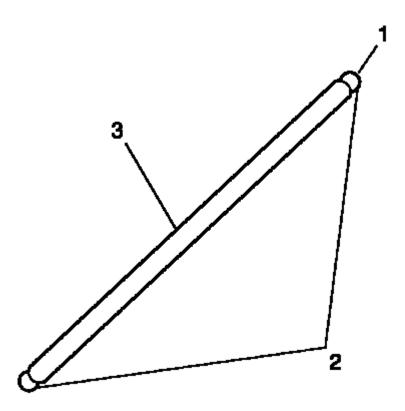

<u>Fig. 501: Pushrod Inspection Areas</u> Courtesy of GENERAL MOTORS COMPANY


- 5. Inspect the valve pushrods for the following:
  - Restriction of the oil passage (1)
  - Wear or scoring of the end contact surfaces (2)

The end contact surfaces must be smooth with no scoring or excessive wear.

• Shaft for bends (3)

Roll the valve pushrod on a flat surface to determine if the valve pushrod is bent.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

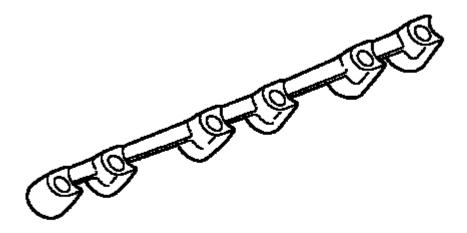


<u>Fig. 502: Valve Rocker Support</u> Courtesy of GENERAL MOTORS COMPANY

6. Inspect the valve rocker support for excessive wear or damage.

VALVE LIFTER AND GUIDE CLEANING AND INSPECTION

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

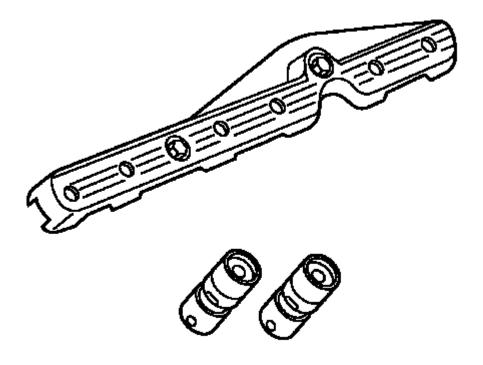


<u>Fig. 503: Valve Lifters & Guides</u> Courtesy of GENERAL MOTORS COMPANY

1. Mark, sort and organize the components for assembly.

WARNING: Refer to Safety Glasses Warning.

- 2. Clean the components in cleaning solvent.
- 3. Dry the components with compressed air.


2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

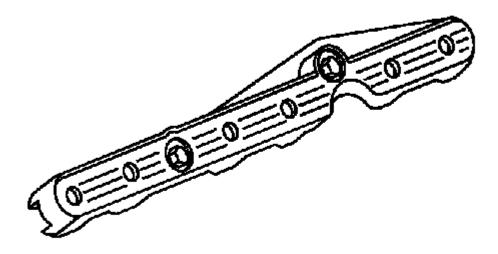

<u>Fig. 504: Valve Lifter Pushrod Guides</u> Courtesy of GENERAL MOTORS COMPANY

- 4. Inspect the valve lifter pushrod guides for excessive wear.
- 5. Inspect the valve lifter pushrod guides for cracks or damage.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

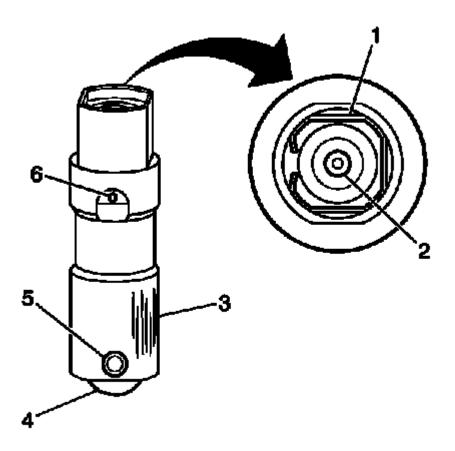

<u>Fig. 505: Identifying Valve Lifter Inspection Areas</u> Courtesy of GENERAL MOTORS COMPANY

- 6. Inspect the valve lifter for the following:
  - Broken or damaged clip (1)
  - Worn pushrod socket (2)
  - Scuffed or worn lifter body (3)

If the valve lifter shows scuffing or wear, inspect the engine block valve lifter bores for wear.

- Worn roller (4)
- Loose or damaged pin (5)
- Plugged oil hole (6)


#### CYLINDER HEAD DISASSEMBLE

## **Special Tools**

J 8062 Valve Spring Compressor

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

For equivalent regional tools, refer to **Special Tools**.

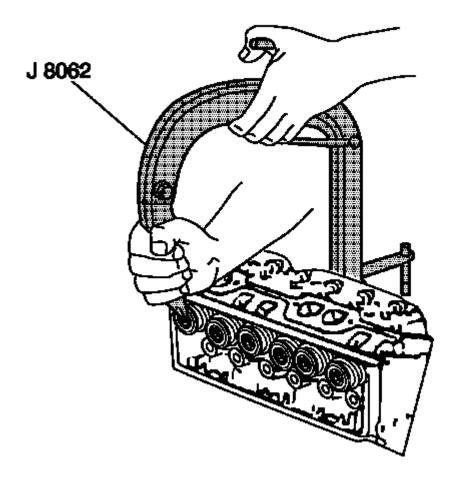

<u>Fig. 506: Compressing Valve Springs</u> Courtesy of GENERAL MOTORS COMPANY

WARNING: Compressed valve springs have high tension against the valve spring compressor. Valve springs that are not properly compressed by or released from the valve spring compressor can be ejected from the valve spring compressor with intense force. Use care when compressing or releasing the valve spring with the valve spring compressor and when removing or installing the valve stem keys. Failing to use care may cause personal injury.

WARNING: Refer to Safety Glasses Warning.

1. Use the J 8062 compressor in order to compress the valve springs.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

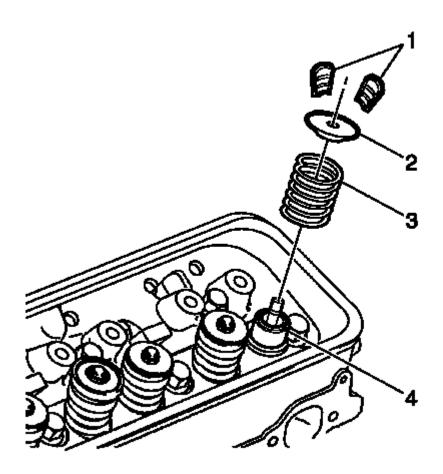


Fig. 507: Identifying Valve Components
Courtesy of GENERAL MOTORS COMPANY

NOTE: Mark, sort and organize the components so that the components can be reinstalled in their original location and position.

- 2. Remove the valve stem keys (1).
- 3. Remove the J 8062 compressor from the cylinder head.
- 4. Remove the valve spring cap (2).
- 5. Remove the valve spring (3).
- 6. Remove the valve stem oil seal (4).
- 7. Discard the valve stem oil seal.
- 8. Remove the valve.


#### CYLINDER HEAD CLEANING AND INSPECTION

## **Special Tools**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- J 8001 Dial Indicator Set
- J 8089 Carbon Removing Brush
- J 9666 Valve Spring Tester

For equivalent regional tools, refer to **Special Tools**.

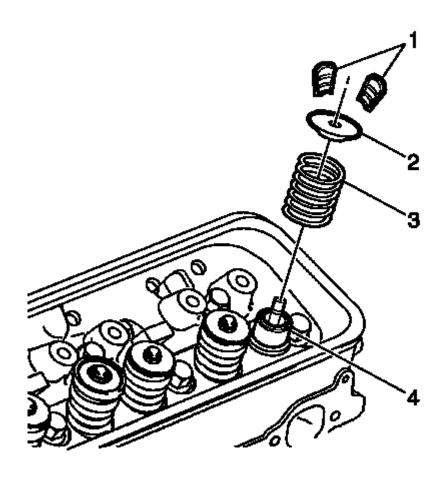

<u>Fig. 508: Identifying Valve Components</u> Courtesy of GENERAL MOTORS COMPANY

WARNING: Refer to <u>Safety Glasses Warning</u>.

- 1. Clean the valve stems and cylinder heads on a buffing wheel.
- 2. Clean the following components in cleaning solvent:
  - Valve stem keys (1)
  - Valve spring cap (2)
  - Valve spring (3)

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- Cylinder head
- 3. Dry the components with compressed air.

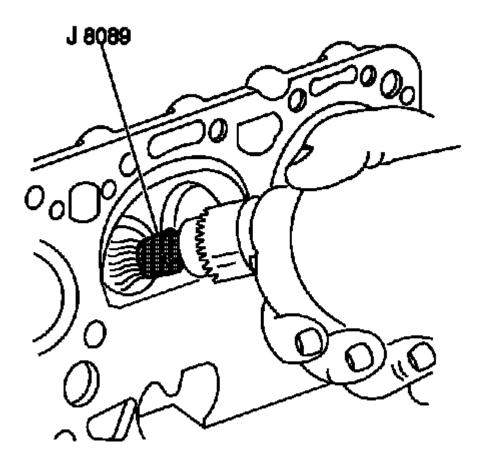


Fig. 509: Cleaning Carbon Using J 8089
Courtesy of GENERAL MOTORS COMPANY


4. Use the J 8089 brush to clean the carbon from the cylinder head combustion chambers.

Be careful not to scuff the combustion chambers.

- 5. Inspect the cylinder head for the following:
  - Damage to the gasket surfaces
  - Damage to the threaded bolt holes
  - Burnt or eroded areas in the combustion chamber
  - Cracks in the exhaust ports and combustion chambers
  - External cracks in the water chamber
  - Restrictions in the intake or exhaust passages
  - Restrictions in the cooling system passages

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


• Rusted, damaged or leaking core plugs

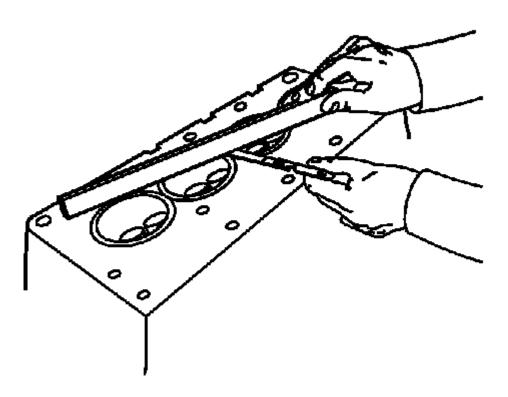

<u>Fig. 510: Inspecting Cylinder Head For Warpage</u> Courtesy of GENERAL MOTORS COMPANY

- 6. Measure the cylinder head for warpage with a straight edge and feeler gauge.
  - A cylinder head block deck with warpage in excess of 0.10 mm (0.004 in) within a 152.4 mm (6.0 in) area must be repaired or replaced.
  - A cylinder head exhaust manifold deck with warpage in excess of 0.05 mm (0.002 in) within a 152.4 mm (6.0 in) area must be repaired or replaced.
  - A cylinder head intake manifold deck with warpage in excess of 0.10 mm (0.004 in) within a 152.4 mm (6.0 in) area must be repaired or replaced.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

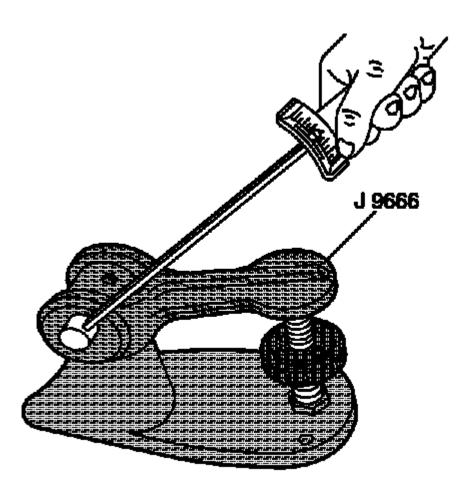

<u>Fig. 511: Measuring Valve Spring Tension</u> Courtesy of GENERAL MOTORS COMPANY

7. Use the **J 9666** tester in order to measure the valve spring.

Replace the valve spring if the valve spring tension is less than  $338\ N\ (76\ lb)$  at  $43.2\ mm\ (1.70\ in)$ .

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


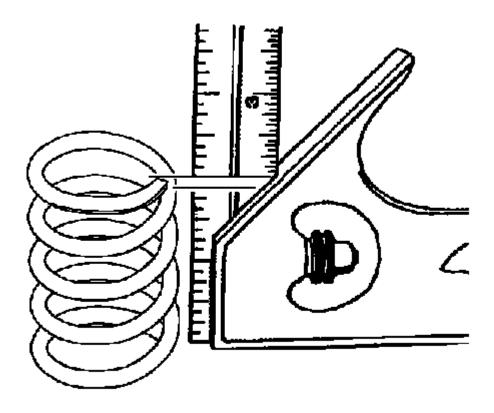


Fig. 512: Inspecting Valve Spring For Squareness Courtesy of GENERAL MOTORS COMPANY

8. Inspect the valve springs for squareness.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

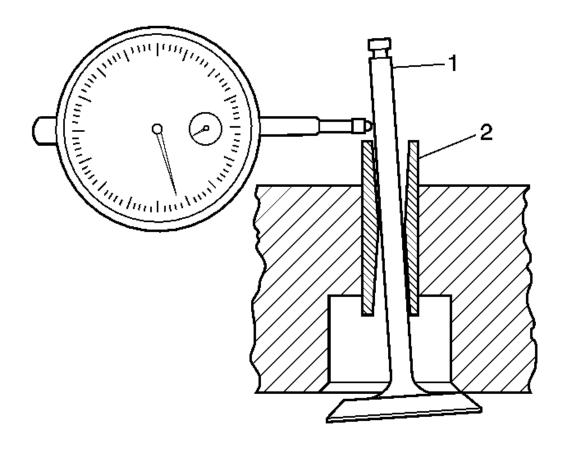

<u>Fig. 513: Inspecting For Excessive Valve Stem To Guide Clearance</u> Courtesy of GENERAL MOTORS COMPANY

9. Valve stems (1) with excessive valve guide (2) clearance must be repaired or the cylinder head replaced.

# 2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

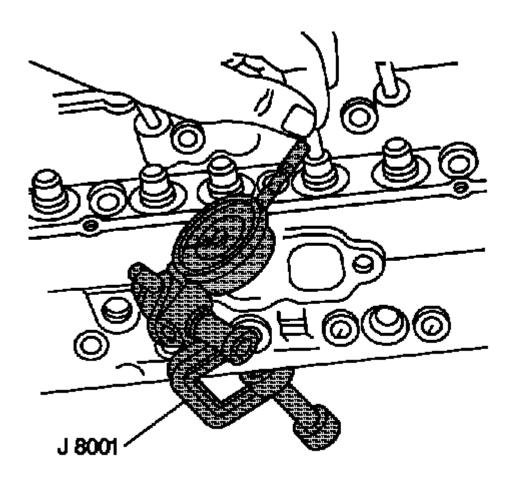


Fig. 514: Measuring Valve Stem-To-Guide Clearance Using J 8001 Courtesy of GENERAL MOTORS COMPANY

10. Measure the valve stem-to-guide clearance.

Excessive valve stem-to-guide clearance may cause an excessive oil consumption and may also cause a valve to break. Insufficient clearance will result in noisy and sticky functioning of the valve and will disturb the engine assembly smoothness.

- 1. Clamp the J 8001 set on the exhaust port side of the cylinder head.
- 2. Position the dial indicator so that the movement of the valve stem from side to side, crosswise to the cylinder head, will cause a direct movement of the dial indicator stem.

The dial indicator stem must contract the side of the valve stem just above the valve guide.

- 3. Drop the valve head about 1.6 mm (0.063 in) off the valve seat.
- 4. Use light pressure and move the valve stem from side to side in order to obtain a valve stem-to-guide clearance reading. Refer to **Engine Mechanical Specifications**.

## VALVE GUIDE REAMING AND VALVE AND SEAT GRINDING

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

# **Special Tools**

J 5830-02 Valve Guide Reamer Set

For equivalent regional tools, refer to **Special Tools**.

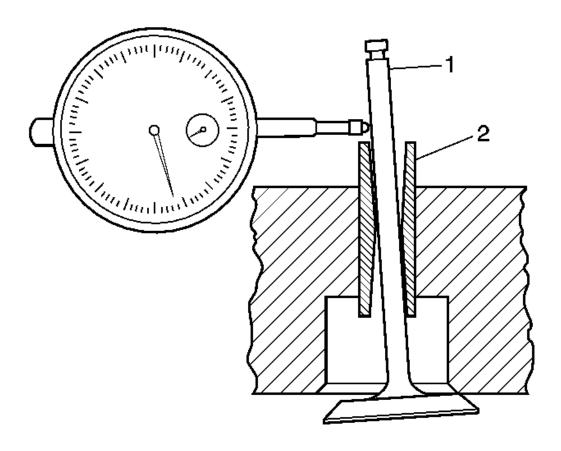


Fig. 515: Inspecting For Excessive Valve Stem To Guide Clearance Courtesy of GENERAL MOTORS COMPANY

- 1. Measure the valve stem-to-guide clearance. Refer to **Cylinder Head Cleaning and Inspection**.
- 2. Improper valve stem (1) to valve guide (2) clearance may cause excessive oil consumption.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

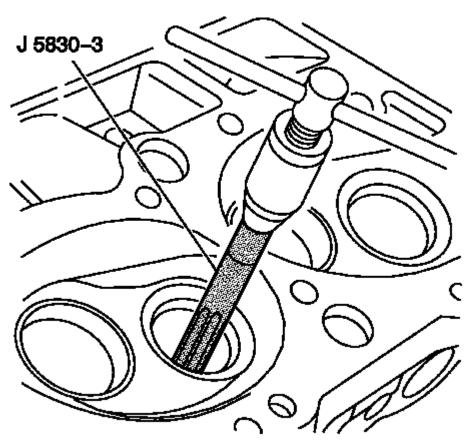



Fig. 516: Reaming Exhaust Valve Guide Using J 5830-3 Courtesy of GENERAL MOTORS COMPANY

WARNING: Refer to <u>Safety Glasses Warning</u>.

# NOTE:

Exhaust valves with excessive valve stem-to-guide clearance must be replaced with the available service valve that has an 0.774 mm (0.0305 in) oversize valve stem. The intake valves are NOT available with oversize valve stems. Replace the cylinder head if after using a NEW intake valve in order to measure the valve stem-to-guide clearance, the valve stem-to-guide clearance is not within specifications.

- 3. Use the J 5830-3 in order to ream the exhaust valve guide in order to achieve the correct valve stem-to-guide clearance.
- 4. Always recondition the exhaust valve seat after reaming the exhaust valve guide bores and installing new exhaust valves.

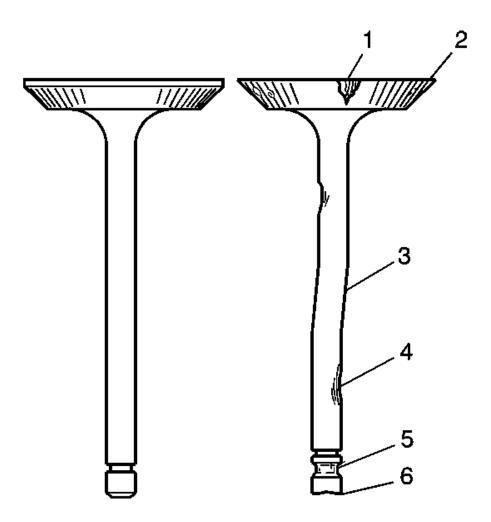

<u>Fig. 517: Identifying Inspection Points For Valves Damage</u> Courtesy of GENERAL MOTORS COMPANY

- 5. Inspect the valves for the following:
  - Burnt or damaged areas (1)
  - Undersized margin (2)
  - Bent stem (3)
  - Scoring or other damage to the stem (4)
  - Worn key groove (5)
  - Worn stem tip (6)

# 2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

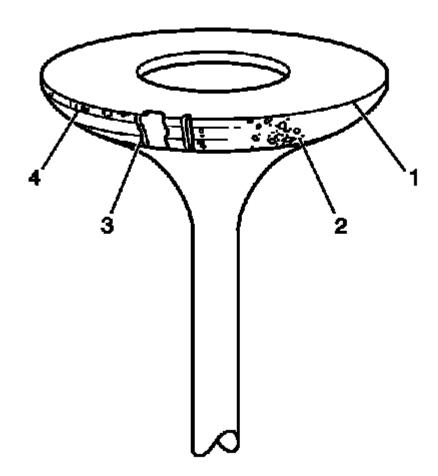


Fig. 518: Inspecting Valve Face For Burning, Pitting & Cracking Courtesy of GENERAL MOTORS COMPANY

- 6. Inspect the valve contact surface for the following:
  - Undersized margin (1)
  - Pitted surface (2)
  - Burnt or eroded areas (3)
  - Acceptable edge margin (4)

Valves with excessive damage must be replaced.

Minor imperfections of the valve or valve seat may be repaired.

- 7. Reconditioning of the valves and valve seats:
  - The valves must seat perfectly for the engine to deliver optimum power and performance.
  - Cooling the valve heads is another important factor. Good contact between each valve and valve seat in the cylinder head is necessary to insure that the heat in the valve head is properly carried away.
  - Regardless of what type of equipment is used, it is essential that the valve guide bores are free from

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

carbon or dirt in order to ensure the proper centering of the pilot in the valve guide.

The valve seats should be concentric to within 0.05 mm (0.002 in) total indicator reading.

• Reface pitted valves on a valve refacing machine in order to ensure the correct relationship between the valve head and the valve stem.

Replace the valve if the valve stem is excessively worn or warped.

Replace the valve if the edge margin (4) of the valve head is less than 0.79 mm (0.031 in) thick after grinding.

• Several different types of equipment are available for reconditioning valves and valve seats. Follow the equipment manufacturer's recommendations for equipment use to attain the proper results.

#### CYLINDER HEAD ASSEMBLE

# **Special Tools**

- J 8062 Valve Spring Compressor
- J 42073 Valve Stem Seal Installer

For equivalent regional tools, refer to **Special Tools**.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


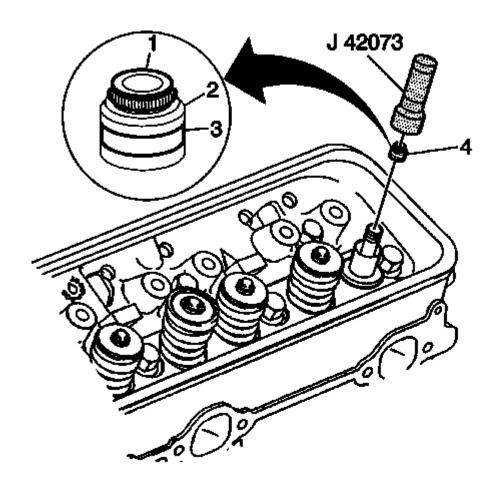


Fig. 519: Exhaust Valve Oil Stem Seal Courtesy of GENERAL MOTORS COMPANY

#### NOTE:

The exhaust valve oil stem seal has the letters EX (1) molded into the top of the seal. The exhaust valve oil stem seal material is brown in color (2) with a white stripe (3) painted onto the outside diameter of the seal or the material may be red in color (2) with no paint stripe. The intake valve oil seal is black in color.

- 1. Assemble the valve into the proper valve guide.
- 2. Select the proper valve stem oil seal for the specific valve guide.
- 3. Lubricate the valve stem oil seal and the outside diameter of the valve guide with clean engine oil.
- 4. Assemble the valve stem oil seal onto the valve stem.

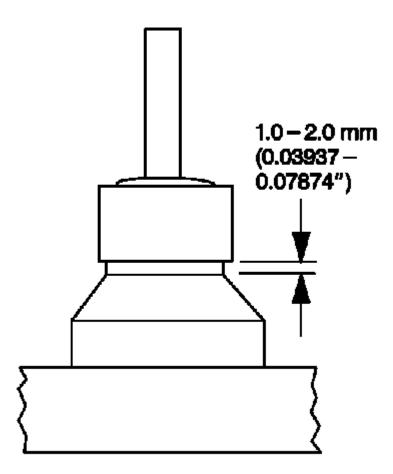

<u>Fig. 520: Valve Stem Oil Seal Proper Installation Position</u> Courtesy of GENERAL MOTORS COMPANY

WARNING: Refer to <u>Safety Glasses Warning</u>.

- 5. Using the J 42073 installer, install the valve stem oil seal onto the valve guide.
  - 1. Tap the valve stem oil seal onto the valve guide until the **J 42073** installer bottoms against the valve spring seat.
  - 2. Inspect the valve stem oil seal. The valve stem oil seal should not be bottomed against the valve guide.

There should be a 1-2 mm (0.03937-0.07874 in) gap between the bottom edge of the valve stem oil seal and the valve guide.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


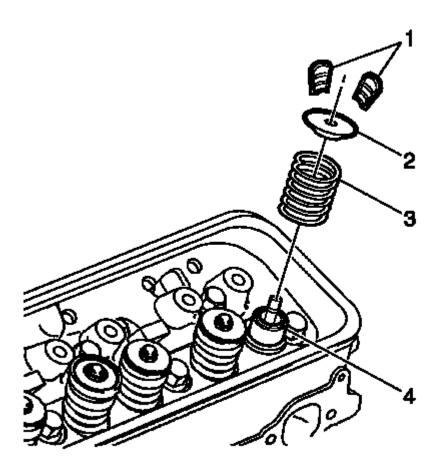


Fig. 521: Identifying Valve Components
Courtesy of GENERAL MOTORS COMPANY

- 6. Install the valve spring (3).
- 7. Install the valve spring cap (2) onto the valve spring (3), over the valve stem.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

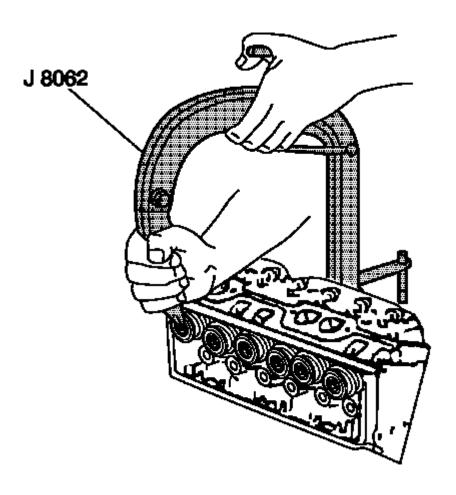

<u>Fig. 522: Compressing Valve Springs</u> Courtesy of GENERAL MOTORS COMPANY

WARNING: Compressed valve springs have high tension against the valve spring compressor. Valve springs that are not properly compressed by or released from the valve spring compressor can be ejected from the valve spring compressor with intense force. Use care when compressing or releasing the valve spring with the valve spring compressor and when removing or installing the valve stem keys. Failing to use care may cause personal injury.

- 8. Use the **J 8062** compressor to compress the valve spring.
- 9. Install the valve stem O-ring seal.
- 10. Install the valve stem keys.
  - 1. Use grease to hold the valve stem keys in place while disconnecting the **J 8062** compressor.
  - 2. Tap the end of the valve stem with a plastic-faced hammer to seat the valve stem keys.
  - 3. Inspect the valve stem keys to ensure that they are seated in the upper groove of the valve stem.

#### OIL PUMP DISASSEMBLE

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

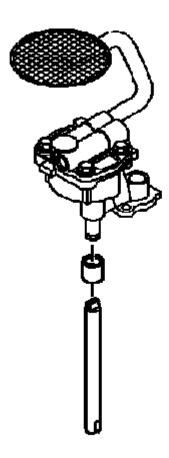


Fig. 523: View Of Oil Pump Driveshaft & Oil Pump Driveshaft Retainer Courtesy of GENERAL MOTORS COMPANY

1. Remove the oil pump driveshaft and oil pump driveshaft retainer.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


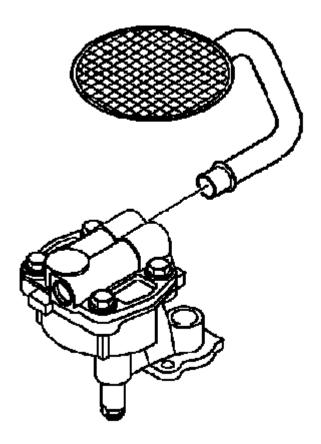


Fig. 524: View Of Oil Pump Pipe & Screen
Courtesy of GENERAL MOTORS COMPANY

NOTE: Do not remove the oil pump screen from the pipe. The pipe and oil pump screen are serviced as a complete assembly.

2. Remove the oil pump pipe, if necessary. The oil pump pipe has a press fit into the oil pump cover.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

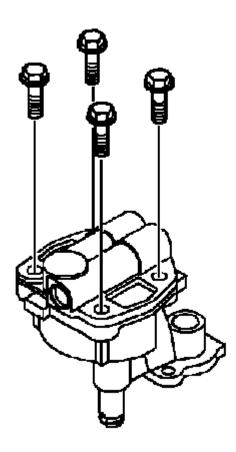

<u>Fig. 525: View Of Oil Pump Cover Bolts</u> Courtesy of GENERAL MOTORS COMPANY

3. Remove the oil pump cover bolts.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


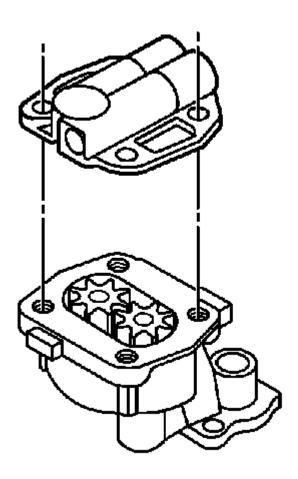


Fig. 526: View Of Oil Pump Cover Courtesy of GENERAL MOTORS COMPANY


4. Remove the oil pump cover.

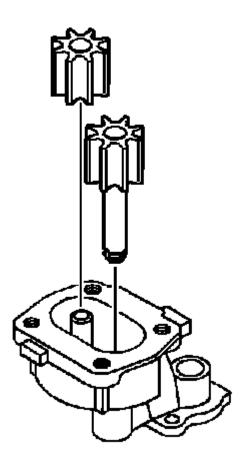

<u>Fig. 527: View Of Oil Pump Drive Gear & Driven Gear</u> Courtesy of GENERAL MOTORS COMPANY

- 5. Remove the oil pump drive gear and the oil pump driven gear.
- 6. Matchmark the gear teeth for assembly.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

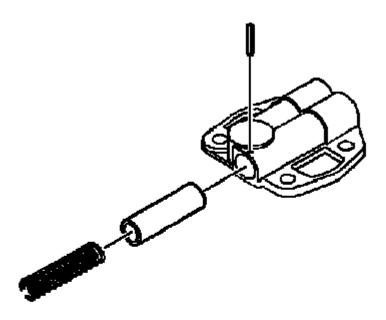

<u>Fig. 528: View Of Oil Pump Pressure Relief Valve, Spring & Spring Straight Pin</u> Courtesy of GENERAL MOTORS COMPANY

WARNING: Refer to Safety Glasses Warning.

- 7. Remove the following items:
  - 1. The oil pump pressure relief valve spring straight pin
  - 2. The oil pump pressure relief spring
  - 3. The oil pump pressure relief valve

# OIL PUMP CLEANING AND INSPECTION

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

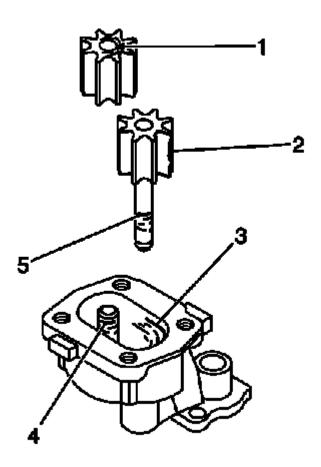


Fig. 529: Identifying Oil Pump Components Courtesy of GENERAL MOTORS COMPANY

WARNING: Refer to <u>Safety Glasses Warning</u>.

- 1. Clean the oil pump components in cleaning solvent.
- 2. Dry the components with compressed air.
- 3. Inspect the oil pump for the following conditions:
  - Scoring on the top of the gears (1)
  - Damaged gears (2) for the following:
    - o Chipping
    - o Galling
    - o Wear
  - Scoring, damage or casting imperfections to the body (3)
  - Damaged or scored gear shaft (4)
  - Damaged or scored gear shaft (5)

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- Damaged bolt hole threads
- Worn oil pump driveshaft bore
- Damaged or sticking oil pump pressure relief valve

Minor imperfections may be removed with a fine oil stone.

- Collapsed or broken oil pump pressure relief valve spring
- 4. If the oil pump is to be reused, install a NEW oil pump pressure relief valve spring.
- 5. During oil pump installation, install a NEW oil pump driveshaft retainer.

#### **OIL PUMP ASSEMBLE**

# **Special Tools**

J 21882 Oil Suction Pipe Installer

For equivalent regional tools, refer to **Special Tools**.

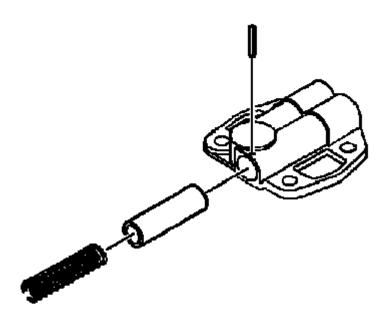


Fig. 530: View Of Oil Pump Pressure Relief Valve, Spring & Spring Straight Pin Courtesy of GENERAL MOTORS COMPANY

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

1. Apply clean engine oil GM P/N 12345610 (Canadian P/N 9931930) or equivalent, to the oil pump pressure relief valve, oil pump pressure relief valve spring and oil pump body.

WARNING: Refer to <u>Safety Glasses Warning</u>.

NOTE: Replace the oil pump pressure relief valve spring when you reuse the oil pump.

- 2. Install the following items:
  - 1. The oil pump pressure relief valve
  - 2. The oil pump pressure relief valve spring
  - 3. The oil pump pressure relief valve spring straight pin

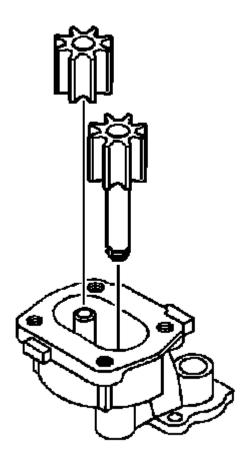


Fig. 531: View Of Oil Pump Drive Gear & Driven Gear Courtesy of GENERAL MOTORS COMPANY

3. Apply clean engine oil GM P/N 12345610 (Canadian P/N 993193) or equivalent, to the oil pump drive gear, the oil pump driven gear and the oil pump body internal surfaces.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- 4. Install the oil pump drive gear and the oil pump driven gear into the oil pump body.
  - 1. Align the matchmarks on the oil pump drive and driven gears.
  - 2. Install the smooth side of the oil pump drive and driven gears toward the oil pump cover.


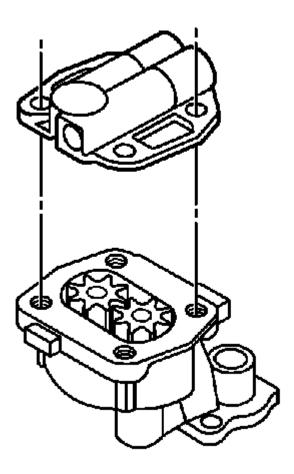


Fig. 532: View Of Oil Pump Cover Courtesy of GENERAL MOTORS COMPANY

5. Install the oil pump cover.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

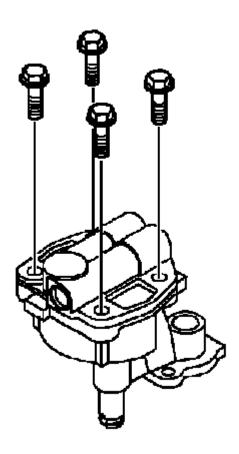

<u>Fig. 533: View Of Oil Pump Cover Bolts</u> Courtesy of GENERAL MOTORS COMPANY

**CAUTION: Refer to Fastener Caution**.

- 6. Install the oil pump cover bolts and tighten to 12 N.m (106 lb in).
- 7. Inspect the oil pump for smoothness of operation by turning the oil pump driveshaft by hand.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


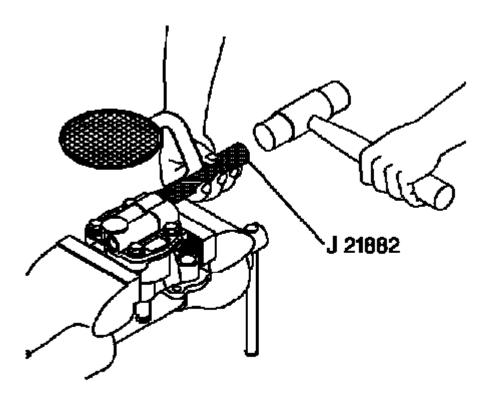


Fig. 534: Oil Pump Screen & Pump Body Courtesy of GENERAL MOTORS COMPANY

- 8. Install the oil pump screen.
  - 1. If removed, replace the oil pump screen. The oil pump screen must have a good press fit into the oil pump body.
  - 2. Mount the oil pump in a soft jawed vise.
  - 3. Apply sealant GM P/N 12346004 (Canadian P/N 10953480) or equivalent, to the end of the oil pump screen pipe.
  - 4. Use the **J 21882** installer and a soft-faced hammer in order to tap the oil pump screen into the pump body.

The oil pump screen must align parallel with the bottom of the oil pan when the oil pan is installed.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

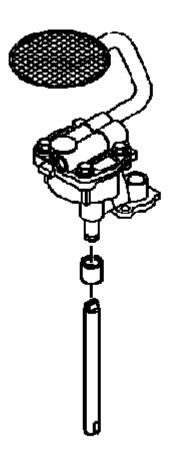

<u>Fig. 535: View Of Oil Pump Driveshaft & Oil Pump Driveshaft Retainer</u> Courtesy of GENERAL MOTORS COMPANY

NOTE: Install a NEW oil pump driveshaft retainer during assembly.

9. Install the oil pump driveshaft and the NEW oil pump driveshaft retainer.

# VALVE ROCKER ARM COVER CLEANING AND INSPECTION

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

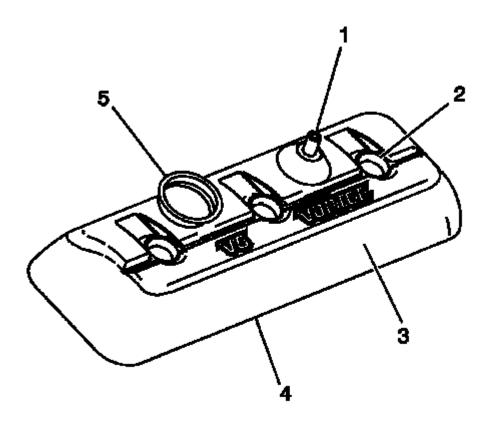


Fig. 536: Valve Rocker Arm Cover Courtesy of GENERAL MOTORS COMPANY

WARNING: Refer to Safety Glasses Warning.

NOTE: The positive crankcase ventilation (PCV) orifice is part of the valve cover and cannot be removed. If damaged, replace the valve cover.

- 1. Clean the valve rocker arm cover in cleaning solvent.
- 2. Dry the valve rocker arm cover with compressed air.
- 3. Inspect the valve rocker arm cover for the following:
  - Damage to the PCV orifice (1)
  - Damage to the bolt holes (2)

A damaged valve rocker arm cover may interfere with the valve rocker arms.

- Damage to the exterior of the valve rocker arm cover (3)
- Gouges or damage to the sealing surface (4)

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- Damage to the oil fill tube grommet (5)
- Restrictions to the ventilation system passages

# OIL PAN CLEANING AND INSPECTION

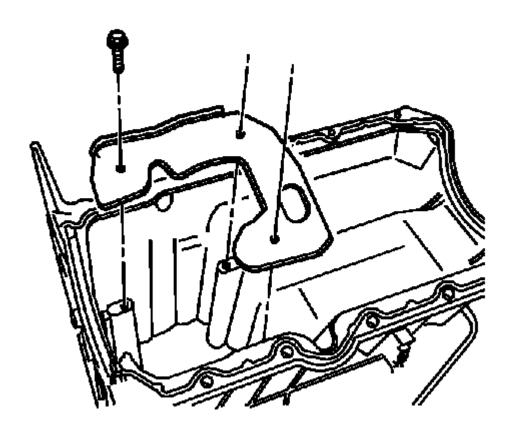


Fig. 537: View Of Oil Pan Baffle Bolts & Baffle Courtesy of GENERAL MOTORS COMPANY

1. Remove the oil pan baffle bolts and the oil pan baffle.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

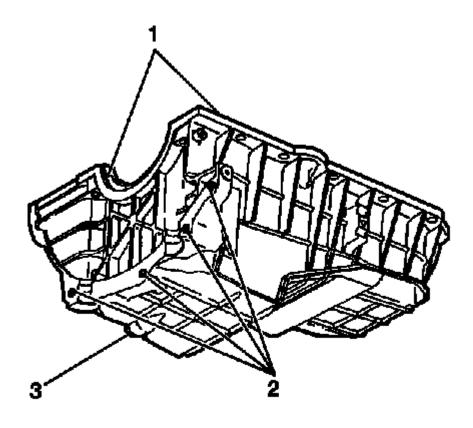


Fig. 538: Oil Pan Cleaning & Inspection Areas Courtesy of GENERAL MOTORS COMPANY

WARNING: Refer to <u>Safety Glasses Warning</u>.

- 2. Clean the oil pan and oil pan baffle in cleaning solvent.
- 3. Dry the oil pan and oil pan baffle with compressed air.
- 4. Inspect the oil pan for the following:
  - Gouges or damage to the oil pan sealing surfaces (1)
  - Damage to the threaded holes (2)
  - Damaged oil pan drain hole threads (3)
  - Damage to the oil pan baffle
  - Damage to the exterior of the oil pan

A damaged oil pan may interfere with the proper position of the oil pump screen or may not distribute oil properly in the oil pan sump area.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

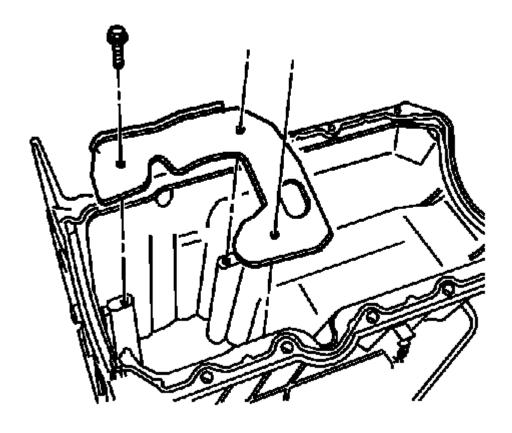



Fig. 539: View Of Oil Pan Baffle Bolts & Baffle Courtesy of GENERAL MOTORS COMPANY

**CAUTION: Refer to Fastener Caution.** 

5. Install the oil pan baffle and the bolts and tighten to 12 N.m (106 lb in).

# INTAKE MANIFOLD DISASSEMBLE

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

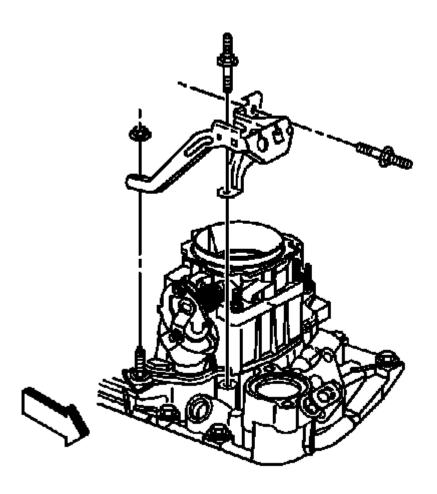

<u>Fig. 540: View Of Accelerator Control Cable Bracket</u> Courtesy of GENERAL MOTORS COMPANY

1. Remove the nuts, the studs and the accelerator control cable bracket.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

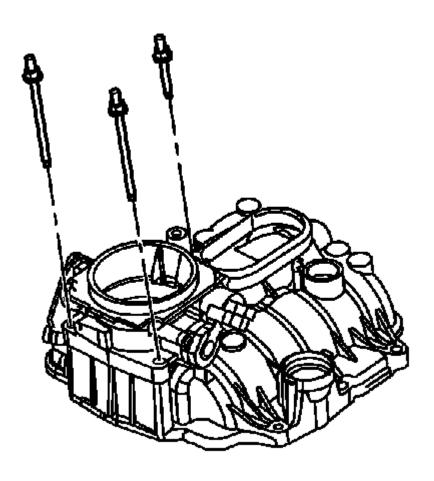


Fig. 541: View Of Throttle Body & Attaching Studs Courtesy of GENERAL MOTORS COMPANY

2. Remove the throttle body attaching studs.


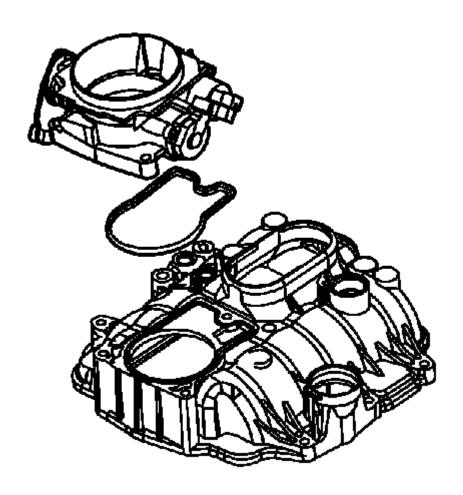


Fig. 542: View Of Throttle Body & Gasket Courtesy of GENERAL MOTORS COMPANY

- 3. Remove the throttle body.
- 4. Remove the throttle body to upper intake manifold gasket.
- 5. Discard the throttle body to upper intake manifold gasket.

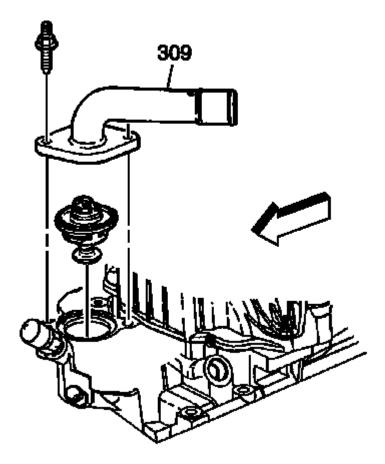

<u>Fig. 543: Engine Coolant Thermostat</u> Courtesy of GENERAL MOTORS COMPANY

- 6. Remove the water outlet studs.
- 7. Remove the water outlet (309).
- 8. Remove the engine coolant thermostat.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

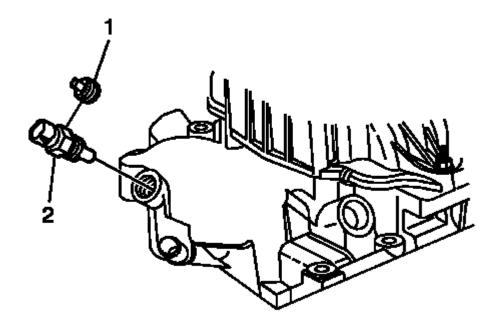


Fig. 544: ECT Sensor & Plug Courtesy of GENERAL MOTORS COMPANY

9. Remove the engine coolant temperature (ECT) sensor plug (1) or the ECT sensor (2) from the front of the lower intake manifold, if equipped.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

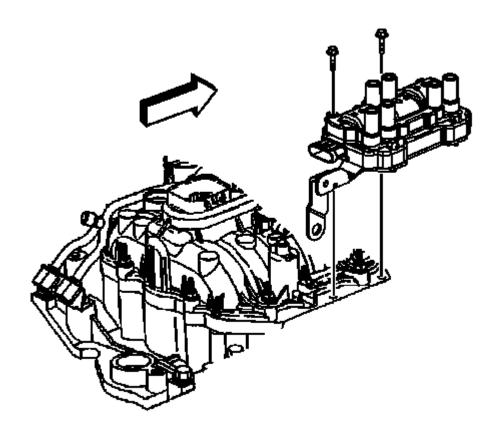


Fig. 545: View Of Studs And Ignition Coil Courtesy of GENERAL MOTORS COMPANY

10. Remove the studs and the ignition coil.


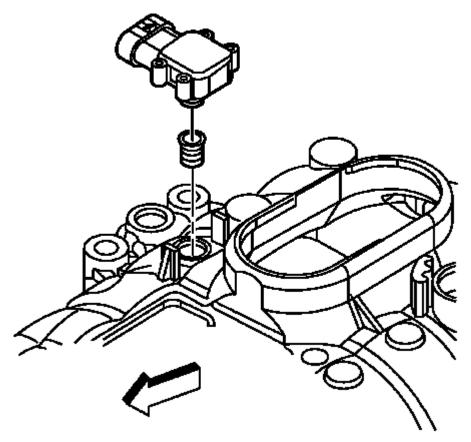


Fig. 546: MAP Sensor Courtesy of GENERAL MOTORS COMPANY

- 11. Remove the manifold absolute pressure (MAP) sensor.
- 12. Remove the MAP sensor seal from the MAP sensor.
- 13. Discard the MAP sensor seal.

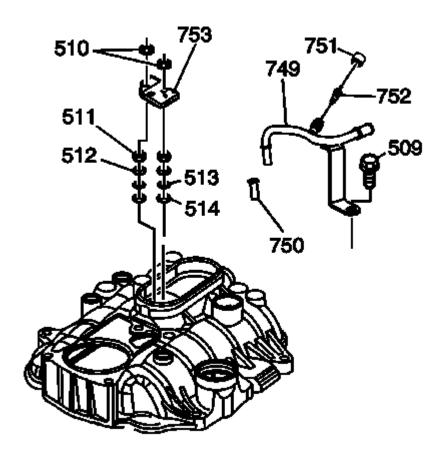

<u>Fig. 547: Fuel Pipes & Seals</u> Courtesy of GENERAL MOTORS COMPANY

- 14. Remove the fuel pipe bolt (509).
- 15. Remove the fuel service port cap (751) and schreder valve (752), if required.
- 16. Remove the fuel pipe retainer nuts (510).
- 17. Remove the fuel pipe retainer (753).
- 18. Remove the fuel pipe (749).
- 19. Remove the fuel pipe plug (750), if required.
- 20. Remove and discard the fuel seal retainers (511).
- 21. Remove and discard the fuel seals (512), yellow O-rings.
- 22. Remove and discard the spacer rings (513), flat washers.
- 23. Remove and discard the fuel seals (514), black O-rings.


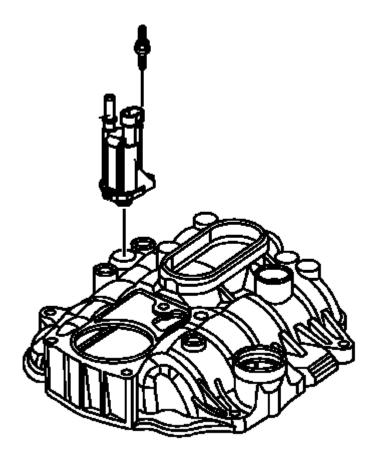


Fig. 548: Purge Solenoid & Nut Courtesy of GENERAL MOTORS COMPANY


- 24. Remove the studs and the evaporative emission (EVAP) canister purge solenoid valve.
- 25. Remove the nut and the engine wiring harness bracket.

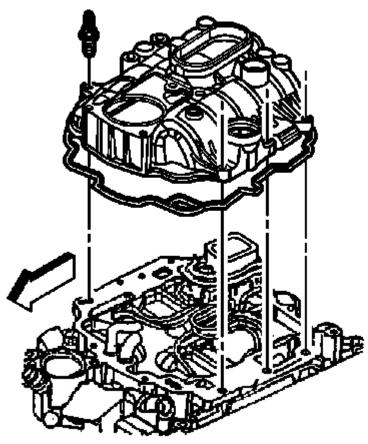

<u>Fig. 549: Identifying Upper Intake Manifold Attaching Studs</u> Courtesy of GENERAL MOTORS COMPANY

- 26. Remove the upper intake manifold attaching studs.
- 27. Remove the upper intake manifold.
- 28. Remove the upper intake manifold to lower intake manifold gasket.
- 29. Discard the upper intake manifold to lower intake manifold gasket.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

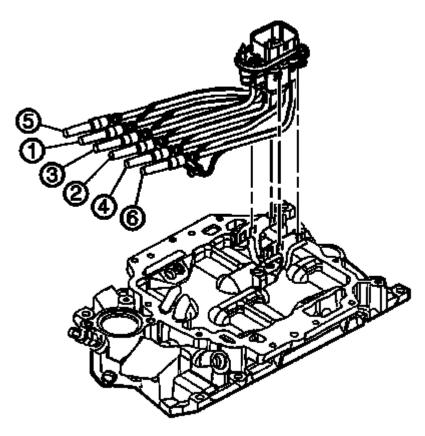


<u>Fig. 550: Injectors At Lower Intake Manifold Bores</u> Courtesy of GENERAL MOTORS COMPANY

IMPORTANT: During the removal of the fuel injector assembly, the retainers that hold the injectors into the intake manifold may become worn. This is OK. Upon installation of the upper intake manifold, the injectors will be held fully seated, thus keeping them from backing out of the lower intake manifold.

- 30. Remove the fuel meter body seal and discard.
- 31. Remove the 6 injectors from the lower intake manifold bores.
- 32. Remove the fuel meter body.
- 33. Remove the bolt and the fuel meter body bracket.

# INTAKE MANIFOLD CLEANING AND INSPECTION


2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

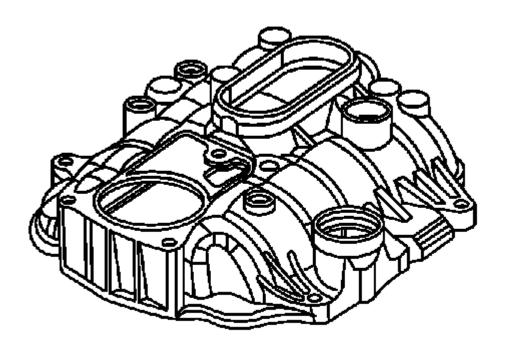

<u>Fig. 551: Upper Intake Manifold</u> Courtesy of GENERAL MOTORS COMPANY


WARNING: Refer to Safety Glasses Warning.

- 1. Clean the upper intake manifold in cleaning solvent.
- 2. Dry the upper intake manifold with compressed air.

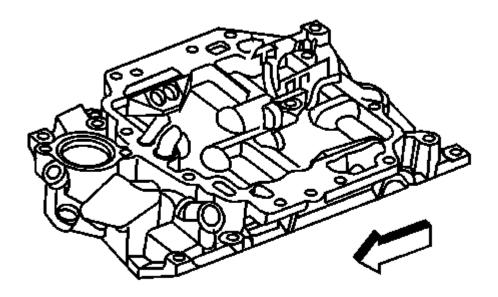

<u>Fig. 552: Lower Intake Manifold</u> Courtesy of GENERAL MOTORS COMPANY

- 3. Clean the lower intake manifold in cleaning solvent.
- 4. Dry the lower intake manifold with compressed air.

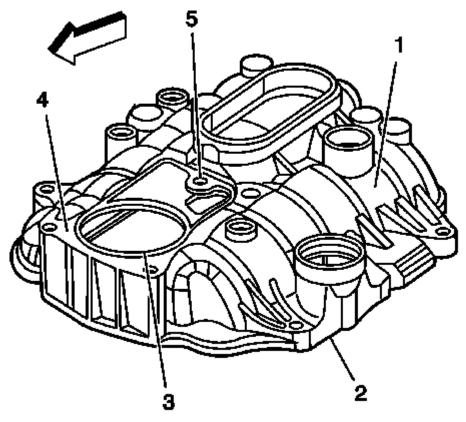

<u>Fig. 553: Upper Intake Manifold Damage</u> Courtesy of GENERAL MOTORS COMPANY

- 5. Inspect the upper intake manifold for the following:
  - Cracks or other damage to the exterior (1)
  - Cracking or damage in the gasket grooves (2) and (3)
  - Damage to the throttle body mounting surface (4)
  - Loose or damaged bolt hole thread inserts (5)

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


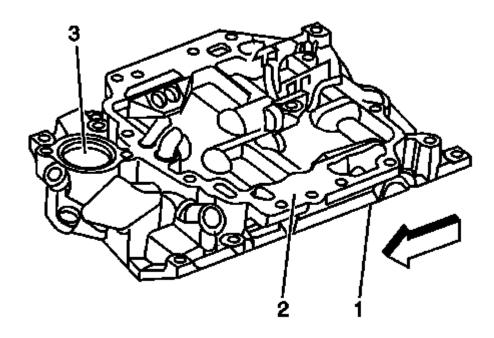


Fig. 554: Lower Intake Manifold Damage Courtesy of GENERAL MOTORS COMPANY

- 6. Inspect the lower intake manifold for the following:
  - Damage to the gasket sealing surfaces (1) and (2)
  - Restricted cooling system passages (3)
  - Cracks or damage
  - Damage to the threaded bolt holes

# INTAKE MANIFOLD ASSEMBLE

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

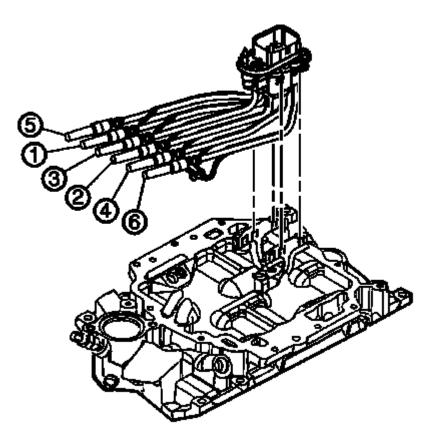

<u>Fig. 555: Injectors At Lower Intake Manifold Bores</u> Courtesy of GENERAL MOTORS COMPANY

NOTE:

During the removal of the fuel injector assembly, the retainers that hold the injectors into the intake manifold may become worn. This is OK. Upon installation of the upper intake manifold, the injectors will be held fully seated, thus keeping them from backing out of the lower intake manifold.

1. If reusing the fastener, apply threadlock GM P/N 12345382 (Canadian P/N 10953489) or equivalent, to the threads of the fuel meter body bracket bolt.

**CAUTION: Refer to Fastener Caution.** 

2. Install the fuel meter body bracket and bolt and tighten to 10 N.m (89 lb in).

NOTE:

All injector lines must face forward as the fuel meter body is snapped into the bracket. Also, the number 3 fuel tube must be positioned behind the number 1 fuel tube to eliminate interference with the upper intake manifold when installed.

3. Install the fuel meter body into the fuel meter body bracket.

- 4. Install the 6 injectors into the proper lower intake manifold bores in proper sequence (3, 5, 1, 2, 4, 6).
- 5. Inspect the injectors in order to ensure that they are firmly seated and locked in the lower intake manifold bores.
- 6. Ensure that the electrical connections of the injectors are positioned so that they do not interfere with each other and are pointing towards the center of the intake manifold. Rotate the electrical connector inboard if necessary. Also, ensure there is no tension on the injector wires.

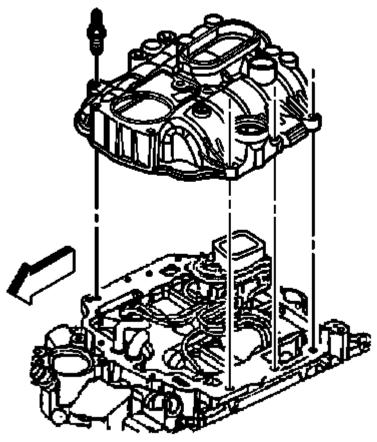


Fig. 556: Identifying Upper Intake Manifold Attaching Studs Courtesy of GENERAL MOTORS COMPANY

- 7. Install a NEW upper intake manifold to lower intake manifold gasket into the groove of the upper intake manifold.
- 8. Install the upper intake manifold onto the lower intake manifold.
- 9. If reusing the fasteners, apply threadlock GM P/N 12345382 (Canadian P/N 10953489) or equivalent, to the threads of the upper intake manifold attaching studs.
- 10. Install the upper intake manifold attaching studs.
  - 1. Tighten the upper intake manifold attaching studs on the first pass to 5 N.m (44 lb in).
  - 2. Tighten the upper intake manifold attaching studs on the final pass to 9 N.m (80 lb in).


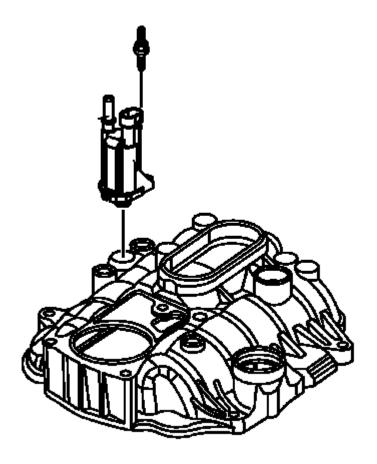


Fig. 557: Purge Solenoid & Nut Courtesy of GENERAL MOTORS COMPANY

- 11. If reusing the fasteners, apply threadlock GM P/N 12345382 (Canadian P/N 10953489) or equivalent, to the threads of the evaporative emission (EVAP) canister purge solenoid valve studs.
- 12. Install the EVAP canister purge solenoid valve and studs and tighten to 10 N.m (89 lb in).
- 13. Install the engine wiring harness bracket and nut and tighten to 12 N.m (106 lb in).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

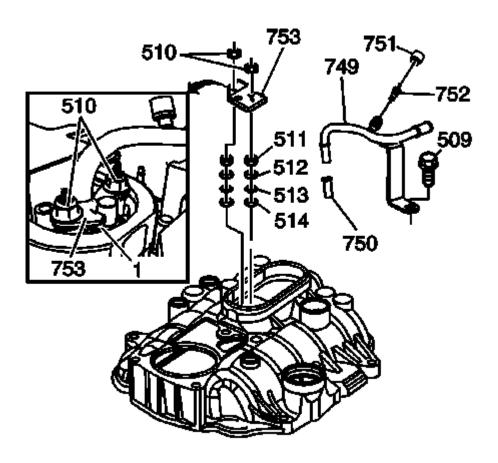

<u>Fig. 558: Fuel Pipes & New Seals</u> Courtesy of GENERAL MOTORS COMPANY


- 14. Install the NEW fuel seals (514), black O-rings, into the fuel meter body.
- 15. Install the NEW spacer rings (513), flat washers, into the fuel meter body.
- 16. Install the NEW fuel seals (512), yellow O-rings, into the fuel meter body.
- 17. Install the NEW fuel seal retainers (511) into the fuel meter body.
- 18. Install the fuel pipe plug (750), if required.
- 19. Install the fuel pipe (749) into the fuel meter body.

#### NOTE:

Make sure to properly align the fuel line retainer flanges (1) to face downward towards the fuel meter body and that flanges rest on the shoulders of the fuel plug and the fuel line. Failure to do so may cause the fuel plug and the fuel line to come out of the fuel meter body, resulting in fuel spillage.

- 20. Install the fuel pipe retainer bracket (753) onto the fuel pipe.
- 21. Install the fuel pipe retainer bracket nuts (510).
- 22. If reusing the fastener, apply threadlock GM P/N 12345382 (Canadian P/N 10953489) or equivalent, to the threads of the fuel pipe bolt.

- 23. Install the fuel service port cap (751) and schrader valve (752), if required.
- 24. Install the fuel pipe bolt (509).
  - 1. Tighten the fuel pipe bracket nuts to 3 N.m (27 lb in).
  - 2. Tighten the fuel pipe bolt to 6 N.m (53 lb in).

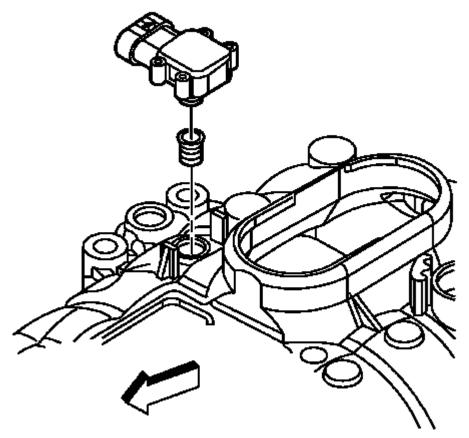

<u>Fig. 559: MAP Sensor</u> Courtesy of GENERAL MOTORS COMPANY

- 25. Install a NEW manifold absolute pressure (MAP) sensor seal onto the MAP sensor.
- 26. Apply a small amount, approximately 1 drop, of clean engine oil to the MAP sensor seal.
- 27. Install the MAP sensor into the upper intake manifold.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

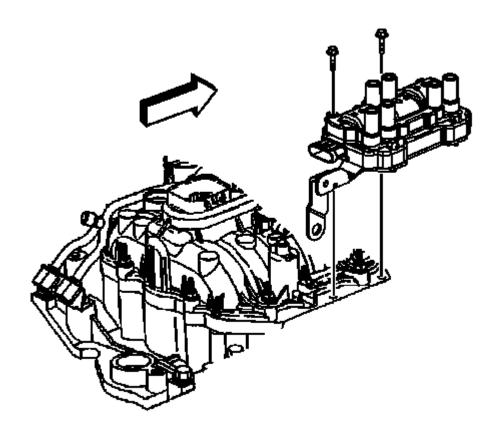


Fig. 560: View Of Studs And Ignition Coil Courtesy of GENERAL MOTORS COMPANY

28. Install the ignition coil and studs and tighten to 12 N.m (106 lb in).


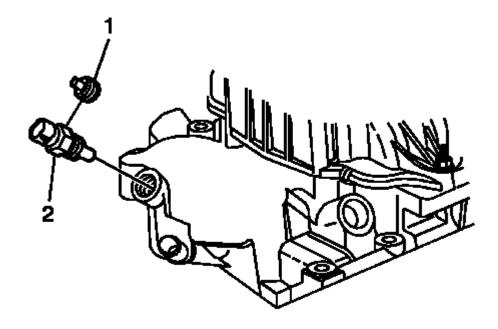


Fig. 561: ECT Sensor & Plug Courtesy of GENERAL MOTORS COMPANY

- 29. If reusing the engine coolant temperature (ECT) sensor plug (1) or the ECT sensor (2), if equipped, apply sealant GM P/N 12346004 (Canadian P/N 10953480) or equivalent, to the threads of the ECT sensor plug (1) or the ECT sensor (2).
- 30. Install the ECT sensor or plug, if equipped, into the front of the lower intake manifold. Tighten the ECT sensor or plug to 20 N.m (15 lb ft).

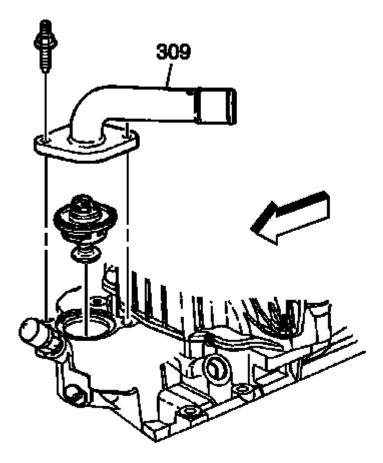

<u>Fig. 562: Engine Coolant Thermostat</u> Courtesy of GENERAL MOTORS COMPANY

- 31. Install the engine coolant thermostat.
- 32. Install the water outlet (309).
- 33. Install the water outlet studs and tighten to 25 N.m (18 lb ft).


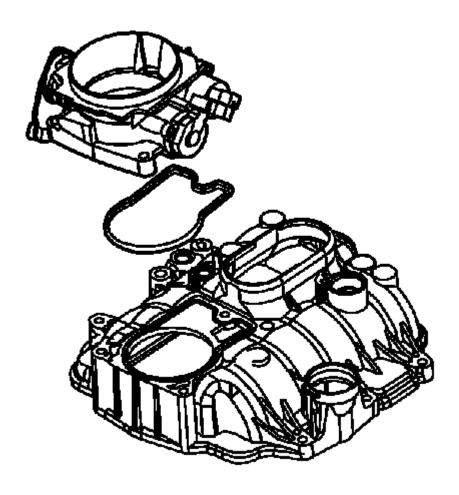


Fig. 563: View Of Throttle Body & Gasket Courtesy of GENERAL MOTORS COMPANY


- 34. Install a NEW throttle body gasket into the groove in the upper intake manifold.
- 35. Install the throttle body onto the upper intake manifold.

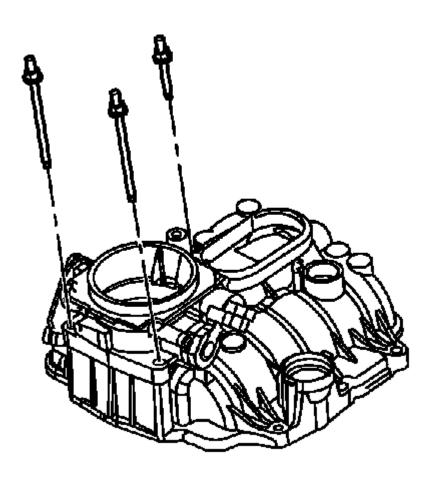

<u>Fig. 564: View Of Throttle Body & Attaching Studs</u> Courtesy of GENERAL MOTORS COMPANY

- 36. If reusing the fasteners, apply threadlock GM P/N 12345382 (Canadian P/N 10953489) or equivalent, to the threads of the throttle body attaching studs.
- 37. Install the throttle body attaching studs and tighten to 10 N.m (89 lb in).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

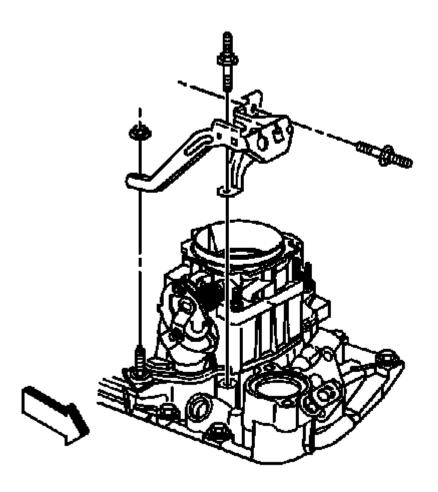


<u>Fig. 565: View Of Accelerator Control Cable Bracket</u> Courtesy of GENERAL MOTORS COMPANY

- 38. Install the accelerator control cable bracket, the studs and the nuts.
  - 1. Tighten the accelerator control cable bracket stud to the intake manifold to 6 N.m (53 lb in).
  - 2. Tighten the accelerator control cable bracket nuts to 12 N.m (106 lb in).
  - 3. Tighten the accelerator control cable bracket stud to the throttle body to 12 N.m (106 lb in).

#### EXHAUST MANIFOLD CLEANING AND INSPECTION

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

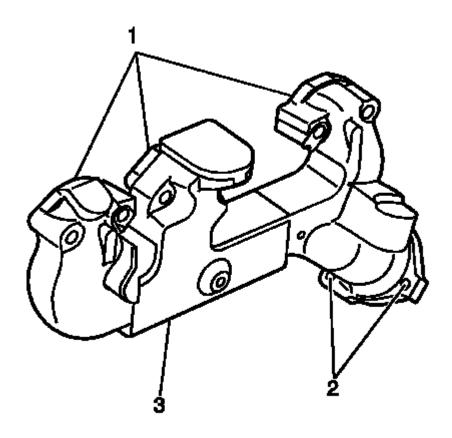

<u>Fig. 566: Exhaust Manifold Inspection Areas</u> Courtesy of GENERAL MOTORS COMPANY

WARNING: Refer to <u>Safety Glasses Warning</u>.

- 1. Clean the exhaust manifolds in cleaning solvent.
- 2. Dry the components with compressed air.
- 3. Inspect the exhaust manifolds for the following:
  - Damage to the gasket sealing surfaces (1)
  - Damage to the threaded holes (2)
  - Restrictions within exhaust passages
  - Broken or damaged exhaust manifold heat shields (3), if applicable
  - Broken or damaged exhaust manifold

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

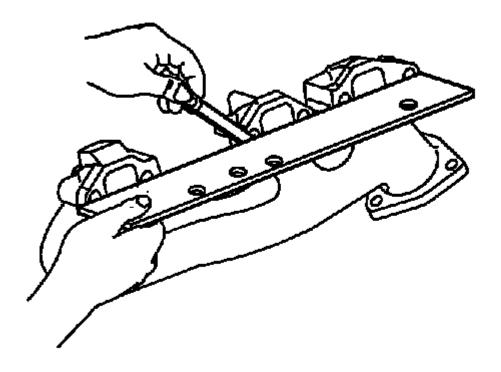



Fig. 567: Measuring Exhaust Manifold Flanges Alignment Courtesy of GENERAL MOTORS COMPANY

4. Measure the alignment or surface flatness of the exhaust manifold flanges using a straight edge and a feeler gauge. Refer to **Engine Mechanical Specifications**.

If the surface flatness is not within the specifications, the exhaust manifold is warped and must be replaced.

# WATER PUMP CLEANING AND INSPECTION

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

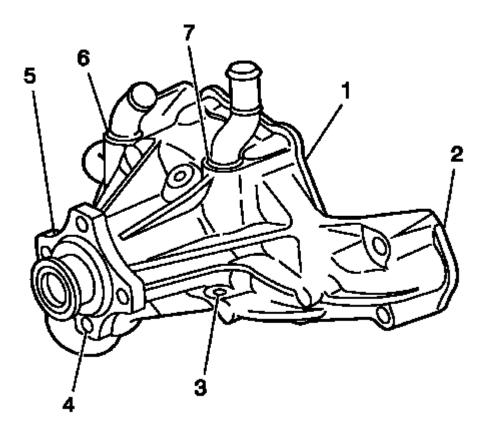

<u>Fig. 568: Water Pump Inspection Areas</u> Courtesy of GENERAL MOTORS COMPANY

WARNING: Refer to <u>Safety Glasses Warning</u>.

- 1. Remove the old gasket material from the water pump sealing surfaces.
- 2. Clean all the dirt and any debris from the water pump.
- 3. Inspect the water pump for the following:
  - Leakage or damage to the housing cover or gasket (1)
  - Excessive scratches or gouging to the gasket sealing surfaces (2)
  - Leakage from the water pump vent hole (3)

A stain around the vent hole is acceptable. If leakage occurred (dripping) with the engine operating and the cooling system pressurized, then replace the water pump.

- Damaged bolt hole threads (4)
- Excessive side-to-side movement of the water pump shaft (5)
- Leakage around the water inlet pipe (6)
- Leakage around the heater hose pipe (7)

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

• Restrictions within the internal coolant passages

#### THREAD REPAIR

General purpose thread repair kits are available commercially.

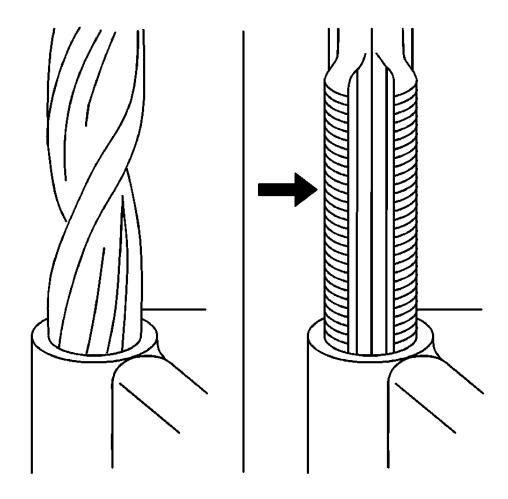


Fig. 569: Drilling & Tapping Damaged Threads Courtesy of GENERAL MOTORS COMPANY

WARNING: Refer to Safety Glasses Warning.

NOTE: Refer to the thread repair kit manufacturer's instructions regarding the size of the drill and which tap to use.

Always avoid any buildup of chips. Back out the tap every few turns and

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

# remove the chips.

- 1. Determine the size, the pitch and the depth of the damaged thread.
- 2. Adjust the stop collars on the cutting tool as needed. Tap the stop collars to the required depth.
- 3. Drill out the damaged thread.
- 4. Remove the chips.
- 5. Apply clean engine oil to the top thread.
- 6. Use the tap in order to cut new thread.
- 7. Clean the thread.

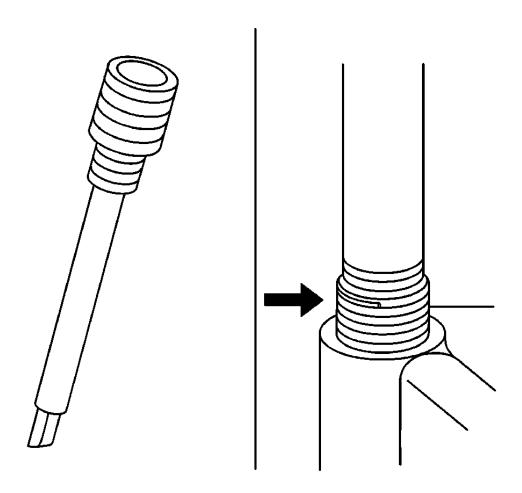


Fig. 570: View Of Thread Insert Courtesy of GENERAL MOTORS COMPANY

8. Screw the thread insert onto the mandrel of the thread insert installer. Engage the tang of the thread insert onto the end of the mandrel.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

#### NOTE: The thread insert should be flush to 1 turn below the surface.

- 9. Lubricate the thread insert with clean engine oil except when installing in aluminum and install the thread insert.
- 10. If the tang of the thread insert does not break off when backing out the thread insert installer, break off the tang using a drift punch.

#### SERVICE PRIOR TO ASSEMBLY

- Dirt will cause premature wear of the rebuilt engine. Clean all the components.
- Use the proper tools to measure the components when checking for excessive wear. Components not within the manufacturer's specification must be repaired or replaced.
- When the components are re-installed into an engine, return the components to the original location, position and direction.
- During assembly, lubricate all the moving parts with clean engine oil, unless otherwise specified. The engine oil will provide the initial lubrication when the engine is first started.


#### ENGINE BLOCK PLUG INSTALLATION

#### **Special Tools**

J 41712 Oil Pressure Switch Socket

For equivalent regional tools, refer to **Special Tools**.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

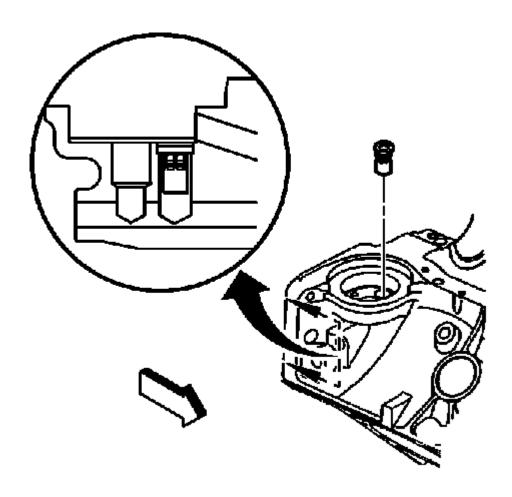

<u>Fig. 571: Locating Oil Filter Bypass Valve</u> Courtesy of GENERAL MOTORS COMPANY

WARNING: Refer to Safety Glasses Warning.

- 1. Install a NEW oil filter bypass valve.
  - 1. Install the oil filter bypass valve into the oil gallery bore until slightly below flush with the surface of the engine block.
  - 2. Using a pointed punch, stake the engine block area around the oil filter bypass valve.

Stake in 3 locations 120 degrees apart.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

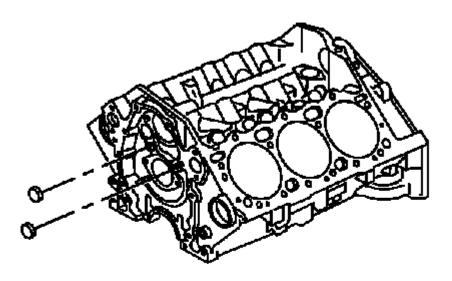


Fig. 572: Front Of Engine Block Front Oil Gallery Plugs Or Balls Courtesy of GENERAL MOTORS COMPANY

- 2. Apply sealant GM P/N 12346004 (Canadian P/N 10953480) or equivalent, to the outside diameter of the NEW front engine oil gallery plugs.
- 3. Install the NEW front engine block oil gallery plugs.

A properly installed front engine oil gallery plug must be installed slightly below flush with the front face of the engine block.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


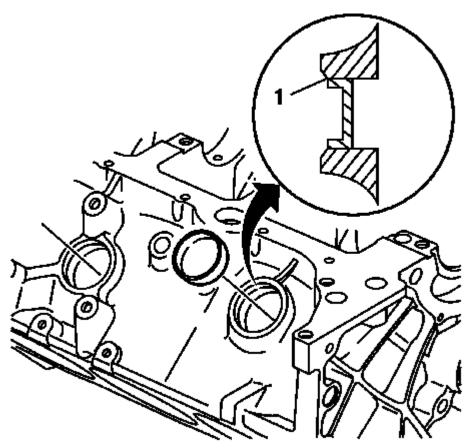


Fig. 573: Engine Block Core Hole Chamfer Courtesy of GENERAL MOTORS COMPANY

- 4. Apply threadlock GM P/N 12345382 (Canadian P/N 10953489) or equivalent, to the outside diameter of the NEW engine block core hole plugs.
- 5. Install the NEW engine block core hole plugs.

A properly installed engine block core hole plug must be installed flush or below the bottom of the chamfer (1) of the engine block core hole.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

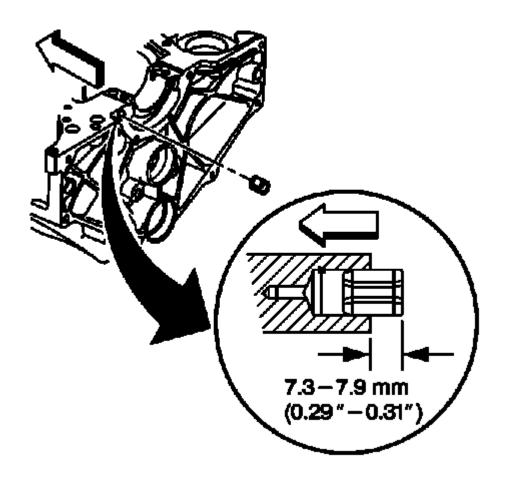

<u>Fig. 574: Installing Crankshaft Rear Oil Seal Housing Locator Spring</u> Courtesy of GENERAL MOTORS COMPANY

6. Install the crankshaft rear oil seal housing locator spring type S pin, if required.


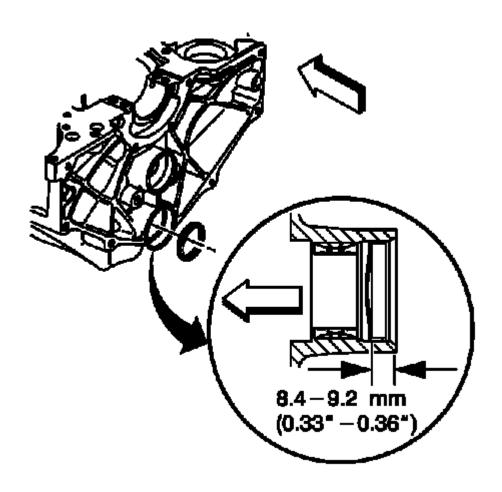


Fig. 575: Installing Expansion Cup Plug Into Balance Shaft Rear Bearing Bole Courtesy of GENERAL MOTORS COMPANY


- 7. Apply sealant GM P/N 12346004 (Canadian P/N 10953480) or equivalent, to the outside diameter of the NEW expansion cup plug.
- 8. Install the NEW expansion cup plug into the balance shaft rear bearing hole.

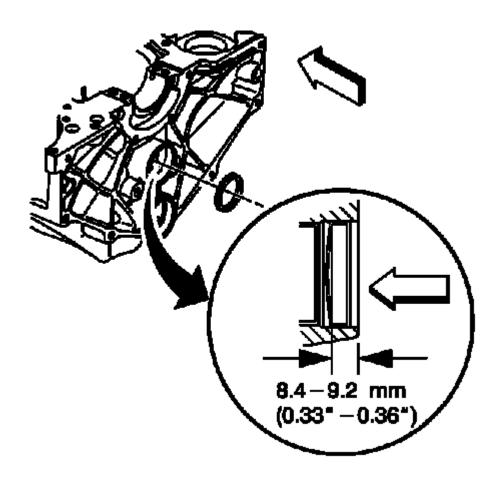

<u>Fig. 576: Installing Expansion Cup Plug Into Camshaft Rear Bearing Hole</u> Courtesy of GENERAL MOTORS COMPANY

- 9. Apply sealant GM P/N 12346004 (Canadian P/N 10953480) or equivalent, to the outside diameter of the NEW expansion cup plug.
- 10. Install the NEW expansion cup plug into the camshaft rear bearing hole.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

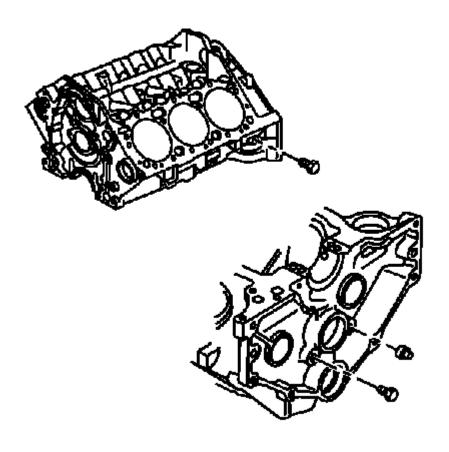


<u>Fig. 577: Engine Block Oil Gallery Plugs</u> Courtesy of GENERAL MOTORS COMPANY

11. Apply sealant GM P/N 12346004 (Canadian P/N 10953480) or equivalent, to the threads of the engine block right rear oil gallery plug, the engine block left rear oil gallery plug and the engine block left side oil gallery plug.

## **CAUTION: Refer to Fastener Caution.**

- 12. Install the engine block right rear oil gallery plug, the engine block left rear oil gallery plug and the engine block left side oil gallery plug.
  - 1. Tighten the engine block left side oil gallery plug and the engine block right rear oil gallery plug to 20 N.m (15 lb ft).
  - 2. Tighten the engine block left rear oil gallery plug to 30 N.m (22 lb ft).


2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

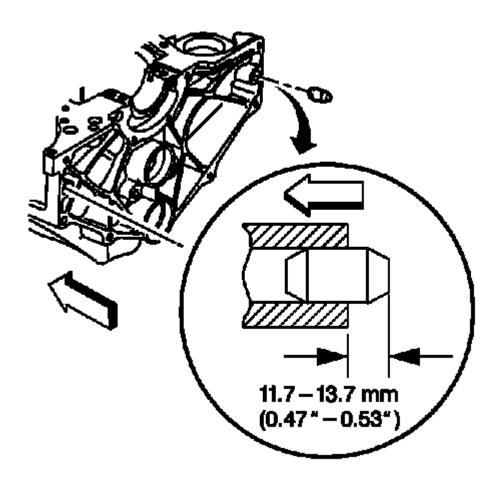

<u>Fig. 578: Installing Transmission Locator Dowel Straight Pins</u> Courtesy of GENERAL MOTORS COMPANY

13. Install the transmission locator dowel straight pins, if required.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

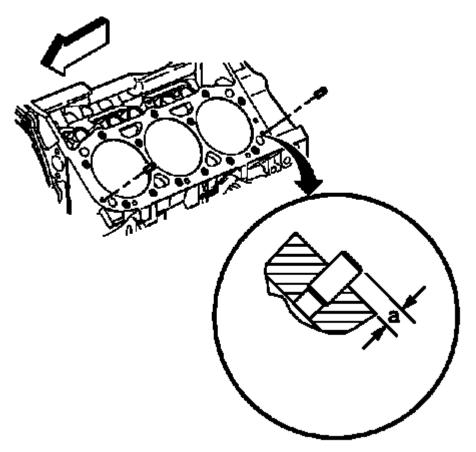


<u>Fig. 579: Left Side Cylinder Head Locator Dowel Pins Proper Installation Position</u> Courtesy of GENERAL MOTORS COMPANY

14. Install the left side cylinder head locator dowel pins, if required.

The installation height should be 6.3-6.5 mm (0.248-0.256 in) (a).


2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

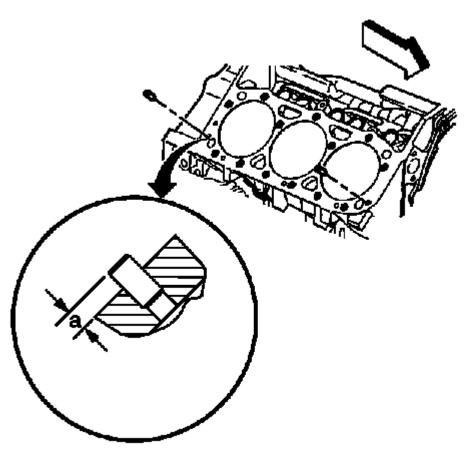

<u>Fig. 580: Right Side Cylinder Head Locator Dowel Pins Proper Installation Position</u> Courtesy of GENERAL MOTORS COMPANY

15. Install the right side cylinder head locator dowel pins, if required.


The installation height should be 6.3-6.5 mm (0.248-0.256 in) (a).

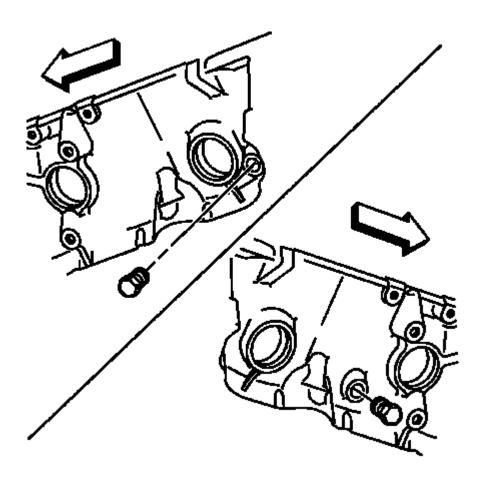

<u>Fig. 581: View Of Engine Block Coolant Drain Hole Plugs</u> Courtesy of GENERAL MOTORS COMPANY

- 16. Apply sealant GM P/N 12346004 (Canadian P/N 10953480) or equivalent, to the threads of the engine block coolant drain hole plugs.
- 17. Install the engine block coolant drain hole plugs and tighten to 20 N.m (15 lb ft).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

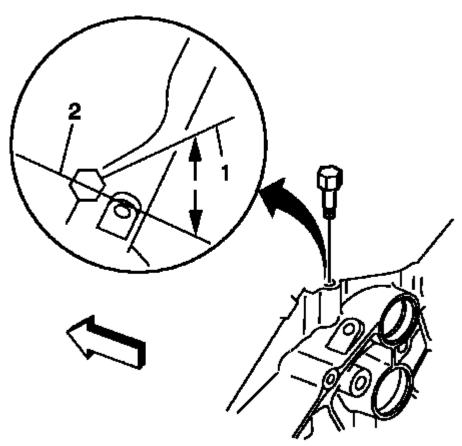

<u>Fig. 582: Engine Oil Pressure Sensor Proper Installation Position</u> Courtesy of GENERAL MOTORS COMPANY


18. If reusing the engine oil pressure sensor fitting, apply sealant GM P/N 12346004 (Canadian P/N 10953480) or equivalent, to the threads of the engine oil pressure sensor fitting.

NOTE: Do not loosen the engine oil pressure fitting after the initial torque has been obtained.

19. Install the engine oil pressure sensor fitting and tighten to 15 N.m (11 lb ft).

NOTE: Do not rotate the engine oil pressure fitting clockwise more than 359 degrees after the initial torque has been obtained.


20. Rotate the engine oil pressure sensor fitting clockwise to the proper position (1), 50 degrees from the centerline (2).

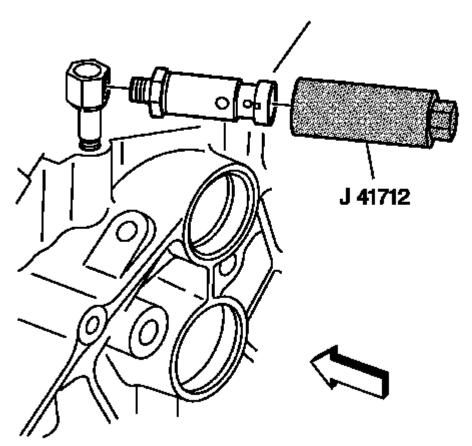

<u>Fig. 583: View Of Engine Oil Pressure Gage Sensor</u> Courtesy of GENERAL MOTORS COMPANY

- 21. If reusing the engine oil pressure gauge sensor, apply sealant GM P/N 12346004 (Canadian P/N 10953480) or equivalent, to the threads of the engine oil pressure gauge sensor.
- 22. Install the engine oil pressure gauge sensor using the **J 41712** socket. Tighten the engine oil pressure gauge sensor to 30 N.m (22 lb ft).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

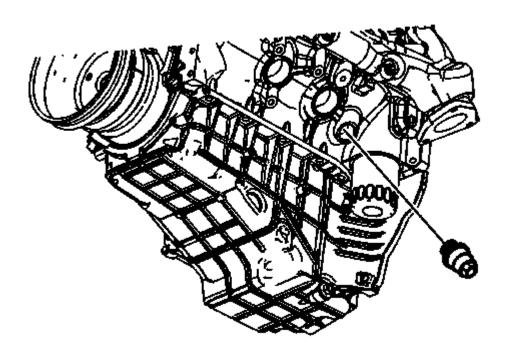

<u>Fig. 584: Block Heater</u> Courtesy of GENERAL MOTORS COMPANY

23. Install the block heater from the right side of the lower engine block and tighten to 50 N.m (37 lb ft).


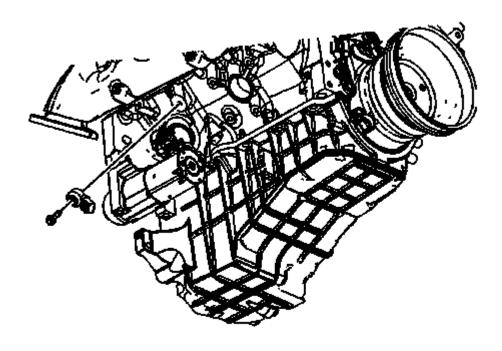


Fig. 585: View Of Knock Sensor & Bolt Courtesy of GENERAL MOTORS COMPANY

- 24. Install the knock sensor on the right side of the lower engine block.
- 25. Install the knock sensor bolt and tighten to 25 N.m (18 lb ft).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

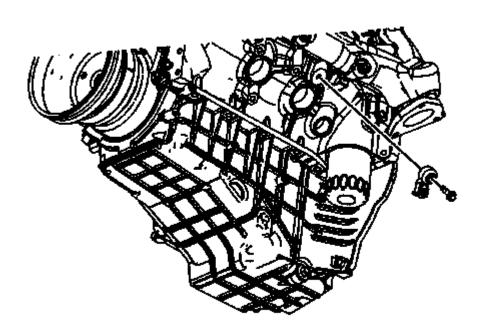

# Fig. 586: View Of Knock Sensor & Bolt Courtesy of GENERAL MOTORS COMPANY


- 26. Install the knock sensor on the left side of the lower engine block.
- 27. Install the knock sensor bolt and tighten to 25 N.m (18 lb ft).

## CRANKSHAFT AND BEARING INSTALLATION

# **Special Tools**

J 45059 Angle Meter

For equivalent regional tools, refer to **Special Tools** 

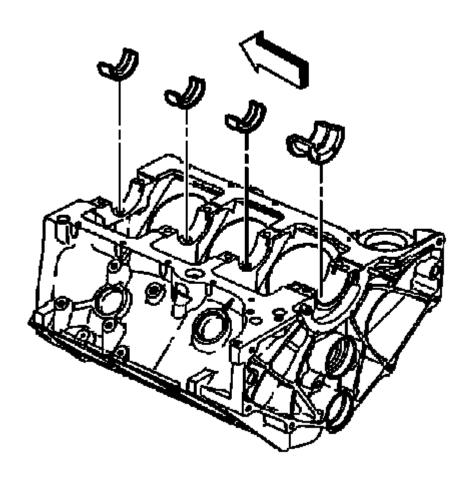

<u>Fig. 587: View Of Crankshaft Bearings At Engine Block</u> Courtesy of GENERAL MOTORS COMPANY

- 1. Install the crankshaft bearings into the engine block.
- 2. Apply clean engine oil to the crankshaft bearings.


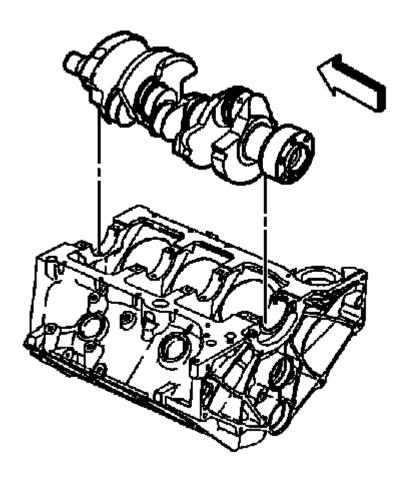


Fig. 588: View Of Crankshaft
Courtesy of GENERAL MOTORS COMPANY


- 3. Apply clean engine oil to the crankshaft bearing journals.
- 4. Install the crankshaft.

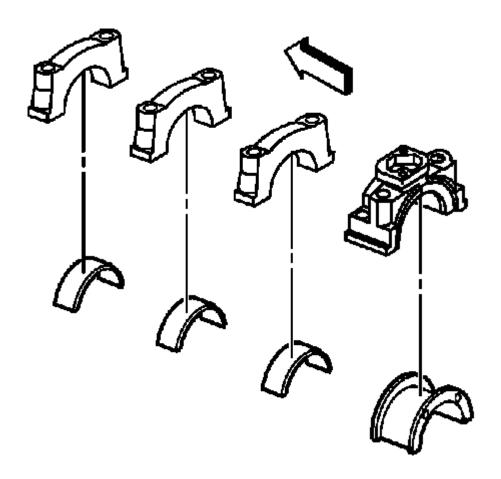

<u>Fig. 589: View Of Crankshaft Bearings & Crankshaft Bearing Caps</u> Courtesy of GENERAL MOTORS COMPANY

- 5. Install the crankshaft bearings into the crankshaft bearing caps.
- 6. Apply clean engine oil to the crankshaft bearings.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

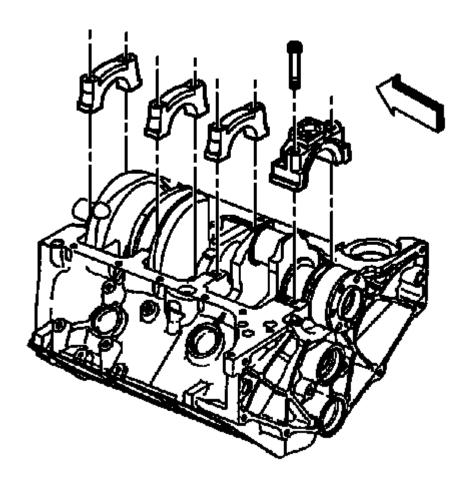

<u>Fig. 590: Crankshaft Bearing Caps</u> Courtesy of GENERAL MOTORS COMPANY

- 7. Install the crankshaft bearing caps in the original position and with the arrow on the crankshaft bearing caps in the direction of the front of the engine block.
- 8. Install the NEW crankshaft bearing cap bolts until snug.
- 9. Thrust the crankshaft rearward in order to set and align the crankshaft thrust bearings and the crankshaft bearing caps.
- 10. Thrust the crankshaft forward in order to align the rear faces of the crankshaft thrust bearings.

# **CAUTION: Refer to Fastener Caution**

- 11. Tighten the crankshaft bearing cap bolts.
  - Tighten the crankshaft bearing cap bolts on the first pass to 20 N.m (15 lb ft).
  - Tighten the crankshaft bearing cap bolts on the final pass an additional 73 degrees using the **J 45059** meter.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

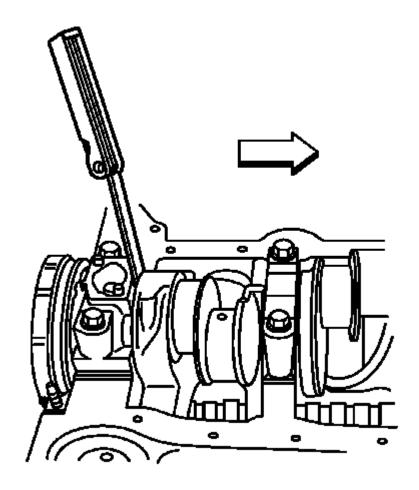


Fig. 591: Measuring Crankshaft End Play Courtesy of GENERAL MOTORS COMPANY

- 12. Measure the crankshaft end play.
  - 1. Firmly thrust the crankshaft rearward and then forward.

This will align the crankshaft rear bearing thrust surfaces.

- 2. With the crankshaft pushed forward, insert a feeler gauge between the crankshaft and the crankshaft rear bearing thrust surface to measure the clearance. Crankshaft end play 0.05-0.20 mm (0.002-0.008 in)
- 13. Rotate the crankshaft in order to check for binding.

A bent crankshaft or lack of proper crankshaft bearing clearance may cause binding.

14. If the crankshaft does not turn freely, loosen the crankshaft bearing cap bolts on 1 crankshaft bearing cap at a time in order to determine the location of the binding.

A lack of proper crankshaft bearing clearance may be caused by the following:

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- Burrs on the crankshaft bearing cap
- Foreign material between the crankshaft bearing and the engine block
- Foreign material between the crankshaft bearing and the crankshaft bearing cap
- Damaged crankshaft bearing
- Improper size crankshaft bearing

#### CRANKSHAFT REAR OIL SEAL AND HOUSING INSTALLATION

## **Special Tools**

J 35621-B Rear Main Seal Installer

For equivalent regional tools, refer to **Special Tools**.


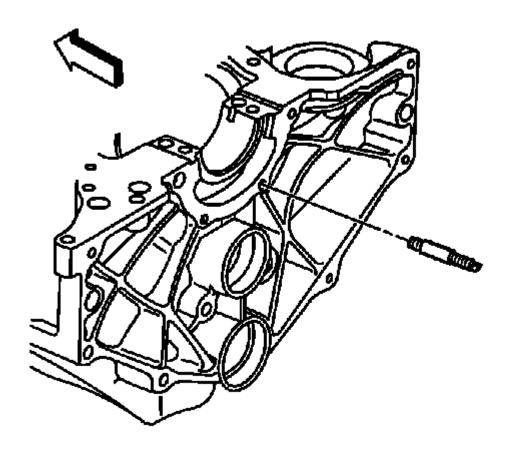


Fig. 592: Locating Crankshaft Rear Oil Seal Housing Retainer Stud Courtesy of GENERAL MOTORS COMPANY

**CAUTION: Refer to Fastener Caution.** 

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

1. Install the crankshaft rear oil seal housing retainer stud and tighten to 6 N.m (53 lb in).

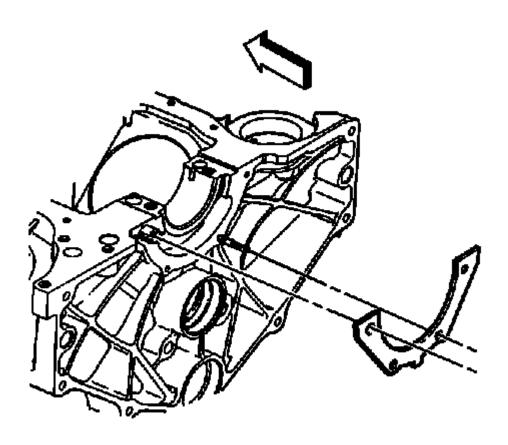

<u>Fig. 593: Identifying Crankshaft Rear Oil Seal Housing Gasket</u> Courtesy of GENERAL MOTORS COMPANY

NOTE: Always use a NEW crankshaft rear oil seal housing gasket when installing the crankshaft rear oil seal housing.

2. Install the NEW crankshaft rear oil seal housing gasket.

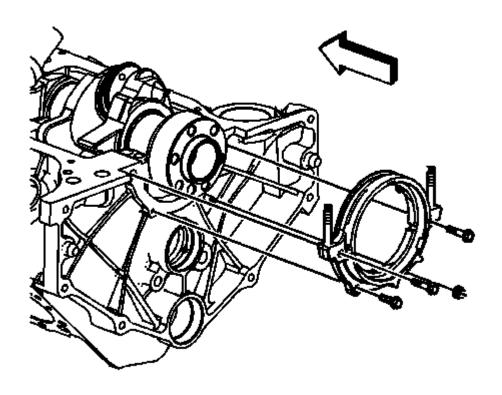


Fig. 594: View Of Crankshaft Rear Oil Housing Courtesy of GENERAL MOTORS COMPANY

- 3. Install the crankshaft rear oil housing onto the crankshaft rear oil seal housing retainer stud.
- 4. Install the crankshaft rear oil seal housing nut and bolts and tighten to 12 N.m (106 lb in).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

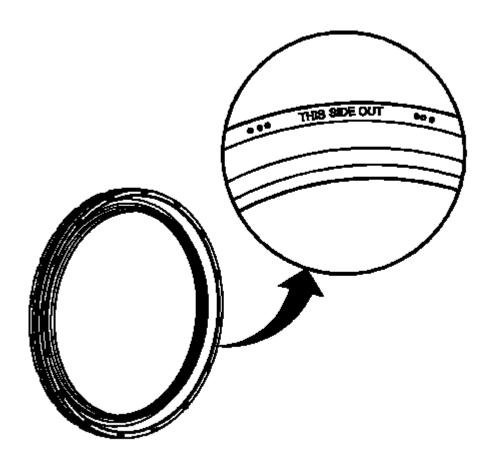


Fig. 595: Identifying Crankshaft Rear Oil Seal Courtesy of GENERAL MOTORS COMPANY

NOTE:


Notice the direction of the rear oil seal. The new design seal is a reverse style as opposed to what has been used in the past. "THIS SIDE OUT" has been stamped into the seal as shown in the graphic.

- 5. Inspect the **J 35621-B** installer flange for imperfections that may damage the crankshaft rear oil seal. Minor imperfections may be removed with a fine grade emery cloth.
- 6. Clean the crankshaft sealing surface with a clean, lint free towel. Inspect the lead-in edge of the crankshaft for burrs or sharp edges that could damage the rear main oil seal. Remove the burrs or sharp edges with a fine grade emery cloth before proceeding.

NOTE: Do not apply or use any oil lubrication on the crankshaft rear oil seal or seal installer. Do not touch the sealing lip of the oil seal once the protective sleeve is removed.

7. Carefully remove the protection sleeve from the NEW crankshaft rear oil seal.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

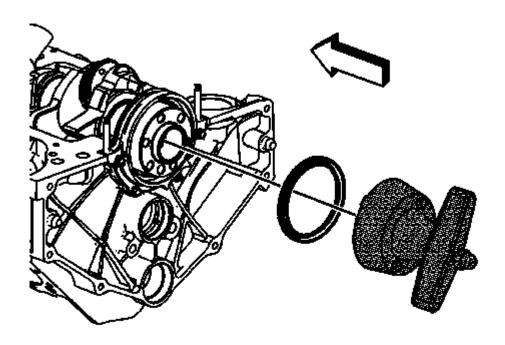

# Fig. 596: Identifying Crankshaft Rear Oil Seal Courtesy of GENERAL MOTORS COMPANY

- 8. Install the crankshaft rear oil seal onto the **J 35621-B** installer.
- 9. Install the J 35621-B installer onto the rear of the crankshaft and hand tighten the tool bolts until snug.

## **CAUTION: Refer to Fastener Caution.**

- 10. Install the crankshaft rear oil seal onto the crankshaft and into the crankshaft rear oil seal housing.
  - 1. Turn the **J 35621-B** installer wing nut clockwise until the crankshaft rear oil seal is installed near to flush and square to the crankshaft rear oil seal housing. Increased resistance will be felt when the crankshaft rear oil seal has reached the bottom of the crankshaft rear oil seal housing bore.
  - 2. Turn the J 35621-B installer wing nut counterclockwise to release the J 35621-B installer from the crankshaft rear oil seal.
- 11. Remove the **J 35621-B** installer from the crankshaft.
- 12. Wipe off any excess engine oil with a clean rag.

#### PISTON, CONNECTING ROD AND BEARING INSTALLATION

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

#### **Special Tools**


- J 8037 Ring Compressor
- J 8087 Cylinder Bore Gauge
- **J 45059** Angle Meter

For equivalent regional tools, refer to Special Tools.

#### NOTE:

Powdered metal connecting rods and rod bearing caps are NOT interchangeable and must be assembled with the mating surfaces properly oriented and aligned. Piston, piston pin and connecting rod are to be serviced as an assembly.

#### **Piston Selection**

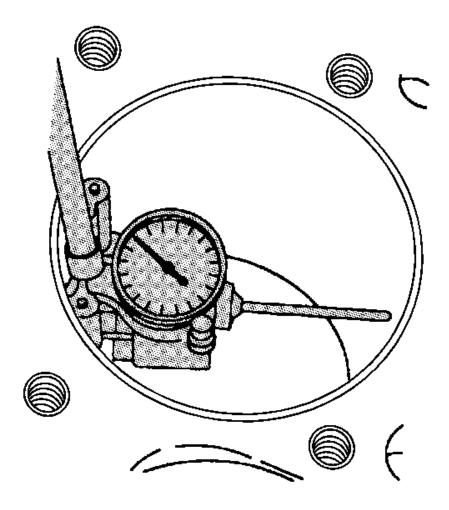

<u>Fig. 597: Measuring Cylinder Bore</u> Courtesy of GENERAL MOTORS COMPANY

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

NOTE: Measurements of all components should be taken with the components at normal room temperature.

For proper piston fit, the engine block cylinder bores should not have excessive wear or taper.

A used piston and piston pin set may be reinstalled if, after cleaning and inspection, the piston and piston pin are within specifications.

1. Use the **J 8087** gauge in order to measure the cylinder bore diameter. Measure at a point 64 mm (2.5 in) from the top of the cylinder bore and 90 degrees to the crankshaft centerline.

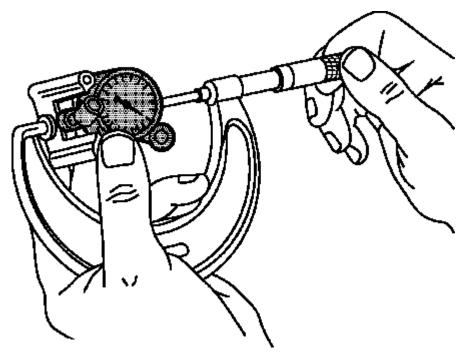


Fig. 598: Measuring Bore Gauge With Micrometer Courtesy of GENERAL MOTORS COMPANY

2. Measure the J 8087 gauge with a micrometer and record the reading.

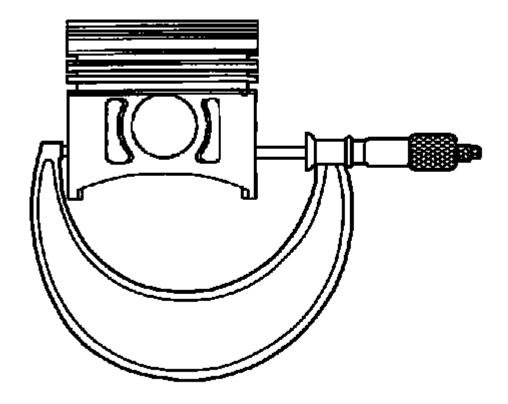


Fig. 599: Measuring Piston Outside Diameter Using Micrometer Courtesy of GENERAL MOTORS COMPANY

- 3. With a micrometer or caliper at a right angle to the piston pin bore, measure the piston 11 mm (0.433 in) from the bottom of the skirt.
- 4. Subtract the piston diameter from the cylinder bore diameter in order to determine piston-to-bore clearance. Refer to **Engine Mechanical Specifications**.
- 5. If the proper clearance cannot be obtained, then select another piston and measure the clearances.

If the proper fit cannot be obtained, the cylinder bore may require honing or boring.


6. When the piston-to-cylinder bore clearance is within specifications, permanently mark the top of the piston for installation into the proper cylinder.

#### **Installation Procedure**

- 1. Apply clean engine oil to the following components:
  - The piston
  - The piston rings
  - The cylinder bore

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

• The bearing surfaces

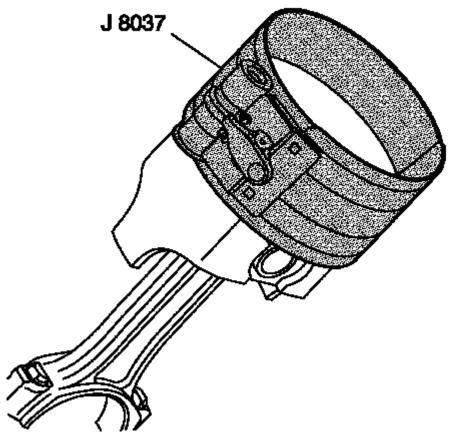

<u>Fig. 600: Compressing Piston Rings With J 8037</u> Courtesy of GENERAL MOTORS COMPANY

2. Install the  ${\bf J}$  8037 compressor onto the piston and compress the piston rings.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

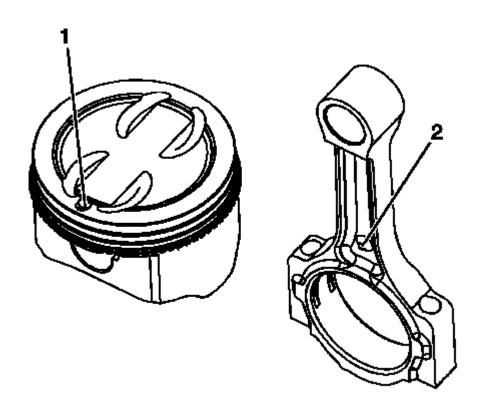


Fig. 601: View Of Piston
Courtesy of GENERAL MOTORS COMPANY

## NOTE:

When assembled, the following reference marks must be addressed; the reference mark on top of the piston (1) must face the front of the engine block. The dimple on the connecting rod (2) must face the front of the engine block on cylinders 2, 4 and 6 and towards the rear of the engine block on cylinders 1, 3 and 5. Wrap a clean, lint free towel around the connecting rod ends when installing the piston into the cylinder so as not to damage the crankshaft journals or cylinder bore.

3. Check reference marks prior to installation into the block.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

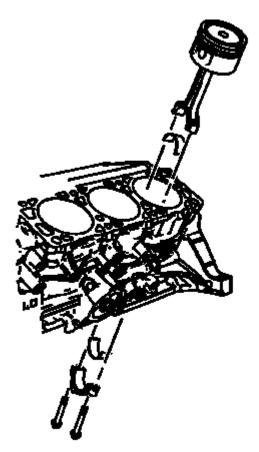


Fig. 602: View Of Connecting Rod & Piston Assembly Courtesy of GENERAL MOTORS COMPANY

4. Install the piston and connecting rod assembly and the J 8037 compressor into the proper cylinder bore.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

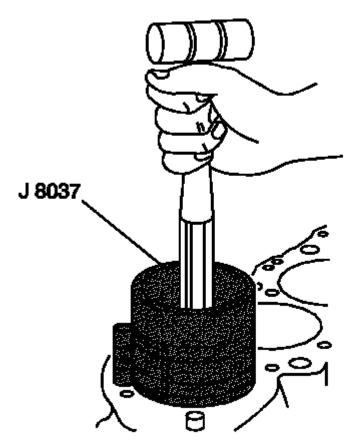


Fig. 603: Installing Piston & Connecting Rod Assembly Into Engine Courtesy of GENERAL MOTORS COMPANY

5. Use the J 8037 compressor and lightly tap the top of the piston with a wooden hammer handle.

Hold the J 8037 compressor firmly against the engine block until all of the piston rings have entered the cylinder bore.

NOTE:

The connecting rods and rod bearing caps are NOT interchangeable. Reference the match marks on the connecting rods and the connecting rod bearing caps made in the removal procedure to ensure that they are assembled in their original position and direction, with the connecting rod/rod bearing cap mating surfaces properly oriented and aligned.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


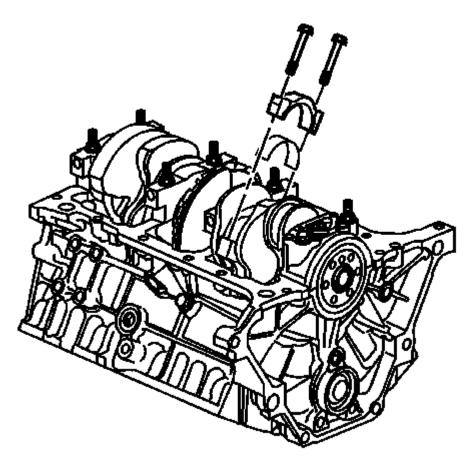


Fig. 604: View Of Bearing, Bearing Cap & Bolts Courtesy of GENERAL MOTORS COMPANY

**CAUTION: Refer to Fastener Caution**.

- 6. Install the connecting rod bearing, cap and bolts.
  - 1. Tighten the bolts evenly on the first pass to 20 N.m (15 lb ft).
  - 2. Use the **J 45059** meter in order to tighten the bolts on the final pass an additional 100 degrees.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

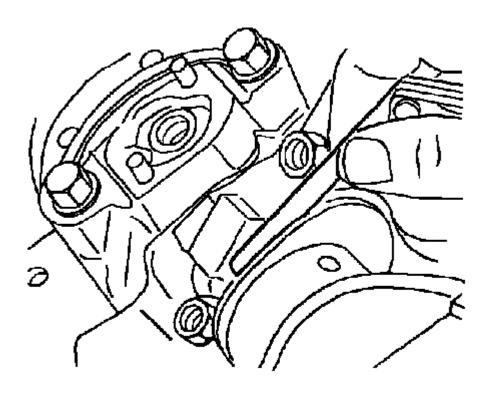


<u>Fig. 605: Measuring Connecting Rod Side Clearance</u> Courtesy of GENERAL MOTORS COMPANY

- 7. After the piston and connecting rod assemblies have been installed, lightly tap each connecting rod assembly, parallel to the crankpin, in order to ensure that the connecting rods have side clearance.
- 8. Use a feeler gauge or a dial indicator to measure the connecting rod side clearance between the connecting rod caps. The connecting rod side clearance should be 0.15-0.44 mm (0.006-0.017 in).

#### **CAMSHAFT INSTALLATION**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

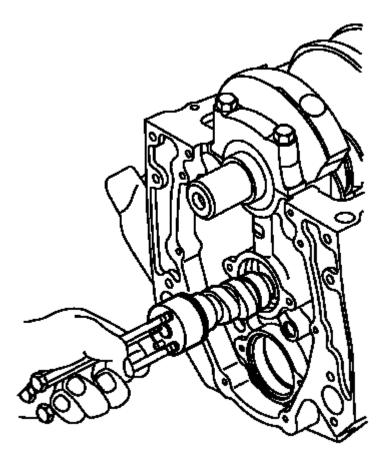

<u>Fig. 606: Handling Camshaft Using Three 5/16-18 X 4.0 Inch Bolts</u> Courtesy of GENERAL MOTORS COMPANY

- 1. Apply clean engine oil GM P/N 12345610 (Canadian P/N 993193) or equivalent or engine oil supplement GM P/N 1052367 (Canadian P/N 992367) or equivalent, to the following components:
  - The engine camshaft lobes
  - The camshaft bearing journals
  - The camshaft bearings
  - The distributor drive gear
- 2. Install three  $5/16-18 \times 4.0$  inch bolts into the engine camshaft front bolt holes.

CAUTION: All camshaft journals are the same diameter, so care must be used in removing or installing the camshaft to avoid damage to the camshaft bearings.

- 3. Use the bolts as a handle in order to install the engine camshaft.
- 4. Remove the 3 bolts from the front of the engine camshaft.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

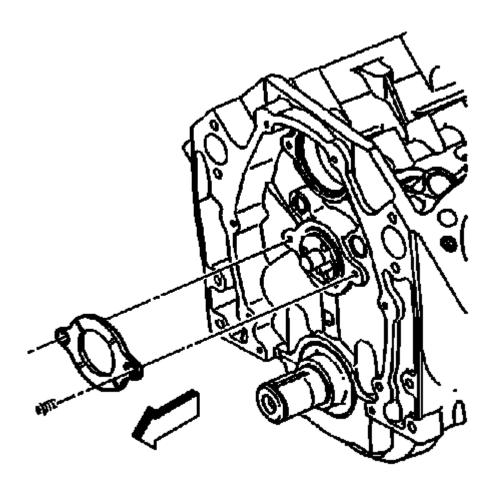


Fig. 607: View Of Camshaft Retainer & Bolts
Courtesy of GENERAL MOTORS COMPANY

5. If reusing the fasteners, apply threadlock GM P/N 12345382 (Canadian P/N 10953489) or equivalent, to the threads of the camshaft retainer bolts.

# **CAUTION: Refer to Fastener Caution**.

6. Install the camshaft retainer and bolts and tighten to 12 N.m (106 lb in).

## **BALANCE SHAFT INSTALLATION**

## **Special Tools**

- J 8092 Universal Driver Handle
- J 36996 Balance Shaft Installer
- **J 45059** Angle Meter

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

For equivalent regional tools, refer to **Special Tools**.

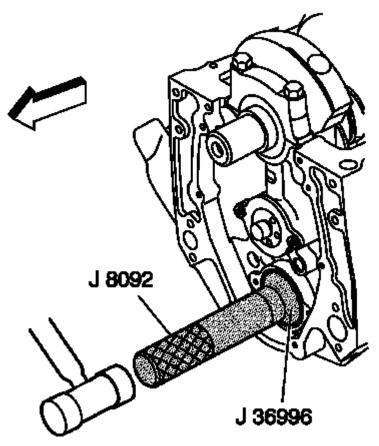


Fig. 608: Installing Balance Shaft
Courtesy of GENERAL MOTORS COMPANY

NOTE: The balance shaft and the balance shaft front bearing are serviced only as an assembly. Do not remove the balance shaft front bearing from the balance shaft.

1. Apply clean engine oil GM P/N 12345610 (Canadian P/N 993193) or equivalent, to the balance shaft front bearing.

WARNING: Refer to Safety Glasses Warning.

2. Use the J 36996 installer and the J 8092 handle in order to install the balance shaft.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

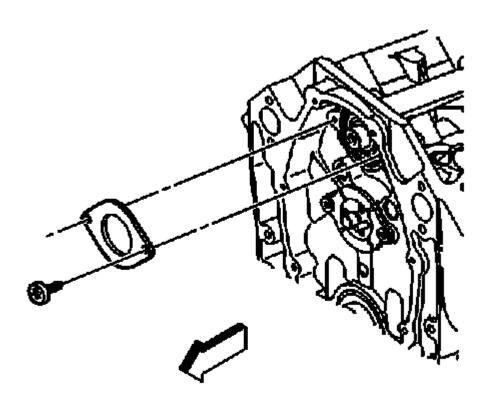


Fig. 609: View of Balance Shaft Retainer & Bolts Courtesy of GENERAL MOTORS COMPANY

**CAUTION: Refer to Fastener Caution.** 

3. Install the balance shaft retainer and bolts and tighten to 12 N.m (106 lb in).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

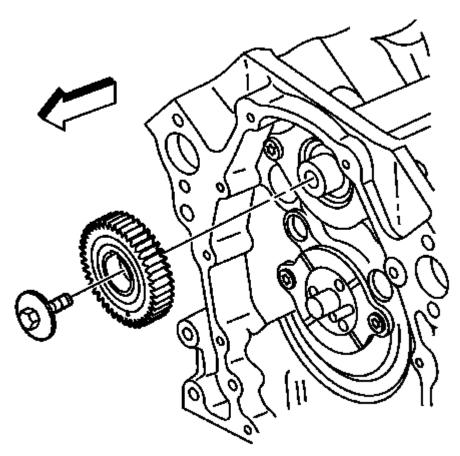


Fig. 610: Locating Balance Shaft Driven Gear Courtesy of GENERAL MOTORS COMPANY

- 4. Install the balance shaft driven gear onto the balance shaft.
- 5. If reusing the fastener, apply threadlock GM P/N 12345382 (Canadian P/N 10953489) or equivalent, to the threads of the balance shaft driven gear bolt.
- 6. Install the balance shaft driven gear bolt.
  - 1. Use a wrench to secure the balance shaft.

Place the wrench onto the balance shaft near to the balance shaft front bearing.

- 2. Install the balance shaft driven gear bolt.
  - 1. Tighten the balance shaft driven gear bolt on the first pass to 20 N.m (15 lb ft).
  - 2. Tighten the balance shaft driven gear bolt on the final pass using the **J 45059** meter an additional 35 degrees.
- 7. Remove the wrench from the balance shaft.
- 8. Rotate the balance shaft by hand in order to ensure that there is clearance between the balance shaft and the valve lifter pushrod guide. If the balance shaft does not rotate freely, check to ensure that the retaining ring on the balance shaft front bearing is seated on the case.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


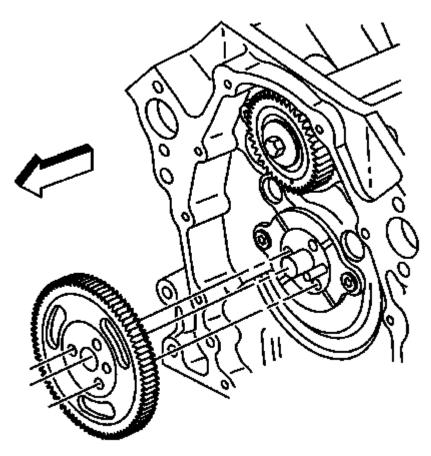


Fig. 611: View Of Balance Shaft Drive Gear Courtesy of GENERAL MOTORS COMPANY

NOTE: DO NOT install the camshaft sprocket bolts at this time.

9. Install the balance shaft drive gear.


2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

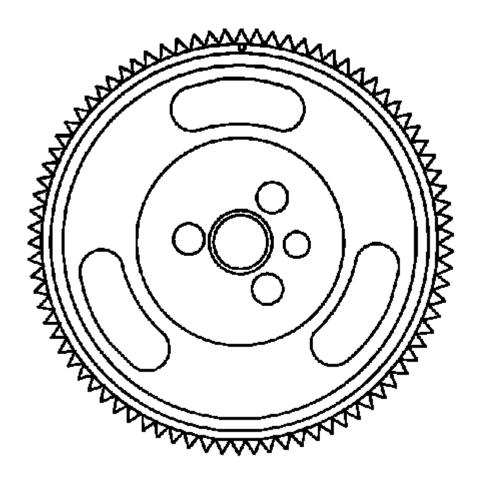

<u>Fig. 612: Balance Shaft Drive Gear Camshaft Timing Mark</u> Courtesy of GENERAL MOTORS COMPANY

10. Rotate the engine camshaft so that the timing mark on the balance shaft drive gear is in the 12 o'clock position.


2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

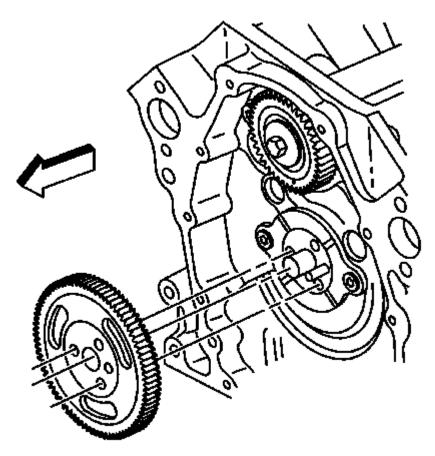

<u>Fig. 613: View Of Balance Shaft Drive Gear</u> Courtesy of GENERAL MOTORS COMPANY

11. Remove the balance shaft drive gear.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

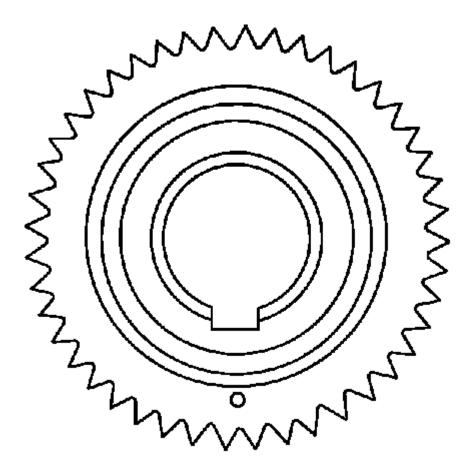

<u>Fig. 614: Balance Shaft Driven Gear Timing Mark</u> Courtesy of GENERAL MOTORS COMPANY

12. Rotate the balance shaft so that the timing mark on the balance shaft driven gear is in the 6 o'clock position.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

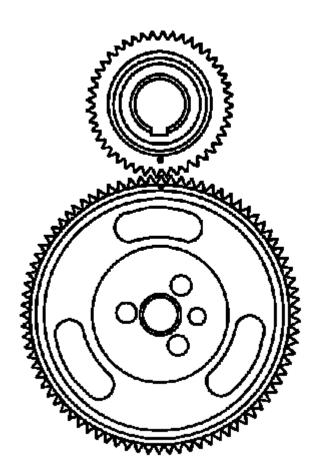


Fig. 615: Aligning Balance Shaft Drive Gear & Balance Shaft Driven Gear Timing Marks Courtesy of GENERAL MOTORS COMPANY

- 13. Position the balance shaft drive gear onto the engine camshaft.
- 14. Look to ensure that the balance shaft drive gear and the balance shaft driven gear timing marks are aligned.


#### TIMING CHAIN AND SPROCKET INSTALLATION

## **Special Tools**

J 5590 Pinion Bearing Race Installer - Rear

For equivalent regional tools, refer to **Special Tools**.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

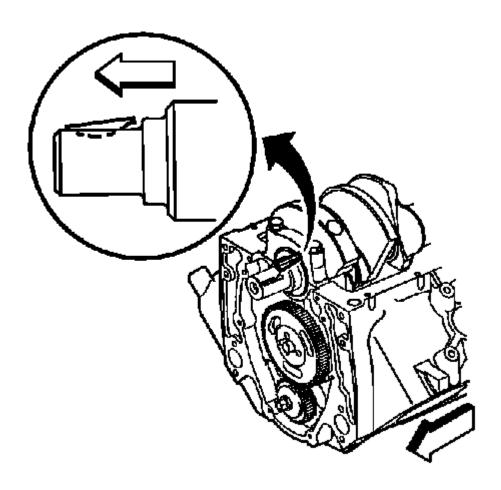

<u>Fig. 616: Locating Crankshaft Balancer Key</u> Courtesy of GENERAL MOTORS COMPANY

1. Install the crankshaft balancer key into the crankshaft keyway.

The crankshaft balancer key should be parallel to the crankshaft or with a slight incline.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

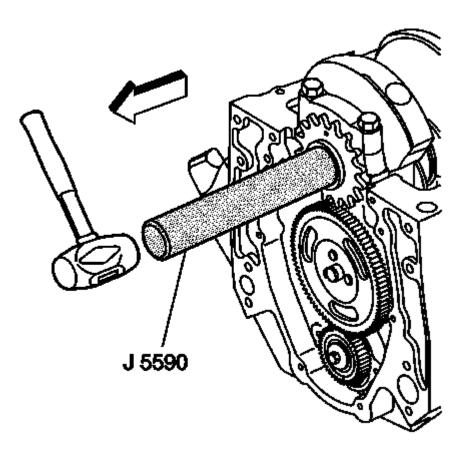



Fig. 617: Identifying Special Tool J 5590
Courtesy of GENERAL MOTORS COMPANY

2. Align the keyway of the crankshaft sprocket with the crankshaft balancer key.

WARNING: Refer to Safety Glasses Warning.

3. Use the  ${\bf J}$  5590 installer in order to install the crankshaft sprocket.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

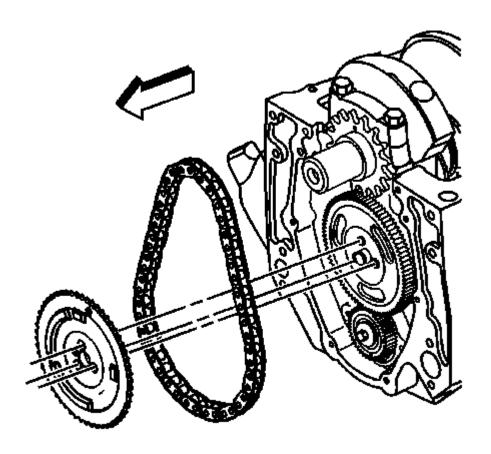

<u>Fig. 618: Camshaft Sprocket And Camshaft Timing Chain</u> Courtesy of GENERAL MOTORS COMPANY

4. Rotate the crankshaft until the crankshaft sprocket alignment mark is at the 12 o'clock position.

NOTE: Install the camshaft sprocket with the alignment mark at the 6 o'clock position.

5. Install the camshaft sprocket and the camshaft timing chain.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

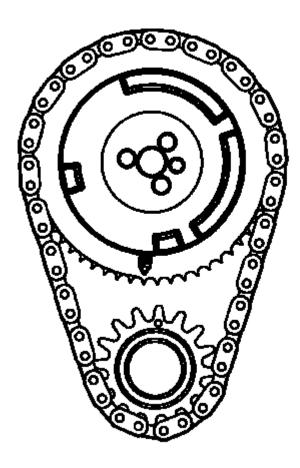


Fig. 619: View Of Sprockets & Chain Courtesy of GENERAL MOTORS COMPANY

6. Look to ensure that the crankshaft sprocket is aligned at the 12 o'clock position and camshaft sprocket is aligned at the 6 o'clock position.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

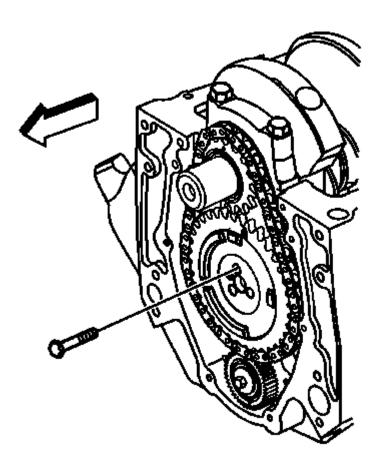


Fig. 620: Camshaft Sprocket & Bolts
Courtesy of GENERAL MOTORS COMPANY

**CAUTION: Refer to Fastener Caution.** 

NOTE: Do not use a hammer to install the camshaft sprocket onto the camshaft.

To do so may dislodge the expansion cup plug, camshaft rear bearing

hole.

7. Install camshaft sprocket bolts and tighten to 25 N.m (18 lb ft).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

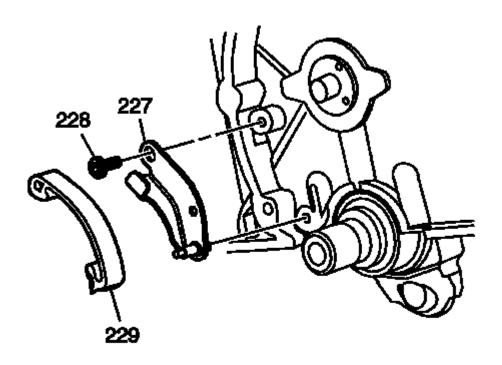


Fig. 621: View Of Timing Chain Tensioner Bracket, Bolt & Shoe Courtesy of GENERAL MOTORS COMPANY

8. Install the timing chain tensioner bracket and bolt (227 and 228). Tighten the timing chain tensioner bracket bolt to 12 N.m (106 lb in).

NOTE: The timing chain tensioner shoe snaps onto the tensioner bracket. Ensure that the shoe is fully seated before proceeding.

9. Install the timing chain tensioner shoe (229) using an upwards motion.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


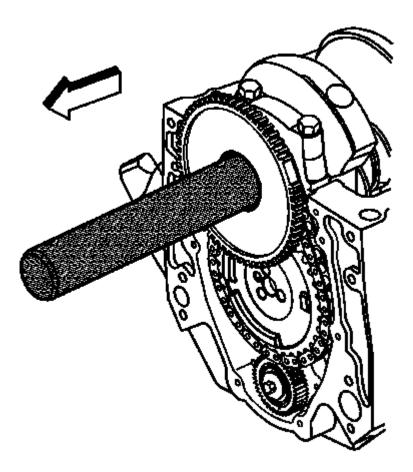


Fig. 622: Installing Crankshaft Position Sensor Reluctor Ring Courtesy of GENERAL MOTORS COMPANY

- 10. Install the crankshaft position sensor reluctor ring.
  - 1. Align the keyway on the crankshaft position sensor reluctor ring with the crankshaft balancer key in the crankshaft.
  - 2. Use the **J 5590** installer in order to push the crankshaft position sensor reluctor ring onto the crankshaft until completely seated against the crankshaft sprocket.

## **ENGINE FRONT COVER INSTALLATION**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

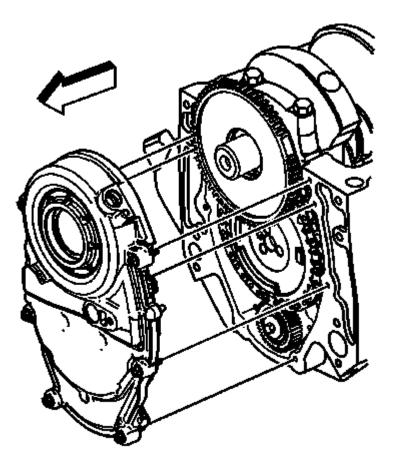

<u>Fig. 623: Engine Front Cover</u> Courtesy of GENERAL MOTORS COMPANY

NOTE: If the composite engine front cover is removed do not reinstall the used engine front cover.

1. Install the NEW engine front cover.

**CAUTION: Refer to Fastener Caution.** 

2. Install the engine front cover bolts and tighten to 12 N.m (106 lb in).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

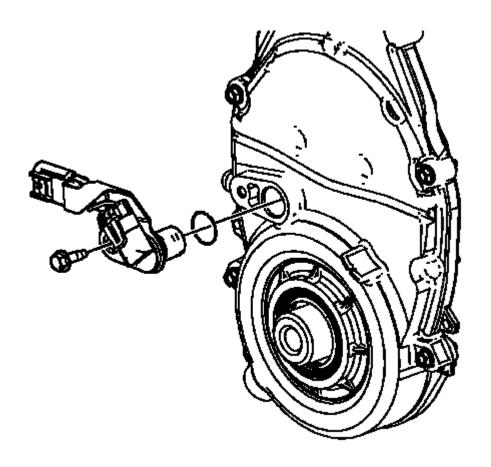


Fig. 624: Camshaft Position Sensor & Bolt Courtesy of GENERAL MOTORS COMPANY

## NOTE:

DO NOT reuse the original camshaft position sensor O-ring seal. When installing the camshaft position sensor assembly be sure the camshaft position sensor assembly is fully seated and held stationary in the engine front cover camshaft position sensor bore. A camshaft position sensor that is not completely seated will cock in the engine front cover and may result in erratic engine operation.

- 3. Lubricate the NEW camshaft position sensor O-ring seal with clean engine oil.
- 4. Install the NEW camshaft position sensor O-ring seal onto the camshaft position sensor assembly.
- 5. Install the camshaft position sensor assembly until fully seated into the engine front cover.
- 6. Install camshaft position sensor bolt.

## **Tighten**

Tighten the camshaft position sensor bolt to 10 N.m (89 lb in).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

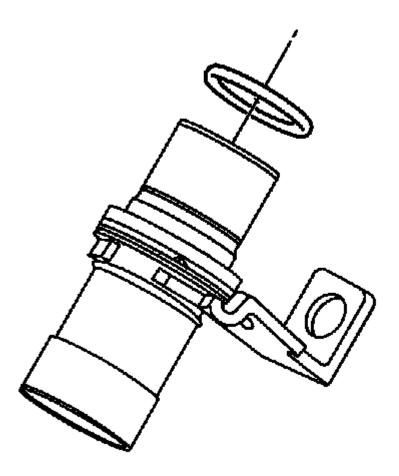


Fig. 625: View Of Crankshaft Position Sensor Seal O-Ring Courtesy of GENERAL MOTORS COMPANY

#### NOTE:

DO NOT reuse the original crankshaft position sensor seal, O-ring. When installing the crankshaft position sensor be sure the crankshaft position sensor is fully seated and held stationary in the engine front cover crankshaft position sensor bore. A crankshaft position sensor that is not completely seated will cock in the engine front cover and may result in erratic engine operation.

- 7. Lubricate the NEW crankshaft position sensor seal, O-ring, with clean engine oil.
- 8. Install the NEW crankshaft position sensor seal, O-ring, onto the crankshaft position sensor.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

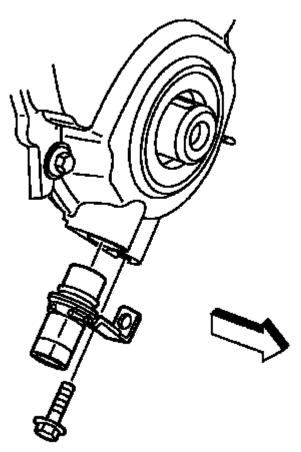


Fig. 626: View Of CKP Sensor & Bolt Courtesy of GENERAL MOTORS COMPANY

- 9. Install crankshaft position sensor until fully seated into the engine front cover.
- 10. Install crankshaft position sensor bolt and tighten to 10 N.m (89 lb in).

## **OIL PUMP INSTALLATION**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

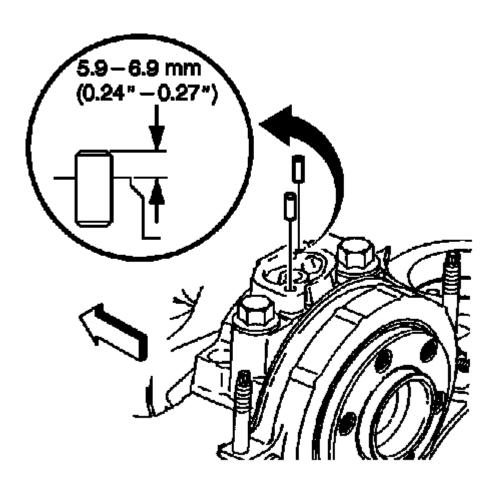


Fig. 627: Oil Pump Locator Pins
Courtesy of GENERAL MOTORS COMPANY

1. Inspect for properly installed oil pump locator pins.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

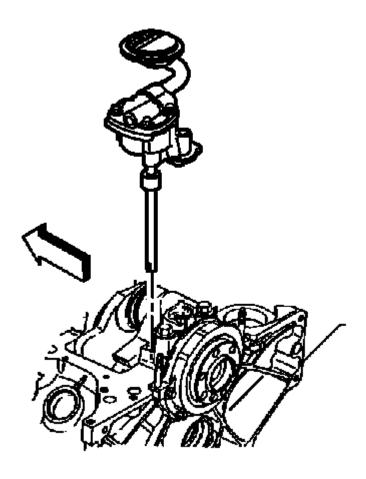


Fig. 628: View Of Oil Pump Courtesy of GENERAL MOTORS COMPANY

NOTE: Do not reuse the oil pump driveshaft retainer.

During assembly, install a NEW oil pump driveshaft retainer.

- 2. Install the oil pump.
- 3. Position the oil pump onto the pins.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

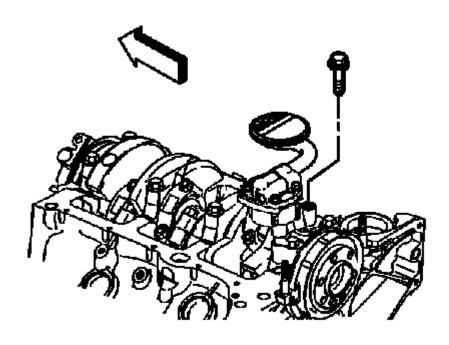


Fig. 629: View Of Oil Pump Bolt Courtesy of GENERAL MOTORS COMPANY

**CAUTION: Refer to Fastener Caution.** 

4. Install the oil pump bolt attaching the oil pump to the rear crankshaft bearing cap. Tighten the oil pump bolt to 90 N.m (66 lb ft).

## **OIL PAN INSTALLATION**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


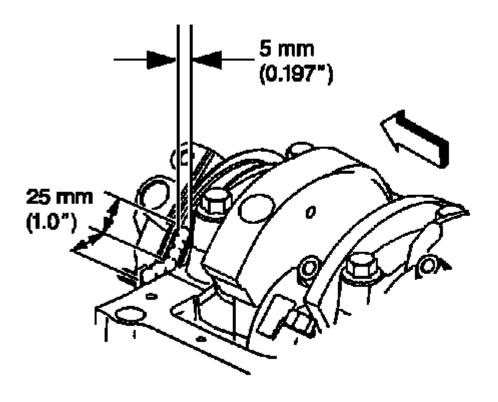


Fig. 630: Applying Adhesive To Engine Sides Front Cover To Engine Block Junction Courtesy of GENERAL MOTORS COMPANY

1. Apply a 5 mm (0.197 in) wide and 25 mm (1.0 in) long bead of adhesive GM P/N 12346141 (Canadian P/N 10953433) or equivalent, to both the right and left sides of the engine front cover to engine block junction at the oil pan sealing surfaces.


2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

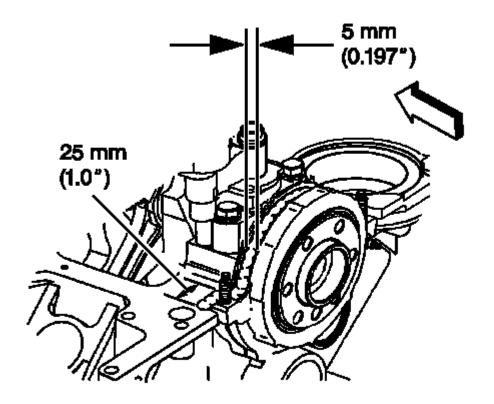

<u>Fig. 631: Applying Adhesive To Entire Length Of Rear Oil Seal Housing To Engine Block Junction At Oil Pan Sealing Surfaces</u>
Courtesy of GENERAL MOTORS COMPANY

2. Apply a 5 mm (0.197 in) wide and 25 mm (1.0 in) long bead of adhesive GM P/N 12346141 (Canadian P/N 10953433) or equivalent, to the entire crankshaft rear oil seal housing to engine block junction at the oil pan sealing surfaces.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

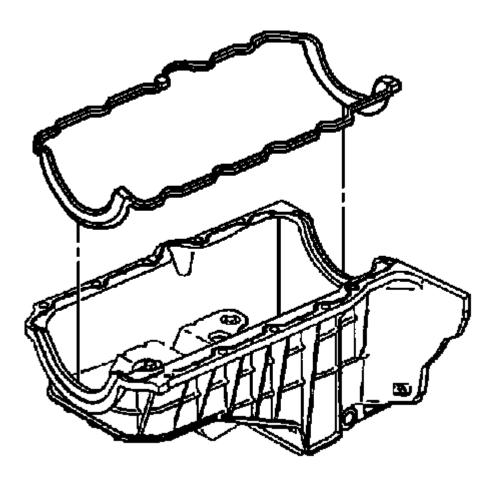

<u>Fig. 632: View Of Oil Pan Gasket</u> Courtesy of GENERAL MOTORS COMPANY

NOTE: Always install a NEW oil pan gasket.

The oil pan gasket and oil pan must be installed and the fasteners tightened while the adhesive is still wet to the touch.

3. Install the NEW oil pan gasket into the groove in the oil pan.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

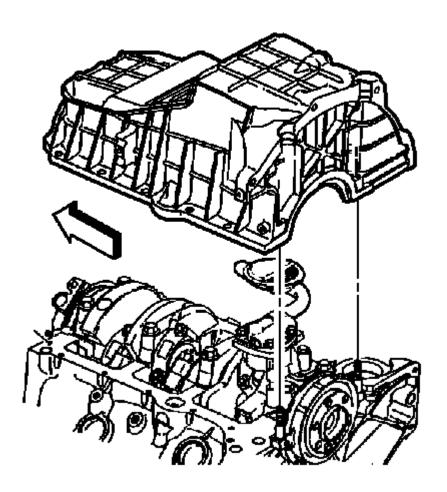


Fig. 633: View Of Oil Pan Courtesy of GENERAL MOTORS COMPANY


NOTE: The oil pan alignment must always be flush or forward no more than 0.3 mm (0.011 in) from the rear face of the engine block.

4. Install the oil pan onto the engine block.

Press the oil pan gasket into the grooves of the engine front cover and crankshaft rear oil seal housing.

5. Slide the oil pan back against a suitable straight edge.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

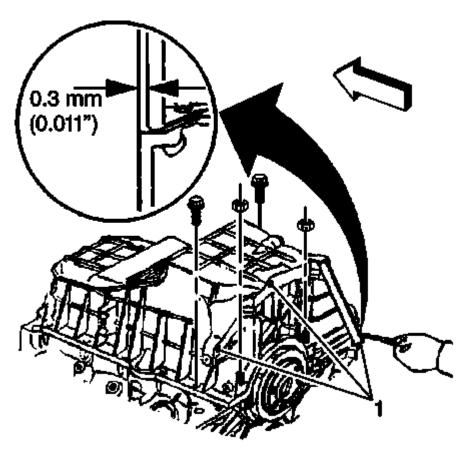

<u>Fig. 634: Measuring Pan-To-Transmission Housing Clearance</u> Courtesy of GENERAL MOTORS COMPANY

- 6. Install the oil pan bolts and nuts, but do not tighten.
- 7. Measure the pan-to-transmission housing clearance using a feeler gauge and a straight edge.

Use a feeler gauge to check the clearance between the oil pan-to-transmission housing measurement points. If the clearance exceeds 0.3 mm (0.011 in) at any of the 3 oil pan-to-transmission housing measurement points (1), then repeat the step until the oil pan-to-transmission housing clearance is within the specification. The oil pan must always be forward of the rear face of the engine block.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

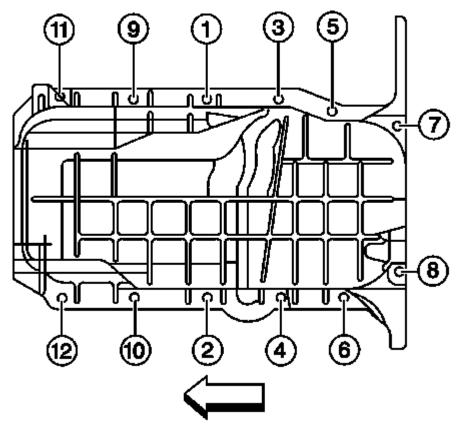


Fig. 635: Oil Pan Bolts & Nuts Tightening Sequence Courtesy of GENERAL MOTORS COMPANY

CAUTION: The alignment of the mating components is crucial. An offset greater than 0.30 mm (0.011 in) between the rear faces of the oil pan and block is not acceptable. Offsets greater than 0.30 mm (0.011 in) will affect the alignment between the engine assembly and the transmission. Mis-alignment of the engine assembly to the transmission can lead to internal and external damage to the engine assembly and/or transmission.

**CAUTION: Refer to Fastener Caution.** 

- 8. Tighten the oil pan bolts and nuts in sequence (1-12). Tighten the oil pan bolts to 25 N.m (18 lb ft).
- 9. Measure the clearance between the 3 oil pan-to-transmission housing measurement points in order to ensure proper alignment.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

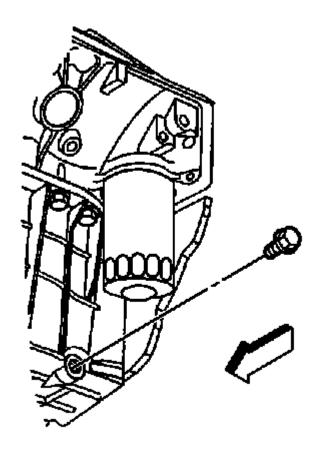


Fig. 636: Identifying Oil Drain Plug Courtesy of GENERAL MOTORS COMPANY

- 10. Install a NEW oil pan drain plug seal, O-ring, onto the oil pan drain plug.
- 11. Install the oil pan drain plug into the oil pan and tighten to 25 N.m (18 lb ft).

#### OIL FILTER ADAPTER INSTALLATION

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

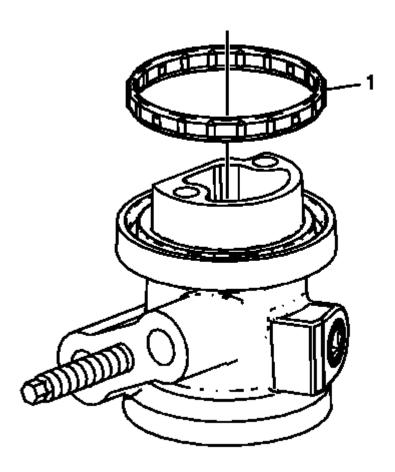


Fig. 637: Identifying Oil Filter Adapter Seal O-Ring Courtesy of GENERAL MOTORS COMPANY

1. Install the NEW oil filter adapter O-ring seal (1) into the groove in the oil filter adapter.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

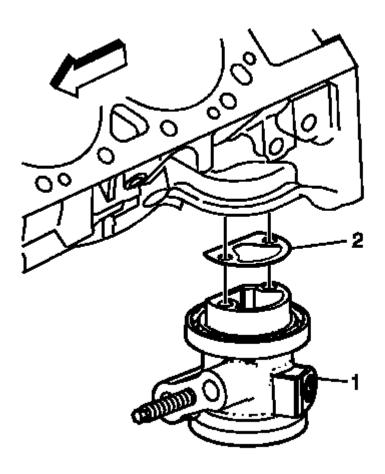


Fig. 638: Identifying Oil Filter Adapter And Oil Filter Adapter Gasket Courtesy of GENERAL MOTORS COMPANY

2. Install the oil filter adapter (1) and NEW oil filter adapter gasket (2).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

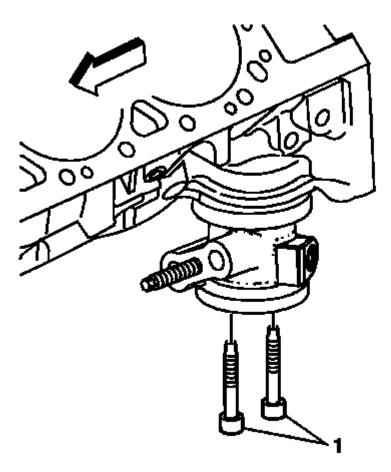


Fig. 639: Identifying Oil Filter Adapter Bolts
Courtesy of GENERAL MOTORS COMPANY

**CAUTION: Refer to Fastener Caution**.

3. Install the oil filter adapter bolts (1) and tighten to 21 N.m (15 lb ft).

## CRANKSHAFT BALANCER INSTALLATION

## **Special Tools**

J 23523-F Balancer Remover and Installer

For equivalent regional tools, refer to **Special Tools**.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

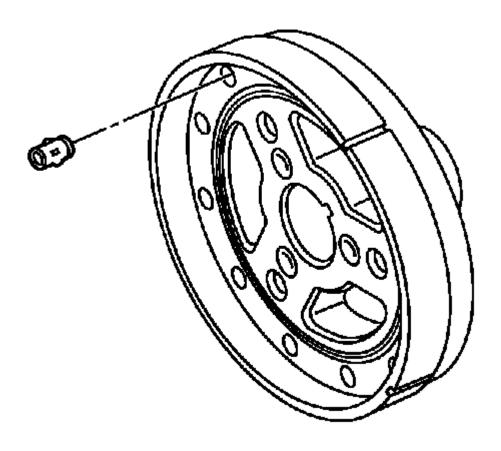


Fig. 640: View Of Crankshaft Balancer Weights Courtesy of GENERAL MOTORS COMPANY

1. Look to ensure that the crankshaft balancer front groove pin is installed in the proper location, if applicable.

The length and location of the pins must be the same as the original length and location.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

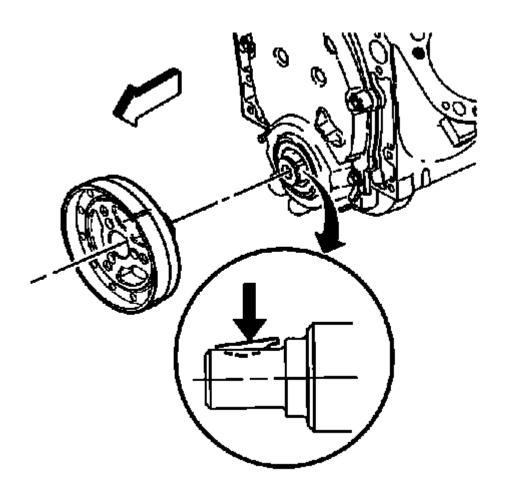


Fig. 641: Identifying Crankshaft Balancer & Key Courtesy of GENERAL MOTORS COMPANY

CAUTION: The inertial weight section of the crankshaft balancer is assembled to the hub with a rubber type material. The correct installation procedures (with the proper tool) must be followed or movement of the inertial weight section of the hub will destroy the tuning of the crankshaft balancer.

- 2. Apply a small amount of adhesive GM P/N 12346141 (Canadian P/N 10953433) or equivalent, onto the crankshaft balancer keyway in order to seal the crankshaft balancer keyway and crankshaft joint.
- 3. Align the keyway of the crankshaft balancer with the crankshaft balancer key.
- 4. Install the crankshaft balancer onto the end of the crankshaft.

# 2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

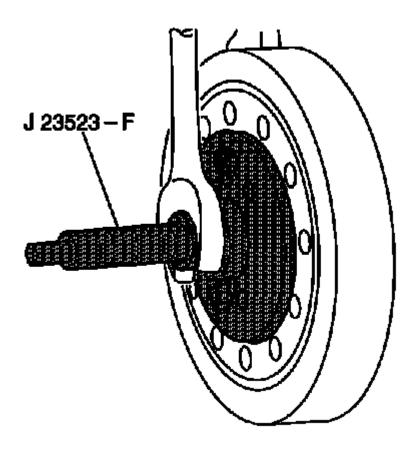


Fig. 642: Installing Crankshaft Balancer Using J 23523-F Courtesy of GENERAL MOTORS COMPANY

**CAUTION: Refer to Fastener Caution.** 

- 5. Use the J 23523-F installer in order to press the crankshaft balancer onto the crankshaft.
  - 1. Install the J 23523-F installer plate and bolts onto the front of the crankshaft balancer. Tighten the J 23523-F installer plate bolts to 25 N.m (18 lb ft).
  - 2. Install the J 23523-F installer screw into the end for the crankshaft.
  - 3. Install the J 23523-F installer bearing, the washer and the nut onto the J 23523-F installer screw.
  - 4. Rotate the **J 23523-F** installer nut clockwise until the crankshaft balancer hub is completely seated against the crankshaft position sensor reluctor ring.
- 6. Remove the J 23523-F installer.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


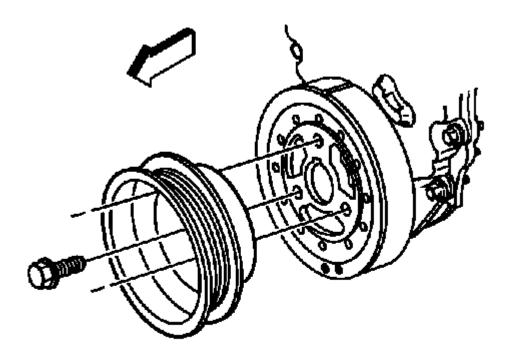


Fig. 643: View Of Crankshaft Pulley & Bolts Courtesy of GENERAL MOTORS COMPANY

7. Install the crankshaft pulley and bolts. Finger tighten all bolts until snug. Tighten the crankshaft pulley bolts to 58 N.m (43 lb ft).


2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

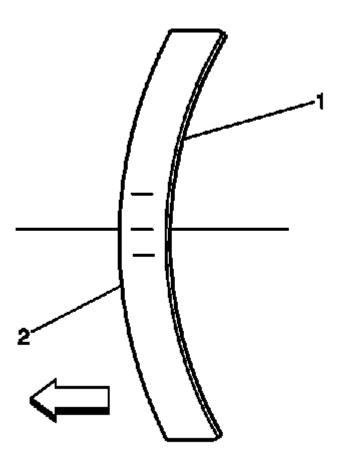

<u>Fig. 644: Crankshaft Balancer Washer</u> Courtesy of GENERAL MOTORS COMPANY

8. Ensure that the crown of the crankshaft balancer washer (2) is faced away from the engine.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

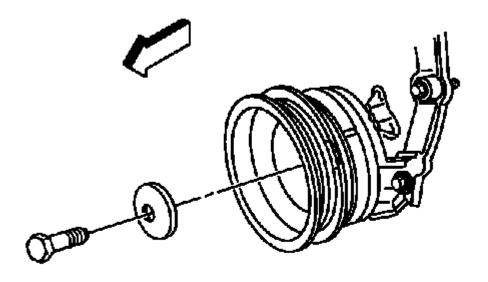


<u>Fig. 645: View Of Crankshaft Balancer Washer & Bolt</u> Courtesy of GENERAL MOTORS COMPANY

9. Install the crankshaft balancer washer and the bolt and tighten to 95 N.m (70 lb ft).

## VALVE LIFTER INSTALLATION

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

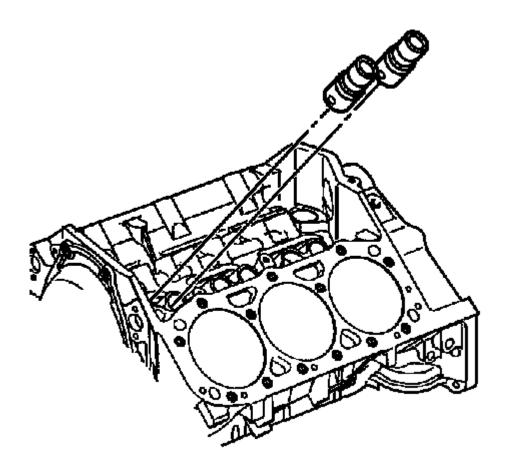

<u>Fig. 646: View Of Valve Lifters</u> Courtesy of GENERAL MOTORS COMPANY

1. Apply lubricant GM P/N 12345501 (Canadian P/N 992704) or equivalent, to the valve lifter rollers.

NOTE: If reusing the valve lifters, install the valve lifters in the original positions.

2. Install the valve lifters.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

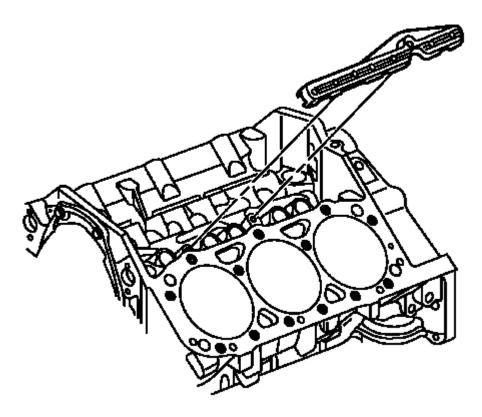


Fig. 647: View Of Valve Lifter Pushrod Guides Courtesy of GENERAL MOTORS COMPANY

**CAUTION: Refer to <u>Fastener Caution</u>**.

3. Install the valve lifter pushrod guides and tighten to 16 N.m (12 lb ft).


## **CYLINDER HEAD INSTALLATION - LEFT SIDE**

## **Special Tools**

J 45059 Angle Meter

For equivalent regional tools, refer to **Special Tools**.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

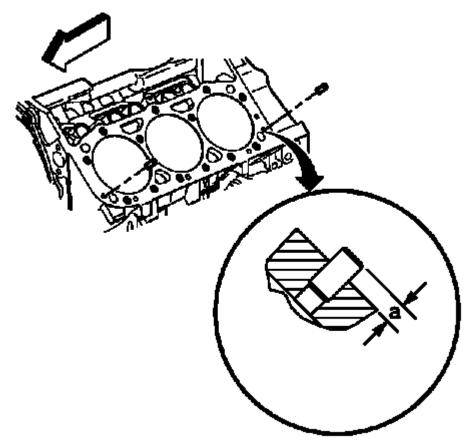


<u>Fig. 648: Left Side Cylinder Head Locator Dowel Pins Proper Installation Position</u> Courtesy of GENERAL MOTORS COMPANY

- 1. Clean the cylinder head gasket surfaces on the engine block.
- 2. Inspect the cylinder head locator dowel pins for proper installation.

The installation height should be 6.3-6.5 mm (0.248-0.256 in) (a).

3. Clean the cylinder head gasket surfaces on the cylinder head.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

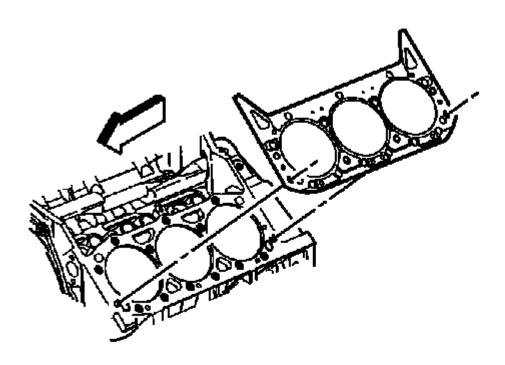

<u>Fig. 649: View Of Cylinder Head Gasket And Alignment Pins - Left</u> Courtesy of GENERAL MOTORS COMPANY

NOTE: Do not use any type sealer on the cylinder head gasket, unless specified.

4. Install the NEW cylinder head gasket in position over the cylinder head locator dowel pins.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

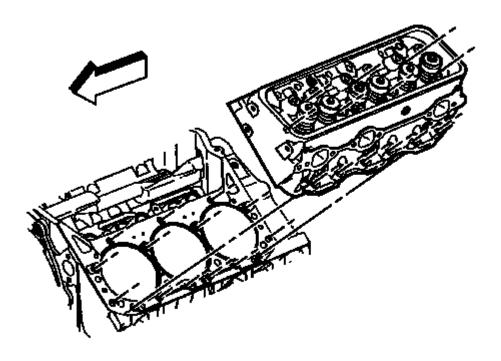


Fig. 650: View of Cylinder Head (Left)
Courtesy of GENERAL MOTORS COMPANY

5. Install the cylinder head onto the engine block.

Guide the cylinder head carefully into place over the dowel pins and the cylinder head gasket.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

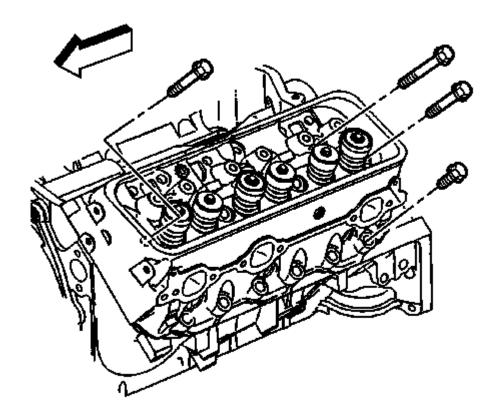


Fig. 651: Locating Cylinder Head Bolts (Left)
Courtesy of GENERAL MOTORS COMPANY

- 6. Apply sealant GM P/N 12346004 (Canadian P/N 10953480) or equivalent, to the threads of the NEW cylinder head bolts.
- 7. Install the NEW cylinder head bolts finger tight.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


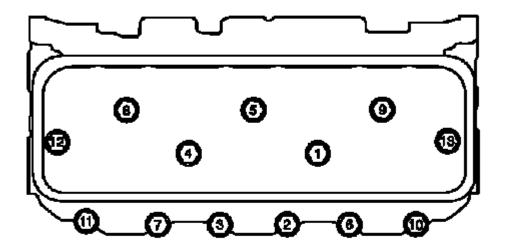


Fig. 652: Identifying Cylinder Head Bolt Tightening Sequence Courtesy of GENERAL MOTORS COMPANY

**CAUTION: Refer to Fastener Caution.** 

- 8. Tighten the cylinder head bolts in sequence on the first pass. Tighten the bolts in sequence on the first pass to 30 N.m (22 lb ft).
- 9. Use the J 45059 meter in order to tighten the cylinder head bolts in sequence on the final pass.
  - 1. Tighten the long bolts (1, 4, 5, 8 and 9) on the final pass in sequence to 75 degrees.
  - 2. Tighten the medium bolts (12 and 13) on the final pass in sequence to 65 degrees.
  - 3. Tighten the short bolts (2, 3, 6, 7, 10 and 11) on the final pass in sequence to 55 degrees.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

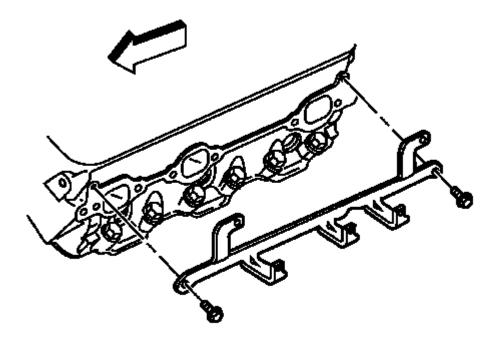

<u>Fig. 653: Locating Spark Plug Wire Support</u> Courtesy of GENERAL MOTORS COMPANY

10. Install the spark plug wire support and bolts and tighten to 12 N.m (106 lb in).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

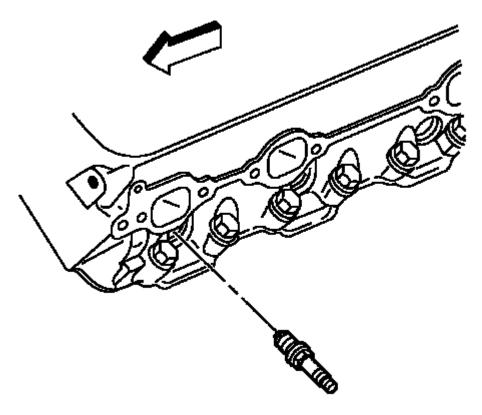


Fig. 654: View Of Spark Plugs (Left)
Courtesy of GENERAL MOTORS COMPANY

11. Measure the spark plugs for the proper gap.


Adjust the spark plug gap if necessary.

## **Specification**

Spark plug gap to 1.52 mm (0.060 in).

12. Install the spark plugs and tighten to 15 N.m (11 lb ft).


2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

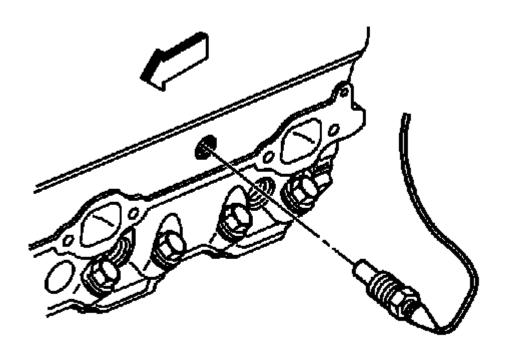

<u>Fig. 655: Engine Coolant Temperature Gage Sensor</u> Courtesy of GENERAL MOTORS COMPANY

- 13. If reusing the engine coolant temperature gauge sensor, if applicable, apply sealant GM P/N 12346004 (Canadian P/N 10953480) or equivalent, to the threads of the engine coolant temperature gauge sensor.
- 14. Install the engine coolant temperature gauge sensor, if applicable. Tighten the engine coolant temperature gauge sensor to 20 N.m (15 lb ft).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

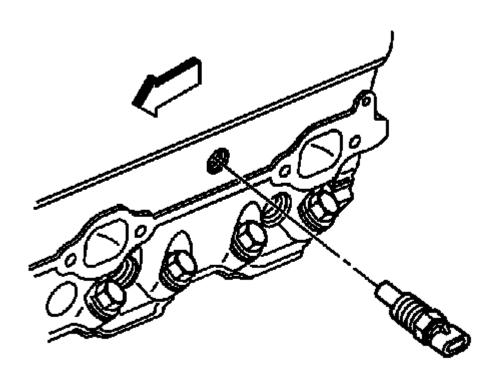

## <u>Fig. 656: View Of Engine Coolant Temperature Sensor</u> Courtesy of GENERAL MOTORS COMPANY

- 15. If reusing the engine coolant temperature sensor, if applicable, apply sealant GM P/N 12346004 (Canadian P/N 10953480) or equivalent, to the threads of the engine coolant temperature gauge sensor.
- 16. Install the engine coolant temperature sensor, if applicable. Tighten the engine coolant temperature sensor to 20 N.m (15 lb ft).


#### CYLINDER HEAD INSTALLATION - RIGHT SIDE

#### **Special Tools**

J 45059 Angle Meter

For equivalent regional tools, refer to **Special Tools**.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

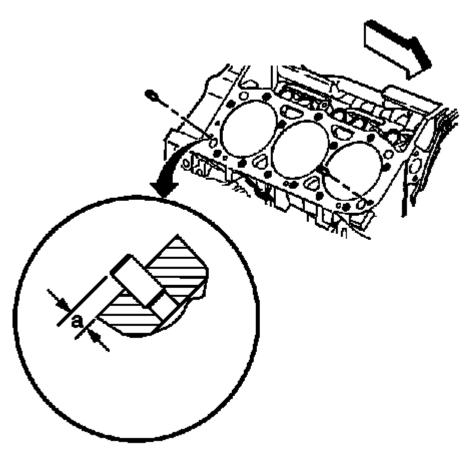


<u>Fig. 657: Right Side Cylinder Head Locator Dowel Pins Proper Installation Position</u> Courtesy of GENERAL MOTORS COMPANY

- 1. Clean the cylinder head gasket surfaces on the engine block.
- 2. Inspect the cylinder head locator dowel pins for proper installation.

The installation height should be 6.3-6.5 mm (0.248-0.256 in) (a).

3. Clean the cylinder head gasket surfaces on the cylinder head.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

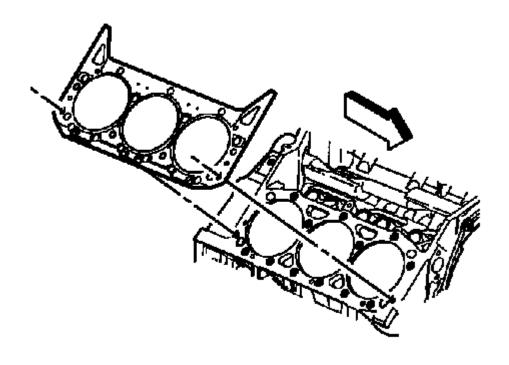

<u>Fig. 658: View Of Cylinder Head Gasket And Alignment Pins - Right</u> Courtesy of GENERAL MOTORS COMPANY

NOTE: Do not use any type sealer on the cylinder head gasket, unless specified.

4. Install the NEW cylinder head gasket in position over the cylinder head locator dowel pins.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

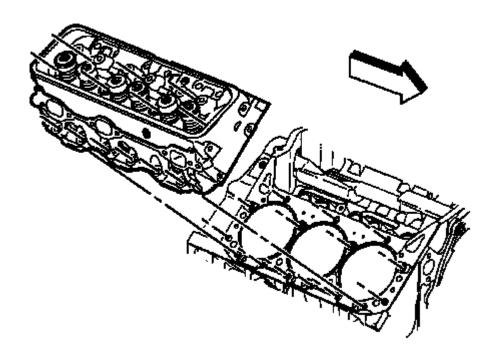


Fig. 659: View Of Cylinder Head (Right)
Courtesy of GENERAL MOTORS COMPANY

5. Install the cylinder head onto the engine block.

Guide the cylinder head carefully into place over the dowel pins and the cylinder head gasket.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

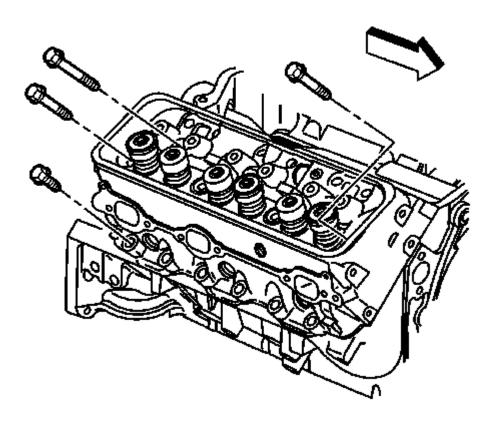


Fig. 660: Locating Cylinder Head Bolts (Right)
Courtesy of GENERAL MOTORS COMPANY

- 6. Apply sealant GM P/N 12346004 (Canadian P/N 10953480) or equivalent, to the threads of the NEW cylinder head bolts.
- 7. Install the NEW cylinder head bolts finger tight.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

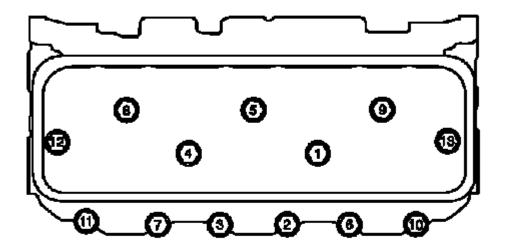


Fig. 661: Identifying Cylinder Head Bolt Tightening Sequence Courtesy of GENERAL MOTORS COMPANY

**CAUTION: Refer to Fastener Caution.** 

- 8. Tighten the cylinder head bolts in sequence on the first pass to 30 N.m (22 lb ft).
- 9. Use the **J 45059** meter in order to tighten the cylinder head bolts in sequence on the final pass.
  - 1. Tighten the long bolts (1, 4, 5, 8 and 9) on the final pass in sequence to 75 degrees.
  - 2. Tighten the medium bolts (12 and 13) on the final pass in sequence to 65 degrees.
  - 3. Tighten the short bolts (2, 3, 6, 7, 10 and 11) on the final pass in sequence to 55 degrees.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


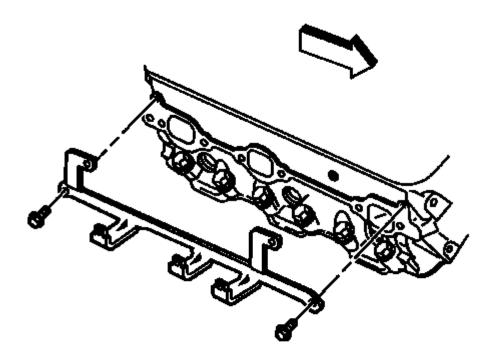


Fig. 662: Spark Plug Wire Support
Courtesy of GENERAL MOTORS COMPANY

- 10. Install the spark plug wire support and bolts and tighten to 12 N.m (106 lb in).
- 11. Remove the front spark plug wire support bolt.

The front spark plug wire support bolt is used to fasten the oil level indicator tube and will be installed within the oil level indicator tube installation procedure.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

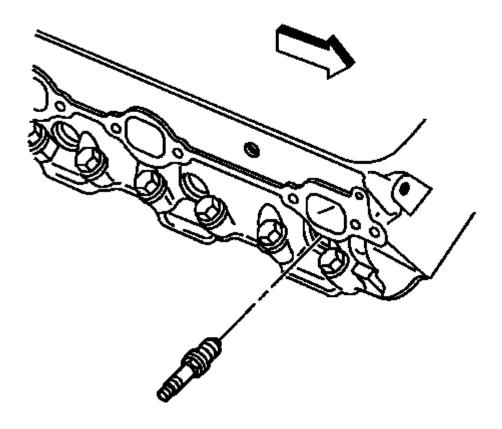

<u>Fig. 663: Locating Spark Plugs</u> Courtesy of GENERAL MOTORS COMPANY

12. Measure the spark plugs for the proper gap.

Adjust the spark plug gap if necessary.


## **Specification**

Spark plug gap to 1.52 mm (0.060 in).

13. Install the spark plugs and tighten to 15 N.m (11 lb ft).

#### VALVE ROCKER ARM AND PUSH ROD INSTALLATION

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

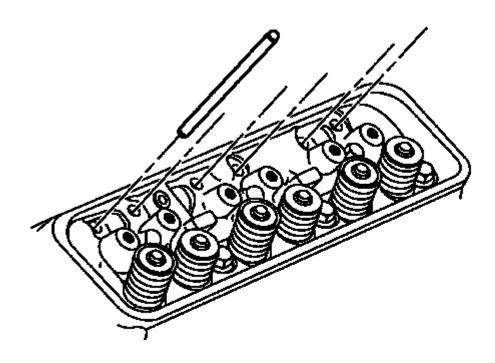

<u>Fig. 664: View Of Valve Pushrods</u> Courtesy of GENERAL MOTORS COMPANY

NOTE: Be sure to keep parts in order. Parts must be reinstalled into the original location and position.

1. Install the valve pushrods.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


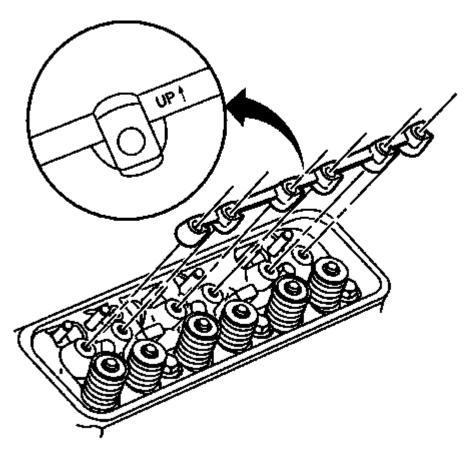


Fig. 665: Locating Arrow On Valve Rocker Arm Support Courtesy of GENERAL MOTORS COMPANY

NOTE: Be sure that the arrow on the valve rocker arm support is in the up position.

2. Install the valve rocker arm supports.


2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

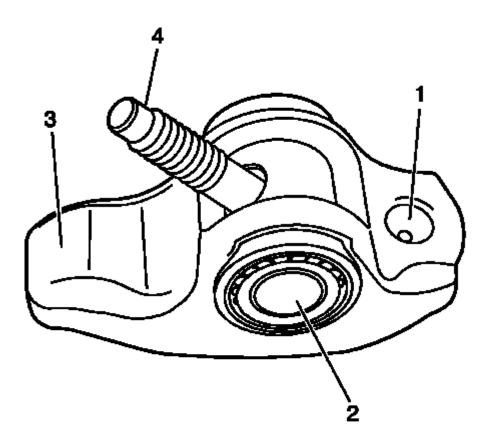

<u>Fig. 666: Pushrod Socket, Roller Pivot & Valve Stem Tip</u> Courtesy of GENERAL MOTORS COMPANY

- 3. Apply prelube GM P/N 12345501 (Canadian P/N 992704) or equivalent, to the following valve rocker arm contact surfaces:
  - Valve pushrod socket (1)
  - Roller pivot (2)
  - Valve stem tip (3)

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

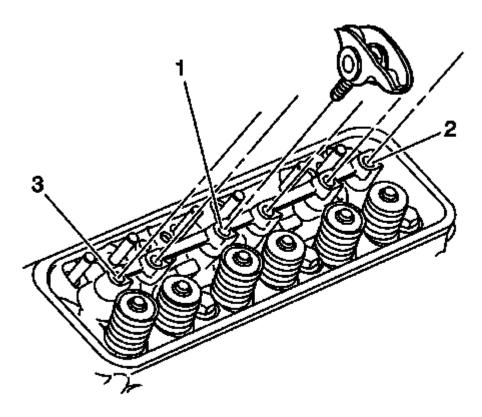

<u>Fig. 667: Valve Rocker Arm Assemblies</u> Courtesy of GENERAL MOTORS COMPANY

- 4. Install the valve rocker arm assemblies as follows:
  - 1. Finger start the bolt at location (1)
  - 2. Finger start the bolt at location (2)
  - 3. Finger start the bolt at location (3)
  - 4. Finger start the remaining valve rocker arm bolts

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

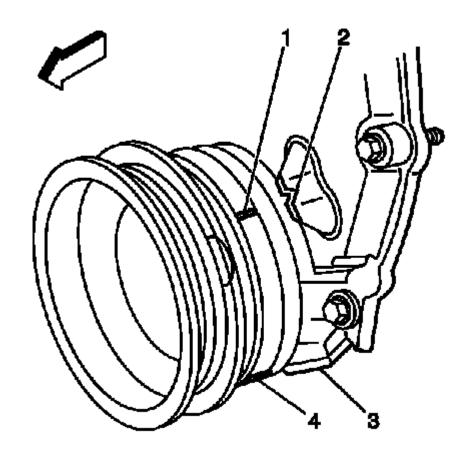


Fig. 668: View Of Crankshaft Balancer Alignment Mark & Engine Front Cover Alignment Tab Courtesy of GENERAL MOTORS COMPANY

NOTE:

Rotate the number 1 cylinder to top dead center (TDC) of the compression stroke. The engine front cover has 2 alignment tabs and the crankshaft balancer has 2 alignment marks which are spaced 90 degrees apart that are used for positioning the number 1 piston at TDC.

5. Rotate the crankshaft balancer clockwise until the alignment marks on the crankshaft balancer are aligned with the tabs on the engine front cover, 1 with 2 and 3 with 4. At that point the number 1 piston should be at TDC of the compression stroke.

**CAUTION: Refer to Fastener Caution.** 

NOTE: Once the valve rocker arm assemblies are installed and properly torqued, no additional valve lash adjustment is required.

6. Tighten the valve rocker arm bolts and tighten to 30 N.m (22 lb ft).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

#### INTAKE MANIFOLD INSTALLATION

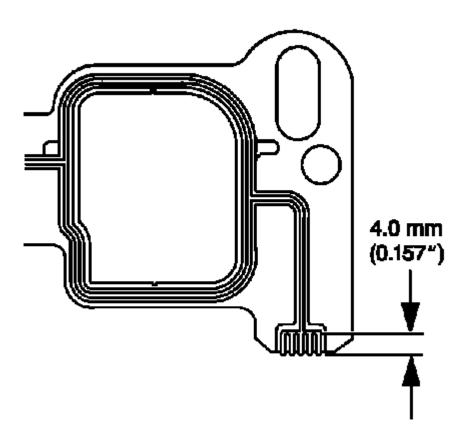


Fig. 669: Applying Patch Of Adhesive To Cylinder Head Side Of Intake Manifold Gasket Courtesy of GENERAL MOTORS COMPANY

CAUTION: Apply the proper amount of the sealant when assembling this component. Excessive use of the sealant can prohibit the component from sealing properly. A component that is not sealed properly can leak leading to extensive engine damage.

1. Apply a 4.0 mm (0.157 in) patch of adhesive GM P/N 12346141 (Canadian P/N 10953433) or equivalent, to the cylinder head side of the lower intake manifold gasket at each end.

NOTE: The lower intake manifold gasket must be installed while the adhesive is still wet to the touch.

2. Install the lower intake manifold gasket onto the cylinder head.

Use the gasket locator pins in order to properly seat the lower intake manifold gasket on the cylinder head.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

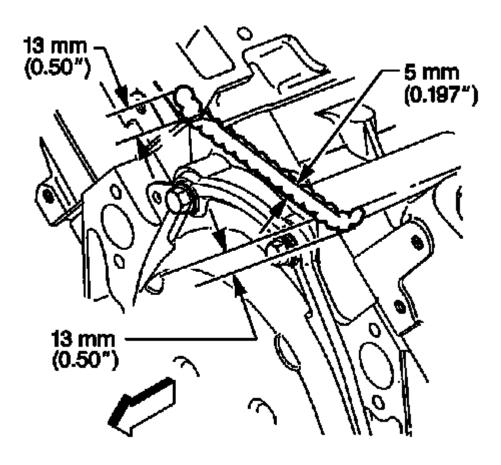


Fig. 670: Applying Adhesive To Front Top Of Engine Block Courtesy of GENERAL MOTORS COMPANY

NOTE: The lower intake manifold must be installed and the fasteners tightened while the adhesive is still wet to the touch.

- 3. Apply a 5 mm (0.197 in) bead of adhesive GM P/N 12346141 (Canadian P/N 10953433) or equivalent, to the front top of the engine block.
- 4. Extend the adhesive bead 13 mm (0.50 in) onto each lower intake manifold gasket.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

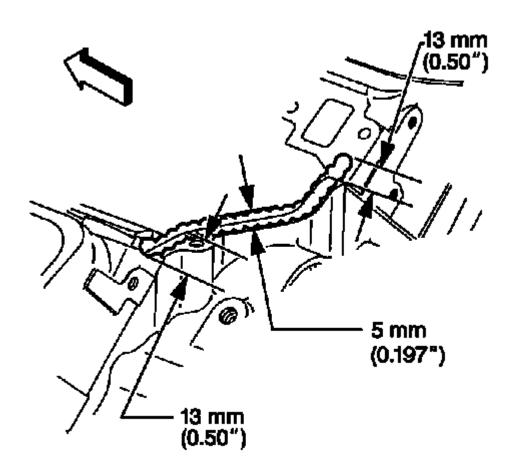


Fig. 671: Applying Adhesive To Rear Top Of Engine Block Courtesy of GENERAL MOTORS COMPANY

- 5. Apply a 5 mm (0.197 in) bead of adhesive GM P/N 12346141 (Canadian P/N 10953433) or equivalent, to the rear top of the engine block.
- 6. Extend the adhesive bead 13 mm (0.50 in) onto each lower intake manifold gasket.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


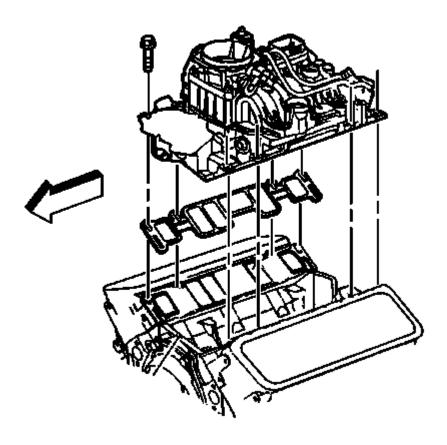


Fig. 672: View Of Intake Manifold Assembly & Bolts Courtesy of GENERAL MOTORS COMPANY

- 7. Install the lower intake manifold onto the engine block.
- 8. If reusing the fasteners, apply threadlock GM P/N 12345382 (Canadian P/N 10953489) or equivalent, to the threads of the lower intake manifold bolts.
- 9. Install the lower intake manifold bolts.

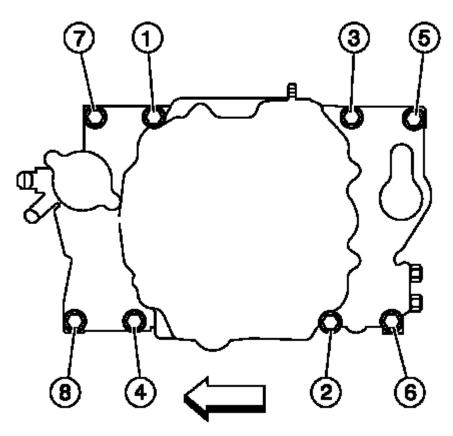


<u>Fig. 673: Intake Manifold Lower Bolt Tightening Sequence</u> Courtesy of GENERAL MOTORS COMPANY

CAUTION: Proper lower intake manifold fastener tightening sequence and torque is critical. Always follow the tightening sequence and torque the intake manifold bolts using the 3 step method. Failing to do so may distort the crankshaft bearing bore alignment and cause damage to the crankshaft bearings.

CAUTION: Refer to <u>Fastener Caution</u>.

- 10. Tighten the lower intake manifold bolts.
  - 1. Tighten the bolts on the first pass in sequence (1-8) to 3 N.m (27 lb in).
  - 2. Tighten the bolts on the second pass in sequence (1-8) to 12 N.m (106 lb in).
  - 3. Tighten the bolts on the final pass in sequence (1-8) to 15 N.m (11 lb ft).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

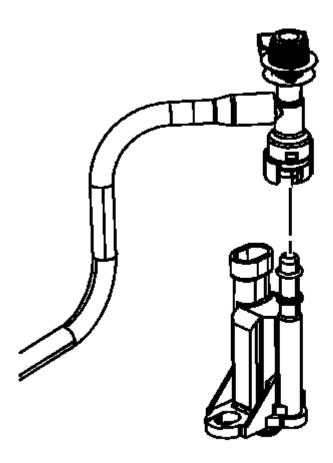

<u>Fig. 674: Evaporative Emission Canister Solenoid Valve & Harness Courtesy of GENERAL MOTORS COMPANY</u>

- 11. Connect the evaporative emission (EVAP) canister solenoid valve harness.
  - 1. Push the elbow inward until the quick connect snaps into place.
  - 2. Pull the elbow outward in order to ensure proper connection.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

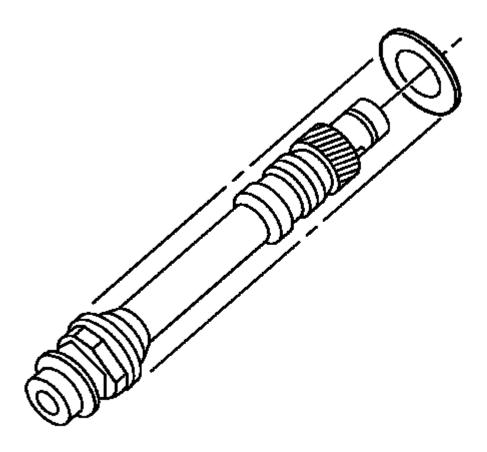


Fig. 675: Oil Pump Drive Shaft & Gasket Courtesy of GENERAL MOTORS COMPANY

12. Install a NEW oil pump drive shaft gasket onto the oil pump drive shaft.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

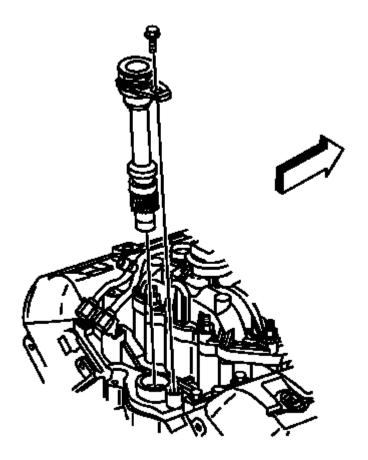


Fig. 676: View Of Oil Pump Drive Shaft
Courtesy of GENERAL MOTORS COMPANY

- 13. Install the oil pump drive shaft and oil pump drive shaft clamp.
- 14. Install the oil pump drive shaft bolt. Tighten the oil pump drive shaft clamp bolt to 25 N.m (18 lb ft).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana


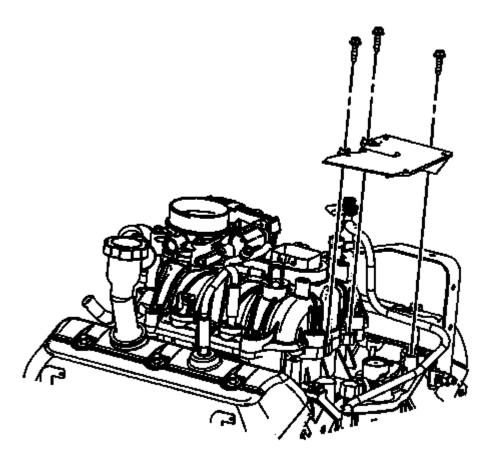


Fig. 677: View Of Ignition Coil Bracket & Bolts Courtesy of GENERAL MOTORS COMPANY

15. If required, install the ignition coil bracket and bolts. Tighten the ignition coil bracket bolts to 12 N.m (106 lb in).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

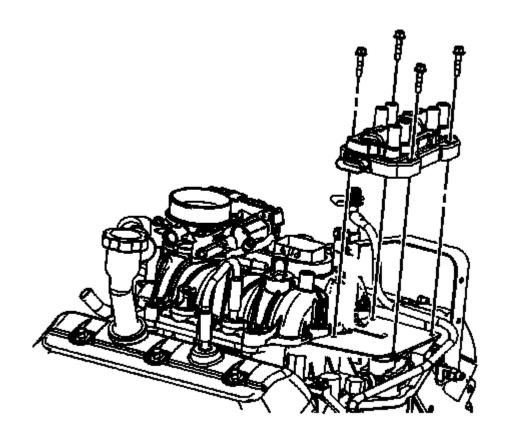

<u>Fig. 678: View Of Ignition Coil & Bolts</u> Courtesy of GENERAL MOTORS COMPANY

16. Install the ignition coil and ignition coil bolts and tighten to 12 N.m (106 lb in).

# VALVE ROCKER ARM COVER INSTALLATION - LEFT SIDE

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

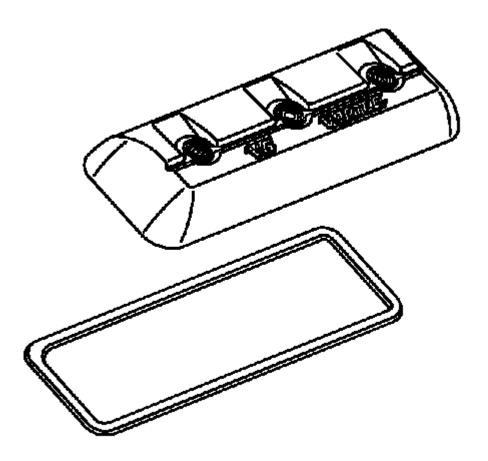


Fig. 679: View Of Rocker Arm Cover And Gasket Courtesy of GENERAL MOTORS COMPANY

NOTE: Do not reuse the valve cover gasket or the valve rocker arm cover bolt grommets.

- 1. Install the NEW valve rocker arm cover gasket into the groove of the valve rocker arm cover.
- 2. Install the NEW valve rocker arm cover bolt grommets into the valve rocker arm cover.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

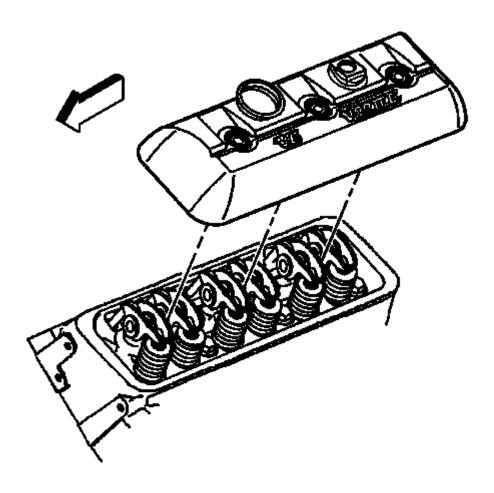


Fig. 680: Valve Rocker Arm Cover (Left)
Courtesy of GENERAL MOTORS COMPANY

3. Install the valve rocker arm cover onto the cylinder head.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

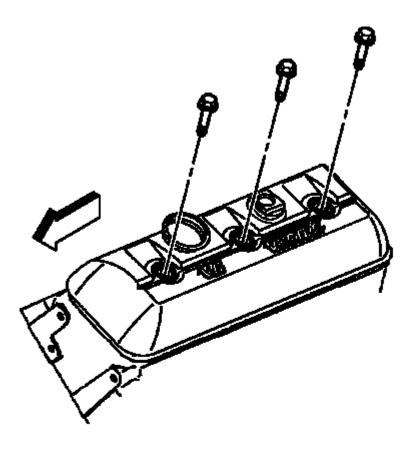


Fig. 681: Valve Rocker Arm Cover Bolts (Left)
Courtesy of GENERAL MOTORS COMPANY

CAUTION: Refer to  $\underline{\textbf{Fastener Caution}}$  .

4. Install the valve rocker arm cover bolts and tighten to 12 N.m (106 lb in).

VALVE ROCKER ARM COVER INSTALLATION - RIGHT SIDE

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

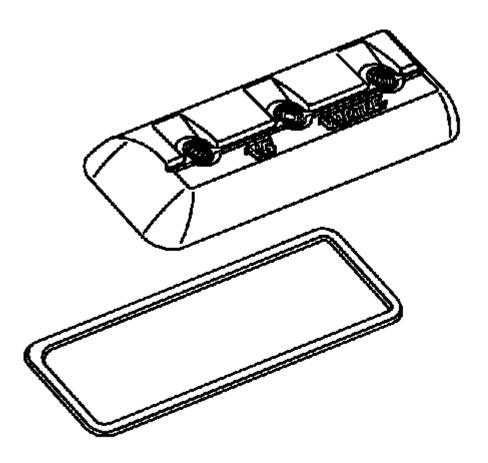


Fig. 682: View Of Rocker Arm Cover And Gasket Courtesy of GENERAL MOTORS COMPANY

NOTE: Do not reuse the valve cover gasket or the valve rocker arm cover bolt grommets.

- 1. Install the NEW valve rocker arm cover gasket into the groove of the valve rocker arm cover.
- 2. Install the NEW valve rocker arm cover bolt grommets into the valve rocker arm cover.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

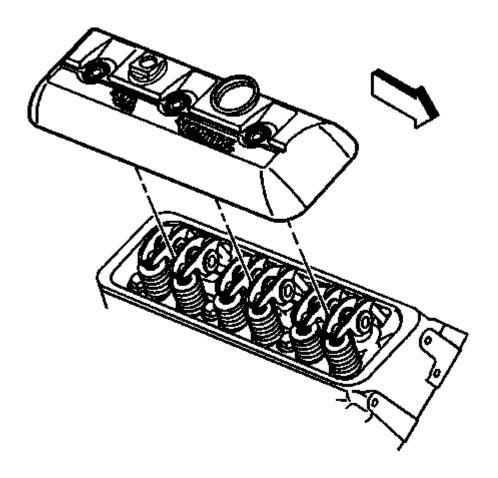


Fig. 683: Valve Rocker Arm Cover (Right)
Courtesy of GENERAL MOTORS COMPANY

3. Install the valve rocker arm cover onto the cylinder head.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

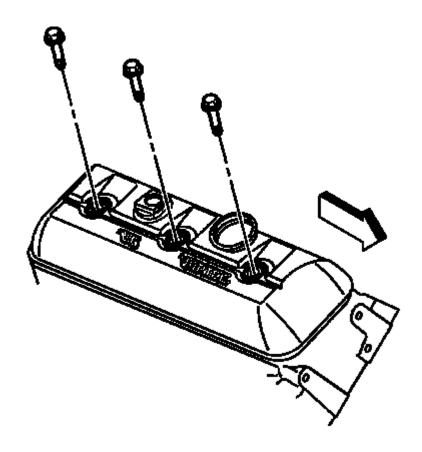


Fig. 684: View Of Valve Rocker Arm Cover Bolts (Right)
Courtesy of GENERAL MOTORS COMPANY

**CAUTION: Refer to Fastener Caution**.

4. Install the valve rocker arm cover bolts and tighten to 12 N.m (106 lb in).

# OIL LEVEL INDICATOR AND TUBE INSTALLATION

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

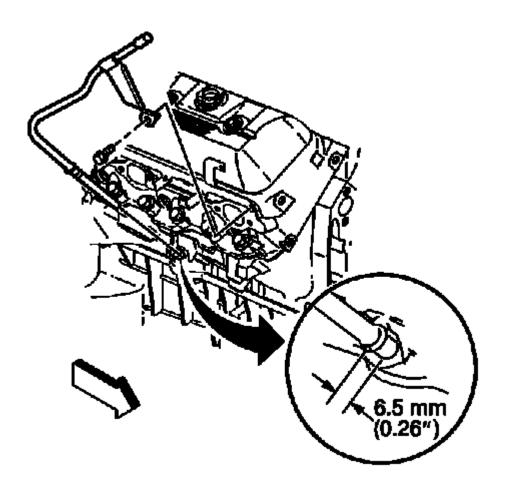



Fig. 685: Applying Sealant & Installing Oil Level Indicator Tube & Bolt Courtesy of GENERAL MOTORS COMPANY

- 1. Apply sealant GM P/N 12346004 (Canadian P/N 10953480) or equivalent, around the oil level indicator tube 13 mm (0.5 in) below the tube bead.
- 2. Install the oil level indicator tube into the engine block. Rotate the oil level indicator tube into position.

# **CAUTION: Refer to Fastener Caution**.

3. Install the oil level indicator tube bolt and tighten to 12 N.m (106 lb in).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

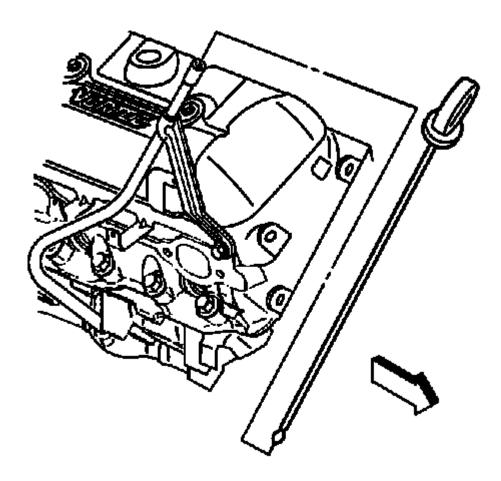

<u>Fig. 686: Locating Oil Level Indicator</u> Courtesy of GENERAL MOTORS COMPANY

4. Install the oil level indicator into the oil level indicator tube, if required.

# WATER PUMP INSTALLATION

# **Special Tools**

J 41240 Fan Clutch Remover and Installer

For equivalent regional tools, refer to **Special Tools**.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

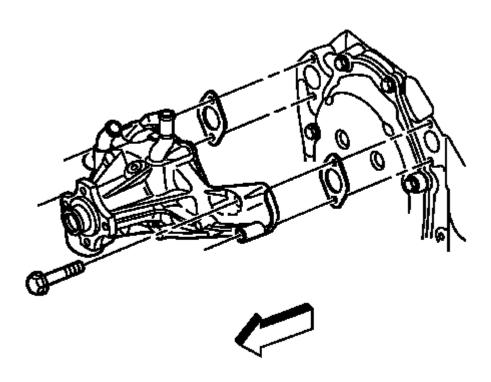


Fig. 687: View Of Water Pump & Bolts
Courtesy of GENERAL MOTORS COMPANY

- 1. If reusing the fasteners, apply sealant GM P/N 12346004 (Canadian P/N 10953480) or equivalent, to the threads of the water pump bolts.
- 2. Install the water pump and the NEW water pump gaskets.

# **CAUTION: Refer to <u>Fastener Caution</u>**.

3. Install the water pump bolts and tighten to 45 N.m (33 lb ft).

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

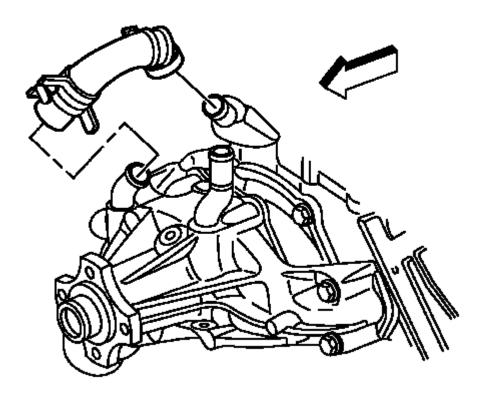


Fig. 688: View Of Water Pump Inlet Hose & Clamps Courtesy of GENERAL MOTORS COMPANY

NOTE: After final assembly, the water pump inlet hose clamp tangs, water pump

end, must point forward and the upper tang should be level with the

outside diameter of the water pump inlet hose.

4. Install the water pump inlet hose and the water pump inlet hose clamps.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

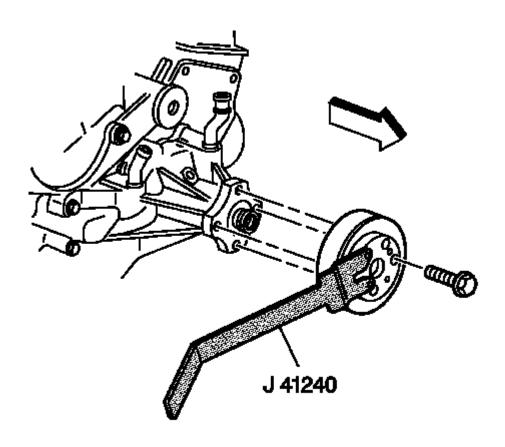


Fig. 689: View Of Fan, Water Pump Pulley & Bolts Courtesy of GENERAL MOTORS COMPANY

5. Install the fan and water pump pulley and bolts using the **J 41240** installer. Tighten the fan and water pump pulley bolts to 25 N.m (18 lb ft).

# **EXHAUST MANIFOLD INSTALLATION - LEFT SIDE**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

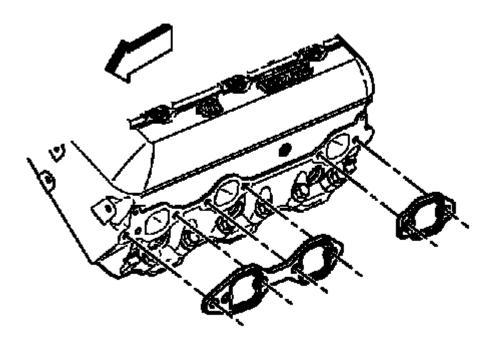


Fig. 690: Exhaust Manifold Gaskets
Courtesy of GENERAL MOTORS COMPANY

1. Install the NEW exhaust manifold gaskets.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

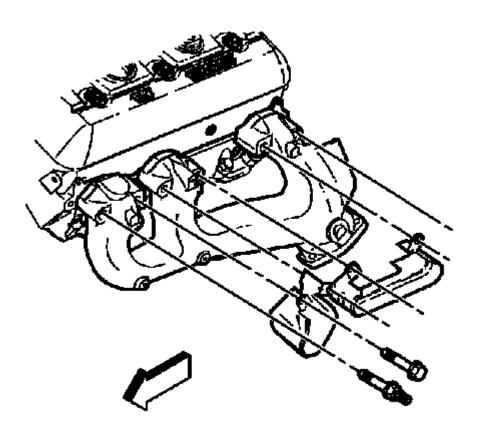


Fig. 691: View Of Exhaust Manifold Bolts & Studs Courtesy of GENERAL MOTORS COMPANY

- 2. Install the exhaust manifold.
- 3. Install the spark plug wire shields.
- 4. If reusing the fasteners, apply threadlock GM P/N 12345493 (Canadian P/N 10953488) or equivalent, to the threads of the exhaust manifold bolts and stud.

# **CAUTION: Refer to Fastener Caution**.

- 5. Install the exhaust manifold bolts and stud.
  - 1. Tighten the exhaust manifold bolts and stud on the first pass to 15 N.m (11 lb ft).
  - 2. Tighten the exhaust manifold bolts and stud on the final pass to 30 N.m (22 lb ft).
- 6. Install the spark plug wires to the spark plug wire retainers.


# NOTE: Only apply dielectric grease to the spark plug side of the spark plug wire boot.

7. Inspect the inside of the spark plug wire boot for a thin, even coat of grease. If there is no grease present or additional grease is necessary, complete the following procedure:

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- 1. Apply a thin coating of dielectric grease evenly to the inside of the ignition coil rubber boot, up to a depth of 15 mm from the end of the boot. Refer to <u>Adhesives</u>, <u>Fluids</u>, <u>Lubricants and Sealers</u>.
- 2. Remove any excess grease from around the end of the boot and ensure there is not an excessive amount within the boot.
- 8. Install the spark plug wires onto the spark plugs.

# **EXHAUST MANIFOLD INSTALLATION - RIGHT SIDE**

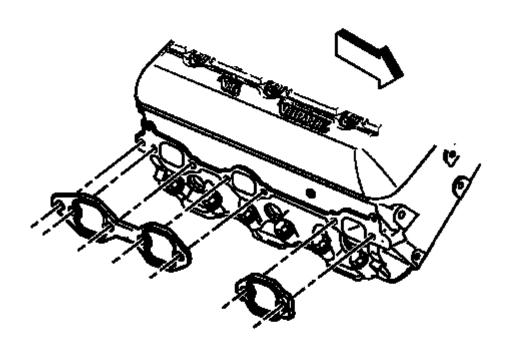

<u>Fig. 692: Exhaust Manifold Gaskets</u> Courtesy of GENERAL MOTORS COMPANY

1. Install the NEW exhaust manifold gaskets.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

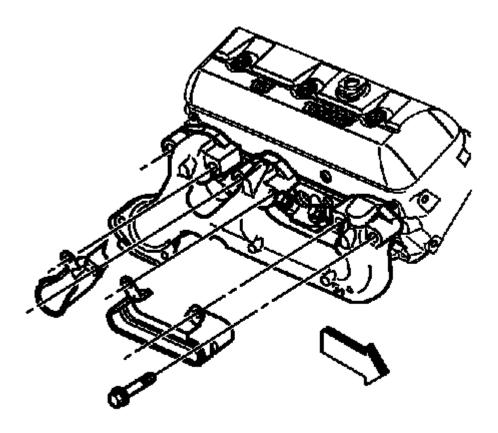


Fig. 693: Exhaust Manifold Bolts
Courtesy of GENERAL MOTORS COMPANY

- 2. Install the exhaust manifold.
- 3. Install the spark plug wire shields.
- 4. If reusing the fasteners, apply threadlock GM P/N 12345493 (Canadian P/N 10953488) or equivalent, to the threads of the exhaust manifold bolts.

# **CAUTION: Refer to Fastener Caution.**


- 5. Install the exhaust manifold bolts.
  - 1. Tighten the exhaust manifold bolts on the first pass to 15 N.m (11 lb ft).
  - 2. Tighten the exhaust manifold bolts on the final pass to 30 N.m (22 lb ft).
- 6. Install the spark plug wires to the spark plug wire retainers.

# NOTE: Only apply dielectric grease to the spark plug side of the spark plug wire boot.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- 7. Inspect the inside of the spark plug wire boot for a thin, even coat of grease. If there is no grease present or additional grease is necessary, complete the following procedure:
  - 1. Apply a thin coating of dielectric grease evenly to the inside of the ignition coil rubber boot, up to a depth of 15 mm from the end of the boot. Refer to <u>Adhesives</u>, <u>Fluids</u>, <u>Lubricants and Sealers</u>.
  - 2. Remove any excess grease from around the end of the boot and ensure there is not an excessive amount within the boot.
- 8. Install the spark plug wires onto the spark plugs.

# ENGINE FLYWHEEL INSTALLATION

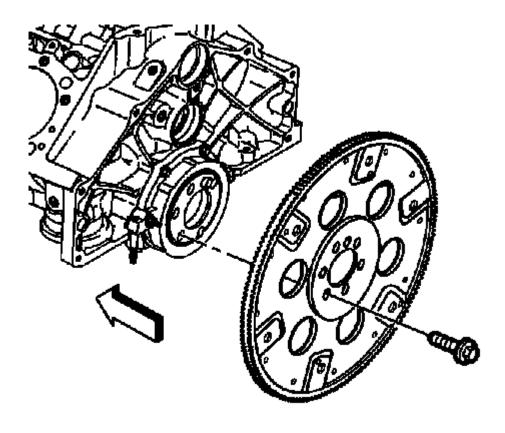

<u>Fig. 694: Engine Flywheel & Bolts</u> Courtesy of GENERAL MOTORS COMPANY

- 1. Install the engine flywheel to the crankshaft.
- 2. Align the locator hole to the pin.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

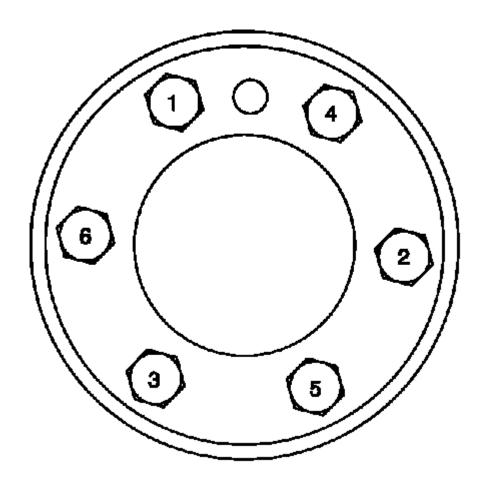


Fig. 695: Identifying Flywheel Bolt Tightening Sequence Courtesy of GENERAL MOTORS COMPANY

**CAUTION: Refer to Fastener Caution.** 

3. Install the engine flywheel bolts. Tighten the engine flywheel bolts in sequence to 100 N.m (74 lb ft).

# **ENGINE PRELUBING**

# **Special Tools**

J 45299 Engine Preluber

For equivalent regional tools, refer to **Special Tools**.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

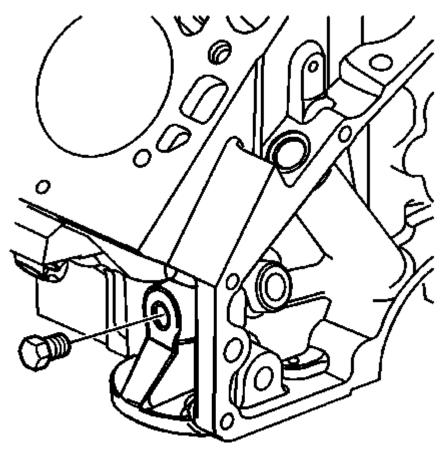


Fig. 696: View Of Engine Block Left Oil Gallery Plug Courtesy of GENERAL MOTORS COMPANY

NOTE: A constant and continuous flow of clean engine oil is required in order to

properly prime the engine. Be sure to use an approved engine oil as

specified in the owners manual.

1. Remove the engine oil filter and fill with clean engine oil.

**CAUTION: Refer to Fastener Caution.** 

- 2. Install the oil filter and tighten to 30 N.m (22 lb ft).
- 3. Locate the engine block left oil gallery plug and remove.
- 4. Install the M16 x 1.5 adapter P/N 509375.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

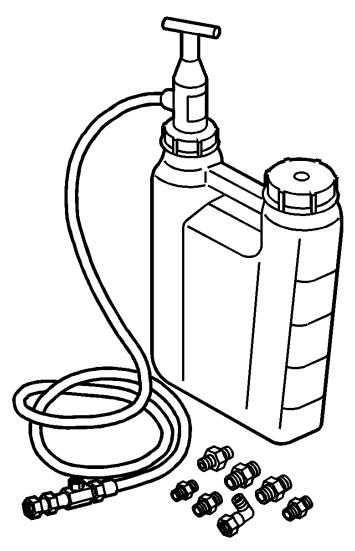


Fig. 697: View Of Engine Preluber
Courtesy of GENERAL MOTORS COMPANY

- 5. Install the flexible hose to the adapter and open the valve.
- 6. Pump the handle on the **J 45299** preluber in order to flow a minimum of 1-1.9 liters (1-2 quarts) engine oil. Observe the flow of engine oil through the flexible hose and into the engine assembly.
- 7. Close the valve and remove the flexible hose and adapter from the engine.
- 8. Install the gallery plug to the engine and tighten to 60 N.m (44 lb ft).
- 9. Top-off the engine oil to the proper level.

# **DESCRIPTION AND OPERATION**

# CRANKCASE VENTILATION SYSTEM DESCRIPTION

## **General Description**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

A crankcase ventilation system is used to consume crankcase vapors in the combustion process instead of venting them to the atmosphere. Fresh air from the intake system is supplied to the crankcase, mixed with blow by gases and then passed through a calibrated orifice into the intake manifold.

## **Operation**

The primary control is through the positive crankcase ventilation (PCV) orifice which meters the flow at a rate depending on inlet vacuum. The PCV orifice is an integral part of the valve cover. If abnormal operating conditions occur, the system is designed to allow excessive amounts of blow by gases to back flow through the crankcase vent into the intake system to be consumed by normal combustion.

# **Results of Incorrect Operation**

A plugged orifice may cause the following conditions:

- Rough idle
- Stalling or slow idle speed
- Oil leaks
- Sludge in engine

A leaking orifice may cause the following conditions:

- Rough idle
- Stalling
- High idle speed

#### DRIVE BELT SYSTEM DESCRIPTION

The drive belt system consists of the following components:

- The drive belt
- The drive belt tensioner
- The drive belt idler pulley
- The crankshaft balancer pulley
- The accessory drive component mounting brackets
- The accessory drive components
  - o The power steering pump, if belt driven
  - The generator
  - o The A/C compressor, if equipped
  - o The engine cooling fan, if belt driven
  - o The water pump, if belt driven
  - o The vacuum pump, if equipped
  - o The air compressor, if equipped

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

The drive belt system may use 1 belt or 2 belts. The drive belt is thin so that it can bend backwards and has several ribs to match the grooves in the pulleys. The drive belts are made of different types of rubbers, chloroprene or EPDM and have different layers or plys containing either fiber cloth or cords for reinforcement.

Both sides of the drive belt may be used to drive the different accessory drive components. When the back side of the drive belt is used to drive a pulley, the pulley is smooth.

The drive belt is pulled by the crankshaft balancer pulley across the accessory drive component pulleys. The spring loaded drive belt tensioner keeps constant tension on the drive belt to prevent the drive belt from slipping. The drive belt tensioner arm will move when loads are applied to the drive belt by the accessory drive components and the crankshaft.

The drive belt system may have an idler pulley, which is used to add wrap to the adjacent pulleys. Some systems use an idler pulley in place of an accessory drive component when the vehicle is not equipped with the accessory.

## ENGINE COMPONENT DESCRIPTION

#### **Balance Shaft**

The cast iron balance shaft is mounted in the crankcase above and in-line with the camshaft. A camshaft gear drives the gear attached to the balance shaft. The front end of the balance shaft is supported by a ball-type bearing. The rear end of the balance shaft uses a sleeve-type bearing.

#### Camshaft

The steel camshaft is supported by four bearings pressed into the engine block. The camshaft timing chain sprocket mounted to the front of the camshaft is driven by the crankshaft sprocket through a camshaft timing chain.

#### Crankshaft

The cast nodular iron crankshaft is supported by four crankshaft bearings. The number four crankshaft bearing at the rear of the engine is the end thrust bearing. The crankshaft bearings are retained by bearing caps that are machined with the engine block for proper alignment and clearances. The crankshaft position sensor reluctor ring has three lugs used for crankshaft timing and is constructed of powdered metal. The crankshaft position sensor reluctor ring has a slight interference fit onto the crankshaft and an internal keyway for correct positioning.

## **Cylinder Heads**

The cast iron cylinder heads have one intake and one exhaust valve for each cylinder. A spark plug is located between the valves in the side of the cylinder head. The valve guides and seats are integral to the cylinder head. The 4.3L heavy duty applications have pressed in exhaust valve seats. The valve rocker arms are positioned on the valve rocker arm supports and retained by a bolt.

## **Engine Block**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

The cast iron engine block has six cylinders arranged in a V shape with three cylinders in each bank. Starting at the front side of the engine block, the cylinders in the left bank are numbered 1-3-5 and cylinders in the right bank are numbered 2-4-6, when viewed from the rear. The firing order of the cylinders is 1-6-5-4-3-2. The cylinders are encircled by coolant jackets.

#### **Exhaust Manifolds**

The cast iron exhaust manifolds direct exhaust gases from the combustion chambers to the exhaust system.

#### **Intake Manifold**

The intake manifold is a two-piece design. The upper portion is made from a composite material and the lower portion is cast aluminum. The throttle body attaches to the upper manifold. The Central Multipoint Flexible Injection system uses multiple fuel injectors to meter and distribute fuel to each engine cylinder. The Central (MFI) is retained by a bracket bolted to the lower intake manifold. The fuel meter body also houses the pressure regulator. Metal inlet and outlet fuel lines and nylon delivery tubes connect to the Central (MFI) unit. The delivery tubes independently distribute fuel to each cylinder through injectors located at the port entrance of each manifold runner where the fuel is atomized.

## **Piston and Connecting Rod Assemblies**

The cast aluminum pistons use two compression rings and one oil control assembly. The piston is a low friction, lightweight design with a flat top and barrel shaped skirt. The piston pins are offset 0.9 mm (0.0354 in) toward the major thrust side, right side, to reduce piston slap as the connecting rod travels from one side of the piston to the other side after a stroke. The piston pins have a floating fit in the piston and are retained by a press fit in the connecting rod. Powdered metal connecting rods were introduced into production in late 2006. Powdered metal connecting rods and rod bearing caps are NOT interchangeable. They must be assembled with the mating surfaces properly oriented and aligned and the piston, piston pin and connecting rod are to be serviced as an assembly.

#### Valve Train

Motion is transmitted from the camshaft through the hydraulic roller valve lifters and the tubular valve pushrods to the roller type valve rocker arms. The roller type valve rocker arm pivots on a needle type bearing in order to open the valve. The valve rocker arms for each bank of cylinders are mounted to a one piece valve rocker arm support. Each valve rocker arm is retained on the valve rocker arm support and the cylinder head by a bolt. The hydraulic valve lifters keep all the parts of the valve train in constant contact. Each hydraulic valve lifter acts as an automatic adjuster and maintains zero lash in the valve train. This eliminates the need for periodic valve adjustment.

## **NEW PRODUCT INFORMATION**

The purpose of New Product Information is to highlight or indicate important product changes from the previous model year.

Changes may include one or more of the following items:

• A component comparison from the previous year

## 2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- Fastener changes
- Torque values and/or fastener tightening strategies
- Changed engine specifications
- New sealants and/or adhesives
- Disassembly and assembly procedure revisions
- Engine mechanical diagnostic procedure revisions
- New special tools required

# **Component Comparison**

No changes from previous year.

# Torque Values and/or Fastener Tightening Strategies

No changes from previous year.

## **Changed Engine Specifications**

No changes from previous year.

## New Sealants and/or Adhesives

No changes from previous year.

# Disassembly and Assembly Procedure Revisions

No changes from previous year.

# **Engine Mechanical Diagnostic Procedure Revisions**

No changes from previous year.

# **New Special Tools Required**

No changes from previous year.

## **LUBRICATION DESCRIPTION**

## **Engine Lubrication**

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

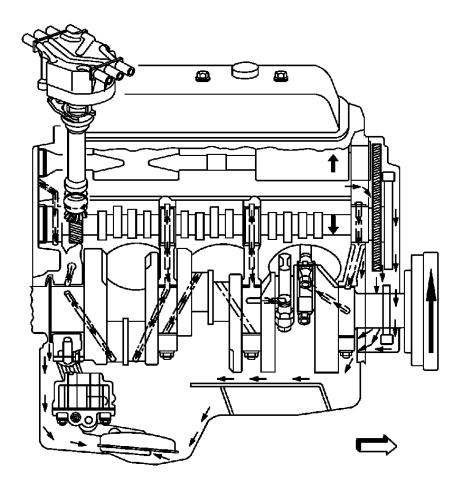


Fig. 698: Cutaway View Of Engine Lubrication System Courtesy of GENERAL MOTORS COMPANY

Full pressure lubrication, through a full-flow oil filter is supplied by a gear-type oil pump. Oil is drawn up through the oil pump screen and passes through the pump to the oil filter. The oil filter is a full-flow paper element unit with an anti-drain back valve. An oil filter bypass valve is used to ensure adequate oil supply, in the event the filter becomes plugged or develops excessive pressure drop. Filtered oil flows into the main gallery and then to the camshaft, the balance shaft, the rear bearing and the crankshaft bearings. The valve lifter oil gallery supplies oil to the valve lifters. Oil flows from the valve lifters through the hollow valve pushrods to the valve rocker arms. Oil drains back to the crankcase through the oil drain holes in the cylinder head. The camshaft timing chain is drip fed from the front camshaft bearing. The pistons and piston pins are lubricated by oil splash.

## **CLEANLINESS AND CARE**

- Throughout this section, it should be understood that proper cleaning and protection of machined surfaces and friction areas is part of the repair procedure. This is considered standard shop practice even if not specifically stated.
- When any internal engine parts are serviced, care and cleanliness is important.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- When components are removed for service, the components should be marked, organized or retained in a specific order for re-assembly.
- At the time of installation, the components should be installed in the same location and with the same mating surface as when removed.
- An automobile engine is a combination of many machined, honed, polished and lapped surfaces with tolerances that are measured in millimeters or thousandths of an inch. The surfaces should be protected to avoid component damage.
- Apply a liberal amount of clean engine oil to friction areas during assembly.
- Proper lubrication will protect and lubricate friction areas during initial operation.

## SEPARATING PARTS

IMPORTANT: Many internal engine components will develop specific wear patterns on their friction surfaces.

When disassembling the engine, internal components MUST be separated, marked and organized in a way to ensure reinstallation to original location and position.

Mark or identify the following components:

- Piston and the piston pin
- Piston to the specific cylinder bore
- Piston rings to the specific cylinder bore
- Connecting rod to the crankshaft journal
- Connecting rod to connecting rod cap
- Crankshaft bearings and connecting rod bearings
- Engine camshaft and valve lifters
- Valve lifters, valve rocker arms and valve rocker arm supports
- Valve to the valve guide
- Valve spring to cylinder head location
- Engine block bearing cap location and direction
- Oil pump drive and driven gears

## REPLACING ENGINE GASKETS

# Gasket Reuse and Applying Sealant

- Do not reuse any gasket unless specified.
- Gaskets that can be reused will be identified in the service procedure.
- Do not apply sealant to any gasket or sealing surface unless specified in the service procedure.

## **Separating Components**

#### 2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- Use a rubber mallet in order to separate the components.
- Bump the part sideways in order to loosen the components.
- Bumping of the component should be done at bends or reinforced areas of the component to prevent distortion of the components.

### **Cleaning Gasket Surfaces**

- Use care to avoid gouging or scraping the sealing surfaces.
- Use a plastic or wood scraper in order to remove all the sealant from the components.

Do not use any other method or technique to remove the sealant or the gasket material from a part.

- Do not use abrasive pads, sand paper or power tools to clean the gasket surfaces.
  - o These methods of cleaning can cause damage to the component sealing surfaces.
  - o Abrasive pads also produce a fine grit that the oil filter cannot remove from the engine oil.

This fine grit is an abrasive and can cause internal engine damage.

### **Assembling Components**

- Assemble components using only the sealant (or equivalent) that is specified in the service procedure.
- Sealing surfaces must be clean and free of debris or oil.
- Specific components such as crankshaft oil seals or valve stem oil seals may require lubrication during assembly.
- Components requiring lubrication will be identified in the service procedure.
- Apply only the amount of sealant specified in the service procedure to a component.
- Do not allow the sealant to enter into any blind threaded holes, as the sealant may prevent the fastener from clamping properly or cause component damage when tightened.

### IMPORTANT: Do not overtighten the fasteners.

• Tighten the fasteners to the proper specifications.

### USE OF ROOM TEMPERATURE VULCANIZING (RTV) AND ANAEROBIC SEALANT

### **Sealant Types**

NOTE:

The correct sealant and amount of sealant must be used in the proper location to prevent oil leaks, coolant leaks or the loosening of the fasteners. DO NOT interchange the sealants. Use only the sealant or equivalent, as specified in the service procedure.

The following 2 major types of sealant are commonly used in engines:

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- Anaerobic sealant room temperature vulcanizing (RTV)
- Anaerobic sealant, which include the following:
  - o Gasket eliminator
  - o Pipe
  - o Threadlock

### Anaerobic Type Room Temperature Vulcanizing (RTV) Sealant

Anaerobic type room temperature vulcanizing (RTV) sealant cures in the absence of air. This type of sealant is used where 2 components, such as the intake manifold and the engine block, are assembled together.

Use the following information when using RTV sealant:

- Do not use RTV sealant in areas where extreme temperatures are expected. These areas include:
  - o The exhaust manifold
  - o The head gasket
  - o Any other surfaces where a different type of sealant is specified in the service procedure
- Always follow all the safety recommendations and the directions that are on the RTV sealant container.
- Use a plastic or wood scraper in order to remove all the RTV sealant from the components.

CAUTION: Do not allow the RTV sealant to enter any blind threaded hole. RTV sealant that is allowed to enter a blind threaded hole can cause hydraulic lock of the fastener when the fastener is tightened. Hydraulic lock of a fastener can lead to damage to the fastener and/or the components. Hydraulic lock of a fastener can also prevent the proper clamping loads to be obtained when the fastener is tightened. Improper clamping loads can prevent proper sealing of the components allowing leakage to occur. Preventing proper fastener tightening can allow the components to loosen or separate leading to extensive engine damage.

- The surfaces to be sealed must be clean and dry.
- Use a RTV sealant bead size as specified in the service procedure.
- Apply the RTV sealant bead to the inside of any bolt holes areas.

NOTE: Do not wait for the RTV sealant to skin over.

• Assemble the components while the RTV sealant is still wet to the touch, within 3 minutes.

NOTE: Do not overtighten the fasteners.

• Tighten the fasteners in sequence, if specified and to the proper torque specifications.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

#### **Anaerobic Type Gasket Eliminator Sealant**

Anaerobic type gasket eliminator sealant cures in the absence of air. This type of sealant is used where 2 rigid parts, such as castings, are assembled together. When 2 rigid parts are disassembled and no sealant or gasket is readily noticeable, then the 2 parts were probably assembled using an anaerobic type gasket eliminator sealant.

Use the following information when using gasket eliminator sealant:

- Always follow all the safety recommendations and directions that are on the gasket eliminator sealant container.
- Apply a continuous bead of gasket eliminator sealant to one flange.

The surfaces to be sealed must be clean and dry.

CAUTION: Do not allow the sealant to enter a blind hole. The sealant may prevent the fastener from achieving proper clamp load, cause component damage when the fastener is tightened or lead to component failure.

### NOTE:

- Gasket eliminator sealed joint fasteners that are partially torqued and the gasket eliminator sealant allowed to cure more than 5 minutes, may result in incorrect shimming and sealing of the joint.
- · Do not overtighten the fasteners.
  - Apply the gasket eliminator sealant evenly to get a uniform thickness of the gasket eliminator sealant on the sealing surface.
  - Tighten the fasteners in sequence, if specified and to the proper torque specifications.
  - After properly tightening the fasteners, remove the excess gasket eliminator sealant from the outside of the joint.

### **Anaerobic Type Threadlock Sealant**

Anaerobic type threadlock sealant cures in the absence of air. This type of sealant is used for threadlocking and sealing of bolts, fittings, nuts and studs. This type of sealant cures only when confined between 2 close fitting metal surfaces.

Use the following information when using threadlock sealant:

- Always follow all safety recommendations and directions that are on the threadlock sealant container.
- The threaded surfaces to be sealed must be clean and dry.
- Apply the threadlock sealant as specified on the threadlock sealant container.

#### NOTE:

• Fasteners that are partially torqued and then the threadlock sealant allowed to cure more than 5 minutes, may result in incorrect clamp load of assembled components.

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

### • Do not overtighten the fasteners.

• Tighten the fasteners in sequence, if specified and to the proper torque specifications.

### **Anaerobic Type Pipe Sealant**

Anaerobic type pipe sealant cures in the absence of air and remains pliable when cured. This type of sealant is used where 2 parts are assembled together and require a leak proof joint.

Use the following information when using pipe sealant:

- Do not use pipe sealant in areas where extreme temperatures are expected. These areas include:
  - o The exhaust manifold
  - o The head gasket
  - o Surfaces where a different sealant is specified
- Always follow all the safety recommendations and the directions that are on the pipe sealant container.
- The surfaces to be sealed must be clean and dry.
- Use a pipe sealant bead of the size or quantity as specified in the service procedure.

CAUTION: Do not allow the sealant to enter a blind hole. The sealant may prevent the fastener from achieving proper clamp load, cause component damage when the fastener is tightened or lead to component failure.

- Apply the pipe sealant bead to the inside of any bolt hole areas.
- Apply a continuous bead of pipe sealant to one sealing surface.

### NOTE: Do not overtighten the fasteners.

• Tighten the fasteners in sequence, if specified and to the proper torque specifications.

#### **TOOLS AND EQUIPMENT**

Special tools are listed and illustrated throughout this section with a complete listing at the end of the section. The tools (or the equivalents) are specially designed to quickly and safely accomplish the operations for which the tools are intended. The use of special tools will also minimize possible damage to engine components. Some precision measuring tools are required for inspection of certain critical components. Torque wrenches and a torque angle meter are necessary for the proper tightening of various fasteners.

To properly service the engine assembly, the following items should be readily available:

- Approved eye protection and safety gloves
- A clean, well-lit, work area
- A suitable parts cleaning tank


2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana

- A compressed air supply
- Trays or storage containers to keep parts and fasteners organized
- An adequate set of hand tools
- Approved engine repair stand
- An approved engine lifting device that will adequately support the weight of the components


# **SPECIAL TOOLS AND EQUIPMENT**

### **SPECIAL TOOLS**


Illustration	Tool Number/ Description
Thusu auon	Description
	J 3049-A
	Valve Lifter
	Remover
	I

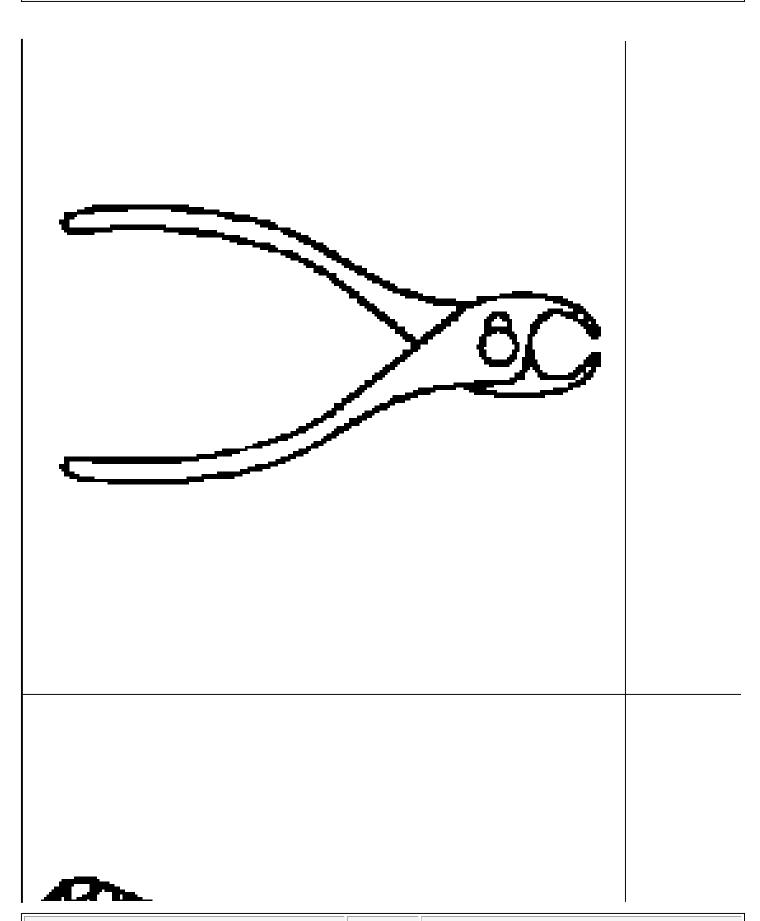


J 5590 Pinion Bearing	20	14 ENGINE Engine Med	chanical - 4.3	L (LU3) - Express/Sava	ana	
Pinion Bearing Race Installer-						J 5239 Connecting Rod Bolt Guide Set
miércoles, 29 de septiembre de 2021 03:25:37 p. m. Page 763 © 2011 Mitchell Repair Information Company, LLC						Pinion Bearing Race Installer- Rear

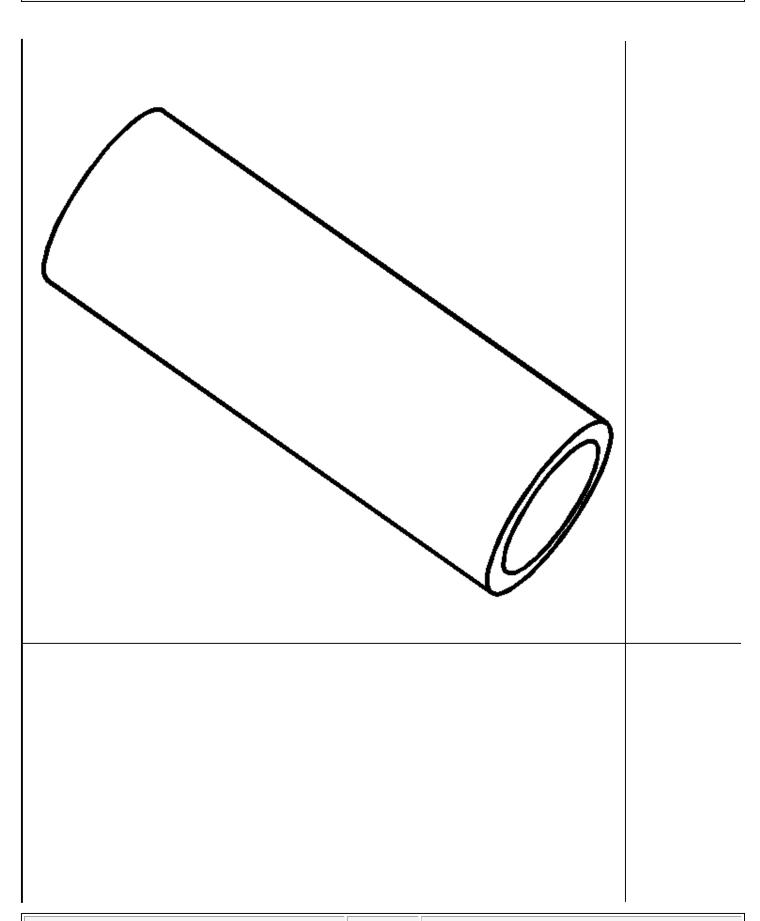


2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana				
			J 5825-A Crankshaft Gear Remover	
miércoles, 29 de septiembre de 2021 03:25:37 p. m.	Page 765	© 2011 Mitchell Repair Inform	J 5830-02 Valve Guide Reamer Set	

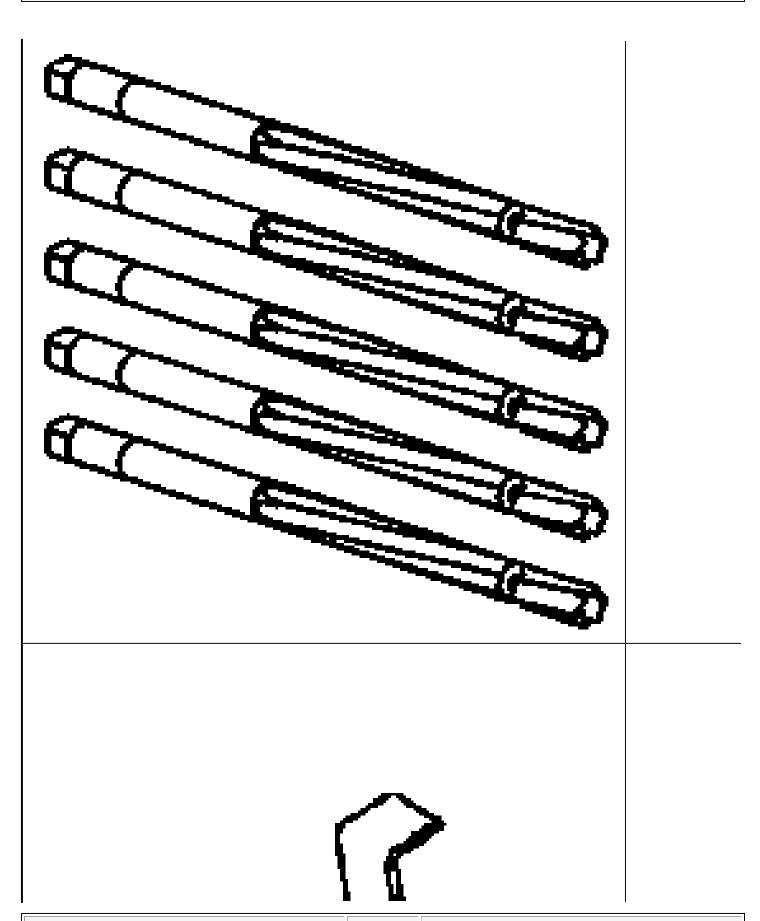


2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana				
			J 5892-D Valve Spring Compressor	
miércoles, 29 de septiembre de 2021 03:25:37 p. m.	Page 767	© 2011 Mitchell Repair Informat	J 7872 Magnetic Base Dial Indicator	

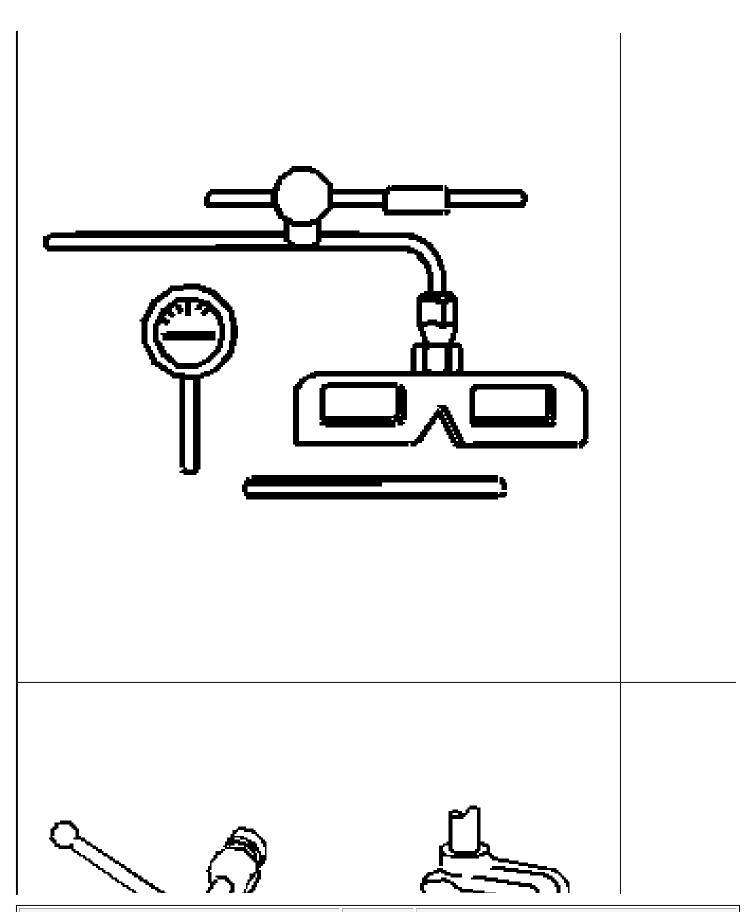


2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana	a
	J 8001 Dial Indicator Set
miércoles, 29 de septiembre de 2021 03:25:37 p. m. Page 769 © 2011 Mitchell Repair	J 8037 Ring Compressor

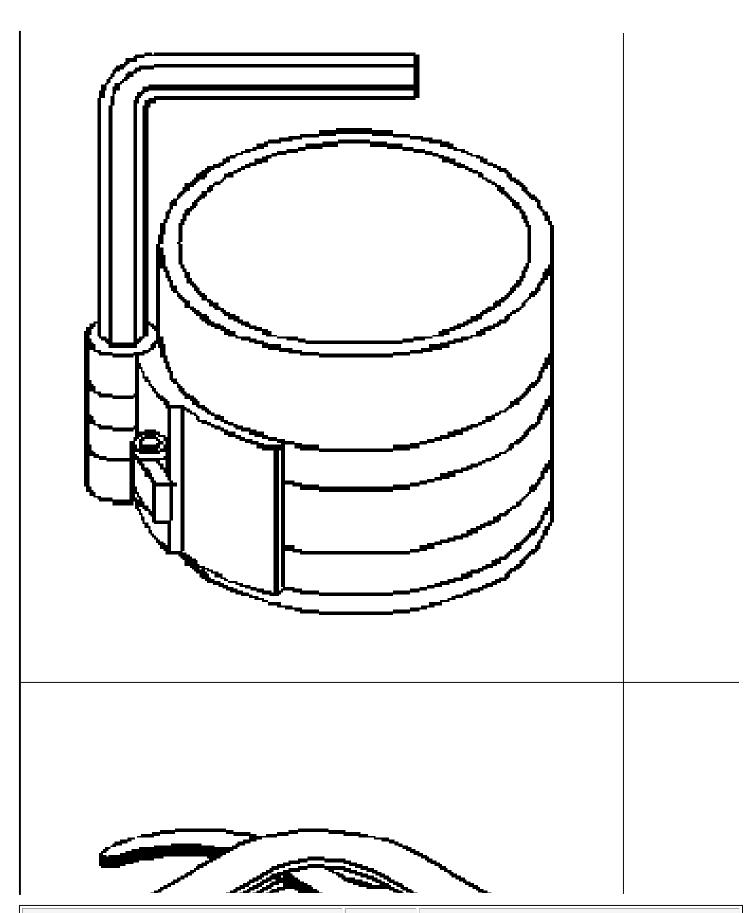


J 8062 Valve Spring Compressor Head Off   J 8087 Cylinder Bore Gauge	2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana	
J 8087 Cylinder Bore		
Cylinder Bore		J 8062 Valve Spring Compressor - Head Off
		Cylinder Bore

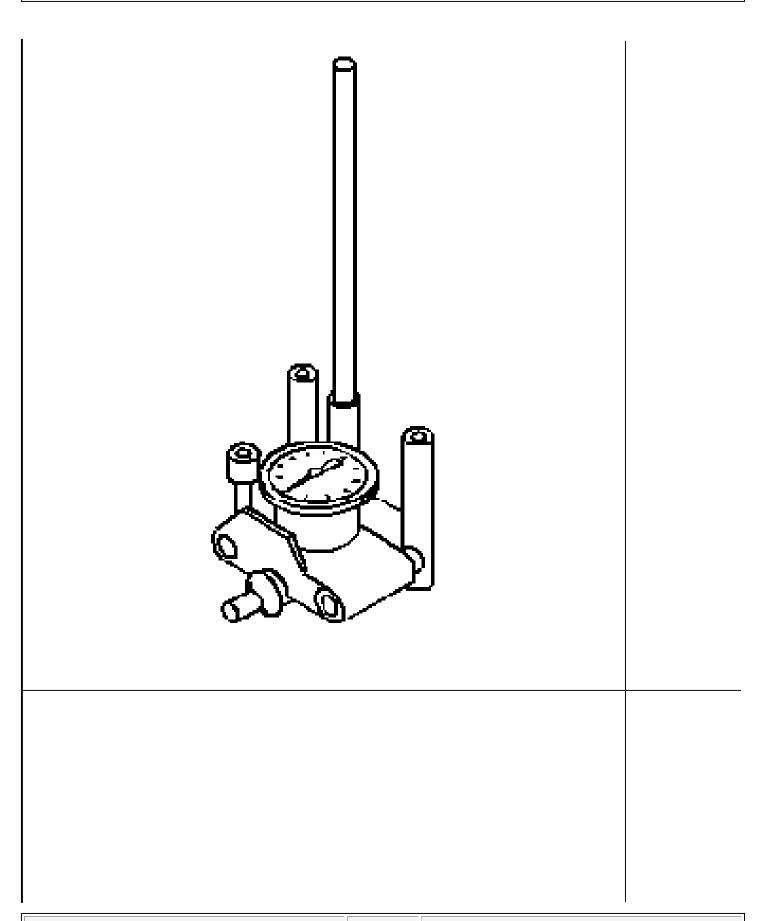


2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana	
	J 8089 Carbon Removing Brush
miércoles, 29 de septiembre de 2021 03:25:37 p. m. Page 773 © 2011 Mitchell Repair Informat	J 8092 Driver Handle

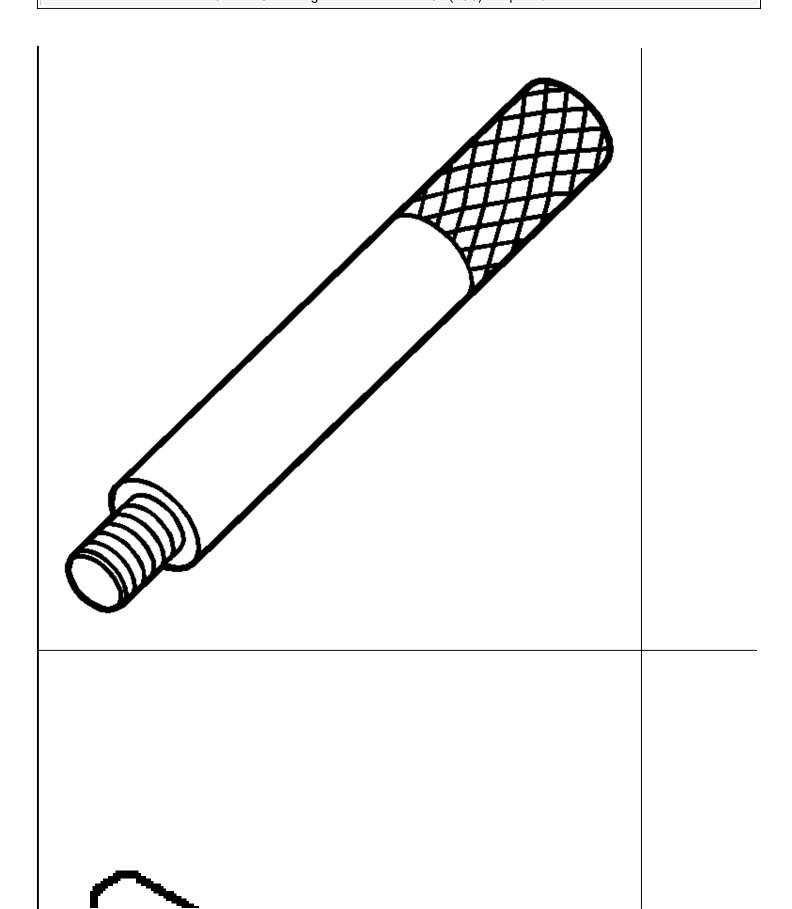

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana				
		J 9666 Valve Spring Tester		
miércoles, 29 de septiembre de 2021 03:25:37 p. m.	Page 775	J 21882 Oil Suction Pipe Installer		

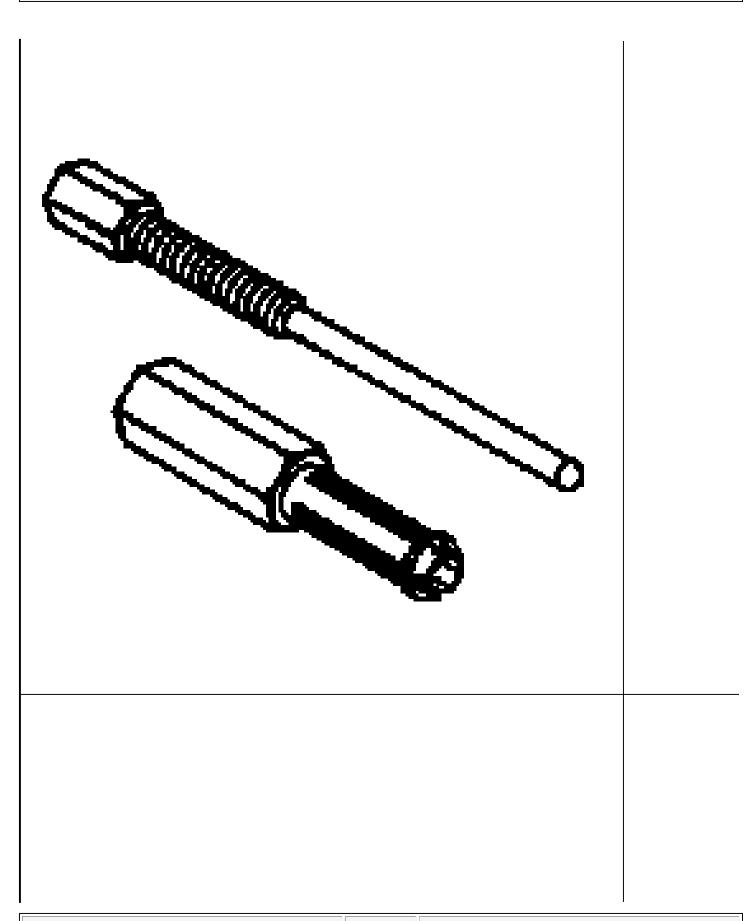


J 22794 Spark Plug Port Adapter  J 23523-F Crankshaft Balancer Remover and Installer	2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana					
Spark Plug Port Adapter  J 23523-F Crankshaft Balancer Remover and						
Crankshaft Balancer Remover and						Spark Plug Port
miércoles, 29 de septiembre de 2021 03:25:37 p. m. Page 777 © 2011 Mitchell Repair Information Company, LLC.			00.05.07	Do 21. 777	© 2044 M2 L II 5	Crankshaft Balancer Remover and Installer

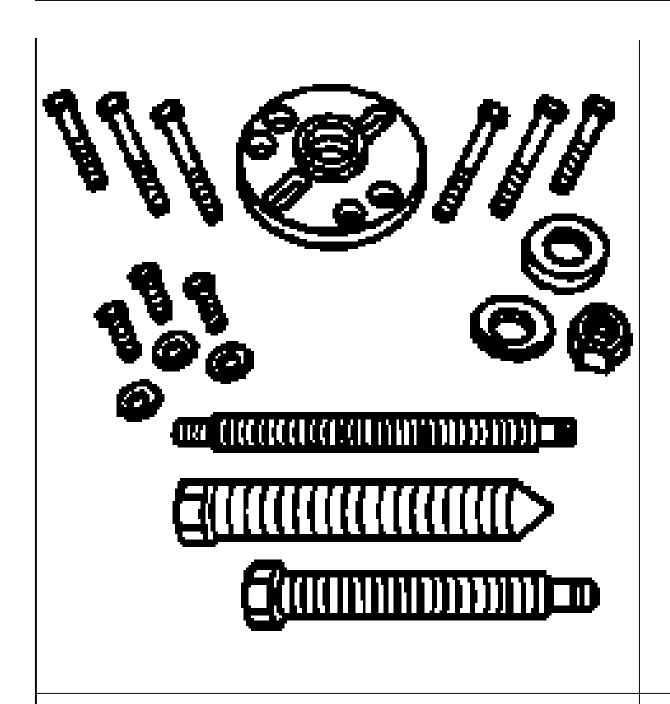





2014 ENGINE Engine Me	chanical - 4.3	L (LU3) - Express/Savana	
			J 24086-C Piston Pin Remover/Installer Set
miércoles, 29 de septiembre de 2021 03:25:37 p. m.	Page 779	© 2011 Mitchell Repair Informat	J 24270 Cylinder Bore Ridge Reamer

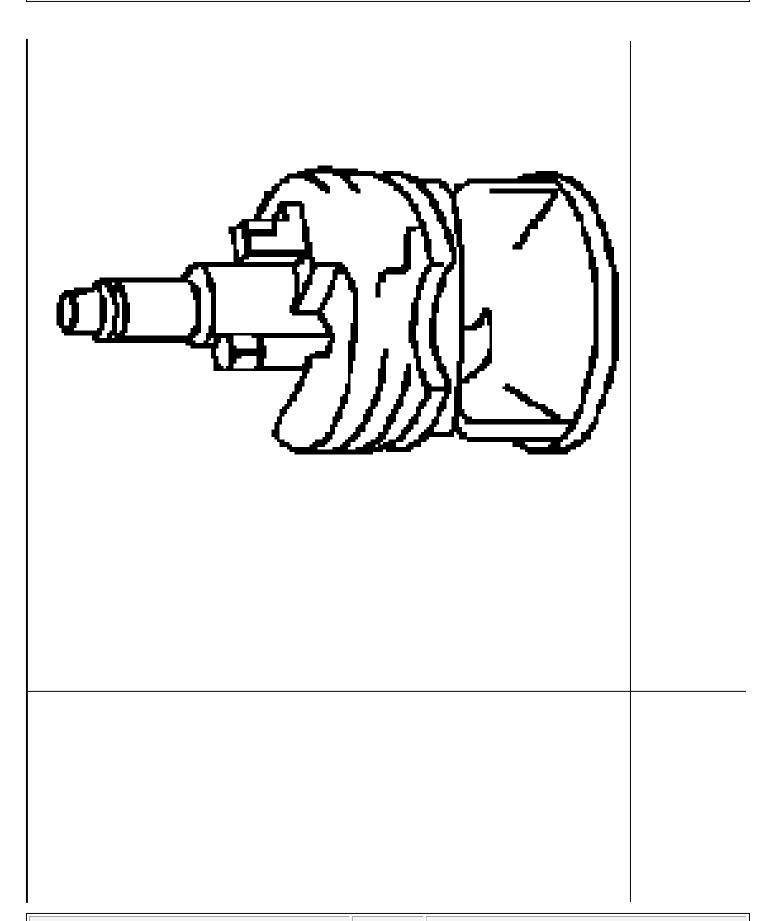

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana	
	J 26941 Bushing and Bearing Remover - 3-4 in
miércoles, 29 de septiembre de 2021 03:25:37 p. m. Page 781 © 2011 Mitchell Repair Informa	J 28428-E High Intensity Black Light Kit

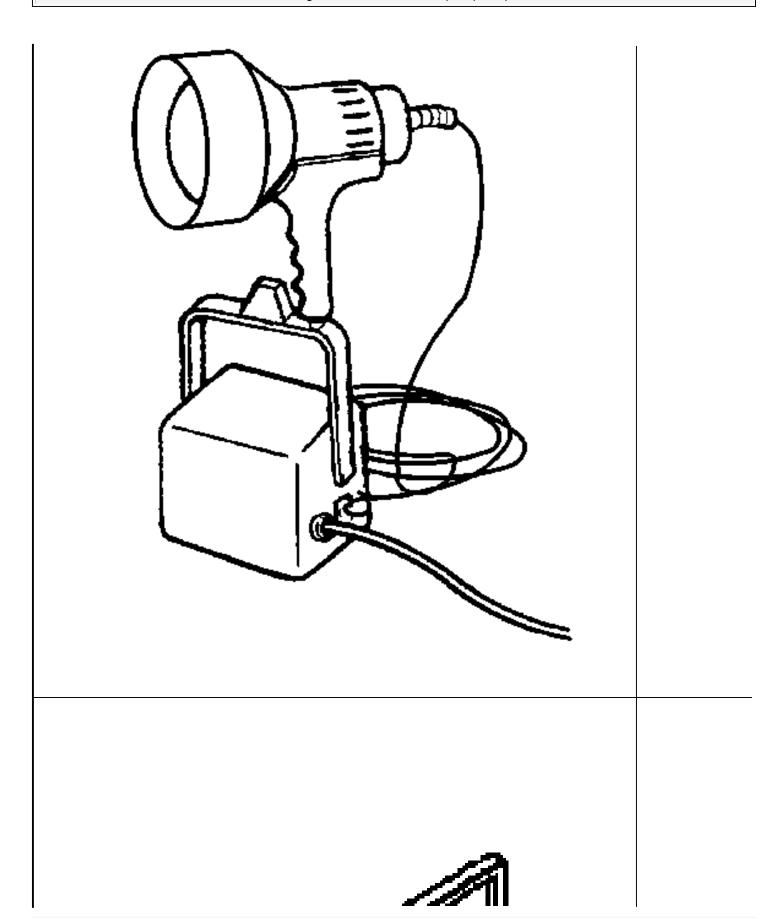

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana	
	J 33049 Camshaft Bearing Service Set
miércoles, 29 de septiembre de 2021 03:25:37 p. m. Page 783 © 2011 Mitchell Repair Informat	J 35468 Cover Aligner and Seal Installer

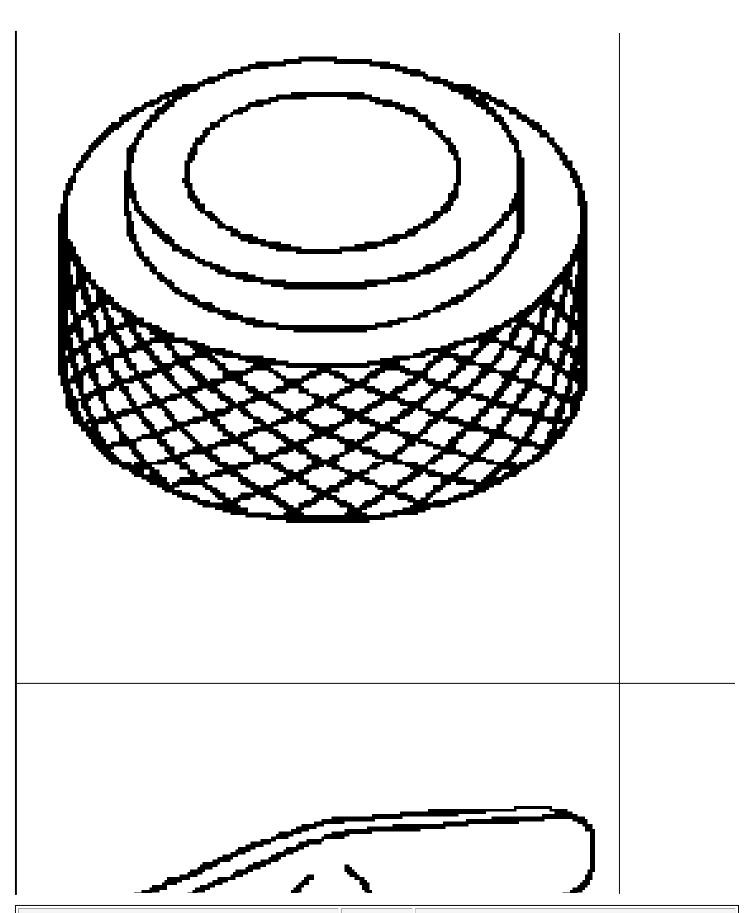


J 35621-B Rear Main Seal Installer	2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana	
Rear Main Seal	<b>I</b>	
		Rear Main Seal
J 35667-A Cylinder Head Leakdown Tester  miércoles, 29 de septiembre de 2021 03:25:37 p. m. Page 785 © 2011 Mitchell Repair Information Company, LLC.		Cylinder Head Leakdown Tester







2014 EN	GINE Engine Mechan	nical - 4.3L (LU3) - Ex	xpress/Savana	
				J 36996 Balance Shaft Installer
miércoles, 29 de septiembre de 202		age 787 © 2011 N	∕litchell Repair Informat	J 38606 Valve Spring Compressor

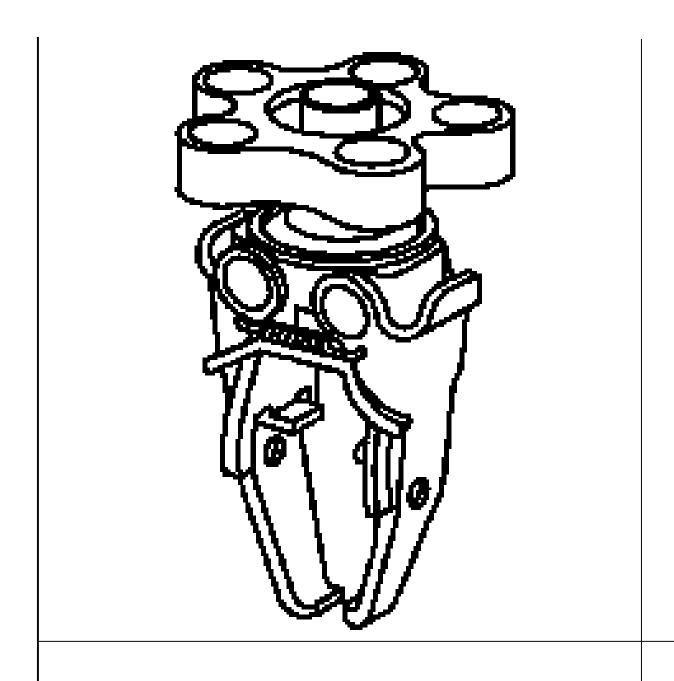


2014 ENGINE Engine Mechanical - 4.3L (LU3)	- Express/Savana
	J 38834 Balance Shaft Service Kit
miércolas, 20 de sentiembre de 2021 03:25:38 p. m. Page 780 © 20	J 41240 Fan Clutch Remover and Installer
miércoles, 29 de septiembre de 2021 03:25:38 p. m. Page 789 © 20	11 Mitchell Repair Information Company, LLC

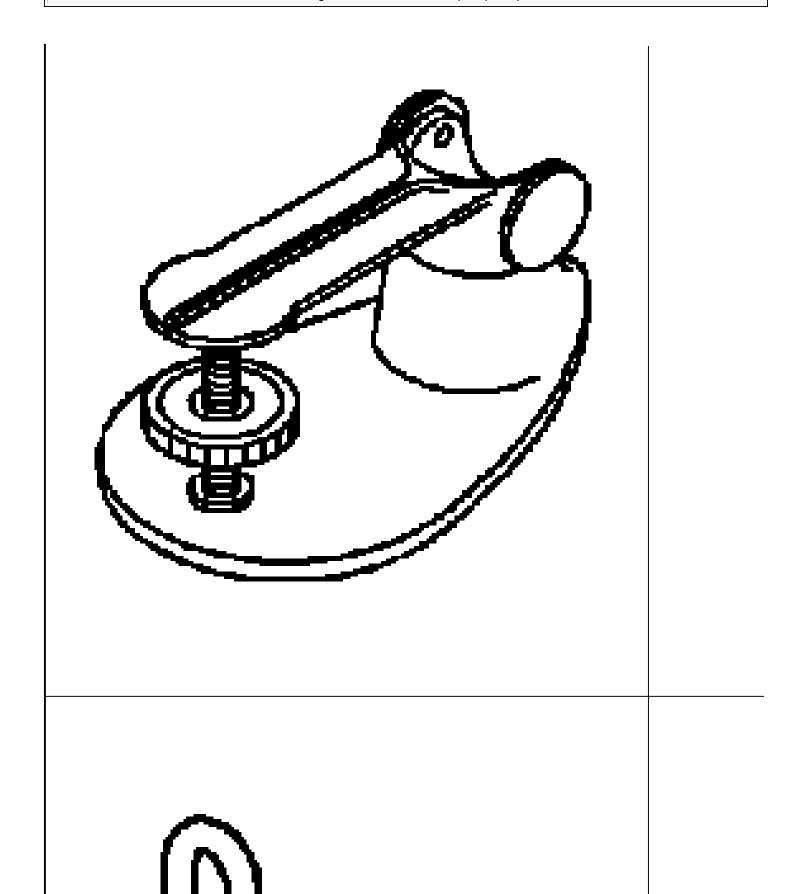

2014 ENGINE Engine Me	echanical - 4.3	L (LU3) - Express/Savana	a
			J 41427 Engine Lift Bracket
miércoles, 29 de septiembre de 2021 03:25:38 p. m.	Page 791	© 2014 Mitch all Day = 1	J 41712 Oil Pressure Switch Socket

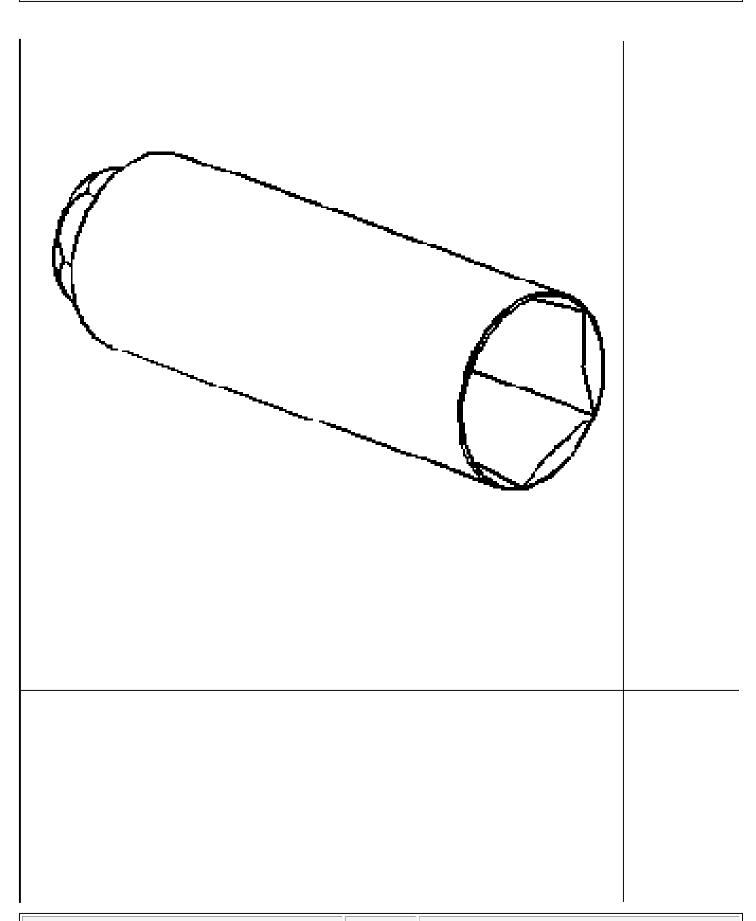

2014 ENGINE Engine Mechanical - 4.3L (LU	l3) - Express/Savana
	J 42073 Valve Stem Oil Seal Installer
	J 43690 Rod Bearing Clearance Checking Tool
miércoles, 29 de septiembre de 2021 03:25:38 p. m. Page 793 © 2	2011 Mitchell Repair Information Company, LLC

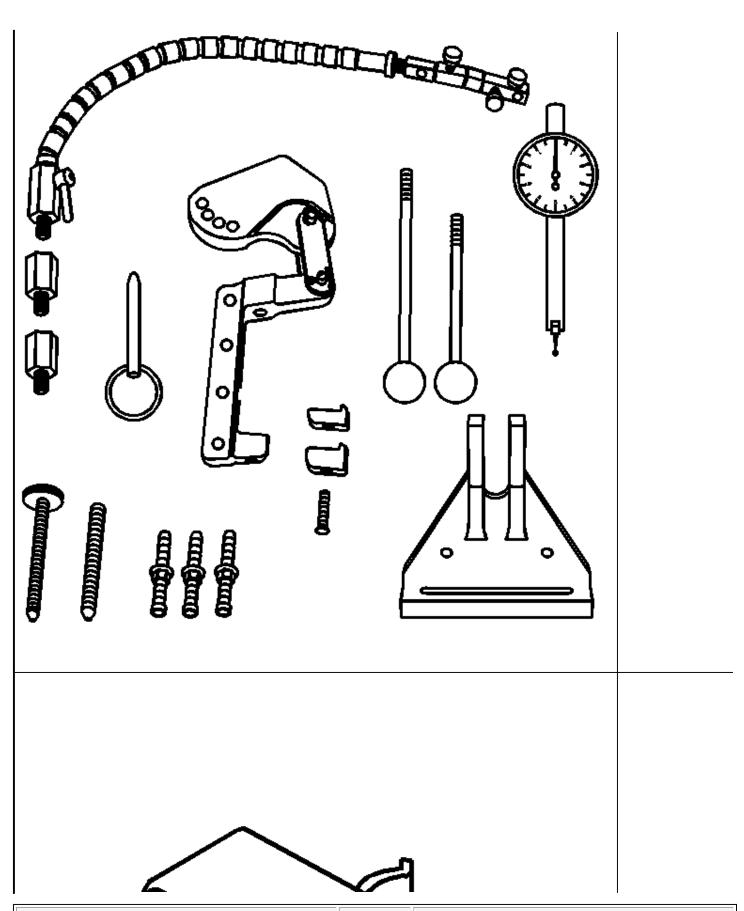

2014 ENGINE Engine Mechanical - 4.3L (LU3) - Express/Savana	
	J 45059 Angle Meter
miércoles, 29 de septiembre de 2021 03:25:38 p. m. Page 795 © 2011 Mitchell Repair Informati	J 45299 Engine Preluber

