

2014 Subaru Impreza

2014 ENGINE Mechanical - Impreza & XV Crosstrek

2014 ENGINE

Mechanical - Impreza & XV Crosstrek

GENERAL DESCRIPTION

SPECIFICATION

Engine	Model			2.0 L
	Cylinder arrangement			Horizontally opposed, liquid cooled, 4-cylinder, 4-stroke gasoline engine
	Valve system mechanism			Chain driven, double overhead camshaft, 4-valve/cylinder
	Bore x Stroke	mm (in)		84.0 x 90.0 (3.31 x 3.54)
	Displacement	cm ³ (cu in)		1, 995 (121.73)
	Compression ratio			Gasoline engine model: 10.5
				HEV model: 10.8
	Compression pressure (at 200 - 300 rpm)	kPa (kg/cm ² , psi)	Standard	1, 050 - 1, 400 (11 - 14, 152 - 203)
	Number of piston rings			Compression ring: 2 Oil ring: 1
	Intake valve timing	Open	Max. retard	ATDC 25°
			Min. advance	BTDC 43°
		Close	Max. retard	ABDC 85°
			Min. advance	ABDC 17°
	Exhaust valve timing	Open	Max. retard	ABDC 3°
			Min. advance	BBDC 52°
		Close	Max. retard	ATDC 47°
			Min. advance	BTDC 8°
	Cam clearance	Intake	Standard	0.13 ^{+0.02} (0.0051 ^{+0.0008} -0.03 ^{-0.0012})
		Exhaust	Standard	0.22±0.02 (0.0087±0.0008)

2014 Subaru Impreza

2014 ENGINE Mechanical - Impreza & XV Crosstrek

Idle speed (For CVT model, select lever in "P" or "N" range. For MT model, gear shift lever in neutral position.)	No load	Standard	650±100
	A/C ON	Standard	800 - 900±50
Ignition order	1 --> 3 --> 2 --> 4		
Ignition timing	BTDC/rpm	Standard	Gasoline engine model: 16° ±10°/650
			HEV model: 10°±10°/650

NOTE: OS: Oversize US: Undersize

Camshaft	Bending		mm (in)	Limit	0.020 (0.00079)
	Cam lobe height	mm (in)	Intake	Standard	40.34 - 40.44 (1.588 - 1.592)
			Exhaust	Standard	39.66 - 39.76 (1.561 - 1.565)
	Cam base circle diameter		mm (in)	Standard	34.0 (1.339)
	Journal outer diameter		mm (in)	Standard	25.946 - 25.963 (1.0215 - 1.0222)
	Thrust clearance		mm (in)	Standard	0.068 - 0.116 (0.0027 - 0.0047)
	Oil clearance		mm (in)	Standard	0.037 - 0.072 (0.0015 - 0.0028)
Cylinder head	Warpage (mating surface with cylinder block)		mm (in)	Limit	0.035 (0.0014)
	Grinding limit			mm (in)	To 98.4 (3.874)
	Height		mm (in)	Standard	98.5 (3.878)
Valve & valve guide	Valve overall length		mm (in)	Intake	104.95 (4.132)
				Exhaust	96.5 (3.799)
	Valve head edge thickness	mm (in)	Intake	Standard	0.8 - 1.2 (0.031 - 0.047)
			Exhaust	Standard	1.0 - 1.4 (0.039 - 0.055)
	Valve stem outer diameter	mm (in)	Intake	Standard	5.455 - 5.470 (0.2148 - 0.2154)
			Exhaust	Standard	5.445 - 5.460 (0.2144 - 0.2150)
	Valve guide inner diameter		mm (in)	Standard	5.500 - 5.512 (0.2165 - 0.2170)
	Clearance between valve and valve guide	mm (in)	Intake	Standard	0.030 - 0.057 (0.0012 - 0.0022)
			Exhaust	Standard	0.040 - 0.067 (0.0016 - 0.0026)

2014 Subaru Impreza

2014 ENGINE Mechanical - Impreza & XV Crosstrek

	Valve guide protrusion amount		mm (in)	Standard	11.4 - 11.8 (0.449 - 0.465)	
Valve & valve shim	Valve stem end outer diameter	mm (in)	Intake	Standard	5.455 - 5.470 (0.2148 - 0.2154)	
			Exhaust	Standard	5.445 - 5.460 (0.2144 - 0.2150)	
	Valve shim inner diameter		mm (in)	Standard	5.500 - 5.560 (0.2165 - 0.2189)	
	Clearance between valve and valve shim	mm (in)	Intake	Standard	0.030 - 0.105 (0.0012 - 0.0041)	
			Exhaust	Standard	0.040 - 0.115 (0.0016 - 0.0045)	
Valve seat	Seating width between valve and valve seat	mm (in)	Intake	Standard	0.8 - 1.6 (0.031 - 0.063)	
			Exhaust	Standard	1.1 - 1.7 (0.043 - 0.067)	
	Seating angle between valve and valve seat				45°	
	Seating position between valve and valve seat				Valve face center	
Valve spring	Free length			mm (in)	Standard	Gasoline engine model: 41.06 (1.617)
						HEV model: 41.68 (1.641)
	Tension/spring height	N (kgf, lb)/mm (in)	Set	Standard	182 - 210 (18.56 - 21.41, 40.92 - 47.22)/33.0 (1.299)	
			Lift	Standard	Gasoline engine model: 552 - 610 (56.29 - 62.20, 124.11 - 137.15)/22.0 (0.866)	
					HEV model: 502 - 554 (51.19 - 56.49, 112.87 - 124.56)/22.0 (0.866)	
	Squareness			Standard	2.5°, 1.8 mm (0.071 in) or less	
	Cylinder block warpage (Mating surface with cylinder head)		mm (in)	Limit	0.025 (0.00098)	
	Grinding limit of cylinder block			mm (in)	To 204.9 (8.067)	
	Height of cylinder block		mm (in)	Standard	205.0 (8.071)	
	Inner diameter of cylinder liner	mm (in)	Cylinder bore size mark A	Standard	84.005 - 84.015 (3.3073 - 3.3077)	
			Cylinder bore size mark B	Standard	83.995 - 84.005 (3.3069 - 3.3073)	
	Cylindricity of cylinder liner		mm (in)	Limit	0.015 (0.0006)	
	Out-of-roundness of cylinder liner		mm	Limit	0.010 (0.0004)	

2014 Subaru Impreza

2014 ENGINE Mechanical - Impreza & XV Crosstrek

Cylinder block & piston				(in)		
	Piston grade point				mm (in)	38.0 (1.50)
	Piston outer diameter	mm (in)	Standard Size	Grade A	Standard	83.975 - 83.985 (3.3061 - 3.3065)
				Grade B	Standard	83.965 - 83.975 (3.3057 - 3.3061)
			0.25 (0.0098) OS		Standard	84.215 - 84.235 (3.3155 - 3.3163)
			0.50 (0.0197) OS		Standard	84.465 - 84.485 (3.3254 - 3.3262)
	Clearance between cylinder liner and piston				mm (in)	Standard
Inner diameter of cylinder liner boring limit (diameter)				mm (in)		To 84.505 (3.3270)
Piston and piston pin	Degree of fit					Piston pin must be fitted into position with thumb at 20°C (68°F).
	Clearance between piston and piston pin				mm (in)	Standard
Piston ring	Closed gap	mm (in)	Compression ring	Top ring	Standard	0.20 - 0.35 (0.0079 - 0.0138)
				Second ring	Standard	0.40 - 0.50 (0.0157 - 0.0197)
			Oil ring (Upper rail and lower rail)			Standard
	Clearance between compression ring and piston	mm (in)	Top ring	Standard	0.040 - 0.080 (0.0016 - 0.0031)	
			Second ring	Standard	0.030 - 0.070 (0.0012 - 0.0028)	
	Connecting rod and connecting rod bearing	Bend or twist per 100 mm (3.94 in) in length			mm (in)	Limit
Thrust clearance			mm (in)	Standard	0.070 - 0.330 (0.0028 - 0.0130)	
Connecting rod bearing thickness (at center)		mm (in)	Standard size		Standard	1.492 - 1.508 (0.0587 - 0.0594)
			0.03 (0.0012) US		Standard	1.511 - 1.515 (0.0595 - 0.0596)
			0.05 (0.0020) US		Standard	1.521 - 1.525 (0.0599 - 0.0600)
			0.25 (0.0098) US		Standard	1.621 - 1.625 (0.0638 - 0.0640)
Oil clearance			mm (in)	Standard	0.017 - 0.047 (0.0007 - 0.0019)	
Piston pin &		Clearance between piston pin and			mm	

2014 Subaru Impreza

2014 ENGINE Mechanical - Impreza & XV Crosstrek

connecting rod bushing	connecting rod bushing (in)		Standard	0.0010)
Crankshaft and crankshaft bearing	Bending mm (in)		Limit	0.035 (0.0014)
	Crankshaft pin	Cylindricity mm (in)	Limit	0.006 (0.0002)
		Out-of-roundness mm (in)	Limit	0.005 (0.0002)
		Grinding limit (dia.) mm (in)		To 47.726 (1.8790)
	Crankshaft journal	Cylindricity mm (in)	Limit	0.006 (0.0002)
		Out-of-roundness mm (in)	Limit	0.005 (0.0002)
		Grinding limit (dia.) mm (in)		To 67.735 (2.6667)
	Crankshaft pin outer diameter mm (in)	Standard size	Standard	47.976 - 48.000 (1.8888 - 1.8898)
		0.03 (0.0012) US	Standard	47.946 - 47.970 (1.8876 - 1.8886)
		0.05 (0.0020) US	Standard	47.926 - 47.950 (1.8868 - 1.8878)
		0.25 (0.0098) US	Standard	47.726 - 47.750 (1.8790 - 1.8799)
	Crankshaft journal outer diameter mm (in)	Standard size	Standard	67.985 - 68.009 (2.6766 - 2.6775)
		0.03 (0.0012) US	Standard	67.955 - 67.979 (2.6754 - 2.6763)
		0.05 (0.0020) US	Standard	67.935 - 67.959 (2.6746 - 2.6755)
		0.25 (0.0098) US	Standard	67.735 - 67.759 (2.6667 - 2.6677)
	Crankshaft bearing thickness (at center) mm (in)	#1, #2, #3, #4	Standard size	2.495 - 2.513 (0.0982 - 0.0989)
			0.03 (0.0012) US	2.519 - 2.522 (0.0992 - 0.0993)
			0.05 (0.0020) US	2.529 - 2.532 (0.0996 - 0.0997)
			0.25 (0.0098) US	2.629 - 2.632 (0.1035 - 0.1036)
		#5	Standard size	2.493 - 2.511 (0.0981 - 0.0989)
			0.03 (0.0012) US	2.517 - 2.520 (0.0991 - 0.0992)
			0.05 (0.0020) US	2.527 - 2.530 (0.0995 - 0.0996)


2014 Subaru Impreza

2014 ENGINE Mechanical - Impreza & XV Crosstrek

		0.25 (0.0098) US	Standard	2.627 - 2.630 (0.1034 - 0.1035)
	Thrust clearance	mm (in)	Standard	0.130 - 0.308 (0.00512 - 0.01213)
	Oil clearance	mm (in)	Standard	0.013 - 0.031 (0.00051 - 0.00122)

COMPONENT

TIMING CHAIN

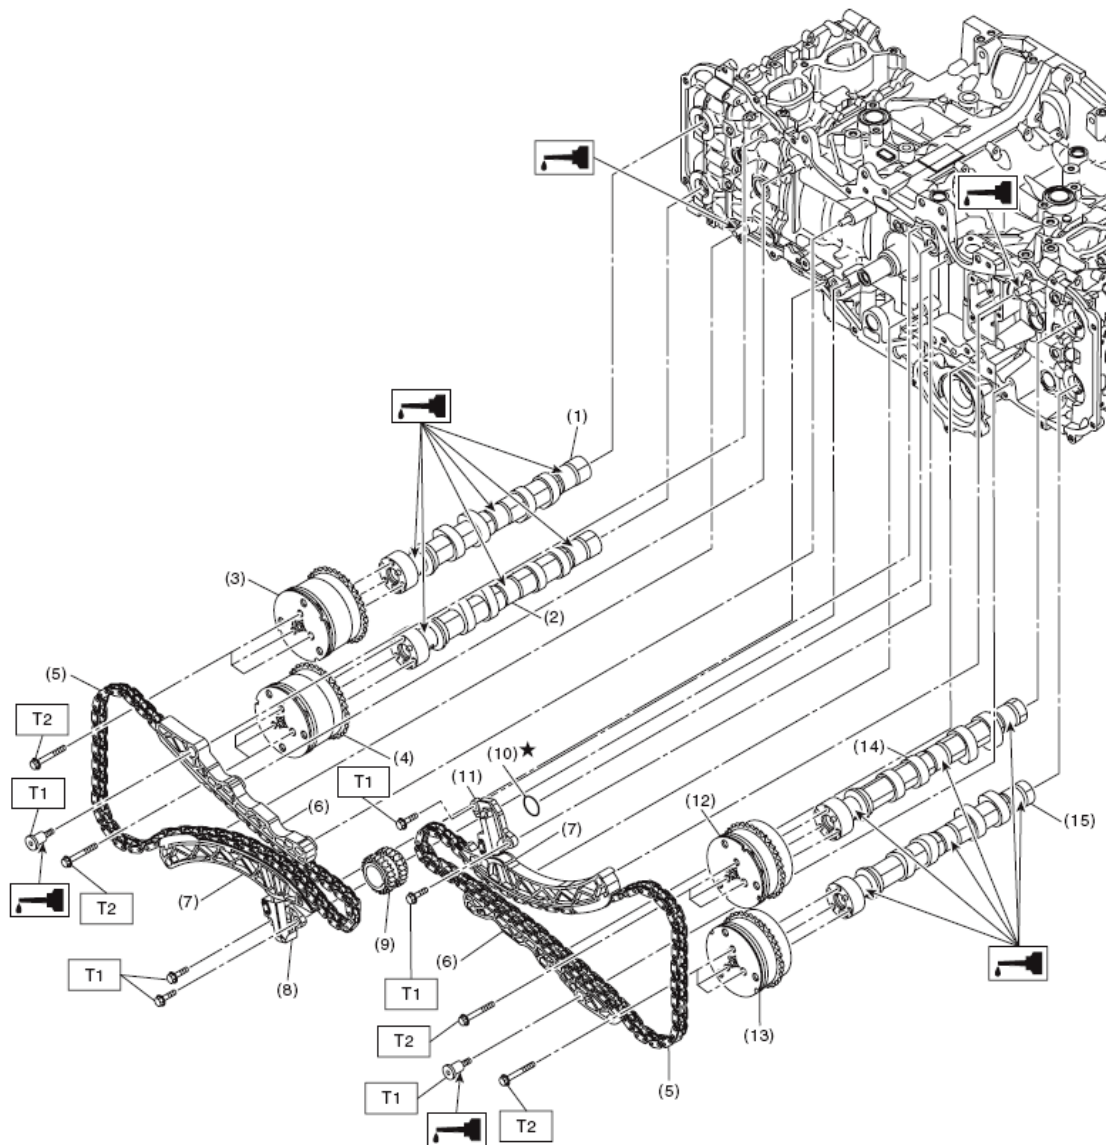

ME-06796

- | | | |
|-----------------------------|------------------------------|--------------------------|
| (1) Intake camshaft RH | (8) Chain tensioner RH | (15) Exhaust camshaft LH |
| (2) Exhaust camshaft RH | (9) Crank sprocket | |
| (3) Intake cam sprocket RH | (10) O-ring | |
| (4) Exhaust cam sprocket RH | (11) Chain tensioner LH | |
| (5) Timing chain | (12) Intake cam sprocket LH | |
| (6) Chain guide | (13) Exhaust cam sprocket LH | |
| (7) Chain tension lever | (14) Intake camshaft LH | |

Fig. 1: Identifying Timing Chain Components
Courtesy of SUBARU OF AMERICA, INC.

Tightening torque: N.m (kgf-m, ft-lb)

T1: 6.4 (0.7, 4.7)


T2: 18 (1.8, 13.3)

CHAIN COVER

- Gasoline engine model

2014 Subaru Impreza

2014 ENGINE Mechanical - Impreza & XV Crosstrek

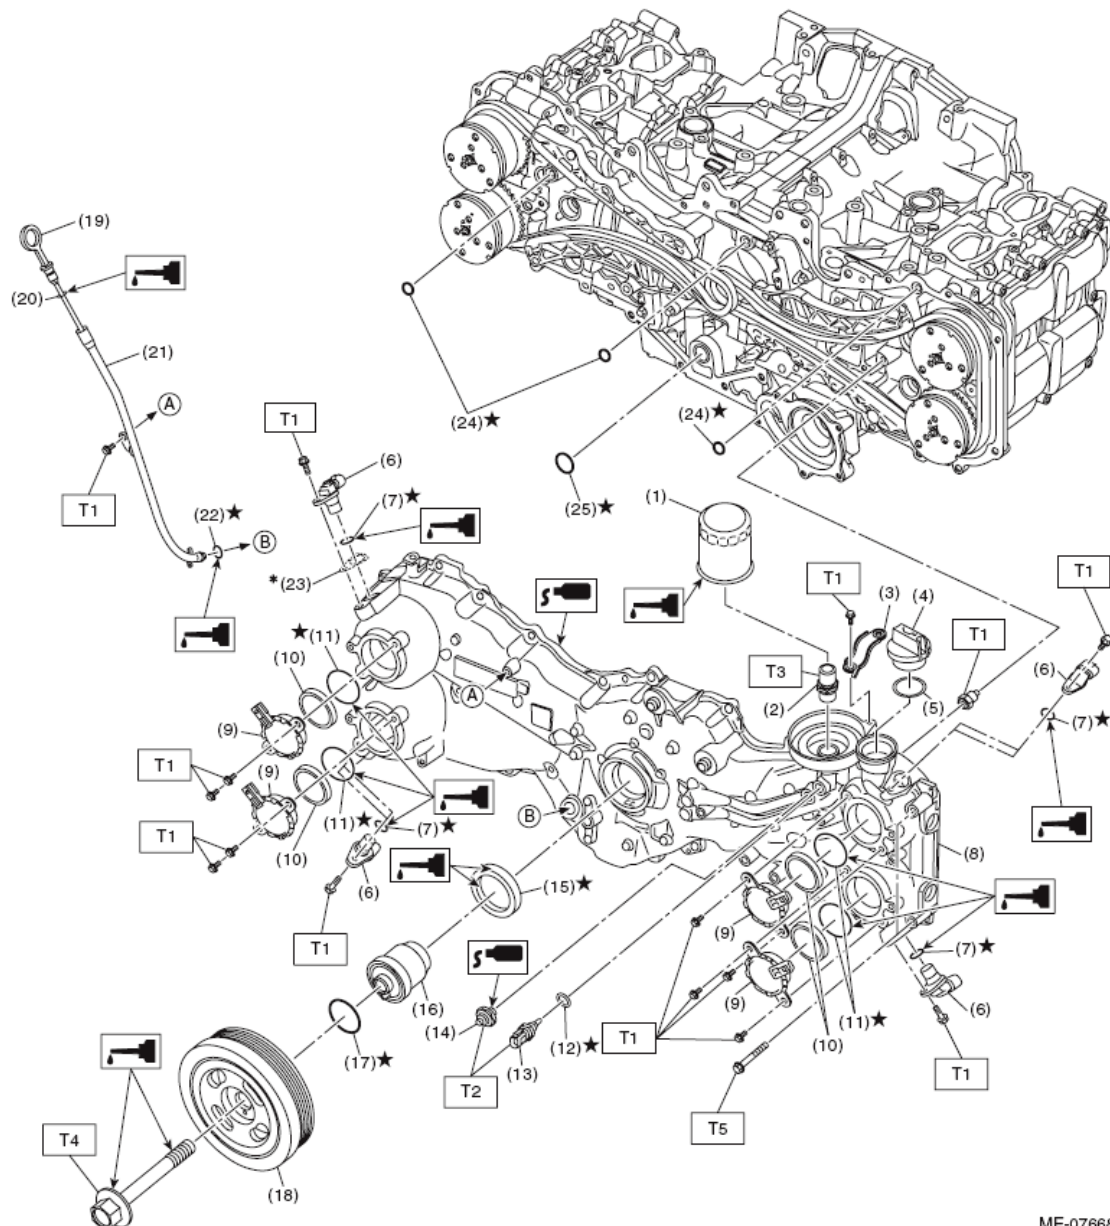

ME-07668

- | | | |
|------------------------------|------------------------------------|-------------|
| (1) Oil filter | (12) Gasket | (23) Spacer |
| (2) Oil pump union | (13) Engine oil temperature sensor | (24) O-ring |
| (3) Generator cord stay | (14) Oil pressure switch | (25) O-ring |
| (4) Oil filler cap | (15) Front oil seal | |
| (5) Gasket | (16) Crank pulley boss | |
| (6) Camshaft position sensor | (17) O-ring | |
| (7) O-ring | (18) Crank pulley | |
| (8) Chain cover | (19) Oil level gauge | |
| (9) Oil control solenoid | (20) O-ring | |
| (10) Back-up ring | (21) Oil level gauge guide | |
| (11) O-ring | (22) O-ring | |
- * Zero or one spacer for gap adjustment.

Fig. 2: Identifying Chain Cover Components (Gasoline Engine Model)

Courtesy of SUBARU OF AMERICA, INC.

Tightening torque: N.m (kgf-m, ft-lb)

T1: 6.4 (0.7, 4.7)

T2: 18 (1.8, 13.3)

T3: 45 (4.6, 33.2)


T4: < Ref. to INSTALLATION, Crank Pulley.>

T5: < Ref. to INSTALLATION, Chain Cover.>

- HEV model

2014 Subaru Impreza


2014 ENGINE Mechanical - Impreza & XV Crosstrek

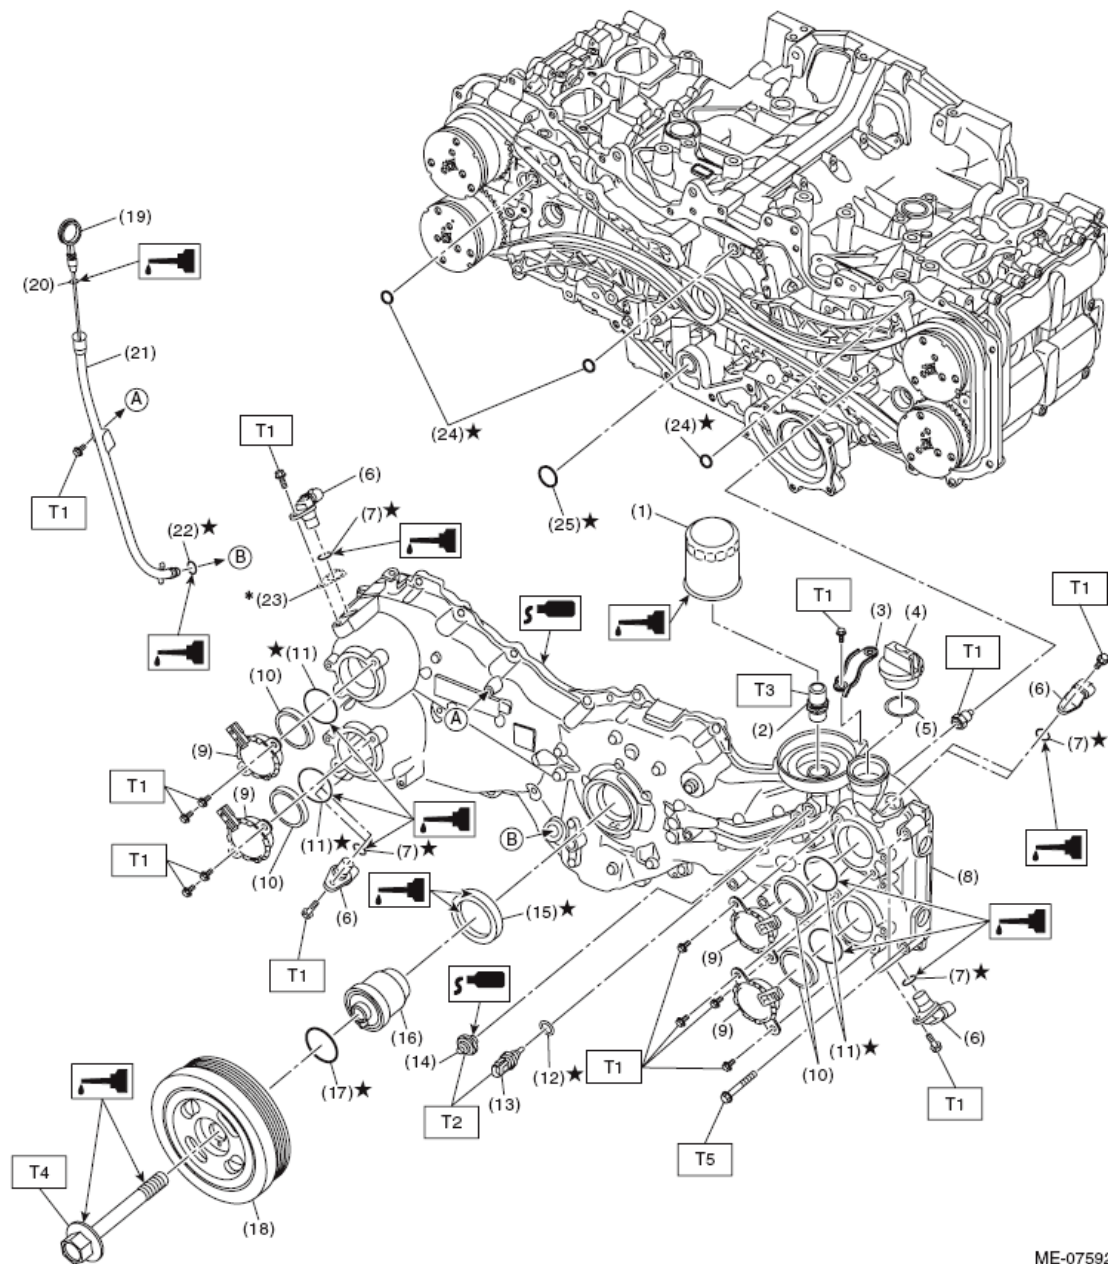

ME-07592

- | | | |
|------------------------------|------------------------------------|-------------|
| (1) Oil filter | (12) Gasket | (23) Spacer |
| (2) Oil pump union | (13) Engine oil temperature sensor | (24) O-ring |
| (3) Battery cable stay | (14) Oil pressure switch | (25) O-ring |
| (4) Oil filler cap | (15) Front oil seal | |
| (5) Gasket | (16) Crank pulley boss | |
| (6) Camshaft position sensor | (17) O-ring | |
| (7) O-ring | (18) Crank pulley | |
| (8) Chain cover | (19) Oil level gauge | |
| (9) Oil control solenoid | (20) O-ring | |
| (10) Back-up ring | (21) Oil level gauge guide | |

Fig. 3: Identifying Chain Cover Components (HEV Model)**Courtesy of SUBARU OF AMERICA, INC.*****Tightening torque: N.m (kgf-m, ft-lb)******T1: 6.4 (0.7, 4.7)******T2: 18 (1.8, 13.3)******T3: 45 (4.6, 33.2)******T4: < Ref. to INSTALLATION, Crank Pulley.>******T5: < Ref. to INSTALLATION, Chain Cover.>*****CYLINDER HEAD AND CAMSHAFT**

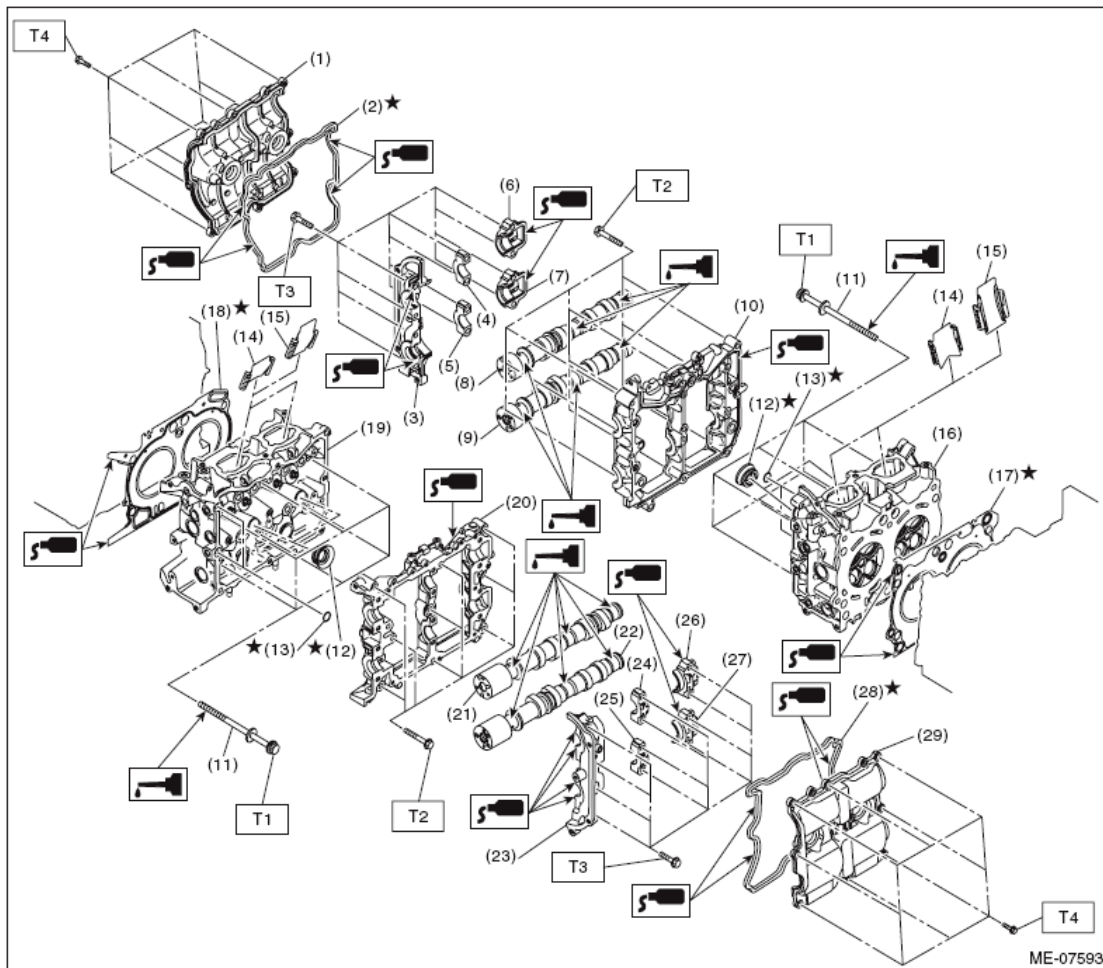

- | | | |
|------------------------------------|--|-------------------------------------|
| (1) Rocker cover RH | (13) O-ring | (25) Exhaust center camshaft cap LH |
| (2) Rocker cover gasket RH | (14) Cylinder head plate (gasoline engine model) | (26) Intake rear camshaft cap LH |
| (3) Front camshaft cap RH | (15) Cylinder head plate (HEV model) | (27) Exhaust rear camshaft cap LH |
| (4) Intake center camshaft cap RH | (16) Cylinder head RH | (28) Rocker cover gasket LH |
| (5) Exhaust center camshaft cap RH | (17) Cylinder head gasket RH | (29) Rocker cover LH |
| (6) Intake rear camshaft cap RH | (18) Cylinder head gasket LH | |
| (7) Exhaust rear camshaft cap RH | (19) Cylinder head LH | |
| (8) Intake camshaft RH | (20) Cam carrier LH | |
| (9) Exhaust camshaft RH | (21) Intake camshaft LH | |
| (10) Cam carrier RH | (22) Exhaust camshaft LH | |
| (11) Cylinder head bolt | (23) Front camshaft cap LH | |
| (12) Spark plug pipe gasket | (24) Intake center camshaft cap LH | |

Fig. 4: Identifying Cylinder Head And Camshaft Components
 Courtesy of SUBARU OF AMERICA, INC.


T1: < Ref. to INSTALLATION, Cylinder Head.>

T2: < Ref. to INSTALLATION, Cam Carrier.>

T3: < Ref. to ASSEMBLY, Cam Carrier.>

T4: < Ref. to INSTALLATION, Rocker Cover.>


VALVE ASSY

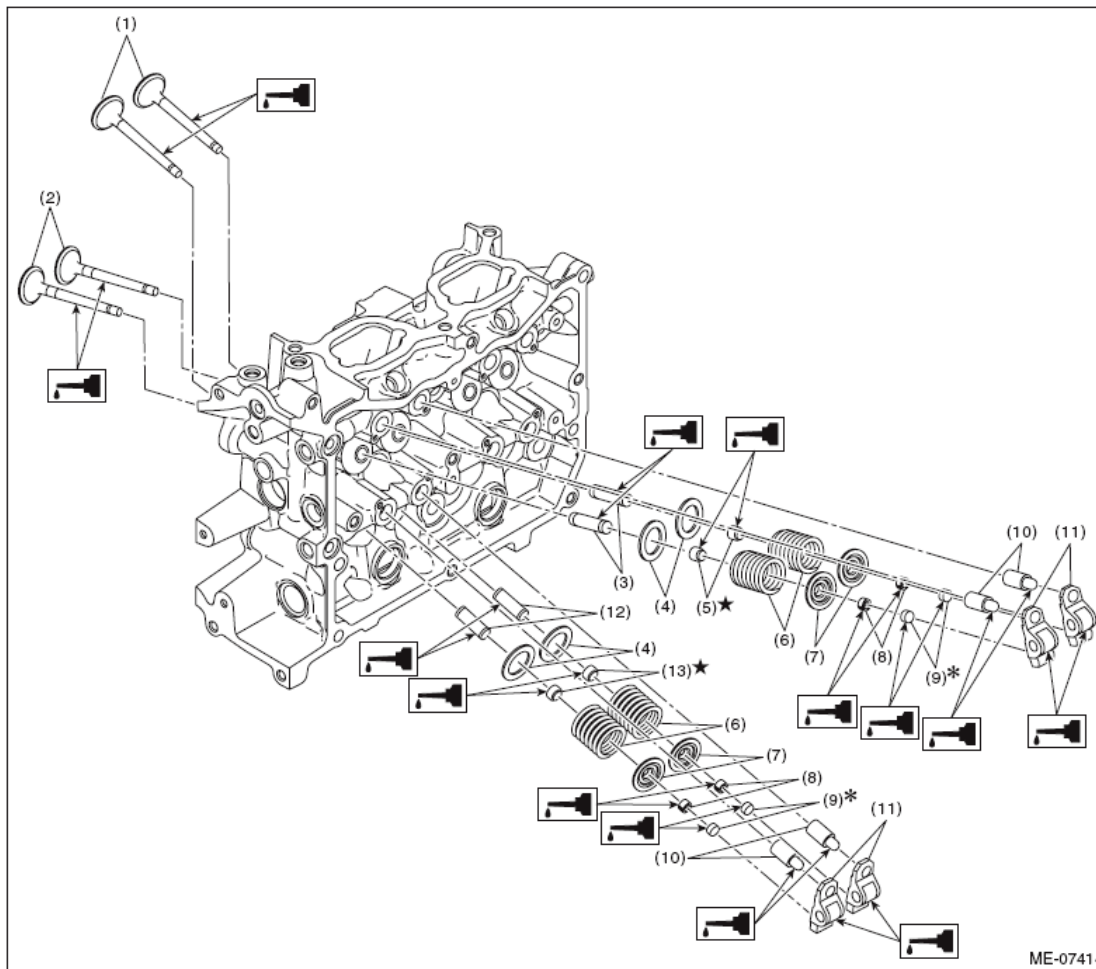

- | | | |
|---------------------------|------------------------------|-----------------------------|
| (1) Exhaust valve | (6) Valve spring | (11) Roller rocker arm |
| (2) Intake valve | (7) Valve spring retainer | (12) Exhaust valve guide |
| (3) Intake valve guide | (8) Valve collet | (13) Exhaust valve oil seal |
| (4) Valve spring seat | (9) Valve shim | |
| (5) Intake valve oil seal | (10) Roller rocker arm pivot | |

Fig. 5: Identifying Valve Assy Components
Courtesy of SUBARU OF AMERICA, INC.

CYLINDER BLOCK 1

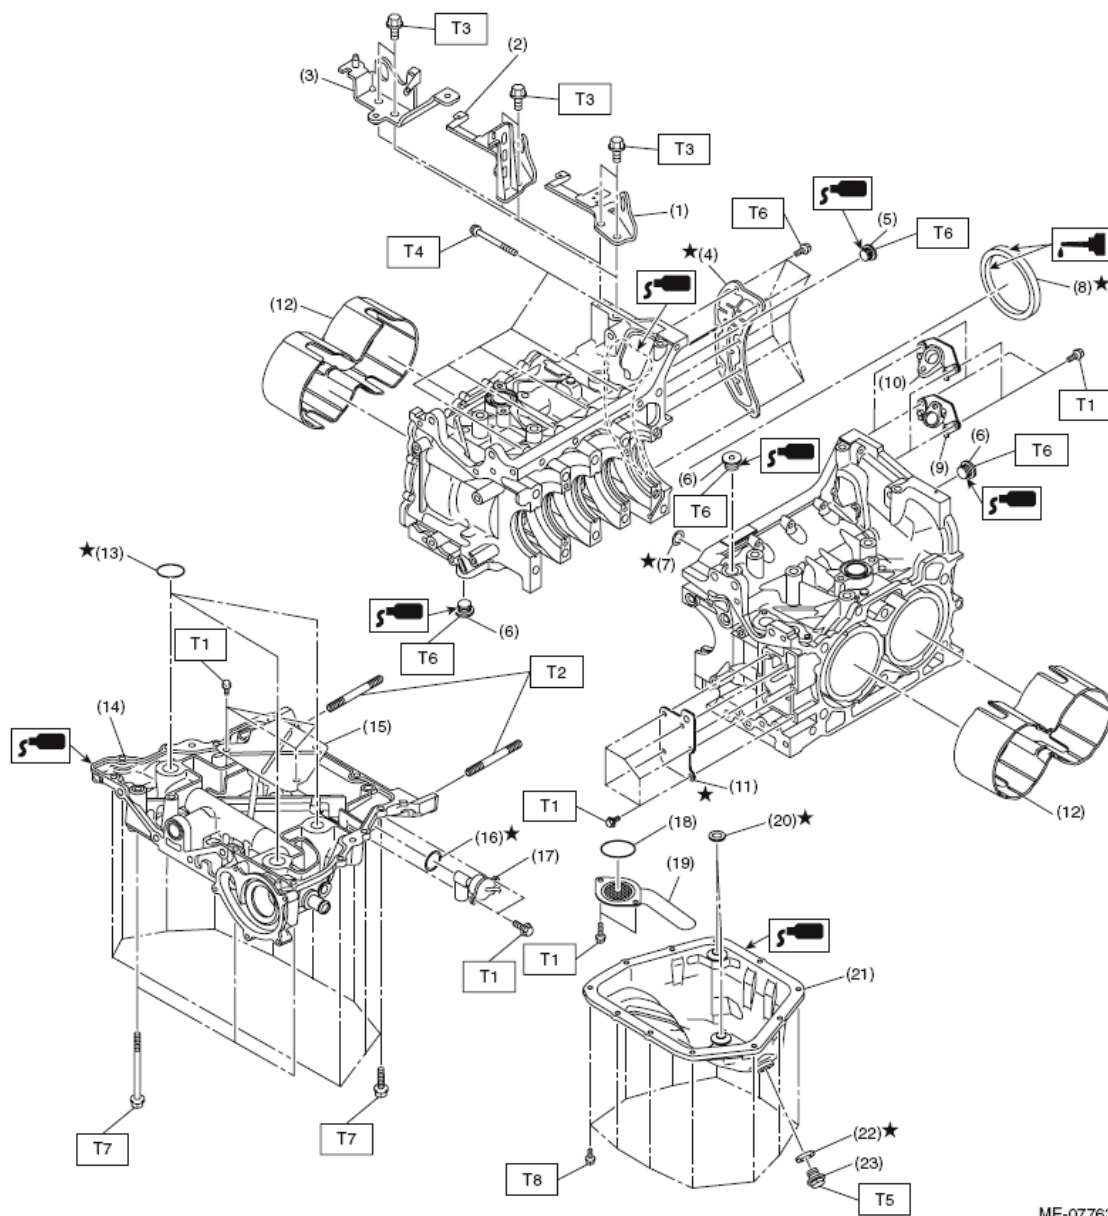


ME-07763

- | | | |
|---|-------------------------------------|-----------------|
| (1) Engine rear hanger (gasoline engine CVT model) | (12) Water jacket spacer (XV model) | (23) Drain plug |
| (2) Engine rear hanger (gasoline engine MT model) | (13) O-ring | |
| (3) Engine rear hanger (HEV model) | (14) Oil pan upper | |
| (4) Oil separator cover | (15) Baffle plate | |
| (5) Cylinder block plug | (16) O-ring | |
| (6) Main gallery plug | (17) Oil level switch | |
| (7) O-ring | (18) O-ring | |
| (8) Rear oil seal | (19) Oil strainer | |
| (9) Crankshaft position sensor holder (gasoline engine model) | (20) Oil pan seal ring | |
| (10) Crankshaft position sensor holder (HEV model) | (21) Oil pan | |
| (11) Cylinder block plate | (22) Drain plug gasket | |

Fig. 6: Identifying Cylinder Block 1 Components

Courtesy of SUBARU OF AMERICA, INC.

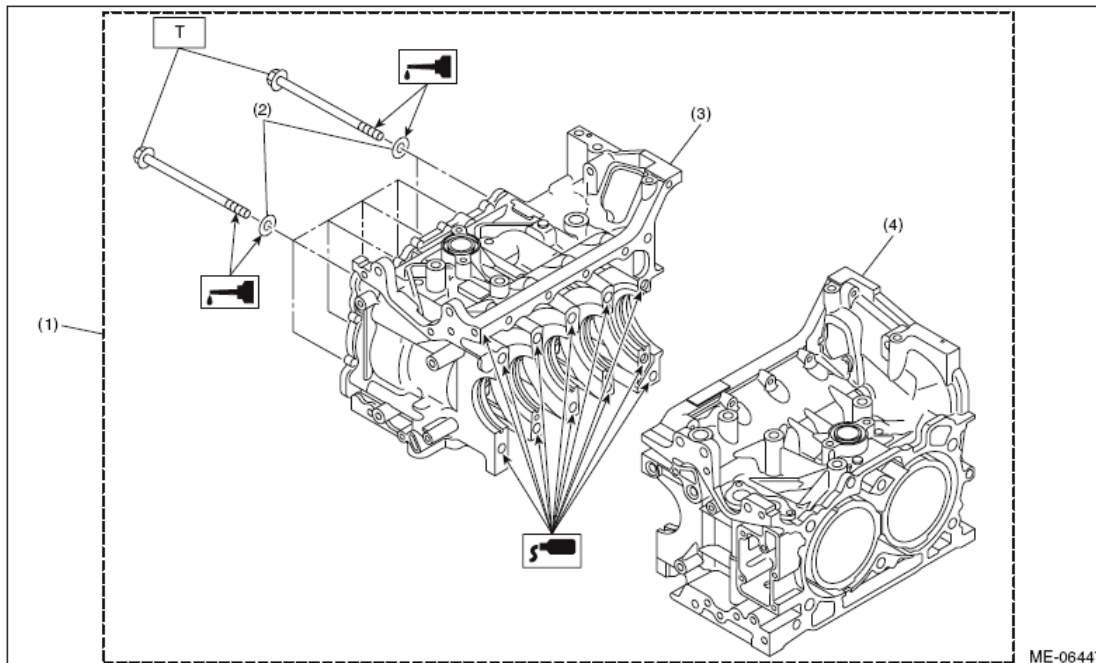*Tightening torque: N.m (kgf-m, ft-lb)***T1: 6.4 (0.7, 4.7)****T2: 10 (1.0, 7.4)****T3: 21 (2.1, 15.5)****T4: 25 (2.5, 18.4)****T5: 41.7 (4.3, 30.8)****T6: < Ref. to CYLINDER BLOCK, ASSEMBLY, Cylinder Block.>****T7: < Ref. to INSTALLATION, Cylinder Block.>****T8: < Ref. to OIL PAN, INSTALLATION, Oil Pan and Strainer.>****CYLINDER BLOCK 2**

(1) Cylinder block ASSY

(3) Cylinder block RH

(2) Washer

(4) Cylinder block LH


Fig. 7: Identifying Cylinder Block 2 Components

Courtesy of SUBARU OF AMERICA, INC.

Tightening torque: N.m (kgf-m, ft-lb)

T: < Ref. to INSTALLATION, Cylinder Block.>

CRANKSHAFT AND PISTON

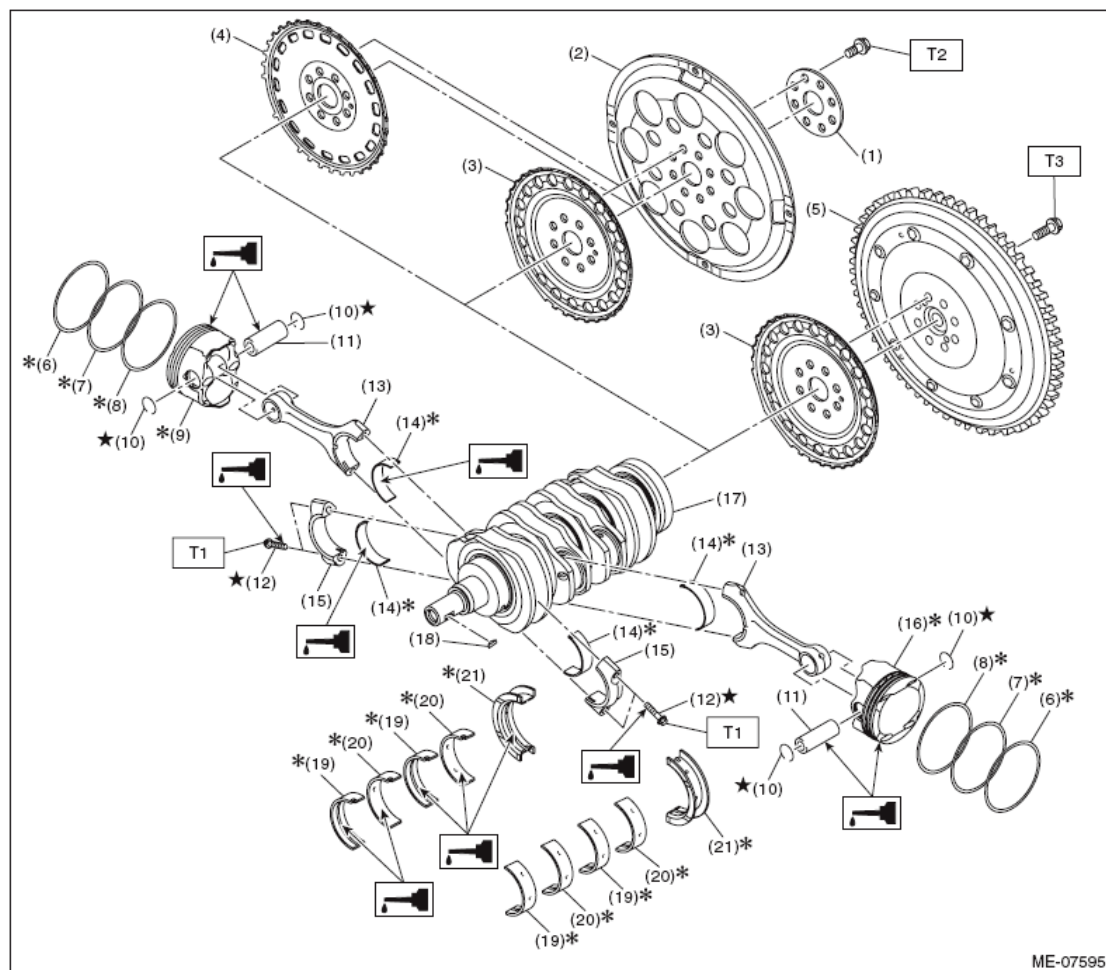

- | | | |
|--|------------------------------|--------------------------------|
| (1) Reinforcement drive plate (CVT model) | (10) Circlip | (19) Crankshaft bearing #1, #3 |
| (2) Drive plate (CVT model) | (11) Piston pin | (20) Crankshaft bearing #2, #4 |
| (3) Crankshaft position sensor plate (gasoline engine model) | (12) Connecting rod cap bolt | (21) Crankshaft bearing #5 |
| (4) Crankshaft position sensor plate (HEV model) | (13) Connecting rod | |
| (5) Flywheel (MT model) | (14) Connecting rod bearing | |
| (6) Top ring | (15) Connecting rod cap | |
| (7) Second ring | (16) Piston LH | |
| (8) Oil ring | (17) Crankshaft | |
| (9) Piston RH | (18) Woodruff key | |

Fig. 8: Identifying Crankshaft And Piston Components

Courtesy of SUBARU OF AMERICA, INC.

Tightening torque: N.m (kgf-m, ft-lb)


T1: < Ref. to INSTALLATION, Cylinder Block.>

T2: < Ref. to INSTALLATION, Drive Plate.> < Ref. to INSTALLATION, Drive Plate.>

T3: < Ref. to INSTALLATION, Flywheel.>

ENGINE MOUNTING

- CVT model

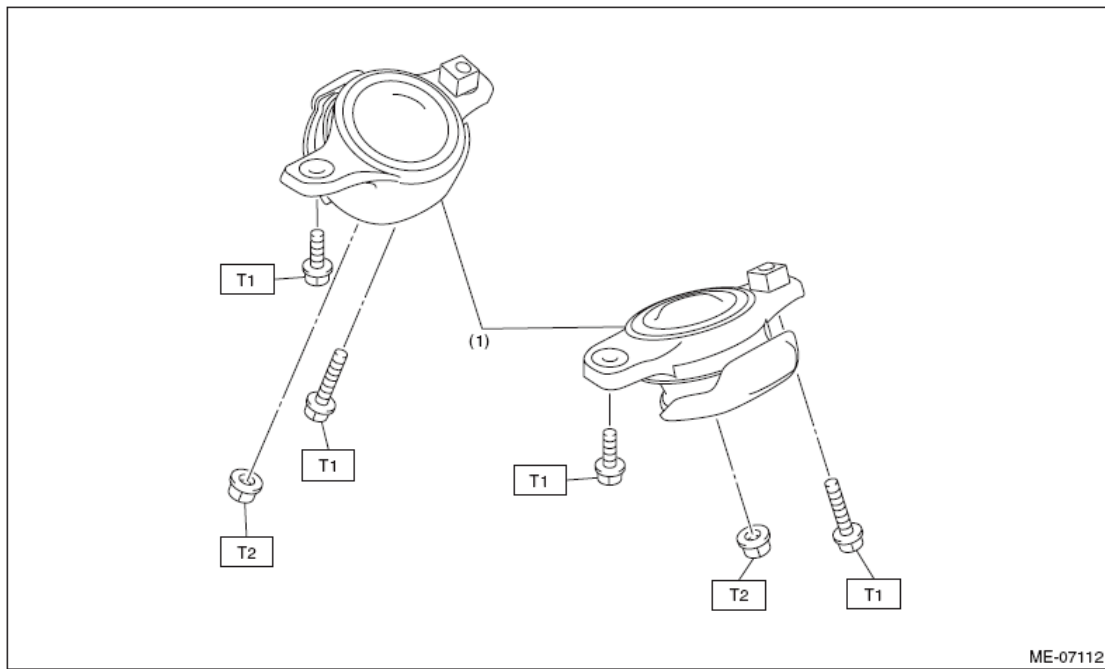

(1) Front cushion rubber

Fig. 9: Identifying Engine Mounting Components (CVT Model)


Courtesy of SUBARU OF AMERICA, INC.

Tightening torque: N.m (kgf-m, ft-lb)

T1: 35 (3.6, 25.8)

T2: 45 (4.6, 33.2)

- MT model

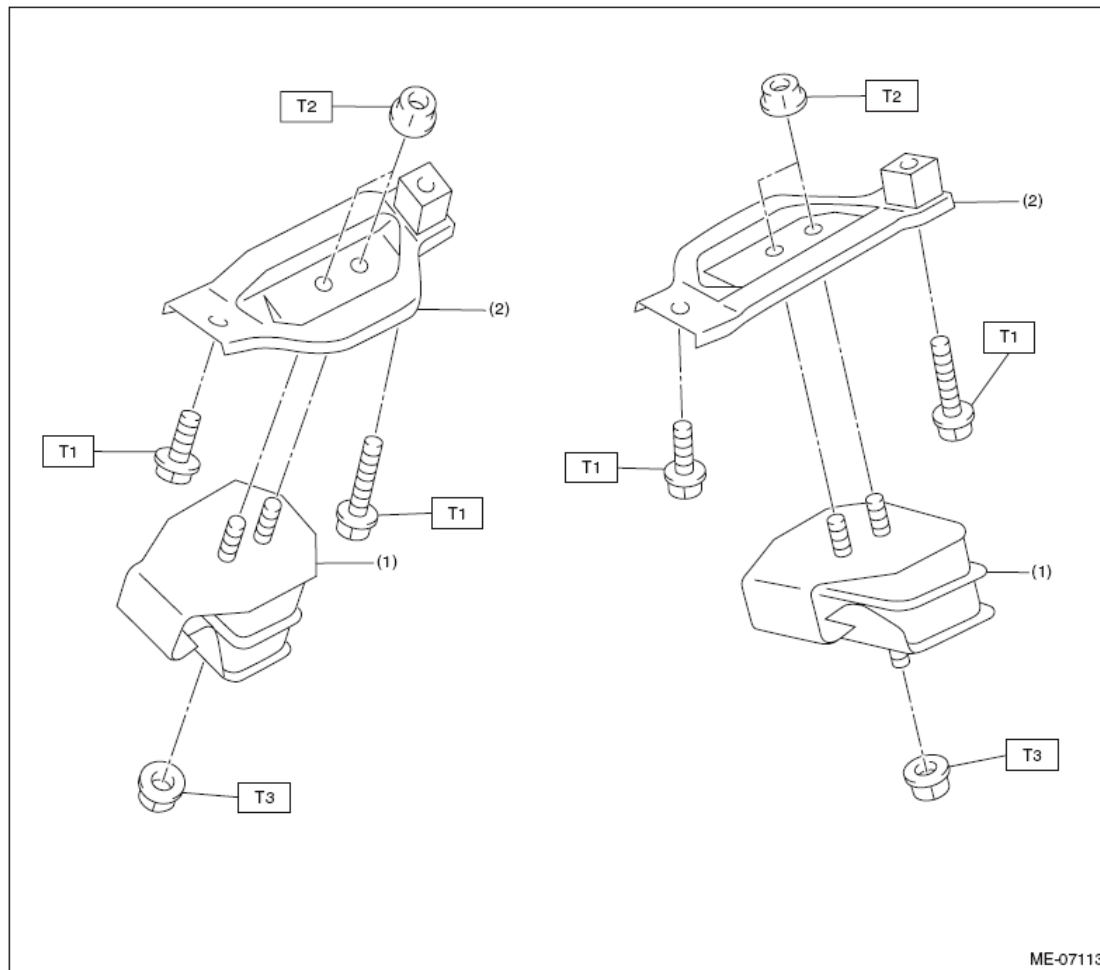

(1) Front cushion rubber

(2) Front engine mounting bracket

Fig. 10: Identifying Engine Mounting Components (MT Model)
Courtesy of SUBARU OF AMERICA, INC.

Tightening torque: N.m (kgf-m, ft-lb)

T1: 35 (3.6, 25.8)

T2: 42 (4.3, 31.0)

T3: 45 (4.6, 33.2)

CAUTION

- Prior to starting work, pay special attention to the following:
 1. Always wear work clothes, a work cap, and protective shoes. Additionally, wear a helmet, protective goggles, etc. if necessary.
 2. Protect the vehicle using a seat cover, fender cover, etc.
 3. Prepare the service tools, clean cloth, containers to catch grease and oil, etc.

2014 Subaru Impreza

2014 ENGINE Mechanical - Impreza & XV Crosstrek

- Vehicle components are extremely hot immediately after driving. Be wary of receiving burns from heated parts.
- When performing a repair, identify the cause of trouble and avoid unnecessary removal, disassembly and replacement.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from battery.
- Always use the jack-up point when the shop jacks or rigid racks are used to support the vehicle.
- Remove or install the engine in an area where chain hoists, lifting devices, etc. are available for ready use. When lifting up the vehicle, make sure to support the vehicle at the jack-up points.
- Be careful not to let any oil or grease contact the clutch disc or flywheel.
- Remove contamination including dirt and corrosion before removal, installation, disassembly or assembly.
- Keep the removed parts in order and protect them from dust and dirt.
- All removed parts, if to be reused, should be reinstalled in the original positions with attention to the correct directions, etc.
- Rotating parts and sliding parts such as piston, bearing and gear should be coated with oil when being assembled.
- Bolts, nuts and washers should be replaced with new parts as required.
- Be sure to tighten the fasteners including bolts and nuts to the specified torque.

PREPARATION TOOL

SPECIAL TOOL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
	0920287002000	REMOVER AND REPLACER	Used for removing and installing valve spring.
	398437700	OIL SEAL INSTALLER	Used for installing the front oil seal of engine.
	498277200	STOPPER SET	Used for preventing the torque converter from falling when removing and installing the engine.
	498457000	ENGINE STAND ADAPTER RH	• Used for disassembling and assembling engine. • Used together with ENGINE STAND (499817100) and ADAPTER (18362AA020).
	498457100	ENGINE STAND ADAPTER LH	• Used for disassembling and assembling engine. • Used together with ENGINE STAND (499817100) and ADAPTER (18362AA020).

2014 Subaru Impreza


2014 ENGINE Mechanical - Impreza & XV Crosstrek

	499267300	STOPPER PIN	Used for removing and installing the V-belt tensioner assembly. (HEV model)
	499765700	VALVE GUIDE REMOVER AND INSTALLER	Used for removing and installing valve guide.
	499765900	VALVE GUIDE REAMER	Used for reaming valve guides.
	499817100	ENGINE STAND	- Used for disassembling and assembling engine. - Used together with ADAPTER (18362AA020), ENGINE STAND ADAPTER RH (498457000) and LH (498457100).
	18252AA000	CRANKSHAFT SOCKET	Used for rotating crankshaft.
	18261AA010	VALVE OIL SEAL GUIDE	Used for press-fitting of intake valve guide stem seals and exhaust valve guide stem seals.
	18270AA020	SOCKET	Used for removing and installing connecting rod.
	18334AA000	PULLEY WRENCH PIN SET	- Used for removing and installing the crank pulley. - Used together with PULLEY WRENCH (18355AA000).
	18334AA030	PULLEY WRENCH PIN SET	- Used for removing and installing water pump pulley, intake cam sprocket and exhaust cam sprocket. - Used together with PULLEY WRENCH (18355AA000).
	18350AA000	CONNECTING ROD BUSHING REMOVER AND INSTALLER	Used for removing and installing the connecting rod bushing at connecting rod small end.
	18355AA000	PULLEY WRENCH	- Used for removing and installing the crank pulley. - Used for installing and removing the water pump pulley. - Used for removing and installing intake cam sprocket and exhaust cam sprocket. - Used together with PULLEY WRENCH PIN SET (18334AA000) or PULLEY WRENCH PIN SET

2014 Subaru Impreza

2014 ENGINE Mechanical - Impreza & XV Crosstrek


			(18334AA030).
	18362AA020	ADAPTER	- Used for disassembling and assembling engine. - Used together with STAND (499817100), ENGINE STAND ADAPTER RH (498457000) and LH (498457100). - Bolt used: M10 x 50 (SUBARU genuine Part No.: 010410500)
	18471AA000	FUEL PIPE ADAPTER	Used for inspecting the fuel pressure.
	18657AA030	OIL SEAL INSTALLER	- Used for installing the rear oil seal of engine. - Used together with OIL SEAL GUIDE (18671AA020).
	18671AA020	OIL SEAL GUIDE	- Used for installing the rear oil seal of engine. - Used together with OIL SEAL INSTALLER (18657AA030).
	18270KA010	SOCKET	Used for installing and removing intake cam sprocket and exhaust cam sprocket.
	42099AE000	QUICK CONNECTOR RELEASE	Used for removing FUEL HOSE (42075AG690). NOTE: FUEL HOSE (42075AG690) is used for checking the fuel pressure.
	42075AG690	FUEL HOSE	Used for inspecting the fuel pressure. NOTE: This is the SUBARU genuine part.
	1B022XU0	SUBARU SELECT MONITOR III KIT	Used for various inspections.

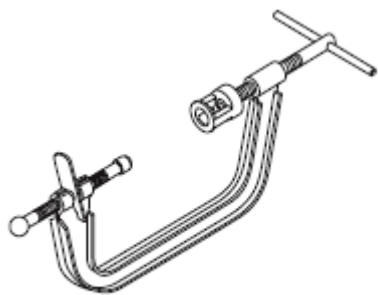

ST0920287002000

Fig. 11: ST0920287002000

Courtesy of SUBARU OF AMERICA, INC.

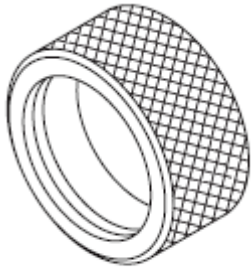

ST-398437700

Fig. 12: ST-398437700


Courtesy of SUBARU OF AMERICA, INC.



ST-498277200

Fig. 13: ST-498277200


Courtesy of SUBARU OF AMERICA, INC.

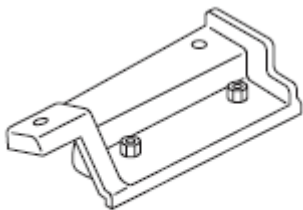

ST-498457000

Fig. 14: ST-498457000


Courtesy of SUBARU OF AMERICA, INC.

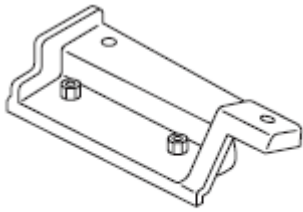

ST-498457100

Fig. 15: ST-498457100


Courtesy of SUBARU OF AMERICA, INC.

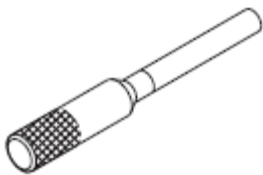

ST-499267300

Fig. 16: ST-499267300


Courtesy of SUBARU OF AMERICA, INC.

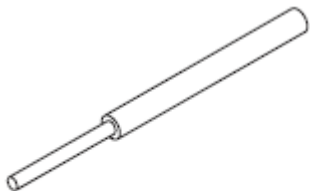

ST-499765700

Fig. 17: ST-499765700


Courtesy of SUBARU OF AMERICA, INC.

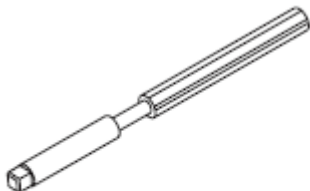

ST-499765900

Fig. 18: ST-499765900


Courtesy of SUBARU OF AMERICA, INC.

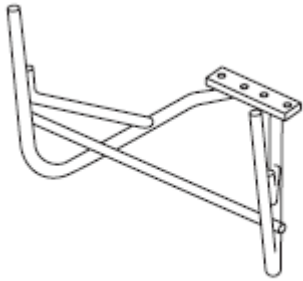

ST-499817100

Fig. 19: ST-499817100


Courtesy of SUBARU OF AMERICA, INC.

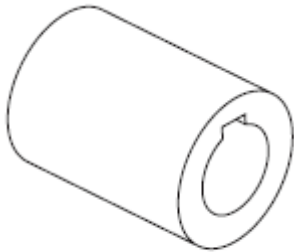

ST18252AA000

Fig. 20: ST18252AA000


Courtesy of SUBARU OF AMERICA, INC.

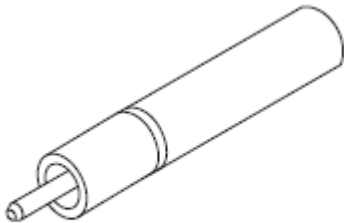

ST18261AA010

Fig. 21: ST18261AA010


Courtesy of SUBARU OF AMERICA, INC.

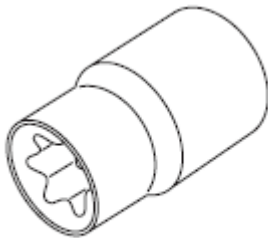

ST18270AA020

Fig. 22: ST18270AA020


Courtesy of SUBARU OF AMERICA, INC.

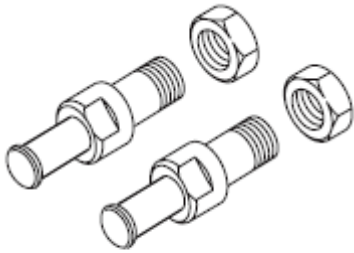

ST18334AA000

Fig. 23: ST18334AA000


Courtesy of SUBARU OF AMERICA, INC.

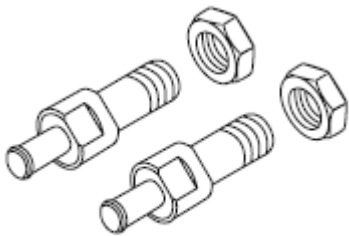

ST18334AA030

Fig. 24: ST18334AA030


Courtesy of SUBARU OF AMERICA, INC.

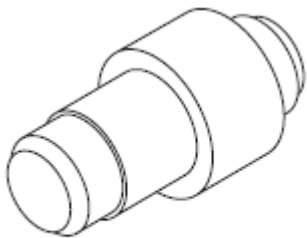

ST18350AA000

Fig. 25: ST18350AA000


Courtesy of SUBARU OF AMERICA, INC.

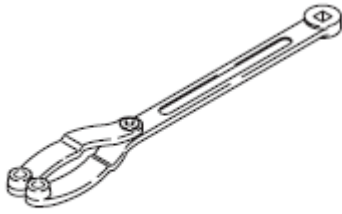

ST18355AA000

Fig. 26: ST18355AA000


Courtesy of SUBARU OF AMERICA, INC.

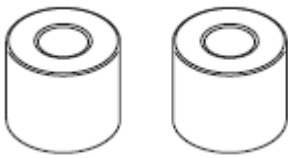

ST18362AA020

Fig. 27: ST18362AA020


Courtesy of SUBARU OF AMERICA, INC.

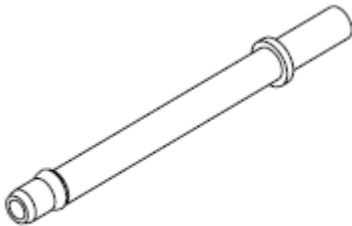

ST18471AA000

Fig. 28: ST18471AA000


Courtesy of SUBARU OF AMERICA, INC.

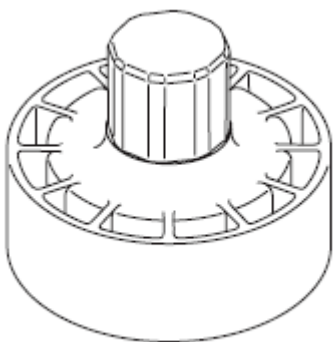

ST18657AA030

Fig. 29: ST18657AA030


Courtesy of SUBARU OF AMERICA, INC.

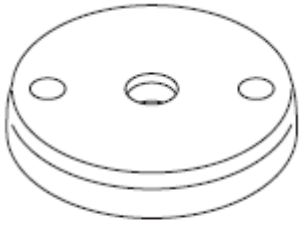

ST18671AA020

Fig. 30: ST18671AA020


Courtesy of SUBARU OF AMERICA, INC.

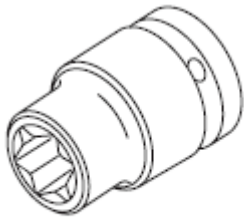

ST18270KA010

Fig. 31: ST18270KA010


Courtesy of SUBARU OF AMERICA, INC.

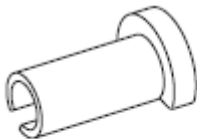

ST42099AE000

Fig. 32: ST42099AE000


Courtesy of SUBARU OF AMERICA, INC.

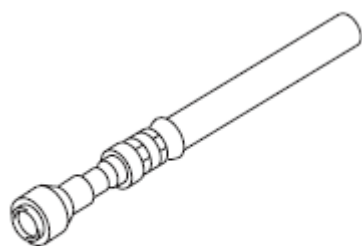

ST42075AG690

Fig. 33: ST42075AG690

Courtesy of SUBARU OF AMERICA, INC.

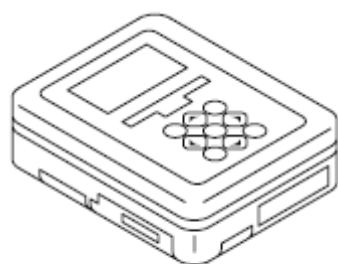

ST1B022XU0

Fig. 34: Subaru Select Monitor III Kit (ST1B022XU0)

Courtesy of SUBARU OF AMERICA, INC.

GENERAL TOOL

TOOL NAME	REMARKS
Compression gauge	Used for measuring compression.
Vacuum gauge	Used for measuring intake manifold vacuum.
Oil pressure gauge	Used for measuring engine oil pressure.
Fuel pressure gauge	Used for measuring fuel pressure.
Piston ring compressor	Used for installing the piston into the cylinder block.
Thickness gauge	Used for various inspections.
Angle gauge	Used for angle tightening.

COMPRESSION**INSPECTION**

CAUTION: After warming-up, engine becomes very hot. Be careful not to burn yourself during measurement.

1. Turn the ignition switch to OFF.

2. Remove the collector cover. (HEV model)

1. Pull up the two points at the front of collector cover (A).
2. Pull up the two points at the rear of collector cover (B) while moving them rearward.

NOTE: Be careful not to contact the fuel delivery tube when moving the collector cover rearward.

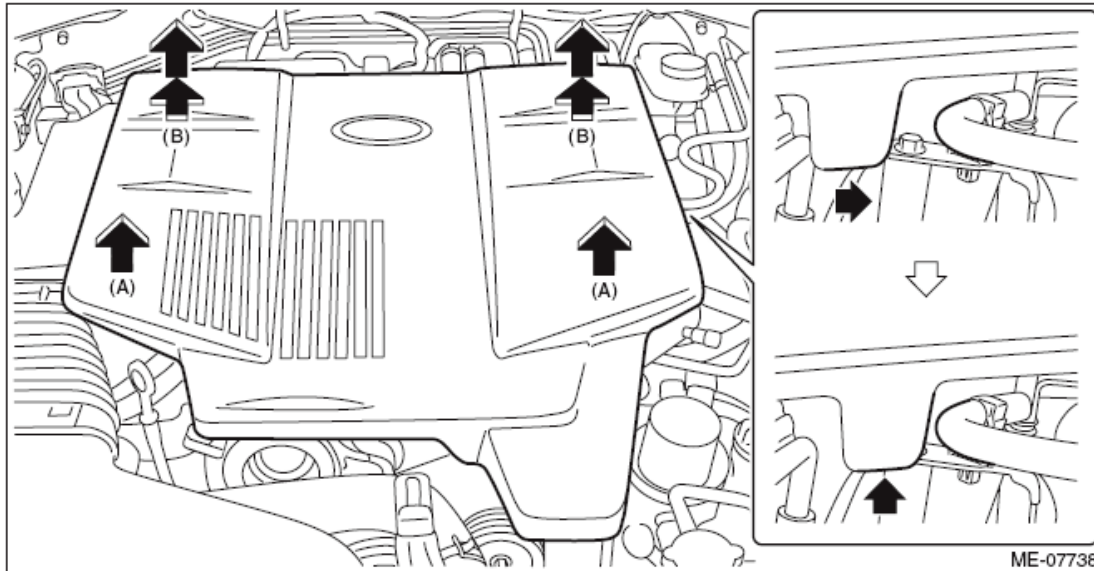


Fig. 35: Removing Collector Cover (HEV Model)
Courtesy of SUBARU OF AMERICA, INC.

3. After warming-up the engine, turn the ignition switch to OFF.
4. Make sure that the battery (12 volt auxiliary battery) is fully charged.
5. Check the starter motor for satisfactory performance and operation.
6. Remove the fuse of fuel pump from main fuse box.

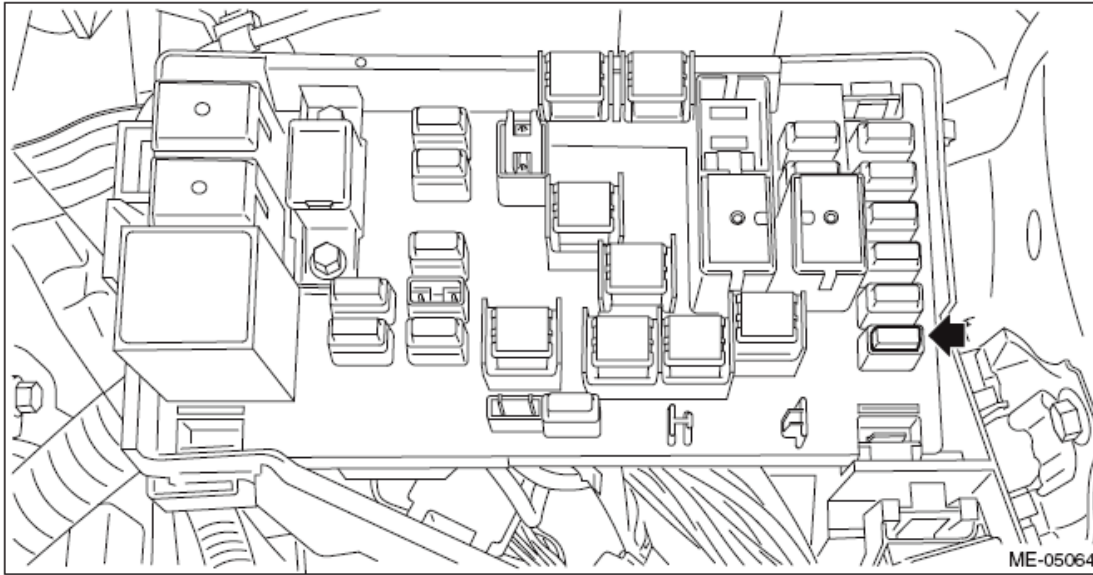


Fig. 36: Locating Fuel Pump Fuse
Courtesy of SUBARU OF AMERICA, INC.

7. Start the engine and run it until it stalls.
8. After the engine stalls, crank it for five more seconds.
9. Turn the ignition switch to OFF.
10. Remove all spark plugs. < Ref. to **REMOVAL** , Spark Plug.>
11. Install the compression gauge to the spark plug hole.

NOTE: When using a screw-in type compression gauge, the screw should be less than 25 mm (0.98 in) long.

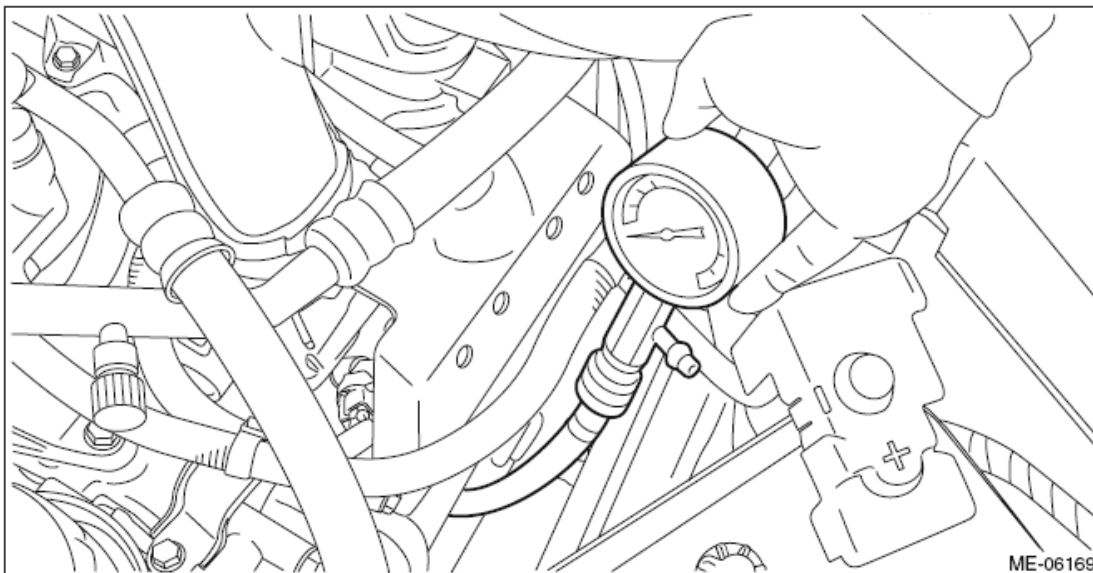


Fig. 37: Installing Compression Gauge To Spark Plug Hole
Courtesy of SUBARU OF AMERICA, INC.

12. Install the 12 volt engine restart battery. (HEV model) < Ref. to **12 VOLT ENGINE RESTART BATTERY** , INSTALLATION, Battery.>
13. Connect the battery ground terminal. < Ref. to **BATTERY** , NOTE, Note.>
14. Turn the ignition switch to ON.
15. Fully open the throttle valve.
16. Crank the engine by starter motor and read the value when the needle of the compression gauge becomes stable.

NOTE:

- Perform at least two measurements per cylinder, and make sure that the values are correct.
- If the compression pressure is out of standard, check or adjust the pistons, valves and cylinders.

Compression (fully open throttle):

Standard 1, 050 - 1, 400 kPa (11 - 14 kg/cm² , 152 - 203 psi)

Difference between cylinders 100 kPa (1 kg/cm² , 14 psi), or less

17. After inspection, install the related parts in the reverse order of removal.

IDLE SPEED

INSPECTION

1. Before checking the idle speed, check the following item:
 1. Check the air cleaner element is free from clogging, ignition timing is correct, spark plugs are in good condition, and hoses are connected properly.
 2. Check the malfunction indicator light does not illuminate.
2. Warm up the engine.
3. Read the engine idle speed using Subaru Select Monitor. < Ref. to **READ CURRENT DATA FOR ENGINE (NORMAL MODE)** , OPERATION, Subaru Select Monitor.> < Ref. to **DISPLAY CURRENT ENGINE DATA** , OPERATION, Subaru Select Monitor.>

NOTE:

- Idle speed cannot be adjusted manually, because the idle speed is automatically adjusted.
- If idle speed is out of standard, refer to the General Diagnosis Table under "Engine Control System". < Ref. to **BASIC DIAGNOSTIC PROCEDURE** .> < Ref. to **BASIC DIAGNOSTIC PROCEDURE** .>

1. Check the idle speed when no-loaded. (Headlight, blower fan, rear defroster, radiator fan, A/C and etc. are OFF)

Idle speed (No load, and for CVT model, select lever in "P" or "N" range, for MT model, gear shift lever in neutral position.):

Standard 650±100 rpm

2. Check the idle speed when loaded. (Turn the A/C switch to ON and operate the compressor for at least one minute before measurement.)

Idle speed (A/C on, and for CVT model, select lever in "P" or "N" range, for MT model, gear shift lever in neutral position.):

Standard 800 - 900±50 rpm

IGNITION TIMING

INSPECTION

CAUTION: After warming-up, engine becomes very hot. Be careful not to burn yourself at measurement.

1. Before checking the ignition timing, check the following item:
 1. Check the air cleaner element is free from clogging, spark plugs are in good condition, and hoses are connected properly.
 2. Check the malfunction indicator light does not illuminate.
2. Warm up the engine.
3. Read the ignition timing using Subaru Select Monitor. < Ref. to **READ CURRENT DATA FOR ENGINE (NORMAL MODE)** , OPERATION, Subaru Select Monitor.> < Ref. to **DISPLAY CURRENT ENGINE DATA** , OPERATION, Subaru Select Monitor.>

NOTE: If ignition timing is out of standard, check the ignition control system. Refer to "Engine Control System". < Ref. to **BASIC DIAGNOSTIC PROCEDURE** .> < Ref. to **BASIC DIAGNOSTIC PROCEDURE** .>

Ignition timing [BTDC/rpm]:

Standard

16°±10°/650 (gasoline engine model)

10°±10°/650 (HEV model)

INTAKE MANIFOLD VACUUM

INSPECTION

1. Turn the ignition switch to OFF.
2. Remove the collector cover. (HEV model)
 1. Pull up the two points at the front of collector cover (A).
 2. Pull up the two points at the rear of collector cover (B) while moving them rearward.

NOTE: Be careful not to contact the fuel delivery tube when moving the collector cover rearward.

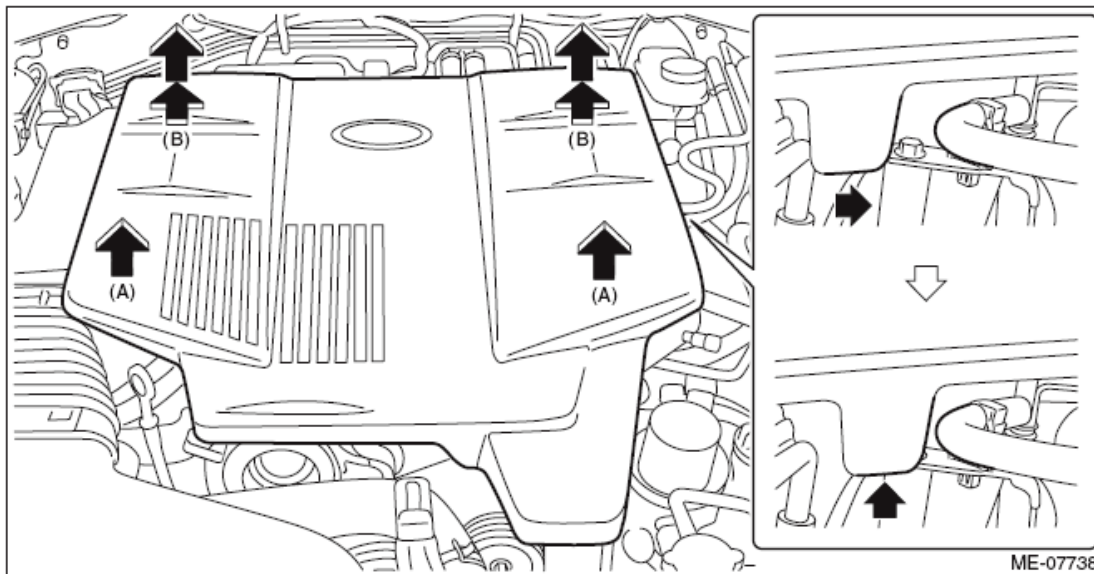


Fig. 38: Removing Collector Cover (HEV Model)
Courtesy of SUBARU OF AMERICA, INC.

3. Warm up the engine.
4. Install the vacuum gauge. (Gasoline engine model)
 1. Remove the brake booster vacuum hose from the intake manifold.

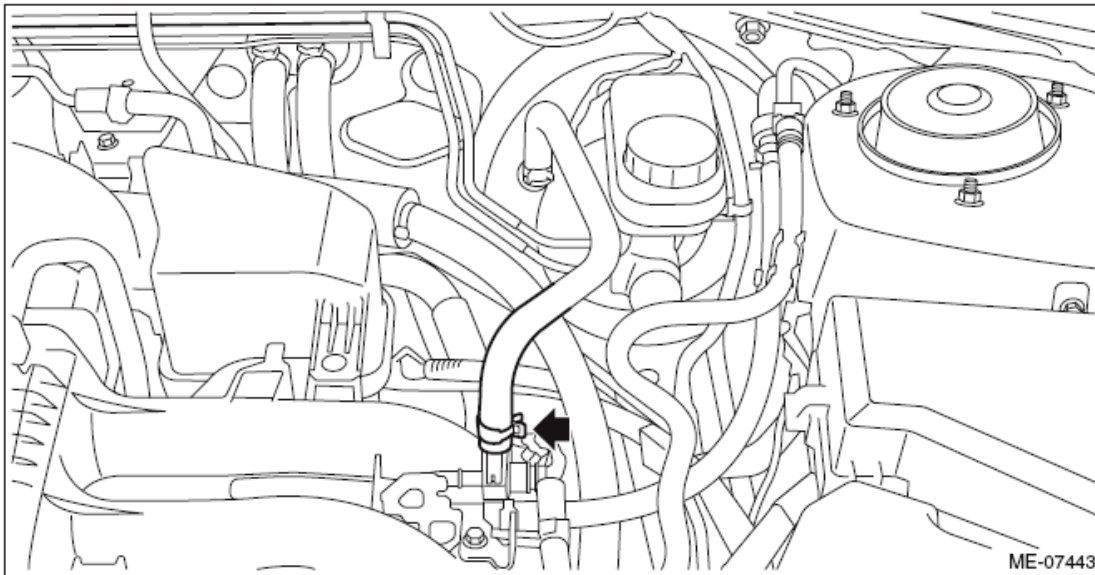


Fig. 39: Locating Brake Booster Vacuum Hose Clamp
Courtesy of SUBARU OF AMERICA, INC.

2. Connect the vacuum gauge to the intake manifold.

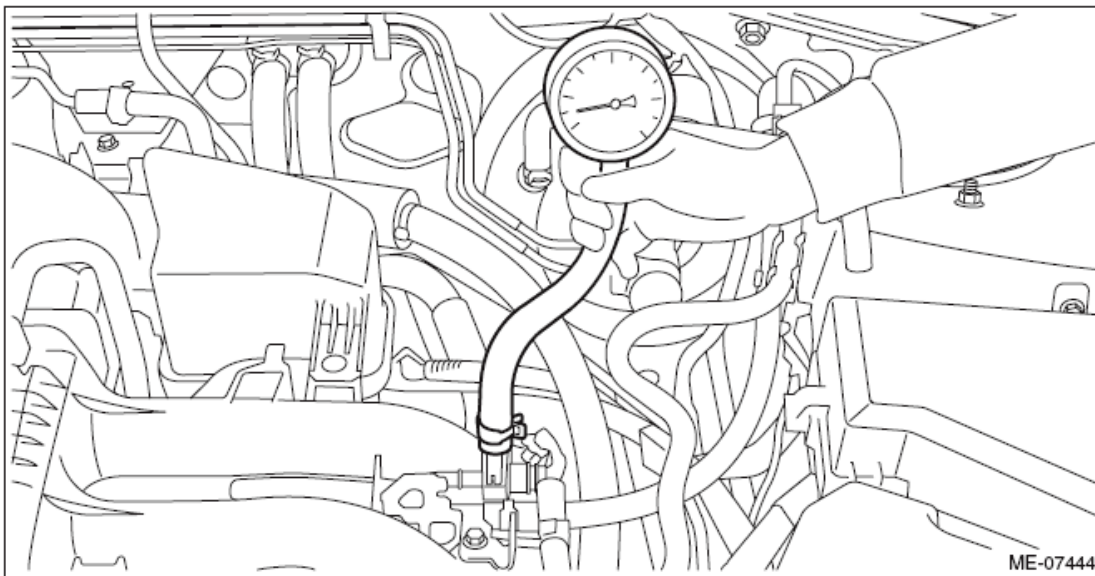


Fig. 40: Connecting Vacuum Gauge To Intake Manifold
Courtesy of SUBARU OF AMERICA, INC.

5. Install the vacuum gauge. (HEV model)
 1. Remove the nut (A) which secures purge control solenoid valve to the purge control solenoid valve bracket, and disconnect the vacuum hose (B) from the purge control solenoid valve.

NOTE: Hold the purge control solenoid valve unit by hand to prevent it from

rotating together.

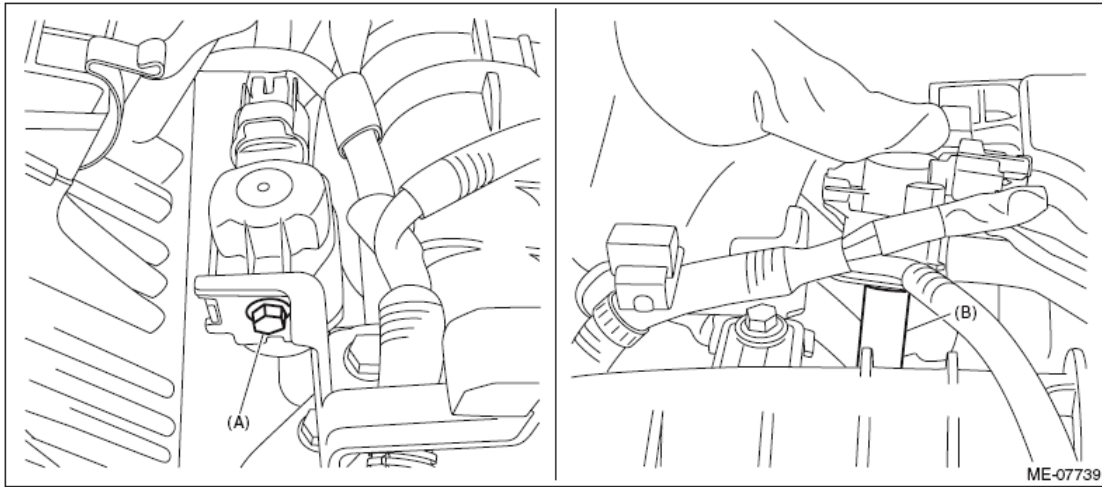


Fig. 41: Identifying Vacuum Hose And Mounting Nut
Courtesy of SUBARU OF AMERICA, INC.

2. Connect the vacuum gauge to the vacuum hose.

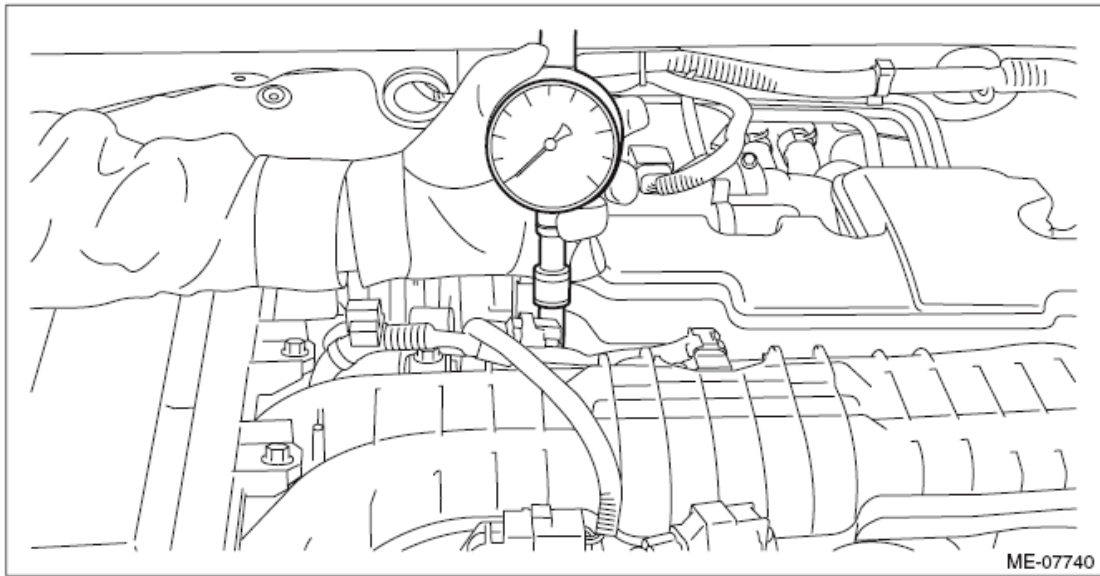


Fig. 42: Connecting Vacuum Gauge To Vacuum Hose
Courtesy of SUBARU OF AMERICA, INC.

6. Keep the engine at idle speed and read the vacuum gauge indication.

NOTE: Condition of engine inside can be diagnosed by observing the behavior of the vacuum gauge needle as described in table below.

Intake manifold vacuum (at idling, A/C OFF):

Standard -60.0 kPa (-450 mmHg, -17.72 in Hg) or more

Diagnosis of engine condition by inspection of intake manifold vacuum	
Vacuum gauge needle behavior	Possible engine condition
1. Needle is steady but lower than standard value. This tendency becomes more evident as engine temperature rises.	Leakage around intake manifold gasket, disconnection or damage of vacuum hose
2. Needle intermittently drops to position lower than standard value.	Leakage around cylinder
3. Needle drops suddenly and intermittently from standard value.	Sticky valve
4. When engine speed is gradually increased, needle begins to vibrate rapidly at certain speed, and then vibration increases as engine speed increases.	Weak or broken valve springs
5. Needle vibrates above and below standard value in narrow range.	Defective ignition system

7. After inspection, install the related parts in the reverse order of removal.

NOTE: When installing the purge control solenoid valve, hold the purge control solenoid valve unit by hand to prevent it from rotating together. (HEV model)

Tightening torque:

6.4 N.m (0.7 kgf-m, 4.7 ft-lb)

ENGINE OIL PRESSURE

INSPECTION

1. Disconnect the ground cable from battery. < Ref. to **BATTERY** , NOTE, Note.>

NOTE: For the 12 volt engine restart battery of HEV model, disconnect the ground terminal from 12V engine restart battery sensor.

2. Remove the collector cover. (HEV model)
1. Pull up the two points at the front of collector cover (A).
 2. Pull up the two points at the rear of collector cover (B) while moving them rearward.

NOTE: Be careful not to contact the fuel delivery tube when moving the collector cover rearward.

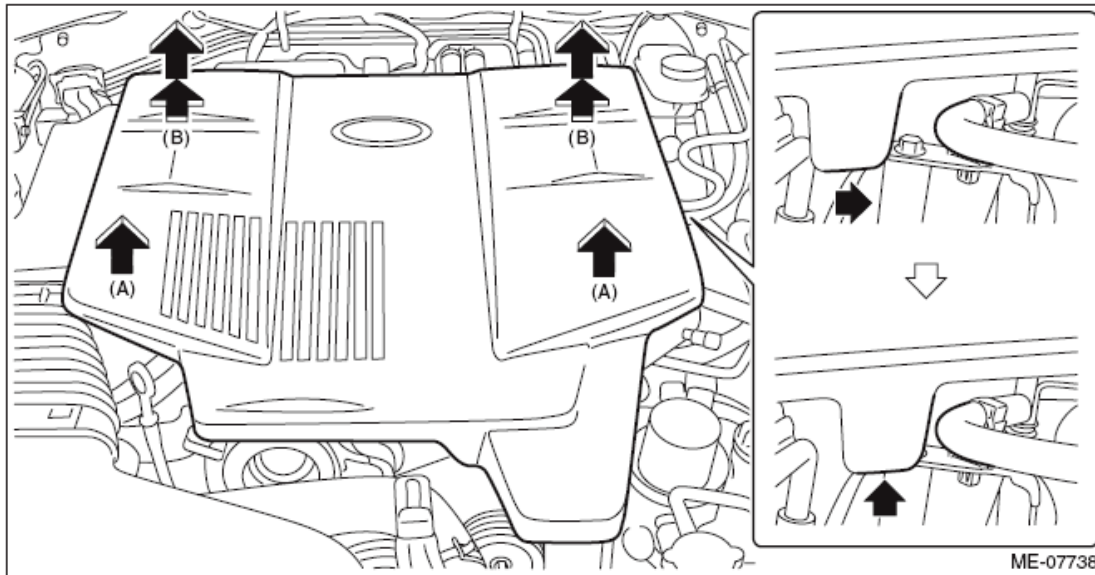


Fig. 43: Removing Collector Cover (HEV Model)

Courtesy of SUBARU OF AMERICA, INC.

3. Remove the oil pressure switch. < Ref. to **REMOVAL** , Oil Pressure Switch.>
4. Install the oil pressure gauge to the chain cover.
 - Gasoline engine model

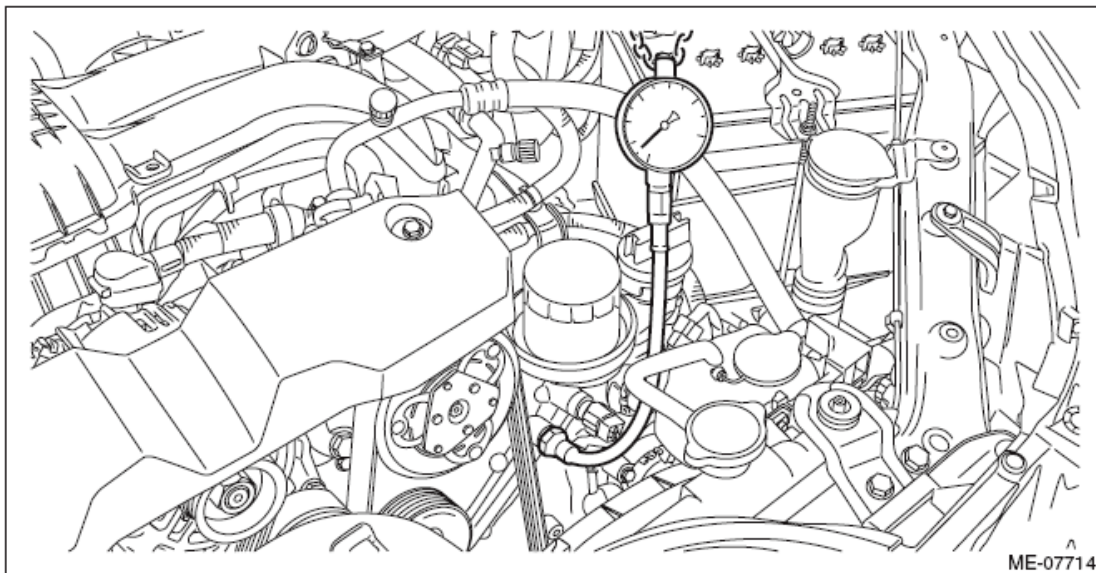


Fig. 44: Installing Oil Pressure Gauge To Chain Cover (Gasoline Engine Model)

Courtesy of SUBARU OF AMERICA, INC.

- HEV model

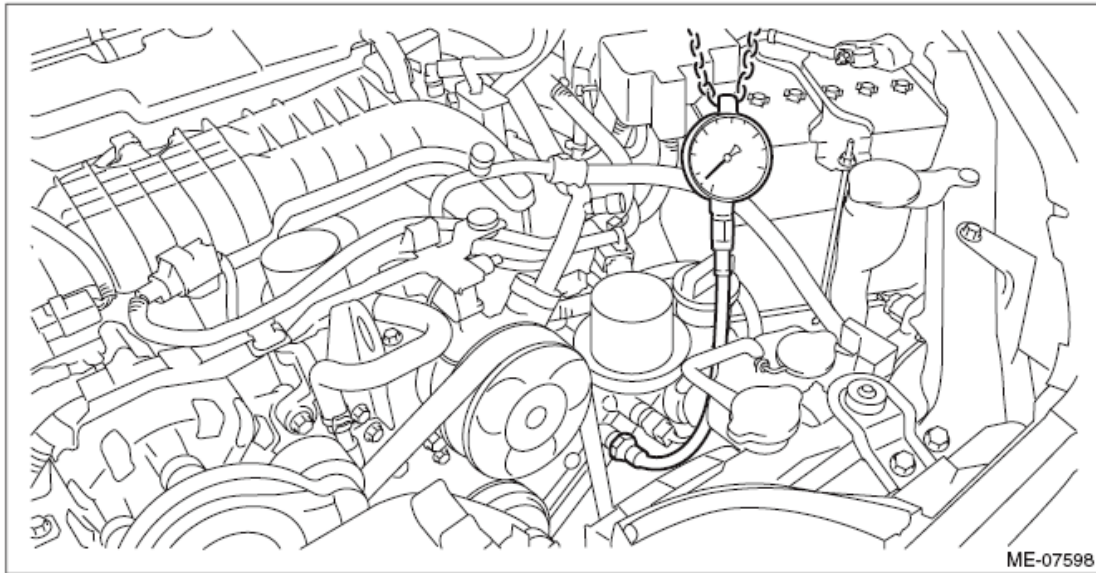


Fig. 45: Installing Oil Pressure Gauge To Chain Cover (HEV Model)
Courtesy of SUBARU OF AMERICA, INC.

5. Connect the battery ground terminal. < Ref. to **BATTERY** , NOTE, Note.>
6. Start the engine, and check the oil pressure.

NOTE:

- Standard value is based on an engine oil temperature of 80°C (176°F).
- If the oil pressure is out of specification, check oil pump, oil filter and lubrication line. < Ref. to **INSPECTION** , Engine Lubrication System Trouble in General.>
- If the oil pressure warning light is ON and oil pressure is within standard, check the oil pressure switch. < Ref. to **INSPECTION** , Engine Lubrication System Trouble in General.>

Engine oil pressure:

Standard

50 kPa (0.5 kg/cm² , 7 psi) or more (at 600 rpm)

350 kPa (3.6 kg/cm² , 51 psi) or more (at 6, 000 rpm)

7. After inspection, install the related parts in the reverse order of removal.

FUEL PRESSURE


INSPECTION

GASOLINE ENGINE MODEL

- CAUTION:**
- Be careful not to spill fuel.
 - Catch the fuel from the tubes using a container or cloth.

1. Release the fuel pressure. < Ref. to **RELEASING OF FUEL PRESSURE** , PROCEDURE, Fuel.>
2. Open the fuel filler lid and remove the fuel filler cap.
3. Disconnect the fuel delivery tube from the fuel delivery pipe, and connect the fuel pressure gauge.
 1. Disconnect the quick connector on the fuel delivery tube from the fuel pipe assembly, and remove the clip (A) securing the fuel delivery tube to the fuel pipe assembly.

NOTE: Disconnect the quick connector as shown in the figure.

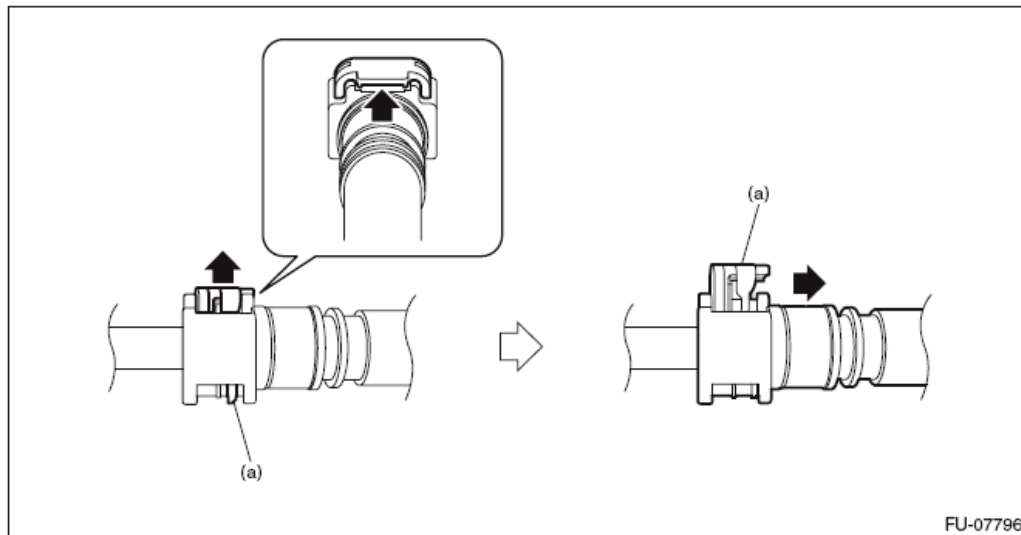

(a) Slider

Fig. 46: Disconnecting Quick Connector
Courtesy of SUBARU OF AMERICA, INC.

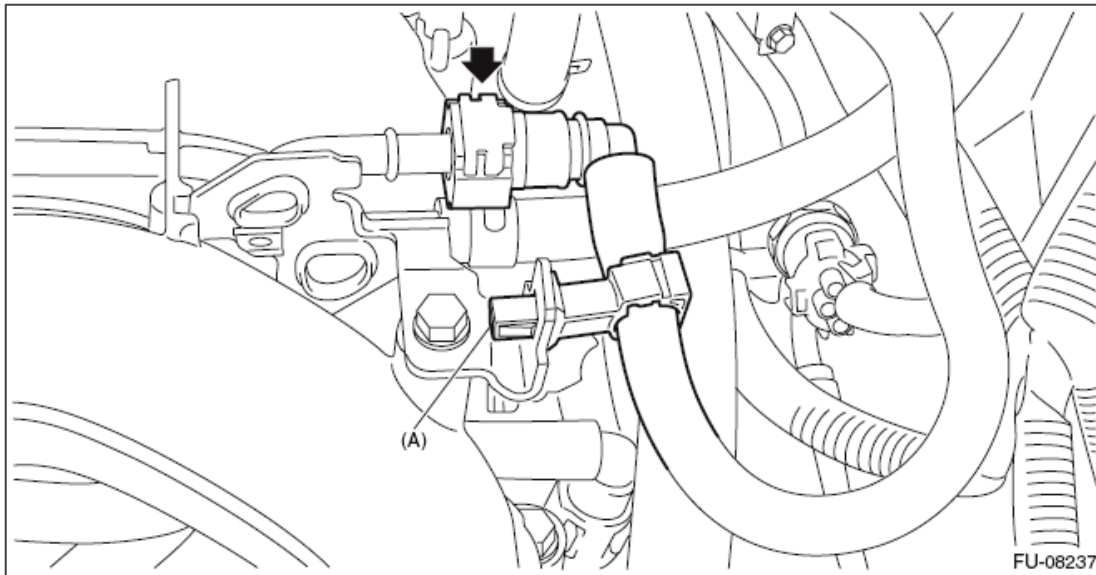


Fig. 47: Locating Quick Connector Slider
Courtesy of SUBARU OF AMERICA, INC.


2. Connect the fuel pressure gauge with ST1 and ST2.

CAUTION:

- Check that there is no damage or dust on the quick connector. If necessary, clean the seal surface of the pipe.
- When connecting the quick connector with slider, make sure to insert the ST2 all the way in before locking the slider.
- When it is difficult to lock the slider, check that the ST2 is fully inserted.
- Make sure that the quick connector is securely connected.

NOTE:

- ST1 is a SUBARU genuine part.
- When connecting the ST2 to the quick connector on the fuel delivery tube, connect as shown in the figure.

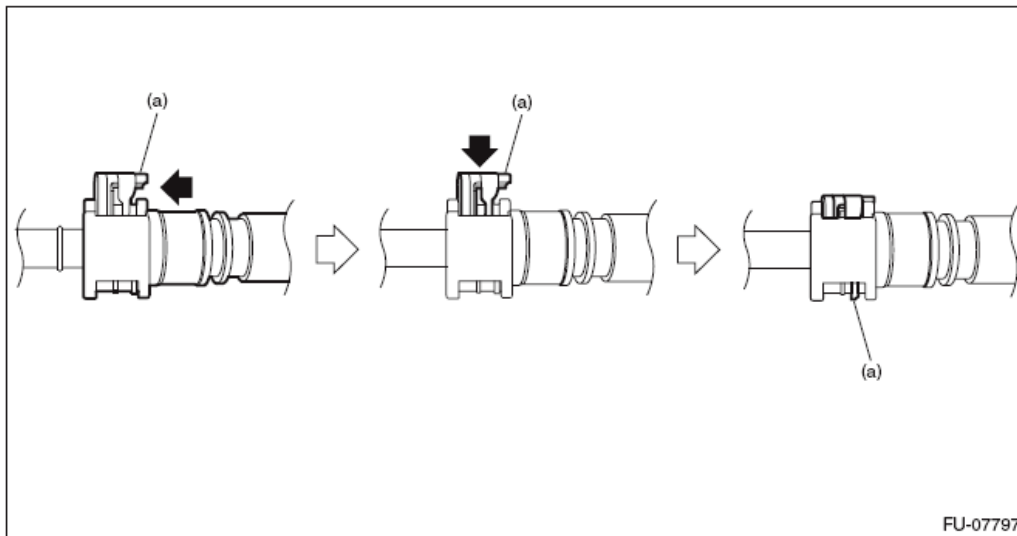

(a) Slider

Fig. 48: Connecting Fuel Pipe Adapter To Quick Connector On Fuel Delivery Tube
Courtesy of SUBARU OF AMERICA, INC.

ST1 42075AG690 FUEL HOSE

ST2 18471AA000 FUEL PIPE ADAPTER

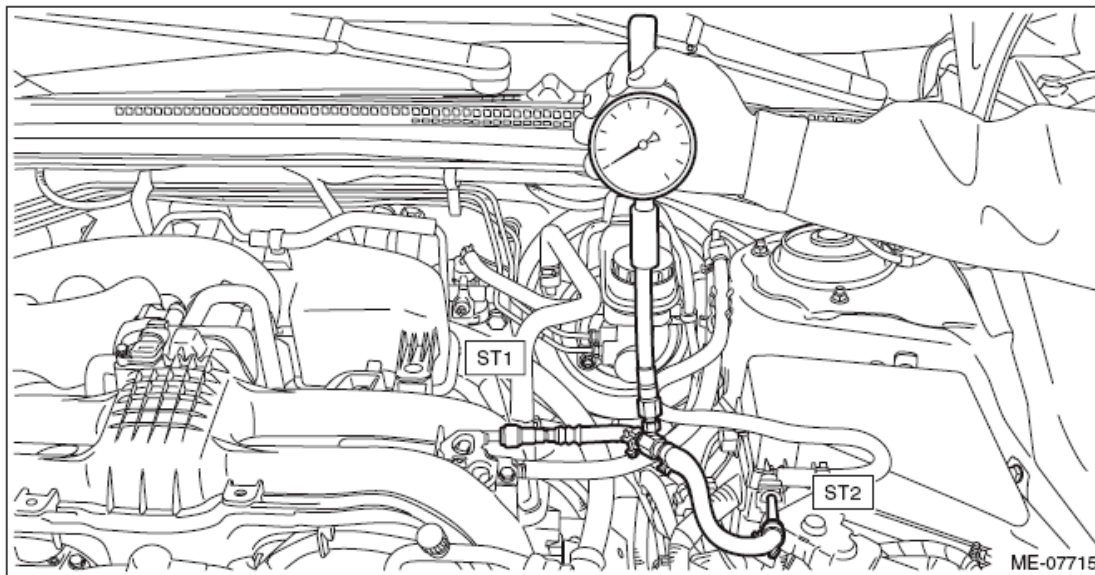


Fig. 49: Checking Fuel Pressure Using Tool
Courtesy of SUBARU OF AMERICA, INC.

4. Start the engine.
5. Check the fuel pressure after warming up the engine.

NOTE:

- The fuel pressure gauge registers 10 to 20 kPa (0.1 to 0.2 kg/cm² , 1 to 3 psi) higher than standard values during high-altitude operations.
- Check or replace the fuel pump and fuel delivery line if the fuel pressure is out of the standard.

*Fuel pressure:**Standard*

340 - 400 kPa (3.5 - 4.1 kg/cm² , 49 - 58 psi)

6. After inspection, install the related parts in the reverse order of removal.

CAUTION:

- Before removing the fuel pressure gauge, release the fuel pressure.
- Be careful not to spill fuel.
- Catch the fuel from hoses and tubes using a container or cloth.
- Check that there is no damage or dust on the quick connector. If necessary, clean the seal surface of the pipe.
- When connecting the quick connector with slider, make sure to insert the pipe all the way in before locking the slider.
- When it is difficult to lock the slider, check that the pipe is fully inserted.
- Make sure that the quick connector is securely connected.

NOTE:

- When disconnecting the ST1, install the ST2 to the fuel pipe assembly, and press the ST2 in the direction of arrow to disconnect the quick connector on the ST1.

ST1 42075AG690 FUEL HOSE

ST2 42099AE000 QUICK CONNECTOR RELEASE


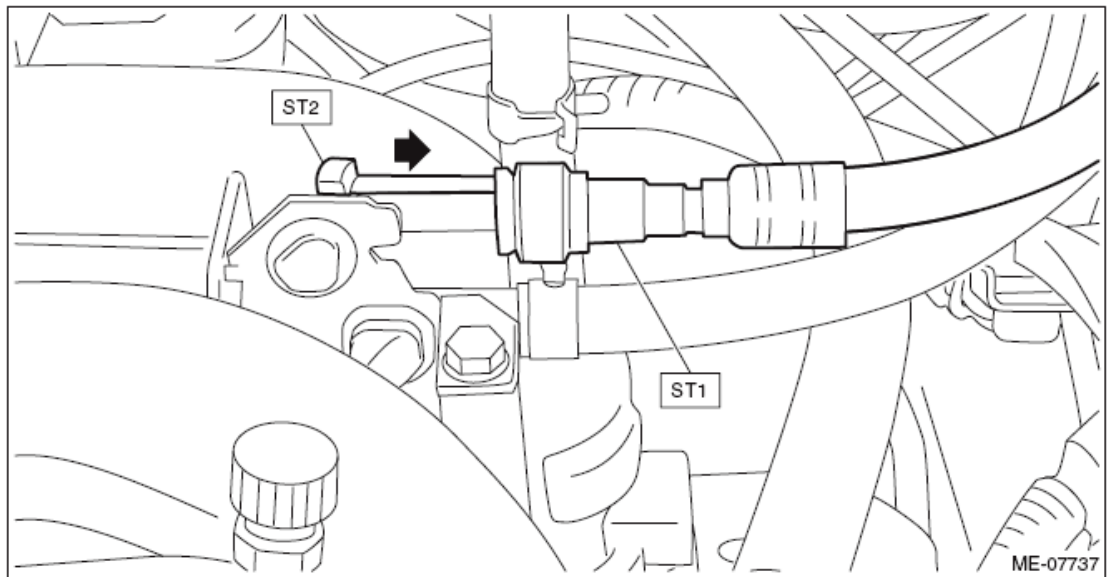


Fig. 50: Installing Quick Connector Release To Fuel Pipe Assembly
Courtesy of SUBARU OF AMERICA, INC.


- Disconnect the quick connector on the fuel delivery tube as shown in the figure.

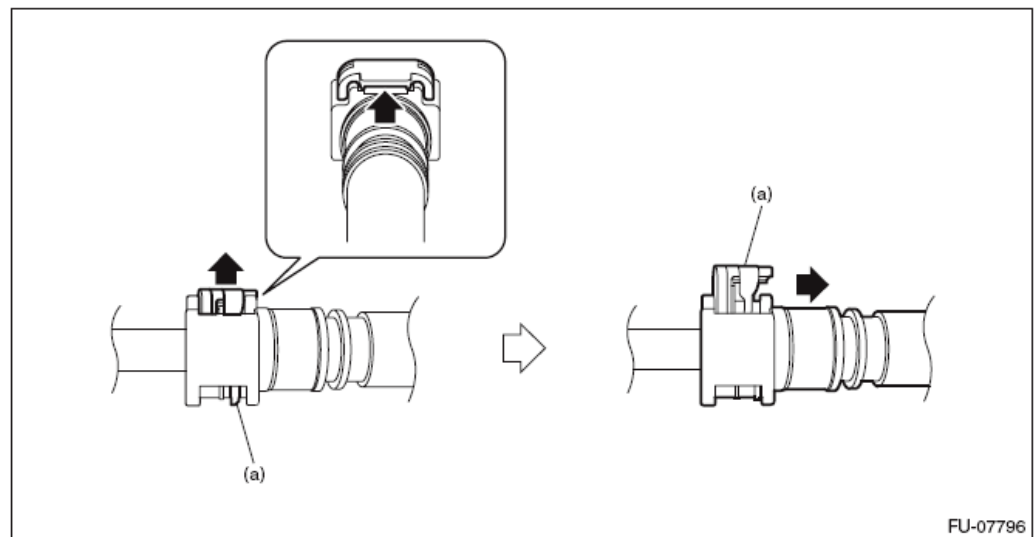

(a) Slider

Fig. 51: Disconnecting Quick Connector On Fuel Delivery Tube
Courtesy of SUBARU OF AMERICA, INC.

- Connect the quick connector on the fuel delivery tube as shown in the figure.

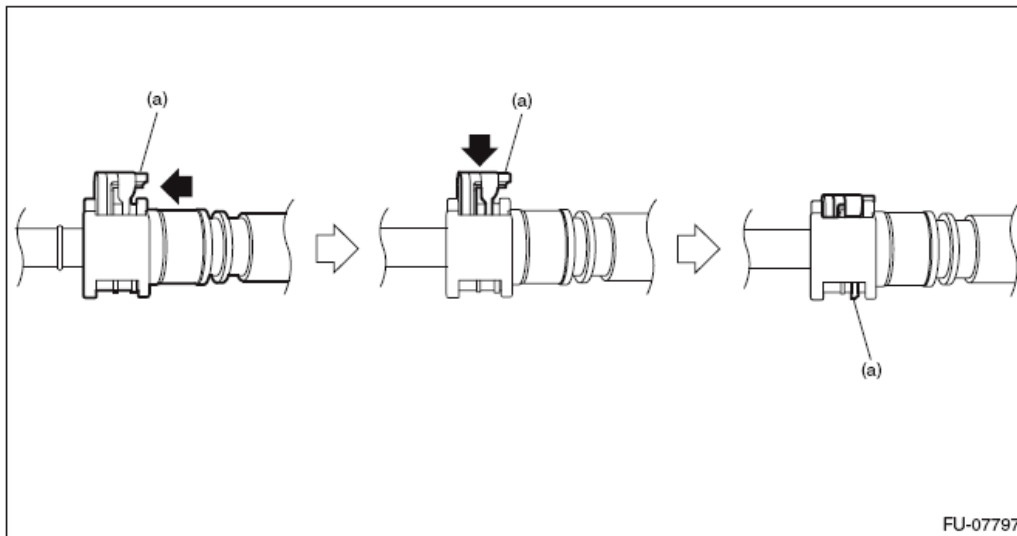

(a) Slider

Fig. 52: Connecting Quick Connector On Fuel Delivery Tube
Courtesy of SUBARU OF AMERICA, INC.

HEV MODEL

- CAUTION:**
- Be careful not to spill fuel.
 - Catch the fuel from the tubes using a container or cloth.

1. Turn the ignition switch to OFF.
2. Remove the collector cover.
 1. Pull up the two points at the front of collector cover (A).
 2. Pull up the two points at the rear of collector cover (B) while moving them rearward.

NOTE: Be careful not to contact the fuel delivery tube when moving the collector cover rearward.


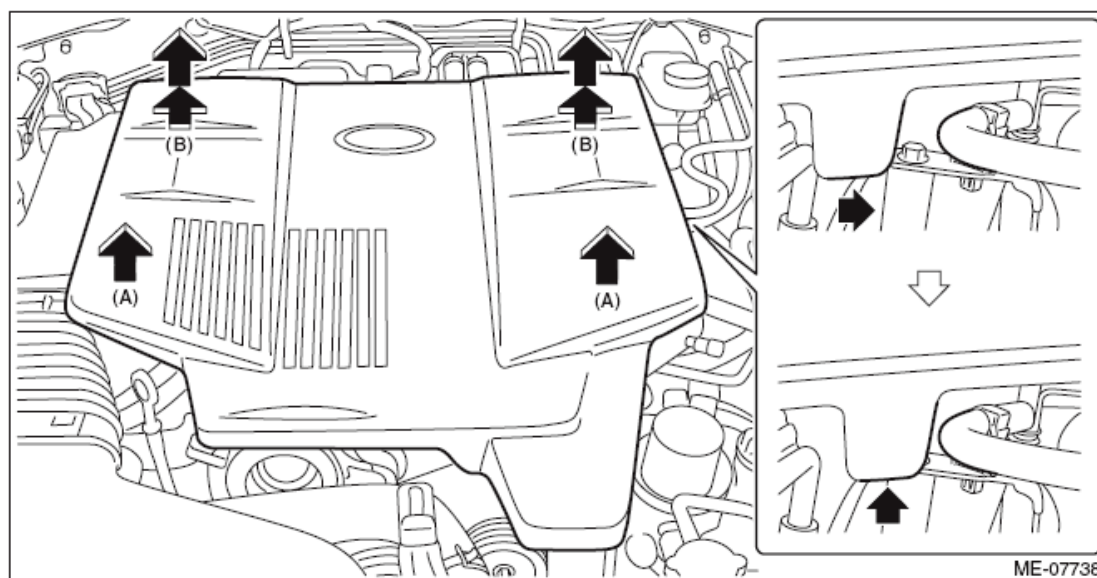


Fig. 53: Removing Collector Cover (HEV Model)
 Courtesy of SUBARU OF AMERICA, INC.

3. Release the fuel pressure. < Ref. to **RELEASING OF FUEL PRESSURE** , PROCEDURE, Fuel.>
4. Open the fuel filler lid and remove the fuel filler cap.
5. Disconnect the fuel delivery tube from the fuel pipe assembly, and connect the fuel pressure gauge.
 1. Disconnect the quick connector (A) of the fuel delivery tube from the fuel pipe assembly, and remove the fuel delivery tube from the hose clamp (B).

NOTE: **Disconnect the quick connector as shown in the figure.**

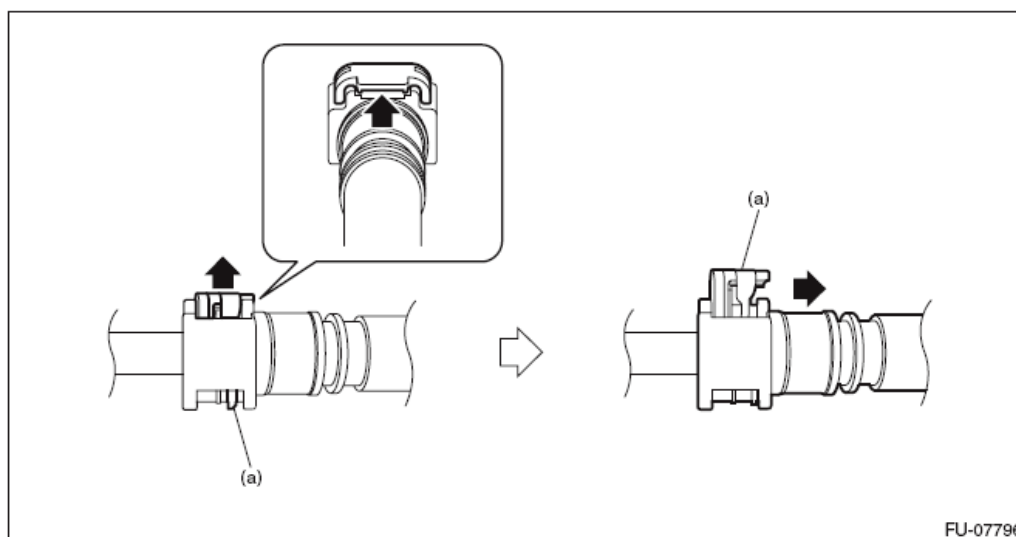

(a) Slider

Fig. 54: Disconnecting Quick Connector

Courtesy of SUBARU OF AMERICA, INC.

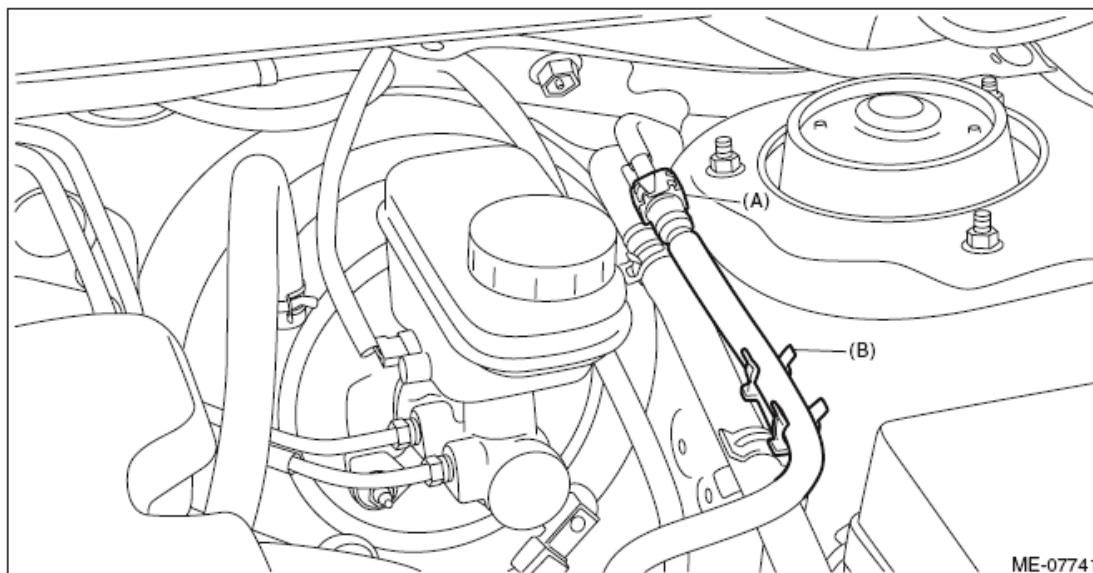


Fig. 55: Identifying Quick Connector And Hose Clamp
Courtesy of SUBARU OF AMERICA, INC.


2. Connect the fuel pressure gauge with ST1 and ST2.

CAUTION:

- Check that there is no damage or dust on the quick connector. If necessary, clean the seal surface of the pipe.
- When connecting the quick connector with slider, make sure to insert the ST2 all the way in before locking the slider.
- When it is difficult to lock the slider, check that the ST2 is fully inserted.
- Make sure that the quick connector is securely connected.

NOTE:

- ST1 is a SUBARU genuine part.
- When connecting the ST2 to the quick connector on the fuel delivery tube, connect as shown in the figure.

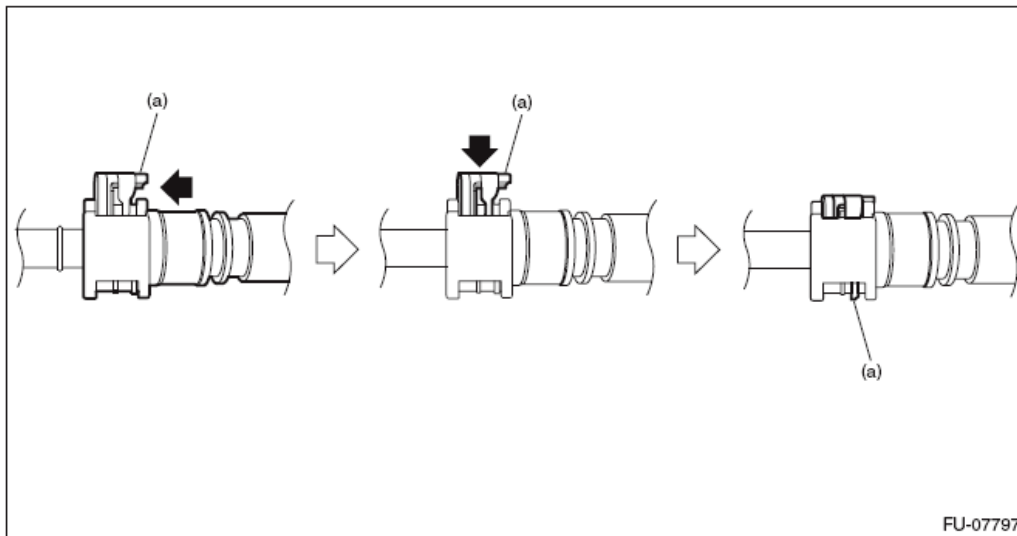

(a) Slider

Fig. 56: Connecting Fuel Pipe Adapter To Quick Connector On Fuel Delivery Tube
Courtesy of SUBARU OF AMERICA, INC.

ST1 42075AG690 FUEL HOSE

ST2 18471AA000 FUEL PIPE ADAPTER

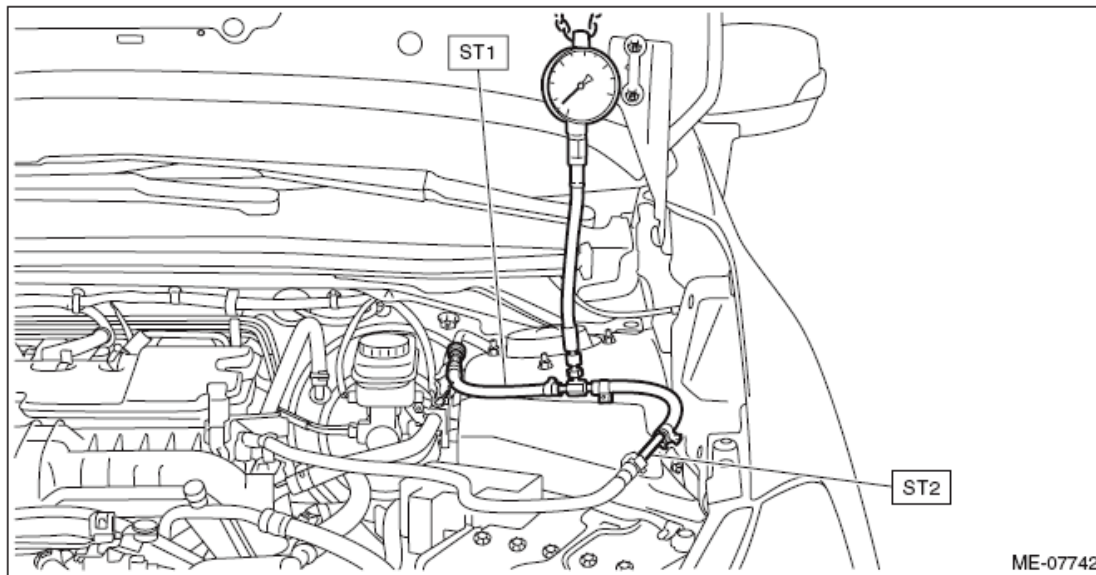


Fig. 57: Checking Fuel Pressure Using Tool
Courtesy of SUBARU OF AMERICA, INC.

6. Start the engine.
7. Check the fuel pressure after warming up the engine.

NOTE:

- The fuel pressure gauge registers 10 to 20 kPa (0.1 to 0.2 kg/cm² , 1 to 3 psi) higher than standard values during high-altitude operations.
- Check or replace the fuel pump and fuel delivery line if the fuel pressure is out of the standard.

*Fuel pressure:**Standard*

340 - 400 kPa (3.5 - 4.1 kg/cm² , 49 - 58 psi)

8. After inspection, install the related parts in the reverse order of removal.

CAUTION:

- Before removing the fuel pressure gauge, release the fuel pressure.
- Be careful not to spill fuel.
- Catch the fuel from hoses and tubes using a container or cloth.
- Check that there is no damage or dust on the quick connector. If necessary, clean the seal surface of the pipe.
- When connecting the quick connector with slider, make sure to insert the pipe all the way in before locking the slider.
- When it is difficult to lock the slider, check that the pipe is fully inserted.
- Make sure that the quick connector is securely connected.

NOTE:

- When disconnecting the ST1, install the ST2 to the fuel pipe assembly, and press the ST2 in the direction of arrow to disconnect the quick connector on the ST1.

ST1 42075AG690 FUEL HOSE

ST2 42099AE000 QUICK CONNECTOR RELEASE


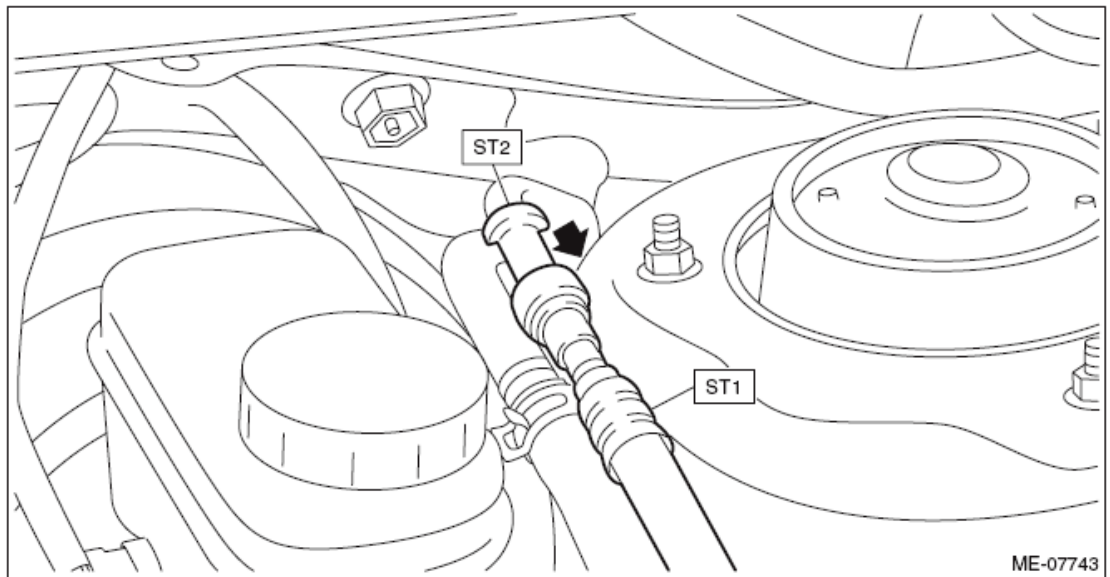


Fig. 58: Disconnecting Quick Connector On Fuel Hose
 Courtesy of SUBARU OF AMERICA, INC.


- Disconnect the quick connector on the fuel delivery tube as shown in the figure.

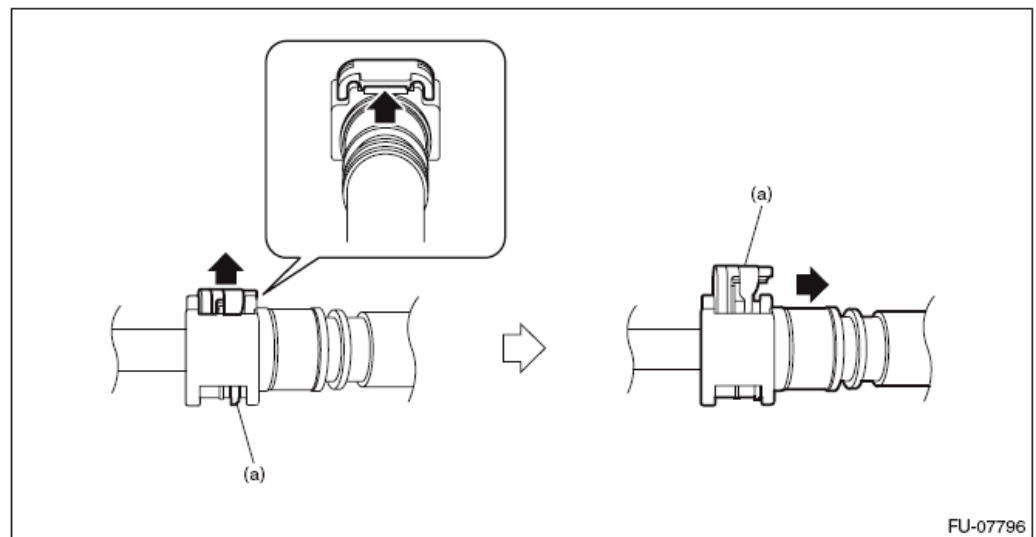

(a) Slider

Fig. 59: Disconnecting Quick Connector On Fuel Delivery Tube
 Courtesy of SUBARU OF AMERICA, INC.

- Connect the quick connector on the fuel delivery tube as shown in the figure.

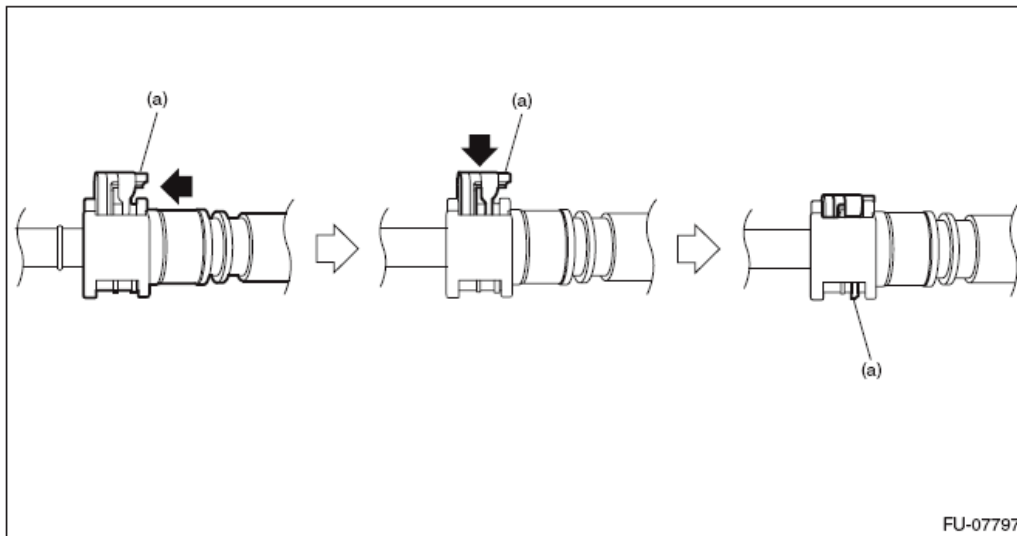

(a) Slider

Fig. 60: Connecting Quick Connector On Fuel Delivery Tube
Courtesy of SUBARU OF AMERICA, INC.

CAM CLEARANCE

INSPECTION

WHEN TIMING CHAIN ASSEMBLY IS NOT REMOVED

CAUTION: When working on the vehicle, if engine oil is spilt onto the exhaust pipe, wipe it off with cloth to avoid emission of smoke or causing a fire.

NOTE:

- Inspection of cam clearance should be performed while engine is cold.
- If the engine is removed from vehicle, performing the step 1) and 2) is not necessary.

1. Disconnect the ground cable from battery. < Ref. to **BATTERY** , NOTE, Note.>

NOTE:

For the 12 volt engine restart battery of HEV model, disconnect the ground terminal from 12V engine restart battery sensor.

2. Remove the air intake duct. < Ref. to **REMOVAL** , Air Intake Duct.> < Ref. to **REMOVAL** , Air Intake Duct.>
3. When inspecting #1 and #3 cylinders
 1. Remove the rocker cover RH. < Ref. to **ROCKER COVER RH**, REMOVAL, Rocker Cover.>

NOTE:

When working on the vehicle, place a suitable container under the

vehicle.

2. Set #1 cylinder piston to top dead center of compression stroke by rotating the crank pulley clockwise using the socket wrench.

NOTE: When the timing mark (A) on crank pulley is aligned to the 0° in timing gauge (B) on chain cover as shown in the figure, the #1 cylinder piston is located at TDC of compression stroke if the intake camshaft and exhaust camshaft does not depress the #1 cylinder intake side roller rocker arm (intake valve) and exhaust side roller rocker arm (exhaust valve). If roller rocker arm (valve) is depressed, turn the crank pulley by 360° in order to make #1 cylinder piston at TDC of compression stroke.

- Gasoline engine model

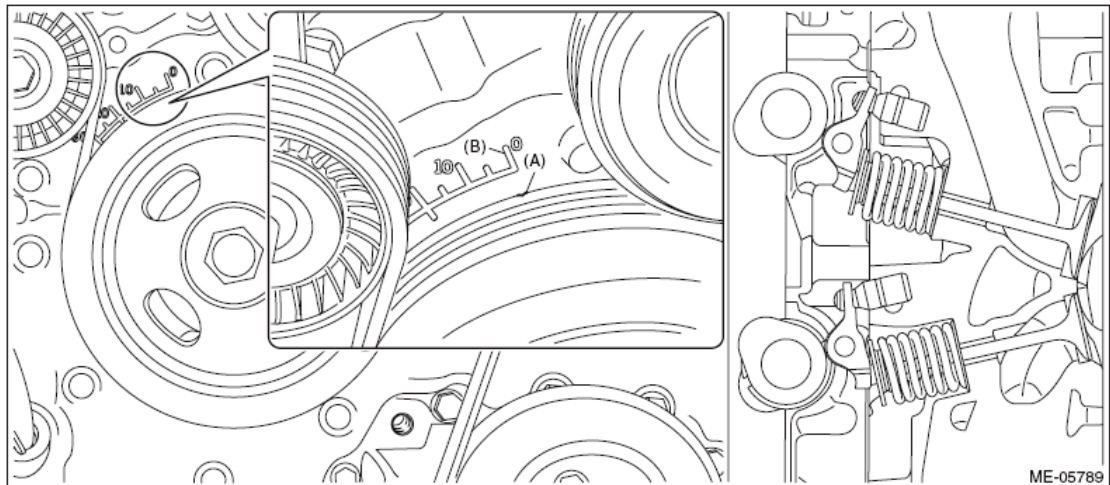


Fig. 61: Identifying Crank Pulley Timing Mark (Gasoline Engine Model)
Courtesy of SUBARU OF AMERICA, INC.

- HEV model

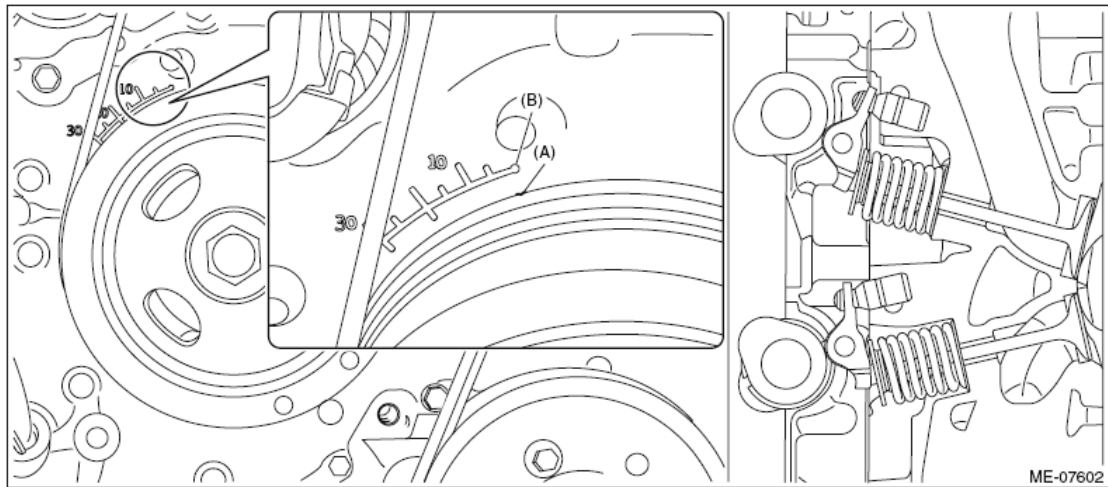


Fig. 62: Identifying Crank Pulley Timing Mark (HEV Model)
 Courtesy of SUBARU OF AMERICA, INC.

3. Check the cam clearance for #1 cylinder intake, #1 cylinder exhaust and #3 cylinder exhaust.

NOTE:

- Measure the roller surface of cam base circle and roller rocker arm using thickness gauge (A).
- If the measured value is out of standard, take notes of the value in order to adjust the cam clearance later on.

Cam clearance:

Intake

Standard

$0.13^{+0.02}_{-0.03} \text{ mm } (0.0051^{+0.0008}_{-0.0012} \text{ in})$

Exhaust

Standard

$0.22 \pm 0.02 \text{ mm } (0.0087 \pm 0.0008 \text{ in})$

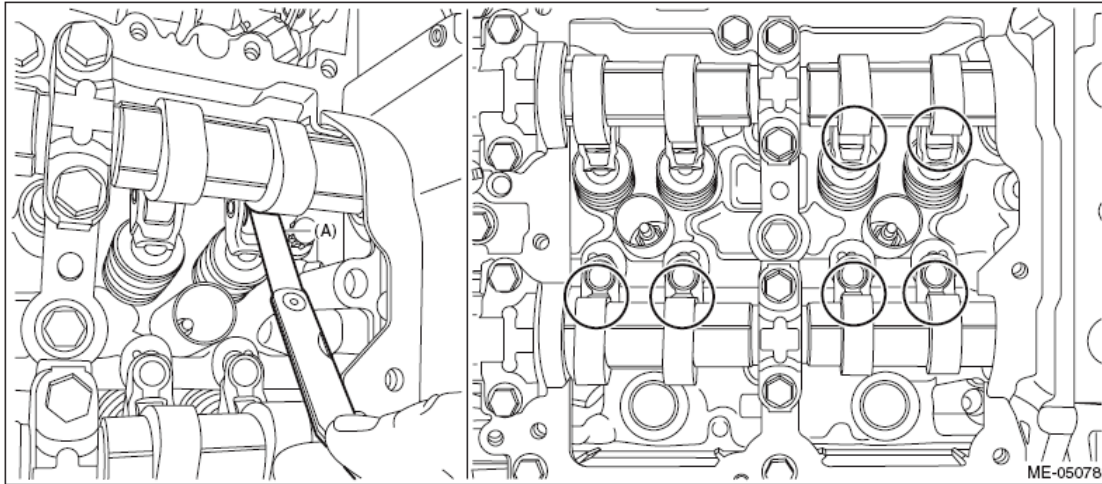


Fig. 63: Measuring Roller Surface Of Cam Base Circle And Roller Rocker Arm Using Thickness Gauge

Courtesy of SUBARU OF AMERICA, INC.

4. Turn the crank pulley by 360°.
 - Gasoline engine model

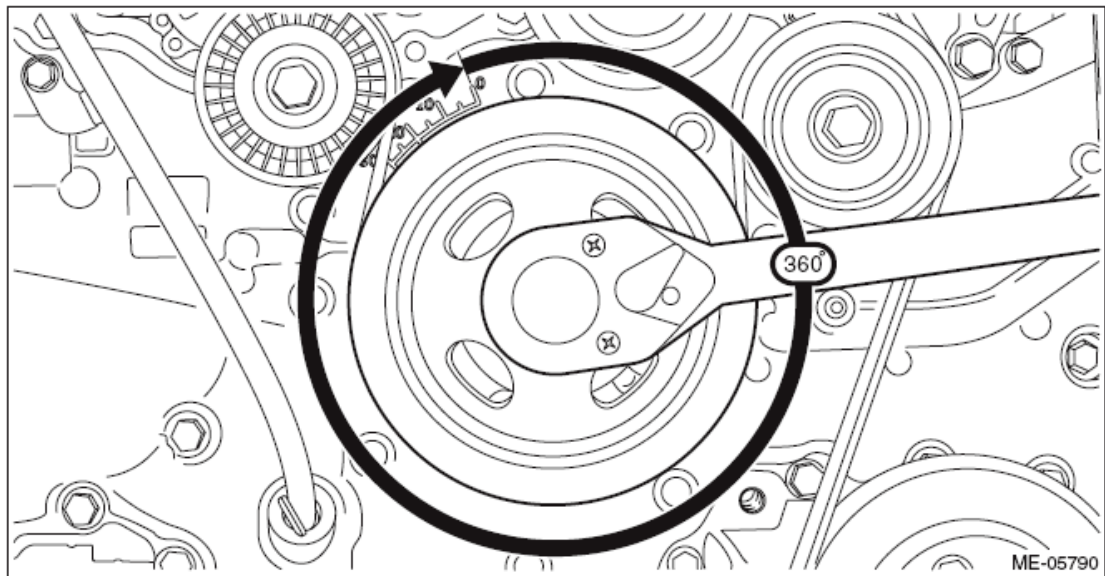


Fig. 64: Turning Crank Pulley 360° (Gasoline Engine Model)

Courtesy of SUBARU OF AMERICA, INC.

- HEV model

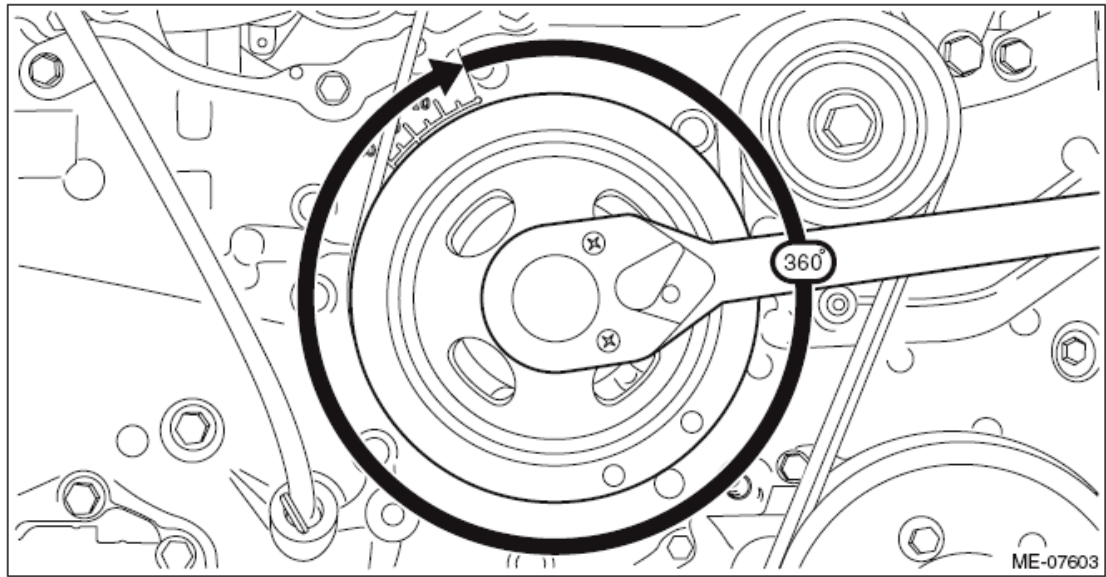


Fig. 65: Turning Crank Pulley 360° (HEV Model)
Courtesy of SUBARU OF AMERICA, INC.

5. Check the clearance of #3 cylinder intake.

NOTE:

- Measure the roller surface of cam base circle and roller rocker arm using thickness gauge (A).
- If the measured value is out of standard, take notes of the value in order to adjust the cam clearance later on.

Cam clearance:

Standard

$0.13^{+0.02}_{-0.03} \text{ mm } (0.0051^{+0.0008}_{-0.0012} \text{ in})$

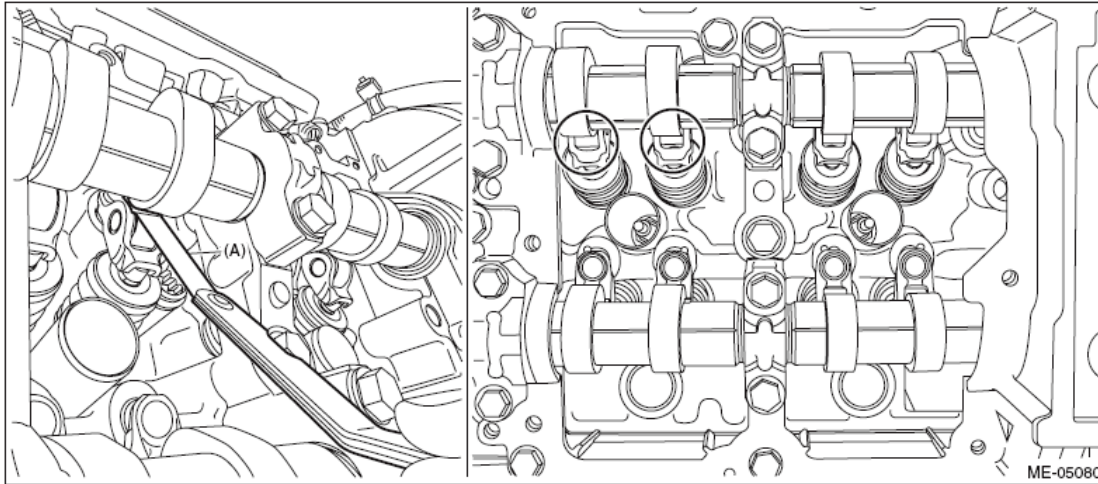


Fig. 66: Measuring Roller Surface Of Cam Base Circle And Roller Rocker Arm Using Thickness Gauge

Courtesy of SUBARU OF AMERICA, INC.

4. When inspecting #2 and #4 cylinders

1. Remove the rocker cover LH. < Ref. to **ROCKER COVER LH, REMOVAL**, Rocker Cover.>

NOTE: When working on the vehicle, place a suitable container under the vehicle.

2. Set #2 cylinder piston to top dead center of compression stroke by rotating the crank pulley clockwise using the socket wrench.

NOTE: When the timing mark (A) on crank pulley is aligned to the 0° in timing gauge (B) on chain cover as shown in the figure, the #2 cylinder piston is located at TDC of compression stroke if the intake camshaft and exhaust camshaft does not depress the #2 cylinder intake side roller rocker arm (intake valve) and exhaust side roller rocker arm (exhaust valve). If roller rocker arm (valve) is depressed, turn the crank pulley by 360° in order to make #2 cylinder piston at TDC of compression stroke.

- Gasoline engine model

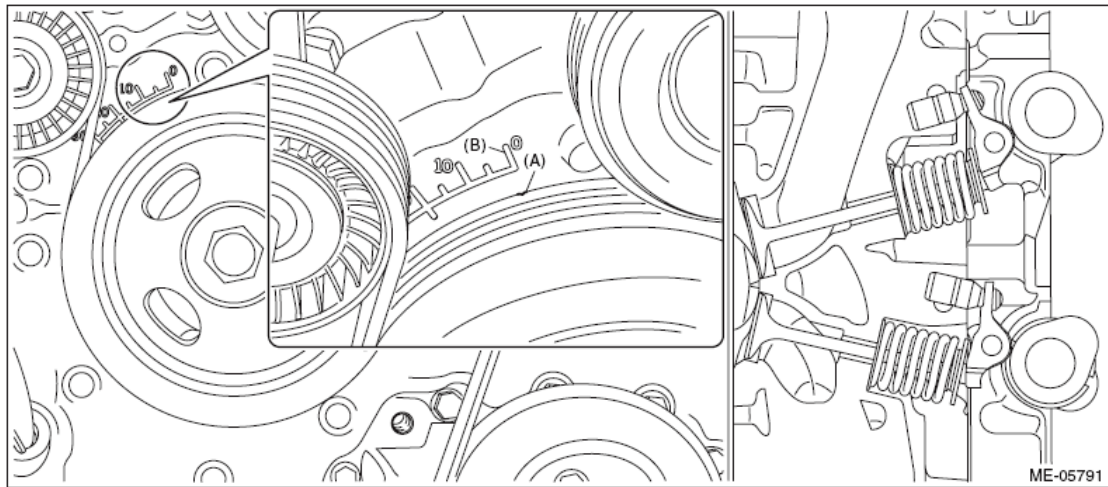


Fig. 67: Identifying Crank Pulley Timing Mark (Gasoline Engine Model)
Courtesy of SUBARU OF AMERICA, INC.

- HEV model

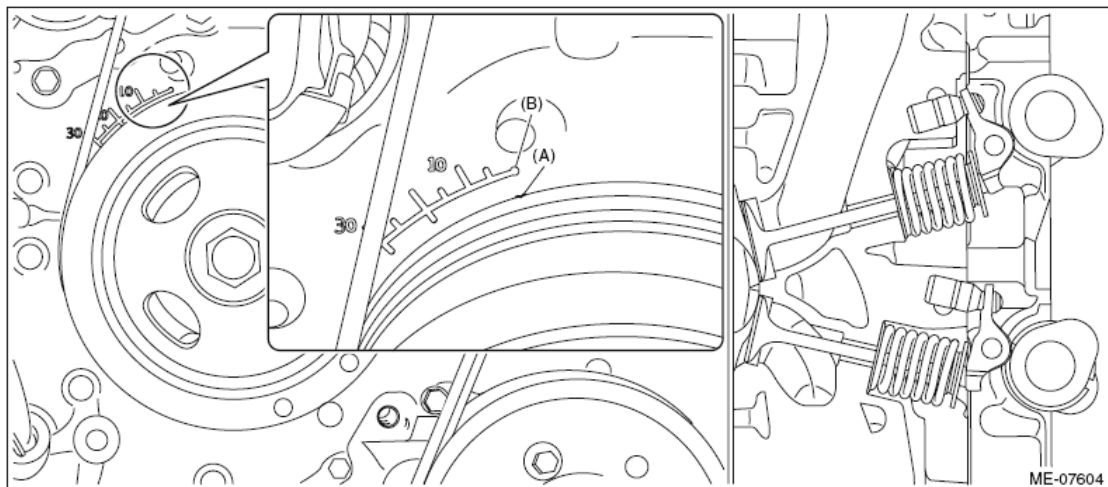


Fig. 68: Identifying Crank Pulley Timing Mark (HEV Model)
Courtesy of SUBARU OF AMERICA, INC.

3. Check the cam clearance for #2 cylinder intake, #2 cylinder exhaust and #4 cylinder exhaust.

NOTE:

- Measure the roller surface of cam base circle and roller rocker arm using thickness gauge (A).
- If the measured value is out of standard, take notes of the value in order to adjust the cam clearance later on.

Cam clearance:

Intake

Standard

$0.13^{+0.02}_{-0.03} \text{ mm } 0.0051^{+0.0008}_{-0.0012} \text{ in}$

Exhaust

Standard

$0.22 \pm 0.02 \text{ mm } (0.0087 \pm 0.0008 \text{ in})$

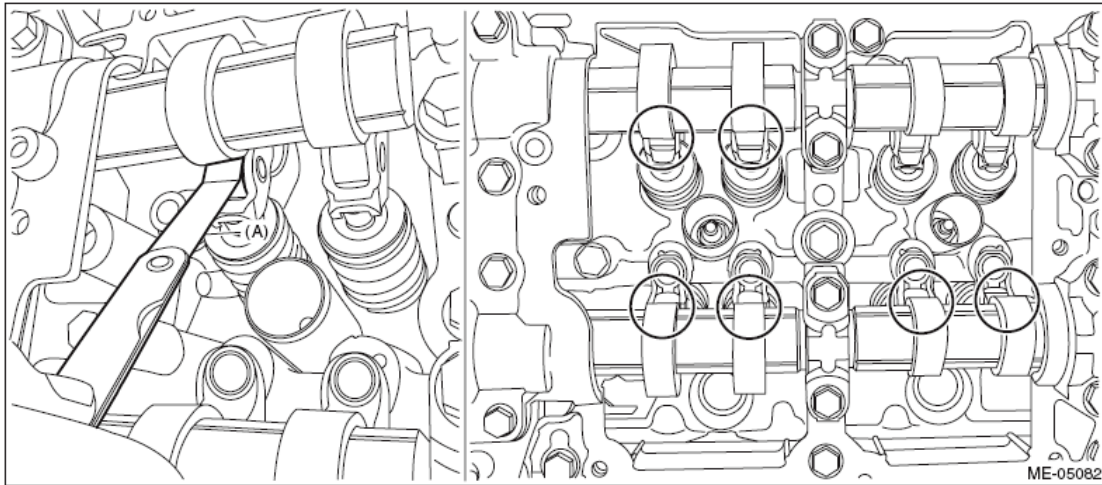


Fig. 69: Measuring Roller Surface Of Cam Base Circle And Roller Rocker Arm Using Thickness Gauge

Courtesy of SUBARU OF AMERICA, INC.

4. Turn the crank pulley by 360°.
 - Gasoline engine model

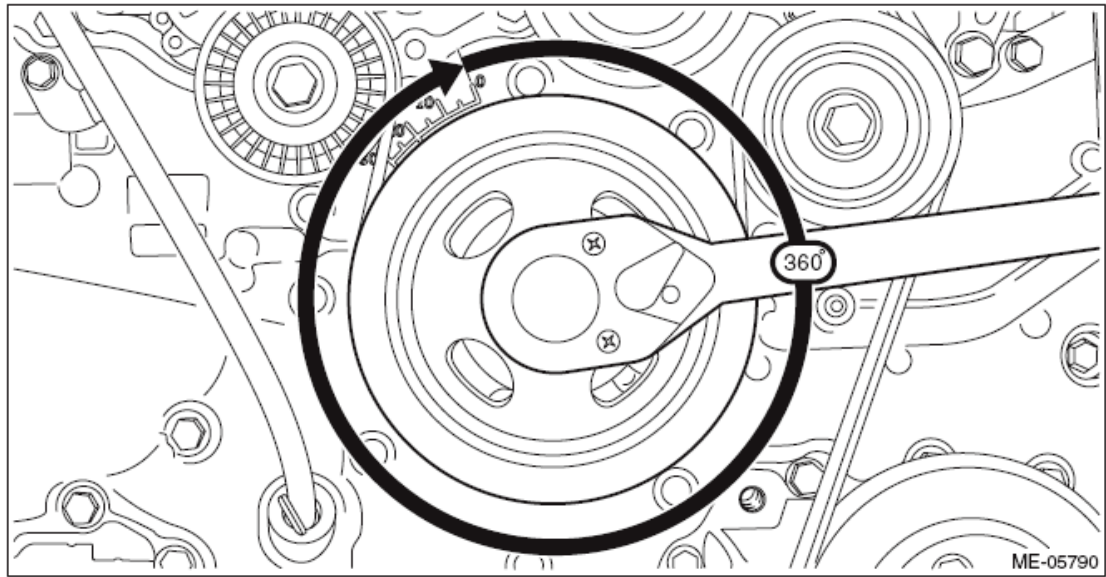


Fig. 70: Turning Crank Pulley 360° (Gasoline Engine Model)
Courtesy of SUBARU OF AMERICA, INC.

- HEV model

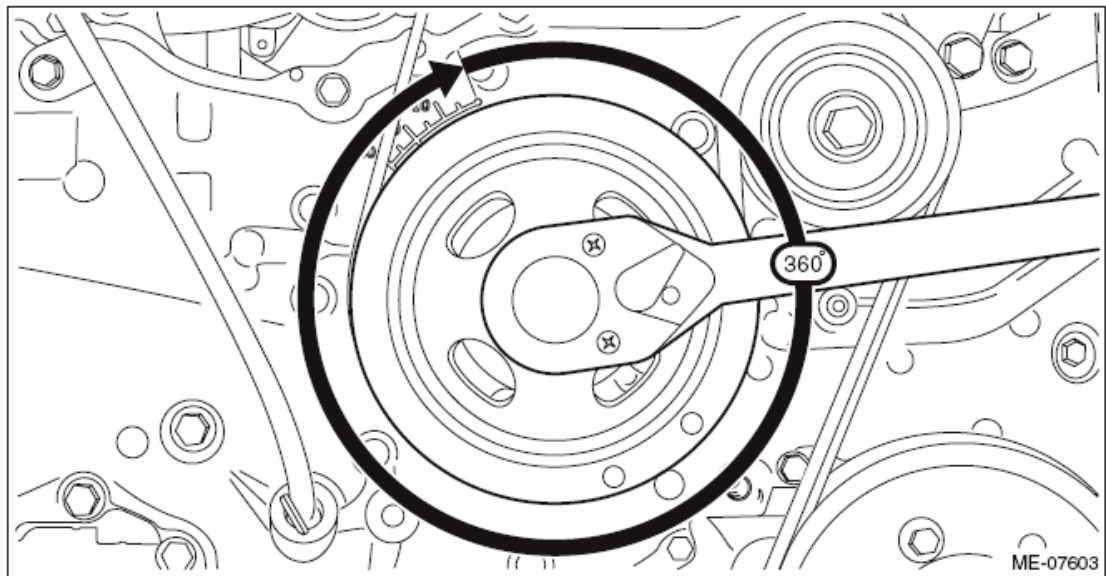


Fig. 71: Turning Crank Pulley 360° (HEV Model)
Courtesy of SUBARU OF AMERICA, INC.

5. Check the clearance of #4 cylinder intake.

NOTE:

- Measure the roller surface of cam base circle and roller rocker arm using thickness gauge (A).
- If the measured value is out of standard, take notes of the value in

order to adjust the cam clearance later on.

Cam clearance:

Standard

$0.13^{+0.02}_{-0.03}$ mm $0.0051^{+0.0008}_{-0.0012}$ in)

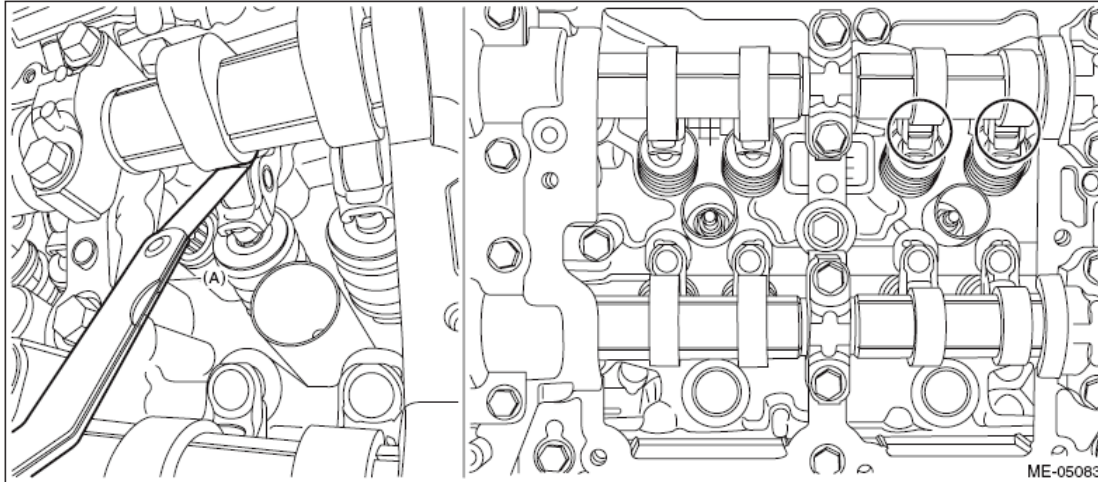


Fig. 72: Measuring Roller Surface Of Cam Base Circle And Roller Rocker Arm Using Thickness Gauge

Courtesy of SUBARU OF AMERICA, INC.

5. If necessary, adjust the cam clearance. < Ref. to ADJUSTMENT, Cam Clearance.>
6. After inspection, install the related parts in the reverse order of removal.

WHEN TIMING CHAIN ASSEMBLY IS REMOVED

NOTE: Inspection of cam clearance should be performed while engine is cold.

1. When inspecting #1 and #3 cylinders
 1. Remove the rocker cover RH. < Ref. to ROCKER COVER RH, REMOVAL, Rocker Cover.>

NOTE: When working on the vehicle, place a suitable container under the vehicle.

2. Check the #1 and #3 cylinder cam clearance.

CAUTION: Intake and exhaust camshafts can be independently rotated with the timing chain removed. When the intake valve and exhaust valve lift at the same time, the valve heads contact each other and valve stem may bend. Do not turn it to the outside of range of zero lift (cam base

circle position) (in range where it can be turned lightly by hand).

NOTE:

- For cam clearance inspection, adjust the cam base circle position so that the thickness gauge (A) can be inserted easily by hand turning the camshaft (cam sprocket) to be measured.
- Measure the roller surface of cam base circle and roller rocker arm using thickness gauge (A).
- If the measured value is out of standard, take notes of the value in order to adjust the cam clearance later on.

Cam clearance:

Intake

Standard

$0.13^{+0.02}_{-0.03} \text{ mm } 0.0051^{+0.0008}_{-0.0012} \text{ in}$

Exhaust

Standard

$0.22 \pm 0.02 \text{ mm } (0.0087 \pm 0.0008 \text{ in})$

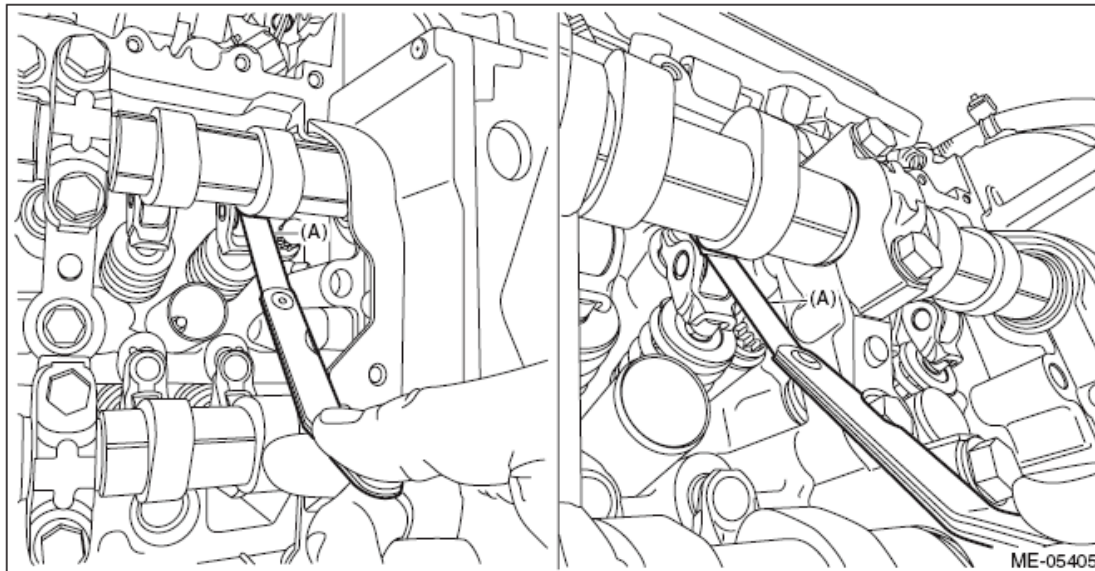


Fig. 73: Measuring Cam Clearance Using Tool
Courtesy of SUBARU OF AMERICA, INC.

2. When inspecting #2 and #4 cylinders

1. Remove the rocker cover LH. < Ref. to **ROCKER COVER LH**, REMOVAL, Rocker Cover.>

NOTE: When working on the vehicle, place a suitable container under the vehicle.

2. Check the #2 and #4 cylinder cam clearance.

CAUTION: Intake and exhaust camshafts can be independently rotated with the timing chain removed. When the intake valve and exhaust valve lift at the same time, the valve heads contact each other and valve stem may bend. Do not turn it to the outside of range of zero lift (cam base circle position) (in range where it can be turned lightly by hand).

- NOTE:**
- For cam clearance inspection, adjust the cam base circle position so that the thickness gauge (A) can be inserted easily by hand turning the camshaft (cam sprocket) to be measured.
 - Measure the roller surface of cam base circle and roller rocker arm using thickness gauge (A).
 - If the measured value is out of standard, take notes of the value in order to adjust the cam clearance later on.

Cam clearance:

Intake

Standard

$0.13^{+0.02}_{-0.03} \text{ mm } 0.0051^{+0.0008}_{-0.0012} \text{ in}$

Exhaust

Standard

$0.22 \pm 0.02 \text{ mm } (0.0087 \pm 0.0008 \text{ in})$

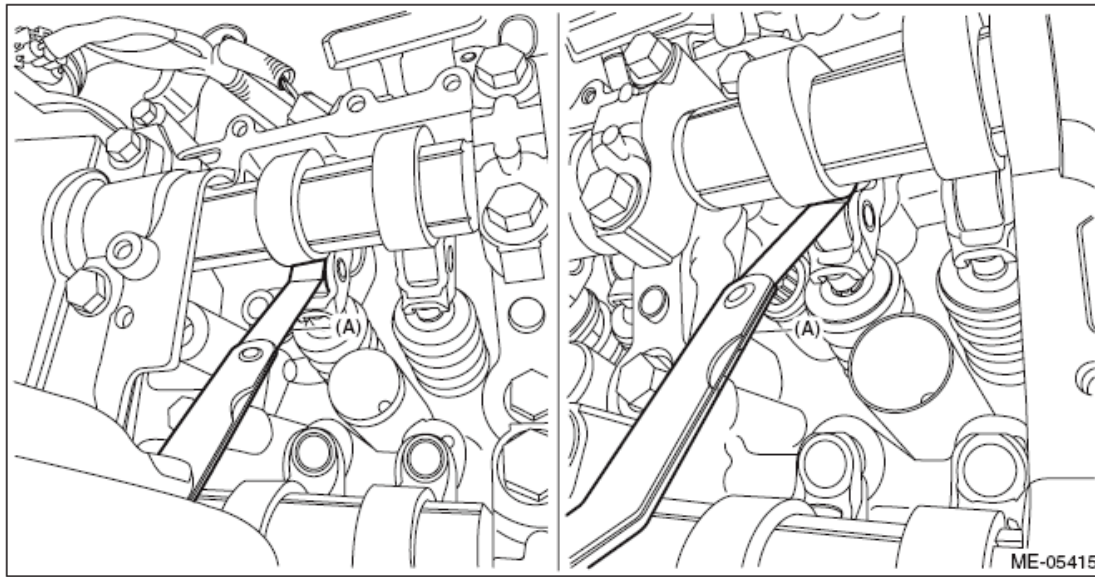


Fig. 74: Measuring Cam Clearance Using Tool
Courtesy of SUBARU OF AMERICA, INC.

3. If necessary, adjust the cam clearance. < Ref. to **ADJUSTMENT**, Cam Clearance.>
4. After inspection, install the related parts in the reverse order of removal.

ADJUSTMENT

1. Remove the engine from the vehicle. < Ref. to **REMOVAL**, Engine Assembly.>
2. Remove the chain cover. < Ref. to **REMOVAL**, Chain Cover.>
3. When adjusting #1 and #3 cylinders
 1. Remove the timing chain RH. < Ref. to **TIMING CHAIN RH**, REMOVAL, Timing Chain Assembly.>
 2. Remove the cam carrier RH. < Ref. to **CAM CARRIER RH**, REMOVAL, Cam Carrier.>
 3. Measure the thickness of valve shim using micrometer.

NOTE: **Measurement should be performed at a temperature of 20°C (68°F).**

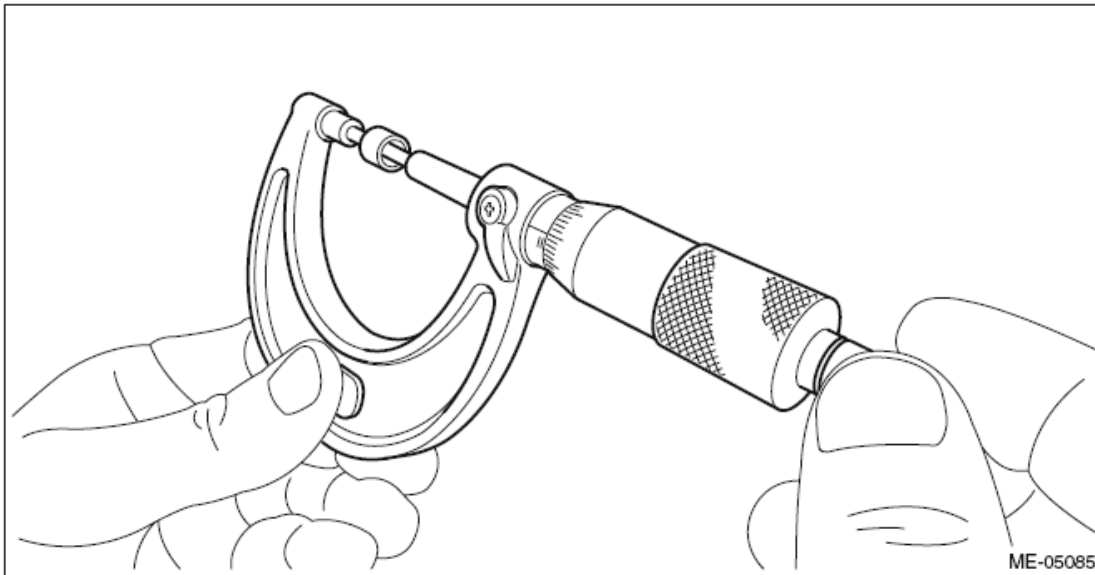


Fig. 75: Measuring Thickness Of Valve Shim Using Micrometer
Courtesy of SUBARU OF AMERICA, INC.

4. Select a valve shim of suitable thickness using the measured cam clearance and valve shim thickness.

NOTE: Use a new valve shim.

Intake side: $S = T + 1.69 \times (V - 0.13 \text{ mm (0.0051 in)})$
Exhaust side: $S = T + 1.87 \times (V - 0.22 \text{ mm (0.0087 in)})$
S: Valve shim thickness required
V: Measured cam clearance
T: Current valve shim thickness

5. Install the cam carrier RH. < Ref. to **CAM CARRIER RH**, INSTALLATION, Cam Carrier.>
6. Check all the cam clearance of RH side at this time. If the cam clearance is not within the standard value, repeat the procedure over again from step 2).

NOTE: When the removing/installing of cam carrier RH has been performed, cam clearance may be outside the standard value. Checking of all cam clearance of RH side is necessary. Refer to INSPECTION of "Cam Clearance" for the cam clearance inspection. < Ref. to **WHEN TIMING CHAIN ASSEMBLY IS REMOVED**, INSPECTION, Cam Clearance.>

Cam clearance:

Intake

Standard

$0.13^{+0.02}_{-0.03} \text{ mm } 0.0051^{+0.0008}_{-0.0012} \text{ in}$

Exhaust

Standard

$0.22 \pm 0.02 \text{ mm } (0.0087 \pm 0.0008 \text{ in})$

4. When adjusting #2 and #4 cylinders
 1. Remove the timing chain LH. < Ref. to **TIMING CHAIN LH**, REMOVAL, Timing Chain Assembly.>
 2. Remove the cam carrier LH. < Ref. to **CAM CARRIER LH**, REMOVAL, Cam Carrier.>
 3. Measure the thickness of valve shim using micrometer.

NOTE: Measurement should be performed at a temperature of 20°C (68°F).

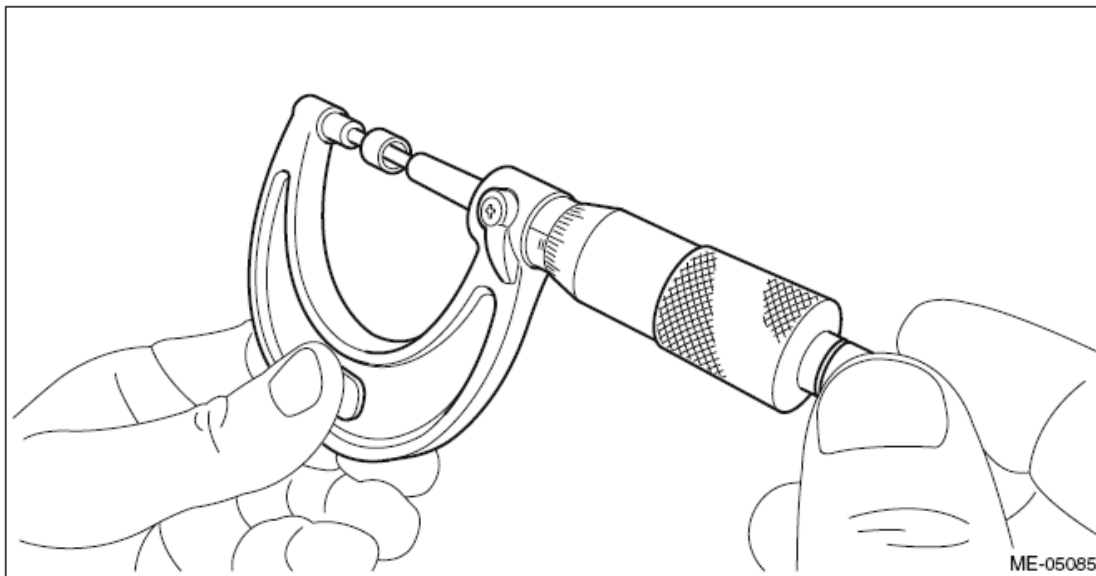


Fig. 76: Measuring Thickness Of Valve Shim Using Micrometer
Courtesy of SUBARU OF AMERICA, INC.

4. Select a valve shim of suitable thickness using the measured cam clearance and valve shim thickness.

NOTE: Use a new valve shim.

Intake side: $S = T + 1.69 \times (V - 0.13 \text{ mm } (0.0051 \text{ in}))$
Exhaust side: $S = T + 1.87 \times (V - 0.22 \text{ mm } (0.0087 \text{ in}))$

S: Valve shim thickness required
V: Measured cam clearance

T: Current valve shim thickness

5. Install the cam carrier LH. < Ref. to **CAM CARRIER LH**, INSTALLATION, Cam Carrier.>
6. Check all the cam clearance of LH side at this time. If the cam clearance is not within the standard value, repeat the procedure over again from step 2).

NOTE: When the removing/installing of cam carrier LH has been performed, cam clearance may be outside the standard value. Checking of all cam clearance of LH side is necessary. Refer to INSPECTION of "Cam Clearance" for the cam clearance inspection. < Ref. to **WHEN TIMING CHAIN ASSEMBLY IS REMOVED**, INSPECTION, Cam Clearance.>

Cam clearance:

Intake

Standard

$0.13^{+0.02}_{-0.03} \text{ mm } 0.0051^{+0.0008}_{-0.0012} \text{ in}$

Exhaust

Standard

$0.22 \pm 0.02 \text{ mm } (0.0087 \pm 0.0008 \text{ in})$

5. After adjustment, install the related parts in the reverse order of removal.

ENGINE ASSEMBLY

REMOVAL

GASOLINE ENGINE MODEL

1. Open the front hood, and make alignment marks (A) on both the front hood and the front hood striker by using a marker pen.

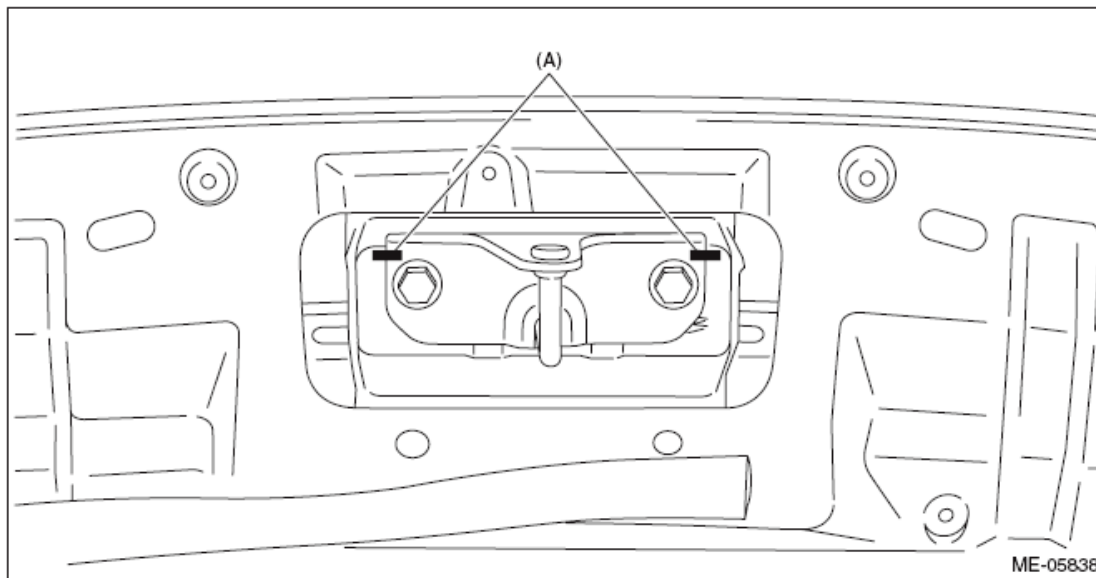


Fig. 77: Identifying Front Hood And Striker Alignment Marks
Courtesy of SUBARU OF AMERICA, INC.

2. Remove the front hood striker from the front hood.

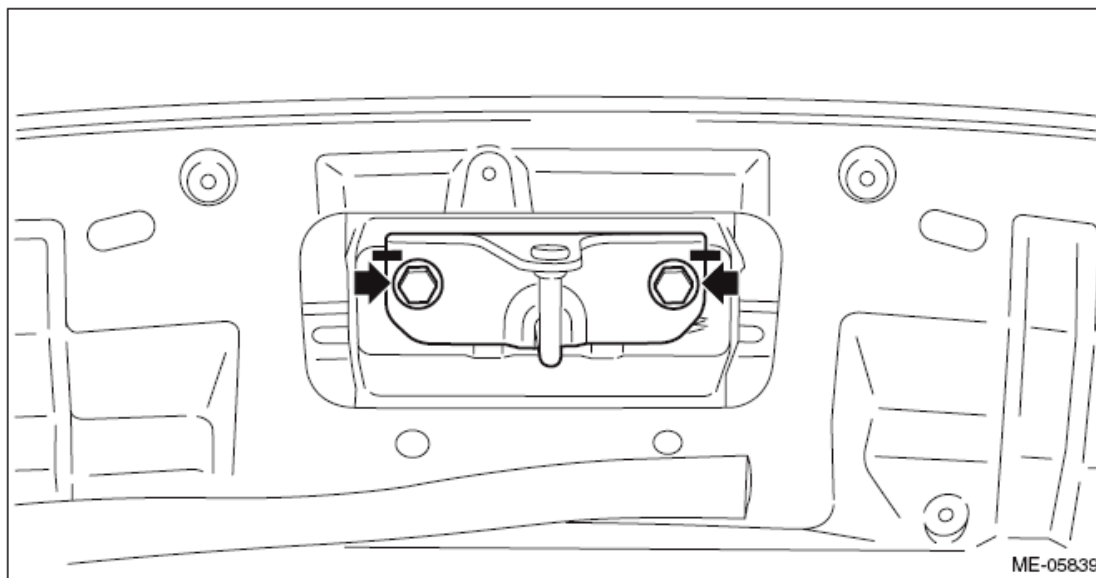


Fig. 78: Removing Front Hood Striker From Front Hood
Courtesy of SUBARU OF AMERICA, INC.

3. Change the front hood stay position from (A) to (B), and completely open the front hood.

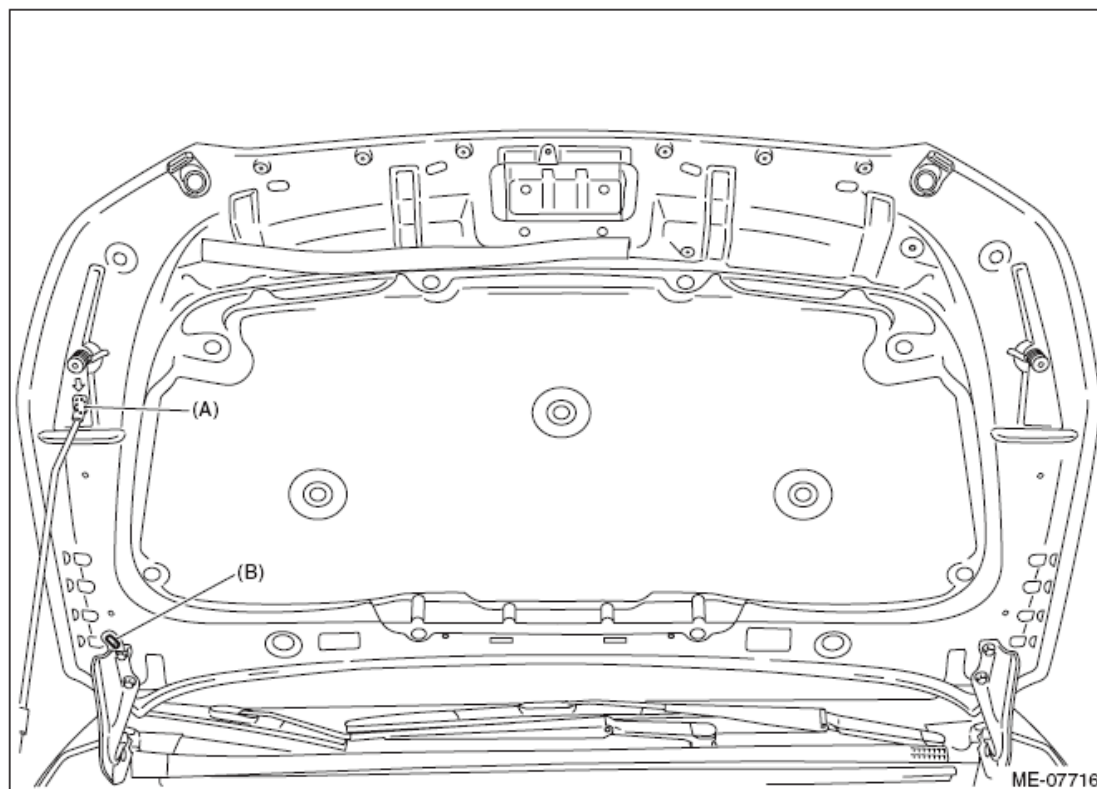


Fig. 79: Identifying Front Hood Stay Position
Courtesy of SUBARU OF AMERICA, INC.

4. Remove the V-belt covers.

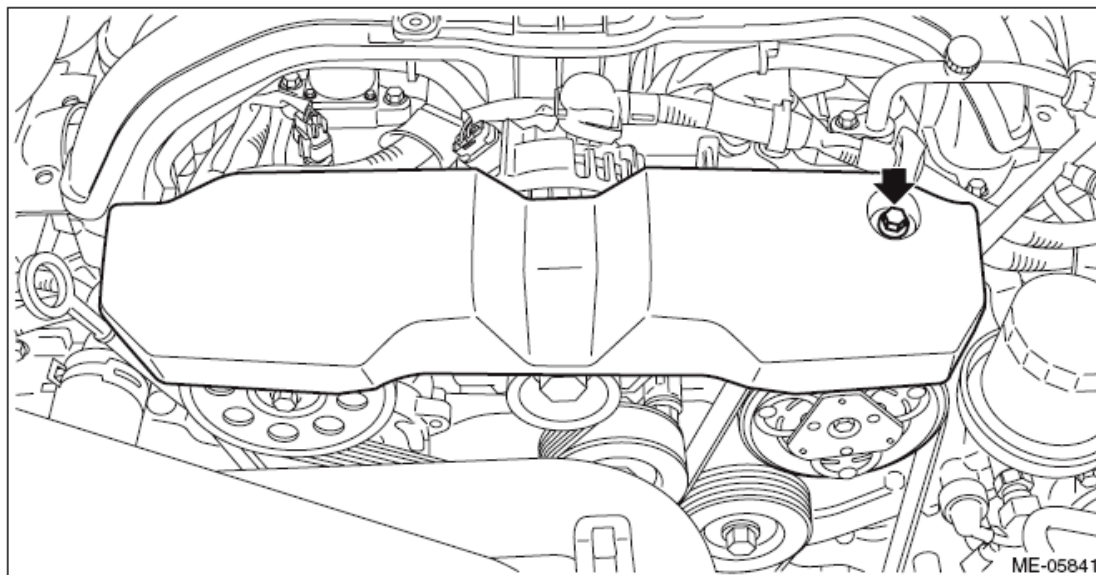


Fig. 80: Locating V-Belt Cover Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

5. Collect the refrigerant from A/C system. < Ref. to **REFRIGERANT RECOVERY PROCEDURE** .>
6. Release the fuel pressure. < Ref. to **RELEASING OF FUEL PRESSURE** , PROCEDURE, Fuel.>
7. Disconnect the ground cable from battery.

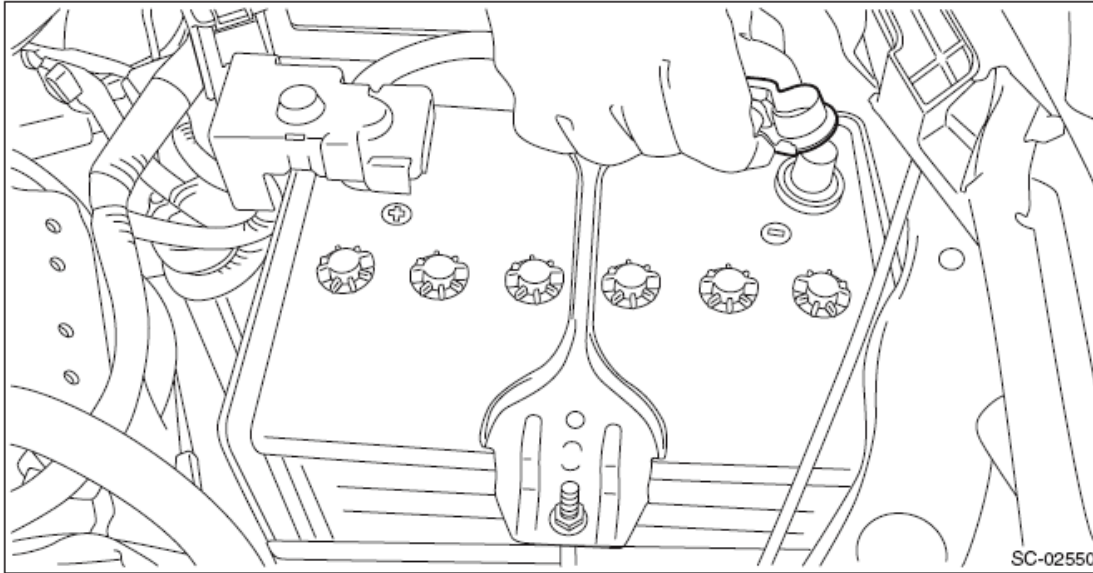


Fig. 81: Disconnecting Ground Cable From Battery
Courtesy of SUBARU OF AMERICA, INC.

8. Remove the air intake duct. < Ref. to **REMOVAL** , Air Intake Duct.>
9. Remove the air intake boot. < Ref. to **REMOVAL** , Air Intake Boot.>
10. Disconnect the connector from the mass air flow and intake air temperature sensor, and remove the clip (A) which holds the mass air flow and intake air temperature sensor harness.

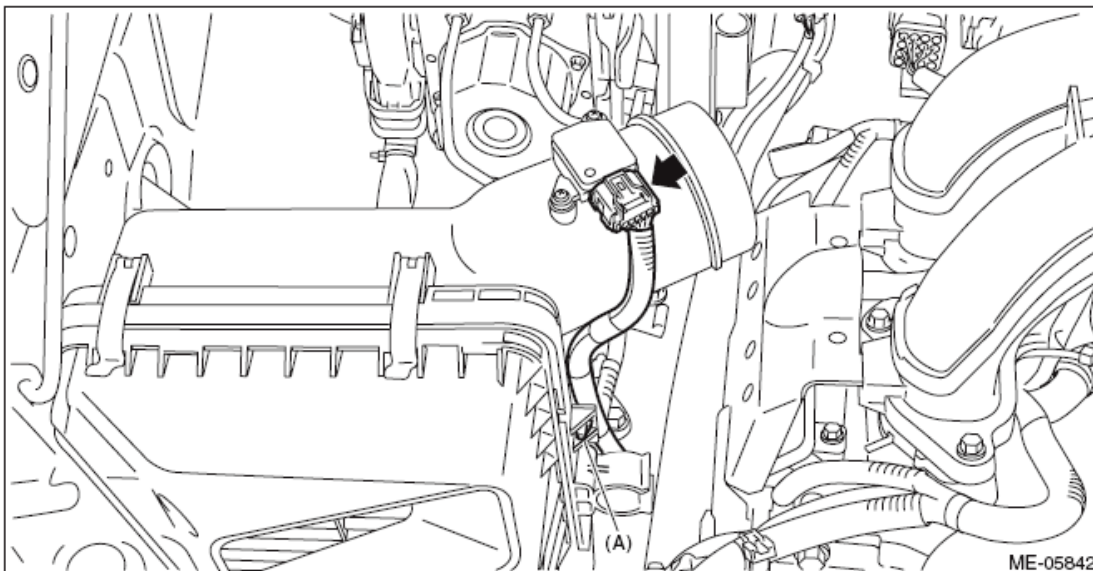


Fig. 82: Locating Mass Air Flow And Intake Air Temperature Sensor Connector
Courtesy of SUBARU OF AMERICA, INC.

11. Remove the air cleaner case (rear).

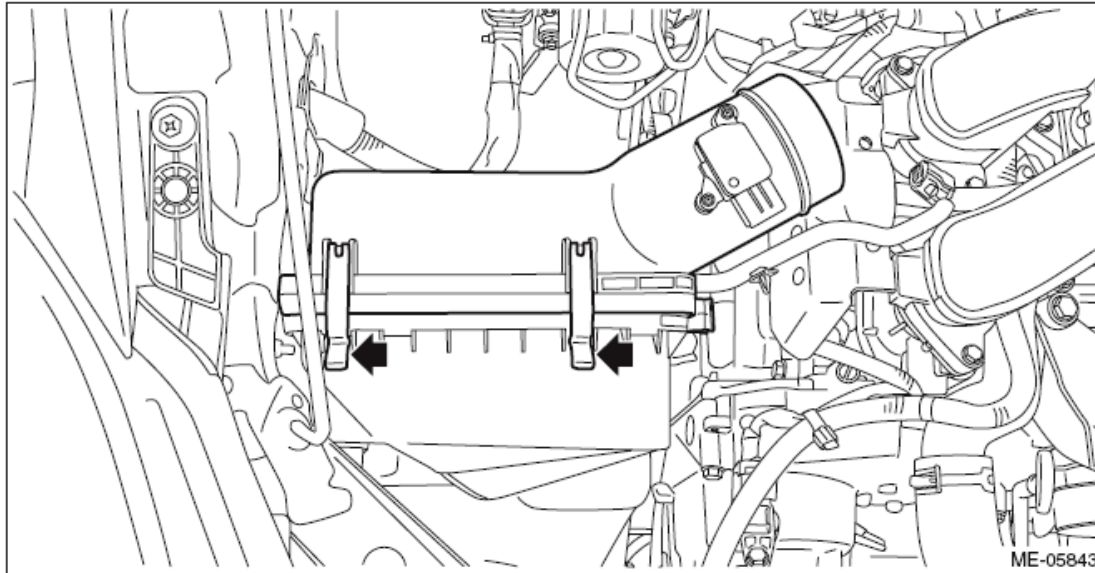


Fig. 83: Locating Air Cleaner Case (Rear)
Courtesy of SUBARU OF AMERICA, INC.

12. Remove the radiator. < Ref. to **REMOVAL** , Radiator.>
13. Disconnect the brake booster vacuum hose from the intake manifold.

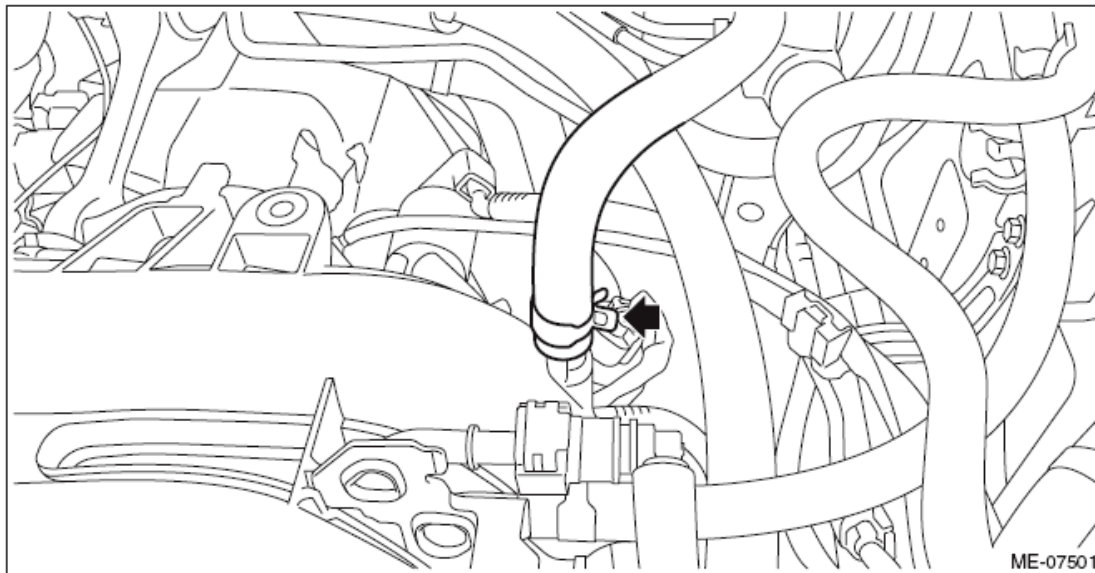


Fig. 84: Locating Brake Booster Vacuum Hose Clamp
Courtesy of SUBARU OF AMERICA, INC.

14. Remove the clip holding the air breather hose to the engine rear hanger. (MT model)

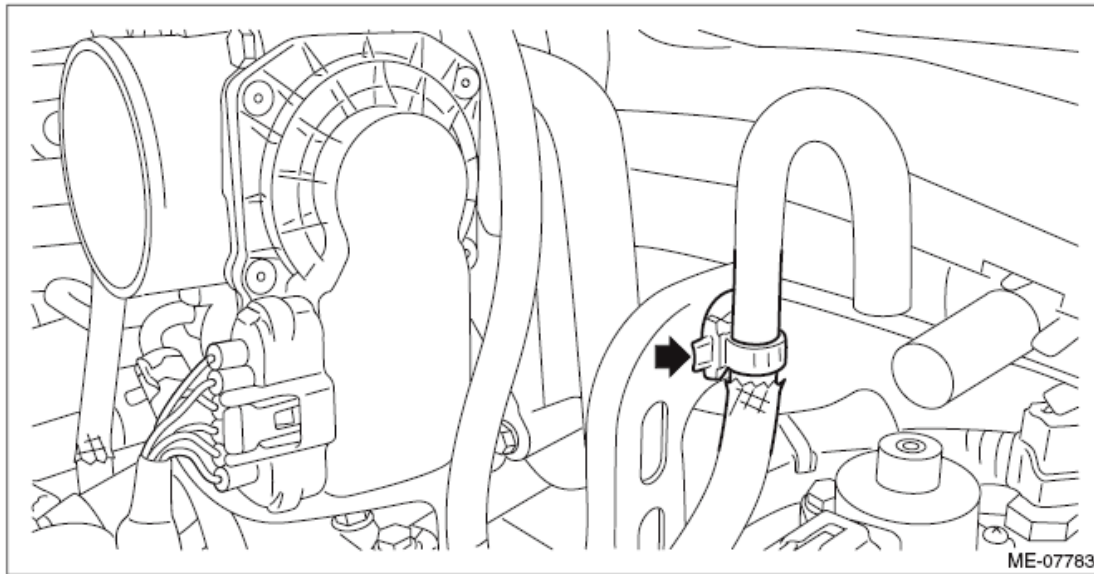


Fig. 85: Locating Air Breather Hose Clip
Courtesy of SUBARU OF AMERICA, INC.

15. Disconnect the engine harness connector.
 1. Remove the bolt securing the bulkhead harness connector bracket.

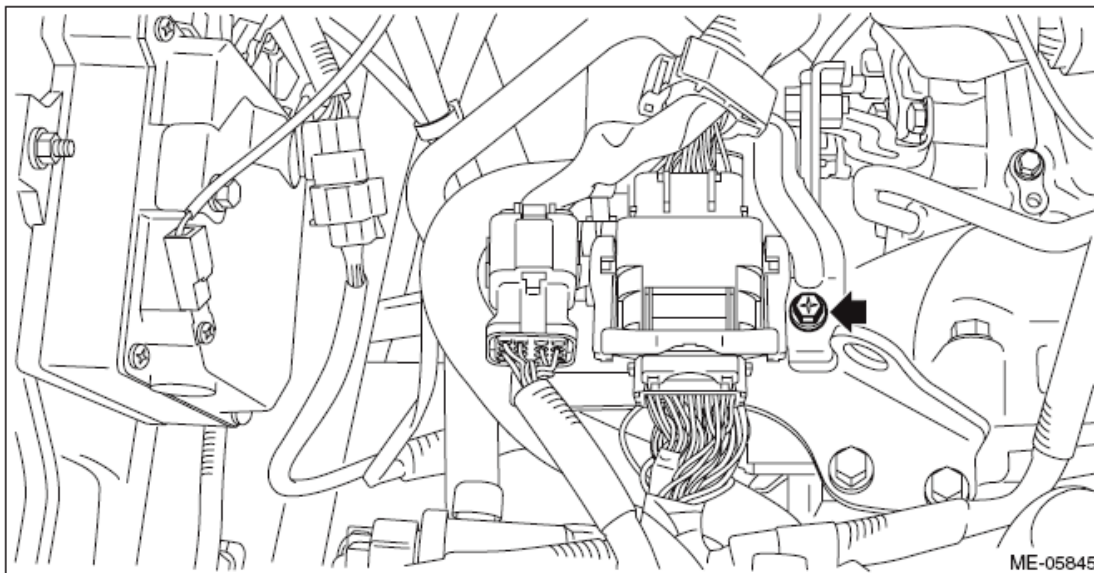


Fig. 86: Locating Bulkhead Harness Connector Bracket Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

2. Disconnect the bulkhead harness connector from the engine harness connector (black) and engine harness connector (brown).

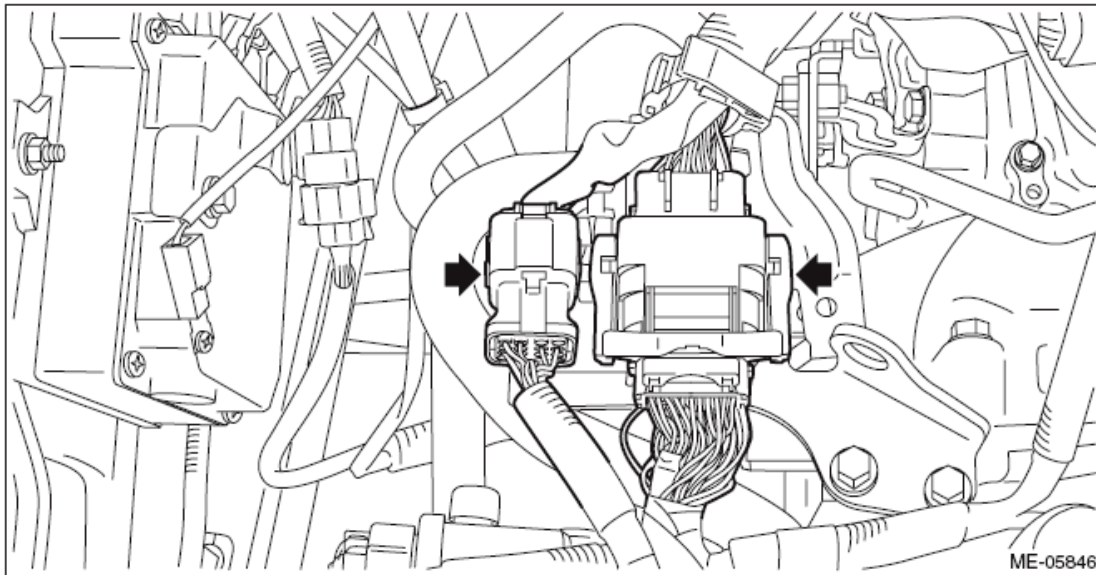


Fig. 87: Disconnecting Bulkhead Harness Connector
Courtesy of SUBARU OF AMERICA, INC.

16. Remove the bolts which secure the generator cord stay to the chain cover.

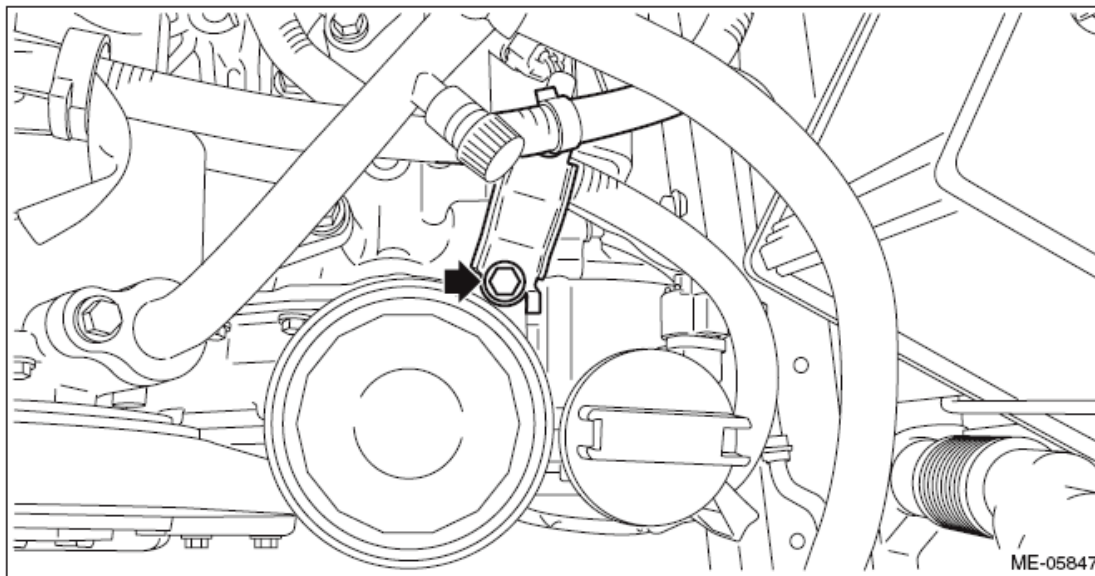


Fig. 88: Locating Generator Cord Stay To Chain Cover Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

17. Disconnect connector (A) and terminal (B) from the generator, and disconnect connector (C) from A/C compressor.
18. Remove the generator cord from the clip (D) and move the generator cord to the left side wheel apron.

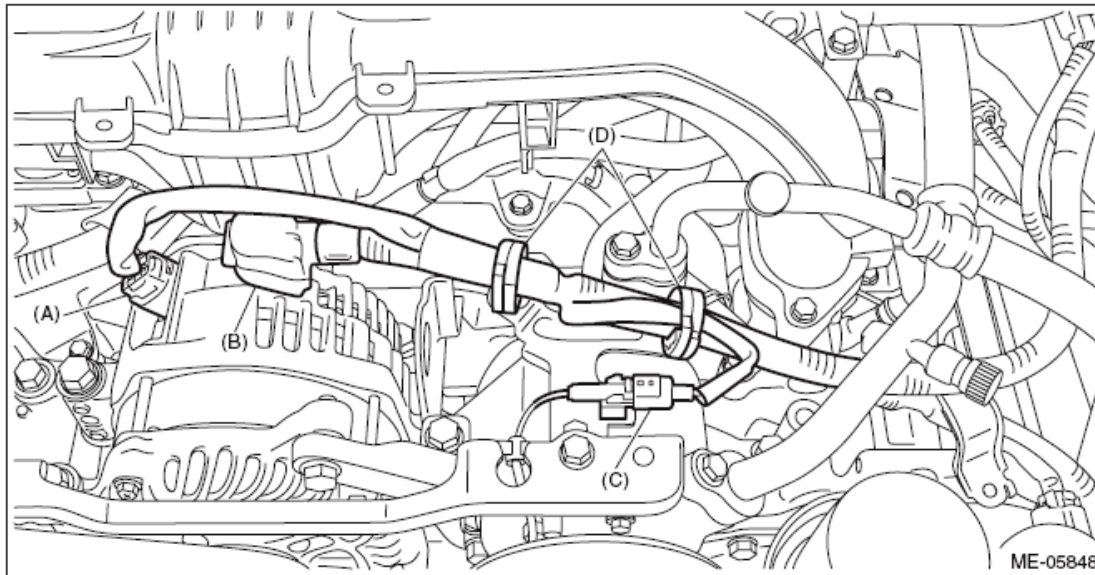


Fig. 89: Identifying Generator Cord Related Components
Courtesy of SUBARU OF AMERICA, INC.

19. Disconnect the following hoses.
 1. A/C pressure hose < Ref. to **REMOVAL** , Hose and Pipe.>
 2. Heater inlet hose and heater outlet hose

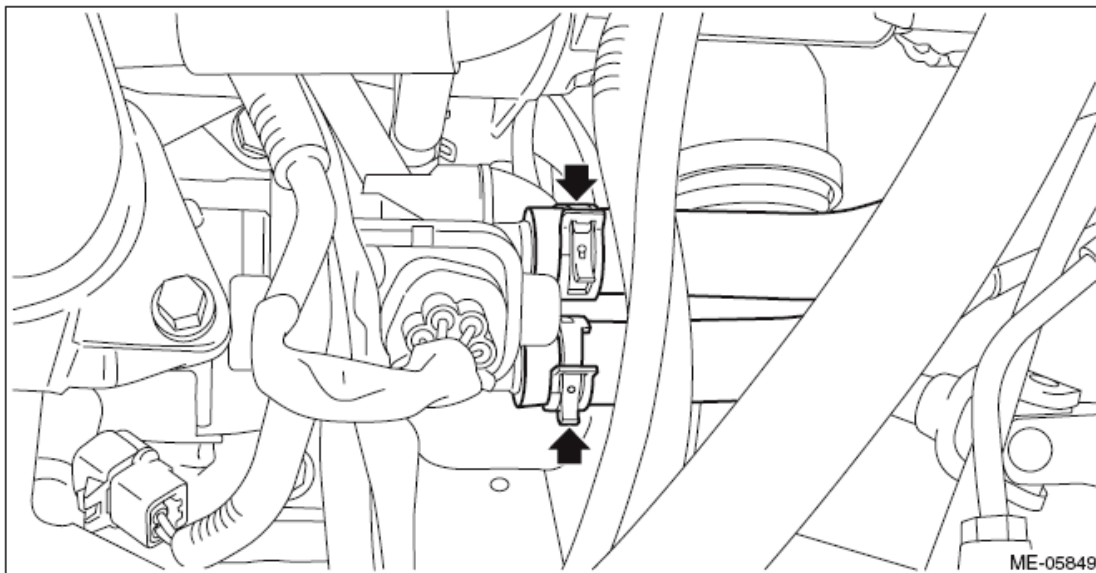


Fig. 90: Locating Heater Inlet And Outlet Hose Clamp
Courtesy of SUBARU OF AMERICA, INC.

20. Disconnect the water hose from CVTF cooler (with warmer feature). (CVT model)

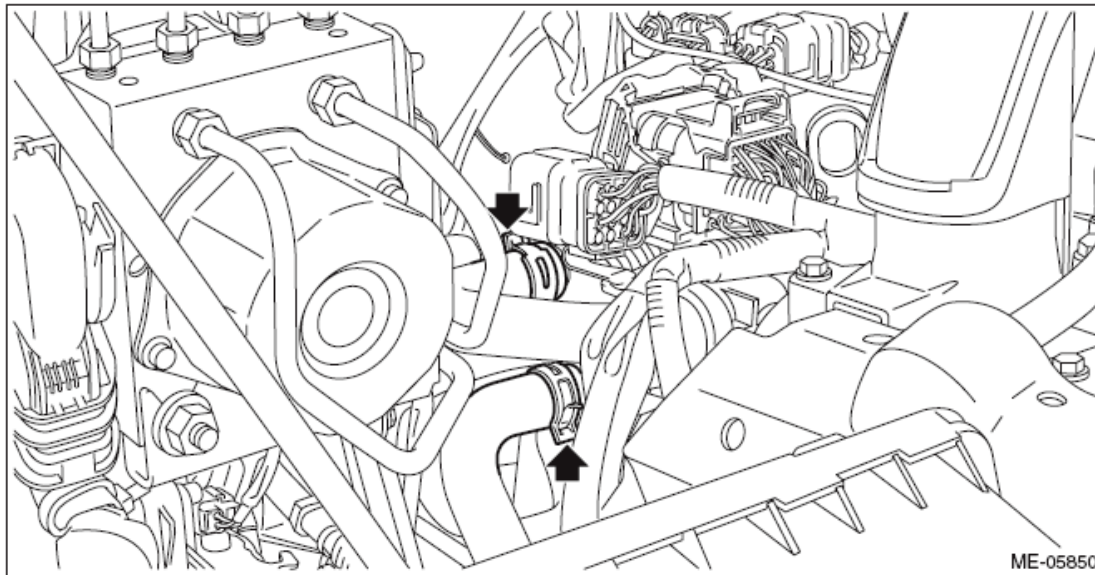


Fig. 91: Locating CVTF Cooler Water Hose Clamp
 Courtesy of SUBARU OF AMERICA, INC.

21. Remove the bolt which secures the CVTF cooler (with warmer feature) to the transmission, and move the CVTF cooler (with warmer feature) to the right side of the transmission. (CVT model)

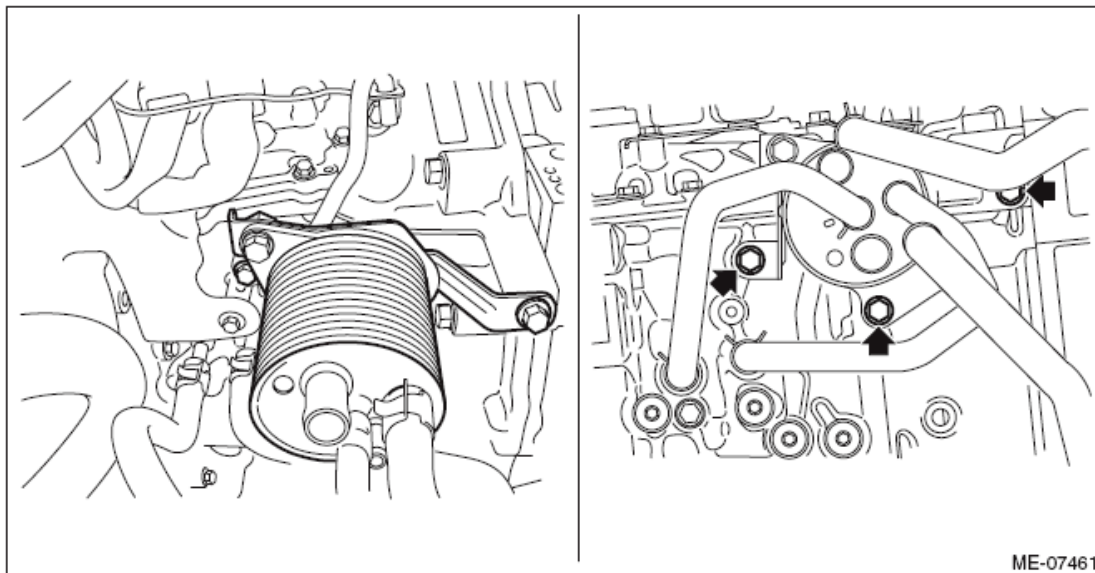


Fig. 92: Locating CVTF Cooler To Transmission Mounting Bolt
 Courtesy of SUBARU OF AMERICA, INC.

22. Lift up the vehicle.
23. Remove the front exhaust pipe. < Ref. to **REMOVAL** , Front Exhaust Pipe.>
24. Disconnect the ground cable on the engine side.

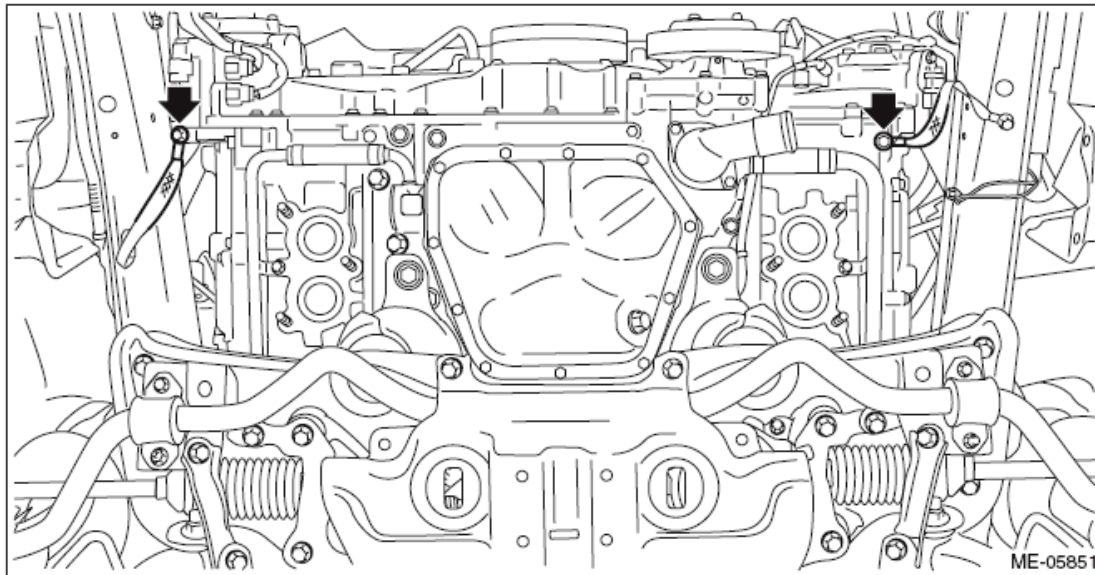


Fig. 93: Locating Ground Cable Mounting Bolt
 Courtesy of SUBARU OF AMERICA, INC.

25. Remove the bolts and nuts which hold the lower side of transmission to the engine.
 - CVT model

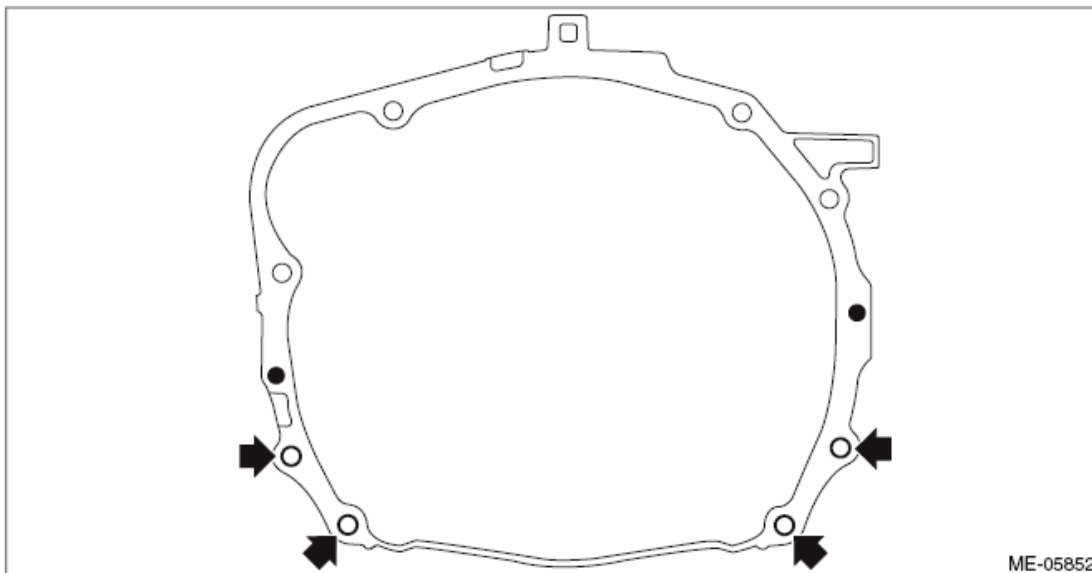


Fig. 94: Locating Transmission To Engine Mounting Bolts And Nuts (CVT Model)
 Courtesy of SUBARU OF AMERICA, INC.

- MT model

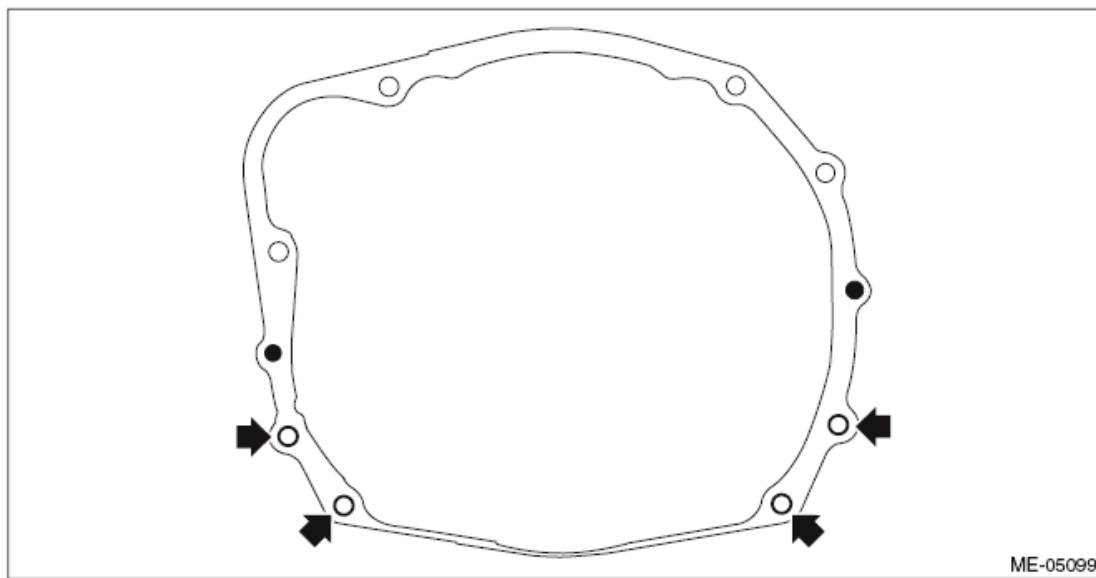


Fig. 95: Locating Transmission To Engine Mounting Bolts And Nuts (MT Model)
Courtesy of SUBARU OF AMERICA, INC.

26. Remove the nuts which secure the engine mounting to the front crossmember. (CVT model)

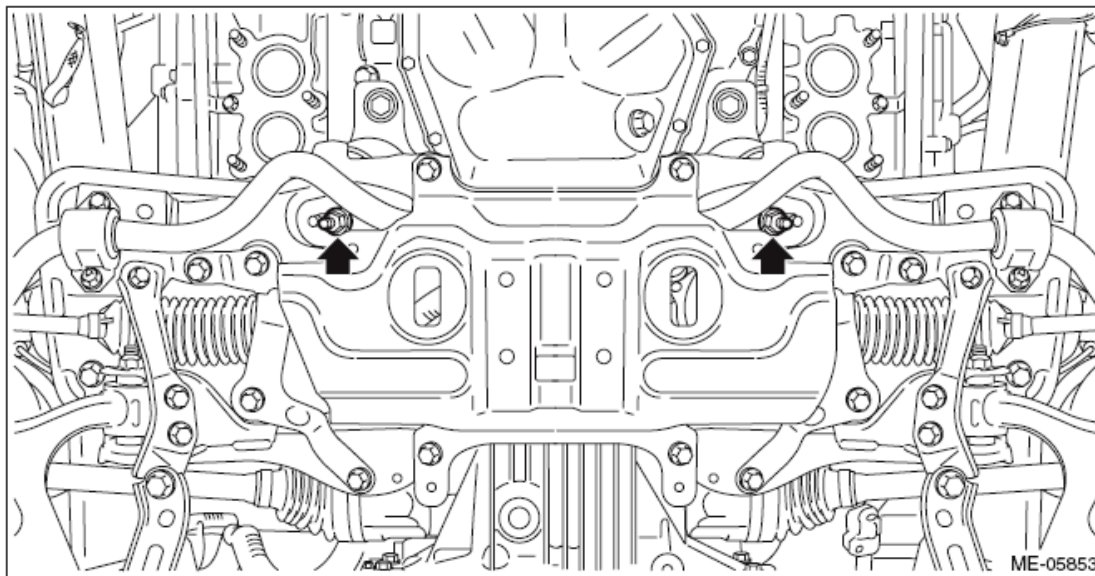


Fig. 96: Locating Engine Mounting To Front Crossmember Mounting Nut (CVT Model)
Courtesy of SUBARU OF AMERICA, INC.

27. Remove the nuts which secure the engine mounting to the front crossmember. (MT model)

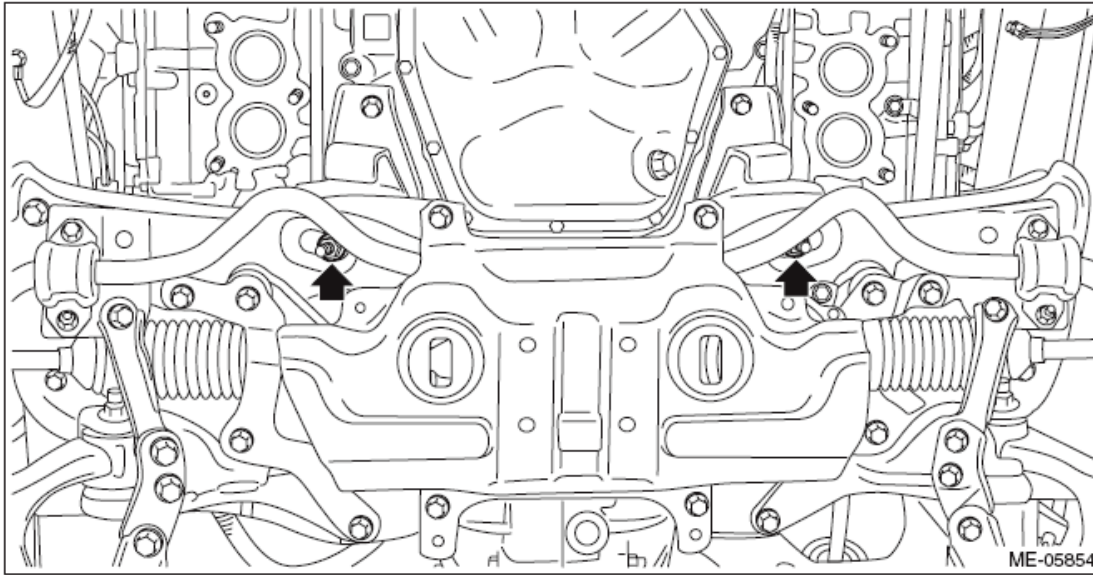


Fig. 97: Locating Engine Mounting To Front Crossmember Mounting Nut (MT Model)
Courtesy of SUBARU OF AMERICA, INC.

28. Separate the torque converter clutch from the drive plate. (CVT model)
1. Lower the vehicle.
 2. Remove the service hole plug.
 3. Insert the wrench into the crank pulley bolt and rotate the crank pulley to remove the bolts which hold torque converter clutch to drive plate.

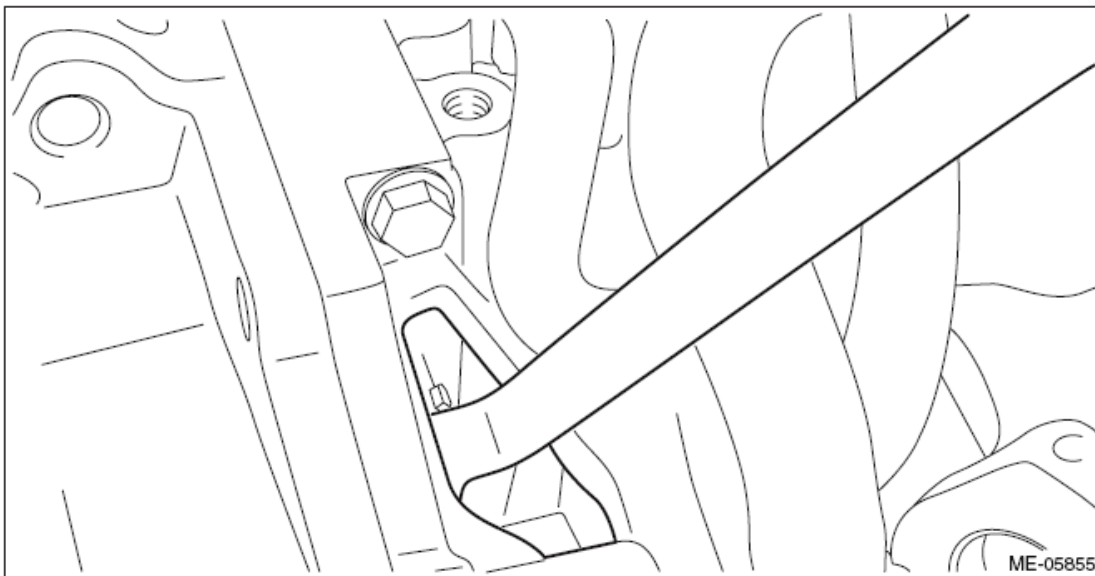


Fig. 98: Separating Torque Converter Clutch From Drive Plate Using Wrench
Courtesy of SUBARU OF AMERICA, INC.

29. Disconnect the bulkhead harness connector from the transmission harness connector (A) and the inhibitor

harness connector (B), and disconnect the transmission radio ground terminal (C) from the vehicle body. (CVT model)

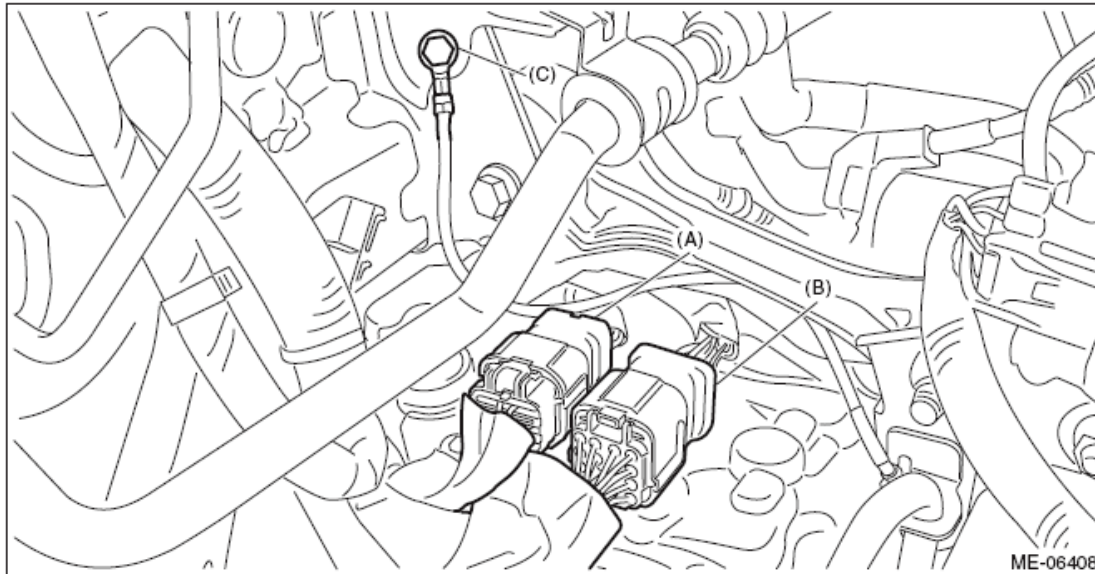


Fig. 99: Identifying Transmission, Inhibitor Harness Connector And Ground Terminal
Courtesy of SUBARU OF AMERICA, INC.

30. Remove the pitching stopper.

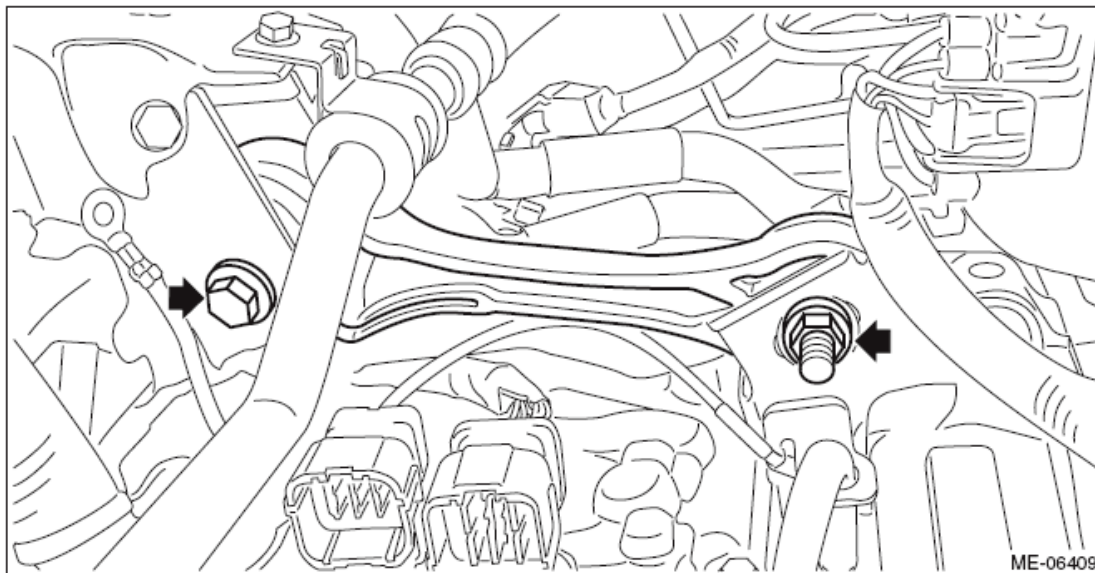


Fig. 100: Locating Pitching Stopper Mounting Bolt And Nut
Courtesy of SUBARU OF AMERICA, INC.

31. Remove the transmission case cover. (CVT model)

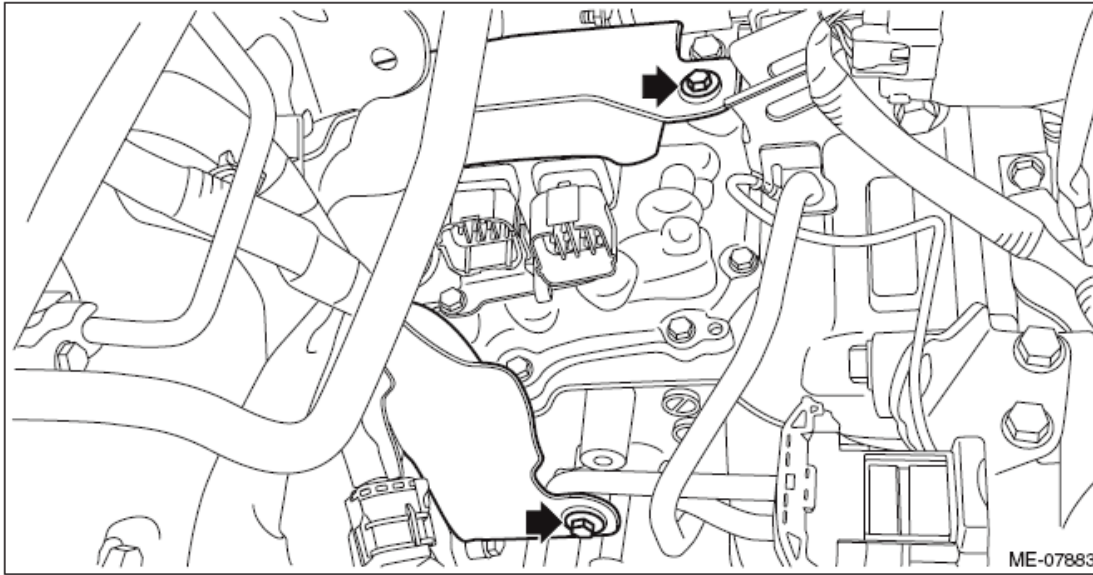


Fig. 101: Locating Transmission Case Cover Mounting Bolt (CVT Models)
Courtesy of SUBARU OF AMERICA, INC.

32. Remove the bolt which holds the transmission harness stay. (CVT model)

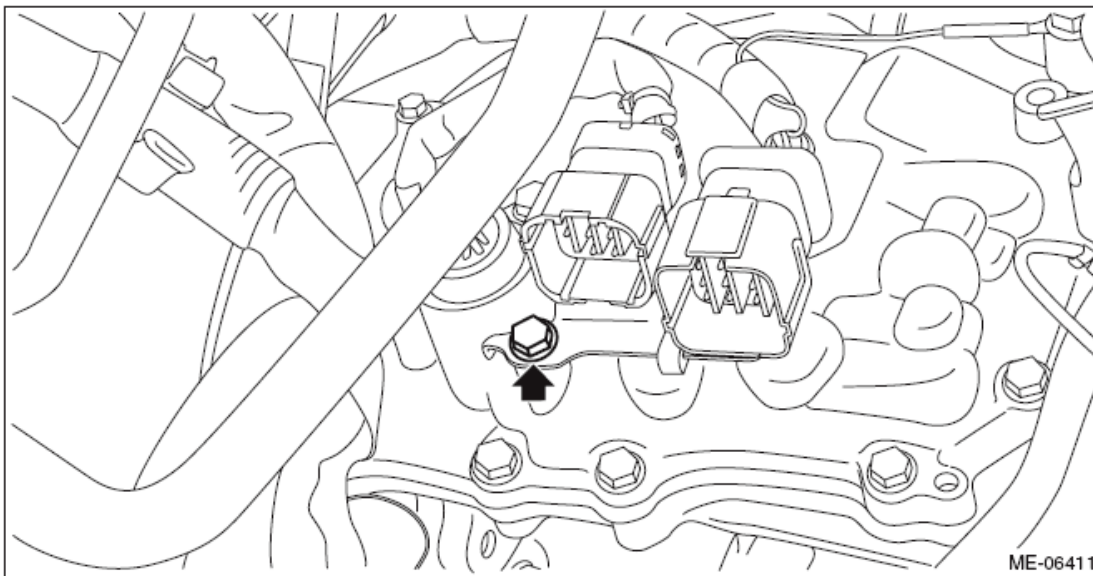


Fig. 102: Locating Transmission Harness Stay Mounting Bolt (CVT Model)
Courtesy of SUBARU OF AMERICA, INC.

33. Remove the bolt which holds the transmission harness to the control valve body, and turn the transmission harness clockwise till the bolt hole can be seen as shown in the figure, and tighten the bolt to temporary lock the harness. (CVT model)

NOTE: This procedure is required to prevent the transmission harness from

touching the vehicle body during engine removal/installation.

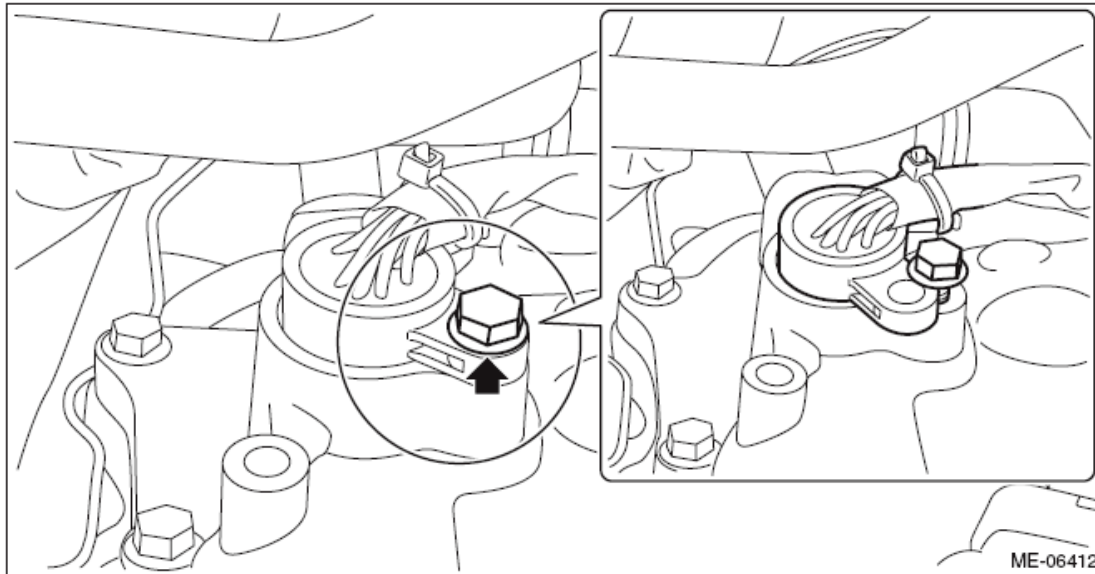


Fig. 103: Locating Transmission Harness To Control Valve Body
Courtesy of SUBARU OF AMERICA, INC.

34. Disconnect the fuel delivery tube and evaporation hose.


CAUTION:

- **Be careful not to spill fuel.**
- **Catch the fuel from the tubes using a container or cloth.**

1. Disconnect the quick connector on the fuel delivery tube from the fuel pipe assembly, and remove the clip (A) securing the fuel delivery tube.

NOTE:

Disconnect the quick connector as shown in the figure.

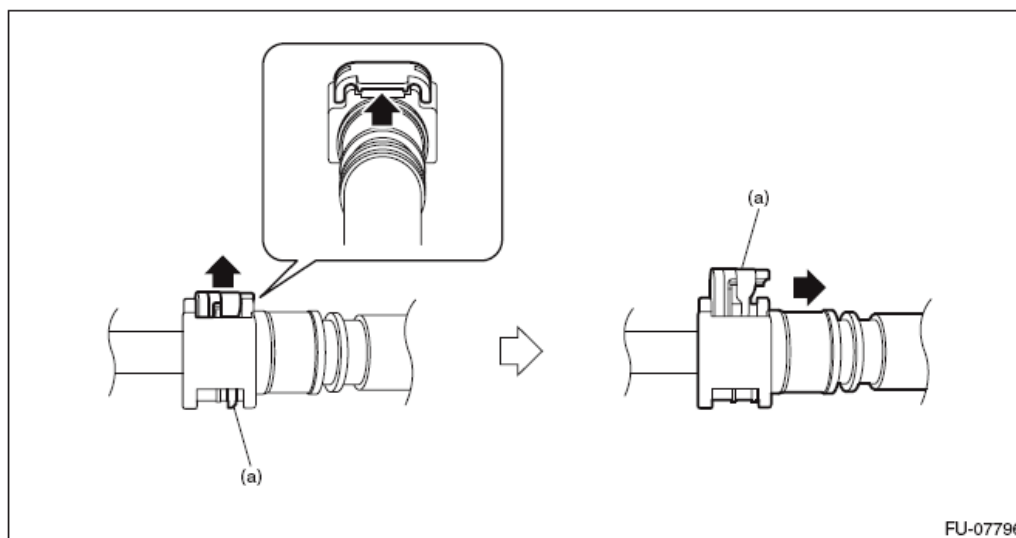

(a) Slider

Fig. 104: Disconnecting Quick Connector
Courtesy of SUBARU OF AMERICA, INC.

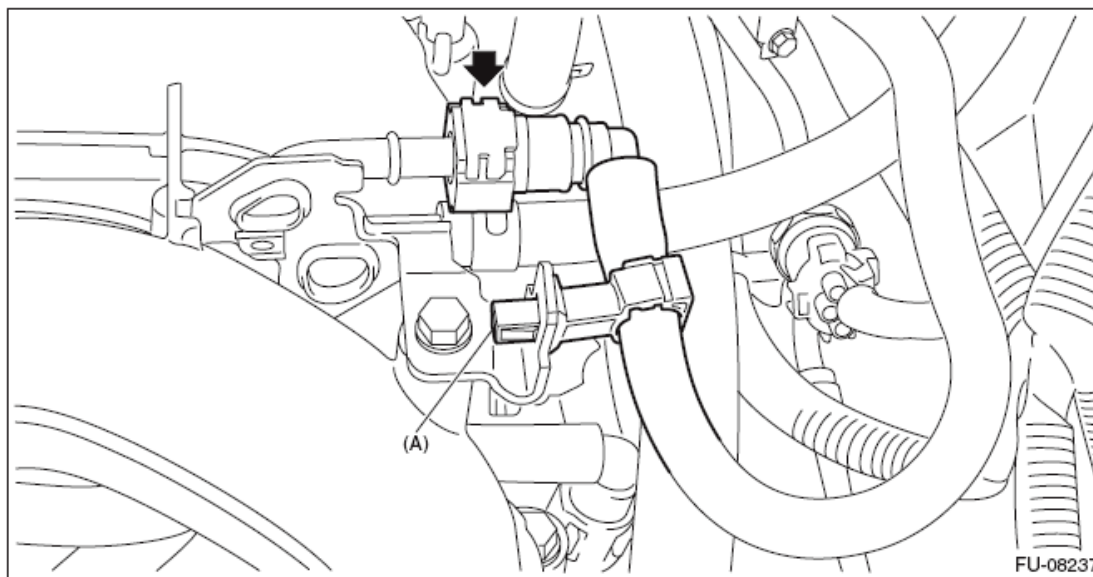


Fig. 105: Locating Quick Connector Slider
Courtesy of SUBARU OF AMERICA, INC.

2. Disconnect the evaporation hose from the fuel pipe assembly.

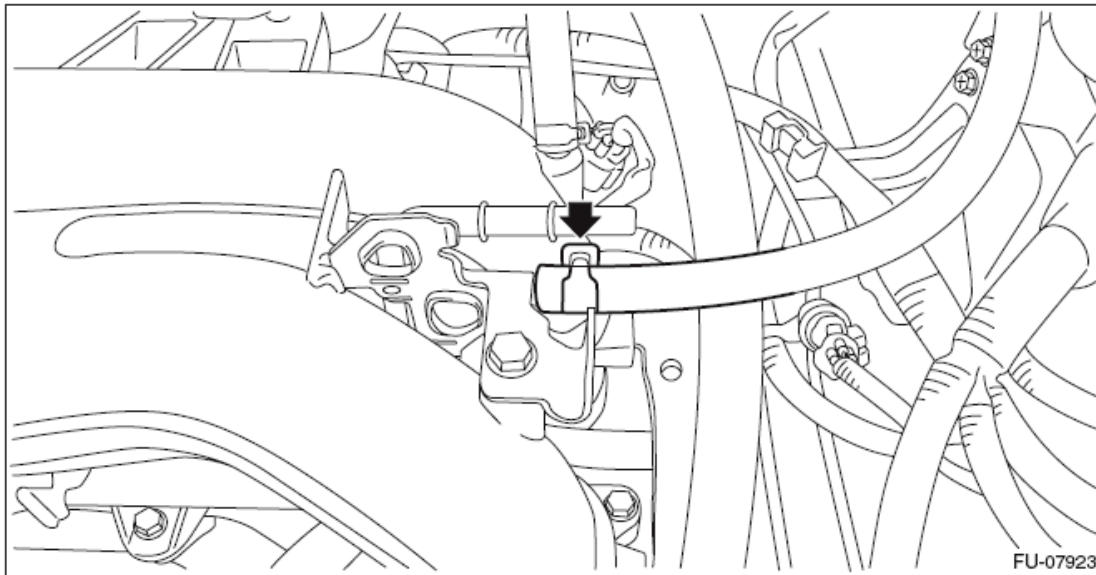


Fig. 106: Locating Fuel Pipe Assembly
Courtesy of SUBARU OF AMERICA, INC.

35. Support the engine with a lifting device and wire ropes.


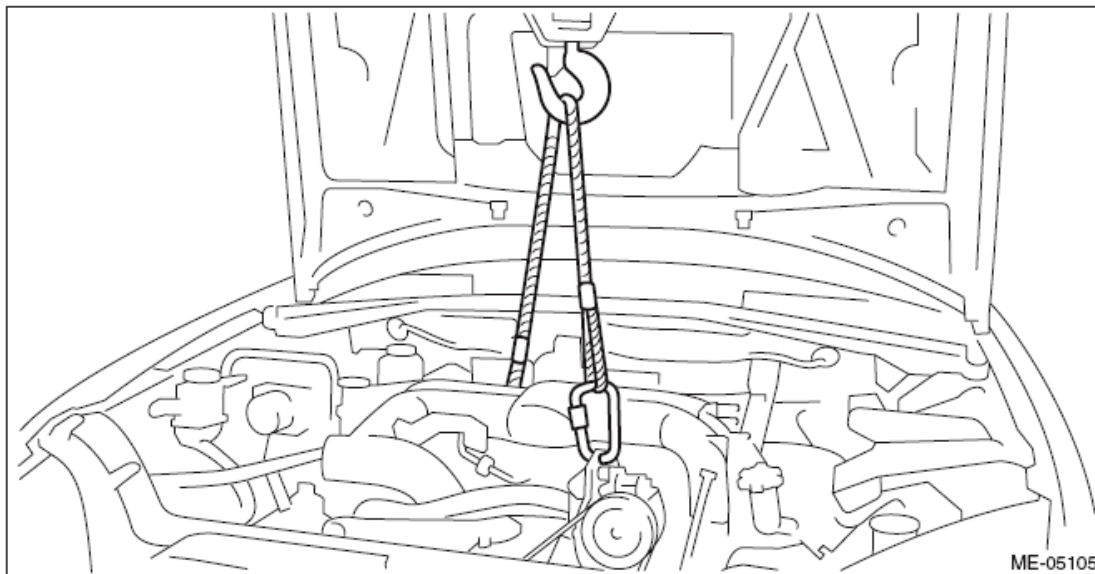


Fig. 107: Supporting Engine Using Lifting Device And Wire Ropes
Courtesy of SUBARU OF AMERICA, INC.

36. Support the transmission with a garage jack.

CAUTION: Be sure to perform this procedure to prevent the transmission from lowering by its own weight.

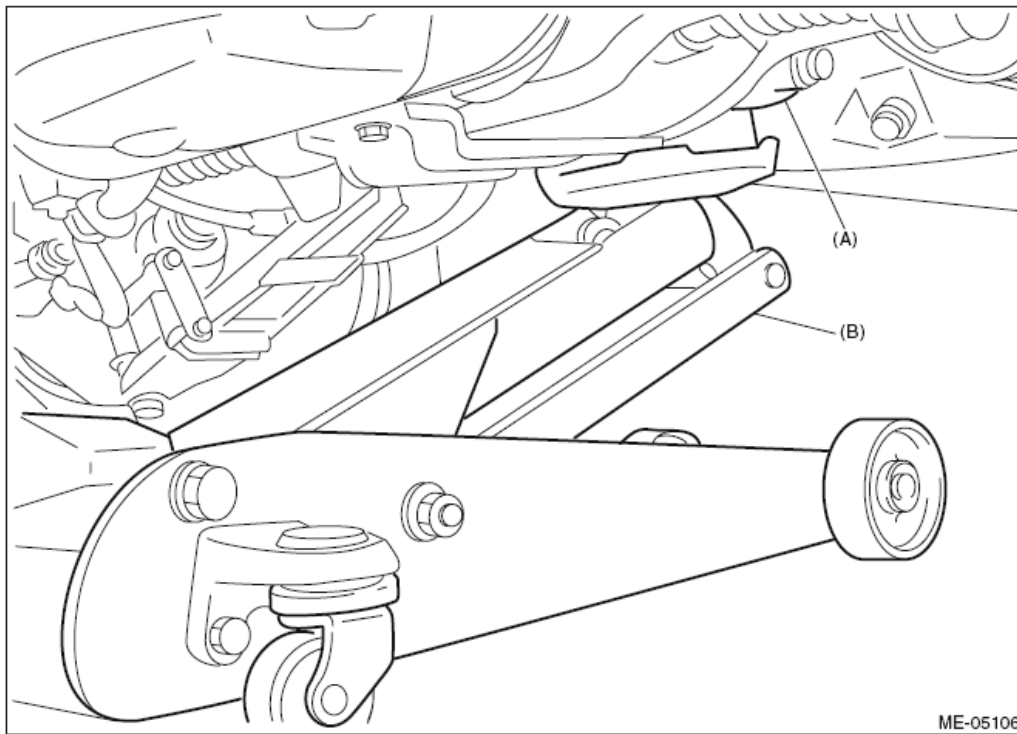

(A) Transmission

(B) Garage jack

Fig. 108: Supporting Transmission Using Garage Jack
Courtesy of SUBARU OF AMERICA, INC.

37. Separate the engine and transmission.

CAUTION: Before removing the engine away from transmission, check to be sure no work has been overlooked.

1. Remove the starter. < Ref. to **REMOVAL** , Starter.>
2. Attach the ST to the torque converter clutch case. (CVT model)

ST 498277200 STOPPER SET

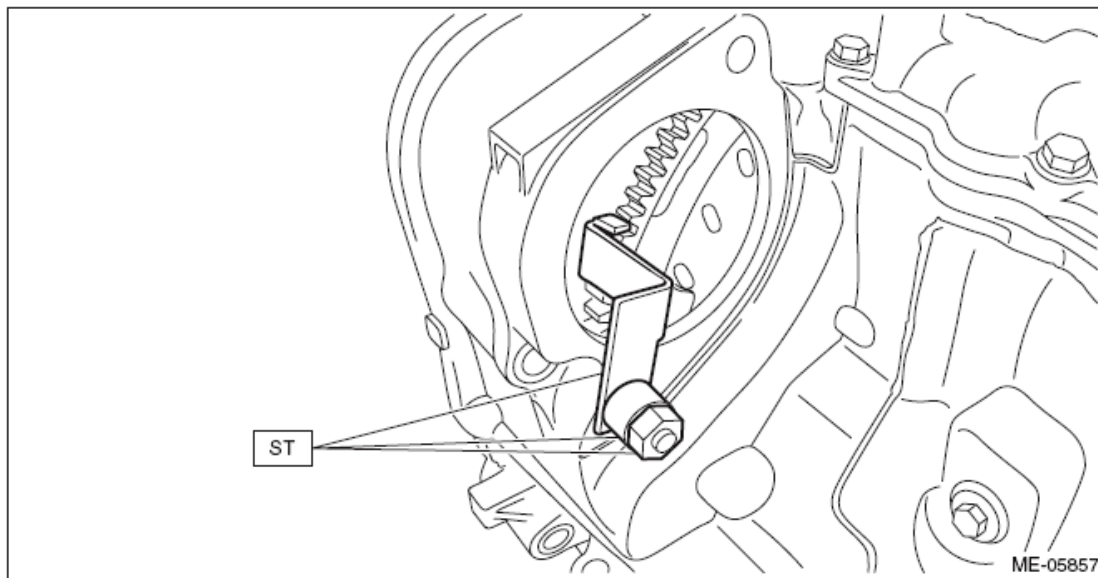


Fig. 109: Attaching Stopper Set To Torque Converter Clutch Case (CVT Model)
Courtesy of SUBARU OF AMERICA, INC.

3. Remove the bolts which hold the upper side of the transmission to the engine.
 - CVT model

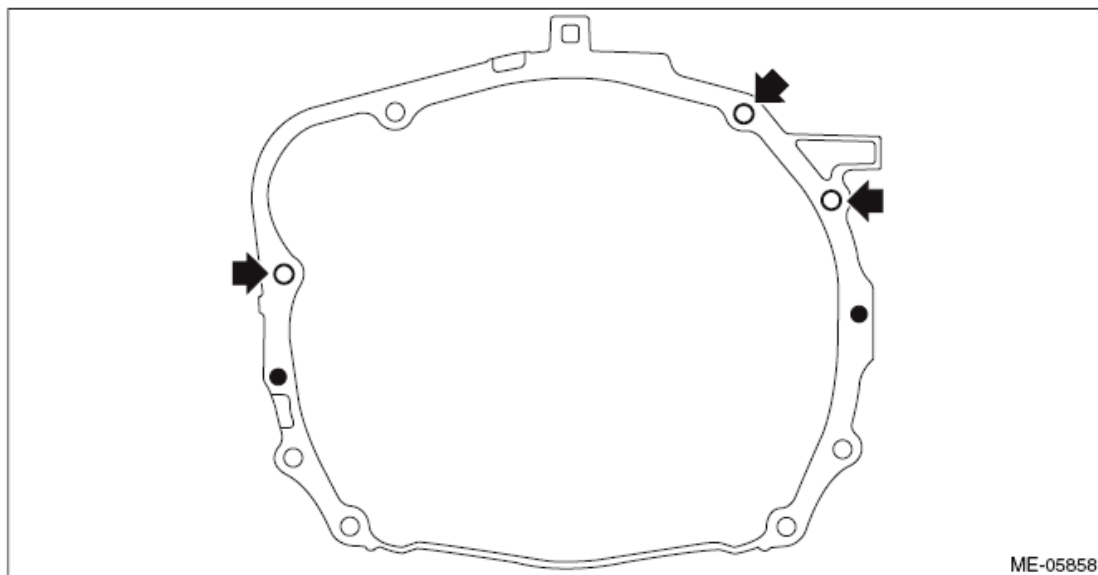


Fig. 110: Locating Upper Side Transmission To Engine Mounting Nut (CVT Model)
Courtesy of SUBARU OF AMERICA, INC.

- MT model

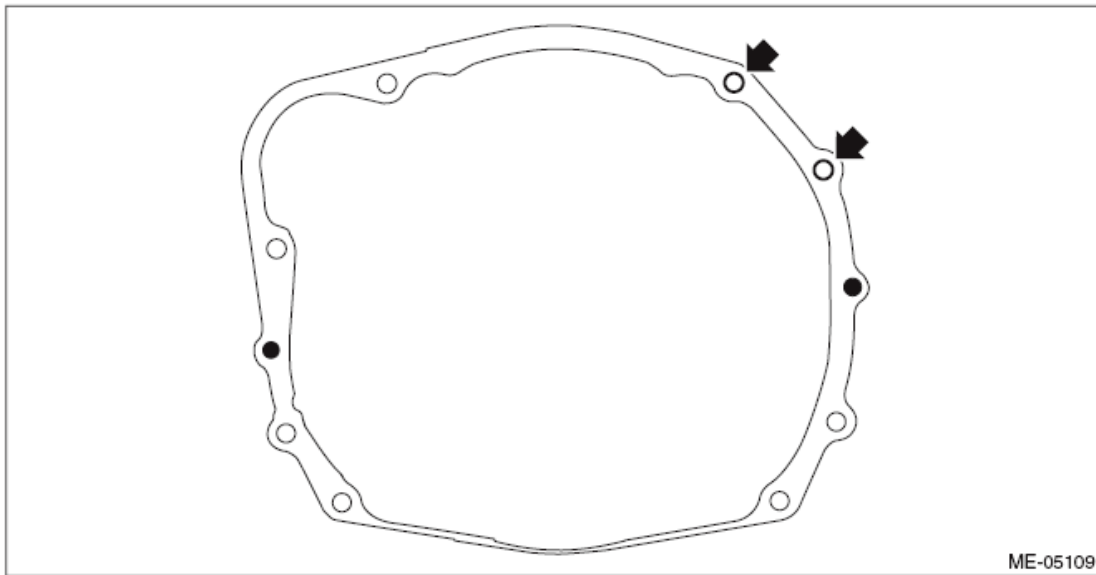


Fig. 111: Locating Upper Side Transmission To Engine Mounting Nut (MT Model)
Courtesy of SUBARU OF AMERICA, INC.

38. Remove the engine from the vehicle.

NOTE: Be careful not to damage adjacent parts or body panels with crank pulley, oil level gauge, etc.

1. Slightly raise the engine.
2. Raise the transmission with garage jack.
3. Move the engine horizontally until main shaft is withdrawn from clutch cover. (MT model)
4. Slowly move the engine away from engine compartment.

39. Remove the engine mounting from the engine.

HEV MODEL

1. Turn the ignition switch to OFF.
2. Open the front hood, and make alignment marks (A) on both the front hood and the front hood striker by using a marker pen.

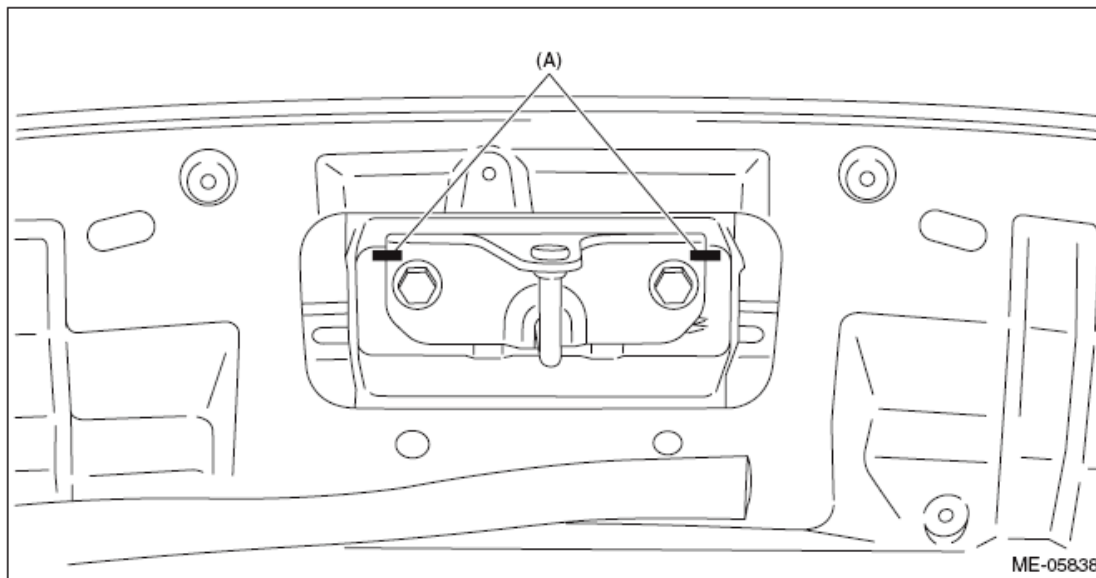


Fig. 112: Identifying Front Hood And Striker Alignment Marks
Courtesy of SUBARU OF AMERICA, INC.

3. Remove the front hood striker from the front hood.

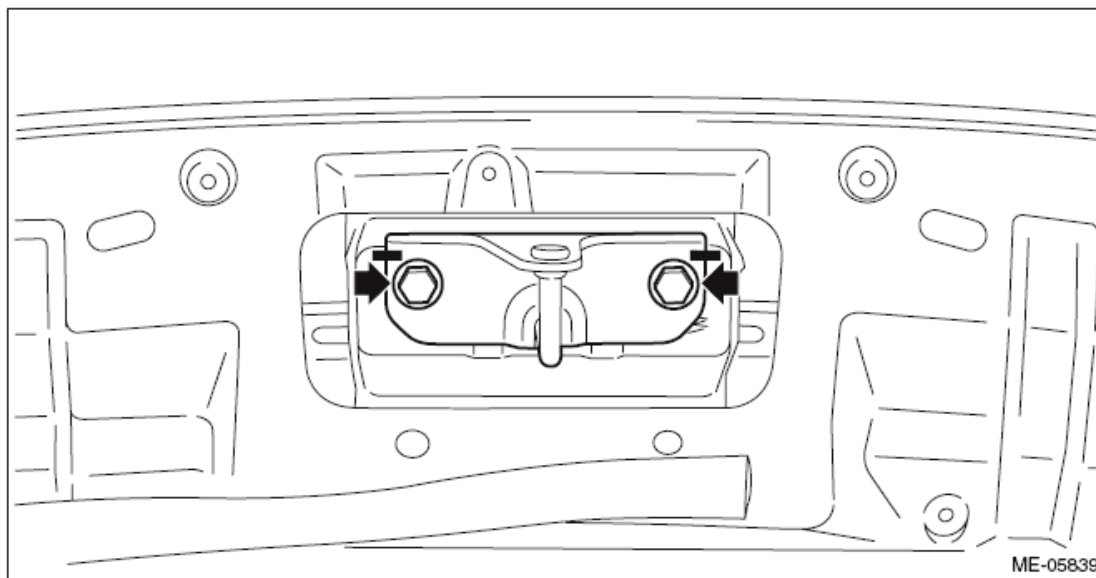


Fig. 113: Locating Front Hood Striker Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

4. Change the front hood stay position from (A) to (B), and completely open the front hood.

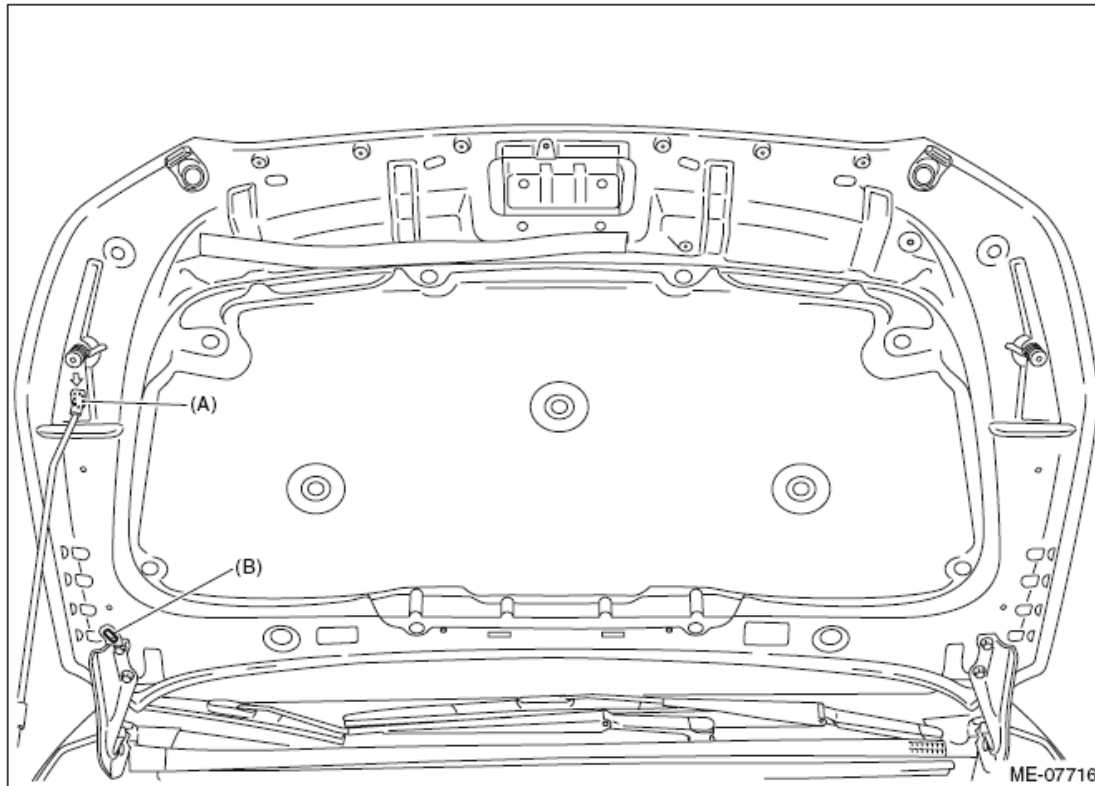


Fig. 114: Identifying Front Hood Stay Position
Courtesy of SUBARU OF AMERICA, INC.

5. Remove the collector cover.
 1. Pull up the two points at the front of collector cover (A).
 2. Pull up the two points at the rear of collector cover (B) while moving them rearward.

NOTE: Be careful not to contact the fuel delivery tube when moving the collector cover rearward.

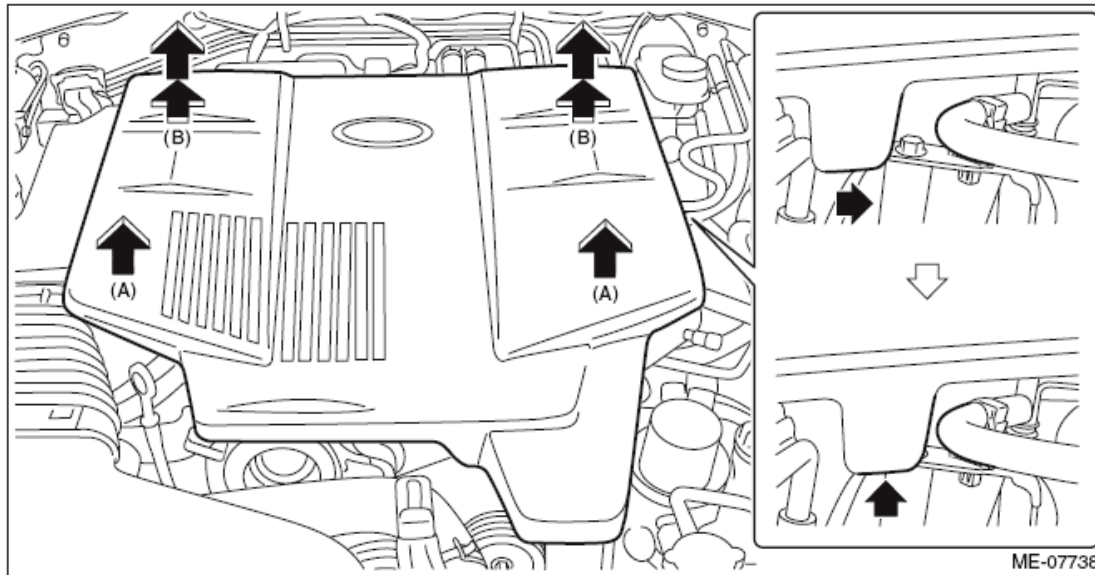


Fig. 115: Removing Collector Cover (HEV Model)

Courtesy of SUBARU OF AMERICA, INC.

6. Collect the refrigerant from A/C system. < Ref. to **REFRIGERANT RECOVERY PROCEDURE** .>
7. Release the fuel pressure. < Ref. to **RELEASING OF FUEL PRESSURE** , PROCEDURE, Fuel.>
8. Disconnect the ground cable from battery. < Ref. to **BATTERY** , NOTE, Note.>

NOTE: For the 12 volt engine restart battery, disconnect the ground terminal from 12V engine restart battery sensor.

9. Remove the air intake duct. < Ref. to **REMOVAL** , Air Intake Duct.>
10. Remove the air cleaner case. < Ref. to **REMOVAL** , Air Cleaner Case.>
11. Remove the radiator. < Ref. to **REMOVAL** , Radiator.>
12. Disconnect the bulkhead harness connector from the engine harness connector (black), then remove the engine harness connector (black) from the bracket.

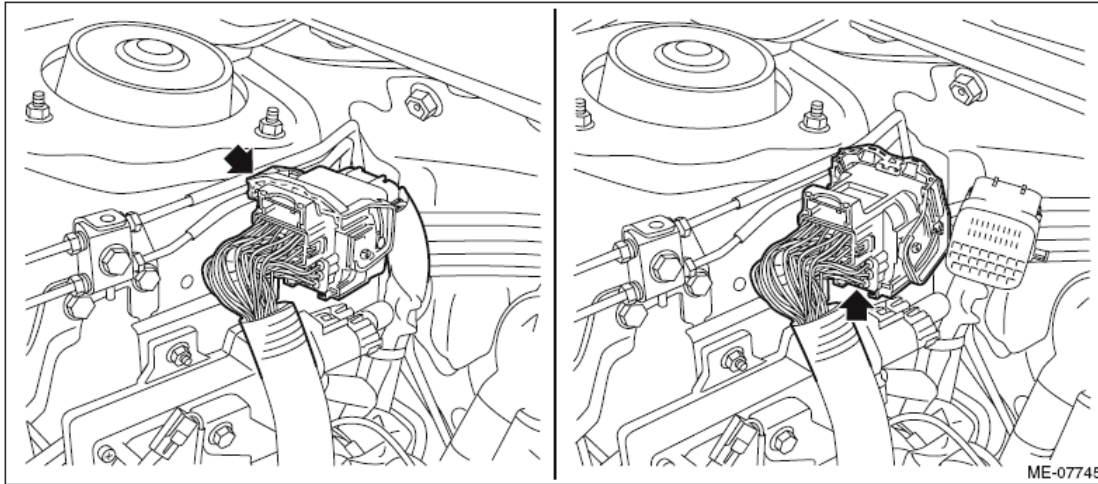


Fig. 116: Locating Bulkhead Harness Connector
Courtesy of SUBARU OF AMERICA, INC.

13. Disconnect the connector (A) from the brake vacuum pump, and disconnect the connector (B) from the A/C compressor.
14. Remove the clip (C) and the clip (D) securing the harness to the battery cable assembly, and move the harness to the left side wheel apron.


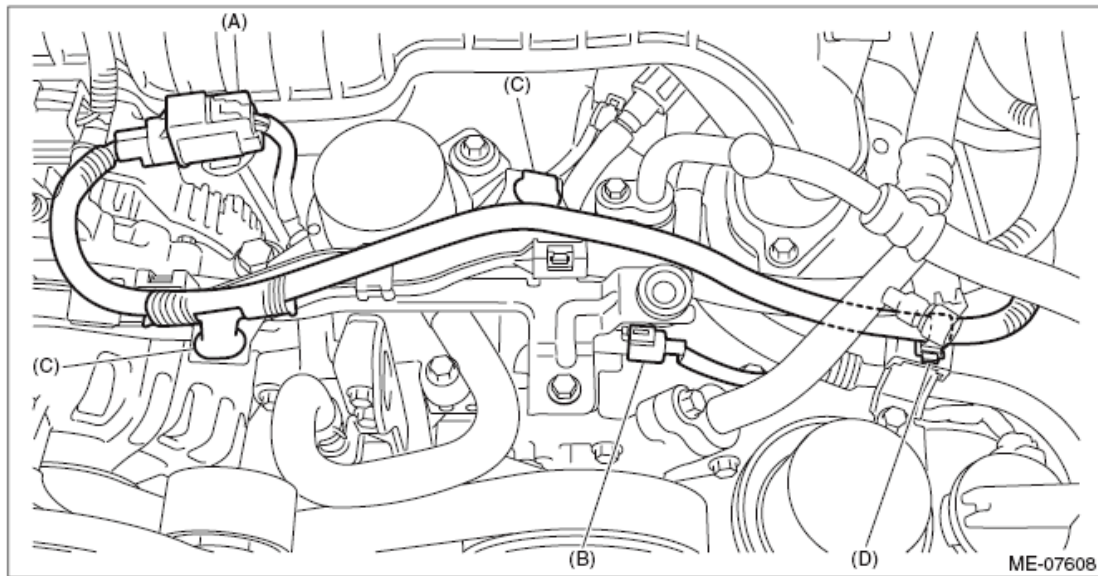


Fig. 117: Identifying Battery Cable Assembly Components
Courtesy of SUBARU OF AMERICA, INC.


15. Remove the terminal boot from the positive terminal of the 12 volt auxiliary battery.
16. Remove the nuts fastening the battery cable assembly to the slow blow fuse (12 volt auxiliary battery), and remove the battery cable assembly from the main fuse box.

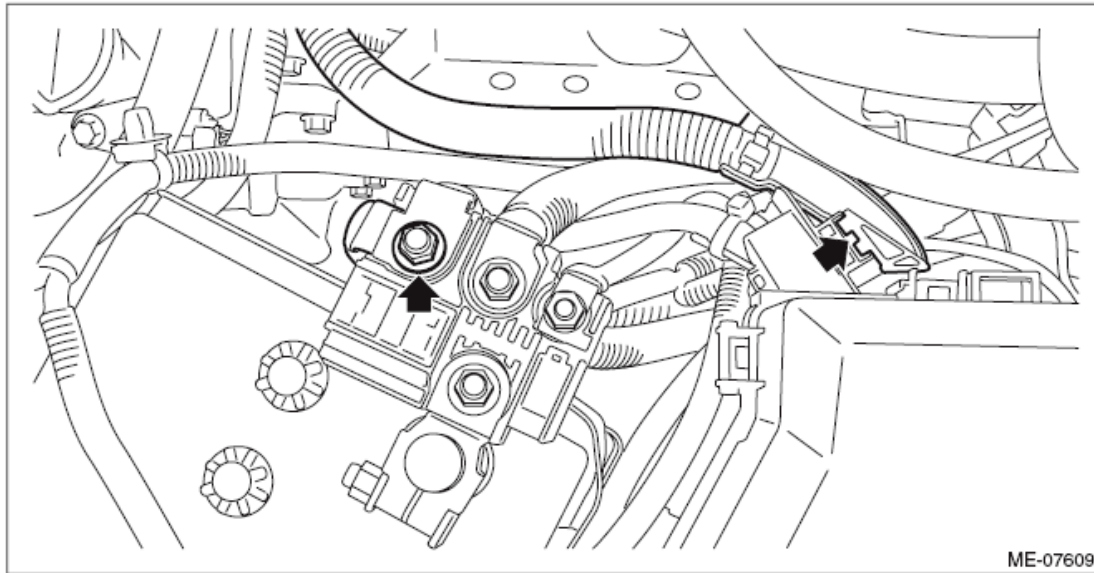

ME-07609

Fig. 118: Locating Battery Cable Assembly To Slow Blow Fuse Mounting Bolt
 Courtesy of SUBARU OF AMERICA, INC.

17. Remove the bolt (A) securing the battery cable stay to the chain cover, and remove the clip (B) securing the battery cable assembly to the collector cover bracket.

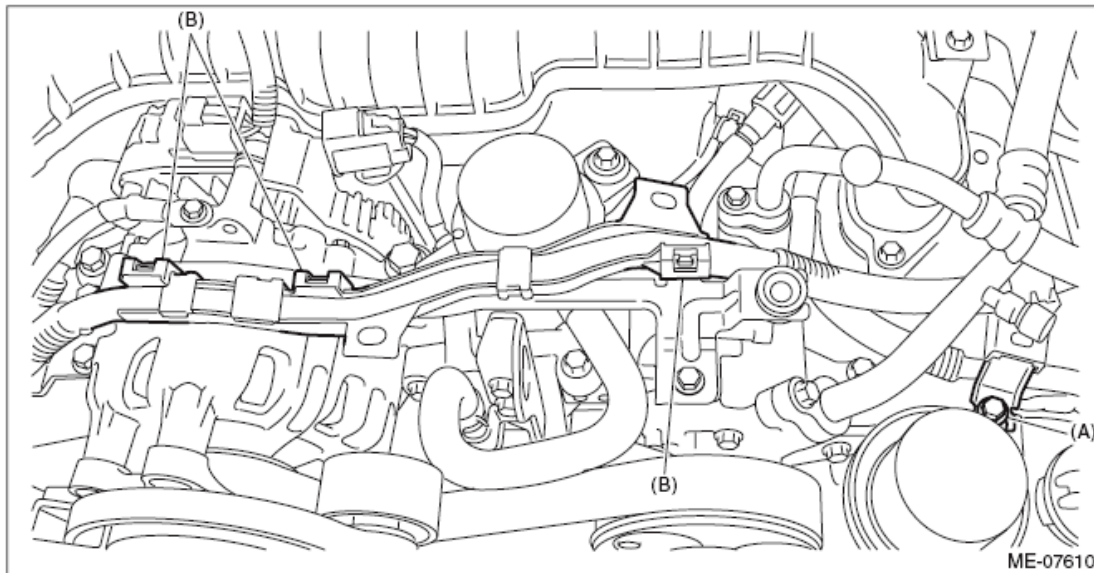

ME-07610

Fig. 119: Identifying Battery Cable Assembly To Collector Cover Bracket Mounting Bolt And Clip
 Courtesy of SUBARU OF AMERICA, INC.

18. Disconnect the terminal (A) and the terminal (B) from ISG.
19. Remove the clip (C) securing the battery cable assembly to the battery cable bracket No. 1, and move the battery cable assembly to the right side wheel apron.

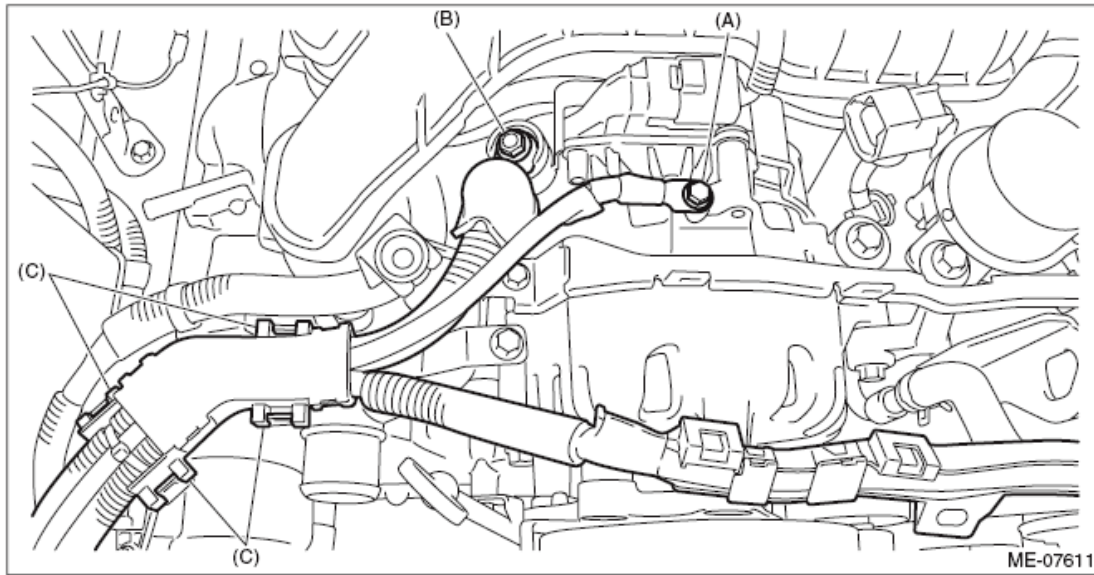


Fig. 120: Identifying Battery Cable Terminals And Clip
Courtesy of SUBARU OF AMERICA, INC.

20. Disconnect the A/C pressure hoses from A/C compressor. < Ref. to **REMOVAL** , Hose and Pipe.>
21. Disconnect the heater inlet hose (A) from the water pipe assembly, and disconnect the heater outlet hose (B) from the water pipe LH.
22. Disconnect the brake booster vacuum hose (C) from the brake vacuum pipe.

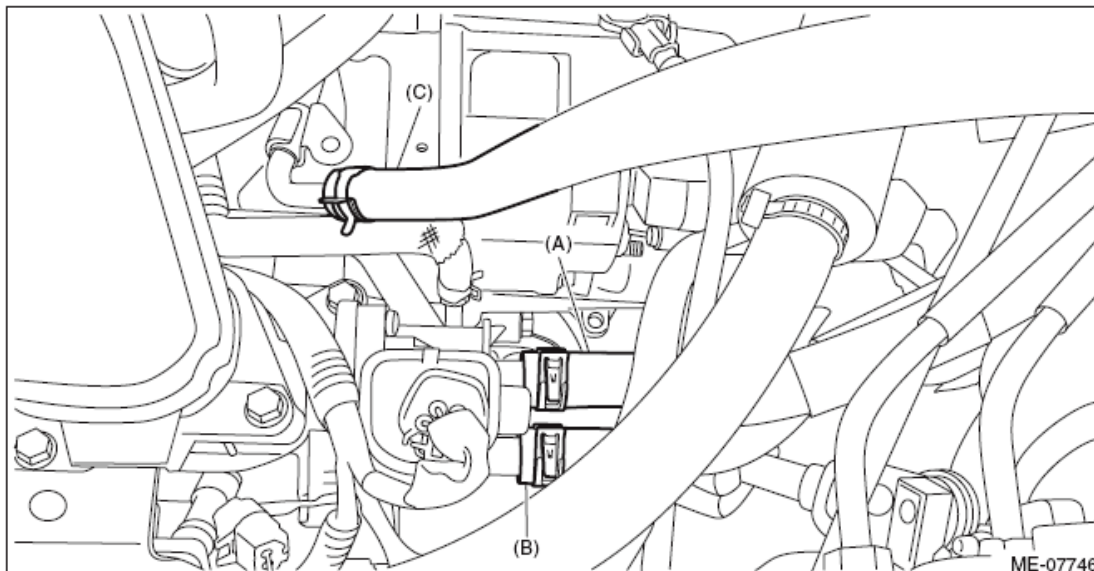


Fig. 121: Identifying Brake Booster Vacuum, Heater Inlet And Outlet Hose
Courtesy of SUBARU OF AMERICA, INC.

23. Lift up the vehicle.
24. Remove the front exhaust pipe. < Ref. to **REMOVAL** , Front Exhaust Pipe.>

25. Disconnect the ground cable on the engine side.

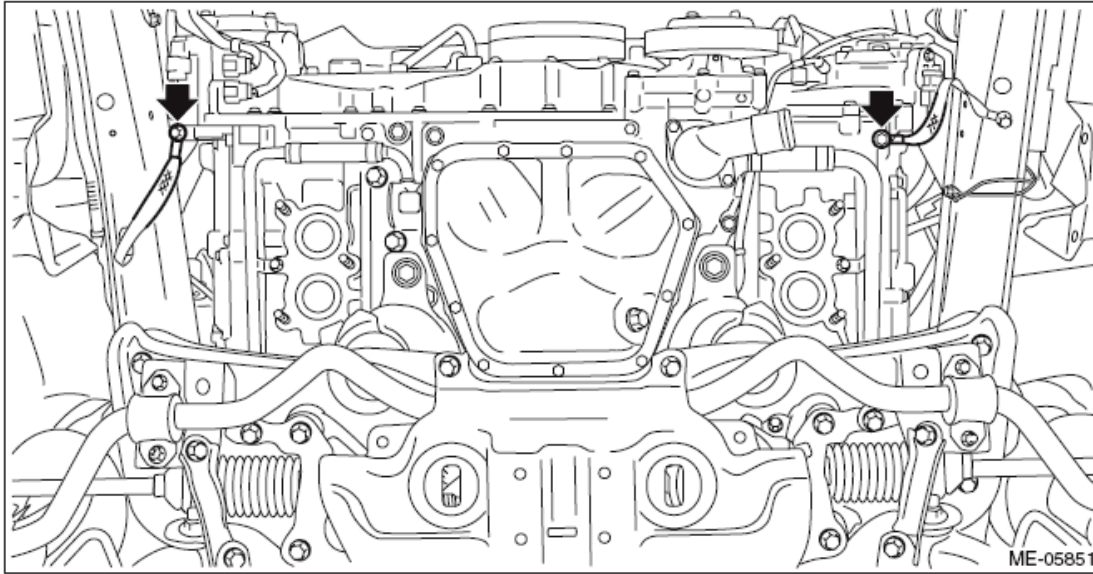


Fig. 122: Locating Ground Cable
Courtesy of SUBARU OF AMERICA, INC.

26. Remove the bolts and nuts which hold the lower side of transmission to the engine.

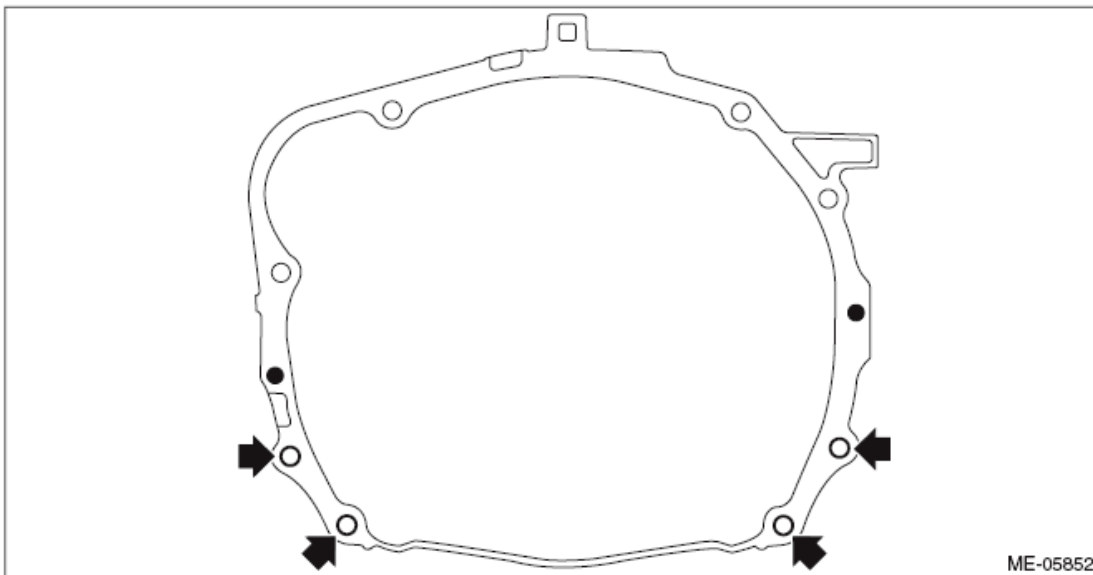


Fig. 123: Locating Lower Side Transmission To Engine Mounting Bolts And Nuts
Courtesy of SUBARU OF AMERICA, INC.

27. Remove the nuts which secure the engine mounting to the front crossmember.

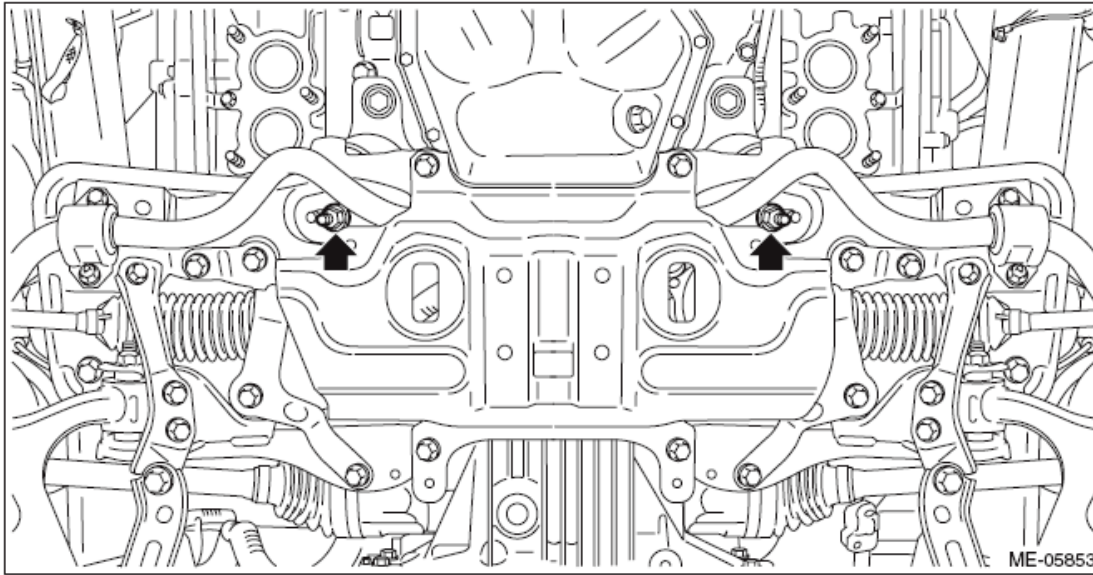


Fig. 124: Locating Engine Mounting To Front Crossmember Mounting Nut
 Courtesy of SUBARU OF AMERICA, INC.

28. Lower the vehicle.
29. Disconnect the transmission radio ground terminal (A) from the vehicle, and remove the pitching stopper.

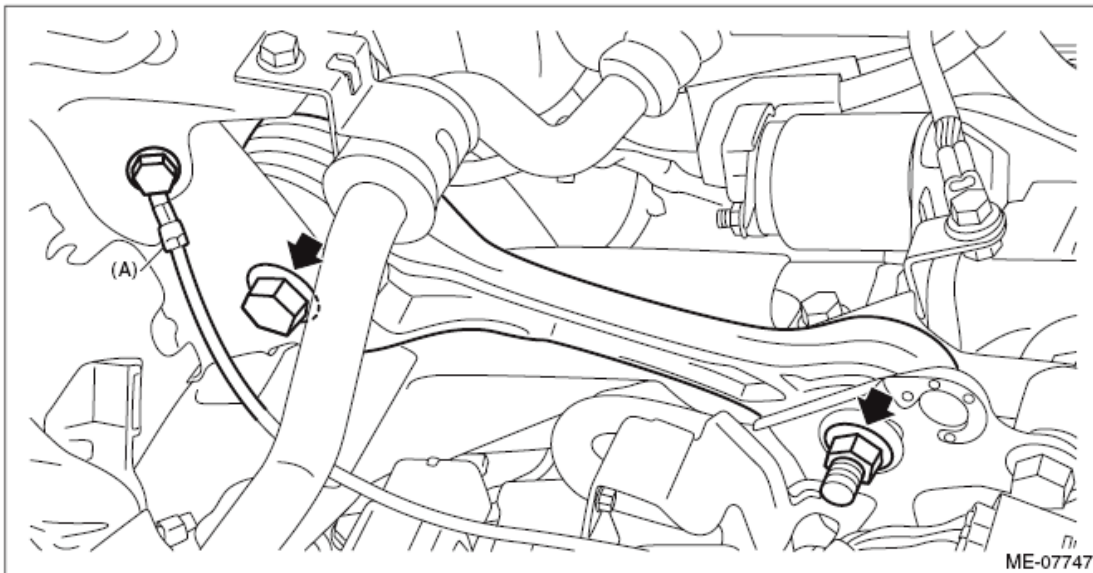


Fig. 125: Locating Transmission Radio Ground Terminal And Mounting Bolt
 Courtesy of SUBARU OF AMERICA, INC.

30. Remove the bolt (A) securing the bulkhead harness connector bracket, and disconnect the bulkhead harness connector from the engine harness connector (brown) (B).
31. Disconnect the bulkhead harness connector from the transmission harness connector (C), inhibitor harness connector (D) and drive motor harness connector (E).

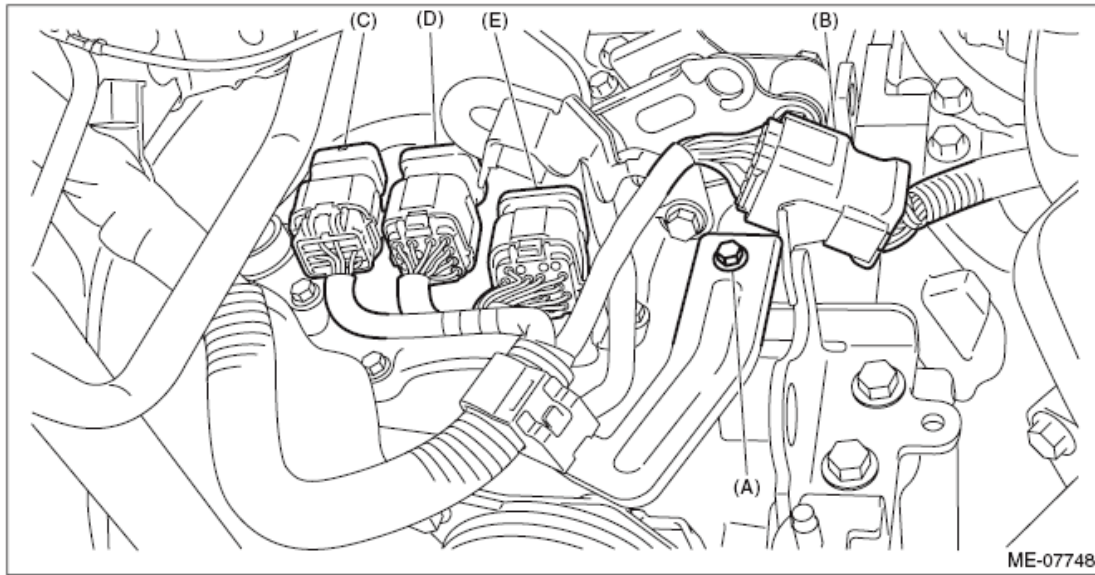


Fig. 126: Identifying Bulkhead Connector Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

32. Remove the transmission case cover.

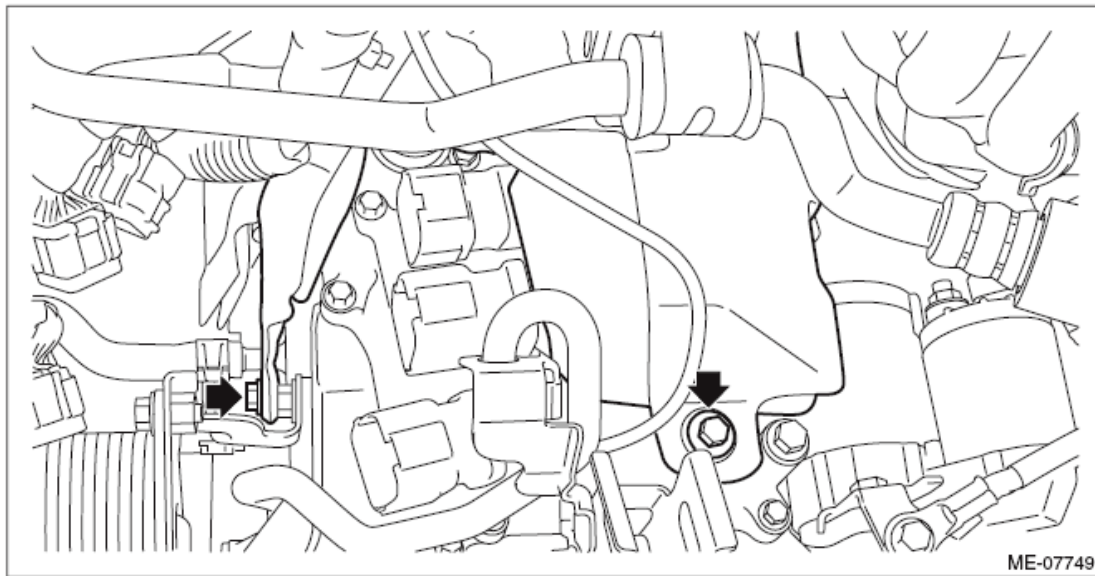


Fig. 127: Locating Transmission Case Cover Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

33. Remove the bolt which holds the transmission harness stay.

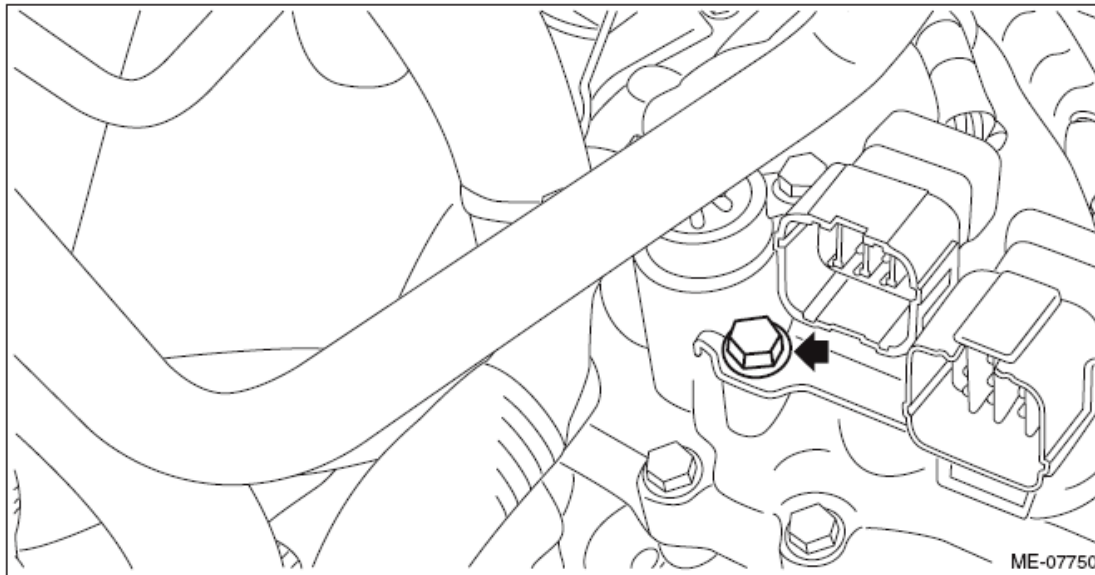


Fig. 128: Locating Transmission Harness Stay Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

34. Remove the bolt which holds the transmission harness to the control valve body, and turn the transmission harness clockwise till the bolt hole can be seen as shown in the figure, and tighten the bolt to temporary lock the harness.

NOTE: This procedure is required to prevent the transmission harness from touching the vehicle body during engine removal/installation.

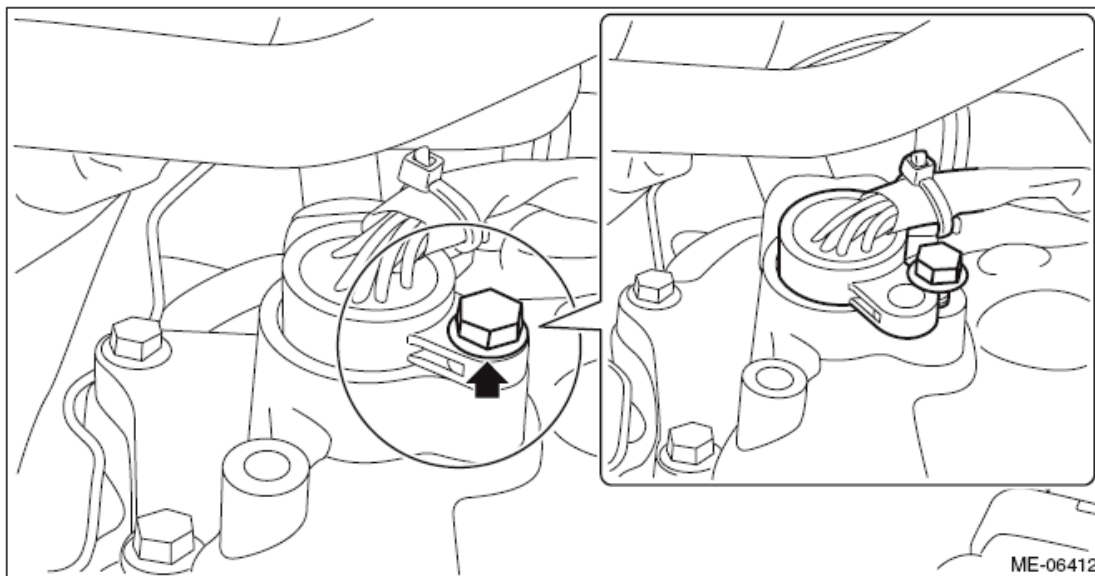


Fig. 129: Locating Transmission Harness To Control Valve Body Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

35. Remove the clip (A) securing the engine harness to the purge control solenoid valve bracket, and disconnect the bolt securing the purge control solenoid valve bracket to the intake manifold.

NOTE: This procedure is required to prevent the wire rope from contacting the purge control solenoid valve during engine removal/installation.

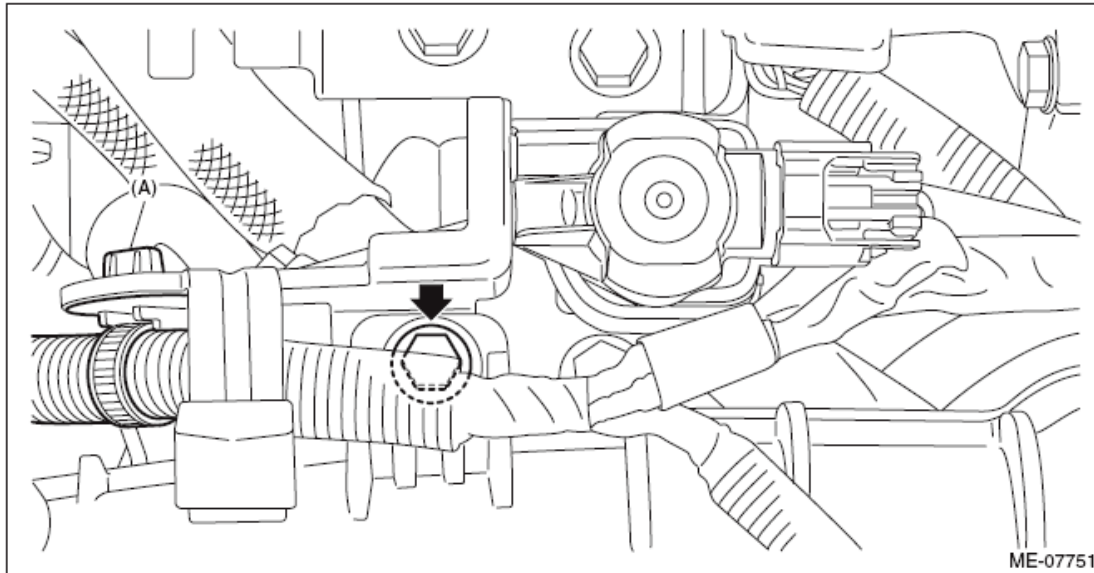


Fig. 130: Identifying Engine Harness To Purge Control Solenoid Valve Bracket Clip
Courtesy of SUBARU OF AMERICA, INC.

36. Disconnect the engine coolant inlet hose (A) from the EGR cooler, and disconnect the engine coolant outlet hose (B) from the CVTF cooler (with warmer feature).

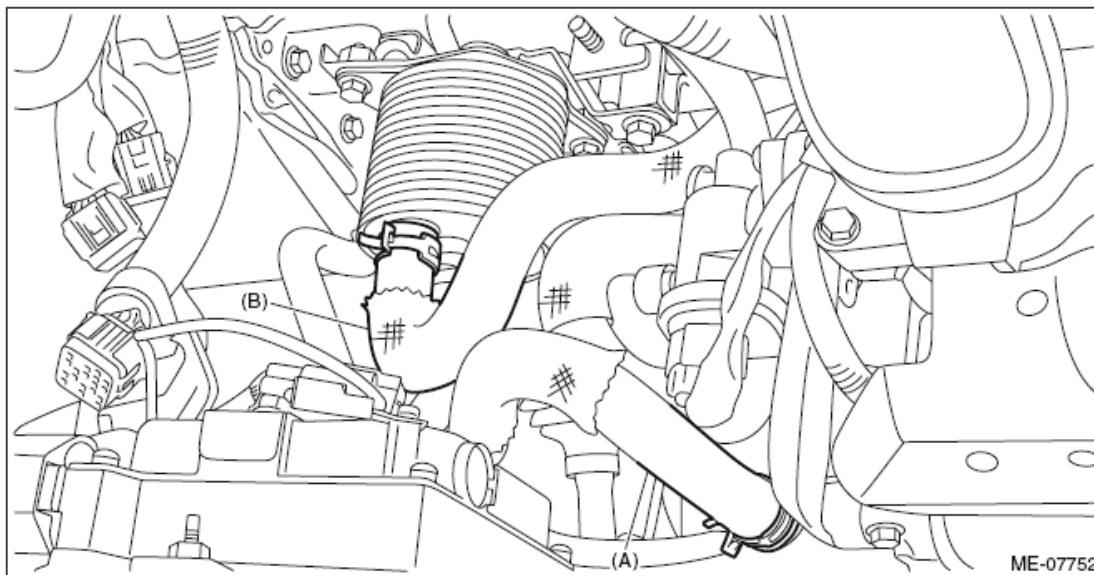


Fig. 131: Identifying Engine Coolant Inlet And Outlet Hose

Courtesy of SUBARU OF AMERICA, INC.

37. Remove the bolt which secures the CVTF cooler (with warmer feature) to the transmission, and move it at the locations that do not interfere operation.

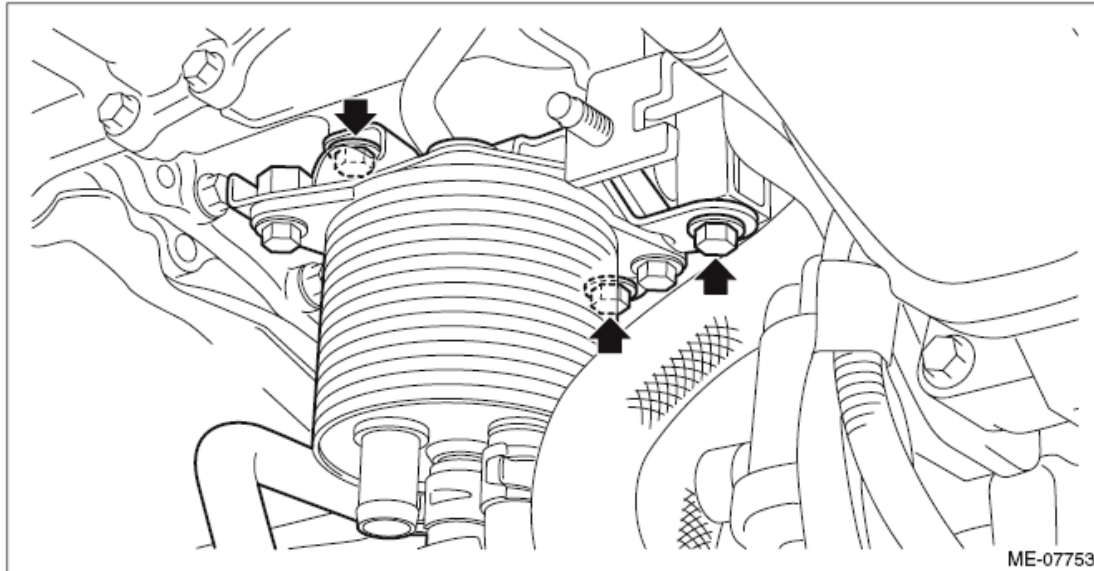


Fig. 132: Locating CVTF Cooler To Transmission Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

38. Separate the torque converter clutch from the drive plate.
1. Remove the service hole plug.
 2. Insert the wrench into the crank pulley bolt and rotate the crank pulley to remove the bolts which hold torque converter clutch to drive plate.

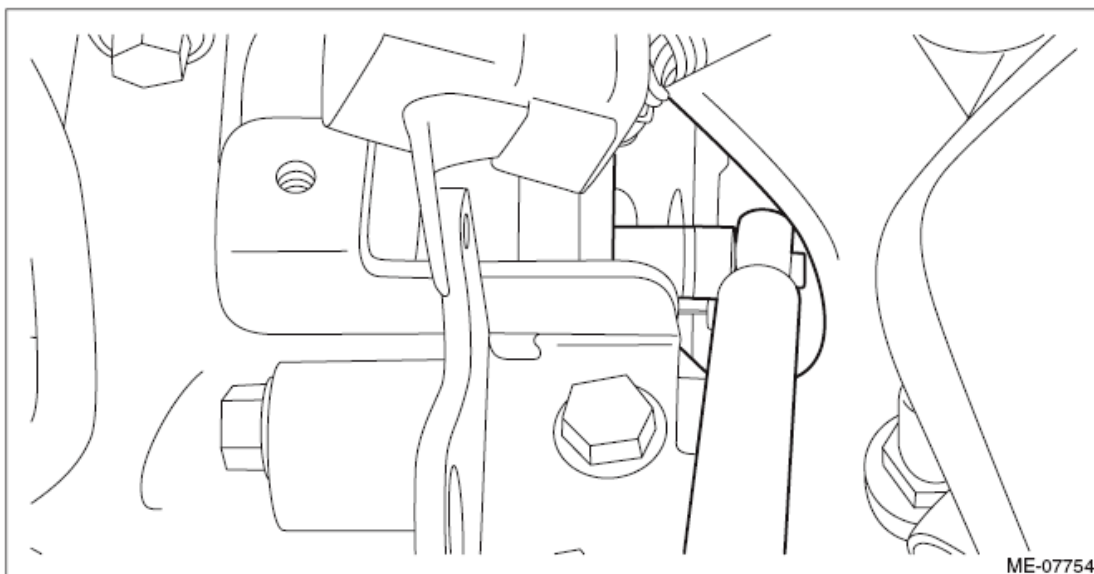


Fig. 133: Separating Torque Converter Clutch From Drive Plate Using Wrench
Courtesy of SUBARU OF AMERICA, INC.

39. Disconnect the fuel delivery tube and evaporation hose.


CAUTION:

- Be careful not to spill fuel.
- Catch the fuel from the tubes using a container or cloth.

1. Disconnect the quick connector (A) of the fuel delivery tube from the fuel pipe assembly, and remove the clip (B) securing the fuel delivery tube.

NOTE:

Disconnect the quick connector as shown in the figure.

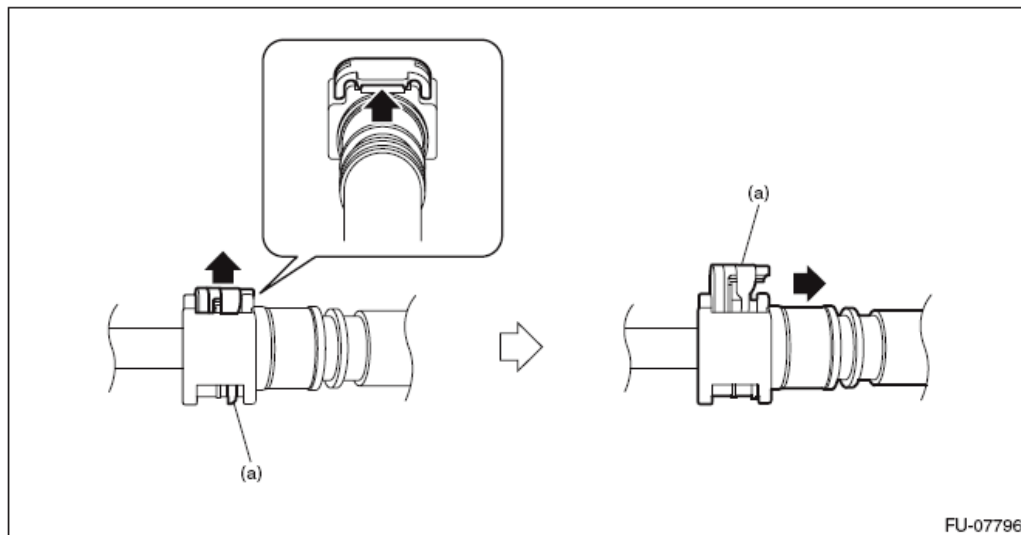

(a) Slider

Fig. 134: Disconnecting Quick Connector
Courtesy of SUBARU OF AMERICA, INC.

2. Disconnect the evaporation hose (C) from the fuel pipe assembly.

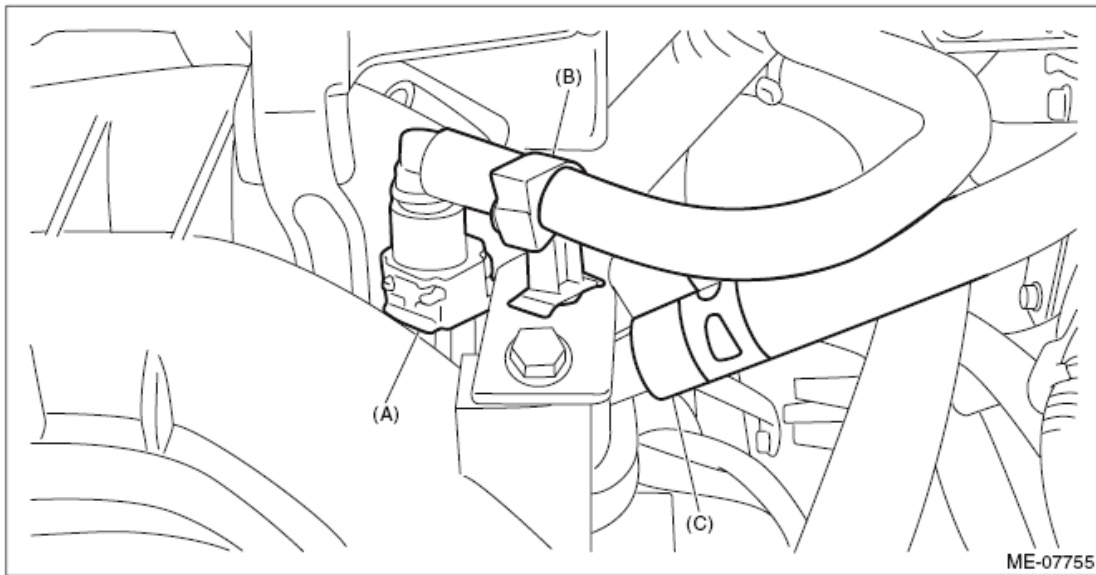


Fig. 135: Identifying Evaporator Hose, Quick Connector And Clip
Courtesy of SUBARU OF AMERICA, INC.

40. Support the engine with a lifting device and wire ropes.


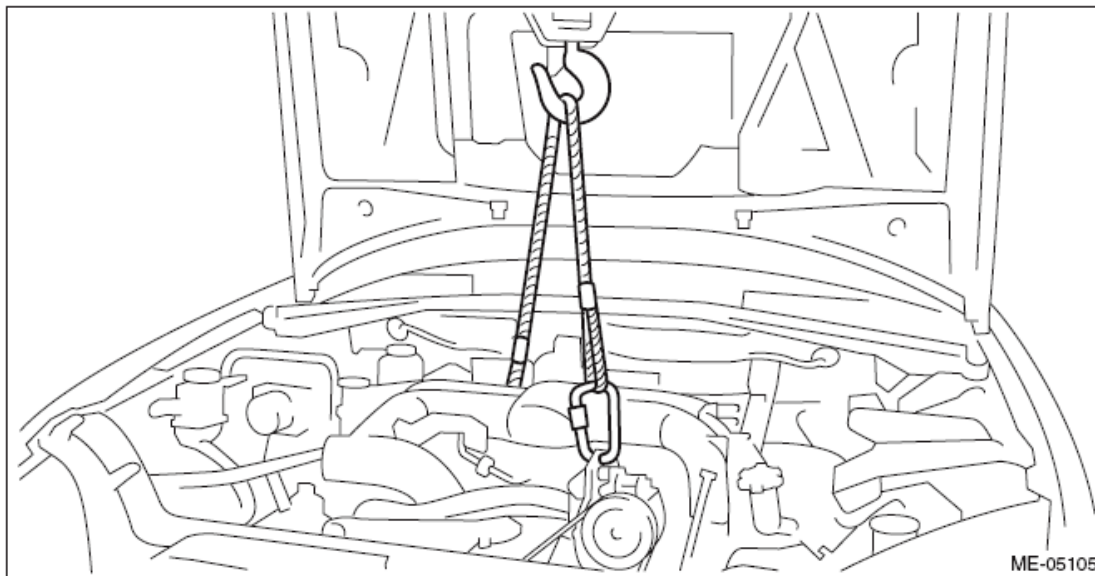


Fig. 136: Supporting Engine Using Lifting Device And Wire Ropes
Courtesy of SUBARU OF AMERICA, INC.

41. Support the transmission with a garage jack.

CAUTION: Be sure to perform this procedure to prevent the transmission from lowering by its own weight.

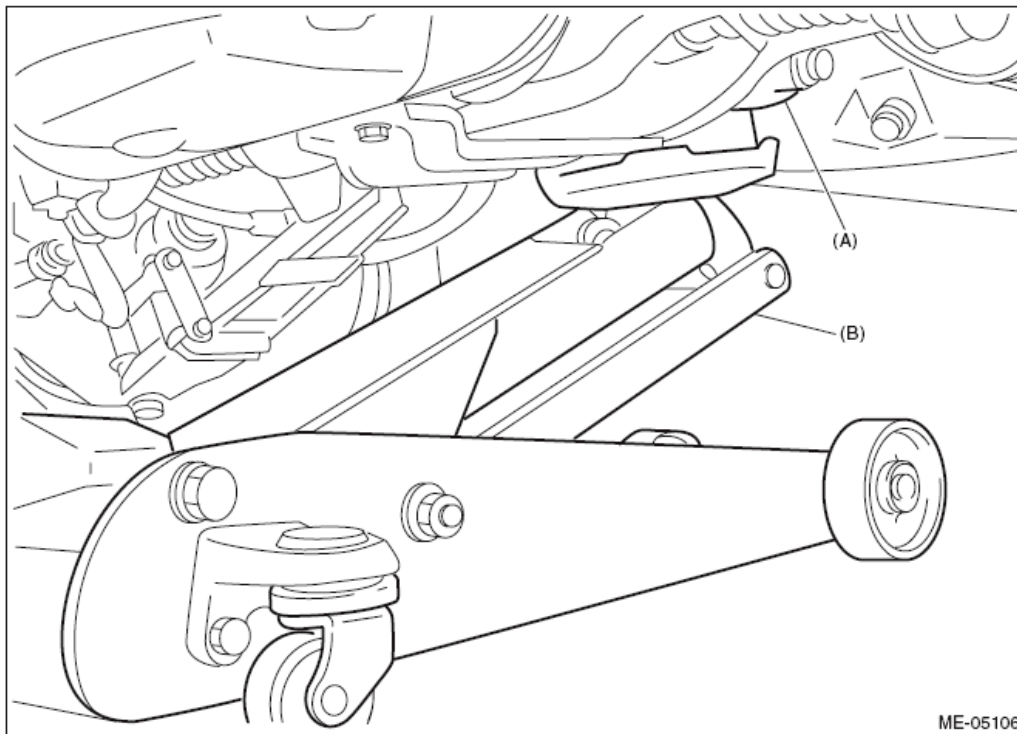

(A) Transmission

(B) Garage jack

Fig. 137: Supporting Transmission Using Garage Jack
Courtesy of SUBARU OF AMERICA, INC.

42. Separate the engine and transmission.

CAUTION: Before removing the engine away from transmission, check to be sure no work has been overlooked.

1. Remove the starter. < Ref. to **REMOVAL** , Starter.>
2. Attach the ST to the torque converter clutch case.

ST 498277200 STOPPER SET

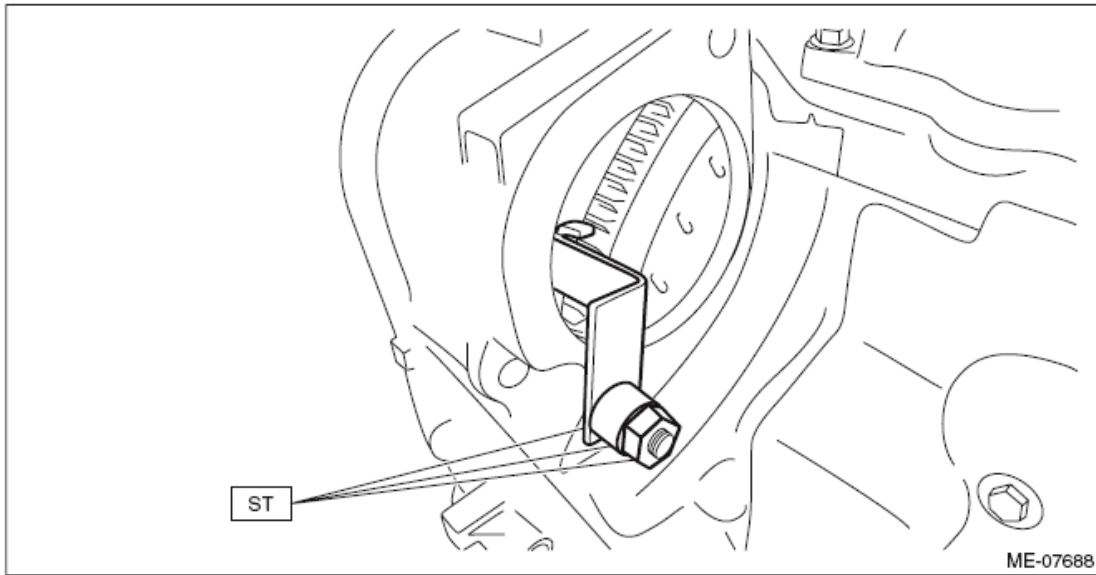


Fig. 138: Attaching Stopper Set To Torque Converter Clutch Case
Courtesy of SUBARU OF AMERICA, INC.

3. Remove the bolts which hold the upper side of the transmission to the engine.

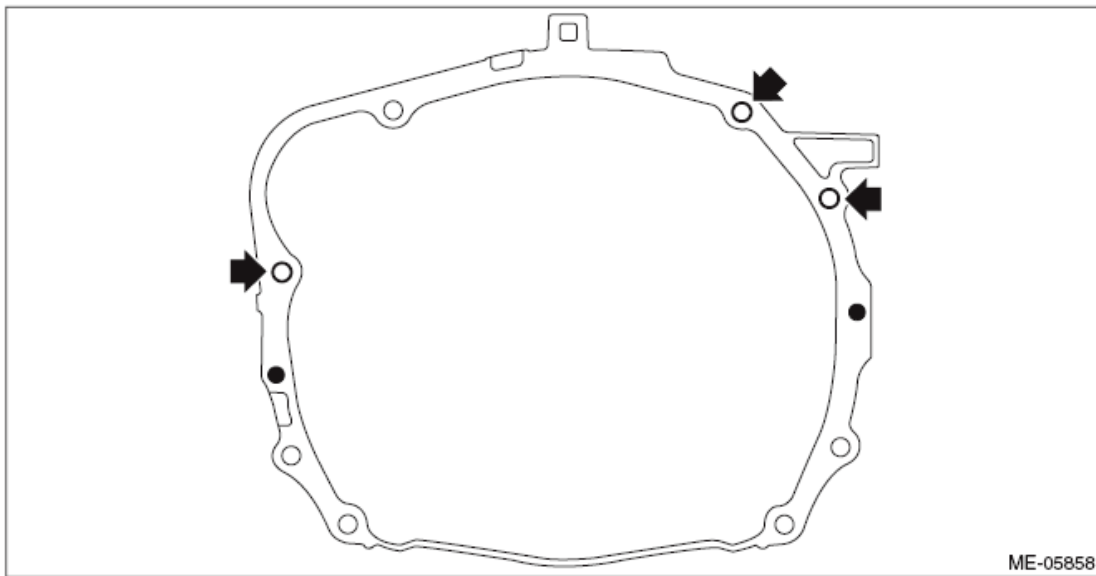


Fig. 139: Locating Upper Side Of Transmission To Engine Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

43. Remove the engine from the vehicle.

NOTE: Be careful not to damage adjacent parts or body panels with crank pulley, oil level gauge, etc.

1. Slightly raise the engine.
2. Raise the transmission with garage jack.
3. Slowly move the engine away from engine compartment.
44. Remove the engine mounting from the engine.

INSTALLATION

GASOLINE ENGINE MODEL

1. Install the engine mounting onto the engine.

Tightening torque:

35 N.m (3.6 kgf-m, 25.8 ft-lb)

2. Apply a small amount of grease to splines of main shaft. (MT model)

Grease:

NICHIMOLY N-130 or equivalent

3. Position the engine in engine compartment and align it with transmission.

NOTE: **Be careful not to damage adjacent parts or body panels with crank pulley, oil level gauge, etc.**

4. Install the bolts which hold upper side of transmission to engine.

Tightening torque:

50 N.m (5.1 kgf-m, 36.9 ft-lb)

- CVT model

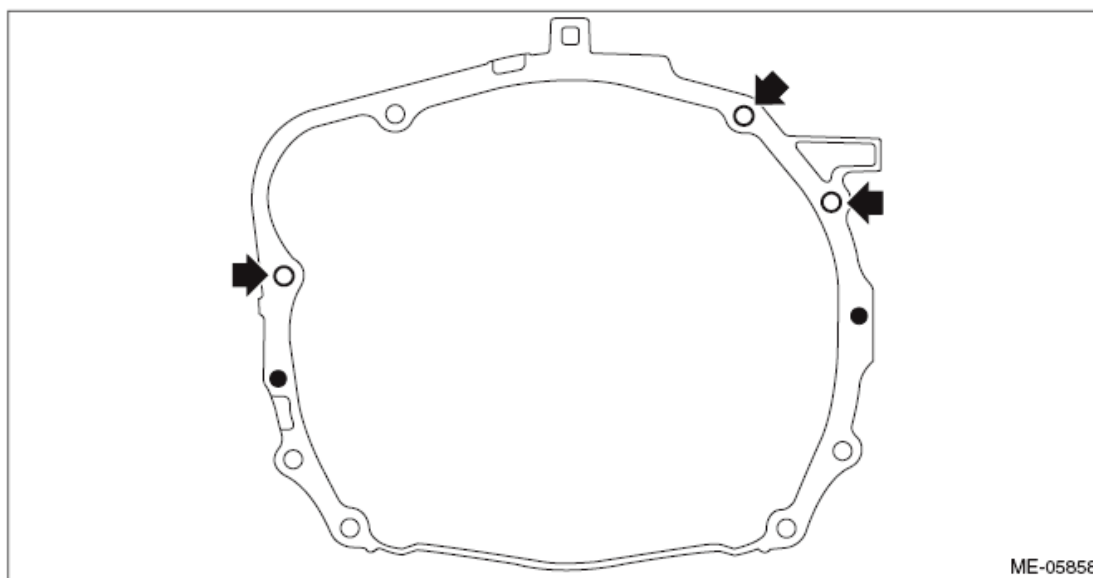


Fig. 140: Locating Upper Side Transmission To Engine Mounting Bolt (CVT Model)
Courtesy of SUBARU OF AMERICA, INC.

- MT model

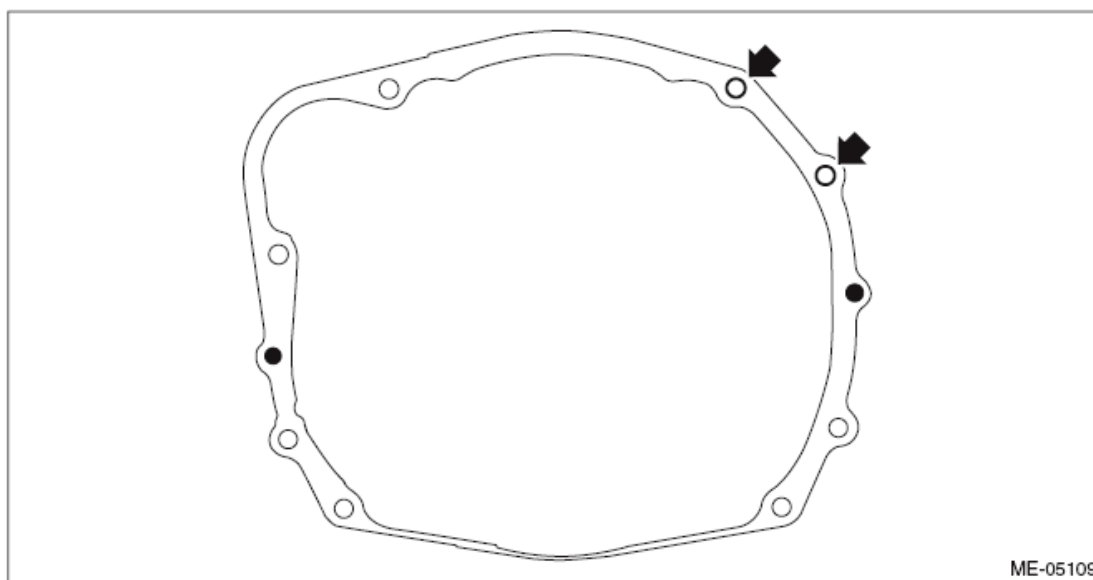


Fig. 141: Locating Upper Side Transmission To Engine Mounting Bolt (MT Model)
Courtesy of SUBARU OF AMERICA, INC.

5. Remove the lifting device and wire ropes.

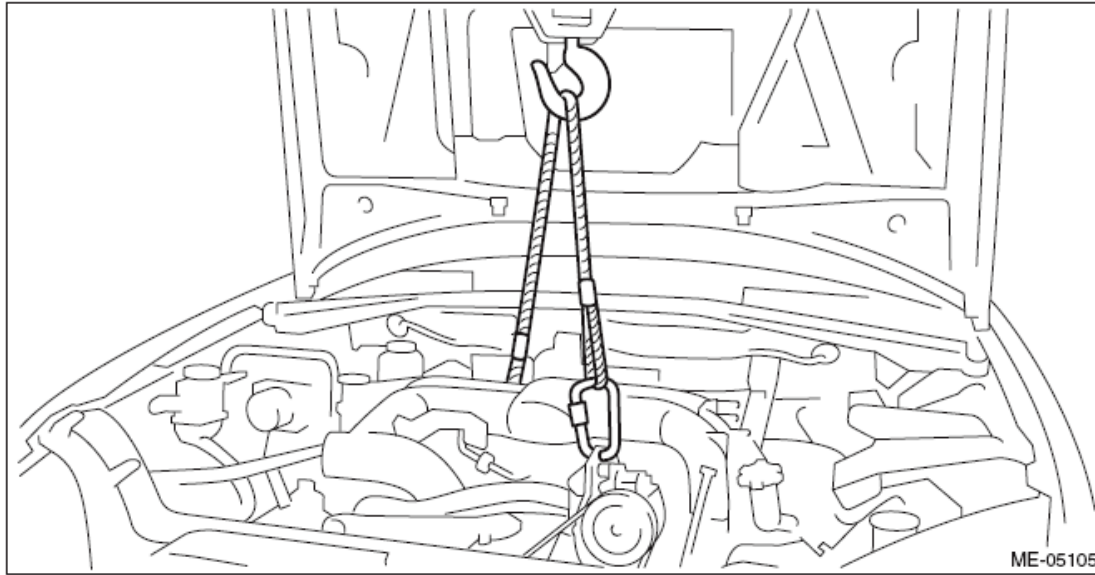


Fig. 142: Supporting Engine Using Lifting Device And Wire Ropes
Courtesy of SUBARU OF AMERICA, INC.

6. Remove the garage jack.
7. Remove the bolt and turn the transmission harness counterclockwise to install the transmission harness to the control valve body. (CVT model)

Tightening torque:

7 N.m (0.7 kgf-m, 5.2 ft-lb)

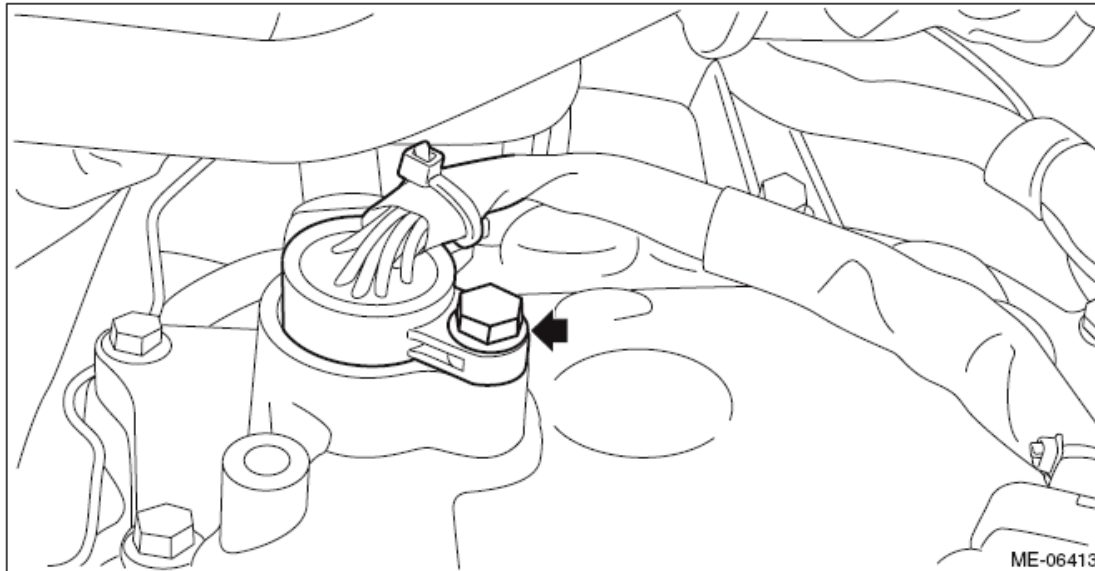


Fig. 143: Locating Transmission Harness Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

8. Install the bolt which holds the transmission harness stay. (CVT model)

Tightening torque:

7 N.m (0.7 kgf-m, 5.2 ft-lb)

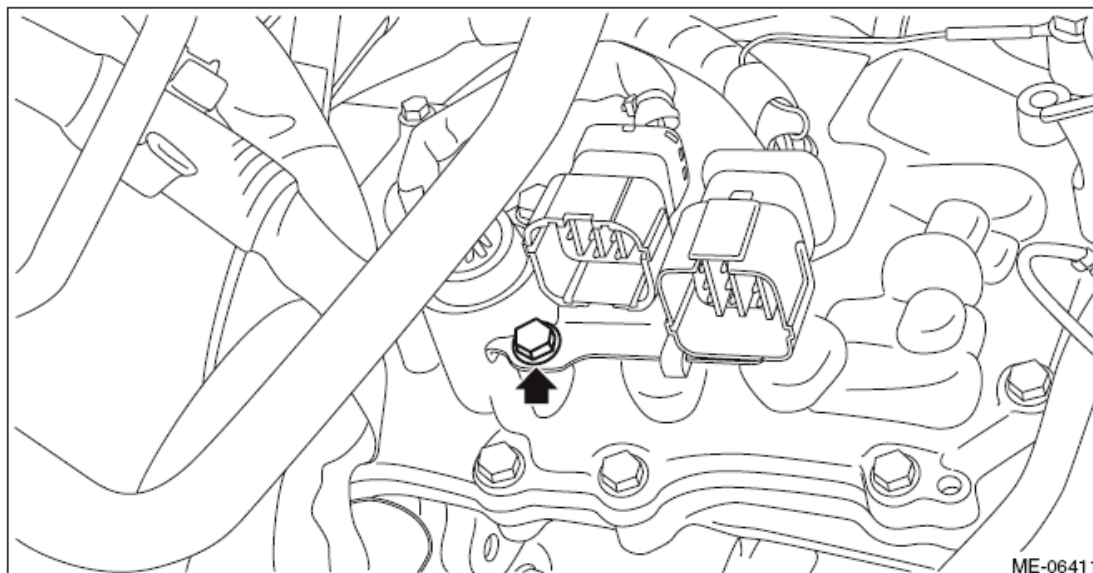


Fig. 144: Locating Transmission Harness Stay Mounting Bolt (CVT Model)
Courtesy of SUBARU OF AMERICA, INC.

9. Install the transmission case cover. (CVT model)

Tightening torque:

8 N.m (0.8 kgf-m, 5.9 ft-lb)

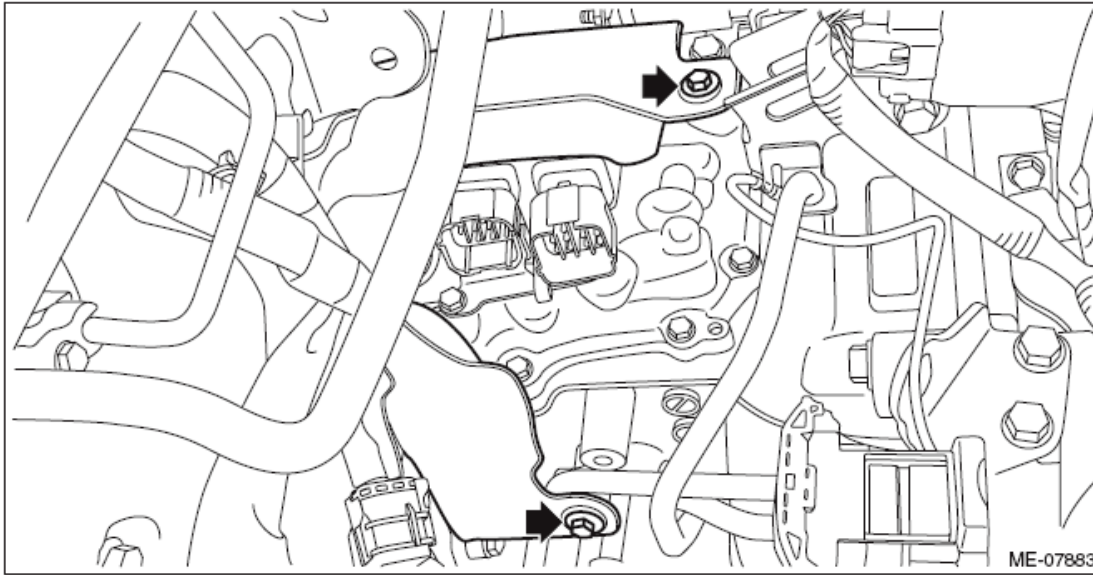


Fig. 145: Locating Transmission Case Cover Mounting Bolt (CVT Model)
Courtesy of SUBARU OF AMERICA, INC.

10. Install the pitching stopper.

Tightening torque:

T1: 50 N.m (5.1 kgf-m, 36.9 ft-lb)

T2: 58 N.m (5.9 kgf-m, 42.8 ft-lb)

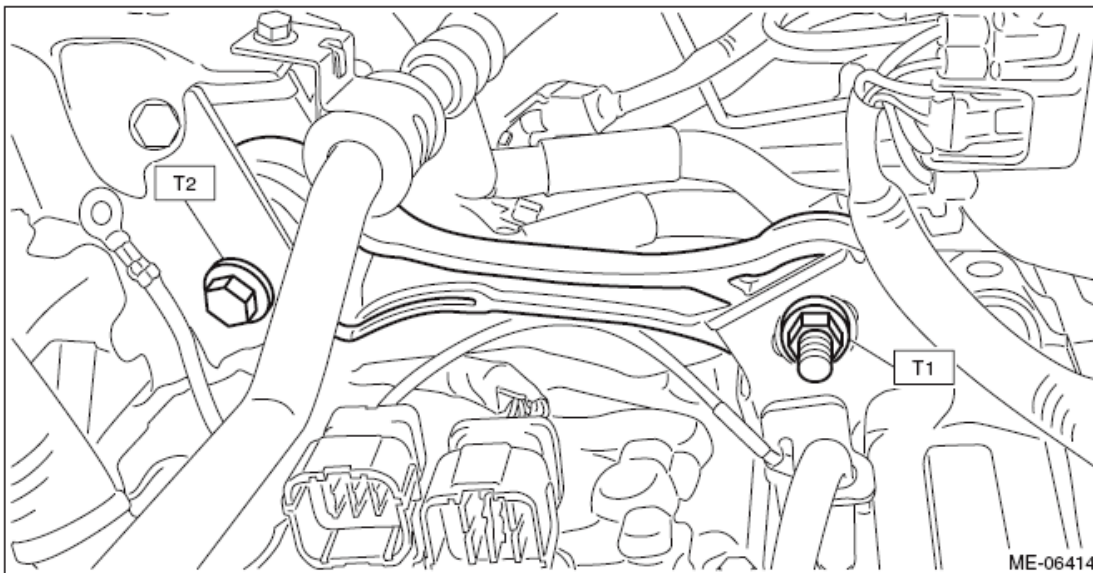


Fig. 146: Locating Pitching Stopper Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

11. Connect the transmission radio ground terminal (C) to the vehicle body, and connect the bulkhead harness connector to the transmission harness connector (A) and the inhibitor harness connector (B). (CVT model)

Tightening torque:

13 N.m (1.3 kgf-m, 9.6 ft-lb)

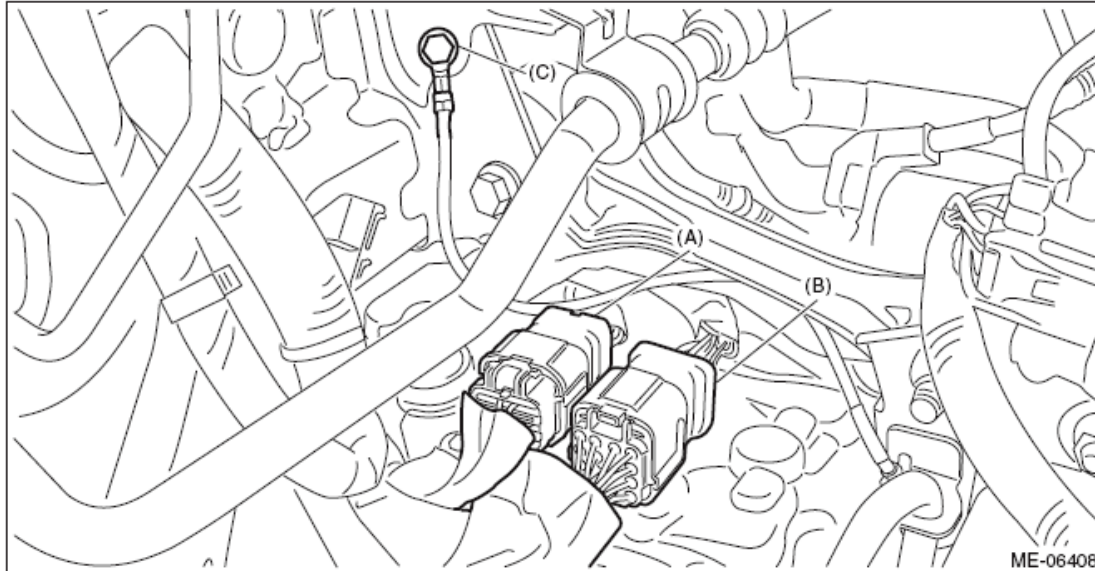


Fig. 147: Identifying Transmission Radio Ground Terminal, Transmission And Inhibitor Harness Connector

Courtesy of SUBARU OF AMERICA, INC.

12. Remove the ST from torque converter clutch case. (CVT model)

NOTE: Be careful not to drop the ST into the torque converter clutch case when removing the ST.

ST 498277200 STOPPER SET

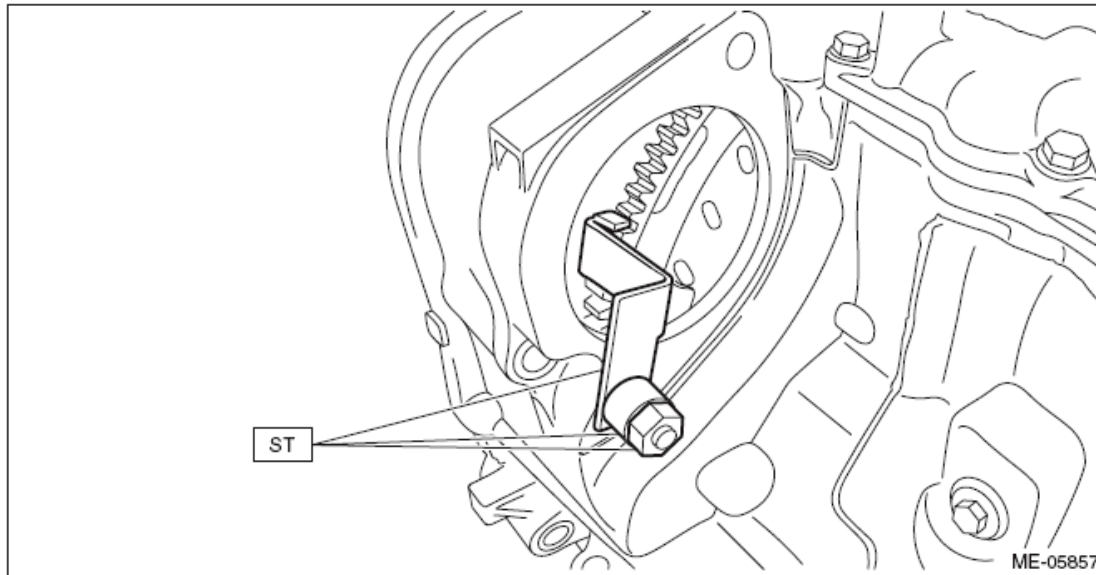


Fig. 148: Removing Stopper Set From Torque Converter Clutch Case (CVT Models)
Courtesy of SUBARU OF AMERICA, INC.

13. Install the starter. < Ref. to **INSTALLATION** , Starter.>
14. Install the torque converter clutch to drive plate. (CVT model)
 1. Insert the wrench into the crank pulley bolt and rotate the crank pulley to install the bolts which hold torque converter clutch to drive plate.

NOTE: Be careful not to drop bolts into the torque converter clutch case.

Tightening torque:

25 N.m (2.5 kgf-m, 18.4 ft-lb)

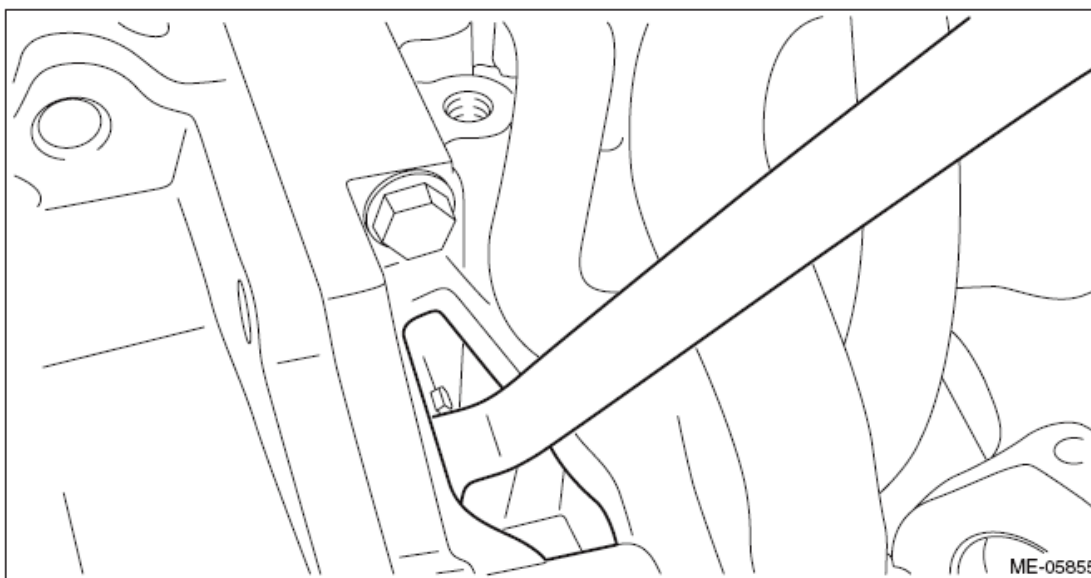


Fig. 149: Installing Torque Converter Clutch To Drive Plate Using Tool (CVT Model)
 Courtesy of SUBARU OF AMERICA, INC.

2. Fit the plug to service hole.
15. Lift up the vehicle.
16. Install the bolts and nuts which hold lower side of the transmission to engine.

Tightening torque:

50 N.m (5.1 kgf-m, 36.9 ft-lb)

- CVT model

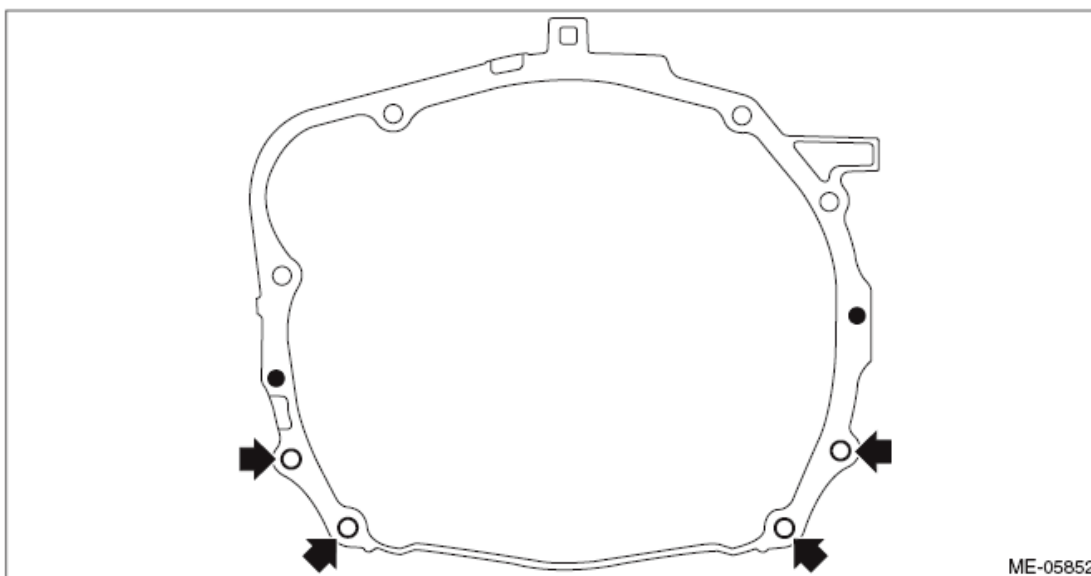


Fig. 150: Locating Lower Side Transmission To Engine Mounting Bolts And Nuts (CVT Model)

Courtesy of SUBARU OF AMERICA, INC.

- MT model

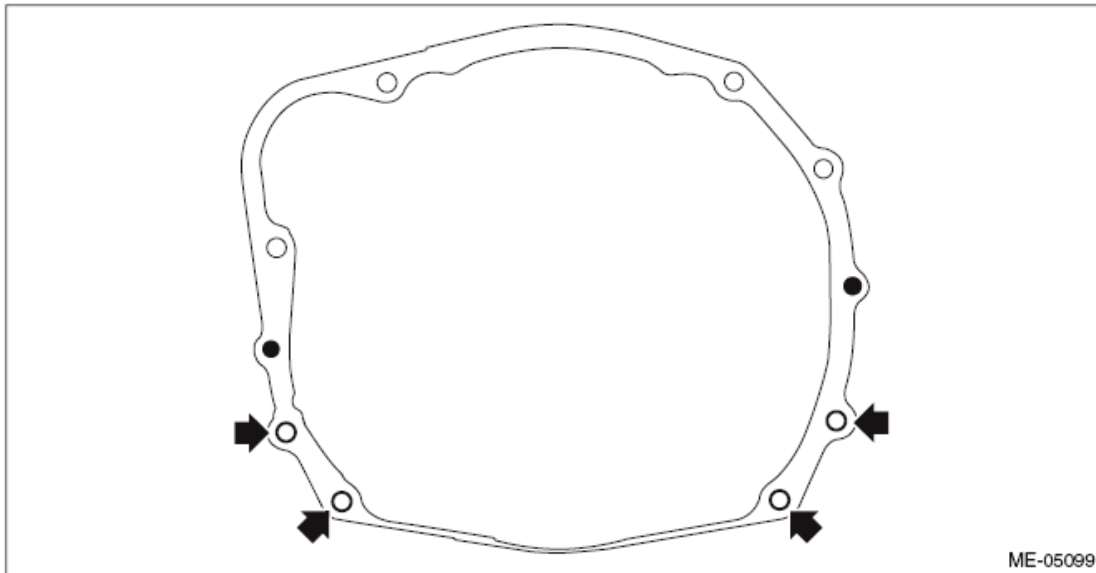


Fig. 151: Locating Lower Side Transmission To Engine Mounting Bolts And Nuts (MT Model)

Courtesy of SUBARU OF AMERICA, INC.

17. Install the nuts which hold the engine mounting to the crossmember. (CVT model)

NOTE: Make sure that locators (A) of the engine mounting are securely inserted.

Tightening torque:

45 N.m (4.6 kgf-m, 33.2 ft-lb)

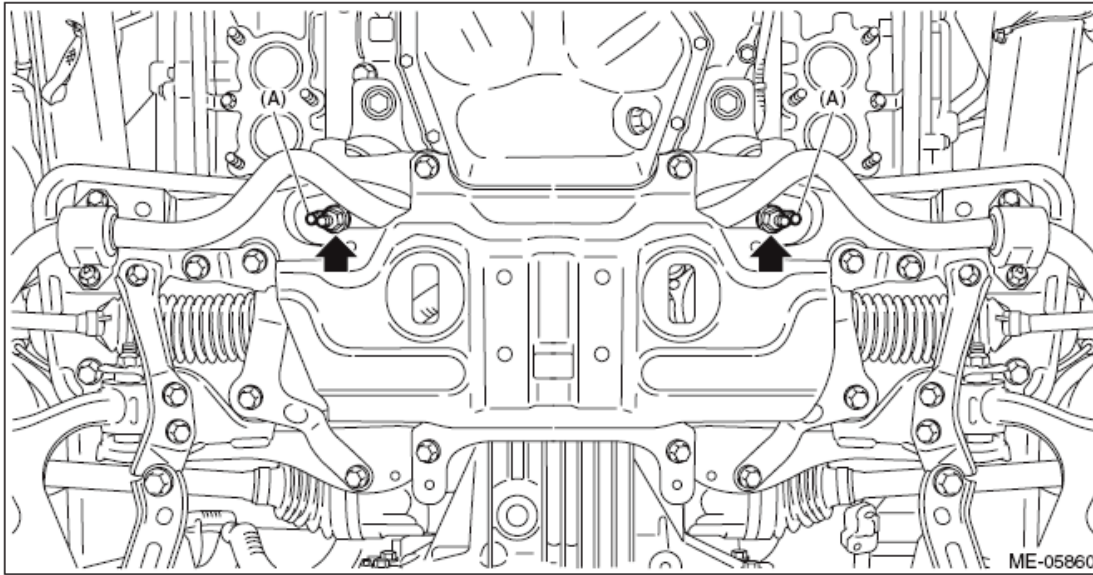


Fig. 152: Locating Engine Mounting To Crossmember Mounting Nut (CVT Model)
Courtesy of SUBARU OF AMERICA, INC.

18. Install the nuts which hold the engine mounting to the crossmember. (MT model)

Tightening torque:

45 N.m (4.6 kgf-m, 33.2 ft-lb)

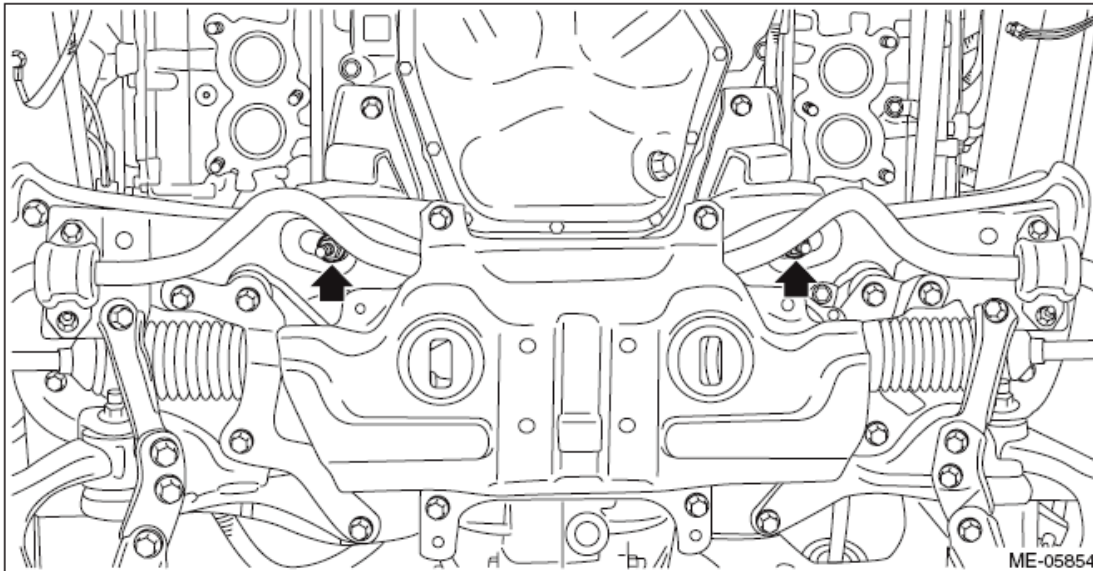


Fig. 153: Locating Engine Mounting To Crossmember Mounting Nut (MT Model)
Courtesy of SUBARU OF AMERICA, INC.

19. Connect the ground cable.

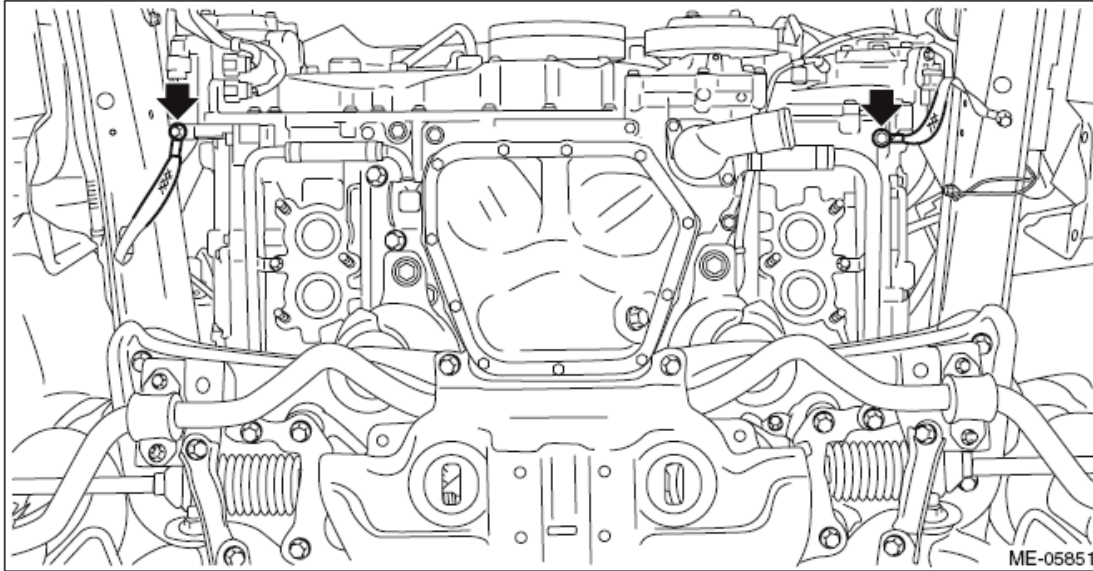
Tightening torque:***7.5 N.m (0.8 kgf-m, 5.5 ft-lb)***

Fig. 154: Locating Ground Cable
Courtesy of SUBARU OF AMERICA, INC.

20. Install the front exhaust pipe. < Ref. to **INSTALLATION** , Front Exhaust Pipe.>
21. Lower the vehicle.
22. Install the CVTF cooler (with warmer feature) to the transmission. (CVT model)

Tightening torque:***23 N.m (2.3 kgf-m, 17.0 ft-lb)***

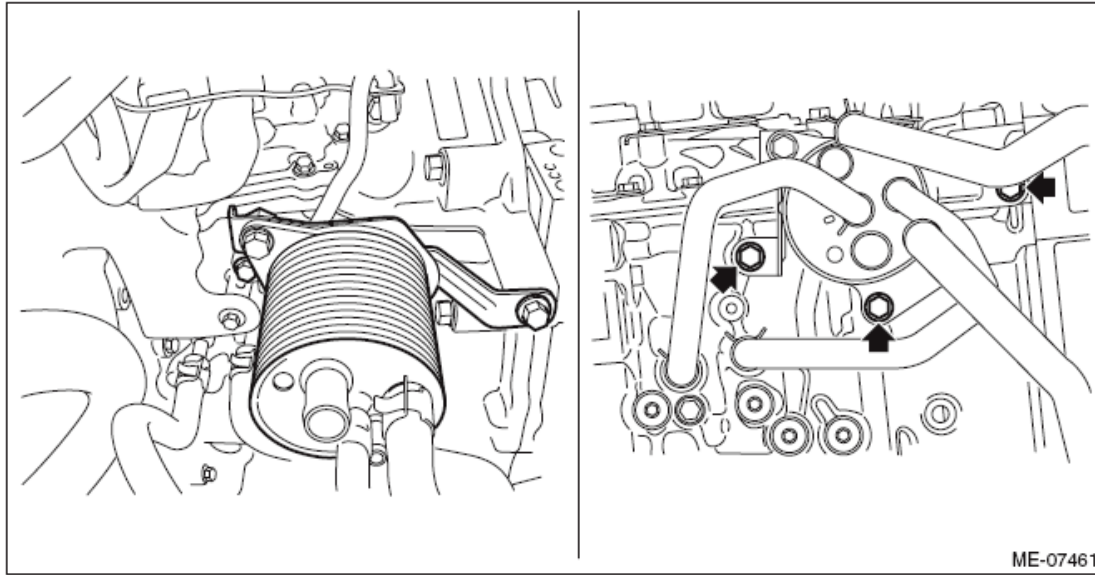


Fig. 155: Locating CVTF Cooler To Transmission Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

23. Connect the water hose to the CVTF cooler (with warmer feature). (CVT model)

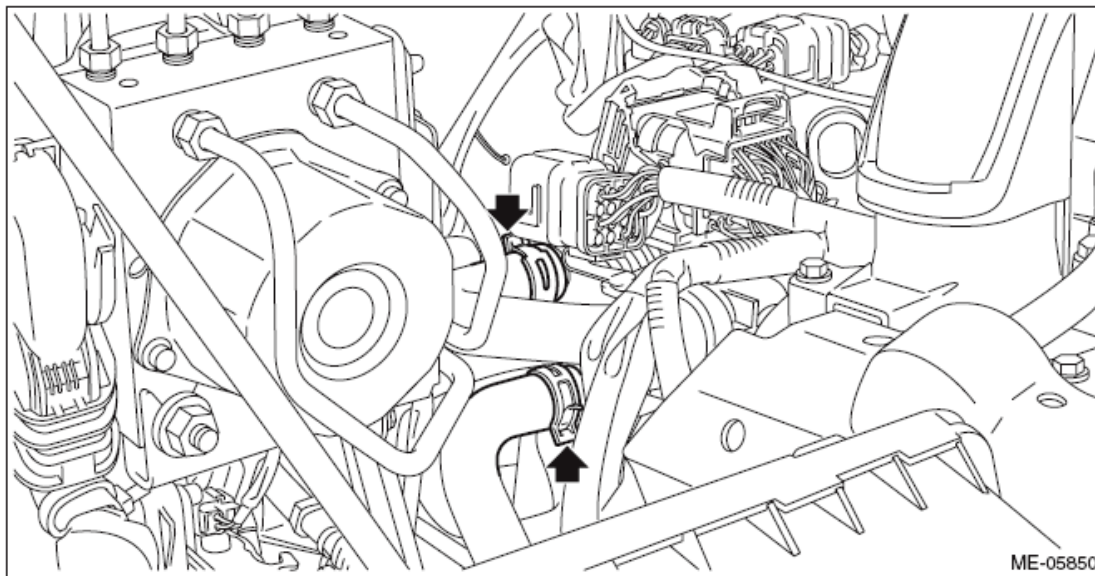


Fig. 156: Locating CVTF Cooler To Water Hose Clamp
Courtesy of SUBARU OF AMERICA, INC.

24. Connect the fuel delivery tube and evaporation hose.
 1. Connect the evaporation hose to fuel pipe assembly.

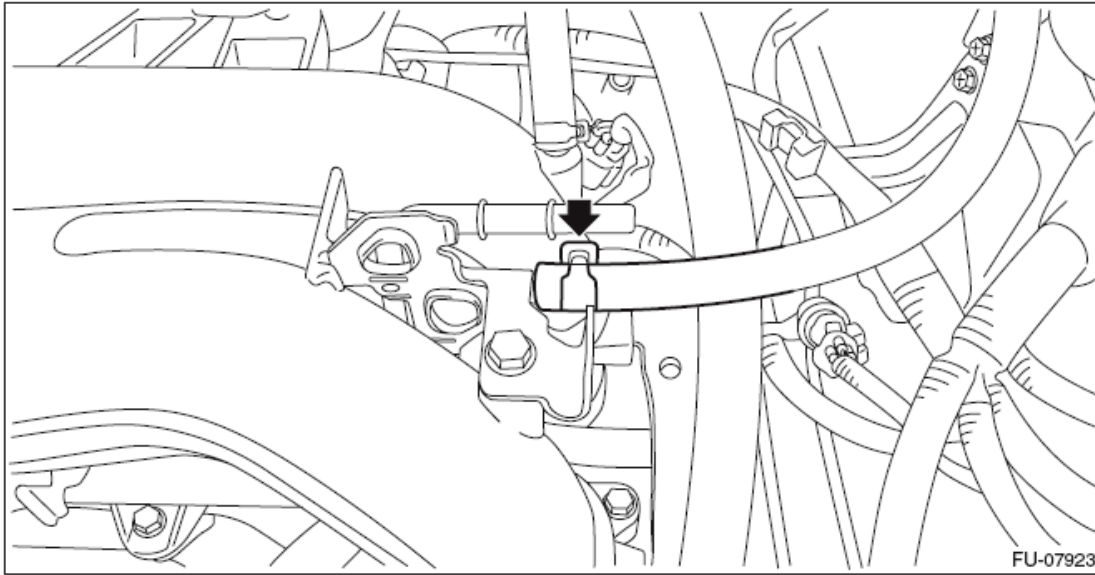



Fig. 157: Locating Fuel Delivery Tube And Evaporation Hose
Courtesy of SUBARU OF AMERICA, INC.

2. Connect the quick connector on the fuel delivery tube to the fuel pipe assembly, and fix the fuel delivery tube using clip (A).

CAUTION:

- Check that there is no damage or dust on the quick connector. If necessary, clean the seal surface of the pipe.
- When connecting the quick connector, make sure to insert the pipe all the way in before locking the slider.
- When it is difficult to lock the slider, check that the pipe is fully inserted.
- Make sure that the quick connector is securely connected.

NOTE: Connect the quick connector as shown in the figure.

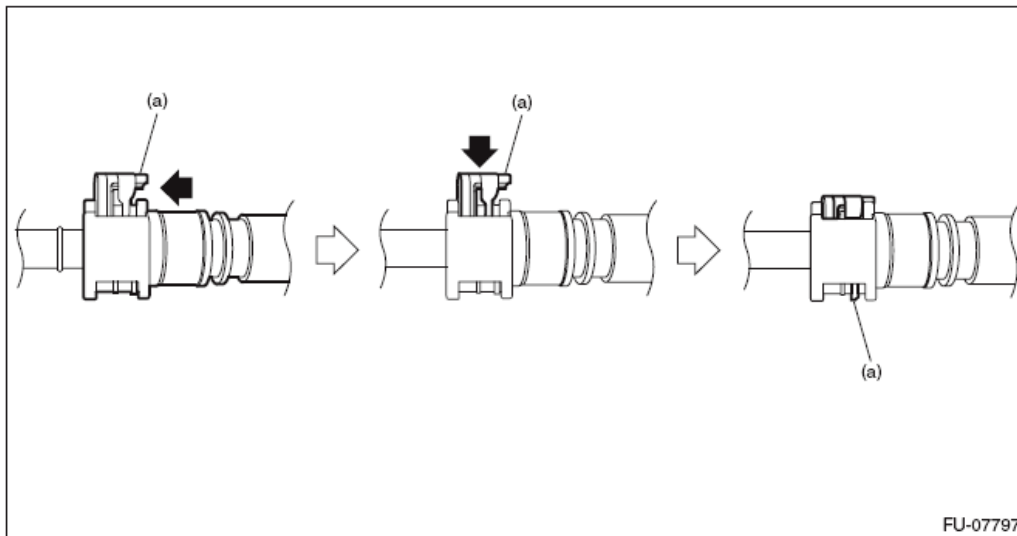

(a) Slider

Fig. 158: Connecting Quick Connector
Courtesy of SUBARU OF AMERICA, INC.


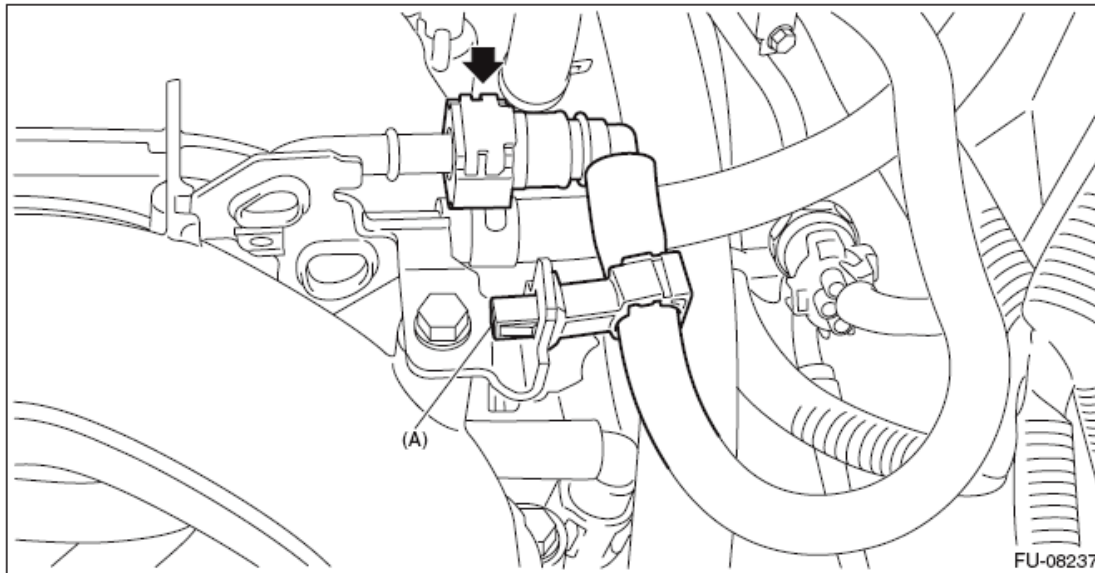


Fig. 159: Identifying Fuel Delivery Tube Clip
Courtesy of SUBARU OF AMERICA, INC.

25. Connect the following hoses.
 1. Heater inlet hose and heater outlet hose

NOTE: Be careful not to mix up the heater inlet hose and the heater outlet hose when connecting them.

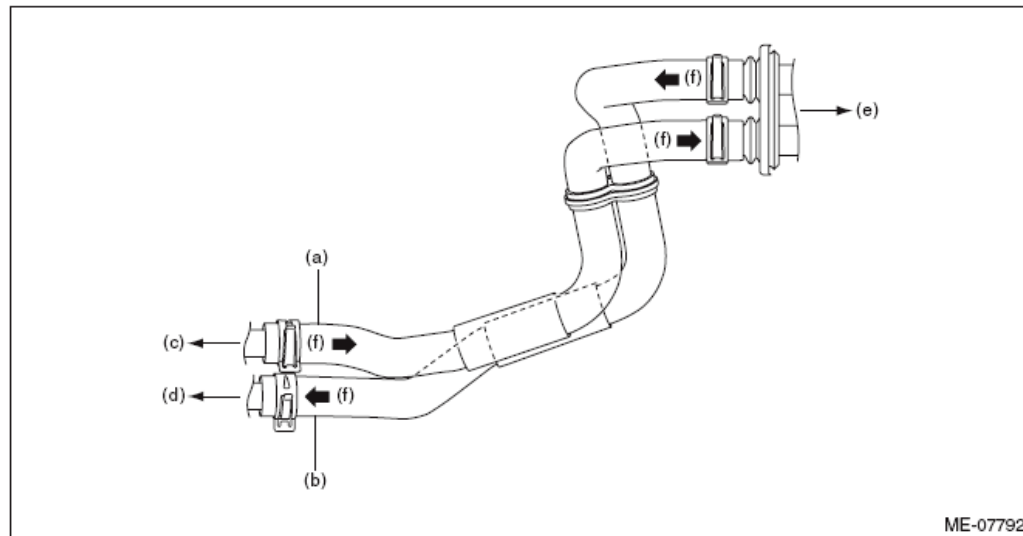

- | | | |
|------------------------|------------------------|-------------------------|
| (a) Heater inlet hose | (c) To water pipe ASSY | (e) To heater core ASSY |
| (b) Heater outlet hose | (d) To water pipe LH | (f) Engine coolant flow |

Fig. 160: Heater Inlet And Outlet Hose Operation Diagram
 Courtesy of SUBARU OF AMERICA, INC.

2. Brake booster vacuum hose
3. A/C pressure hose < Ref. to **INSTALLATION** , Hose and Pipe.>
26. Place the generator code and install the generator cord to the clip (D).
27. Connect connector (A) and terminal (B) to the generator, and connect connector (C) to A/C compressor.

Tightening torque:

15 N.m (1.5 kgf-m, 11.1 ft-lb)

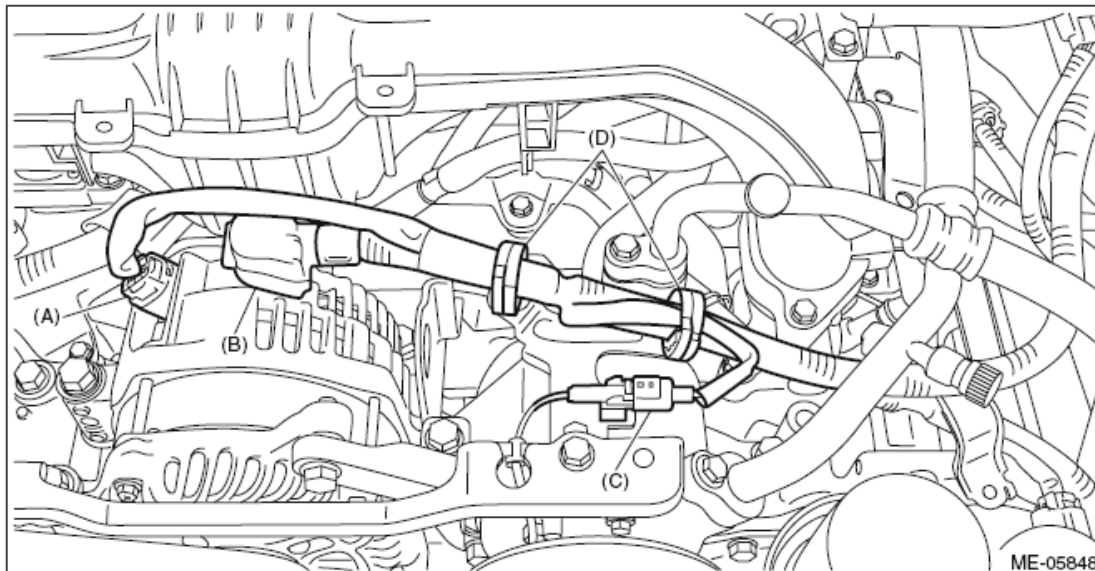


Fig. 161: Connecting Quick Connector
Courtesy of SUBARU OF AMERICA, INC.

28. Install the generator cord stay to the chain cover.

NOTE: Install the generator cord stay so that the folded end (a) touches the chain cover boss.

Tightening torque:

6.4 N.m (0.7 kgf-m, 4.7 ft-lb)

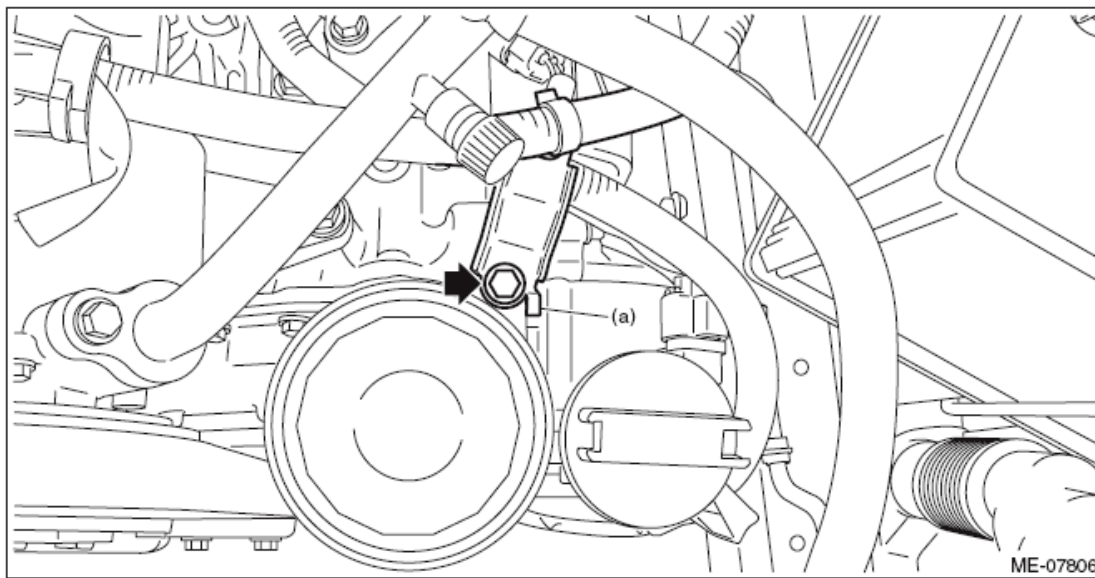


Fig. 162: Locating Generator Cord Stay To Chain Cover Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

29. Connect the engine harness connector.
1. Connect the bulkhead harness connector to the engine harness connector (black) and engine harness connector (brown).

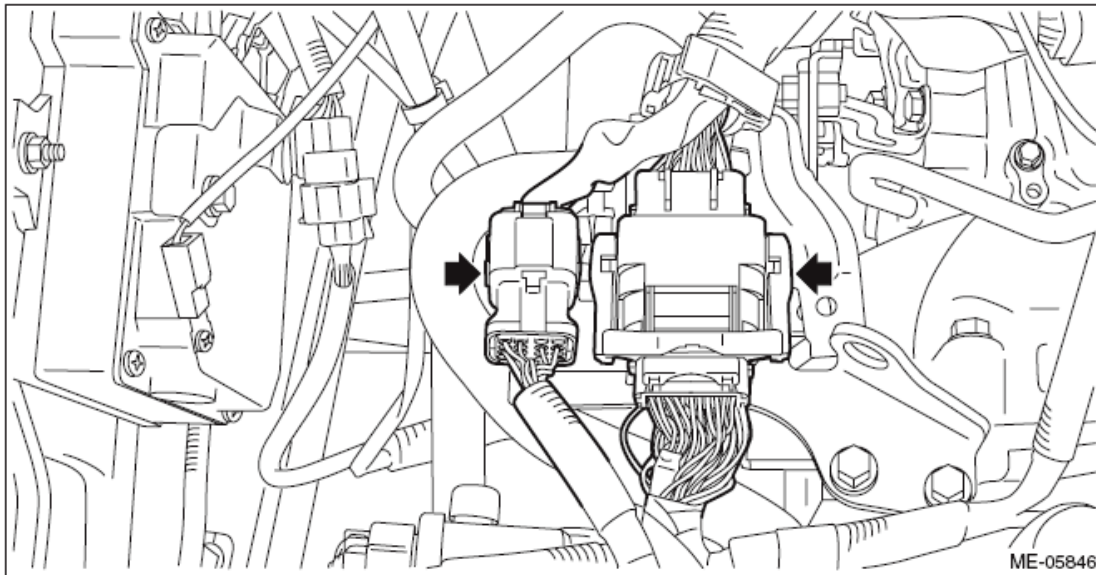


Fig. 163: Locating Bulkhead Harness Connector
Courtesy of SUBARU OF AMERICA, INC.

2. Install the bolt which secures the bulkhead harness connector bracket.

Tightening torque:

7.5 N.m (0.8 kgf-m, 5.5 ft-lb)

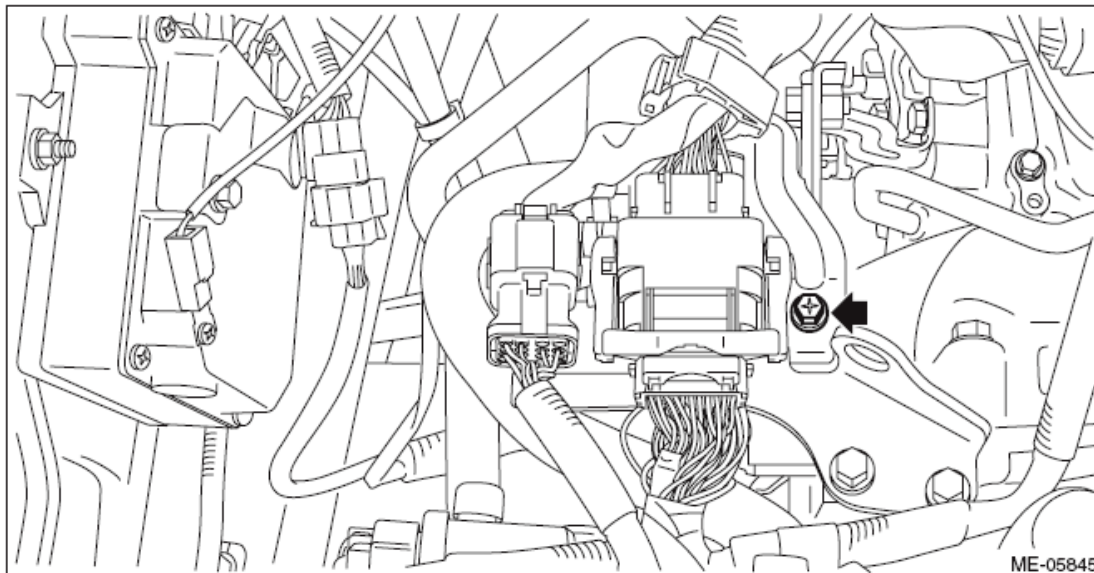


Fig. 164: Locating Bulkhead Harness Connector Bracket Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

30. Secure the air breather hose to the engine rear hanger using clip. (MT model)

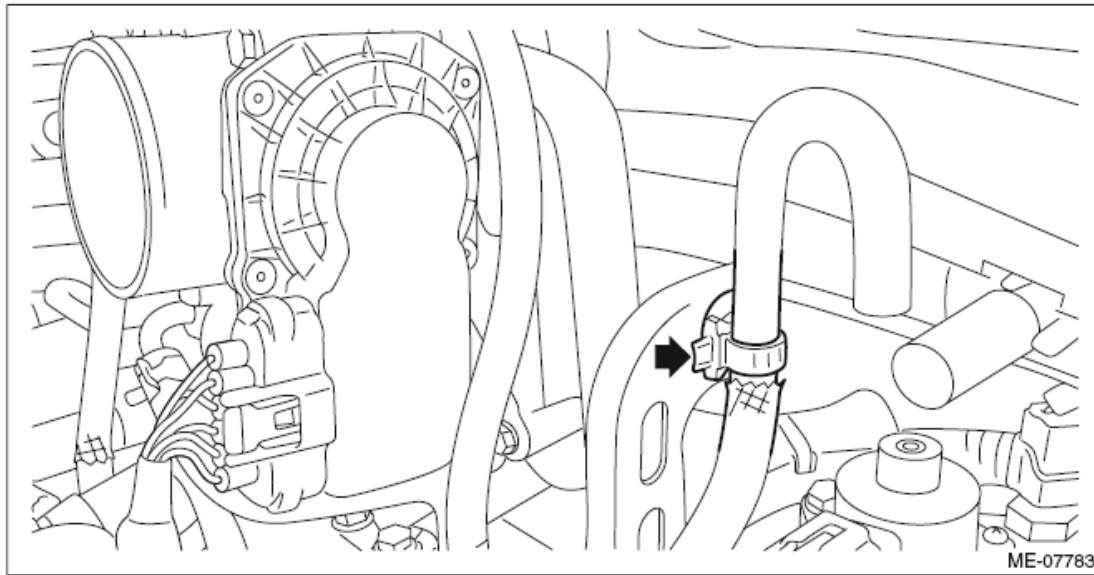


Fig. 165: Securing Air Breather Hose To Engine Rear Hanger Using Clip
 Courtesy of SUBARU OF AMERICA, INC.

31. Install the radiator. < Ref. to **INSTALLATION** , Radiator.>
32. Install the air intake case (rear).

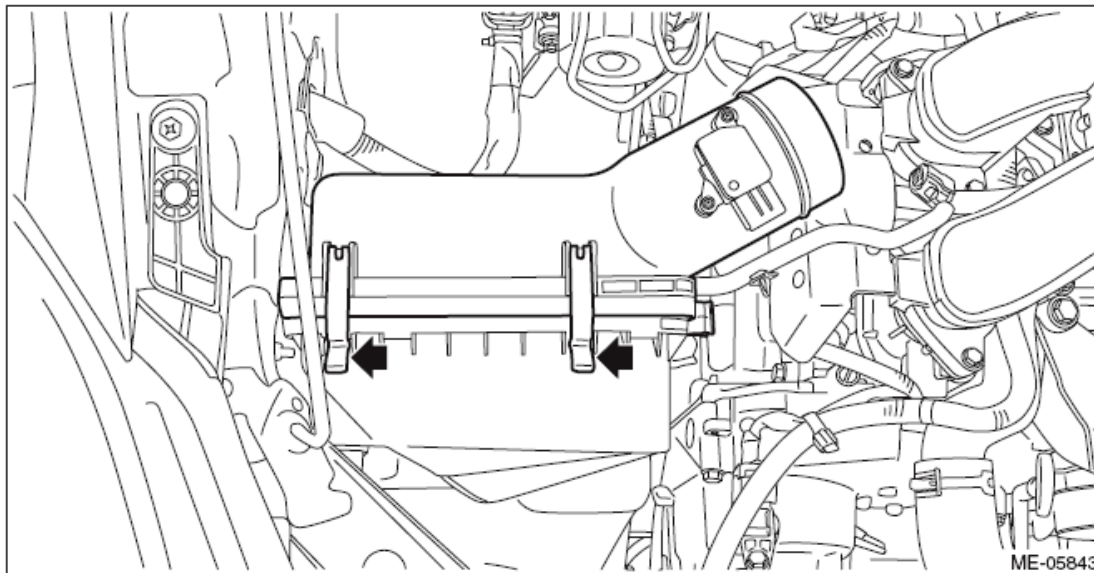


Fig. 166: Locating Air Intake Case (Rear)
 Courtesy of SUBARU OF AMERICA, INC.

33. Install the clip (A) which secures the air flow and intake air temperature sensor harness, and connect the connector to the air flow and intake air temperature sensor.

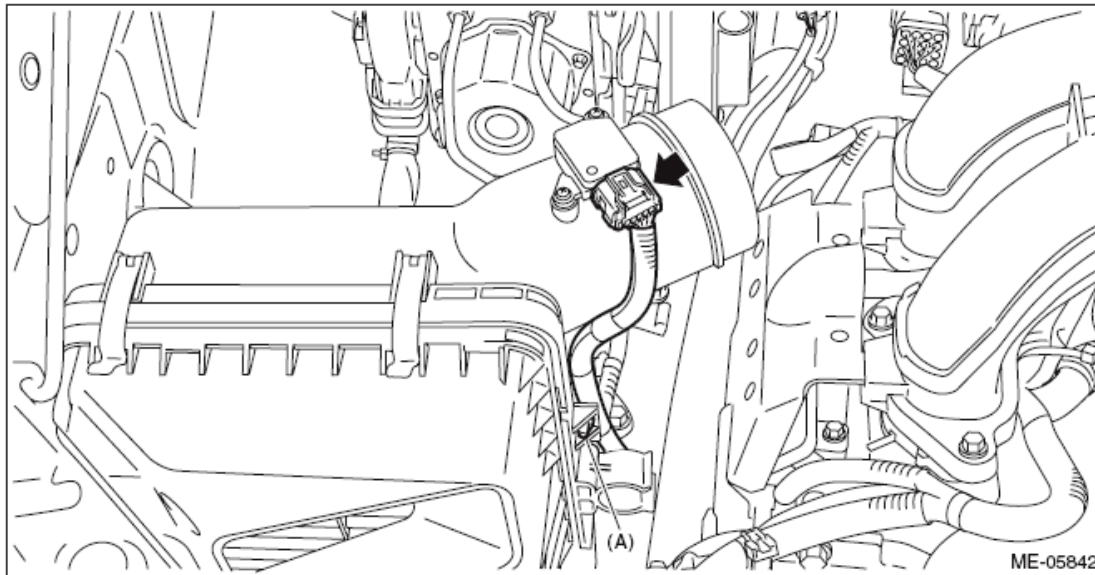


Fig. 167: Locating Air Flow And Intake Air Temperature Sensor Connector
Courtesy of SUBARU OF AMERICA, INC.

34. Install the air intake boot. < Ref. to **INSTALLATION** , Air Intake Boot.>
35. Install the air intake duct. < Ref. to **INSTALLATION** , Air Intake Duct.>
36. Connect the battery ground terminal.

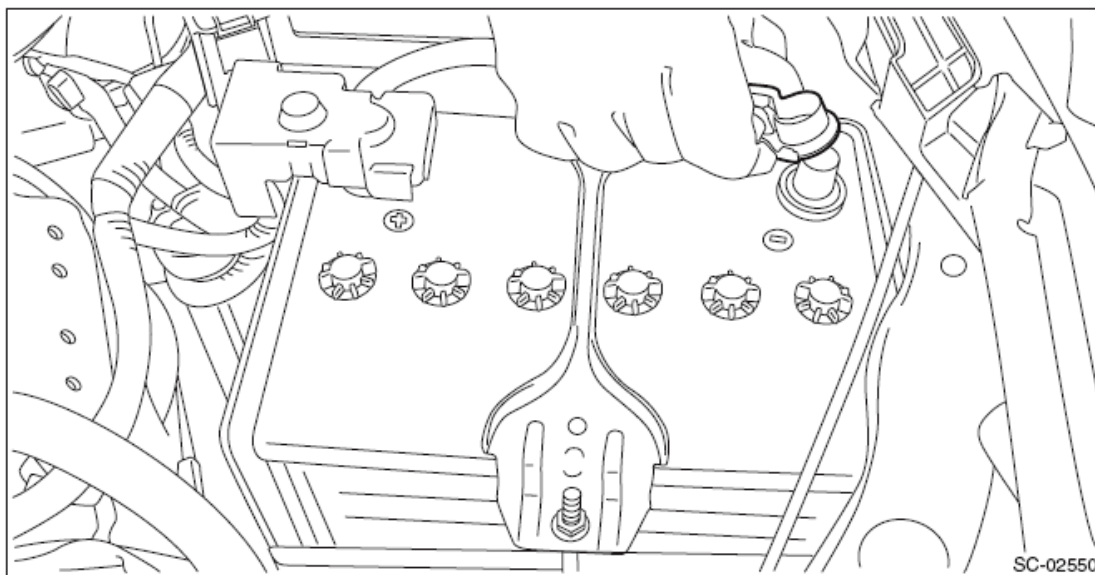


Fig. 168: Connecting Battery Ground Terminal
Courtesy of SUBARU OF AMERICA, INC.

37. Fill engine coolant. < Ref. to **FILLING OF ENGINE COOLANT** , REPLACEMENT, Engine Coolant.>
38. Check the CVTF level and replenish it if necessary. (CVT model) < Ref. to **ADJUSTMENT** , CVTF.>

39. Charge the A/C system with refrigerant. < Ref. to **PROCEDURE** , Refrigerant Charging Procedure.>
40. Install the V-belt cover.

Tightening torque:

6.4 N.m (0.7 kgf-m, 4.7 ft-lb)

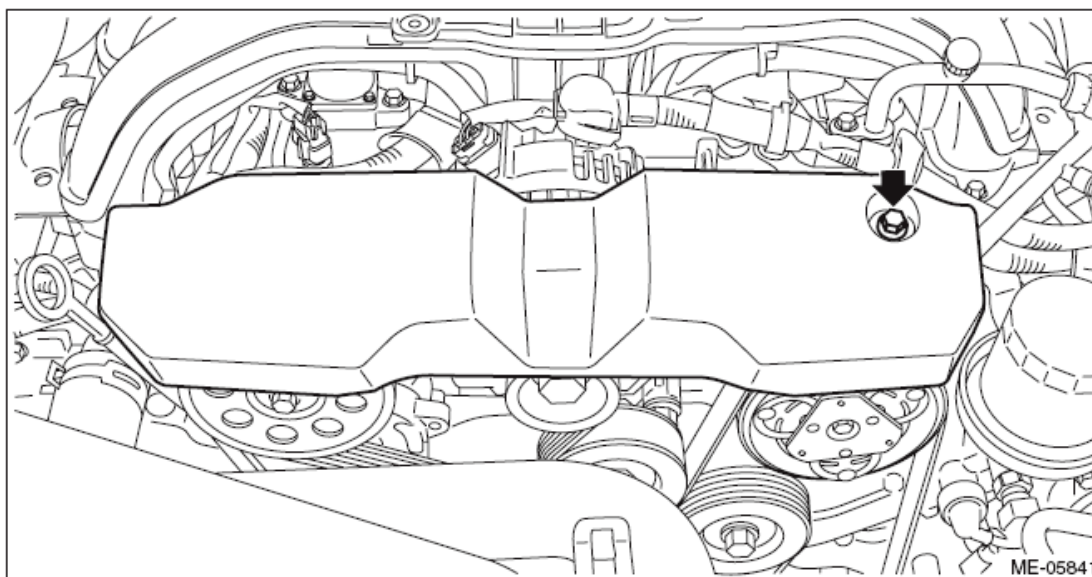


Fig. 169: Locating V-Belt Cover Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

41. Change the front hood stay position from (B) to (A).

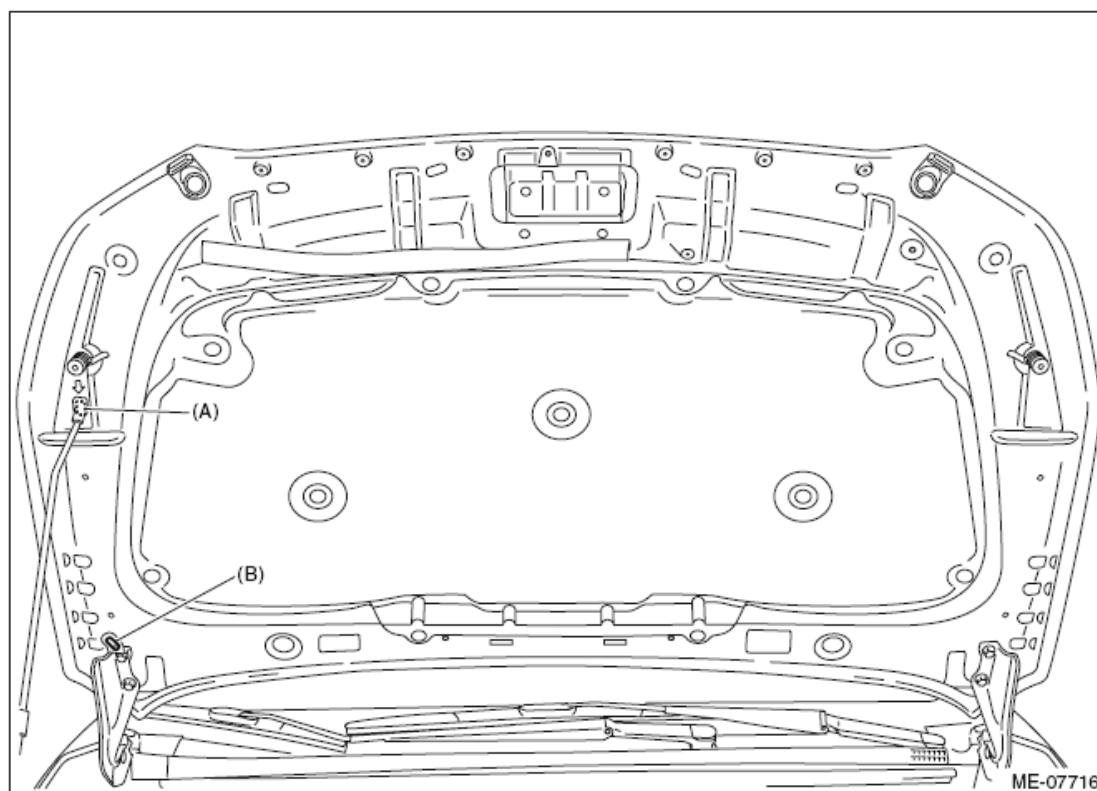


Fig. 170: Identifying Front Hood Stay Position
Courtesy of SUBARU OF AMERICA, INC.

42. Install the front hood striker to the front hood by aligning the alignment marks (A), and close the front hood.

Tightening torque:

33 N.m (3.4 kgf-m, 24.3 ft-lb)

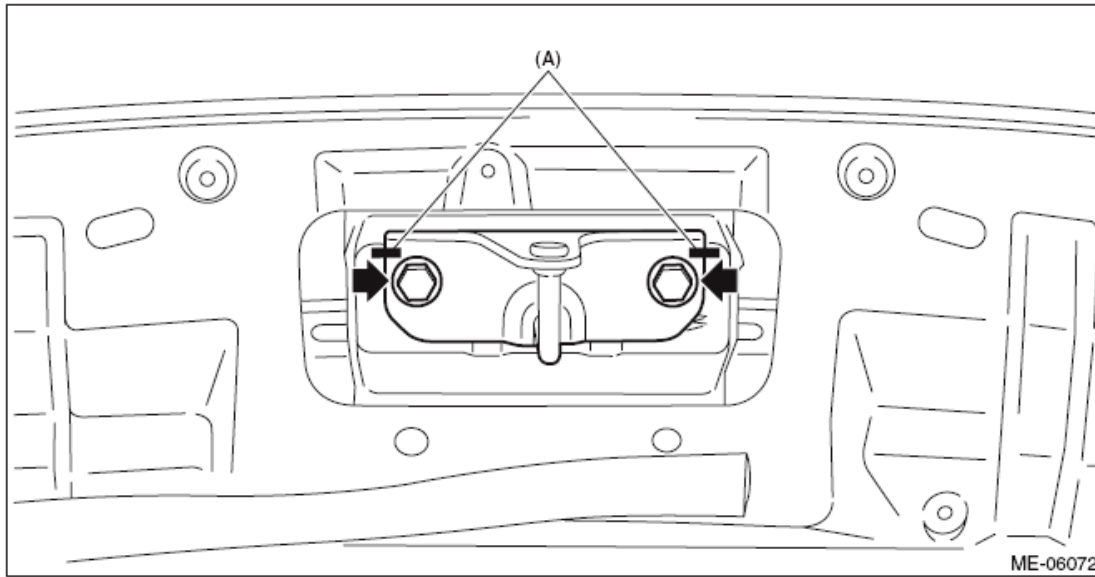


Fig. 171: Locating Front Hood Striker And Alignment Marks
 Courtesy of SUBARU OF AMERICA, INC.

HEV MODEL

1. Install the engine mounting onto the engine.

Tightening torque:

35 N.m (3.6 kgf-m, 25.8 ft-lb)

2. Position the engine in engine compartment and align it with transmission.

NOTE: Be careful not to damage adjacent parts or body panels with crank pulley, oil level gauge, etc.

3. Install the bolts which hold upper side of transmission to engine.

Tightening torque:

50 N.m (5.1 kgf-m, 36.9 ft-lb)

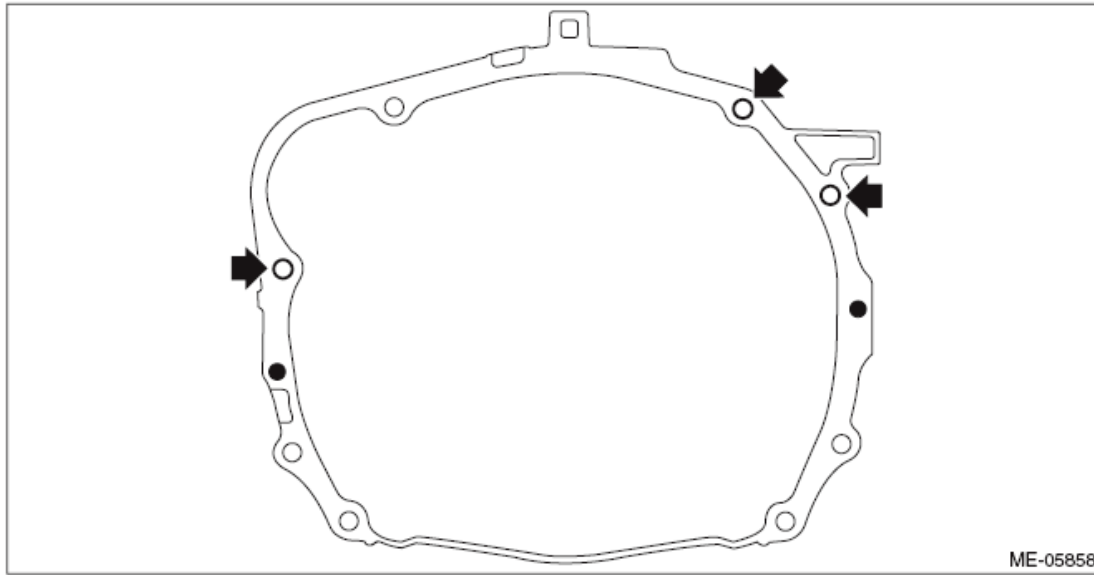


Fig. 172: Locating Upper Side Transmission To Engine Mounting Bolt
 Courtesy of SUBARU OF AMERICA, INC.

4. Remove the lifting device and wire ropes.

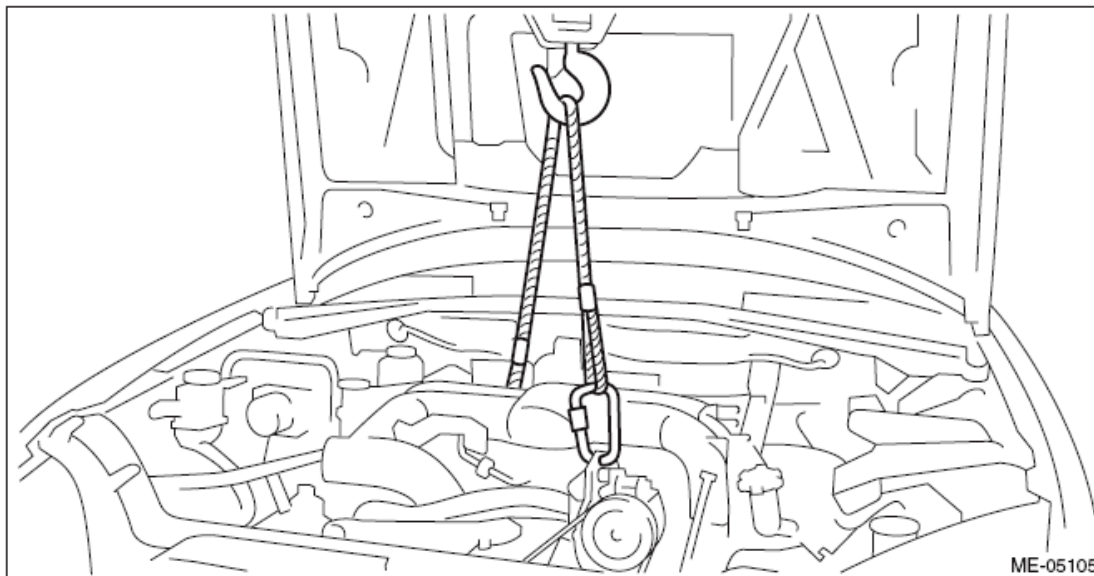


Fig. 173: Supporting Engine Using Lifting Device And Wire Ropes
 Courtesy of SUBARU OF AMERICA, INC.


5. Remove the garage jack.
6. Connect the fuel delivery tube and evaporation hose.
 1. Connect the evaporation hose (C) to fuel pipe assembly.
 2. Connect the quick connector (A) of the fuel delivery tube to the fuel pipe assembly, and secure the fuel delivery tube using clip (B).

CAUTION:

- Check that there is no damage or dust on the quick connector. If necessary, clean the seal surface of the pipe.
- When connecting the quick connector, make sure to insert the pipe all the way in before locking the slider.
- When it is difficult to lock the slider, check that the pipe is fully inserted.
- Make sure that the quick connector is securely connected.

NOTE:

Connect the quick connector as shown in the figure.

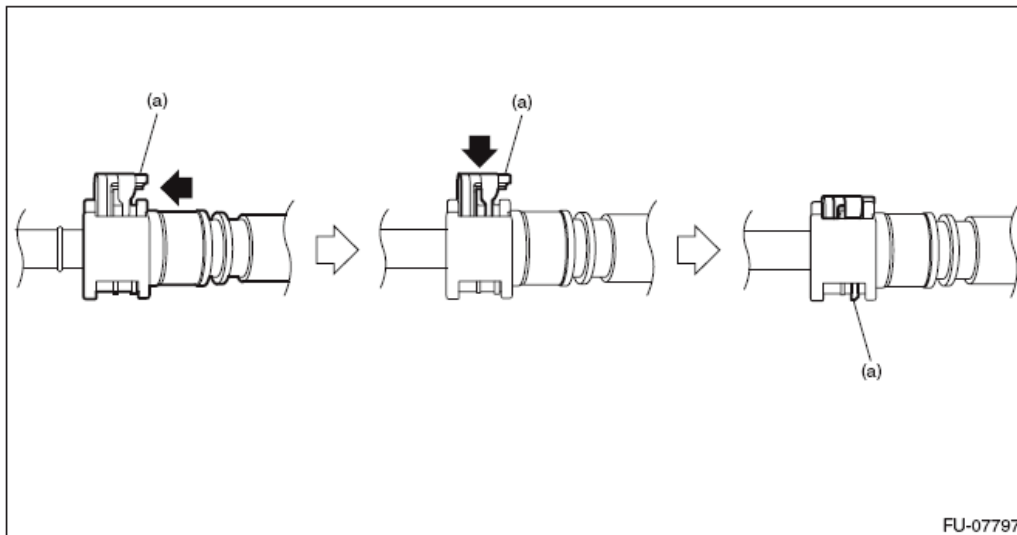

(a) Slider

Fig. 174: Connecting Quick Connector
 Courtesy of SUBARU OF AMERICA, INC.

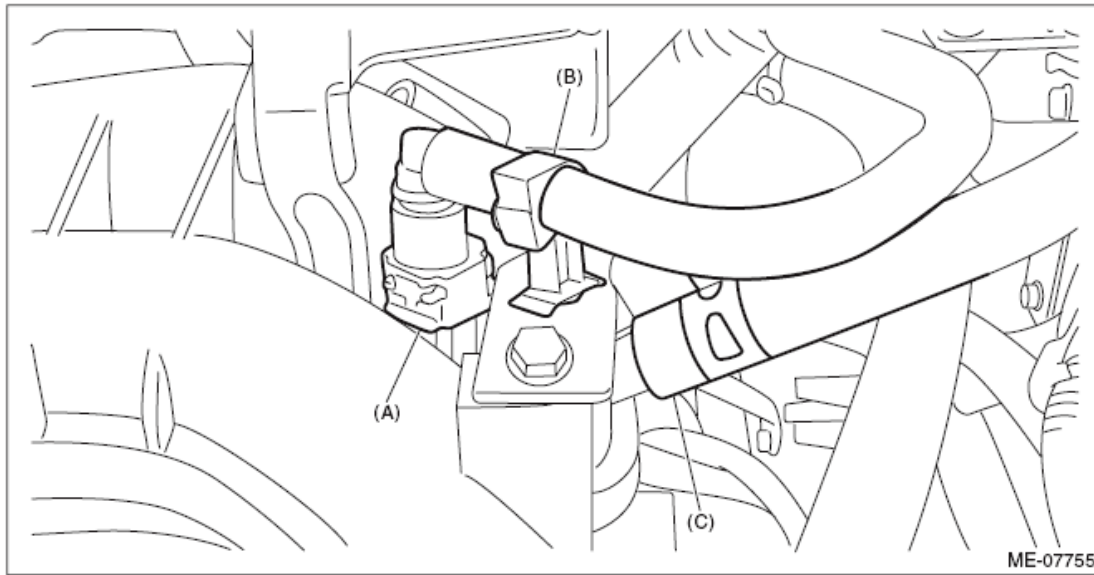


Fig. 175: Identifying Evaporator Hose, Quick Connector And Clip
Courtesy of SUBARU OF AMERICA, INC.

7. Remove the ST from torque converter clutch case.

NOTE: Be careful not to drop the ST into the torque converter clutch case when removing the ST.
ST 498277200 STOPPER SET

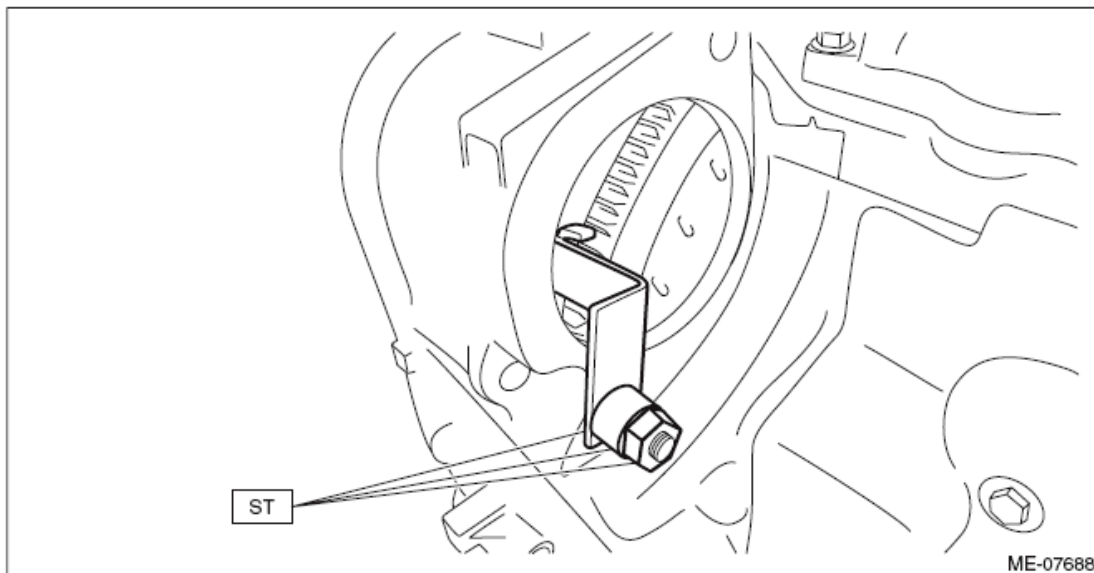


Fig. 176: Removing Stopper Set From Torque Converter Clutch Case
Courtesy of SUBARU OF AMERICA, INC.

8. Install the torque converter clutch to drive plate.

1. Insert the wrench into the crank pulley bolt and rotate the crank pulley to install the bolts which hold torque converter clutch to drive plate.

NOTE: Be careful not to drop bolts into the torque converter clutch case.

Tightening torque:

25 N.m (2.5 kgf-m, 18.4 ft-lb)


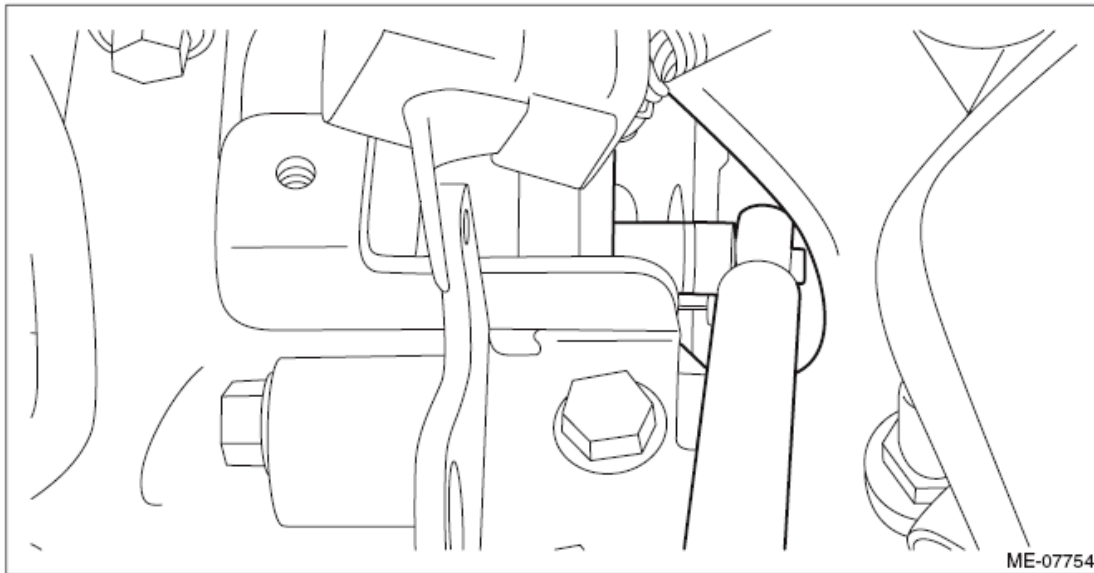


Fig. 177: Installing Torque Converter Clutch To Drive Plate Using Tool
Courtesy of SUBARU OF AMERICA, INC.

2. Fit the plug to service hole.
9. Install the starter. < Ref. to **INSTALLATION** , Starter.>
10. Set the CVTF cooler (with warmer feature) to the transmission, and install the bolts which secure the CVTF cooler (with warmer feature) to the transmission.

Tightening torque:


23 N.m (2.3 kgf-m, 17.0 ft-lb)

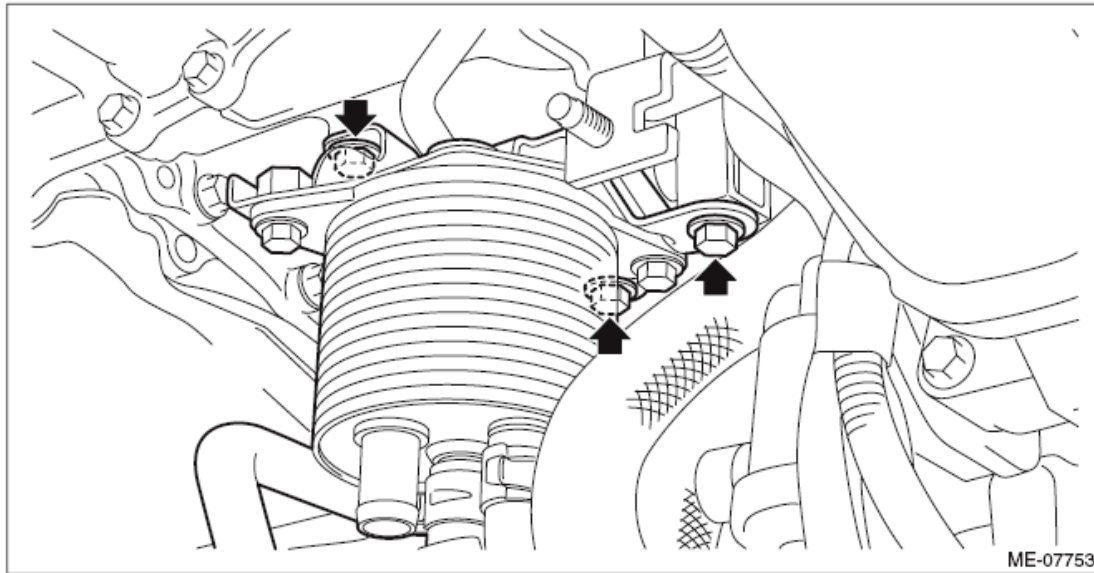

ME-07753

Fig. 178: Locating CVTF Cooler To Transmission Mounting Bolt
 Courtesy of SUBARU OF AMERICA, INC.

11. Connect the engine coolant inlet hose (A) to the EGR cooler, and connect the engine coolant outlet hose (B) to the CVTF cooler (with warmer feature).

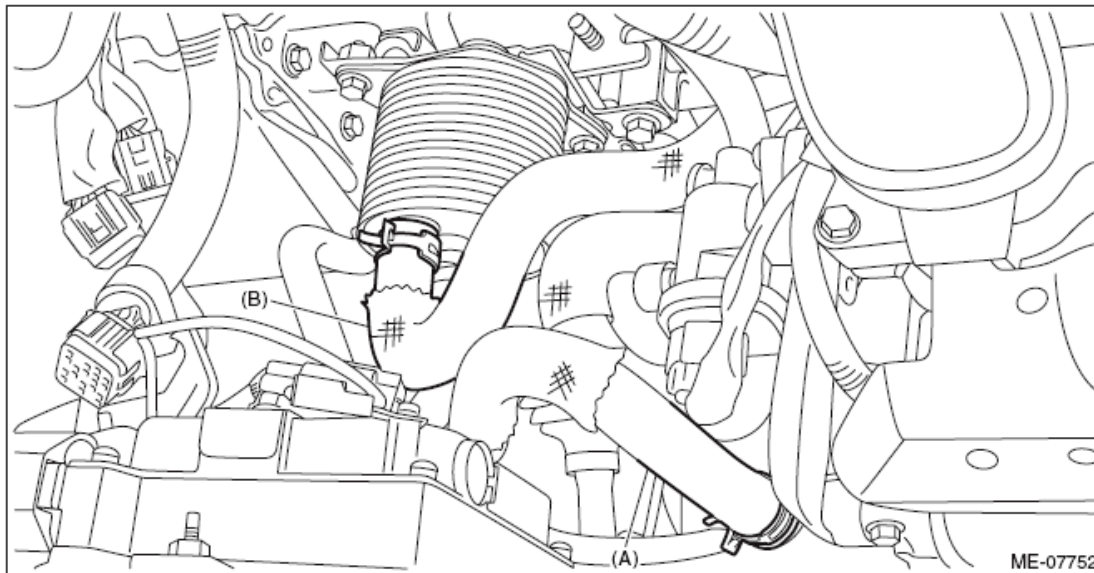

ME-07752

Fig. 179: Identifying Engine Coolant Inlet And Outlet Hose
 Courtesy of SUBARU OF AMERICA, INC.

12. Install the bolts which secure the purge control solenoid valve bracket to the intake manifold, and secure the engine harness to the purge control solenoid valve bracket with the clip (A).

Tightening torque:

6.4 N.m (0.7 kgf-m, 4.7 ft-lb)

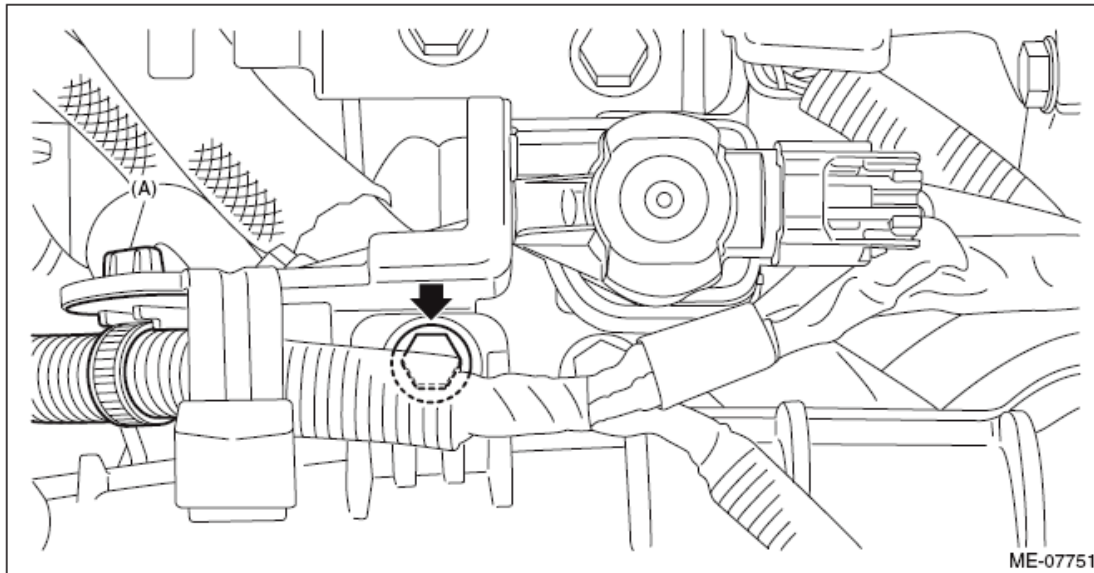


Fig. 180: Locating Purge Control Solenoid Valve Bracket To Intake Manifold Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

13. Remove the bolt and turn the transmission harness counterclockwise to install the transmission harness to the control valve body.

Tightening torque:

7 N.m (0.7 kgf-m, 5.2 ft-lb)

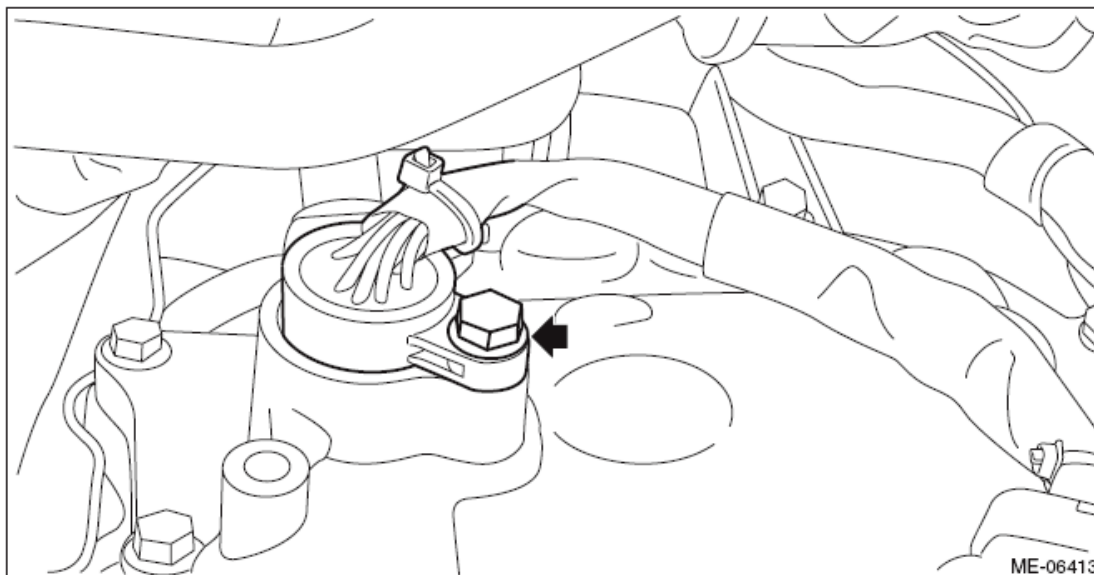


Fig. 181: Locating Transmission Harness Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

14. Install the bolt which holds the transmission harness stay.

Tightening torque:

7 N.m (0.7 kgf-m, 5.2 ft-lb)

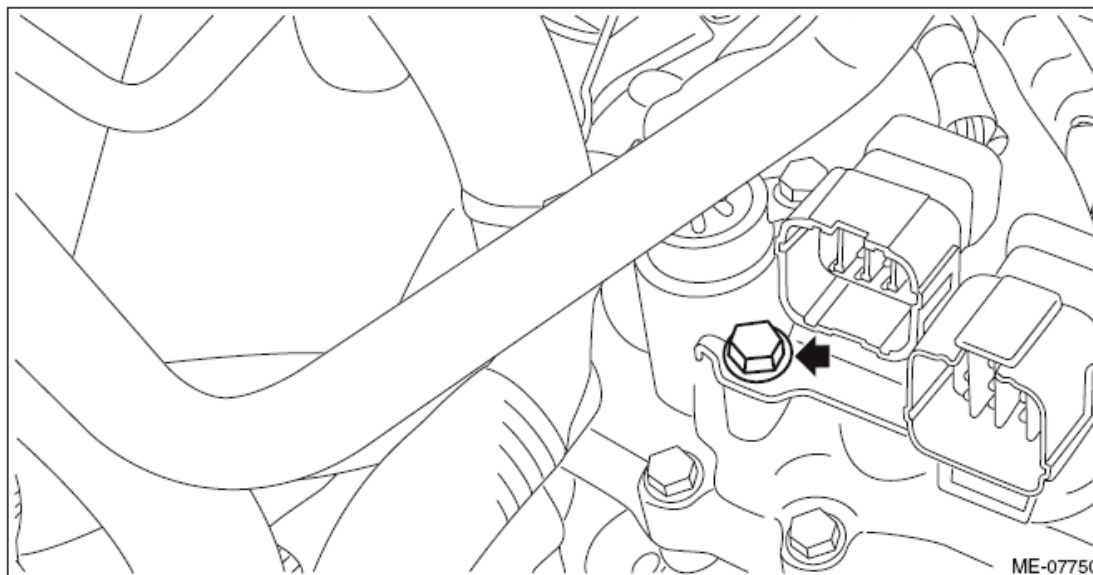


Fig. 182: Locating Transmission Harness Stay Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

15. Install the transmission case cover.

Tightening torque:

8 N.m (0.8 kgf-m, 5.9 ft-lb)

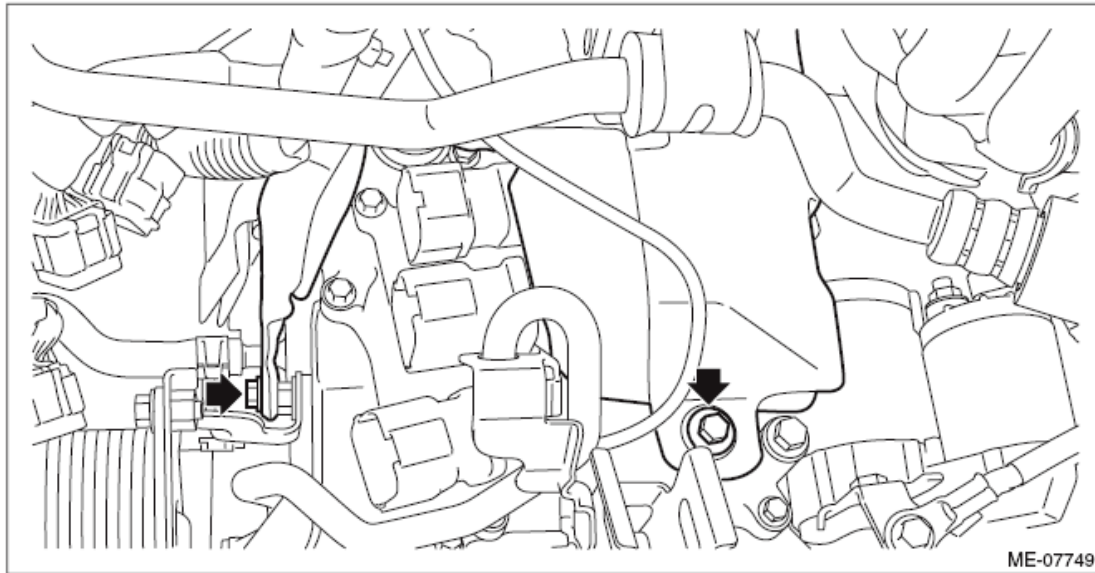


Fig. 183: Locating Transmission Case Cover Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

16. Connect the bulkhead harness connector to the transmission harness connector (C), inhibitor harness connector (D) and drive motor harness connector (E).
17. Connect the bulkhead harness connector to the engine harness connector (brown) (B), and install the bolt (A) securing the bulkhead harness connector bracket.

Tightening torque:

7.5 N.m (0.8 kgf-m, 5.5 ft-lb)

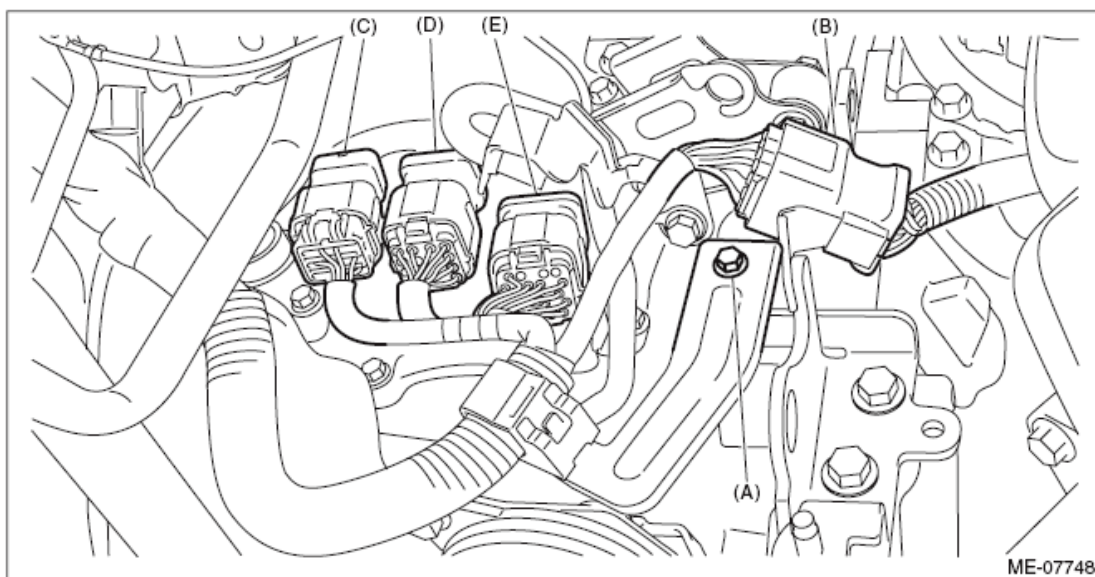


Fig. 184: Locating Transmission Harness Stay Mounting Bolt

Courtesy of SUBARU OF AMERICA, INC.

18. Install the pitching stopper, and connect the transmission radio ground terminal (A) to the vehicle.

Tightening torque:

T1: 13 N.m (1.3 kgf-m, 9.6 ft-lb)

T2: 50 N.m (5.1 kgf-m, 36.9 ft-lb)

T3: 58 N.m (5.9 kgf-m, 42.8 ft-lb)

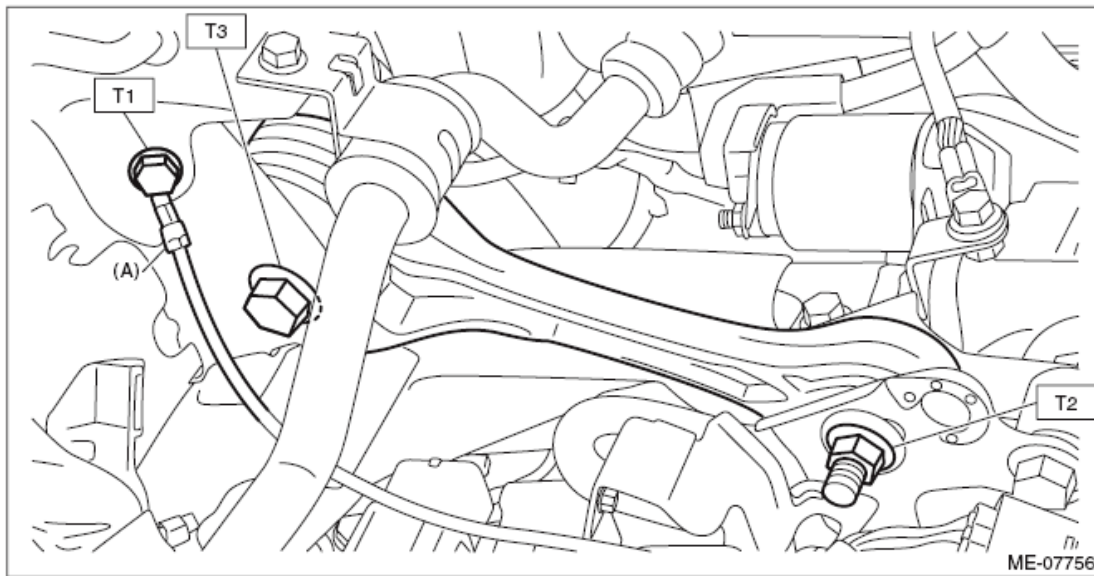


Fig. 185: Locating Transmission Case Cover Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

19. Lift up the vehicle.
20. Install the nuts which hold the engine mounting to the crossmember.

NOTE: Make sure that locators (A) of the engine mounting are securely inserted.

Tightening torque:

45 N.m (4.6 kgf-m, 33.2 ft-lb)

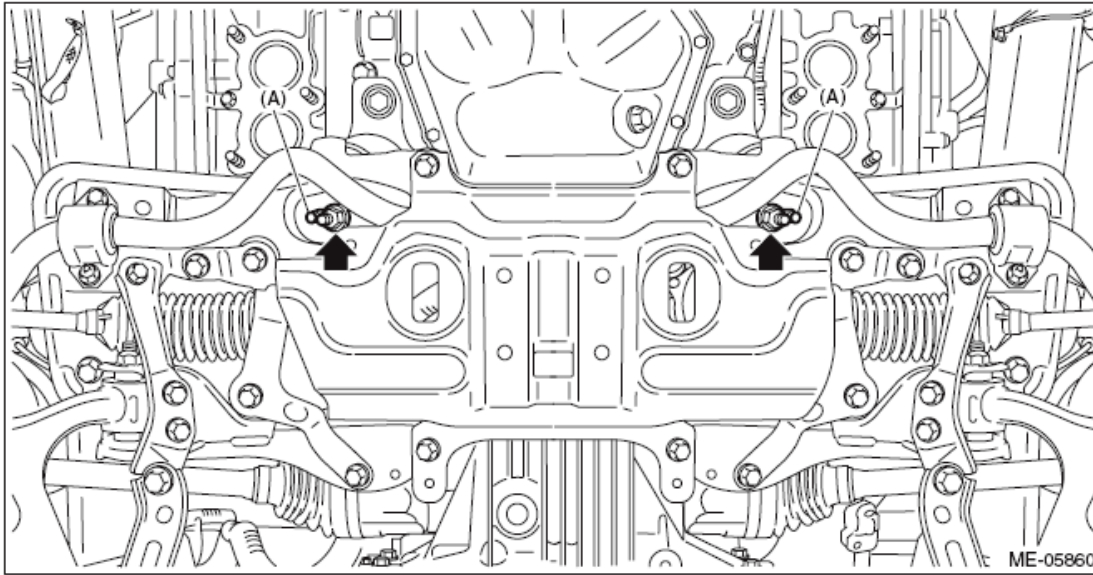


Fig. 186: Locating Engine Mounting To Crossmember Mounting Nut
Courtesy of SUBARU OF AMERICA, INC.

21. Install the bolts and nuts which hold lower side of the transmission to engine.

Tightening torque:

50 N.m (5.1 kgf-m, 36.9 ft-lb)

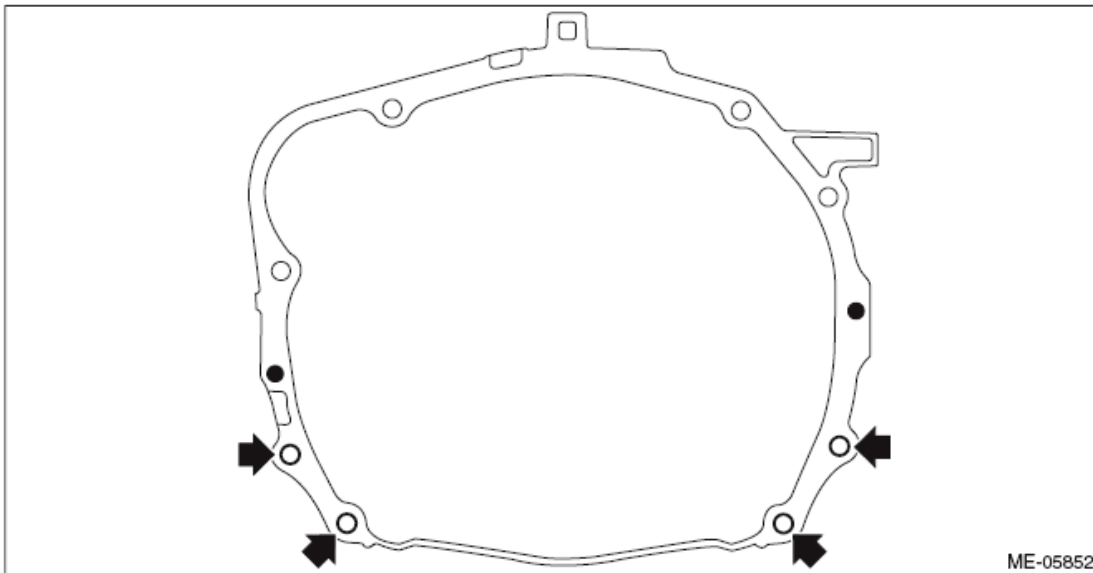


Fig. 187: Locating Lower Side Transmission To Engine Mounting Bolts And Nuts
Courtesy of SUBARU OF AMERICA, INC.

22. Connect the ground cable.


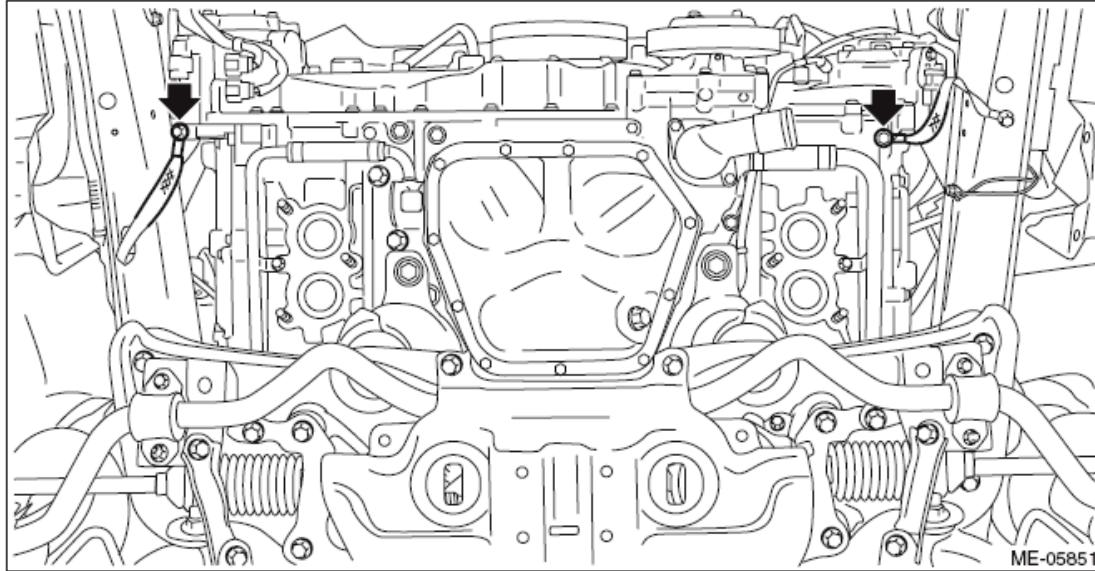
Tightening torque:***7.5 N.m (0.8 kgf-m, 5.5 ft-lb)***

Fig. 188: Locating Ground Cable
Courtesy of SUBARU OF AMERICA, INC.

23. Install the front exhaust pipe. < Ref. to **INSTALLATION** , Front Exhaust Pipe.>
24. Lower the vehicle.
25. Connect the brake booster vacuum hose (C) to the brake vacuum pipe.
26. Connect the heater inlet hose (A) to the water pipe assembly, and connect the heater outlet hose (B) to the water pipe LH.

NOTE: **Be careful not to mix up the heater inlet hose and the heater outlet hose when connecting them.**

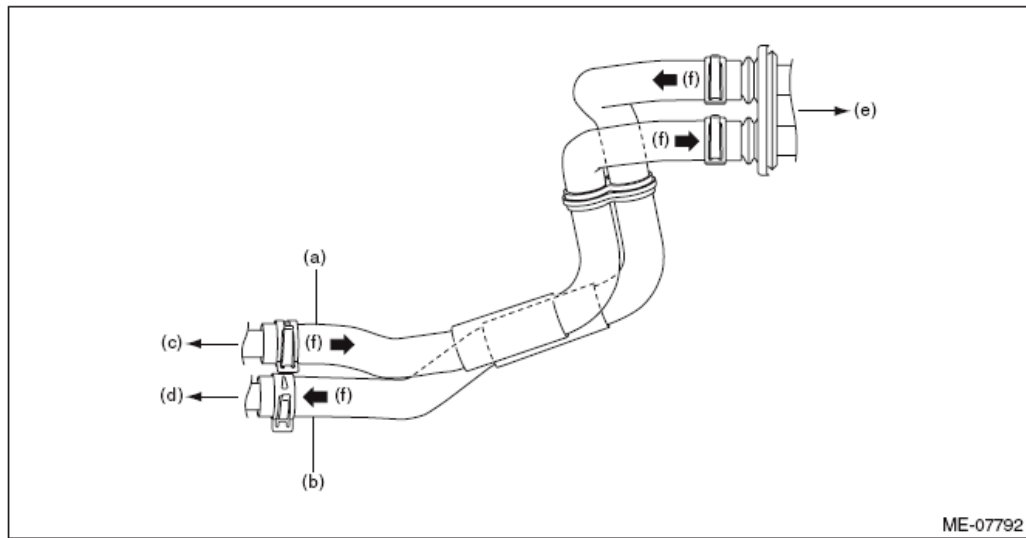

- | | | |
|------------------------|------------------------|-------------------------|
| (a) Heater inlet hose | (c) To water pipe ASSY | (e) To heater core ASSY |
| (b) Heater outlet hose | (d) To water pipe LH | (f) Engine coolant flow |

Fig. 189: Heater Inlet And Outlet Hose Operation Diagram
Courtesy of SUBARU OF AMERICA, INC.

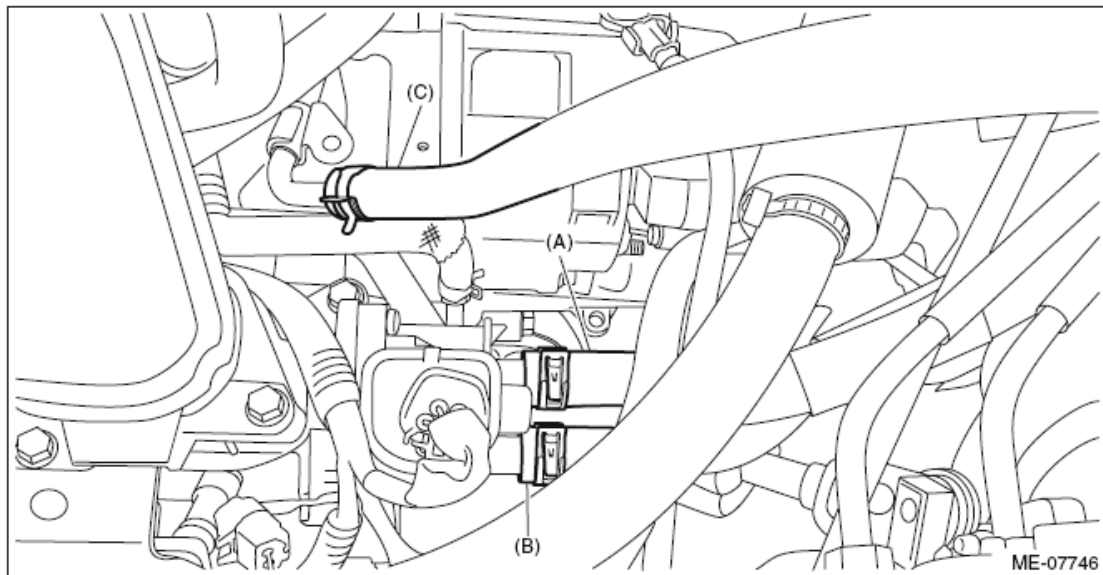


Fig. 190: Identifying Brake Booster Vacuum, Heater Inlet And Outlet Hose
Courtesy of SUBARU OF AMERICA, INC.

27. Connect the A/C pressure hose to A/C compressor. < Ref. to **REMOVAL** , Hose and Pipe.>
28. Set the battery cable assembly, and secure the battery cable assembly to the battery cable bracket No. 1 with the clip (C).
29. Connect the terminal (A) and the terminal (B) to ISG.

Tightening torque:

T1: 7.5 N.m (0.8 kgf-m, 5.5 ft-lb)

T2: 15.5 N.m (1.6 kgf-m, 11.4 ft-lb)

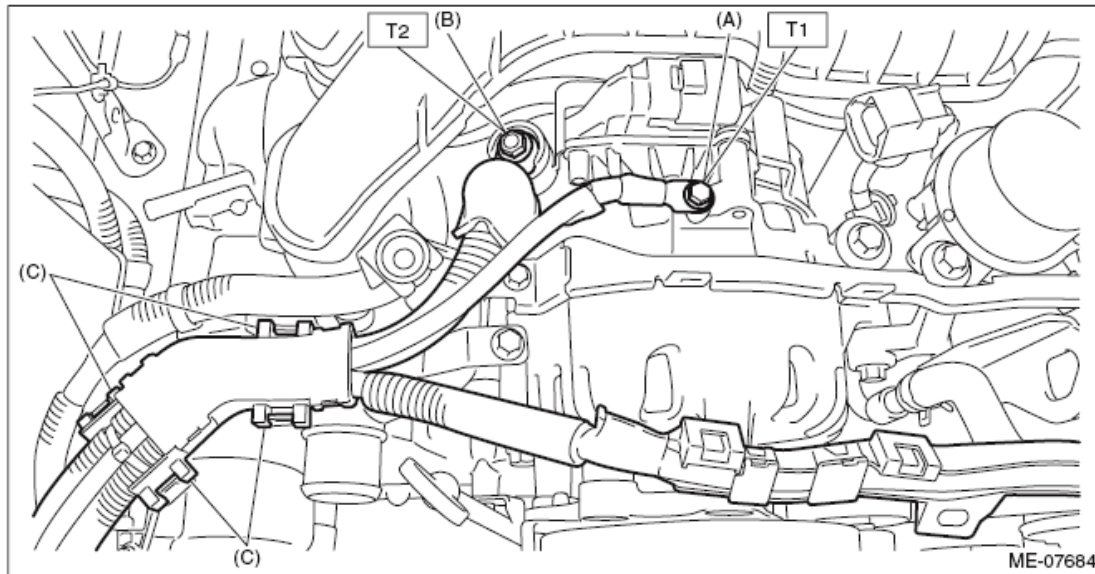


Fig. 191: Identifying Battery Terminal And Clip
Courtesy of SUBARU OF AMERICA, INC.

30. Secure the battery cable assembly to the collector cover bracket with the clip (B), and install the bolt (A) which secures the battery cable stay to the chain cover.

NOTE: When installing the battery cable stay, install it by fitting the folded end (a) of the battery cable stay to the chain cover boss.

Tightening torque:

6.4 N.m (0.7 kgf-m, 4.7 ft-lb)

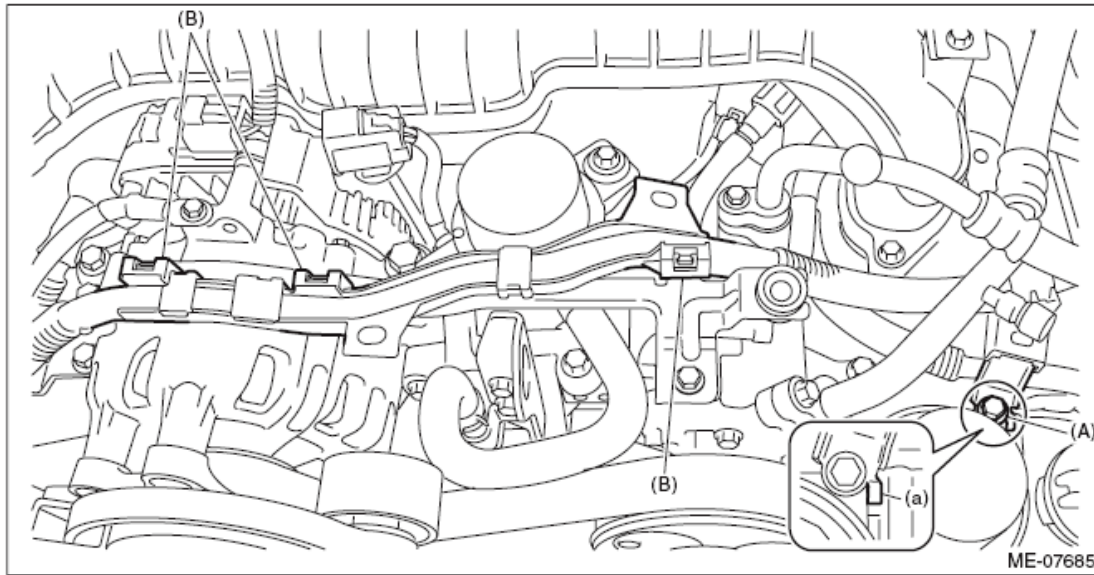


Fig. 192: Identifying Collector Cover Bracket Clip And Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

31. Install the battery cable assembly to the main fuse box, and install the nut which secures the battery cable assembly to the slow blow fuse (12 volt auxiliary battery).

Tightening torque:

7.5 N.m (0.8 kgf-m, 5.5 ft-lb)

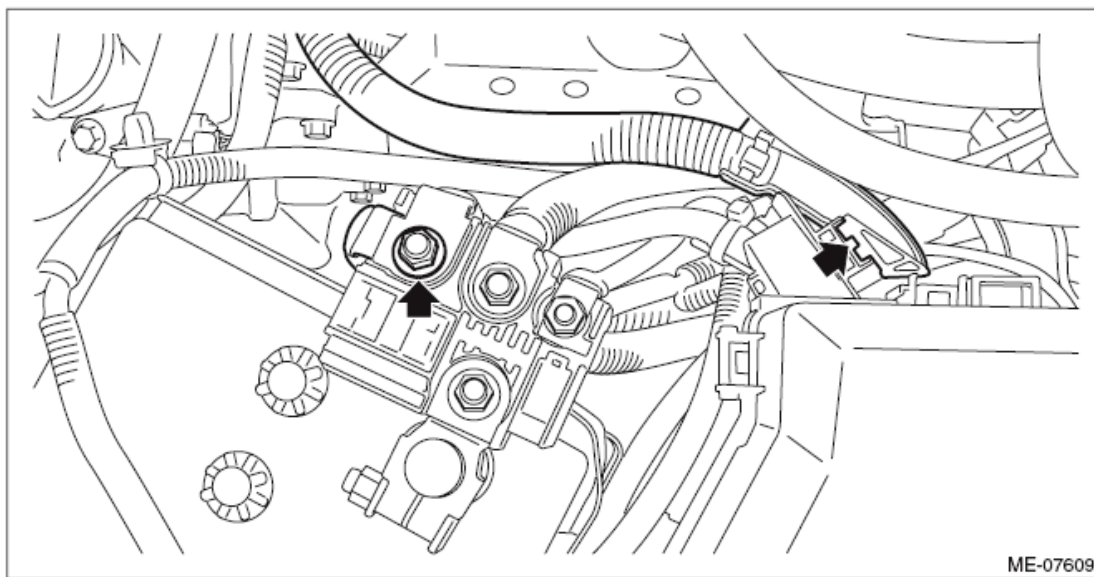


Fig. 193: Locating Battery Cable Assembly To Main Fuse Box Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

32. Install the terminal boot to the positive terminal of the 12 volt auxiliary battery.

33. Set the harness, and secure the harness to the battery cable assembly with the clip (C) and the clip (D).
34. Connect the connector (A) to the brake vacuum pump, and connect the connector (B) to the A/C compressor.

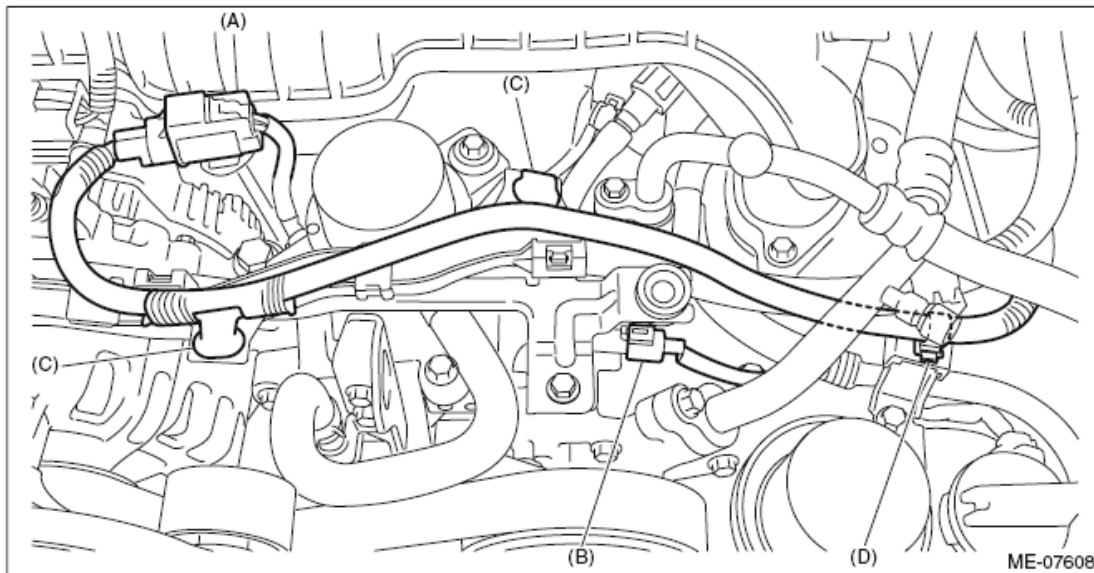


Fig. 194: Identifying Battery Cable Assembly Connector And Clip
Courtesy of SUBARU OF AMERICA, INC.

35. Install the engine harness connector (black) to bracket, then connect the bulkhead harness connector to the engine harness connector (black).

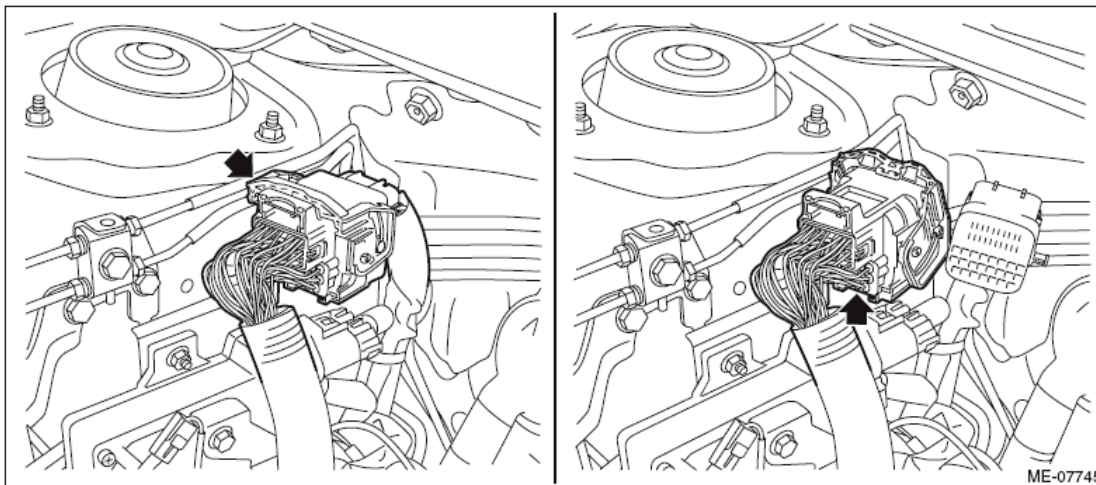


Fig. 195: Locating Engine Harness Connector
Courtesy of SUBARU OF AMERICA, INC.

36. Install the radiator. < Ref. to **INSTALLATION** , Radiator.>
37. Install the air cleaner case. < Ref. to **INSTALLATION** , Air Cleaner Case.>

38. Install the air intake duct. < Ref. to **INSTALLATION** , Air Intake Duct.>
39. Connect the battery ground terminal. < Ref. to **BATTERY** , NOTE, Note.>
40. Fill engine coolant. < Ref. to **FILLING OF ENGINE COOLANT** , REPLACEMENT, Engine Coolant.>
41. Charge the A/C system with refrigerant. < Ref. to **PROCEDURE** , Refrigerant Charging Procedure.>
42. Install the collector cover.
43. Change the front hood stay position from (B) to (A).

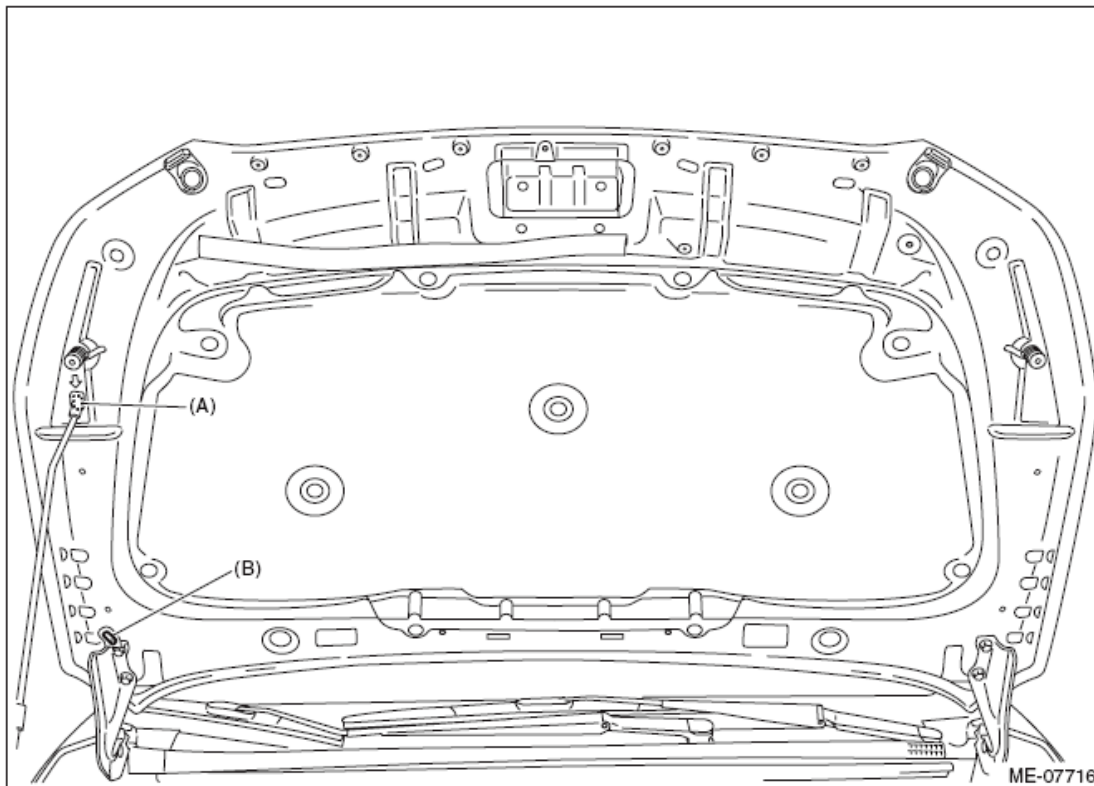


Fig. 196: Identifying Front Hood Stay Position
Courtesy of SUBARU OF AMERICA, INC.

44. Install the front hood striker to the front hood by aligning the alignment marks (A), and close the front hood.

Tightening torque:

33 N.m (3.4 kgf-m, 24.3 ft-lb)

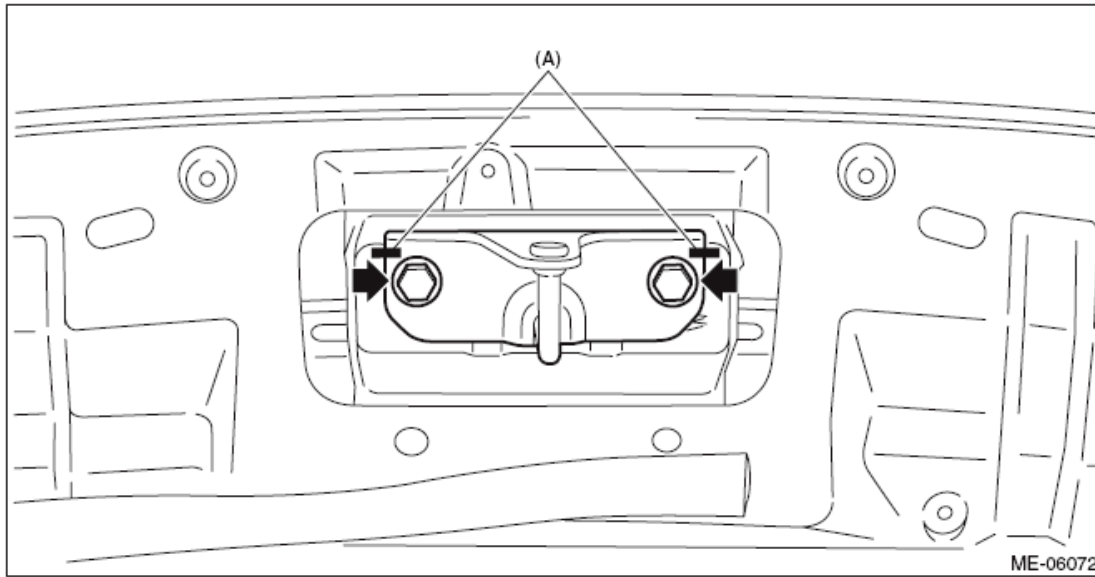


Fig. 197: Locating Front Hood Striker And Alignment Marks
Courtesy of SUBARU OF AMERICA, INC.

INSPECTION

1. Check that pipes, hoses, connectors and clamps are installed firmly.
2. Check the engine coolant is at specified level.
3. Check CVTF is at the specified level. (CVT model)
4. Start the engine and check for exhaust gas, engine coolant, leaks of fuel, etc. Also check for noise and vibrations.

ENGINE MOUNTING

REMOVAL

1. Remove the front crossmember. < Ref. to **REMOVAL** , Front Crossmember.>
2. Remove the engine mounting from the engine.

INSTALLATION

Install in the reverse order of removal.

Tightening torque:

35 N.m (3.6 kgf-m, 25.8 ft-lb)

INSPECTION

Make sure that there are no cracks or other damages.

PREPARATION FOR OVERHAUL

PROCEDURE

1. After removing the engine from the vehicle body, attach the ST to the engine as shown in the figure.

NOTE: When using a commercially sold engine stand, follow the instructions of engine stand used.

Tightening torque:

35 N.m (3.6 kgf-m, 25.8 ft-lb)

ST1 498457000 ENGINE STAND ADAPTER RH

ST2 498457100 ENGINE STAND ADAPTER LH

ST3 18362AA020 ADAPTER

ST4 499817100 ENGINE STAND

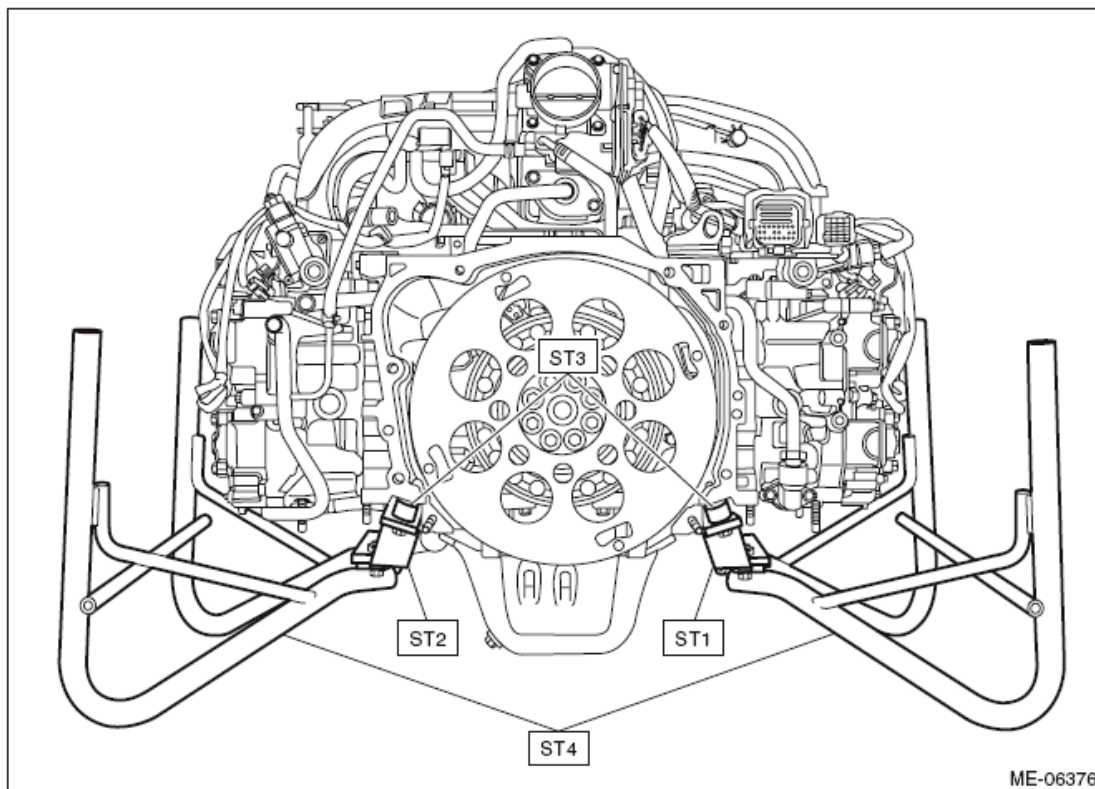


Fig. 198: Attaching Engine Stand And Adapter To Engine
Courtesy of SUBARU OF AMERICA, INC.

2. In this section the procedures described under each index are all connected and stated in order. The procedure for overhauling of the engine will be completed when you go through all steps in the process.

Therefore, in this section, to conduct the particular procedure within the flow of a section, you need to go back and conduct the procedure described previously in order to do that particular procedure.

V-BELT

REMOVAL

NOTE: When replacing a single part, perform the work with the engine assembly installed to body.

GASOLINE ENGINE MODEL

V-Belt

1. When working on the vehicle

NOTE: When working on the vehicle, perform the following steps also.

1. Remove the V-belt covers.

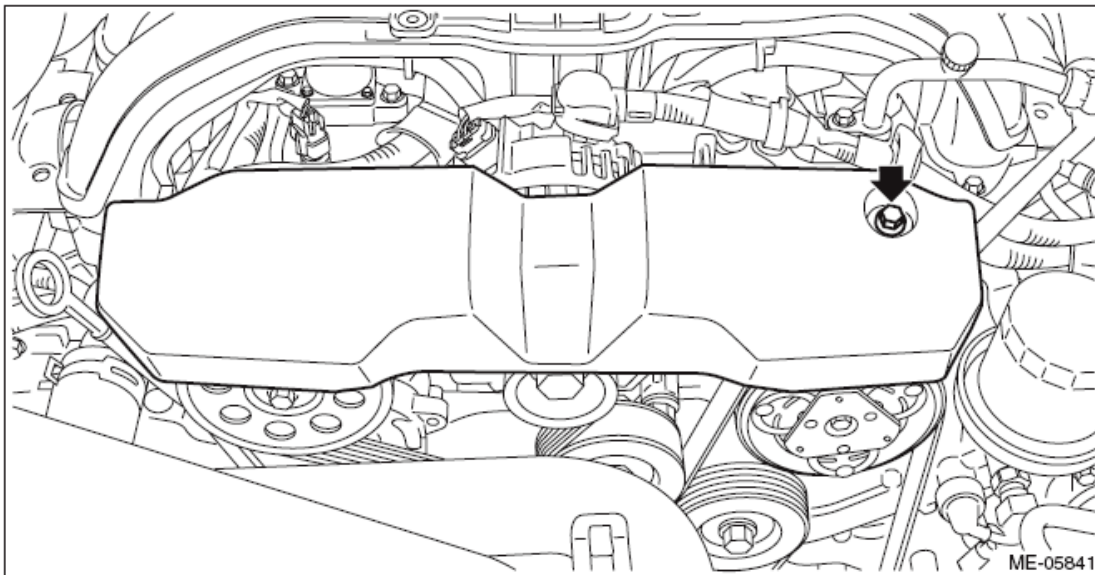


Fig. 199: Locating V-Belt Cover Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

2. Remove the air intake duct. < Ref. to **REMOVAL** , Air Intake Duct.>
2. Attach the tool to the V-belt tensioner assembly, and rotate the tool clockwise to loosen and remove the V-belt.

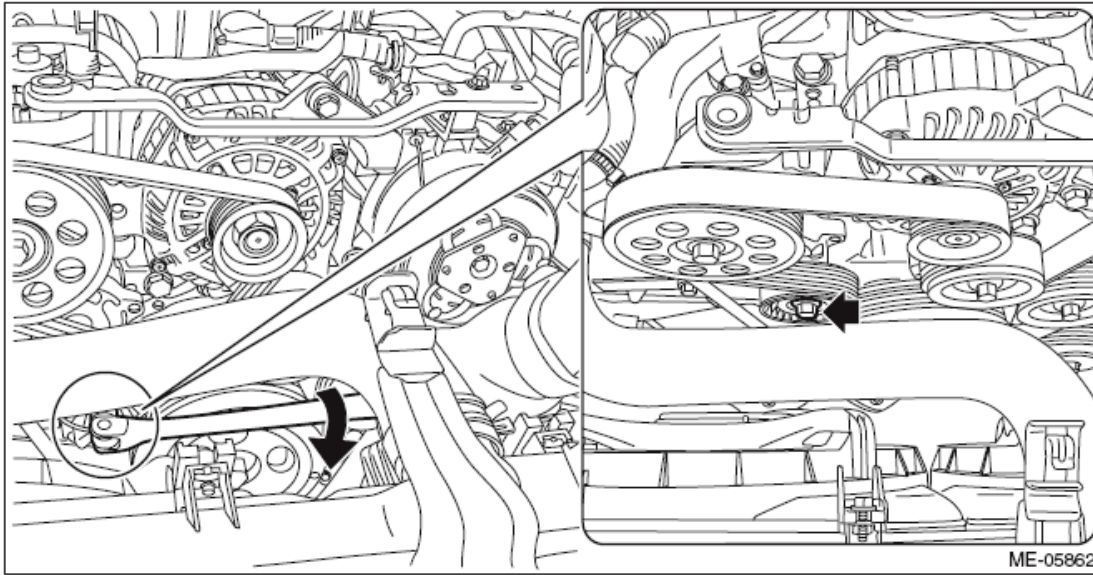


Fig. 200: Removing V-Belt Using Tool
Courtesy of SUBARU OF AMERICA, INC.

V-Belt Tensioner Assembly And Idler Pulley

1. Remove the V-belts.
2. Remove the cap from V-belt tensioner assembly.

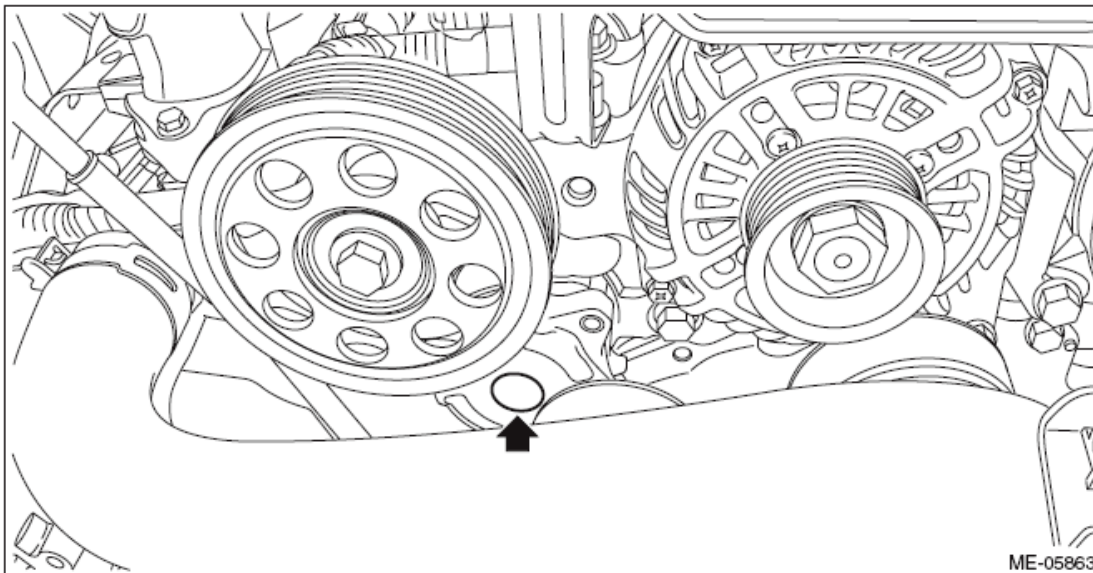


Fig. 201: Locating V-Belt Tensioner Assembly Cap
Courtesy of SUBARU OF AMERICA, INC.

3. Remove the bolt securing the V-belt tensioner assembly to the generator bracket, and remove the V-belt tensioner assembly.


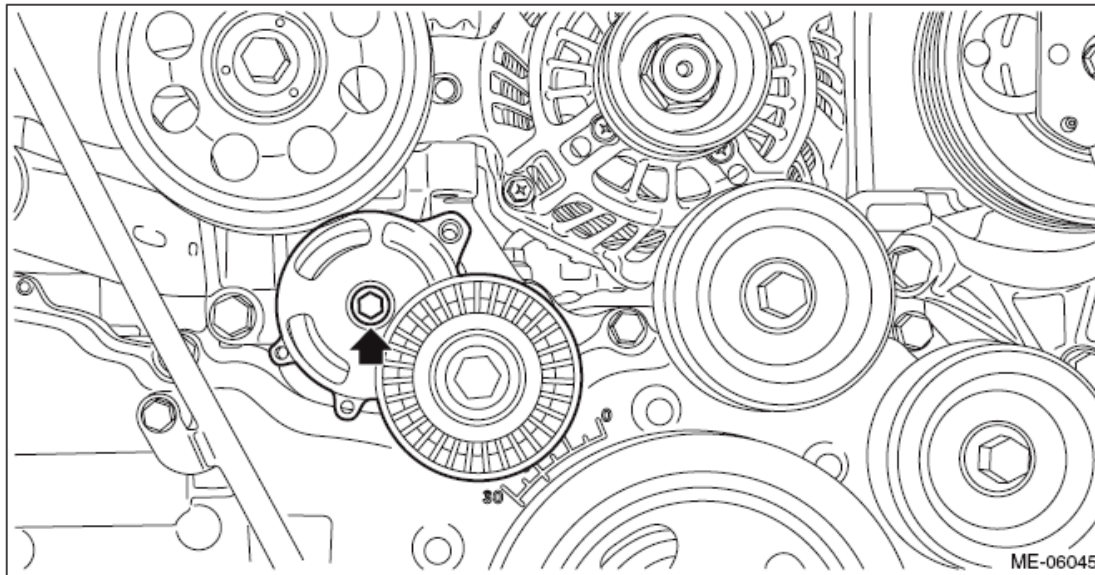


Fig. 202: Locating V-Belt Tensioner Assembly To Generator Bracket Mounting Bolt
 Courtesy of SUBARU OF AMERICA, INC.

4. Remove the bolts which secure the idler pulley to the generator bracket chain cover, and remove the idler pulley.

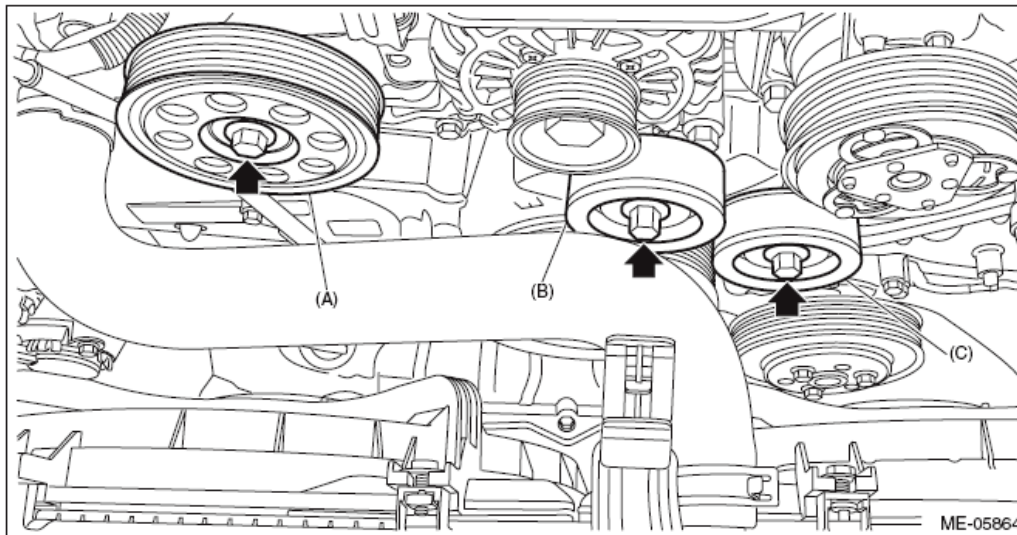

(A) Idler pulley A

(B) Idler pulley B

(C) Idler pulley C

Fig. 203: Locating Idler Pulley Mounting Bolt
 Courtesy of SUBARU OF AMERICA, INC.

HEV MODEL

V-Belt Tensioner Assembly And V-Belt

1. When working on the vehicle

NOTE: When working on the vehicle, perform the following steps also.

1. Turn the ignition switch to OFF.
2. Remove the collector cover.

1. Pull up the two points at the front of collector cover (A).
2. Pull up the two points at the rear of collector cover (B) while moving them rearward.

NOTE: Be careful not to contact the fuel delivery tube when moving the collector cover rearward.

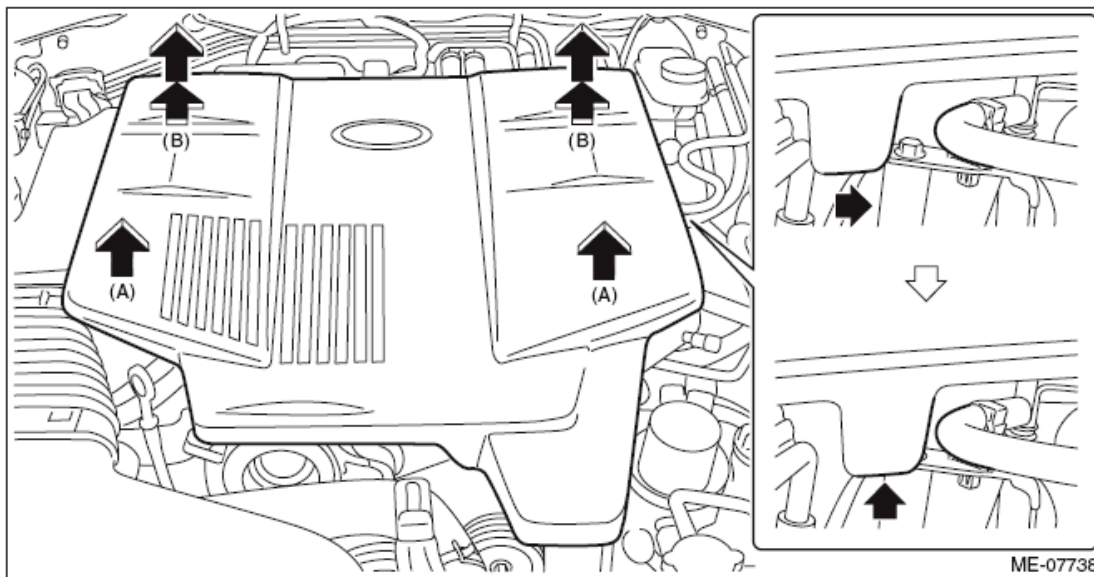


Fig. 204: Removing Collector Cover (HEV Model)
Courtesy of SUBARU OF AMERICA, INC.

2. Prepare for removing the V-belt tensioner assembly. (The V-belt is not damaged.)
 1. Set the tool on the arm lever No. 1, turn the tool counterclockwise until the protrusion (A) of the arm lever No. 1 moves to the position shown in the figure, and insert the ST into the stopper pin hole (B) on the arm lever No. 2.

ST 499267300 STOPPER PIN

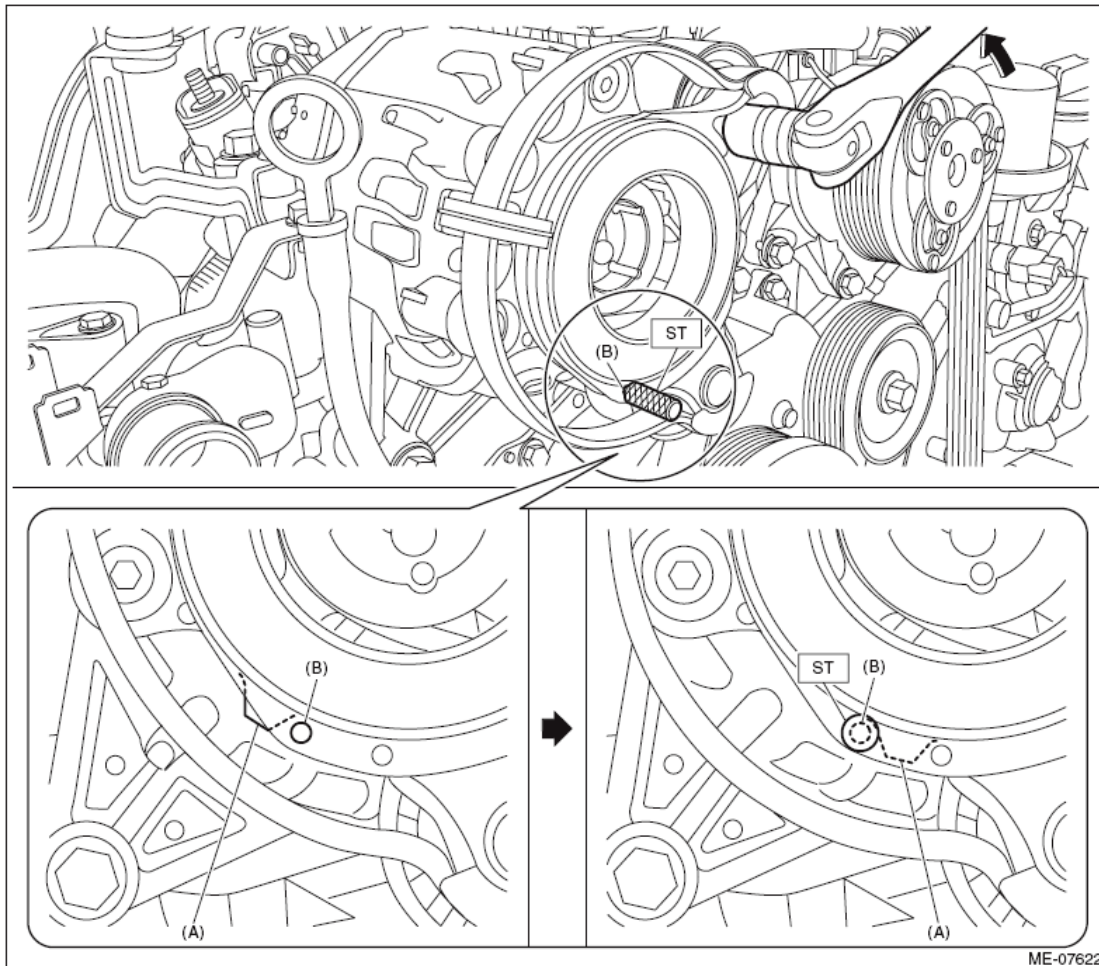


Fig. 205: Removing V-Belt Tensioner Assembly Using Tool
Courtesy of SUBARU OF AMERICA, INC.

3. Prepare for removing the V-belt tensioner assembly. (The V-belt is damaged.)

NOTE: This operation requires 2 pieces of ST: STOPPER PIN (499267300).

1. Turn the arm lever until the stopper pin hole (A) of the arm lever No. 2 is aligned with the stopper pin hole (B) of the housing, and insert the ST through the stopper pin hole (A) of the arm lever No. 2 into the end of the stopper pin hole (B) of the housing.

CAUTION: Be sure to insert the ST into the end of the stopper pin hole (B) of the housing. If the ST is not inserted to the end, the ST may accidentally come off in the next procedure, resulting in an injury.

ST 499267300 STOPPER PIN

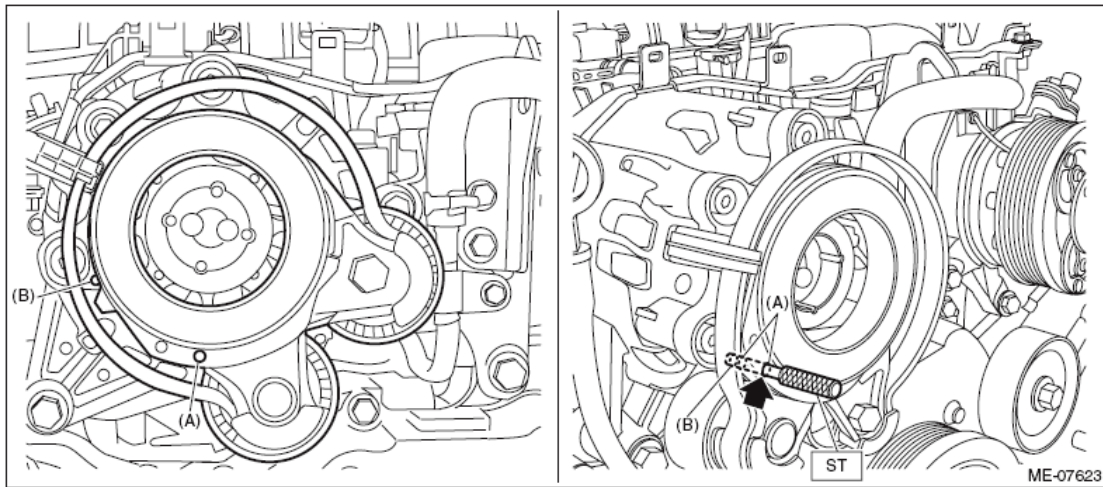


Fig. 206: Removing V-Belt Tensioner Assembly Using Tool
Courtesy of SUBARU OF AMERICA, INC.

2. Set the tool on the arm lever No. 1, turn the tool counterclockwise until the protrusion (A) of the arm lever No. 1 moves to the position shown in the figure, and insert the ST into the stopper pin hole (B) on the arm lever No. 2.

ST 499267300 STOPPER PIN

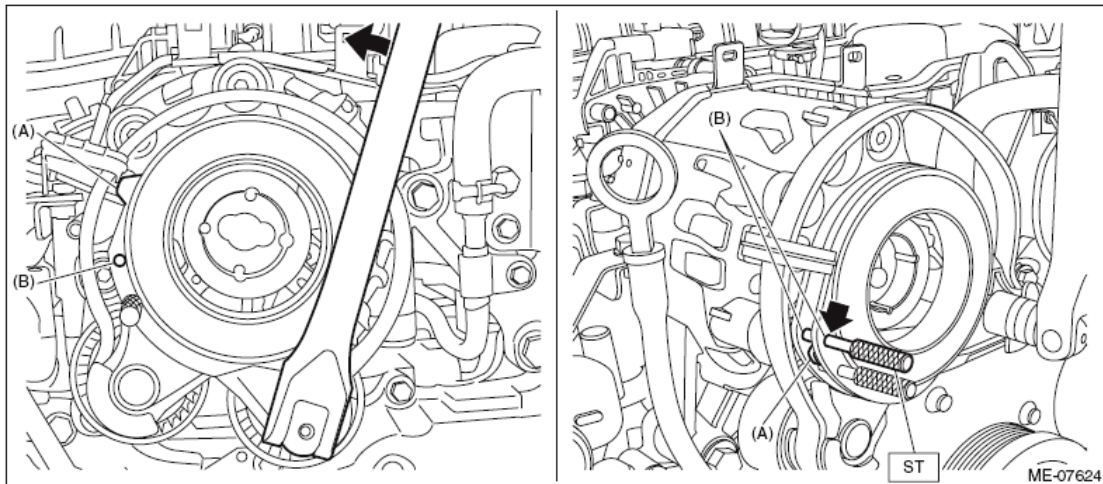


Fig. 207: Installing Stopper Pin Into Arm Lever No. 2
Courtesy of SUBARU OF AMERICA, INC.

3. Remove the ST inserted in procedure (1).

ST 499267300 STOPPER PIN

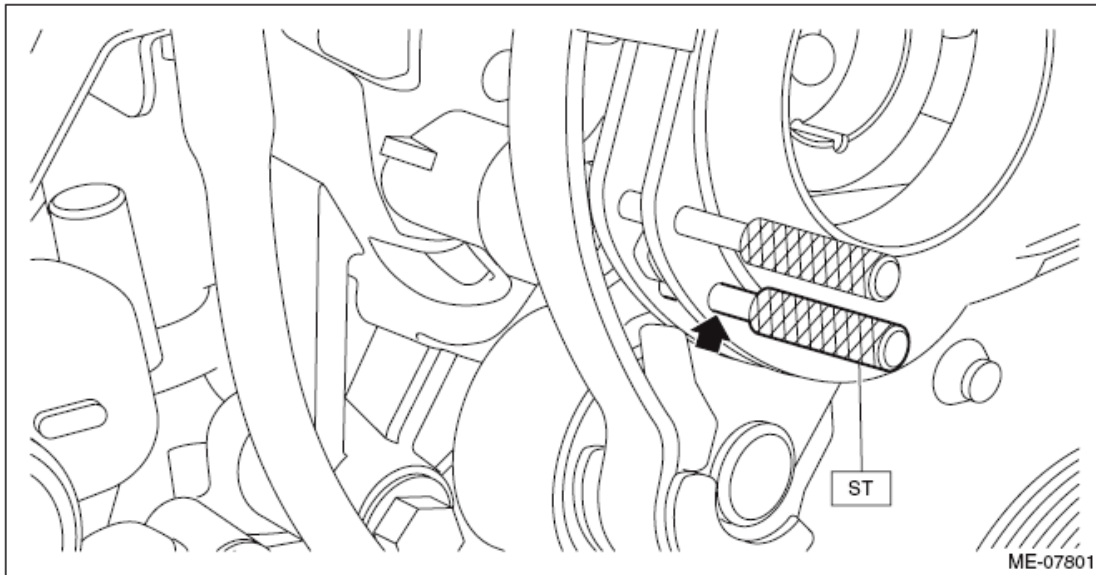


Fig. 208: Removing Stopper Pin
 Courtesy of SUBARU OF AMERICA, INC.

4. Remove the V-belt tensioner assembly and remove the V-belt.

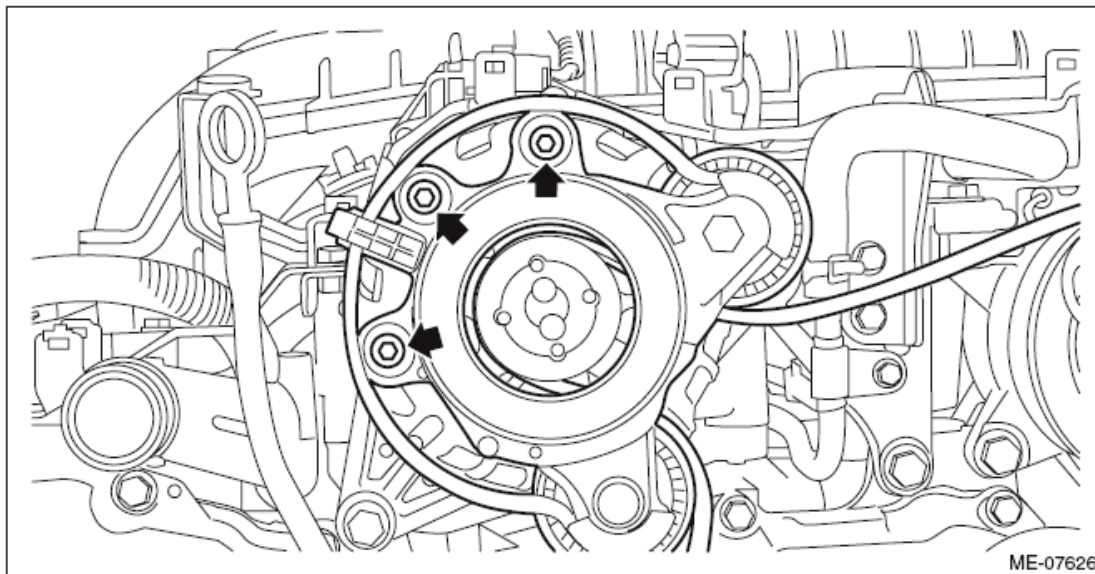


Fig. 209: Locating V-Belt Tensioner Assembly Mounting Bolt
 Courtesy of SUBARU OF AMERICA, INC.

5. The V-belt tensioner assembly is replaced.

NOTE:

- When replacing the V-belt tensioner assembly, also perform the following steps.
- This procedure is required to prepare 1 more piece of ST: STOPPER

PIN (499267300).

1. Using a bolt (M8) of suitable length, secure the V-belt tensioner assembly on a vise.

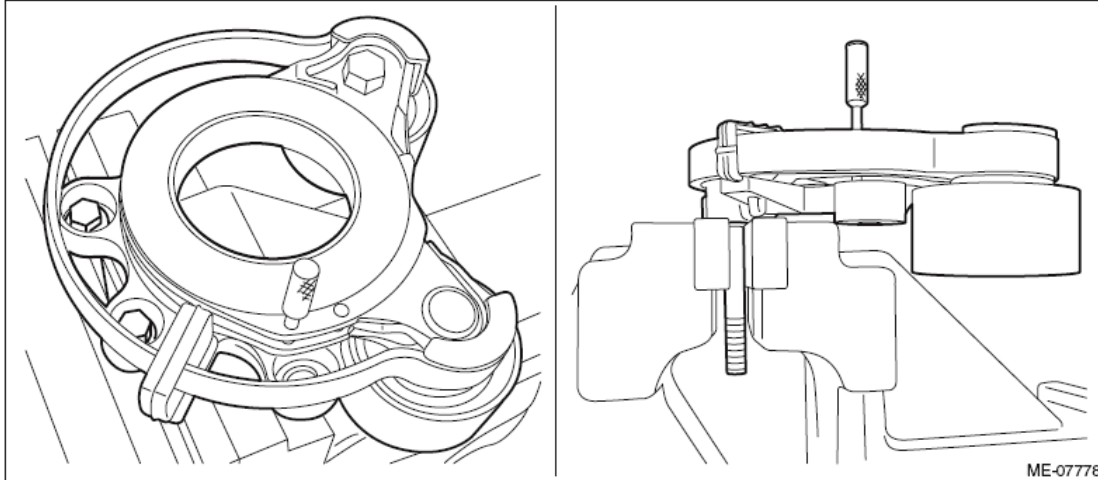


Fig. 210: Securing V-Belt Tensioner Assembly
Courtesy of SUBARU OF AMERICA, INC.

2. Turn the arm lever until the stopper pin hole (A) of the arm lever No. 2 is aligned with the stopper pin hole (B) of the housing, and insert the ST through the stopper pin hole (A) of the arm lever No. 2 into the end of the stopper pin hole (B) of the housing.

CAUTION: Be sure to insert the ST into the end of the stopper pin hole (B) of the housing. If the ST is not inserted to the end, the ST may accidentally come off in the next procedure, resulting in an injury.

ST 499267300 STOPPER PIN

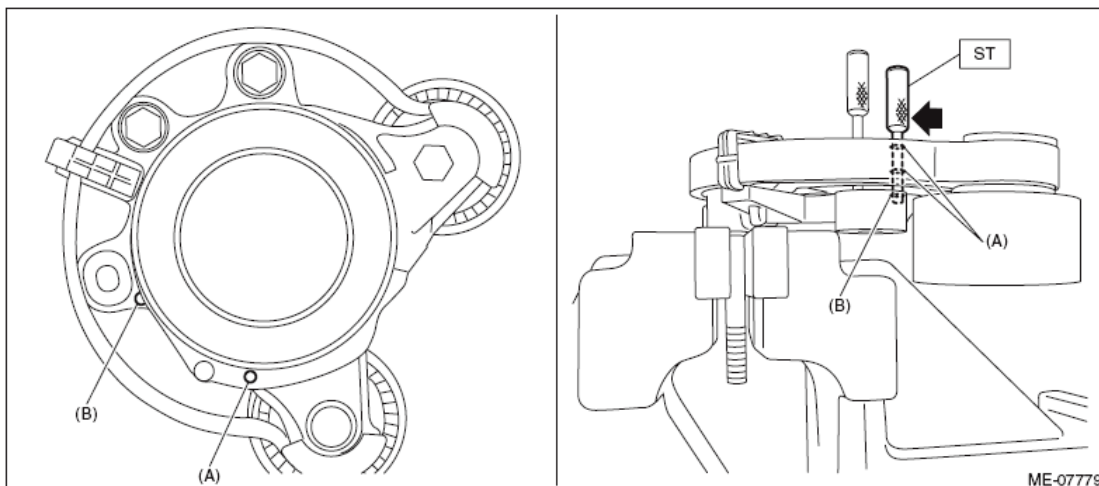


Fig. 211: Inserting Stopper Pin Into Housing
Courtesy of SUBARU OF AMERICA, INC.

3. Set the tool on the arm lever No. 1, turn the tool counterclockwise a little, remove the ST (A) from the arm lever No. 2, and remove the ST (B) inserted in step (2).

ST 499267300 STOPPER PIN

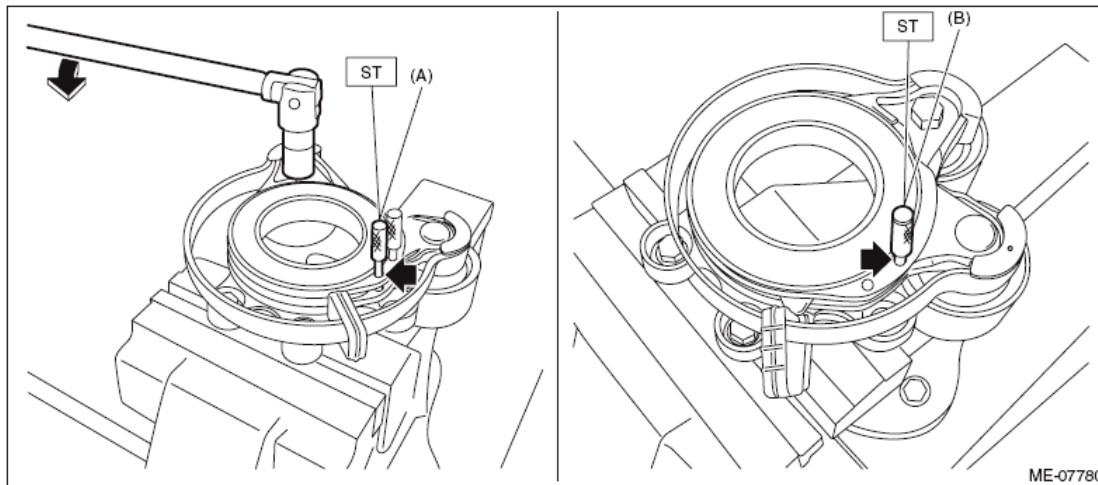


Fig. 212: Installing Stopper Pin Into Arm Lever No. 1
Courtesy of SUBARU OF AMERICA, INC.

Idler Pulley

1. Loosen the V-belt, and remove the V-belt from the idler pulley.

NOTE:

- Refer to "V-belt tensioner assembly and V-belt" for the loosening procedure of V-belt. Refer to V-BELT TENSIONER ASSEMBLY AND V-BELT.
- It is not necessary to remove the V-belt tensioner assembly and the V-belt from ISG.

2. Remove the bolts which secure the idler pulley to the chain cover, and remove the idler pulley.

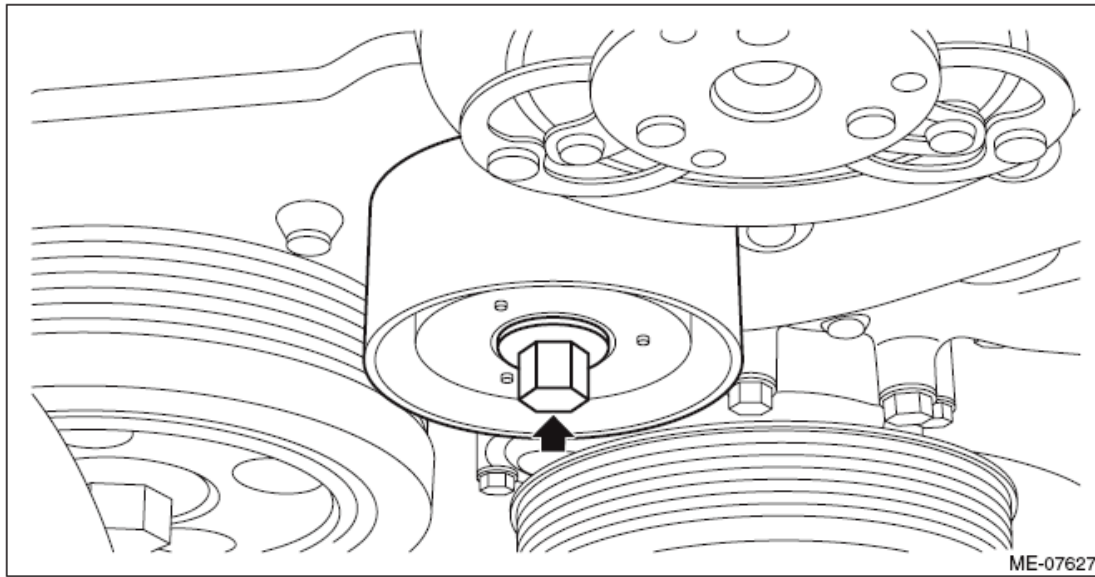


Fig. 213: Locating Idler Pulley To Chain Cover Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

INSTALLATION


GASOLINE ENGINE MODEL

- V-belt

Install in the reverse order of removal.

CAUTION:

- When reusing the V-belt, wipe off dust and water with cloth.
- Do not use the V-belt if there is any oil, grease or coolant on the belt.
- Be careful not to rub the V-belt end surface with bare hands; exposed core may cause injury.
- Wipe off any dust, oil and water on the groove of each pulley with cloth.

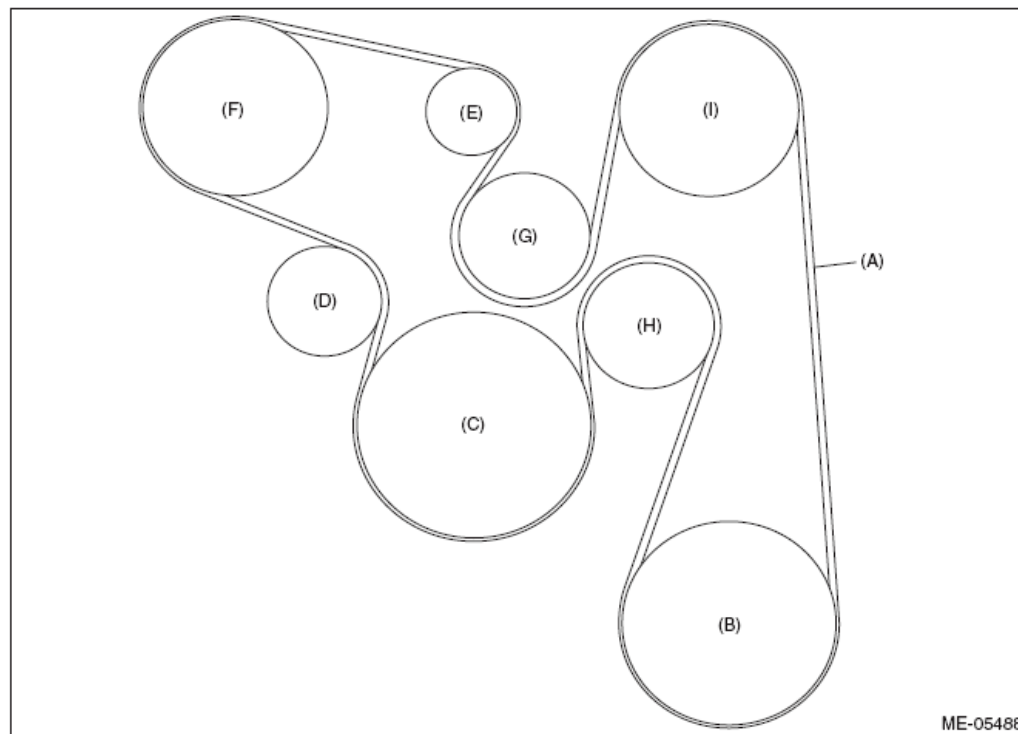

- | | | |
|-----------------------|---------------------------|---------------------------|
| (A) V-belt | (D) V-belt tensioner ASSY | (G) Idler pulley B |
| (B) Water pump pulley | (E) Generator pulley | (H) Idler pulley C |
| (C) Crank pulley | (F) Idler pulley A | (I) A/C compressor pulley |

Fig. 214: Identifying V-Belt Tensioner Assembly Components
 Courtesy of SUBARU OF AMERICA, INC.

Tightening torque:

6.4 N.m (0.7 kgf-m, 4.7 ft-lb)

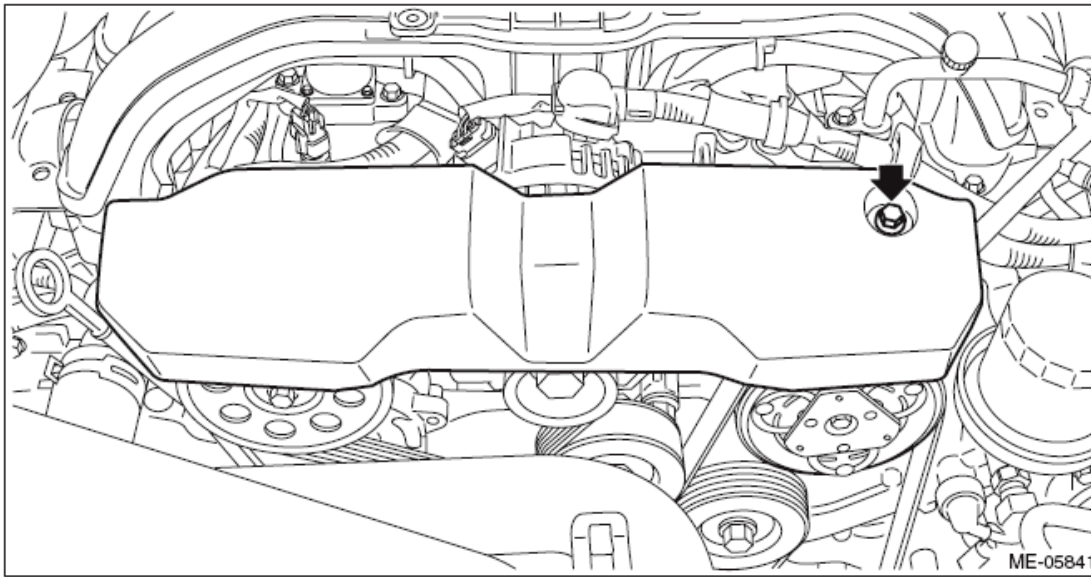


Fig. 215: Locating V-Belt Cover Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

- V-belt tensioner assembly and idler pulley

1. Install the idler pulley to the generator bracket and chain cover.

NOTE: When installing the idler pulley, be careful of the idler pulley cover direction.


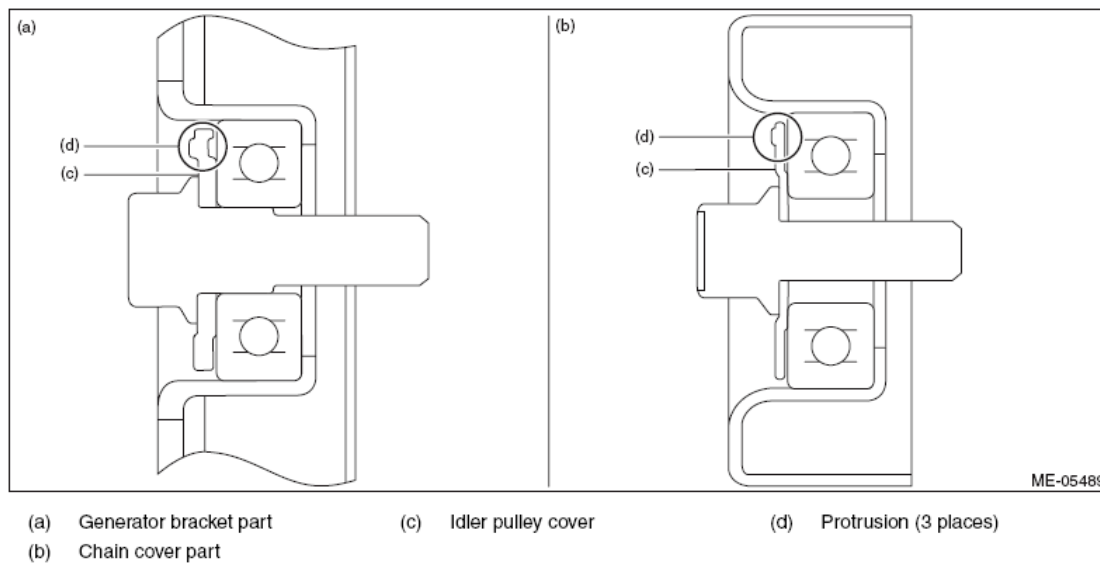


Fig. 216: Identifying Idler Pulley Cover And Protrusion
Courtesy of SUBARU OF AMERICA, INC.

Tightening torque:

T1: 25 N.m (2.5 kgf-m, 18.4 ft-lb)

T2: 36 N.m (3.7 kgf-m, 26.6 ft-lb)

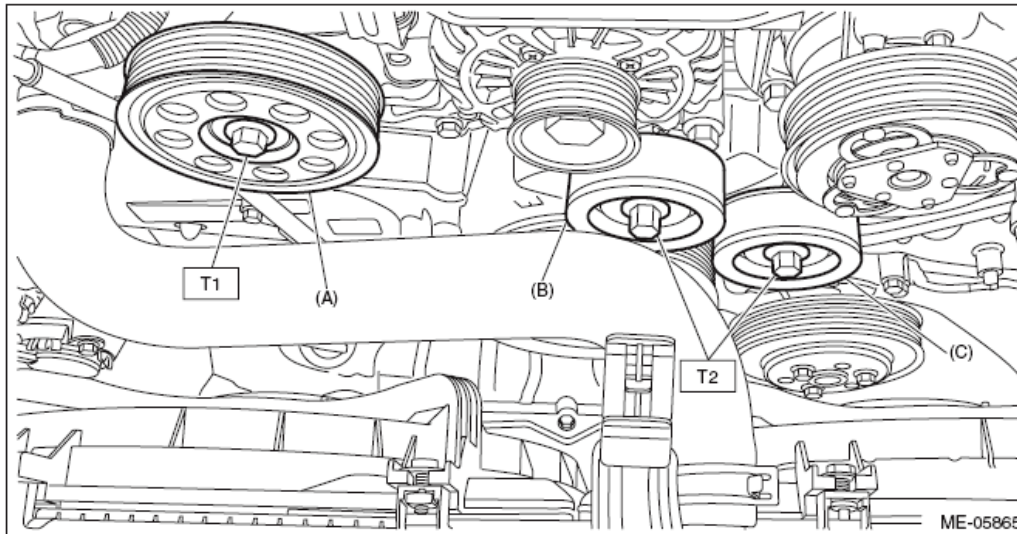

(A) Idler pulley A

(B) Idler pulley B


(C) Idler pulley C

Fig. 217: Identifying Idler Pulley And Mounting Bolt

Courtesy of SUBARU OF AMERICA, INC.

2. Install the V-belt tensioner assembly onto the generator bracket.

NOTE: When installing the V-belt tensioner assembly, insert the protrusion of V-belt tensioner assembly into the hole for preventing rotation at the generator bracket.

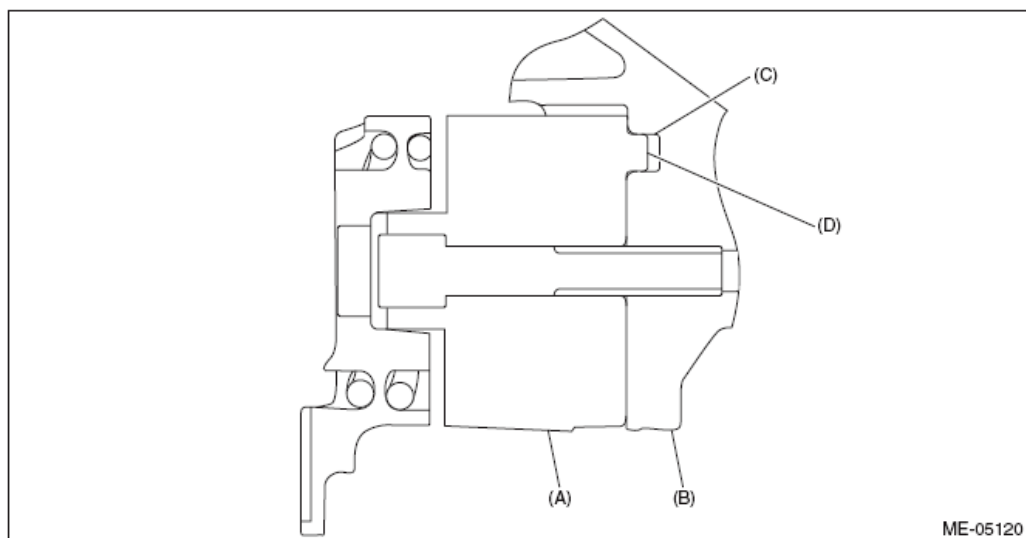

(A) V-belt tensioner ASSY

(C) Hole to prevent rotation

(D) Protrusion portion

(B) Generator bracket

Fig. 218: Identifying V-Belt Tensioner Assembly Components
 Courtesy of SUBARU OF AMERICA, INC.

Tightening torque:

25 N.m (2.5 kgf-m, 18.4 ft-lb)

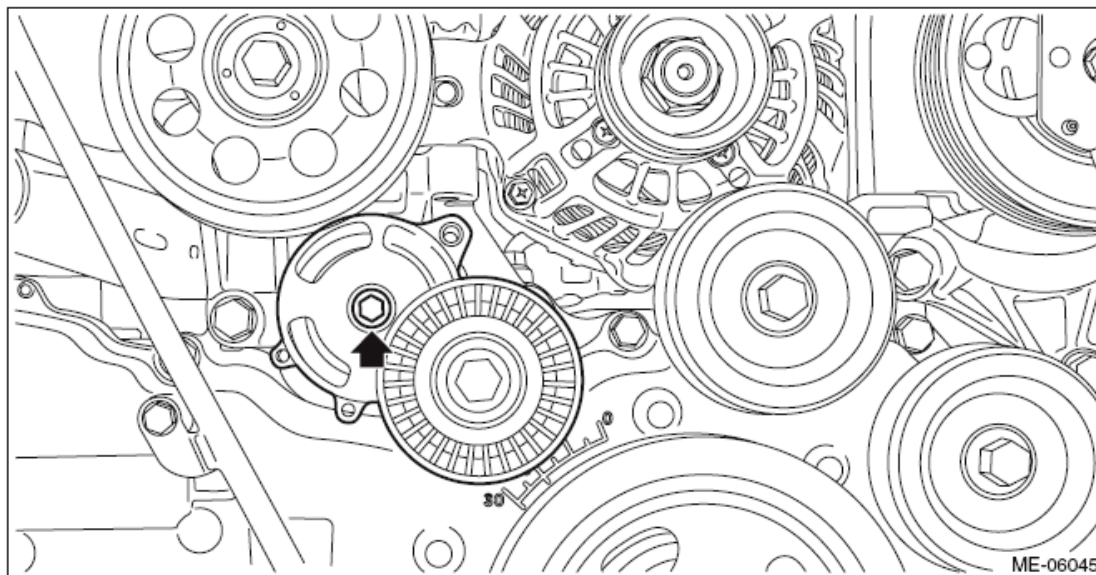


Fig. 219: Locating V-Belt Mounting Bolt
 Courtesy of SUBARU OF AMERICA, INC.

3. Install the cap to the V-belt tensioner assembly.

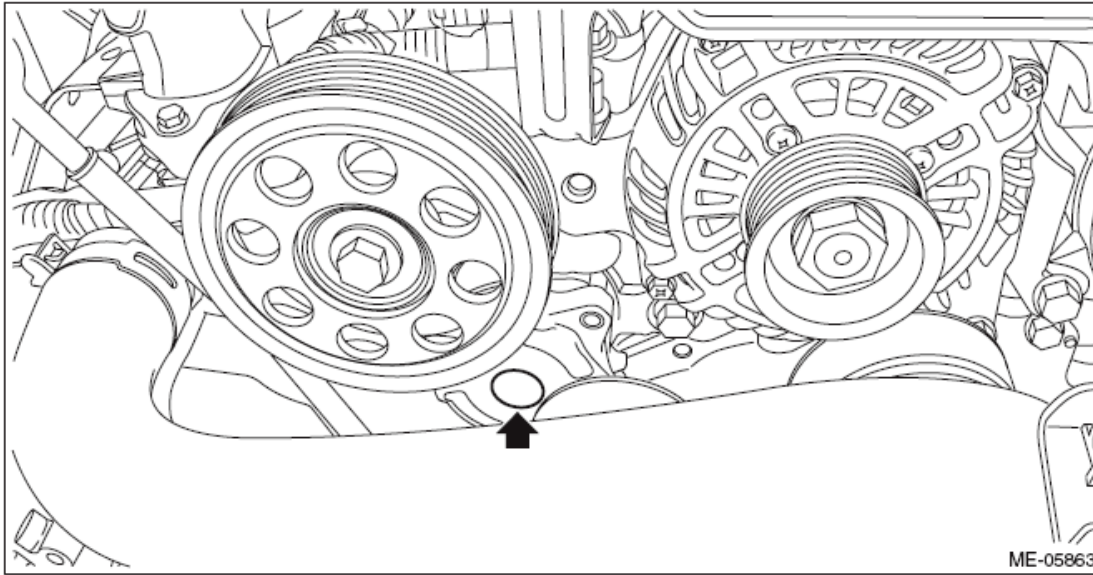


Fig. 220: Locating V-Belt Tensioner Assembly Cap
Courtesy of SUBARU OF AMERICA, INC.

4. Install the V-belts.


HEV MODEL

- V-belt tensioner assembly and V-belt

1. Set the V-belt as shown in the figure.

CAUTION:

- When reusing the V-belt, wipe off dust and water with cloth.
- Do not use the V-belt if there is any oil, grease or coolant on the belt.
- Be careful not to rub the V-belt end surface with bare hands; exposed core may cause injury.
- Wipe off any dust, oil and water on the groove of each pulley with cloth.

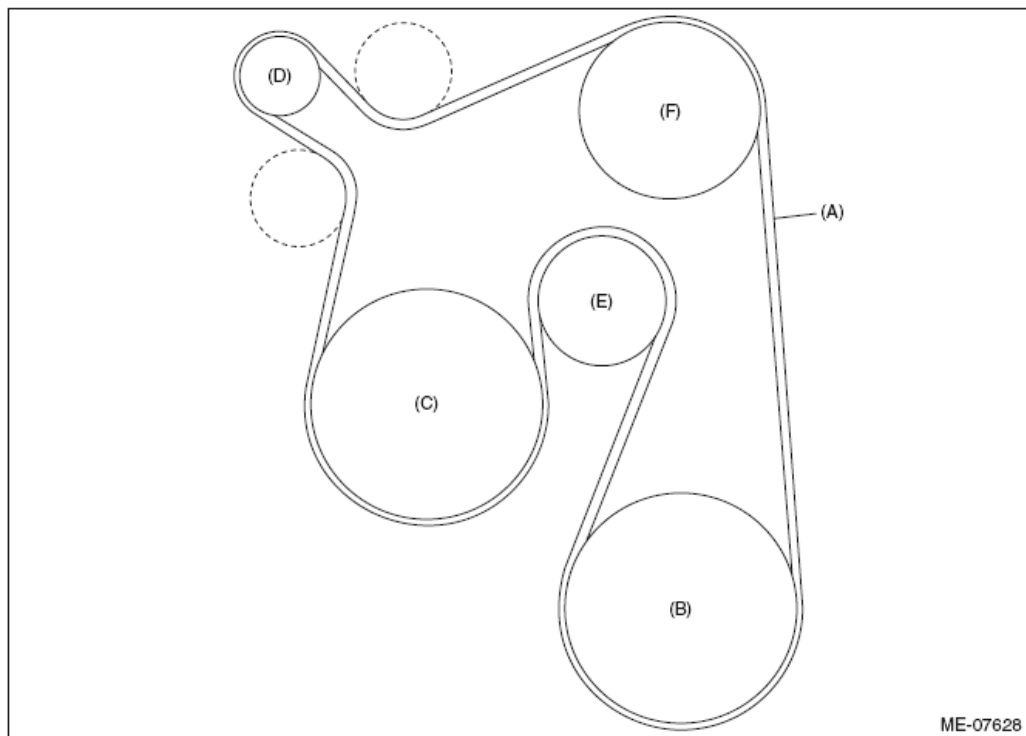

- | | | |
|-----------------------|------------------|---------------------------|
| (A) V-belt | (C) Crank pulley | (E) Idler pulley |
| (B) Water pump pulley | (D) ISG pulley | (F) A/C compressor pulley |

Fig. 221: Identifying V-belt Components
Courtesy of SUBARU OF AMERICA, INC.

2. Set the V-belt tensioner assembly in the position shown in the figure, and temporarily tighten the bolts that hold the V-belt tensioner assembly.
3. Tighten the bolts which hold the V-belt tensioner assembly in the numerical order shown in the figure.

Tightening torque:

25 N.m (2.5 kgf-m, 18.4 ft-lb)

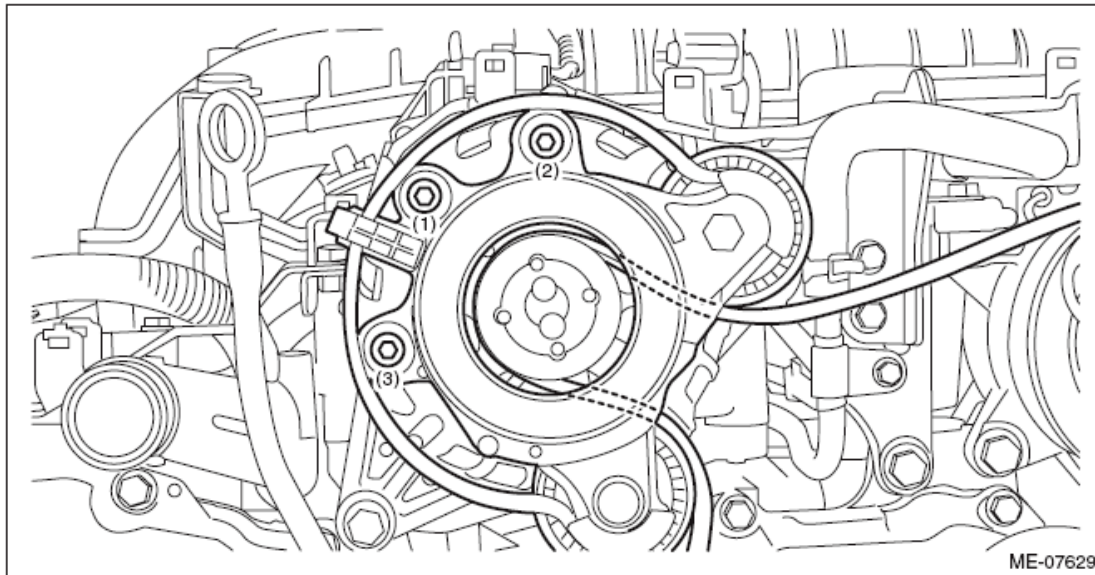


Fig. 222: Identifying V-Belt Tensioner Assembly Mounting Bolts Tightening Sequence
Courtesy of SUBARU OF AMERICA, INC.

4. Set the tool on the arm lever No. 1, turn the tool counterclockwise a little, and remove the ST from the arm lever No. 2.

NOTE: Before removing the ST, check that the V-belt ribs are securely placed on the rib grooves for each pulley.

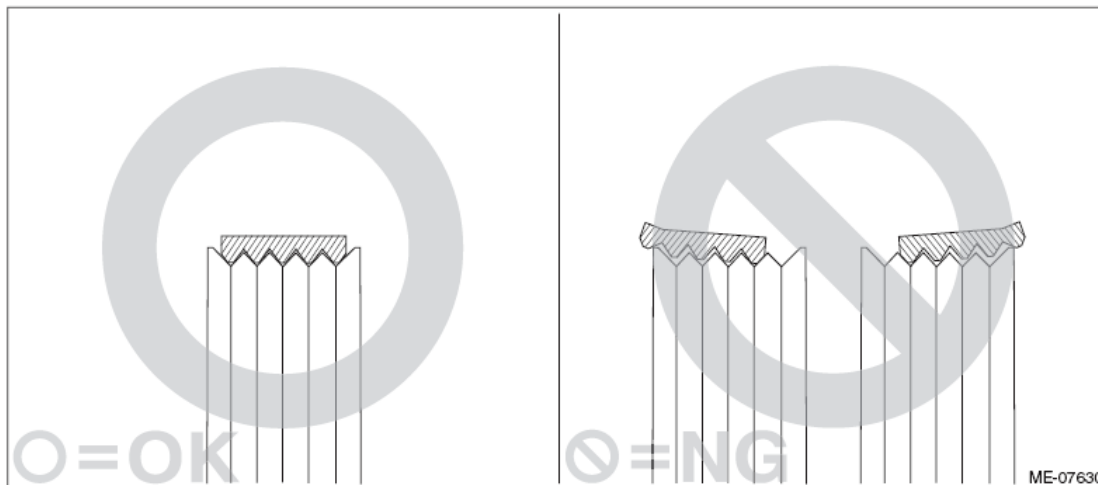


Fig. 223: Caution For Removing Stopper Pin
Courtesy of SUBARU OF AMERICA, INC.

ST 499267300 STOPPER PIN

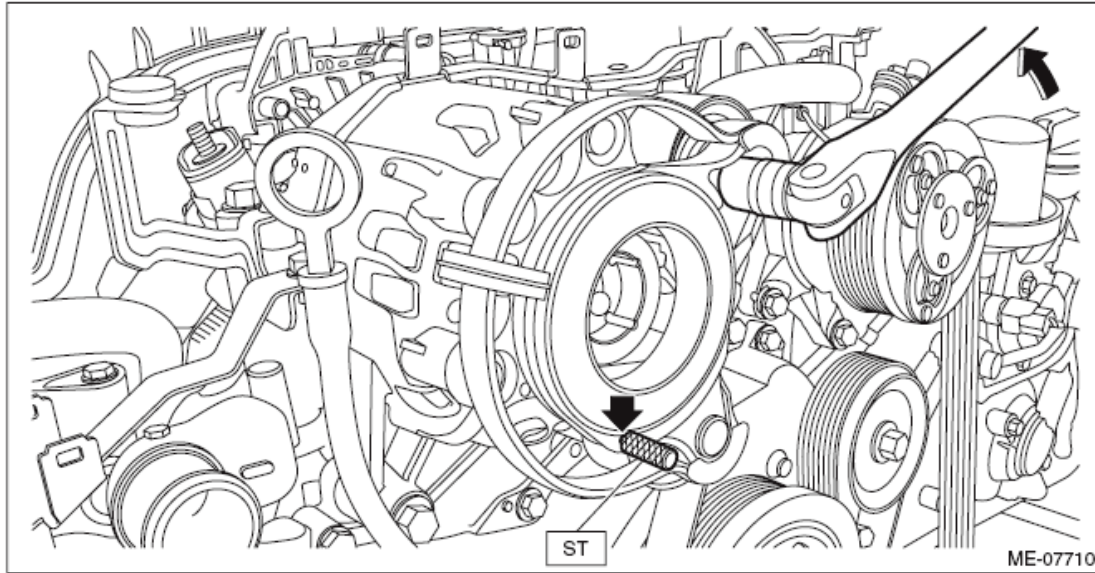


Fig. 224: Removing Stopper Pin From Arm Lever No. 2
Courtesy of SUBARU OF AMERICA, INC.

5. When working on the vehicle


NOTE: When working on the vehicle, perform the following steps also.

1. Install the collector cover.

- Idler pulley

Install in the reverse order of removal.

NOTE: When installing the idler pulley, be careful of the idler pulley cover direction.

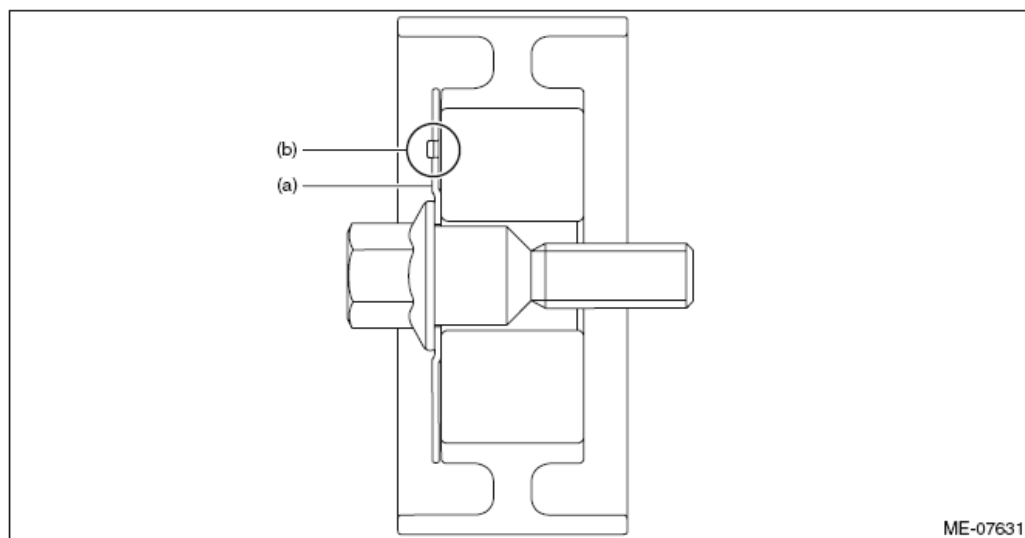

(a) Idler pulley cover

(b) Protrusion (3 places)

Fig. 225: Identifying Idler Pulley And Protrusion
Courtesy of SUBARU OF AMERICA, INC.

Tightening torque:

36 N.m (3.7 kgf-m, 26.6 ft-lb)

INSPECTION

1. Check the V-belt for cracks, tear or wear.
2. Check the V-belt tensioner assembly and idler pulley for deformation, cracks or other damages.
3. Check that the V-belt ribs are securely placed on the rib grooves for each pulley.
 - Gasoline engine model

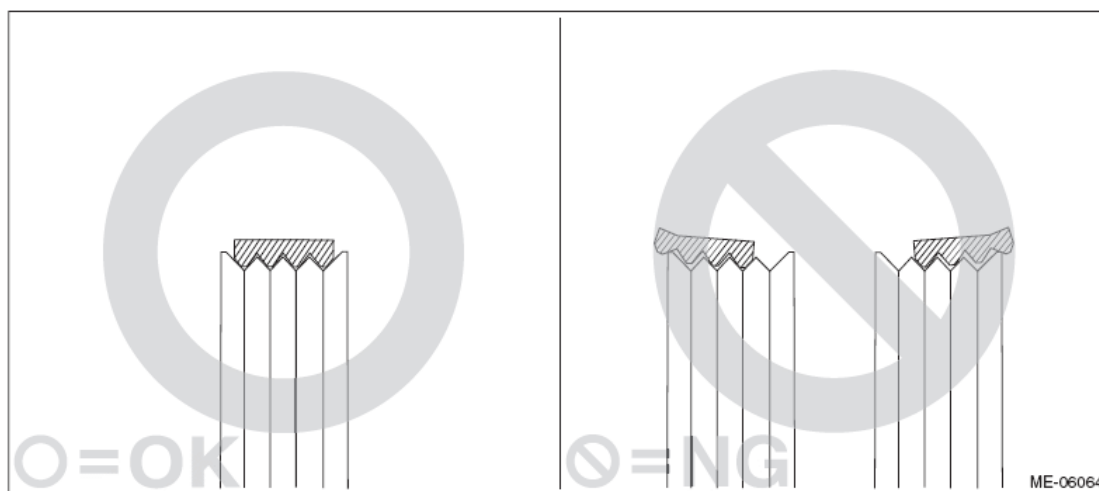


Fig. 226: Caution For Removing Stopper Pin (Gasoline Engine Model)

Courtesy of SUBARU OF AMERICA, INC.

- HEV model

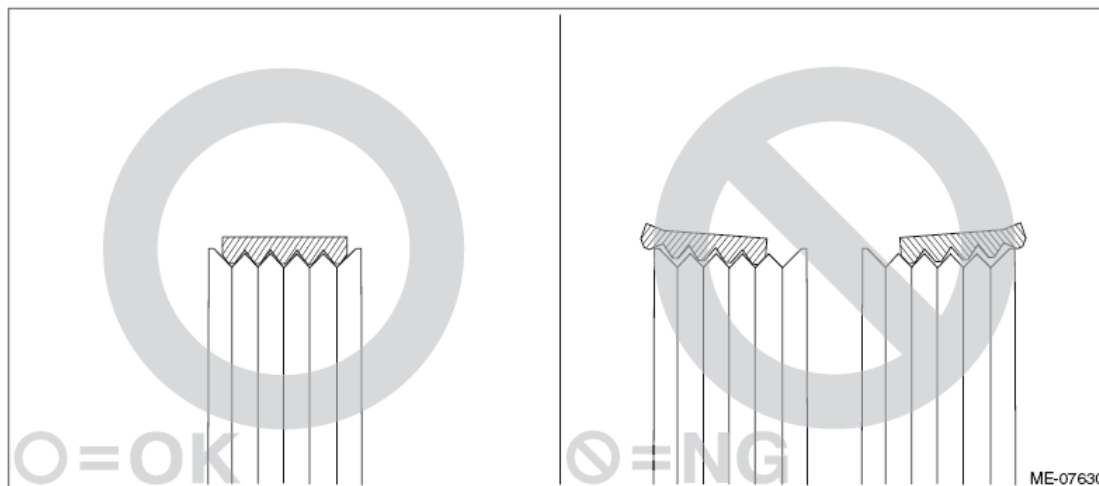


Fig. 227: Caution For Removing Stopper Pin (HEV Model)

Courtesy of SUBARU OF AMERICA, INC.

4. Check that the V-belt tensioner assembly (C) moves in the direction of arrow (D), when the V-belt (A) is pushed and released by the area indicated by the arrow (B). (Gasoline engine model)

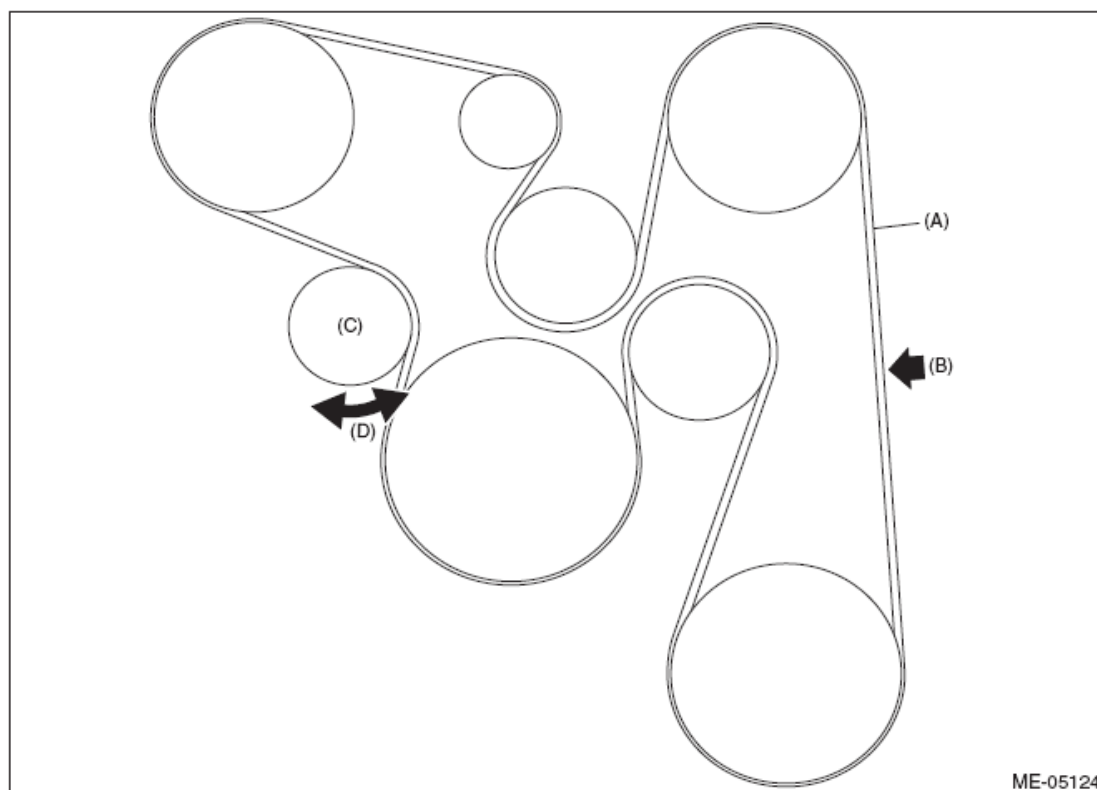


Fig. 228: Checking V-Belt Tensioner Assembly
Courtesy of SUBARU OF AMERICA, INC.

5. Start the engine and confirm that the V-belt rotates smoothly and no abnormal noise is emitted.

CRANK PULLEY

REMOVAL

NOTE: When replacing a single part, perform the work with the engine assembly installed to body.

1. When working on the vehicle

NOTE: When working on the vehicle, perform the following steps also.

1. Remove the radiator main fan & fan motor assembly and radiator sub fan & fan motor assembly. < Ref. to REMOVAL , Radiator Main Fan and Fan Motor.> < Ref. to REMOVAL , Radiator Sub Fan and Fan Motor.>
2. Remove the V-belts. < Ref. to REMOVAL, V-belt.>
3. Use the ST to lock the crank pulley, and remove the crank pulley bolt.

NOTE: To prevent damaging ST1, attach the ST2 onto the ST1 as shown.

ST1 18355AA000 PULLEY WRENCH

ST2 18334AA000 PULLEY WRENCH PIN SET

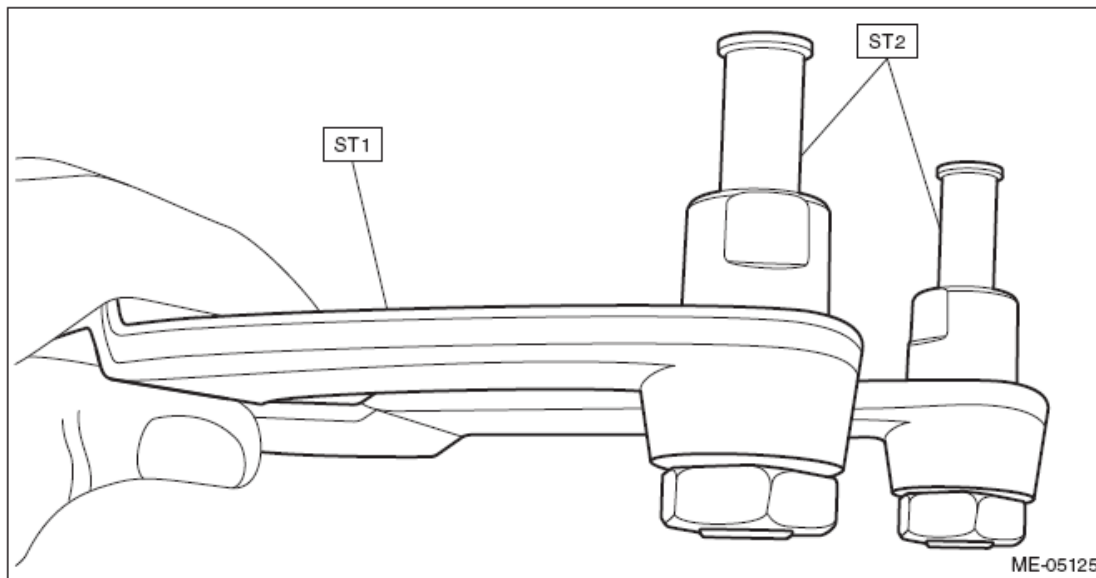


Fig. 229: Removing Crank Pulley Mounting Bolt Using Tool
Courtesy of SUBARU OF AMERICA, INC.

ST1 18355AA000 PULLEY WRENCH

ST2 18334AA000 PULLEY WRENCH PIN SET

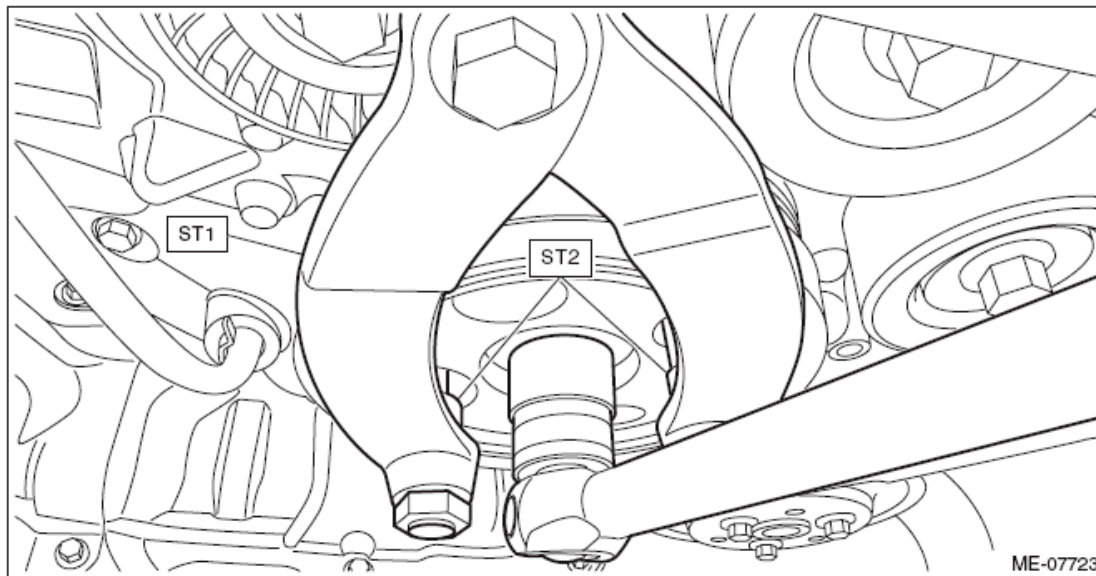


Fig. 230: Removing Crank Pulley Using Tool
Courtesy of SUBARU OF AMERICA, INC.

4. Remove the crank pulley.

INSTALLATION

1. Clean the crankshaft thread using compressed air.
2. Apply engine oil to the crank pulley bolt seat and thread.
3. Install the crank pulley.
 1. Install the crank pulley to the crank pulley boss.

NOTE:

- Use new O-rings.
- Install the crank pulley by aligning the crank pulley knock hole (A) and crank pulley boss knock pin (B).

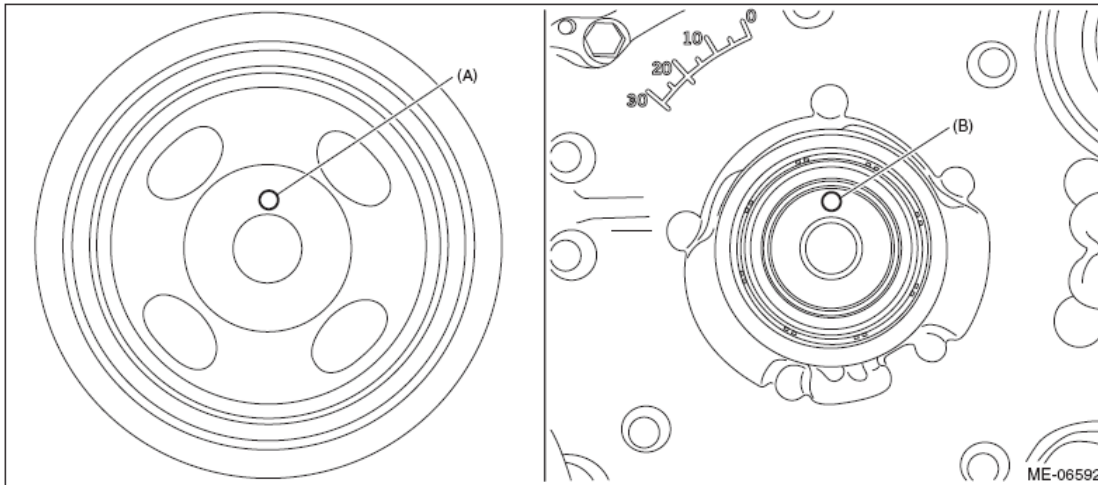


Fig. 231: Identifying Crank Pulley Knock Hole And Boss Knock Pin
 Courtesy of SUBARU OF AMERICA, INC.

2. Use the ST to lock the crank pulley, and temporarily tighten the crank pulley bolt.

NOTE: To prevent damaging ST1, attach the ST2 onto the ST1 as shown.

ST1 18355AA000 PULLEY WRENCH

ST2 18334AA000 PULLEY WRENCH PIN SET

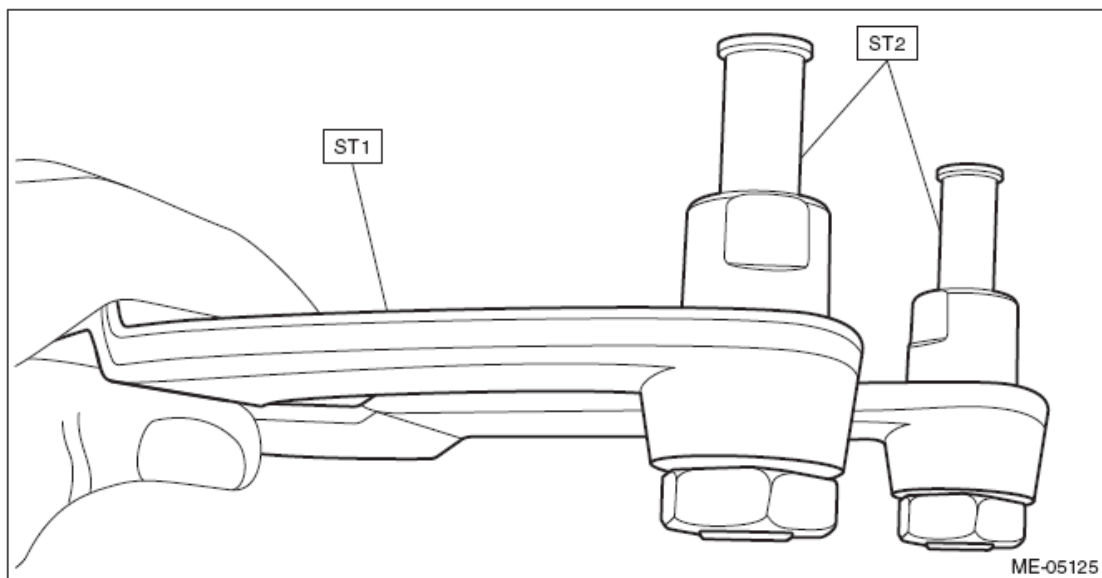


Fig. 232: Tightening Crank Pulley Mounting Bolt Using Tool
Courtesy of SUBARU OF AMERICA, INC.

ST1 18355AA000 PULLEY WRENCH

ST2 18334AA000 PULLEY WRENCH PIN SET

Tightening torque:

60 N.m (6.1 kgf-m, 44.3 ft-lb)


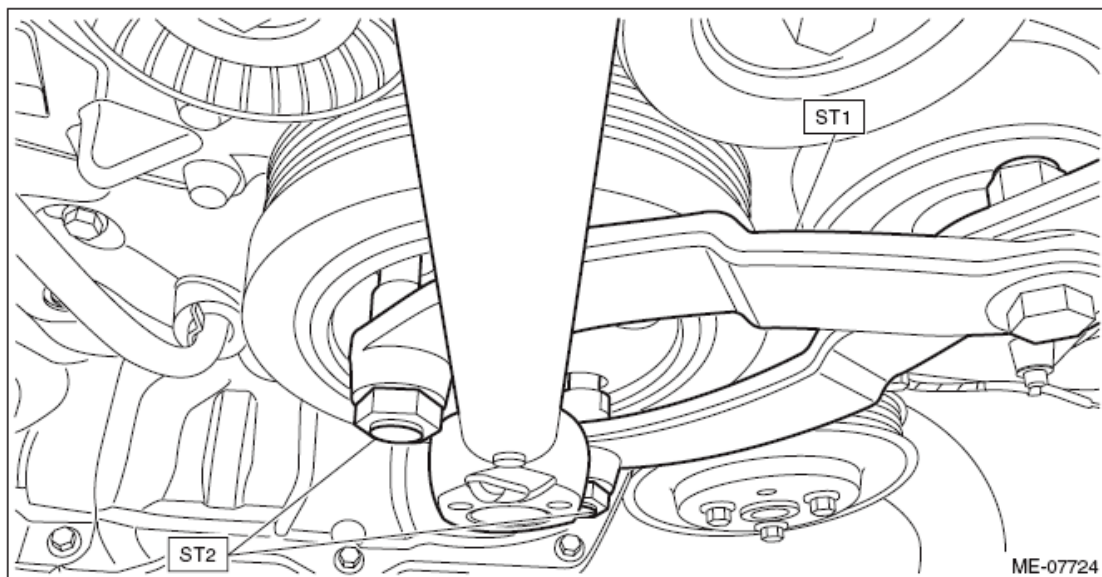


Fig. 233: Installing Pulley Wrench Pin Set On Pulley Wrench
Courtesy of SUBARU OF AMERICA, INC.

3. Draw reference lines (A) and (B) using a marker to set the socket to the crank pulley bolt as shown in the figure.

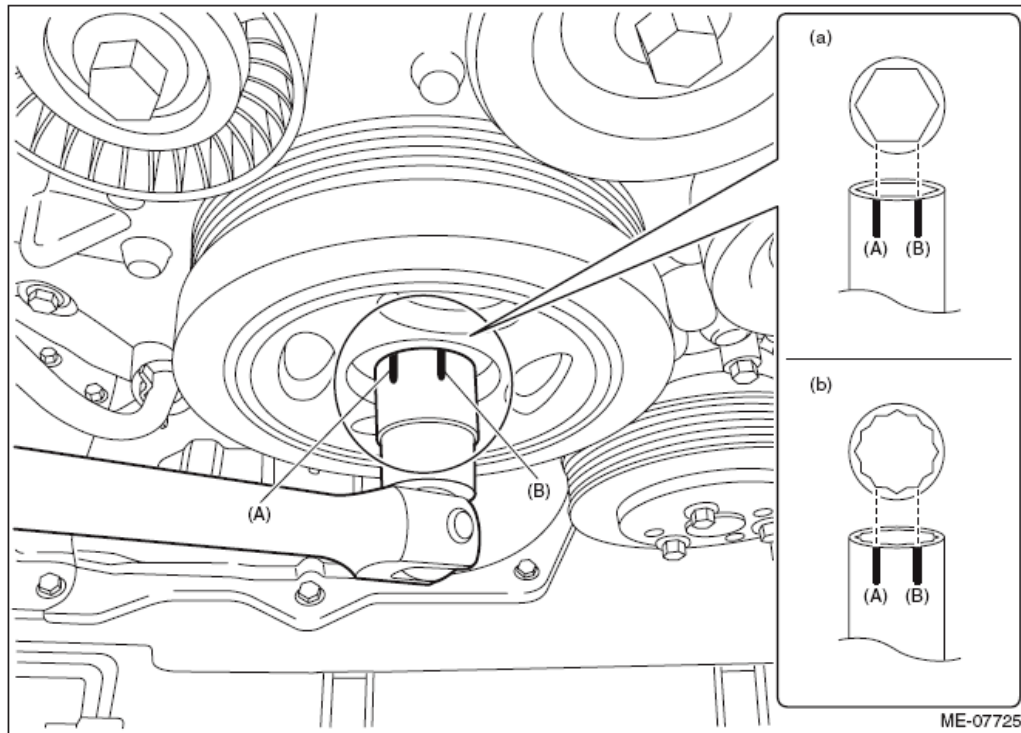

(a) When using 6-point socket

(b) When using 12-point socket

Fig. 234: Removing Crank Pulley Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

4. Draw reference lines (A) and (B) on the crank pulley bolt using a marker as shown in the figure.

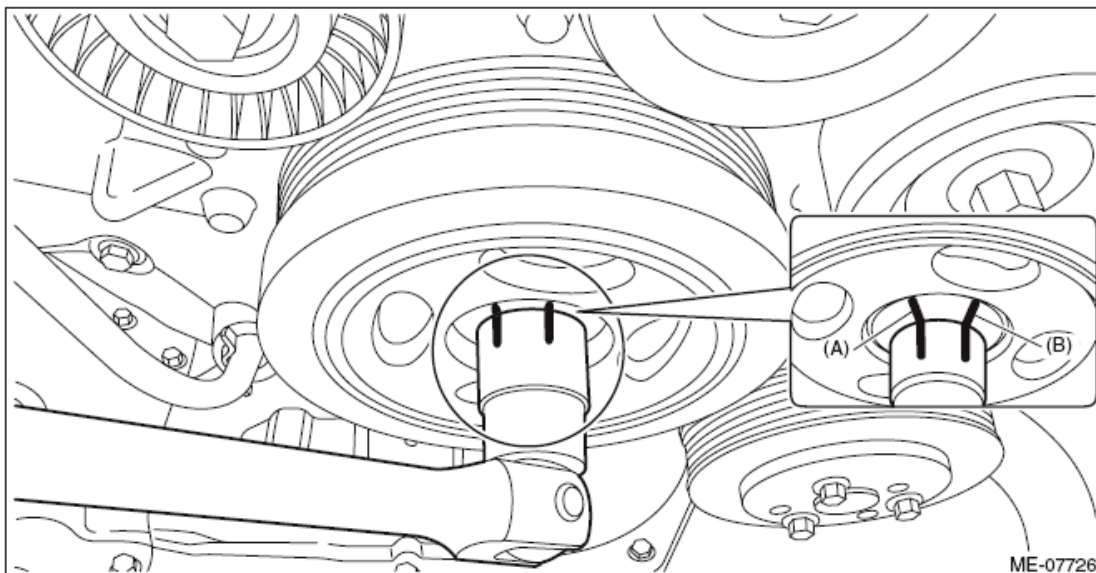


Fig. 235: Tightening Crank Pulley Mounting Bolt Using Tool
Courtesy of SUBARU OF AMERICA, INC.

5. Draw end line (C) on crank pulley using a marker at the same position as reference line (B) drawn on the crank pulley bolt in step (4).

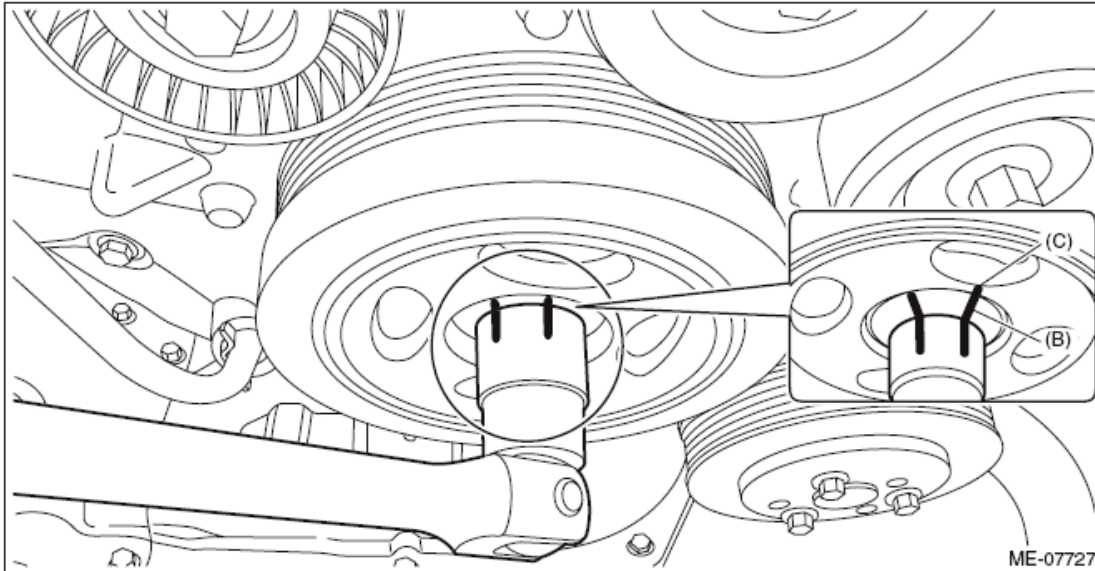


Fig. 236: Removing Crank Pulley Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

6. Use the ST to lock the crank pulley, and tighten the crank pulley bolt to the angle where reference line (A) and end line (C) are aligned.

NOTE: It should be approx. 60° when reference line (A) and end line (C) are aligned.

ST1 18355AA000 PULLEY WRENCH

ST2 18334AA000 PULLEY WRENCH PIN SET

Tightening angle:

60°±5°

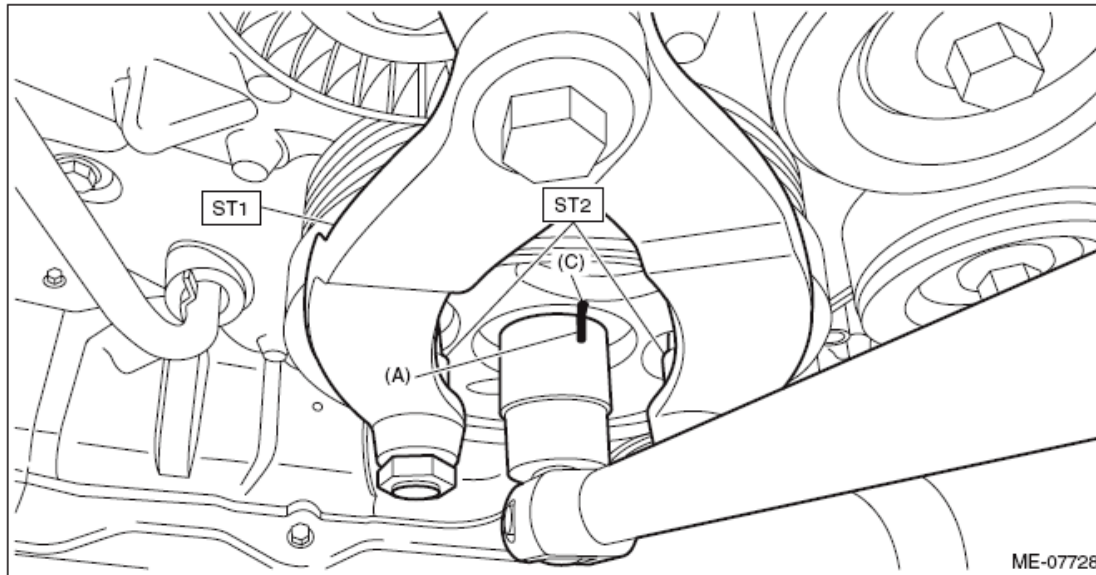


Fig. 237: Tightening Crank Pulley Mounting Bolt Using Tool
Courtesy of SUBARU OF AMERICA, INC.

4. Install the V-belts. < Ref. to INSTALLATION, V-belt.>
5. When working on the vehicle

NOTE: When working on the vehicle, perform the following steps also.

1. Install the radiator main fan & fan motor assembly and radiator sub fan & fan motor assembly. < Ref. to INSTALLATION , Radiator Main Fan and Fan Motor.> < Ref. to INSTALLATION , Radiator Sub Fan and Fan Motor.>

INSPECTION

1. Check that the crank pulley and crank pulley boss have no deformation, cracks or other damages.
2. Inspect for oil leakage from the front oil seal. If there is an oil leak, replace the front oil seal with a new part according to the following procedures.
 1. Remove the crank pulley. < Ref. to REMOVAL, Crank Pulley.>
 2. Remove the crank pulley boss from the chain cover.

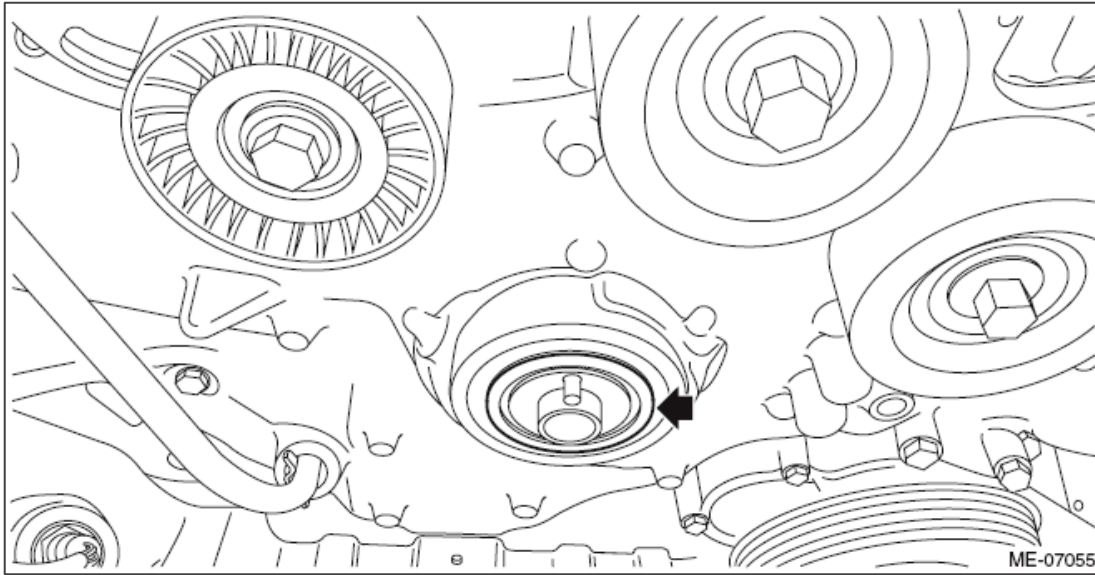


Fig. 238: Locating Crank Pulley Boss
Courtesy of SUBARU OF AMERICA, INC.

3. Remove the front oil seal from the chain cover.

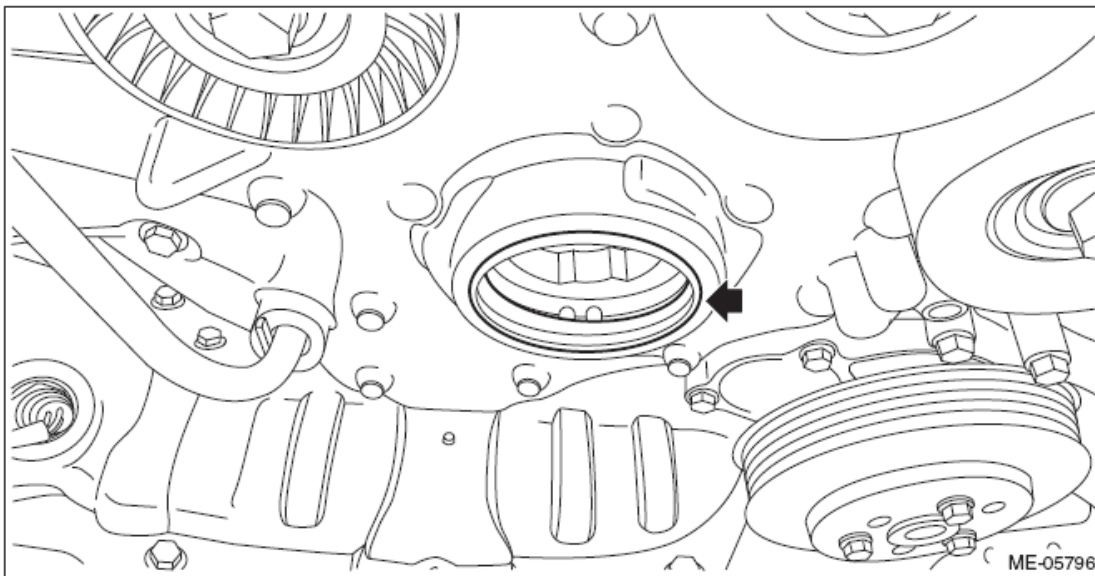


Fig. 239: Locating Chain Cover Front Oil Seal
Courtesy of SUBARU OF AMERICA, INC.

4. Apply a light coat of engine oil to the front oil seal inner periphery and outer periphery, and install the front oil seal to the chain cover using ST.

NOTE: When tapping the front oil seal in, protect the radiator fin with cardboards etc. so as not to damage the radiator fin by the plastic hammer.

ST 398437700 OIL SEAL INSTALLER

Front oil seal press-fit position:

1^{+0}_{-1} mm ($0.0039^{+0}_{-0.0039}$ in) position from chain cover end face

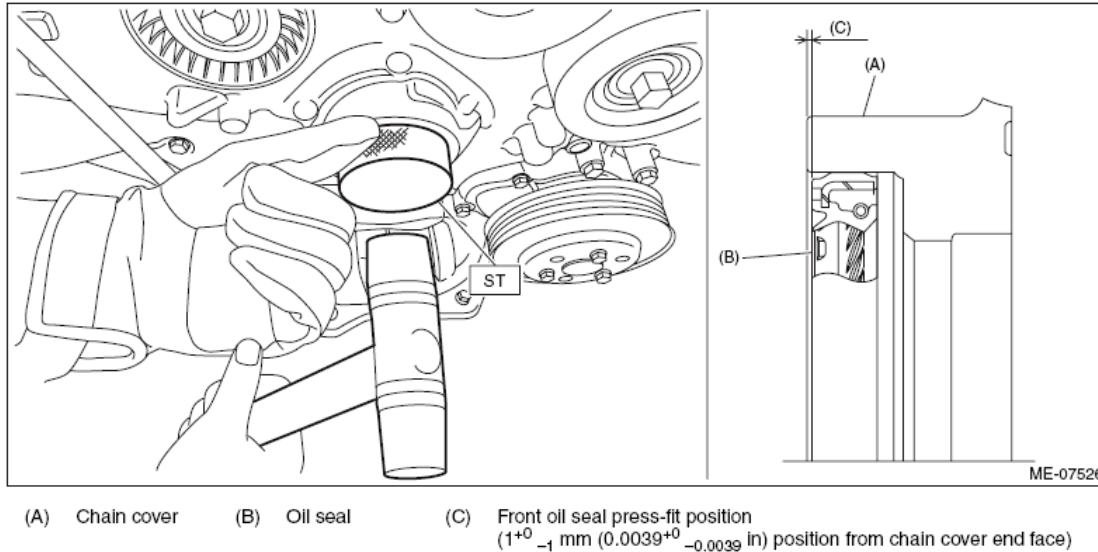


Fig. 240: Tapping Front Oil Seal Using Plastic Hammer
Courtesy of SUBARU OF AMERICA, INC.

3. Install in the reverse order of removal after replacement.

CHAIN COVER

REMOVAL

NOTE: When replacing a single part, perform the work with the engine assembly installed to body.

1. When working on the vehicle

NOTE: When working on the vehicle, perform the following steps also.

1. Remove the radiator. < Ref. to REMOVAL , Radiator.>
2. Remove the front exhaust pipe. < Ref. to REMOVAL , Front Exhaust Pipe.>
3. Remove the bolts which secure the generator cord stay to the chain cover. (Gasoline engine model)

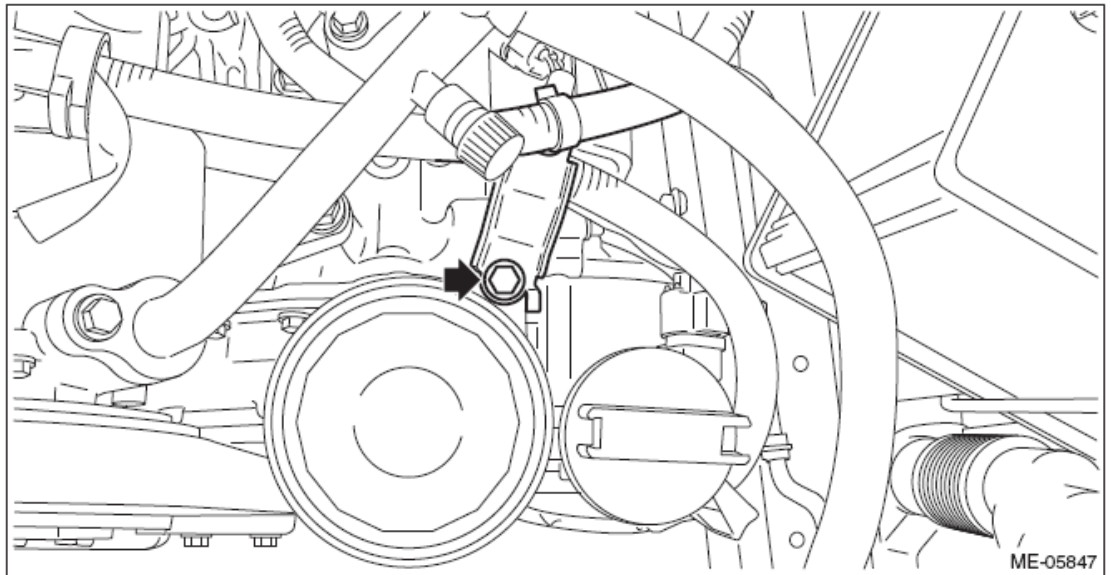


Fig. 241: Locating Generator Cord Stay To Chain Cover Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

2. Remove the ISG. (HEV model) < Ref. to **REMOVAL** , Integrated Starter Generator (ISG).>

NOTE: When working on the vehicle, move the battery cable assembly at the locations that do not interfere operation after the ISG is removed.

3. Remove the generator bracket. (Gasoline engine electric power steering model)
 1. Remove the V-belts. < Ref. to **GASOLINE ENGINE MODEL**, REMOVAL, V-belt.>
 2. Remove the generator. < Ref. to **REMOVAL** , Generator.>
 3. Remove the generator bracket from the engine.

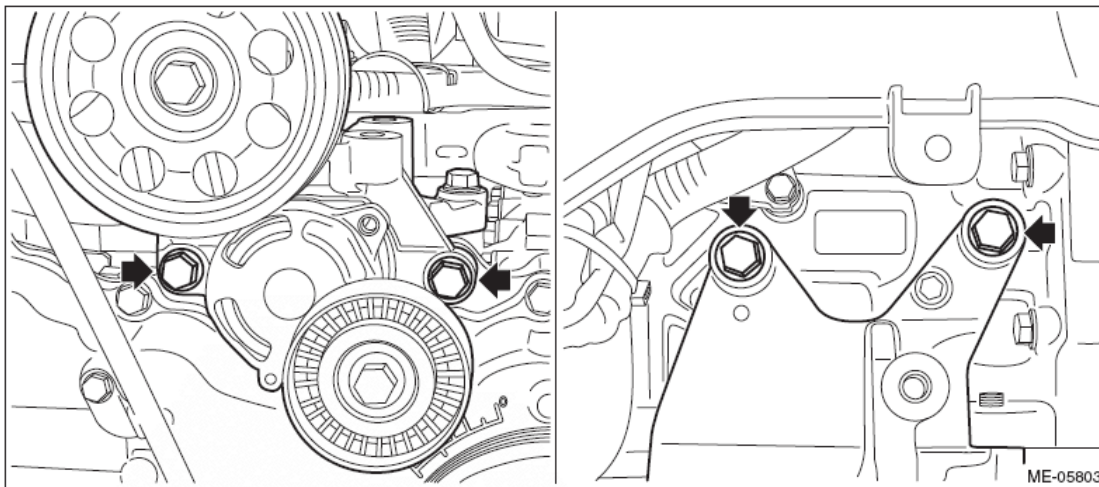


Fig. 242: Locating Generator Bracket Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

4. Drain the engine oil. < Ref. to **REPLACEMENT** , Engine Oil.>
5. Remove the water pump pulley. < Ref. to **WATER PUMP** , REMOVAL, Water Pump.>
6. Remove the crank pulley. < Ref. to **REMOVAL** , Crank Pulley.>
7. Disconnect the connector (A) from the exhaust camshaft position sensor RH, and remove the engine harness stay from the chain cover.

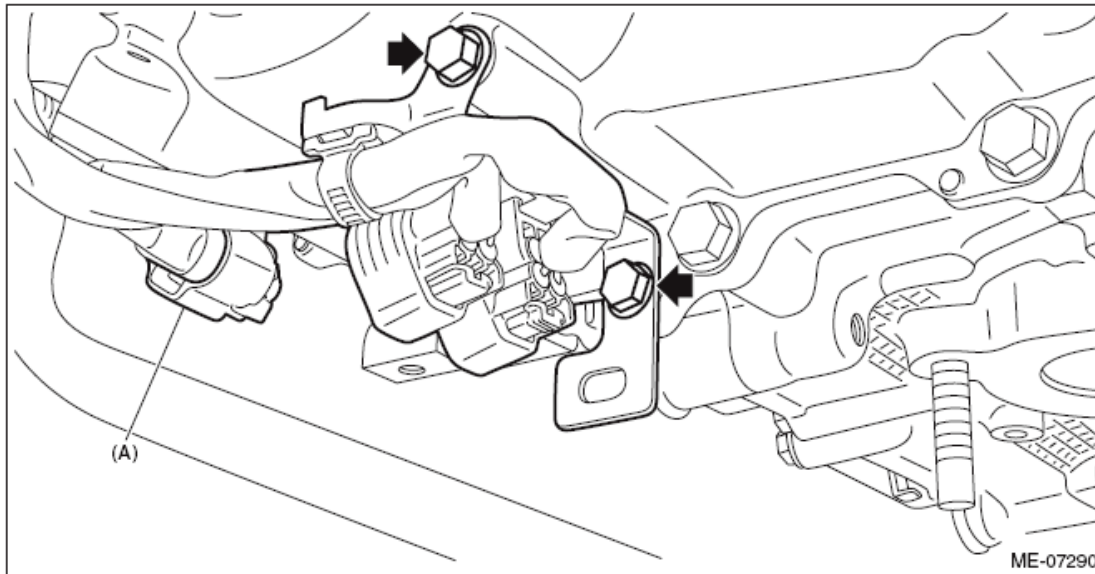


Fig. 243: Locating Exhaust Camshaft Position Sensor Connector And Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

8. Disconnect the connector (A) from the intake oil control solenoid RH, connector (B) from the exhaust oil control solenoid RH, and the connector (C) from the intake camshaft position sensor RH, and then remove the clips (D) (gasoline engine model) and the clips (E) which secure the engine harness.

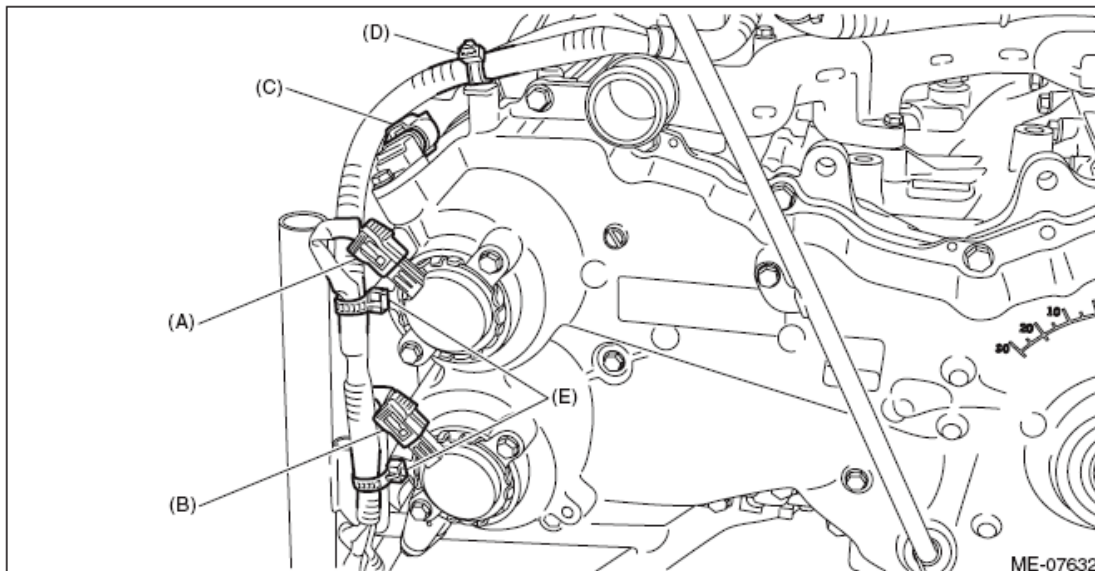


Fig. 244: Identifying Intake Oil Control Solenoid Connector, Clips And Clamp
Courtesy of SUBARU OF AMERICA, INC.

9. Disconnect the connectors from the oil level switch, and remove the clip (A) which secure the oil level switch harness.

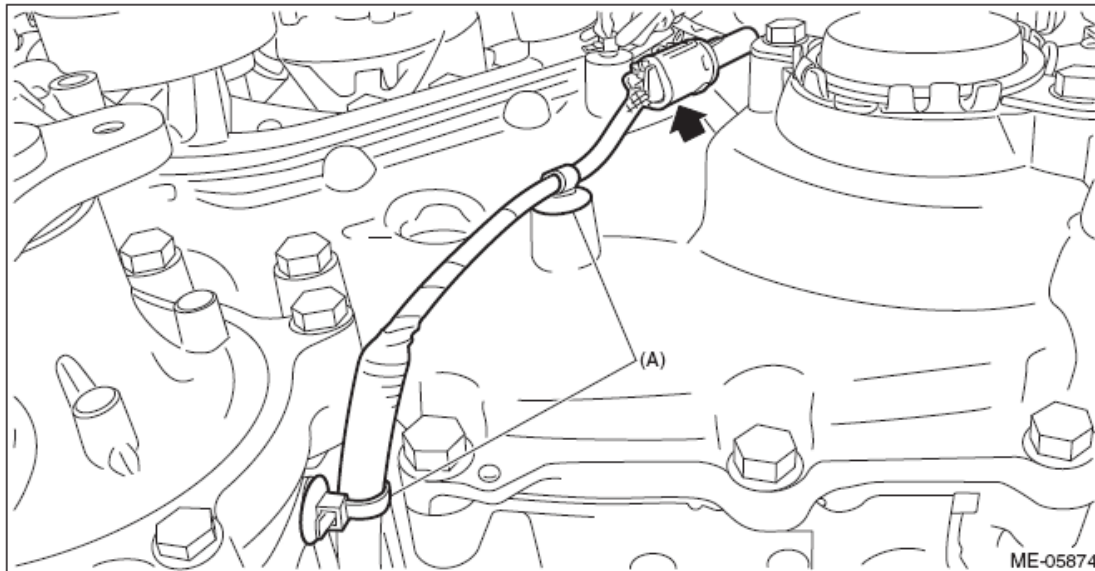


Fig. 245: Locating Oil Level Switch Connector And Clip
Courtesy of SUBARU OF AMERICA, INC.

10. Remove the rubber cap from the oil pressure switch.

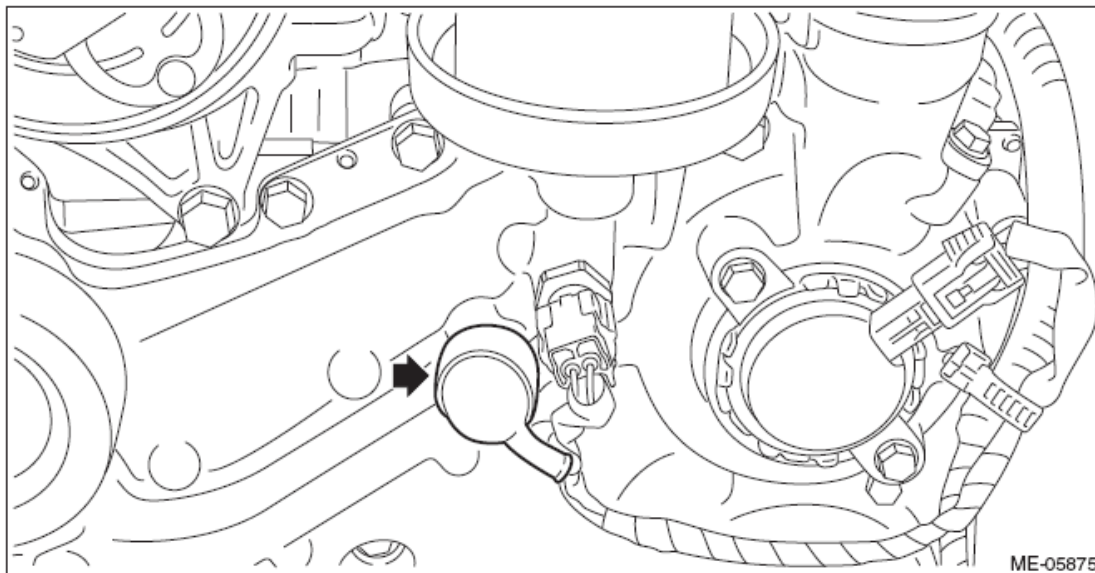


Fig. 246: Locating Oil Pressure Switch Rubber Cap
Courtesy of SUBARU OF AMERICA, INC.

11. Disconnect the terminal (A) from the oil pressure switch, connector (B) from the engine oil temperature sensor, connector (C) from the intake oil control solenoid LH, connector (D) from the exhaust oil control solenoid LH, connector (E) from the intake camshaft position sensor LH, and connector (F) from the exhaust camshaft position sensor LH, and remove the clips (G) and (H) which secure the engine harness.

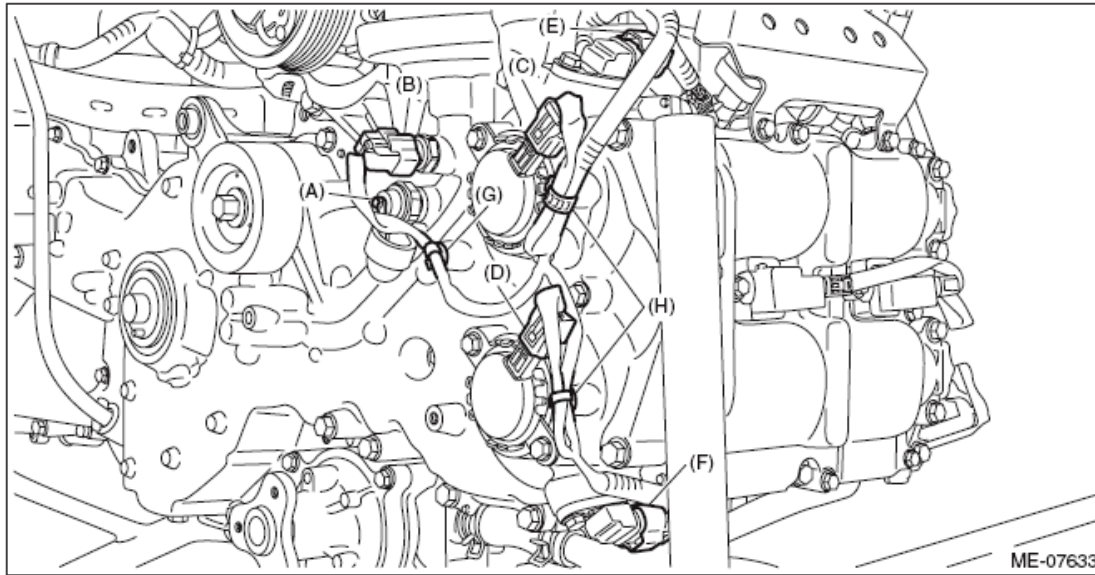


Fig. 247: Identifying Intake Camshaft Position Sensor Connector And Clips
Courtesy of SUBARU OF AMERICA, INC.

12. Pull out the oil level gauge (A), and remove the oil level gauge guide (B), crank pulley boss (C), and idler pulley (D).
 - Gasoline engine model

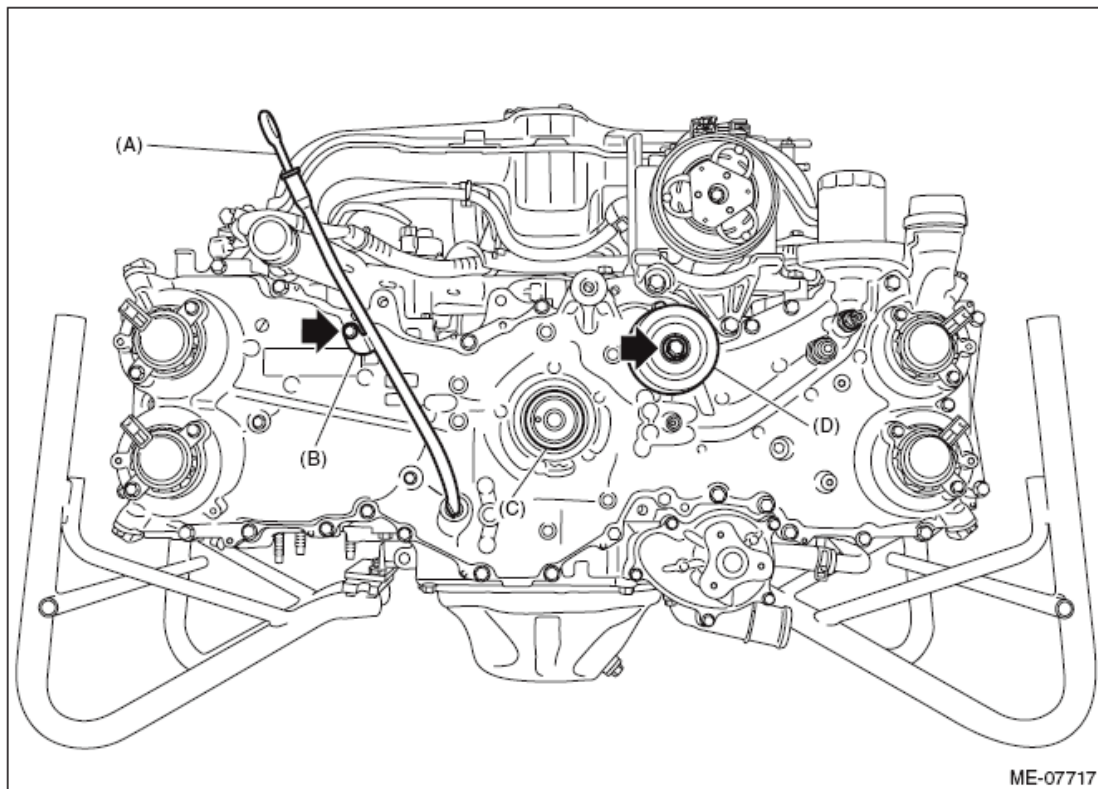


Fig. 248: Removing Oil Level Gauge Guide (Gasoline Engine Model)
Courtesy of SUBARU OF AMERICA, INC.

- HEV model

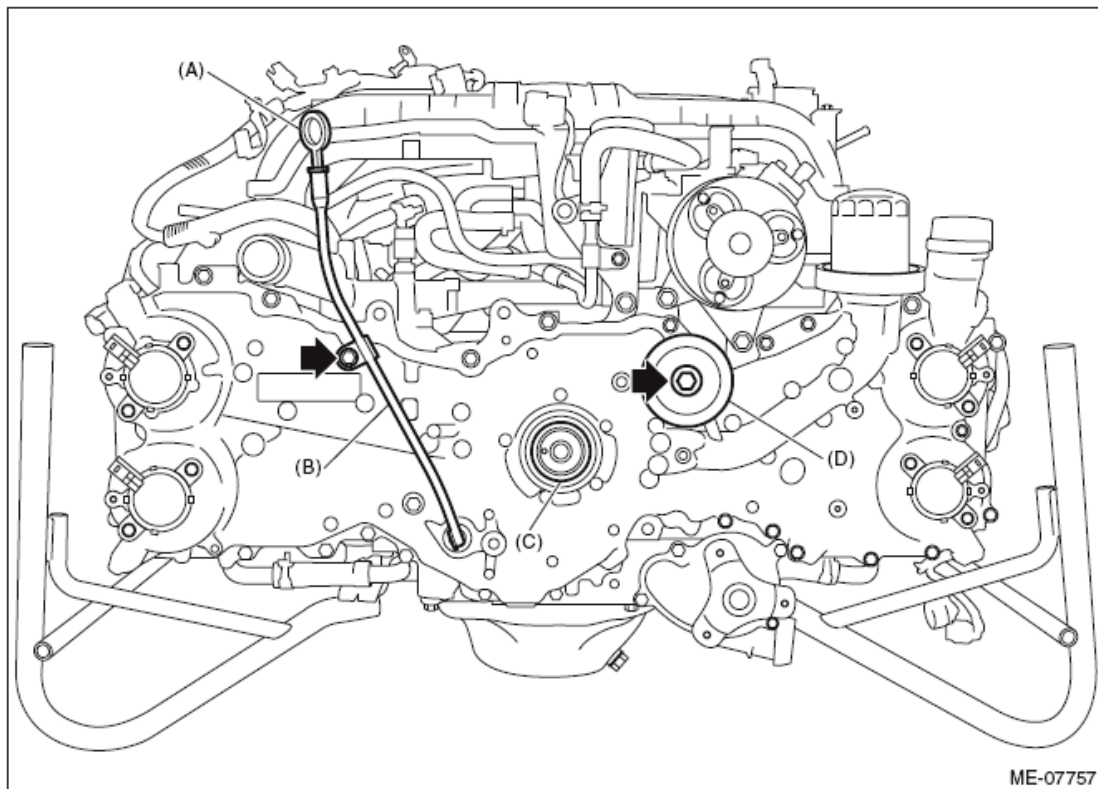


Fig. 249: Removing Oil Level Gauge Guide (HEV Model)
Courtesy of SUBARU OF AMERICA, INC.

13. Remove the chain cover.

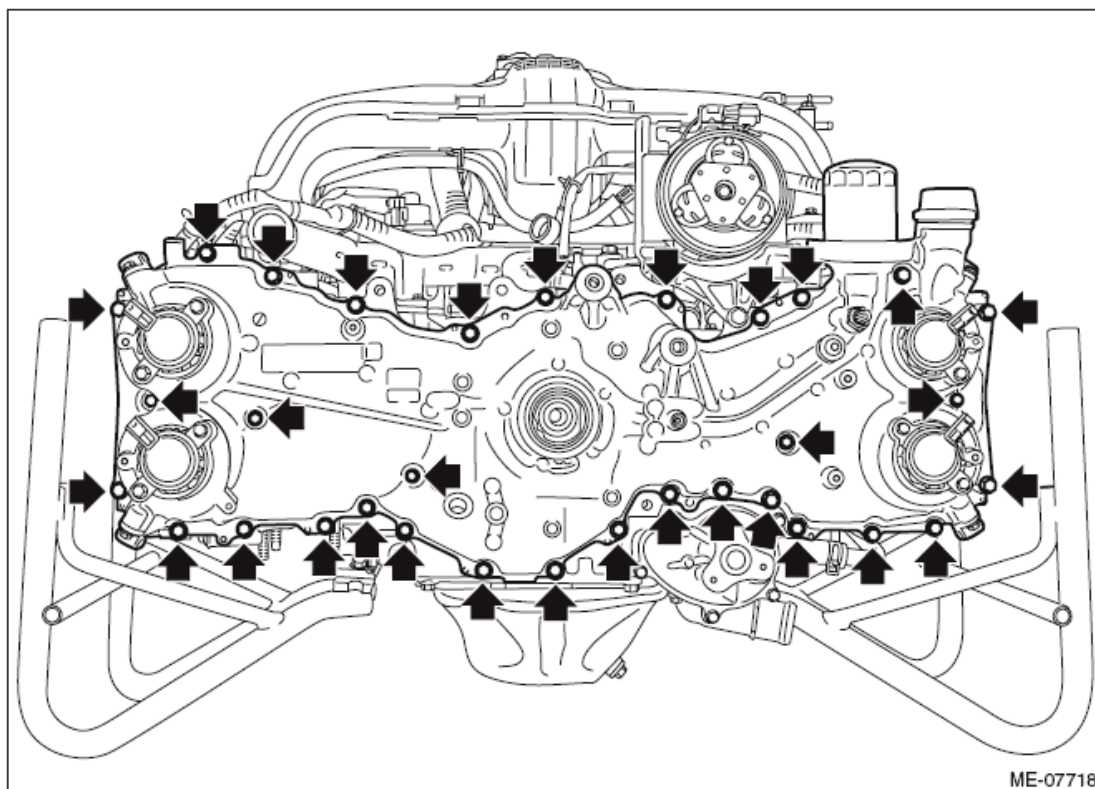


Fig. 250: Locating Chain Cover Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

14. Expand the area shown in the figure using a crowbar or a similar tool wrapped in tape for protection, and remove the chain cover from the engine.

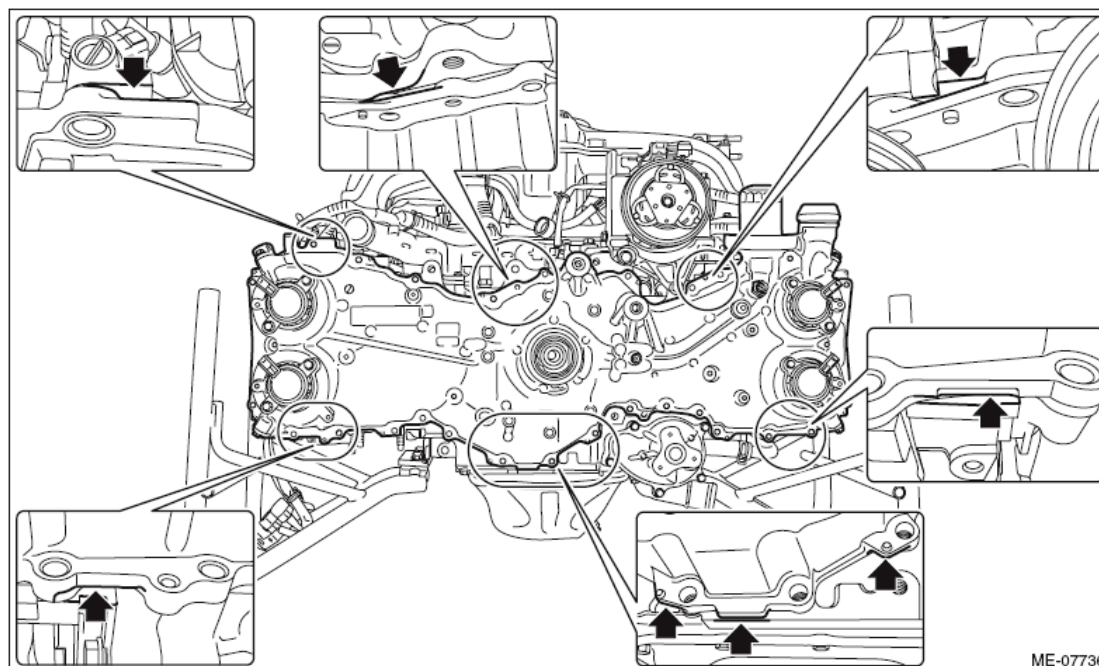


Fig. 251: Locating Chain Cover Gasket
Courtesy of SUBARU OF AMERICA, INC.

15. Remove the O-rings from cylinder head RH, cylinder head LH, cylinder block LH and oil pan upper.

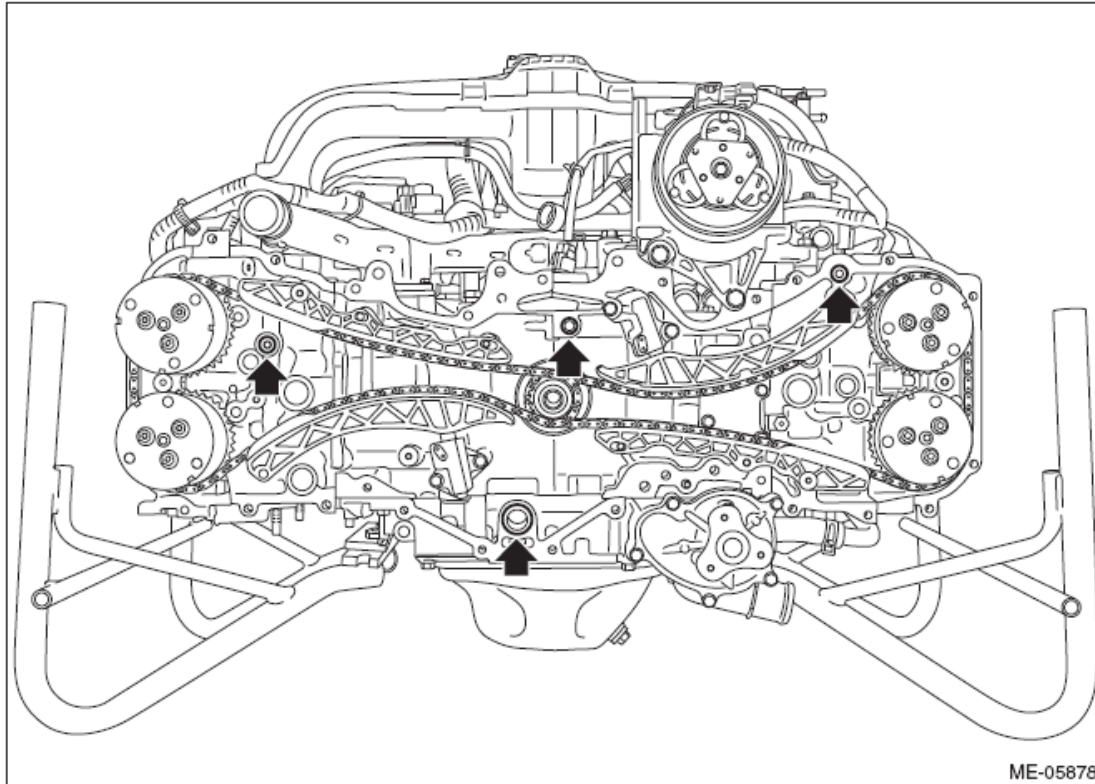


Fig. 252: Locating Cylinder Head And Block O-Rings
Courtesy of SUBARU OF AMERICA, INC.

16. Remove the front oil seal from the chain cover.

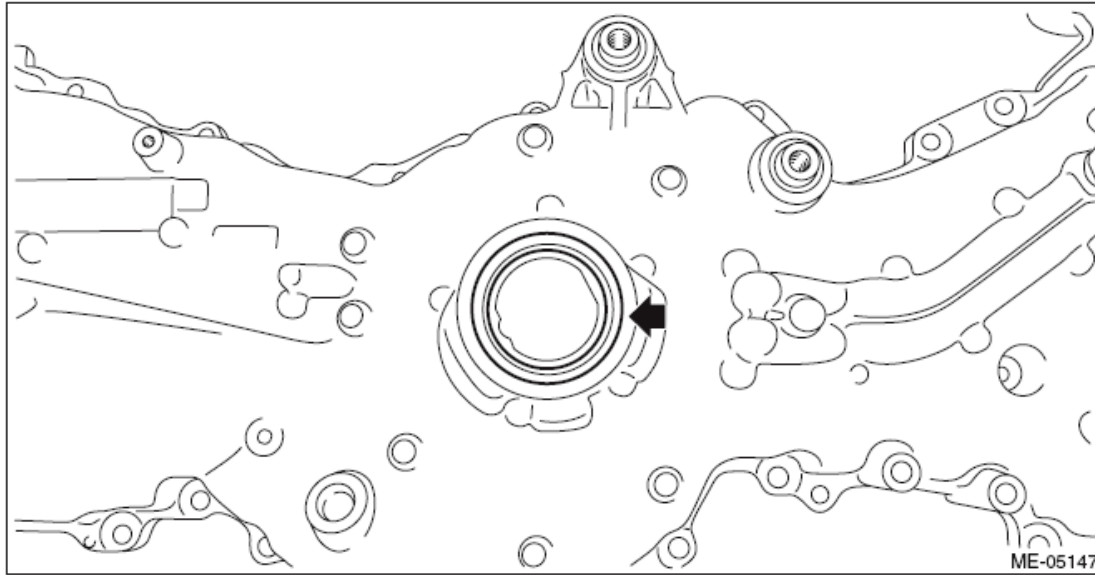


Fig. 253: Locating Chain Cover Front Oil Seal
Courtesy of SUBARU OF AMERICA, INC.

17. Remove the liquid gasket from the chain cover and engine unit.

INSTALLATION

1. Apply a light coat of engine oil to the front oil seal inner periphery and outer periphery, and install the front oil seal using ST.

ST 398437700 OIL SEAL INSTALLER

Front oil seal press-fit position:

1^{+0}_{-1} mm ($0.0039^{+0}_{-0.0039}$ in) position from chain cover end face

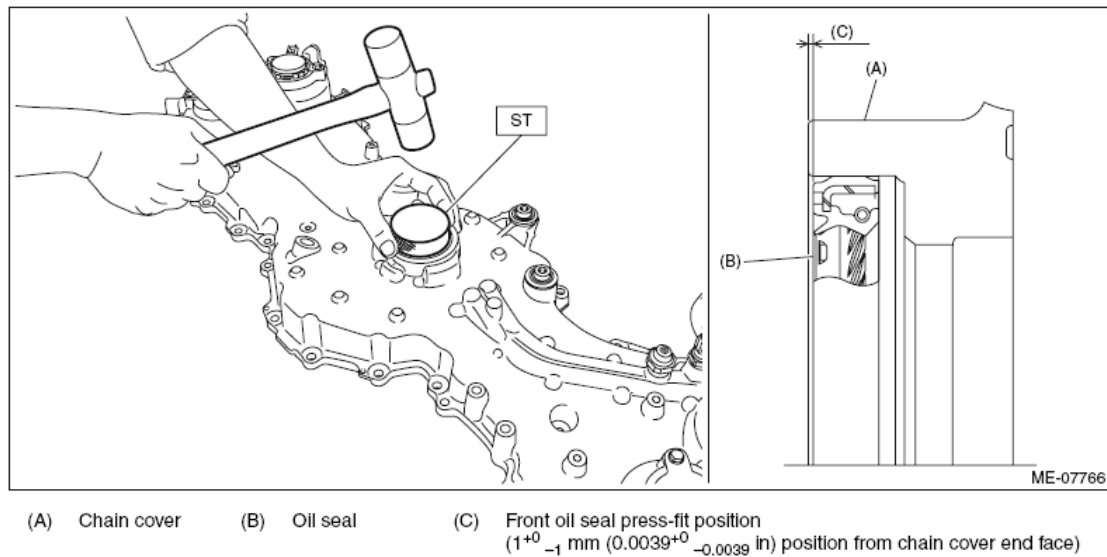


Fig. 254: Installing Front Oil Seal Using Tool
 Courtesy of SUBARU OF AMERICA, INC.

2. Install the O-rings to cylinder head RH, cylinder head LH, cylinder block LH and oil pan upper.

NOTE:

- Use new O-rings.
- Apply a coat of engine oil to the O-rings.

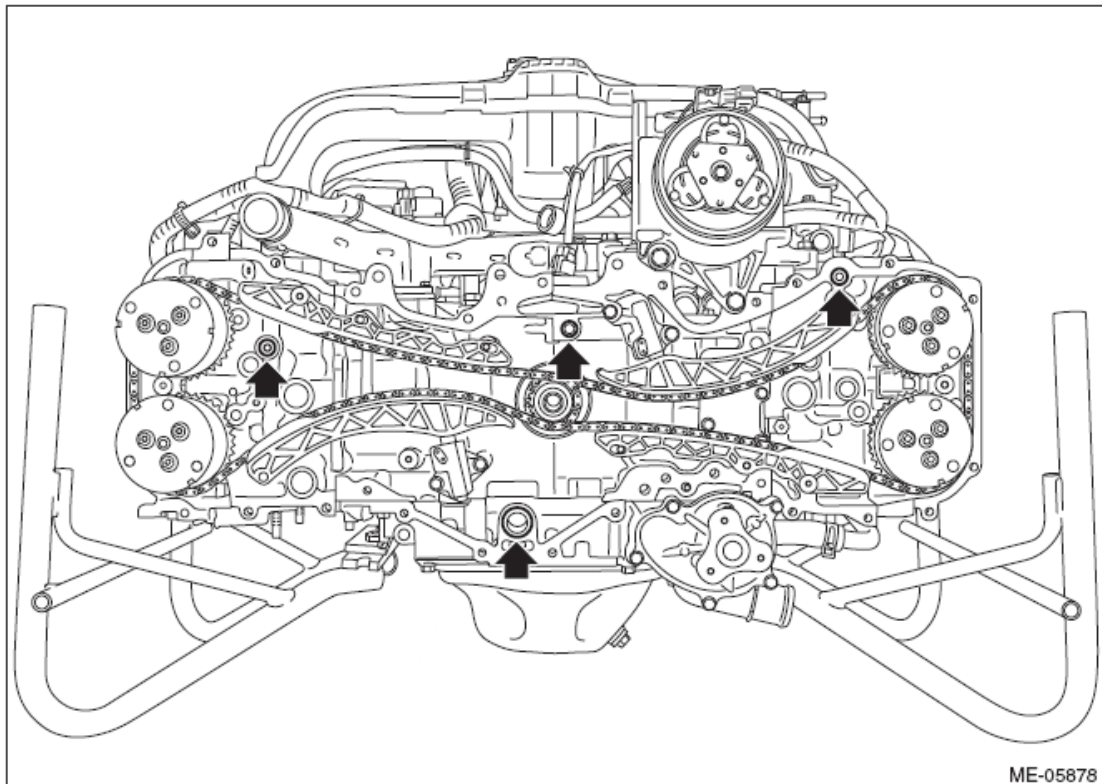


Fig. 255: Locating Cylinder Head And Block O-Ring
Courtesy of SUBARU OF AMERICA, INC.

3. Apply liquid gasket if there are gaps between front camshaft cap and cam carrier (A), cam carrier and cylinder head (B), and cylinder head and cylinder block (C) as shown in the figure.

Liquid gasket:

THREE BOND 1217G (Part No. K0877Y0100) or equivalent

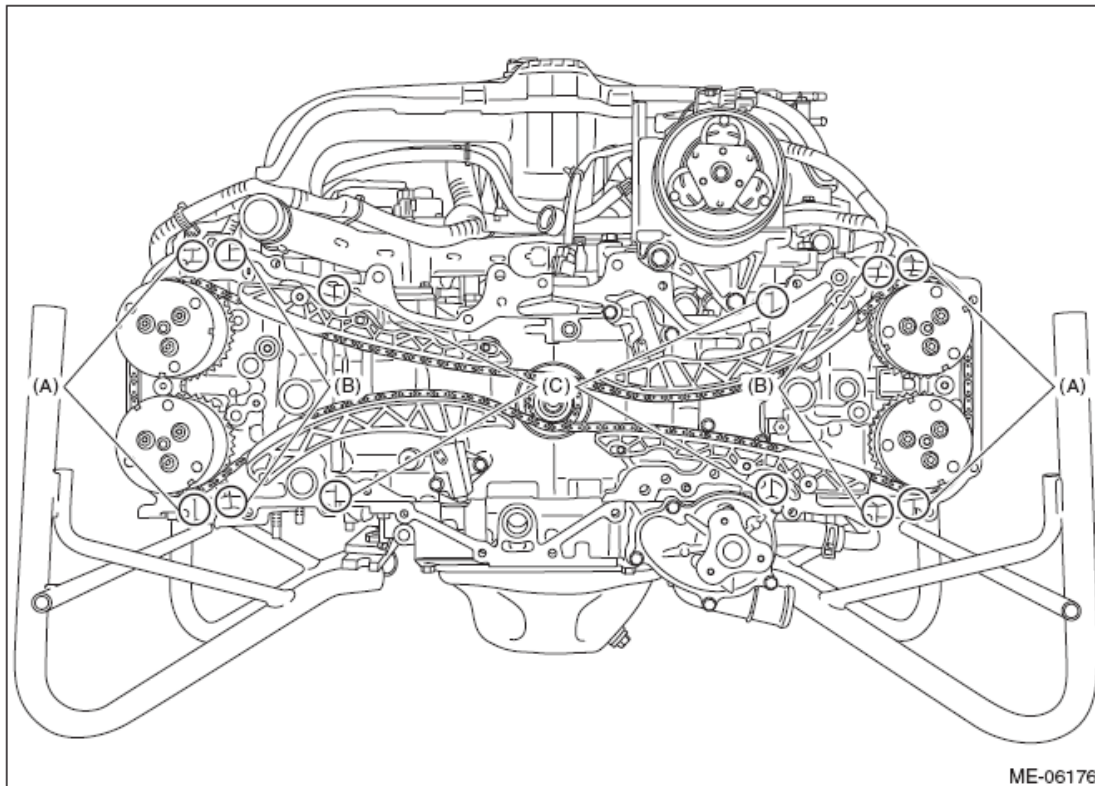


Fig. 256: Identifying Liquid Gasket Applying Area On Chain Cover
Courtesy of SUBARU OF AMERICA, INC.

4. Apply liquid gasket to the chain cover mating surface and center boss (5 places) as shown in the figure.

NOTE:


- Before applying liquid gasket, degrease the old liquid gasket seal surface of the engine and chain cover.
- Install within 5 min. after applying liquid gasket.

Liquid gasket:

THREE BOND 1217G (Part No. K0877Y0100) or equivalent

Liquid gasket applying diameter:

$4\pm0.5\text{ mm}$ ($0.1575\pm0.0197\text{ in}$)

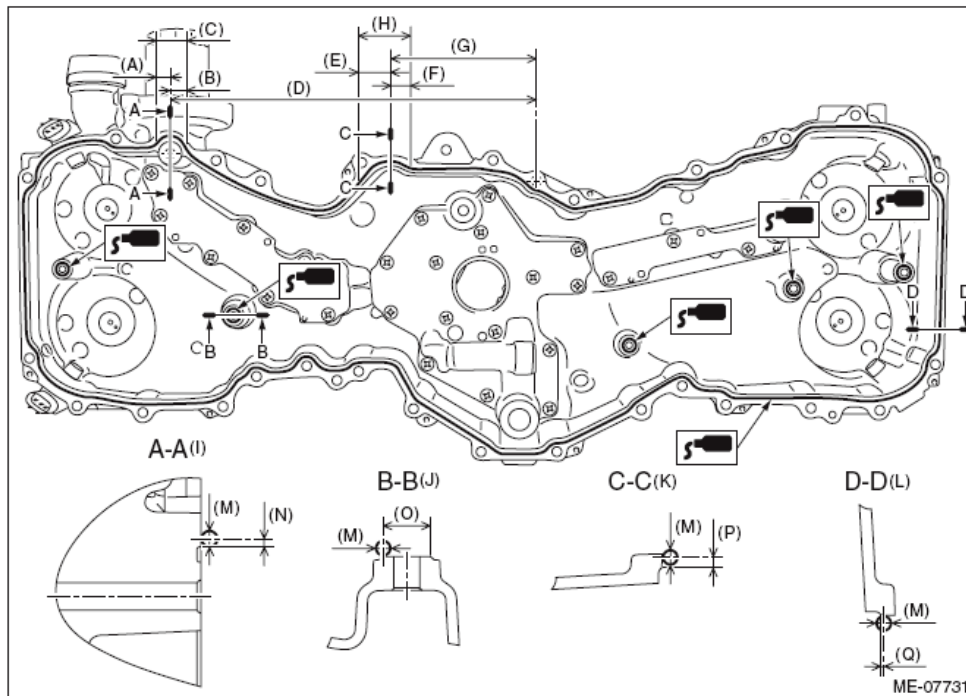

(A) 14.5 mm (0.5709 in)	(G) 127 mm (5.0000 in)	(M) $\phi 4\pm0.5\text{ mm}$ ($0.1575\pm0.0197\text{ in}$)
(B) 17.5 mm (0.6890 in)	(H) Range B	(N) 2 mm (0.0787 in)
(C) Range A	(I) Liquid gasket applying position of mating surfaces of range A	(O) $\phi 12\text{ mm}$ (0.4724 in)
(D) 316.2 mm (12.4488 in)	(J) Liquid gasket applying position of center boss (5 places)	(P) 2.5 mm (0.0984 in)
(E) 24.5 mm (0.9646 in)	(K) Liquid gasket applying position of mating surfaces of range B	(Q) 0.5 mm (0.0197 in)
(F) 18.5 mm (0.7283 in)	(L) Liquid gasket applying position of mating surfaces other than range A and range B	


Fig. 257: Identifying Liquid Gasket Applying Dimension On Chain Cover
Courtesy of SUBARU OF AMERICA, INC.

5. Set the chain cover, and tighten the bolts in numerical order as shown in the figure.

Tightening torque:

T1: 10 N.m (1.0 kgf-m, 7.4 ft-lb)

T2: 25 N.m (2.5 kgf-m, 18.4 ft-lb)

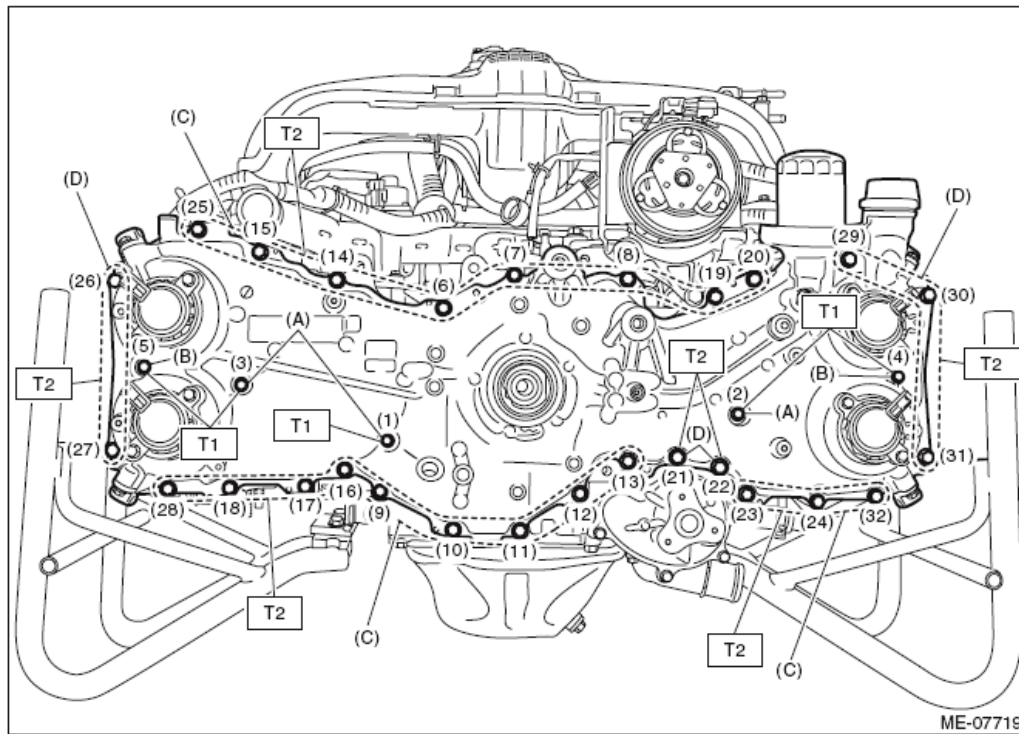

(A) M6 × 20
(B) M6 × 50

(C) M8 × 25

(D) M8 × 60

Fig. 258: Identifying Chain Cover Mounting Bolts Tightening Sequence
Courtesy of SUBARU OF AMERICA, INC.

6. Install the idler pulley (D), crank pulley boss (C) and oil level gauge guide (B), and insert the oil level gauge (A).

NOTE:

- When installing the idler pulley, be careful of the idler pulley cover direction.

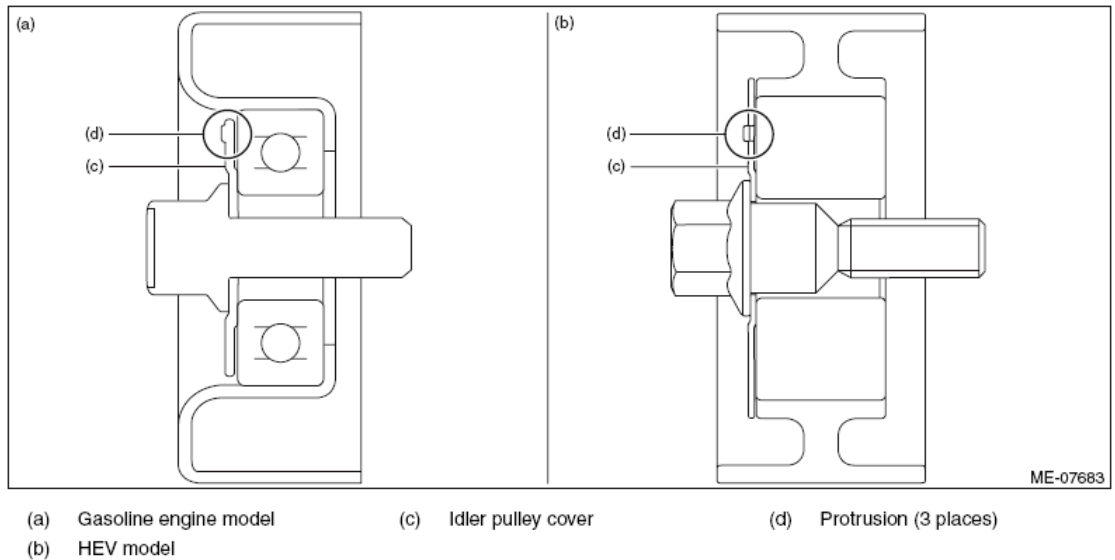


Fig. 259: Identifying Idler Pulley Cover And Protrusion
 Courtesy of SUBARU OF AMERICA, INC.

- Use a new O-ring to the oil level gauge guide.
- Apply a light coat of engine oil to the O-rings of the oil level gauge guide and the oil level gauge.

Tightening torque:

T1: 6.4 N.m (0.7 kgf-m, 4.7 ft-lb)

T2: 36 N.m (3.7 kgf-m, 26.6 ft-lb)

- Gasoline engine model

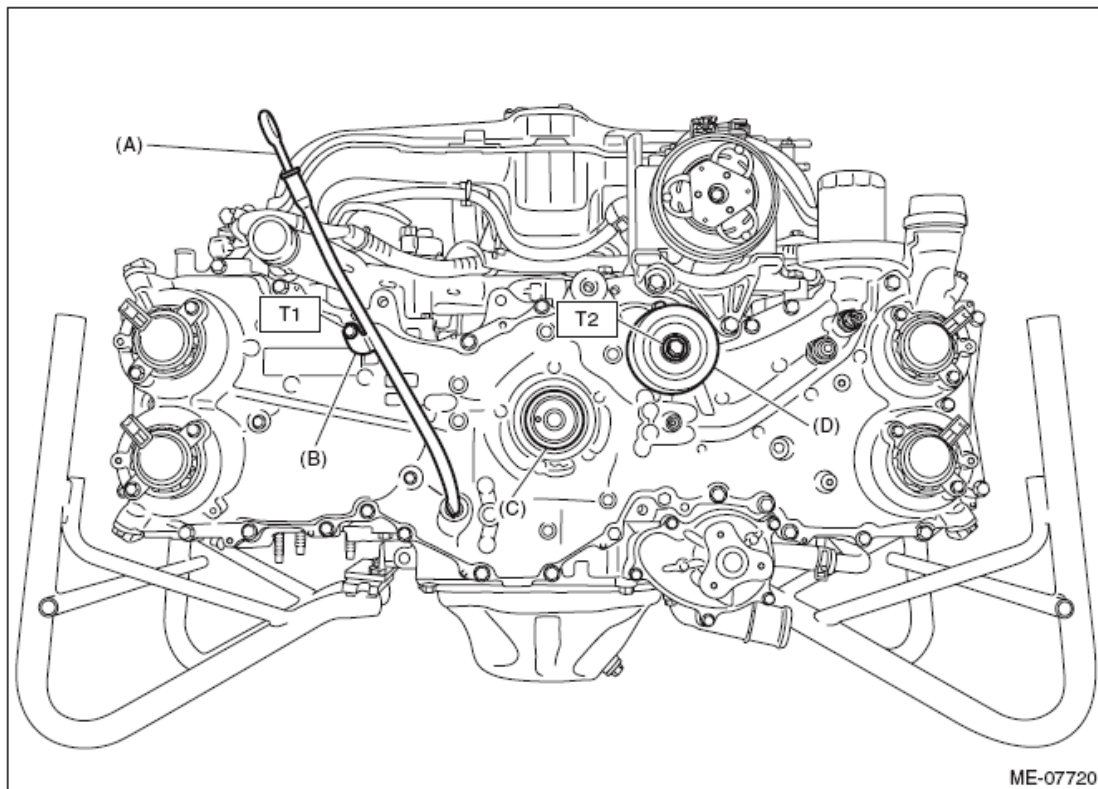


Fig. 260: Identifying Gasoline Engine Model
Courtesy of SUBARU OF AMERICA, INC.

- HEV model


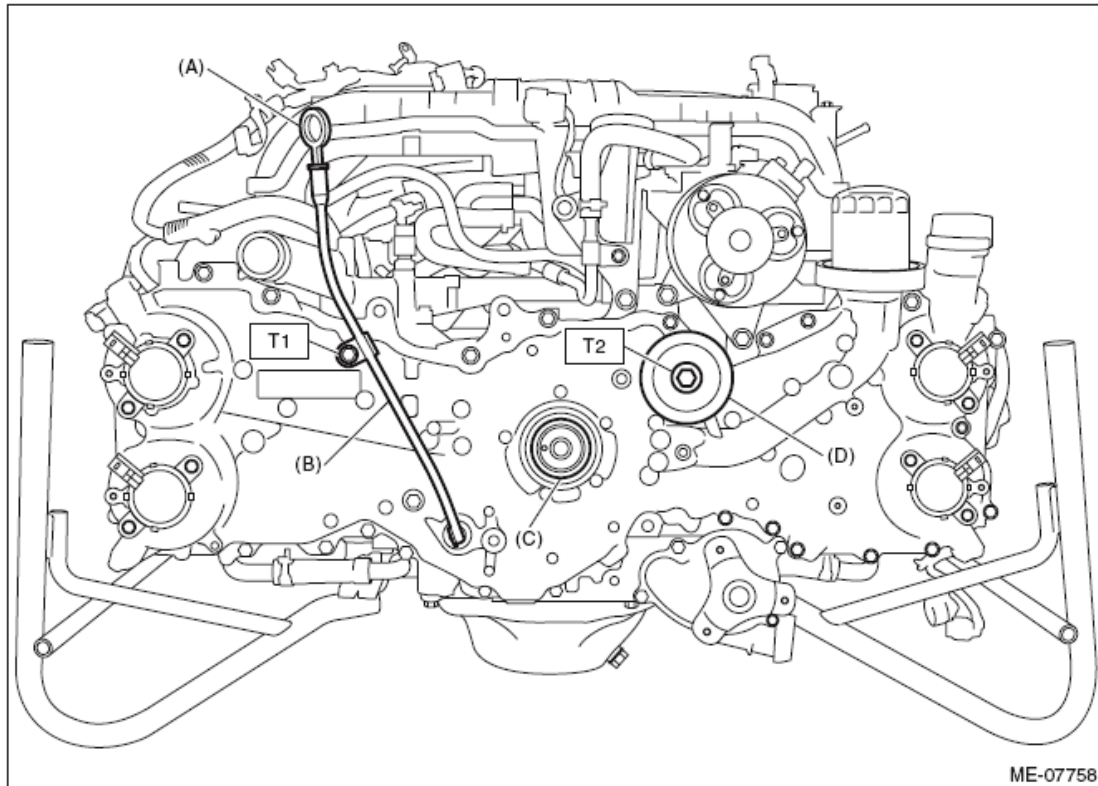


Fig. 261: Identifying HEV Model

Courtesy of SUBARU OF AMERICA, INC.

7. Connect the terminal (A) to the oil pressure switch, connector (B) to the engine oil temperature sensor, connector (C) to the intake oil control solenoid LH, connector (D) to the exhaust oil control solenoid LH, connector (E) to the intake camshaft position sensor LH, and connector (F) to the exhaust camshaft position sensor LH, and secure the engine harness with the clips (G) and (H).

NOTE: The oil pressure switch harness must be positioned toward the left lower side of the vehicle within the range of 90°.

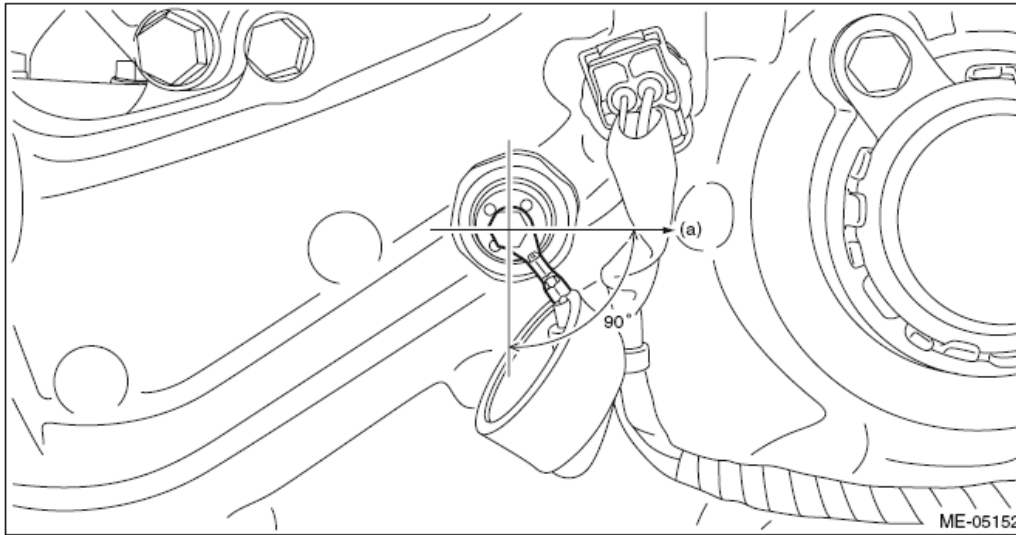

(a) Left side of vehicle

Fig. 262: Identifying Oil Pressure Switch Installation Position
Courtesy of SUBARU OF AMERICA, INC.

Tightening torque:

1.5 N.m (0.2 kgf-m, 1.1 ft-lb)

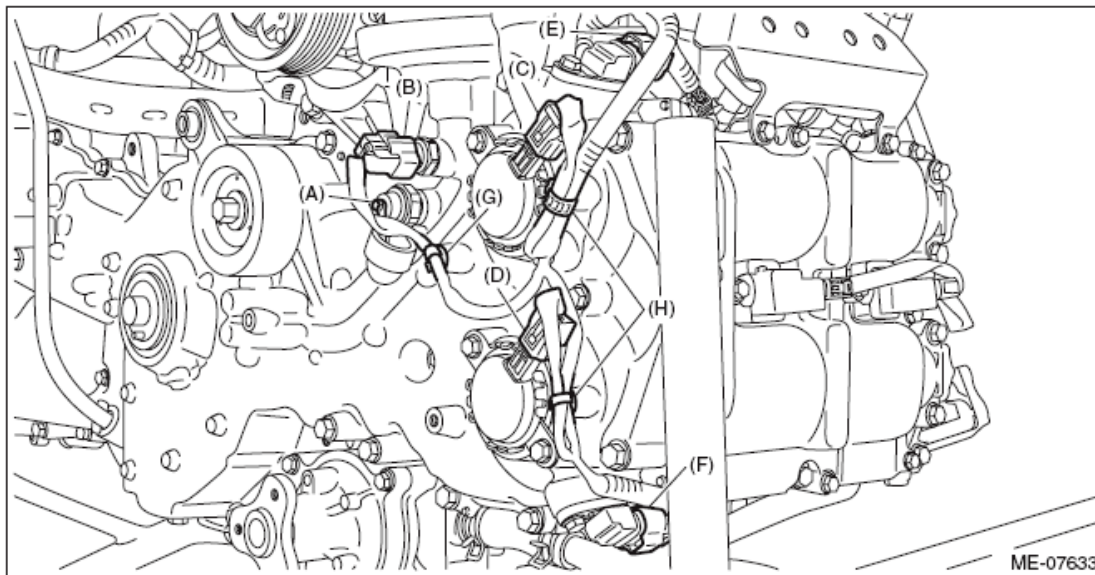


Fig. 263: Identifying Oil Pressure Switch Connectors
Courtesy of SUBARU OF AMERICA, INC.

8. Attach the rubber cap to the oil pressure switch.

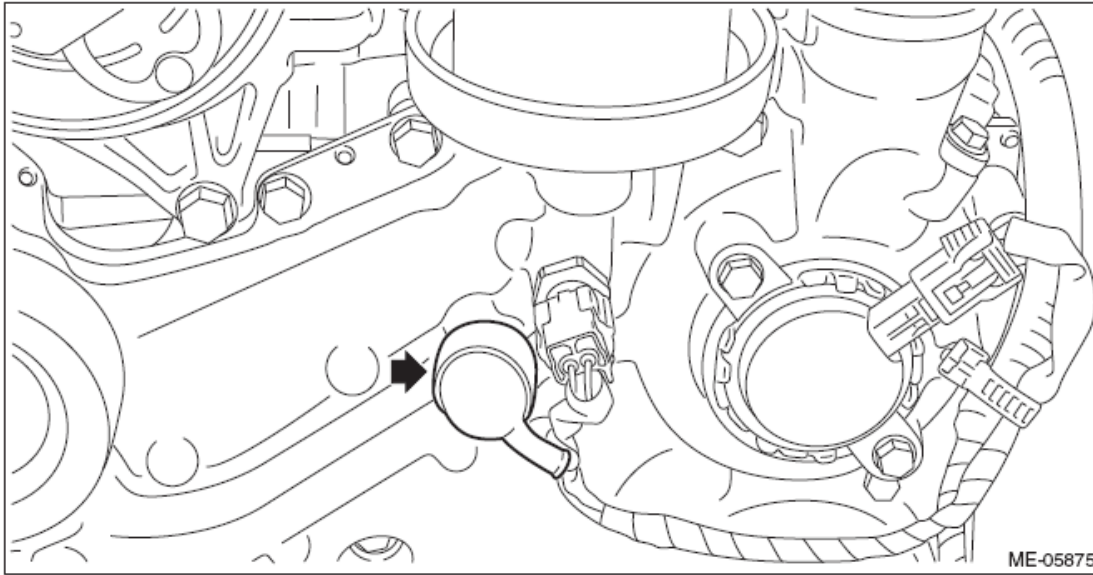


Fig. 264: Locating Oil Pressure Switch Rubber Cap
Courtesy of SUBARU OF AMERICA, INC.

9. Secure the oil level switch harness with clips (A), and connect the connectors to the oil level switch.

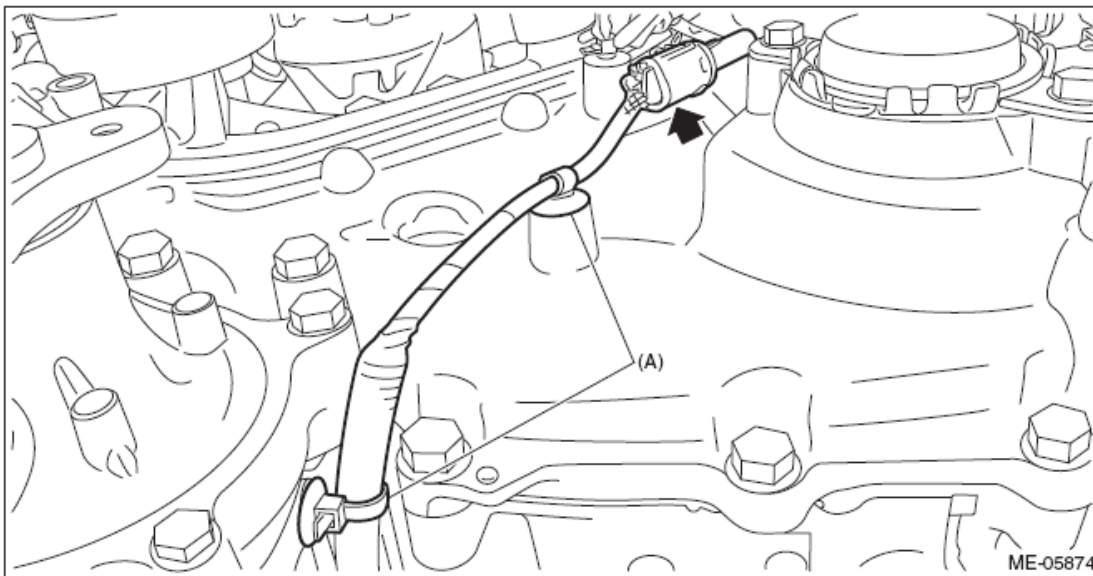


Fig. 265: Locating Oil Level Switch And Clips
Courtesy of SUBARU OF AMERICA, INC.

10. Connect the connector (A) to the intake oil control solenoid RH, connector (B) to the exhaust oil control solenoid RH, and connector (C) to the intake camshaft position sensor RH, and then secure the engine harness with the clips (D) (gasoline engine model) and the clips (E).

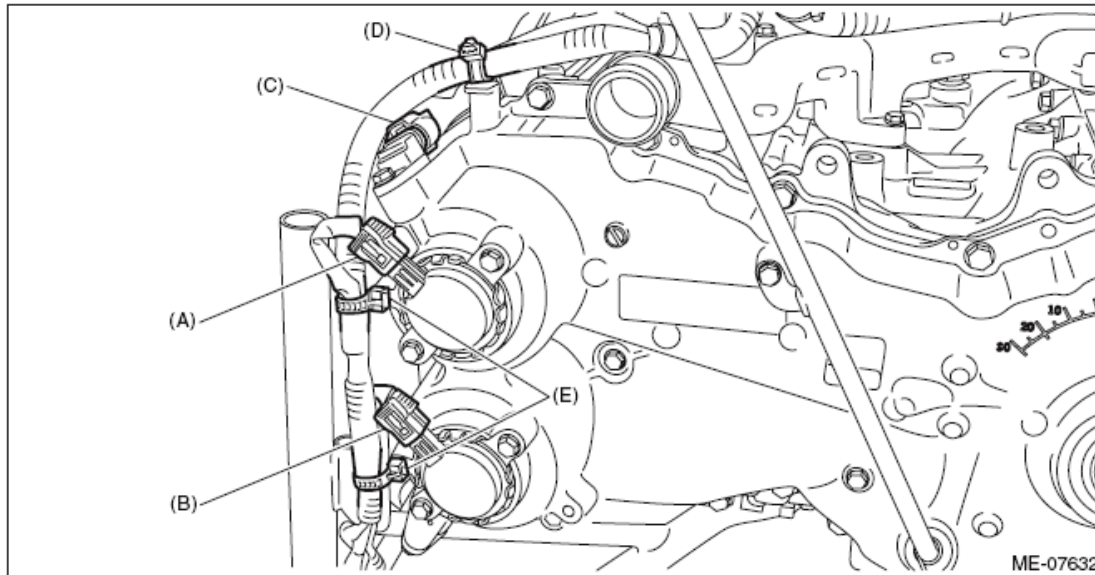


Fig. 266: Identifying Intake Oil Control Solenoid Connector
Courtesy of SUBARU OF AMERICA, INC.

11. Connect the connector (A) to the exhaust camshaft position sensor RH, and install the engine harness stay to the chain cover.

Tightening torque:

6.4 N.m (0.7 kgf-m, 4.7 ft-lb)

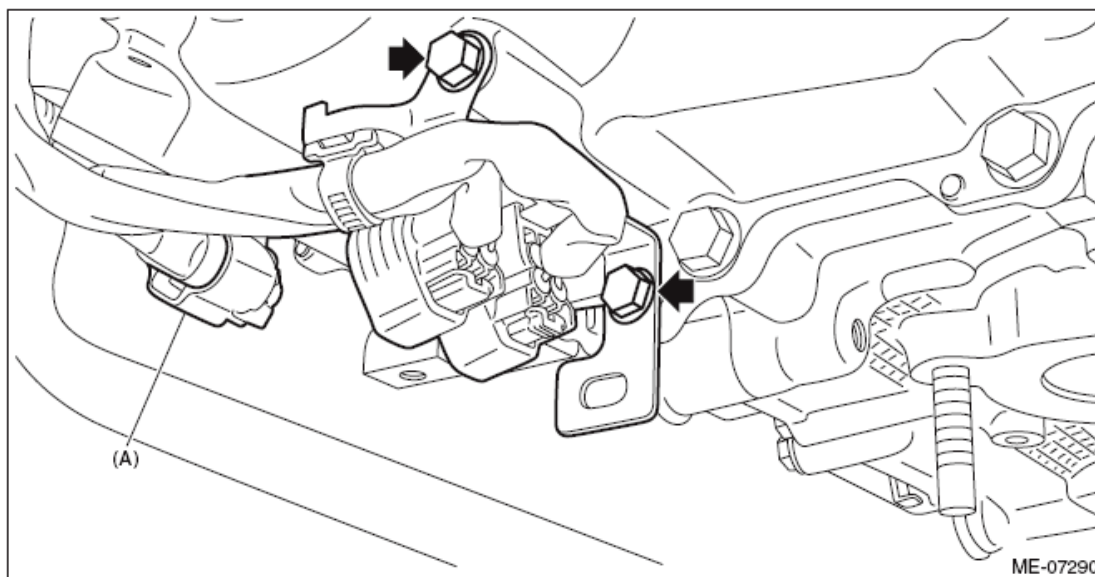


Fig. 267: Locating Engine Harness Stay To Chain Cover Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

12. Install the crank pulley. < Ref. to **INSTALLATION**, Crank Pulley.>

13. Install the water pump pulley. < Ref. to **WATER PUMP** , INSTALLATION, Water Pump.>
14. Fill engine oil. < Ref. to **REPLACEMENT** , Engine Oil.>
15. Install the generator bracket. (Gasoline engine electric power steering model)
 1. Set the generator bracket to the engine, and tighten the bolts in numerical order as shown in the figure.

Tightening torque:

36 N.m (3.7 kgf-m, 26.6 ft-lb)

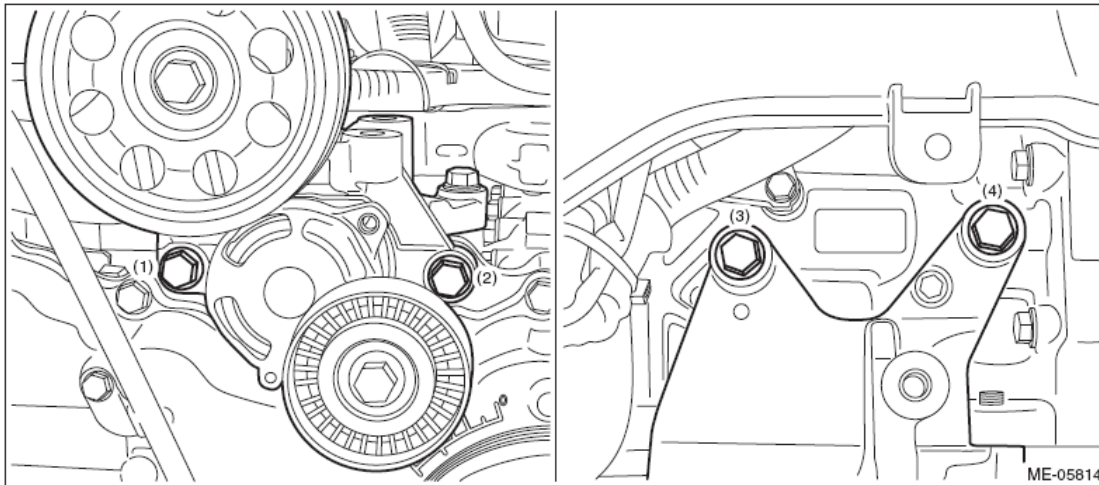


Fig. 268: Identifying Generator Bracket Mounting Bolt Tightening Sequence
Courtesy of SUBARU OF AMERICA, INC.

2. Install the generator. < Ref. to **INSTALLATION** , Generator.>
3. Install the V-belts. < Ref. to **GASOLINE ENGINE MODEL** , INSTALLATION, V-belt.>
16. Install the ISG. (HEV model) < Ref. to **INSTALLATION** , Integrated Starter Generator (ISG).>
17. When working on the vehicle

NOTE: When working on the vehicle, perform the following steps also.

1. Install the radiator. < Ref. to **INSTALLATION** , Radiator.>
2. Install the front exhaust pipe. < Ref. to **INSTALLATION** , Front Exhaust Pipe.>
3. Install the generator cord stay to the chain cover. (Gasoline engine model)

NOTE: Install the generator cord stay so that the folded end (a) touches the chain cover boss.

Tightening torque:

6.4 N.m (0.7 kgf-m, 4.7 ft-lb)

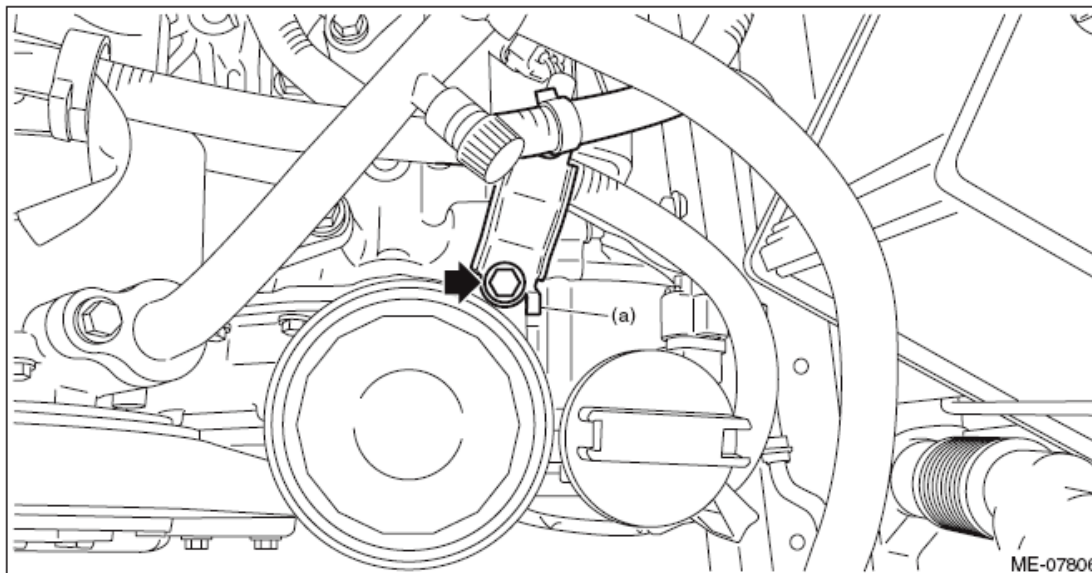


Fig. 269: Locating Generator Cord Stay
Courtesy of SUBARU OF AMERICA, INC.

DISASSEMBLY

1. Remove the oil filler cap.

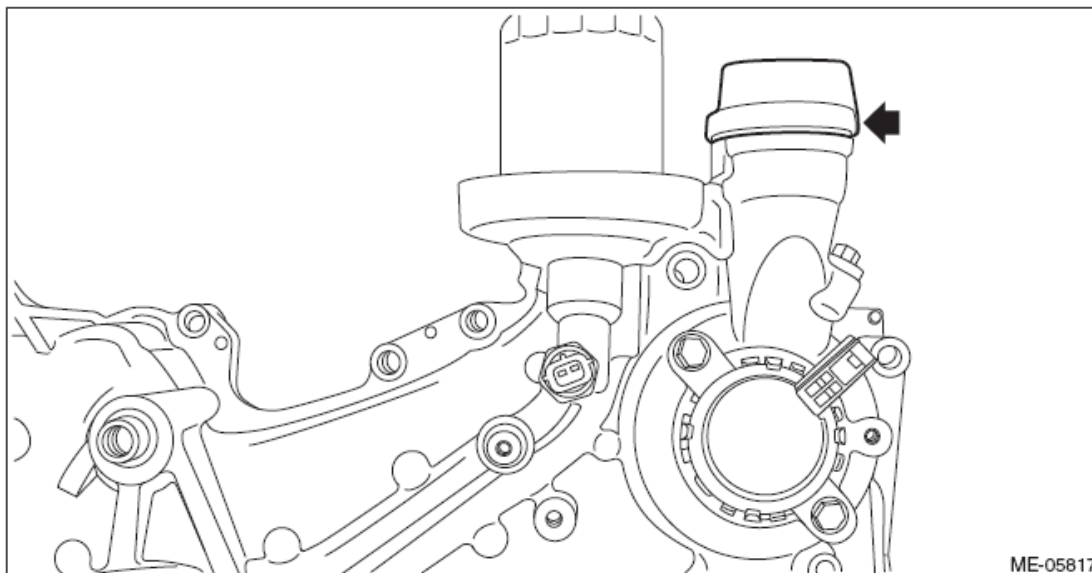


Fig. 270: Locating Oil Filler Cap
Courtesy of SUBARU OF AMERICA, INC.

2. Remove the engine oil filter and the oil pump union. < Ref. to **REMOVAL** , Engine Oil Filter.>

3. Remove the oil pressure switch. < Ref. to **REMOVAL** , Oil Pressure Switch.>
4. Remove the engine oil temperature sensor. < Ref. to **REMOVAL** , Engine Oil Temperature Sensor.> < Ref. to **REMOVAL** , Engine Oil Temperature Sensor.>
5. Remove the oil control solenoid. < Ref. to **REMOVAL** , Oil Control Solenoid.> < Ref. to **REMOVAL** , Oil Control Solenoid.>
6. Remove the camshaft position sensor. < Ref. to **REMOVAL** , Camshaft Position Sensor.> < Ref. to **REMOVAL** , Camshaft Position Sensor.>

ASSEMBLY

1. Install the camshaft position sensor. < Ref. to **INSTALLATION** , Camshaft Position Sensor.> < Ref. to **INSTALLATION** , Camshaft Position Sensor.>
2. Install the oil control solenoid. < Ref. to **INSTALLATION** , Oil Control Solenoid.> < Ref. to **INSTALLATION** , Oil Control Solenoid.>
3. Install the engine oil temperature sensor. < Ref. to **INSTALLATION** , Engine Oil Temperature Sensor.> < Ref. to **INSTALLATION** , Engine Oil Temperature Sensor.>
4. Install the oil pressure switch. < Ref. to **INSTALLATION** , Oil Pressure Switch.>
5. Install the engine oil filter and the oil pump union. < Ref. to **INSTALLATION** , Engine Oil Filter.>
6. Install the oil filler cap.

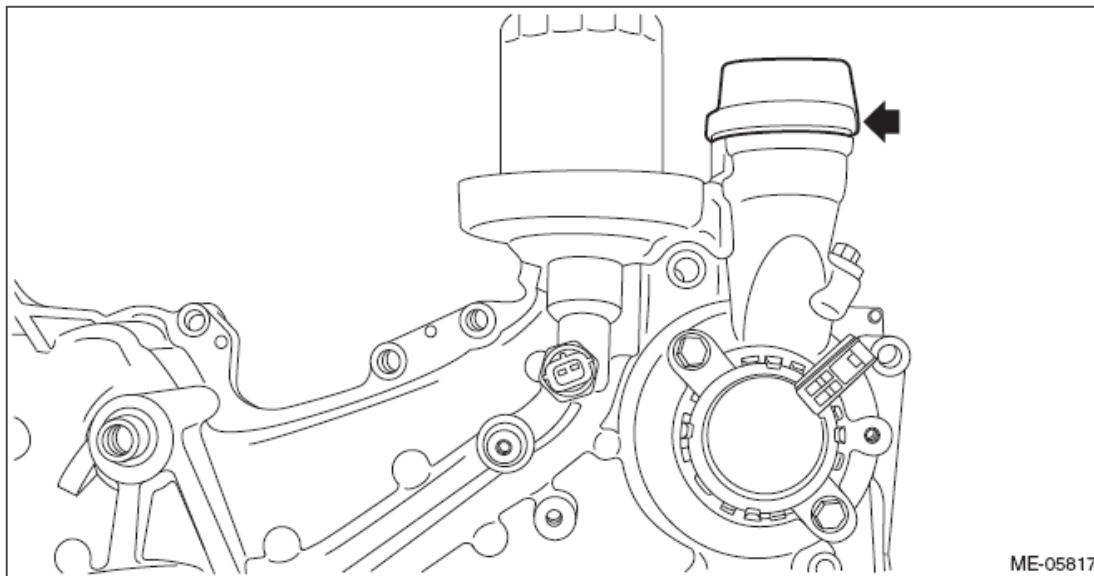


Fig. 271: Locating Oil Filler Cap
Courtesy of SUBARU OF AMERICA, INC.

INSPECTION

Check that the chain cover does not have deformation, cracks and any other damage.

TIMING CHAIN ASSEMBLY

REMOVAL**TIMING CHAIN RH**

NOTE: When replacing a single part, perform the work with the engine assembly installed to body.

1. Remove the chain cover. < Ref. to **REMOVAL**, Chain Cover.>
2. Using ST and by turning the crankshaft, align the alignment marks of crank sprocket, intake cam sprocket RH and exhaust cam sprocket RH to the positions as shown in the figure.

NOTE: If the alignment marks are aligned to the positions as shown in the figure, the crankshaft key is located at six o'clock position.

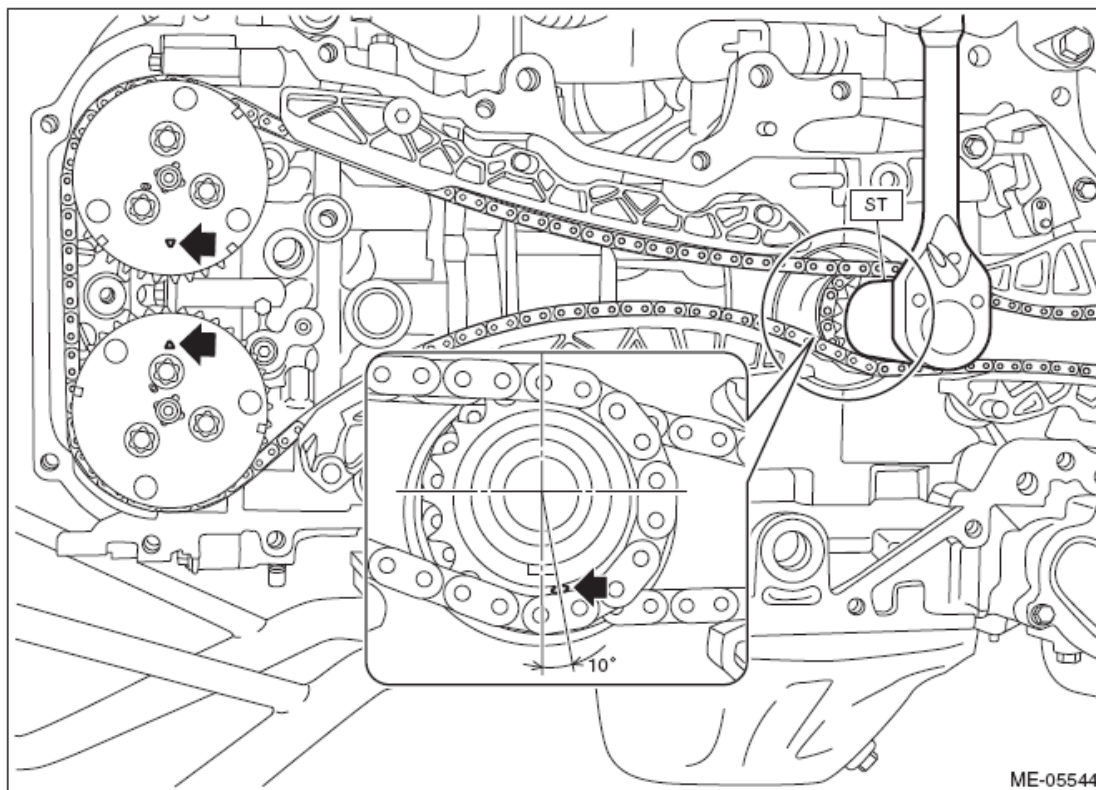
ST 18252AA000 CRANKSHAFT SOCKET

Fig. 272: Locating Timing Chain RH Alignment Marks
Courtesy of SUBARU OF AMERICA, INC.

3. Push down the chain lever tensioner RH, and with a 2.5 mm (0.98 in) dia. stopper pin or a 2.5 mm (0.98 in) dia. hex wrench inserted into the stopper pin hole in the chain tensioner RH, secure the plunger (A).

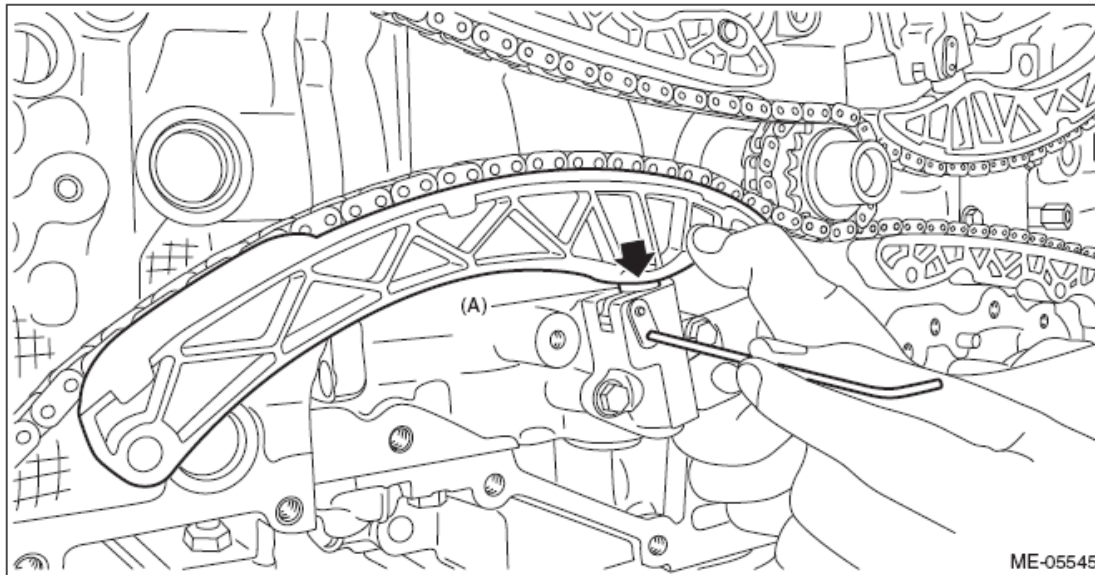


Fig. 273: Pressing Chain Lever Tensioner Using Stopper Pin
Courtesy of SUBARU OF AMERICA, INC.

4. Remove the chain tensioner RH, and remove the chain tensioner lever RH (A).

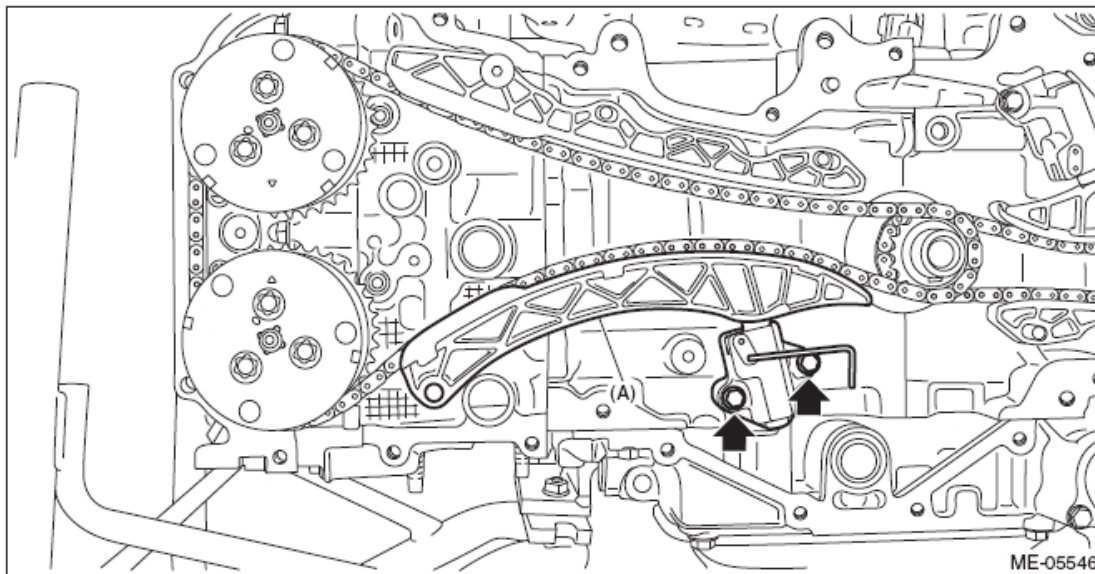


Fig. 274: Locating Chain Tensioner Lever RH Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

5. Remove the chain guide RH, and remove the timing chain RH (A).

CAUTION:

- If the timing chain RH is not installed, the intake camshaft RH and exhaust camshaft RH are kept at zero-lift position. All cams on the camshaft are not pressing down the roller rocker arm

(intake valve and exhaust valve). (Under this condition, all valves remain unlifted.)

- Intake camshaft RH and exhaust camshaft RH can be independently rotated with the timing chain RH removed. When the intake valve and exhaust valve lift at the same time, the valve heads contact each other and valve stem may bend. Do not turn it to the outside of range of zero-lift (in range where it can be turned lightly by hand).

NOTE: To avoid mixing with LH side, keep the removed part in order.

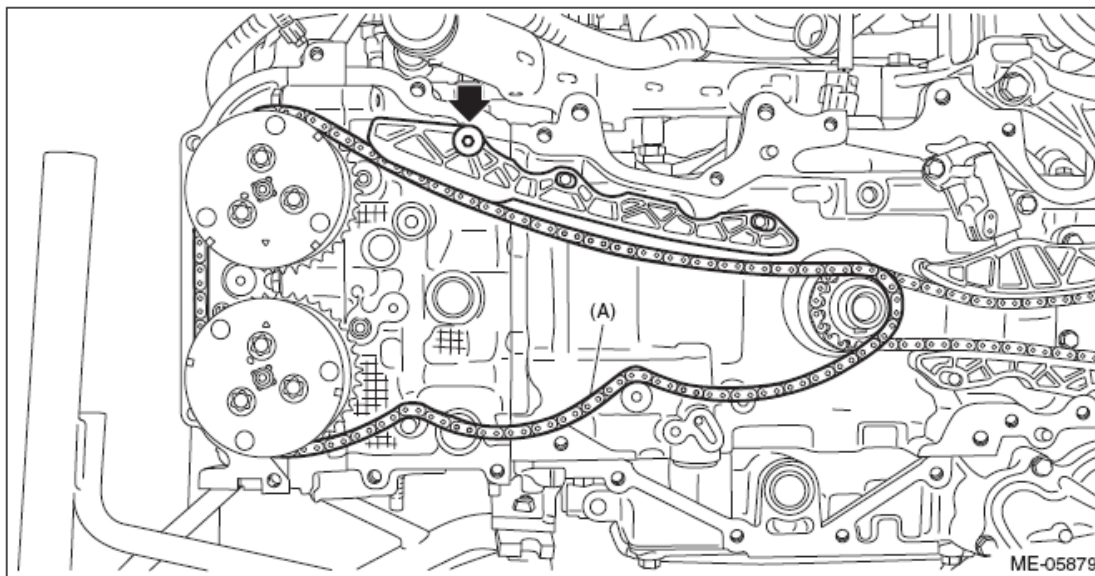


Fig. 275: Identifying Timing Chain RH
Courtesy of SUBARU OF AMERICA, INC.

TIMING CHAIN LH

1. Remove the timing chain RH. < Ref. to **TIMING CHAIN RH**, REMOVAL, Timing Chain Assembly.>
2. Using ST and by turning the crankshaft, align the alignment marks of crankshaft key, intake cam sprocket LH and exhaust cam sprocket LH to the positions as shown in the figure.

ST 18252AA000 CRANKSHAFT SOCKET

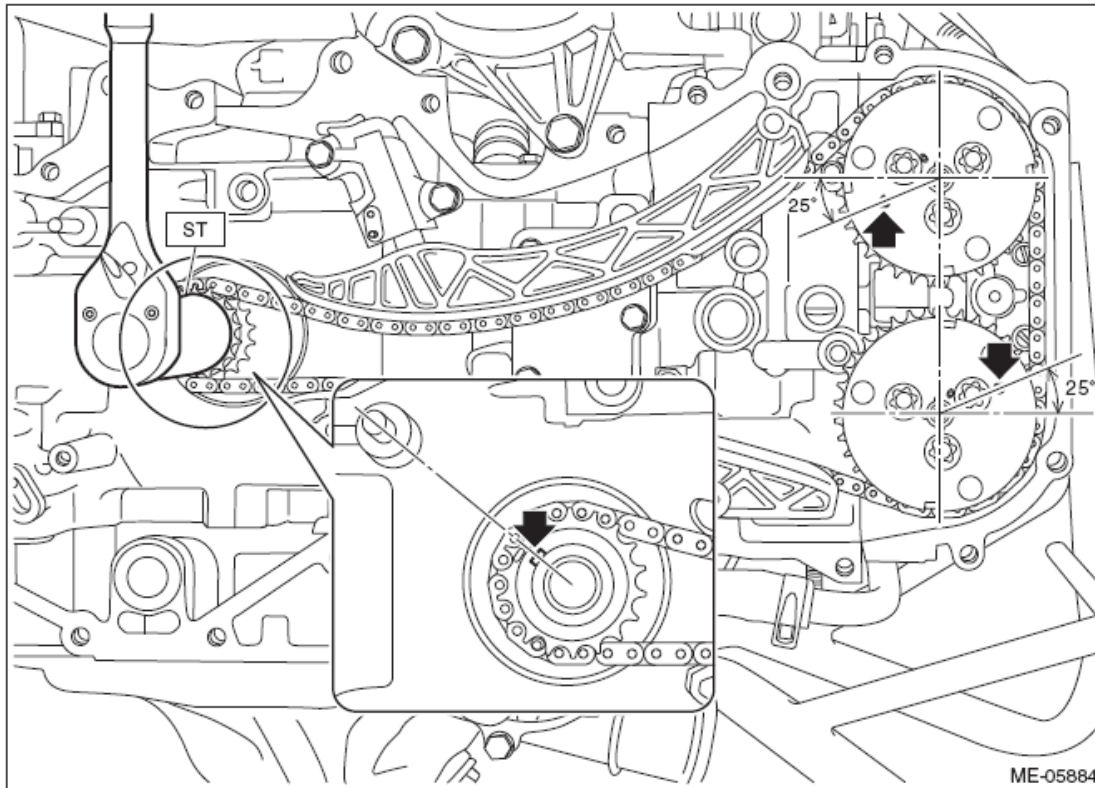


Fig. 276: Removing Timing Chain RH Using Tool
Courtesy of SUBARU OF AMERICA, INC.

3. Push down the chain lever tensioner LH, and with a 1.3 mm (0.05 in) dia. stopper pin or a 1.3 mm (0.05 in) dia. hex wrench inserted into the stopper pin hole in the chain tensioner LH, secure the plunger (A).

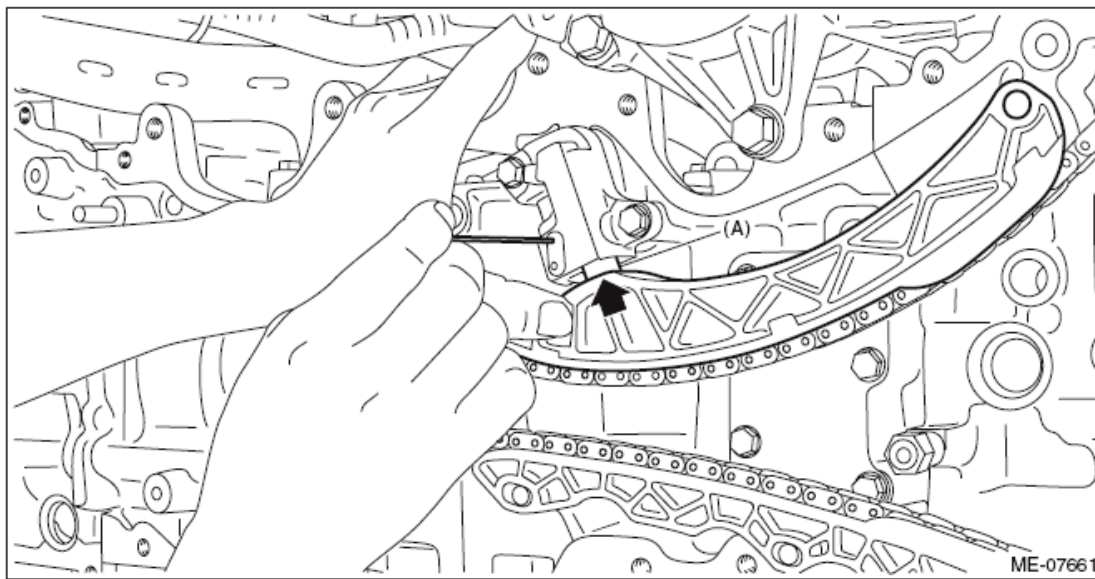


Fig. 277: Pressing Chain Lever Tensioner LH Using Stopper Pin
Courtesy of SUBARU OF AMERICA, INC.

4. Remove the chain tensioner LH, and remove the chain tensioner lever LH (A).

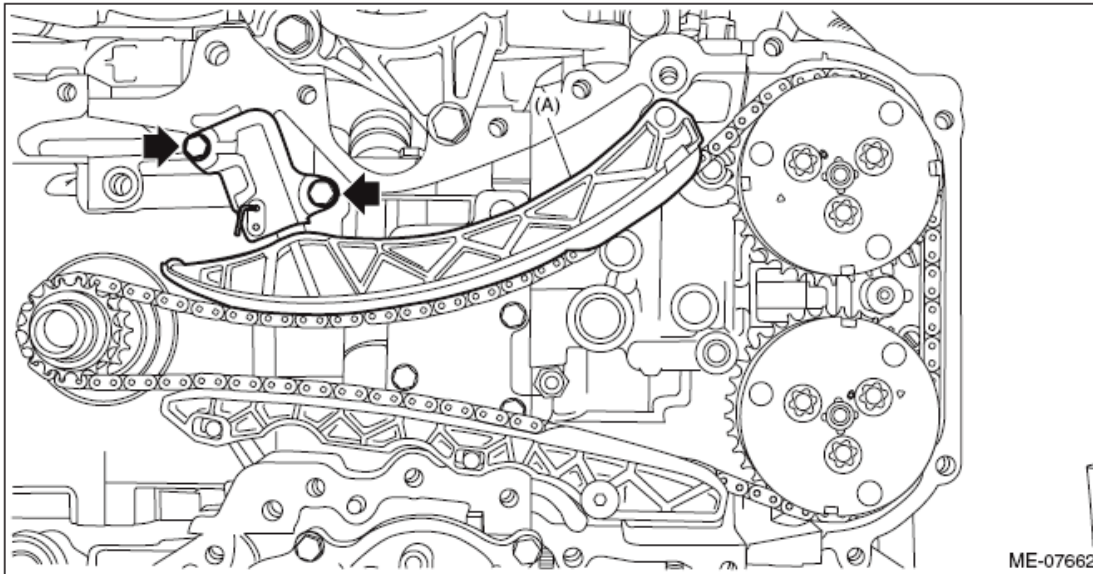


Fig. 278: Locating Chain Tensioner Lever LH Mounting Bolt
 Courtesy of SUBARU OF AMERICA, INC.

5. Remove the O-ring from the cylinder block LH.

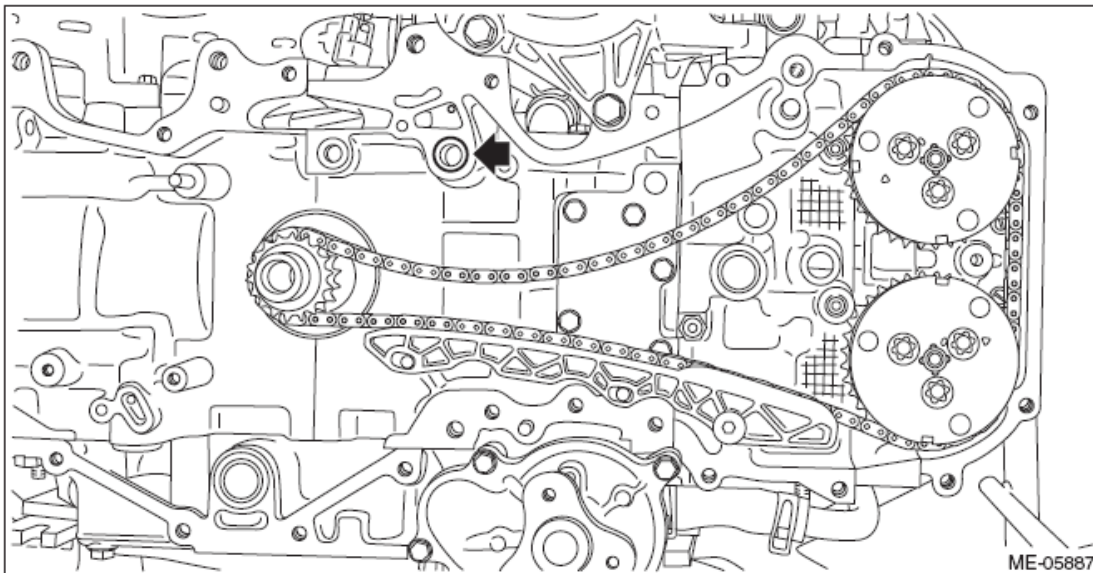


Fig. 279: Locating Cylinder Block LH O-Ring
 Courtesy of SUBARU OF AMERICA, INC.

6. Remove the chain guide LH, and remove the timing chain LH (A).

CAUTION: • If the timing chain LH is not installed, the exhaust camshaft LH

is kept at zero-lift position. All cams on the exhaust camshaft LH are not pressing down the roller rocker arm (exhaust valve). (Under this condition, exhaust valves remain unlifted.)

- Intake camshaft LH is kept at lift position. All cams on the intake camshaft LH are pressing down the roller rocker arm (intake valve). (Under this condition, intake valves remain lifted.)
- Intake camshaft LH and exhaust camshaft RH can be independently rotated with the timing chain LH removed. When the exhaust camshaft LH is turned, the valve heads contact each other and valve stem may bend as described in above. Do not turn the exhaust camshaft LH to the outside of range of zero-lift (in range where it can be turned lightly by hand).
- #1 piston and #4 piston are located near TDC. If the intake camshaft LH is turned, the valve and the piston may contact and valve stem may bend. Do not turn the intake camshaft LH at this time.

NOTE: To avoid mixing with RH side, keep the removed part in order.

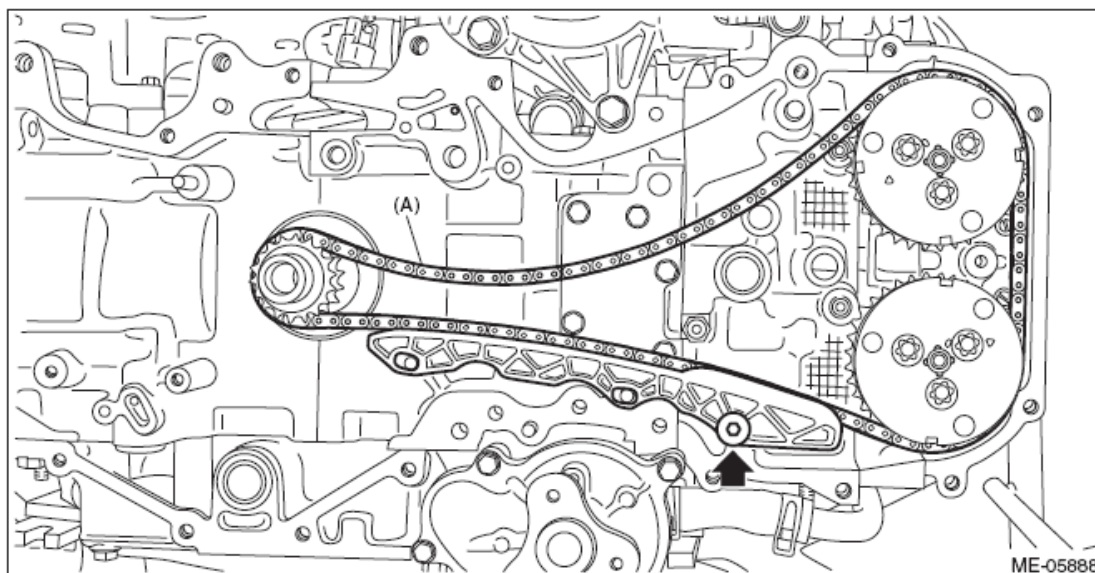


Fig. 280: Locating Chain Guide LH
Courtesy of SUBARU OF AMERICA, INC.

7. Using ST and by turning the crankshaft approximately 200° clockwise, align the alignment marks of crank sprocket to the positions as shown in the figure.

CAUTION:

- This procedure is required to prevent the valve and piston contacting with each other, by moving the all pistons to the middle of the cylinders.

- **Never turn counterclockwise because the valve and piston may contact. Counterclockwise turn is allowed only when adjusting precisely the alignment marks, after turning the crank sprocket alignment mark clockwise near the position as shown in the figure.**

ST 18252AA000 CRANKSHAFT SOCKET

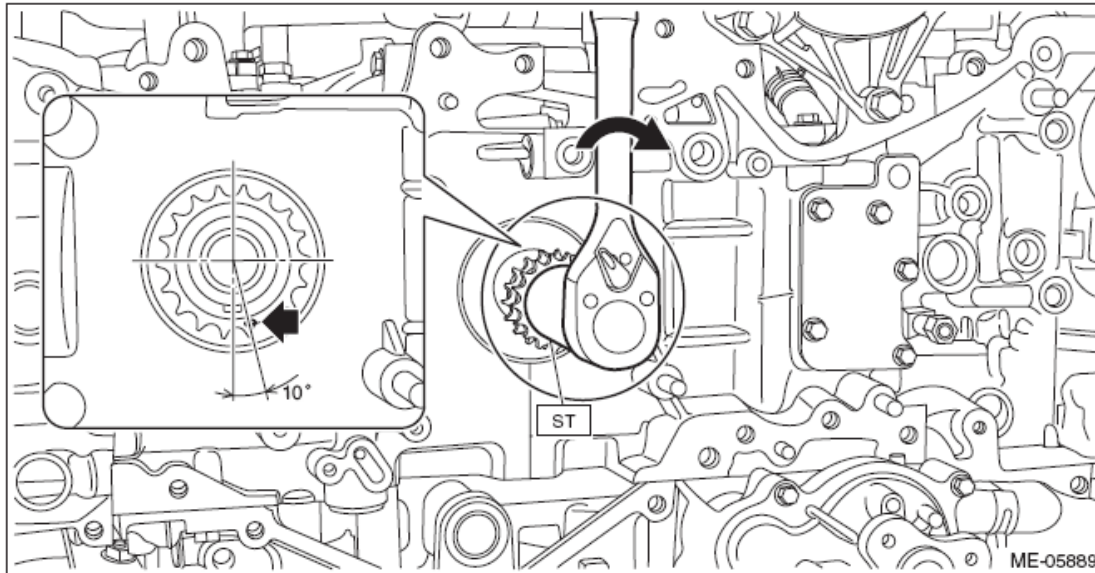


Fig. 281: Turning Crankshaft Using Crankshaft Socket
Courtesy of SUBARU OF AMERICA, INC.

8. Using ST and by turning the intake cam sprocket LH approximately 180°, align the alignment marks of intake cam sprocket LH to the positions (zero-lift position) as shown in the figure.

CAUTION: After this work, when the intake valve and exhaust valve lift at the same time, the valve heads contact each other and valve stem may bend. Do not turn the intake camshaft LH and exhaust camshaft LH to the outside of range of zero-lift (in range where it can be turned lightly by hand).

ST1 18355AA000 PULLEY WRENCH

ST2 18334AA030 PULLEY WRENCH PIN SET

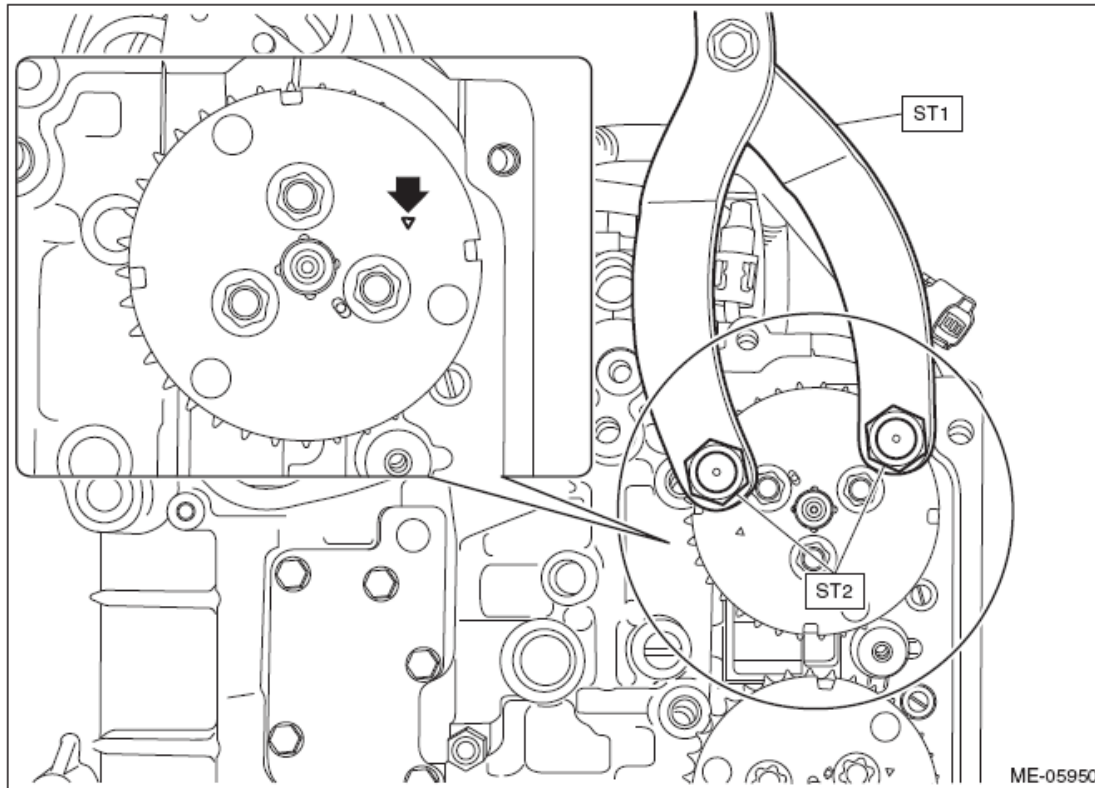


Fig. 282: Turning Intake Cam Sprocket LH Using Pulley Wrench Pin Set
Courtesy of SUBARU OF AMERICA, INC.

INSTALLATION

TIMING CHAIN LH

NOTE:

- Be careful that the foreign matter is not into or onto the assembled component during installation.
- Apply engine oil to all component parts of the timing chain.

1. Prepare to attach the chain tensioner LH.
 1. Move the link plate (A) in the direction of arrow to press in the plunger (B).

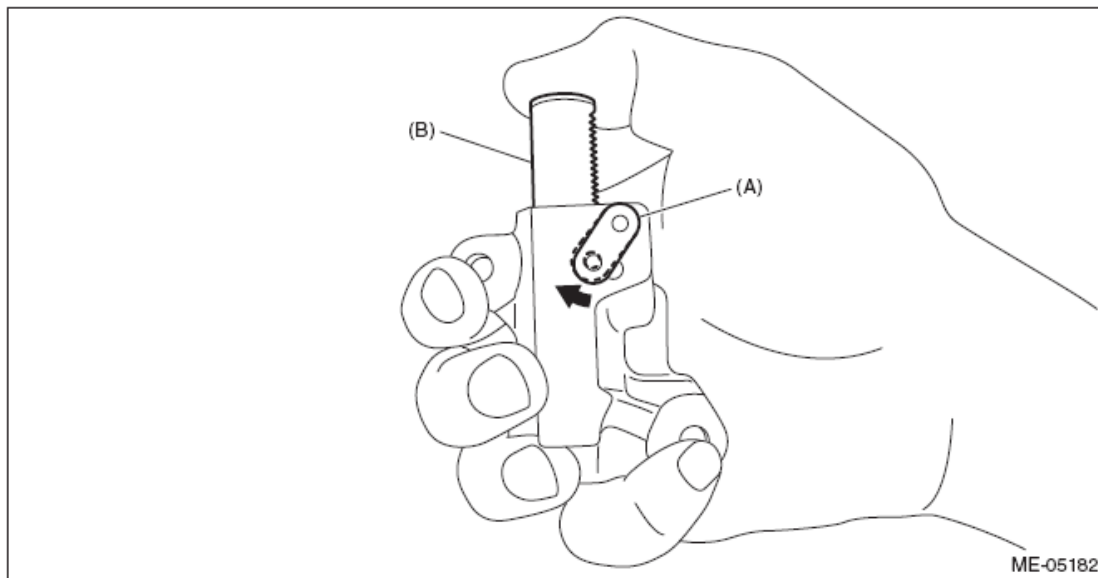


Fig. 283: Pressing Timing Chain LH Plunger
 Courtesy of SUBARU OF AMERICA, INC.

2. With a 1.3 mm (0.05 in) dia. stopper pin or a 1.3 mm (0.05 in) (nominal) dia. hex wrench inserted into the stopper pin hole, secure the plunger.

NOTE: If the stopper pin hole on the link plate and the stopper pin hole on the chain tensioner are not aligned, check that the first notch of plunger rack (A) is engaged with the stopper tooth (B). If not engaged, retract the plunger a little so that the first notch of plunger rack (A) is engaged with the stopper tooth (B).

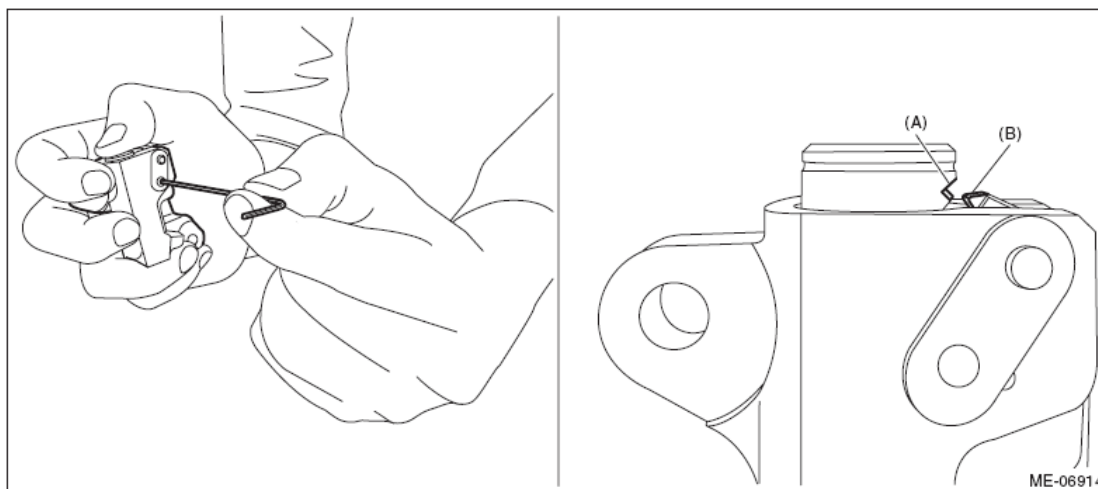


Fig. 284: Pressing Chain Tensioner LH Plunger
 Courtesy of SUBARU OF AMERICA, INC.

2. Check that the crank sprocket is located at the position shown in the figure. If not aligned, using ST turn

the crankshaft to align the crank sprocket alignment mark to the position shown in the figure.

NOTE: This procedure is required to prevent the valve and piston contacting with each other in the next step.

ST 18252AA000 CRANKSHAFT SOCKET

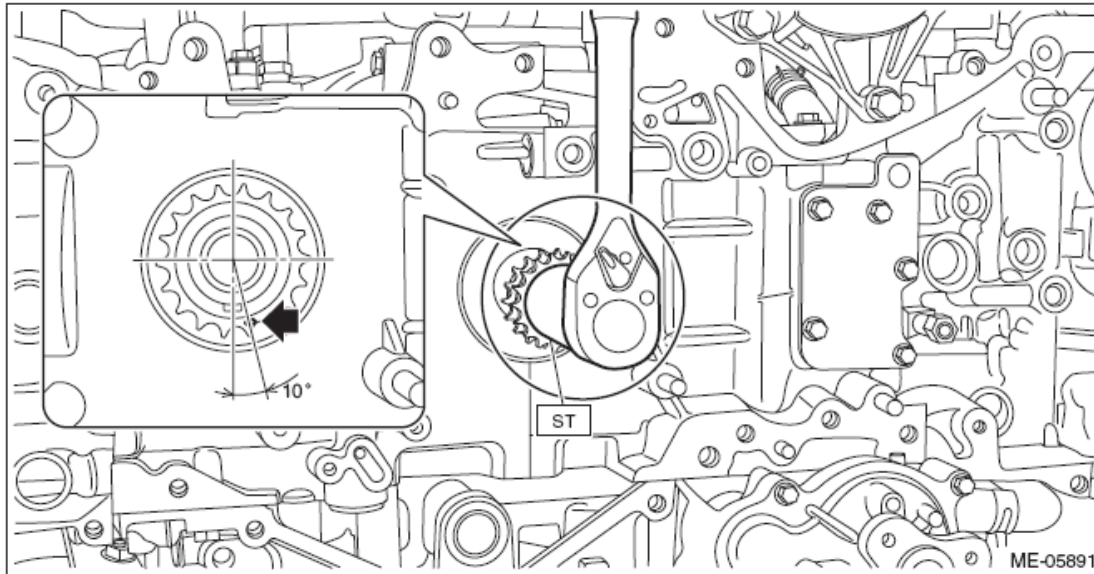


Fig. 285: Turning Crankshaft Using Tool
Courtesy of SUBARU OF AMERICA, INC.

3. Using ST and by turning the intake cam sprocket LH, align the alignment marks to the positions as shown in the figure.

CAUTION: When the intake valve and exhaust valve lift at the same time, the valve heads contact each other and valve stem may bend. Do not turn the exhaust camshaft LH.

ST1 18355AA000 PULLEY WRENCH

ST2 18334AA030 PULLEY WRENCH PIN SET

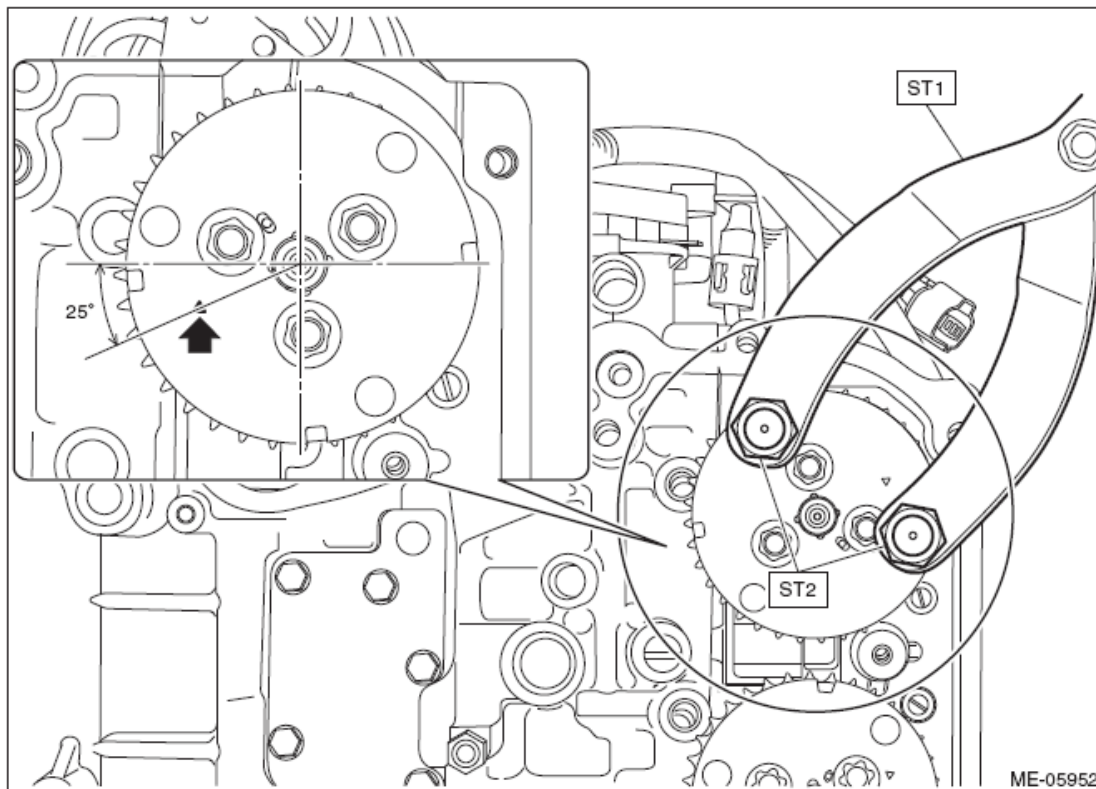


Fig. 286: Turning Intake Cam Sprocket LH Using Tool
Courtesy of SUBARU OF AMERICA, INC.

4. Using ST and by turning the crankshaft approximately 200° counterclockwise, align the alignment marks of crankshaft key to the positions as shown in the figure.

CAUTION: Never turn clockwise because the valve and piston may contact. Clockwise turn is allowed only when adjusting the key position precisely, after turning the crankshaft counterclockwise to bring the key near the position as shown in the figure.

ST 18252AA000 CRANKSHAFT SOCKET

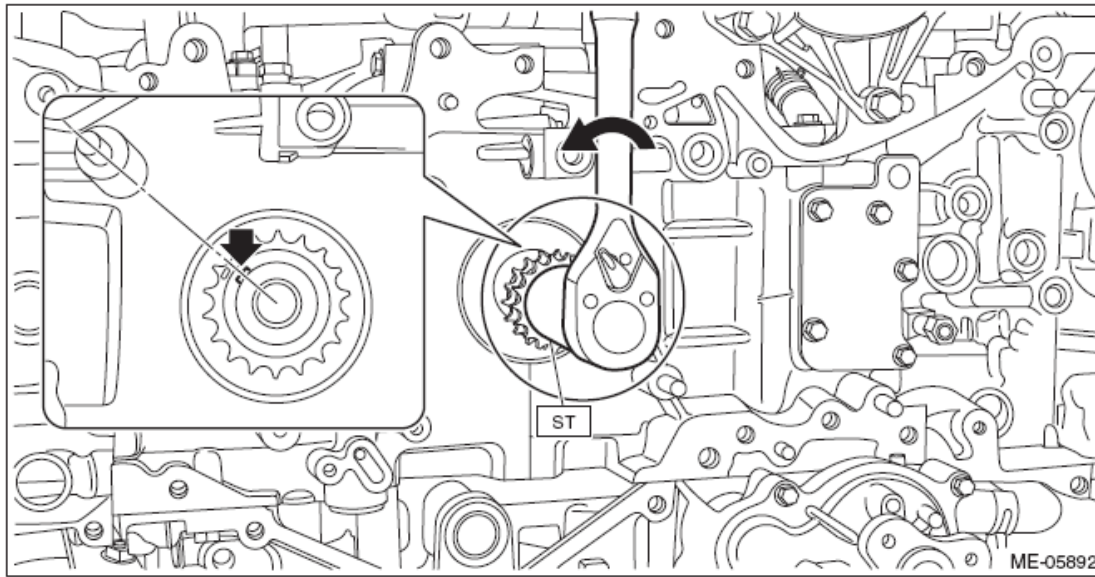


Fig. 287: Turning Crankshaft Using Suitable Tool
Courtesy of SUBARU OF AMERICA, INC.

5. Align the alignment mark of exhaust cam sprocket LH to the position shown in the figure.

CAUTION: To prevent valve damage, turn the exhaust cam sprocket LH only within the range of zero-lift (in range where it can be turned lightly by hand).

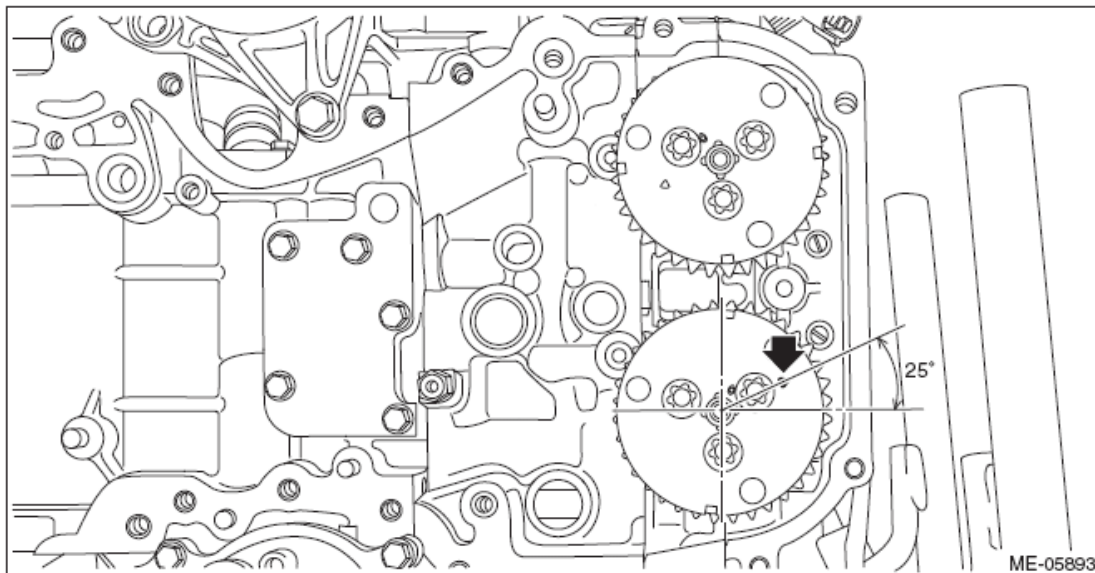



Fig. 288: Locating Exhaust Cam Sprocket LH Alignment Mark
Courtesy of SUBARU OF AMERICA, INC.

6. Install the timing chain LH and the timing chain guide LH.

1. Match the timing chain mark (blue) to the alignment mark of the crank sprocket.
2. Match the timing chain mark (pink) to the timing mark position of the intake cam sprocket LH.
3. Match the timing chain mark (pink) to the timing mark position of the exhaust cam sprocket LH.
4. Install timing chain guide LH.

Tightening torque:

6.4 N.m (0.7 kgf-m, 4.7 ft-lb)

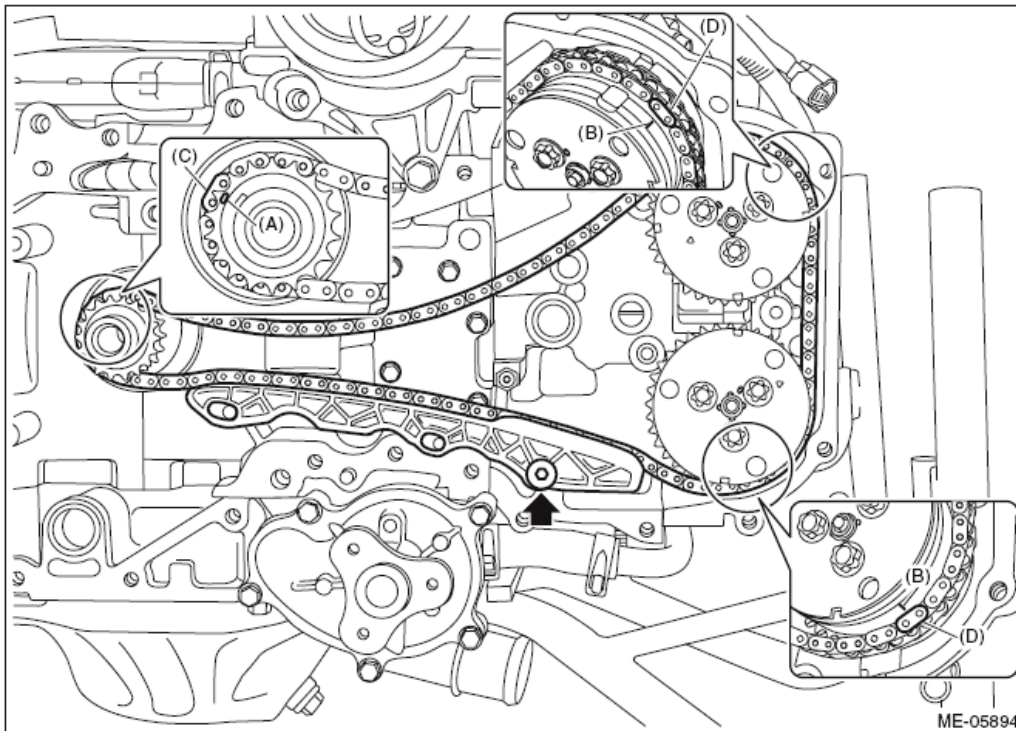

(A) Alignment mark

(C) Blue

(D) Pink

(B) Timing mark

Fig. 289: Locating Timing Chain Guide LH
Courtesy of SUBARU OF AMERICA, INC.

7. Install O-rings to the cylinder block LH.

NOTE: Use new O-rings.

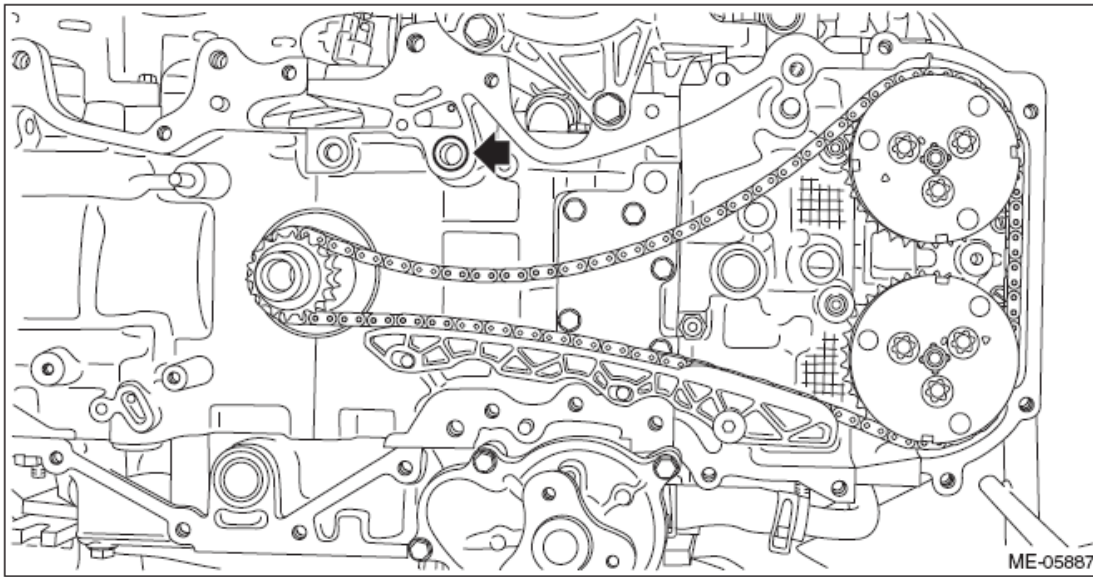


Fig. 290: Locating Cylinder Block LH O-Ring
Courtesy of SUBARU OF AMERICA, INC.

8. Install the chain tensioner lever LH (A) and chain tensioner LH.

Tightening torque:

6.4 N.m (0.7 kgf-m, 4.7 ft-lb)

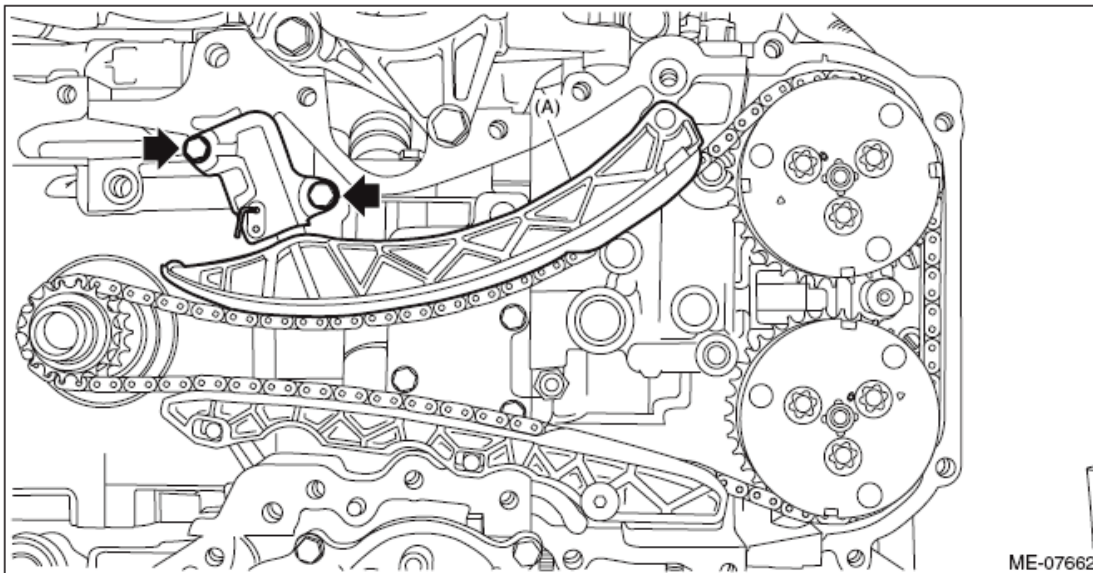


Fig. 291: Locating Chain Tensioner LH Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

9. Pull out the stopper pin from the chain tensioner LH.

CAUTION: Confirm the following before pulling out the stopper pin.

- Matching of the timing chain mark (blue) to the alignment mark of the crank sprocket.
- Matching of the timing chain mark (pink) to the timing mark position of the intake cam sprocket LH.
- Matching of the timing chain mark (pink) to the timing mark position of the exhaust cam sprocket LH.

NOTE: If the stopper pin cannot be removed, lift the chain tensioner LH to remove as shown in the figure.


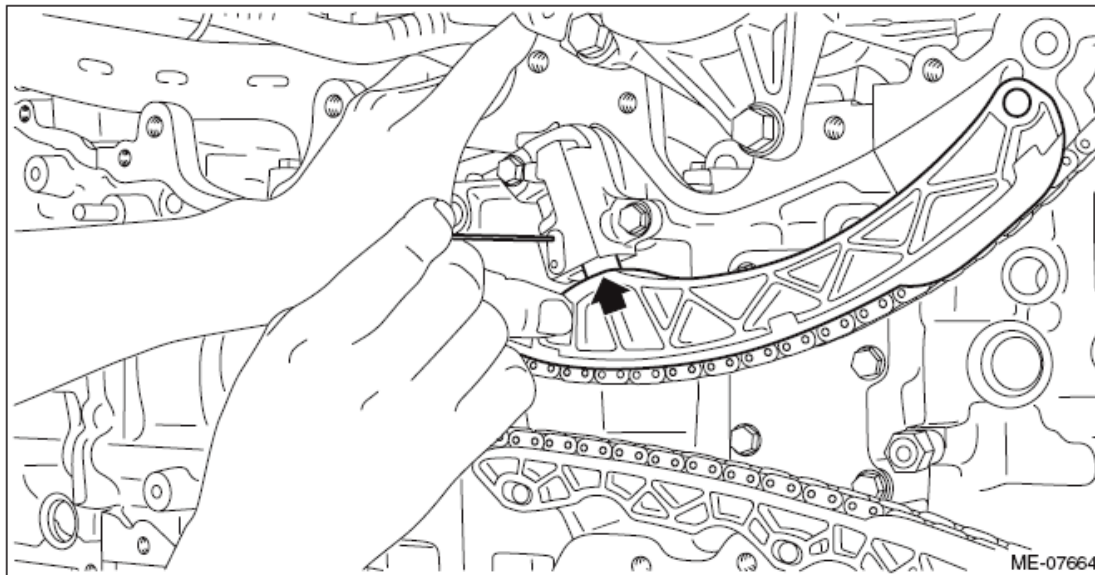


Fig. 292: Pulling Out Stopper Pin From Chain Tensioner LH
Courtesy of SUBARU OF AMERICA, INC.

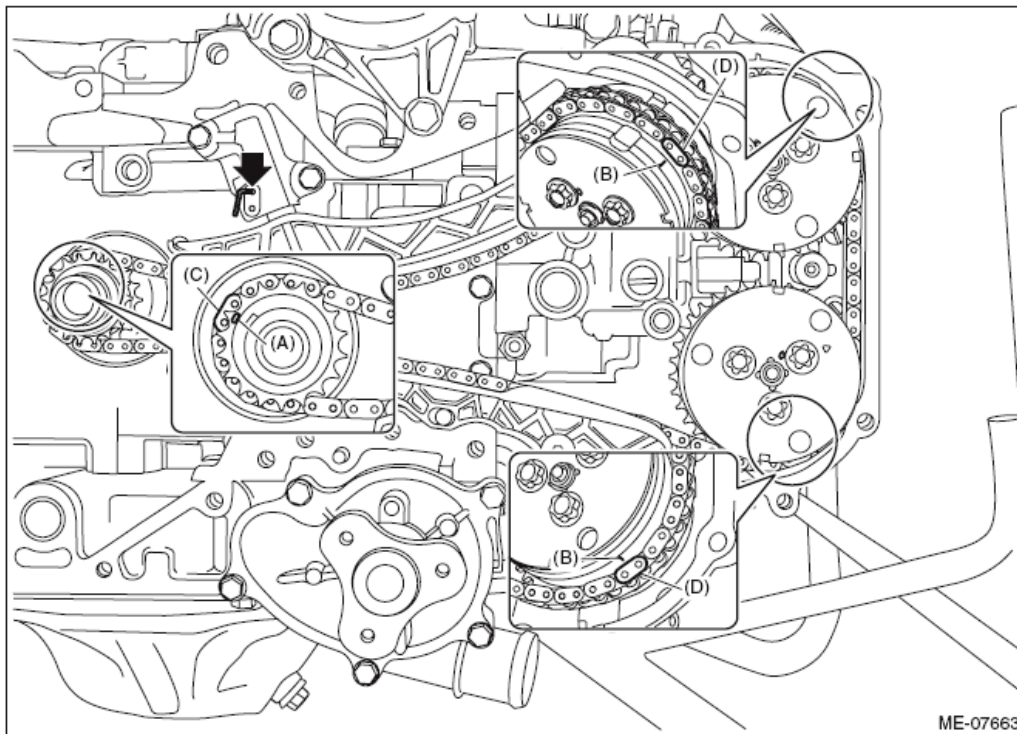

(A) Alignment mark

(C) Blue

(D) Pink

(B) Timing mark

Fig. 293: Locating Chain Tension Lever LH Stopper Pin
Courtesy of SUBARU OF AMERICA, INC.

10. Using the ST, turn the crankshaft clockwise, and make sure that there are no abnormal conditions.

CAUTION: Always make sure to perform this confirmation.

ST 18252AA000 CRANKSHAFT SOCKET

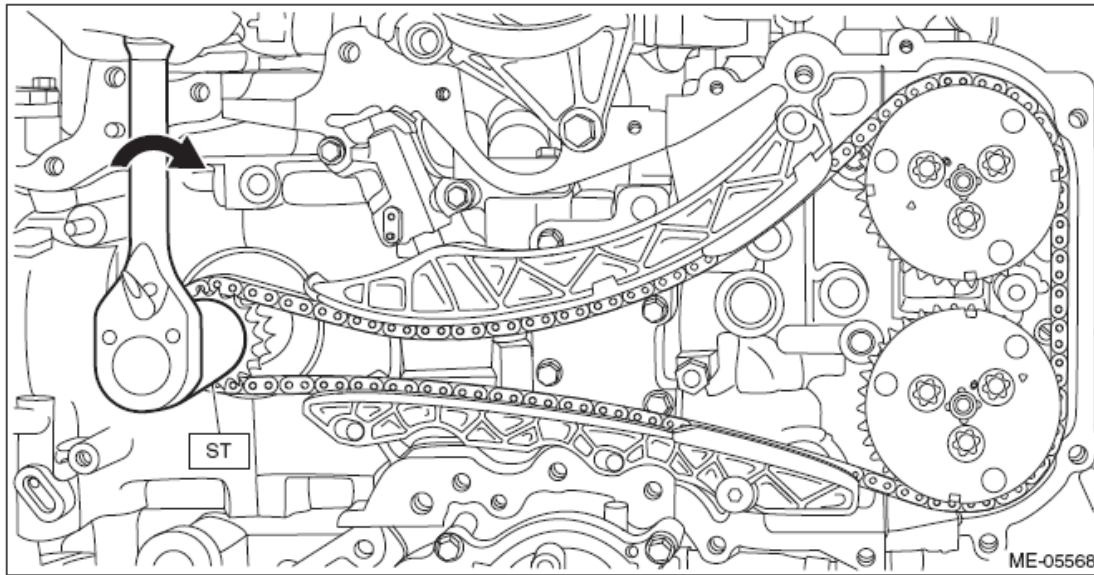


Fig. 294: Turning Crankshaft Using Crankshaft Socket
Courtesy of SUBARU OF AMERICA, INC.

11. Using ST and by turning the crankshaft, align the alignment marks of crank sprocket, intake cam sprocket LH and exhaust cam sprocket LH to the positions as shown in the figure.

NOTE: If the alignment marks are aligned to the positions as shown in the figure, the crankshaft key is located at six o'clock position.

ST 18252AA000 CRANKSHAFT SOCKET

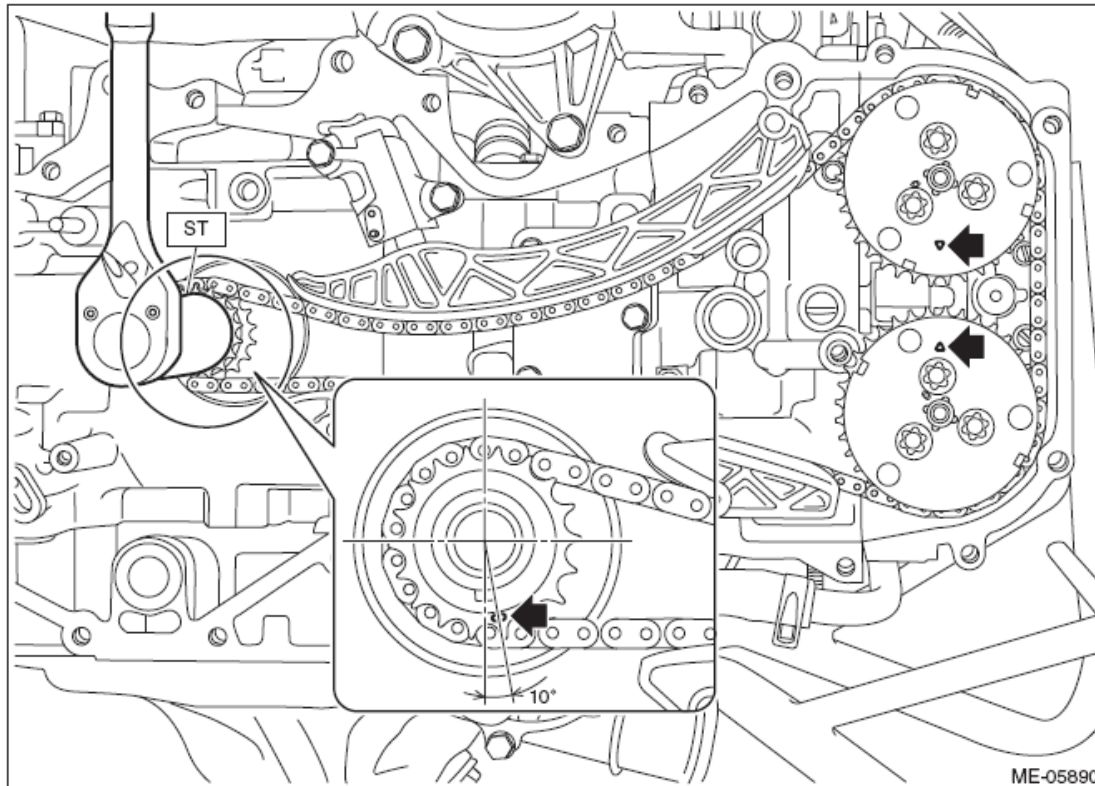


Fig. 295: Locating Crank Sprocket Alignment Mark
 Courtesy of SUBARU OF AMERICA, INC.

12. Install the timing chain RH. < Ref. to **TIMING CHAIN RH**, INSTALLATION, Timing Chain Assembly.>

TIMING CHAIN RH

NOTE:

- Be careful that the foreign matter is not into or onto the assembled component during installation.
- Apply engine oil to all component parts of the timing chain.

1. Install timing chain LH. < Ref. to **TIMING CHAIN LH**, INSTALLATION, Timing Chain Assembly.>
2. Prepare to attach the chain tensioner RH.
 1. Move the link plate (A) in the direction of arrow to press in the plunger (B).

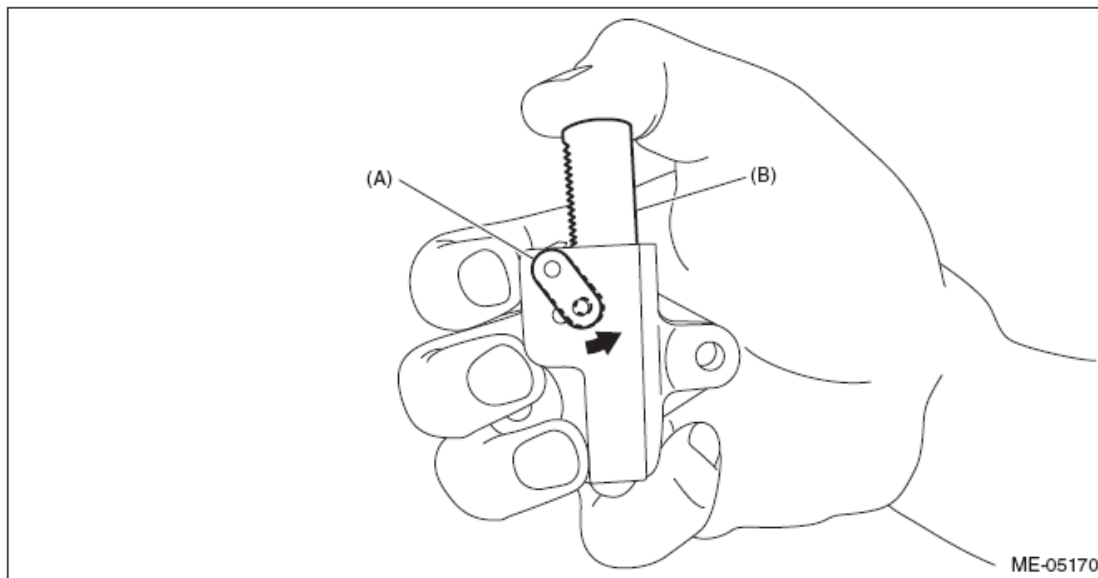


Fig. 296: Pressing Chain Tensioner RH Plunger
 Courtesy of SUBARU OF AMERICA, INC.

2. With a 2.5 mm (0.98 in) dia. stopper pin or a 2.5 mm (0.98 in) (nominal) dia. hex wrench inserted into the stopper pin hole, secure the plunger.

NOTE: If the stopper pin hole on the link plate and the stopper pin hole on the chain tensioner are not aligned, check that the first notch of plunger rack (A) is engaged with the stopper tooth (B). If not engaged, retract the plunger a little so that the first notch of plunger rack (A) is engaged with the stopper tooth (B).

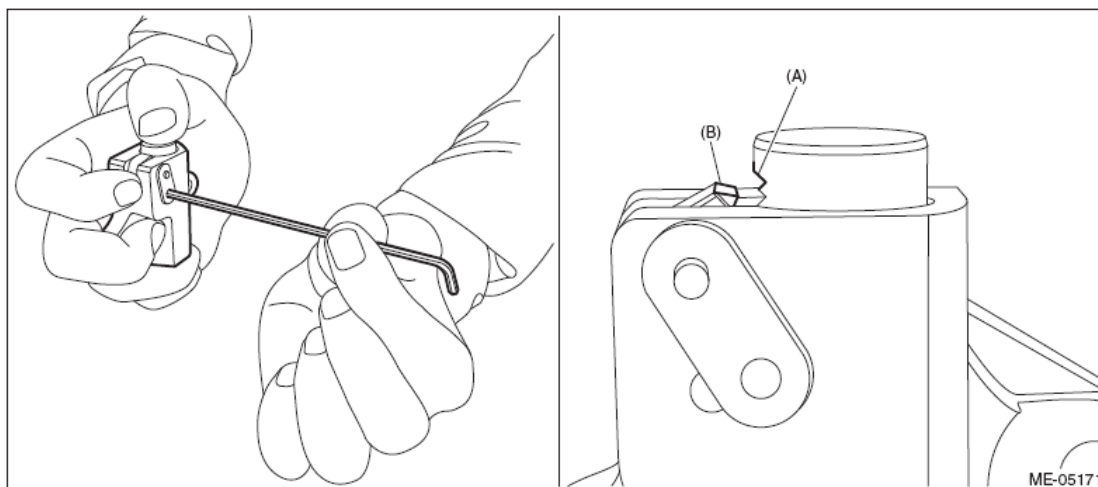


Fig. 297: Securing Plunger Using Stopper Pin
 Courtesy of SUBARU OF AMERICA, INC.

3. Make sure that the alignment marks of the crank sprocket, intake cam sprocket LH and exhaust cam

sprocket LH are aligned to the positions as shown in the figure.

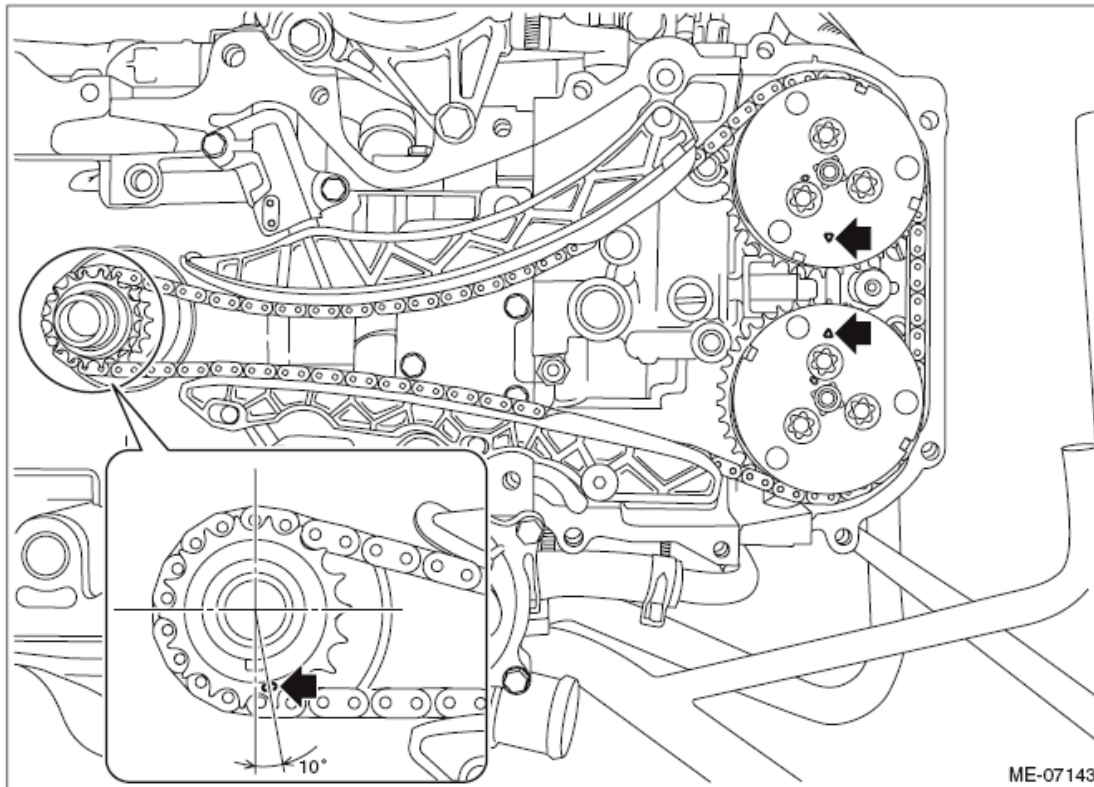


Fig. 298: Locating Timing Chain Assembly Alignment Marks
Courtesy of SUBARU OF AMERICA, INC.

4. Align the alignment marks of intake cam sprocket RH and exhaust cam sprocket RH to the positions as shown in the figure.

CAUTION: To prevent valve damage, turn the intake cam sprocket RH and exhaust cam sprocket RH only within the range of zero-lift (in range where it can be turned lightly by hand).


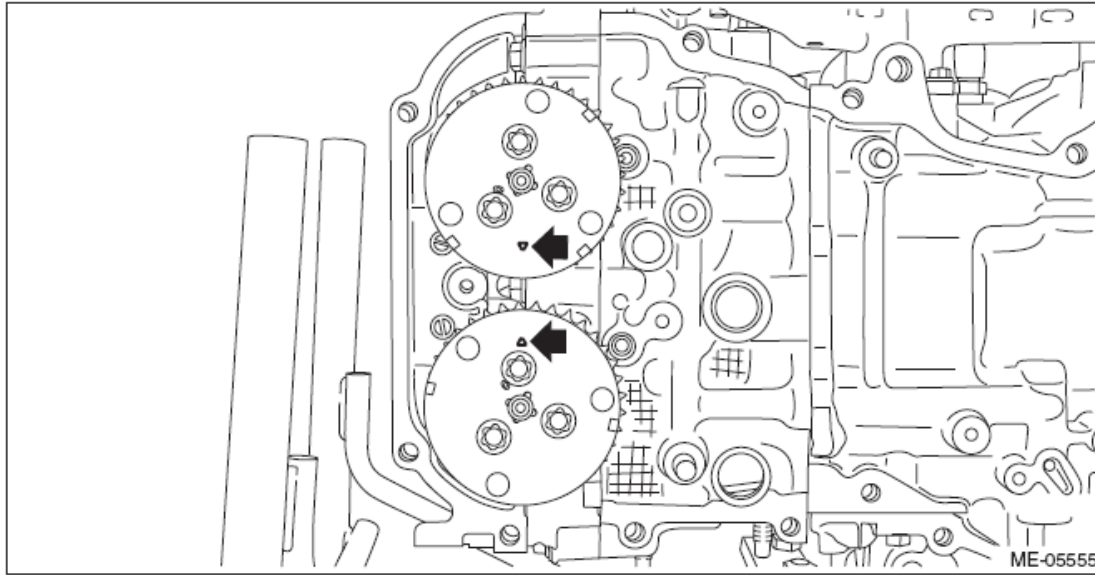


Fig. 299: Locating Intake Cam Sprocket RH And Exhaust Cam Sprocket RH Alignment Marks
Courtesy of SUBARU OF AMERICA, INC.

5. Install the timing chain RH and the timing chain guide RH.
 1. Match the timing chain mark (blue) to the alignment mark of the crank sprocket.
 2. Match the timing chain mark (pink) to the timing mark position of the intake cam sprocket RH.
 3. Match the timing chain mark (pink) to the timing mark position of the exhaust cam sprocket RH.
 4. Install the timing chain guide RH.

Tightening torque:

6.4 N.m (0.7 kgf-m, 4.7 ft-lb)

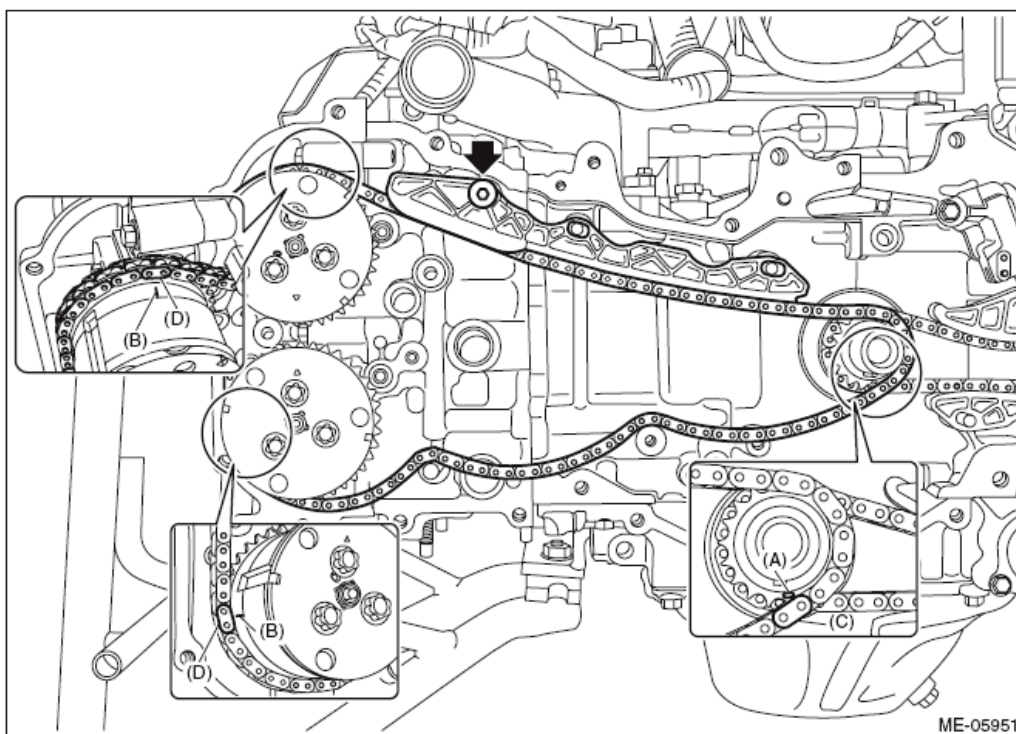

(A) Alignment mark

(C) Blue

(D) Pink

(B) Timing mark

Fig. 300: Locating Timing Chain Guide RH Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

6. Install the chain tensioner lever RH (A) and chain tensioner RH.

Tightening torque:

6.4 N.m (0.7 kgf-m, 4.7 ft-lb)


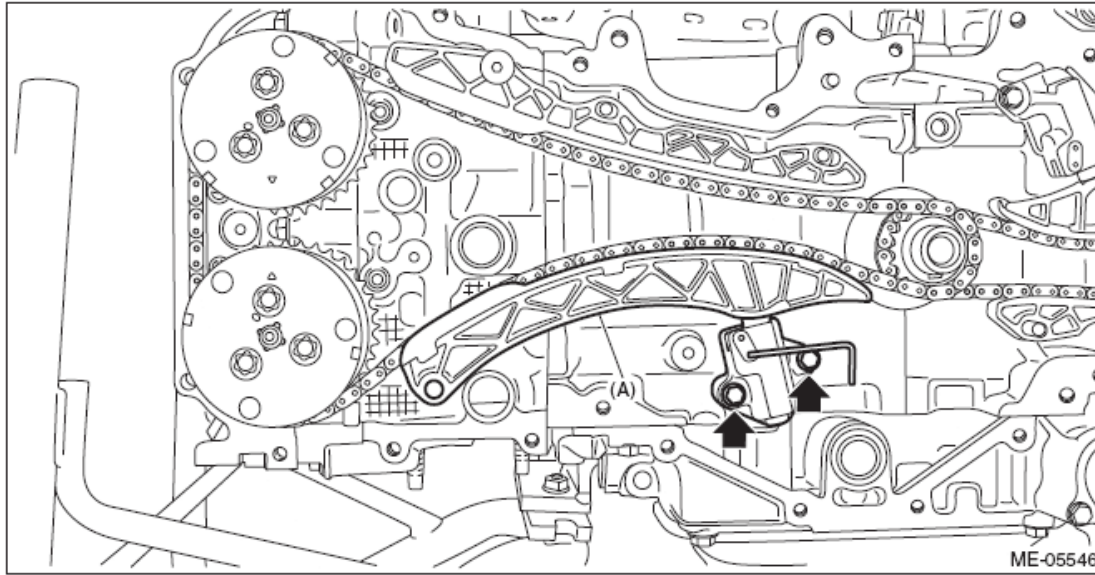


Fig. 301: Locating Intake Cam Sprocket RH And Exhaust Cam Sprocket RH Alignment Marks
Courtesy of SUBARU OF AMERICA, INC.

7. Pull out the stopper pin from the chain tensioner RH.

CAUTION: Confirm the following before pulling out the stopper pin.

- Matching of the timing chain mark (blue) to the alignment mark of the crank sprocket.
- Matching of the timing chain mark (pink) to the timing mark position of the intake cam sprocket RH.
- Matching of the timing chain mark (pink) to the timing mark position of the exhaust cam sprocket RH.

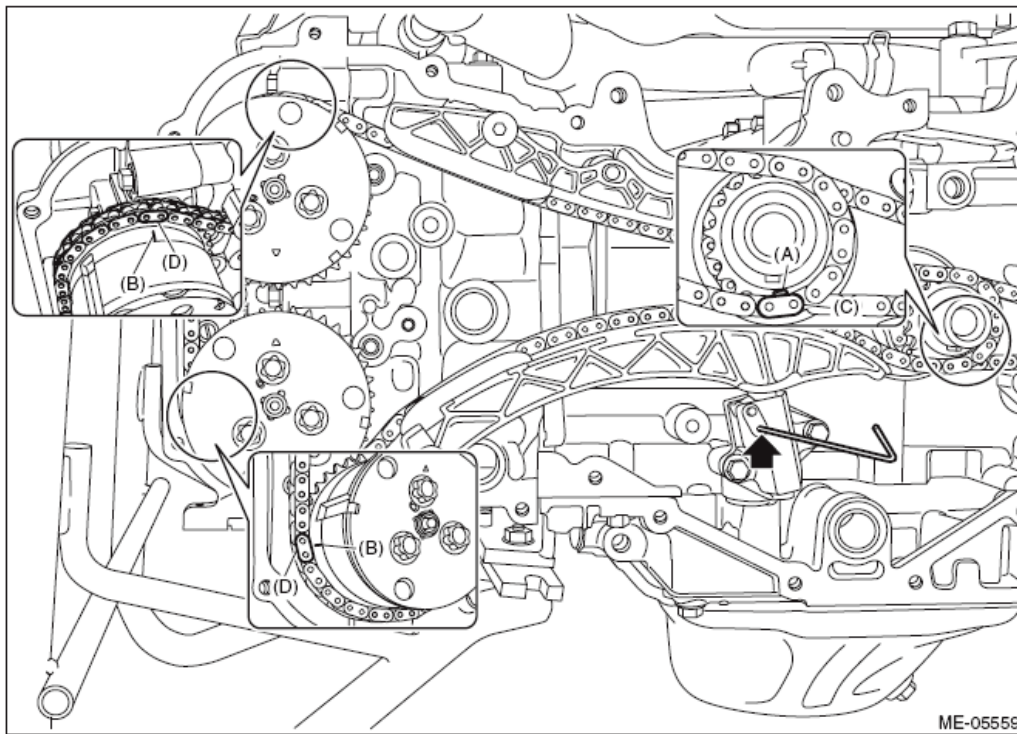

(A) Alignment mark

(C) Blue

(D) Pink

(B) Timing mark

Fig. 302: Locating Timing Chain Guide RH
Courtesy of SUBARU OF AMERICA, INC.

8. Make sure that the alignment marks of the cam sprocket and crank sprocket are aligned to the positions as shown in the figure.

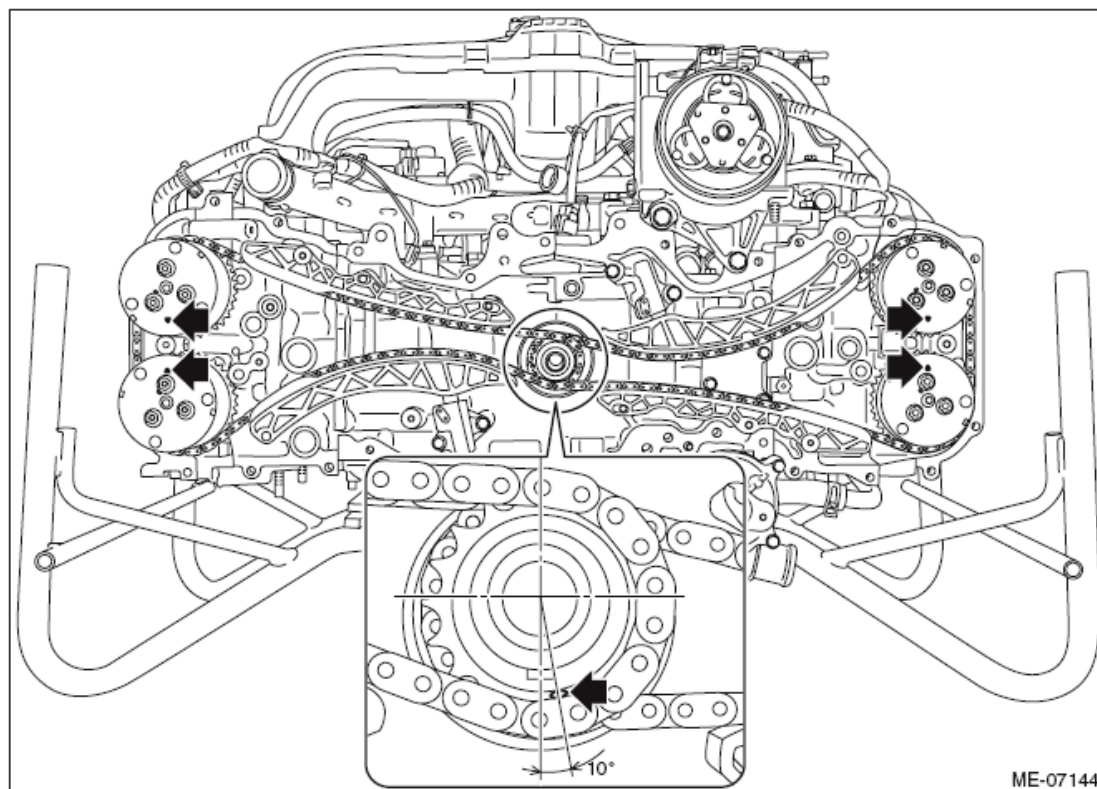


Fig. 303: Locating Chain Tensioner RH Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

9. Using the ST, turn the crankshaft clockwise, and make sure that there are no abnormal conditions.

CAUTION: Always make sure to perform this confirmation.

ST 18252AA000 CRANKSHAFT SOCKET

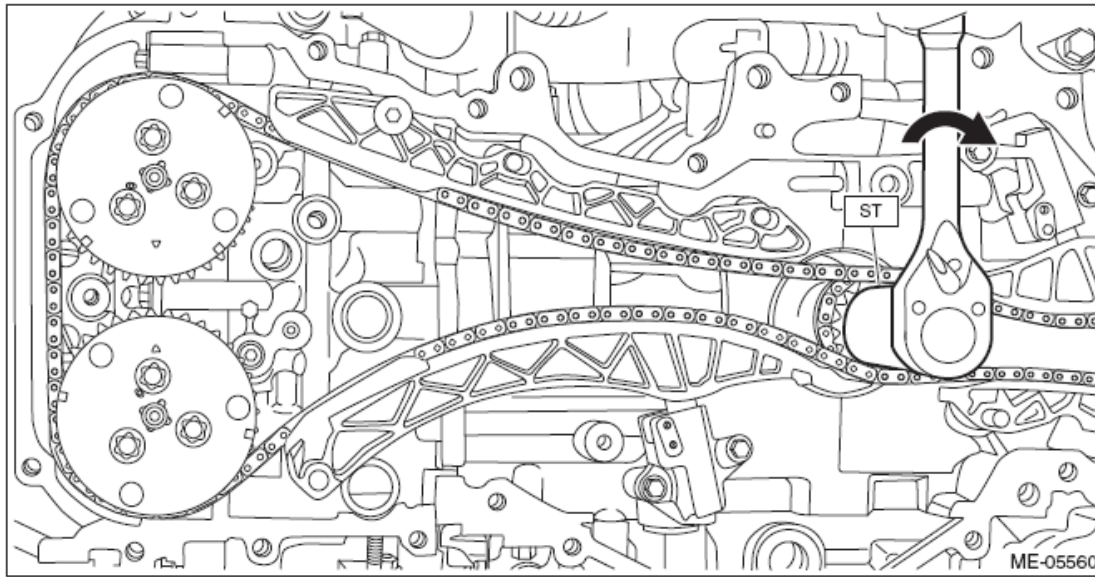


Fig. 304: Turning Crankshaft Using Tool
 Courtesy of SUBARU OF AMERICA, INC.

10. Install the chain cover. < Ref. to **INSTALLATION**, Chain Cover.>

INSPECTION

1. Check the timing chain, chain guide, chain tensioner lever and chain tensioner for deformation, cracks or other damages.
2. Check the chain guide and chain tensioner lever for abnormal wear.

CAM SPROCKET

REMOVAL

CAM SPROCKET RH

NOTE: When replacing a single part, perform the work with the engine assembly installed to body.

- **Intake cam sprocket RH**

1. Remove the chain cover. < Ref. to **REMOVAL**, Chain Cover.>
2. Remove the timing chain RH. < Ref. to **TIMING CHAIN RH**, REMOVAL, Timing Chain Assembly.>
3. Hold the intake cam sprocket RH using the ST1 and ST2, and remove the bolts using the ST3.

ST1 18355AA000 PULLEY WRENCH

ST2 18334AA030 PULLEY WRENCH PIN SET

ST3 18270KA010 SOCKET

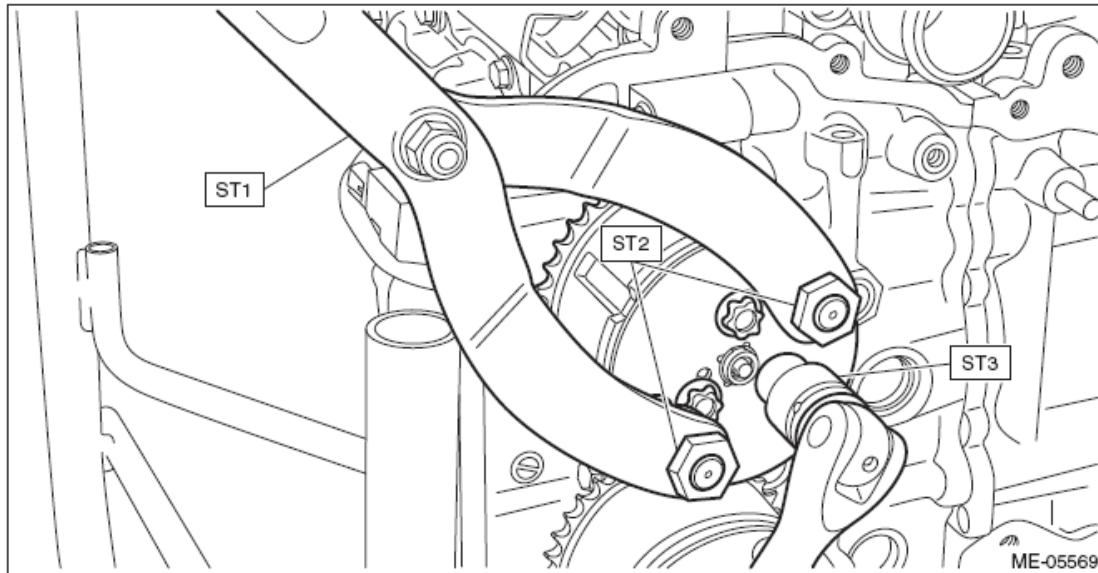


Fig. 305: Removing Timing Chain RH Using Tool
Courtesy of SUBARU OF AMERICA, INC.

4. Remove the intake cam sprocket RH.

- **Exhaust cam sprocket RH**

1. Remove the chain cover. < Ref. to **REMOVAL**, Chain Cover.>
2. Remove the timing chain RH. < Ref. to **TIMING CHAIN RH**, REMOVAL, Timing Chain Assembly.>
3. Hold the exhaust cam sprocket RH using the ST1 and ST2, and remove the bolts using the ST3.

ST1 18355AA000 PULLEY WRENCH

ST2 18334AA030 PULLEY WRENCH PIN SET

ST3 18270KA010 SOCKET

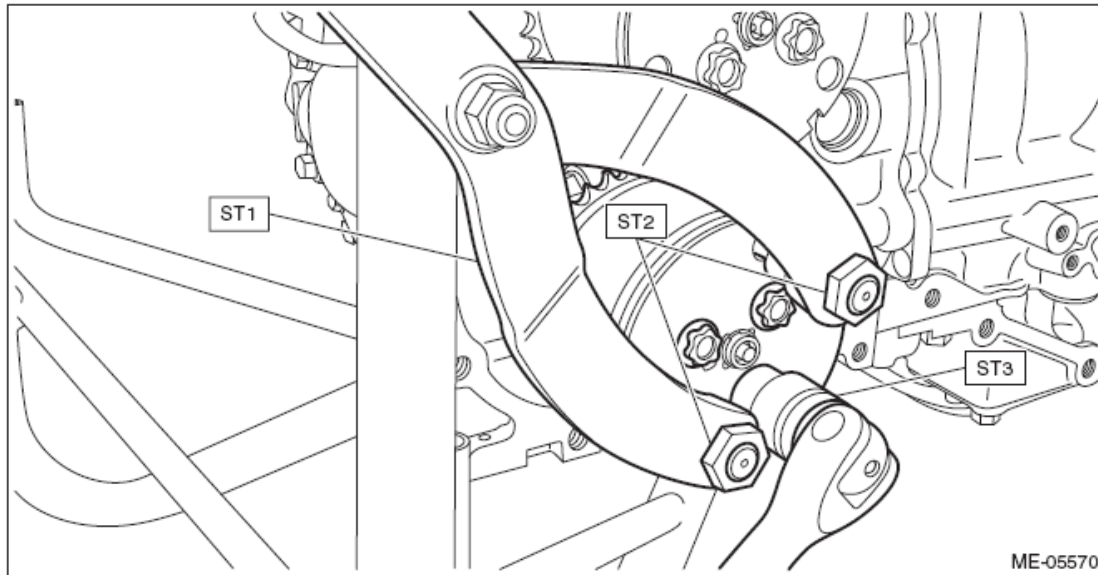


Fig. 306: Removing Exhaust Cam Sprocket RH Using Tool
Courtesy of SUBARU OF AMERICA, INC.

4. Remove the exhaust cam sprocket RH.

CAM SPROCKET LH

NOTE: When replacing a single part, perform the work with the engine assembly installed to body.

- Intake cam sprocket LH

1. Remove the chain cover. < Ref. to **REMOVAL**, Chain Cover.>
2. Remove the timing chain LH. < Ref. to **TIMING CHAIN LH**, REMOVAL, Timing Chain Assembly.>
3. Hold the intake cam sprocket LH using the ST1 and ST2, and remove the bolts using the ST3.

ST1 18355AA000 PULLEY WRENCH

ST2 18334AA030 PULLEY WRENCH PIN SET

ST3 18270KA010 SOCKET

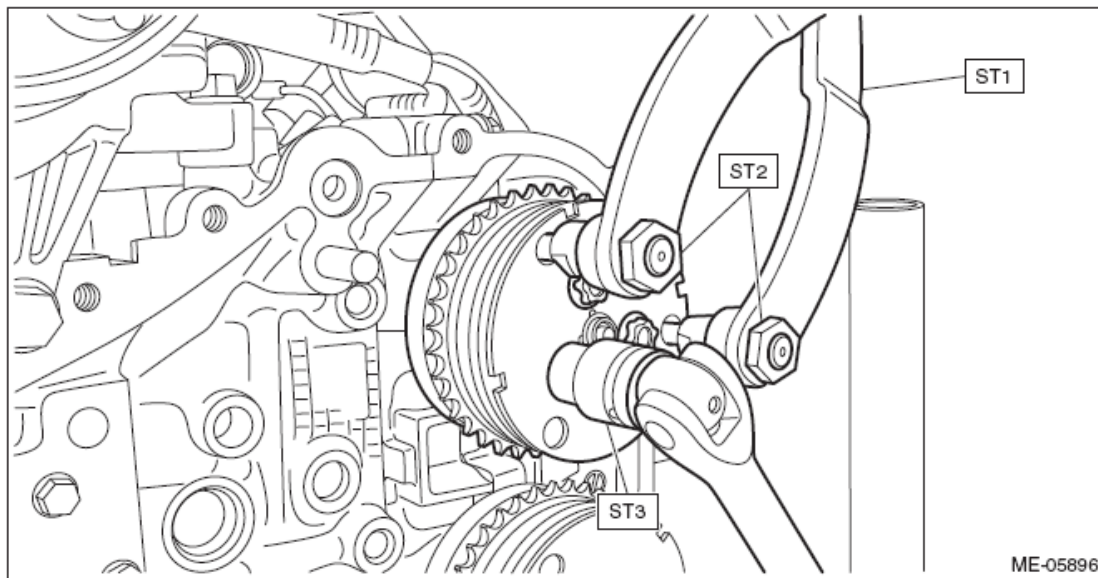


Fig. 307: Removing Timing Chain LH Using Tool
Courtesy of SUBARU OF AMERICA, INC.

4. Remove the intake cam sprocket LH.

- **Exhaust cam sprocket LH**

1. Remove the chain cover. < Ref. to **REMOVAL**, Chain Cover.>
2. Remove the timing chain LH. < Ref. to **TIMING CHAIN LH**, REMOVAL, Timing Chain Assembly.>
3. Hold the exhaust cam sprocket LH using the ST1 and ST2, and remove the bolts using the ST3.

ST1 18355AA000 PULLEY WRENCH

ST2 18334AA030 PULLEY WRENCH PIN SET

ST3 18270KA010 SOCKET

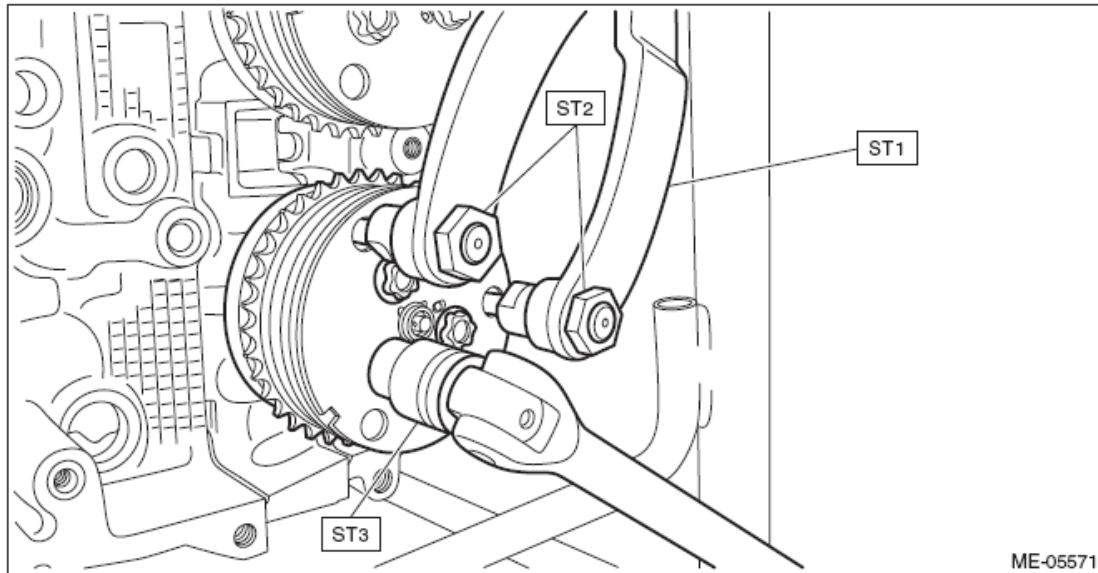


Fig. 308: Removing Intake Cam Sprocket LH Using Tool
Courtesy of SUBARU OF AMERICA, INC.

4. Remove the exhaust cam sprocket LH.

INSTALLATION

CAM SPROCKET RH

- Intake cam sprocket RH

1. Install the intake cam sprocket RH by aligning the knock hole (A) of intake cam sprocket RH and the knock pin (B) of intake camshaft RH.

NOTE: Before installation, check that there is no foreign matter on the intake cam sprocket RH and intake camshaft RH.

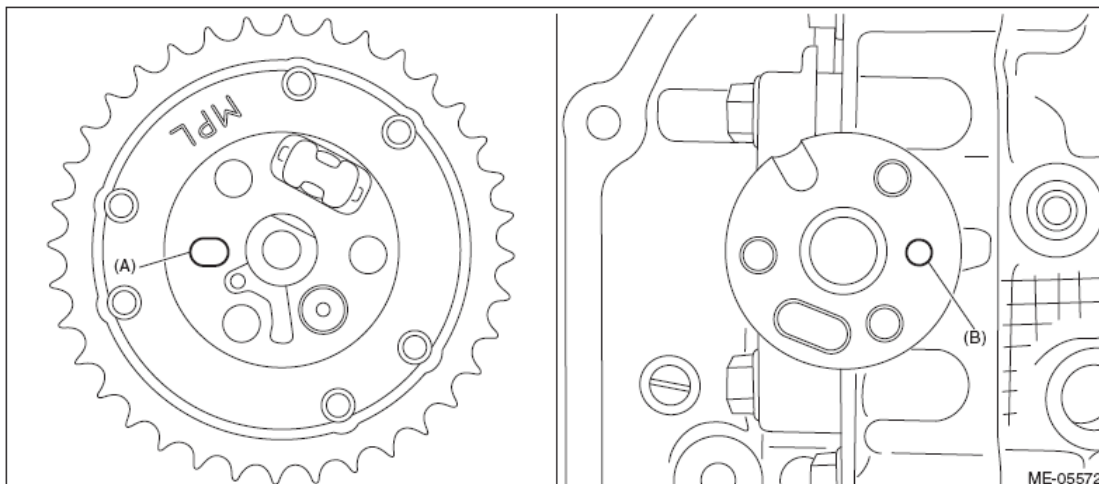


Fig. 309: Identifying Intake Cam Sprocket RH Knock Hole And Pin
Courtesy of SUBARU OF AMERICA, INC.

2. Hold the intake cam sprocket RH using the ST1 and ST2, and install the bolts using the ST3.

ST1 18355AA000 PULLEY WRENCH

ST2 18334AA030 PULLEY WRENCH PIN SET

ST3 18270KA010 SOCKET

Tightening torque:

18 N.m (1.8 kgf-m, 13.3 ft-lb)

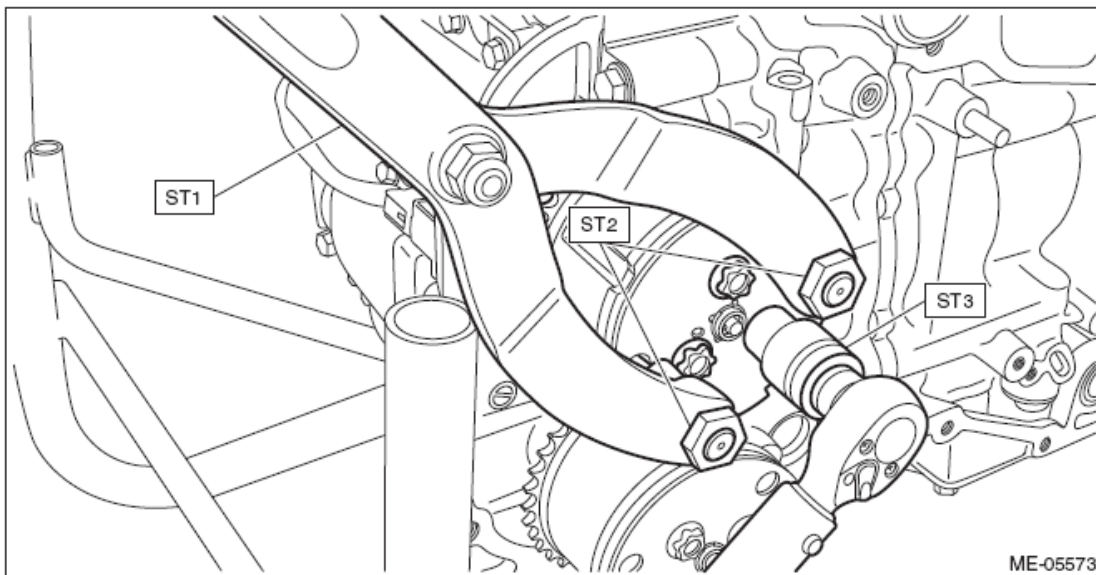


Fig. 310: Installing Timing Chain RH Using Tool
Courtesy of SUBARU OF AMERICA, INC.

3. Install the timing chain RH. < Ref. to **TIMING CHAIN RH**, INSTALLATION, Timing Chain Assembly.>
4. Install the chain cover. < Ref. to **INSTALLATION**, Chain Cover.>

• **Exhaust cam sprocket RH**

1. Install the exhaust cam sprocket RH by aligning the knock hole (A) of exhaust cam sprocket RH and the knock pin (B) of exhaust camshaft RH.

NOTE: Before installation, check that there is no foreign matter on the exhaust cam sprocket RH and exhaust camshaft RH.

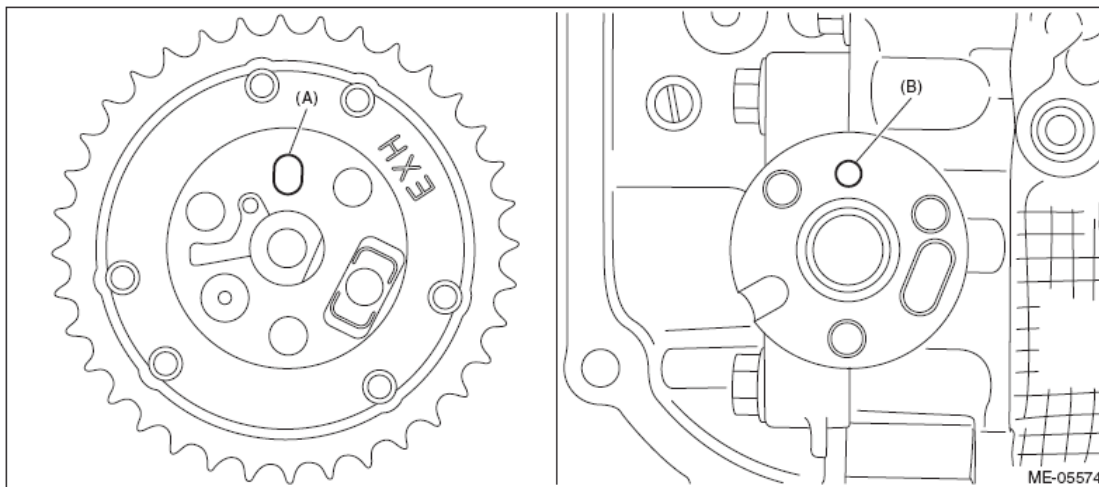


Fig. 311: Identifying Exhaust Cam Sprocket RH Knock Hole And Pin
Courtesy of SUBARU OF AMERICA, INC.

2. Hold the exhaust cam sprocket RH using ST1 and ST2, and install the bolts using ST3.

ST1 18355AA000 PULLEY WRENCH

ST2 18334AA030 PULLEY WRENCH PIN SET

ST3 18270KA010 SOCKET

Tightening torque:

18 N.m (1.8 kgf-m, 13.3 ft-lb)

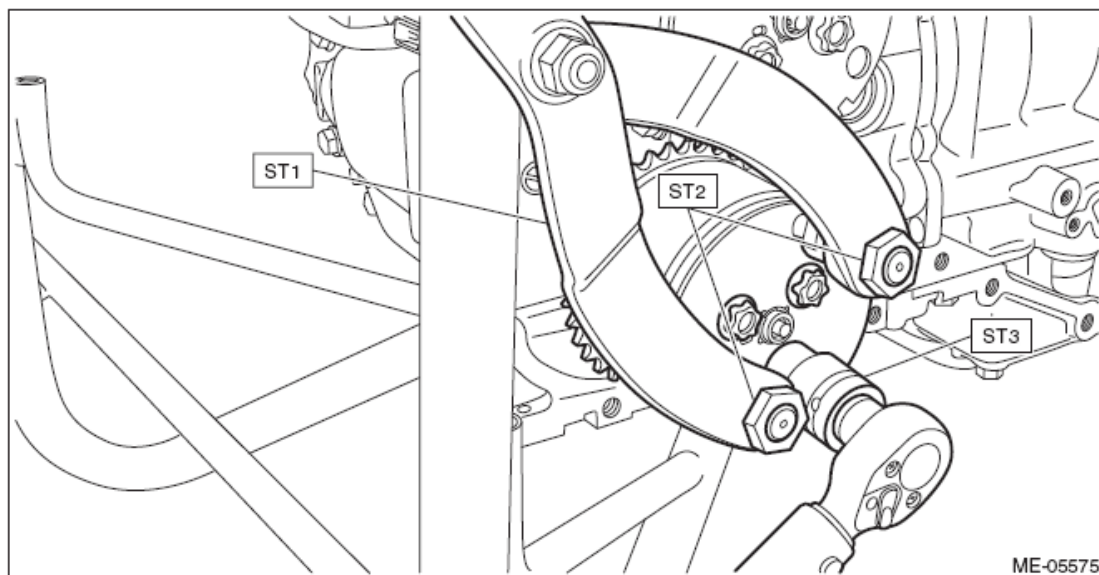


Fig. 312: Installing Timing Chain RH Using Tool

Courtesy of SUBARU OF AMERICA, INC.

3. Install the timing chain RH. < Ref. to **TIMING CHAIN RH**, INSTALLATION, Timing Chain Assembly.>
4. Install the chain cover. < Ref. to **INSTALLATION**, Chain Cover.>

CAM SPROCKET LH

• Intake cam sprocket LH

1. Install the intake cam sprocket LH by aligning the knock hole (A) of intake cam sprocket LH and the knock pin (B) of intake camshaft LH.

NOTE: Before installation, check that there is no foreign matter on the intake cam sprocket LH and intake camshaft LH.

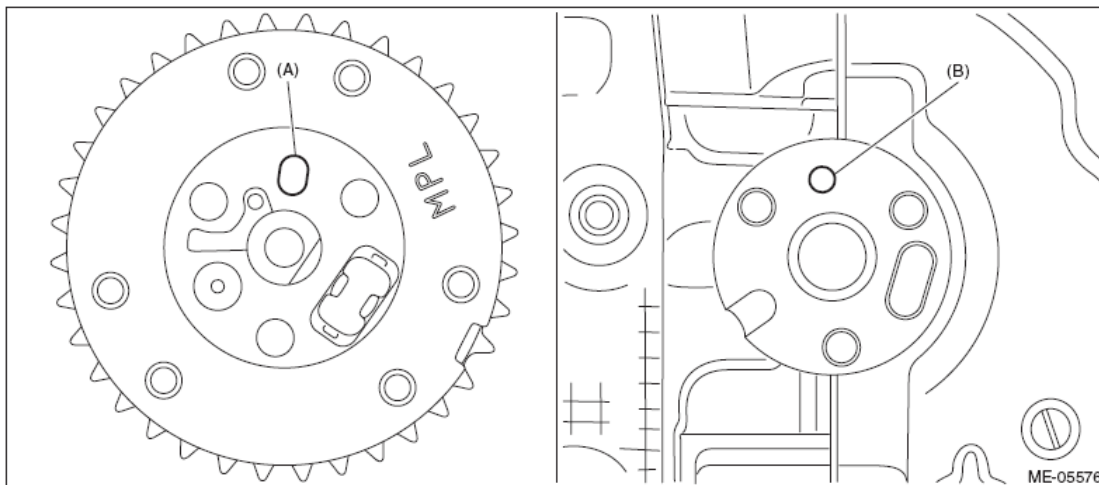


Fig. 313: Identifying Intake Cam Sprocket LH Knock Hole And Pin
Courtesy of SUBARU OF AMERICA, INC.

2. Hold the intake cam sprocket LH using the ST1 and ST2, and install the bolts using the ST3.

ST1 18355AA000 PULLEY WRENCH

ST2 18334AA030 PULLEY WRENCH PIN SET

ST3 18270KA010 SOCKET

Tightening torque:

18 N.m (1.8 kgf-m, 13.3 ft-lb)

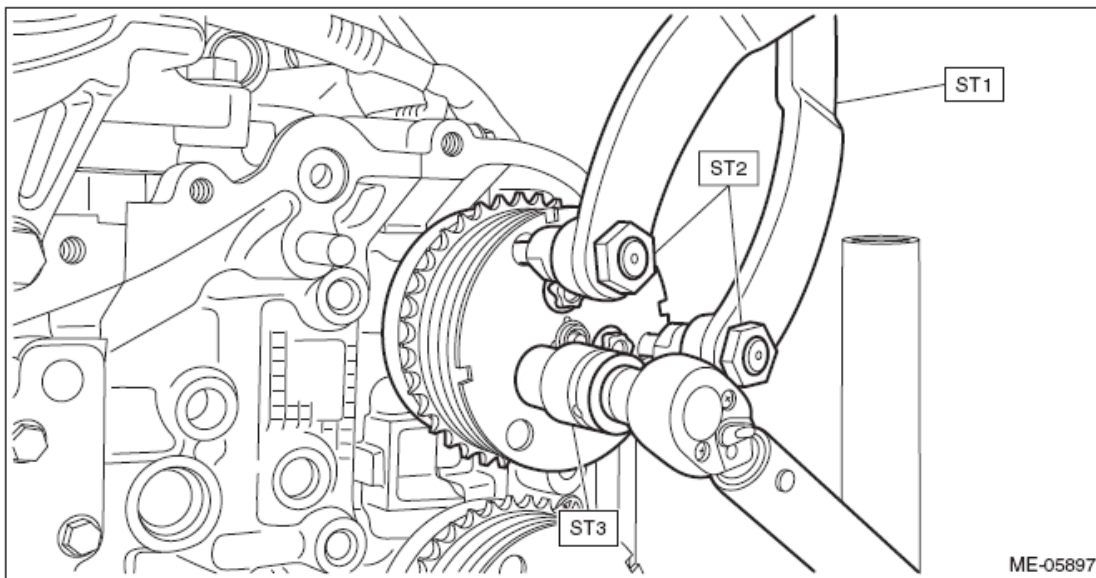


Fig. 314: Installing Intake Cam Sprocket LH Using Tools
Courtesy of SUBARU OF AMERICA, INC.

3. Install timing chain LH. < Ref. to **TIMING CHAIN LH**, INSTALLATION, Timing Chain Assembly.>
4. Install the chain cover. < Ref. to **INSTALLATION**, Chain Cover.>

• **Exhaust cam sprocket LH**

1. Install the exhaust cam sprocket LH by aligning the knock hole (A) of exhaust cam sprocket LH and the knock pin (B) of exhaust camshaft LH.

NOTE: Before installation, check that there is no foreign matter on the exhaust cam sprocket LH and exhaust camshaft LH.

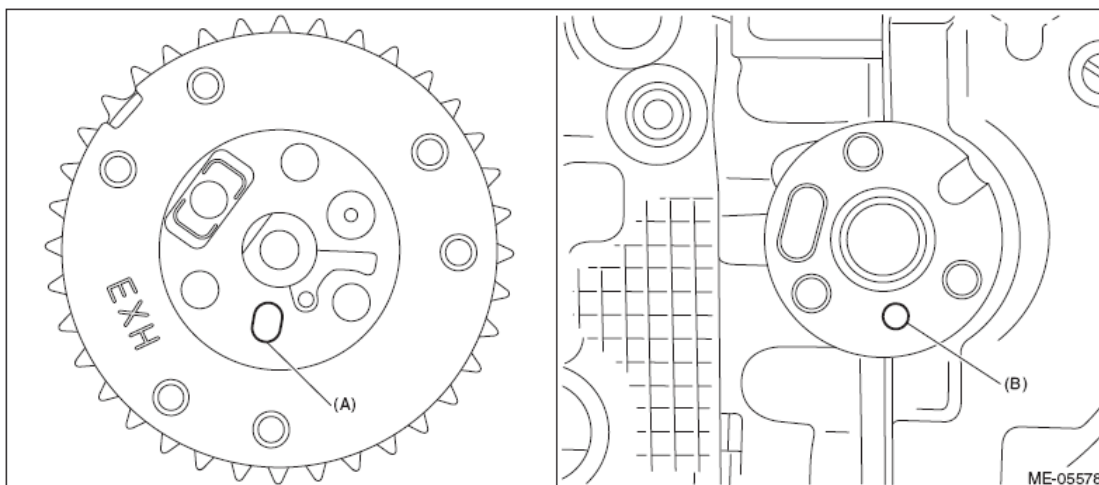


Fig. 315: Identifying Exhaust Cam Sprocket LH Knock Hole And Pin
Courtesy of SUBARU OF AMERICA, INC.

2. Hold the exhaust cam sprocket LH using the ST1 and ST2, and install the bolts using the ST3.

ST1 18355AA000 PULLEY WRENCH

ST2 18334AA030 PULLEY WRENCH PIN SET

ST3 18270KA010 SOCKET

Tightening torque:

18 N.m (1.8 kgf-m, 13.3 ft-lb)

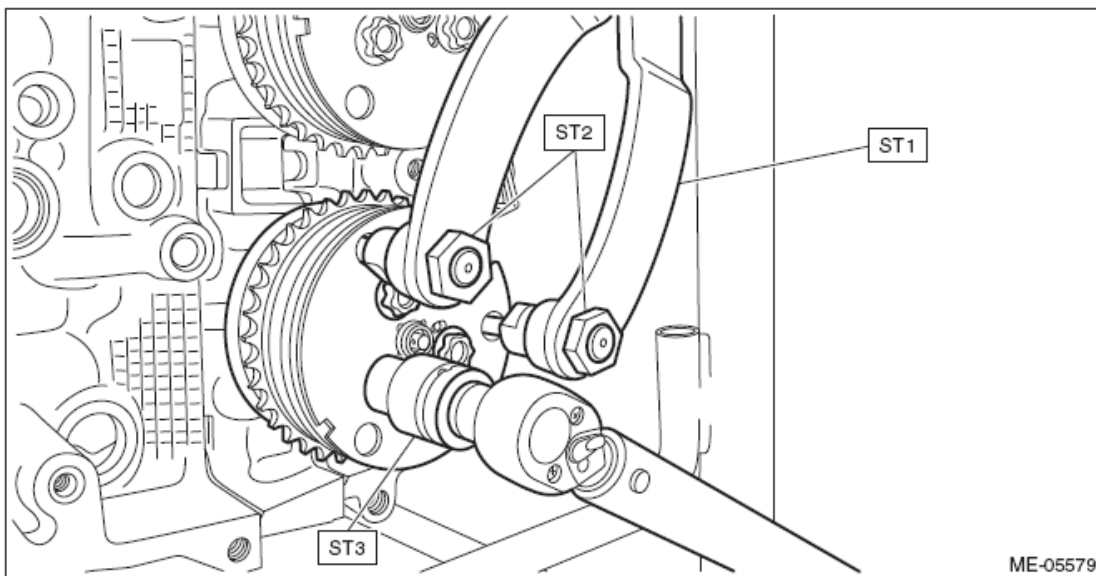


Fig. 316: Installing Exhaust Cam Sprocket LH Using Tool
Courtesy of SUBARU OF AMERICA, INC.

3. Install timing chain LH. < Ref. to **TIMING CHAIN LH**, INSTALLATION, Timing Chain Assembly.>
4. Install the chain cover. < Ref. to **INSTALLATION**, Chain Cover.>

INSPECTION

Check the cam sprocket teeth for abnormal wear and scratches.

CRANK SPROCKET

REMOVAL

NOTE: When replacing a single part, perform the work with the engine assembly installed to body.

1. Remove the chain cover. < Ref. to **REMOVAL**, Chain Cover.>
2. Remove the timing chain. < Ref. to **REMOVAL**, Timing Chain Assembly.>
3. Remove the crank sprocket.

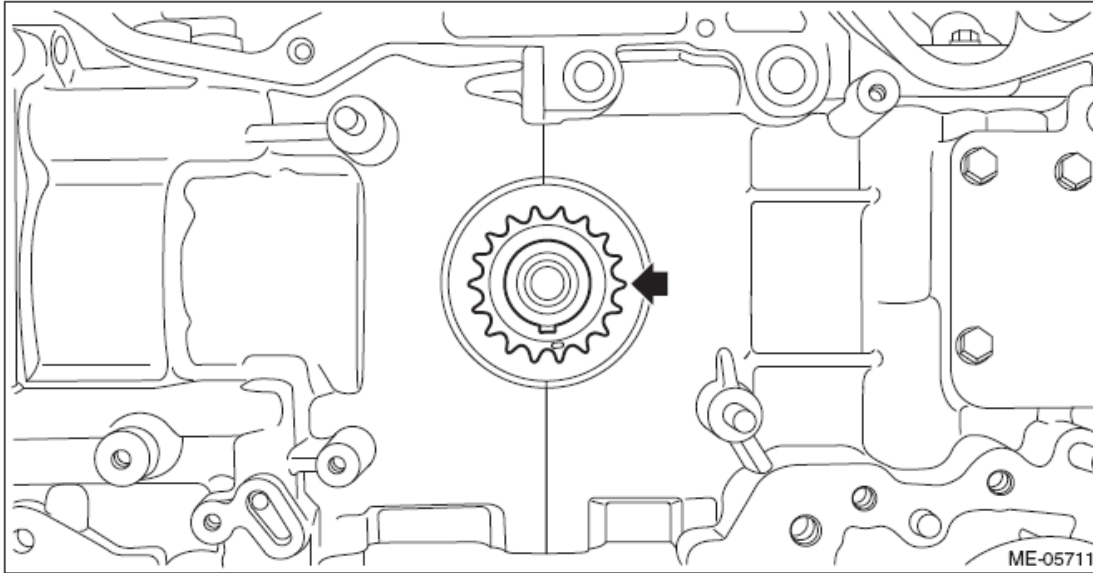


Fig. 317: Locating Crank Sprocket
Courtesy of SUBARU OF AMERICA, INC.

INSTALLATION

1. Install the crank sprocket.

NOTE: The direction of installation is not specified for the crank sprocket.

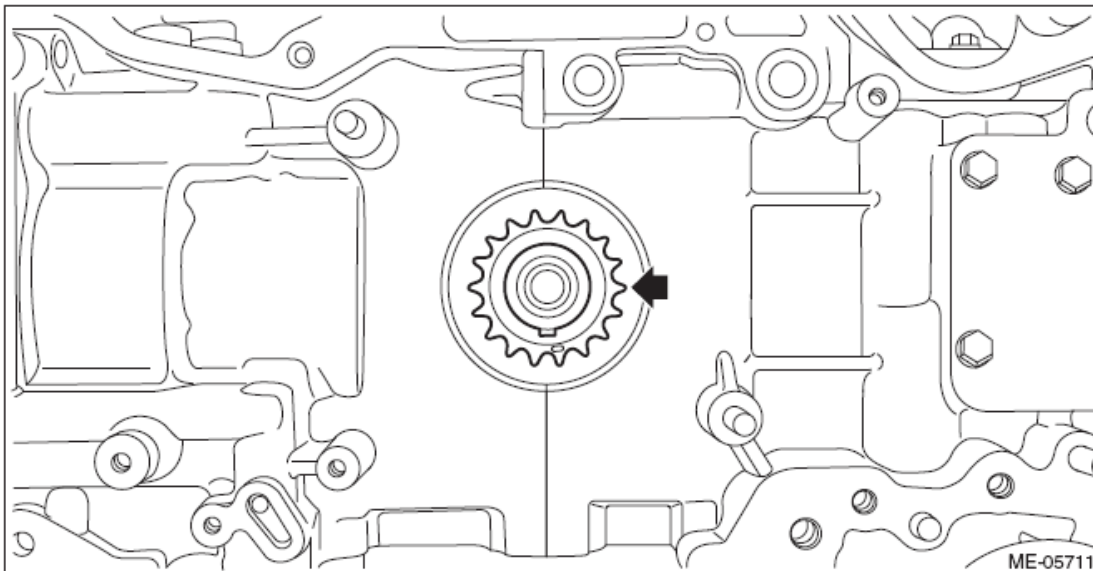


Fig. 318: Locating Crank Sprocket

Courtesy of SUBARU OF AMERICA, INC.

2. Install the timing chain. < Ref. to **INSTALLATION**, Timing Chain Assembly.>
3. Install the chain cover. < Ref. to **INSTALLATION**, Chain Cover.>

INSPECTION

1. Check the crank sprocket teeth for abnormal wear and scratches.
2. Make sure there is no free play between crank sprocket and key.

ROCKER COVER**REMOVAL****ROCKER COVER RH**

NOTE: When replacing a single part, perform the work with the engine assembly installed to body.

1. When working on the vehicle

NOTE: When working on the vehicle, perform the following steps also.

1. Remove the air cleaner case. (Gasoline engine model) < Ref. to **REMOVAL**, Air Cleaner Case.>
2. Remove the clip (A) from the air intake boot, and loosen the clamp (B) securing the air intake boot to the throttle body. (Gasoline engine model)

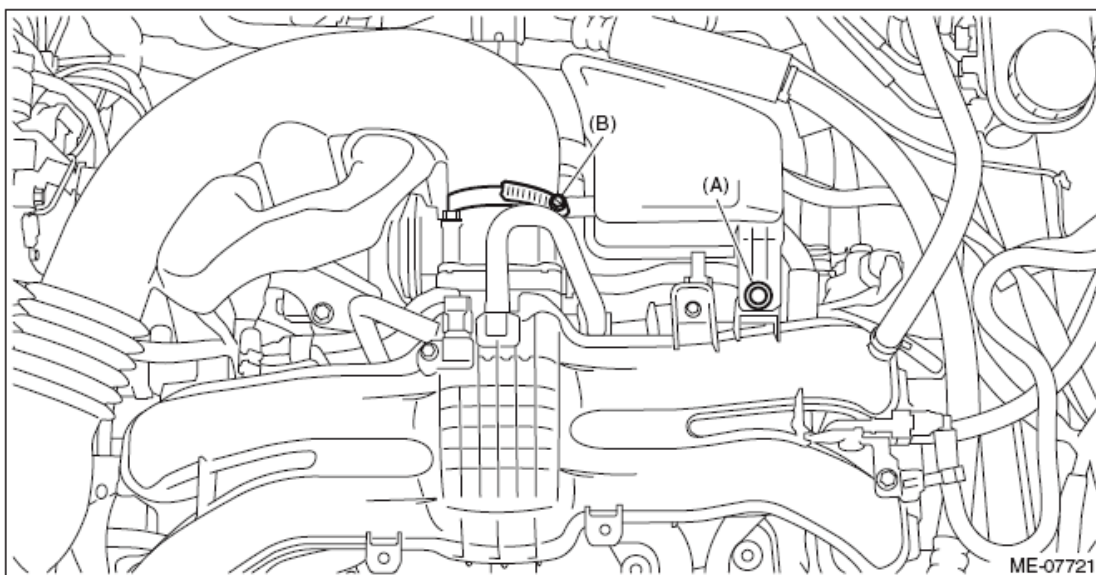


Fig. 319: Securing Air Intake Boot To Throttle Body Using Clamp

Courtesy of SUBARU OF AMERICA, INC.

3. Remove the air intake boot from the throttle body, and move it to the left side wheel apron. (Gasoline engine model)

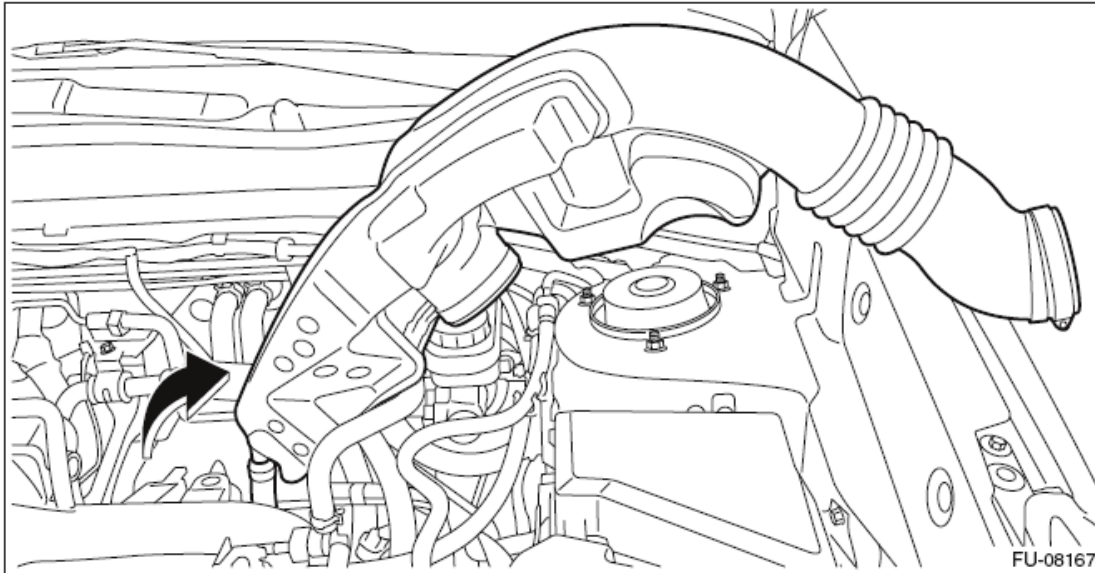


Fig. 320: Removing Air Intake Boot From Throttle Body
Courtesy of SUBARU OF AMERICA, INC.

4. Remove the intake duct. (HEV model) < Ref. to **REMOVAL** , Intake Duct.>
5. Remove the 12 volt engine restart battery. (HEV model) < Ref. to **12 VOLT ENGINE RESTART BATTERY** , REMOVAL, Battery.>
6. Remove the battery cable assembly from the battery cable bracket No. 2, and remove the battery cable bracket No. 2 from the vehicle. (HEV model)

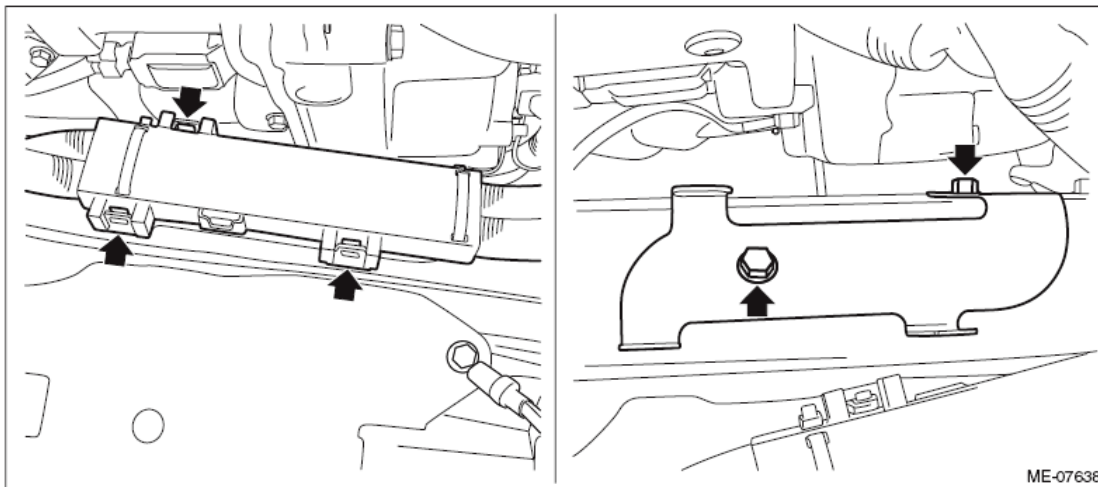


Fig. 321: Locating Intake Duct Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

7. Remove the front exhaust pipe. < Ref. to **REMOVAL** , Front Exhaust Pipe.>
2. Remove the #1 ignition coil and the #3 ignition coil. < Ref. to **REMOVAL** , Ignition Coil.>
3. Remove the intake manifold protector RH.
 - Gasoline engine model

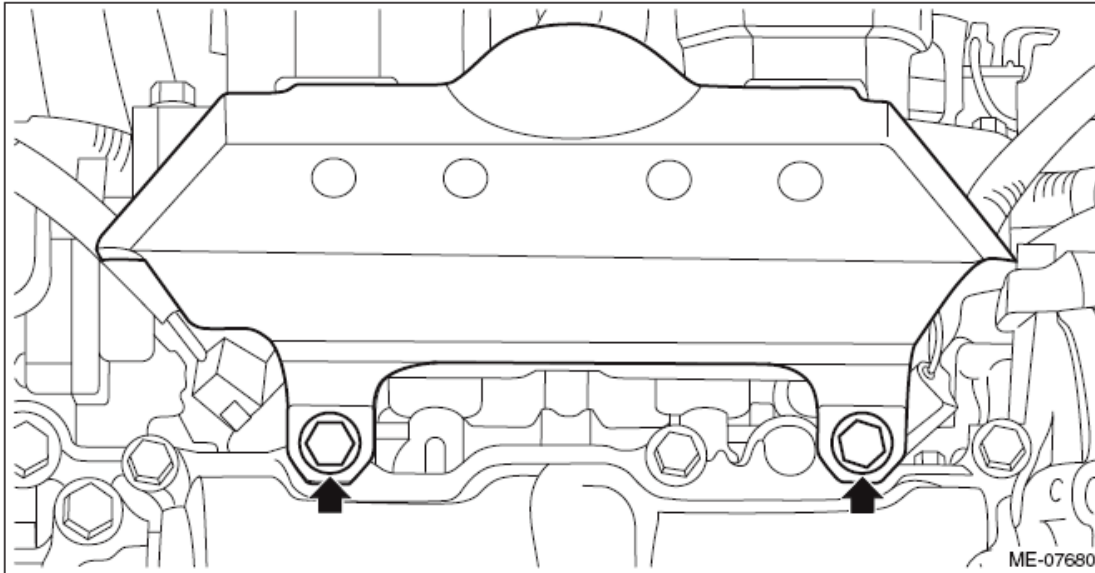


Fig. 322: Locating Intake Manifold Protector RH Mounting Bolt (Gasoline Engine Model)
Courtesy of SUBARU OF AMERICA, INC.

- HEV model

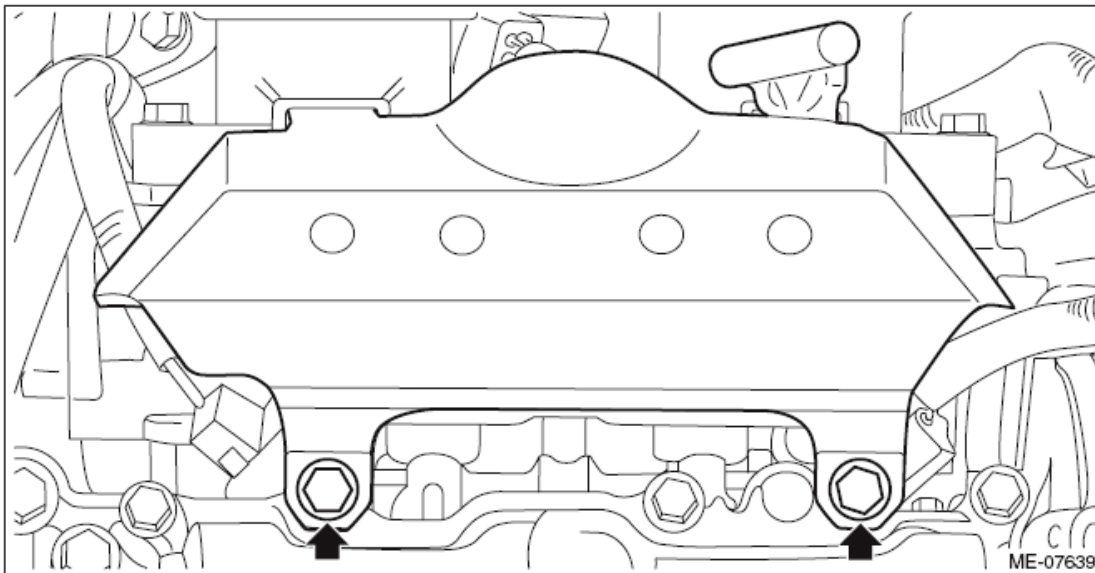


Fig. 323: Locating Intake Manifold Protector RH Mounting Bolt (HEV Model)
Courtesy of SUBARU OF AMERICA, INC.

4. Remove the rocker cover RH.

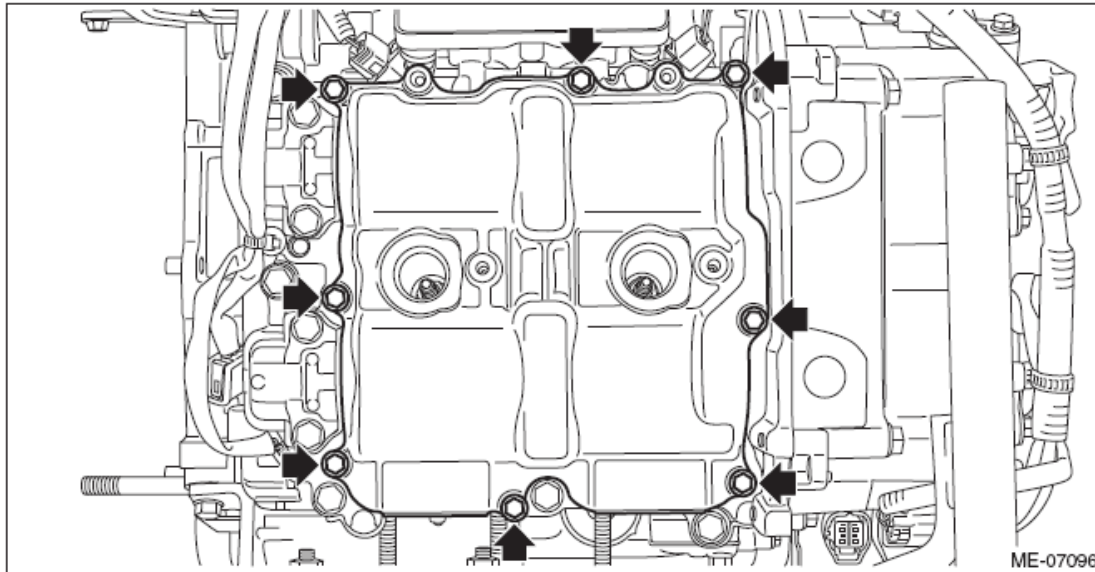


Fig. 324: Locating Rocker Cover RH Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

5. Remove the rocker cover gasket RH, #1 spark plug pipe gasket and #3 spark plug pipe gasket, and remove the liquid gasket.

CAUTION:

- When removing the liquid gasket from engine unit using scraper, use special care not to damage the cam lobe of camshaft RH.
- If the cam lobe of camshaft RH interferes, turn the crankshaft to the position where the scraper does not touch.

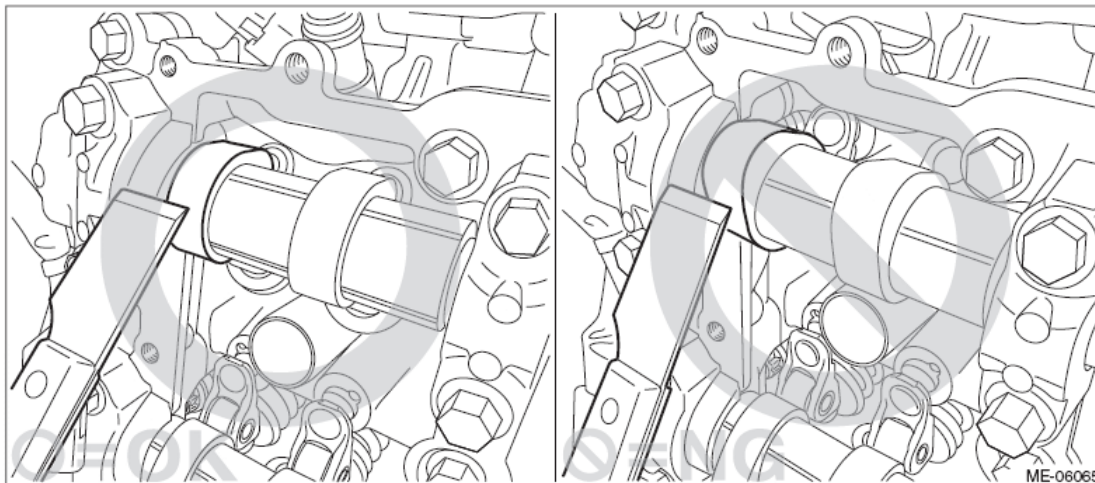


Fig. 325: Caution For Removing Liquid Gasket From Engine Unit Using Scraper

Courtesy of SUBARU OF AMERICA, INC.

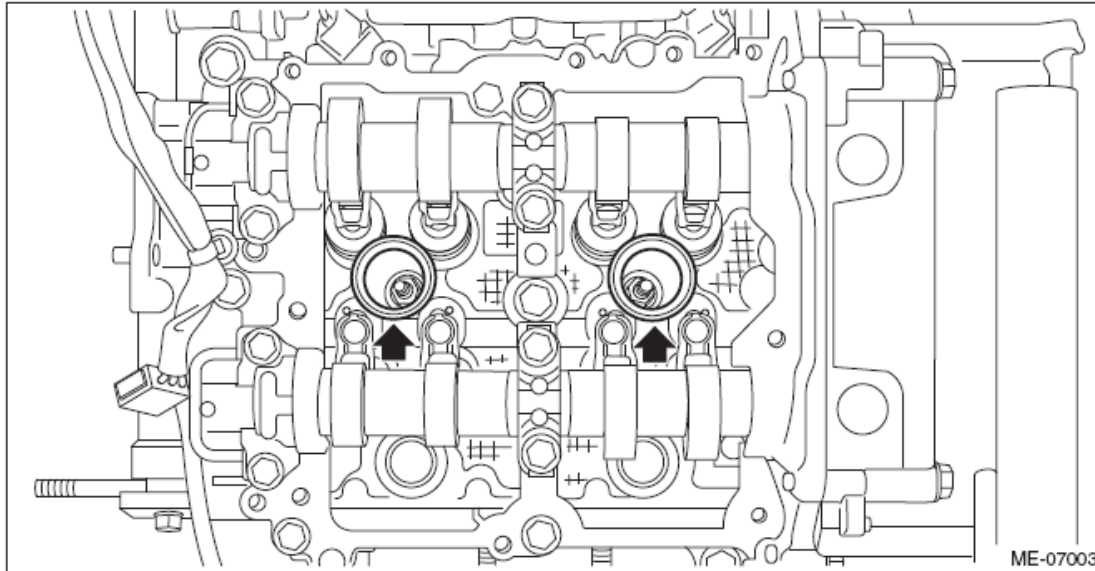


Fig. 326: Locating Spark Plug Pipe Gasket
Courtesy of SUBARU OF AMERICA, INC.

ROCKER COVER LH

NOTE: When replacing a single part, perform the work with the engine assembly installed to body.

1. When working on the vehicle

NOTE: When working on the vehicle, perform the following steps also.

1. Remove the V-belt covers. (Gasoline engine model)

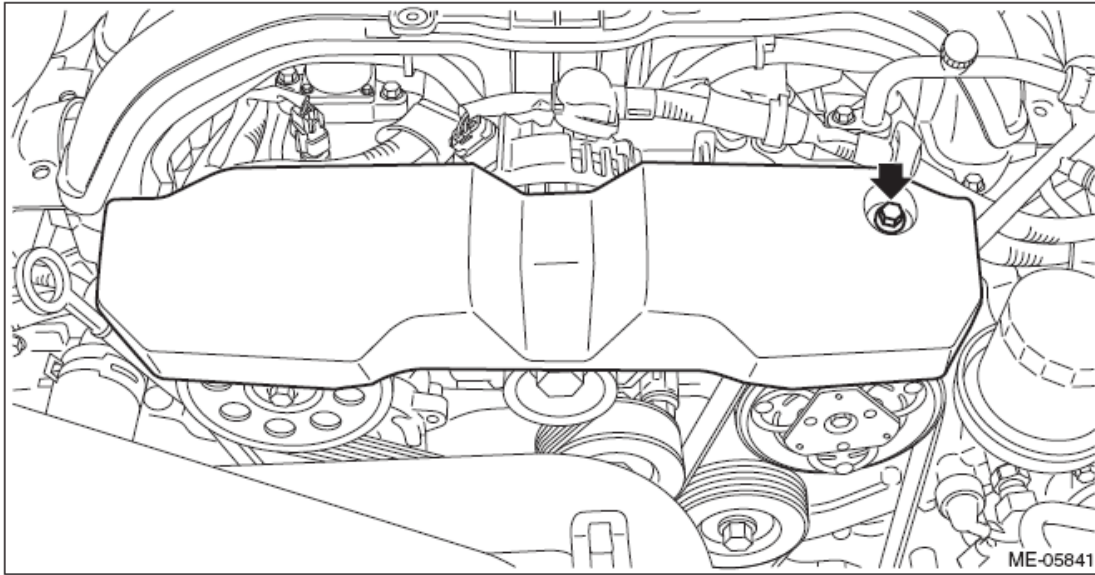


Fig. 327: Locating V-Belt Covers Mounting Bolt (Gasoline Engine Model)
Courtesy of SUBARU OF AMERICA, INC.

2. Remove the battery. (Gasoline engine model) < Ref. to **REMOVAL** , Battery.>
3. Turn the ignition switch to OFF. (HEV model)
4. Remove the collector cover. (HEV model)
 1. Pull up the two points at the front of collector cover (A).
 2. Pull up the two points at the rear of collector cover (B) while moving them rearward.

NOTE: Be careful not to contact the fuel delivery tube when moving the collector cover rearward.

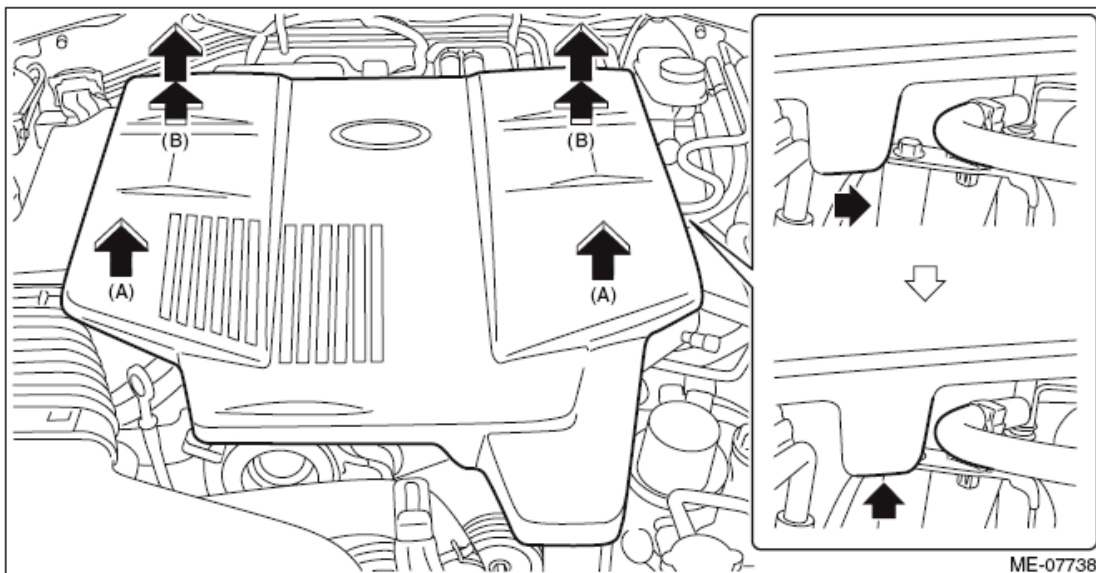



Fig. 328: Removing Collector Cover (HEV Model)

Courtesy of SUBARU OF AMERICA, INC.

5. Remove the 12 volt auxiliary battery. (HEV model) < Ref. to **12 VOLT AUXILIARY BATTERY** , REMOVAL, Battery.>
6. Remove the air intake duct. < Ref. to **REMOVAL** , Air Intake Duct.> < Ref. to **REMOVAL** , Air Intake Duct.>
7. Align the timing mark (A) of crank pulley to the timing gauge (B) 0° of chain cover as shown in the figure, and turn the crankshaft by 180° clockwise from that position.

NOTE: This procedure is required to prevent the rocker cover LH and the cam lobe of camshaft LH contacting with each other when removing the rocker cover LH.

- Gasoline engine model

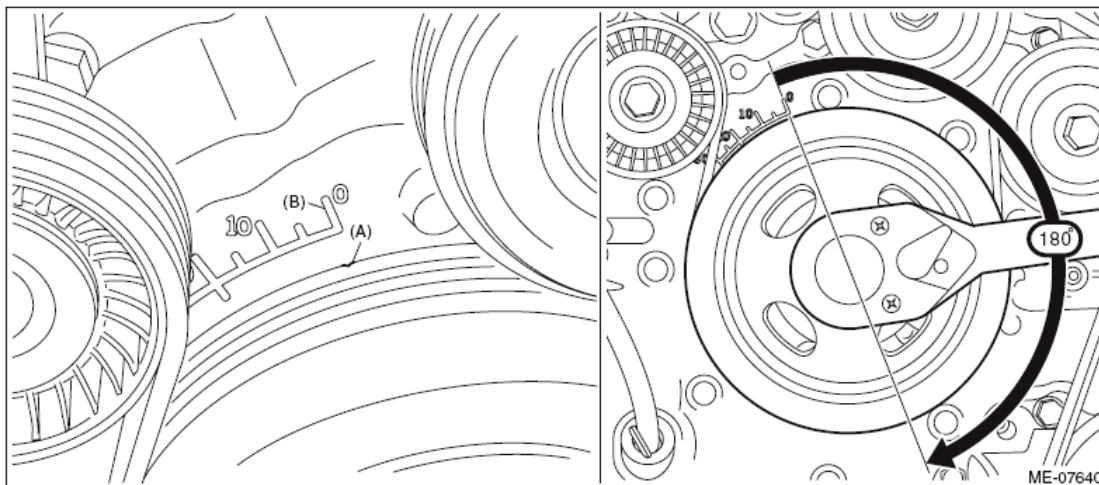**Fig. 329: Turning Crankshaft Using Tool (Gasoline Engine Model)**

Courtesy of SUBARU OF AMERICA, INC.

- HEV model

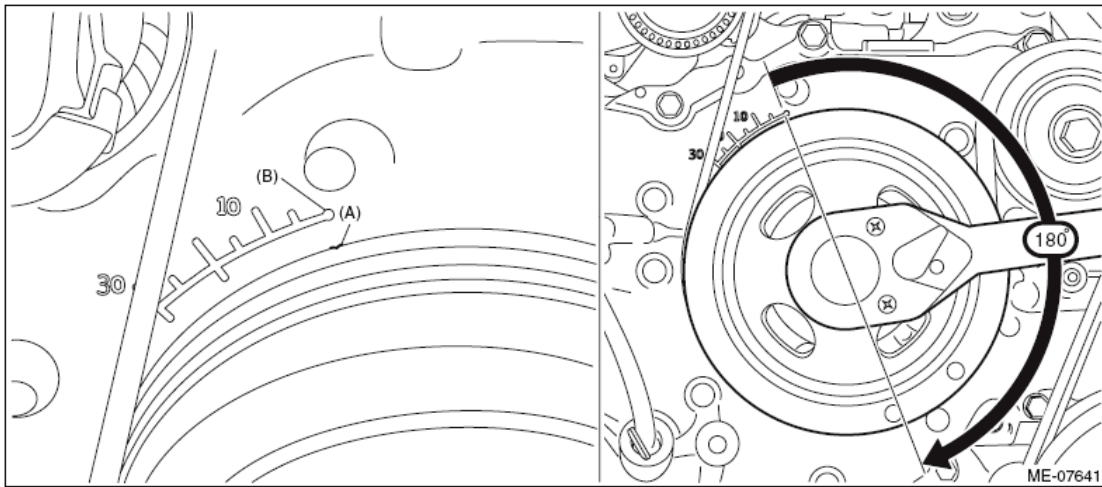


Fig. 330: Turning Crankshaft Using Tool (HEV Model)
Courtesy of SUBARU OF AMERICA, INC.

2. Remove the #2 ignition coil and the #4 ignition coil. < Ref. to **REMOVAL** , Ignition Coil.>
3. Remove the intake manifold protector LH.

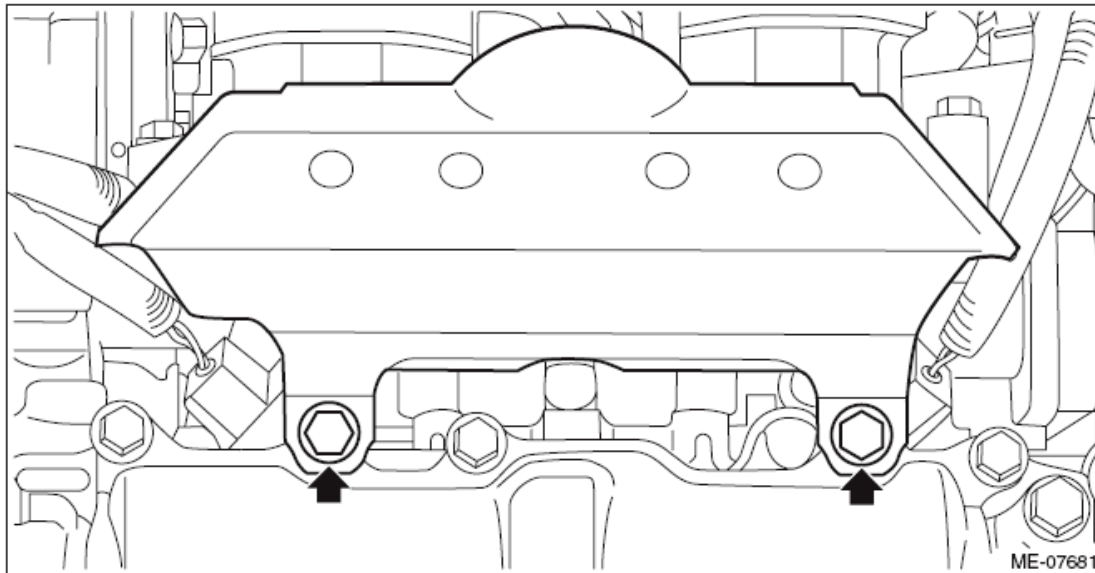


Fig. 331: Locating Intake Manifold Protector LH Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

4. Remove the rocker cover LH.

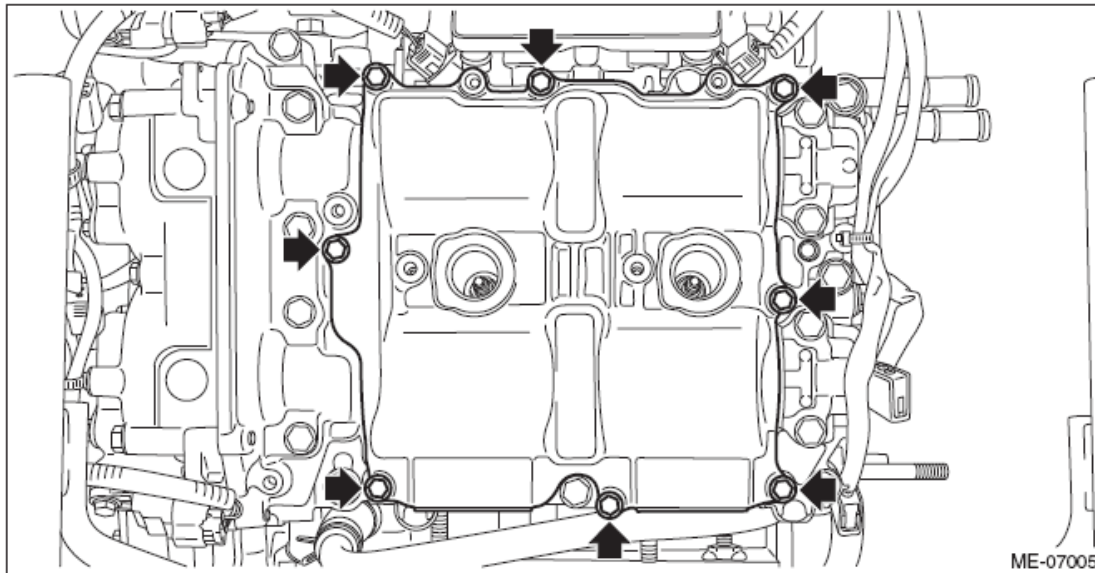


Fig. 332: Locating Rocker Cover LH Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

5. Remove the rocker cover gasket LH, #2 spark plug pipe gasket and #4 spark plug pipe gasket, and remove the liquid gasket.

CAUTION:

- When removing the liquid gasket from engine unit using scraper, use special care not to damage the cam lobe of camshaft LH.
- If the cam lobe of camshaft LH interferes, turn the crankshaft to the position where the scraper does not touch.

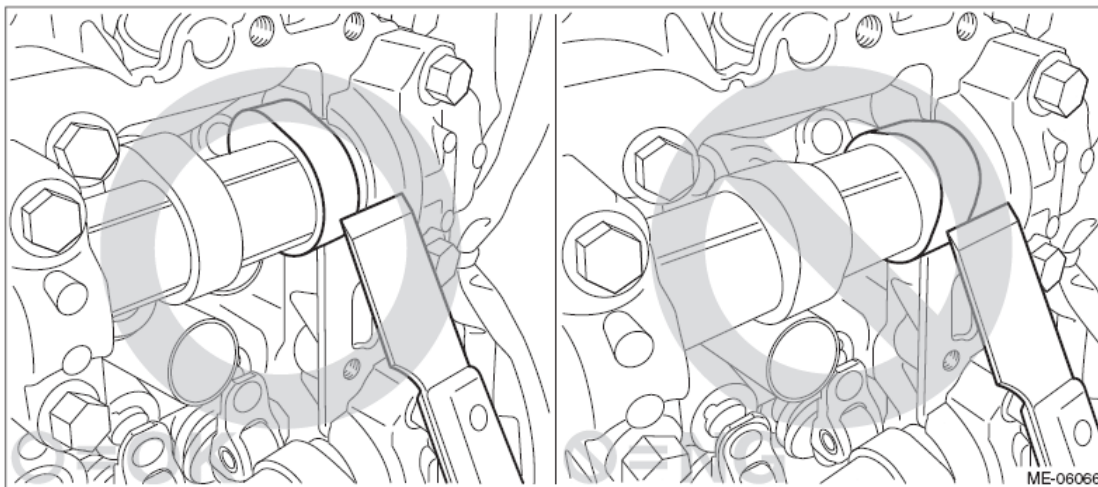


Fig. 333: Caution For Removing Liquid Gasket From Engine Unit Using Scraper
Courtesy of SUBARU OF AMERICA, INC.

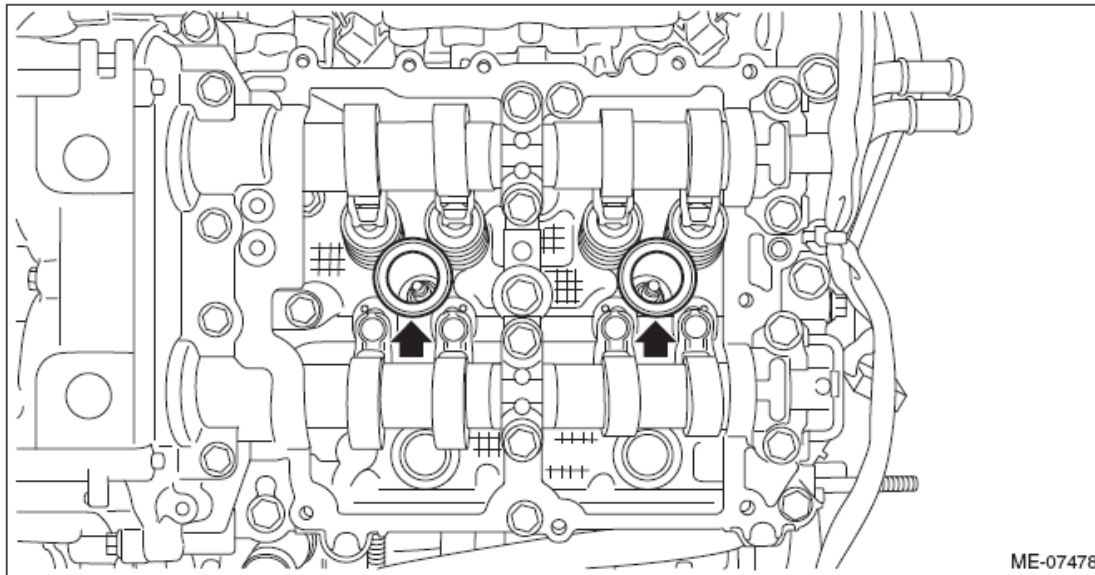


Fig. 334: Locating Spark Plug Pipe Gasket
Courtesy of SUBARU OF AMERICA, INC.

INSTALLATION

ROCKER COVER RH

1. Install the #1 spark plug pipe gasket and #3 spark plug pipe gasket to the #1 spark plug pipe and #3 spark plug pipe.

NOTE:

- Use a new #1 spark plug pipe gasket and #3 spark plug pipe gasket.
- Apply a light coat of engine oil to the #1 spark plug pipe gasket and #3 spark plug pipe gasket, and insert them onto the spark plug pipe edge (A).

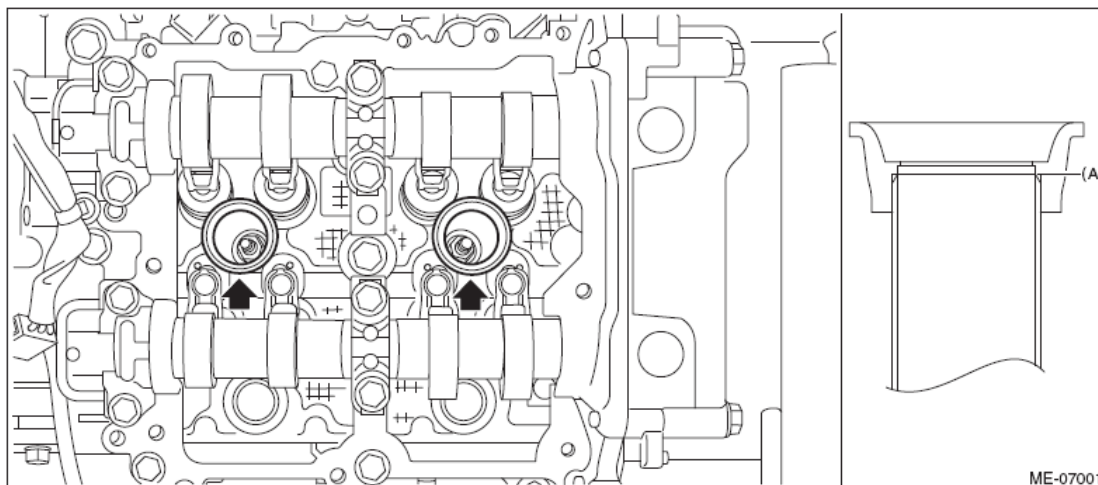


Fig. 335: Locating Spark Plug Pipe Gasket
 Courtesy of SUBARU OF AMERICA, INC.

2. Install the rocker cover gasket RH to the rocker cover RH.

NOTE: Use a new rocker cover gasket RH.

3. Apply liquid gasket to the mating surface of rocker cover RH as shown in the figure.


- NOTE:**
- Before applying liquid gasket, degrease the old liquid gasket seal surface of the engine.
 - Be careful not to allow liquid gasket to be squeezed out from rocker cover RH.
 - Install within 5 min. after applying liquid gasket.

Liquid gasket:

THREE BOND 1217G (Part No. K0877Y0100) or equivalent

Liquid gasket applying diameter:

3.5±0.5 mm (0.1378±0.0197 in)

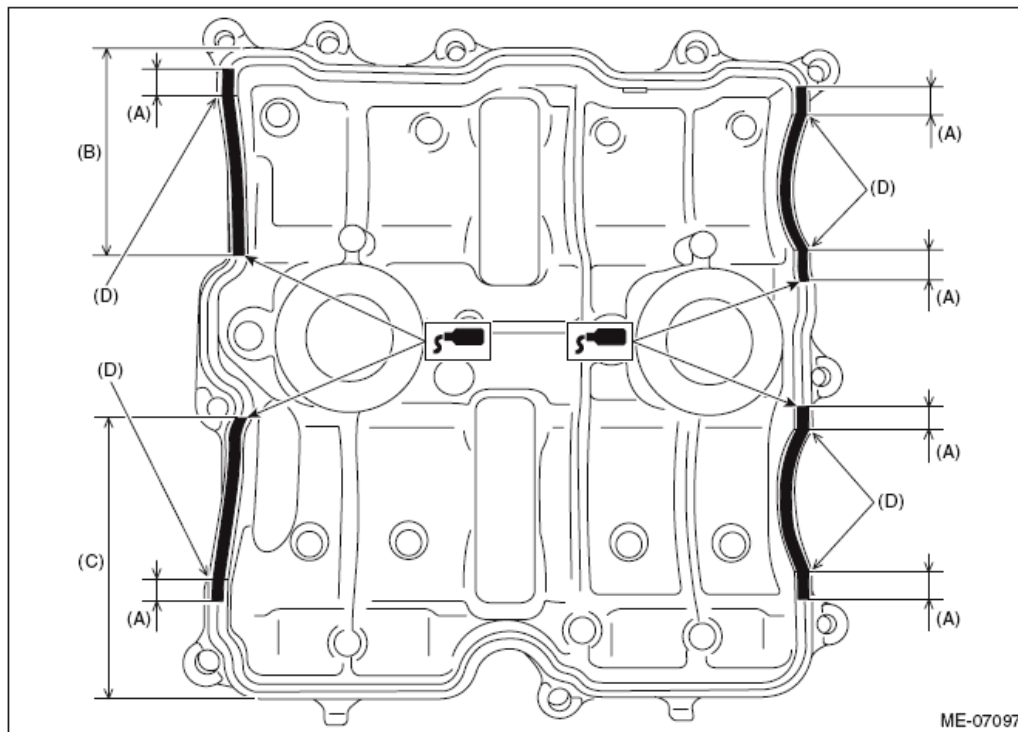

(A) 10 mm (0.394 in) or more
 (B) 68 mm (2.677 in) or more

(C) 89 mm (3.504 in) or more

(D) Arch starting point

ME-07097

Fig. 336: Identifying Liquid Gasket Applying Dimension On Rocker Cover
Courtesy of SUBARU OF AMERICA, INC.

4. Set the rocker cover RH, and tighten the bolts in numerical order as shown in the figure.

Tightening torque:

6.4 N.m (0.7 kgf-m, 4.7 ft-lb)

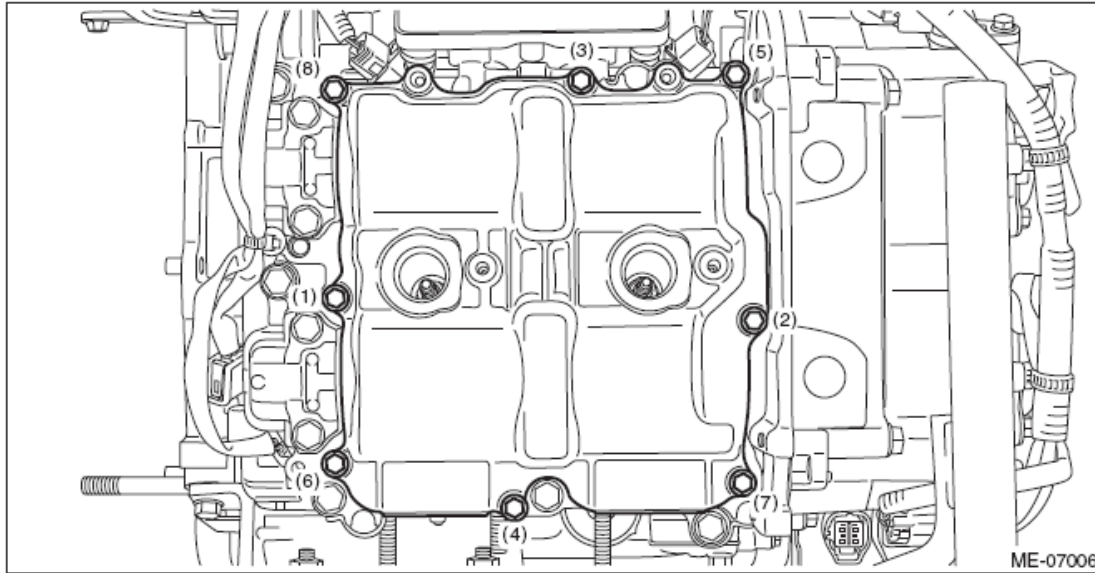


Fig. 337: Identifying Rocker Cover RH Mounting Bolt Tightening Sequence
Courtesy of SUBARU OF AMERICA, INC.

5. Install the intake manifold protector RH.

Tightening torque:

6.4 N.m (0.7 kgf-m, 4.7 ft-lb)

- Gasoline engine model

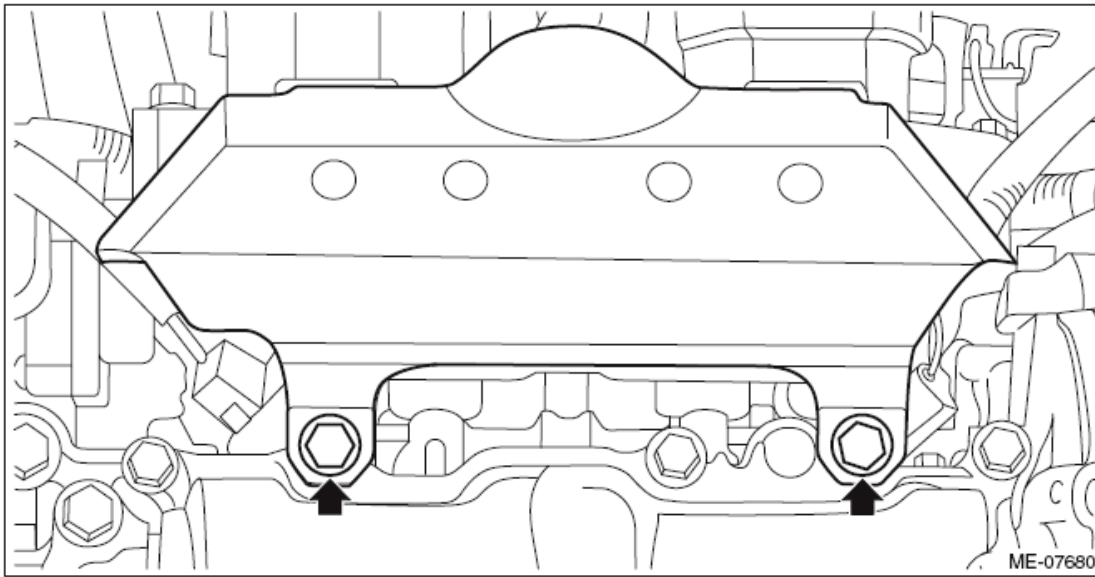


Fig. 338: Locating Intake Manifold Protector RH Mounting Bolt (Gasoline Engine Model)
Courtesy of SUBARU OF AMERICA, INC.

- HEV model

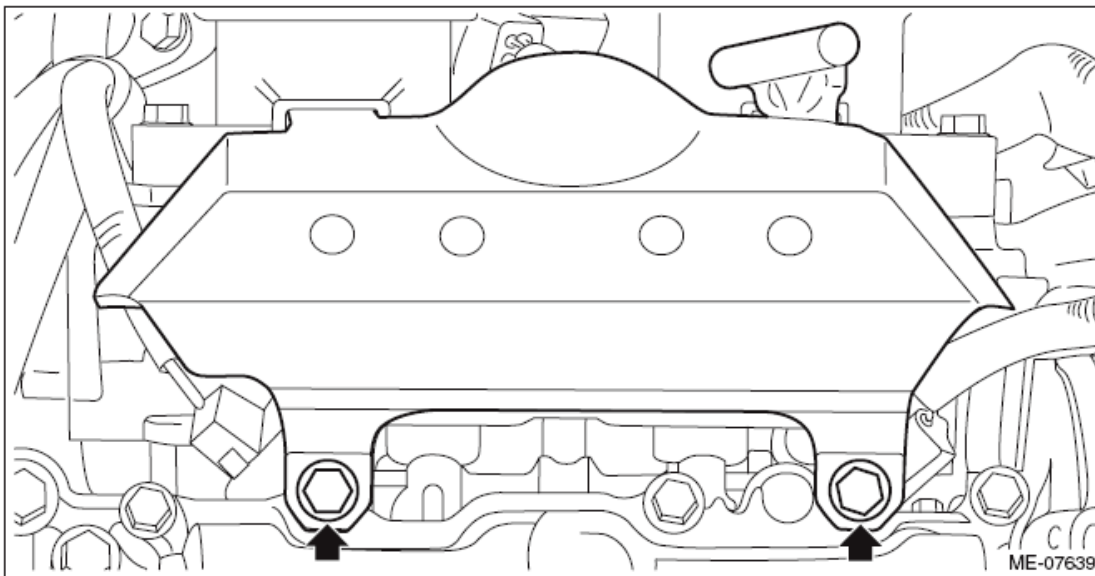


Fig. 339: Locating Intake Manifold Protector RH Mounting Bolt (HEV Model)
Courtesy of SUBARU OF AMERICA, INC.

6. Install the #1 ignition coil and the #3 ignition coil. < Ref. to **INSTALLATION** , Ignition Coil.>
7. When working on the vehicle

NOTE: When working on the vehicle, perform the following steps also.

1. Install the front exhaust pipe. < Ref. to **INSTALLATION** , Front Exhaust Pipe.>
2. Install the air intake boot. (Gasoline engine model) < Ref. to **INSTALLATION** , Air Intake Boot.>
3. Install the air cleaner case. (Gasoline engine model) < Ref. to **INSTALLATION** , Air Cleaner Case.>
4. Install the battery cable bracket No. 2 to the vehicle, and install the battery cable assembly to battery cable bracket No. 2. (HEV model)

Tightening torque:

7.5 N.m (0.8 kgf-m, 5.5 ft-lb)

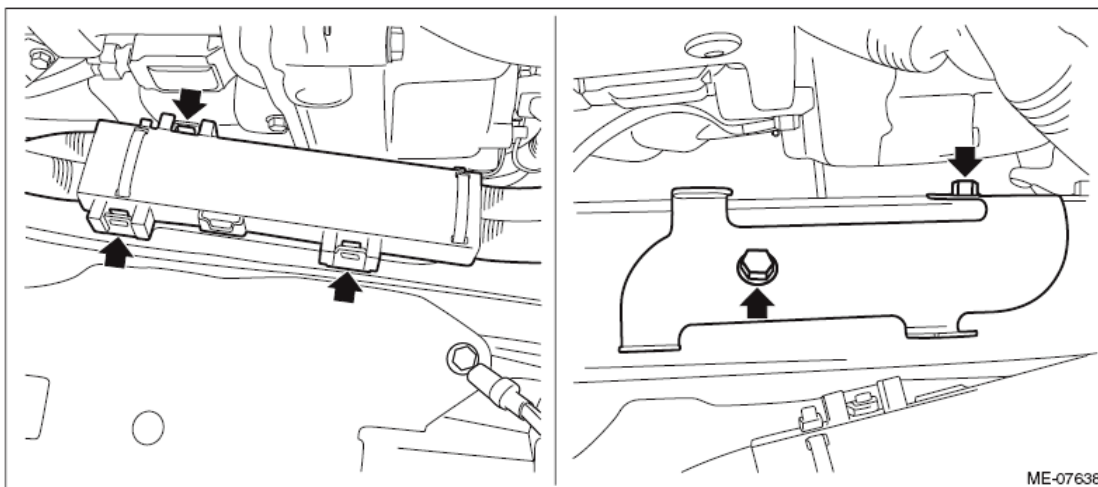


Fig. 340: Locating Intake Duct Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

5. Install the 12 volt engine restart battery. (HEV model) < Ref. to **12 VOLT ENGINE RESTART BATTERY** , INSTALLATION, Battery.>
6. Install the intake duct. (HEV model) < Ref. to **INSTALLATION** , Intake Duct.>

ROCKER COVER LH

1. When working on the vehicle

NOTE: When working on the vehicle, perform the following steps also.

1. Align the timing mark (A) of crank pulley to the timing gauge (B) of chain cover as shown in the figure, and turn the crankshaft by 180° clockwise from that position.

NOTE: This procedure is required to prevent the rocker cover LH and the cam lobe of camshaft LH contacting with each other when installing the rocker cover LH.

- Gasoline engine model

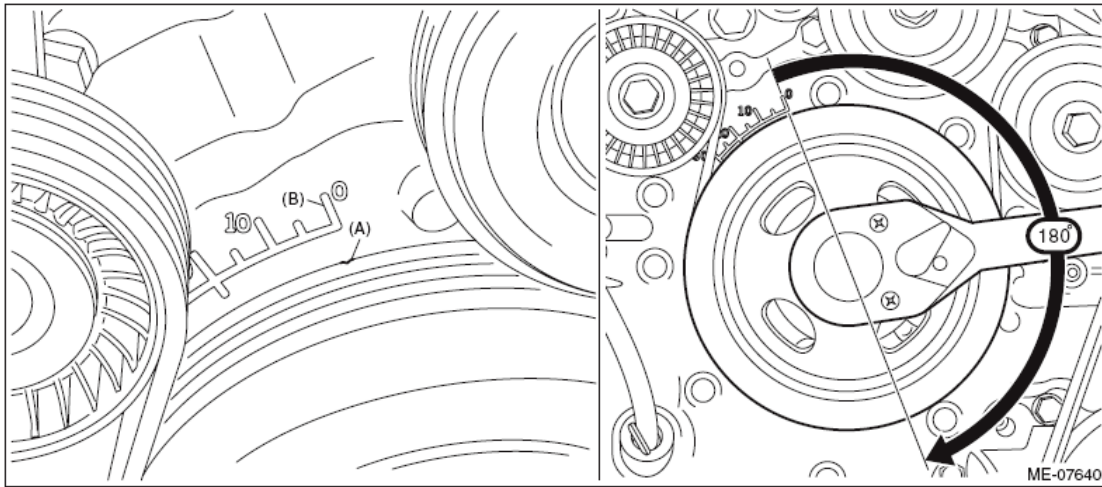


Fig. 341: Turning Crankshaft Using Tool (Gasoline Engine Model)
Courtesy of SUBARU OF AMERICA, INC.

- HEV model

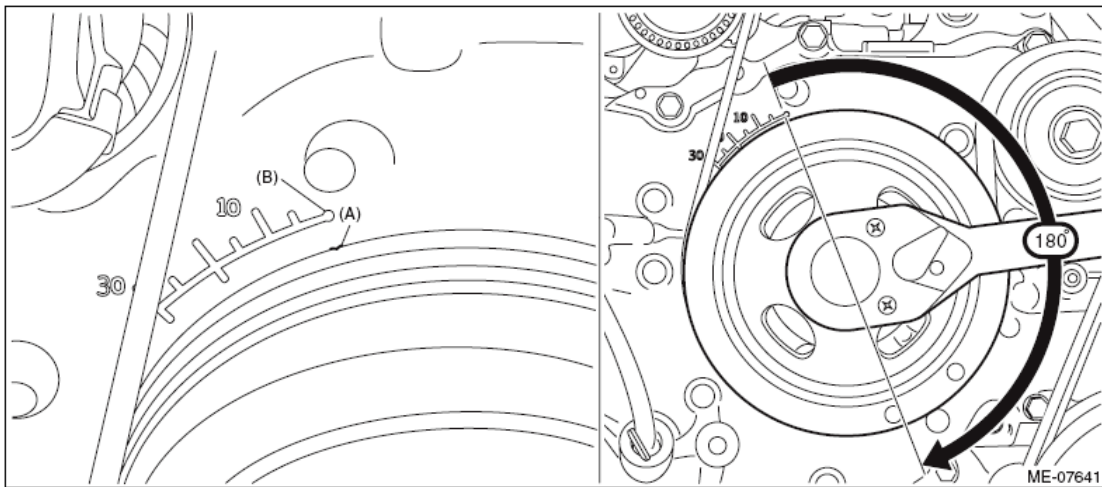


Fig. 342: Turning Crankshaft Using Tool (HEV Model)
Courtesy of SUBARU OF AMERICA, INC.

2. Install the #2 spark plug pipe gasket and #4 spark plug pipe gasket to the #2 spark plug pipe and #4 spark plug pipe.

NOTE:

- Use a new #2 spark plug pipe gasket and #4 spark plug pipe gasket.
- Apply a light coat of engine oil to the #2 spark plug pipe gasket and #4 spark plug pipe gasket, and insert them onto the spark plug pipe edge (A).

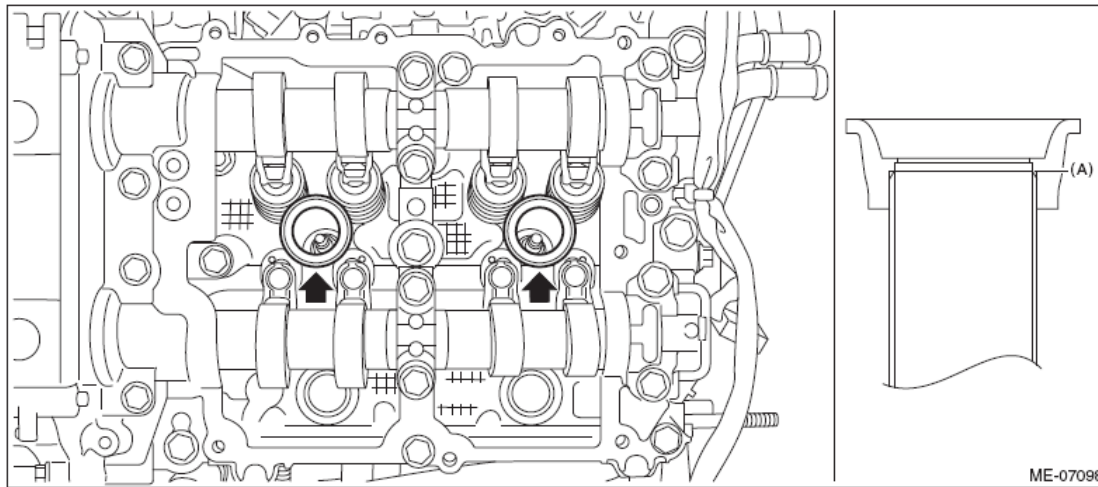


Fig. 343: Locating Spark Plug Pipe Gasket
Courtesy of SUBARU OF AMERICA, INC.

3. Install the rocker cover gasket LH to the rocker cover LH.

NOTE: Use a new rocker cover gasket LH.

4. Apply liquid gasket to the mating surface of rocker cover LH as shown in the figure.


- NOTE:**
- Before applying liquid gasket, degrease the old liquid gasket seal surface of the engine.
 - Be careful not to allow liquid gasket to be squeezed out from rocker cover LH.
 - Install within 5 min. after applying liquid gasket.

Liquid gasket:

THREE BOND 1217G (Part No. K0877Y0100) or equivalent

Liquid gasket applying diameter:

$3.5 \pm 0.5 \text{ mm}$ ($0.1378 \pm 0.0197 \text{ in}$)

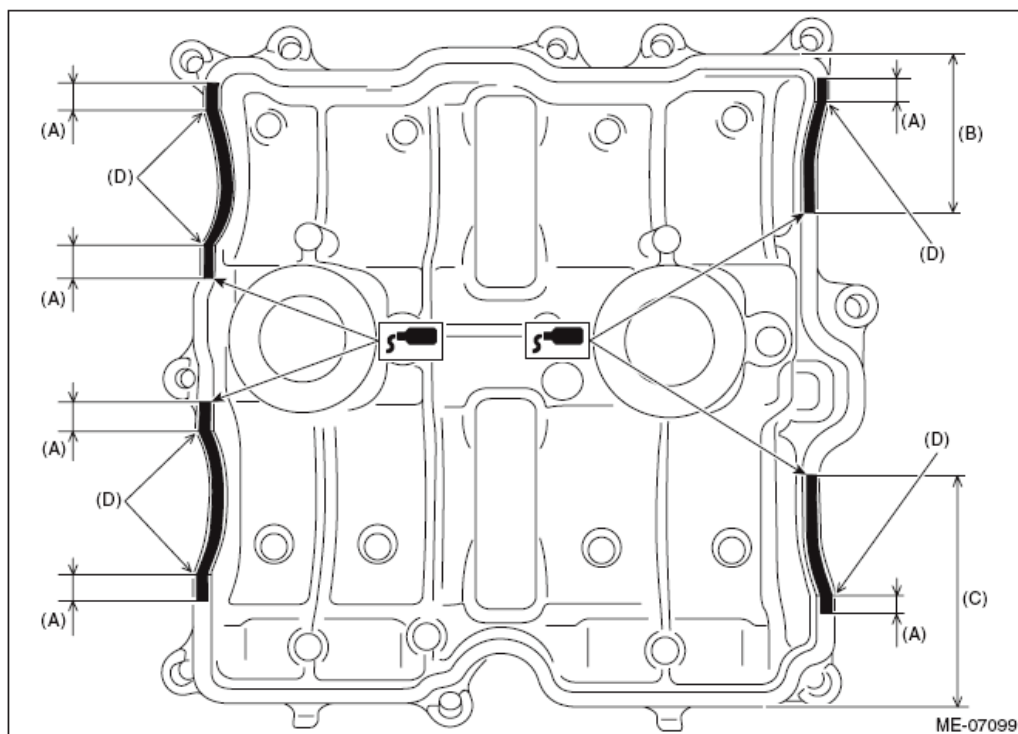

(A) 10 mm (0.394 in) or more

(C) 73 mm (2.874 in) or more

(D) Arch starting point

(B) 51 mm (2.008 in) or more

Fig. 344: Identifying Liquid Gasket Applying Dimension On Rocker Cover LH
 Courtesy of SUBARU OF AMERICA, INC.

5. Set the rocker cover LH, and tighten the bolts in numerical order as shown in the figure.

Tightening torque:

6.4 N.m (0.7 kgf-m, 4.7 ft-lb)

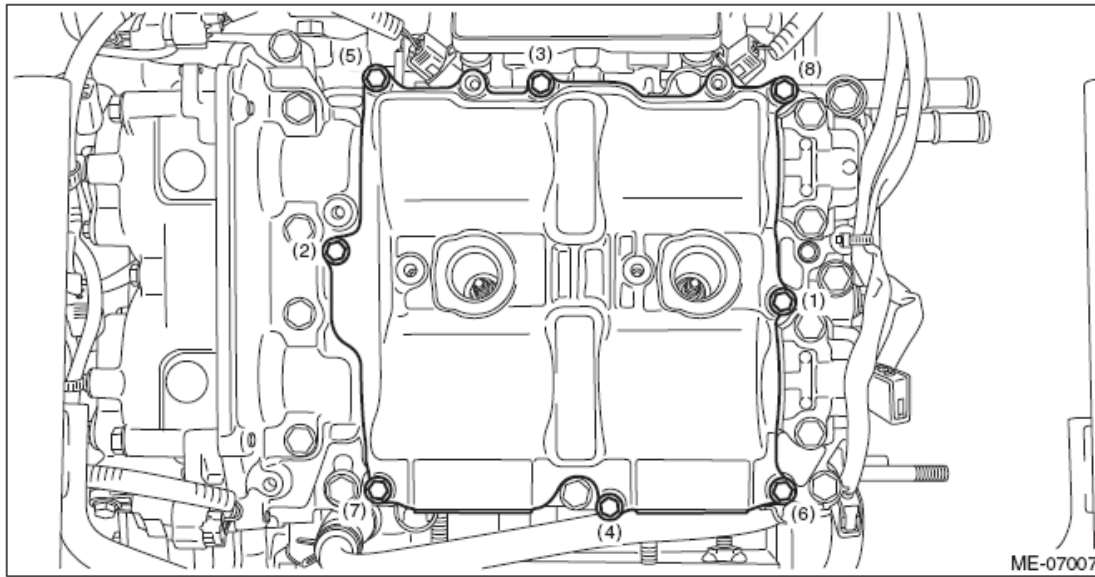


Fig. 345: Identifying Rocker Cover LH Mounting Bolt Tightening Sequence
Courtesy of SUBARU OF AMERICA, INC.

6. Install the intake manifold protector LH.

Tightening torque:

6.4 N.m (0.7 kgf-m, 4.7 ft-lb)

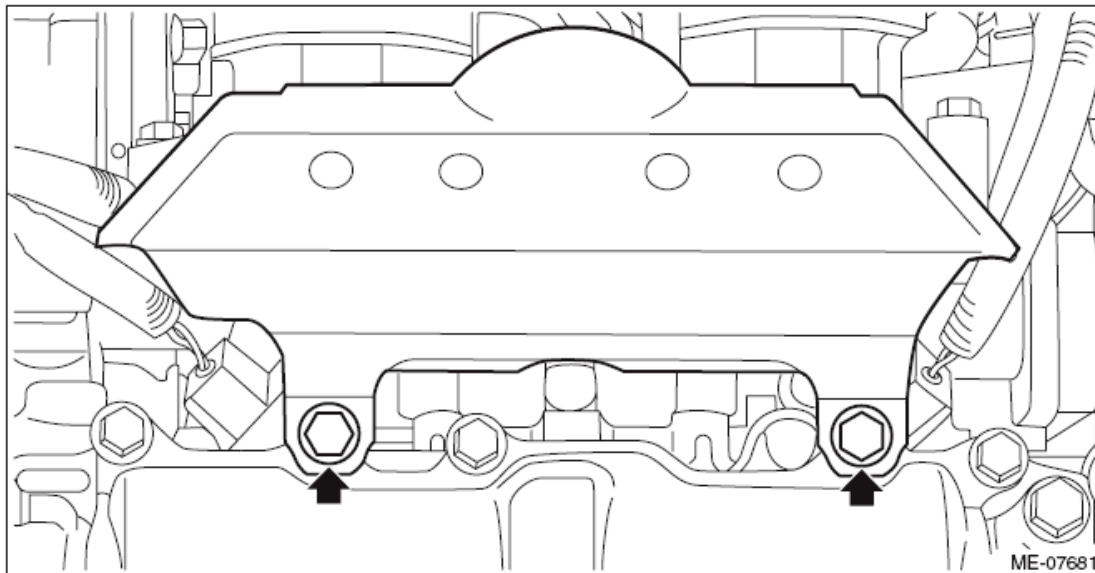


Fig. 346: Locating Intake Manifold Protector LH Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

7. Install the #2 ignition coil and the #4 ignition coil. < Ref. to **INSTALLATION** , Ignition Coil.>

8. When working on the vehicle

NOTE: When working on the vehicle, perform the following steps also.

1. Install the air intake duct. < Ref. to **INSTALLATION** , Air Intake Duct.> < Ref. to **INSTALLATION** , Air Intake Duct.>
2. Install the battery. (Gasoline engine model) < Ref. to **INSTALLATION** , Battery.>
3. Install the V-belt cover. (Gasoline engine model)

Tightening torque:

6.4 N.m (0.7 kgf-m, 4.7 ft-lb)

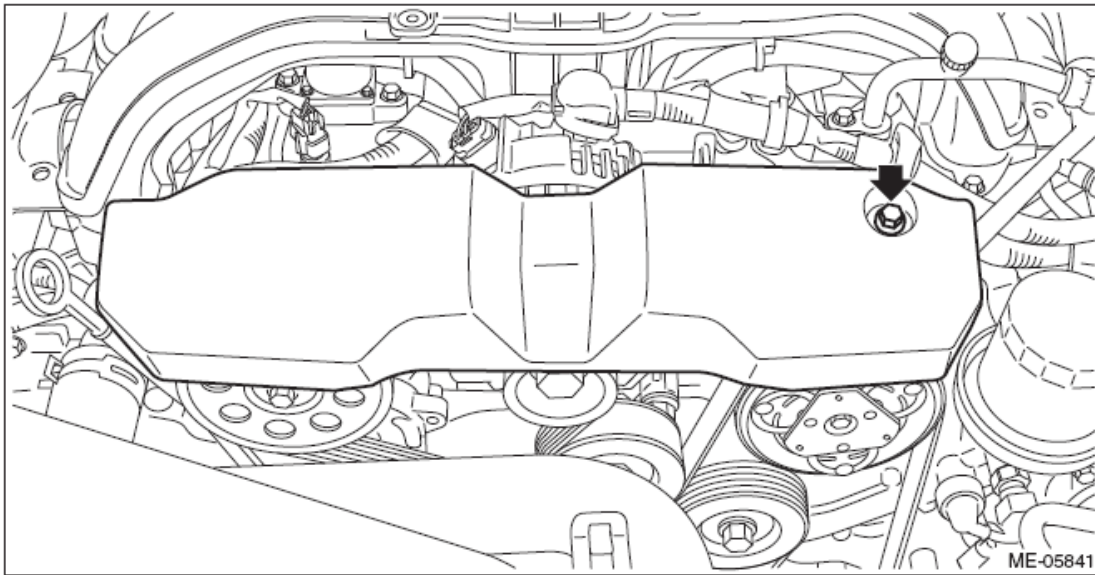


Fig. 347: Locating V-belt Cover Mounting Bolt (Gasoline Engine Model)
Courtesy of SUBARU OF AMERICA, INC.

4. Install the 12 volt auxiliary battery. (HEV model) < Ref. to **12 VOLT AUXILIARY BATTERY** , INSTALLATION, Battery.>
5. Install the collector cover. (HEV model)

INSPECTION

Check that the rocker cover does not have deformation, cracks and any other damage.

CAMSHAFT

REMOVAL

CAMSHAFT RH

The camshaft RH and cam carrier are designed as removing as a unit. Refer to "Cam Carrier" for removal procedures of camshaft RH. < Ref. to **CAM CARRIER RH**, REMOVAL, Cam Carrier.> < Ref. to **CAM CARRIER RH**, DISASSEMBLY, Cam Carrier.>

CAMSHAFT LH

The camshaft LH and cam carrier are designed as removing as a unit. Refer to "Cam Carrier" for removal procedures of camshaft LH. < Ref. to **CAM CARRIER LH**, REMOVAL, Cam Carrier.> < Ref. to **CAM CARRIER LH**, DISASSEMBLY, Cam Carrier.>

INSTALLATION

CAMSHAFT RH

The camshaft RH and cam carrier are designed as installing as a unit. Refer to "Cam Carrier" for installation procedures of camshaft RH. < Ref. to **CAM CARRIER RH**, ASSEMBLY, Cam Carrier.> < Ref. to **CAM CARRIER RH**, INSTALLATION, Cam Carrier.>

CAMSHAFT LH

The camshaft LH and cam carrier are designed as installing as a unit. Refer to "Cam Carrier" for installation procedures of camshaft LH. < Ref. to **CAM CARRIER LH**, ASSEMBLY, Cam Carrier.> < Ref. to **CAM CARRIER LH**, INSTALLATION, Cam Carrier.>

CAM CARRIER

REMOVAL

CAM CARRIER RH

1. Remove the engine from the vehicle. < Ref. to **REMOVAL**, Engine Assembly.>
2. Remove the chain cover. < Ref. to **REMOVAL**, Chain Cover.>
3. Remove the timing chain RH. < Ref. to **TIMING CHAIN RH**, REMOVAL, Timing Chain Assembly.>
4. Remove the cam sprocket RH. < Ref. to **CAM SPROCKET RH**, REMOVAL, Cam Sprocket.>

NOTE: This procedure is required only when disassembling the cam carrier RH.

5. Remove the rocker cover RH. < Ref. to **ROCKER COVER RH**, REMOVAL, Rocker Cover.>
6. Remove the clip holding the engine harness from cam carrier RH.

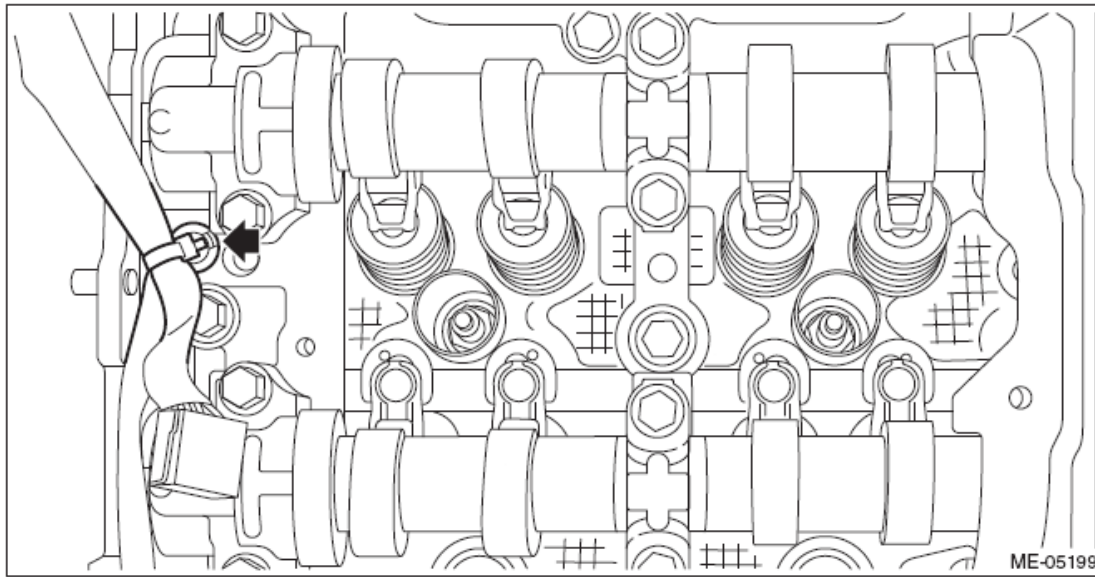


Fig. 348: Locating Cam Carrier RH Engine Harness Clip
Courtesy of SUBARU OF AMERICA, INC.

7. Disconnect the engine coolant inlet hose from the EGR cooler. (HEV model)

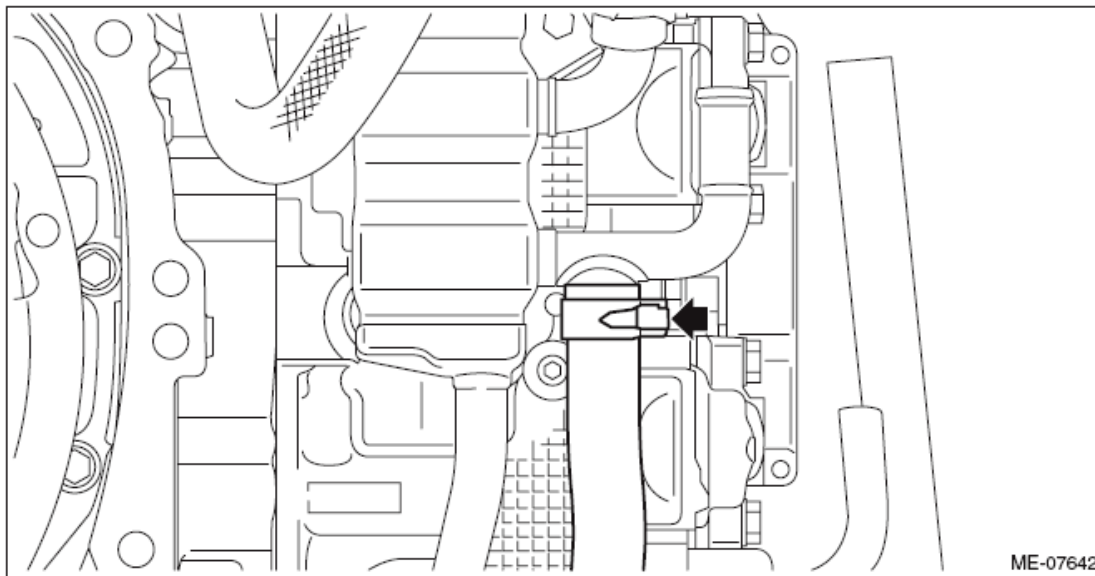


Fig. 349: Locating Engine Coolant Inlet Hose Clamp
Courtesy of SUBARU OF AMERICA, INC.

8. Disconnect the water pipe hose from oil pan upper, and remove the water pipe assembly RH. (CVT model)

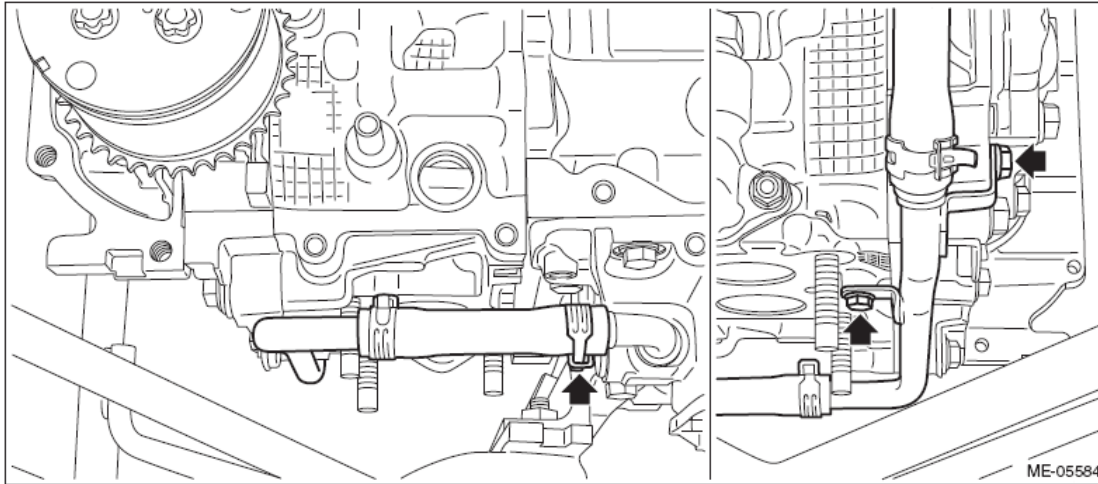


Fig. 350: Locating Water Pipe Assembly RH Clamp And Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

9. Remove the fuel pipe RH and the fuel injector RH.
 1. Disconnect the connector from fuel injector RH.


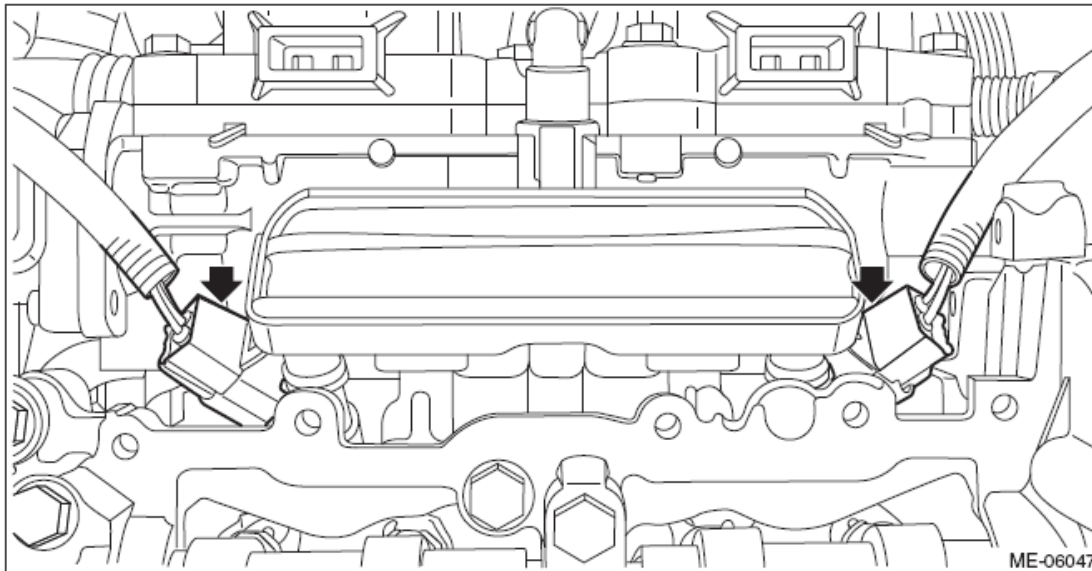


Fig. 351: Locating Fuel Injector RH Connector
Courtesy of SUBARU OF AMERICA, INC.

2. Disconnect the quick connector from fuel pipe RH.

NOTE: **Disconnect the quick connector as shown in the figure.**

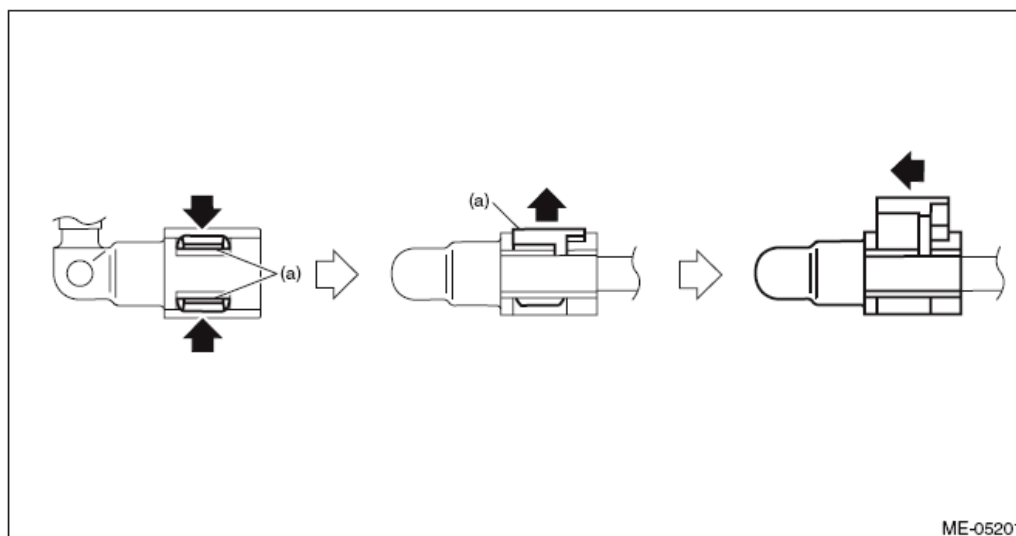

(a) Slider

Fig. 352: Disconnecting Quick Connector From Fuel Pipe RH
Courtesy of SUBARU OF AMERICA, INC.

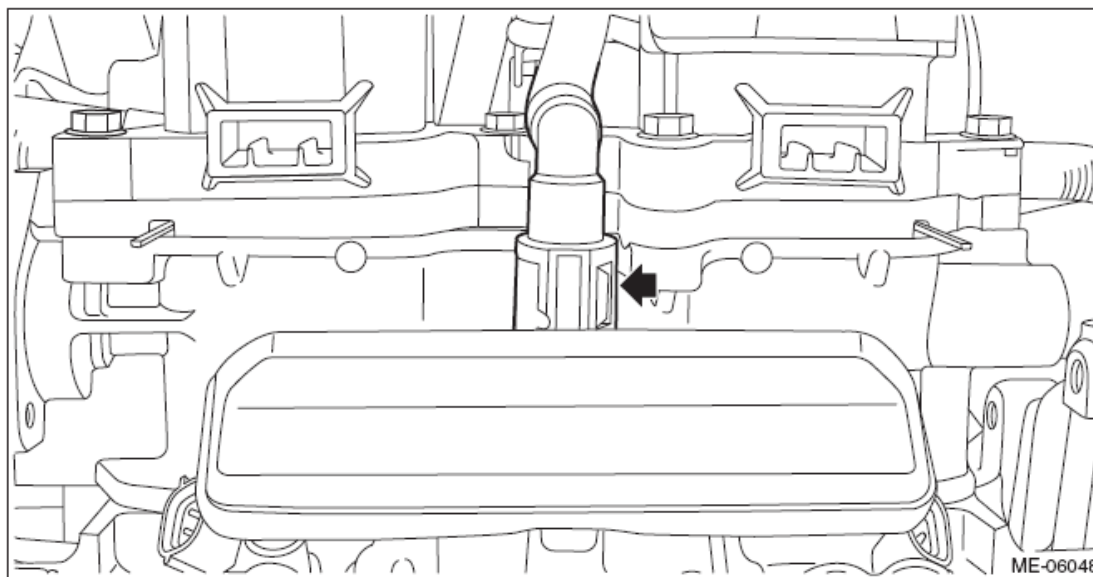


Fig. 353: Locating Quick Connector Slider
Courtesy of SUBARU OF AMERICA, INC.

3. Remove the bolts securing the fuel pipe RH, and remove the fuel pipe RH and the fuel injector RH.

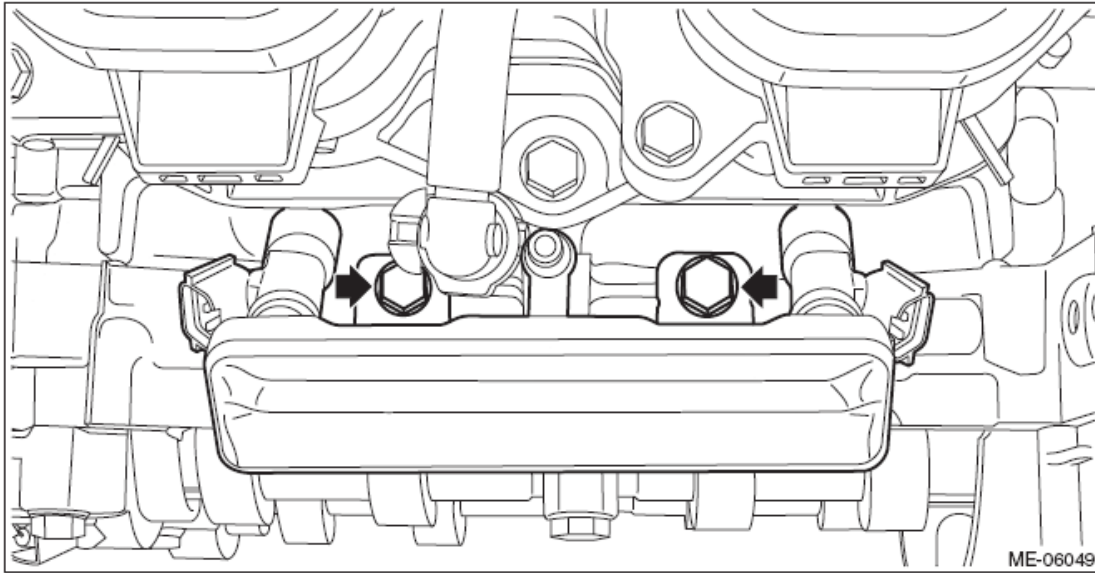


Fig. 354: Locating Fuel Pipe RH Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

10. Insert the steel rods into ST, and set the engine so that the camshaft RH is facing up.

CAUTION:

- If the engine is standing on one side without inserting the steel rod into ST, engine may lose balance and fall down. Be sure to insert the steel rod into ST to extend the length.
- Use the steel rod with enough strength.
- Be careful not to pinch the engine harness with ST.

ST 499817100 ENGINE STAND

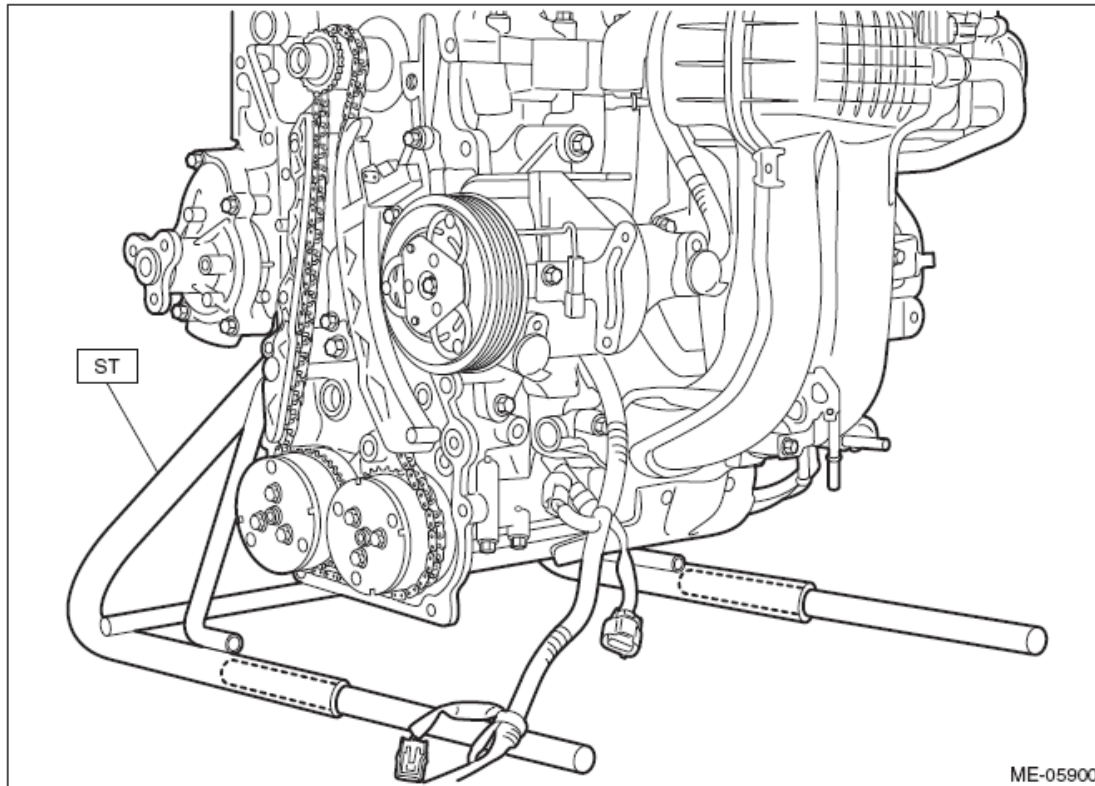


Fig. 355: Inserting Steel Rods Into Engine Stand
 Courtesy of SUBARU OF AMERICA, INC.

11. Loosen the bolts holding the cam carrier RH equally, a little at a time in numerical sequence as shown in the figure and remove the cam carrier RH.

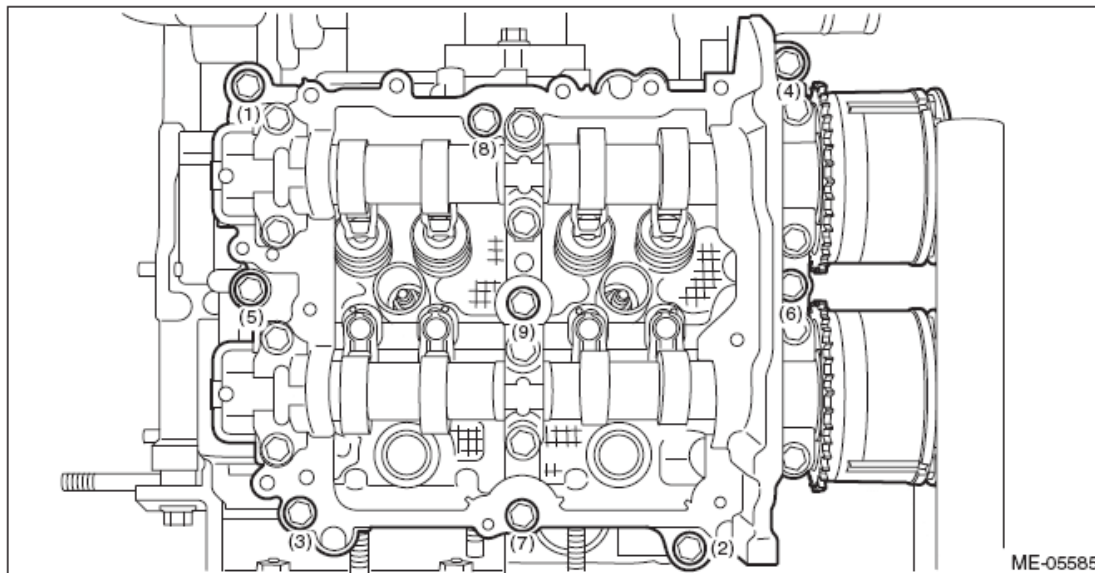


Fig. 356: Identifying Cam Carrier RH Mounting Bolt Loosening Sequence
 Courtesy of SUBARU OF AMERICA, INC.

12. Remove the O-ring and the roller rocker arm from cylinder head RH.

NOTE: Be careful not to confuse the roller rocker arms.

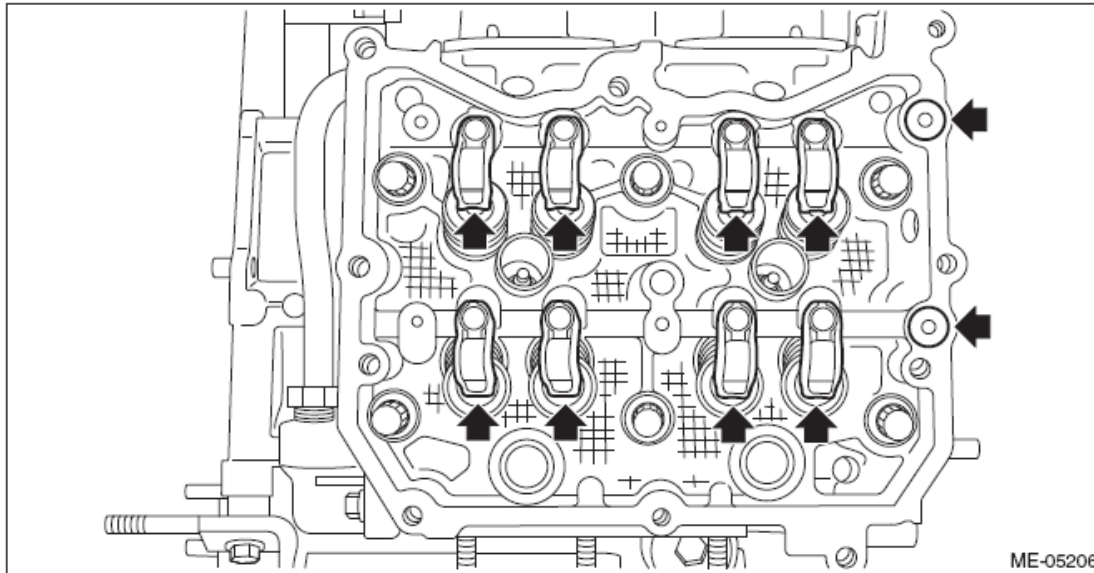


Fig. 357: Locating Roller Rocker Arm Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

13. Remove the valve shim and the roller rocker arm pivot from cylinder head RH.

NOTE: Be careful not to confuse the valve shim and the roller rocker arm pivot.

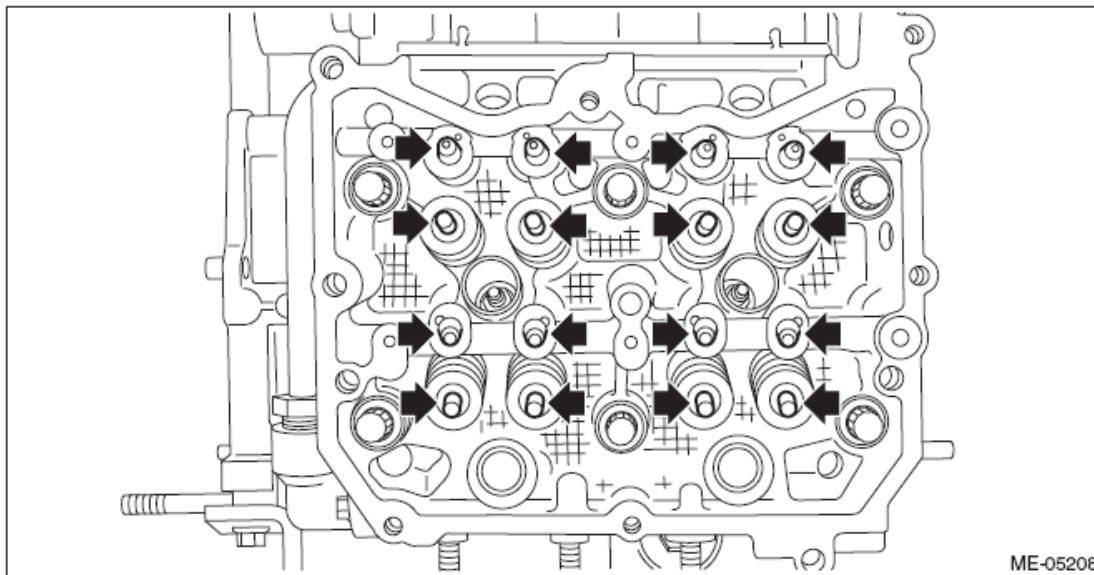


Fig. 358: Locating Cylinder Head RH Valve Shim
Courtesy of SUBARU OF AMERICA, INC.

14. Remove the liquid gasket from cam carrier RH and cylinder head RH.

CAM CARRIER LH

1. Remove the engine from the vehicle. < Ref. to **REMOVAL**, Engine Assembly.>
2. Remove the chain cover. < Ref. to **REMOVAL**, Chain Cover.>
3. Remove the timing chain LH. < Ref. to **TIMING CHAIN LH**, REMOVAL, Timing Chain Assembly.>
4. Remove the cam sprocket LH. < Ref. to **CAM SPROCKET LH**, REMOVAL, Cam Sprocket.>

NOTE: This procedure is required only when disassembling the cam carrier LH.

5. Remove the rocker cover LH. < Ref. to **ROCKER COVER LH**, REMOVAL, Rocker Cover.>
6. Remove the clip holding the engine harness from cam carrier LH.

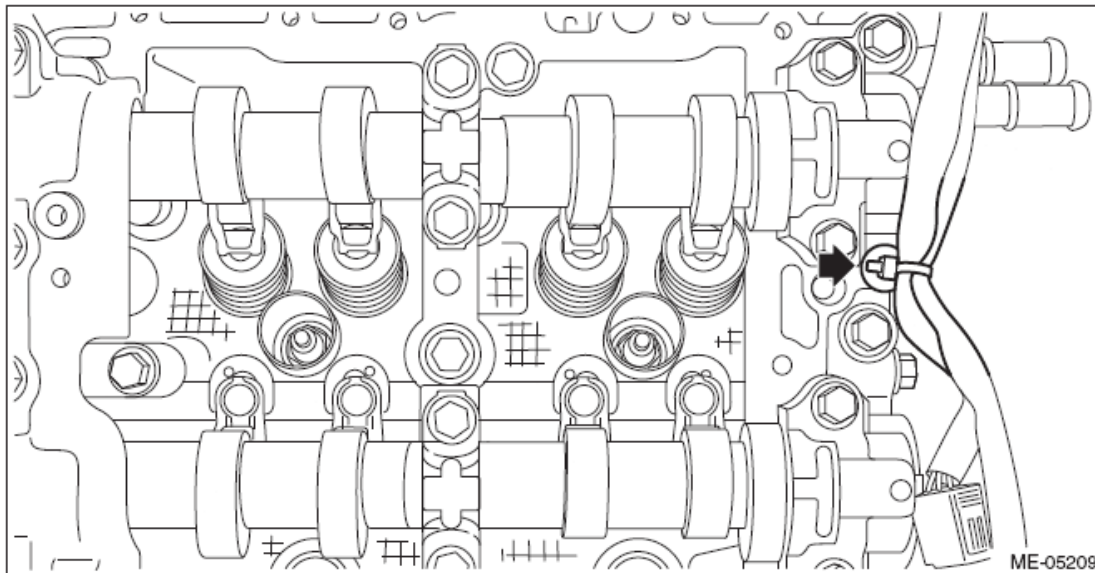


Fig. 359: Locating Cam Carrier LH Engine Harness Clip
Courtesy of SUBARU OF AMERICA, INC.

7. Disconnect the preheater hose (A) from the water pipe assembly LH, and remove the water pipe assembly LH.
8. Disconnect the water pipe hose (B) from the oil pan upper.

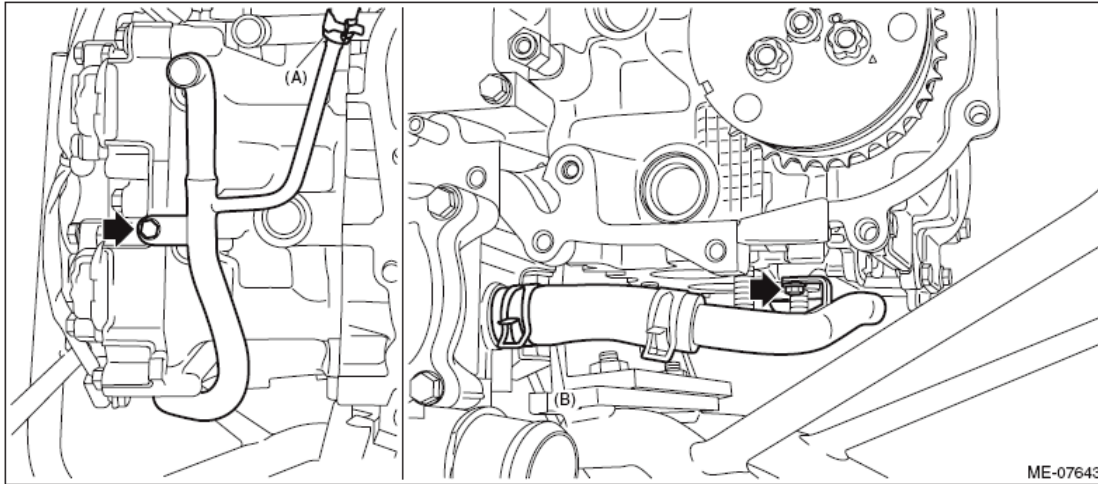


Fig. 360: Locating Preheater And Water Pipe Hose Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

9. Remove the fuel pipe LH and the fuel injector LH.
 1. Disconnect the connector from fuel injector LH.


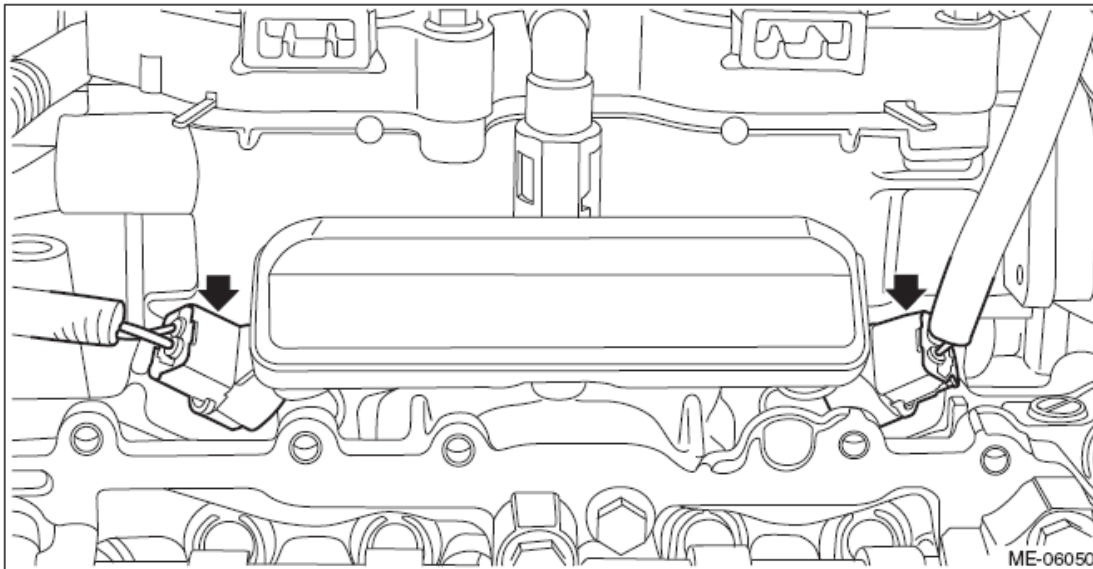


Fig. 361: Locating Fuel Injector LH Connector
Courtesy of SUBARU OF AMERICA, INC.

2. Disconnect the quick connector from fuel pipe LH.

NOTE: **Disconnect the quick connector as shown in the figure.**

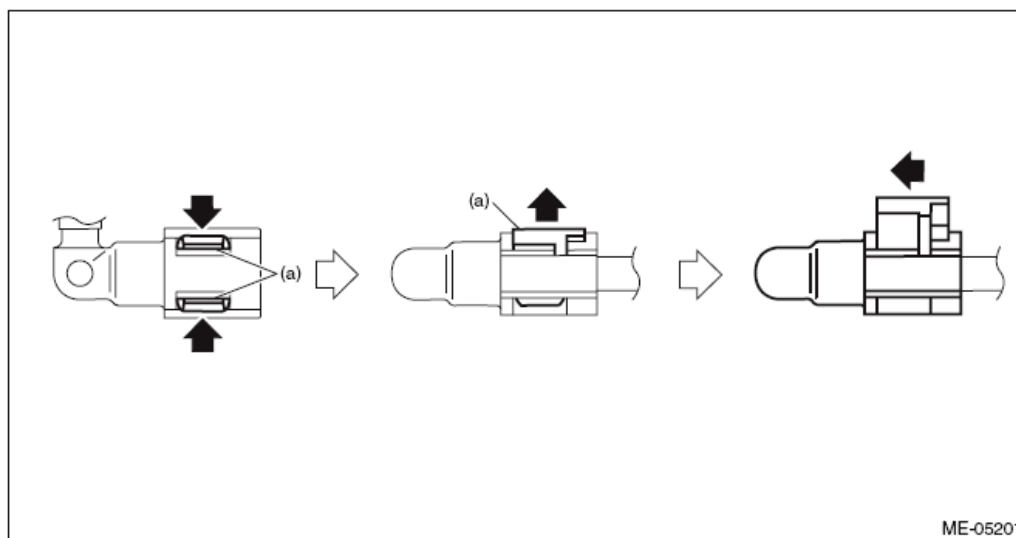

(a) Slider

Fig. 362: Disconnecting Quick Connector
Courtesy of SUBARU OF AMERICA, INC.

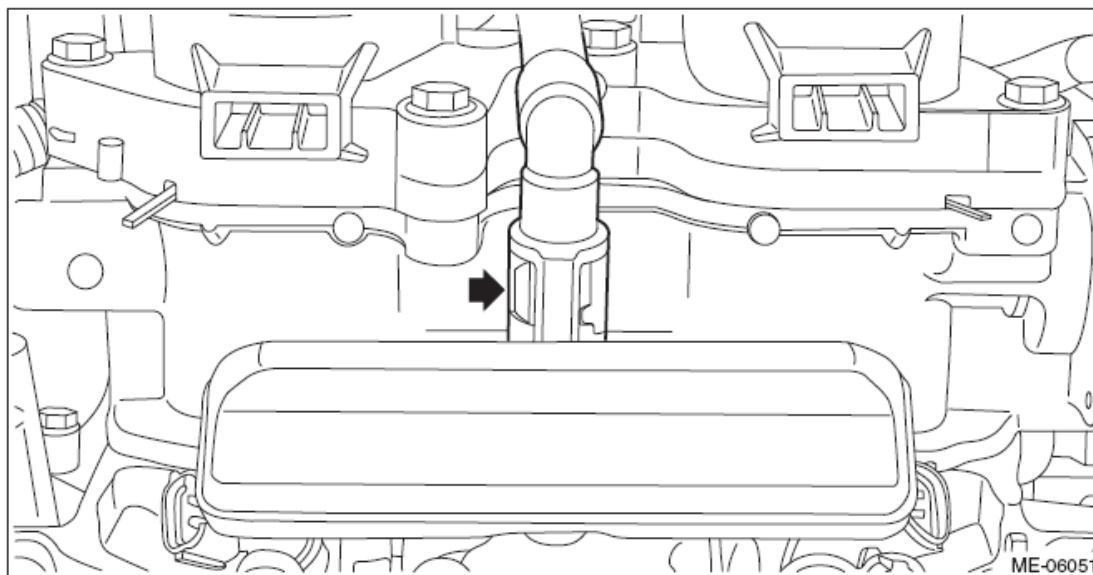


Fig. 363: Locating Quick Connector Slider
Courtesy of SUBARU OF AMERICA, INC.

3. Remove the bolts securing the fuel pipe LH, and remove the fuel pipe LH and the fuel injector LH.

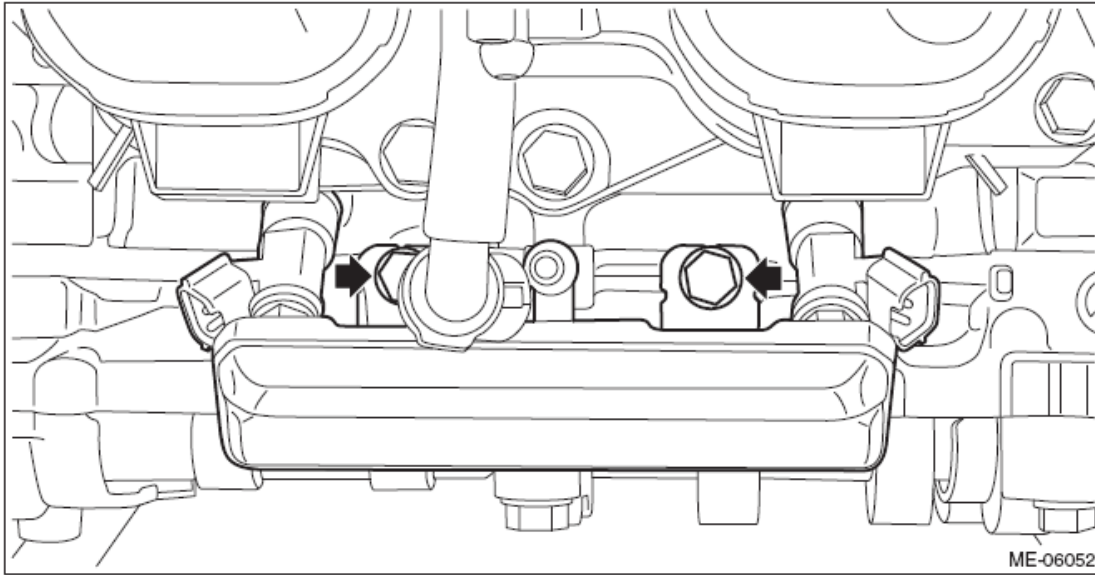


Fig. 364: Locating Fuel Pipe LH Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

10. Insert the steel rods into ST, and set the engine so that the camshaft LH is facing up.

CAUTION:

- If the engine is standing on one side without inserting the steel rod into ST, engine may lose balance and fall down. Be sure to insert the steel rod into ST to extend the length.
- Use the steel rod with enough strength.
- Be careful not to pinch the engine harness with ST.

ST 499817100 ENGINE STAND

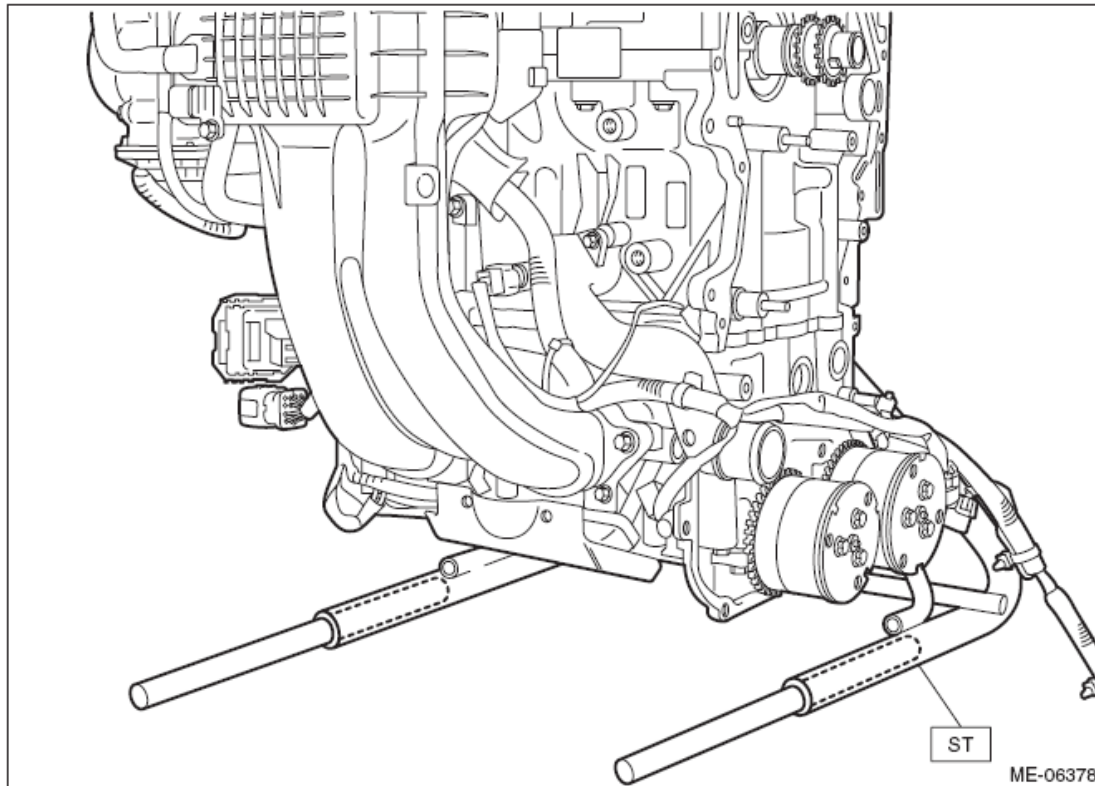


Fig. 365: Inserting Steel Rods Into Engine Stand
 Courtesy of SUBARU OF AMERICA, INC.

11. Loosen the bolts holding the cam carrier LH equally, a little at a time in numerical sequence as shown in the figure and remove the cam carrier LH.

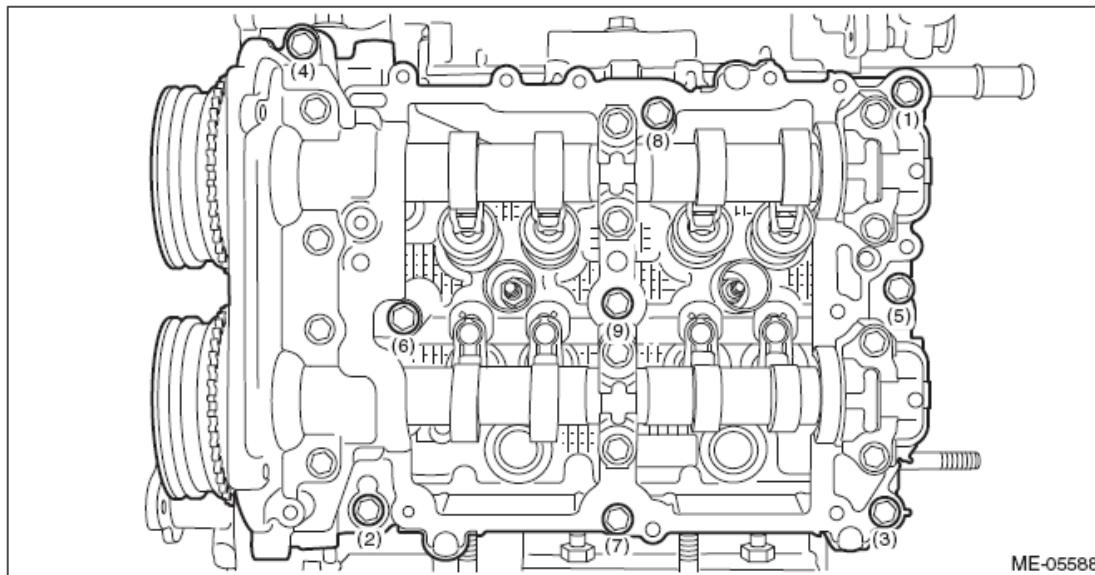


Fig. 366: Identifying Cam Carrier LH Mounting Bolts Loosening Sequence
 Courtesy of SUBARU OF AMERICA, INC.

12. Remove the O-ring and the roller rocker arm from cylinder head LH.

NOTE: Be careful not to confuse the roller rocker arms.

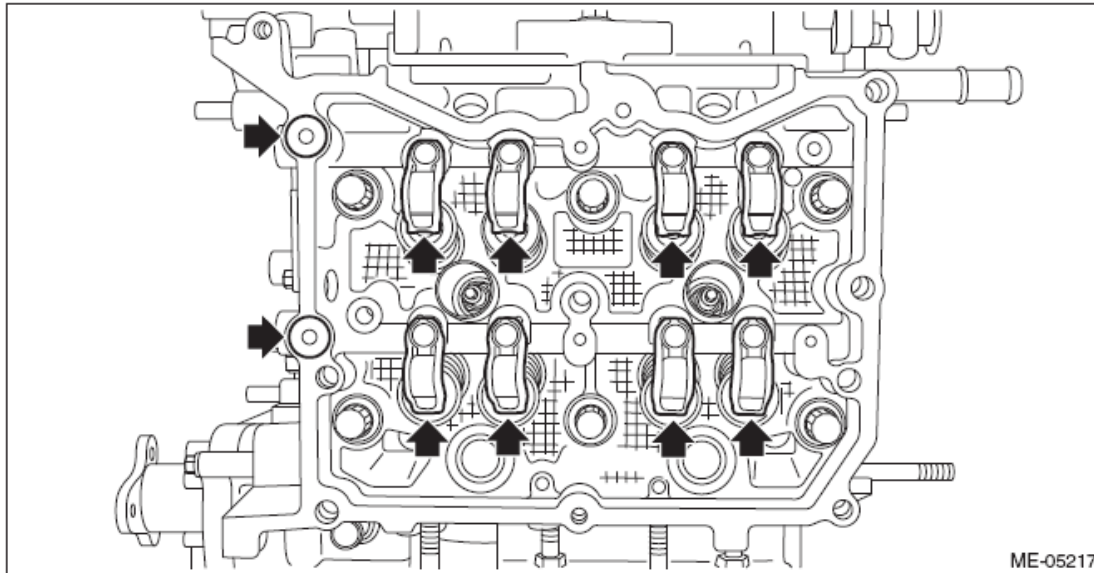


Fig. 367: Locating Cam Carrier Roller Rocker Arm
Courtesy of SUBARU OF AMERICA, INC.

13. Remove the valve shim and the roller rocker arm pivot from cylinder head LH.

NOTE: Be careful not to confuse the valve shim and the roller rocker arm pivot.

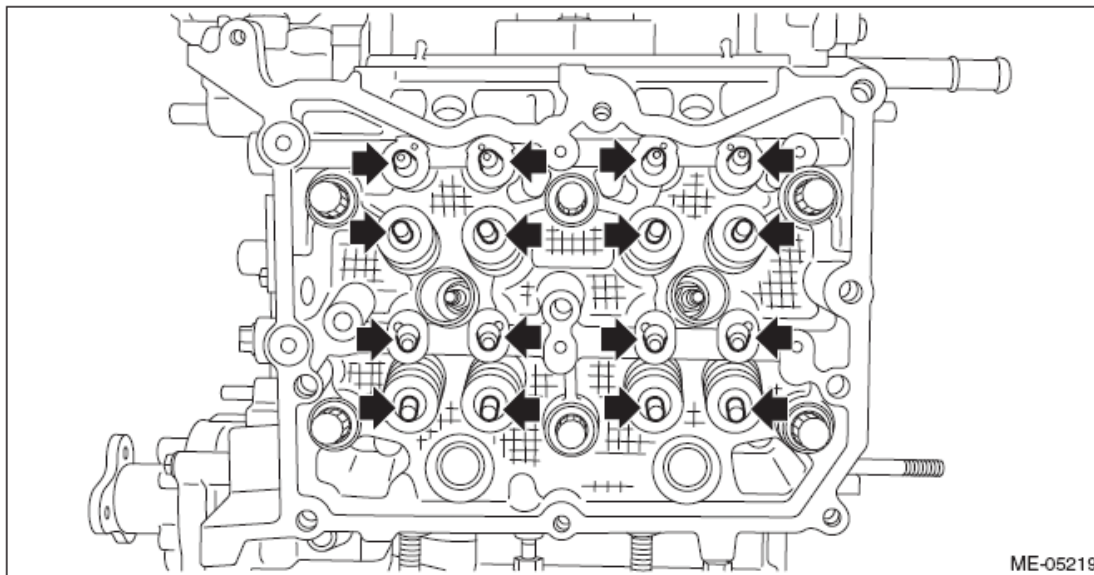


Fig. 368: Locating Cylinder Head LH Valve Shim
Courtesy of SUBARU OF AMERICA, INC.

14. Remove the liquid gasket from cam carrier LH and cylinder head LH.

INSTALLATION

CAM CARRIER RH

1. Insert the steel rods into ST, and set the engine so that the camshaft RH is facing up.

CAUTION:

- If the engine is standing on one side without inserting the steel rod into ST, engine may lose balance and fall down. Be sure to insert the steel rod into ST to extend the length.
- Use the steel rod with enough strength.
- Be careful not to pinch the engine harness with ST.

ST 499817100 ENGINE STAND

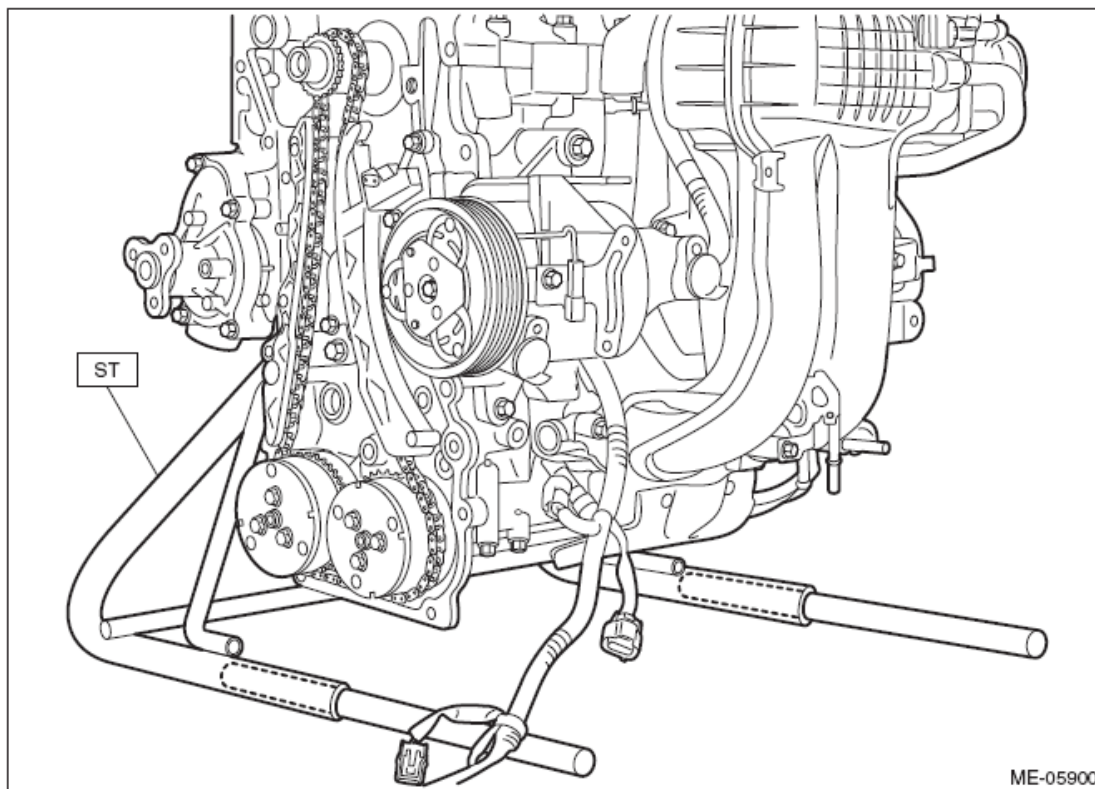


Fig. 369: Inserting Steel Rods Into Engine Stand
Courtesy of SUBARU OF AMERICA, INC.

2. Apply engine oil to the valve shim and the roller rocker arm pivot, and install the valve shim and the roller rocker arm pivot to the cylinder head RH.

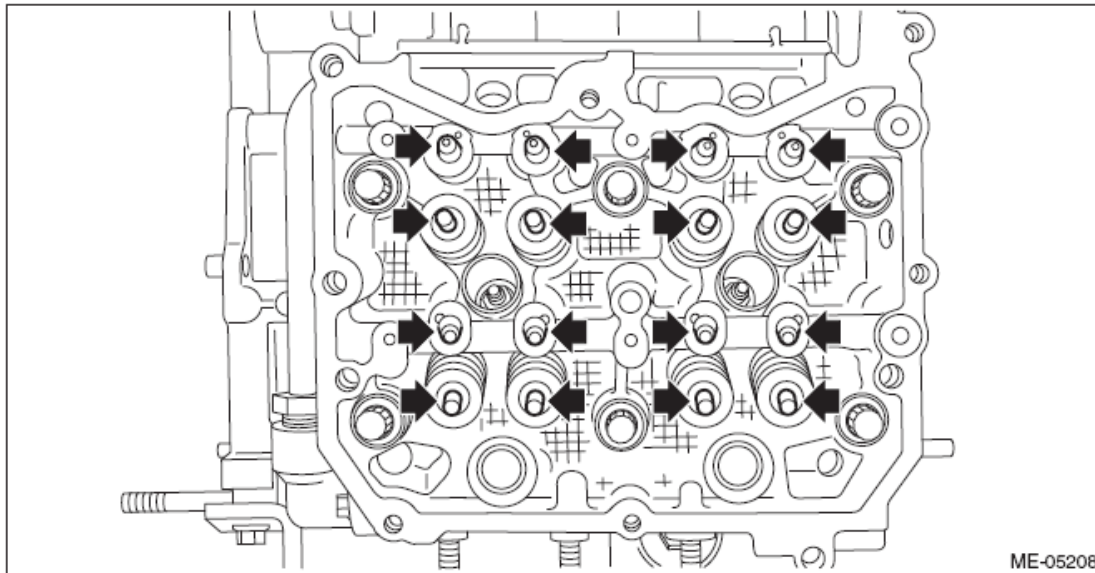


Fig. 370: Locating Cylinder Head RH Valve Shim
Courtesy of SUBARU OF AMERICA, INC.

3. Apply engine oil to the O-ring and the roller rocker arm, and install the O-ring and the roller rocker arm to the cylinder head RH.

NOTE: Use new O-rings.

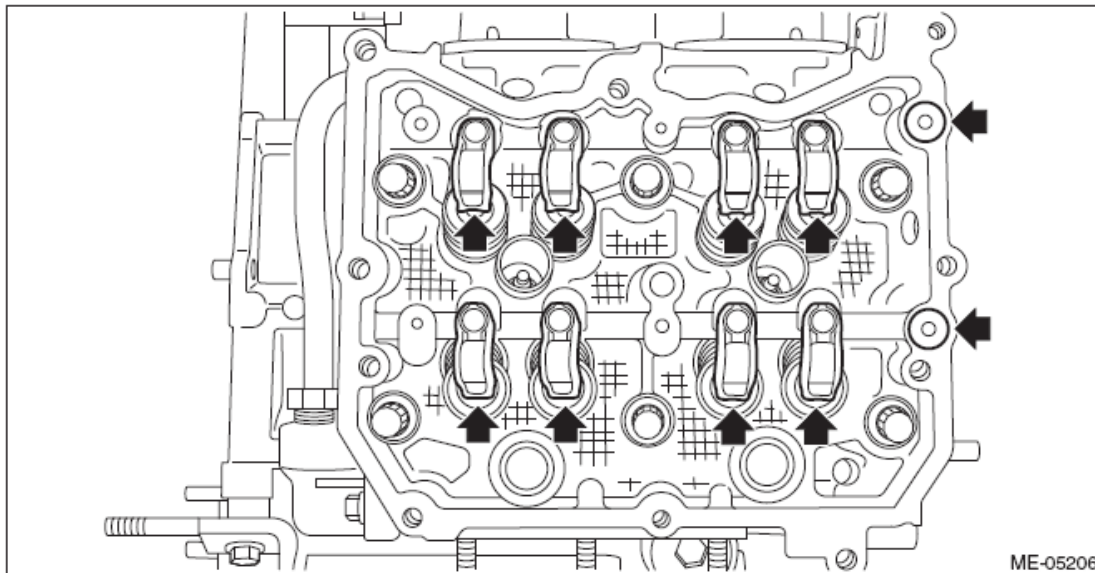


Fig. 371: Locating Roller Rocker Arm On Cylinder Head RH
Courtesy of SUBARU OF AMERICA, INC.

4. Apply liquid gasket to the mating surface of cam carrier RH as shown in the figure.

NOTE:


- Before applying liquid gasket, degrease the old liquid gasket seal surface of the cylinder head RH and cam carrier RH.
- Install within 5 min. after applying liquid gasket.

Liquid gasket:

THREE BOND 1217G (Part No. 0877Y0100) or equivalent

Liquid gasket applying diameter:

3 ± 0.5 mm (0.1181 ± 0.0197 in)

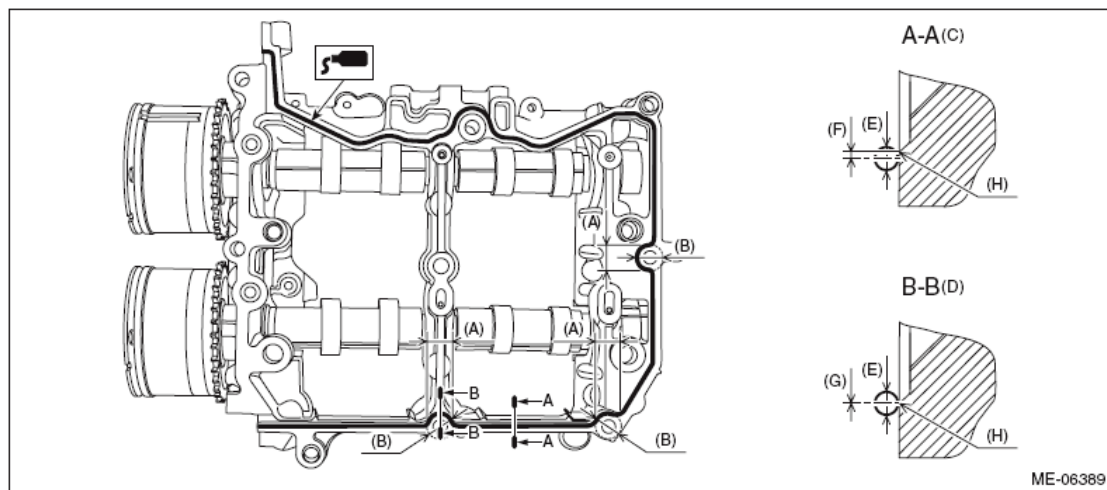

- | | | |
|---|---|-------------------------------------|
| (A) Range A | (D) Liquid gasket applying position of mating surfaces of range A | (G) 0 ± 0.5 mm (0 ± 0.0197 in) |
| (B) $\phi 18$ mm (0.7087 in) | (E) $\phi 3\pm0.5$ mm (0.1181 ± 0.0197 in) | (H) Chamfer edge |
| (C) Liquid gasket applying position of mating surfaces other than range A | (F) 1 mm (0.0394 in) or less | |

Fig. 372: Identifying Liquid Gasket Applying Area On Cam Carrier RH
 Courtesy of SUBARU OF AMERICA, INC.

5. Install the cam carrier RH to the cylinder head RH.

1. Mount the cam carrier RH, then tighten all bolts with a torque of 18 N.m (1.8 kgf-m, 13.3 ft-lb) in numerical order as shown in the figure.

NOTE:

Set the intake camshaft RH and the exhaust camshaft RH to the zero-lift position.

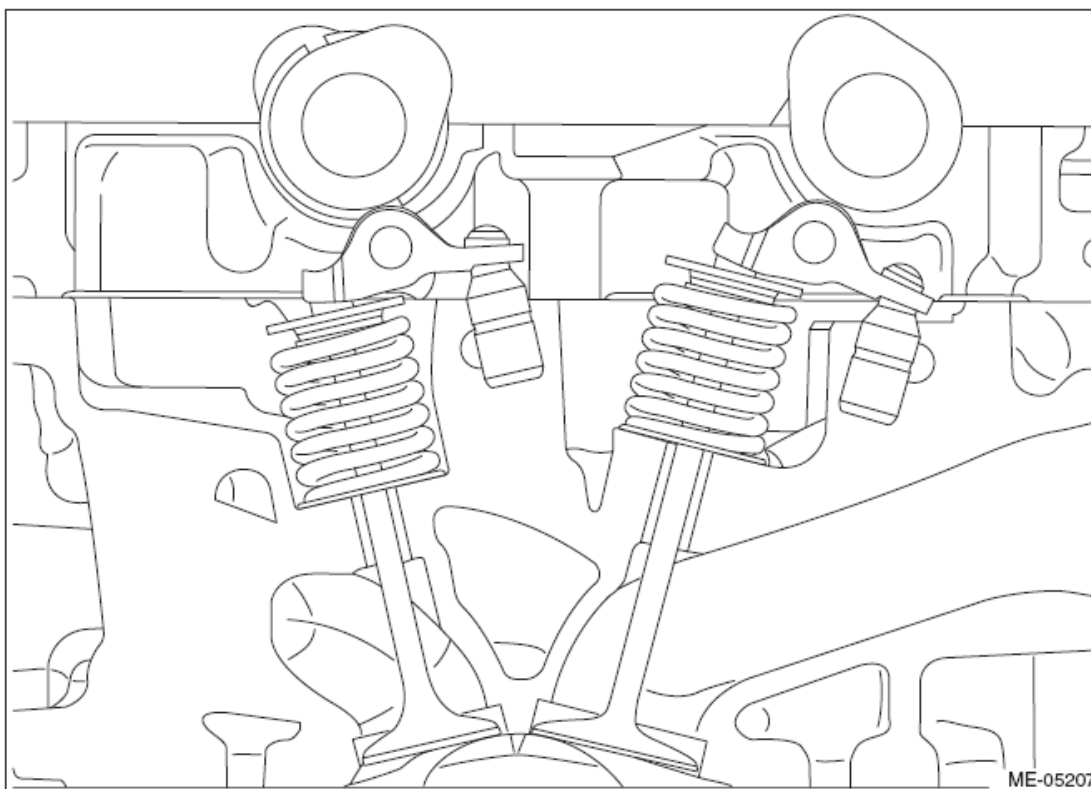


Fig. 373: Identifying Cam Carrier RH Assembly
Courtesy of SUBARU OF AMERICA, INC.

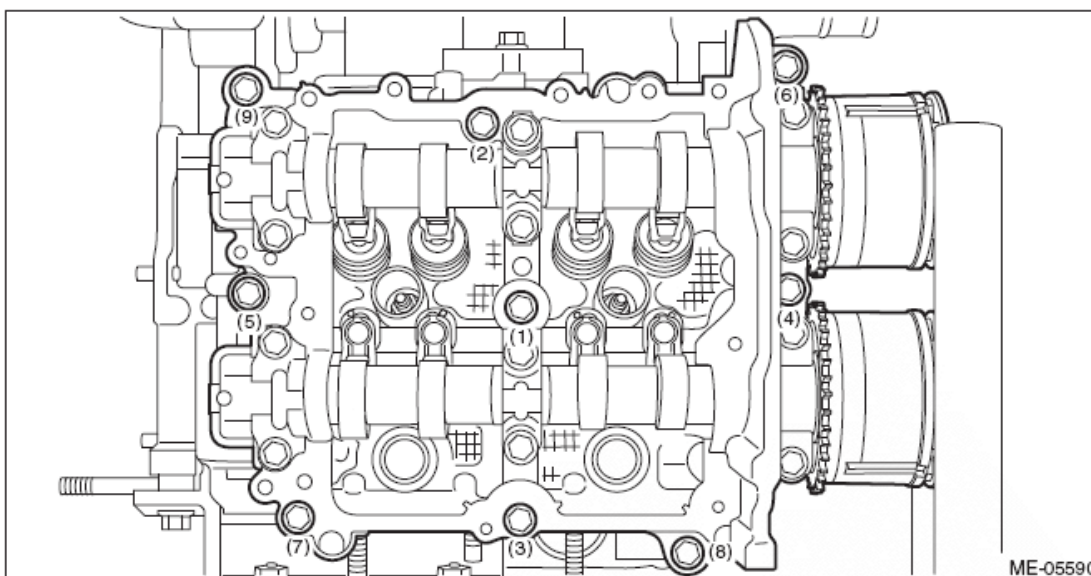


Fig. 374: Identifying Cam Carrier RH Mounting Bolts Tightening Sequence
Courtesy of SUBARU OF AMERICA, INC.

2. Loosen the bolts (3 places) by 180° in numerical order as shown in the figure.

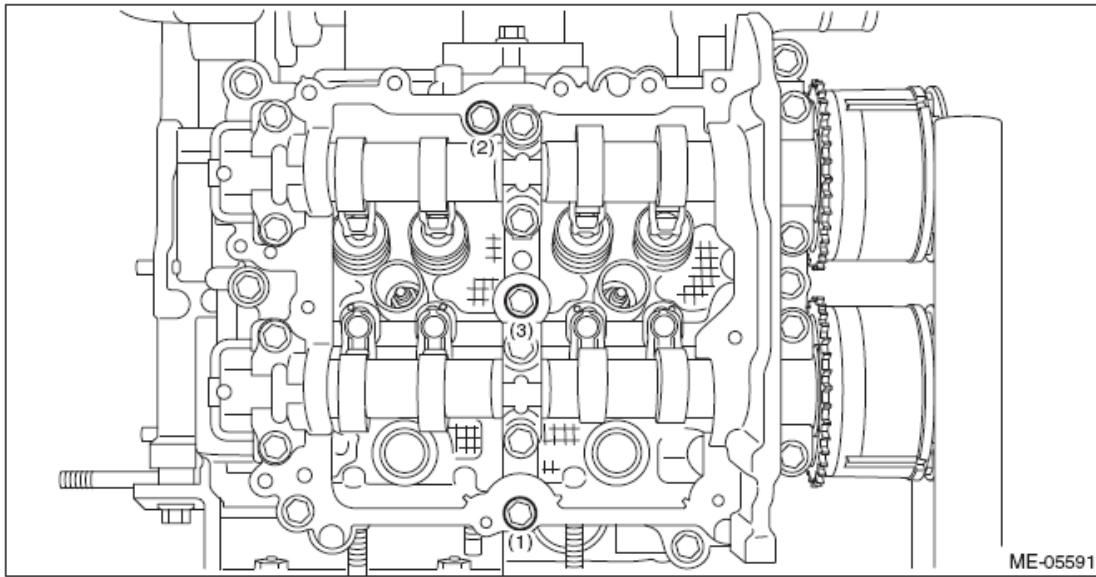


Fig. 375: Identifying Cam Carrier Mounting Bolts Loosening Sequence
Courtesy of SUBARU OF AMERICA, INC.

3. Tighten the bolts (3 places) with a torque of 18 N.m (1.8 kgf-m, 13.3 ft-lb) in numerical order as shown in the figure.

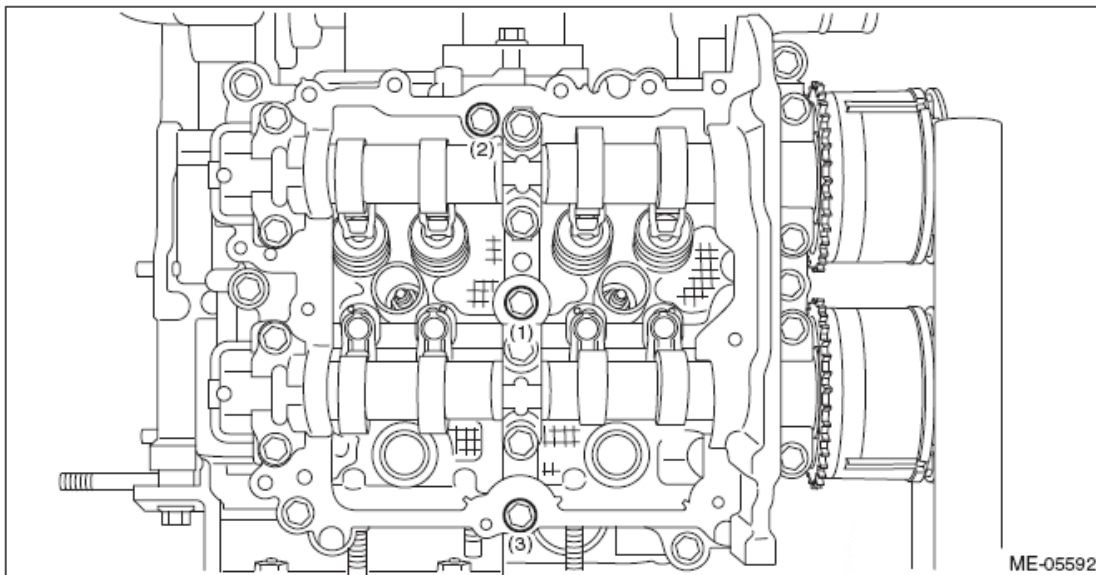


Fig. 376: Identifying Cam Carrier Mounting Bolts Tightening Sequence
Courtesy of SUBARU OF AMERICA, INC.

4. Loosen the bolts (3 places) by 180° in numerical order as shown in the figure.

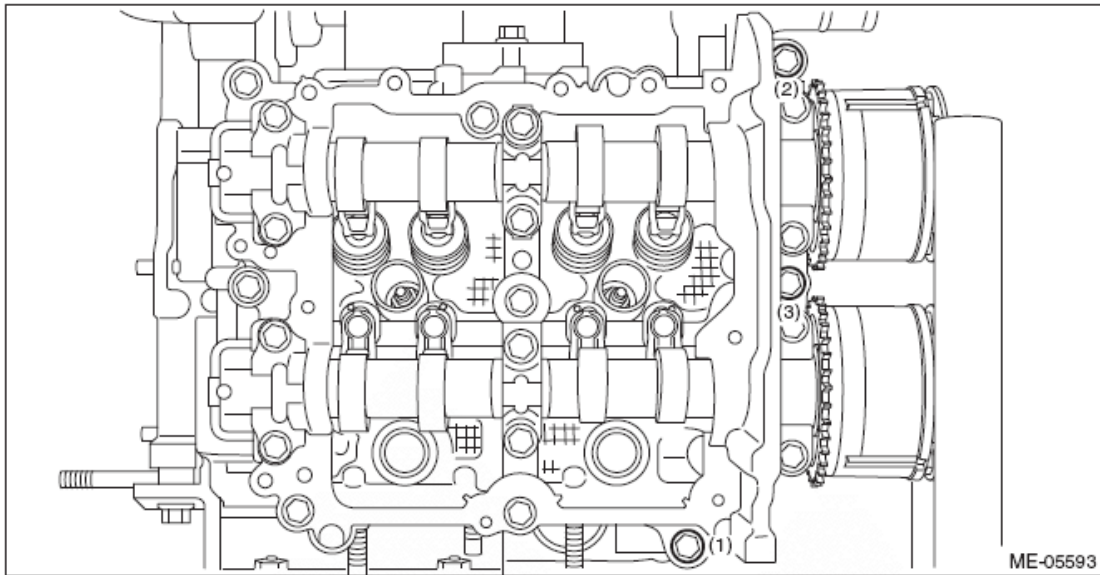


Fig. 377: Identifying Cam Carrier Mounting Bolts Loosening Sequence
Courtesy of SUBARU OF AMERICA, INC.

5. Tighten the bolts (3 places) with a torque of 18 N.m (1.8 kgf-m, 13.3 ft-lb) in numerical order as shown in the figure.

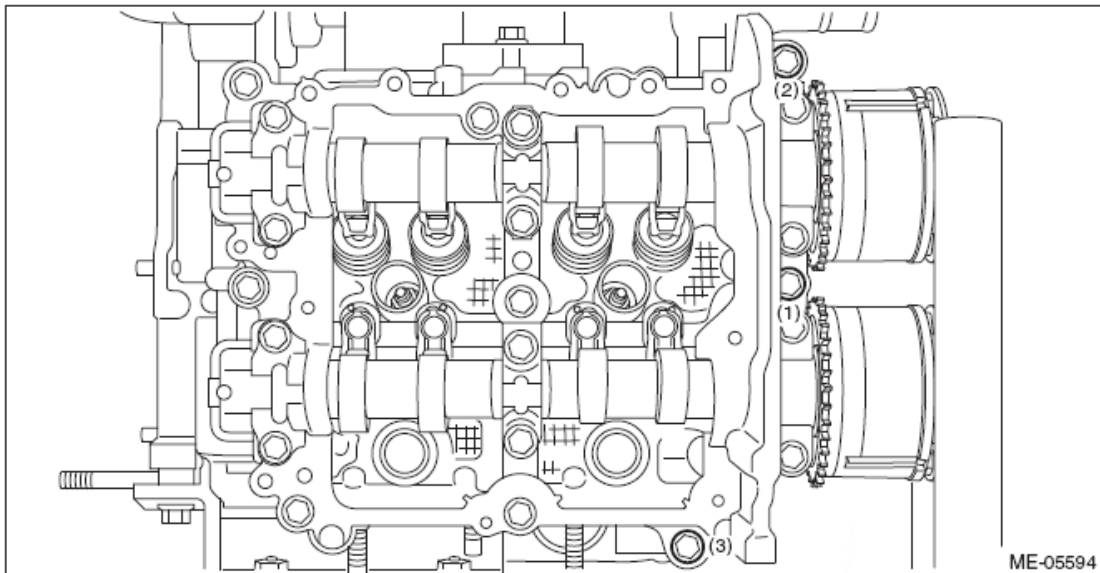


Fig. 378: Identifying Cam Carrier Mounting Bolts Tightening Sequence
Courtesy of SUBARU OF AMERICA, INC.

6. Loosen the bolts (3 places) by 180° in numerical order as shown in the figure.

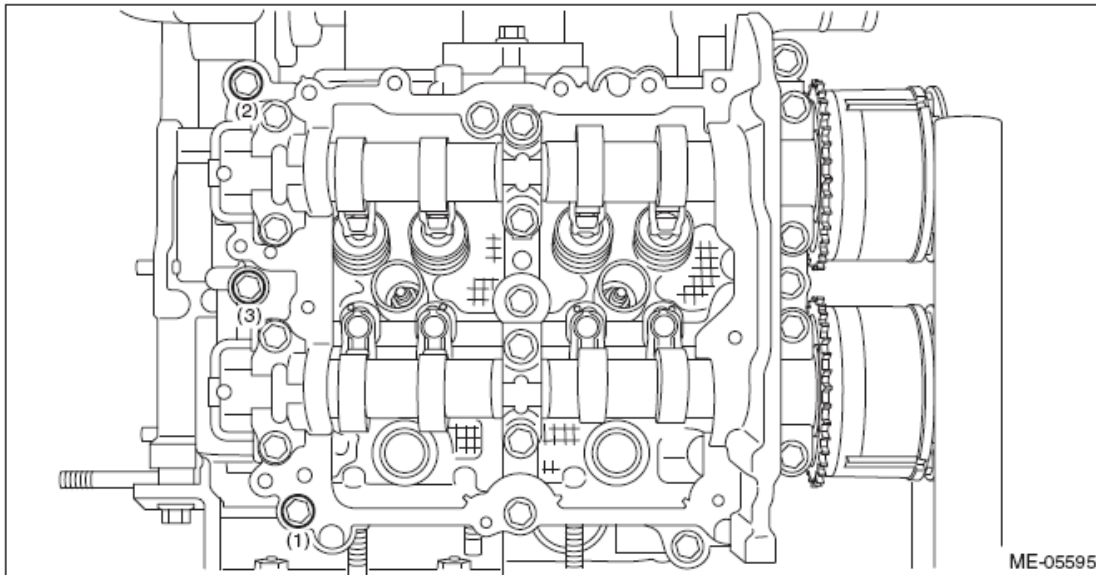


Fig. 379: Identifying Cam Carrier Mounting Bolts Loosening Sequence
Courtesy of SUBARU OF AMERICA, INC.

7. Tighten the bolts (3 places) with a torque of 18 N.m (1.8 kgf-m, 13.3 ft-lb) in numerical order as shown in the figure.

NOTE: After tightening, if the liquid gasket is squeezed out onto the seal surface of the chain cover, completely remove any squeezed-out liquid gasket.

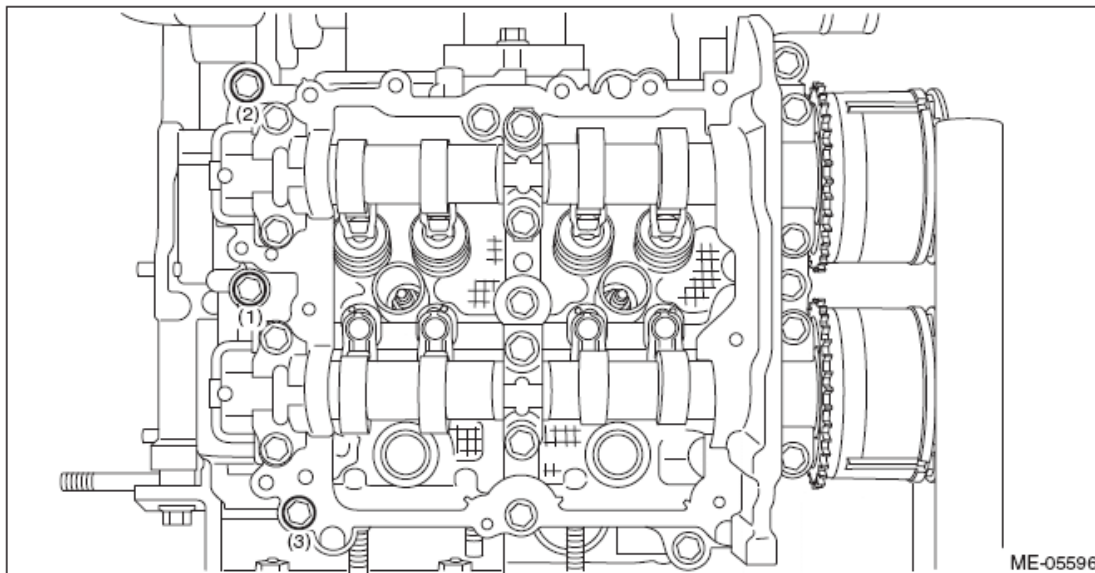


Fig. 380: Identifying Cam Carrier Mounting Bolts Tightening Sequence
Courtesy of SUBARU OF AMERICA, INC.

6. Set the part so that the intake manifold is on the upper side.

7. Install the cam sprocket RH. < Ref. to CAM SPROCKET RH, INSTALLATION, Cam Sprocket.>

NOTE: This procedure is required only when the cam carrier RH is removed for disassembly.

8. Check the cam clearance. < Ref. to WHEN TIMING CHAIN ASSEMBLY IS REMOVED, INSPECTION, Cam Clearance.>
9. Install the timing chain RH. < Ref. to TIMING CHAIN RH, INSTALLATION, Timing Chain Assembly.>
10. Install the fuel pipe RH and the fuel injector RH.
1. Install the fuel pipe RH and the fuel injector RH, and install the bolts which secure the fuel pipe RH.

NOTE:

- Use new O-rings, rubbers, seal rings, and fuel injector holder.
- Refer to "Fuel Injector" for removal and installation procedure of fuel injector holder. < Ref. to REMOVAL , Fuel Injector.> < Ref. to INSTALLATION , Fuel Injector.>

Tightening torque:

6.4 N.m (0.7 kgf-m, 4.7 ft-lb)

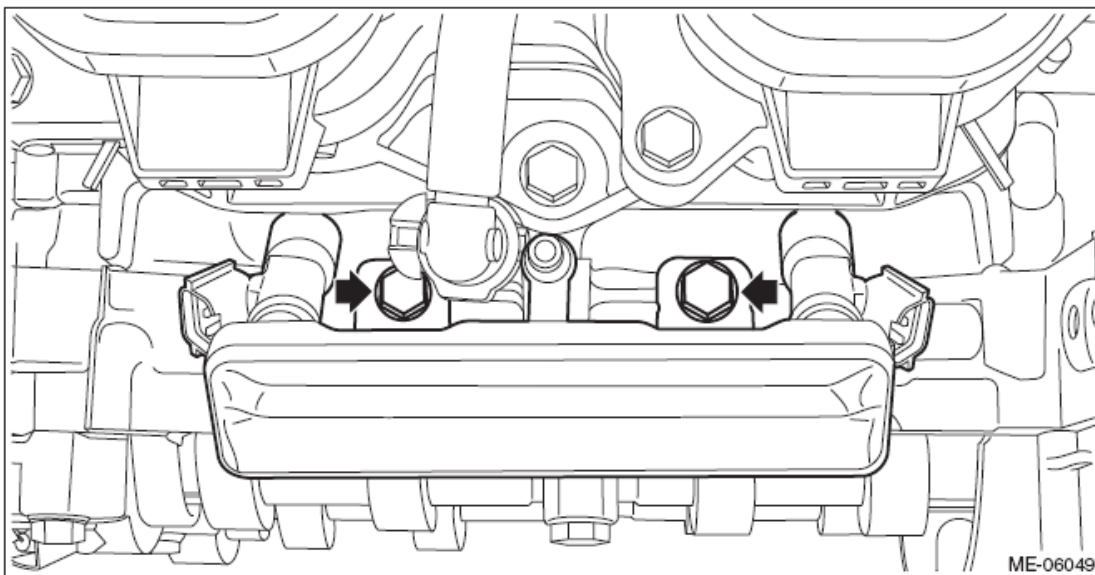


Fig. 381: Locating Fuel Injector And Pipe RH Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.


2. Connect the quick connector to the fuel pipe RH.

CAUTION: • Check that there is no damage or dust on the quick

connector. If necessary, clean the seal surface of the pipe.

- When connecting the quick connector, make sure to insert the pipe all the way in before locking the slider.
- When it is difficult to lock the slider, check that the pipe is fully inserted.
- Make sure that the quick connector is securely connected.

NOTE: Connect the quick connector as shown in the figure.

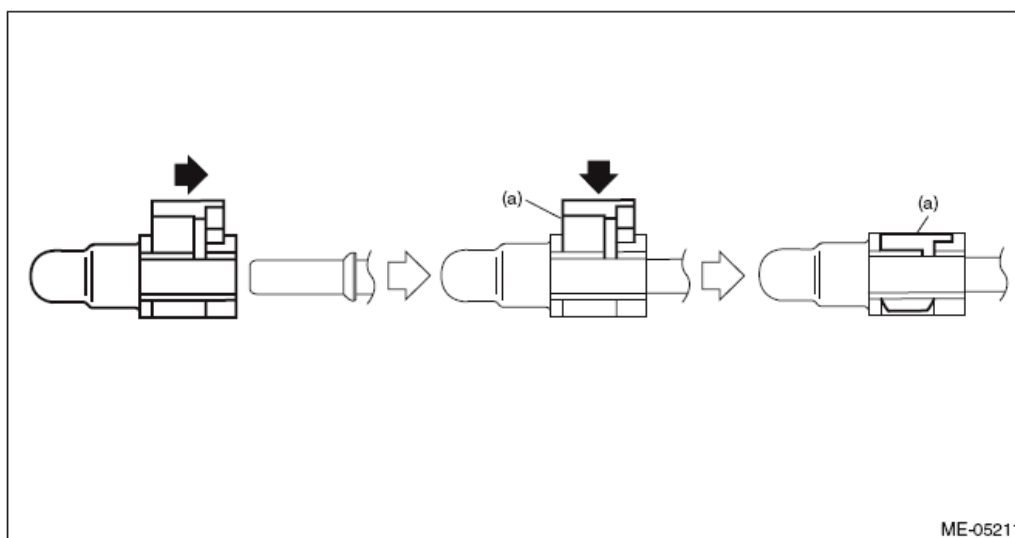

(a) Slider

Fig. 382: Connecting Quick Connector
Courtesy of SUBARU OF AMERICA, INC.

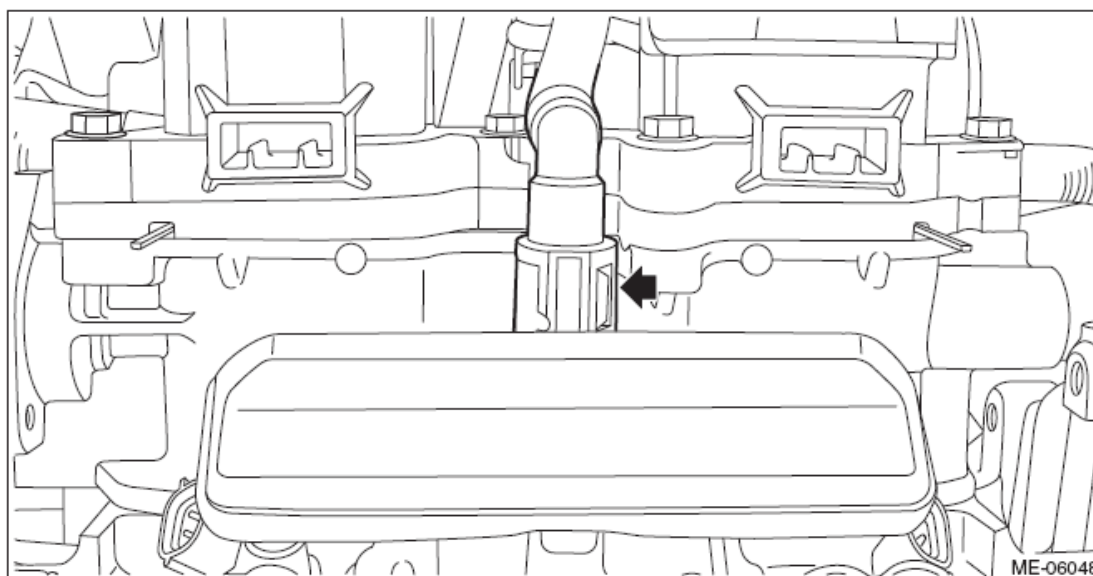


Fig. 383: Locating Quick Connector Slider
Courtesy of SUBARU OF AMERICA, INC.

3. Connect the connectors to the fuel injector RH.

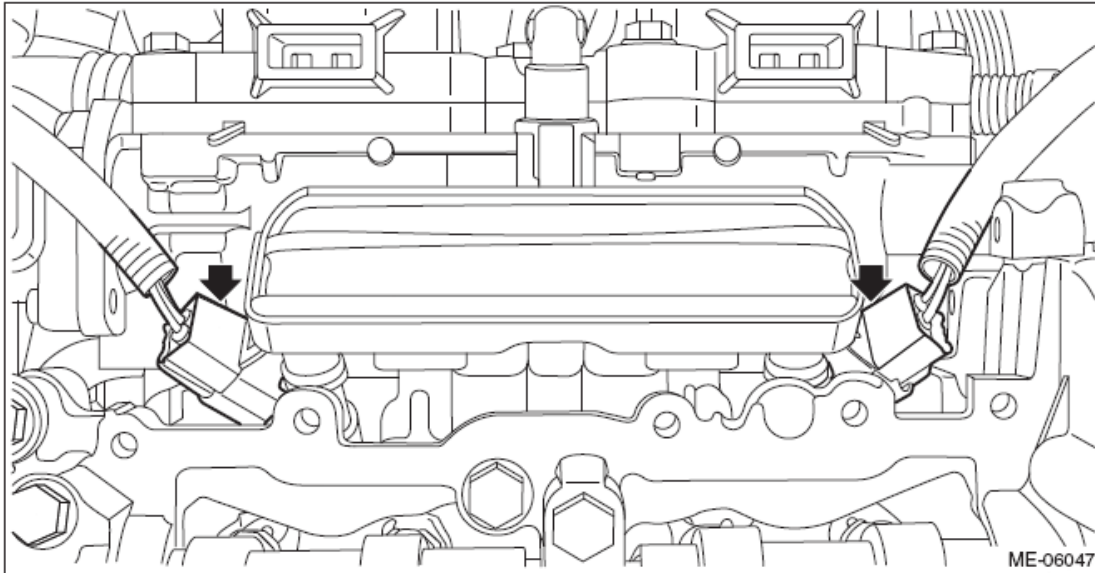


Fig. 384: Locating Fuel Injector RH Connector
Courtesy of SUBARU OF AMERICA, INC.

11. Connect the water pipe hose to the oil pan upper, and install the water pipe assembly RH. (CVT model)

Tightening torque:

6.4 N.m (0.7 kgf-m, 4.7 ft-lb)

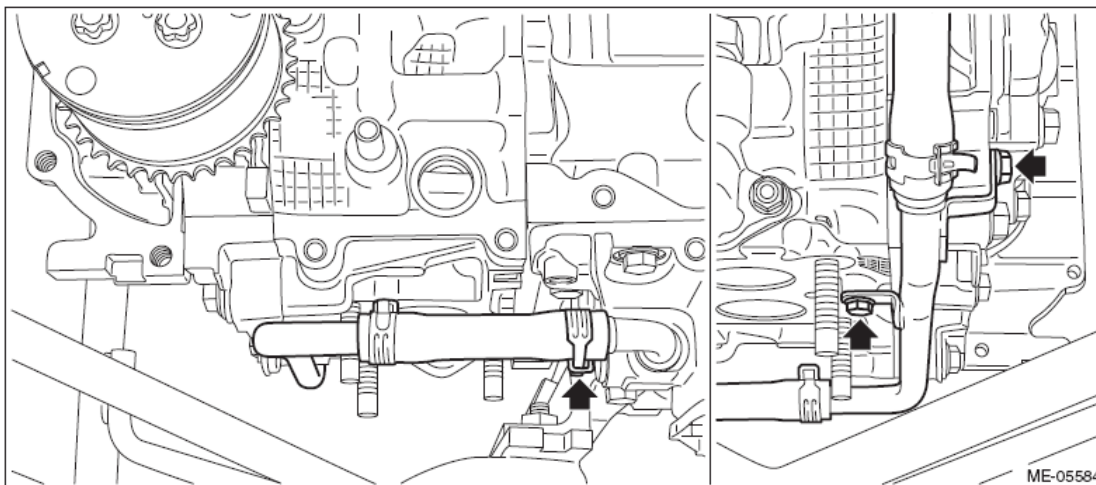


Fig. 385: Locating Water Pipe Hose To Oil Pan Upper Clip And Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

12. Connect the engine coolant inlet hose to the EGR cooler. (HEV model)

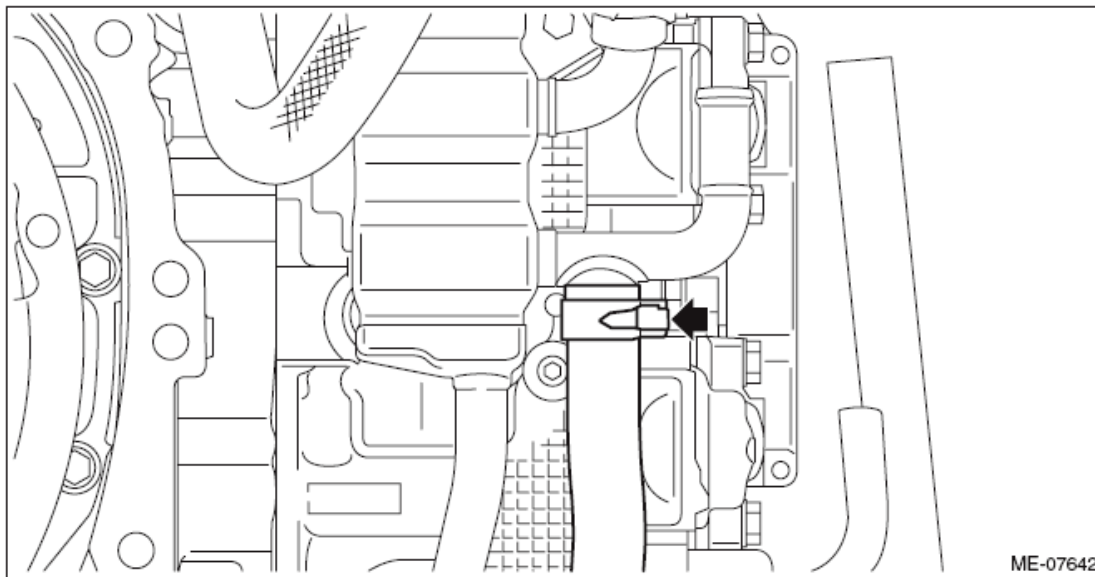


Fig. 386: Locating Engine Coolant Inlet Hose To EGR Cooler Clamp
Courtesy of SUBARU OF AMERICA, INC.

13. Secure the engine harness to the cam carrier RH with a clip.

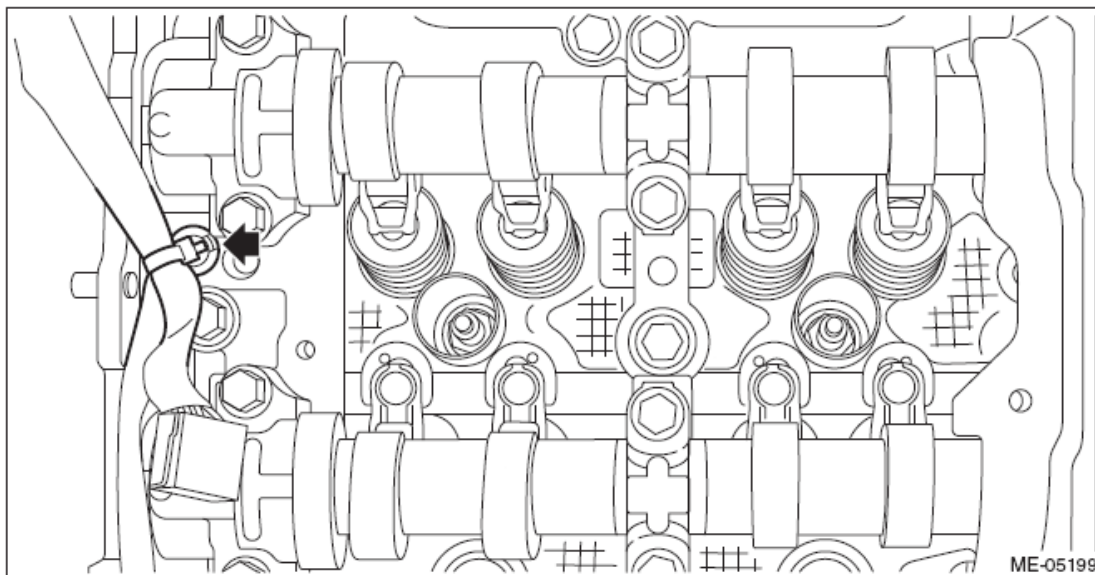


Fig. 387: Locating Engine Harness To Cam Carrier RH Clip
Courtesy of SUBARU OF AMERICA, INC.

14. Install the rocker cover RH. < Ref. to **ROCKER COVER RH**, INSTALLATION, Rocker Cover.>
15. Install the chain cover. < Ref. to **INSTALLATION**, Chain Cover.>
16. Install the engine to the vehicle. < Ref. to **INSTALLATION**, Engine Assembly.>

CAM CARRIER LH

1. Insert the steel rods into ST, and set the engine so that the camshaft LH is facing up.

CAUTION:

- If the engine is standing on one side without inserting the steel rod into ST, engine may lose balance and fall down. Be sure to insert the steel rod into ST to extend the length.
- Use the steel rod with enough strength.
- Be careful not to pinch the engine harness with ST.

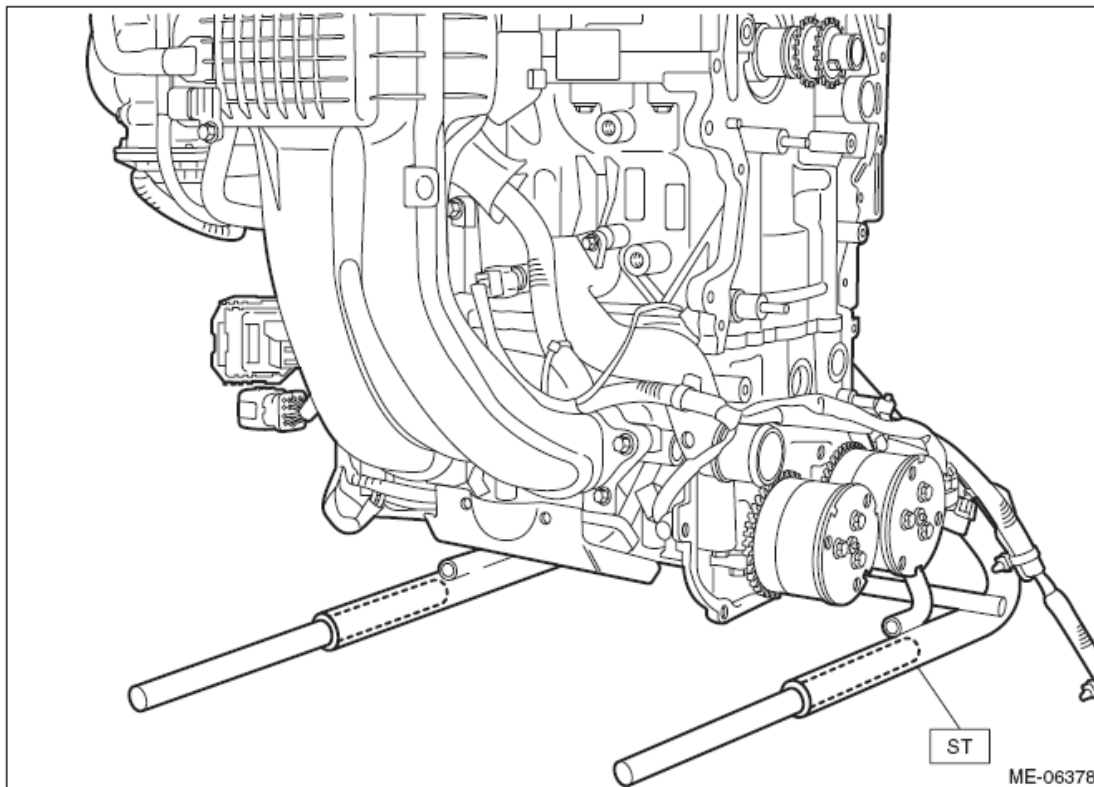
ST 499817100 ENGINE STAND

Fig. 388: Inserting Steel Rods Into Engine Stand
Courtesy of SUBARU OF AMERICA, INC.

2. Apply engine oil to the valve shim and the roller rocker arm pivot, and install the valve shim and the roller rocker arm pivot to the cylinder head LH.

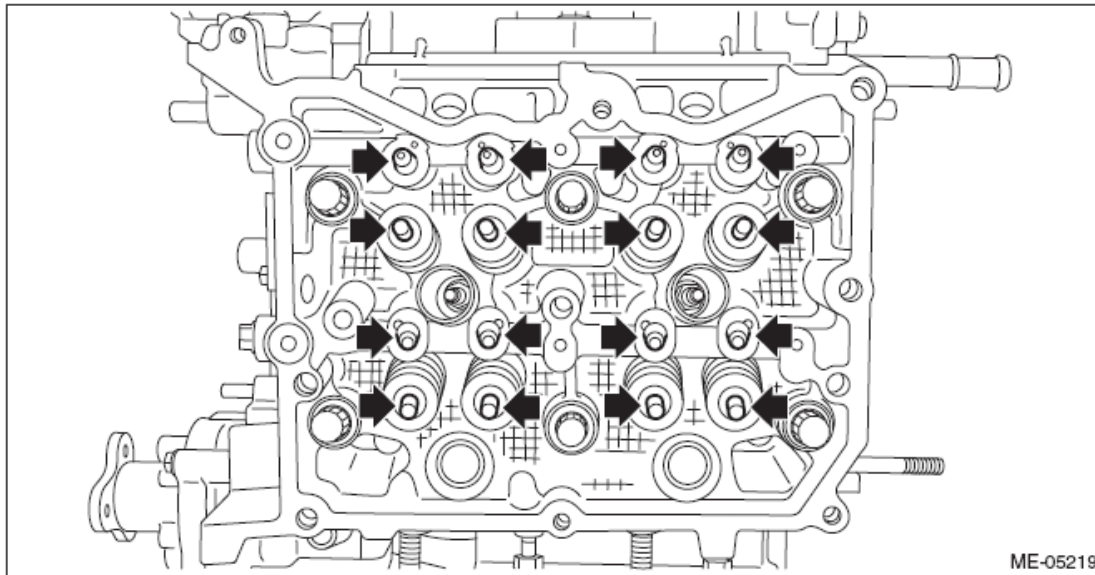


Fig. 389: Locating Cylinder Head LH Valve Shim
 Courtesy of SUBARU OF AMERICA, INC.

3. Apply engine oil to the O-ring and the roller rocker arm, and install the O-ring and the roller rocker arm to the cylinder head LH.

NOTE: **Use new O-rings.**

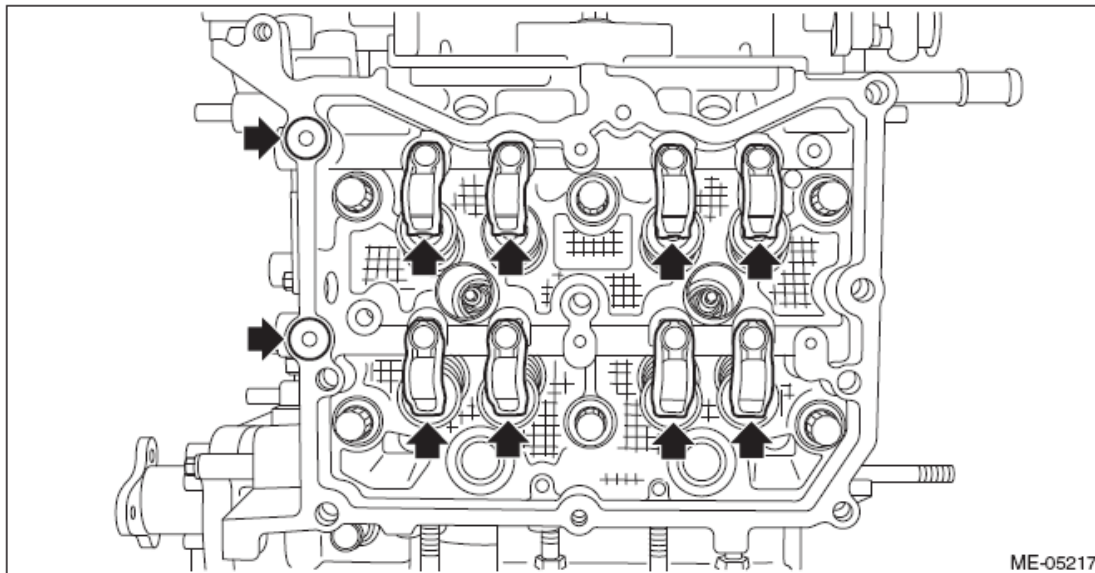


Fig. 390: Locating Cam Carrier Roller Rocker Arm
 Courtesy of SUBARU OF AMERICA, INC.

4. Apply liquid gasket to the mating surface of cam carrier LH as shown in the figure.

NOTE:


- Before applying liquid gasket, degrease the old liquid gasket seal surface of the cylinder head LH and cam carrier LH.
- Install within 5 min. after applying liquid gasket.

Liquid gasket:

THREE BOND 1217G (Part No. 0877Y0100) or equivalent

Liquid gasket applying diameter:

3 ± 0.5 mm (0.1181 ± 0.0197 in)

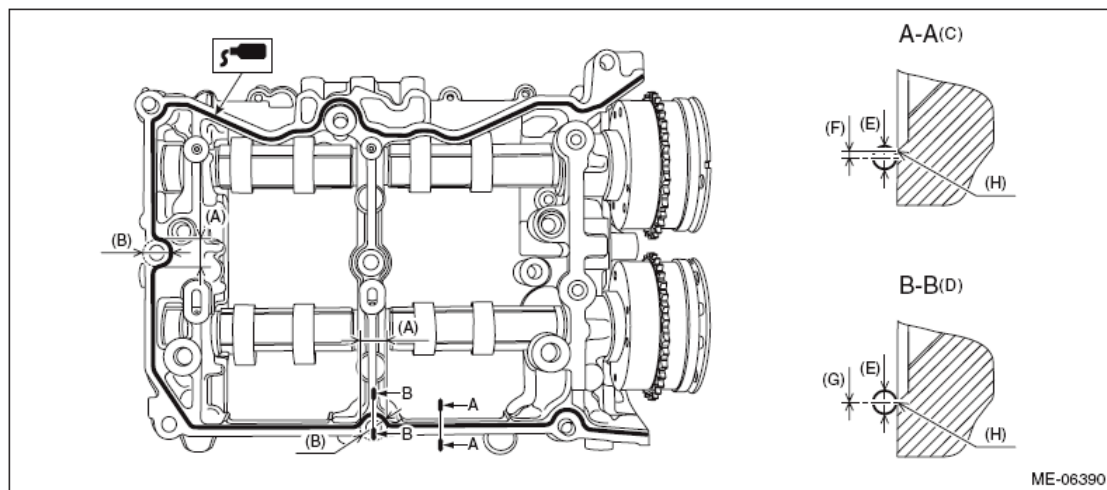

- | | | |
|---|---|-------------------------------------|
| (A) Range A | (D) Liquid gasket applying position of mating surfaces of range A | (G) 0 ± 0.5 mm (0 ± 0.0197 in) |
| (B) $\phi 18$ mm (0.7087 in) | (E) $\phi 3\pm0.5$ mm (0.1181 ± 0.0197 in) | (H) Chamfer edge |
| (C) Liquid gasket applying position of mating surfaces other than range A | (F) 1 mm (0.0394 in) or less | |

Fig. 391: Identifying Liquid Gasket Applying Area On Mating Surface Of Cam Carrier LH
 Courtesy of SUBARU OF AMERICA, INC.

5. Install the cam carrier LH to the cylinder head LH.

1. Mount the cam carrier LH, then tighten all bolts with a torque of 18 N.m (1.8 kgf-m, 13.3 ft-lb) in numerical order as shown in the figure.

NOTE:

Set the intake camshaft LH and the exhaust camshaft LH to the zero-lift position.

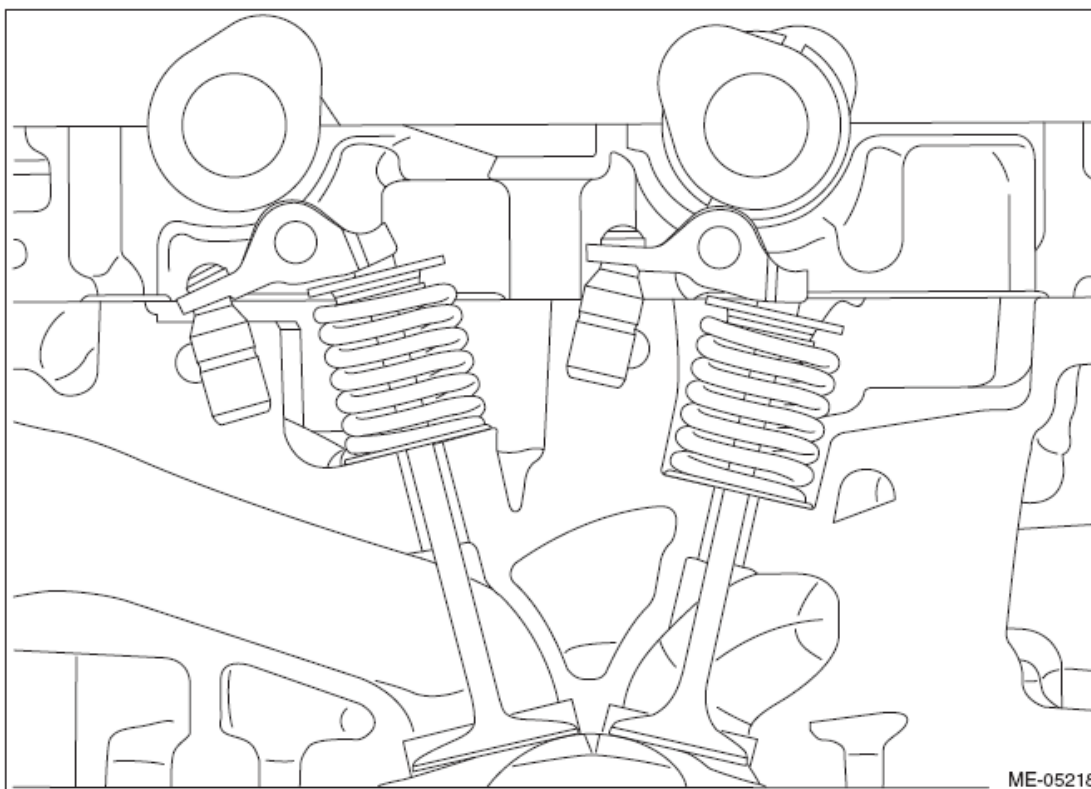


Fig. 392: Identifying Cam Carrier LH Assembly
Courtesy of SUBARU OF AMERICA, INC.

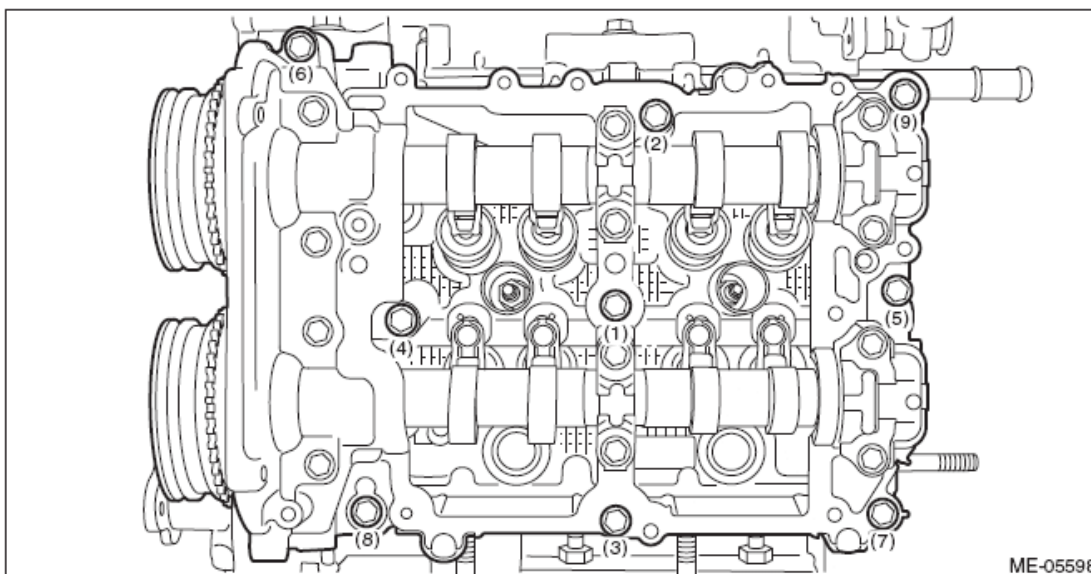


Fig. 393: Identifying Cam Carrier LH Mounting Bolts Tightening Sequence
Courtesy of SUBARU OF AMERICA, INC.

2. Loosen the bolts (3 places) by 180° in numerical order as shown in the figure.

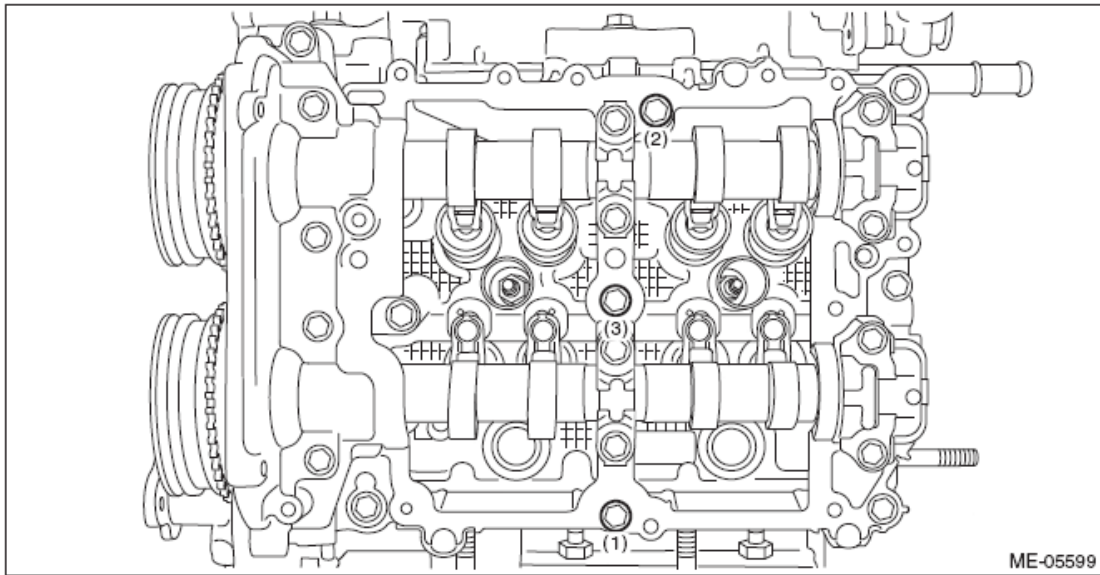


Fig. 394: Identifying Cam Carrier Mounting Bolts Loosening Sequence
Courtesy of SUBARU OF AMERICA, INC.

3. Tighten the bolts (3 places) with a torque of 18 N.m (1.8 kgf-m, 13.3 ft-lb) in numerical order as shown in the figure.

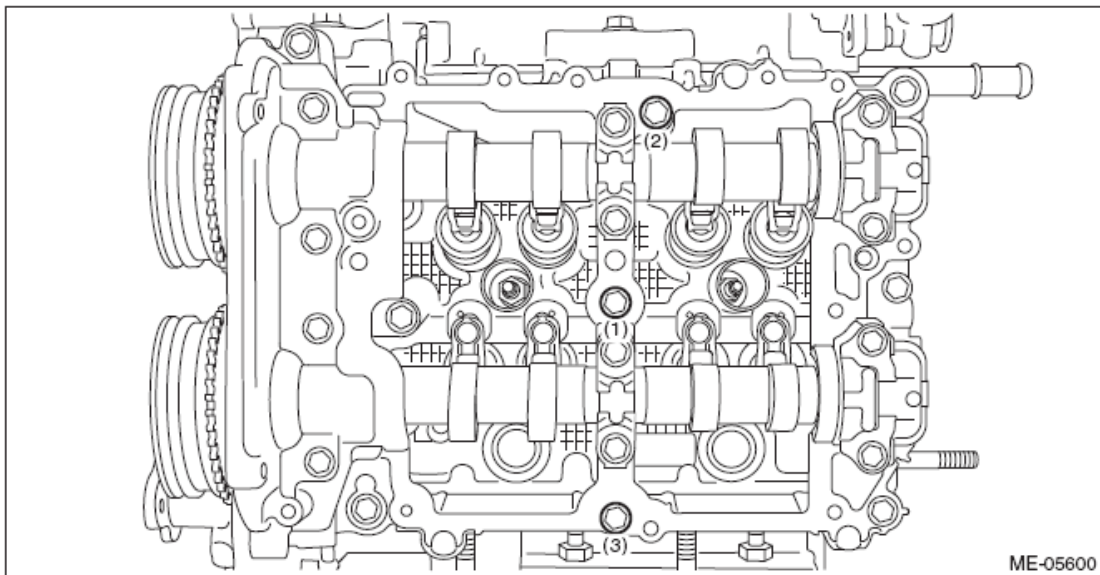


Fig. 395: Identifying Cam Carrier Mounting Bolts Tightening Sequence
Courtesy of SUBARU OF AMERICA, INC.

4. Loosen the bolts (3 places) by 180° in numerical order as shown in the figure.

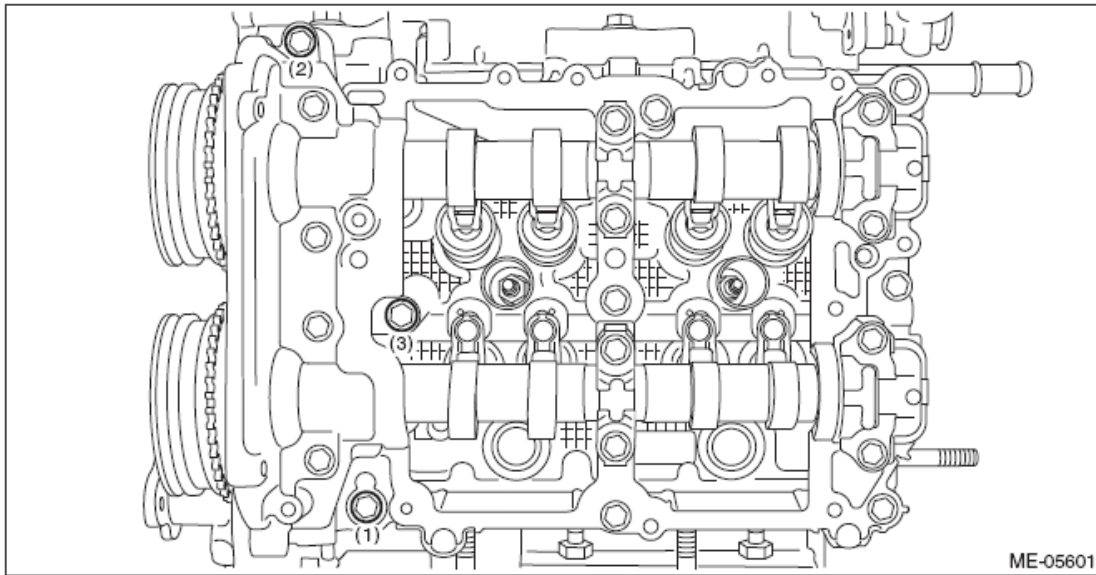


Fig. 396: Identifying Cam Carrier Mounting Bolts Loosening Sequence
Courtesy of SUBARU OF AMERICA, INC.

5. Tighten the bolts (3 places) with a torque of 18 N.m (1.8 kgf-m, 13.3 ft-lb) in numerical order as shown in the figure.

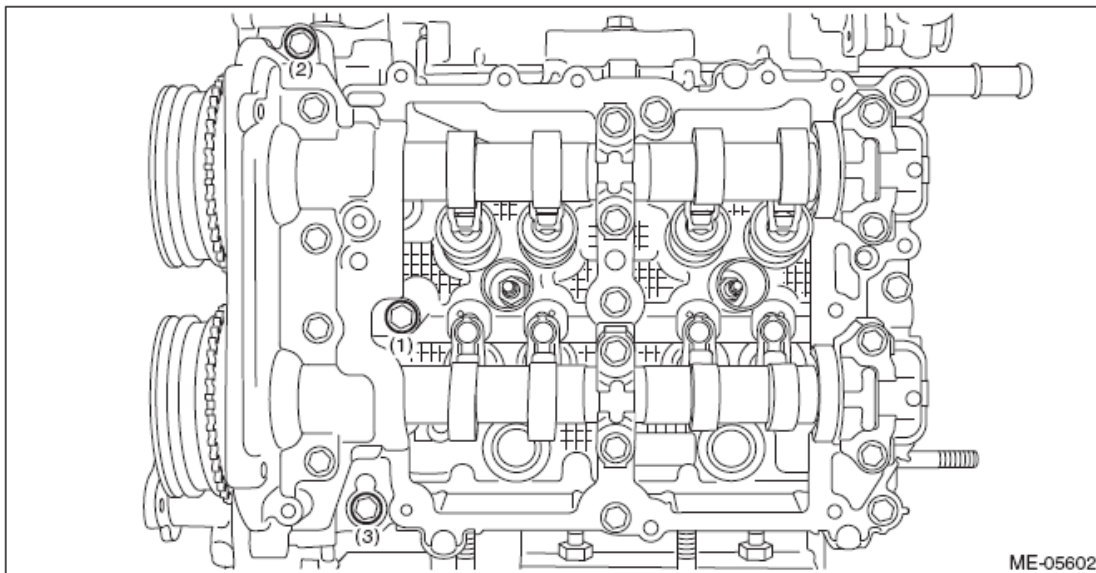


Fig. 397: Identifying Cam Carrier Mounting Bolts Tightening Sequence
Courtesy of SUBARU OF AMERICA, INC.

6. Loosen the bolts (3 places) by 180° in numerical order as shown in the figure.

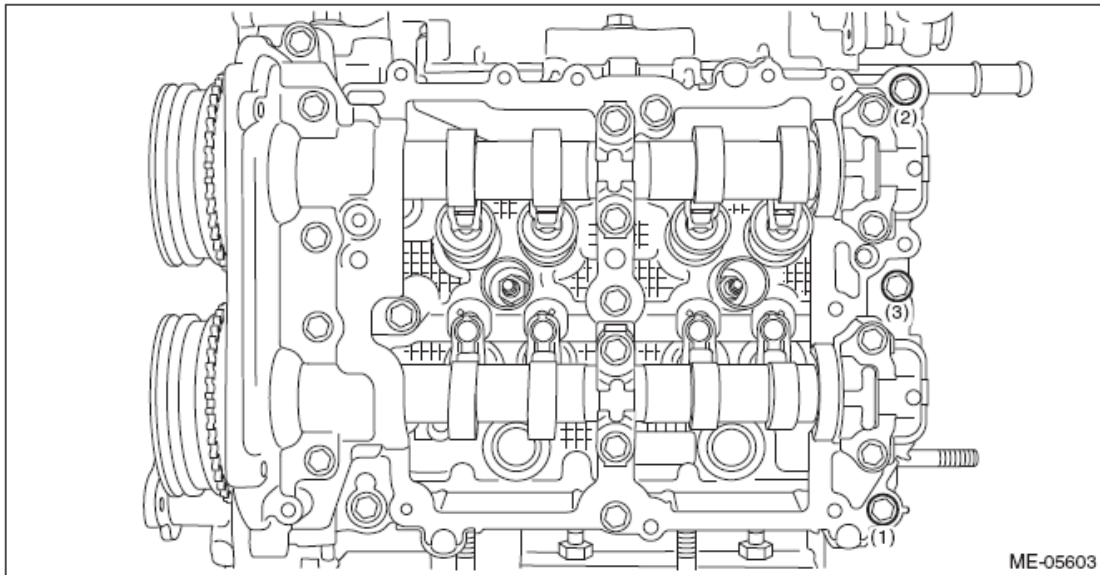


Fig. 398: Identifying Cam Carrier Mounting Bolts Loosening Sequence
Courtesy of SUBARU OF AMERICA, INC.

7. Tighten the bolts (3 places) with a torque of 18 N.m (1.8 kgf-m, 13.3 ft-lb) in numerical order as shown in the figure.

NOTE: After tightening, if the liquid gasket is squeezed out onto the seal surface of the chain cover, completely remove any squeezed-out liquid gasket.

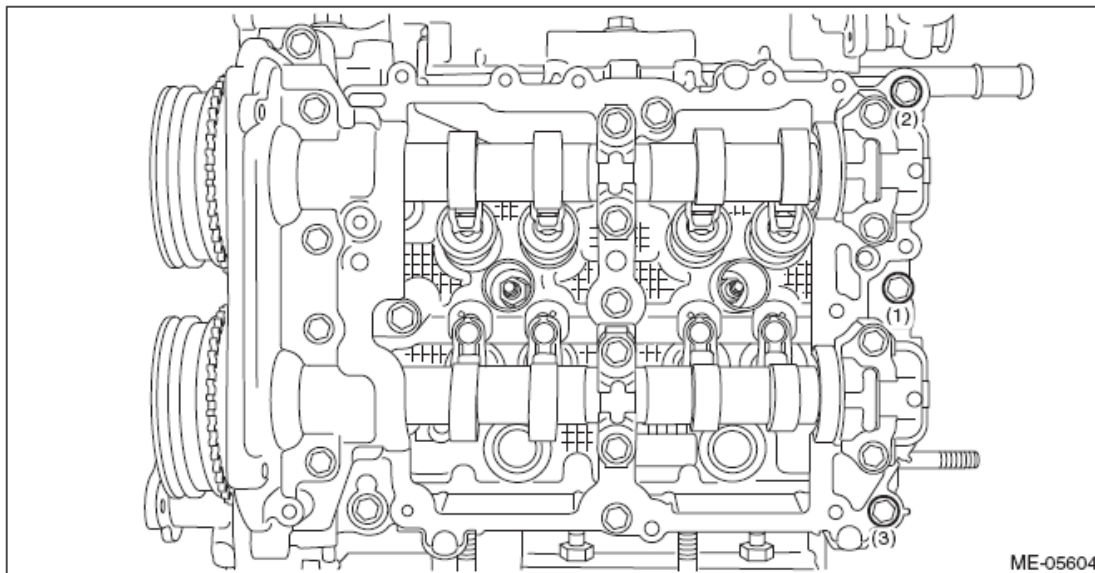


Fig. 399: Identifying Cam Carrier Mounting Bolts Tightening Sequence
Courtesy of SUBARU OF AMERICA, INC.

6. Set the part so that the intake manifold is on the upper side.

7. Install the cam sprocket LH. < Ref. to CAM SPROCKET LH, INSTALLATION, Cam Sprocket.>

NOTE: This procedure is required only when the cam carrier LH is removed for disassembly.

8. Check the cam clearance. < Ref. to WHEN TIMING CHAIN ASSEMBLY IS REMOVED, INSPECTION, Cam Clearance.>
9. Install timing chain LH. < Ref. to TIMING CHAIN LH, INSTALLATION, Timing Chain Assembly.>
10. Install the fuel pipe LH and the fuel injector LH.
1. Install the fuel pipe LH and the fuel injector LH, and install the bolts which secure the fuel pipe LH.
 - Use new O-rings, rubbers, seal rings, and fuel injector holder.
 - Refer to "Fuel Injector" for removal and installation procedure of fuel injector holder. < Ref. to REMOVAL , Fuel Injector.> < Ref. to INSTALLATION , Fuel Injector.>

Tightening torque:

6.4 N.m (0.7 kgf-m, 4.7 ft-lb)

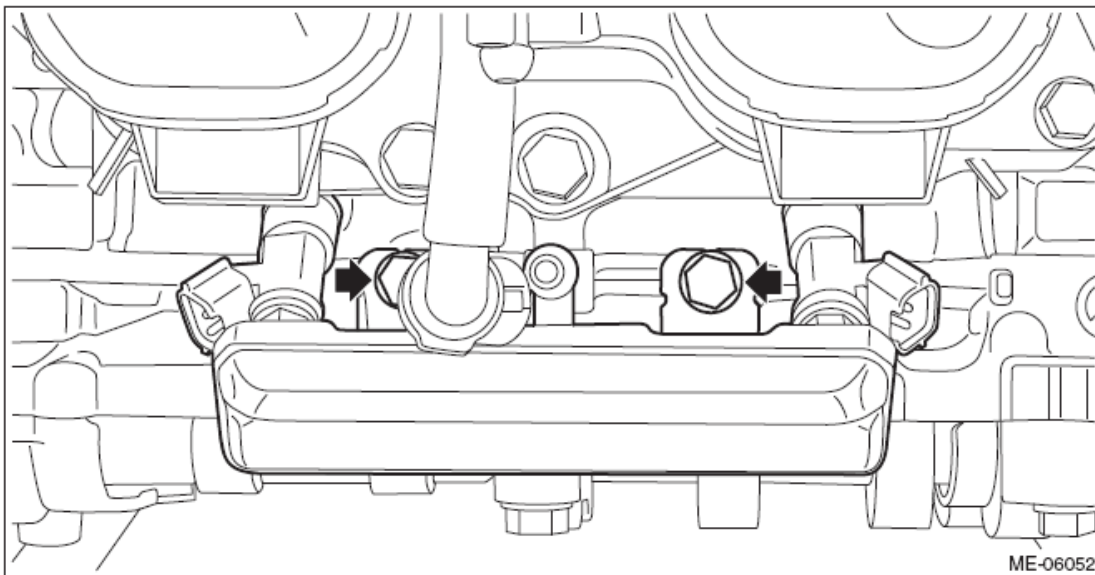


Fig. 400: Locating Fuel Pipe And Fuel Injector LH Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.


2. Connect the quick connector to the fuel pipe LH.

CAUTION:

- Check that there is no damage or dust on the quick connector. If necessary, clean the seal surface of the pipe.
- When connecting the quick connector, make sure to insert the pipe all the way in before locking the slider.

- When it is difficult to lock the slider, check that the pipe is fully inserted.
- Make sure that the quick connector is securely connected.

NOTE: Connect the quick connector as shown in the figure.

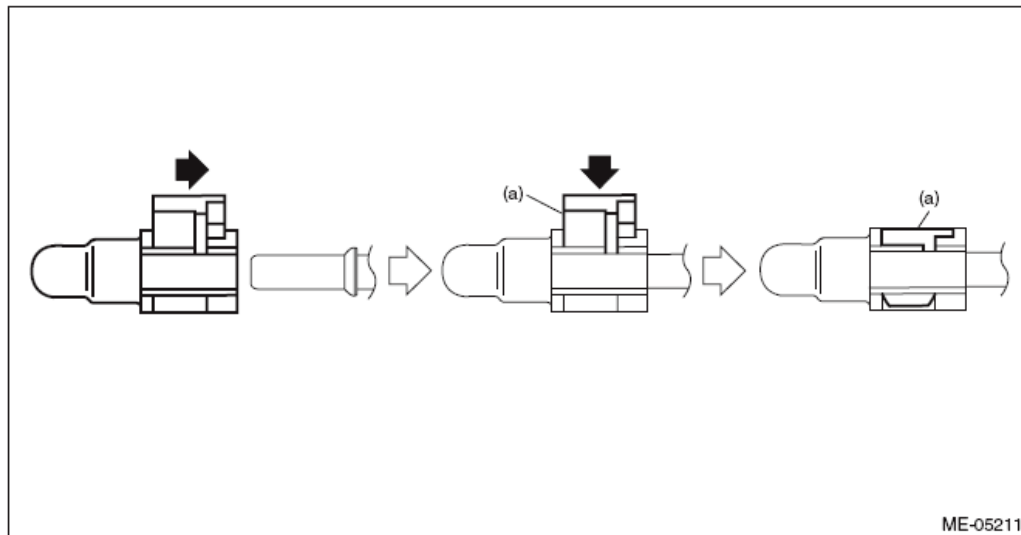

(a) Slider

Fig. 401: Connecting Quick Connector
Courtesy of SUBARU OF AMERICA, INC.

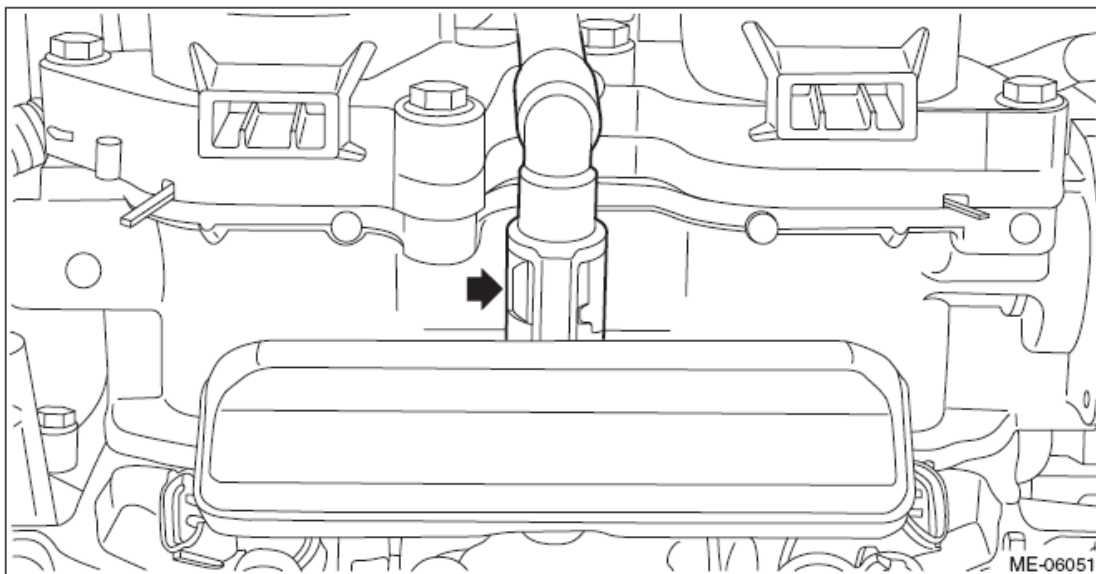


Fig. 402: Locking Quick Connector Slider
Courtesy of SUBARU OF AMERICA, INC.

3. Connect the connectors to the fuel injector LH.

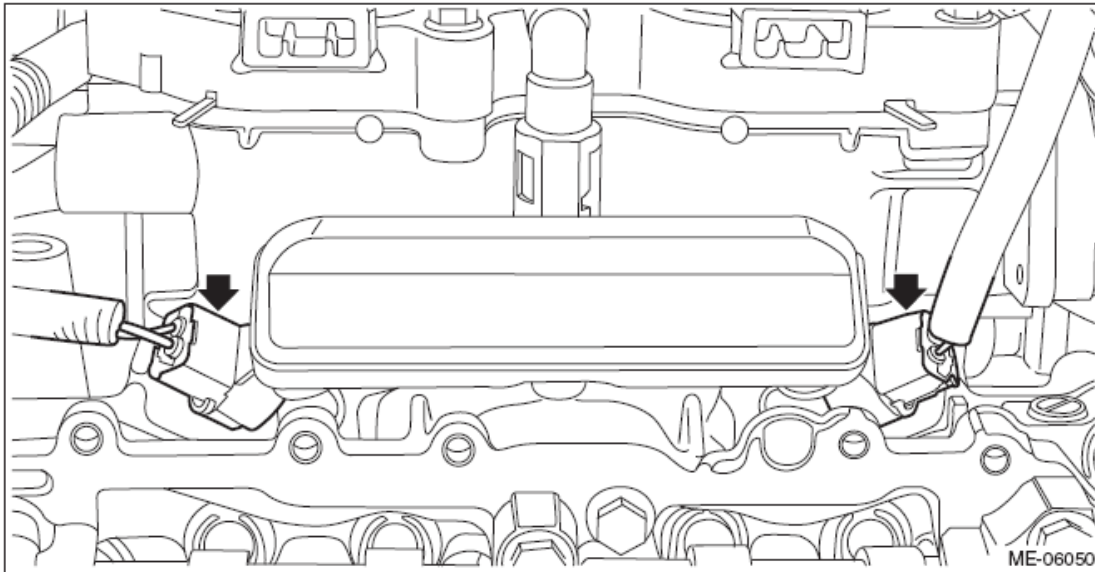


Fig. 403: Locating Fuel Injector Connectors (LH)
Courtesy of SUBARU OF AMERICA, INC.

11. Connect the water pipe hose (B) to the oil pan upper, and install the water pipe assembly LH.

Tightening torque:

6.4 N.m (0.7 kgf-m, 4.7 ft-lb)

12. Connect the preheater hose (A) to the water pipe assembly LH.

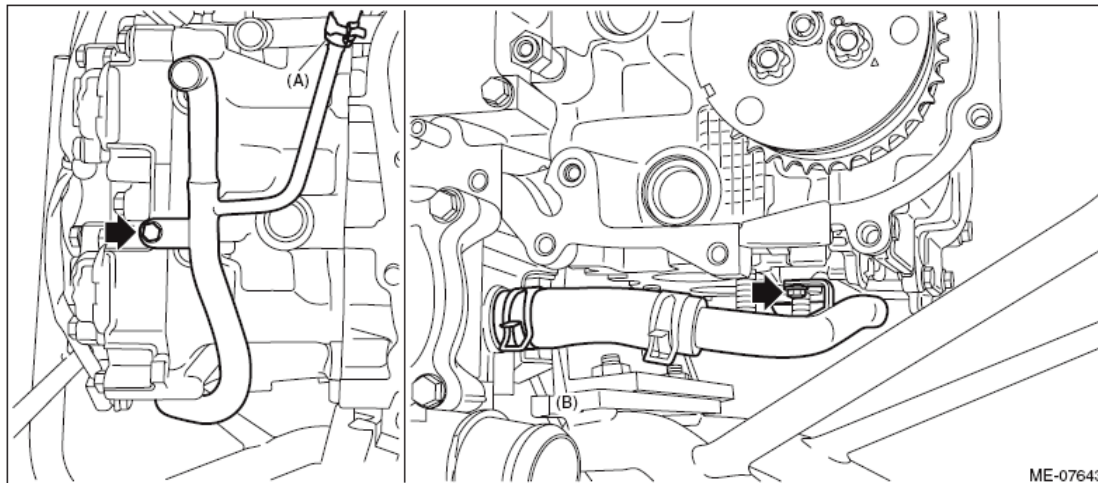


Fig. 404: Locating Preheater Hose And Water Pipe Hose
Courtesy of SUBARU OF AMERICA, INC.

13. Secure the engine harness to the cam carrier LH with a clip.

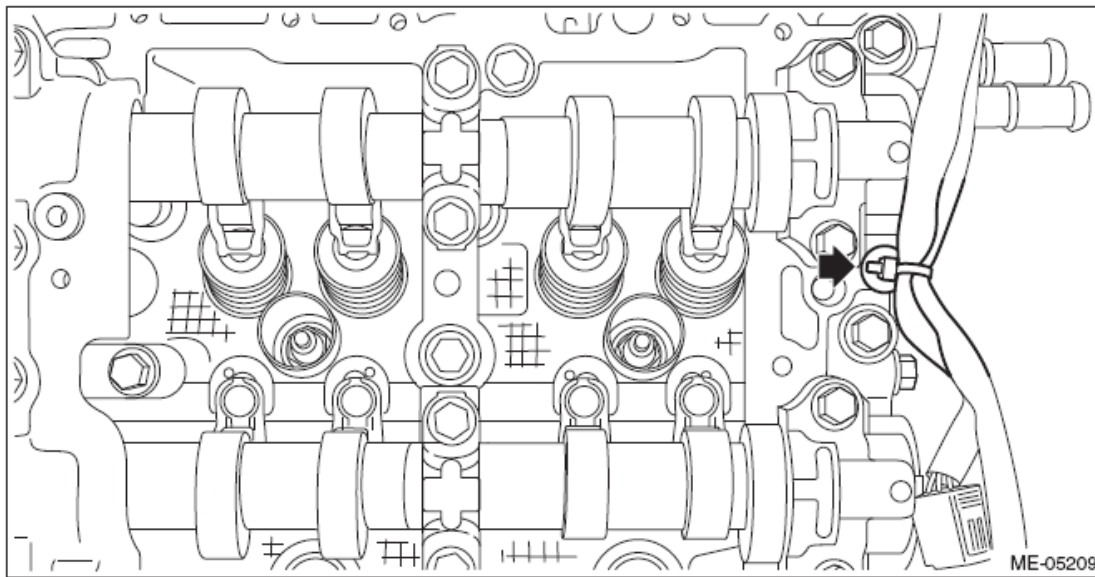


Fig. 405: Securing Engine Harness To Cam Carrier LH Using Clip
Courtesy of SUBARU OF AMERICA, INC.

14. Install the rocker cover LH. < Ref. to **ROCKER COVER LH**, INSTALLATION, Rocker Cover.>
15. Install the chain cover. < Ref. to **INSTALLATION**, Chain Cover.>
16. Install the engine to the vehicle. < Ref. to **INSTALLATION**, Engine Assembly.>

DISASSEMBLY

CAM CARRIER RH

1. Loosen the bolts (front camshaft cap RH, intake center camshaft cap RH, intake rear camshaft cap RH, exhaust center camshaft cap RH, and exhaust rear camshaft cap RH) equally, a little at a time in numerical sequence as shown in the figure, and remove each camshaft cap.

NOTE: Arrange camshaft caps in order so that they can be installed in their original positions.

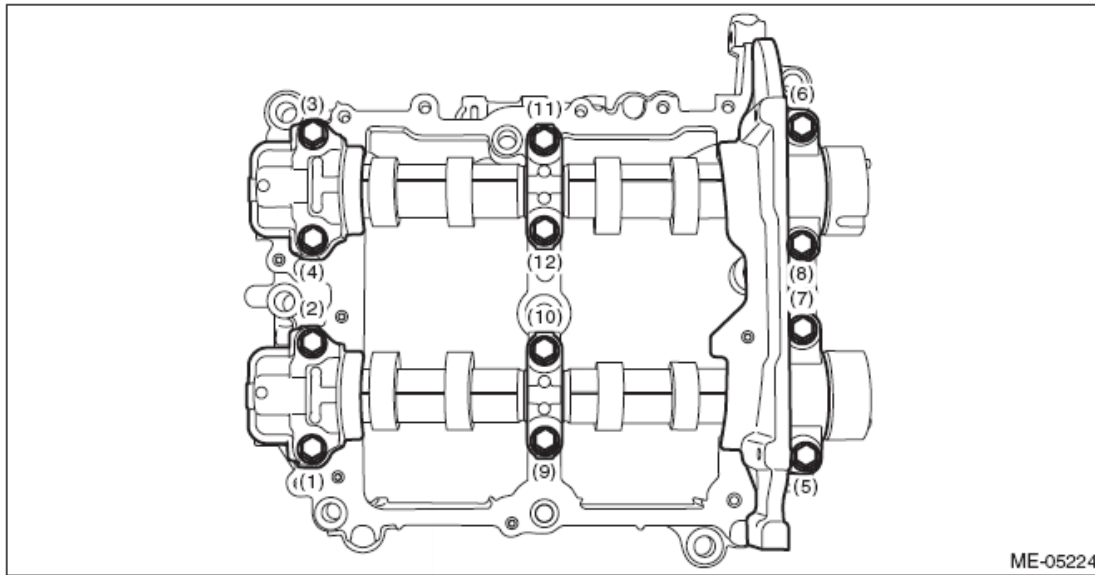


Fig. 406: Identifying Camshaft Cap Mounting Bolts Loosening Sequence
 Courtesy of SUBARU OF AMERICA, INC.

2. Remove the intake camshaft RH and the exhaust camshaft RH from cam carrier RH.

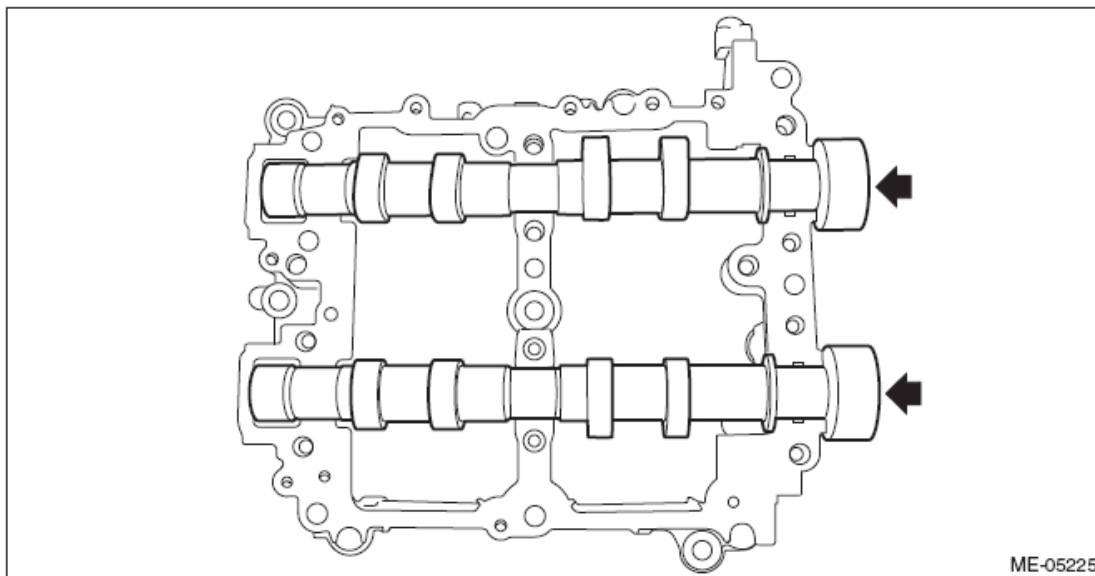


Fig. 407: Locating Intake Camshaft And Exhaust Camshaft
 Courtesy of SUBARU OF AMERICA, INC.

3. Remove the filter from cam carrier RH.

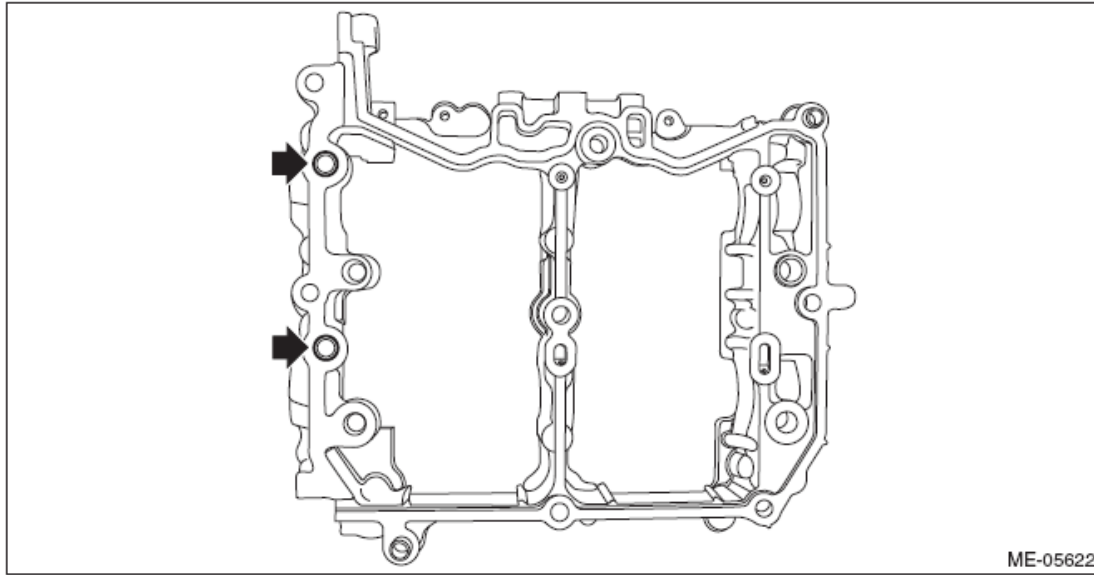


Fig. 408: Locating Cam Carrier Cap (RH)
Courtesy of SUBARU OF AMERICA, INC.

4. Remove the liquid gasket from cam carrier RH and front camshaft cap RH, intake rear camshaft cap RH and exhaust rear camshaft cap RH.

CAM CARRIER LH

1. Loosen the bolts (front camshaft cap LH, intake center camshaft cap LH, intake rear camshaft cap LH, exhaust center camshaft cap LH and exhaust rear camshaft cap LH) equally, a little at a time in numerical sequence as shown in the figure, and remove each camshaft cap.

NOTE: **Arrange camshaft caps in order so that they can be installed in their original positions.**

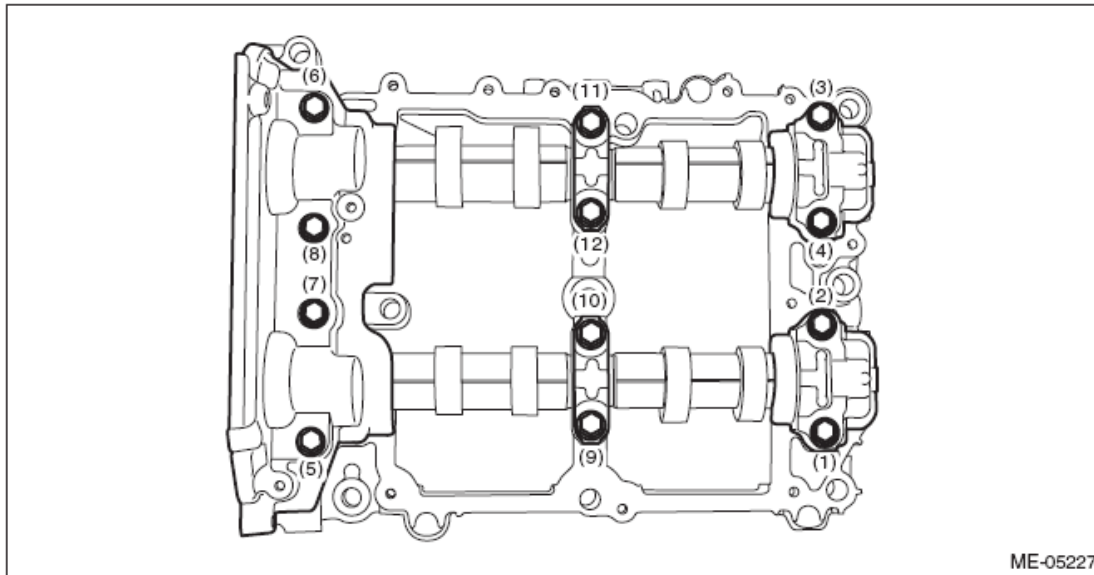


Fig. 409: Identifying Cam Carrier LH Mounting Bolts Loosening Sequence
Courtesy of SUBARU OF AMERICA, INC.

2. Remove the intake camshaft LH and the exhaust camshaft LH from cam carrier LH.

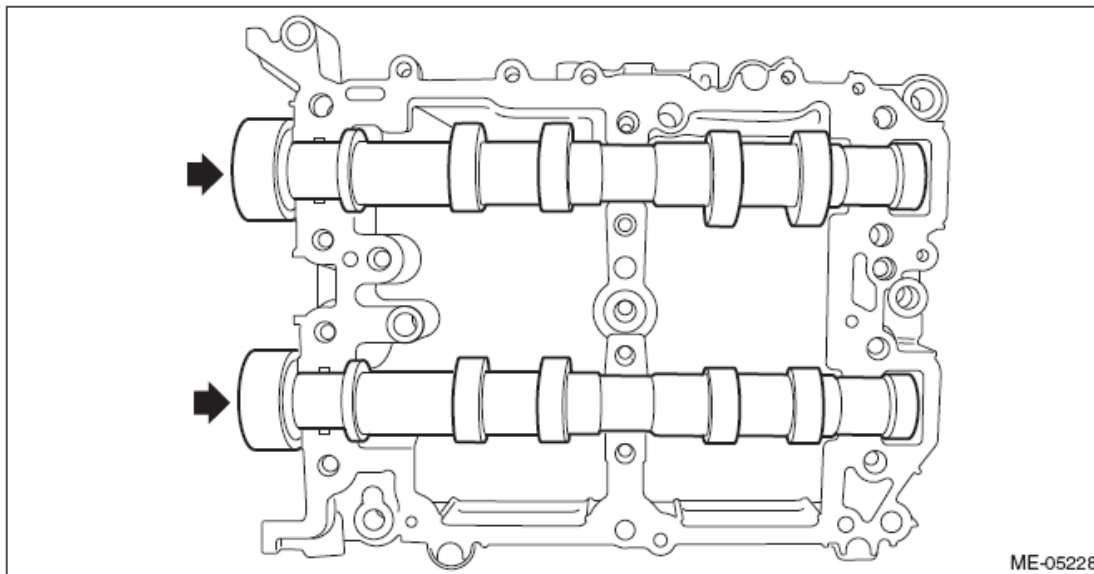


Fig. 410: Locating Intake Camshaft And Exhaust Camshaft (LH)
Courtesy of SUBARU OF AMERICA, INC.

3. Remove the filter from cam carrier LH.

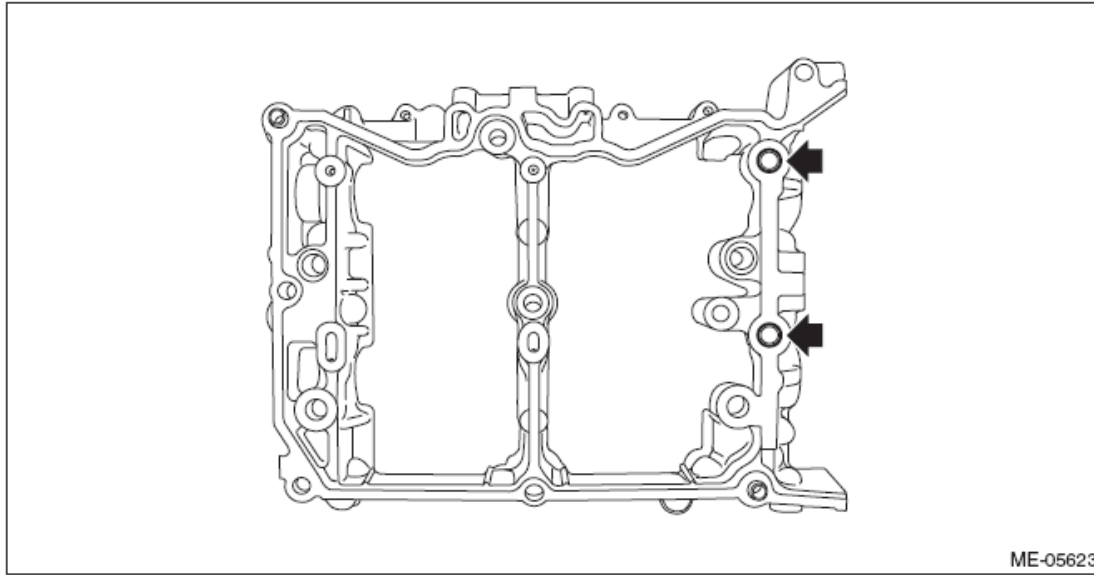


Fig. 411: Locating Camshaft Cap
Courtesy of SUBARU OF AMERICA, INC.

4. Remove the liquid gasket from cam carrier LH and front camshaft cap LH, intake rear camshaft cap LH and exhaust rear camshaft cap LH.

ASSEMBLY

CAM CARRIER RH

1. Install the filter to the cam carrier RH.

NOTE: Use a new filter.

Filter insert position:

Cam carrier RH end face $0^{+0}_{-0.5}$ mm ($^{+0}_{-0.0197}$ in) position

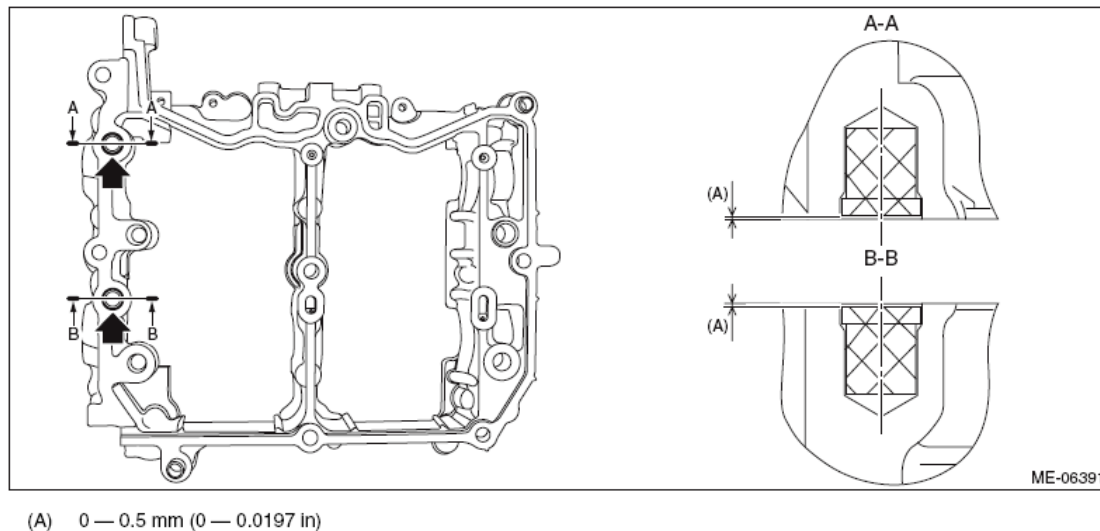


Fig. 412: Identifying Cam Carrier RH Filter Installation Position
 Courtesy of SUBARU OF AMERICA, INC.

2. Set the intake camshaft RH and the exhaust camshaft RH to the cam carrier RH.

NOTE: Apply engine oil to the journals of cam carrier RH before setting the intake camshaft RH and exhaust camshaft RH.

3. Install the front camshaft cap RH, intake center camshaft cap RH, intake rear camshaft cap RH, exhaust center camshaft cap RH and exhaust rear camshaft cap RH.
 1. Apply liquid gasket to the mating surface of front camshaft cap RH, intake rear camshaft cap RH and exhaust rear camshaft cap RH as shown in the figure.

CAUTION:

- Do not apply liquid gasket excessively. Applying excessively may cause excess gasket to flow toward camshaft journal, resulting in engine seizure.
- Do not apply liquid gasket excessively to the intake center camshaft cap RH and exhaust center camshaft cap RH.

NOTE:

- Before applying liquid gasket, degrease the old liquid gasket seal surface of the front camshaft cap RH, intake rear camshaft cap RH, exhaust rear camshaft cap RH, and cam carrier RH.
- Install within 5 min. after applying liquid gasket.

Liquid gasket:

THREE BOND 1217G (Part No. 0877Y0100) or equivalent


Liquid gasket applying diameter:

Mating surfaces other than range A

$2 \pm 0.5 \text{ mm}$ ($0.0787 \pm 0.0197 \text{ in}$)

Mating surfaces of range A

$3.5 \pm 0.5 \text{ mm}$ ($0.1378 \pm 0.0197 \text{ in}$)

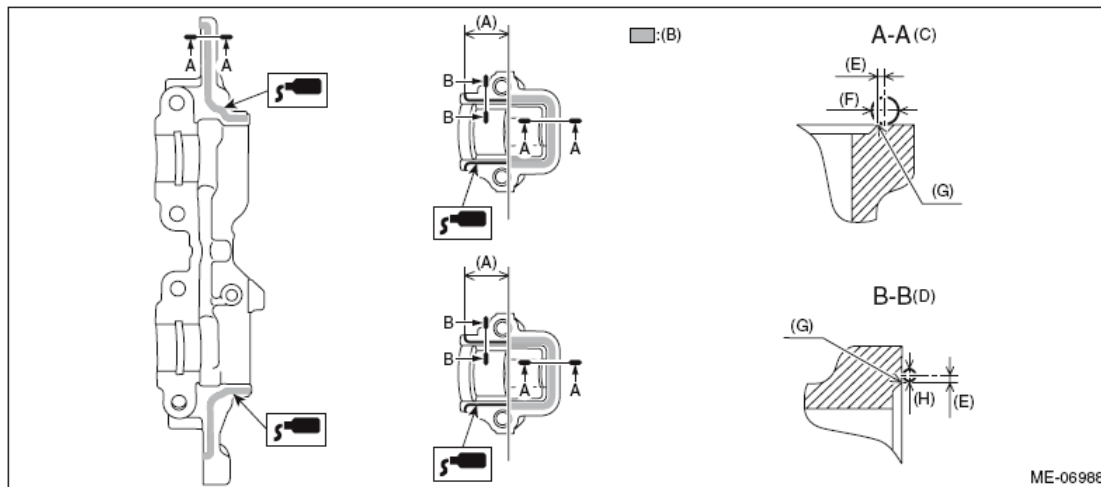

(A) 28.5 mm (1.122 in)

(D) Liquid gasket applying position of mating surfaces other than range A

(G) Chamfer edge

(B) Range A

(E) 1 mm (0.0394 in) or less

(H) $\phi 2 \pm 0.5 \text{ mm}$ ($0.0787 \pm 0.0197 \text{ in}$)

(C) Liquid gasket applying position of mating surfaces of range A

(F) $\phi 3.5 \pm 0.5 \text{ mm}$ ($0.1378 \pm 0.0197 \text{ in}$)

Fig. 413: Identifying Liquid Gasket Applying Dimension On Cam Carrier

Courtesy of SUBARU OF AMERICA, INC.

2. Apply engine oil to the journals of each camshaft cap before setting the camshaft cap.
3. Tighten the bolts which secure front camshaft cap RH, intake center camshaft cap RH, intake rear camshaft cap RH, exhaust center camshaft cap RH and exhaust rear camshaft cap RH in numerical order as shown in the figure.

Tightening torque:

18 N.m (1.8 kgf-m, 13.3 ft-lb)

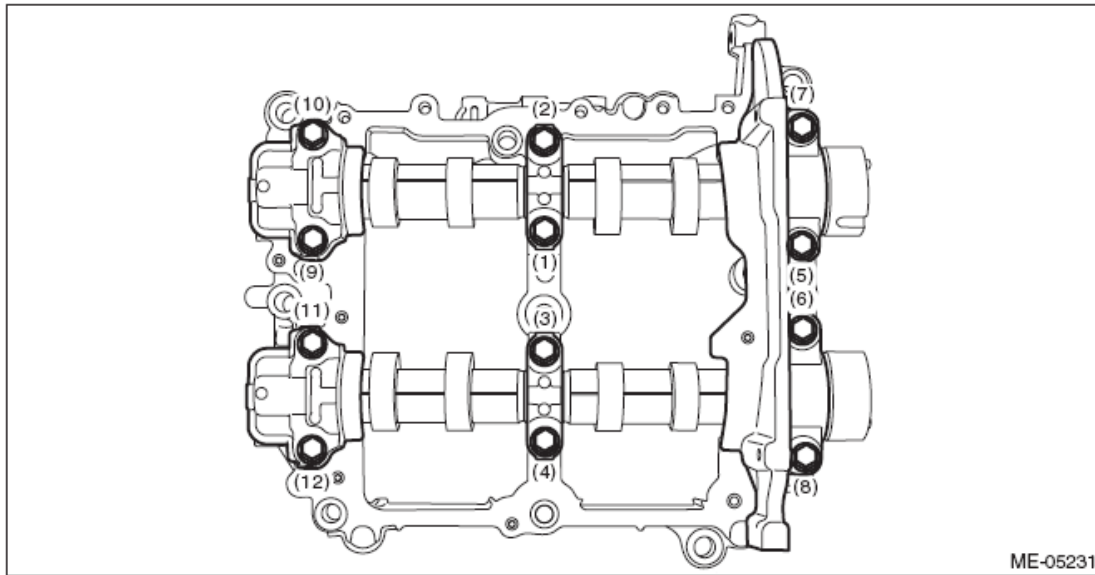


Fig. 414: Identifying Cam Carrier Mounting Bolts Tightening Sequence
Courtesy of SUBARU OF AMERICA, INC.


CAM CARRIER LH

1. Install the filter to the cam carrier LH.

NOTE: Use a new filter.

Filter insert position:

Cam carrier LH end face $0^{+0}_{-0.5} \text{ mm}$ ($0^{+0}_{-0.0197} \text{ in}$) position

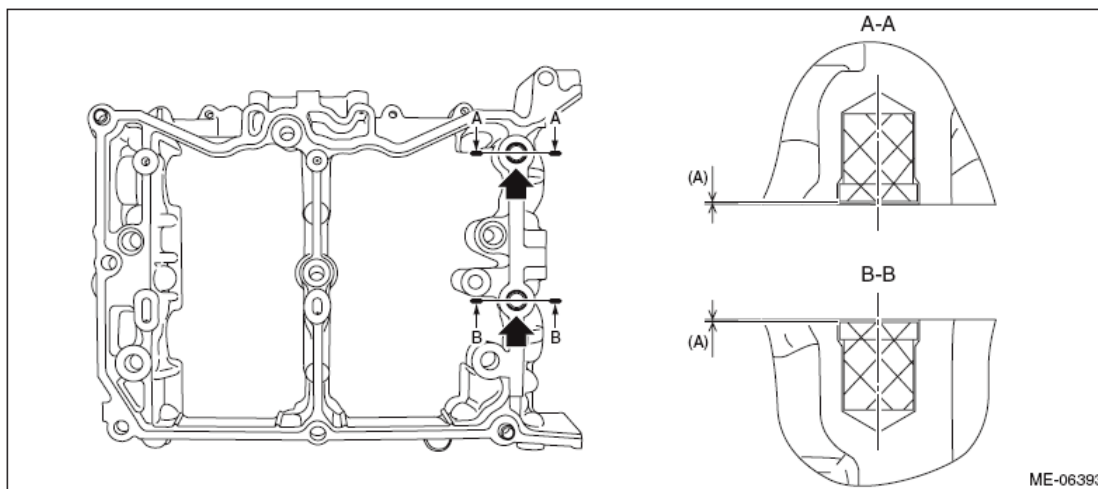

(A) $0 - 0.5 \text{ mm}$ ($0 - 0.0197 \text{ in}$)

Fig. 415: Identifying Filter Installation Position

Courtesy of SUBARU OF AMERICA, INC.

2. Set the intake camshaft LH and the exhaust camshaft LH to the cam carrier LH.

NOTE: Apply engine oil to the journals of cam carrier LH before setting the intake camshaft LH and exhaust camshaft LH.

3. Install the front camshaft cap LH, intake center camshaft cap LH, intake rear camshaft cap LH, exhaust center camshaft cap LH and exhaust rear camshaft cap LH.

1. Apply liquid gasket to the mating surface of front camshaft cap LH, intake rear camshaft cap LH and exhaust rear camshaft cap LH as shown in the figure.

- CAUTION:**
- Do not apply liquid gasket excessively. Applying excessively may cause excess gasket to flow toward camshaft journal, resulting in engine seizure.
 - Do not apply liquid gasket excessively to the intake center camshaft cap LH and exhaust center camshaft cap LH.

- NOTE:**
- Before applying liquid gasket, degrease the old liquid gasket seal surface of the front camshaft cap LH, intake rear camshaft cap LH, exhaust rear camshaft cap LH, and cam carrier LH.
 - Install within 5 min. after applying liquid gasket.

Liquid gasket:

THREE BOND 1217G (Part No. 0877Y0100) or equivalent

Liquid gasket applying diameter:

Mating surfaces other than ranges A, B and C


2±0.5 mm (0.0787±0.0197 in)

Mating surfaces of ranges A and C

3.5±0.5 mm (0.1378±0.0197 in)

Mating surfaces of range B

3^{+0.5}₋₀ mm (0.1181^{+0.0197}₋₀ in)

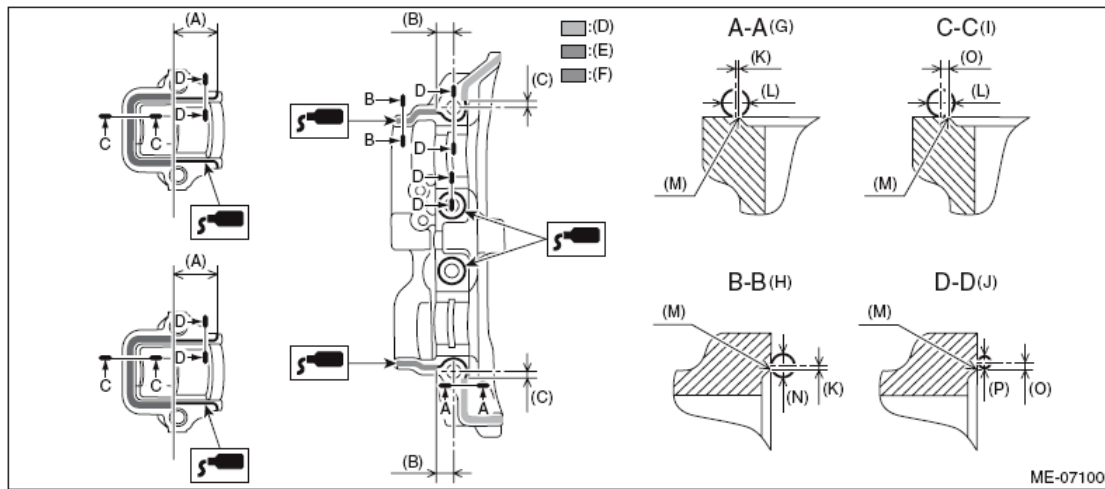

- | | | |
|-------------------------|--|---|
| (A) 28.5 mm (1.122 in) | (G) Liquid gasket applying position of mating surfaces of range A | (M) Chamfer edge |
| (B) 11.6 mm (0.4567 in) | (H) Liquid gasket applying position of mating surfaces of range B | (N) $\phi 3^{+0.5}_{-0}$ mm ($^{+0.0197}_{-0}$ in) |
| (C) 5.1 mm (0.2008 in) | (I) Liquid gasket applying position of mating surfaces of range C | (O) 1 mm (0.0394 in) or less |
| (D) Range A | (J) Liquid gasket applying position of mating surfaces other than range A, range B and range C | (P) $\phi 2 \pm 0.5$ mm (0.0787 ± 0.0197 in) |
| (E) Range B | (K) 0.5 mm (0.0197 in) | |
| (F) Range C | (L) $\phi 3.5 \pm 0.5$ mm (0.1378 ± 0.0197 in) | |

Fig. 416: Identifying Liquid Gasket Applying Dimension On Cam Carrier
 Courtesy of SUBARU OF AMERICA, INC.

2. Apply engine oil to the journals of each camshaft cap before setting the camshaft cap.
3. Tighten the bolts which secure front camshaft cap LH, intake center camshaft cap LH, intake rear camshaft cap LH, exhaust center camshaft cap LH and exhaust rear camshaft cap LH in numerical order as shown in the figure.

Tightening torque:

18 N.m (1.8 kgf-m, 13.3 ft-lb)

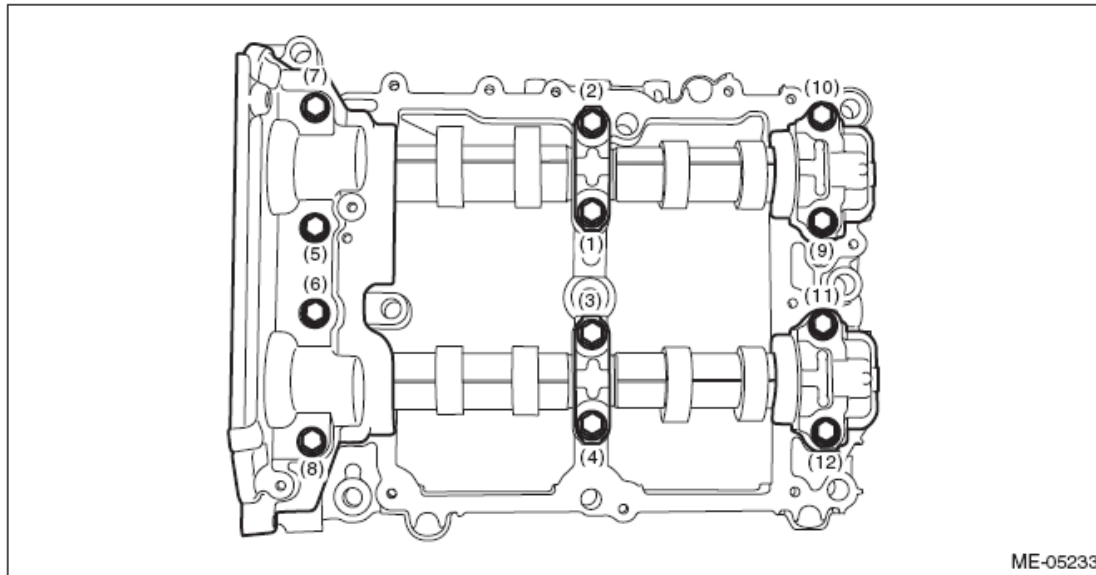


Fig. 417: Identifying Cam Carrier Mounting Bolts Tightening Sequence
Courtesy of SUBARU OF AMERICA, INC.

INSPECTION

1. Visually check the cam carrier filter, and if clogging is found, replace with a new part.

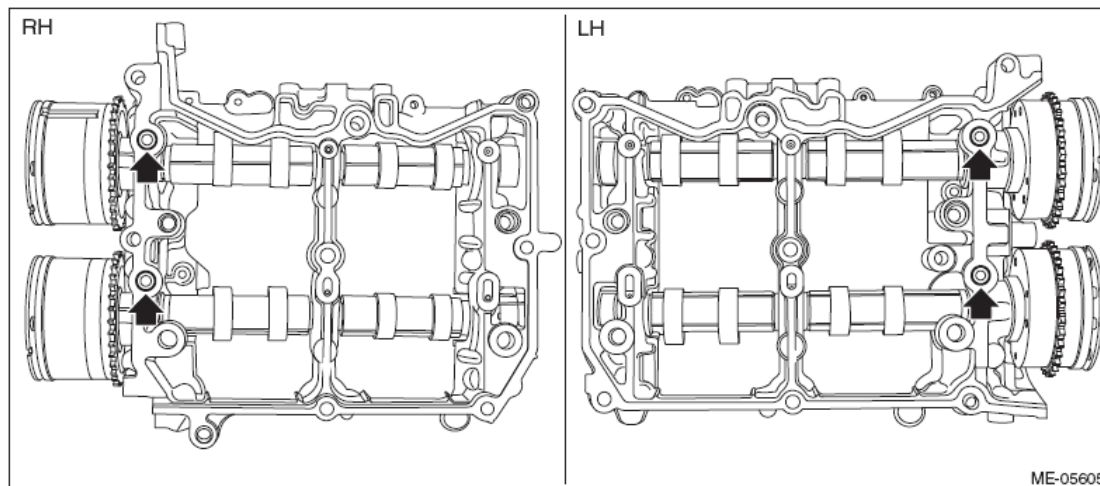


Fig. 418: Identifying Liquid Gasket Applying Area On Cam Carrier
Courtesy of SUBARU OF AMERICA, INC.

2. Check the camshaft journals for damage and wear. Replace the camshaft if faulty.
3. Check the cam face condition of camshaft, and remove the minor faults by grinding with oil stone. Replace the camshaft if uneven wear is found.
4. Using a dial gauge, check the camshaft bend. If it exceeds the limit, replace the camshaft.

NOTE: Measurement should be performed at a temperature of 20°C (68°F).

Camshaft bend:

Limit

0.020 mm (0.00079 in)

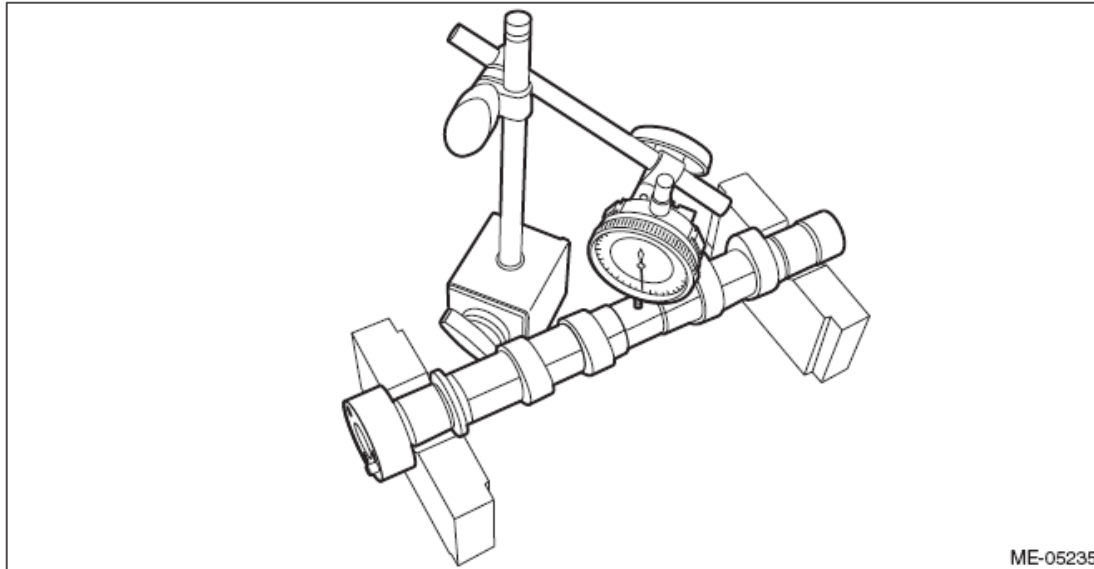


Fig. 419: Checking Camshaft Bend Using Dial Gauge

Courtesy of SUBARU OF AMERICA, INC.

5. Check the cam lobe height "H" and cam base circle diameter "A" of camshaft as shown in the figure, using micrometer. If it is not within the standard, replace the camshaft.

NOTE: Measurement should be performed at a temperature of 20°C (68°F).

Camshaft cam lobe overall height H:

Intake

Standard

40.34 - 40.44 mm (1.588 - 1.592 in)

Exhaust

Standard

39.66 - 39.76 mm (1.561 - 1.565 in)

Camshaft cam base circle diameter A:

Standard

34.0 mm (1.339 in)

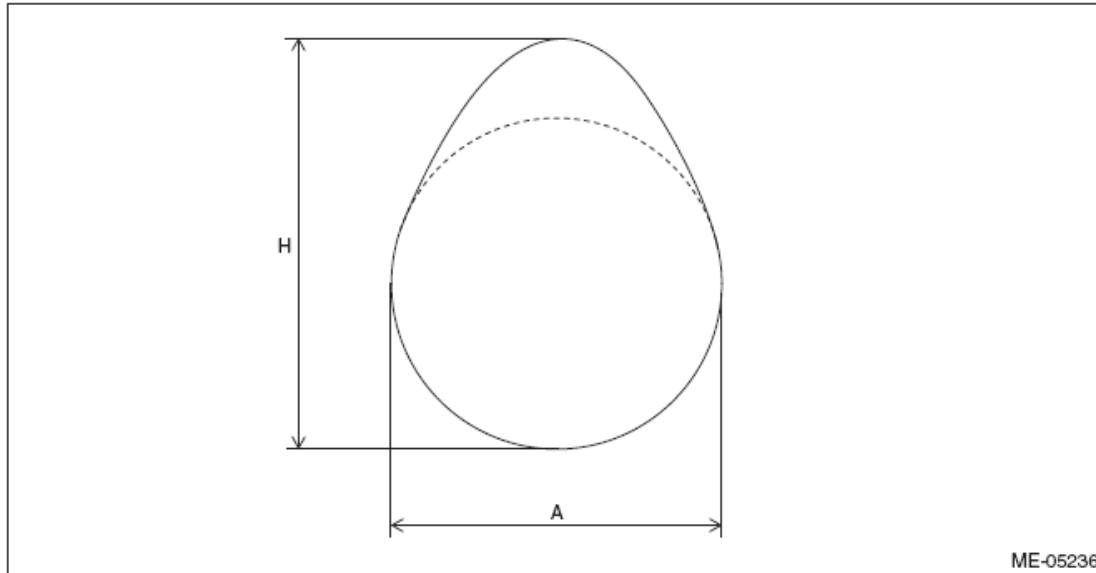


Fig. 420: Identifying Camshaft Cam Lobe Overall Height And Camshaft Cam Base Circle Diameter

Courtesy of SUBARU OF AMERICA, INC.

6. Check the camshaft journal outer diameter using micrometer. If it is not within the standard, replace the camshaft.

NOTE:

- Measurement should be performed at a temperature of 20°C (68°F).
- Measure outer diameter of each journal at several points, and read the value of most worn location.

Camshaft journal outer diameter:

Standard

25.946 - 25.963 mm (1.0215 - 1.0222 in)

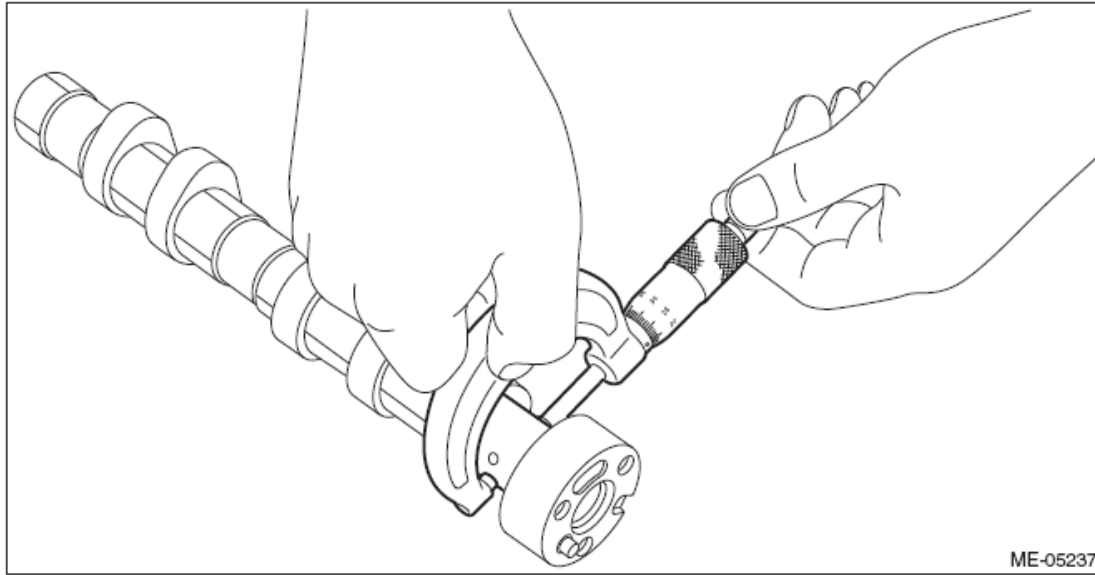


Fig. 421: Measuring Camshaft Journal Outer Diameter Using Tool
Courtesy of SUBARU OF AMERICA, INC.

7. Using a dial gauge, check the thrust clearance of the camshaft. If it is not within the standard or if uneven wear is found, replace each camshaft cap and cam carrier as a set. If necessary replace the camshaft.

NOTE:

- **Measurement should be performed at a temperature of 20°C (68°F).**
- **Set the dial gauge at end surface of camshaft.**

Camshaft thrust clearance:

Standard

0.068 - 0.116 mm (0.0027 - 0.0047 in)

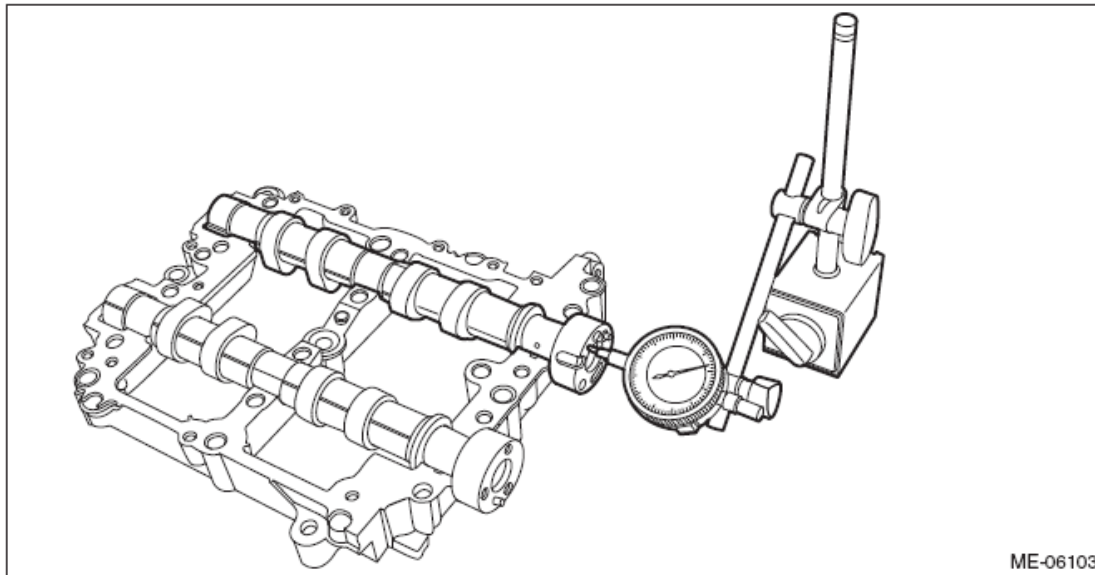


Fig. 422: Checking Thrust Clearance Of Camshaft Using Dial Gauge
Courtesy of SUBARU OF AMERICA, INC.

8. Check the oil clearance on the camshaft using a plastigauge.

NOTE: **Measurement should be performed at a temperature of 20°C (68°F).**

1. Remove the liquid gasket from cam carrier and front camshaft cap, intake rear camshaft cap and exhaust rear camshaft cap.
2. Clean each camshaft cap and cam carrier journals.
3. Set the camshaft to the cam carrier.
4. Place a plastigauge across the camshaft journals of each camshaft and set the camshaft caps.
5. Tighten the bolts which secure front camshaft cap, intake center camshaft cap, intake rear camshaft cap, exhaust center camshaft cap and exhaust rear camshaft cap in numerical order as shown in the figure.

Tightening torque:

18 N.m (1.8 kgf-m, 13.3 ft-lb)

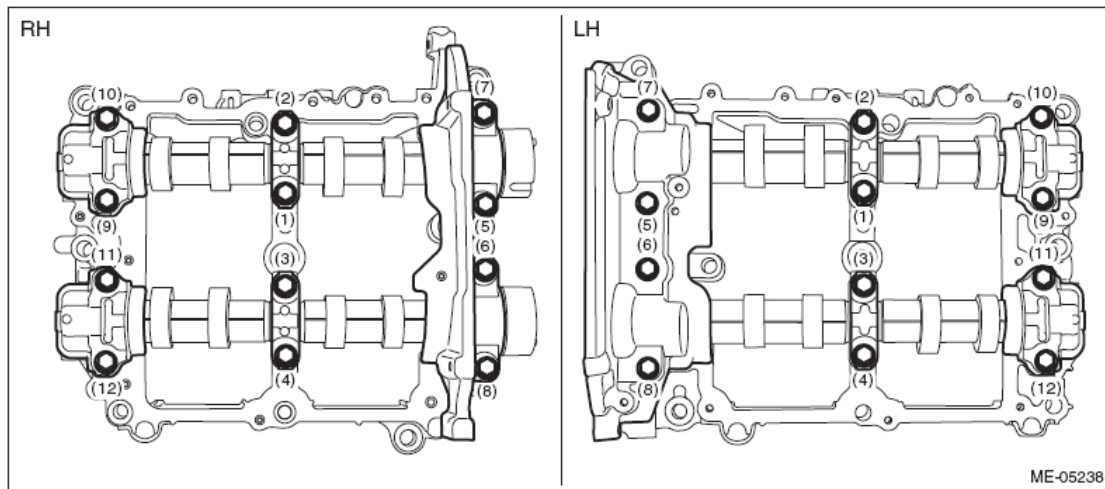


Fig. 423: Identifying Camshaft Cap Mounting Bolts Tightening Sequence
Courtesy of SUBARU OF AMERICA, INC.

6. Loosen the bolts (front camshaft cap, intake center camshaft cap, intake rear camshaft cap, exhaust center camshaft cap and exhaust rear camshaft cap) equally, a little at a time in numerical sequence as shown in the figure, and remove each camshaft cap.

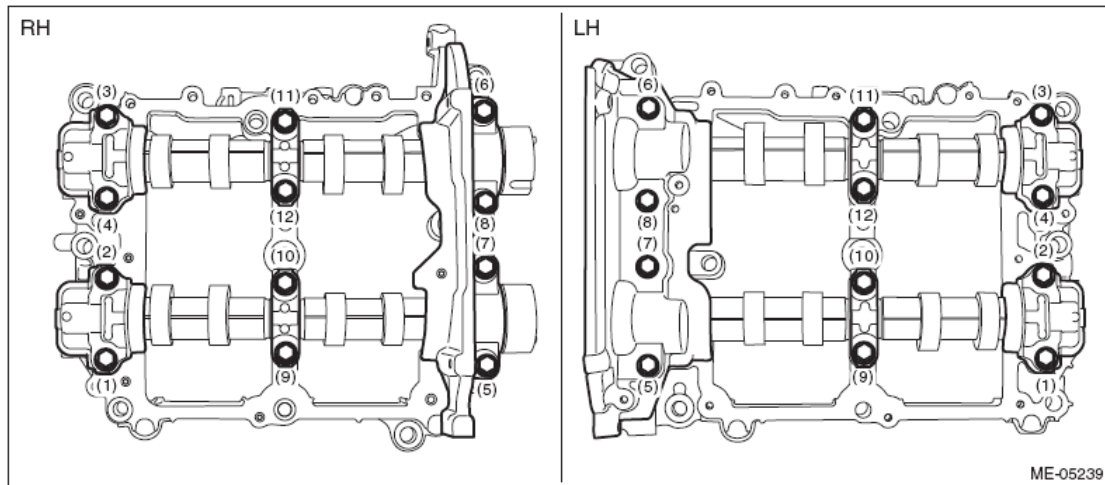


Fig. 424: Identifying Camshaft Cap Mounting Bolts Loosening Sequence
Courtesy of SUBARU OF AMERICA, INC.

7. Determine camshaft oil clearance by matching the widest point of plastigauge on each journal against scale printed on a package of plastigauge. If it is not within the standard, replace each camshaft cap and cam carrier as a set. If necessary replace the camshaft.

Camshaft oil clearance:

Standard

0.037 - 0.072 mm (0.0015 - 0.0028 in)

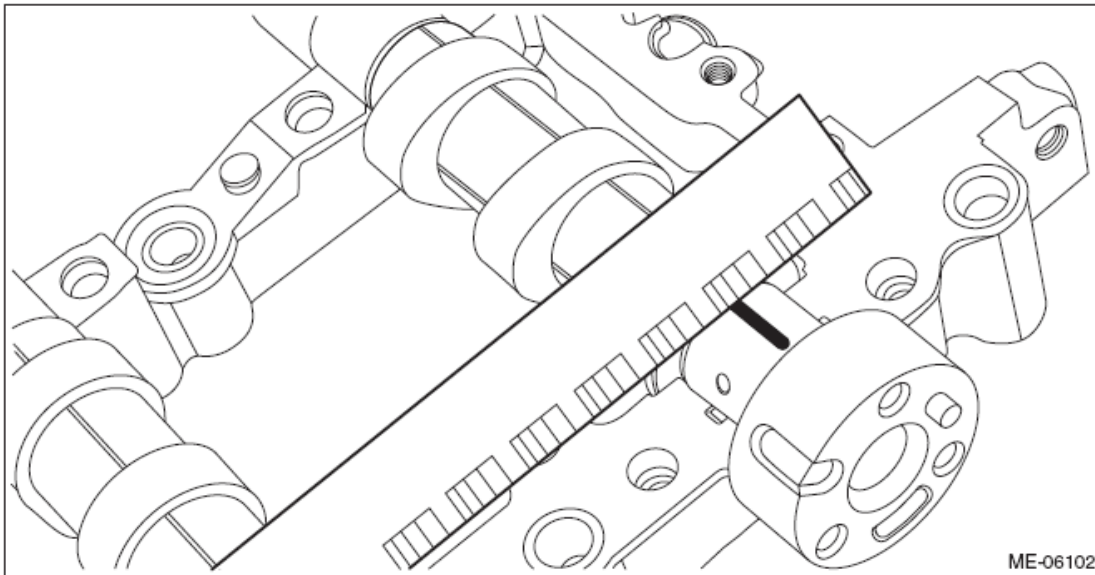


Fig. 425: Checking Camshaft Oil Clearance Using Widest Part Of Plastigauge
Courtesy of SUBARU OF AMERICA, INC.

8. Completely remove the plastigauge.

CYLINDER HEAD

REMOVAL

CYLINDER HEAD RH

1. Remove the engine from the vehicle. < Ref. to **REMOVAL**, Engine Assembly.>
2. Remove the intake manifold. < Ref. to **REMOVAL**, Intake Manifold.> < Ref. to **REMOVAL**, Intake Manifold.>
3. Remove the engine wiring harness. < Ref. to **REMOVAL**, Engine Wiring Harness.> < Ref. to **REMOVAL**, Engine Wiring Harness.>
4. Remove the tumble generator valve assembly RH. < Ref. to **REMOVAL**, Tumble Generator Valve Assembly.> < Ref. to **REMOVAL**, Tumble Generator Valve Assembly.>
5. Remove the chain cover. < Ref. to **REMOVAL**, Chain Cover.>
6. Remove the rocker cover RH. < Ref. to **ROCKER COVER RH**, REMOVAL, Rocker Cover.>
7. Remove the cam carrier RH. < Ref. to **CAM CARRIER RH**, REMOVAL, Cam Carrier.>
8. Remove the EGR pipe assembly from the water pipe assembly and the cylinder block RH. (Gasoline engine model)

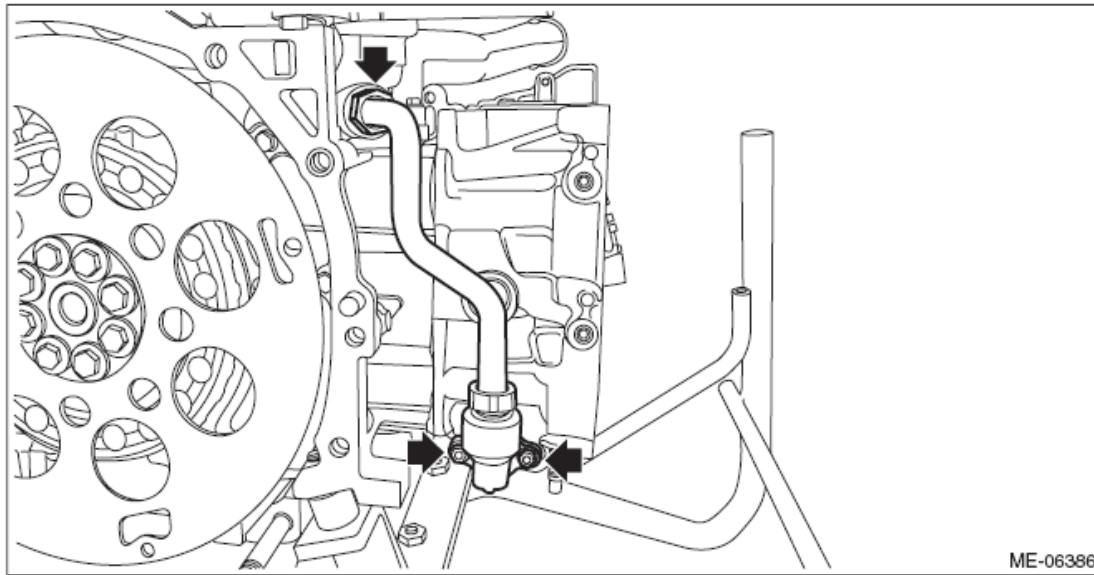


Fig. 426: Locating EGR Pipe Assembly Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

9. Disconnect the engine coolant outlet hose from the EGR cooler, and remove the EGR cooler from the cylinder block RH. (HEV model)

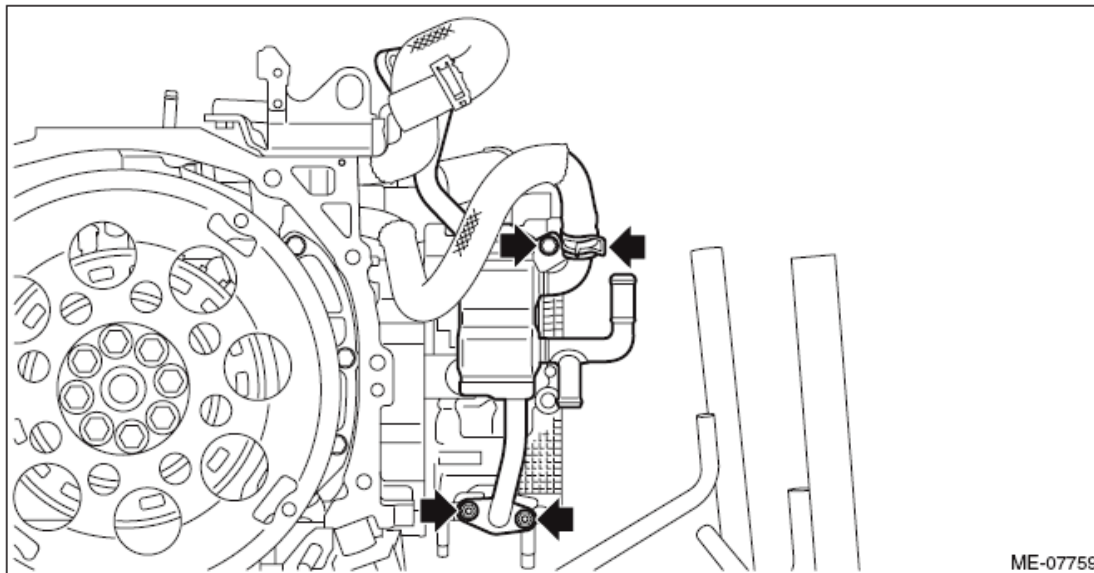


Fig. 427: Locating Engine Coolant Outlet Hose To EGR Cooler Mounting Bolts
Courtesy of SUBARU OF AMERICA, INC.

10. Loosen the bolts holding the cylinder head RH equally, a little at a time in numerical sequence as shown in the figure, and while leaving the cylinder head bolts (1) and (4) engaged by three or four threads, remove the other cylinder head bolts.

NOTE: Leaving the cylinder head bolts (1) and (4) engaged by three or four threads prevents the cylinder head RH from falling.

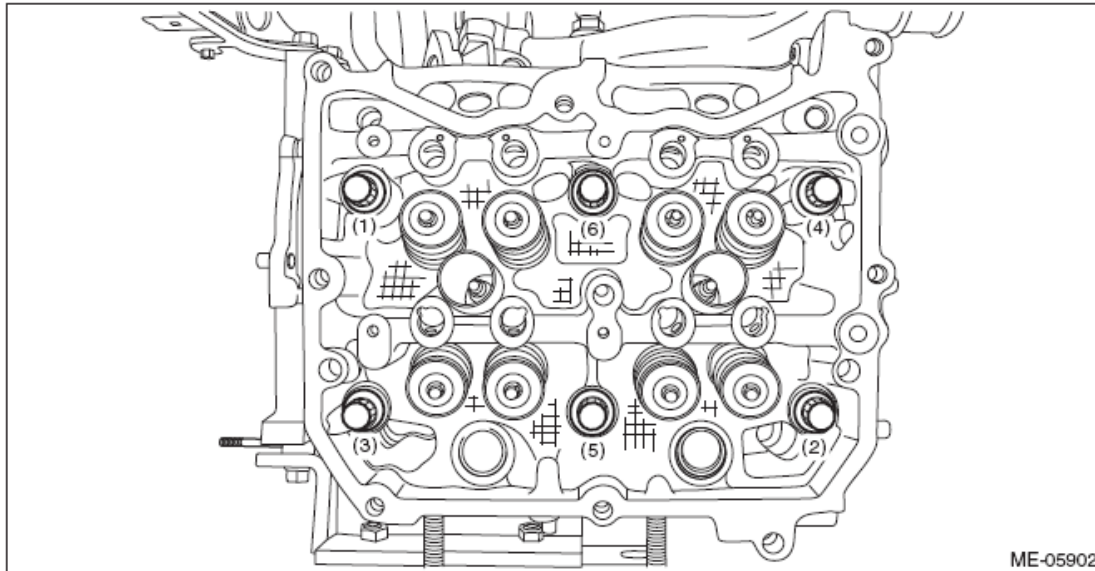


Fig. 428: Identifying Cylinder Head Mounting Bolts Loosening Sequence
Courtesy of SUBARU OF AMERICA, INC.

11. While tapping the cylinder head RH with a plastic hammer, separate it from cylinder block RH.
12. Remove the bolts (1) and (4) to remove cylinder head RH.
13. Remove the cylinder head gasket RH.

CAUTION: Be careful not to scratch the mating surface of cylinder head and cylinder block.

14. Remove the liquid gasket from cylinder head RH and cam carrier RH.

CYLINDER HEAD LH

1. Remove the engine from the vehicle. < Ref. to **REMOVAL**, Engine Assembly.>
2. Remove the intake manifold. < Ref. to **REMOVAL**, Intake Manifold.> < Ref. to **REMOVAL**, Intake Manifold.>
3. Remove the engine wiring harness. < Ref. to **REMOVAL**, Engine Wiring Harness.> < Ref. to **REMOVAL**, Engine Wiring Harness.>
4. Remove the tumble generator valve assembly LH. < Ref. to **REMOVAL**, Tumble Generator Valve Assembly.> < Ref. to **REMOVAL**, Tumble Generator Valve Assembly.>
5. Remove the chain cover. < Ref. to **REMOVAL**, Chain Cover.>
6. Remove the rocker cover LH. < Ref. to **ROCKER COVER LH**, REMOVAL, Rocker Cover.>
7. Remove the cam carrier LH. < Ref. to **CAM CARRIER LH**, REMOVAL, Cam Carrier.>

8. Remove the A/C compressor. < Ref. to **REMOVAL** , Compressor.>
9. Loosen the bolts holding the cylinder head LH equally, a little at a time in numerical sequence as shown in the figure, and while leaving the cylinder head bolts (1) and (4) engaged by three or four threads, remove the other cylinder head bolts.

NOTE: Leaving the cylinder head bolts (1) and (4) engaged by three or four threads prevents the cylinder head LH from falling.

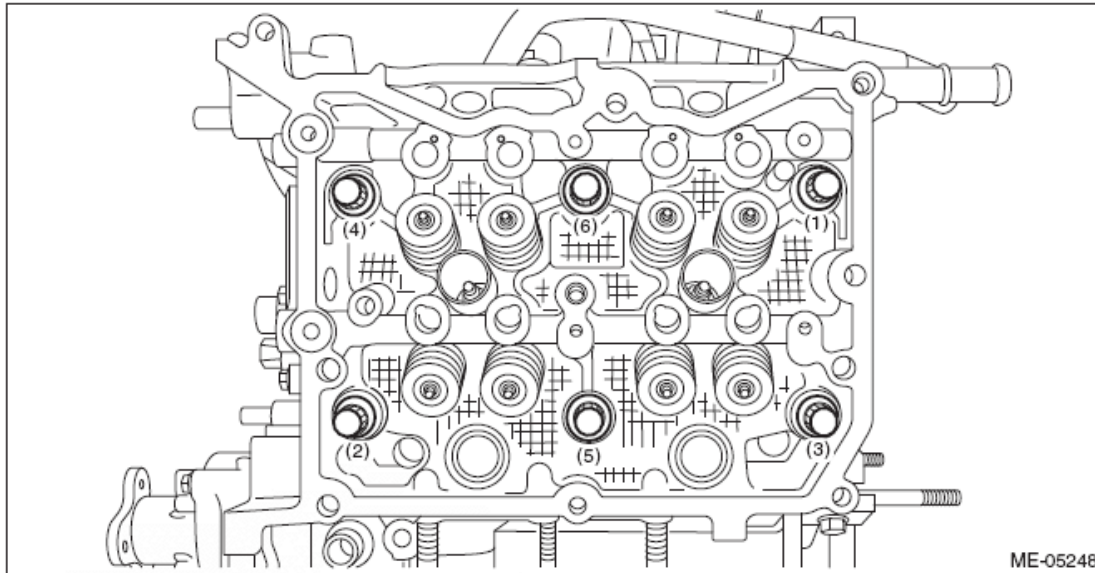


Fig. 429: Identifying Cylinder Head Mounting Bolts Loosening Sequence
Courtesy of SUBARU OF AMERICA, INC.

10. While tapping the cylinder head LH with a plastic hammer, separate it from cylinder block LH.
11. Remove the cylinder head bolts (1) and (4) to remove cylinder head LH.
12. Remove the cylinder head gasket LH.

CAUTION: Be careful not to scratch the mating surface of cylinder head and cylinder block.

13. Remove the liquid gasket from cylinder head LH and cam carrier LH.

INSTALLATION

CYLINDER HEAD RH

1. Clean the bolt holes in the cylinder block RH.

CAUTION: To avoid erroneous tightening of the bolts, clean out the bolt holes sufficiently by blowing with compressed air to eliminate engine

coolant etc.

2. Apply liquid gasket to both sides of the cylinder head gasket RH as shown in the figure.

NOTE:


- Use a new cylinder head gasket RH.
- Before applying liquid gasket, degrease the mating surface of cylinder blocks RH and cylinder head RH.
- Install within 5 min. after applying liquid gasket.

Liquid gasket:

THREE BOND 1217G (Part No. 0877Y0100) or equivalent

Liquid gasket applying diameter:

3 ± 1 mm (0.1181 ± 0.0394 in)

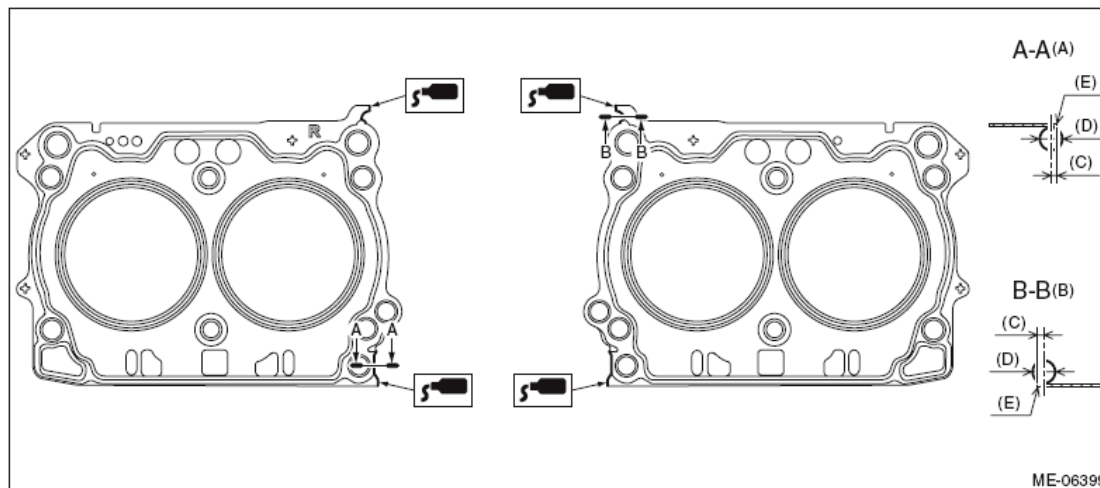

- | | | |
|--|---|-------------------------------|
| (A) Liquid gasket applying position to the cylinder head side | (C) 1 mm (0.0394 in) or less | (E) Cylinder head gasket edge |
| (B) Liquid gasket applying position to the cylinder block side | (D) $\phi 3\pm1$ mm (0.1181 ± 0.0394 in) | |

Fig. 430: Identifying Liquid Gasket Applying Dimension On Cylinder Head RH
 Courtesy of SUBARU OF AMERICA, INC.

3. Attach the cylinder head gasket RH.

NOTE:

Check that liquid gasket RH is squeezed out from the cylinder head gasket.

4. Install the cylinder head RH to the cylinder block RH.

CAUTION: Be careful not to scratch the mating surface of cylinder head RH and cylinder block RH.

1. Clean the cylinder head bolt threads and apply sufficient engine oil to the washer and cylinder head bolts threads.
2. Mount the cylinder head RH onto the cylinder block RH, and tighten all bolts with a torque of 29 N.m (3.0 kgf-m, 21.4 ft-lb) in numerical order as shown in the figure.

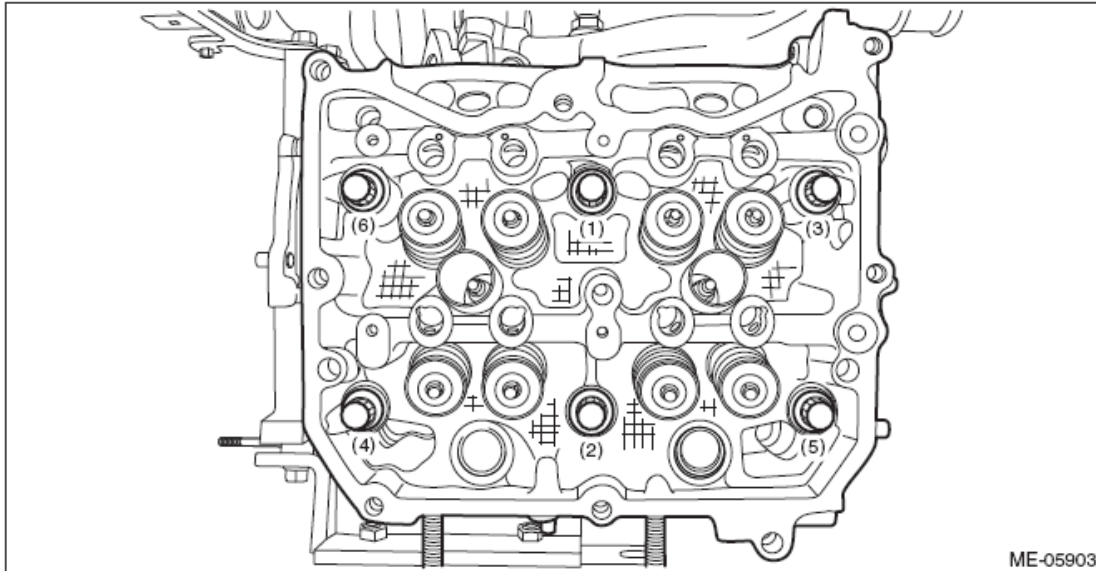


Fig. 431: Identifying Cylinder Head RH To Cylinder Block RH Mounting Bolts Tightening Sequence

Courtesy of SUBARU OF AMERICA, INC.

3. Tighten all cylinder head bolts further with a torque of 100 N.m (10.2 kgf-m, 73.8 ft-lb) in numerical order as shown in the figure.

CAUTION: If the bolt makes stick-slip sound during tightening, repeat the procedure from step 1). In that case, the cylinder head gasket RH can be reused. But it is necessary to remove liquid gasket completely from cylinder block RH, cylinder head RH and cylinder head gasket RH and re-apply to them.

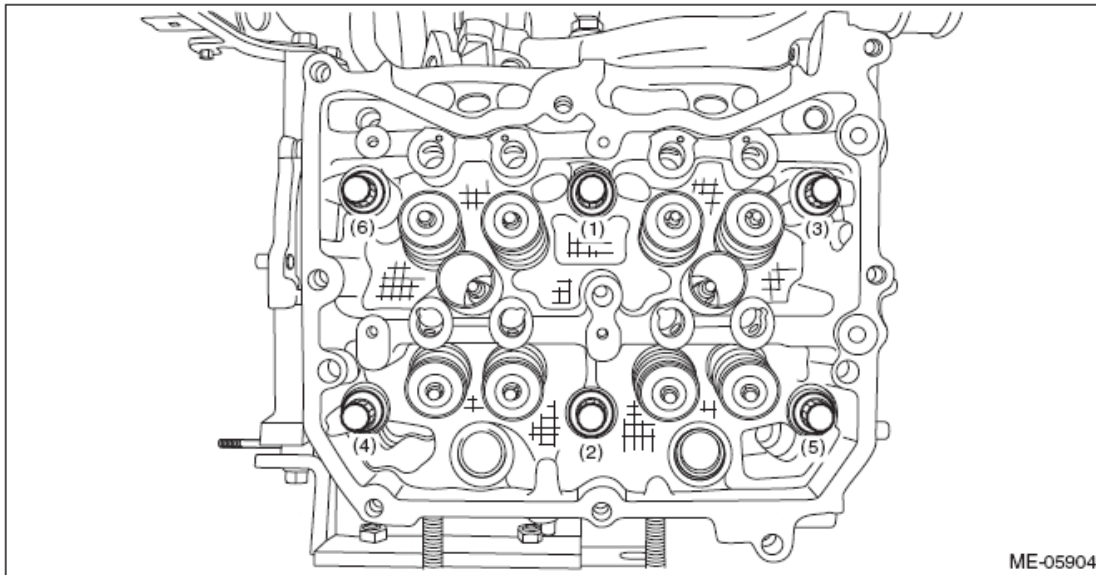


Fig. 432: Identifying Cylinder Head Bolts Tightening Sequence
 Courtesy of SUBARU OF AMERICA, INC.

4. Loosen all cylinder head bolts 180° in numerical order as shown in the figure, and then loosen all cylinder head bolts 180° further in numerical order as shown in the figure.

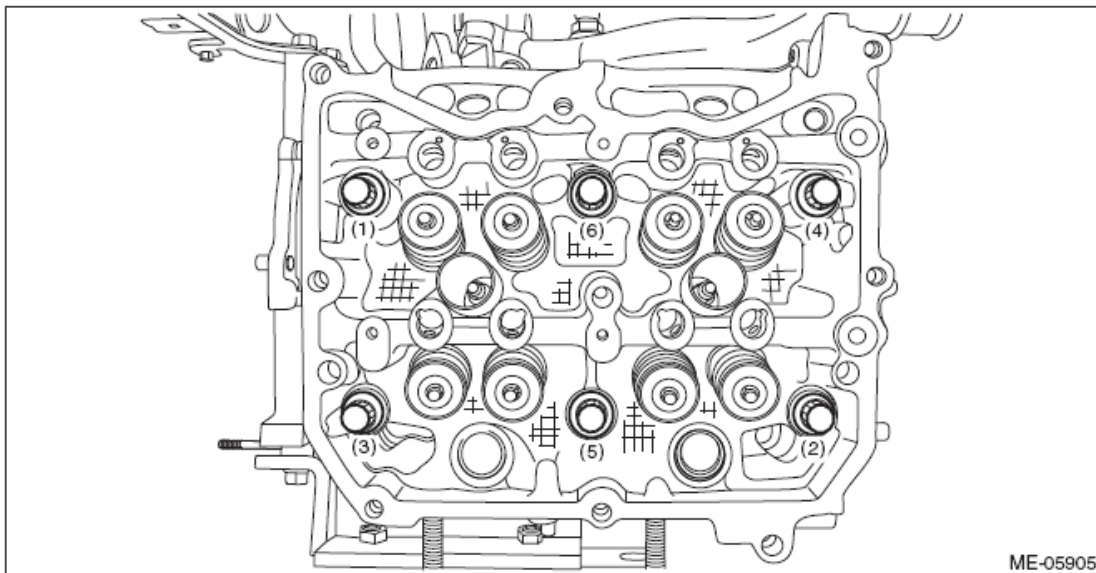


Fig. 433: Identifying Cylinder Head Bolts Loosening Sequence
 Courtesy of SUBARU OF AMERICA, INC.

5. Tighten all cylinder head bolts with a torque of 42 N.m (4.3 kgf-m, 31.0 ft-lb) in numerical order as shown in the figure.

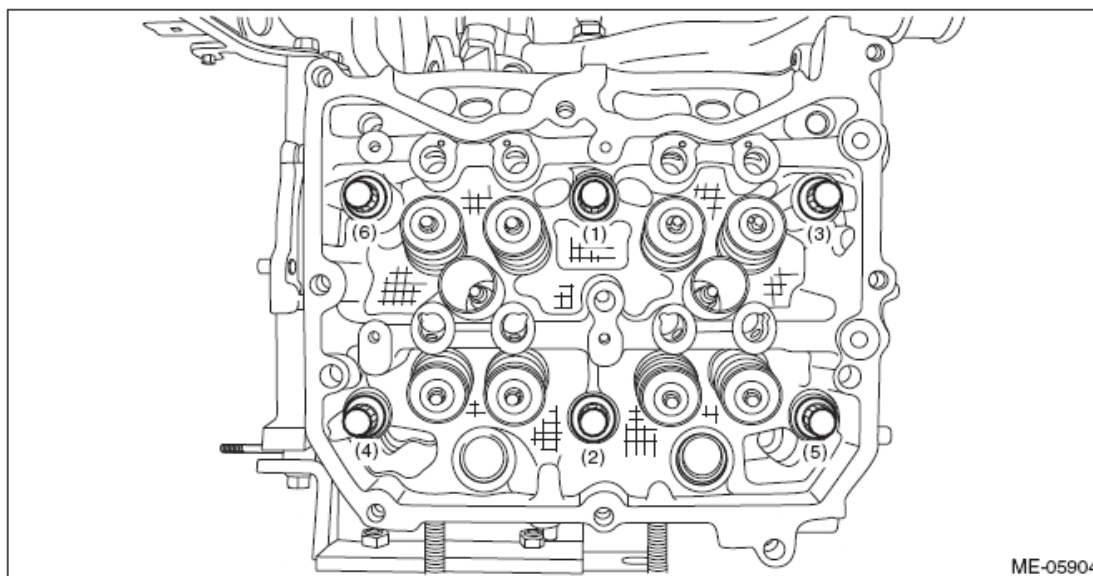


Fig. 434: Identifying Cylinder Head Bolts Tightening Sequence
Courtesy of SUBARU OF AMERICA, INC.

6. Using angle gauge, tighten all cylinder head bolts with specified angle in numerical order as shown in the figure.

ST 499817100 ENGINE STAND

Tightening angle:

$80^{\circ} \pm 2^{\circ}$

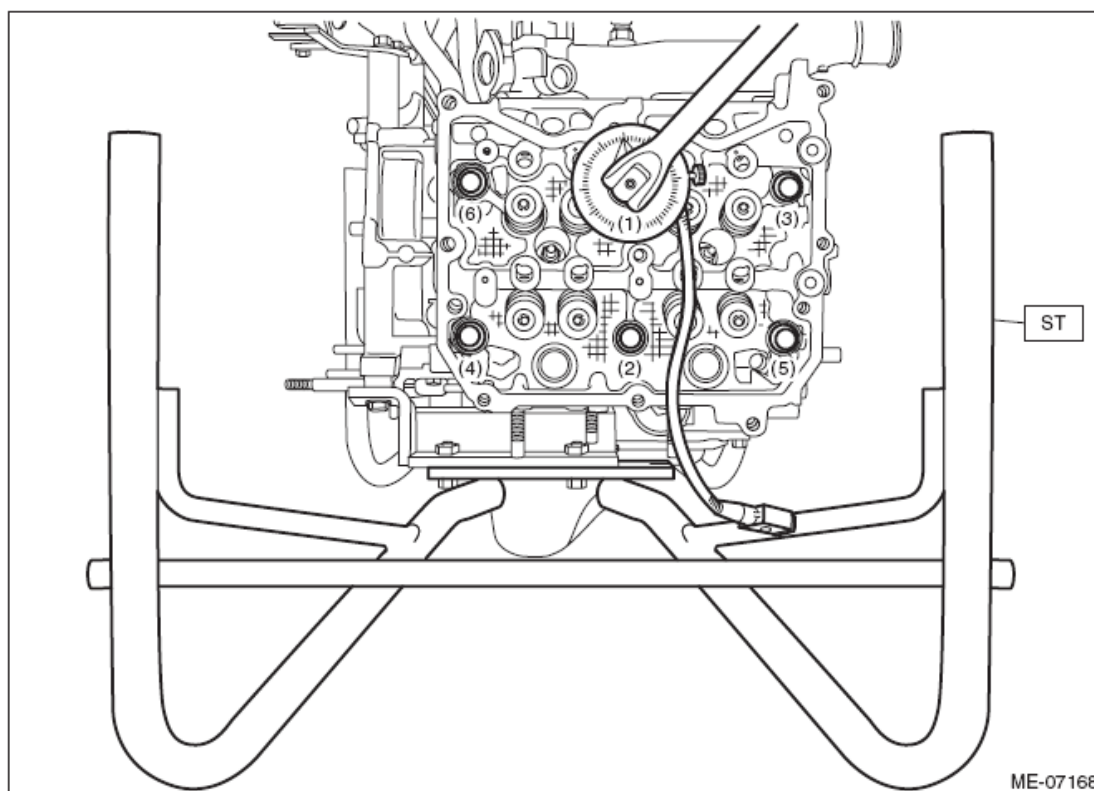


Fig. 435: Tightening Cylinder Head Mounting Bolts Using Tool
Courtesy of SUBARU OF AMERICA, INC.

7. Using angle gauge, tighten the cylinder head bolts (2 places) with specified angle in numerical order as shown in the figure.

ST 499817100 ENGINE STAND

Tightening angle:

$75^{\circ} \pm 2^{\circ}$

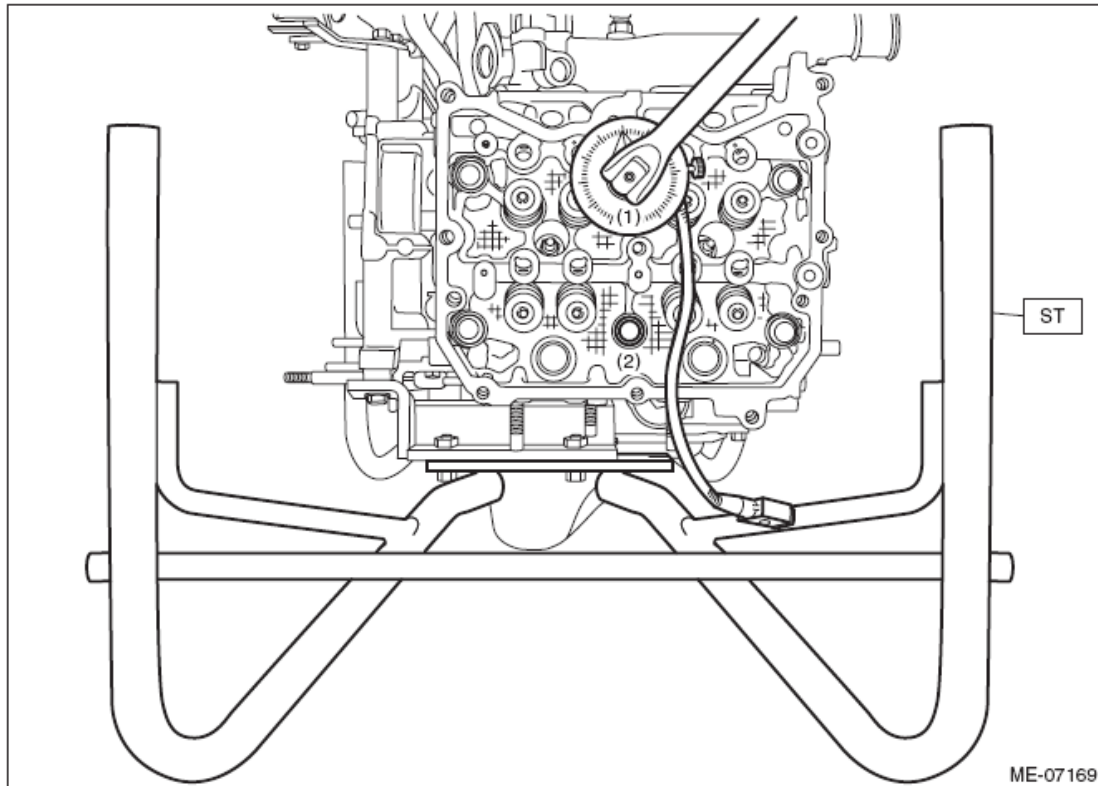


Fig. 436: Tightening Cylinder Head Mounting Bolts Using Tool (2 Places)
Courtesy of SUBARU OF AMERICA, INC.

8. Using angle gauge, tighten the cylinder head bolts (4 places) with specified angle in numerical order as shown in the figure.

NOTE: After tightening, if the liquid gasket is squeezed out onto the seal surface of the chain cover, completely remove any squeezed-out liquid gasket.

ST 499817100 ENGINE STAND

Tightening angle:

30°±2°

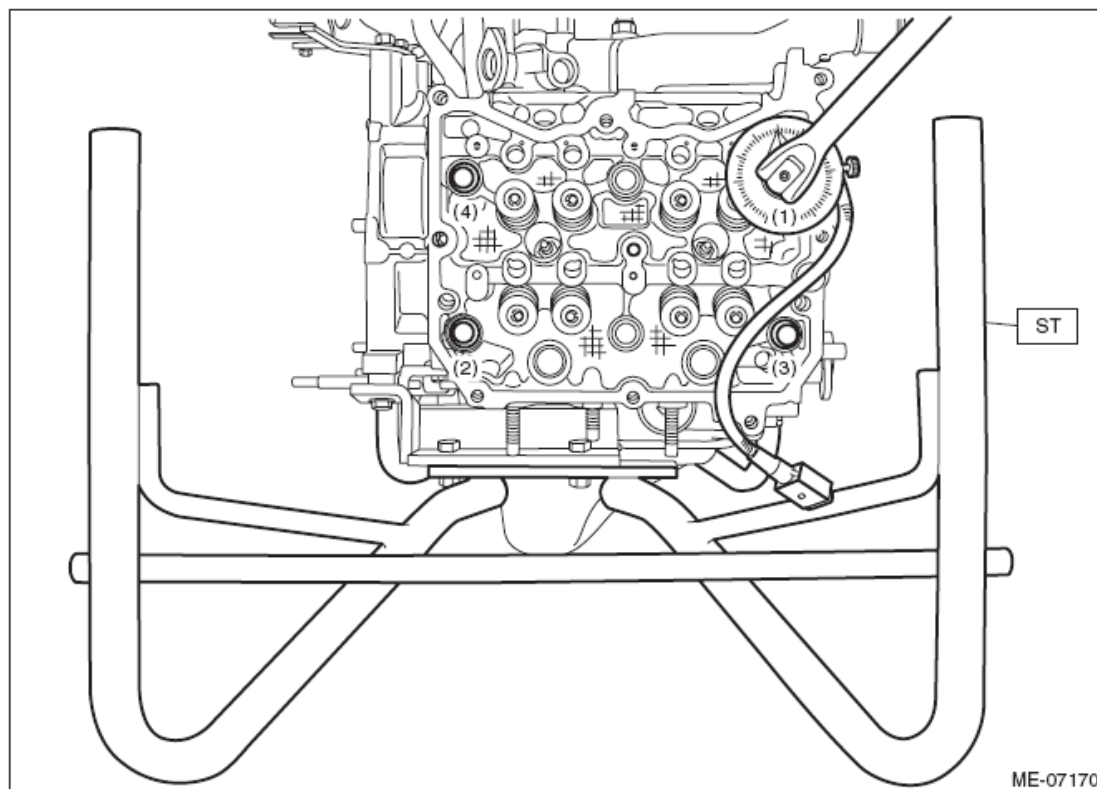


Fig. 437: Tightening Cylinder Head Mounting Bolts Using Tool (4 Places)
Courtesy of SUBARU OF AMERICA, INC.

5. Install the EGR pipe assembly to the water pipe assembly and the cylinder block RH. (Gasoline engine model)

NOTE: Use a new gasket.

Tightening torque:

T1: 6.4 N.m (0.7 kgf-m, 4.7 ft-lb)

T2: 51 N.m (5.2 kgf-m, 37.6 ft-lb)

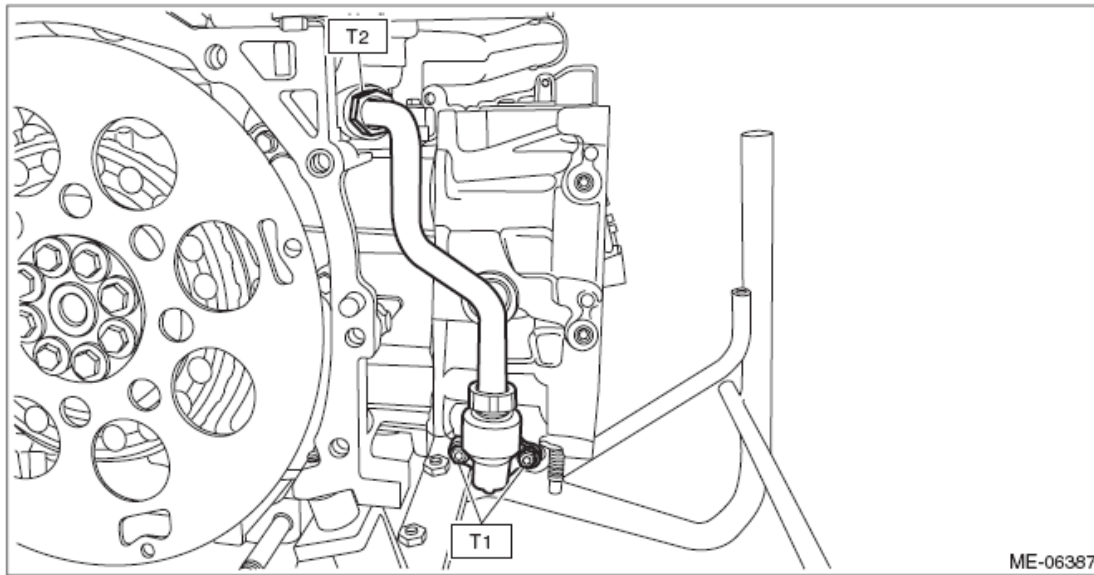


Fig. 438: Identifying EGR Pipe Assembly To Water Pipe Assembly Mounting Bolts
Courtesy of SUBARU OF AMERICA, INC.

6. Install the EGR cooler to the cylinder head RH. (HEV model)
 1. Set the EGR cooler to the cylinder head RH, and temporarily tighten the bolt and nut which secures the EGR cooler to the cylinder head RH.

NOTE: **Use a new gasket.**

2. Tighten the bolts and nuts which secure the EGR cooler to the cylinder head RH in numerical order as shown in the figure, and connect the engine coolant outlet hose to the EGR cooler.

Tightening torque:

T1: 6.4 N.m (0.7 kgf-m, 4.7 ft-lb)

T2: 9 N.m (0.9 kgf-m, 6.6 ft-lb)

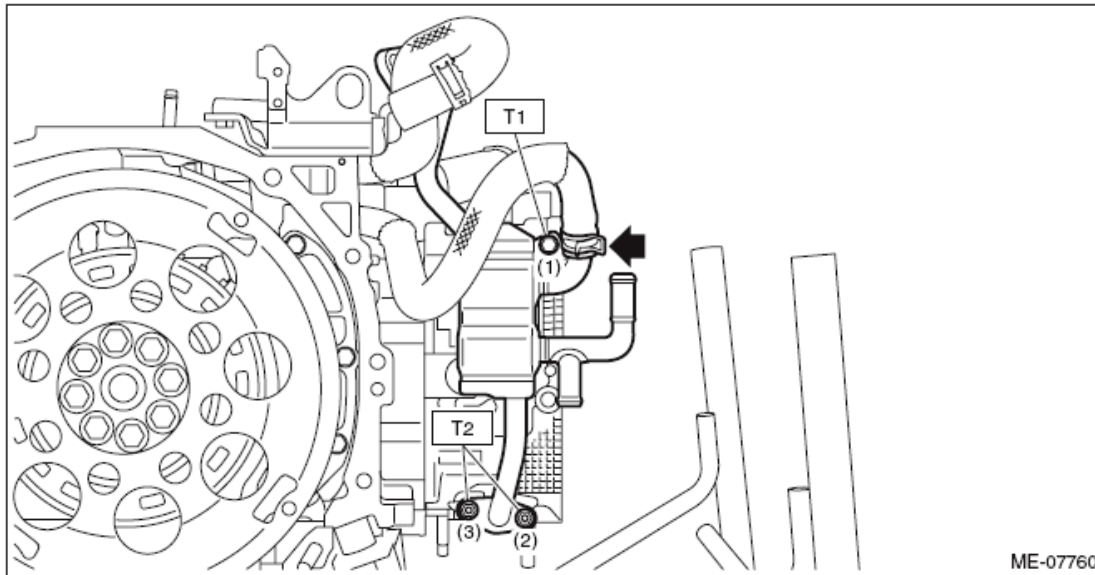


Fig. 439: Identifying EGR Cooler To Cylinder Head RH Mounting Bolts Tightening Sequence
 Courtesy of SUBARU OF AMERICA, INC.

7. Install the cam carrier RH. < Ref. to **CAM CARRIER RH**, INSTALLATION, Cam Carrier.>
8. Install the rocker cover RH. < Ref. to **ROCKER COVER RH**, INSTALLATION, Rocker Cover.>
9. Install the chain cover. < Ref. to **INSTALLATION**, Chain Cover.>
10. Install the tumble generator valve assembly RH. < Ref. to **INSTALLATION**, Tumble Generator Valve Assembly.> < Ref. to **INSTALLATION**, Tumble Generator Valve Assembly.>
11. Install the engine wiring harness. < Ref. to **INSTALLATION**, Engine Wiring Harness.> < Ref. to **INSTALLATION**, Engine Wiring Harness.>
12. Install the intake manifold. < Ref. to **INSTALLATION**, Intake Manifold.> < Ref. to **INSTALLATION**, Intake Manifold.>
13. Install the engine to the vehicle. < Ref. to **INSTALLATION**, Engine Assembly.>

CYLINDER HEAD LH


1. Clean the bolt holes in the cylinder block LH.

CAUTION: To avoid erroneous tightening of the bolts, clean out the bolt holes sufficiently by blowing with compressed air to eliminate engine coolant etc.

2. Apply liquid gasket to both sides of the cylinder head gasket LH as shown in the figure.

NOTE:

- Use a new cylinder head gasket LH.
- Before applying liquid gasket, degrease the mating surface of cylinder blocks LH and cylinder head LH.
- Install within 5 min. after applying liquid gasket.

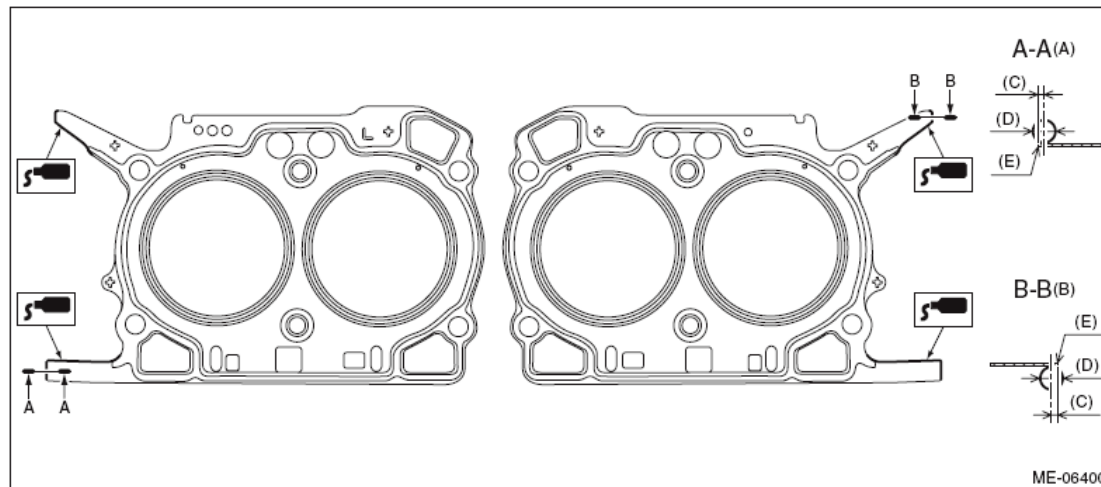Liquid gasket:**THREE BOND 1217G (Part No. 0877Y0100) or equivalent****Liquid gasket applying diameter:** **3 ± 1 mm (0.1181 ± 0.0394 in)**

- | | | |
|--|---|-------------------------------|
| (A) Liquid gasket applying position to the cylinder head side | (C) 1 mm (0.0394 in) or less | (E) Cylinder head gasket edge |
| (B) Liquid gasket applying position to the cylinder block side | (D) $\phi 3\pm 1$ mm (0.1181 ± 0.0394 in) | |

Fig. 440: Identifying Liquid Gasket Applying Dimension On Cylinder Head
 Courtesy of SUBARU OF AMERICA, INC.

3. Attach the cylinder head gasket LH.

NOTE: Check that liquid gasket is squeezed out from the cylinder head gasket LH.

4. Install the cylinder head LH to the cylinder block LH.

CAUTION: Be careful not to scratch the mating surface of cylinder head LH and cylinder block LH.

1. Clean the cylinder head bolt threads and apply sufficient engine oil to the washer and cylinder head bolts threads.
2. Mount the cylinder head LH onto the cylinder block LH, then tighten all bolts with a torque of 29 N.m (3.0 kgf-m, 21.4 ft-lb) in numerical order as shown in the figure.

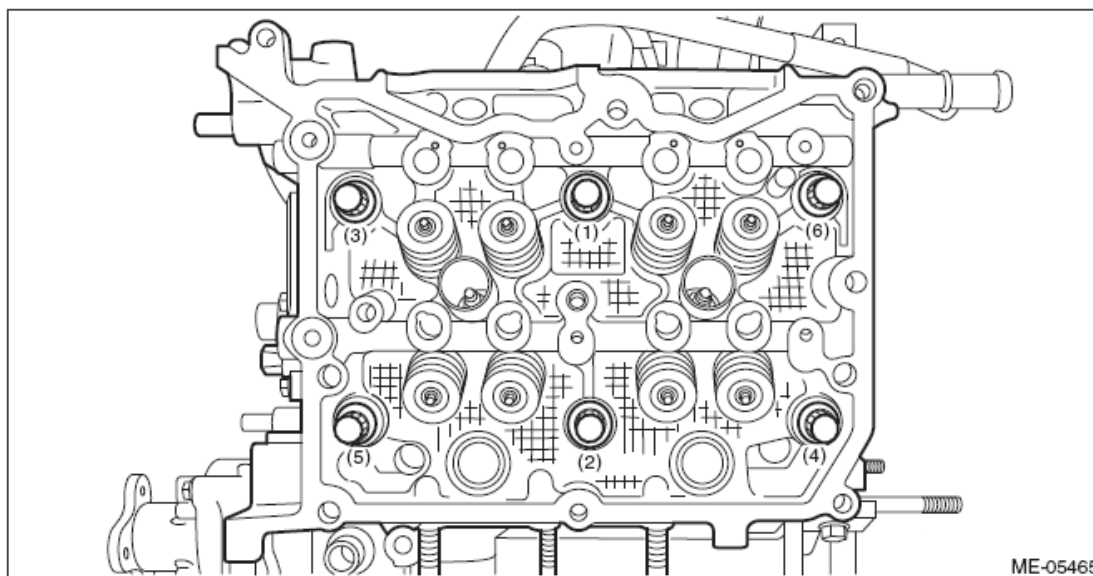


Fig. 441: Identifying Cylinder Head LH To Cylinder Block LH Mounting Bolts Tightening Sequence

Courtesy of SUBARU OF AMERICA, INC.

3. Tighten all cylinder head bolts further with a torque of 100 N.m (10.2 kgf-m, 73.8 ft-lb) in numerical order as shown in the figure.

CAUTION: If the bolt makes stick-slip sound during tightening, repeat the procedure from step 1). In that case, the cylinder head gasket LH can be reused. But it is necessary to remove liquid gasket completely from cylinder block LH, cylinder head LH and cylinder head gasket LH and re-apply to them.

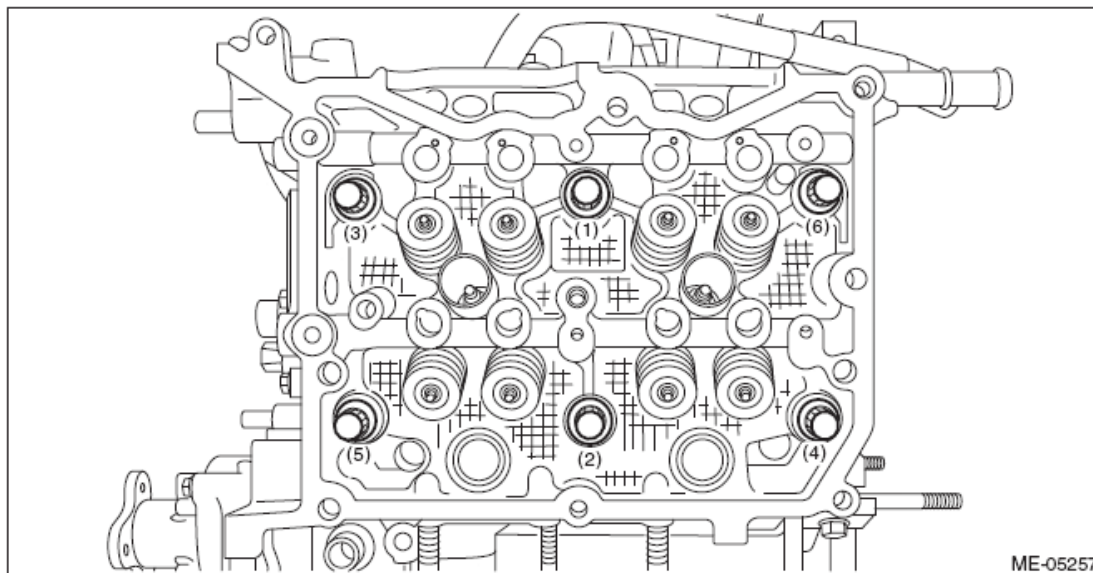


Fig. 442: Identifying Cylinder Head Mounting Bolts Tightening Sequence
Courtesy of SUBARU OF AMERICA, INC.

4. Loosen all cylinder head bolts 180° in numerical order as shown in the figure, and then loosen all cylinder head bolts 180° further in numerical order as shown in the figure.

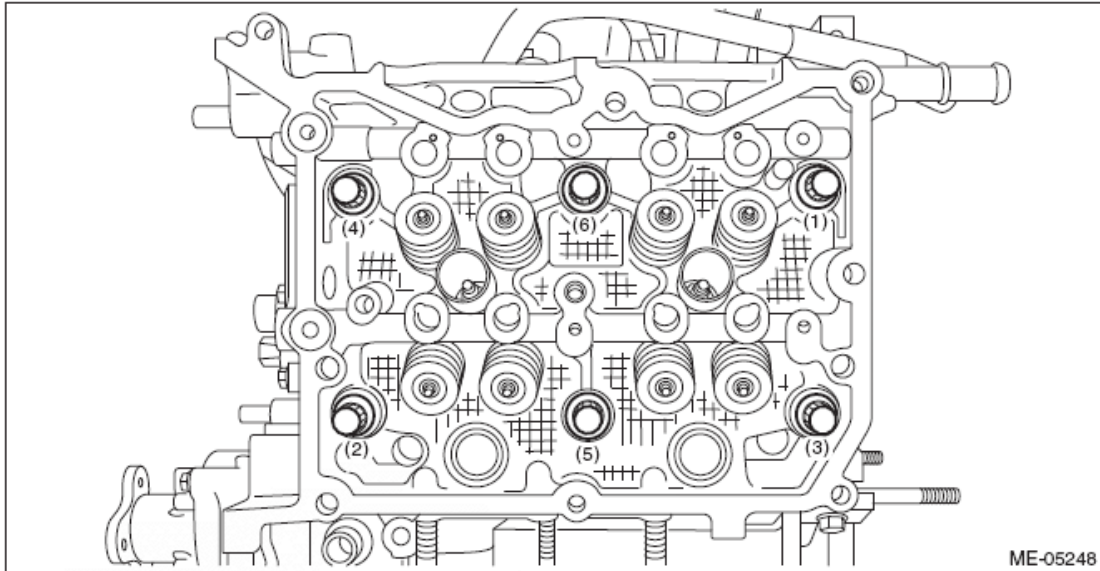


Fig. 443: Identifying Cylinder Head Mounting Bolts Loosening Sequence
Courtesy of SUBARU OF AMERICA, INC.

5. Tighten all cylinder head bolts with a torque of 42 N.m (4.3 kgf-m, 31.0 ft-lb) in numerical order as shown in the figure.

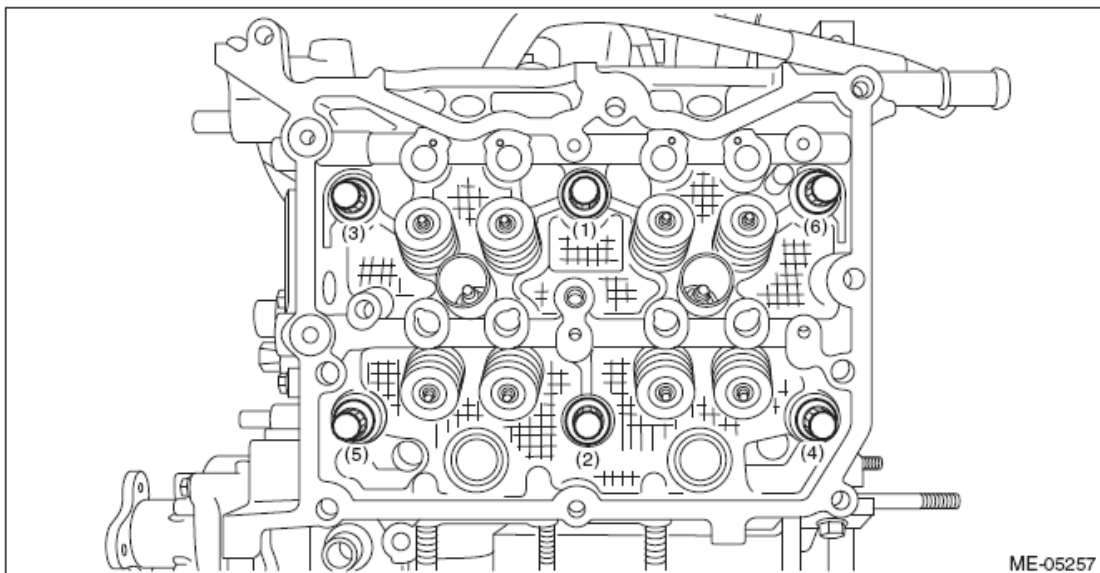


Fig. 444: Identifying Cylinder Head Mounting Bolts Tightening Sequence
Courtesy of SUBARU OF AMERICA, INC.

6. Using angle gauge, tighten all cylinder head bolts with specified angle in numerical order as shown in the figure.

ST 499817100 ENGINE STAND

Tightening angle:

$80^{\circ} \pm 2^{\circ}$

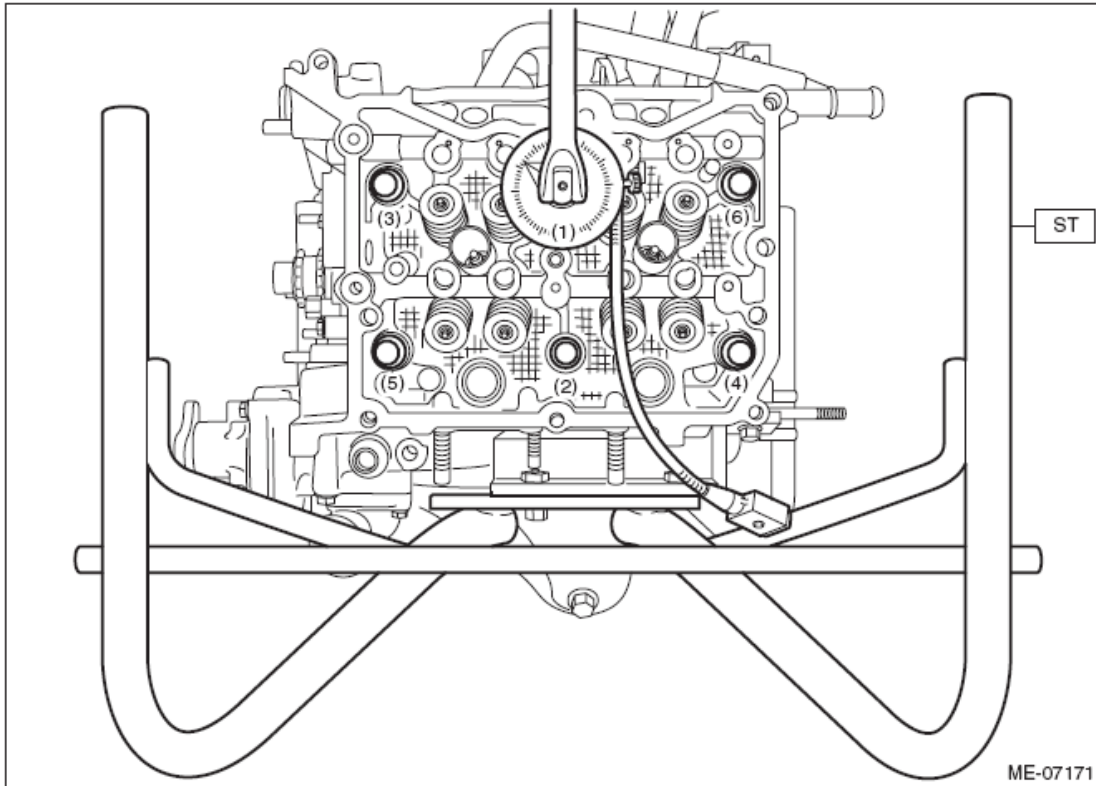


Fig. 445: Tightening Cylinder Head Mounting Bolts Using Tool
Courtesy of SUBARU OF AMERICA, INC.

7. Using angle gauge, tighten the cylinder head bolts (2 places) with specified angle in numerical order as shown in the figure.

ST 499817100 ENGINE STAND

Tightening angle:

$75^{\circ} \pm 2^{\circ}$

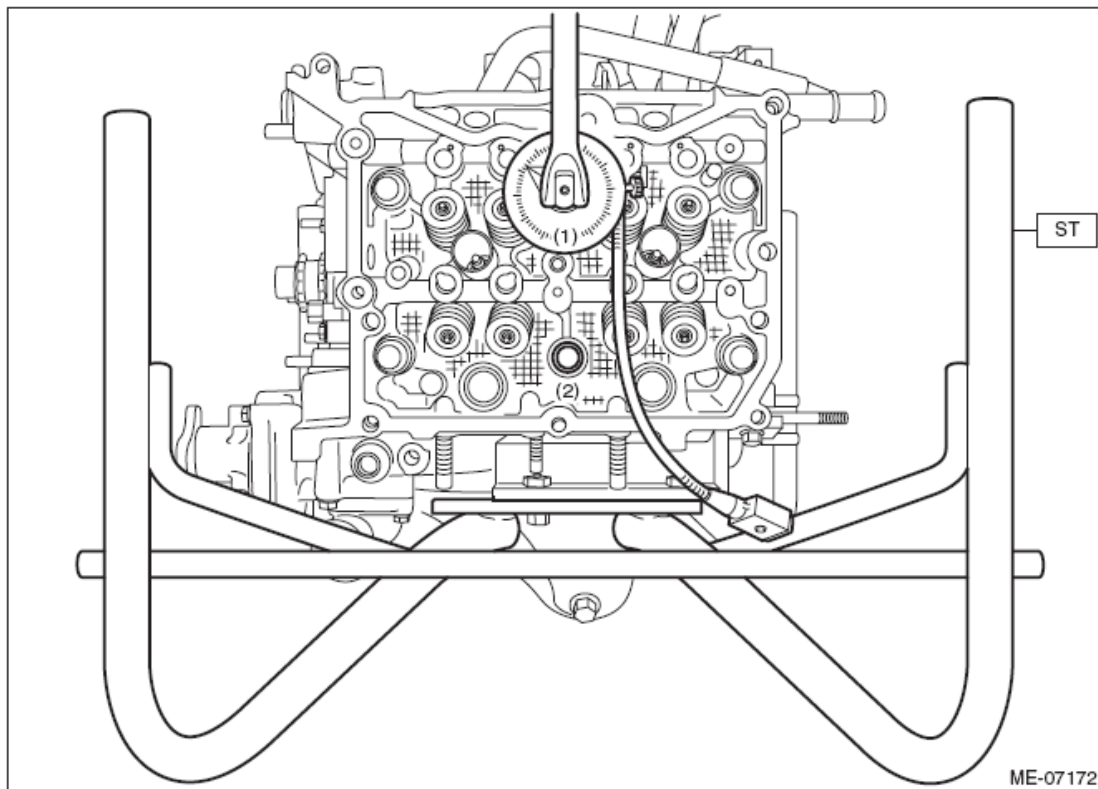


Fig. 446: Tightening Cylinder Head Mounting Bolts Using Tool
Courtesy of SUBARU OF AMERICA, INC.

8. Using angle gauge, tighten the cylinder head bolts (4 places) with specified angle in numerical order as shown in the figure.

NOTE: After tightening, if the liquid gasket is squeezed out onto the seal surface of the chain cover, completely remove any squeezed-out liquid gasket.

ST 499817100 ENGINE STAND

Tightening angle:

30°±2°

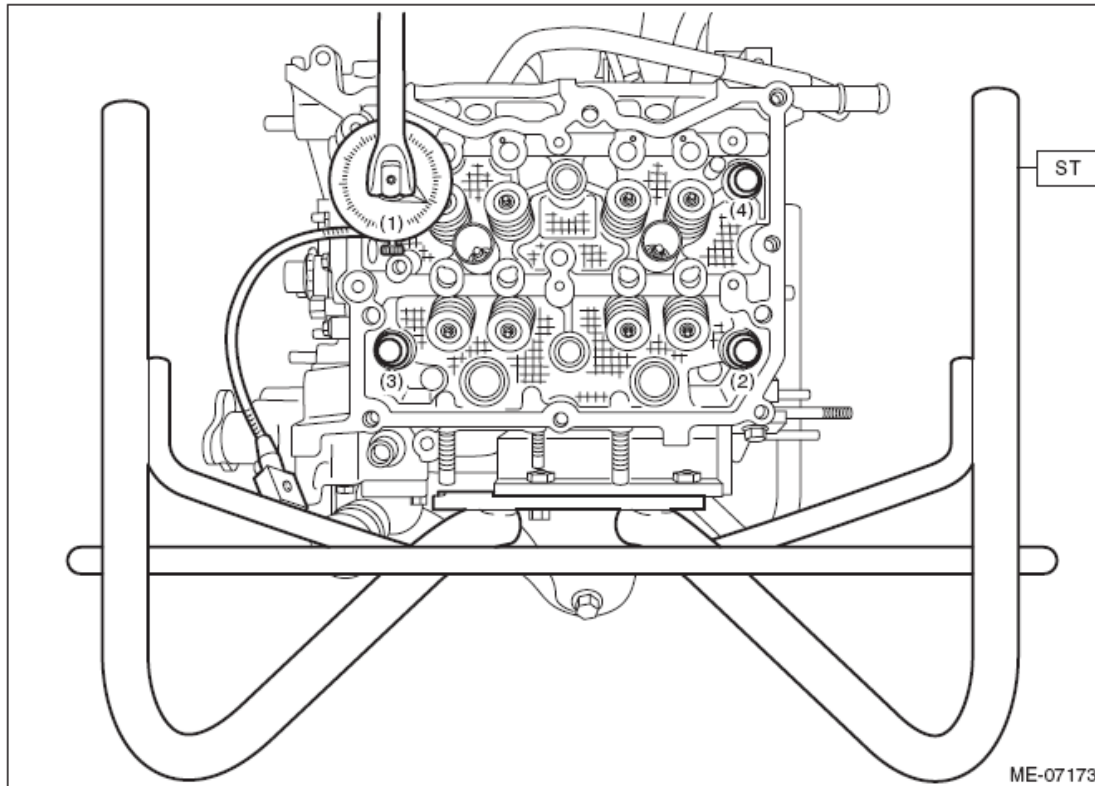


Fig. 447: Tightening Cylinder Head Mounting Bolts Using Tool
 Courtesy of SUBARU OF AMERICA, INC.

5. Install the A/C compressor. < Ref. to **INSTALLATION** , Compressor.>
6. Install the cam carrier LH. < Ref. to **CAM CARRIER LH**, INSTALLATION, Cam Carrier.>
7. Install the rocker cover LH. < Ref. to **ROCKER COVER LH**, INSTALLATION, Rocker Cover.>
8. Install the chain cover. < Ref. to **INSTALLATION**, Chain Cover.>
9. Install the tumble generator valve assembly LH. < Ref. to **INSTALLATION** , Tumble Generator Valve Assembly.> < Ref. to **INSTALLATION** , Tumble Generator Valve Assembly.>
10. Install the engine wiring harness. < Ref. to **INSTALLATION** , Engine Wiring Harness.> < Ref. to **INSTALLATION** , Engine Wiring Harness.>
11. Install the intake manifold. < Ref. to **INSTALLATION** , Intake Manifold.> < Ref. to **INSTALLATION** , Intake Manifold.>
12. Install the engine to the vehicle. < Ref. to **INSTALLATION**, Engine Assembly.>

DISASSEMBLY

1. Remove the chain cover securing bolt from the cylinder head LH.

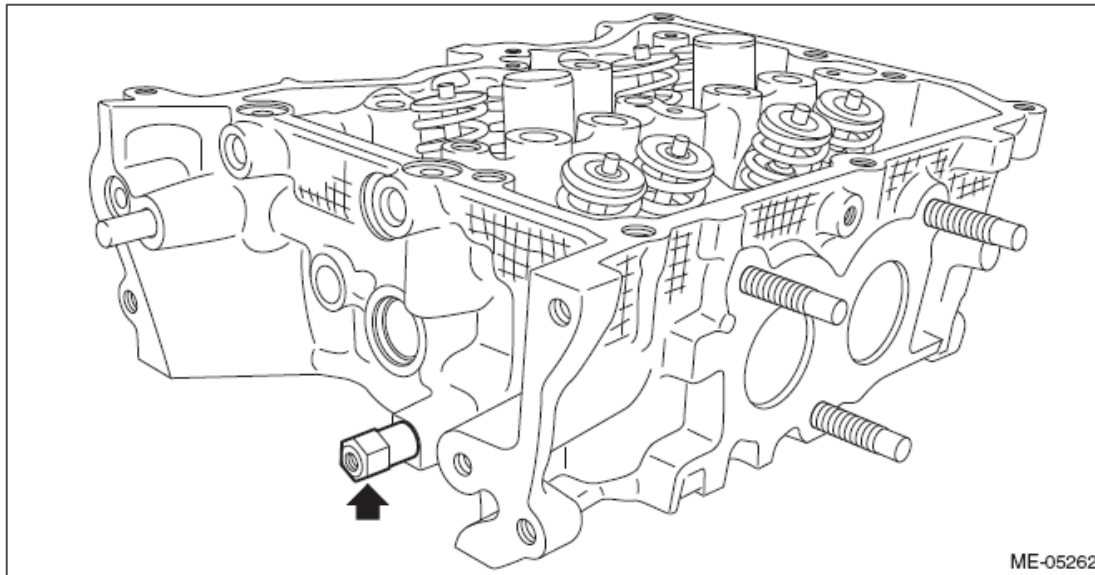


Fig. 448: Locating Chain Cover Securing Bolt
Courtesy of SUBARU OF AMERICA, INC.

2. Remove the stud bolts from the cylinder head.

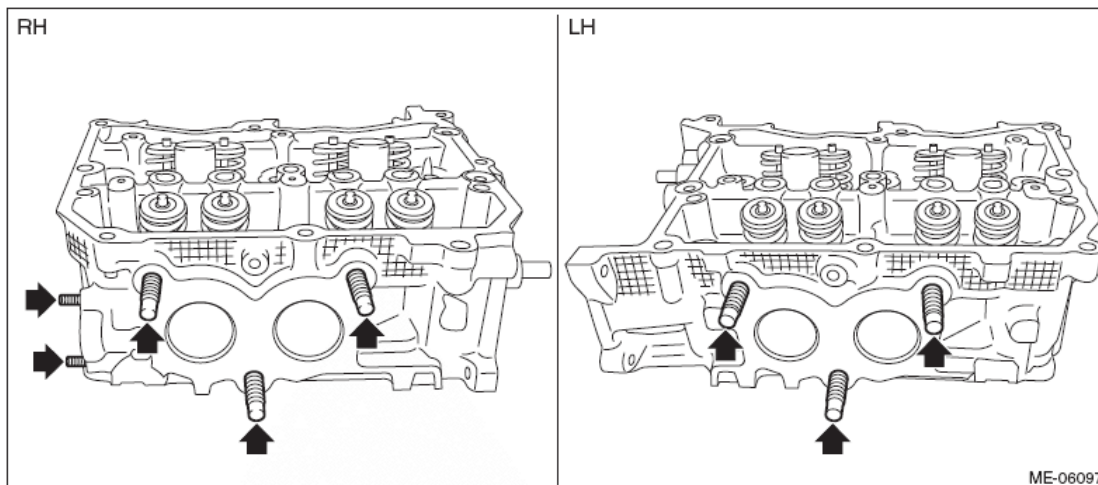


Fig. 449: Locating Cylinder Head Stud Bolts
Courtesy of SUBARU OF AMERICA, INC.

3. Remove the valve collet, valve, valve spring retainer, valve spring and valve spring seat from the cylinder head RH.

CAUTION: During work, place a waste cloth, etc. to avoid scratching the mating surface of the cylinder head RH.

NOTE:

- Mark each part to prevent confusion.

- **Keep all the removed parts in order for re-installing in their original positions.**

1. Compress the valve spring and remove the valve collet using ST.

ST 0920287002000 REMOVER AND REPLACER

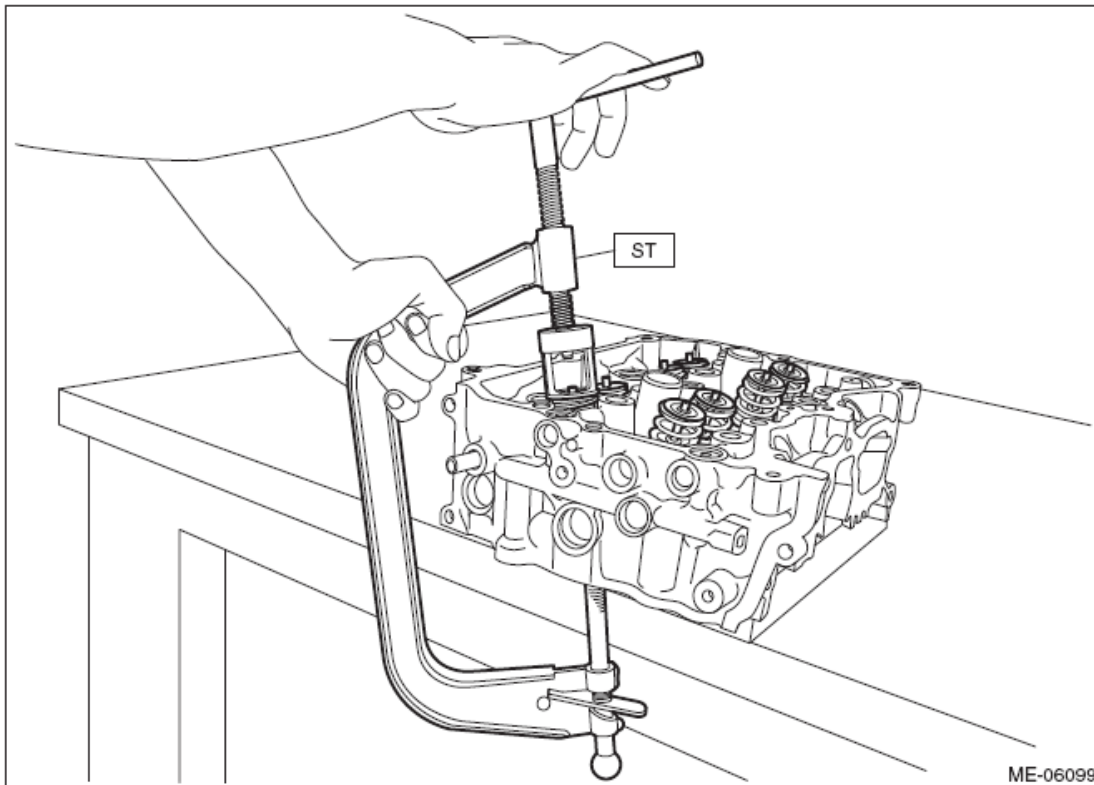


Fig. 450: Removing Valve Collet Using Tool
Courtesy of SUBARU OF AMERICA, INC.

2. Remove valve, valve spring retainer, valve spring and valve spring seat.
4. Remove the valve collet, valve, valve spring retainer, valve spring and valve spring seat from the cylinder head LH.
5. Remove the valve oil seals from valve guides of cylinder head RH.

CAUTION:

- During work, place a waste cloth, etc. to avoid scratching the mating surface of the cylinder head RH.
- Use special care not to damage the cylinder head RH and guide during work.

NOTE:

For removal of valve guide, refer to INSPECTION. < Ref. to VALVE & VALVE GUIDE, INSPECTION, Cylinder Head.>


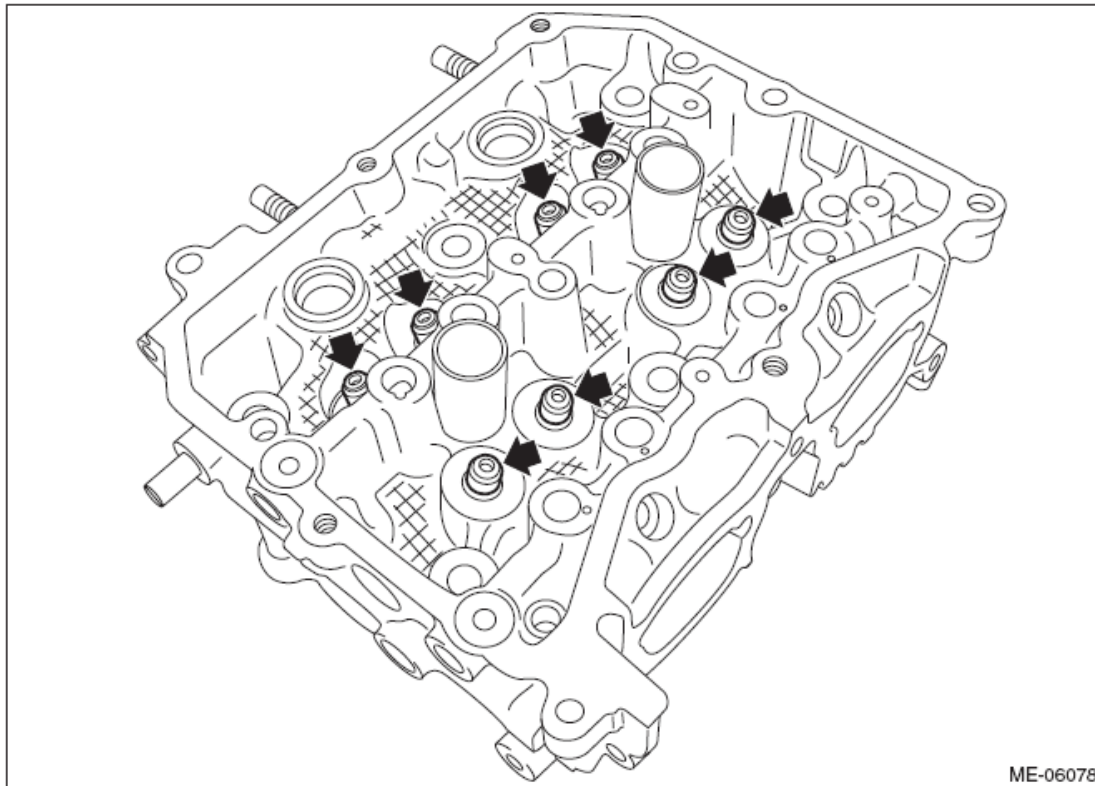


Fig. 451: Locating Valve Guides Of Cylinder Head RH
Courtesy of SUBARU OF AMERICA, INC.

6. For cylinder head LH, remove the valve oil seal in the same manner.

ASSEMBLY

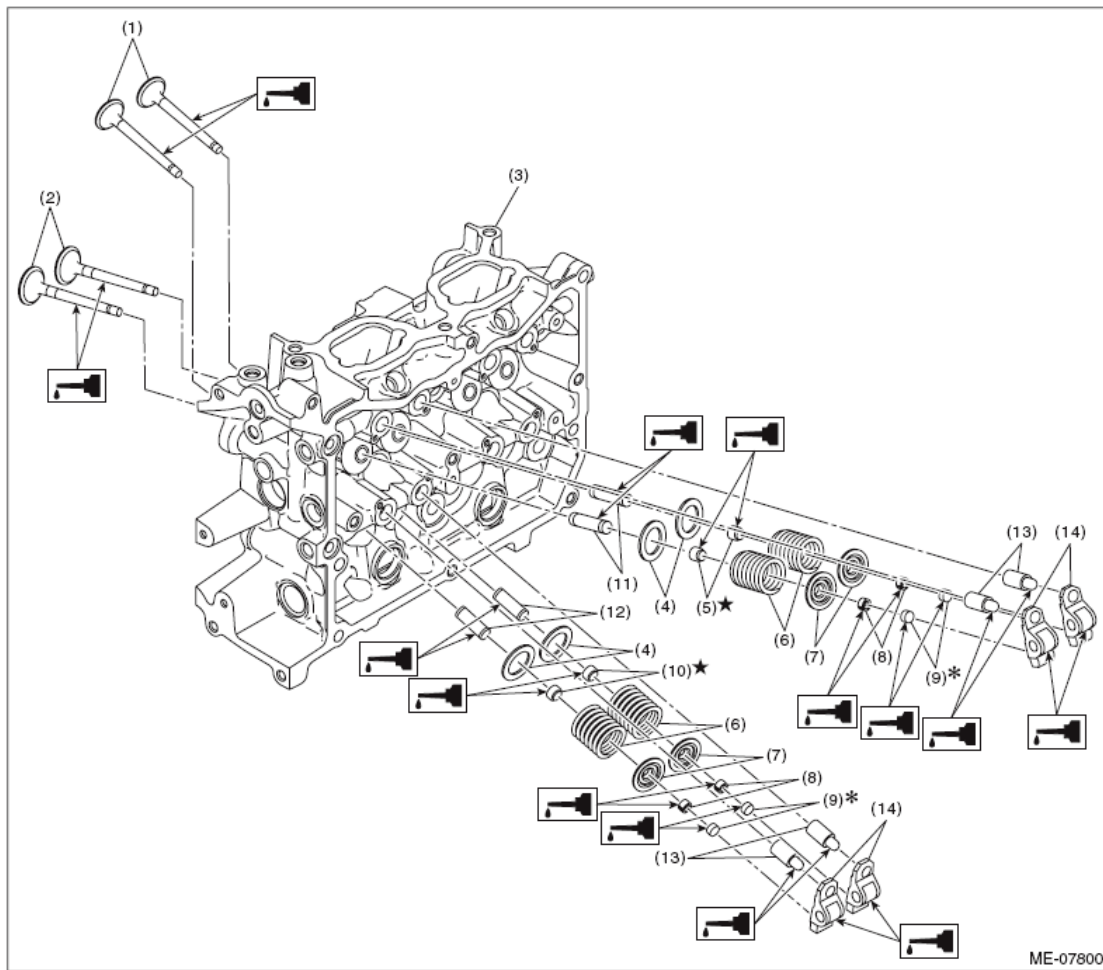

- | | | |
|---------------------------|-----------------------------|------------------------------|
| (1) Exhaust valve | (6) Valve spring | (11) Intake valve guide |
| (2) Intake valve | (7) Valve spring retainer | (12) Exhaust valve guide |
| (3) Cylinder head | (8) Valve collet | (13) Roller rocker arm pivot |
| (4) Valve spring seat | (9) Valve shim | (14) Roller rocker arm |
| (5) Intake valve oil seal | (10) Exhaust valve oil seal | |

Fig. 452: Disassembled View Of Cylinder Head
Courtesy of SUBARU OF AMERICA, INC.

1. Using the ST, install the valve oil seals to valve guides of cylinder head RH.

CAUTION:

- During work, place a waste cloth, etc. to avoid scratching the mating surface of the cylinder head RH.
- Use special care not to damage the cylinder head RH and guide during work.
- When installing the valve oil seal, press the ST with hands to install it and never drive the ST with a plastic hammer, otherwise the valve oil seal can be damaged.

NOTE:

- Use a new valve oil seal.

- Apply engine oil to valve oil seal before installing.
- The intake valve oil seals and exhaust valve oil seals are distinguished by their colors.

Identification colors:

Intake [Gray]

Exhaust [Green]

- For installation of valve guide, refer to INSPECTION. < Ref. to VALVE & VALVE GUIDE, INSPECTION, Cylinder Head.>

ST 18261AA010 VALVE OIL SEAL GUIDE

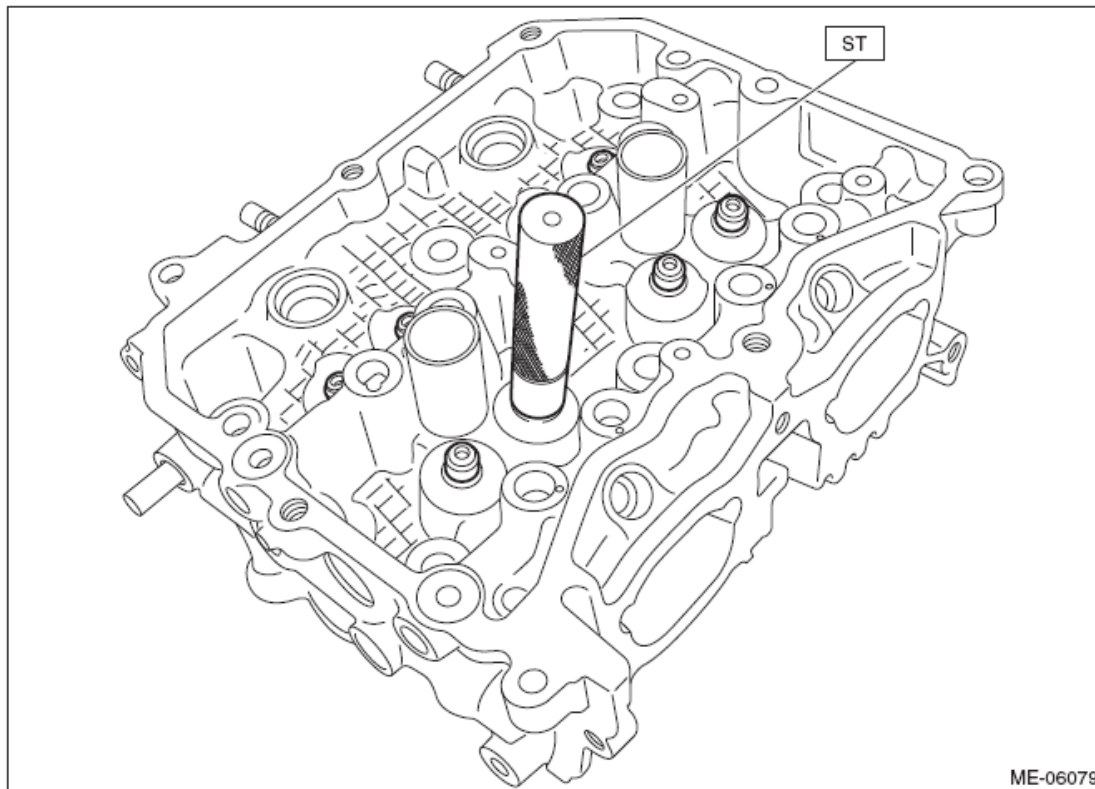


Fig. 453: Installing Valve Oil Seals To Valve Guides Of Cylinder Head RH Using Tool
Courtesy of SUBARU OF AMERICA, INC.

2. For cylinder head LH, install the valve oil seal in the same manner.
3. Install the valve spring seat, valve spring, valve spring retainer, valve and valve collet to the cylinder head RH.

CAUTION: During work, place a waste cloth, etc. to avoid scratching the mating

surface of the cylinder head RH.

1. Set the valve spring seat, valve spring and valve spring retainer onto the cylinder head RH.

NOTE: Be sure to install the valve spring with its close-coiled end facing the cylinder head side.

2. Coat the valve stem of each valve with engine oil and insert the valve into valve guide.

NOTE: When inserting the valve into valve guide, use special care not to damage the oil seal lip.

3. Compress the valve spring and install the valve collet using ST.

ST 0920287002000 REMOVER AND REPLACER

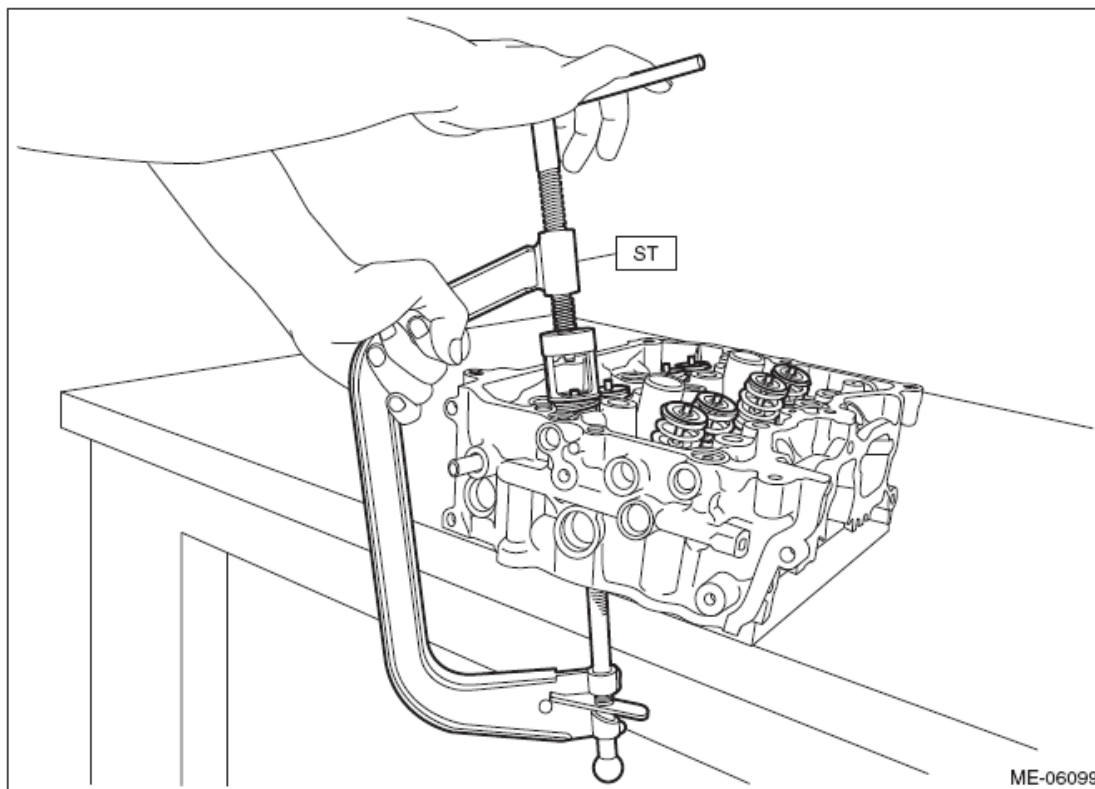


Fig. 454: Installing Valve Collet Using Tool
Courtesy of SUBARU OF AMERICA, INC.

4. Install the valve spring seat, valve spring, valve spring retainer, valve and valve collet to the cylinder head LH.
5. Lightly tap the valve spring retainer with a plastic hammer, and make sure that the valve collet is securely attached.

6. Install the stud bolts onto cylinder heads.

Tightening torque:

T1: 6.4 N.m (0.7 kgf-m, 4.7 ft-lb)

T2: 18 N.m (1.8 kgf-m, 13.3 ft-lb)

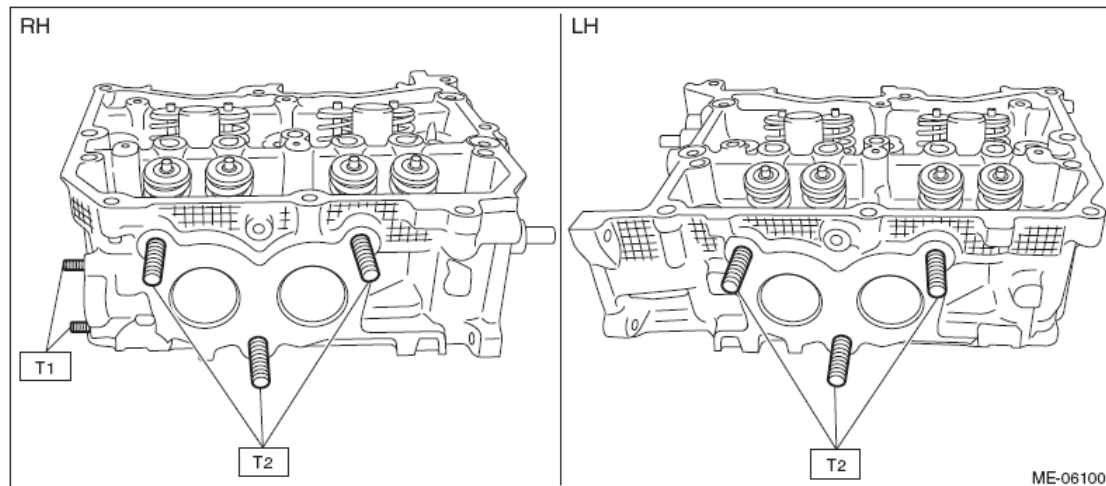


Fig. 455: Identifying Cylinder Head Stud Bolts
Courtesy of SUBARU OF AMERICA, INC.

7. Install the chain cover securing bolt to the cylinder head LH.

Tightening torque:

6.4 N.m (0.7 kgf-m, 4.7 ft-lb)

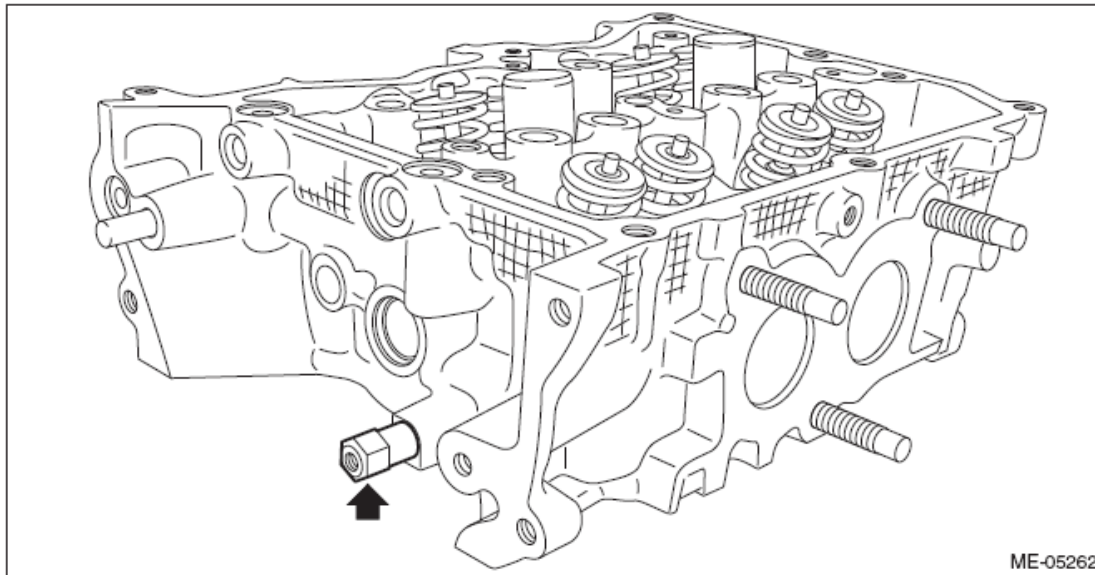


Fig. 456: Identifying Chain Cover Securing Bolt
 Courtesy of SUBARU OF AMERICA, INC.

INSPECTION

CYLINDER HEAD

1. Visually inspect to make sure that there are no cracks, scratches or other damage.
2. Use liquid penetrant tester on the important sections to check for fissures.
3. Check that there are no marks of gas leaking or water leaking on gasket attachment surface.
4. Check the warping of the cylinder head mating surface that mates with cylinder block at the locations shown in the figure using a straight edge (A) and thickness gauge (B). If it exceeds the limit, correct the surface by grinding it with a surface grinder or replace the cylinder head.

NOTE:

- Measurement should be performed at a temperature of 20°C (68°F).
- If there is warpage on the cylinder head mating surface, the cylinder head bolt tightening torque and angle tightening may be improper. When installing the cylinder head, make sure that tightening torque and angle tightening work is performed precisely according to the operation procedures.
- When the cylinder head is replaced, lap each valve. Refer to "VALVE SEAT" for lapping. < Ref. to VALVE SEAT, INSPECTION, Cylinder Head.>

Cylinder head warpage:

Limit

0.035 mm (0.0014 in)

Cylinder head grinding limit:

To 98.4 mm (3.874 in)

Cylinder head height:

Standard

98.5 mm (3.878 in)

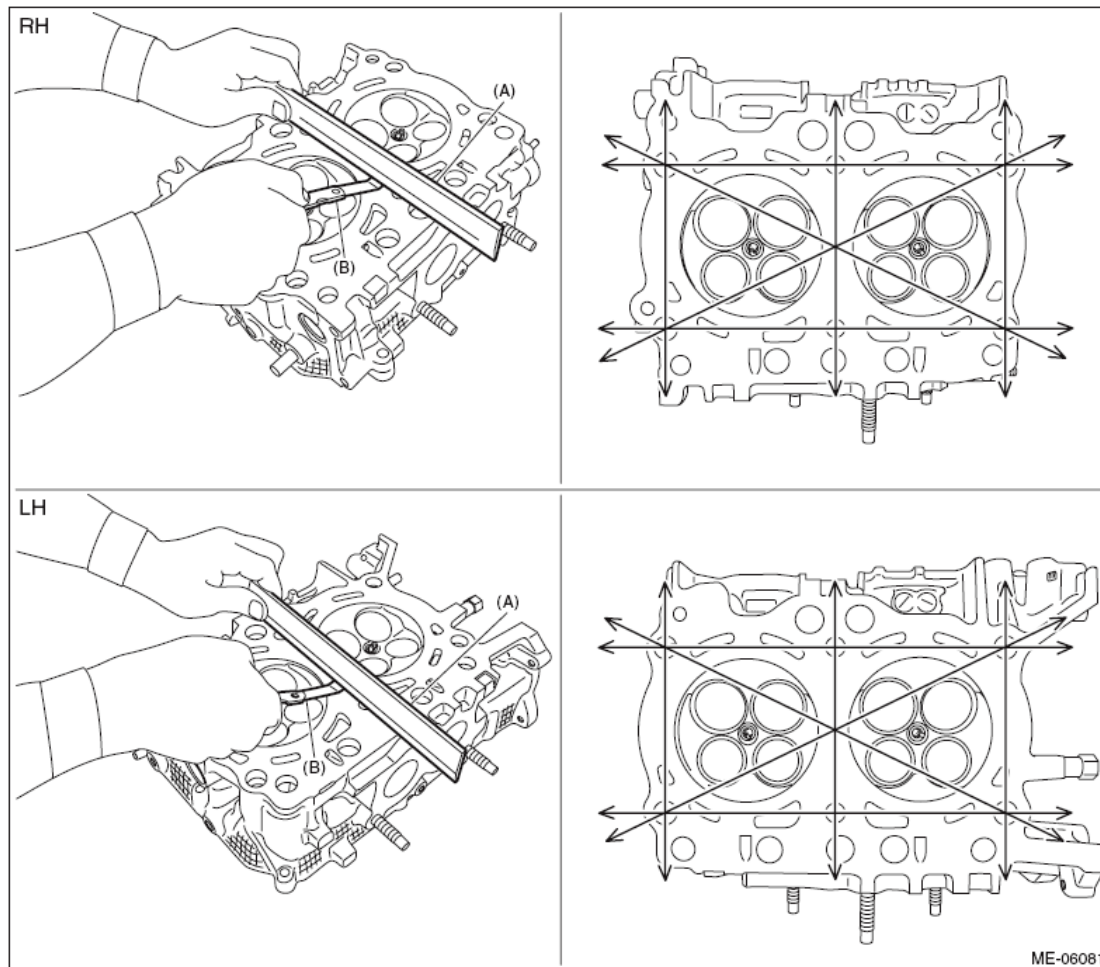


Fig. 457: Checking Warping Of Cylinder Head Mating Surface Using Straight Edge And Thickness Gauge

Courtesy of SUBARU OF AMERICA, INC.

VALVE & VALVE GUIDE

1. Check the valve flange and stem for damage, wear or deformation.
2. Measure the thickness "H" of valve head edge as shown in the figure using a caliper gauge. If it is not within the standard, replace the valve.

NOTE:

- It is possible to differentiate between the intake valve and the exhaust valve by their overall length.

Valve overall length:**Intake****104.95 mm (4.132 in)****Exhaust****96.5 mm (3.799 in)**

- When the valve is replaced, lap the valve. Refer to "VALVE SEAT" for lapping. < Ref. to VALVE SEAT, INSPECTION, Cylinder Head.>

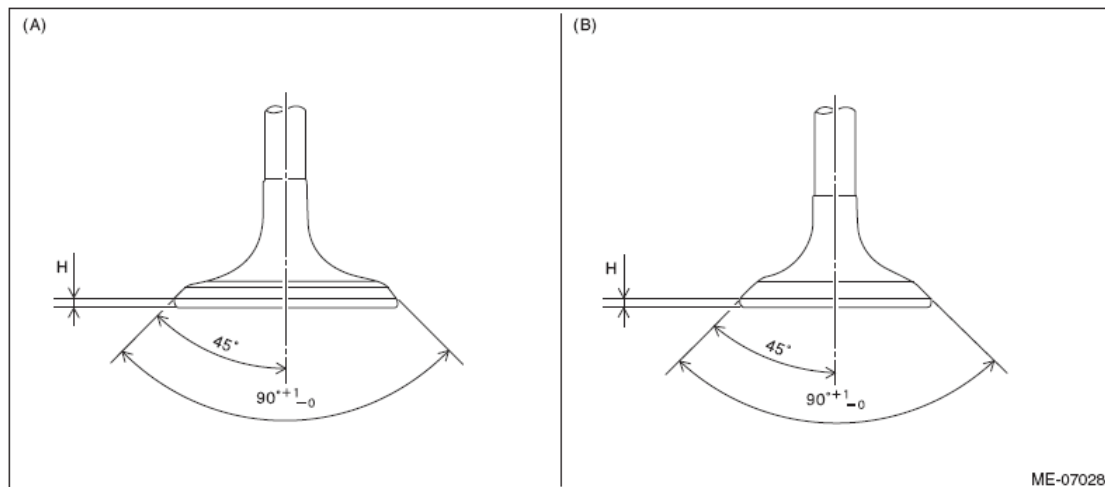
Valve head edge thickness H:**Intake (A)****Standard****0.8 - 1.2 mm (0.031 - 0.047 in)****Exhaust (B)****Standard****1.0 - 1.4 mm (0.039 - 0.055 in)**

Fig. 458: Identifying Valve Head Edge Thickness
 Courtesy of SUBARU OF AMERICA, INC.

3. Check the clearance between valve and valve guide. Check the clearance between valve and valve guide by measuring the outer diameter of valve stem and the inner diameter of valve guide respectively.
 1. Measure the outer diameter of valve stem with a micrometer. If it is not within the standard, replace the valve.

NOTE:

- Measurement should be performed at a temperature of 20°C (68° F).
- Measure the outer diameter of the valve stem at the six locations as shown in the figure, and read the value of most worn location.
- When the valve is replaced, lap the valve. Refer to "VALVE SEAT" for lapping. < Ref. to VALVE SEAT, INSPECTION, Cylinder Head.>

Valve stem outer diameter:

Intake

Standard

5.455 - 5.470 mm (0.2148 - 0.2154 in)

Exhaust

Standard

5.445 - 5.460 mm (0.2144 - 0.2150 in)

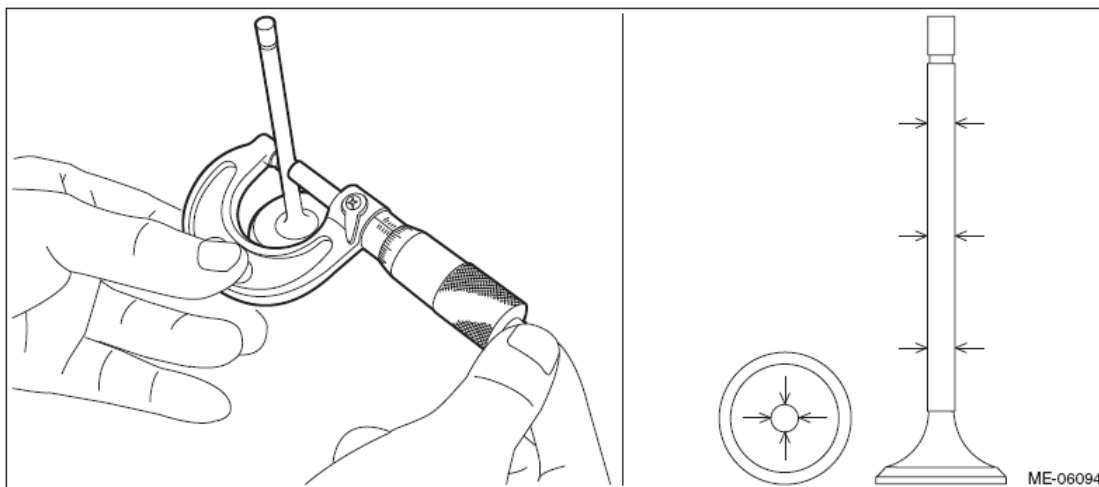


Fig. 459: Measuring Valve Stem Outer Diameter Using Tool
Courtesy of SUBARU OF AMERICA, INC.

- Using a caliper gauge, measure the inner diameter of valve guide. If it is not within the standard, replace the valve guide. For replacement procedure, refer to step 4.

NOTE:

- Measurement should be performed at a temperature of 20°C (68° F).
- Measure the inner diameter of the valve guide at the six locations as shown in the figure, and read the value of most worn location.

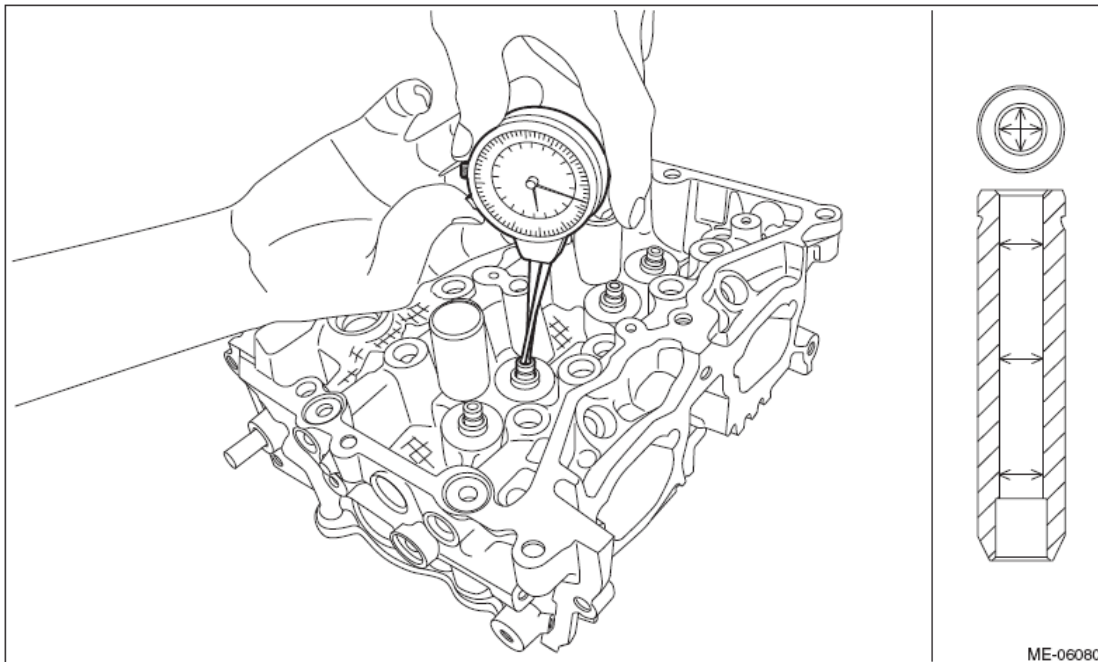
Valve guide inner diameter:***Standard******5.500 - 5.512 mm (0.2165 - 0.2170 in)***

Fig. 460: Measuring Clearance Between Valve And Valve Guide Using Tool
Courtesy of SUBARU OF AMERICA, INC.

- Calculate the clearance between valve and valve guide.

Clearance between valve and valve guide:***Intake******Standard******0.030 - 0.057 mm (0.0012 - 0.0022 in)***

Exhaust***Standard******0.040 - 0.067 mm (0.0016 - 0.0026 in)***

4. If the clearance between valve and valve guide exceeds the standard, replace the valve or valve guide, whichever shows the greater amount of wear or damage. For replacement procedure of valve guide, refer to the following.

NOTE: **When the valve is replaced, lap the valve. Refer to "VALVE SEAT" for lapping. < Ref. to VALVE SEAT, INSPECTION, Cylinder Head.>**

1. Insert ST into the valve guide with the combustion chamber upward and remove the valve guide using plastic hammer.

CAUTION:

- **Place a wood board wrapped with a waste cloth to stabilize the cylinder head before work.**
- **Use special care not to damage the cylinder head during work.**
- **Always strike the ST vertically with a plastic hammer. Otherwise, the ST can be damaged.**

ST 499765700 VALVE GUIDE REMOVER AND INSTALLER

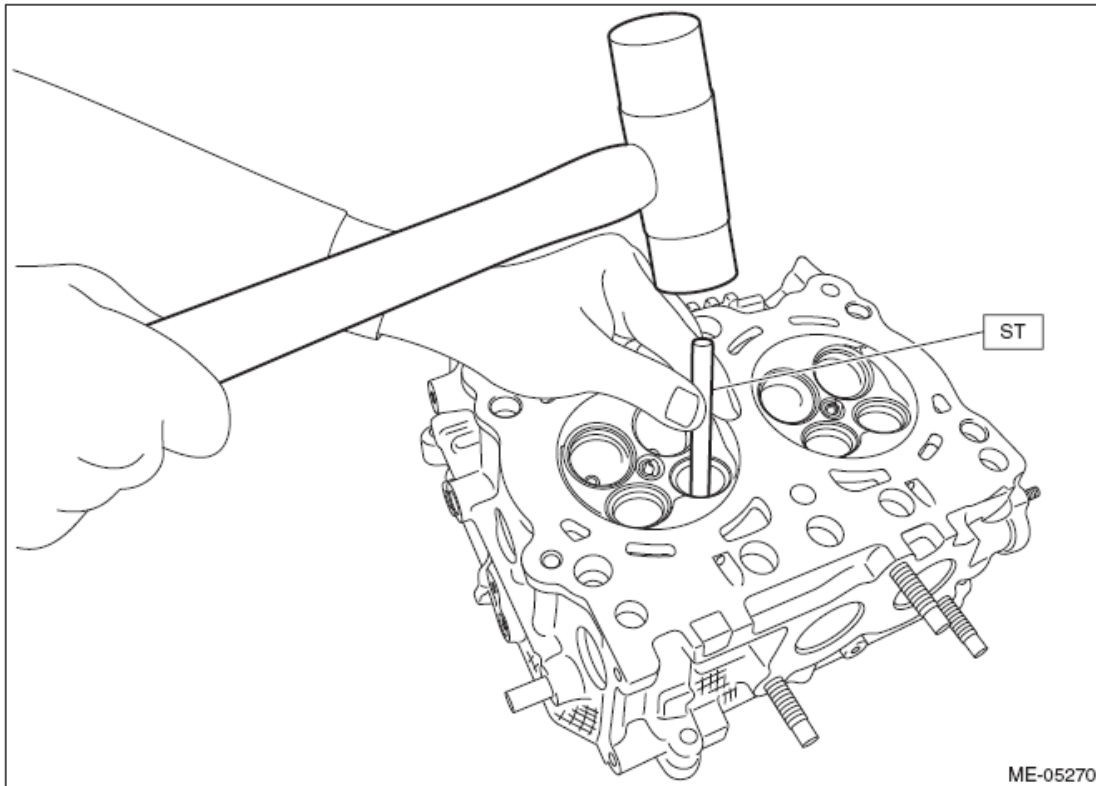


Fig. 461: Inserting Valve Guide Remover/Installer Into Valve Guide Using Tool
Courtesy of SUBARU OF AMERICA, INC.

2. Before installing the valve guide, make sure that neither scratches nor damages exist on the inner surface of valve guide installation holes of cylinder head.
3. Draw a reference line (A) for insert on the valve guide using a marker as shown in the figure.

NOTE:

- Use a new valve guide.
- A reference line for insert is used as a guide when tapping-in the valve guide.

Valve guide inserting reference line position L:

15 mm (0.5906 in)

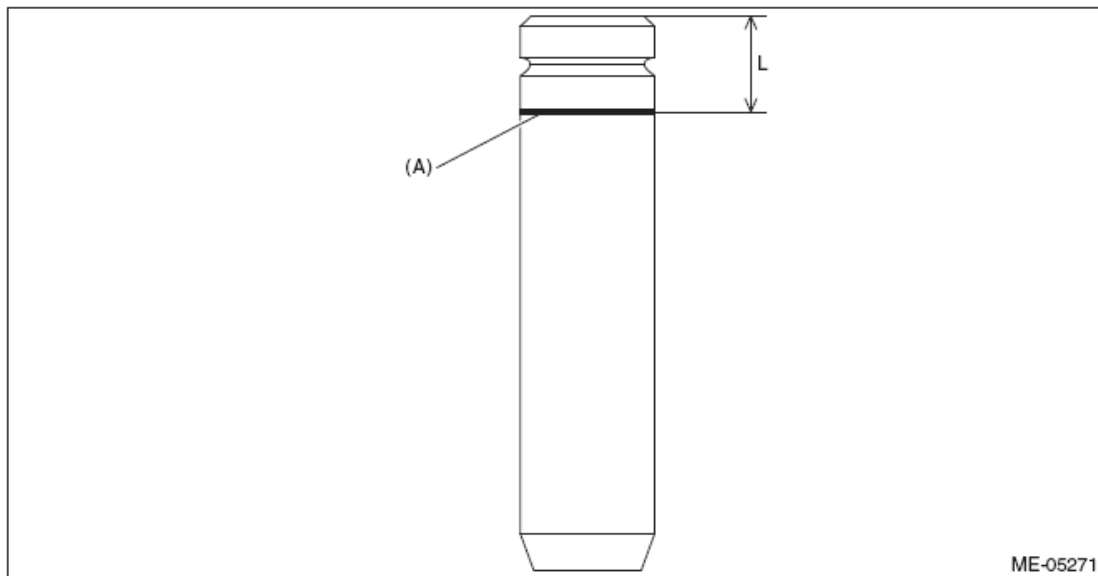


Fig. 462: Identifying Valve Guide Inserting Reference Line Position
Courtesy of SUBARU OF AMERICA, INC.

4. Apply a enough coat of engine oil to the valve guide, and set the valve guide on the cylinder head with the combustion chamber downward.
5. Insert the ST into the valve guide, and tap-in the valve guide to the reference line (A) for insert using plastic hammer.

CAUTION:

- During work, place a waste cloth, etc. to avoid scratching the mating surface of the cylinder head.
- Use special care not to damage the cylinder head during work.
- Always strike the ST vertically with a plastic hammer. Otherwise, the ST can be damaged.

ST 499765700 VALVE GUIDE REMOVER AND INSTALLER

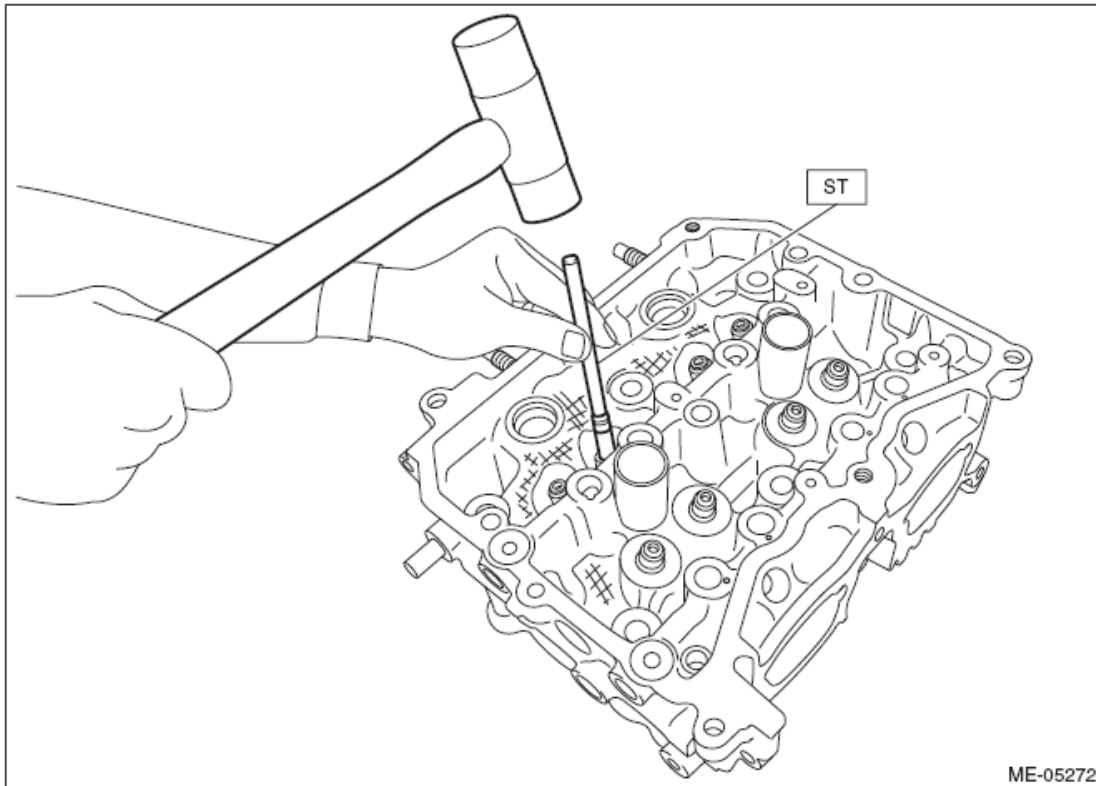


Fig. 463: Installing Valve Guide Using Suitable Tool
Courtesy of SUBARU OF AMERICA, INC.

6. Measure the valve guide protrusion amount "L" as shown in the figure using a caliper gauge. Insert the ST into the valve guide again, and tap-in the valve guide so that it is positioned within standard by referring to the measured value using plastic hammer.

CAUTION:

- During work, place a waste cloth, etc. to avoid scratching the mating surface of the cylinder head.
- Use special care not to damage the cylinder head during work.
- Always strike the ST vertically with a plastic hammer. Otherwise, the ST can be damaged.

NOTE:

Be careful not to tap-in excessively by repeating the steps of Tapping-in --> Measurement --> Tapping-in --> Measurement... when installing the valve guide.

ST 499765700 VALVE GUIDE REMOVER AND INSTALLER

Valve guide protrusion amount L:

Standard

11.4 - 11.8 mm (0.449 - 0.465 in)

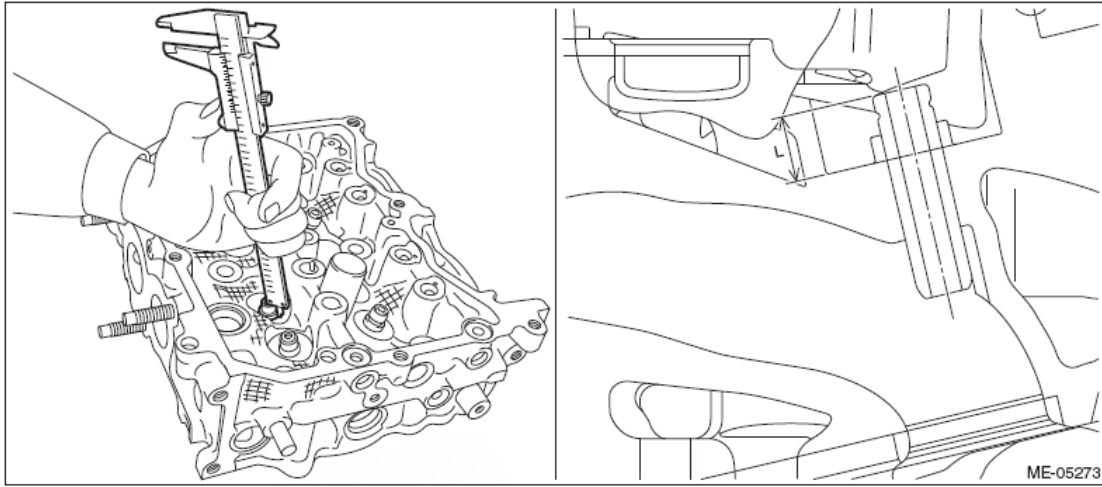


Fig. 464: Measuring Valve Guide Protrusion Amount Using Tool
Courtesy of SUBARU OF AMERICA, INC.

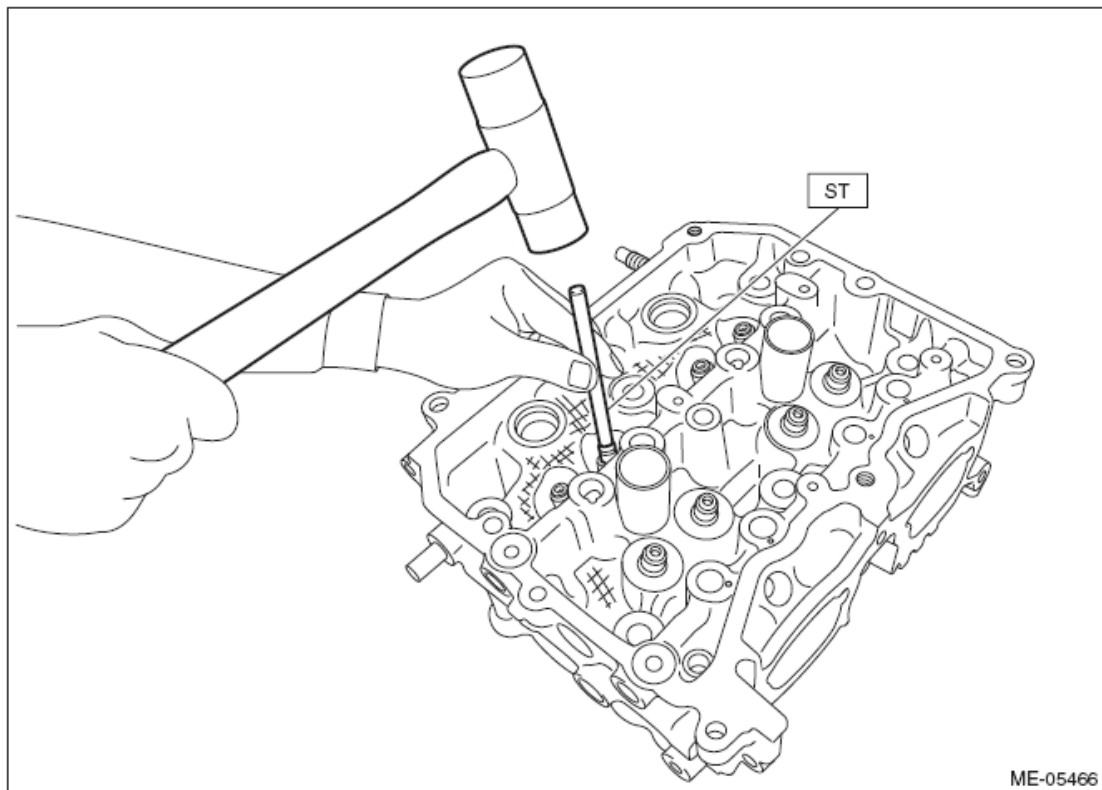


Fig. 465: Installing Valve Guide Using Tool
Courtesy of SUBARU OF AMERICA, INC.

7. Ream the inside of valve guide with the combustion chamber upward using the ST. Put the ST in valve guide, and rotate the ST slowly clockwise while pushing it lightly. Bring the ST back while

rotating it clockwise.

CAUTION:

- Place a wood board wrapped with a waste cloth to stabilize the cylinder head before work.
- Use special care not to damage the cylinder head during work.

NOTE:

- Apply engine oil to the ST.
- If the inner surface of valve guide is damaged, the edge of ST should be slightly ground with oil stone.
- If the inner surface of valve guide becomes lustrous and the ST does not chip, use a new ST or remedy the ST.

ST 499765900 VALVE GUIDE REAMER

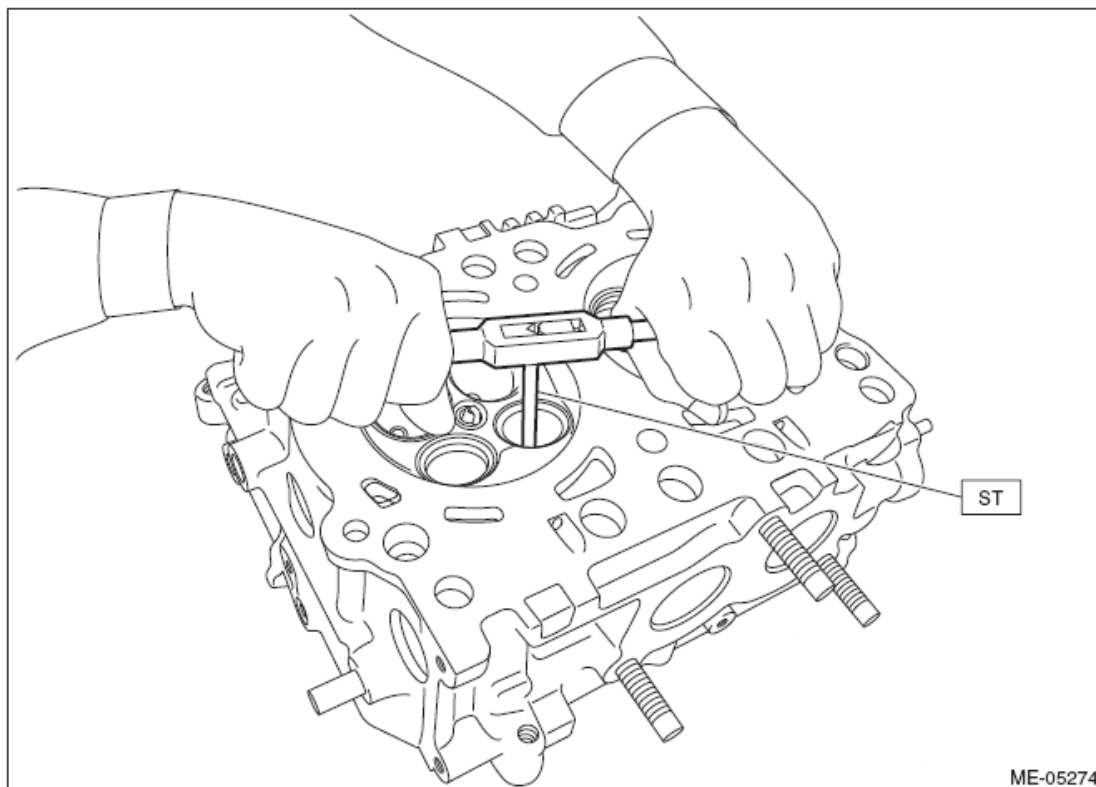


Fig. 466: Reaming Inside Of Valve Guide Using Valve Guide Reamer
Courtesy of SUBARU OF AMERICA, INC.

8. After reaming, clean the valve guide to remove chips.
9. Check the seating width between valve and valve seat. < Ref. to **VALVE SEAT**, INSPECTION, Cylinder Head.>

VALVE & VALVE SHIM

1. Visually check the valve shim for damage.
2. Check the clearance between valve and valve shim. Check the clearance between valve and valve shim by measuring the outer diameter of valve stem end and the inner diameter of valve shim respectively.
 1. Measure the outer diameter of valve stem end with a micrometer. If it is not within the standard, replace the valve.

NOTE:

- Measurement should be performed at a temperature of 20°C (68° F).
- Measure the outer diameter of the valve stem end at the two locations as shown in the figure, and read the value of most worn location.
- When the valve is replaced, lap the valve. Refer to "VALVE SEAT" for lapping. < Ref. to VALVE SEAT, INSPECTION, Cylinder Head.>

Valve stem end outer diameter:

Intake

Standard

5.455 - 5.470 mm (0.2148 - 0.2154 in)

Exhaust

Standard

5.445 - 5.460 mm (0.2144 - 0.2150 in)

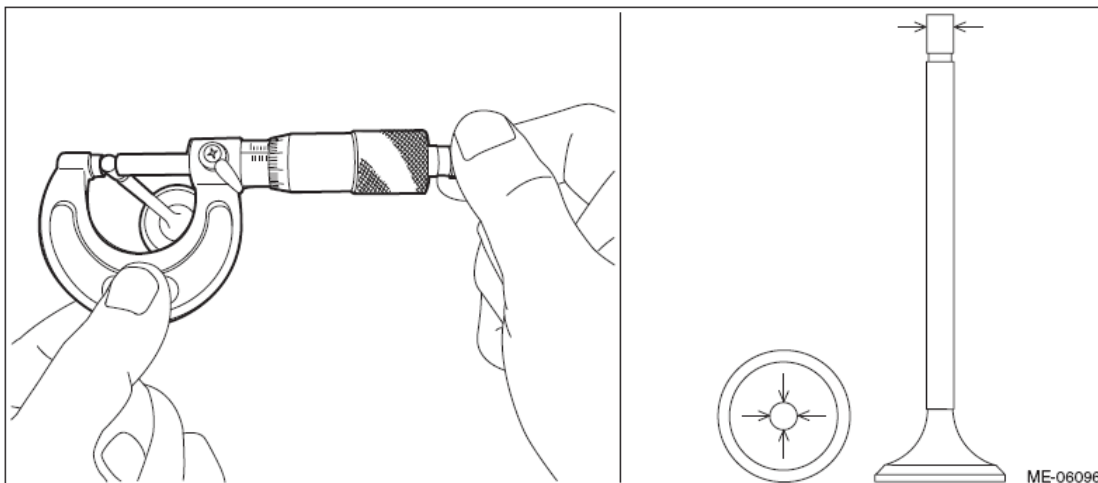


Fig. 467: Measuring Valve Stem End Outer Diameter Using Tool

Courtesy of SUBARU OF AMERICA, INC.

- Using a caliper gauge, measure the inner diameter of valve shim. If it is not within the standard, replace the valve shim.

NOTE:

- Measurement should be performed at a temperature of 20°C (68° F).
- Measure the inner diameter of the valve shim at the two locations as shown in the figure, and read the value of most worn location.
- If the valve shim has to be replaced, check the cam clearance and replace with the suitable valve shim. < Ref. to WHEN TIMING CHAIN ASSEMBLY IS REMOVED, INSPECTION, Cam Clearance.>

Valve shim inner diameter:

Standard

5.500 - 5.560 mm (0.2165 - 0.2189 in)

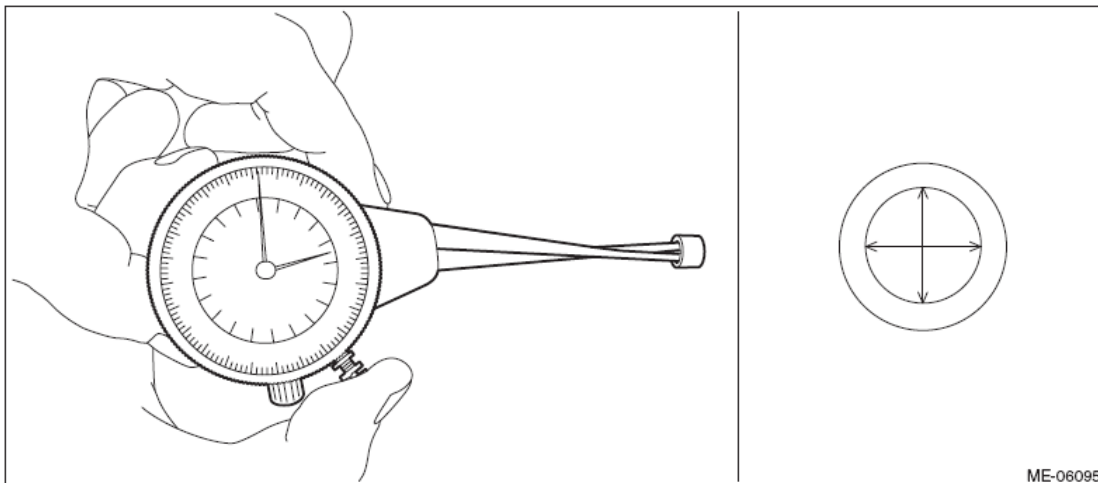


Fig. 468: Measuring Valve Shim Inner Diameter Using Tool
Courtesy of SUBARU OF AMERICA, INC.

- Calculate the clearance between valve and valve shim. If the clearance exceeds the standard, replace the valve or valve shim, whichever shows the greater amount of wear or damage.

NOTE:

- When the valve is replaced, lap the valve. Refer to "VALVE SEAT" for lapping. < Ref. to VALVE SEAT, INSPECTION, Cylinder Head.>
- If the valve shim has to be replaced, check the cam clearance

and replace with the suitable valve shim. < Ref. to WHEN TIMING CHAIN ASSEMBLY IS REMOVED, INSPECTION, Cam Clearance.>

Clearance between valve and valve shim:

Intake

Standard

0.030 - 0.105 mm (0.0012 - 0.0041 in)

Exhaust

Standard

0.040 - 0.115 mm (0.0016 - 0.0045 in)

VALVE SEAT

1. Check the valve seat for damage and deformation.
2. Check the seating width and seating position between valve and valve seat for the intake valve seat and exhaust valve seat.
 1. Clean the valve and valve seat.
 2. Coat the stem (A) of the valve lightly with engine oil and apply red dye evenly on the valve face (B).

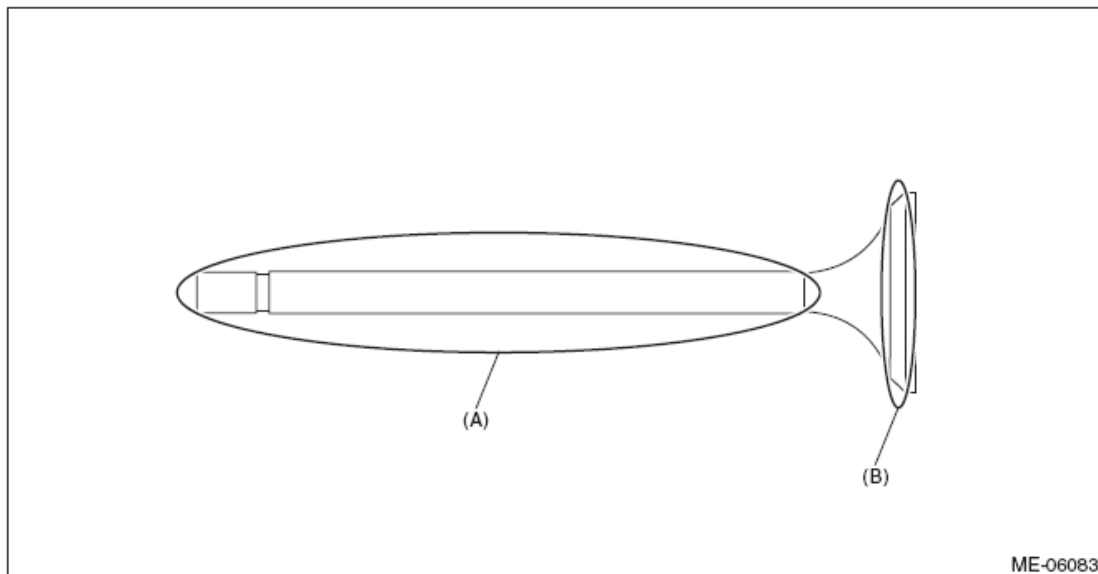


Fig. 469: Identifying Cylinder Head Valve Coating Area
Courtesy of SUBARU OF AMERICA, INC.

3. Using the valve lapper, slowly insert the valve with red dye applied into the valve guide. Lightly press the valve against the valve seat without turning the valve, and then slowly pull out the valve.
4. Check the seating width "W" of valve seat as shown in the figure, using a caliper gauge. Check the seating width "W" between valve and valve seat by measuring the width of red dye on the seating surface of valve seat. If the seating width "W" between valve and valve seat is out of the standard, correct the seating surface of valve seat using the valve seat cutter. For correcting procedures of the valve seat seating surface, refer to step 3.

NOTE:

- When the red dye does not appear seamlessly on the valve seat seating surface, lap the valve. For lapping procedure, refer to step 4).
- When the red dye does not appear seamlessly on the valve seat seating surface even after lapping the valve, correct the valve seat seating surface using the valve seat cutter. For correcting procedures of the valve seat seating surface, refer to step 3.

Seating width W between valve and valve seat:

Intake

Standard

0.8 - 1.6 mm (0.031 - 0.063 in)

Exhaust

Standard

1.1 - 1.7 mm (0.043 - 0.067 in)

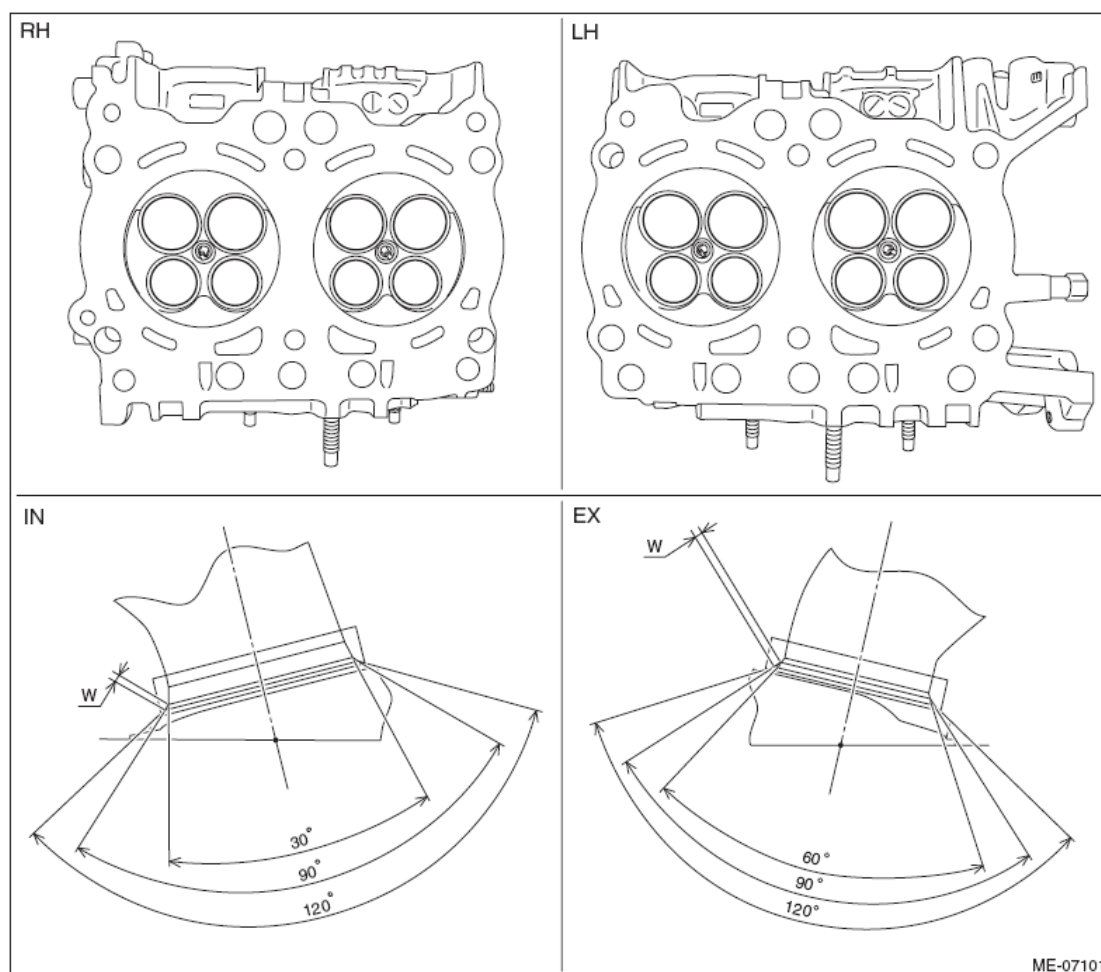


Fig. 470: Identifying Seating Width Between Valve And Valve Seat
Courtesy of SUBARU OF AMERICA, INC.

5. Wipe off the red dye on the valve and valve seat completely.
6. Coat the stem (A) of the valve lightly with engine oil and apply red dye evenly on the seating surface (B) between valve and valve seat.

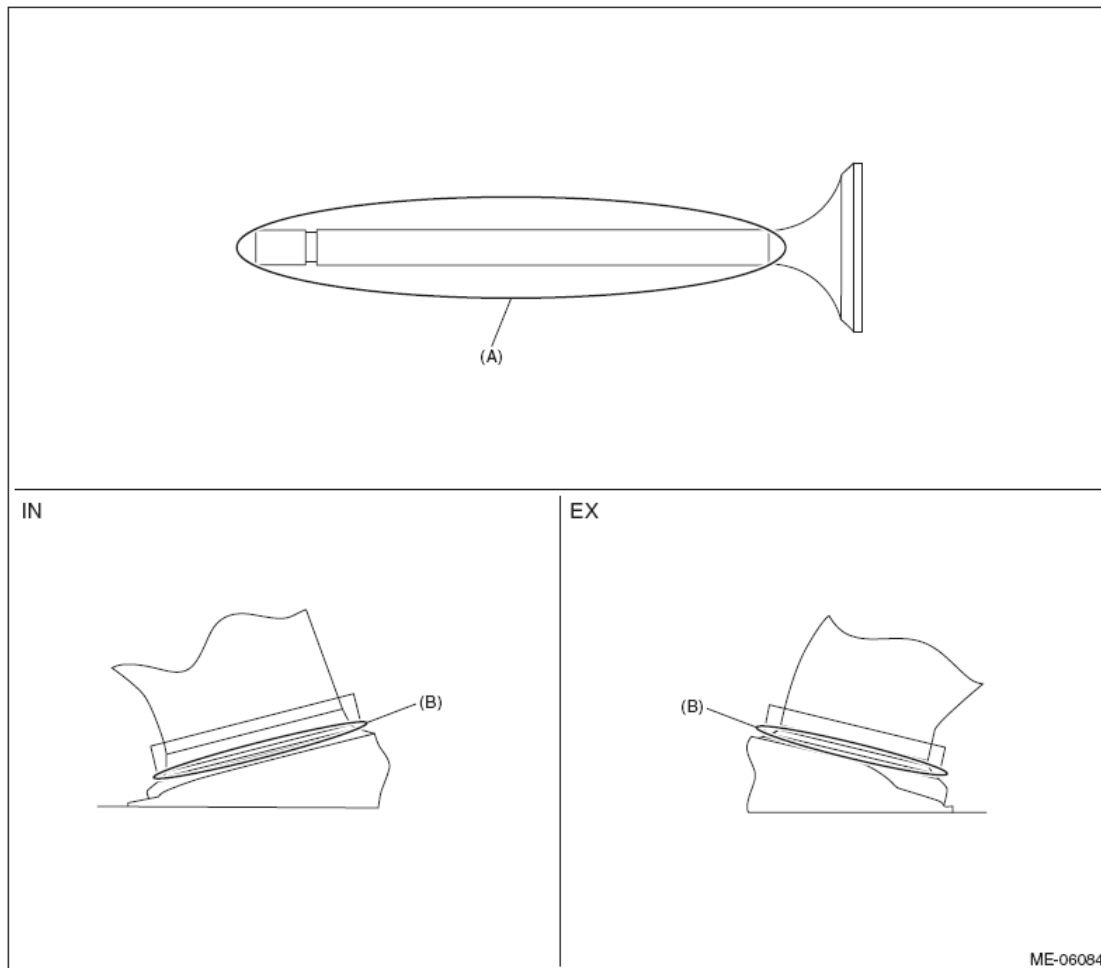


Fig. 471: Identifying Red Dye Applying Area On Seating Surface Between Valve And Valve Seat

Courtesy of SUBARU OF AMERICA, INC.

7. Using the valve lapper, slowly insert the valve into the valve guide. Lightly press the valve against the valve seat without turning the valve, and then slowly pull out the valve.
8. Check the seating position between valve and valve seat. Check the seating position between valve and valve seat by checking the position of red dye on the valve face. If the seating position between valve and valve seat is not at the center of valve face, correct the seating surface of valve seat using the valve seat cutter. For correcting procedures of the valve seat seating surface, refer to step 3.

Seating position between valve and valve seat:

Valve face center

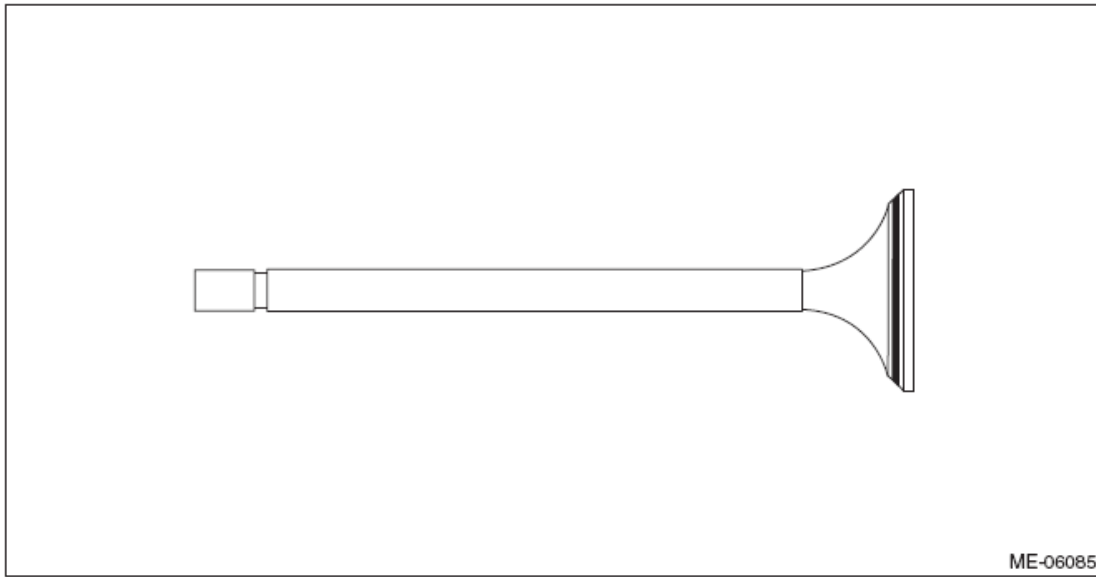


Fig. 472: Identifying Cylinder Valve
Courtesy of SUBARU OF AMERICA, INC.

9. After inspection, wipe off the red dye completely.
3. When correcting the seating surfaces of valve seat
 1. Correct the seating angle between valve and valve seat using the 45° valve seat cutter.

NOTE:

- Grind the seating surface so that the seating width between valve and valve seat becomes slightly larger than the standard value.
- Gradually reduce pressure at the end of grinding process in order to avoid creating a gap on the valve seat correcting surface.

Seating angle between valve and valve seat:

45°

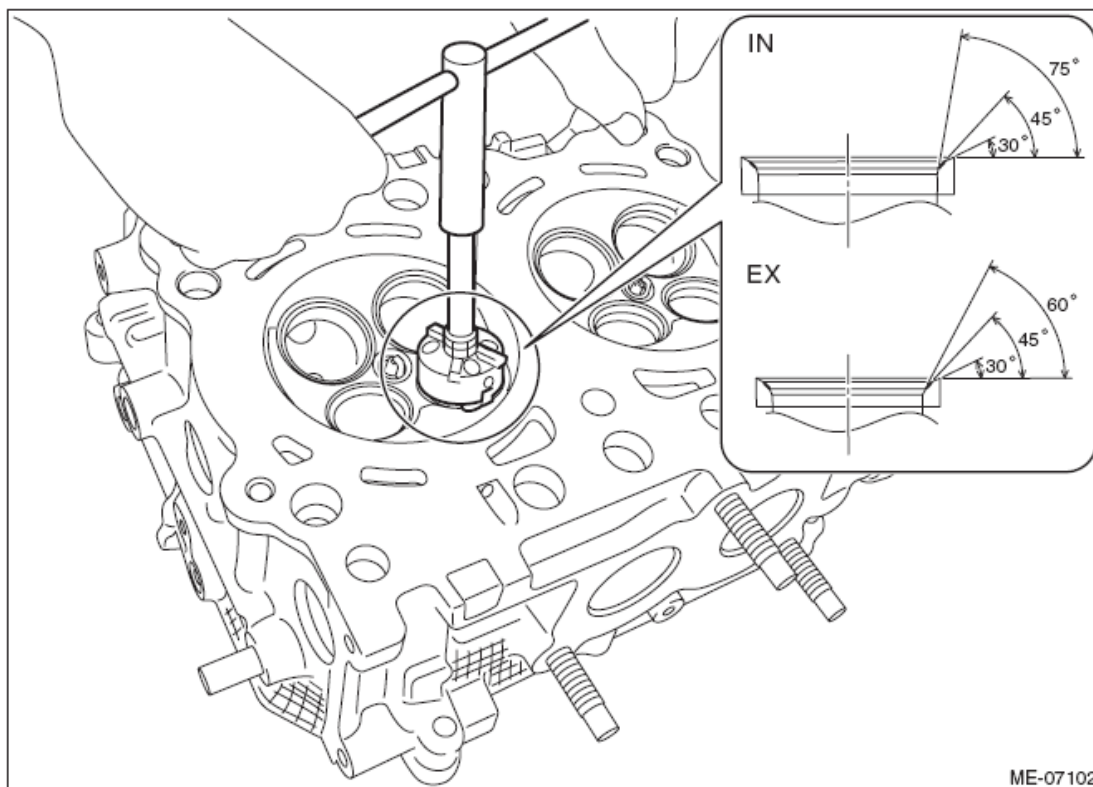


Fig. 473: Checking Seating Position Between Valve And Valve Seat
 Courtesy of SUBARU OF AMERICA, INC.

2. Lap the valve. For lapping procedure of the valve, refer to step 4.
3. Check the seating position between valve and valve seat. For inspection of the seating position between valve and valve seat, refer to step 2).

NOTE: This procedure is necessary to select a seat cutter to be used in step 4.


4. Using a seat cutter, correct the valve seat so that the seating width between valve and valve seat becomes the standard value.

NOTE: • Select a proper valve seat cutter according to the following table.


Seating position between valve and valve seat	Seat cutter selection
	When the seating position of valve face is high, grind the



IN

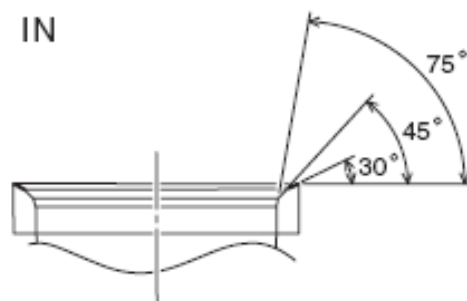



EX

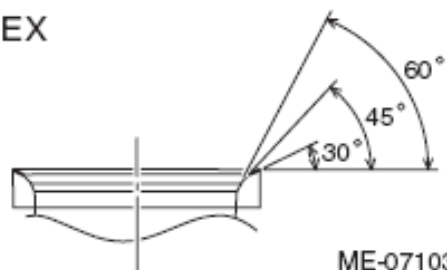

ME-07103

surface using the 30° seat cutter until seating width between valve and valve seat becomes the standard value.

When the seating position of valve face is low, grind the surface using the 75° (IN) or 60° (EX) seat cutter until seating width between valve and valve seat becomes the standard value.

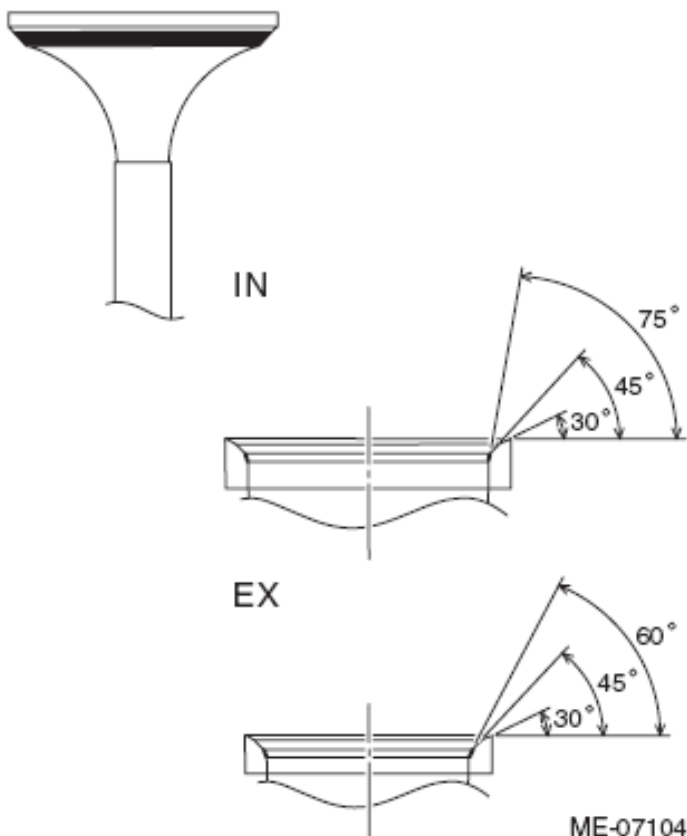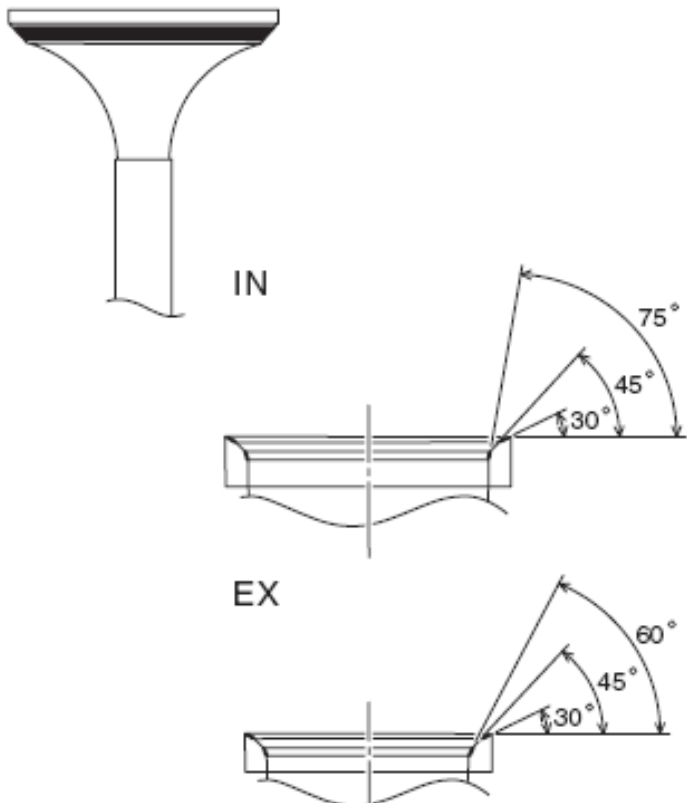 IN EX ME-07104	
 IN EX	When the seating position of valve face is at center, grind the surface evenly using the 30° and 75° (IN) or 60° (EX) seat cutters until seating width between valve and valve seat becomes the standard value.

- Gradually reduce pressure at the end of grinding process in order to avoid creating a gap on the valve seat correcting surface.

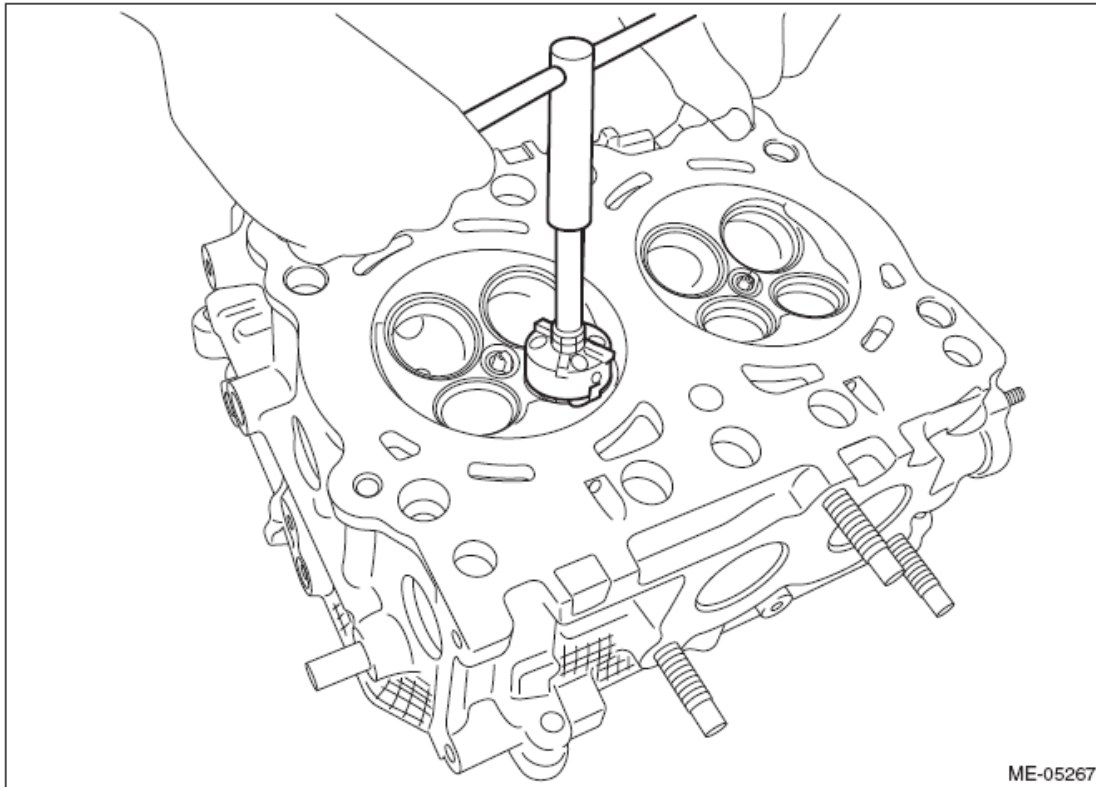


Fig. 474: Grinding Valve Seat Using Tool
Courtesy of SUBARU OF AMERICA, INC.

5. Lap the valve. For lapping procedure of the valve, refer to step 4.
4. When lapping the valve
 1. Coat the stem (A) of the valve lightly with engine oil and put a small amount of valve compound evenly on the valve face (B).

NOTE:

- Be careful not to put the valve compound more than necessary.
- To avoid damaging the valve guide and valve stem, be careful not to let the valve compound contact the valve stem.

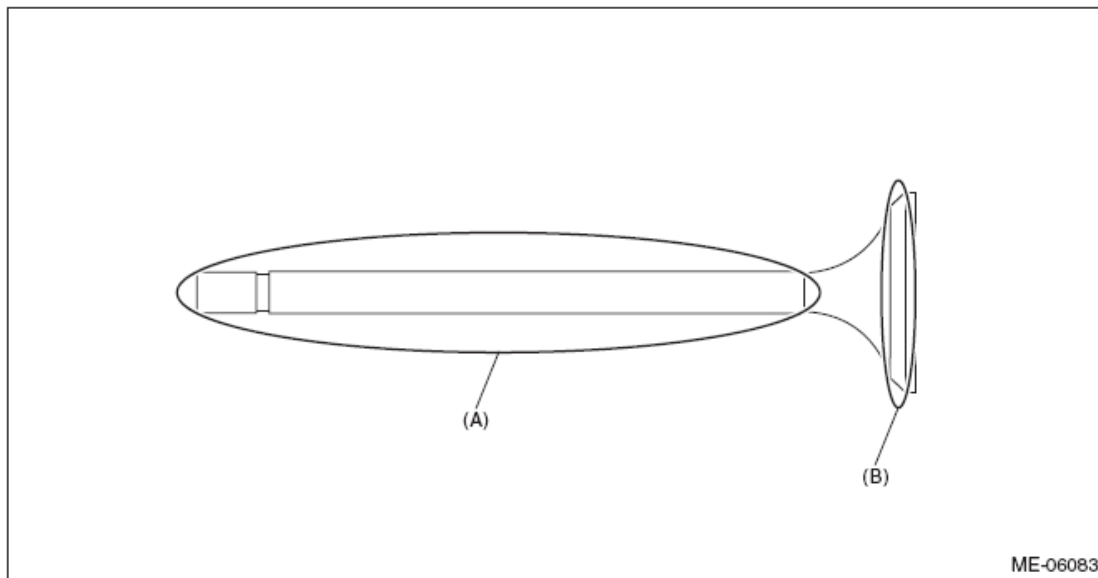


Fig. 475: Identifying Cylinder Head Valve Coating Area
Courtesy of SUBARU OF AMERICA, INC.

- Using the valve lapper, slowly insert the valve with the valve compound applied into the valve guide, and lap the seating surface between valve and valve seat. First, lift the valve and strike it against the valve seat twice, and then slightly turn the valve once. Repeat these steps as one set.

NOTE:

- To prevent the seating width between valve and valve seat from exceeding the standard value, be careful not to keep turning the valve while pressing it against the valve seat during lapping.
- Be careful not to lift the valve too far during lapping in order to prevent the valve from coming off the valve guide.

- Wipe off the valve compound on the valve and valve seat completely after lapping.

NOTE:

Be careful not to leave any valve compound in order to avoid malfunction.

- Check the seating width and seating position between valve and valve seat.

VALVE SPRING

- Check the valve spring for damage and deformation.
- Using a caliper gauge, valve spring tester, surface plate and try square, check the valve spring free length, tension/spring height and squareness. If it is not within the standard, replace the valve spring.

NOTE:

- Measurement should be performed at a temperature of 20°C (68°F).
- To check the squareness of the valve spring, stand the valve spring

on a surface plate and check its deflection at the top of the valve spring using a try square.

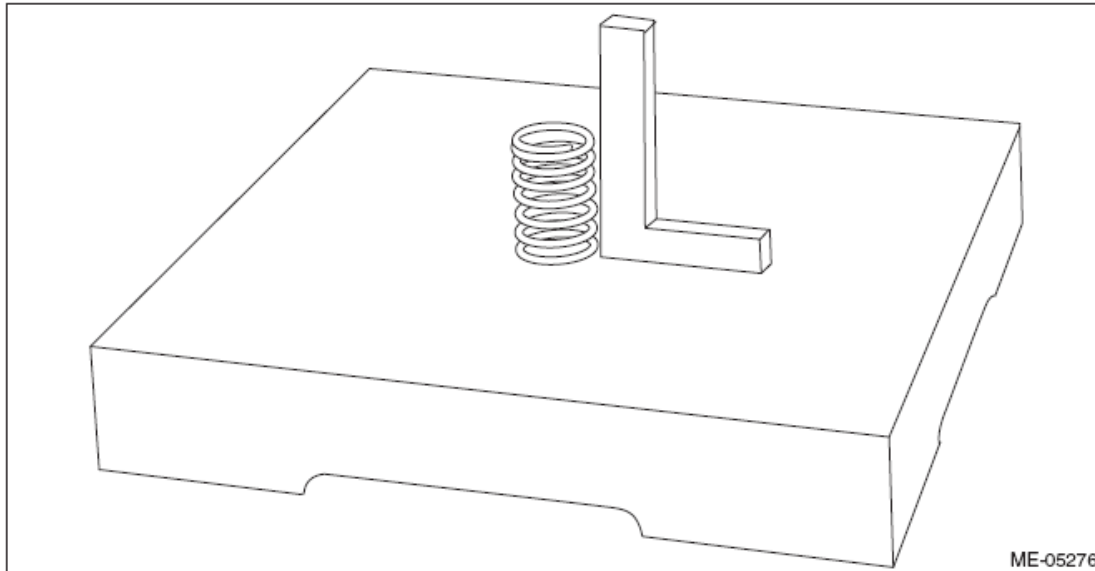


Fig. 476: Identifying Valve Face And Stem
Courtesy of SUBARU OF AMERICA, INC.

Valve spring free length:

Gasoline engine model

Standard

41.06 mm (1.617 in)

HEV model

Standard

41.68 mm (1.641 in)

Valve spring tension/spring height:

Gasoline engine model

Set

Standard

182 - 210 N (18.56 - 21.41 kgf, 40.92 - 47.22 lbf)/33.0 mm (1.299 in)

Lift***Standard***

552 - 610 N (56.29 - 62.20 kgf, 124.11 - 137.15 lbf)/22.0 mm (0.866 in)

HEV model***Set******Standard***

182 - 210 N (18.56 - 21.41 kgf, 40.92 - 47.22 lbf)/33.0 mm (1.299 in)

Lift***Standard***

502 - 554 N (51.19 - 56.49 kgf, 112.87 - 124.56 lbf)/22.0 mm (0.866 in)

Valve spring squareness:***Standard***

2.5°, 1.8 mm (0.071 in) or less

CYLINDER BLOCK

REMOVAL

1. Remove the engine from the vehicle. < Ref. to **REMOVAL**, Engine Assembly.>
2. Remove the intake manifold. < Ref. to **REMOVAL**, Intake Manifold.> < Ref. to **REMOVAL**, Intake Manifold.>
3. Remove the engine wiring harness. < Ref. to **REMOVAL**, Engine Wiring Harness.> < Ref. to **REMOVAL**, Engine Wiring Harness.>
4. Remove the tumble generator valve assembly. < Ref. to **REMOVAL**, Tumble Generator Valve Assembly.> < Ref. to **REMOVAL**, Tumble Generator Valve Assembly.>
5. Remove the chain cover. < Ref. to **REMOVAL**, Chain Cover.>
6. Remove the rocker cover. < Ref. to **REMOVAL**, Rocker Cover.>
7. Remove the cam carrier. < Ref. to **REMOVAL**, Cam Carrier.>
8. Remove the cylinder head. < Ref. to **REMOVAL**, Cylinder Head.>
9. Remove the crank sprocket. < Ref. to **REMOVAL**, Crank Sprocket.>
10. Remove the engine rear hanger from cylinder block RH.
 - Gasoline engine CVT model

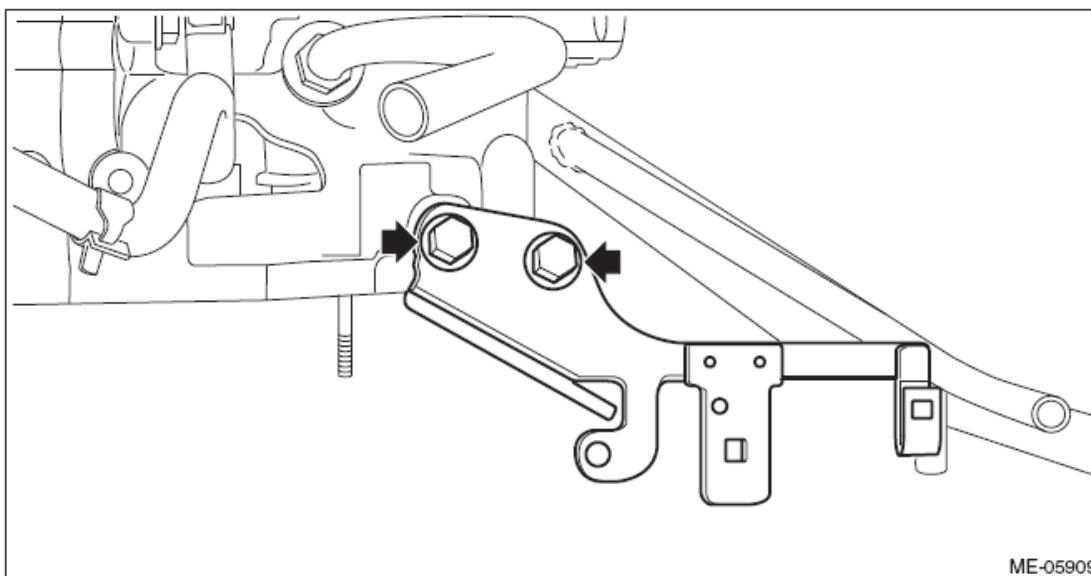


Fig. 477: Checking Valve Spring Squareness Using Try Square
Courtesy of SUBARU OF AMERICA, INC.

- Gasoline engine MT model

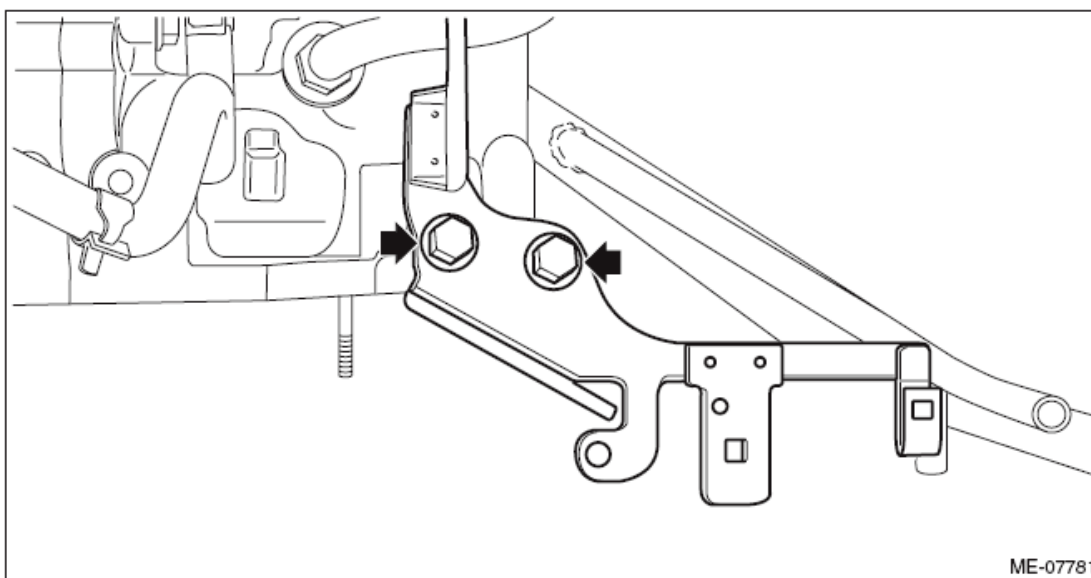


Fig. 478: Locating Engine Rear Hanger Mounting Bolt (Gasoline Engine Model)
Courtesy of SUBARU OF AMERICA, INC.

- HEV model

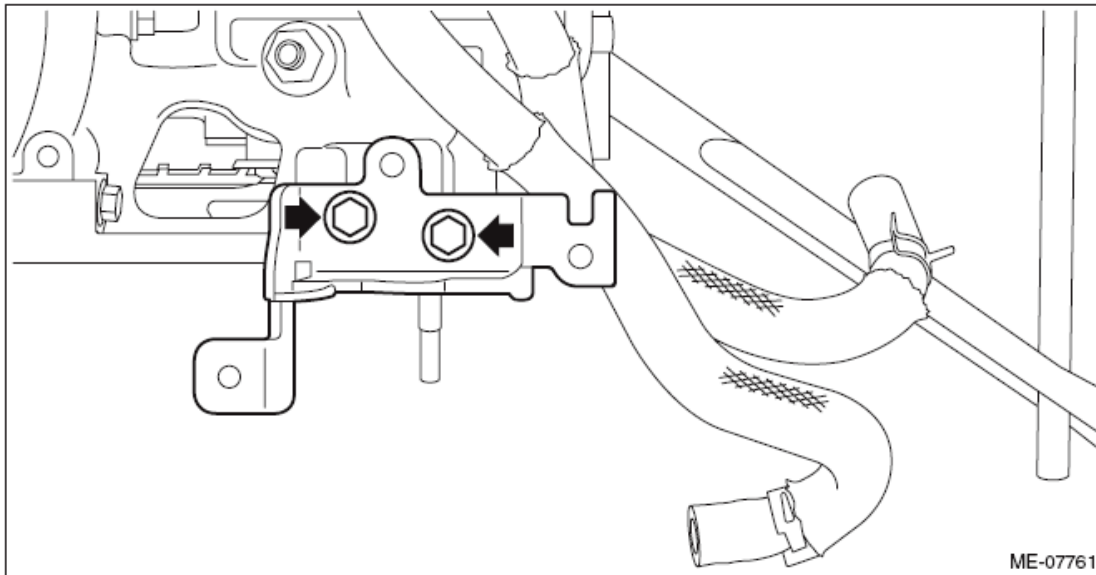


Fig. 479: Locating Engine Rear Hanger Mounting Bolt (HEV Model)
Courtesy of SUBARU OF AMERICA, INC.

11. Remove the bolts securing the water pipe assembly and PCV connector to the cylinder block, and remove the water pipe assembly, PCV connector and brake vacuum pipe (HEV model) as a set from cylinder block.
 - Gasoline engine model

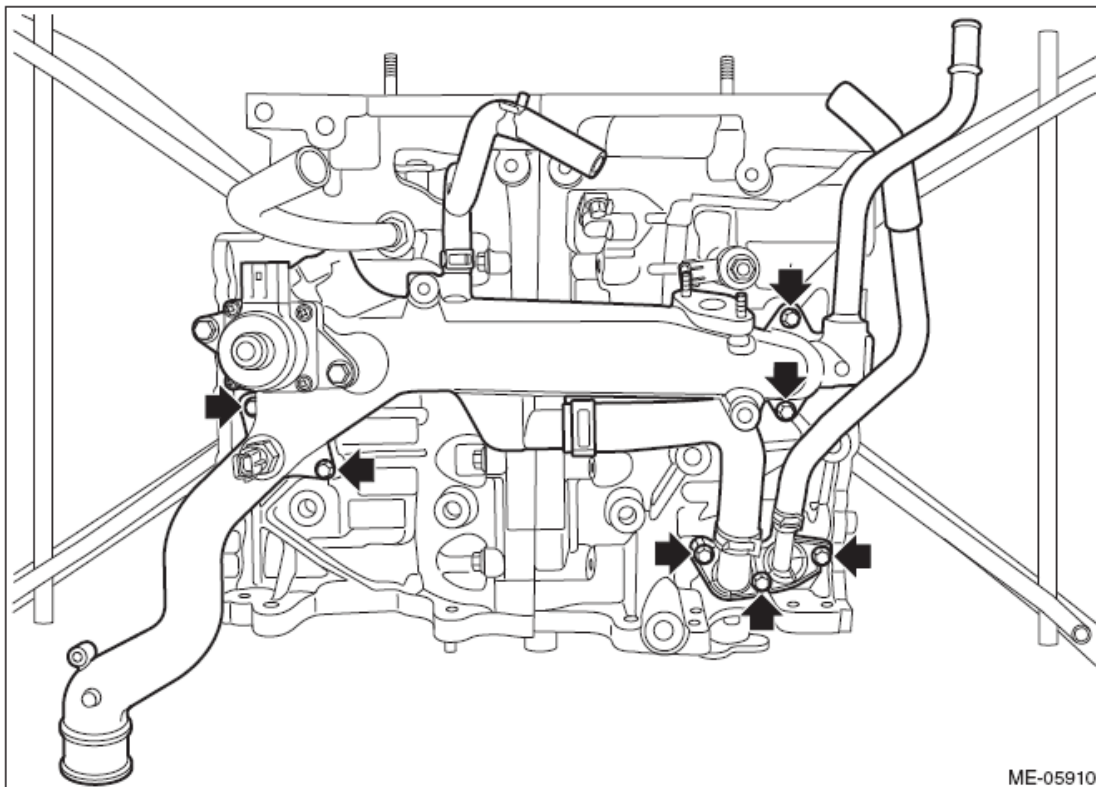


Fig. 480: Locating Water Pipe Assembly And PCV Connector To Cylinder Block Mounting Bolt (Gasoline Engine Model)
Courtesy of SUBARU OF AMERICA, INC.

- HEV model

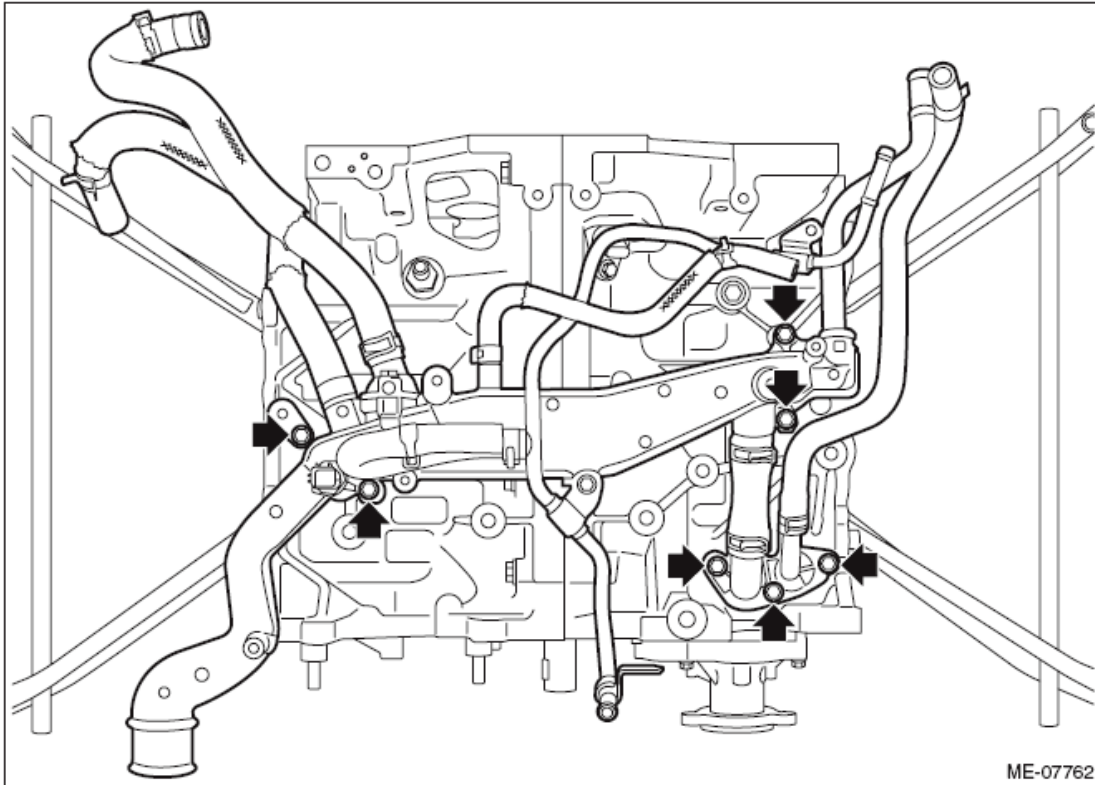


Fig. 481: Locating Water Pipe Assembly And PCV Connector To Cylinder Block Mounting Bolt (HEV Model)
Courtesy of SUBARU OF AMERICA, INC.

12. Remove the O-ring from the cylinder block and PCV connector.

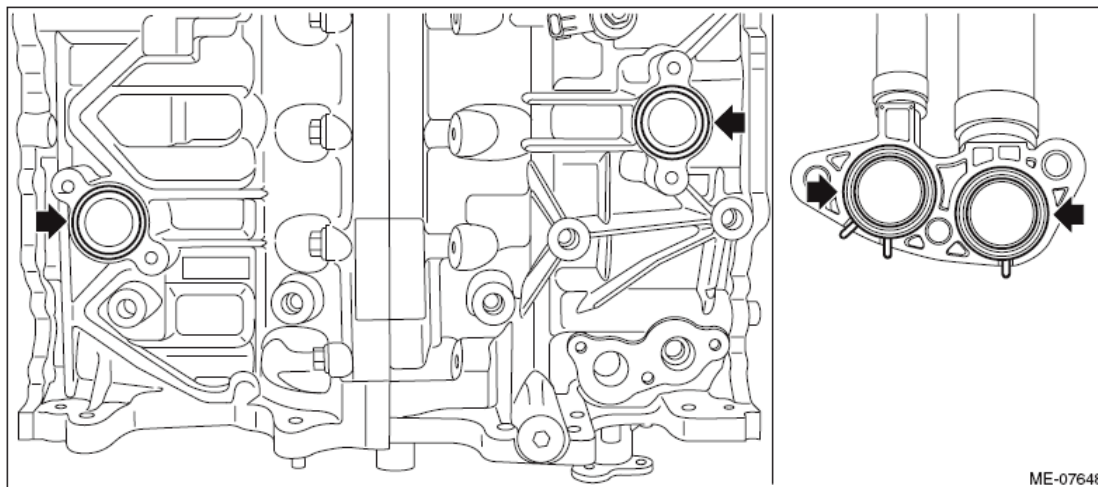


Fig. 482: Locating Cylinder Block And PCV Connector O-Ring
Courtesy of SUBARU OF AMERICA, INC.

13. Remove the knock sensor from cylinder block LH.

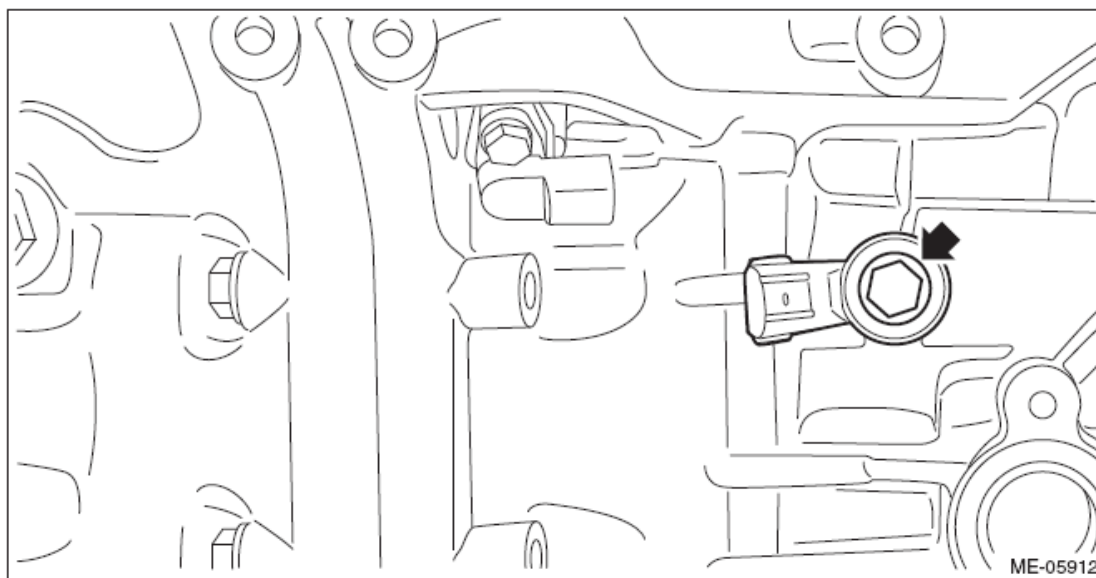


Fig. 483: Locating Knock Sensor Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

14. Remove the PCV hose from the PCV valve. (Gasoline engine model)

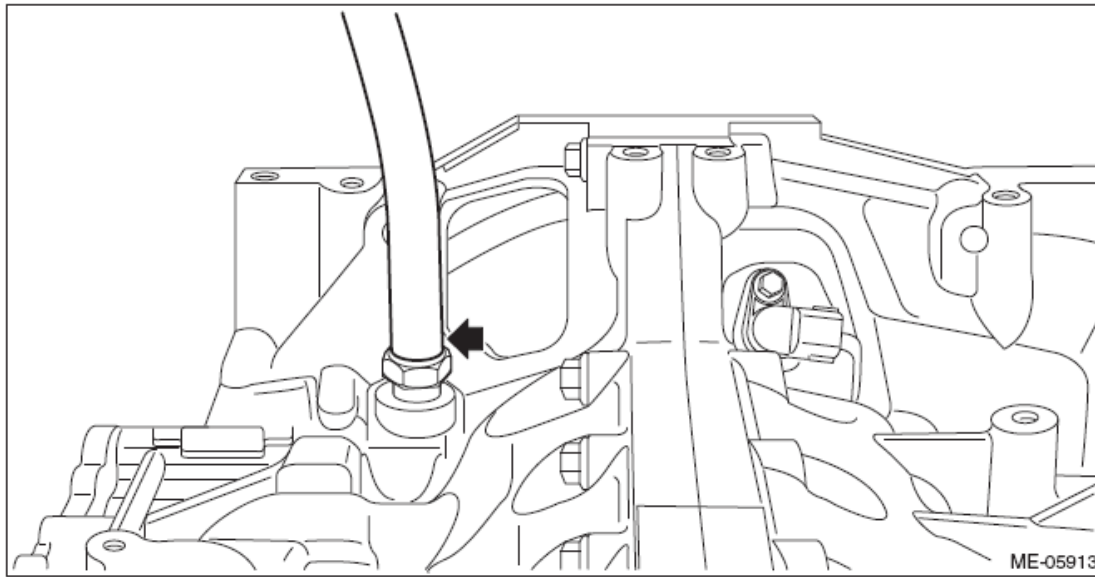


Fig. 484: Locating PCV Hose
Courtesy of SUBARU OF AMERICA, INC.

15. Remove the PCV valve from the cylinder block RH.

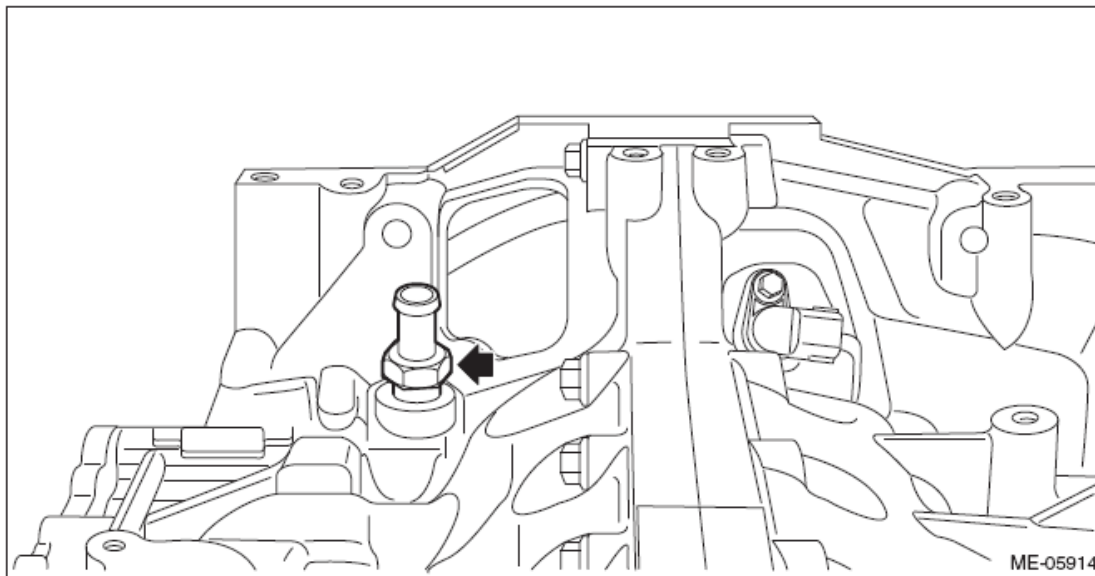


Fig. 485: Locating PCV Valve
Courtesy of SUBARU OF AMERICA, INC.

16. Remove the crankshaft position sensor plate with drive plate. (CVT model) < Ref. to **REMOVAL** , Drive Plate.> < Ref. to **REMOVAL** , Drive Plate.>
17. Remove the clutch disc and cover. (MT model) < Ref. to **REMOVAL** , Clutch Disc and Cover.>
18. Remove the crankshaft position sensor plate with flywheel. (MT model) < Ref. to **REMOVAL** , Flywheel.>

19. Remove the bolts securing the crankshaft position sensor holder from the cylinder block LH, and remove the crankshaft position sensor with crankshaft position sensor holder.
- Gasoline engine model

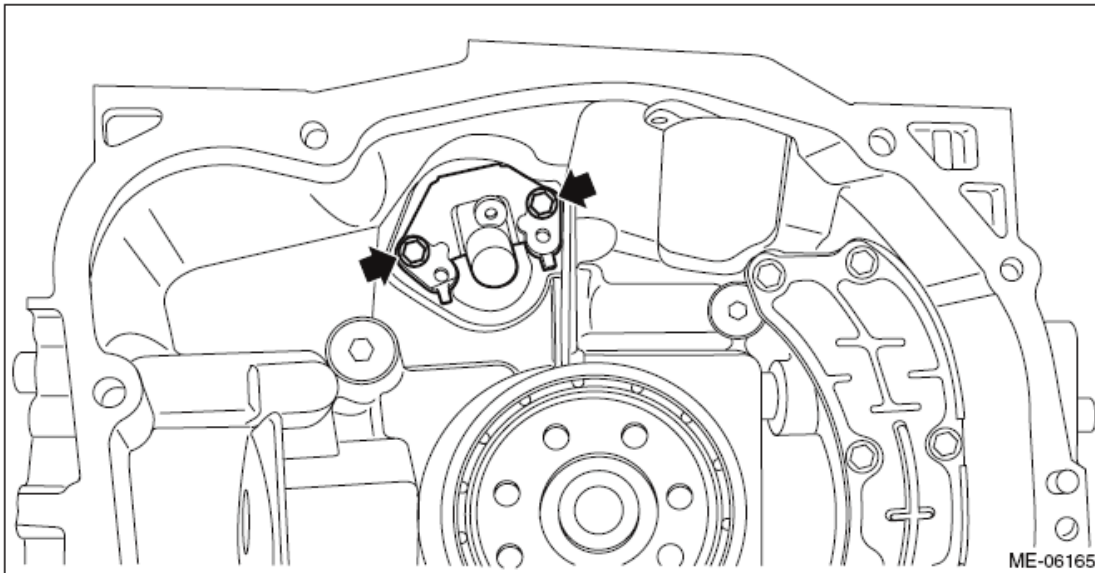


Fig. 486: Locating Crankshaft Position Sensor Holder Mounting Bolt (Gasoline Engine Model)

Courtesy of SUBARU OF AMERICA, INC.

- HEV model

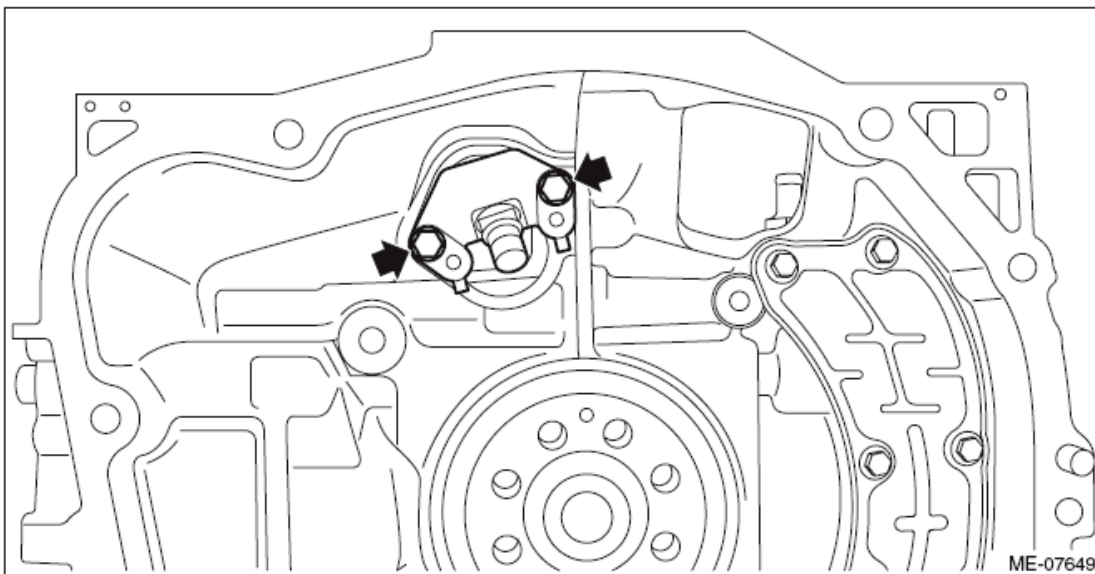


Fig. 487: Locating Crankshaft Position Sensor Holder Mounting Bolt (HEV Model)

Courtesy of SUBARU OF AMERICA, INC.

20. Remove the water jacket spacer from the cylinder block RH and cylinder block LH. (XV model)

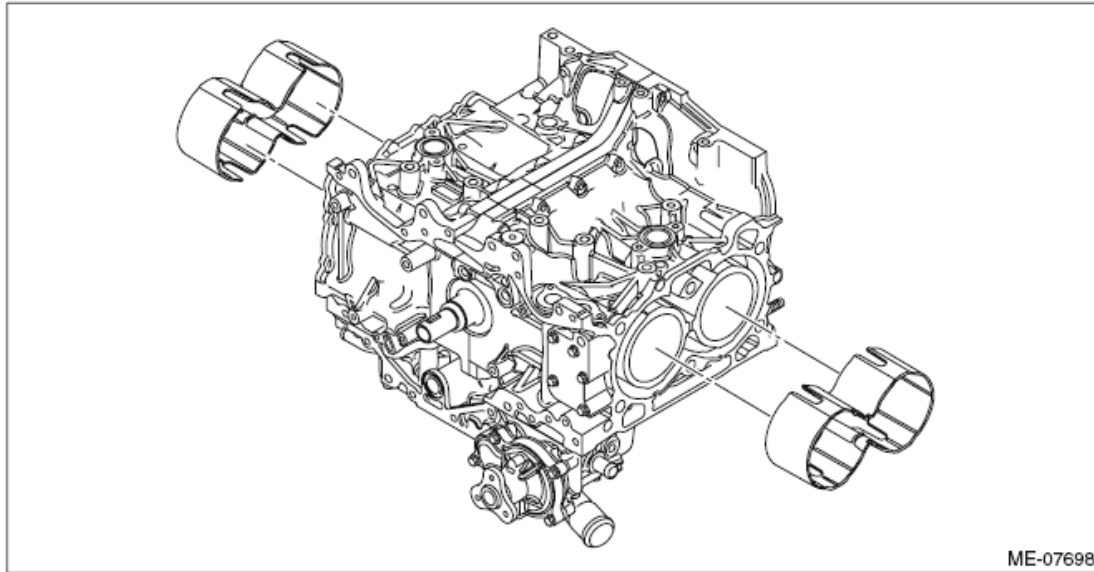


Fig. 488: Identifying Water Jacket Spacer
Courtesy of SUBARU OF AMERICA, INC.

21. Set the cylinder block so that the oil pan is on the upper side, remove the ST1, ST2, ST3 and ST4 from cylinder block and oil pan upper.

ST1 498457000 ENGINE STAND ADAPTER RH

ST2 498457100 ENGINE STAND ADAPTER LH

ST3 18362AA020 ADAPTER

ST4 499817100 ENGINE STAND

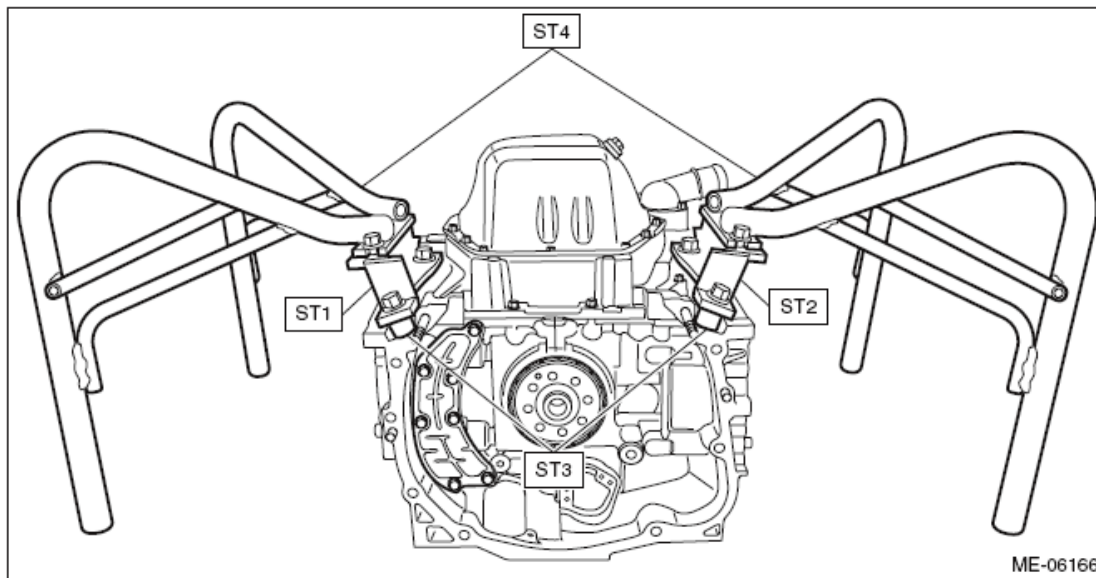


Fig. 489: Removing Engine Stand And Adapter From Cylinder Block And Oil Pan Upper
Courtesy of SUBARU OF AMERICA, INC.

22. Remove the thermostat cover from oil pan upper, and then remove the thermostat.

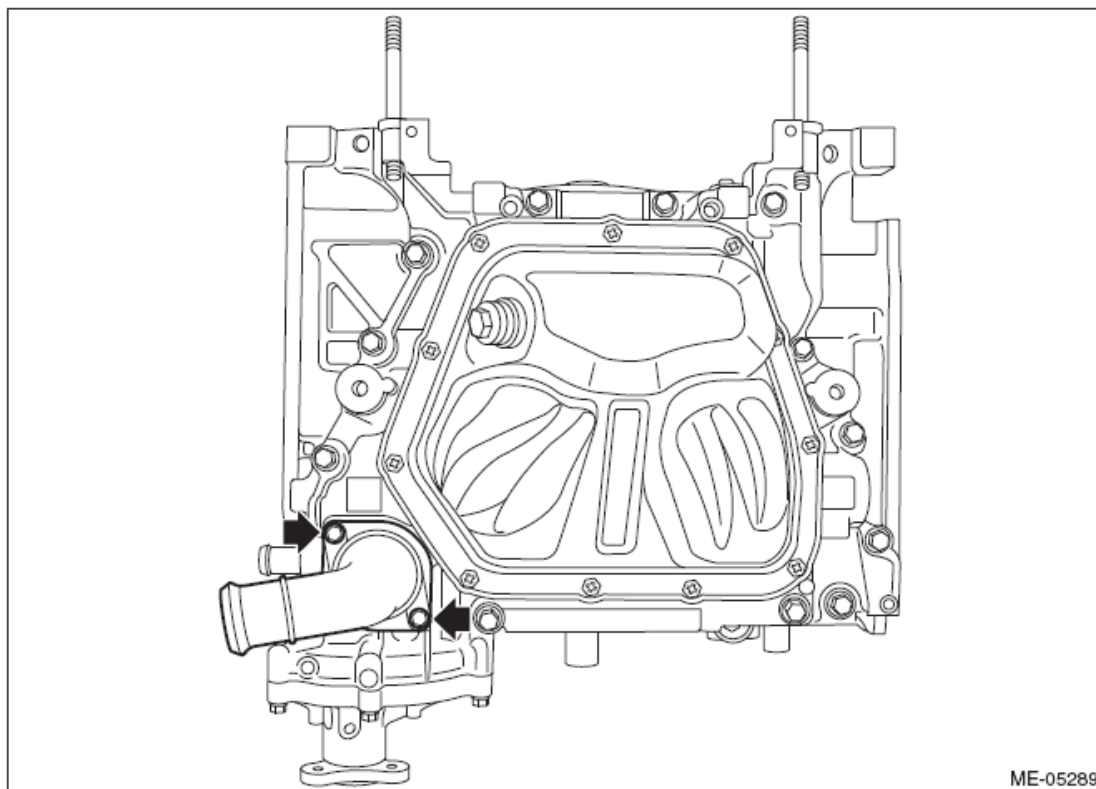


Fig. 490: Locating Thermostat Cover Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

23. Remove the oil pan upper with oil pan from cylinder block.

NOTE: Pry the points shown in the figure with a crowbar wrapped by protective tape, and then remove the oil pan upper.

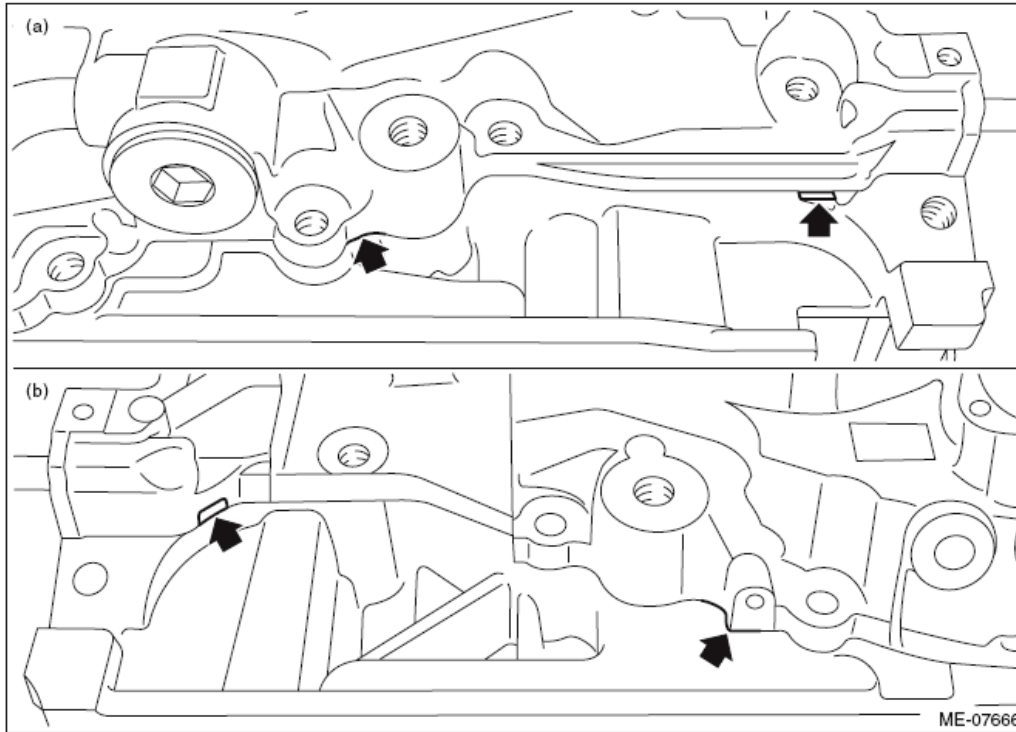


Fig. 491: Locating Oil Pan Upper Prying Position
Courtesy of SUBARU OF AMERICA, INC.

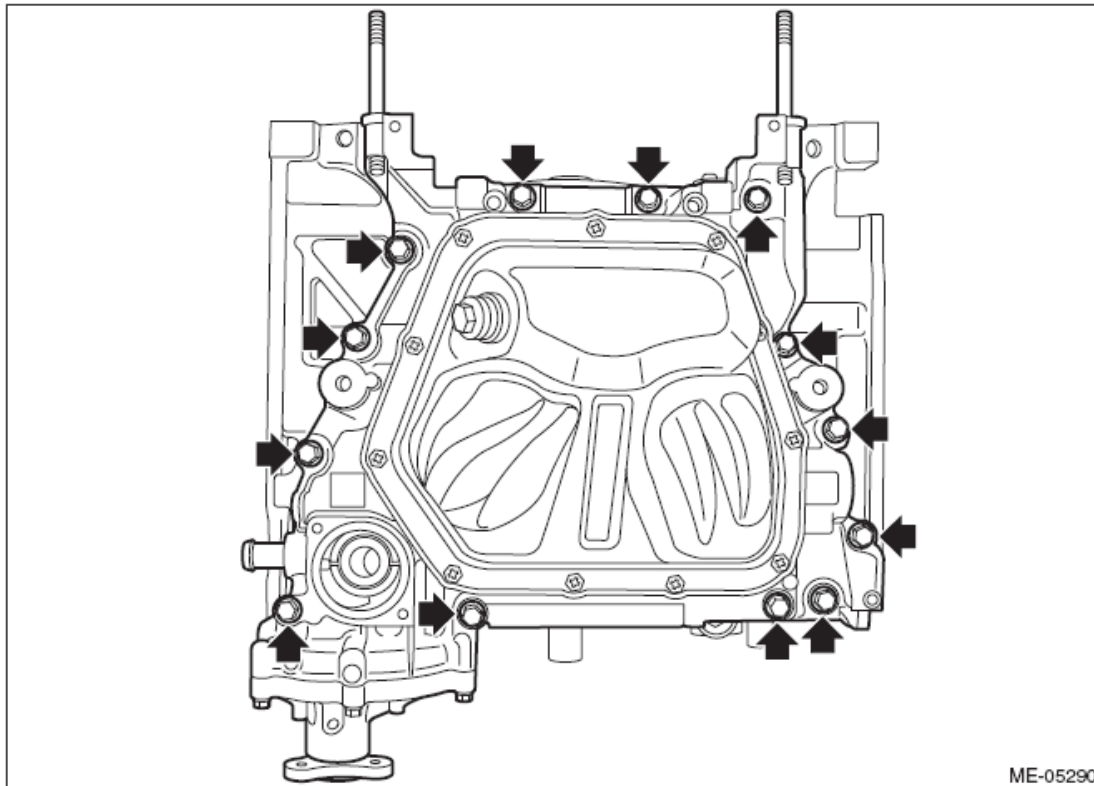


Fig. 492: Locating Oil Pan Upper Mounting Bolts
Courtesy of SUBARU OF AMERICA, INC.

24. Remove the O-ring from the cylinder block.

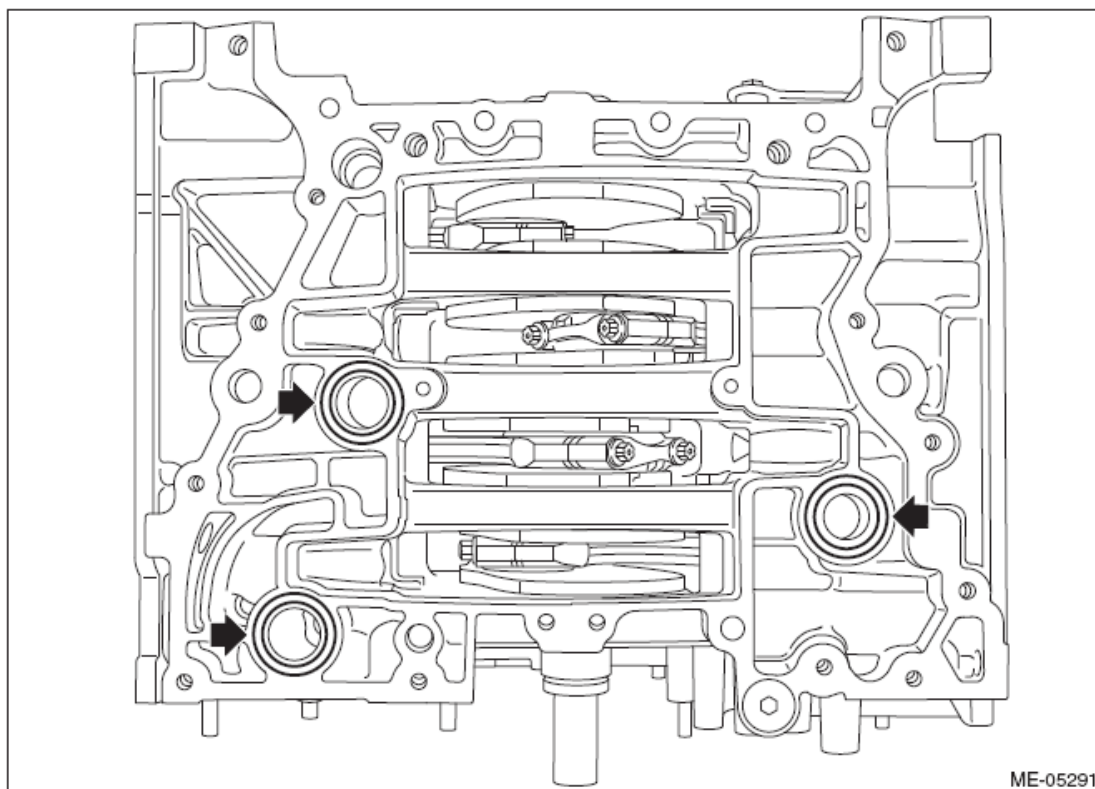


Fig. 493: Locating Cylinder Block O-Ring
Courtesy of SUBARU OF AMERICA, INC.

25. Install a bolt of suitable length (M10 x P1.25) at the locations shown in the figure.

NOTE:

- This procedure is required to prevent the knock pin damage when the cylinder block is raised in the next step.
- Use the same length of bolt for the four bolts.

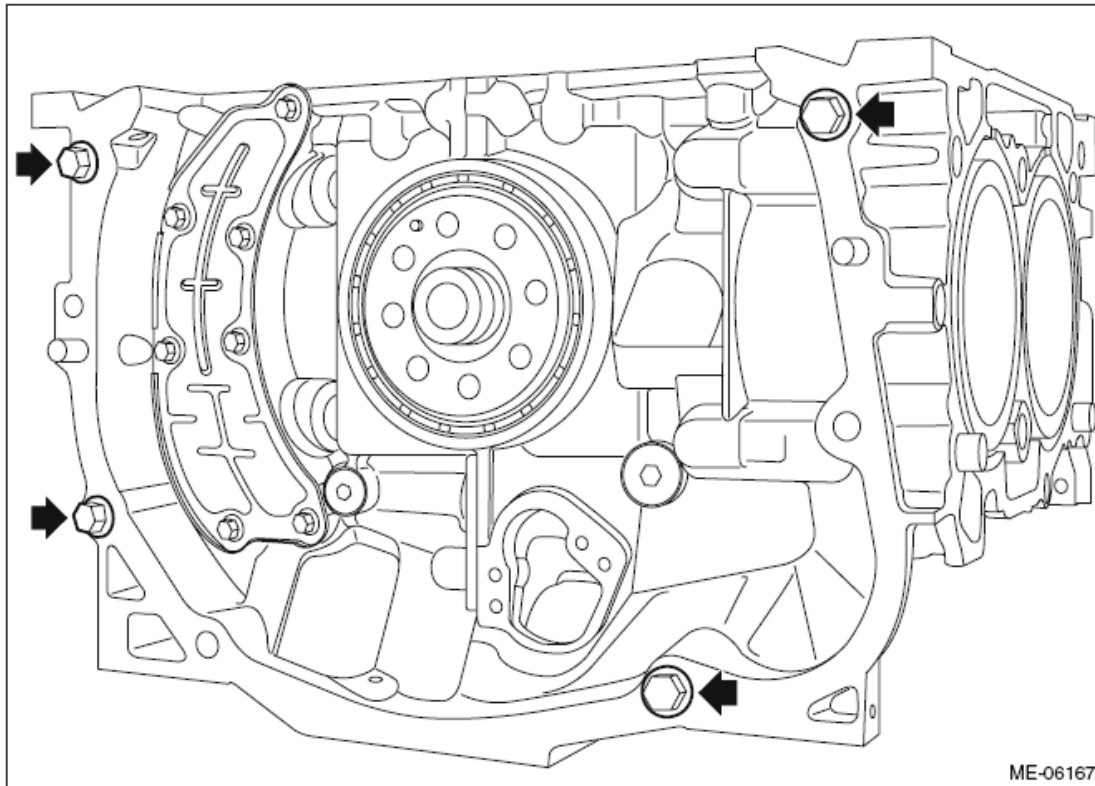


Fig. 494: Locating Cylinder Block Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

26. Raise the cylinder block so that the rear oil seal is on the lower side.
27. Remove the #1 and #4 connecting rod caps and pistons from the cylinder block.

NOTE: Mark each connecting rod cap and piston with a cylinder number.

1. Turn the crankshaft so that the #1 connecting rod cap (A) and #4 connecting rod cap (B) is located at the position shown in the figure using ST.

ST 18252AA000 CRANKSHAFT SOCKET

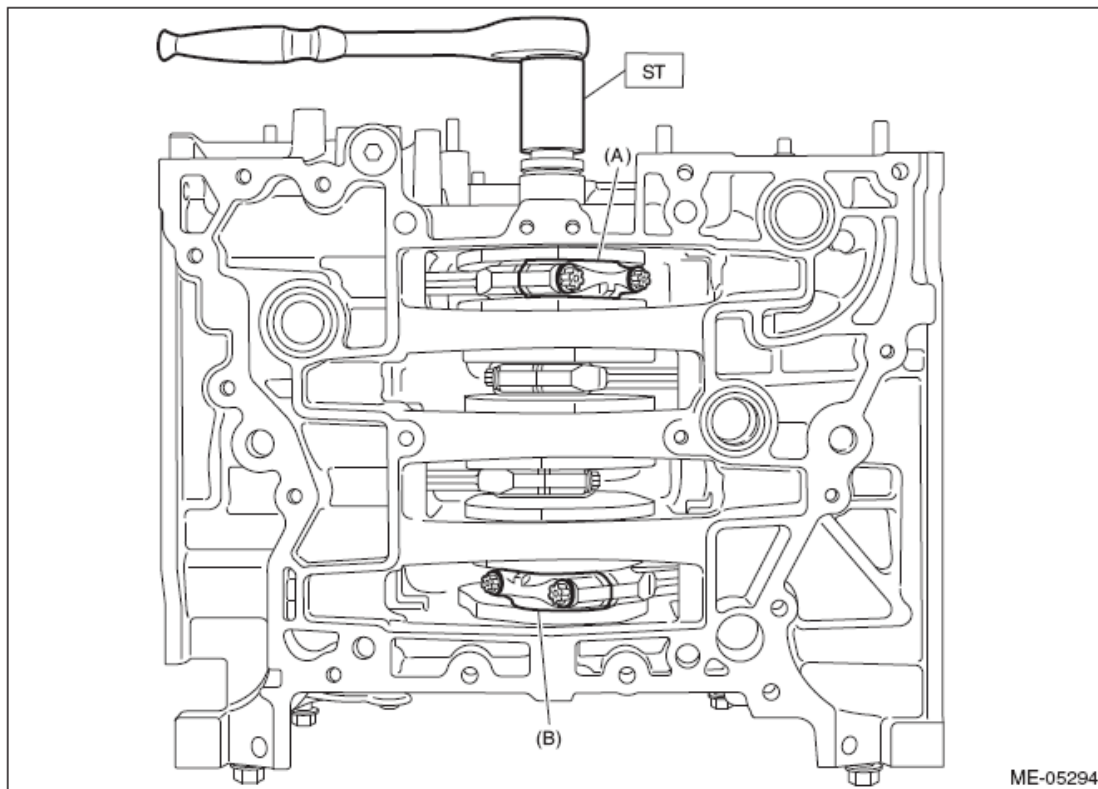


Fig. 495: Removing No. 1 And No. 4 Connecting Rod Caps And Pistons From Cylinder Block
 Courtesy of SUBARU OF AMERICA, INC.

- Using ST, loosen the #1 connecting rod cap bolt, and remove the #1 connecting rod cap bolt and #1 connecting rod cap.

ST 18270AA020 SOCKET

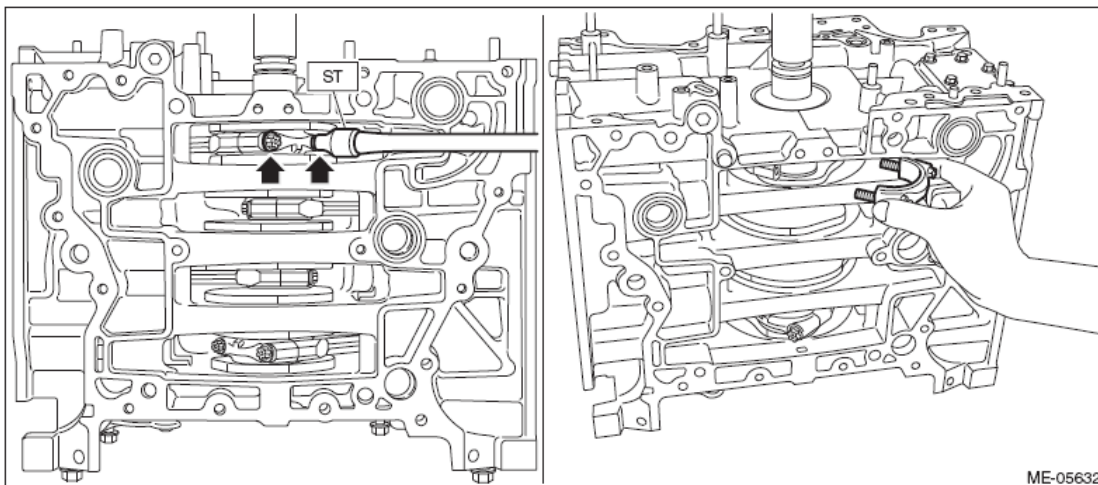


Fig. 496: Removing No. 1 Connecting Rod Cap Bolt And No. 1 Connecting Rod Cap
 Courtesy of SUBARU OF AMERICA, INC.

3. Using ST, loosen the #4 connecting rod cap bolt, and remove the #4 connecting rod cap bolt and #4 connecting rod cap.

ST 18270AA020 SOCKET

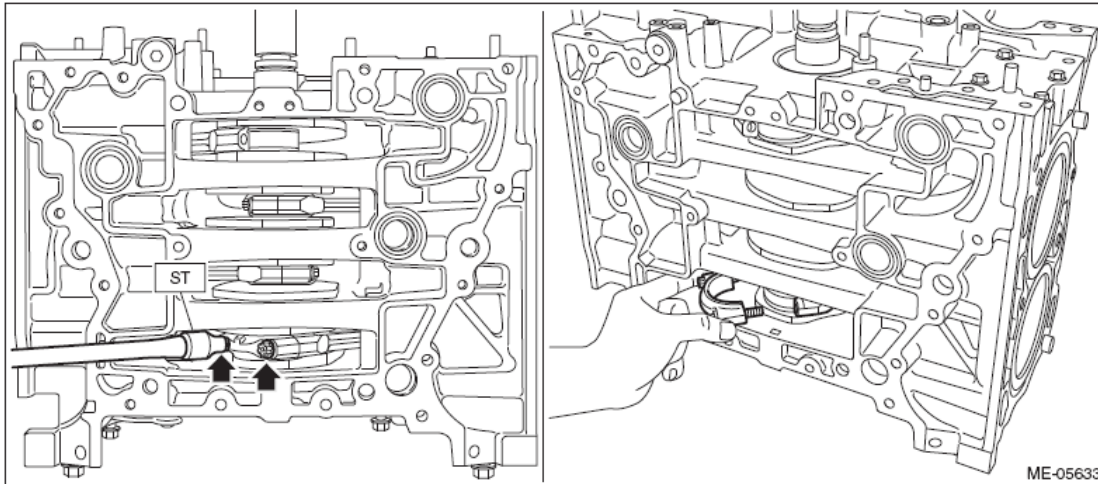


Fig. 497: Removing No. 4 Connecting Rod Cap Bolt And No. 4 Connecting Rod Cap
Courtesy of SUBARU OF AMERICA, INC.

4. Using the ST, turn the crankshaft counterclockwise and separate the positions of the #1 pin (A) of crankshaft and the large end (B) of #1 connecting rod.

ST 18252AA000 CRANKSHAFT SOCKET

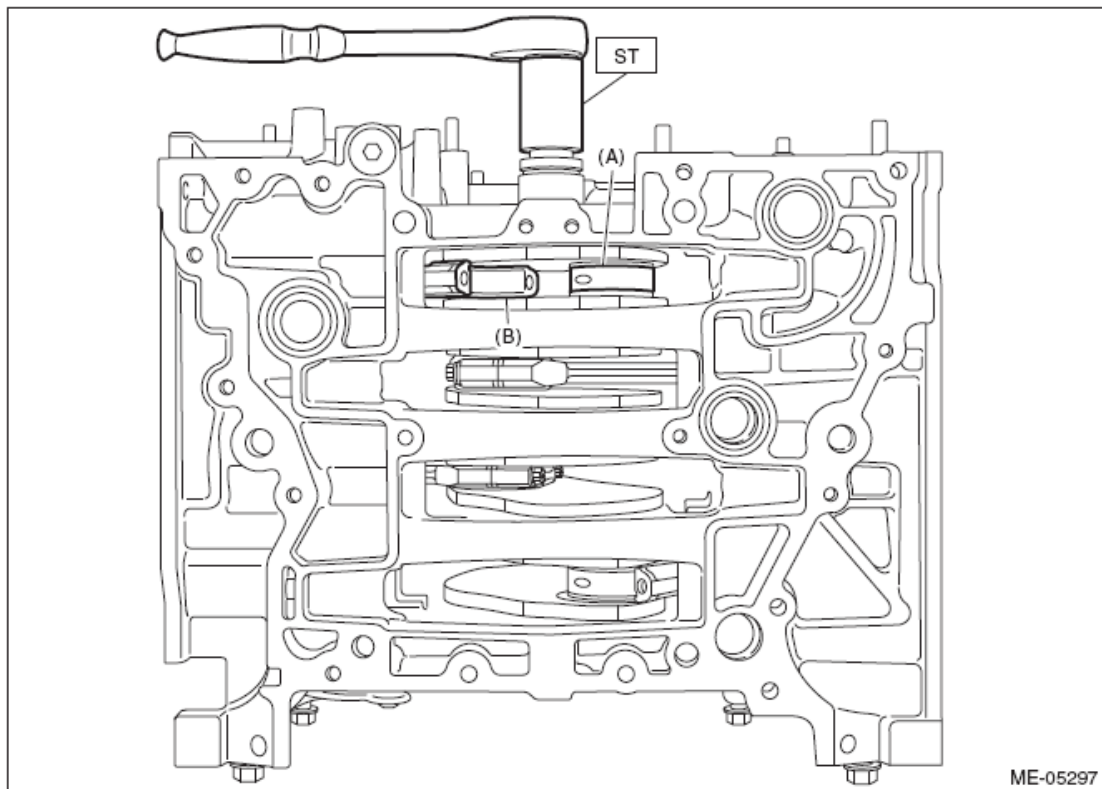


Fig. 498: Turning Crankshaft Counterclockwise Using ST
Courtesy of SUBARU OF AMERICA, INC.

5. Push the #1 connecting rod in the direction of the arrow, and remove the #1 piston with #1 connecting rod from the cylinder block.

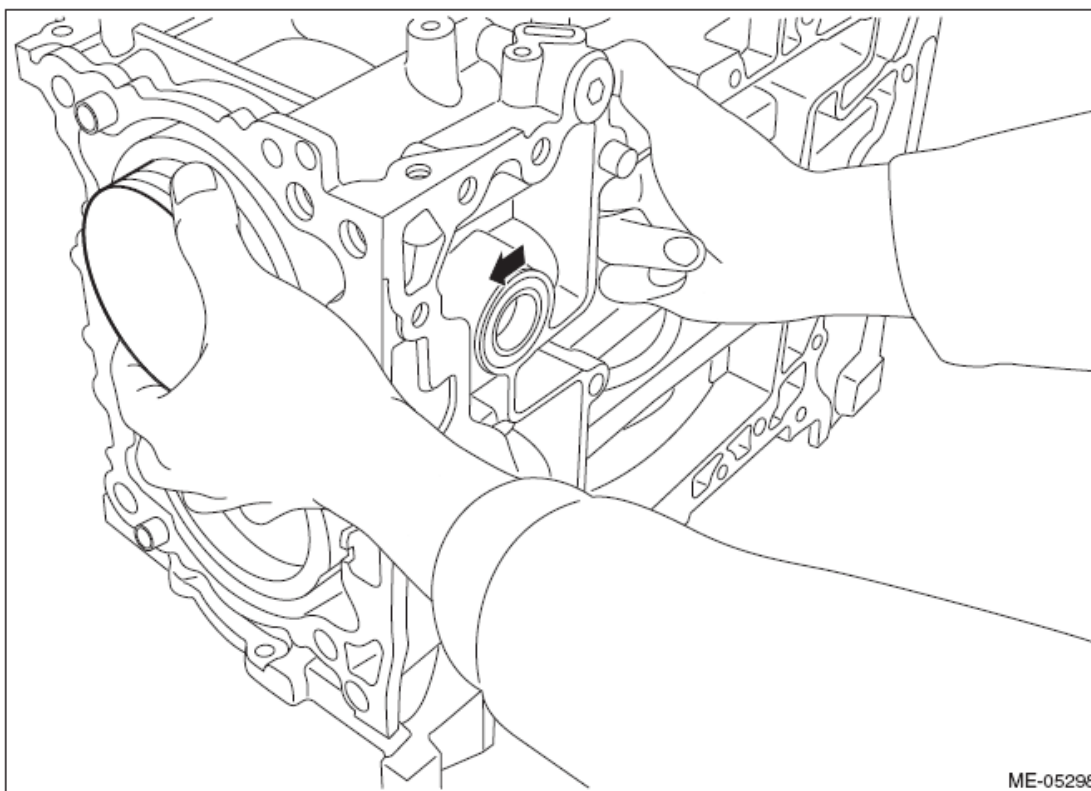


Fig. 499: Removing No. 1 Piston With No. 1 Connecting Rod From Cylinder Block
Courtesy of SUBARU OF AMERICA, INC.

6. Using the ST, turn the crankshaft clockwise and separate the positions of the #4 pin (A) of crankshaft and the large end (B) of #4 connecting rod.

ST 18252AA000 CRANKSHAFT SOCKET

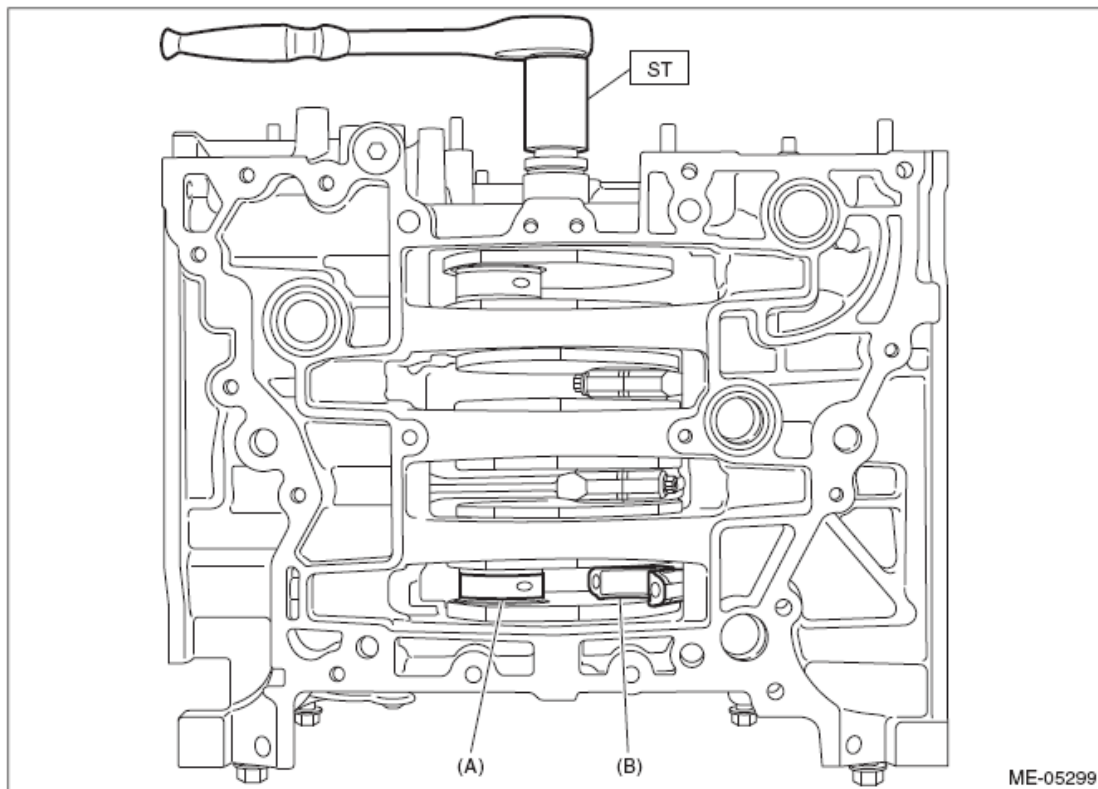


Fig. 500: Turning Crankshaft Clockwise Using ST
Courtesy of SUBARU OF AMERICA, INC.

7. Push the #4 connecting rod in the direction of the arrow, and remove the #4 piston with #4 connecting rod from the cylinder block.

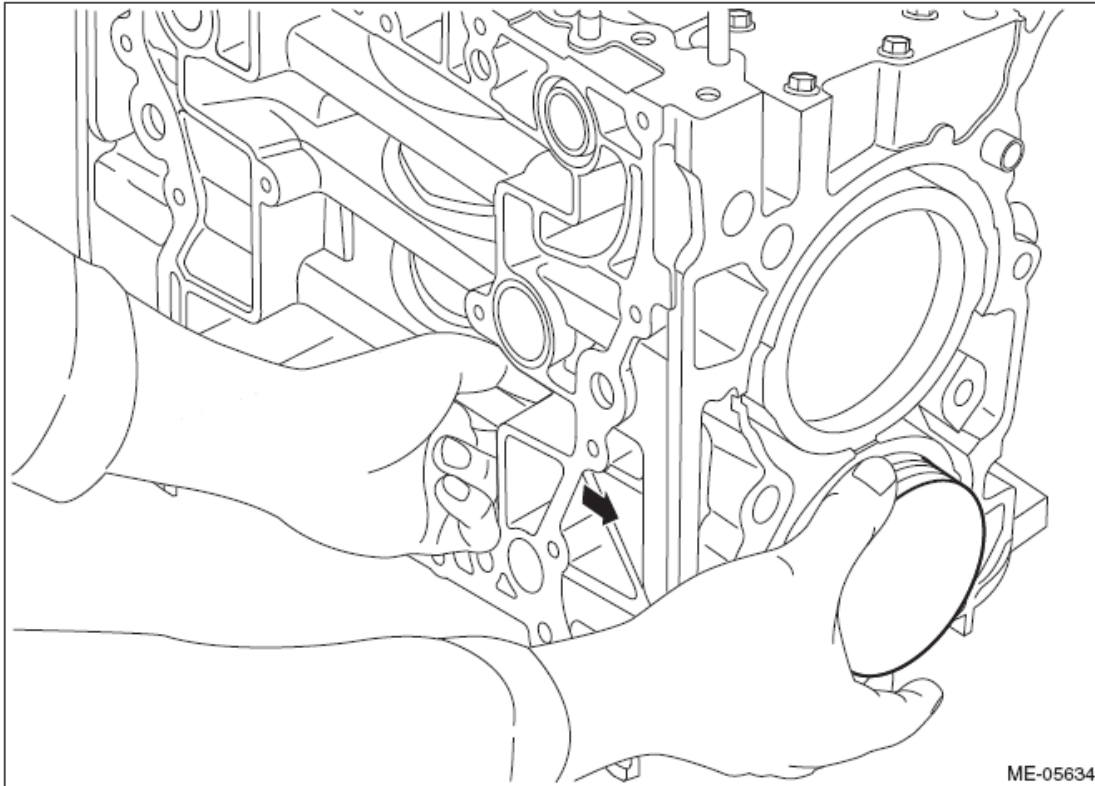


Fig. 501: Removing No. 4 Piston With No. 4 Connecting Rod From Cylinder Block
Courtesy of SUBARU OF AMERICA, INC.

28. Remove the #2 and #3 connecting rod caps and pistons from the cylinder block.

NOTE: **Mark each connecting rod cap and piston with a cylinder number.**

1. Turn the crankshaft so that the #2 connecting rod cap (A) and #3 connecting rod cap (B) is located at the position shown in the figure using ST.

ST 18252AA000 CRANKSHAFT SOCKET

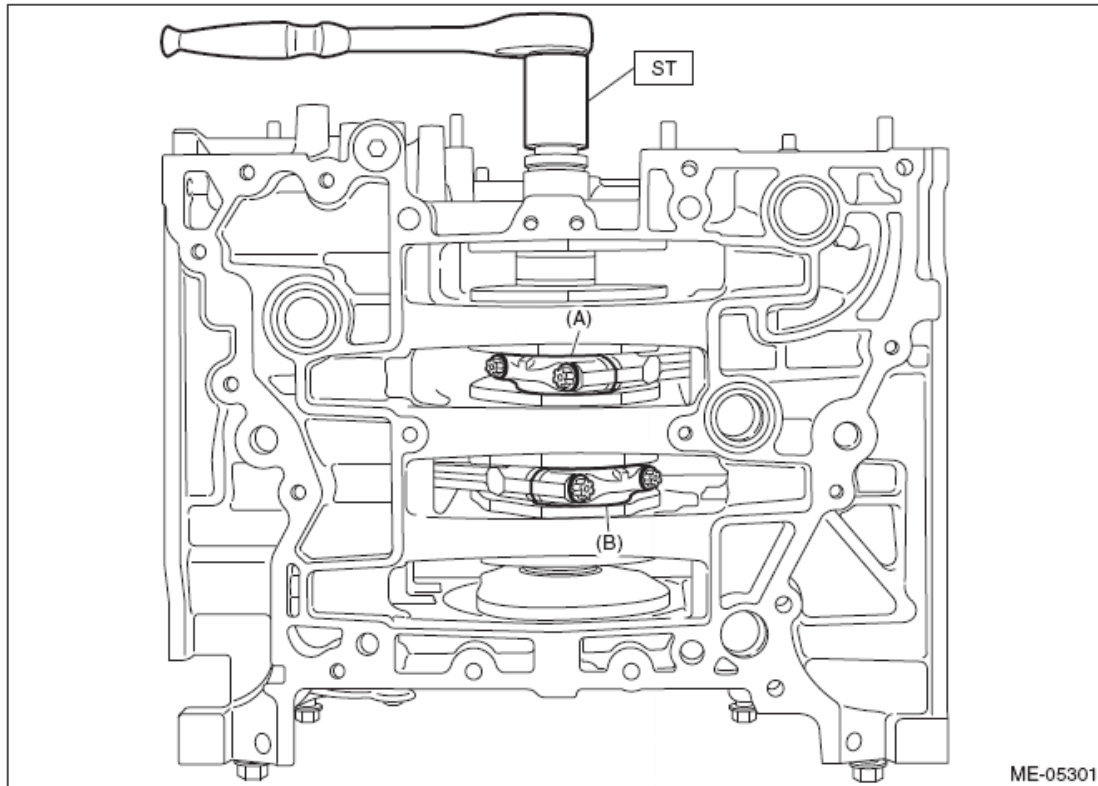


Fig. 502: Removing No. 2 And No. 3 Connecting Rod Caps And Pistons From Cylinder Block
Courtesy of SUBARU OF AMERICA, INC.

2. Using ST, loosen the #2 connecting rod cap bolt, and remove the #2 connecting rod cap bolt and #2 connecting rod cap.

ST 18270AA020 SOCKET

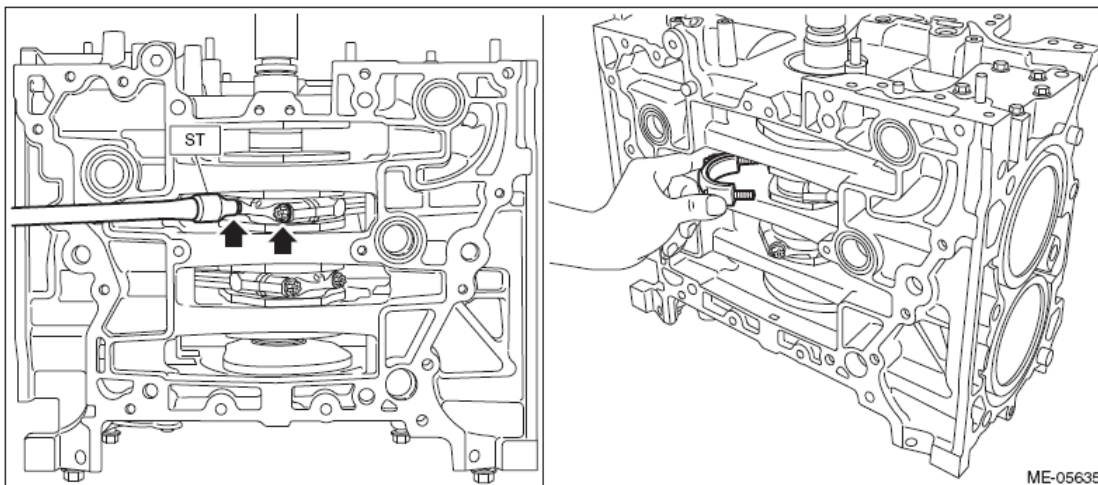


Fig. 503: Removing No. 2 Connecting Rod Cap Bolt And No. 2 Connecting Rod Cap
Courtesy of SUBARU OF AMERICA, INC.

3. Using ST, loosen the #3 connecting rod cap bolt, and remove the #3 connecting rod cap bolt and #3 connecting rod cap.

ST 18270AA020 SOCKET

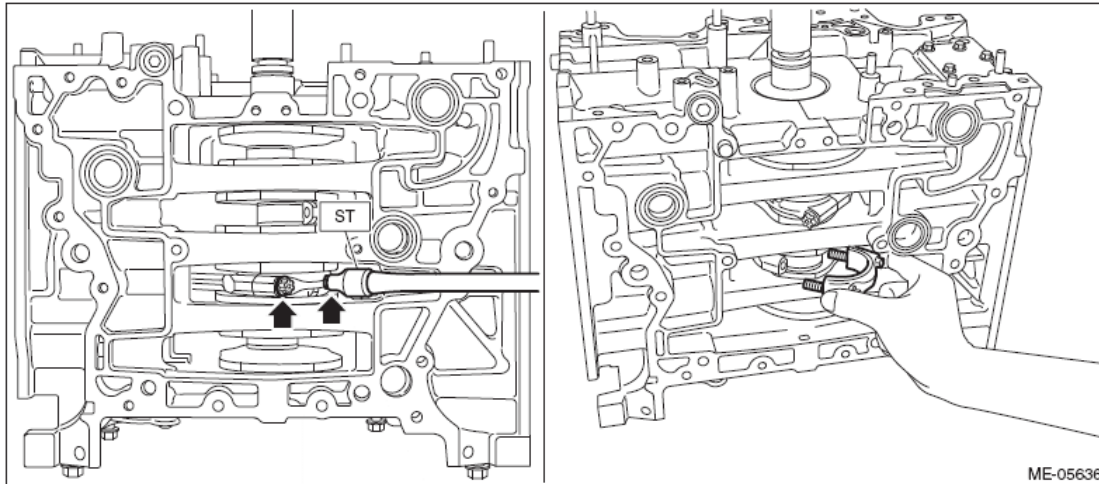


Fig. 504: Removing No. 3 Connecting Rod Cap Bolt
Courtesy of SUBARU OF AMERICA, INC.

4. Using the ST, turn the crankshaft clockwise and separate the positions of the #2 pin (A) of crankshaft and the large end (B) of #2 connecting rod.

ST 18252AA000 CRANKSHAFT SOCKET

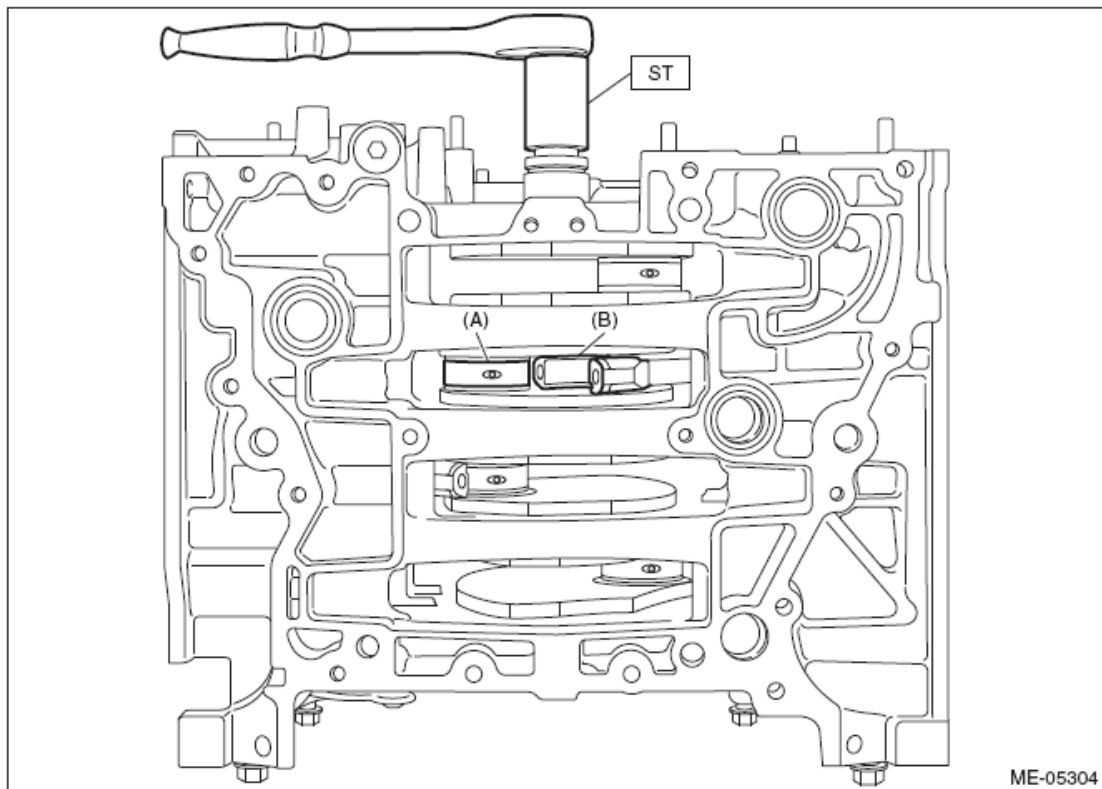


Fig. 505: Turning Crankshaft Clockwise Using ST
Courtesy of SUBARU OF AMERICA, INC.

5. Push the #2 connecting rod in the direction of the arrow, and remove the #2 piston with #2 connecting rod from the cylinder block.

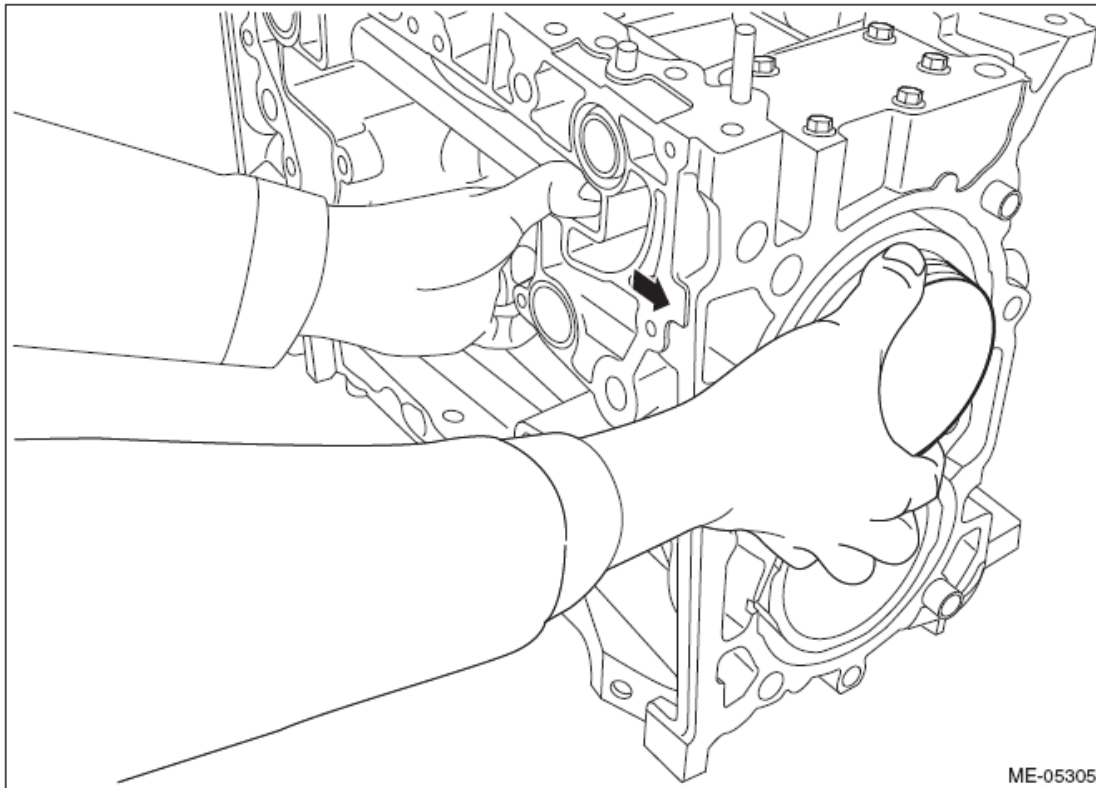


Fig. 506: Removing No. 2 Piston With No. 2 Connecting Rod From Cylinder Block
Courtesy of SUBARU OF AMERICA, INC.

6. Using the ST, turn the crankshaft counterclockwise and separate the positions of the #3 pin (A) of crankshaft and the large end (B) of #3 connecting rod.

ST 18252AA000 CRANKSHAFT SOCKET

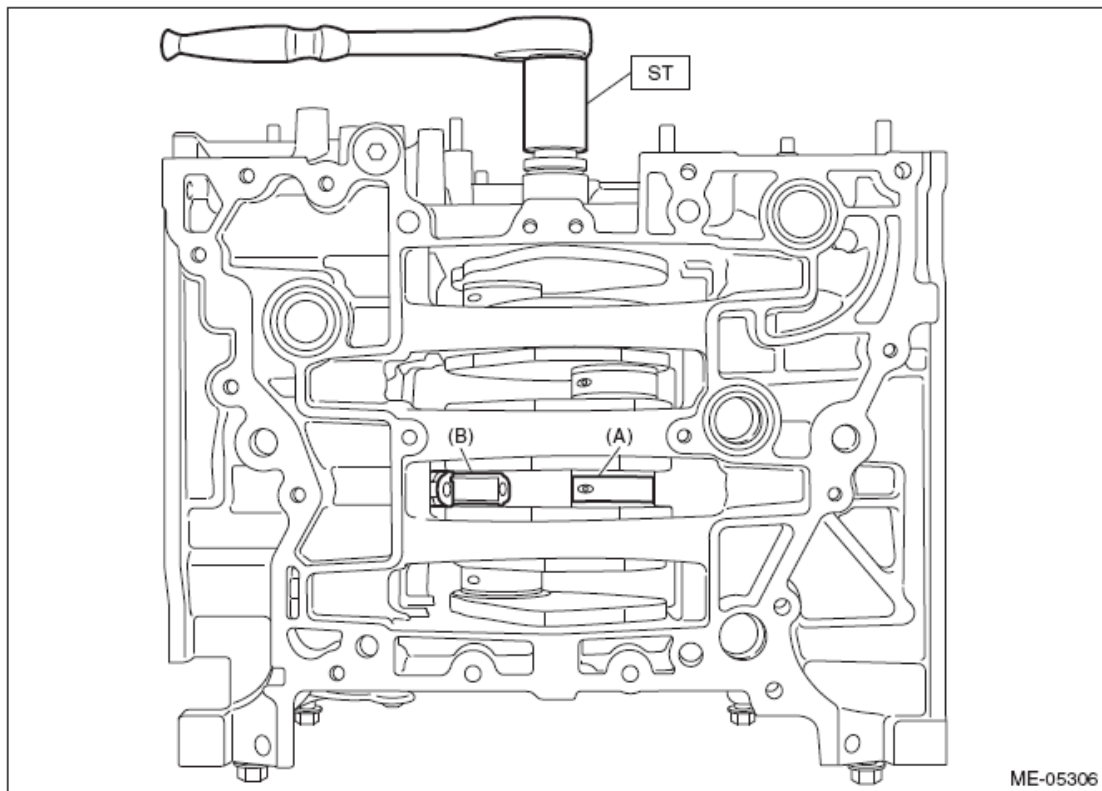


Fig. 507: Turning Crankshaft Using Tool
Courtesy of SUBARU OF AMERICA, INC.

7. Push the #3 connecting rod in the direction of the arrow, and remove the #3 piston with #3 connecting rod from the cylinder block.

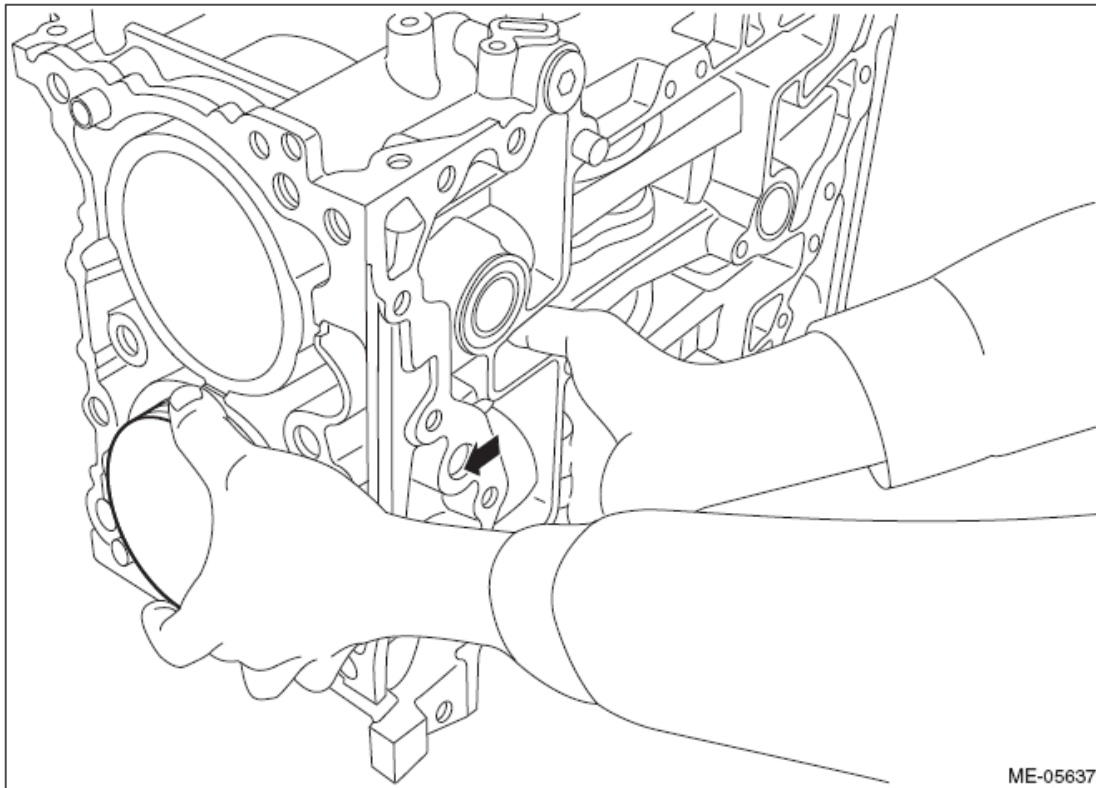


Fig. 508: Removing Piston With Connecting Rod (No. 3)
Courtesy of SUBARU OF AMERICA, INC.

29. Set the cylinder block so that the oil pan side faces upward, and remove the mounting bolts attached to the locations shown in the figure.

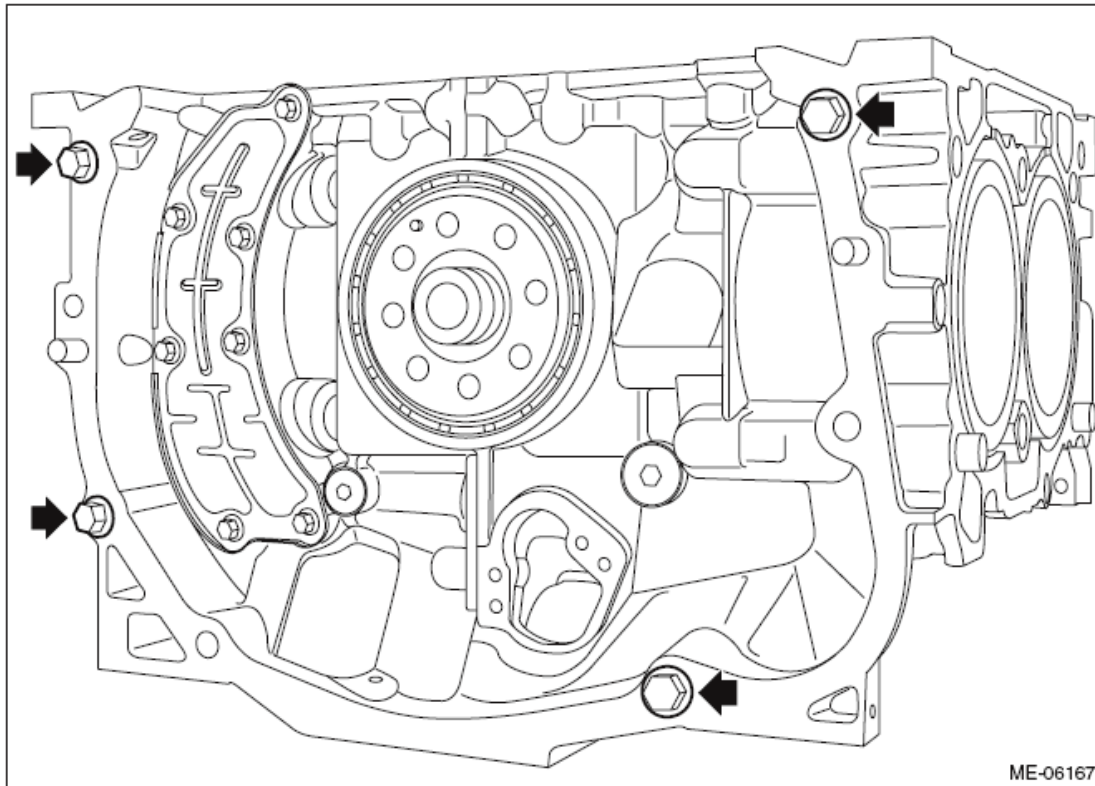


Fig. 509: Locating Cylinder Block Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

30. Set the part so that the cylinder block RH is on the upper side, and separate the cylinder block.

CAUTION:

- Place a wood board wrapped with a waste cloth to prevent the knock pin damage and to stabilize the cylinder block before work.
- Be careful not to scratch the mating surface of cylinder block during work.

1. Remove the bolt shown in the figure.

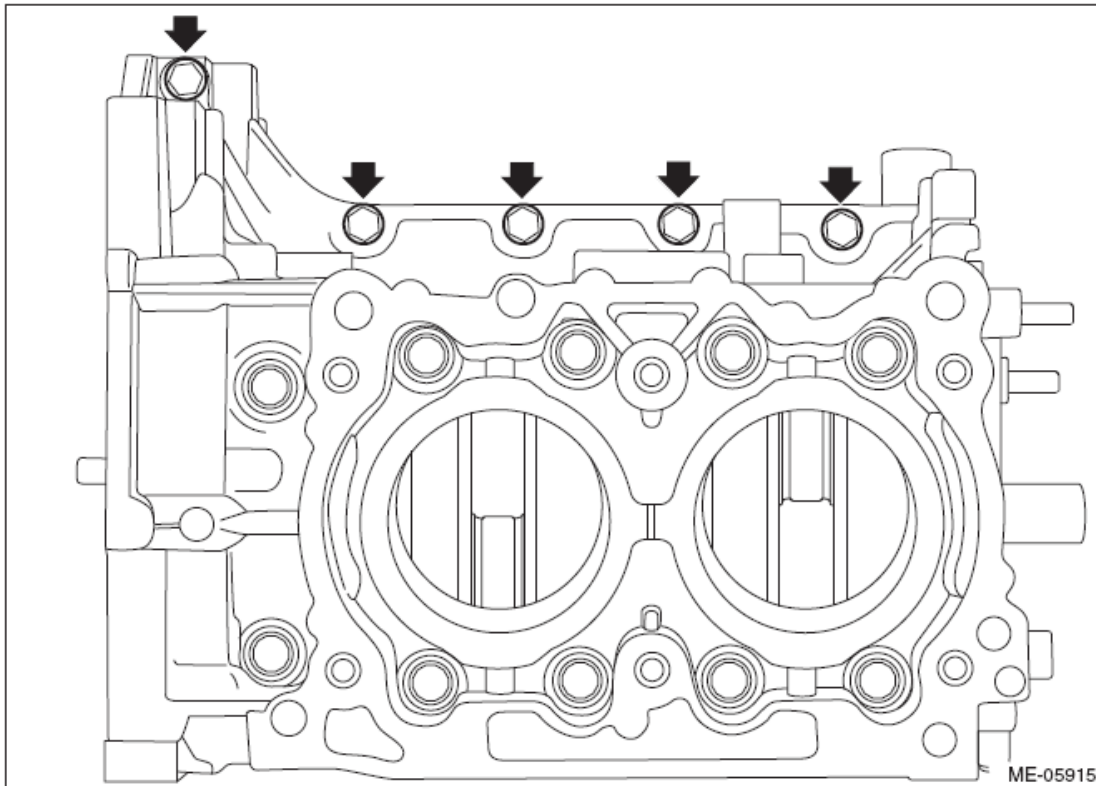


Fig. 510: Locating Cylinder Block RH Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

2. Loosen the cylinder block mounting bolts in numerical order as shown in the figure, and separate the cylinder block RH and LH.

NOTE: Lift the cylinder block RH slightly, and confirm that the crankshaft is remaining in the cylinder block LH. If the cylinder block RH is lifted carelessly when separating, the crankshaft may stick to cylinder block RH, then fall off.

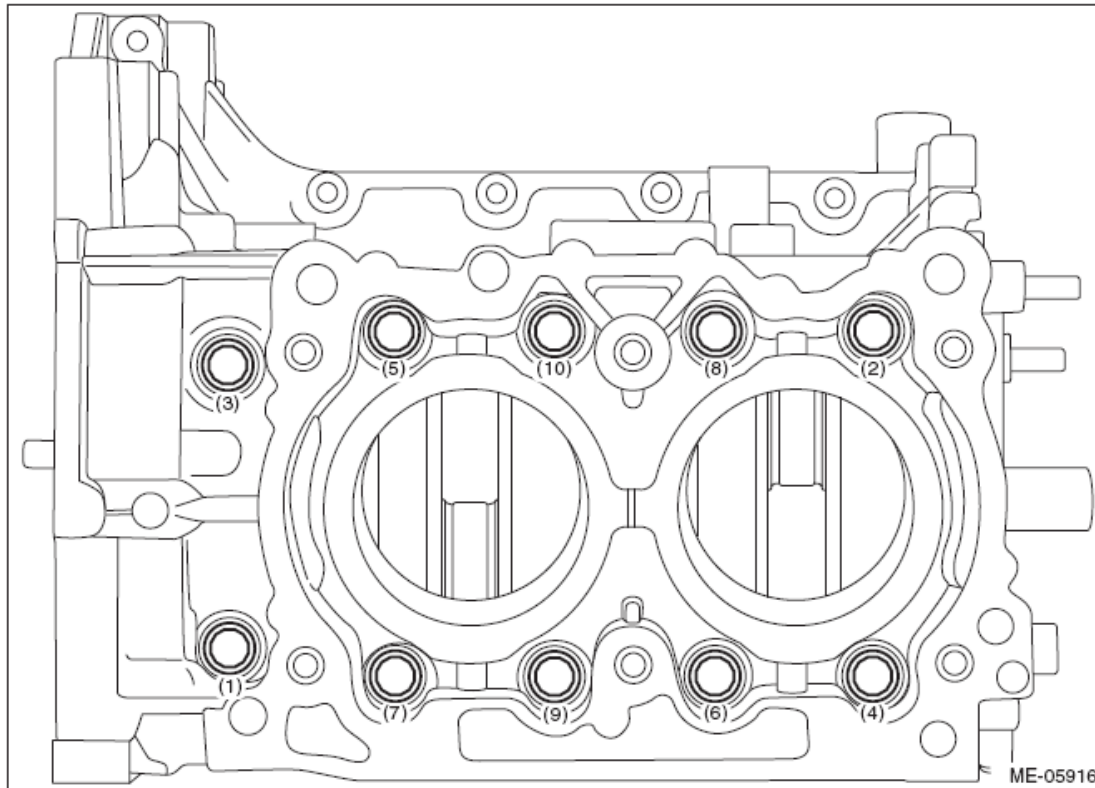


Fig. 511: Identifying Cylinder Block Mounting Bolts Loosening Sequence
Courtesy of SUBARU OF AMERICA, INC.

31. Remove the crankshaft from cylinder block LH, and remove the rear oil seal.
32. Remove the O-ring from the cylinder block LH.

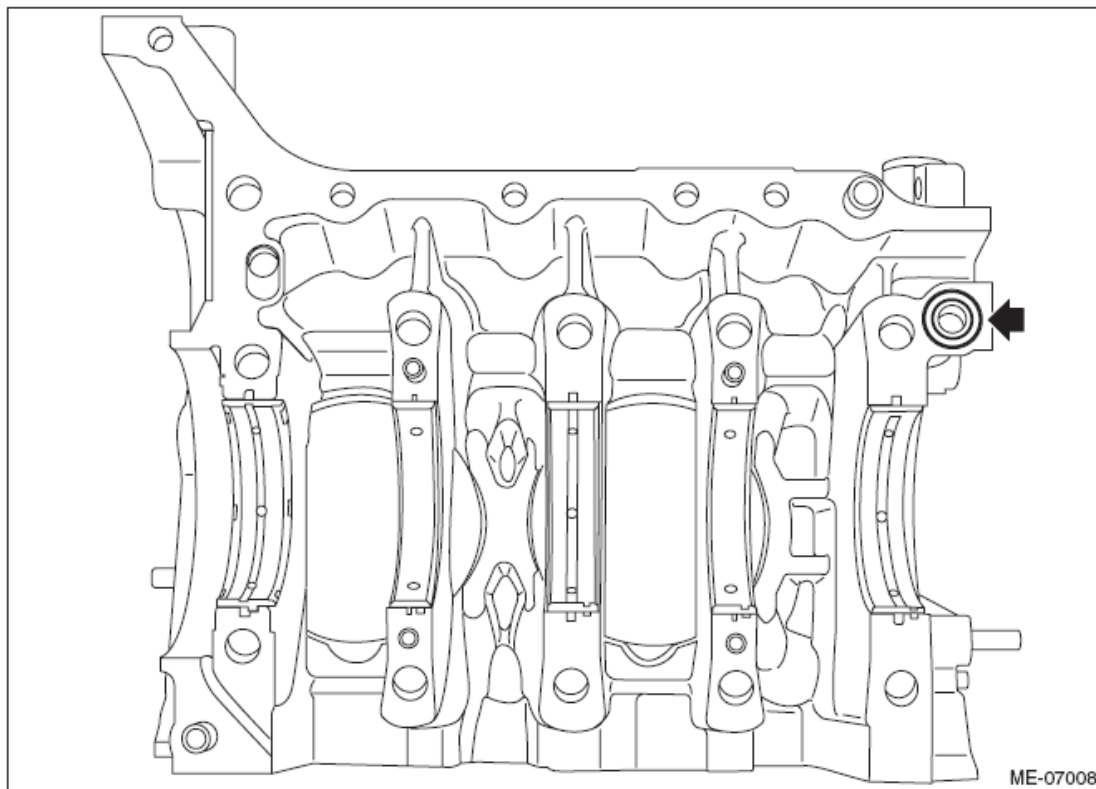


Fig. 512: Locating Cylinder Block LH O-Ring
 Courtesy of SUBARU OF AMERICA, INC.

33. Remove the crankshaft bearings from the cylinder block.

NOTE:

- Be careful not to confuse the crankshaft bearing combination.
- Press the bearing at the end opposite to locking lip (A).

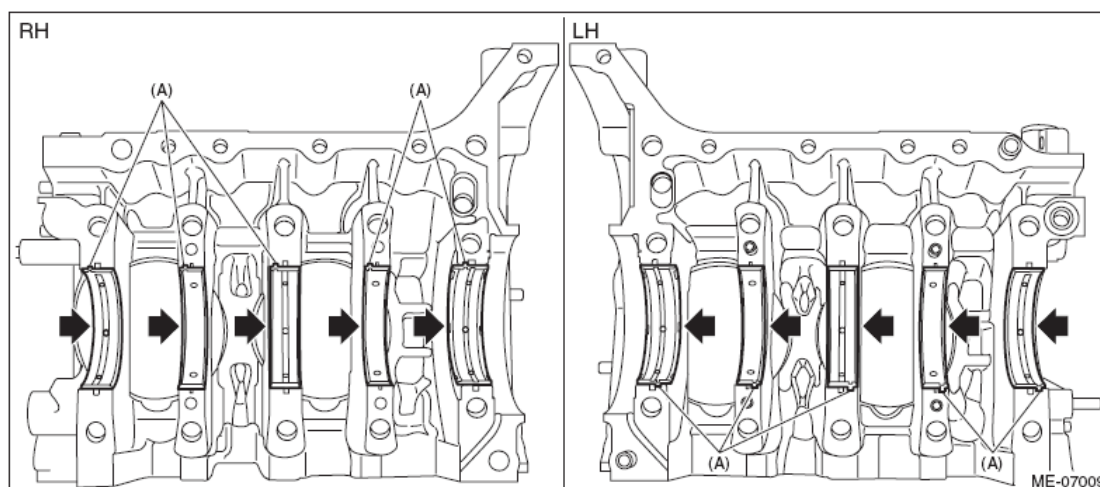


Fig. 513: Locating Crankshaft Bearings From Cylinder Block

Courtesy of SUBARU OF AMERICA, INC.

34. Remove the liquid gasket from cylinder block.

INSTALLATION

1. Apply engine oil to the crankshaft bearing, and install the crankshaft bearing to the cylinder block.

CAUTION:

- Place a wood board wrapped with a waste cloth to prevent the knock pin damage and to stabilize the cylinder block before work.
- Be careful not to scratch the mating surface of cylinder block during work.

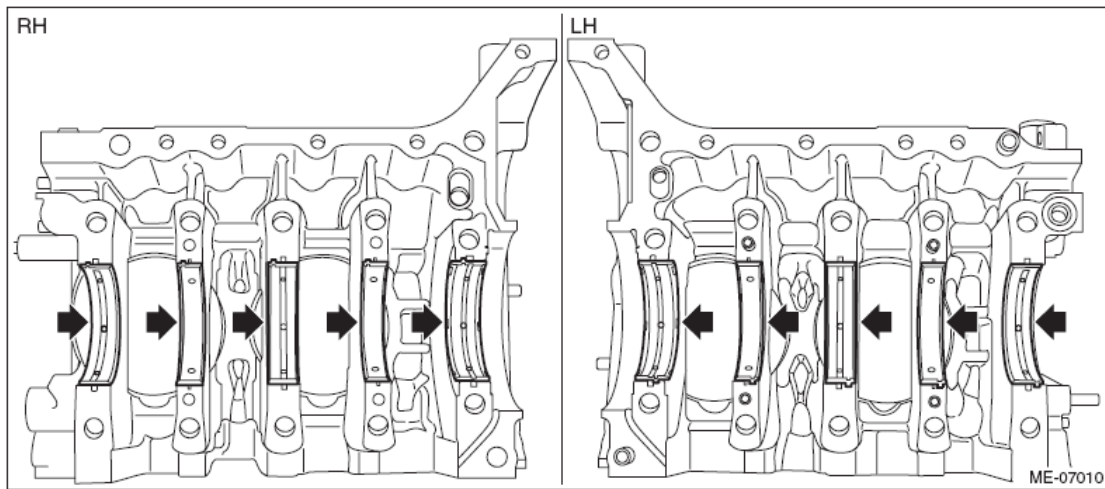


Fig. 514: Locating Crankshaft Bearing
Courtesy of SUBARU OF AMERICA, INC.

2. Install O-rings to the cylinder block LH.

NOTE: Use new O-rings.

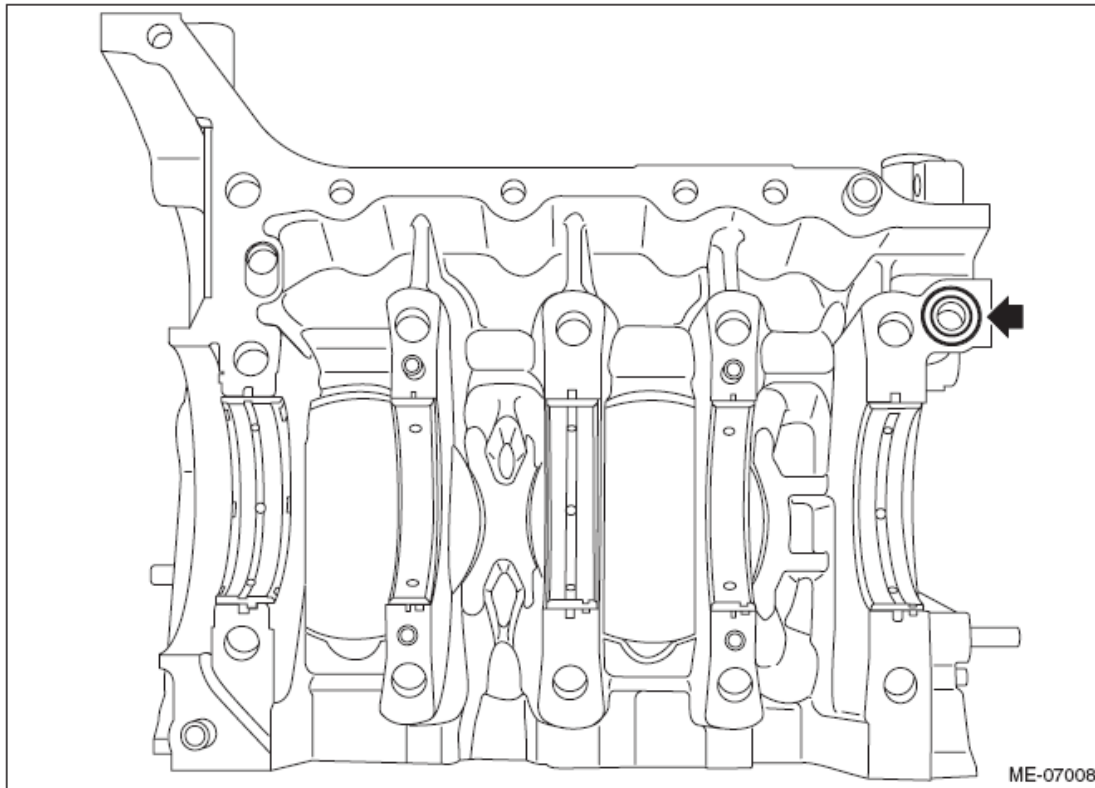


Fig. 515: Locating Cylinder Block LH O-Ring
Courtesy of SUBARU OF AMERICA, INC.

3. Apply engine oil to the crankshaft journal, and set the crankshaft to cylinder block LH.

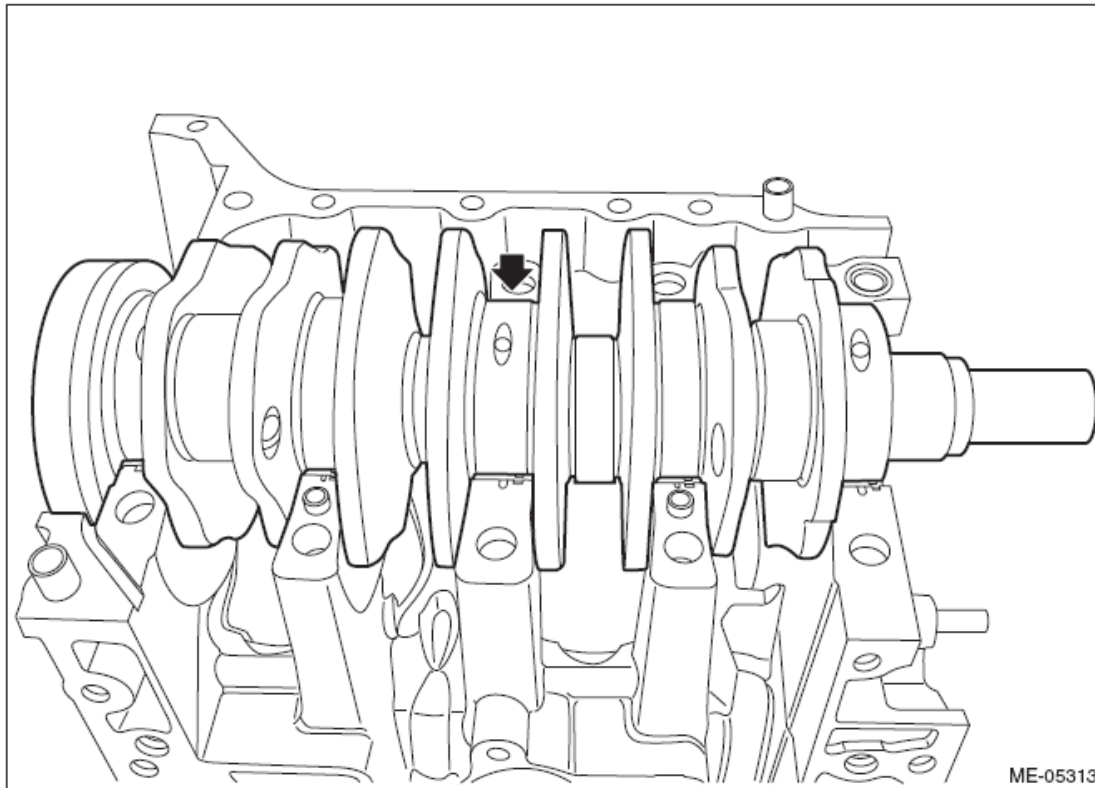


Fig. 516: Locating Crankshaft

Courtesy of SUBARU OF AMERICA, INC.

4. Apply liquid gasket to the mating surface of cylinder block RH as shown in the figure.

CAUTION: Do not let the liquid gasket overflow to the oil passage and crankshaft bearing portions, because the engine seizure may result.

NOTE:

- Before applying liquid gasket, degrease the old liquid gasket seal surface of the cylinder block RH and cylinder block LH.
- Install within 5 min. after applying liquid gasket.

Liquid gasket:

THREE BOND 1217G (Part No. K0877Y0100) or equivalent


Liquid gasket applying diameter:

Mating surfaces other than ranges A and B

$1 \pm 0.5 \text{ mm}$ ($0.0394 \pm 0.0197 \text{ in}$)

Mating surfaces of ranges A and B

$4 \pm 0.5 \text{ mm}$ ($0.1575 \pm 0.0197 \text{ in}$)

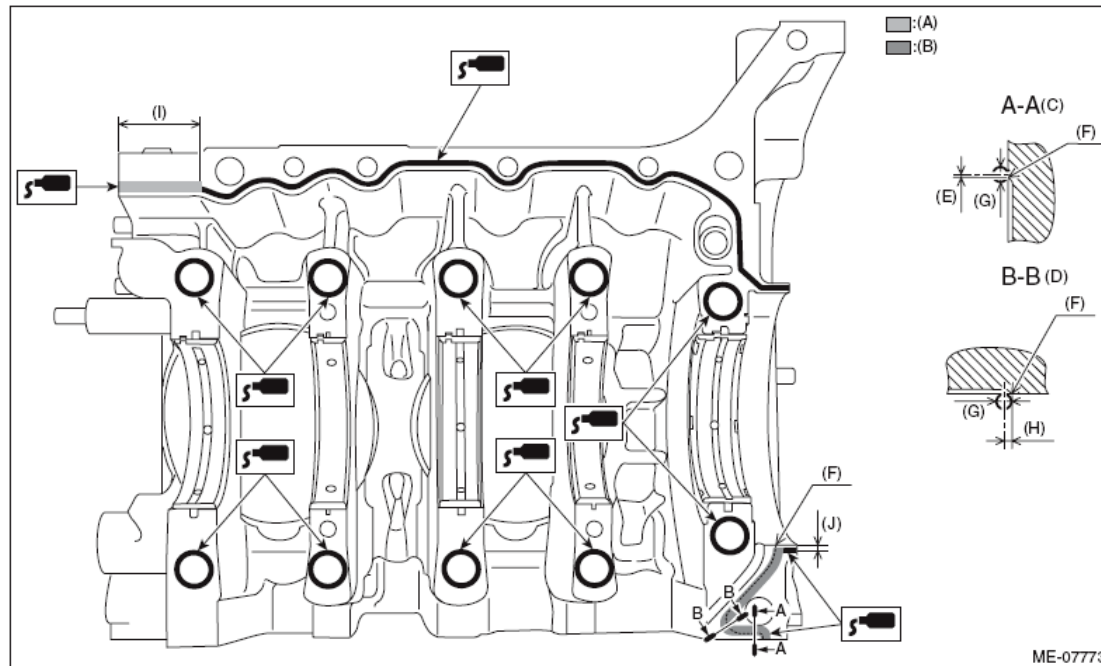

- | | | |
|---|--|------------------------|
| (A) Range A | (E) 1 mm (0.0394 in) or less | (I) 36 mm (1.4173 in) |
| (B) Range B | (F) Chamfer edge | (J) 2.5 mm (0.0984 in) |
| (C) Liquid gasket applying position of mating surfaces (other than the edge) of range B | (G) $\phi 4 \pm 0.5 \text{ mm}$ ($0.1575 \pm 0.0197 \text{ in}$) | |
| (D) Liquid gasket applying position of mating surfaces (the edge) of range B | (H) 2 mm (0.0787 in) | |

Fig. 517: Identifying Liquid Gasket Applying Area On Mating Surface Of Cylinder Block RH
 Courtesy of SUBARU OF AMERICA, INC.

5. Install the cylinder block RH to the cylinder block LH.
6. Join the cylinder blocks.
 1. Apply a coat of engine oil to the washers and cylinder block mounting bolt threads.

NOTE: To prevent mixture of engine oil into the water jacket, do not apply a large amount.

2. Install the cylinder head bolt at the locations shown in the figure.

NOTE: This procedure is required to tighten the cylinder block mounting bolts with specified angle using ST.

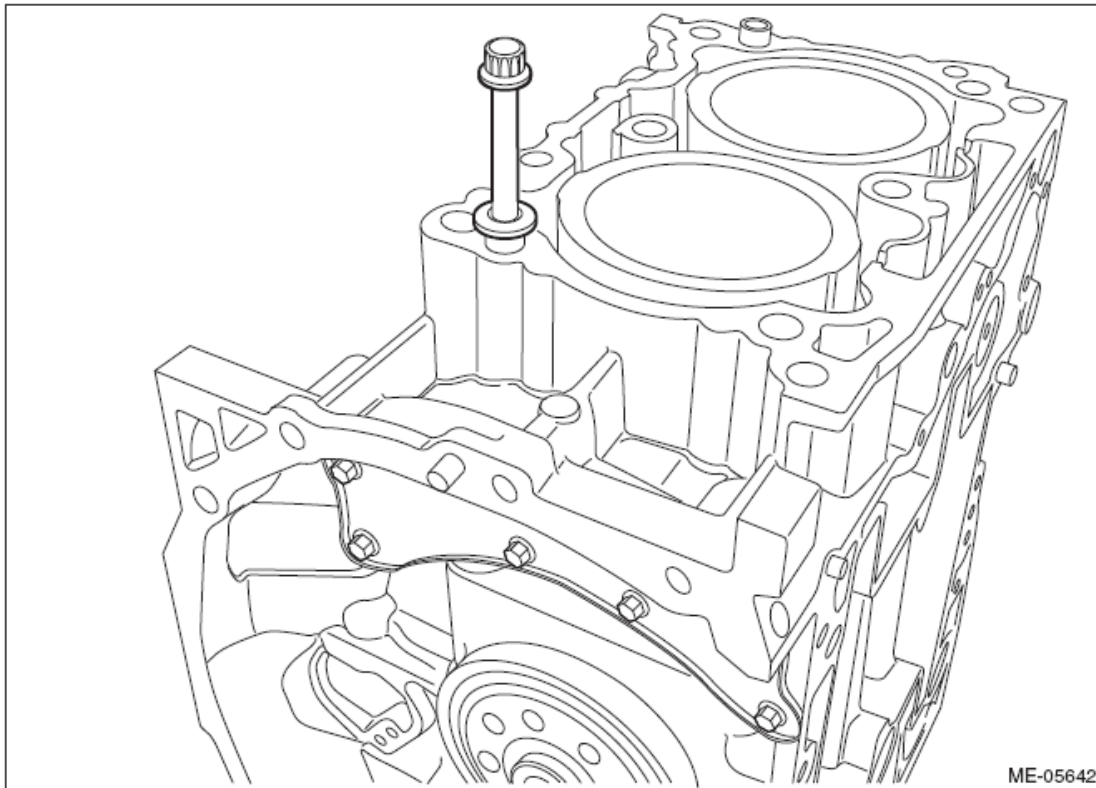


Fig. 518: Identifying Cylinder Block Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

3. Tighten all mounting bolts with a torque of 35 N.m (3.6 kgf-m, 25.8 ft-lb) in numerical order as shown in the figure.

CAUTION: When tightening the mounting bolts with specified torque, hold the cylinder block LH while not holding the cylinder block RH to ensure the joint accuracy of the cylinder block.

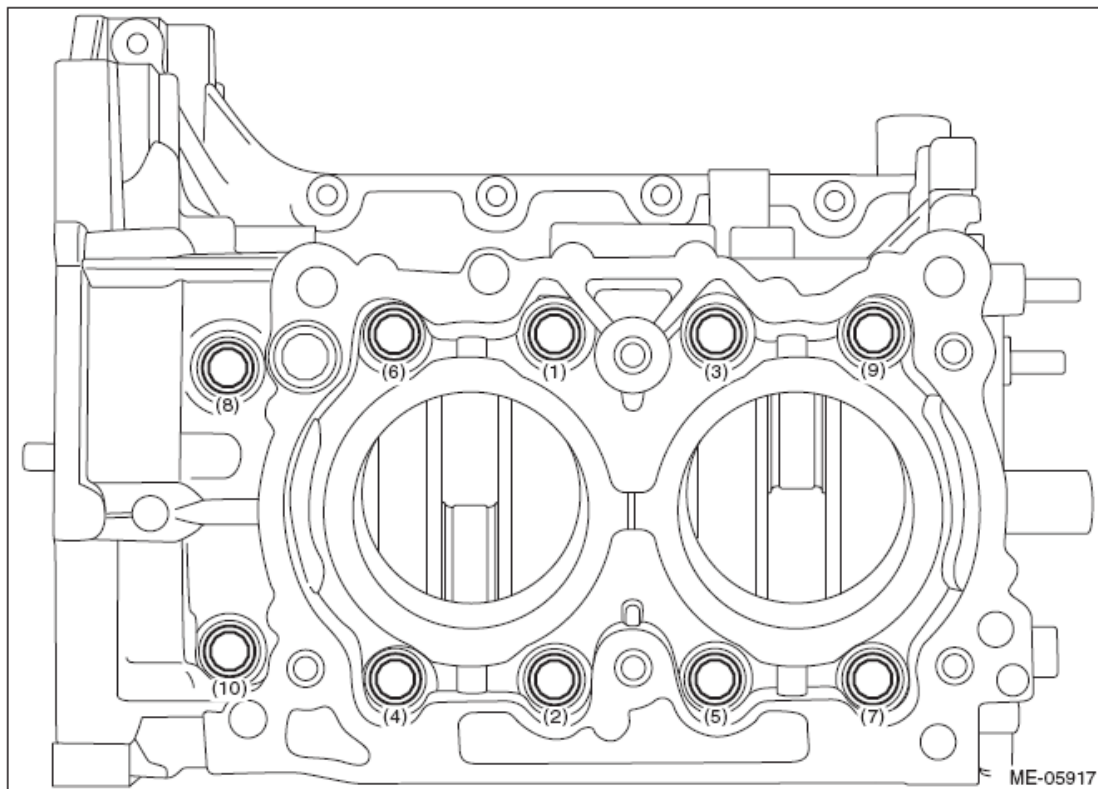


Fig. 519: Identifying Cylinder Block Mounting Bolts Tightening Sequence
Courtesy of SUBARU OF AMERICA, INC.

4. Loosen all mounting bolts by 180° in numerical order as shown in the figure.

CAUTION: When loosening the mounting bolts, hold the cylinder block LH while not holding the cylinder block RH to ensure the joint accuracy of the cylinder block.

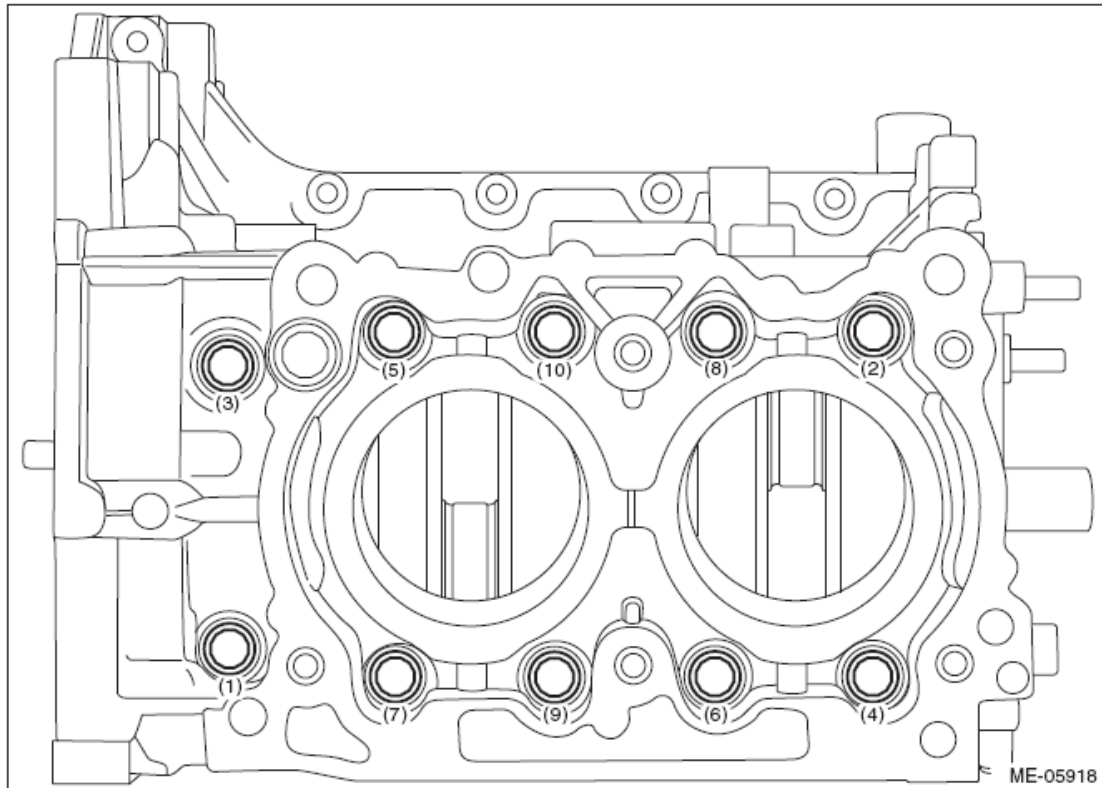


Fig. 520: Identifying Cylinder Block Mounting Bolts Loosening Sequence
Courtesy of SUBARU OF AMERICA, INC.

5. Tighten all mounting bolts with a torque of 35 N.m (3.6 kgf-m, 25.8 ft-lb) in numerical order as shown in the figure.

CAUTION: When tightening the mounting bolts with specified torque, hold the cylinder block LH while not holding the cylinder block RH to ensure the joint accuracy of the cylinder block.

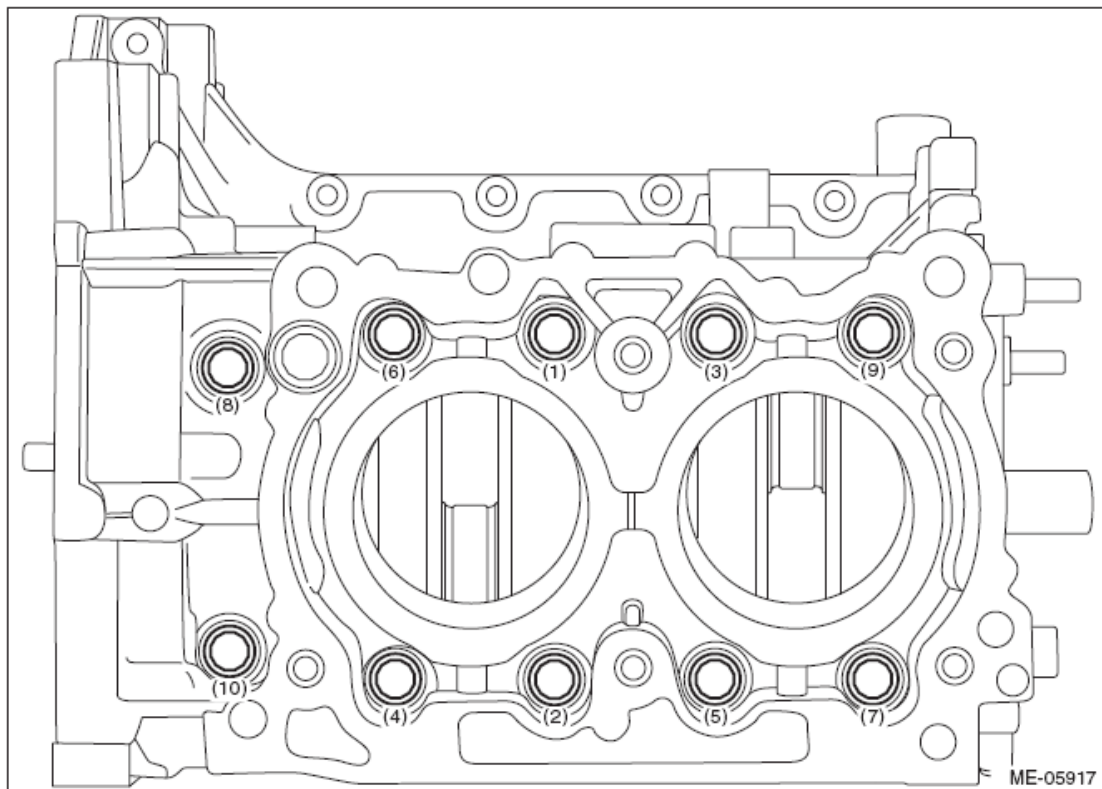


Fig. 521: Identifying Cylinder Block Mounting Bolts Tightening Sequence
Courtesy of SUBARU OF AMERICA, INC.

6. Loosen the mounting bolts (4 places) by 180° in numerical order as shown in the figure.

CAUTION: When loosening the mounting bolts, hold the cylinder block LH while not holding the cylinder block RH to ensure the joint accuracy of the cylinder block.

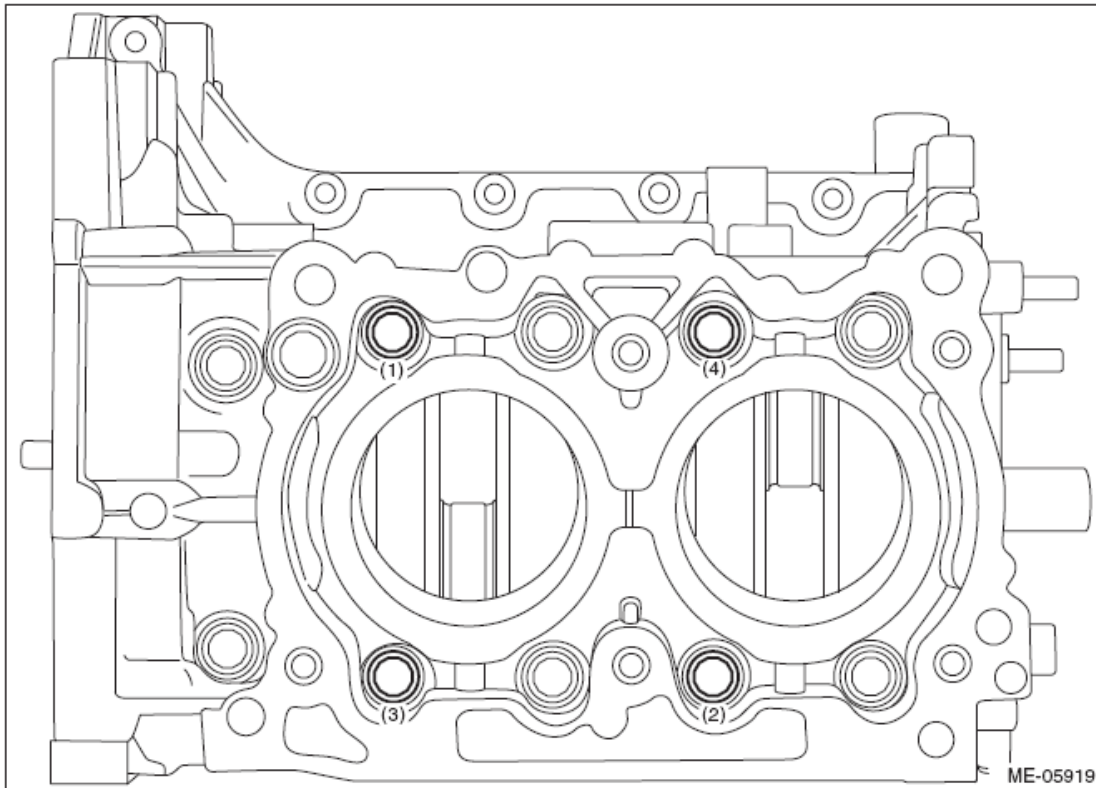


Fig. 522: Identifying Cylinder Block Mounting Bolts Loosening Sequence
Courtesy of SUBARU OF AMERICA, INC.

7. Tighten the mounting bolts (4 places) with a torque of 17 N.m (1.7 kgf-m, 12.5 ft-lb) in numerical order as shown in the figure.

CAUTION: When tightening the mounting bolts with specified torque, hold the cylinder block LH while not holding the cylinder block RH to ensure the joint accuracy of the cylinder block.

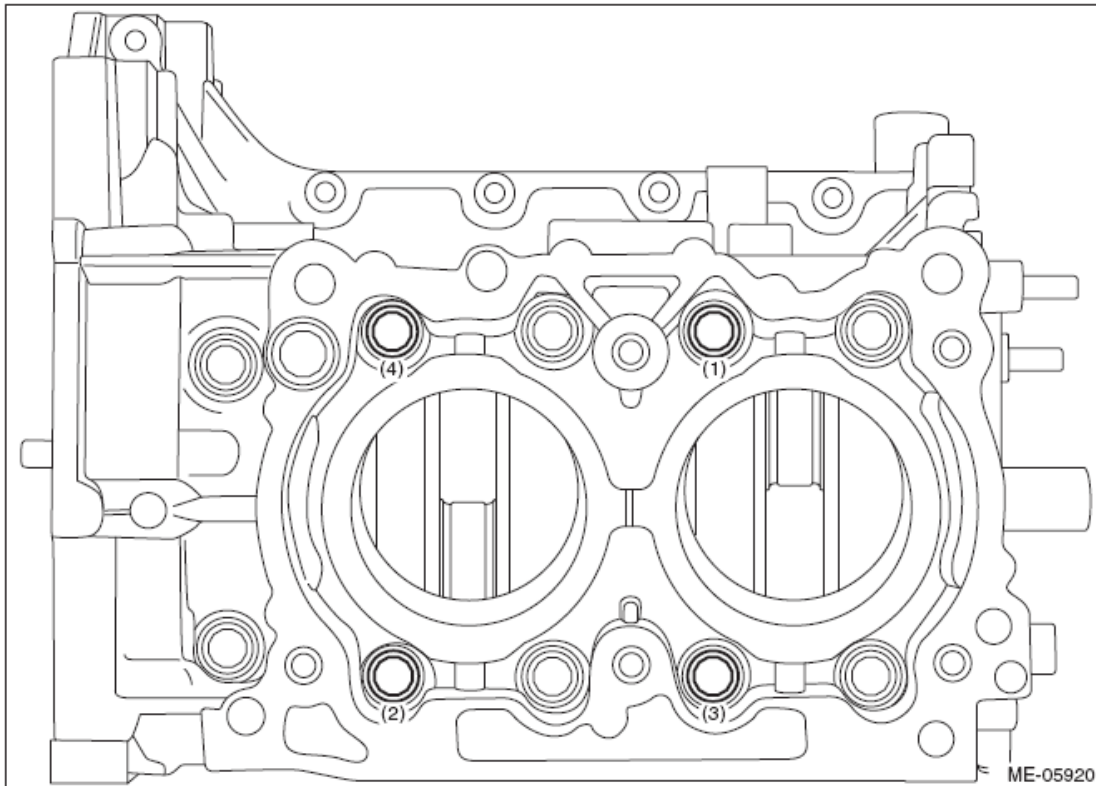


Fig. 523: Identifying Cylinder Block Mounting Bolts Tightening Sequence
Courtesy of SUBARU OF AMERICA, INC.

8. Using angle gauge, tighten the mounting bolts (4 places) with specified angle in numerical order as shown in the figure.

CAUTION: When tightening the mounting bolts with specified angle, hold the cylinder block LH while not holding the cylinder block RH to ensure the joint accuracy of the cylinder block.

Tightening angle:

$60^{\circ} \pm 2^{\circ}$

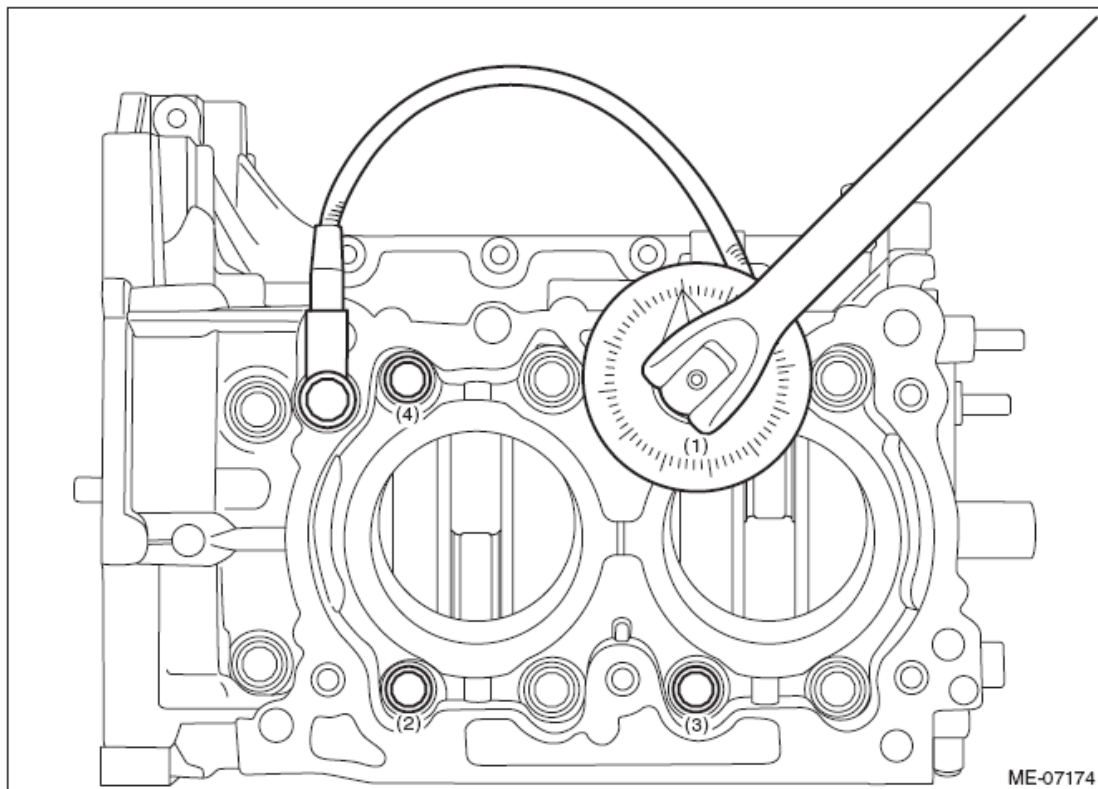


Fig. 524: Tightening Cylinder Block Mounting Bolt Using Angle Gauge
Courtesy of SUBARU OF AMERICA, INC.

9. Loosen the mounting bolts (6 places) by 180° in numerical order as shown in the figure.

CAUTION: When loosening the mounting bolts, hold the cylinder block LH while not holding the cylinder block RH to ensure the joint accuracy of the cylinder block.

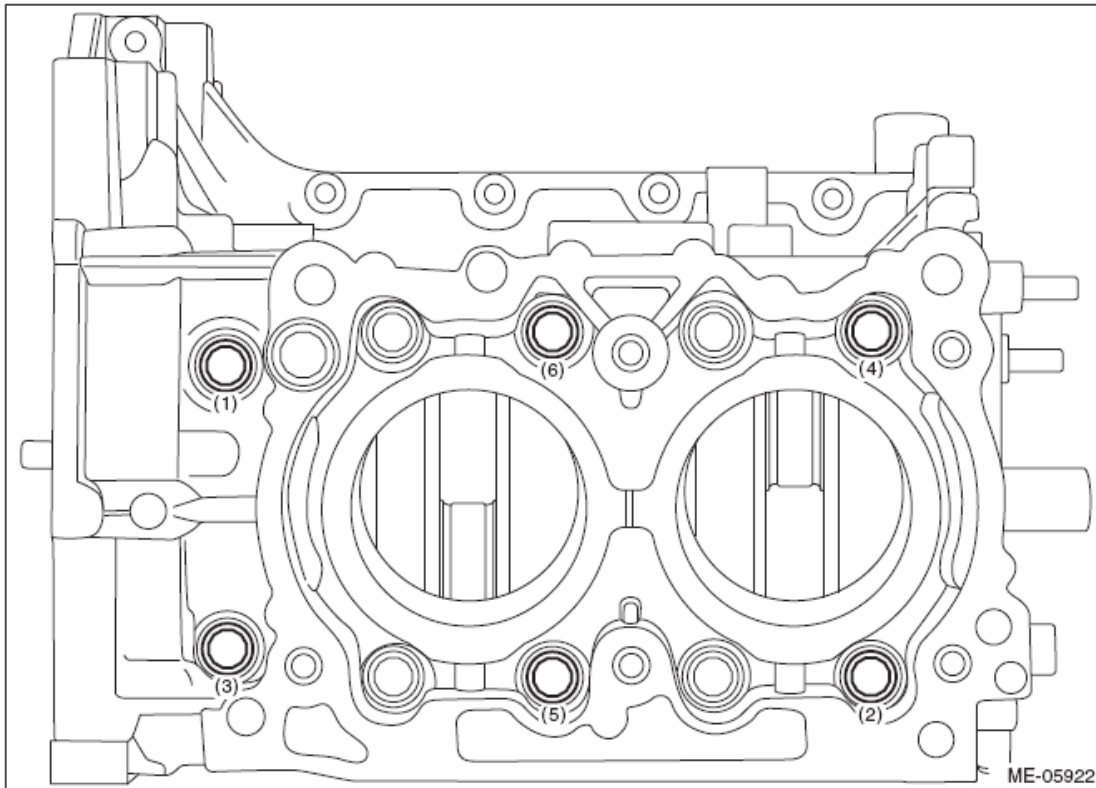


Fig. 525: Identifying Cylinder Block Mounting Bolts Loosening Sequence
Courtesy of SUBARU OF AMERICA, INC.

10. Tighten the mounting bolts (6 places) with a torque of 17 N.m (1.7 kgf-m, 12.5 ft-lb) in numerical order as shown in the figure.

CAUTION: When tightening the mounting bolts with specified torque, hold the cylinder block LH while not holding the cylinder block RH to ensure the joint accuracy of the cylinder block.

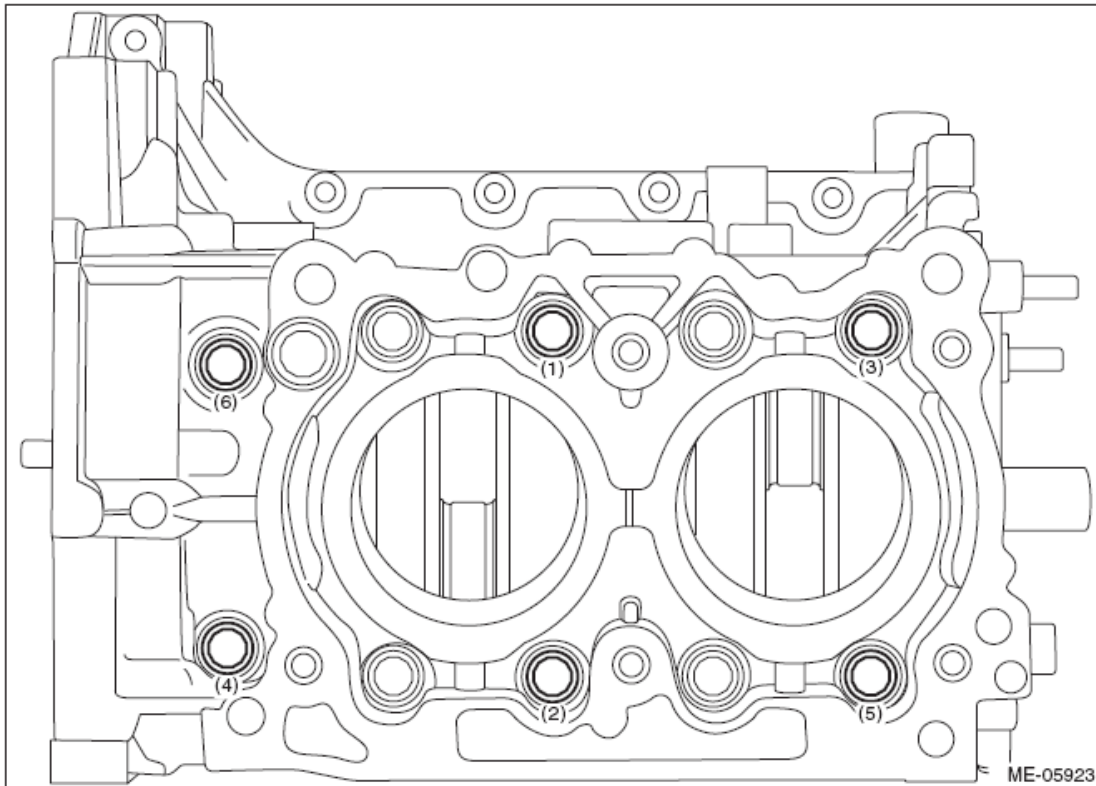


Fig. 526: Identifying Cylinder Block Mounting Bolts Tightening Sequence
Courtesy of SUBARU OF AMERICA, INC.

11. Using angle gauge, tighten the mounting bolts (6 places) with specified angle in numerical order as shown in the figure.

CAUTION: When tightening the mounting bolts with specified angle, hold the cylinder block LH while not holding the cylinder block RH to ensure the joint accuracy of the cylinder block.

Tightening angle:

$60^{\circ} \pm 2^{\circ}$

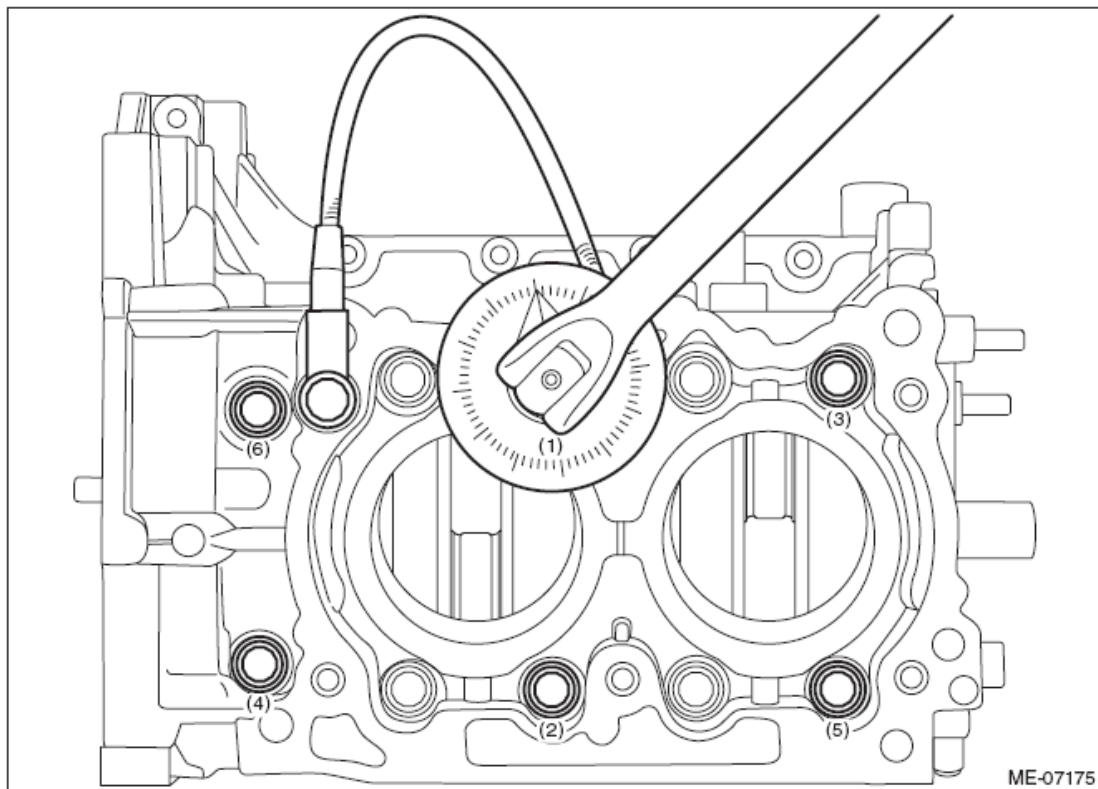


Fig. 527: Tightening Cylinder Block Mounting Bolts Using Angle Gauge
Courtesy of SUBARU OF AMERICA, INC.

12. Remove the cylinder head bolt attached at the locations shown in the figure.

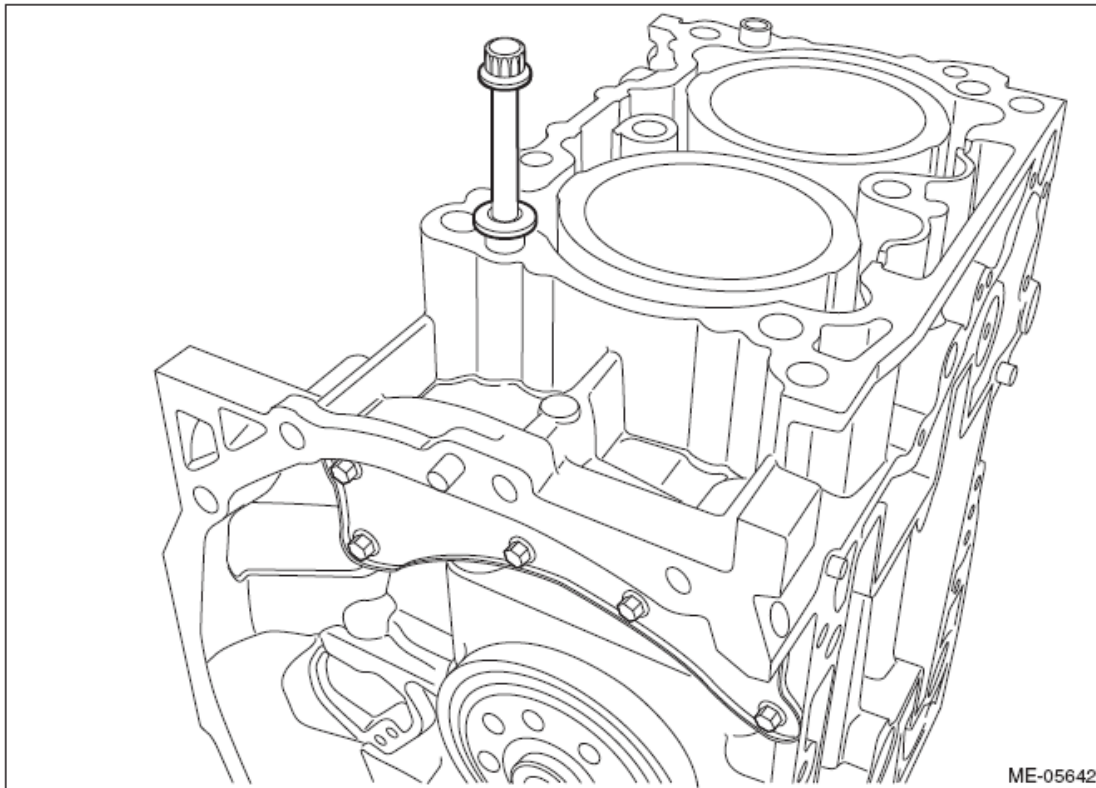


Fig. 528: Identifying Cylinder Head Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

13. Install the bolt shown in the figure.

NOTE: After tightening, if the liquid gasket is squeezed out in the seal surface area of the chain cover and oil pan upper, completely remove any liquid gasket that is squeezed out. Any liquid gasket on the chamfer area, however, should not be removed.

Tightening torque:

25 N.m (2.5 kgf-m, 18.4 ft-lb)

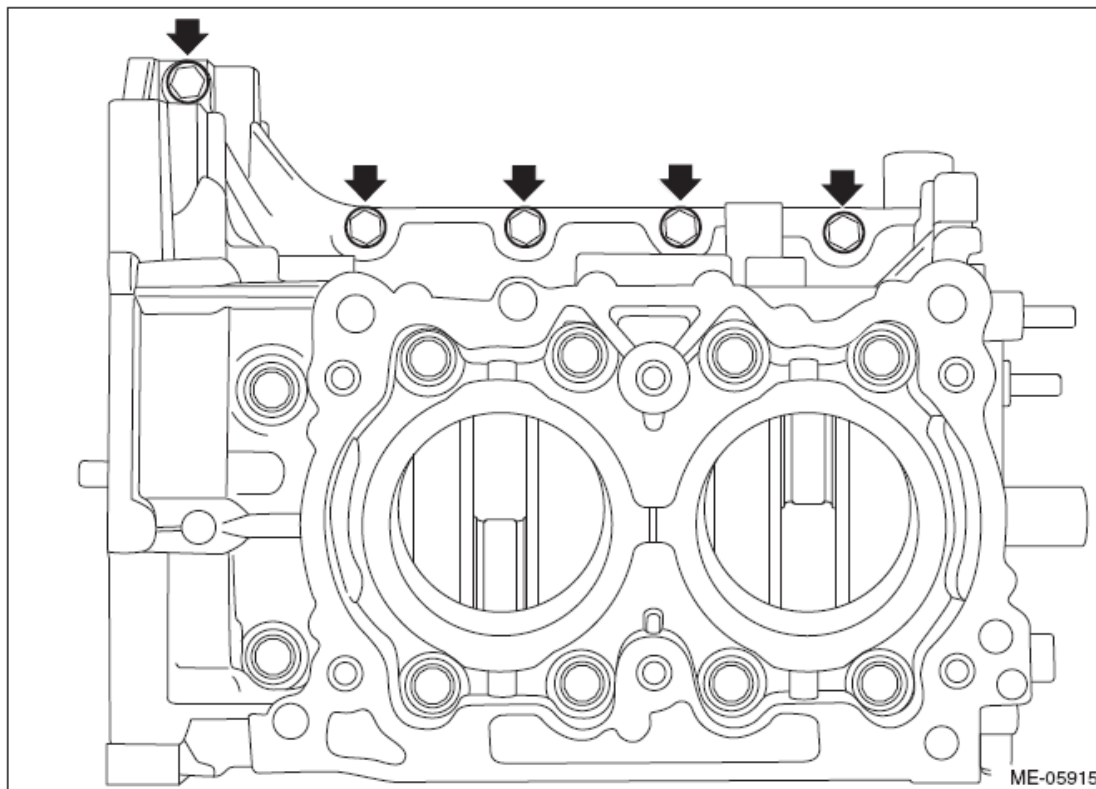



Fig. 529: Locating Cylinder Block Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

7. Set the part so that the oil pan side of cylinder block is on the upper side.
8. Apply a coat of engine oil to the oil seal inner periphery and outer periphery, and install the rear oil seal using ST1 and ST2.

NOTE: **Use a new rear oil seal.**

ST1 18671AA020 OIL SEAL GUIDE

ST2 18657AA030 OIL SEAL INSTALLER

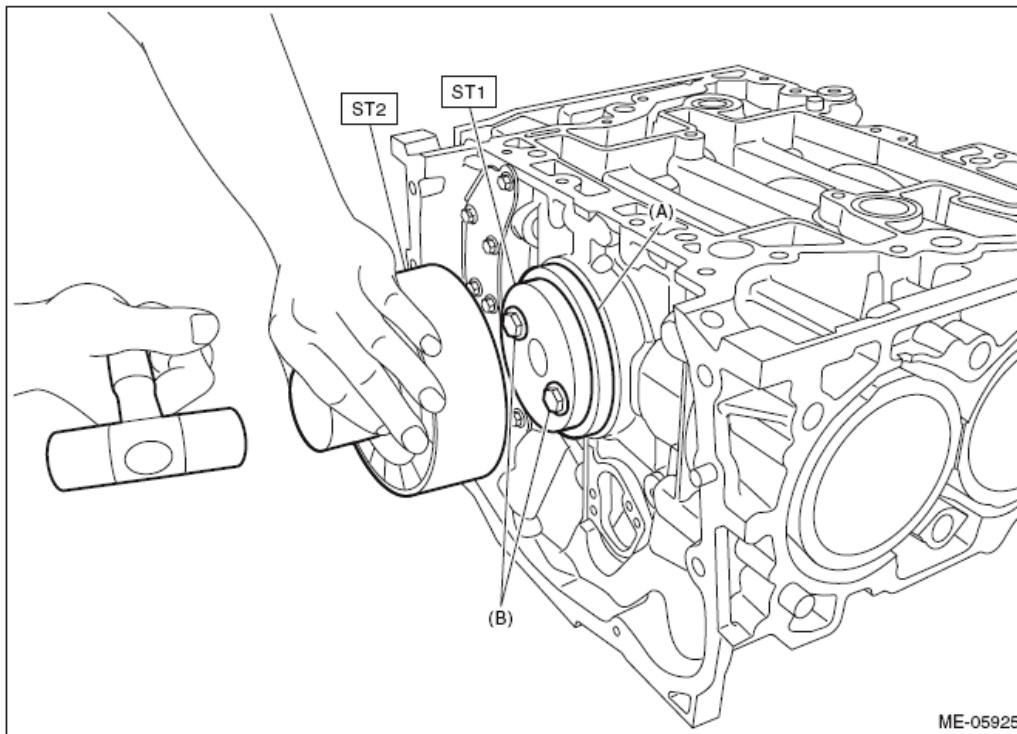

(A) Rear oil seal

(B) Drive plate or flywheel mounting bolt

Fig. 530: Installing Rear Oil Seal Using Suitable Tool
 Courtesy of SUBARU OF AMERICA, INC.

9. Install a bolt of suitable length (M10 x P1.25) at the locations shown in the figure.

NOTE:

- This procedure is required to prevent the knock pin damage when the cylinder block is raised in the next step.
- Use the same length of bolt for the four bolts.

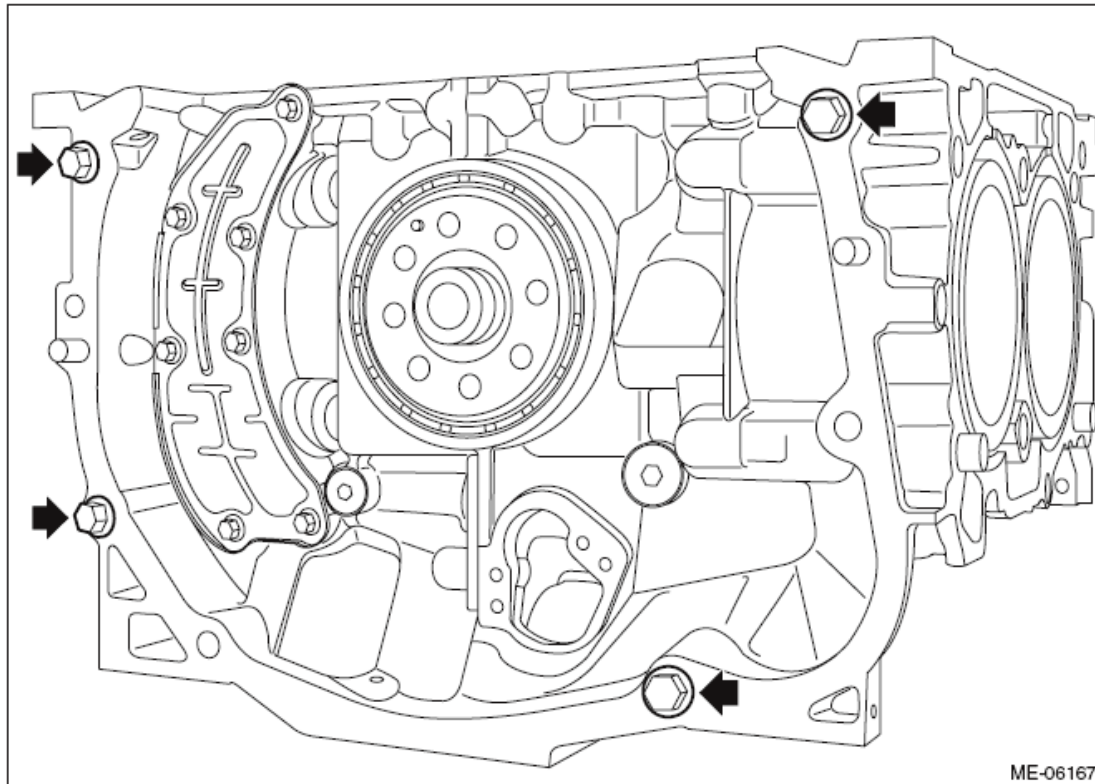


Fig. 531: Locating Cylinder Block Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

10. Raise the cylinder block so that the rear oil seal is on the lower side.
11. Adjust the positions of piston ring gap for each piston.

NOTE: Check that the piston ring mark of compression ring faces the top side of the piston.

1. Set the ring gap of the top ring to the position (A) in the figure.
 - Gasoline engine model

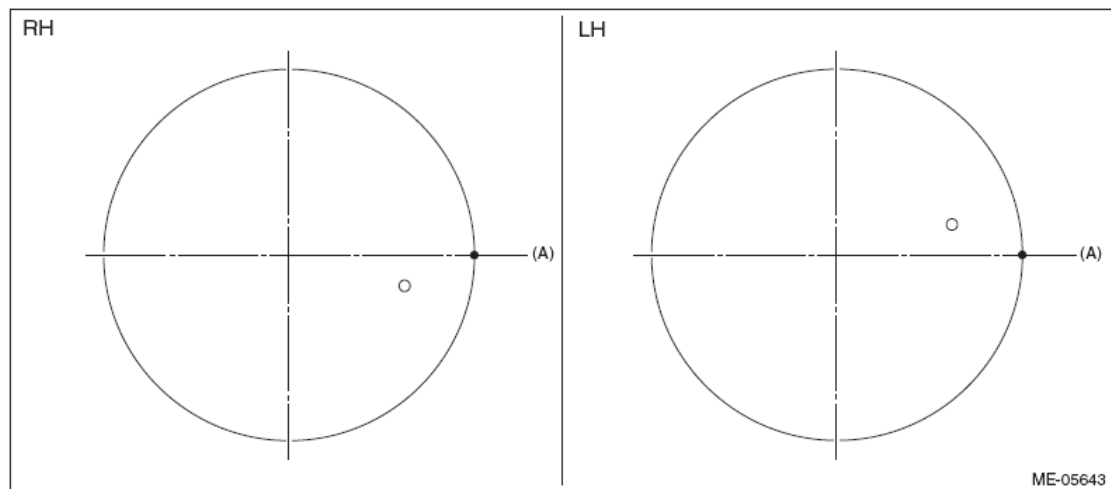


Fig. 532: Identifying First Piston Ring Installation Position (Gasoline Engine Model)
Courtesy of SUBARU OF AMERICA, INC.

- HEV model

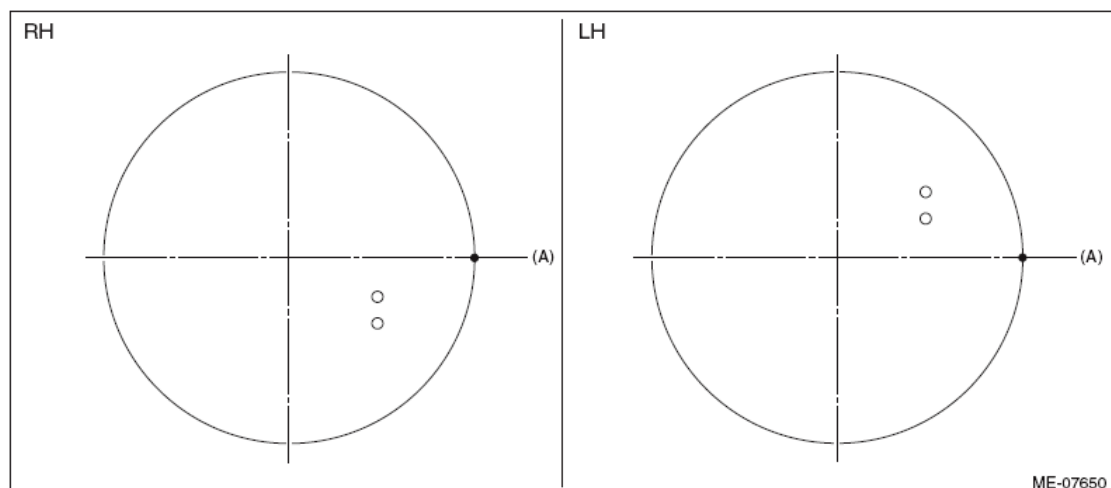


Fig. 533: Identifying First Piston Ring Installation Position (HEV Model)
Courtesy of SUBARU OF AMERICA, INC.

2. Position the ring gap of second ring at (B) in the figure on the 180° opposite direction of (A).
 - Gasoline engine model

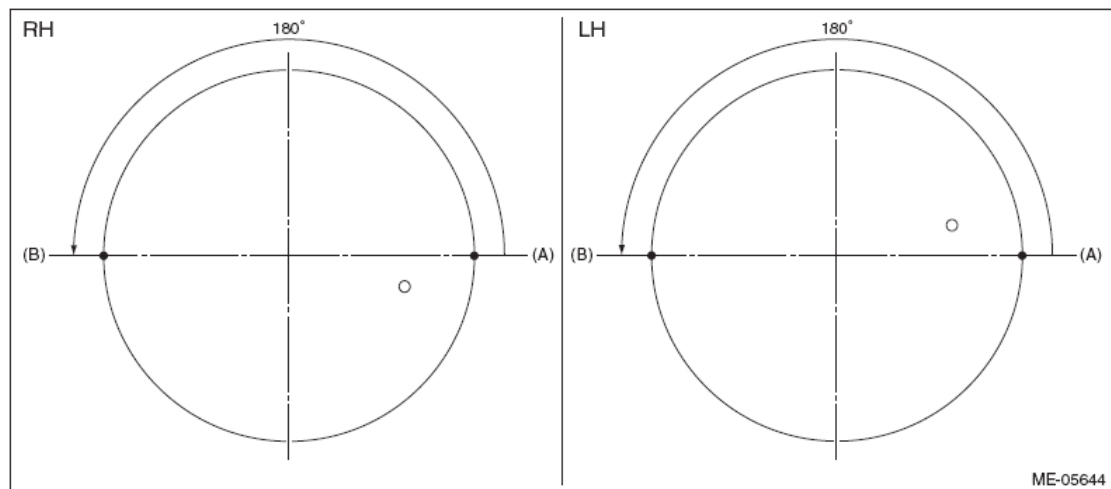


Fig. 534: Identifying Second Piston Ring Installation Position (Gasoline Engine Model)
 Courtesy of SUBARU OF AMERICA, INC.

- HEV model

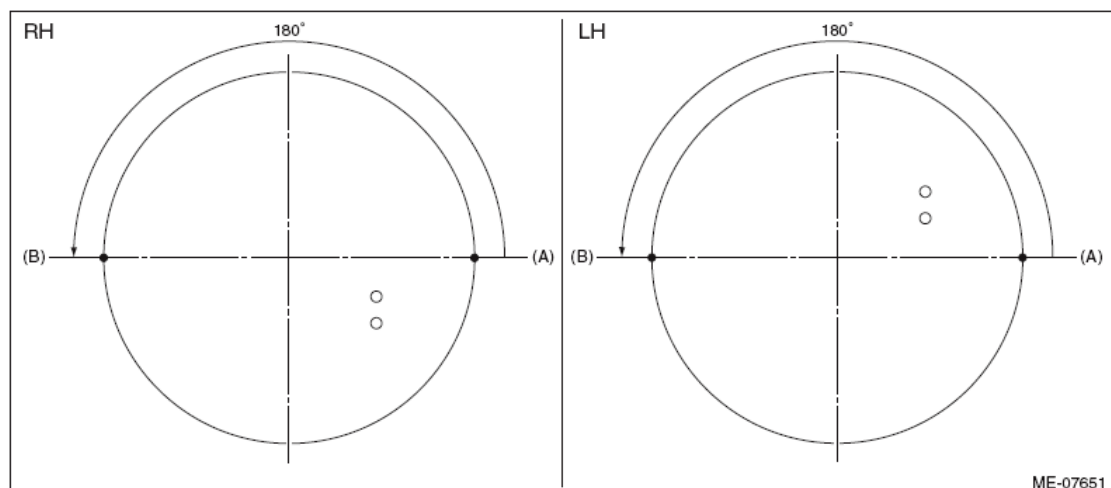


Fig. 535: Identifying Second Piston Ring Installation Position (HEV Model)
 Courtesy of SUBARU OF AMERICA, INC.

- Set the ring gap of the upper rail to the position (C) in the figure.
 - Gasoline engine model

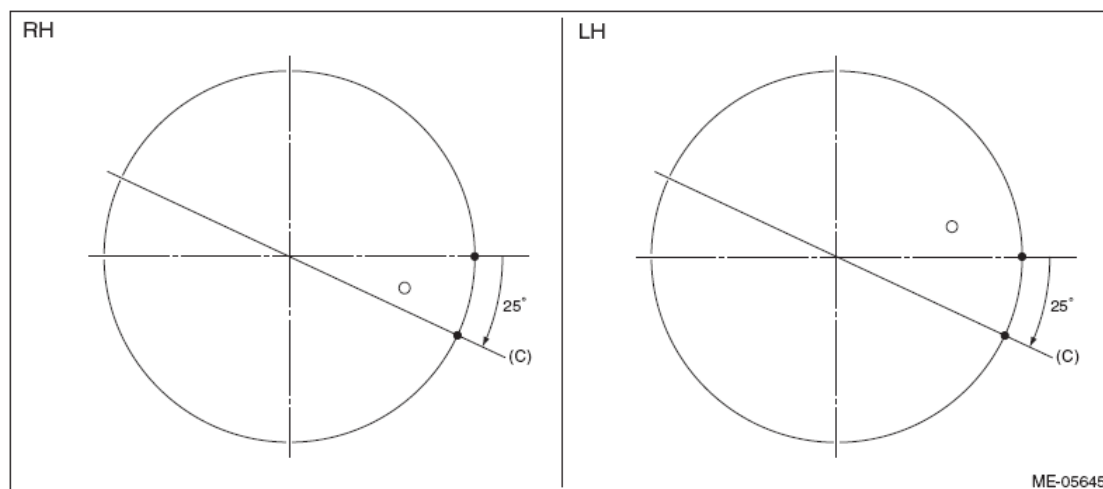


Fig. 536: Identifying Upper Rail Ring Installation Position (Gasoline Engine Model)
Courtesy of SUBARU OF AMERICA, INC.

- HEV model

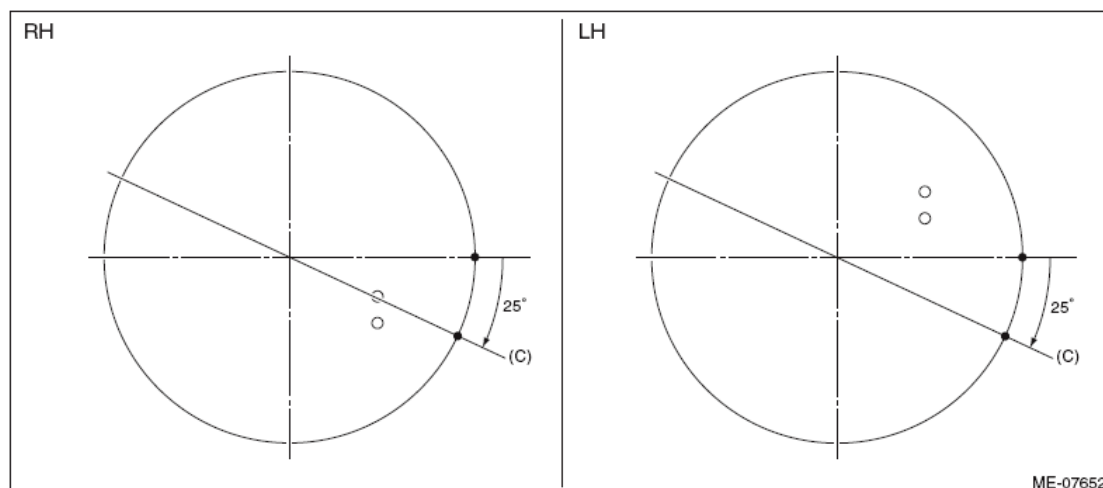


Fig. 537: Identifying Upper Rail Ring Installation Position (HEV Model)
Courtesy of SUBARU OF AMERICA, INC.

4. Align the upper rail spin stopper (E) to the side hole (D) on the piston.

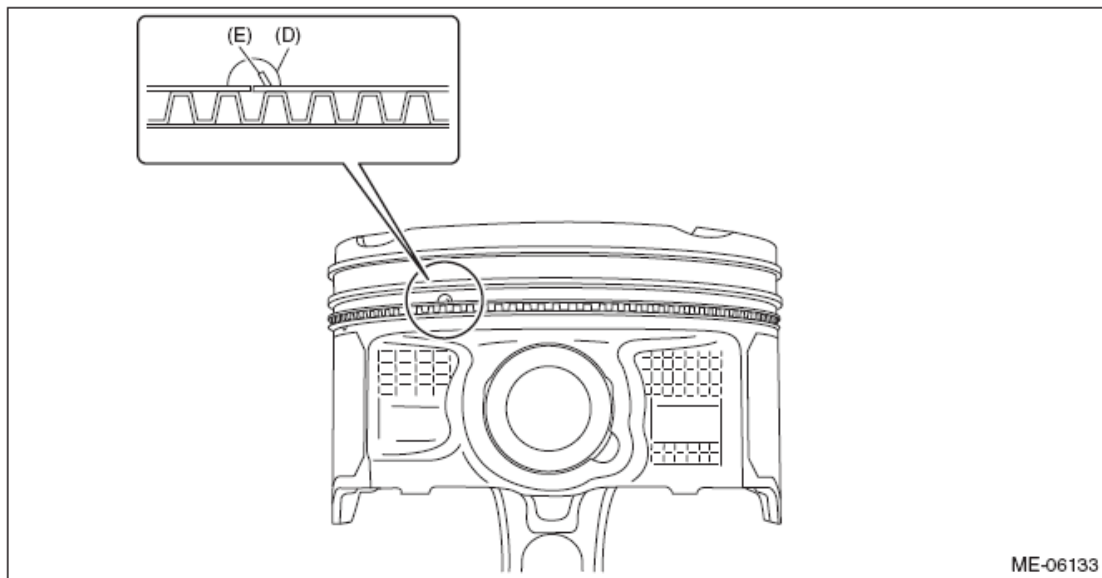


Fig. 538: Aligning Upper Rail Spin Stopper To Side Hole On Piston
 Courtesy of SUBARU OF AMERICA, INC.

5. Position the ring gap of expander at (F) in the figure on the 180° opposite direction of (C).
 - Gasoline engine model

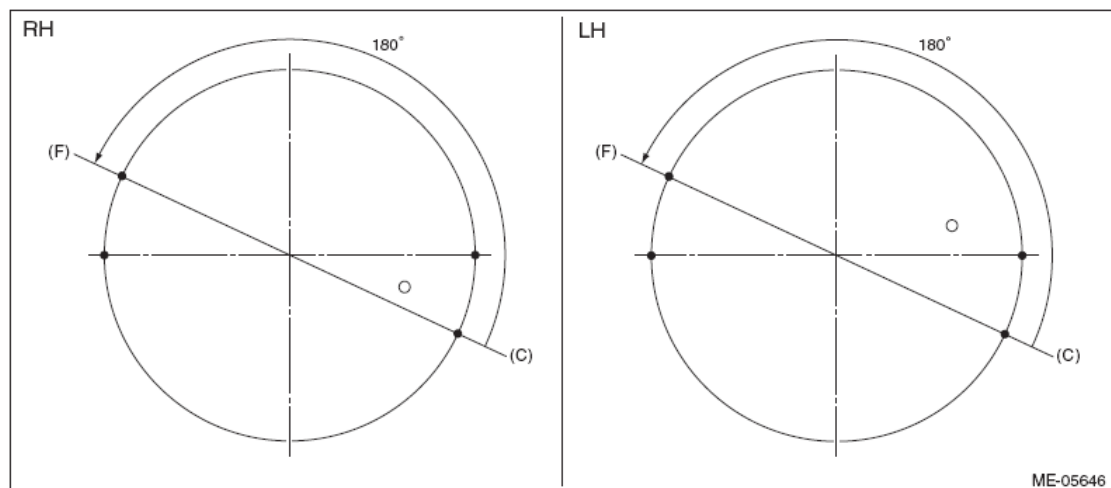


Fig. 539: Identifying Expander Ring Installation Position (Gasoline Engine Model)
 Courtesy of SUBARU OF AMERICA, INC.

- HEV model

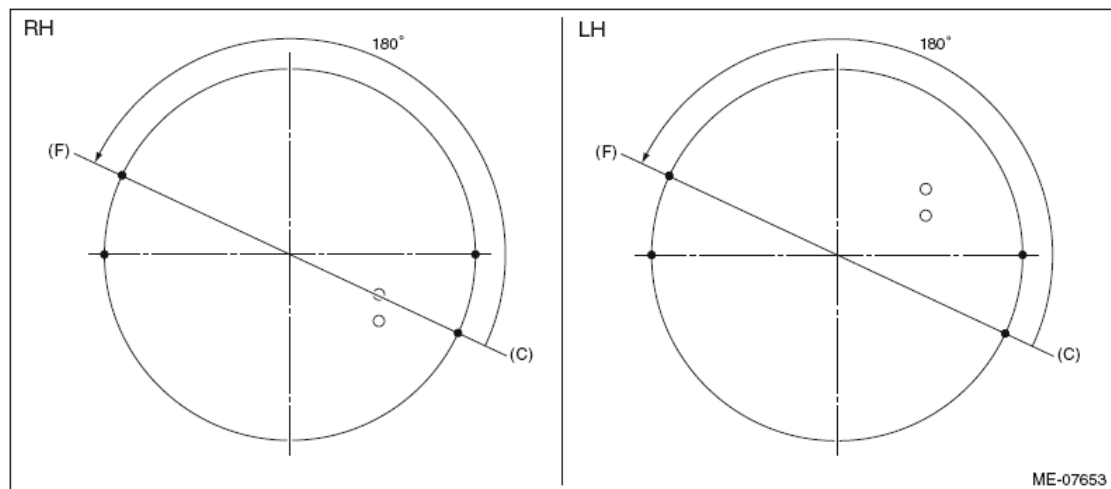


Fig. 540: Identifying Expander Ring Installation Position (HEV Model)
Courtesy of SUBARU OF AMERICA, INC.

6. Set the ring gap of lower rail at position (G), located 120° clockwise from (C) in the figure.
 - Gasoline engine model

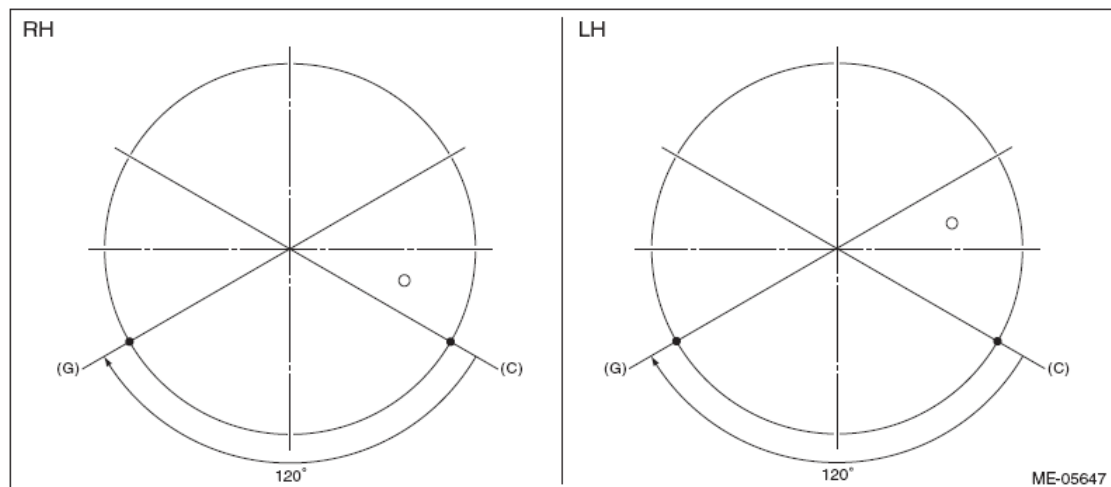


Fig. 541: Identifying Lower Rail Ring Installation Position (Gasoline Engine Model)
Courtesy of SUBARU OF AMERICA, INC.

- HEV model

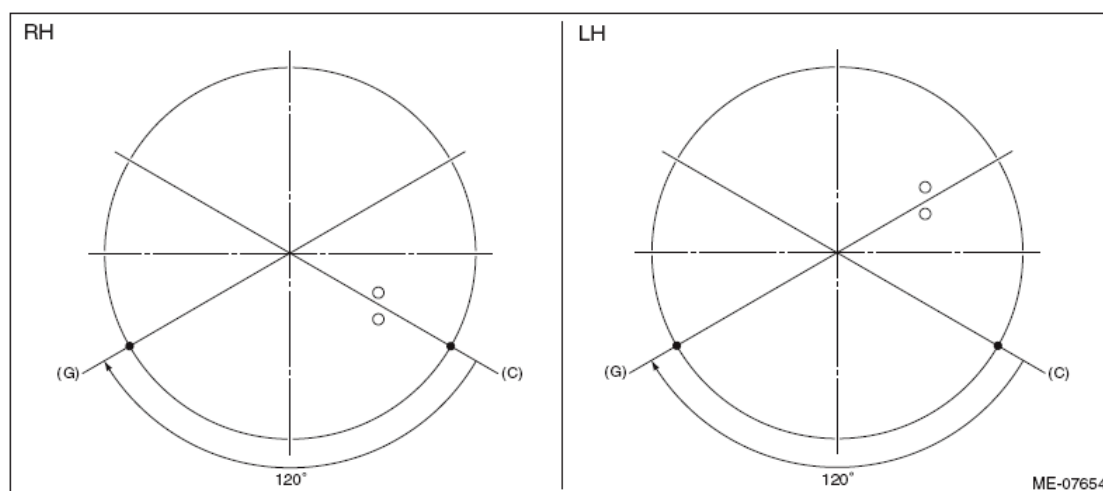


Fig. 542: Identifying Lower Rail Ring Installation Position (HEV Model)
Courtesy of SUBARU OF AMERICA, INC.

7. Check that the positions of piston ring gap are properly adjusted.

NOTE: When checking the positions of piston ring gap, also check that the piston ring gaps are not positioned within the range of piston skirt extended line.

12. Install the piston and connecting rod to the cylinder block.
 1. Apply engine oil to the outer circumference of each piston, crankshaft pin, and in the cylinder block.
 2. Turn the crankshaft so that the #1 pin (A) of crankshaft is positioned at TDC using ST.

ST 18252AA000 CRANKSHAFT SOCKET

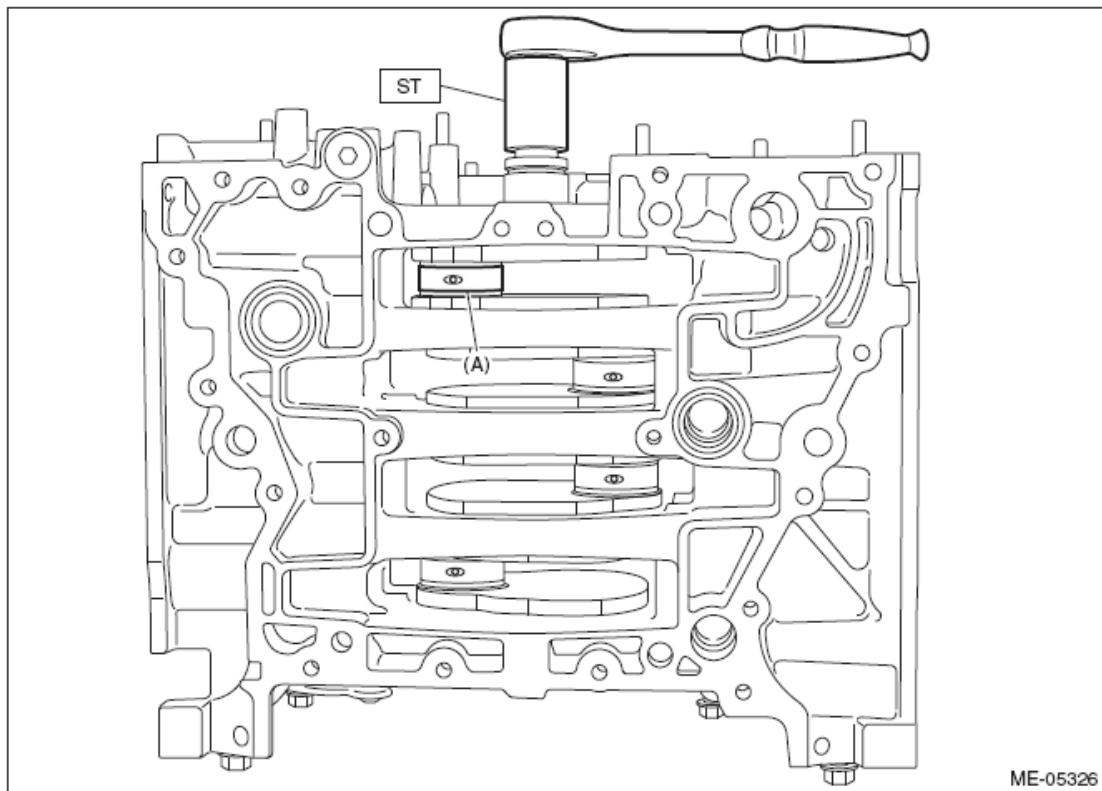


Fig. 543: Installing Piston And Connecting Rod To Cylinder Block
Courtesy of SUBARU OF AMERICA, INC.

3. Compress the piston ring using piston ring compressor, and insert the #1 connecting rod with #1 piston into cylinder block.

CAUTION:

- Be careful not to damage the cylinder liner and #1 pin of crankshaft by the #1 connecting rod large end.
- Be careful not to apply strong impact when inserting to prevent connecting rod bearing from falling off.

NOTE:

- Face the piston front mark (round mark) towards the front of the engine

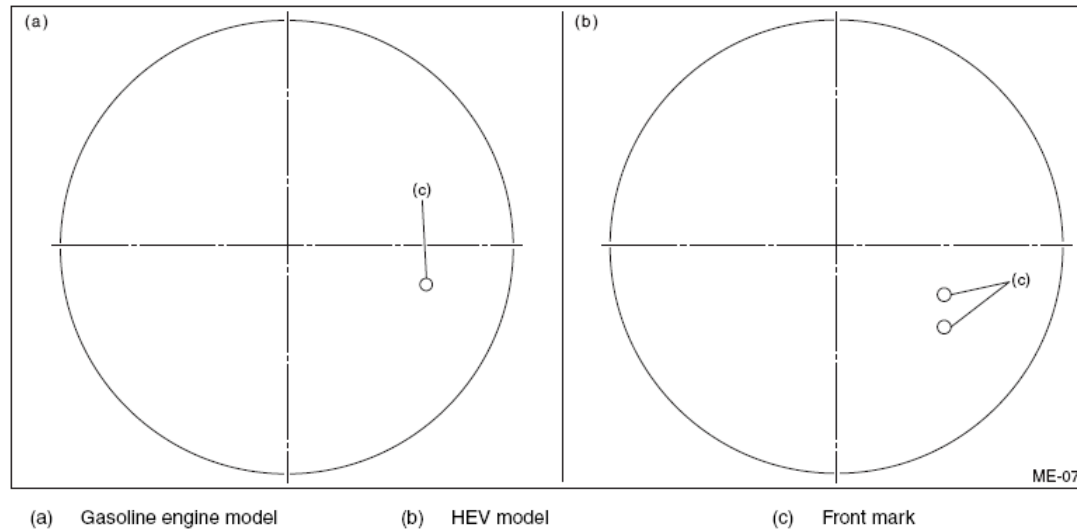


Fig. 544: Identifying Gasoline Engine And HEV Model Piston Front Mark
Courtesy of SUBARU OF AMERICA, INC.

- Insert while lightly tapping the crown of the piston with the handle of a plastic hammer.

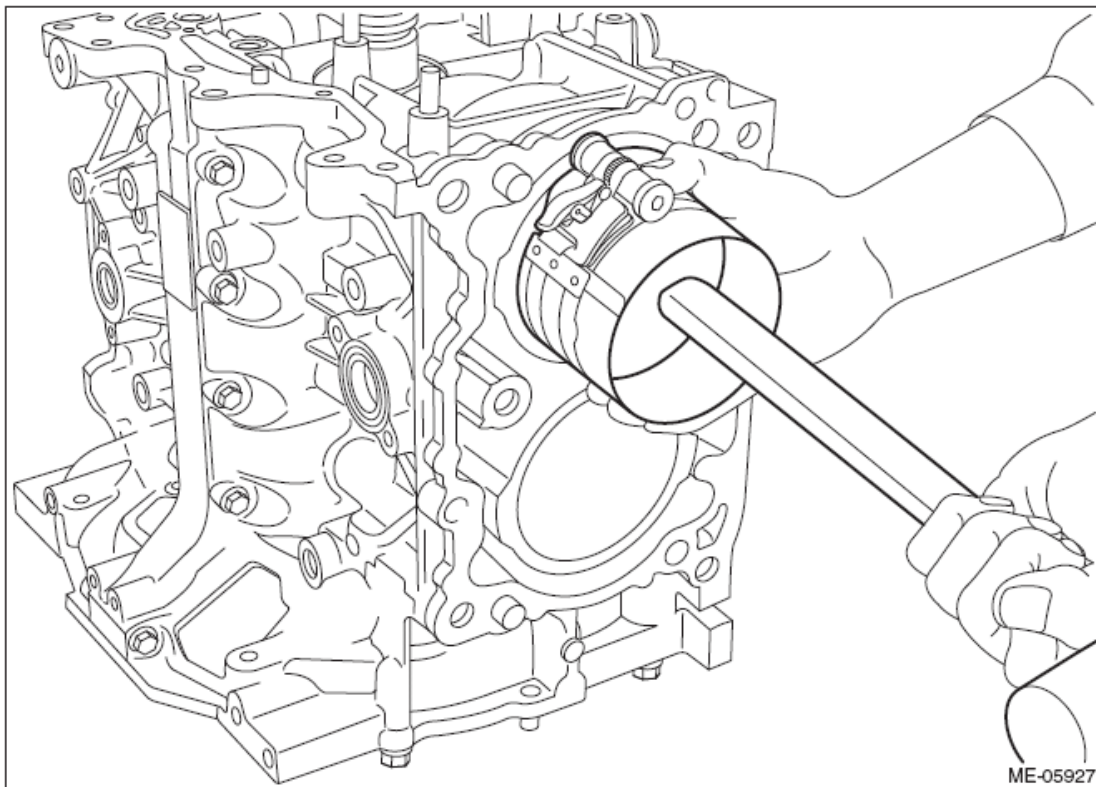


Fig. 545: Tapping Crown Of Piston Using Handle Of Plastic Hammer
Courtesy of SUBARU OF AMERICA, INC.

4. Turn the crankshaft counterclockwise so that the #1 pin of crankshaft and the large end (A) of #1 connecting rod are positioned as shown in the figure using ST, while pressing the #1 piston crown, and then set the #1 connecting rod cap and #1 connecting rod cap bolt.

NOTE:

- Each connecting rod has its own mating cap. Make sure that they are assembled correctly by checking their matching symbol.
- Use a new connecting rod cap bolt.
- Apply a coat of engine oil to the #1 connecting rod cap seat and the connecting rod cap bolt threads.

ST 18252AA000 CRANKSHAFT SOCKET

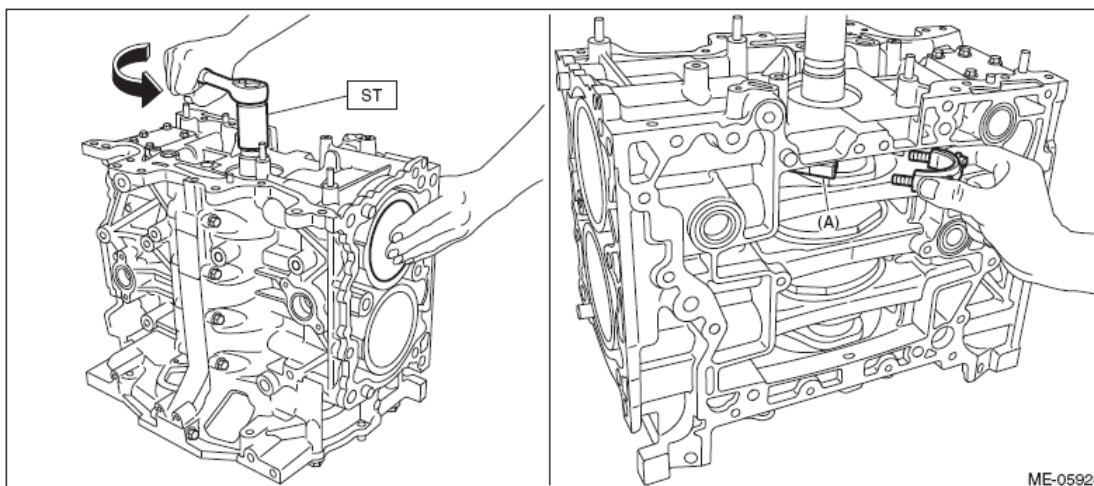


Fig. 546: Turning Crankshaft Using Crankshaft Socket
Courtesy of SUBARU OF AMERICA, INC.

5. Using ST, tighten the #1 connecting rod cap bolts to 10 N.m (1.0 kgf-m, 7.4 ft-lb) in numerical order as shown in the figure, then retighten the bolts to 22 N.m (2.2 kgf-m, 16.2 ft-lb) in numerical order as shown in the figure.

ST 18270AA020 SOCKET

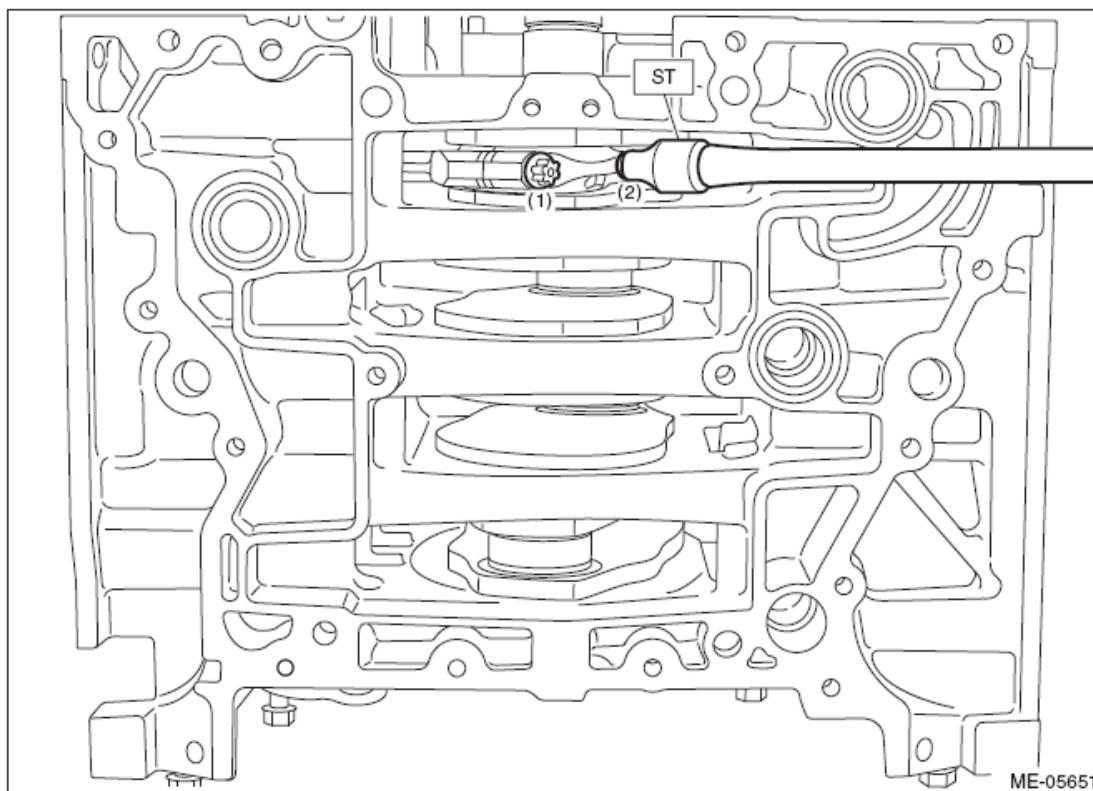


Fig. 547: Tightening Connecting Rod Cap Mounting Bolts Using Socket
Courtesy of SUBARU OF AMERICA, INC.

6. Turn the crankshaft clockwise so that the #2 pin (A) of crankshaft is positioned at TDC using ST.

ST 18252AA000 CRANKSHAFT SOCKET

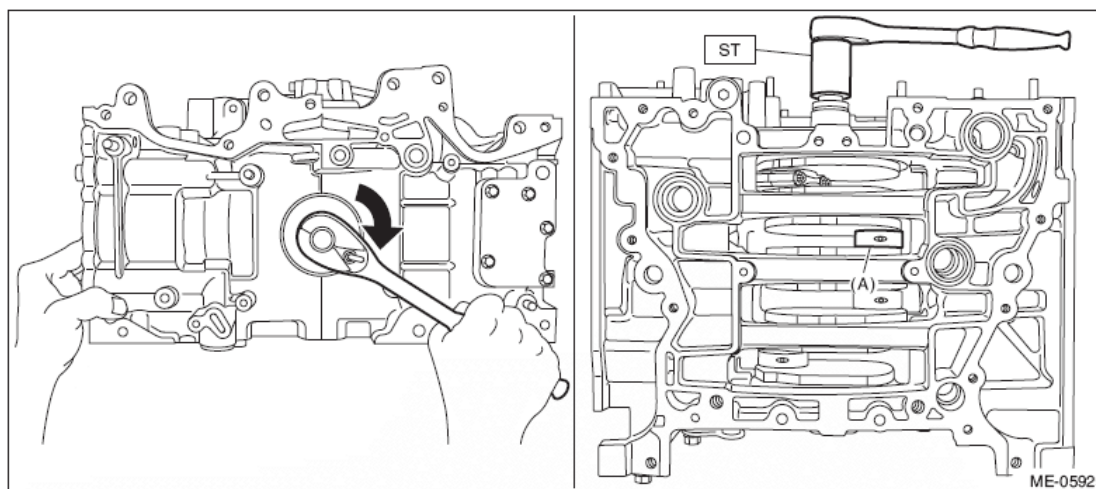


Fig. 548: Turning Crankshaft Using Crankshaft Socket
Courtesy of SUBARU OF AMERICA, INC.

7. Compress the piston ring using piston ring compressor, and insert the #2 connecting rod with #2 piston into cylinder block.

CAUTION:

- Be careful not to damage the cylinder liner and #2 pin of crankshaft by the #2 connecting rod large end.
- Be careful not to apply strong impact when inserting to prevent connecting rod bearing from falling off.

NOTE:

- Face the piston front mark (round mark) towards the front of the engine

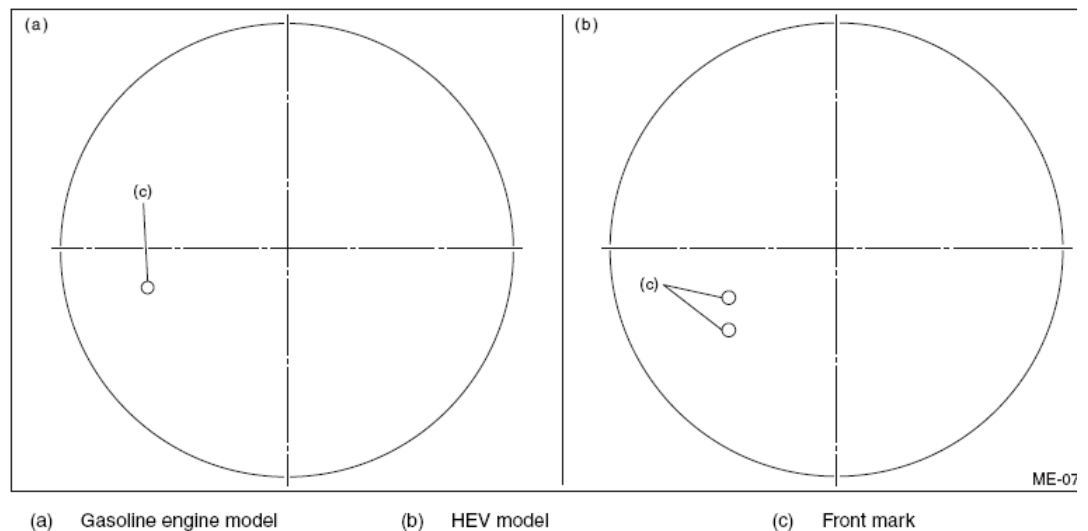


Fig. 549: Identifying Gasoline Engine And HEV Model Piston Front Mark
 Courtesy of SUBARU OF AMERICA, INC.

- Insert while lightly tapping the crown of the piston with the handle of a plastic hammer.

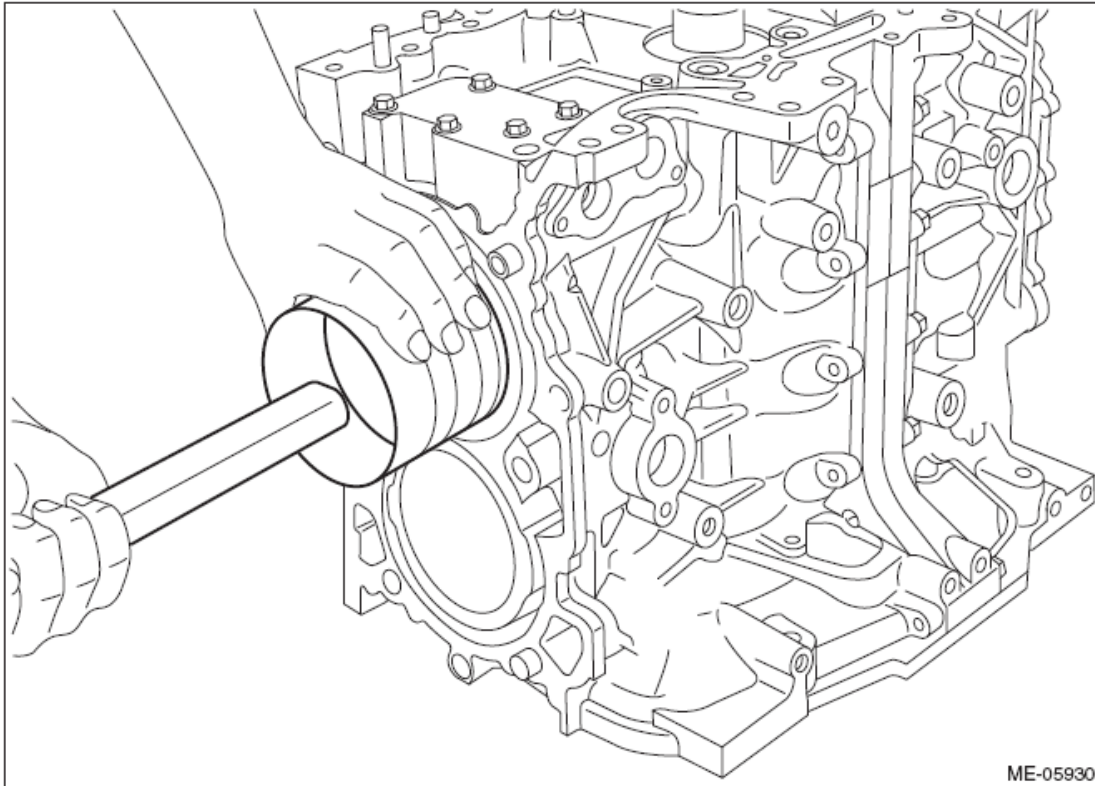


Fig. 550: Tapping Crown Of Piston Using Handle Of Plastic Hammer
Courtesy of SUBARU OF AMERICA, INC.

8. Turn the crankshaft clockwise so that the #2 pin of crankshaft and the large end (A) of #2 connecting rod are positioned as shown in the figure using ST, while pressing the #2 piston crown, and then set the #2 connecting rod cap and #2 connecting rod cap bolt.

NOTE:

- Each connecting rod has its own mating cap. Make sure that they are assembled correctly by checking their matching symbol.
- Use a new connecting rod cap bolt.
- Apply a coat of engine oil to the #2 connecting rod cap seat and the connecting rod cap bolt threads.

ST 18252AA000 CRANKSHAFT SOCKET

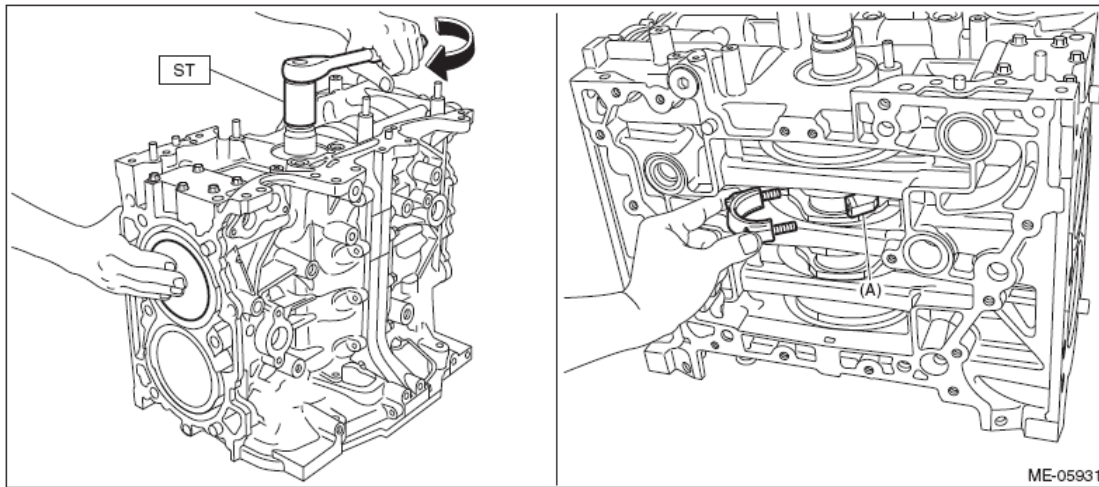


Fig. 551: Installing Connecting Rod Cap Mounting Bolt Using Tool
Courtesy of SUBARU OF AMERICA, INC.

9. Using ST, tighten the #2 connecting rod cap bolts to 10 N.m (1.0 kgf-m, 7.4 ft-lb) in numerical order as shown in the figure, then retighten the bolts to 22 N.m (2.2 kgf-m, 16.2 ft-lb) in numerical order as shown in the figure.

ST 18270AA020 SOCKET

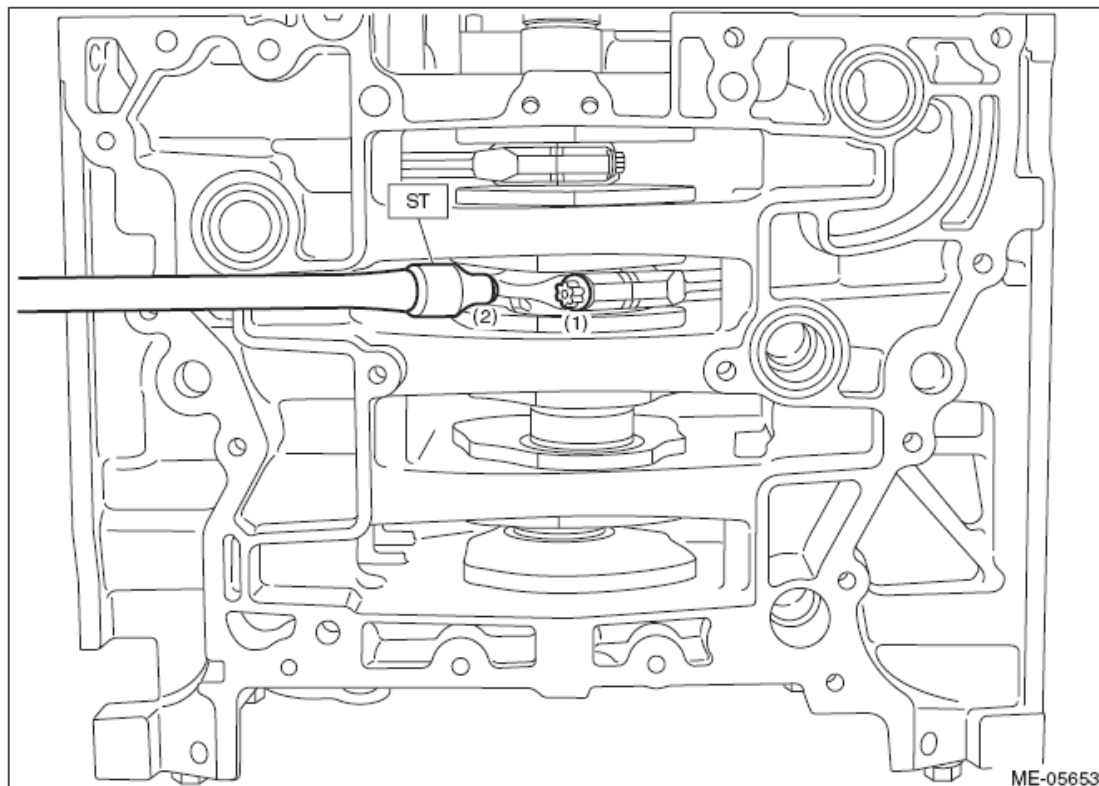


Fig. 552: Tightening No. 2 Connecting Rod Cap Mounting Bolt Using Socket

Courtesy of SUBARU OF AMERICA, INC.

10. Turn the crankshaft clockwise so that the #3 pin (A) of crankshaft is positioned at TDC using ST.

ST 18252AA000 CRANKSHAFT SOCKET

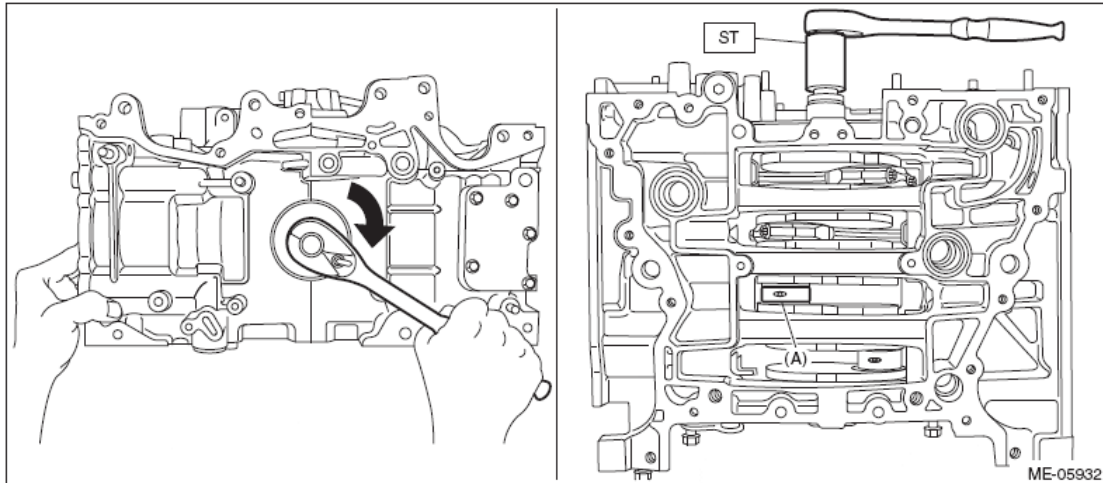


Fig. 553: Turning Crankshaft Using Crankshaft Socket
Courtesy of SUBARU OF AMERICA, INC.

11. Compress the piston ring using piston ring compressor, and insert the #3 connecting rod with #3 piston into cylinder block.

CAUTION:

- Be careful not to damage the cylinder liner and #3 pin of crankshaft by the #3 connecting rod large end.
- Be careful not to apply strong impact when inserting to prevent connecting rod bearing from falling off.

NOTE:

- Face the piston front mark (round mark) towards the front of the engine

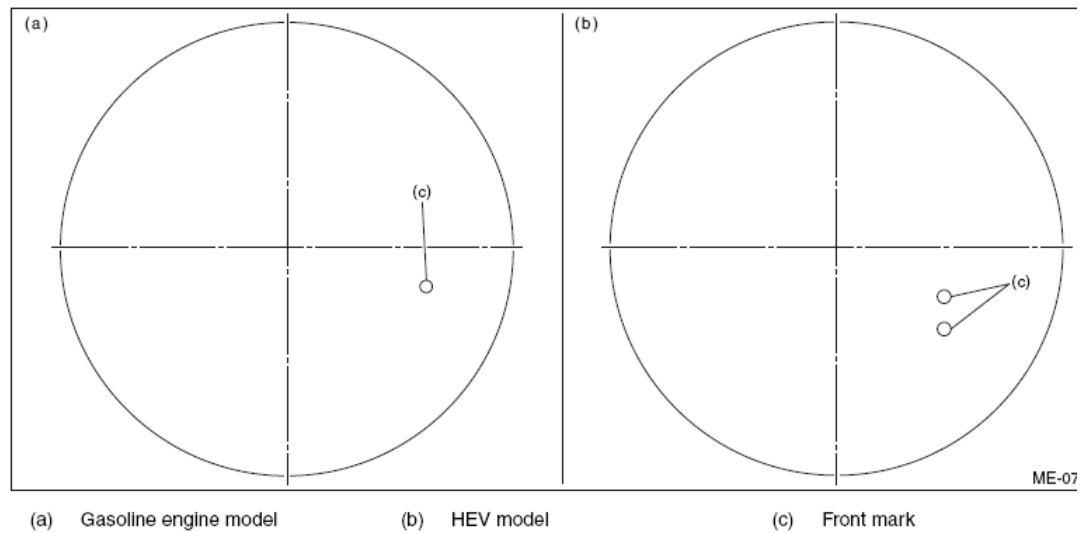


Fig. 554: Identifying Gasoline Engine And HEV Model Front Mark
Courtesy of SUBARU OF AMERICA, INC.

- Insert while lightly tapping the crown of the piston with the handle of a plastic hammer.

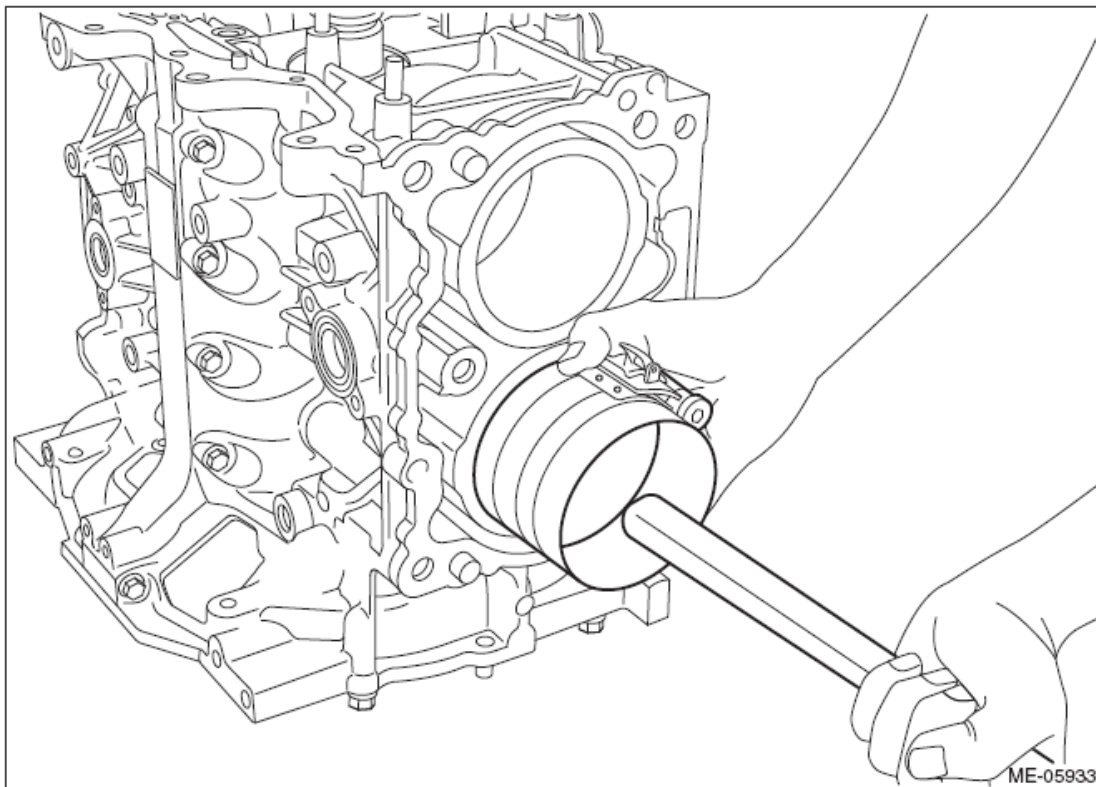


Fig. 555: Tapping Crown Of Piston Using Handle Of Plastic Hammer
Courtesy of SUBARU OF AMERICA, INC.

12. Turn the crankshaft counterclockwise so that the #3 pin of crankshaft and the large end (A) of #3 connecting rod are positioned as shown in the figure using ST, while pressing the #3 piston crown, and then set the #3 connecting rod cap and #3 connecting rod cap bolt.

NOTE:

- Each connecting rod has its own mating cap. Make sure that they are assembled correctly by checking their matching symbol.
- Use a new connecting rod cap bolt.
- Apply a coat of engine oil to the #3 connecting rod cap seat and the connecting rod cap bolt threads.

ST 18252AA000 CRANKSHAFT SOCKET

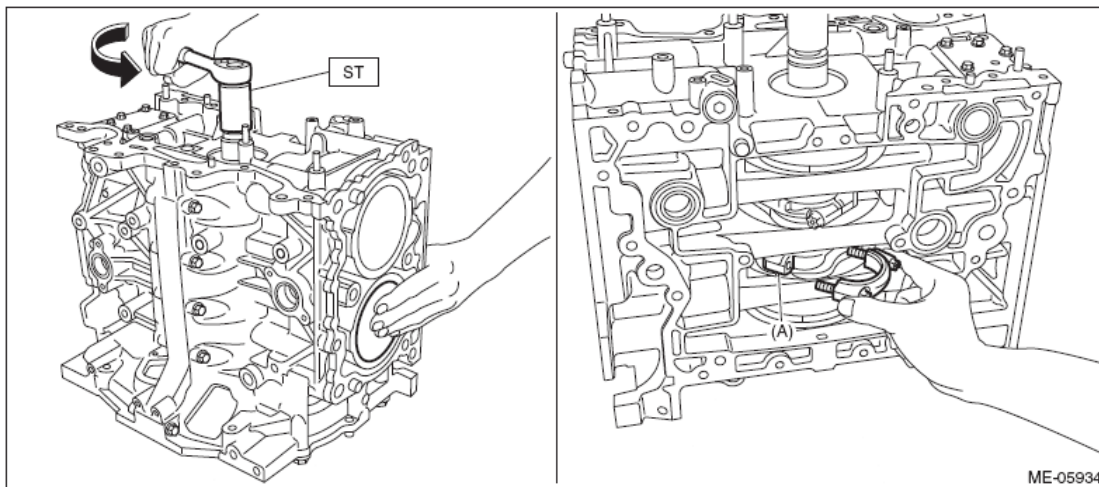


Fig. 556: Turning Crankshaft Using Crankshaft Socket
Courtesy of SUBARU OF AMERICA, INC.

13. Using ST, tighten the #3 connecting rod cap bolts to 10 N.m (1.0 kgf-m, 7.4 ft-lb) in numerical order as shown in the figure, then retighten the bolts to 22 N.m (2.2 kgf-m, 16.2 ft-lb) in numerical order as shown in the figure.

ST 18270AA020 SOCKET

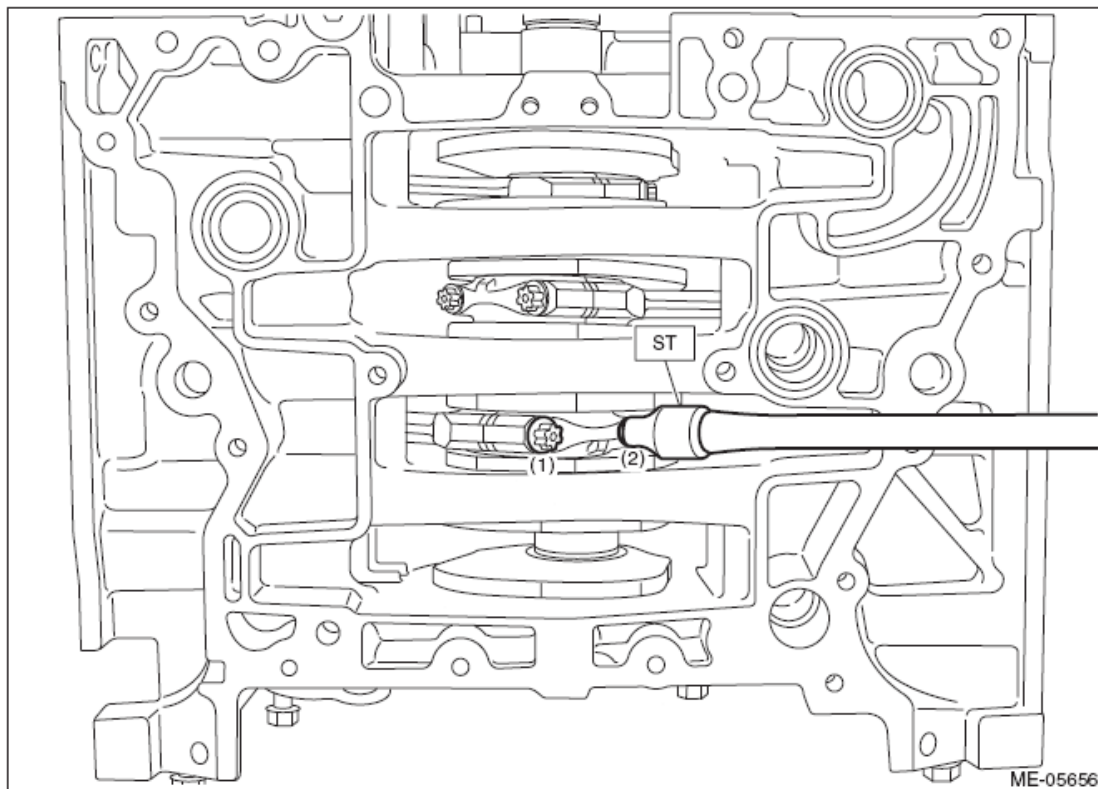


Fig. 557: Tightening Connecting Rod Cap Mounting Bolts Using Tool
 Courtesy of SUBARU OF AMERICA, INC.

14. Turn the crankshaft clockwise so that the #4 pin (A) of crankshaft is positioned at TDC using ST.

ST 18252AA000 CRANKSHAFT SOCKET

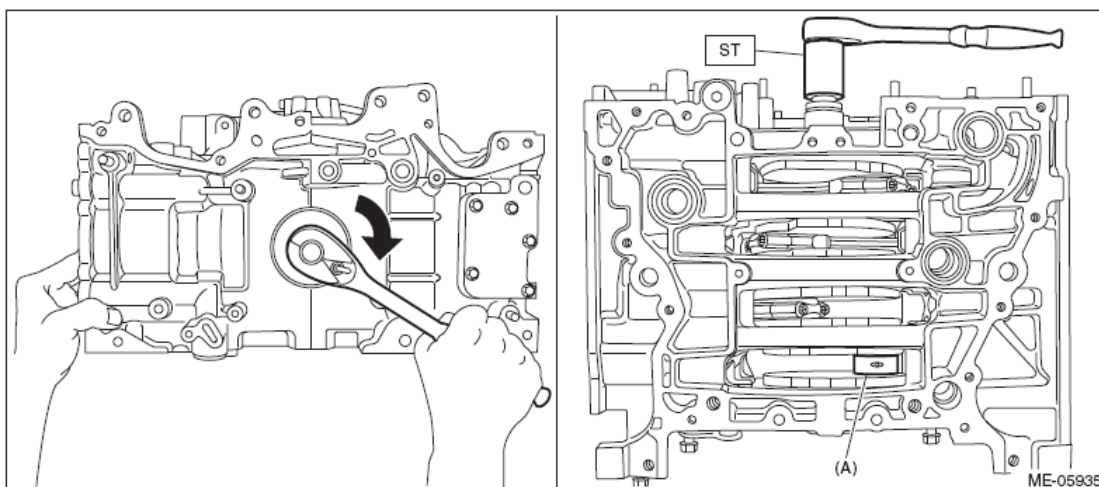


Fig. 558: Installing Crankshaft Pin Using Suitable Tool
 Courtesy of SUBARU OF AMERICA, INC.

15. Compress the piston ring using piston ring compressor, and insert the #4 connecting rod with #4 piston into cylinder block.

CAUTION:

- Be careful not to damage the cylinder liner and #4 pin of crankshaft by the #4 connecting rod large end.
- Be careful not to apply strong impact when inserting to prevent connecting rod bearing from falling off.

NOTE:

- Face the piston front mark (round mark) towards the front of the engine

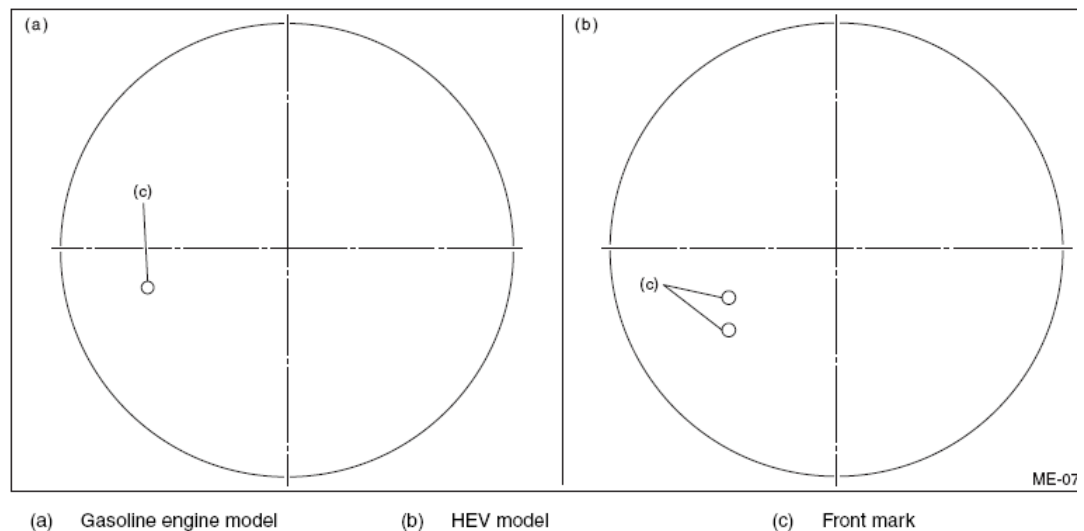


Fig. 559: Identifying Gasoline Engine And HEV Model Front Mark

Courtesy of SUBARU OF AMERICA, INC.

- Insert while lightly tapping the crown of the piston with the handle of a plastic hammer.

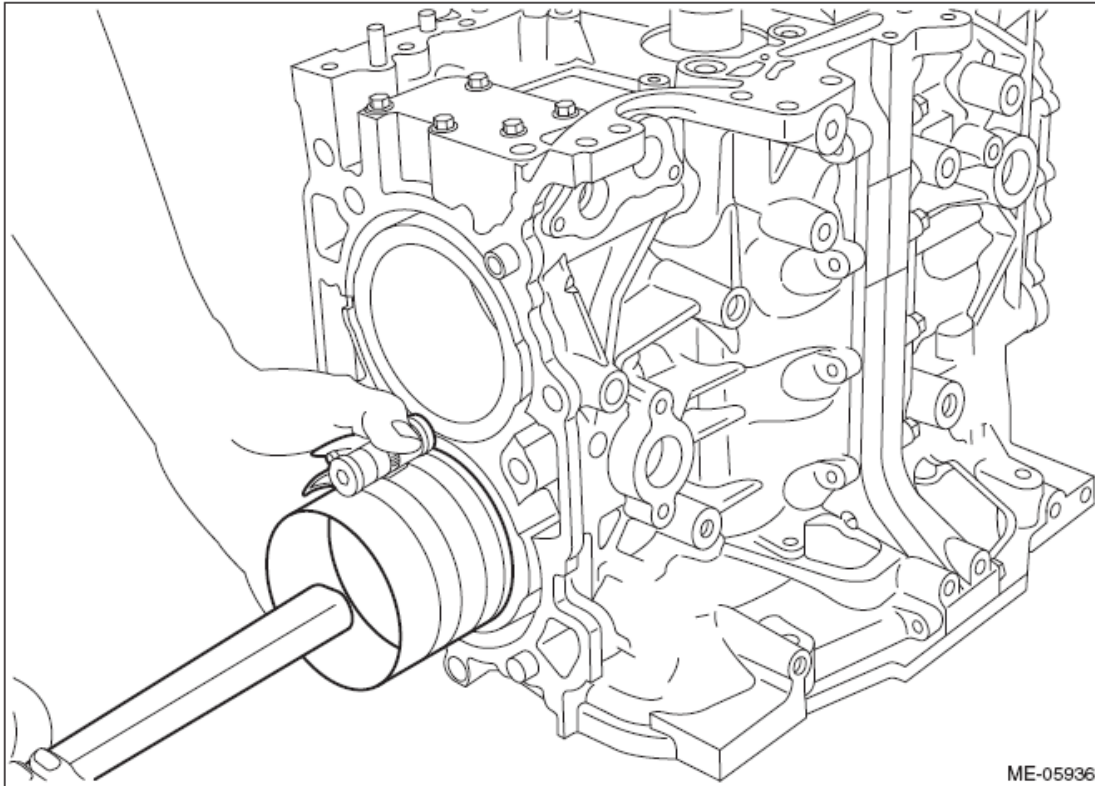


Fig. 560: Tapping Crown Of Piston Using Handle Of Plastic Hammer
Courtesy of SUBARU OF AMERICA, INC.

16. Turn the crankshaft clockwise so that the #4 pin of crankshaft and the large end (A) of #4 connecting rod are positioned as shown in the figure using ST, while pressing the #4 piston crown, and then set the #4 connecting rod cap and #4 connecting rod cap bolt.

NOTE:

- Each connecting rod has its own mating cap. Make sure that they are assembled correctly by checking their matching symbol.
- Use a new connecting rod cap bolt.
- Apply a coat of engine oil to the #4 connecting rod cap seat and the connecting rod cap bolt threads.

ST 18252AA000 CRANKSHAFT SOCKET

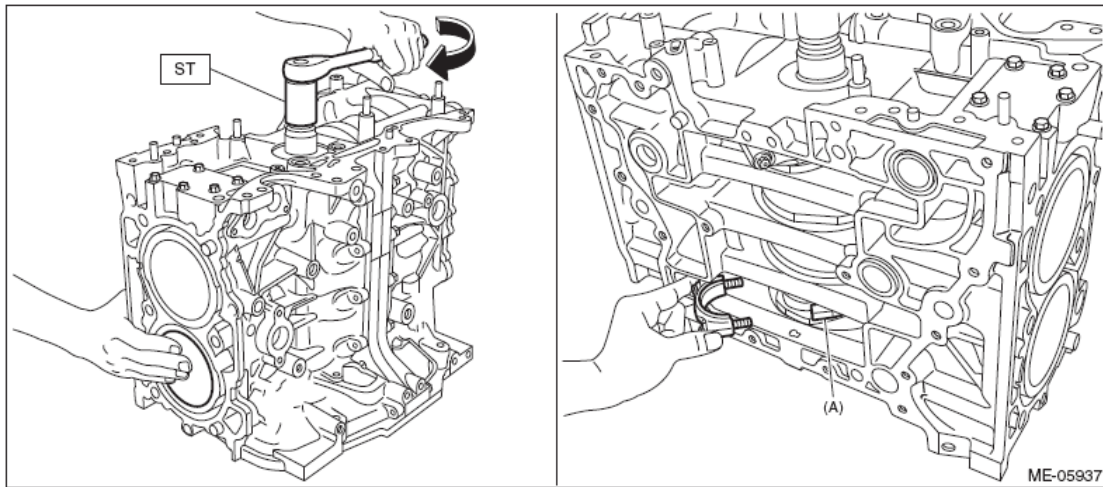


Fig. 561: Turning Crankshaft Using Crankshaft Socket
Courtesy of SUBARU OF AMERICA, INC.

17. Using ST, tighten the #4 connecting rod cap bolts to 10 N.m (1.0 kgf-m, 7.4 ft-lb) in numerical order as shown in the figure, then retighten the bolts to 22 N.m (2.2 kgf-m, 16.2 ft-lb) in numerical order as shown in the figure.

ST 18270AA020 SOCKET

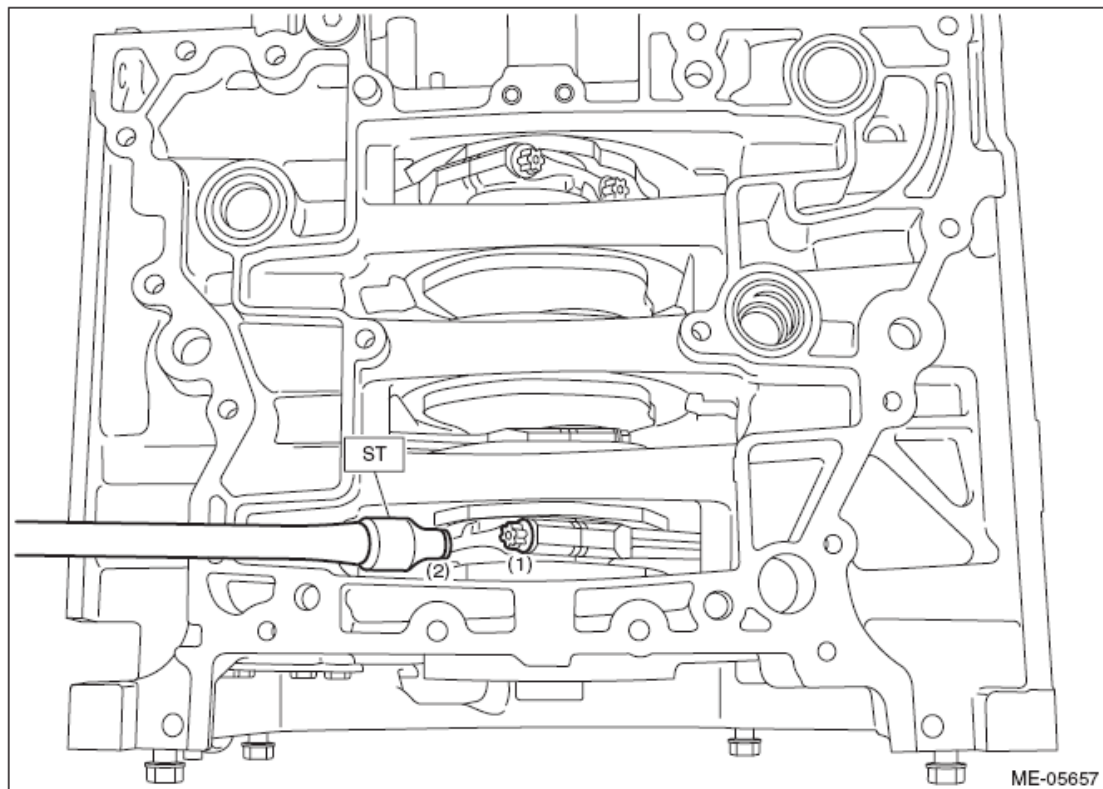


Fig. 562: Tightening Connecting Rod Cap Mounting Bolts Using ST

Courtesy of SUBARU OF AMERICA, INC.

18. Install the cam carrier mounting bolts at the locations shown in the figure.

NOTE: This procedure is required to tighten the connecting rod cap bolts with specified angle using ST.

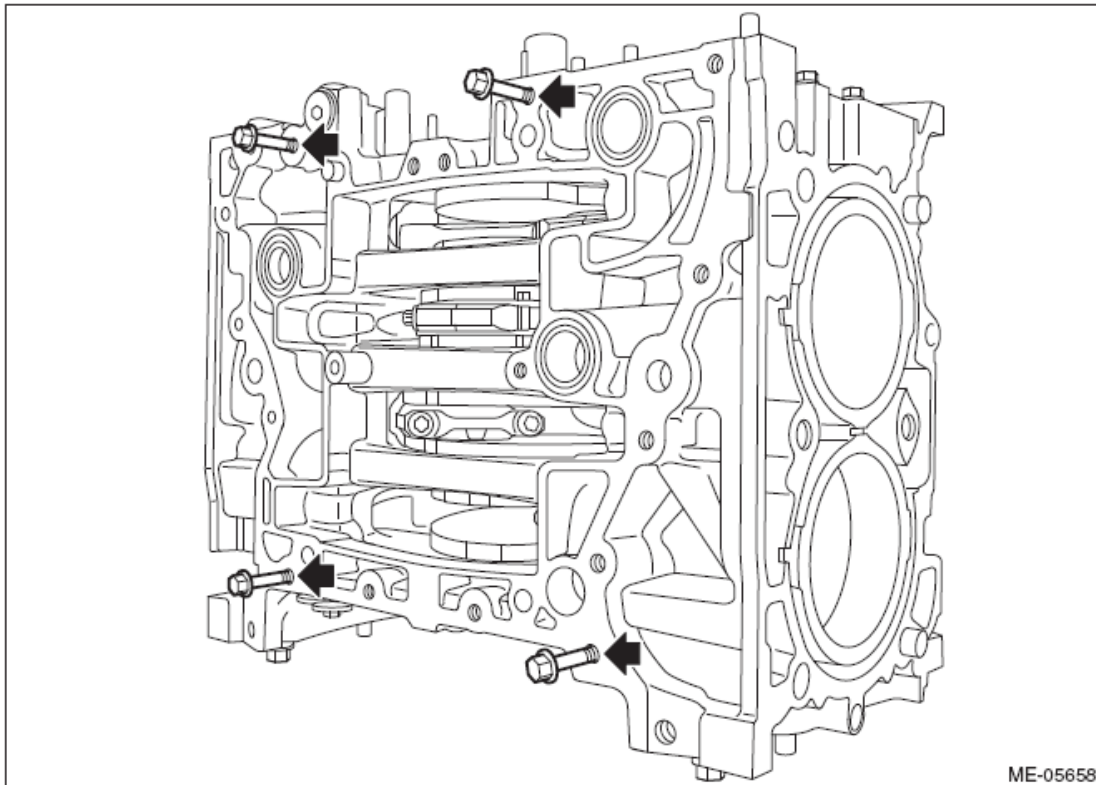


Fig. 563: Locating Cam Carrier Mounting Bolts
Courtesy of SUBARU OF AMERICA, INC.

19. Turn the crankshaft so that the #1 connecting rod cap (A) and #4 connecting rod cap (B) is located at the position shown in the figure using ST.

ST 18252AA000 CRANKSHAFT SOCKET

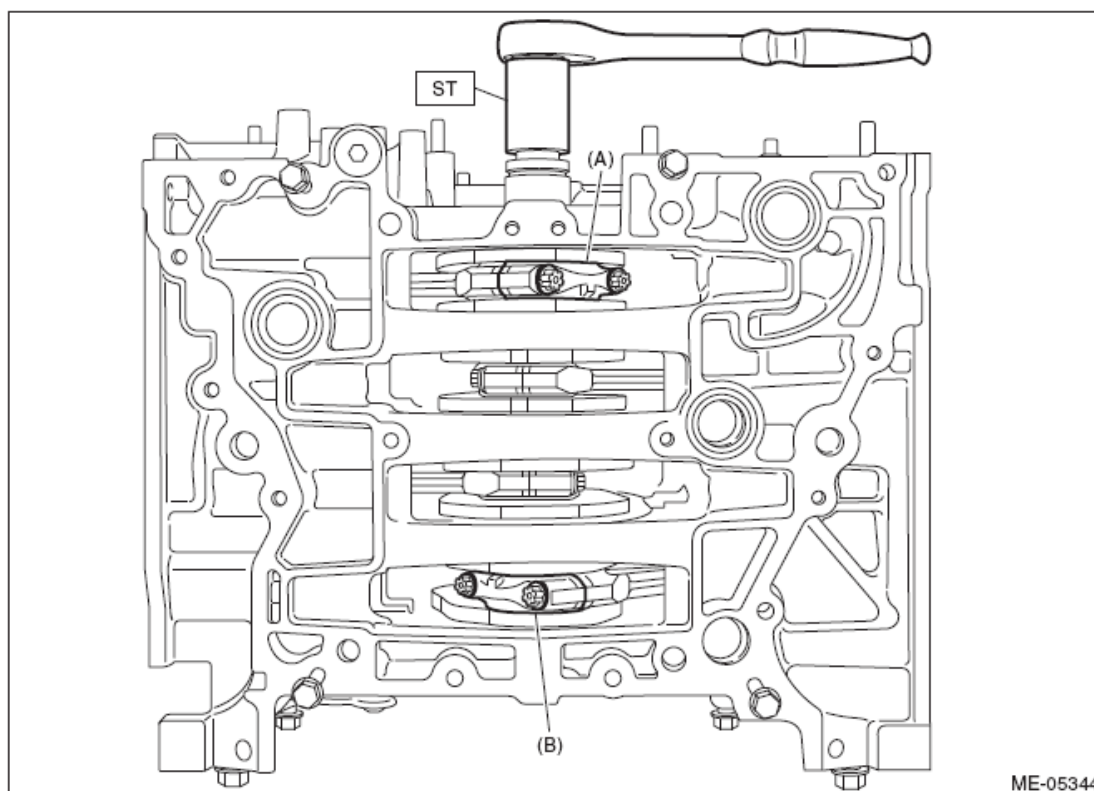


Fig. 564: Turning Crankshaft Using Suitable Tool
Courtesy of SUBARU OF AMERICA, INC.

20. Using ST and angle gauge, tighten the #1 connecting rod cap bolts and #4 connecting rod cap bolts with specified angle in numerical order as shown in the figure.

ST 18270AA020 SOCKET

Tightening angle:

$137^{\circ} + 3^{\circ} - 2^{\circ}$

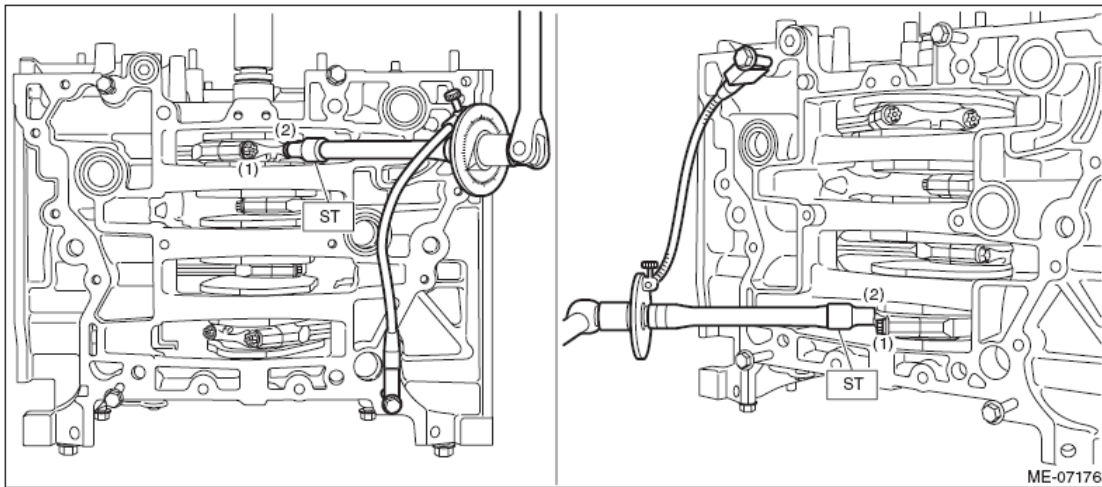


Fig. 565: Tightening Connecting Rod Cap Mounting Bolt Using Angle Gauge
 Courtesy of SUBARU OF AMERICA, INC.

21. Turn the crankshaft so that the #2 connecting rod cap (A) and #3 connecting rod cap (B) is located at the position shown in the figure using ST.

ST 18252AA000 CRANKSHAFT SOCKET

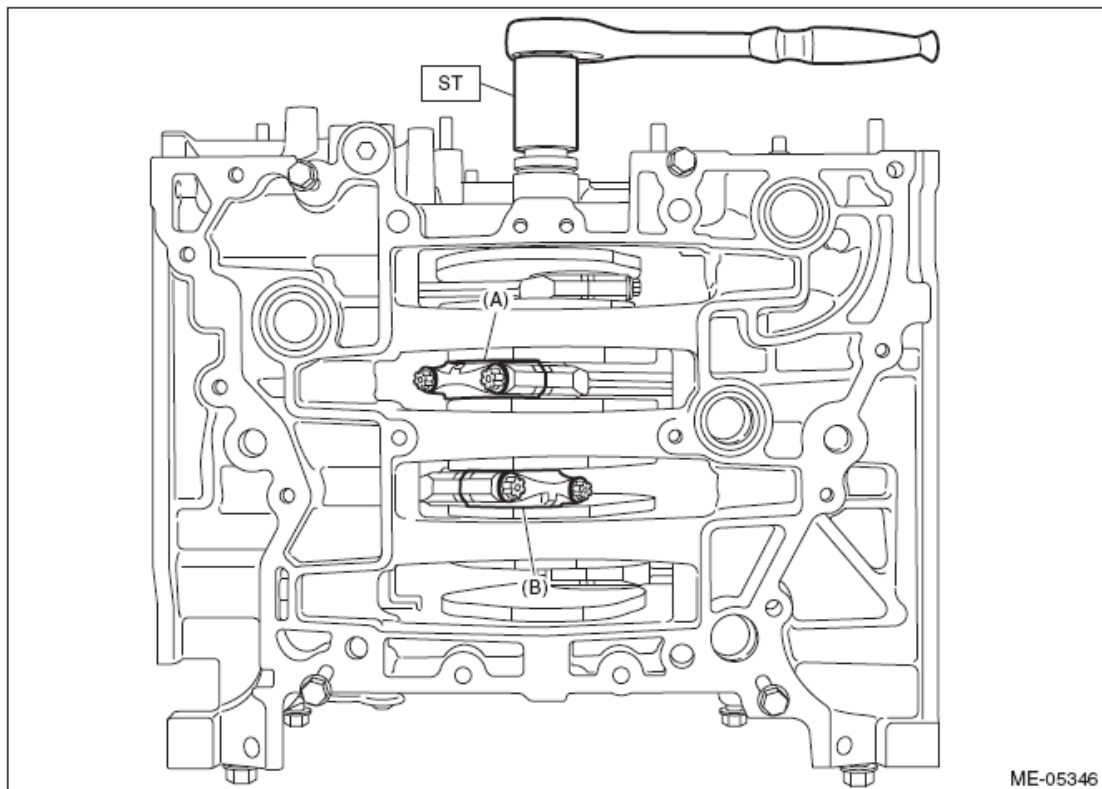


Fig. 566: Turning Crankshaft Using Suitable Tool
 Courtesy of SUBARU OF AMERICA, INC.

22. Using ST and angle gauge, tighten the #2 connecting rod cap bolts and #3 connecting rod cap bolts with specified angle in numerical order as shown in the figure.

ST 18270AA020 SOCKET

Tightening angle:

$137^{\circ} + 3^{\circ}$
 $- 2^{\circ}$

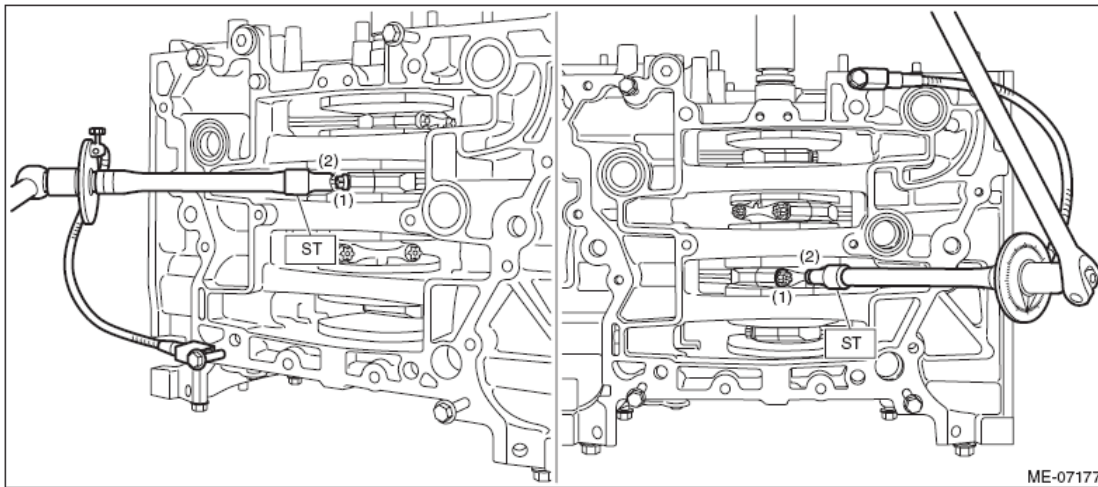


Fig. 567: Tightening Connecting Rod Cap Mounting Bolt Using Angle Gauge
Courtesy of SUBARU OF AMERICA, INC.

23. Remove the cam carrier mounting bolts attached at the locations shown in the figure.

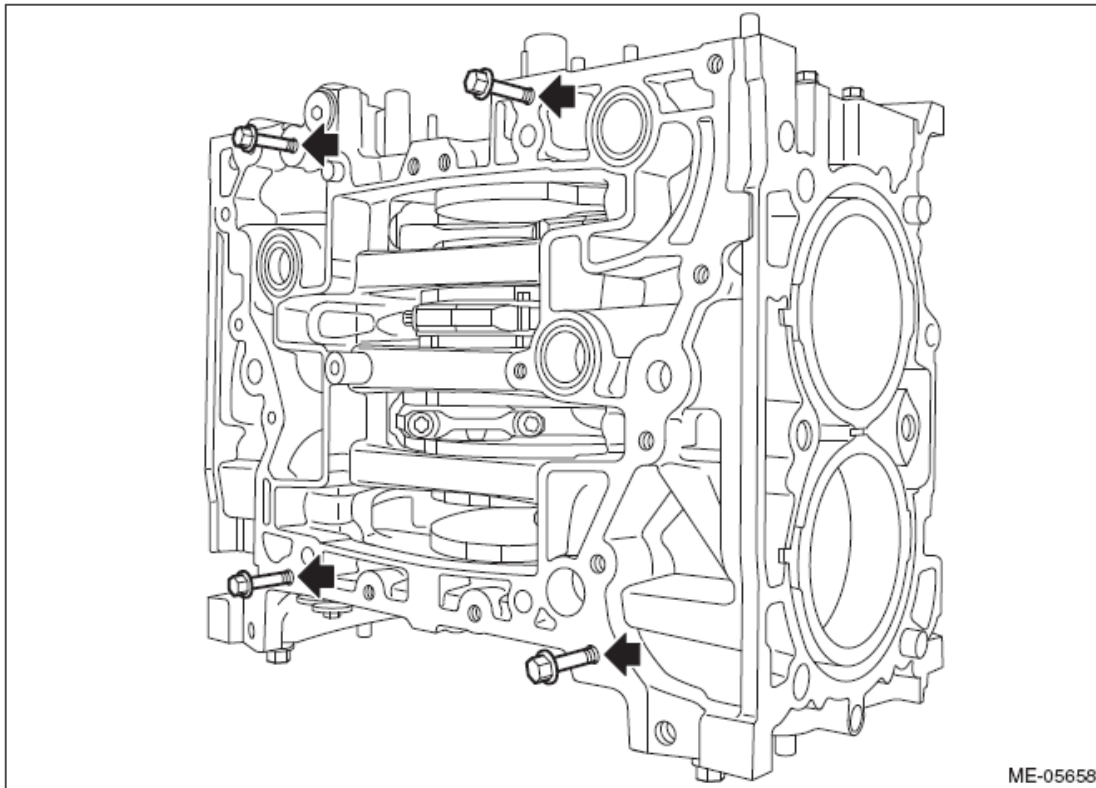


Fig. 568: Locating Cam Carrier Mounting Bolts
Courtesy of SUBARU OF AMERICA, INC.

13. Set the cylinder block so that the oil pan side faces upward, and remove the mounting bolts attached to the locations shown in the figure.

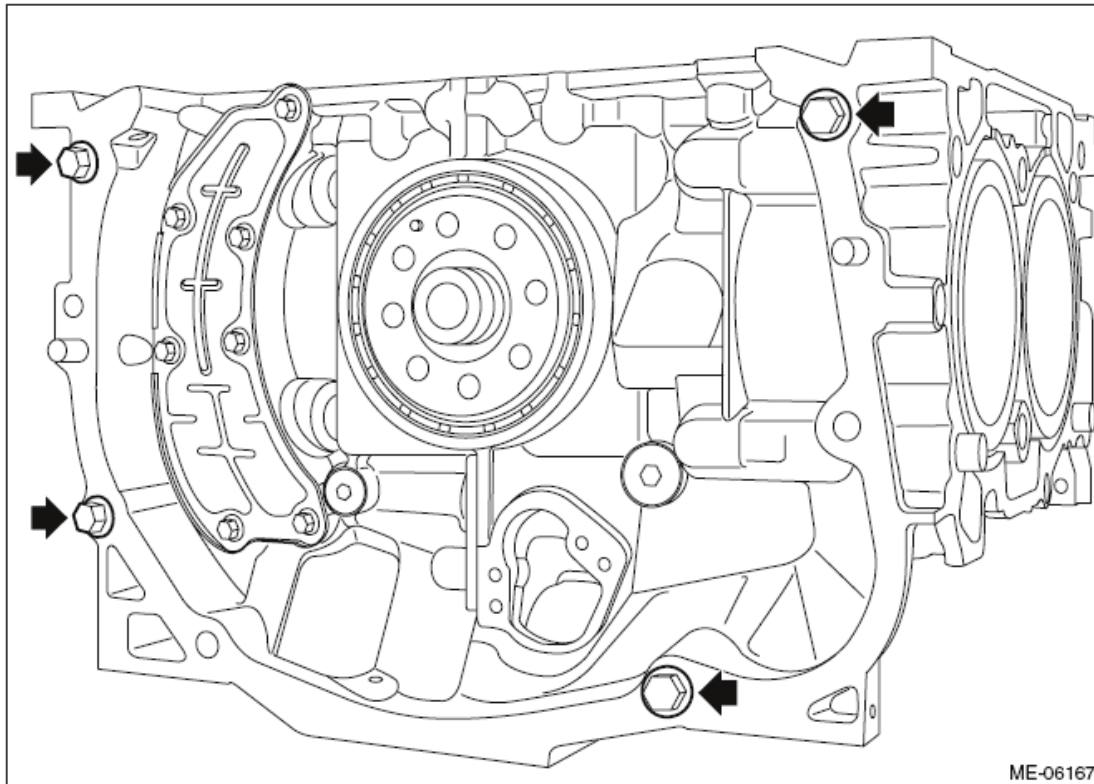


Fig. 569: Locating Cylinder Block Mounting Bolts
Courtesy of SUBARU OF AMERICA, INC.

14. Install the oil pan upper with oil pan to the cylinder block.
 1. Apply liquid gasket to the mating surface of oil pan upper as shown in the figure.

NOTE:


- Before applying liquid gasket, degrease the old liquid gasket seal surface of the cylinder block and the oil pan upper.
- Install within 5 min. after applying liquid gasket.
- Apply liquid gasket 1.5 mm (0.0591 in) outside from the chamfer surface. However, application of liquid gasket on the chamfer surface around the bolt hole is allowed.

Liquid gasket:

THREE BOND 1217G (Part No. 0877Y0100) or equivalent

Liquid gasket applying diameter:

5±1 mm (0.1969±0.0394 in)

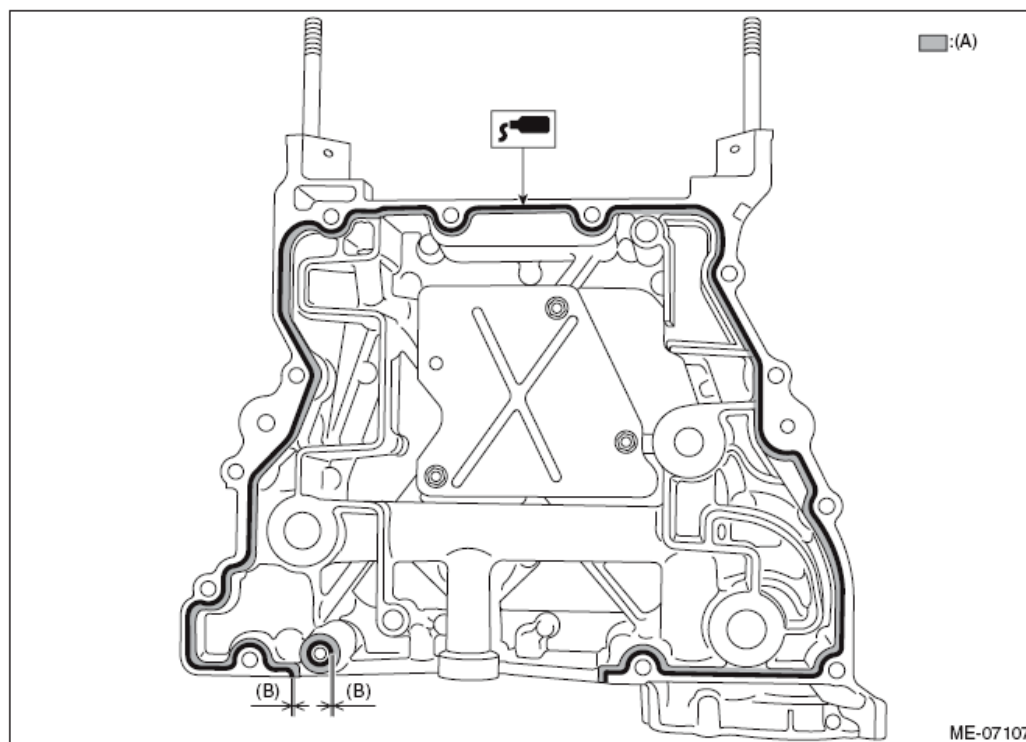

A) Chamfer surface

(B) 1.5 mm (0.0591 in)

Fig. 570: Identifying Liquid Gasket Applying Area On Mating Surface Of Oil Pan Upper
Courtesy of SUBARU OF AMERICA, INC.

2. Install the O-ring to the cylinder block.

NOTE: **Use new O-rings.**

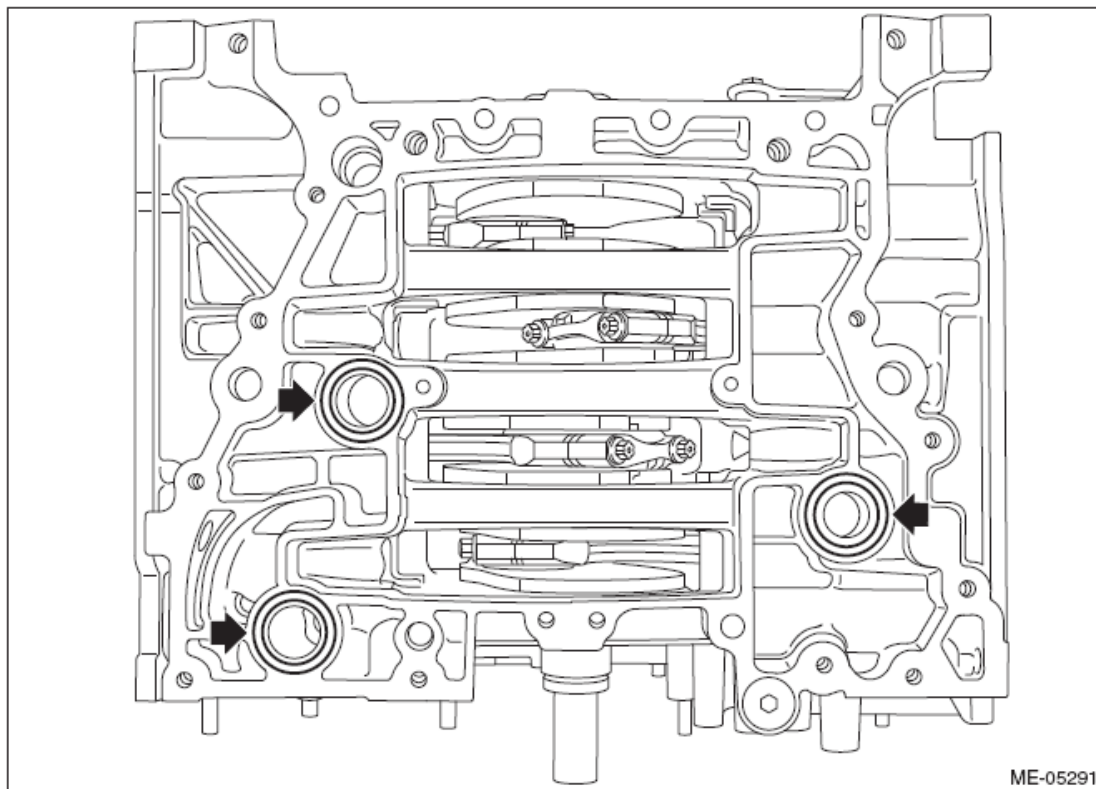



Fig. 571: Locating Cylinder Block O-Ring
Courtesy of SUBARU OF AMERICA, INC.

3. Set the oil pan with oil pan upper to the cylinder block, and tighten the bolts in numerical order as shown in the figure.

NOTE: After tightening, if the liquid gasket is squeezed out onto the seal surface of the chain cover, completely remove any squeezed-out liquid gasket.

Tightening torque:

18 N.m (1.8 kgf-m, 13.3 ft-lb)

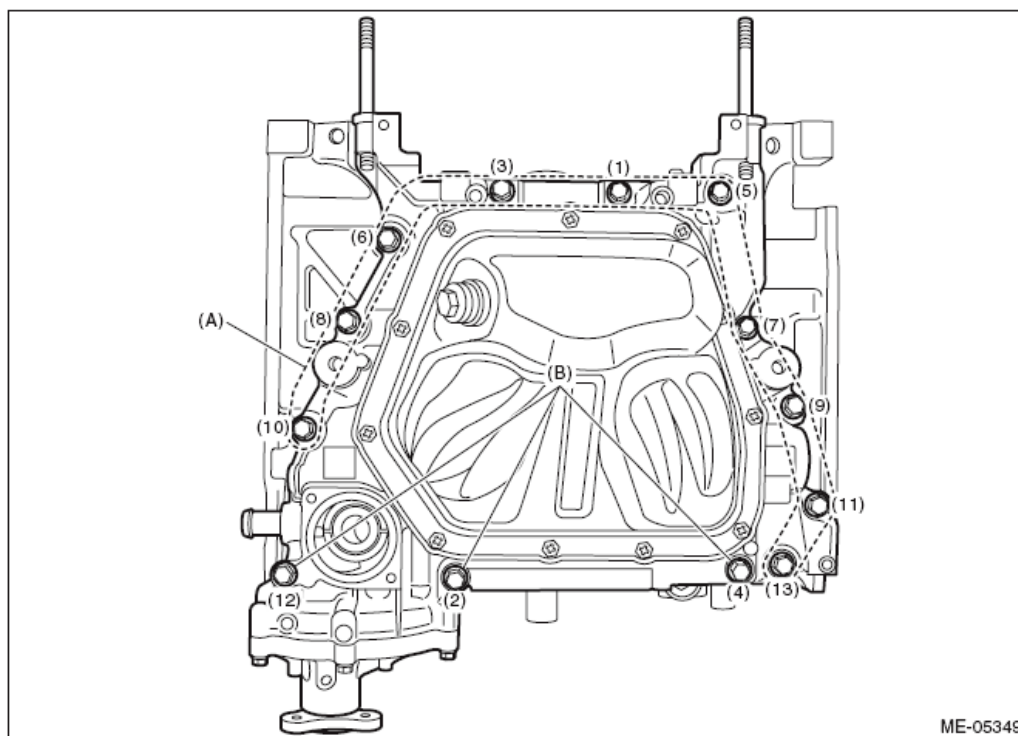

(A) M8 x 25

(B) M8 x 75

Fig. 572: Identifying Oil Pan Upper To Cylinder Block Mounting Bolt Tightening Sequence
Courtesy of SUBARU OF AMERICA, INC.

15. Set the thermostat to the oil pan upper, and install the thermostat cover.

NOTE: Use a new gasket.

Tightening torque:

6.4 N.m (0.7 kgf-m, 4.7 ft-lb)

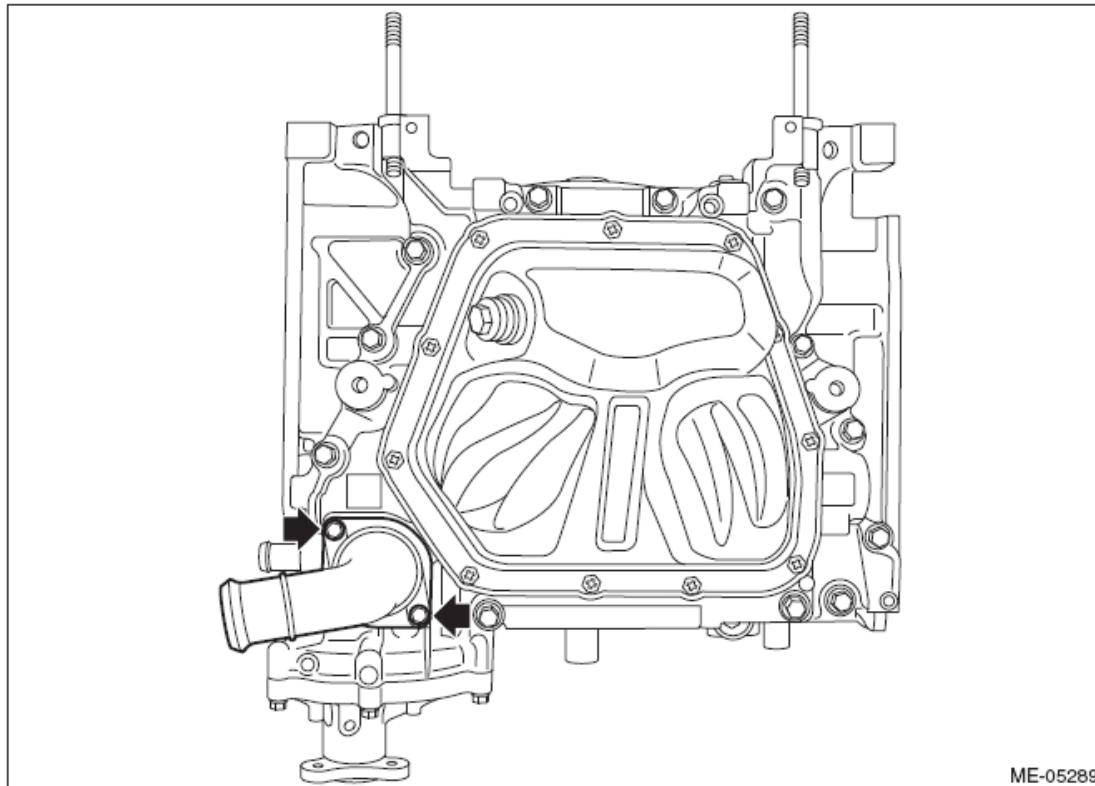


Fig. 573: Locating Thermostat Cover Mounting Bolt
 Courtesy of SUBARU OF AMERICA, INC.

16. Install the ST1, ST2, ST3 and ST4 to the cylinder block and oil pan upper.

ST1 498457000 ENGINE STAND ADAPTER RH

ST2 498457100 ENGINE STAND ADAPTER LH

ST3 18362AA020 ADAPTER

ST4 499817100 ENGINE STAND

Tightening torque:

35 N.m (3.6 kgf-m, 25.8 ft-lb)

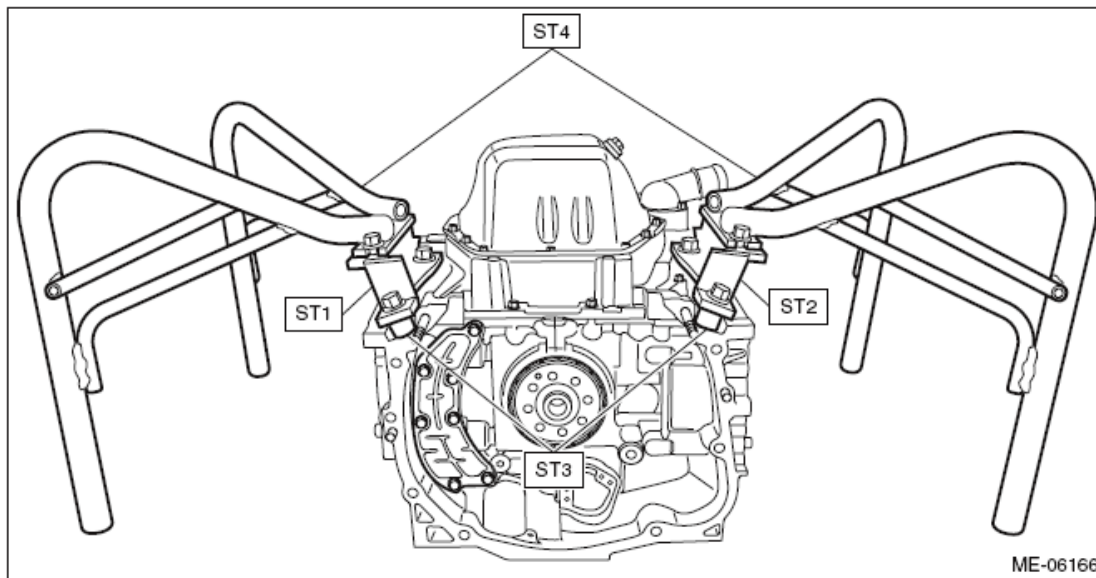


Fig. 574: Installing Engine Stand And Adapter To Cylinder Block And Oil Pan Upper
Courtesy of SUBARU OF AMERICA, INC.

17. Install the water jacket spacer to the cylinder block RH and cylinder block LH. (XV model)

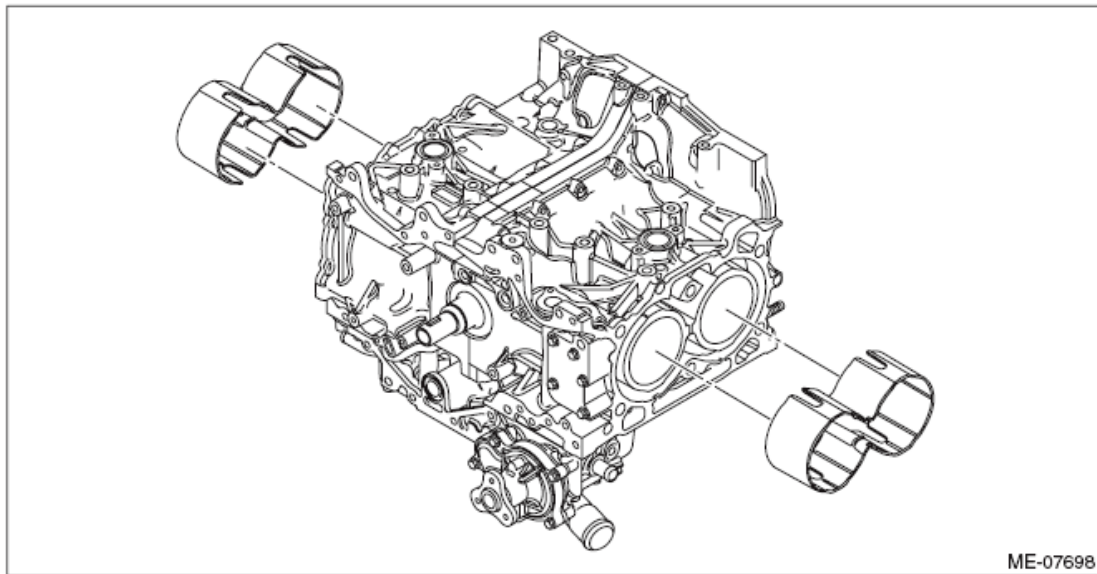


Fig. 575: Identifying Water Jacket Spacer
Courtesy of SUBARU OF AMERICA, INC.

18. Install the crankshaft position sensor with crankshaft position sensor holder to the cylinder block LH.

Tightening torque:

6.4 N.m (0.7 kgf-m, 4.7 ft-lb)

- Gasoline engine model

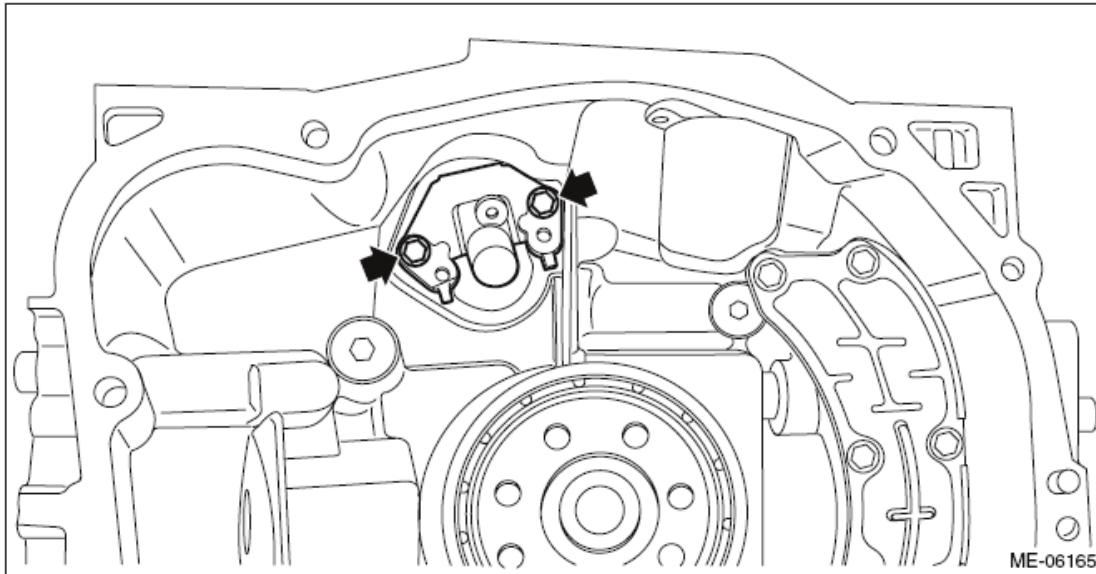


Fig. 576: Locating Crankshaft Position Sensor Holder Mounting Bolt (Gasoline Engine Model)

Courtesy of SUBARU OF AMERICA, INC.

- HEV model

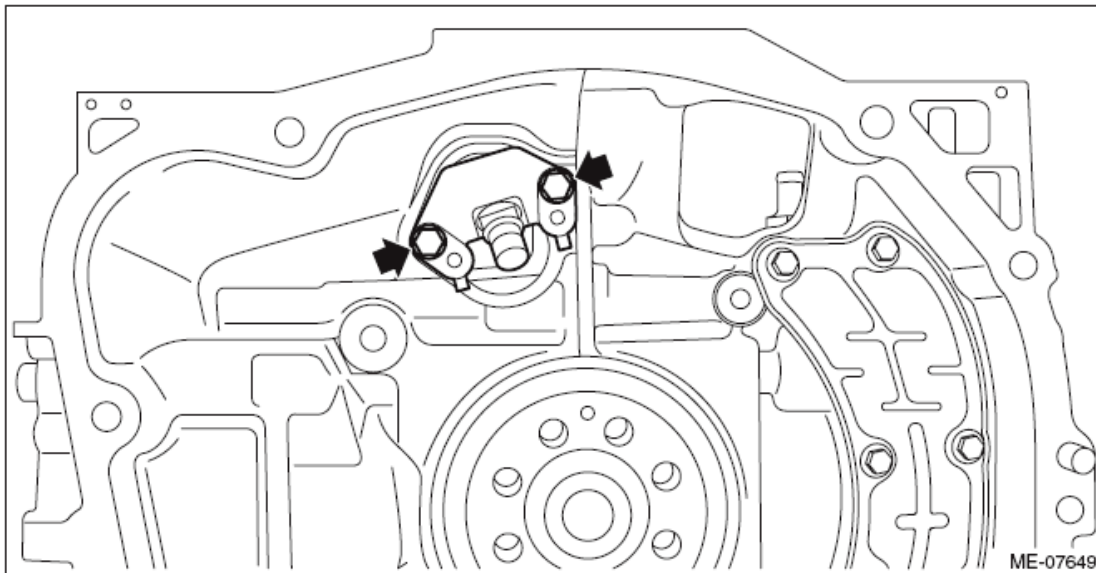


Fig. 577: Locating Crankshaft Position Sensor Holder Mounting Bolt (HEV Model)

Courtesy of SUBARU OF AMERICA, INC.

19. Install the crankshaft position sensor plate with drive plate. (CVT model) < Ref. to **INSTALLATION** , Drive Plate.> < Ref. to **INSTALLATION** , Drive Plate.>

20. Install the crankshaft position sensor plate with flywheel. (MT model) < Ref. to **INSTALLATION** , Flywheel.>
21. Install the clutch disc and cover. (MT model) < Ref. to **INSTALLATION** , Clutch Disc and Cover.>
22. Install the PCV valve onto the cylinder block RH.

NOTE: **Apply liquid gasket to the bolt threads of PCV valve.**

Liquid gasket:

THREE BOND 1324 (Part No. 004403042) or equivalent

Tightening torque:

23 N.m (2.3 kgf-m, 17.0 ft-lb)

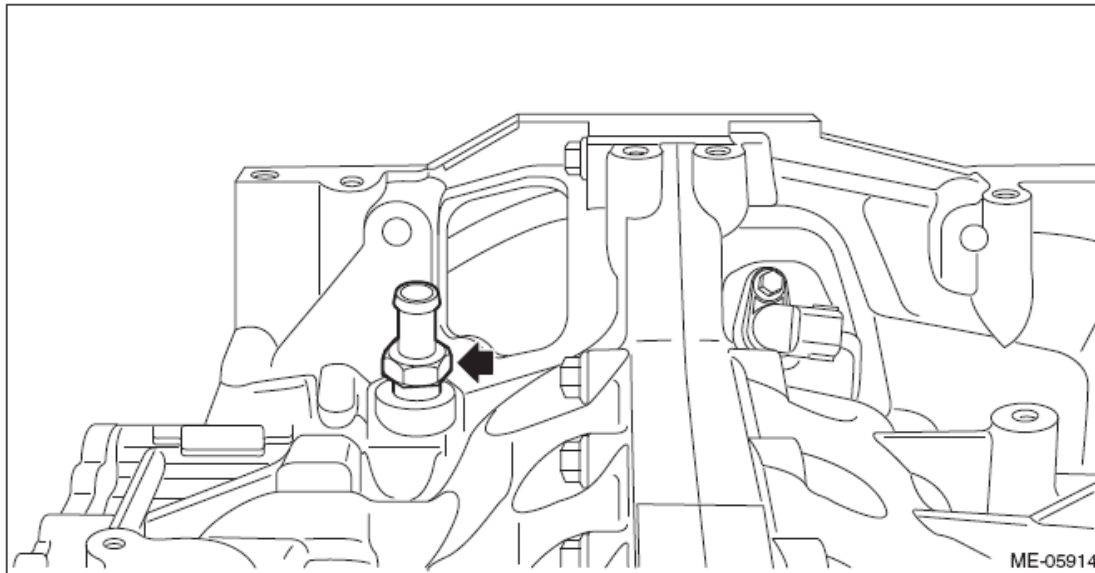


Fig. 578: Locating PCV Valve Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

23. Install the PCV hose to the PCV valve. (Gasoline engine model)

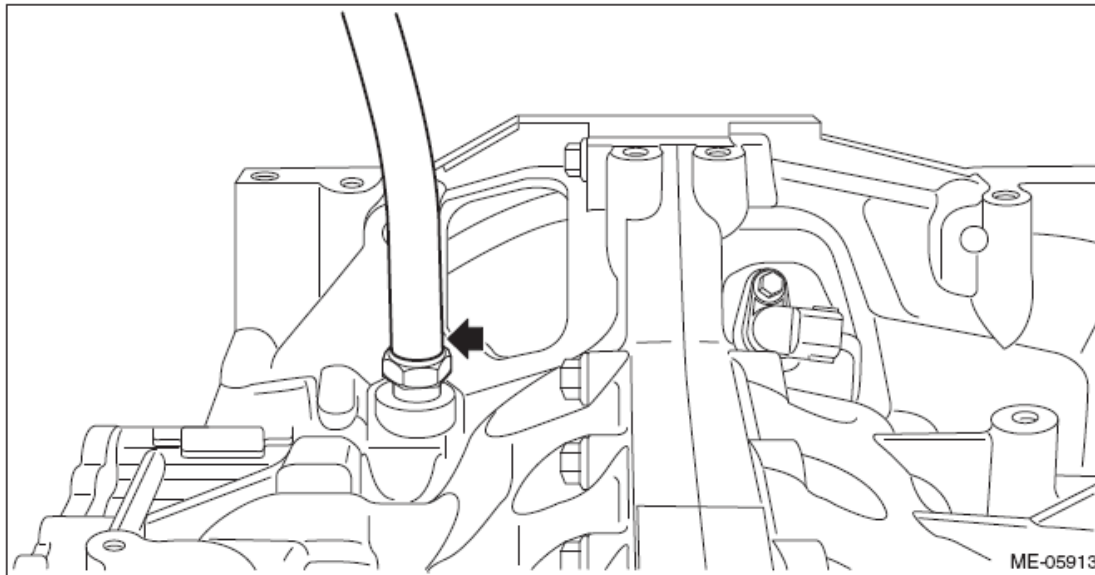



Fig. 579: Locating PCV Hose (Gasoline Engine Model)
 Courtesy of SUBARU OF AMERICA, INC.

24. Install the knock sensor to the cylinder block LH.

NOTE: Knock sensor must be positioned toward engine front so that the connector center position is within the range of 76.5° - 91.5° (shaded area).

Tightening torque:

24 N.m (2.4 kgf-m, 17.7 ft-lb)

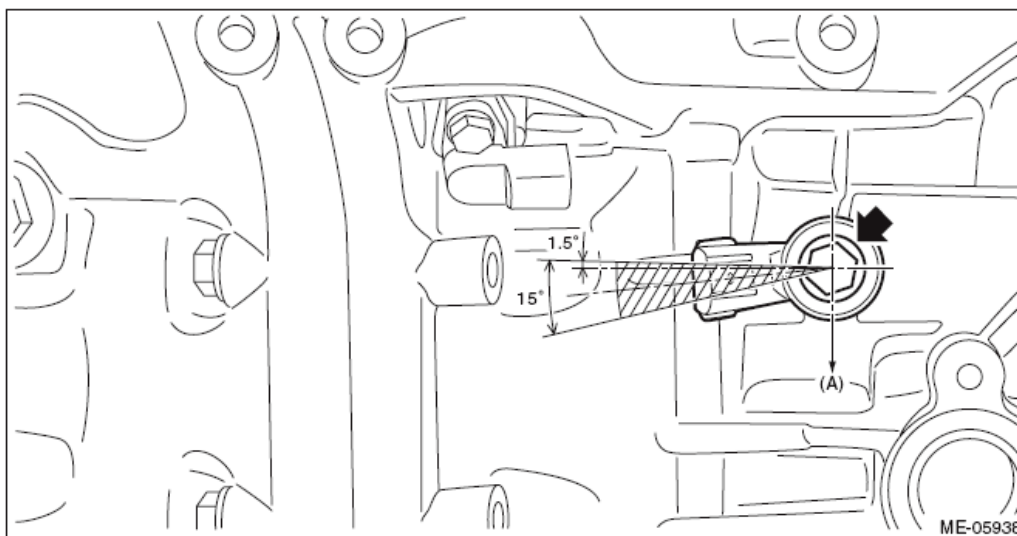

(A) Front of engine

Fig. 580: Locating Knock Sensor Installation Position

Courtesy of SUBARU OF AMERICA, INC.

25. Install the O-ring to the cylinder block and PCV connector.

NOTE: Use new O-rings.

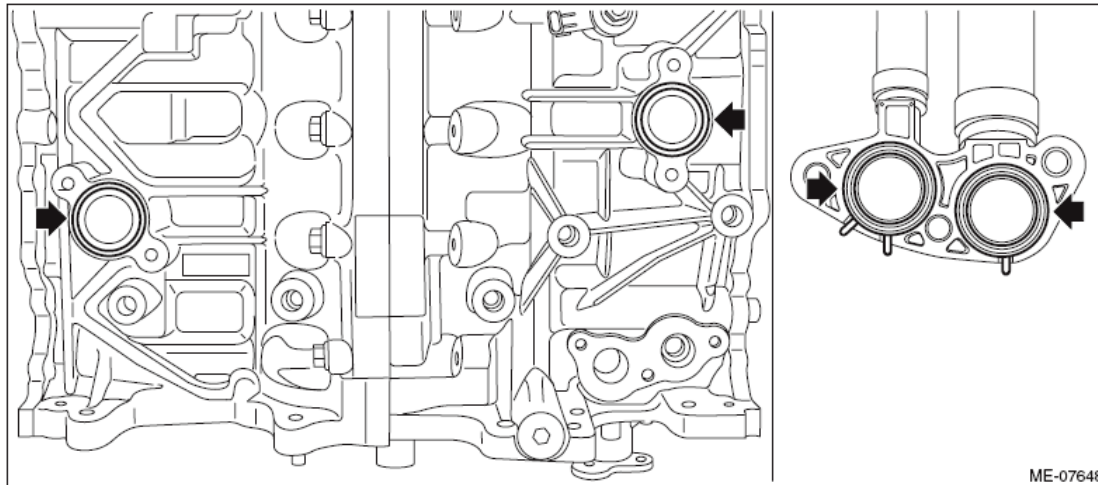


Fig. 581: Locating Cylinder Block And PCV Connector O-Rings
Courtesy of SUBARU OF AMERICA, INC.

26. Set the water pipe assembly, PCV connector and brake vacuum pipe (HEV model) to the cylinder block, and install the bolts which secure the water pipe assembly and PCV connector to the cylinder block.

Tightening torque:

6.4 N.m (0.7 kgf-m, 4.7 ft-lb)

- Gasoline engine model

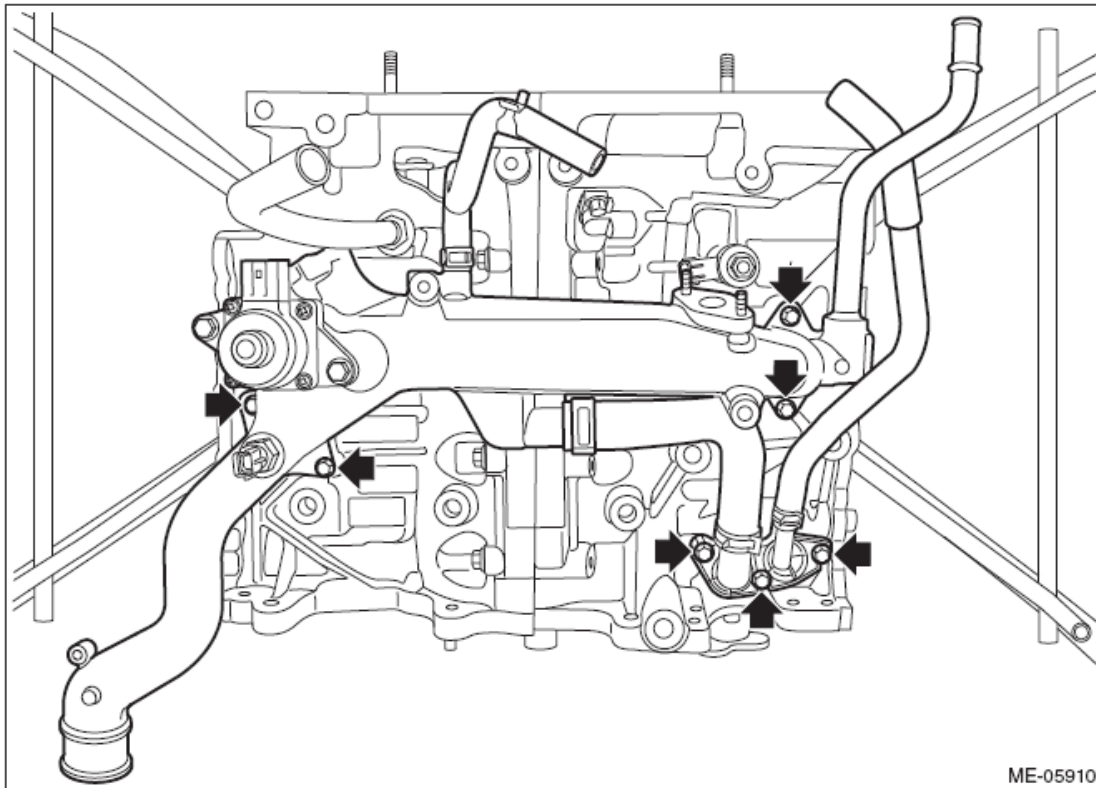


Fig. 582: Locating Water Pipe Assembly And PCV Connector Mounting Bolt (Gasoline Engine Model)

Courtesy of SUBARU OF AMERICA, INC.

- HEV model

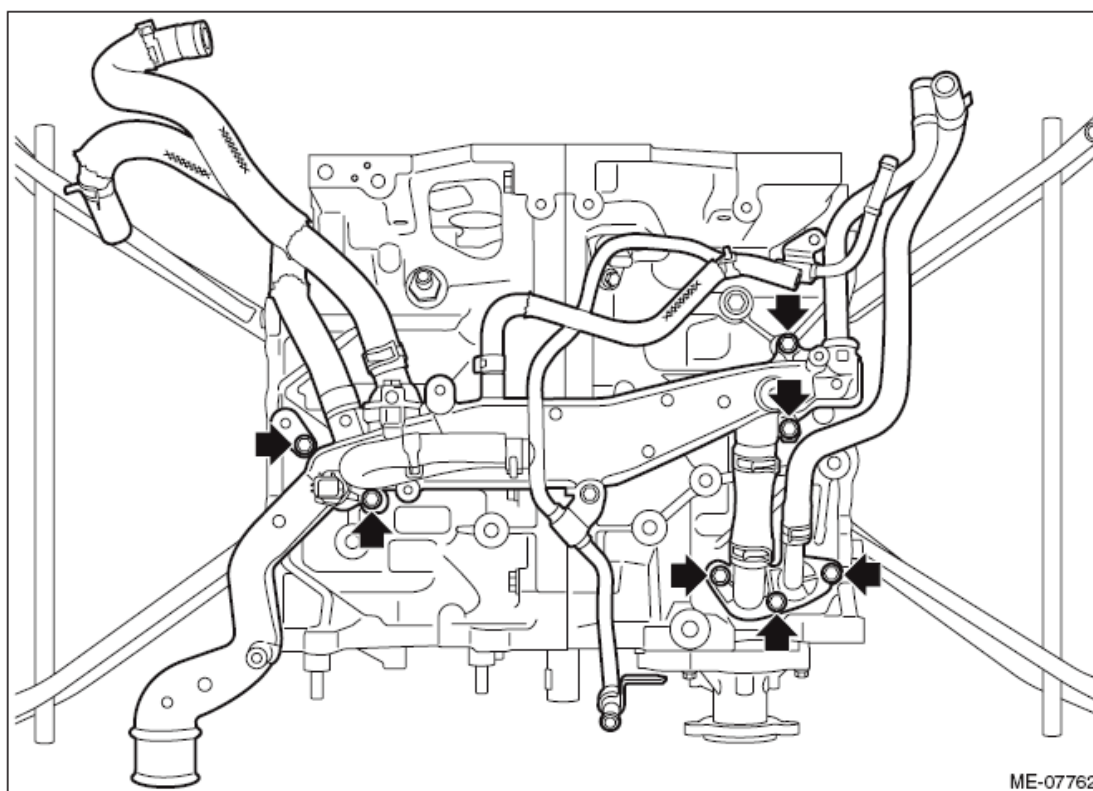


Fig. 583: Locating Water Pipe Assembly And PCV Connector Mounting Bolt (HEV Model)
 Courtesy of SUBARU OF AMERICA, INC.

27. Install the engine rear hanger to the cylinder block RH. (Gasoline engine model)

Tightening torque:

21 N.m (2.1 kgf-m, 15.5 ft-lb)

- Gasoline engine CVT model

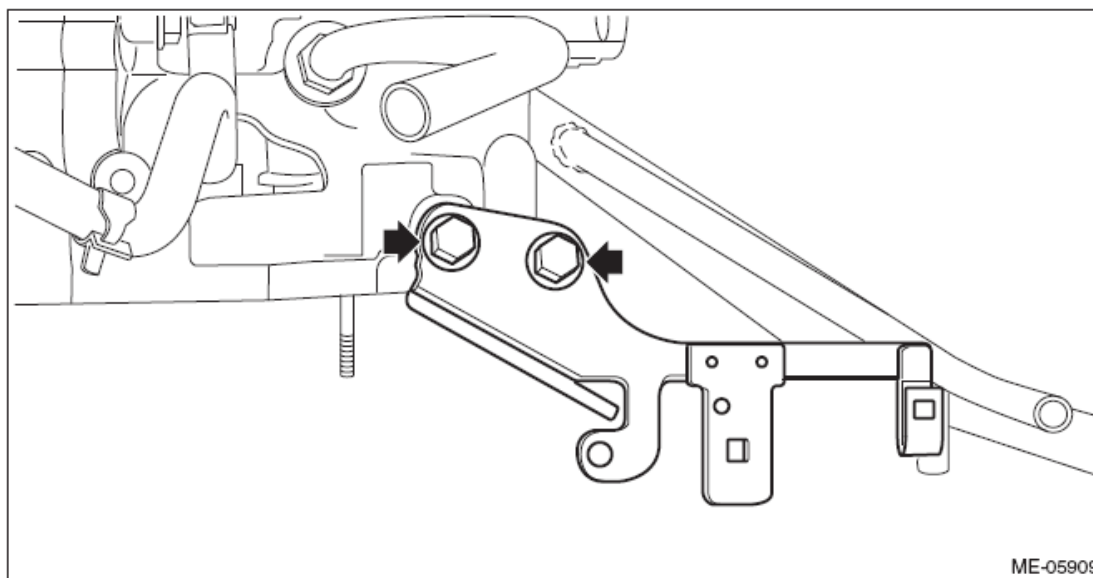


Fig. 584: Locating Engine Rear Hanger Mounting Bolt (Gasoline Engine CVT Model)
Courtesy of SUBARU OF AMERICA, INC.

- Gasoline engine MT model

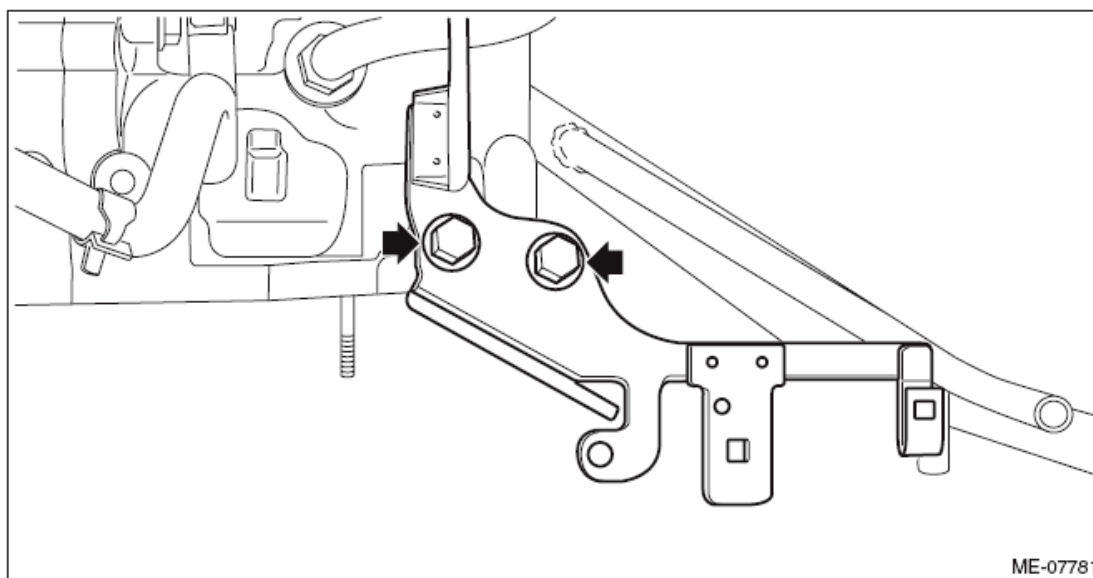


Fig. 585: Locating Engine Rear Hanger Mounting Bolt (Gasoline Engine MT Model)
Courtesy of SUBARU OF AMERICA, INC.

- HEV model

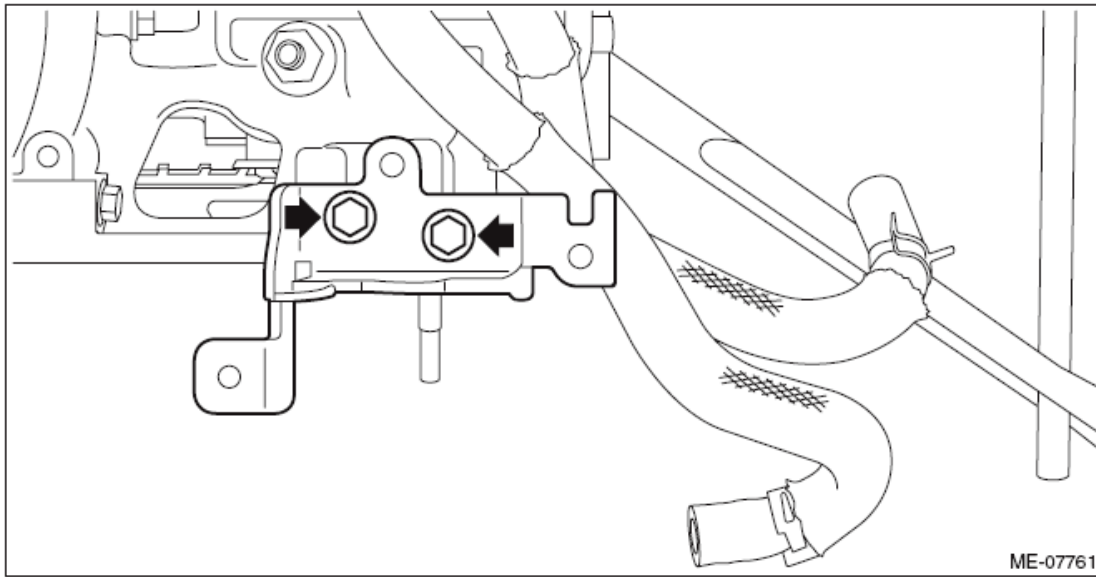


Fig. 586: Locating Engine Rear Hanger Mounting Bolt (HEV Model)
Courtesy of SUBARU OF AMERICA, INC.

28. Install the crank sprocket. < Ref. to **INSTALLATION**, Crank Sprocket.>
29. Install the cylinder head. < Ref. to **INSTALLATION**, Cylinder Head.>
30. Install the cam carrier. < Ref. to **INSTALLATION**, Cam Carrier.>
31. Install the rocker cover. < Ref. to **INSTALLATION**, Rocker Cover.>
32. Install the chain cover. < Ref. to **INSTALLATION**, Chain Cover.>
33. Install the tumble generator valve assembly. < Ref. to **INSTALLATION**, Tumble Generator Valve Assembly.> < Ref. to **INSTALLATION**, Tumble Generator Valve Assembly.>
34. Install the engine wiring harness. < Ref. to **INSTALLATION**, Engine Wiring Harness.> < Ref. to **INSTALLATION**, Engine Wiring Harness.>
35. Install the intake manifold. < Ref. to **INSTALLATION**, Intake Manifold.> < Ref. to **INSTALLATION**, Intake Manifold.>
36. Install the engine to the vehicle. < Ref. to **INSTALLATION**, Engine Assembly.>

DISASSEMBLY

CYLINDER BLOCK

1. Remove the oil separator cover from cylinder block RH.

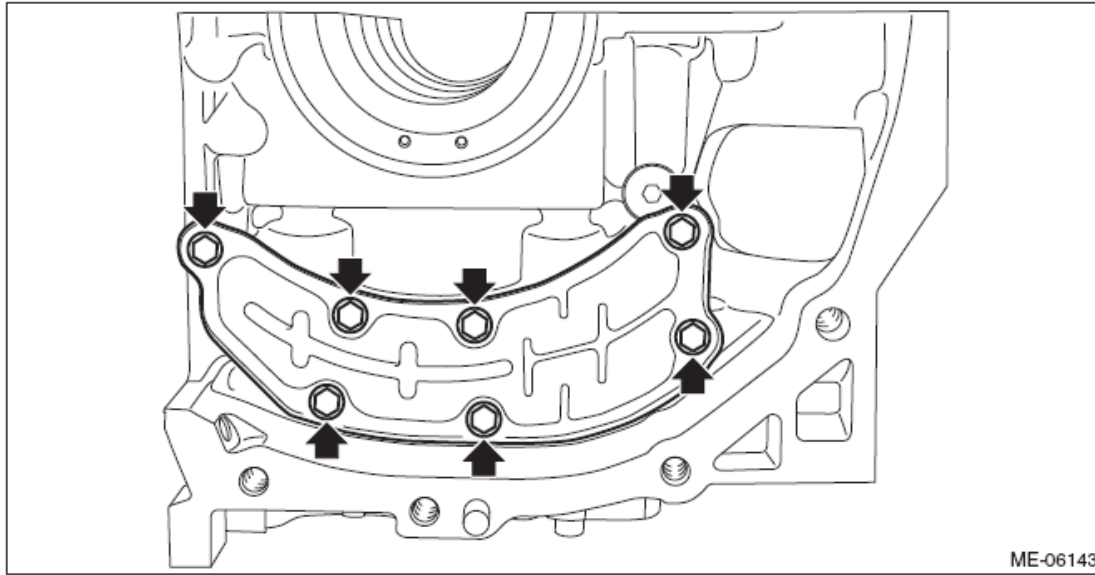


Fig. 587: Locating Oil Separator Cover Mounting Bolt
 Courtesy of SUBARU OF AMERICA, INC.

2. Remove the liquid gasket from cylinder block RH.
3. Remove the cylinder block plug (A) and the main gallery plug (B) from cylinder block RH.

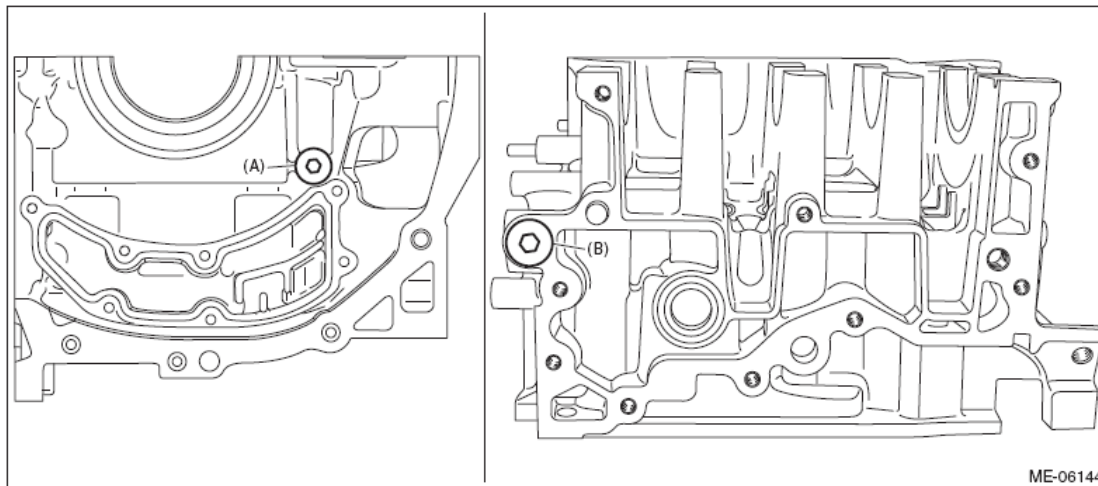


Fig. 588: Identifying Cylinder Block Plug And Main Gallery Plug
 Courtesy of SUBARU OF AMERICA, INC.

4. Remove the liquid gasket from the thread holes of the cylinder block RH, and from the threaded portions of cylinder block plug and main gallery plug.
5. Remove the cylinder block plate from cylinder block LH.

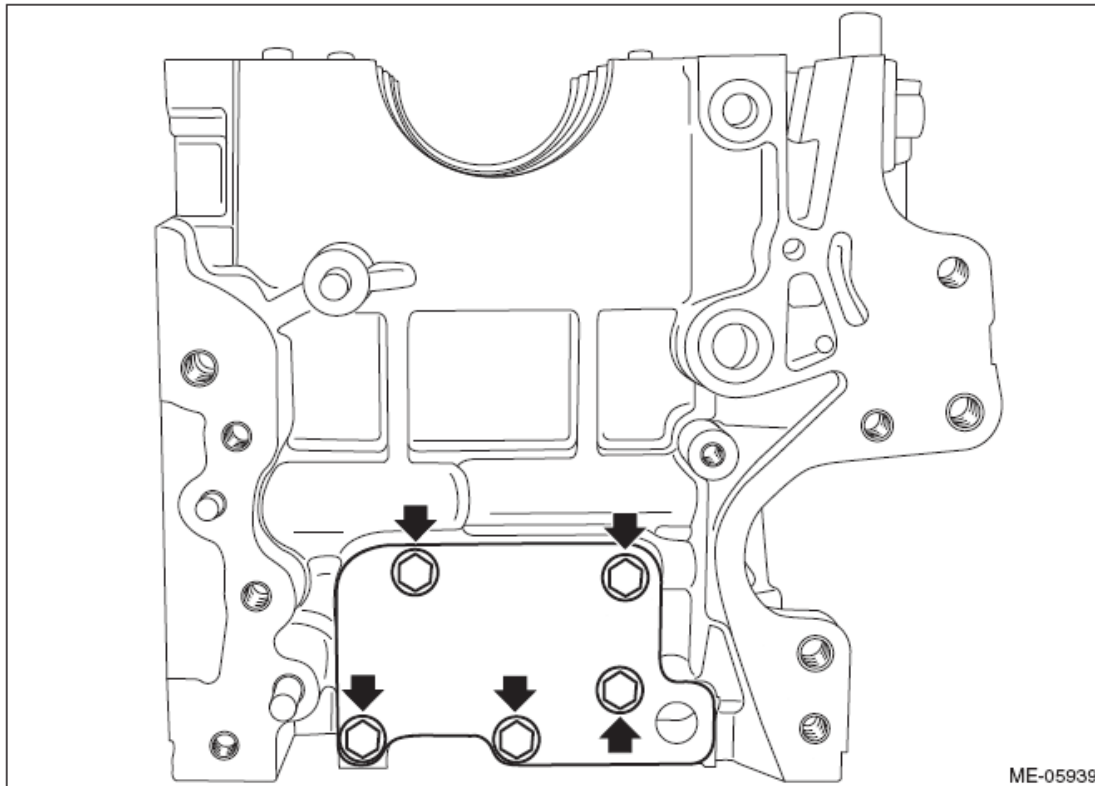


Fig. 589: Locating Cylinder Block Plate Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

6. Remove the main gallery plug from cylinder block LH.


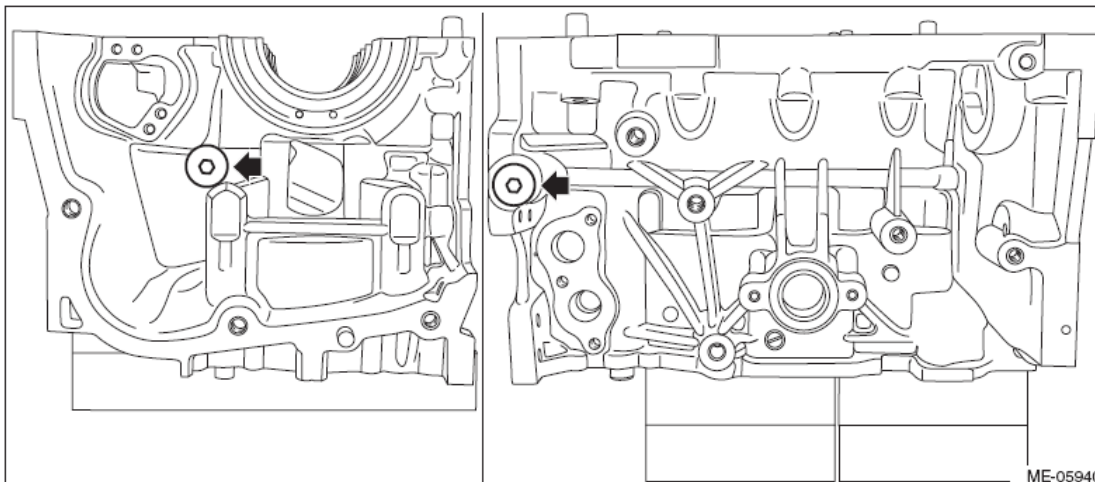


Fig. 590: Locating Main Gallery Plug
Courtesy of SUBARU OF AMERICA, INC.

7. Remove the liquid gasket from the thread holes of the cylinder block LH and main gallery plug.

PISTON AND CONNECTING ROD

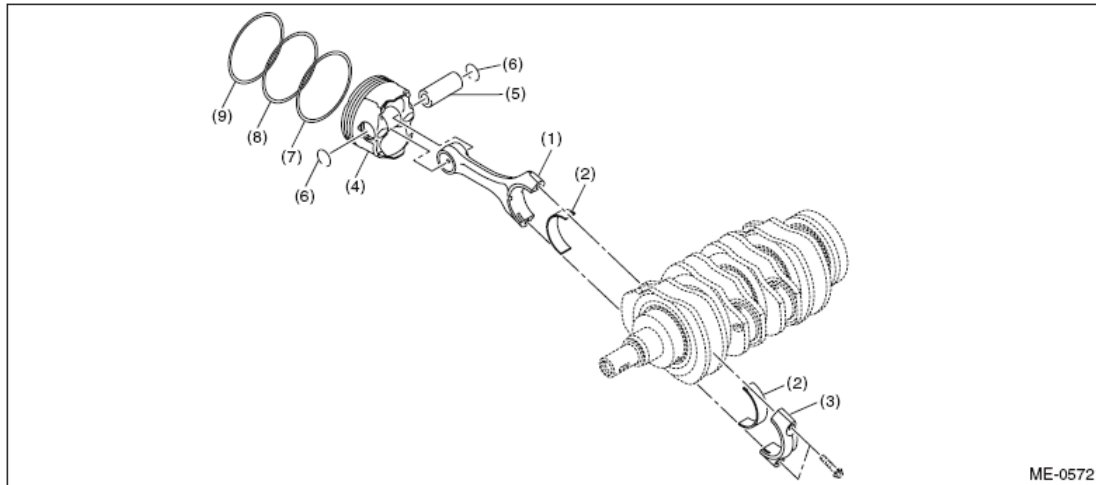

ME-05721

- | | | |
|----------------------------|----------------|-----------------|
| (1) Connecting rod | (4) Piston | (7) Oil ring |
| (2) Connecting rod bearing | (5) Piston pin | (8) Second ring |
| (3) Connecting rod cap | (6) Circlip | (9) Top ring |

Fig. 591: Identifying Piston And Connecting Rod Components

Courtesy of SUBARU OF AMERICA, INC.

NOTE: To prevent confusion of various parts, mark each part.

1. Remove the connecting rod bearing from connecting rod and connecting rod cap.
2. Remove the piston rings from the piston.

NOTE: Arrange the piston rings in order so that they can be installed in their original positions without confusion.

1. Remove the compression rings in the order of top ring and second ring, using piston ring expander.
2. Remove the oil rings in the order of upper rail, lower rail and expander by hand.
3. Remove the circlip on one end from the piston using a flat tip screwdriver.

NOTE: Be careful not damage the piston and piston pin, by wrapping the tip of flat tip screwdriver with tape.

4. Remove the piston pin from piston, and remove the connecting rod from piston.
5. Remove the circlip on other end from the piston using a flat tip screwdriver.

NOTE: Be careful not damage the piston and piston pin, by wrapping the tip of flat tip screwdriver with tape.

ASSEMBLY

CYLINDER BLOCK

1. Apply liquid gasket to the threaded portion of the main gallery plug, and install the main gallery plug to the cylinder block LH.

NOTE: Before applying liquid gasket, degrease the thread holes of the cylinder block LH and main gallery plug.

Liquid gasket:

THREE BOND 1105 (Part No. 004403010) or equivalent

Tightening torque:

37 N.m (3.8 kgf-m, 27.3 ft-lb)

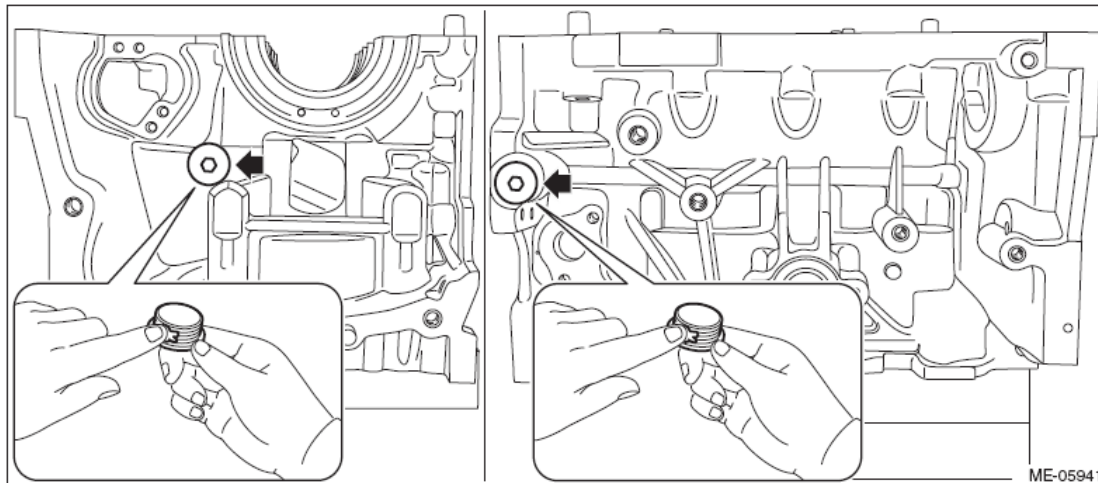


Fig. 592: Applying Liquid Gasket To Threaded Portion Of Main Gallery Plug
Courtesy of SUBARU OF AMERICA, INC.

2. Install the cylinder block plate onto cylinder block LH.

Tightening torque:

6.4 N.m (0.7 kgf-m, 4.7 ft-lb)

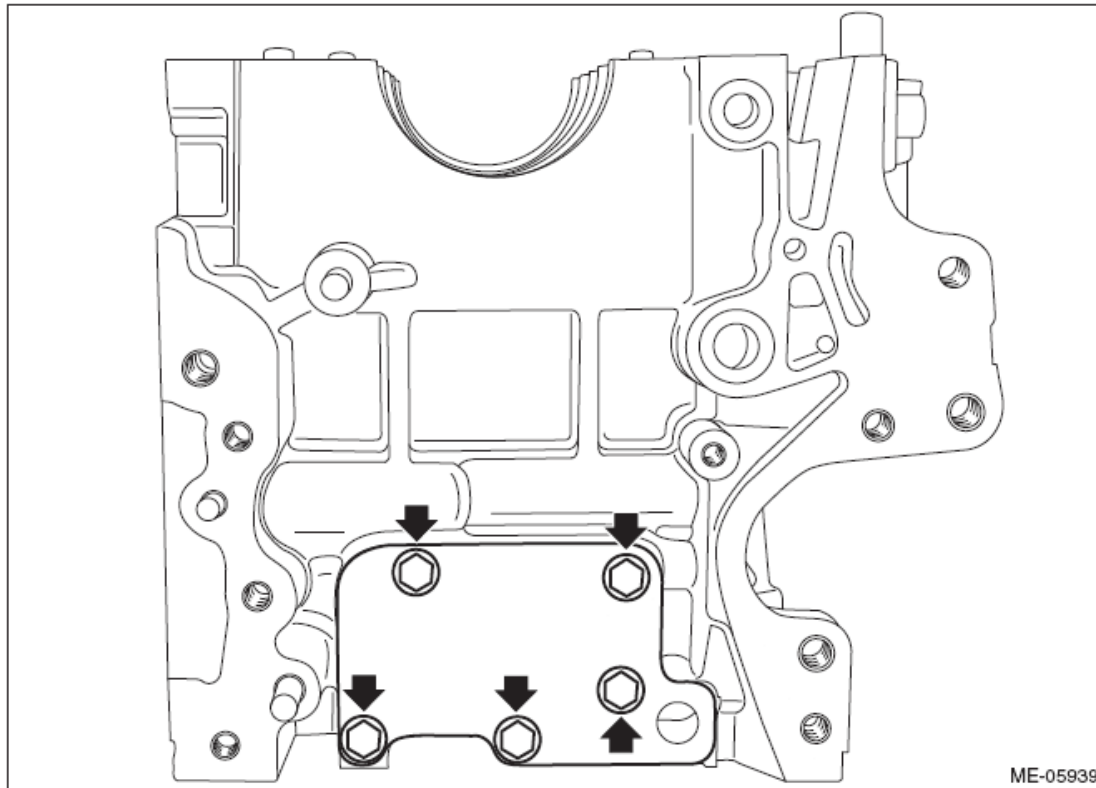


Fig. 593: Locating Cylinder Block Plate Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

3. Apply liquid gasket to the threaded portions of cylinder block plug and main gallery plug, and install the cylinder block plug (A) and main gallery plug (B) to cylinder block RH.

NOTE: Before applying liquid gasket, degrease the thread holes of the cylinder block RH, and the threaded portions of cylinder block plug and main gallery plug.

Liquid gasket:

THREE BOND 1105 (Part No. 004403010) or equivalent

Tightening torque:

T1: 16 N.m (1.6 kgf-m, 11.8 ft-lb)

T2: 37 N.m (3.8 kgf-m, 27.3 ft-lb)

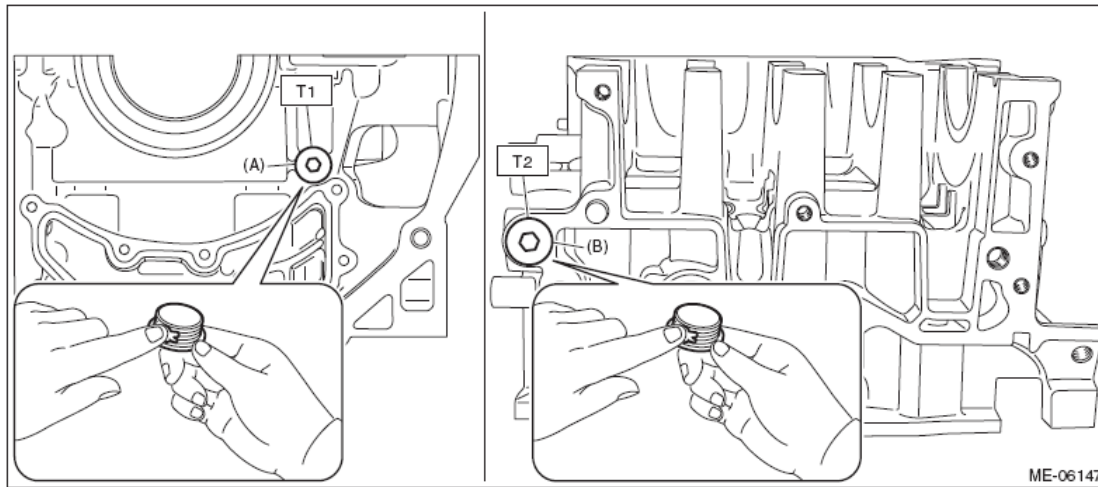


Fig. 594: Applying Liquid Gasket To Threaded Portions Of Cylinder Block Plug
 Courtesy of SUBARU OF AMERICA, INC.

4. Install the oil separator cover to the cylinder block RH.
 1. Apply liquid gasket to the mating surfaces of oil separator cover.

NOTE:

- Use new oil separator cover.
- Before applying liquid gasket, degrease the old liquid gasket seal surface of cylinder block RH.
- Install within 5 min. after applying liquid gasket.

Liquid gasket:

Mating surface

THREE BOND 1217G (Part No. K0877Y0100) or equivalent

Liquid gasket applying diameter:

4±1 mm (0.1772±0.0197 in)

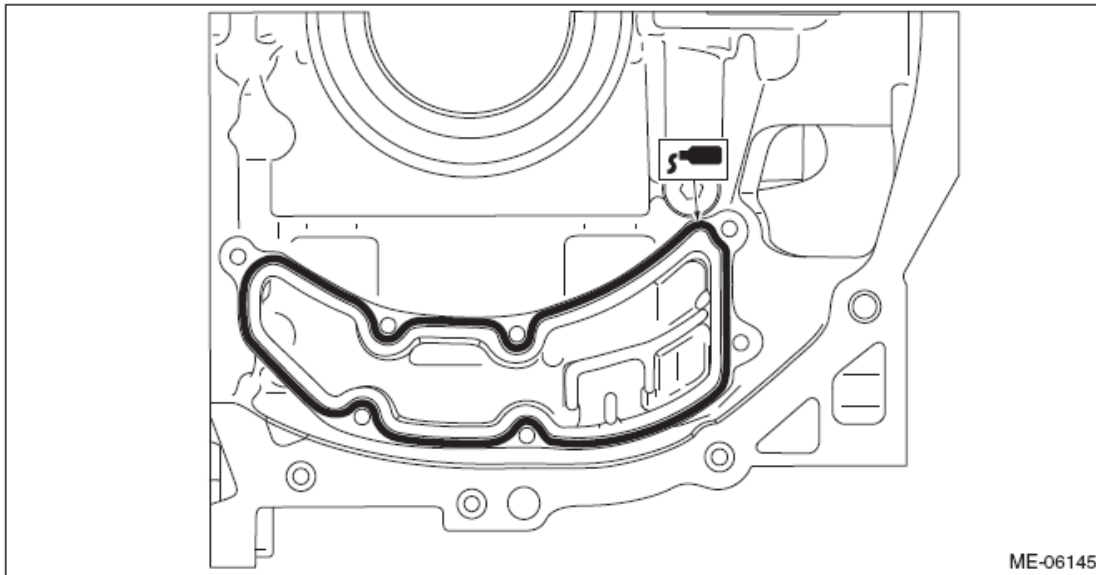


Fig. 595: Identifying Liquid Gasket Applying Area On Oil Separator Cover
 Courtesy of SUBARU OF AMERICA, INC.

2. Install the oil separator cover to the cylinder block RH, and tighten the oil separator cover bolts in numerical order as shown in the figure.

Tightening torque:

6.4 N.m (0.7 kgf-m, 4.7 ft-lb)


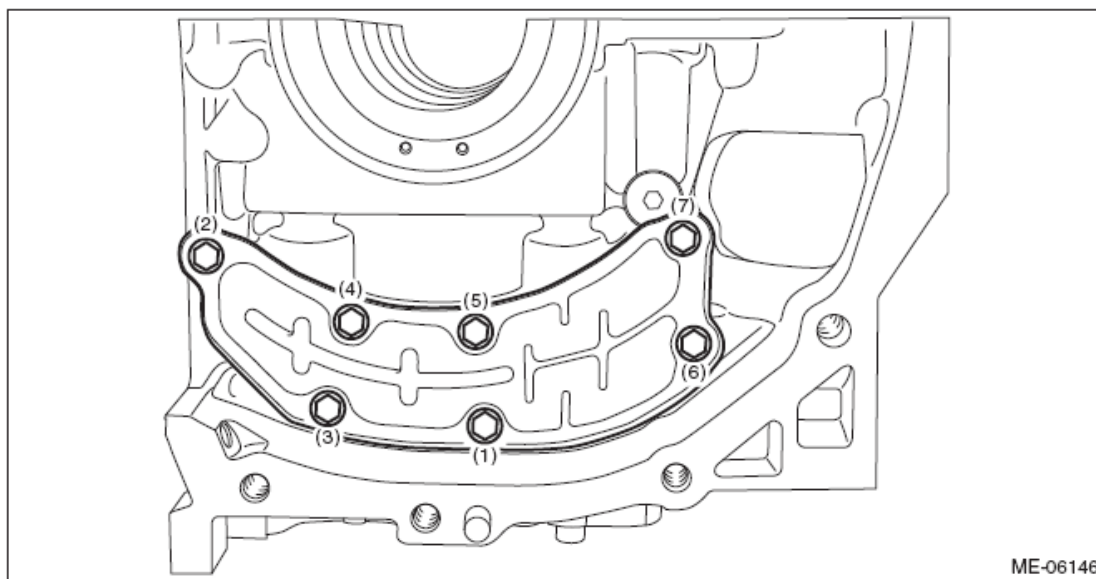


Fig. 596: Identifying Oil Separator Cover Mounting Bolts Tightening Sequence
 Courtesy of SUBARU OF AMERICA, INC.

PISTON AND CONNECTING ROD

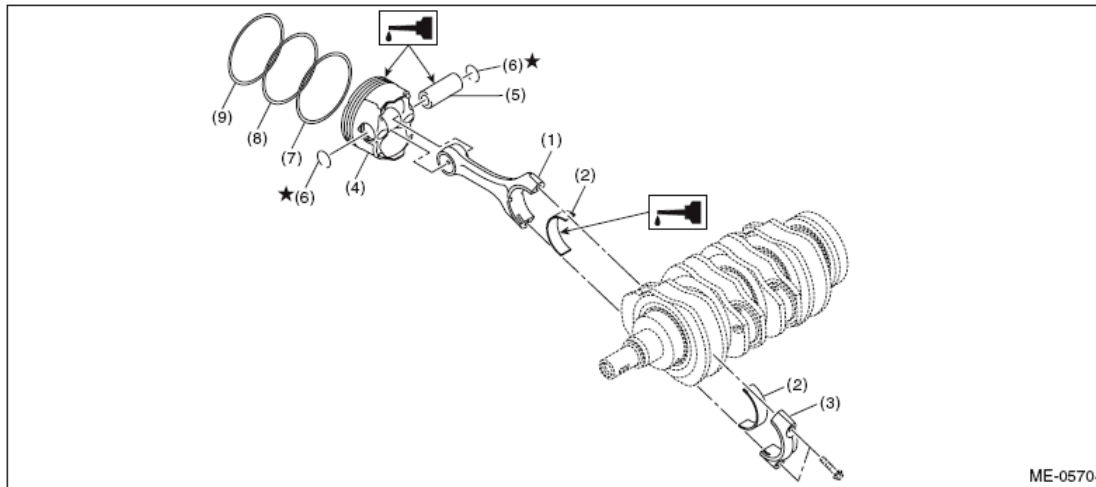

- | | | |
|----------------------------|----------------|-----------------|
| (1) Connecting rod | (4) Piston | (7) Oil ring |
| (2) Connecting rod bearing | (5) Piston pin | (8) Second ring |
| (3) Connecting rod cap | (6) Circlip | (9) Top ring |

Fig. 597: Identifying Piston And Connecting Rod Components
Courtesy of SUBARU OF AMERICA, INC.

1. Install the connecting rod bearing to the connecting rod and connecting rod cap.
2. Install the circlip on one end of the piston using a flat tip screwdriver.

NOTE:

- Be careful not damage the piston, by wrapping the tip of flat tip screwdriver with tape.
- Make sure the circlip is firmly inserted into the circlip groove.
- After installing the circlip, rotate the circlip so that its end part (a) and the cutout portion of circlip groove (b) do not match.


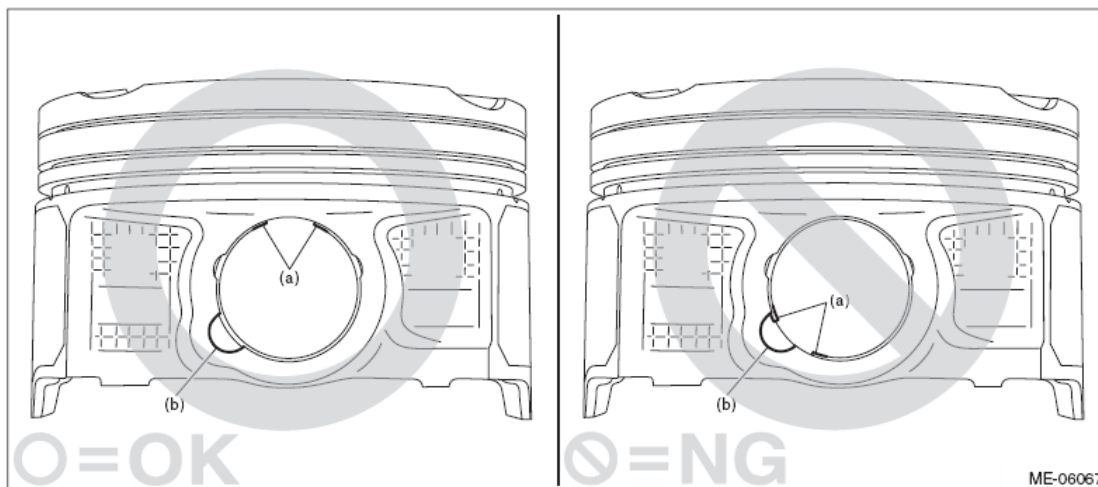


Fig. 598: Caution For Installing Circlip On Piston
Courtesy of SUBARU OF AMERICA, INC.

3. Set the piston to the connecting rod.

NOTE: Align the front mark of piston and the connecting rod direction correctly as shown in the figure.

- Gasoline engine model

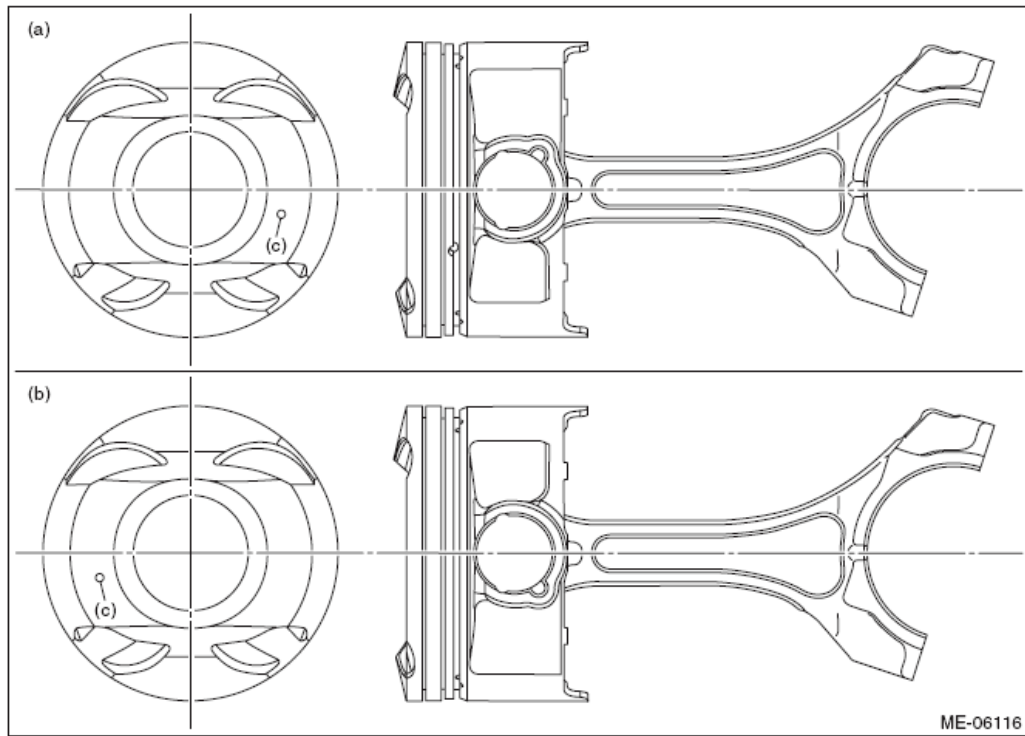


(a) RH side (#1 and #3)

(b) LH side (#2 and #4)

(c) Front mark

Fig. 599: Identifying Piston And Connecting Rod Alignment Marks (Gasoline Engine Model)
Courtesy of SUBARU OF AMERICA, INC.

- HEV model

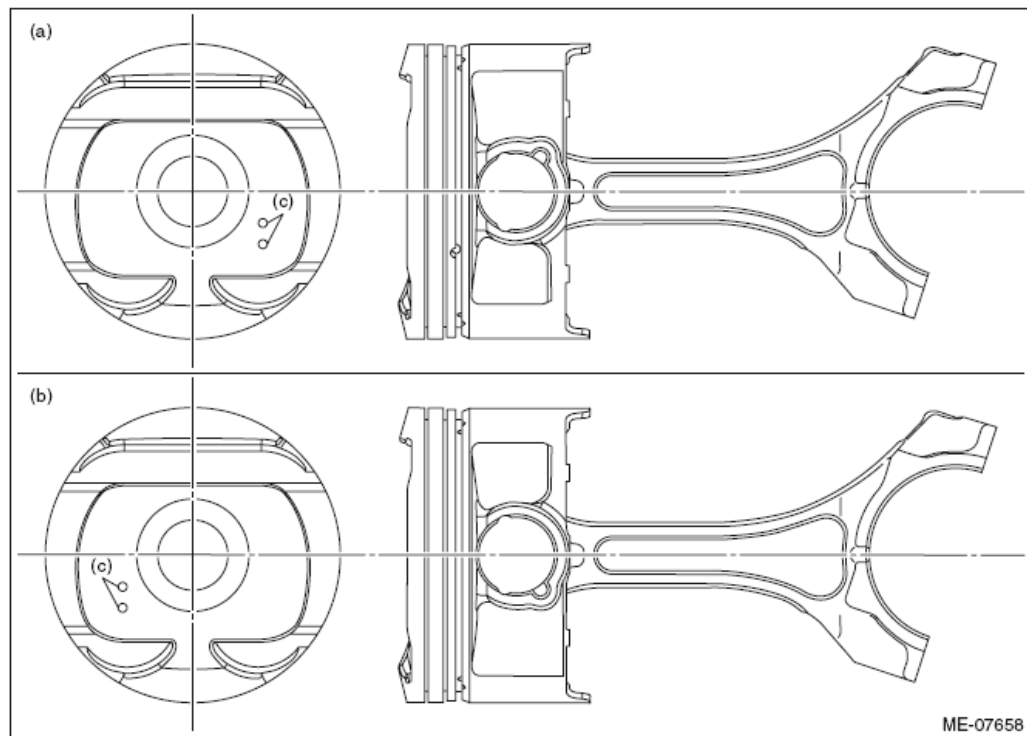

(a) RH side (#1 and #3)

(b) LH side (#2 and #4)

(c) Front mark

Fig. 600: Identifying Piston And Connecting Rod Alignment Marks (HEV Model)
Courtesy of SUBARU OF AMERICA, INC.

4. Apply engine oil to the piston pin, and attach the piston pin.
5. Install the circlip on the piston using a flat tip screwdriver.

NOTE:

- Be careful not damage the piston and piston pin, by wrapping the tip of flat tip screwdriver with tape.
- Make sure the circlip is firmly inserted into the circlip groove.
- After installing the circlip, rotate the circlip so that its end part (a) and the cutout portion of circlip groove (b) do not match.


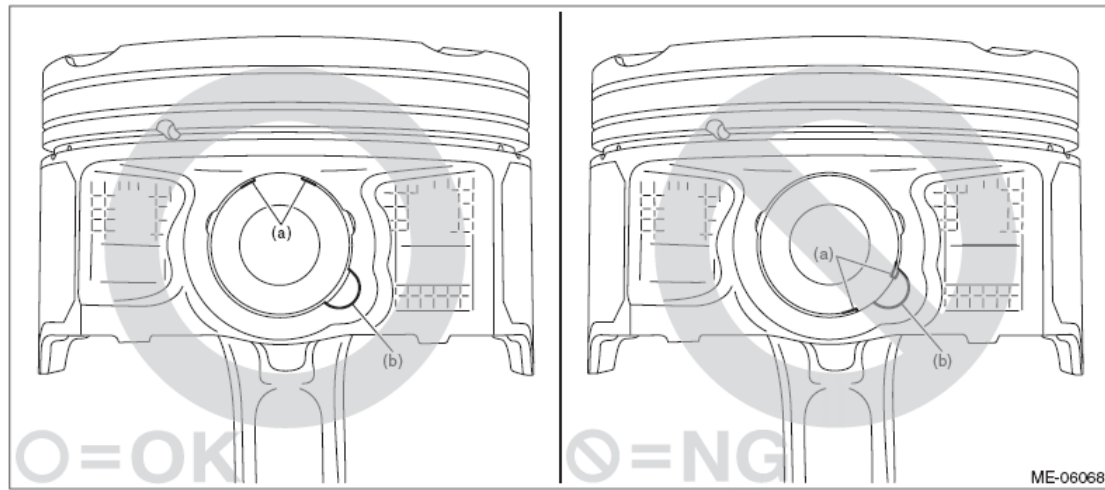


Fig. 601: Caution For Installing Circlip On Piston
 Courtesy of SUBARU OF AMERICA, INC.

6. Install the piston rings onto the piston.
 1. Install the oil rings in the order of expander, lower rail and upper rail by hand.

NOTE: Oil ring consists of the upper rail, expander and lower rail.

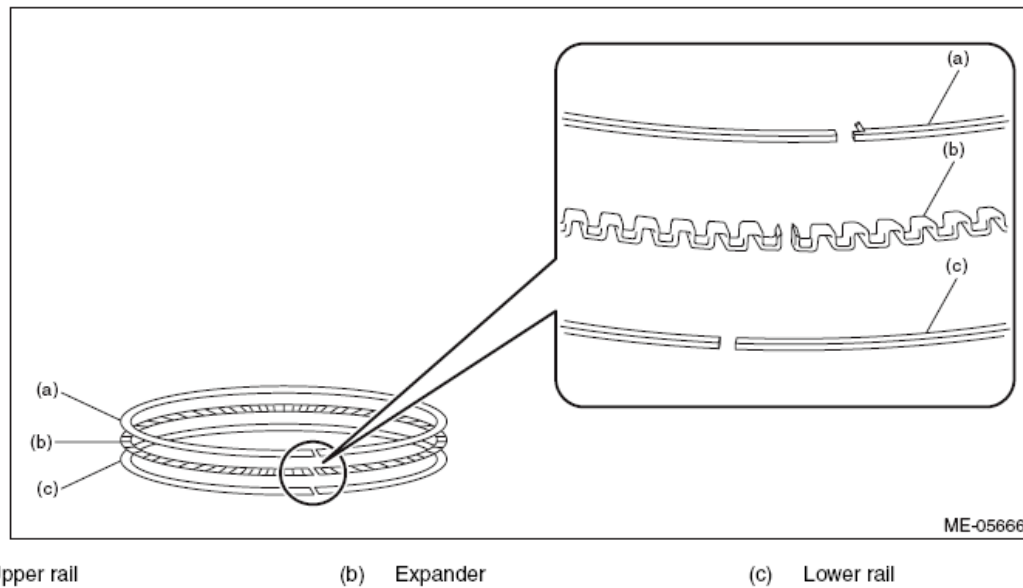

(a) Upper rail

(b) Expander

(c) Lower rail

Fig. 602: Identifying Oil Ring Upper Rail, Expander And Lower Rail
 Courtesy of SUBARU OF AMERICA, INC.

2. Install the compression rings in the order of second ring and top ring, using piston ring expander.

NOTE: Install so that the compression ring mark faces the top side of the piston.

INSPECTION**CYLINDER BLOCK & PISTON**

1. Visually inspect to make sure that there are no cracks, scratches or other damage.
2. Use liquid penetrant tester on the important sections to check for fissures.
3. Check that there are no traces of gas leaking or water leaking on the gasket attachment surface.
4. Check the oil passages for clogging.
5. Check for warpage of mating surfaces of the cylinder block that contacts cylinder head using a straight edge and thickness gauge. If it exceeds the limit, correct the surface by grinding it with a surface grinder or replace the cylinder block.

NOTE: **Measurement should be performed at a temperature of 20°C (68°F).**

Cylinder block warpage:

Limit

0.025 mm (0.00098 in)

Grinding limit of cylinder block:

To 204.9 mm (8.067 in)

Height of cylinder block:


Standard

205.0 mm (8.071 in)

6. Using a cylinder bore gauge, check the inner diameter of cylinder liner, cylindricity, out-of-roundness. If it is not within the standard, perform boring and honing, or replace the cylinder block and piston as a set. For boring and honing procedure, refer to step 8).

NOTE:

- **Measurement should be performed at a temperature of 20°C (68°F).**
- **Measure the inner diameter of each cylinder liner in both the thrust and piston pin directions at the heights as shown in the figure.**
- **The cylinder bore size mark is stamped on the upper face of the cylinder block.**

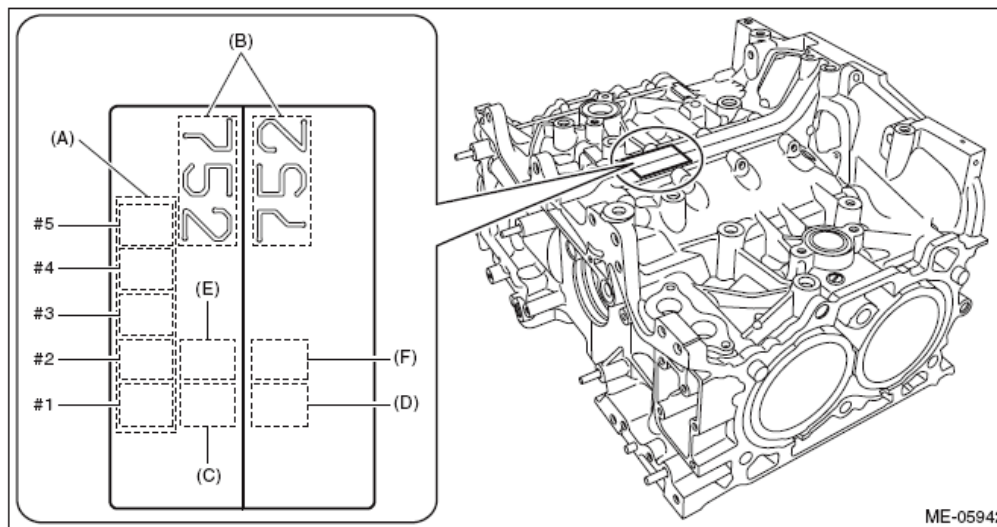

- | | | |
|---|--------------------------------|--------------------------------|
| (A) Main journal size mark | (C) #1 cylinder bore size mark | (E) #3 cylinder bore size mark |
| (B) Cylinder block (RH) - (LH) combination mark | (D) #2 cylinder bore size mark | (F) #4 cylinder bore size mark |

Fig. 603: Identifying Cylinder Bore Size Mark Stamped On Upper Face Of Cylinder Block
 Courtesy of SUBARU OF AMERICA, INC.

Inner diameter of cylinder liner:

Cylinder bore size mark A

Standard

84.005 - 84.015 mm (3.3073 - 3.3077 in)

Cylinder bore size mark B

Standard

83.995 - 84.005 mm (3.3069 - 3.3073 in)

Cylindricity of cylinder liner:


Limit

0.015 mm (0.0006 in)

Out-of-roundness of cylinder liner:

Limit

0.010 mm (0.0004 in)

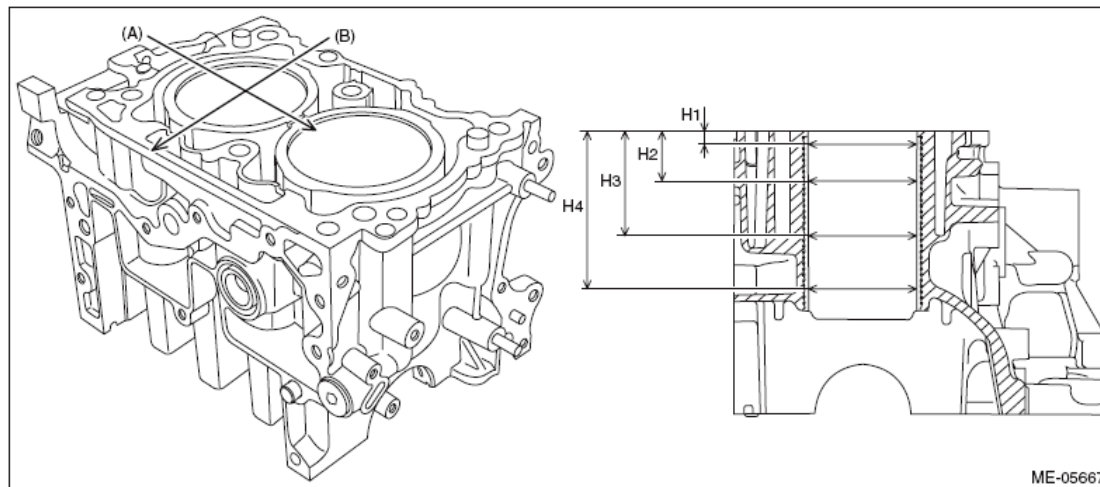

(A) Thrust direction

(B) Piston pin direction

H1: 10 mm (0.3937 in)

H2: 45 mm (1.7717 in)

H3: 80 mm (3.1496 in)

H4: 115 mm (4.5276 in)

Fig. 604: Identifying Cylinder Liner Dimensions

Courtesy of SUBARU OF AMERICA, INC.

7. Check the clearance between cylinder liner and piston. Check the clearance between cylinder liner and piston by measuring the inner diameter of cylinder liner and the outer diameter of piston respectively.

NOTE: For the measurement of the inner diameter of cylinder liner, refer to step 6).

1. Check the outer diameter of piston with a micrometer. If it is not within the standard, replace the piston.

NOTE:

- Measurement should be performed at a temperature of 20°C (68° F).
- Measure the outer diameter of each piston in thrust direction at the height as shown in the figure.
- Standard sized pistons are classified into two grades, "A" and "B". These grades should be used as guide lines in selecting a standard piston.
- If the piston is replaced, check the clearance between cylinder liner and piston in the step (2), and select a suitable sized piston.

Piston grade point H:***38.0 mm (1.50 in)******Piston outer diameter:***

Standard size (grade A)

Standard

83.975 - 83.985 mm (3.3061 - 3.3065 in)

Standard size (grade B)

Standard

83.965 - 83.975 mm (3.3057 - 3.3061 in)

0.25 mm (0.0098 in) oversize

Standard

84.215 - 84.235 mm (3.3155 - 3.3163 in)

0.50 mm (0.0197 in) oversize

Standard

84.465 - 84.485 mm (3.3254 - 3.3262 in)

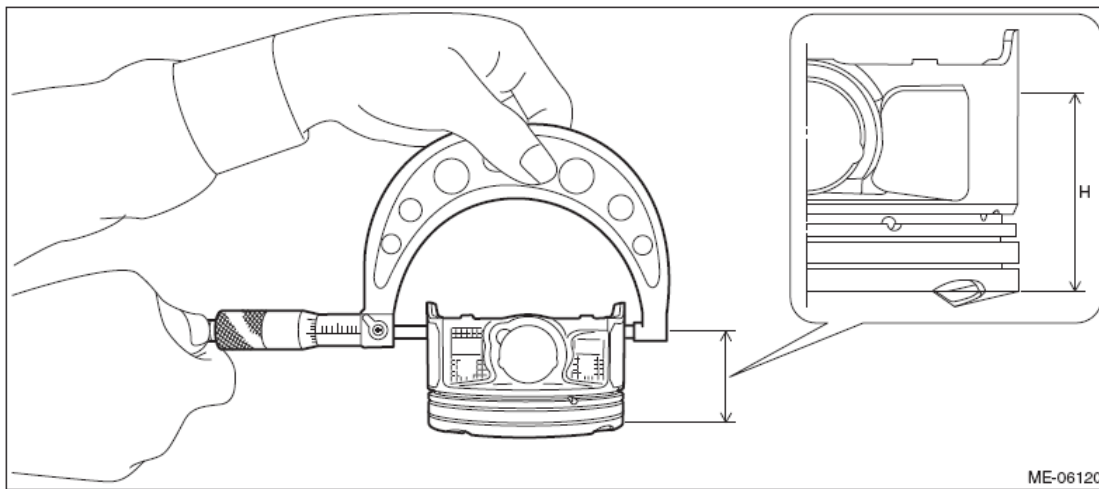


Fig. 605: Measuring Piston Outer Diameter Using Tool
 Courtesy of SUBARU OF AMERICA, INC.

2. Calculate the clearance between cylinder liner and piston. If it is not within the standard, perform boring and honing, or replace the cylinder block and piston as a set. For boring and honing procedure, refer to step [8](#).

Clearance between cylinder liner and piston:

Standard**0.020 - 0.040 mm (0.00079 - 0.00158 in)****8. Boring and honing**

1. If any of the inner diameter, cylindricality, out-of-roundness or clearance between cylinder liner and piston is out of standard or if there is any damage on the cylinder liner, rebore it to replace with an oversize piston.

CAUTION: When any of the cylinder liner needs reboring, all other cylinder liners must be bored at the same time, and replaced with oversize pistons.

2. If the inner diameter of cylinder liner exceeds the limit after boring and honing, replace the cylinder block and piston as a set.

NOTE:

- Immediately after reboring, the inner diameter of cylinder liner may differ from its real diameter due to temperature rise. Thus, when measuring the inner diameter of cylinder liner, wait until the temperature has cooled to 20°C (68°F).
- For the measurement of the inner diameter of cylinder liner, refer to step 6).

Inner diameter of cylinder liner boring limit (diameter):

To 84.505 mm (3.3270 in)

PISTON AND PISTON PIN

1. Check the piston and piston pin for wear or crack.
2. Check the snap ring for distortion or wear.
3. Check the piston ring groove for damage.
4. Check the circlip groove (A) for burr.

NOTE: If the burr is found, remove the burr from groove.

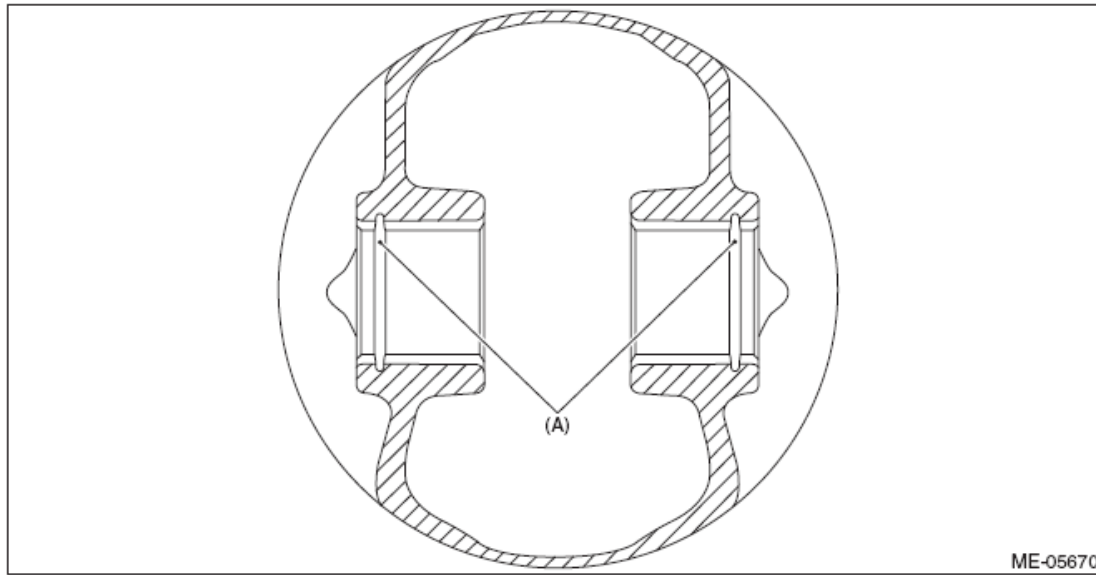


Fig. 606: Measuring Piston Outer Diameter Using Tool
 Courtesy of SUBARU OF AMERICA, INC.

5. Check that the piston pin can be inserted into the piston with a thumb at 20°C (68°F).
6. Check the clearance between piston and piston pin. Check the clearance between piston and piston pin by measuring the inner diameter of piston pin hole and the outer diameter of piston pin respectively.
 1. Using a caliper gauge, measure the inner diameter of piston pin hole.

NOTE:

- Measurement should be performed at a temperature of 20°C (68°F).
- Measure the inner diameter of the piston pin hole at the four locations as shown in the figure, and read the value of most worn location.
- Record the measured value.


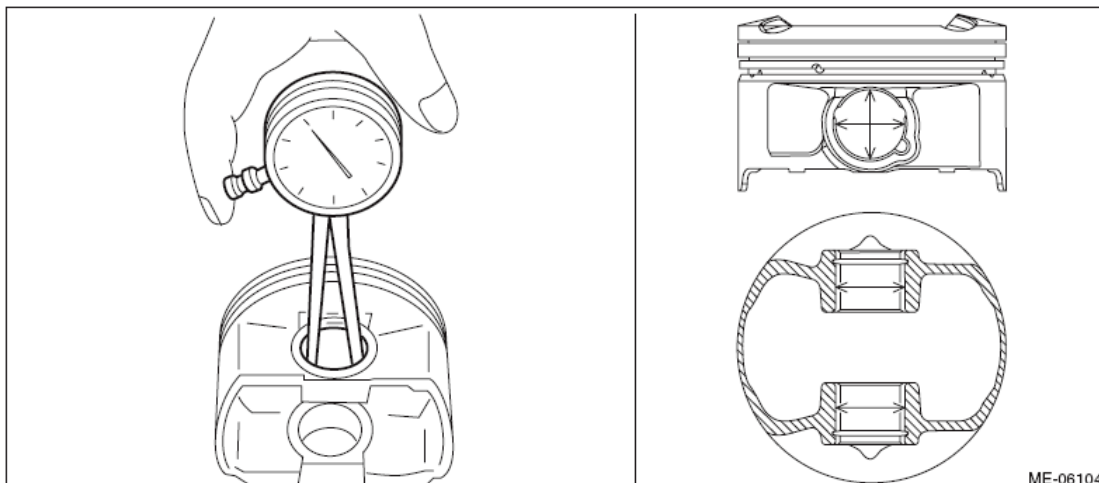


Fig. 607: Measuring Inner Diameter Of Piston Pin Hole Using Caliper Gauge
Courtesy of SUBARU OF AMERICA, INC.

2. Measure the outer diameter of piston pin with a micrometer.

NOTE:

- Measurement should be performed at a temperature of 20°C (68° F).
- Measure the outer diameter of the piston pin at the four locations as shown in the figure, and read the value of most worn location.
- Record the measured value.

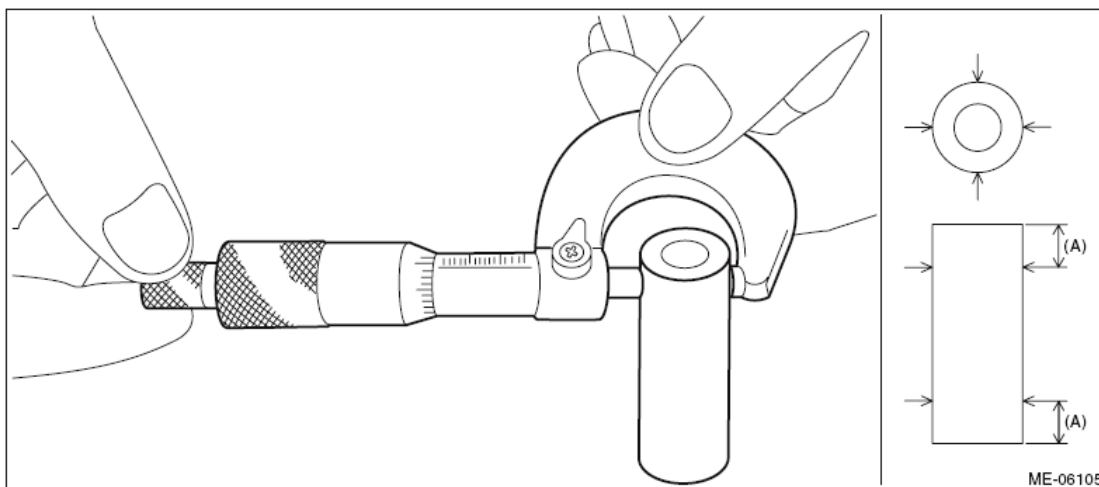

(A) 10 mm (0.394 in)

Fig. 608: Measuring Outer Diameter Of Piston Pin Using Micrometer
Courtesy of SUBARU OF AMERICA, INC.

3. Calculate the clearance between piston and piston pin. If it is not within the standard, replace the piston and piston pin as a set.

Clearance between piston and piston pin:

Standard


0.004 - 0.008 mm (0.0002 - 0.0003 in)

PISTON RING

1. Make sure the piston ring is not broken or damaged.
2. Using a cylindrical guide, insert the piston ring into the cylinder liner so that they are perpendicular to the cylinder wall, and check the piston ring gap using a thickness gauge. If it is not within the standard, replace the piston ring.

NOTE:

- Measurement should be performed at a temperature of 20°C (68°F).
- Use piston ring with same size as piston when replacing piston ring.

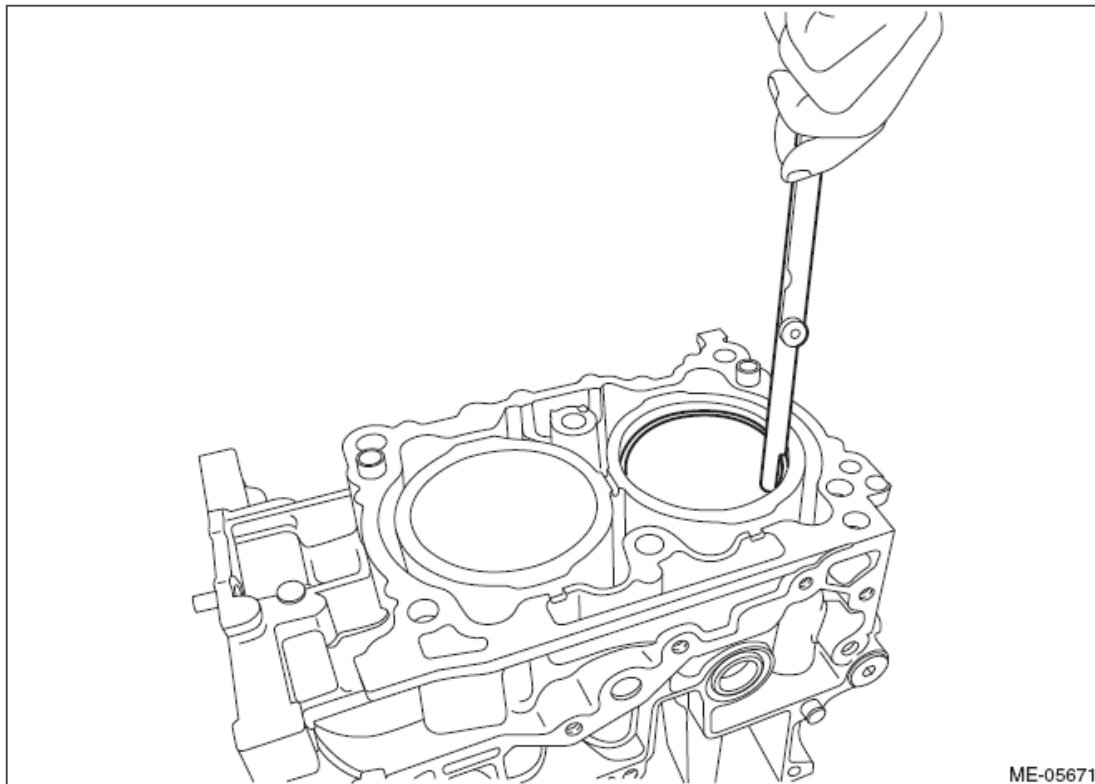Piston ring gap:***Compression ring (top ring)******Standard******0.20 - 0.35 mm (0.0079 - 0.0138 in)******Compression ring (second ring)******Standard******0.40 - 0.50 mm (0.0157 - 0.0197 in)******Oil ring (upper rail and lower rail)******Standard******0.20 - 0.50 mm (0.0079 - 0.0197 in)***

ME-05671

Fig. 609: Checking Piston Ring Gap Using Tool

Courtesy of SUBARU OF AMERICA, INC.

3. Fit the compression ring straight into the piston ring groove, then check the clearance between compression ring and piston with a thickness gauge. If it is not within the standard, replace the compression ring.

NOTE:

- Measurement should be performed at a temperature of 20°C (68°F).
- Before inspecting the clearance, clean the piston ring groove and compression ring.
- Use compression ring with same size as piston when replacing compression ring.

Clearance between compression ring and piston:

Top ring

Standard

0.040 - 0.080 mm (0.0016 - 0.0031 in)

Second ring

Standard

0.030 - 0.070 mm (0.0012 - 0.0028 in)

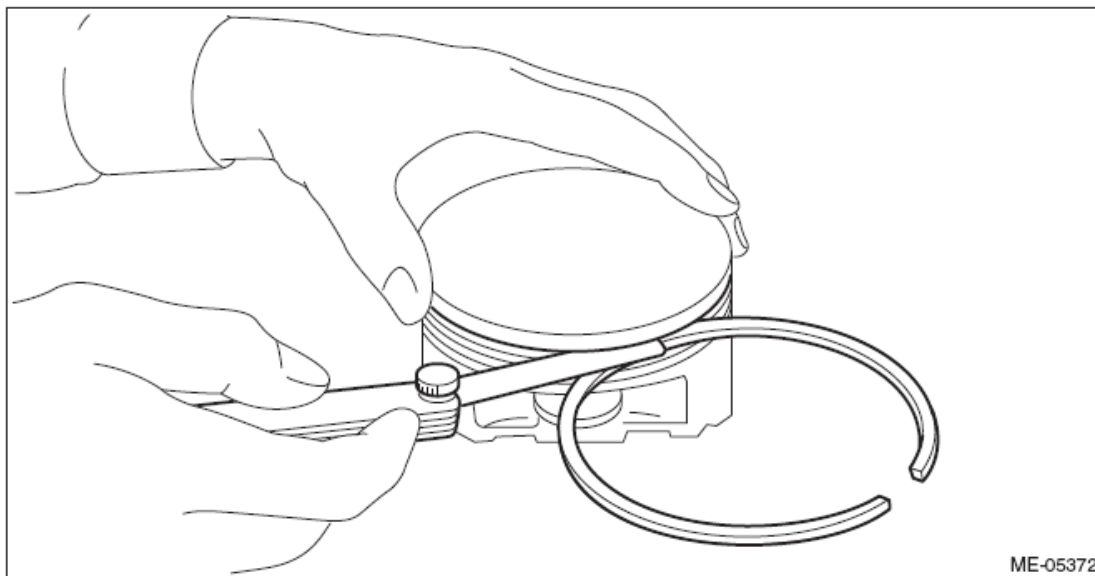


Fig. 610: Checking Clearance Between Compression Ring And Piston Using Thickness Gauge
Courtesy of SUBARU OF AMERICA, INC.

CONNECTING ROD AND CONNECTING ROD BEARING


1. Check for bend or twist using a connecting rod aligner. If it exceeds the limit, replace the connecting rod.

NOTE: Measurement should be performed at a temperature of 20°C (68°F).

Bend or twist per 100 mm (3.94 in) in length:

Limit

0.10 mm (0.0039 in)

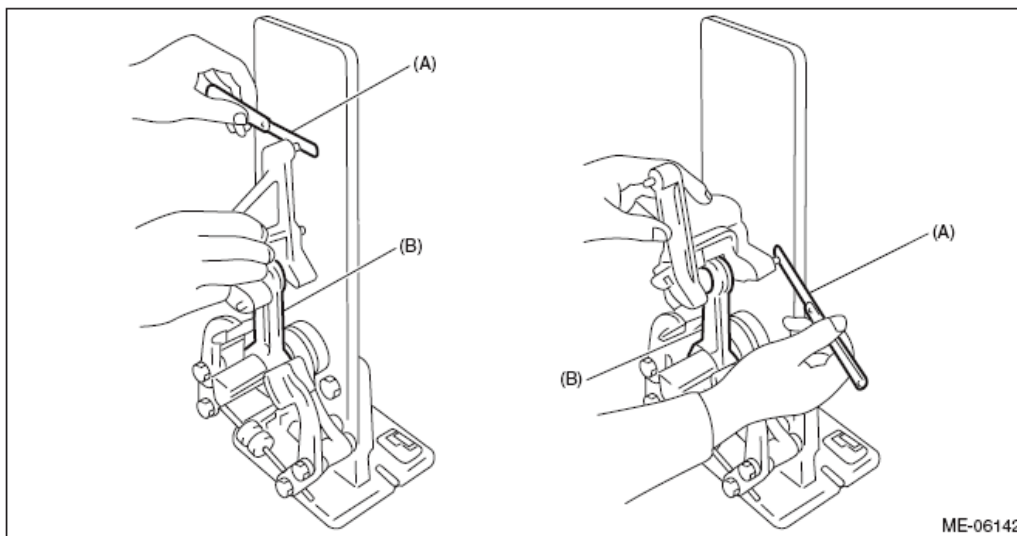

(A) Thickness gauge

(B) Connecting rod

Fig. 611: Checking Bend/Twist Using Connecting Rod Aligner
Courtesy of SUBARU OF AMERICA, INC.

2. Check that the large or small end thrust surface of each connecting rod is not damaged.
3. Check each connecting rod bearing for scar, peeling, seizure, melting or wear, etc.
4. Check the thrust clearance of each connecting rod using a thickness gauge.

NOTE: Measurement should be performed at a temperature of 20°C (68°F).

1. Clean the #1 connecting rod bearing and the #1 pin of crankshaft, and apply engine oil to the #1 pin of crankshaft.
2. Set the #1 connecting rod bearing to the #1 connecting rod and #1 connecting rod cap.
3. Set the #1 connecting rod, #1 connecting rod cap and #1 connecting rod cap bolt to the #1 pin of crankshaft.

NOTE:

- Each connecting rod has its own mating cap. Make sure that

they are assembled correctly by checking their matching symbol.

- Use a new connecting rod cap bolt.
 - Apply a coat of engine oil to the #1 connecting rod cap bolt thread.
4. Using ST, tighten the #1 connecting rod cap bolts to 10 N.m (1.0 kgf-m, 7.4 ft-lb) in numerical order as shown in the figure, then retighten the bolts to 22 N.m (2.2 kgf-m, 16.2 ft-lb) in numerical order as shown in the figure.

CAUTION:

- Make sure to hold the crankshaft securely during work.
- When holding the crankshaft, be careful not to damage the crankshaft.

ST 18270AA020 SOCKET

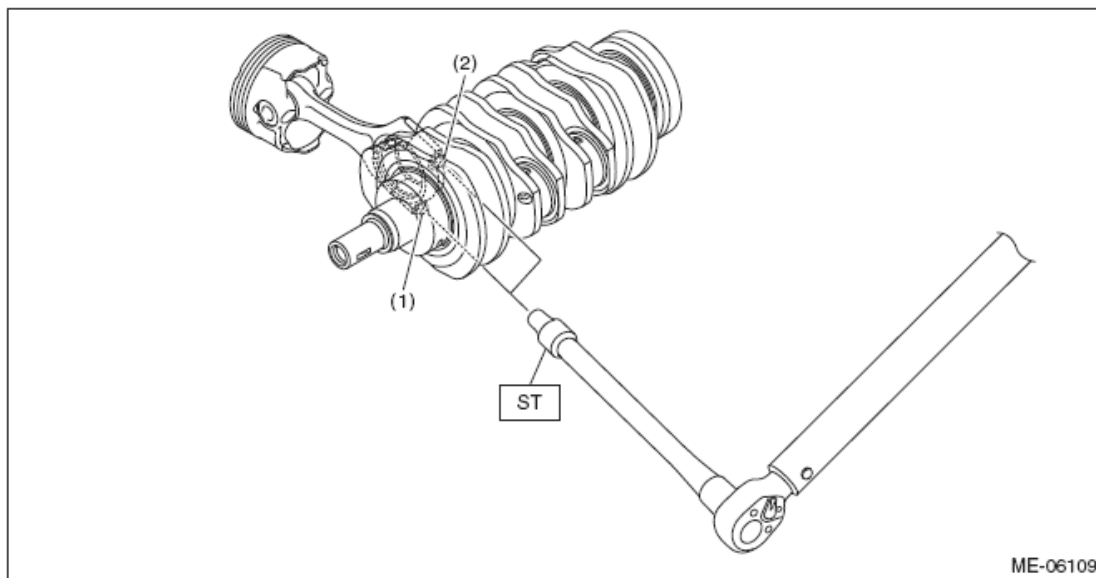


Fig. 612: Tightening Connecting Rod Cap Mounting Bolt Using Suitable Tool
Courtesy of SUBARU OF AMERICA, INC.

5. Using ST and angle gauge, tighten the #1 connecting rod cap bolts with specified angle in numerical order as shown in the figure.

CAUTION:

- Make sure to hold the crankshaft securely during work.
- When holding the crankshaft, be careful not to damage the crankshaft.

ST 18270AA020 SOCKET

Tightening angle:

$$137^{\circ} +3^{\circ} -2^{\circ}$$

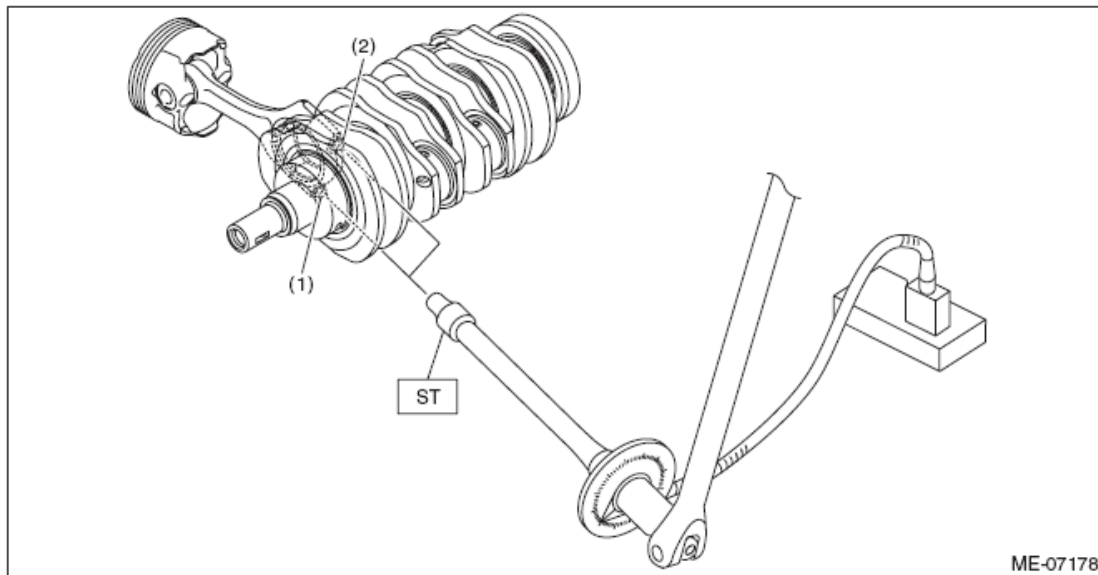


Fig. 613: Tightening Connecting Rod Cap Mounting Bolt Using Angle Gauge
Courtesy of SUBARU OF AMERICA, INC.

6. In the same manner, install the #2, #3 and #4 connecting rods.
7. Check the thrust clearance of each connecting rod using a thickness gauge. If it is not within the standard, replace the connecting rod.

NOTE: **Measure the thrust clearance of each connecting rod at several points, and replace the connecting rod if there is uneven wear.**

Connecting rod thrust clearance:***Standard***

0.070 - 0.330 mm (0.0028 - 0.0130 in)

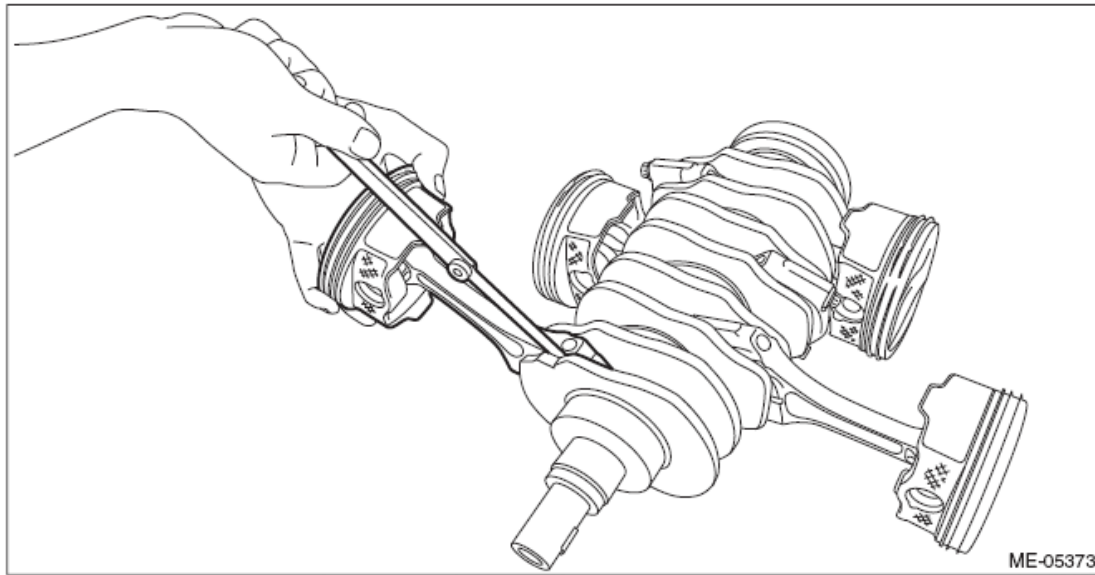


Fig. 614: Checking Thrust Clearance Of Connecting Rod Using Thickness Gauge
Courtesy of SUBARU OF AMERICA, INC.

5. Check the oil clearance on each connecting rod bearing using plastigauge.

NOTE: Measurement should be performed at a temperature of 20°C (68°F).

1. Clean the #1 connecting rod bearing and the #1 pin of crankshaft.
2. Set the #1 connecting rod bearing to the #1 connecting rod and #1 connecting rod cap.
3. Place a plastigauge across the #1 pin of crankshaft, and set the #1 connecting rod, #1 connecting rod cap and #1 connecting rod cap bolt to the #1 pin of crankshaft.

NOTE:

- Each connecting rod has its own mating cap. Make sure that they are assembled correctly by checking their matching symbol.
 - Use a new connecting rod cap bolt.
 - Apply a coat of engine oil to the #1 connecting rod cap bolt thread.
4. Using ST, tighten the #1 connecting rod cap bolts to 10 N.m (1.0 kgf-m, 7.4 ft-lb) in numerical order as shown in the figure, then retighten the bolts to 22 N.m (2.2 kgf-m, 16.2 ft-lb) in numerical order as shown in the figure.

CAUTION:

- Make sure to hold the crankshaft securely during work.
- When holding the crankshaft, be careful not to damage the crankshaft.
- During tightening, be careful not to move the #1

connecting rod and the #1 connecting rod cap.

ST 18270AA020 SOCKET

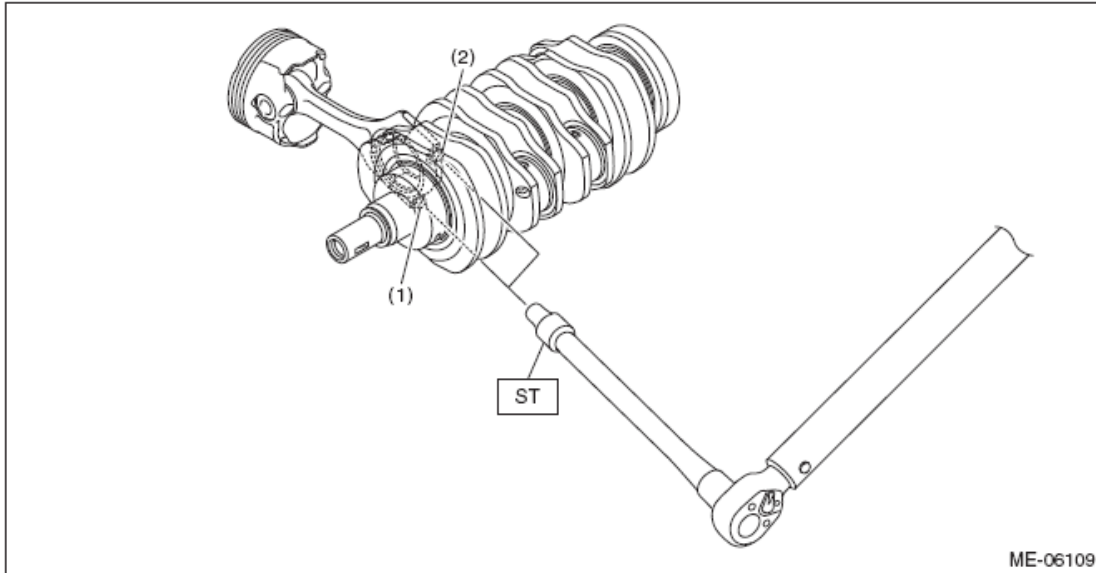


Fig. 615: Removing Connecting Rod Cap Using Suitable Tool
Courtesy of SUBARU OF AMERICA, INC.

5. Using ST and angle gauge, tighten the #1 connecting rod cap bolts with specified angle in numerical order as shown in the figure.

CAUTION:

- Make sure to hold the crankshaft securely during work.
- When holding the crankshaft, be careful not to damage the crankshaft.
- During tightening, be careful not to move the #1 connecting rod and the #1 connecting rod cap.

ST 18270AA020 SOCKET

Tightening angle:

$137^{\circ} \pm 3^{\circ} \text{ } ^{\circ} - 2^{\circ}$

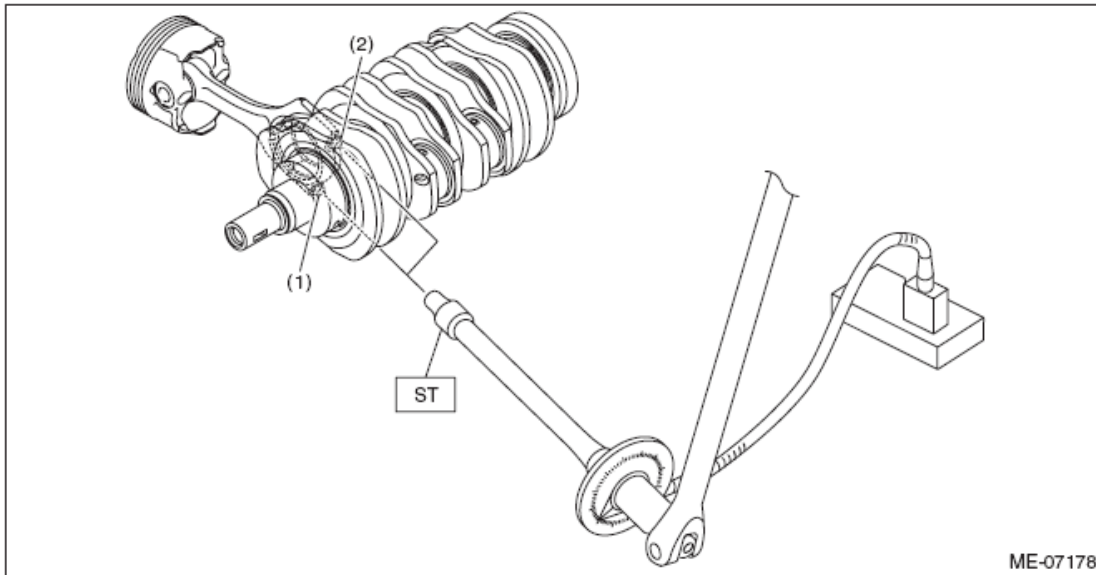


Fig. 616: Tightening Connecting Rod Cap Mounting Bolt Using Angle Gauge
Courtesy of SUBARU OF AMERICA, INC.

6. Using ST, loosen the #1 connecting rod cap bolt, and remove the #1 connecting rod cap bolt and #1 connecting rod cap.

CAUTION:

- Make sure to hold the crankshaft securely during work.
- When holding the crankshaft, be careful not to damage the crankshaft.
- During removal, be careful not to move the #1 connecting rod and the #1 connecting rod cap.

ST 18270AA020 SOCKET

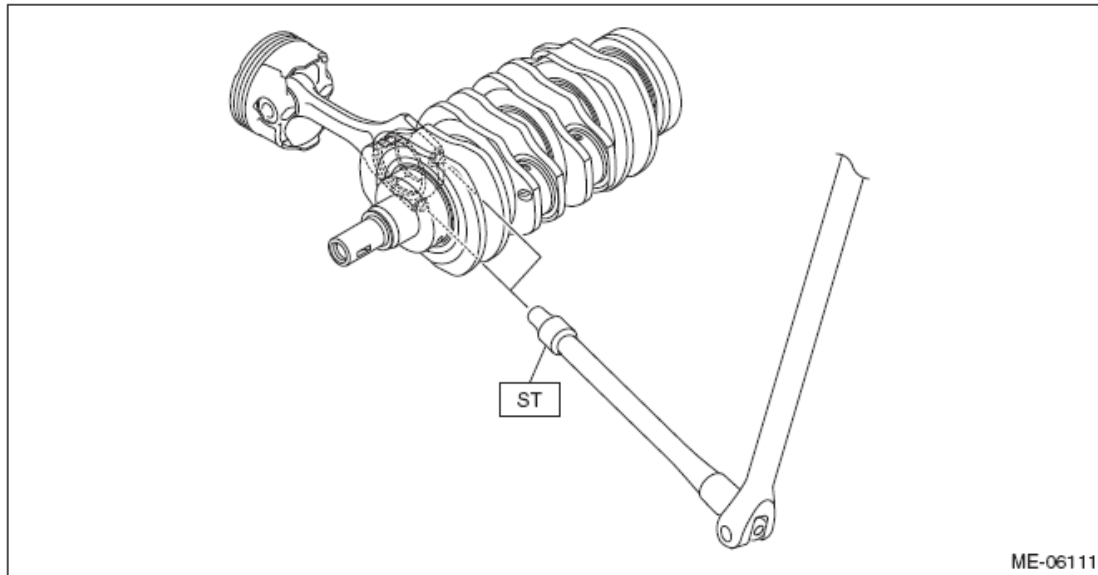


Fig. 617: Removing Connecting Rod Cap Using Suitable Tool
 Courtesy of SUBARU OF AMERICA, INC.

7. Determine oil clearance of the #1 connecting rod bearing by matching the widest point of the plastigauge on #1 pin of crankshaft against scale printed on a package of the plastigauge. If it is not within the standard, replace the #1 connecting rod bearing.

NOTE: Measure the outer diameter of crankshaft pin using micrometer, and select the suitable size connecting rod bearing when replacing the connecting rod bearing.

Unit: mm (in)		
Bearing	Connecting rod bearing thickness (at center)	Crankshaft pin outer diameter
	Standard	Standard
Standard size	1.492 - 1.508 (0.0587 - 0.0594)	47.976 - 48.000 (1.8888 - 1.8898)
0.03 (0.0012) Undersize	1.511 - 1.515 (0.0595 - 0.0596)	47.946 - 47.970 (1.8876 - 1.8886)
0.05 (0.0020) Undersize	1.521 - 1.525 (0.0599 - 0.0600)	47.926 - 47.950 (1.8868 - 1.8878)
0.25 (0.0098) Undersize	1.621 - 1.625 (0.0638 - 0.0640)	47.726 - 47.750 (1.8790 - 1.8799)

Connecting rod bearing oil clearance:

Standard

0.017 - 0.047 mm (0.0007 - 0.0019 in)

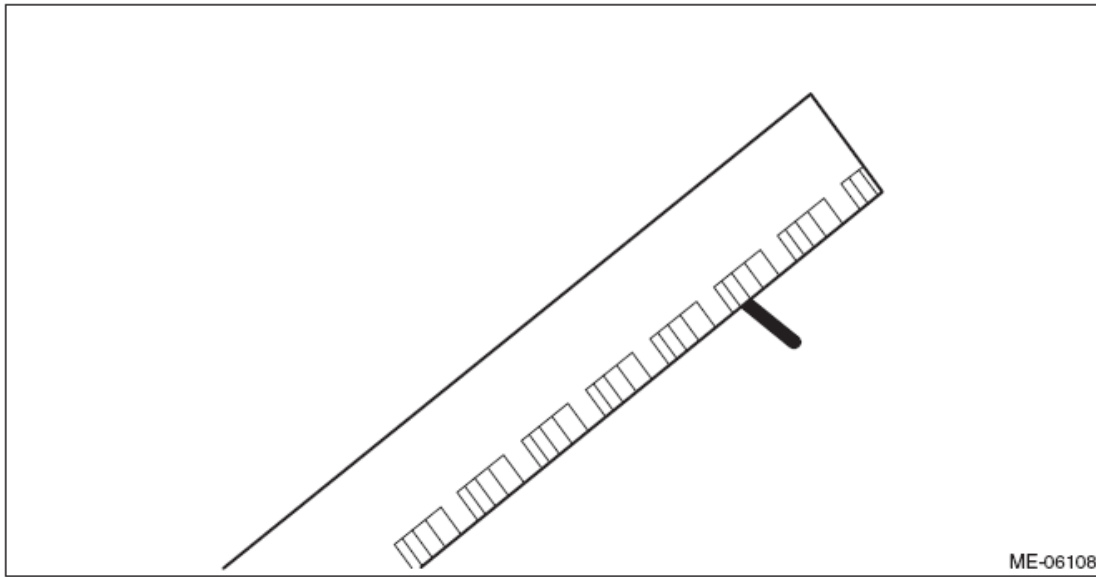


Fig. 618: Identifying Connecting Rod Bearing Oil Clearance Scale
Courtesy of SUBARU OF AMERICA, INC.

8. Completely remove the plastigauge.
9. In the same manner, check oil clearance of the #2, #3 and #4 connecting rod bearings.

PISTON PIN & CONNECTING ROD BUSHING

1. Check that the connecting rod bushing is not damaged.
2. Check the clearance between piston pin and connecting rod bushing. Check the clearance between piston pin and connecting rod bushing by measuring the outer diameter of piston pin and the inner diameter of connecting rod bushing respectively.
 1. Measure the outer diameter of piston pin with a micrometer.

NOTE:

- **Measurement should be performed at a temperature of 20°C (68° F).**
- **Measure the outer diameter of the piston pin at the two locations as shown in the figure, and read the value of most worn location.**
- **Record the measured value.**

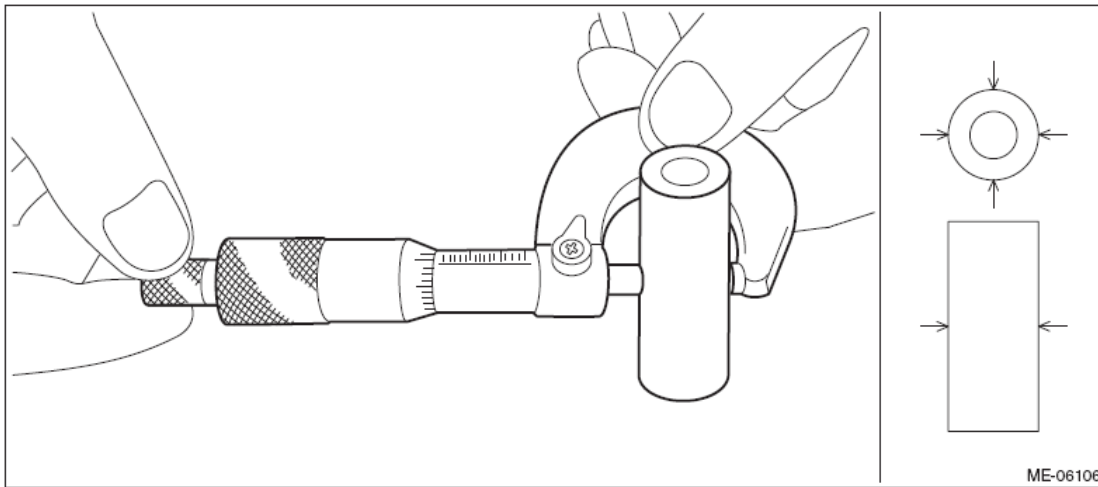


Fig. 619: Measuring Outer Diameter Of Piston Pin Using Micrometer
 Courtesy of SUBARU OF AMERICA, INC.

2. Using a caliper gauge, measure the inner diameter of connecting rod bushing.

NOTE:

- Measurement should be performed at a temperature of 20°C (68° F).
- Measure the inner diameter of the connecting rod bushing at the two locations as shown in the figure, and read the value of most worn location.
- Record the measured value.

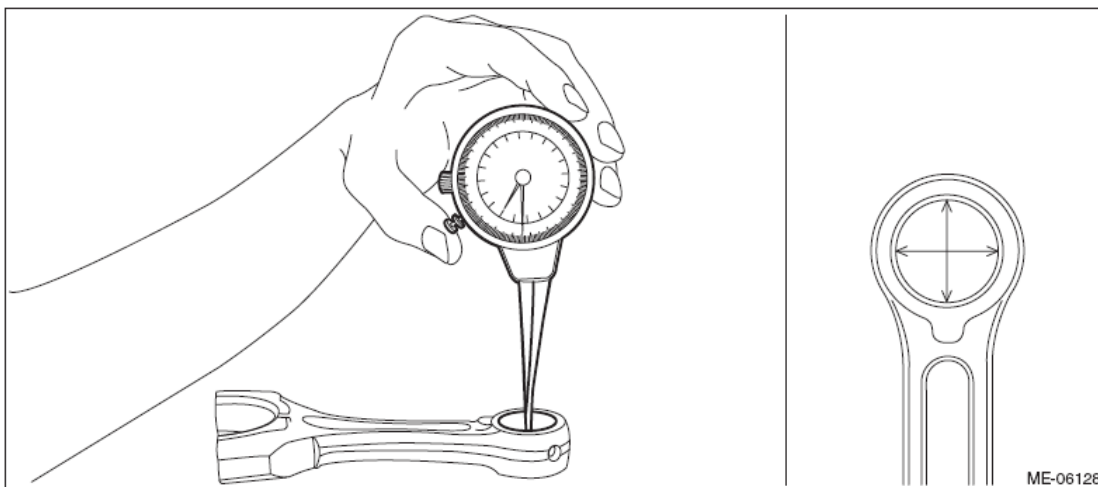


Fig. 620: Measuring Inner Diameter Of Connecting Rod Bushing Using Caliper Gauge
 Courtesy of SUBARU OF AMERICA, INC.

3. Calculate the clearance between piston pin and connecting rod bushing.

Clearance between piston pin and connecting rod bushing:

Standard**0.004 - 0.026 mm (0.0002 - 0.0010 in)**

3. If the clearance between piston pin and connecting rod bushing is not within the standard, replace the connecting rod bushing and piston pin as a set. For replacement procedure of connecting rod bushing, refer to the following.
 1. Using the ST and a press, pull out the connecting rod bushing from the small end of the connecting rod.

NOTE: **The direction of ST for pulling out and for press fitting is different. Therefore, attention must be paid to the direction of usage for ST.**

ST 18350AA000 CONNECTING ROD BUSHING REMOVER AND INSTALLER


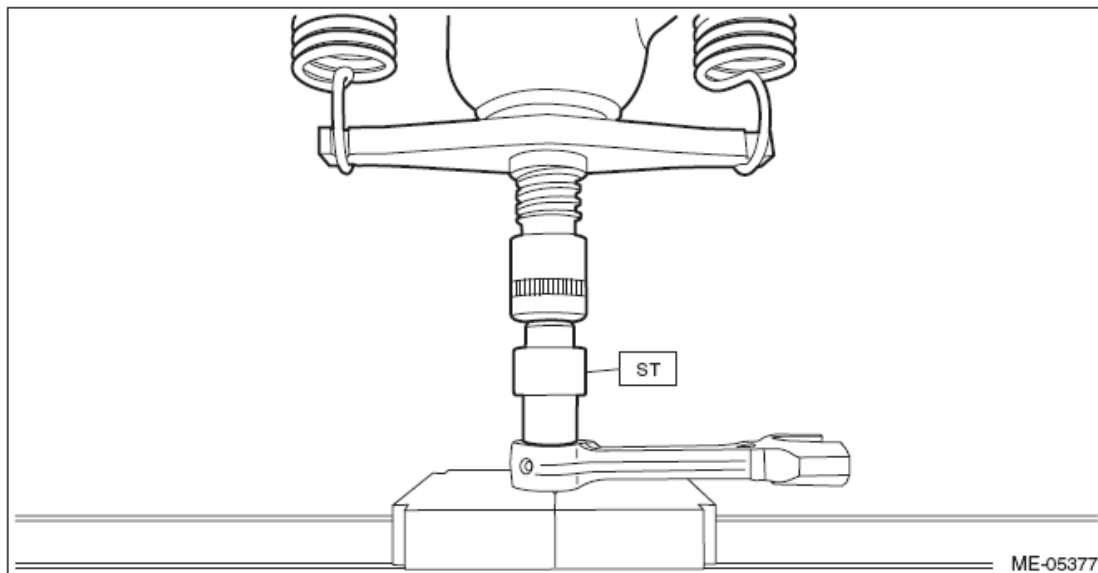


Fig. 621: Pulling Connecting Rod Bushing Using Suitable Tool
Courtesy of SUBARU OF AMERICA, INC.

2. Press the connecting rod bushing with ST and the press, after applying engine oil on the periphery of connecting rod bushing.

NOTE: • **Clinch area of the connecting rod bushing is as shown in the figure.**

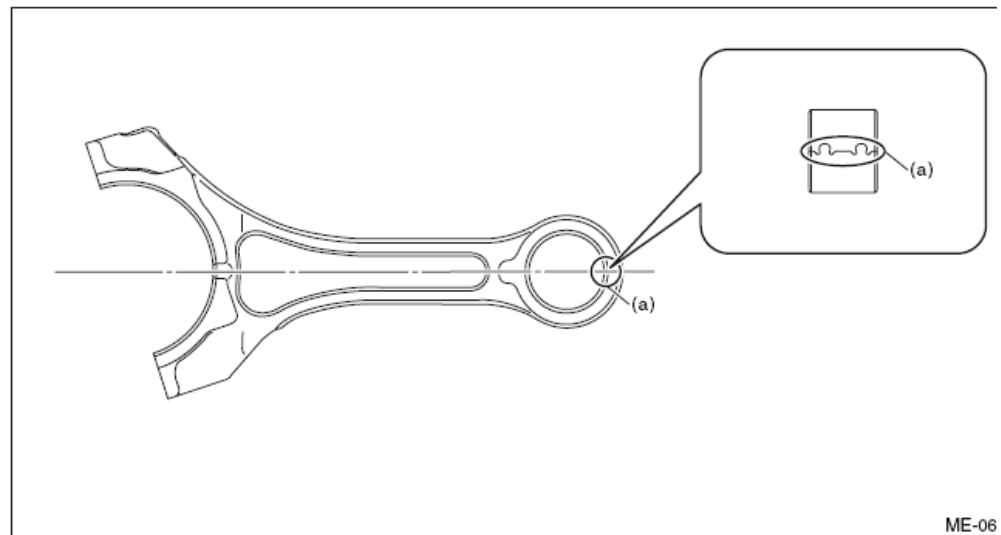


ME-06

(a) Clinch area of connecting rod bushing

Fig. 622: Identifying Connecting Rod Bushing Clinch Area
Courtesy of SUBARU OF AMERICA, INC.

- The direction of ST for pulling out and for press fitting is different. Therefore, attention must be paid to the direction of usage for ST.

ST 18350AA000 CONNECTING ROD BUSHING REMOVER AND INSTALLER

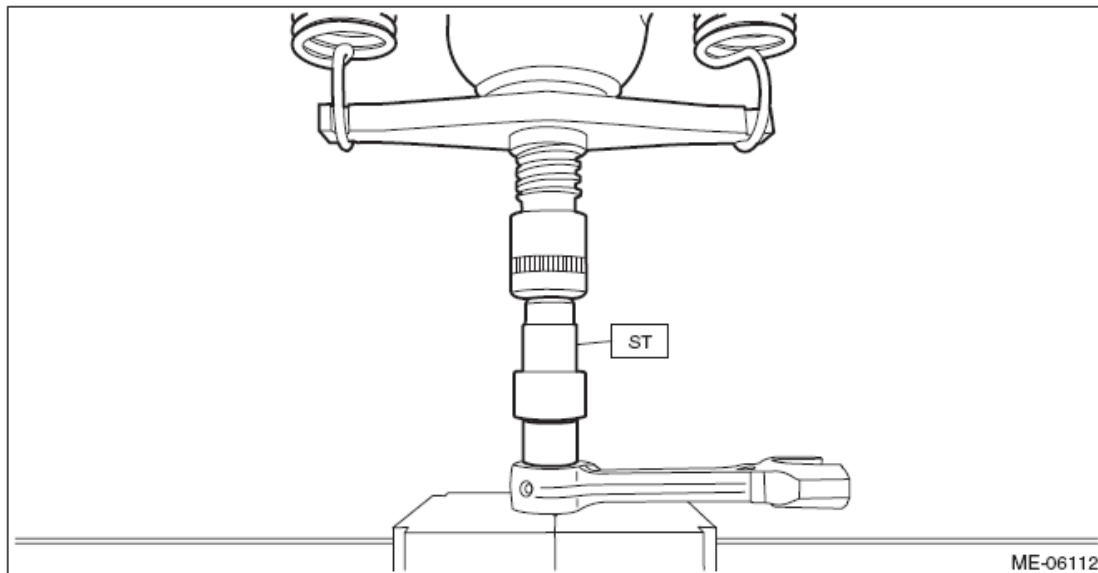

ME-06112

Fig. 623: Removing Connecting Rod Bushing Using Tool
Courtesy of SUBARU OF AMERICA, INC.

3. Make two 3 mm (0.12 in) holes in the pressed connecting rod bushing by aligning with the pre-

manufactured holes provided on the small end of the connecting rod.

4. Using a reamer, ream the inside surface of the connecting rod bushing. Insert the reamer in the connecting rod bushing, and turn slowly clockwise while pushing lightly. Bring the reamer back while rotating it clockwise.

NOTE:

- Use a reamer with a diameter of $\varnothing 22$.
- Apply engine oil to the reamer.
- If the inner surface of valve guide is damaged, the edge of reamer should be slightly ground with oil stone.
- If the inner surface of connecting rod bushing becomes lustrous and the reamer does not chip, use a new reamer or remedy the reamer.

5. After completion of reaming, clean the connecting rod bushing to remove chips.

CRANKSHAFT AND CRANKSHAFT BEARING

1. Clean the crankshaft completely, and check it for cracks using liquid penetrant tester.
2. Using a dial gauge, check the crankshaft bend. If it exceeds the limit, grind to correct the crankshaft journal or replace the crankshaft.

NOTE:

- Measurement should be performed at a temperature of 20°C (68°F).
- If a suitable V-block is not available, using just the #1 and #5 crankshaft bearings on cylinder block, position the crankshaft on cylinder block. Then, measure the crankshaft bend using a dial gauge.
- When grinding to correct the crankshaft journal, refer to step 3.

Crankshaft bend:

Limit

0.035 mm (0.0014 in)

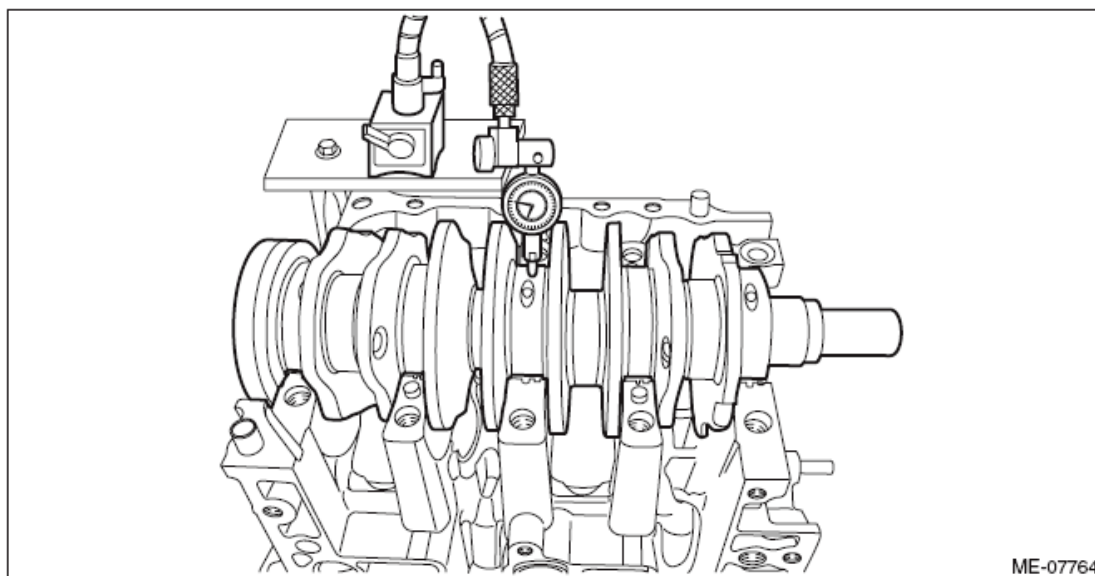


Fig. 624: Measuring Crankshaft Bend Using Tool
 Courtesy of SUBARU OF AMERICA, INC.

3. Using a micrometer, check the outer diameter of crankshaft pin, outer diameter of journal, cylindricity, and out-of-roundness. If it is not within the standard, replace the connecting rod bearing or crankshaft bearing, and grind to correct the crankshaft pin or journal or replace the crankshaft as required.

NOTE:

- Measurement should be performed at a temperature of 20°C (68°F).
- Select the suitable size connecting rod bearing or crankshaft bearing when replacing the connecting rod bearing or crankshaft bearing.
- When grinding to correct the crankshaft pin or journal, finish them to the suitable outer diameter as shown in the table below according to the undersize bearing to be used.

Unit: mm (in)						
Bearing	Connecting rod bearing thickness (at center)	Crankshaft pin outer diameter	Crankshaft bearing thickness (at center)		Crankshaft journal outer diameter	
			#1, #2, #3, #4	#5	#1, #2, #3, #4	#5
	Standard	Standard	Standard	Standard	Standard	Standard
Standard size	1.492 - 1.508 (0.0587 - 0.0594)	47.976 - 48.000 (1.8888 - 1.8898)	2.495 - 2.513 (0.0982 - 0.0989)	2.493 - 2.511 (0.0981 - 0.0989)	67.985 - 68.009 (2.6766 - 2.6775)	67.985 - 68.009 (2.6766 - 2.6775)
0.03 (0.0012) Undersize	1.511 - 1.515 (0.0595 - 0.0596)	47.946 - 47.970 (1.8876 - 1.8886)	2.519 - 2.522 (0.0992 - 0.0993)	2.517 - 2.520 (0.0991 - 0.0992)	67.955 - 67.979 (2.6754 - 2.6763)	67.955 - 67.979 (2.6754 - 2.6763)

2014 Subaru Impreza

2014 ENGINE Mechanical - Impreza & XV Crosstrek

0.05 (0.0020) Undersize	1.521 - 1.525 (0.0599 - 0.0600)	47.926 - 47.950 (1.8868 - 1.8878)	2.529 - 2.532 (0.0996 - 0.0997)	2.527 - 2.530 (0.0995 - 0.0996)	67.935 - 67.959 (2.6746 - 2.6755)	67.935 - 67.959 (2.6746 - 2.6755)
0.25 (0.0098) Undersize	1.621 - 1.625 (0.0638 - 0.0640)	47.726 - 47.750 (1.8790 - 1.8799)	2.629 - 2.632 (0.1035 - 0.1036)	2.627 - 2.630 (0.1034 - 0.1035)	67.735 - 67.759 (2.6667 - 2.6677)	67.735 - 67.759 (2.6667 - 2.6677)

Crankshaft pin:***Cylindricity******Limit******0.006 mm (0.0002 in)******Out-of-roundness******Limit******0.005 mm (0.0002 in)******Grinding limit (dia.)******To 47.726 mm (1.8790 in)******Crankshaft journal:******Cylindricity******Limit******0.006 mm (0.0002 in)******Out-of-roundness******Limit******0.005 mm (0.0002 in)******Grinding limit (dia.)******To 67.735 mm (2.6667 in)***

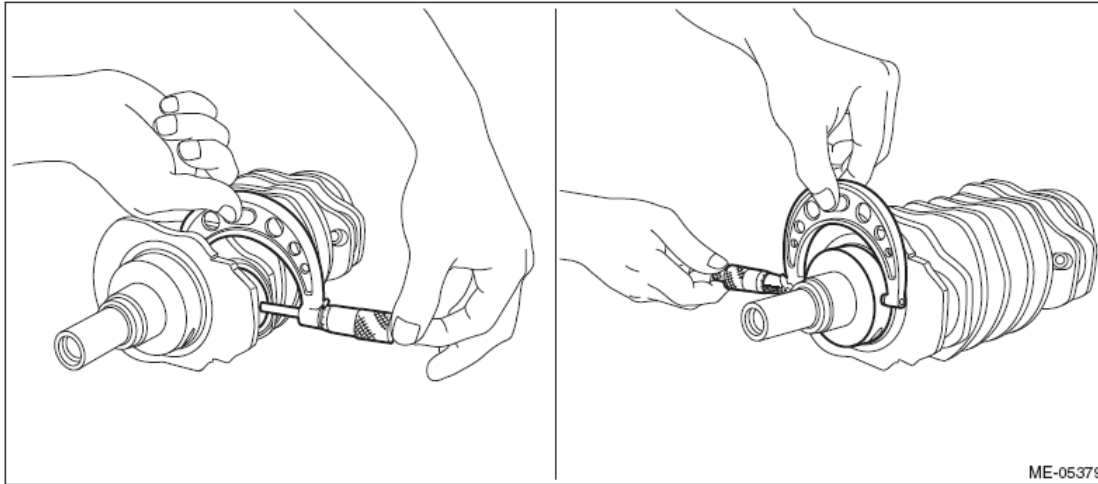


Fig. 625: Checking Outer Diameter Of Crankshaft Pin Using Micrometer
Courtesy of SUBARU OF AMERICA, INC.

4. Inspect the crankshaft bearing for scar, peeling, seizure, melting or wear, etc.
5. Use a thickness gauge to check the thrust clearance of crankshaft at thrust of #5 crankshaft bearing. If it is not within the standard, replace the #5 crankshaft bearing.

NOTE:

- Measurement should be performed at a temperature of 20°C (68°F).
- Set all the crankshaft bearings onto the cylinder block, then mount the crankshaft on the cylinder block, and use a thickness gauge to measure the thrust clearance of crankshaft.
- Select the #5 crankshaft bearing of suitable size by referring to step 3) when replacing #5 crankshaft bearing.

Crankshaft thrust clearance:

Standard

0.130 - 0.308 mm (0.00512 - 0.01213 in)

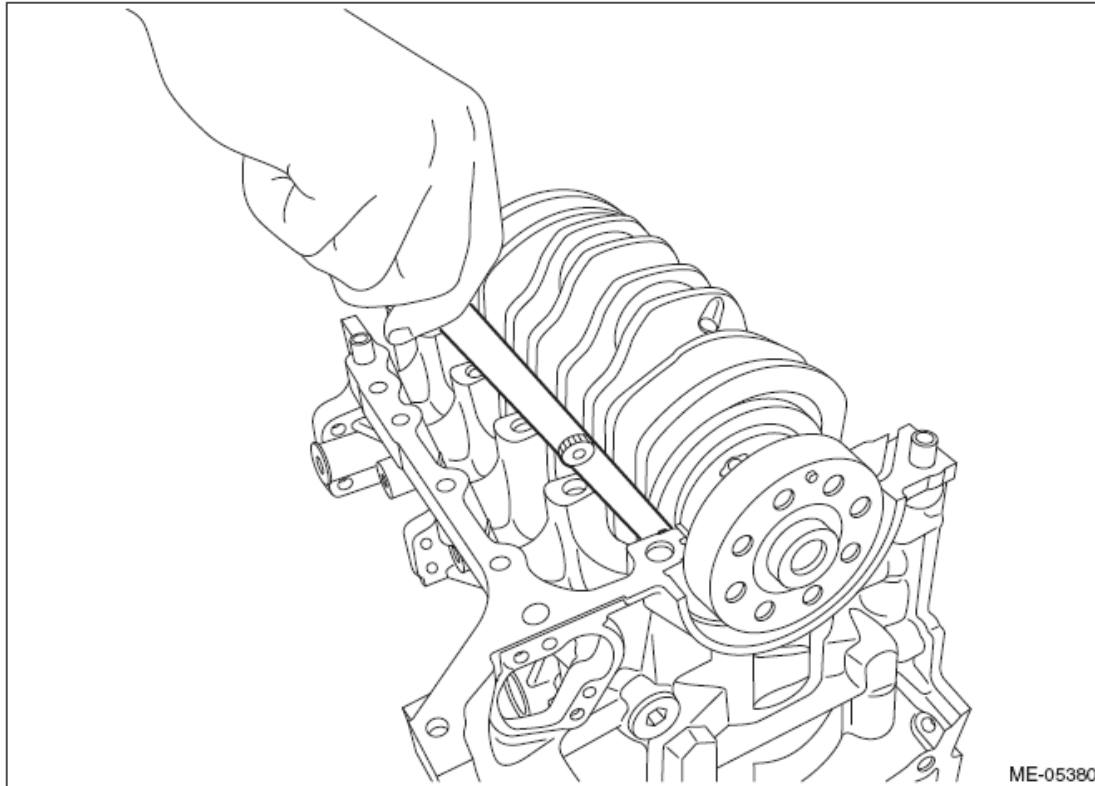


Fig. 626: Checking Crankshaft Thrust Clearance Using Tool
Courtesy of SUBARU OF AMERICA, INC.

6. Check the oil clearance on each crankshaft bearing using plastigauge.

NOTE: **Measurement should be performed at a temperature of 20°C (68°F).**

1. Remove the liquid gasket from cylinder block.
2. Clean each crankshaft bearing and crankshaft journal.
3. Set each crankshaft bearing to the cylinder block.

CAUTION:

- **Place a wood board wrapped with a waste cloth to prevent the knock pin damage and to stabilize the cylinder block before work.**
- **Be careful not to scratch the mating surface of cylinder block during work.**

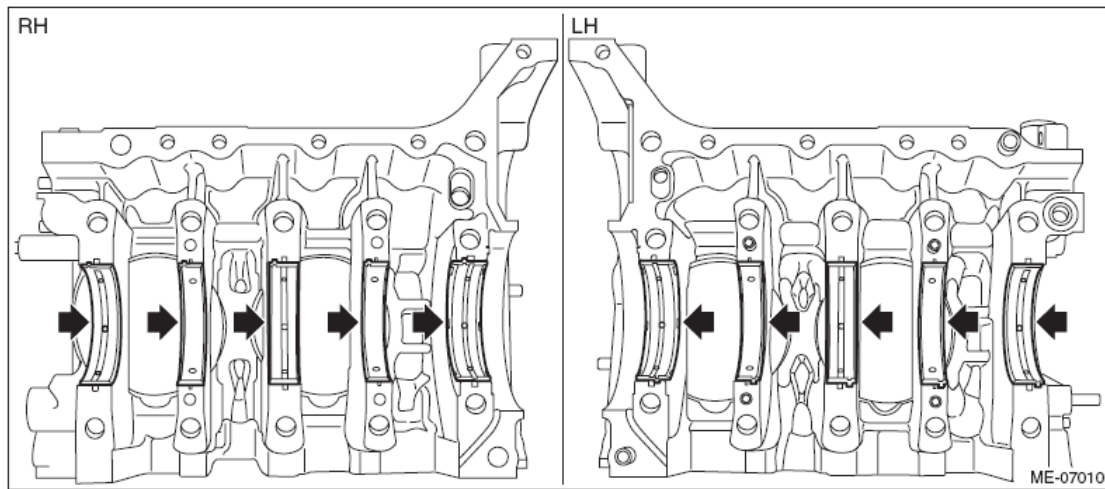


Fig. 627: Locating Crankshaft Bearings
Courtesy of SUBARU OF AMERICA, INC.

4. Set the crankshaft to the cylinder block LH.

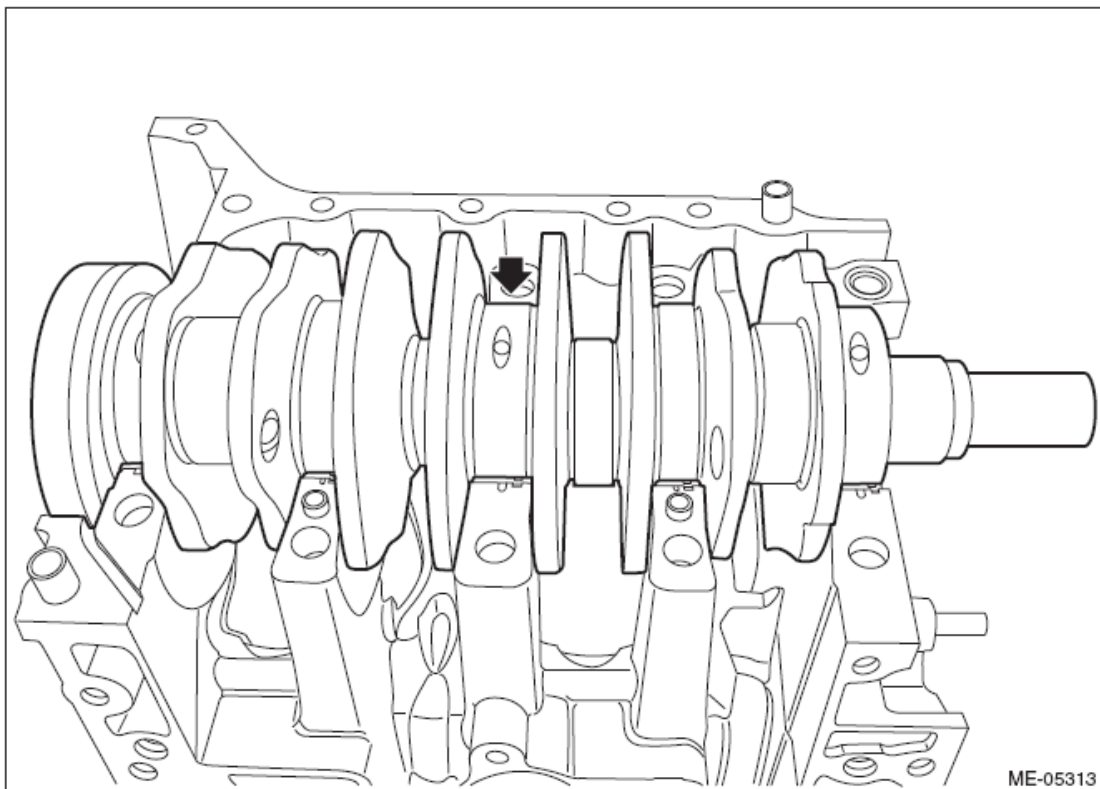


Fig. 628: Locating Cylinder Block LH Crankshaft
Courtesy of SUBARU OF AMERICA, INC.

5. Place a plastigauge across the crankshaft journals and set the cylinder block RH to the cylinder block LH.

6. Apply a coat of engine oil to the washers and cylinder block mounting bolt threads.

NOTE: To prevent mixture of engine oil into the water jacket, do not apply a large amount.

7. Install the cylinder head bolt at the locations shown in the figure.

NOTE: This procedure is required to tighten the cylinder block mounting bolts with specified angle using ST.

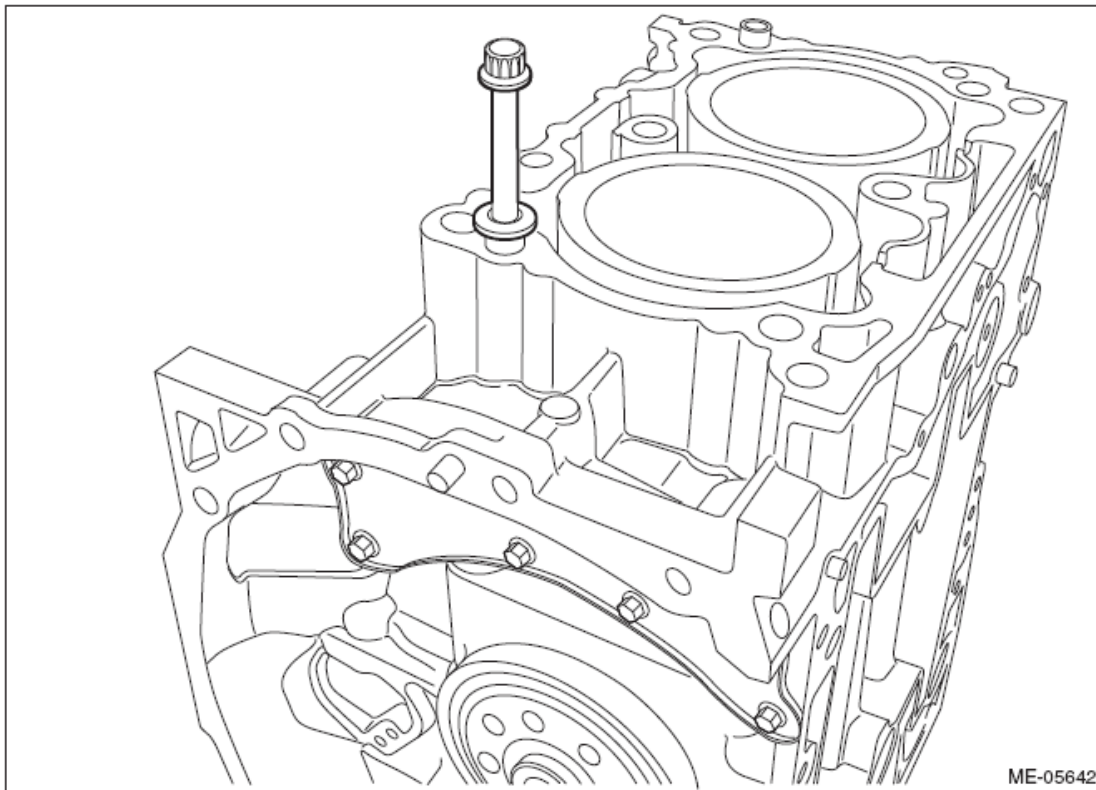


Fig. 629: Identifying Cylinder Block Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

8. Tighten all mounting bolts with a torque of 35 N.m (3.6 kgf-m, 25.8 ft-lb) in numerical order as shown in the figure.

CAUTION: When tightening the mounting bolts with specified torque, hold the cylinder block LH while not holding the cylinder block RH to ensure the joint accuracy of the cylinder block.

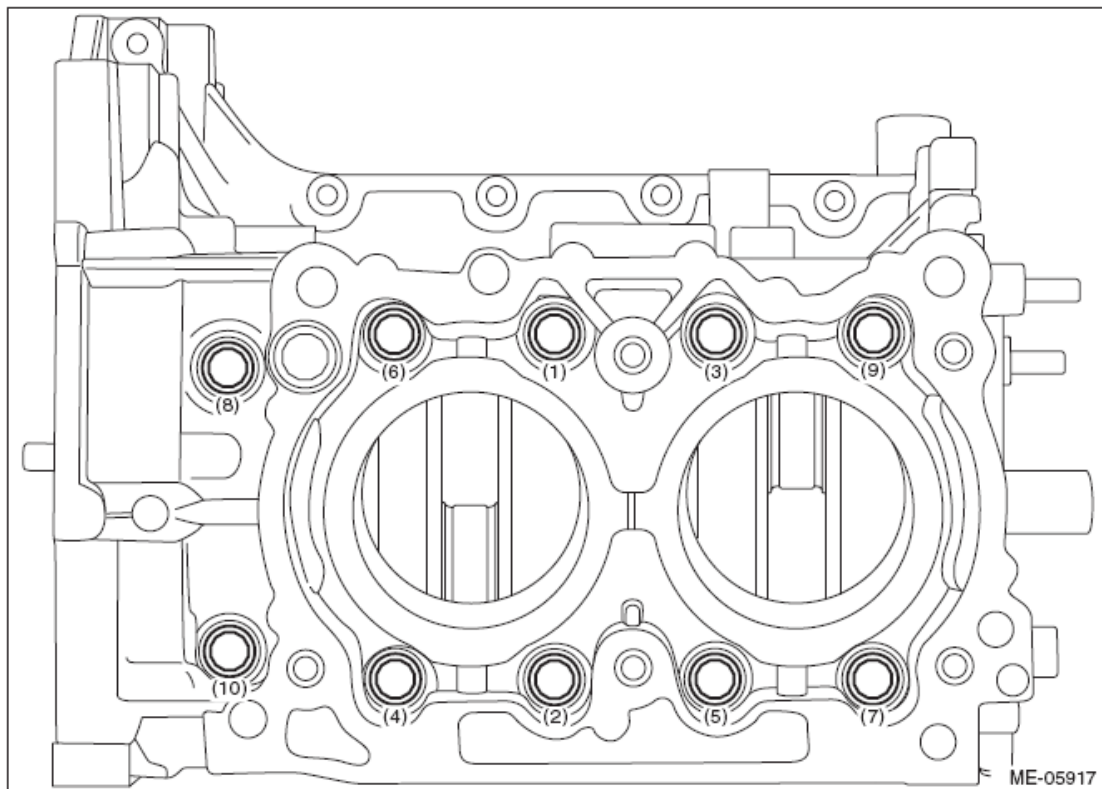


Fig. 630: Identifying Cylinder Block Mounting Bolts Tightening Sequence
Courtesy of SUBARU OF AMERICA, INC.

9. Loosen all mounting bolts by 180° in numerical order as shown in the figure.

CAUTION: When loosening the mounting bolts, hold the cylinder block LH while not holding the cylinder block RH to ensure the joint accuracy of the cylinder block.

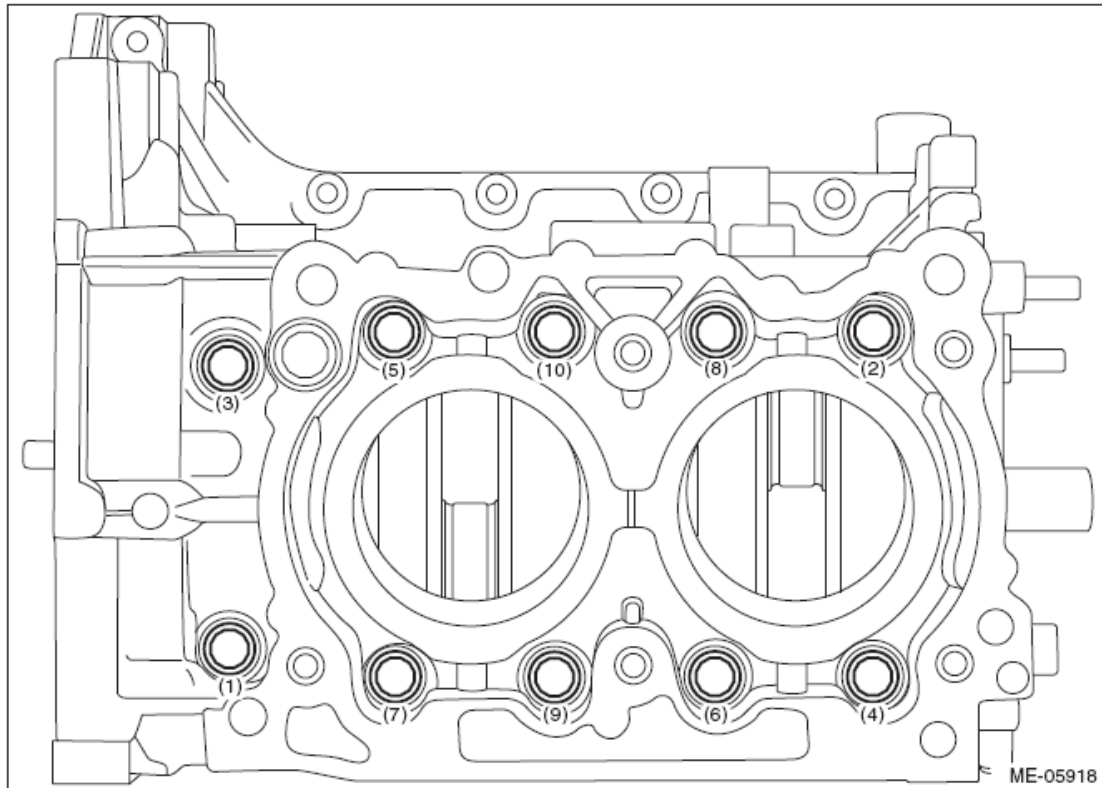


Fig. 631: Identifying Cylinder Block Mounting Bolts Loosening Sequence
Courtesy of SUBARU OF AMERICA, INC.

10. Tighten all mounting bolts with a torque of 35 N.m (3.6 kgf-m, 25.8 ft-lb) in numerical order as shown in the figure.

CAUTION: When tightening the mounting bolts with specified torque, hold the cylinder block LH while not holding the cylinder block RH to ensure the joint accuracy of the cylinder block.

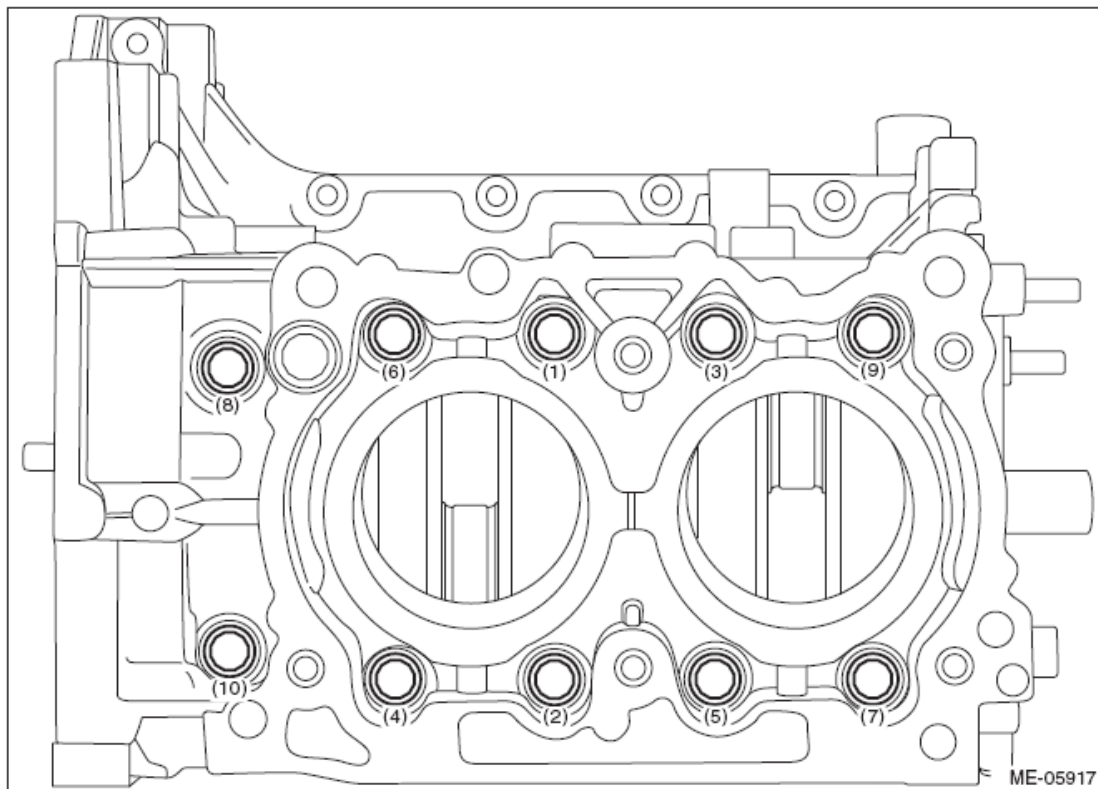


Fig. 632: Identifying Cylinder Block Mounting Bolts Tightening Sequence
Courtesy of SUBARU OF AMERICA, INC.

11. Loosen the mounting bolts (4 places) by 180° in numerical order as shown in the figure.

CAUTION: When loosening the mounting bolts, hold the cylinder block LH while not holding the cylinder block RH to ensure the joint accuracy of the cylinder block.

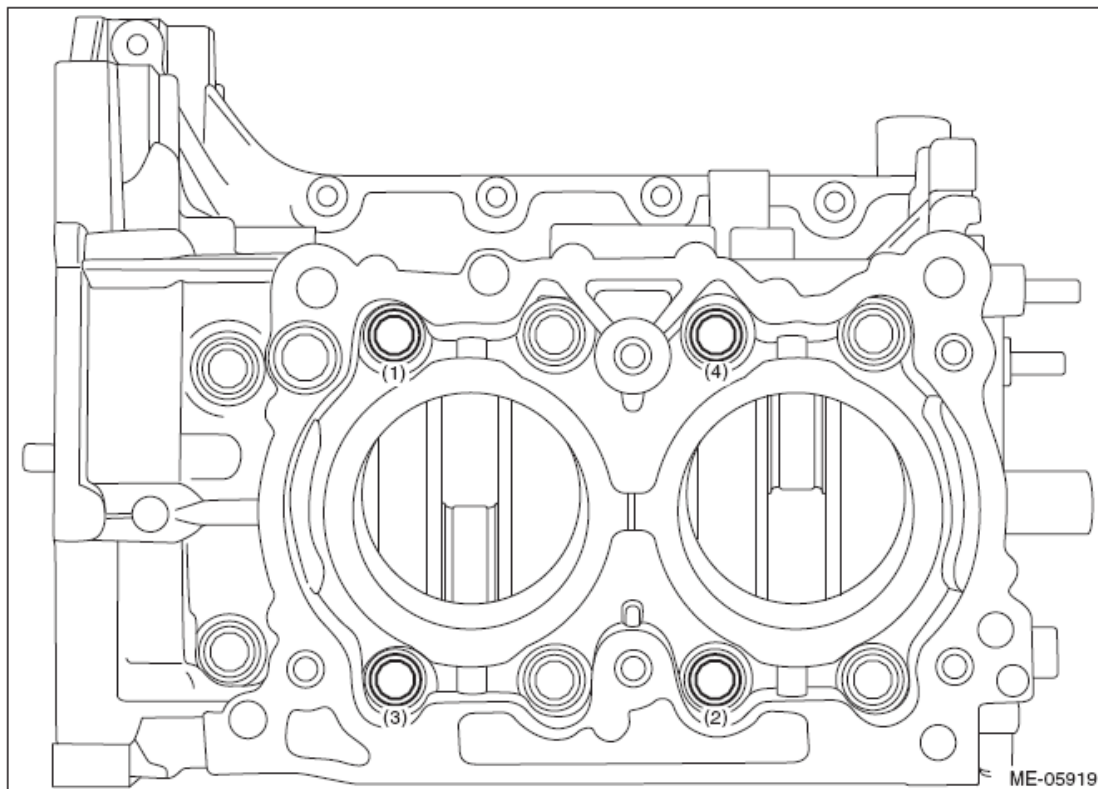


Fig. 633: Identifying Cylinder Block Mounting Bolts Loosening Sequence
Courtesy of SUBARU OF AMERICA, INC.

12. Tighten the mounting bolts (4 places) with a torque of 17 N.m (1.7 kgf-m, 12.5 ft-lb) in numerical order as shown in the figure.

CAUTION: When tightening the mounting bolts with specified torque, hold the cylinder block LH while not holding the cylinder block RH to ensure the joint accuracy of the cylinder block.

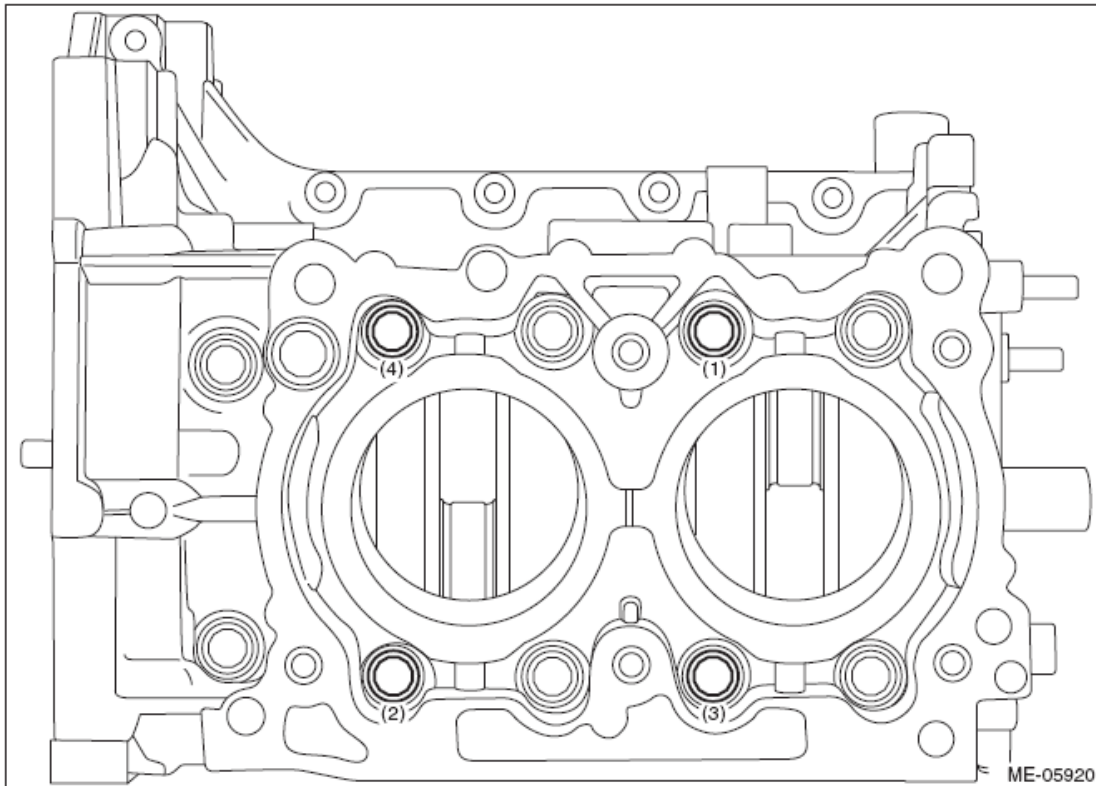


Fig. 634: Identifying Cylinder Block Mounting Bolt Tightening Sequence
Courtesy of SUBARU OF AMERICA, INC.

13. Using angle gauge, tighten the mounting bolts (4 places) with specified angle in numerical order as shown in the figure.

CAUTION: When tightening the mounting bolts with specified angle, hold the cylinder block LH while not holding the cylinder block RH to ensure the joint accuracy of the cylinder block.

Tightening angle:

$60^{\circ} \pm 2^{\circ}$

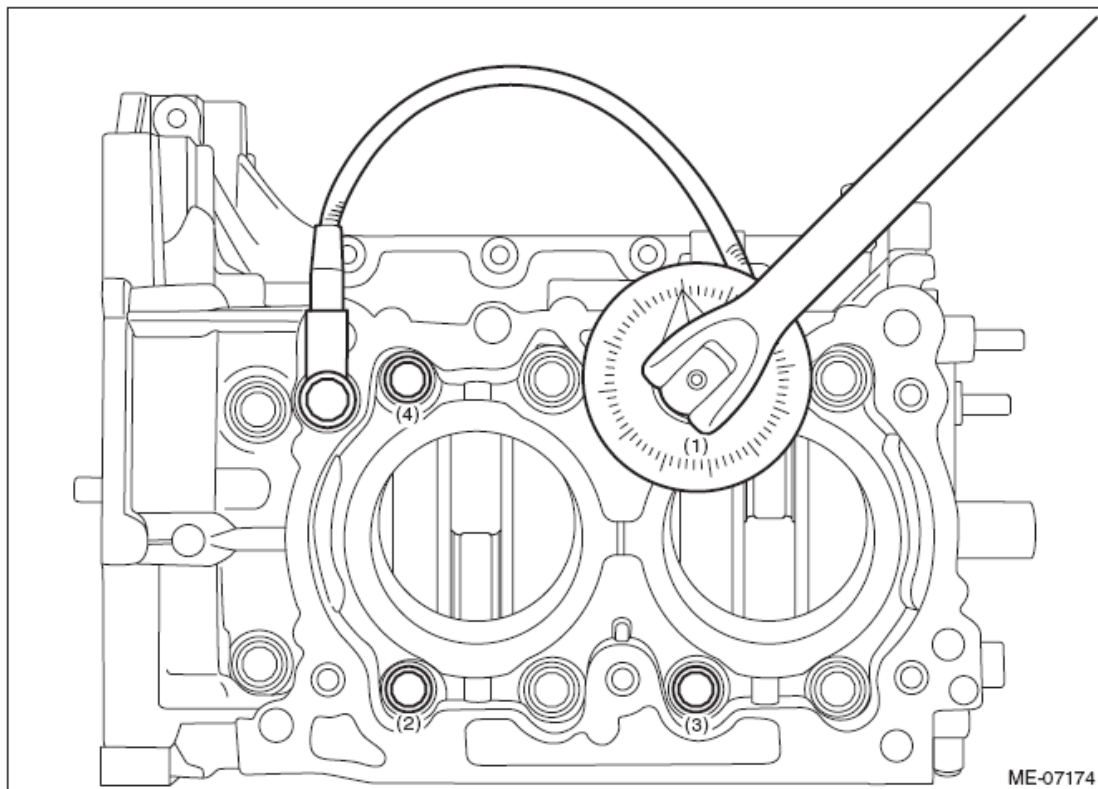


Fig. 635: Tightening Cylinder Block Mounting Bolt Using Angle Gauge
Courtesy of SUBARU OF AMERICA, INC.

14. Loosen the mounting bolts (6 places) by 180° in numerical order as shown in the figure.

CAUTION: When loosening the mounting bolts, hold the cylinder block LH while not holding the cylinder block RH to ensure the joint accuracy of the cylinder block.

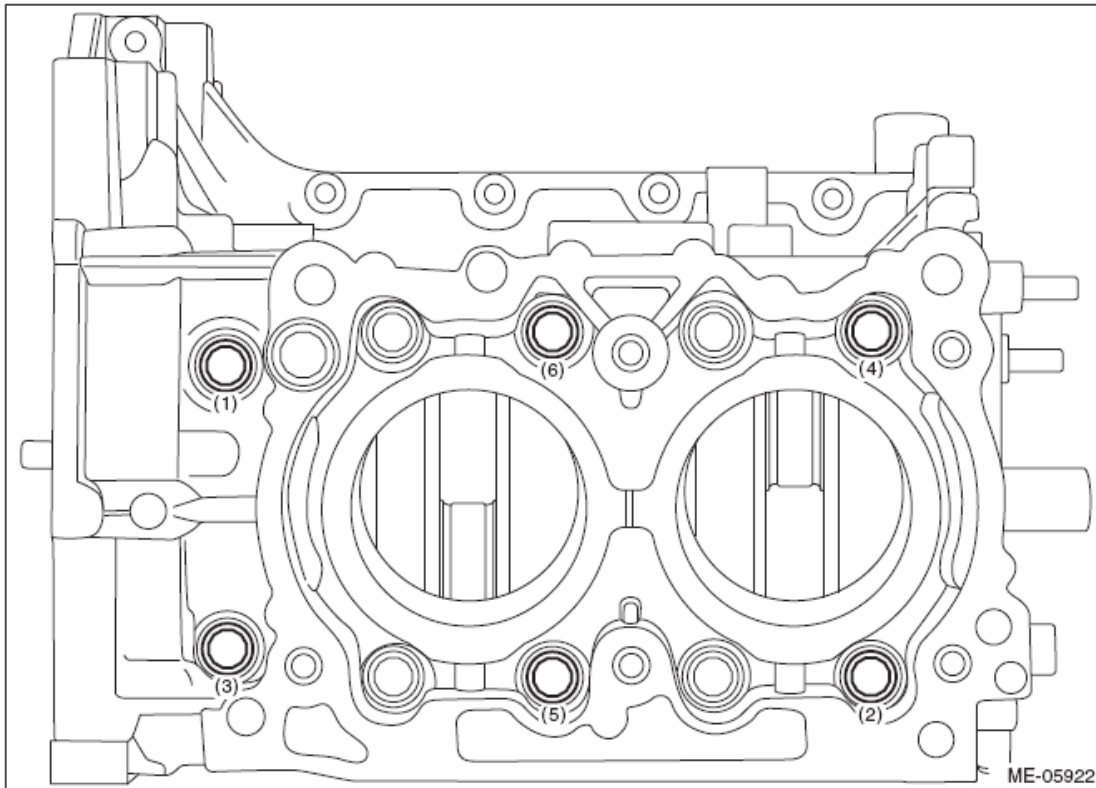


Fig. 636: Identifying Cylinder Block Mounting Bolts Loosening Sequence
Courtesy of SUBARU OF AMERICA, INC.

15. Tighten the mounting bolts (6 places) with a torque of 17 N.m (1.7 kgf-m, 12.5 ft-lb) in numerical order as shown in the figure.

CAUTION: When tightening the mounting bolts with specified torque, hold the cylinder block LH while not holding the cylinder block RH to ensure the joint accuracy of the cylinder block.

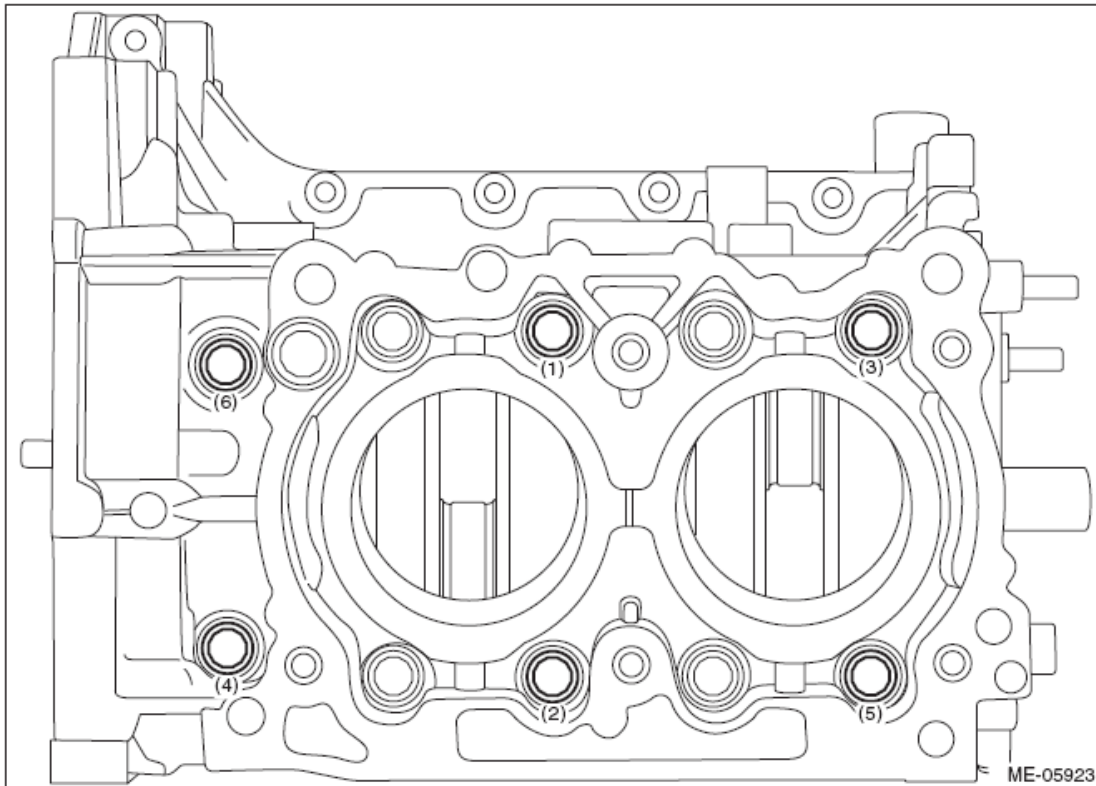


Fig. 637: Identifying Cylinder Block Mounting Bolts Tightening Sequence
Courtesy of SUBARU OF AMERICA, INC.

16. Using angle gauge, tighten the mounting bolts (6 places) with specified angle in numerical order as shown in the figure.

CAUTION: When tightening the mounting bolts with specified angle, hold the cylinder block LH while not holding the cylinder block RH to ensure the joint accuracy of the cylinder block.

Tightening angle:

$60^{\circ} \pm 2^{\circ}$

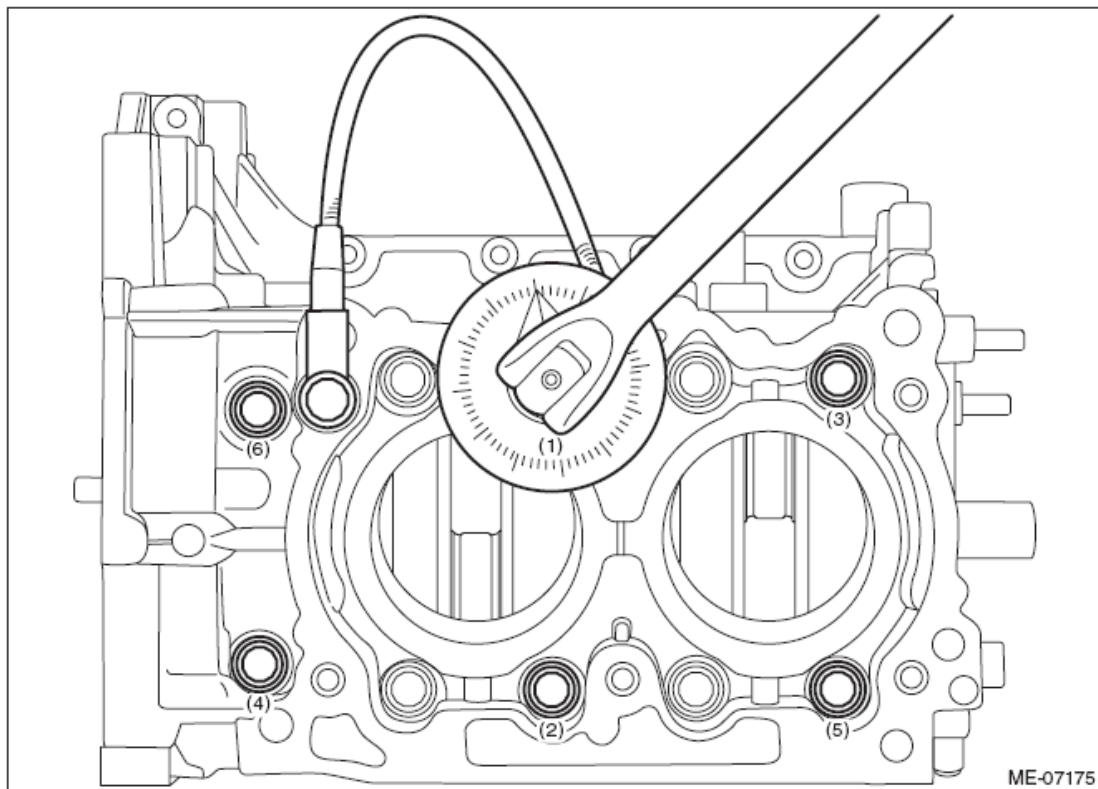


Fig. 638: Tightening Cylinder Block Mounting Bolts Using Angle Gauge
Courtesy of SUBARU OF AMERICA, INC.

17. Remove the cylinder head bolt attached at the locations shown in the figure.

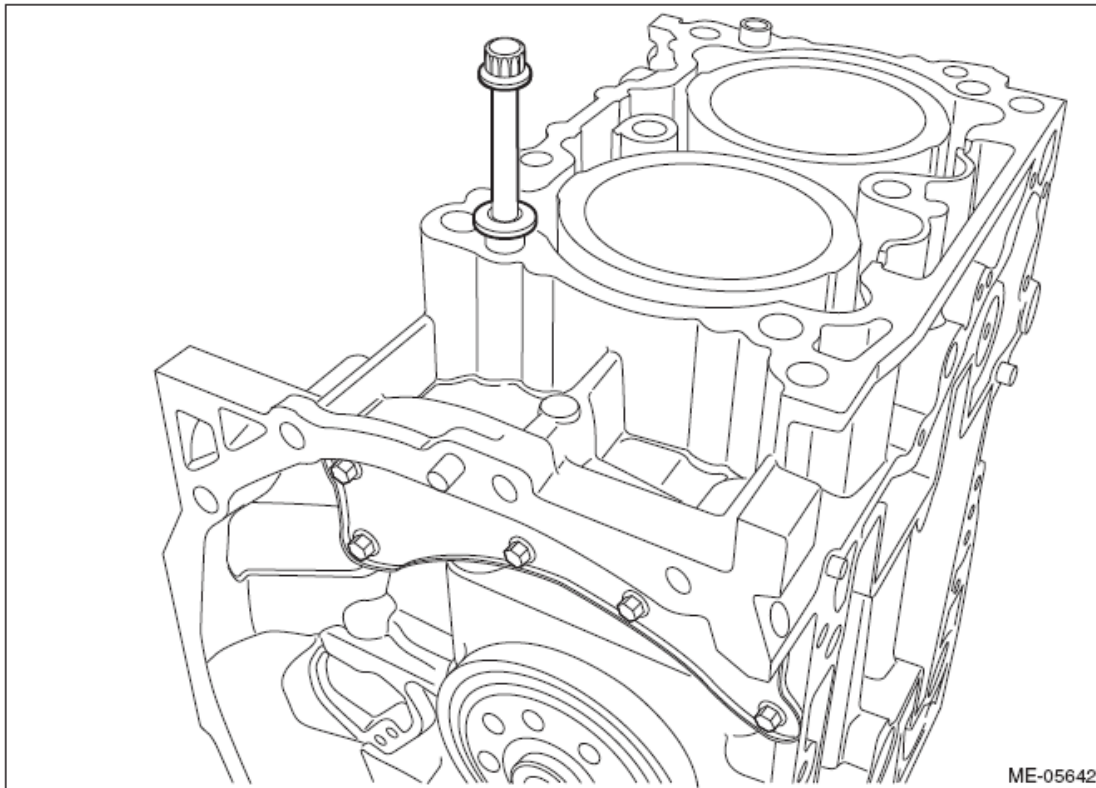


Fig. 639: Identifying Cylinder Head Mounting Bolt
Courtesy of SUBARU OF AMERICA, INC.

18. Loosen the cylinder block mounting bolts in numerical order as shown in the figure, and separate the cylinder block RH and LH.

NOTE: Lift the cylinder block RH slightly, and confirm that the crankshaft is remaining in the cylinder block LH. If the cylinder block RH is lifted carelessly when separating, the crankshaft may stick to cylinder block RH, then fall off.

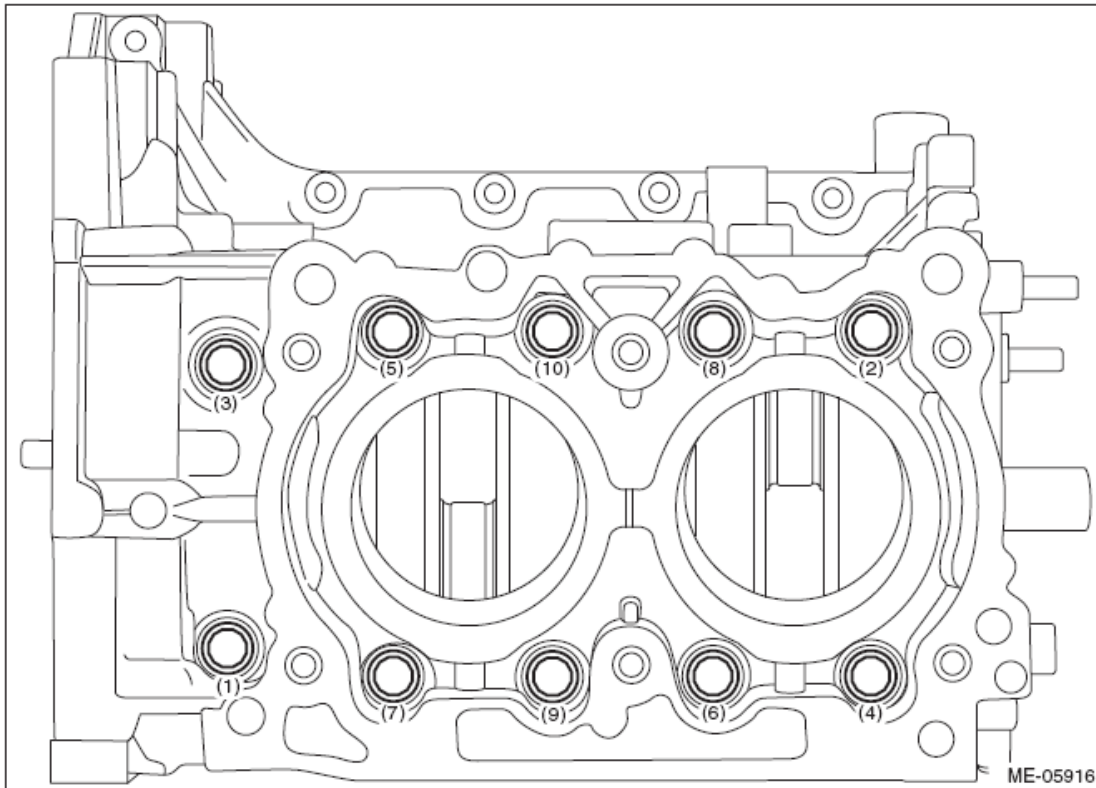


Fig. 640: Identifying Cylinder Block Mounting Bolts Loosening Sequence
Courtesy of SUBARU OF AMERICA, INC.

19. Determine the crankshaft oil clearance by matching the widest point of the plastigauge on each journal against scale printed on a package of the plastigauge. If it is not within the standard, replace the crankshaft bearing, and grind to correct the crankshaft journal or replace the crankshaft as required.

NOTE:

- Select the crankshaft bearing of suitable size by referring to step 3) when replacing crankshaft bearing.
- When grinding to correct the crankshaft journal, finish it to the suitable outer diameter by referring to step 3) according to the undersize bearing to be used.

Crankshaft oil clearance:

Standard

0.013 - 0.031 mm (0.00051 - 0.00122 in)

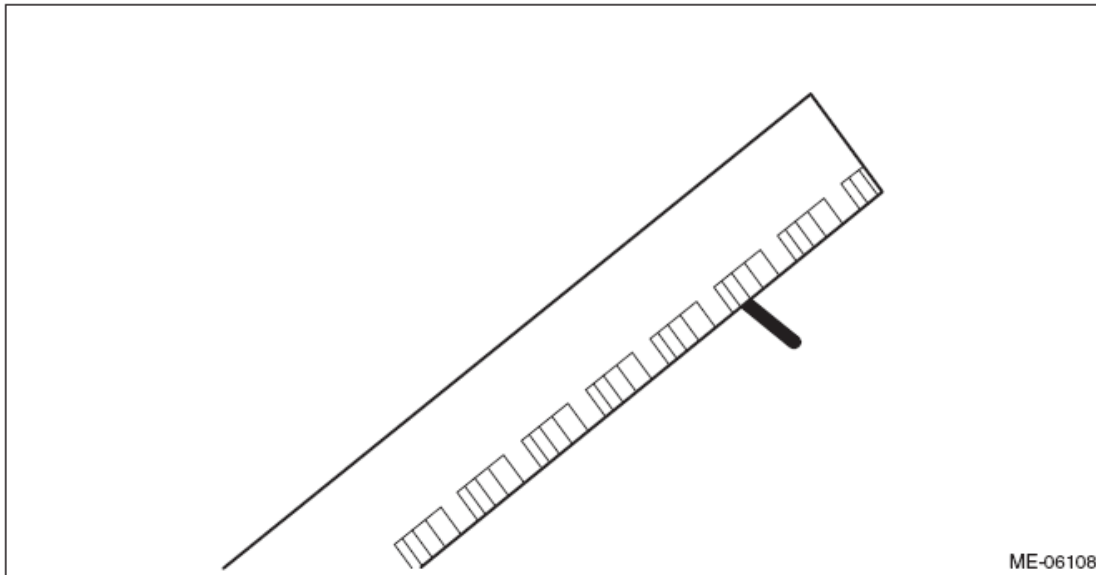


Fig. 641: Identifying Crankshaft Oil Clearance Scale
Courtesy of SUBARU OF AMERICA, INC.

20. Completely remove the plastigauge.

INTAKE AND EXHAUST VALVE

SPECIFICATION

Refer to "Cylinder Head" for removal and installation procedures of the intake and exhaust valves. < Ref. to **REMOVAL**, Cylinder Head.> < Ref. to **INSTALLATION**, Cylinder Head.>

PISTON

SPECIFICATION

Refer to "Cylinder Block" for removal and installation procedures of pistons. < Ref. to **REMOVAL**, Cylinder Block.> < Ref. to **INSTALLATION**, Cylinder Block.>

CONNECTING ROD

SPECIFICATION

Refer to "Cylinder Block" for removal and installation procedures of connecting rod.

< Ref. to **REMOVAL**, Cylinder Block.> < Ref. to **INSTALLATION**, Cylinder Block.>

CRANKSHAFT

SPECIFICATION

Refer to "Cylinder Block" for removal and installation procedures of the crankshaft. < Ref. to **REMOVAL**, Cylinder Block.> < Ref. to **INSTALLATION**, Cylinder Block.>

ENGINE TROUBLE IN GENERAL

INSPECTION

NOTE: The "RANK" shown in the chart shows the possibilities of the cause of trouble in order from "Very often" to "Rarely".

Symptoms	Problem parts etc.	Possible cause	RANK
1. Engine does not start.			
1) Starter does not turn.	Starter	Defective battery-to-starter harness	B
		Defective starter switch	C
		Defective inhibitor switch	C
		Defective starter	B
	Battery	Improper connection of terminal	A
		Run-down battery	A
		Defective charging system	B
	Friction	Seizure of crankshaft and connecting rod bearing	C
		Seized camshaft	C
		Seized or stuck piston and cylinder	C
	Immobilizer system < Ref. to BASIC DIAGNOSTIC PROCEDURE .>		A
2) Initial combustion does not occur.	Starter	Defective starter	C
	Engine control system < Ref. to BASIC DIAGNOSTIC PROCEDURE .> < Ref. to BASIC DIAGNOSTIC PROCEDURE .>		A
	Fuel line	Defective fuel pump and relay	A
		Clogged fuel line	C
		Lack of fuel or insufficient fuel	B
	Timing chain	Trouble	B
		Defective timing	B
	Compression	Incorrect cam clearance	C
		Loosened spark plug or defective gasket	C
		Loosened cylinder head bolt or defective cylinder head gasket	C
		Improper valve sealing	C
		Defective valve stem	C
		Worn or broken valve spring	B

2014 Subaru Impreza

2014 ENGINE Mechanical - Impreza & XV Crosstrek

		Worn or stuck piston rings, cylinder liner and piston	C
		Incorrect valve timing	B
		Improper engine oil (low viscosity)	B
3) Initial combustion occurs.	Engine control system < Ref. to <u>BASIC DIAGNOSTIC PROCEDURE</u> .> < Ref. to <u>BASIC DIAGNOSTIC PROCEDURE</u> .>		A
	Intake system	Defective intake manifold gasket	B
		Defective throttle body gasket	B
	Fuel line	Defective fuel pump and relay	C
		Clogged fuel line	C
		Lack of fuel or insufficient fuel	B
	Timing chain	Trouble	B
		Defective timing	B
	Compression	Incorrect cam clearance	C
		Loosened spark plug or defective gasket	C
		Loosened cylinder head bolt or defective cylinder head gasket	C
		Improper valve sealing	C
		Defective valve stem	C
		Worn or broken valve spring	B
		Worn or stuck piston rings, cylinder liner and piston	C
		Incorrect valve timing	B
		Improper engine oil (low viscosity)	B
4) Engine stalls after initial combustion.	Engine control system < Ref. to <u>BASIC DIAGNOSTIC PROCEDURE</u> .> < Ref. to <u>BASIC DIAGNOSTIC PROCEDURE</u> .>		A
	Intake system	Loosened or cracked intake duct	B
		Loosened or cracked PCV hose	C
		Loosened or cracked vacuum hose	C
		Defective intake manifold gasket	B
		Defective throttle body gasket	B
		Dirty air cleaner element	C
	Fuel line	Clogged fuel line	C
		Lack of fuel or insufficient fuel	B
	Timing chain	Trouble	B
		Defective timing	B
		Incorrect cam clearance	C
		Loosened spark plug or defective gasket	C
		Loosened cylinder head bolt or defective cylinder head gasket	C

2014 Subaru Impreza

2014 ENGINE Mechanical - Impreza & XV Crosstrek

	Compression	Improper valve sealing	C
		Defective valve stem	C
		Worn or broken valve spring	B
		Worn or stuck piston rings, cylinder and piston	C
		Incorrect valve timing	B
		Improper engine oil (low viscosity)	B
2. Rough idle and engine stall	Engine control system < Ref. to <u>BASIC DIAGNOSTIC PROCEDURE</u> .> < Ref. to <u>BASIC DIAGNOSTIC PROCEDURE</u> .>		A
	Intake system	Loosened or cracked intake duct	A
		Loosened or cracked PCV hose	A
		Loosened or cracked vacuum hose	A
		Defective intake manifold gasket	B
		Defective throttle body gasket	B
		Defective PCV valve	C
		Loosened oil filler cap	B
		Dirty air cleaner element	C
	Fuel line	Defective fuel pump and relay	C
		Clogged fuel line	C
		Lack of fuel or insufficient fuel	B
	Timing chain	Defective timing	C
	Compression	Incorrect cam clearance	B
		Loosened spark plug or defective gasket	B
		Loosened cylinder head bolt or defective cylinder head gasket	B
		Improper valve sealing	B
		Defective valve stem	C
		Worn or broken valve spring	B
		Worn or stuck piston rings, cylinder and piston	B
		Incorrect valve timing	A
		Improper engine oil (low viscosity)	B
	Lubrication system	Incorrect oil pressure	B
		Defective rocker cover gasket	C
	Cooling system	Over-heating	C
	Other	Evaporative emission control system malfunction	A
		Stuck or damaged throttle valve	B
	Engine control system < Ref. to <u>BASIC DIAGNOSTIC PROCEDURE</u> .> < Ref. to <u>BASIC DIAGNOSTIC PROCEDURE</u> .>		A
		Loosened or cracked intake duct	A
		Loosened or cracked PCV hose	A

2014 Subaru Impreza

2014 ENGINE Mechanical - Impreza & XV Crosstrek

3. Low output, hesitation and poor acceleration	Intake system	Loosened or cracked vacuum hose	B
		Defective intake manifold gasket	B
		Defective throttle body gasket	B
		Defective PCV valve	B
		Loosened oil filler cap	B
		Dirty air cleaner element	A
	Fuel line	Defective fuel pump and relay	B
		Clogged fuel line	B
		Lack of fuel or insufficient fuel	C
	Timing chain	Defective timing	B
	Compression	Incorrect cam clearance	B
		Loosened spark plug or defective gasket	B
		Loosened cylinder head bolt or defective cylinder head gasket	B
		Improper valve sealing	B
		Defective valve stem	C
		Worn or broken valve spring	B
		Worn or stuck piston rings, cylinder and piston	C
		Incorrect valve timing	A
		Improper engine oil (low viscosity)	B
	Lubrication system	Incorrect oil pressure	B
	Cooling system	Over-heating	C
		Over-cooling	C
	Other	Evaporative emission control system malfunction	A
4. Surging	Engine control system < Ref. to <u>BASIC DIAGNOSTIC PROCEDURE</u> .> < Ref. to <u>BASIC DIAGNOSTIC PROCEDURE</u> .>		A
	Intake system	Loosened or cracked intake duct	A
		Loosened or cracked PCV hose	A
		Loosened or cracked vacuum hose	A
		Defective intake manifold gasket	B
		Defective throttle body gasket	B
		Defective PCV valve	B
		Loosened oil filler cap	B
		Dirty air cleaner element	B
	Fuel line	Defective fuel pump and relay	B
		Clogged fuel line	B
		Lack of fuel or insufficient fuel	C
	Timing chain	Defective timing	B
		Incorrect cam clearance	B
		Loosened spark plug or defective gasket	C

2014 Subaru Impreza

2014 ENGINE Mechanical - Impreza & XV Crosstrek

	Compression	Loosened cylinder head bolt or defective cylinder head gasket	C
		Improper valve sealing	C
		Defective valve stem	C
		Worn or broken valve spring	C
		Worn or stuck piston rings, cylinder and piston	C
		Incorrect valve timing	A
		Improper engine oil (low viscosity)	B
	Cooling system	Over-heating	B
	Other	Evaporative emission control system malfunction	C
5. Engine does not return to idle	Engine control system < Ref. to <u>BASIC DIAGNOSTIC PROCEDURE</u> .> < Ref. to <u>BASIC DIAGNOSTIC PROCEDURE</u> .>		A
	Intake system	Loosened or cracked vacuum hose	A
	Other	Stuck or damaged throttle valve	A
6. Dieseling (run-on)	Engine control system < Ref. to <u>BASIC DIAGNOSTIC PROCEDURE</u> .> < Ref. to <u>BASIC DIAGNOSTIC PROCEDURE</u> .>		A
	Cooling system	Over-heating	B
	Other	Evaporative emission control system malfunction	B
7. After burning in exhaust system	Engine control system < Ref. to <u>BASIC DIAGNOSTIC PROCEDURE</u> .> < Ref. to <u>BASIC DIAGNOSTIC PROCEDURE</u> .>		A
	Intake system	Loosened or cracked intake duct	C
		Loosened or cracked PCV hose	C
		Loosened or cracked vacuum hose	B
		Defective PCV valve	B
		Loosened oil filler cap	C
	Timing chain	Defective timing	B
	Compression	Incorrect cam clearance	B
		Loosened spark plug or defective gasket	C
		Loosened cylinder head bolt or defective cylinder head gasket	C
		Improper valve sealing	B
		Defective valve stem	C
		Worn or broken valve spring	C
		Worn or stuck piston rings, cylinder and piston	C
		Incorrect valve timing	A
	Lubrication system	Incorrect oil pressure	C
	Cooling system	Over-cooling	C
		Evaporative emission control system	

2014 Subaru Impreza

2014 ENGINE Mechanical - Impreza & XV Crosstrek

	Other	malfunction	C
8. Knocking	Engine control system < Ref. to <u>BASIC DIAGNOSTIC PROCEDURE</u> .> < Ref. to <u>BASIC DIAGNOSTIC PROCEDURE</u> .>		A
	Intake system	Loosened oil filler cap	B
	Timing chain	Defective timing	B
	Compression	Incorrect cam clearance	C
		Incorrect valve timing	B
	Cooling system	Over-heating	A
9. Excessive engine oil consumption	Intake system	Loosened or cracked PCV hose	A
		Defective PCV valve	B
		Loosened oil filler cap	C
	Compression	Defective valve stem	A
		Worn or stuck piston rings, cylinder and piston	A
	Lubrication system	Loosened chain cover attaching bolts and defective gasket	B
		Defective oil filter gasket	B
		Defective crankshaft oil seal	B
		Defective rocker cover gasket	B
		Loosened oil drain plug or defective gasket	B
		Loosened oil pan mounting bolt or defective oil pan	B
10. Excessive fuel consumption	Engine control system < Ref. to <u>BASIC DIAGNOSTIC PROCEDURE</u> .> < Ref. to <u>BASIC DIAGNOSTIC PROCEDURE</u> .>		A
	Intake system	Dirty air cleaner element	A
	Timing chain	Defective timing	B
	Compression	Incorrect cam clearance	B
		Loosened spark plug or defective gasket	C
		Loosened cylinder head bolt or defective cylinder gasket	C
		Improper valve sealing	B
		Defective valve stem	C
		Worn or broken valve spring	C
		Worn or stuck piston rings, cylinder and piston	B
		Incorrect valve timing	B
	Lubrication system	Incorrect oil pressure	C
	Cooling system	Over-cooling	C
A - Very often B - Sometimes C - Rarely			

ENGINE NOISE

INSPECTION

Type of sound	Condition	Possible cause
Regular clicking sound	Sound increases as engine speed increases.	• Valve mechanism is defective • Incorrect cam clearance • Worn camshaft • Broken valve spring • Defective valve shim
Heavy and dull clank	Oil pressure is low.	• Worn crankshaft bearing • Worn connecting rod bearing
	Oil pressure is normal.	• Loosened flywheel mounting bolt • Damaged engine mounting
High-pitched clank	Sound is noticeable when accelerating with an overload condition.	• Ignition timing advanced • Accumulation of carbon inside combustion chamber • Wrong heat range of spark plug • Improper octane value gasoline
Clank when engine speed is between 1, 000 and 2, 000 rpm	Sound is reduced when the fuel injector connector of the noisy cylinder is disconnected. ⁽¹⁾	• Worn crankshaft bearing • Worn connecting rod bearing
Knocking sound when engine is operating under idling speed and engine is warm	Sound is reduced when the fuel injector connector of the noisy cylinder is disconnected. ⁽¹⁾	• Worn cylinder liner and piston ring • Broken or stuck piston ring • Worn piston pin and piston pin hole of piston
	Sound is not reduced if each fuel injector connector is disconnected in turn. ⁽¹⁾	• Unusually worn valve rocker • Unusually worn valve shim • Worn cam sprocket • Worn journal of cam carrier and camshaft cap
Squeaky sound	-	• Insufficient generator lubrication
Rubbing sound	-	• Poor contact of generator brush and rotor

2014 Subaru Impreza

2014 ENGINE Mechanical - Impreza & XV Crosstrek

Gear scream when starting engine	-	• Defective ignition starter switch • Worn gear and starter pinion
Sound like polishing glass with a dry cloth	-	• Defective V-belt tensioner assembly (loose V-belt) • Defective water pump shaft
Hissing sound	-	• Insufficient compression • Air leakage in air intake system, hose, connection or manifold
Timing chain noise	-	• Loose timing chain • Timing chain contacting with adjacent part
Valve noise	-	• Incorrect cam clearance
(1) When disconnecting the fuel injector connector, the malfunction indicator light illuminates and DTC is stored in ECM memory. Therefore, perform the Clear Memory Mode < Ref. to <u>OPERATION</u> , Clear Memory Mode.> < Ref. to <u>OPERATION</u> , Clear Memory Mode.> and Inspection Mode < Ref. to <u>PROCEDURE</u> , Inspection Mode.> < Ref. to <u>PROCEDURE</u> , Inspection Mode.> after connecting the fuel injector connector.		