

2005 ENGINE**Engine Mechanical - Q45****PRECAUTIONS****PRECAUTIONS FOR DRAINING ENGINE COOLANT**

Drain engine coolant when engine is cooled.

PRECAUTIONS FOR DISCONNECTING FUEL PIPING

- Before starting work, make sure no fire or spark producing items are in the work area.
- Release fuel pressure before disconnecting and disassembly.
- After disconnecting pipes, plug openings to stop fuel leakage.

PRECAUTIONS FOR REMOVAL AND DISASSEMBLY

- When instructed to use special service tools, use the specified tools. Always be careful to work safely, avoid forceful or uninstructed operations.
- Exercise maximum care to avoid damage to mating or sliding surfaces.
- Cover openings of engine system with tape or the equivalent, if necessary, to seal out foreign materials.
- Mark and arrange disassembly parts in an organized way for easy troubleshooting and re-assembly.
- When loosening nuts and bolts, as a basic rule, start with the one furthest outside, then the one diagonally opposite, and so on. If the order of loosening is specified, do exactly as specified. Power tools may be used where noted in the step.

PRECAUTIONS FOR INSPECTION, REPAIR AND REPLACEMENT

Before repairing or replacing, thoroughly inspect parts. Inspect new replacement parts in the same way, and replace if necessary.

PRECAUTIONS FOR ASSEMBLY AND INSTALLATION

- Use torque wrench to tighten bolts or nuts to specification.
- When tightening nuts and bolts, as a basic rule, equally tighten in several different steps starting with the ones in center, then ones on inside and outside diagonally in this order. If the order of tightening is specified, do exactly as specified.
- Replace with new liquid gasket, packing, oil seal or O-ring.
- Thoroughly wash, clean, and air-blow each part. Carefully check engine oil or engine coolant passages for any restriction and blockage.
- Avoid damaging sliding or mating surfaces. Completely remove foreign materials such as cloth lint or dust. Before assembly, engine oil sliding surfaces well.
- Release air within route when refilling after draining engine coolant.

- Before starting the engine, apply fuel pressure to fuel lines with turning ignition switch "ON" (with the engine stopped). Then make sure there are no leaks at fuel line connections.
- After repairing, start engine and increase engine speed to check engine coolant, fuel, engine oil, and exhaust gases for leakage.

PARTS REQUIRING ANGLE TIGHTENING

- Use the angle wrench [SST: KV10112100 (BT8653-A)] for the final tightening of the following engine parts:
 - Cylinder head bolts
 - Main bearing cap bolts
 - Connecting rod cap nuts
 - Crankshaft pulley bolt (No angle wrench is required as the bolt flange is provided with notches for angle tightening)
- Do not use a torque value for final tightening.
- The torque value for these parts are for a preliminary step.
- Ensure thread and seat surfaces are clean and coated with engine oil.

PRECAUTIONS FOR LIQUID GASKET


REMOVAL OF LIQUID GASKET SEALING

- After removing the mounting bolts and nuts, separate the mating surface using the seal cutter (SST) and remove the old liquid gasket sealing.

CAUTION: Be careful not to damage the mating surfaces.

- Tap seal cutter to insert it, and then slide it by tapping on the side as shown in the figure.
- In areas where seal cutter (SST) is difficult to use, use plastic hammer to lightly tap the parts, to remove it.

CAUTION: If for some unavoidable reason tool such as screwdriver is used, be careful not to damage the mating surfaces.

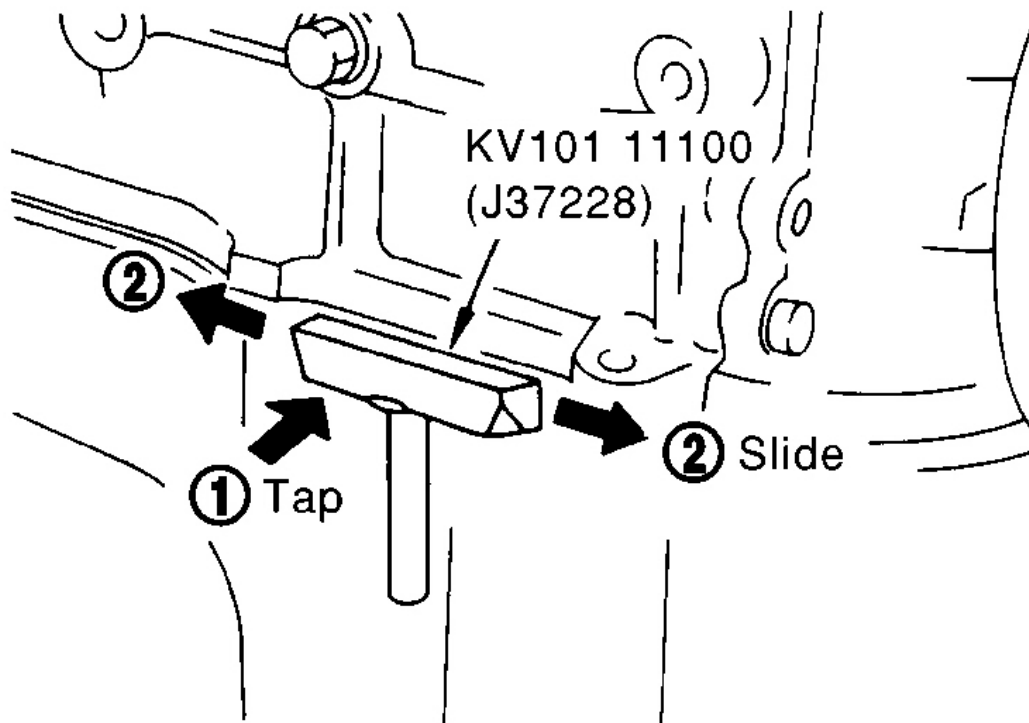


G02369954

Fig. 1: Removing Liquid Gasket Sealing
Courtesy of NISSAN MOTOR CO., U.S.A.

LIQUID GASKET APPLICATION PROCEDURE

1. Using a scraper, remove the old liquid gasket adhering to the liquid gasket application surface and the mating surface.
 - Remove the liquid gasket completely from the groove of the liquid gasket application surface, mounting bolts, and bolt holes.
2. Wipe the liquid gasket application surface and the mating surface with white gasoline (lighting and heating use) to remove adhering moisture, grease and foreign materials.

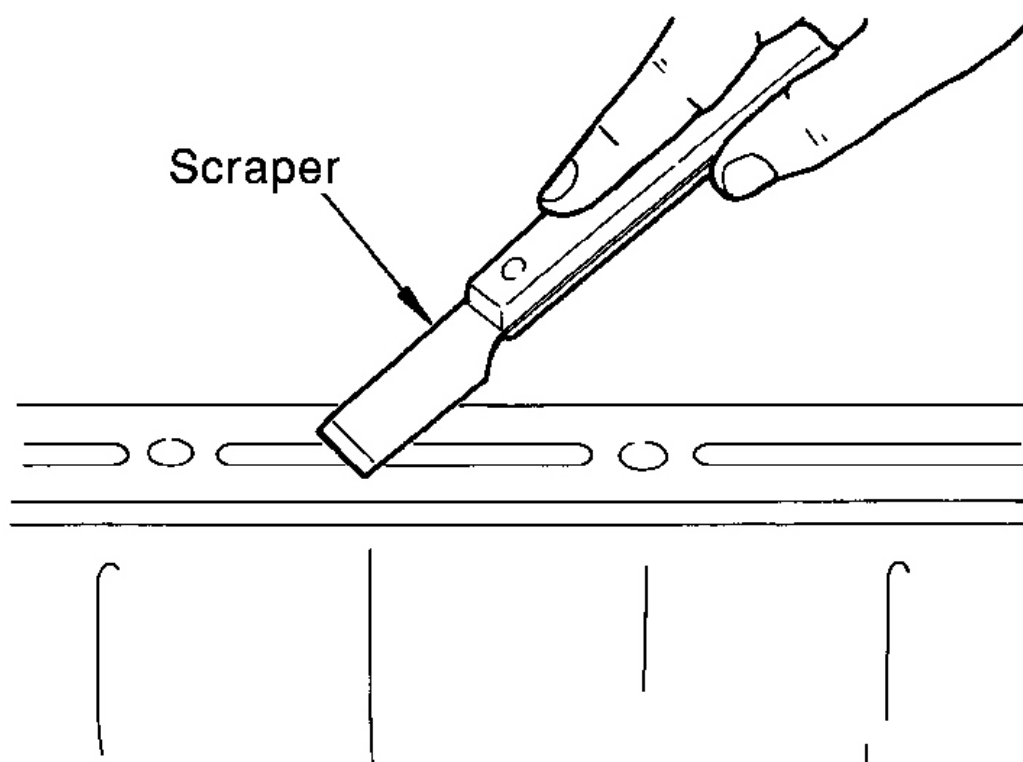


G02369955

Fig. 2: Removing Old Liquid Gasket
Courtesy of NISSAN MOTOR CO., U.S.A.

3. Attach the liquid gasket tube to tube presser [SST: WS39930000 (-)].

Use Genuine RTV Silicone Sealant or equivalent. Refer to "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS".

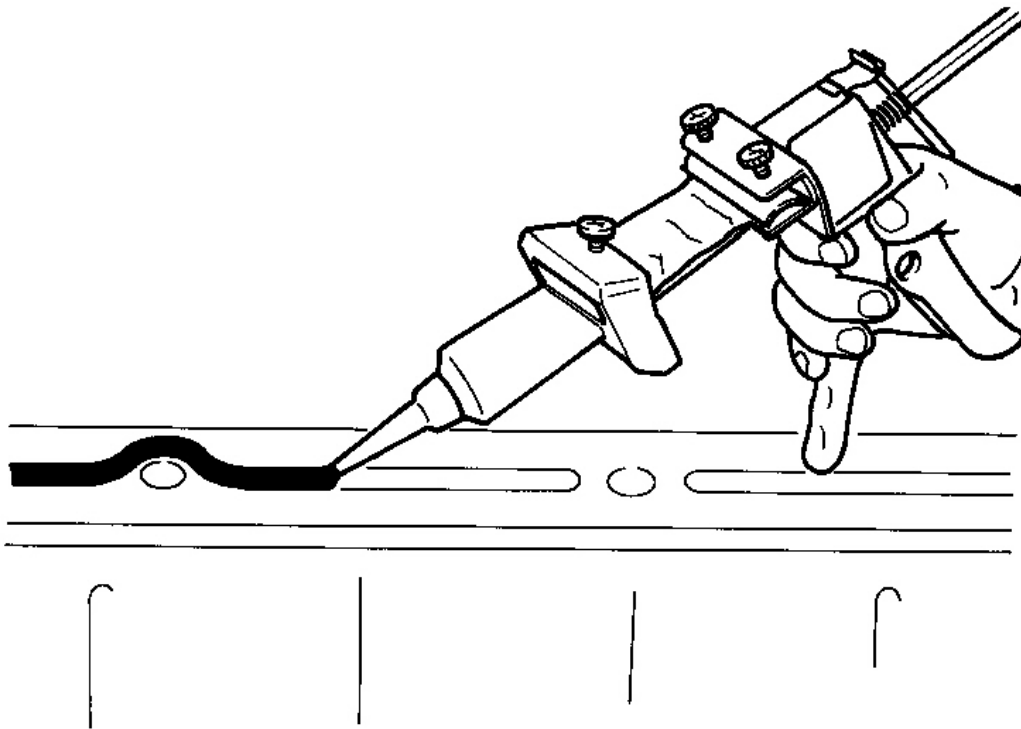


G02369956

Fig. 3: Applying Liquid Gasket

Courtesy of NISSAN MOTOR CO., U.S.A.

4. Apply the liquid gasket without breaks to the specified location with the specified dimensions.
 - If there is a groove for the liquid gasket application, apply the liquid gasket to the groove.
 - As for the bolt holes, normally apply the liquid gasket inside the holes. Occasionally, it should be applied outside the holes. Make sure to read the text of this manual.
 - Within 5 minutes of liquid gasket application, install the mating component.
 - If the liquid gasket protrudes, wipe it off immediately.

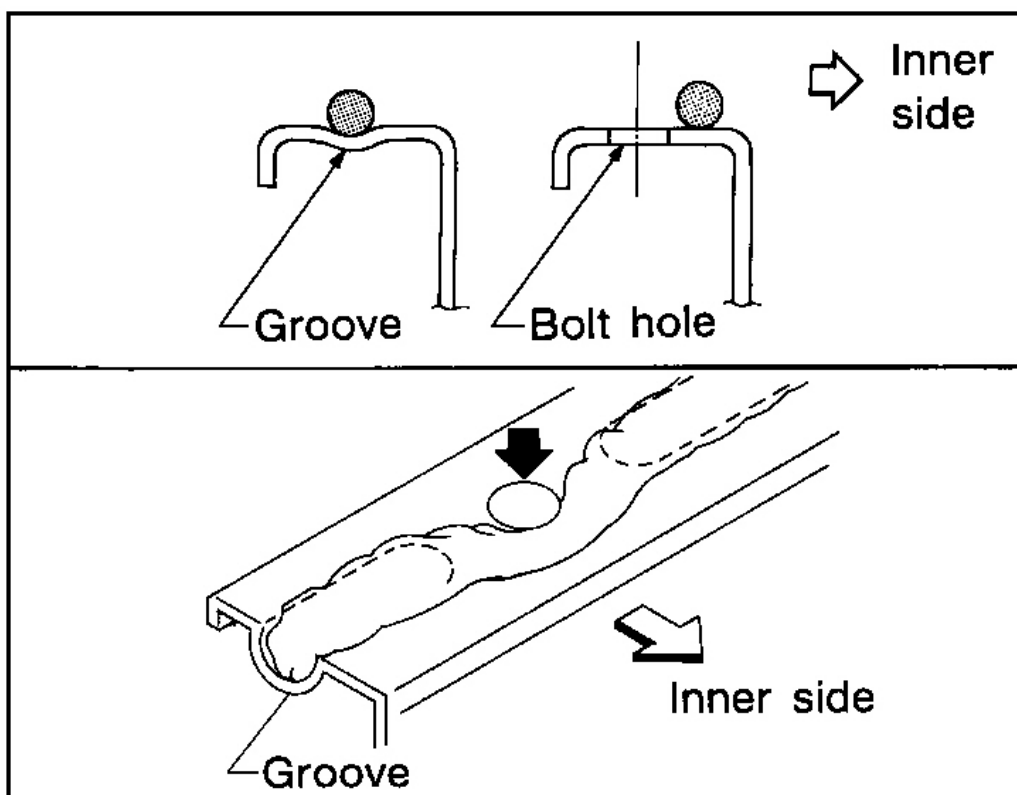

G02369957

Fig. 4: Applying Liquid Gasket To Groove
Courtesy of NISSAN MOTOR CO., U.S.A.

- Do not retighten mounting nuts or bolts after the installation.
- Wait 30 minutes or more after installing, refill the engine oil and engine coolant.

CAUTION: If there are specific instructions in this manual, observe them.

 


 
PREPARATION

SPECIAL SERVICE TOOLS

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

2005 Infiniti Q45

2005 ENGINE Engine Mechanical - Q45

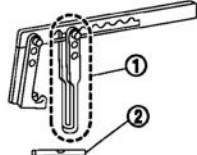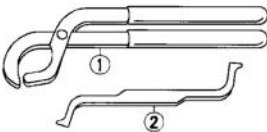Tool number (Kent-Moore No.) Tool name		Description
KV10111100 (J-37228) Seal cutter		Removing steel oil pan and front cover, etc.
KV10114400 (J-38365) Heated oxygen sensor wrench		Loosening or tightening heated oxygen sensors a: 22 mm (0.87 in)
EG15050500 (J-45402) Compression gauge adapter		Inspection of compression pressure on No. 7 and No. 8 cylinders
KV10116200 (J-26336-A) Valve spring compressor 1. KV10115900 (J-26336-20) Attachment 2. KV10109230 (—) Adapter		Disassembling and assembling valve mechanism Part (1) is a component of KV10116200 (J-26336-A), but part (2) is not so.
KV101151S0 (J-38972) Lifter stopper set 1. KV10115110 (J-38972-1) Camshaft pliers 2. KV10115120 (J-38972-2) Lifter stopper		Changing adjusting shims
KV10112100 (BT8653-A) Angle wrench		Tightening bolts for bearing cap, cylinder head, etc.

G02369958

Fig. 5: Special Service Tools Description Chart (1 Of 3)

Courtesy of NISSAN MOTOR CO., U.S.A.

2005 Infiniti Q45

2005 ENGINE Engine Mechanical - Q45


Tool number (Kent-Moore No.) Tool name	Description
KV10114700 (J-38139) Main bearing cap remover	Removing crankshaft main bearing cap
KV10107902 (J-38959) Valve oil seal puller	Removing valve oil seal
KV10115600 (J-38958) Valve oil seal drift	Installing valve oil seal Use side A. a: 20 (0.79) dia. d: 8 (0.31) dia. b: 13 (0.51) dia. e: 10.7 (0.421) dia. c: 10.3 (0.406) dia. f: 5 (0.20) dia. Unit: mm (in)
EM03470000 (J-8037) Piston ring compressor	Installing piston assembly into cylinder bore
ST16610001 (J-23907) Pilot bushing puller	Removing crankshaft pilot converter
WS39930000 (—) Tube presser	Pressing the tube of liquid gasket

G02369959

Fig. 6: Special Service Tools Description Chart (2 Of 3)
Courtesy of NISSAN MOTOR CO., U.S.A.

2005 Infiniti Q45




2005 ENGINE Engine Mechanical - Q45

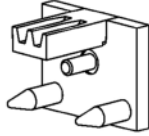Tool number (Kent-Moore No.) Tool name		Description
— (J- 45476) Ring gear stopper		Removing and installing crankshaft pulley
— (J-45488) Quick connector release		Removing fuel tube quick connectors in engine room (Available in SEC. 164 of PARTS CATALOG: Part No. 16441 6N210)

G02369960

Fig. 7: Special Service Tools Description Chart (3 Of 3)
Courtesy of NISSAN MOTOR CO., U.S.A.




 

COMMERCIAL SERVICE TOOLS

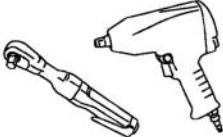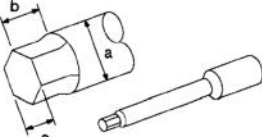(Kent-Moore No.) Tool name		Description
Power tool		Loosening bolts and nuts
(—) Spark plug wrench		Removing and installing spark plug
(J-24239-01) Cylinder head bolt wrench		Loosening and tightening cylinder head bolt, and used with angle wrench [SST: KV10112100 (BT8653-A)] a: 13 (0.51) dia. b: 12 (0.47) c: 10 (0.39) Unit: mm (in)
(—) Valve seat cutter set		Finishing valve seat dimensions

G02369961

Fig. 8: Commercial Service Tools Description Chart (1 Of 3)

   Courtesy of NISSAN MOTOR CO., U.S.A.

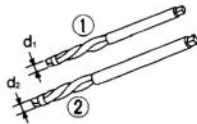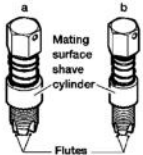(Kent-Moore No.) Tool name		Description
(—) Piston ring expander		Removing and installing piston ring
(—) Valve guide drift		Removing and installing valve guide Intake & Exhaust: a: 9.5 mm (0.374 in) dia. b: 5.5 mm (0.217 in) dia.
(—) Valve guide reamer		1: Reaming valve guide inner hole 2: Reaming hole for oversize valve guide Intake & Exhaust: d1 : 6.0 mm (0.236 in) dia. d2 : 10.2 mm (0.402 in) dia.
(—) Front oil seal drift		Installing front oil seal when front cover is removed
(—) Rear oil seal drift		Installing rear oil seal
a: (J-43897-18) b: (J-43897-12) Heated oxygen sensor thread cleaner		Reconditioning the exhaust system threads before installing a new heated oxygen sensor (Use with anti-seize lubricant shown below.) a: J-43897-18 (18 mm dia.) for zirconia heated oxygen sensor b: J-43897-12 (12 mm dia.) for titania heated oxygen sensor

G02369962

Fig. 9: Commercial Service Tools Description Chart (2 Of 3)

Courtesy of NISSAN MOTOR CO., U.S.A.

2005 Infiniti Q45

2005 ENGINE Engine Mechanical - Q45

(Kent-Moore No.) Tool name		Description
(—) Anti-seize lubricant (Permatex 133AR or equivalent meeting MIL specification MIL-A-907)		Lubricating heated oxygen sensor thread cleaning tool when reconditioning exhaust system threads
(—) Manual lift table caddy		Removing and installing engine


G02369963

Fig. 10: Commercial Service Tools Description Chart (3 Of 3)

Courtesy of NISSAN MOTOR CO., U.S.A.

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

NVH TROUBLESHOOTING - ENGINE NOISE

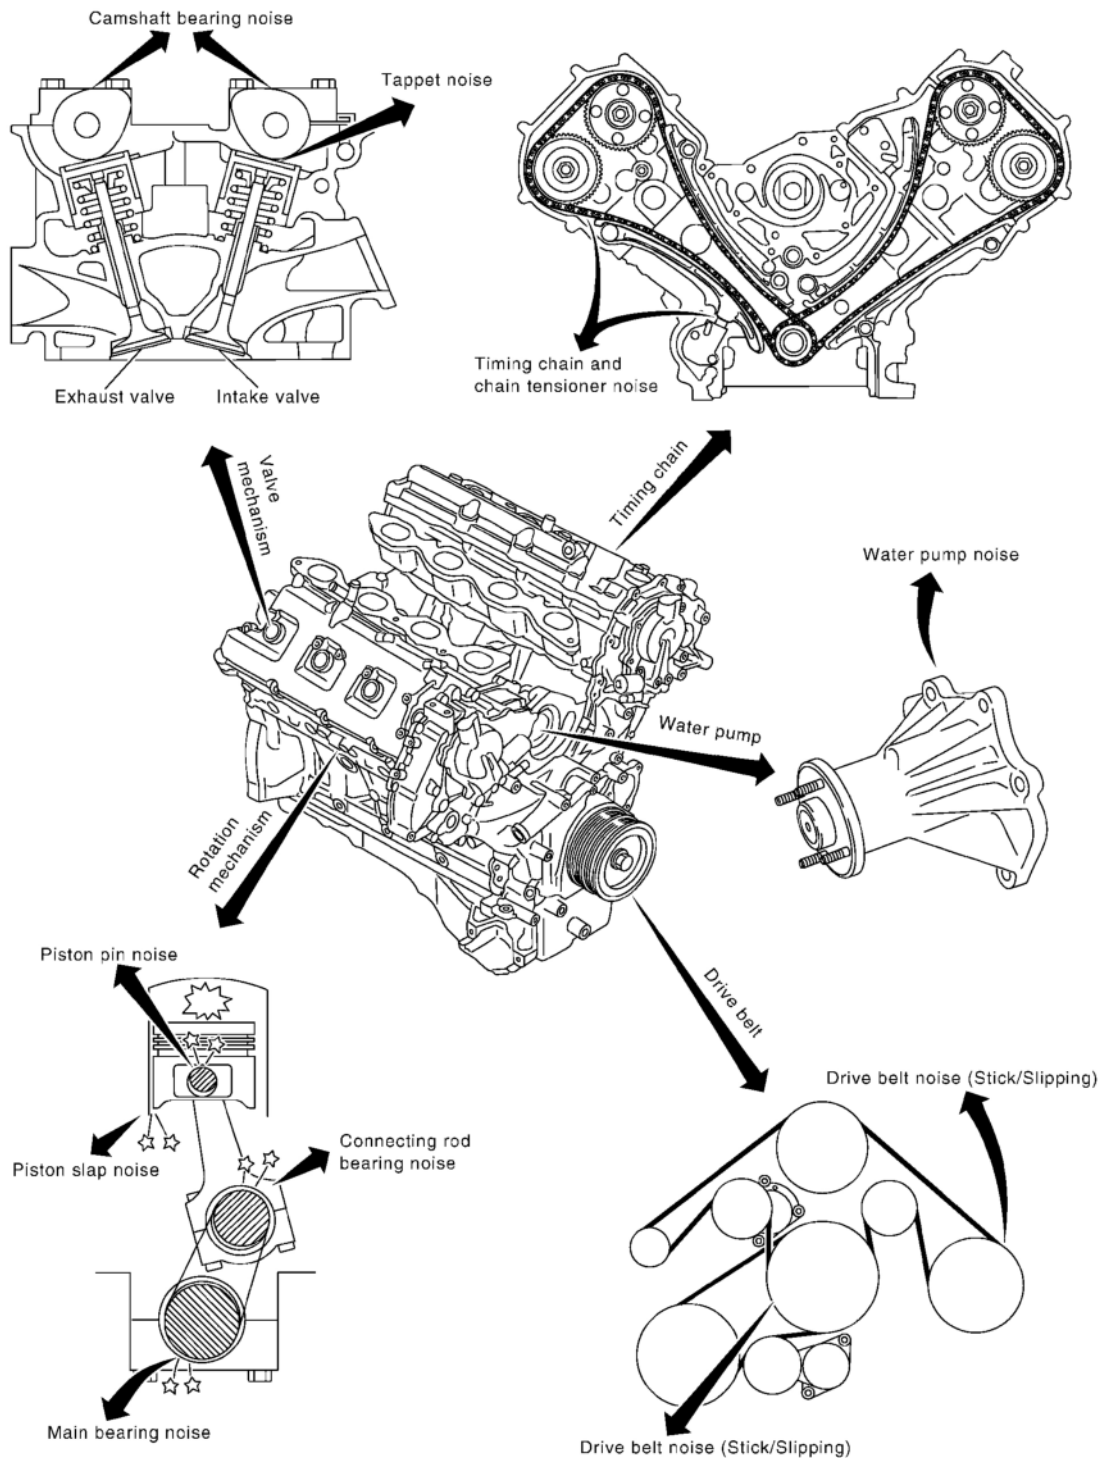

G02369964

Fig. 11: Engine Noise Location Chart
Courtesy of NISSAN MOTOR CO., U.S.A.

USE THE CHART BELOW TO HELP YOU FIND THE CAUSE OF THE SYMPTOM.

2005 Infiniti Q45

2005 ENGINE Engine Mechanical - Q45

1. Locate the area where noise occurs.
2. Confirm the type of noise.
3. Specify the operating condition of engine.
4. Check specified noise source.

If necessary, repair or replace these parts.

Location of noise	Type of noise	Operating condition of engine						Source of noise	Check item
		Before warm-up	After warm-up	When starting	When idling	When racing	While driving		
Top of engine Rocker cover Cylinder head	Ticking or clicking	C	A	—	A	B	—	Tappet noise	Valve clearance
	Rattle	C	A	—	A	B	C	Camshaft bearing noise	Camshaft journal clearance Camshaft runout
Crankshaft pulley Cylinder block (Side of engine) Oil pan	Slap or knock	—	A	—	B	B	—	Piston pin noise	Piston and piston pin clearance Connecting rod bushing oil clearance
	Slap or rap	A	—	—	B	B	A	Piston slap noise	Piston to cylinder bore clearance Piston ring side clearance Piston ring end gap Connecting rod bend and torsion
	Knock	A	B	C	B	B	B	Connecting rod bearing noise	Connecting rod bushing oil clearance Connecting rod bearing clearance (Big end)
	Knock	A	B	—	A	B	C	Main bearing noise	Main bearing oil clearance Crankshaft runout
Front of engine Timing chain cover	Tapping or ticking	A	A	—	B	B	B	Timing chain and chain tensioner noise	Timing chain cracks and wear Chain tensioner operation
Front of engine	Squeaking or fizzling	A	B	—	B	—	C	Drive belts (Sticking or slipping)	Drive belts deflection
	Creaking	A	B	A	B	A	B	Drive belts (Slipping)	Idler pulley bearing operation
	Squall Creak	A	B	—	B	A	B	Water pump noise	Water pump operation

A: Closely related B: Related C: Sometimes related —: Not related

G02369965

Fig. 12: Problem Symptom Chart

Courtesy of NISSAN MOTOR CO., U.S.A.

ENGINE ROOM COVER


INSTALLATION

Install in the reverse order of removal.

DRIVE BELTS

CHECKING DRIVE BELTS

SEC. 117

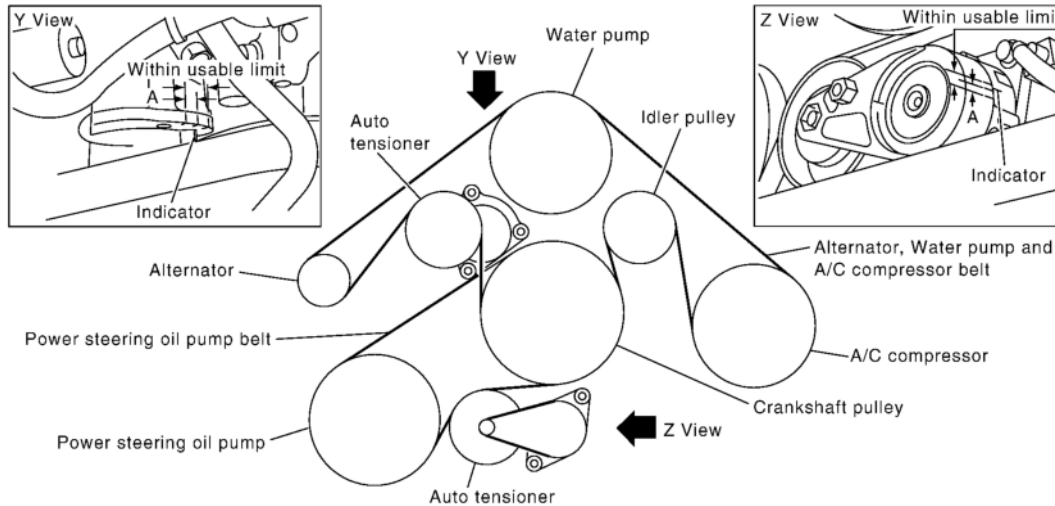

G02369967

Fig. 14: Checking Drive Belts

Courtesy of NISSAN MOTOR CO., U.S.A.

WARNING: Be sure to perform when engine is stopped.

- Remove air duct (inlet) when inspecting drive belt for alternator, water pump and A/C compressor.
- Remove engine undercover (with power tool) when inspecting power steering oil pump belt.
- Make sure that indicator (single line notch) of each auto tensioner is within the allowable working range (between three line notches).

NOTE:

- Check auto tensioner indication when engine is cold.
- When new drive belt is installed, the range should be A.
- The indicator notch is located on the moving side of auto tensioner for alternator, water pump and A/C compressor belt, while it is found on the fixed side for power steering oil pump belt.
- Visually check entire belt for wear, damage or cracks.
- If the indicator is out of allowable working range or belt is damaged, replace drive belt.

TENSION ADJUSTMENT


Belt tensioning is not necessary, as it is automatically adjusted by auto tensioner.

REMOVAL AND INSTALLATION**REMOVAL****Alternator, Water Pump and A/C Compressor Belt**

1. Remove air duct (inlet). Refer to "**AIR CLEANER AND AIR DUCT**".
2. With box wrench, and while securely holding the hexagonal part in pulley center of auto tensioner, move the wrench handle in the direction of arrow (loosening direction of tensioner).

CAUTION:

- **Avoid placing hand in a location where pinching may occur if the holding tool accidentally comes off.**
- **Do not loosen the hexagonal part in center of drive belt auto-tensioner pulley (Do not turn it clockwise). If turned clockwise, the complete drive belt auto-tensioner must be replaced as a unit, including the pulley.**

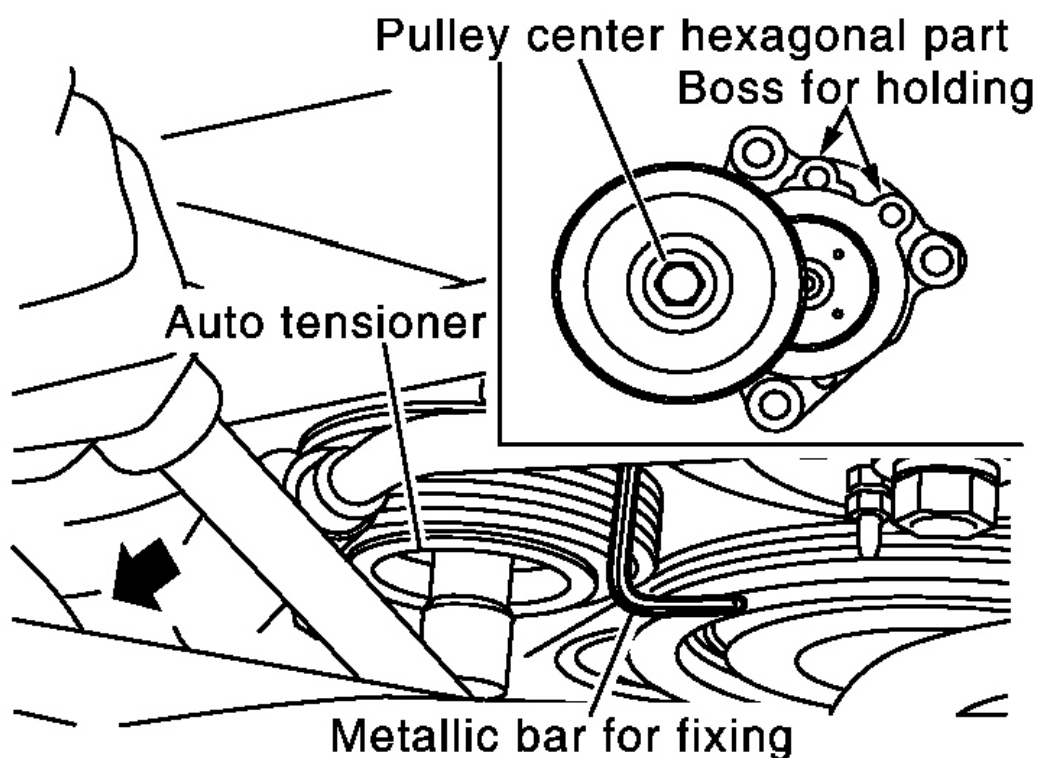

G02369968

Fig. 15: Loosing Of Drive Belt Auto-Tensioner Pulley For Removal Alternator, Water Pump And A/C Compressor Belt


Courtesy of NISSAN MOTOR CO., U.S.A.

3. Under the above condition, insert a metallic bar of approximately 6 mm (0.24 in) in diameter (hexagonal bar wrench shown as example in the figure) through the holding boss to lock auto tensioner pulley arm.
 - Leave auto tensioner pulley arm locked until belt is installed again.
4. Remove alternator, water pump and A/C compressor belt.

Power Steering Oil Pump Belt

1. Remove air duct (inlet) and engine undercover (with power tool). Refer to "**AIR CLEANER AND AIR DUCT**".
2. Remove alternator, water pump and A/C compressor belt. Refer to "**ALTERNATOR, WATER PUMP AND A/C COMPRESSOR BELT**".
3. While securely holding the hexagonal protrusion part of auto tensioner pulley with box wrench, move the wrench handle in the direction of arrow (loosening direction of tensioner).

CAUTION: Avoid placing hand in a location where pinching may occur if the holding tool accidentally comes off.

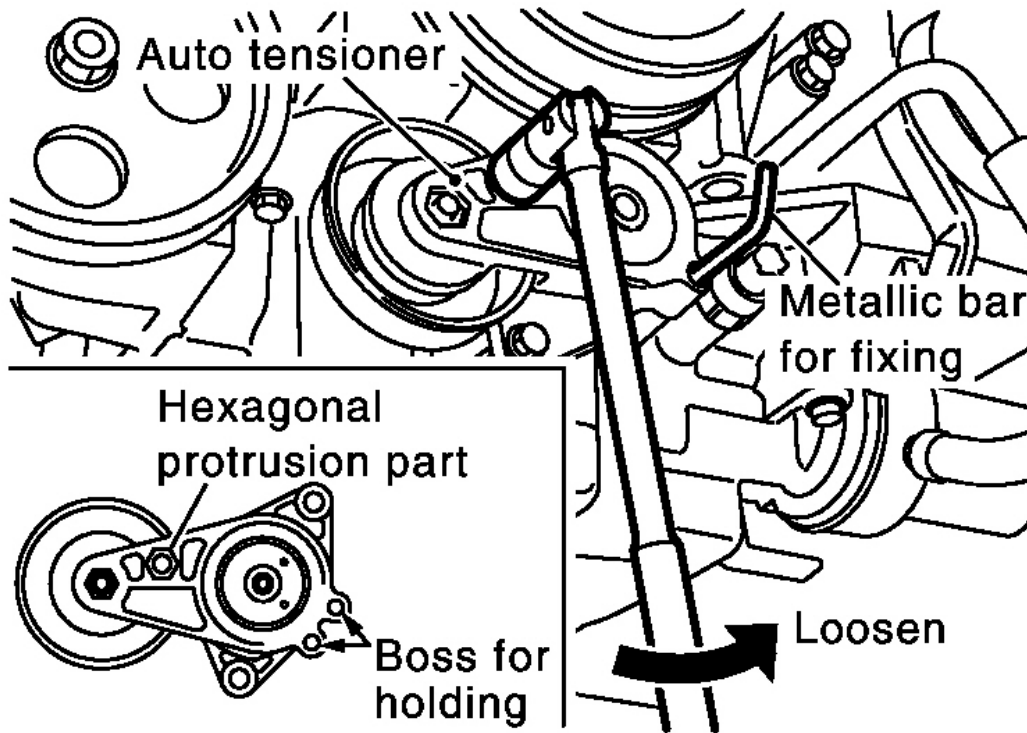

G02369969

Fig. 16: Loosing Auto Tensioner Pulley For Removal Of Power Steering And Oil Pump Belts
Courtesy of NISSAN MOTOR CO., U.S.A.

4. Under the above condition, insert a metallic bar of approximately 6 mm (0.24 in) in diameter (hexagonal bar wrench shown as example in the figure) through the holding boss to lock auto tensioner pulley arm.
 - Leave auto tensioner pulley arm locked until belt is installed again.
5. Remove power steering oil pump belt.

INSTALLATION

Note the following, and install in the reverse order of removal.

CAUTION: Make sure belt is securely installed around all pulleys.

- Unlock auto tensioner pulley arm to give tension to belt.
- Rotate crankshaft pulley several turns clockwise to equalize belt tension between pulleys.
- Make sure that belt tension is within the allowable working range, using indicator notch on auto tensioner. Refer to "**CHECKING DRIVE BELTS**"

DRIVE BELT AUTO TENSIONER AND IDLER PULLEY

SEC. 117

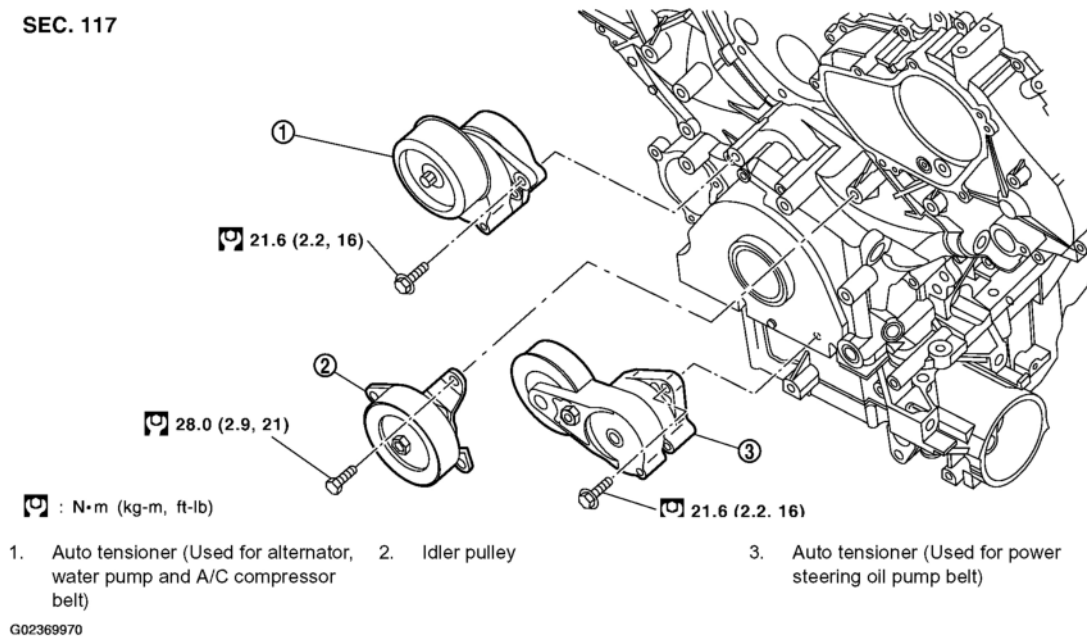


Fig. 17: Installing Drive Belt Auto Tensioners And Idler Pulley With Torque Specifications
Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION: The complete drive belt auto-tensioner must be replaced as a unit, including the pulley.

REMOVAL

1. Remove air duct (inlet). Refer to "**AIR CLEANER AND AIR DUCT**".
2. Remove engine undercover (with power tool).
3. Remove drive belts. Refer to "**REMOVAL AND INSTALLATION**".
 - Keep auto tensioner pulley arm locked after belt is removed.
4. Remove auto tensioner and idler pulley with power tool.
 - Keep auto tensioner pulley arm locked to install or remove auto tensioner.

CAUTION: Do not loosen the hexagonal part in center of drive belt auto-tensioner pulley (Do not turn it clockwise). If turned clockwise,

the complete drive belt auto-tensioner must be replaced as a unit, including the pulley.

INSTALLATION


Install in the reverse order of removal.

CAUTION: Do not swap the pulley between new and old drive belt auto-tensioner.

AIR CLEANER AND AIR DUCT

REMOVAL AND INSTALLATION

SEC. 165

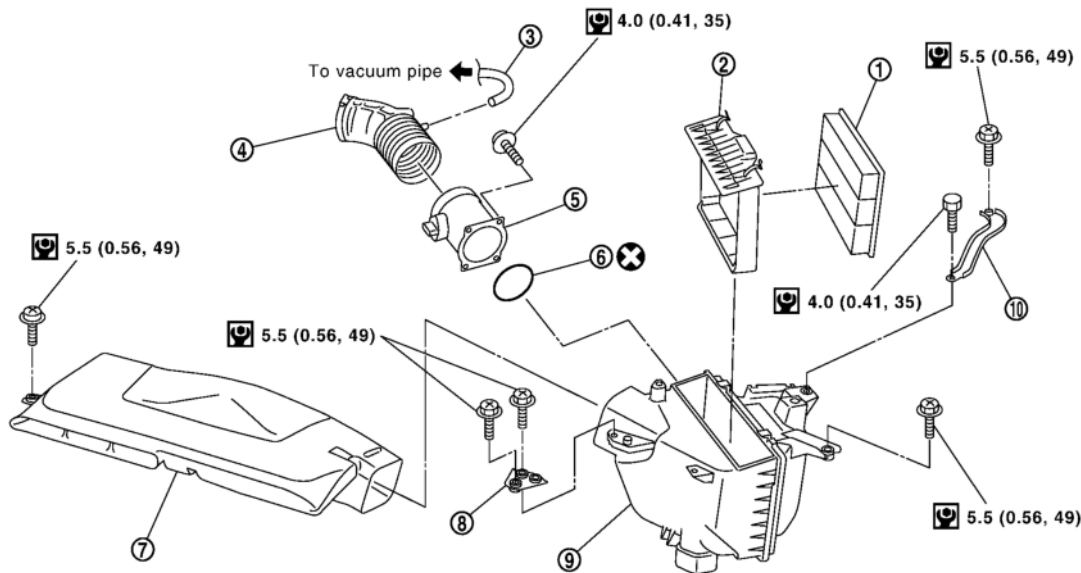

✕ : Always replace after every disassembly.

Ⓜ : N•m (kg-m, in-lb)

- | | | |
|-----------------------|-------------------------|---------------------|
| 1. Air cleaner filter | 2. Holder | 3. Vacuum hose |
| 4. Air duct | 5. Mass air flow sensor | 6. O-ring |
| 7. Air duct (inlet) | 8. Bracket | 9. Air cleaner case |
| 10. Bracket | | |

G02369971

Fig. 18: Removing Air Cleaner And Air Duct With Torque Specifications
 Courtesy of NISSAN MOTOR CO., U.S.A.

REMOVAL

1. Remove engine cover with power tool. Refer to "**ENGINE ROOM COVER**".
2. Remove air cleaner cover. Refer to "**ENGINE ROOM COVER**".
3. Disconnect harness connector from mass air flow sensor.
4. Remove air duct (inlet), air duct and air cleaner case assembly disconnecting their joints.
 - Add marks as necessary for easier installation.
5. Remove mass air flow sensor from air cleaner case, as necessary.

CAUTION: Handle mass air flow sensor with the following cares.

- Do not shock it.
- Do not disassemble it.
- Do not touch its sensor.

INSTALLATION

Note the following, and install in the reverse order of removal.

- Align marks. Attach each joint. Screw clamps firmly.

CHANGING AIR CLEANER FILTER**Removal**


1. Remove air cleaner cover. Refer to "**ENGINE ROOM COVER**".
2. Unhook clips and lift up holder with air cleaner filter.
3. Remove air cleaner filter.

Installation

Install in the reverse order of removal.

INTAKE MANIFOLD**REMOVAL AND INSTALLATION**

SEC. 118•140•163•211•223

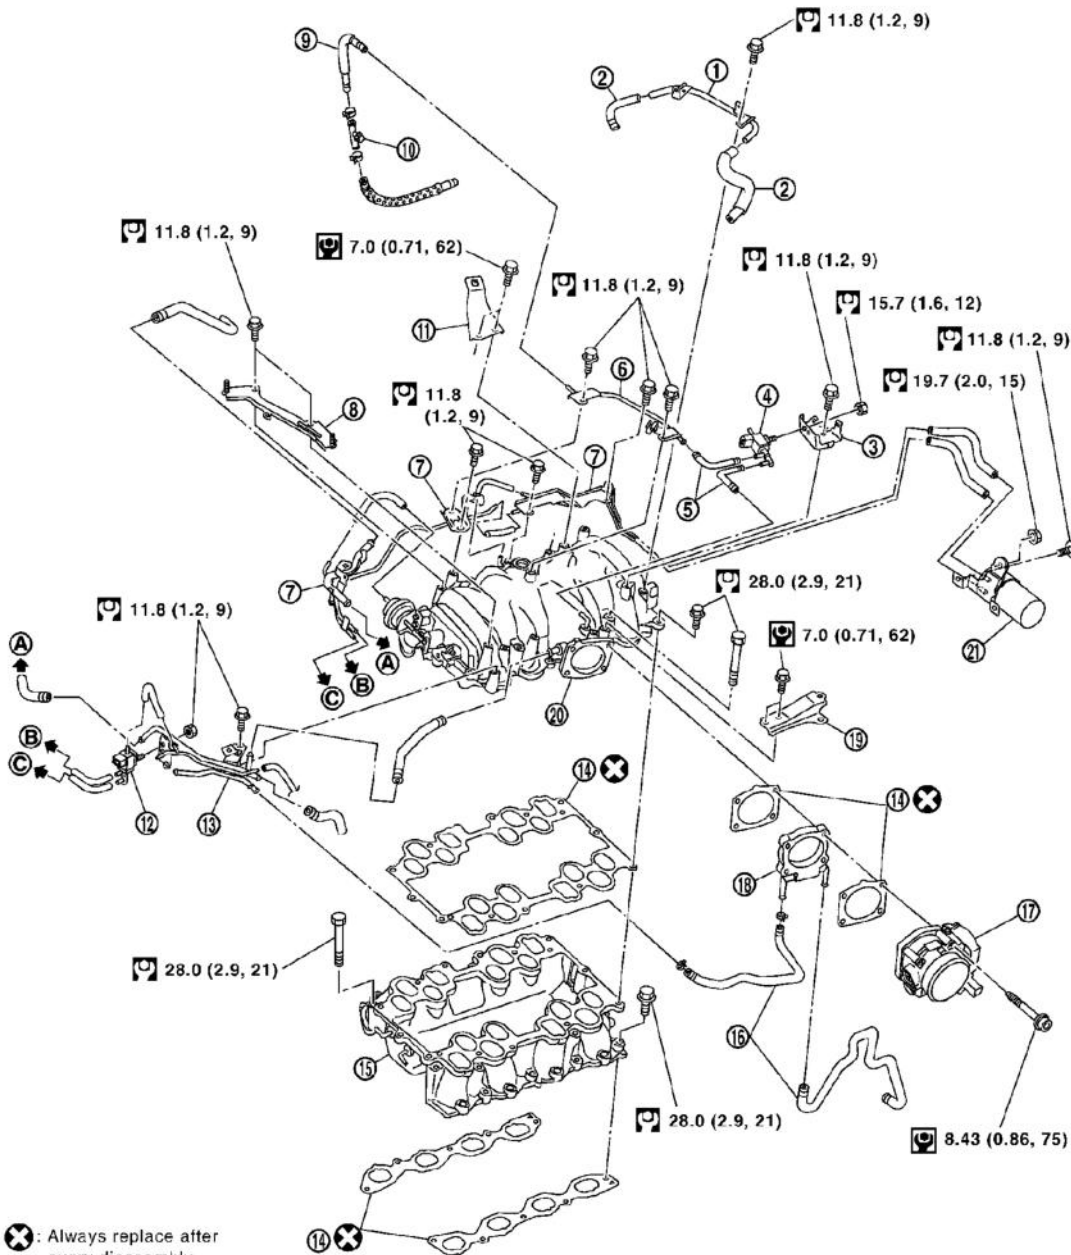

✕: Always replace after every disassembly.

⌘: N·m (kg-m, in-lb)

⌘: N·m (kg-m, ft-lb)

- | | | |
|--|--|--|
| 1. PCV tube | 2. PCV hose | 3. EVAP canister purge volume control solenoid valve bracket |
| 4. EVAP canister purge volume control solenoid valve | 5. EVAP hose | 6. EVAP tube |
| 7. Vacuum gallery | 8. Engine cover front bracket | 9. EVAP hose |
| 10. EVAP service port | 11. Engine cover rear bracket | 12. VIAS control solenoid valve |
| 13. Water gallery | 14. Gasket | 15. Intake manifold (lower) |
| 16. Water hose | 17. Electric throttle control actuator | 18. Intake manifold adapter |
| 19. Engine cover rear bracket | 20. Intake manifold (upper) | 21. Vacuum tank |

G02369972


Fig. 19: Removing Intake Manifold With Torque Specifications

Courtesy of NISSAN MOTOR CO., U.S.A.

REMOVAL

WARNING: To avoid the danger of being scalded, do not drain engine coolant when engine is hot.

1. Remove engine cover (with power tool), air duct (inlet), air cleaner cover and battery cover. Refer to "**REMOVAL AND INSTALLATION**".
2. Release fuel pressure. Refer to "**FUEL PRESSURE RELEASE**".
3. Remove air duct and air cleaner case assembly. Refer to "**REMOVAL AND INSTALLATION**".
4. Drain engine coolant when engine is cooled. Refer to "**CHANGING ENGINE COOLANT**".
5. Disconnect fuel tube quick connector on engine side. Refer to "**FUEL INJECTOR AND FUEL TUBE**".

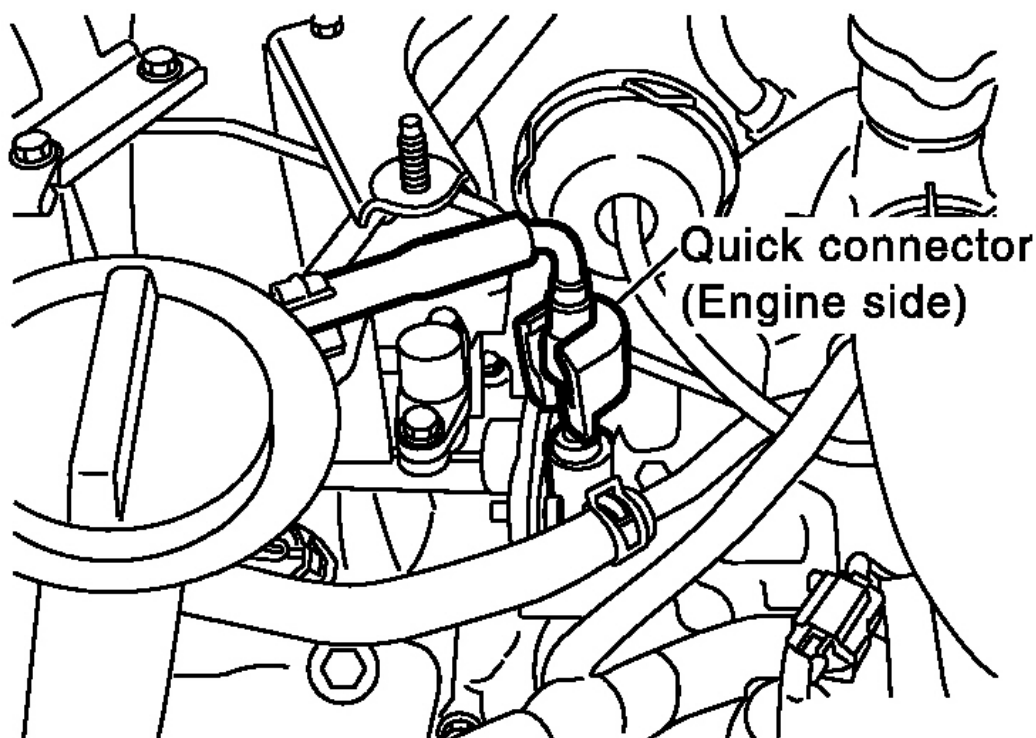

G02369973

Fig. 20: Disconnecting Fuel Tube Quick Connector (Engine Side)


Courtesy of NISSAN MOTOR CO., U.S.A.

6. Remove or disconnect intake manifold (upper), harnesses, brackets, vacuum hose, water gallery, vacuum gallery and PCV hose and tube.
 - Add mating marks as necessary for easier installation.
7. Remove electric throttle control actuator as follows:
 - a. Disconnect harness connector.
 - b. Loosen mounting bolts diagonally.

CAUTION:

- Handle carefully to avoid any shock to electric throttle control actuator.
- Do not disassemble.

8. Disconnect water hoses from water gallery.
9. Remove intake manifold adapter.
10. Remove fuel injectors and fuel tube assembly. Refer to "REMOVAL AND INSTALLATION".
11. Loosen bolts in the reverse order of figure to remove intake manifold (upper) with power tool.

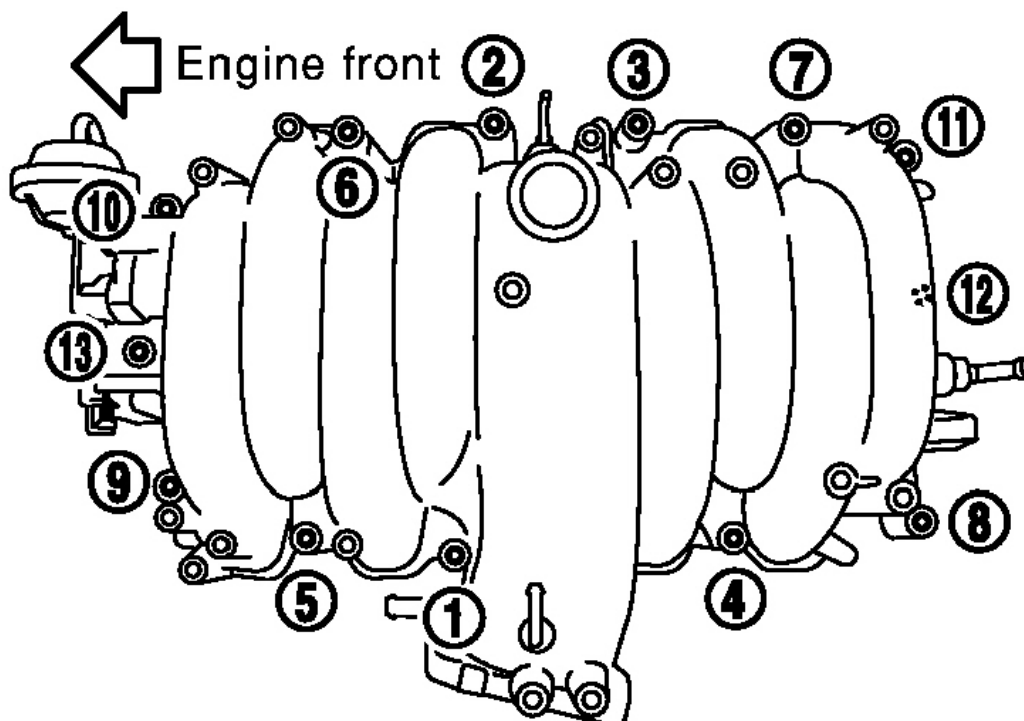


G02369974

Fig. 21: Identifying Removal Sequence Of Intake Manifold (Upper)

Courtesy of NISSAN MOTOR CO., U.S.A.

12. Loosen bolts in the reverse order of figure to remove intake manifold (lower) with power tool.

CAUTION: Cover engine openings to avoid entry of foreign materials.

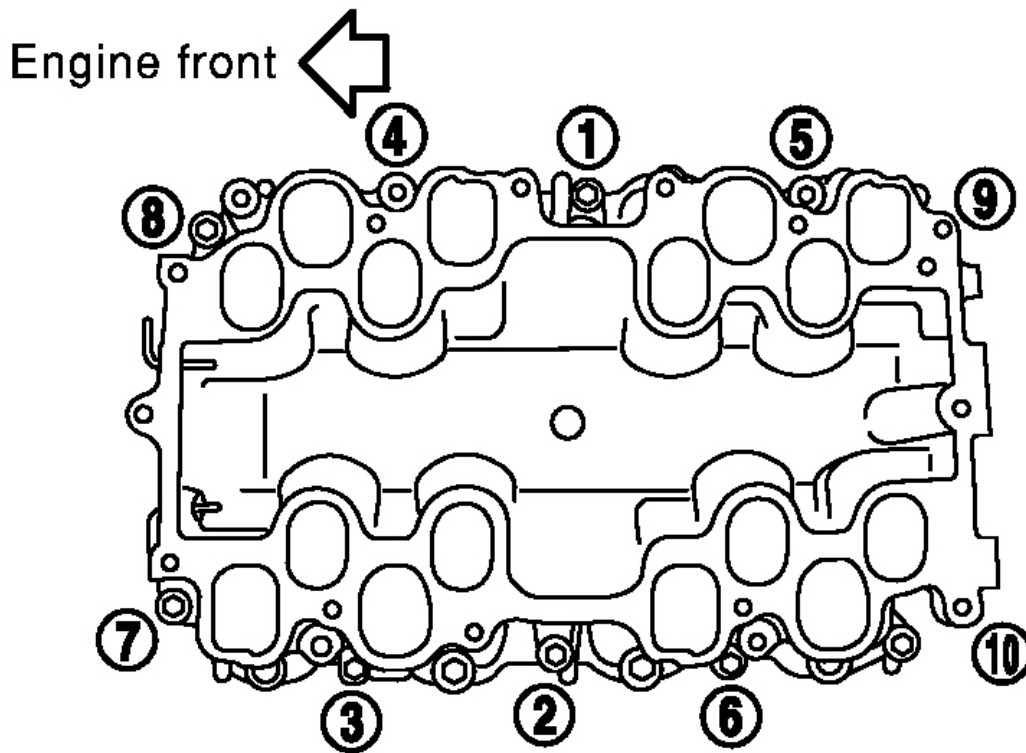

G02369975

Fig. 22: Identifying Removal Sequence Of Intake Manifold (Lower)

Courtesy of NISSAN MOTOR CO., U.S.A.

13. Remove intake manifold gaskets.

CAUTION: Cover engine openings to avoid entry of foreign materials.


14. Remove EVAP canister purge volume control solenoid from intake manifold (upper), if necessary.
15. Remove VIAS control solenoid valve from water gallery, if necessary.

16. Remove vacuum tank from intake manifold (lower), if necessary.

INSPECTION AFTER REMOVAL

Surface Distortion

- Using a straightedge and a feeler gauge, inspect surface distortion of intake manifold (upper and lower).
Limit: 0.1 mm (0.004 in)
- If it exceeds the limit, replace intake manifold (lower) and/or intake manifold (upper).

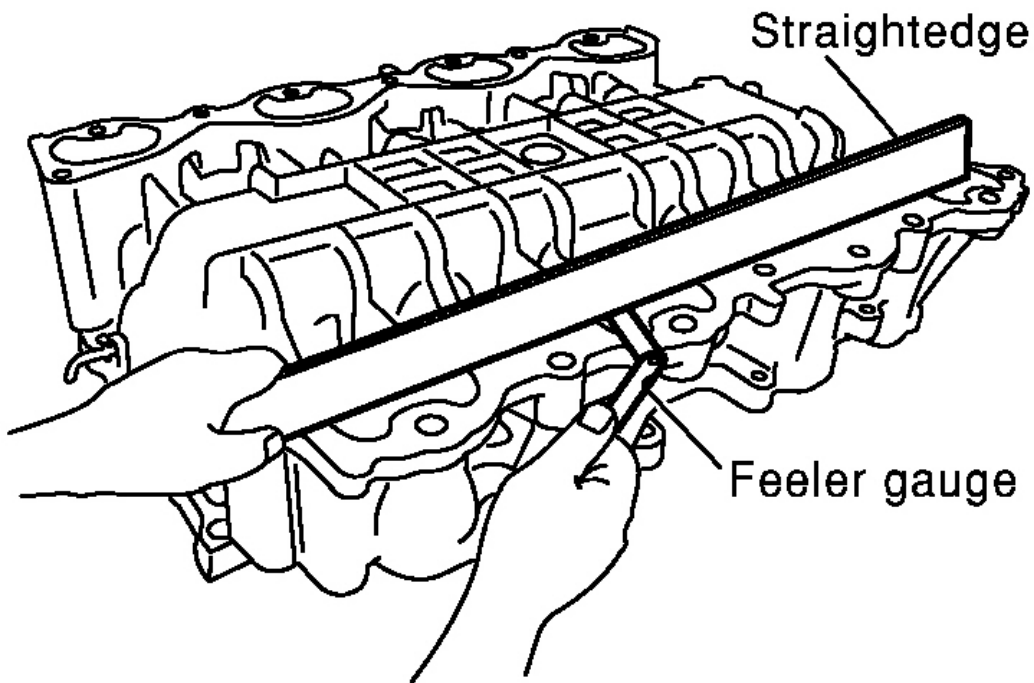

G02369976

Fig. 23: Checking Surface Distortion Of Intake Manifold (Upper And Lower)
Courtesy of NISSAN MOTOR CO., U.S.A.


INSTALLATION

Note the following, and install in the reverse order of removal.

Intake Manifold (Lower)

Tighten in numerical order as shown in the figure.

NOTE: No. 7 and 8 have longer bolt length than others.

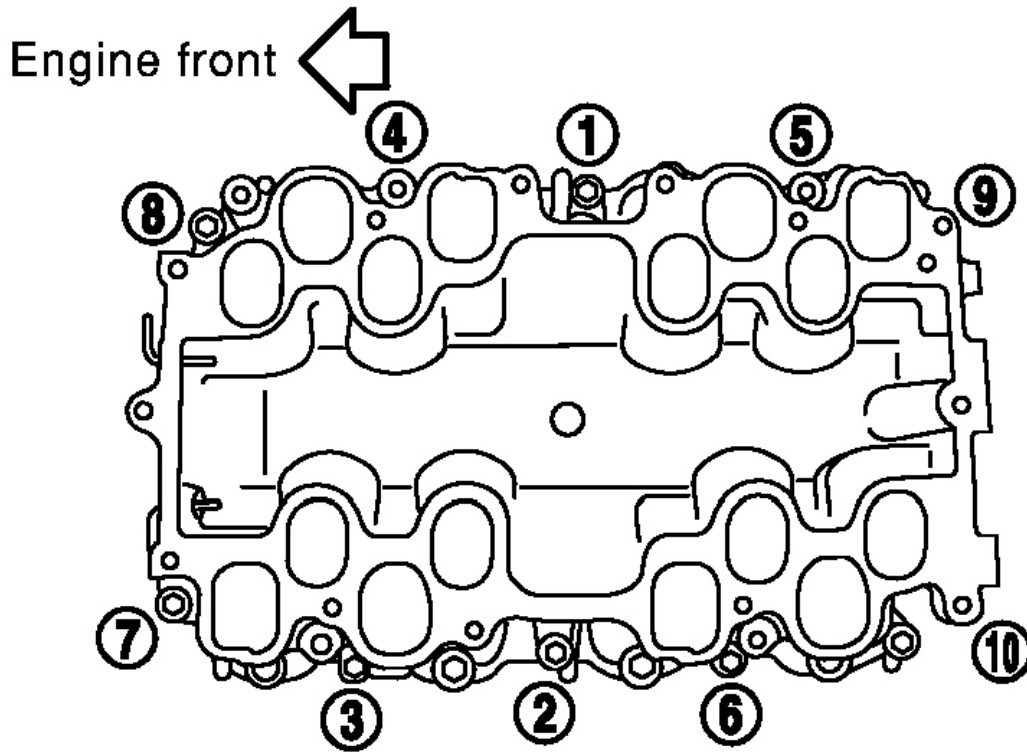


G02369977

Fig. 24: Identifying Tightening Sequence Of Intake Manifold (Lower)
Courtesy of NISSAN MOTOR CO., U.S.A.

Intake Manifold (Upper)

Tighten in numerical order as shown in the figure.

NOTE: No. 4 to 7 have longer bolt length than others.

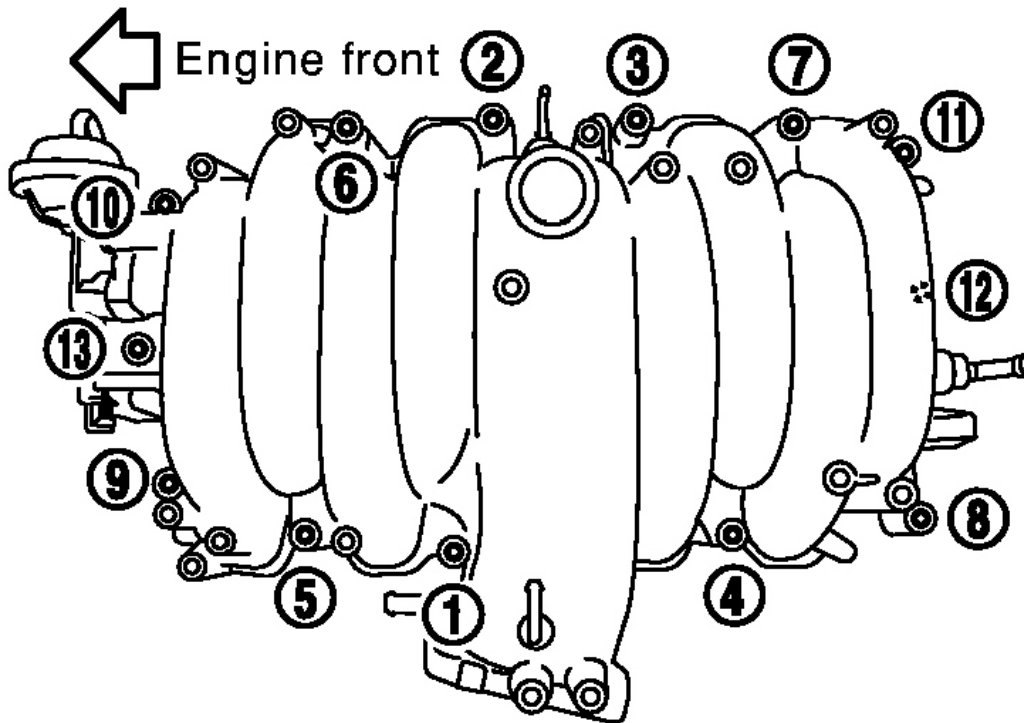

G02369978

Fig. 25: Identifying Tightening Sequence Of Intake Manifold (Upper)
 Courtesy of NISSAN MOTOR CO., U.S.A.

Electric Throttle Control Actuator

- Install intake manifold adapter gasket and electric throttle control actuator gasket so that three protrusions for installation identification do not face downward.
- Tighten mounting bolts of electric throttle control actuator equally and diagonally in several steps.
- After installation perform procedure in "**INSPECTION AFTER INSTALLATION**".

Water Hose

Install water hose so that its overlap width for connection is between 27 mm (1.06 in) and 32 mm (1.26 in) (target: 27 mm, 1.06 in).

Vacuum Hose

Refer to "**VACUUM HOSE DRAWING**".


INSPECTION AFTER INSTALLATION

- After installing fuel tubes, make sure there is no fuel leakage at connections in the following steps.
 - Apply fuel pressure to fuel lines with turning ignition switch ON (with engine stopped). Then check for fuel leaks at connections.
 - Start engine and rev it up and check for fuel leaks at connections.
- Perform procedures for "Throttle Valve Closed Position Learning" after finishing repairs. Refer to **"THROTTLE VALVE CLOSED POSITION LEARNING"**.
- If electric throttle control actuator is replaced, perform procedures for "Idle Air Volume Learning" after finishing repairs. Refer to **"IDLE AIR VOLUME LEARNING"**.

EXHAUST MANIFOLD AND THREE WAY CATALYST

REMOVAL AND INSTALLATION

SEC. 140•226

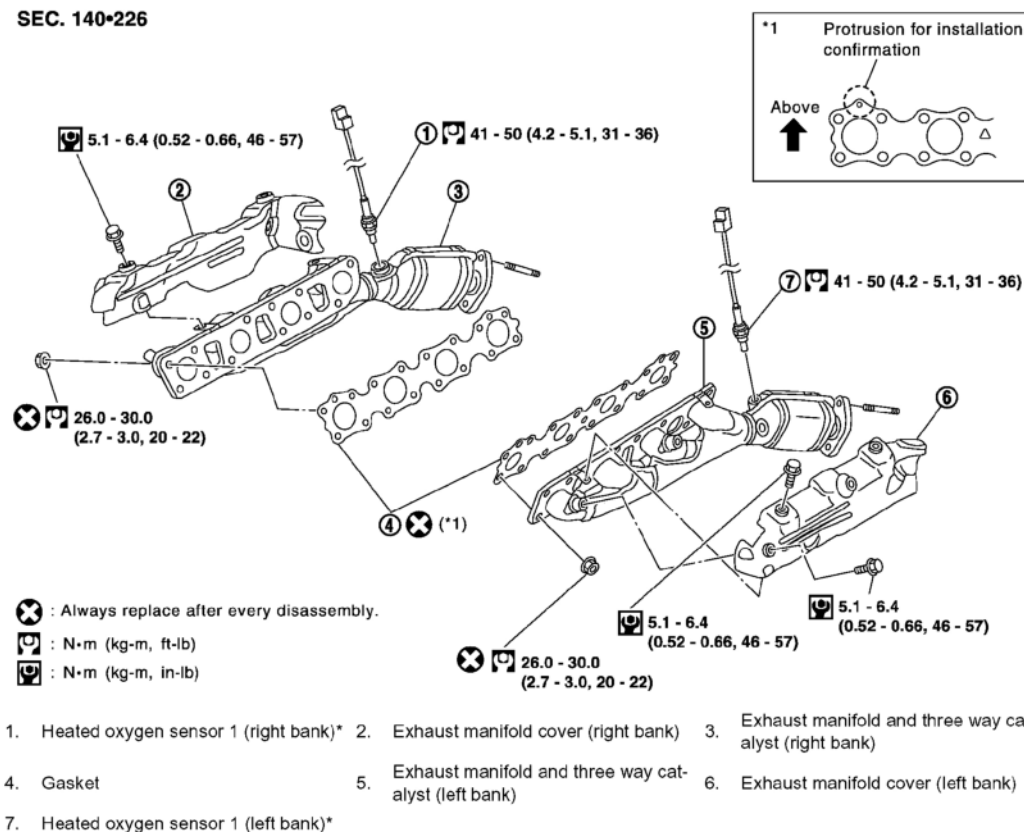

*: When using the heated oxygen sensor wrench [SST: KV10114400 (J-38365)], tighten to the middle of specified torque because length of tool may induce slight indication increase. (Do not tighten to the maximum specified torque.)

G02369979

Fig. 26: Removing Exhaust Manifold And Three Way Catalyst With Torque Specifications
Courtesy of NISSAN MOTOR CO., U.S.A.

REMOVAL

1. Remove heated oxygen sensors.

- Put marks to identify installation positions of each heated oxygen sensor 1.
- a. Remove engine cover, air duct (inlet), battery cover and air cleaner cover. Refer to "**ENGINE ROOM COVER**".
- b. Remove engine undercover (with power tool).
- c. Disconnect harness connector of each heated oxygen sensor 1, and harness from bracket and middle clamp.
- d. Using the heated oxygen sensor wrench (SST), remove heated oxygen sensor 1 (left and right bank).

CAUTION:

- Be careful not to damage heated oxygen sensor.
- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

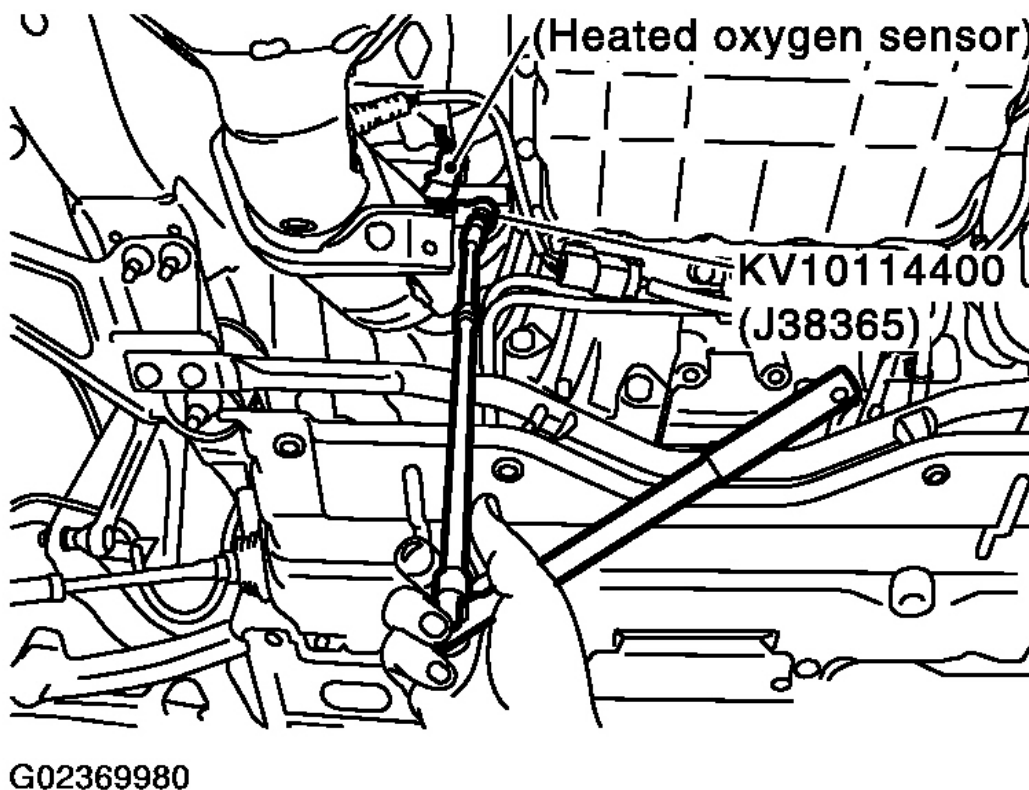


Fig. 27: Removing Heated Oxygen Sensor 1 (Left And Right Bank)
Courtesy of NISSAN MOTOR CO., U.S.A.

2. Remove exhaust manifold and three way catalyst (left bank) using the steps below.
 - a. Remove A/C compressor with power tool and put aside with piping connected. Refer to "**REMOVAL AND INSTALLATION OF COMPRESSOR**".
 - b. Remove exhaust front tube with power tool. Refer to "**REMOVAL AND INSTALLATION**".
 - c. Remove steering lower joint to enable steering shaft to move freely. Refer to "**POWER STEERING GEAR AND LINKAGE**".
 - d. Support and lift up bottom of engine with transmission jack. Remove left engine mounting insulator along with left engine mounting brackets.
 - e. Remove exhaust manifold cover (left bank).
 - f. Loosen nuts in the reverse order of figure to remove exhaust manifold and three way catalyst (left bank) with power tool.

NOTE: **Disregard No. 9 to No. 12 when loosening.**

3. Remove exhaust manifold and three way catalyst (right bank) using the steps below.
 - a. Remove drive belt. Refer to "**DRIVE BELTS**".
 - b. Remove alternator. Refer to "**REMOVAL AND INSTALLATION**".
 - c. Remove exhaust front tube with power tool. Refer to "**REMOVAL AND INSTALLATION**".

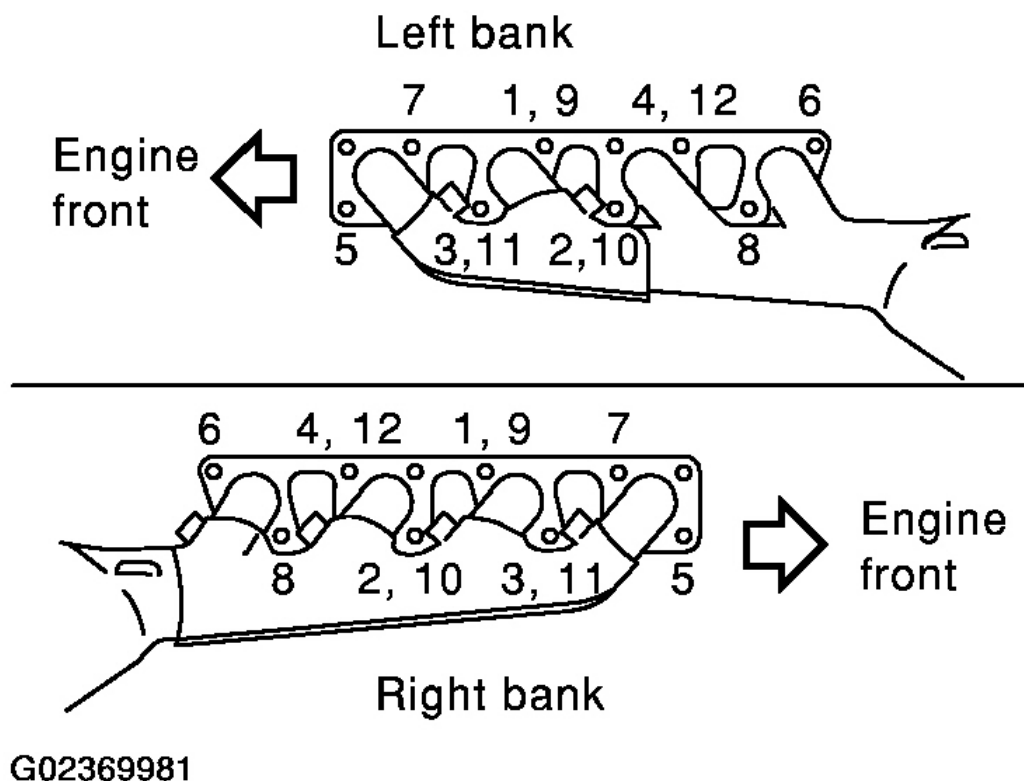


Fig. 28: Identifying Removal Sequence Of Exhaust Manifold And Three Way Catalyst (Left Bank)

Courtesy of NISSAN MOTOR CO., U.S.A.

- Remove nuts on bottom of right engine mounting insulator, and lift up right side of engine approximately 3 cm (1.18 in) with transmission jack.
- Remove starter motor. Refer to "**REMOVAL AND INSTALLATION**".
- Support and lift up bottom of engine with transmission jack. Remove right engine mounting insulator along with right engine mounting brackets.
- Remove exhaust manifold cover (right bank).
- Loosen nuts in the reverse order of figure to remove exhaust manifold and three way catalyst (right bank) with power tool.

NOTE: Disregard No. 9 to No. 12 when loosening.


INSPECTION AFTER REMOVAL

Surface Distortion

- Use a straightedge and a feeler gauge to check the surface distortion of each exhaust manifold and three way catalyst flange surface.

Limit: 0.3mm (0.012in)

- If it exceeds the limit, replace exhaust manifold and three way catalyst.

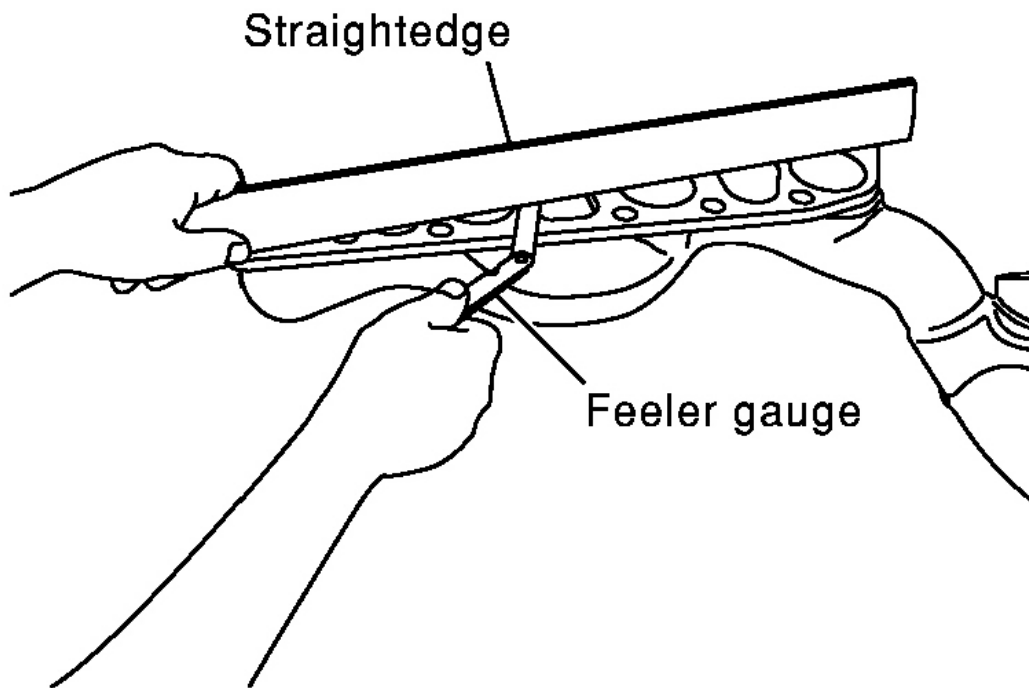

G02369982

Fig. 29: Checking Surface Distortion Of Each Exhaust Manifold And Three Way Catalyst Flange Surface

Courtesy of NISSAN MOTOR CO., U.S.A.

INSTALLATION

Note the following, and install in the reverse order of removal.

Exhaust Manifold Gasket

Install exhaust manifold gasket with its directional protrusion set upward. Refer to "**REMOVAL AND INSTALLATION**".

Exhaust Manifold

- Install exhaust manifold and three way catalyst in numerical order shown in the figure.

- Tighten nuts No. 1 to No. 4 in two steps. Order No. 9 to 12 shows second step.

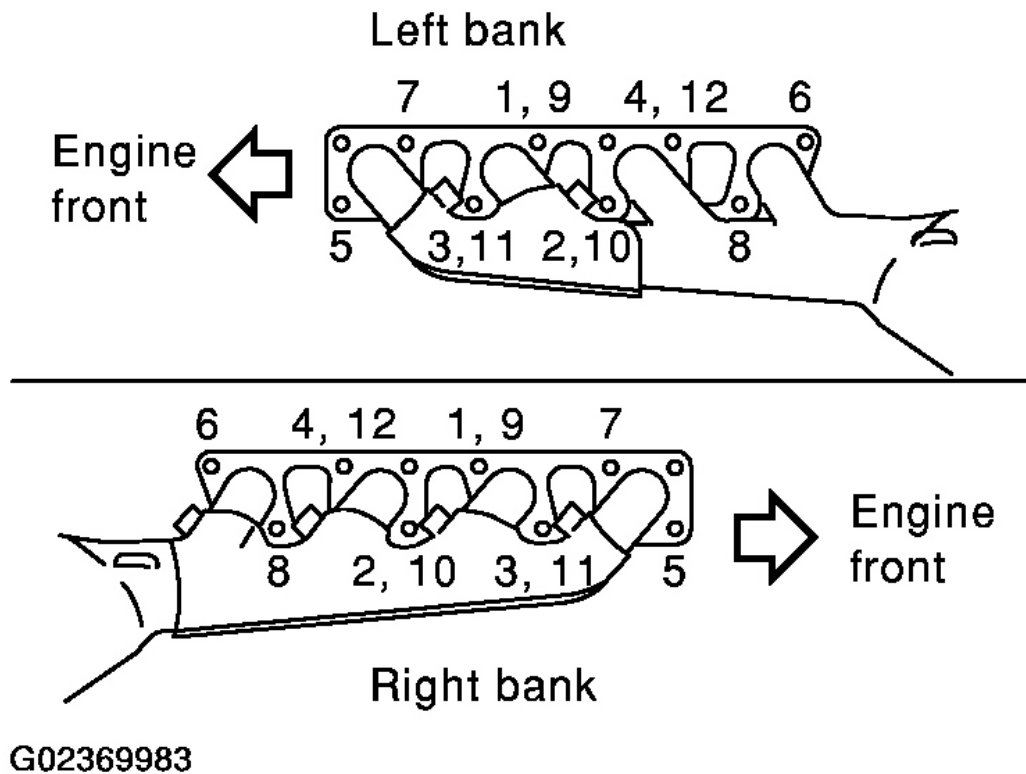


Fig. 30: Identifying Tightening Sequence Of Exhaust Manifold And Three Way Catalyst (Left Bank)

Courtesy of NISSAN MOTOR CO., U.S.A.

Heated Oxygen Sensor

- Install heated oxygen sensors in the original position.
- Install referring the following if the installation positions cannot be identified.

Glass tube color

Heated oxygen sensor 1 ^{*1} : Black

Heated oxygen sensor 2 ^{*2} : White

^{*1} : Length of left bank for heated oxygen sensor is different from right bank.

^{*2} : Refer to "EXHAUST SYSTEM " about heated oxygen sensor 2.

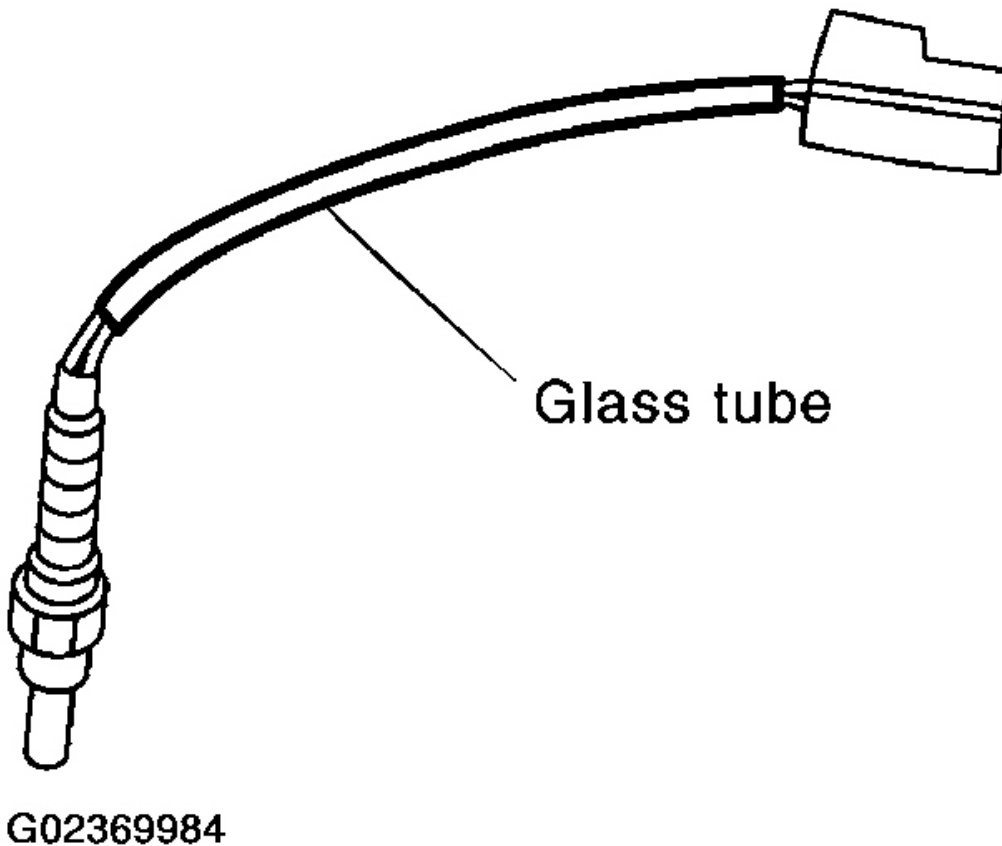


Fig. 31: Identifying Heated Oxygen Sensor And Glass Tube
Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION:

- When using the heated oxygen sensor wrench [SST: KV10114400 (J-38365)], tighten to the middle of specified torque because length of tool may induce slight indication increase. (Do not tighten to the maximum specified torque)
- Before installing new heated oxygen sensor, clean exhaust system threads using the heated oxygen sensor thread cleaner (commercial service tool: J-43897-18 or J-43897-12), and apply antiseize lubricant (commercial service tool).
- Do not over torque the heated oxygen sensor. Doing so may cause damage to the heated oxygen sensor, resulting in the MIL coming on.

OIL PAN AND OIL STRAINER

REMOVAL AND INSTALLATION

SEC. 110•150

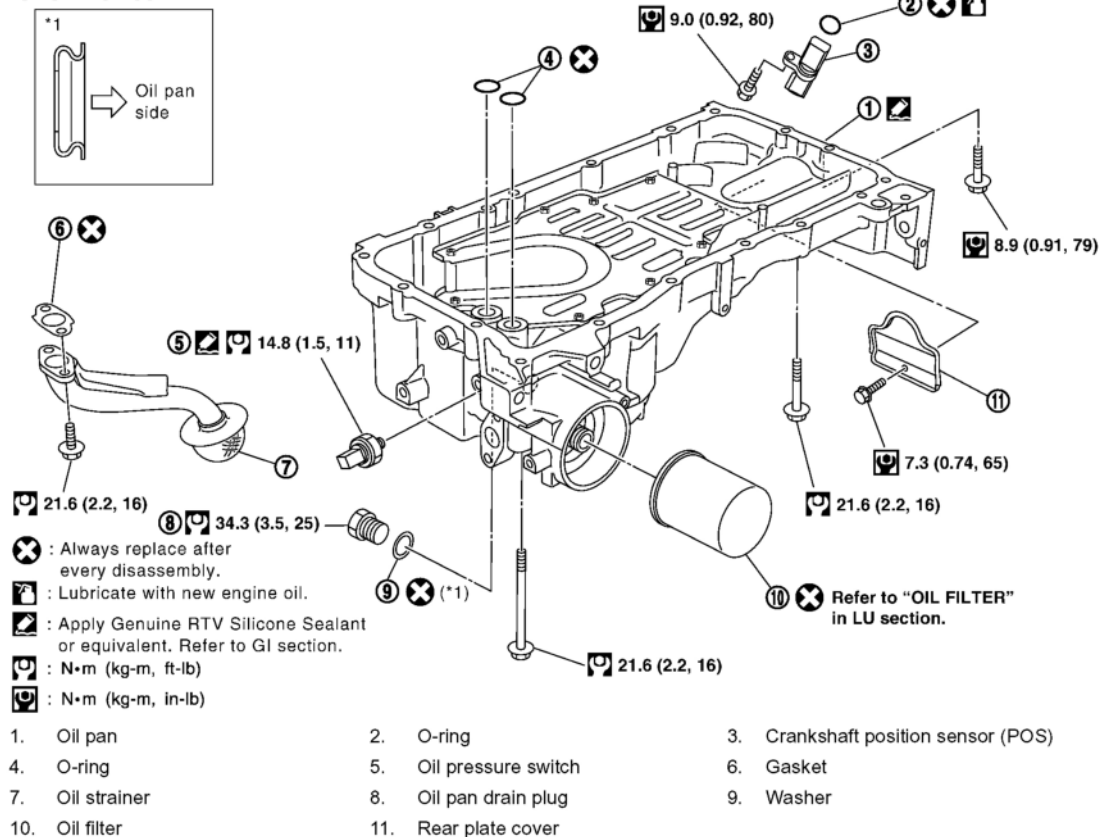


Fig. 32: Removing Oil Pan And Oil Strainer With Torque Specifications
Courtesy of NISSAN MOTOR CO., U.S.A.

REMOVAL

WARNING: To avoid the danger of being scalded, do not drain engine oil when engine is hot.

1. Remove front tires.
2. Remove hood assembly. Refer to "**HOOD**".
3. Remove engine undercover (with power tool).
4. Remove engine cover, battery cover, air duct (inlet) and air cleaner cover. Refer to "**ENGINE ROOM COVER**".
5. Drain engine oil. Refer to "**CHANGING ENGINE OIL**".
6. Remove drive belts. Refer to "**REMOVAL AND INSTALLATION**".
7. Remove auto tensioner of power steering oil pump belt. Refer to "**DRIVE BELT AUTO TENSIONER**".

AND IDLER PULLEY".

8. Move power steering oil pump and remove power steering oil pump bracket.
9. Remove oil filter. Refer to "**REMOVAL AND INSTALLATION**".
10. Remove A/C compressor fitting bolts, and put A/C compressor temporarily on vehicle side with ropes or equivalent. Refer to "**REMOVAL AND INSTALLATION OF COMPRESSOR**".
11. Disconnect harness and wires of lower side of oil pan from oil pan.
12. Remove crankshaft position sensor (POS) from transmission.

CAUTION:

- Do not drop or shock it.
- Do not disassemble it.
- Do not let steel powders contact magnetic parts of sensor tips.
- Do not leave where magnetically effected.

13. Install engine slinger and hang engine assembly to secure position. Refer to "**ENGINE ASSEMBLY**".
14. Remove front suspension member with power tool. Refer to "**FRONT SUSPENSION MEMBER**".
15. Remove oil pan as follows:
 - a. Remove rear plate cover.
 - b. Remove transmission joint bolts (M12: 4 bolts) which pierce oil pan. Refer to "**TRANSMISSION ASSEMBLY**".
 - c. Loosen oil pan bolts with power tool in the reverse order of figure to remove.

NOTE:

Disregard No. 11 and No. 17 when loosening.

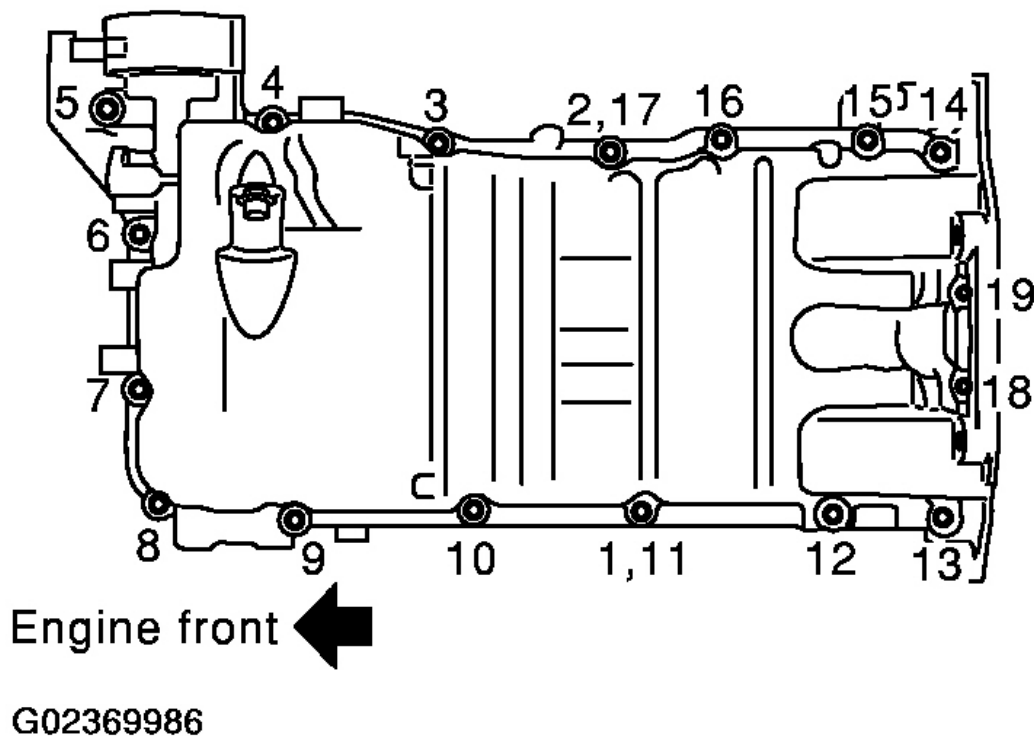



Fig. 33: Identifying Removal Sequence Of Oil Pan Bolts

Courtesy of NISSAN MOTOR CO., U.S.A.

- d. Insert the seal cutter (SST) between oil pan and cylinder block. Slide the seal cutter by tapping on side of the seal cutter with a hammer. Remove oil pan.

CAUTION:

- Be careful not to damage mating surface.
- Do not insert a screwdriver, this will damage the mating surface.

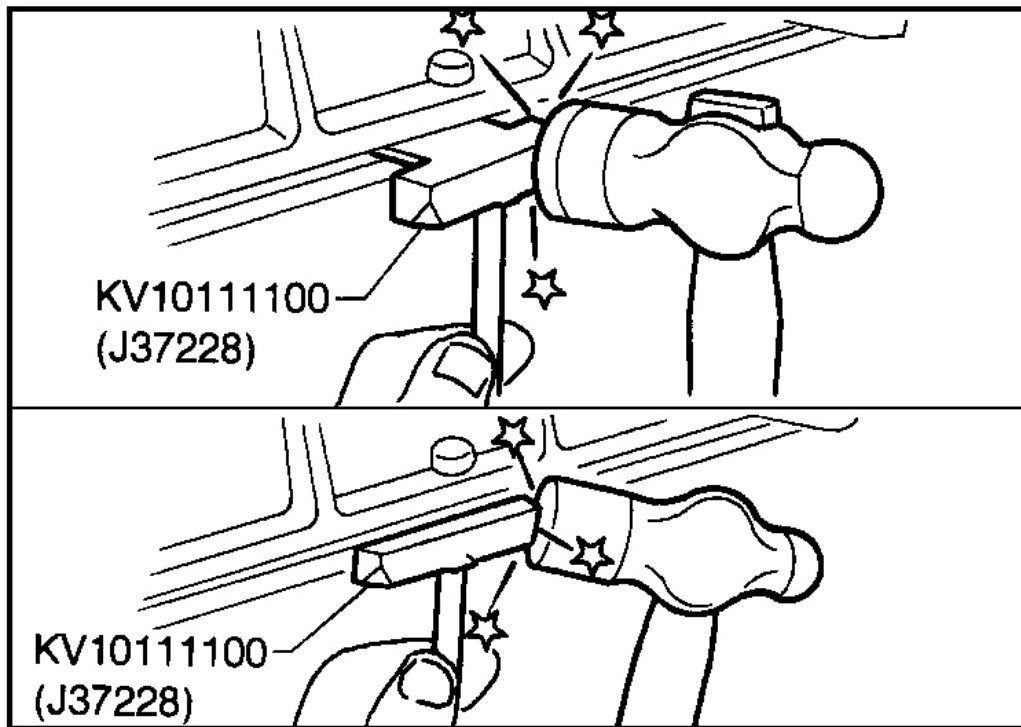

G02369987

Fig. 34: Removing Oil Pan
Courtesy of NISSAN MOTOR CO., U.S.A.

- e. Remove O-rings from bottom of oil pump and front cover.
- 16. Remove oil strainer.

INSPECTION AFTER REMOVAL

Clean oil strainer if any object attached.

INSTALLATION


- 1. Install oil strainer.
- 2. Install oil pan as follows:
 - a. Use scraper to remove old liquid gasket from mating surfaces.
 - Also remove the old liquid gasket from mating surface of cylinder block.
 - Remove old liquid gasket from the bolt holes and threads.

CAUTION: Do not scratch or damage the mating surfaces when cleaning off old liquid gasket.

- b. Apply liquid gasket thoroughly as shown in figure.

Use Genuine RTV Silicone Sealant or equivalent. Refer to "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS".

CAUTION: Attaching should be done within 5 minutes after coating.

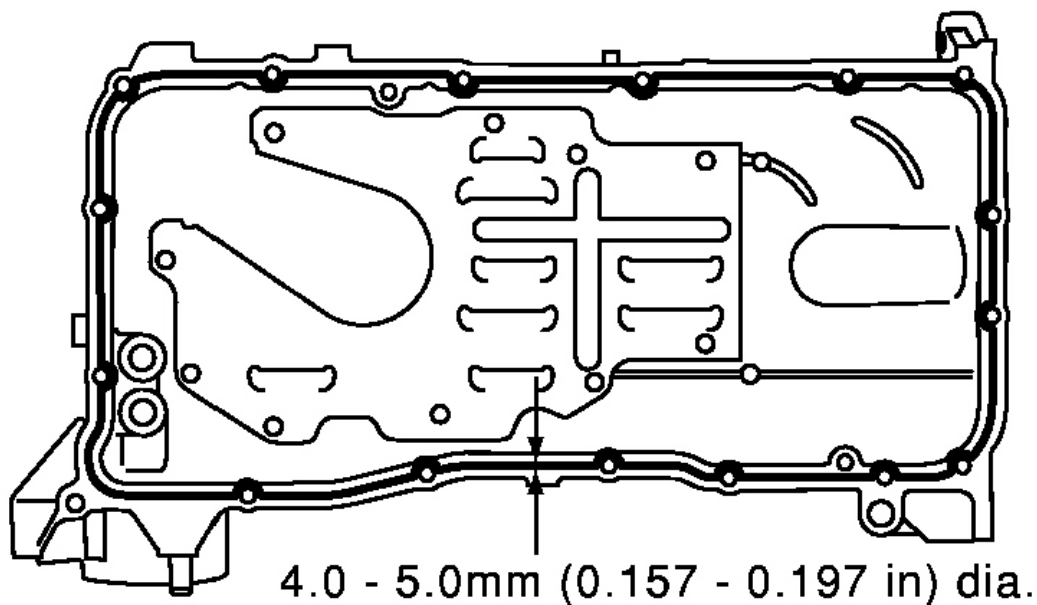

G02369988

Fig. 35: Applying Liquid Gasket To Oil Pan
Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Install new O-ring to oil pump and front cover side.
d. Install oil pan.

CAUTION: Install avoiding misalignment of O-rings.

- Tighten mounting bolts in numerical order as shown in the figure.

NOTE: Tighten mounting bolts No. 1 and 2 in two steps. The numerical order No. 11 and 17 shown second steps.

- There are three types of mounting bolts. Refer to the following for locating bolts.
M6 X 30mm (1.18 in): 18,19
M8 X 100 mm(3.94 in): 5, 9
M8 X 45 mm(1.77 in): Except the above

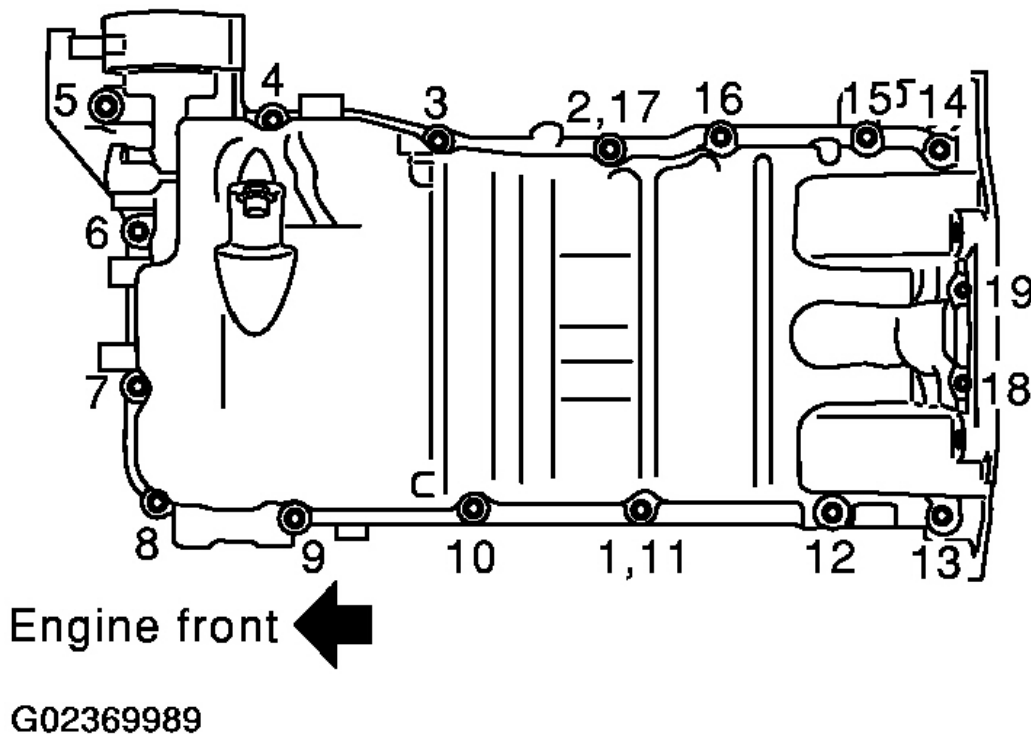


Fig. 36: Identifying Removal Sequence Of Oil Pan Bolts
 Courtesy of NISSAN MOTOR CO., U.S.A.

- Tighten transmission joint bolts. Refer to "TRANSMISSION ASSEMBLY".
 - Install rear plate cover.
- Install oil pan drain plug.
 - Refer to "REMOVAL AND INSTALLATION" for installation direction of washer.
 - Install in the reverse order of removal.

NOTE: Pour engine oil at least 30 minutes after oil pan is installed.

INSPECTION AFTER INSTALLATION

1. Check engine oil level and adjust the level. Refer to "**ENGINE OIL**".
2. Start engine, and make sure there is no leak of engine oil.
3. Stop engine and wait for 15 minutes.
4. Check and adjust engine oil level again. Refer to "**ENGINE OIL**".

IGNITION COIL

REMOVAL AND INSTALLATION

SEC. 111 • 220

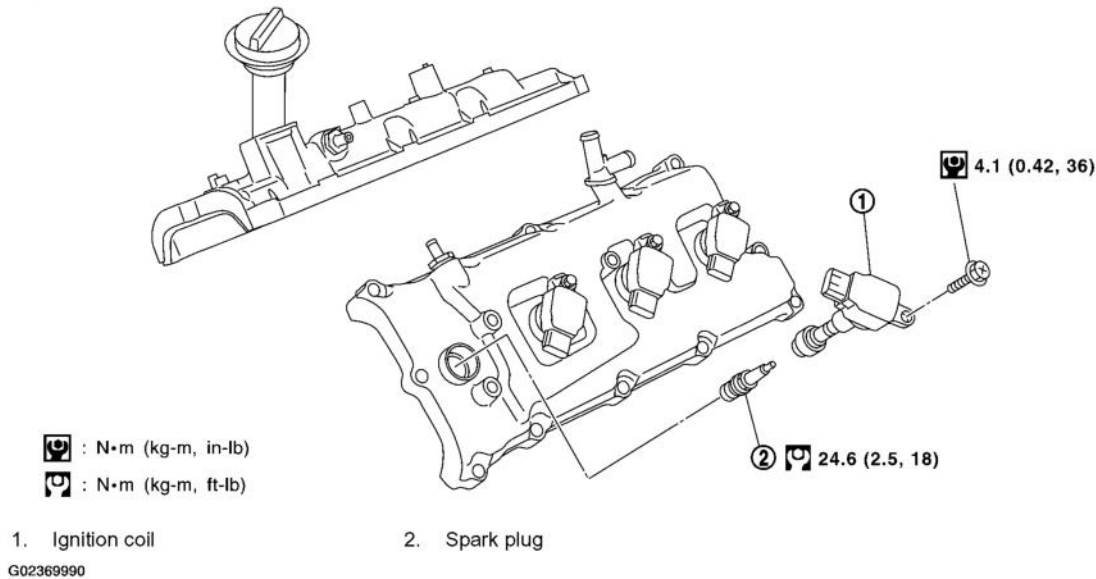


Fig. 37: Removing Ignition Coil With Torque Specifications
Courtesy of NISSAN MOTOR CO., U.S.A.

REMOVAL

1. Remove engine cover (with power tool), air duct (inlet), air cleaner cover and battery cover. Refer to "**ENGINE ROOM COVER**".
2. Remove air duct and air cleaner case assembly. Refer to "**AIR CLEANER AND AIR DUCT**".
3. Move heater hose and its peripheral parts aside. (No. 7 cylinder)
4. Disconnect harness connector from ignition coil.
5. Remove ignition coil.

CAUTION: Do not shock it.


INSTALLATION

Install in the reverse order of removal.

SPARK PLUG (PLATINUM-TIPPED TYPE)**REMOVAL AND INSTALLATION****REMOVAL**


1. Remove ignition coil. Refer to "IGNITION COIL".
2. Remove spark plug with the spark plug wrench (commercial service tool).

CAUTION: Do not drop or shock it.

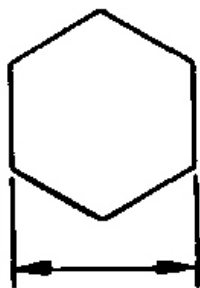

**16 mm
(0.63 in)**

Wrench with a magnet
to hold spark plug

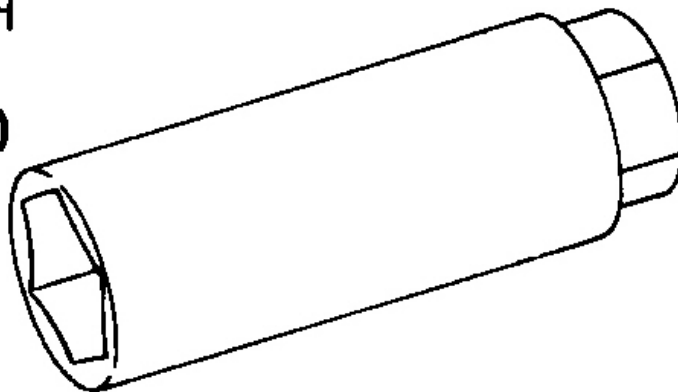

G02369991

Fig. 38: Identifying Spark Plug Wrench
Courtesy of NISSAN MOTOR CO., U.S.A.

INSPECTION AFTER REMOVAL

- Use standard type spark plug for normal condition.

The hot type spark plug is suitable when fouling occurs with the standard type spark plug under conditions such as:

- Frequent engine starts
- Low ambient temperatures

The cold type spark plug is suitable when spark knock occurs with the standard type spark plug under conditions such as:

- Extended highway driving
- Frequent high engine revolution

Spark plug (Platinum-tipped type):

SPARK PLUG (PLATINUM-TIPPED TYPE) SPECIFICATION

Make	NGK
Standard type	PLFR5A-11
Hot type	PLFR4A-11
Cold type	PLFR6A-11

Plug gap (Normal): 1.1 mm (0.043 in)

CAUTION:


- Do not drop or shock spark plug.
- Do not use a wire brush for cleaning.
- If plug tip is covered with carbon, spark plug cleaner may be used.

Cleaner air pressure:

Less than 588 kPa (6 kg/cm² , 85 psi)

Cleaning time:

Less than 20 seconds

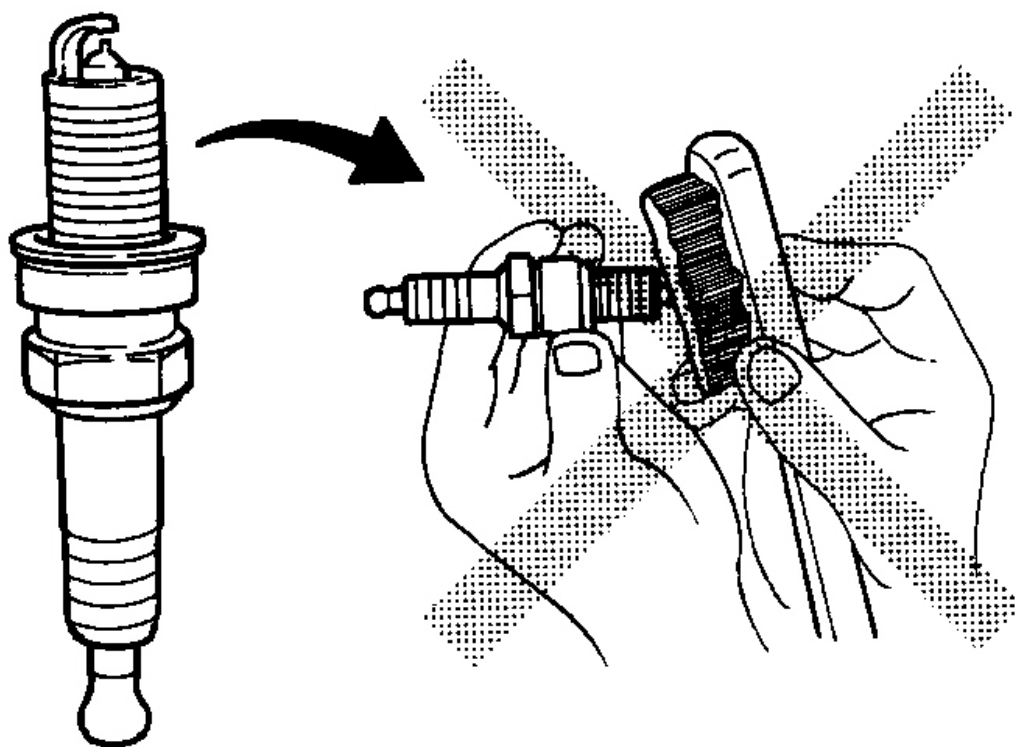


G02369992

Fig. 39: Precaution Do Not Use Wire Brush For Cleaning Spark Plug
Courtesy of NISSAN MOTOR CO., U.S.A.

- Checking and adjusting plug gap is not required between change intervals.

Do not adjust gap.

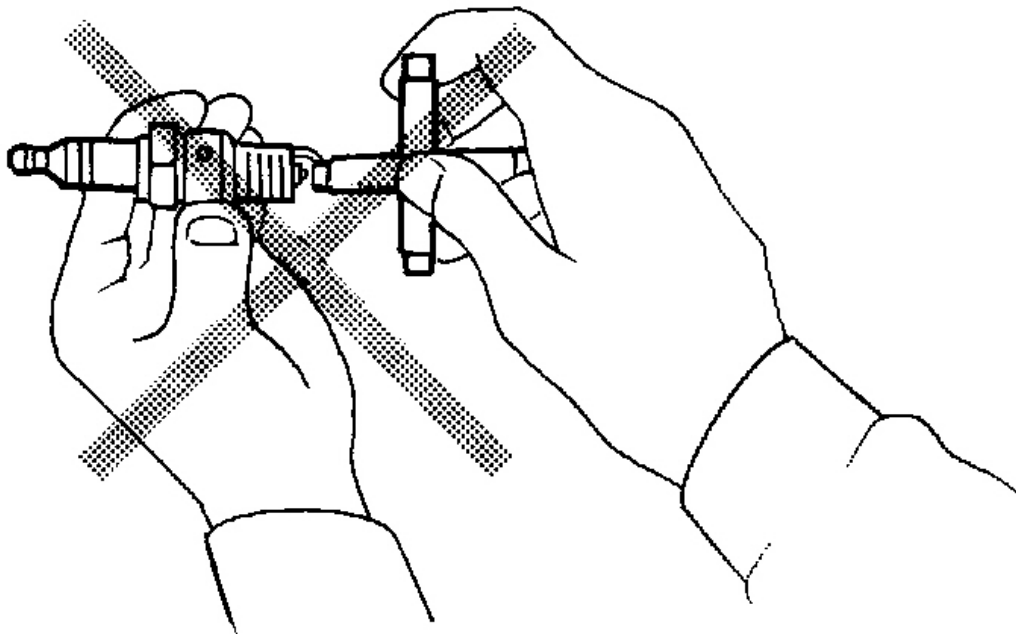

G02369993

Fig. 40: Precaution Checking And Adjusting Plug Gap Not Required Between Change Intervals
Courtesy of NISSAN MOTOR CO., U.S.A.

INSTALLATION

Install in the reverse order of removal.


Spark plug:

:24.6 N.m (2.5 kg-m, 18 ft-lb)

FUEL INJECTOR AND FUEL TUBE

REMOVAL AND INSTALLATION

SEC. 164

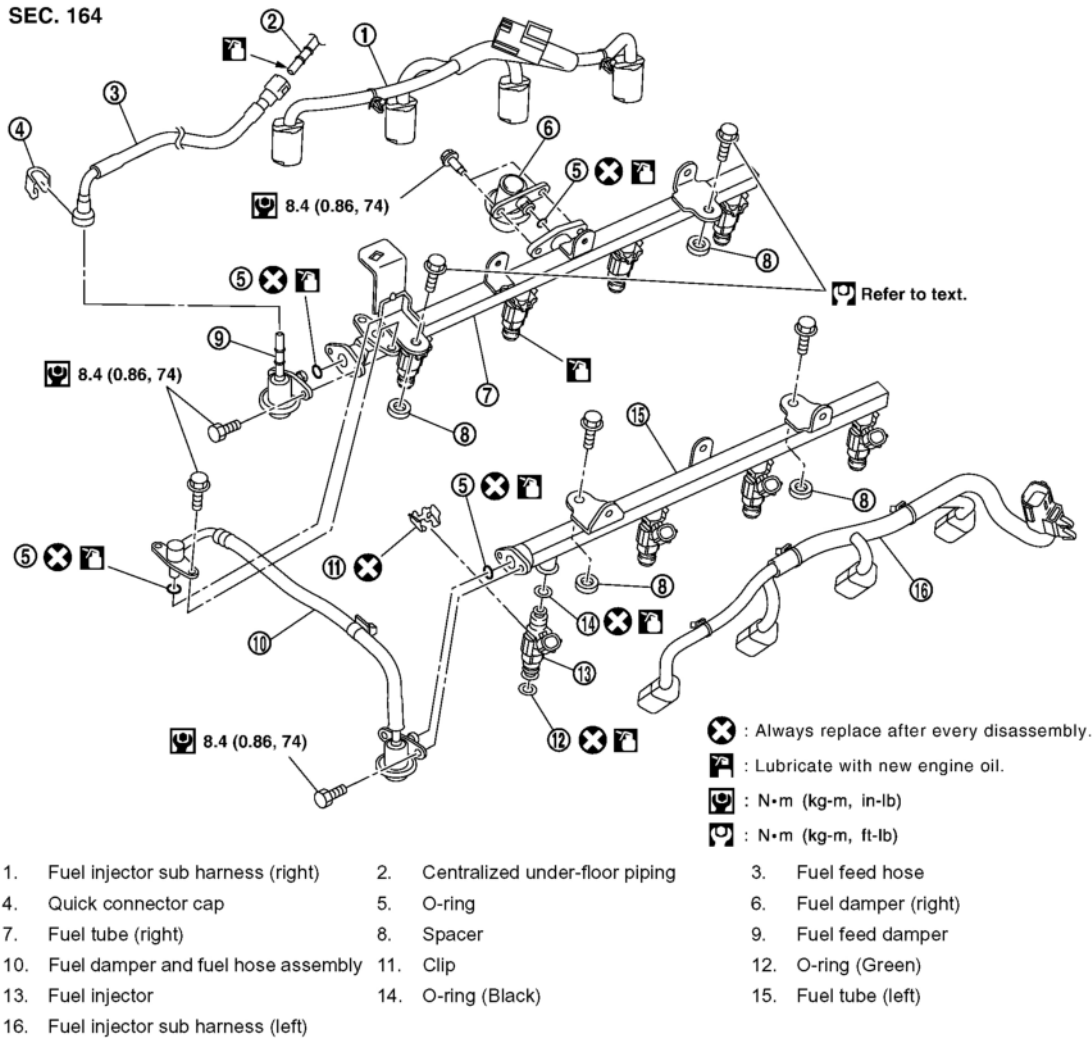

G02369994

Fig. 41: Removing Fuel Injector And Fuel Tube With Torque Specifications


Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION: Do not remove or disassemble parts unless instructed as shown in the figure.

REMOVAL**WARNING:**

- Put a "CAUTION: INFLAMMABLE" sign in the workshop.
- Be sure to work in a well ventilated area and furnish workshop with a CO₂ fire extinguisher.
- Do not smoke while servicing fuel system. Keep open flames and sparks away from the work area.


1. Remove engine cover with power tool. Refer to "**REMOVAL AND INSTALLATION**".
2. Release fuel pressure. Refer to "**FUEL PRESSURE RELEASE**".
3. Disconnect fuel feed hose on engine side with the following: (Excepting to confirm whether or not there is quick connector cap, perform same procedure for the side of centralized under-floor piping as well.)

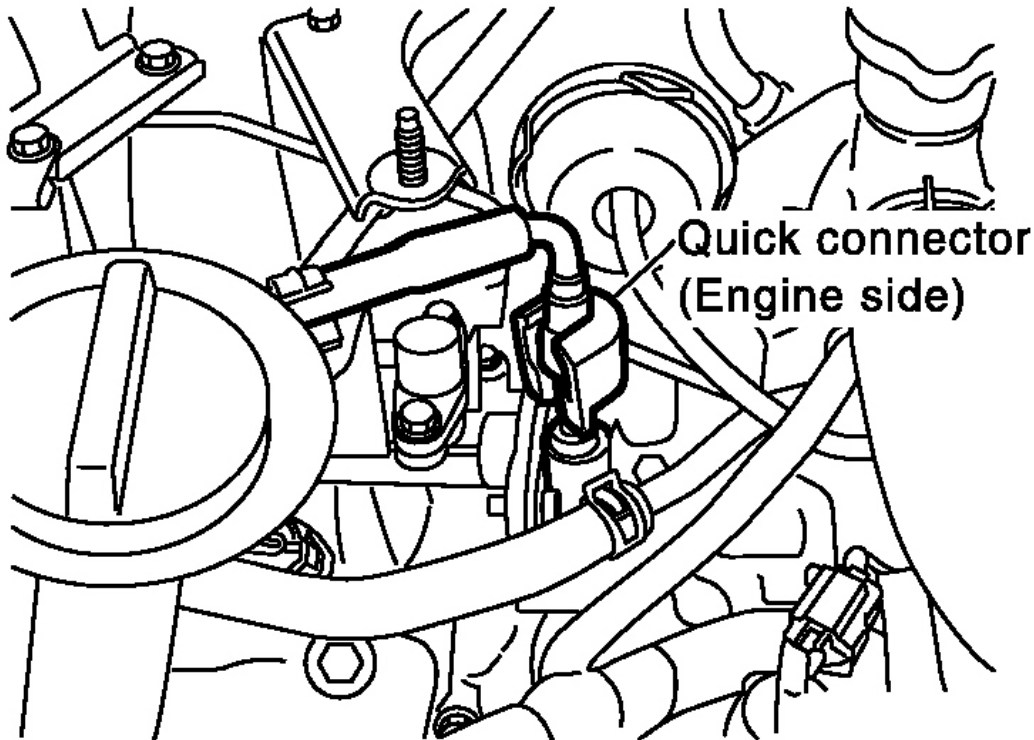

G02369995

Fig. 42: Identifying Quick Connector
Courtesy of NISSAN MOTOR CO., U.S.A.

- a. Remove quick connector cap from quick connector connection. (engine side only)

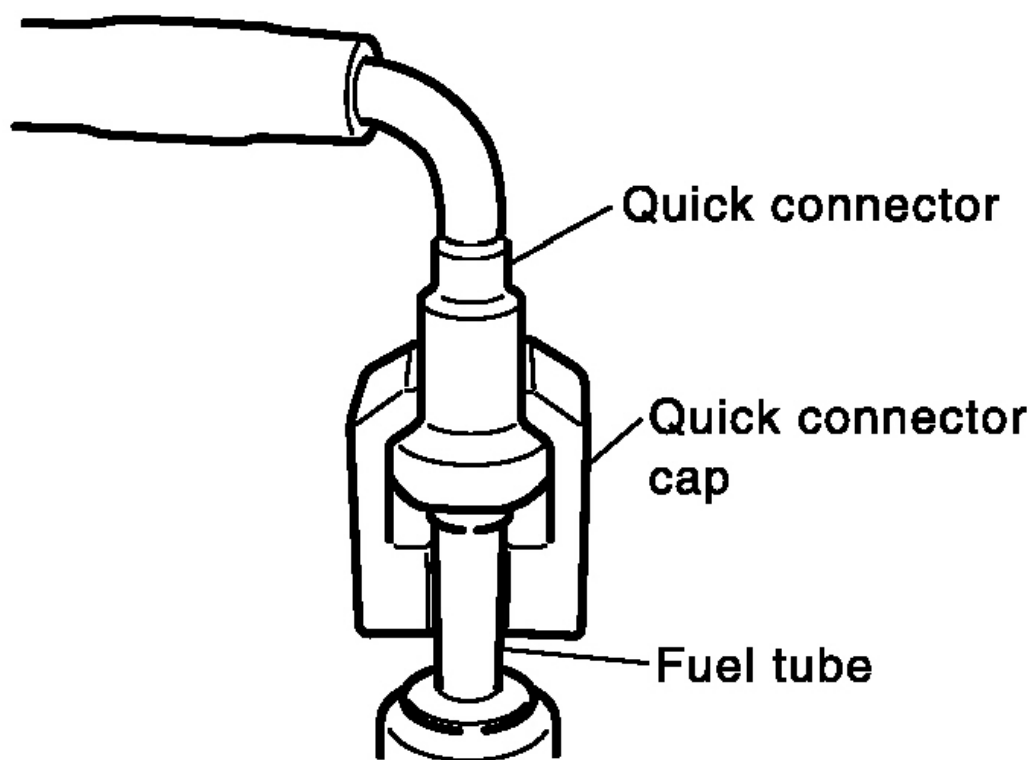

G02369996

Fig. 43: Removing Quick Connector Cap From Quick Connector Connection
Courtesy of NISSAN MOTOR CO., U.S.A.


- b. Disconnect quick connector from fuel tube (fuel feed damper) with the following:

CAUTION: Disconnect quick connector by using the quick connector release (SST: J-45488), not by picking out retainer tabs (centralized under-floor piping side).

- i. With the sleeve side of the quick connector release facing quick connector, install the quick connector release onto fuel tube.
- ii. Insert the quick connector release into quick connector until sleeve contacts and goes no further. Hold the quick connector release on that position.

CAUTION: Inserting the quick connector release hard will not disconnect quick connector. Hold the quick connector release where it contacts and goes no further.

- iii. Draw and pull out quick connector straight from fuel tube.

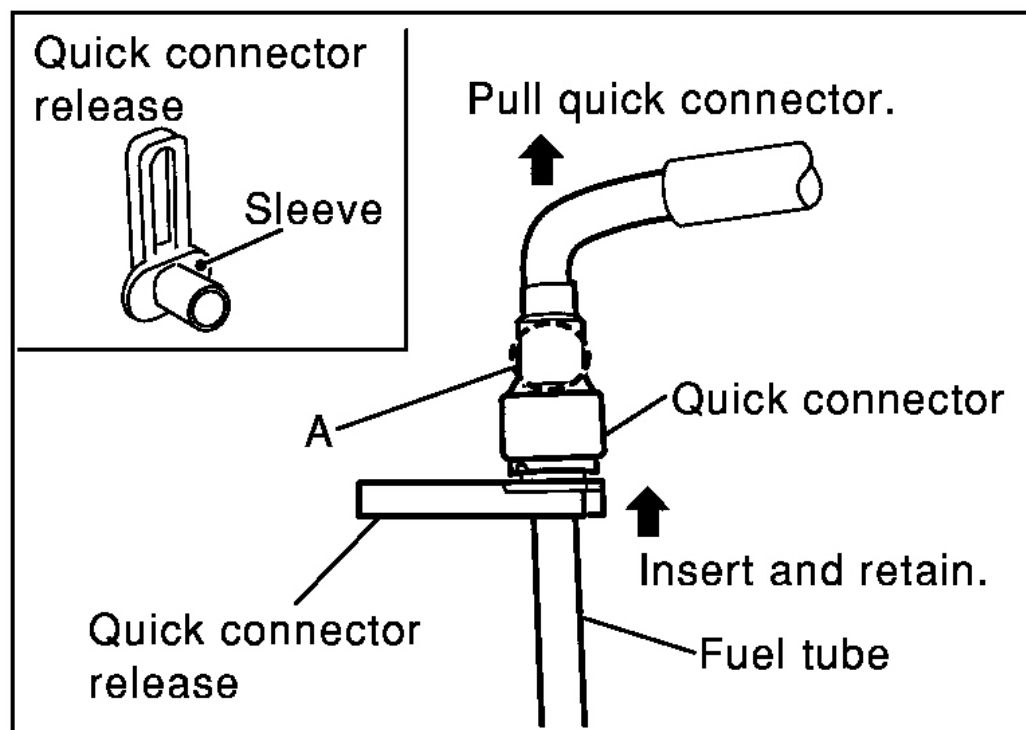

G02369997


Fig. 44: Disconnecting Quick Connector From Fuel Tube
Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION:

- Pull quick connector holding "A" position as shown in the figure.
- Do not pull with lateral force applied. O-ring inside quick connector may be damaged.
- Prepare container and cloth beforehand as fuel will leak out.
- Avoid fire and sparks.
- Keep parts away from heat source. Especially, be careful when welding is performed around them.
- Do not expose parts to battery electrolyte or other acids.
- Do not bend or twist connection between quick

connector and fuel feed hose during installation/removal.

- To keep clean the connecting portion and to avoid damage and foreign materials, cover them completely with plastic bags or something similar.

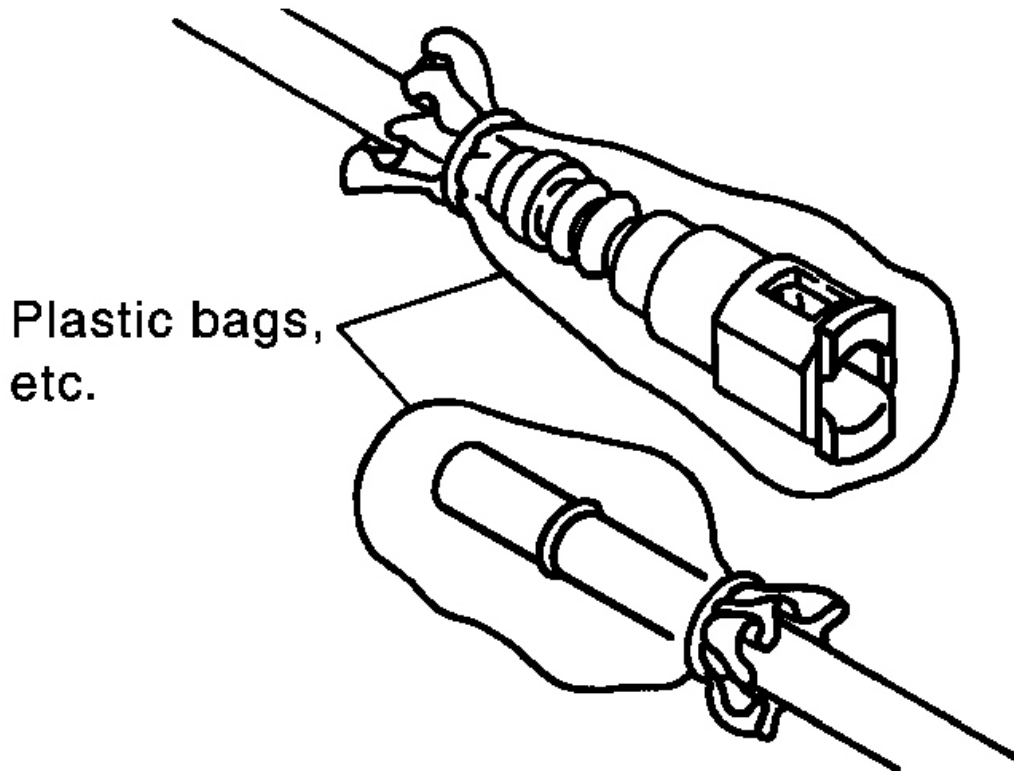

G02369998

Fig. 45: Covering Quick Connector With Plastic Bags
Courtesy of NISSAN MOTOR CO., U.S.A.

4. Disconnect fuel damper and fuel hose assembly from fuel tubes (right and left).

CAUTION:


- While hoses are disconnected, plug them to prevent fuel from draining.
- Do not separate fuel damper and fuel hose assembly.

5. Remove intake manifold (upper) with power tool. Refer to "REMOVAL AND INSTALLATION".

6. Disconnect fuel injector sub harness connector from fuel injector.
7. Loosen mounting bolts "2" to "1" as shown in the figure, and remove fuel tube and fuel injector assembly.

CAUTION:

- When removing, be careful to avoid any interference with fuel injector.
- Use a shop cloth to absorb any fuel leaks from fuel tube.

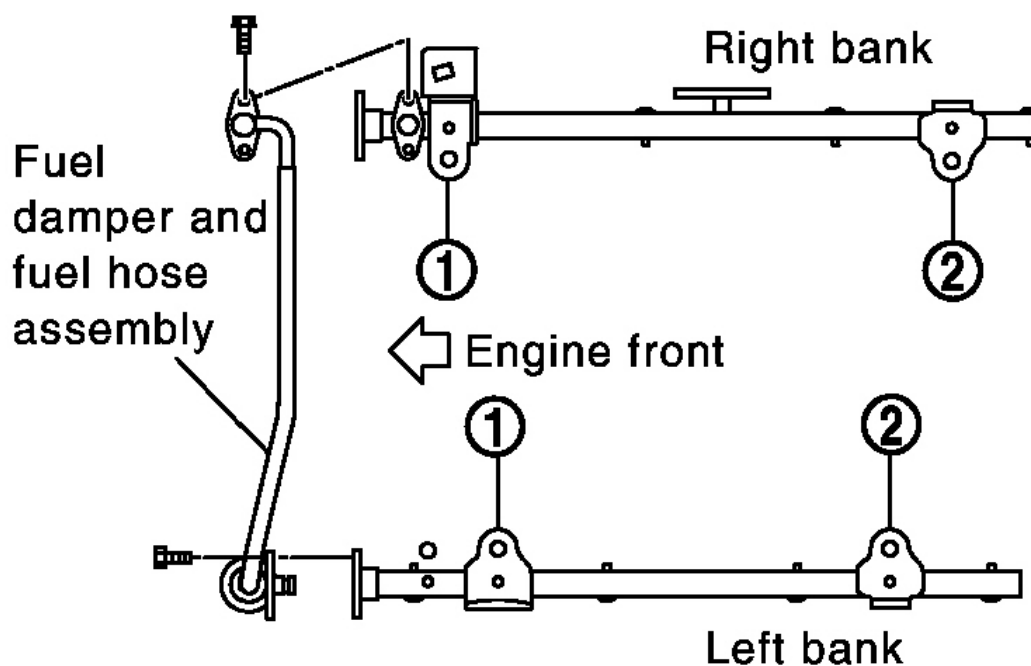

G02369999

Fig. 46: Removing Fuel Tube And Fuel Injector Assembly


Courtesy of NISSAN MOTOR CO., U.S.A.

8. Remove spacers on intake manifold (lower).
9. Remove fuel injector from fuel tube with the following:
 - a. Open and remove clip.
 - b. Remove fuel injector from fuel tube by pulling straight.

CAUTION:

- Be careful with remaining fuel that may go out from fuel tube.
- Be careful not to damage injector nozzles during removal.

- Do not bump or drop fuel injectors.
- Do not disassemble fuel injectors.

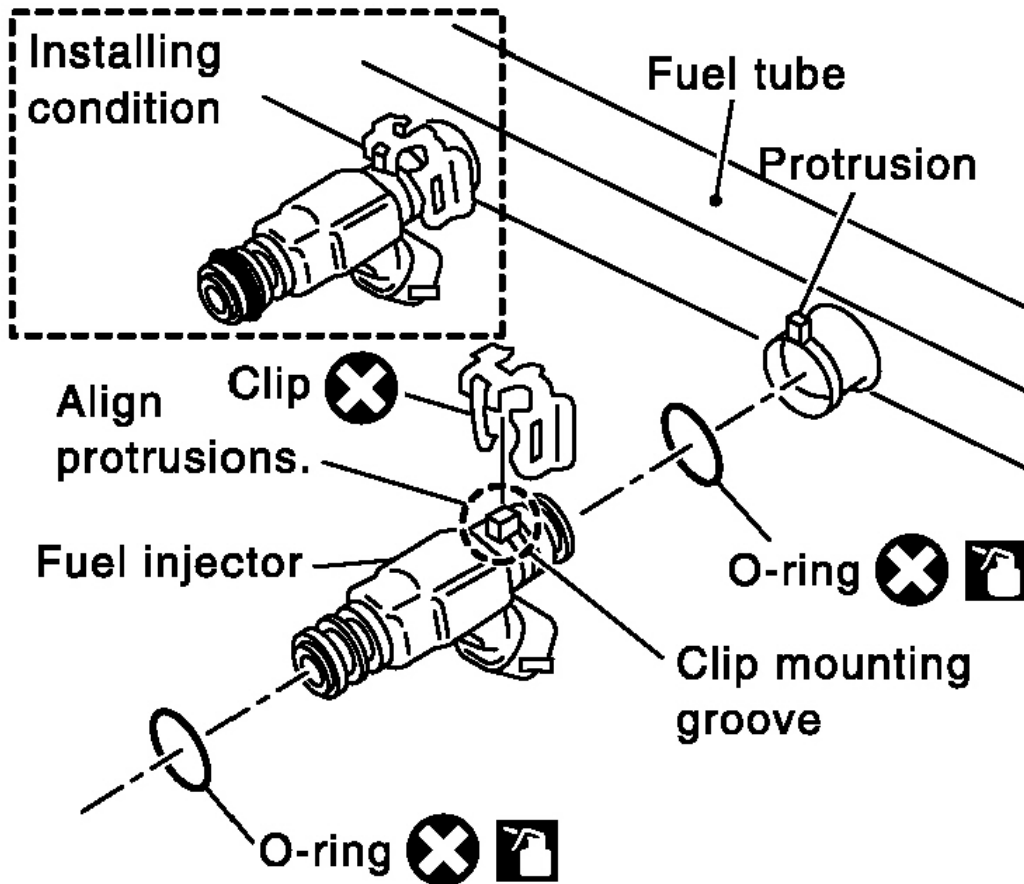

⊗ : Always replace after every disassembly.



: Lubricate with new engine oil.

G02370000

Fig. 47: Removing Fuel Injector From Fuel Tube
Courtesy of NISSAN MOTOR CO., U.S.A.

10. Remove fuel damper (right) and fuel feed damper.

INSTALLATION

1. Install fuel damper (right) and fuel feed damper.
 - When handling O-rings, be careful of the following:

CAUTION:

- **Handle O-ring with bare hands. Do not wear gloves.**
- **Lubricate O-ring with new engine oil.**
- **Do not clean O-ring with solvent.**
- **Make sure that O-ring and its mating part are free of foreign material.**
- **When installing O-ring, be careful not to scratch it with tool or fingernails. Also be careful not to twist or stretch O-ring. If O-ring was stretched while it was being attached, do not insert it quickly into fuel tube.**
- **Insert O-ring straight into fuel tube. Do not de-center or twist it.**

- Insert fuel damper (right) and fuel feed damper straight into fuel tube (right).
 - Tighten mounting bolts evenly in turn.
 - After tightening mounting bolts, make sure that there is no gap between flange and fuel tube (right).
2. Install O-rings to fuel injector paying attention to the items below.

CAUTION:

- **Upper and lower O-ring are different. Be careful not to confuse them.**

Fuel tube side: Black

Nozzle side: Green

- **Handle O-ring with bare hands. Do not wear gloves.**
- **Lubricate O-ring with new engine oil.**
- **Do not clean O-ring with solvent.**
- **Make sure that O-ring and its mating part are free of foreign material.**
- **When installing O-ring, be careful not to scratch it with tool or fingernails. Also be careful not to twist or stretch O-ring. If O-ring was stretched while it was being attached, do not insert it quickly into fuel tube.**
- **Insert O-ring straight into fuel tube. Do not de-center or twist it.**


3. Install fuel injector to fuel tube with the following:

- a. Insert clip into clip mounting groove on fuel injector.
 - Insert clip so that lug "A" of fuel injector matches notch "A" of the clip.

CAUTION:

- **Do not reuse clip. Replace it with a new one.**
- **Be careful to keep clip from interfering with O-ring. If interference occurs, replace O-ring.**

- b. Insert fuel injector into fuel tube with clip attached.
 - Insert it while matching it to the axial center.
 - Insert fuel injector so that lug "B" of fuel tube matches notch "B" of the clip.
 - Make sure that fuel tube flange is securely fixed in flange fixing groove on clip.
- c. Make sure that installation is complete by making sure that fuel injector does not rotate or come off.
 - Make sure that protrusions of fuel injectors are aligned with notch of clips after installation.

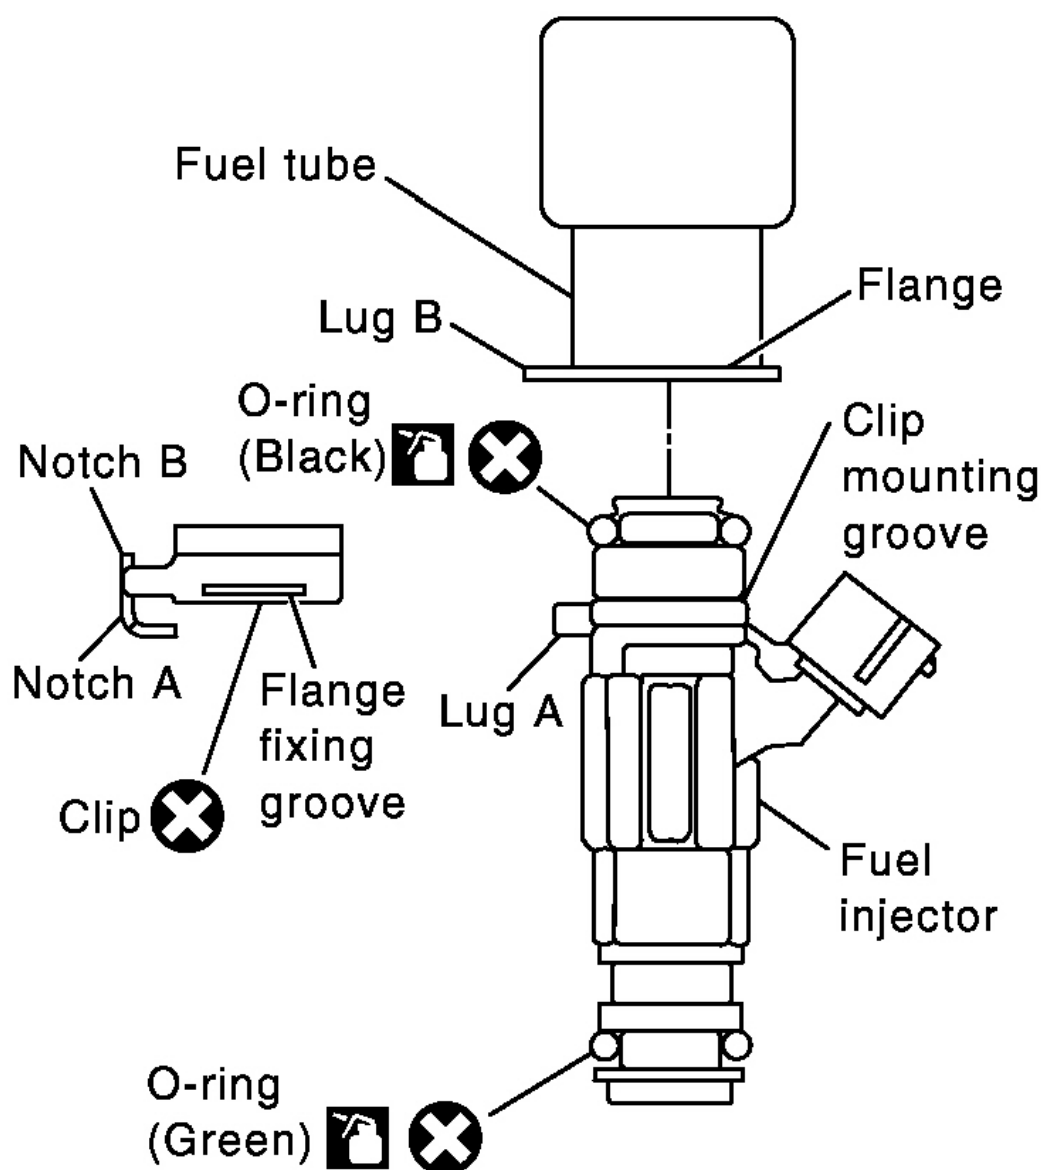

: Lubricate with new engine oil.



: Always replace after every disassembly.

G02370001

Fig. 48: Installing Fuel Injector To Fuel Tube

Courtesy of NISSAN MOTOR CO., U.S.A.


4. Install spacers on intake manifold (lower).
5. Install fuel tube and fuel injector assembly to intake manifold.

CAUTION: Be careful not to let tip of injector nozzle come in contact with other parts.

- Tighten mounting bolts "1" to "2" as shown in the figure and in two steps.

1st step: 10.1 N.m (1.0 kg-m, 7 ft-lb)

2nd step: 23.5 N.m (2.4 kg-m, 17 ft-lb)

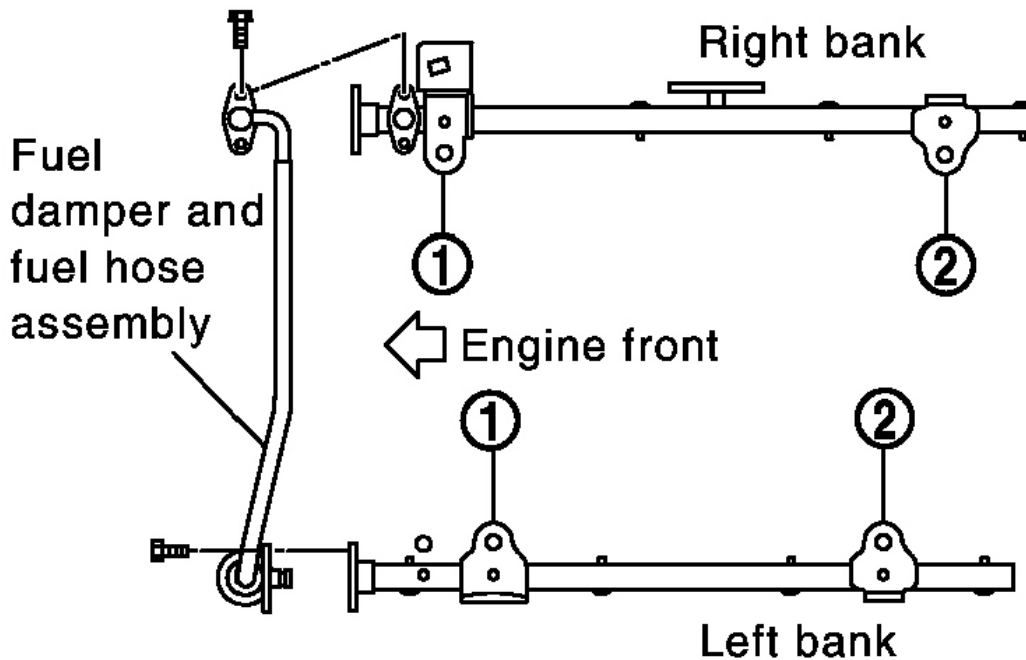

G02370002


Fig. 49: Installing Fuel Tube And Fuel Injector Assembly
Courtesy of NISSAN MOTOR CO., U.S.A.

6. Connect fuel feed hose on engine side with the following: (Excepting to confirm whether or not there is quick connector cap, perform same procedure for the side of centralized under-floor piping as well.)
 - a. Make sure no foreign substances are deposited in and around fuel tube (fuel feed damper) and quick connector, and no damage on them.
 - b. Thinly apply new engine oil around fuel tube from tip end to spool end.

- c. Align center to insert quick connector straightly into fuel tube.
- Insert fuel tube into quick connector until top spool is completely inside quick connector, and 2nd level spool exposes right below quick connector.
 - Hold "A" position as shown in the figure when inserting fuel tube into quick connector.

CAUTION:

- Carefully align center to avoid inclined insertion to prevent damage to O-ring inside quick connector.
- Insert until you hear a "click" sound and actually feel the engagement.
- To avoid misidentification of engagement with a similar sound, be sure to perform the next step.

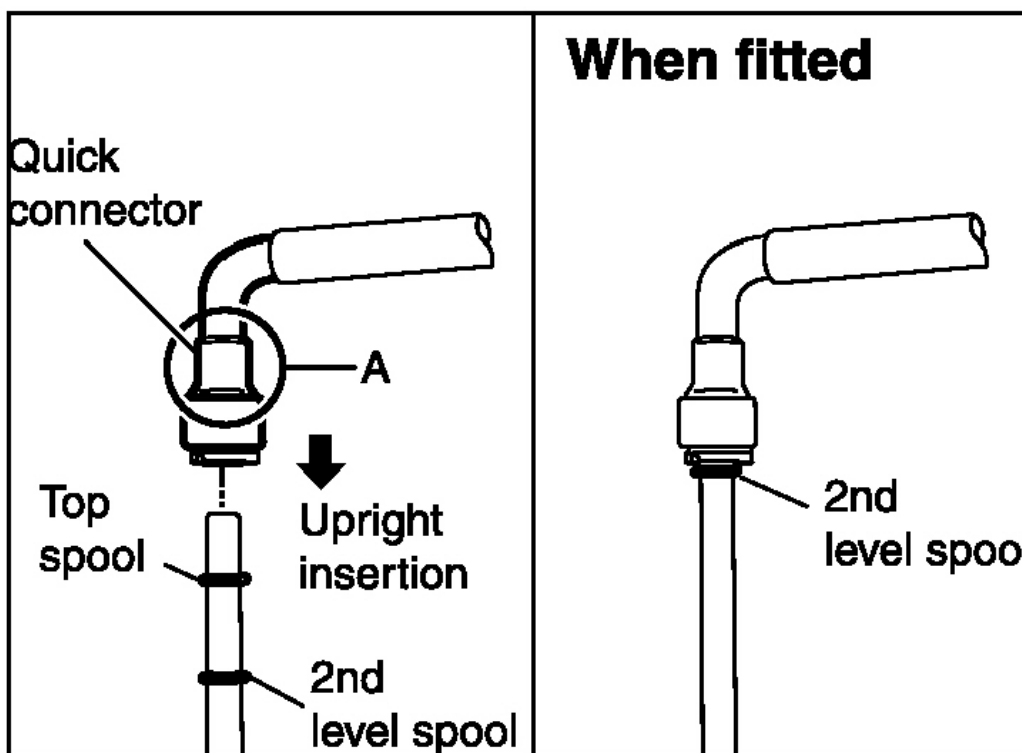


G02370003

Fig. 50: Inserting Fuel Tube Into Quick Connector
Courtesy of NISSAN MOTOR CO., U.S.A.

- d. Pull quick connector by hand holding "A" position. Make sure it is completely engaged (connected) so that it does not come out from fuel tube.

- e. Install quick connector cap on quick connector connection. (on engine side only).
- f. Install fuel feed hose to hose clamps.

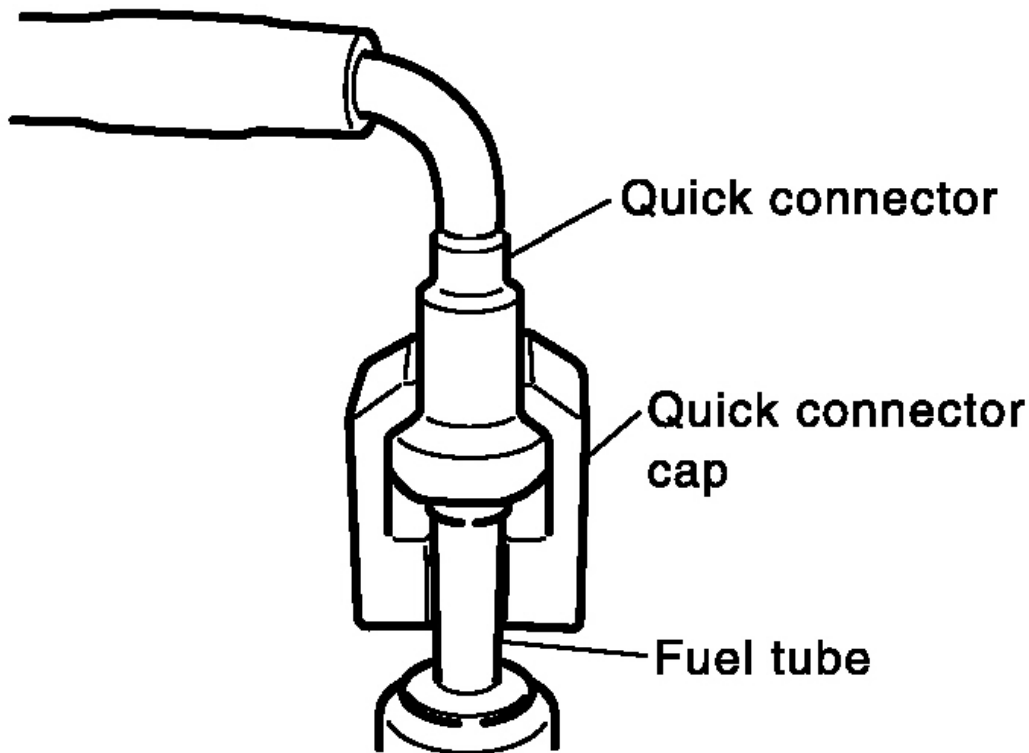

G02370004

Fig. 51: Installing Quick Connector Cap On Quick Connector Connection
Courtesy of NISSAN MOTOR CO., U.S.A.

- 7. Install in the reverse order of removal.

INSPECTION AFTER INSTALLATION

Check on Fuel Leakage

- 1. Turn ignition switch "ON" (with engine stopped). With fuel pressure applied to fuel piping, check for fuel leakage at connection points.

NOTE: Use mirrors for checking at points out of clear sight.

- 2. Start engine. With engine speed increased, check again for fuel leakage at connection points.

CAUTION: Do not touch engine immediately after stopped, as engine becomes extremely hot.

ROCKER COVER

REMOVAL AND INSTALLATION

SEC. 111•118

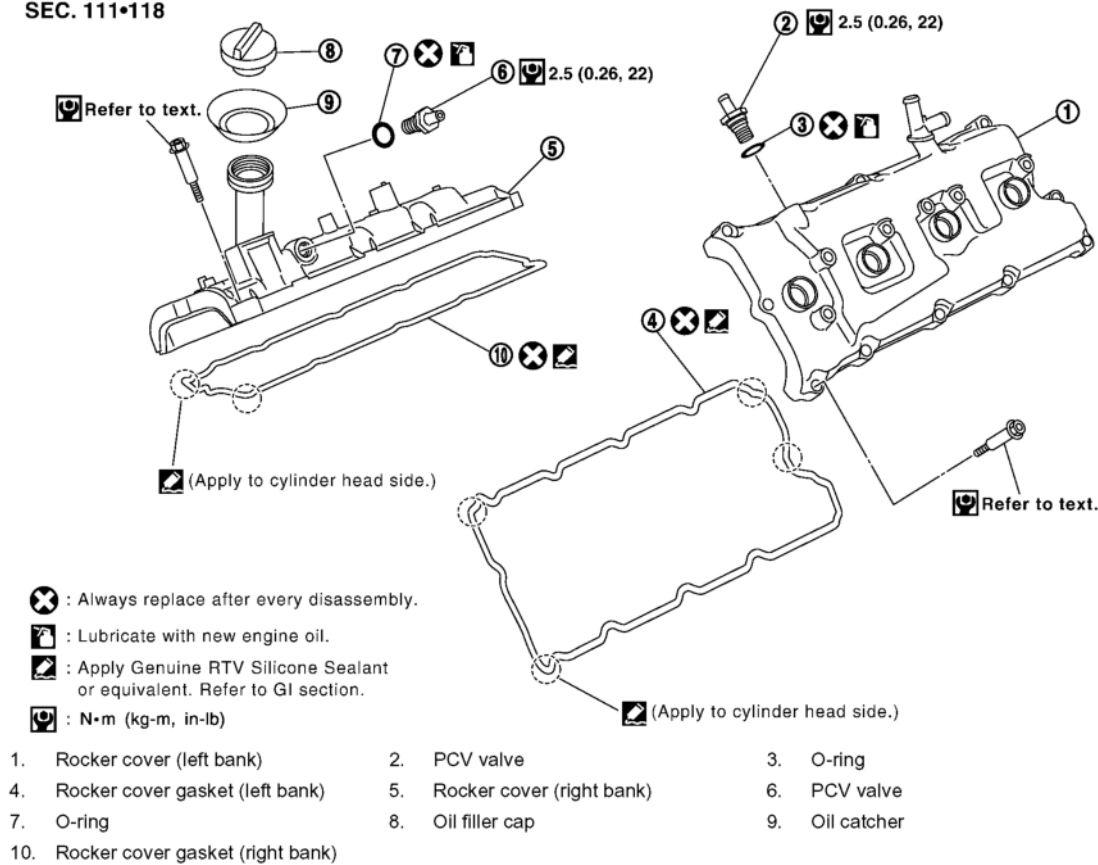



Fig. 52: Removing Rocker Cover With Torque Specifications
 Courtesy of NISSAN MOTOR CO., U.S.A.

REMOVAL

1. Refer to the following for removal works related to left-bank.
 - a. Remove engine cover (with power tool) and air cleaner cover. Refer to "**REMOVAL AND INSTALLATION**".
 - b. Remove air duct (inlet), air duct and air cleaner case assembly. Refer to "**REMOVAL AND INSTALLATION**".
 - c. Remove bracket (installation parts for No.6 camshaft bracket). Refer to "**CAMSHAFT**".

- d. Move harness on upper rocker cover and its peripheral aside
 - e. Remove ignition coil. Refer to "**REMOVAL AND INSTALLATION**".
 - f. Remove PCV valve hose from PCV valve.
2. Refer to the following for removal works related to right-bank.
 - a. Remove engine cover (with power tool) and battery cover. Refer to "**REMOVAL AND INSTALLATION**".
 - b. Move harness on upper rocker cover and its peripheral aside.
 - c. Remove ignition coil "**REMOVAL AND INSTALLATION**".
 - d. Remove PCV valve hose from PCV valve.
 3. Remove PCV valves and O-rings from rocker covers (right and left bank), if necessary.
 4. Remove oil filler cap and oil catcher from rocker cover (right bank), if necessary.
 5. Loosen bolts in the reverse order shown in the figure (with power tool).

CAUTION: Do not hold oil filler neck (right bank) not to damage it.

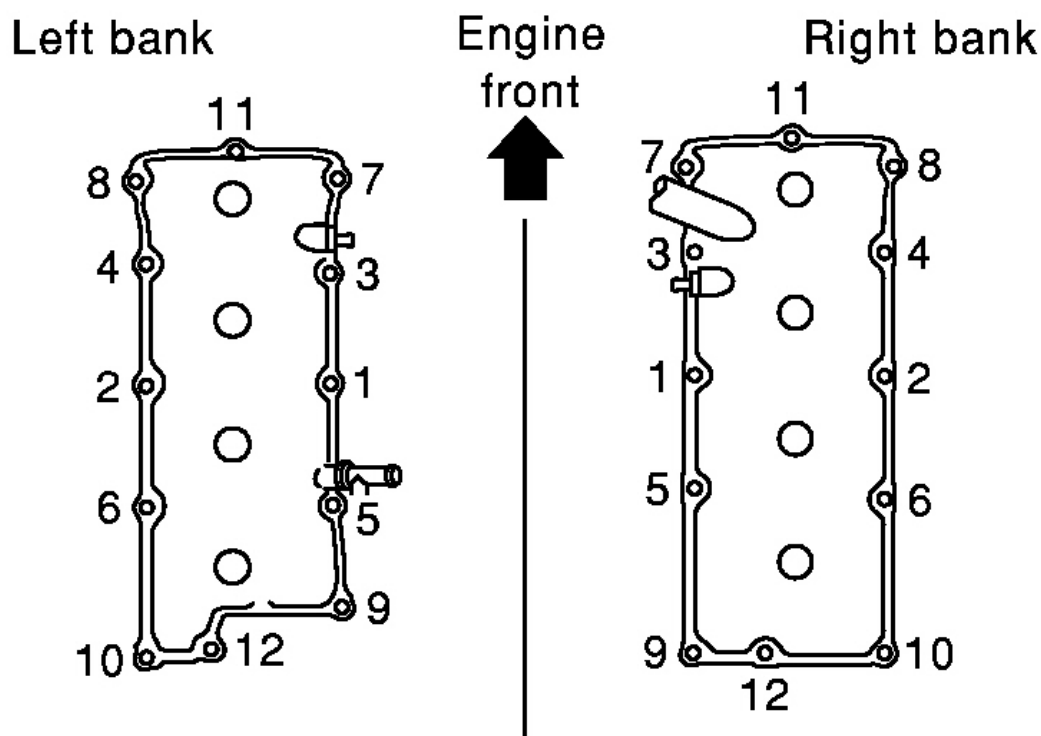

G02370006

Fig. 53: Identifying Removal Sequence Of Rocker Cover Bolts
Courtesy of NISSAN MOTOR CO., U.S.A.

6. Remove rocker cover gaskets from rocker covers (right and left bank).
7. Use scraper to remove all traces of liquid gasket from cylinder head and camshaft bracket (No. 1 and 6).

CAUTION: Do not scratch or damage the mating surface when cleaning off oil liquid gasket.


INSTALLATION

1. Apply liquid gasket to joint part of cylinder head and camshaft bracket as follows:

NOTE: Figure shows an example of left-bank side (zoomed in shows No.1 camshaft bracket). Apply only to No.1 camshaft bracket for right-bank side.

- a. Refer to figure "a" to apply liquid gasket to joint part of No.1 and No.6 camshaft bracket and cylinder head.
- b. Refer to figure "b" to apply liquid gasket in 90 degrees to figure "a".

Use Genuine RTV Silicone Sealant or equivalent. Refer to "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS".

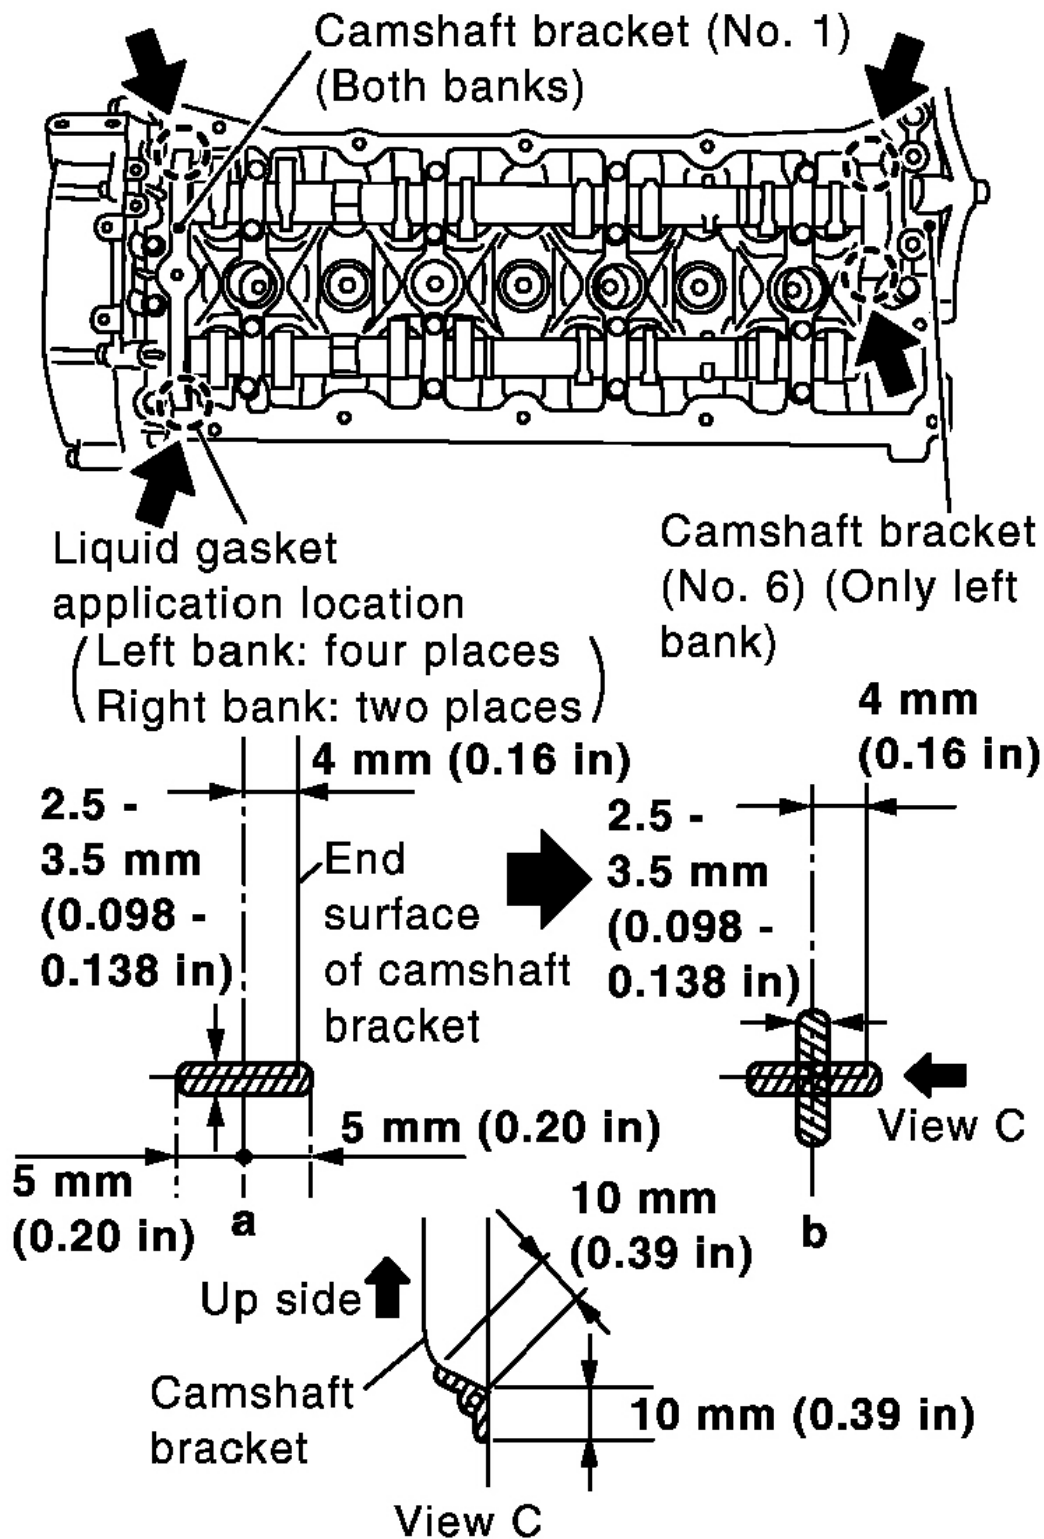

G02370007

Fig. 54: Applying Liquid Gasket To Joint Part Of Cylinder Head And Camshaft Bracket
Courtesy of NISSAN MOTOR CO., U.S.A.

2. Install rocker cover.
 - Check if rocker cover gasket is not dropped from installation groove of rocker cover.
3. Tighten bolts in two steps separately in numerical order as shown in the figure.


CAUTION: Do not hold oil filler neck (right bank) not to damage it.

1st step

:2.0 N.m (0.2 kg-m, 18 in-lb)

2nd step

:8.3 N.m (0.85 kg-m, 73 in-lb)

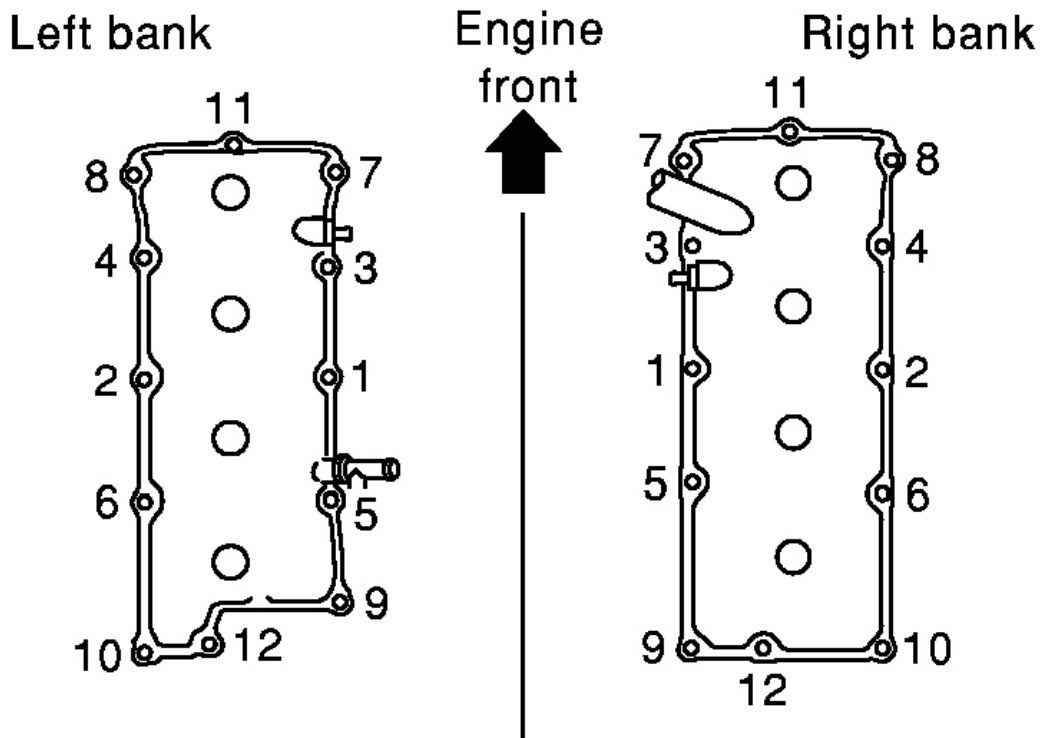

G02370008


Fig. 55: Identifying Tightening Sequence Of Rocker Cover Bolts
Courtesy of NISSAN MOTOR CO., U.S.A.

4. Install in the reverse order of removal.

TIMING CHAIN

REMOVAL AND INSTALLATION

SEC. 120•130•135•221

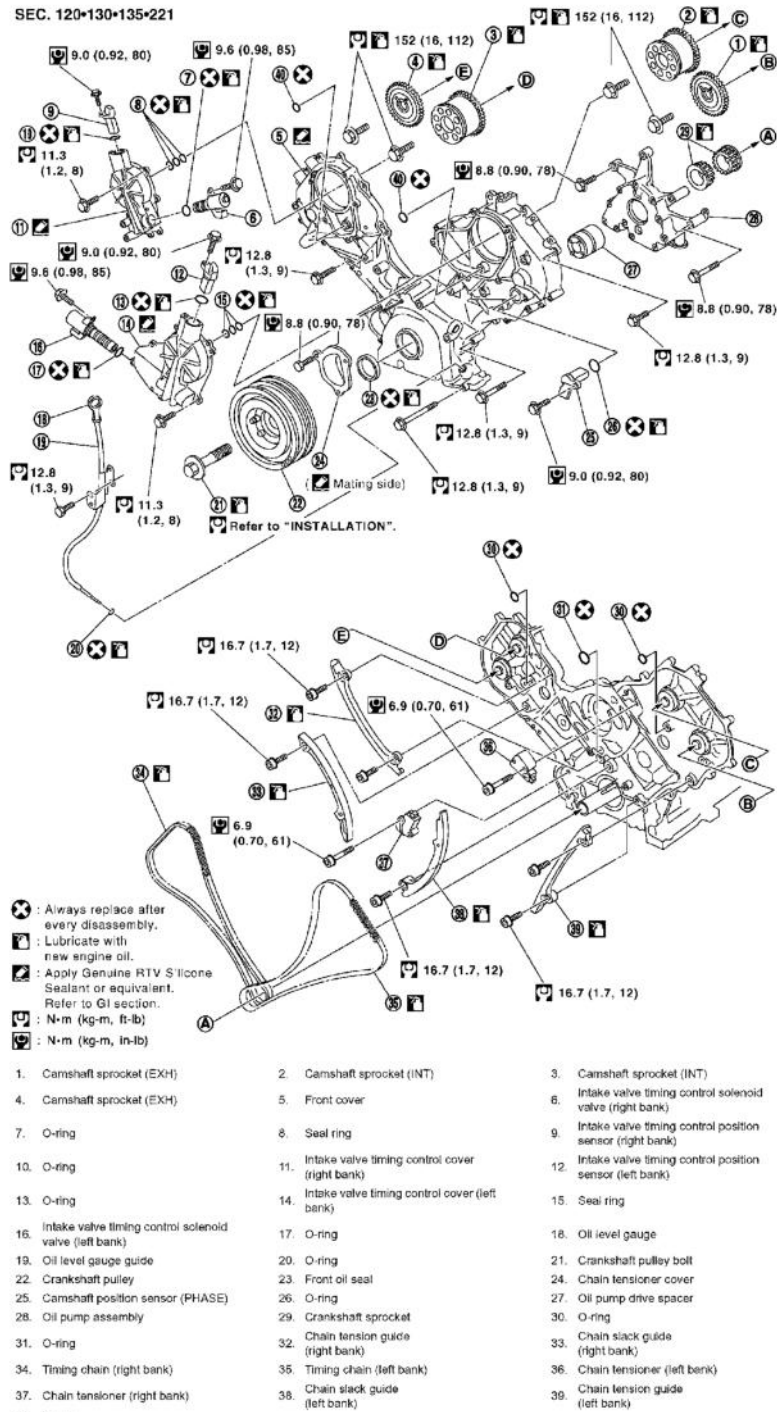

G02370009

Fig. 56: Removing Timing Chain With Torque Specifications
 Courtesy of NISSAN MOTOR CO., U.S.A.

REMOVAL

1. Remove engine assembly from vehicle. Refer to "**ENGINE ASSEMBLY**".
2. Remove the following components and related parts:
 - Drive belt auto tensioner and idler pulley; Refer to "**DRIVE BELT AUTO TENSIONER AND IDLER PULLEY**".
 - Thermostat housing and hoses; Refer to "**REMOVAL AND INSTALLATION**".
 - Ignition coil; Refer to "**REMOVAL AND INSTALLATION**".
 - Rocker cover; Refer to "**REMOVAL AND INSTALLATION**".
3. If necessary, remove intake valve timing control position sensor (right and left bank) and camshaft position sensor (PHASE) from intake valve timing control cover and front cover.

CAUTION:

- Handle components and parts carefully to avoid dropping and shocks.
- Do not disassemble.

4. If necessary, remove intake valve timing control solenoid valve from intake valve timing control cover.

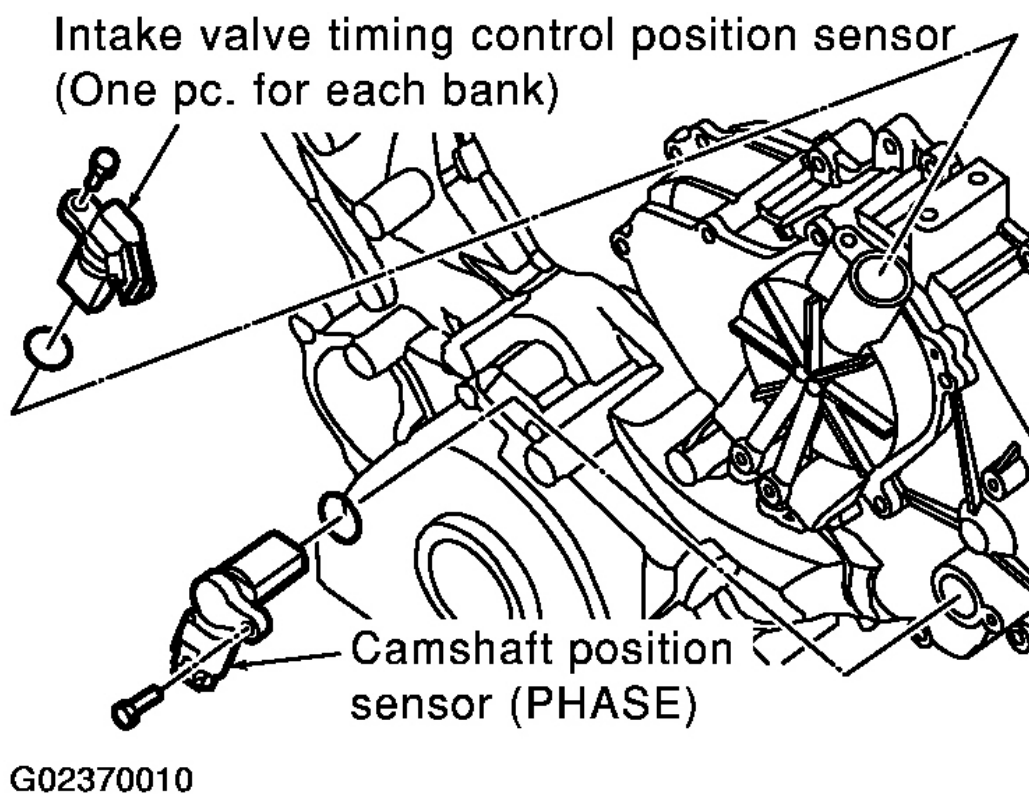


Fig. 57: Removing Intake Valve Timing Control Position Sensor And Camshaft Position Sensor

(PHASE)

Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION:


- Handle components and parts carefully to avoid dropping and shocks.
- Do not disassemble.

5. Remove intake valve timing control cover as follows:

- a. Loosen and remove fixing bolts in reverse order of that shown in figure.
- b. Use the seal cutter [SST: KV10111100 (J-37228)] or the equivalent to cut liquid gasket for removal.

CAUTION:

- Be careful not to damage mating surfaces.
- Pull out cover keeping levelness without an angle, as inner part of cover is engaged with the center of camshaft sprocket (INT).

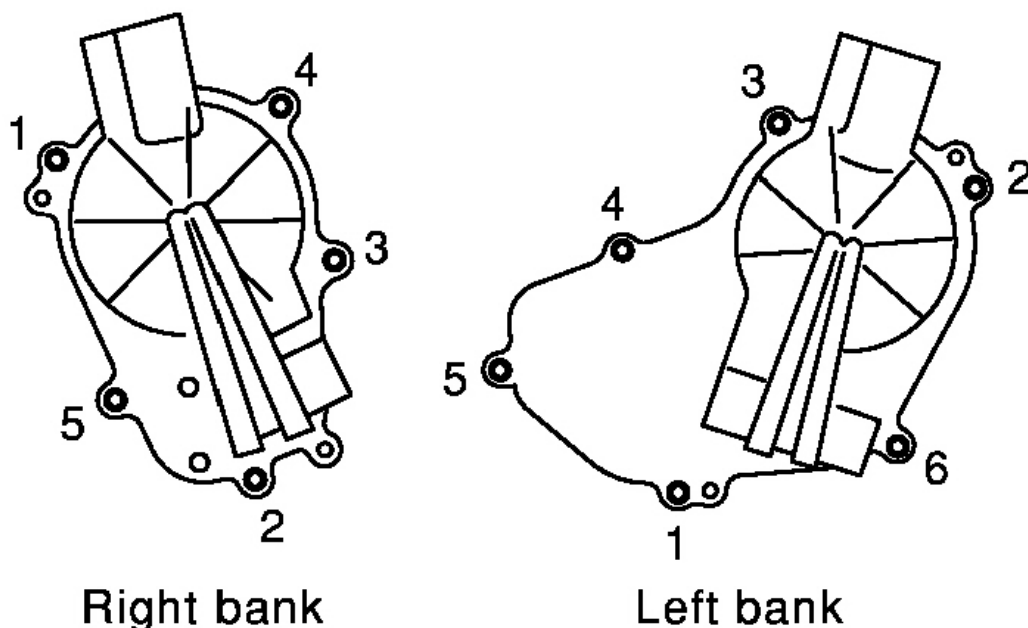


G02370011

Fig. 58: Identifying Removal Sequence Of Intake Valve Timing Control Cover Bolts

Courtesy of NISSAN MOTOR CO., U.S.A.


6. Remove O-ring from front cover.

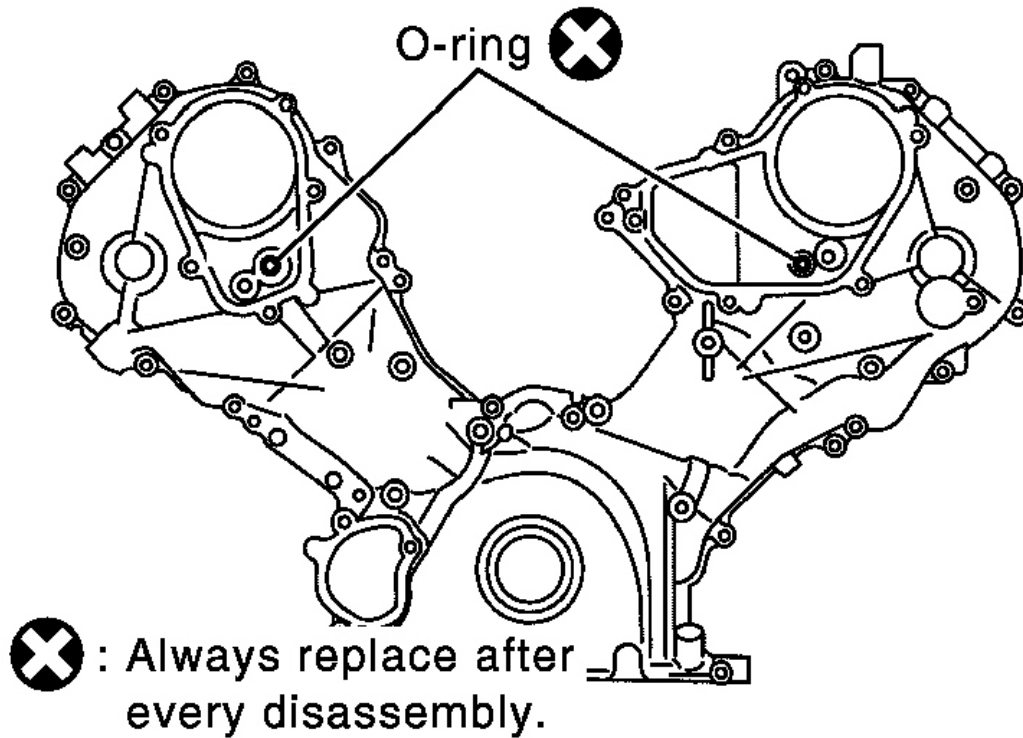

G02370012

Fig. 59: Removing O-Ring From Front Cover
Courtesy of NISSAN MOTOR CO., U.S.A.


7. Obtain compression TDC of No. 1 cylinder as follows:
 - a. Turn crankshaft pulley clockwise to align the TDC identification notch (without paint mark) with timing indicator on front cover.

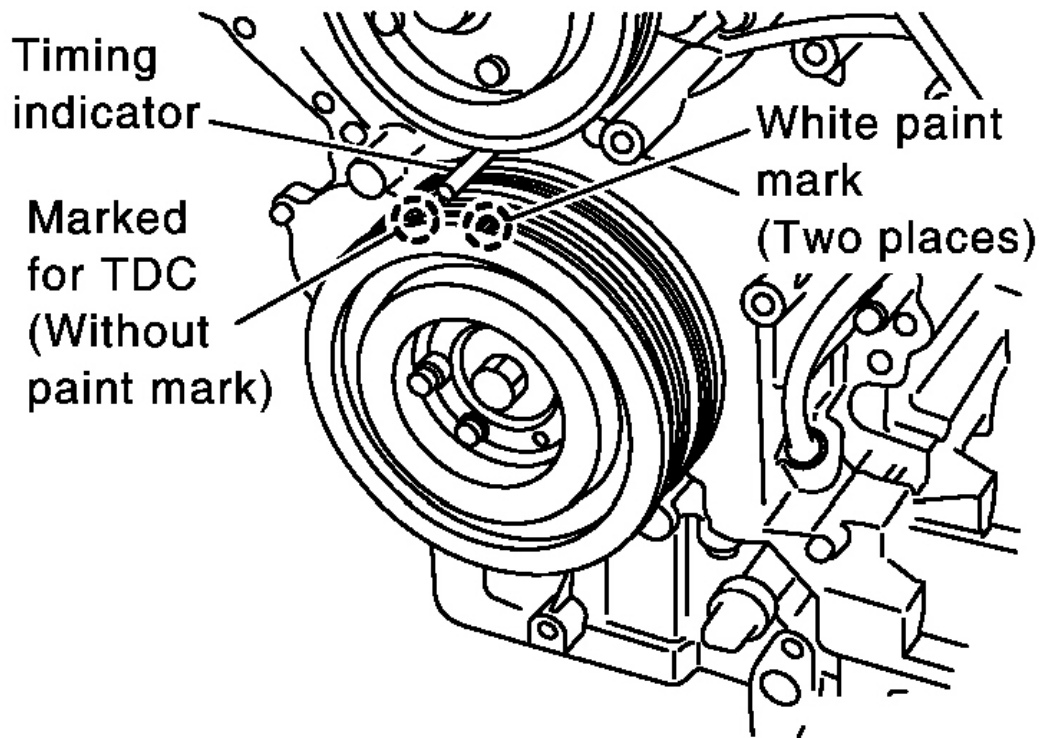

G02370013

Fig. 60: Aligning TDC Identification Notch With Timing Indicator On Front Cover
Courtesy of NISSAN MOTOR CO., U.S.A.

- b. At this time, make sure the both intake and exhaust cam noses of No.1 cylinder (top front on left bank) face outside.
 - If they do not face outside, turn crankshaft pulley by 360 degrees once more.

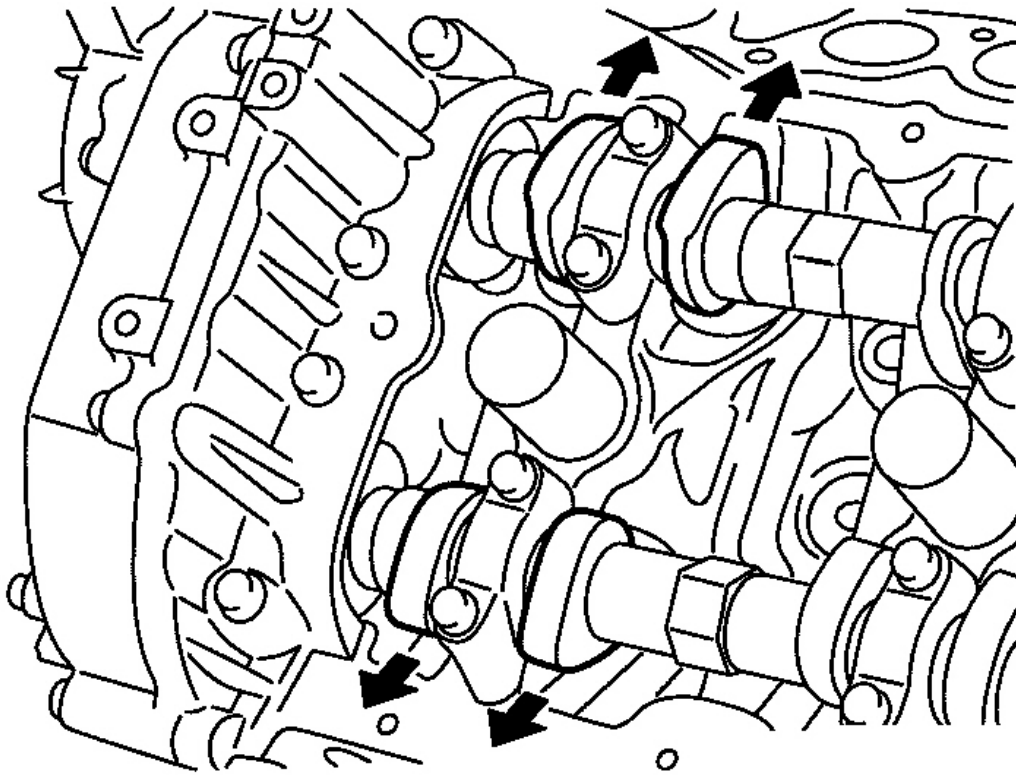

G02370014


Fig. 61: Checking That Intake And Exhaust Cam Noses Of No 1 Cylinder (Top Front On Left Bank) Face Outside

Courtesy of NISSAN MOTOR CO., U.S.A.

8. Remove crankshaft pulley as follows:
 - a. Remove rear plate cover. Refer to "OIL PAN AND OIL STRAINER".
 - b. Set the ring gear stopper (SST).
 - c. Loosen crankshaft pulley bolt.
 - d. Pull crankshaft pulley with both hands to remove it.

CAUTION:

- Do not remove crankshaft pulley bolt. Keep loosened crankshaft pulley bolt in place to protect removed crankshaft pulley from dropping.
- Do not remove balance weight (inner hexagon bolt) at the front of crankshaft pulley.

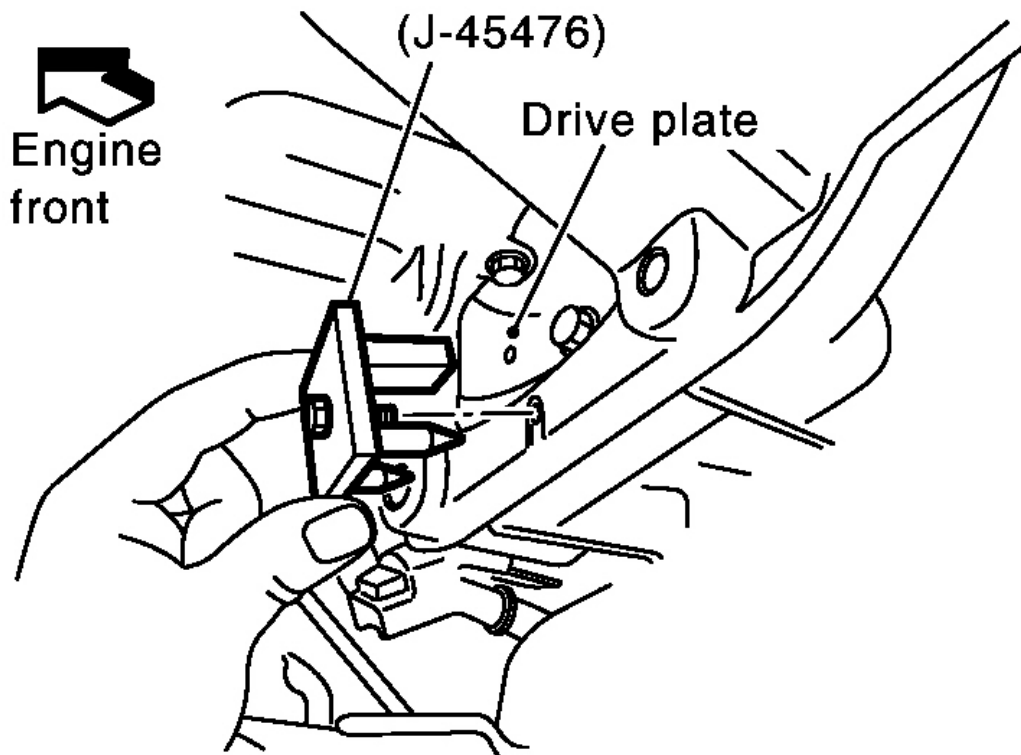


G02370015

Fig. 62: Setting Ring Gear Stopper (SST)
Courtesy of NISSAN MOTOR CO., U.S.A.

9. Remove oil pan and oil strainer. Refer to "**OIL PAN AND OIL STRAINER**".
10. Remove front cover as follows:
 - a. Loosen and remove fixing bolts in the reverse order of that shown in figure.
 - b. Use the seal cutter [SST: KV10111100 (J-37228)] or the equivalent to cut liquid gasket for removal

CAUTION: Be careful not to damage mating surfaces.

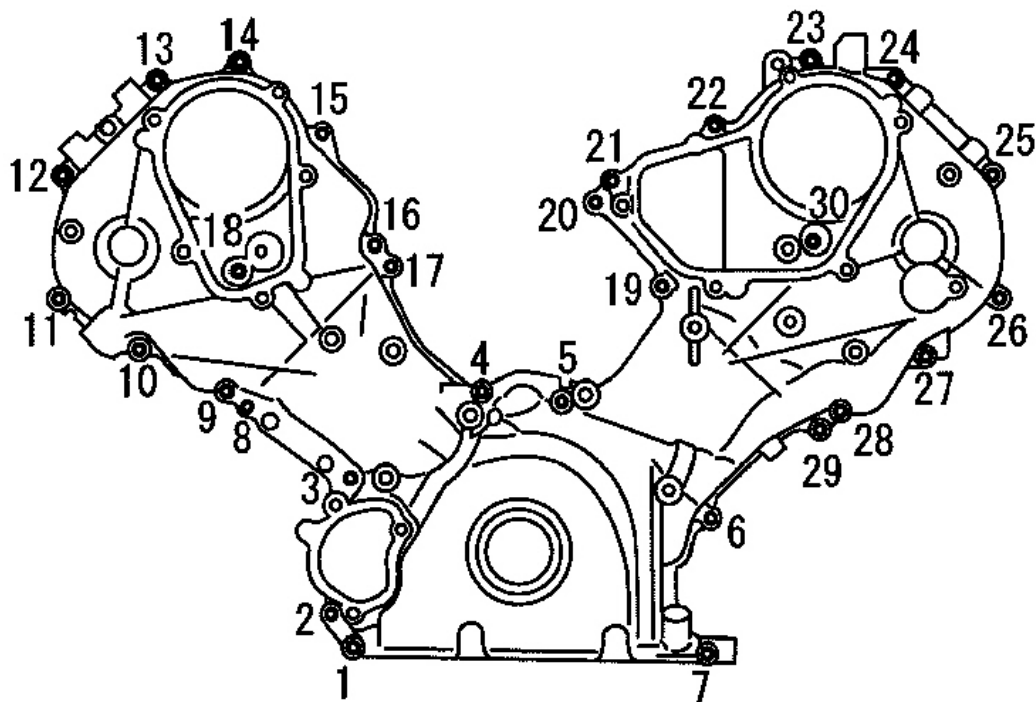


G02370016

Fig. 63: Identifying Removal Sequence Of Front Cover Bolts
Courtesy of NISSAN MOTOR CO., U.S.A.

11. Remove front oil seal from front cover using suitable tool.

CAUTION: Be careful not to damage front cover.

12. Remove O-rings from cylinder heads (right and left bank) and cylinder block.

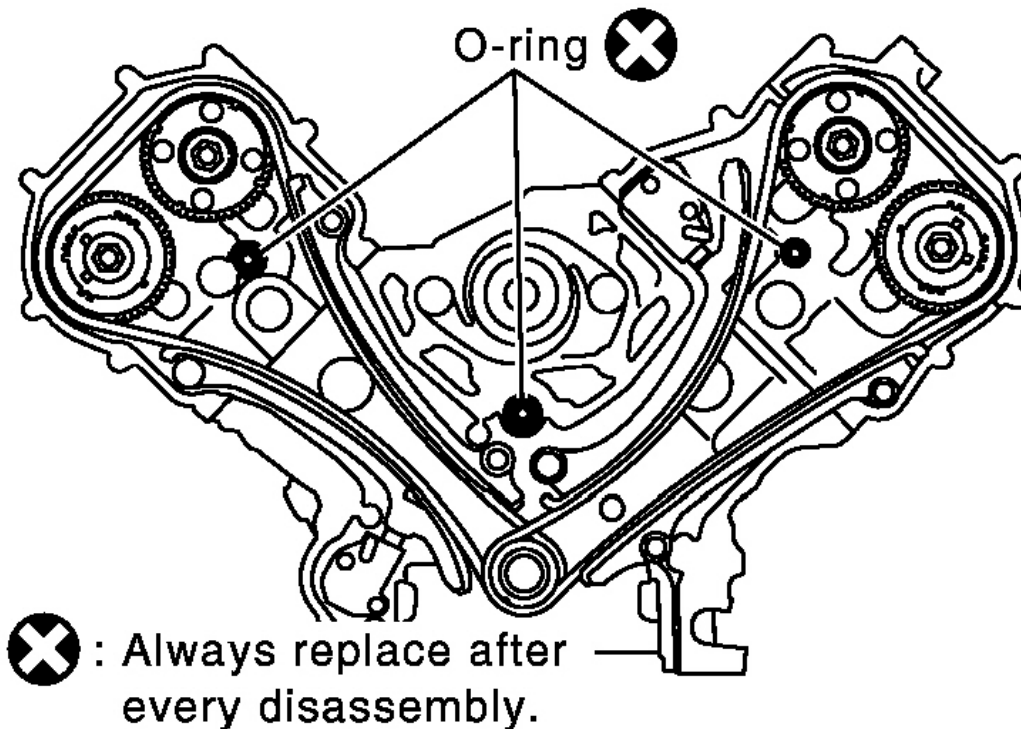


G02370017

Fig. 64: Removing O-Rings From Cylinder Heads (Right And Left Bank) And Cylinder Block
Courtesy of NISSAN MOTOR CO., U.S.A.

13. Remove chain tensioner cover from front cover.
 - Use seal cutter (SST: KV10111100) or equivalent to cut liquid gasket for remove.
14. Remove oil pump drive spacer.
 - Install bolts into two bolt holes [M6 x pitch 1.0 mm (0.04 in)] on front surface. Using a small puller, pull spacer off from crankshaft.

NOTE: The center to center dimension between the two bolt holes is 33 mm (1.30 in).

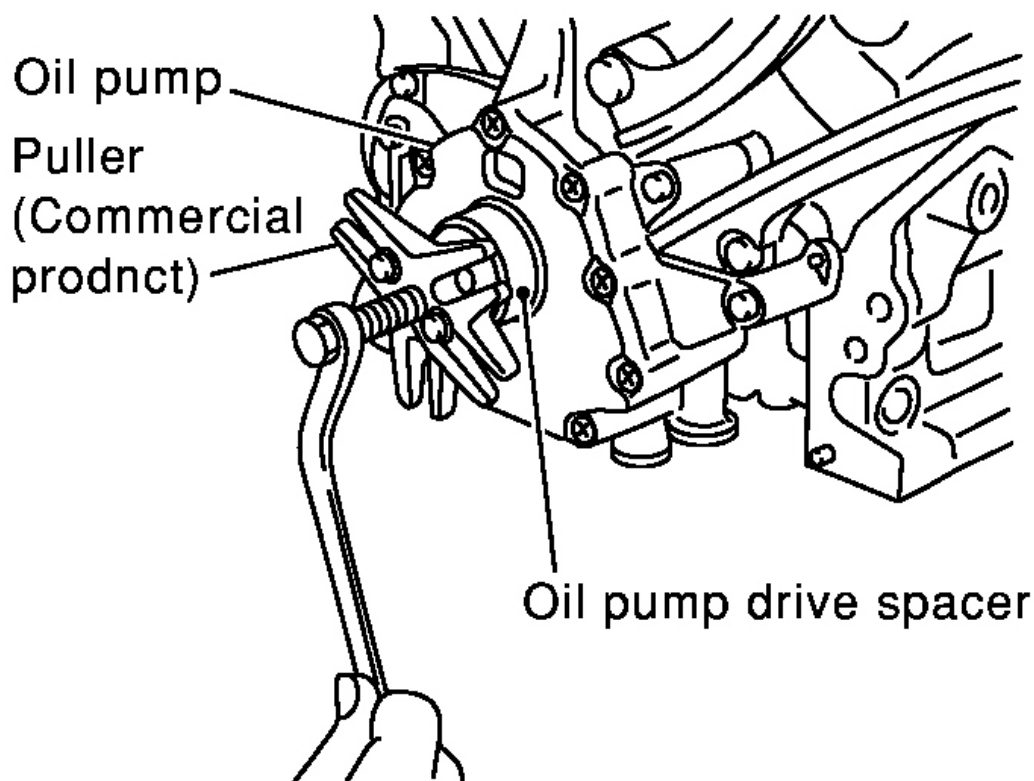


G02370018

Fig. 65: Removing Oil Pump Drive Spacer
Courtesy of NISSAN MOTOR CO., U.S.A.

15. Remove oil pump. Refer to "**OIL PUMP**".
16. Remove chain tensioner (left bank) as follows:

NOTE: To remove timing chain and associated parts, start with those on left bank. The procedure for removing parts on right bank is omitted because it is the same as that for left bank.

- a. Press tab in the direction of arrow (or turn lever in the direction of arrow) to unlock the locking with the groove that stops tensioner plunger from returning.
 - Lightly press tensioner plunger to release the tension of spring for this operation.
- b. Push in tensioner plunger to align the hole on lever and that on pump main body.
 - Pushing in tensioner plunger too far does not allow the holes to align. Therefore, push in the plunger to the degree at which the start of stopper groove and tab engages.

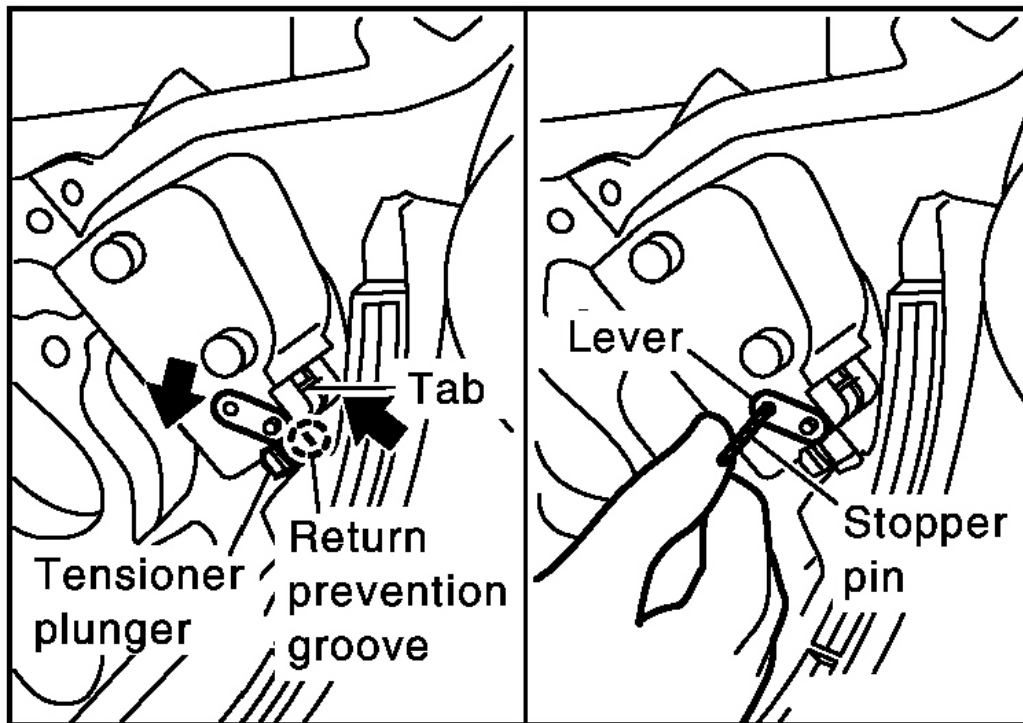


G02370019

Fig. 66: Removing Chain Tensioner (Left Bank)

Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Insert a stopper pin [hard wire with approx. 0.5 mm (0.020 in) diameter or a similar tool] to fix plunger. With the plunger fixed, remove chain tensioner.
17. Remove chain tension guide and chain slack guide.
18. Remove timing chain and crankshaft sprocket.
19. With hexagonal part of camshaft locked with wrench, loosen bolts securing camshaft sprocket to remove camshaft sprocket.


CAUTION: To avoid interference between valves and pistons, do not turn crankshaft or camshaft with timing chain is disconnected.

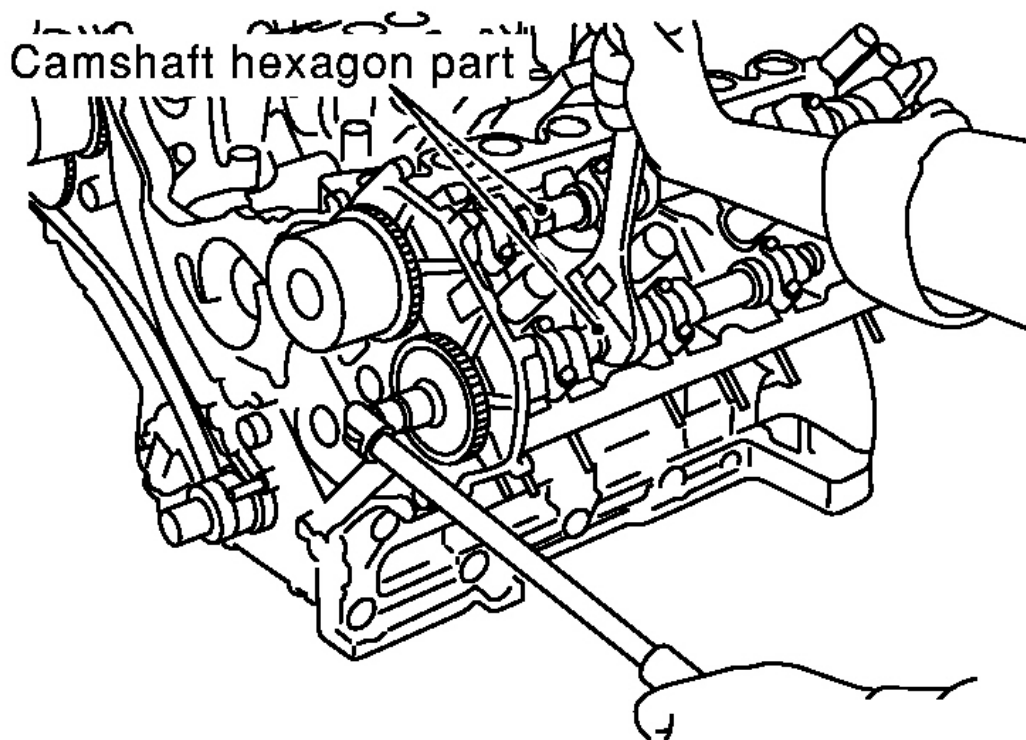

G02370020

Fig. 67: Removing Camshaft Sprocket
Courtesy of NISSAN MOTOR CO., U.S.A.

20. Using the same procedure as for left bank, remove timing chain and associated parts on right side.
21. Use scraper to remove all traces of old liquid gasket from front cover and opposite mating surfaces.
 - Remove old liquid gasket from bolt hole and thread.

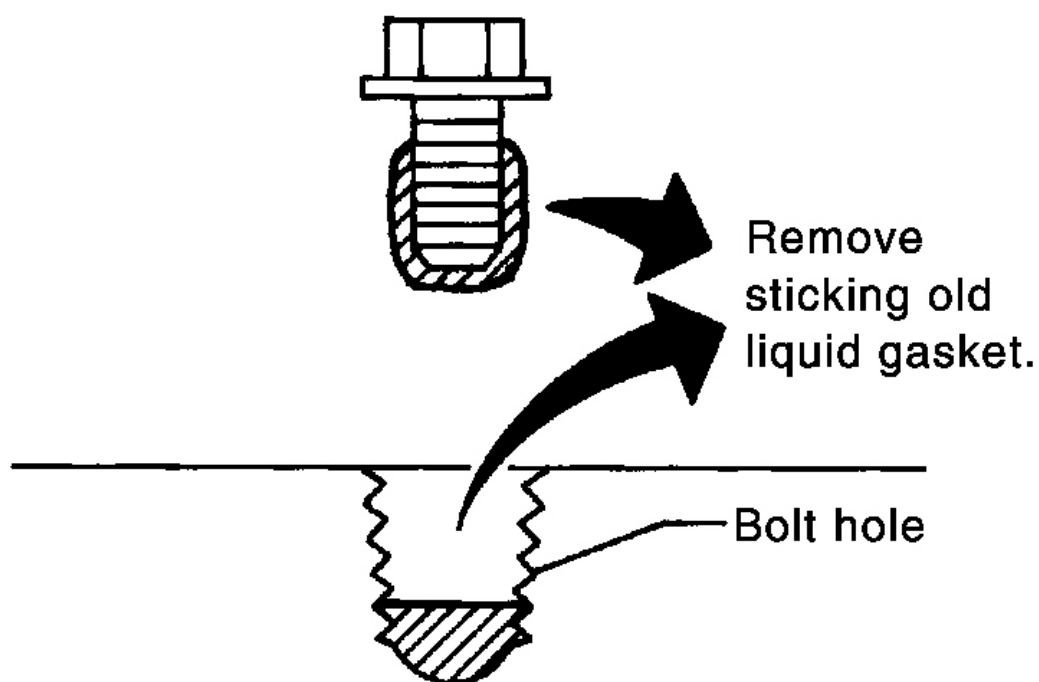


G02370021

Fig. 68: Removing Old Liquid Gasket From Bolt Hole And Thread
Courtesy of NISSAN MOTOR CO., U.S.A.


INSPECTION AFTER REMOVAL

Check for cracks and any excessive wear at roller links and link plates. Replace timing chain if necessary.

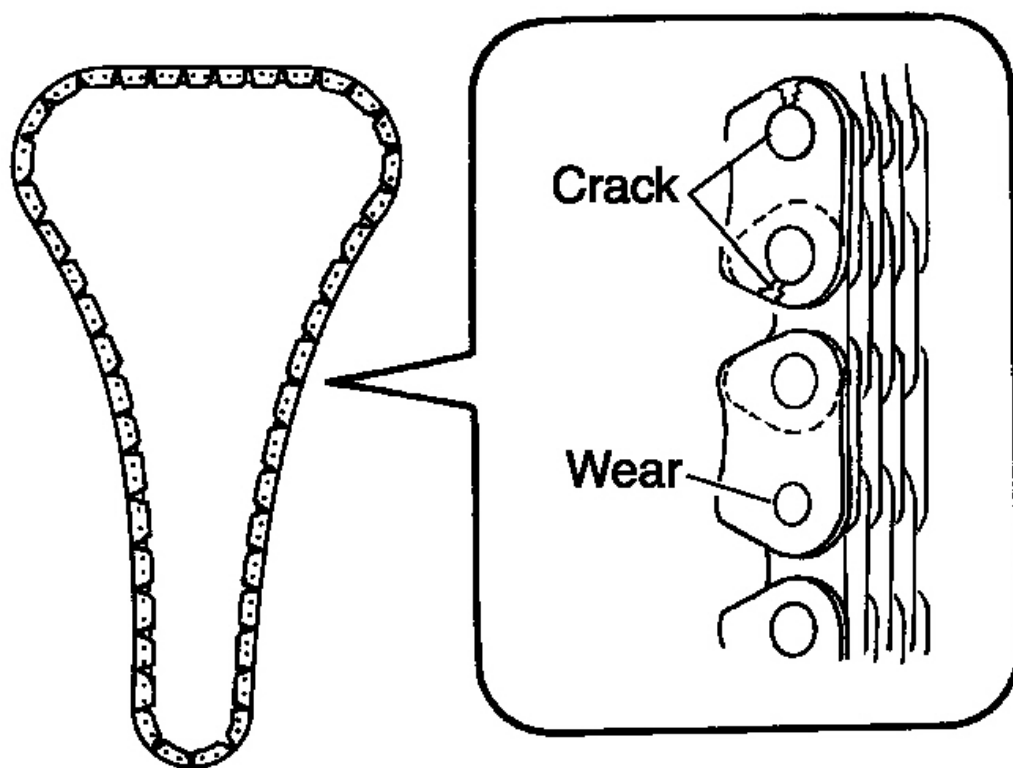

G02370022

Fig. 69: Checking For Cracks And Any Excessive Wear At Roller Links And Link Plates
 Courtesy of NISSAN MOTOR CO., U.S.A.

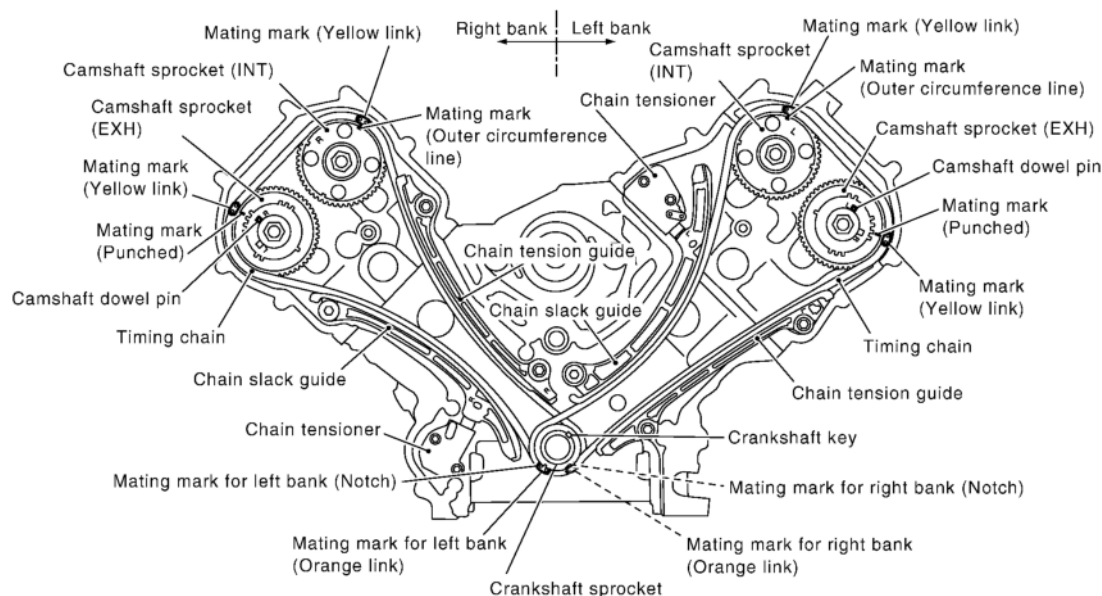

G02370023

Fig. 70: Installing Timing Chain

Courtesy of NISSAN MOTOR CO., U.S.A.

NOTE:

- The above figure shows the relationship between the mating mark on each timing chain and that on the corresponding sprocket, with the components installed.
- Parts with an identification mark (R or L) should be installed on the corresponding bank according to the mark.

Parts with an identification mark:

- Camshaft sprocket (INT)
- Dowel pin groove of camshaft sprocket (EXH) (camshaft sprocket is same part both banks)
- Chain tension guide
- Chain slack guide

To install timing chain and associated parts, start with those on right bank. The procedure for installing parts on left bank is omitted because it is the same as that for installation on right bank.

1. Make sure that crankshaft key and dowel pin of each camshaft are facing in the direction indicated.(No.1 cylinder at compression TDC.)

NOTE:

Camshaft does not stop at the position as shown in the figure, for the placement of cam nose. However it is generally accepted camshaft is placed for the same direction of the figure.

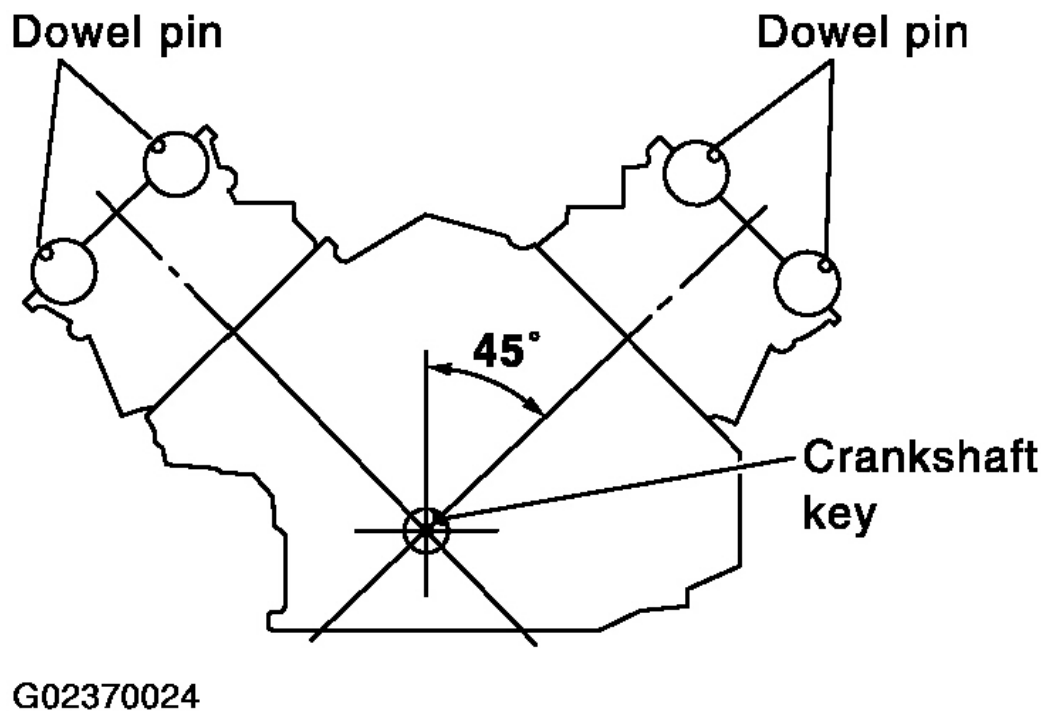


Fig. 71: Identifying Direction Of Crankshaft Key And Dowel Pin Of Camshaft
Courtesy of NISSAN MOTOR CO., U.S.A.

2. Install camshaft sprockets.

- Install onto correct side by checking with identification mark on surface.
- Install camshaft sprocket (EXH) by selectively using the groove of dowel pin according to the bank. (Common part used for both banks.)
- Lock the hexagonal part of camshaft in the same way as for removal, and tighten fixing bolts.

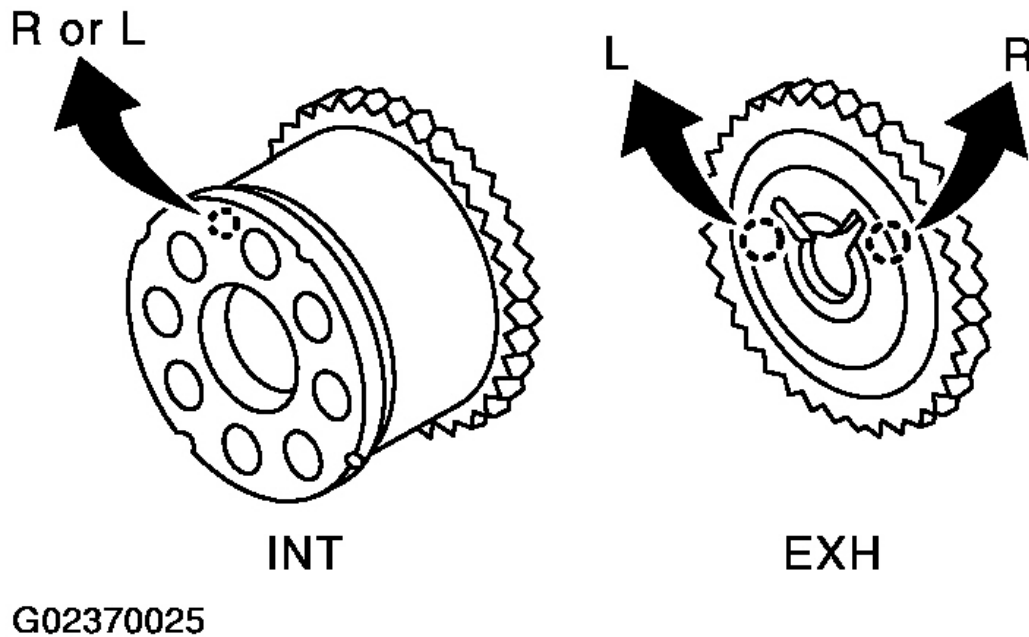


Fig. 72: Installing Camshaft Sprockets
Courtesy of NISSAN MOTOR CO., U.S.A.

3. Install crankshaft sprockets for both banks.
 - Install each crankshaft sprocket so that its flange side (the larger diameter side without teeth) faces in the direction shown in figure.

NOTE: The same parts are used but facing directions are different.


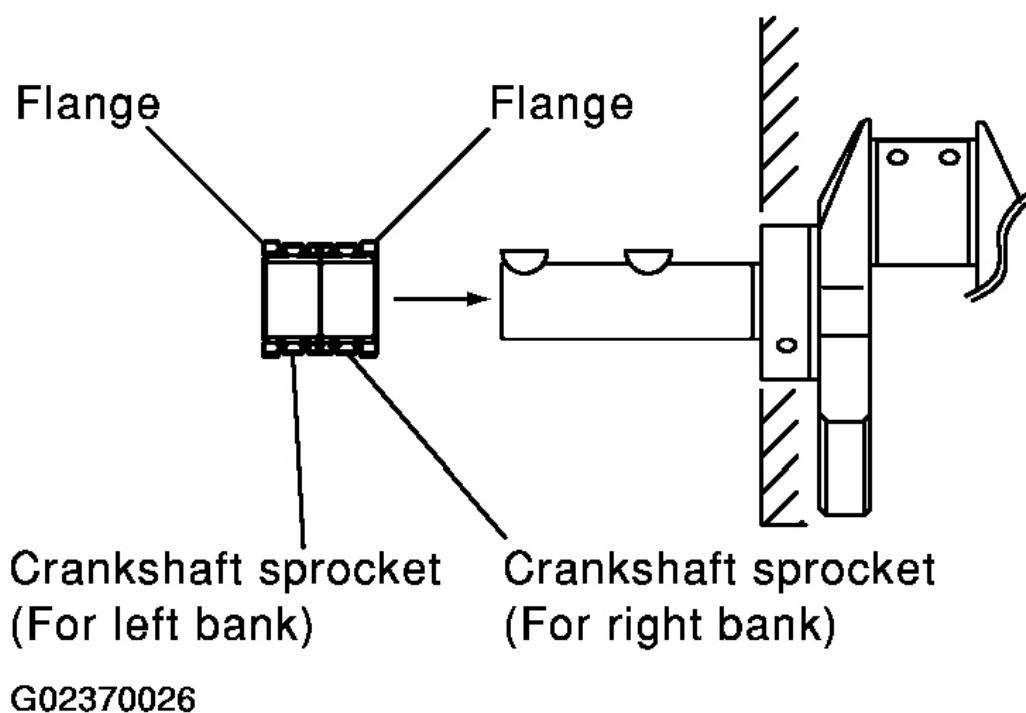


Fig. 73: Installing Crankshaft Sprockets
Courtesy of NISSAN MOTOR CO., U.S.A.

4. Install timing chains and associated parts.

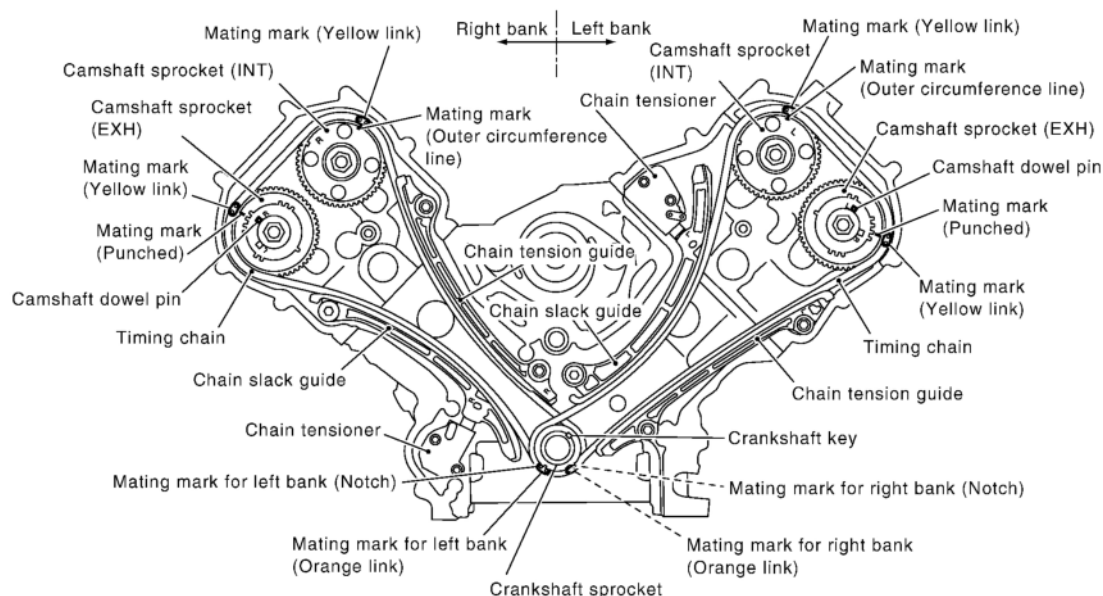

G02370027

Fig. 74: Installing Timing Chains And Associated Parts

Courtesy of NISSAN MOTOR CO., U.S.A.

- Align the mating mark on each sprocket and the timing chain for installation.

NOTE: Before installing chain tensioner, it is possible to change the position of mating mark on timing chain for that on each sprocket for alignment.

CAUTION: For the above reason, after the mating marks are aligned, keep them aligned by holding them with a hand.


- Install chain slack guides and chain tension guides onto correct side by checking with identification mark on surface.
- Install chain tensioner with plunger fixed as described in its removal.

CAUTION:

- Before and after the installation of chain tensioner, make sure that the mating mark on timing chain is not out of alignment.
- After installing chain tensioner, remove the stopper pin to release tensioner. Make sure that tensioner is released.
- To avoid chain-link skipping of timing chain, do not move crankshaft or camshafts until front cover is installed.

5. In the same way as for right bank, install timing chain and associated parts on left side.


6. Install oil pump assembly. Refer to "**OIL PUMP**".
7. Install oil pump drive spacer as follows:
 - a. Insert oil pump drive spacer according to the directions of crankshaft key and the two flat surfaces of oil pump inner rotor.
 - If the positional relationship does not allow the insertion, rotate oil pump inner rotor with a finger to allow the spacer.
 - b. After confirming that the position of each part is in correct condition to allow for the spacer, force fit the spacer by lightly tapping with a plastic hammer until it contacts and does not go further.

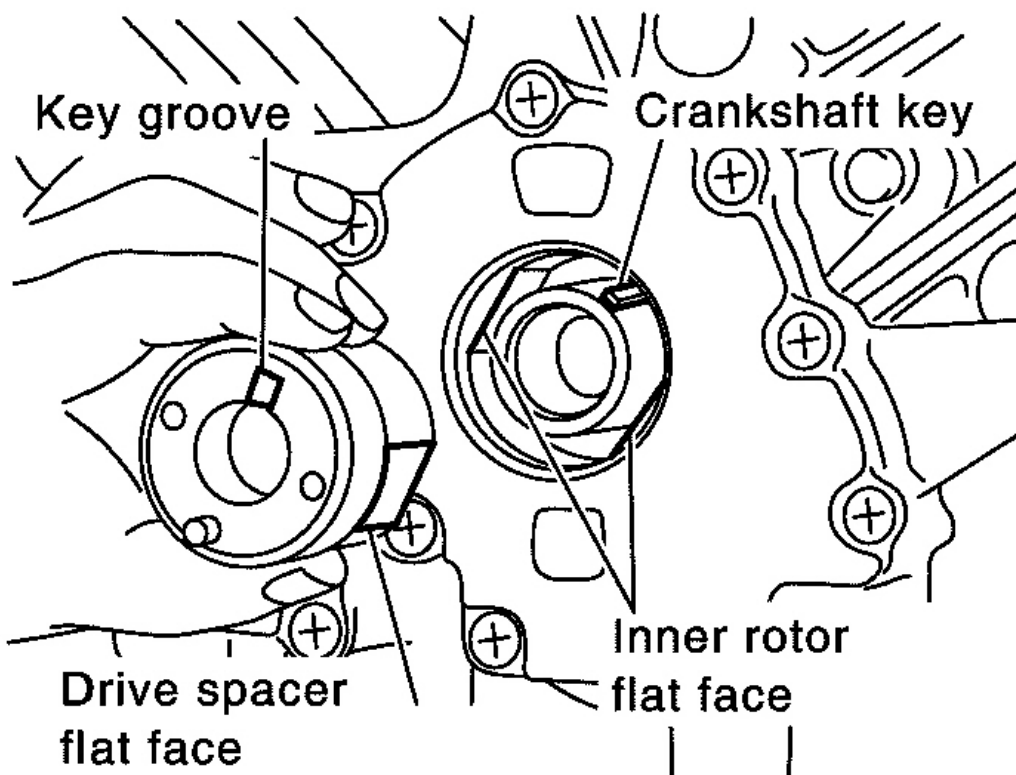

G02370028

Fig. 75: Installing Oil Pump Drive Spacer
Courtesy of NISSAN MOTOR CO., U.S.A.

8. Install front oil seal onto front cover.
 - Install new oil seal in the direction shown in the figure.

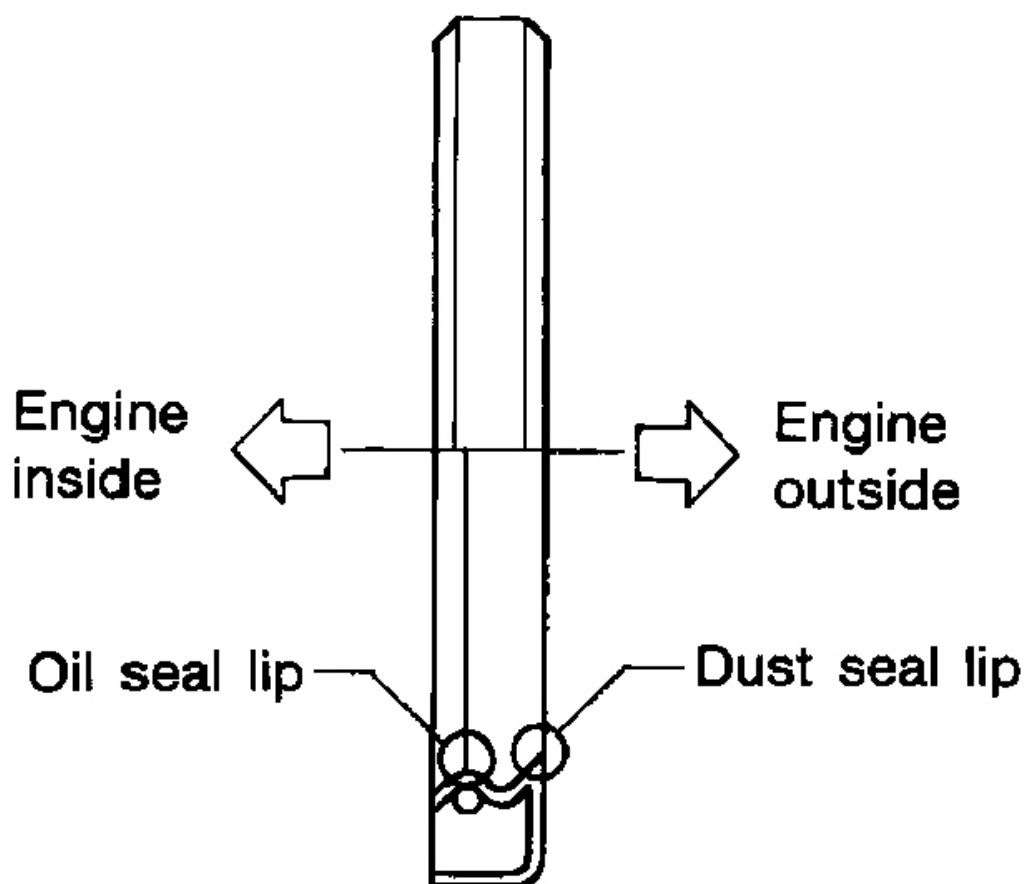


G02370029

Fig. 76: Installing New Oil Seal

Courtesy of NISSAN MOTOR CO., U.S.A.

- Using the front oil seal drift (commercial service tool) or drift with 54 mm (2.13 in) diameter, force fit the seal until it levels with the front end surface of front cover.

CAUTION: Be careful not to scratch or make burrs on circumference of oil seal.

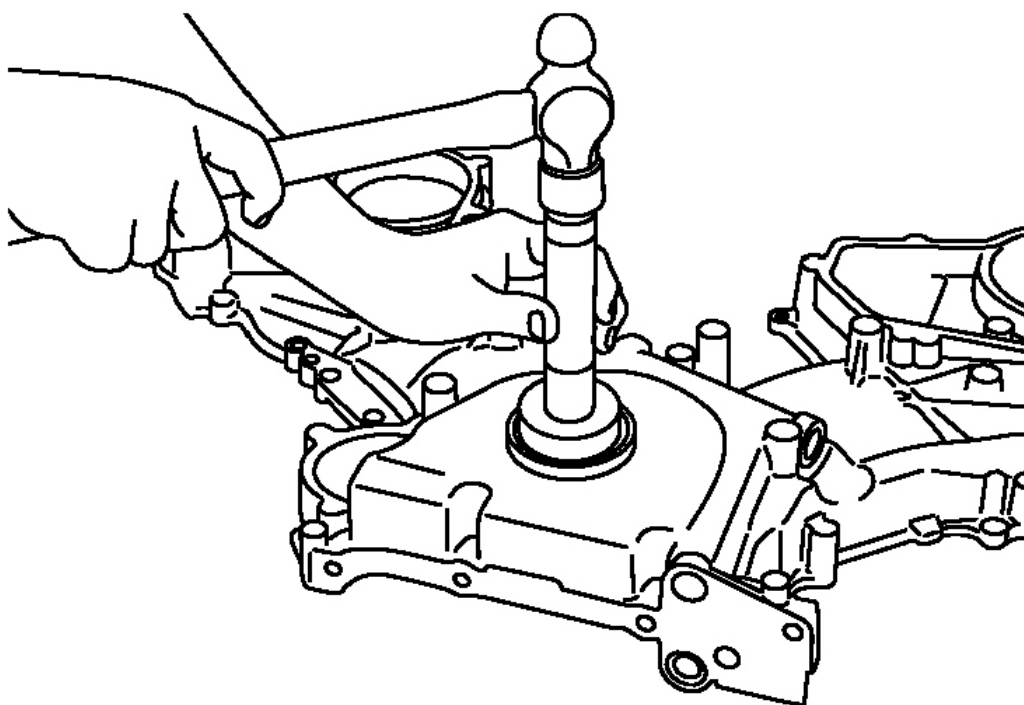


G02370030

Fig. 77: Installing Front Oil Seal Onto Front Cover
Courtesy of NISSAN MOTOR CO., U.S.A.

9. Install chain tensioner cover onto front cover.
 - Apply liquid gasket as shown in the figure.


Use Genuine RTV Silicone Sealant or equivalent. Refer to "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS".

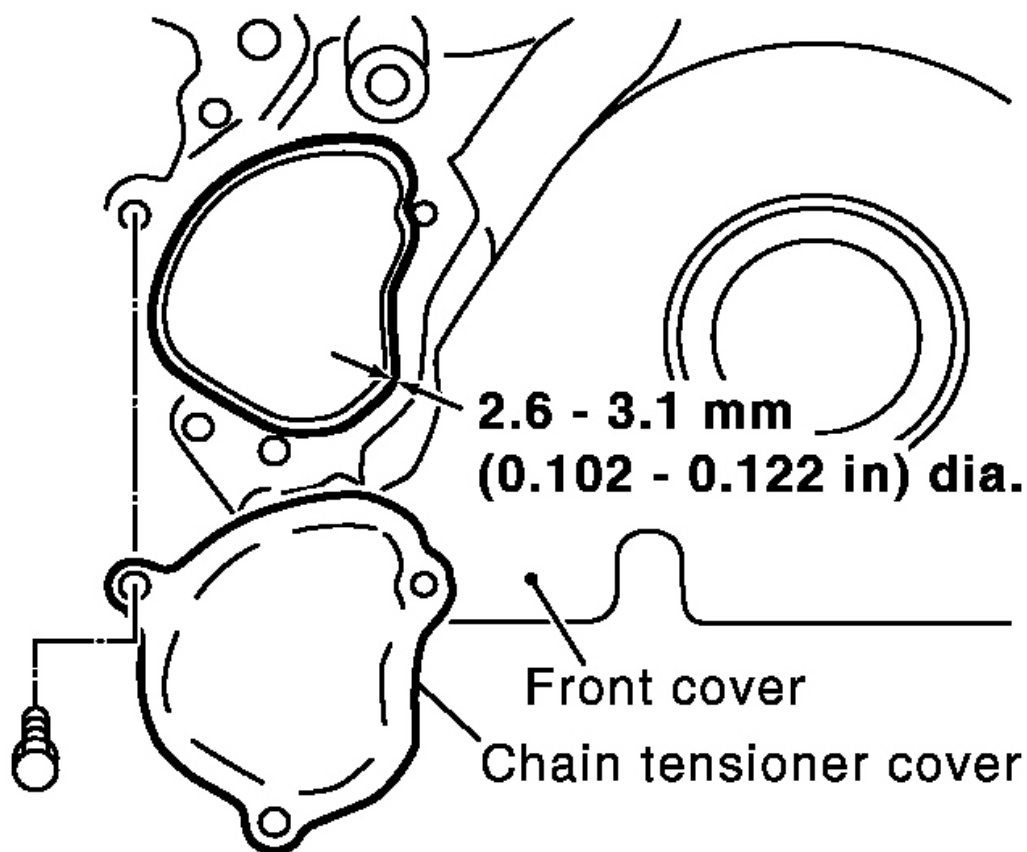

G02370031

Fig. 78: Installing Chain Tensioner Cover Onto Front Cover
Courtesy of NISSAN MOTOR CO., U.S.A.

10. Install front cover as follows:
 - a. Install new O-rings onto cylinder head (right and left bank) and cylinder block.

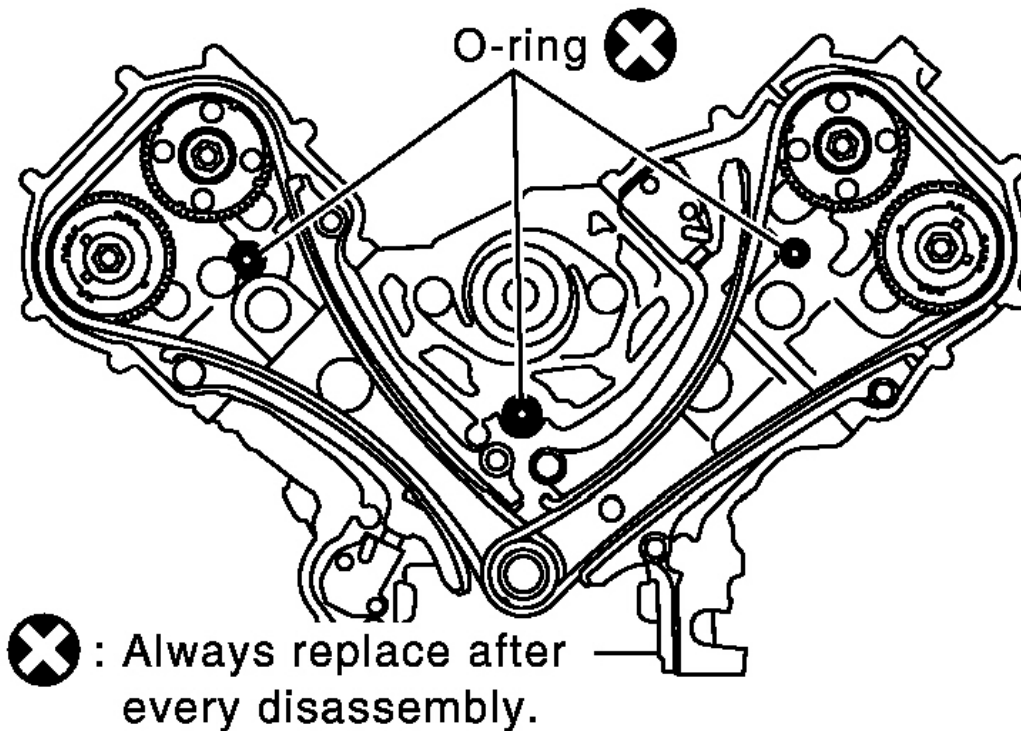

G02370032

Fig. 79: Installing New O-Rings Onto Cylinder Head And Cylinder Block
Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Apply liquid gasket as shown in the figure.

Use Genuine RTV Silicone Sealant or equivalent. Refer to "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS".

- c. Make sure again that the timing mating mark on timing chain and that on each sprocket are aligned. Then, install front cover.

CAUTION: Be careful to avoid interference with the front end of oil pump drive spacer. Such interference may damage front oil seal.


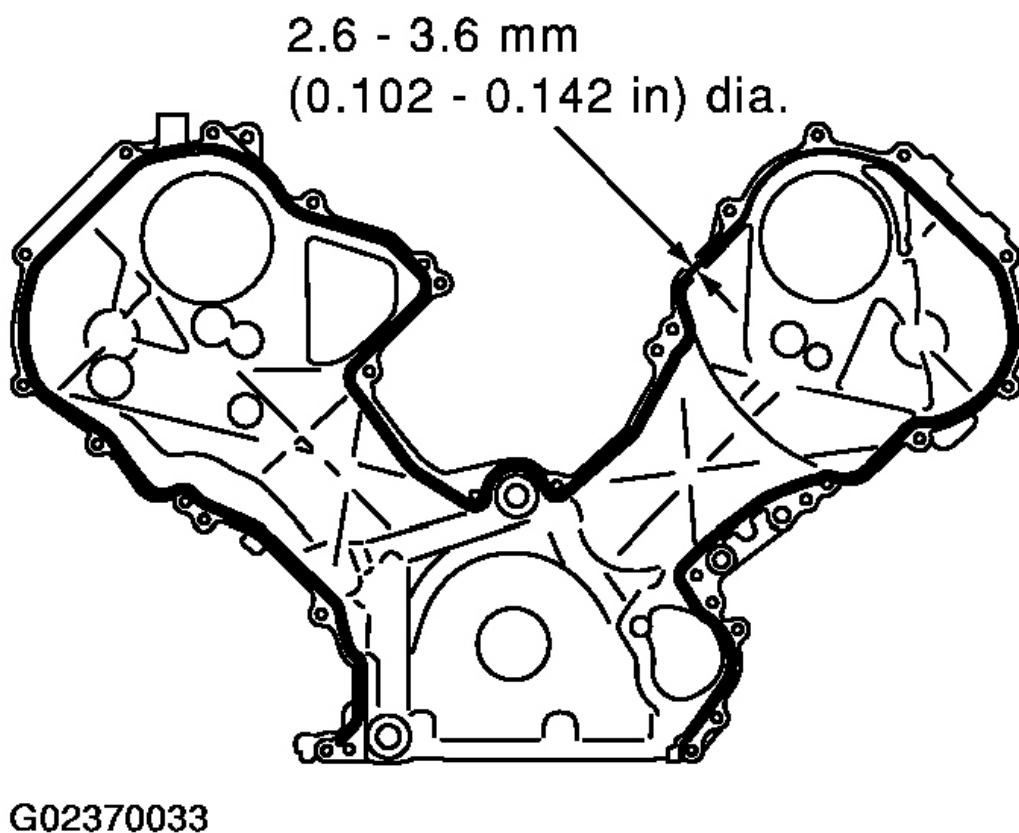


Fig. 80: Applying Liquid Gasket On Front Cover
Courtesy of NISSAN MOTOR CO., U.S.A.


- d. Tighten mounting bolts in the numerical order shown in the figure.

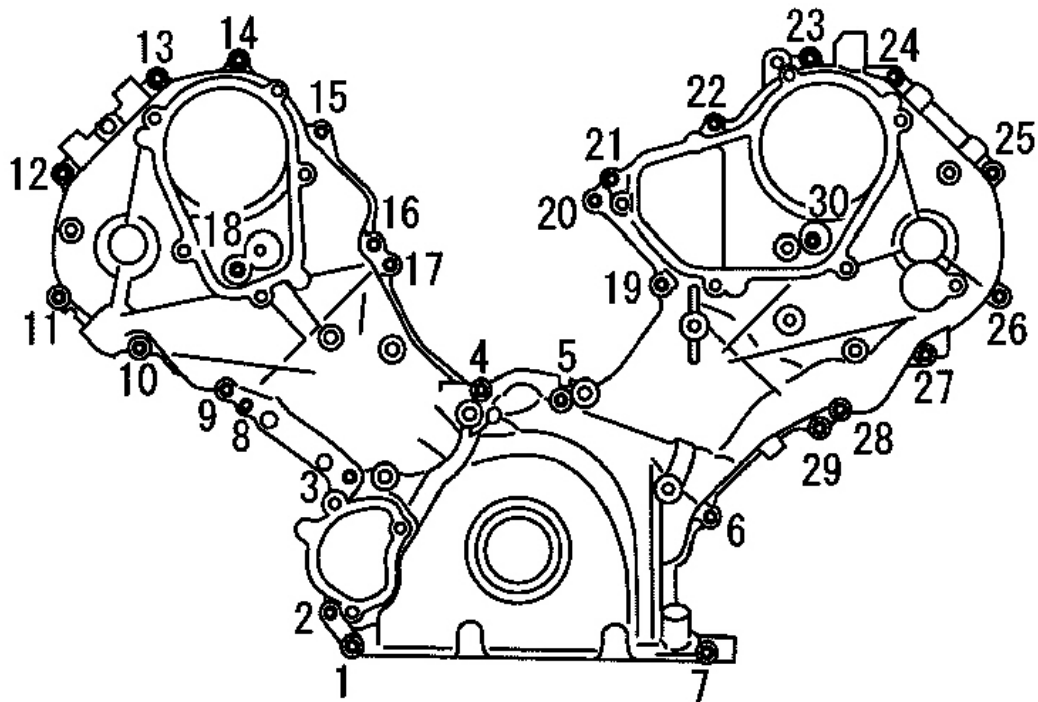

G02370034

Fig. 81: Identifying Tightening Sequence Of Mounting Bolts
Courtesy of NISSAN MOTOR CO., U.S.A.

- There are four type of mounting bolts.

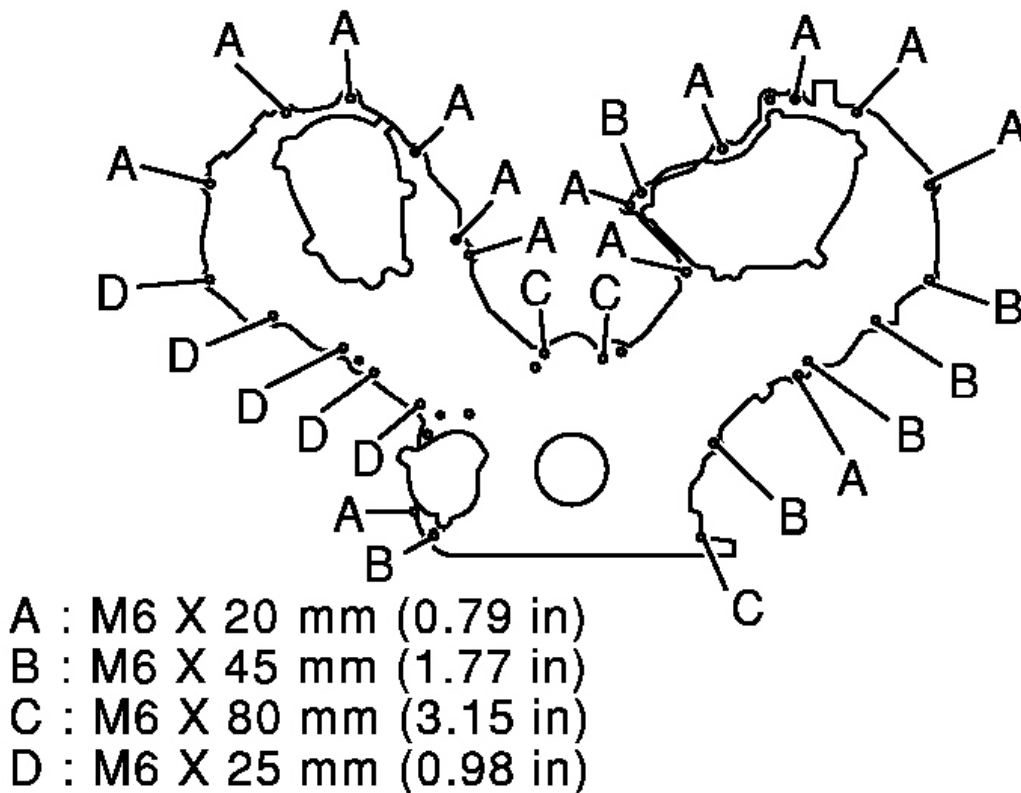

G02370035

Fig. 82: Identifying Four Type Of Mounting Bolts
 Courtesy of NISSAN MOTOR CO., U.S.A.

- e. After tightening, re-tighten to the specified torque.


CAUTION: Be sure to wipe off any excessive liquid gasket leaking onto surface mating with oil pan.

11. Install intake valve timing control cover as follows:

- a. At the back of intake valve timing control cover, install new seal rings (three for each) to the area to be inserted into camshaft sprocket (INT).

CAUTION: Do not spread seal ring excessively to avoid breaks and deformation.

- b. On the side of front cover, install new O-ring (one for each bank).

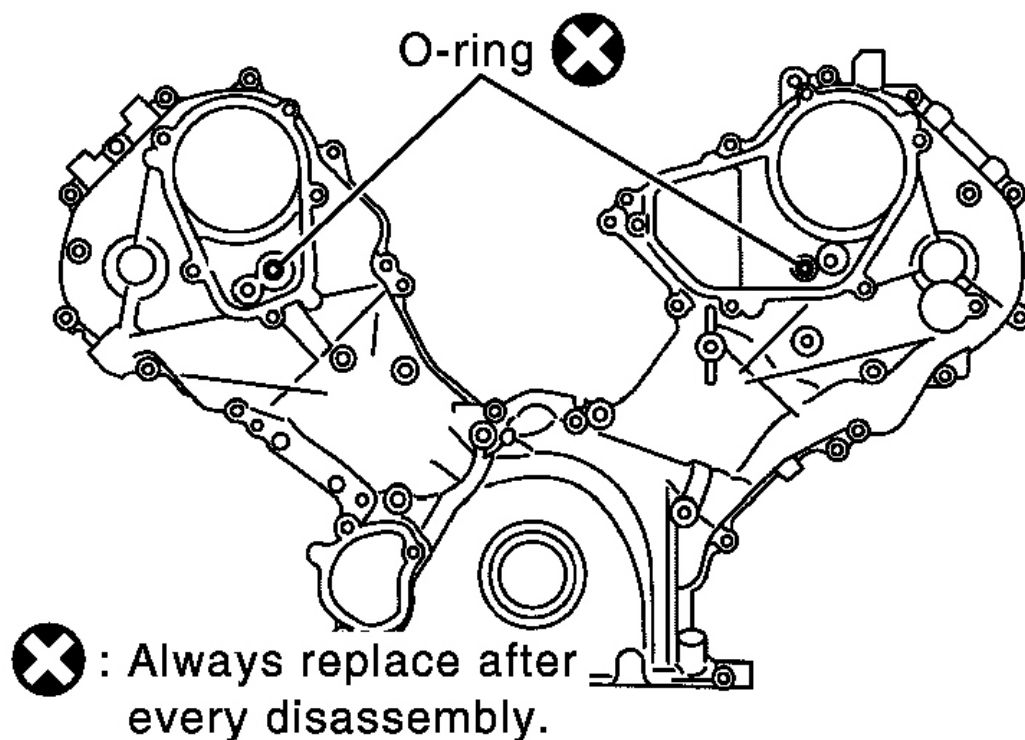


G02370036

Fig. 83: Installing New O-Ring
Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Apply liquid gasket as shown in the figure.


Use Genuine RTV Silicone Sealant or equivalent. Refer to "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS".

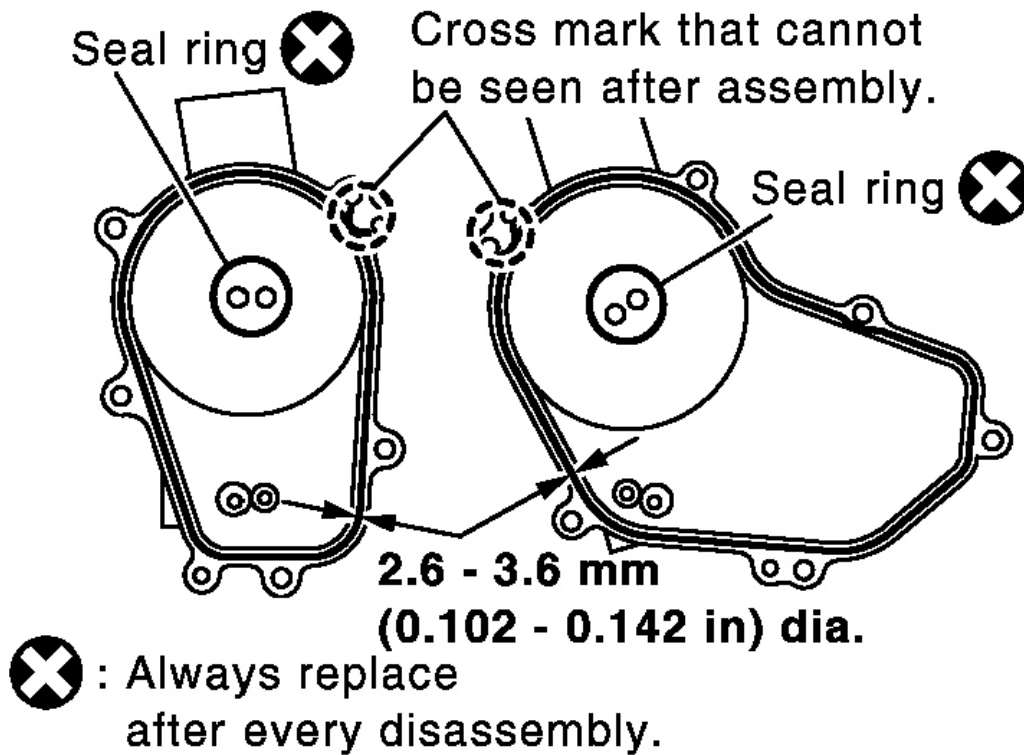

G02370037

Fig. 84: Applying Liquid Gasket To Front Cover
Courtesy of NISSAN MOTOR CO., U.S.A.

- d. Tighten mounting bolts in the numerical order shown in the figure.

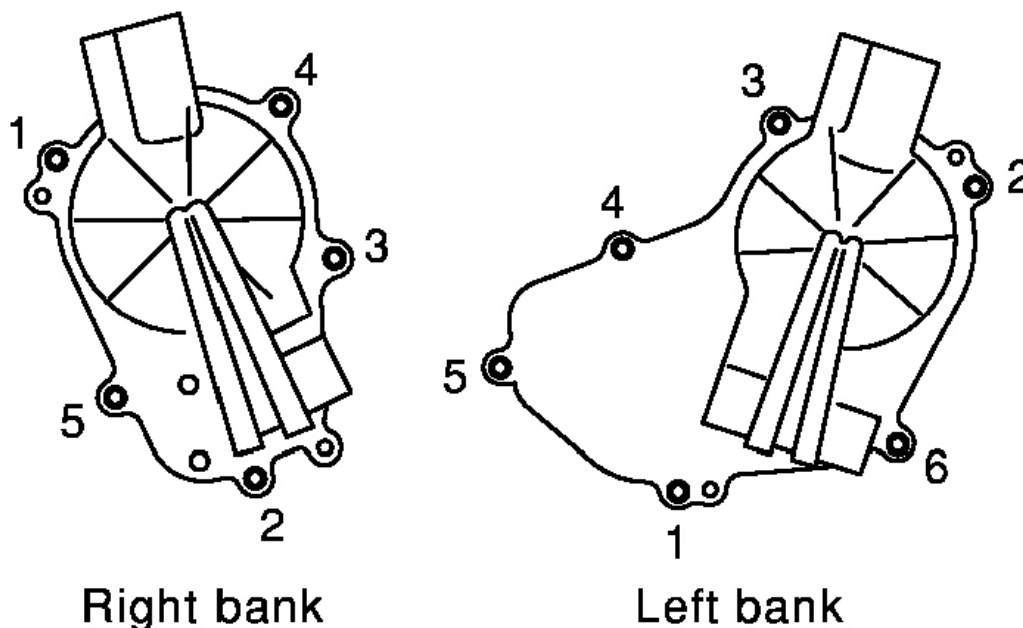

G02370038

Fig. 85: Identifying Tightening Sequence Of Mounting Bolts

Courtesy of NISSAN MOTOR CO., U.S.A.


12. Install intake valve timing control position sensor, intake valve timing control solenoid valve and camshaft position sensor (PHASE) to intake valve timing control cover and front cover.
 - Be sure to tighten bolts with flanges completely seated.
13. Install crankshaft pulley.
 - Install according to the dowel pin of oil pump drive spacer.
 - Lightly tapping its center with plastic hammer, insert pulley.

CAUTION: Do not tap pulley on the side surface where belt is installed (outer circumference).

14. Tighten fixing bolt of crankshaft pulley as follows:
 - a. Fix crankshaft with ring gear stopper (SST: J-45476).
 - b. Apply engine oil onto threaded parts of bolts and seating areas.
 - c. Tighten bolt crankshaft pulley bolt.

: 93.1 N.m (9.5 kg-m, 69 ft-lb).
 - d. Select one most visible notch of the four on bolt flange. Corresponding to the selected notch, put a

- mating mark (such as paint) on crankshaft pulley.
- e. Tighten further by 90 degrees. (Angle tightening)
- Check the tightening angle by referencing to the notches. The angle between two notches is 90 degrees.

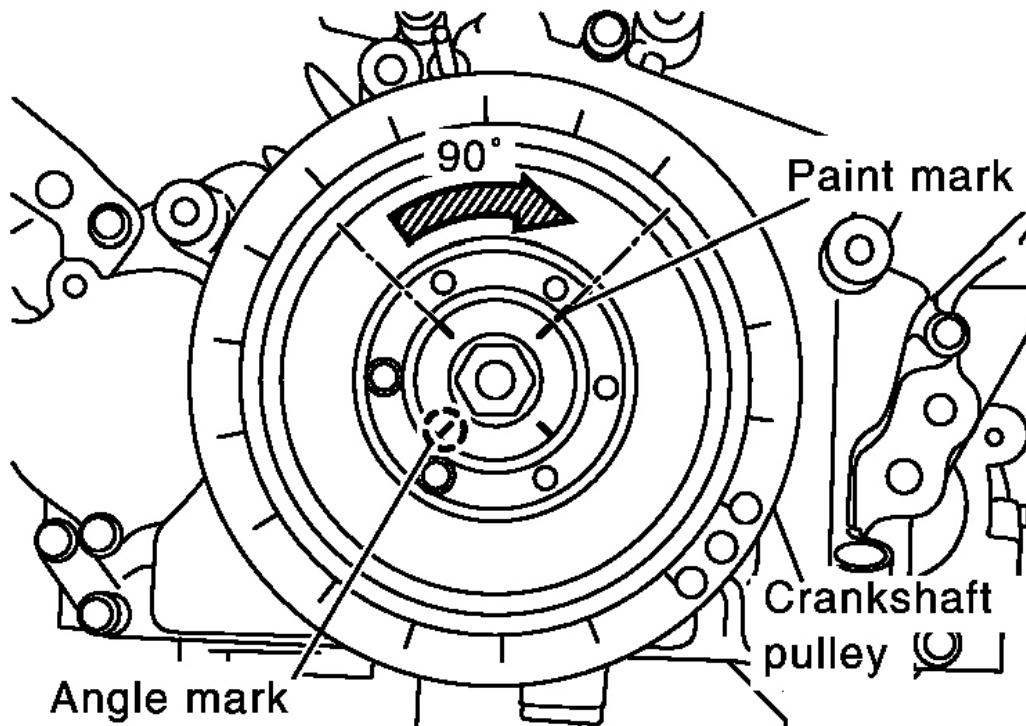

G02370039

Fig. 86: Putting Mating Mark On Crankshaft Pulley

Courtesy of NISSAN MOTOR CO., U.S.A.

15. Rotate crankshaft pulley in normal direction (clockwise when viewed from engine front) to check for interference among parts.
16. Install in the reverse order of removal.

NOTE: If hydraulic pressure inside timing chain tensioner drops after removal/installation, slack in guide may generate a pounding noise during and just after engine start. However, this does not indicate an unusualness. Noise will stop after hydraulic pressure rises.

INSPECTION AFTER INSTALLATION

- Before starting engine, check oil/fluid levels including engine coolant and engine oil. If less than required quantity, fill to the specified level. Refer to "**RECOMMENDED FLUIDS AND LUBRICANTS**".
- Use procedure below to check for fuel leakage.
 - Turn ignition switch "ON" (with engine stopped). With fuel pressure applied to fuel piping, check for fuel leakage at connection points.
 - Start engine. With engine speed increased, check again for fuel leakage at connection points.
- Run engine to check for unusual noise and vibration.
- Warm up engine thoroughly to make sure there is no leakage of fuel, exhaust gas, or any oils/fluids including engine oil and engine coolant.
- Bleed air from passages in lines and hoses, such as in cooling system.
- After cooling down engine, again check oil/fluid levels including engine oil and engine coolant. Refill to specified level, if necessary.

Summary of the inspection items:


ITEMS INSPECTION

Item	Before starting engine	Engine running	After engine stopped
Engine oil	Level	Leakage	Level
Engine oil	Level	Leakage	Level
Other oils and fluids (1)	Level	Leakage	Level
Fuel	Leakage	Leakage	Leakage
Exhaust gas	-	Leakage	-
(1) Transmission/transaxle/CTV fluid, power steering fluid, brake fluid, etc.			

CAMSHAFT

REMOVAL AND INSTALLATION

SEC. 111•130•135•221

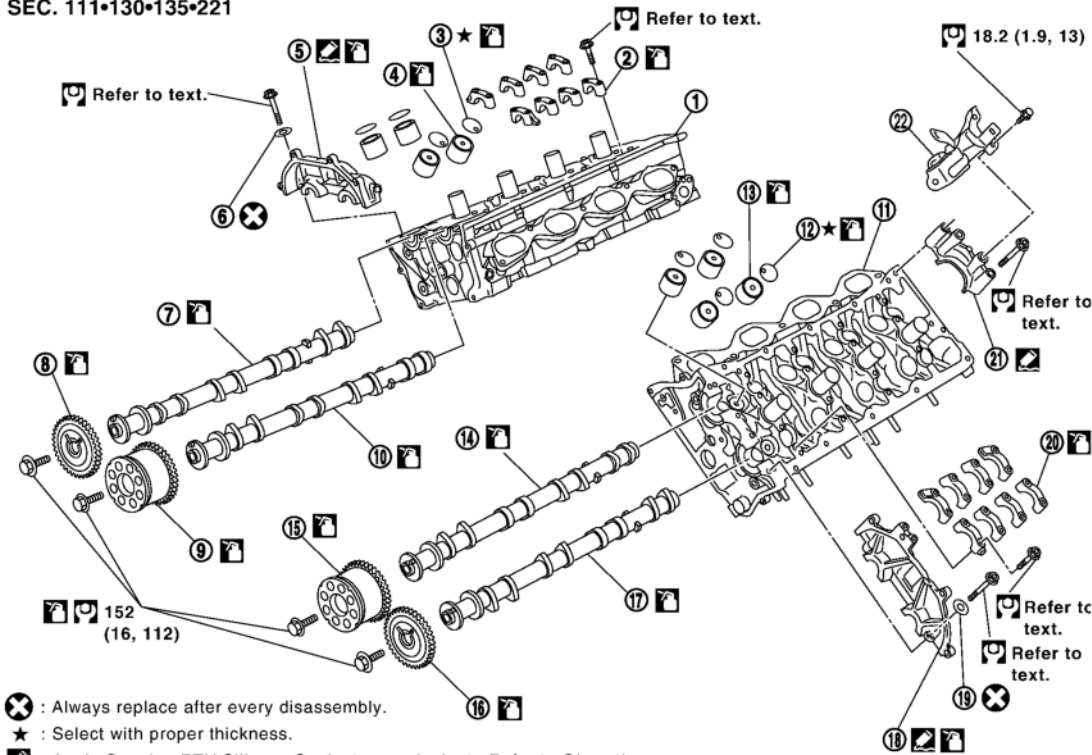

- ⊗ : Always replace after every disassembly.
 ★ : Select with proper thickness.
 : Apply Genuine RTV Silicone Sealant or equivalent. Refer to GI section.
 : Lubricate with new engine oil.
 : N•m (kg-m, ft-lb)

- | | | |
|-------------------------------|---------------------------------------|-----------------------------------|
| 1. Cylinder head (right bank) | 2. Camshaft bracket (No. 2, 3, 4, 5) | 3. Adjusting shim |
| 4. Valve lifter | 5. Camshaft bracket (No. 1) | 6. Washer |
| 7. Camshaft (EXH) | 8. Camshaft sprocket (EXH) | 9. Camshaft sprocket (INT) |
| 10. Camshaft (INT) | 11. Cylinder head (left bank) | 12. Adjusting shim |
| 13. Valve lifter | 14. Camshaft (INT) | 15. Camshaft sprocket (INT) |
| 16. Camshaft sprocket (EXH) | 17. Camshaft (EXH) | 18. Camshaft bracket (No.1) |
| 19. Washer | 20. Camshaft bracket (No. 2, 3, 4, 5) | 21. Camshaft bracket (INT, No. 6) |
| 22. Bracket | | |


G02370040

Fig. 87: Removing Camshaft With Torque Specifications
 Courtesy of NISSAN MOTOR CO., U.S.A.

REMOVAL

1. Remove timing chain. Refer to "**TIMING CHAIN**".
2. With hexagonal part of camshaft locked with wrench, loosen bolts securing camshaft sprocket to remove camshaft sprocket.

CAUTION: To avoid interference between valves and pistons, do not turn crankshaft or camshaft with timing chain disconnected.

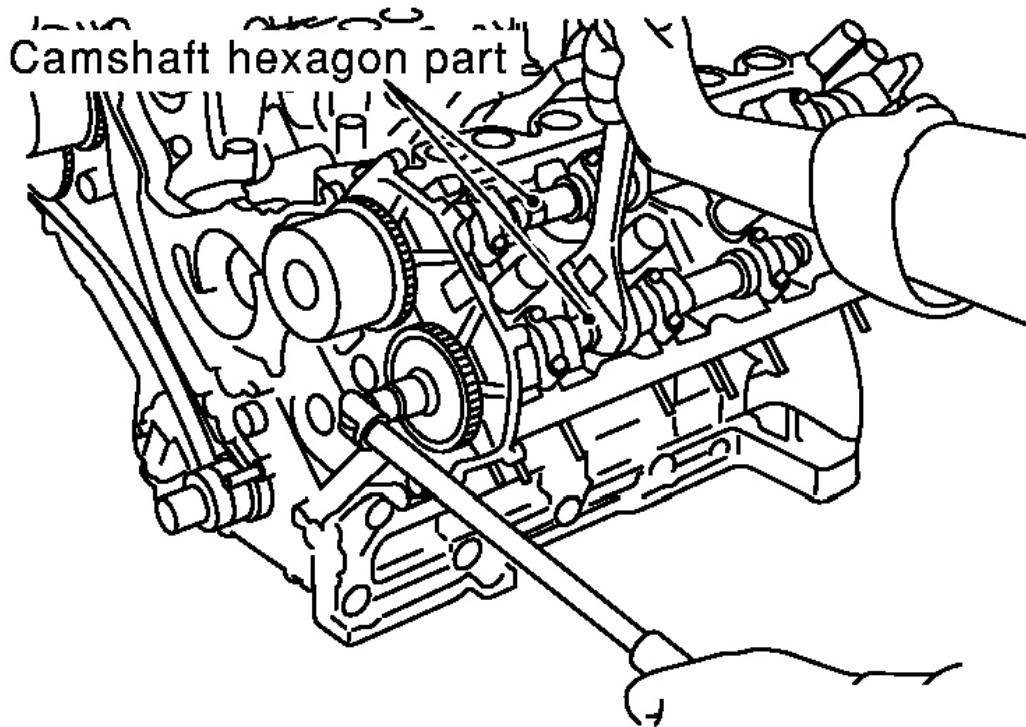

G02370041

Fig. 88: Removing Camshaft Sprocket


Courtesy of NISSAN MOTOR CO., U.S.A.

3. Loosen fixing bolts in the reverse order of that shown in the figure to remove camshaft brackets.
 - Lightly tapping with plastic hammer, remove No. 1 camshaft bracket and No. 6 camshaft bracket.

NOTE: **The bottom surface of each bracket will be stuck to cylinder head because of liquid gasket.**

Right bank

Exhaust

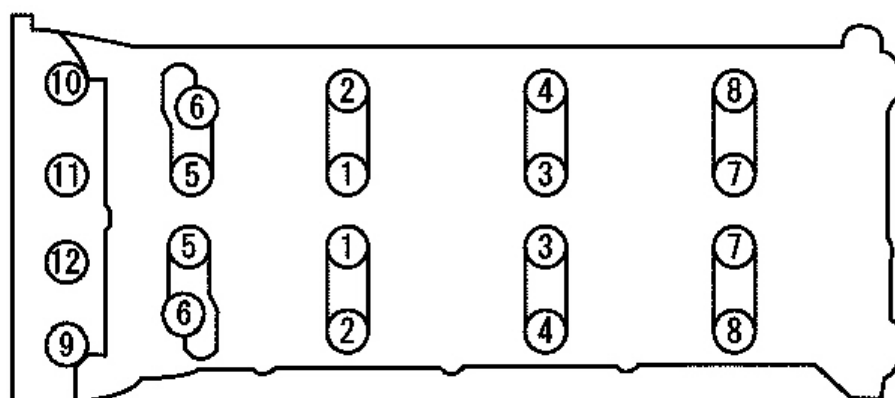


Engine front



Intake

Left bank

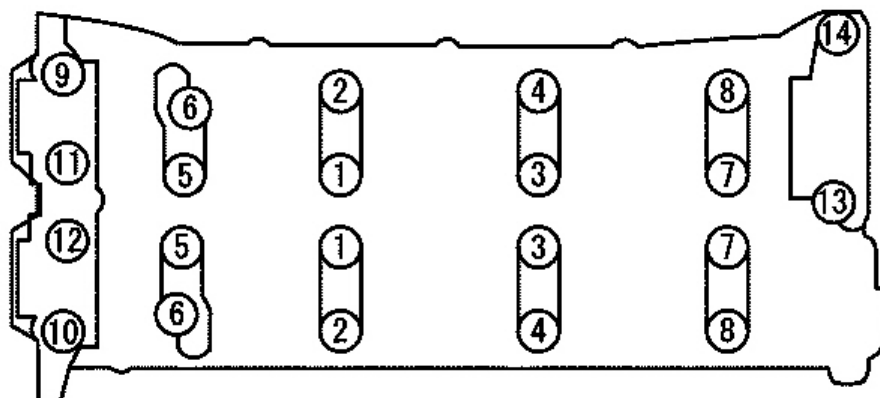

Exhaust

G02370042

Fig. 89: Identifying Removal Sequence Of Camshaft Brackets Bolts
Courtesy of NISSAN MOTOR CO., U.S.A.

4. Remove camshaft.
5. Remove adjusting shims and valve lifters if necessary.
 - Correctly identify location where each part is installed. Keep parts in an organized way to avoid mixing them up.

INSPECTION AFTER REMOVAL

Camshaft Runout


1. Put V block on precise flat bed, and support No. 2 and No. 5 journal of camshaft.

CAUTION: Do not support journal No.1 (on the side of camshaft sprocket) because it has a different diameter from the other four locations.

2. Set a dial indicator vertically to No.3 journal.
3. Turn camshaft to one direction with hands, and measure camshaft runout on a dial indicator. (Total indicator reading)

Limit: 0.02 mm (0.0008 in)

- If it exceeds the limit, replace camshaft.

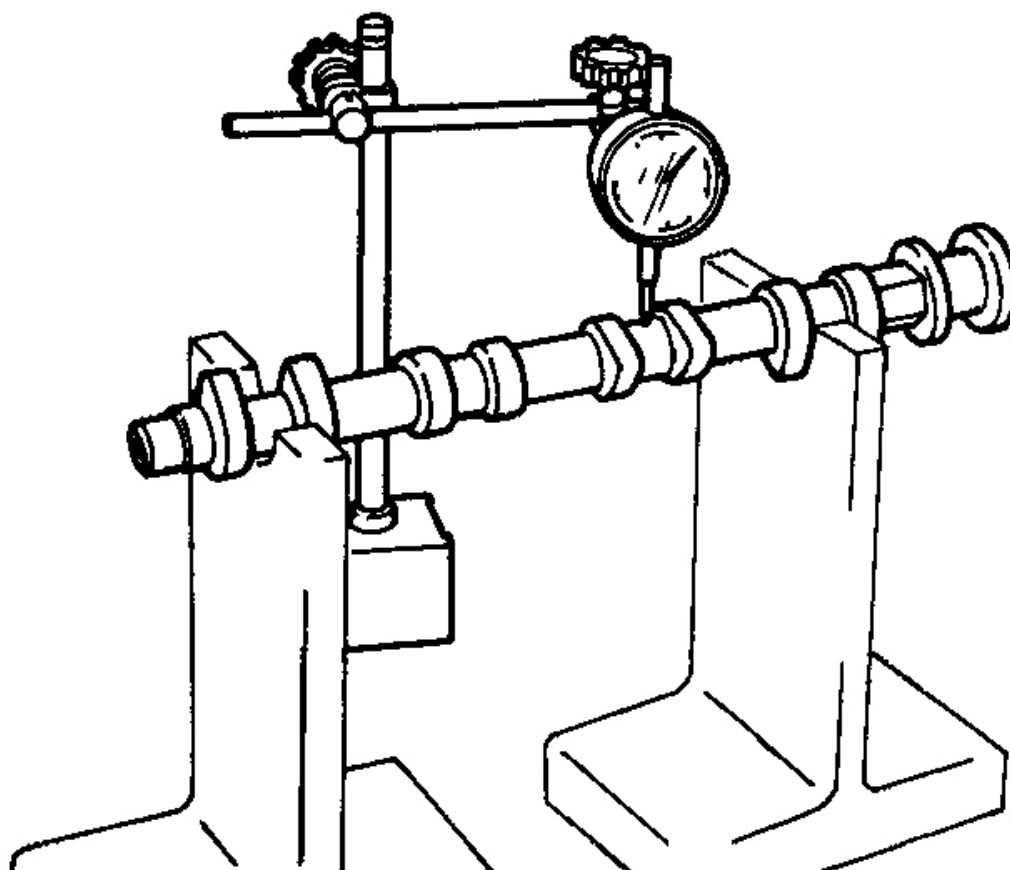

G02370043

Fig. 90: Checking Camshaft Runout
Courtesy of NISSAN MOTOR CO., U.S.A.

Camshaft Cam Height

- Measure camshaft cam height.


Standard:

Intake: 44.865 - 45.055 mm (1.7663 - 1.7738 in)

Exhaust: 43.925 - 44.115 mm (1.7293 - 1.7368 in)

Cam wear

limit: 0.2 mm (0.008 in)

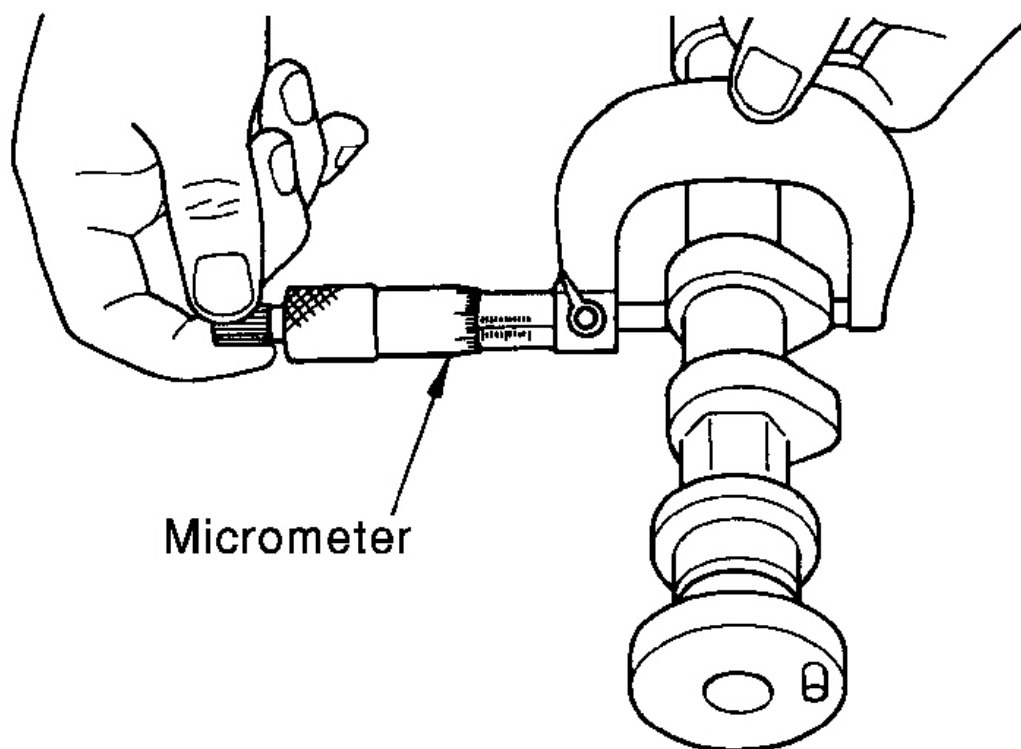

G02370044

Fig. 91: Checking Camshaft Cam Height
Courtesy of NISSAN MOTOR CO., U.S.A.

- If it exceeds the limit, replace camshaft.

Camshaft Journal Oil Clearance


CAMSHAFT JOURNAL OUTER DIAMETER

- Measure outer diameter of camshaft journal with a micrometer.

Standard:

No. 1: 25.938 - 25.955 mm (1.0212 - 1.0218 in)

No. 2, 3, 4, 5: 25.953 - 25.970 mm (1.0218 - 1.0224 in)

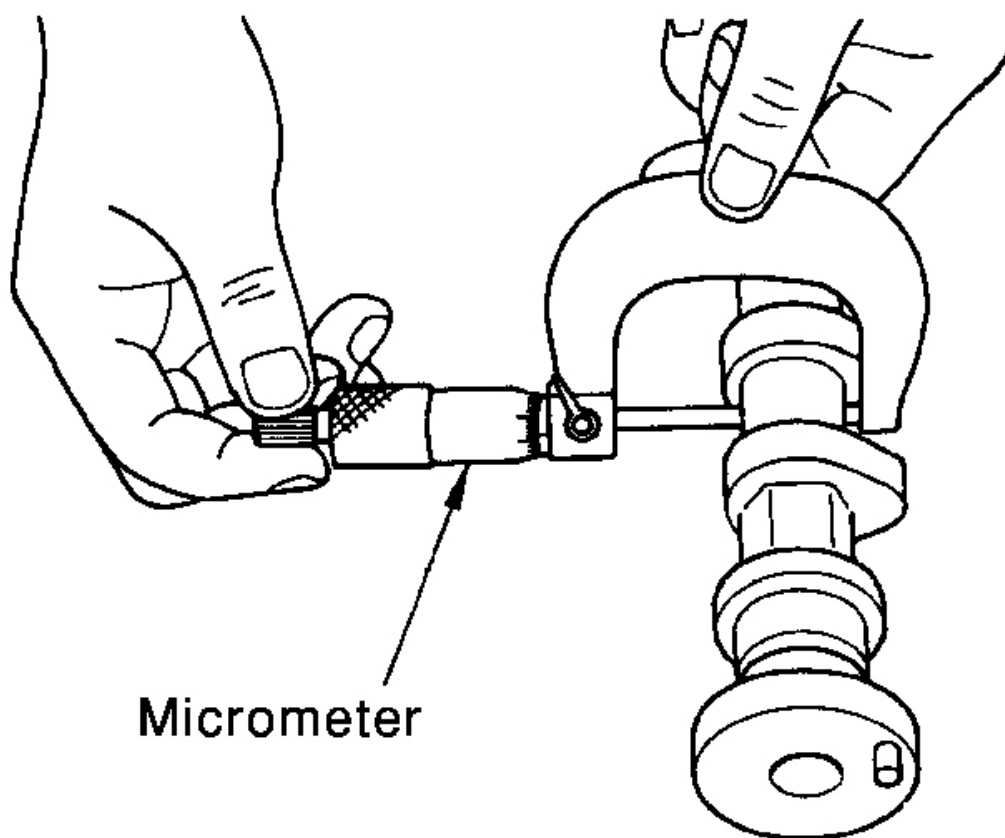

Micrometer

G02370045


Fig. 92: Checking Outer Diameter Of Camshaft Journal With Micrometer
Courtesy of NISSAN MOTOR CO., U.S.A.

CAMSHAFT BRACKET INNER DIAMETER

- Tighten camshaft bracket bolt with specified torque. Refer to "INSTALLATION" for the tightening procedure.
- Measure the inner diameter "A" of camshaft bracket with an inside micrometer.

Standard:

26.000 - 26.021 mm (1.0236 - 1.0244 in)

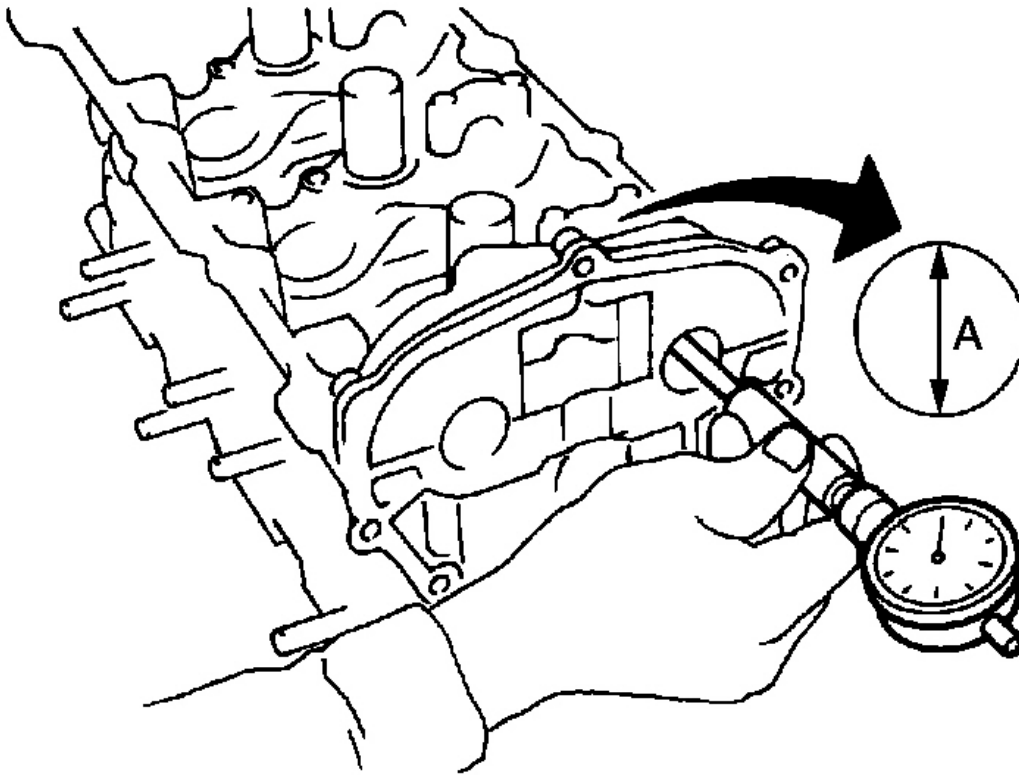

G02370046

Fig. 93: Checking Camshaft Bracket Inner Diameter
Courtesy of NISSAN MOTOR CO., U.S.A.

CAMSHAFT JOURNAL OIL CLEARANCE

- (Journal oil clearance) = (Camshaft bracket inner diameter) -(Camshaft journal outer diameter)

Standard:

No. 1: 0.045 - 0.083 mm (0.0018 - 0.0033 in)

No. 2, 3, 4, 5: 0.030 - 0.068 mm (0.0012 - 0.0027 in)

- If out of the standard, replace either or both camshaft and cylinder head.

NOTE: It is impossible to replace only camshaft bracket as camshaft bracket is manufactured with cylinder head. Replace the whole cylinder head assembly.


Camshaft End Play

1. Install camshaft in cylinder head. Refer to "CAMSHAFT" for tightening procedure.

2. Install a dial indicator in thrust direction on front end of camshaft. Measure the camshaft end play when camshaft is moved forward/ backward (in direction to axis).

Standard:

0.115 - 0.188 mm (0.0045 - 0.0074 in)

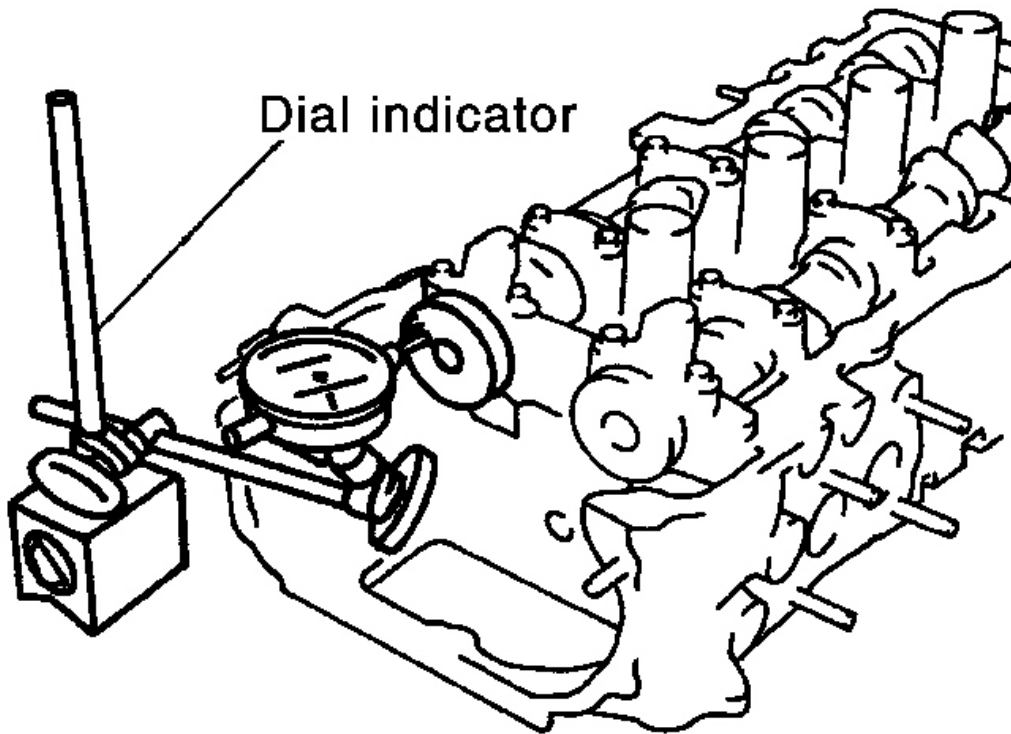

G02370047

Fig. 94: Checking Camshaft End Play
Courtesy of NISSAN MOTOR CO., U.S.A.


- Measure the following parts if out of the standard.
 - Dimension "A" for camshaft No. 1 journal

Standard: 30.500 - 30.548 mm (1.2008 - 1.2027 in)

- Dimension "B" for cylinder head No. 1 journal

Standard: 30.360 - 30.385 mm (1.1953 - 1.1963 in)

- Refer to the standards above, and then replace camshaft and/ or cylinder head.

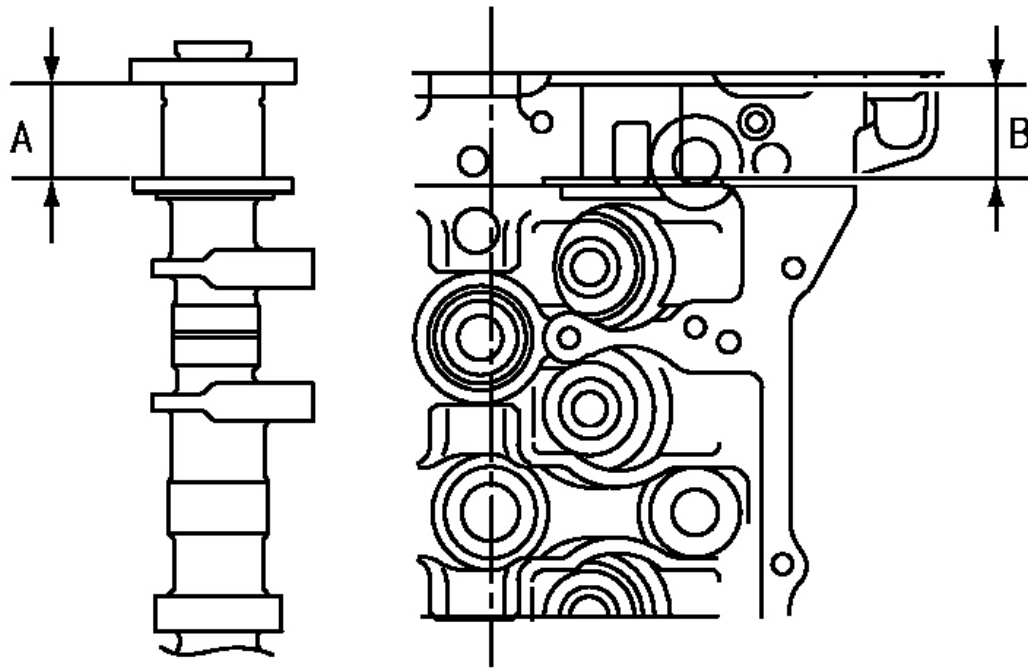

G02370048

Fig. 95: Identifying Dimension For Camshaft No 1 Journal
Courtesy of NISSAN MOTOR CO., U.S.A.

Camshaft Sprocket Runout


1. Put V-block on precise flat table, and support No. 2 and No. 5 journal of camshaft.

CAUTION: Do not support journal No. 1 (on the side of camshaft sprocket) because it has a different diameter from the other four locations.

2. Measure camshaft sprocket runout with a dial indicator (total indicator reading).

Limit: 0.15 mm (0.0059 in)

- If it exceeds the limit, replace camshaft sprocket.

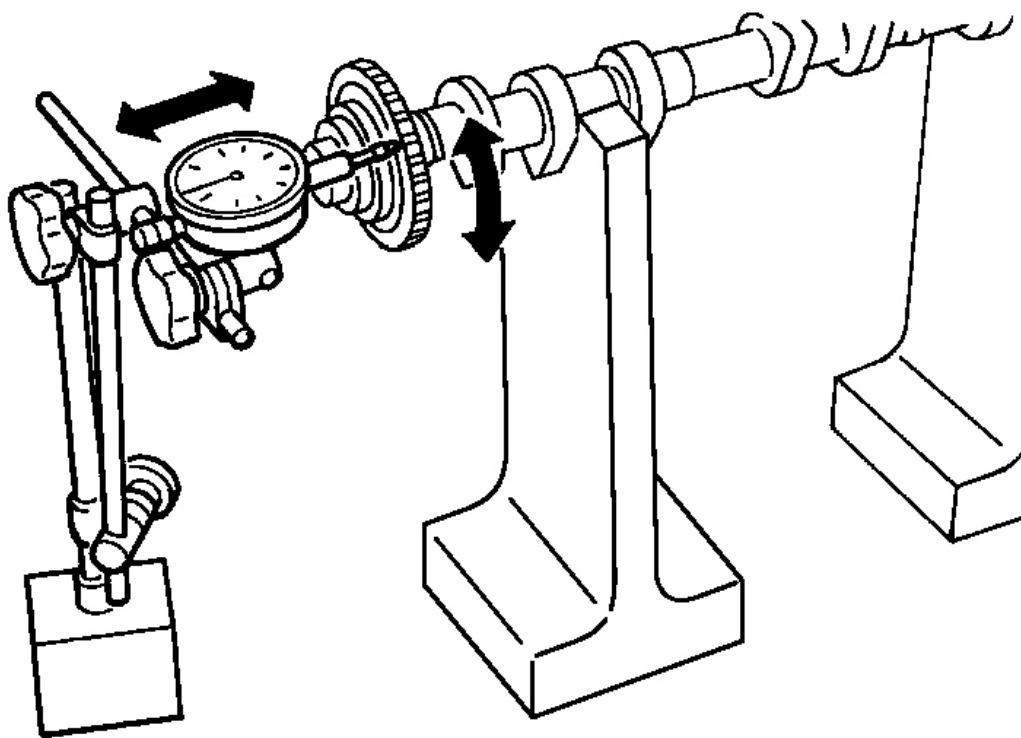

G02370049

Fig. 96: Checking Camshaft Sprocket Runout
Courtesy of NISSAN MOTOR CO., U.S.A.

Valve Lifter and Adjusting Shim

Check if surface of valve lifter and adjusting shim has any wear or cracks.

- If anything above is found, replace valve lifter or adjusting shim.
- When replacing adjusting shim. Refer to "**VALVE CLEARANCE**".


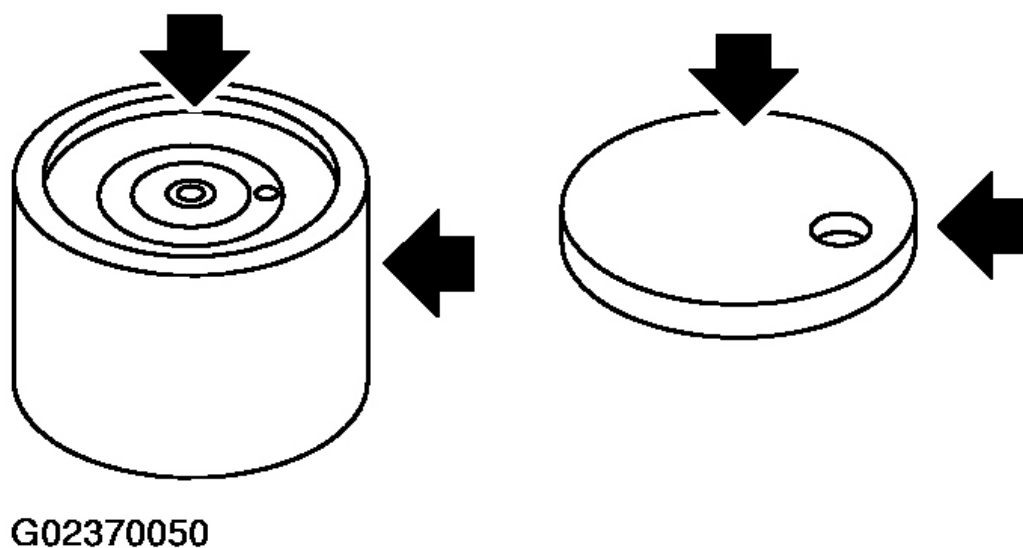


Fig. 97: Identifying Valve Lifter And Adjusting Shim
Courtesy of NISSAN MOTOR CO., U.S.A.

Valve Lifter Clearance

VALVE LIFTER OUTER DIAMETER

- Measure outer diameter of valve lifter with a micrometer.
Standard: 33.965 - 33.975 mm (1.3372 - 1.3376 in)

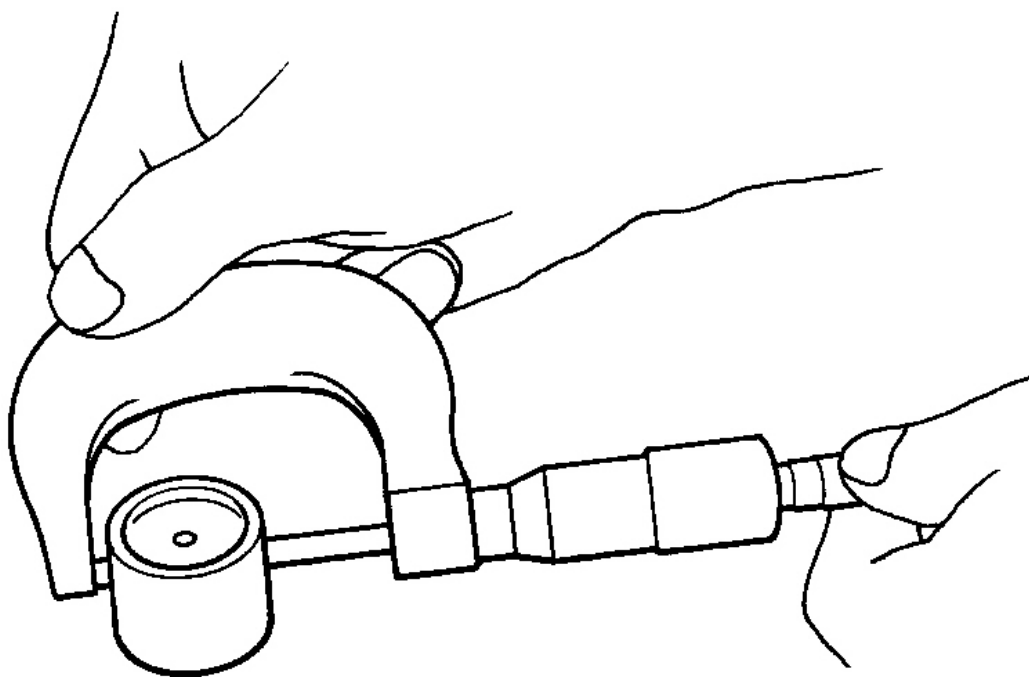

G02370051


Fig. 98: Checking Outer Diameter Of Valve Lifter With Micrometer
Courtesy of NISSAN MOTOR CO., U.S.A.

VALVE LIFTER HOLE DIAMETER

- Measure inner diameter of valve lifter hole of cylinder head with an inside micrometer.

Standard:

34.000 - 34.016 mm (1.3386 - 1.3392 in)

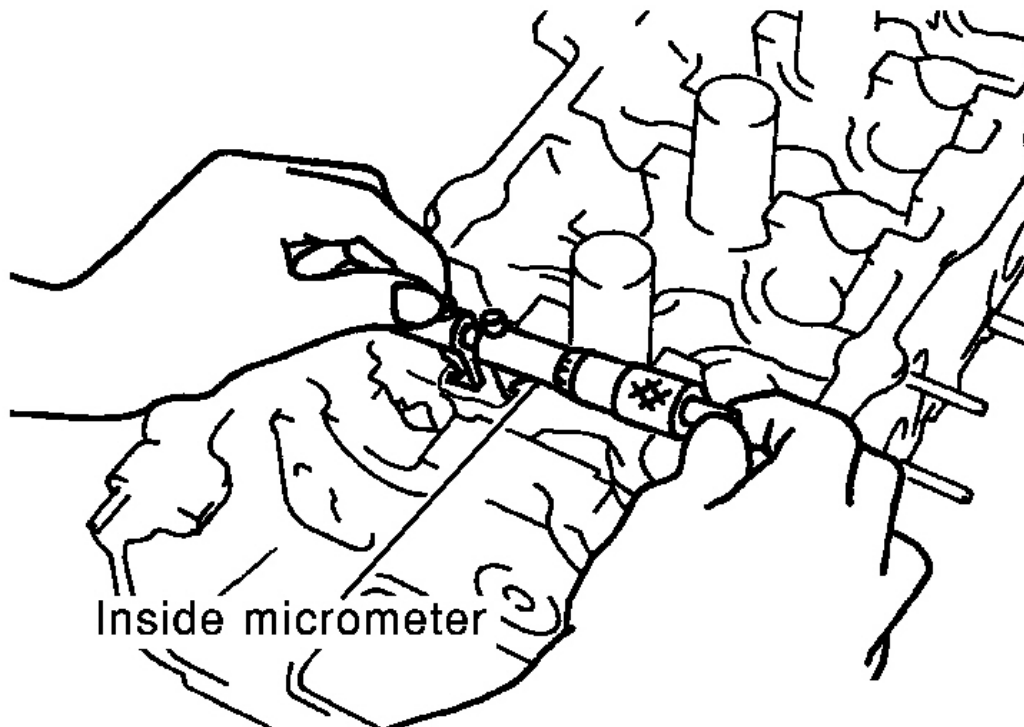

G02370052

Fig. 99: Checking Inner Diameter Of Valve Lifter Hole Of Cylinder Head
Courtesy of NISSAN MOTOR CO., U.S.A.

VALVE LIFTER CLEARANCE

- (Valve lifter clearance) = (valve lifter hole diameter) - (valve lifter outer diameter)

Standard:

0.025 - 0.051 mm (0.0010 - 0.0020 in)

- If out of the standard, referring to each standard of valve lifter outer diameter and valve lifter hole diameter, replace either or both valve lifter and cylinder head.


INSTALLATION

1. Install adjusting shims and valve lifters if necessary.
 - Install removed parts in the same locations as before.
2. Install camshafts. Refer to the **Fig. 100** below for identification of right and left bank, and intake and exhaust.

Bank	INT/EXH	Identification paint (front)	Identification paint (rear)	Identification rib	Inscribed symbol
Left	INT	Blue	—	No	LH
	EXH	—	Orange	No	LH
Right	INT	Blue	—	Yes	RH
	EXH	—	Orange	Yes	RH

G02370053

Fig. 100: Camshaft Installation Identification Chart
Courtesy of NISSAN MOTOR CO., U.S.A.

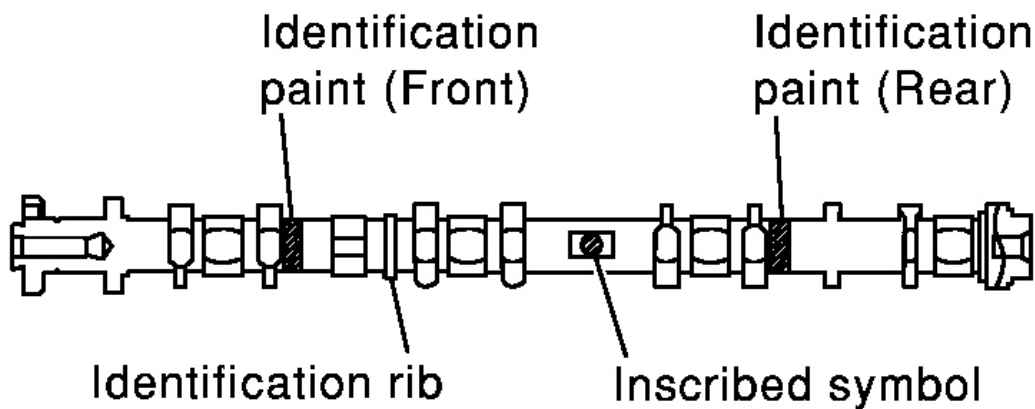


G02370054

Fig. 101: Identifying Identification Paint Mark And Identification Rib
Courtesy of NISSAN MOTOR CO., U.S.A.

- Install so that dowel pin at the front of camshaft face is in the direction shown in the figure. (No.1 cylinder at compression TDC)

Camshaft dowel pin

: At cylinder head upper face side in each bank

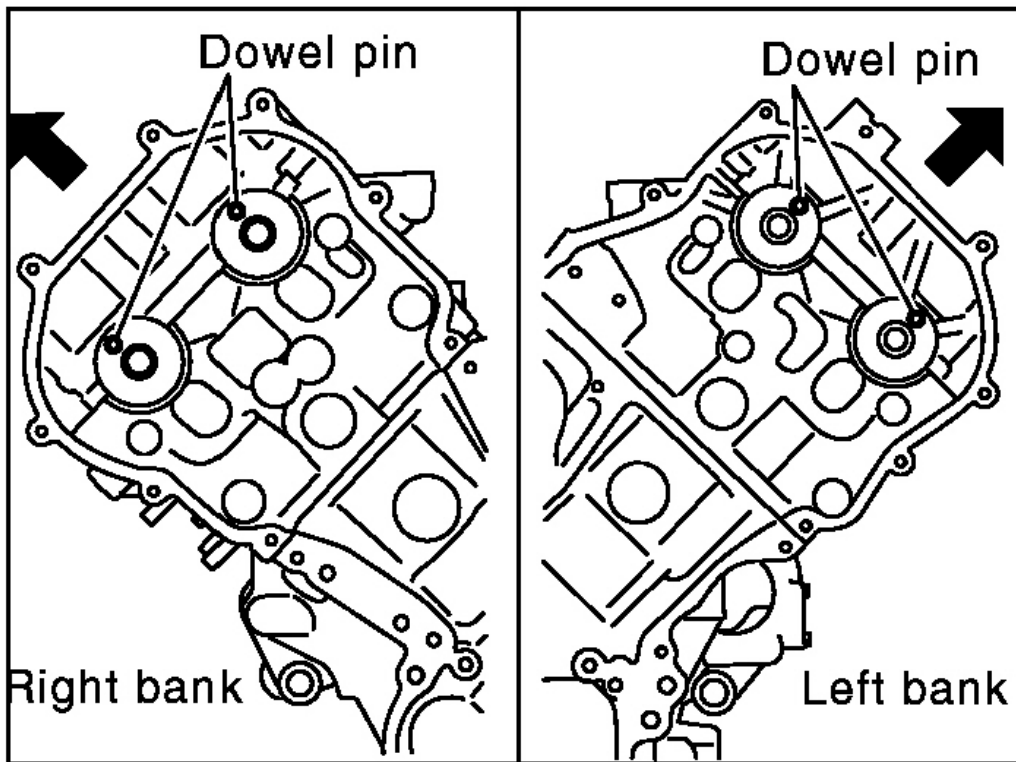


G02370055

Fig. 102: Identifying Dowel Pin Position

Courtesy of NISSAN MOTOR CO., U.S.A.

3. Install camshaft brackets as follows:
 - Remove foreign material completely from camshaft bracket backside and from cylinder head installation face.
 - Install by referring to installation location mark on upper surface and front mark.
 - Install so that installation location mark can be correctly read when viewed from the side of left exhaust bank.

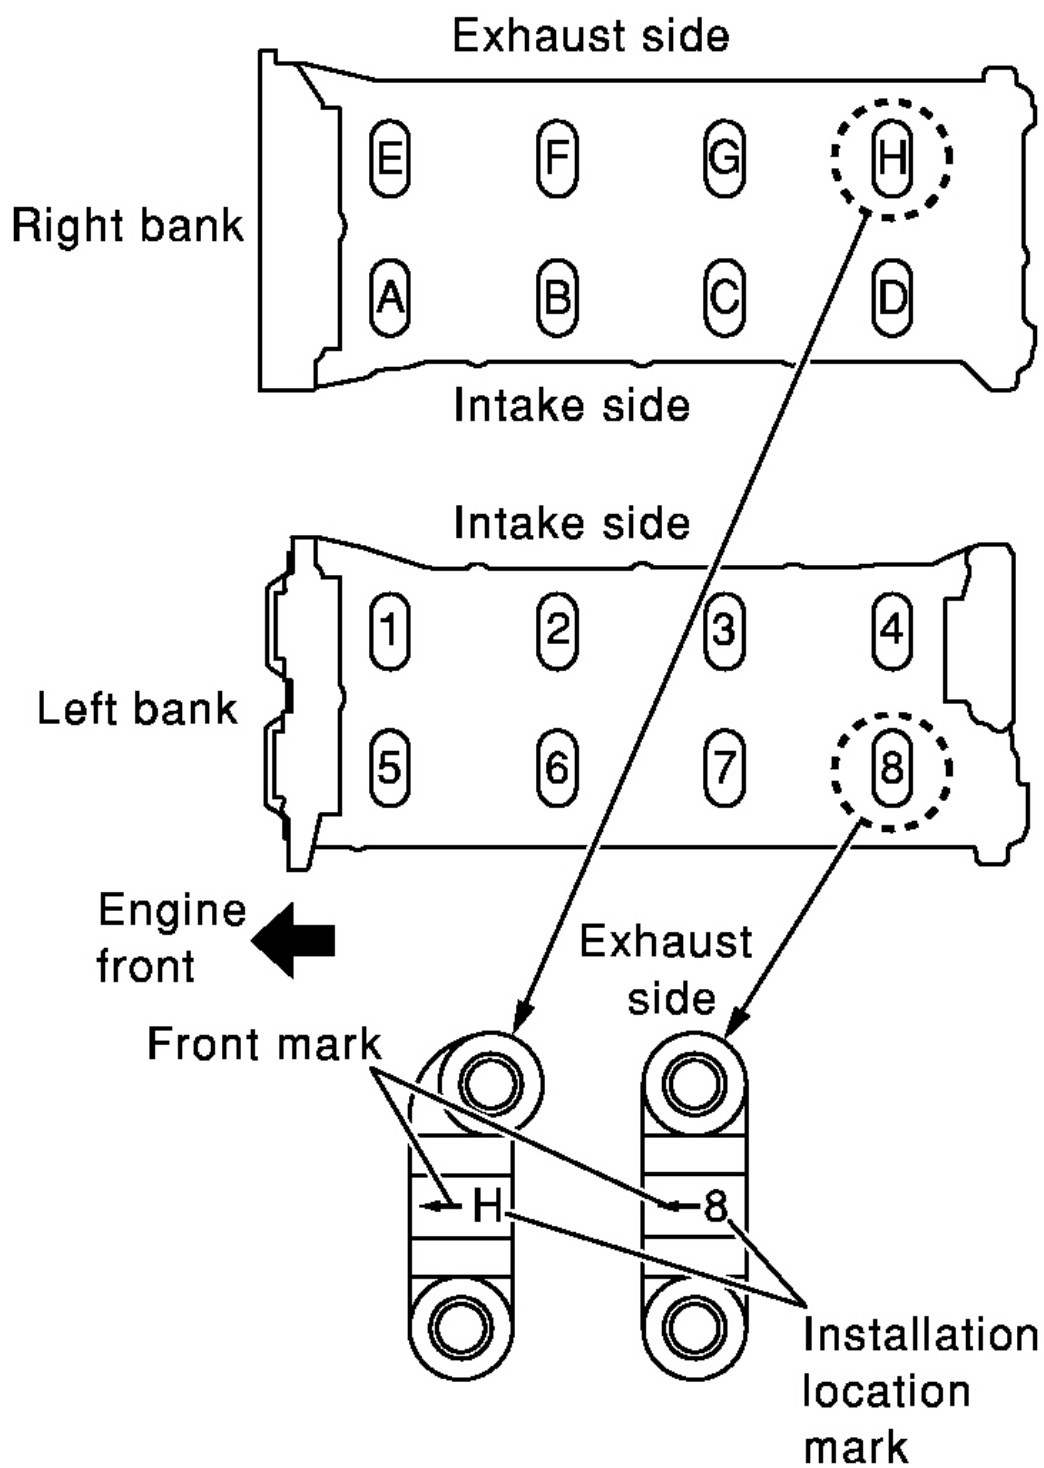

G02370056

Fig. 103: Installing Camshaft Brackets


Courtesy of NISSAN MOTOR CO., U.S.A.

- Apply liquid gasket to camshaft bracket (No.1) as in the figure.

Use Genuine RTV Silicone Sealant or equivalent. Refer to "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS".

CAUTION:

- After installation, be sure to wipe off any excessive liquid gasket leaking from part "A" and "B" (both on right and left sides).
- Remove completely any excess of liquid gasket inside bracket.

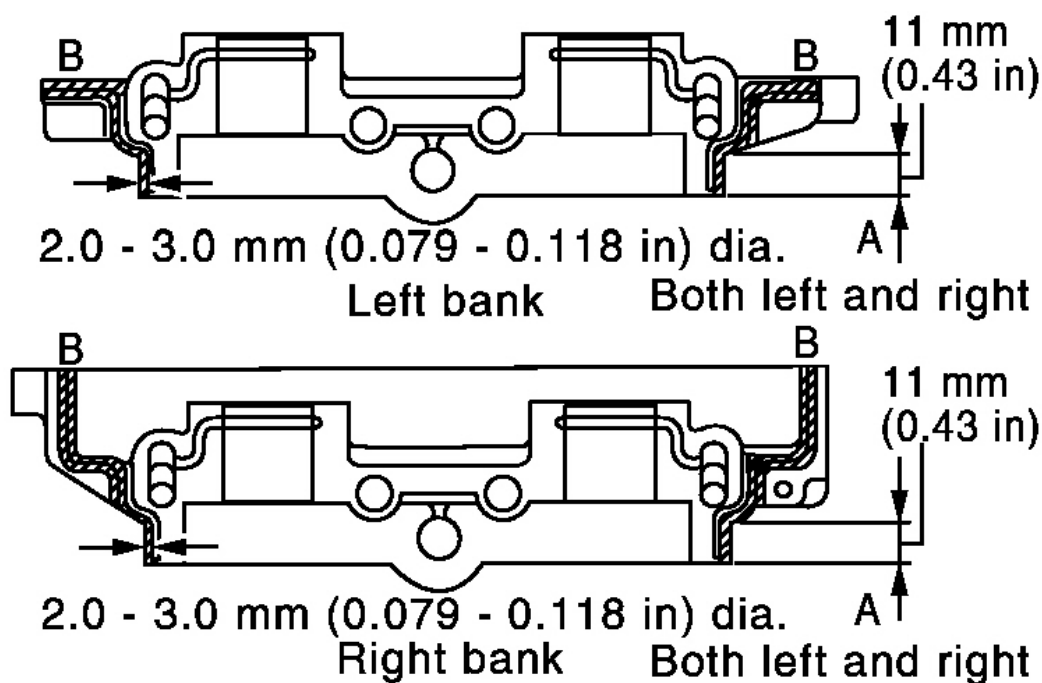

G02370057

Fig. 104: Applying Liquid Gasket To Camshaft Bracket (1 Of 2)

Courtesy of NISSAN MOTOR CO., U.S.A.

- Apply liquid gasket to camshaft bracket (INT,No.6) on left bank intake as in the illustration.

CAUTION:

- After installation, be sure to wipe off any excessive liquid

gasket leaking from part "A", and "B" (both on right and left sides).

- Remove completely any excess of liquid gasket inside bracket.

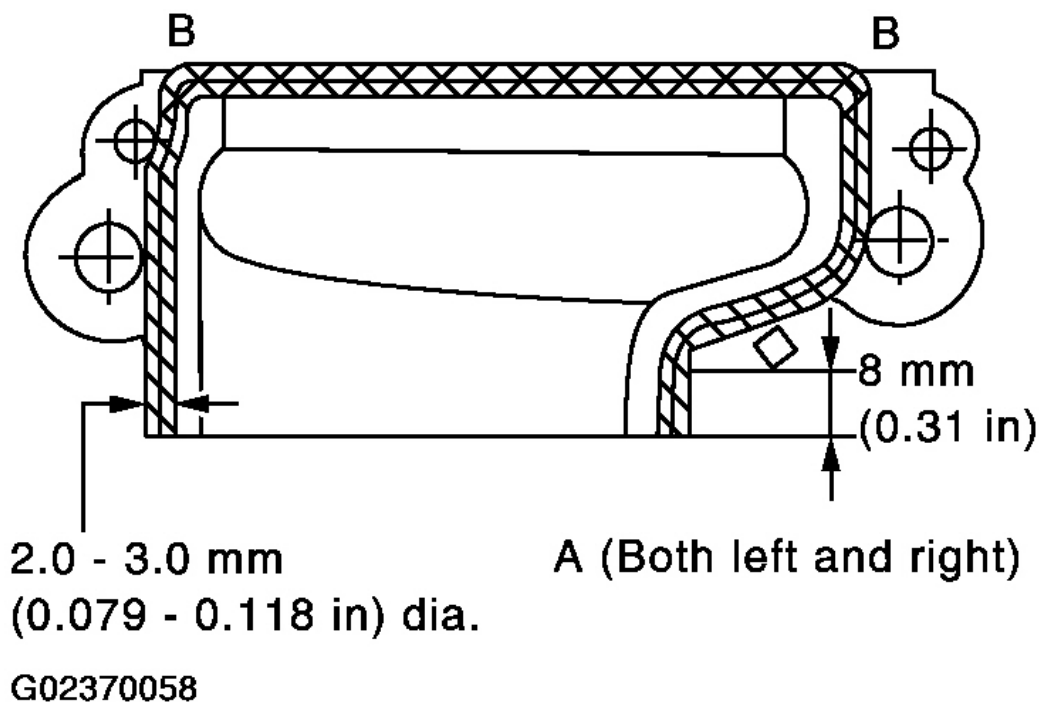


Fig. 105: Applying Liquid Gasket To Camshaft Bracket (2 Of 2)

Courtesy of NISSAN MOTOR CO., U.S.A.

4. Tighten camshaft bracket bolts in the following steps, in numerical order as shown in the figure.
 - a. Tighten No. 9 to 12 in numerical order as shown.
:2.0 N.m (0.2kg-m, 1 ft-lb)
 - b. Tighten No. 1 to 8 in numerical order as shown.
:2.0 N.m (0.2kg-m, 1 ft-lb)
 - c. Tighten No. 13 to 14 in numerical order as shown. (Left bank only)
:2.0 N.m (0.2kg-m, 1 ft-lb)
 - d. Tighten all bolts in numerical order as shown.
:5.9 N.m (0.6 kg-m, 4 ft-lb)
 - e. Tighten No. 1 to 12 in numerical order as shown.
:10.4 N.m (1.1kg-m, 8 ft-lb)

f. Tighten No. 13 to 14 in numerical order as shown. (Left bank only)


:31.4 N.m (3.2kg-m, 23 ft-lb)

CAUTION: After tightening mounting bolts of camshaft brackets, be sure to wipe off excessive liquid gasket from the parts listed below.

- Mating surface of rocker cover
- Mating surface of camshaft bracket (INT,No.6) on left bank.
- Mating surface of front cover

Right bank

Exhaust

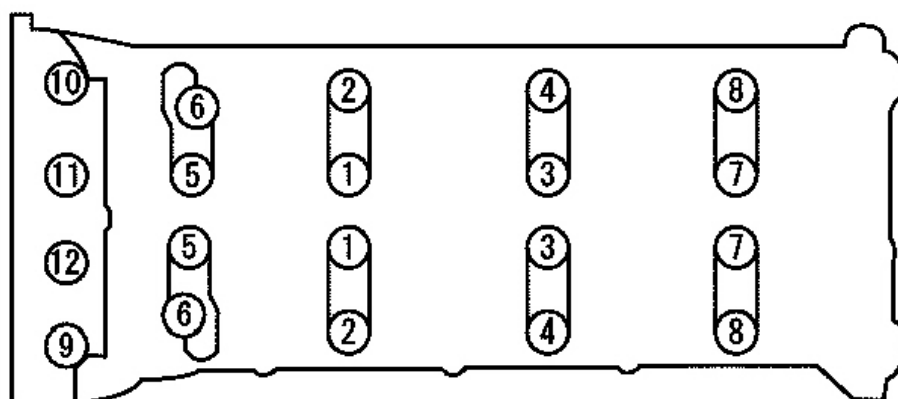


Engine front



Intake

Left bank

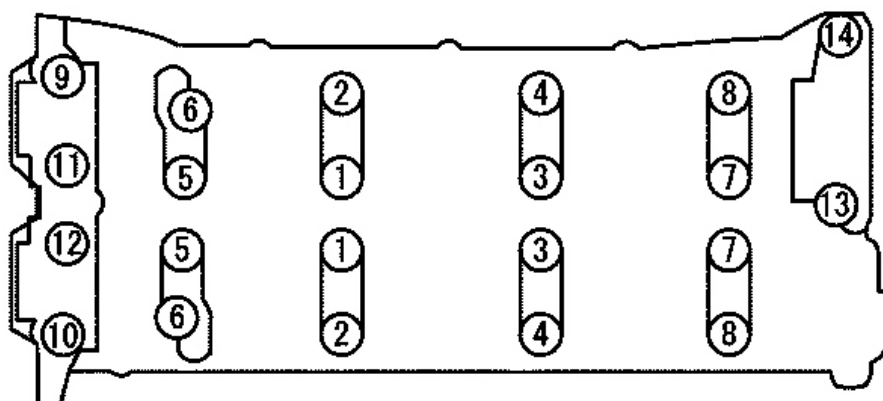

Exhaust

G02370059

Fig. 106: Identifying Tightening Sequence Of Camshaft Bracket Bolts
 Courtesy of NISSAN MOTOR CO., U.S.A.

5. Install camshaft sprockets.

- Install by checking with identification mark on surface.
- Install camshaft sprocket (EXH) by selectively using the groove of dowel pin according to the bank. (Common part used for both banks.)
- Lock the hexagonal part of camshaft in the same way as for removal, and tighten mounting bolts.

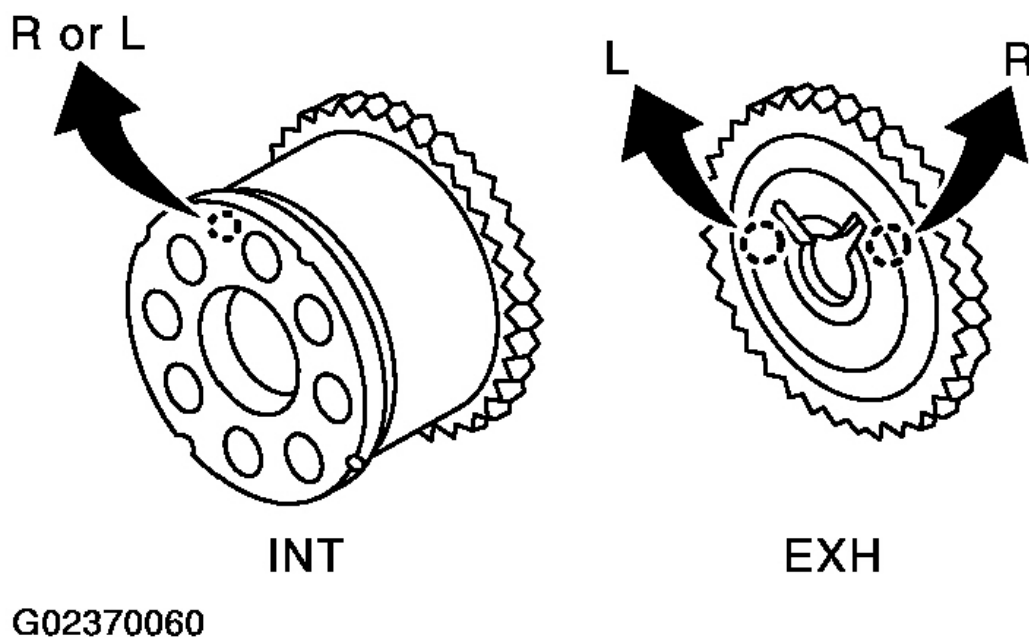


Fig. 107: Installing Camshaft Sprockets
 Courtesy of NISSAN MOTOR CO., U.S.A.

6. Check and adjust valve clearances. Refer to "VALVE CLEARANCE".
7. Install in the reverse order of removal.

INSPECTION AFTER INSTALLATION

Inspection of Camshaft Sprocket (INT) Oil Groove

CAUTION:

- Perform this inspection only when DTC P0011 and/or P0021 are detected in self-diagnostic results of CONSULT-II and it is directed according to inspection procedure of EC section. Refer to "TROUBLE DIAGNOSIS".


- **Check when the engine is cold so as to prevent burns from any splashing engine oil.**

1. Check the engine oil level. Refer to "**ENGINE OIL**".
2. Perform the following procedure so as to prevent the engine from being unintentionally started while checking.
 - a. Release fuel pressure. Refer to "**FUEL PRESSURE RELEASE**".
 - b. Disconnect ignition coil and injector harness connectors.
3. Remove intake valve timing control solenoid valve. Refer to "**TIMING CHAIN**".
4. Crank the engine, and then make sure that engine oil comes out from intake valve timing control cover oil hole. End crank after checking.

WARNING: Be careful not to touch rotating parts (drive belt, idler pulley, and crankshaft pulley, etc.).

CAUTION: Engine oil may squirt from intake valve timing control solenoid valve installation hole during cranking. Use a shop cloth to prevent the engine components and the vehicle. Do not allow engine oil to get on rubber components such as drive belt or engine mount insulators. Immediately wipe off any splashed engine oil.

- Clean oil groove between oil strainer and intake valve timing control solenoid valve if engine oil does not come out from intake valve timing control cover oil hole. Refer to "**LUBRICATION SYSTEM**".

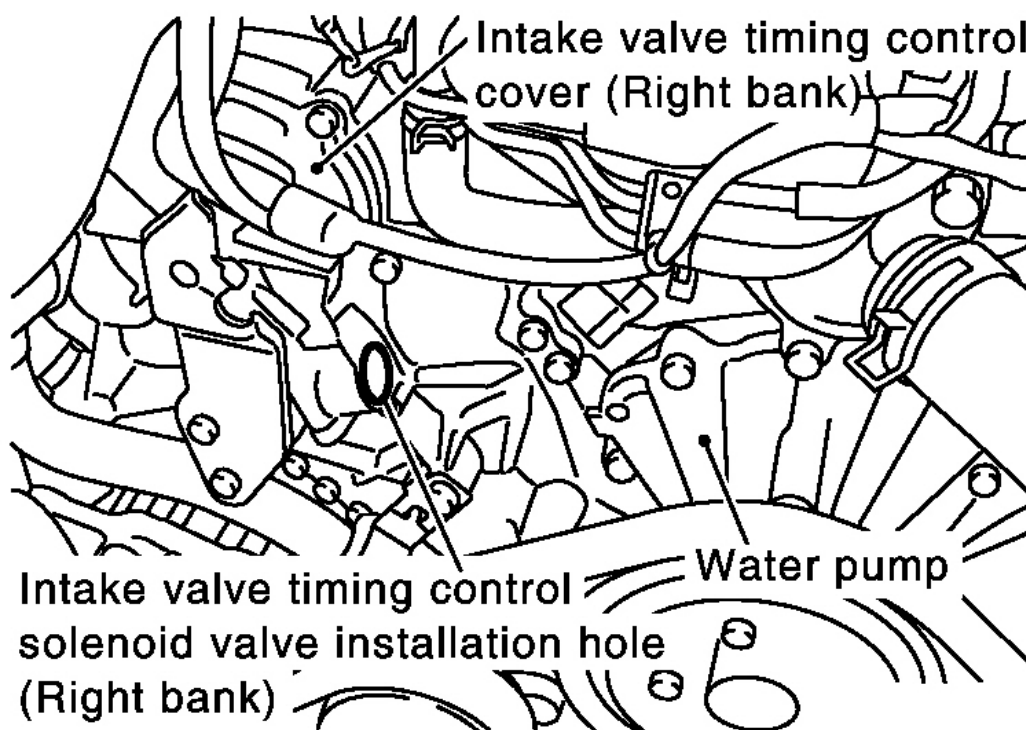

G02370061

Fig. 108: Checking That Engine Oil Comes Out From Intake Valve Timing Control Cover Oil Hole
Courtesy of NISSAN MOTOR CO., U.S.A.


5. Remove components between intake valve timing control solenoid valve and camshaft sprocket (INT), and then check each oil groove for clogging.
 - Clean oil groove if necessary. Refer to "**LUBRICATION SYSTEM**".
6. After inspection, install removed parts.

VALVE CLEARANCE

INSPECTION

Perform inspection as follows after removal, installation or replacement of camshaft or valve-related parts, or if there is unusual engine conditions due to changes in valve clearance (engine starting, idling, and/or noise).


1. Remove rocker cover (right and left bank) with power tool. Refer to "**ROCKER COVER**".
2. Turn crankshaft pulley in normal direction (clockwise when viewed from engine front) to align TDC identification notch (without paint mark) with timing indicator.

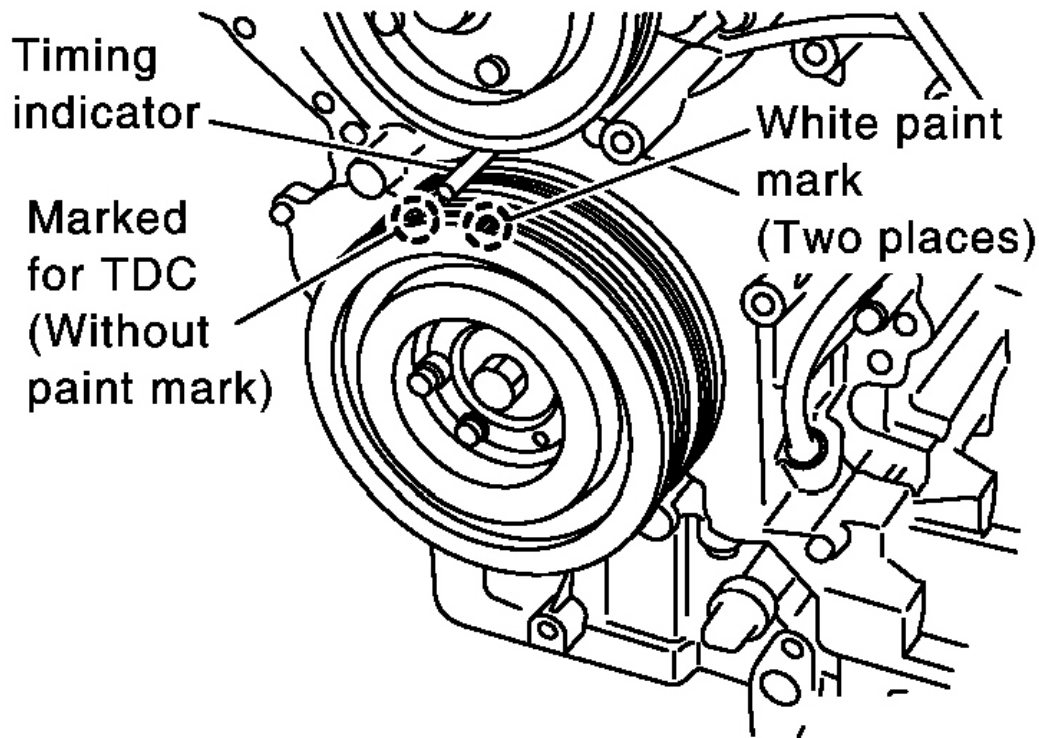

G02370062

Fig. 109: Aligning TDC Identification Notch (Without Paint Mark) With Timing Indicator
Courtesy of NISSAN MOTOR CO., U.S.A.

3. At this time, make sure that the both intake and exhaust cam noses of No. 1 cylinder (top front on left bank) face outside.
 - If they do not face outside, turn crankshaft pulley by 360 degrees once more.

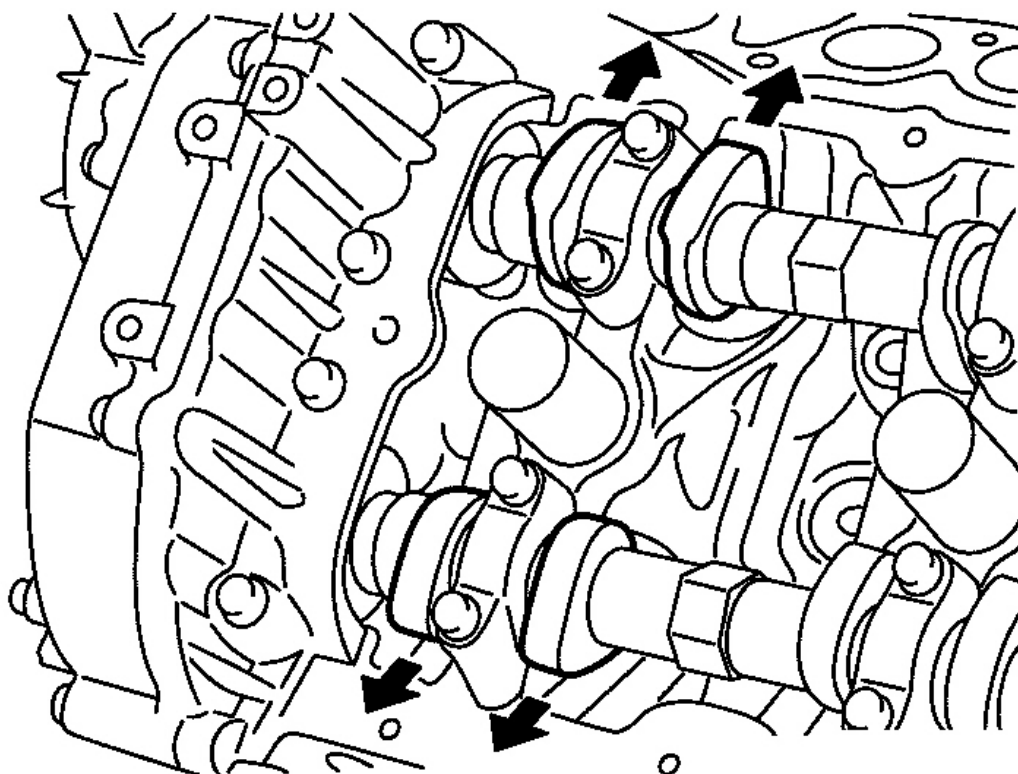


G02370063

Fig. 110: Checking That Intake And Exhaust Cam Noses Of No 1 Cylinder (Top Front On Left Bank) Face Outside

Courtesy of NISSAN MOTOR CO., U.S.A.

4. Measure the clearance between valve lifter and camshaft with a feeler gauge.

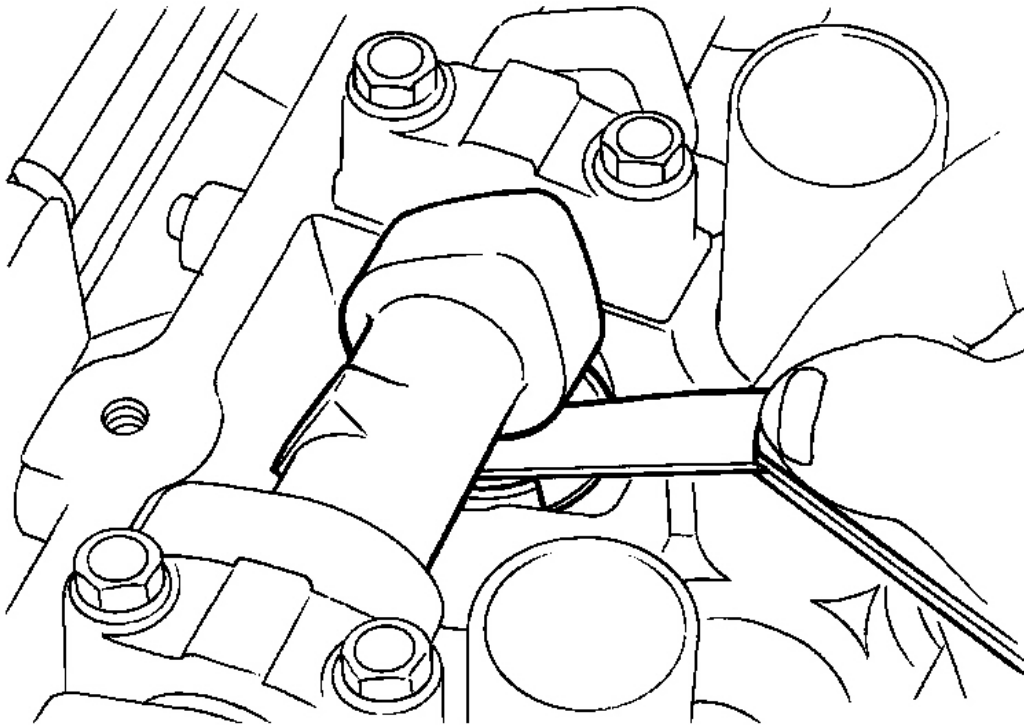

G02370064

Fig. 111: Checking Clearance Between Valve Lifter And Camshaft With Feeler Gauge
 Courtesy of NISSAN MOTOR CO., U.S.A.

Valve clearance:

VALVE CLEARANCE SPECIFICATION

	Cold	Hot ⁽¹⁾ (reference data)
Intake	0.26-0.34(0.010-0.013)	0.304-0.416(0.012-0.016)
Exhaust	0.29 - 0.37 (0.011 - 0.015)	0.308-0.432 (0.012 - 0.017)
(1) Approximately 80°C (176°F)		

- By referring to the figure, measure valve clearances at locations marked X as shown in the **Fig. 112** below (locations indicated with black arrow in figure) with a feeler gauge.

NOTE: **Firing order 1-8-7-3-6-5-4-2**

- No.1 cylinder compression TDC

2005 Infiniti Q45

2005 ENGINE Engine Mechanical - Q45


Measuring position (Right bank)		No. 2 CYL	No. 4 CYL	No. 6 CYL	No. 8 CYL
No. 1 cylinder at TDC	EXH				×
	INT	×	×		
Measuring position (Left bank)		No. 1 CYL	No. 3 CYL	No. 5 CYL	No. 7 CYL
No. 1 cylinder at TDC	INT	×		×	
	EXH	×			×

G02370065

Fig. 112: Valve Clearances Measuring Location Chart (No 1 Cylinder Compression TDC)
Courtesy of NISSAN MOTOR CO., U.S.A.

↑ : Measurable at No. 1 cylinder
compression top dead center


↑ : Measurable at No. 3 cylinder
compression top dead center

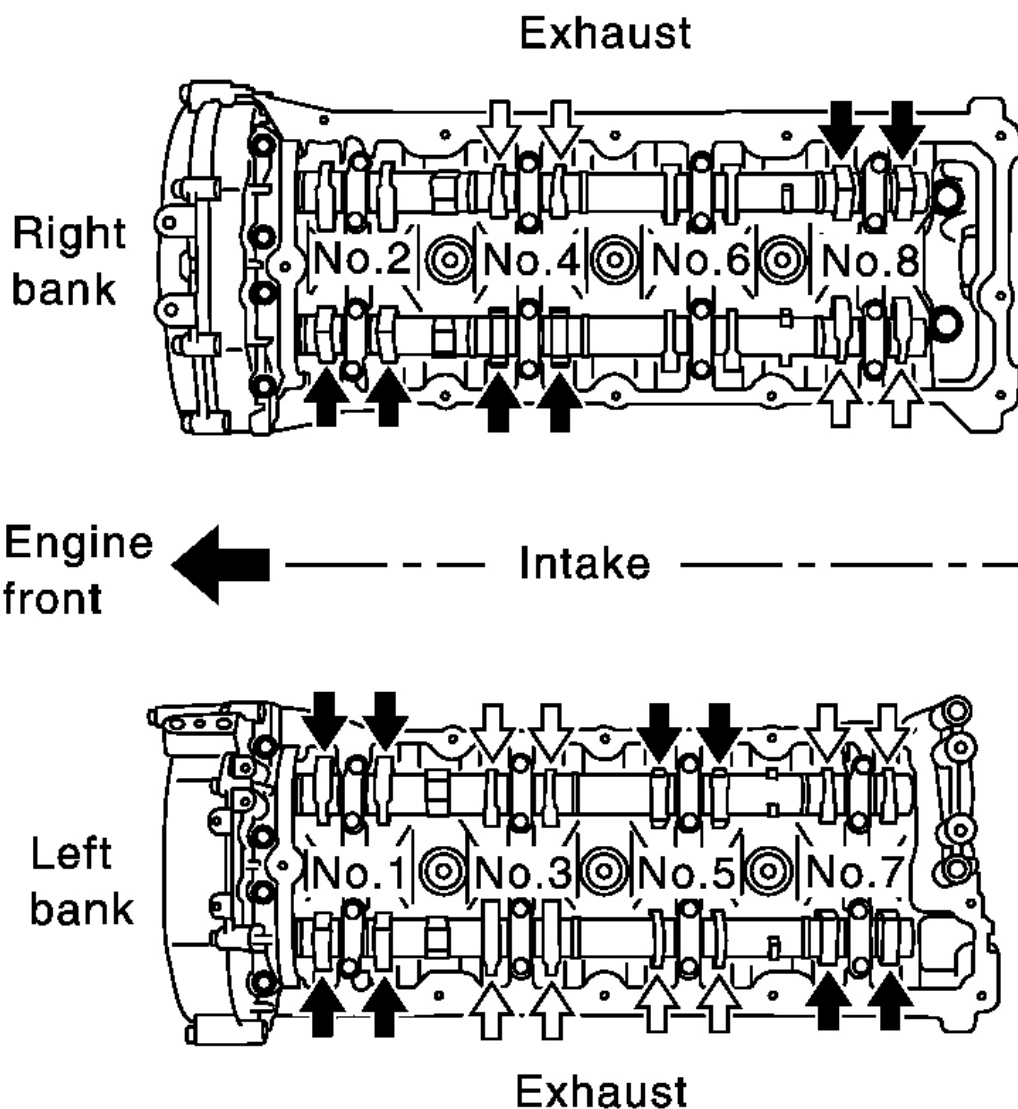

G02370066

Fig. 113: Identifying Intake And Exhaust Valve
Courtesy of NISSAN MOTOR CO., U.S.A.

6. Turn crankshaft pulley clockwise by 270 degrees from the position of No. 1 cylinder compression TDC to obtain No. 3 cylinder compression TDC.

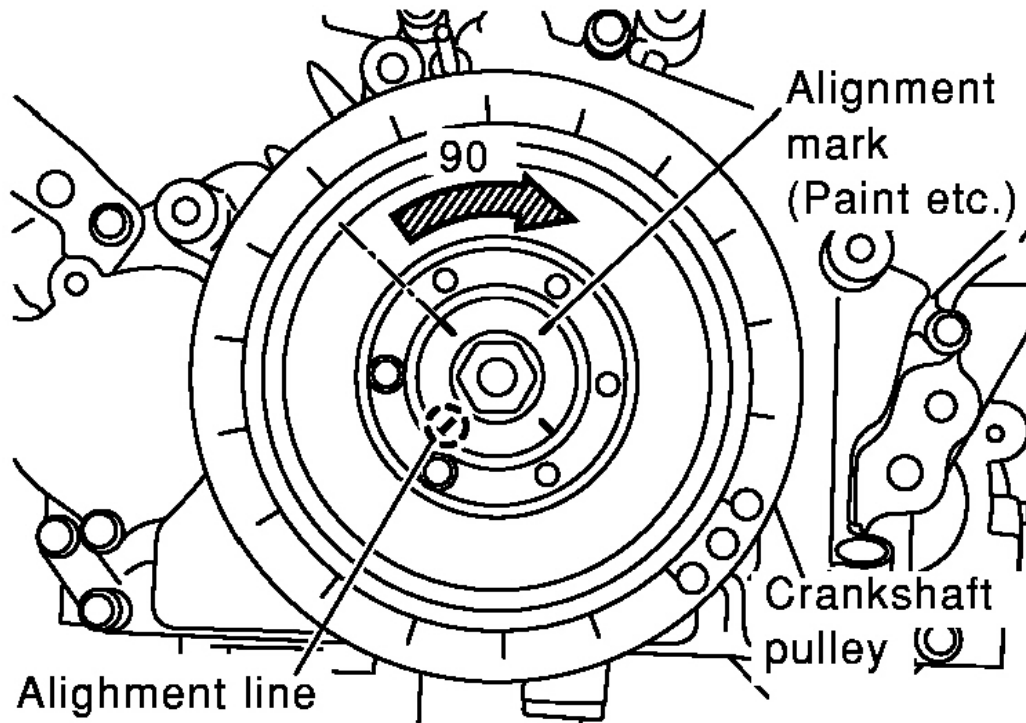

G02370067

Fig. 114: Identifying Alignment Mark On Crankshaft Pulley
Courtesy of NISSAN MOTOR CO., U.S.A.

7. By referring to the figure, measure valve clearances at locations marked X as shown in the **Fig. 115** below (locations indicated with white arrow in figure).
 - No.3 cylinder compression TDC.

2005 Infiniti Q45

2005 ENGINE Engine Mechanical - Q45


Measuring position (Right bank)		No. 2 CYL	No. 4 CYL	No. 6 CYL	No. 8 CYL
No. 3 cylinder at TDC	EXH		×		
	INT				×
Measuring position (Left bank)		No. 1 CYL	No. 3 CYL	No. 5 CYL	No. 7 CYL
No. 3 cylinder at TDC	INT		×		×
	EXH		×	×	

G02370068

Fig. 115: Valve Clearances Measuring Location Chart (No 3 Cylinder Compression TDC)
Courtesy of NISSAN MOTOR CO., U.S.A.

↑ : Measurable at No. 1 cylinder
compression top dead center


↑ : Measurable at No. 3 cylinder
compression top dead center

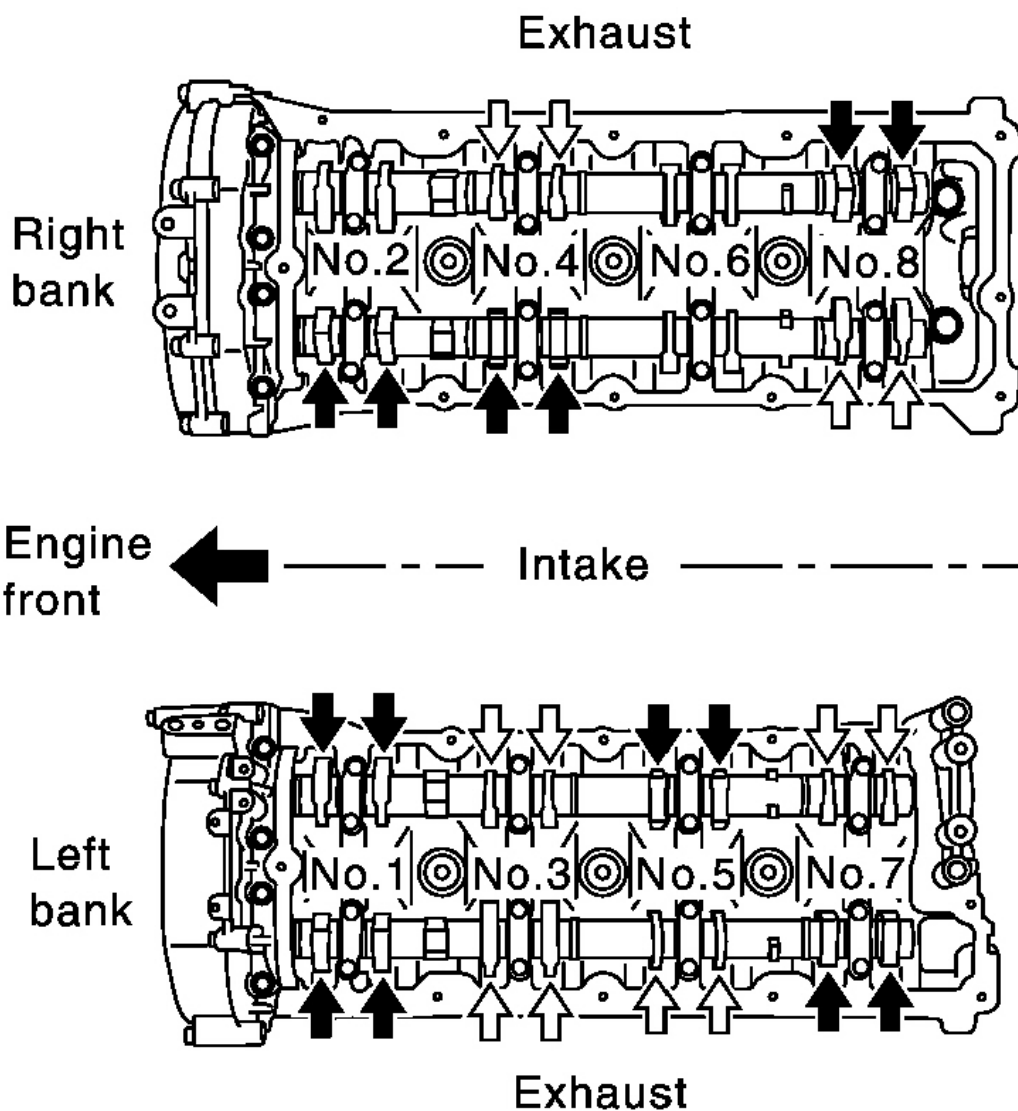

G02370069

Fig. 116: Identifying Intake And Exhaust Valve
Courtesy of NISSAN MOTOR CO., U.S.A.

8. Rotate crankshaft pulley clockwise (when view from engine front) by 90 degrees from the position of No. 3 cylinder compression TDC to align No. 6 cylinder at TDC of its compression stroke.

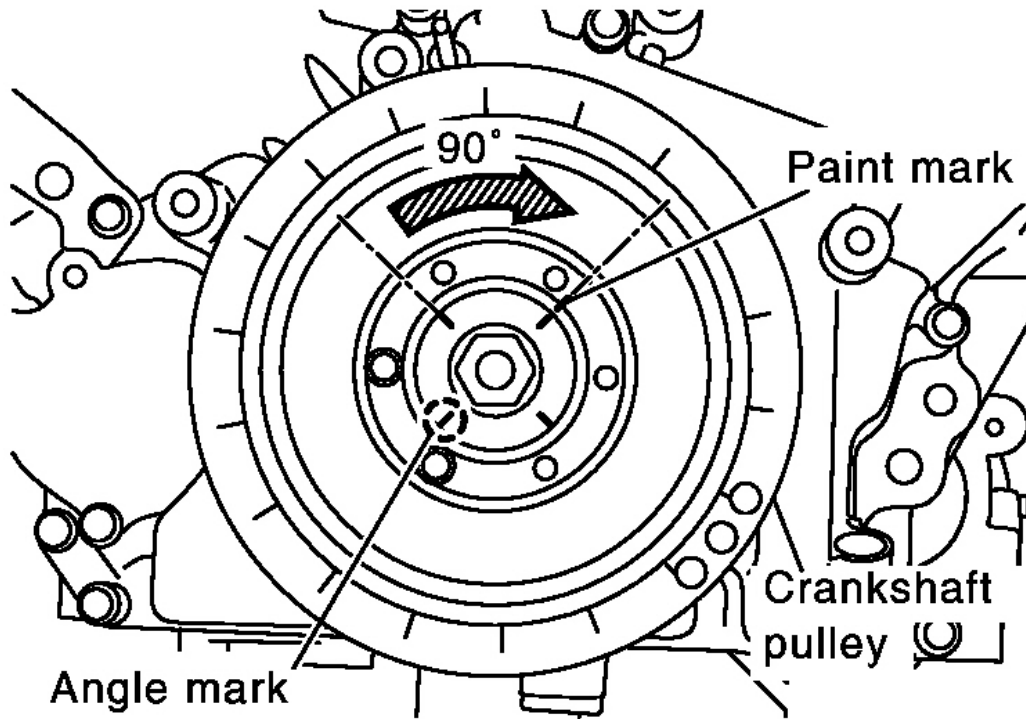

G02370070


Fig. 117: Identifying Angle Mark And Paint Mark On Crankshaft Pulley
Courtesy of NISSAN MOTOR CO., U.S.A.

- By referring to the figure, measure valve clearances at locations marked "X" as shown in the **Fig. 118** below.
- No. 6 cylinder compression TDC

Measuring position (Right bank)		No. 2 CYL	No. 4 CYL	No. 6 CYL	No. 8 CYL
No. 6 cylinder at TDC	EXH	×		×	
	INT			×	

G02370071

Fig. 118: Valve Clearances Measuring Location Chart (No 6 Cylinder Compression TDC)
 Courtesy of NISSAN MOTOR CO., U.S.A.

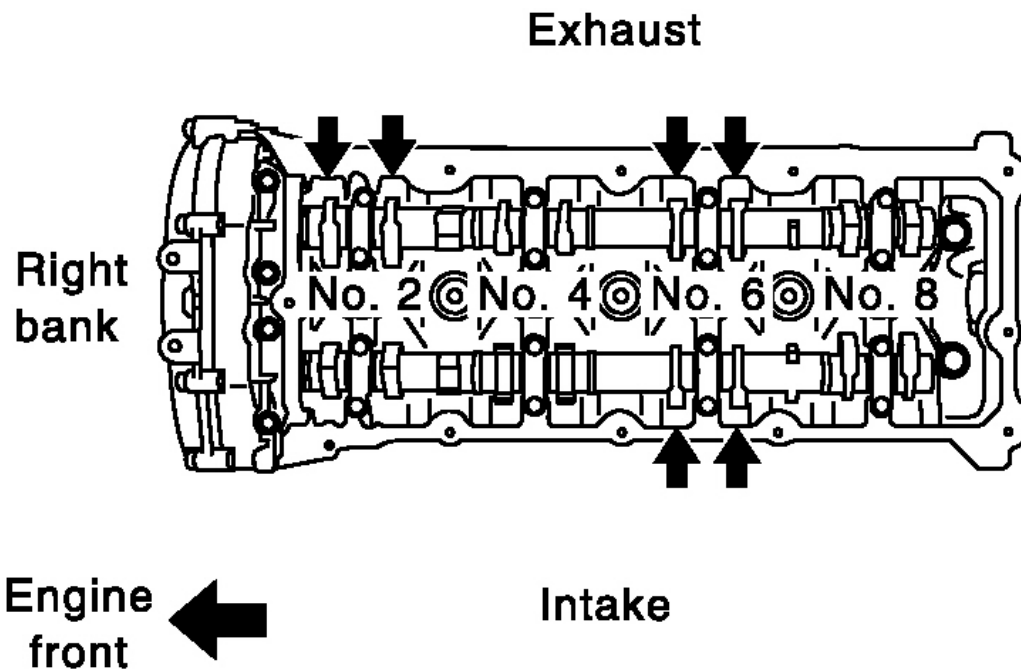

G02370072

Fig. 119: Identifying Intake And Exhaust Valve
 Courtesy of NISSAN MOTOR CO., U.S.A.


9. For measured value are out of standard, perform adjustment. Refer to "**ADJUSTMENT**".

ADJUSTMENT

NOTE: Adjust valve clearance while engine is cold.

1. Turn crankshaft, to position cam nose on camshaft that must be adjusted upward.
2. Thoroughly wipe off engine oil around adjusting shim using a rag.
3. Using a extra-fine screwdriver, turn the round hole of the adjusting shim in the direction of the arrow.

CAUTION: Perform (the above procedure) while camshaft do not contact with adjusting shim.

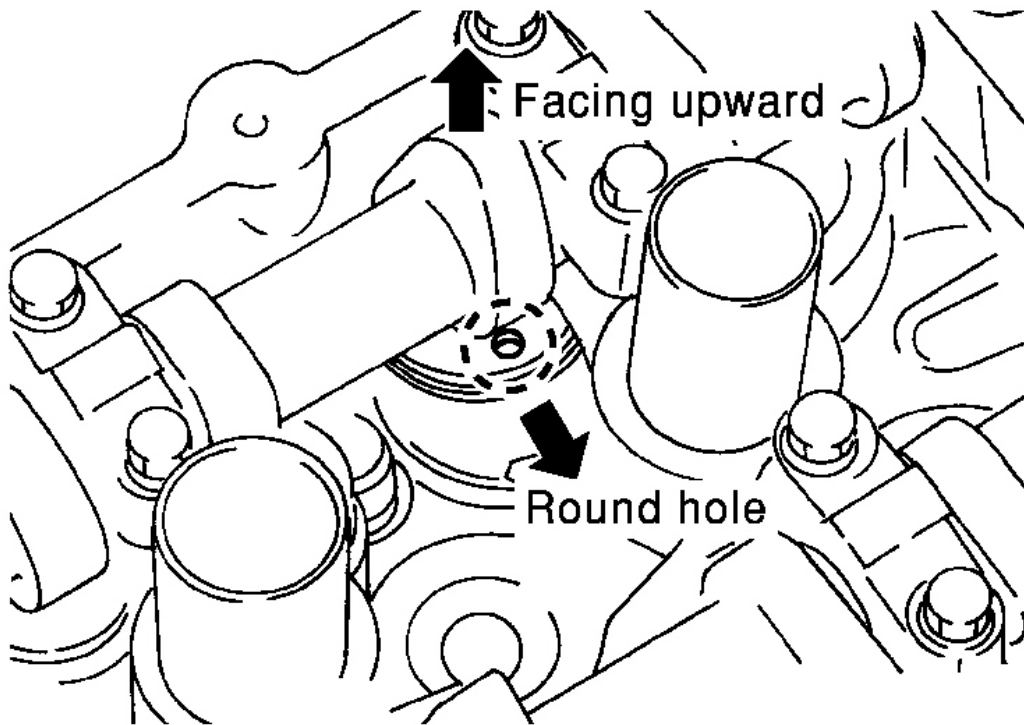

G02370073

Fig. 120: Turning Round Hole Of Adjusting Shim
Courtesy of NISSAN MOTOR CO., U.S.A.

4. Compress valve spring by snapping camshaft using the camshaft pliers (SST), by pulling camshaft to the same direction of the arrow and by pushing valve lifter down.

CAUTION: Be careful not to damage cam surface with the camshaft pliers.

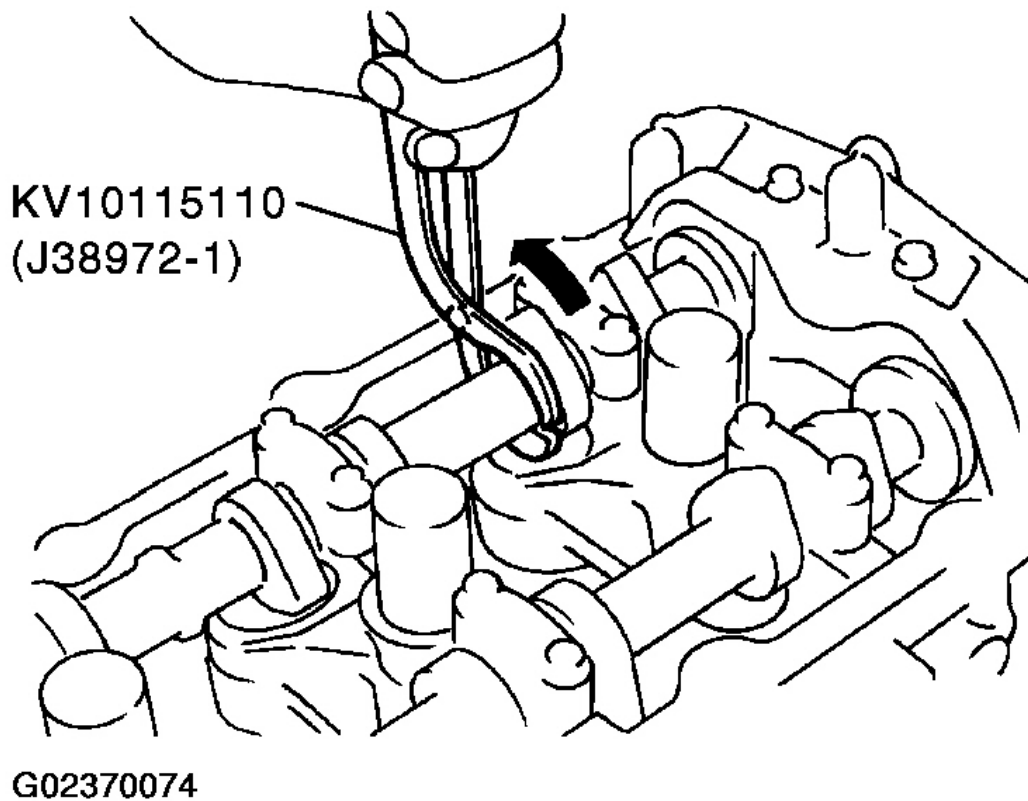


Fig. 121: Compressing Valve Spring By Snapping Camshaft Using Camshaft Pliers
Courtesy of NISSAN MOTOR CO., U.S.A.

5. Place the lifter stopper (SST) between camshaft and the edge of valve lifter to retain valve lifter.

CAUTION:

- The lifter stopper must be placed as close to camshaft bracket as possible.
- Be careful not to damage cam surface with the lifter stopper.

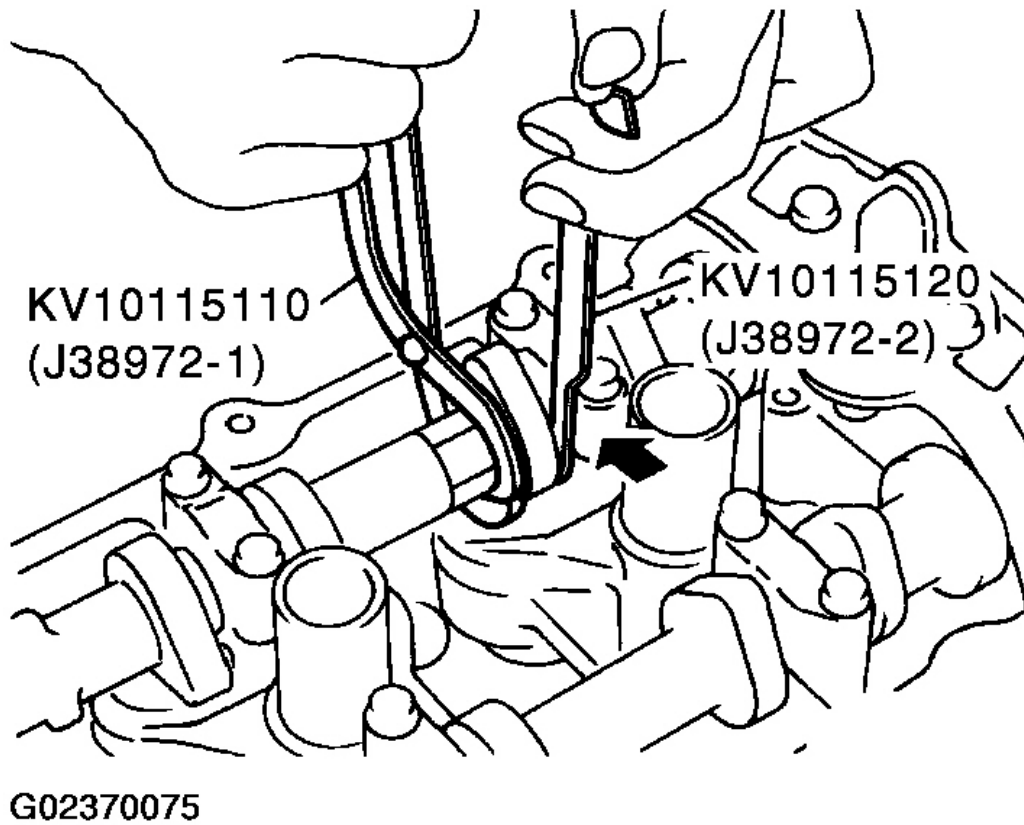


Fig. 122: Placing Lifter Stopper Between Camshaft And Edge Of Valve Lifter To Retain Valve Lifter


Courtesy of NISSAN MOTOR CO., U.S.A.

6. Remove the camshaft pliers (SST).

CAUTION: When returning the camshaft pliers quickly, the lifter stopper (SST) hit and damages the journal portion of camshaft. Therefore turn the camshaft pliers slowly.

7. Blow air into the hole to separate adjusting shim from valve lifter.


CAUTION: When blowing, use goggles to protect your eye.

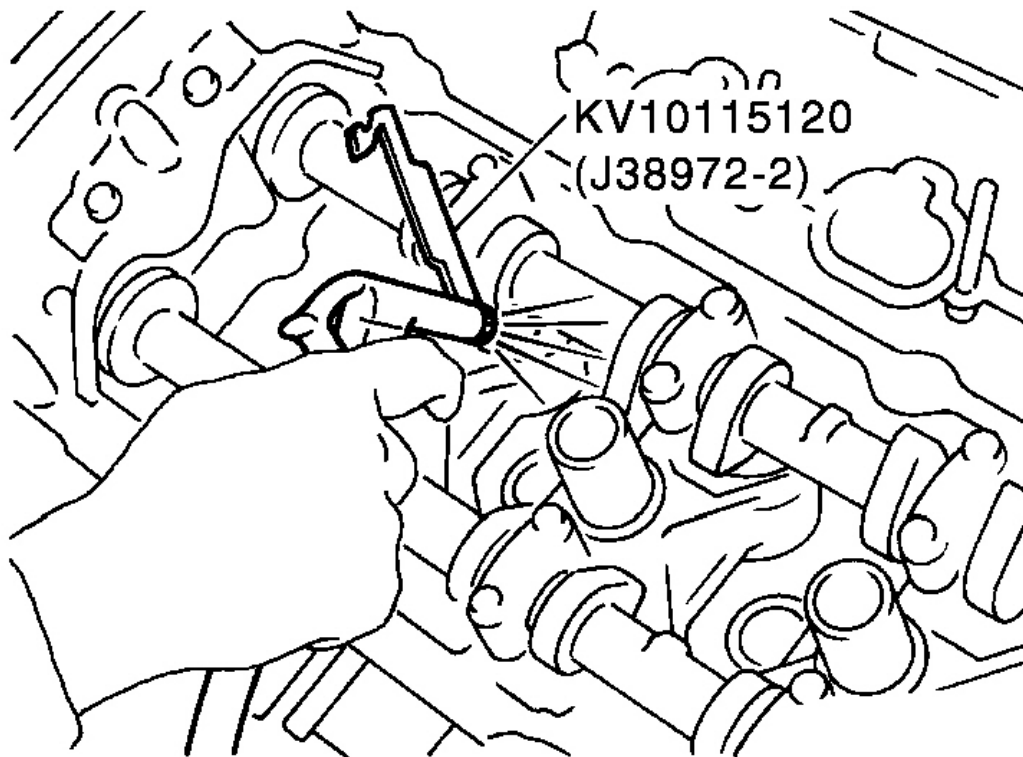

G02370076

Fig. 123: Blowing Air Into Hole For Separating Adjusting Shim From Valve Lifter
Courtesy of NISSAN MOTOR CO., U.S.A.

8. Remove adjusting shim using a small screwdriver and a magnetic hand.

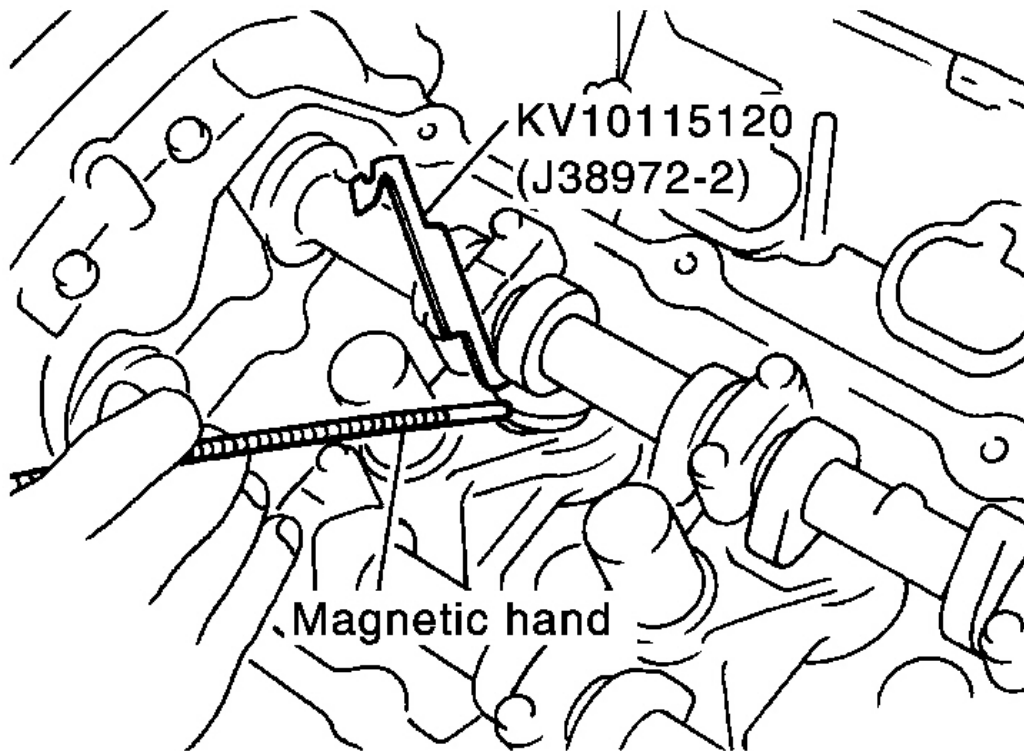

G02370077

Fig. 124: Removing Adjusting Shim Using Small Screwdriver And Magnetic Hand
Courtesy of NISSAN MOTOR CO., U.S.A.

9. Determine replacement adjusting shim size following formula.
- Using a micrometer determine thickness of removed shim with measured at center.
 - Calculate thickness of new adjusting shim so valve clearance comes within specified values.

R = Thickness of removed shim


N = Thickness of new shim

M = Measured valve clearance

Intake: $N = R + [M - 0.30 \text{ mm (0.0118 in)}]$

Exhaust: $N = R + [M - 0.33 \text{ mm (0.0130 in)}]$


Shims are available in 64 sizes from 2.32 mm (0.0913 in) to 2.95 mm (0.1161 in) in steps of 0.01 mm (0.0004 in). Refer to "AVAILABLE SHIMS".

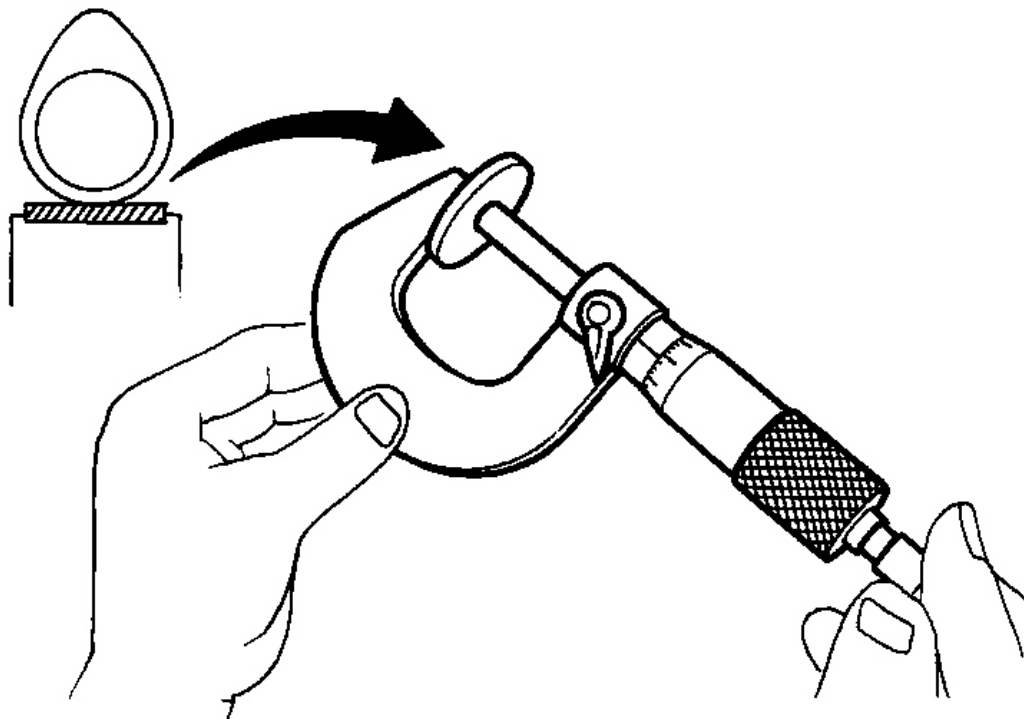

G02370078

Fig. 125: Checking Thickness Of Removed Adjusting Shim
Courtesy of NISSAN MOTOR CO., U.S.A.

- Select new shim with thickness as close as possible to calculated value.

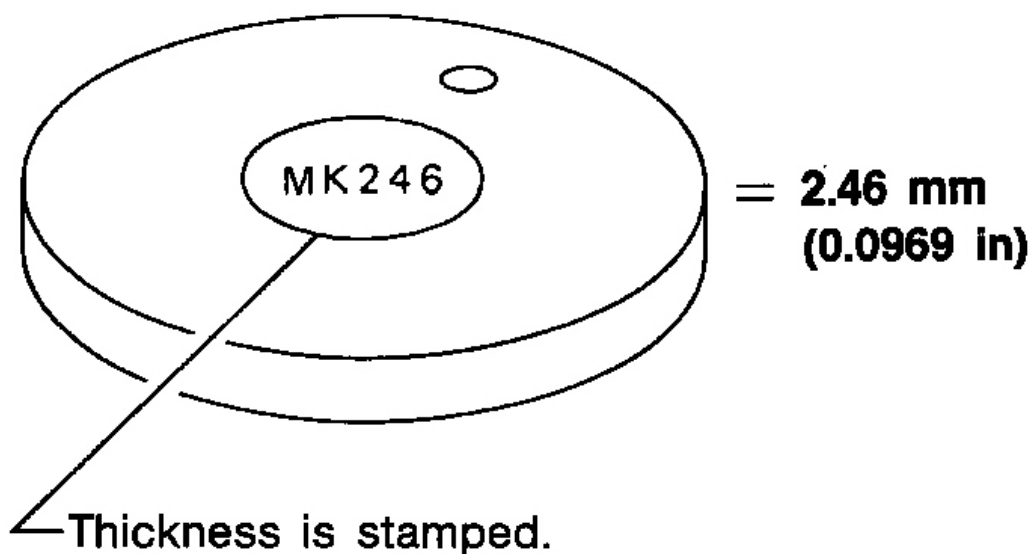

G02370079

Fig. 126: Identifying Thickness Stamp On Adjusting Shim
Courtesy of NISSAN MOTOR CO., U.S.A.

10. Install new shim using a suitable tool.
 - Install with the surface on which the thickness stamped is facing down.

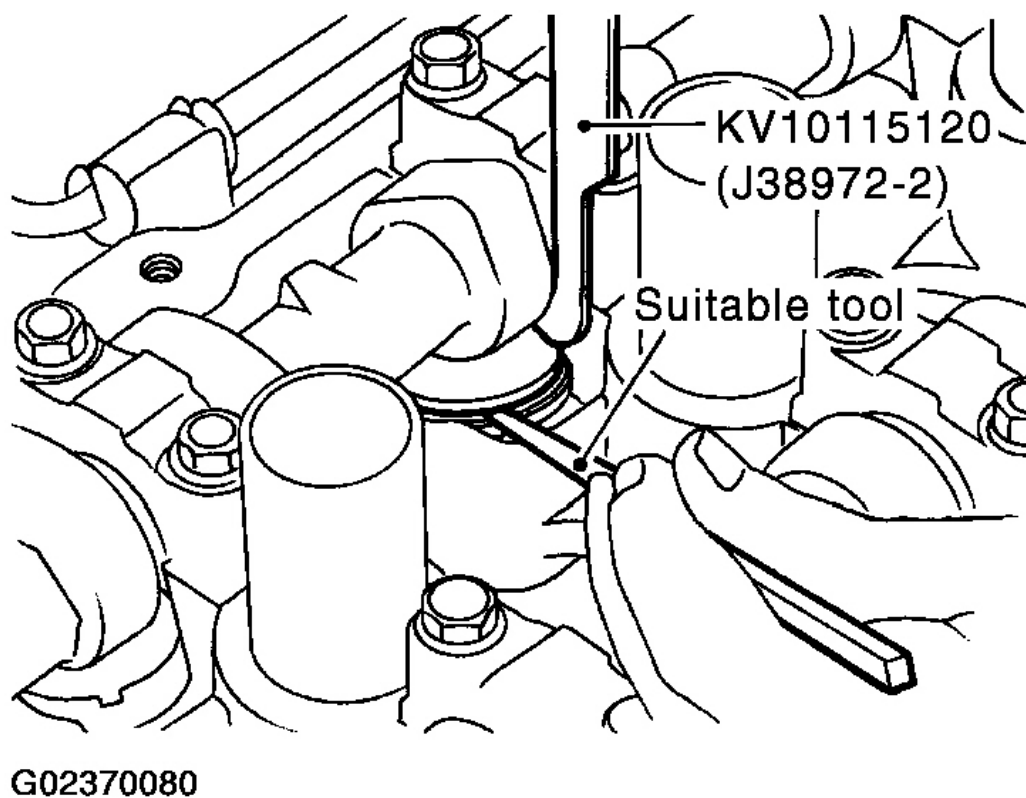


Fig. 127: Installing Adjusting Shim
Courtesy of NISSAN MOTOR CO., U.S.A.

11. Place the camshaft pliers (SST) as mentioned in step 4.
12. Remove the lifter stopper (SST).
13. Remove the camshaft pliers (SST).

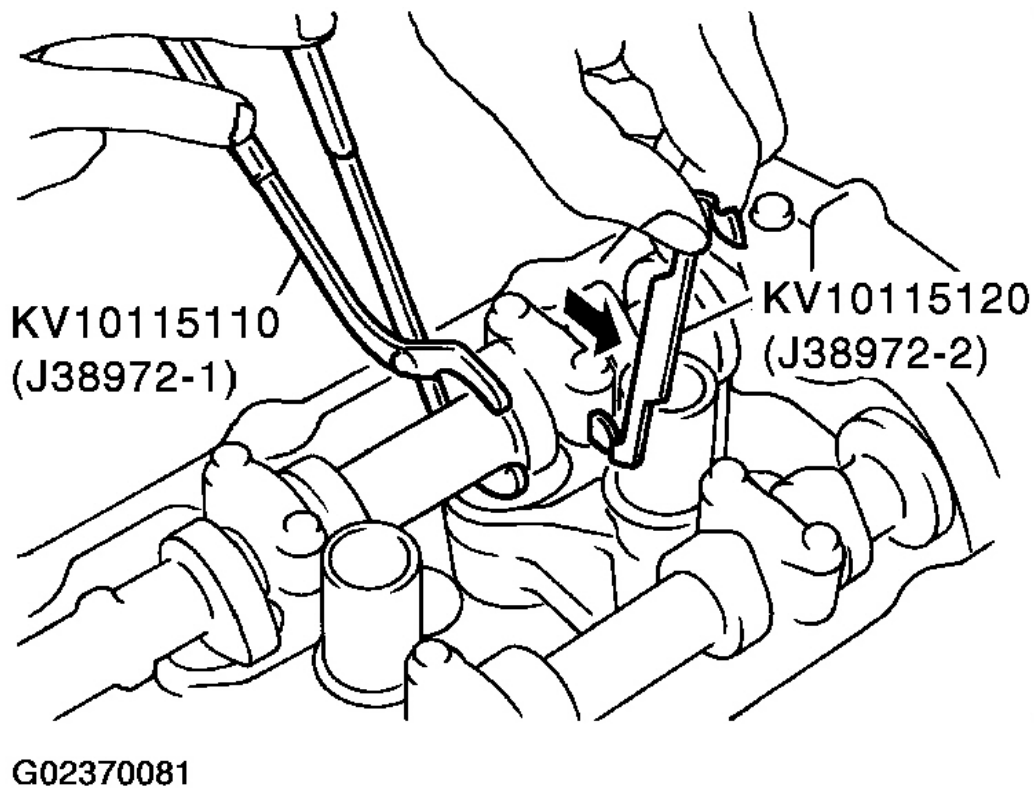


Fig. 128: Removing Lifter Stopper And Camshaft Pliers
Courtesy of NISSAN MOTOR CO., U.S.A.

14. Manually turn crankshaft pulley a few turns.
15. Make sure that valve clearances for cold engine are within specifications by referring to the specified values. Refer to "INSPECTION".
16. Install all removed parts in the reverse order of removal. Refer to "INSTALLATION".
17. Warm up the engine, and check for unusual noise and vibration.

OIL SEAL

REMOVAL AND INSTALLATION OF VALVE OIL SEAL

REMOVAL

1. Remove camshaft relating to valve oil seal to be removed. Refer to "CAMSHAFT".
2. Remove adjusting shims and valve lifters. Refer to "CAMSHAFT".
 - Correctly identify location where each part is installed. Keep parts in an organized way to avoid mixing them up.

3. Turn crankshaft until the cylinder requiring new oil seals is at TDC. This will prevent the valve from dropping into cylinder.
4. Remove valve collet.
 - Compress valve spring with the valve spring compressor, attachment and adapter (SST). Remove valve collet with magnetic hand.

CAUTION: When working, take care not to damage valve lifter holes.

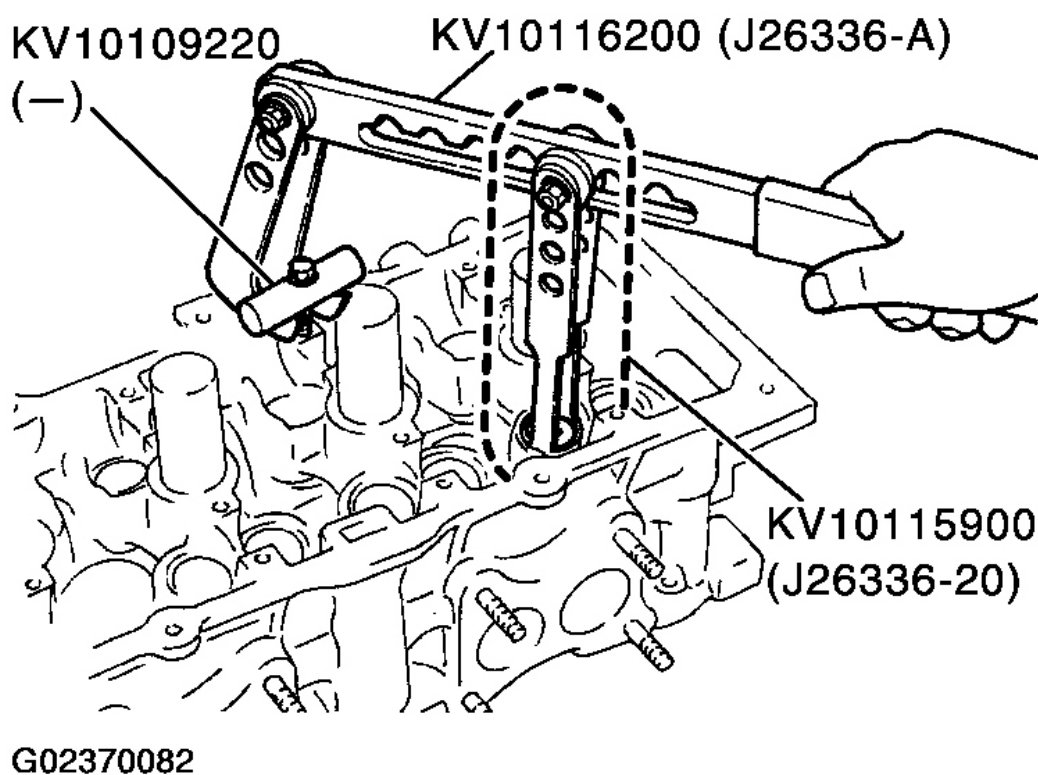


Fig. 129: Removing Valve Collet
Courtesy of NISSAN MOTOR CO., U.S.A.

5. Remove valve spring retainer and valve spring (with valve spring seat).

CAUTION: Do not remove valve spring seat from valve spring.

6. Remove valve oil seal using the valve oil seal puller (SST).


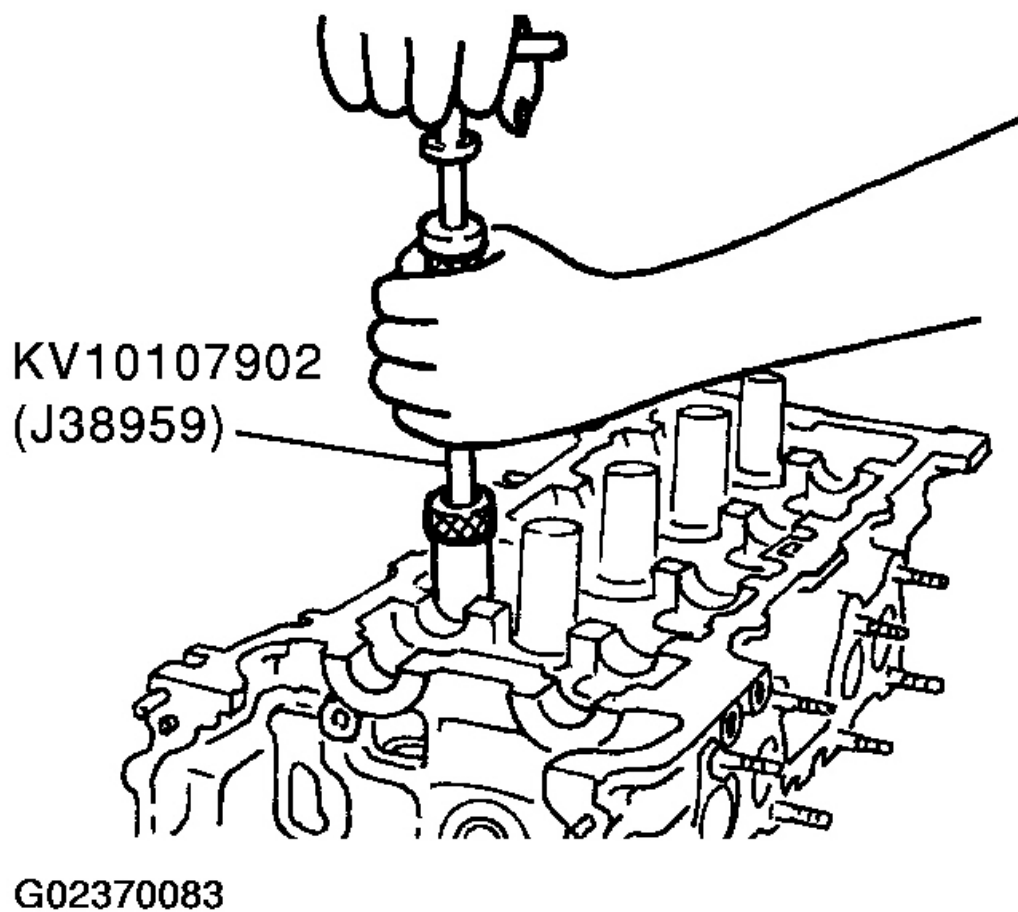


Fig. 130: Removing Valve Oil Seal
Courtesy of NISSAN MOTOR CO., U.S.A.

INSTALLATION

1. Install valve oil seal.
 - Apply engine oil on new valve oil seal joint and seal lip.
 - Install with the valve oil seal drift (SST) to match dimension in figure.

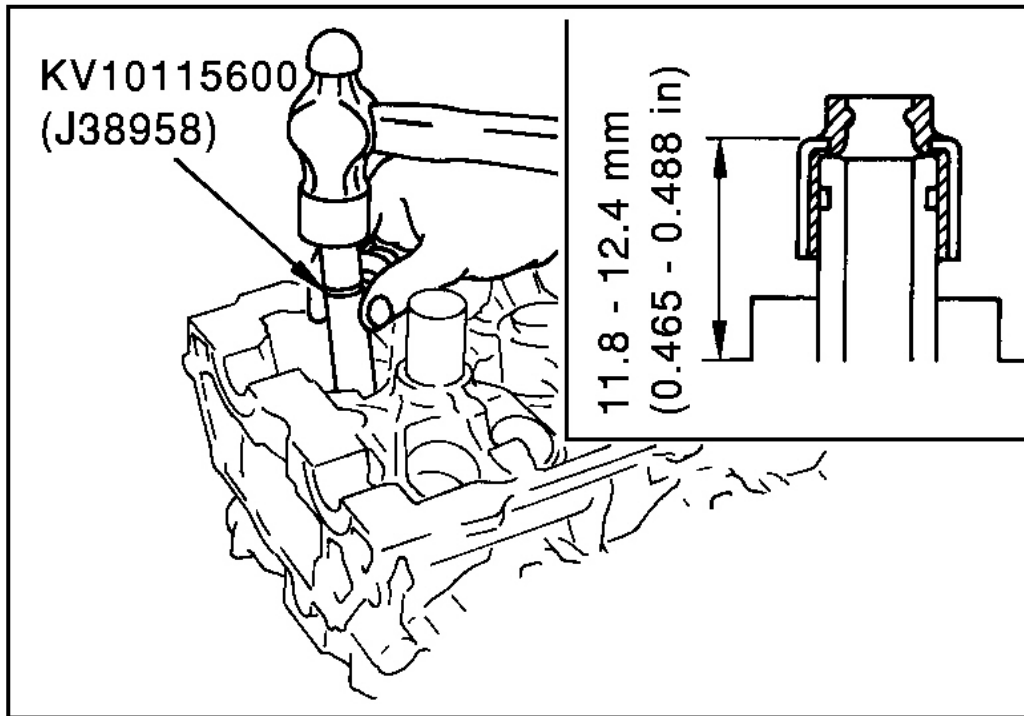

G02370084


Fig. 131: Installing Valve Oil Seal
Courtesy of NISSAN MOTOR CO., U.S.A.

2. Install in the reverse order of removal.

REMOVAL AND INSTALLATION OF FRONT OIL SEAL

REMOVAL

1. Remove the following:
 - Engine undercover
 - Drive belt; Refer to "**DRIVE BELTS**".
 - Cooling fan assembly; Refer to "**COOLING FAN**".
 - Rear plate cover; Refer to "**OIL PAN AND OIL STRAINER**".
2. Remove crankshaft pulley as follows:
 - a. Set the ring gear stopper (SST).

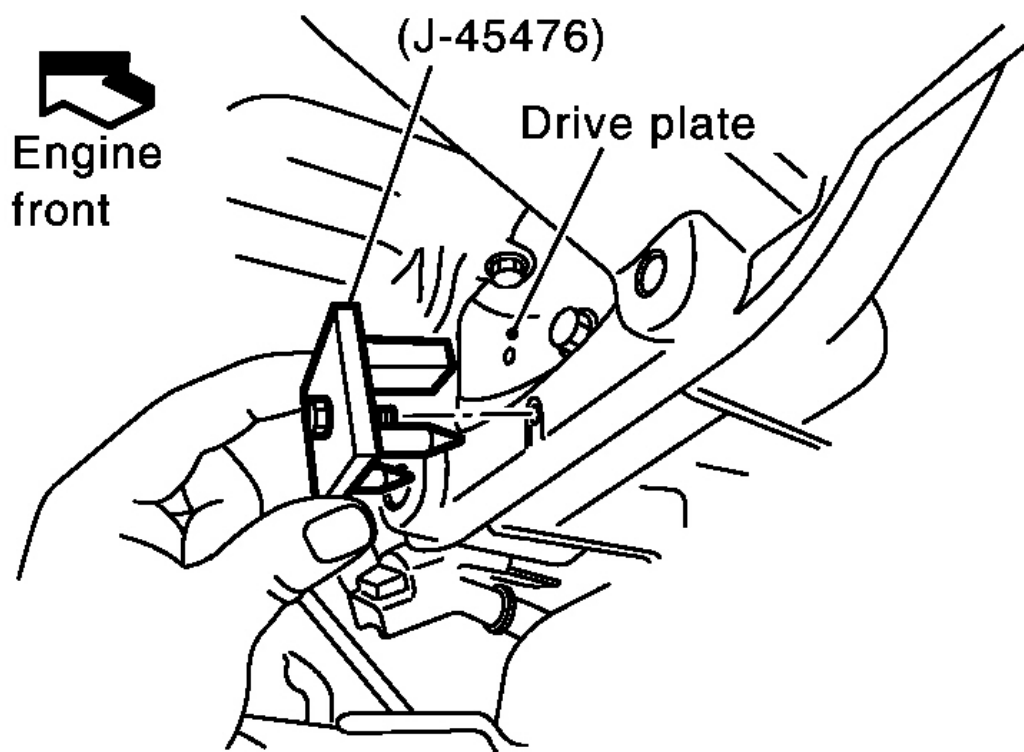


G02370085

Fig. 132: Setting Ring Gear Stopper (SST)
Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Loosen crankshaft pulley bolt.
- c. Pull crankshaft pulley with both hands to remove it.

CAUTION:

- Do not remove crankshaft pulley bolt. Keep loosened crankshaft pulley bolt in place to protect removed crankshaft pulley from dropping.
- Do not remove balance weight (inner hexagon bolt) at the front of crankshaft pulley.

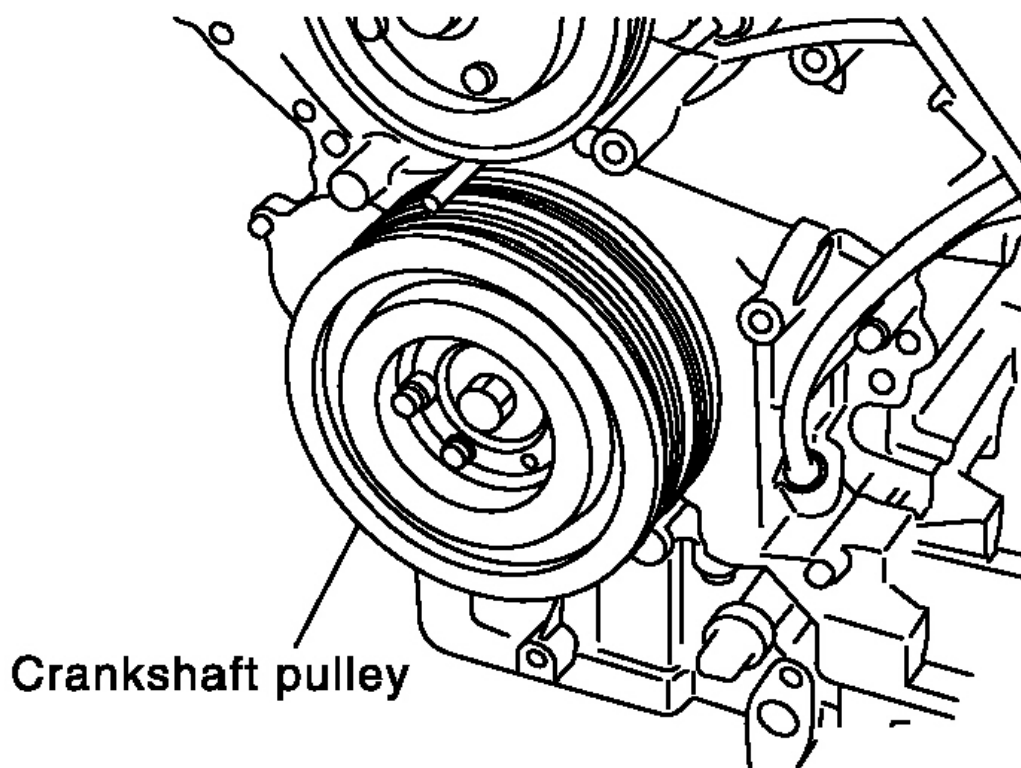


G02370086

Fig. 133: Removing Crankshaft Pulley
Courtesy of NISSAN MOTOR CO., U.S.A.

3. Remove front oil seal using a suitable tool.

CAUTION: Be careful not to damage front cover and oil pump drive spacer.

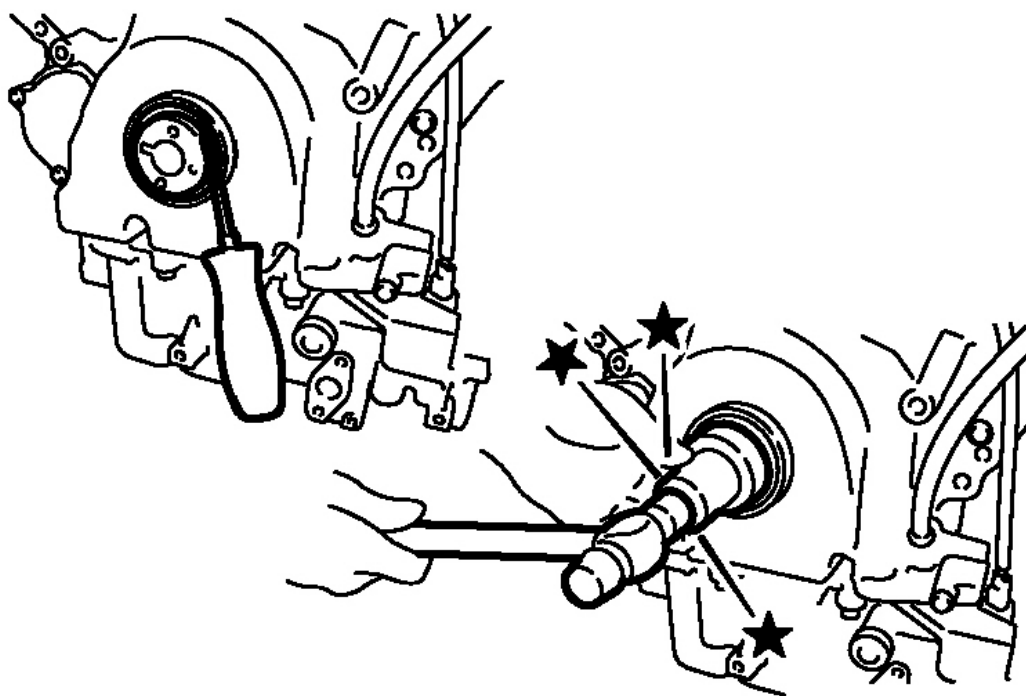


G02370087

Fig. 134: Removing Front Oil Seal
Courtesy of NISSAN MOTOR CO., U.S.A.

INSTALLATION

1. Install front oil seal onto front cover.
 - Install new front oil seal in the direction shown in the figure.
 - Apply engine oil on new front oil seal.

CAUTION: Be careful not to scratch or make burrs on circumference of oil seal.

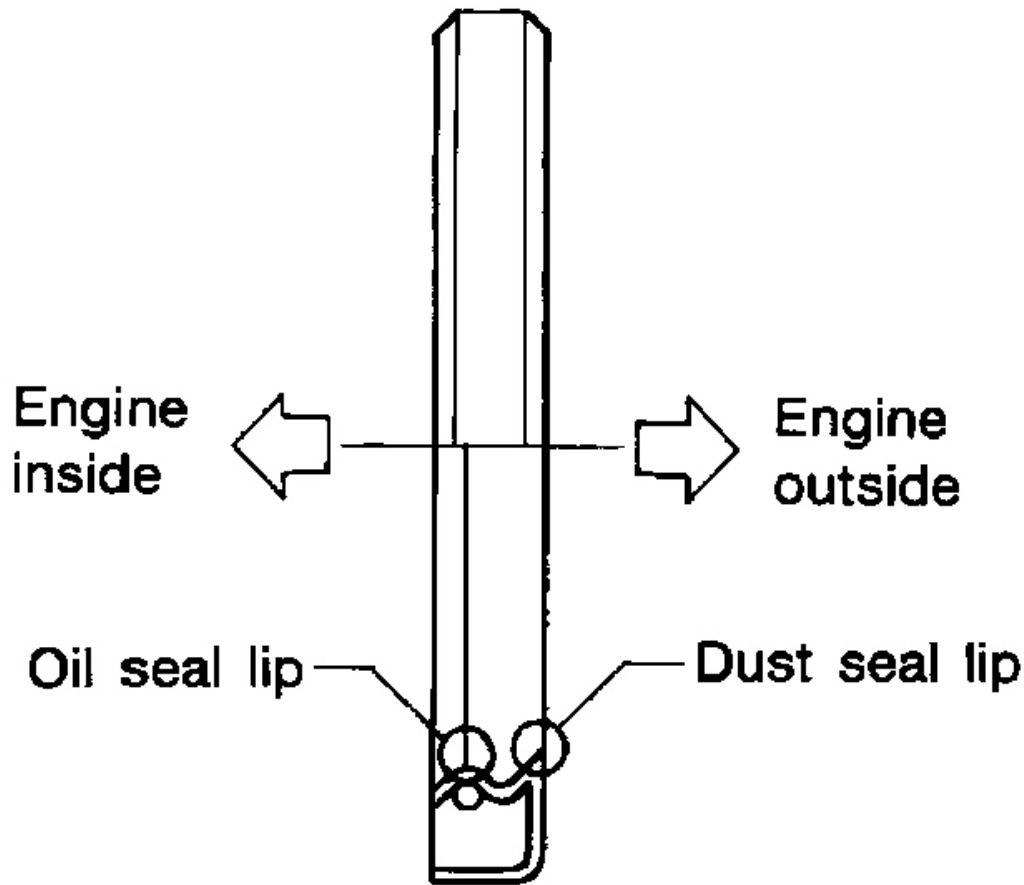

G02370088


Fig. 135: Installing Front Oil Seal (1 Of 2)

Courtesy of NISSAN MOTOR CO., U.S.A.

- Using the front oil seal drift (commercial service tool) or drift with 54 mm (2.13 in) diameter, force fit the seal until it levels with the front end surface of front cover.

CAUTION:

- Be careful not to damage front cover and oil pump drive spacer.
- Press fit straight and avoid causing burrs or tilting oil seal.

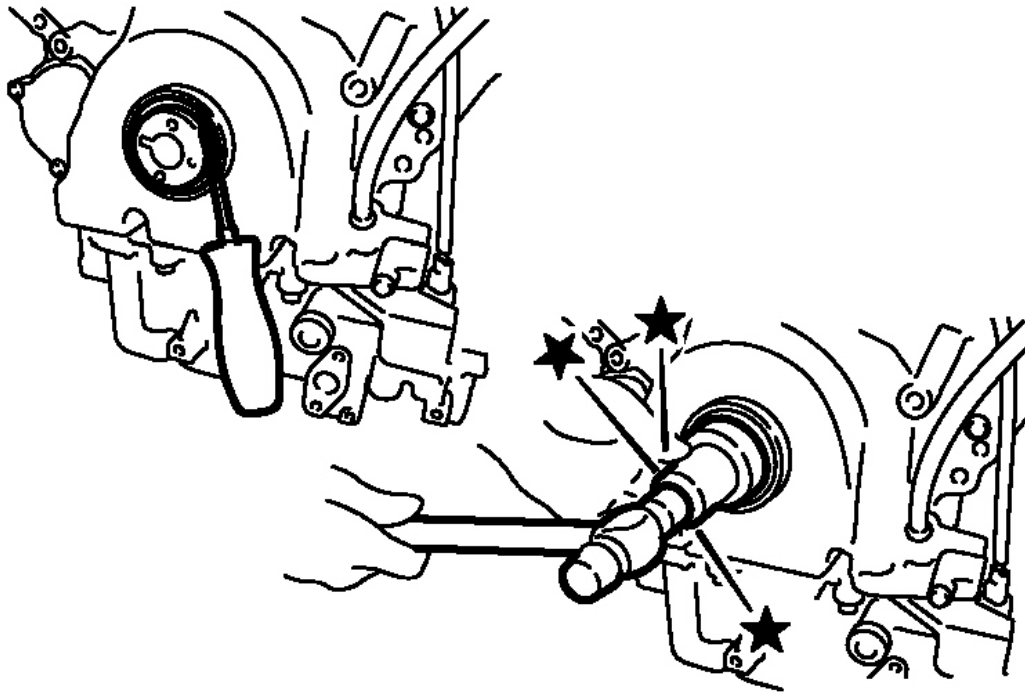

G02370089

Fig. 136: Installing Front Oil Seal (2 Of 2)
Courtesy of NISSAN MOTOR CO., U.S.A.


2. Install in the reverse order of removal.

REMOVAL AND INSTALLATION OF REAR OIL SEAL

REMOVAL

1. Remove transmission assembly. Refer to "TRANSMISSION ASSEMBLY".
 - a. Remove drive plate. Refer to "DISASSEMBLY AND ASSEMBLY".
 - b. Remove engine rear plate. Refer to "DISASSEMBLY AND ASSEMBLY".
2. Remove rear oil seal using a suitable tool.

CAUTION: Be careful not to damage crankshaft and oil seal retainer surface.

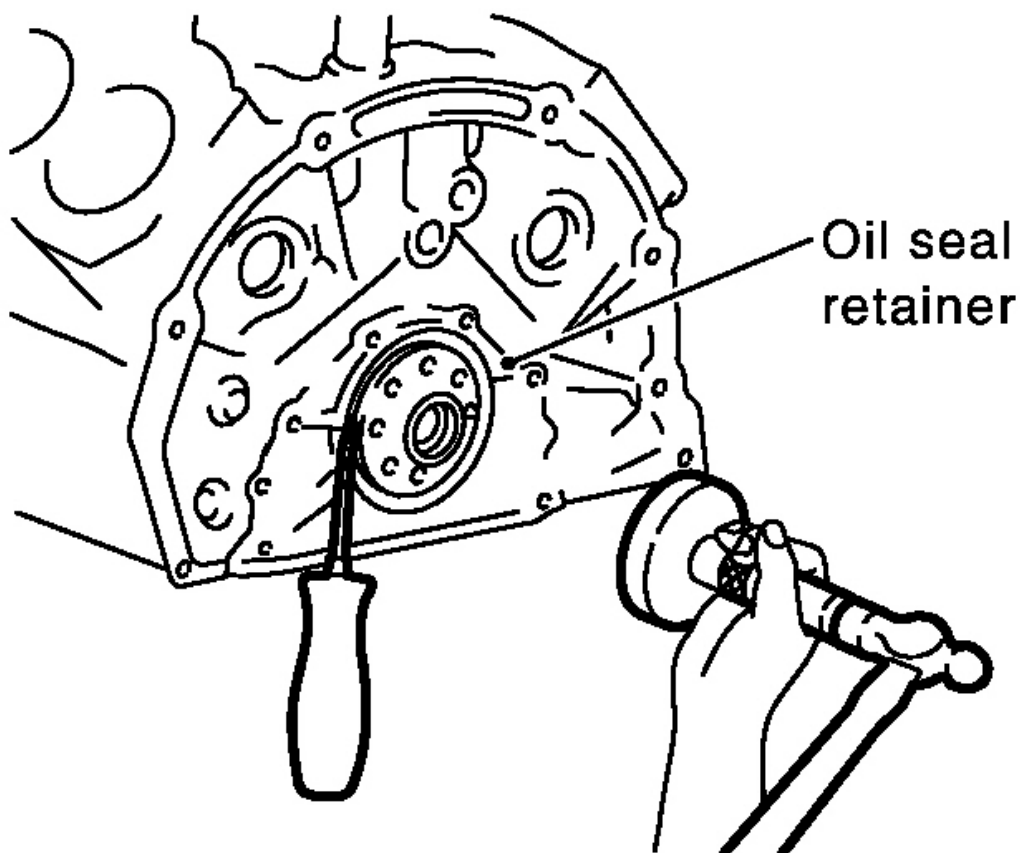


G02370090

Fig. 137: Removing Rear Oil Seal
Courtesy of NISSAN MOTOR CO., U.S.A.

INSTALLATION

1. Install rear oil seal using the rear oil seat drift (commercial service tool).
 - Install new oil seal in the direction shown in the figure.
 - Apply engine oil on new rear oil seal.

CAUTION: Be careful not to scratch or make burrs on circumference of rear oil seal.

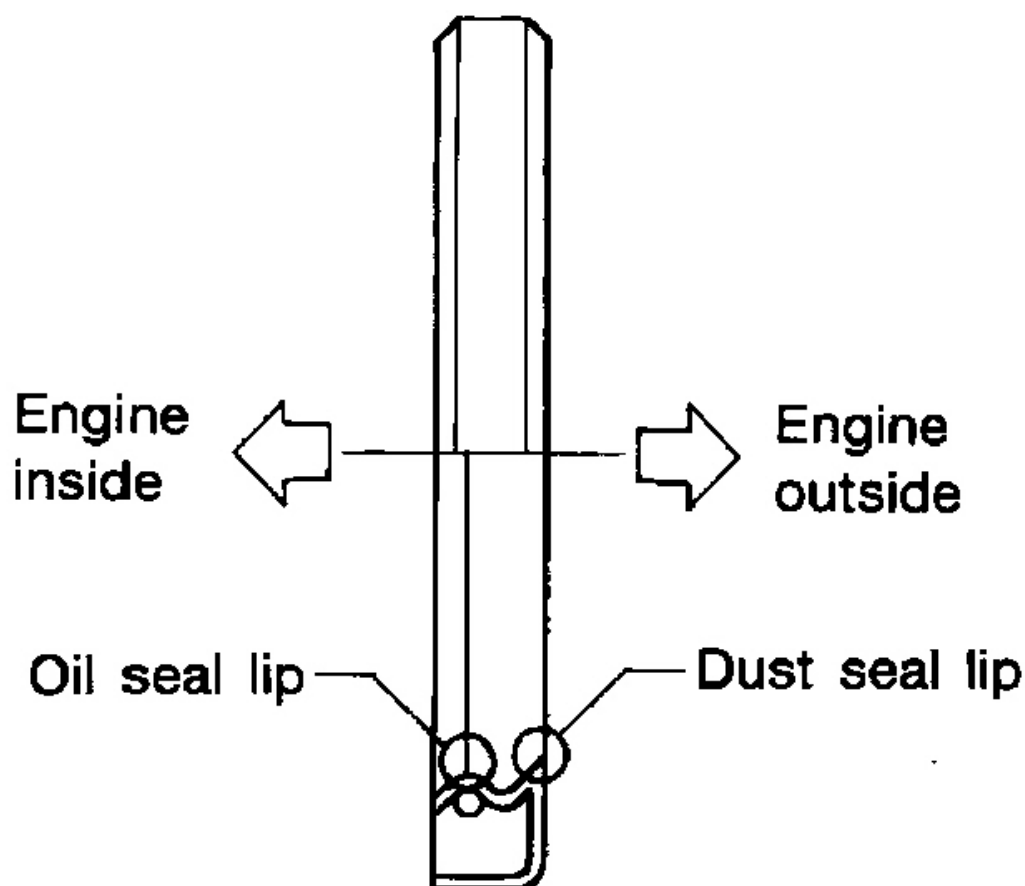

G02370091


Fig. 138: Installing Rear Oil Seal (1 Of 2)

Courtesy of NISSAN MOTOR CO., U.S.A.

- Tap until flattened with front edge of oil seal retainer. Do not damage or scratch outer circumference of oil seal.

CAUTION:

- Be careful not to damage crankshaft and rear oil seal retainer.
- Press fit straight and avoid causing burrs or tilting oil seal.

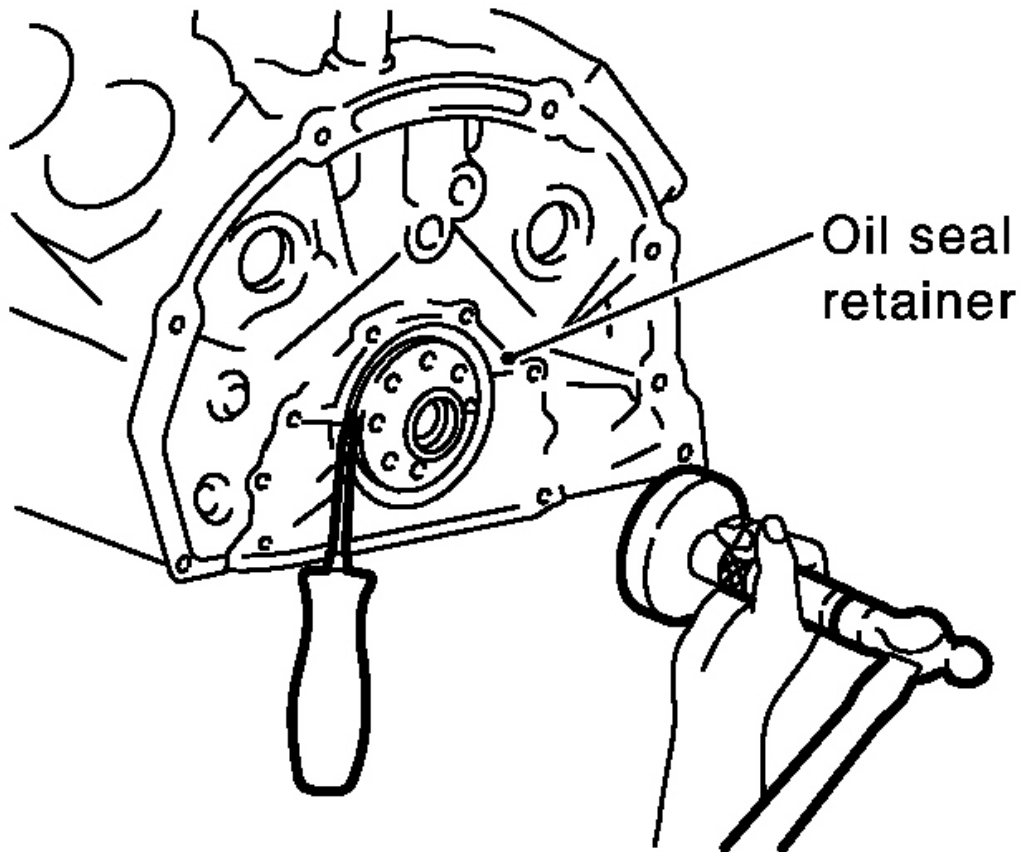

G02370092

Fig. 139: Installing Rear Oil Seal (2 Of 2)
Courtesy of NISSAN MOTOR CO., U.S.A.

2. Install in the reverse order of removal.


CYLINDER HEAD

ON-VEHICLE SERVICE

CHECKING COMPRESSION PRESSURE

1. Warm up engine thoroughly. Then, stop it.
2. Remove engine cover (with power tool), air cleaner cover and battery cover. Refer to "**ENGINE ROOM COVER**".


3. Release fuel pressure as follows:
 - a. Remove fuel pump fuse, and start engine. Refer to "**FUEL PRESSURE RELEASE**" for fuel pump fuse location.
 - b. After engine stalls, crank it two or three times to release all fuel pressure.
 - Let fuel pump fuse removed until the end of step 7.
4. Remove ignition coil and spark plug from each cylinder. Refer to "**REMOVAL AND INSTALLATION**" and "**REMOVAL AND INSTALLATION**".
5. Connect engine tachometer (not required in use of CONSULT-II).
6. Install the compression gauge with adapter (SST) onto spark plug hole.
 - Use the compression gauge adapter (SST) which is required on No. 7 and No. 8 cylinders.

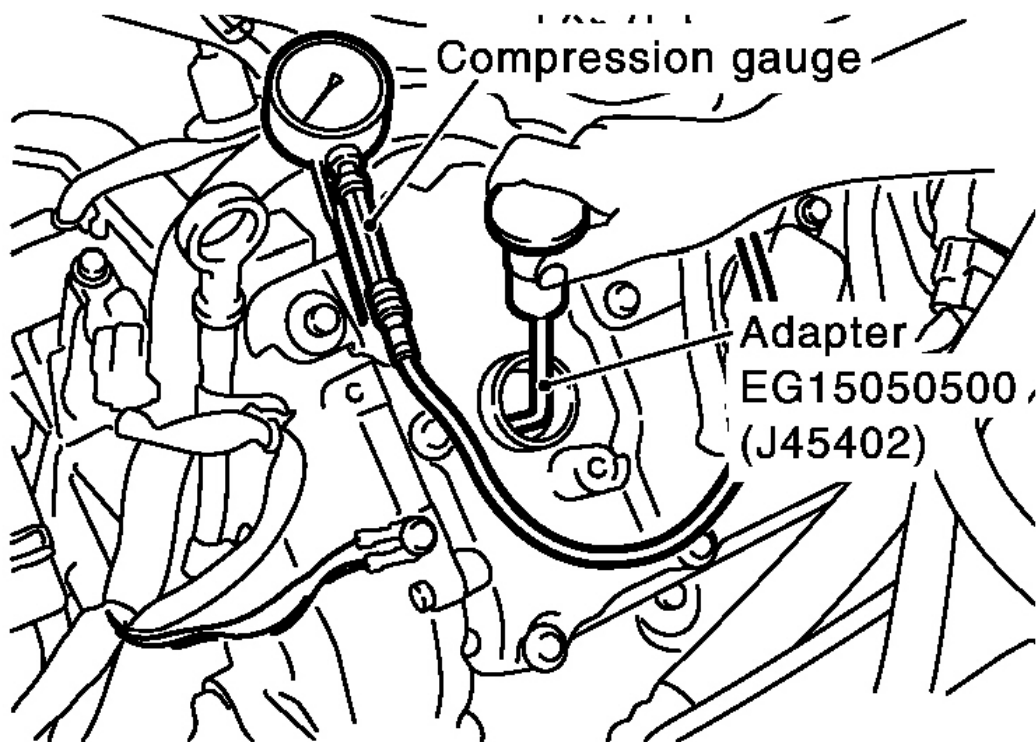

G02370093

Fig. 140: Checking Compression Pressure
Courtesy of NISSAN MOTOR CO., U.S.A.

- Use the compression gauge adapter (if no SST is used) whose picking up end inserted to spark plug hole is smaller than 20 mm (0.79 in) in diameter. Otherwise, it may be caught by cylinder head during removal.

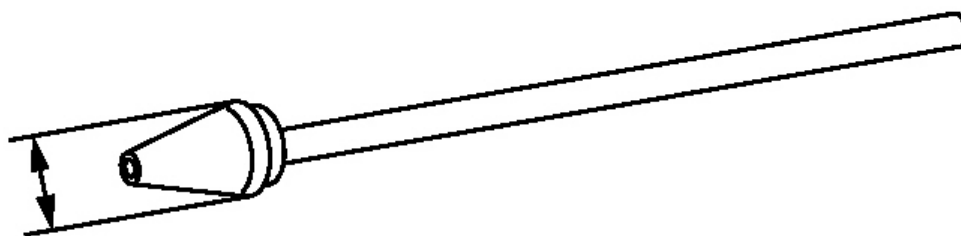

20 mm (0.79 in) dia.

G02370094

Fig. 141: Identifying Compression Gauge Adapter Picking Up End Dimension
 Courtesy of NISSAN MOTOR CO., U.S.A.

7. With accelerator pedal fully depressed, turn ignition switch to "START" for cranking. When the gauge pointer stabilizes, read the compression pressure and engine rpm. Perform these steps to check each cylinder.

Compression pressure

Unit: kPa (kg/cm² , psi) /rpm

COMPRESSION PRESSURE SPECIFICATION

Standard	Minimum	Deference limit between cylinders
1,320 (13.5, 191) / 300	1,130 (11.5, 164) / 300	98 (1.0, 14) / 300

CAUTION: Always use a fully charged battery to obtain specified engine speed.

- If the engine speed is out of specified range, check battery liquid for proper gravity. Check engine speed again with normal battery gravity.
- If compression pressure is below minimum value, check valve clearances and parts associated with combustion chamber (Valve, valve seat, piston, piston ring, cylinder bore, cylinder head, cylinder head gasket). After the checking, measure compression pressure again.
- If some cylinders have low compression pressure, pour small amount of engine oil into the spark plug hole of cylinder to re-check it for compression.
 - If the added engine oil improves the compression, the piston rings may be worn out or damaged. Check piston rings and replace if necessary.
 - If the compression pressure remains at low level despite the addition of engine oil, valves

may be malfunctioning. Check valves for damage. Replace valve or valve seat accordingly.

- If two adjacent cylinders have respectively low compression pressure and their compression remains low even after the addition of engine oil, cylinder head gaskets are leaking. In such a case, replace cylinder head gaskets.
- 8. Install removed parts in the reverse order of removal.
- 9. Start engine, and confirm that engine runs smoothly.
- 10. Perform trouble diagnosis. If DTC appears, erase it. Refer to "**TROUBLE DIAGNOSIS**".

REMOVAL AND INSTALLATION

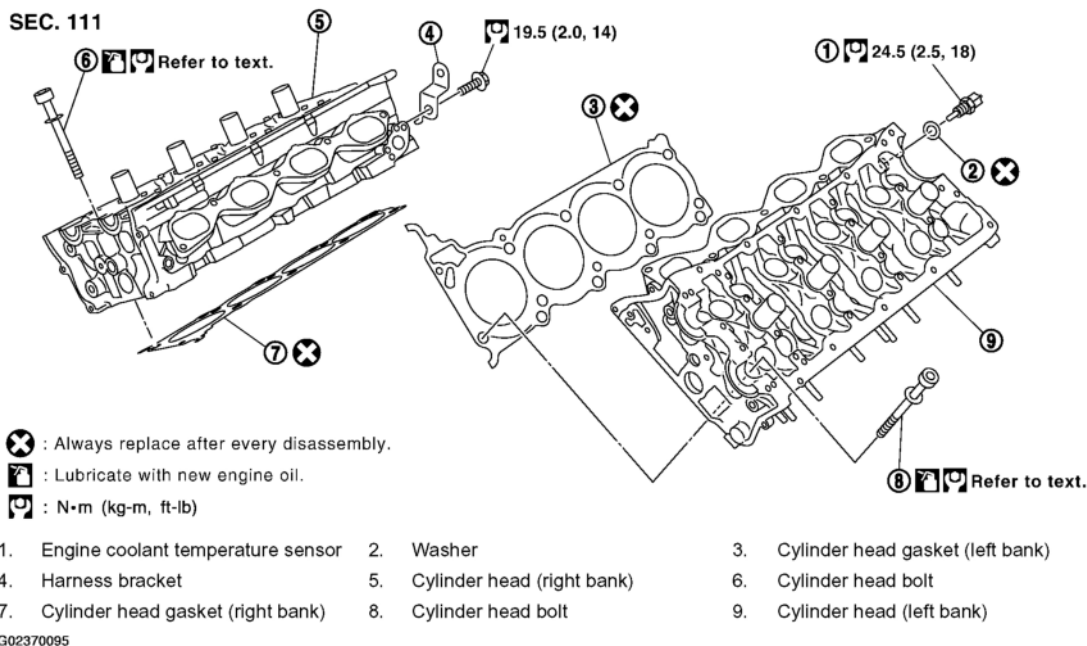


Fig. 142: Removing Cylinder Head With Torque Specifications

Courtesy of NISSAN MOTOR CO., U.S.A.

REMOVAL

1. Remove engine assembly from vehicle. Refer to "**REMOVAL AND INSTALLATION**".
2. Remove the following components and related parts:
 - Auto tensioner of drive belts and idler pulley. Refer to "**DRIVE BELT AUTO TENSIONER AND IDLER PULLEY**".
 - Thermostat housing and radiator hose. Refer to "**REMOVAL AND INSTALLATION**".
 - Oil pan and oil strainer. Refer to "**REMOVAL AND INSTALLATION**".
 - Intake manifold (upper and lower). Refer to "**REMOVAL AND INSTALLATION**".
 - Fuel tube (right and left), fuel damper and fuel hose assembly and fuel injector. Refer to "**REMOVAL AND INSTALLATION**".
 - Ignition coil. Refer to "**REMOVAL AND INSTALLATION**".

- Rocker cover. Refer to "**REMOVAL AND INSTALLATION**".
 - Exhaust manifold and three way catalyst. Refer to "**EXHAUST MANIFOLD AND THREE WAY CATALYST**".
3. Remove camshaft sprockets and camshafts. Refer to "**REMOVAL AND INSTALLATION**".
 4. Remove cylinder head bolts in the reverse order shown in the figure and using the cylinder head bolt wrench (Commercial service tool: J-24239-01).

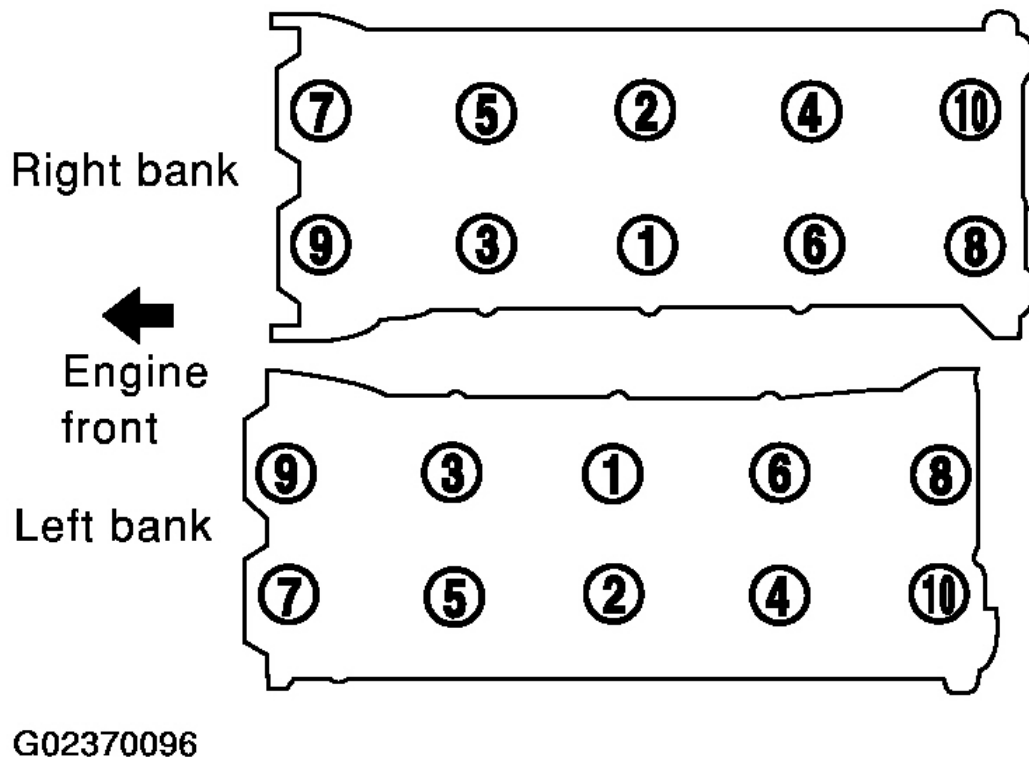


Fig. 143: Identifying Removal Sequence Of Cylinder Head Bolts
 Courtesy of NISSAN MOTOR CO., U.S.A.

5. Remove cylinder head gaskets.


INSPECTION AFTER REMOVAL

Cylinder Head Bolts Outer Diameter

- Cylinder head bolts are tightened by plastic zone tightening method. Whenever the size difference between "d1" and "d2" exceeds the limit, replace them with new one.

Limit ("d1"-"d2"): More than 0.18 mm (0.0071 in)

- If reduction of outer diameter appears in a position other than "d2", use it as "d2" point.

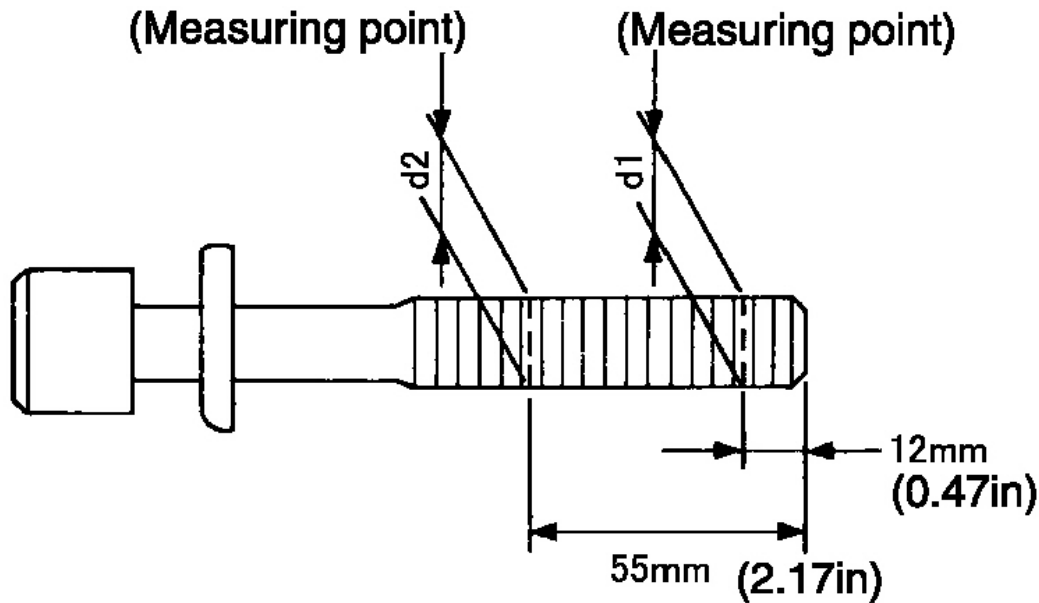

G02370097

Fig. 144: Identifying Cylinder Head Bolts Outer Diameter

Courtesy of NISSAN MOTOR CO., U.S.A.

Cylinder Head Distortion

NOTE: When performing this inspection, cylinder block distortion should be also checking. Refer to "CYLINDER BLOCK DISTORTION".


1. Wipe off oil and remove water scale (like deposit), gasket, sealer, carbon, etc. with scraper.

CAUTION: Use utmost care not to allow liquid gasket debris to enter passages for engine oil or engine coolant.

2. At each of several locations on bottom surface of cylinder head, measure distortion in six directions with a straightedge and a feeler gauge.

Limit: 0.1mm (0.004 in)

- If it exceeds the limit, replace cylinder head.

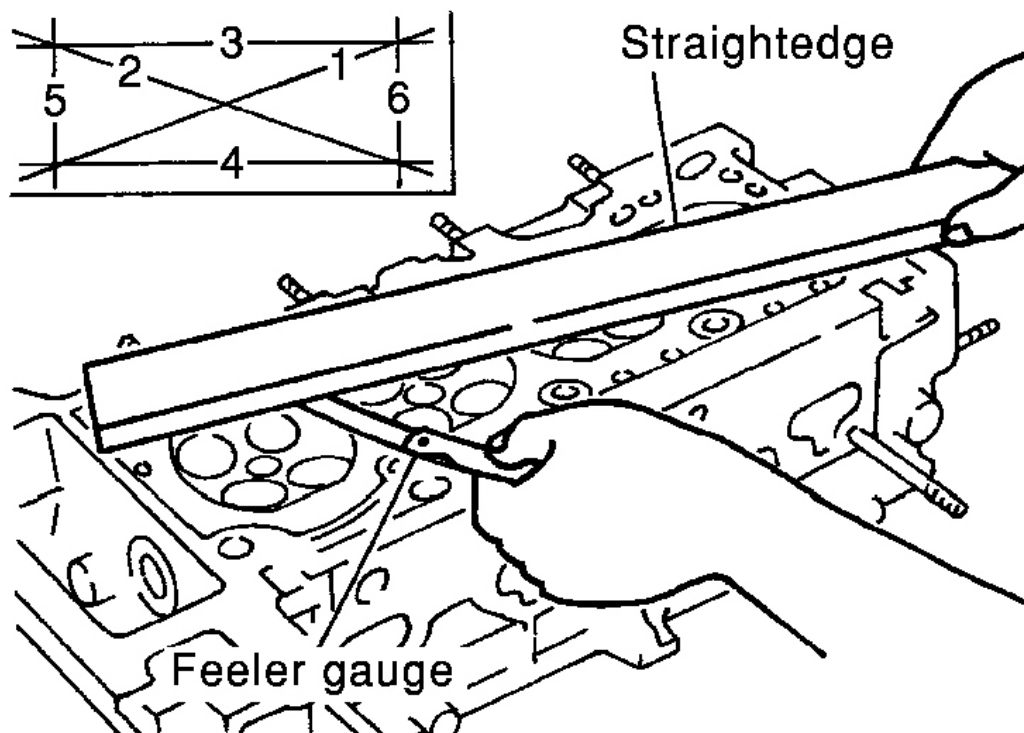

G02370098

Fig. 145: Checking Cylinder Head Distortion With Straightedge And Feeler Gauge
Courtesy of NISSAN MOTOR CO., U.S.A.

INSTALLATION

1. Install cylinder head gaskets.
2. Turn crankshaft until No. 1 piston is set at TDC.
 - Crankshaft key should line up with the left bank cylinder center line as shown in the figure.


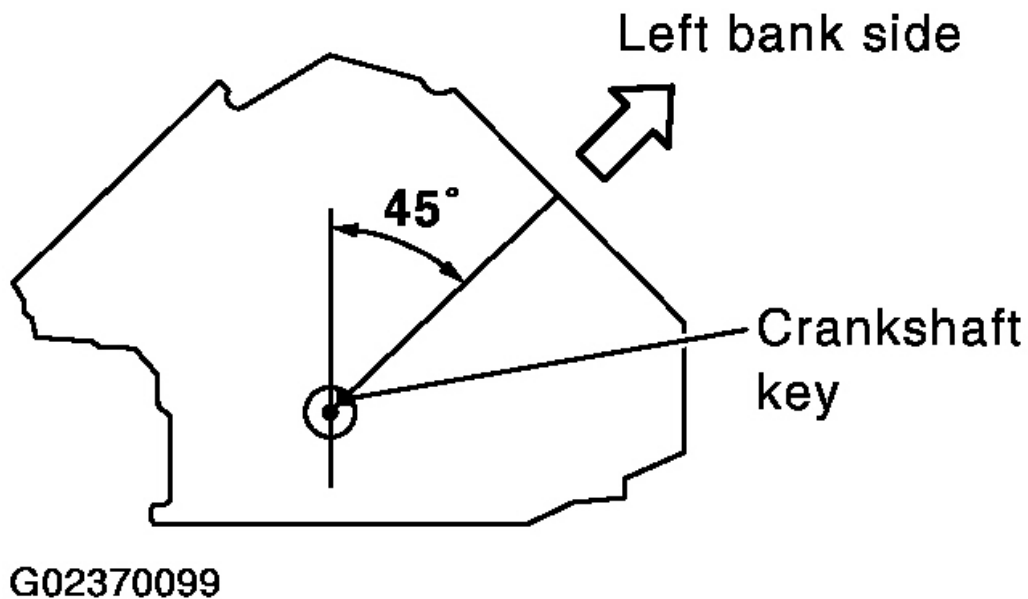


Fig. 146: [Identifying Crankshaft Key Line Up Angle With Left Bank Cylinder Center Line]
Courtesy of NISSAN MOTOR CO., U.S.A.

3. Install cylinder head follow the steps below to tighten cylinder head bolts in numerical order as shown in the figure with the cylinder head bolt wrench (commercial service tool: J-24239-01).

CAUTION:

- If cylinder head bolts are re-used, check their outer diameters before installation. Refer to "**CYLINDER HEAD BOLTS OUTER DIAMETER**".

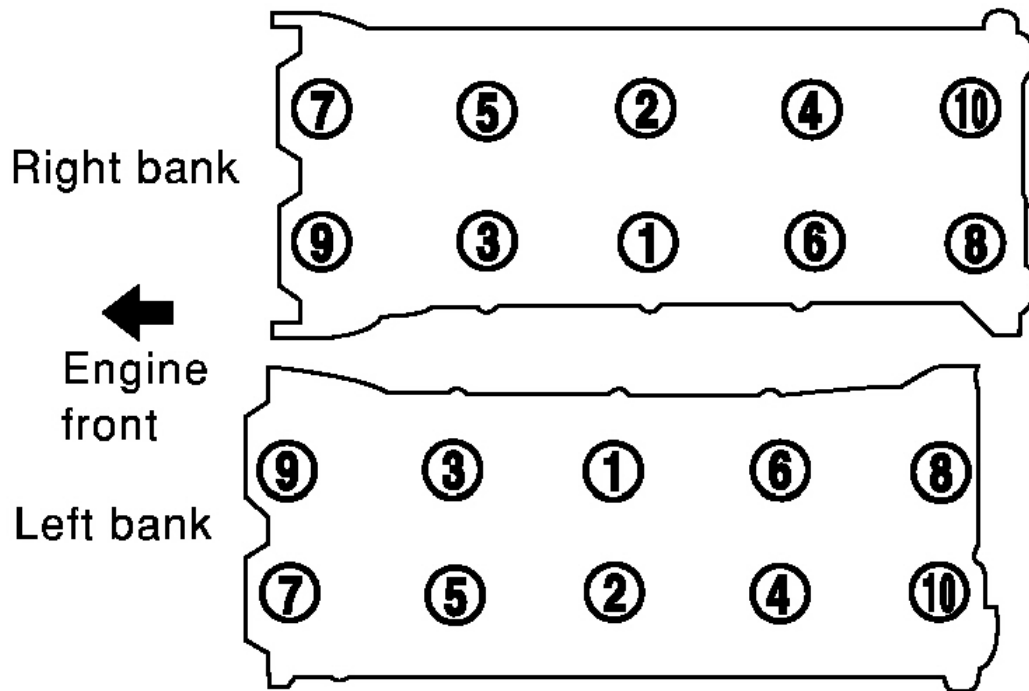

G02370100

Fig. 147: Identifying Tightening Sequence Of Cylinder Head Bolts
 Courtesy of NISSAN MOTOR CO., U.S.A.


- a. Apply new engine oil to threads and seating surface of cylinder head bolts.
- b. Tighten all cylinder head bolts.
98.1 N.m (10 kg-m, 72 ft-lb)
- c. Completely loosen all cylinder head bolts.
0 N.m (0 kg-m, 0 ft-lb)

CAUTION: In step "c", loosen cylinder head bolts in the reverse order of that indicated in the figure.

- d. Tighten all cylinder head bolts.
44.1 N.m (4.5 kg-m, 33 ft-lb)
- e. Turn all cylinder head bolts 60 degrees clockwise. (Angle tightening)

CAUTION: Check the tightening angle by using angle wrench (SST). Avoid judgment by visual inspection without SST.

- Check tightening angle indicated on angle wrench indicator plate.
- f. Turn all cylinder head bolts 60 degrees clockwise again. (Angle tightening)

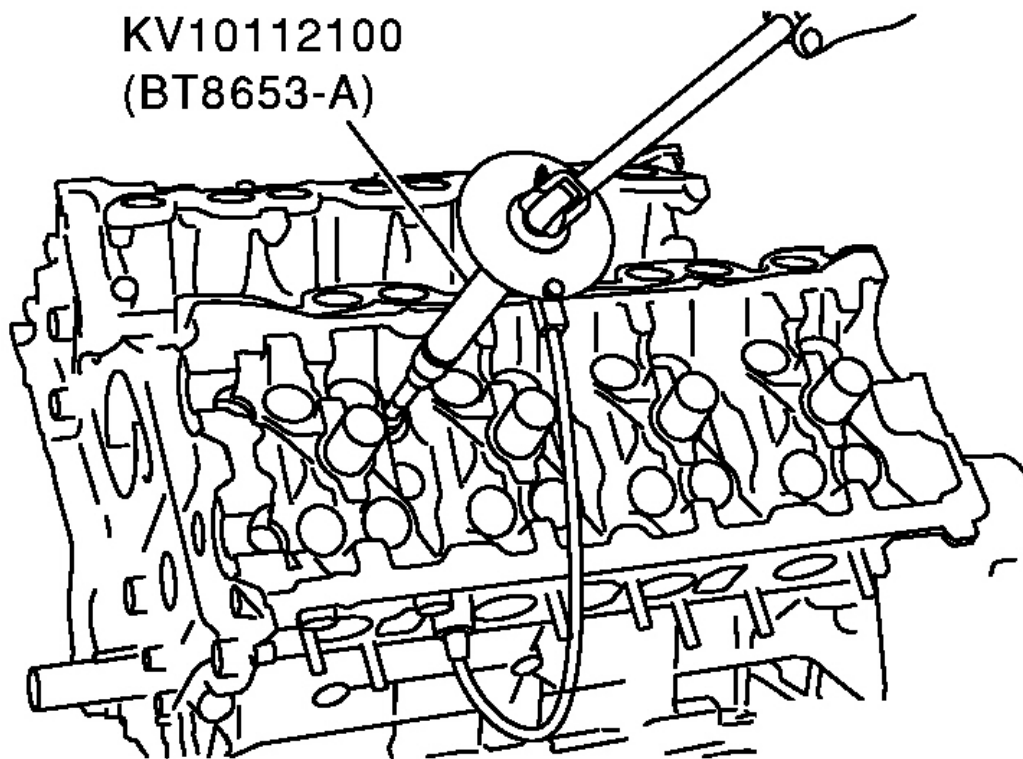

G02370101

Fig. 148: Checking Cylinder Head Bolts Tightening Angle
Courtesy of NISSAN MOTOR CO., U.S.A.

4. Install in the reverse order of removal.

INSPECTION AFTER INSTALLATION

- Before starting engine, check oil/fluid levels including engine coolant and engine oil. If less than required quantity, fill to the specified level. Refer to "**RECOMMENDED FLUIDS AND LUBRICANTS**".
- Use procedure below to check for fuel leakage.
 - Turn ignition switch "ON" (with engine stopped). With fuel pressure applied to fuel piping, check for fuel leakage at connection points.
 - Start engine. With engine speed increased, check again for fuel leakage at connection points.
- Run engine to check for unusual noise and vibration.

- Warm up engine thoroughly to make sure there is no leakage of fuel, exhaust gas, or any oils/fluids including engine oil and engine coolant.
- Bleed air from passages in lines and hoses, such as in cooling system.
- After cooling down engine, again check oil/fluid levels including engine oil and engine coolant. Refill to specified level, if necessary.

Summary of the inspection items:

ITEMS INSPECTION

Item	Before starting engine	Engine running	After engine stopped
Engine coolant	Level	Leakage	Level
Engine oil	Level	Leakage	Level
Other oils and fluids ⁽¹⁾	Level	Leakage	Level
Fuel	Leakage	Leakage	Leakage
Exhaust gas	-	Leakage	-
(1) Transmission/transaxle/CVT fluid, power steering fluid, brake fluid, etc.			

DISASSEMBLY AND ASSEMBLY

SEC. 111•130•220


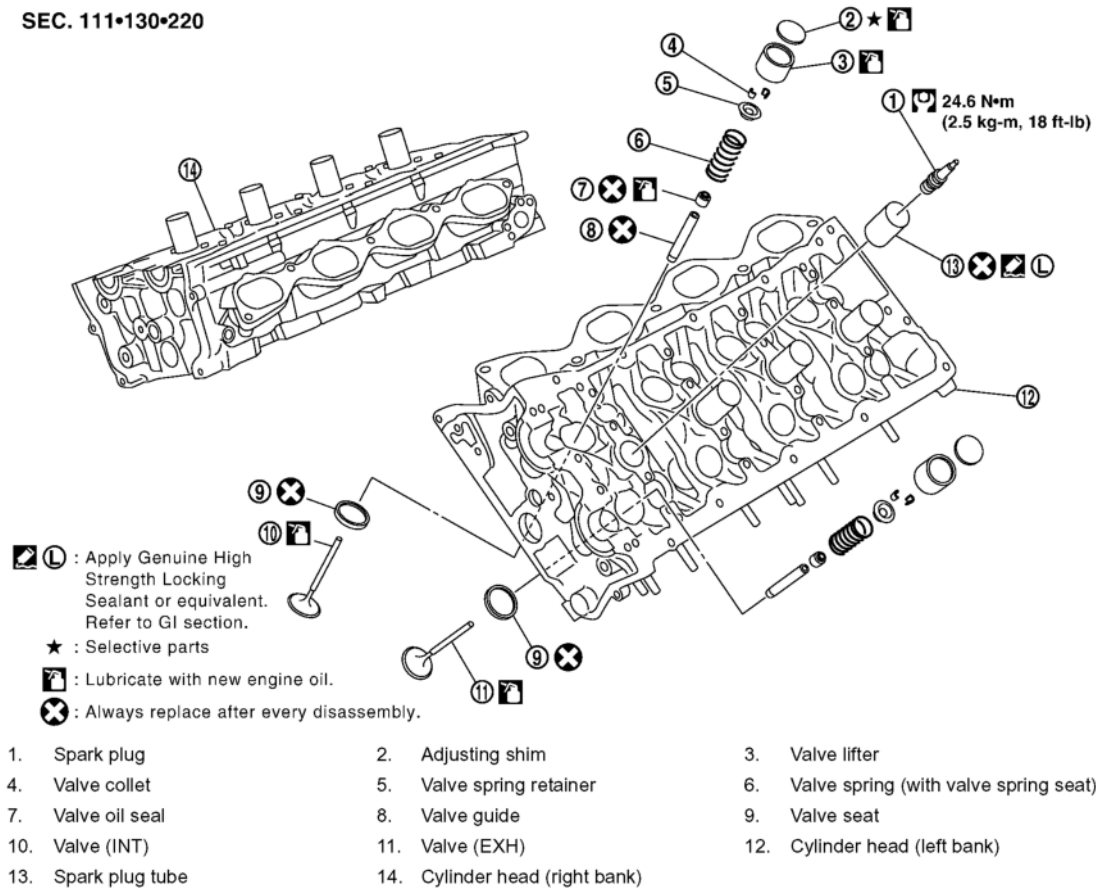


Fig. 149: Disassembling Cylinder Head With Torque Specifications
Courtesy of NISSAN MOTOR CO., U.S.A.

DISASSEMBLY

1. Remove spark plug with the spark plug wrench (commercial service tool).
2. Remove adjusting shim and valve lifter.
 - Confirm installation point and keep parts in an organized way to avoid mixing them up.
3. Remove valve collet.
 - Compress valve spring with the valve spring compressor, attachment and adapter (SST). Remove valve collet with magnetic hand.

CAUTION: When working, take care not to damage valve lifter holes.

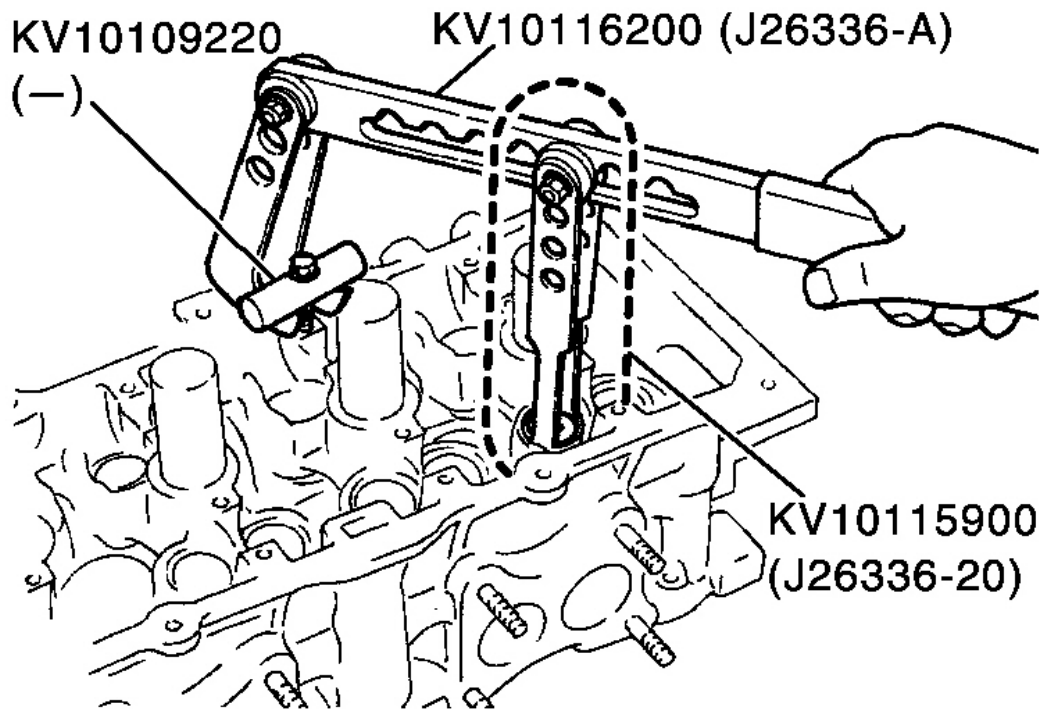

G02370103

Fig. 150: Removing Valve Collet
Courtesy of NISSAN MOTOR CO., U.S.A.

4. Remove valve spring retainer and valve spring (with valve spring seat).

CAUTION: Do not remove valve spring seat from valve spring.

5. Push valve stem to combustion chamber side, and remove valve.
 - Confirm installation point and keep parts in an organized way to avoid mixing then up.
6. Remove valve oil seal with the valve oil seal puller (SST).

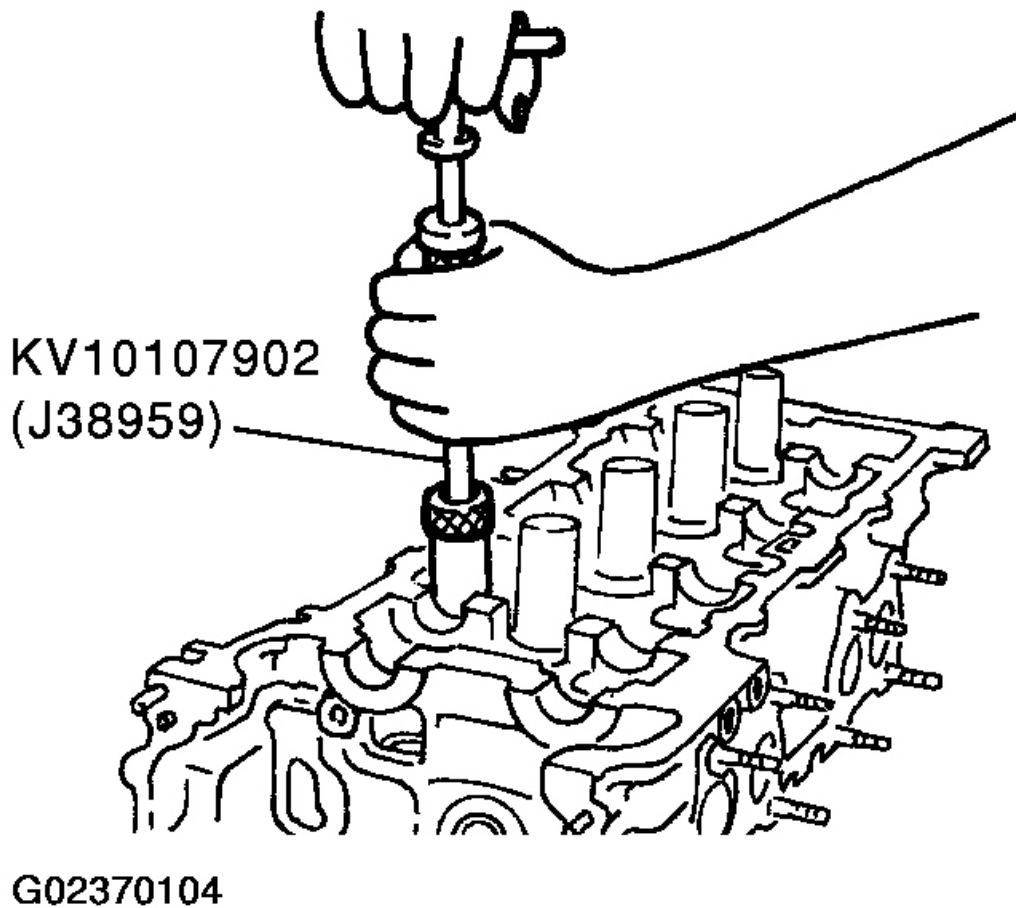


Fig. 151: Removing Valve Oil Seal
Courtesy of NISSAN MOTOR CO., U.S.A.


7. If valve seat must be replaced, refer to "**VALVE SEAT REPLACEMENT**".
8. If valve guide must be replaced, refer to "**VALVE GUIDE REPLACEMENT**".
9. Remove spark plug tube, as necessary.
 - Using a pair of pliers, pull spark plug tube out of cylinder head.

CAUTION:

- Take care not to damage cylinder head.
- Once removed, a spark plug tube will be deformed and cannot be reused. Do not remove it unless absolutely necessary.

ASSEMBLY

1. When valve guide is removed, install it. Refer to "VALVE GUIDE CLEARANCE".
2. When valve seat is removed, install it. Refer to "VALVE SEAT REPLACEMENT".
3. Install valve oil seal.
 - Apply new engine oil on valve oil seal joint and seal lip.
 - Install with the valve oil seal drift (SST) to match dimension in figure.

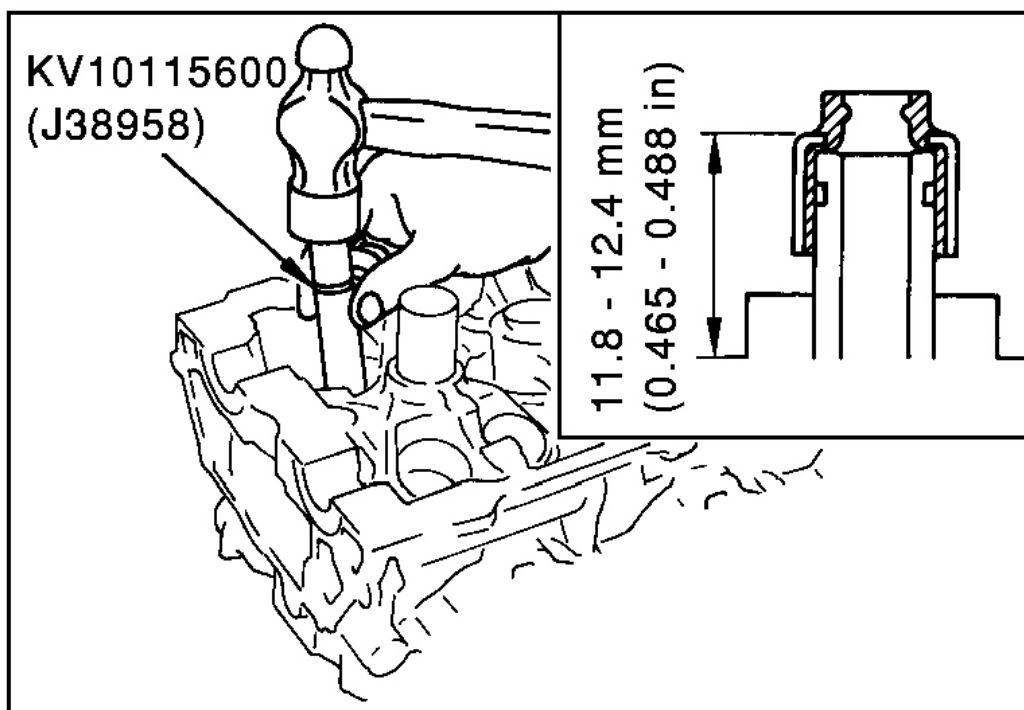

G02370105

Fig. 152: Installing Valve Oil Seal
Courtesy of NISSAN MOTOR CO., U.S.A.

4. Install valve.
 - Install in the original position.
 - Install larger diameter to intake side.
5. Install valve spring (with valve spring seat).
 - Install smaller pitch (valve spring seat side) to cylinder head side.

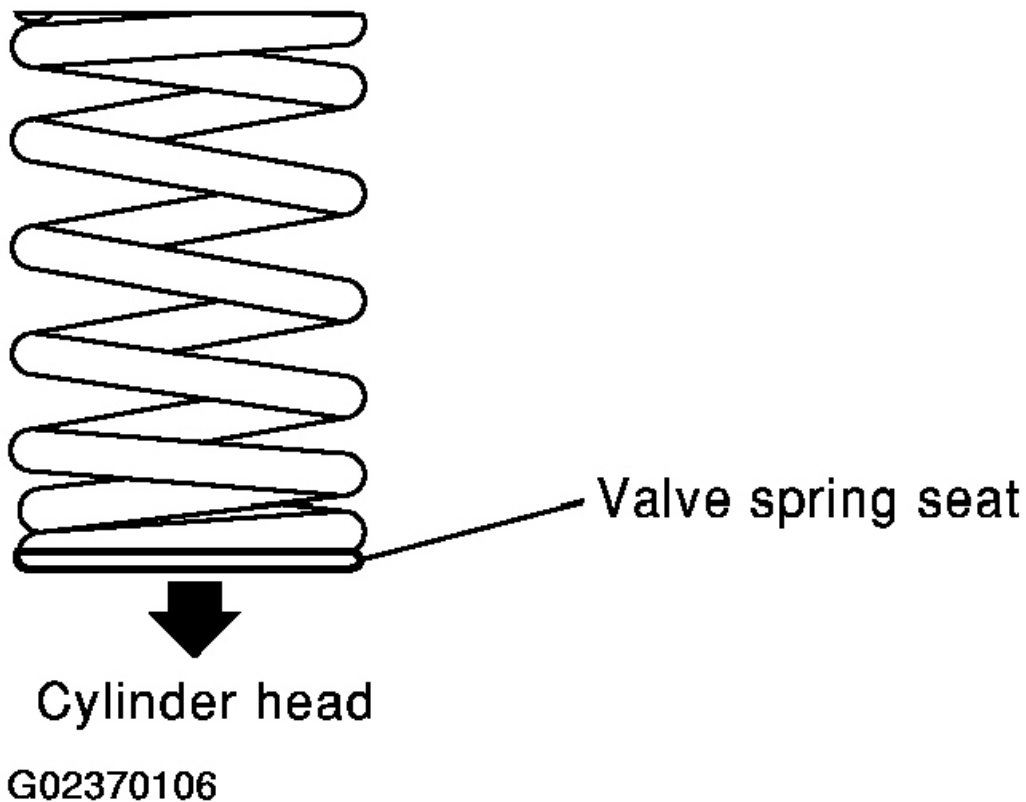


Fig. 153: Identifying Valve Spring
Courtesy of NISSAN MOTOR CO., U.S.A.

6. Install valve spring retainer.
7. Install valve collet.
 - Compress valve spring with the valve spring compressor, attachment and adapter (SST). Install valve collet with magnetic hand.

CAUTION: When working, take care not to damage valve lifter holes.

- Tap stem edge lightly with plastic hammer after installation to check its installed condition.


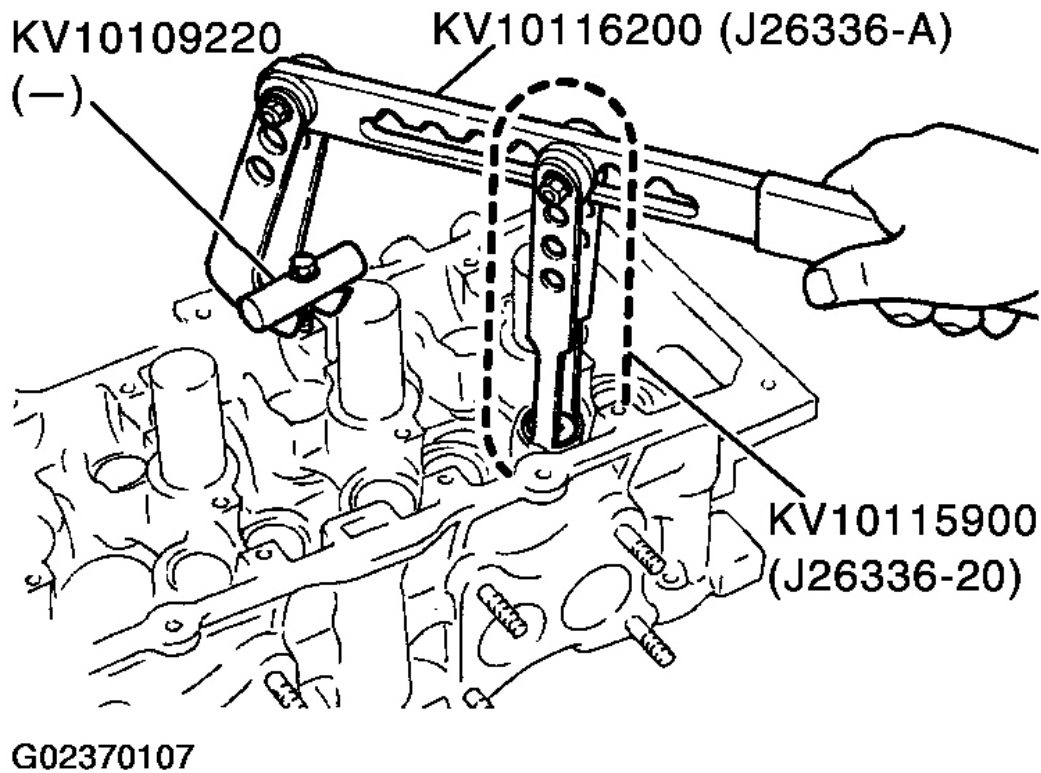


Fig. 154: Installing Valve Collet
Courtesy of NISSAN MOTOR CO., U.S.A.

8. Install valve lifter and adjusting shim.
 - Install in the original position.
9. Install spark plug tube as follows:
 - Press-fit spark plug tube following procedure below.
 - a. Remove old liquid gasket adhering to cylinder head mounting hole.
 - b. Apply liquid gasket to area within approximately 12 mm (0.47 in) from edge of spark plug tube press-fit side.
 - Use Genuine High strength locking sealant or equivalent. Refer to "**RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS**".

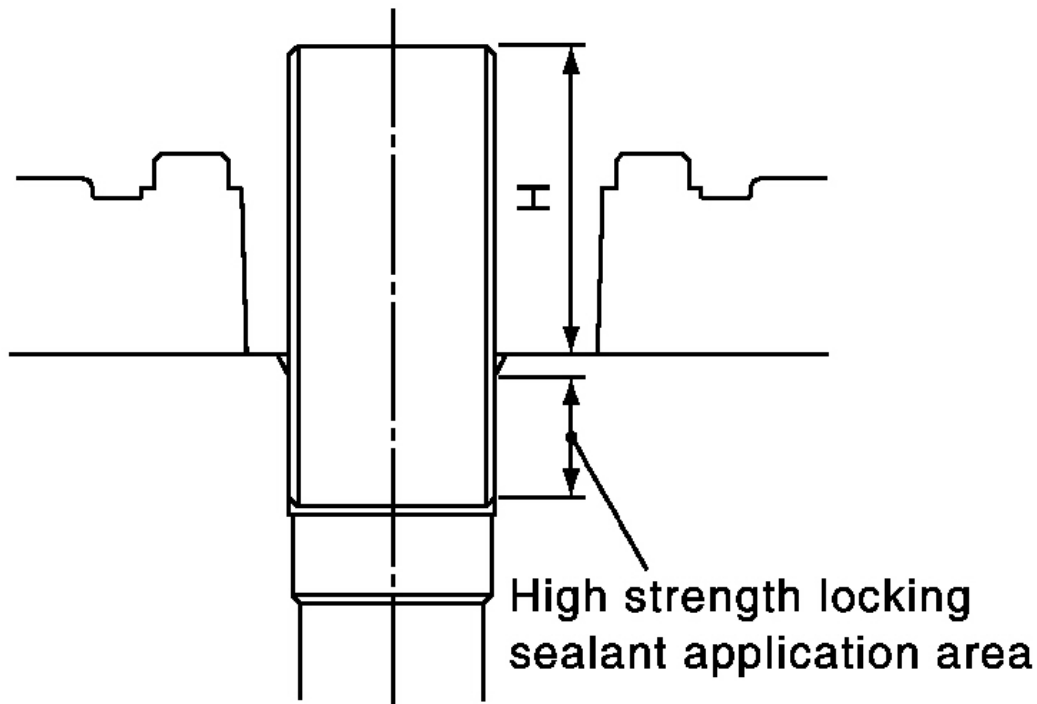

G02370108

Fig. 155: Identifying Spark Plug Tube Height
Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Using a drift, press-fit spark plug tube so that its height "H" in the figure is as specified.

Standard press-fit height "H":

38.4 - 39.4 mm (1.512 - 1.551 in)

CAUTION:

- When press-fitting spark plug tube, take care not to deform it.
- After press-fitting, wipe off liquid gasket protruding onto cylinder head upper face.

10. Install spark plug with the spark plug wrench (commercial service tool).


INSPECTION AFTER DISASSEMBLY

VALVE DIMENSIONS

- Check dimensions of each valve. For dimensions, refer to "**VALVE DIMENSIONS**".

- If the dimensions are out of the standard, replace valve and check the valve seat contact. Refer to "VALVE SEAT CONTACT".

T (Margin thickness)

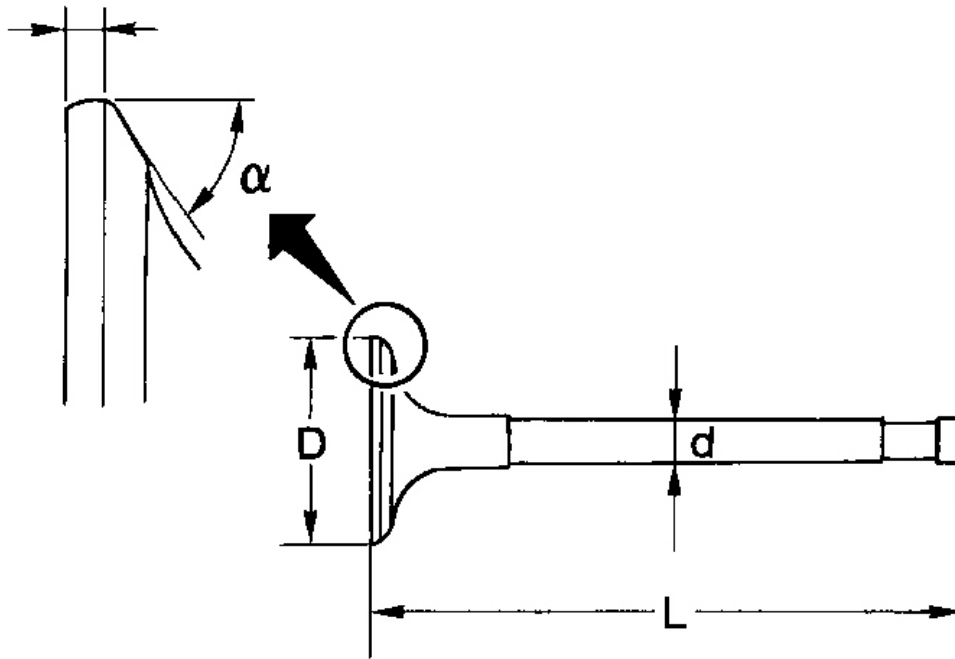

G02370109

Fig. 156: Identifying Valve Dimensions
 Courtesy of NISSAN MOTOR CO., U.S.A.

VALVE GUIDE CLEARANCE

Valve Stem Diameter

Measure diameter of valve stem with micrometer.

Standard

Intake: 5.972 - 5.980 mm (0.2351 - 0.2354 in)

Exhaust: 5.962 - 5.970 mm (0.2347 - 0.2350 in)

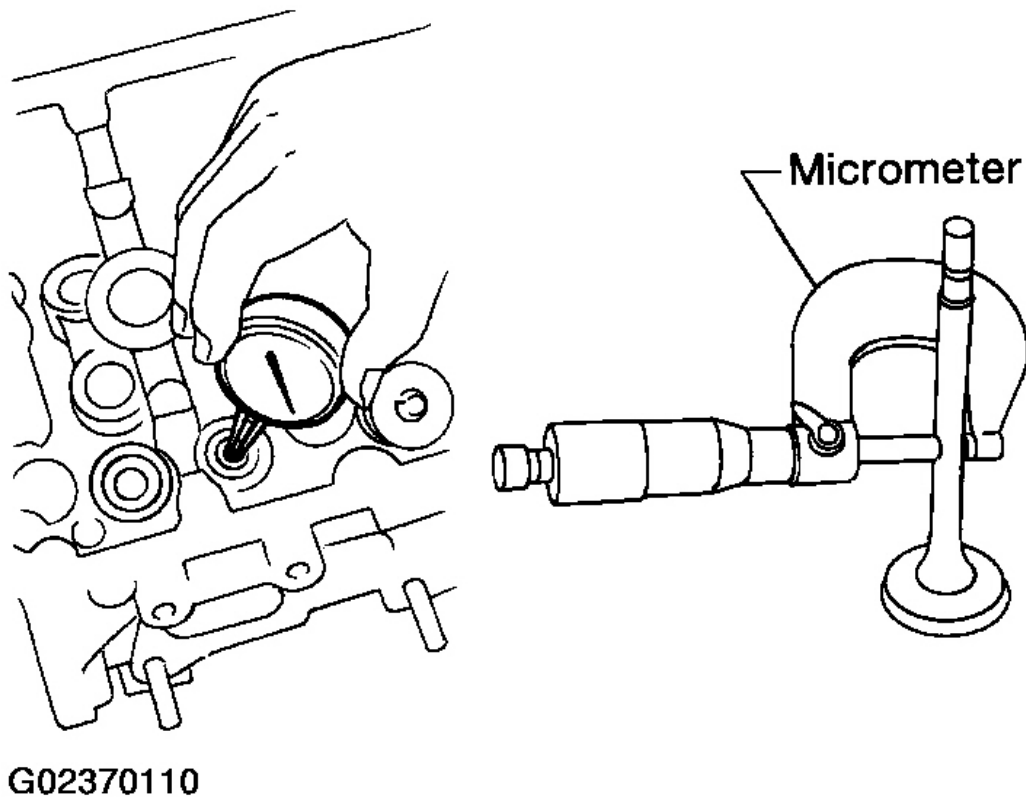


Fig. 157: Checking Valve Stem Diameter
Courtesy of NISSAN MOTOR CO., U.S.A.

Valve Guide Inner Diameter

Measure inner diameter of valve guide with inside micrometer.

Standard

Intake and Exhaust: 6.000 - 6.018 mm (0.2362 - 0.2369 in)

Valve Guide Clearance

(Valve guide clearance) = (Valve guide inner diameter) - (Valve stem diameter).

Valve guide clearance:

Standard

Intake: 0.020 - 0.046 mm (0.0008 - 0.0018 in)

Exhaust: 0.030 - 0.056 mm (0.0012 - 0.0022 in)

Limit**Intake: 0.08 mm (0.003 in)****Exhaust: 0.10 mm (0.004 in)**

- If it exceeds the limit, replace valve and/or valve guide.

VALVE GUIDE REPLACEMENT

When valve guide is removed, replace with oversized [0.2 mm, (0.008 in)] valve guide.

1. To remove valve guide, heat cylinder head to 110 to 130°C (230 to 266°F) by soaking in heated oil.



**G02370111**

Fig. 158: Heating Cylinder Head By Soaking In Heated Oil
Courtesy of NISSAN MOTOR CO., U.S.A.

2. Drive out valve guide with a press [under a 20 kN (2 ton, 2.2 US ton, 2.0 Imp ton) pressure] or hammer and the valve guide drift (commercial service tool).

CAUTION: Cylinder head contains heat, when working wear protective

equipment to avoid getting burned.

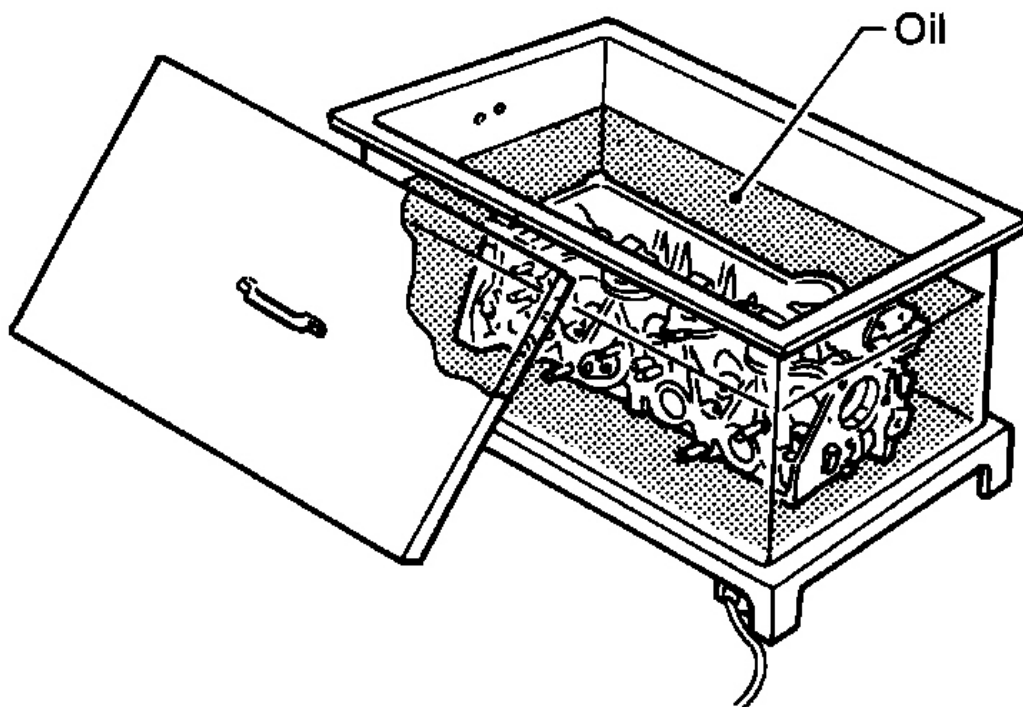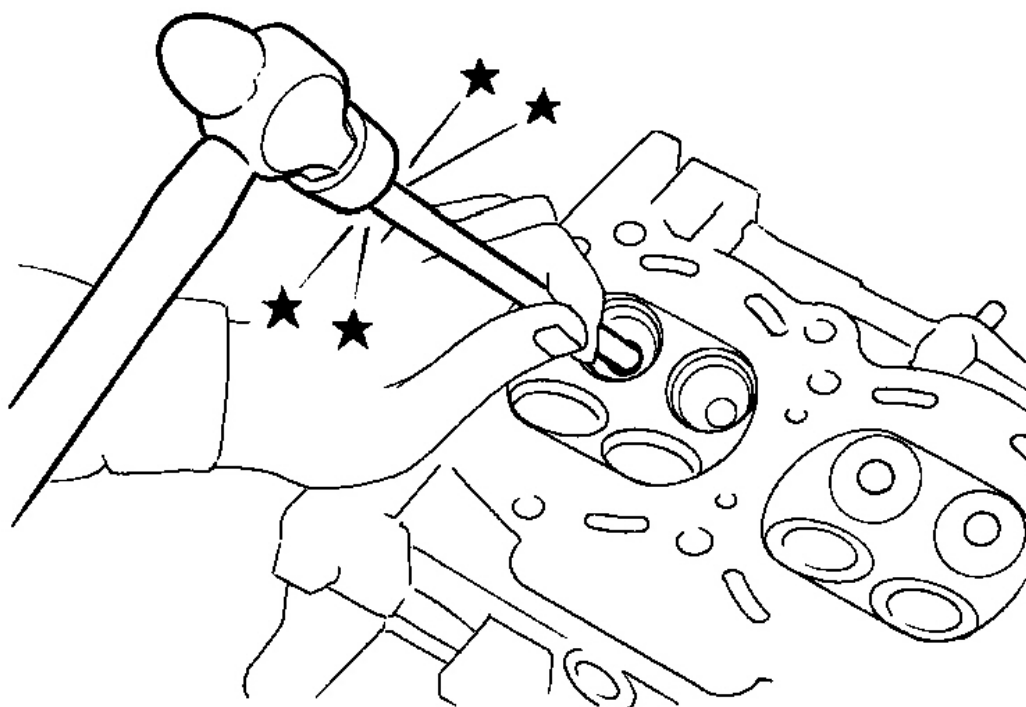

G02370112

Fig. 159: Removing Valve Guide


Courtesy of NISSAN MOTOR CO., U.S.A.

3. Using the valve guide reamer (commercial service tool), ream cylinder head valve guide hole.

Valve guide hole diameter (for service parts)

Intake and exhaust:


10.175 - 10.196 mm (0.4006 - 0.4014 in)

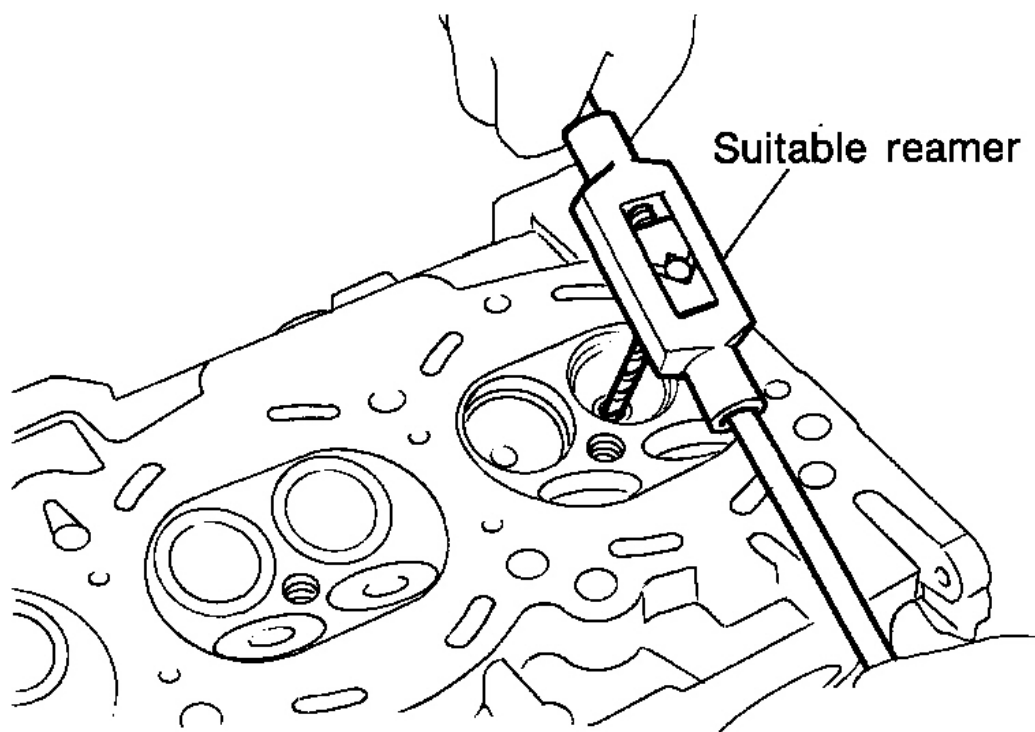

G02370113

Fig. 160: Reaming Cylinder Head Valve Guide Hole
Courtesy of NISSAN MOTOR CO., U.S.A.

4. Heat cylinder head to 110 to 130°C (230 to 266°F) by soaking in heated oil.

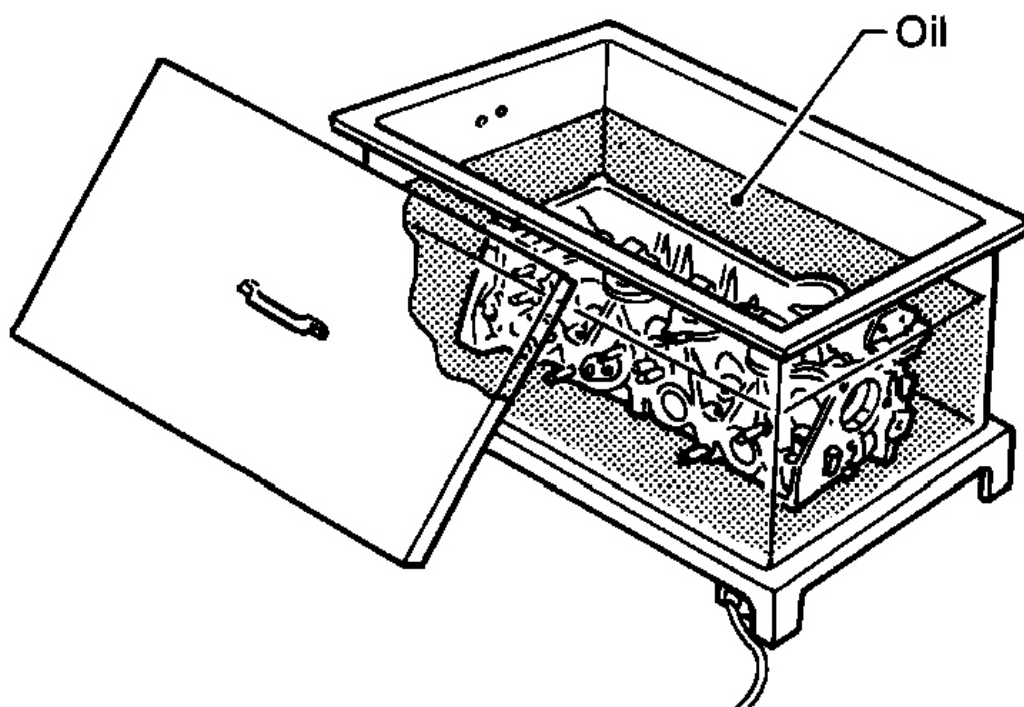


G02370114

Fig. 161: Heating Cylinder Head By Soaking In Heated Oil
Courtesy of NISSAN MOTOR CO., U.S.A.

5. Using the valve guide drift (commercial service tool), press valve guide from the camshaft side to dimensions as in the figure.

CAUTION: Cylinder head contains heat, when working wear protective equipment to avoid getting burned.

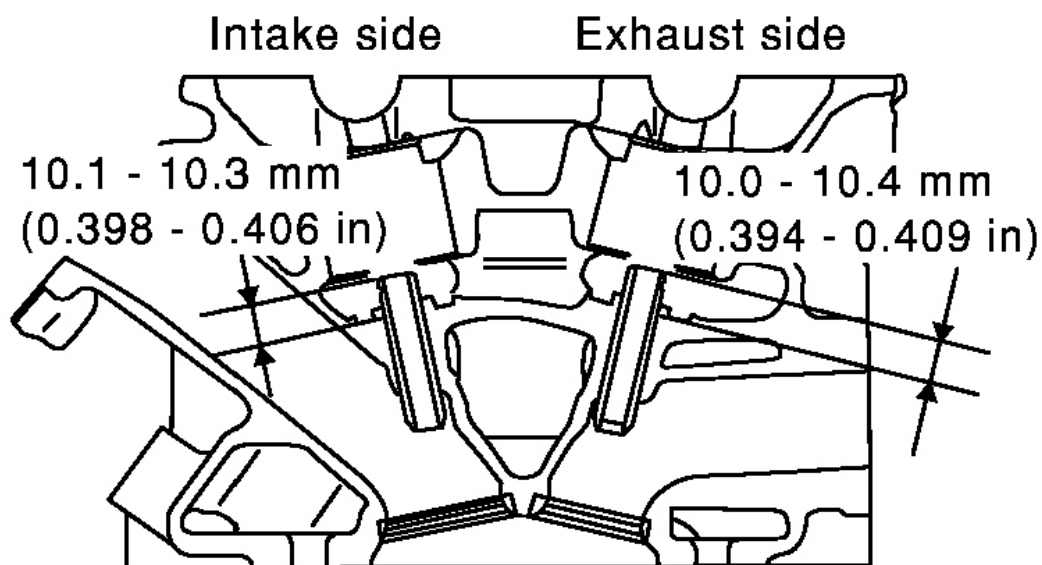


G02370115

Fig. 162: Identifying Valve Guide Pressing Dimensions

Courtesy of NISSAN MOTOR CO., U.S.A.

6. Using the valve guide reamer (commercial service tool), apply reamer finish to valve guide.

Standard**Intake and exhaust:****6.000 - 6.018 mm (0.2362 - 0.2369 in)**

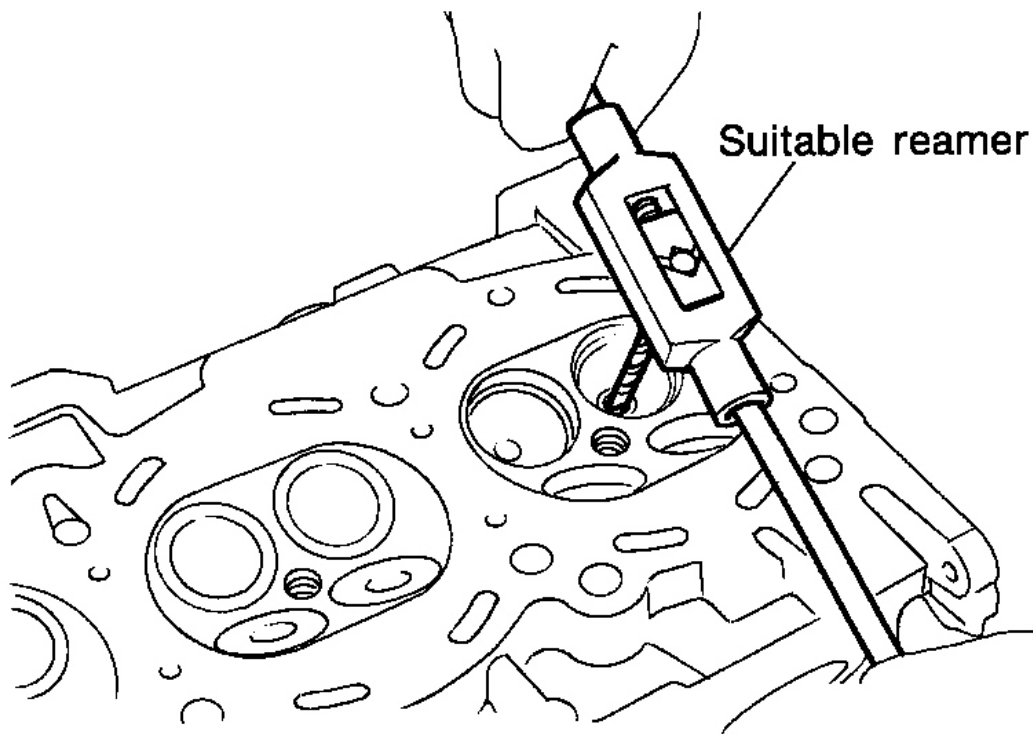

G02370116

Fig. 163: Reaming To Valve Guide
Courtesy of NISSAN MOTOR CO., U.S.A.

VALVE SEAT CONTACT

- After confirming that the dimensions of valve guides and valves are within specifications, perform this procedure.
- Apply Prussian blue (or white lead) onto contacting surface of valve seat to check the condition of the valve contact on the surface.
- Check if the contact area band is continuous all around the circumference.

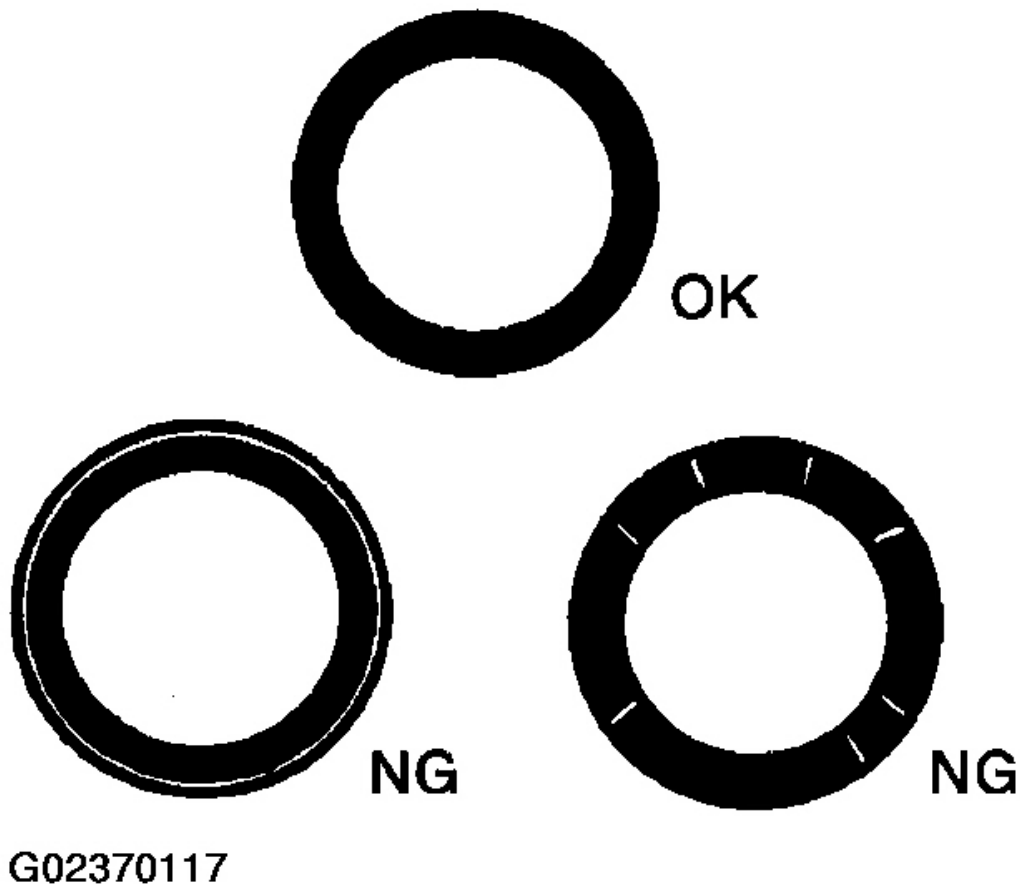


Fig. 164: [Identifying Valve Seat Contact Surface]
Courtesy of NISSAN MOTOR CO., U.S.A.

- If not, grind to adjust valve fitting and check again. If the contacting surface still has NG conditions even after the re-check, replace valve seat. Refer to "**VALVE SEAT REPLACEMENT**".

VALVE SEAT REPLACEMENT

When valve seat is removed, replace with oversized (0.5 mm, 0.020 in) valve seat.

1. Bore out old seat until it collapses. Boring should not continue beyond the bottom face of the seat recess in cylinder head. Set the machine depth stop to ensure this.

CAUTION: Prevent to scratch cylinder head by excessive boring.


2. Ream cylinder head recess diameter for service valve seat.

Oversize [0.5 mm (0.020 in)]

Intake: 37.500 - 37.516 mm (1.4764 - 1.4770 in)

Exhaust: 32.700 - 32.716 mm (1.2874 - 1.2880 in)

- Be sure to ream in circles concentric to the valve guide center.
- This will enable valve seat to fit correctly.

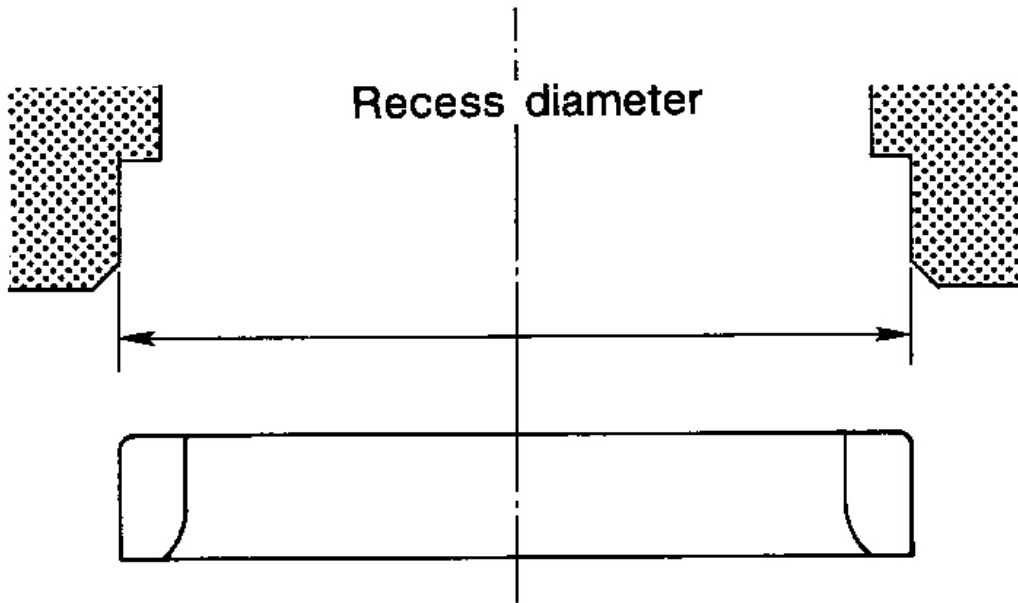


G02370118

Fig. 165: Identifying Cylinder Head Recess Diameter

Courtesy of NISSAN MOTOR CO., U.S.A.

3. Heat cylinder head to 110 to 130°C (230 to 266°F) by soaking in heated oil.

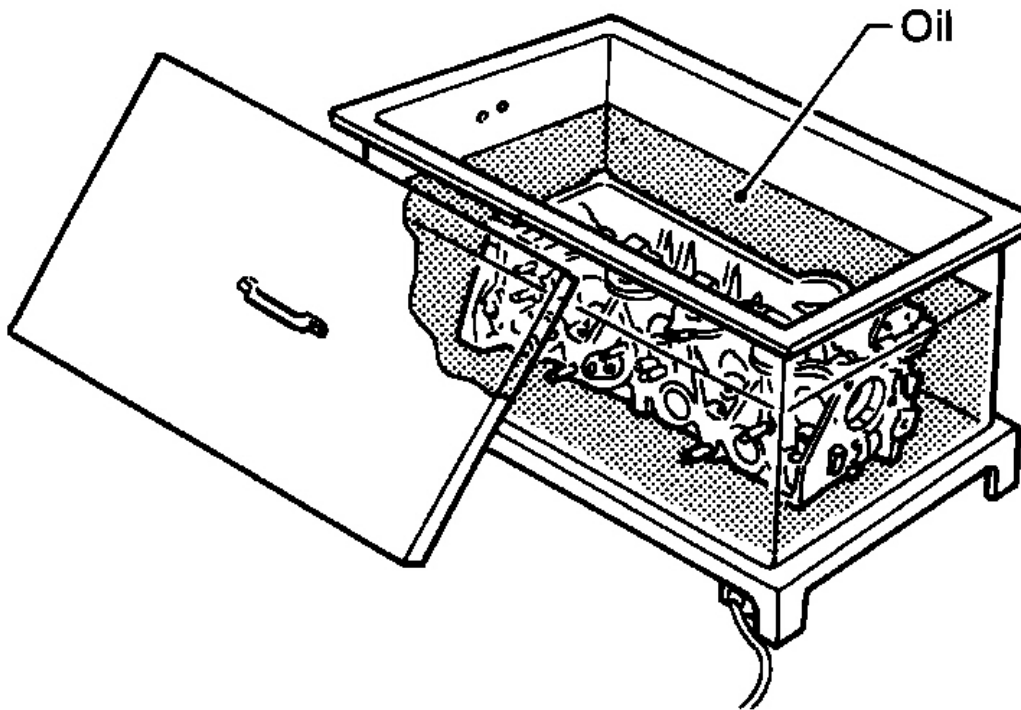

G02370119

Fig. 166: Heating Cylinder Head By Soaking In Heated Oil
Courtesy of NISSAN MOTOR CO., U.S.A.


4. Provide valve seats cooled well with dry ice. Force fit valve seat into cylinder head.

CAUTION:

- Avoid directly touching cold valve seats.
- Cylinder head contains heat, when working wear protective equipment to avoid getting burned.

5. Using the valve seat cutter set (commercial service tool) and valve seat grinder, finish the seat to the specified dimensions. Refer to "VALVE SEAT".

CAUTION: When using the valve seat cutter, firmly grip the cutter handle with both hands. Then, press on the contacting surface all around the circumference to cut in a single drive. Improper pressure on with the cutter or cutting many different times may result in stage valve seat.

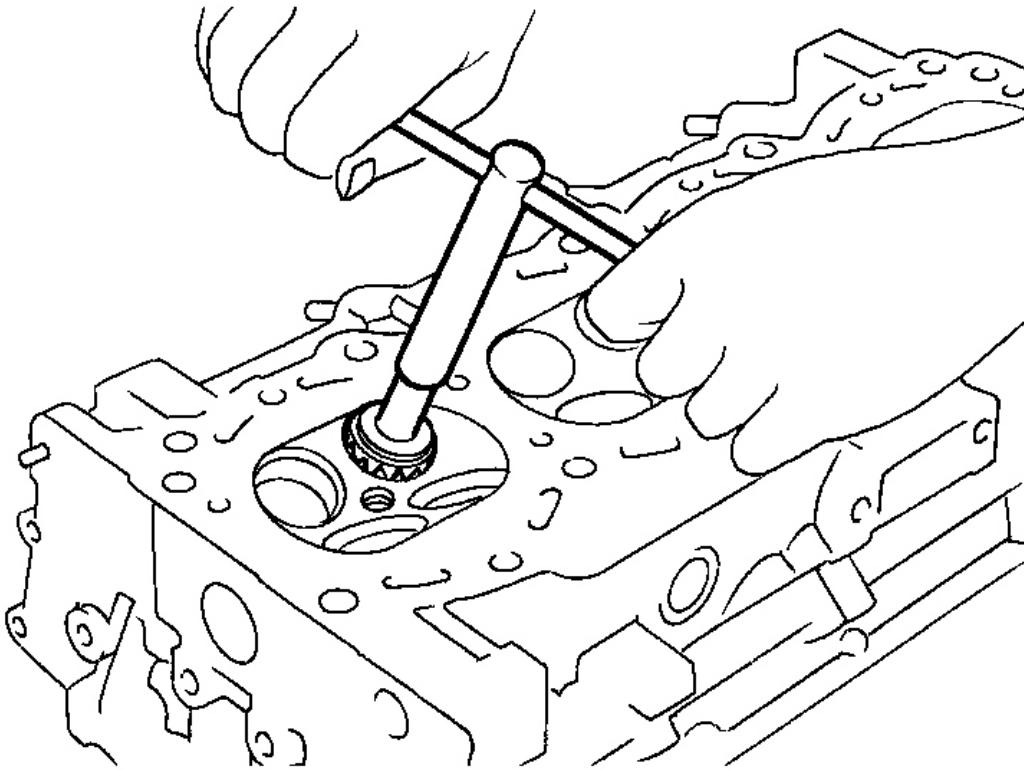

G02370120

Fig. 167: Grinding Valve Seat
Courtesy of NISSAN MOTOR CO., U.S.A.


6. Using compound, grind to adjust valve fitting.
7. Check again for normal contact. Refer to "VALVE SEAT CONTACT".

VALVE SPRING SQUARENESS

Set try square along the side of valve spring and rotate the spring. Measure the maximum clearance between the top face of spring and try square.

Limit: 2.0 mm (0.079 in)

- If it exceeds the limit, replace valve spring.

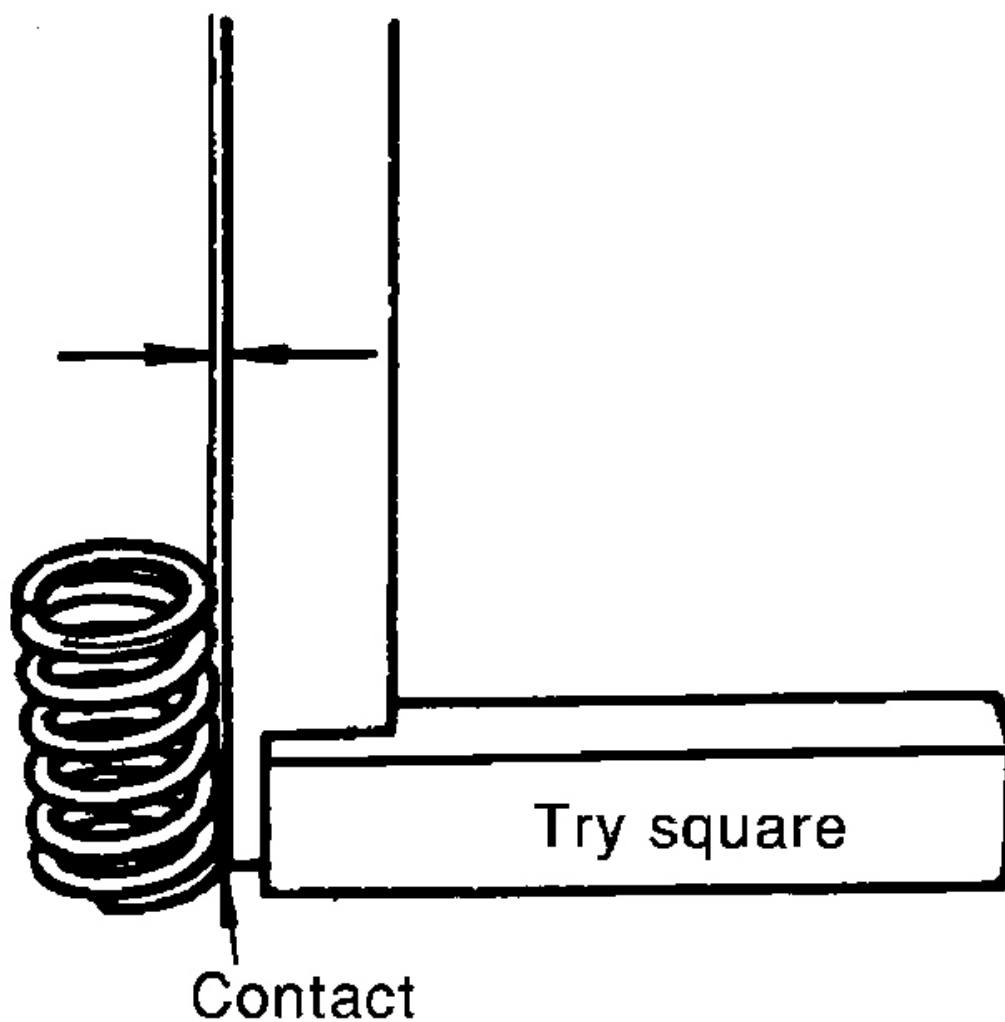

G02370121

Fig. 168: Measuring Maximum Clearance Between Top Face Of Spring And Try Square
Courtesy of NISSAN MOTOR CO., U.S.A.

VALVE SPRING DIMENSIONS AND VALVE SPRING PRESSURE LOAD

Check valve spring pressure at specified spring height.

CAUTION: Do not remove valve spring seat from valve spring (parts for assembly).

Standard:**Intake and exhaust****Free height**

: 46.35 - 46.85 mm (1.8247 - 1.8444 in)

Installation height

: 33.8 mm (1.331 in)

Installation load

: 165 - 189 N (16.8 - 19.3 kg, 37 - 42 lb)


Height during valve open

: 24.4 mm (0.961 in)

Load with valve open

: 290 - 330 N (29.6 - 33.7 kg, 65 - 74 lb)

- If out of the standard, replace valve spring.

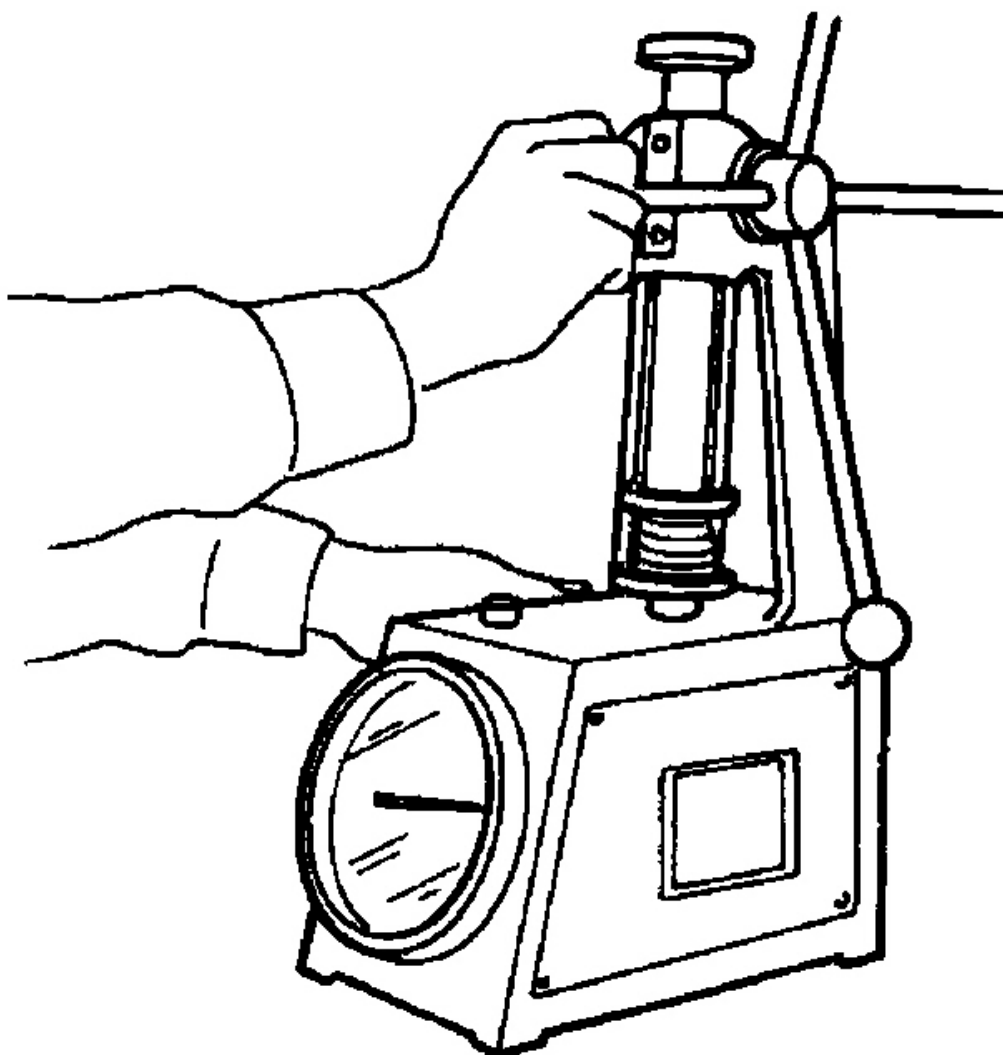


G02370122

Fig. 169: Checking Valve Spring Pressure
Courtesy of NISSAN MOTOR CO., U.S.A.

ENGINE ASSEMBLY

REMOVAL AND INSTALLATION

SEC. 112

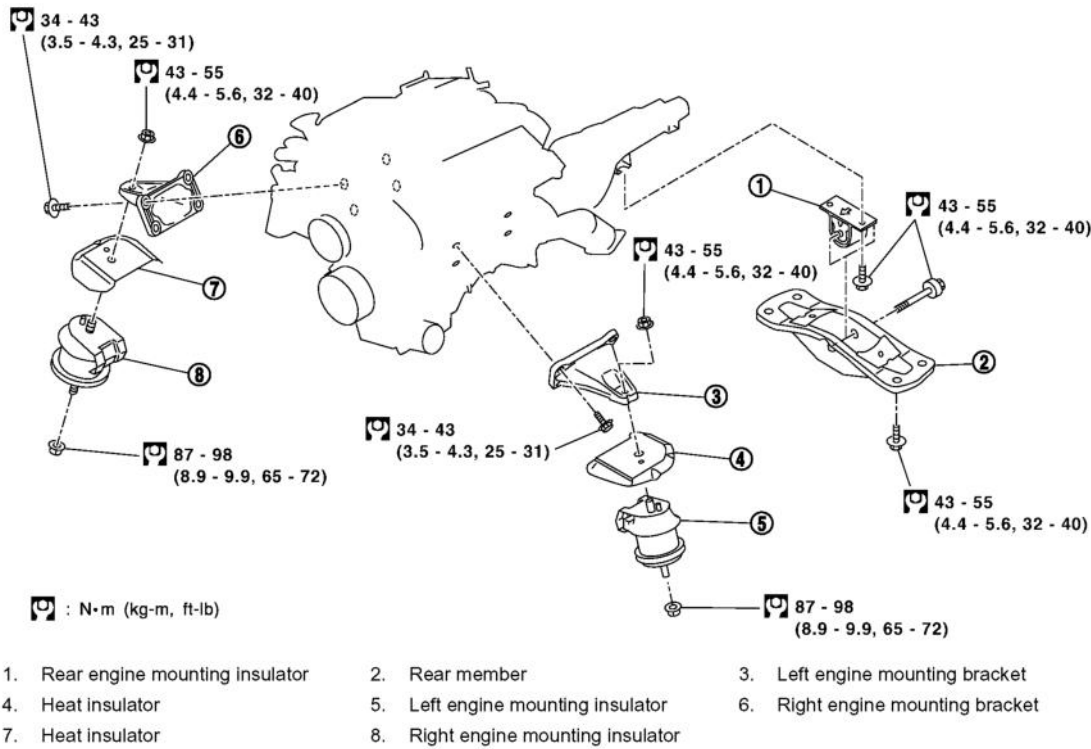

G02370123

Fig. 170: Removing Engine Assembly With Torque Specifications
 Courtesy of NISSAN MOTOR CO., U.S.A.

WARNING:

- Situate vehicle on a flat and solid surface.
- Place chocks at front and back of rear wheels.
- For engines not equipped with engine slingers, attach proper slingers and bolts described in PARTS CATALOG.

CAUTION:

- Always be careful to work safely, avoid forceful or uninstructed operations.
- Do not start working until exhaust system and engine coolant are cool enough.
- If items or work required are not covered by the engine section, refer to the applicable sections.
- Always use the support point specified for lifting.
- Use either 2-point lift type or separate type lift as best you can. If board-on type is used for unavoidable reasons, support at the rear axle jacking point with transmission jack or similar tool before starting work, in preparation for the backward shift of center of

gravity.

- For supporting points for lifting and jacking point at rear axle, refer to "GARAGE JACK AND SAFETY STAND ".

REMOVAL

Outline

At first, engine and transmission assembly with suspension member downward. Then separate engine and transmission.

Preparation

1. Release fuel pressure. Refer to "FUEL PRESSURE RELEASE ".
2. Drain engine coolant from radiator drain plug. Refer to "CHANGING ENGINE COOLANT ".

CAUTION:

- Perform this step when the engine is cold.
- Do not spill engine coolant on drive belt.

3. Remove the following:

- Engine cover, battery cover and air cleaner cover; Refer to "ENGINE ROOM COVER".
- Battery and battery tray; Refer to "BATTERY "
- Air duct (inlet), air duct and air cleaner case assembly; Refer to "AIR CLEANER AND AIR DUCT".
- Radiator hoses and A/T oil cooler hoses; Refer to "RADIATOR ".
- Cooling fan shroud assembly; Refer to "COOLING FAN ".

CAUTION: After the removal, protect the radiator with a cover a cover not to be damaged.

Engine Room Left

1. Disconnect heater hoses, and install plugs to avoid leakage of engine coolant.
2. Disconnect wire bonding exhaust manifold cover to vehicle.
3. Discharge refrigerant from A/C circuit. Refer to "REFRIGERANT LINES ".
4. Remove A/C piping from A/C compressor, and temporarily fasten it on vehicle with a rope. Refer to "REMOVAL AND INSTALLATION OF COMPRESSOR ".

Engine Room Right

1. Disconnect fuel feed hose at the engine side connection.
 - For disconnection/connection of quick connector, refer to "REMOVAL AND INSTALLATION".
2. Disconnect engine room harness from the connected position close to the alternator, and set it aside for

easier work.

3. Disconnect ground cable.
4. Disconnect vacuum hose between vehicle and engine and set it aside.
5. After draining fluid, remove power steering piping at the following parts:
 - Reservoir tank side between oil cooler and reservoir tank.
 - High pressure hose side between oil cooler and high pressure hose.

Vehicle inside

1. Separate engine room harness indoors, and pull out engine room harness toward the engine side, tack them temporarily according to the following procedures.
 - a. Remove front kicking plate and dash side finisher. Refer to "**BODY SIDE TRIM**".
 - b. Remove instrument lower cover, glove box assembly and glove box cover. Refer to "**INSTRUMENT PANEL ASSEMBLY**".
 - c. Separate all the harness connectors connected to engine harness on the indoor side.
 - d. Remove the intermediate fixed point, pull out engine connectors to the engine room side, then temporarily on the engine.

CAUTION:

- Pull out the harness and connectors carefully to avoid being damaged.
- After the temporary tacking, cover those connectors with plastic bags to avoid adhering foreign matters.

Vehicle Underbody


1. Remove exhaust front tube with power tool. Refer to "**REMOVAL AND INSTALLATION**".
2. Remove front cross bar with power tool. Refer to "**FRONT SUSPENSION ASSEMBLY**".
3. Disconnect rear propeller shaft with power tool. Refer to "**REAR PROPELLER SHAFT**".
 - After disconnection, plug the opening on transmission side.
4. Remove stabilizer bar connecting rod at upper side with power tool. Refer to "**FRONT SUSPENSION ASSEMBLY**".
5. Remove steering outer socket from strut assembly. Refer to "**FRONT SUSPENSION ASSEMBLY**".
6. Remove suspension arm from strut assembly. Refer to "**FRONT SUSPENSION ASSEMBLY**".
7. Disconnect steering lower joint. Then release steering shaft and steering gear assembly. Refer to "**POWER STEERING GEAR AND LINKAGE**".
8. Remove A/T oil cooler tube. Refer to "**TRANSMISSION ASSEMBLY**".
9. Remove A/T control rod at transmission side. Refer to "**SHIFT CONTROL SYSTEM**".
10. Preparation for the separation work of transmission is as follows:
 - a. Remove crankshaft position sensor (POS) from transmission. Refer to "**CYLINDER BLOCK**".
 - b. Remove rear plate cover from oil pan. Then remove bolts fixing drive plate to torque converter. Refer to "**OIL PAN AND OIL STRAINER**" and "**TRANSMISSION ASSEMBLY**".

- c. Remove transmission joint bolts which pierce at oil pan lower rear side. Refer to "TRANSMISSION ASSEMBLY".

Removal Work

1. Use a manual lift table cabby (commercial service tool) or equivalently rigid tool such as a transmission jack. Securely support bottom of suspension member and transmission oil pan.

CAUTION: Put a piece of wood or something similar as the supporting surface, secure a completely stable condition.

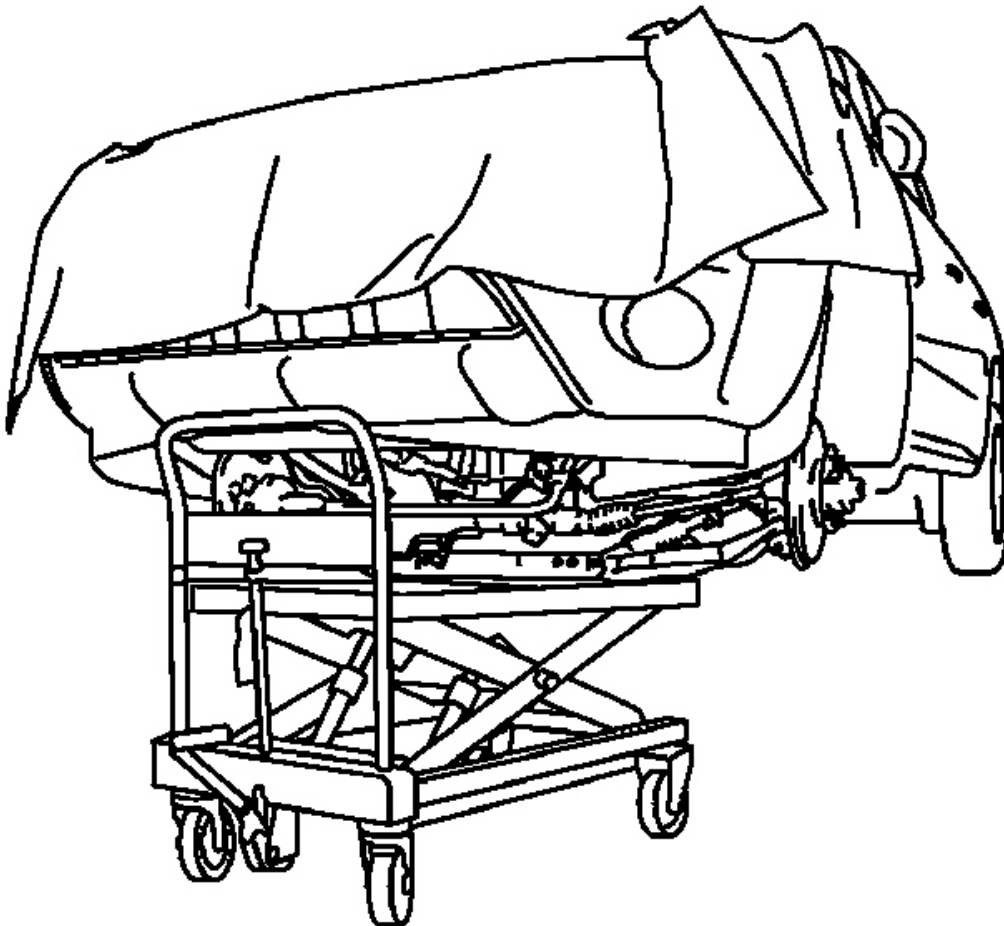

G02370124

Fig. 171: Supporting Bottom Of Suspension Member And Transmission Oil Pan

Courtesy of NISSAN MOTOR CO., U.S.A.

2. Remove power steering oil pump from engine side. Refer to "**HYDRAULIC LINE**".
3. Remove rear member mounting bolts.
4. Remove suspension member mounting nuts and bolts. Refer to "**FRONT SUSPENSION ASSEMBLY**".
5. Carefully lower engine, transmission and suspension member assembly. When performing work, observe the following caution.

CAUTION:


- **Confirm there is no interference with vehicle.**
- **Make sure all connection points have been disconnected.**
- **Keep in mind the center of vehicle gravity changes. If necessary, use jack(s) to support vehicle at rear jacking point(s) to prevent it from falling off the lift.**

Separation Work

1. Install engine slingers into front of left bank cylinder head and rear of right bank cylinder head.

Slinger bolts:

: 33.4 N.m (3.4 kg-m, 25 ft-lb)

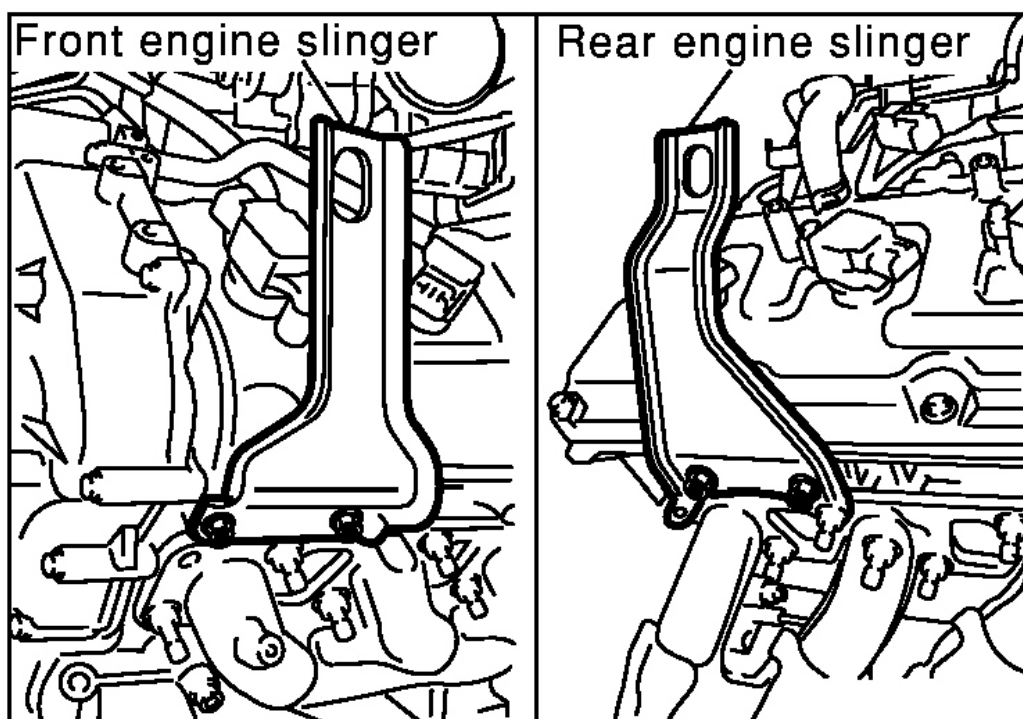

G02370125

Fig. 172: Installing Engine Sliders Into Front Of Left Bank Cylinder Head And Rear Of Right Bank Cylinder Head


Courtesy of NISSAN MOTOR CO., U.S.A.

2. Remove engine mounting insulators (right and left) upper side nut.
3. Lift with hoist and separate engine and transmission assembly from suspension member.
4. Remove starter motor. Refer to "**STARTING SYSTEM**".
5. Separate engine from transmission assembly. Refer to "**TRANSMISSION ASSEMBLY**".

INSTALLATION

Note the following, and install in the reverse order of removal.

- Where positioning pin is used, be sure to securely insert it into the hole of mating part.
- When installing front engine mounting bracket to cylinder block, first tighten two bolts on upper side. Then, tighten two bolts on lower side. (The same applies to both right and left.)

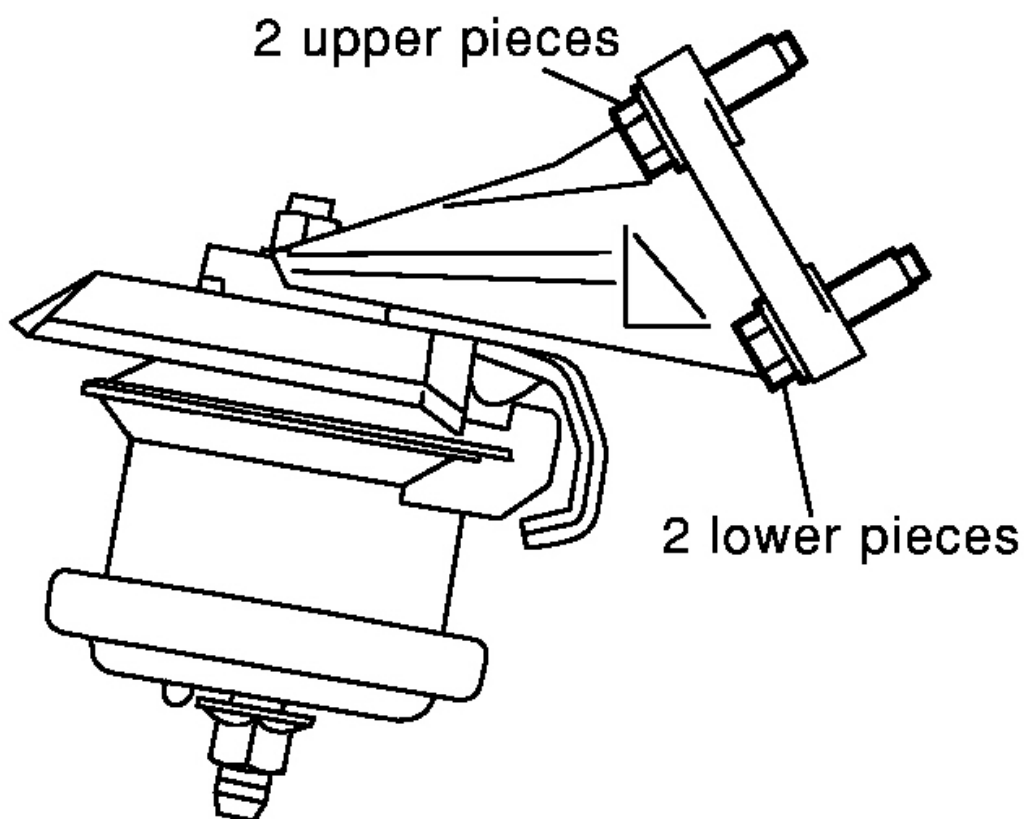

G02370126

Fig. 173: Installing Front Engine Mounting Bracket To Cylinder Block
Courtesy of NISSAN MOTOR CO., U.S.A.

INSPECTION AFTER INSTALLATION

- Before starting engine, check oil/fluid levels including engine coolant and engine oil. If less than required quantity, fill to the specified level. Refer to "**RECOMMENDED FLUIDS AND LUBRICANTS**".
- Use procedure below to check for fuel leakage.
 - Turn ignition switch "ON" (with engine stopped). With fuel pressure applied to fuel piping, check for fuel leakage at connection points.
 - Start engine. With engine speed increased, check again for fuel leakage at connection points.
- Run engine to check for unusual noise and vibration.
- Warm up engine thoroughly to make sure there is no leakage of fuel, exhaust gas, or any oils/fluids including engine oil and engine coolant.
- Bleed air from passages in lines and hoses, such as in cooling system.

- After cooling down engine, again check oil/fluid levels including engine oil and engine coolant. Refill to specified level, if necessary.

Summary of the inspection items:

ITEMS INSPECTION

Item	Before starting engine	Engine running	After engine stopped
Engine coolant	Level	Leakage	Level
Engine oil	Level	Leakage	Level
Other oils and fluids ⁽¹⁾	Level	Leakage	Level
Fuel	Leakage	Leakage	Leakage
Exhaust gas	-	Leakage	-
(1) Transmission/transaxle/CVT fluid, power steering fluid, brake fluid, etc.			

CYLINDER BLOCK

DISASSEMBLY AND ASSEMBLY

SEC. 110•120•226

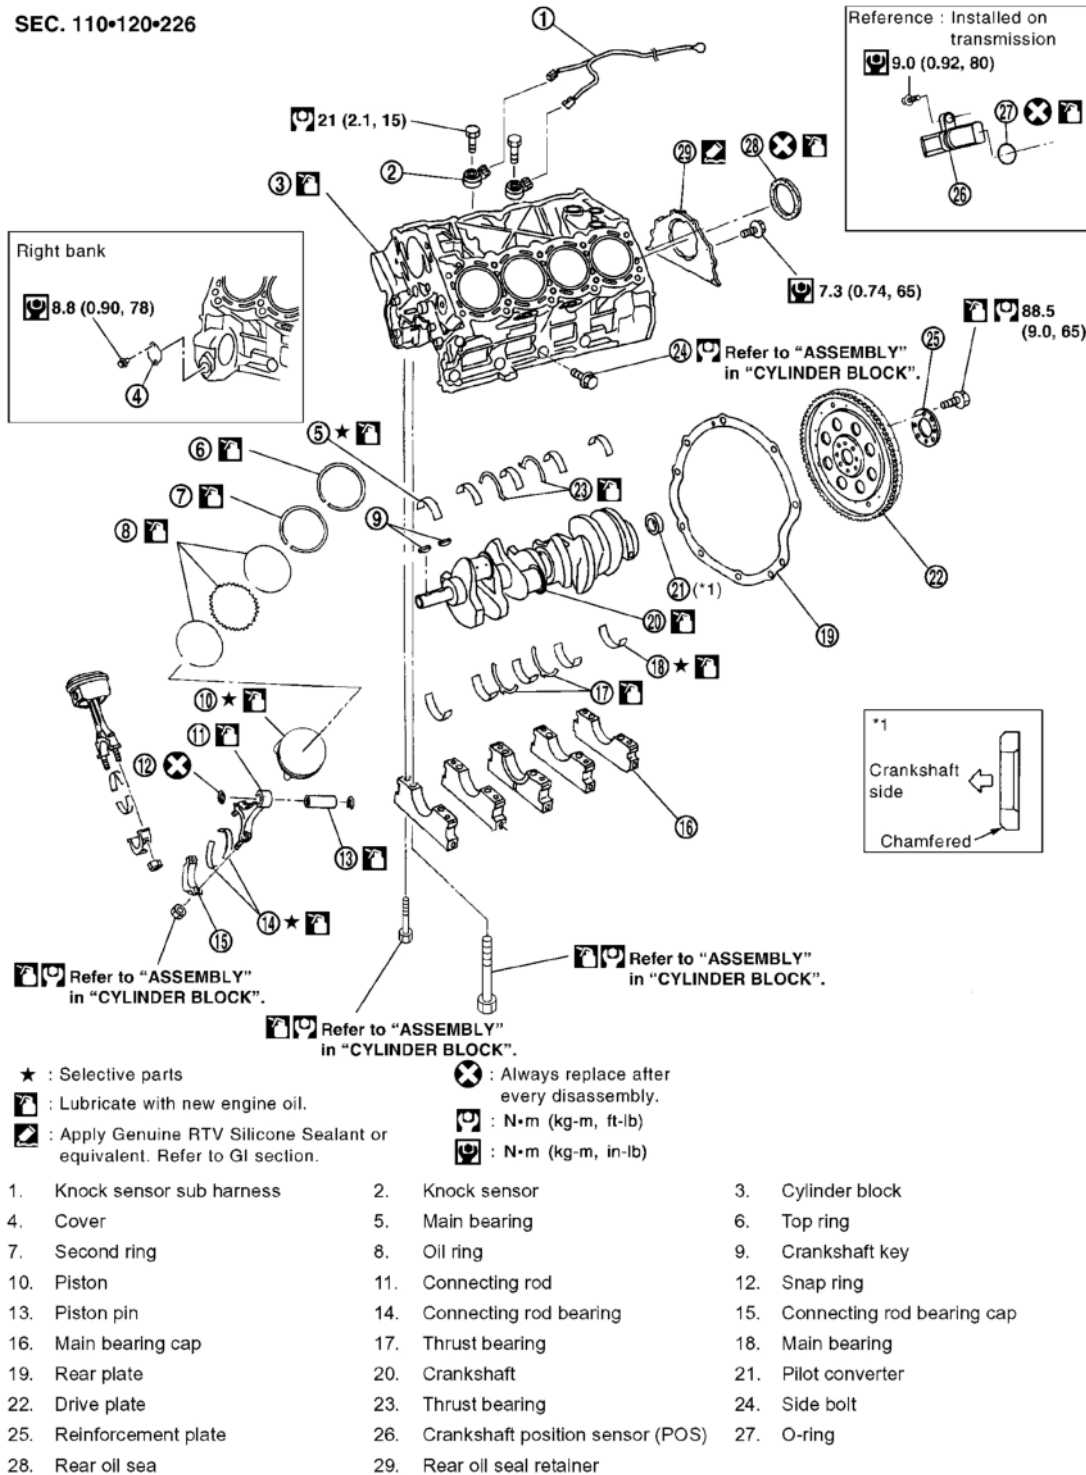


Fig. 174: Disassembling Cylinder Block With Torque Specifications
 Courtesy of NISSAN MOTOR CO., U.S.A.

SEC. 110
For Canada

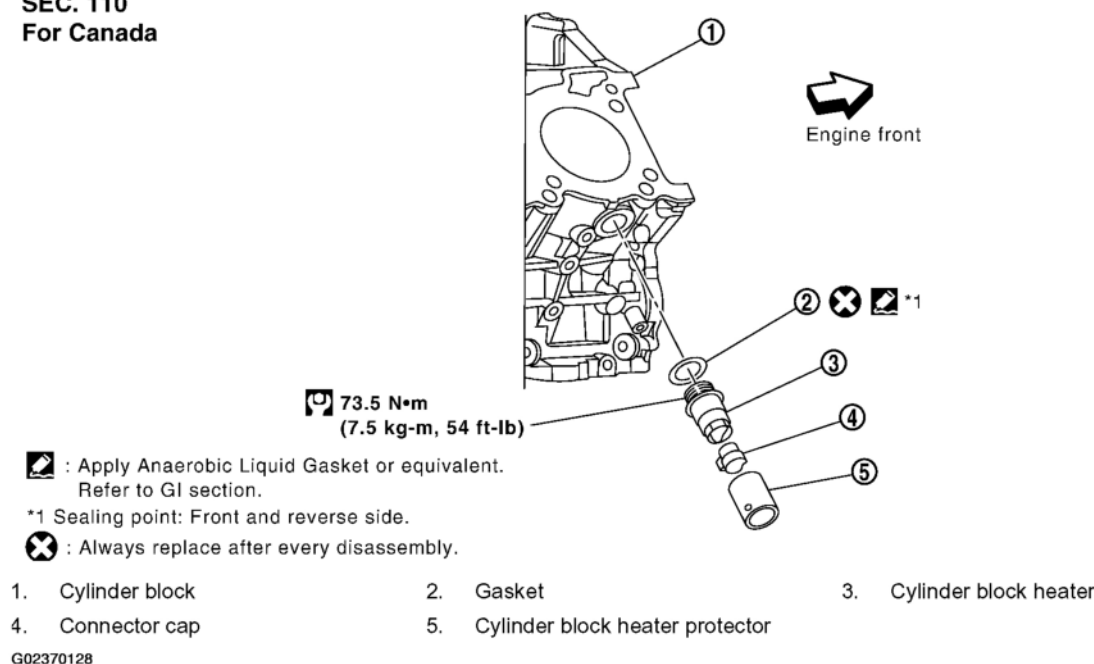


Fig. 175: Removing Cylinder Block Heater With Torque Specifications
Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION:

- Remove liquid gasket completely after removing cylinder block heater.
- Install hole of the block heater protector in a downward direction.

DISASSEMBLY

NOTE:


Explained here is how to disassemble with engine stand supporting transmission surface. When using different type of engine stand, note with difference in steps and etc.

1. Remove engine assembly. Refer to "**ENGINE ASSEMBLY**".
2. Remove the parts that may restrict installation of engine to widely use engine stand.

NOTE:

The procedure is described assuming that you use a widely use engine stand holding the surface, to which transmission is installed.

- a. Remove drive plate as follows:
 - i. Set the ring gear stopper (SST).

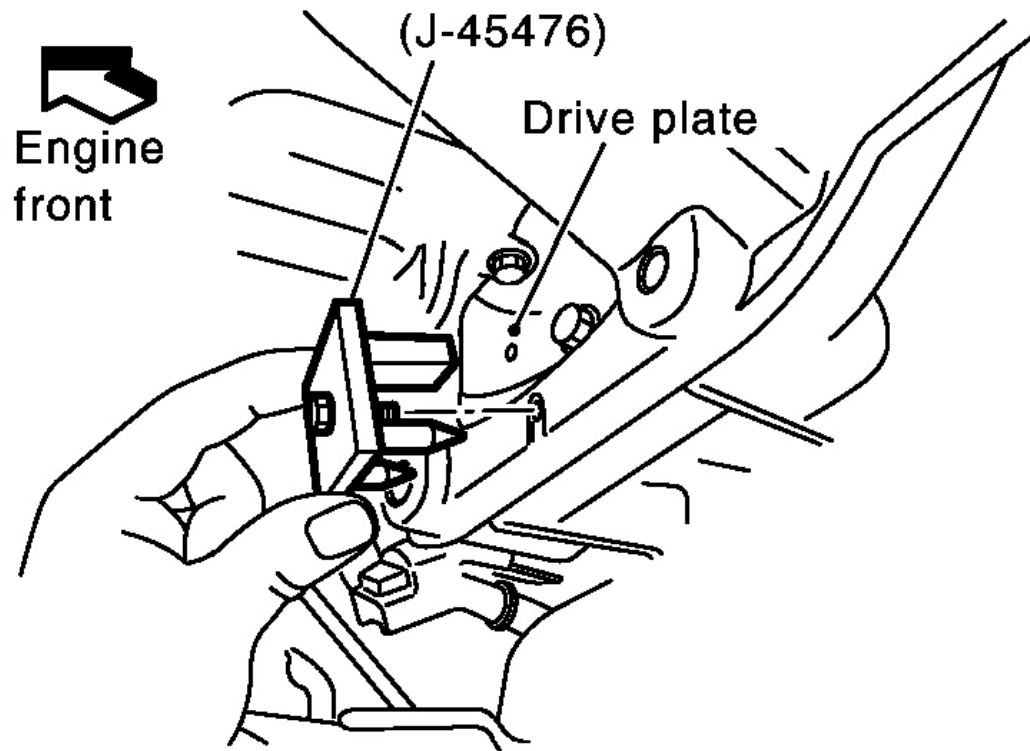

G02370129

Fig. 176: Removing Drive Plate
Courtesy of NISSAN MOTOR CO., U.S.A.

- ii. Loosen mounting bolts diagonally.

CAUTION:

- Be careful not to damage drive plate. Especially, avoid deforming and damaging of signal plate teeth (circumference position).
- Place drive plate with signal plate surface facing other than downward.
- Keep magnetic materials away from signal plate.

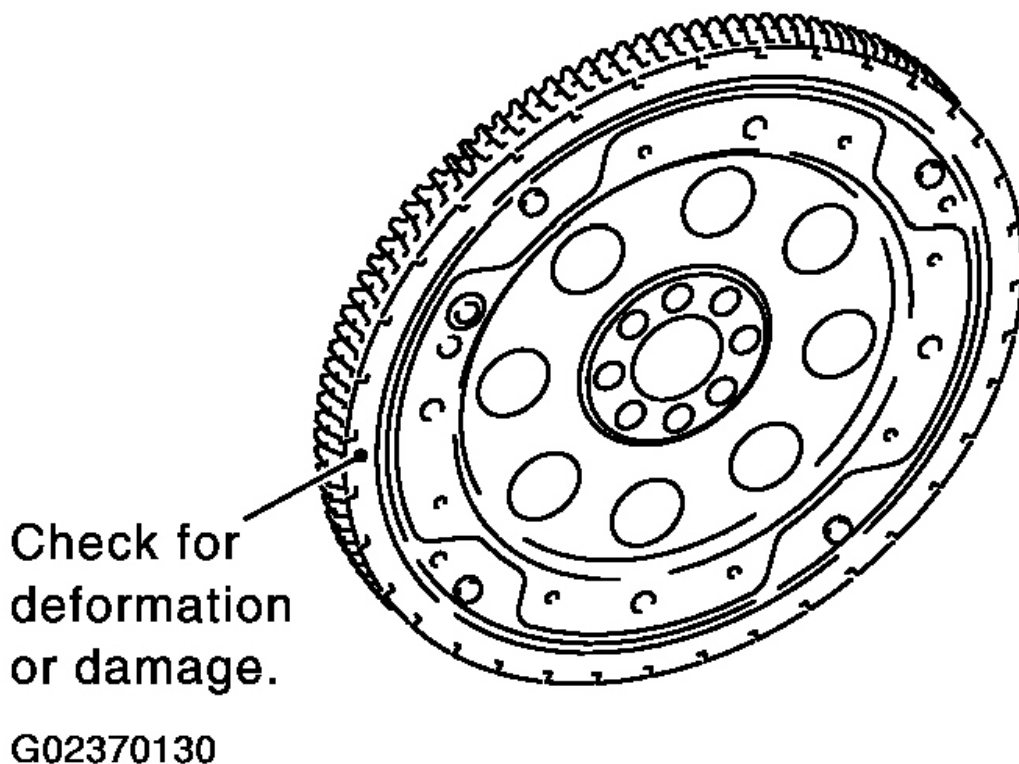


Fig. 177: Identifying Flywheel
Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Remove engine rear plate.
3. Lift the engine with hoist to install it onto the widely use engine stand.


CAUTION: Use an engine stand that has a load capacity [240 kg (529 pound) or more] large enough for supporting the engine weight.

- If the load capacity of the stand is not adequate, remove the following parts beforehand to reduce the potential risk of overturning the stand.
 - Remove intake manifold (upper and lower). Refer to "INTAKE MANIFOLD".
 - Remove fuel injector and fuel tube assembly. Refer to "FUEL INJECTOR AND FUEL TUBE".
 - Remove ignition coil. Refer to "IGNITION COIL".
 - Remove rocker cover. Refer to "ROCKER COVER".
 - Remove exhaust manifold and three way catalyst. Refer to "EXHAUST MANIFOLD AND THREE WAY CATALYST".

- Other removable brackets.

NOTE: The figure shows an example of widely use engine stand that can hold mating surface of transmission with drive plate and rear plate removed.

CAUTION: Before removing the hanging chains, make sure the engine stand is stable and there is no risk of overturning.

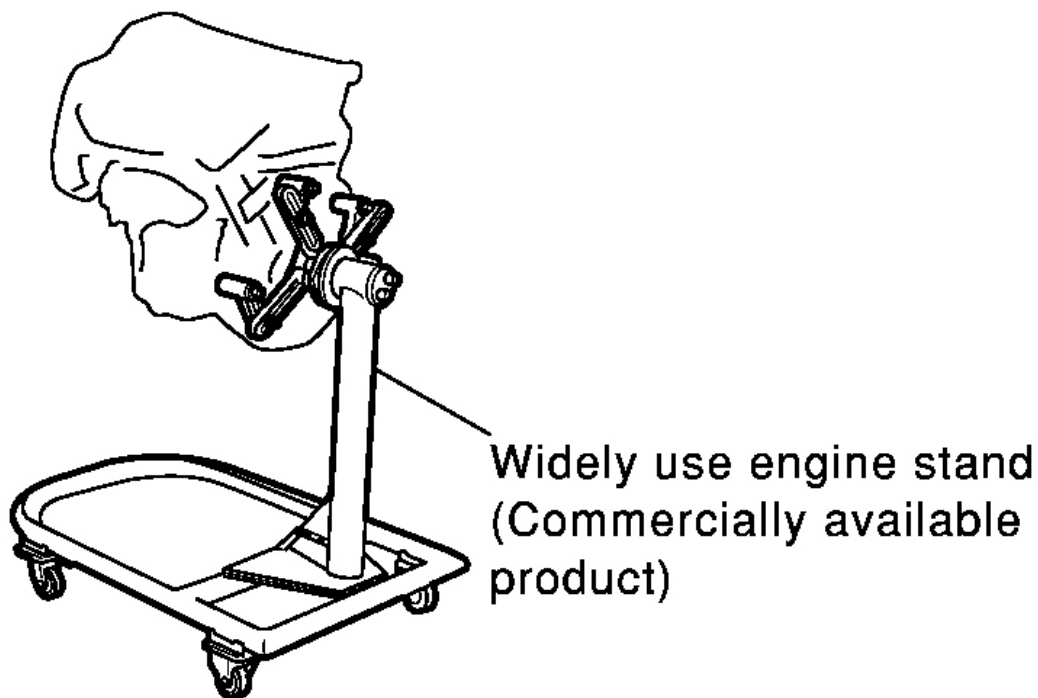


G02370131

Fig. 178: Holding Mating Surface Of Transmission With Drive Plate And Rear Plate Using Engine Stand

Courtesy of NISSAN MOTOR CO., U.S.A.

4. Drain engine oil. Refer to "CHANGING ENGINE OIL".
5. Drain engine coolant from inside engine by removing water drain plugs "B" as shown in the figure.

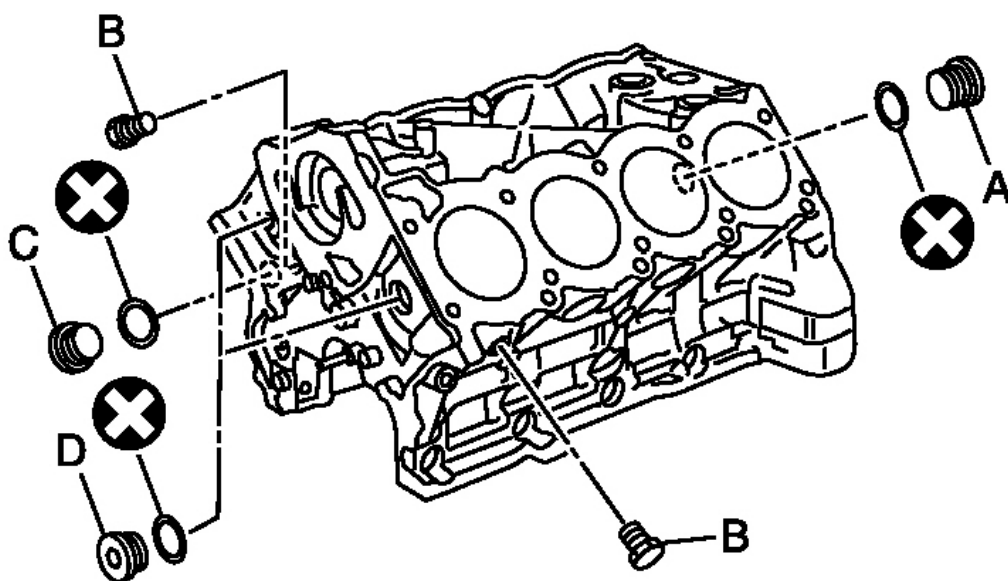

⊗ : Always replace after every disassembly.


G02370132

Fig. 179: Removing Water Drain Plugs
Courtesy of NISSAN MOTOR CO., U.S.A.

6. Remove oil pan and oil strainer. Refer to "OIL PAN AND OIL STRAINER".
7. Remove crankshaft pulley as follows:
 - a. Lock crankshaft with a hammer handle or similar tool to loosen crankshaft bolt.
 - b. Pull crankshaft pulley with both hands to remove it.

CAUTION:

- Do not remove crankshaft pulley bolt. Keep loosened crankshaft pulley bolt in place to protect removed crankshaft pulley from dropping.
- Do not remove balance weight (inner hexagon bolt) at the front of crankshaft pulley.

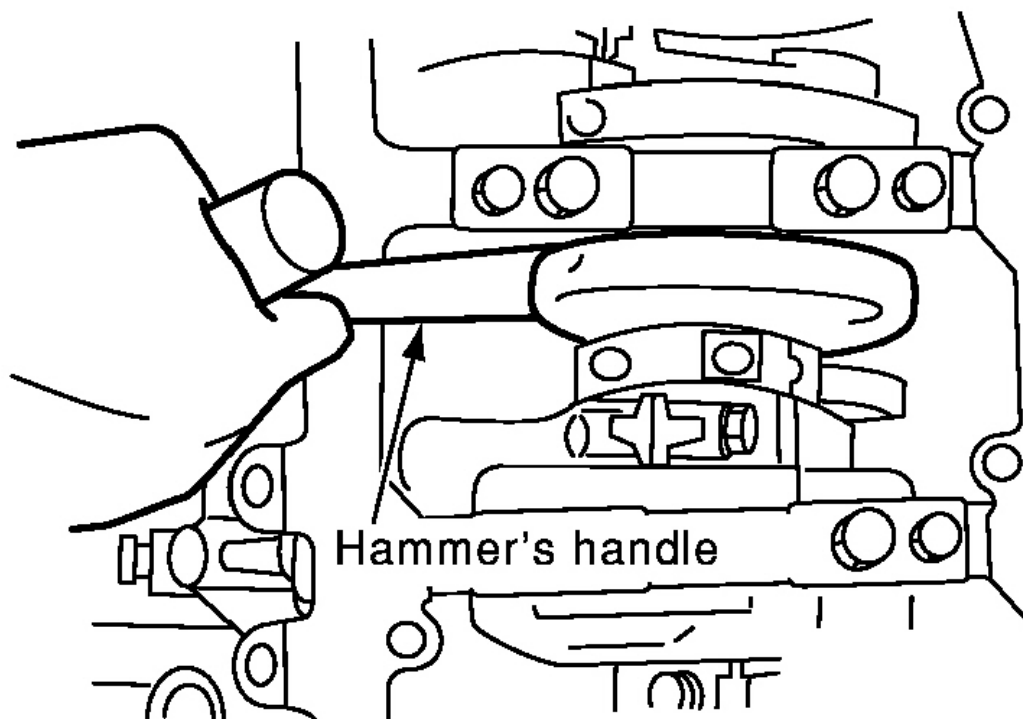

G02370133

Fig. 180: Removing Crankshaft Bolt

Courtesy of NISSAN MOTOR CO., U.S.A.


8. Remove the following components and associated parts (The parts listed in step 3 are not included here.)
 - Front cover and timing chain: Refer to "**TIMING CHAIN**".
 - Camshaft: Refer to "**CAMSHAFT**".
 - Cylinder head: Refer to "**CYLINDER HEAD**".
9. Remove knock sensor.

CAUTION: Carefully handle the sensor, avoiding shocks.

10. Remove piston and connecting rod assembly.
 - Before removing piston and connecting rod assembly, check the connecting rod side clearance. Refer to "**CONNECTING ROD SIDE CLEARANCE**".
 - a. Position crankshaft pin corresponding to connecting rod to be removed onto the bottom dead center.

- b. Remove connecting rod bearing cap.
- c. Using a hammer handle or similar tool, push piston and connecting rod assembly out to the cylinder head side.

CAUTION: Be careful not to damage the cylinder wall and crankshaft pin, resulting from an interference of connecting rod big end.

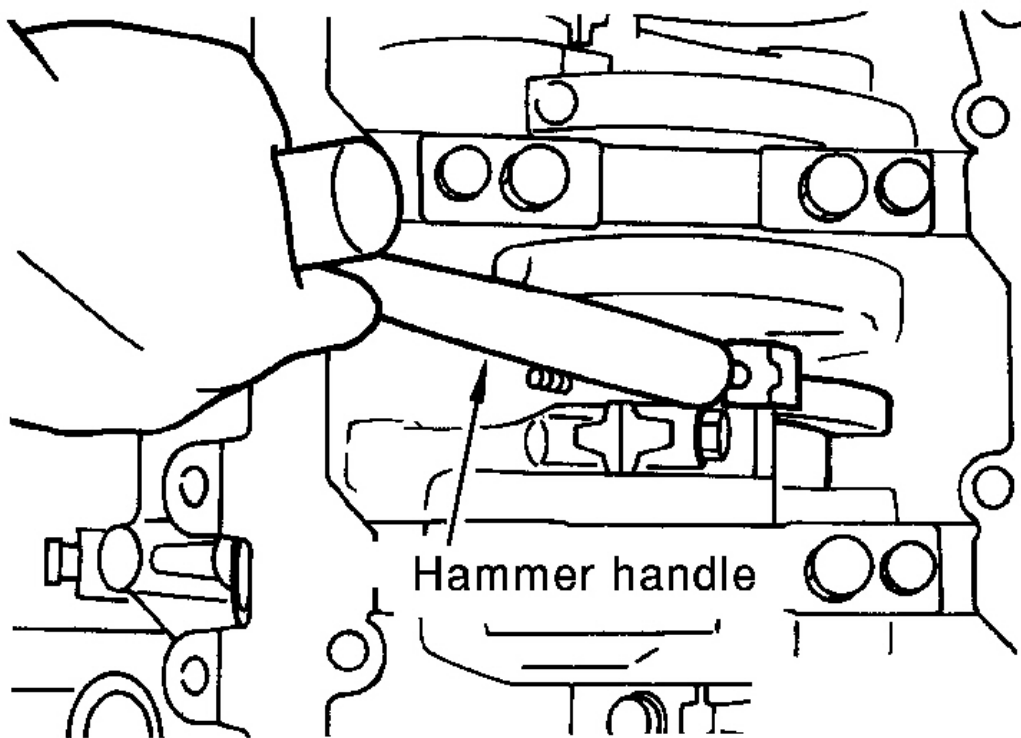

G02370134

Fig. 181: Removing Piston And Connecting Rod Assembly
Courtesy of NISSAN MOTOR CO., U.S.A.

11. Remove connecting rod bearings.

CAUTION:

- When removing them, note the installation position. Keep them in the correct order.

12. Remove piston rings from piston.


- Before removing piston rings, check the piston ring side clearance. Refer to "**PISTON RING**

SIDE CLEARANCE".

- Use the piston ring expander (commercial service tool).

CAUTION:


- When removing piston rings, be careful not to damage piston.
- Be careful not to damage piston rings by expanding them excessively.

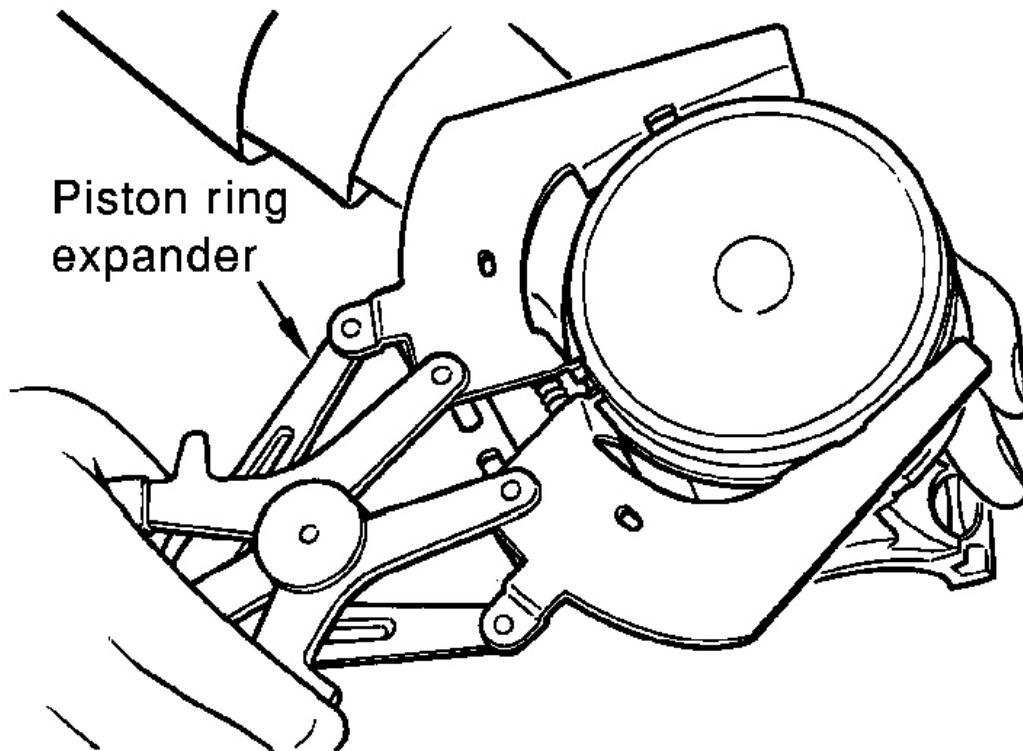

G02370135

Fig. 182: Removing Piston Rings Form Piston
Courtesy of NISSAN MOTOR CO., U.S.A.

13. Remove piston from connecting rod as follows.
 - a. Using the snap ring pliers, remove snap ring.

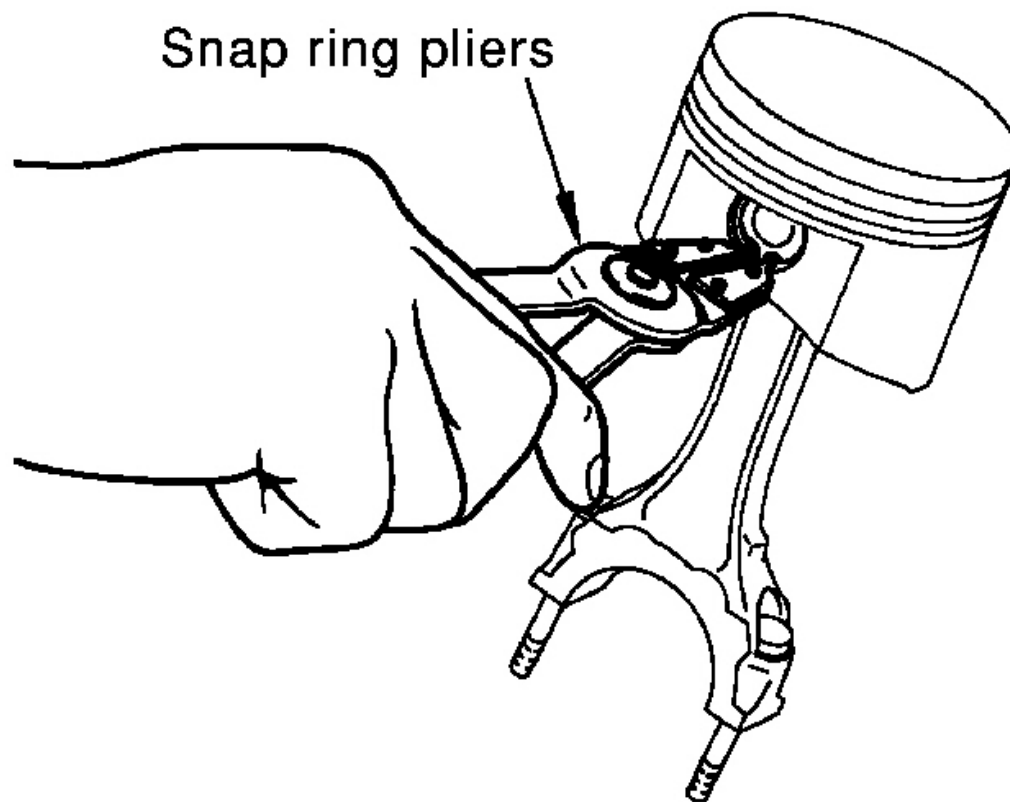

G02370136

Fig. 183: Removing Snap Ring
Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Heat piston to 60 to 70°C (140 to 158°F) with industrial use drier or equivalent.


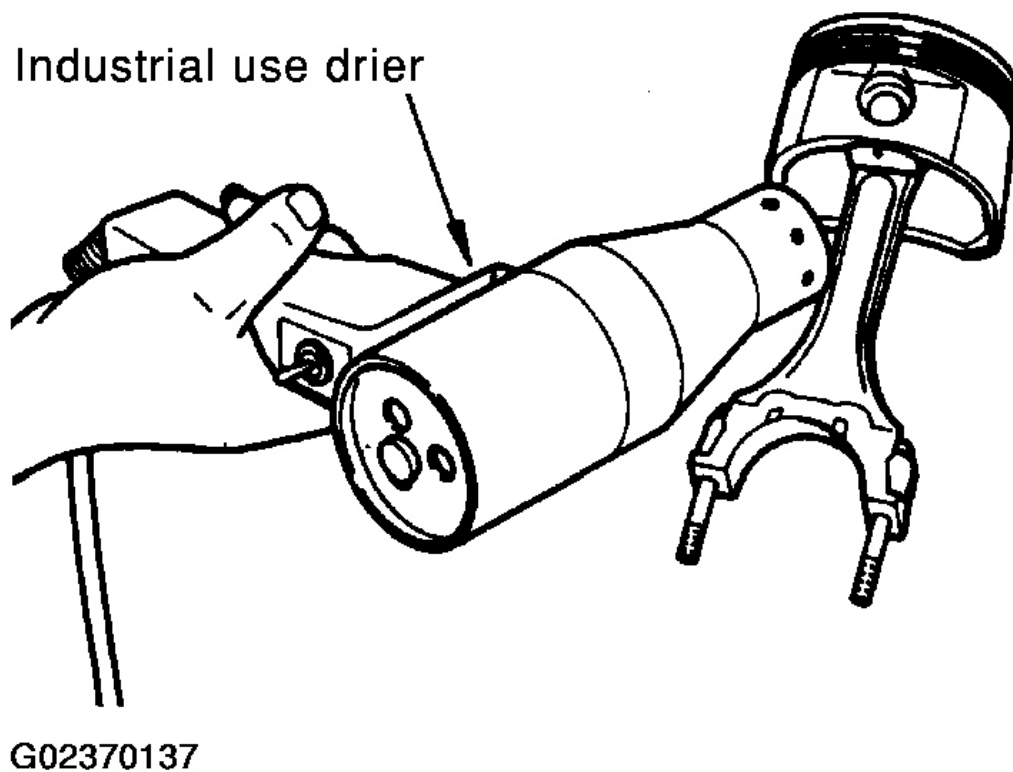


Fig. 184: Heating Piston With Industrial Use Drier
Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Push out piston pin with stick of outer diameter approximately 20 mm (0.8 in).

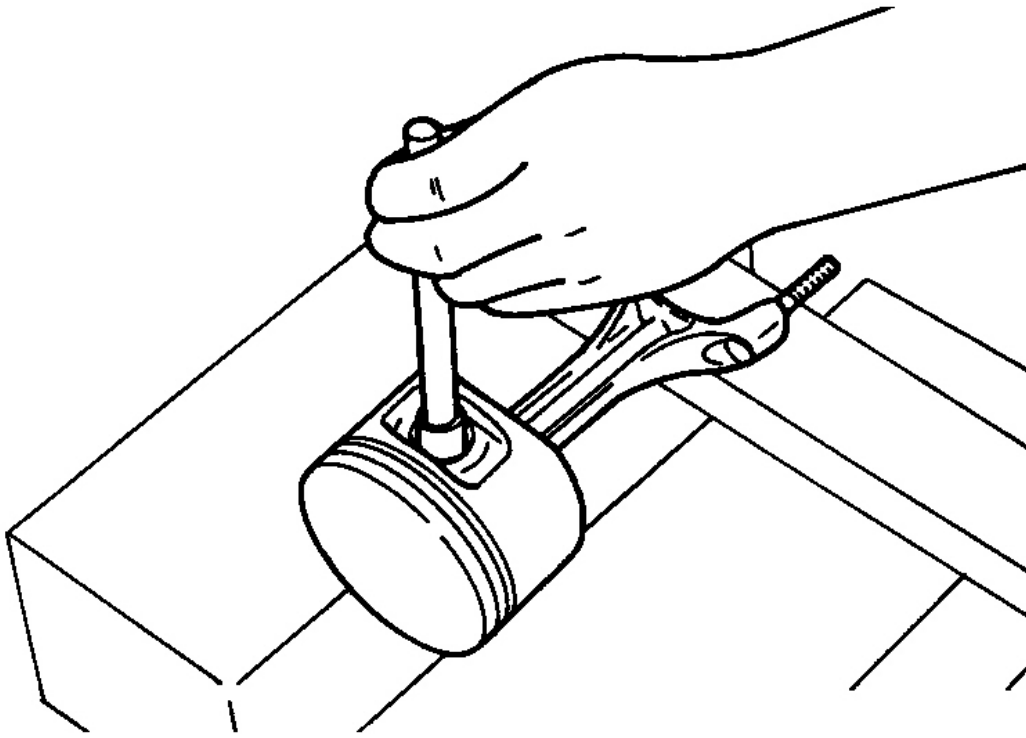

G02370138

Fig. 185: Removing Piston Pin

Courtesy of NISSAN MOTOR CO., U.S.A.

14. Remove rear oil seal retainer from cylinder block.

- Insert a screwdriver or similar tool between the rear end of the crankshaft counter weight and rear oil seal retainer, and separate the liquid gasket to remove.

CAUTION: Be careful not to damage the mating surface.


15. Using a screwdriver or similar tool, and lever off rear oil seal from rear oil seal retainer.

16. Remove main bearing cap as follows:

- Before loosening main bearing cap bolts, measure the crankshaft end play. Refer to "CRANKSHAFT END PLAY".
 - Loosen main bearing cap bolts in several different steps.
- a. Remove cover attached to the rear right side of cylinder block (next to the starter motor housing).

NOTE: Bolts (No. 28 shown in the figure) are installed on the inside of cover.

- b. Loosen the side bolts (M10) starting from 30 to 21 to remove.
- c. Loosen main bearing cap sub bolts (M9) starting from 20 to 11 to remove.
- d. Loosen main bearing cap bolts (M12) starting from 10 to 1 to remove.

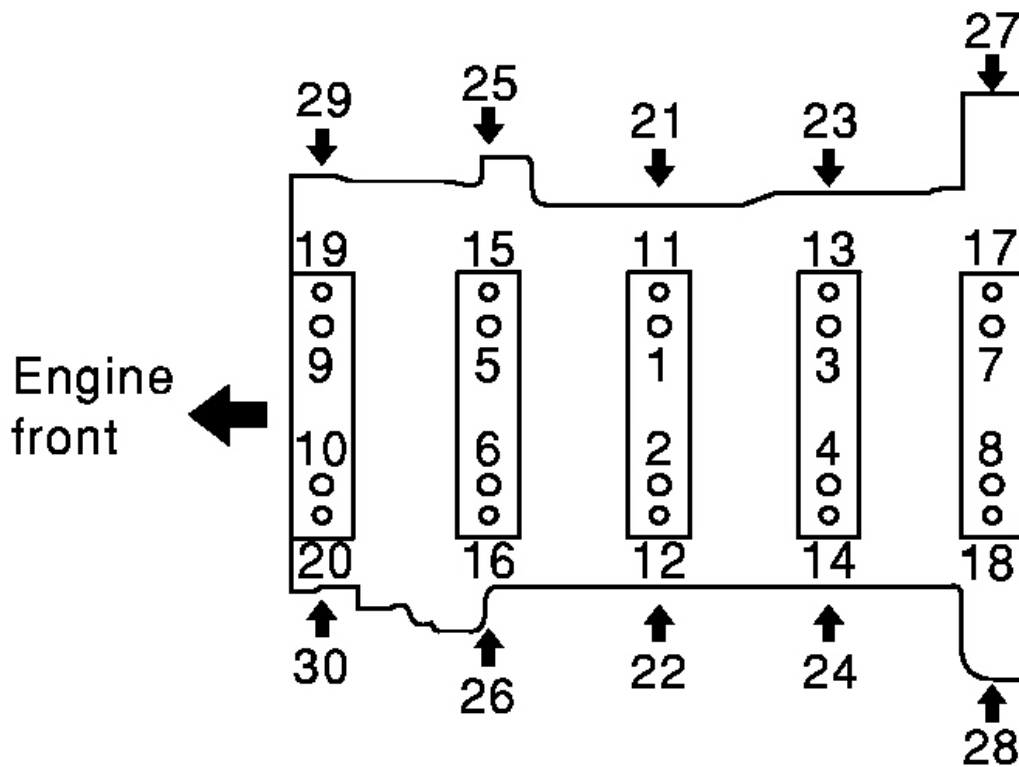

G02370139

Fig. 186: Removing Main Bearing Cap Bolts
Courtesy of NISSAN MOTOR CO., U.S.A.

- e. Using the main bearing cap remover (SST), remove main bearing cap.

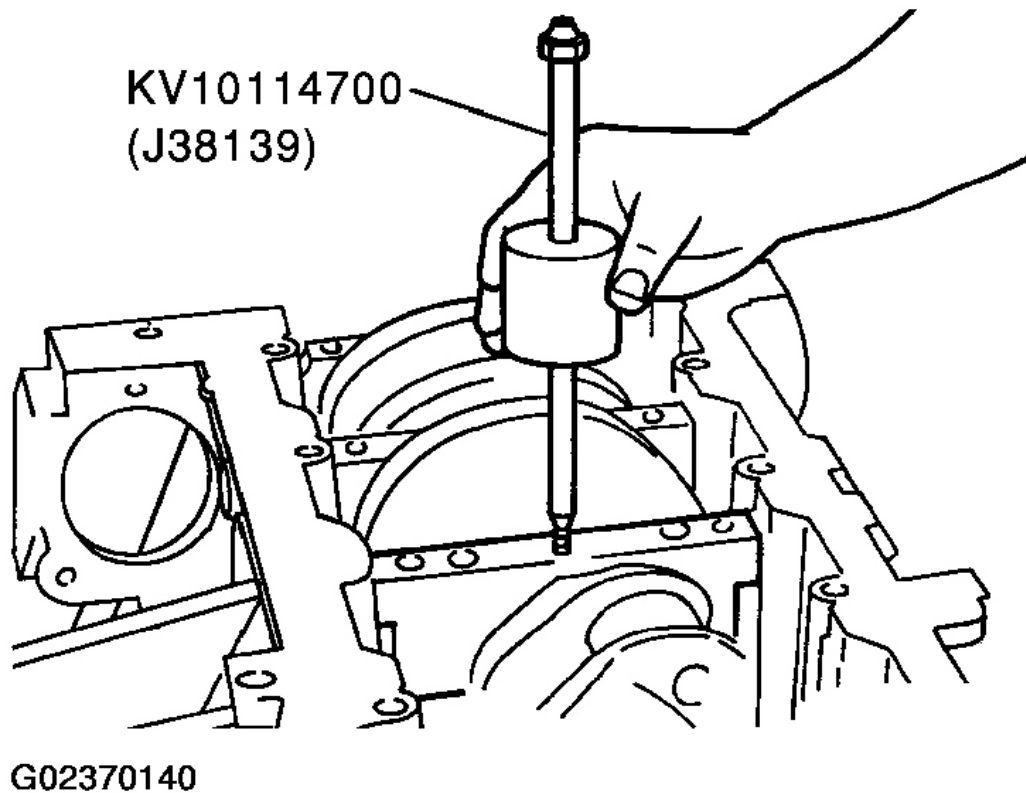


Fig. 187: Removing Main Bearing Cap
Courtesy of NISSAN MOTOR CO., U.S.A.

17. Remove crankshaft.
18. Remove main bearings and thrust bearings from cylinder block and main bearing caps.

CAUTION: When removing them, note the installation position. Keep them in the correct order.

19. If pilot converter must be removed, remove it from the rear end of crankshaft using the pilot bushing puller (SST).
 - Removal and installation without the engine stand is possible.

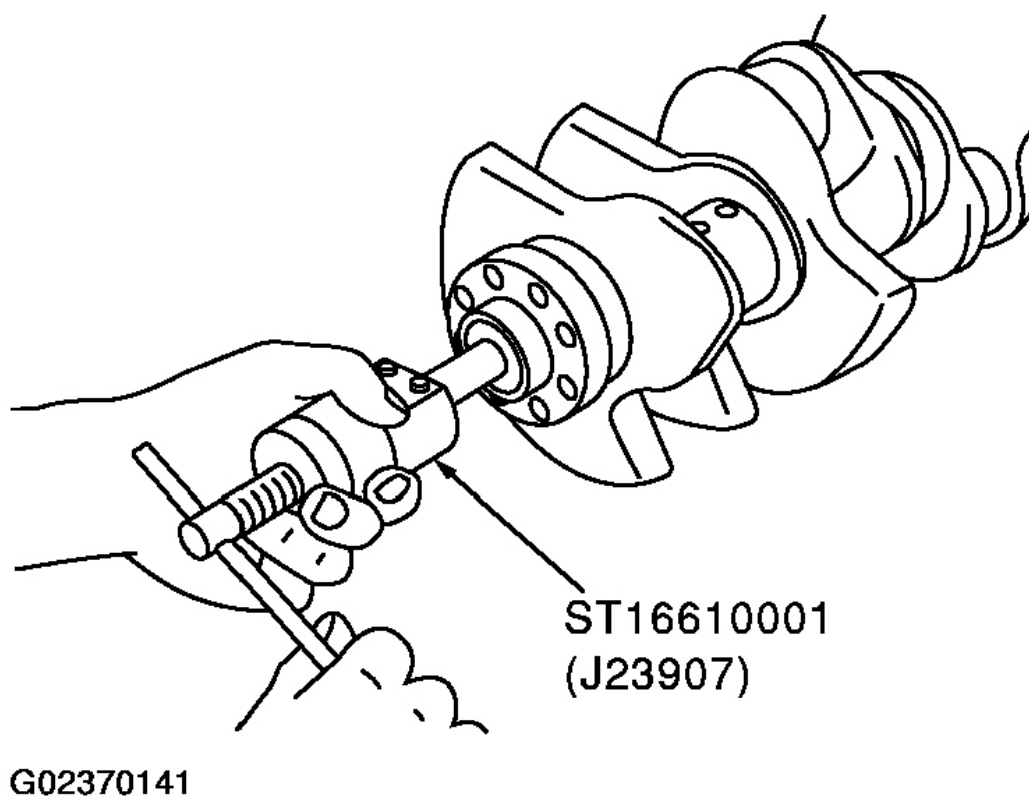


Fig. 188: [Removing Pilot Converter]
Courtesy of NISSAN MOTOR CO., U.S.A.

ASSEMBLY

1. Fully air-blow engine coolant and engine oil passages in cylinder block, the cylinder bore, and crankcase to remove any foreign material.


CAUTION: Use a goggles to protect your eye.

2. Install each plug to the cylinder block. (Only screwed-type plugs are shown in the figure.)
 - Apply sealant to the thread of each plug "A" and "D".

Use Genuine High Strength Locking Sealant or equivalent. Refer to "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS".

- Apply sealant to the thread of each plug "B" and "C". Use Anaerobic Liquid Gasket or equivalent. Refer to "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS".

- Replace copper washers with new ones.
- Tighten each plug as specified below.

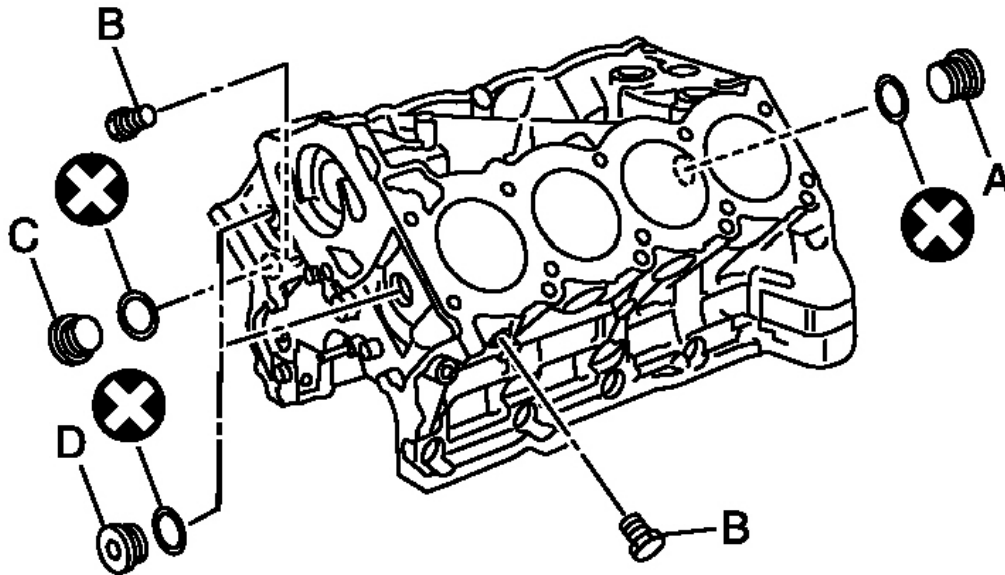

✕ : Always replace after every disassembly.

G02370142


Fig. 189: Installing Each Plug To Cylinder Block
Courtesy of NISSAN MOTOR CO., U.S.A.

EACH PLUG TIGHTENING TORQUE SPECIFICATION

Part	Washer	Tightening torque
A	Yes	53.9 N.m (5.5 kg-m, 40 ft-lb)
B	No	19.6 N.m (2.0 kg-m, 15 ft-lb)
C	Yes	62.7 N.m (6.4 kg-m, 46 ft-lb)
D	Yes	62.7 N.m (6.4 kg-m, 46 ft-lb)

3. Install main bearings and thrust bearings as follows:
 - a. Remove dust, dirt, and engine oil on the bearing mating surfaces of cylinder block and main bearing caps.
 - b. Install thrust bearings to the both sides of the No. 3 journal housing on cylinder block and main bearing caps

- Install thrust bearings with the engine oil groove facing crankshaft arm (outside).
- Install thrust bearings with a protrusion in the center on main bearing caps.

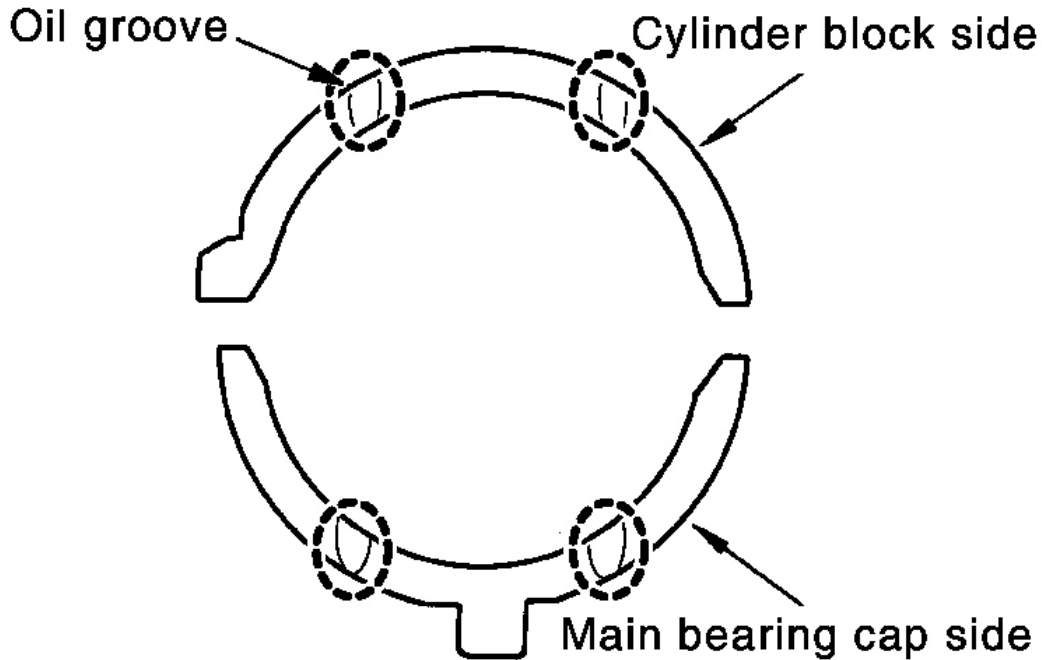

G02370143

Fig. 190: Identifying Oil Groove
Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Install main bearings paying attention to the direction.
- Install the one with oil holes onto cylinder block and the one without oil holes onto main bearing cap.
 - Before installing bearings, apply engine oil to the bearing surface (inside). Do not apply engine oil to the back surface, but thoroughly clean it.
 - When installing, align the bearing stopper to the notch.
 - Make sure that the oil holes on cylinder block and those on the corresponding bearing are aligned.


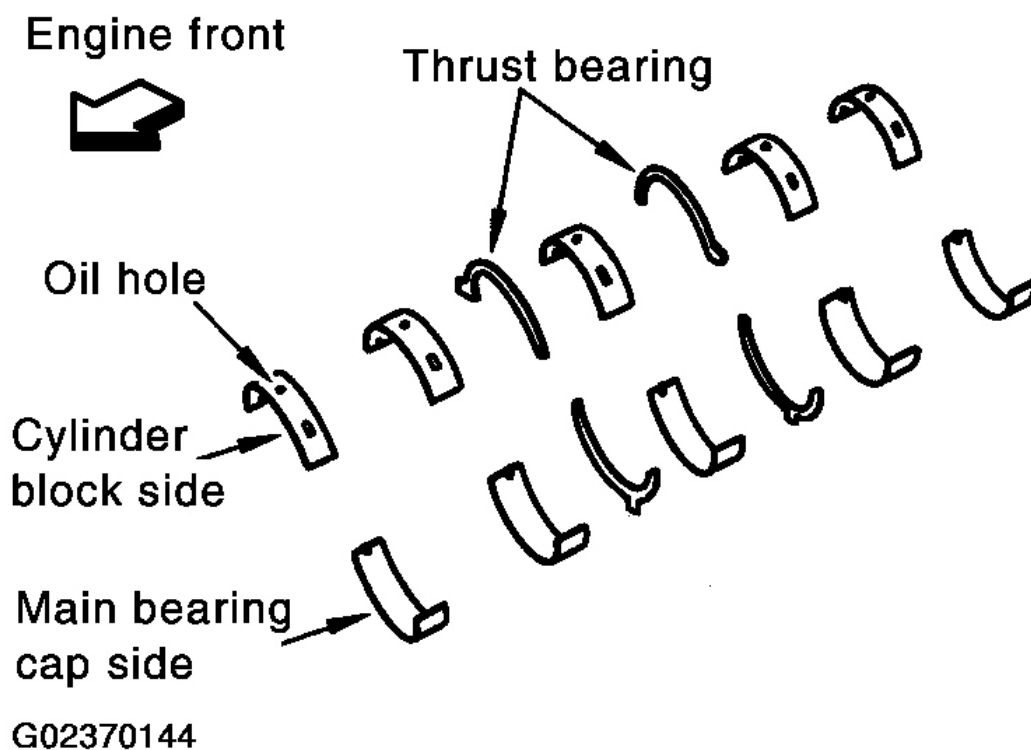


Fig. 191: Identifying Main Bearings

Courtesy of NISSAN MOTOR CO., U.S.A.


4. Install pilot converter to crankshaft.
 - Using a drift approximately 35 mm (1.38 in) in outer diameter, drive pilot converter until its front end contacts crankshaft.

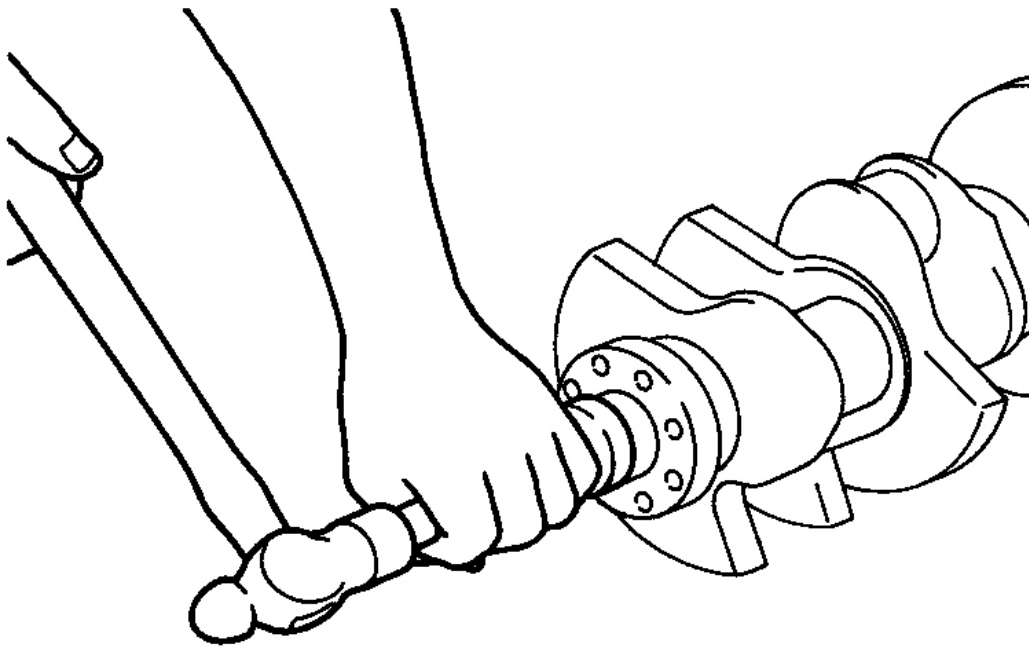

G02370145

Fig. 192: Installing Pilot Converter To Crankshaft
Courtesy of NISSAN MOTOR CO., U.S.A.

- Press-fit pilot converter with its chamfering side facing crankshaft as shown in the figure.
- It is acceptable to install it without the engine stand.

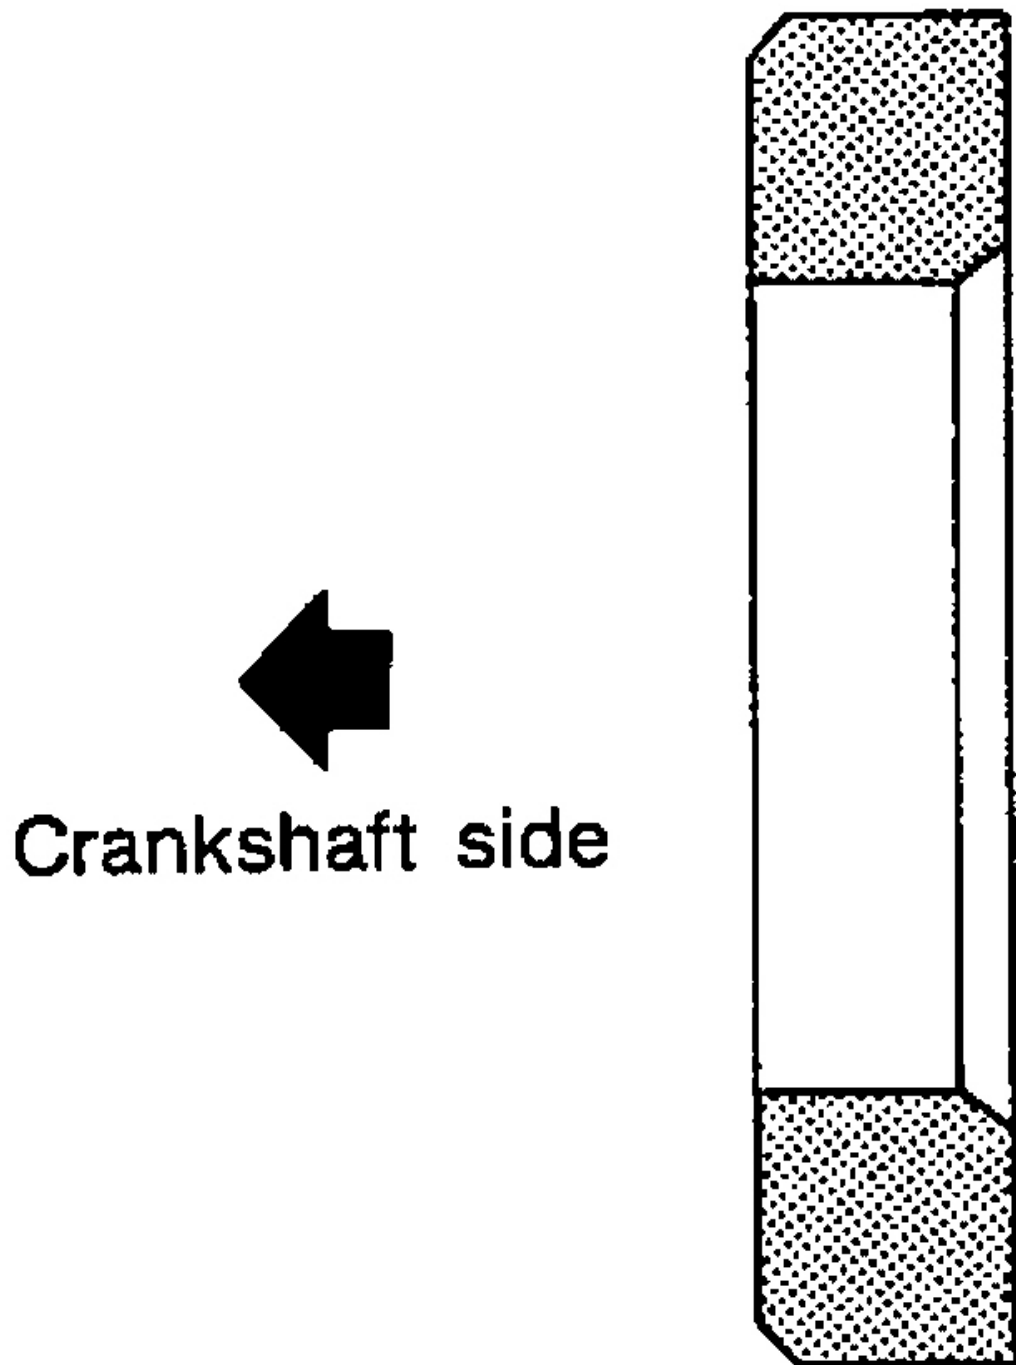


G02370146

Fig. 193: Identifying Pilot Converter Installation Position

Courtesy of NISSAN MOTOR CO., U.S.A.

5. Install crankshaft to cylinder block.
 - While turning crankshaft by hand, make sure that it turns smoothly.
6. Install main bearing caps.
 - Align the identification number to the journal position to install.
 - Install the upper side of the identification number facing the front of engine. (The number shall be read correctly from the rear of engine.)
 - Using a plastic hammer or similar tool, tap them lightly to seat them on the installation position.

NOTE: Main bearing cap cannot be replaced as a single parts, because it is machined together with cylinder block.

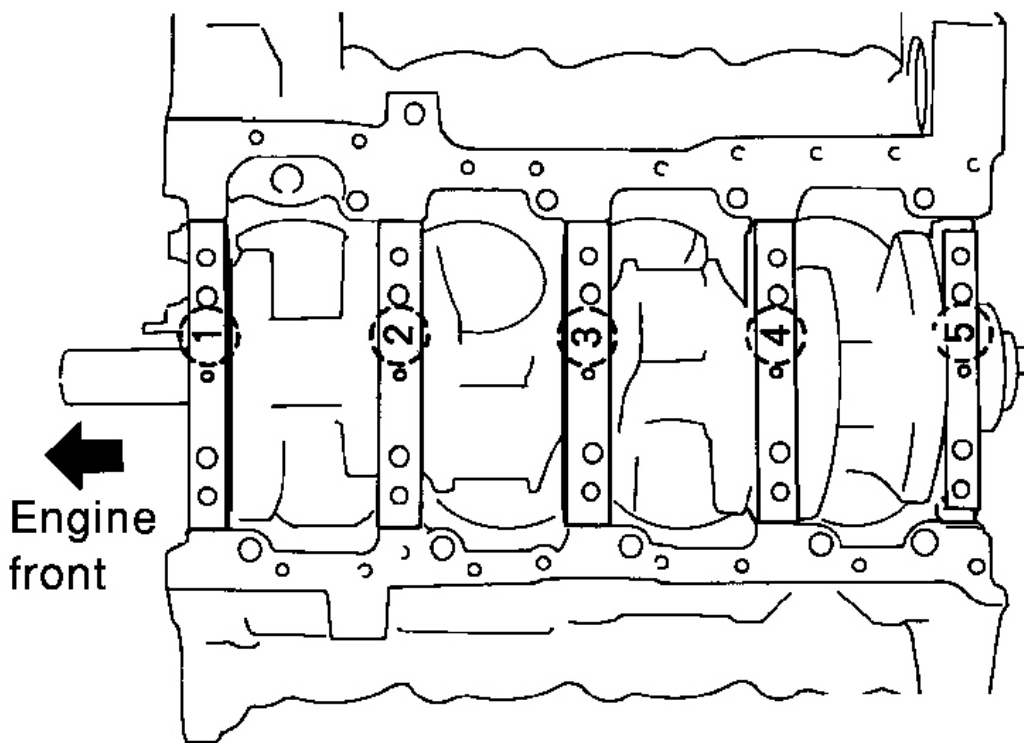


G02370147

Fig. 194: Identifying Identification Number
Courtesy of NISSAN MOTOR CO., U.S.A.

7. Install each main bearing cap bolt as follows:

- a. Apply new engine oil to threads and seating surface of main bearing cap bolts, and tighten all bolts temporarily.
- b. Tighten main bearing cap bolt (M12) in order of 1 to 10.
: 39.2 N.m (4.0 kg-m, 29 ft-lb)
- c. Tighten main bearing cap sub bolt (M9) in order of 11 to 20.
: 29.4 N.m (3.0 kg-m, 22 ft-lb)

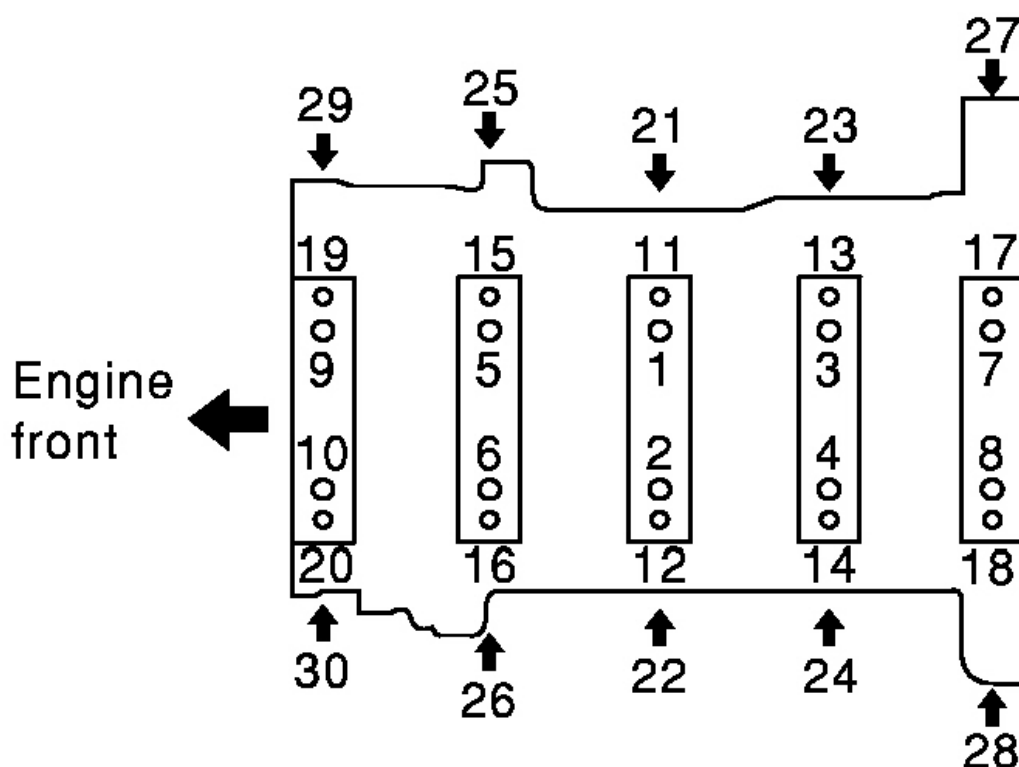


G02370148

Fig. 195: Tightening Main Bearing Cap Bolts
Courtesy of NISSAN MOTOR CO., U.S.A.

- d. Tighten main bearing cap bolt (M12) to 40 degrees clockwise in order of 1 to 10. (Angle tightening)

CAUTION: Use angle wrench (SST) to check tightening angle in step "d" and "e". Do not make judgment by visual inspection.


- e. Tighten main bearing cap sub bolt (M9) to 30 degrees clockwise in order of 11 to 20. (Angle tightening)

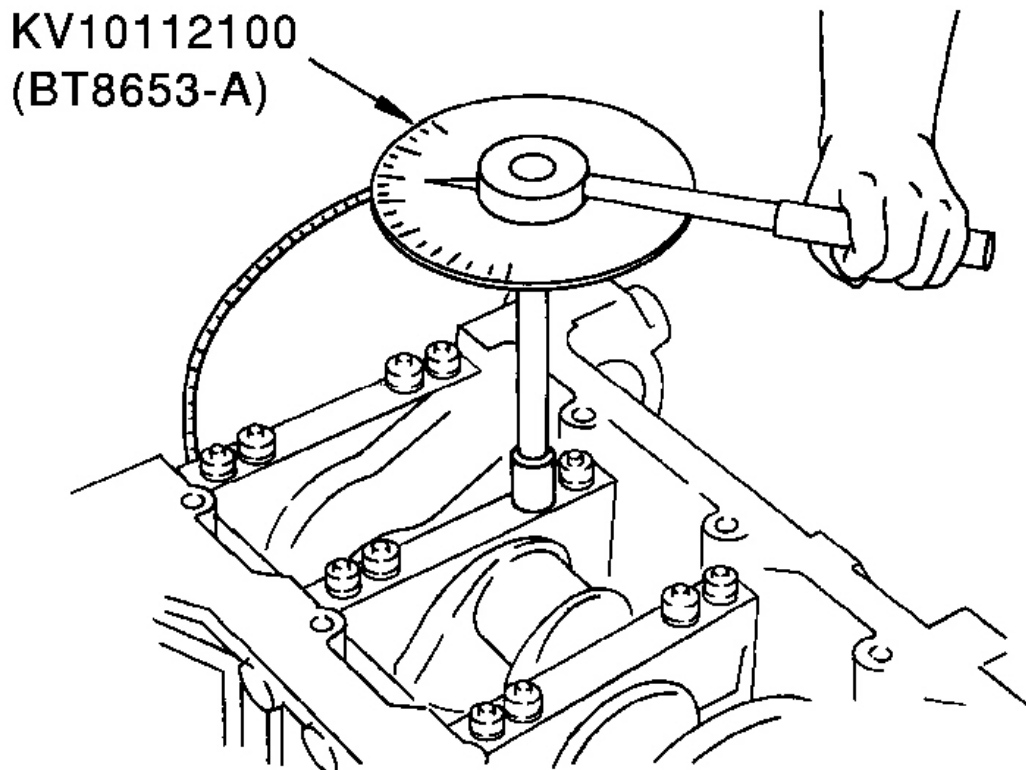

G02370149

Fig. 196: Checking Main Bearing Cap Bolts Tightening Angle
Courtesy of NISSAN MOTOR CO., U.S.A.


- f. Tighten side bolt (M10) in order of 21 to 30.
: 49.0 N.m (5.0 kg-m, 36 ft-lb)
- After installing main bearing cap bolts, make sure that crankshaft can be rotated smoothly.
 - Check the crankshaft end play. Refer to "**CRANKSHAFT END PLAY**".
- g. Install cover of cylinder block rear right side (next to the starter motor housing).
8. Install rear oil seal using the rear oil seal drift (commercial service tool).
- Tap until flattened with front edge of rear oil seal retainer. Do not damage or scratch outer circumference of oil seal.

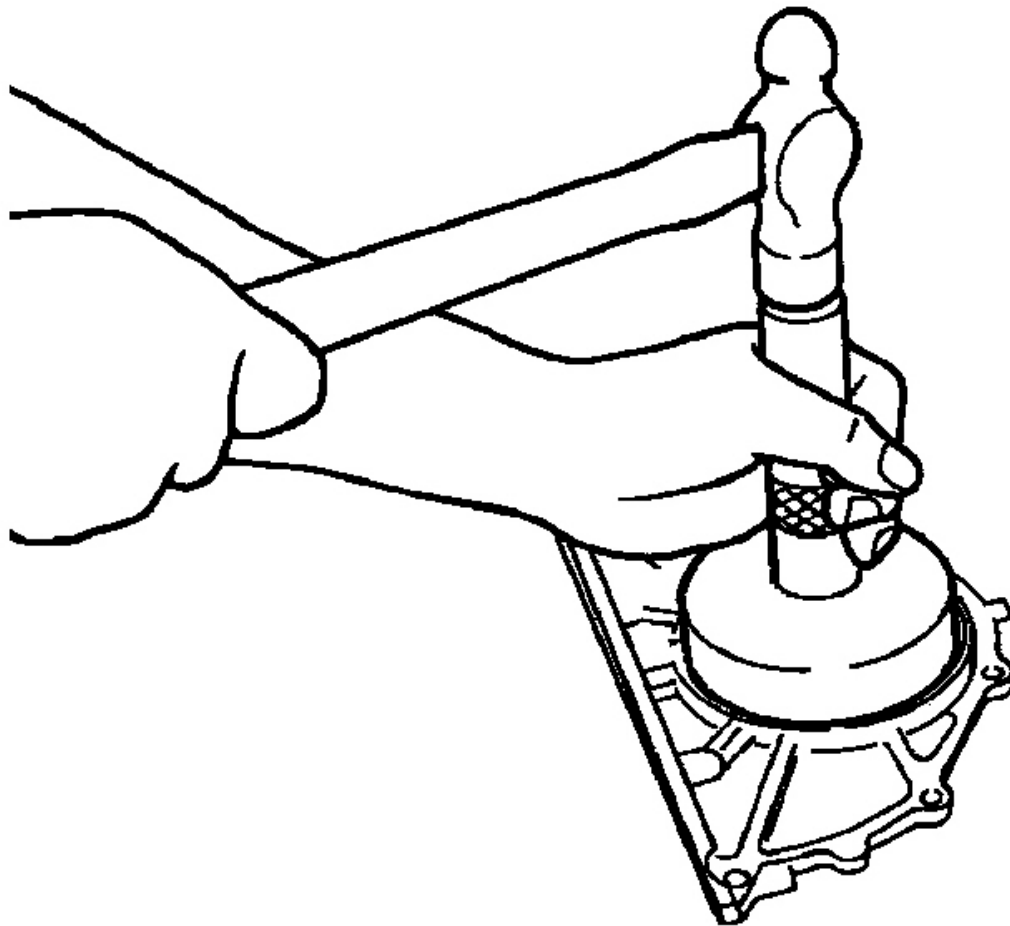

G02370150

Fig. 197: Installing Rear Oil Seal (1 Of 2)
Courtesy of NISSAN MOTOR CO., U.S.A.


- Install new rear oil seal in the direction shown in the figure.

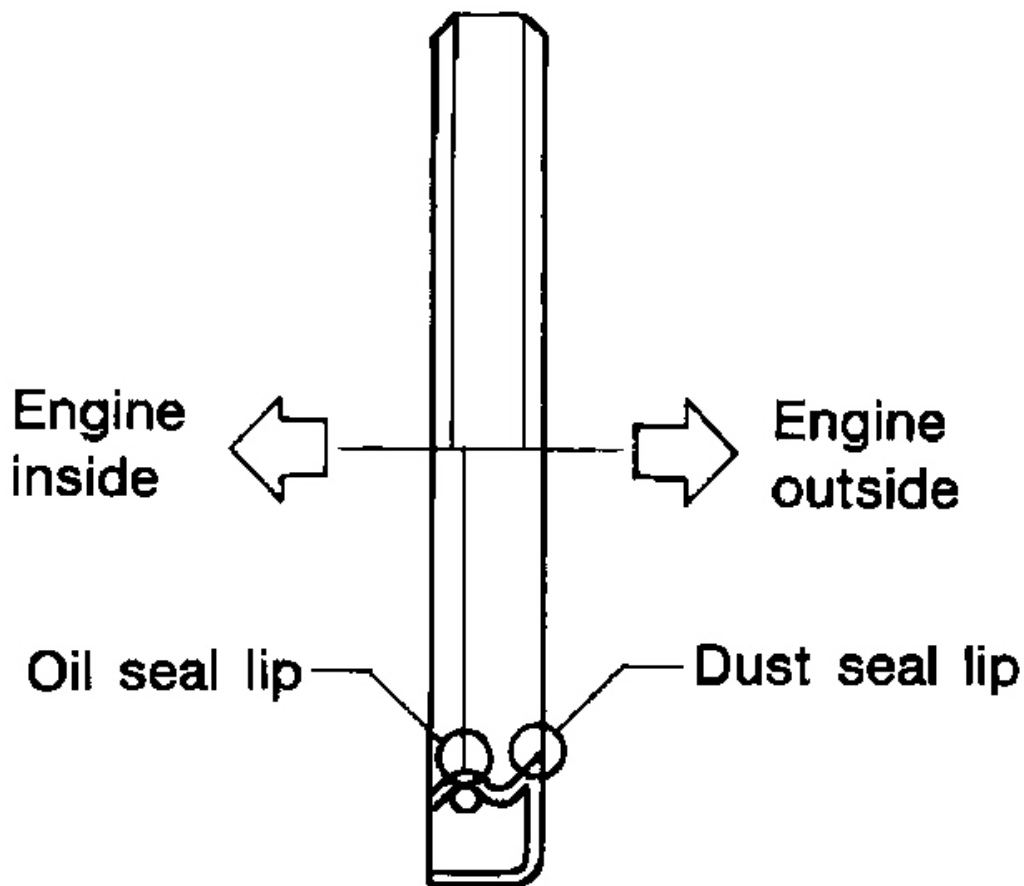

G02370151

Fig. 198: Installing Rear Oil Seal (2 Of 2)
Courtesy of NISSAN MOTOR CO., U.S.A.

9. Install rear oil seal retainer.
 - Apply liquid gasket thoroughly to rear oil seal retainer. Use **Genuine RTV Silicone Sealant or equivalent. Refer to "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS"**.
 - Apply new engine oil to both oil seal lip and dust seal lip. Do not touch.

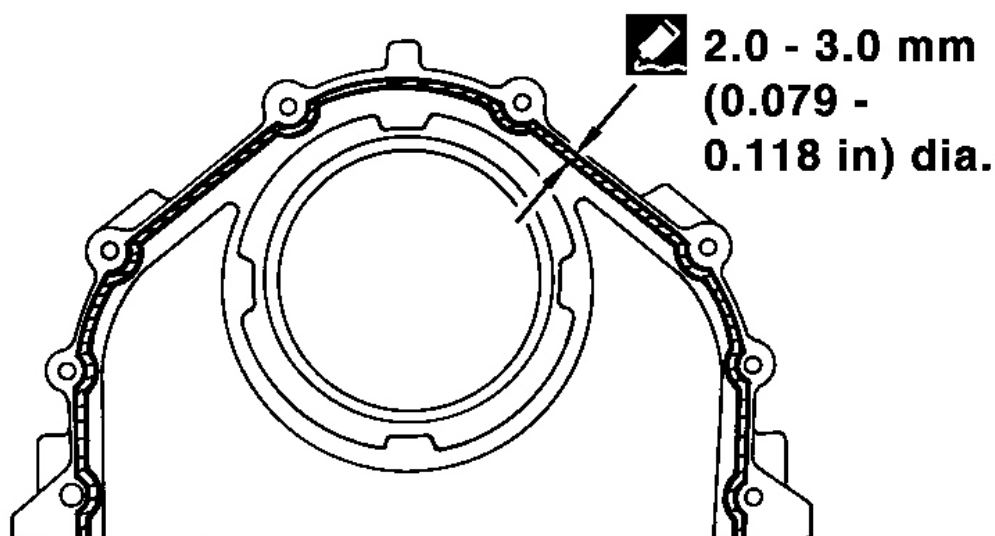


 : Apply Genuine RTV Silicone Sealant or equivalent. Refer to GI section.

G02370152

Fig. 199: Applying Liquid Gasket To Rear Oil Seal Retainer
Courtesy of NISSAN MOTOR CO., U.S.A.

10. Install piston to connecting rod.
 - a. Using a snap ring pliers, install new snap ring to the grooves of the piston rear side.
 - Insert it fully into groove to install.
 - b. Install piston to connecting rod.
 - Using the industrial use drier or equivalent, heat the piston until piston pin can be pushed in by hand without excess force [approx. 60 to 70 C° (140 to 158 °F)]. From the front to the rear, insert piston pin into piston and connecting rod.
 - Assemble so that the front mark on the piston head and the oil holes and the cylinder No. on connecting rod are positioned as shown in the figure.
 - c. Install snap rings to the front of piston.
 - Insert it fully into groove to install.
 - After installing, make sure that connecting rod moves smoothly.

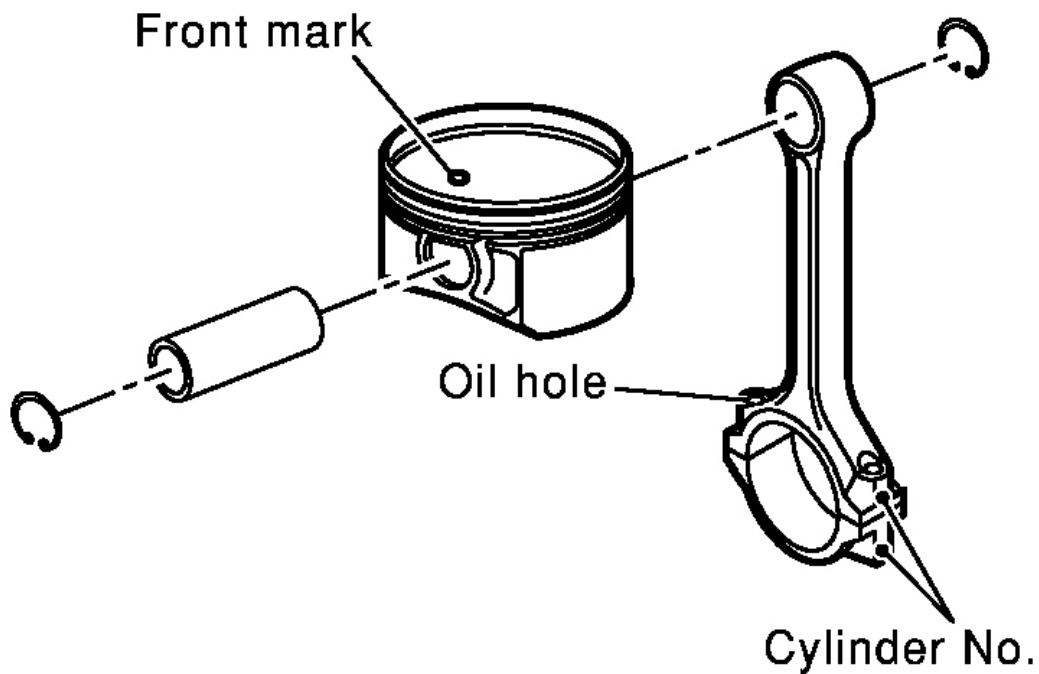


G02370153

Fig. 200: Installing Piston To Connecting Rod
Courtesy of NISSAN MOTOR CO., U.S.A.

11. Using the piston ring expander (commercial service tool), install piston rings.

CAUTION:

- When installing piston rings, be careful not to damage piston.
- Be careful not to damage piston rings by expending them excessively.

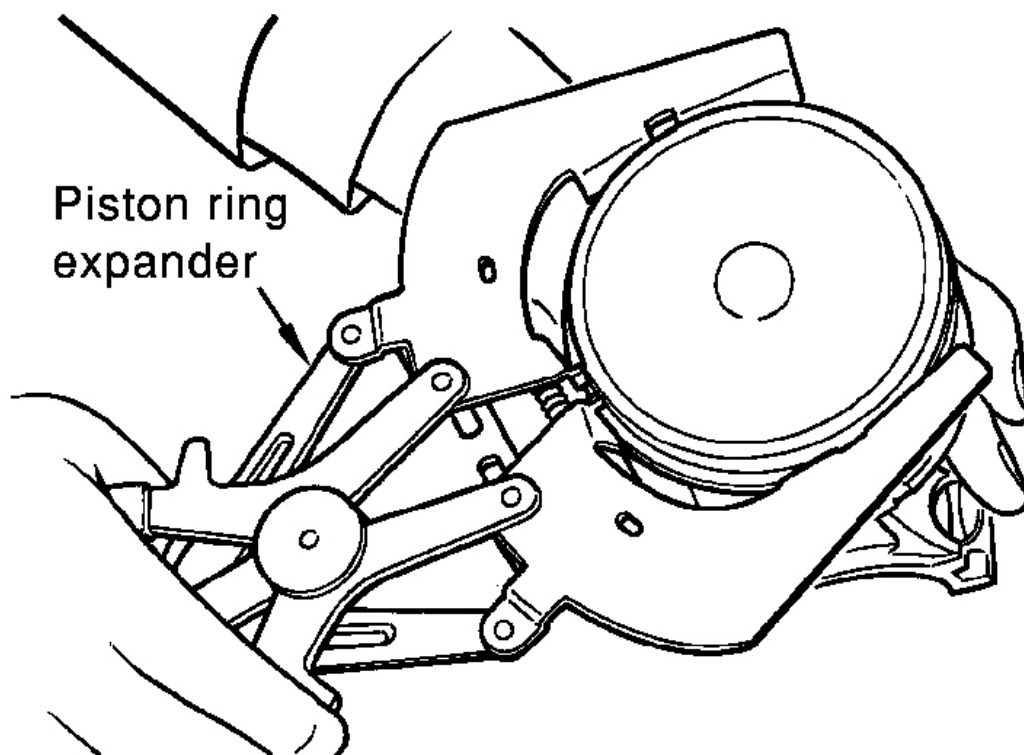

G02370154


Fig. 201: Installing Piston Rings
Courtesy of NISSAN MOTOR CO., U.S.A.

- Position each ring with the gap as shown in the figure, referring to the piston front mark.
- Install top ring and second ring with the stamped surface facing upward.

Stamped mark

Top ring: R

Second ring: 2R

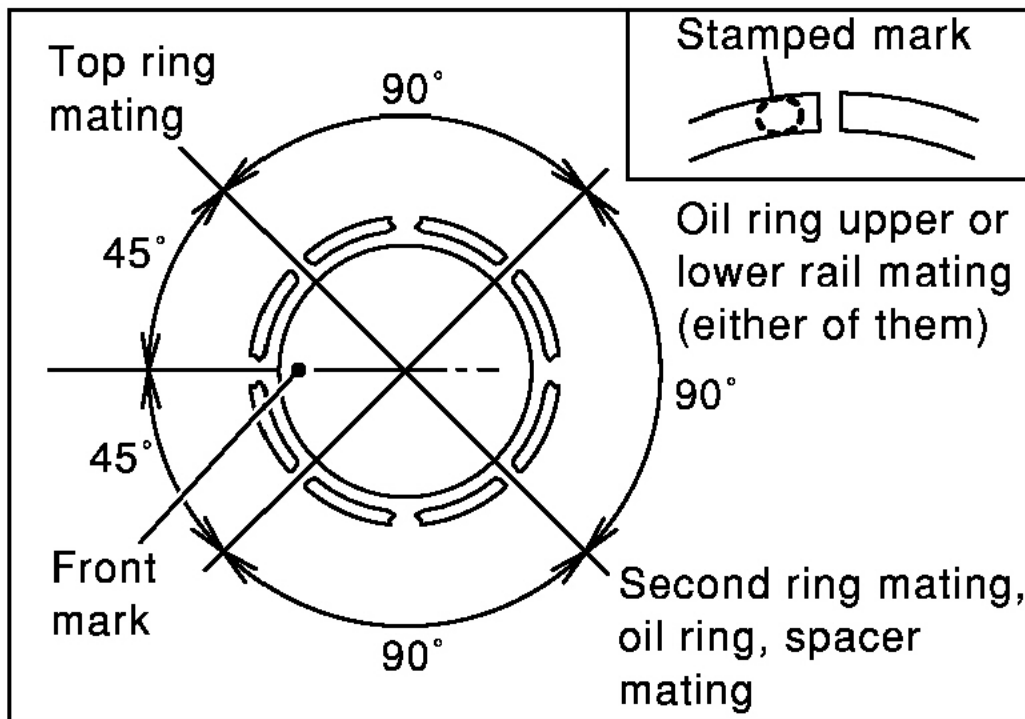


G02370155

Fig. 202: Identifying Piston Ring Gap

Courtesy of NISSAN MOTOR CO., U.S.A.

12. Install connecting rod bearings to connecting rod and connecting rod cap.
 - When installing connecting rod bearings, apply engine oil to the bearing surface (inside). Do not apply engine oil to the back surface, but thoroughly clean it.
 - When installing, align the connecting rod bearing stopper protrusion with the cutout of connecting rod to install.
 - Check the oil holes on connecting rod and those on the corresponding bearing are aligned.

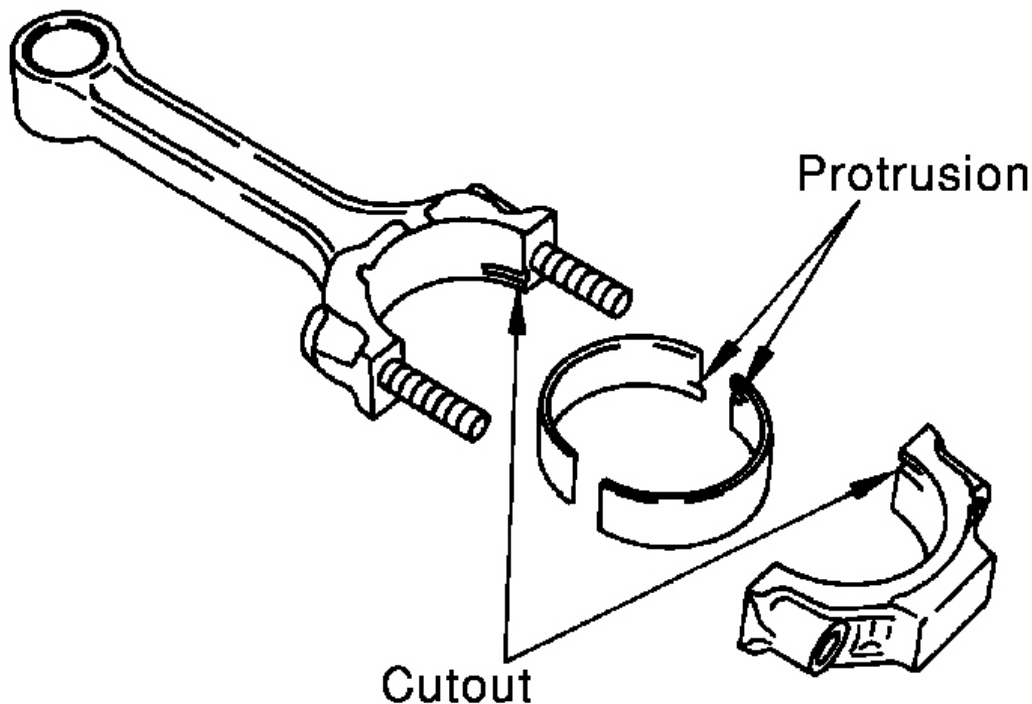


G02370156

Fig. 203: Installing Connecting Rod Bearings To Connecting Rod And Connecting Rod Cap
Courtesy of NISSAN MOTOR CO., U.S.A.

13. Install piston and connecting rod assembly to crankshaft.
 - Position crankshaft pin corresponding to connecting rod to be installed onto the bottom dead center.
 - Apply engine oil sufficiently to the cylinder bore, piston, and crankshaft pin.
 - Match the cylinder position with the cylinder No. on connecting rod to install.
 - Using the piston ring compressor [SST: EM03470000 (J-8037)], install piston with the front mark on the piston head facing the front of engine.

CAUTION: Be careful not to damage the cylinder wall and crankshaft pin, resulting from an interference of connecting rod big end.

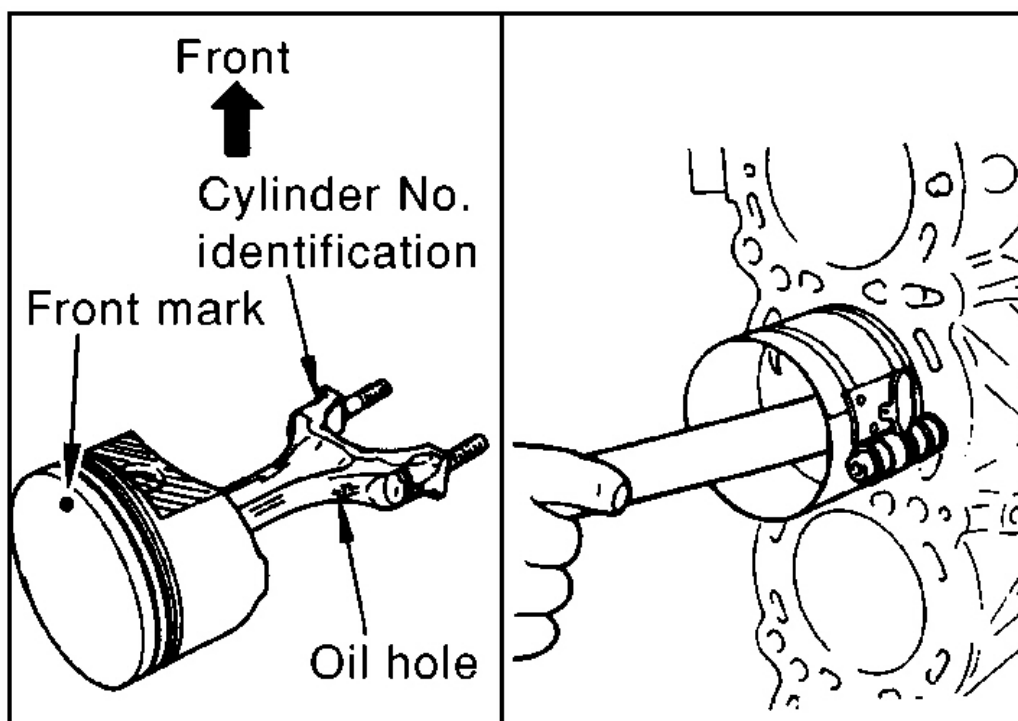


G02370157

Fig. 204: Installing Piston And Connecting Rod Assembly To Crankshaft
Courtesy of NISSAN MOTOR CO., U.S.A.

14. Install connecting rod cap.

- Match the stamped cylinder number marks on connecting rod with those on connecting rod cap to install.

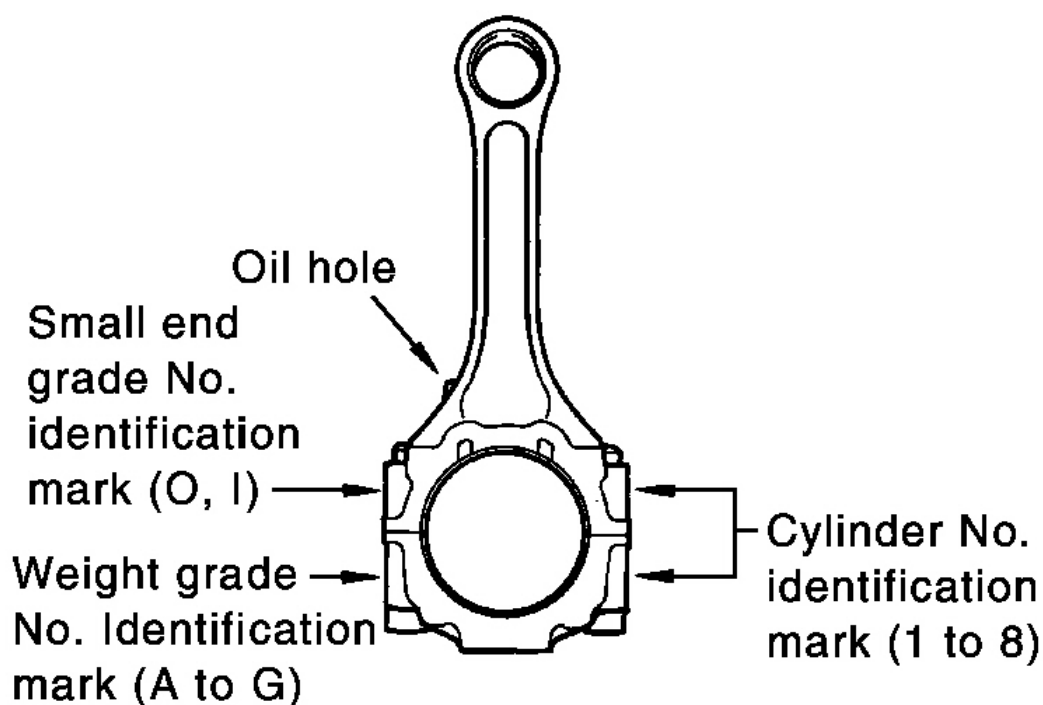

G02370158

Fig. 205: Installing Connecting Rod Cap
Courtesy of NISSAN MOTOR CO., U.S.A.

15. Tighten the connecting rod nuts as follows:
 - a. Apply engine oil to the threads and seats of the connecting rod bolts and nuts.
 - b. Tighten connecting rod nuts.
: 14.7 N.m (1.5 kg-m, 11 ft-lb)
 - c. Put mating (with paint) on each nut and connecting rod cap, all in the same direction (when using a protractor).
 - d. Then all nuts 60 degrees clockwise (angle tightening).

CAUTION: Always use either the angle wrench (SST) or protractor. Avoid tightening based on visual check alone.

- After tightening the nuts, make sure that crankshaft rotates smoothly.
- Check the connecting rod side clearance. Refer to "CONNECTING ROD SIDE CLEARANCE".

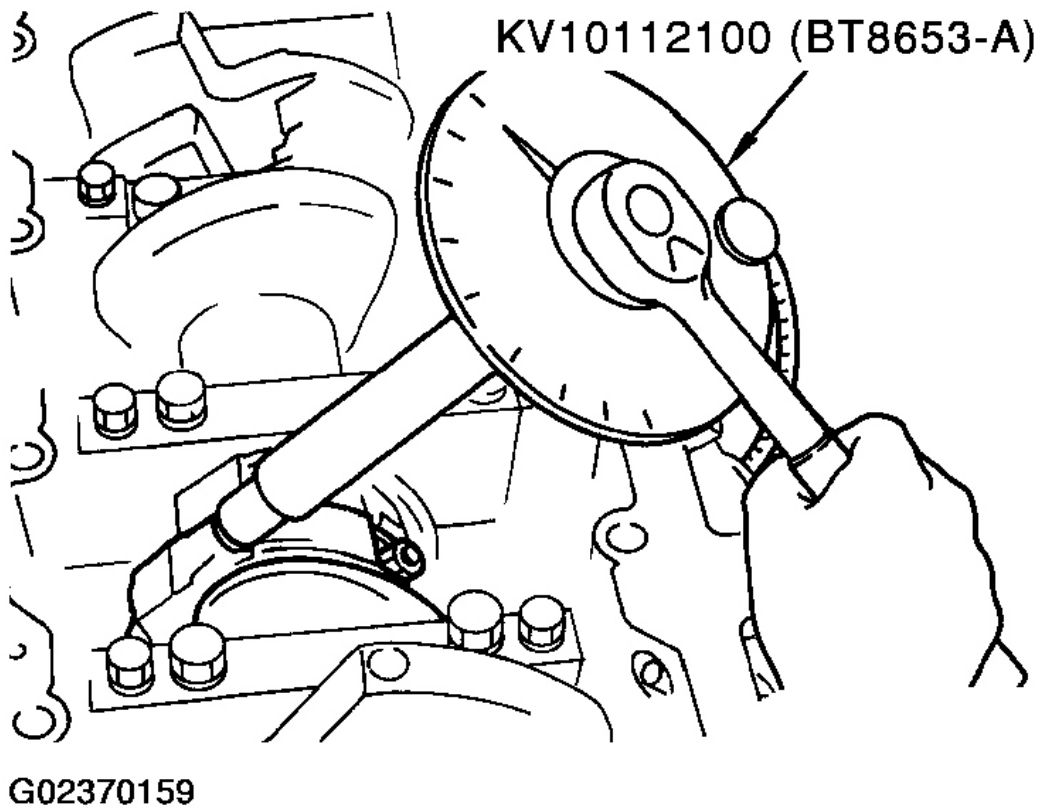


Fig. 206: Checking Connecting Rod Bolts Tightening Angle
Courtesy of NISSAN MOTOR CO., U.S.A.

16. Install knock sensor.

- Install it with its connector facing the rear of engine.
- Install the sub-harness with its shorter branch line to the right bank.

CAUTION:

- Do not tighten mounting bolts while holding connector.
- If any impact by dropping is applied to knock sensor, replace it with new one.

NOTE:

- Make sure that there is no foreign material on the cylinder block mating surface and the back surface of knock sensor.
- Make sure that knock sensor does not interfere with other parts.


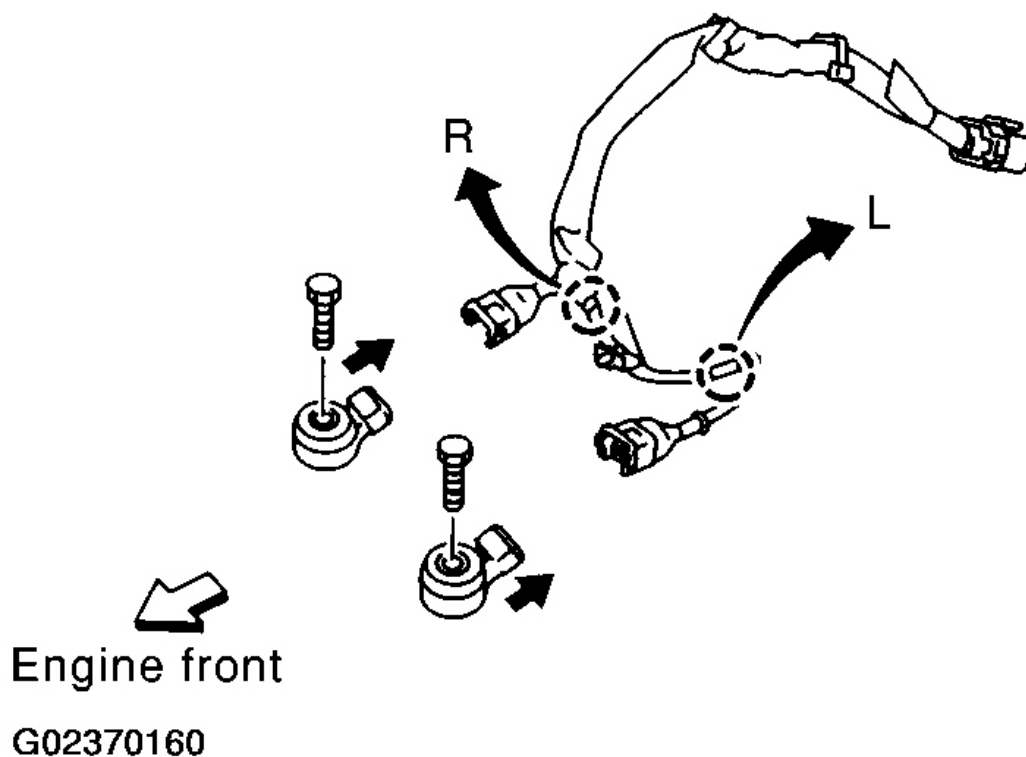


Fig. 207: Installing Knock Sensor
Courtesy of NISSAN MOTOR CO., U.S.A.

17. Install the following in the reverse order of removal.
18. Remove engine assembly from engine stand.
19. Install drive plate.
 - Align guide pin of crankshaft rear end with pin holes of each parts to install.

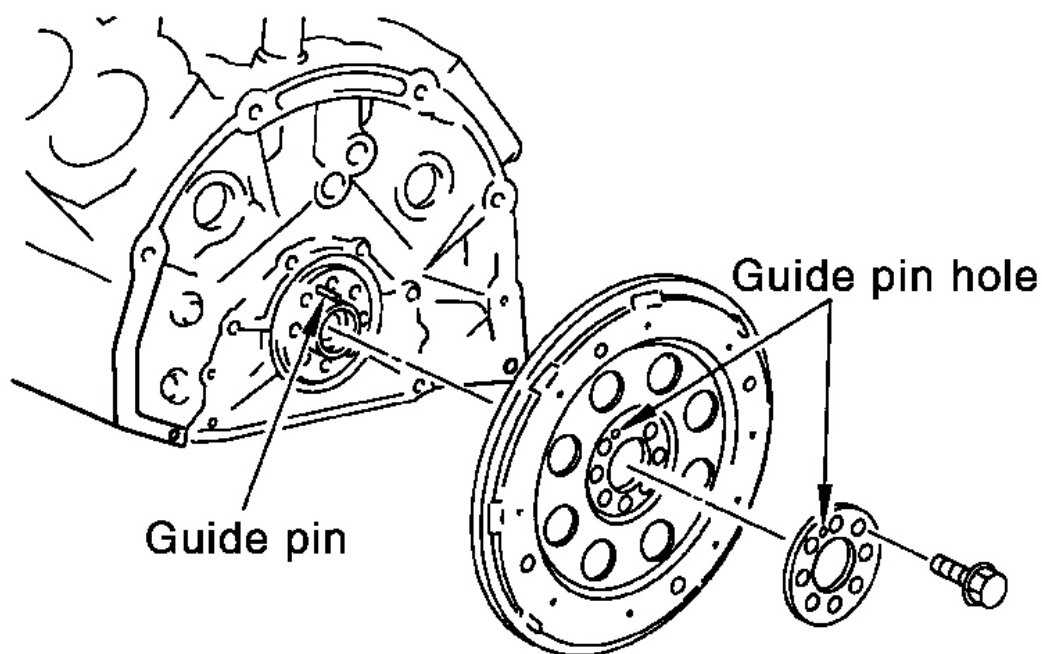


G02370161

Fig. 208: Installing Drive Plate

Courtesy of NISSAN MOTOR CO., U.S.A.

- Install drive plate, reinforcement plate and pilot converter (if not installed in step 4) as shown in the figure.
- Holding ring gear with the ring gear stopper (SST: J-45476).
- Using drift of 33 mm (1.30 in) dia, push pilot converter into the end.
- Face pilot converter chamfered or rounded edge side to crankshaft.

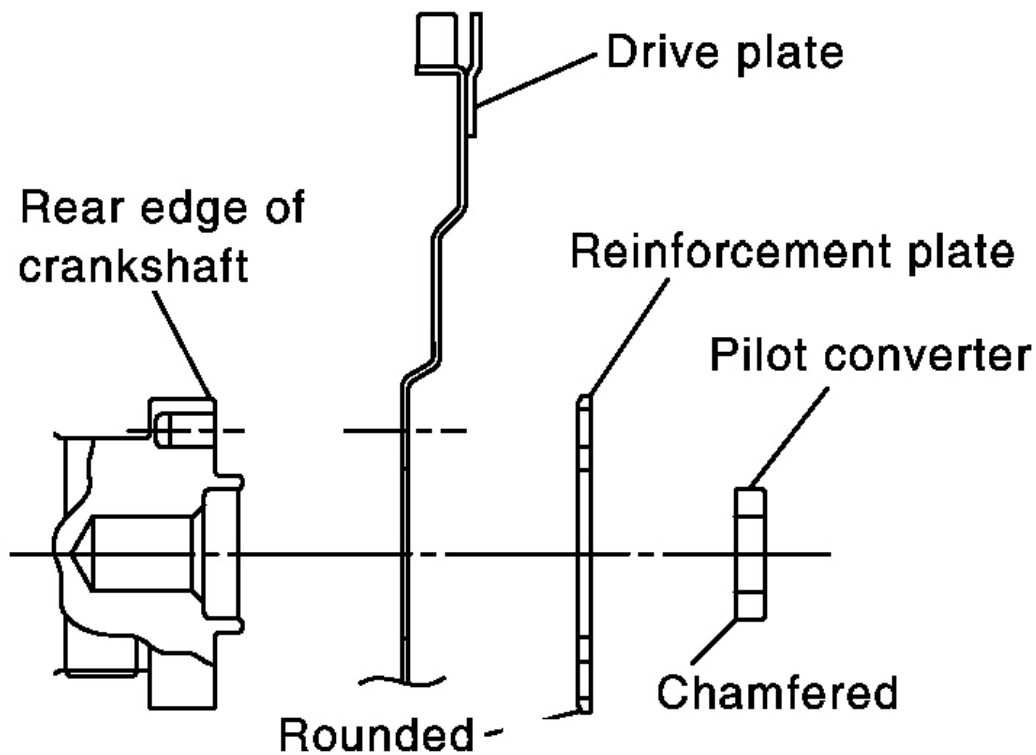

G02370162

Fig. 209: Installing Reinforcement Plate And Pilot Converter
 Courtesy of NISSAN MOTOR CO., U.S.A.

HOW TO SELECT PISTON AND BEARING

DESCRIPTION

PISTON AND BEARING SELECTION DESCRIPTION

Connecting points	Connecting parts	Selection items	Selection methods
Between cylinder block to crankshaft	Main bearing	Main bearing grade (bearing thickness)	Determined by match of cylinder block bearing housing grade (inner diameter of housing) and crankshaft main journal grade (outer diameter of main journal)
Between crankshaft to connecting rod	Connecting rod bearing	Connecting rod bearing grade (bearing thickness)	Connecting rod bearing grade = crankshaft pin journal (outer diameter of pin journal). No grade exists for inner diameter of connecting rod large end.

2005 Infiniti Q45

2005 ENGINE Engine Mechanical - Q45

Between cylinder block to piston	Piston and piston pin assembly. The piston is available together with piston pin as an assembly.	Piston grade (piston skirt diameter)	Piston grade = cylinder bore grade (inner diameter of bore)
(1) Between piston to connecting rod	-	-	-
(1) For the service parts, the grade for fitting cannot be selected between a piston pin and a connecting rod. (Only "0" grade is available.) The information at the shipment from the plant is described as a reference.			


- The identification grade stamped on each part is the grade for the dimension measured in new condition. This grade cannot apply to reused parts.
- For reused or repaired parts, measure the dimension accurately. Determine the grade by comparing the measurement with the values of each selection table.
- For details of the measurement method of each part, the reuse standards, and the selection method of the selective fitting parts, refer to the text.

HOW TO SELECT PISTON

When New Cylinder Block is Used:

Check the cylinder bore grade ("1", "2" or "3") on the rear upper side between cylinder block banks, and select piston of the same grade.

NOTE: **Piston is available with piston pin as a set for the service part. (Only "0" grade piston pin is available.)**

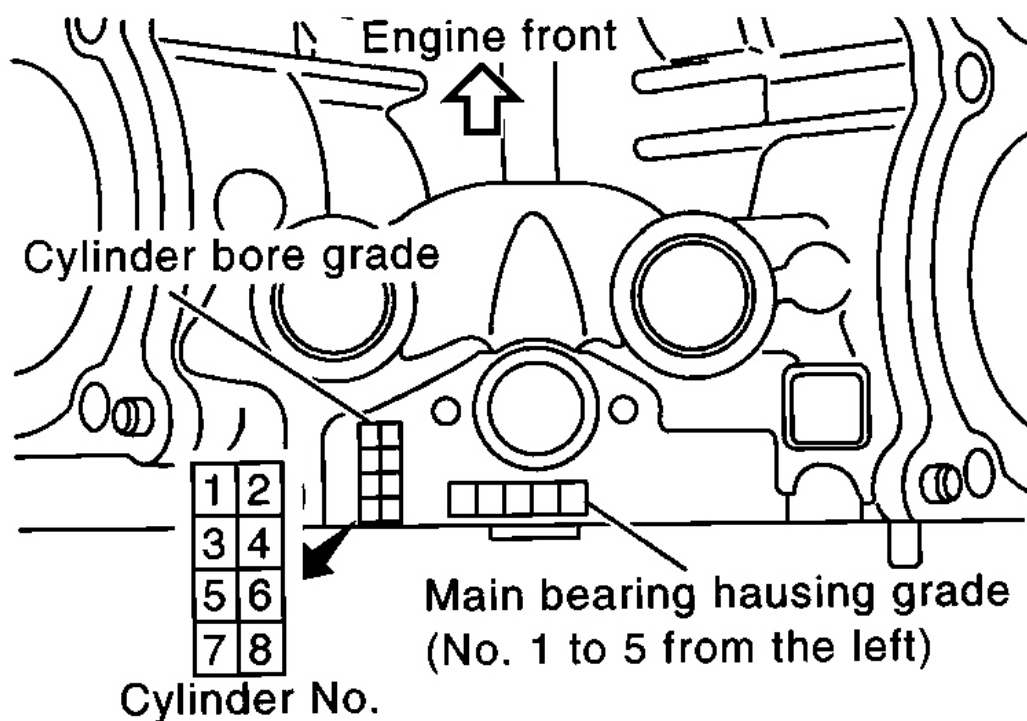

G02370163

Fig. 210: Identifying Cylinder Bore Grade On Rear Upper Side Between Cylinder Block Banks
Courtesy of NISSAN MOTOR CO., U.S.A.

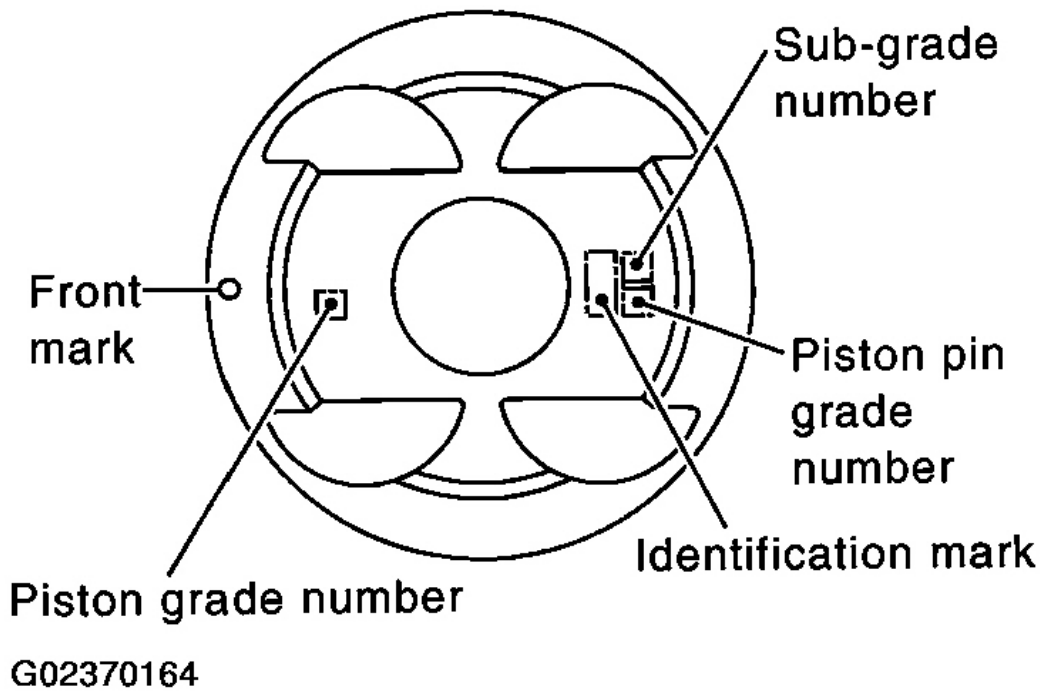


Fig. 211: Identifying Piston Grade Number And Piston Pin Grade Number
 Courtesy of NISSAN MOTOR CO., U.S.A.

When Cylinder Block is Reused:

1. Measure the cylinder block bore inner diameter. Refer to "**CYLINDER BORE INNER DIAMETER**".
2. Determine the bore grade by comparing the measurement with the values under the "Cylinder bore inner diameter" of the "Piston Selection Table". Select piston of the same grade.

Piston Selection Table

PISTON SELECTION

Grade number (Mark)	1	2 (or no mark)	3
Cylinder bore inner diameter	93.000-93.010 (3.6614-3.6618)	93.010-93.020 (3.6618-3.6622)	93.020-93.030 (3.6622-3.6626)
Piston skirt diameter	92.980-92.990 (3.6606-3.6610)	92.990-93.000 (3.6610-3.6614)	93.000-93.010 (3.6614-3.6618)

NOTE:

- Piston is available together with piston pin as an assembly.
- Piston pin (piston pin hole) grade is provided only for the parts installed at the plant. For the service parts, no grades can be selected (Only "0" grade

is available.).


- No second grade mark is available on piston.

HOW TO SELECT CONNECTING ROD BEARING

When New Connecting Rod and Crankshaft are Used:

Check pin journal diameter grade ("0", "1" or "2") on front of crankshaft, and select connecting rod bearing of the same grade.

NOTE: There is no grading for connecting rod big end.

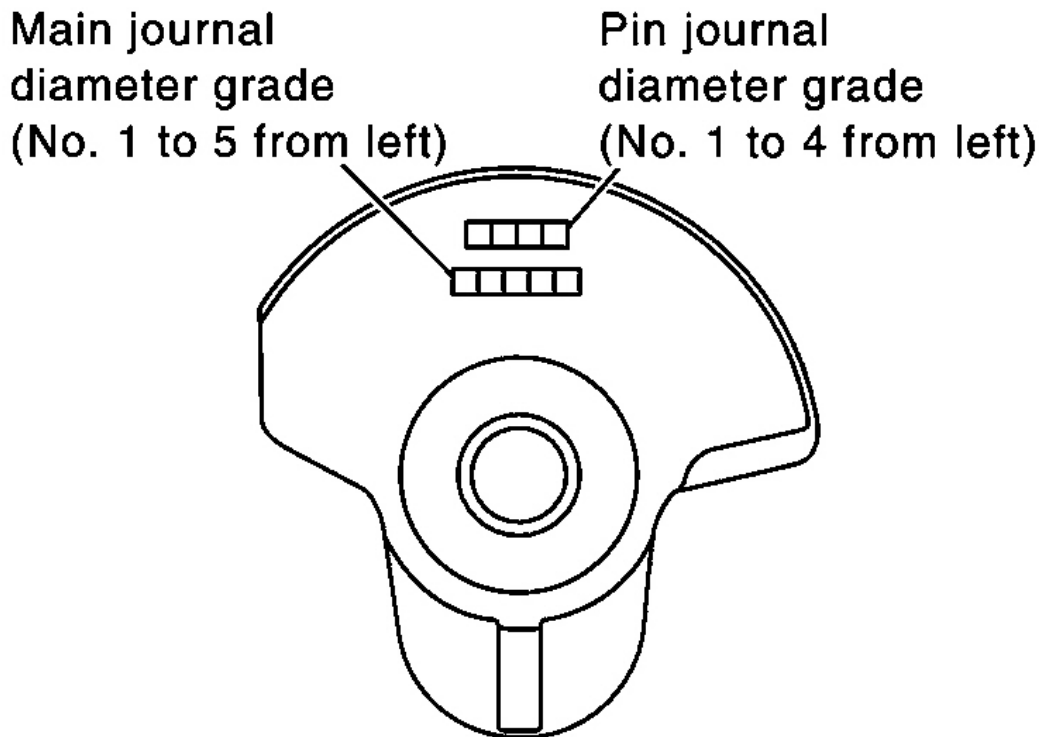

G02370165

Fig. 212: Identifying Pin Journal Diameter Grade On Front Of Crankshaft
Courtesy of NISSAN MOTOR CO., U.S.A.

When Crankshaft and Connecting Rod are Reused:

1. Measure the connecting rod big end diameter. Refer to "**CONNECTING ROD BIG END DIAMETER**".

2. Make sure that the connecting rod big end diameter is within the standard value.
3. Measure the crankshaft pin journal diameter. Refer to "**CRANKSHAFT PIN JOURNAL DIAMETER**".
4. Determine the grade of crankshaft pin diameter grade by corresponding to the measured dimension in "Crankshaft pin journal diameter" column of "Connecting Rod Bearing Selection Table".
5. Select connecting rod bearing of the same grade.

Connecting Rod Bearing Selection Table

CONNECTING ROD BEARING SELECTION AND CRANKSHAFT PIN JOURNAL DIAMETER SPECIFICATION

Unit: mm (in)	
Connecting rod big end diameter	55.000 - 55.013 (2.1654 - 2.1659)

CRANKSHAFT PIN JOURNAL GRADE

Unit: mm (in)				
Crankshaft pin journal diameter	Grade (Mark)	Dimension (Bearing thickness range)	Bearing grade No.	Color
51.968 - 51.974 (2.0460 - 2.0462)	0	1.500 - 1.503 (0.0591 - 0.0592)	STD 0	No color
51.962 - 51.968 (2.0457 - 2.0460)	1	1.503 - 1.506 (0.0592 - 0.0593)	STD 1	Brown
51.956 - 51.962 (2.0455 - 2.0457)	2	1.506 - 1.509 (0.0593 - 0.0594)	STD 2	Green

Undersize Bearings Usage Guide


- When the specified oil clearance is not obtained with standard size connecting rod bearings, use undersize (US) bearings.
- When using undersize bearings, measure the connecting rod bearing inner diameters with bearings installed, and grind crankshaft pin so that the oil clearance satisfies the standard.

Bearing undersize table

BEARING UNDERSIZE THICKNESS SPECIFICATION

Unit: mm (in)	
Size	Thickness
US 0.25 (0.0098)	1.626 - 1.634 (0.0640 - 0.0643)

CAUTION: In grinding crankshaft pin journal to use undersize bearings, do not damage the fillet R [1.5 mm (0.059 in)]

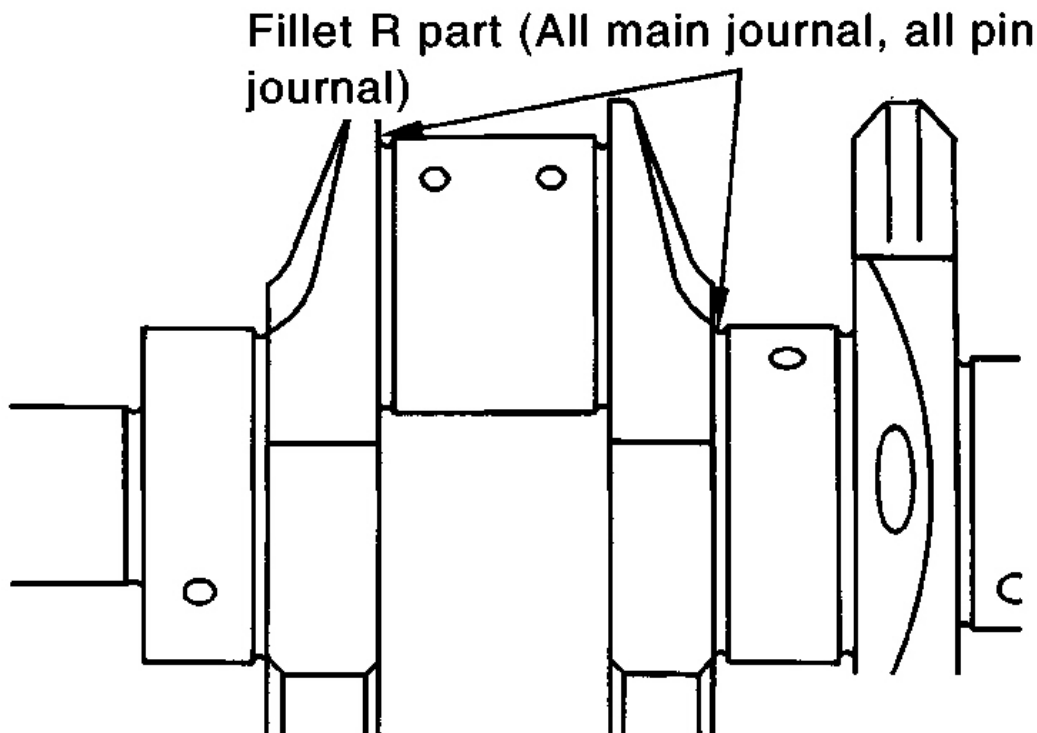


G02370166

Fig. 213: Identifying Crankshaft Pin Journal
Courtesy of NISSAN MOTOR CO., U.S.A.

HOW TO SELECT MAIN BEARING

When New Cylinder Block and Crankshaft are Used:

1. "Main Bearings Selection Table" rows correspond to main bearing housing grade on rear upper side between cylinder block banks.

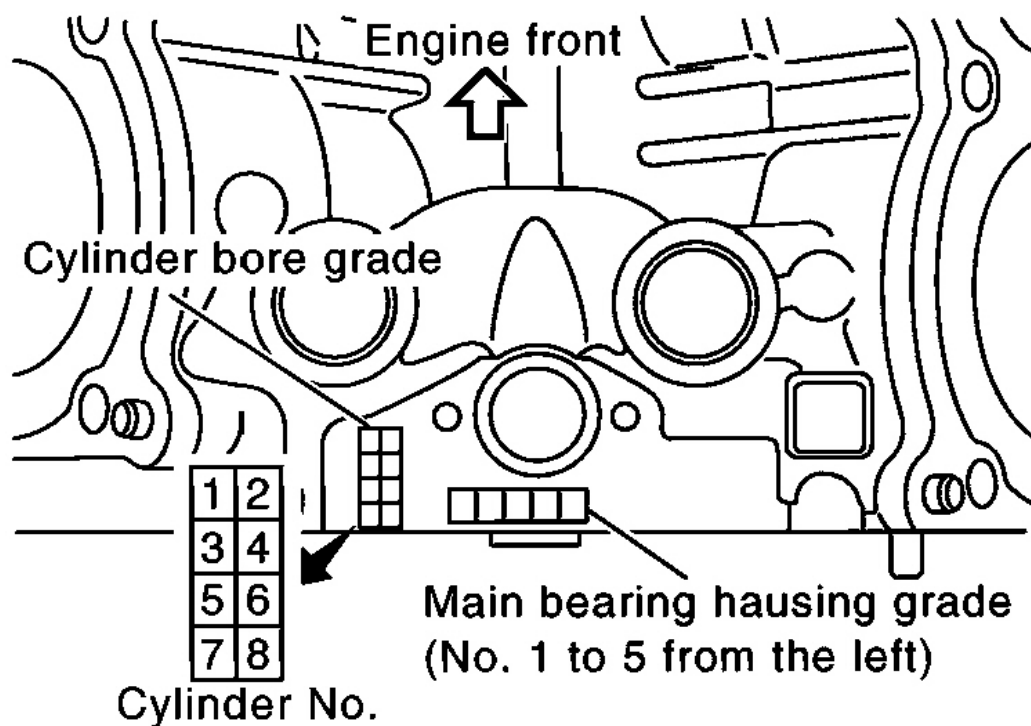


G02370167

Fig. 214: Identifying Cylinder Bore Grade And Main Bearing Housing Grade
Courtesy of NISSAN MOTOR CO., U.S.A.

2. "Main Bearings Selection Table" columns correspond to main journal diameter grade on front side of crankshaft.

Main journal
diameter grade
(No. 1 to 5 from left)

Pin journal
diameter grade
(No. 1 to 4 from left)

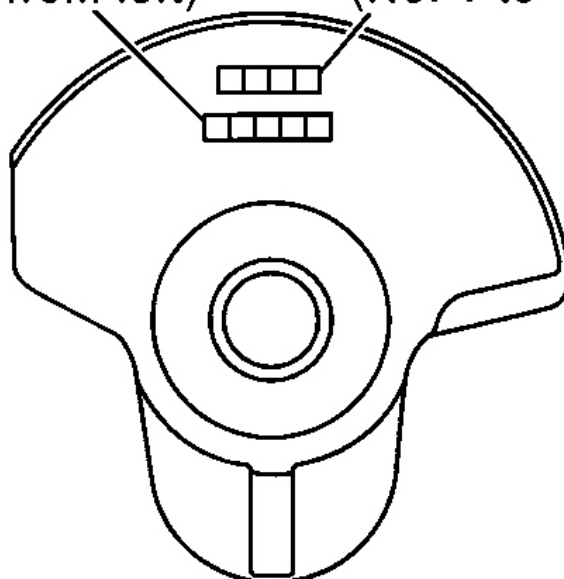

G02370168

Fig. 215: Identifying Main Journal Diameter Grade On Front Side Of Crankshaft
Courtesy of NISSAN MOTOR CO., U.S.A.

3. Select main bearing grade at the point where selected row and column meet in "Main Bearings Selection Table".

CAUTION:

- Initial clearance for No. 1, 5 journal and No. 2, 3, 4 journal is different. Use two different selection table for each part.
- No. 1, 5 journal and No. 2, 3, 4 journal have the same signs but different measures. Do not confuse.

4. Apply sign at crossing in above step 3 to "Main Bearings Grade Table".

NOTE:

- "Main Bearings Grade Table" applies to all journals.
- Service parts is available as a set of both upper and lower.

When Cylinder Block and Crankshaft are Reused:

2005 ENGINE Engine Mechanical - Q45

Crankshaft main journal diameter		Cylinder block main bearing housing inner diameter	I.D. mark	A	B	C	D	E	F	G	H	J	K	L	M	N	P	R	S	T	U	V	W	X	Y	1	2
I.D. mark	Axle diameter Unit: mm (in)		68.944 - 68.945 (2.7143 - 2.7144)	68.945 - 68.946 (2.7144 - 2.7144)	68.946 - 68.947 (2.7144 - 2.7144)	68.947 - 68.948 (2.7144 - 2.7145)	68.948 - 68.949 (2.7145 - 2.7145)	68.949 - 68.950 (2.7145 - 2.7146)	68.950 - 68.951 (2.7146 - 2.7146)	68.951 - 68.952 (2.7146 - 2.7146)	68.952 - 68.953 (2.7146 - 2.7147)	68.953 - 68.954 (2.7147 - 2.7147)	68.954 - 68.955 (2.7147 - 2.7148)	68.955 - 68.956 (2.7148 - 2.7148)	68.956 - 68.957 (2.7148 - 2.7148)	68.957 - 68.958 (2.7148 - 2.7149)	68.958 - 68.959 (2.7149 - 2.7149)	68.959 - 68.960 (2.7149 - 2.7150)	68.960 - 68.961 (2.7150 - 2.7150)	68.961 - 68.962 (2.7150 - 2.7151)	68.962 - 68.963 (2.7150 - 2.7151)	68.963 - 68.964 (2.7151 - 2.7151)	68.964 - 68.965 (2.7151 - 2.7152)	68.965 - 68.966 (2.7152 - 2.7152)	68.966 - 68.967 (2.7152 - 2.7152)	68.967 - 68.968 (2.7152 - 2.7153)	
A	63.964 - 63.963 (2.5183 - 2.5182)	0	0	01	01	01	1	1	1	1	12	12	12	2	2	2	23	23	23	3	3	3	34	34	34	4	
B	63.963 - 63.962 (2.5182 - 2.5182)	0	01	01	01	01	1	1	1	12	12	12	2	2	2	23	23	23	3	3	3	34	34	34	4	4	
C	63.962 - 63.961 (2.5182 - 2.5181)	01	01	01	1	1	1	1	12	12	12	2	2	2	23	23	23	3	3	3	34	34	34	4	4	4	
D	63.961 - 63.960 (2.5181 - 2.5181)	01	01	1	1	1	12	12	12	12	2	2	2	23	23	23	3	3	3	34	34	34	4	4	4	45	
E	63.960 - 63.959 (2.5181 - 2.5181)	01	1	1	1	12	12	12	12	2	2	2	23	23	23	3	3	3	34	34	34	4	4	4	45	45	
F	63.959 - 63.958 (2.5181 - 2.5180)	1	1	1	12	12	12	12	2	2	2	23	23	23	3	3	3	34	34	34	4	4	4	45	45	45	
G	63.958 - 63.957 (2.5180 - 2.5180)	1	1	12	12	12	2	2	2	23	23	23	3	3	3	34	34	34	4	4	4	45	45	45	45	5	
H	63.957 - 63.956 (2.5180 - 2.5179)	1	12	12	12	2	2	2	23	23	23	3	3	3	3	34	34	34	4	4	4	45	45	45	5	5	
J	63.956 - 63.955 (2.5179 - 2.5179)	12	12	12	2	2	2	23	23	23	3	3	3	3	34	34	34	4	4	4	45	45	45	5	5	5	
K	63.955 - 63.954 (2.5179 - 2.5179)	12	12	2	2	2	23	23	23	3	3	3	3	34	34	34	4	4	4	45	45	45	5	5	5	56	
L	63.954 - 63.953 (2.5179 - 2.5178)	12	2	2	2	23	23	23	3	3	3	3	34	34	34	4	4	4	45	45	45	5	5	5	5	56	
M	63.953 - 63.952 (2.5178 - 2.5178)	2	2	2	23	23	23	3	3	3	3	34	34	34	4	4	4	45	45	45	5	5	5	5	56	56	
N	63.952 - 63.951 (2.5178 - 2.5178)	2	2	23	23	23	3	3	3	3	34	34	34	4	4	4	45	45	45	5	5	5	5	56	56	56	
P	63.951 - 63.950 (2.5178 - 2.5177)	2	23	23	23	3	3	3	3	34	34	34	4	4	4	45	45	45	5	5	5	56	56	56	6	6	
R	63.950 - 63.949 (2.5177 - 2.5177)	23	23	23	3	3	3	3	34																		

© 2011 Mitchell Repair Information Company, LLC.

2005 Infiniti Q45

2005 ENGINE Engine Mechanical - Q45

Grade number	Thickness	Identification color	Remarks
0	2.483 - 2.486 (0.0978 - 0.0979)	Black	Grade and color are the same for upper and lower bearings.
1	2.486 - 2.489 (0.0979 - 0.0980)	Brown	
2	2.489 - 2.492 (0.0980 - 0.0981)	Green	
3	2.492 - 2.495 (0.0981 - 0.0982)	Yellow	
4	2.495 - 2.498 (0.0982 - 0.0983)	Blue	
5	2.498 - 2.501 (0.0983 - 0.0985)	Pink	
6	2.501 - 2.504 (0.0985 - 0.0986)	Purple	
7	2.504 - 2.507 (0.0986 - 0.0987)	White	
8	2.507 - 2.510 (0.0987 - 0.0988)	Red	
01	UPR	2.483 - 2.486 (0.0978 - 0.0979)	Grade and color are different for upper and lower bearings.
	LWR	2.486 - 2.489 (0.0979 - 0.0980)	
12	UPR	2.486 - 2.489 (0.0979 - 0.0980)	
	LWR	2.489 - 2.492 (0.0980 - 0.0981)	
23	UPR	2.489 - 2.492 (0.0980 - 0.0981)	
	LWR	2.492 - 2.495 (0.0981 - 0.0982)	
34	UPR	2.492 - 2.495 (0.0981 - 0.0982)	
	LWR	2.495 - 2.498 (0.0982 - 0.0983)	
45	UPR	2.495 - 2.498 (0.0982 - 0.0983)	
	LWR	2.498 - 2.501 (0.0983 - 0.0985)	
56	UPR	2.498 - 2.501 (0.0983 - 0.0985)	
	LWR	2.501 - 2.504 (0.0985 - 0.0986)	
67	UPR	2.501 - 2.504 (0.0985 - 0.0986)	
	LWR	2.504 - 2.507 (0.0986 - 0.0987)	
78	UPR	2.504 - 2.507 (0.0986 - 0.0987)	
	LWR	2.507 - 2.510 (0.0987 - 0.0988)	

G02370171

Fig. 218: Main Bearings Grade And Thickness Specification Chart

Courtesy of NISSAN MOTOR CO., U.S.A.

Use Undersize Bearing Usage Guide


- Use undersize (US) bearing when oil clearance with standard size main bearing is not within specification.
- When using undersize (US) bearing, measure main bearing inner diameter of bearing installed and grind main journal until oil clearance falls within specification.

Bearing undersize table

BEARINGS UNDERSIZE THICKNESS SPECIFICATION

Unit: mm (in)	
Size	Thickness
US 0.25 (0.0098)	2.618 - 2.626 (0.1031 - 0.1034)

CAUTION: Do not damage fillet R [1.5 mm (0.059 in)] when grinding crankshaft main journal in order to use undersized bearing.

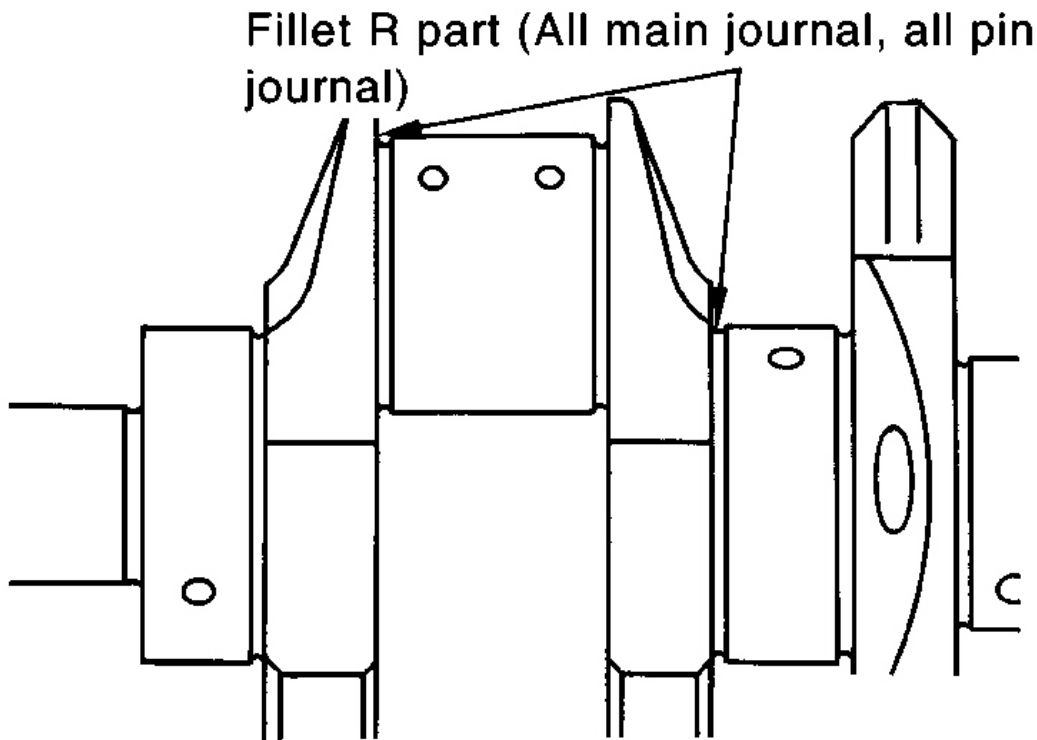


G02370172

Fig. 219: Identifying Crankshaft Main Journal
Courtesy of NISSAN MOTOR CO., U.S.A.

INSPECTION AFTER DISASSEMBLY

CRANKSHAFT END PLAY

- Using a dial indicator, measure the clearance between the thrust bearings and the crankshaft arm when crankshaft is moved fully forward or backward.
Standard: 0.10 - 0.25 mm (0.0039 - 0.0098 in)
Limit: 0.30 mm (0.0118 in)
- If the measured value exceeds the limit, replace the thrust bearings, and measure again. If it still exceeds the limit, replace crankshaft also.

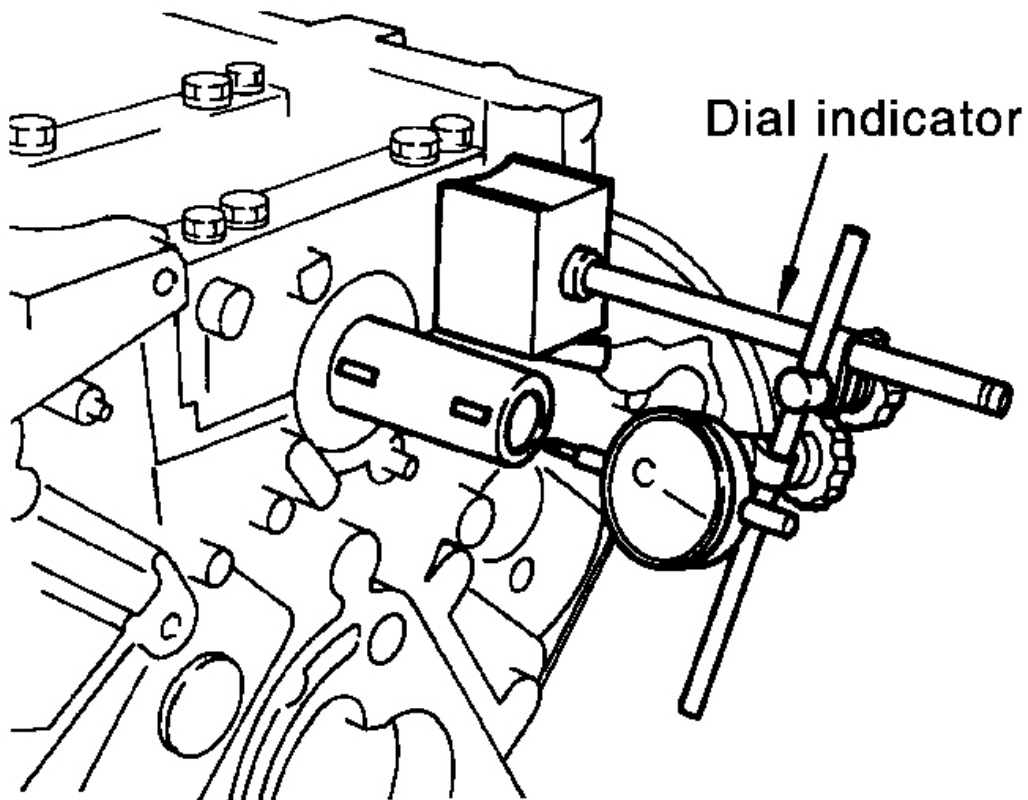


G02370173

Fig. 220: Checking Crankshaft End Play
Courtesy of NISSAN MOTOR CO., U.S.A.

CONNECTING ROD SIDE CLEARANCE

- Measure the side clearance between connecting rod and crankshaft arm with a feeler gauge.
Standard: 0.20 - 0.35 mm (0.0079 - 0.0138 in)
Limit: 0.40 mm (0.0157 in)
- If the measured value exceeds the limit, replace connecting rod, and measure again. If it still exceeds the limit, replace crankshaft also.

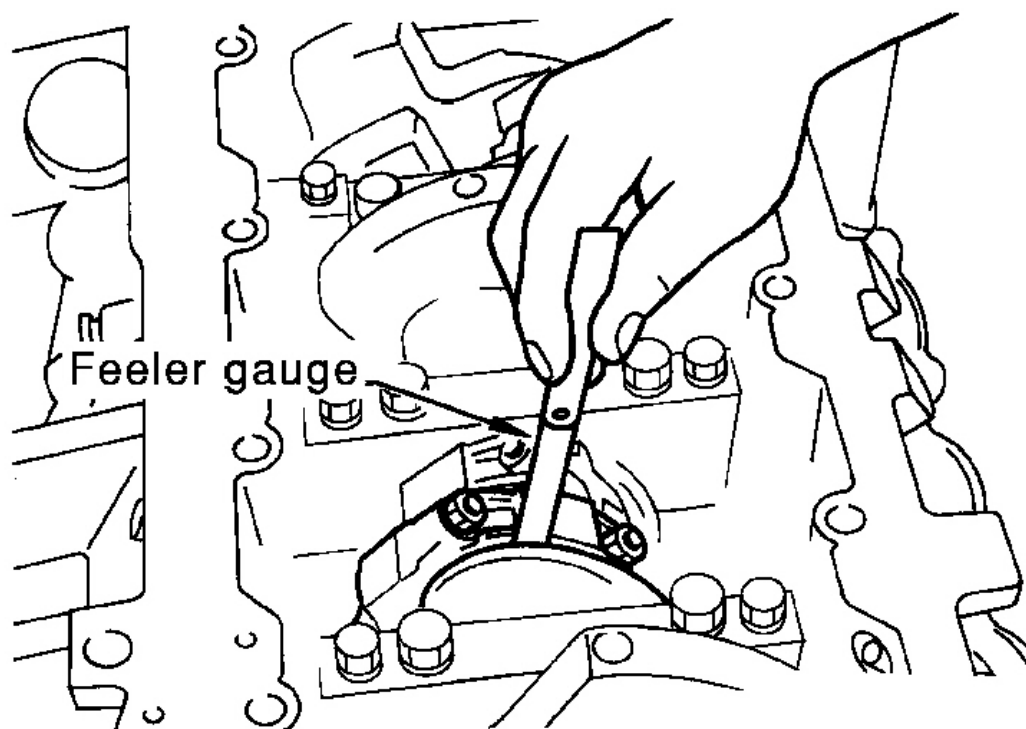

G02370174


Fig. 221: Checking Connecting Rod Side Clearance
Courtesy of NISSAN MOTOR CO., U.S.A.

PISTON TO PISTON PIN CLEARANCE

Piston Pin Hole Diameter

Measure the inner diameter of piston pin hole with an inside micrometer.

Standard: 21.993 - 22.005 mm (0.8659 - 0.8663 in)

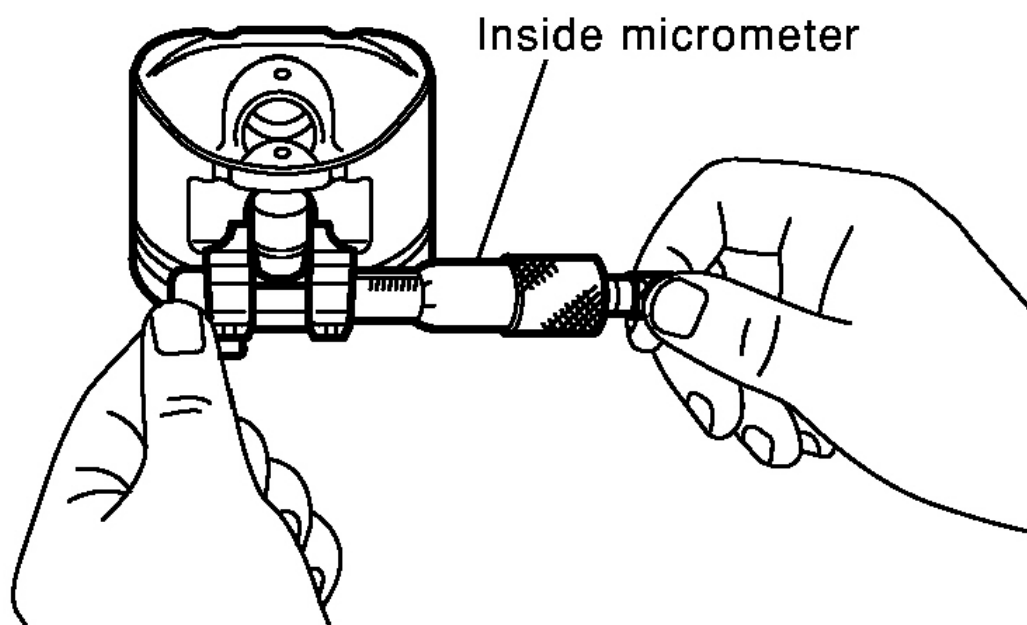


G02370175

Fig. 222: Checking Inner Diameter Of Piston Pin Hole
Courtesy of NISSAN MOTOR CO., U.S.A.

Piston Pin Outer Diameter

Measure the outer diameter of piston pin with a micrometer.

Standard: 21.989 - 22.001 mm (0.8657 - 0.8662 in)

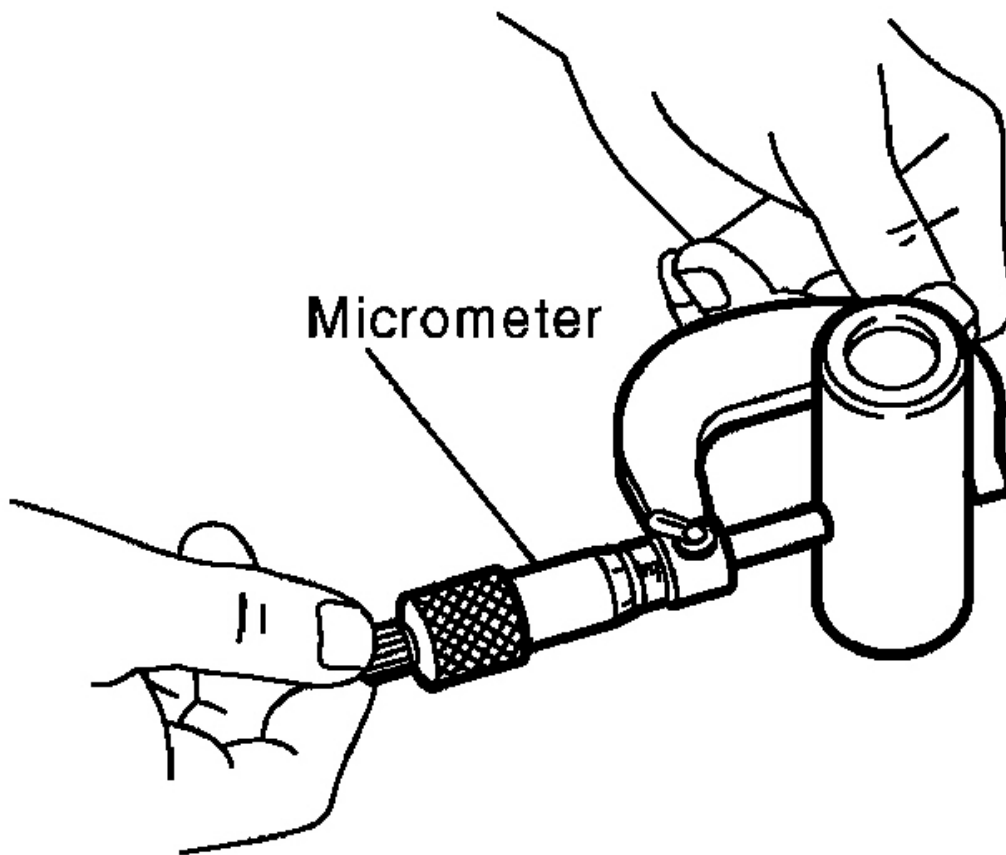

G02370176

Fig. 223: Checking Piston Pin Outer Diameter
Courtesy of NISSAN MOTOR CO., U.S.A.

Piston To Piston Pin Clearance

(Piston to piston pin clearance) = (Piston pin hole diameter) - (Piston pin outer diameter)

Standard: 0.002 - 0.006 mm (0.0001 - 0.0002 in)

- If out of the standard, replace piston/piston pin assembly.
- Refer to piston selection table to replace piston/piston pin assembly. Refer to "**HOW TO SELECT PISTON**".

NOTE:

- **Piston is available together with piston pin as assembly.**

- Piston pin (piston pin hole) grade is provided only for the parts installed at the plant. For service parts, no grades can be selected. (Only "0" grade is available.)

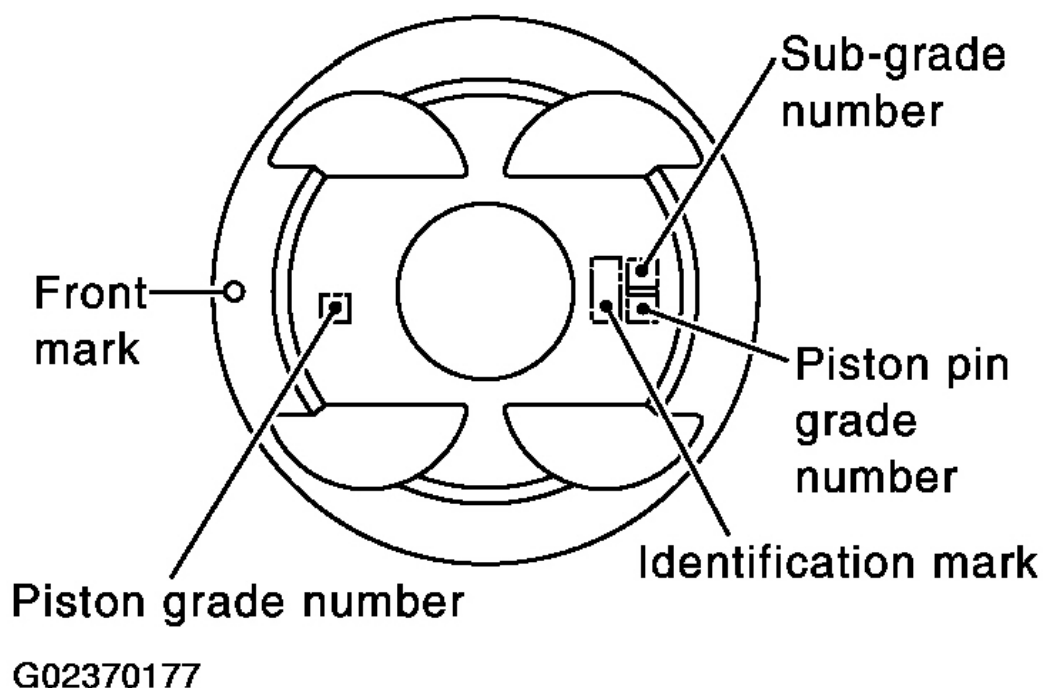


Fig. 224: Identifying Piston Grade Number And Piston Pin Grade Number
 Courtesy of NISSAN MOTOR CO., U.S.A.

PISTON RING SIDE CLEARANCE

- Measure the side clearance of piston ring and piston ring groove with a feeler gauge.

Standard:

Top ring: 0.045 - 0.080 mm (0.0018 - 0.0031 in)


2nd ring: 0.030 - 0.070 mm (0.0012 - 0.0028 in)

Oil ring: 0.065 - 0.135 mm (0.0026 - 0.0053 in)

Limit:

Top ring: 0.11 mm (0.0043 in)

2nd ring: 0.10 mm (0.0039 in)

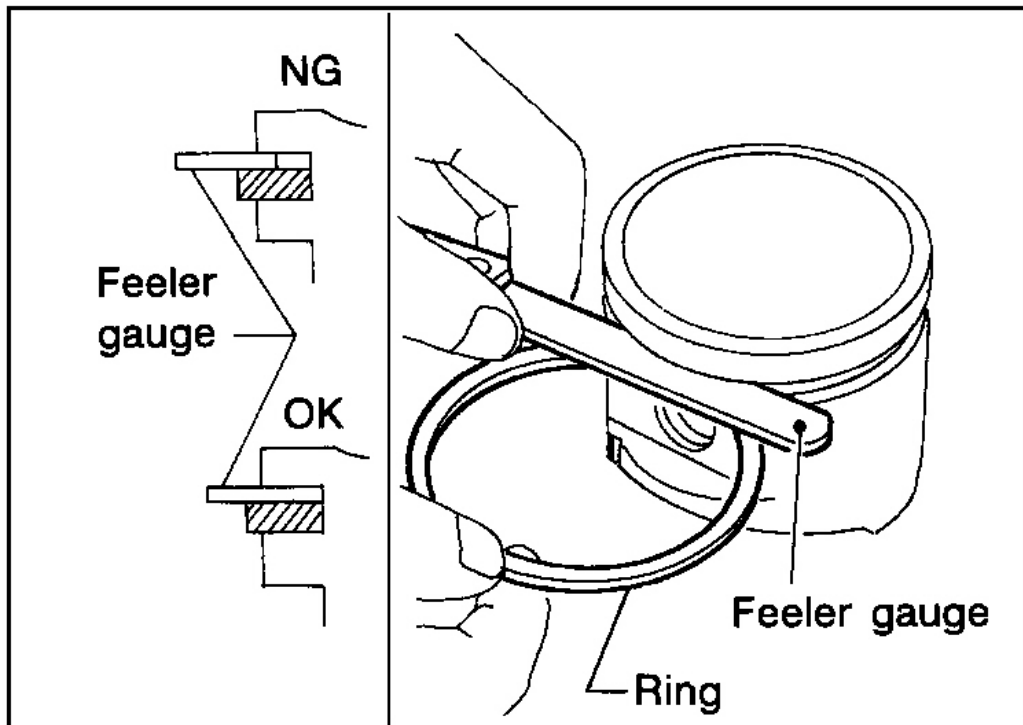

G02370178

Fig. 225: Checking Side Clearance Of Piston Ring And Piston Ring Groove With Feeler Gauge
Courtesy of NISSAN MOTOR CO., U.S.A.

- If the measured value exceeds the limit, replace piston ring, and measure again. If it still exceeds the limit, replace piston.

PISTON RING END GAP

- Check if the inner diameter of cylinder bore is within the specification. Refer to "**PISTON TO CYLINDER BORE CLEARANCE**".
- Lubricate with new engine oil to piston and piston ring, and then insert piston ring until middle of cylinder with piston, and measure piston ring end gap with a feeler gauge.

Standard:

Top ring 0.22 - 0.32 mm (0.0087 - 0.0126 in)

2nd ring 0.22 - 0.32 mm (0.0087 - 0.0126 in)


Oil ring 0.20 - 0.50 mm (0.0079 - 0.0197 in)

Limit:

Top ring 0.56 mm (0.0220 in)

2nd ring 0.56 mm (0.0220 in)

Oil ring 0.86 mm (0.0339 in)

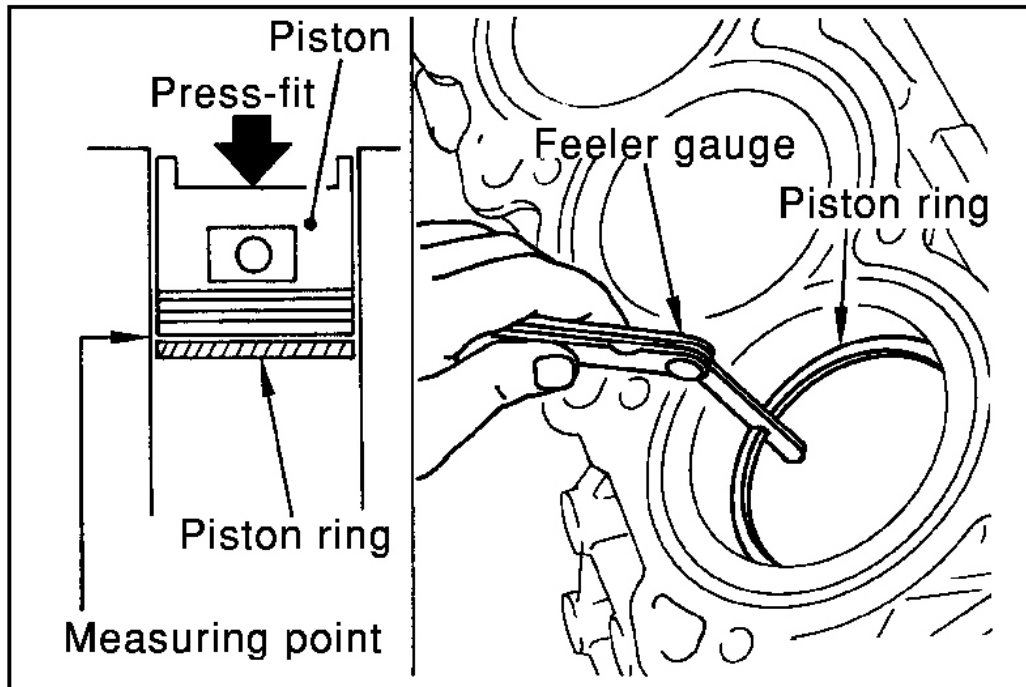

G02370179

Fig. 226: Checking Piston Ring End Gap
 Courtesy of NISSAN MOTOR CO., U.S.A.

- If the measured value exceeds the limit, replace piston ring, and measure again. If it still exceeds the limit, re-bore cylinder and use oversize piston and piston rings.

CONNECTING ROD BEND AND TORSION

- Check with connecting rod aligner.

Bend:


Limit: 0.15 mm (0.0059 in) per 100 mm (3.94 in) length

Torsion:


Limit: 0.30 mm (0.0118 in) per 100 mm (3.94 in) length

- If it exceeds the limit, replace connecting rod assembly.

Bend

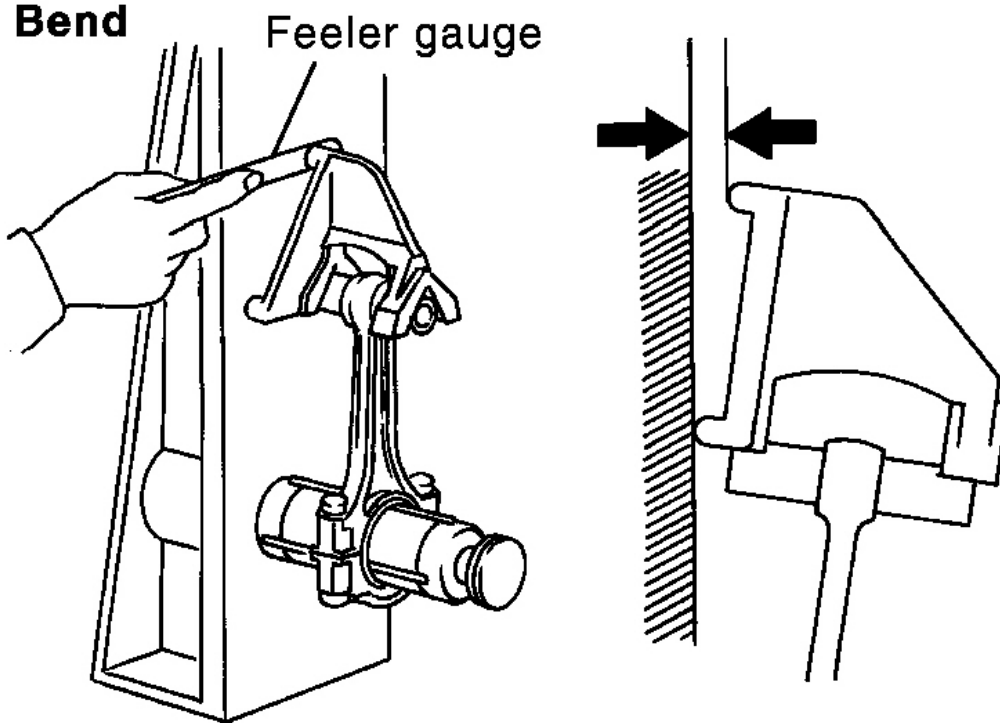

Torsion

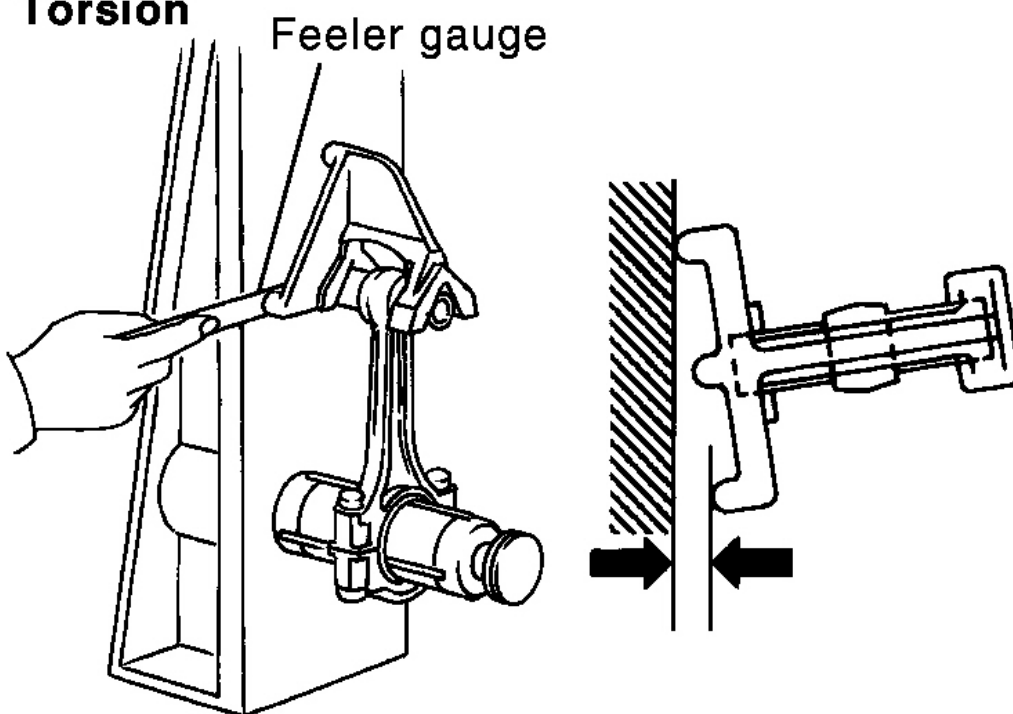

G02370180

Fig. 227: Checking Connecting Rod Bend And Torsion
Courtesy of NISSAN MOTOR CO., U.S.A.

CONNECTING ROD BIG END DIAMETER

- Install connecting rod bearing cap without installing connecting rod bearing, and tighten connecting rod bolts to the specified torque. Refer to "**ASSEMBLY**" for the tightening procedure.
- Measure the inner diameter of connecting rod big end with an inside micrometer.

Standard: 55.000 - 55.013 mm (2.1654 - 2.1659 in)

- If out of the standard, replace connecting rod assembly.

Example

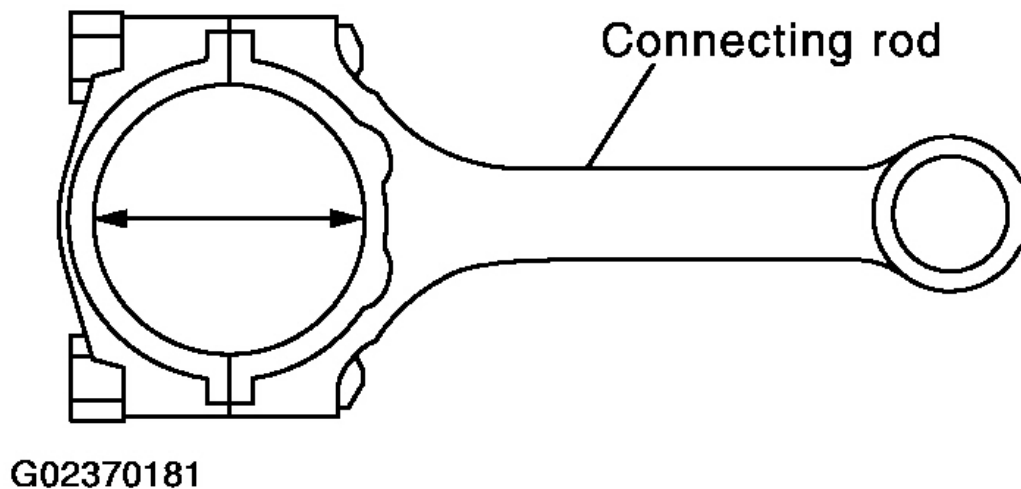



Fig. 228: Identifying Connecting Rod Big End Diameter
Courtesy of NISSAN MOTOR CO., U.S.A.

CONNECTING ROD BUSHING OIL CLEARANCE

Connecting Rod Bushing Inner Diameter

Measure the inner diameter of connecting rod bushing with an inside micrometer.

Standard: 22.000 - 22.012 mm (0.8661 - 0.8666 in)

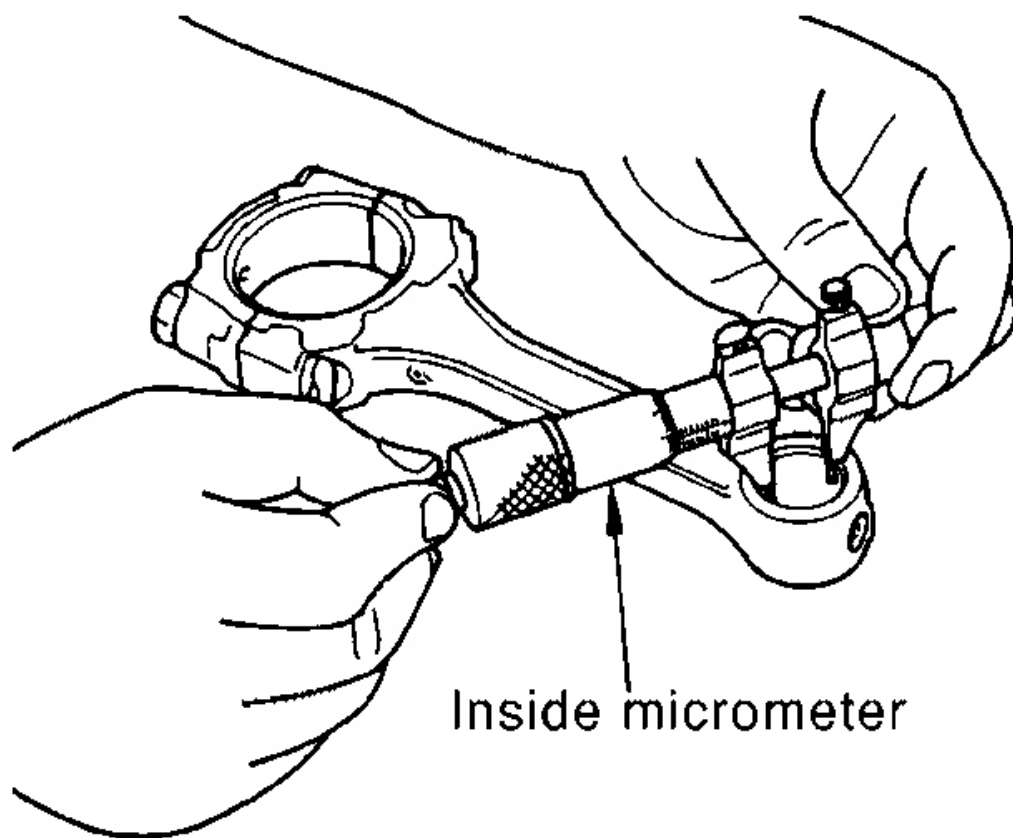


G02370182

Fig. 229: Checking Connecting Rod Bushing Inner Diameter
Courtesy of NISSAN MOTOR CO., U.S.A.

Piston Pin Outer Diameter

Measure the outer diameter of piston pin with a micrometer.

Standard: 21.989 - 22.001 mm (0.8657 - 0.8662 in)

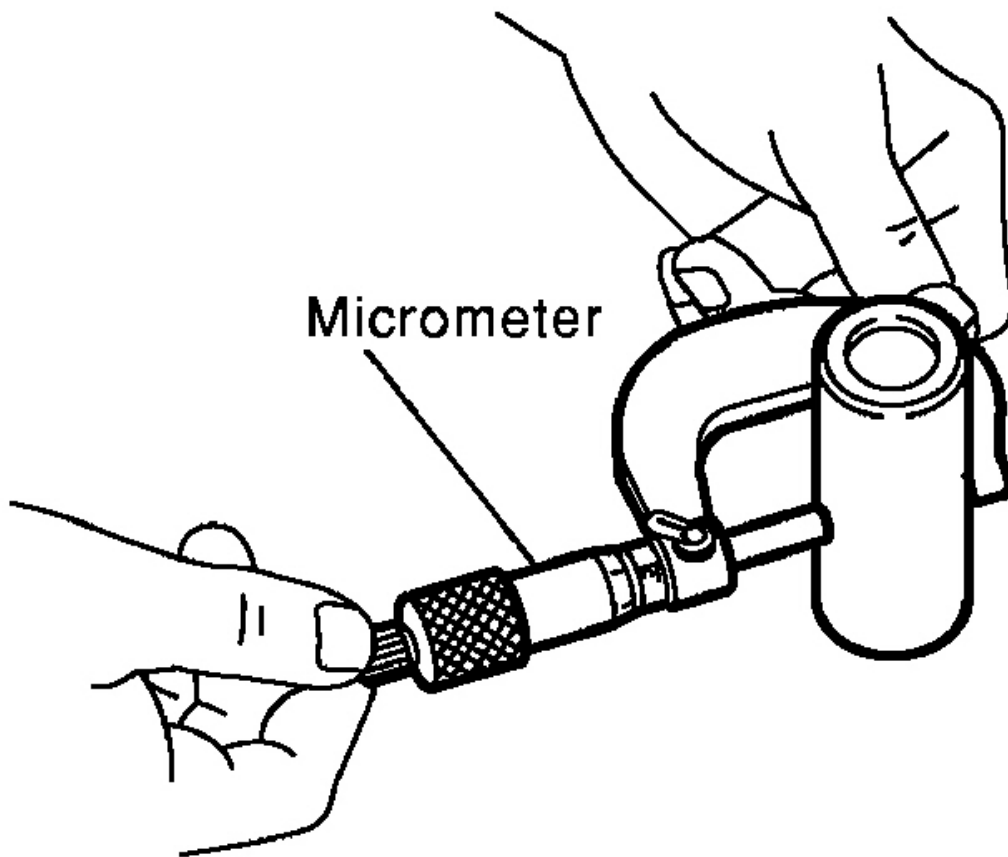

G02370183

Fig. 230: Checking Piston Pin Outer Diameter
Courtesy of NISSAN MOTOR CO., U.S.A.

Connecting Rod Bushing Oil Clearance

(Connecting rod bushing oil clearance) = (Connecting rod bushing inner diameter) - (Piston pin outer diameter)

Standard: 0.005 - 0.017 mm (0.0002 - 0.0007 in)

Limit: 0.030 mm (0.0012 in)

- If the calculated value exceeds the limit, replace connecting rod assembly and/or piston and piston pin assembly.
- If replacing piston and piston pin assembly, refer to "**HOW TO SELECT PISTON**".
- If replacing connecting rod assembly, refer to "**CONNECTING ROD BEARING OIL CLEARANCE**".

to select the connecting rod bearing.

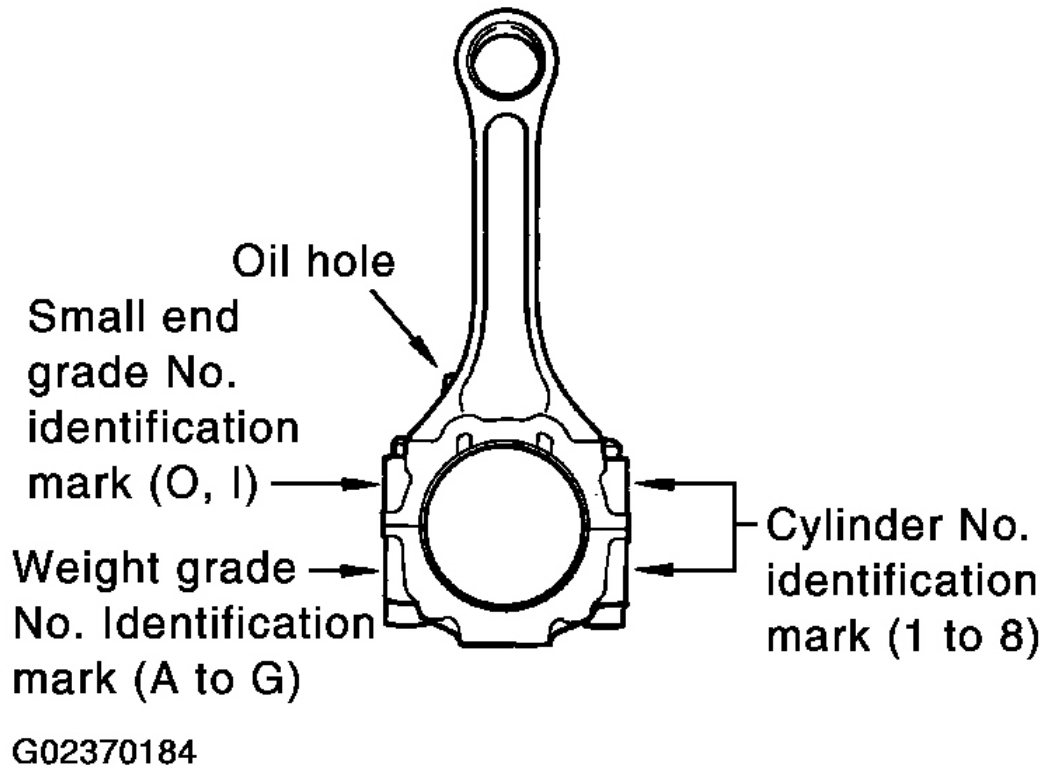


Fig. 231: Identifying Connecting Rod Small Grade No And Weight Grade No Identification Marks
 Courtesy of NISSAN MOTOR CO., U.S.A.

Factory installed parts grading:

- Service parts apply only to grade "0".

FACTORY INSTALLED PARTS GRADING SPECIFICATION

Unit: mm (in)		
Grade	0	1
Connecting rod bushing inner diameter (1)	22.000 - 22.006	22.006 - 22.012 (0.8664 - 0.8666)
Piston pin hole diameter	21.993 - 21.999 (0.8659 - 0.8661)	21.999 - 22.005 (0.8661 - 0.8663)
Piston pin outer diameter	21.989 - 21.995 (0.8657 - 0.8659)	21.995 - 22.001 (0.8659 - 0.8662)
(1) After installing in connecting rod		

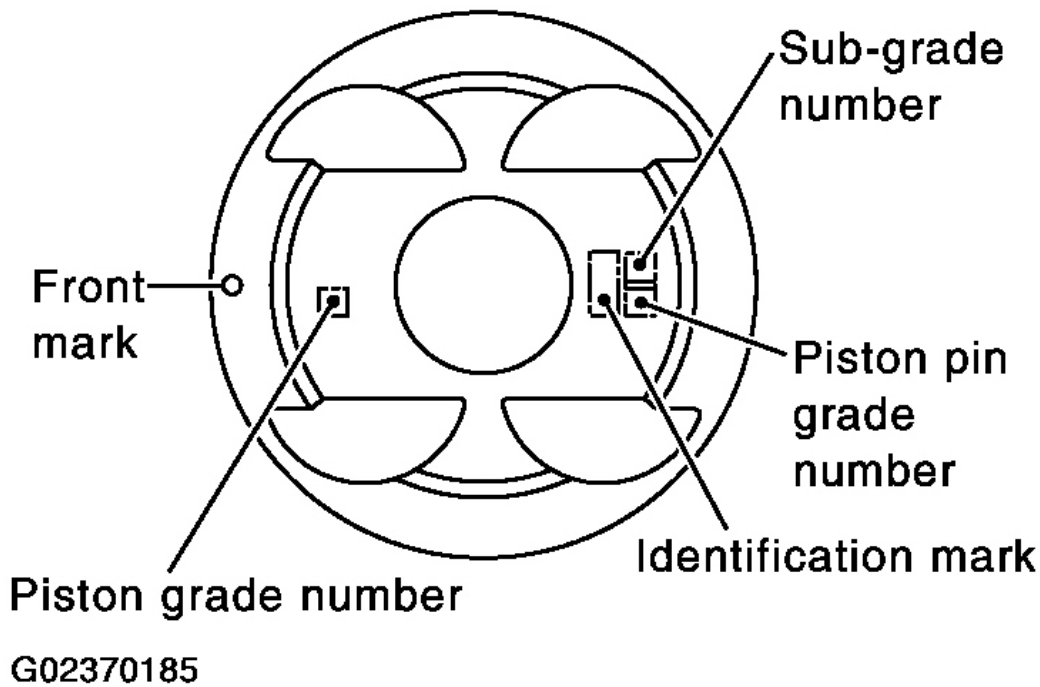


Fig. 232: Identifying Piston Grade Number And Piston Pin Grade Number
Courtesy of NISSAN MOTOR CO., U.S.A.

CYLINDER BLOCK DISTORTION


- Using a scraper, remove gasket on the cylinder block surface, and also remove engine oil, scale, carbon, or other contamination.

CAUTION: Be careful not to allow gasket flakes to enter the engine oil or engine coolant passages.

- Measure the distortion on the cylinder block upper face at some different points in six directions with a straightedge and a feeler gauge.

Limit: 0.1 mm (0.004 in)

- If it exceeds the limit, replace cylinder block.

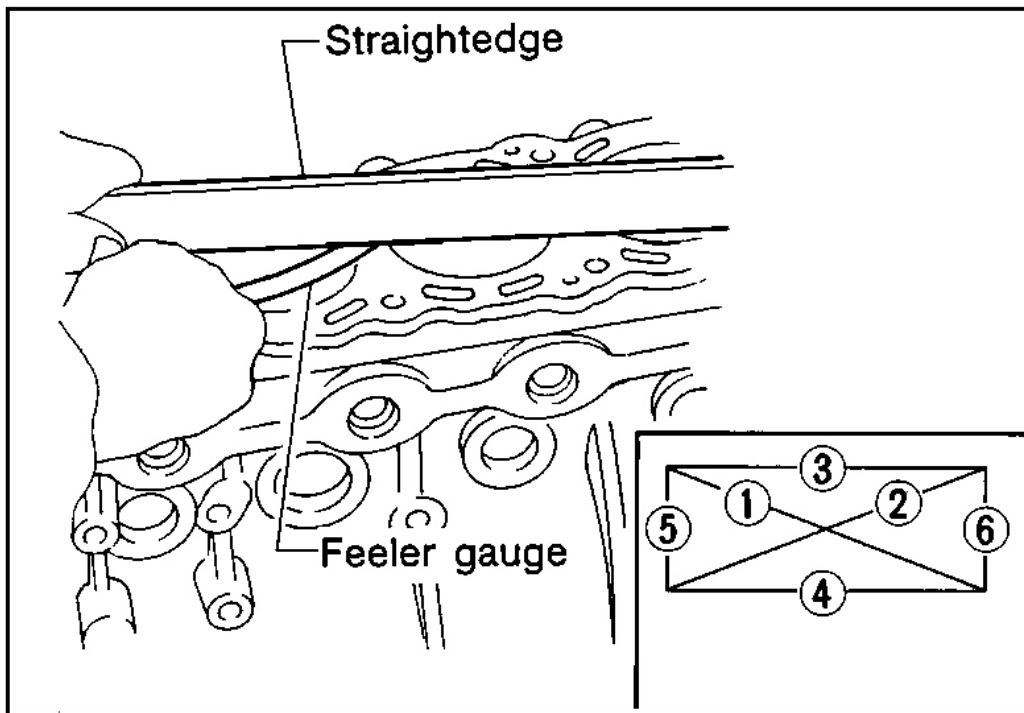

G02370186

Fig. 233: Checking Distortion Of Cylinder Block Upper Face


Courtesy of NISSAN MOTOR CO., U.S.A.

MAIN BEARING HOUSING INNER DIAMETER

- Install main bearing caps without installing main bearings, and tighten main bearing cap bolts to the specified torque. Refer to "**ASSEMBLY**" for the tightening procedure.
- Using a bore gauge, measure the inner diameter of the main bearing housing.
Standard: 68.944 - 68.968 mm (2.7143 - 2.7153 in)
- If out of the standard, replace cylinder block and main bearing caps as an assembly.

NOTE: These components cannot be replaced as a single unit, because they were processed together.

Example

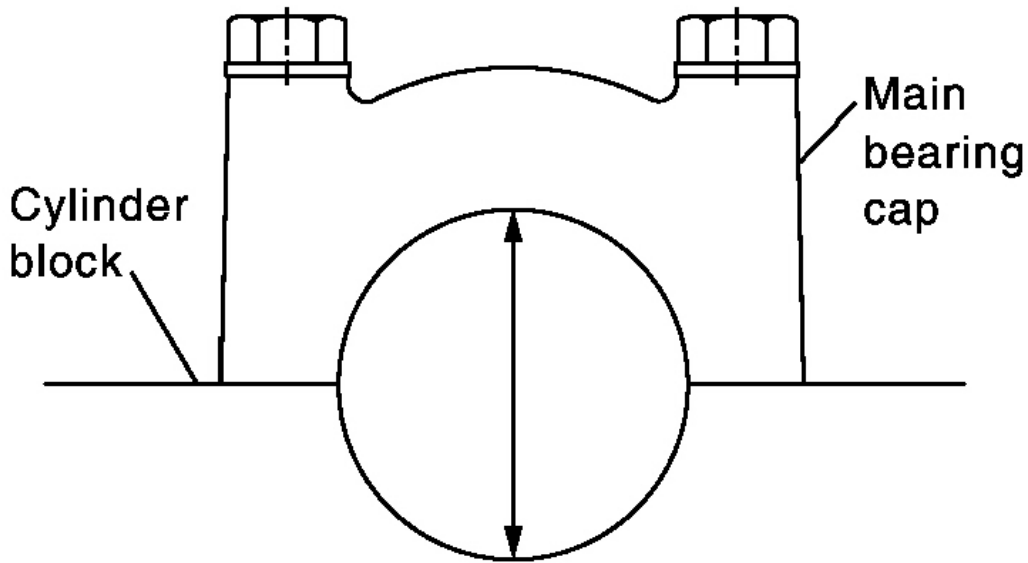

G02370187


Fig. 234: Identifying Inner Diameter Of Main Bearing Housing
Courtesy of NISSAN MOTOR CO., U.S.A.

PISTON TO CYLINDER BORE CLEARANCE

Cylinder Bore Inner Diameter

- Using a bore gauge, measure the cylinder bore diameter for wear, out-of-round and taper at six different points on each cylinder. ("X" and "Y" directions at "A", "B" and "C")

NOTE: When determining cylinder bore grade, measure the cylinder bore at B position.

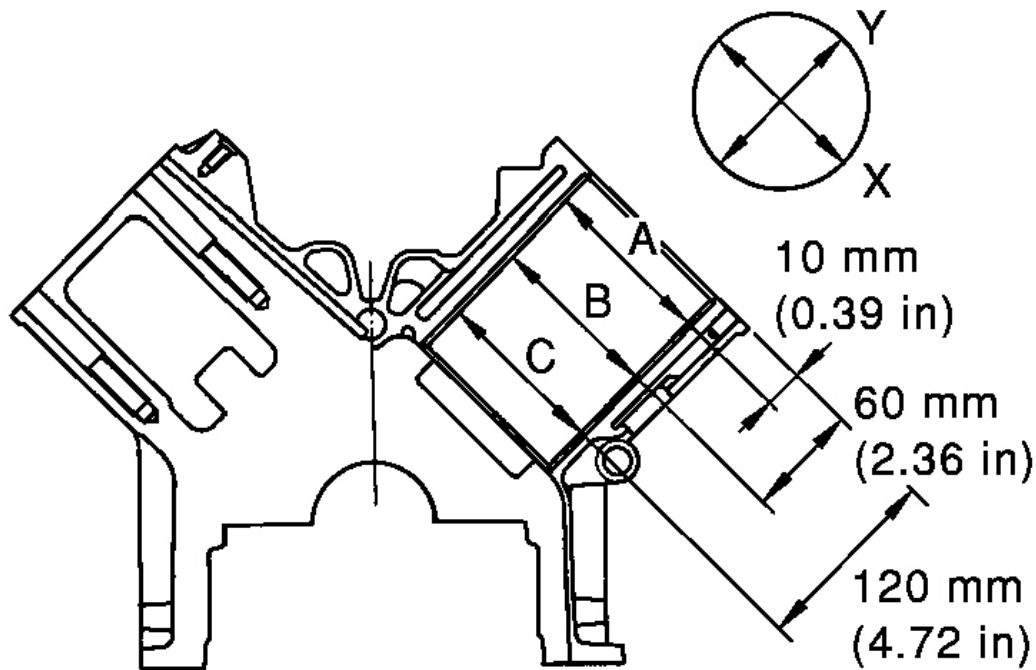

G02370188

Fig. 235: Identifying Cylinder Bore Diameter Measuring Points
 Courtesy of NISSAN MOTOR CO., U.S.A.

Standard inner diameter

: 93.000 - 93.030 mm (3.6614 - 3.6626 in)

Wear limit


: 0.20 mm (0.0079 in)

Out-of-round limit (Difference between "X" and "Y")

: 0.015 mm (0.0006 in)

Taper limit (Difference between "A" and "C")

: 0.010 mm (0.0004 in)

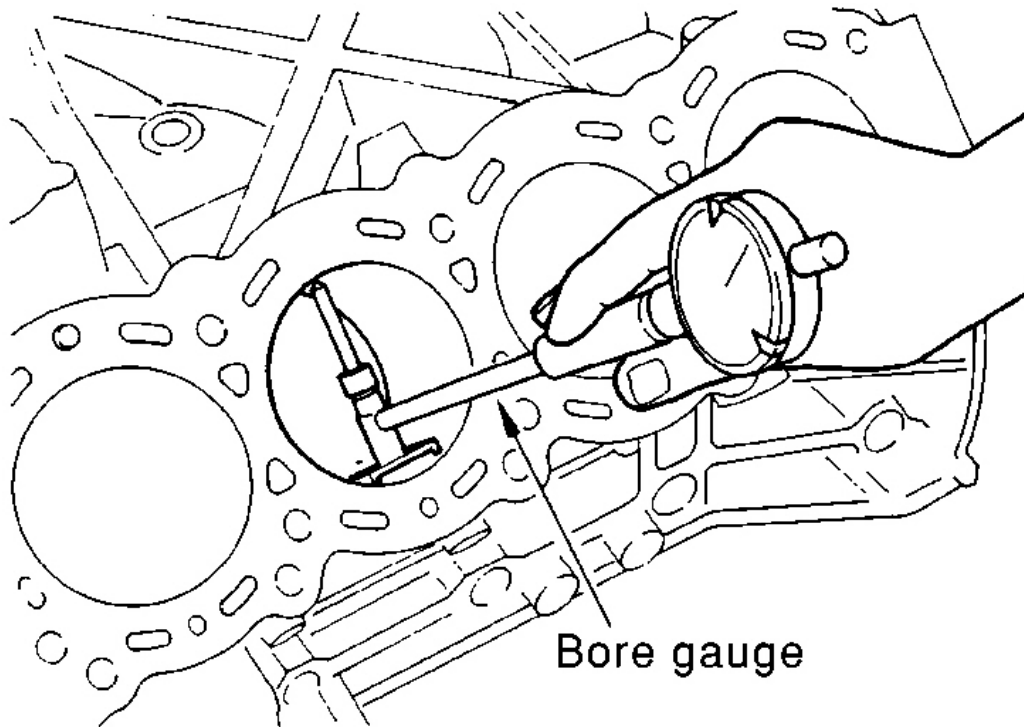

G02370189

Fig. 236: Checking Cylinder Bore Diameter


Courtesy of NISSAN MOTOR CO., U.S.A.

- If the measured value exceeds the limit, or if there are scratches and/or seizure on the cylinder inner wall, hone or bore the inner wall.
- Oversize piston is provided. When using oversize piston, hone cylinder so that the clearance between piston and cylinder satisfies the standard.

Oversize (OS): 0.2 mm (0.008 in)**CAUTION:** If oversize piston is used, use it for all cylinders with oversize piston rings.**Piston Skirt Diameter**

- Measure outer diameter of piston skirt with a micrometer.

Standard: 92.980 - 93.010 mm (3.6606 - 3.6618 in)

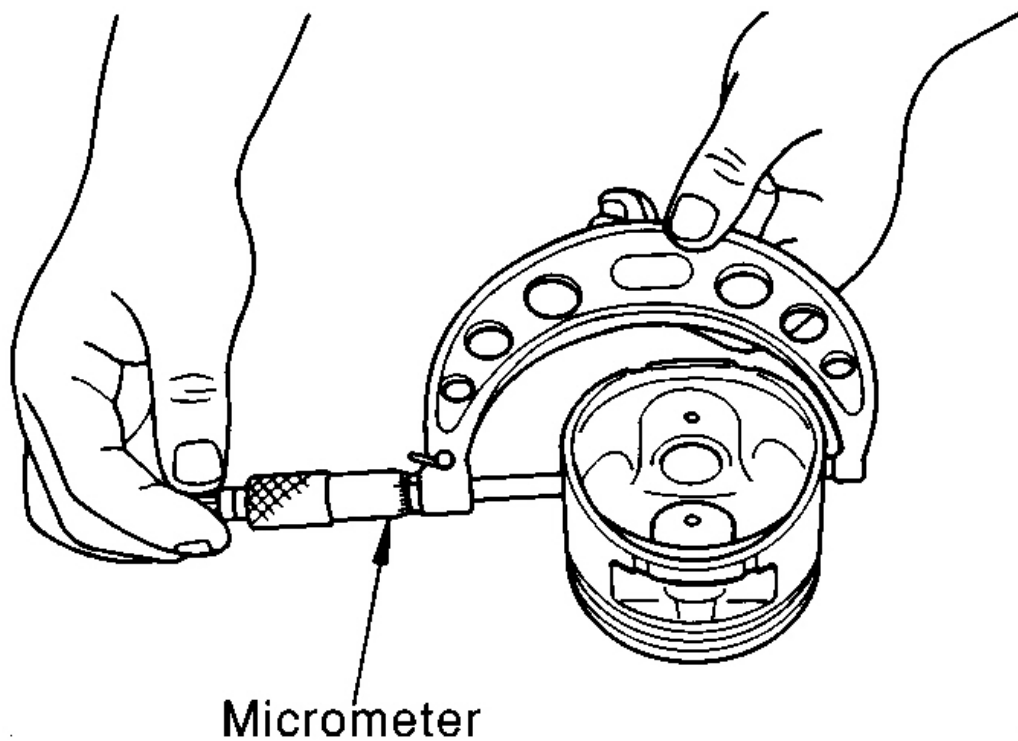

G02370190

Fig. 237: Checking Outer Diameter Of Piston Skirt
Courtesy of NISSAN MOTOR CO., U.S.A.

- Measure point "H" (Distance from the top): 42 mm (1.65 in)

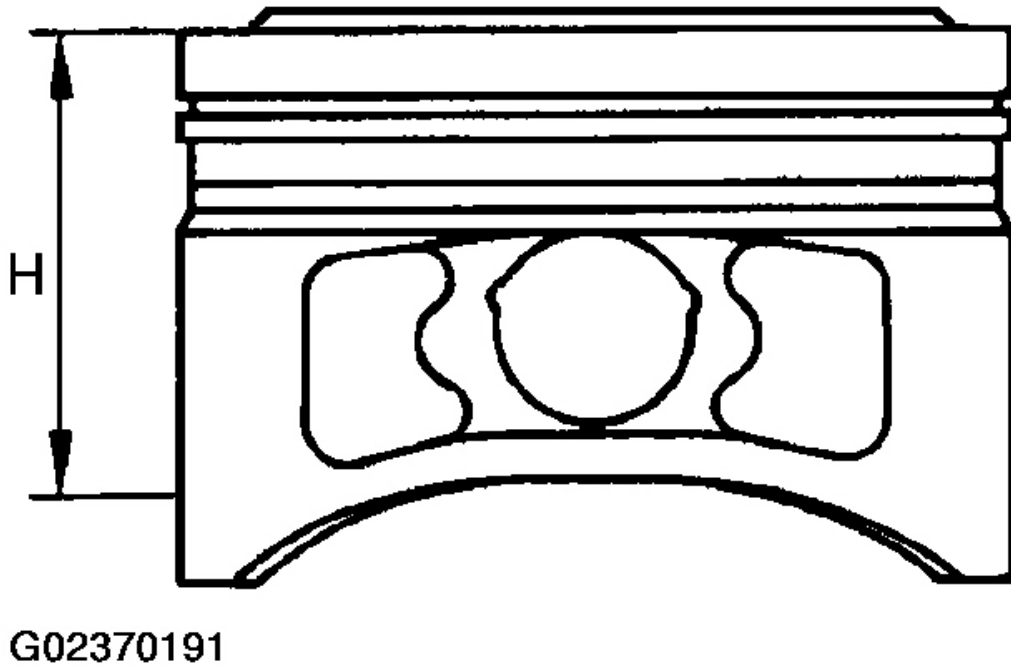


Fig. 238: Identifying Piston Measuring Point (Distance From Top)
 Courtesy of NISSAN MOTOR CO., U.S.A.

Piston to Cylinder Bore Clearance

- Calculate by piston skirt diameter and cylinder bore inner diameter (direction "X", position "B").
 (Clearance) = (Cylinder bore inner diameter) - (Piston skirt diameter)
Standard: 0.010 - 0.030 mm (0.0004 - 0.0012 in)
Limit: 0.08 mm (0.0031 in)
- If it exceeds the limit, replace piston/piston pin assembly. Refer to "**HOW TO SELECT PISTON**".

Re-boring Cylinder Bore

1. Cylinder bore size is determined by adding piston to cylinder bore clearance to piston skirt diameter.

Rebored size calculation: $D = A + B - C$

where,

D: Bored diameter

A: Piston skirt diameter as measured

B: Piston to bore clearance (standard value)

C: Honing allowance 0.02 mm (0.0008 in)

2. Install main bearing caps, and tighten to the specified torque. Otherwise, cylinder bores may be distorted in final assembly. Refer to "ASSEMBLY".
3. Cut the cylinder bores.

NOTE:

- When any cylinder needs boring, all other cylinders must also be bored.
- Do not cut too much out of the cylinder bore at a time. Cut only 0.05 mm (0.0020 in) or so in diameter at a time.

4. Hone cylinders to obtain the specified piston to cylinder bore clearance.
5. Measure finished the cylinder bore for out-of-round and taper.

NOTE:


Measurement should be done after the cylinder bore cools down.

CRANKSHAFT MAIN JOURNAL DIAMETER

- Measure the outer diameter of crankshaft main journal with a micrometer.
Standard: 63.940 - 63.964 mm (2.5173 - 2.5183 in)
- If out of the standard, measure the main bearing oil clearance. Then use the undersize bearing. Refer to "CONNECTING ROD BEARING OIL CLEARANCE".

CRANKSHAFT PIN JOURNAL DIAMETER

- Measure the outer diameter of crankshaft pin journal with a micrometer.
Standard: 51.956 - 51.974 mm (2.0455 - 2.0462 in)
- If out of the standard, measure the connecting rod bearing oil clearance. Then use the undersize bearing. Refer to "CONNECTING ROD BEARING OIL CLEARANCE".

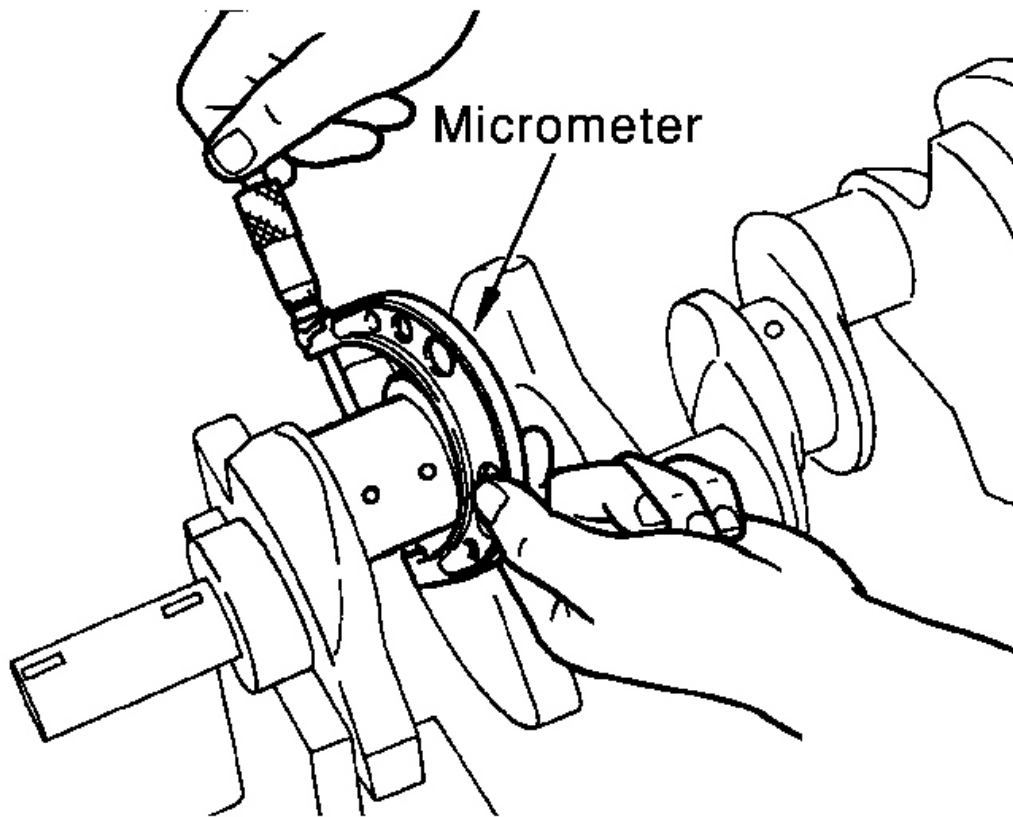

G02370192


Fig. 239: Checking Outer Diameter Of Crankshaft Pin Journal

Courtesy of NISSAN MOTOR CO., U.S.A.

CRANKSHAFT OUT-OF-ROUND AND TAPER

- Using a micrometer, measure the dimensions at four different points shown in the figure on each main journal and pin journal.
- Out-of-round is indicated by the difference in the dimensions between "X" and "Y" at "A" and "B".
- Taper is indicated by the difference in the dimensions between "A" and "B" at "X" and "Y".

Limit:**Out-of-round (Difference between "X" and "Y")****: 0.015 mm (0.0006 in)****Taper (Difference between "A" and "B")****: 0.010 mm (0.0004 in)**

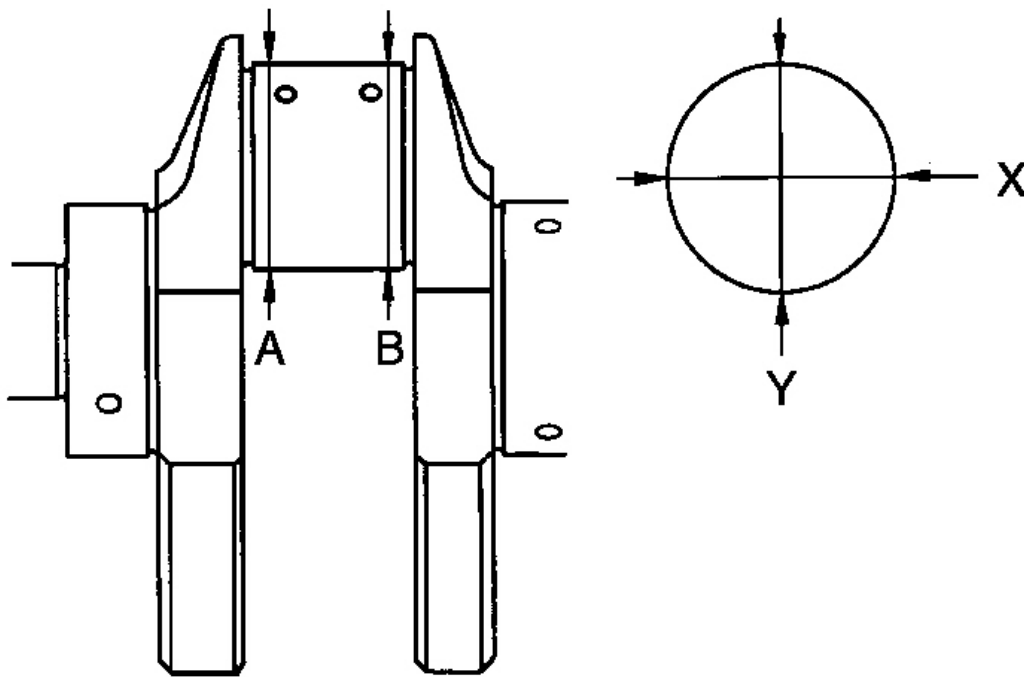

Taper : Difference between A and B

Out-of-round : Difference between X and Y

G02370193

Fig. 240: Identifying Crankshaft Out-Of-Round And Taper Dimension
 Courtesy of NISSAN MOTOR CO., U.S.A.


- If the measured value exceeds the limit, correct or replace crankshaft.
- If corrected, measure the bearing oil clearance of the corrected main journal and/or pin journal. Then select main bearing and/or connecting rod bearing. Refer to "CONNECTING ROD BEARING OIL CLEARANCE" and/or "CONNECTING ROD BEARING OIL CLEARANCE".

CRANKSHAFT RUNOUT

- Place a V-block on a precise flat table to support the journals on the both end of crankshaft.
- Place a dial indicator straight up on the No. 3 journal.
- While rotating crankshaft, read the movement of the pointer on a dial indicator. (total indicator reading)

Limit: 0.10 mm (0.0039 in)

- If it exceeds the limit, replace crankshaft.

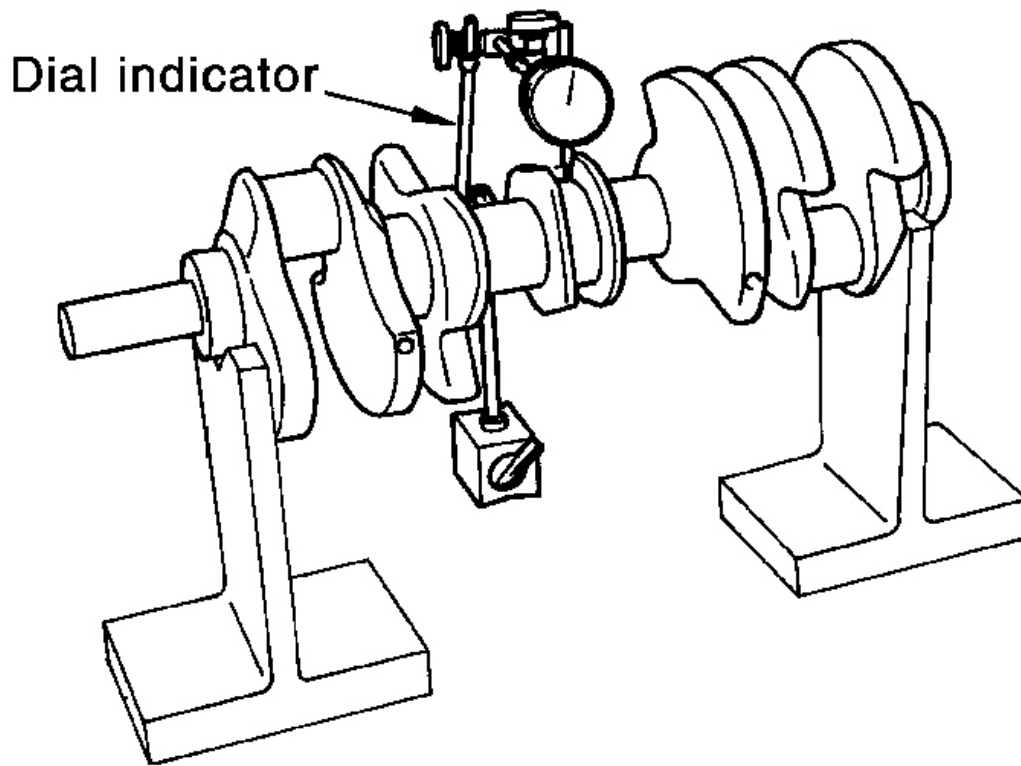

G02370194

Fig. 241: Checking Crankshaft Runout
Courtesy of NISSAN MOTOR CO., U.S.A.

CONNECTING ROD BEARING OIL CLEARANCE

Method by Calculation


- Install connecting rod bearings to connecting rod and cap, and tighten connecting rod nuts to the specified torque. Refer to "ASSEMBLY" for the tightening procedure.
- Measure the inner diameter of connecting rod bearing with an inside micrometer.

(Bearing oil clearance) = (Connecting rod bearing inner diameter) - (Crankshaft pin journal diameter)

Standard: 0.020 - 0.045 mm (0.0008 - 0.0018 in)

Limit: 0.055 mm (0.0022 in)

Example

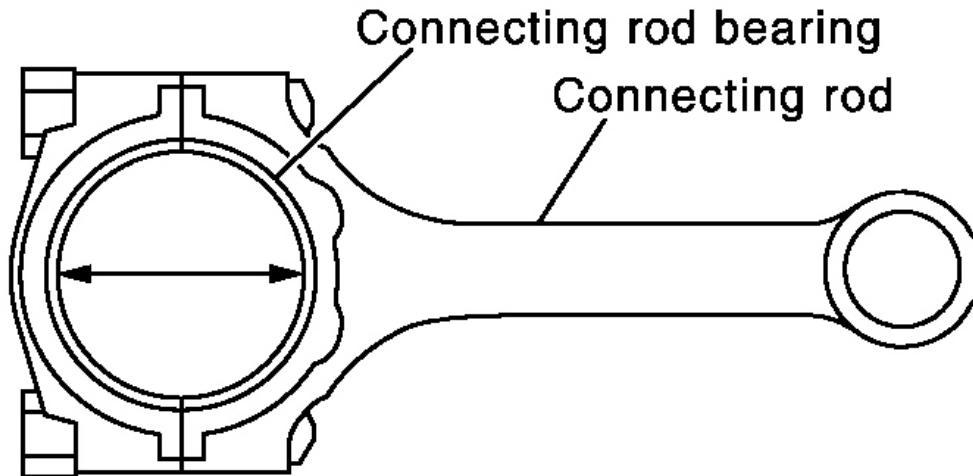

G02370195

Fig. 242: Checking Inner Diameter Of Connecting Rod Bearing
Courtesy of NISSAN MOTOR CO., U.S.A.

- If the calculated value exceeds the limit, select proper connecting rod bearing according to connecting rod big end diameter and crankshaft pin journal diameter to obtain the specified bearing oil clearance. Refer to "**HOW TO SELECT CONNECTING ROD BEARING**".

Method of Using Plastigage


- Remove oil and dust on crankshaft pin journal and the surfaces of each bearing completely.
- Cut plastigage slightly shorter than the bearing width, and place it in crankshaft axial direction, avoiding oil holes.
- Install connecting rod bearings to connecting rod and cap, and tighten connecting rod nuts to the specified torque. Refer to "**ASSEMBLY**" for the tightening procedure.

CAUTION: Do not rotate crankshaft.

- Remove connecting rod bearing cap and bearing, and using scale on plastigage bag, measure the plastigage width.

NOTE: The procedure when the measured value exceeds the limit is same as that described in the "Method by Calculation".

Example

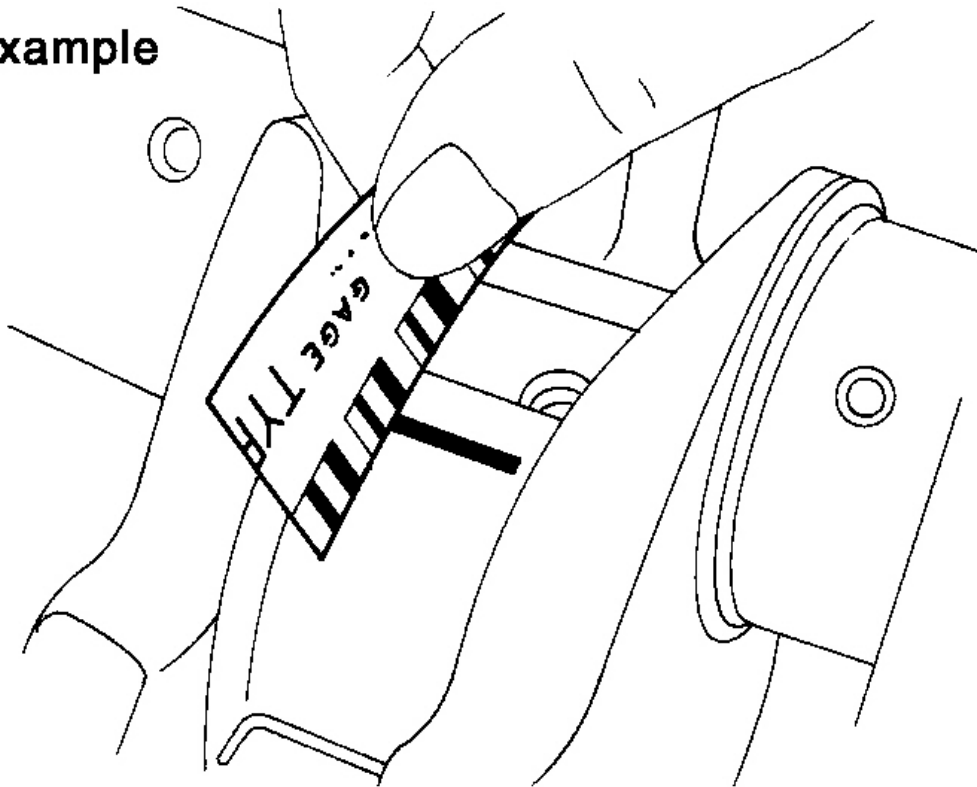

G02370196


Fig. 243: Checking Plastigage Width
Courtesy of NISSAN MOTOR CO., U.S.A.

MAIN BEARING OIL CLEARANCE

Method by Calculation

- Install main bearings to cylinder block and main bearing caps, and tighten main bearing cap bolts to the specified torque. Refer to "**ASSEMBLY**" for the tightening procedure.
- Measure the inner diameter of main bearing with a bore gauge.

Example

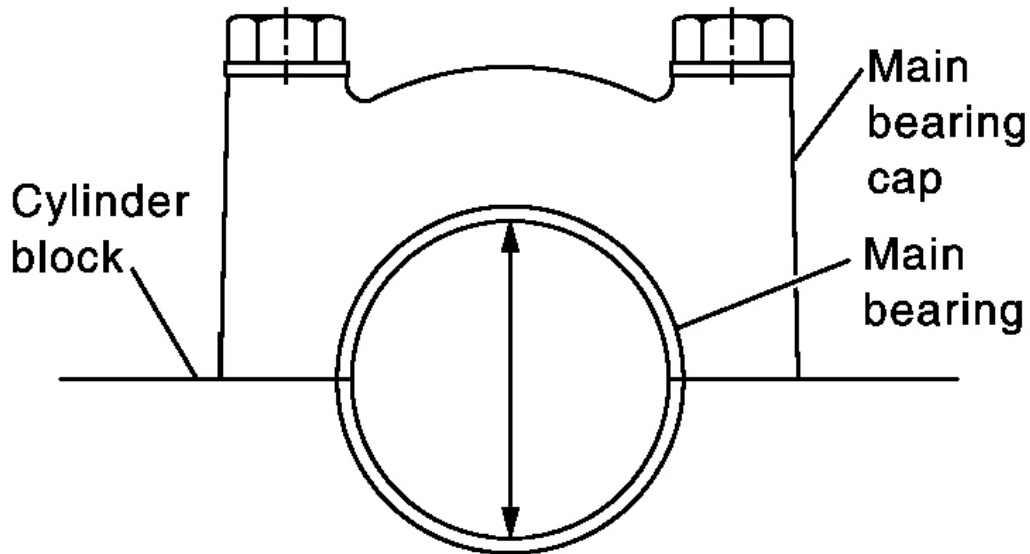

G02370197

Fig. 244: Checking Inner Diameter Of Main Bearing
 Courtesy of NISSAN MOTOR CO., U.S.A.

(Bearing clearance) = (Main bearing inner diameter) - (Crankshaft main journal diameter)

Standard

No. 1 and 5 journal: 0.001 - 0.011 mm (0.00004 - 0.0004 in)

No. 2, 3 and 4 journal: 0.007 - 0.017 mm (0.0003 - 0.0007 in)

Limit

No. 1 and 5 journal: 0.021 mm (0.0008 in)

No. 2, 3 and 4 journal: 0.027 mm (0.0011 in)

- If the calculated value exceeds the limit, select proper main bearing according to main bearing inner diameter and crankshaft main journal diameter to obtain the specified bearing oil clearance. Refer to "HOW TO SELECT MAIN BEARING".

Method of Using Plastigage

- Remove oil and dust on crankshaft main journal and the surfaces of each bearing completely.
- Cut plastigage slightly shorter than the bearing width, and place it in crankshaft axial direction, avoiding oil holes.


- Install main bearings to cylinder block and main bearing caps, and tighten main bearing bolts to the specified torque. Refer to "ASSEMBLY" for the tightening procedure.

CAUTION: Do not rotate crankshaft.

- Remove main bearing caps and bearings, and using scale on plastigage bag, measure the plastigage width.

NOTE: The procedure when the measured value exceeds the limit is same as that described in the "Method by Calculation".

Example

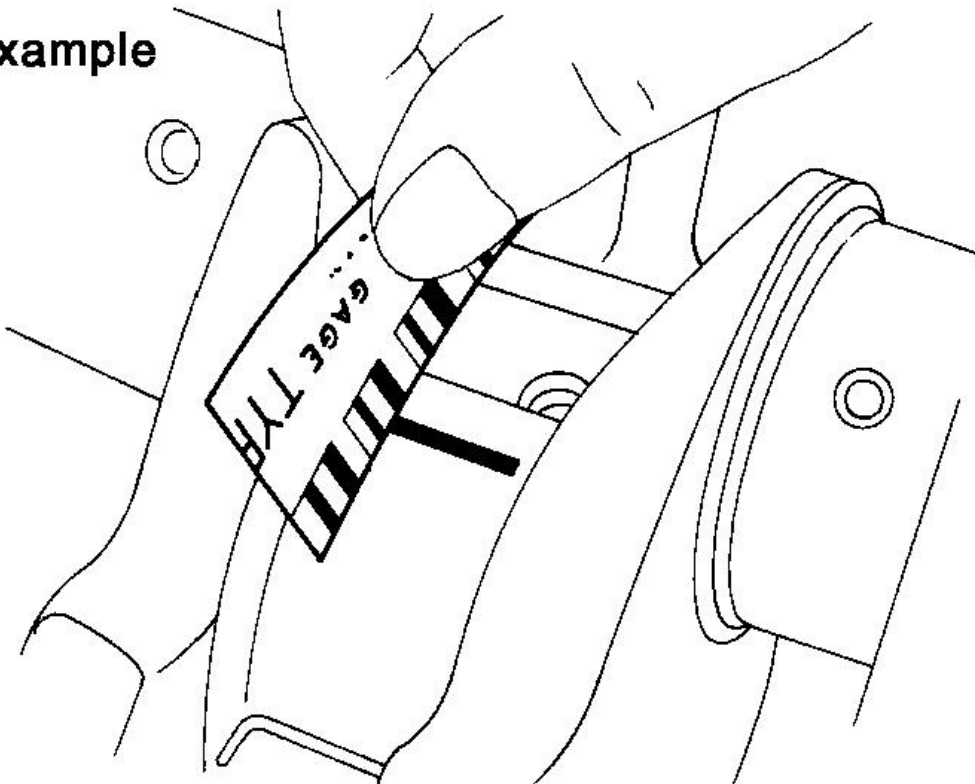

G02370198

Fig. 245: Checking Plastigage Width
Courtesy of NISSAN MOTOR CO., U.S.A.

CRUSH HEIGHT OF MAIN BEARING

- When main bearing cap is removed after being tightened to the specified torque with main bearings installed, the tip end of bearing must protrude. Refer to "ASSEMBLY" for the tightening procedure.

Standard: There must be crush height.

- If out of the standard, replace main bearings.

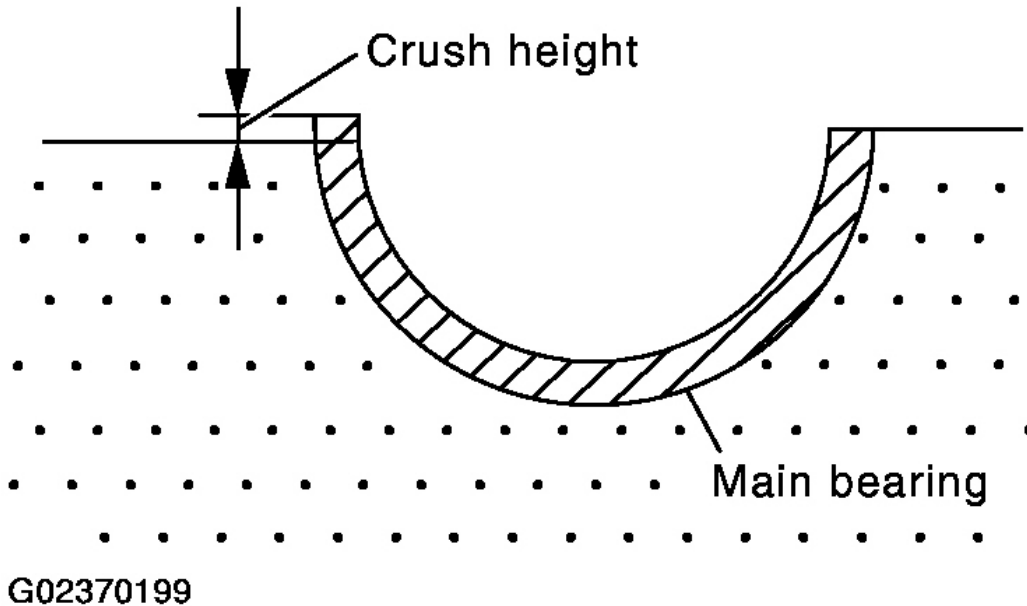


Fig. 246: Identifying Crush Height Of Main Bearing
Courtesy of NISSAN MOTOR CO., U.S.A.

CRUSH HEIGHT OF CONNECTING ROD BEARING

- When connecting rod bearing cap is removed after being tightened to the specified torque with connecting rod bearings installed, the tip end of bearing must protrude. Refer to "ASSEMBLY" for the tightening procedure.

Standard: There must be crush height.

- If out of the standard, replace connecting rod bearings.

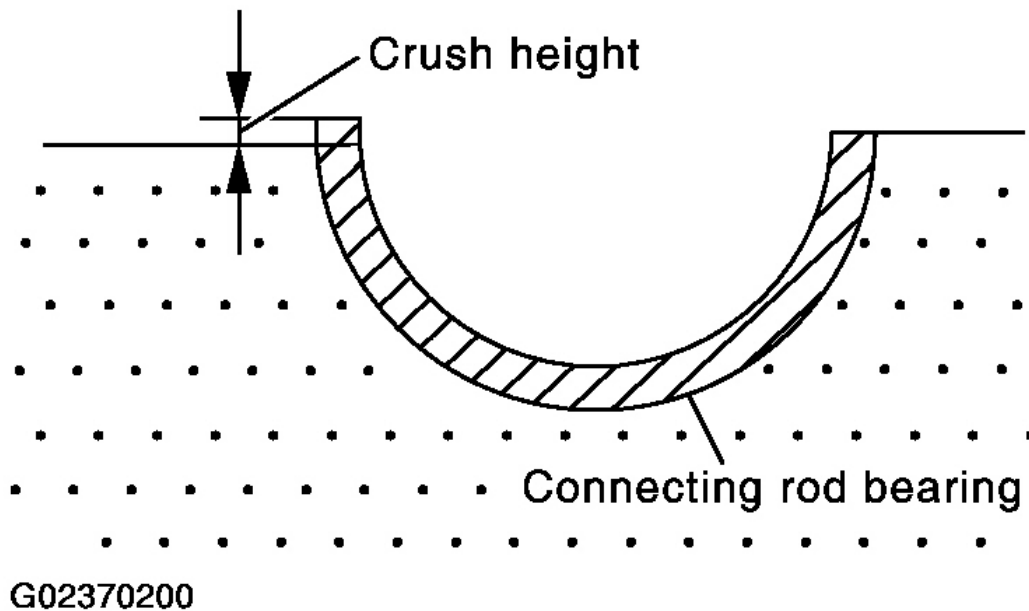


Fig. 247: Identifying Crush Height Of Connecting Rod Bearing
Courtesy of NISSAN MOTOR CO., U.S.A.

DRIVE PLATE

- Check drive plate and signal plate for deformation or cracks.

CAUTION:

- Do not disassemble drive plate.
 - Do not place drive plate with signal plate facing down.
 - When handling signal plate, take care not to damage or scratch it.
 - Handle signal plate in a manner that prevents it from becoming magnetized.
- If anything is found, replace drive plate.

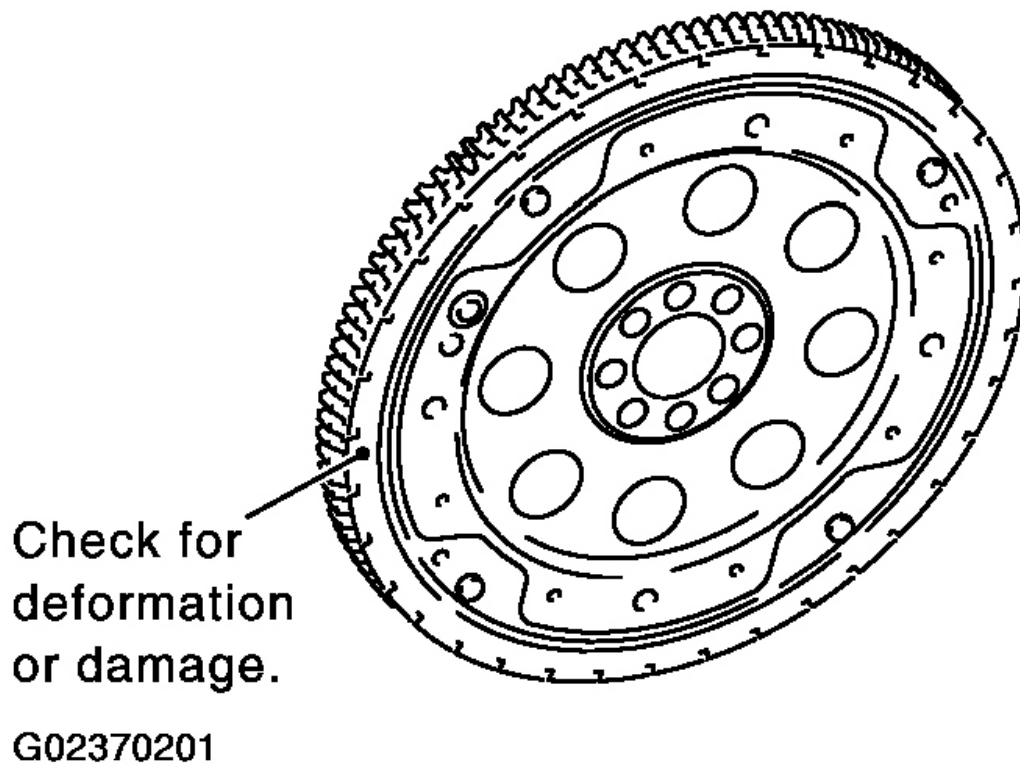


Fig. 248: Identifying Drive Plate
 Courtesy of NISSAN MOTOR CO., U.S.A.

SERVICE DATA AND SPECIFICATIONS (SDS)

STANDARD AND LIMIT



GENERAL SPECIFICATIONS

General Specifications Chart

Cylinder arrangement		V-8
Displacement cm ³ (cu in)		4,494 (274.22)
Bore and stroke mm (in)		93x82.7 (3.66x3.256)
Valve arrangement		DOHC
Firing order		1-8-7-3-6-5-4-2
Number of piston rings	Compression	2
	engine oil	1
Number of main bearings		5

2005 Infiniti Q45

2005 ENGINE Engine Mechanical - Q45

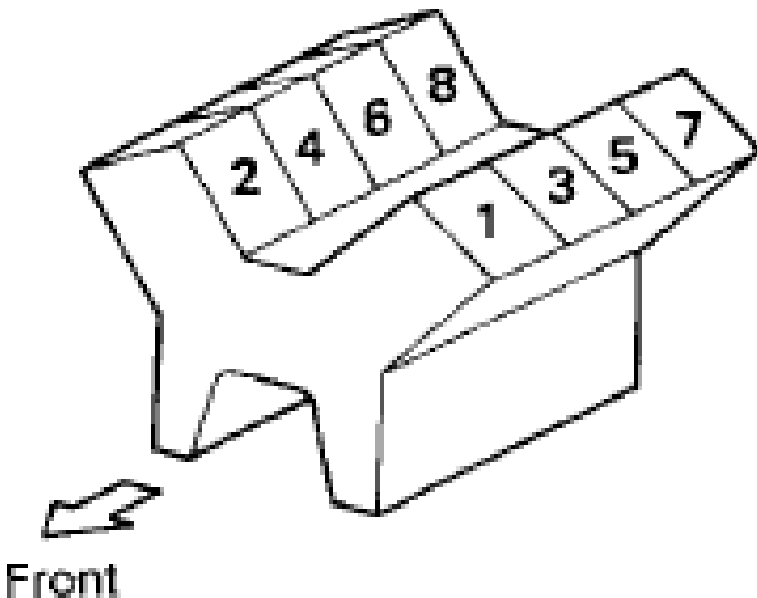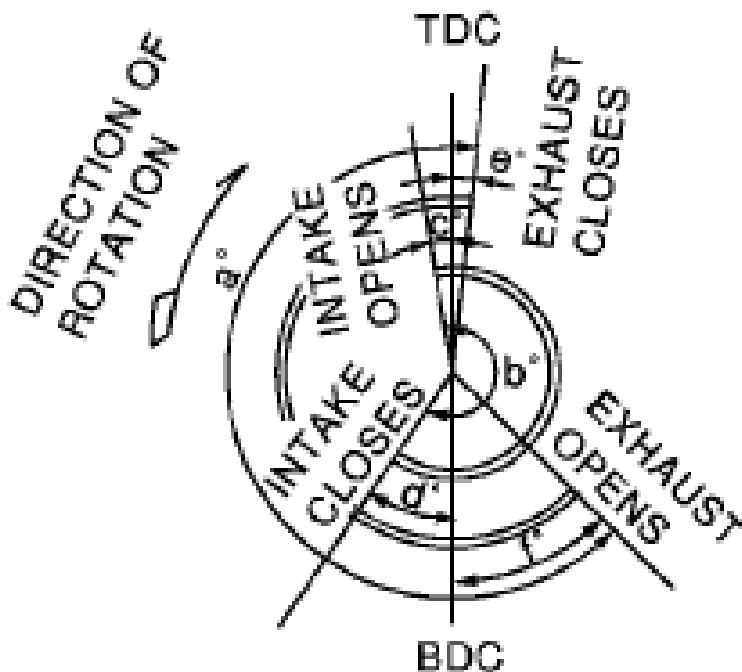Compression ratio		10.5
Compression pressure kPa (kg/cm ² , psi)/300 rpm	Standard	1,320 (13.5, 191)
	Minimum	1,130 (11.5, 164)
	Differential limit between cylinders	98 (1.0, 14)
Cylinder number	 SEM967C	
Valve timing	 PB/C0187E	
Unit: degree		

2005 Infiniti Q45

2005 ENGINE Engine Mechanical - Q45

a	b	c	d	e	f
228	240	0	60	0	48

DRIVE BELTS**DRIVE BELTS SPECIFICATIONS**

Tension of drive belts	Auto adjustment by auto tensioner
------------------------	-----------------------------------

INTAKE MANIFOLD AND EXHAUST MANIFOLD

Unit: mm (in)

Item	Limit
Surface distortion	Intake manifold (upper and lower) 0.1 (0.004)
	Exhaust manifold 0.3 (0.012)

G02370203

Fig. 249: Intake Manifold And Exhaust Manifold Specifications Chart
 Courtesy of NISSAN MOTOR CO., U.S.A.

SPARK PLUG (PLATINUM-TIPPED TYPE)

SPARK PLUG (PLATINUM-TIPPED TYPE)		
Make	NGK	
Type	Standard	PLFR5A-11
	Hot	PLFR4A-11
	Cold	PLFR6A-11
Plug gap (Nominal)	1.1 mm (0.043 in)	


G02370204

Fig. 250: Spark Plug (Platinum-Tipped Type) Specifications Chart
 Courtesy of NISSAN MOTOR CO., U.S.A.

VALVE**Valve Dimensions****VALVE DIMENSIONS SPECIFICATIONS**

Unit: mm (in)

Unit: mm (in)

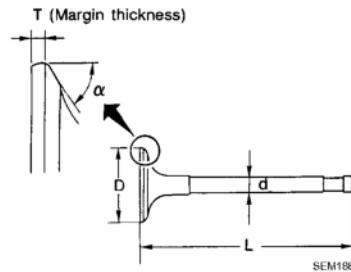

Valve head diameter "D"	Intake	36.0 - 36.3 (1.417 - 1.429)
	Exhaust	31.2 - 31.5 (1.228 - 1.240)
Valve length "L"	Intake	96.57 (3.8020)
	Exhaust	94.50 (3.720)
Valve stem diameter "d"	Intake	5.972 - 5.980 (0.2351 - 0.2354)
	Exhaust	5.962 - 5.970 (0.2347 - 0.2350)
Valve seat angle "α"	Intake	45 degrees 15' - 45 degrees 45'
	Exhaust	
Valve margin "T"	Intake	1.15 - 1.45 (0.0453 - 0.0571)
	Exhaust	1.85 - 2.50 (0.0728 - 0.0846)

G02370205

Fig. 251: Identifying Valve Dimensions
Courtesy of NISSAN MOTOR CO., U.S.A.

Valve Clearance

VALVE CLEARANCE SPECIFICATION

Unit: mm (in)		
Items	Cold	Hot ⁽¹⁾ (reference data)
Intake	0.26 - 0.34 (0.010 - 0.013)	0.304 - 0.416 (0.012 - 0.016)
Exhaust	0.29 - 0.37 (0.011 - 0.015)	0.308 - 0.432 (0.012 - 0.017)
(1) Approximately 80°C (176°F)		

Available Shims


2005 Infiniti Q45**2005 ENGINE Engine Mechanical - Q45**

Thickness mm (in)	Identification mark
2.32 (0.0913)	232
2.33 (0.0917)	233
2.34 (0.0921)	234
2.35 (0.0925)	235
2.36 (0.0929)	236
2.37 (0.0933)	237
2.38 (0.0937)	238
2.39 (0.0941)	239
2.40 (0.0945)	240
2.41 (0.0949)	241
2.42 (0.0953)	242
2.43 (0.0957)	243
2.44 (0.0961)	244
2.45 (0.0965)	245
2.46 (0.0969)	246
2.47 (0.0972)	247
2.48 (0.0976)	248
2.49 (0.0980)	249
2.50 (0.0984)	250
2.51 (0.0988)	251
2.52 (0.0992)	252
2.53 (0.0996)	253
2.54 (0.1000)	254
2.55 (0.1004)	255
2.56 (0.1008)	256
2.57 (0.1012)	257
2.58 (0.1016)	258
2.59 (0.1020)	259
2.60 (0.1024)	260
2.61 (0.1028)	261
2.62 (0.1031)	262
2.63 (0.1035)	263
2.64 (0.1039)	264
2.65 (0.1043)	265
2.66 (0.1047)	266
2.67 (0.1051)	267
2.68 (0.1055)	268

G02370206

Fig. 252: Shims Thickness Specification Chart (1 Of 2)**Courtesy of NISSAN MOTOR CO., U.S.A.**

Thickness mm (in)	Identification mark
2.69 (0.1059)	269
2.70 (0.1063)	270
2.71 (0.1067)	271
2.72 (0.1071)	272
2.73 (0.1075)	273
2.74 (0.1079)	274
2.75 (0.1083)	275
2.76 (0.1087)	276
2.77 (0.1091)	277
2.78 (0.1094)	278
2.79 (0.1098)	279
2.80 (0.1102)	280
2.81 (0.1106)	281
2.82 (0.1110)	282
2.83 (0.1114)	283
2.84 (0.1118)	284
2.85 (0.1122)	285
2.86 (0.1126)	286
2.87 (0.1130)	287
2.88 (0.1134)	288
2.89 (0.1138)	289
2.90 (0.1142)	290
2.91 (0.1146)	291
2.92 (0.1150)	292
2.93 (0.1154)	293
2.94 (0.1157)	294
2.95 (0.1161)	295

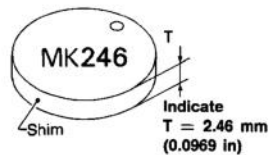

G02370207

Fig. 253: Shims Thickness Specification Chart (2 Of 2)
 Courtesy of NISSAN MOTOR CO., U.S.A.

Valve Lifter

VALVE LIFTER DIAMETER AND CLEARANCE SPECIFICATION

Unit: mm (in)	
Items	Standard
Valve lifter outer diameter	33.965 - 33.975 (1.3372 - 1.3376)
Valve lifter hole diameter	34.000 - 34.016 (1.3386 - 1.3392)
Valve lifter clearance	0.025 - 0.051 (0.0010 - 0.0020)

2005 Infiniti Q45

2005 ENGINE Engine Mechanical - Q45

Valve Spring


Free height	mm (in)	46.35 - 46.85 (1.8247 - 1.8444)
Load	N (kg, lb) at height mm (in)	165 - 189 (16.8 - 19.3, 37 - 42) at 33.8 (1.331)
	Valve open	290 - 330 (29.6 - 33.7, 65 - 74) at 24.4 (0.961)
Squareness	mm (in)	Limit 2.0 (0.079)

G02370208

Fig. 254: Valve Spring Specification Chart
Courtesy of NISSAN MOTOR CO., U.S.A.

Valve Guide

Unit: mm (in)

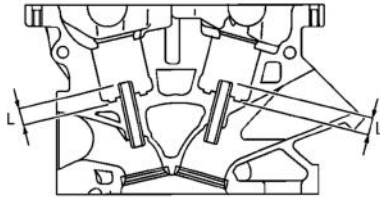

Items		Standard	Service
Valve guide	Outer diameter	10.023 - 10.034 (0.3946 - 0.3950)	10.223 - 10.234 (0.4025 - 0.4029)
	Inner diameter (Finished size)	6.000 - 6.018 (0.2362 - 0.2369)	
Cylinder head valve guide hole diameter		9.975 - 9.996 (0.3927 - 0.3935)	10.175 - 10.196 (0.4006 - 0.4014)
Interference fit of valve guide		0.027 - 0.059 (0.0011 - 0.0023)	
Valve guide clearance		Standard	Limit
	Intake	0.020 - 0.046 (0.0008 - 0.0018)	0.08 (0.003)
	Exhaust	0.030 - 0.056 (0.0012 - 0.0022)	0.10 (0.004)
Projection length "L"	Intake	10.1 - 10.3 (0.398 - 0.406)	—
	Exhaust	10.0 - 10.4 (0.394 - 0.409)	—

G02370209


Fig. 255: Valve Guide Specification Chart
Courtesy of NISSAN MOTOR CO., U.S.A.

Valve Seat

2005 Infiniti Q45

2005 ENGINE Engine Mechanical - Q45

Unit: mm (in)

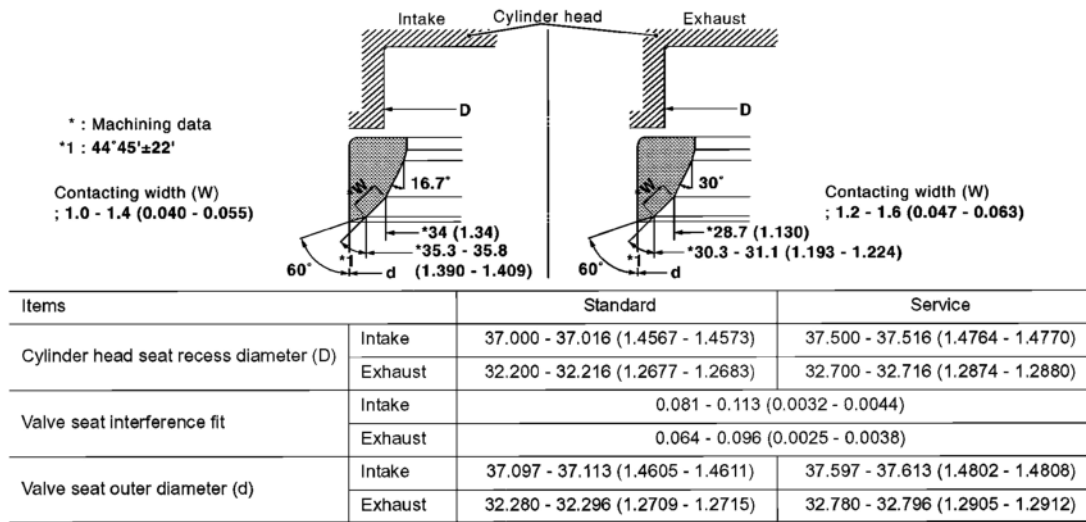


G02370210

Fig. 256: Valve Seat Specification Chart
 Courtesy of NISSAN MOTOR CO., U.S.A.

CAMSHAFT AND CAMSHAFT BEARING

Unit: mm (in)

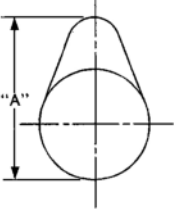Items		Standard	Limit
Camshaft runout [TIR*]		—	0.02 (0.0008)
			
Cam height "A"	Intake	44.865 - 45.055 (1.7663 - 1.7738)	Cam wear 0.2 (0.008)
	Exhaust	43.925 - 44.115 (1.7293 - 1.7368)	
Camshaft journal outer diameter	No.1	25.938 - 25.955 (1.0212 - 1.0218)	—
	No.2, 3, 4, 5	25.953 - 25.970 (1.0218 - 1.0224)	—
Camshaft bracket inner diameter		26.000 - 26.021 (1.0236 - 1.0244)	—
Camshaft journal oil clearance	No.1	0.045 - 0.083 (0.0018 - 0.0033)	—
	No.2, 3, 4, 5	0.030 - 0.068 (0.0012 - 0.0027)	—
Camshaft end play		0.115 - 0.188 (0.0045 - 0.0074)	—
Camshaft sprocket runout [TIR*]		—	0.15 (0.0059)

*: Total indicator reading

G02370211


Fig. 257: Camshaft And Camshaft Bearing Specification Chart

Courtesy of NISSAN MOTOR CO., U.S.A.

CYLINDER HEAD

Unit: mm (in)

Items	Standard	Limit
Cylinder head distortion	Less than 0.03 (0.0012)	0.1 (0.004)

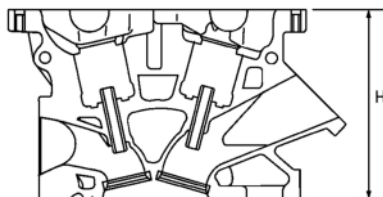


Nominal cylinder head height:
H = 126.4 mm (4.98 in)

G02370212

Fig. 258: Cylinder Head Specification Chart
Courtesy of NISSAN MOTOR CO., U.S.A.

CYLINDER BLOCK

Unit: mm (in)

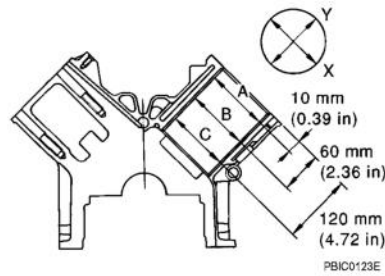

Distortion	Standard			Less than 0.03 (0.0012)
	Limit			0.1 (0.004)
Cylinder bore	Inner diameter	Standard	Grade No. 1	93.000 - 93.010 (3.6614 - 3.6618)
			Grade No. 2	93.010 - 93.020 (3.6618 - 3.6622)
			Grade No. 3	93.020 - 93.030 (3.6622 - 3.6626)
		Wear limit		0.20 (0.0079)
Out-of-round (Difference between "X" and "Y")				0.015 (0.0006)
Taper (Difference between "A" and "C")				0.010 (0.0004)
Cylinder block main bearing housing inner diameter grade (Without bearing)	Grade No. A			68.944 - 68.945 (2.7143 - 2.7144)
	Grade No. B			68.945 - 68.946 (2.7144 - 2.7144)
	Grade No. C			68.946 - 68.947 (2.7144 - 2.7144)
	Grade No. D			68.947 - 68.948 (2.7144 - 2.7145)
	Grade No. E			68.948 - 68.949 (2.7145 - 2.7145)
	Grade No. F			68.949 - 68.950 (2.7145 - 2.7146)
	Grade No. G			68.950 - 68.951 (2.7146 - 2.7146)
	Grade No. H			68.951 - 68.952 (2.7146 - 2.7146)
	Grade No. J			68.952 - 68.953 (2.7146 - 2.7147)
	Grade No. K			68.953 - 68.954 (2.7147 - 2.7147)
	Grade No. L			68.954 - 68.955 (2.7147 - 2.7148)
	Grade No. M			68.955 - 68.956 (2.7148 - 2.7148)
	Grade No. N			68.956 - 68.957 (2.7148 - 2.7148)
	Grade No. P			68.957 - 68.958 (2.7148 - 2.7149)
	Grade No. R			68.958 - 68.959 (2.7149 - 2.7149)
	Grade No. S			68.959 - 68.960 (2.7149 - 2.7150)
	Grade No. T			68.960 - 68.961 (2.7150 - 2.7150)
	Grade No. U			68.961 - 68.962 (2.7150 - 2.7150)
	Grade No. V			68.962 - 68.963 (2.7150 - 2.7151)
	Grade No. W			68.963 - 68.964 (2.7151 - 2.7151)
	Grade No. X			68.964 - 68.965 (2.7151 - 2.7152)
	Grade No. Y			68.965 - 68.966 (2.7152 - 2.7152)
	Grade No. 1			68.966 - 68.967 (2.7152 - 2.7152)
	Grade No. 2			68.967 - 68.968 (2.7152 - 2.7153)
Difference in inner diameter between cylinders	Standard			0.03 (0.0012)

G02370213

Fig. 259: Cylinder Block Specification Chart
Courtesy of NISSAN MOTOR CO., U.S.A.


PISTON, PISTON RING AND PISTON PIN

Available Piston

2005 Infiniti Q45

2005 ENGINE Engine Mechanical - Q45

Unit: mm (in)

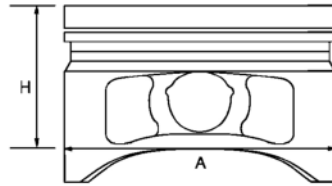

Piston skirt diameter "A"	Standard	Grade No. 1	92.980 - 92.990 (3.6606 - 3.6610)
		Grade No. 2	92.990 - 93.000 (3.6610 - 3.6614)
		Grade No. 3	93.000 - 93.010 (3.6614 - 3.6618)
	0.20 (0.008) oversize (Service)		93.180 - 93.210 (3.6685 - 3.6697)
"H" dimension			42 (1.65)
Piston pin hole diameter	Grade No.0		21.993 - 21.999 (0.8659 - 0.8661)
	Grade No.1		21.999 - 22.005 (0.8661 - 0.8663)
Piston to cylinder bore clearance	Standard		0.010 - 0.030 (0.0004 - 0.0012)
	Limit		0.08 (0.0031)

G02370214

Fig. 260: Piston Specification Chart
Courtesy of NISSAN MOTOR CO., U.S.A.

Piston Ring

Unit: mm (in)

Items		Standard	Limit
Side clearance	Top	0.045 - 0.080 (0.0018 - 0.0031)	0.11 (0.0043)
	2nd	0.030 - 0.070 (0.0012 - 0.0028)	0.10 (0.0039)
	Oil ring	0.065 - 0.135 (0.0026 - 0.0053)	—
End gap	Top	0.22 - 0.32 (0.0087 - 0.0126)	0.56 (0.0220)
	2nd	0.22 - 0.32 (0.0087 - 0.0126)	0.56 (0.0220)
	Oil (rall ring)	0.20 - 0.50 (0.0079 - 0.0197)	0.86 (0.0339)

G02370215

Fig. 261: Piston Ring Specification Chart
Courtesy of NISSAN MOTOR CO., U.S.A.

Piston Pin

Unit: mm (in)

Piston pin outer diameter	Grade No.0	21.989 - 21.995 (0.8657 - 0.8659)
	Grade No.1	21.995 - 22.001 (0.8659 - 0.8662)
Piston to piston pin clearance	Standard	0.002 - 0.006 (0.0001 - 0.0002)
Connecting rod bushing oil clearance	Standard	0.005 - 0.017 (0.0002 - 0.0007)

G02370216

Fig. 262: Piston Pin Specification Chart
 Courtesy of NISSAN MOTOR CO., U.S.A.

CONNECTING ROD

Unit: mm (in.)

Center distance		146.95 - 147.05 (5.79 - 5.79)
Bend [per 100 (3.94)]	Limit	0.15 (0.0059)
Torsion [per 100 (3.94)]	Limit	0.30 (0.0118)
Connecting rod bushing inner diameter*	Grade No. 0	22.000 - 22.006 (0.8661 - 0.8664)
	Grade No. 1	22.006 - 22.012 (0.8664 - 0.8666)
Connecting rod big end inner diameter		55.000 - 55.013 (2.1654 - 2.1659)
Side clearance	Standard	0.20 - 0.35 (0.0079 - 0.0138)
	Limit	0.40 (0.0157)

*: After installing in connecting rod

G02370217

Fig. 263: Connecting Rod Specification Chart
 Courtesy of NISSAN MOTOR CO., U.S.A.

CRANKSHAFT

2005 Infiniti Q45

2005 ENGINE Engine Mechanical - Q45

Unit: mm (in)

Crankshaft main journal diameter. "Dm" grade (No.1 and 5)	Grade No. G	63.963 - 63.964 (2.5182 - 2.5183)
	Grade No. H	63.962 - 63.963 (2.5182 - 2.5182)
	Grade No. J	63.961 - 63.962 (2.5181 - 2.5182)
	Grade No. K	63.960 - 63.961 (2.5181 - 2.5181)
	Grade No. L	63.959 - 63.960 (2.5181 - 2.5181)
	Grade No. M	63.958 - 63.959 (2.5180 - 2.5181)
	Grade No. N	63.957 - 63.958 (2.5180 - 2.5180)
	Grade No. P	63.956 - 63.957 (2.5179 - 2.5180)
	Grade No. R	63.955 - 63.956 (2.5179 - 2.5179)
	Grade No. S	63.954 - 63.955 (2.5179 - 2.5179)
	Grade No. T	63.953 - 63.954 (2.5178 - 2.5179)
	Grade No. U	63.952 - 63.953 (2.5178 - 2.5178)
	Grade No. V	63.951 - 63.952 (2.5178 - 2.5178)
	Grade No. W	63.950 - 63.951 (2.5177 - 2.5178)
	Grade No. X	63.949 - 63.950 (2.5177 - 2.5177)
	Grade No. Y	63.948 - 63.949 (2.5176 - 2.5177)
	Grade No. 1	63.947 - 63.948 (2.5176 - 2.5176)
	Grade No. 2	63.946 - 63.947 (2.5176 - 2.5176)
	Grade No. 3	63.945 - 63.946 (2.5175 - 2.5176)
	Grade No. 4	63.944 - 63.945 (2.5175 - 2.5175)
Crankshaft main journal diameter. "Dm" grade (No.2, 3 and 4)	Grade No. 5	63.943 - 63.944 (2.5174 - 2.5175)
	Grade No. 6	63.942 - 63.943 (2.5174 - 2.5174)
	Grade No. 7	63.941 - 63.942 (2.5174 - 2.5174)
	Grade No. 9	63.940 - 63.941 (2.5173 - 2.5174)
	Grade No. A	63.963 - 63.964 (2.5182 - 2.5183)
	Grade No. B	63.962 - 63.963 (2.5182 - 2.5182)
	Grade No. C	63.961 - 63.962 (2.5181 - 2.5182)
	Grade No. D	63.960 - 63.961 (2.5181 - 2.5181)
	Grade No. E	63.959 - 63.960 (2.5181 - 2.5181)
	Grade No. F	63.958 - 63.959 (2.5180 - 2.5181)
	Grade No. G	63.957 - 63.958 (2.5180 - 2.5180)
	Grade No. H	63.956 - 63.957 (2.5179 - 2.5180)
	Grade No. J	63.955 - 63.956 (2.5179 - 2.5179)
	Grade No. K	63.954 - 63.955 (2.5179 - 2.5179)
	Grade No. L	63.953 - 63.954 (2.5178 - 2.5179)
	Grade No. M	63.952 - 63.953 (2.5178 - 2.5178)
	Grade No. N	63.951 - 63.952 (2.5178 - 2.5178)
	Grade No. P	63.950 - 63.951 (2.5177 - 2.5178)
	Grade No. R	63.949 - 63.950 (2.5177 - 2.5177)
	Grade No. S	63.948 - 63.949 (2.5176 - 2.5177)
	Grade No. T	63.947 - 63.948 (2.5176 - 2.5176)
	Grade No. U	63.946 - 63.947 (2.5176 - 2.5176)
	Grade No. V	63.945 - 63.946 (2.5175 - 2.5176)
	Grade No. W	63.944 - 63.945 (2.5175 - 2.5175)
	Grade No. X	63.943 - 63.944 (2.5174 - 2.5175)
	Grade No. Y	63.942 - 63.943 (2.5174 - 2.5174)
	Grade No. 1	63.941 - 63.942 (2.5174 - 2.5174)
	Grade No. 2	63.940 - 63.941 (2.5173 - 2.5174)


G02370218

Fig. 264: Crankshaft Specification Chart (1 Of 2)
Courtesy of NISSAN MOTOR CO., U.S.A.


2005 Infiniti Q45

2005 ENGINE Engine Mechanical - Q45

Crankshaft pin journal diameter. "Dp"	Grade No. 0	51.968 - 51.974 (2.0460 - 2.0462)
	Grade No. 1	51.962 - 51.968 (2.0457 - 2.0460)
	Grade No. 2	51.956 - 51.962 (2.0455 - 2.0457)
Center distance "r"		41.31 - 41.39 (1.6264 - 1.6295)
Out-of-round (Difference between "X" and "Y")	Limit	0.015 (0.0006)
Taper (Difference between "A" and "B")	Limit	0.010 (0.0004)
Runout [TIR*]	Limit	0.10 (0.0039)
End play	Standard	0.10 - 0.25 (0.0039 - 0.0098)
	Limit	0.30 (0.0118)

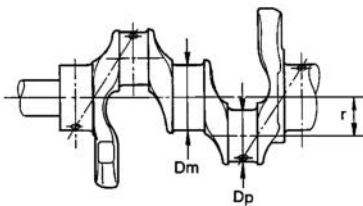

Out-of-round : Difference between X and Y.
Taper : Difference between A and B.

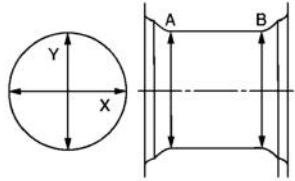


*: Total indicator reading

G02370219

Fig. 265: Crankshaft Specification Chart (2 Of 2)
Courtesy of NISSAN MOTOR CO., U.S.A.

MAIN BEARING

Unit: mm (in)

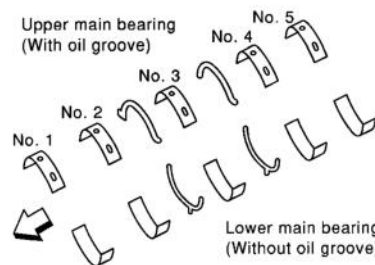

Grade number	Thickness	Identification color	Remarks
0	2.483 - 2.486 (0.0978 - 0.0979)	Black	Grade and color are the same for upper and lower bearings.
1	2.486 - 2.489 (0.0979 - 0.0980)	Brown	
2	2.489 - 2.492 (0.0980 - 0.0981)	Green	
3	2.492 - 2.495 (0.0981 - 0.0982)	Yellow	
4	2.495 - 2.498 (0.0982 - 0.0983)	Blue	
5	2.498 - 2.501 (0.0983 - 0.0985)	Pink	
6	2.501 - 2.504 (0.0985 - 0.0986)	Purple	
7	2.504 - 2.507 (0.0986 - 0.0987)	White	
8	2.507 - 2.510 (0.0987 - 0.0988)	Red	

G02370220

2005 Infiniti Q45

2005 ENGINE Engine Mechanical - Q45

Fig. 266: Main Bearing Specification Chart (1 Of 2)

Courtesy of NISSAN MOTOR CO., U.S.A.

01	UPR	2.483 - 2.486 (0.0978 - 0.0979)	Black	Grade and color are different for upper and lower bearings.
	LWR	2.486 - 2.489 (0.0979 - 0.0980)	Brown	
12	UPR	2.486 - 2.489 (0.0979 - 0.0980)	Brown	
	LWR	2.489 - 2.492 (0.0980 - 0.0981)	Green	
23	UPR	2.489 - 2.492 (0.0980 - 0.0981)	Green	
	LWR	2.492 - 2.495 (0.0981 - 0.0982)	Yellow	
34	UPR	2.492 - 2.495 (0.0981 - 0.0982)	Yellow	
	LWR	2.495 - 2.498 (0.0982 - 0.0983)	Blue	
45	UPR	2.495 - 2.498 (0.0982 - 0.0983)	Blue	
	LWR	2.498 - 2.501 (0.0983 - 0.0985)	Pink	
56	UPR	2.498 - 2.501 (0.0983 - 0.0985)	Pink	
	LWR	2.501 - 2.504 (0.0985 - 0.0986)	Purple	
67	UPR	2.501 - 2.504 (0.0985 - 0.0986)	Purple	
	LWR	2.504 - 2.507 (0.0986 - 0.0987)	White	
78	UPR	2.504 - 2.507 (0.0986 - 0.0987)	White	
	LWR	2.507 - 2.510 (0.0987 - 0.0988)	Red	

G02370221

Fig. 267: Main Bearing Specification Chart (2 Of 2)

Courtesy of NISSAN MOTOR CO., U.S.A.

Undersize

MAIN BEARING UNDERSIZE THICKNESS SPECIFICATION

Unit: mm (in)		
Undersize	Thickness	Main journal diameter
0.25 (0.0098)	2.618 - 2.626 (0.1031 - 0.1034)	Grind so that bearing clearance is the specified value.

Bearing Oil Clearance

Unit: mm (in)

Main bearing oil clearance	Standard	No.1 and 5	0.001 - 0.011 (0.00004 - 0.0004)
		No.2, 3 and 4	0.007 - 0.017 (0.0003 - 0.0007)
	Limit	No.1 and 5	0.021 (0.0008)
		No.2, 3 and 4	0.027 (0.0011)

G02370222

Fig. 268: Bearing Oil Clearance Specification Chart

Courtesy of NISSAN MOTOR CO., U.S.A.

CONNECTING ROD BEARING

CONNECTING ROD BEARING SPECIFICATION

Grade number	Thickness "T" mm (in)	Identification color (mark)
--------------	-----------------------	-----------------------------

2005 Infiniti Q45

2005 ENGINE Engine Mechanical - Q45

0	1.500 - 1.503 (0.0591 - 0.0592)	No color
1	1.503 - 1.506 (0.0592 - 0.0593)	Brown
2	1.506 - 1.509 (0.0593 - 0.0594)	Green

Undersize**CONNECTING ROD BEARING UNDERSIZE THICKNESS SPECIFICATION**

Unit: mm (in)		
Undersize	Thickness	Crankshaft pin journal diameter "Dp"
0.25 (0.0098)	1.626 - 1.634 (0.0640 - 0.0643)	Grind so that bearing clearance is the specified value.

Bearing Oil Clearance

Unit: mm (in)

Connecting rod bearing oil clearance	Standard	0.020 - 0.045 (0.0008 - 0.0018)
	Limit	0.055 (0.0022)

G02370223

Fig. 269: Bearing Oil Clearance Specification Chart
Courtesy of NISSAN MOTOR CO., U.S.A.