

2011 ENGINE**2.8L Diesel - Service Information - Grand Caravan, Town & Country****DESCRIPTION****DESCRIPTION**

The 2.8L (2776cc) four-cylinder "common rail" direct injection engine is an in-line overhead valve design. The engine utilizes a cast iron cylinder block. The engine has a one piece aluminum cylinder head with four valves per cylinder and dual overhead cam shafts. The 2.8L is turbocharged, intercooled and also equipped with a EGR cooler.

The identification stamp for the 2.8L is located on the right side of the engine block, below the turbocharger. The engine code label is located on the front timing cover and is the same as the engine I.D. and serial number. There is also a fuel system label on the front timing cover used for fuel system identification during ECM programming.

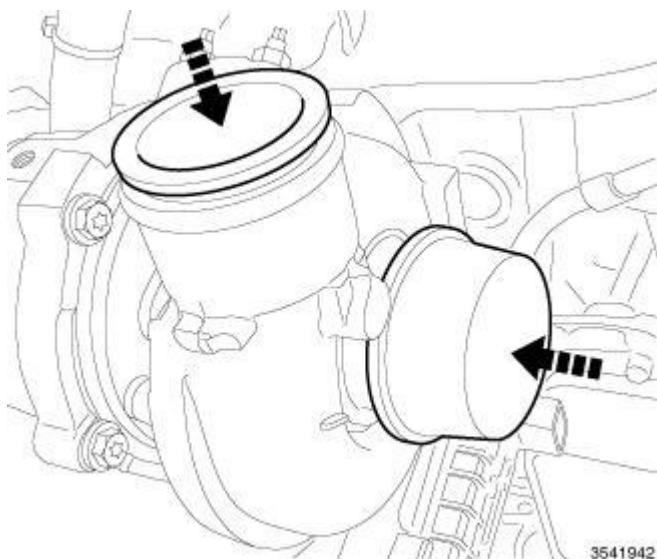
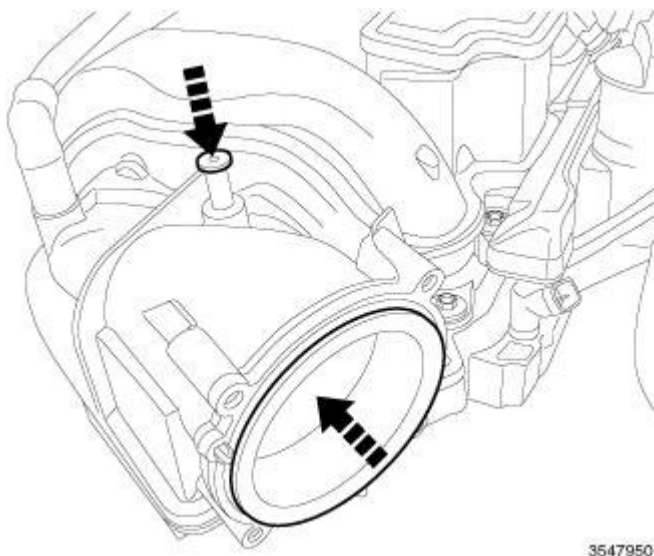
STANDARD PROCEDURE**DUST COVERS AND CAPS**

Fig. 1: Covers/Caps


Courtesy of CHRYSLER LLC

Due to the high amounts of failures caused by dust, dirt, moisture and other foreign debris being introduced to the engine during service. Covers or caps are needed to reduce the possible damage that can be caused or created.

**Fig. 2: Opening Cover**

Courtesy of CHRYSLER LLC

Covers over openings will reduce any possibilities for foreign materials to enter the engine systems. Using miller tool (special tool #10368, Set, Universal Protective Cap), Select the appropriated cover needed to the procedure.

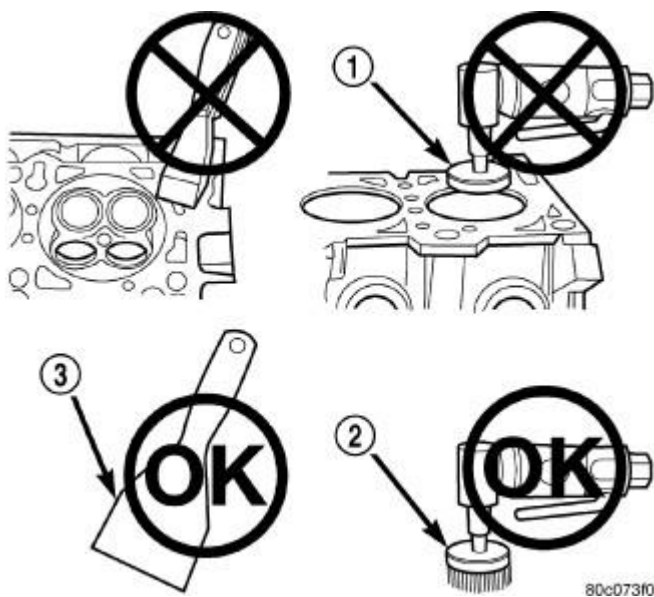ENGINE GASKET SURFACE PREPARATION**Fig. 3: Preparing Engine Gasket Surfaces**

Courtesy of CHRYSLER LLC

1 - ABRASIVE PAD

2 - 3M ROLOC™ BRISTLE DISC

3 - PLASTIC SCRAPER

To ensure engine gasket sealing, proper surface preparation must be performed, especially with the use of aluminum engine components and multi-layer steel cylinder head gaskets.

Never use the following to clean gasket surfaces:

- Metal scraper
- Abrasive pad or paper to clean cylinder block and head
- High speed power tool with an abrasive pad (1), 3M Roloc™ Bristle Disc (2), or a wire brush (3)

NOTE: **Multi-Layer Steel (MLS) head gaskets require a scratch free sealing surface.**

Only use the following for cleaning gasket surfaces:

- Solvent or a commercially available gasket remover
- Plastic scraper
- Sealing surfaces must be free of grease or oil residue. Clean surfaces with Mopar® brake parts cleaner (or equivalent)

COMPRESSION TEST

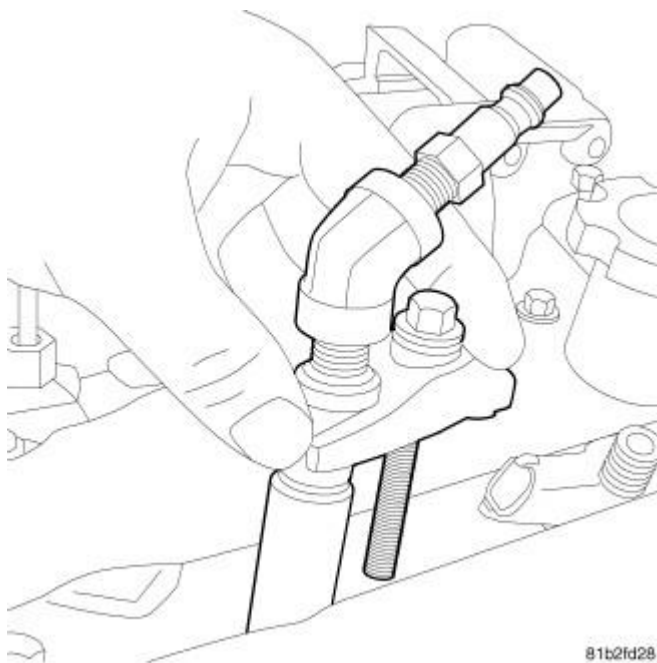


Fig. 4: Compression Tester
Courtesy of CHRYSLER LLC

1. Warm up the engine to operating temperature (approximately 80 degrees C).
2. Shut off the engine.
3. Disable the low pressure fuel pump.
4. Remove the fuel injectors. Refer to **INJECTOR(S), FUEL, REMOVAL** .

5. Cranks the engine with the starter to remove combustion residue in the cylinders.
6. Install the (special tool #VM.10010, Adapter, Compression Test) into the fuel injector bore of the cylinder to be tested. Install the fuel injector retainer, bolt and securely tighten.
7. Test compression pressure by cranking the engine with the starter for at least eight revolutions.

Cylinder compression Difference Between Cylinders 10 Bar (145 psi)

8. Measure the pressure in all of the cylinders.
9. Remove the (special tool #VM.10010, Adapter, Compression Test).
10. Install the fuel injectors. Refer to **INJECTOR(S), FUEL, INSTALLATION**.

SPECIFICATIONS

ENGINE INFORMATION

2.8L Engine Specifications	
Engine	2.8L RT
Engine Type	2.8L - 16 Valves
Displacement	2777 cc
Bore	94.00
Stroke	100.05
Power (VGT)	120 kW (177CV) @ 3800 RPM
Torque (ATX)	460 N.m @ 1800RPM
Cylinders	4 In line
Injection Order	1-3-4-2
Compression Ratio	17.0:1
Vacuum at idle	680 mm/HG (27.5 In/HG)
Idle Speed (ATX)	765 +/- 50 RPM
Maximum RPM in Gear	4500 RPM
Maximum RPM in neutral	ATX 2800
Belt tension	Automatic Belt Tensioner
Thermostat opening	80°C +/- 2°C
Generator Rating	Denso 12V-220A
Glow Plug	4.4V
Emissions Level	EU4
Block configuration/Material	Open/Cast Iron
Cylinder Head	Dual Overhead Cam
Timing System	Belt
Fuel System	CP3.2+ 1, 600 bar Fuel Pump, Piezo Injectors
Fuel Supply	Electric Fuel Pump In the Fuel Tank
Electronic Control Unit	EDC 16

2011 Dodge Grand Caravan R/T

2011 ENGINE 2.8L Diesel - Service Information - Grand Caravan, Town & Country

Timing System	Belt Driven DOHC Overhead Camshaft
Air Intake	Dry Filter With turbocharger and Charge Air Cooler
Fuel System	Direct Fuel Injection Common Rail System
Emission devices	Cooled EGR (pneumatic) Electric Intake Throttle Fast Metallic Glow plugs
Combustion Cycle	4 Stroke
Cylinder Compression Difference Between Cylinders	10 bar (145 psi)
Cooling System	Water Cooling
Pressure Cap Setting	14 psi
Turbocharger	Single VGT with REA
Intake Ports	Aluminum heads with traditional dual side intake and exhaust ports. One intake port is helical and the other has a directed entry.
Crankshaft	8 Counterweights with an incorporated balance shaft gear.
Camshafts	2 overhead camshafts with axial front bearings and identical camshaft caps, finger followers, and hydraulic lifters.
Intake AND Exhaust Valves	Flat with fire deck face.
Intake Manifold	Aluminum, with Cast-in EGR passages, intake mixer, vacuum actuated EGR valve, electric intake throttle and a U-type EGR cooler
Lubrication	Pressure Lubricated By Rotary Pump
Minimum Oil Pressure (warm)	0.7 BAR (10 psi) at idle / 2.5 BAR (36 psi) at 3800 RPM
Engine Rotation	Clockwise Viewed From Front Cover

2.8L Engine Specifications**Cylinder Head**

Cylinder head height	135.5 mm (5.334 in.)
Cylinder head flatness deformation tolerance	0.075 mm (0.003 in.)

Cylinder Head Gasket Thickness

0 Hole	1.10 mm (0.043 in.)
1 Hole	1.20 mm (0.047 in.)
2 Holes	1.30 mm (0.051 in.)

Intake Manifold

Intake manifold flatness deformation tolerance	0.15 mm (0.006 in.)
--	---------------------

Exhaust Manifold

Exhaust manifold flatness deformation tolerance	0.1 mm (0.004 in.)
---	--------------------

Tappets

Hydraulic tappet outside diameters	11.994 mm +/- 0.06 mm (0.472 in +/- 0.002)
------------------------------------	--

Valves

Intake valve face angle	45°30'
Exhaust valve face angle	45°30'

2011 Dodge Grand Caravan R/T

2011 ENGINE 2.8L Diesel - Service Information - Grand Caravan, Town & Country

Intake Valve Head Diameter	32 mm (1.25 in.)
Exhaust Valve Head Diameter	29.4 mm (1.15 in.)
Intake Valve Stem Diameter	5.97 mm (0.235 in.)
Exhaust Valve Stem Diameter	5.96 mm (0.235 in.)
Intake Valve Guide Stem Clearance	
Min	0.030 mm (0.0012 in.)
Max	0.060 mm (0.0024 in.)
Exhaust Valve Guide Stem Clearance	
Min	0.040 mm (0.0016 in.)
Max	0.070 mm (0.0028 in.)
Valve Springs	
Free Length	50.8 mm (2 in.)
Closed Valve	38 mm (1.49 in.)
Opened Valve	29 mm (1.14 in.)
Camshafts	
Camshaft End Play	
Min	0.150 mm (0.006 in.)
Max	0.350 mm (0.013 in.)
Outer Journal Diameter (at crankshaft)	25.95 mm +/- 0.01 mm (1.021 mm +/- .0004 in)
Inner Journal Diameter (at cylinder head)	26.00 mm + 0.015 mm (1.027 mm +/- .0006 in)
Crankshaft Journal Clearance	
Max	0.075 mm (0.003 in.)
Min	0.030 mm (0.0012 in.)
Connecting Rods	
Connecting Rod Diameter (Small End)	32 mm (1.26 in.)
Connecting Rod Diameter (Large End)	57.563 mm (2.266 in.)
Piston Pin	
Diameter	32 mm (1.26 in.)
Length: Mahle Mondial	70.7 mm - 71.00 mm (2.78 in - 2.79 in.)
Length: Federal Mogul	74 mm (2.9 in.)
Crankshaft	
End Play	0.1 mm - 0.34 mm (0.004 in. - 0.013 in.)
Bearing Selection. Refer to BEARING SELECTION CHARTS .	
Engine Block	
Cylinder Bore Internal Diameter	94 mm (3.700 in.)
Cylinder Bore Out-Of-Round (Roundness)	0.009 mm (0.0003 in.)
Oversized Piston	+0.40 mm (+0.015 in.)
Fuel System	
Injection Pressure	CRS 3.0 - 1600 Bar (23.206 psi)
High Pressure Pump	CP3.2+
ECU	EDC16CP31

2011 Dodge Grand Caravan R/T

2011 ENGINE 2.8L Diesel - Service Information - Grand Caravan, Town & Country

	Piezo CRI 3.0
Glow Plugs	
Make/Type	Bosch / GLP2
Voltage	4.4V
Lubrication System	
Oil Pump Outer Rotor End Play	
Min	0.01 (0.0004 in.)
Max	0.09 (0.0036 in.)
Oil Pump Inner Rotor End Play	
Max	0.01 mm (0.0004 in.)
Min	0.09 mm (0.0036 in.)
Oil Pump Outer Rotor to Body Diameter Clearance	
Max	0.130 mm (0.052 in.)
Min	0.230 mm (0.0091 in)
Oil Pressure Relief Valve	
Opening Pressure	5 Bar (73 psi)
Oil Pressure Valve Spring Free Length	46.8 mm (1.84 in)
Minimum Oil Pressure (Warm)	
at Idle	0.7 Bar (10 psi)
at 3800 RPM	2.5 Bar (36 psi)
Cooling System	
Thermostat Opening Temperature	80°C (176°F)
Pressure Cap Setting	1.2 Bar (17 psi)
Engine Oil	
Specification	
Refer to CAPACITIES AND RECOMMENDED FLUIDS, DESCRIPTION .	
Coolant	
Specification. Refer to CAPACITIES AND RECOMMENDED FLUIDS, DESCRIPTION .	

Cylinder Head Gasket Selection		
	Millimeters	Inches
DISTANCE FROM PISTON AT TDC TO CYLINDER BLOCK	0.300 - 0.399	0.0119 - 0.0158
CYLINDER HEAD GASKET THICKNESS	1.10	0.0434
PISTON	0.700-0.800	0.0276 -0.0315

2011 Dodge Grand Caravan R/T

2011 ENGINE 2.8L Diesel - Service Information - Grand Caravan, Town & Country

CLEARANCE		
DISTANCE FROM PISTON AT TDC TO CYLINDER BLOCK	0.400 - 0.499	0.0158 - 0.0197
CYLINDER HEAD GASKET THICKNESS	1.20	0.0473
PISTON CLEARANCE	0.700-0.800	0.0276 -0.0315
DISTANCE FROM PISTON AT TDC TO CYLINDER BLOCK	0.500 - 0.600	0.0197 - 0.0237
CYLINDER HEAD GASKET THICKNESS	1.30	0.0512
PISTON CLEARANCE	0.700-0.800	0.0276 -0.0315

TORQUE SPECIFICATIONS

ENGINE BLOCK

DESCRIPTION	N.m	Ft. Lbs.	In. Lbs.
Air Temp/Pressure sensor	12	-	106
Balance Shaft	33	24	-
Connecting Rod Caps	Refer to <u>ROD, PISTON AND CONNECTING, INSTALLATION.</u>		
Dipstick Tube (block)	11	-	97
Dipstick Tube (sump)	11	-	97
Front Mount	Refer to <u>INSULATOR, ENGINE MOUNT, RIGHT, INSTALLATION, INSULATOR, ENGINE MOUNT, LEFT, INSTALLATION, INSULATOR, ENGINE MOUNT, REAR, INSTALLATION</u> and <u>INSULATOR, ENGINE MOUNT, FRONT MOUNT, INSTALLATION.</u>		
	Refer to <u>INSTALLATION - LEFT ENGINE</u>		

2011 Dodge Grand Caravan R/T

2011 ENGINE 2.8L Diesel - Service Information - Grand Caravan, Town & Country

Left Transmission Mount	<u>MOUNT.</u>		
Fuel Quantity Solenoid	11	-	97
Main Bearing Caps	Refer to <u>CRANKSHAFT, INSTALLATION.</u>		
Oil Cooler	12	-	106
Oil Cooler coolant Adapter Tube at Oil Filter Housing Bolt	11	-	97
Oil Cooler Coolant Tube Bolt	15	-	133
Oil Drain Plug	54	40	-
Oil Filter Cap	25	18	-
Oil Filter Housing Bolts	33	24	-
Oil Jet	11	-	97
Oil Pan	Refer to <u>PAN, OIL, INSTALLATION.</u>		
Oil Pan to Transaxle Bolts	60	44	-
Oil Pickup Tube	15	-	133
Oil Pressure Sensor	14	-	124
Rear Mount	Refer to <u>INSTALLATION - REAR MOUNT.</u>		
Rear Mount Bracket	Refer to <u>BRACKET, ENGINE MOUNT, REAR MOUNT, INSTALLATION.</u>		
Right Engine Mount	Refer to <u>INSTALLATION - RIGHT ENGINE MOUNT.</u>		

CYLINDER HEAD

DESCRIPTION	N.m	Ft. Lbs.	In. Lbs.
Camshaft Cap	11	-	97
Camshaft Position Sensor	11	-	97
Camshaft Sprocket	80	59	-
Charge Air Cooler Clamp - Intercooler Side	25	18	-
Charge Air Cooler Clamp - Turbocharger Side	5	-	44
Cylinder Head Bolt	Refer to <u>CYLINDER HEAD, INSTALLATION.</u>		
Cylinder Head Cover	11	-	97
EGR Air Flow Control Valve Bolts	11	-	97
Exhaust Elbow	33	24	-
Exhaust Elbow Bracket	33	24	-
Exhaust Manifold	36	27	-
Exhaust Manifold Heat Shield	33	24	-
Front Camshaft Journal	11	-	97
Fuel injector	33	24	-
Fuel Injector Tubes at Fuel Injector	28	21	-
Fuel Injector Tubes at Fuel Rail	5 + 75°	-	44 + 75°
Fuel Rail	24	18	-
Glow Plugs	14	-	124
High Pressure Fuel Feed Line at Fuel Rail	5 + 75°	-	44 + 75°

2011 Dodge Grand Caravan R/T

2011 ENGINE 2.8L Diesel - Service Information - Grand Caravan, Town & Country

High Pressure Fuel Feed Tube at High Pressure Pump	28	21	-
High Pressure Fuel Tube Bracket Bolt	15	-	133
Intake Manifold Nuts	25	18	-
Turbocharger	32	24	-
Turbocharger Brace Bolts	32	24	-
Turbocharger Oil Feed Line at the Engine Block	32	24	-
Turbocharger Adapter (oil feed line to engine block connection)	54	40	-
Turbocharger Oil Feed Line Banjo Bolt at Turbocharger	24	18	-
Turbocharger Oil Return Line	15	-	133
Vacuum Tube	11	-	97

FRONT ENGINE

DESCRIPTION	N.m	Ft. Lbs.	In. Lbs.
Crankshaft Damper	32	24	-
Crankshaft Sprocket	100 + 120°	74 + 120°	-
Front Engine Cover	33	24	-
Front Engine Lifting Bracket	45	33	-
High Pressure Fuel Pump	24	18	-
High Pressure Fuel Pump Sprocket Nut.	88	65	-
Timing Belt Cover (upper)	8	-	71
Timing Belt Cover (inner)	11	-	97
Timing Belt Cover (lower)	8	-	71
Timing Belt Tensioner	28	21	-
Water Pump	32	24	-

REAR ENGINE

DESCRIPTION	N.m	Ft. Lbs.	In. Lbs.
Crankshaft Position Sensor Cover Plate	15	-	133
Crankshaft Position Sensor	11	-	97
Flex Plate (ATX) Bolt	Refer to FLEXPLATE, INSTALLATION.		
Transmission Adapter Plate (allen bolts)	79	58	-
Transmission Adapter Plate (hex bolts)	45	33	-

ACCESSORY DRIVE

DESCRIPTION	N.m	Ft. Lbs.	In. Lbs.
A/C Compressor Bolts	28	21	-
A/C Compressor Nut	32	24	-
A/C Compressor/Generator Bracket Bolts	45	33	-
Accessory Drive Belt Tensioner Bolt	45	33	-

Accessory Drive Idler Pulley Bolt	45	33	-
Generator Bolts	33	24	-
Power Steering Pump Bolts	33	24	-
Power Steering Pump Pulley Bolts	33	24	-

REMOVAL

REMOVAL - ENGINE

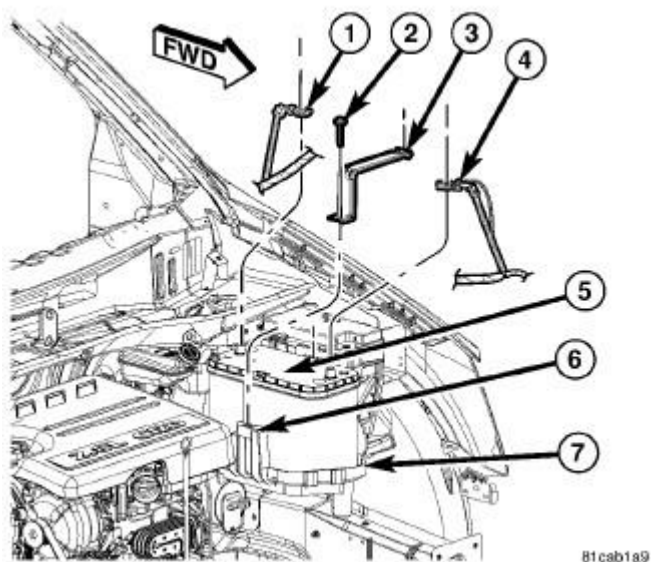


Fig. 5: Battery Cables, Brackets & Fasteners
Courtesy of CHRYSLER LLC

1. Disconnect the battery cables (1) and (4).
2. Remove the battery (5). Refer to **BATTERY, REMOVAL** .

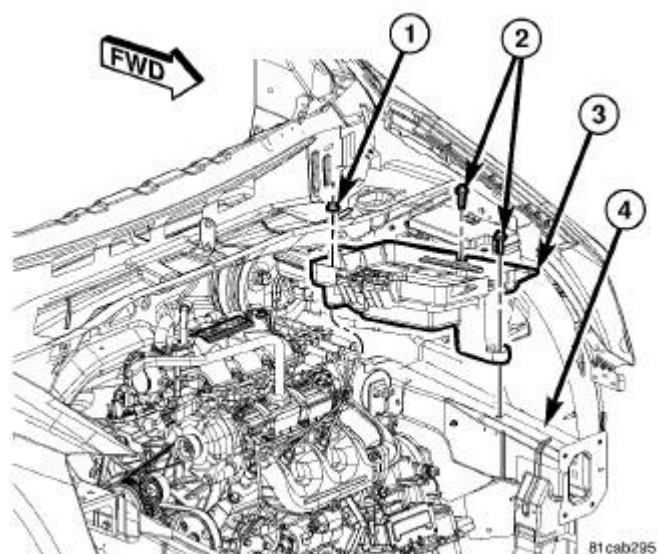


Fig. 6: Battery Tray & Fasteners
Courtesy of CHRYSLER LLC

3. Remove the battery tray (3). Refer to **TRAY, BATTERY, REMOVAL** .

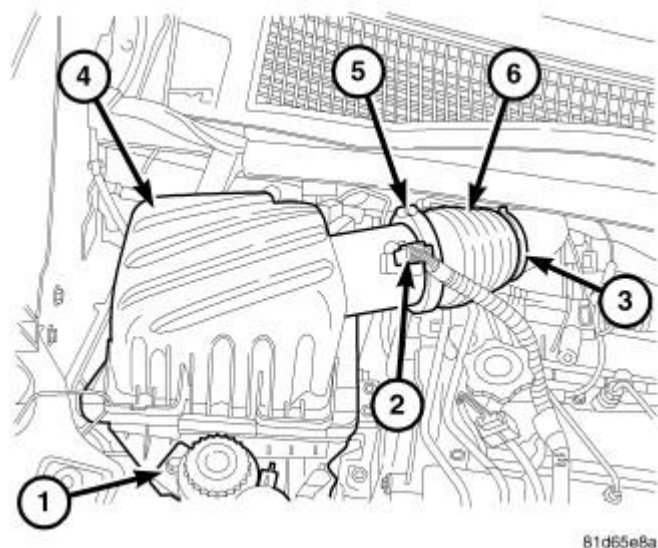


Fig. 7: Intake Air Box
Courtesy of CHRYSLER LLC

4. Remove the engine cover.
5. Evacuate the A/C system. Refer to **PLUMBING, FRONT, STANDARD PROCEDURE** .
6. Remove the air cleaner body. Refer to **BODY, AIR CLEANER, REMOVAL**.
7. Remove the cooling fan module. Refer to **FAN, COOLING, REMOVAL** .

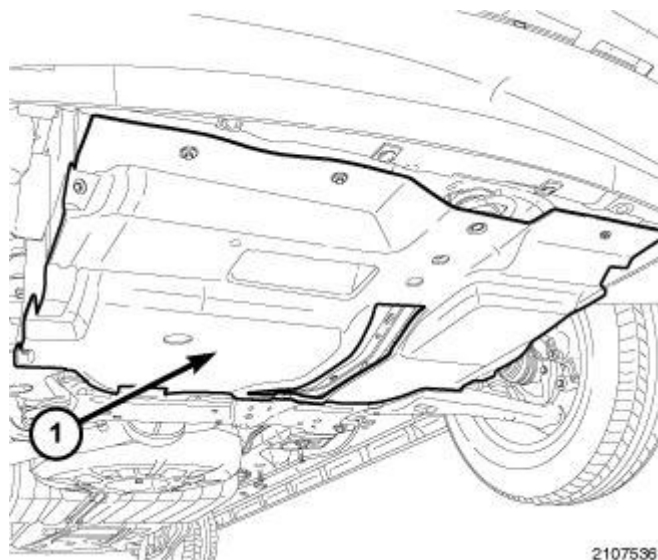


Fig. 8: Underbody Splash Shield
Courtesy of CHRYSLER LLC

8. Raise and support the vehicle. Refer to **HOISTING, STANDARD PROCEDURE** .
9. Remove the underbody splash shield (1).

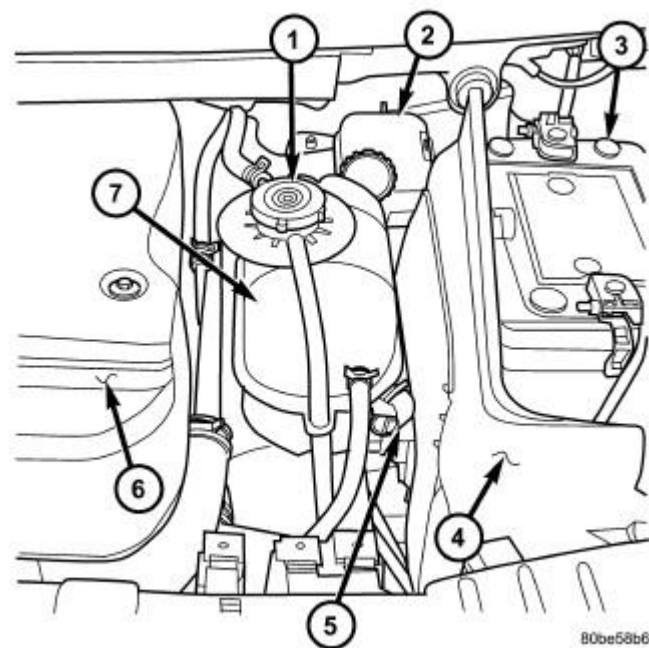


Fig. 9: Coolant Recovery Container Components
Courtesy of CHRYSLER LLC

10. Remove the coolant recovery bottle. Refer to **BOTTLE, COOLANT RECOVERY, REMOVAL** .

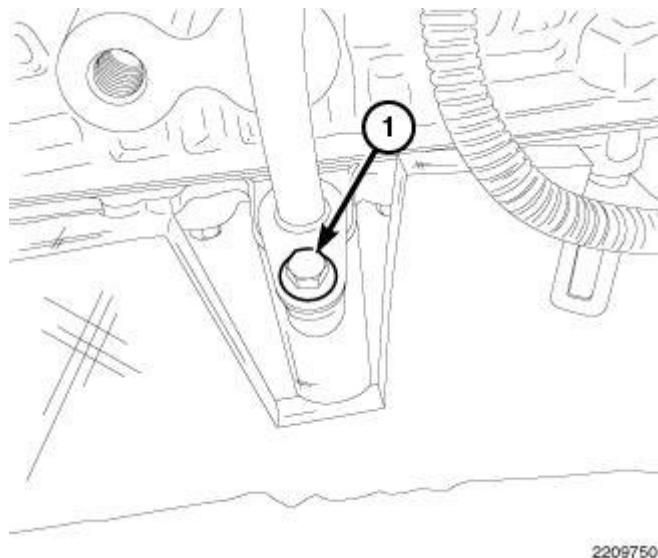


Fig. 10: Oil Level Indicator Tube Lower Bolt
Courtesy of CHRYSLER LLC

11. Remove lower bolt (1) from the oil indicator tube.

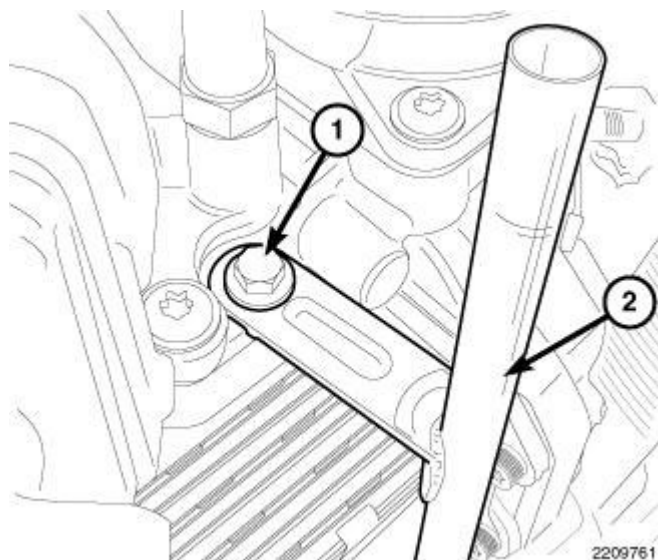


Fig. 11: Oil Level Indicator Tube & Upper Bolt
Courtesy of CHRYSLER LLC

12. Remove upper bolt (1) and the oil level indicator tube.

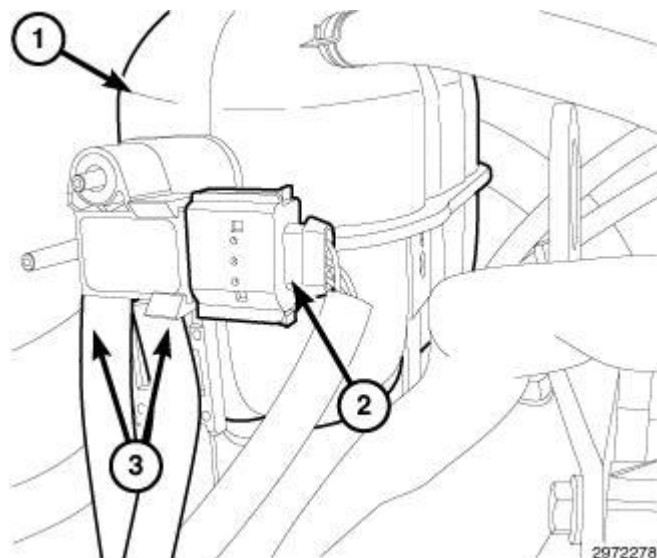


Fig. 12: Coolant Bottle, Differential Pressure Sensor Harness Connector & Sensor Hoses
Courtesy of CHRYSLER LLC

13. Disconnect the brake booster vacuum hose.
14. Disconnect the two Differential Pressure Sensor (DPS) hoses (3).
15. Disconnect the DPS harness connector (2).

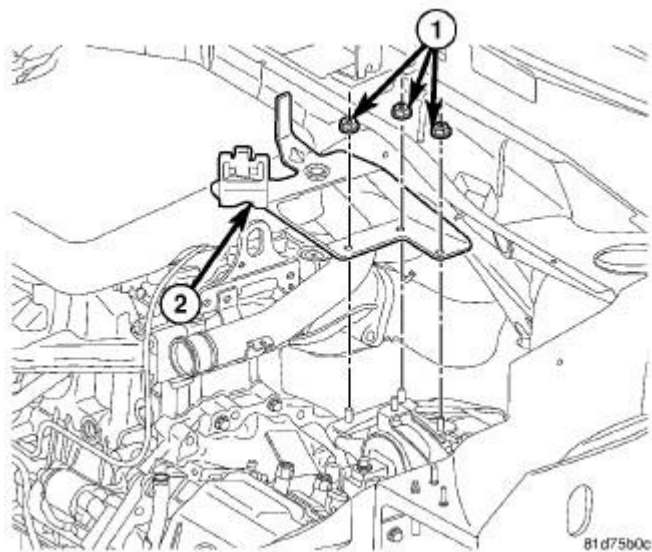


Fig. 13: Coolant Overflow Bottle Bracket & Fasteners
Courtesy of CHRYSLER LLC

16. Remove the fasteners (1), and the coolant overflow bottle bracket.

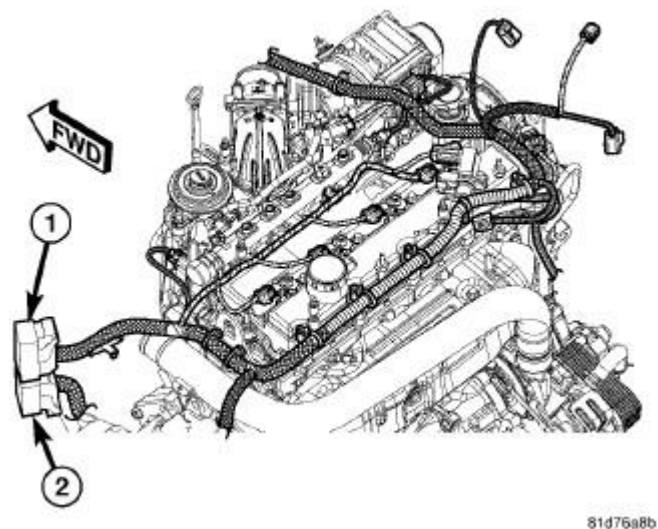


Fig. 14: Engine Harness Connectors
Courtesy of CHRYSLER LLC

17. Disconnect engine to body harness connectors.
18. Disconnect the engine harness connectors (1) and (2) from the ECM.

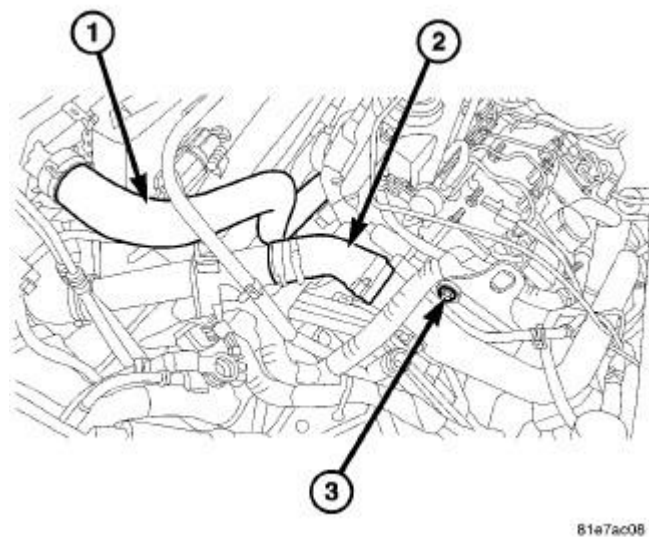


Fig. 15: Upper Radiator Hose, Charge Air Cooler Hose & Fastener
Courtesy of CHRYSLER LLC

19. Disconnect the A/C pressure transducer harness connector.
20. Disconnect the charge air cooler hoses (2).

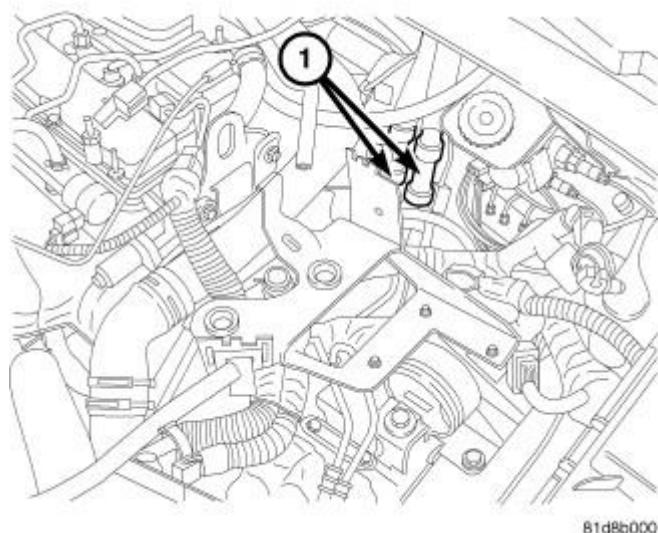


Fig. 16: Heater Core Coolant Hoses
Courtesy of CHRYSLER LLC

21. Disconnect the coolant hoses (1) from heater core.

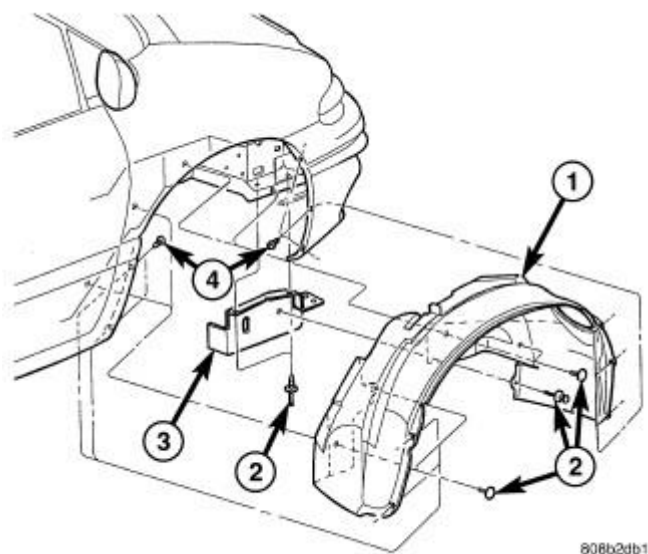


Fig. 17: Front Inner Fender Well & Fasteners
Courtesy of CHRYSLER LLC

22. Remove the front tires. Refer to **REMOVAL** .
23. Remove the left and right front inner fender well (1). Refer to **SHIELD, SPLASH, FRONT WHEELHOUSE, REMOVAL** and **SHIELD, SPLASH, LEFT REAR WHEELHOUSE, REMOVAL** .

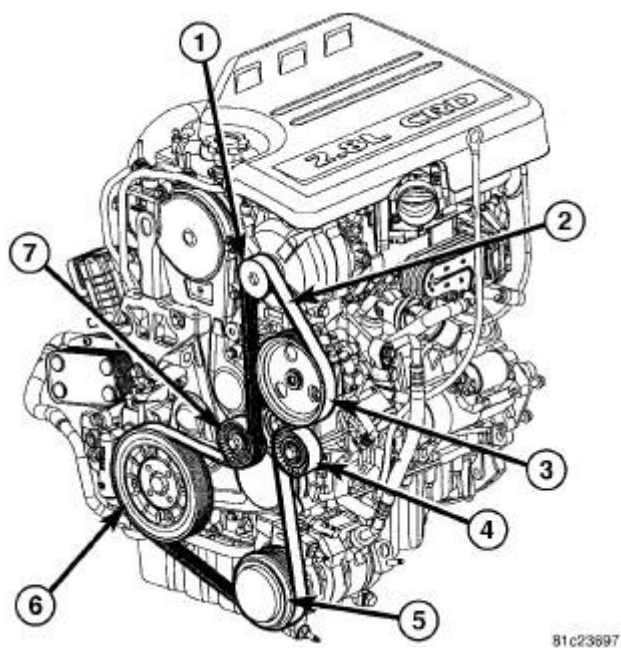


Fig. 18: Accessory Drive Belt Routing - 2.8L Diesel
Courtesy of CHRYSLER LLC

24. Remove the accessory drive belt (2). Refer to **BELT, SERPENTINE, REMOVAL** .

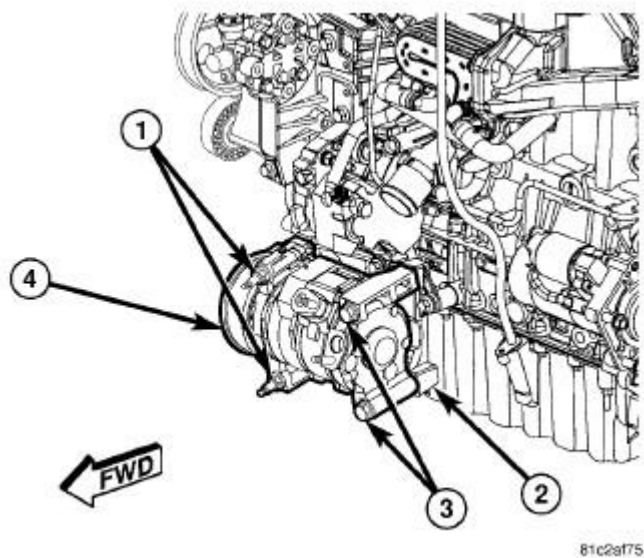


Fig. 19: A/C Compressor
Courtesy of CHRYSLER LLC

25. Remove the A/C compressor. Refer to **COMPRESSOR, A/C, REMOVAL** .
26. Remove the ground cable at transmission.

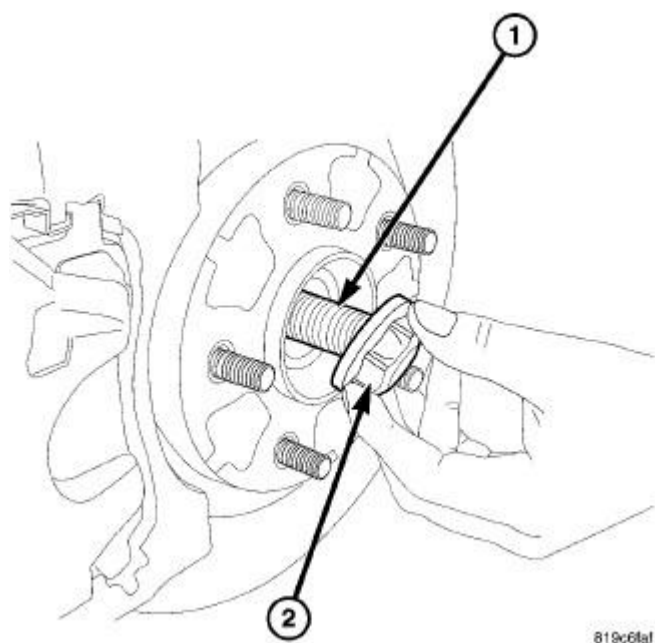


Fig. 20: Removing/Installing Halfshaft Nut
Courtesy of CHRYSLER LLC

27. Remove the right and left driveline half shafts. Refer to **REMOVAL** .

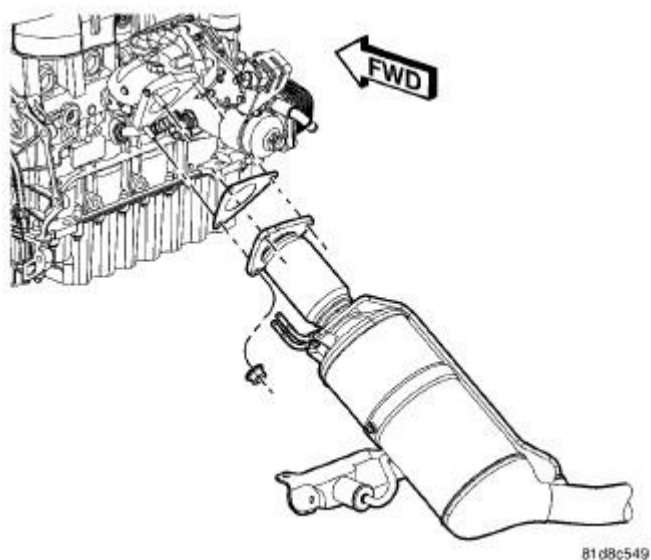


Fig. 21: Diesel Oxidation Catalyst (DOC)/Diesel Particulate Filter (DPF) & Fasteners
Courtesy of CHRYSLER LLC

28. Remove the Diesel Particulate Filter (DPF). Refer to **FILTER, DIESEL PARTICULATE, REMOVAL** .

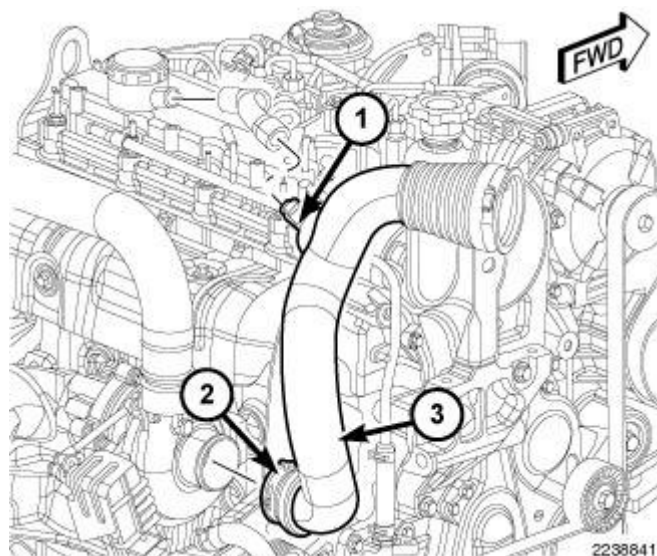


Fig. 22: Crankcase Vent Hose Heater Electrical Connector, Turbocharger Inlet Tube & Clamp
Courtesy of CHRYSLER LLC

29. Disconnect the crankcase vent hose heater harness connector (1).
30. Loosen clamp (2) and remove the turbocharger inlet tube (3) from turbocharger.

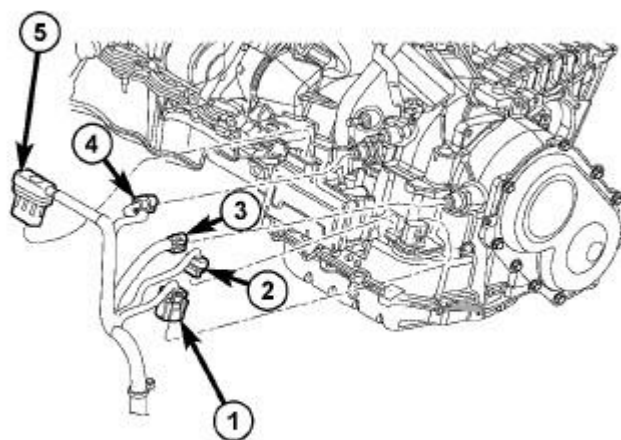


Fig. 23: Transmission Electrical Connectors
Courtesy of CHRYSLER LLC

31. Disconnect the transmission harness connectors (1 - 5).

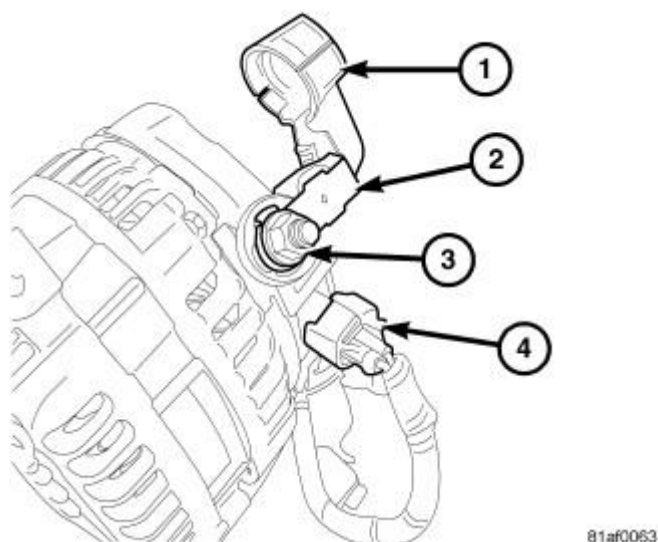


Fig. 24: Alternator/Generator Electrical Connection
Courtesy of CHRYSLER LLC

32. Remove the generator. Refer to **GENERATOR, REMOVAL** .

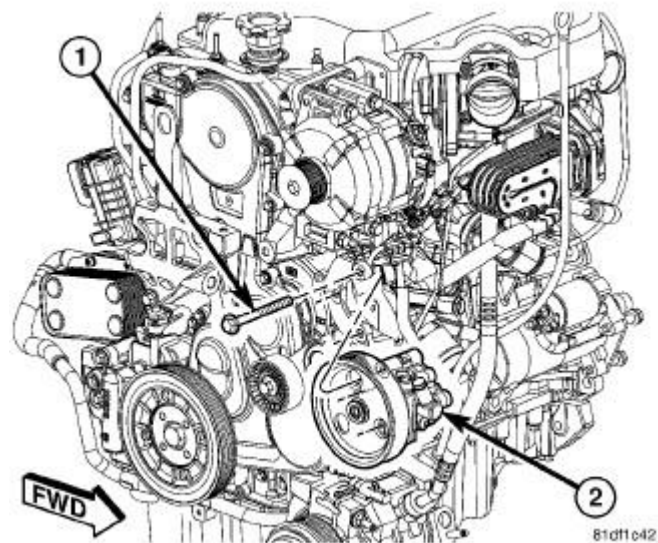


Fig. 25: Power Steering Pump & Bolts
Courtesy of CHRYSLER LLC

33. Remove the power steering pump (2). Refer to **PUMP, REMOVAL** .

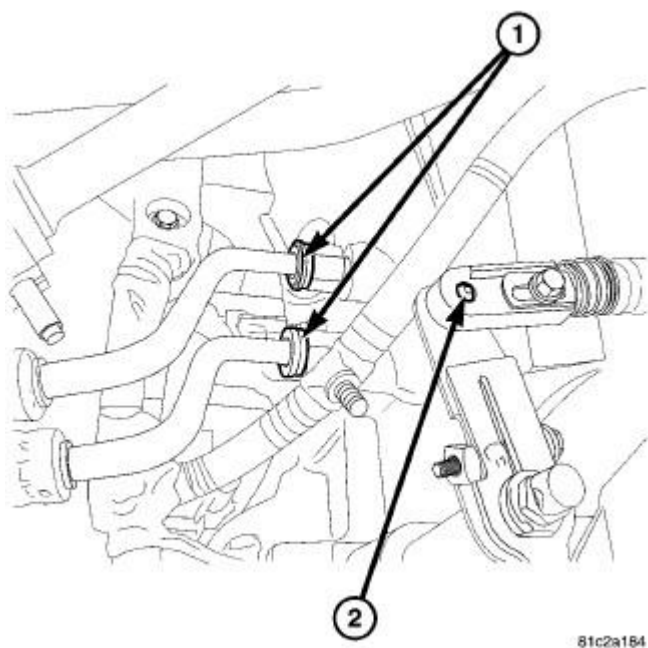


Fig. 26: Transmission Cooler Lines & Transmission Shift Cable
Courtesy of CHRYSLER LLC

34. Disconnect the transmission shift cable (2) at the transmission.
35. Disconnect the transmission cooler lines (1).

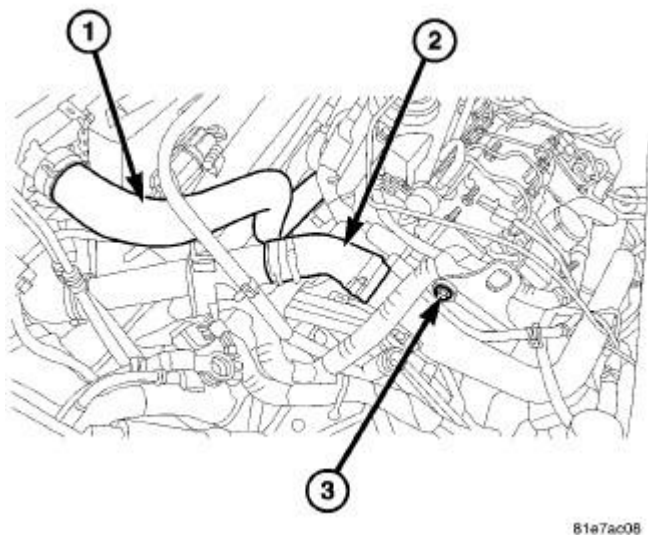


Fig. 27: Upper Radiator Hose, Charge Air Cooler Hose & Fastener
Courtesy of CHRYSLER LLC

36. Remove the upper radiator hose (1).
37. Remove the exhaust manifold and turbocharger assembly. Refer to **MANIFOLD, EXHAUST,**

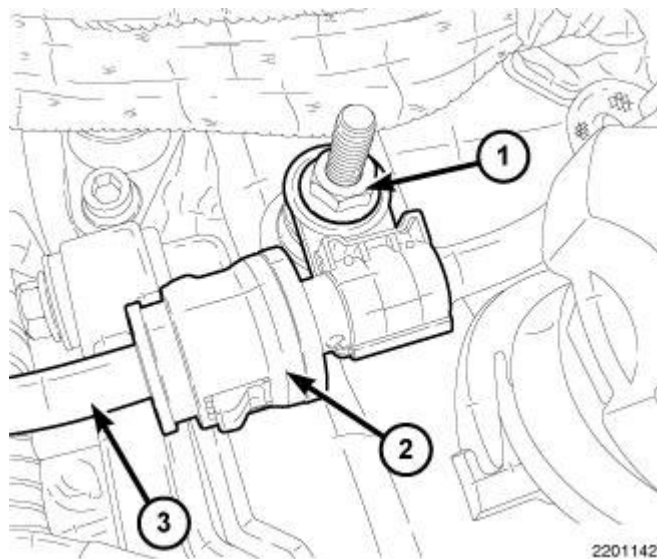
REMOVAL.

Fig. 28: Fuel Injector Return Line & Retaining Nut
Courtesy of CHRYSLER LLC

38. Remove the retaining nut (1) and disconnect the fuel injector return line (2).

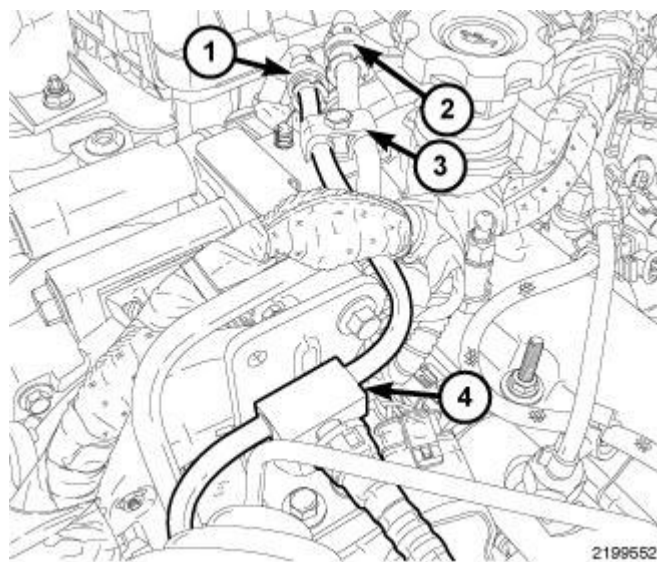


Fig. 29: Fuel Return Line, Fuel Feed Line, Fuel Line Mounting Bracket & Fuel Return Line Block
Courtesy of CHRYSLER LLC

39. Disconnect the fuel return line (1).
40. Disconnect the fuel feed line (2).
41. Remove the fuel line mounting bracket (3).
42. Remove the fuel return line block (4).

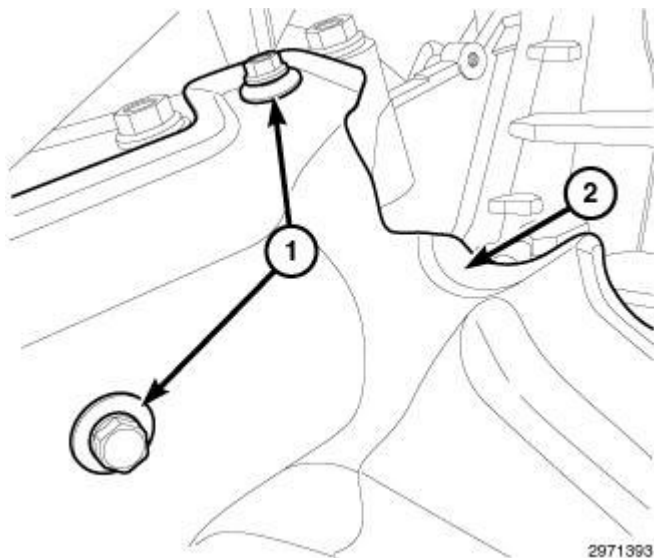


Fig. 30: Rear Mount Heat Shield & Bolt
Courtesy of CHRYSLER LLC

43. Remove bolts (1) and the rear mount heat shield (2).

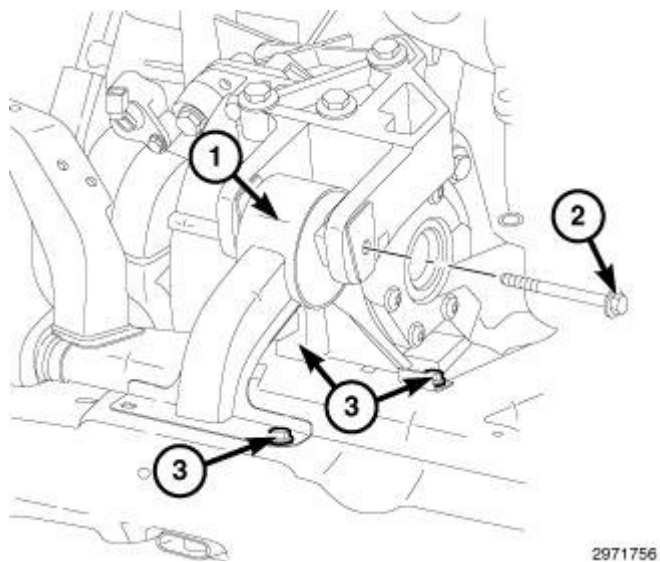


Fig. 31: Rear Engine Mount, Rear Mount Through Bolt & Bolts
Courtesy of CHRYSLER LLC

44. Remove the rear mount through bolt (2).

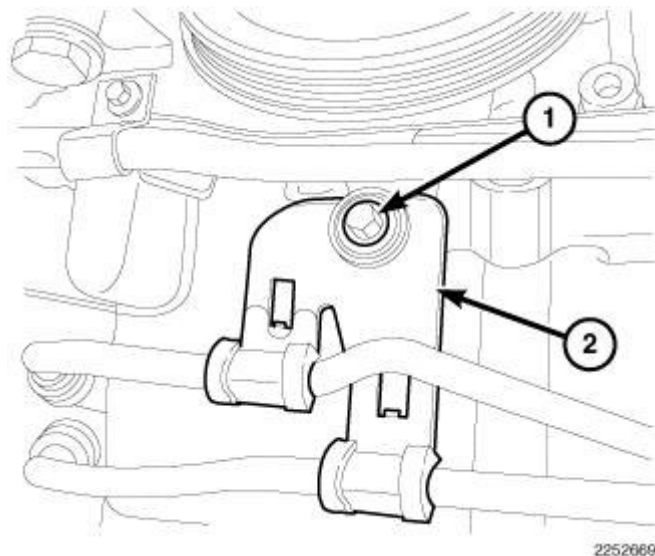


Fig. 32: Retaining Bolt & Power Steering Line Bracket
Courtesy of CHRYSLER LLC

45. Remove the bolt (1) securing the power steering lines.


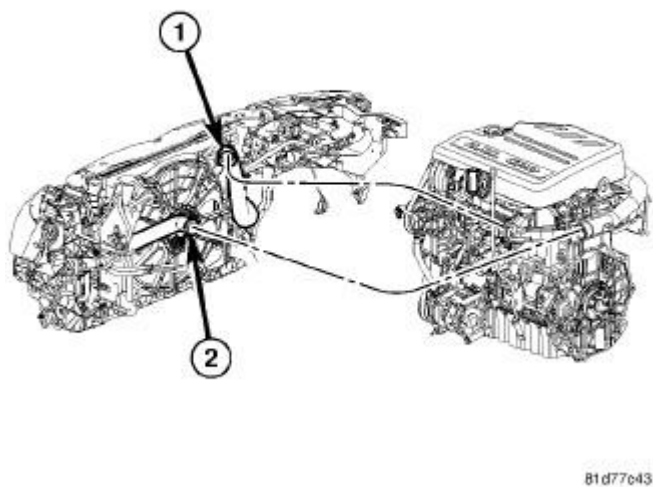


Fig. 33: Lower Radiator Hose & Charge Air Cooler Outlet Tube
Courtesy of CHRYSLER LLC


46. Remove the lower radiator hose.
47. Remove the charge air cooler outlet tube (2).

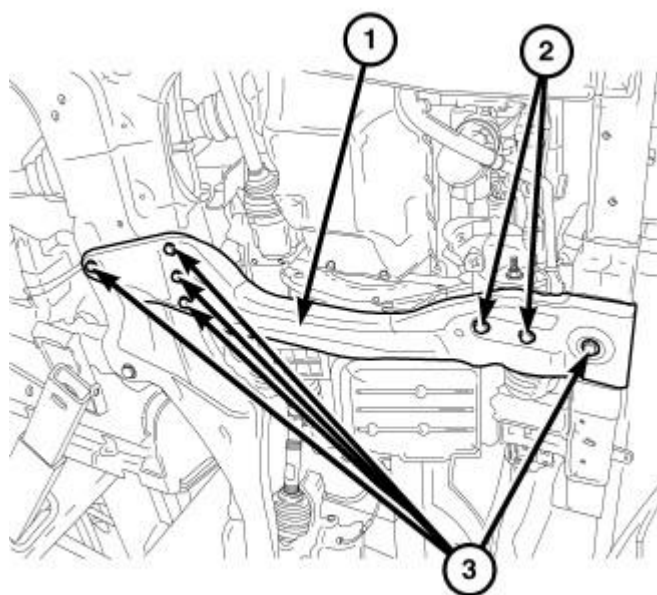

81c2bb21

Fig. 34: Front Fore-Aft Crossmember & Fasteners
 Courtesy of CHRYSLER LLC

48. Remove the front fore-aft crossmember (1). Refer to **CROSSMEMBER, FRONT FORE AND AFT, REMOVAL** and **CROSSMEMBER, FRONT SUSPENSION, REMOVAL**.

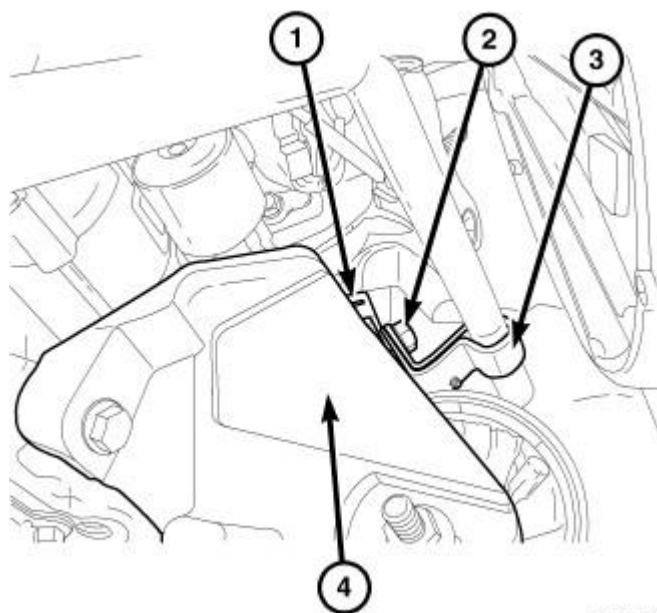

81c2bce9

Fig. 35: Ground Cable, Bolt, Heater Tube Bracket & Front Mount
 Courtesy of CHRYSLER LLC

49. Remove the bolt (2) holding the ground cable (1) and the heater tube bracket (3) to the front mount (4).

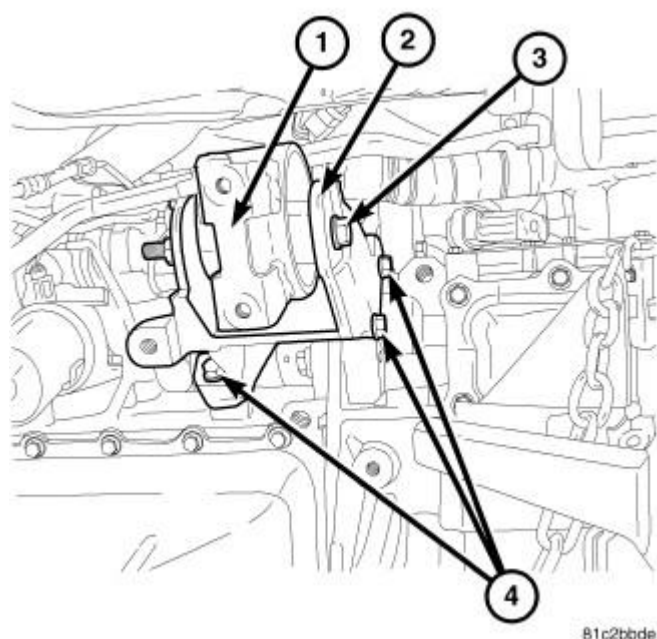


Fig. 36: Front Transmission Mount, Bracket & Bolts
Courtesy of CHRYSLER LLC

50. Remove the bolts (4) at the front mount bracket (2).


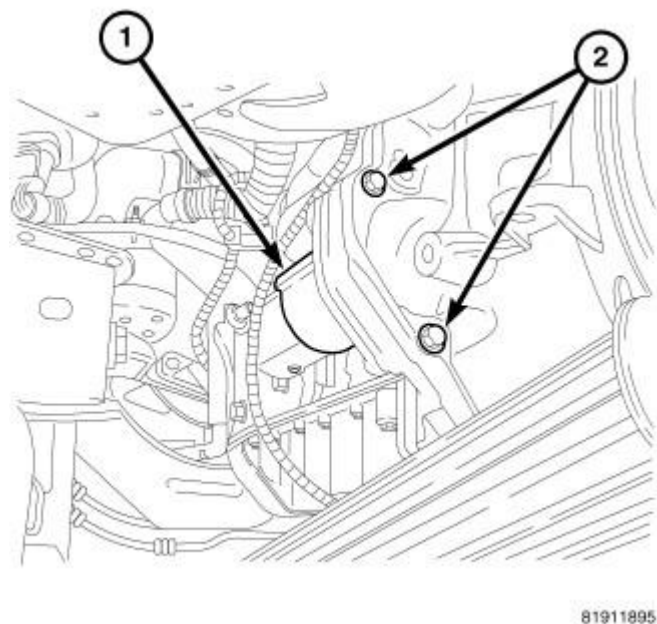


Fig. 37: Starter & Bolts
Courtesy of CHRYSLER LLC

51. Remove the starter (1). Refer to **STARTER, REMOVAL** .

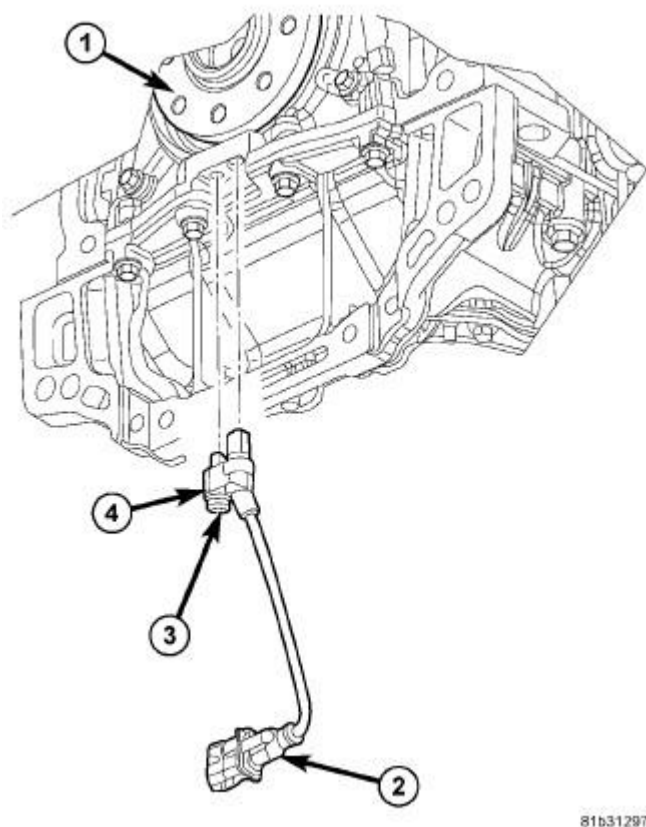

81b31297

Fig. 38: Crankshaft Hub, Electrical Connector, Mounting Bolt & CKP Sensor
Courtesy of CHRYSLER LLC

52. Remove the Crankshaft Position Sensor (CKP). Refer to **SENSOR, CRANKSHAFT POSITION, REMOVAL** and **SENSOR, CRANKSHAFT POSITION, REMOVAL** .

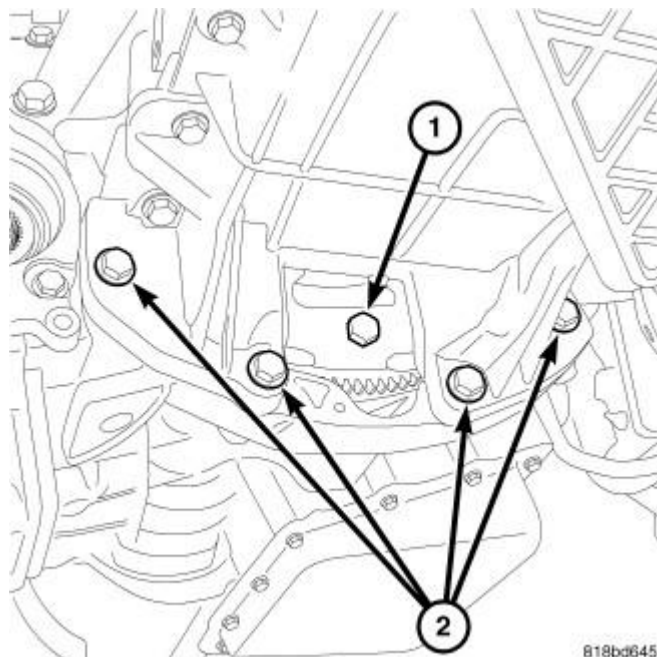


Fig. 39: Torque Converter Bolts & Transaxle-To-Engine Lower Bolts
Courtesy of CHRYSLER LLC

53. Remove the flex plate-to-torque converter bolts (1).
54. Drain the engine oil.
55. Using a new copper sealing washer, tighten oil drain plug to 54 N.m (40 ft. lbs.).
56. Remove the four oil pan to transaxle bolts (2).
57. Position engine cradle under engine and lower vehicle over cradle.

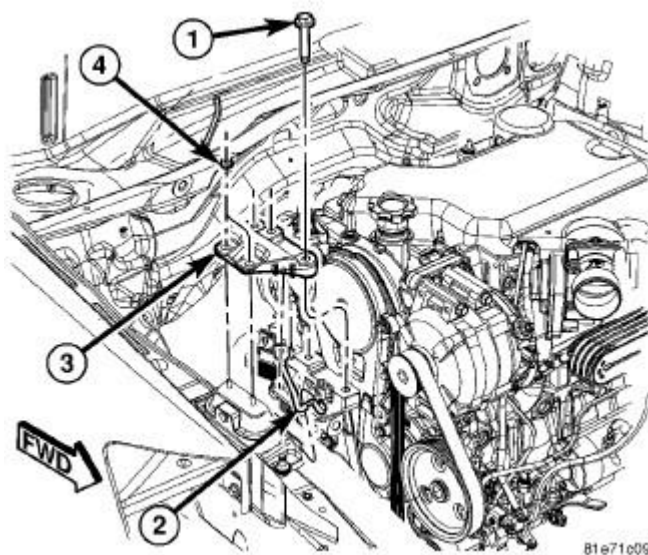


Fig. 40: Right Front Engine Mount Bracket & Fasteners
Courtesy of CHRYSLER LLC

58. Remove ground strap (2).
59. Remove fasteners (1) and (4) and the engine mount bracket (3).

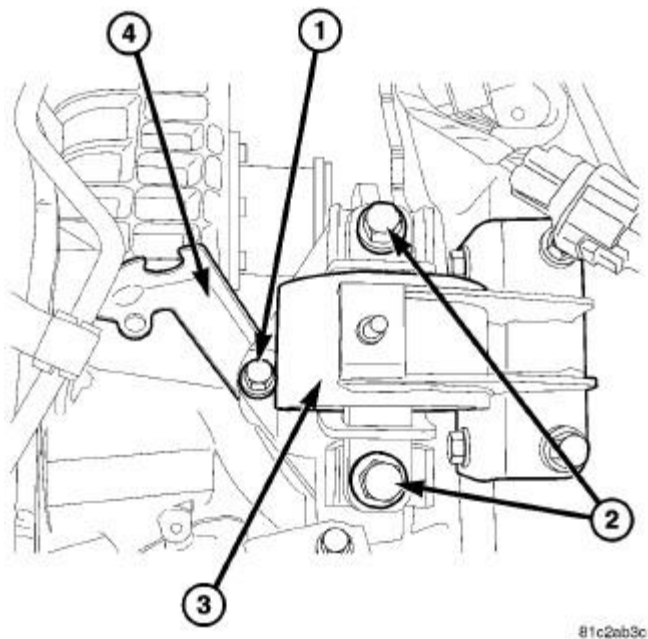


Fig. 41: Left Transmission Mount Bracket & Bolts
Courtesy of CHRYSLER LLC

60. Remove the bolt from the right engine mount.
61. Carefully raise vehicle, leaving engine and transmission on engine cradle.
62. Lift engine from engine cradle and disassemble as necessary.

INSTALLATION

INSTALLATION - ENGINE

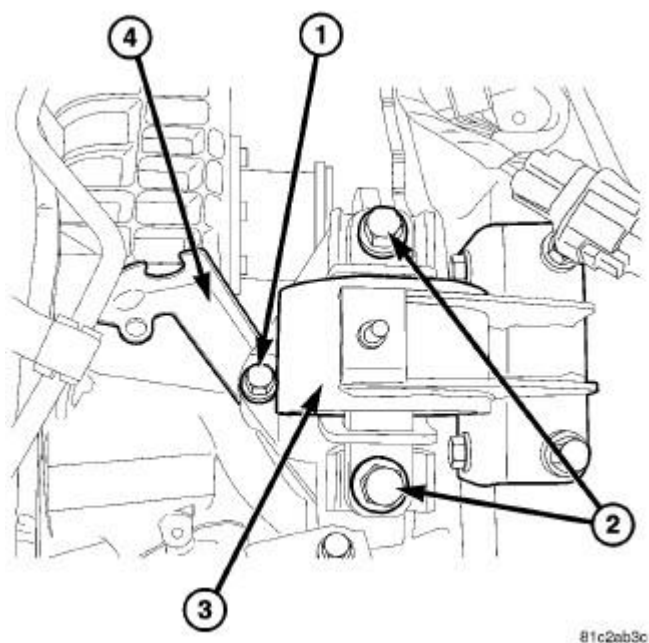


Fig. 42: Left Transmission Mount Bracket & Bolts

Courtesy of CHRYSLER LLC

1. Position engine and transmission assembly under vehicle. Slowly lower the vehicle down over the engine and transmission. It is necessary to move the engine/transmission assembly with the dolly for clearance around body flanges.
2. Align engine and transmission mounts to attaching points.
3. Align the transmission mount with the left transmission mount bracket, and install the trans mount-to-trans bracket bolts (1). Tighten bolts to 95 N.m (70 ft. lbs.).

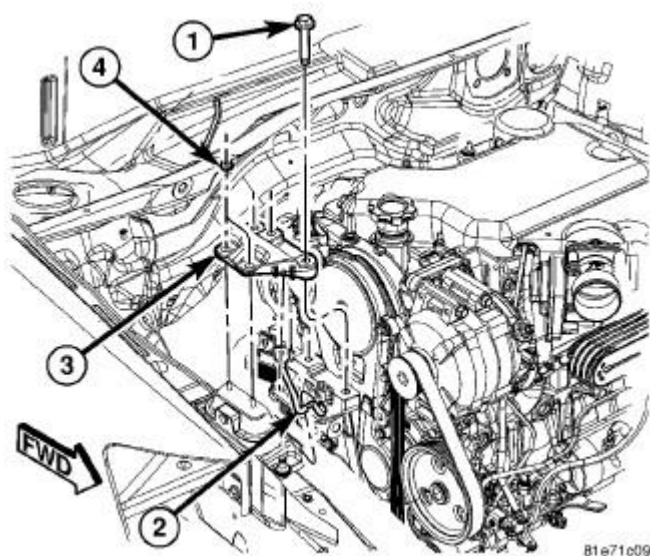


Fig. 43: Right Front Engine Mount Bracket & Fasteners

Courtesy of CHRYSLER LLC

4. Install the engine mount bracket (3).
 - Tighten the bolts (4) to 61 N.m (44 ft. lbs.).
 - Tighten the nuts (1) to 20 N.m (177 in. lbs.).
5. Install the ground strap (2).


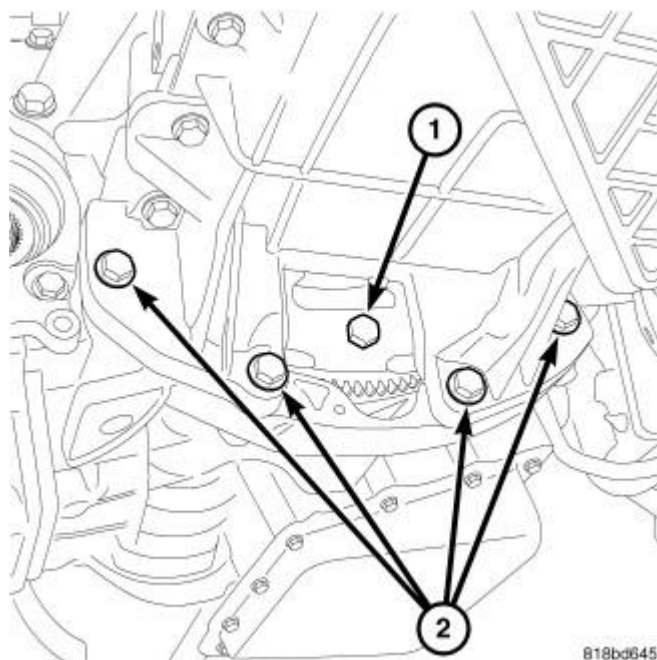


Fig. 44: Torque Converter Bolts & Transaxle-To-Engine Lower Bolts
Courtesy of CHRYSLER LLC


6. Raise the vehicle and remove the engine cradle.
7. Install the oil pan to transaxle bolts (2) and tighten to 60 N.m (44 ft. lbs.).
8. Install flex plate- to-torque converter bolts (1) and tighten to 88 N.m (65 ft. lbs.).

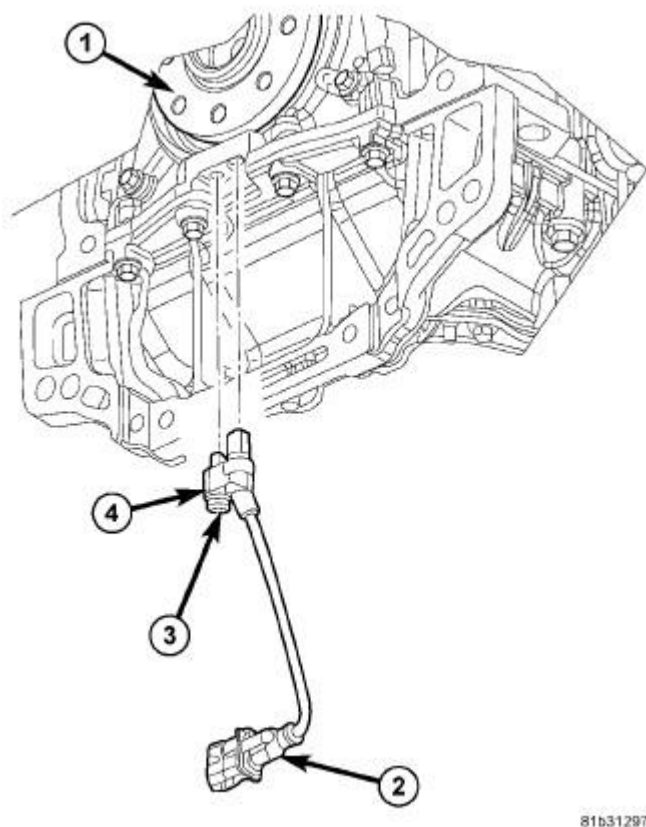

81b31297

Fig. 45: Crankshaft Hub, Electrical Connector, Mounting Bolt & CKP Sensor
Courtesy of CHRYSLER LLC


9. Install the Crankshaft Position Sensor (CKP). Refer to **SENSOR, CRANKSHAFT POSITION, INSTALLATION** and **SENSOR, CRANKSHAFT POSITION, INSTALLATION** .

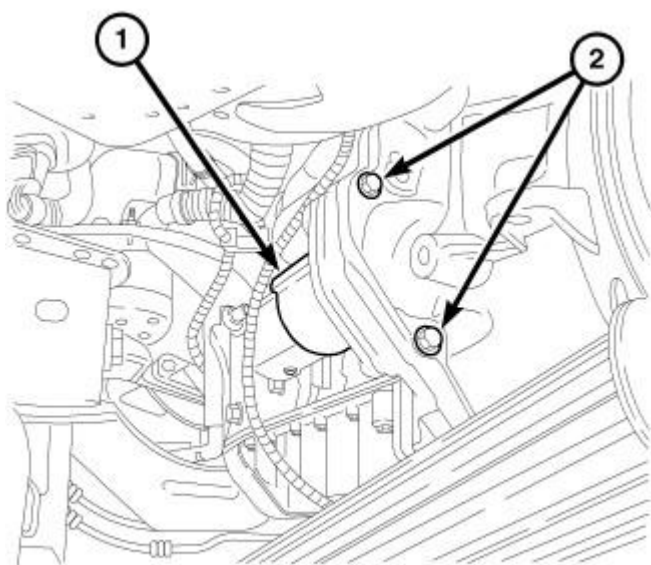

81911895

Fig. 46: Starter & Bolts
Courtesy of CHRYSLER LLC


10. Install the starter (1). Refer to **STARTER, INSTALLATION** .

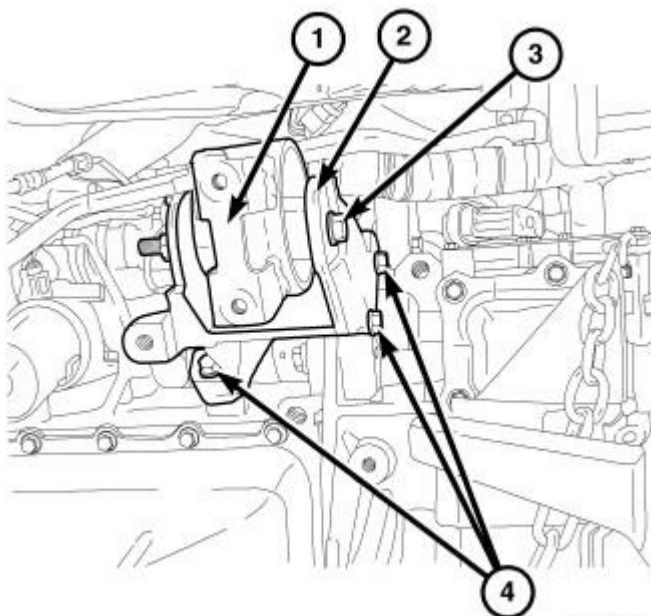

81c2bbde

Fig. 47: Front Transmission Mount, Bracket & Bolts
Courtesy of CHRYSLER LLC


11. Install the front mount bracket (2). Tighten bolts to 95 N.m (70 ft. lbs.).

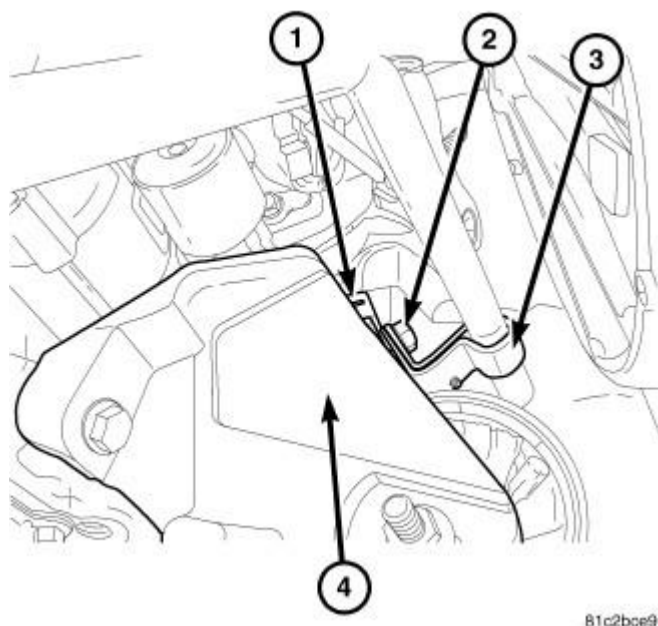

81c2bce9

Fig. 48: Ground Cable, Bolt, Heater Tube Bracket & Front Mount
Courtesy of CHRYSLER LLC


12. Install the bolt (2) holding the ground cable (1) and the heater tube bracket (3) to the front mount (4).

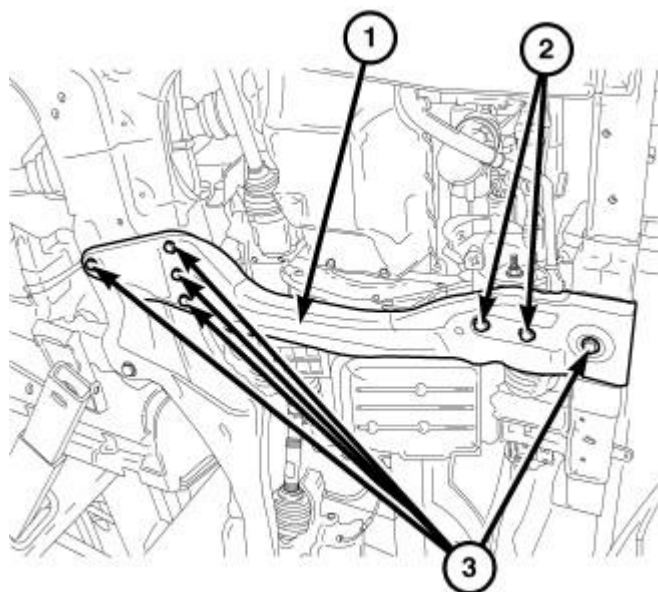

81c2bb21

Fig. 49: Front Fore-Aft Crossmember & Fasteners
Courtesy of CHRYSLER LLC


13. Install the front fore-aft crossmember (1). Refer to **CROSSMEMBER, FRONT FORE AND AFT, INSTALLATION** and **CROSSMEMBER, FRONT SUSPENSION, INSTALLATION**.

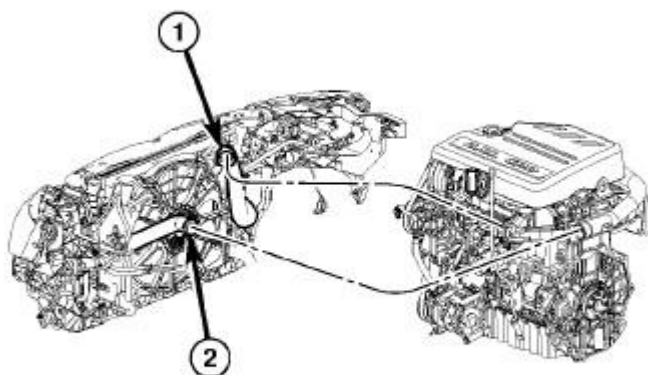

81d77e43

Fig. 50: Lower Radiator Hose & Charge Air Cooler Outlet Tube
Courtesy of CHRYSLER LLC

14. Install the charge air cooler outlet tube (2).
15. Install the lower radiator hose.

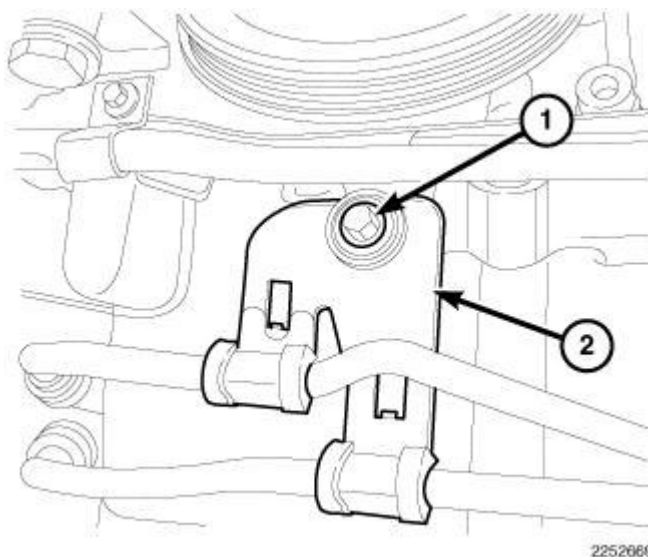

2252669

Fig. 51: Retaining Bolt & Power Steering Line Bracket
Courtesy of CHRYSLER LLC

16. Install the retaining bolt (1) securing the power steering lines. Tighten to 15 N.m (133 in. lbs.).

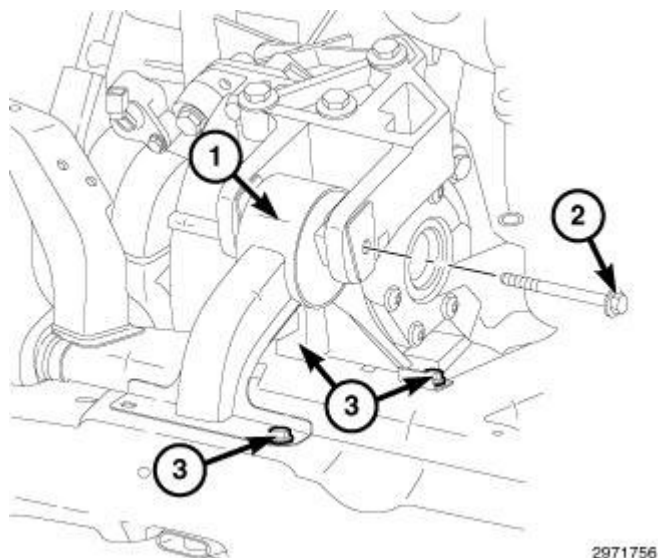


Fig. 52: Rear Engine Mount, Rear Mount Through Bolt & Bolts
Courtesy of CHRYSLER LLC

17. Install the rear mount through bolt and tighten to 61 N.m (45 ft. lbs.).

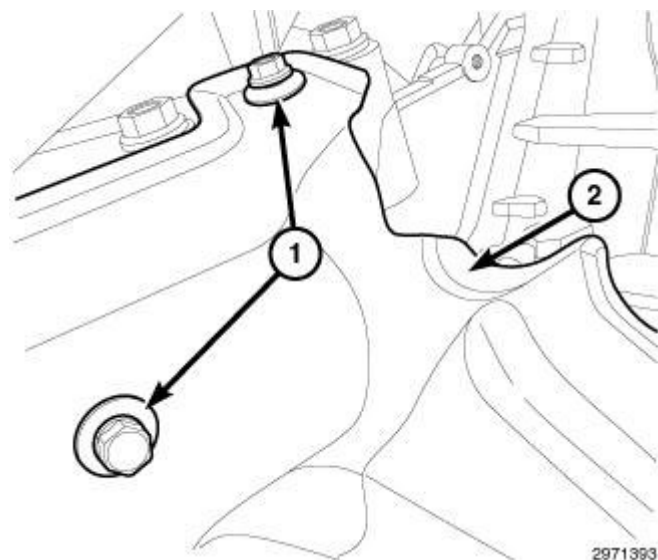


Fig. 53: Rear Mount Heat Shield & Bolt
Courtesy of CHRYSLER LLC

18. Install the rear mount heat shield (2). Tighten bolts (1) to 14 N.m (124 in. lbs.).

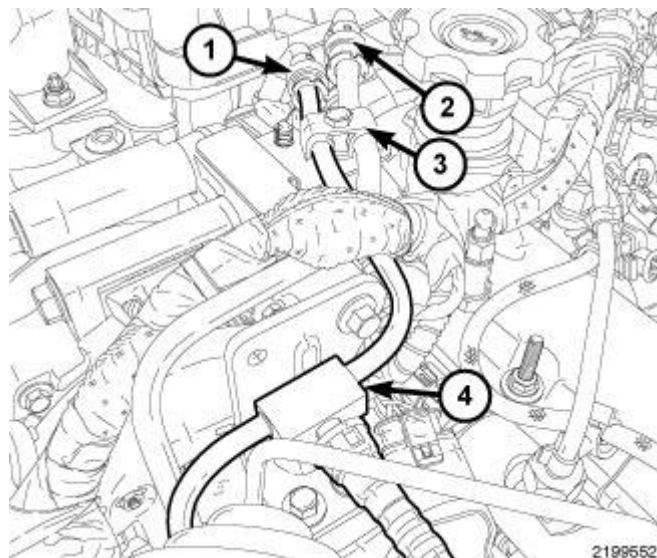


Fig. 54: Fuel Return Line, Fuel Feed Line, Fuel Line Mounting Bracket & Fuel Return Line Block
Courtesy of CHRYSLER LLC

19. Install the fuel return line block (4).
20. Install the fuel line mounting bracket (3).
21. Connect the fuel feed line (2).
22. Connect the fuel return line (1).

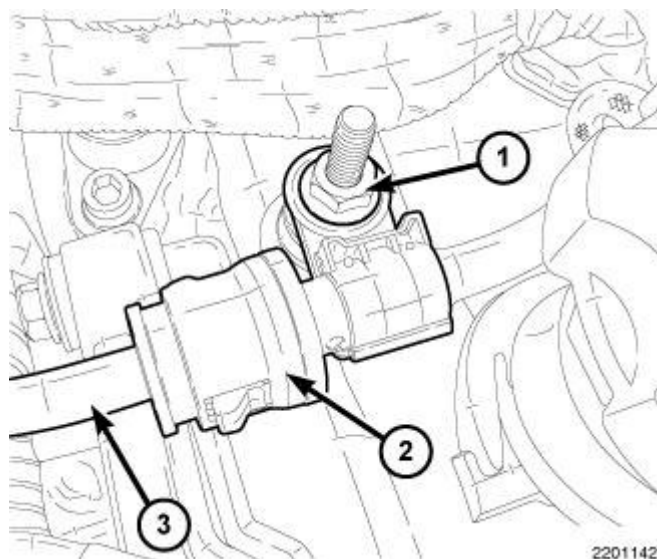


Fig. 55: Fuel Injector Return Line & Retaining Nut
Courtesy of CHRYSLER LLC

23. Connect the fuel injector return line (2) and securely tighten the retaining nut (1).

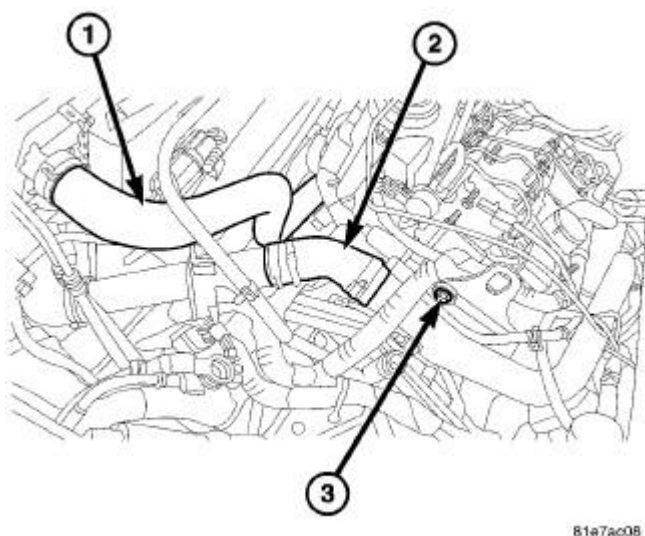


Fig. 56: Upper Radiator Hose, Charge Air Cooler Hose & Fastener
Courtesy of CHRYSLER LLC

24. Install the exhaust manifold and turbocharger assembly. Refer to **MANIFOLD, EXHAUST, INSTALLATION**.
25. Install the upper radiator hose (1).

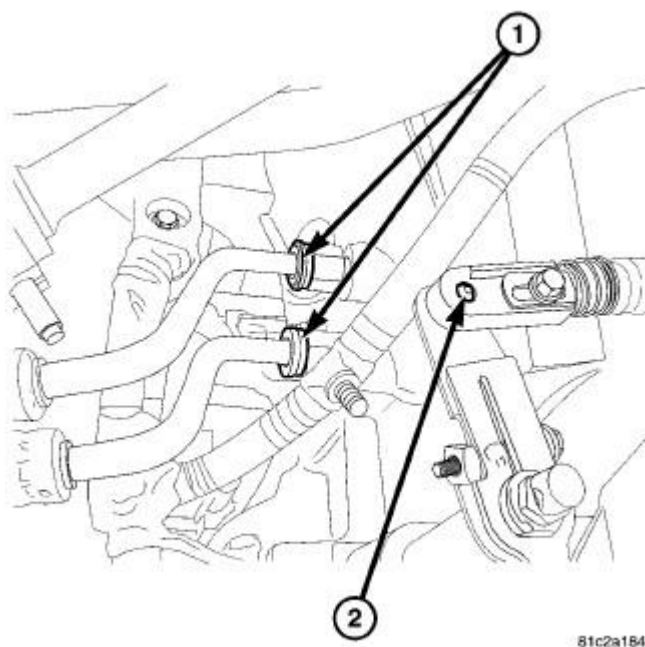


Fig. 57: Transmission Cooler Lines & Transmission Shift Cable
Courtesy of CHRYSLER LLC

26. Connect the transmission shift cable (2) at the transmission.

27. Connect the transmission lines (1).

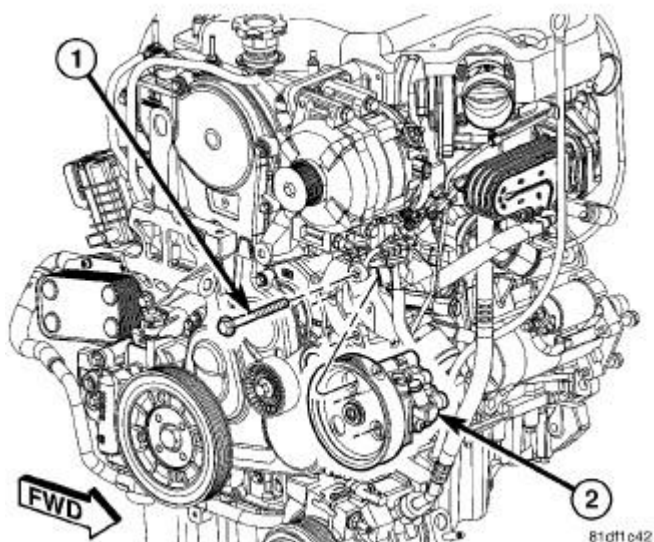


Fig. 58: Power Steering Pump & Bolts
Courtesy of CHRYSLER LLC

28. Install the power steering pump (2). Refer to **PUMP, INSTALLATION** .


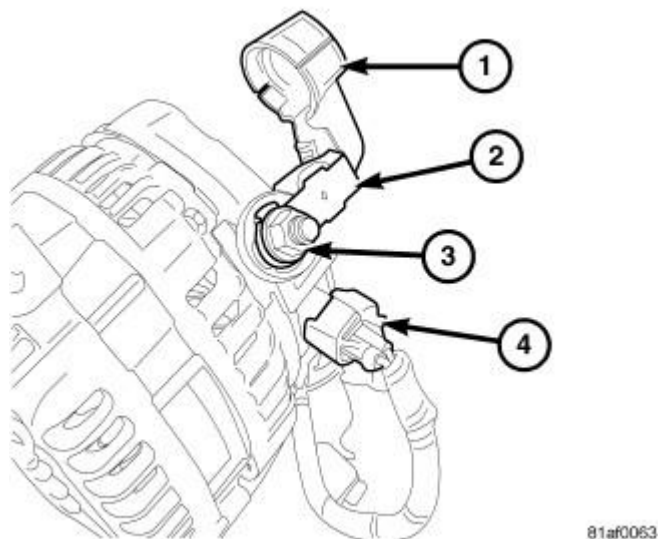


Fig. 59: Alternator/Generator Electrical Connection
Courtesy of CHRYSLER LLC


29. Install the generator. Refer to **GENERATOR, INSTALLATION** .

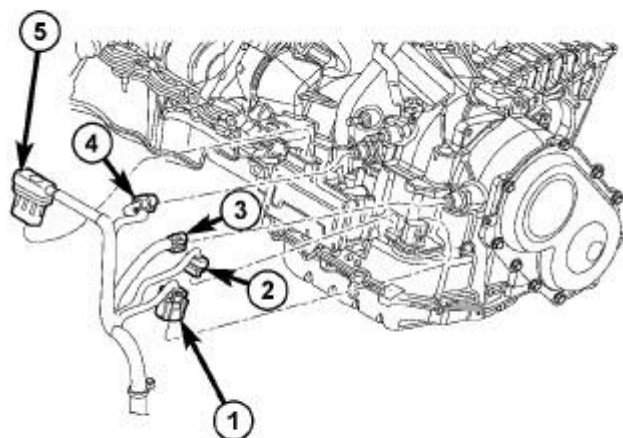

81820979

Fig. 60: Transmission Electrical Connectors
Courtesy of CHRYSLER LLC

30. Connect the transmission harness connectors (1 - 5).

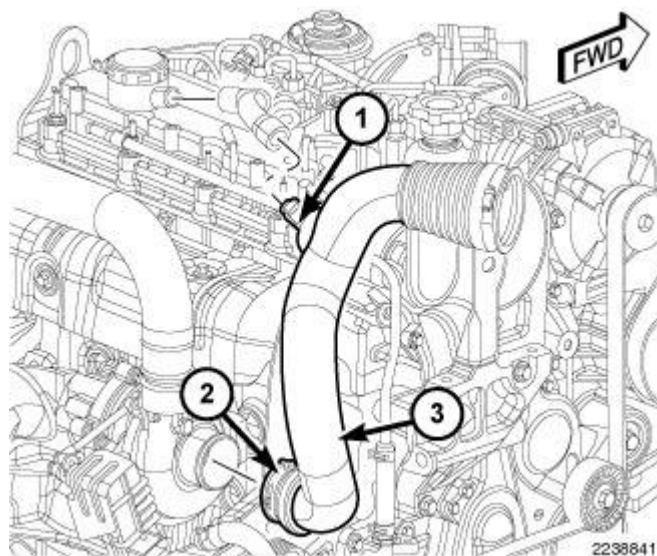

2238641

Fig. 61: Crankcase Vent Hose Heater Electrical Connector, Turbocharger Inlet Tube & Clamp
Courtesy of CHRYSLER LLC

31. Install the turbocharger inlet tube (3) to turbocharger and securely tighten clamp (2).
32. Connect the crankcase vent hose heater harness connector (1).

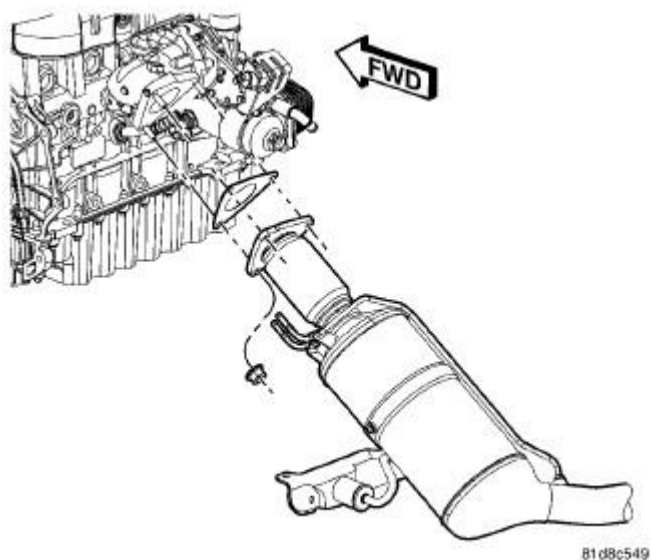


Fig. 62: Diesel Oxidation Catalyst (DOC)/Diesel Particulate Filter (DPF) & Fasteners
Courtesy of CHRYSLER LLC

33. Install the Diesel Particulate Filter (DPF). Refer to **FILTER, DIESEL PARTICULATE, INSTALLATION** .

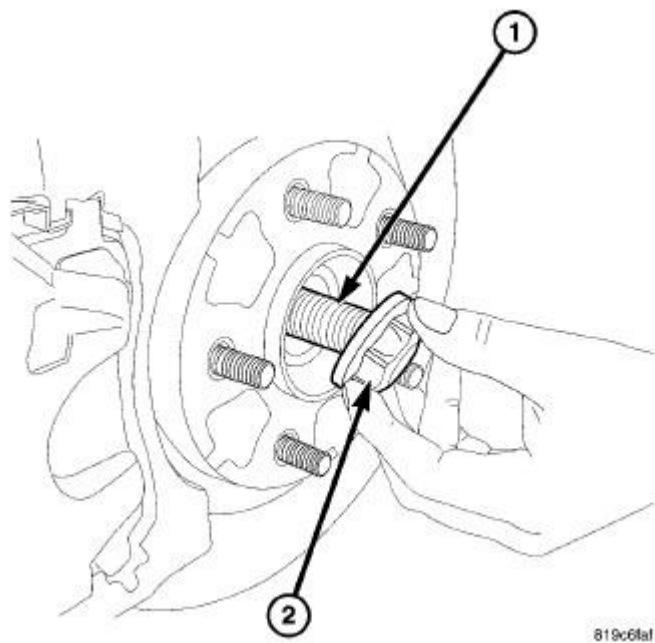


Fig. 63: Removing/Installing Halfshaft Nut
Courtesy of CHRYSLER LLC

34. Install the right and left driveline half shafts. Refer to **INSTALLATION** .

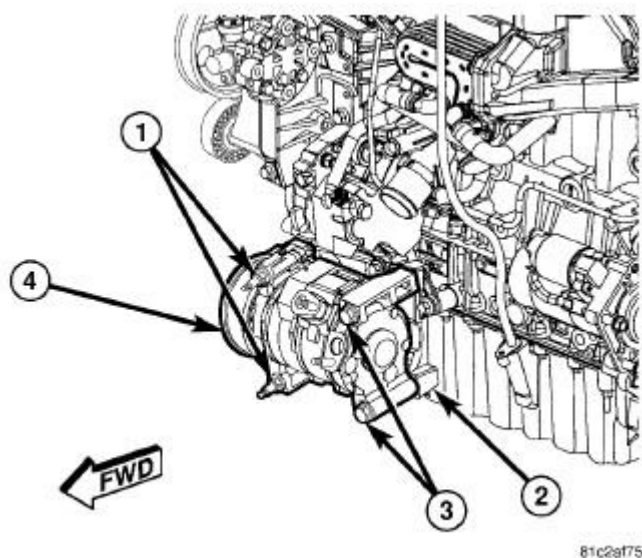


Fig. 64: A/C Compressor
Courtesy of CHRYSLER LLC

35. Install the ground cable at transmission. Tighten bolt to 54 N.m (40 ft. lbs.).
36. Install the A/C compressor. Refer to **COMPRESSOR, A/C, INSTALLATION** .

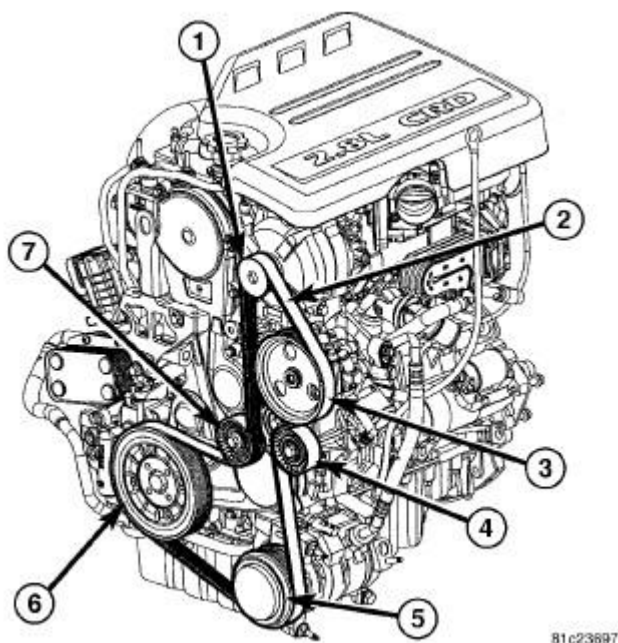


Fig. 65: Accessory Drive Belt Routing - 2.8L Diesel
Courtesy of CHRYSLER LLC

37. Install the accessory drive belt (2). Refer to **BELT, SERPENTINE, INSTALLATION** .

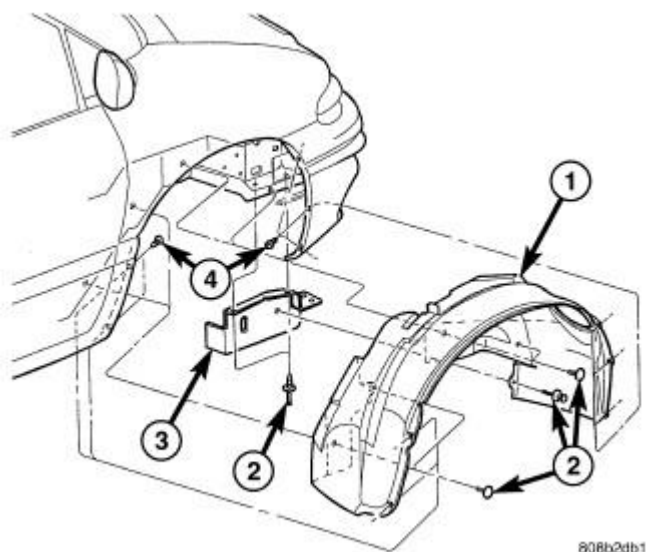


Fig. 66: Front Inner Fender Well & Fasteners
Courtesy of CHRYSLER LLC

38. Install the right and left front inner fender well (1). Refer to **SHIELD, SPLASH, FRONT WHEELHOUSE, INSTALLATION** and **SHIELD, SPLASH, LEFT REAR WHEELHOUSE, INSTALLATION**.
39. Install the front tires. Refer to **INSTALLATION**.

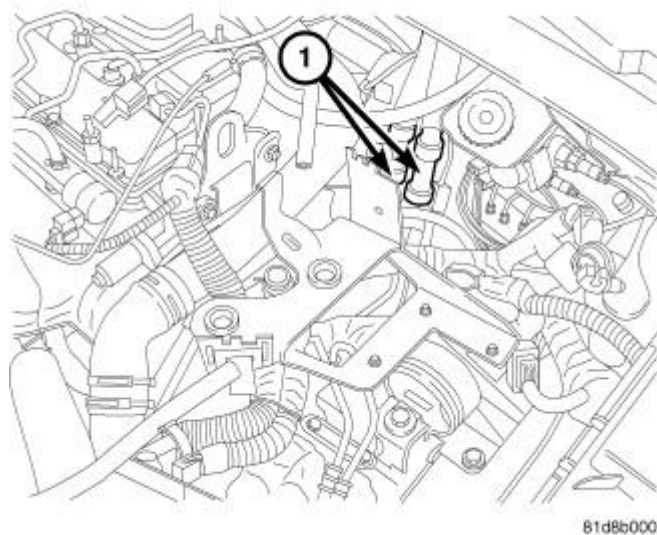


Fig. 67: Heater Core Coolant Hoses
Courtesy of CHRYSLER LLC

40. Connect the coolant hoses (1) to the heater core.

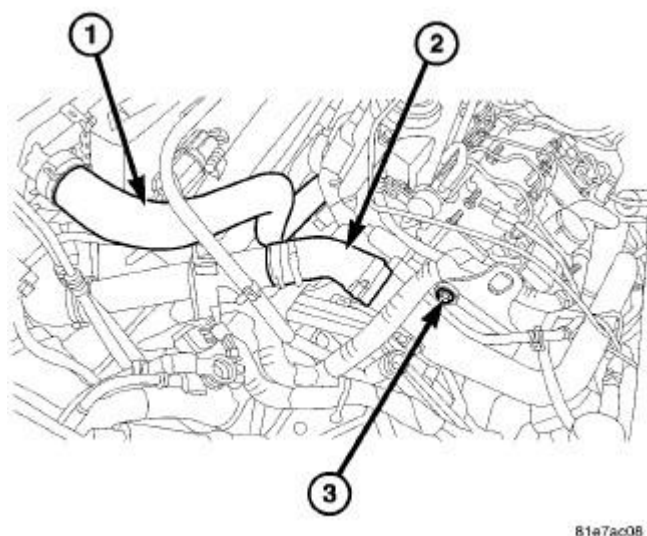


Fig. 68: Upper Radiator Hose, Charge Air Cooler Hose & Fastener
Courtesy of CHRYSLER LLC

41. Connect the charge air cooler hoses (2).
42. Connect the A/C pressure transducer harness connector.

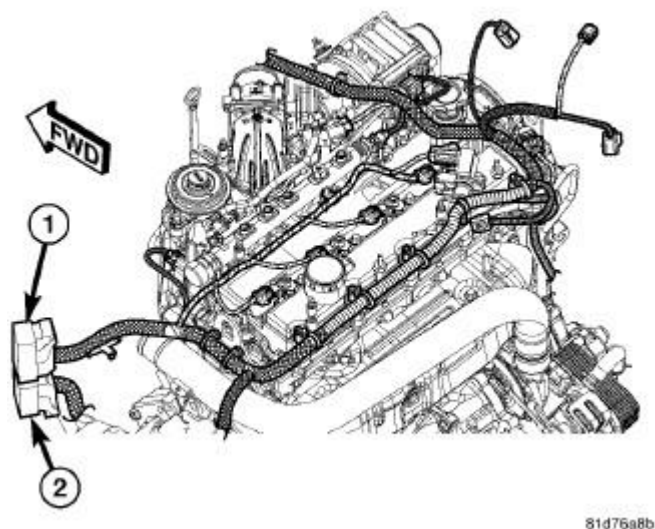


Fig. 69: Engine Harness Connectors
Courtesy of CHRYSLER LLC

43. Connect the engine harness connectors (1 and 2) to the ECM.
44. Connect engine to body harness connectors.

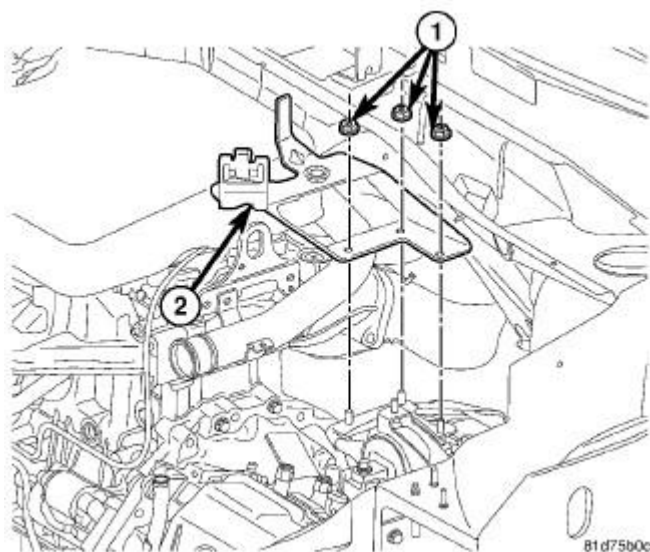


Fig. 70: Coolant Overflow Bottle Bracket & Fasteners
Courtesy of CHRYSLER LLC

45. Install the fasteners (1), and the coolant overflow bottle bracket.

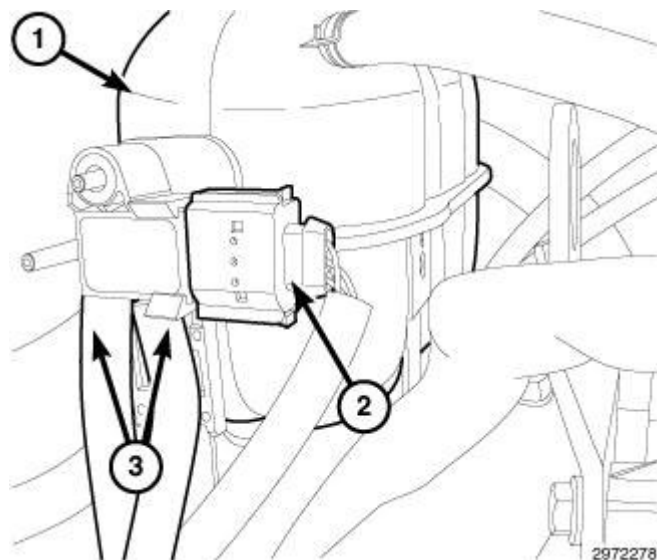


Fig. 71: Coolant Bottle, Differential Pressure Sensor Harness Connector & Sensor Hoses
Courtesy of CHRYSLER LLC

46. Connect the Differential Pressure Sensor (DPS) harness connector (2).
47. Connect the two DPS hoses (3).
48. Connect the brake booster vacuum hose.

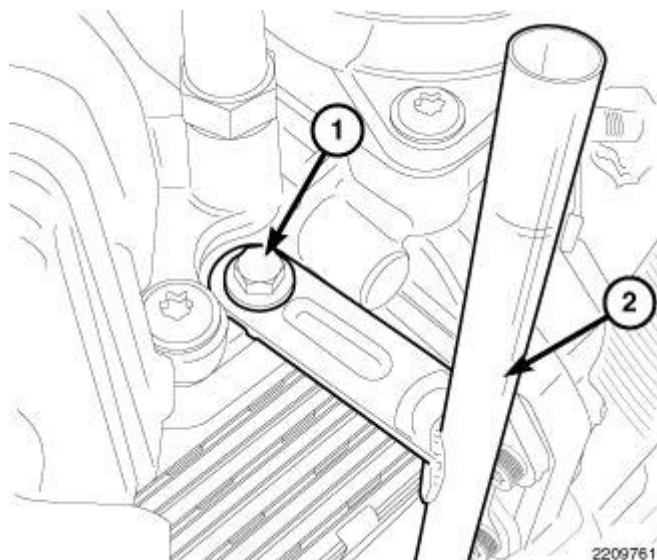


Fig. 72: Oil Level Indicator Tube & Upper Bolt
Courtesy of CHRYSLER LLC

49. Install the oil level indicator tube (2). Tighten upper bolt (1) to 11 N.m (97 in. lbs.).

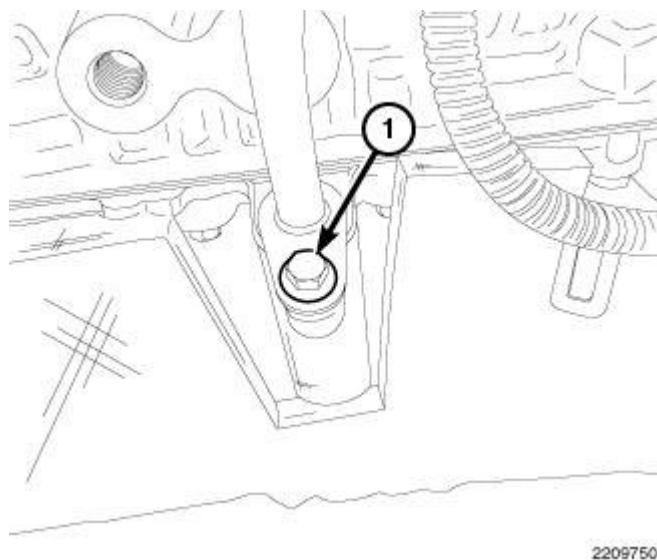


Fig. 73: Oil Level Indicator Tube Lower Bolt
Courtesy of CHRYSLER LLC

50. Install the oil indicator lower bolt (1). Tighten lower bolt to 11 N.m (97 in. lbs.).

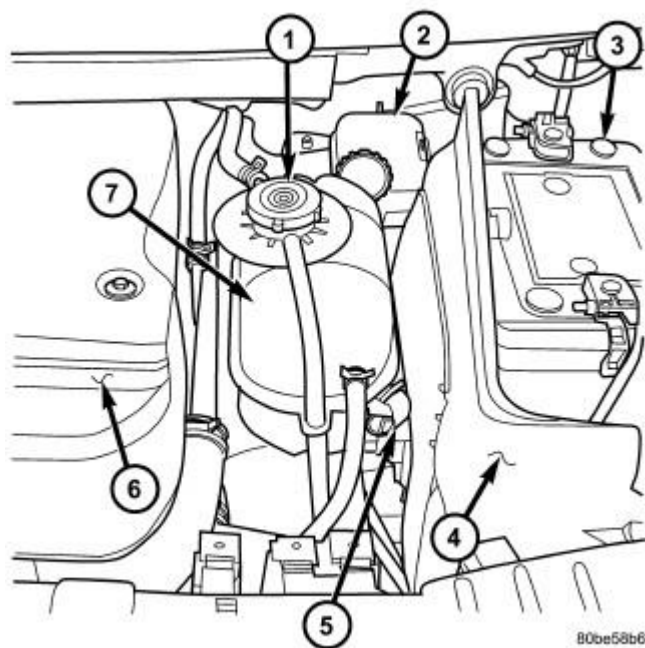


Fig. 74: Coolant Recovery Container Components
Courtesy of CHRYSLER LLC

51. Install the coolant recovery bottle. Refer to **BOTTLE, COOLANT RECOVERY, INSTALLATION**.

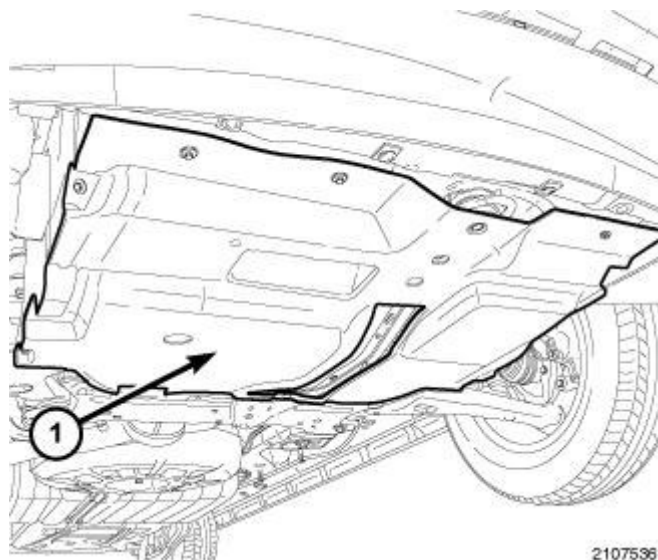


Fig. 75: Underbody Splash Shield
Courtesy of CHRYSLER LLC

52. Install the underbody splash shield (1).
53. Lower the vehicle.

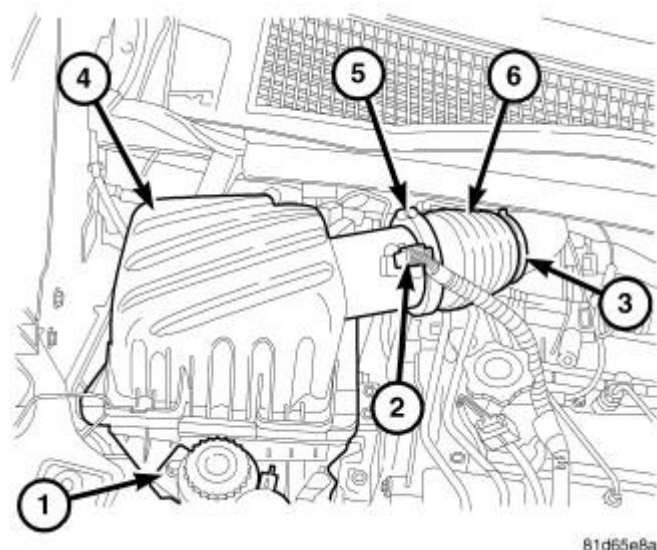


Fig. 76: Intake Air Box

Courtesy of CHRYSLER LLC

54. Install the cooling fan module. Refer to **FAN, COOLING, INSTALLATION** .
55. Install the air cleaner body. Refer to **BODY, AIR CLEANER, INSTALLATION**.
56. Charge the refrigerant system. Refer to **PLUMBING, FRONT, STANDARD PROCEDURE** .
57. Install the engine cover.

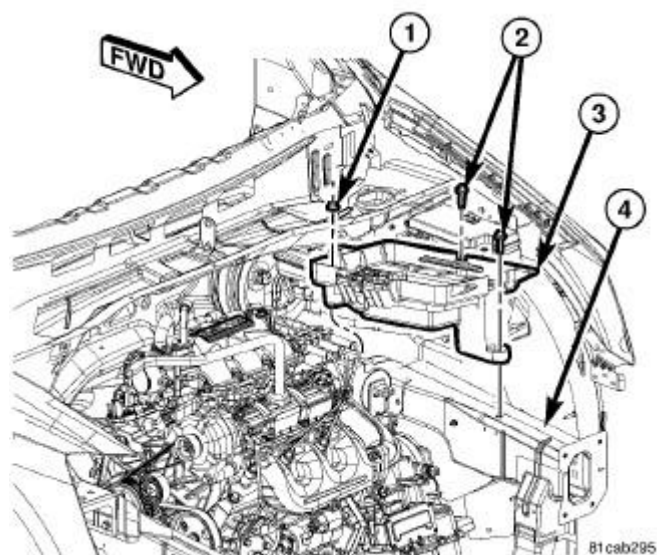


Fig. 77: Battery Tray & Fasteners

Courtesy of CHRYSLER LLC

58. Install the battery tray (3). Refer to **TRAY, BATTERY, INSTALLATION** .

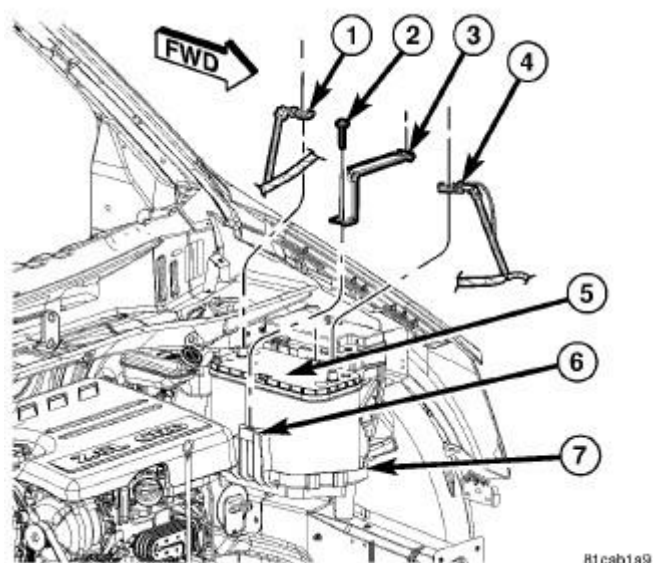


Fig. 78: Battery Cables, Brackets & Fasteners
Courtesy of CHRYSLER LLC

59. Install the battery (5). Refer to **BATTERY, INSTALLATION** .
60. Connect the battery cables (1 and 4).
61. Install a new oil filter. Fill the engine crankcase with the proper oil to the correct level. Refer to **CAPACITIES AND RECOMMENDED FLUIDS, SPECIFICATIONS** .
62. Refill the coolant system. Refer to **STANDARD PROCEDURE** .
63. Start the engine and run until operating temperature is reached.
64. Adjust transmission linkage, if necessary.

SPECIAL TOOLS

SPECIAL TOOLS


1023 - Puller (Originally Shipped In Kit Number(s) 8678.) 10368 - Set, Universal Protective Cap 9937-1 - Installer, Seal (Originally Shipped In Kit Number(s) 9937.) 9937-2 - Guide, Seal (Originally Shipped In Kit Number(s) 9937.) C-3339A - Set, Dial Indicator (Originally Shipped In Kit Number(s) 9202.) MD998772A - Compressor, Valve Spring (Originally Shipped In Kit Number(s) 8678, 8853, 8854.) MD998772A-15 - Adapter (Originally Shipped In Kit Number(s) 8678, 8853, 8854.)

VM.10010 - Adapter, Compression Test
 VM.10012 - Balance Shaft Split Gear Align
 VM.10335 - Installer Tool, Front Seal
 VM.1055 - Locking Tool
 (Originally Shipped In Kit Number(s) 9599.)
 VM.1057 - Installer, Seal
 (Originally Shipped In Kit Number(s) 9599.)
 VM.1058 - Remover, Seal
 (Originally Shipped In Kit Number(s) 9599.)
 VM.9990 - Tool, Front And Rear Seal
 VM.9991 - Alignment Tool, Camshaft Sprocket
 VM.9992 - Adapter, 90 Degree ATDC
 VM.9993 - Installer, Crankshaft Rear Oil Seal

CYLINDER HEAD

DESCRIPTION


DESCRIPTION

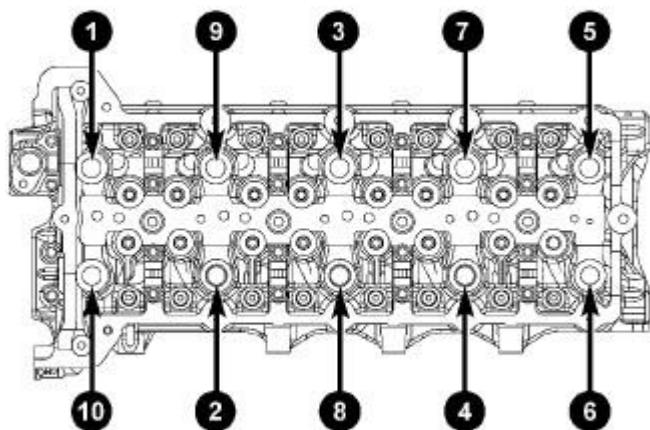

8196b560

Fig. 79: Cylinder Head Bolt Tightening Sequence
 Courtesy of CHRYSLER LLC

The 2.8L aluminum, overhead valve cylinder head is torqued in a cross pattern. The cylinder head itself is not resurfacing.

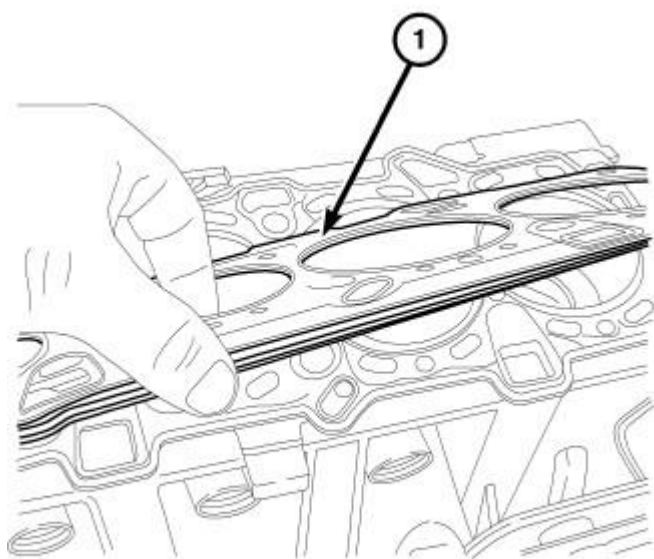


81aba770

Fig. 80: MLS Head Gasket

Courtesy of CHRYSLER LLC

1. The cylinder head uses a selectable Multi-layered Steel gasket that is available in three sizes.

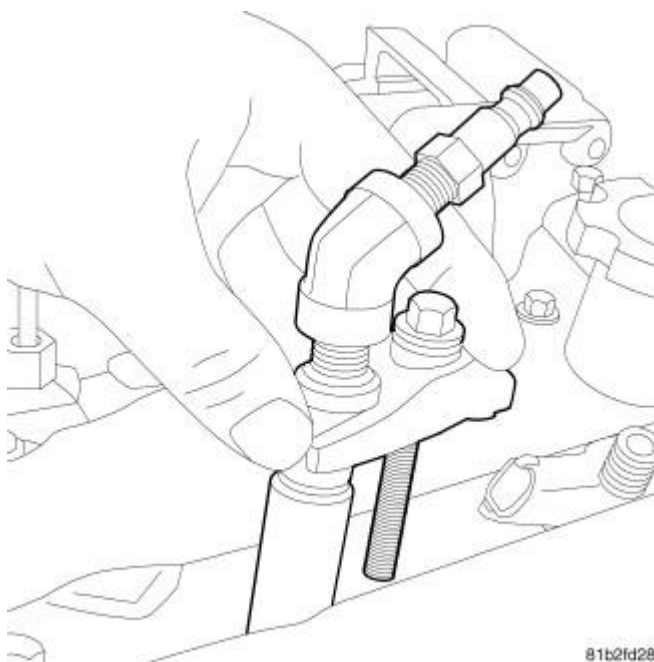STANDARD PROCEDURE**VALVE SEALS - IN VEHICLE**

81b2fd28

Fig. 81: Compression Tester

Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.

NOTE: **Rocker arms and lifters must be kept in order of removal and stored in the up right position.**

2. Remove the rocker arms. Refer to **ROCKER ARM, VALVE, REMOVAL**.
3. Install the Compression Tester Adaptor Tool VM.10010, into the injector hole and retain with an injector hold down (2) bolt.
4. Prepare the (special tool #MD998772A, Compressor, Valve Spring) for usage by inverting the tool to cylinder head holding screws so that the thread size matches the cylinder head.
5. Install the (special tool #MD998772A, Compressor, Valve Spring) onto cylinder head and using (special tool #MD998772A-15, Adapter), place the adaptor over the valve spring.
6. Connect a regulated air supply (3) to Compression Test Adapter Tool VM.10010 and pressurize the cylinder.
7. Place shop towels around the working area of the cylinder head to prevent valve locks from accidentally entering the engine.

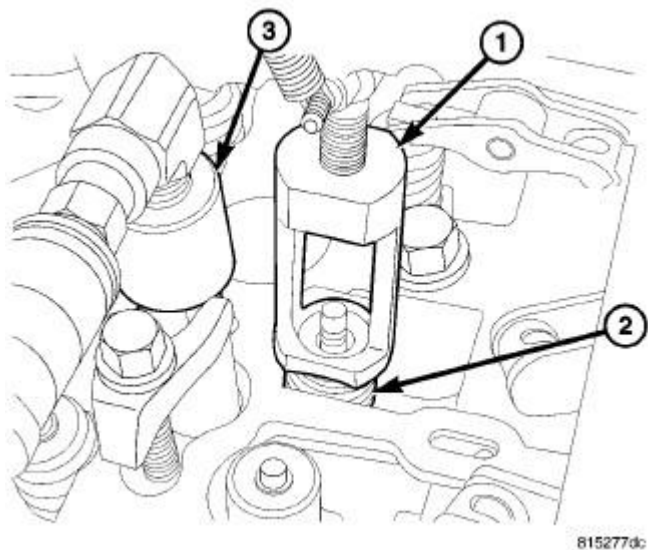


Fig. 82: Adaptors & Valve Spring
Courtesy of CHRYSLER LLC

8. Using the (special tool #MD998772A-15, Adapter) (1), collapse the valve spring (2) and remove the locks.
9. Remove the valve spring (2) assembly.

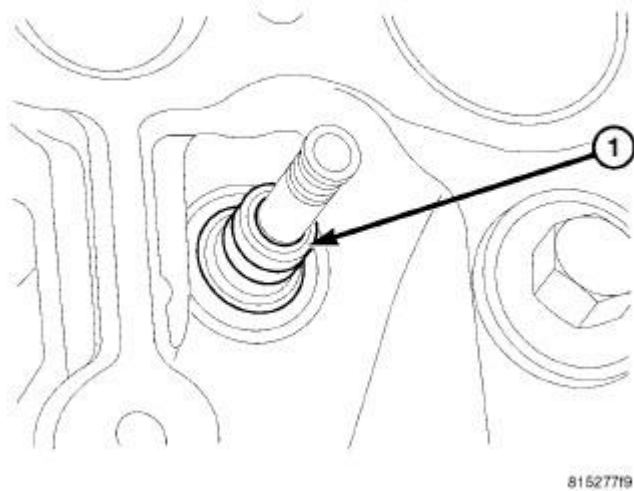


Fig. 83: Valve Seal

Courtesy of CHRYSLER LLC

1 - VALVE SEAL

10. Remove the valve seal (1).
11. Repeat this procedure for all cylinders.
12. Install the rocker arms. Refer to **ROCKER ARM, VALVE, INSTALLATION**.
13. Connect the negative battery cable.

VALVE SERVICE

This procedure is done with the cylinder head removed.


DISASSEMBLY

1. Remove the cylinder head. Refer to **CYLINDER HEAD, REMOVAL**.
2. Use Valve Spring Compressor Tool (special tool #MD998772A, Compressor, Valve Spring) and Valve Spring Adapter Tool (special tool #MD998772A, Compressor, Valve Spring) -15 and compress each valve spring.
3. Remove the valve locks, retainers, and springs.
4. Use a smooth stone or a jewelers file to remove any burrs on the top of the valve stem, especially around the groove for the locks.
5. Remove the valves, and place them in a rack in the same order as removed.

VALVE CLEANING

1. Clean all carbon deposits from the combustion chambers, valve ports, valve stems, valve stem guides and head.

- Clean all residue and gasket material from the engine cylinder head machined gasket surface.

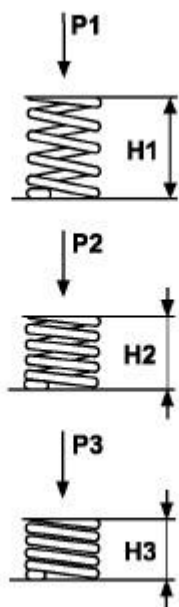INSPECTION

81202782

Fig. 84: Valve Spring Load Heights
 Courtesy of CHRYSLER LLC


LOAD Kg		HEIGHT mm		STATE
P1	0.00	H1	50.8	FREE LENGTH
P2	182-5 +10%	H2	38.0	VALVE CLOSED
P3	395±5%	H3	29.0	VALVE OPEN

- Inspect for cracks in the combustion chambers and valve ports.
- Inspect for cracks on the exhaust seat.
- Inspect for cracks in the gasket surface at each coolant passage.
- Inspect valves for burned, cracked or warped heads.
- Inspect for scuffed or bent valve stems.
- Replace valves displaying any damage.
- Check valve spring height.

VALVE SEAT REFACING

- Install a pilot of the correct size in the valve guide bore. Reface the valve seat to the specified angle with a good dressing stone. Remove only enough metal to provide a smooth finish.
- Use tapered stones to obtain the specified seat width when required.

VALVE GUIDES

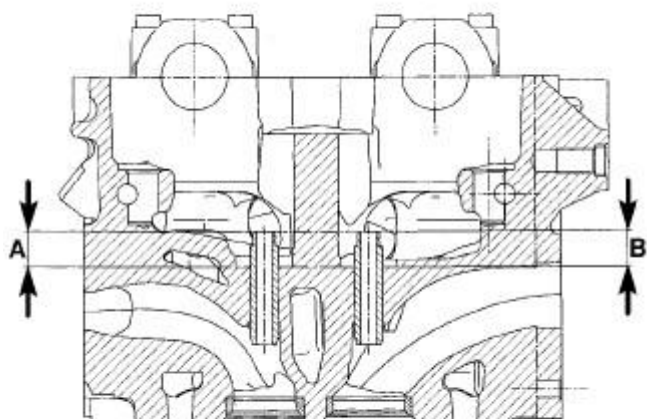

61b4f466

Fig. 85: Valve Height

Courtesy of CHRYSLER LLC

1. Valve Guides height requirement.
2. Measurement A and B: 13.50 mm - 14.00 mm (0.570 in - 0.590 in).

VALVE STEM-TO-GUIDE CLEARANCE MEASUREMENT

1. Measure and record internal diameter of valve guides. Valve guide internal diameter is 6.0 to 6.012 mm (0.2362 to 0.2366 in).
2. Measure valve stems and record diameters. Intake valve stem diameter 5.952 to 5.97 mm (0.2343 to 0.2350 in). Exhaust valve stem diameter 5.942 to 5.96 mm (0.2339 to 0.2346 in).
3. Subtract diameter of valve stem from internal diameter of its respective valve guide to obtain valve stem clearance in valve guide. Clearance of inlet valve stem in valve guide is 0.03 to 0.06 mm (.0011 to .0023 in). Clearance of exhaust valve stem in valve guide is 0.04 to 0.07 mm (.0015 to .0027 in).
4. If valve stem clearance in valve guide exceeds tolerances, new valve guides must be installed.

REMOVAL

REMOVAL - CYLINDER HEAD

1. Disconnect the battery cables.
2. Drain the cooling system. Refer to **STANDARD PROCEDURE**.
3. Remove the air cleaner body. Refer to **BODY, AIR CLEANER, REMOVAL**.

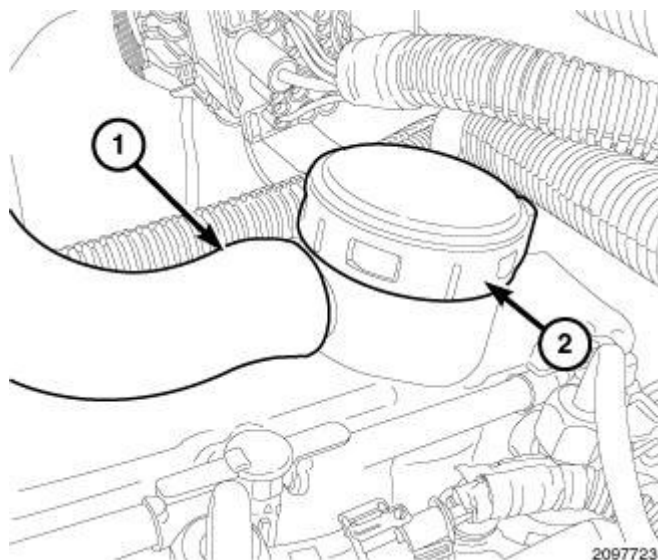


Fig. 86: Crankcase Vent Hose & Oil Separator
Courtesy of CHRYSLER LLC

4. Disconnect the crankcase vent hose (1) from the oil separator (2).

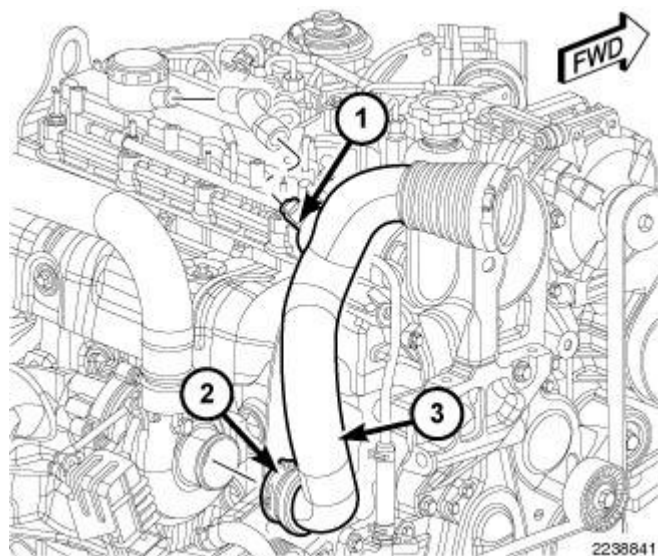


Fig. 87: Crankcase Vent Hose Heater Electrical Connector, Turbocharger Inlet Tube & Clamp
Courtesy of CHRYSLER LLC

5. Disconnect the crankcase vent hose heater harness connector (1).
6. Loosen clamp (2) and remove the turbocharger inlet tube (3) from turbocharger.

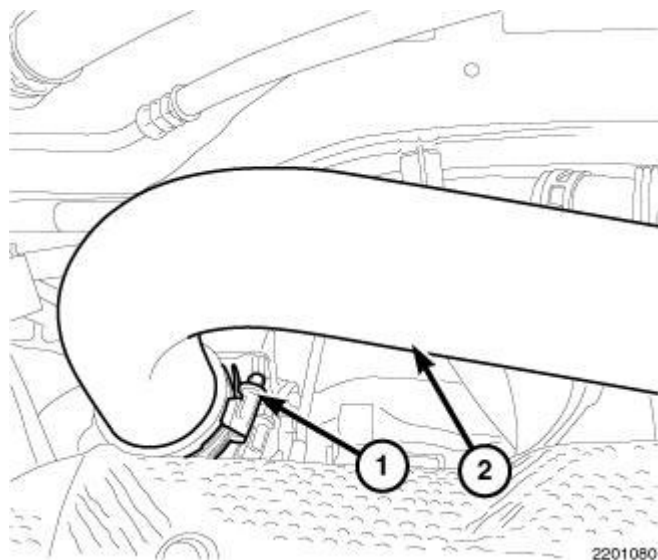


Fig. 88: Charge Air Cooler Inlet Hose & Clamp
Courtesy of CHRYSLER LLC

7. Loosen clamp (1) and disconnect the charge air cooler inlet hose (2) from turbocharger.

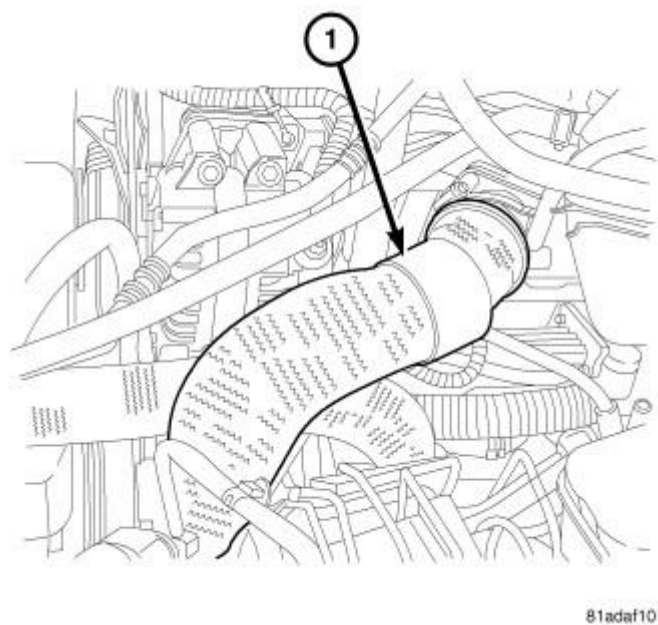


Fig. 89: Charge Air Cooler Outlet Hose
Courtesy of CHRYSLER LLC

8. Remove the Charge Air Cooler (CAC) outlet hose (1) from the EGR air flow control valve.
9. Remove the intake manifold. Refer to **MANIFOLD, INTAKE, REMOVAL**.
10. Remove the exhaust manifold. Refer to **MANIFOLD, EXHAUST, REMOVAL**.
11. Remove the camshafts. Refer to **CAMSHAFT, ENGINE, REMOVAL**.

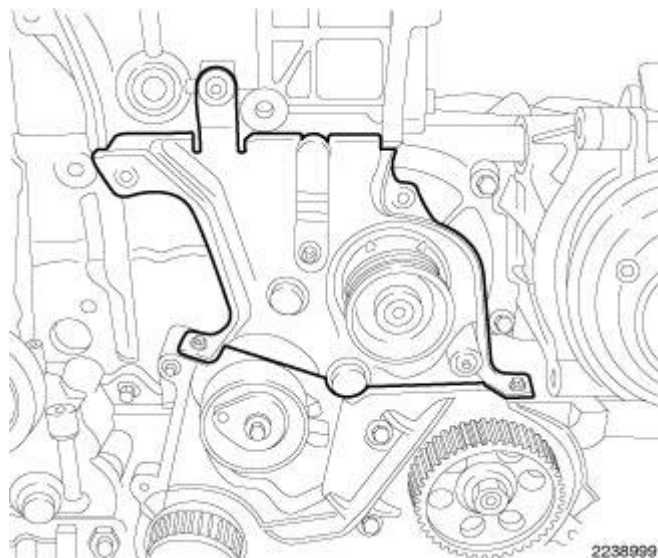


Fig. 90: Inner Timing Belt Cover
Courtesy of CHRYSLER LLC

12. Remove the inner timing belt cover.

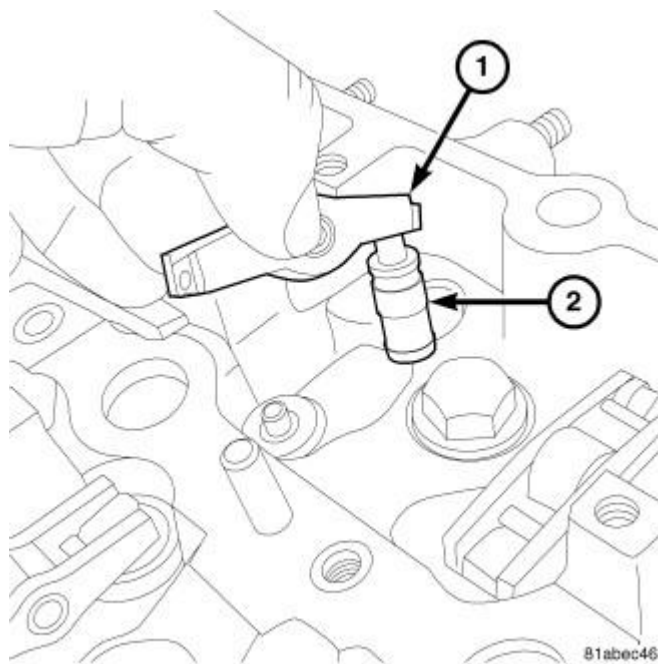


Fig. 91: Rocker Arms & Hydraulic Lifters
Courtesy of CHRYSLER LLC

NOTE: Observe the position of the rocker arms and lifters. Always return the rocker arms and lifters to their original location.

13. Remove the rocker arms (1) and hydraulic lifters (2).
14. Remove the cylinder head bolts.

15. Remove the cylinder head.

CLEANING

CLEANING

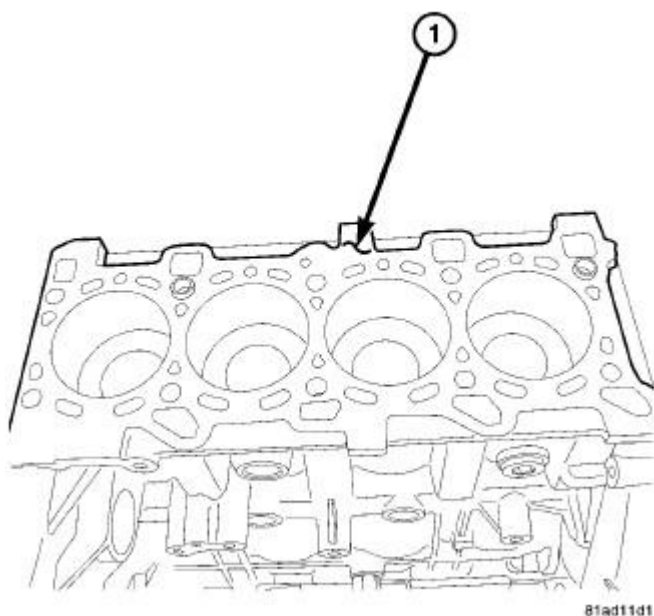


Fig. 92: Engine Block

Courtesy of CHRYSLER LLC

Thoroughly clean the engine cylinder head and cylinder block mating surfaces. Clean the intake and exhaust manifold and engine cylinder head mating surfaces. Remove all gasket material and carbon. Refer to **Engine - Standard Procedure**.

Check to ensure that no coolant or foreign material has fallen into the tappet bore area.

Remove the carbon deposits from the combustion chambers and top of the pistons.

INSPECTION

INSPECTION

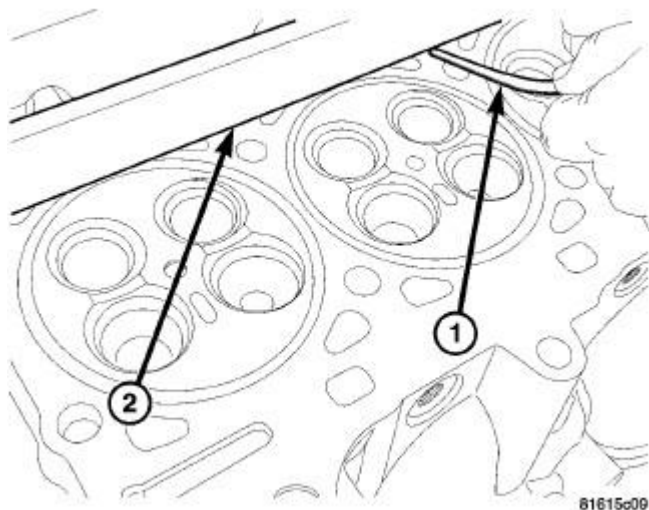


Fig. 93: Measuring Cylinder Head Flatness (1 Of 2)
Courtesy of CHRYSLER LLC

1 - FEELER GAUGE

2 - STEEL STRAIGHT EDGE

CAUTION: The cylinder head surface and straight edge must be absolutely clean before the flatness measurement is taken. **DO NOT** check flatness across the combustion chamber area or on the marks left by the gasket stopper.

Use a cleaned straight edge (2) and feeler (1) gauge to check the flatness. Lie the straight edge (2) parallel across the cooling ports. Measure before each combustion chamber toward the outer edge of the cylinder head, above and below each combustion chamber, between each combustion chamber, top and bottom, on the cylinder head and block mating surfaces. The **maximum** allowed warpage is 0.075 mm (0.003 in.).

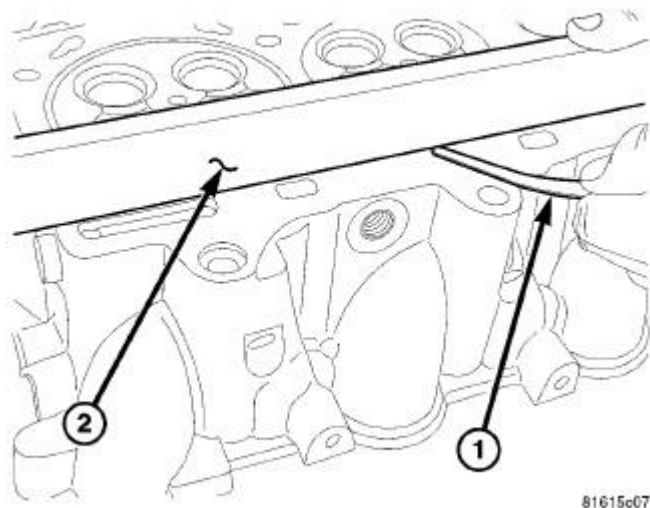


Fig. 94: Measuring Cylinder Head Flatness (2 Of 2)
Courtesy of CHRYSLER LLC

1 - Item_1

2 - Item_2

The minimum cylinder head thickness is 135.5 mm (5.33 in.).

INSTALLATION

INSTALLATION - CYLINDER HEAD


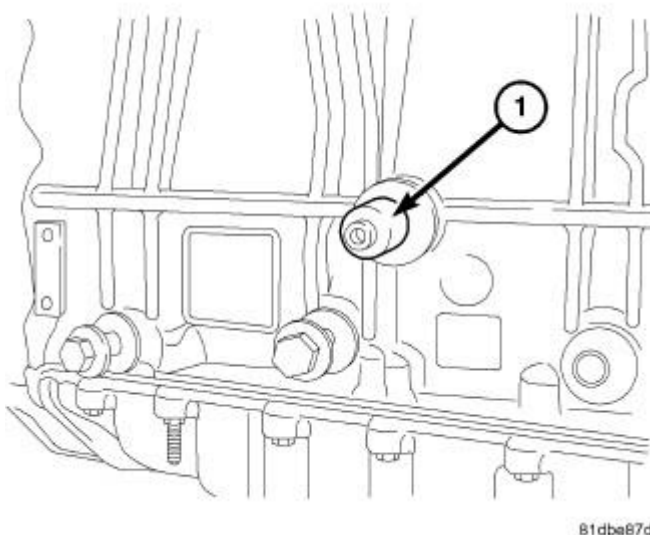


Fig. 95: Crankshaft Locking Tool
Courtesy of CHRYSLER LLC


1. Remove the Crankshaft Locking Tool (special tool #VM.9992, Adapter, 90 Degree ATDC) (1).

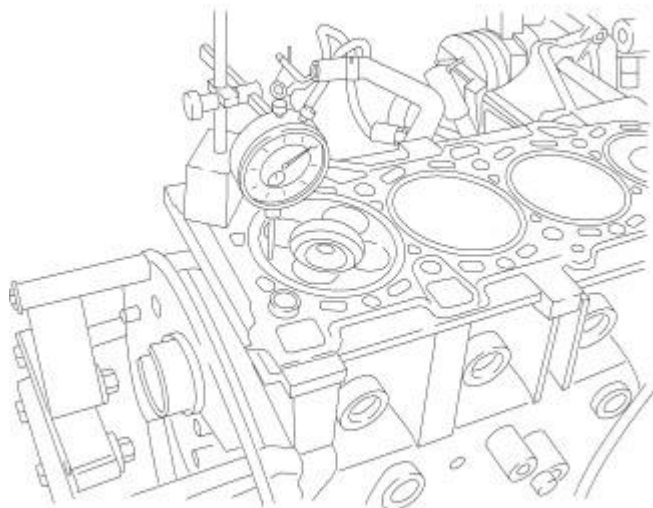

81ab861e

Fig. 96: Number One Piston At Top Dead Center
Courtesy of CHRYSLER LLC

2. Set the number one piston to top dead center (TDC).

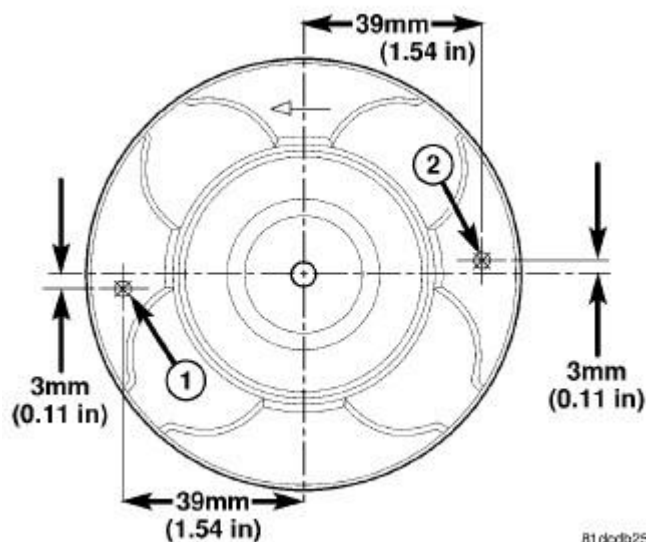

81dod25

Fig. 97: Piston Protrusion Measurement
Courtesy of CHRYSLER LLC

3. Zero the dial indicator on the top of the piston at location shown in illustration (1).
4. Use the dial indicator to measure the height of the piston at top dead center.

5. Zero the dial indicator on the top of the piston at location shown in illustration (2).
6. Use the dial indicator to measure the height of the piston at top dead center.
7. Repeat the procedure for each cylinder.
8. Average the 4 piston protrusion readings to determine the required gasket thickness.
9. Select the appropriate cylinder head gasket from the cylinder head gasket chart.

Cylinder Head Gasket Selection		
	Millimeters	Inches
DISTANCE FROM PISTON AT TDC TO CYLINDER BLOCK	0.300 - 0.399	0.0119 - 0.0158
CYLINDER HEAD GASKET THICKNESS (No Hole)	1.10	0.0434
PISTON CLEARANCE	0.700 - 0.800	0.0276 - 0.0315
DISTANCE FROM PISTON AT TDC TO CYLINDER BLOCK	0.400 - 0.499	0.0158 - 0.0197
CYLINDER HEAD GASKET THICKNESS (One Hole)	1.20	0.0473
PISTON CLEARANCE	0.700 - 0.800	0.0276 - 0.0315
DISTANCE FROM PISTON AT TDC TO CYLINDER BLOCK	0.500 - 0.600	0.0197 - 0.0237
CYLINDER HEAD GASKET	1.30	0.0512

THICKNESS (Two Holes)		
PISTON CLEARANCE	0.700 - 0.800	0.0276 - 0.0315

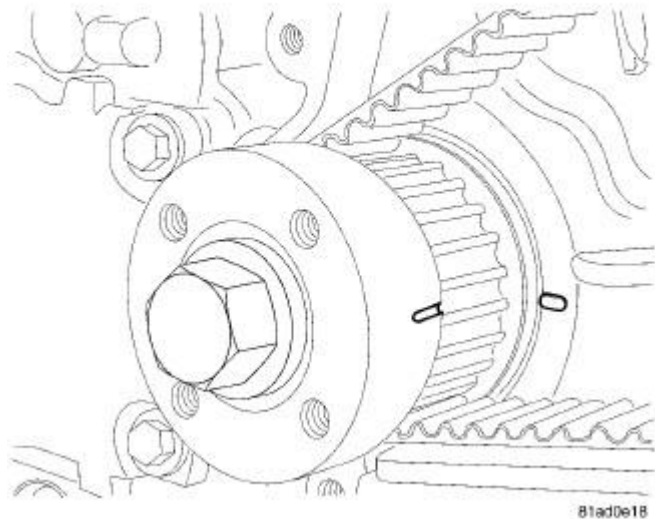


Fig. 98: Crankshaft Timing Marks
Courtesy of CHRYSLER LLC

- Return piston No. 1 to 90 degrees ATDC, and align the crankshaft timing marks.


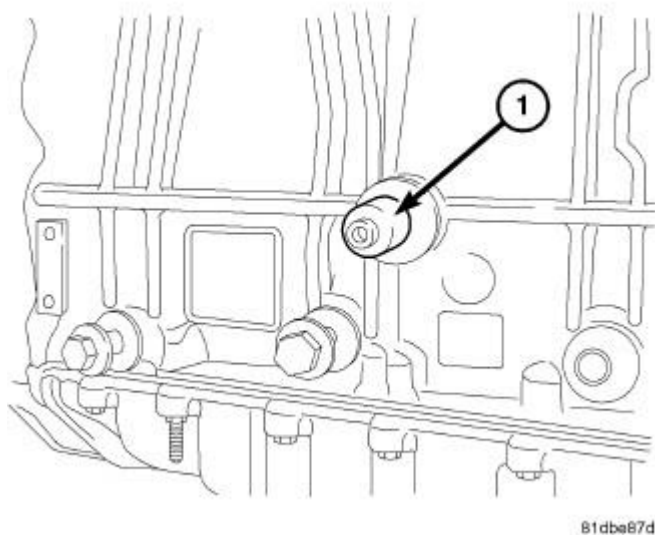


Fig. 99: Crankshaft Locking Tool
Courtesy of CHRYSLER LLC


11. Reinstall the Crankshaft Locking Tool (special tool #VM.9992, Adapter, 90 Degree ATDC) (1).

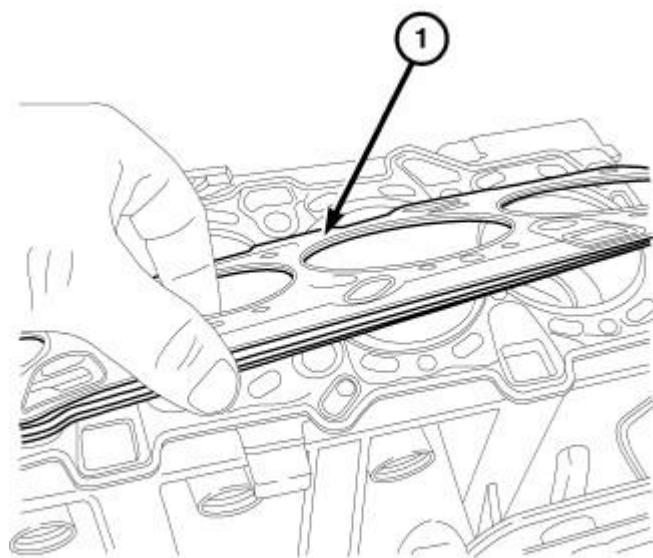

81aba770

Fig. 100: MLS Head Gasket
Courtesy of CHRYSLER LLC

12. Install the head gasket (1).
13. Install the cylinder head.

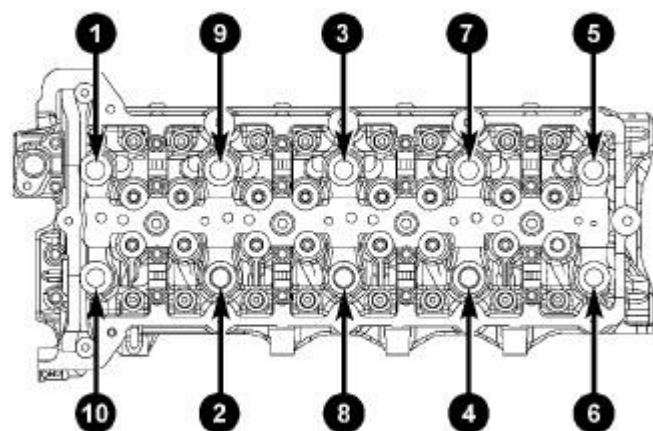

8196b560

Fig. 101: Cylinder Head Bolt Tightening Sequence

Courtesy of CHRYSLER LLC

NOTE: Always use new cylinder head bolts whenever the existing bolts have been removed.

14. Install the cylinder head bolts in the illustrated pattern. Tighten the bolts to 30 N.m (22 ft. lbs.).
15. Repeat the pattern, turning the bolts an additional 85 degrees. Repeat the pattern twice more, turning an additional 85 degrees each time for a total of 255 degrees.

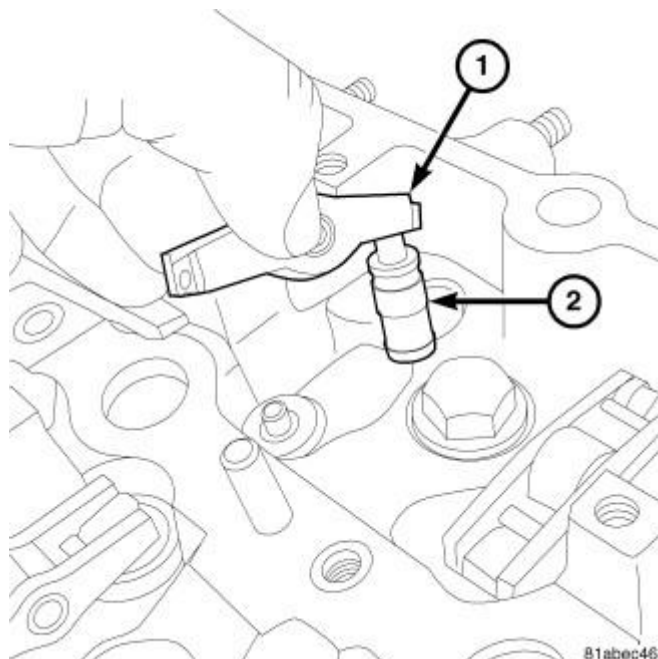


Fig. 102: Hydraulic Lifters & Rocker Arms
Courtesy of CHRYSLER LLC

NOTE: Make sure to return the lifters and arms to their original position.

16. Install the hydraulic lifters (2) and rocker arms (1).

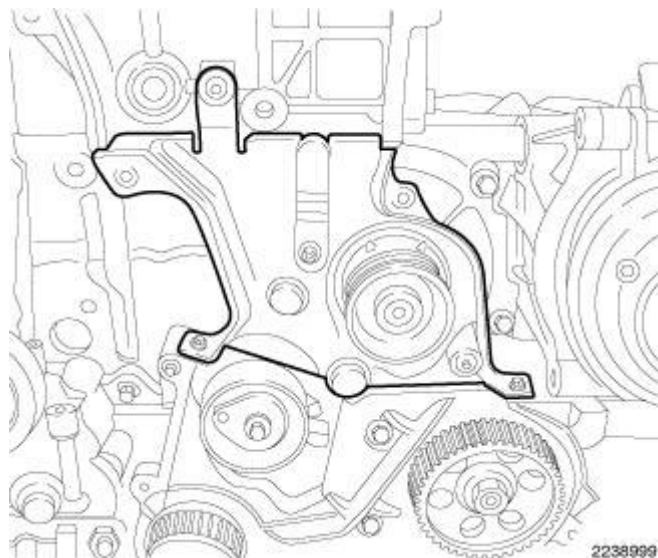


Fig. 103: Inner Timing Belt Cover
Courtesy of CHRYSLER LLC

17. Install the inner front cover. Torque the bolts to 11 N.m (97 in. lbs.).
18. Install the camshafts. Refer to **CAMSHAFT, ENGINE, INSTALLATION**.
19. Install the exhaust manifold. Refer to **MANIFOLD, EXHAUST, INSTALLATION**.


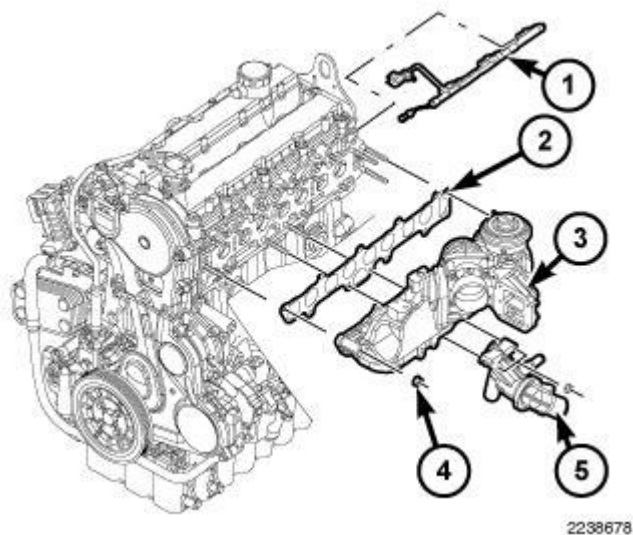


Fig. 104: Glow Plug Harness, Gasket, Intake Manifold, Fasteners & Thermostat Housing
Courtesy of CHRYSLER LLC


20. Install the intake manifold (3). Refer to **MANIFOLD, INTAKE, INSTALLATION**.

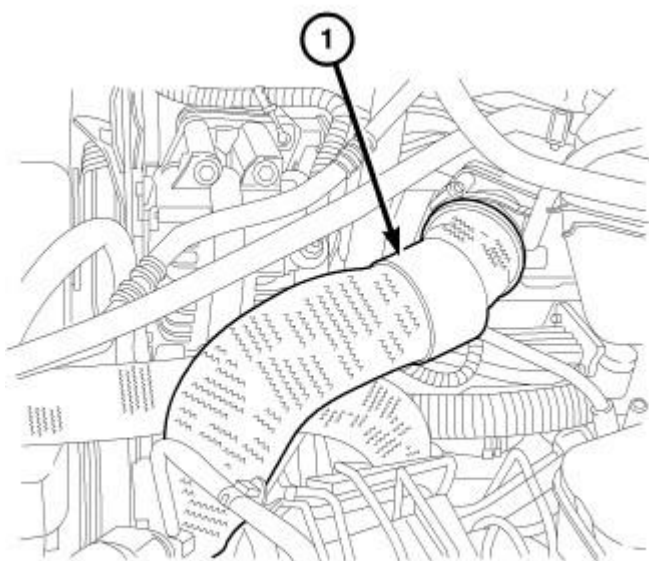

81adaf10

Fig. 105: Charge Air Cooler Outlet Hose
Courtesy of CHRYSLER LLC

21. Install the charge air cooler outlet hose (1) top the EGR air flow control valve.

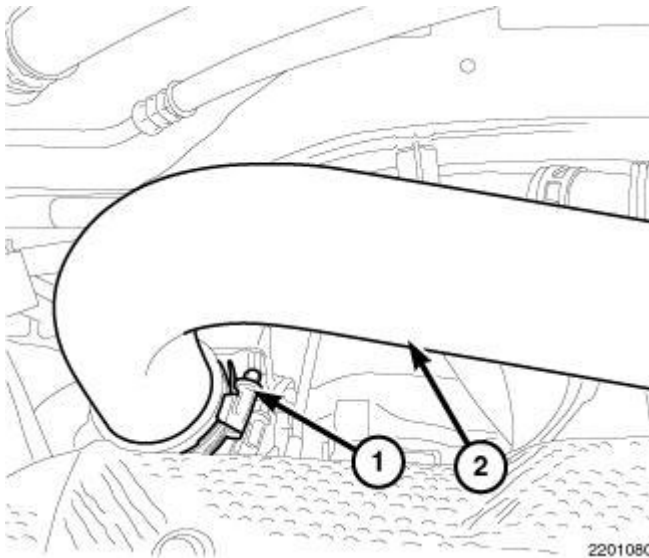

2201080

Fig. 106: Charge Air Cooler Inlet Hose & Clamp
Courtesy of CHRYSLER LLC

22. Install the charge air cooler inlet hose (2) to the turbocharger and tighten clamp (1).

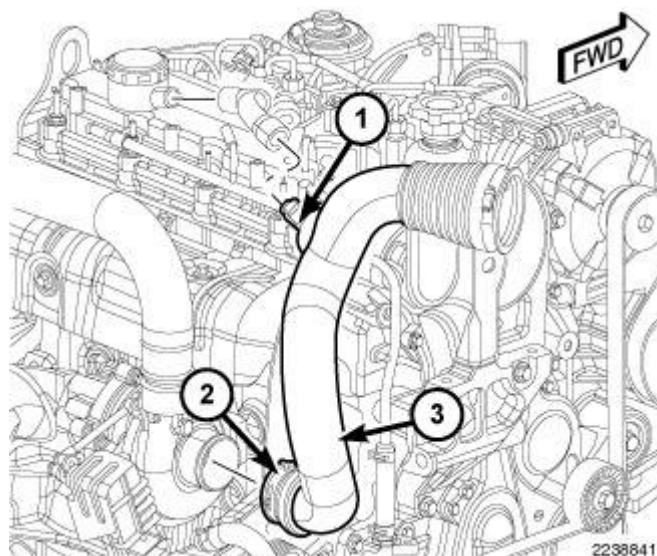


Fig. 107: Crankcase Vent Hose Heater Electrical Connector, Turbocharger Inlet Tube & Clamp
Courtesy of CHRYSLER LLC

23. Install the turbocharger inlet tube (3) and securely tighten clamp (2).
24. Connect the crankcase vent hose heater harness connector (1).

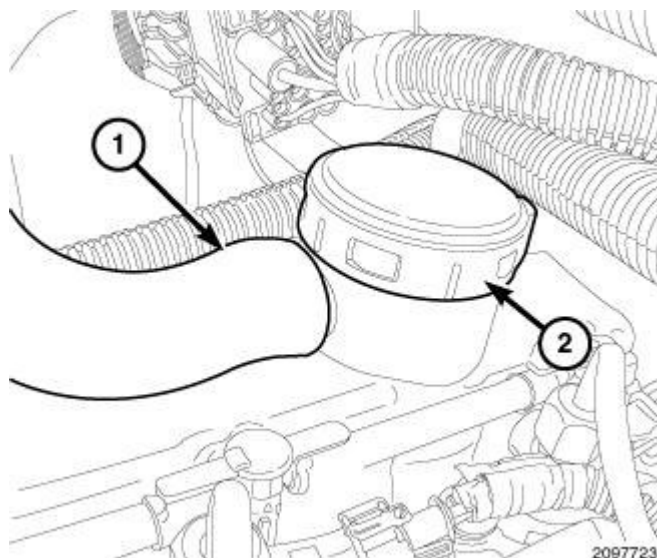


Fig. 108: Crankcase Vent Hose & Oil Separator
Courtesy of CHRYSLER LLC

25. Connect the crankcase vent hose (1) to the oil separator (2).
26. Install the intake air body. Refer to **BODY, AIR CLEANER, INSTALLATION**.
27. Fill the cooling system. Refer to **STANDARD PROCEDURE**.
28. Connect the battery cables.
29. Start the engine, and inspect for leaks.

CAMSHAFT, ENGINE

DESCRIPTION

DESCRIPTION

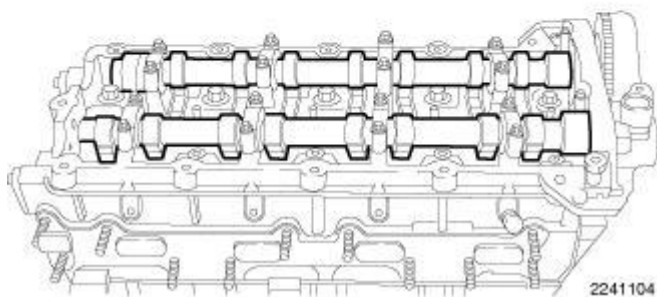


Fig. 109: Camshafts

Courtesy of CHRYSLER LLC

The camshafts are made of cast iron with eight machined lobes and four bearing journals.


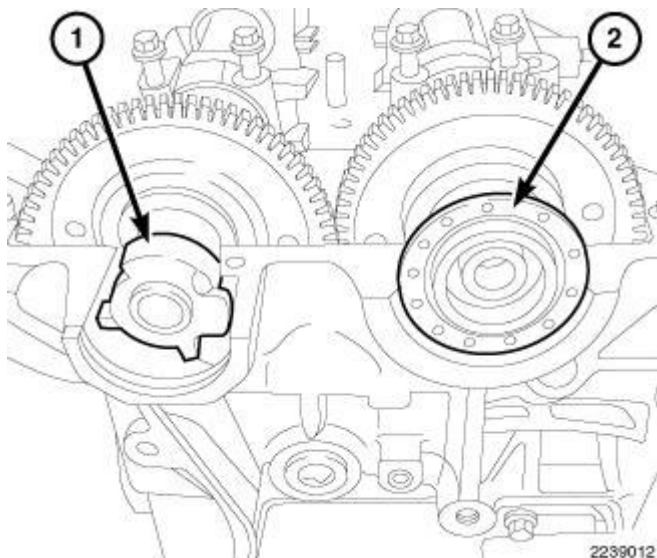


Fig. 110: Exhaust Camshaft & Intake Camshaft Oil Seal

Courtesy of CHRYSLER LLC


1. The exhaust camshaft (1) incorporates the Camshaft Position (CMP) sensor reluctor wheel. The intake camshaft uses a camshaft seal (2).

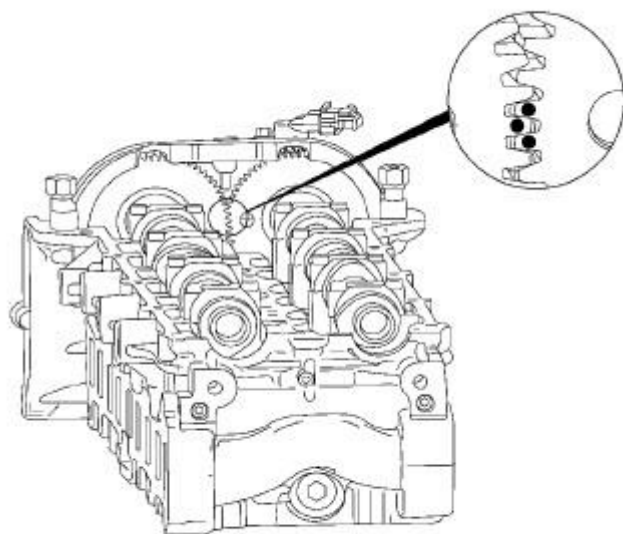

81b113a8

Fig. 111: Camshaft Timing Dots
Courtesy of CHRYSLER LLC

2. The dots on the back of the camshaft gears are for initial timing only. These dots are for timing the camshafts to each other.

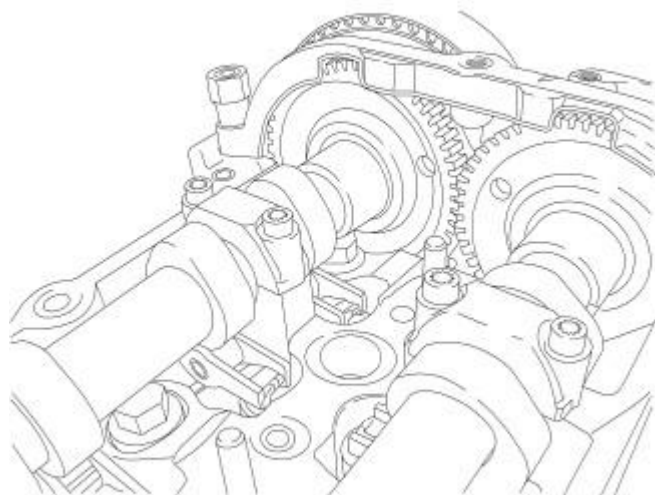

81ad10c7

Fig. 112: Camshafts Set To 90 Degrees ATDC
Courtesy of CHRYSLER LLC

3. To correctly set engine timing, the camshafts must be set to 90° ATDC. The Camshaft Locking Tool

(special tool #VM.9991, Alignment Tool, Camshaft Sprocket) is used to correctly set the camshafts to their proper location. The illustration above shows camshafts set at 90° ATDC.

REMOVAL

REMOVAL - CAMSHAFT

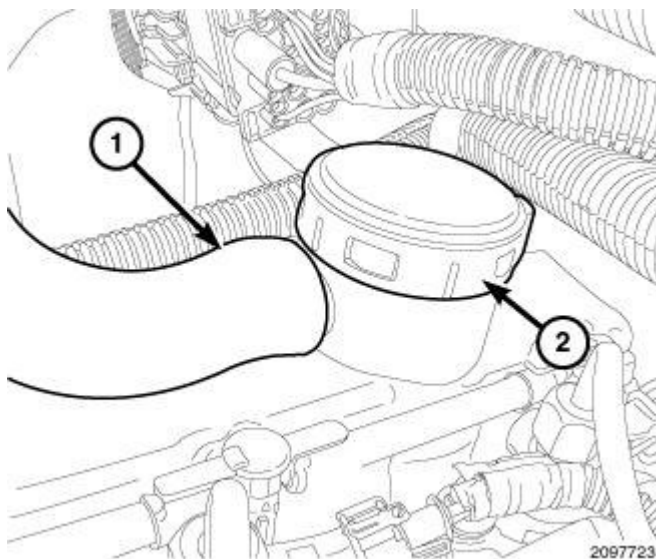


Fig. 113: Crankcase Vent Hose & Oil Separator
Courtesy of CHRYSLER LLC

1. Disconnect negative battery cable.
2. Remove engine cover.
3. Remove the air cleaner body. Refer to **BODY, AIR CLEANER, REMOVAL**.
4. Disconnect the crankcase vent hose (1) from the oil separator (2).

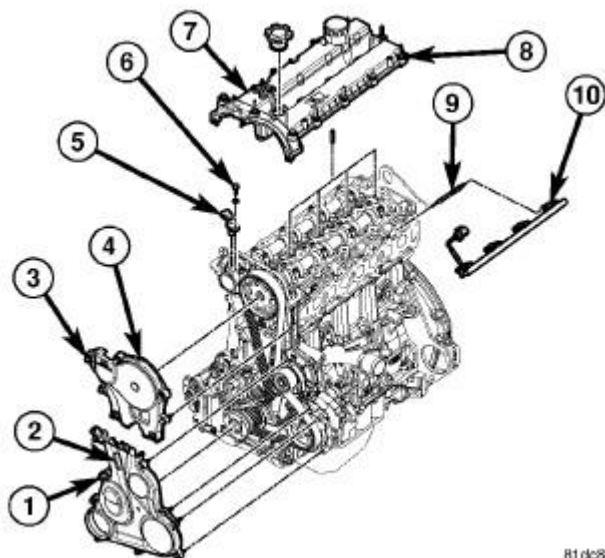


Fig. 114: Upper And Lower Front Covers With Fasteners
Courtesy of CHRYSLER LLC

5. Remove the cylinder head cover (7). Refer to **COVER(S), CYLINDER HEAD, REMOVAL.**

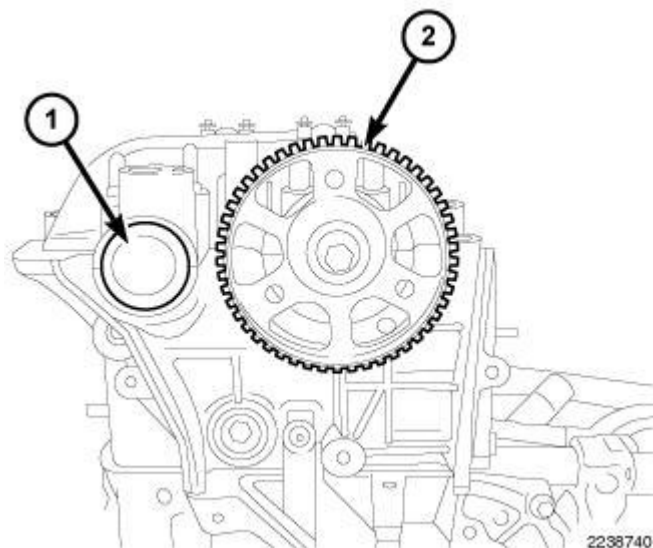


Fig. 115: Exhaust Camshaft Oil Seal & Camshaft Sprocket
Courtesy of CHRYSLER LLC

6. Remove the camshaft sprocket (2). Refer to **SPROCKET(S), TIMING BELT AND CHAIN, REMOVAL.**


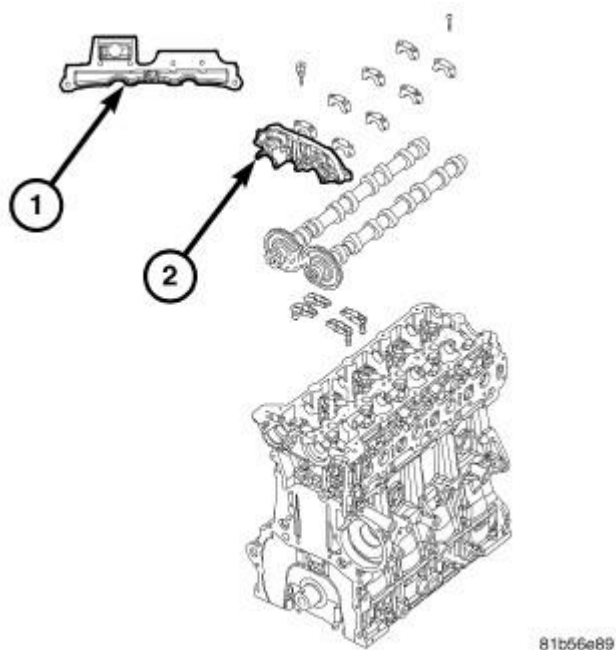


Fig. 116: Front Camshaft Bearing Journal
Courtesy of CHRYSLER LLC


7. Remove bolts, and the front camshaft bearing journal (2).

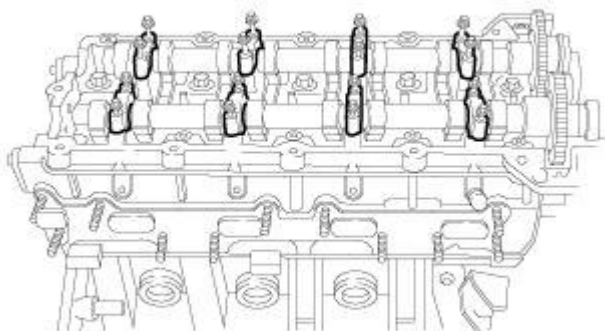

2238869

Fig. 117: Camshaft Bearing Caps & Bolts
Courtesy of CHRYSLER LLC

8. Using a circular pattern, loosen the camshaft bearing cap bolts.

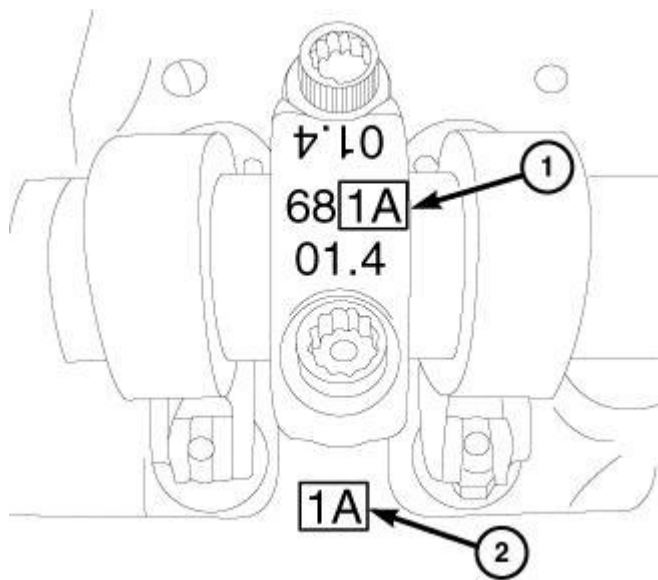

61417

Fig. 118: Identifying Camshaft Cap & Cylinder Head (Intake Side) Markings
Courtesy of CHRYSLER LLC

NOTE: The camshaft bearing caps must be installed in the same location and direction as they were removed. Match the marks on the camshaft cap to the marks on the cylinder head (1). The illustration is an example of a camshaft cap mark.

9. Remove the camshaft bearing caps.

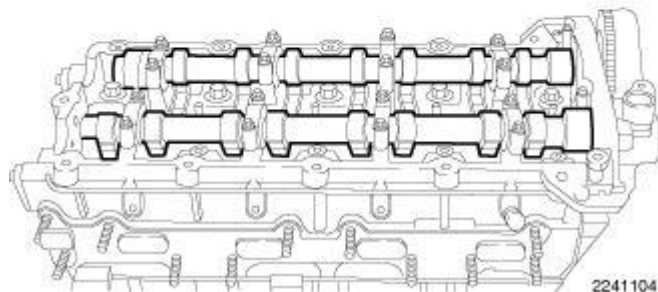


Fig. 119: Camshafts
Courtesy of CHRYSLER LLC

10. Remove the camshafts.

INSTALLATION

INSTALLATION - CAMSHAFT

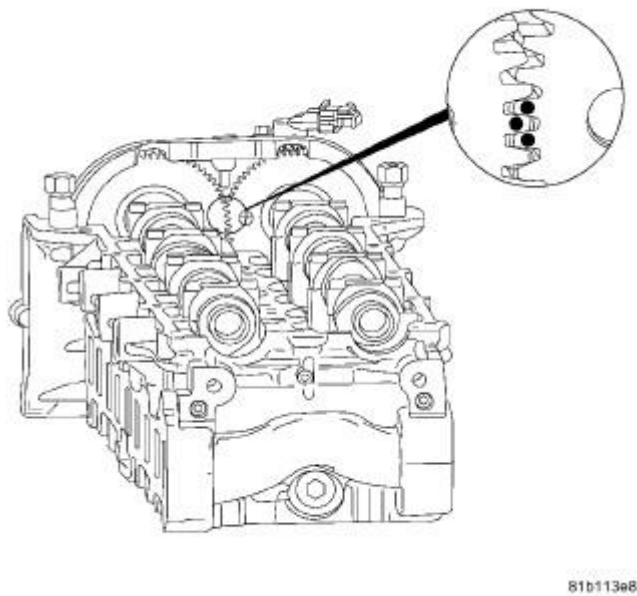


Fig. 120: Camshaft Timing Dots

Courtesy of CHRYSLER LLC

1. Lubricate the camshaft journals with Mopar® Engine Oil Supplement, or equivalent.

NOTE: The dots on the back of the camshaft gears are for initial timing only. These dots are for timing the camshafts to each other. To correctly set engine timing, the camshafts must be set to 90° ATDC. The camshaft locking tool is used to correctly set the camshafts to their proper location.

2. Make sure that the three small orientation dots marks on the back side of the camshaft gears are horizontal and facing each other.
3. Carefully install camshafts onto the camshaft journals and align the dots.

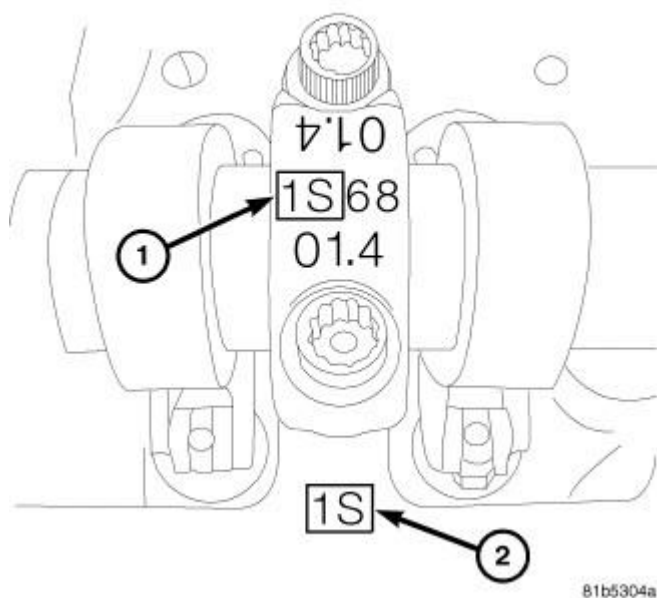


Fig. 121: Identifying Camshaft Cap & Cylinder Head (Exhaust Side) Markings
Courtesy of CHRYSLER LLC

4. The camshaft cap must be aligned with the mark (1) aligned in the same direction as the cylinder head mark (2). In the illustration, the camshaft cap is the first cylinder (indicated by the 1S); the exhaust side of the cylinder head (indicated by the 1S). Each camshaft cap location is marked in this manner on both the camshaft cap and cylinder head. It is critical that all of the camshaft caps are returned to their correct.

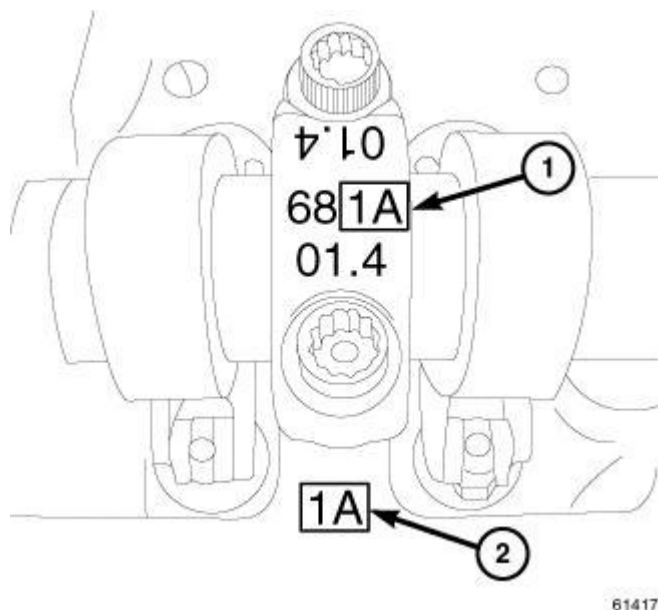


Fig. 122: Identifying Camshaft Cap & Cylinder Head (Intake Side) Markings
Courtesy of CHRYSLER LLC

5. The camshaft cap must be aligned with the mark (1) aligned in the same direction as the cylinder head mark (1). In the illustration, the camshaft cap is the first cylinder (indicated by the 1A); the intake side of the cylinder head is (indicated by the 1A). Each camshaft cap location is marked in this manner on both the camshaft cap and cylinder head. It is critical that all of the camshaft caps are returned to their correct locations.


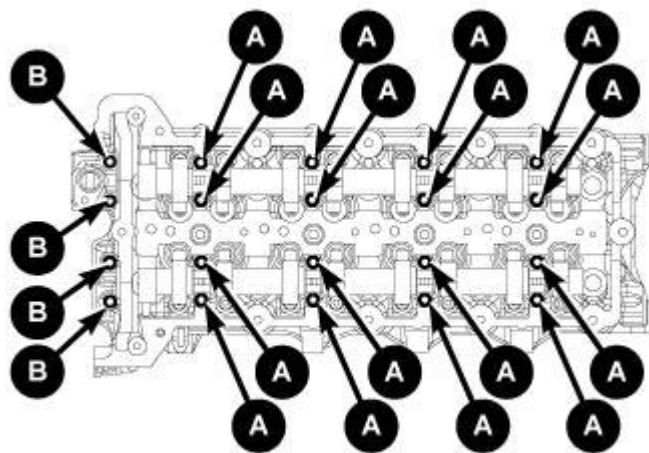


Fig. 123: Identifying Camshaft Bolts
Courtesy of CHRYSLER LLC

NOTE: When the camshaft caps are removed, always replace the camshaft cap bolts.

6. The camshaft bolts have 3 different bolt sizes:


- Bolts A are M6 35 mm
- Bolts B are M6 45 mm

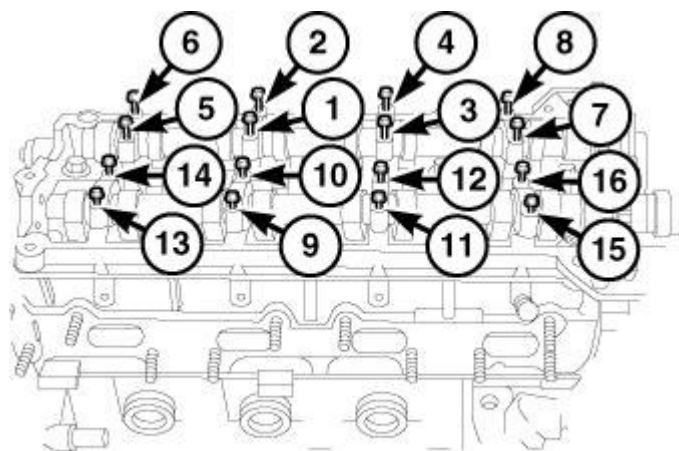

2711430

Fig. 124: Camshaft Tightening Sequence
Courtesy of CHRYSLER LLC

7. Using new bolts and the tightening sequence shown in illustration, install the camshaft bolts and tighten bolts in one turn increments until finger tight.

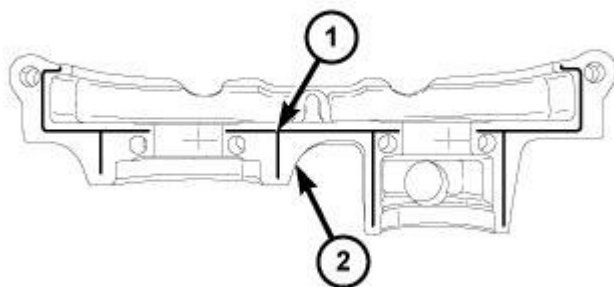


2711392

Fig. 125: Camshaft Cap RTV Location
Courtesy of CHRYSLER LLC

8. Apply a thin bead of Loctite® 510 to the front camshaft bearing journal (1) in the location illustrated (1).


9. Install the front camshaft bearing journal and tighten the new bolts finger tight.

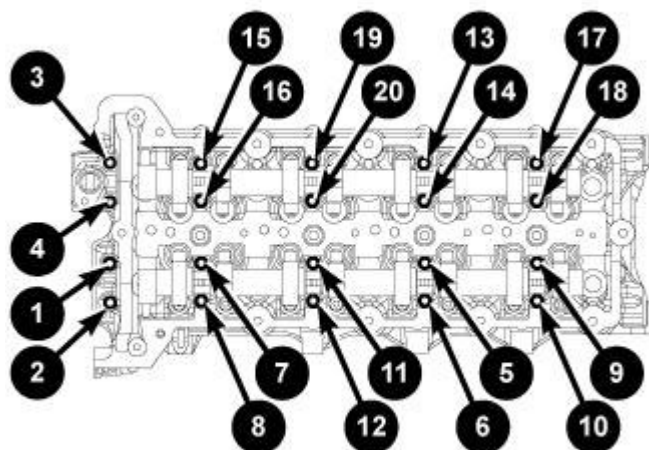

61633

Fig. 126: Camshaft Cap Bolt Tightening Sequence
Courtesy of CHRYSLER LLC

10. Using the tightening sequence shown in illustration, tighten the camshaft cap bolts to 11 N.m (97 in. lbs.).

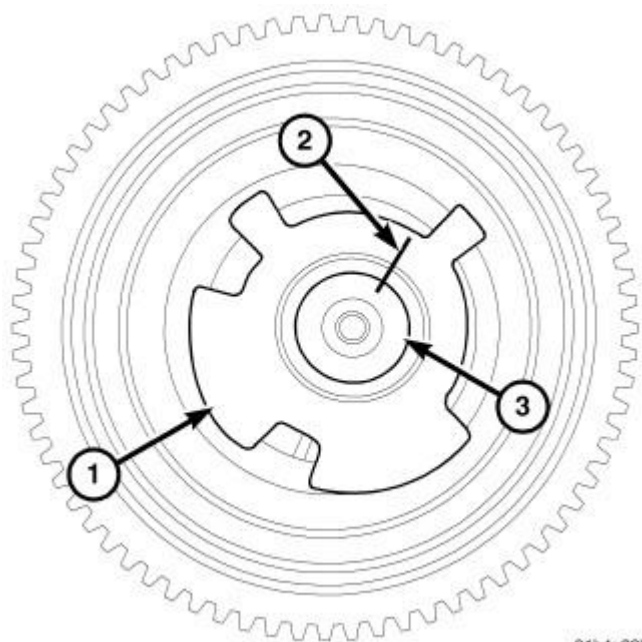

81b4a22b

Fig. 127: Marking CMP Sensor Reluctor Wheel & Exhaust Camshaft
Courtesy of CHRYSLER LLC

11. Use a paint marker to mark the location of the camshaft tone wheel on the camshaft. It is critical that the

tone wheel is not rotated on the camshaft.

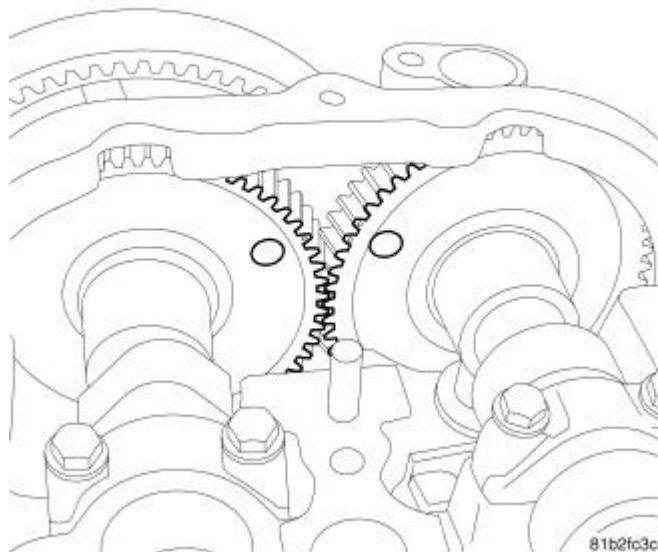


Fig. 128: Camshaft Marks At 90 Degrees ATDC
Courtesy of CHRYSLER LLC

WARNING: DO NOT USE CAMSHAFT LOCKING TOOL (special tool #VM.9991, Alignment Tool, Camshaft Sprocket) TO ROTATE THE ENGINE. THE TOOL MAY ROTATE THE TONE WHEEL ON THE CAMSHAFT. IF THE TONE WHEEL IS ROTATED ON THE CAMSHAFT, THE CAMSHAFT MUST BE REPLACED.

12. Rotate the camshafts so that the Camshaft Locking Tool (special tool #VM.9991, Alignment Tool, Camshaft Sprocket) fits into place.

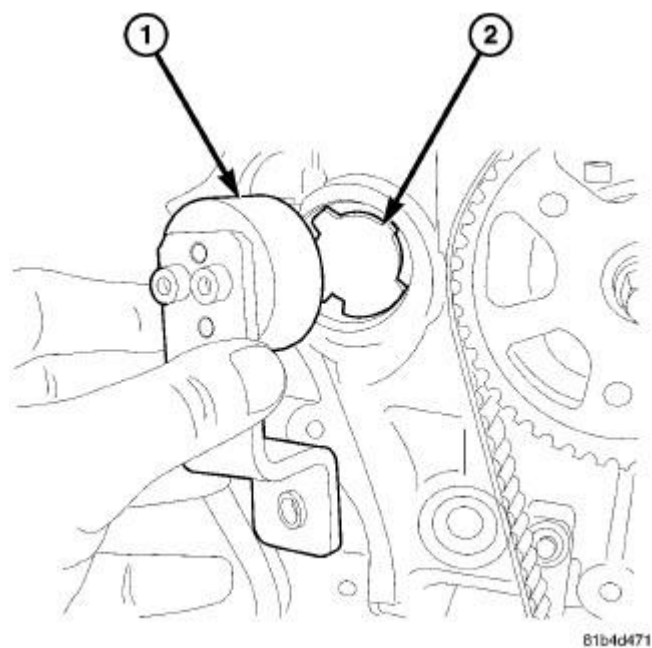


Fig. 129: Removing/Installing Camshaft Lock Tool
Courtesy of CHRYSLER LLC

13. Install the Camshaft Locking Tool (special tool #VM.9991, Alignment Tool, Camshaft Sprocket) (1).

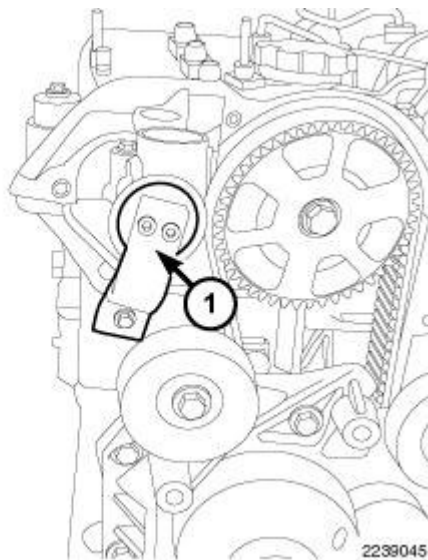


Fig. 130: Camshaft Locking Tool
Courtesy of CHRYSLER LLC

14. When the Camshaft Locking Tool (special tool #VM.9991, Alignment Tool, Camshaft Sprocket) (1) is bolted in place, the camshafts are locked at 90 degrees ATDC.

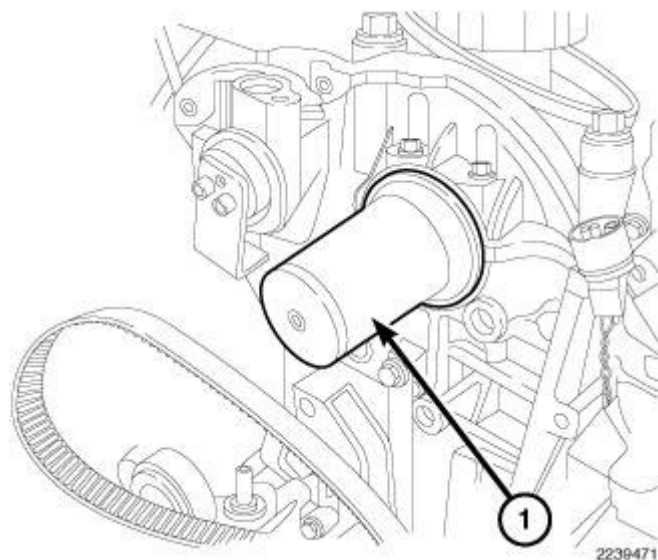


Fig. 131: Seal Installer
Courtesy of CHRYSLER LLC

15. Using the Seal Guide (special tool #9937-2, Guide, Seal) and Seal Installer (1) (special tool #9937-1, Installer, Seal) (1), install the intake camshaft oil seal.

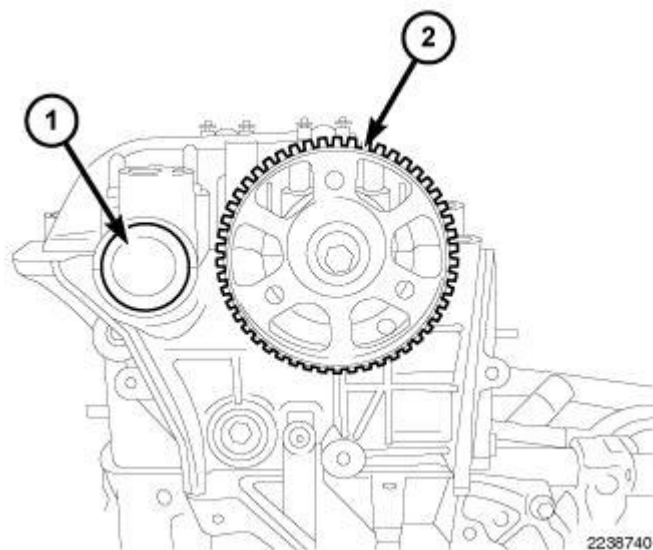


Fig. 132: Exhaust Camshaft Oil Seal & Camshaft Sprocket
Courtesy of CHRYSLER LLC

16. Install the camshaft sprocket (2). Refer to **SPROCKET(S), TIMING BELT AND CHAIN, INSTALLATION.**

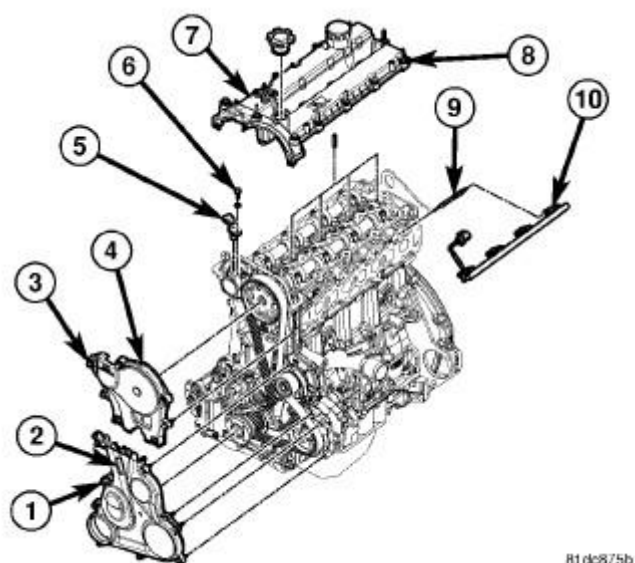


Fig. 133: Upper And Lower Front Covers With Fasteners
Courtesy of CHRYSLER LLC

17. Install the cylinder head cover (7). Refer to **COVER(S), CYLINDER HEAD, INSTALLATION.**

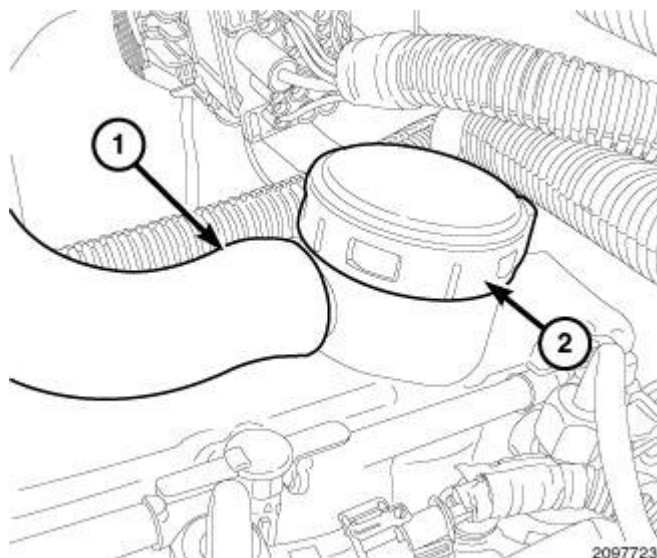
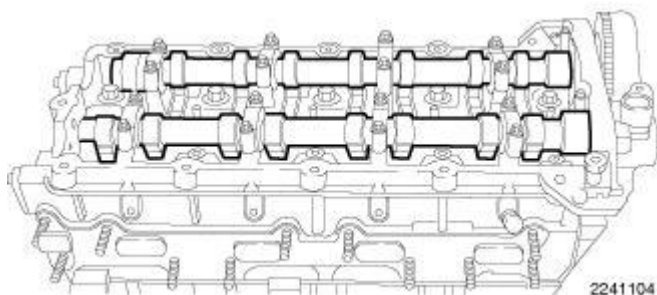


Fig. 134: Crankcase Vent Hose & Oil Separator
Courtesy of CHRYSLER LLC

18. Connect the crankcase vent hose (1) from the oil separator (2).
19. Install the air cleaner body. Refer to **BODY, AIR CLEANER, INSTALLATION.**
20. Install the engine cover.
21. Connect negative battery cable.

CHECKING CAMSHAFT ENDPLAY

**Fig. 135: Camshafts**

Courtesy of CHRYSLER LLC

1. After camshafts are properly installed in cylinder head cover check end play of camshafts with a dial indicator.


NOTE: If the camshaft endplay is not within specification, replace the cylinder head.

2. Measure the camshaft end play with a dial indicator. The end play should be between 0.15 mm 0.35 mm (0.006 in - 0.014 in.).

COVER(S), CYLINDER HEAD

DESCRIPTION


DESCRIPTION

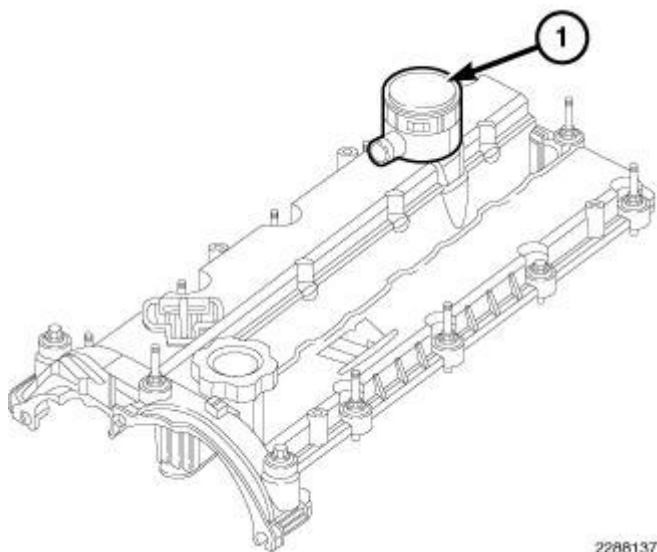

2286137

Fig. 136: Crankcase Ventilation (CCV) System
Courtesy of CHRYSLER LLC

The cylinder head cover is made of an injection molded composite and incorporates crankcase ventilation (CCV) system (1).

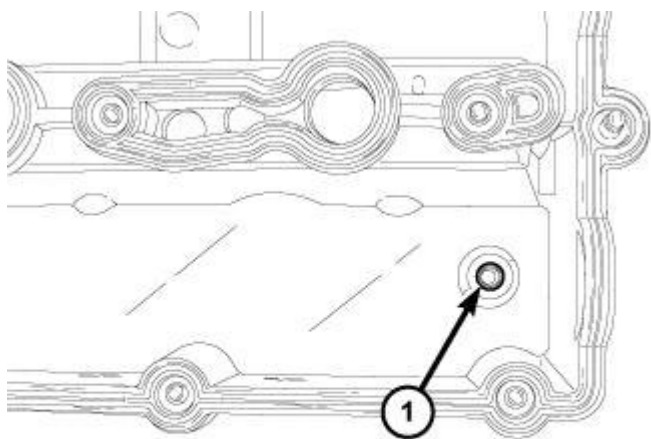

2238983

Fig. 137: Oil Drain Back Access Hole
Courtesy of CHRYSLER LLC

The cylinder head cover also incorporates a oil drain back hole (1) for the crankcase ventilation (CCV) system.

REMOVAL

REMOVAL - CYLINDER HEAD COVER

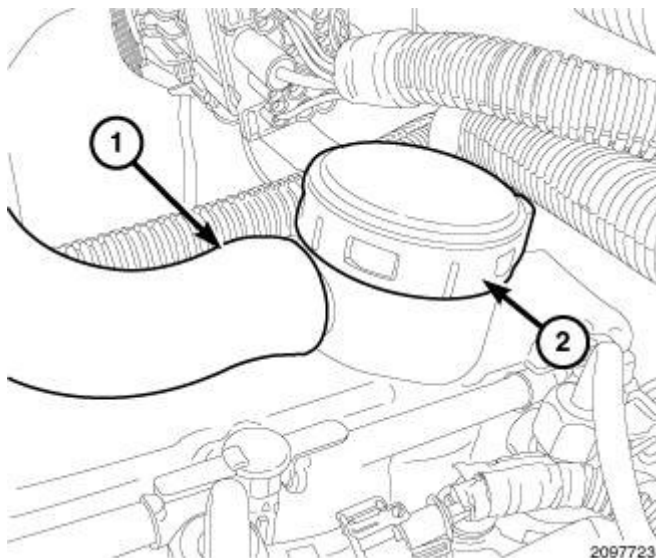


Fig. 138: Crankcase Vent Hose & Oil Separator
Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Remove the engine cover.
3. Remove the air cleaner body. Refer to **BODY, AIR CLEANER, REMOVAL**.
4. Disconnect the crankcase vent hose (1) from the oil separator (2).

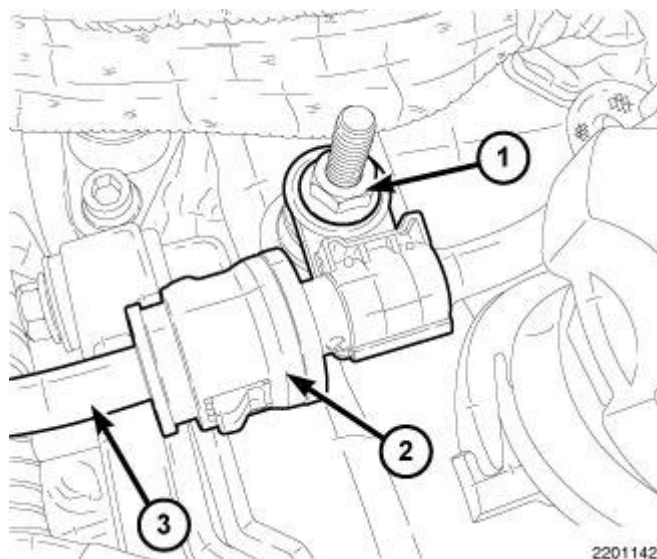


Fig. 139: Fuel Injector Return Line & Retaining Nut
Courtesy of CHRYSLER LLC

5. Remove the retaining nut (1) and disconnect the fuel injector return line (2).

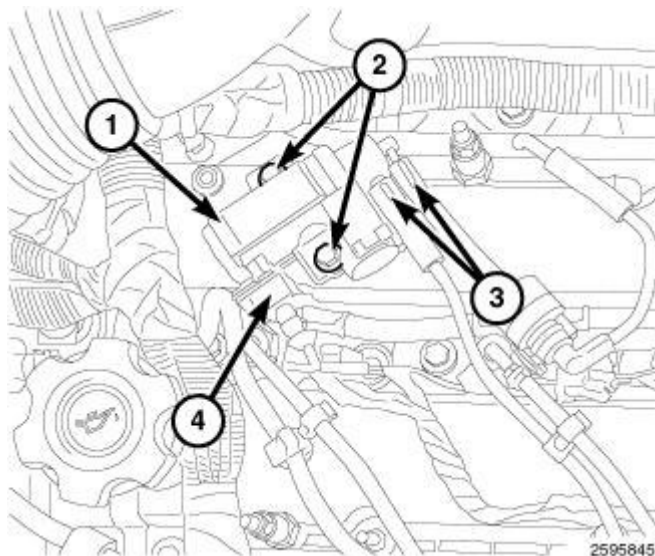


Fig. 140: EGR Vacuum Solenoid, Bolts, Vacuum Lines & Harness Connector
Courtesy of CHRYSLER LLC

6. Disconnect the EGR vacuum solenoid vacuum lines (3).
7. Disconnect the EGR vacuum solenoid harness connector (4).
8. Remove bolts (2) and the vacuum solenoid (1).

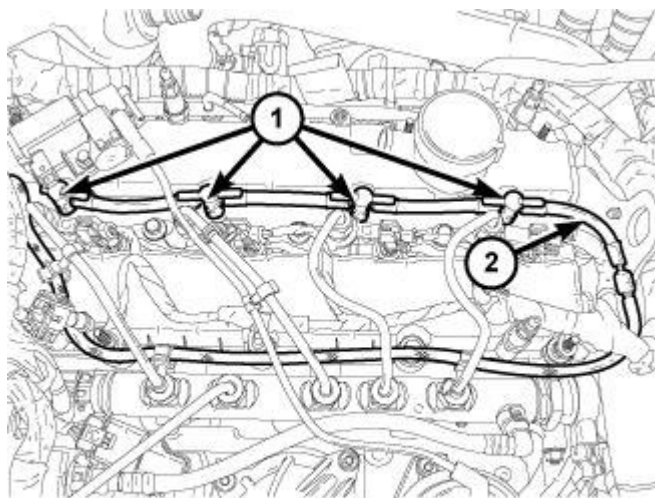


Fig. 141: Lock Buttons & Fuel Injector Return Line
Courtesy of CHRYSLER LLC

9. A lock button (1) is used to secure the common fuel return line to each fuel injector. Use your fingers to lift up all four lock buttons (1) to unlock them. After unlocking all four buttons, lift fuel return line assembly and remove the fuel injector return line (2).

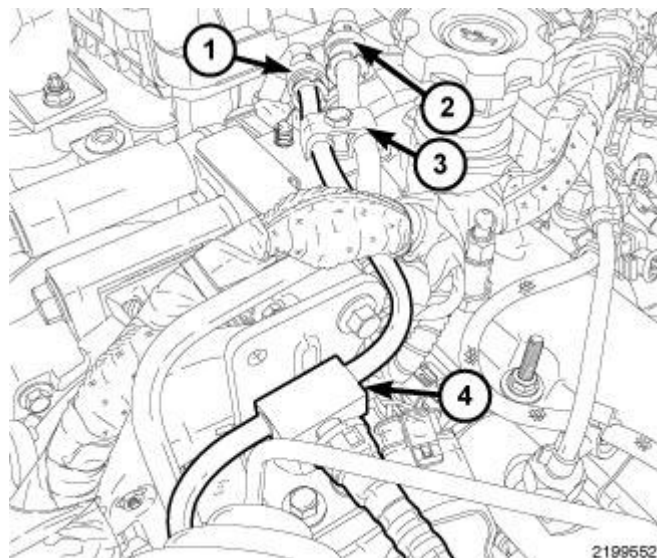


Fig. 142: Fuel Return Line, Fuel Feed Line, Fuel Line Mounting Bracket & Fuel Return Line Block
Courtesy of CHRYSLER LLC

10. Disconnect the fuel return line (1).
11. Disconnect the fuel feed line (2).
12. Remove the fuel line mounting bracket (3).
13. Remove the fuel return line block (4).

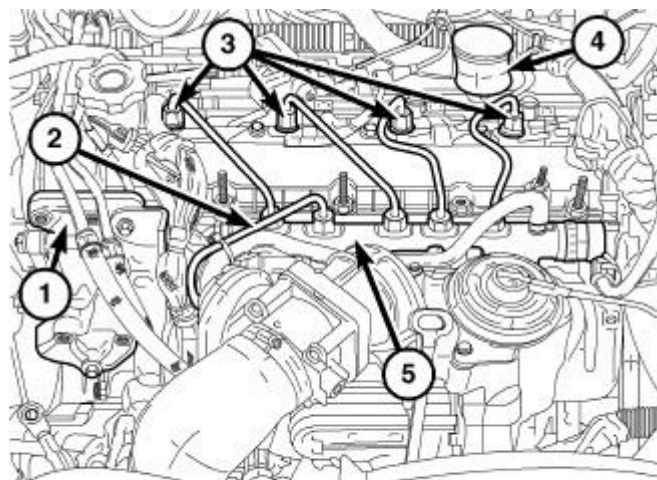


Fig. 143: Fuel Rail & Tubes
Courtesy of CHRYSLER LLC

14. Remove the fuel tubes (3). Refer to **TUBE(S), FUEL, REMOVAL** .

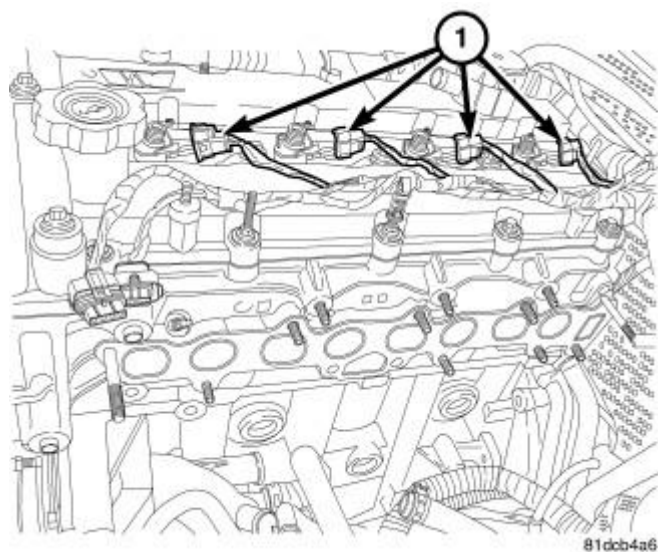


Fig. 144: Fuel Injector Harness Connectors
Courtesy of CHRYSLER LLC

15. Disconnect the fuel injector harness connectors from the fuel injectors (1).

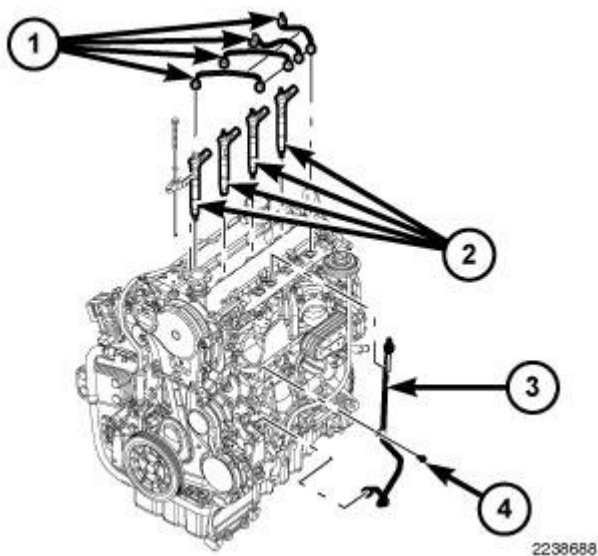


Fig. 145: Fuel Injectors & Bolts
Courtesy of CHRYSLER LLC

16. Remove bolts and the fuel injectors (2).

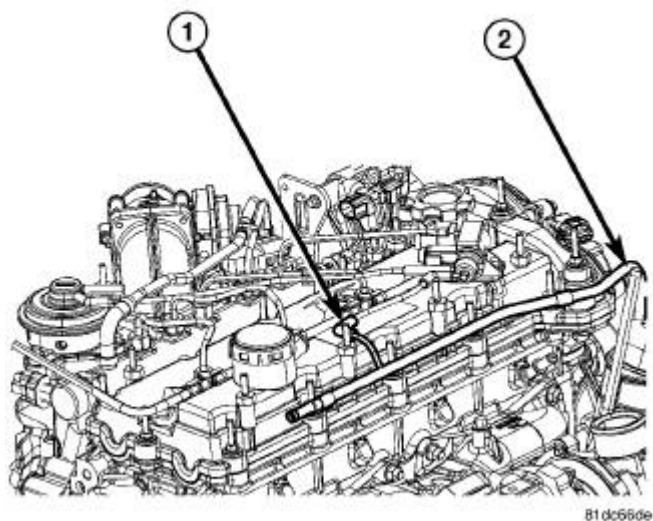


Fig. 146: Vacuum Supply Tube
Courtesy of CHRYSLER LLC

17. Remove the engine wire harness retaining clips from the cylinder head cover stud bolts.
18. Disconnect the vacuum line (1).
19. Disconnect the vacuum line (2) from the vacuum pump.
20. Remove retaining nuts and remove the vacuum line (2).

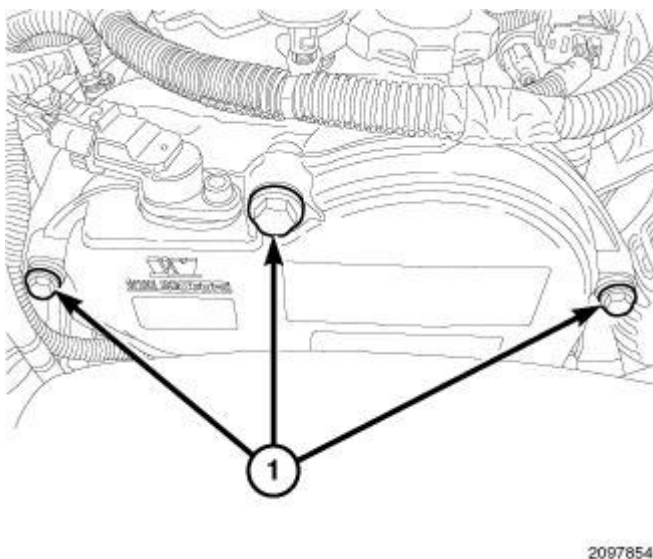


Fig. 147: Upper Front Timing Cover Bolts
Courtesy of CHRYSLER LLC

NOTE: The upper cover bolts are incased in a collar which does not permit them to be removed.

21. Loosen the upper front timing cover bolts (1).

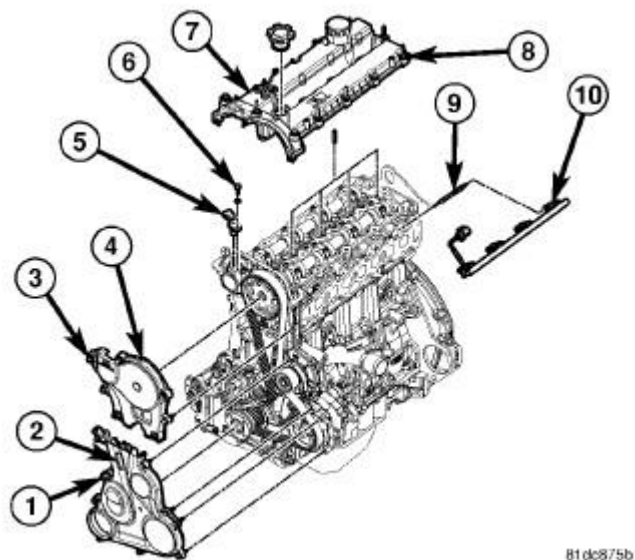


Fig. 148: Upper And Lower Front Covers With Fasteners
Courtesy of CHRYSLER LLC

22. Remove the 12 fasteners (8) and the cylinder head cover (7).

INSTALLATION

INSTALLATION - CYLINDER HEAD COVER


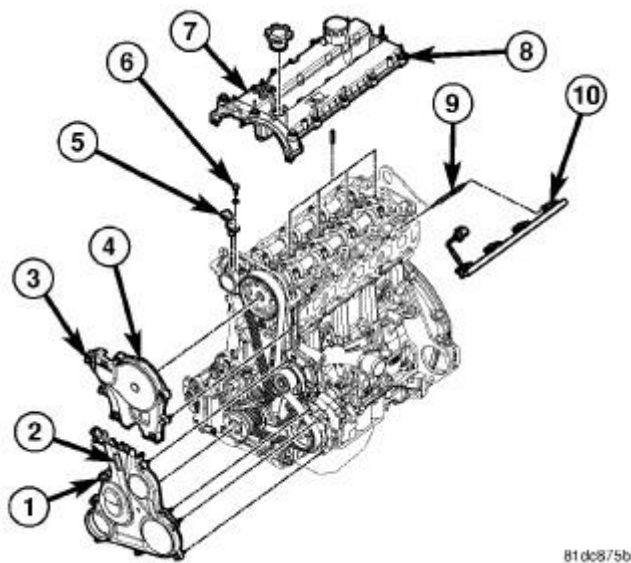


Fig. 149: Upper And Lower Front Covers With Fasteners
Courtesy of CHRYSLER LLC


1. Clean the sealing surfaces and inspect the gasket or replace if necessary.
2. Install the cylinder head cover (7). Tighten fasteners to 11 N.m (97 in. lbs.).

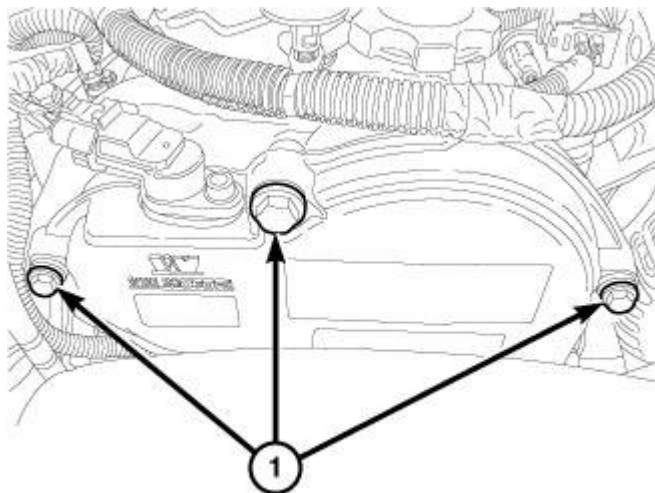

2097854

Fig. 150: Upper Front Timing Cover Bolts
Courtesy of CHRYSLER LLC

3. Tighten the upper front timing cover bolts (1) to 8 N.m (71 in. lbs.).

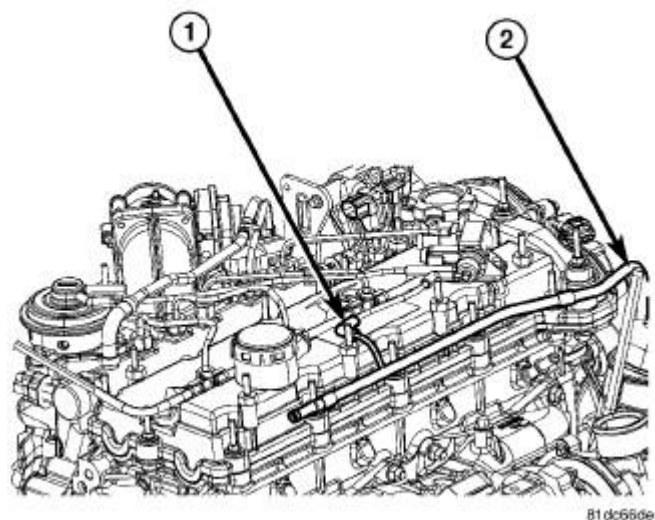

81 dc66de

Fig. 151: Vacuum Supply Tube
Courtesy of CHRYSLER LLC

4. Install the vacuum line (2) and securely tighten the retaining nuts.
5. Connect the vacuum line (2) to the vacuum pump.
6. Connect the vacuum line (1) to the fitting.

7. Install the engine wire harness retaining clips from the cylinder head cover stud bolts.

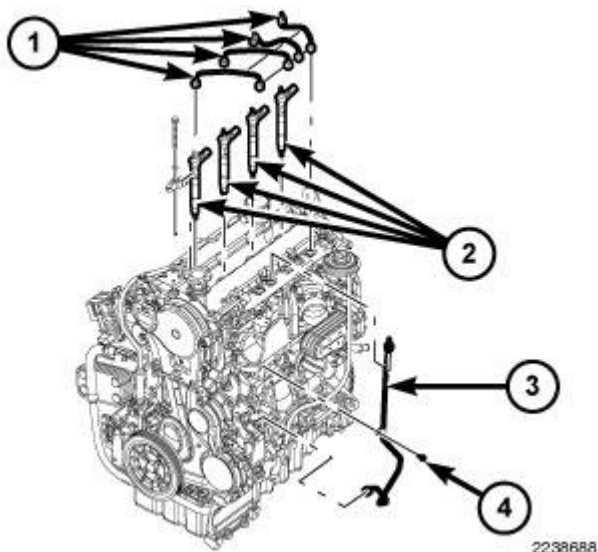


Fig. 152: Fuel Injectors & Bolts
Courtesy of CHRYSLER LLC

8. Using new washers, install injectors (2) and injector retainer claw.
9. Install the injector clamp bolts. Tighten bolts to 33 N.m (24 ft. lbs.).


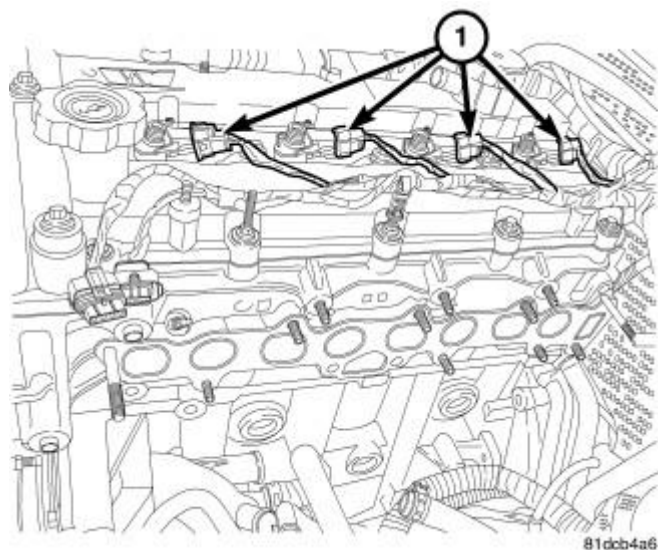


Fig. 153: Fuel Injector Harness Connectors
Courtesy of CHRYSLER LLC


10. Connect the fuel injector harness connectors (1).

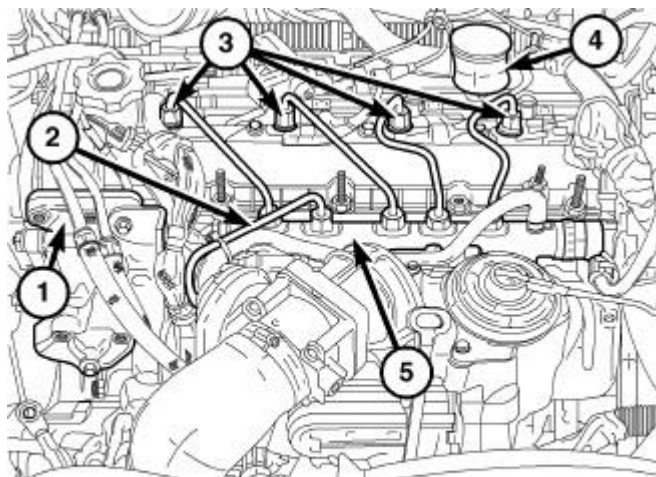

81daf5dc

Fig. 154: Fuel Rail & Tubes
Courtesy of CHRYSLER LLC


11. Install the fuel tubes (3). Refer to **TUBE(S), FUEL, INSTALLATION** .

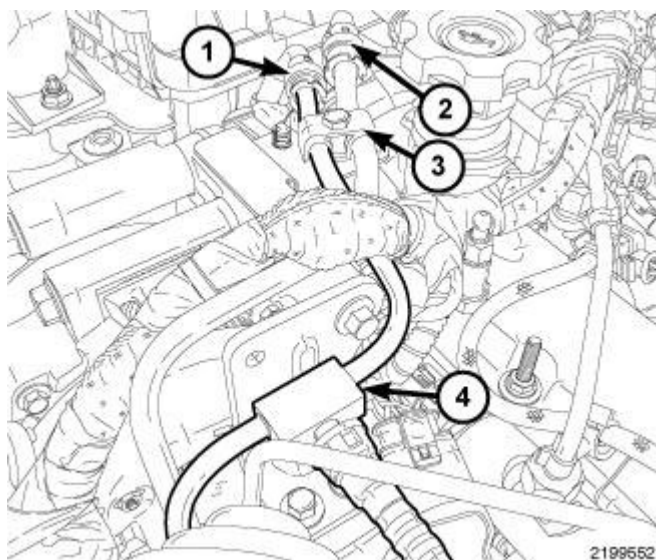

2198552

Fig. 155: Fuel Return Line, Fuel Feed Line, Fuel Line Mounting Bracket & Fuel Return Line Block
Courtesy of CHRYSLER LLC


12. Install the fuel return line block (4).
13. Install the fuel line mounting bracket (3).
14. Connect the fuel feed line (2).
15. Connect the fuel return line (1).

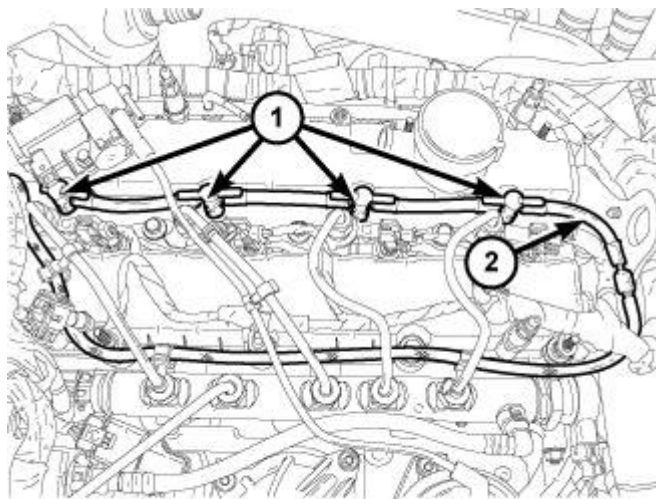

2201114

Fig. 156: Lock Buttons & Fuel Injector Return Line
Courtesy of CHRYSLER LLC

16. Install the fuel injector fuel return line (2) onto the fuel injector and push down on the lock tab (1) to lock in place.

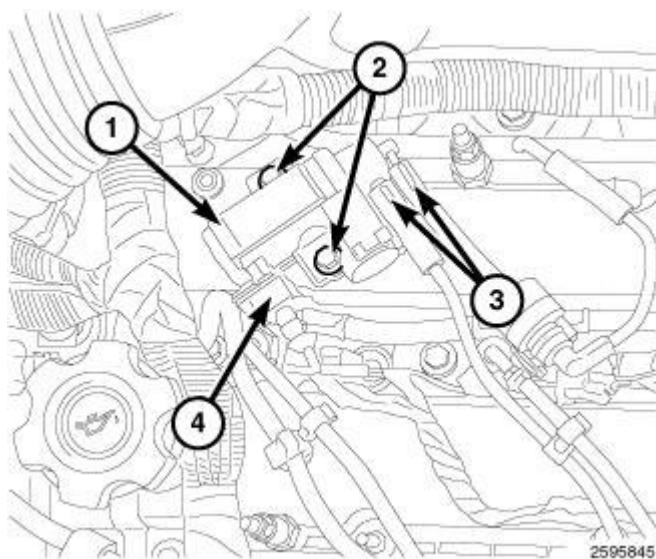

2595845

Fig. 157: EGR Vacuum Solenoid, Bolts, Vacuum Lines & Harness Connector
Courtesy of CHRYSLER LLC

17. Install the EGR vacuum solenoid (1). Tighten bolts to 12 N.m (106 in. lbs).
18. Connect the EGR vacuum solenoid harness connector (4).
19. Connect the EGR vacuum solenoid vacuum lines (3).

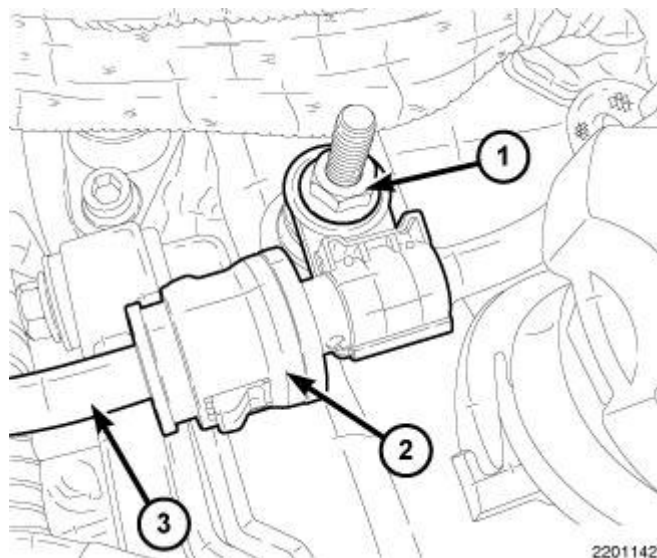


Fig. 158: Fuel Injector Return Line & Retaining Nut
Courtesy of CHRYSLER LLC

20. Connect the fuel injector return line (2) and securely tighten the retaining nut (1).

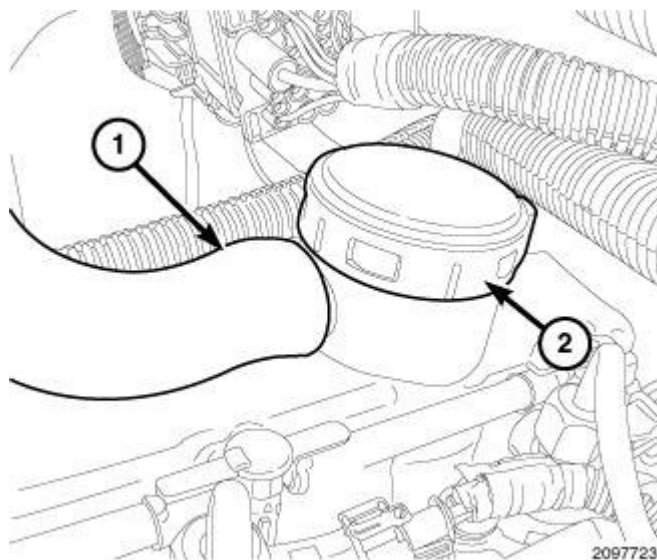


Fig. 159: Crankcase Vent Hose & Oil Separator
Courtesy of CHRYSLER LLC

21. Connect the crankcase vent hose (1) to the oil separator (2).
22. Install the air cleaner body. Refer to **BODY, AIR CLEANER, INSTALLATION**.
23. Install the engine cover.
24. Connect the negative battery cable.

LIFTER(S), HYDRAULIC

DESCRIPTION

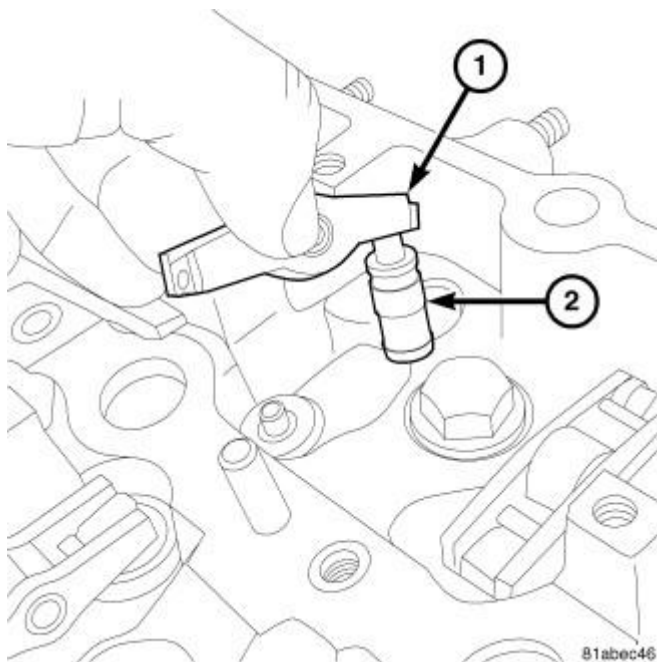
DESCRIPTION

Fig. 160: Rocker Arms & Hydraulic Lifters
Courtesy of CHRYSLER LLC

Valve lash is controlled by hydraulic tappets (2) located inside the cylinder head, in tappet bores below the camshafts.

REMOVAL**REMOVAL**

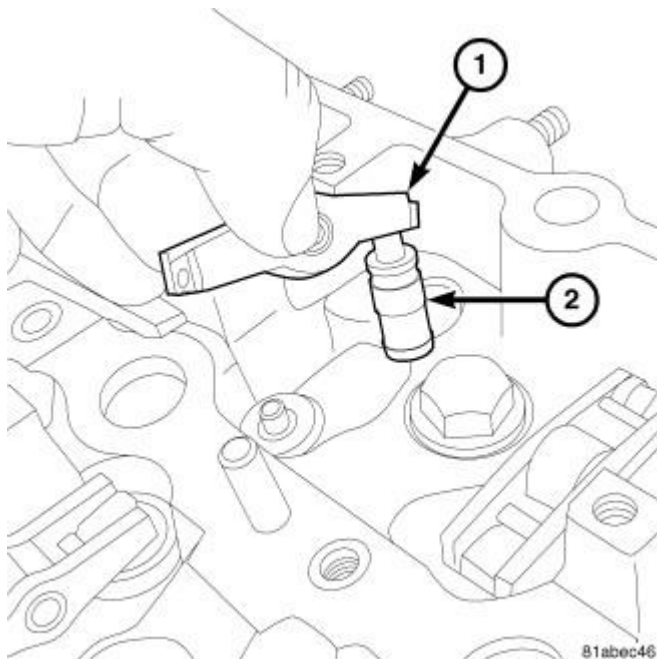


Fig. 161: Rocker Arms & Hydraulic Lifters
Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Remove the camshafts. Refer to **CAMSHAFT, ENGINE, REMOVAL**.

NOTE: Always return the hydraulic lifters to their original location in the cylinder head.

3. Remove the rocker arms (1) and hydraulic lifters (2).

INSPECTION

INSPECTION

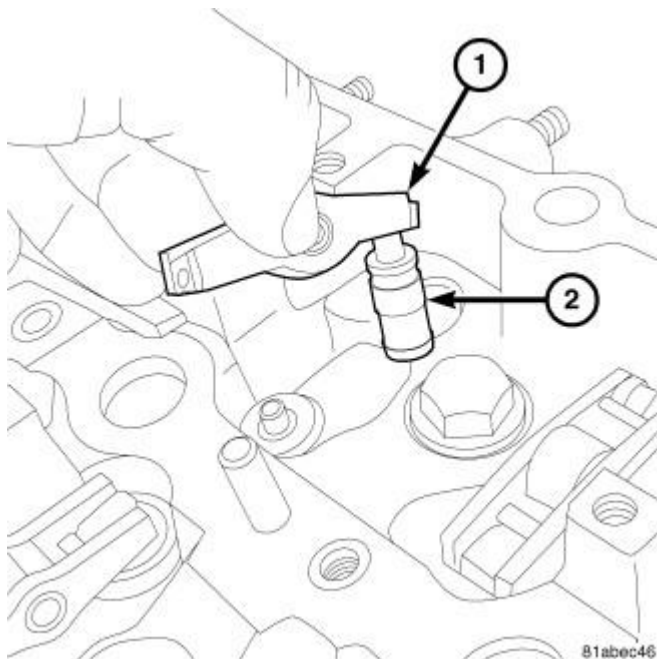


Fig. 162: Rocker Arms & Hydraulic Lifters
Courtesy of CHRYSLER LLC

Clean each lifter assembly (1) in cleaning solvent to remove all varnish and sludge deposits. Inspect for indications of scuffing on the side and base of each lifter body.

INSTALLATION

INSTALLATION

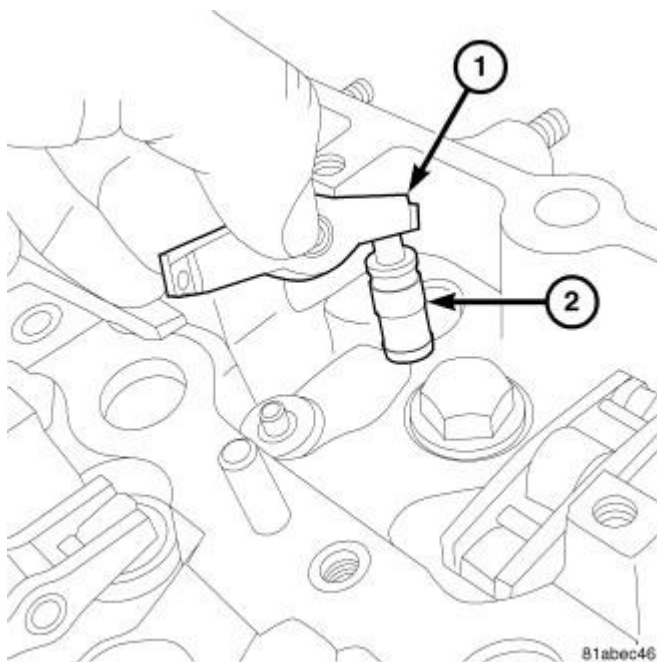
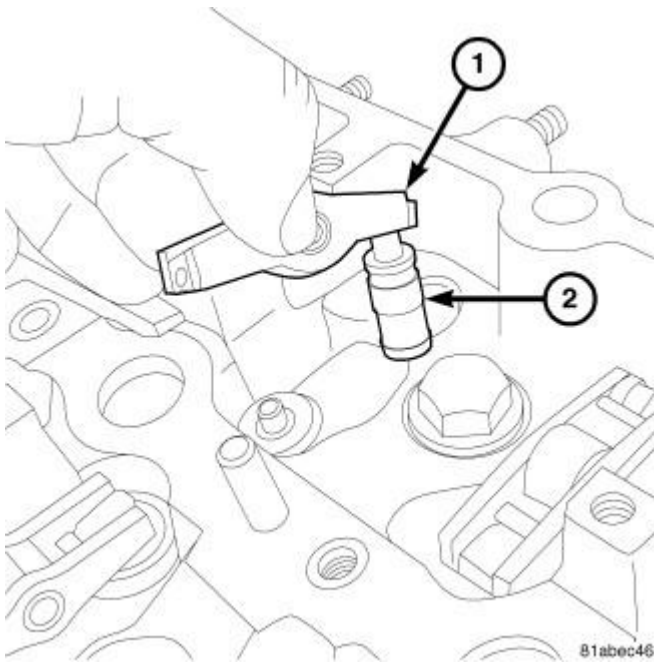


Fig. 163: Rocker Arms & Hydraulic Lifters

Courtesy of CHRYSLER LLC

1. Install the rocker arms (1) and hydraulic lifters (2) into their original locations.
2. Install the camshafts. Refer to **CAMSHAFT, ENGINE, INSTALLATION.**
3. Connect the negative battery cable.

ROCKER ARM, VALVE**DESCRIPTION****DESCRIPTION****Fig. 164: Rocker Arms & Hydraulic Lifters****Courtesy of CHRYSLER LLC**

The rocker arms (1) are made of stamped steel and serviced as an assembly along with the lifter.

The rocker arms (1) are used as a link between the camshaft and valves. As the camshaft rotates, the lobes of the camshafts apply downward pressure on the rocker arms (1). This pressure is then applied to the hydraulic lifter (2) which opens the valve.

REMOVAL**REMOVAL - ROCKER ARM**

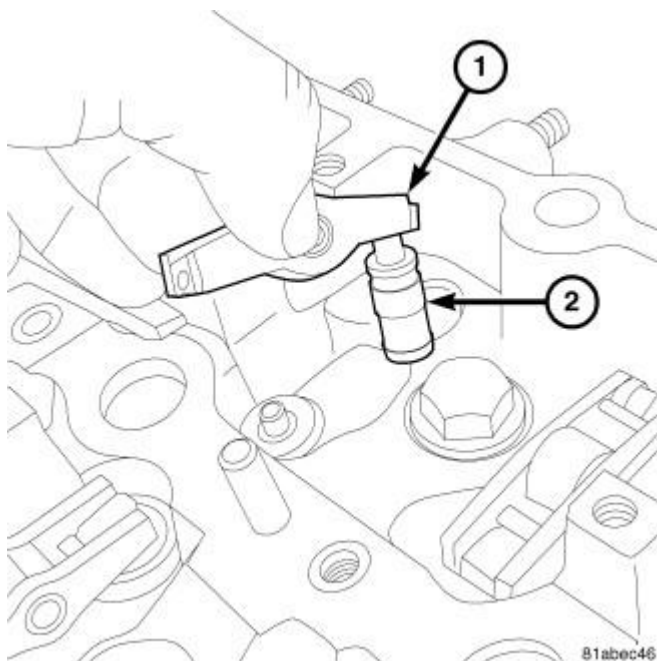


Fig. 165: Rocker Arms & Hydraulic Lifters
Courtesy of CHRYSLER LLC

CAUTION: Before removing the cylinder head cover/intake manifold (2) the engine must rotated to 90° after TDC to assure proper alignment of the engine timing components. Failure to do so could result in valve and/or piston damage during reassembly. Refer to Engine/Valve Timing - Standard Procedure.

1. Disconnect negative battery cable.
2. Remove the camshafts. Refer to CAMSHAFT, ENGINE, REMOVAL.
3. Remove rocker arms (1) and lifters (2).

INSTALLATION

INSTALLATION - ROCKER ARM

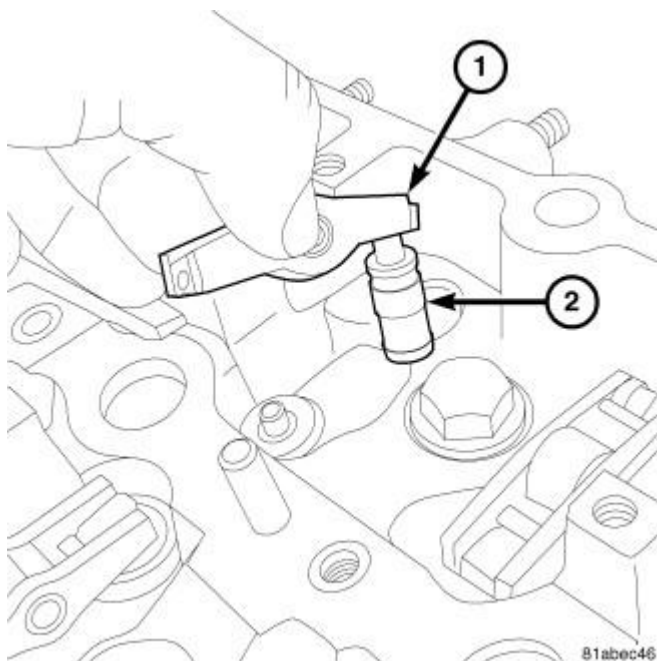


Fig. 166: Rocker Arms & Hydraulic Lifters
Courtesy of CHRYSLER LLC

1. Clean and inspect gasket sealing surfaces.
2. Lubricate lifter ball end of lifter(s), valve(s), and rocker arm roller(s) with Mopar® Engine Oil Supplement or equivalent.
3. Connect rocker arm(s) to lifter and position on valve(s).
4. Install the camshafts. Refer to **CAMSHAFT, ENGINE, INSTALLATION**.
5. Connect negative battery cable.

SEAL(S), CAMSHAFT

REMOVAL

REMOVAL - CAMSHAFT OIL SEAL

CAUTION: Before removing the timing belt, the engine must be placed at 90° after TDC. Failure to do so may result in valve and/or piston damage during assembly.

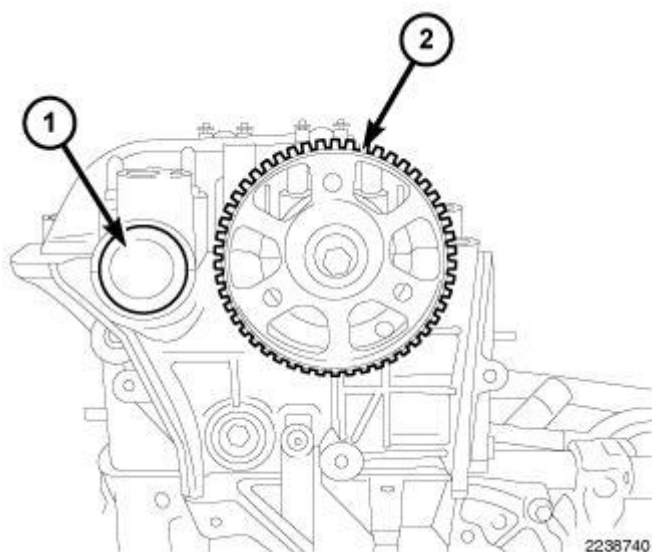


Fig. 167: Exhaust Camshaft Oil Seal & Camshaft Sprocket
Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Remove the intake camshaft sprocket (2). Refer to **SPROCKET(S), TIMING BELT AND CHAIN, REMOVAL**.

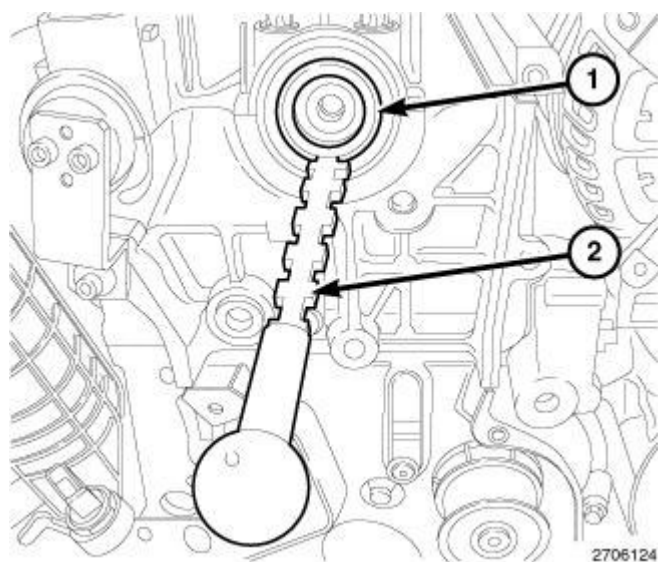


Fig. 168: Seal Remover & Seal
Courtesy of CHRYSLER LLC

3. Install the Seal Remover (special tool #VM.1058, Remover, Seal) (2) into seal (1) as illustrated.

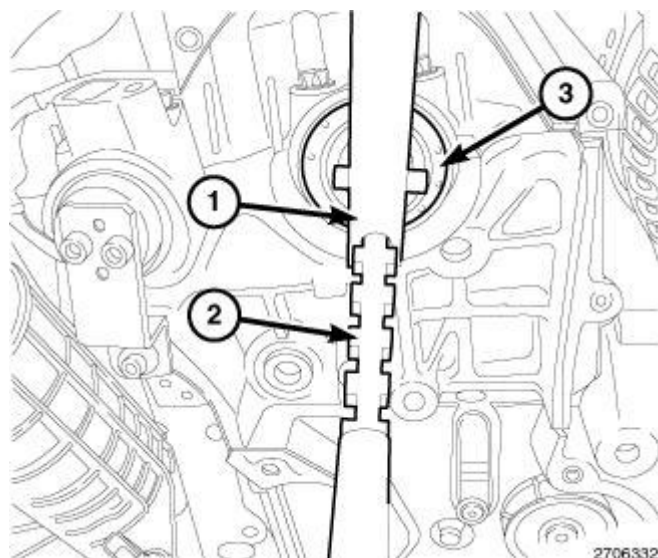


Fig. 169: Seal Remover Handle, Seal Remover & Intake Camshaft Oil Seal
Courtesy of CHRYSLER LLC

4. Position the Seal Remover Handle (special tool #VM.1058, Remover, Seal) (1) onto Seal Remover (special tool #VM.1058, Remover, Seal) (2) and remove the intake camshaft oil seal (3).

INSTALLATION

INSTALLATION - CAMSHAFT OIL SEAL

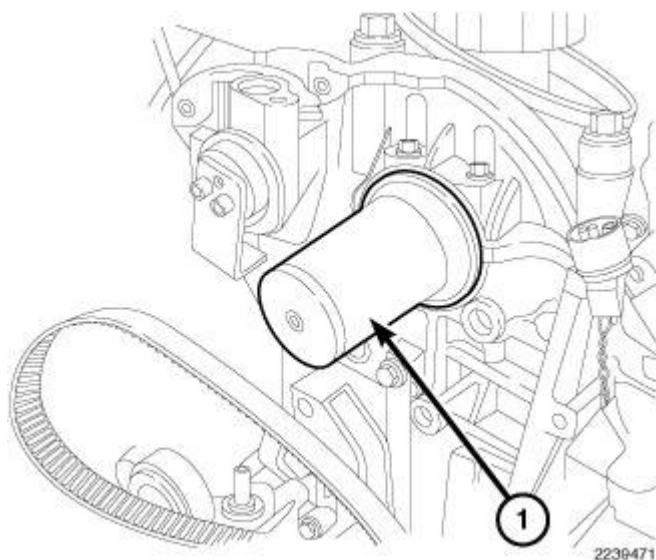


Fig. 170: Seal Installer
Courtesy of CHRYSLER LLC

1. Using the Seal Guide (special tool #9937-2, Guide, Seal) and Seal Installer (1) (special tool #9937-1, Installer, Seal) (1), install the intake camshaft oil seal.

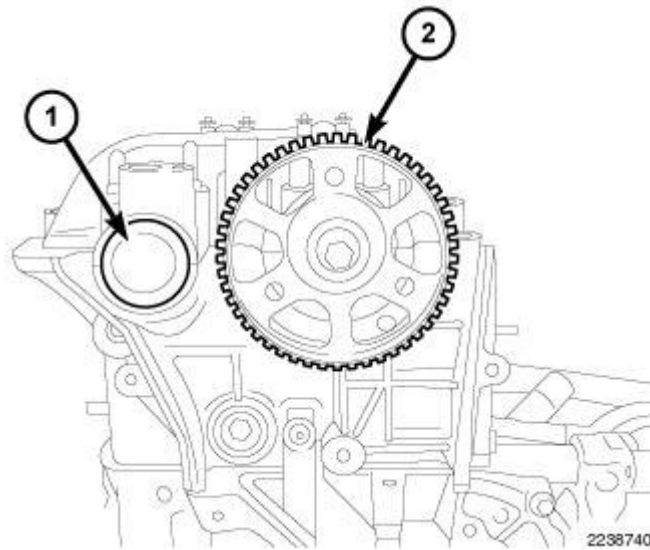


Fig. 171: Exhaust Camshaft Oil Seal & Camshaft Sprocket
Courtesy of CHRYSLER LLC

2. Install the intake camshaft sprocket (2). Refer to **SPROCKET(S), TIMING BELT AND CHAIN, INSTALLATION.**
3. Connect the negative battery cable.

ENGINE BLOCK

DESCRIPTION

DESCRIPTION

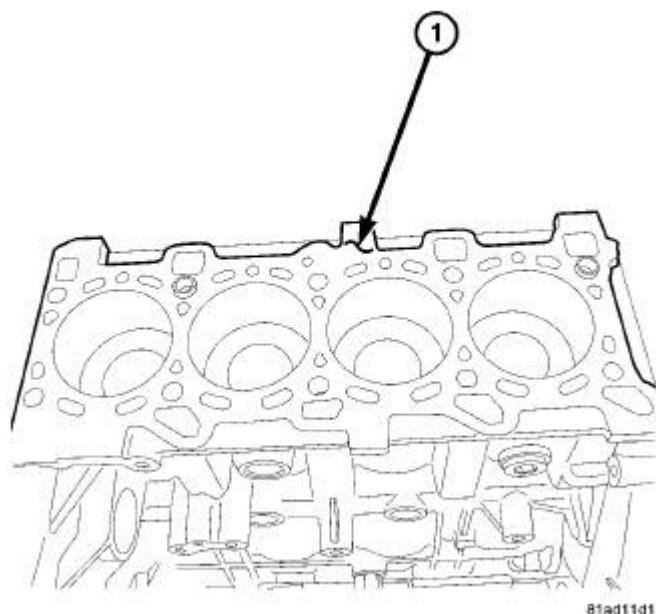


Fig. 172: Engine Block

Courtesy of CHRYSLER LLC

The 2.8L CRD Diesel engine uses a cast iron engine block. The cylinder block has increased stiffness that reduces structural flexing and a fractured connecting rod cap design that can not distort connecting rod cap fit.

STANDARD PROCEDURE

BEARING SELECTION CHARTS

CONNECTING ROD BEARINGS - LARGE END

Connecting Rod Journal Diameter - Connecting Rod Large End	Bearing Half	Connecting Rod Journal Diameter - Crankshaft			
		D	C	B	A
		53.929 - 53.936	53.936 - 53.942	53.942 - 53.948	53.948 - 53.955
A 57.563 - 57.568	Upper Bearing Shell	Blue	Blue	Red	Red
	Lower Bearing Shell	Yellow	Blue	Blue	Red
B 57.568 - 57.573	Upper Bearing Shell	Yellow	Blue	Blue	Red
	Lower Bearing Shell	Yellow	Yellow	Blue	Blue


2011 Dodge Grand Caravan R/T

2011 ENGINE 2.8L Diesel - Service Information - Grand Caravan, Town & Country

C 57.573 - 57.578	Upper Bearing Shell	Yellow	Yellow	Blue	Blue
	Lower Bearing Shell	Green	Yellow	Yellow	Blue
D 57.578 - 57.583	Upper Bearing Shell	Green	Yellow	Yellow	Blue
	Lower Bearing Shell	Green	Green	Yellow	Yellow

CRANKSHAFT BEARINGS

Cylinder Block Seat Diameter	Bearing Half	Crankshaft Main Journal Diameter			
		D	C	B	A
		64.974 - 64.981	64.981 - 64.987	64.987 - 64.993	64.993 - 65.000
A 69.000 - 69.005	Upper Bearing Shell	Blue	Blue	Red	Red
	Lower Bearing Shell	Yellow	Blue	Blue	Red
B 69.005 - 69.010	Upper Bearing Shell	Yellow	Blue	Blue	Red
	Lower Bearing Shell	Yellow	Yellow	Blue	Blue
C 69.010 - 69.015	Upper Bearing Shell	Yellow	Yellow	Blue	Blue
	Lower Bearing Shell	Green	Yellow	Yellow	Blue
D 69.015 - 69.020	Upper Bearing Shell	Green	Yellow	Yellow	Blue
	Lower Bearing Shell	Green	Green	Yellow	Yellow

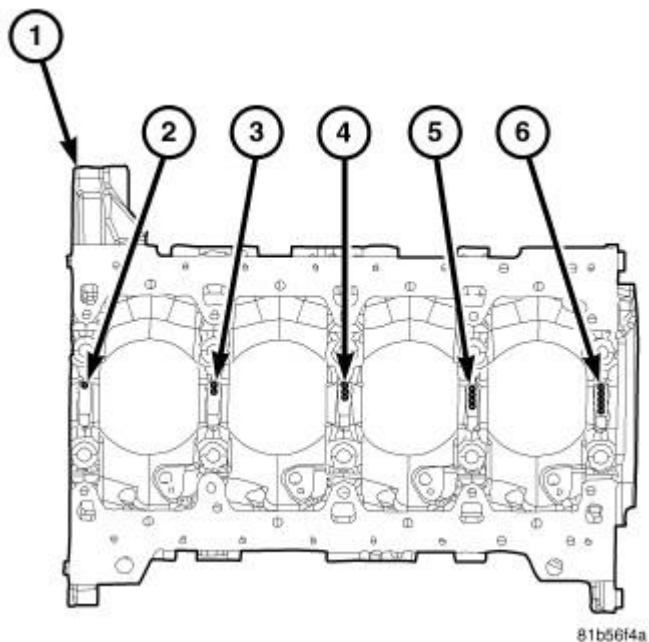BEARING(S), CRANKSHAFT, MAIN**REMOVAL****REMOVAL****Fig. 173: Crankshaft Cap Location Marks**

Courtesy of CHRYSLER LLC

NOTE: Bearing caps (2-6) are not interchangeable and are marked to ensure according to their locations (2-6) in the block (1). Upper and lower bearing halves are NOT interchangeable, and must be installed facing in the correct direction.

1. Remove the balance shaft assembly. Refer to **MODULE, BALANCE SHAFT, REMOVAL**.
2. Identify bearing cap locations (2-6) before removal.

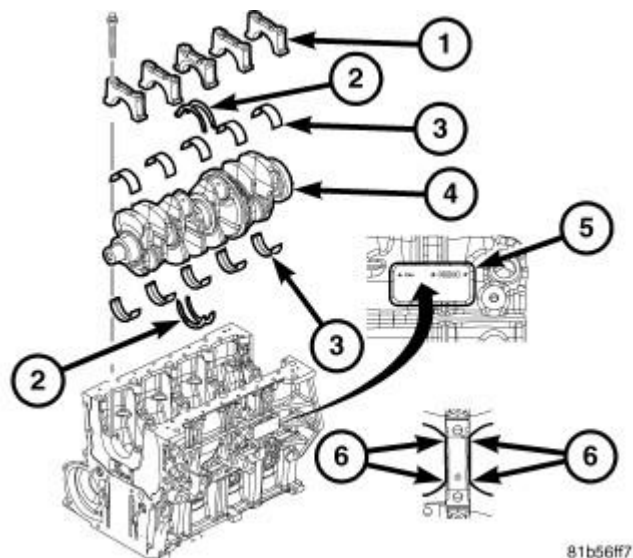


Fig. 174: Crankshaft Bearing Size Mark & Crankshaft Bearing Assembly
Courtesy of CHRYSLER LLC

3. Remove the bearing caps (1) one at a time, and if possible, replace the crankshaft bearings (3) one at a time. Carefully rotate upper half of bearing from between the carrier and the crankshaft (4). If the upper half of the bearing does not easily slide out of position, the crankshaft must be removed for further inspection. Refer to **CRANKSHAFT, REMOVAL**.

INSTALLATION

INSTALLATION


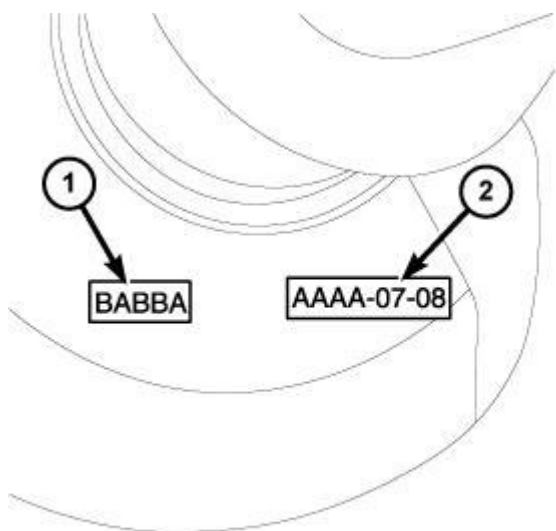


Fig. 175: Crankshaft Connecting Rod Journal Diameter
Courtesy of CHRYSLER LLC


1. Locate the crankshaft journal size (1) stamp on the crankshaft weight.

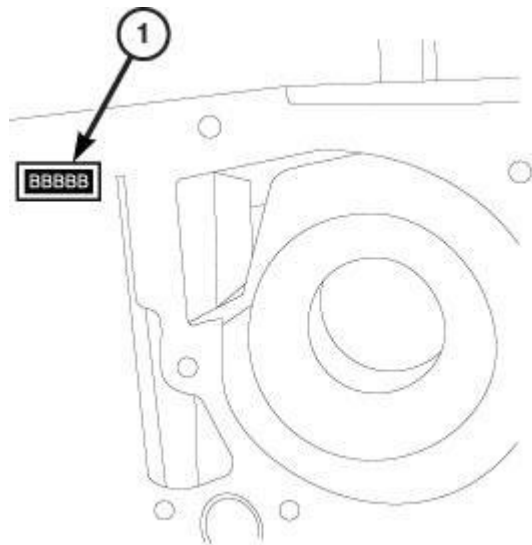

61705

Fig. 176: Engine Block Crankshaft Journal Size Stamp
Courtesy of CHRYSLER LLC

2. Locate the engine block crankshaft journal size stamp on the engine block (1).

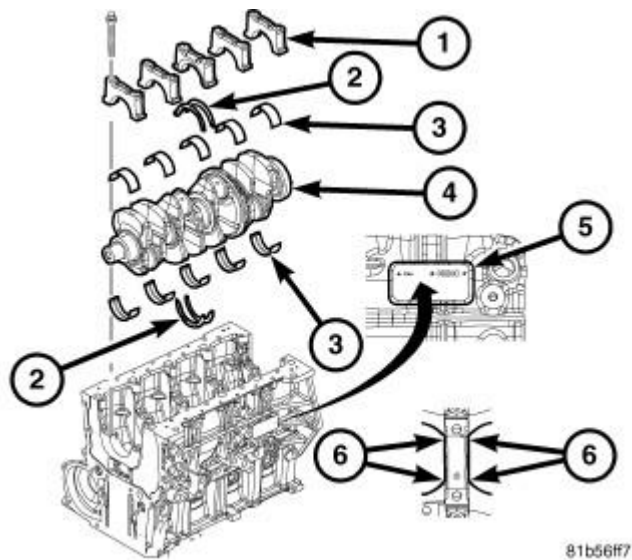

81b56ff7

Fig. 177: Crankshaft Bearing Size Mark & Crankshaft Bearing Assembly
Courtesy of CHRYSLER LLC

3. Use the crankshaft stamp and engine block stamp to select the correct crankshaft bearing sizes from the bearing chart. The letters stamped into the block are in the same order as the cylinders (5). The first letter corresponds to the first cylinder, the second to the second, etc. Refer to **Engine/Engine Block - Standard Procedure**.
4. If the crankshaft was removed to install the bearings, install the crankshaft. Refer to **CRANKSHAFT**,

INSTALLATION.

5. Install the balance shaft assembly. Refer to MODULE, BALANCE SHAFT, INSTALLATION.

COVER, ENGINE, FRONT

DESCRIPTION

DESCRIPTION


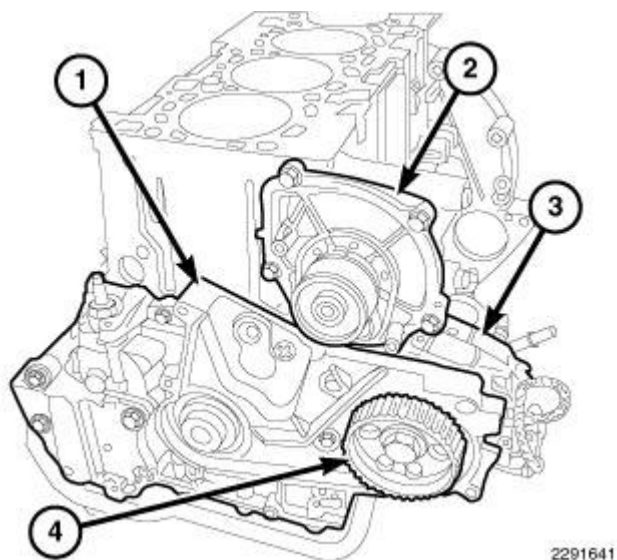


Fig. 178: Oil Pump Cover Assembly
Courtesy of CHRYSLER LLC

The front engine cover assembly on this engine is an aluminum cover that incorporates the oil pump and vacuum pump.

REMOVAL


REMOVAL - FRONT ENGINE COVER

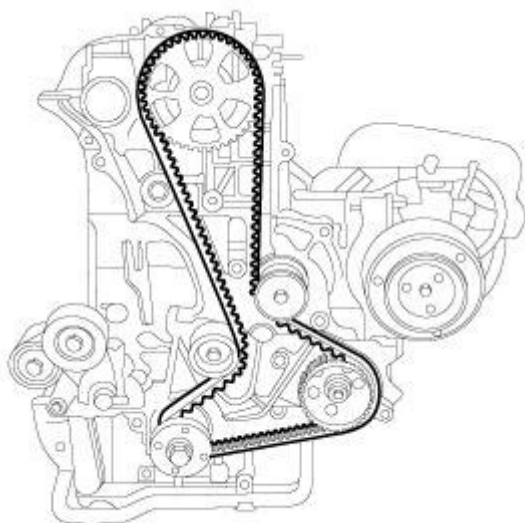

2238720

Fig. 179: Timing Belt Routing
Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Remove the timing belt. Refer to **BELT, TIMING, REMOVAL**.

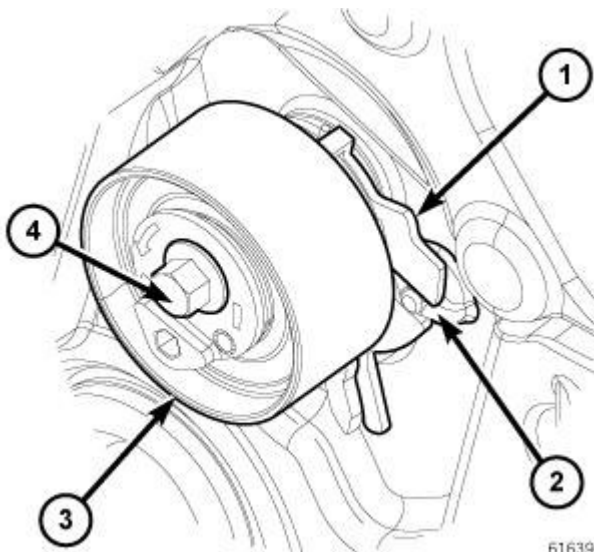

61639

Fig. 180: Timing Belt Tensioner, Alignment Plate, Engine Cover Boss & Bolt
Courtesy of CHRYSLER LLC

3. If necessary, remove bolt (4) and the timing belt tensioner (3).

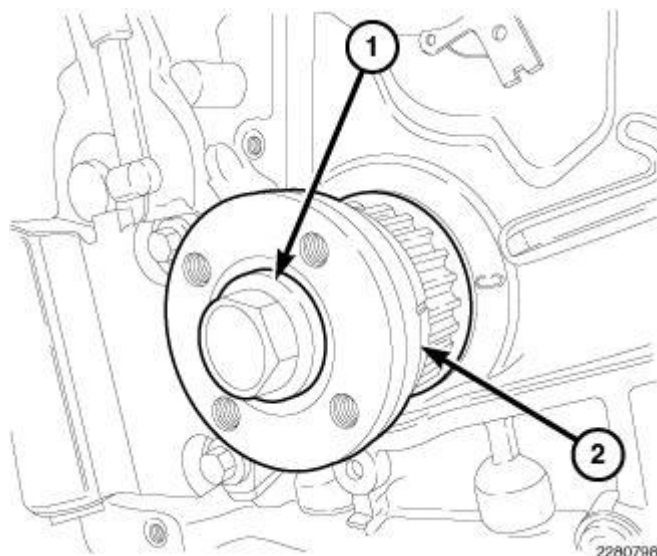


Fig. 181: Crankshaft Timing Belt Sprocket & Bolt
Courtesy of CHRYSLER LLC

NOTE: The crankshaft sprocket bolt is a left handed thread.

4. Remove the bolt (1) and the crankshaft sprocket (2).

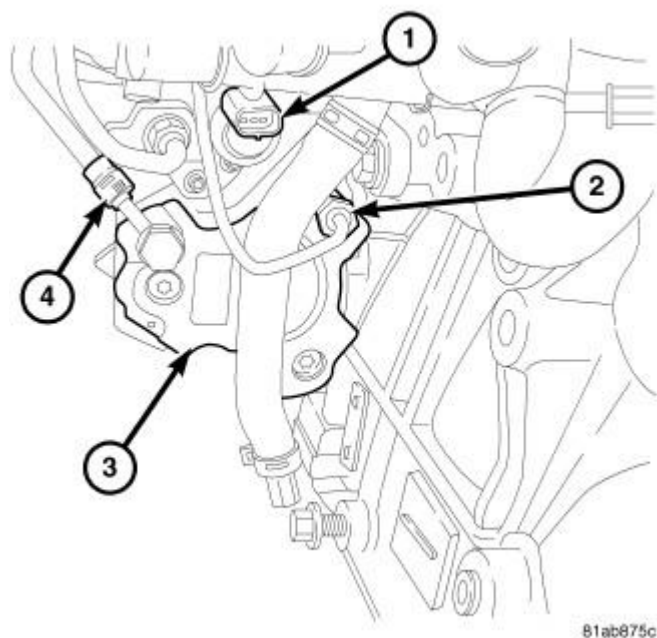


Fig. 182: Fuel Quantity Solenoid Harness Connector & High Pressure Fuel Lines At Pump
Courtesy of CHRYSLER LLC

5. Disconnect high-pressure fuel line (4) at rear of pump by removing banjo bolt.
6. Disconnect high-pressure fuel line (2) at rear of pump by removing fitting at end of line.
7. Disconnect the fuel quantity solenoid harness connector (1).

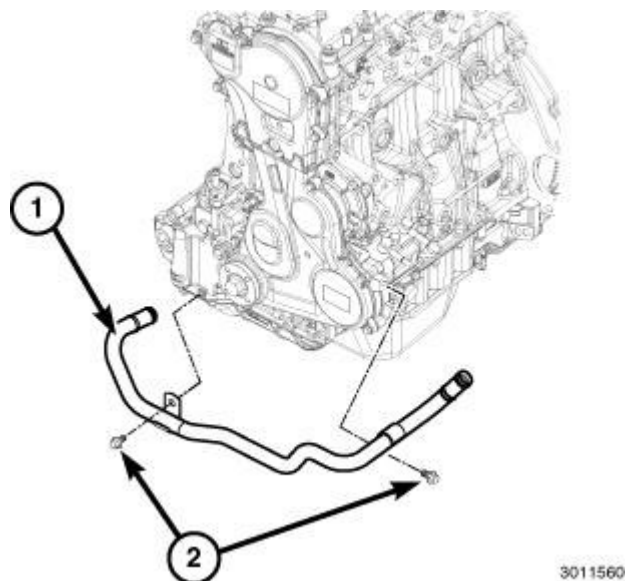


Fig. 183: Coolant Tube & Bolts
Courtesy of CHRYSLER LLC

8. Disconnect the coolant tube hose at oil cooler and by fuel injection pump.
9. Remove bolts (2), and the coolant tube (1).


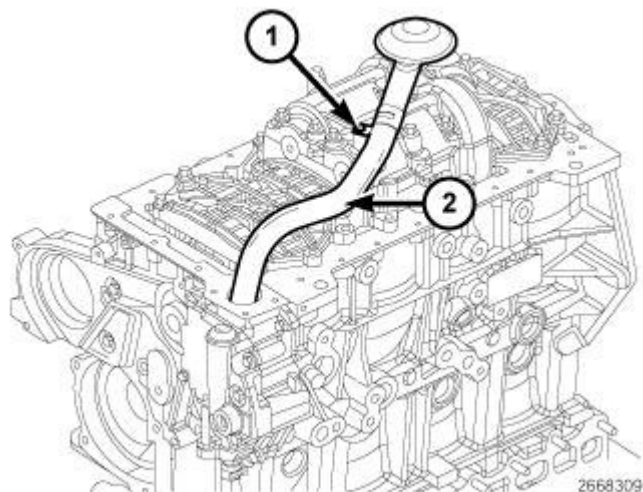


Fig. 184: Oil Pump Pickup Tube & Bolt
Courtesy of CHRYSLER LLC


10. Remove the oil pickup tube. Refer to **PICK-UP, OIL PUMP, REMOVAL.**

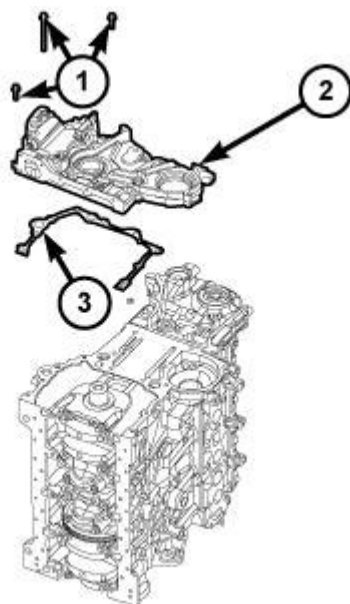

61789

Fig. 185: Front Cover, Gasket & Bolts
Courtesy of CHRYSLER LLC

11. Disconnect the vacuum hose at vacuum pump.
12. Remove the eight bolts (1), and the front cover assembly (2).

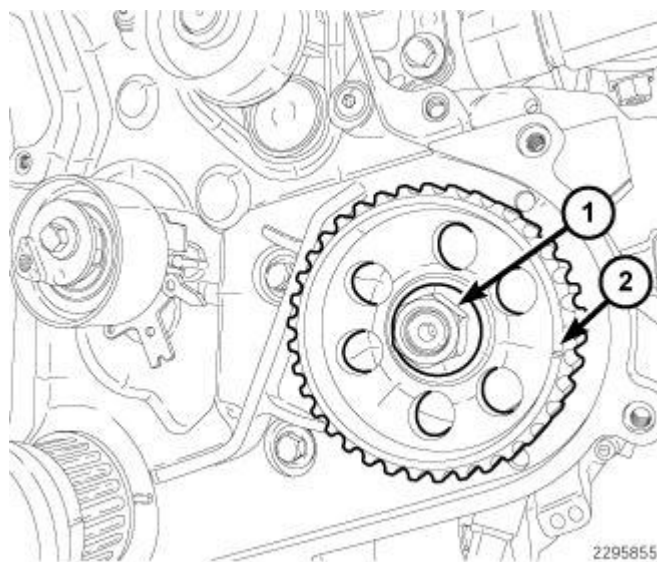

2295855

Fig. 186: Injection Pump Gear & Mounting Nut
Courtesy of CHRYSLER LLC

13. If necessary, using Locking Tool (special tool #VM.1055, Locking Tool), remove the nut (1).
14. If necessary, attach a typical 3-jaw Gear/Sprocket Puller (special tool #1023, Puller) and remove sprocket from pump.
15. If necessary, remove nuts and the injection fuel pump.

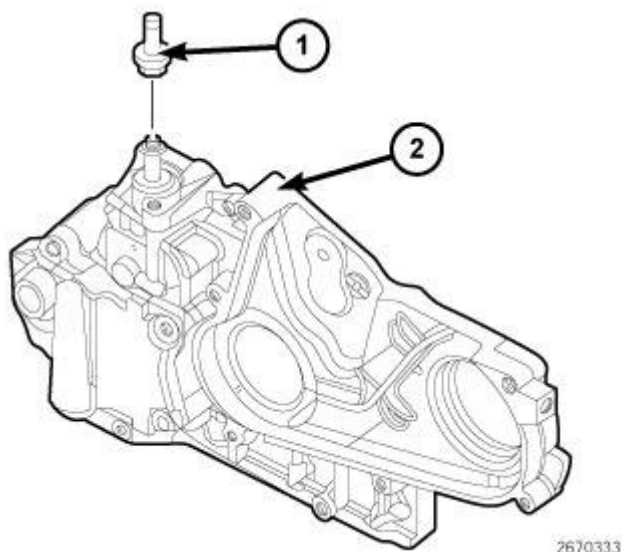


Fig. 187: Vacuum Pump Check Valve & Front Engine Cover
Courtesy of CHRYSLER LLC

16. If necessary, remove the vacuum pump check valve.

INSTALLATION

INSTALLATION - FRONT ENGINE COVER

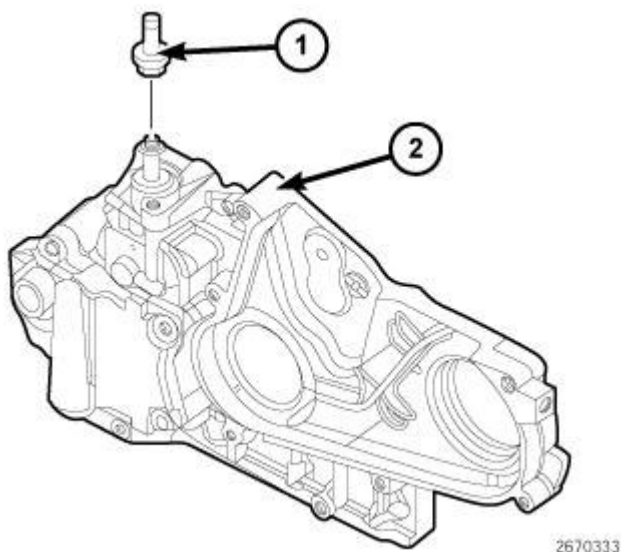


Fig. 188: Vacuum Pump Check Valve & Front Engine Cover
Courtesy of CHRYSLER LLC

1. Clean and inspect the gasket mating surfaces.
2. If necessary, install the front crankshaft oil seal. Refer to **SEAL, CRANKSHAFT OIL, FRONT, INSTALLATION**.
3. If necessary, transfer the vacuum pump check valve (1) and securely tighten.

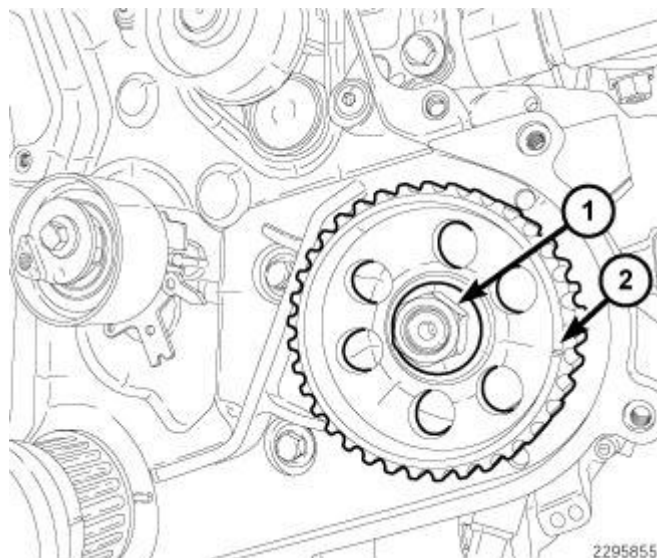


Fig. 189: Injection Pump Gear & Mounting Nut
Courtesy of CHRYSLER LLC

4. If necessary, install the high pressure fuel pump (3). Tighten nuts to 24 N.m (18 ft. lbs.).
5. Install the high pressure fuel pump (4) sprocket.
6. Using the Locking Tool (special tool #VM.1055, Locking Tool). Tighten nut (1) to 88 N.m (65 ft. lbs.).


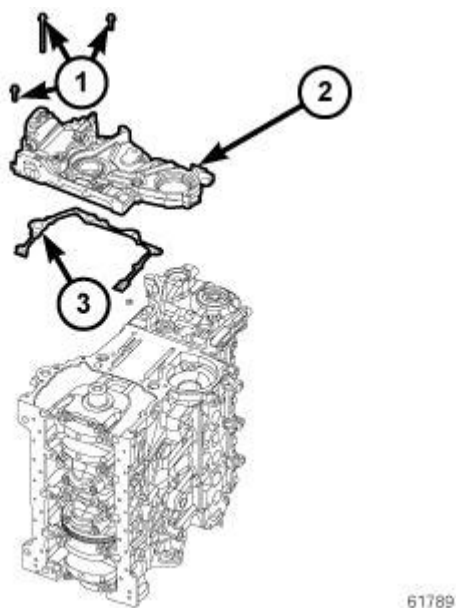


Fig. 190: Front Cover, Gasket & Bolts
Courtesy of CHRYSLER LLC

7. Install the front cover gasket (3).
8. Install the front cover assembly (2) and tighten the eight bolts (1) finger tight.

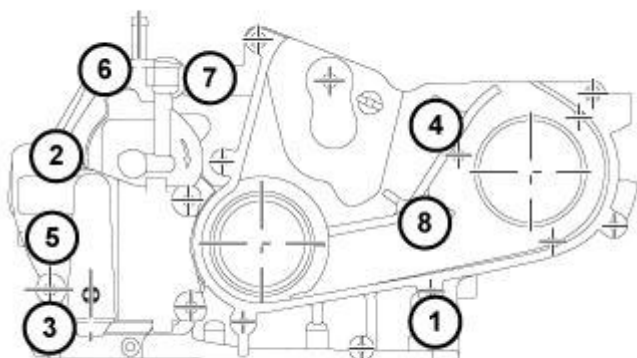


2670240

Fig. 191: Front Cover Assembly Bolt Tightening Sequence

Courtesy of CHRYSLER LLC

9. Using the tightening sequence shown in illustration, tighten bolts to 33 N.m (24 ft. lbs.).
10. Connect the vacuum hose at vacuum pump.

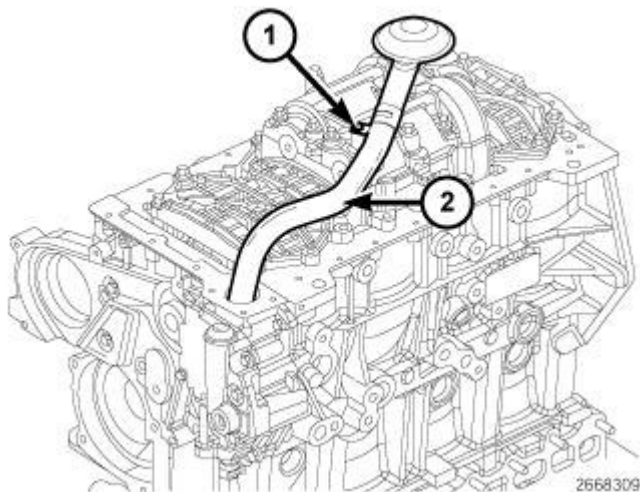

2668309

Fig. 192: Oil Pump Pickup Tube & Bolt

Courtesy of CHRYSLER LLC

11. Install the oil pump pickup tube. Refer to **PICK-UP, OIL PUMP, INSTALLATION.**

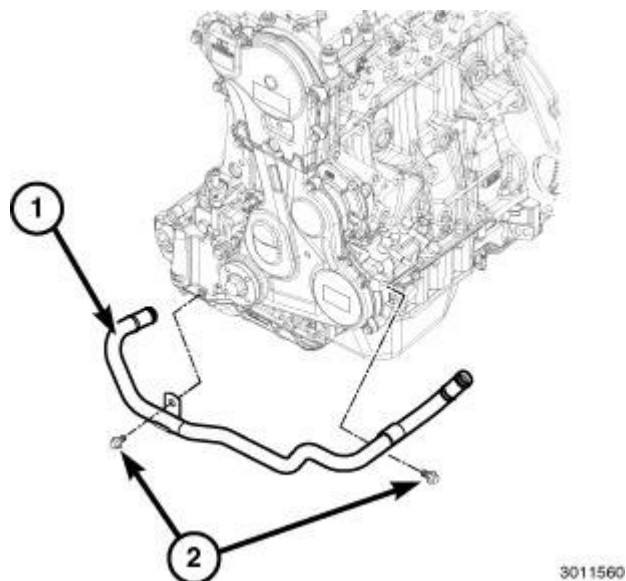


Fig. 193: Coolant Tube & Bolts
Courtesy of CHRYSLER LLC

12. Install the coolant tube (1). Tighten bolts (2) to 15 N.m (133 in. lbs.).
13. Connect the coolant tube hose at oil cooler and by fuel injection pump.

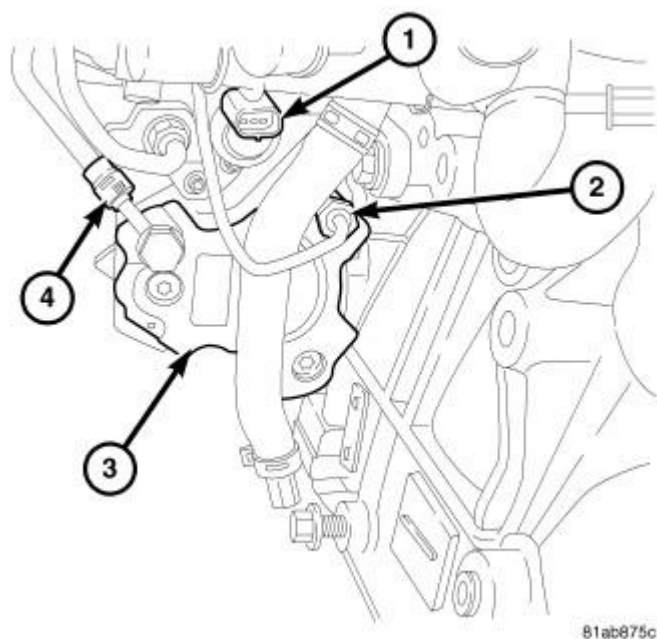


Fig. 194: Fuel Quantity Solenoid Harness Connector & High Pressure Fuel Lines At Pump
Courtesy of CHRYSLER LLC

14. Connect fuel quantity solenoid (1) harness connector.
15. Install high-pressure fuel line (2) at rear of pump. Tighten line nut to 28 N.m (21 ft. lbs.).
16. Using new sealing washers, install high-pressure fuel line (4) at rear of pump. Tighten banjo bolt to 28

N.m (21 ft. lbs.).

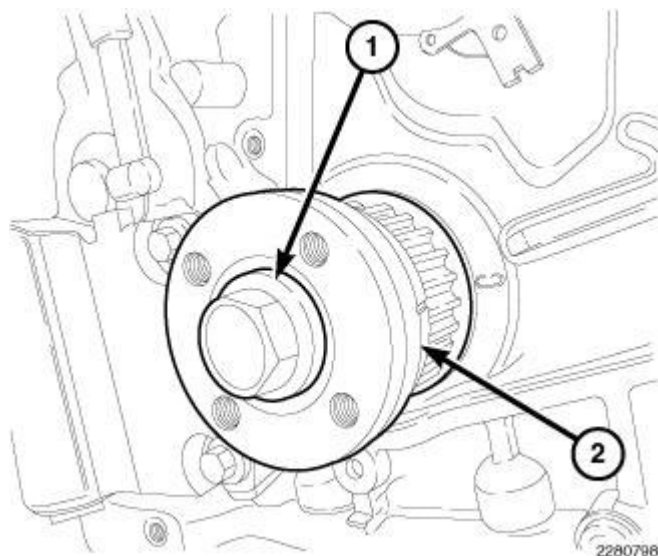


Fig. 195: Crankshaft Timing Belt Sprocket & Bolt
Courtesy of CHRYSLER LLC

NOTE: The crankshaft sprocket bolt is a left handed thread.

17. Install the crankshaft sprocket (2). Tighten bolt (1) to 100 N.m (74 ft. lbs.) plus an additional 120 degrees turn.


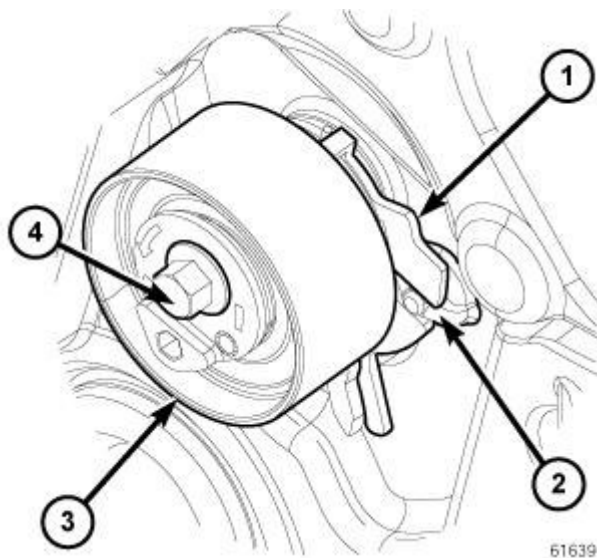


Fig. 196: Timing Belt Tensioner, Alignment Plate, Engine Cover Boss & Bolt
Courtesy of CHRYSLER LLC

18. If necessary, install the timing belt tensioner (3) and tighten bolt finger tight.

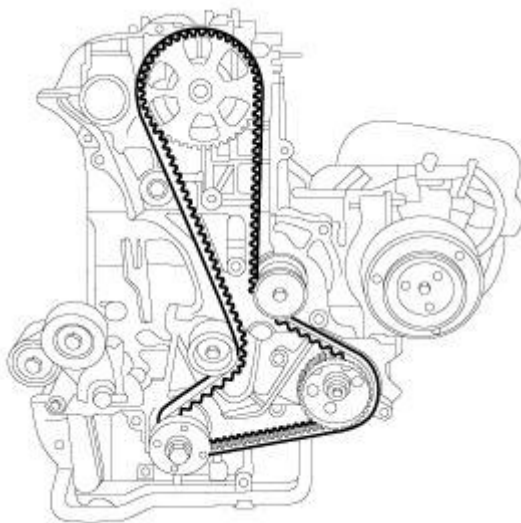

2238720


Fig. 197: Timing Belt Routing
Courtesy of CHRYSLER LLC

19. Install the timing belt. Refer to **BELT, TIMING, INSTALLATION**.
20. Connect the negative battery cable.

CRANKSHAFT

DESCRIPTION

DESCRIPTION

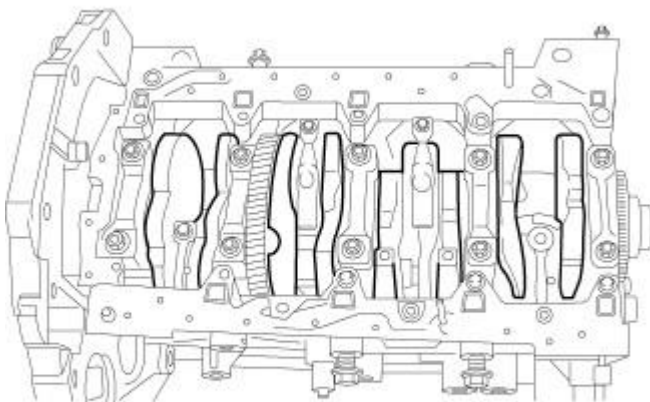


81ab8609

Fig. 198: Crankshaft
Courtesy of CHRYSLER LLC

The crankshaft for the 2.8L is a forged steel type design with five main bearing journals. The crankshaft is located at the bottom of the engine block.

STANDARD PROCEDURE

STANDARD PROCEDURE

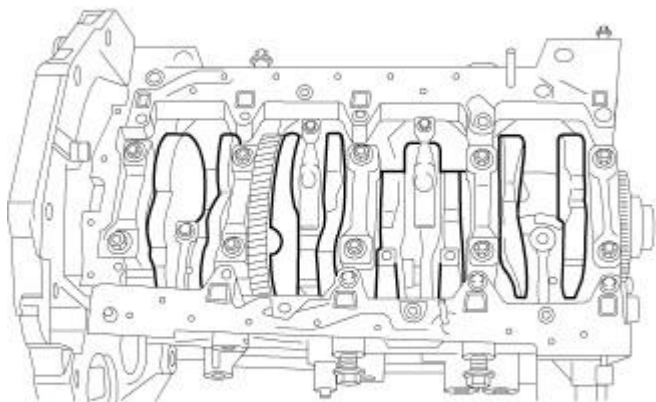

81ab8609


Fig. 199: Crankshaft

Courtesy of CHRYSLER LLC

1. Mount a (special tool #C-3339A, Set, Dial Indicator) to a stationary point at rear of engine. Locate the probe perpendicular against the flywheel.
2. Move the crankshaft all the way to the front of its travel.
3. Zero the dial indicator.
4. Move the crankshaft all the way to the rear and read dial indicator. For crankshaft end play clearances. Refer to **Engine - Specifications**.

REMOVAL

REMOVAL - CRANKSHAFT

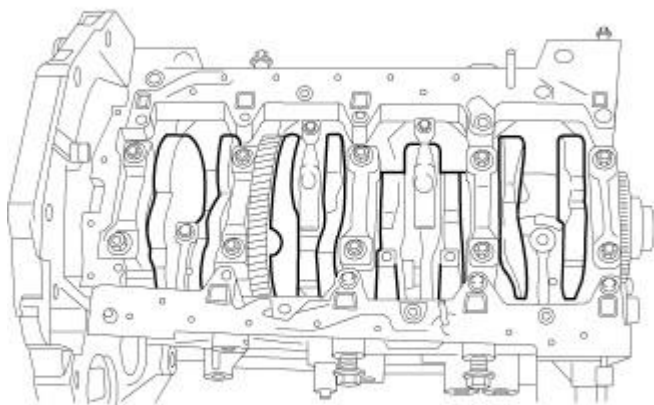

81ab8609

Fig. 200: Crankshaft

Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Remove the balance shaft assembly. Refer to **MODULE, BALANCE SHAFT, REMOVAL**.
3. Remove the rear crankshaft oil seal carrier. Refer to **SEAL, CRANKSHAFT OIL, REAR, REMOVAL**.
4. Remove the front cover. Refer to **COVER, ENGINE, FRONT, REMOVAL**.
5. Remove the bearing caps from the connecting rods.
6. Remove the bearing caps from the crankshaft journals.
7. Remove the crankshaft.

INSTALLATION**INSTALLATION - CRANKSHAFT**

1. Use the crankshaft bearing selection chart for main bearing selection. Refer to **BEARING SELECTION CHARTS**.
2. Lubricate and install the crankshaft bearings. Make sure the thrust washer is not touching the engine block.
3. Install the crankshaft.

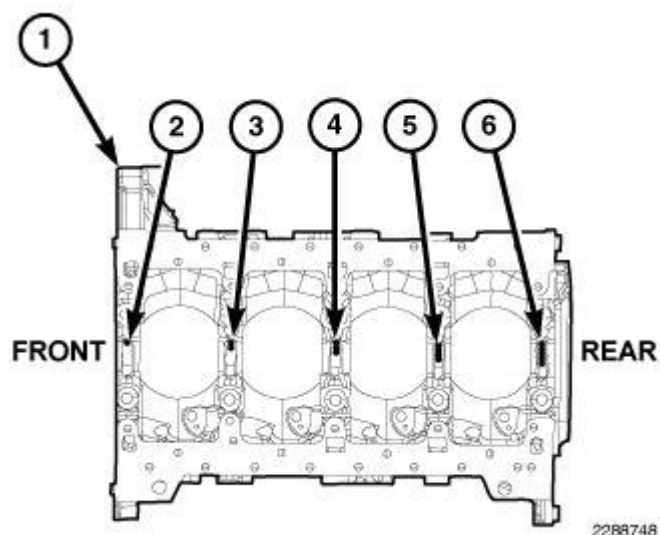


Fig. 201: Crankshaft Cap Location Marks
Courtesy of CHRYSLER LLC

4. Using new bolts, install the main bearing caps in the same location as they were removed. The notches on the top of the bearing caps indicate their proper position. The front cap has one notch, the next cap two, etc.

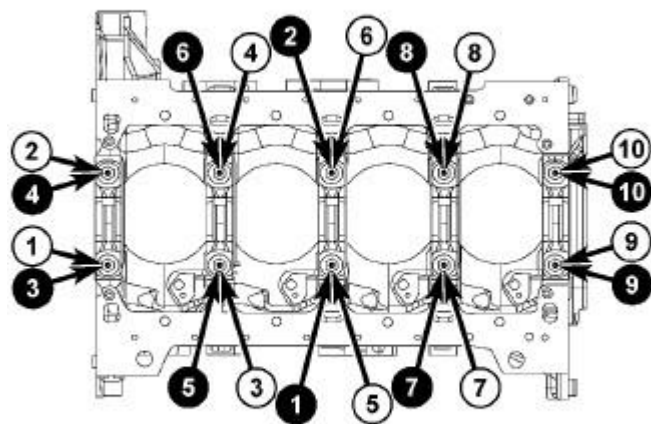


Fig. 202: Crankshaft Bolt Tightening Sequence
Courtesy of CHRYSLER LLC

5. Using the black number bubbles in the tightening pattern, tighten the crankshaft bolts to 50 N.m (36 ft. lbs.).

6. Using the white number bubbles in the tightening pattern, tighten the bolts an additional 90 degrees turn.
7. Measure the crankshaft end play. Crankshaft end play must be between 0.1 mm and 0.33 mm (0.004 in - 0.13 in).
8. Using the bearing chart, select the correct bearings and install the connecting rod bearings. Using new bolts, install the connecting rod bearing caps. Refer to **ROD, PISTON AND CONNECTING, INSTALLATION**.
9. Install the front cover. Refer to **COVER, ENGINE, FRONT, INSTALLATION**.
10. Install the rear crankshaft seal carrier. Refer to **SEAL, CRANKSHAFT OIL, REAR, INSTALLATION**.
11. Install the balance shaft assembly. Refer to **MODULE, BALANCE SHAFT, INSTALLATION**.
12. Connect the negative battery cable.

DAMPER, VIBRATION

REMOVAL

VIBRATION DAMPER

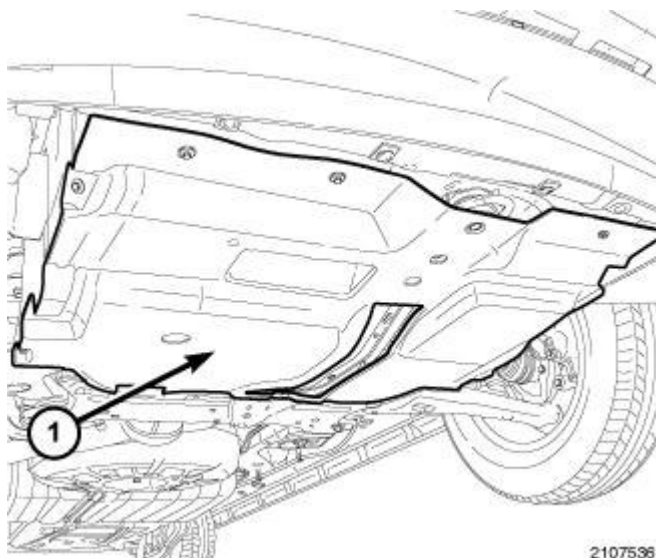


Fig. 203: Underbody Splash Shield
Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Raise and support the vehicle.
3. Remove the underbody splash shield (1).
4. Remove the right front inner splash shield.
5. Remove the accessory drive belt. Refer to **BELT, SERPENTINE, REMOVAL**.

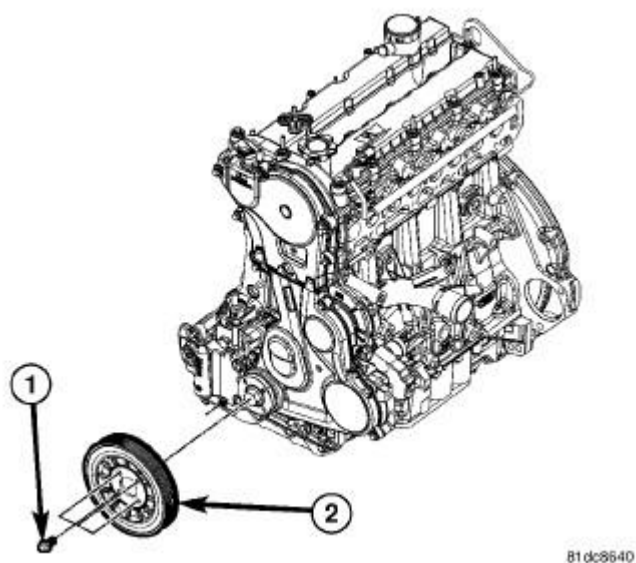


Fig. 204: Crankshaft Damper & Bolts
Courtesy of CHRYSLER LLC

6. Remove the bolts (1) and the vibration damper (2).

INSTALLATION

VIBRATION DAMPER

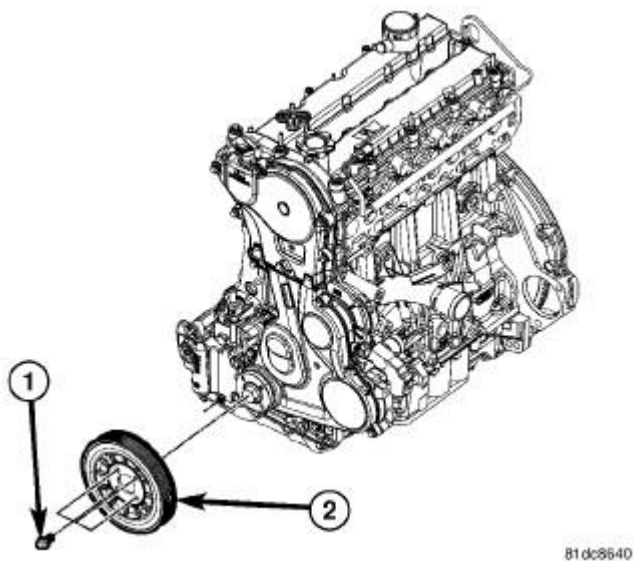


Fig. 205: Crankshaft Damper & Bolts
Courtesy of CHRYSLER LLC

1. Install the vibration damper (2). Tighten bolts (1) to 32 N.m. (24 ft. lbs.).

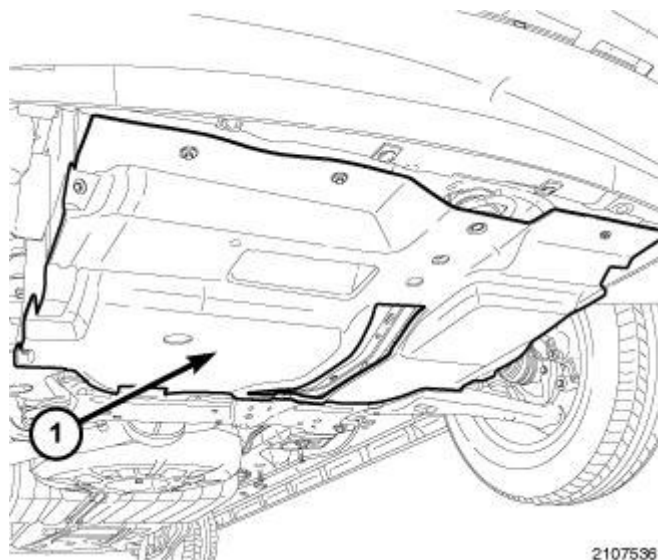


Fig. 206: Underbody Splash Shield
Courtesy of CHRYSLER LLC

2. Install accessory drive belt. Refer to **BELT, SERPENTINE, INSTALLATION**.
3. Install the right front inner splash shield.
4. Install the underbody splash shield (1).
5. Lower the vehicle.
6. Connect the negative battery cable.

FLEXPLATE

REMOVAL

REMOVAL - FLEXPLATE

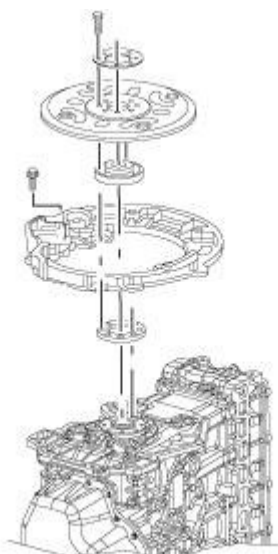
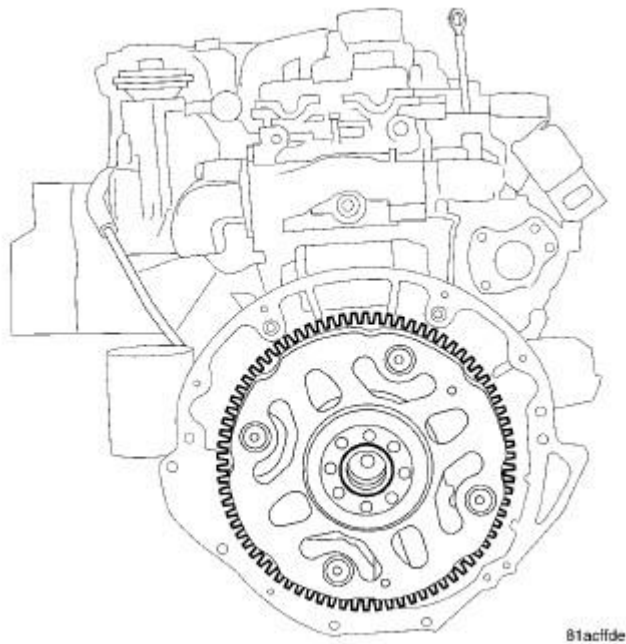


Fig. 207: Flex Plate & Bolts


Courtesy of CHRYSLER LLC

1. Remove the transmission. Refer to **REMOVAL** .
2. Paint mark the flexplate hub to flex plate relation.
3. Remove the 40 mm bolts and flexplate.

**Fig. 208: Flex Plate****Courtesy of CHRYSLER LLC**


4. Inspect flexplate (2) for damage.

INSTALLATION**INSTALLATION - FLEXPLATE**

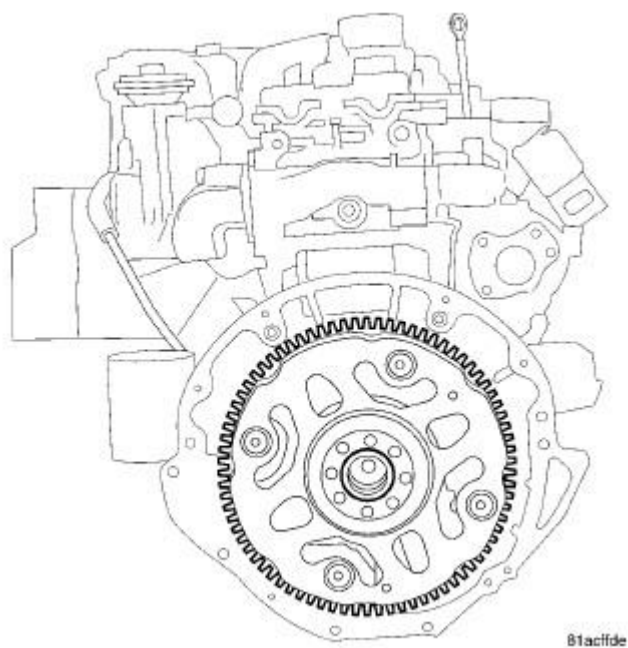**Fig. 209: Flex Plate**

Courtesy of CHRYSLER LLC

1. Install the flexplate and align with the paint marks on the hub.

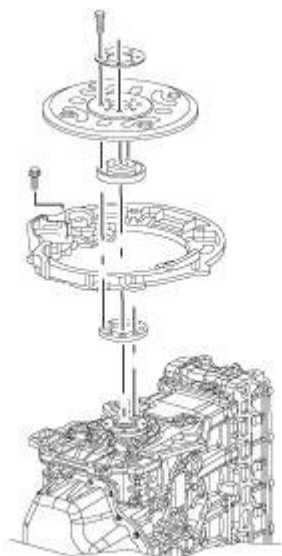**Fig. 210: Flex Plate & Bolts**

Courtesy of CHRYSLER LLC

NOTE: Always use new flexplate bolts.

NOTE: Do not lubricate new bolts as they are already coated with an anti-scuff treatment.


Bolt Length	Torque Angle
40 mm	60°
50 mm	75°
60 mm	90°

2. Install the flexplate bolts. Using a cross pattern, tighten bolts to 50 N.m (37 ft. lbs.).
3. Using a torque wrench fitted with a Torque Angle Gauge, (Goniometer), loosen one flexplate bolt at a time and tighten to 25 N.m (18 ft. lbs.) plus angle in relation to bolt length.
4. Install the transmission. Refer to **INSTALLATION** .

MODULE, BALANCE SHAFT

DESCRIPTION

DESCRIPTION

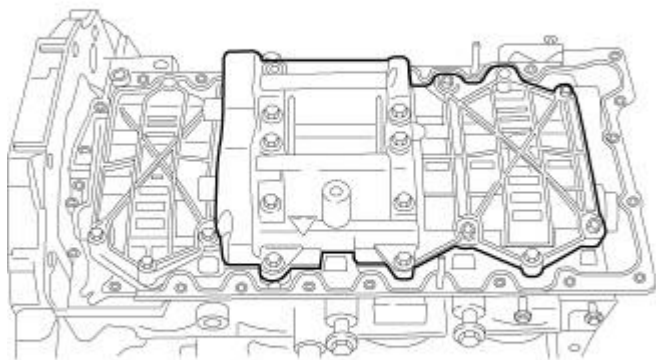

81ab8223

Fig. 211: Balance Shaft Module
Courtesy of CHRYSLER LLC

The balance shaft is gear-driven and is used to counteract engine vibration and roughness. The balance shaft assembly includes balancers on two shafts. It is only serviced as an assembly. Balance shafts must be timed to the crankshaft.

REMOVAL

REMOVAL - BALANCE SHAFT

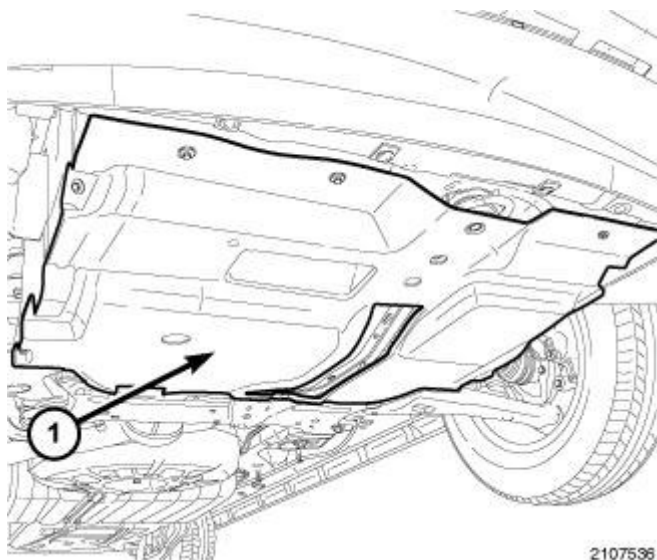


Fig. 212: Underbody Splash Shield
Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Raise and support the vehicle. Refer to **HOISTING, STANDARD PROCEDURE**.
3. Remove the underbody splash shield (1).

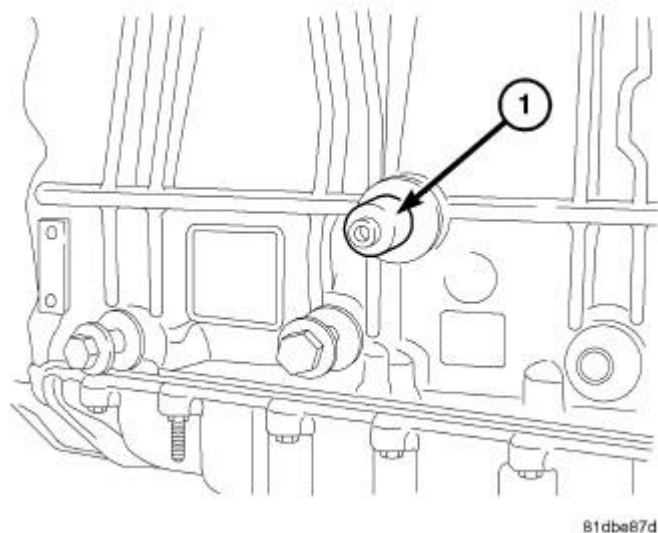


Fig. 213: Crankshaft Locking Tool
Courtesy of CHRYSLER LLC

4. Lock the engine 90 degrees ATDC. Refer to **Engine/Valve Timing - Standard Procedure**.

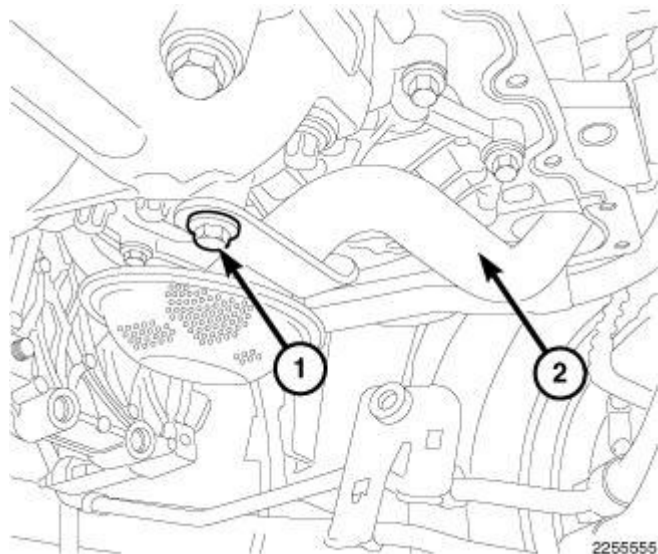


Fig. 214: Oil Pickup Tube With Bolt
Courtesy of CHRYSLER LLC

5. Remove the oil pickup tube (2). Refer to **PICK-UP, OIL PUMP, REMOVAL**.


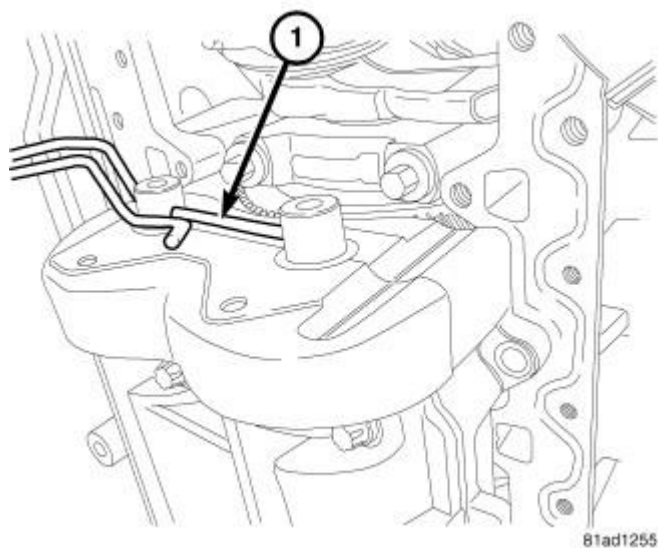


Fig. 215: Balance Shaft Timing Tool
Courtesy of CHRYSLER LLC

6. Place a dowel rod through the holes in the balance shaft axles to keep the balance shafts in the correct position for reassembly.

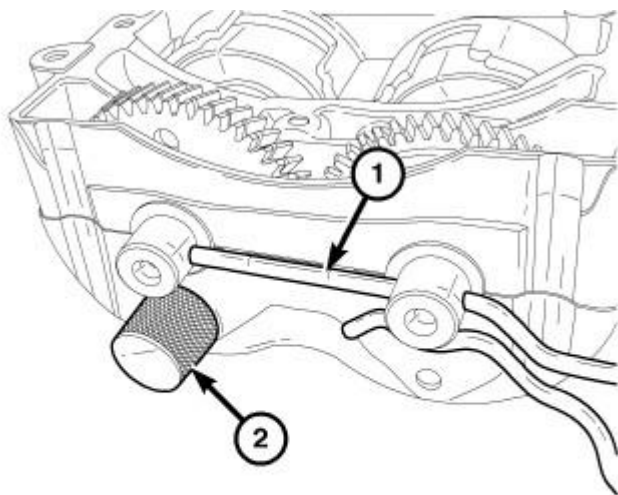


81ce8d7c

Fig. 216: Balance Shaft Tool Installed
Courtesy of CHRYSLER LLC

WARNING: The balance shaft pin must be installed before the balance shaft assembly is removed from the engine. The balance shaft pin must always remain in the balance shaft assembly while the assembly is removed from the engine. Do not remove the balance shaft pin until the balance shaft assembly is completely installed on the engine, and the TDC crank locking tool is correctly installed.

7. Insert the Balance Shaft Locking Pin Tool (special tool #VM.10012, Balance Shaft Split Gear Align) (2) into the balance shaft assembly to lock the split gears together.

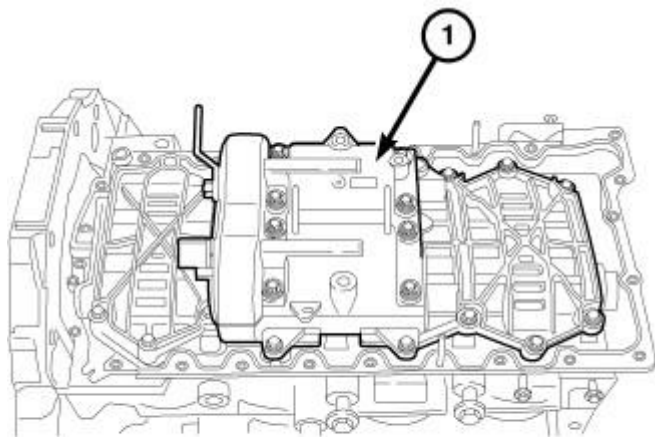

81de47f4

Fig. 217: Balance Shaft Housing
Courtesy of CHRYSLER LLC

8. Remove bolts and the balance shaft housing (1).

INSTALLATION

INSTALLATION - BALANCE SHAFT


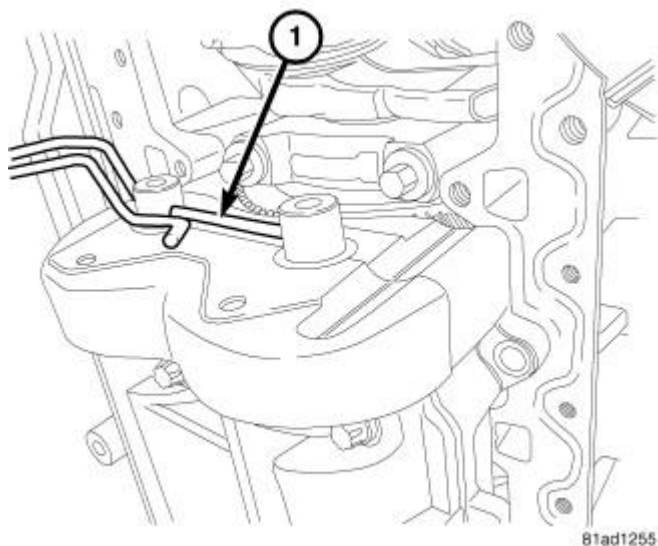


Fig. 218: Balance Shaft Timing Tool
Courtesy of CHRYSLER LLC

1. The balance shafts must remain aligned by the alignment dowel and the balance shaft pin must remain in the balance shaft assembly until the assembly is completely installed to the engine.

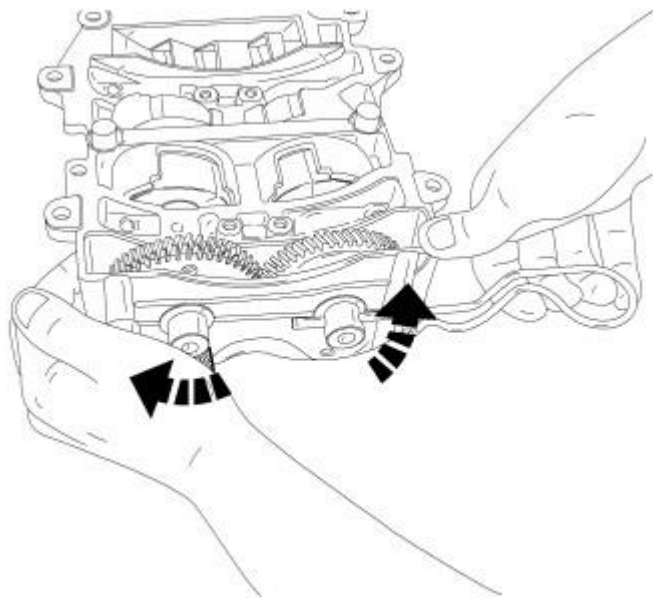


81ce8d81

Fig. 219: Balance Shaft Tool Installation

Courtesy of CHRYSLER LLC

2. The balance shaft pin should never be removed from the balance shaft assembly when the balance shaft assembly is not installed in the engine. If the balance shaft was removed from the vehicle without the pin, or the pin was removed, use the dowel to load the spring while pressing the tool into place as shown in illustration.

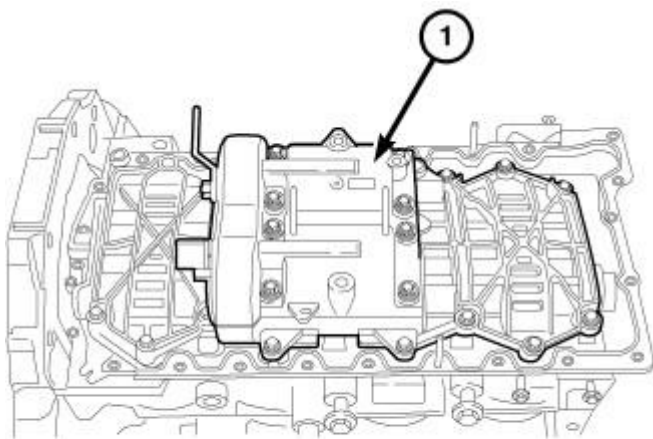


81de47f4

Fig. 220: Balance Shaft Housing

Courtesy of CHRYSLER LLC


3. Install the balance shaft housing (1).

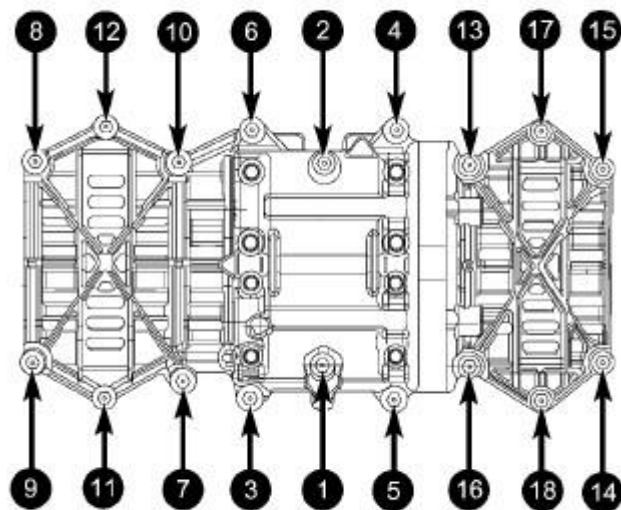

8199b736

Fig. 221: Balance Shaft Bolt Tightening Sequence
Courtesy of CHRYSLER LLC

4. Use the tightening sequence shown in illustration, tighten bolts to 33 N.m (24 ft. lbs.).

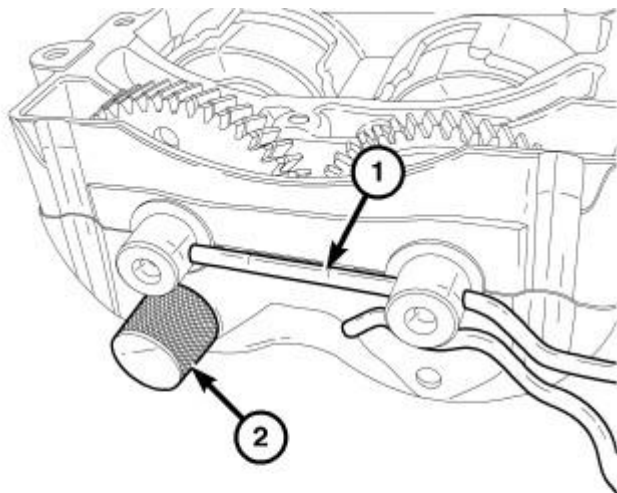

81ce8d7c

Fig. 222: Balance Shaft Tool Installed
Courtesy of CHRYSLER LLC

5. Remove the balance shaft dowel assembly and the Balance Shaft Locking Pin Tool (special tool #VM.10012, Balance Shaft Split Gear Align) (2).

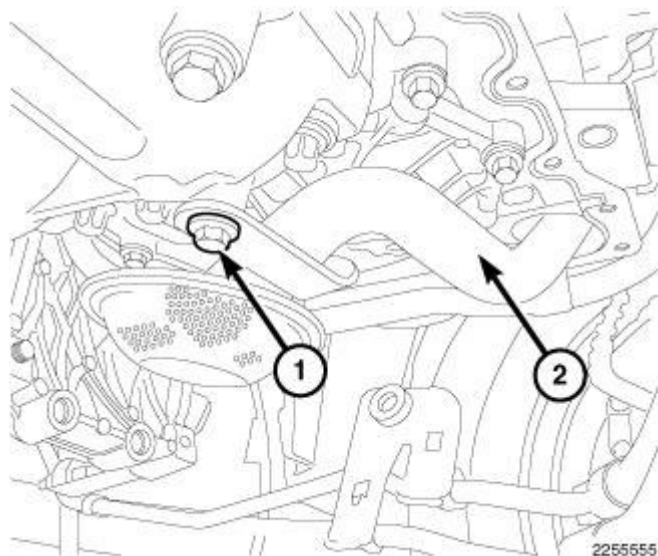


Fig. 223: Oil Pickup Tube With Bolt
Courtesy of CHRYSLER LLC

6. Install the oil pickup tube. Refer to **PICK-UP, OIL PUMP, INSTALLATION.**

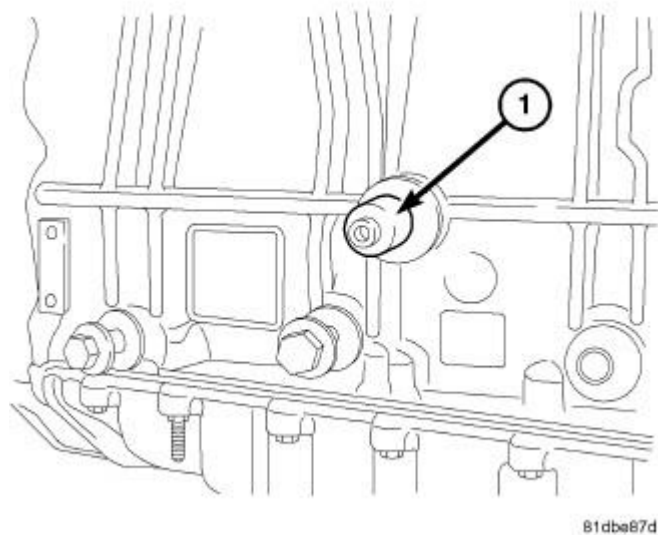


Fig. 224: Crankshaft Locking Tool
Courtesy of CHRYSLER LLC

7. Remove the Crank Locking Tool (special tool #VM.9992, Adapter, 90 Degree ATDC) (1).

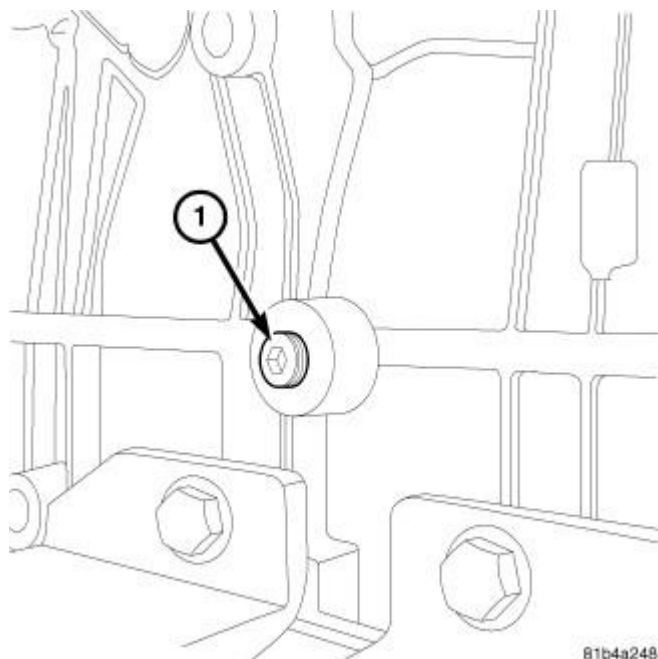


Fig. 225: Engine Block Plug
Courtesy of CHRYSLER LLC

8. Install the engine block plug (1). Tighten the engine block plug to 30 N.m (22 ft. lbs.).


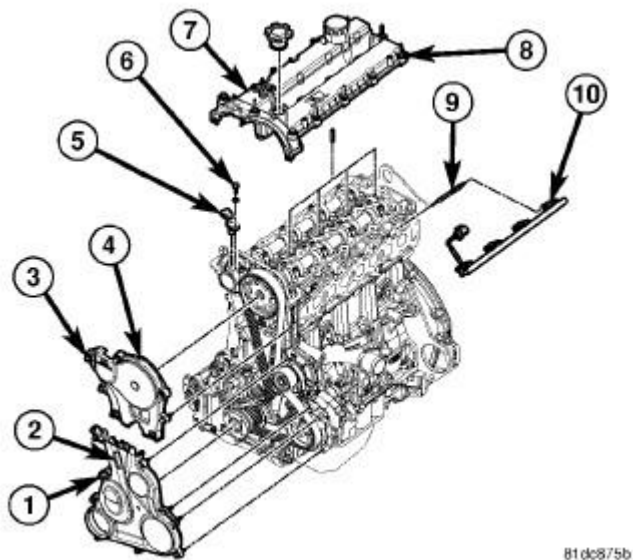


Fig. 226: Upper And Lower Front Covers With Fasteners
Courtesy of CHRYSLER LLC

9. Install the upper (4) and lower (2) front covers. Refer to **COVER(S), ENGINE TIMING, INSTALLATION**.
10. Fill the engine with recommended engine oil. Refer to **CAPACITIES AND RECOMMENDED FLUIDS, SPECIFICATIONS**.

11. Connect the negative battery cable.
12. Start the engine and check for leaks.

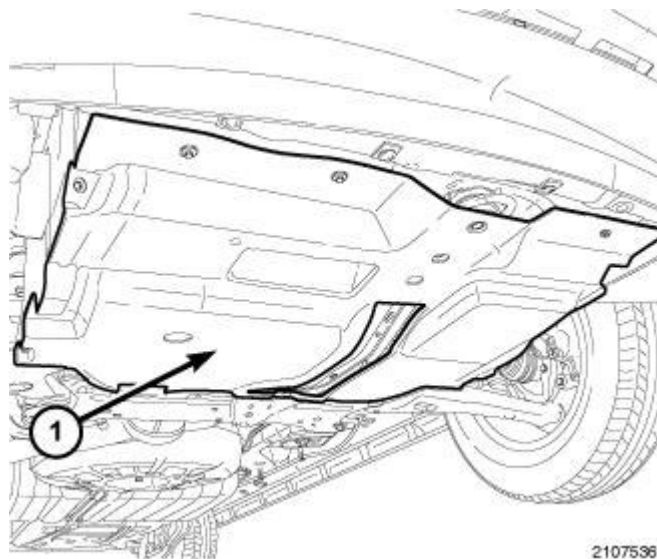

2107536


Fig. 227: Underbody Splash Shield
Courtesy of CHRYSLER LLC

13. Install the underbody splash shield (1) and securely tighten fasteners.
14. Lower the vehicle.

PLATE, TRANSMISSION ADAPTER

DESCRIPTION

DESCRIPTION

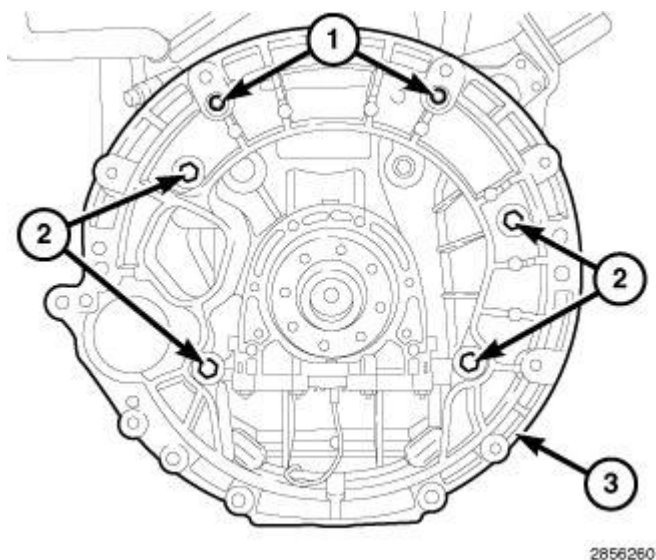

2856260

Fig. 228: Transmission Adapter Plate & Bolts

Courtesy of CHRYSLER LLC

The transmission plate adapter (3) is the component that allows the transmission to be bolted to the engine.

REMOVAL

REMOVAL - TRANSMISSION ADAPTER PLATE

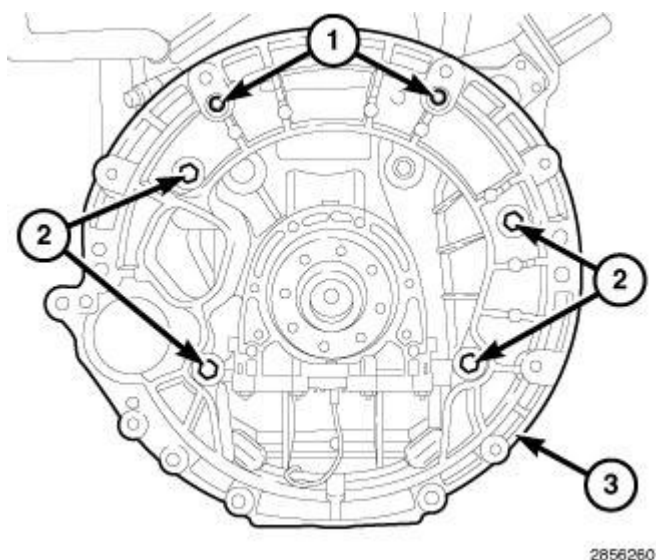


Fig. 229: Transmission Adapter Plate & Bolts

Courtesy of CHRYSLER LLC

NOTE: Do not use any magnetic tools near the crankshaft sensor tone ring.

1. Remove the flex plate. Refer to **FLEXPLATE, REMOVAL**.
2. Remove bolts (1 and 2) and the transmission adapter plate (3).

INSTALLATION

INSTALLATION - TRANSMISSION ADAPTER PLATE

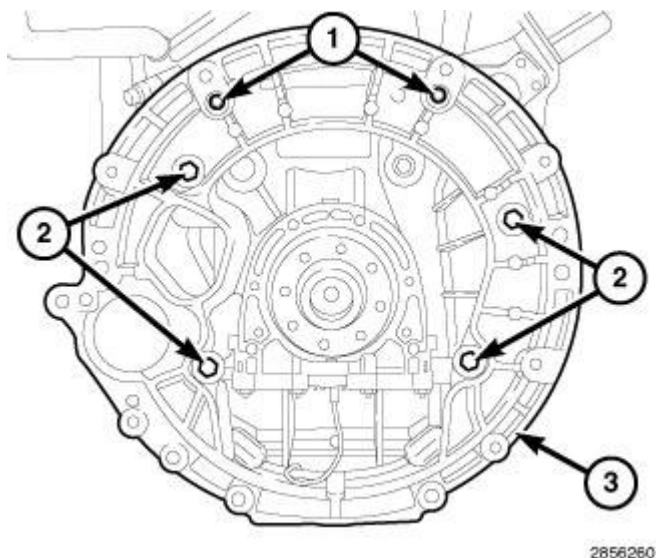


Fig. 230: Transmission Adapter Plate & Bolts

Courtesy of CHRYSLER LLC

NOTE: Do not use any magnetic tools near the crankshaft tone ring.

1. Install the transmission adapter plate (3). Tighten bolts (1 and 2) finger tight.
 - Tighten bolts (2) to 69 N.m (51 ft. lbs.).
 - Tighten bolts (1) to 79 N.m (58 ft. lbs.).
2. Install the flex plate. Refer to **FLEXPLATE, INSTALLATION**.

PUMP, INTERNAL VACUUM

DESCRIPTION

DESCRIPTION

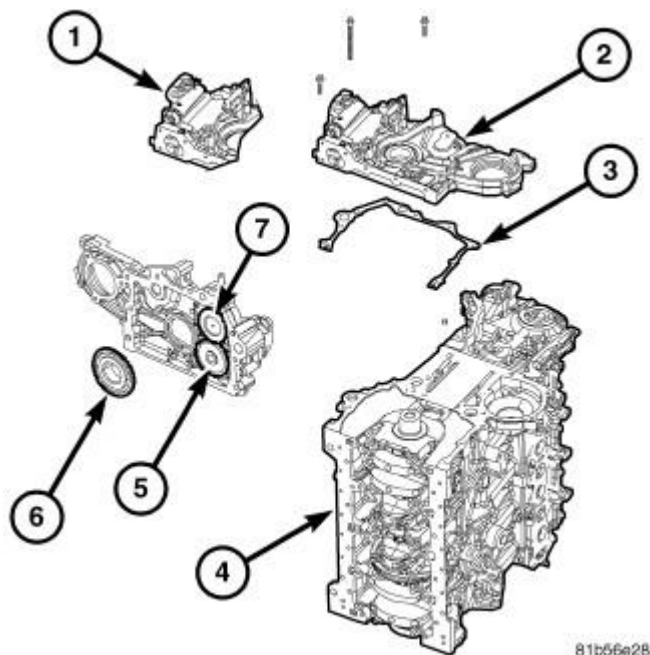


Fig. 231: Vacuum Pump And Oil Pump Assembly
Courtesy of CHRYSLER LLC

The diesel engine uses a internal vacuum pump (7). This vacuum pump (7) is mounted in the front engine cover (2). The vacuum pump is driven by a sprocket (6) on the crankshaft.


DIAGNOSIS AND TESTING

VACUUM PUMP

1. Connect a vacuum gauge to the booster check valve with a short length of hose and T-fitting.
2. Start the engine allowing the engine to run for 30 seconds. Vacuum should be 18 inches HG (609 millibars). Verify the vacuum line is not leaking. If no leak is present replace vacuum pump. Refer to **PUMP, INTERNAL VACUUM, REMOVAL**.

REMOVAL

REMOVAL - VACUUM PUMP

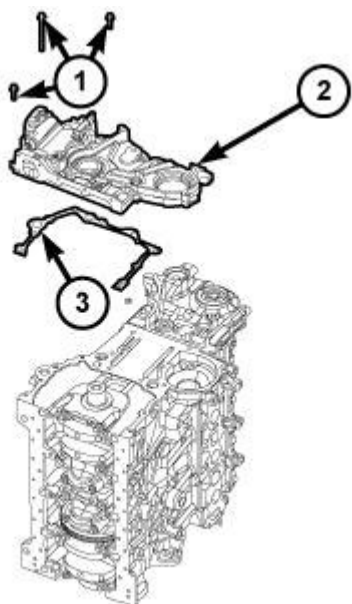

61789

Fig. 232: Front Cover, Gasket & Bolts
Courtesy of CHRYSLER LLC

NOTE: The vacuum pump is not a serviceable item, it is part of the front cover. If diagnosis has directed you to replace the vacuum pump, then the front cover needs to be replaced.

1. Disconnect the negative battery cable.
2. Remove the front cover (1). Refer to **COVER, ENGINE, FRONT, REMOVAL**.

INSTALLATION

INSTALLATION - VACUUM PUMP

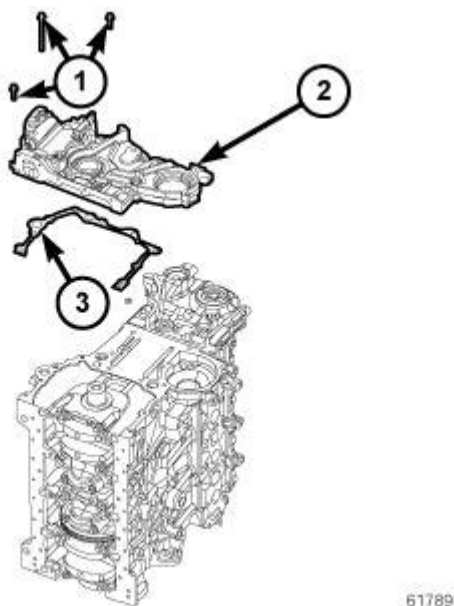


Fig. 233: Front Cover, Gasket & Bolts
Courtesy of CHRYSLER LLC

1. Install the front cover (1). Refer to **COVER, ENGINE, FRONT, INSTALLATION**.
2. Connect the negative battery cable.

ROD, PISTON AND CONNECTING

DESCRIPTION

DESCRIPTION

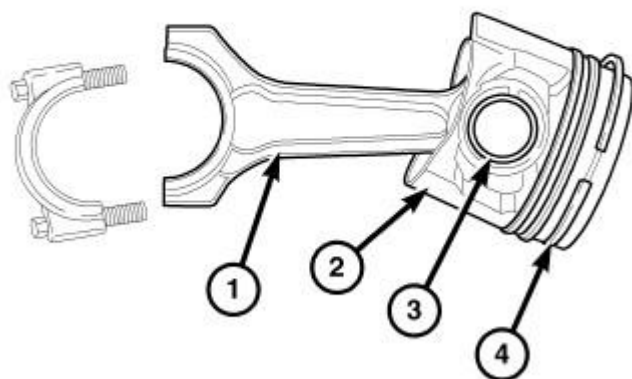


Fig. 234: Piston & Connecting Rod Assembly**Courtesy of CHRYSLER LLC**

The pistons (2) are of a free floating design. Oil jets in the engine block lubricate and cool the piston and piston pin (3) assembly. The connecting rods (1) have a pressed in place wrist pin bushing which is lubricated by the oil jets. Connecting rod (7) and bearing caps have cracked mating surfaces and are not interchangeable.

STANDARD PROCEDURE**STANDARD PROCEDURE - OVERSIZED CYLINDER BORE DIMENSIONS**

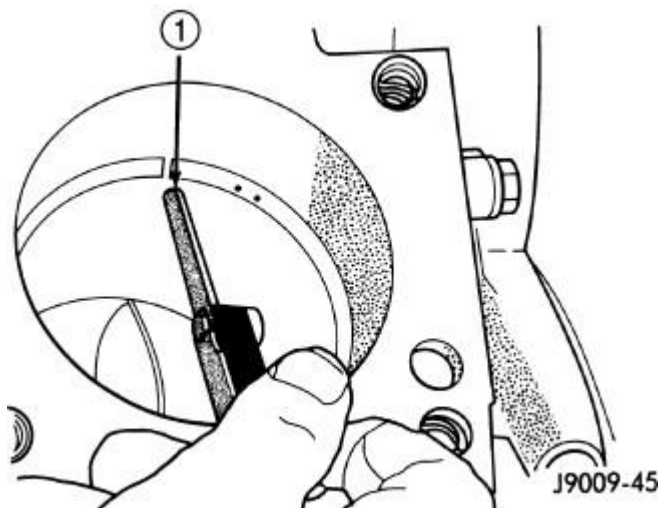


Fig. 236: Measuring Piston Ring End Gap
Courtesy of CHRYSLER LLC

1 - FEELER GAUGE

1. Wipe cylinder bore clean. Insert ring and push down with piston to ensure it is square in bore. The ring gap measurement must be made with the ring positioning at least 12 mm (0.50 in.) from bottom of cylinder bore. Refer to **Fig. 236**. Check gap with feeler gauge. Top compression ring gap.30 to.45 mm (.0118 to.0177 in.). Second compression ring gap.30 to.45 mm (.0118 to.0177 in.). Oil control ring gap.25 to.50 mm (.0098 to.0196 in.).
2. If ring gaps exceed dimension given, new rings or cylinder liners must be fitted. Keep piston rings in piston sets.

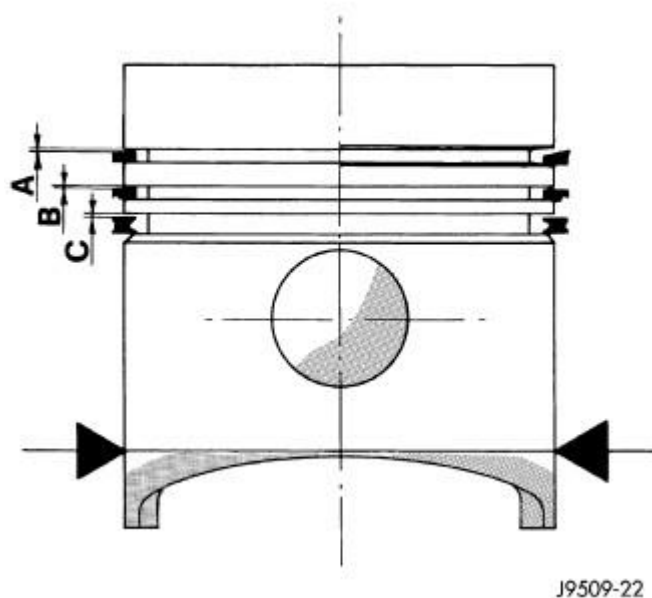


Fig. 237: Piston Ring To Groove Clearance
Courtesy of CHRYSLER LLC

3. Check piston ring to groove clearance. Refer to **Fig. 237**. Top compression ring gap .080 to .130 mm (.0031 to .0051 in.). Second compression ring gap .070 to .110 mm (.0027 to .0043 in.). Oil control ring gap .040 to .080 mm (.0015 to .0031 in.).

REMOVAL

REMOVAL


NOTE: Both the connecting rod and the connecting rod cap are paint marked to aid during assembly. Paint marks disappear after time. If the rod and the cap are not marked with paint, paint mark or scribe them before disassembly.

1. Disconnect the negative battery cable.
2. Remove cylinder head. Refer to **CYLINDER HEAD, REMOVAL**.
3. Raise and support the vehicle. Refer to **HOISTING, STANDARD PROCEDURE**.
4. Remove balance shaft assembly. Refer to **MODULE, BALANCE SHAFT, REMOVAL**.
5. Remove the oil jets. Refer to **JET, PISTON OIL COOLER, REMOVAL**.
6. Remove top ridge of cylinder bores with a ridge reamer before removing pistons from cylinder block. **Be sure to keep top of pistons covered during this operation.**
7. Piston and connecting rods must be removed from top of cylinder block. Rotate crankshaft so that each connecting rod is centered in cylinder bore.

NOTE: Be careful not to nick or scratch crankshaft journals

8. After removal, install bearing cap on the mating rod and mark pistons with matching cylinder number when removed from engine block.

REMOVAL - PISTON PIN

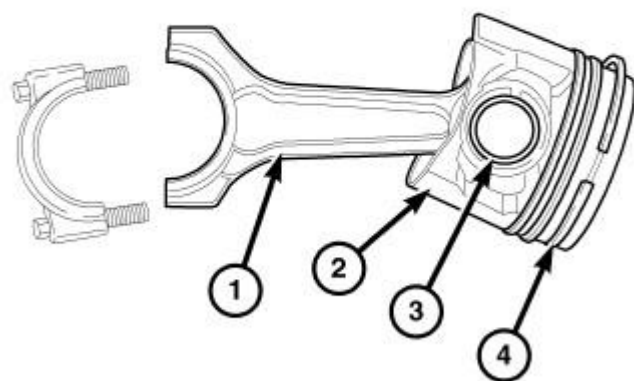

81abebb4

Fig. 238: Piston & Connecting Rod Assembly
Courtesy of CHRYSLER LLC

1. Secure connecting rods (1) in a soft jawed vice.
2. Remove 2 snap rings securing piston pin (3).
3. Push piston pin (3) out of piston (2) and connecting rod (1).

REMOVAL - PISTON RING

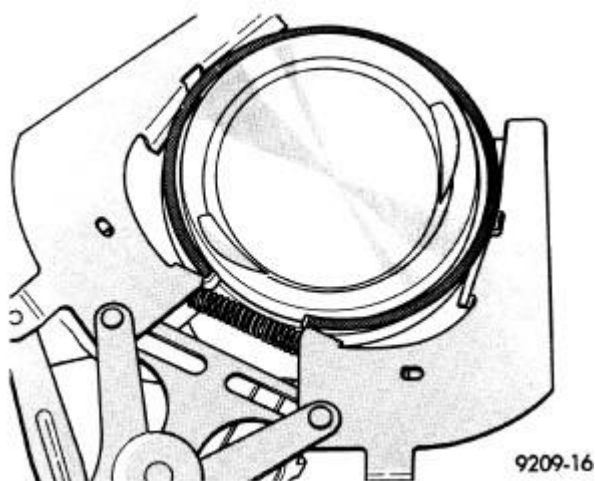


Fig. 239: Piston Rings - Removal/Installation
Courtesy of CHRYSLER LLC

1. ID mark on face of top and second piston rings must point toward piston crown.
2. Using a suitable ring expander, remove top and second piston rings.

3. Remove upper oil ring side rail, lower oil ring side rail and then the oil expander from piston.
4. Carefully clean carbon from piston crowns, skirts and ring grooves ensuring the 4 oil holes in the oil control ring groove are clear.

INSPECTION

INSPECTION

PISTONS


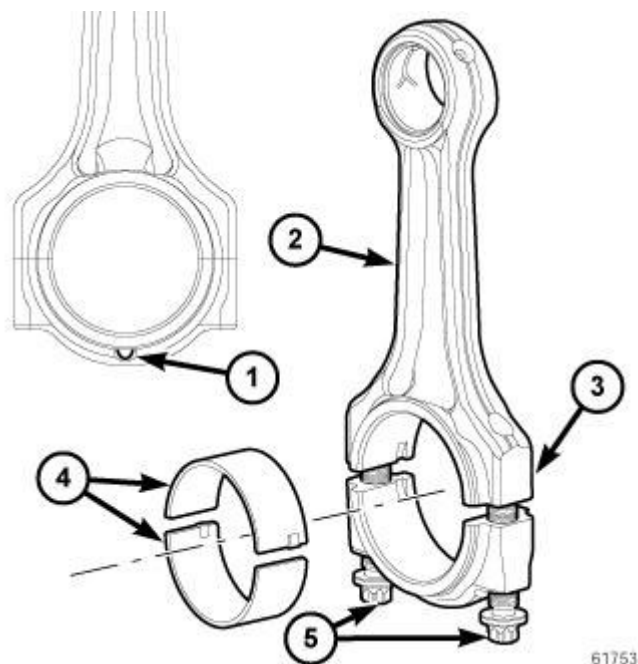


Fig. 240: Connecting Rod Identification
Courtesy of CHRYSLER LLC

1 - CONNECTING ROD PAWL
2 - CONNECTING ROD
3 - PAINTED CYLINDER IDENTIFIER
4 - CONNECTING ROD BEARINGS

1. Piston Diameter: Size: 91.912 - 91.928 mm (3.6185 - 3.6192 in.) Maximum wear limit.05 mm (.0019 in.).
2. Check piston pin bores in piston for roundness. Make 3 checks at 120° intervals. Maximum out of roundness.05 mm (.0019 in.).
3. The piston diameter should be measured approximately 15 mm (.590 in.) up from the base.
4. Skirt wear should not exceed 0.1 mm (.00039 in.).
5. The clearance between the cylinder liner and piston should not exceed 0.065-0.083 mm (.0025-.0032 in.).

CONNECTING RODS

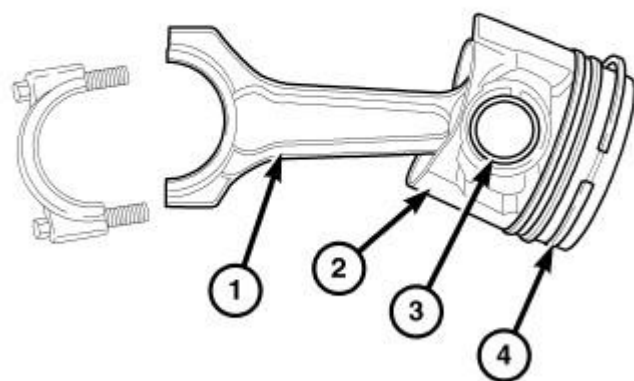

81abebb4

Fig. 241: Piston & Connecting Rod Assembly

Courtesy of CHRYSLER LLC

CAUTION: Connecting rod bolts must be replaced when disassembled. When assembling the connecting rod (2), be sure that the connecting rod pawl (1) on each of the connecting rod caps is facing the rear (fly wheel) side of the engine.

NOTE: Do Not lubricate the new connecting rod bolts. They are already coated with a anti scuff treatment.

1. Assemble connecting rod bearings (4) and bearing caps to their respective connecting rods (2) ensuring that the serrations on the cap and reference marks are aligned.
2. Tighten connecting cap bolts to 10 N.m (89 in. lbs.).
3. Without loosening connecting rod bolts, tighten all bolts to 30 N.m (22 ft. lbs.).
4. Using a torque angle gauge, tighten each bolt an additional 40°.
5. Recheck all bolt tightening with a torque wrench set to 88 N.m (65 ft. lbs.).
6. Check and record internal diameter of crank end of connecting rod (2).

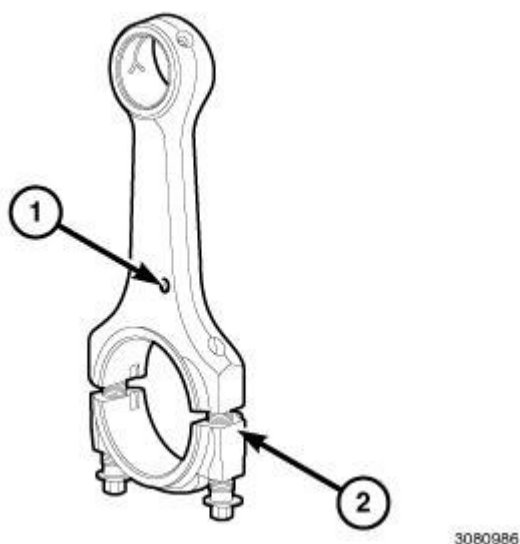


Fig. 242: Connecting Rod & Cap
Courtesy of CHRYSLER LLC

CAUTION: When changing connecting rods (2), DO NOT use a stamp to mark the cylinder location. Identify the connecting rods (2) and caps location using a paint marker. All four must have the same weight. Replacement connecting rods (2) will only be supplied in sets of four.

Connecting rods (2) are supplied in sets of four since they all must be of the same weight category. The weight of the connecting rod is identified by a paint mark (1) on the connecting rod.

PISTON PINS

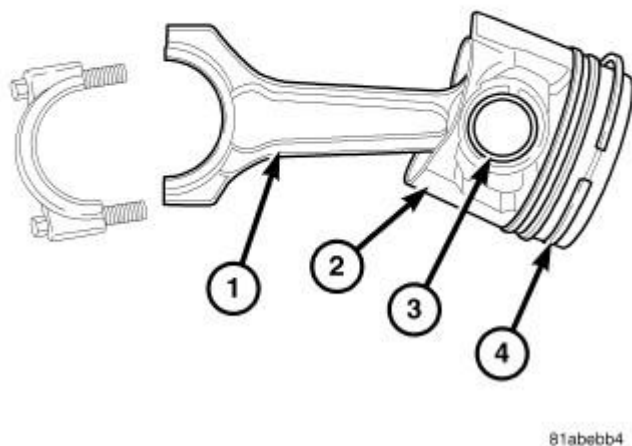



Fig. 243: Piston & Connecting Rod Assembly
Courtesy of CHRYSLER LLC

1. Measure the diameter of piston pin in the center and both ends. For specifications, refer to **Engine - Specifications**.

INSTALLATION

INSTALLATION

INSTALLATION - PISTON PIN

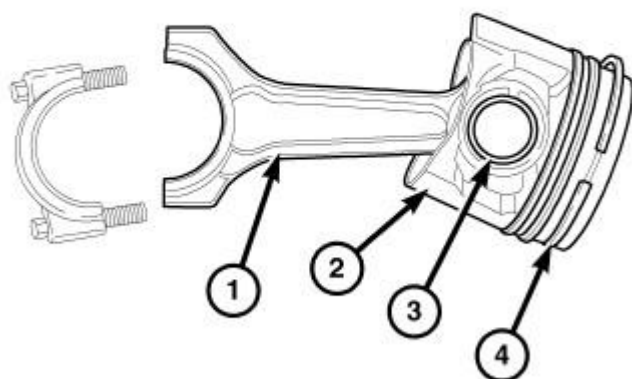

81abebb4

Fig. 244: Piston & Connecting Rod Assembly
Courtesy of CHRYSLER LLC

1. Secure connecting rod (1) in soft jawed vice.
2. Lubricate piston pin (3) and piston (2) with clean engine oil.
3. Position piston (2) on connecting rod (1).

CAUTION: Ensure arrow on piston crown and the bearing cap numbers on the connecting rod are on the opposite side.

4. Install piston pin (1).
5. Install snap ring in piston (2) to retain piston pin (3).
6. Remove connecting rod (1) from vice.

INSTALLATION - PISTON RINGS

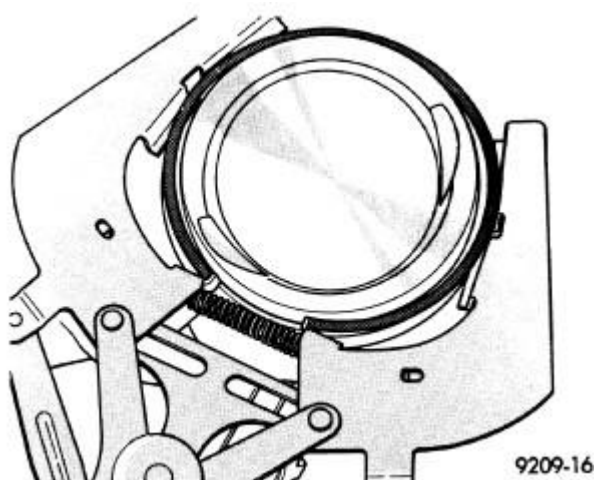


Fig. 245: Piston Rings - Removal/Installation
Courtesy of CHRYSLER LLC

1. Install rings on the pistons using a suitable ring expander.

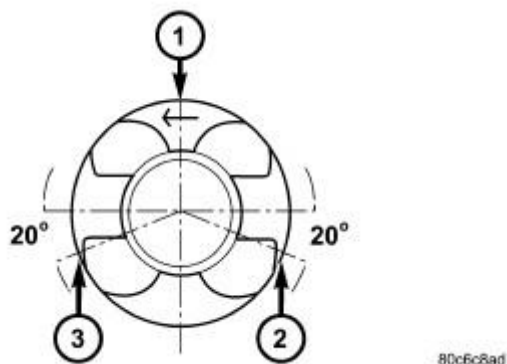


Fig. 246: Piston Ring Gap Location
Courtesy of CHRYSLER LLC

1 - SECOND COMPRESSION RING GAP POSITION
2 - OIL CONTROL RING GAP POSITION
3 - TOP COMPRESSION RING GAP POSITION

2. Top compression ring is tapered and chromium plated. The second ring is of the scraper type and must be installed with scraping edge facing bottom of the piston. The third is an oil control ring. Ring gaps must be positioned, before inserting piston into the liners, as follows.
3. Top ring gap must be positioned at the No. 3 position (looking at the piston crown from above).
4. Second piston ring gap should be positioned at the No. 1 position.
5. Oil control ring gap should be positioned at the No. 2 position.

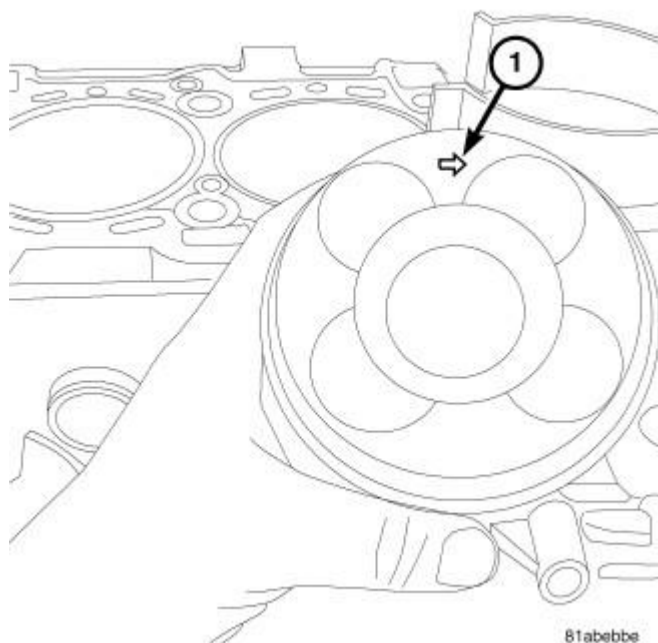



Fig. 247: Piston Direction

Courtesy of CHRYSLER LLC

6. When assembling pistons check that components are installed in the same position as before disassembly, determined by the numbers stamped on the crown of individual pistons. Engine cylinders are numbered starting from gear train end of the engine. **Face arrow on top of piston toward front of engine .** Therefore, the numbers stamped on connecting rod big end should face toward the injection pump side of engine. To insert piston into cylinder use a ring compressor as shown in illustration.

INSTALLATION - PISTON


1. Before installing pistons, and connecting rod assemblies into the bore, be sure that compression ring gaps are staggered so that neither is in line with oil ring rail gap.
2. Before installing the ring compressor, make sure the oil ring expander ends are butted together.
3. Immerse the piston head and rings in clean engine oil, slide the piston ring compressor, over the piston and tighten. **Ensure position of rings does not change during this operation .**
4. Face arrow on piston towards front of engine.

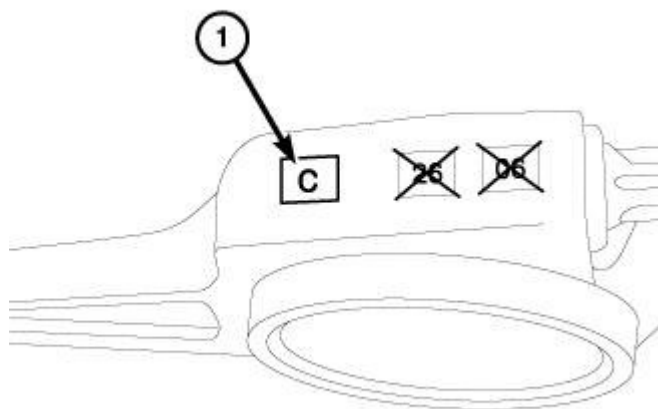

61771

Fig. 248: Connecting Rod Size
Courtesy of CHRYSLER LLC

5. The letter "C" (1) is used for connecting rod bearing selection on the bearing chart and is to be matched with the letter found on the crankshaft in order to determine the correct size bearings to be used.

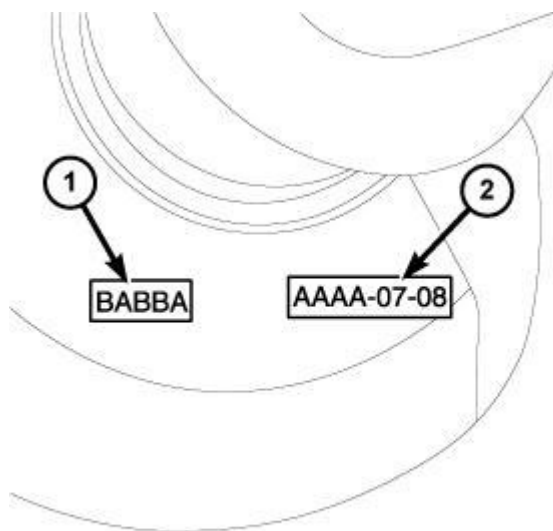

61703

Fig. 249: Crankshaft Connecting Rod Journal Diameter
Courtesy of CHRYSLER LLC

6. Compare the crankshaft connecting rod journal diameter (2) with the bearing selection chart to determine the correct bearing size for each cylinder. The letters stamped into the crankshaft (2) are in the same order as the cylinders. The first letter corresponds to the first cylinder, the second to the second, etc. Refer to **Engine/Engine Block - Standard Procedure**.

NOTE: The connecting rod bolts must be replaced every time they are loosened or removed.

CAUTION: Care must be taken not to nick crankshaft journal when installing pistons.


7. Rotate crankshaft so that the connecting rod journal is on the center of the cylinder bore. Insert rod and piston into cylinder bore and guide rod over the crankshaft journal.
8. Guide the piston down in cylinder bore, using a hammer handle. At the same time, guide connecting rod into position on connecting rod journal.
9. Install connecting rod caps. Using new rod bolts, tighten to 10 N.m (88 in. lbs.). Then, tighten bolts to 30 N.m (22 ft. lbs.) plus an additional 40 degrees turn. Then with a torque wrench set to 88 N.m (65 ft. lbs.) make the final tighten check on bolts.
10. Install the oil jets. Refer to **JET, PISTON OIL COOLER, INSTALLATION.**
11. Install cylinder head. Refer to **CYLINDER HEAD, INSTALLATION.**
12. Install balance shaft assembly. Refer to **MODULE, BALANCE SHAFT, INSTALLATION.**
13. Connect the negative battery cable.

SEAL, CRANKSHAFT OIL, FRONT

REMOVAL

REMOVAL

1. Remove the crankshaft sprocket. Refer to **SPROCKET(S), TIMING BELT AND CHAIN, REMOVAL.**

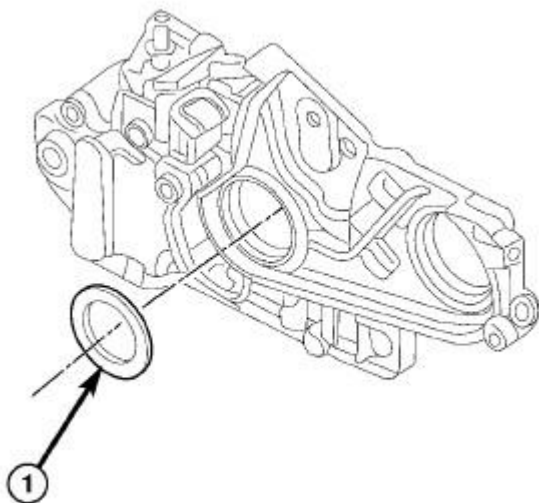

81df239a

Fig. 250: Front Crankshaft Oil Seal

Courtesy of CHRYSLER LLC

NOTE: Do not gouge or scratch the surface of the crankshaft when removing the front crankshaft oil seal.

2. Remove the front crankshaft oil seal (1).

INSTALLATION

INSTALLATION

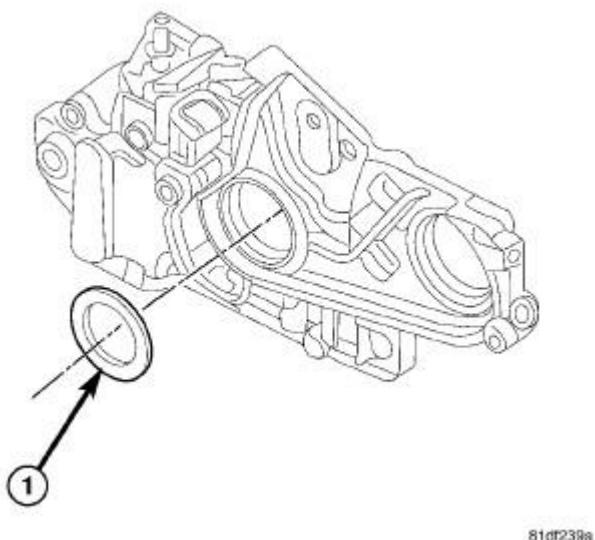


Fig. 251: Front Crankshaft Oil Seal
Courtesy of CHRYSLER LLC

NOTE: The lip of the front crankshaft oil seal faces away from the engine on installation.

1. Position the front crankshaft oil seal (1) into the front cover.

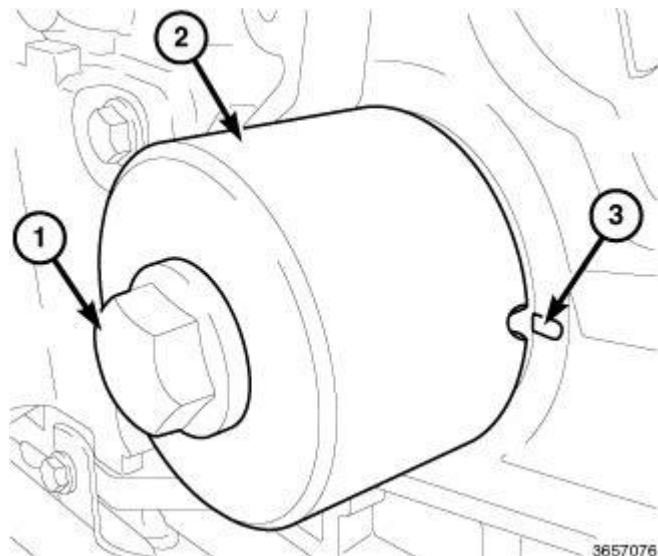


Fig. 252: Front Crankshaft Oil Seal Installer & Bolt
Courtesy of CHRYSLER LLC

NOTE: The crankshaft sprocket bolt is a left handed thread.

2. Using (special tool #VM.10335, Installer Tool, Front Seal) (2), install the front crankshaft oil seal using the vibration damper bolt (1) to draw the seal in place.
3. Remove bolt (1) and the (special tool #VM.10335, Installer Tool, Front Seal) (2).
4. Install the crankshaft sprocket. Refer to **SPROCKET(S), TIMING BELT AND CHAIN, INSTALLATION**.

SEAL, CRANKSHAFT OIL, REAR

DESCRIPTION

DESCRIPTION

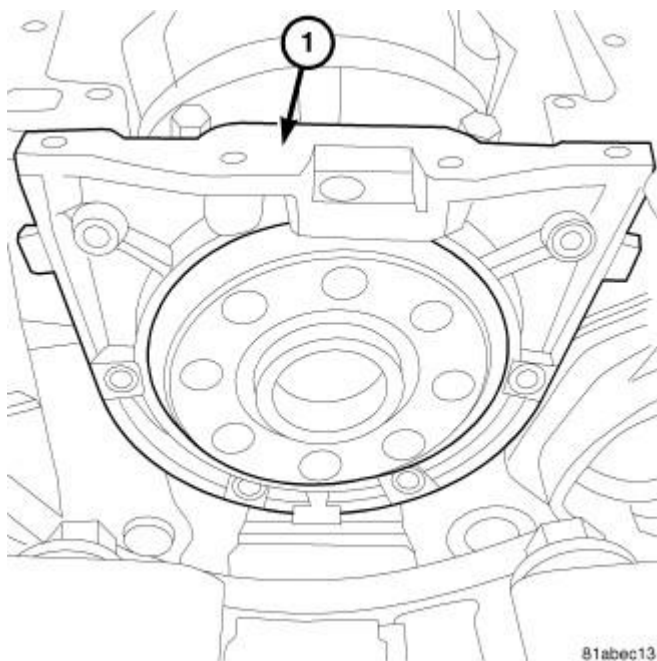


Fig. 253: Rear Crankshaft Seal & Rear Main Oil Seal Carrier
Courtesy of CHRYSLER LLC

The rear crankshaft seal consists of a seal and a seal carrier (1). The rear seal is inserted into the carrier. Once assembled the rear main seal assembly should not be separated to reduce the possibility of damage to the internal rear seal lip.

REMOVAL

REMOVAL

1. Remove the transaxle. Refer to **REMOVAL** .
2. Remove flywheel assembly.
3. Remove the oil pan. Refer to **PAN, OIL, REMOVAL**.

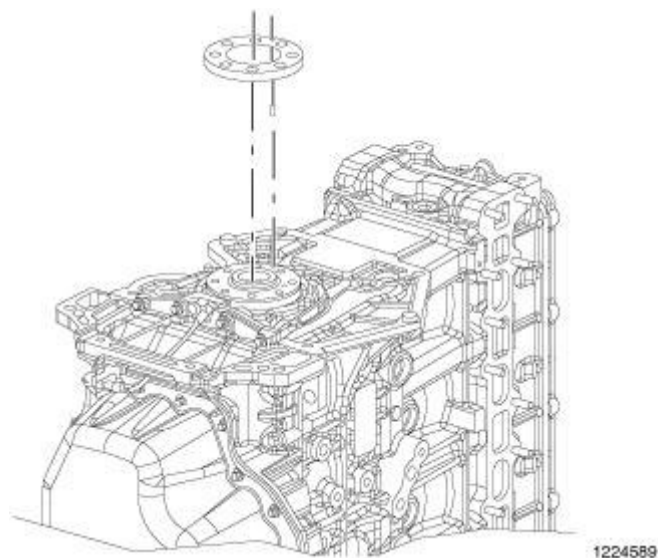


Fig. 254: Crankshaft Sensor Tone Wheel
Courtesy of CHRYSLER LLC

4. Remove the crankshaft sensor tone wheel before removing the rear main oil seal.


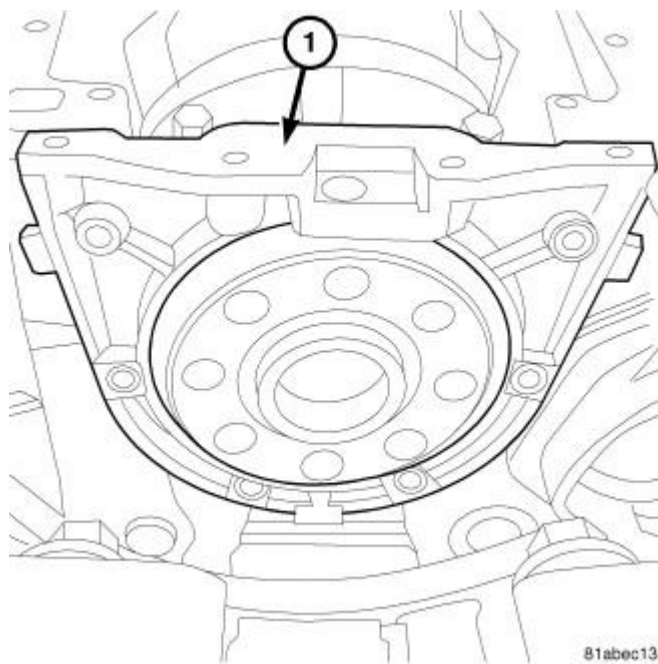


Fig. 255: Rear Crankshaft Seal & Rear Main Oil Seal Carrier
Courtesy of CHRYSLER LLC

5. Remove the rear crankshaft seal and the rear main oil seal carrier.

INSTALLATION

INSTALLATION - REAR CRANKSHAFT OIL SEAL

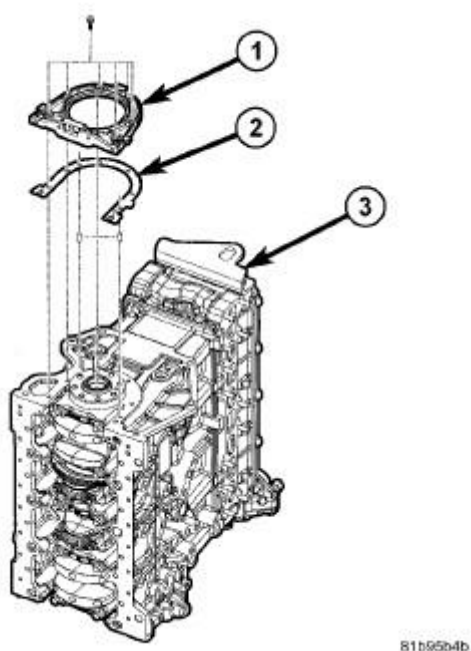


81b95b4b

Fig. 256: Rear Main Seal Carrier, Gasket & Engine Block

Courtesy of CHRYSLER LLC


1. Make sure the rear main seal sealing surfaces are free of oil and debris.
2. Position the rear main seal carrier gasket (2) onto the rear of the engine block (3).
3. Using Crankshaft Seal Installer Tool (special tool #VM.9993, Installer, Crankshaft Rear Oil Seal), install rear crankshaft oil seal into the rear main seal carrier (1).
4. Using Crankshaft Seal Installer Tool (special tool #VM.9993, Installer, Crankshaft Rear Oil Seal) install the rear main seal carrier onto the engine block (3).

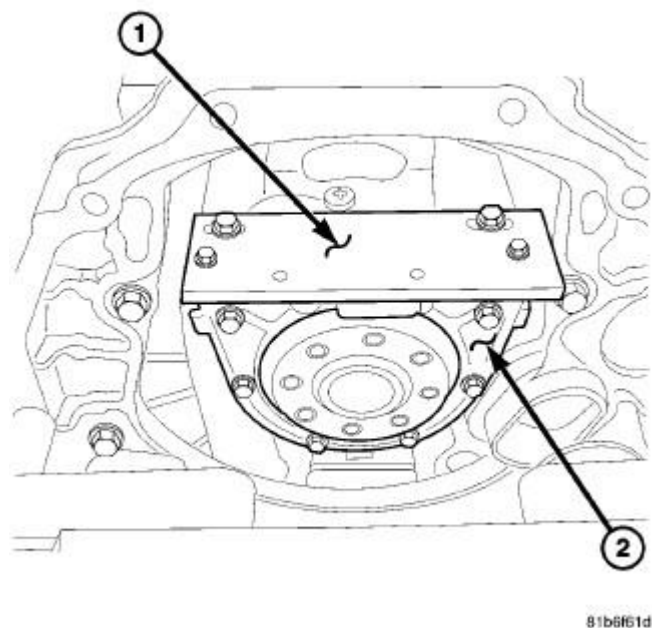

81b6f61d

Fig. 257: Front And Rear Seal Tool Installed Onto Rear Oil Seal Carrier
 Courtesy of CHRYSLER LLC

5. Loosely install the bolts that secure the rear oil seal carrier (2) to the engine block.
6. Use Front and Rear Seal Tool (special tool #VM.9990, Tool, Front And Rear Seal) (1) to set the depth of the rear main seal (2).

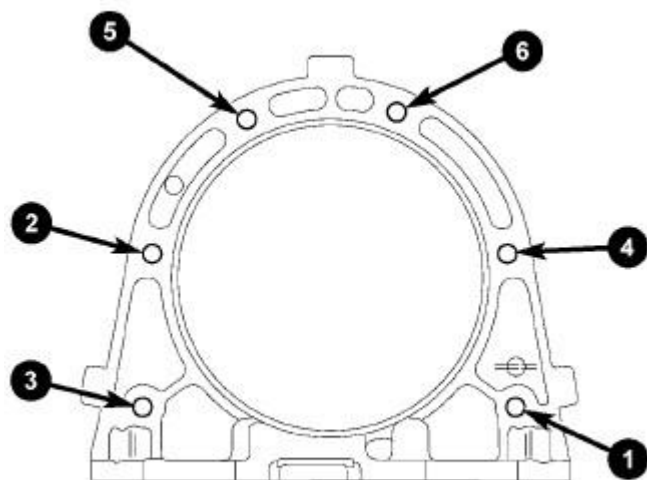


81b32ba4

Fig. 258: Rear Cover Tightening Sequence

Courtesy of CHRYSLER LLC

7. Use the illustrated pattern, tighten the rear seal cover bolts to 15 N.m (133 in. lbs.).
8. Make sure the crankshaft sensor tone wheel is positioned correctly on the crankshaft.
9. Install the crankshaft sensor tone wheel to the rear of the crankshaft.
10. Install the oil pan. Refer to **PAN, OIL, INSTALLATION**.
11. Install the flexplate. Refer to **FLEXPLATE, INSTALLATION**.
12. Install the transaxle. Refer to **INSTALLATION**.

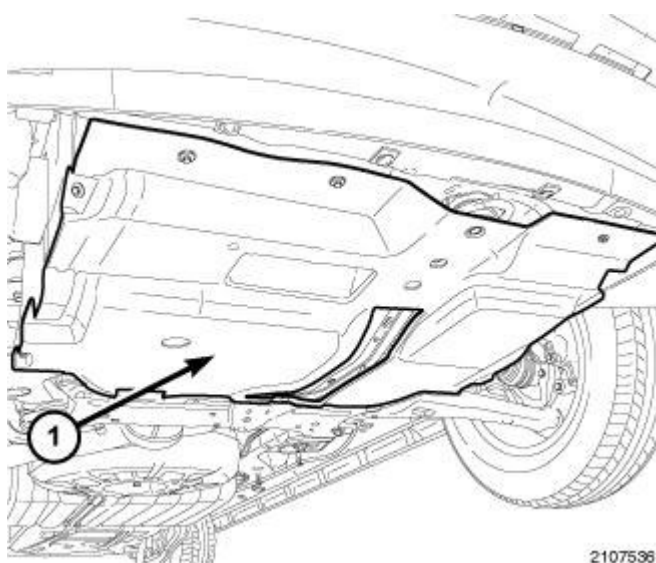ENGINE MOUNTING**INSULATOR, ENGINE MOUNT, RIGHT****REMOVAL****REMOVAL - RIGHT ENGINE MOUNT****Fig. 259: Underbody Splash Shield****Courtesy of CHRYSLER LLC**

1. Disconnect the negative battery cable.
2. Remove the air cleaner body. Refer to **BODY, AIR CLEANER, REMOVAL**.
3. Raise and support the vehicle. Refer to **HOISTING, STANDARD PROCEDURE**.
4. Remove the underbody splash shield (1).

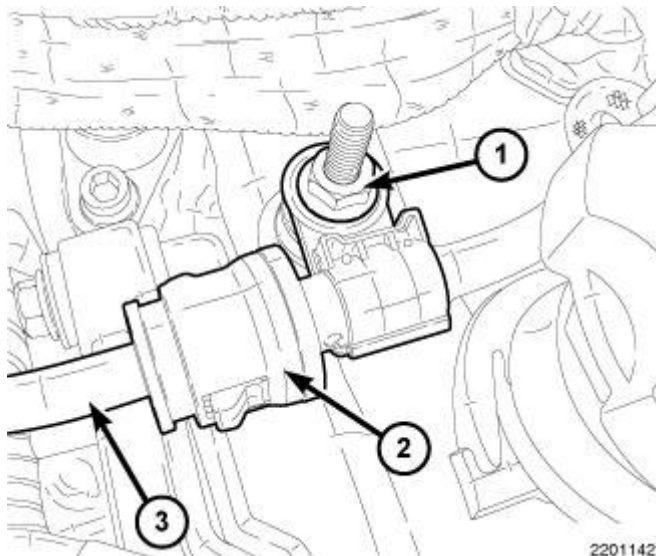


Fig. 260: Fuel Injector Return Line & Retaining Nut
Courtesy of CHRYSLER LLC

5. Remove the retaining nut (1) and disconnect the fuel injector return line (2).

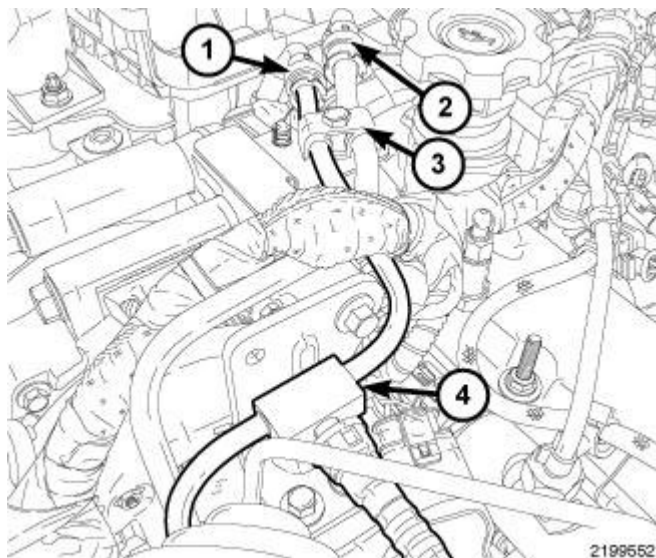


Fig. 261: Fuel Return Line, Fuel Feed Line, Fuel Line Mounting Bracket & Fuel Return Line Block
Courtesy of CHRYSLER LLC

6. Disconnect the fuel return line (1).
7. Disconnect the fuel feed line (2).

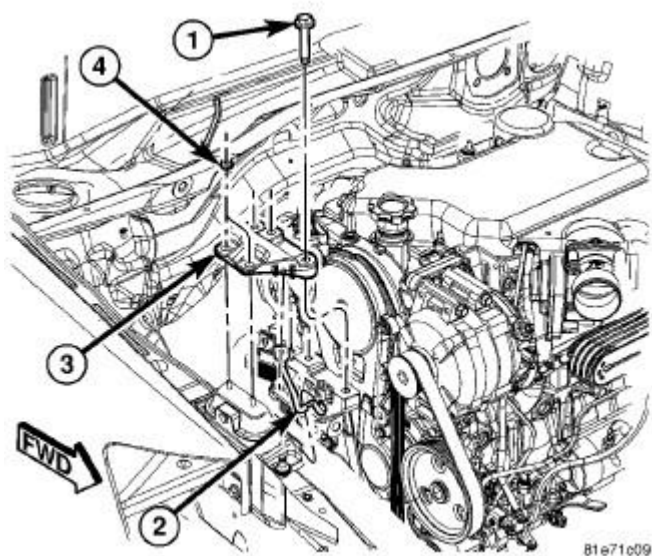


Fig. 262: Right Front Engine Mount Bracket & Fasteners
Courtesy of CHRYSLER LLC

8. Support the engine from below.
9. Remove the ground strap (2).
10. Remove the fasteners (1 and 4) and the engine mount bracket (3).

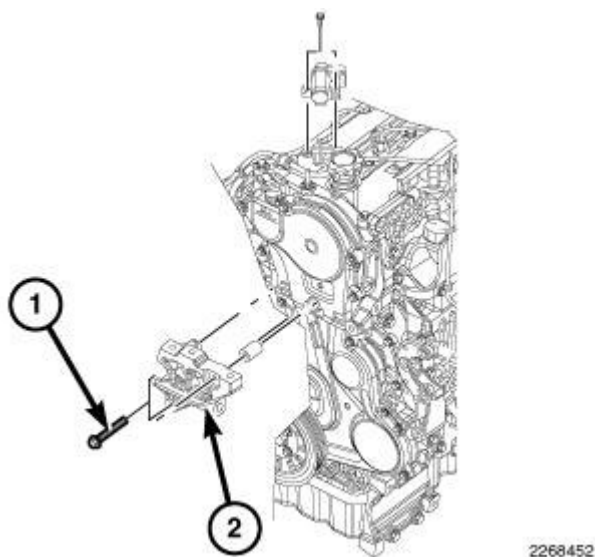


Fig. 263: Inner Engine Mount Bracket & Fasteners
Courtesy of CHRYSLER LLC

11. Remove fasteners (1) and the inner engine mount bracket (2).

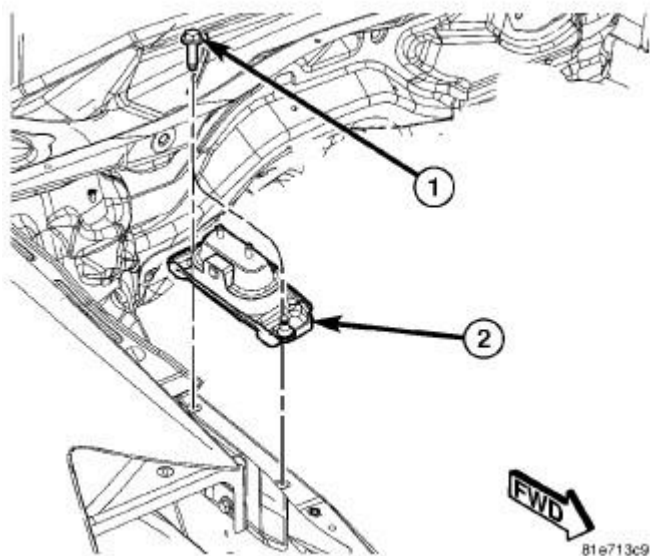


Fig. 264: Lower Engine Mount & Bolts
Courtesy of CHRYSLER LLC

12. Remove the bolts (1) and the engine mount (2).

INSTALLATION

INSTALLATION - RIGHT ENGINE MOUNT

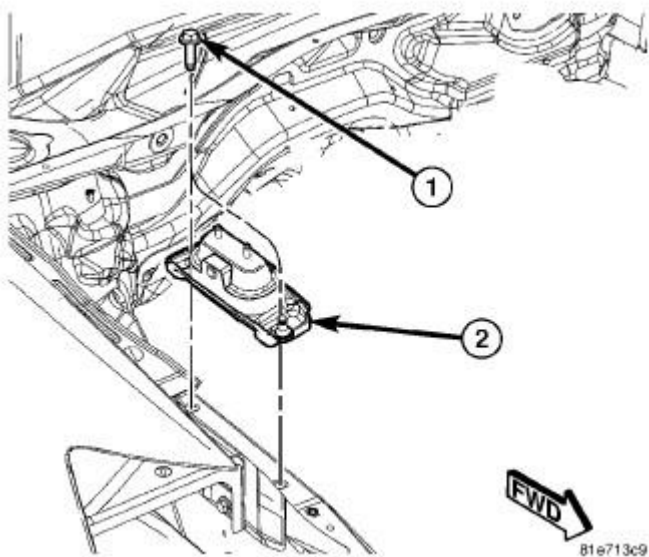


Fig. 265: Lower Engine Mount & Bolts
Courtesy of CHRYSLER LLC

1. Install the engine mount (2). Tighten the fasteners (1) to 54 N.m (40 ft. lbs.).

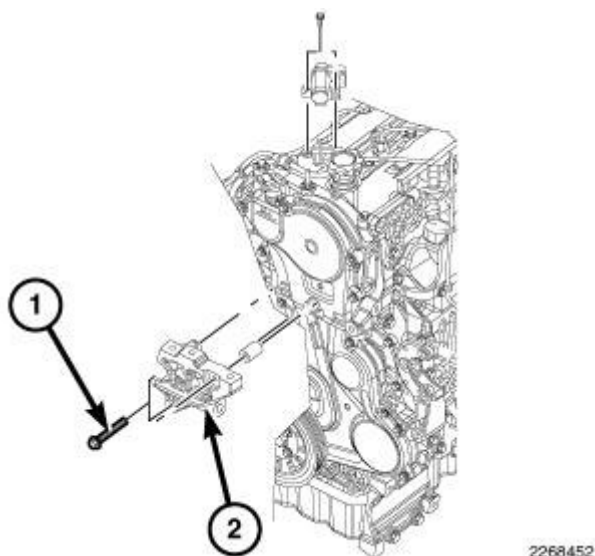


Fig. 266: Inner Engine Mount Bracket & Fasteners

Courtesy of CHRYSLER LLC

2. Install the inner engine mount bracket (2). Tighten fasteners (1) to 45 N.m (33 ft. lbs.).

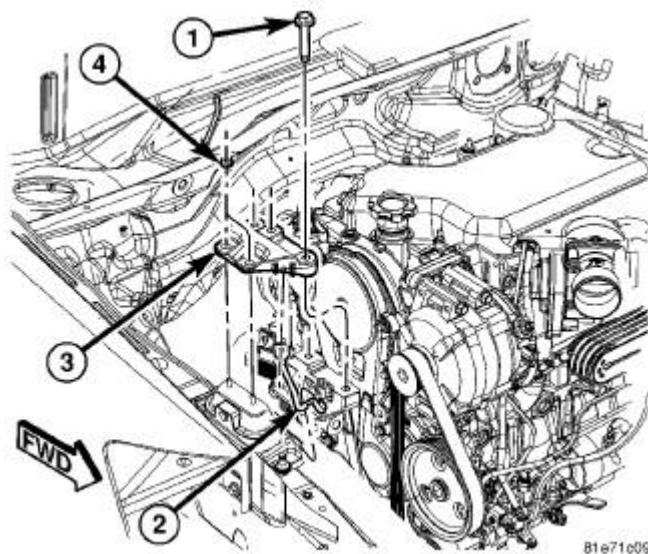


Fig. 267: Right Front Engine Mount Bracket & Fasteners

Courtesy of CHRYSLER LLC

3. Install the engine mount bracket (3).
 - Tighten the bolts (4) to 61 N.m (44 ft. lbs.).
 - Tighten the nuts (1) to 20 N.m (177 in. lbs.).
4. Install the ground strap (2).
5. Remove the support from under engine.

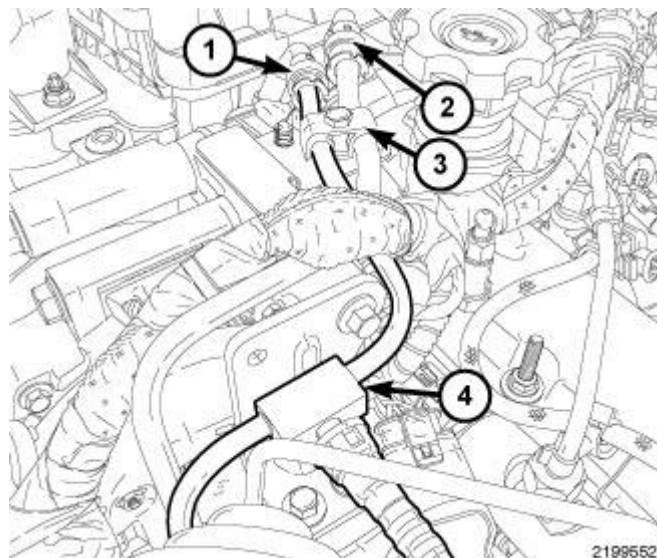


Fig. 268: Fuel Return Line, Fuel Feed Line, Fuel Line Mounting Bracket & Fuel Return Line Block
Courtesy of CHRYSLER LLC

6. Connect the fuel feed line (2).
7. Connect the fuel return line (1).

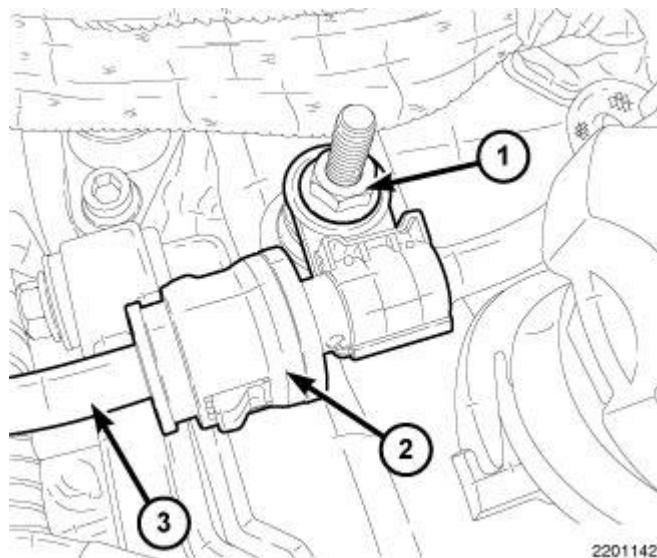


Fig. 269: Fuel Injector Return Line & Retaining Nut
Courtesy of CHRYSLER LLC

8. Connect the fuel injector return line (2) and install the retaining nut (1).

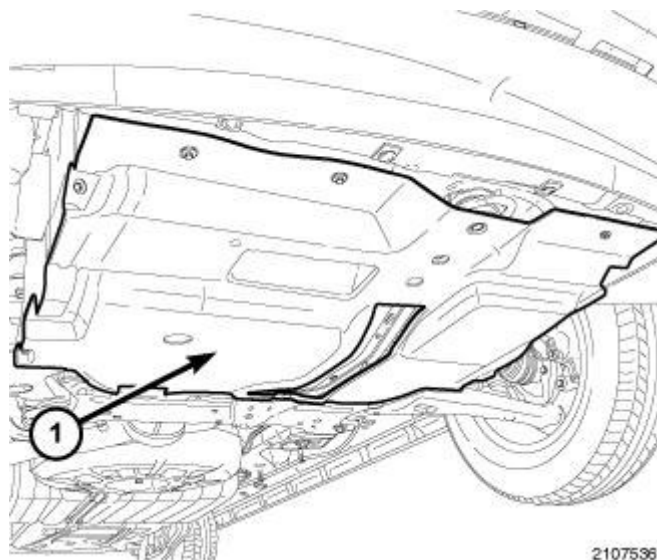


Fig. 270: Underbody Splash Shield
Courtesy of CHRYSLER LLC

9. Install the underbody splash shield (1).
10. Lower the vehicle.
11. Install the air cleaner body. Refer to **BODY, AIR CLEANER, INSTALLATION**.
12. Connect the negative battery cable.

INSULATOR, ENGINE MOUNT, LEFT

REMOVAL

REMOVAL - LEFT ENGINE MOUNT

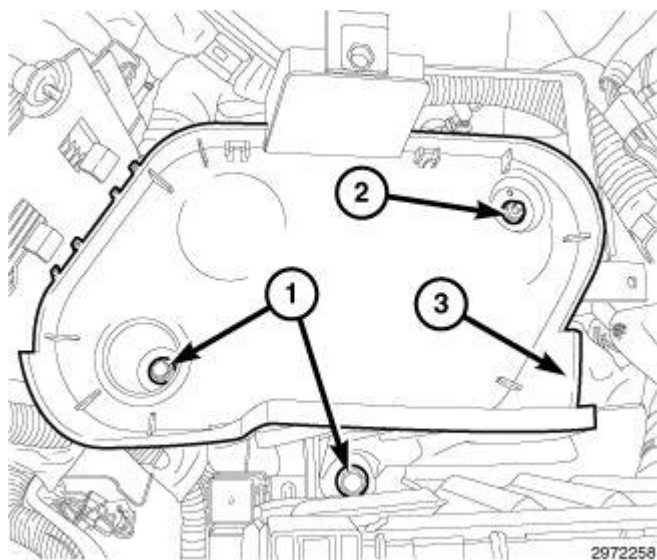


Fig. 271: Battery Tray Bolts & Nut
Courtesy of CHRYSLER LLC

1. Remove the battery. Refer to **BATTERY, REMOVAL** .
2. Detach the wire harness loom from battery tray.
3. Remove two bolts (1), one nut (2), and the battery tray.

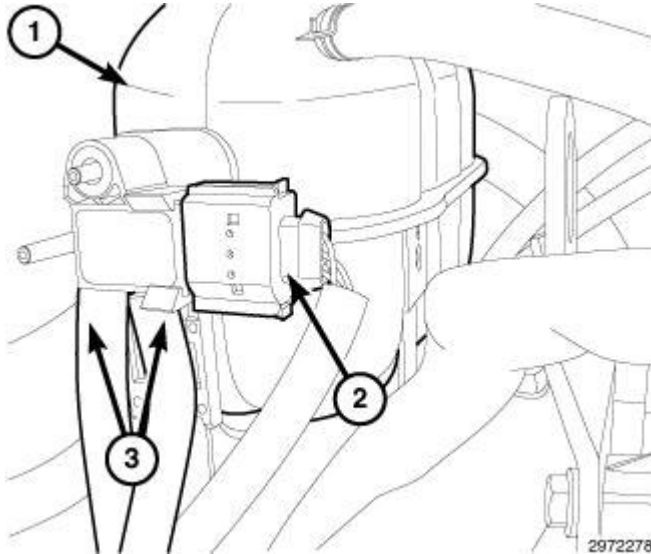


Fig. 272: Coolant Bottle, Differential Pressure Sensor Harness Connector & Sensor Hoses
Courtesy of CHRYSLER LLC

4. Remove the coolant bottle (1) from bracket and position aside.
5. Disconnect the Differential Pressure Sensor (DPS) harness connector (2).
6. Disconnect the two DPS sensor hoses (3).

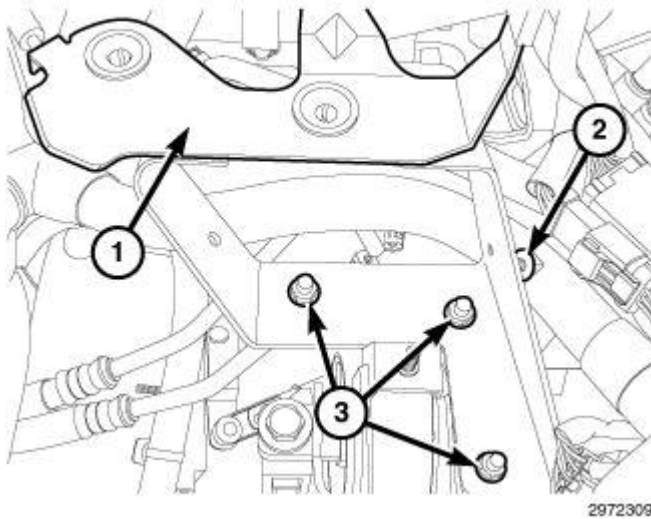


Fig. 273: Wire Harness Loom Clips, Coolant Bottle Bracket & Nuts
Courtesy of CHRYSLER LLC

7. Remove the wire harness loom clips (2) from coolant bottle bracket (1).

8. Remove the three nuts (3) and the coolant bottle bracket (1).

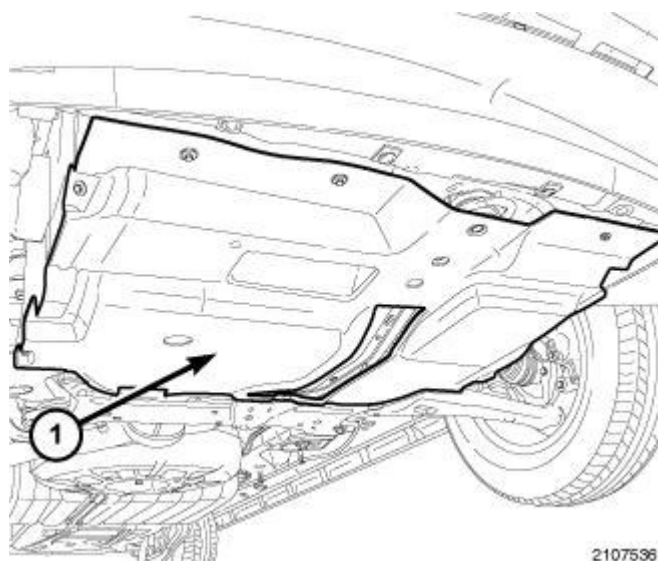


Fig. 274: Underbody Splash Shield
Courtesy of CHRYSLER LLC

9. Remove the underbody splash shield (1).
10. Remove the left side front wheel house splash shield.
11. Support the transmission and engine from below.

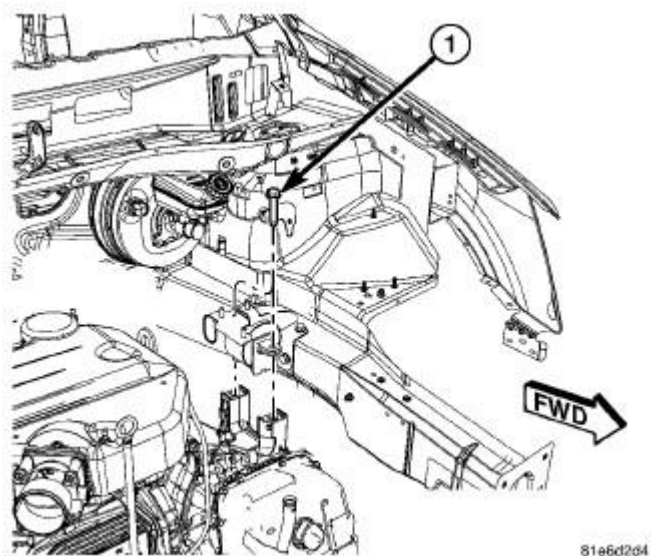


Fig. 275: Engine Mount-To-Transmission Bracket Bolts
Courtesy of CHRYSLER LLC

12. Remove the engine mount-to-trans bracket bolts (1).

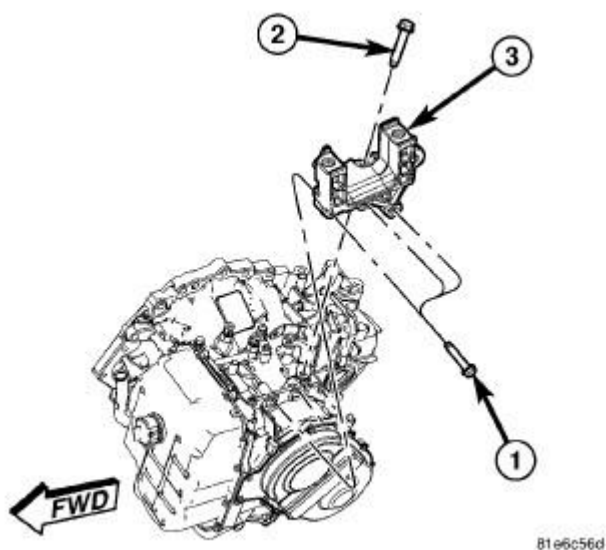


Fig. 276: Transmission Mount & Bolts
Courtesy of CHRYSLER LLC

13. Remove the upper transaxle bracket-to-case bolt (2).
14. Raise and support the vehicle.
15. Position transmission jack.
16. Remove the fore/aft crossmember. Refer to **CROSSMEMBER, FRONT FORE AND AFT, REMOVAL** and **CROSSMEMBER, FRONT SUSPENSION, REMOVAL**.
17. Lower transmission jack.
18. Remove the three bolts (1), and the transmission mount bracket (3).

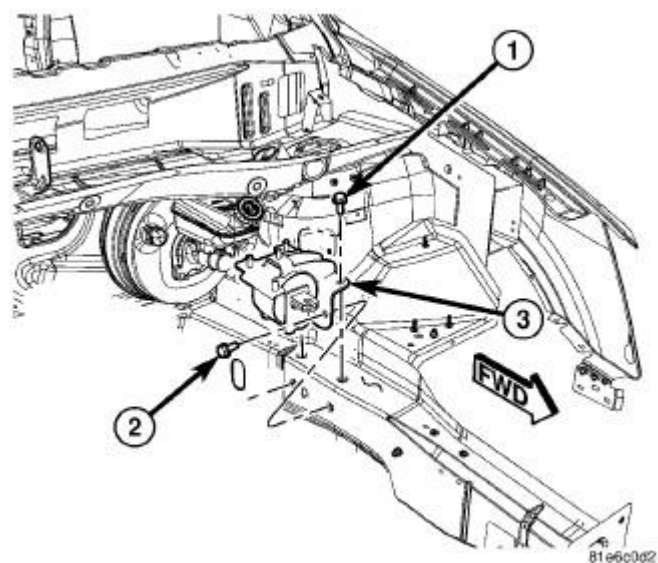


Fig. 277: Left Engine Mount & Bolts
Courtesy of CHRYSLER LLC

19. Reinstall the fore/aft crossmember loosely.
20. Lower the vehicle.
21. Remove the engine mount-to-rail bolts (1) and (2), and the left engine mount (3) from the rail.

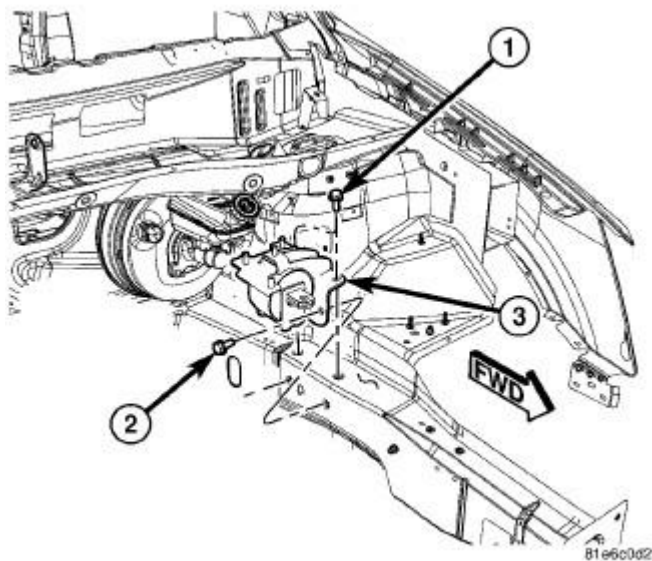
INSTALLATION**INSTALLATION - LEFT ENGINE MOUNT**

Fig. 278: Left Engine Mount & Bolts
Courtesy of CHRYSLER LLC

1. Install the left engine mount (3) onto the rail. Tighten the bolts (1) and (2) to 54 N.m (40 lbs. ft.).
2. Raise and support the vehicle.
3. Remove the fore/aft crossmember.

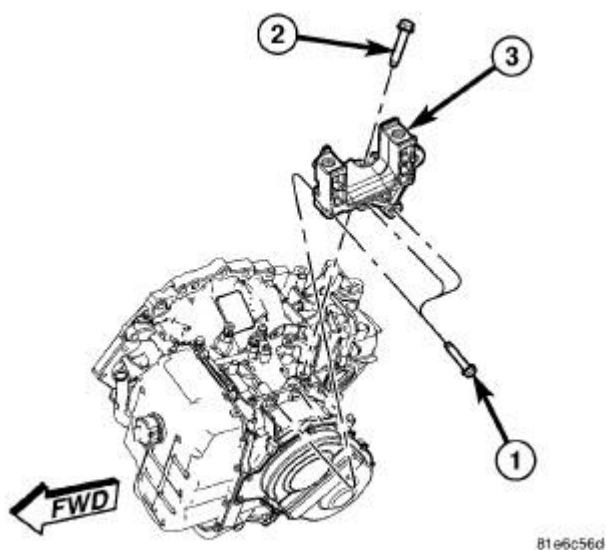


Fig. 279: Transmission Mount & Bolts
Courtesy of CHRYSLER LLC

4. Install the transmission mount bracket (3). Tighten the bolts (3) to 45 N.m (33 ft. lbs.).
5. Raise transmission jack.
6. Install the fore/aft crossmember. Refer to **CROSSMEMBER, FRONT FORE AND AFT, INSTALLATION** and **CROSSMEMBER, FRONT SUSPENSION, INSTALLATION**.
7. Remove transmission jack.
8. Lower the vehicle.
9. Install the upper transaxle bracket-to-case bolt (2). Tighten bolt (2) to 40 N.m (30 ft. lbs.).

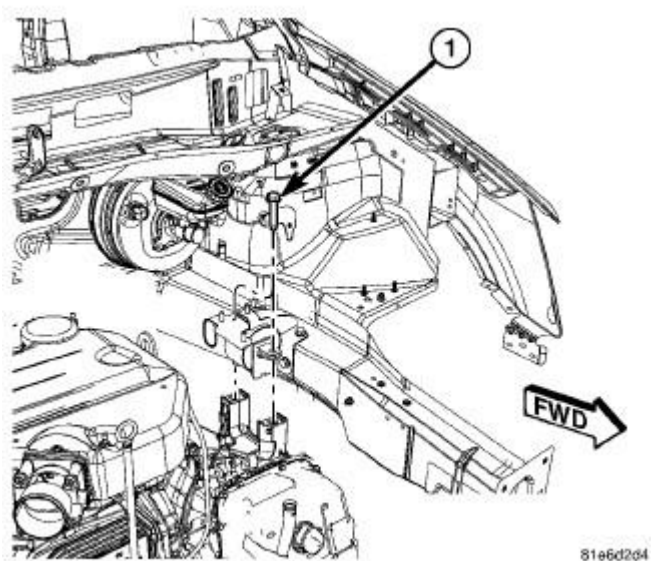


Fig. 280: Engine Mount-To-Transmission Bracket Bolts
Courtesy of CHRYSLER LLC

10. Align the transmission mount with the left transmission mount bracket, and install the trans mount-to-trans bracket bolts (1). Tighten bolts to 95 N.m (70 ft. lbs.).

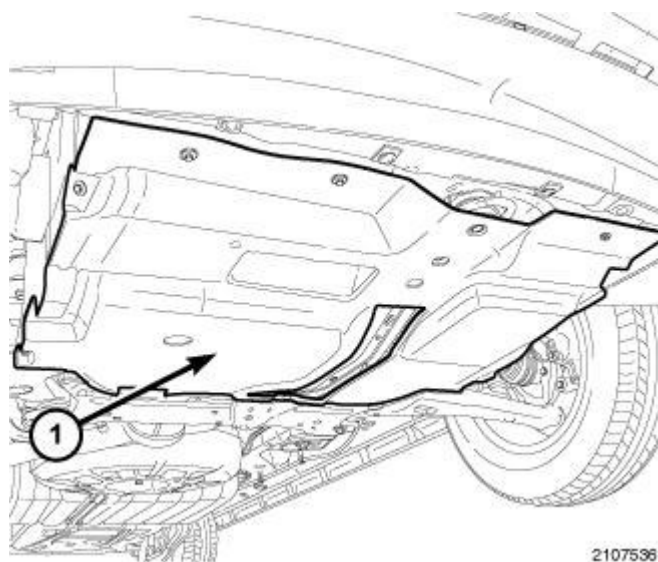


Fig. 281: Underbody Splash Shield
Courtesy of CHRYSLER LLC

11. Remove transmission jack.
12. Install the left side front wheel house splash shield.
13. Remove the underbody splash shield (1).

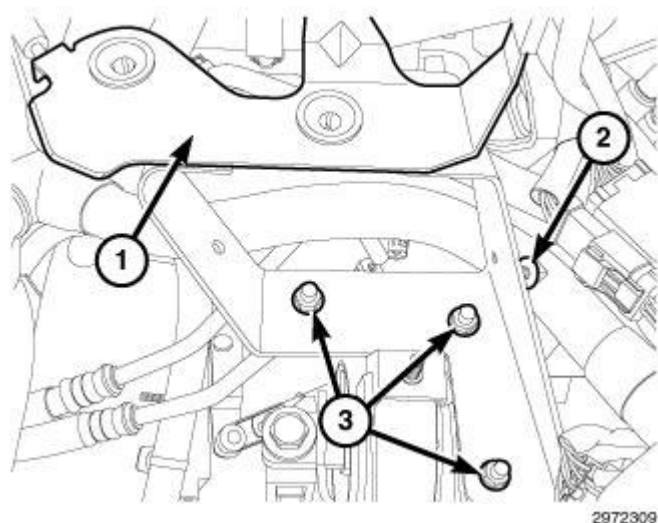


Fig. 282: Wire Harness Loom Clips, Coolant Bottle Bracket & Nuts
Courtesy of CHRYSLER LLC

14. Install the coolant bottle bracket (1). Tighten nuts (3) to 12 N.m (106 in. lbs.).
15. Install the wire harness loom clips (2) to the coolant bottle bracket (1).

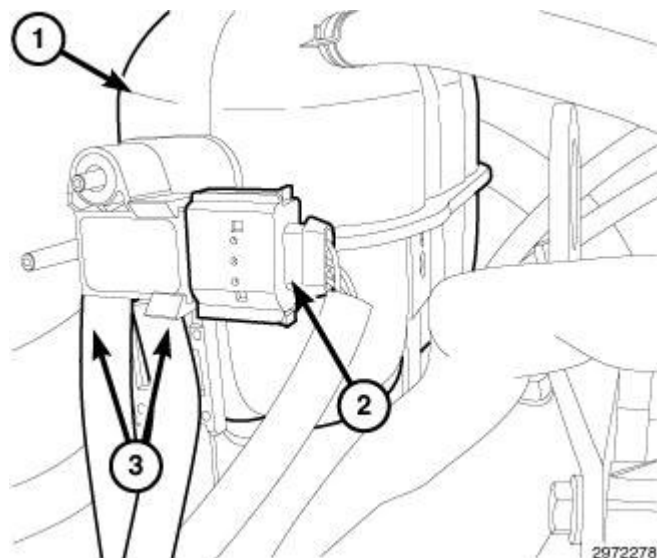


Fig. 283: Coolant Bottle, Differential Pressure Sensor Harness Connector & Sensor Hoses
Courtesy of CHRYSLER LLC

16. Connect the two DPS sensor hoses (3).
17. Connect the DPS sensor harness connector (2).
18. Install the coolant bottle (1) onto the bracket.

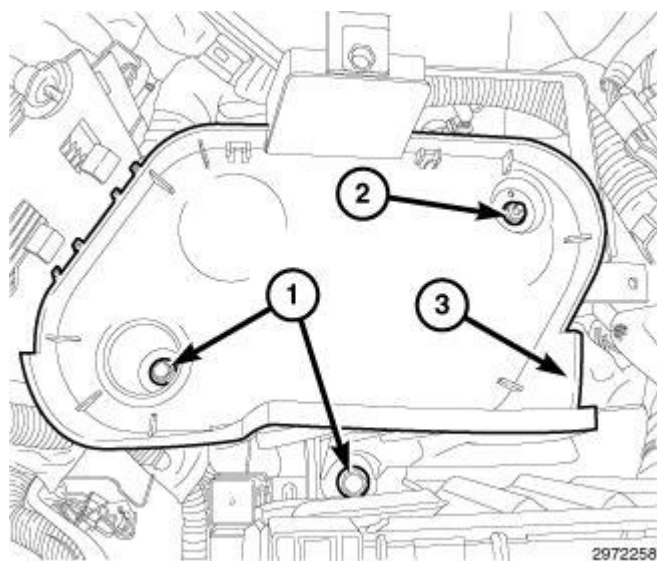
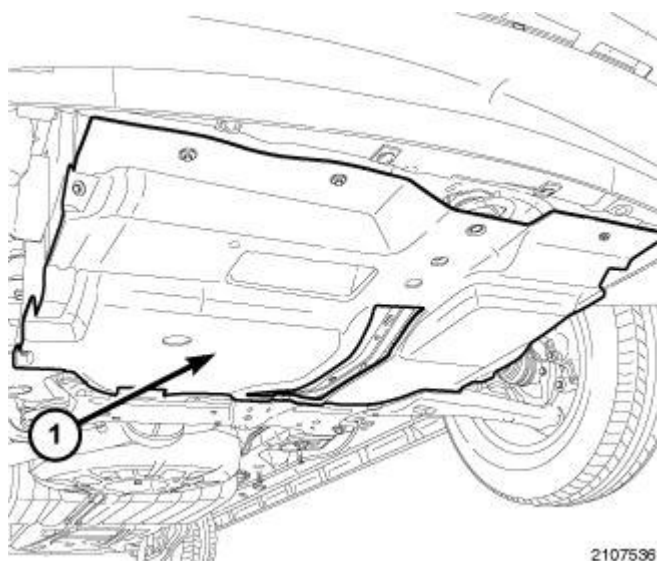



Fig. 284: Battery Tray Bolts & Nut
Courtesy of CHRYSLER LLC

19. Install the battery tray.
 - Tighten nut (2) to 12 N.m (106 in. lbs.).
 - Tighten the two bolts (1) to 12 N.m (106 in. lbs.).
20. Attach the wire harness loom from battery tray.
21. Install the battery. Refer to **BATTERY, INSTALLATION**.

INSULATOR, ENGINE MOUNT, REAR**REMOVAL****REMOVAL - REAR MOUNT****Fig. 285: Underbody Splash Shield**

Courtesy of CHRYSLER LLC

1. Raise and support the vehicle.
2. Remove the underbody splash shield (1).
3. Remove the fore/aft crossmember. Refer to **CROSSMEMBER, FRONT FORE AND AFT, REMOVAL** and **CROSSMEMBER, FRONT SUSPENSION, REMOVAL**.

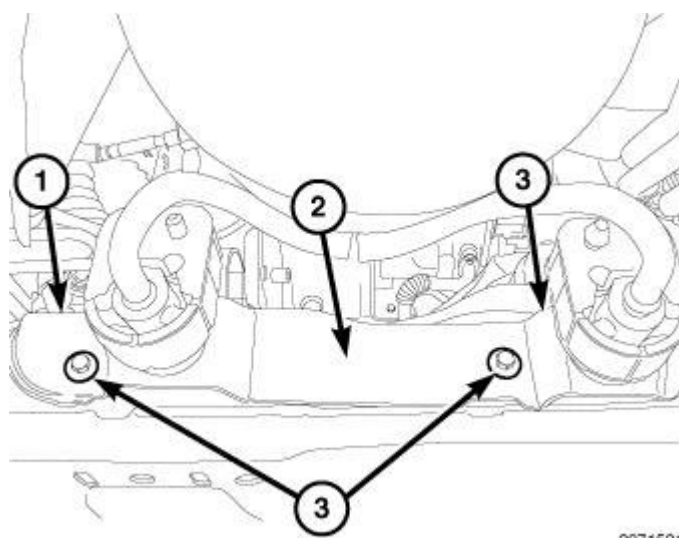**Fig. 286: Exhaust Hanger & Bolts**

Courtesy of CHRYSLER LLC

4. Remove bolts (1 and 3) and the exhaust hanger (2).

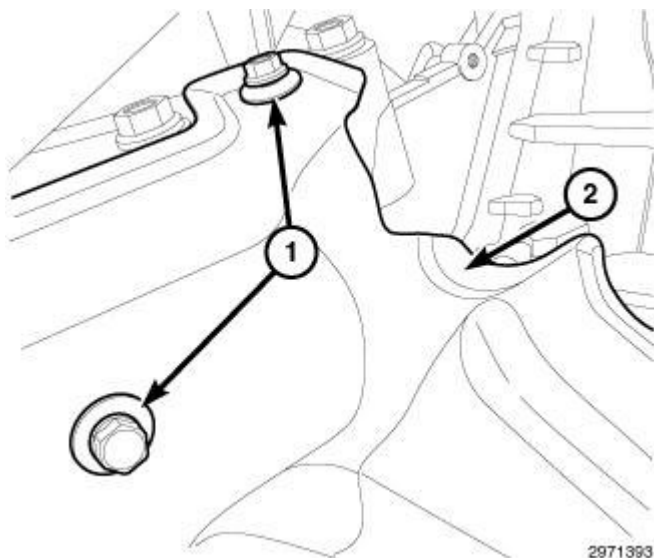


Fig. 287: Rear Mount Heat Shield & Bolt
Courtesy of CHRYSLER LLC

5. Remove bolts (1) and the rear mount heat shield (2).

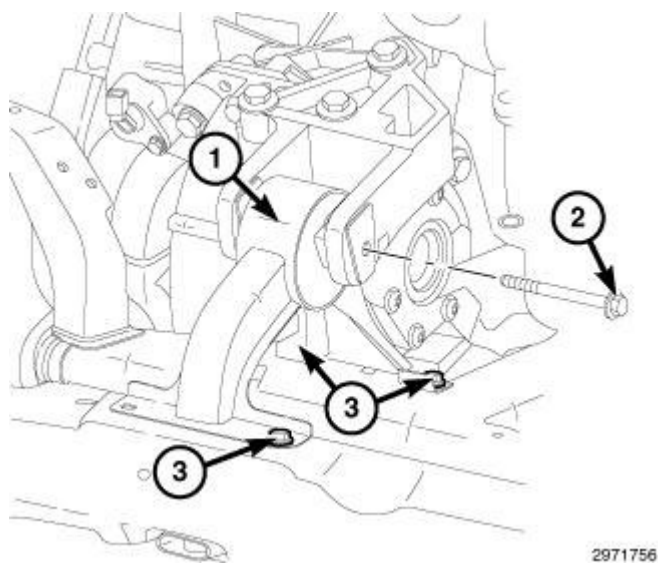


Fig. 288: Rear Engine Mount, Rear Mount Through Bolt & Bolts
Courtesy of CHRYSLER LLC

6. Remove the rear mount through bolt (2).
7. Remove bolts (3) and the rear engine mount (1).

INSTALLATION

INSTALLATION - REAR MOUNT

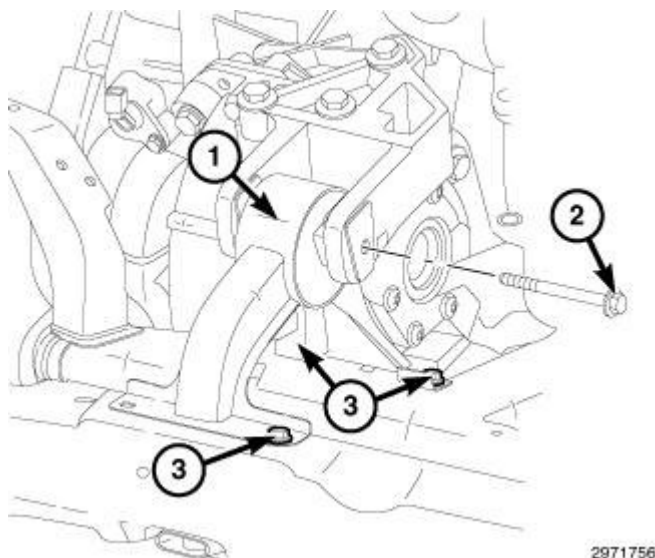


Fig. 289: Rear Engine Mount, Rear Mount Through Bolt & Bolts
Courtesy of CHRYSLER LLC

NOTE: The left rear mount bolt will not be installed until the exhaust hanger is installed.

1. Install the rear engine mount. Tighten bolts to 54 N.m (40 ft. lbs.).
2. Install the rear mount through bolt and tighten to 61 N.m (45 ft. lbs.).

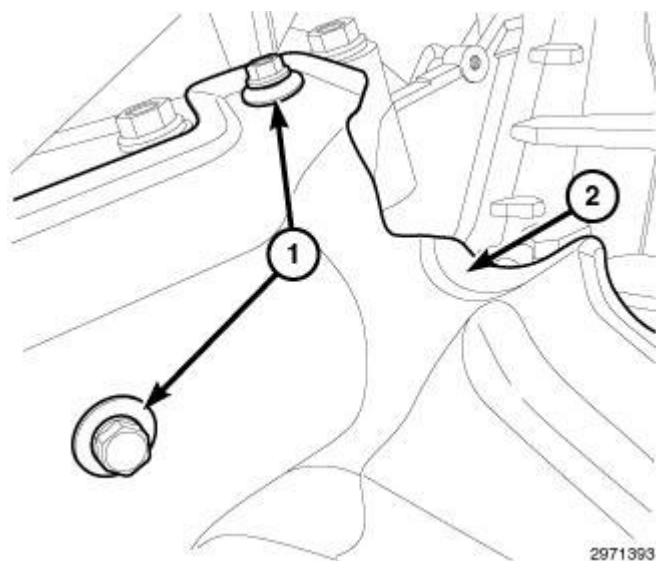


Fig. 290: Rear Mount Heat Shield & Bolt
Courtesy of CHRYSLER LLC

3. Install the rear mount heat shield (2). Tighten bolts (1) to 14 N.m (124 in. lbs.).

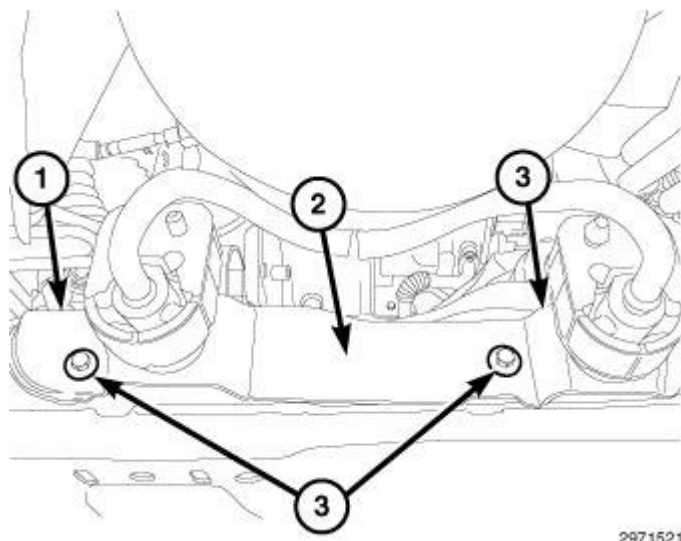


Fig. 291: Exhaust Hanger & Bolts
Courtesy of CHRYSLER LLC

4. Install the exhaust hanger (2).
 - Tighten bolt (1) to 54 N.m (40 ft. lbs.).
 - Tighten bolts (3) to 14 N.m (124 in. lbs.).

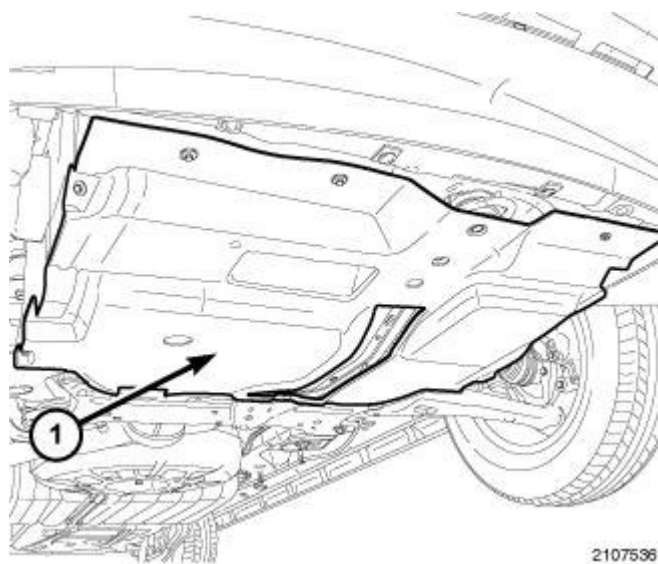


Fig. 292: Underbody Splash Shield
Courtesy of CHRYSLER LLC

5. Install the fore/aft crossmember. Refer to **CROSSMEMBER, FRONT FORE AND AFT, INSTALLATION** and **CROSSMEMBER, FRONT SUSPENSION, INSTALLATION**.
6. Install the underbody splash shield (1).
7. Lower the vehicle.

INSULATOR, ENGINE MOUNT, FRONT MOUNT

REMOVAL

REMOVAL - FRONT ENGINE MOUNT

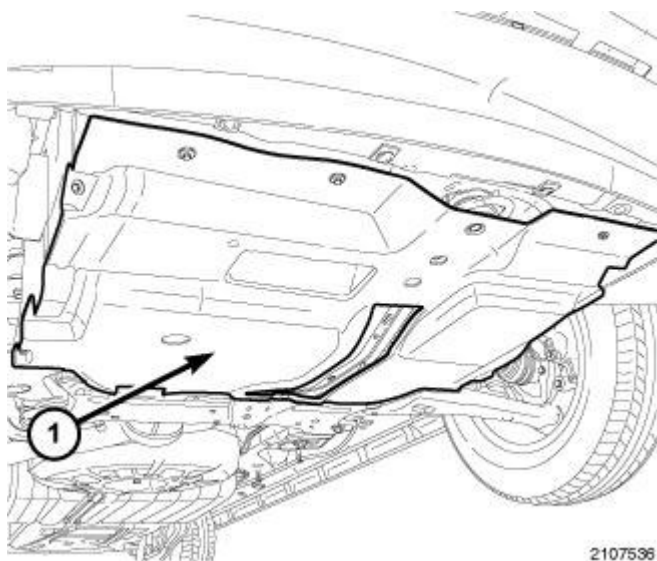


Fig. 293: Underbody Splash Shield
Courtesy of CHRYSLER LLC

1. Raise the vehicle.
2. Remove the underbody splash shield (1).


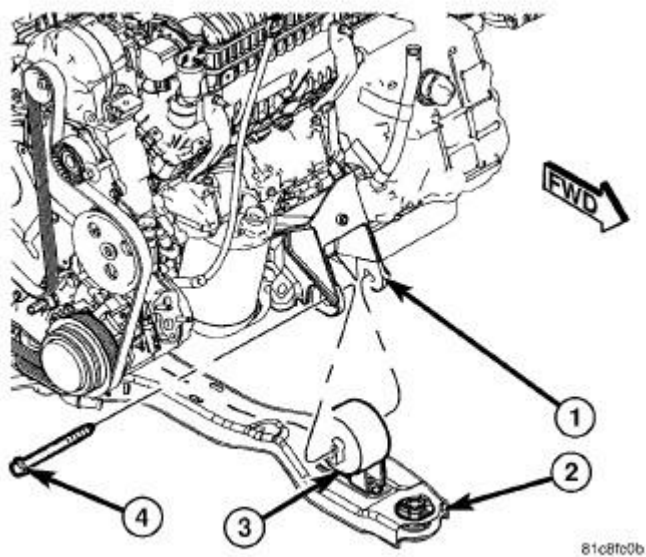


Fig. 294: Front Engine Mount & Thru-Bolt
Courtesy of CHRYSLER LLC


3. Remove front engine mount thru-bolt (4).

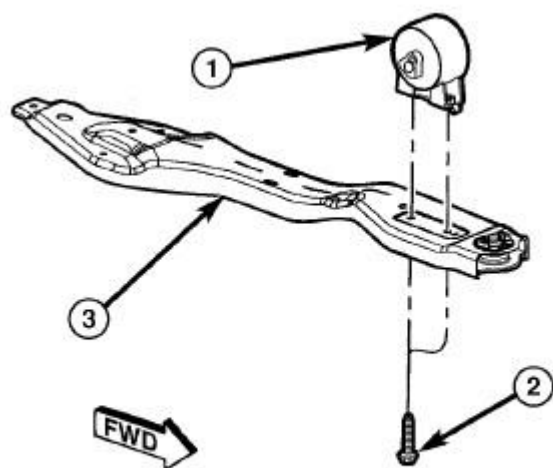

81c90320

Fig. 295: Front Engine Mount & Bolts
Courtesy of CHRYSLER LLC

4. Remove bolts (2) and the front engine mount (1).

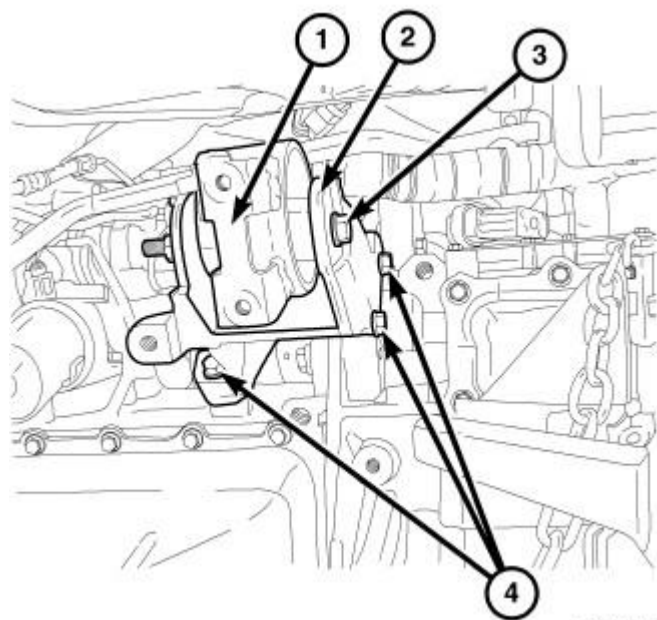

81c2bbde

Fig. 296: Front Transmission Mount, Bracket & Bolts
Courtesy of CHRYSLER LLC

5. Remove the bolts (4) and the front mount bracket (2).

INSTALLATION

INSTALLATION - FRONT ENGINE MOUNT

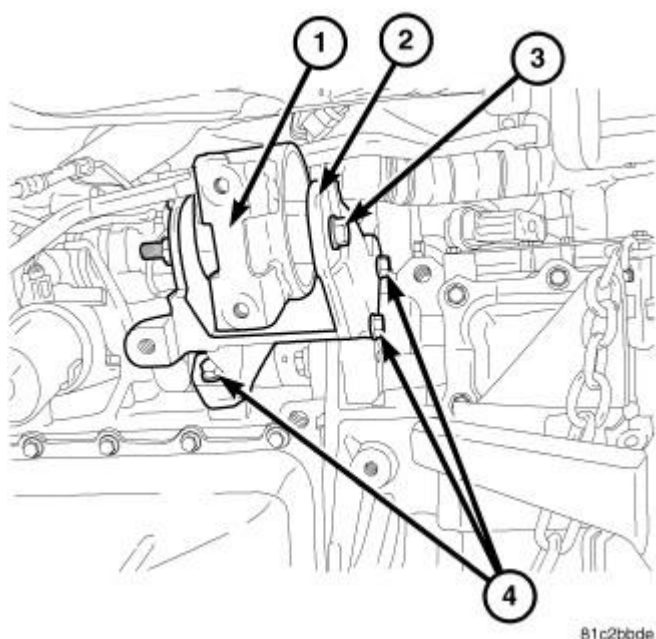


Fig. 297: Front Transmission Mount, Bracket & Bolts
Courtesy of CHRYSLER LLC

Install the front mount bracket (2). Tighten bolts (4) to 54 N.m (40 ft. lbs.).

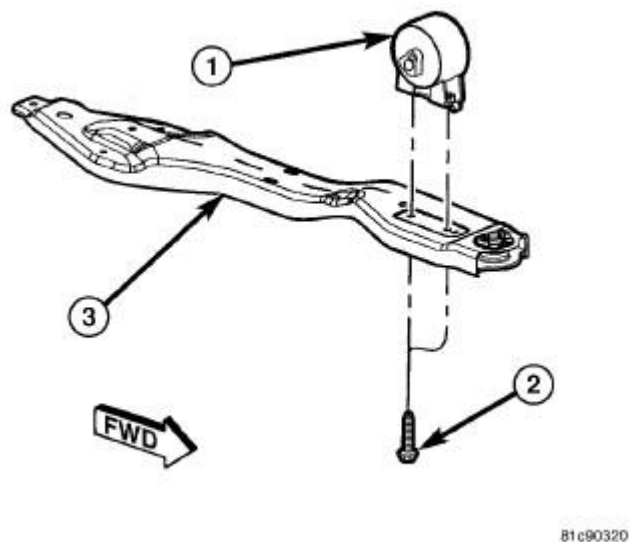


Fig. 298: Front Engine Mount & Bolts
Courtesy of CHRYSLER LLC

1. Install front engine mount (1). Tighten bolts (2) to 54 N.m (40 ft. lbs.).

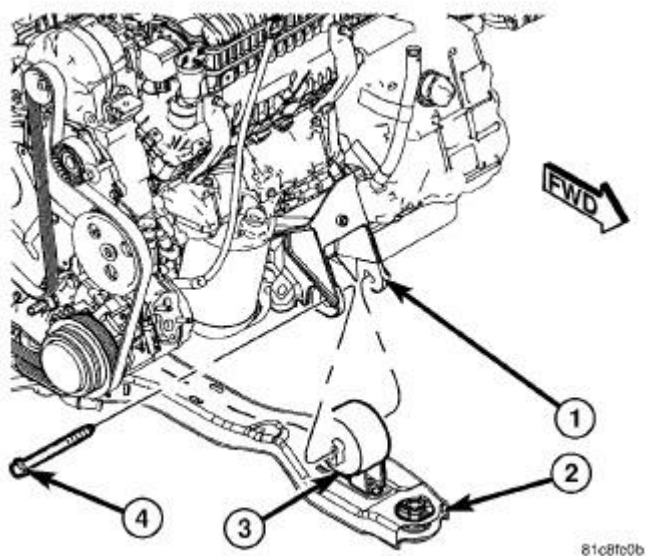


Fig. 299: Front Engine Mount & Thru-Bolt
Courtesy of CHRYSLER LLC

2. Install front engine mount thru-bolt (4). Tighten bolt to 61 N.m (45 ft. lbs.).

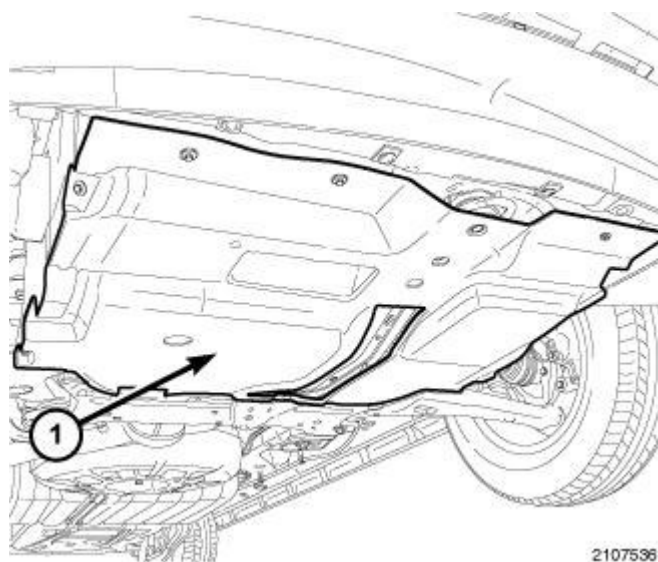


Fig. 300: Underbody Splash Shield
Courtesy of CHRYSLER LLC

3. Install the underbody splash shield (1).
4. Lower the vehicle.

BRACKET, ENGINE MOUNT, REAR MOUNT

REMOVAL

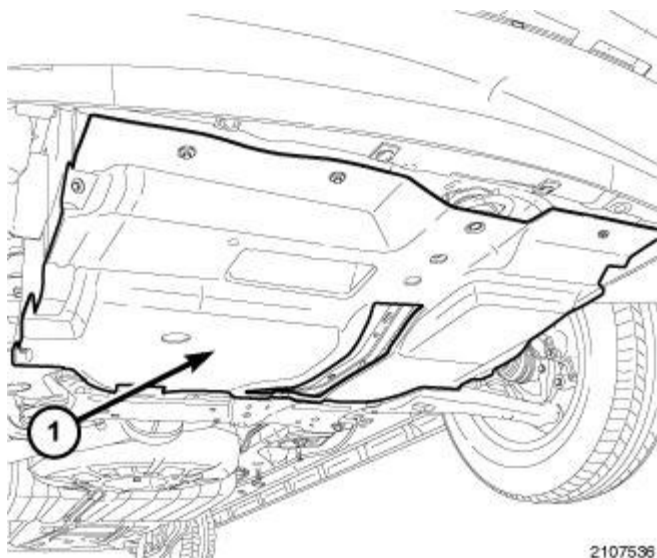
REMOVAL - REAR MOUNT BRACKET

Fig. 301: Underbody Splash Shield
Courtesy of CHRYSLER LLC

1. Raise and support the vehicle.
2. Remove the underbody splash shield (1).

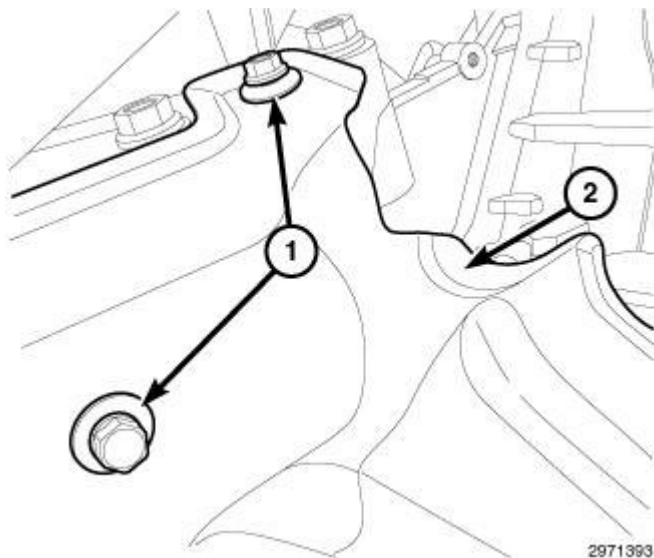


Fig. 302: Rear Mount Heat Shield & Bolt
Courtesy of CHRYSLER LLC

3. Remove bolts (1) and the rear mount heat shield (2).

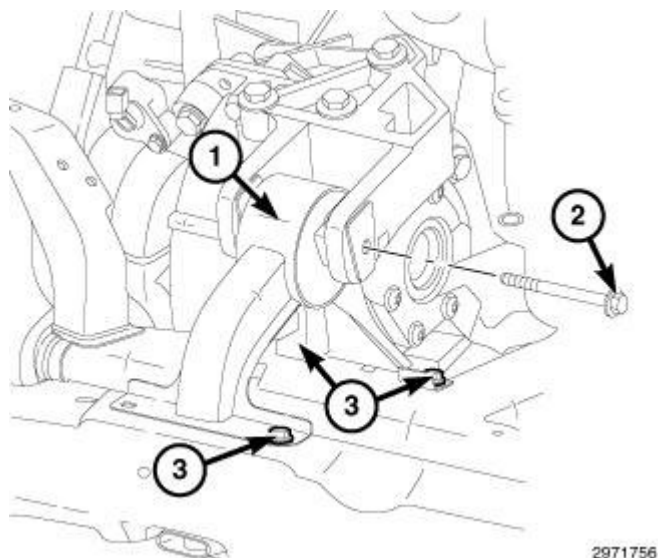


Fig. 303: Rear Engine Mount, Rear Mount Through Bolt & Bolts
Courtesy of CHRYSLER LLC

4. Remove the rear mount through bolt (2).

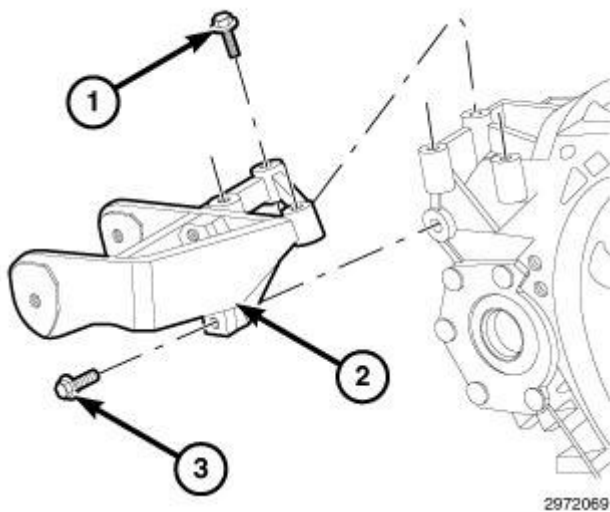


Fig. 304: Rear Mount Bracket & Bolts
Courtesy of CHRYSLER LLC

5. Remove the three upper rear mount bolts (1).
6. Remove lower bolt (3) and the rear mount bracket (2).

INSTALLATION

INSTALLATION - REAR MOUNT BRACKET

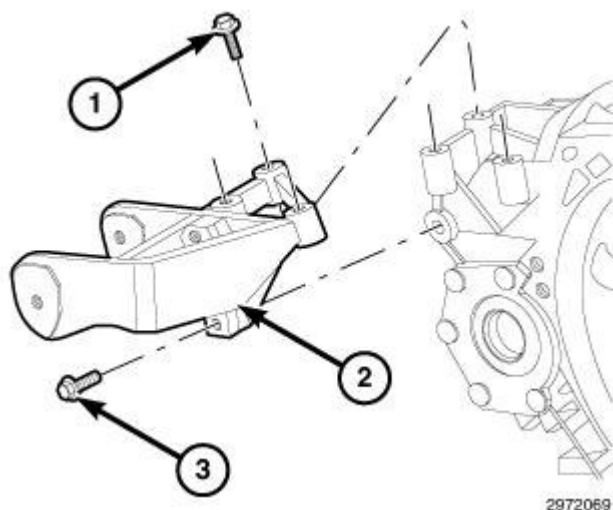


Fig. 305: Rear Mount Bracket & Bolts
Courtesy of CHRYSLER LLC

1. Install the rear mount bracket and tighten lower bolt (3) finger tight.
2. Install the three upper rear mount bolts (1) to 110 N.m (81 ft. lbs.).
3. Tighten the lower bolt (3) to 110 N.m (81 ft. lbs.).

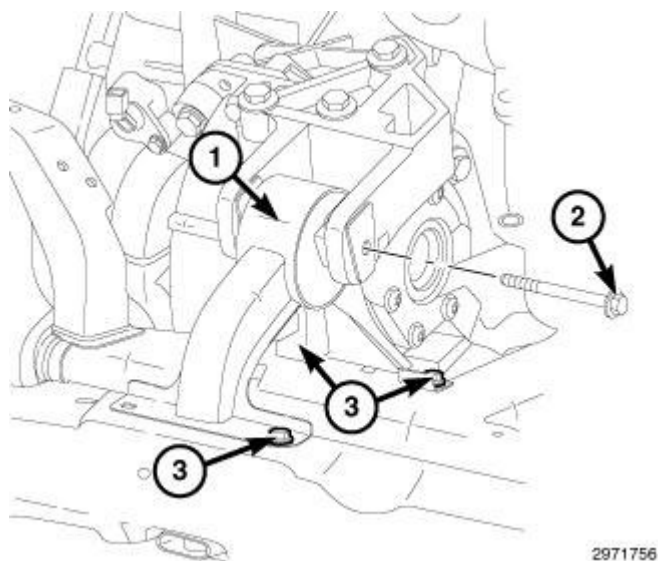


Fig. 306: Rear Engine Mount, Rear Mount Through Bolt & Bolts
Courtesy of CHRYSLER LLC

4. Install the rear mount through bolt and tighten to 61 N.m (45 ft. lbs.).

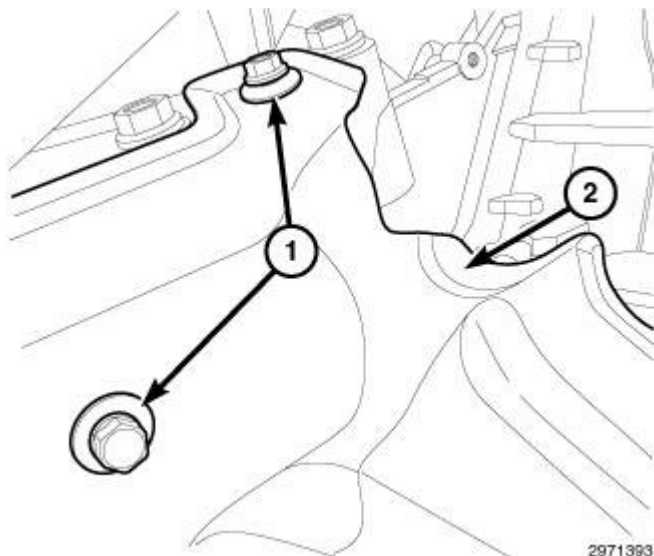


Fig. 307: Rear Mount Heat Shield & Bolt
Courtesy of CHRYSLER LLC

5. Install the rear mount heat shield (2). Tighten bolts (1) to 14 N.m (124 in. lbs.).

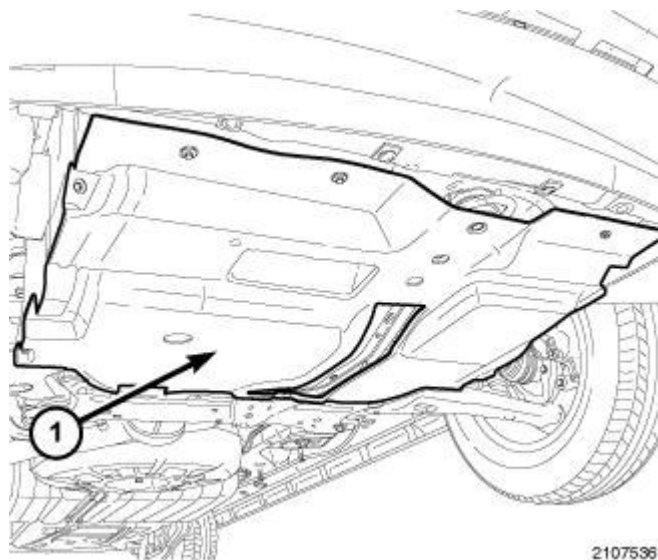


Fig. 308: Underbody Splash Shield
Courtesy of CHRYSLER LLC


6. Install the underbody splash shield (1).
7. Lower the vehicle.

LUBRICATION

FILTER, ENGINE OIL

REMOVAL


REMOVAL - OIL FILTER

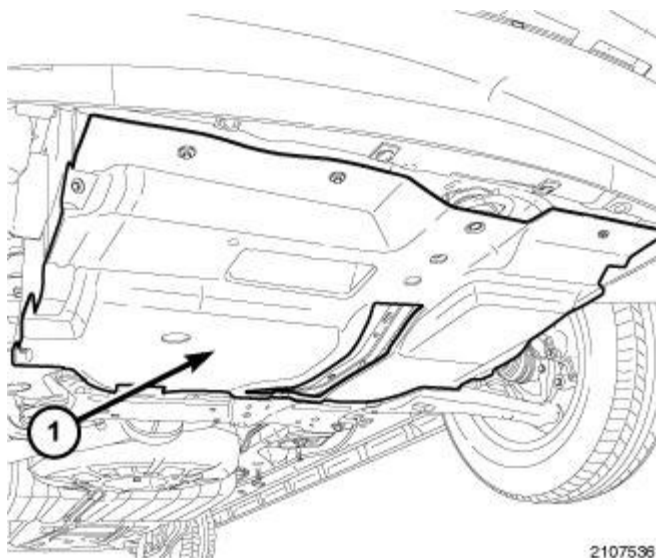

2107536

Fig. 309: Underbody Splash Shield
Courtesy of CHRYSLER LLC


1. Disconnect the negative battery cable.
2. Raise and support the vehicle.
3. Remove the underbody splash shield (1).
4. Drain the engine oil.
5. Using a new copper sealing washer, tighten oil drain plug to 54 N.m (40 ft. lbs.).

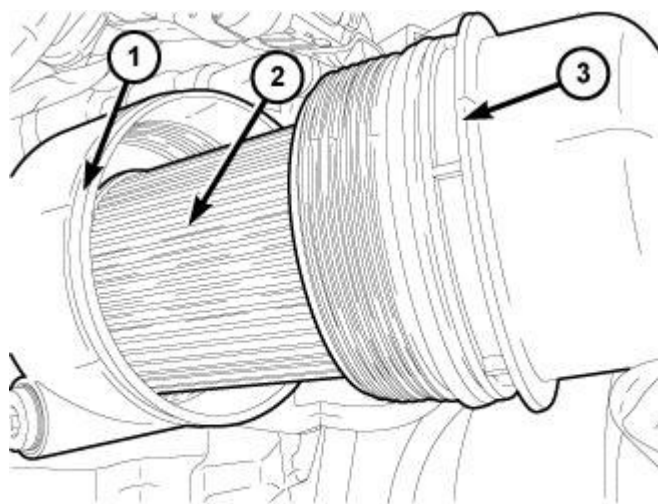

2243978

Fig. 310: Oil Filter Seal, Oil Filter & Housing Adapter Cap
Courtesy of CHRYSLER LLC


6. Remove oil filter housing adapter cap (3) and the oil filter (2).

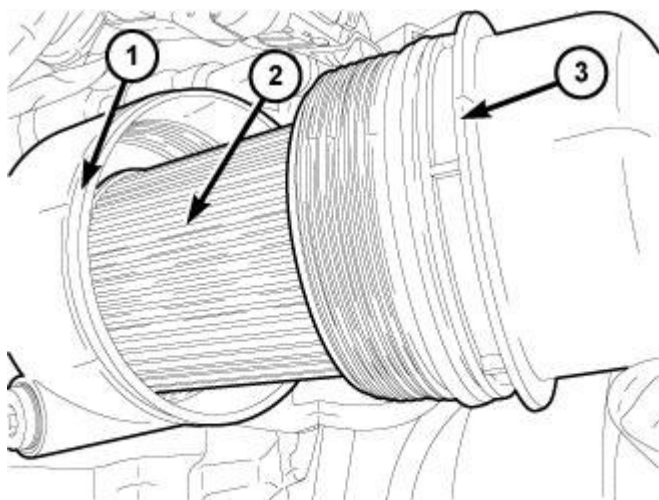INSTALLATION**INSTALLATION - OIL FILTER**

2243978

Fig. 311: Oil Filter Seal, Oil Filter & Housing Adapter Cap
Courtesy of CHRYSLER LLC

1. Install the oil filter (2) and oil filter housing adapter cap (3). Tighten cap to 25 N.m (18 ft. lbs.).

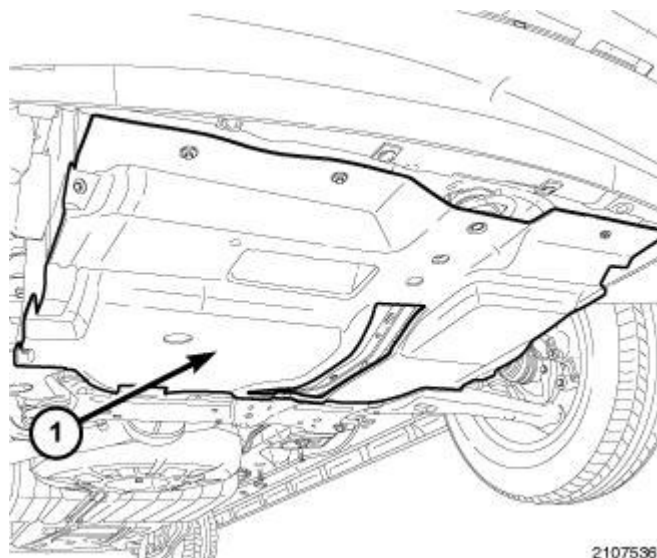

2107536

Fig. 312: Underbody Splash Shield
Courtesy of CHRYSLER LLC


2. Install the under body splash shield.
3. Lower the vehicle.
4. Fill the engine with recommended engine oil. Refer to **CAPACITIES AND RECOMMENDED FLUIDS, SPECIFICATIONS** .

5. Connect the negative battery cable.

HOUSING, OIL FILTER

DESCRIPTION

DESCRIPTION

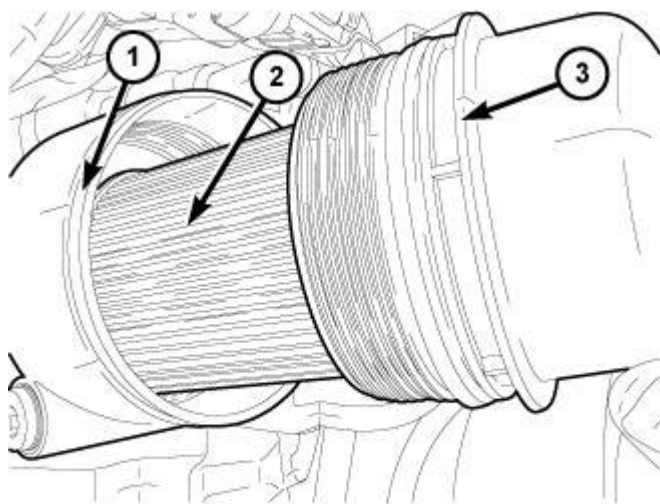


2243978

Fig. 313: Oil Filter Seal, Oil Filter & Housing Adapter Cap
Courtesy of CHRYSLER LLC

An oil filter adapter is used on this vehicle to relocate the oil filter for easier access when servicing.

REMOVAL

REMOVAL - OIL FILTER HOUSING

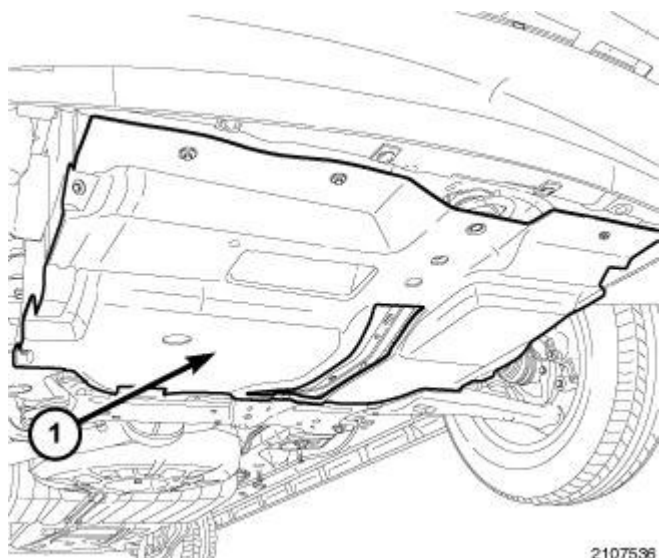

2107536

Fig. 314: Underbody Splash Shield
Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Raise and support the vehicle.
3. Remove the underbody splash shield (1).
4. Drain the cooling system. Refer to **STANDARD PROCEDURE** .
5. Drain the engine oil.
6. Using a new copper sealing washer, tighten oil drain plug to 54 N.m (40 ft. lbs.).
7. Remove the right front inner splash shield.
8. Remove the Diesel Particulate Filter (DPF). Refer to **FILTER, DIESEL PARTICULATE, REMOVAL** .

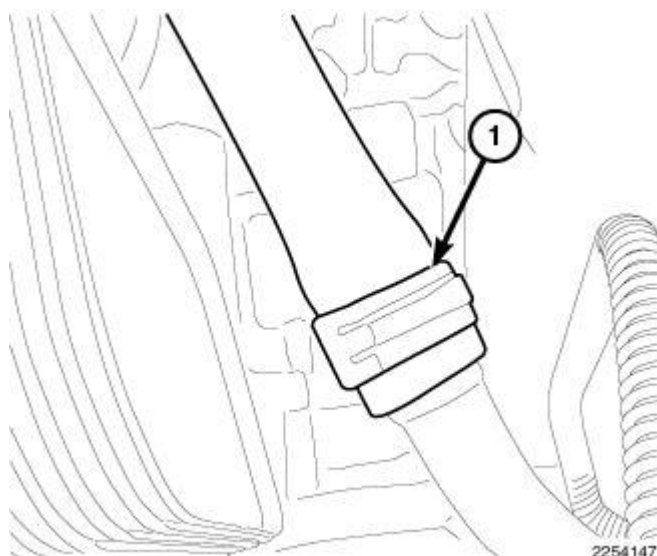


Fig. 315: Engine Oil Coolant Hose
Courtesy of CHRYSLER LLC

9. Disconnect the engine oil coolant hose (1).

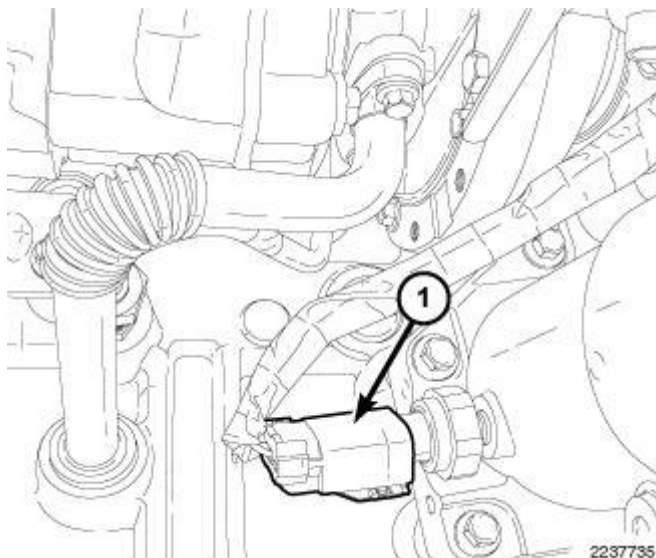


Fig. 316: Oil Pressure Switch Harness Connector
Courtesy of CHRYSLER LLC

10. Disconnect the oil pressure switch harness connector (1).

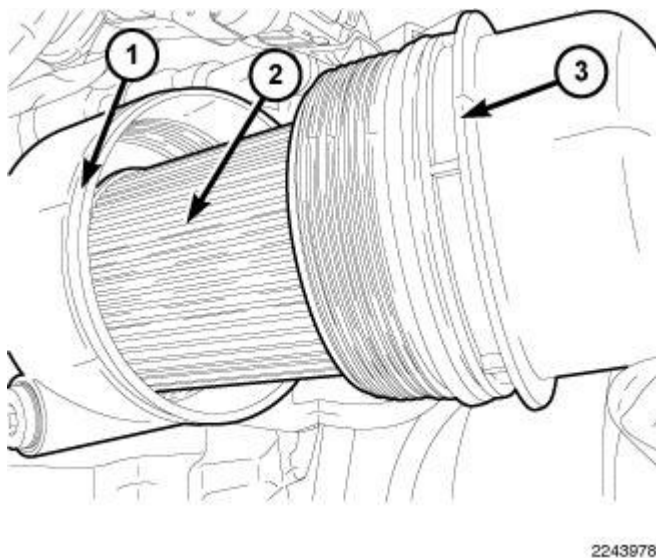


Fig. 317: Oil Filter Seal, Oil Filter & Housing Adapter Cap
Courtesy of CHRYSLER LLC

11. Remove oil filter housing adapter cap (3) and the oil filter (2).

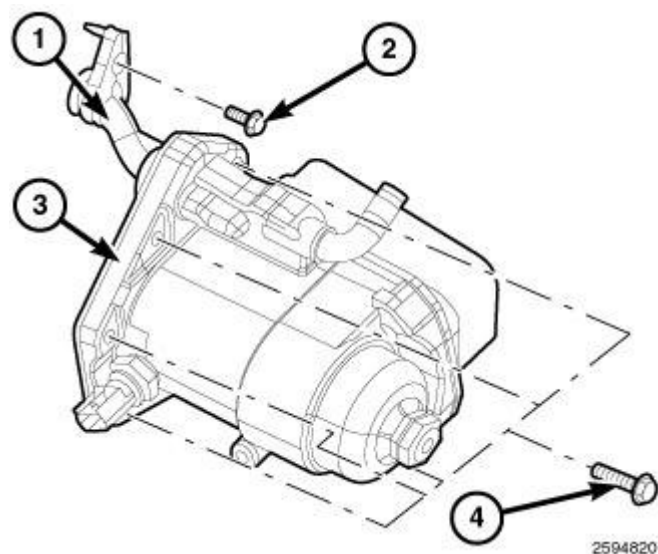


Fig. 318: Oil Filter Tube, Engine Oil Filter Housing & Bolts
Courtesy of CHRYSLER LLC

12. Remove bolts (2 and 4) along with the oil filter housing (3) and oil filter tube (1) from engine block.

INSTALLATION

INSTALLATION - OIL FILTER HOUSING

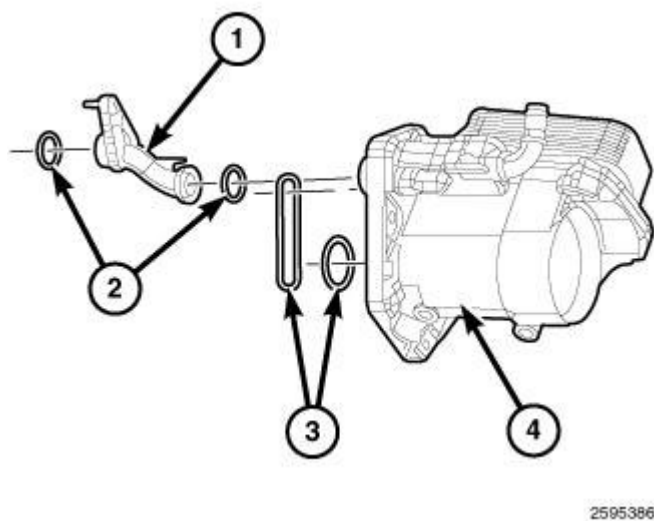


Fig. 319: Oil Filter Tube & Housing With O-Ring Gaskets
Courtesy of CHRYSLER LLC

1. Install new O-ring gaskets (2) onto the oil filter tube (1).
2. Install new O-ring gaskets (3) onto the oil filter housing (4).

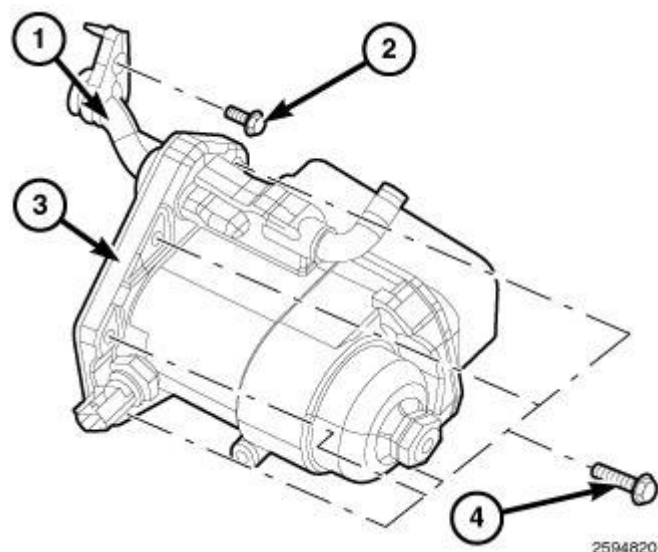


Fig. 320: Oil Filter Tube, Engine Oil Filter Housing & Bolts
Courtesy of CHRYSLER LLC

3. Install the oil filter tube (1) to the engine block. Tighten bolt (2) to 11 N.m (97 in. lbs.).
4. Install the oil filter housing (3). Tighten bolts (4) to 32 N.m (24 ft. lbs.).

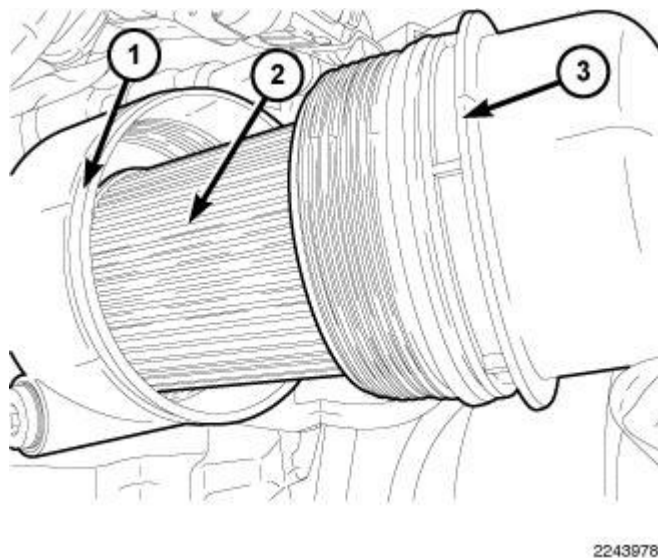


Fig. 321: Oil Filter Seal, Oil Filter & Housing Adapter Cap
Courtesy of CHRYSLER LLC

5. Install the oil filter (2).
6. Install the oil filter housing adapter cap (3). Tighten to 25 N.m (18 ft. lbs.).

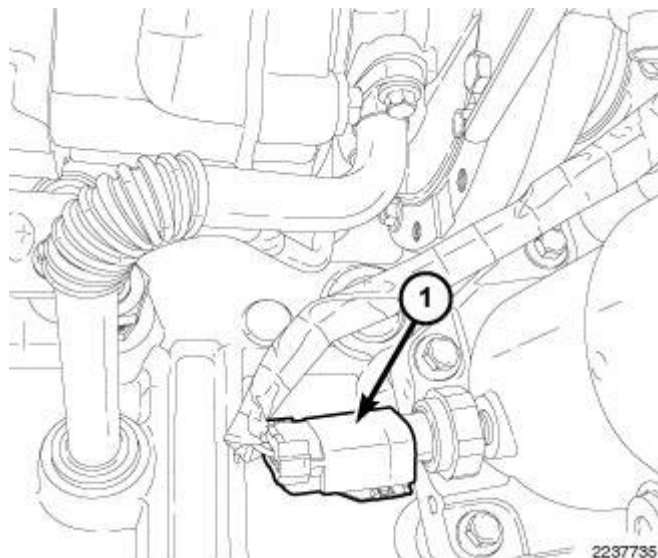


Fig. 322: Oil Pressure Switch Harness Connector
Courtesy of CHRYSLER LLC

7. Connect the oil pressure switch harness connector (1).


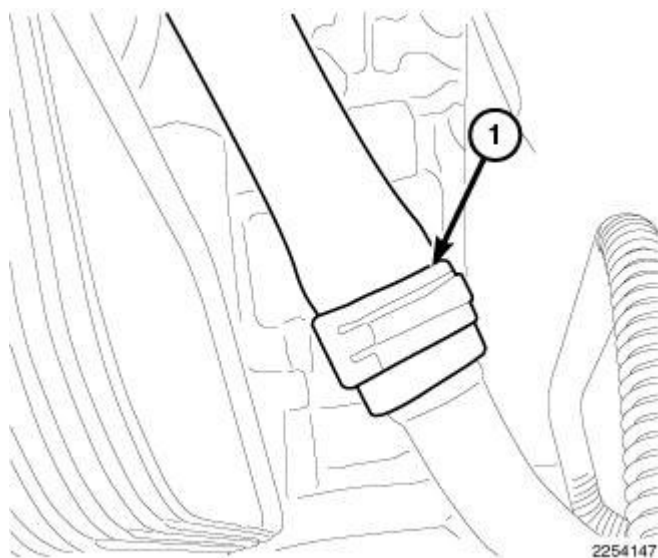


Fig. 323: Engine Oil Coolant Hose
Courtesy of CHRYSLER LLC

8. Connect the engine oil coolant hose (1).
9. Install the Diesel Particulate Filter (DPF). Refer to **FILTER, DIESEL PARTICULATE, INSTALLATION**.
10. Install the right front inner splash shield.
11. Fill the engine with recommended oil. Refer to **CAPACITIES AND RECOMMENDED FLUIDS, SPECIFICATIONS**.
12. Fill the cooling system. Refer to **STANDARD PROCEDURE**.

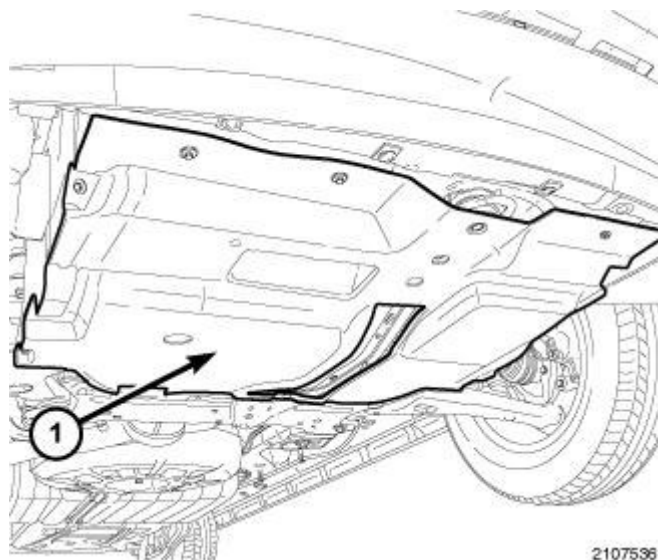

2107536


Fig. 324: Underbody Splash Shield
Courtesy of CHRYSLER LLC

13. Connect the negative battery cable.
14. Start the engine and check for leaks.
15. Install the underbody splash shield (1) and securely tighten fasteners.

COOLER, OIL

DESCRIPTION

DESCRIPTION

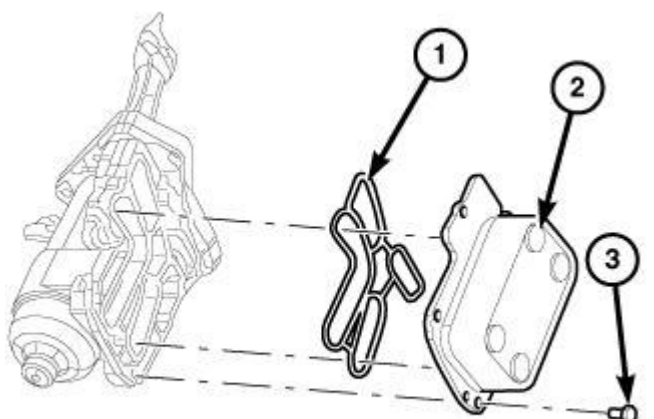

2249616

Fig. 325: Oil Cooler Components
Courtesy of CHRYSLER LLC

1. Engine coolant is used to cool the engine oil. A plate-style external heat exchanger (2) is located on the oil filter housing (3) which is on the right side of the engine. A gasket (1) seals the oil cooler to the oil filter housing. Replace the gasket (1) whenever the oil cooler is removed or replaced. The oil is fed to the oil cooler through the oil filter housing.

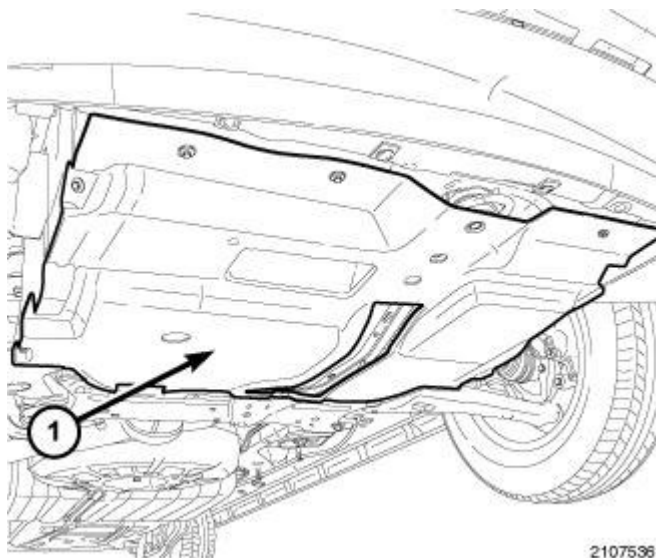
REMOVAL**REMOVAL - OIL COOLER**

Fig. 326: Underbody Splash Shield
Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Raise and support the vehicle.
3. Remove the underbody splash shield (1).
4. Drain the cooling system. Refer to **STANDARD PROCEDURE** .
5. Drain the engine oil.
6. Using a new copper sealing washer, tighten oil drain plug to 54 N.m (40 ft. lbs.).
7. Remove the right front inner splash shield.

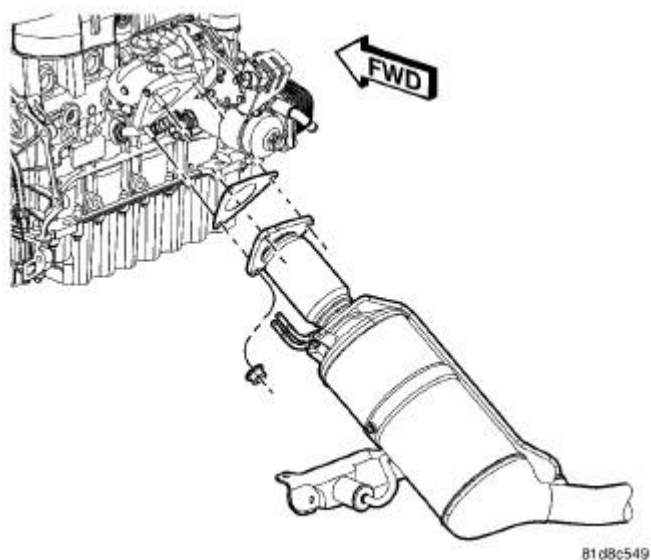


Fig. 327: Diesel Oxidation Catalyst (DOC)/Diesel Particulate Filter (DPF) & Fasteners
Courtesy of CHRYSLER LLC

8. Remove the Diesel Particulate Filter (DPF). Refer to **FILTER, DIESEL PARTICULATE, REMOVAL**.

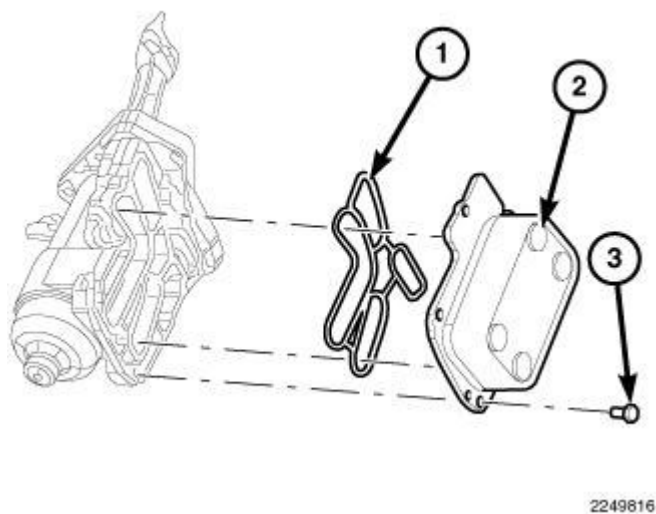


Fig. 328: Oil Cooler Components
Courtesy of CHRYSLER LLC

9. Remove the oil filter housing. Refer to **HOUSING, OIL FILTER, REMOVAL**.
10. Remove the five bolts (3) and the oil cooler (2).

INSTALLATION

OIL COOLER

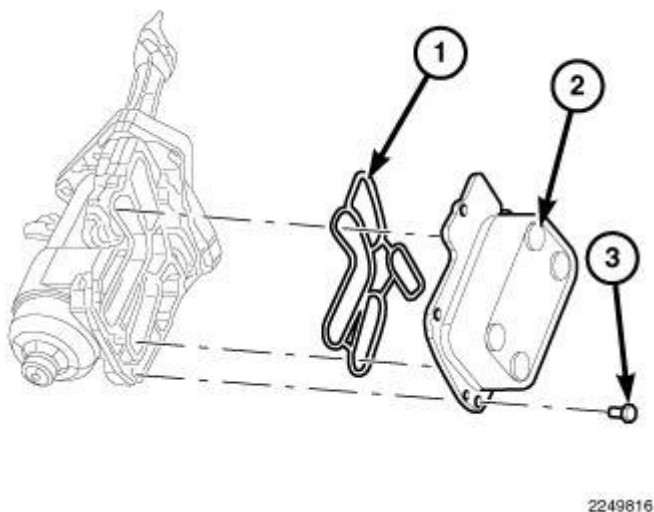


Fig. 329: Oil Cooler Components
Courtesy of CHRYSLER LLC

1. Using a new gasket (1), install the oil cooler (2). Tighten bolts (3) to 12 N.m (106 in. lbs.).
2. Install the oil filter housing. Refer to **HOUSING, OIL FILTER, INSTALLATION**.

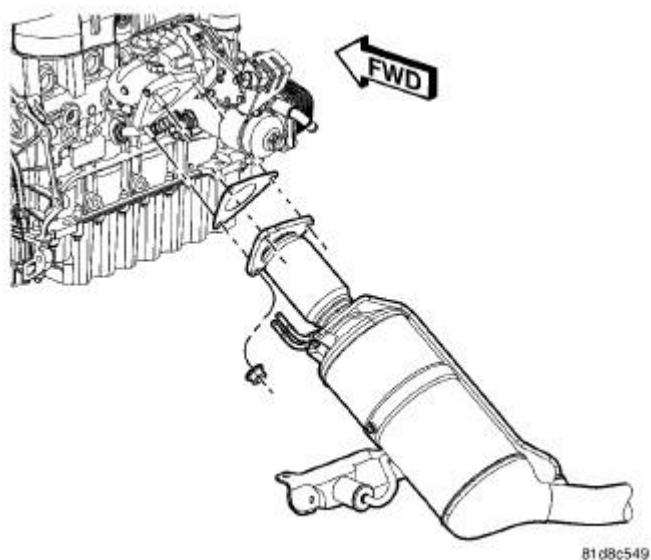


Fig. 330: Diesel Oxidation Catalyst (DOC)/Diesel Particulate Filter (DPF) & Fasteners
Courtesy of CHRYSLER LLC

3. Install the Diesel Particulate Filter (DPF). Refer to **FILTER, DIESEL PARTICULATE, INSTALLATION**.
4. Install the right front inner splash shield. Refer to **SHIELD, SPLASH, FRONT WHEELHOUSE, INSTALLATION** and **SHIELD, SPLASH, LEFT REAR WHEELHOUSE, INSTALLATION**.
5. Fill the engine with the recommended engine oil. Refer to **CAPACITIES AND RECOMMENDED**

FLUIDS, SPECIFICATIONS .

6. Fill the cooling system. Refer to **STANDARD PROCEDURE** .
7. Connect the negative battery cable.
8. Start engine and check for leaks.


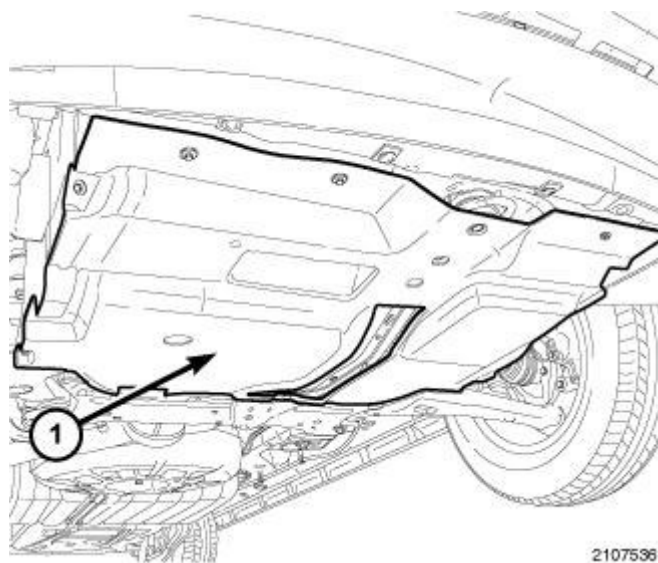


Fig. 331: Underbody Splash Shield
Courtesy of CHRYSLER LLC

9. Install the underbody splash shield (1) and securely tighten the fasteners.
10. Lower the vehicle.

JET, PISTON OIL COOLER**DESCRIPTION****DESCRIPTION**

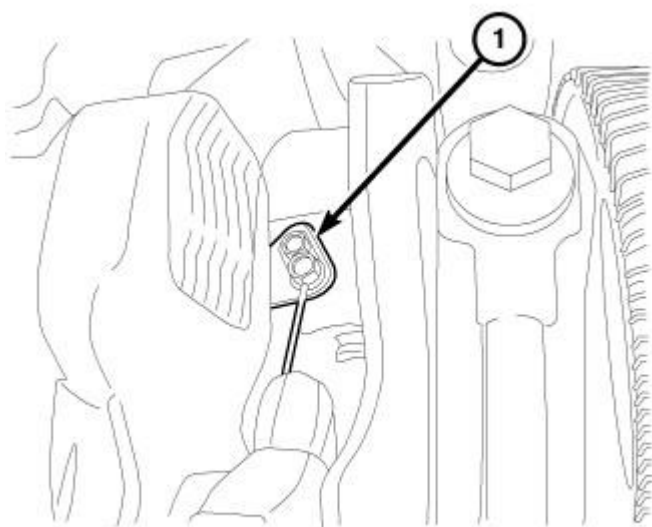

81abeb67

Fig. 332: Oil Jet

Courtesy of CHRYSLER LLC


There are four oil jets installed in the engine block. These oil jets are used to cool and lubricate the piston assemblies.

REMOVAL**REMOVAL**

CAUTION: Use caution when removing and installing oil jets. Damage to oil jet nozzle could cause severe engine damage. Care must be taken not to damage the crankshaft tone ring when removing cylinder number four oil jet.

NOTE: To prevent damage to the oil jets, remove the oil jets before removing the pistons.


1. Disconnect negative battery cable.

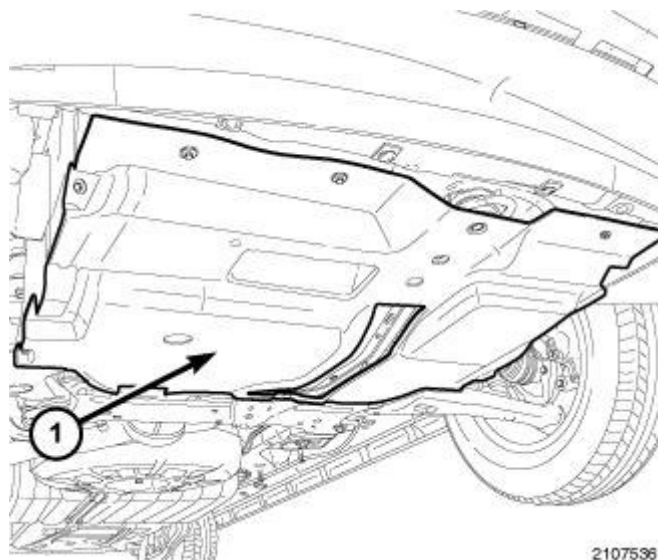

2107536

Fig. 333: Underbody Splash Shield
Courtesy of CHRYSLER LLC


2. Remove the underbody splash shield (1).
3. Remove the oil pan. Refer to **PAN, OIL, REMOVAL**.

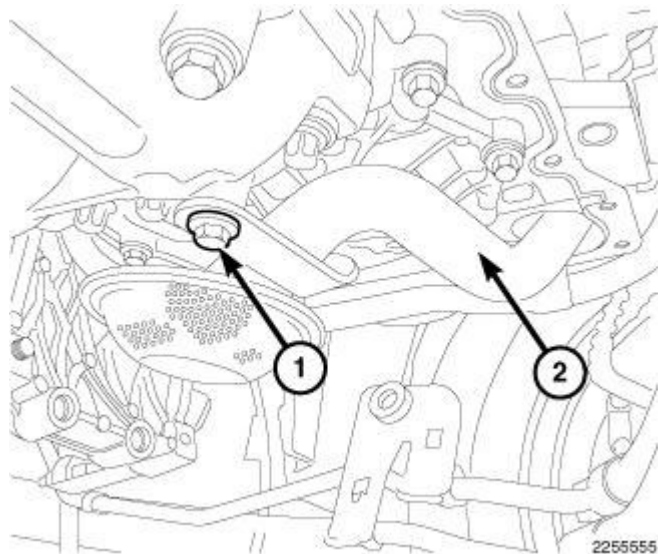

2255555

Fig. 334: Oil Pickup Tube With Bolt
Courtesy of CHRYSLER LLC


4. Remove retaining bolt (1) and the oil pickup tube (2) from engine. Discard the O-rings.

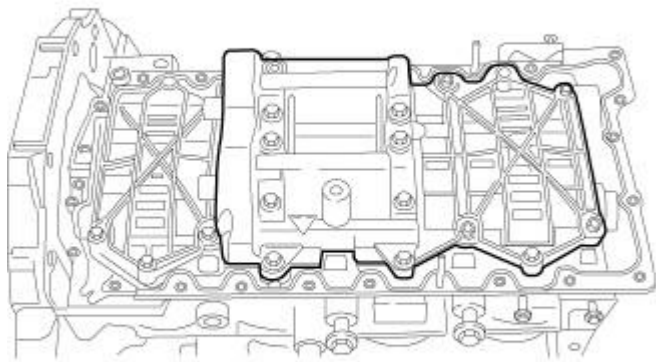

81ab8223

Fig. 335: Balance Shaft Module
Courtesy of CHRYSLER LLC

5. Remove the balance shaft assembly. Refer to **MODULE, BALANCE SHAFT, REMOVAL**.

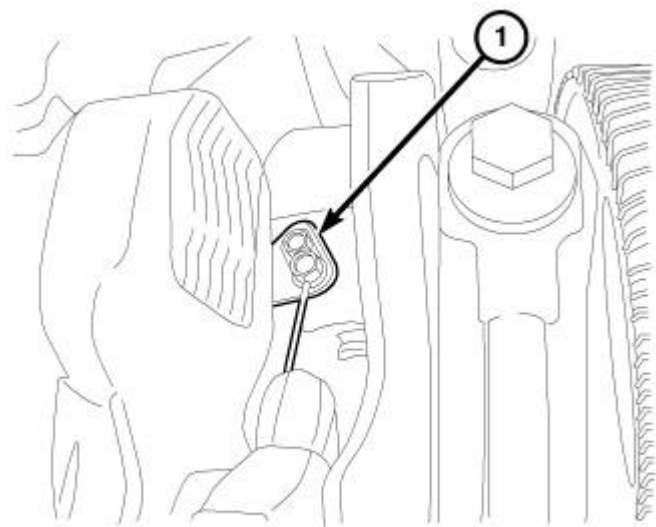


81abeb67

Fig. 336: Oil Jet
Courtesy of CHRYSLER LLC

6. Remove the oil jet (1) and discard the O-rings.

INSTALLATION

INSTALLATION

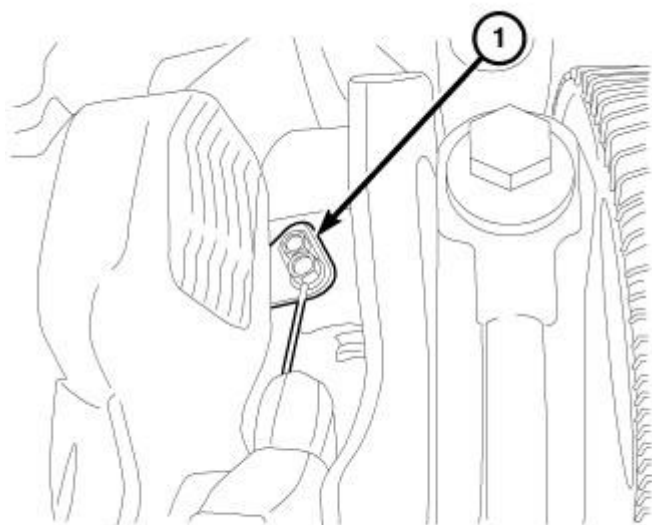


81abeb67

Fig. 337: Oil Jet

Courtesy of CHRYSLER LLC

CAUTION: Use caution when removing and installing oil jets. Damage to oil jet nozzle could cause severe engine damage. Care must be taken not to damage the crankshaft tone ring when removing cylinder number four oil jet.


1. Using a new O-ring, lubricate and install the O-ring on oil jet.
2. Install oil jet (1). Tighten bolt to 11 N.m (97 in. lbs.).

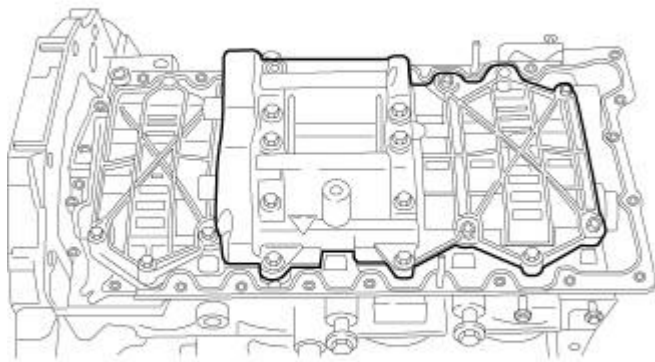

81ab8223

Fig. 338: Balance Shaft Module
Courtesy of CHRYSLER LLC

3. Install the balance shaft assembly. Refer to **MODULE, BALANCE SHAFT, INSTALLATION**.

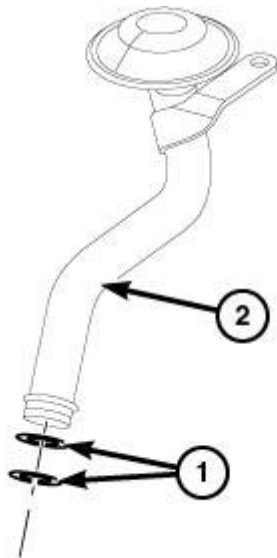

2267860

Fig. 339: Oil Pickup Tube & O-Rings
Courtesy of CHRYSLER LLC

4. Using new O-rings, lubricate and install the 2 O-rings (1) on oil pickup tube (2).

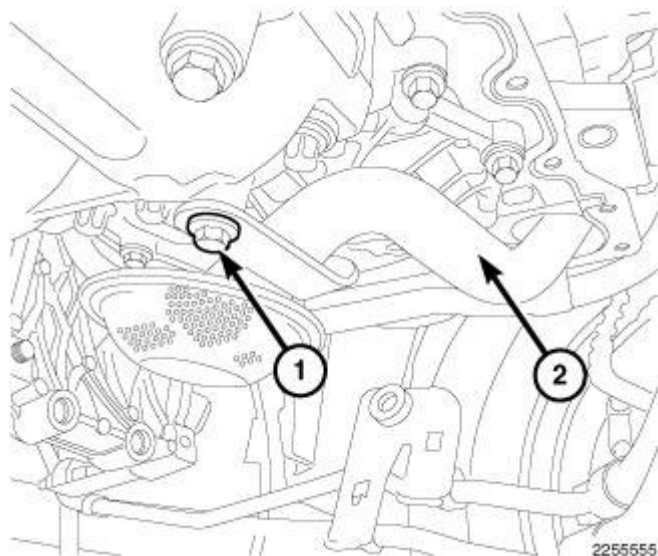


Fig. 340: Oil Pickup Tube With Bolt
Courtesy of CHRYSLER LLC

5. Install the oil pickup tube. Tighten the bolt to 15 N.m (133 in. lbs.).
6. Install the oil pan. Refer to **PAN, OIL, INSTALLATION**.
7. Fill engine with oil.
8. Connect negative battery cable.
9. Start engine and check for leaks.

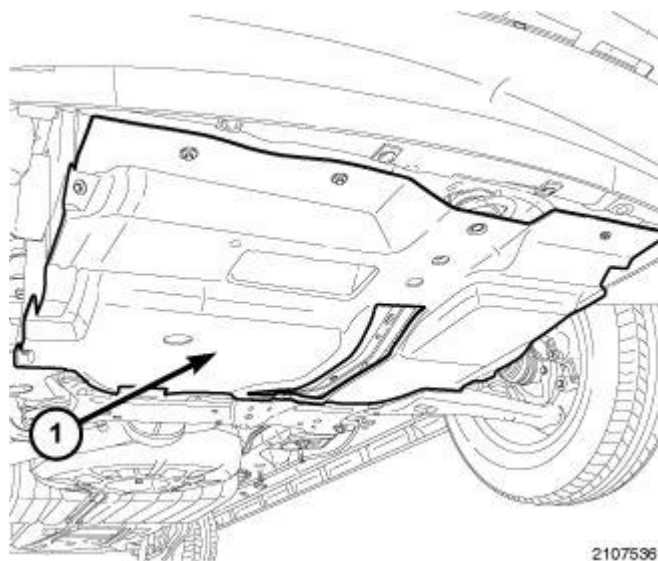


Fig. 341: Underbody Splash Shield
Courtesy of CHRYSLER LLC

10. Install the underbody splash shield (1) and securely tighten fasteners.

OIL

DESCRIPTION**DESCRIPTION**

Refer to the Lube and Maintenance information for oil specifications. Refer to **CAPACITIES AND RECOMMENDED FLUIDS, SPECIFICATIONS** .

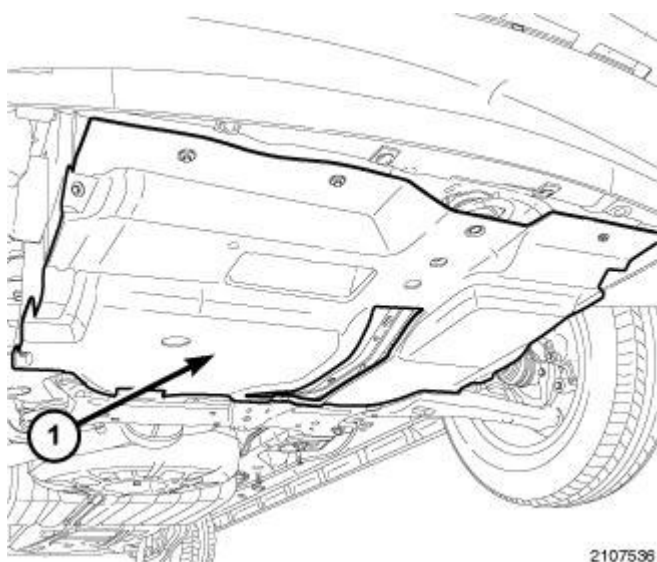
PAN, OIL**REMOVAL****REMOVAL - OIL PAN**

Fig. 342: Underbody Splash Shield
Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Raise and support the vehicle. Refer to **HOISTING, STANDARD PROCEDURE** .
3. Remove the underbody splash shield (1).
4. Drain the engine oil.
5. Using a new copper sealing washer, tighten oil drain plug to 54 N.m (40 ft. lbs.).
6. Remove accessory drive belt. Refer to **BELT, SERPENTINE, REMOVAL** .
7. If equipped, remove the insulation around the oil pan.
8. Remove the front fore and aft crossmember. Refer to **CROSSMEMBER, FRONT FORE AND AFT, REMOVAL** and **CROSSMEMBER, FRONT SUSPENSION, REMOVAL** .

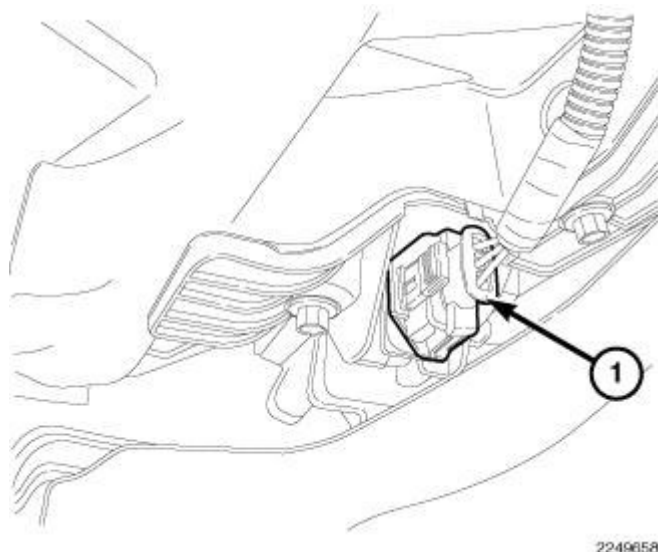


Fig. 343: Crankshaft Position Sensor (CKP) Harness Connector
Courtesy of CHRYSLER LLC

9. Disconnect the Crankshaft Position Sensor (CKP) connector (1).

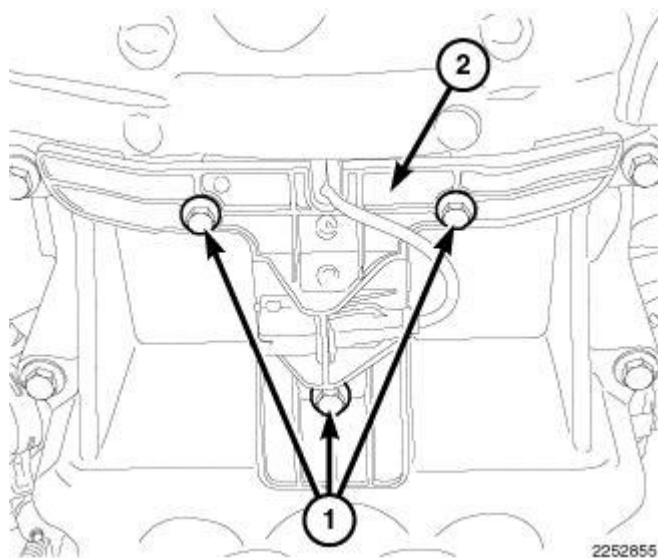


Fig. 344: Crankshaft Position Sensor (CKP) Access Cover & Bolts
Courtesy of CHRYSLER LLC

10. Remove bolts (1) and the Crankshaft Position Sensor (CKP) access cover (2).

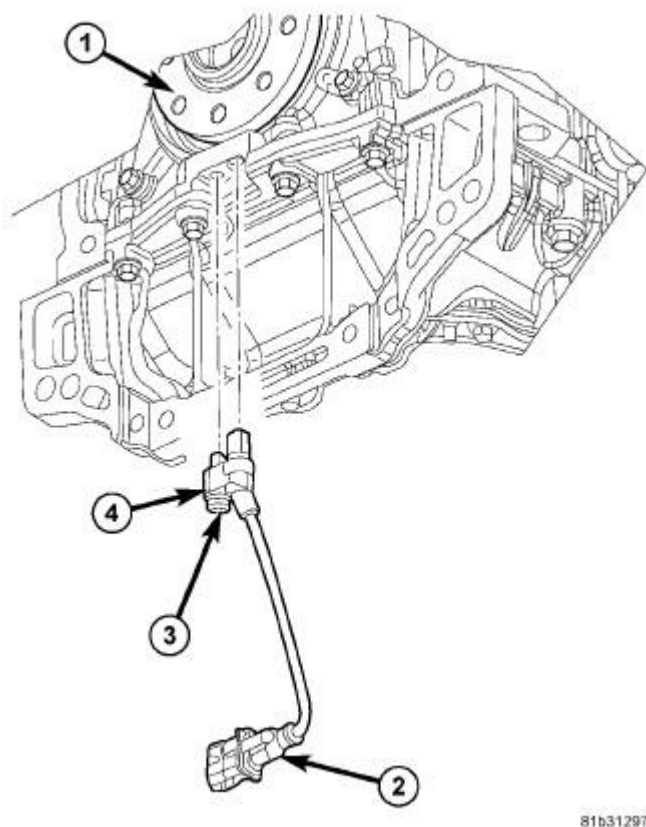


Fig. 345: Crankshaft Hub, Electrical Connector, Mounting Bolt & CKP Sensor
Courtesy of CHRYSLER LLC

11. Remove bolt (3) and the Crankshaft Position (CKP) Sensor (4).

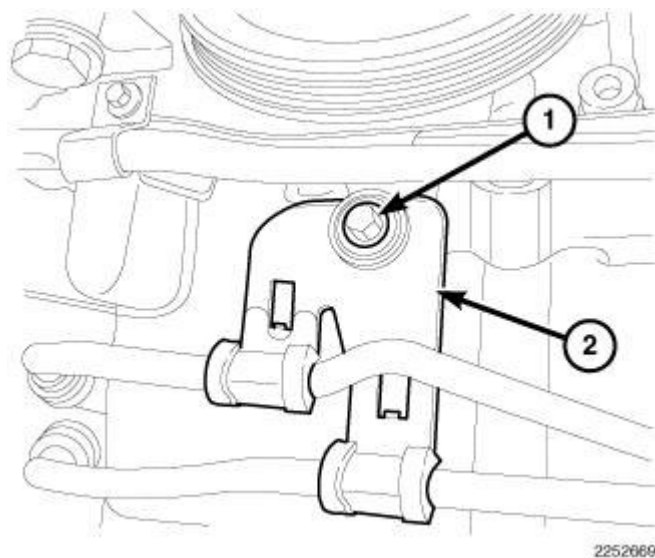


Fig. 346: Retaining Bolt & Power Steering Line Bracket
Courtesy of CHRYSLER LLC

12. Remove the bolt (1) securing the power steering lines.

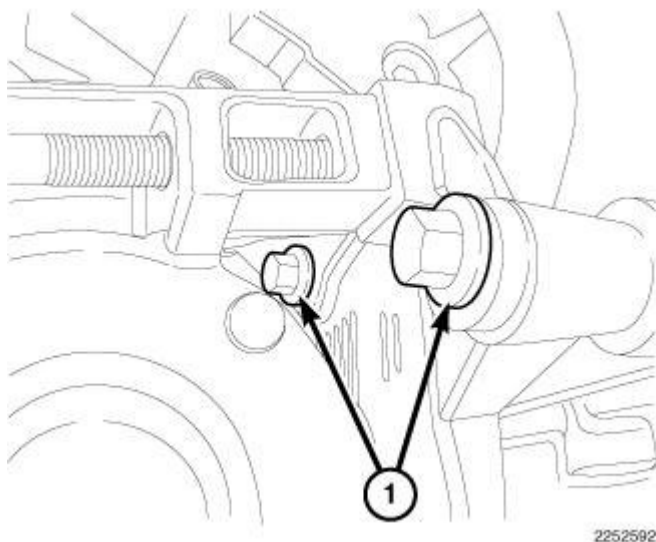


Fig. 347: Upper A/C Mounting Bracket Bolts
Courtesy of CHRYSLER LLC

13. Loosen the upper A/C mounting bracket bolts (1).

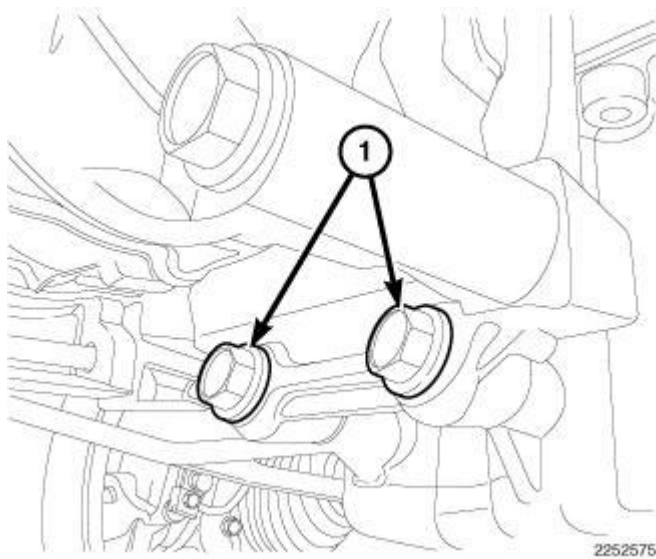


Fig. 348: A/C Mounting Bracket Bolts
Courtesy of CHRYSLER LLC

14. Loosen the lower A/C mounting bracket bolts and position the A/C mounting bracket forward to clear oil pan bosses.

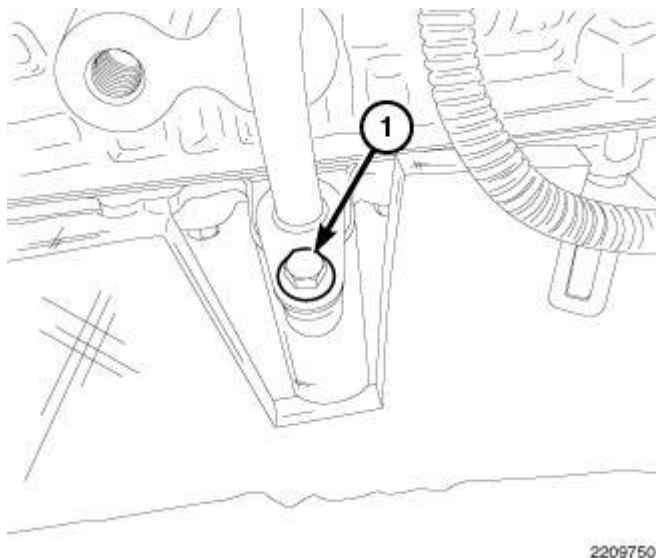


Fig. 349: Oil Level Indicator Tube Lower Bolt
Courtesy of CHRYSLER LLC

15. Remove lower bolt (1) from the oil indicator tube.

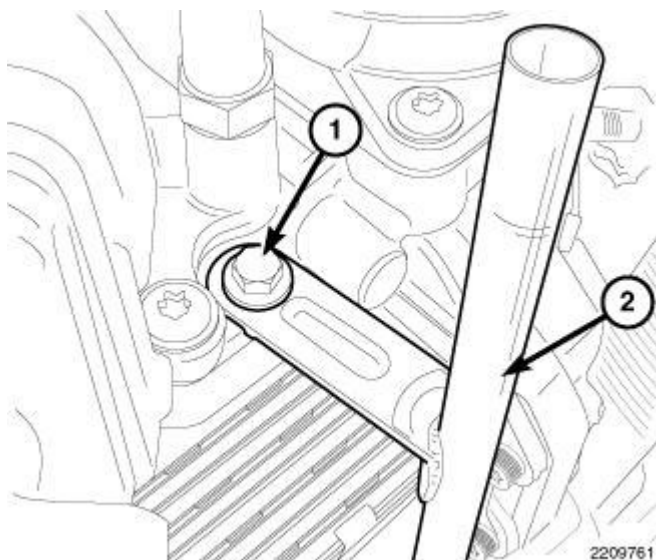


Fig. 350: Oil Level Indicator Tube & Upper Bolt
Courtesy of CHRYSLER LLC

16. Remove upper bolt (1) and the oil level indicator tube.

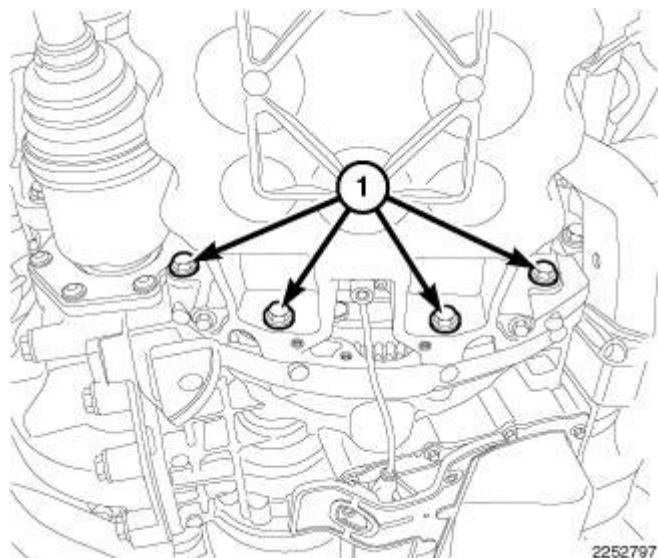


Fig. 351: Oil Pan To Transaxle Bolts
Courtesy of CHRYSLER LLC

17. Remove oil pan-to-transaxle bolts (1).


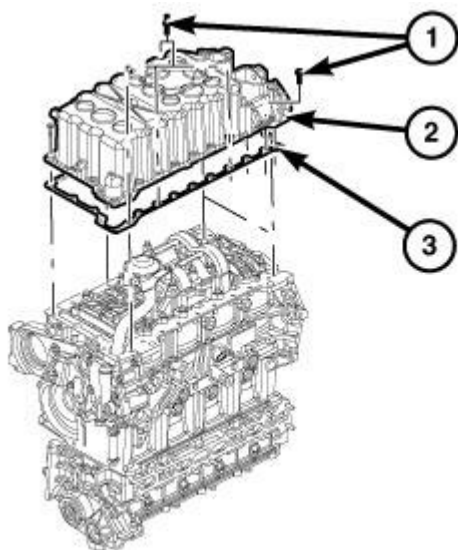


Fig. 352: Oil Pan Gasket With Oil Pan & Fasteners
Courtesy of CHRYSLER LLC

18. Remove fasteners (1) and the oil pan (2).
19. Remove the oil pan gasket (3).

INSTALLATION

INSTALLATION - OIL PAN

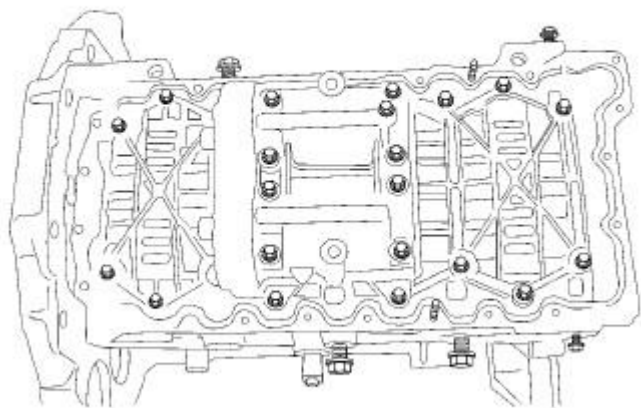


81abeda6

Fig. 353: Upper Oil Pan

Courtesy of CHRYSLER LLC

1. Clean oil pan and engine block gasket surfaces.

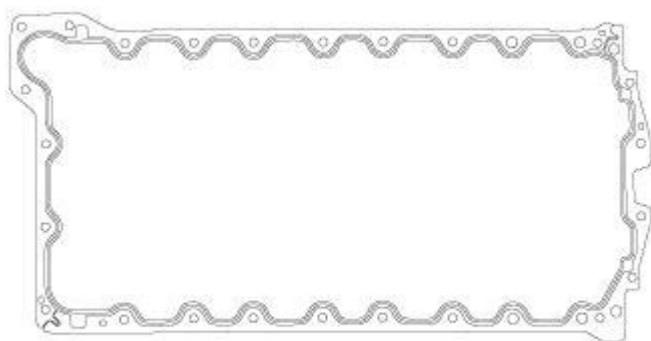


2252488

Fig. 354: Upper Oil Pan Gasket

Courtesy of CHRYSLER LLC

2. Install the upper oil pan gasket.

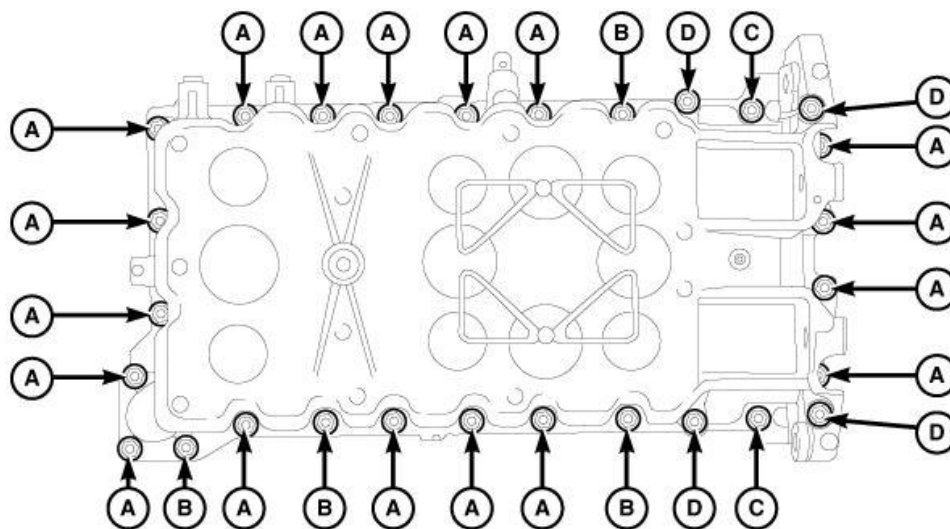


2252009

Fig. 355: Oil Pan Bolts
Courtesy of CHRYSLER LLC

3. The oil pan bolts have 2 different bolt sizes:

- Bolts A are M6
- Bolts B are M6 stud bolts
- Bolts C are M8 short
- Bolts D are M8 long

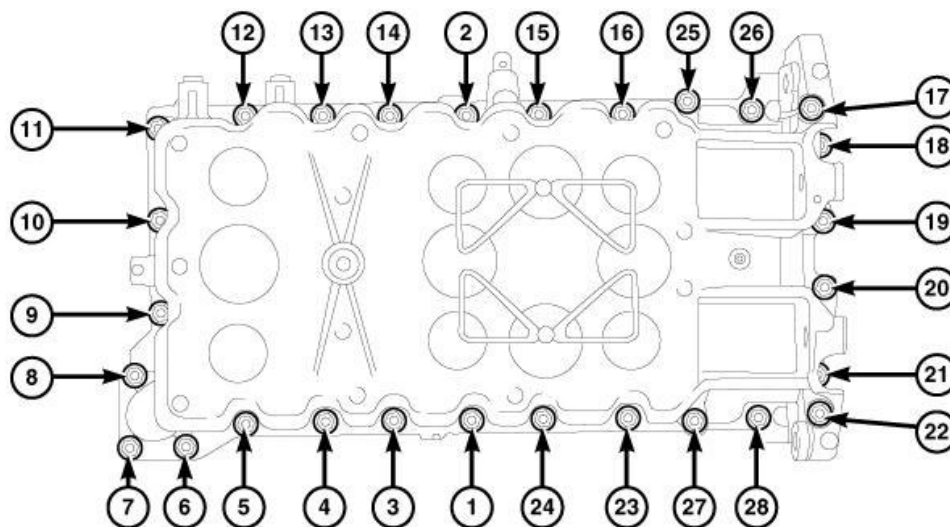

2252034

Fig. 356: Oil Pan Bolt Tightening Sequence
Courtesy of CHRYSLER LLC

4. Install oil pan.

5. Tighten oil pan bolts to:

- M6 bolts to 15 N.m (133 in. lbs.)
- M8 bolts to 32 N.m (24 ft. lbs.)

6. Loosen all of the oil pan and stud bolts 90 degrees and retighten to.
- M6 bolts to 15 N.m (133 in. lbs.)
 - M8 bolts to 32 N.m (24 ft. lbs.)

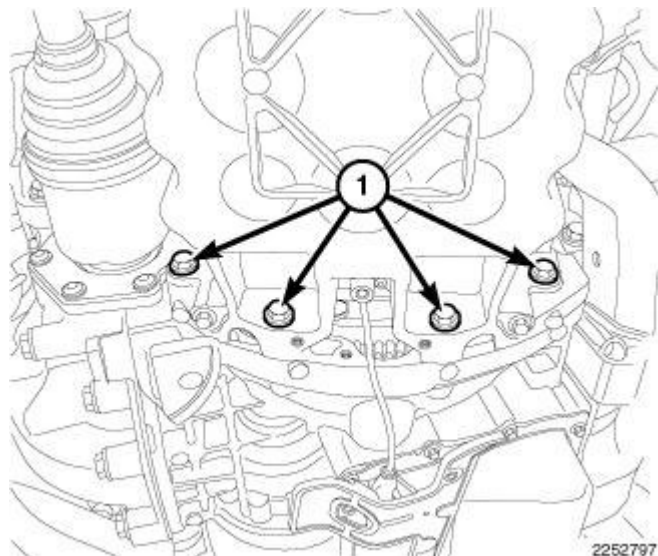


Fig. 357: Oil Pan To Transaxle Bolts
Courtesy of CHRYSLER LLC

7. Install the oil pan to transaxle bolts. Tighten bolts to 60 N.m (44 ft. lbs.).


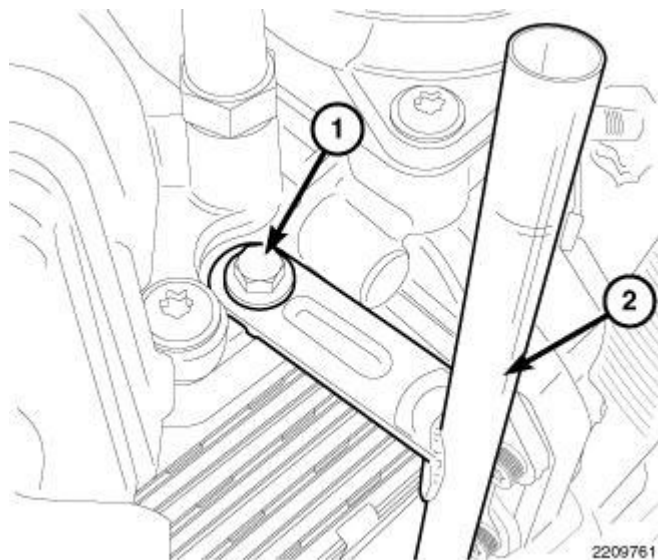


Fig. 358: Oil Level Indicator Tube & Upper Bolt
Courtesy of CHRYSLER LLC


8. Install the oil level indicator tube (2). Tighten upper bolt (1) to 11 N.m (97 in. lbs.).

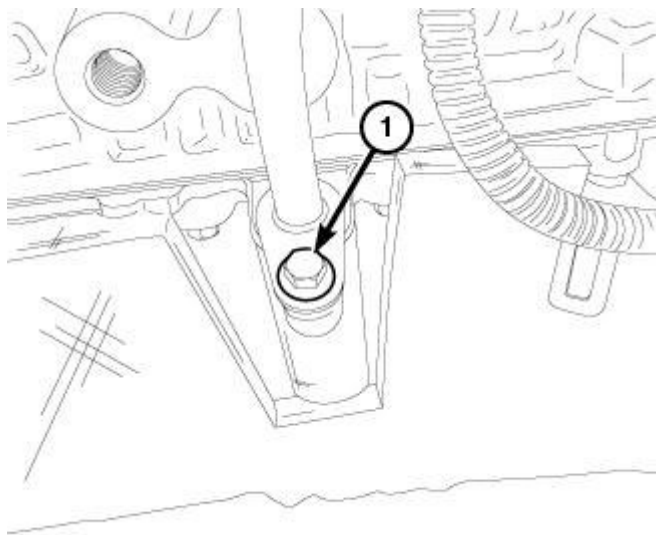

2209750

Fig. 359: Oil Level Indicator Tube Lower Bolt
Courtesy of CHRYSLER LLC

9. Install the oil indicator lower bolt (1). Tighten lower bolt to 11 N.m (97 in. lbs.).

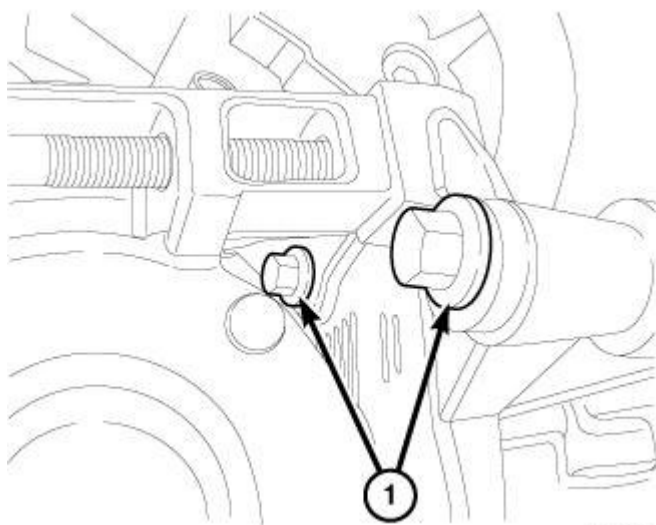

2252592

Fig. 360: Upper A/C Mounting Bracket Bolts
Courtesy of CHRYSLER LLC

10. Position the A/C bracket onto oil pan bosses. Tighten the upper A/C mounting bracket bolts (1) to 23 N.m (17 ft. lbs.).

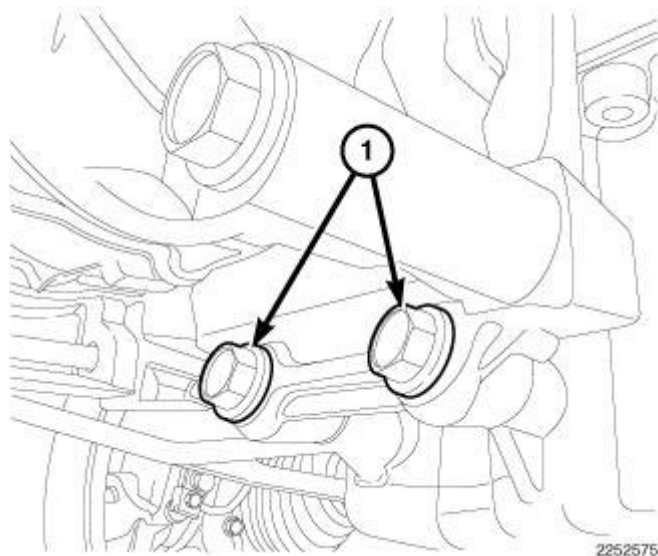


Fig. 361: A/C Mounting Bracket Bolts
Courtesy of CHRYSLER LLC

11. Tighten the lower A/C mounting bracket bolts (1) to 23 N.m (17 ft. lbs.).


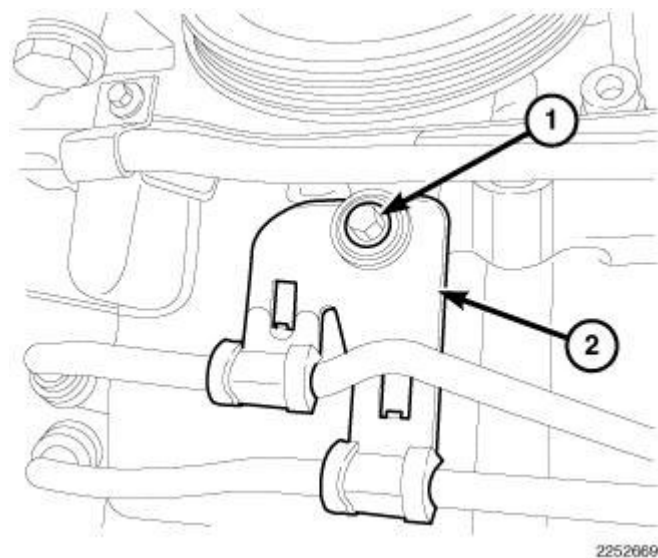


Fig. 362: Retaining Bolt & Power Steering Line Bracket
Courtesy of CHRYSLER LLC


12. Install the retaining bolt (1) securing the power steering lines. Tighten to 15 N.m (133 in. lbs.).

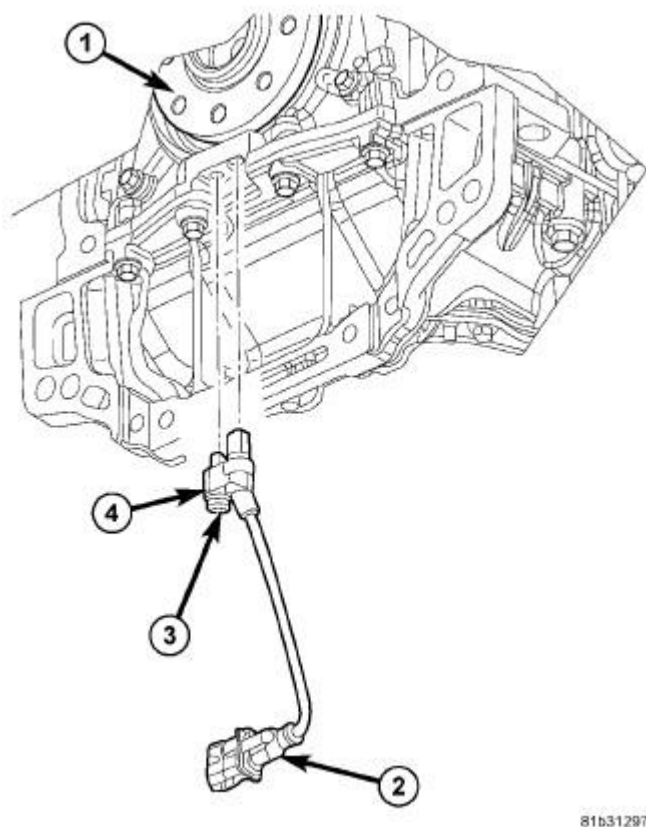

81b31297

Fig. 363: Crankshaft Hub, Electrical Connector, Mounting Bolt & CKP Sensor
Courtesy of CHRYSLER LLC

13. Install the Crankshaft Position Sensor (CKP) (4). Tighten bolts to 11 N.m (97 in. lbs.).

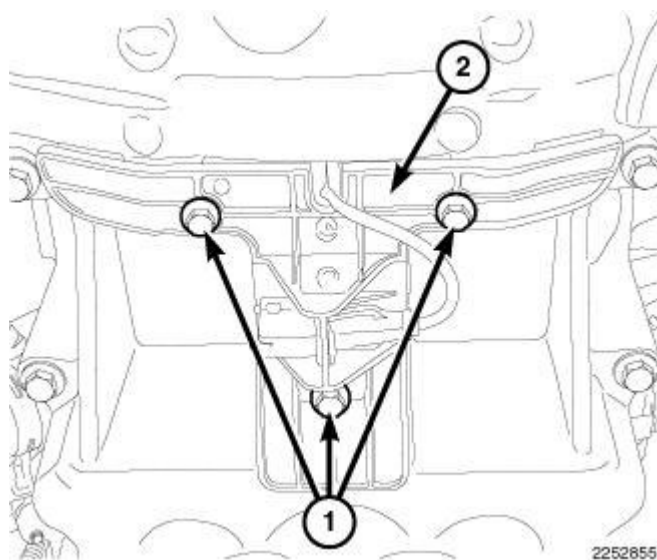

2252855

Fig. 364: Crankshaft Position Sensor (CKP) Access Cover & Bolts
Courtesy of CHRYSLER LLC

14. Install Crankshaft Position Sensor (CKP) access cover (2). Tighten bolts to 15 N.m (133 in. lbs.).

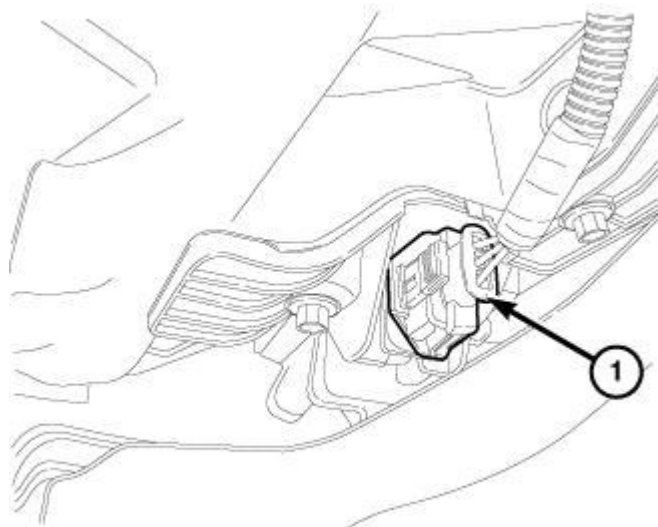


Fig. 365: Crankshaft Position Sensor (CKP) Harness Connector
Courtesy of CHRYSLER LLC

15. Connect the Crankshaft Position Sensor (CKP) harness connector (1).

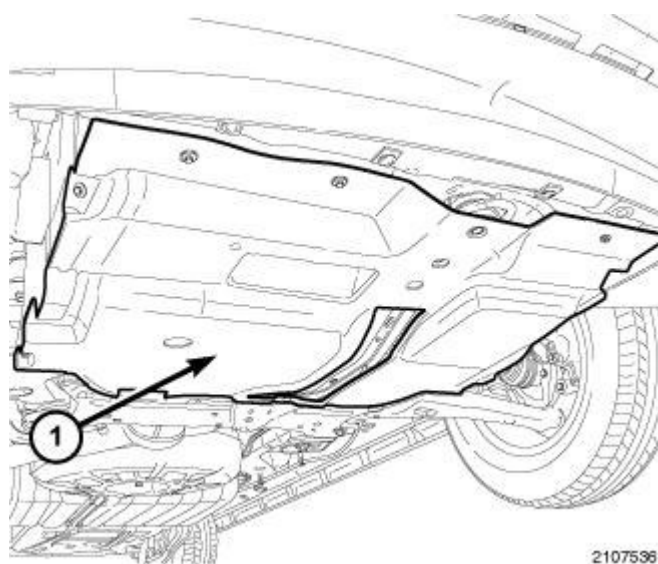


Fig. 366: Underbody Splash Shield
Courtesy of CHRYSLER LLC

16. Install the front fore and aft crossmember. Refer to **CROSSMEMBER, FRONT FORE AND AFT, INSTALLATION** and **CROSSMEMBER, FRONT SUSPENSION, INSTALLATION**.
17. If equipped, install the insulation around the oil pan.
18. Install the accessory drive belt. Refer to **BELT, SERPENTINE, INSTALLATION**.
19. Fill engine with recommended oil. Refer to **CAPACITIES AND RECOMMENDED FLUIDS**.


SPECIFICATIONS .

20. Connect the negative battery cable.
21. Start engine and check for leaks.
22. Install the underbody splash shield (1) and securely tighten fasteners.
23. Lower the vehicle.

PUMP, ENGINE OIL

REMOVAL

REMOVAL - OIL PUMP

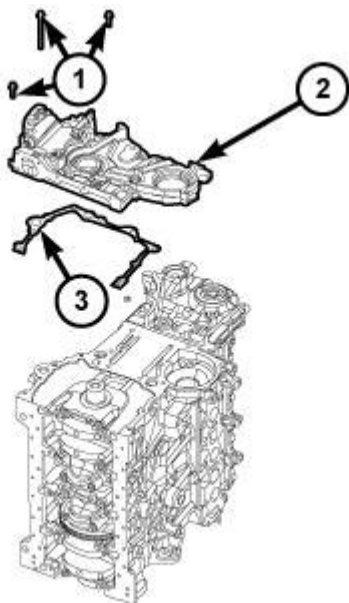

61789

Fig. 367: Front Cover, Gasket & Bolts
Courtesy of CHRYSLER LLC

NOTE: The oil pump is not a serviceable item, it is part of the front cover. If diagnosis has directed you to replace the oil pump, then the front cover needs to be replaced.

1. Disconnect negative battery cable.
2. Remove the front cover. Refer to **COVER, ENGINE, FRONT, REMOVAL**.

INSTALLATION

INSTALLATION - OIL PUMP

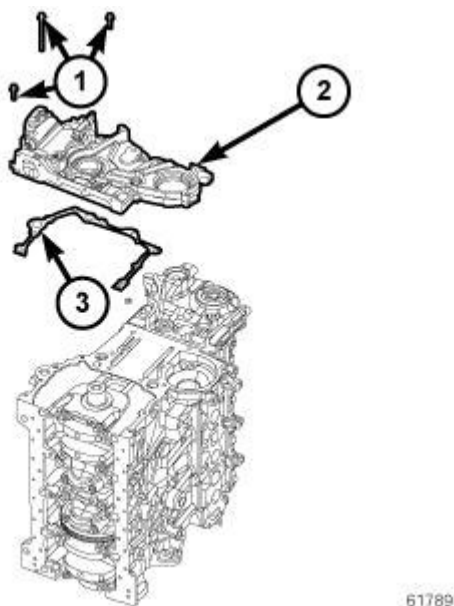


Fig. 368: Front Cover, Gasket & Bolts
Courtesy of CHRYSLER LLC

1. Clean the gasket mating surfaces.
2. Lubricate oil pump rotor with engine oil.
3. Install front cover assembly (2). Refer to **COVER, ENGINE, FRONT, INSTALLATION**.

PICK-UP, OIL PUMP

REMOVAL

REMOVAL - OIL PICKUP TUBE

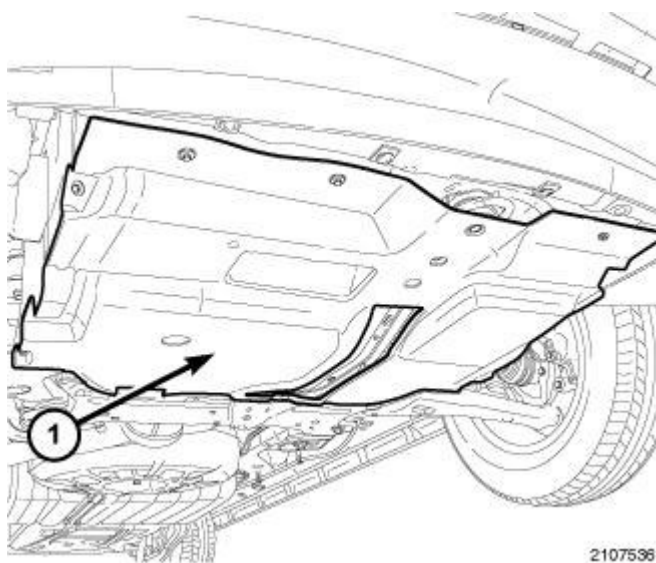


Fig. 369: Underbody Splash Shield
Courtesy of CHRYSLER LLC

1. Disconnect negative battery cable.
2. Remove the underbody splash shield (1).
3. Remove the oil pan. Refer to **PAN, OIL, REMOVAL**.

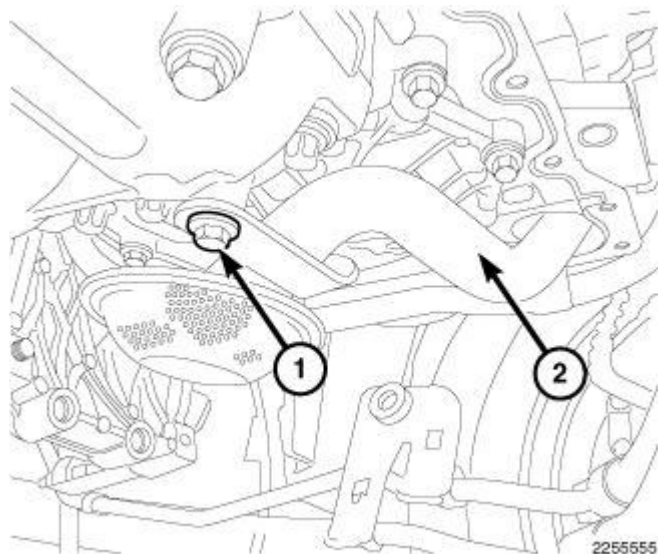


Fig. 370: Oil Pickup Tube With Bolt
Courtesy of CHRYSLER LLC

4. Remove bolt (1), and the oil pickup tube (2) from engine. Discard O-rings.

INSTALLATION

INSTALLATION - OIL PICKUP TUBE

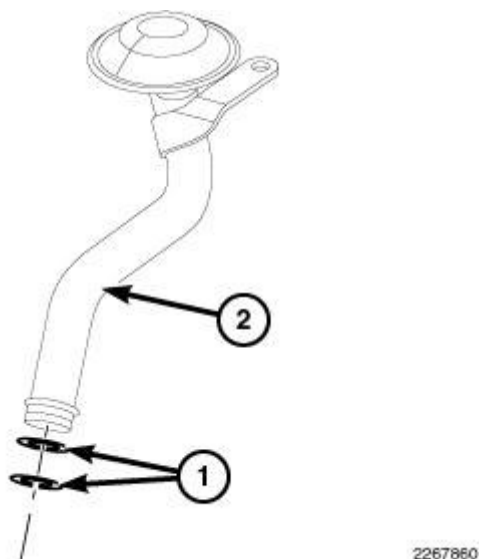


Fig. 371: Oil Pickup Tube & O-Rings
Courtesy of CHRYSLER LLC

1. Using new O-rings, lubricate and install the 2 O-rings (1) on oil pickup tube (2).

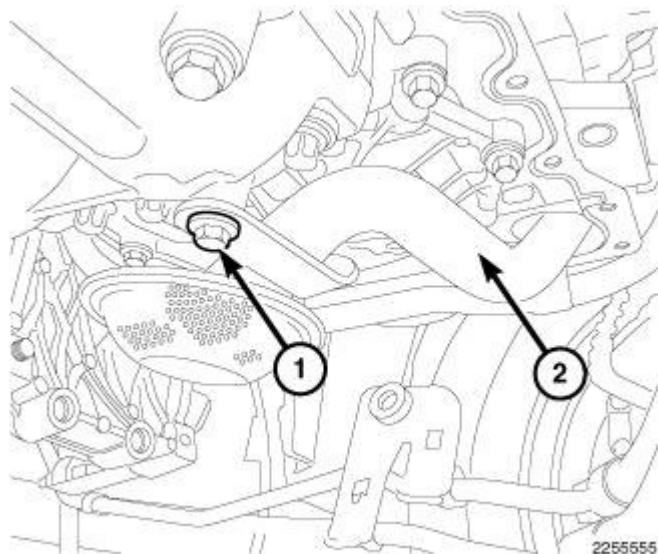


Fig. 372: Oil Pickup Tube With Bolt
Courtesy of CHRYSLER LLC

2. Install the oil pickup tube. Tighten bolt to 15 N.m (133 in. lbs.).
3. Install the oil pan. Refer to **PAN, OIL, INSTALLATION.**
4. Fill engine with oil.
5. Connect negative battery cable.
6. Start engine and check for leaks.

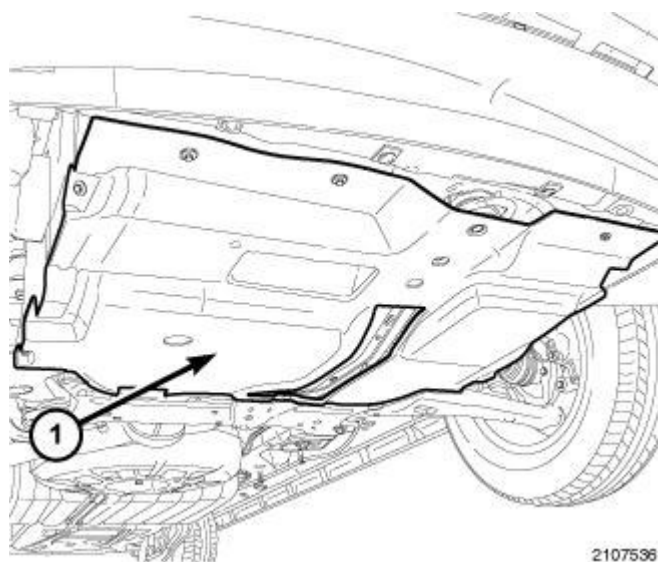


Fig. 373: Underbody Splash Shield
Courtesy of CHRYSLER LLC

7. Install the underbody splash shield (1) and securely tighten fasteners.

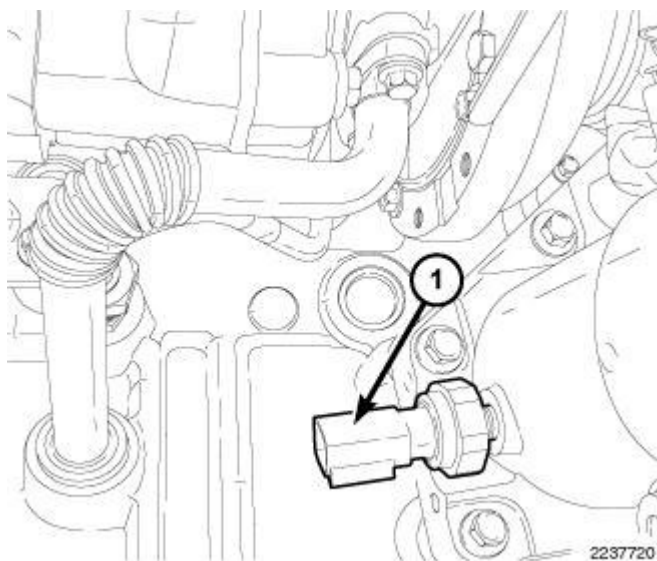
SENSOR, OIL PRESSURE**DESCRIPTION****DESCRIPTION**

Fig. 374: Oil Pressure Switch
Courtesy of CHRYSLER LLC

The oil pressure sending unit uses three circuits. They are:

- A signal circuit to the ECM.
- A sensor ground circuit through the ECM.
- A 5 volt reference circuit from the ECM.

The oil pressure sending unit returns a voltage signal back to the ECM relating oil pressure. Ground for the sensor is supplied by the ECM.

The oil pressure switch (1) is located on the left side of the oil filter housing. The switch screws into the engines main oil gallery.

REMOVAL**REMOVAL - OIL PRESSURE SENSOR**

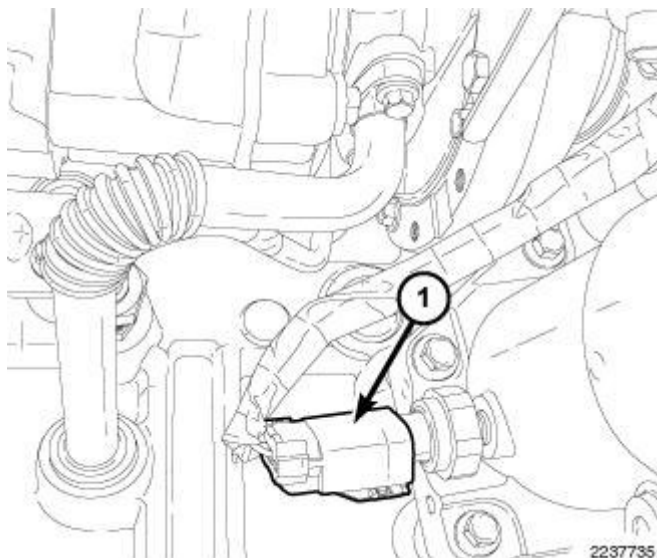


Fig. 375: Oil Pressure Switch Harness Connector
Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Remove the belly pan.
3. Disconnect the oil pressure sensor harness connector (1).

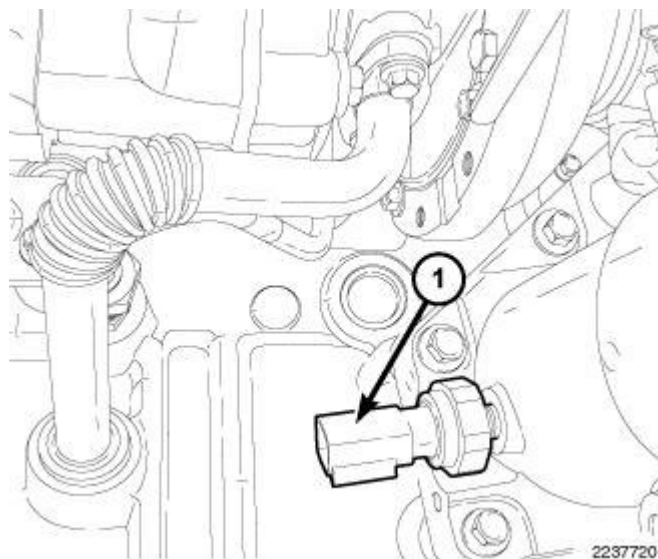


Fig. 376: Oil Pressure Switch
Courtesy of CHRYSLER LLC

4. Remove the oil pressure sensor (1).

INSTALLATION

INSTALLATION - OIL PRESSURE SENSOR

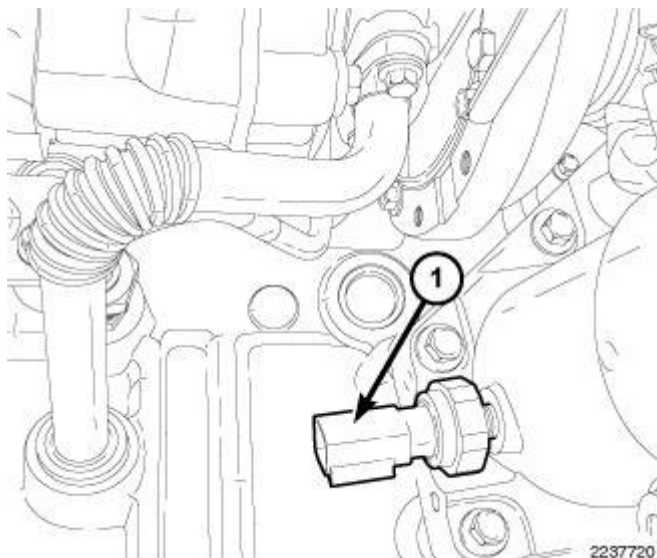


Fig. 377: Oil Pressure Switch
Courtesy of CHRYSLER LLC

1. Install the oil pressure sensor. Tighten to 14 N.m (124 in. lbs.).

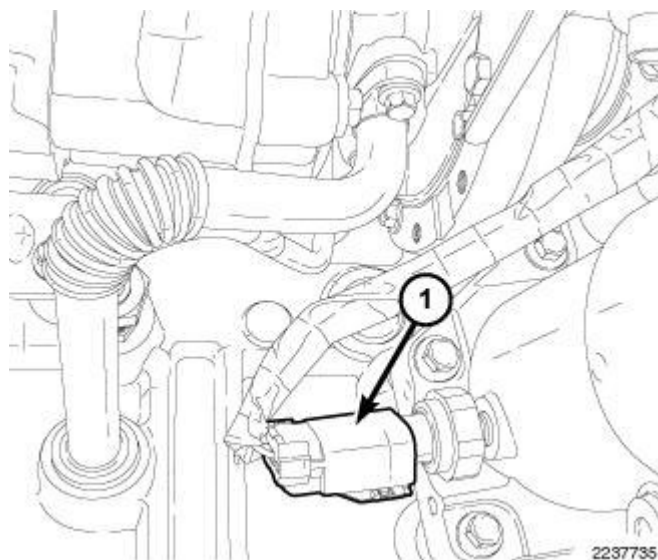


Fig. 378: Oil Pressure Switch Harness Connector
Courtesy of CHRYSLER LLC

2. Connect the oil pressure sensor harness connector (1).
3. Install the belly pan.
4. Connect the negative battery cable.
5. Start engine and check for oil leaks.

SEPARATOR, OIL

REMOVAL

REMOVAL - OIL SEPARATOR

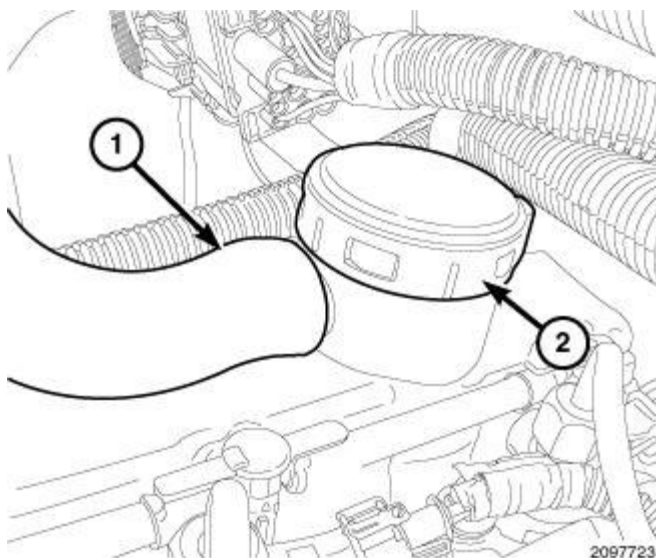


Fig. 379: Crankcase Vent Hose & Oil Separator
Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Remove the engine cover.
3. Remove the cylinder head cover. Refer to COVER(S), CYLINDER HEAD, REMOVAL.
4. Remove the oil separator cover (2).


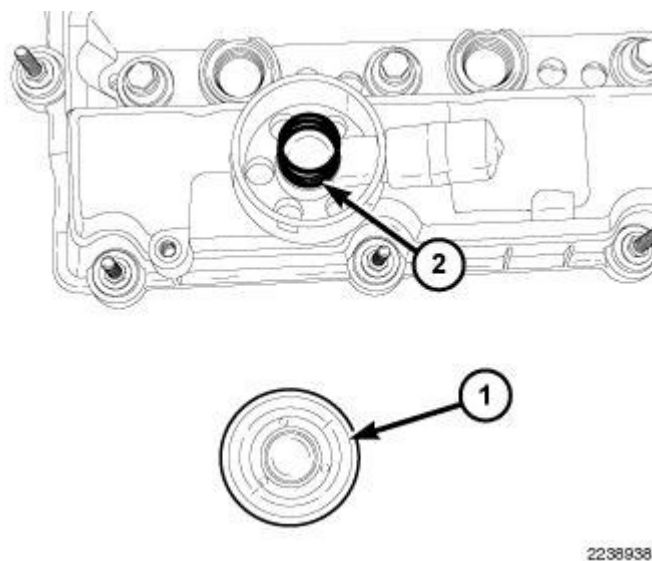


Fig. 380: Diaphragm & Diaphragm Spring
Courtesy of CHRYSLER LLC

5. Remove diaphragm (1) and the diaphragm spring (2).

INSTALLATION


INSTALLATION - OIL SEPARATOR

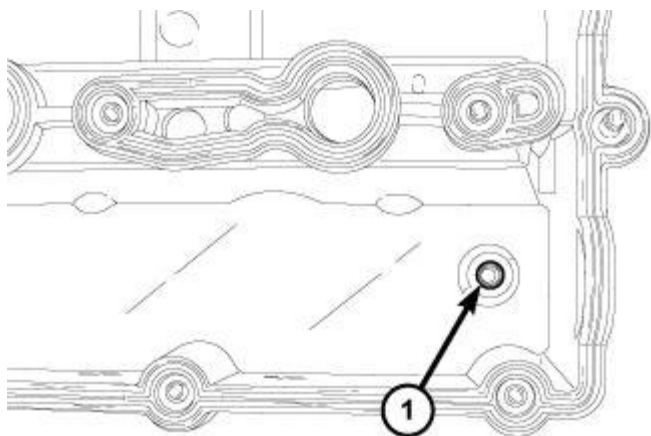

2238983

Fig. 381: Oil Drain Back Access Hole
Courtesy of CHRYSLER LLC

1. Inspect the oil drain back access hole (1) in the cylinder head cover to assure that it is free of obstruction.

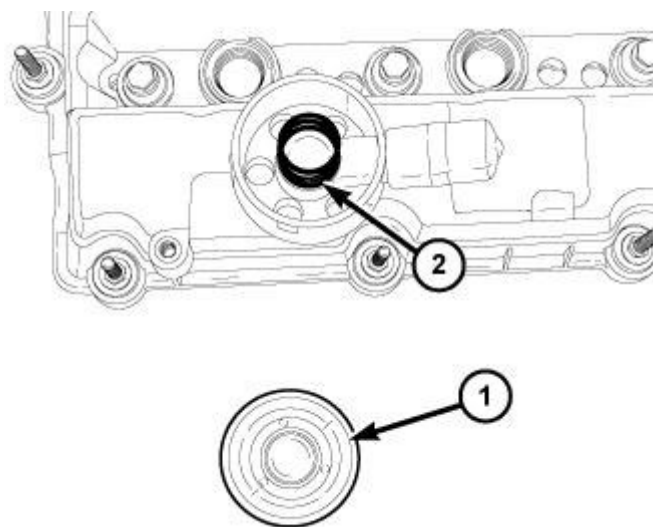

2238938

Fig. 382: Diaphragm & Diaphragm Spring
Courtesy of CHRYSLER LLC

2. Lubricate the oil separator O-rings with clean engine oil.
3. Install the diaphragm spring (2) and the diaphragm (1).

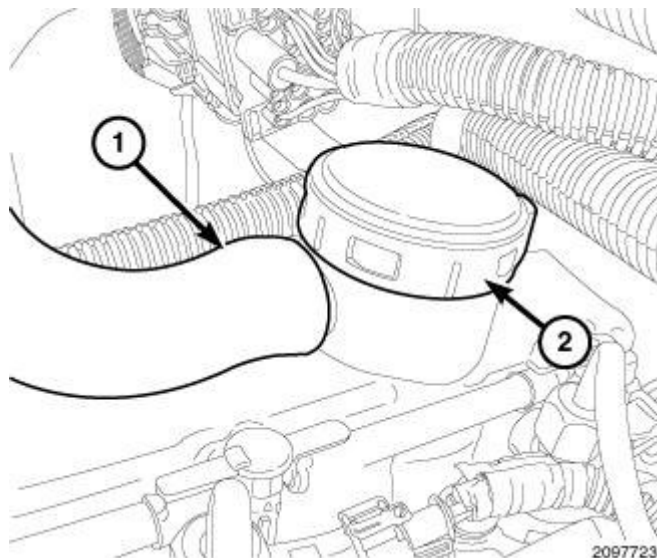


Fig. 383: Crankcase Vent Hose & Oil Separator
Courtesy of CHRYSLER LLC

4. Carefully position and push down on the oil separator cover (2) to seat.
5. Install the cylinder head cover. Refer to **COVER(S), CYLINDER HEAD, INSTALLATION**.
6. Install the engine cover.
7. Connect the negative battery cable.

VALVE, OIL PRESSURE RELIEF

DESCRIPTION

DESCRIPTION

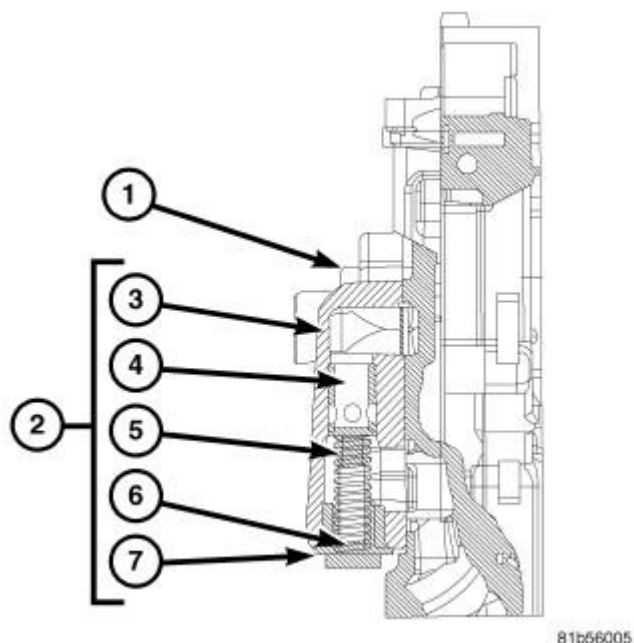


Fig. 384: Oil Pressure Relief Valve Components

Courtesy of CHRYSLER LLC

The oil pressure relief valve is built into the front cover (1). The oil pressure relief valve assembly (2) consists of several components. The plunger (4) is held in place by the spring (5). The plug (6) keeps the plug and spring in place, and the o-ring (7) prevents oil from leaking past the plug (6).

In the case of excessively high oil pressure, the oil pressure on the piston (4) overcomes the spring (5) pressure and the piston is forced off its seat. When the piston is forced off its seat, a drain back passage is opened and the excess oil pressure is vented back into the crankcase.

MANIFOLDS

MANIFOLD, EXHAUST

REMOVAL

REMOVAL - EXHAUST MANIFOLD

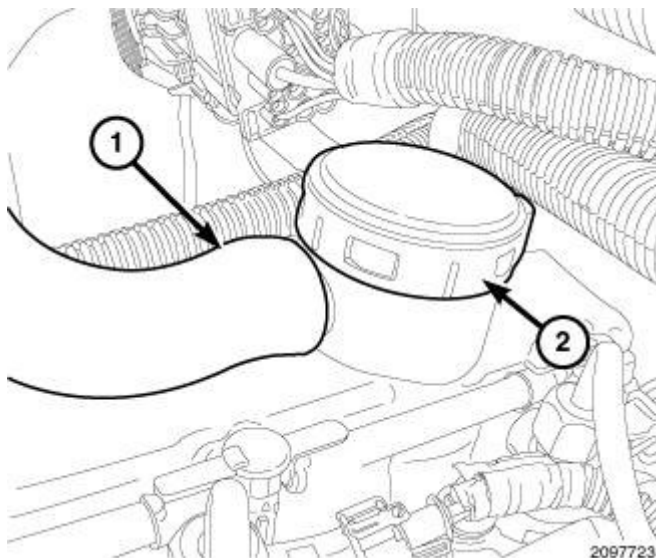


Fig. 385: Crankcase Vent Hose & Oil Separator
Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Remove the engine cover.
3. Remove the air cleaner body. Refer to **BODY, AIR CLEANER, REMOVAL**.
4. Disconnect the crankcase vent hose (1) from the oil separator (2).

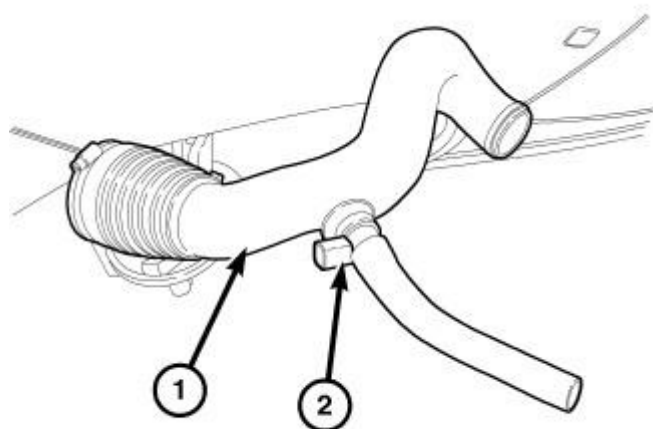


Fig. 386: Turbocharger Air Inlet Tube & Crankcase Vent Hose Heater Electrical Connector
Courtesy of CHRYSLER LLC

5. Disconnect the crankcase vent hose heater electrical connector (2).
6. Remove the turbocharger air inlet tube (1) from turbocharger.

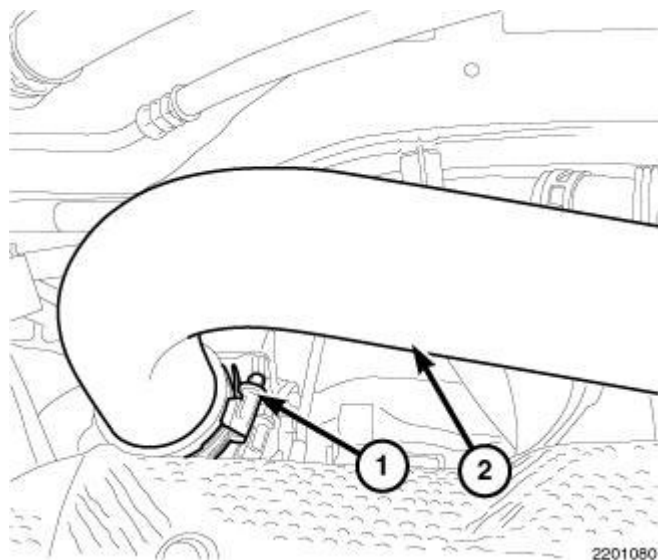


Fig. 387: Charge Air Cooler Inlet Hose & Clamp
Courtesy of CHRYSLER LLC

7. Loosen clamp (1) and disconnect the charge air cooler inlet hose (2) from turbocharger.

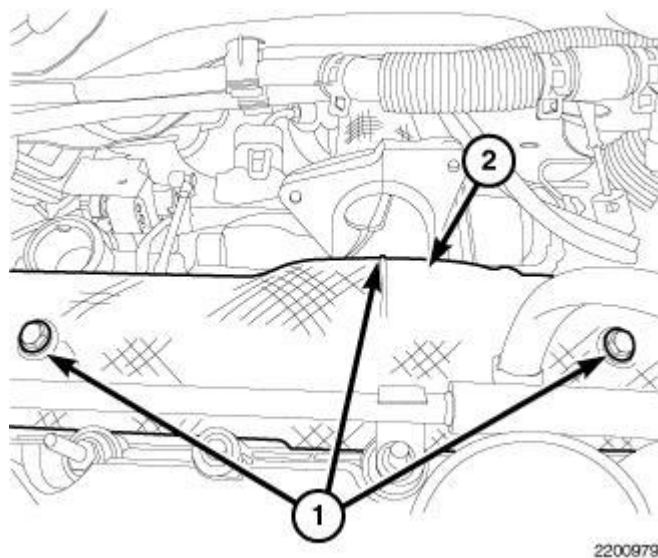


Fig. 388: Exhaust Manifold Heat Shield & Bolts
Courtesy of CHRYSLER LLC

8. Remove the three bolts (1) and the exhaust manifold heat shield (2).
9. Remove the belly pan.
10. Remove the right front inner splash shield.

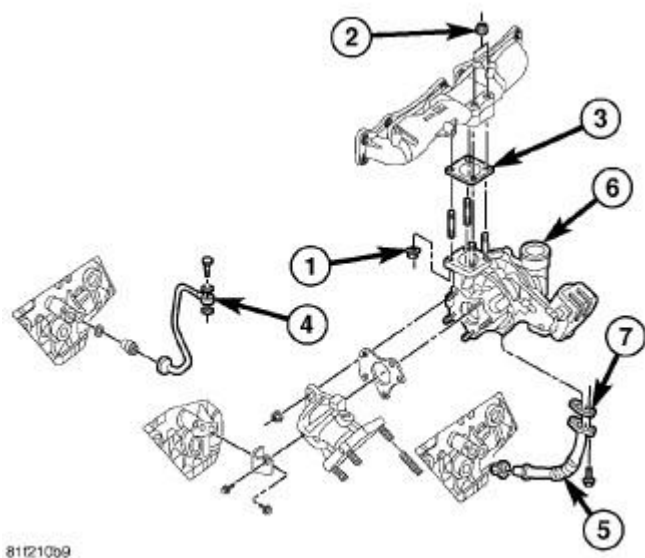


Fig. 389: Turbocharger Assembly & Fasteners
Courtesy of CHRYSLER LLC

11. Remove the turbocharger (6). Refer to **TURBOCHARGER, REMOVAL.**
12. Remove nuts and the exhaust manifold.

INSTALLATION

INSTALLATION - EXHAUST MANIFOLD

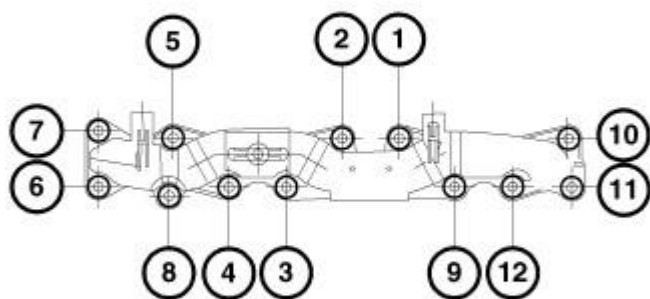


Fig. 390: Exhaust Manifold Bolt Tightening Sequence
Courtesy of CHRYSLER LLC

1. Clean the exhaust manifold and cylinder head surfaces.
2. Install a new exhaust manifold gasket.
3. Install exhaust manifold and tighten nuts finger.
4. Using the sequence shown in illustration, tighten nuts to 36 N.m (27 ft. lbs.).
5. Repeat the tightening procedure at the same torque.

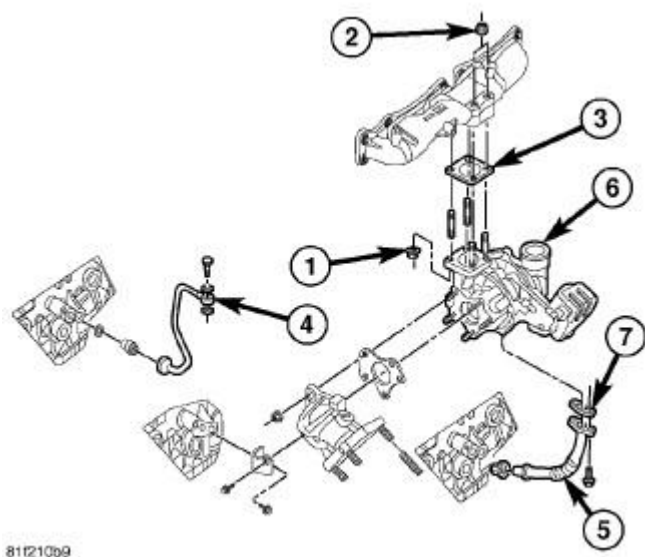


Fig. 391: Turbocharger Assembly & Fasteners
Courtesy of CHRYSLER LLC

6. Install the turbocharger (6). Refer to **TURBOCHARGER, INSTALLATION.**

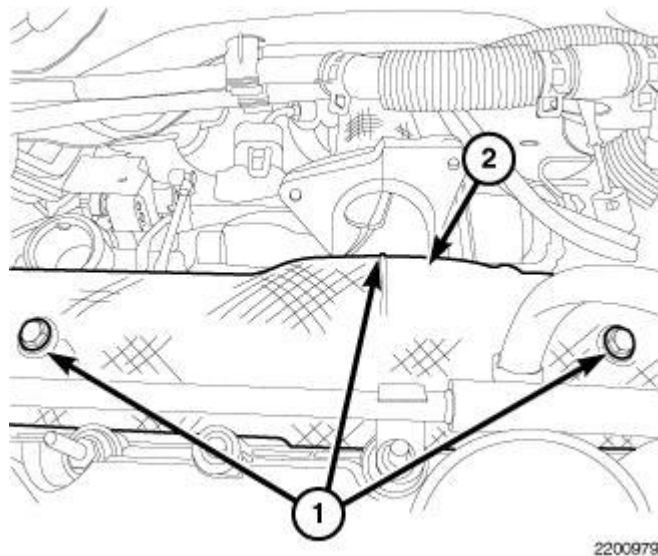


Fig. 392: Exhaust Manifold Heat Shield & Bolts
Courtesy of CHRYSLER LLC

7. Install the right front inner splash shield.
8. Install the belly pan.
9. Install the exhaust manifold heat shield (2). Tighten bolts to 33 N.m (24 ft. lbs.).

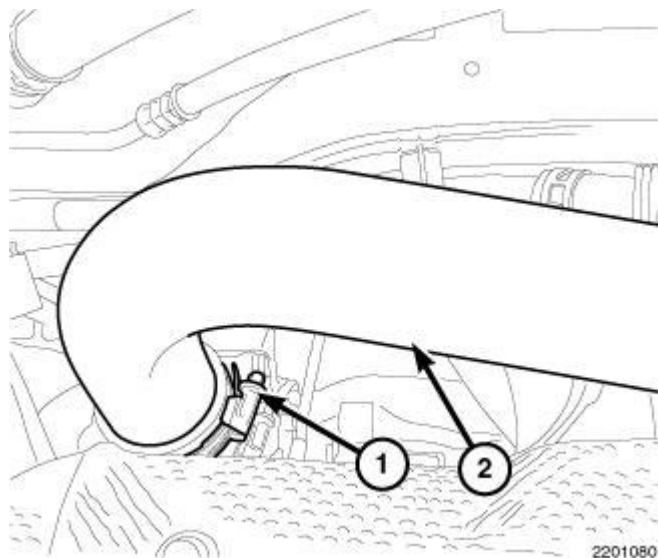


Fig. 393: Charge Air Cooler Inlet Hose & Clamp
Courtesy of CHRYSLER LLC

10. Connect the charge air cooler inlet hose (2) to the turbocharger and tighten clamp (1).

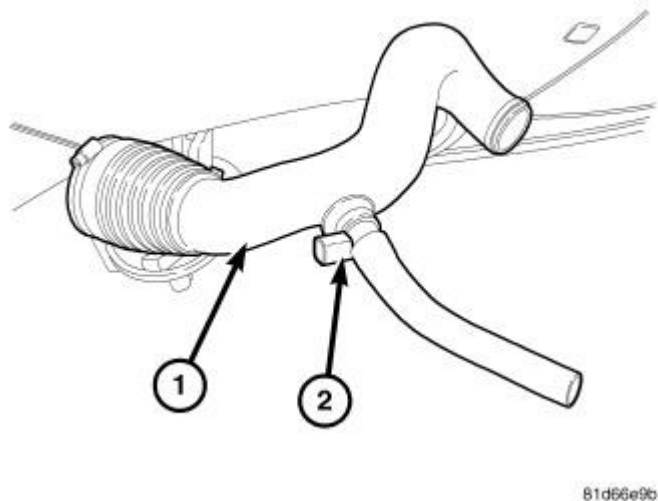


Fig. 394: Turbocharger Air Inlet Tube & Crankcase Vent Hose Heater Electrical Connector
Courtesy of CHRYSLER LLC

11. Install the air inlet tube to the turbocharger.
12. Connect the crankcase vent hose heater electrical connector (2).

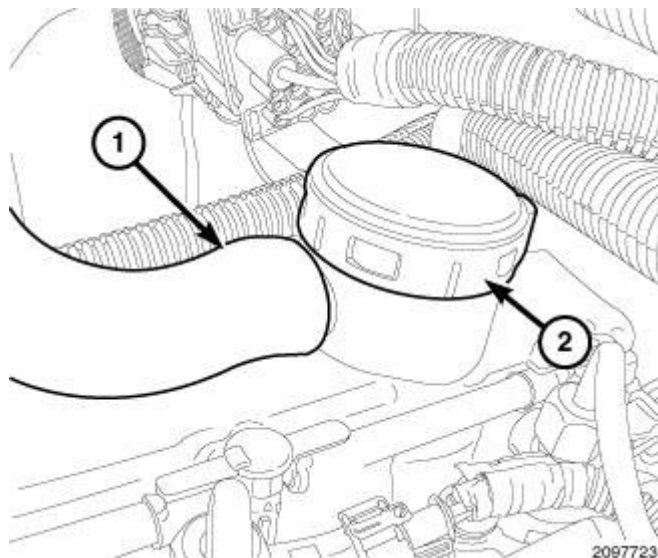


Fig. 395: Crankcase Vent Hose & Oil Separator
Courtesy of CHRYSLER LLC

13. Connect the crankcase vent hose (1) to the oil separator (2).
14. Install the air cleaner body. Refer to **BODY, AIR CLEANER, INSTALLATION**.
15. Install the engine cover.
16. Connect the negative battery cable.

MANIFOLD, INTAKE

REMOVAL

REMOVAL - INTAKE MANIFOLD

1. Remove the engine cover.
2. Disconnect the negative battery cable.
3. Drain the coolant. Refer to **STANDARD PROCEDURE** .

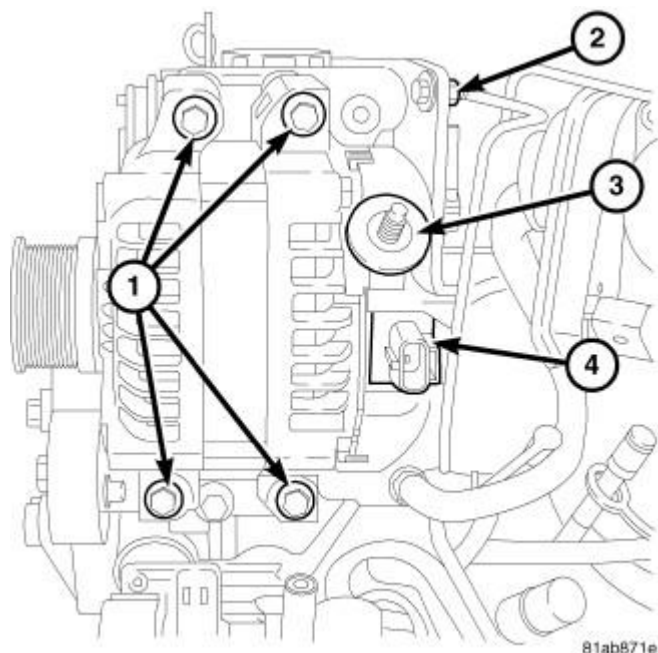


Fig. 396: Generator

Courtesy of CHRYSLER LLC

4. Remove the accessory drive belt. Refer to **BELT, SERPENTINE, REMOVAL**.
5. Disconnect the generator connector (4).
6. Remove the generator feed wire (3).
7. Remove the bolts (1) and the generator.
8. Remove the generator brace bolt (2).
9. Remove the generator mounting bracket.

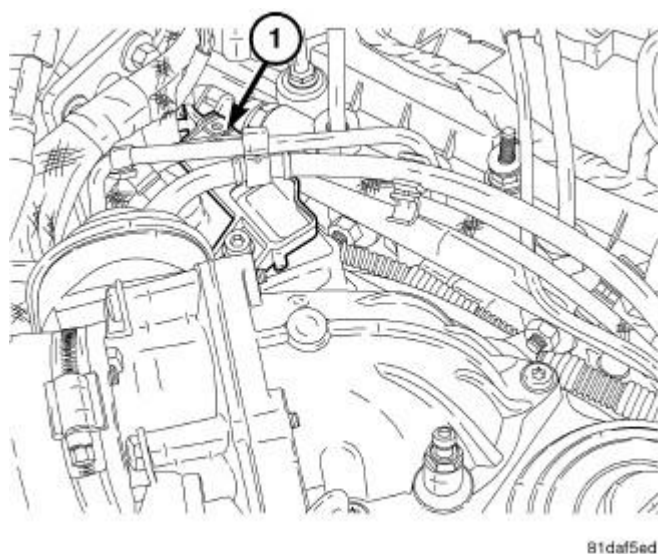


Fig. 397: IAT/BPS Sensor Harness Connector

Courtesy of CHRYSLER LLC

10. Disconnect the IAT/BPS sensor harness connector (1).

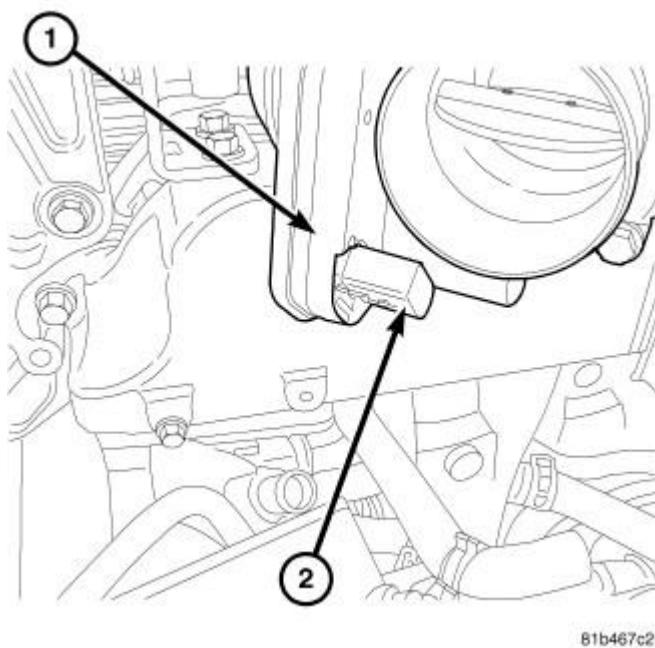


Fig. 398: EGR Air Flow Control Valve Harness Connector
Courtesy of CHRYSLER LLC

11. Disconnect the EGR air flow control valve harness connector (2).

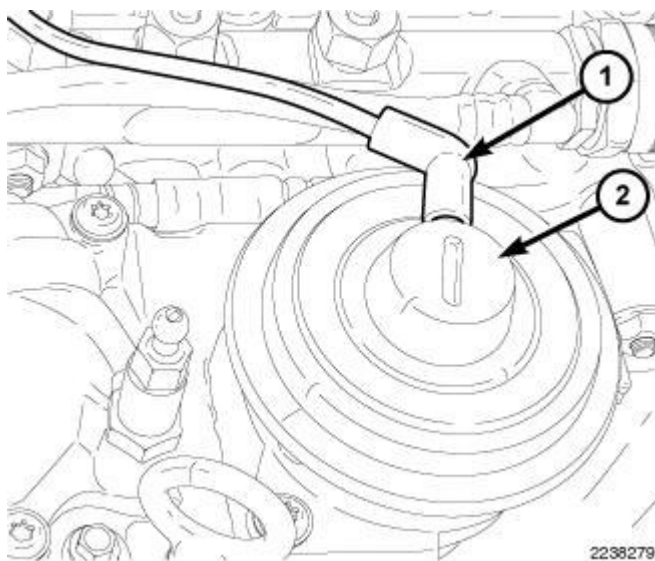


Fig. 399: Vacuum Line & EGR Valve
Courtesy of CHRYSLER LLC

12. Disconnect the vacuum line (1) to the EGR valve (2).

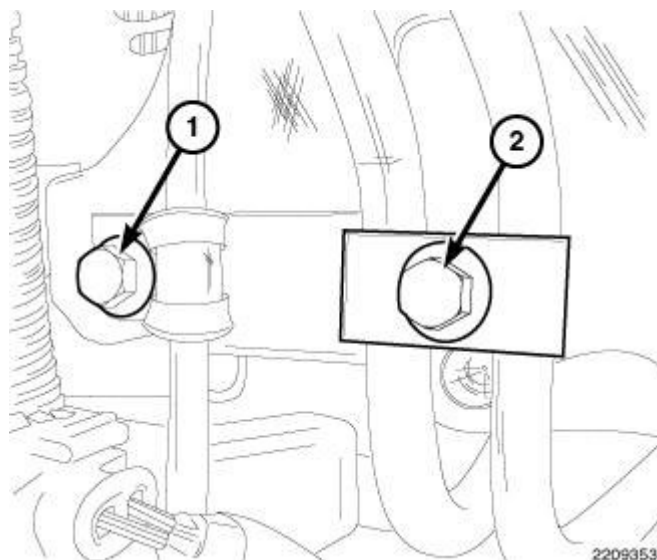


Fig. 400: High Pressure Fuel Feed Line To Fuel Rail Bolt & Fuel Feed And Return Line Bracket Bolt

Courtesy of CHRYSLER LLC

13. Remove the high pressure fuel feed line to fuel rail bolt (1) attaching fuel line to intake manifold.
14. Remove the fuel feed and return line bracket bolt (2) attaching fuel lines to intake manifold.

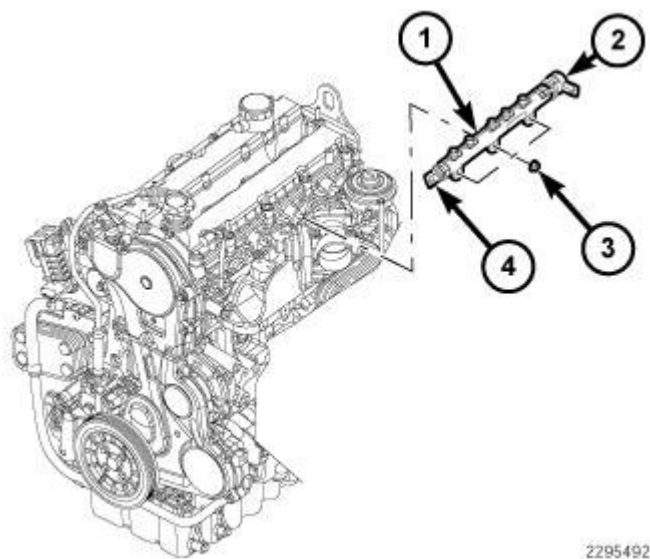


Fig. 401: Fuel Rail & Mounting Nuts

Courtesy of CHRYSLER LLC

15. Remove the fuel rail (1). Refer to **RAIL, FUEL, REMOVAL** .

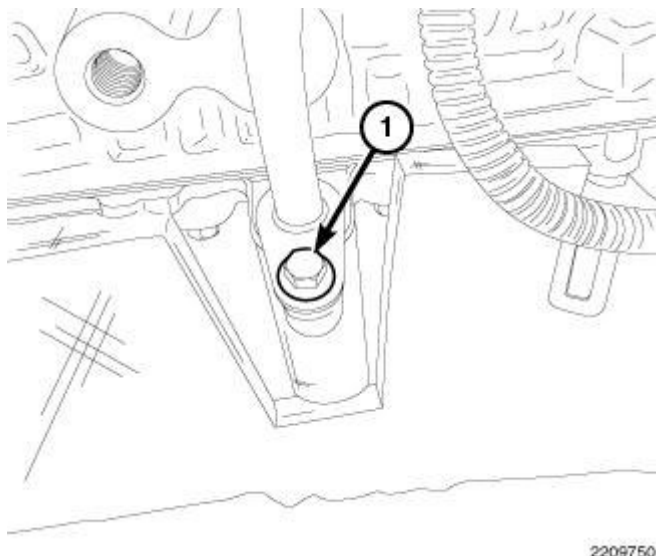


Fig. 402: Oil Level Indicator Tube Lower Bolt
Courtesy of CHRYSLER LLC

16. Remove lower bolt (1) from the oil indicator tube.


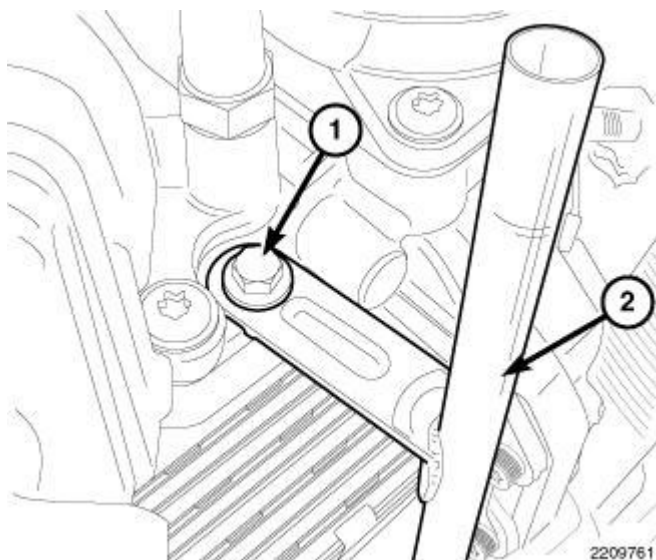


Fig. 403: Oil Level Indicator Tube & Upper Bolt
Courtesy of CHRYSLER LLC


17. Remove upper bolt (1) and the oil level indicator tube.

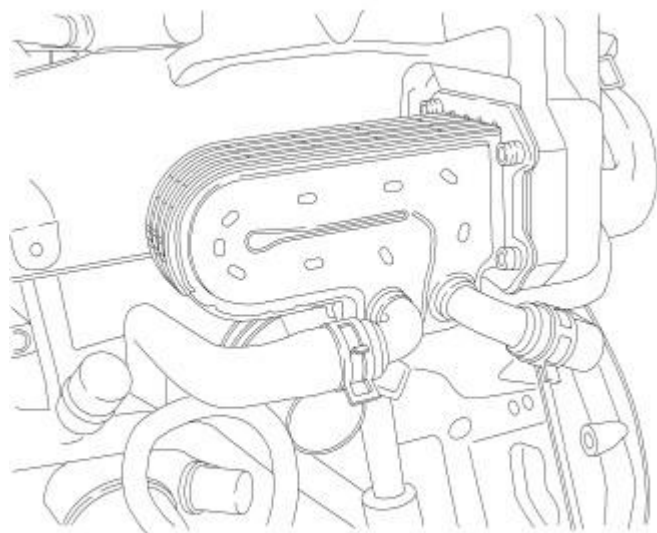

81ab86e4

Fig. 404: EGR Cooler
Courtesy of CHRYSLER LLC

18. Remove coolant hoses from the EGR cooler.
19. Remove bolts and the EGR cooler.

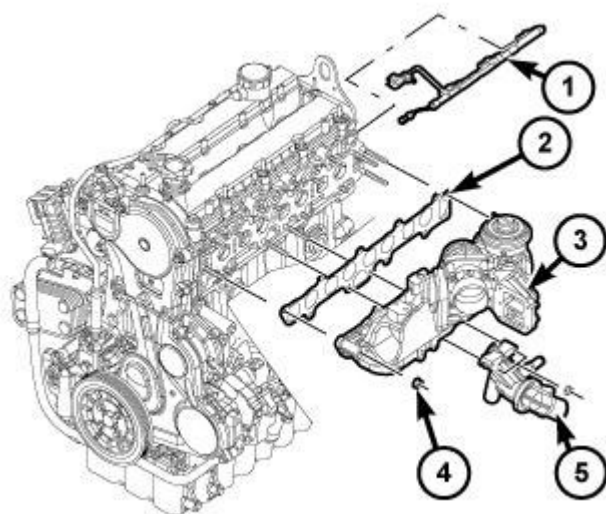


2238678

Fig. 405: Glow Plug Harness, Gasket, Intake Manifold, Fasteners & Thermostat Housing
Courtesy of CHRYSLER LLC

20. Disconnect and position aside the glow plug harness (1).
21. Remove the thermostat housing (5).
22. Remove the intake manifold fasteners (4).
23. Remove the intake manifold (3) and the gasket (2).

INSTALLATION


INSTALLATION - INTAKE MANIFOLD

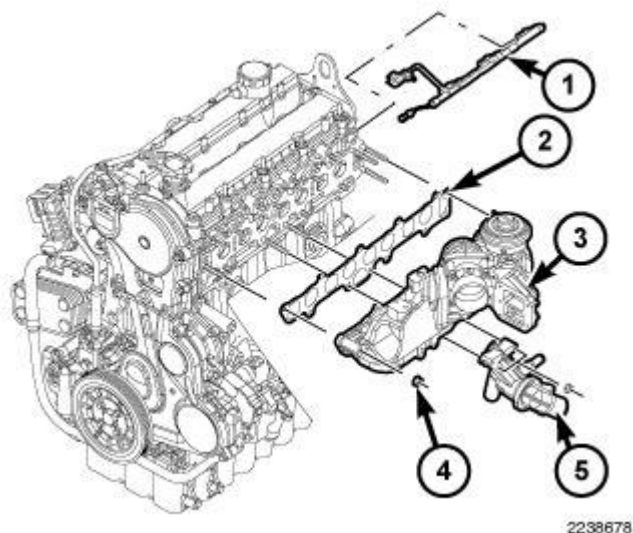

2238678

Fig. 406: Glow Plug Harness, Gasket, Intake Manifold, Fasteners & Thermostat Housing
Courtesy of CHRYSLER LLC


1. Clean and inspect the gasket surface area of the intake manifold and the cylinder head.
2. Install a new intake manifold gasket (2).
3. Install the intake manifold (3).
4. Install the thermostat housing (5).
5. Reposition glow plug harness (1) and connect the glow plug connectors.

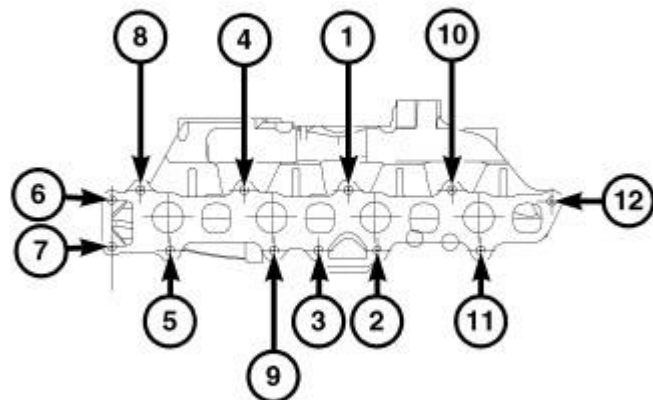

81adbf3b

Fig. 407: Intake Manifold Bolt Tightening Sequence
Courtesy of CHRYSLER LLC


6. Using the tightening sequence in the illustration, tighten the intake manifold nuts to 25 N.m (18 ft. lbs.).

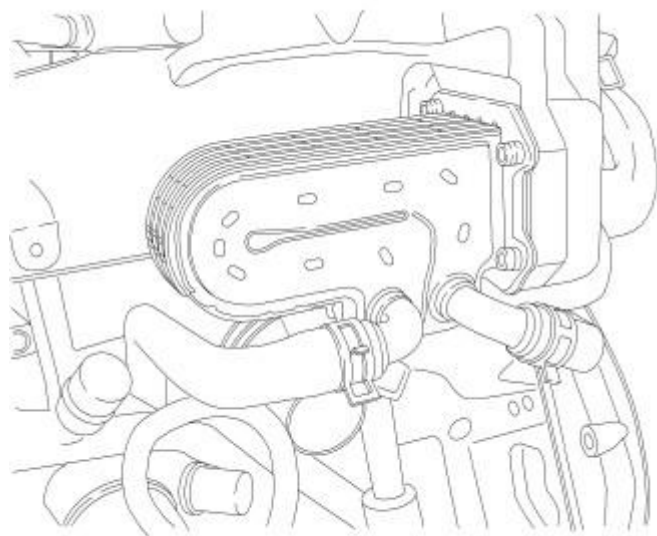

81ab86e4

Fig. 408: EGR Cooler
Courtesy of CHRYSLER LLC


7. Install the EGR cooler. Tighten bolts to 15 N.m (133 in. lbs.).
8. Install coolant hoses to the EGR cooler.

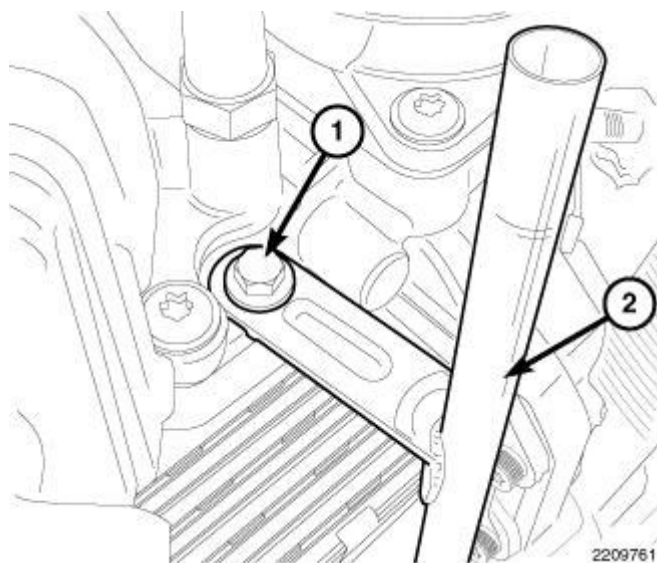

2209761

Fig. 409: Oil Level Indicator Tube & Upper Bolt
Courtesy of CHRYSLER LLC


9. Install the oil level indicator tube (2). Tighten upper bolt (1) to 11 N.m (97 in. lbs.).

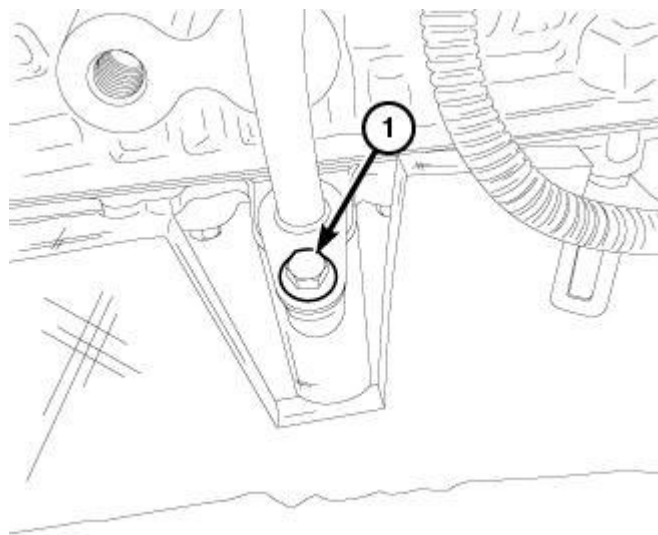

2209750

Fig. 410: Oil Level Indicator Tube Lower Bolt
Courtesy of CHRYSLER LLC

10. Install the oil indicator lower bolt. Tighten to lower bolt (1) to 11 N.m (97 in. lbs.).

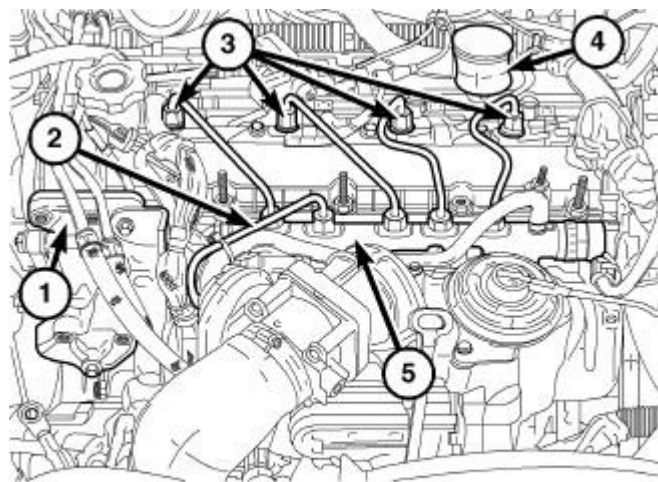

81daf5dc

Fig. 411: High Pressure Fuel Line & Injector Fuel Lines
Courtesy of CHRYSLER LLC

11. Install the fuel rail (5). Refer to **RAIL, FUEL, INSTALLATION** .

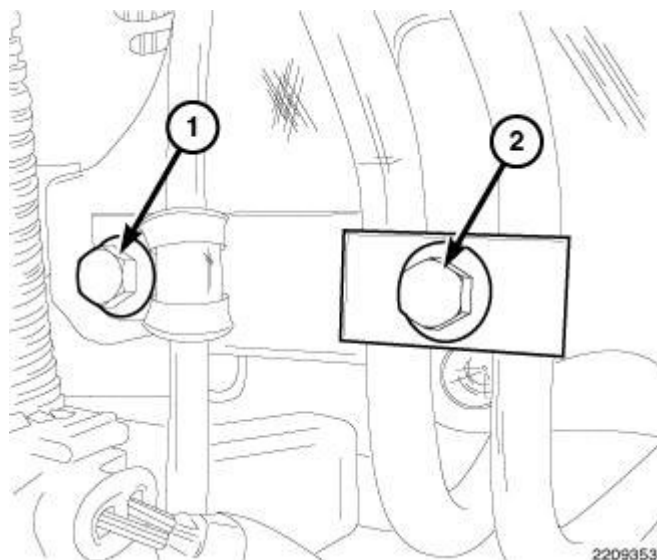


Fig. 412: High Pressure Fuel Feed Line To Fuel Rail Bolt & Fuel Feed And Return Line Bracket Bolt

Courtesy of CHRYSLER LLC

12. Install the fuel feed and return line bracket bolt (2) attaching fuel lines to intake manifold. Tighten bolt to 15 N.m (133 in. lbs.).
13. Install the high pressure fuel feed line to fuel rail bolt (1) attaching fuel line to intake manifold. Tighten bolt to 15 N.m (133 in. lbs.).


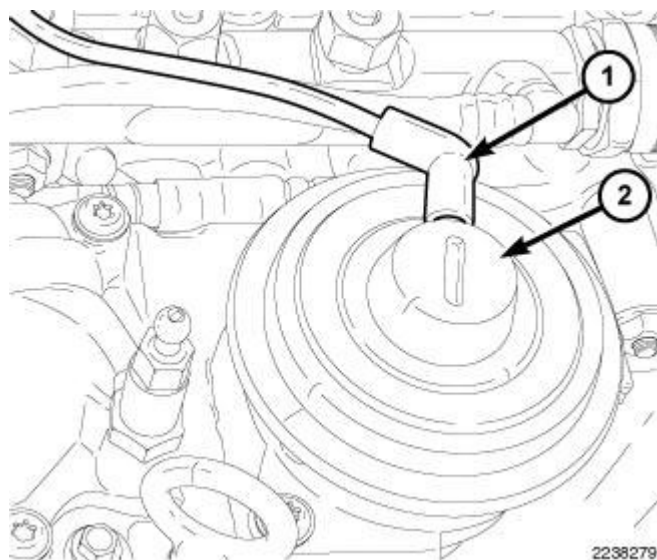


Fig. 413: Vacuum Line & EGR Valve

Courtesy of CHRYSLER LLC


14. Connect the vacuum line (1) to the EGR valve (2).

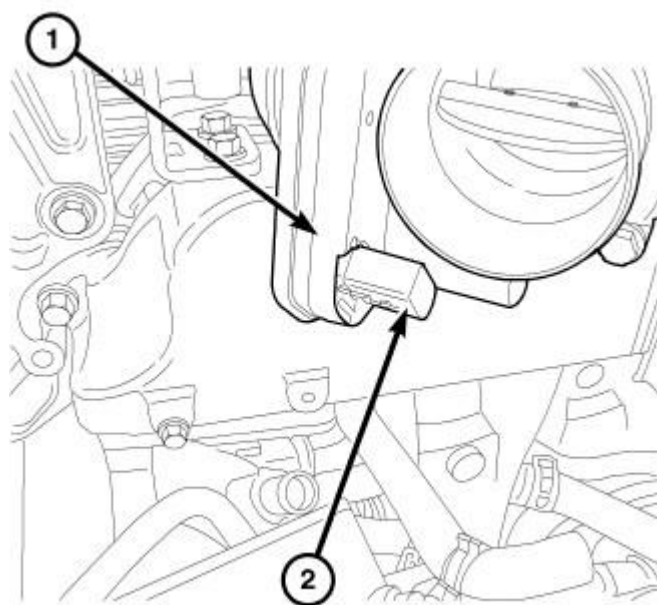

81b467c2

Fig. 414: EGR Air Flow Control Valve Harness Connector
Courtesy of CHRYSLER LLC

15. Connect the EGR air flow control valve harness connector (2).

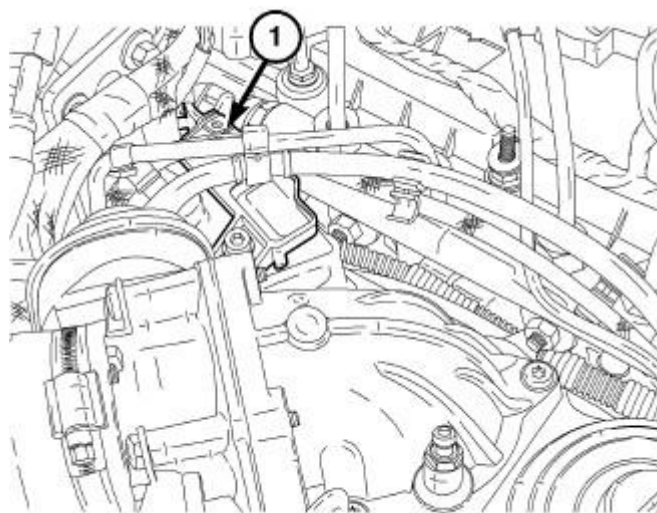

81daf5ed

Fig. 415: IAT/BPS Sensor Harness Connector
Courtesy of CHRYSLER LLC

16. Connect the IAT/BPS sensor harness connector (1).

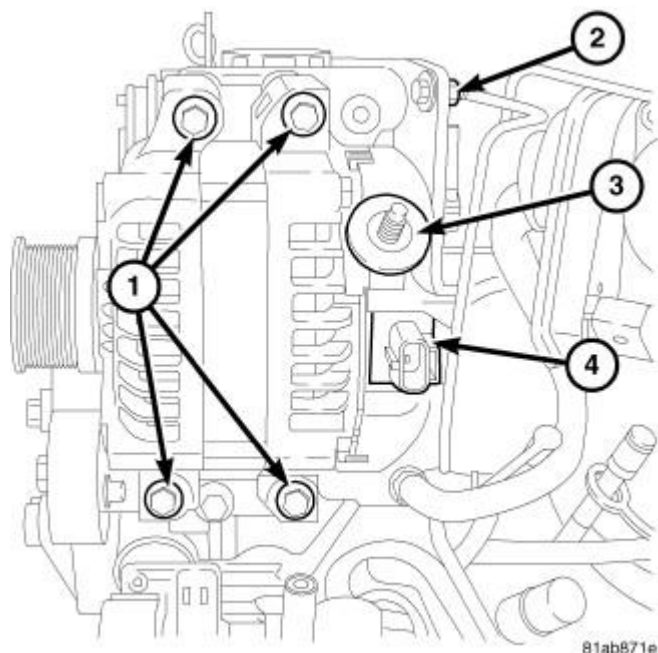


Fig. 416: Generator

Courtesy of CHRYSLER LLC

17. Install the generator mounting bracket. Tighten bolts to 45 N.m (33 ft. lbs.).
18. Install the generator brace bolt (2) Tighten bolt to 11 N.m (97 in. lbs.).
19. Install the generator. Tighten bolts (1) to 33 N.m (24 ft. lbs.).
20. Connect the generator connector (4).
21. Install the battery feed wire to the generator (3).
22. Install the accessory drive belt. Refer to **BELT, SERPENTINE, INSTALLATION** .
23. Fill the coolant. Refer to **STANDARD PROCEDURE** .
24. Connect the negative battery cable.
25. Install the engine cover.

TURBOCHARGER SYSTEM

TURBOCHARGER

REMOVAL

TURBOCHARGER

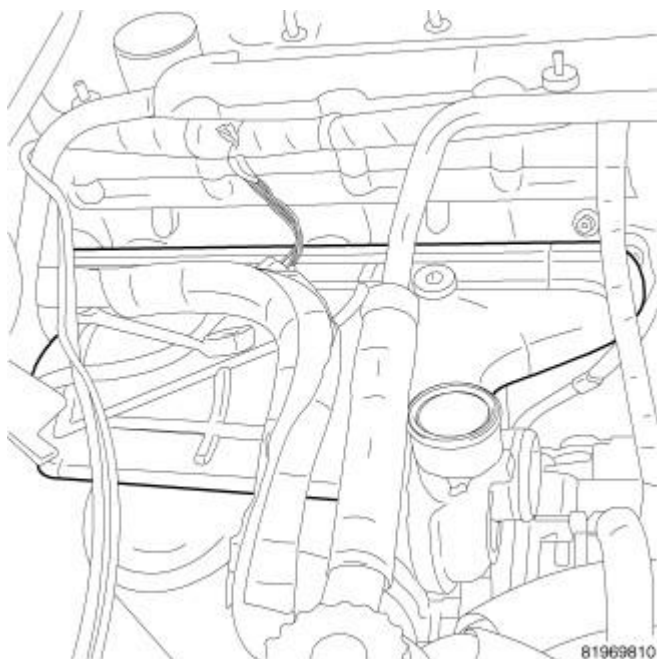


Fig. 417: Exhaust Manifold Heat Shield

Courtesy of CHRYSLER LLC

1. Disconnect negative battery cable.
2. Remove engine cover.
3. Disconnect the inlet air pressure sensor wiring harness connector and disconnect the air outlet duct from the turbocharger.
4. Remove air inlet tube from turbocharger.
5. Remove the exhaust manifold heat shield. Refer to **MANIFOLD, EXHAUST, REMOVAL**.

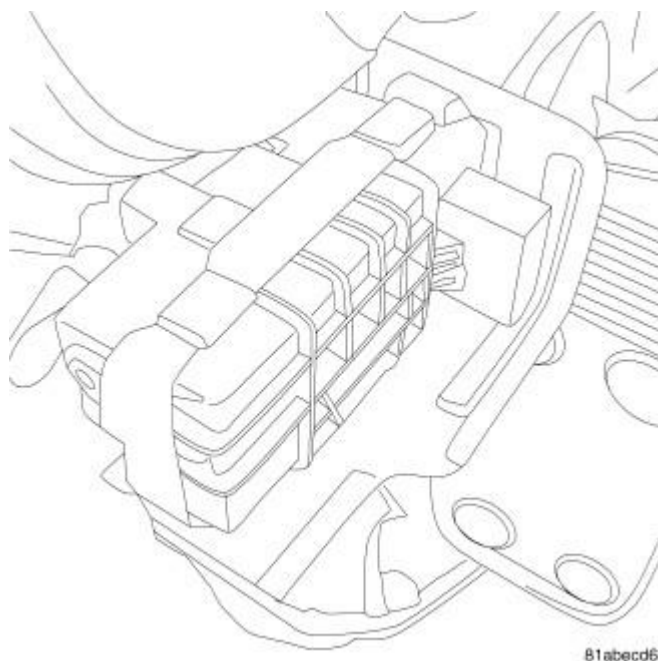


Fig. 418: Boost Pressure Solenoid Harness Connector
Courtesy of CHRYSLER LLC

6. Disconnect the boost pressure solenoid harness connector.

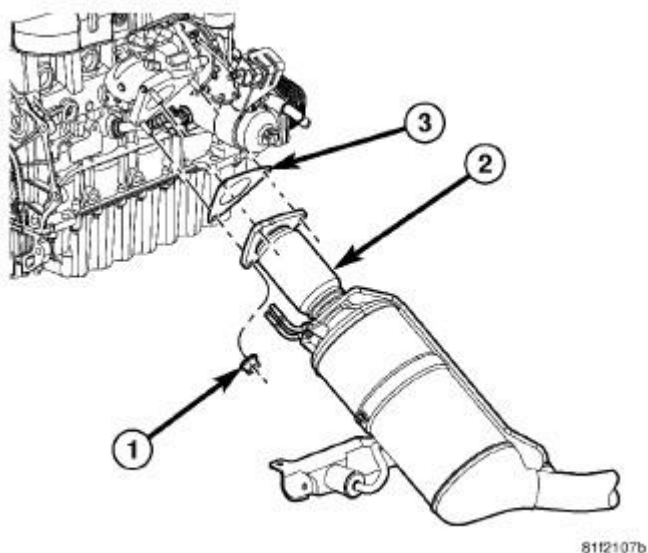


Fig. 419: Diesel Oxidation Catalyst (DOC)/Diesel Particulate Filter (DPF) & Fasteners
Courtesy of CHRYSLER LLC

7. Remove the fasteners (1) from the upstream side of the diesel particulate filter (2).

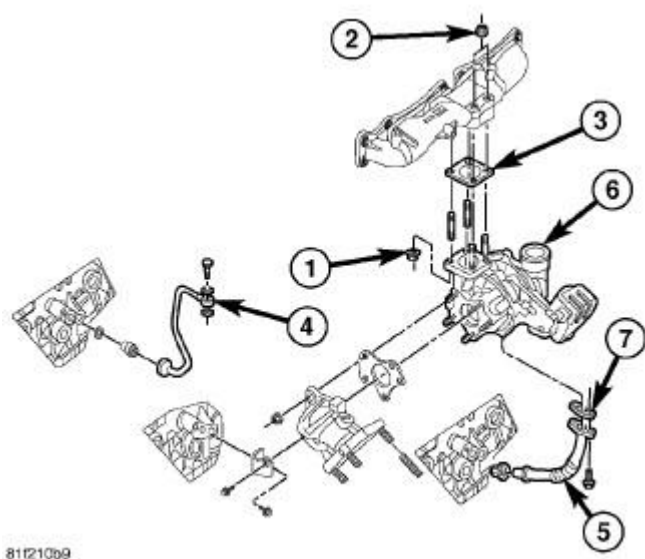


Fig. 420: Turbocharger Assembly & Fasteners
Courtesy of CHRYSLER LLC

8. Remove the bolts from the turbocharger to engine bracket.

9. Remove the engine oil cooler.
10. Remove the turbocharger oil lines (4 and 5).
11. Remove the turbocharger to exhaust manifold fasteners (1 and 2).
12. Remove turbocharger (6).
13. If damaged, remove oil line fitting from cylinder block.

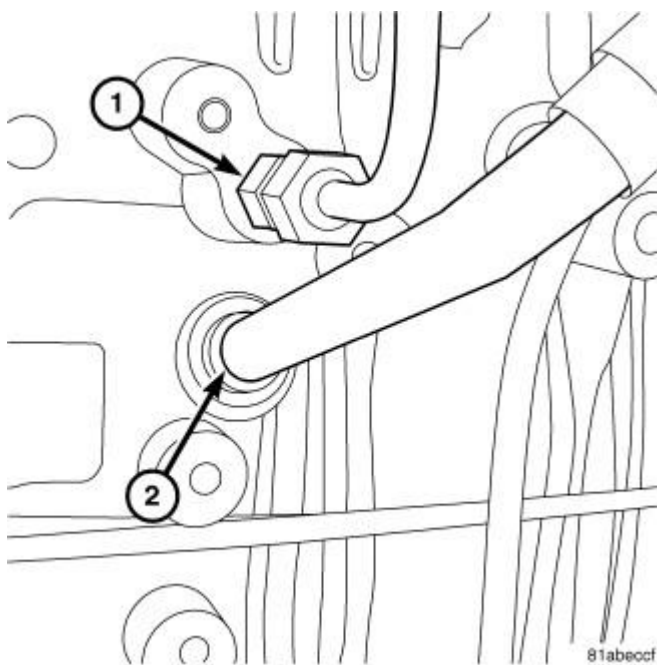
INSTALLATION**TURBOCHARGER**

Fig. 421: Turbocharger Oil Lines
Courtesy of CHRYSLER LLC

1. If removed, install oil line fitting (1). Tighten to 54 N.m (39 ft. lbs.)

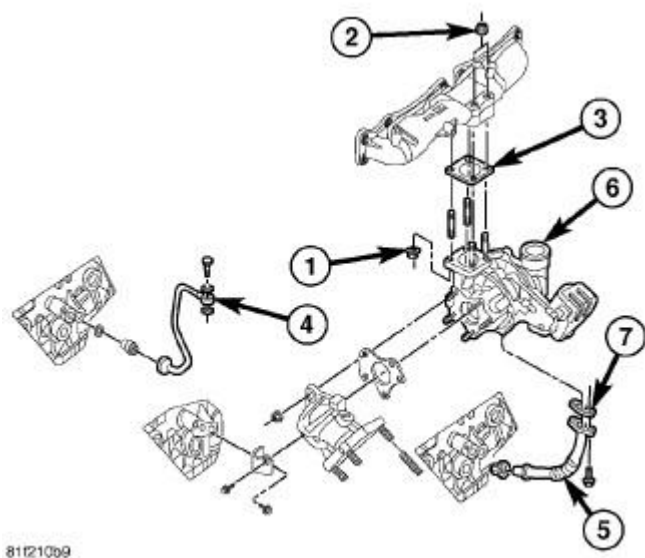


Fig. 422: Turbocharger Assembly & Fasteners
Courtesy of CHRYSLER LLC

2. Position turbocharger (6) to exhaust manifold with new gasket (3). Tighten retaining nuts (1) and (2) to 32 N.m (24 lbs. ft.).
3. Install the turbocharger oil lines (4 and 5). Tighten to 4.7 N.m (41 in. lbs.).

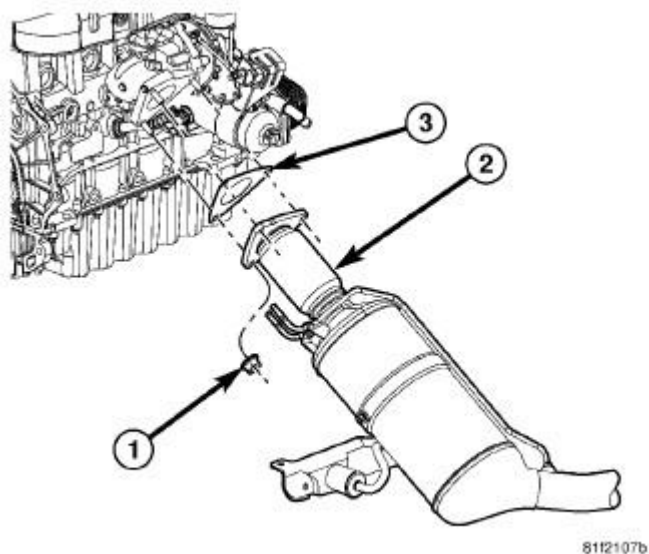


Fig. 423: Diesel Oxidation Catalyst (DOC)/Diesel Particulate Filter (DPF) & Fasteners
Courtesy of CHRYSLER LLC

4. Install the engine oil cooler.
5. Install the diesel particulate filter fasteners (1). Tighten to 34 N.m (25 ft. lbs.).

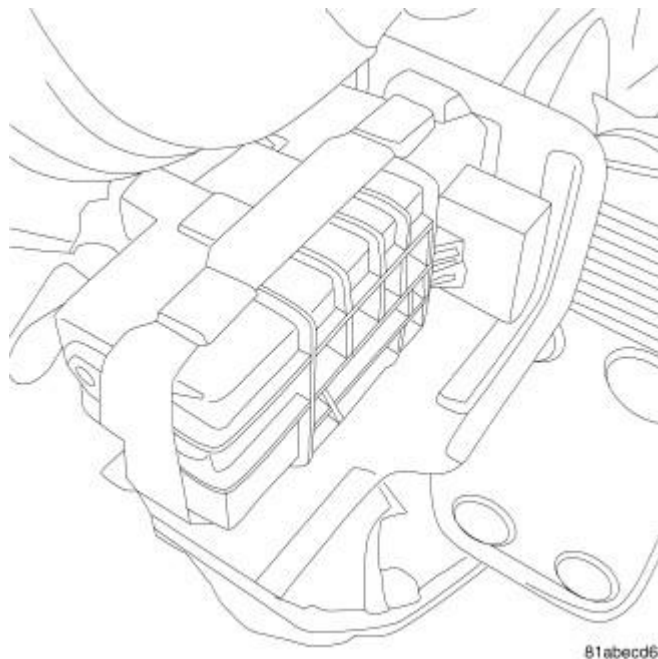


Fig. 424: Boost Pressure Solenoid Harness Connector
Courtesy of CHRYSLER LLC

6. Connect the boost pressure solenoid harness connector.

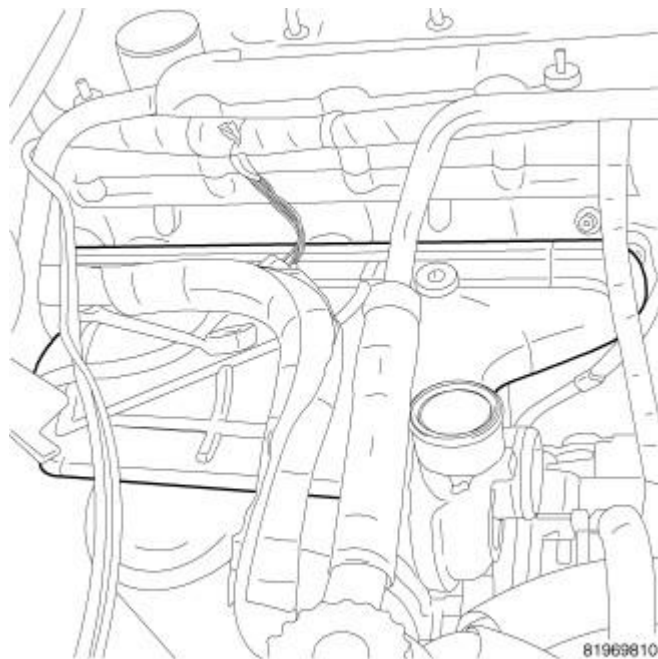


Fig. 425: Exhaust Manifold Heat Shield
Courtesy of CHRYSLER LLC


7. Install the exhaust manifold heat shield. Refer to **MANIFOLD, EXHAUST, INSTALLATION**.
8. Install the inlet air tube from the turbocharger.

9. Install the engine cover.

COOLER AND HOSES, CHARGE AIR

REMOVAL

REMOVAL

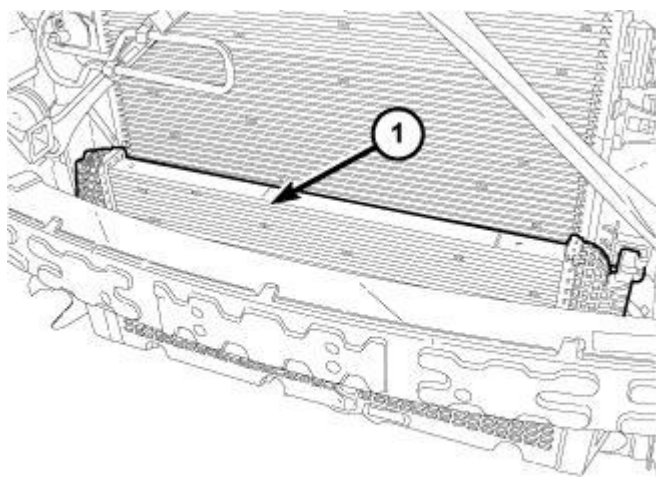

2721196

Fig. 426: Charge Air Cooler
Courtesy of CHRYSLER LLC

WARNING: If the engine was just turned off, the air intake system tubes may be hot.


NOTE: When servicing the Air Charge Cooler and/or Turbocharger, the Air Charger Hose (orange) seal located between the Air Charge Hose and Turbocharger must be replaced.

NOTE: Note the location of the rubber charge air cooler to A/C condenser and air charger cooler to radiator air seals. The seals are use to prevent overheating and improve charge air and A/C efficiency.

1. To remove the charge air cleaner (1), refer to the radiator removal procedure. Refer to **RADIATOR, ENGINE COOLING, REMOVAL**.

INSTALLATION

INSTALLATION

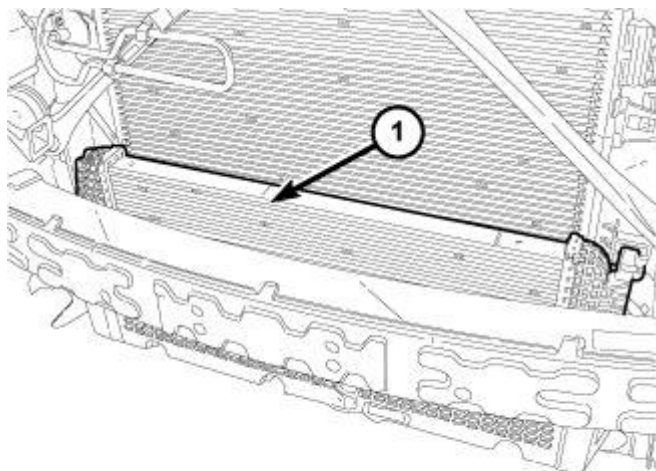

2721196

Fig. 427: Charge Air Cooler
Courtesy of CHRYSLER LLC

NOTE: When servicing the Air Charge Cooler and/or Turbocharger, the Air Charger Hose (orange) seal located between the Air Charge Hose and Turbocharger must be replaced.

NOTE: Care must be taken not to damage the charge air cooler fins and the fins of other ancillary cooler components.

1. To install the charge air cooler (1), refer to the radiator installation procedure. Refer to **RADIATOR, ENGINE COOLING, INSTALLATION**.

VALVE TIMING

STANDARD PROCEDURE

LOCKING ENGINE 90 DEGREES AFTER TDC

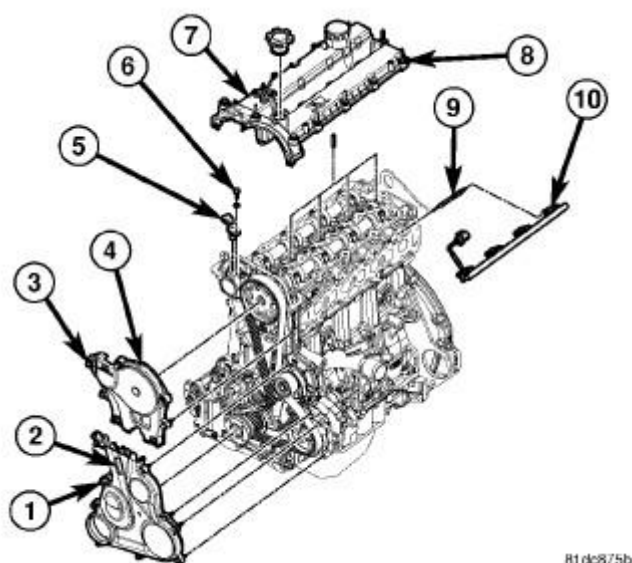


Fig. 428: Upper And Lower Front Covers With Fasteners
Courtesy of CHRYSLER LLC

1. Disconnect negative battery cable.
2. Remove the upper (4) and lower (2) front covers. Refer to **COVER(S), ENGINE TIMING, REMOVAL**.

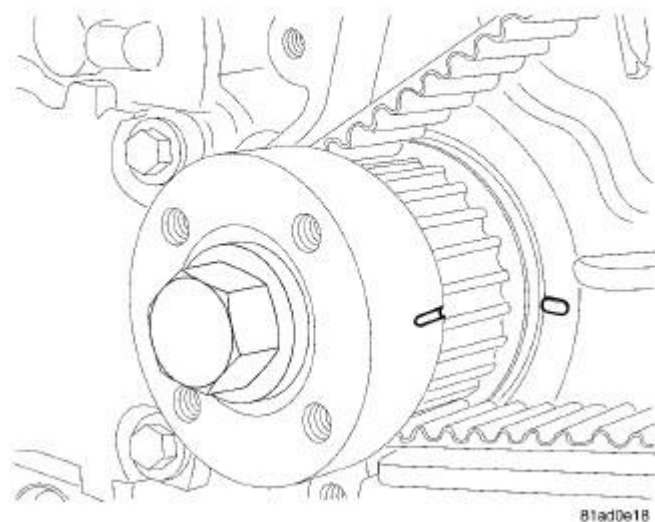


Fig. 429: Crankshaft Timing Belt Drive Sprocket & Timing Belt Cover Aligned
Courtesy of CHRYSLER LLC

3. Rotate the engine until the 90 degrees ATDC marks on the crankshaft timing belt drive sprocket and

timing belt cover are aligned.

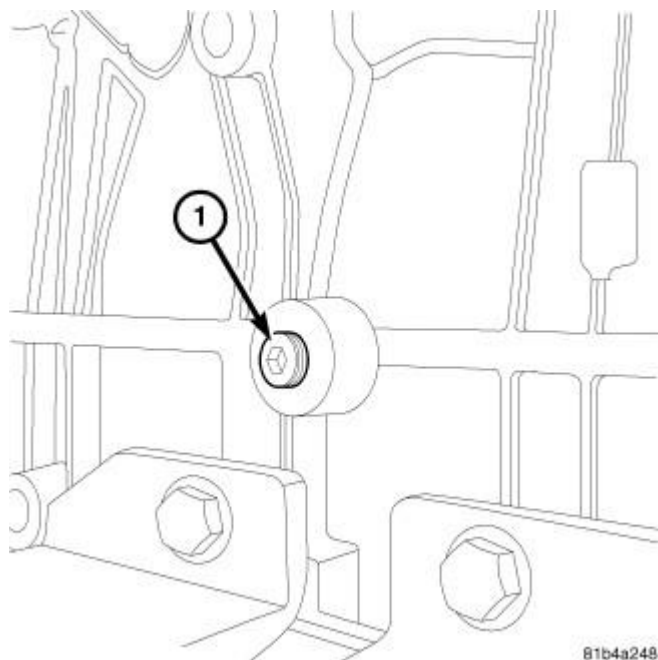


Fig. 430: Engine Block Plug
Courtesy of CHRYSLER LLC

4. Remove the engine block plug (1).

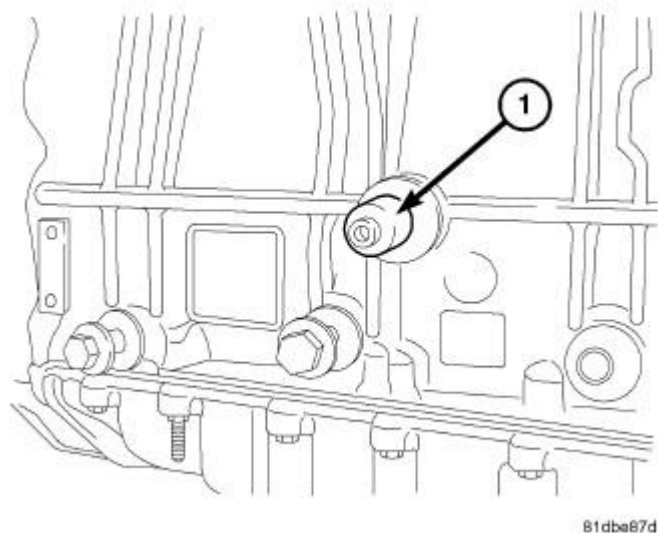


Fig. 431: Crankshaft Locking Tool
Courtesy of CHRYSLER LLC

5. Install the Crankshaft Locking Tool (special tool #VM.9992, Adapter, 90 Degree ATDC) into engine block. Make sure the Crankshaft Locking Tool (special tool #VM.9992, Adapter, 90 Degree ATDC) threads into the crankshaft. If it does not thread into the crankshaft, the crankshaft is not at 90 degrees ATDC. If necessary, realign the 90 degrees ATDC marks on the crankshaft timing belt drive sprocket and

timing belt cover.

CAMSHAFT TIMING PROCEDURE

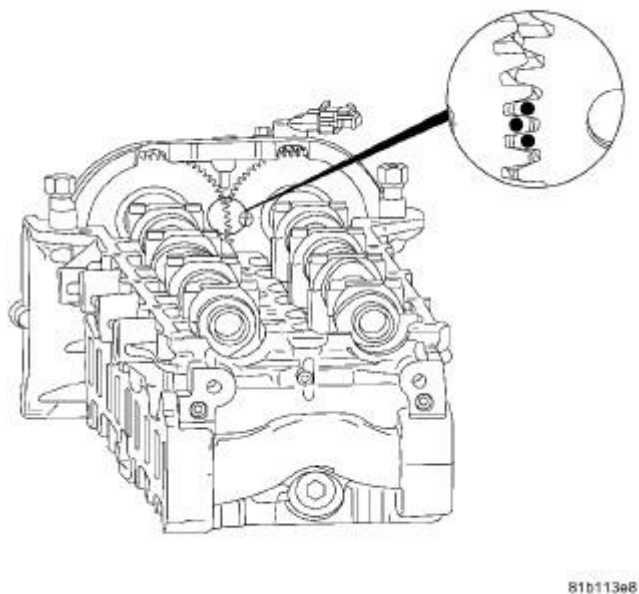


Fig. 432: Camshaft Timing Dots
Courtesy of CHRYSLER LLC

NOTE: In order to validate camshaft timing, the cylinder head cover and timing belt should already have been removed.

1. Line up the camshaft dots.

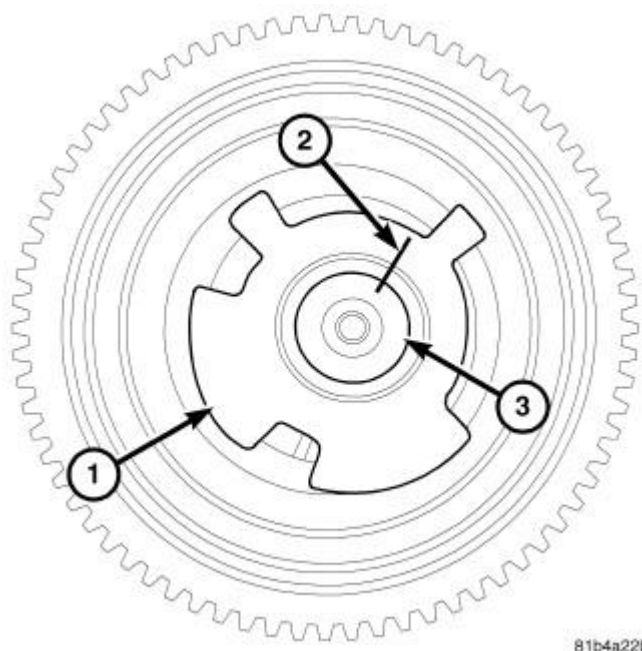


Fig. 433: Marking CMP Sensor Reluctor Wheel & Exhaust Camshaft
Courtesy of CHRYSLER LLC

CAUTION: Do not rotate the camshaft using the camshaft locking tool. The tone wheel may spin on the camshaft. If the tone wheel is rotated on the camshaft, the camshaft must be replaced.

2. Mark the camshaft tone wheel with a paint marker.

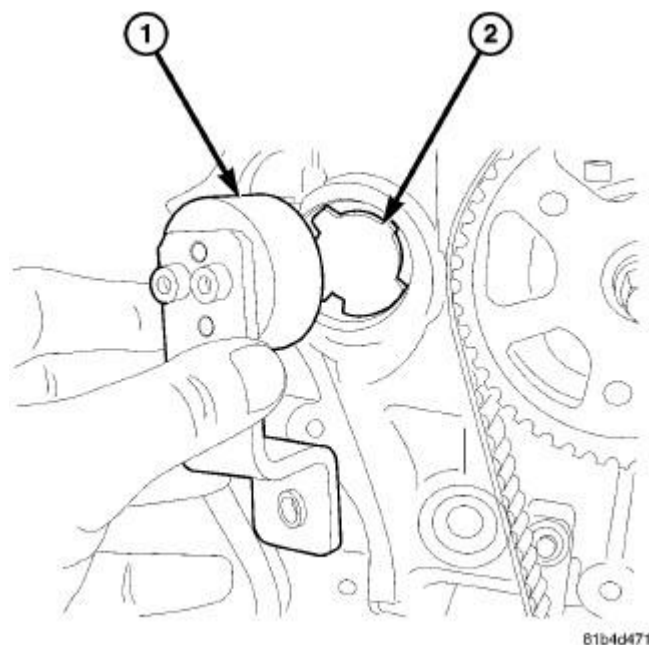


Fig. 434: Removing/Installing Camshaft Lock Tool
Courtesy of CHRYSLER LLC

3. Rotate the camshafts until the Camshaft Locking Tool (special tool #VM.9991, Alignment Tool, Camshaft Sprocket) can be installed.
4. Install the Camshaft Locking Tool (special tool #VM.9991, Alignment Tool, Camshaft Sprocket) (1).

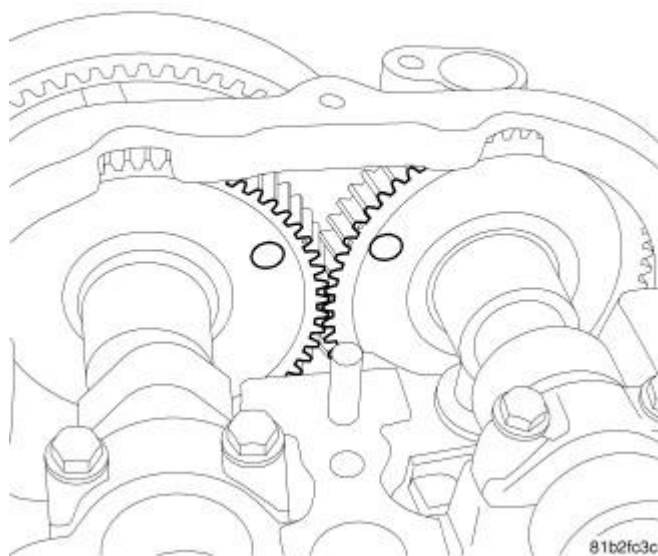



Fig. 435: Camshaft Marks At 90 Degrees ATDC
Courtesy of CHRYSLER LLC

5. Verify the camshafts are set correctly at 90 degrees ATDC as illustrated.

BELT, TIMING

REMOVAL


REMOVAL - TIMING BELT

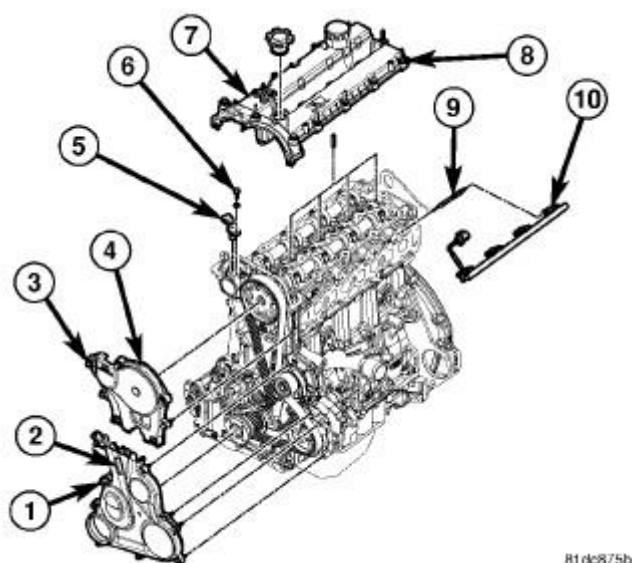

81dc875b

Fig. 436: Upper And Lower Front Covers With Fasteners
Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Remove the upper (4) and lower (2) outer timing belt covers. Refer to **COVER(S), ENGINE TIMING, REMOVAL**.

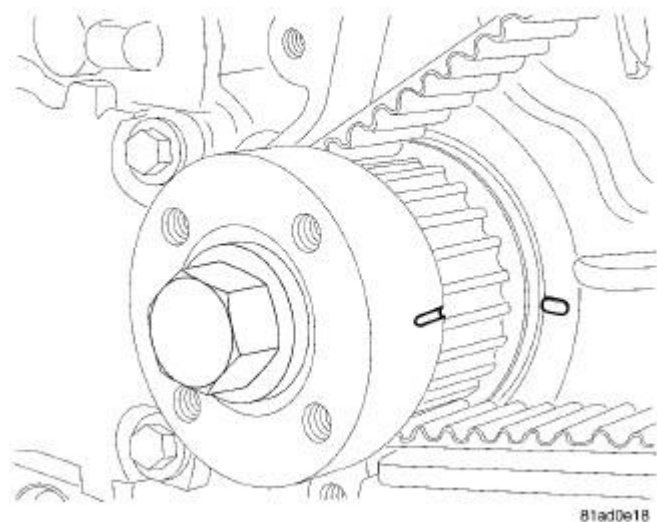

81ad0e18

Fig. 437: Crankshaft Timing Belt Drive Sprocket & Timing Belt Cover Aligned
Courtesy of CHRYSLER LLC

3. Rotate the engine by hand until the crankshaft 90° ATDC marks are aligned.

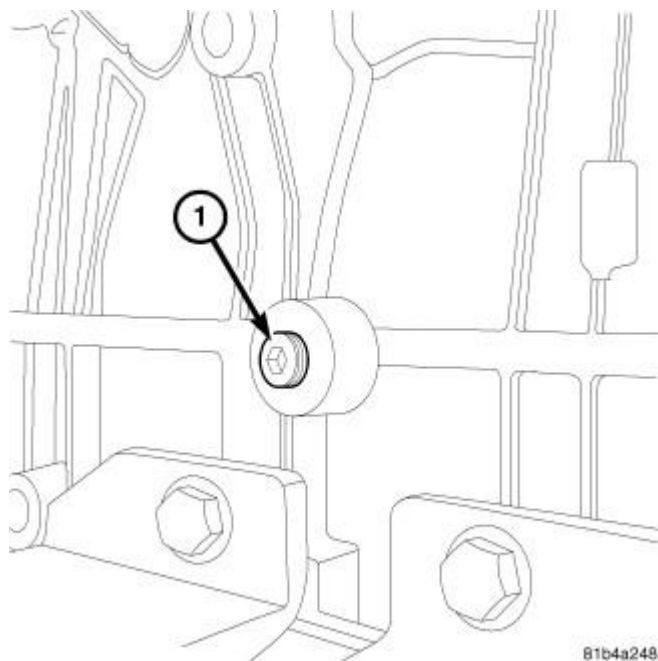


Fig. 438: Engine Block Plug
Courtesy of CHRYSLER LLC

4. Remove the engine block plug (1).

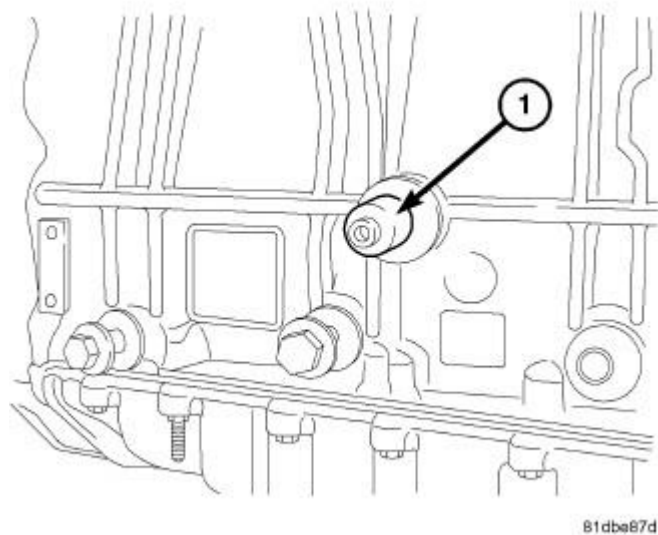


Fig. 439: Crankshaft Locking Tool
Courtesy of CHRYSLER LLC

5. Install the Crankshaft Locking Tool (special tool #VM.9992, Adapter, 90 Degree ATDC) (1).

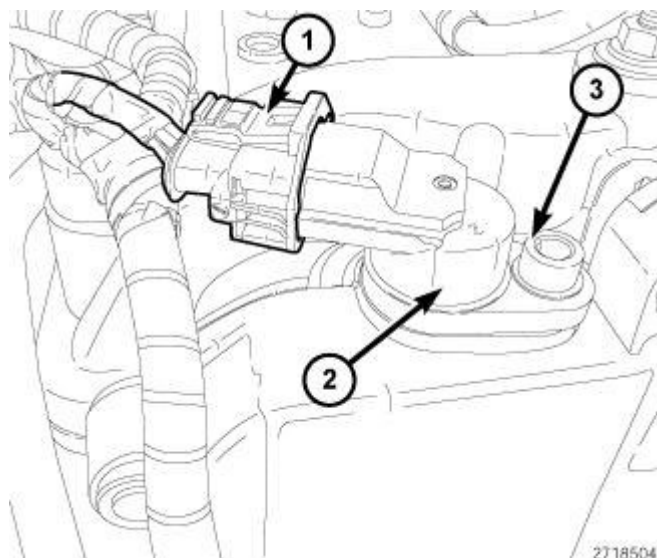


Fig. 440: Camshaft Position Sensor Harness Connector, Sensor & Bolt
Courtesy of CHRYSLER LLC

6. Disconnect the Camshaft Position Sensor (CMP) harness connector (1).
7. Remove bolt (3) the CMP sensor (2).

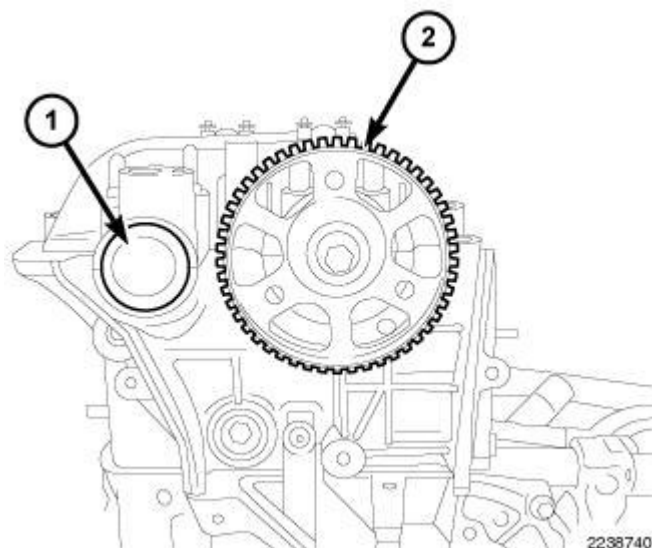


Fig. 441: Exhaust Camshaft Oil Seal & Camshaft Sprocket
Courtesy of CHRYSLER LLC

8. Remove the exhaust camshaft oil seal (1).

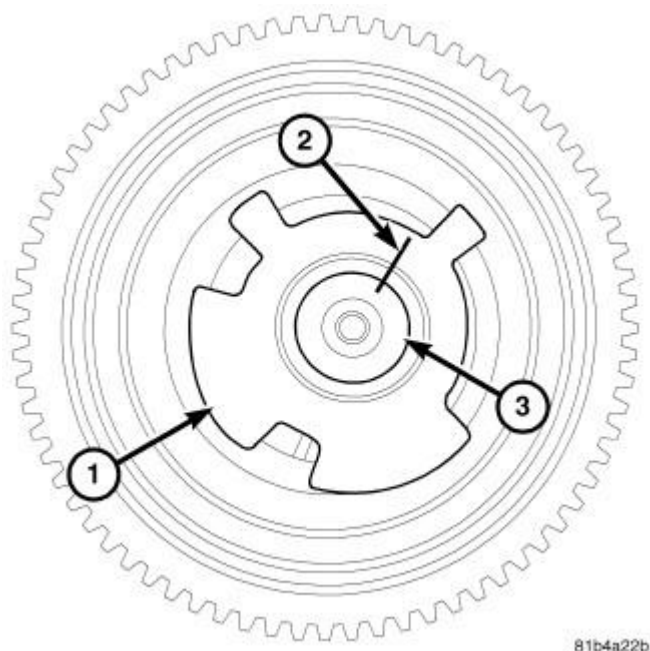


Fig. 442: Mark Across Reluctor Wheel & Exhaust Camshaft
 Courtesy of CHRYSLER LLC

9. Make a mark (2) across the reluctor wheel (1) and the exhaust camshaft (3). This mark will be used to verify that the reluctor wheel did not rotate on the camshaft during assembly.

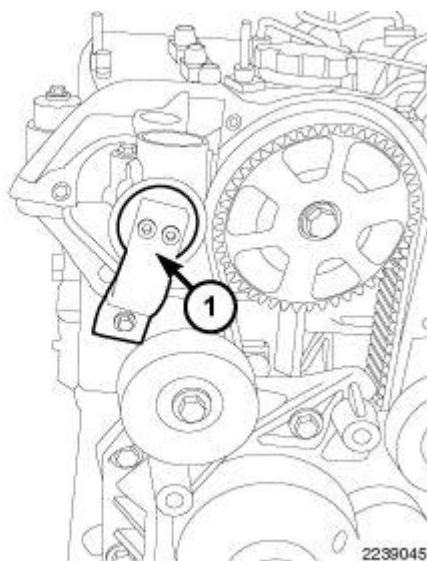


Fig. 443: Camshaft Locking Tool
 Courtesy of CHRYSLER LLC

NOTE: If it is suspected that the camshafts are not correctly timed to each other, refer to the camshaft timing procedure to reset the camshaft timing. Refer to Engine/Valve Timing - Standard Procedure.

10. Install the Camshaft Locking Tool (special tool #VM.9991, Alignment Tool, Camshaft Sprocket) (1). The crankshaft and camshafts are now locked at 90° ATDC.

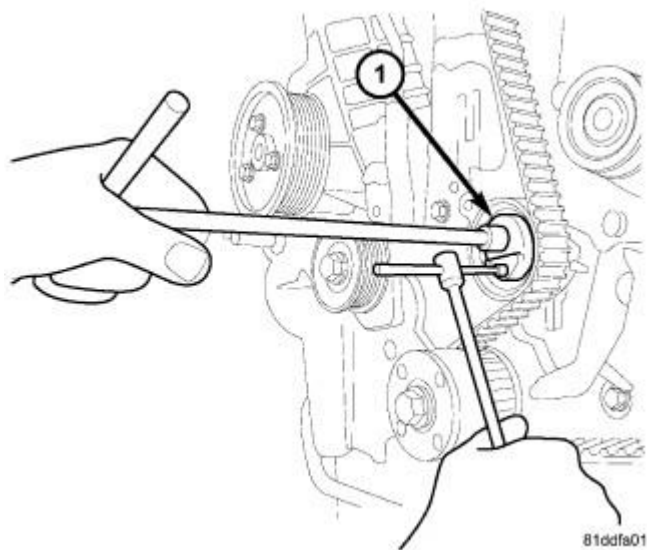


Fig. 444: Tighten/Loosen Timing Belt Tensioner Bolt
Courtesy of CHRYSLER LLC

11. Loosen the timing belt tensioner bolt (1), and remove the timing belt.

INSTALLATION

INSTALLATION - TIMING BELT

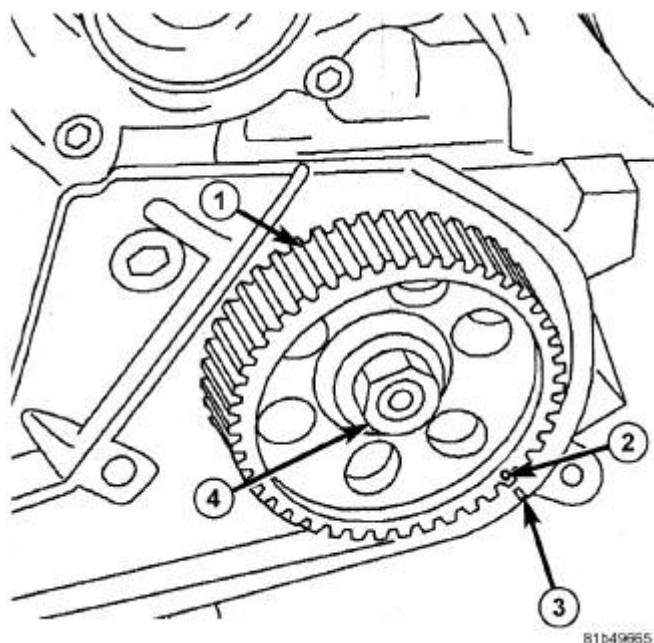


Fig. 445: Fuel Injection Pump Timing Marks
Courtesy of CHRYSLER LLC

1. Align the high pressure fuel pump sprocket timing mark (2) with the timing mark (3) on the block.

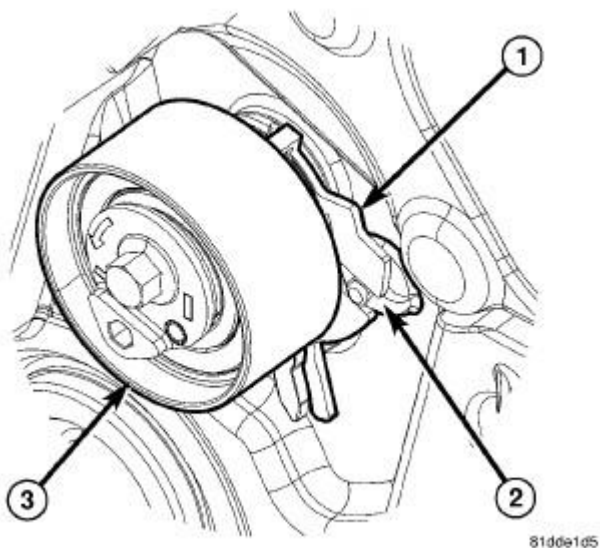


Fig. 446: Timing Belt Tensioner, Alignment Plate & Engine Cover Boss
Courtesy of CHRYSLER LLC

2. Verify that the bolt is finger tight and tensioner alignment plate (1) is aligned with the boss (2) on the front engine cover.

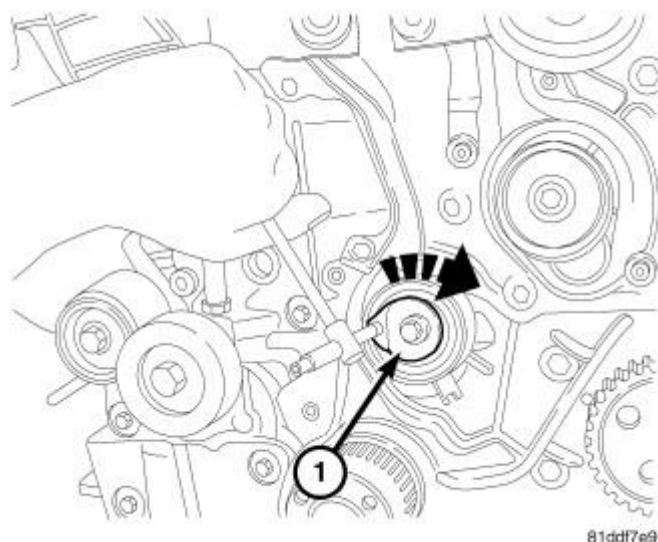


Fig. 447: Turning Timing Belt Tensioner Clockwise
Courtesy of CHRYSLER LLC

3. Turn the timing belt tensioner (1) clockwise to unload the tensioner enough for the timing belt to be installed.

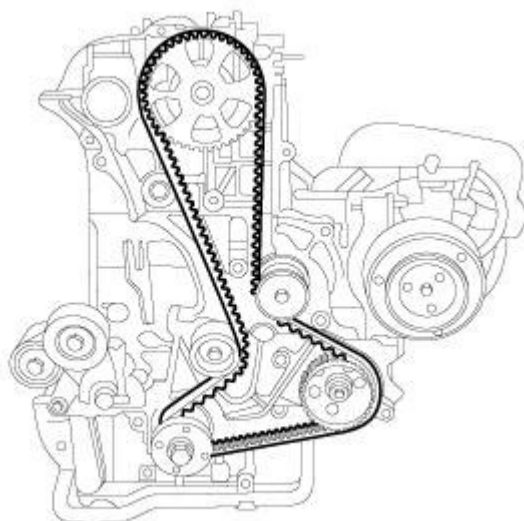


Fig. 448: Timing Belt Routing
Courtesy of CHRYSLER LLC

NOTE: DO NOT remove the timing belt from the package until it is going to be installed. DO NOT expose timing belt to oil, grease or water contamination. DO NOT crimp belt at a sharp angle. DO NOT clean belt, pulleys or tensioner with solvent. Check that pulleys and bearings are not seized or damaged before installing belt.

4. Install the timing belt on the components in the following order:

- Crankshaft sprocket (1)
- High pressure fuel pump (2)
- Water pump pulley (3)
- Intake camshaft pulley (4)
- Timing belt tensioner (5)

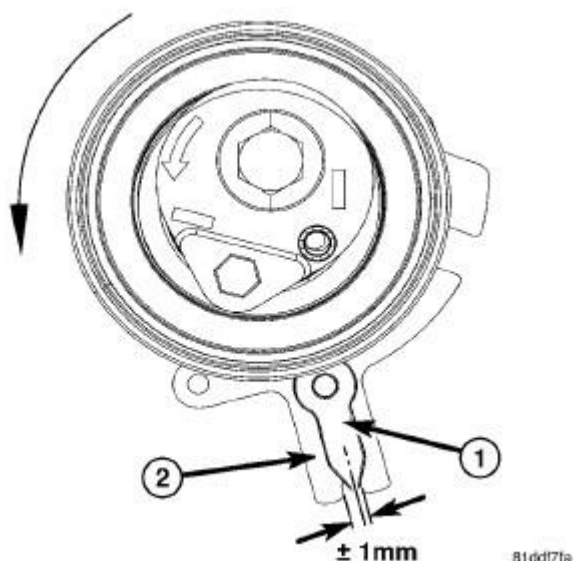


Fig. 449: Timing Belt Tensioner Load Indicator & Gauge
Courtesy of CHRYSLER LLC

NOTE: Turning the belt tensioner counter clockwise moves the pointer in a clockwise direction. Also, if the tensioner bolt is too loose this will cause the tensioner alignment slot to jump off the alignment boss on timing cover.

5. Adjust timing belt tensioner by lining up the load indicator arrow (1) to the center of the (2) tensioner load gage as illustrated.

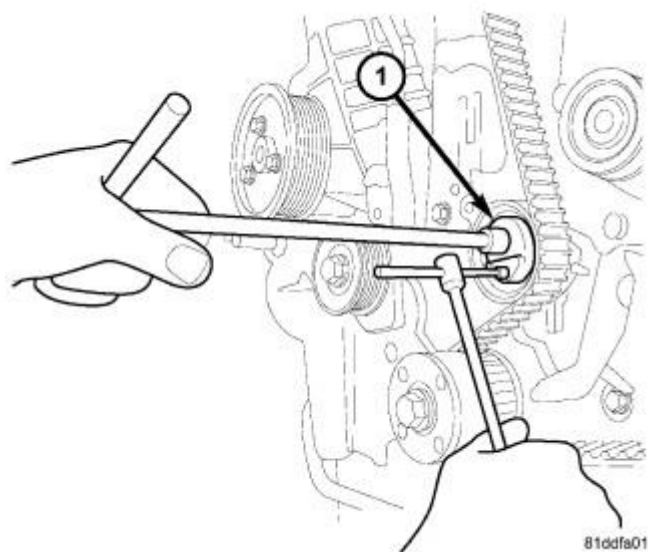


Fig. 450: Tighten/Loosen Timing Belt Tensioner Bolt
Courtesy of CHRYSLER LLC

6. Tighten the timing belt tensioner bolt to 28 N.m (21 ft. lbs.).

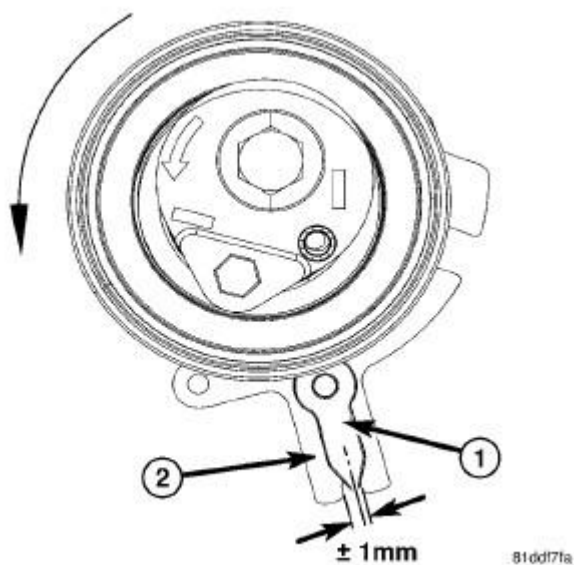


Fig. 451: Timing Belt Tensioner Load Indicator & Gauge
Courtesy of CHRYSLER LLC

7. Verify the tensioner load indicator (1) is still centered in the tensioner load gage (2).

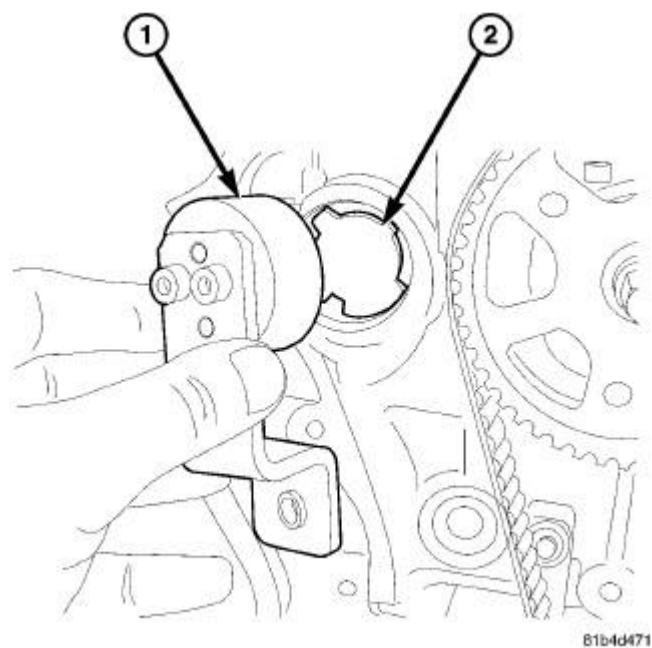


Fig. 452: Removing/Installing Camshaft Lock Tool
Courtesy of CHRYSLER LLC

8. Remove the Camshaft Locking Tool (special tool #VM.9991, Alignment Tool, Camshaft Sprocket) (1).

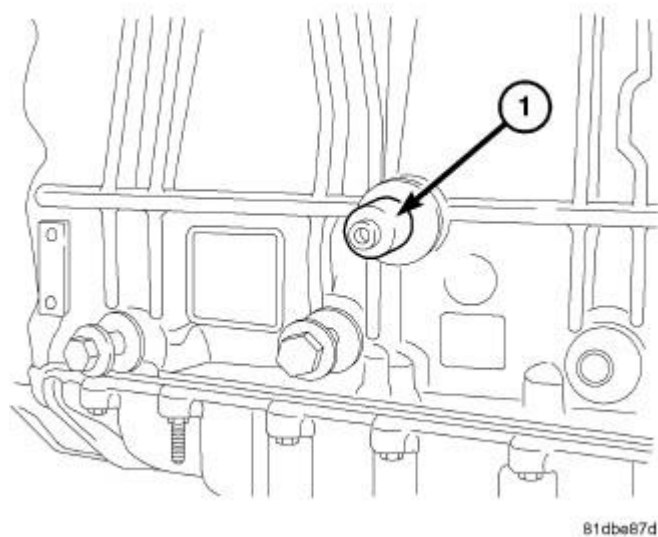


Fig. 453: Crankshaft Locking Tool
Courtesy of CHRYSLER LLC

9. Remove the Crankshaft Locking Tool (special tool #VM.9992, Adapter, 90 Degree ATDC) (1).

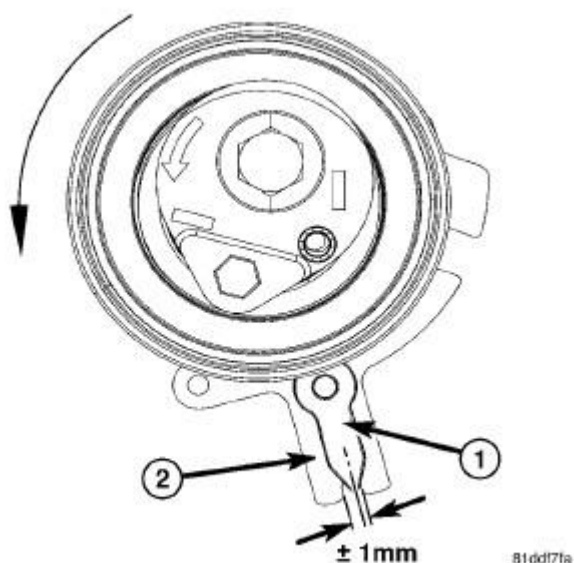


Fig. 454: Timing Belt Tensioner Load Indicator & Gauge
Courtesy of CHRYSLER LLC

NOTE: In order to rotate the engine, the Camshaft Locking Tool (special tool #VM.9991, Alignment Tool, Camshaft Sprocket) and the Crankshaft Locking Tool (special tool #VM.9992, Adapter, 90 Degree ATDC) need to be removed.

10. Rotate engine 2 complete revolutions and then recheck tensioner alignment. Verify that the tension indicator (1) is centered in the slot on the tensioner gauge (2) slot as shown in illustration. Readjust tensioner alignment is necessary.

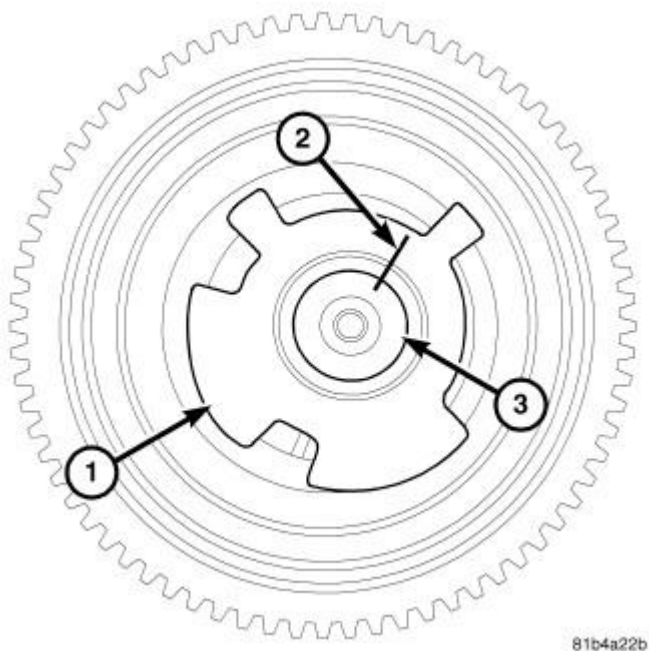


Fig. 455: Mark Across Reluctor Wheel & Exhaust Camshaft
Courtesy of CHRYSLER LLC

11. Verify that the reluctor wheel (1) has not moved on the camshaft. If the witness marks are not aligned, the reluctor wheel (1) has spun on the camshaft (3) during the assembly process. If so, the exhaust camshaft must be replaced.

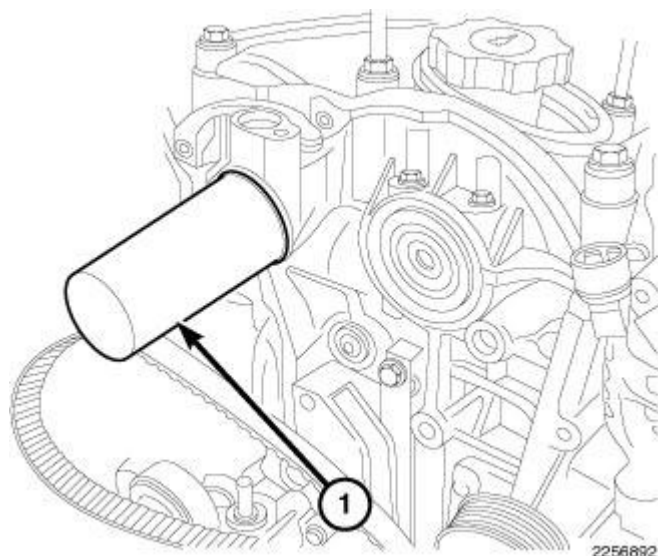


Fig. 456: Seal Installer
Courtesy of CHRYSLER LLC

12. Using Seal Installer (special tool #VM.1057, Installer, Seal) (1), install the exhaust camshaft seal using.

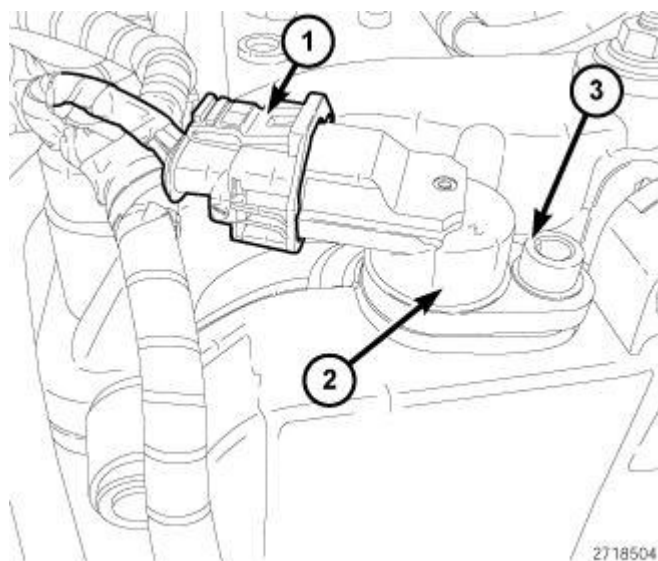


Fig. 457: Camshaft Position Sensor Harness Connector, Sensor & Bolt
Courtesy of CHRYSLER LLC

13. Install the Camshaft Position Sensor CMP sensor (2). Tighten bolt (3) to 11 N.m (97 in. lbs.).

14. Connect the (CMP) harness connector (1).

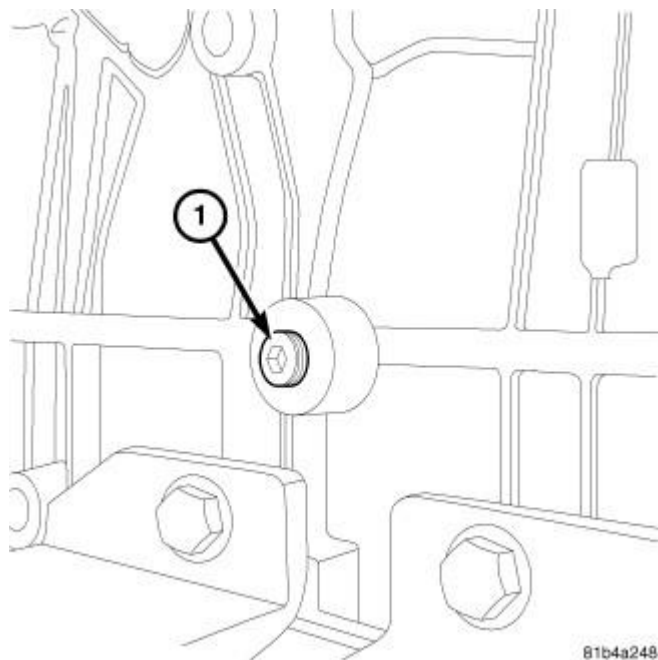


Fig. 458: Engine Block Plug
Courtesy of CHRYSLER LLC

15. Install the engine block plug (1). Tighten block plug to 30 N.m (22 ft. lbs.).

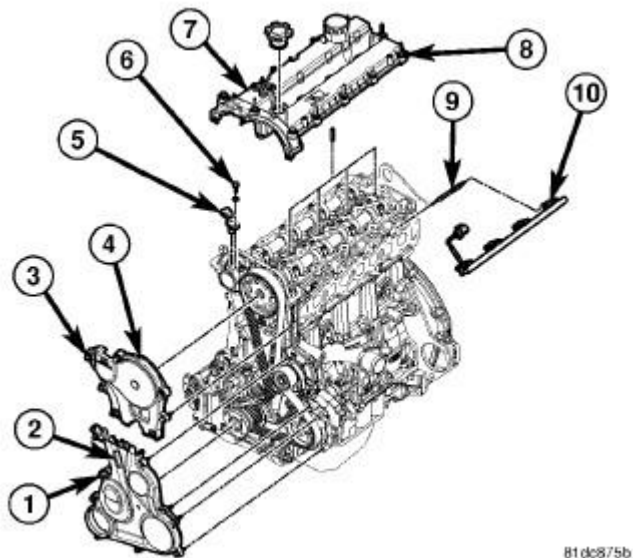
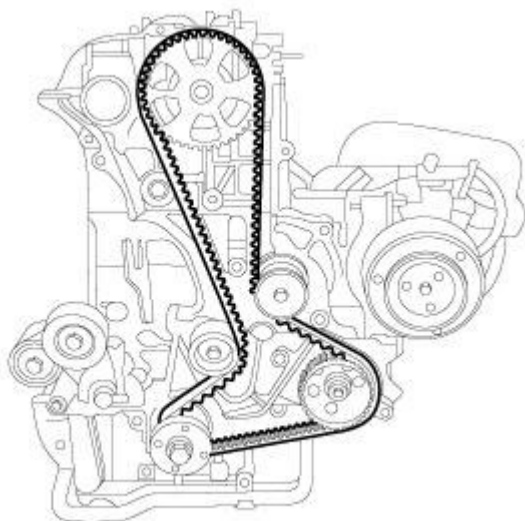


Fig. 459: Upper And Lower Front Covers With Fasteners
Courtesy of CHRYSLER LLC

16. Install the upper (4) and lower (2) outer timing belt covers. Refer to **COVER(S), ENGINE TIMING, INSTALLATION**.


17. Connect the negative battery cable.

COVER(S), ENGINE TIMING**REMOVAL****REMOVAL - TIMING BELT INNER COVER**

2238720

Fig. 460: Timing Belt Routing
Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Remove the timing belt. Refer to **BELT, TIMING, REMOVAL**.

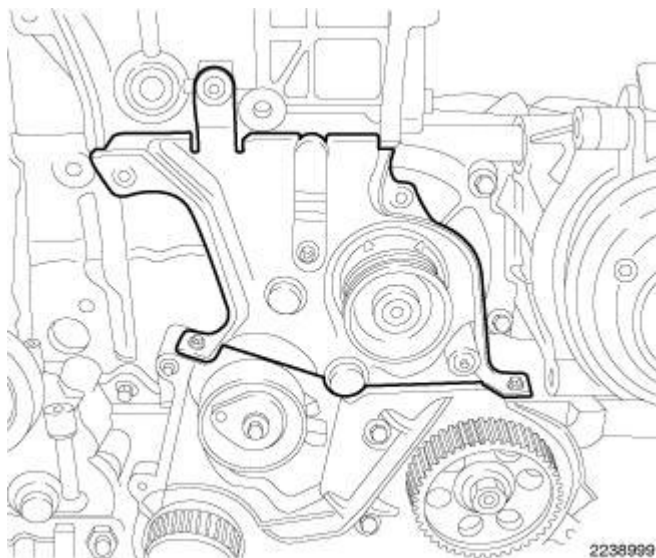

2238999

Fig. 461: Inner Timing Belt Cover
Courtesy of CHRYSLER LLC

3. Remove the inner timing belt cover.

UPPER AND LOWER TIMING BELT OUTER COVERS


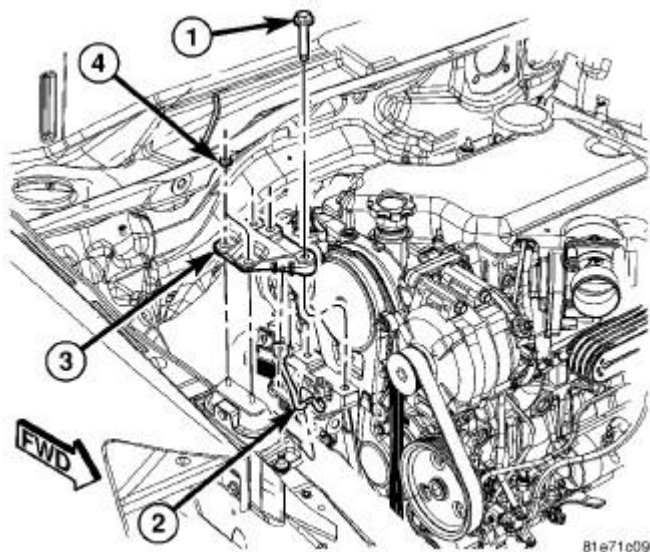


Fig. 462: Right Front Engine Mount Bracket & Fasteners
Courtesy of CHRYSLER LLC


1. Disconnect the negative battery cable.
2. Remove the engine cover.
3. Remove the air cleaner body. Refer to **BODY, AIR CLEANER, REMOVAL**.
4. Remove the right engine mount bracket (2). Refer to **INSULATOR, ENGINE MOUNT, RIGHT, REMOVAL**, **INSULATOR, ENGINE MOUNT, LEFT, REMOVAL**, **INSULATOR, ENGINE MOUNT, REAR, REMOVAL** and **INSULATOR, ENGINE MOUNT, FRONT MOUNT, REMOVAL**.
5. Remove the accessory drive belt. Refer to **BELT, SERPENTINE, REMOVAL**.
6. Remove the accessory drive idler pulley.

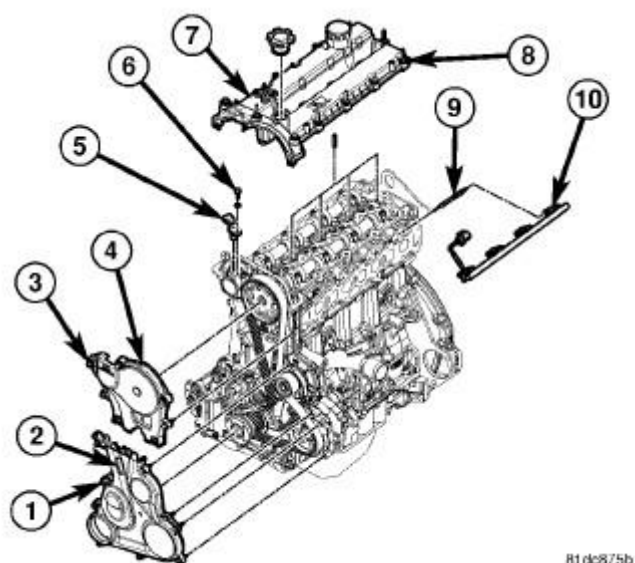

81dc875b

Fig. 463: Upper And Lower Front Covers With Fasteners
Courtesy of CHRYSLER LLC

7. Remove the upper timing belt cover (4).

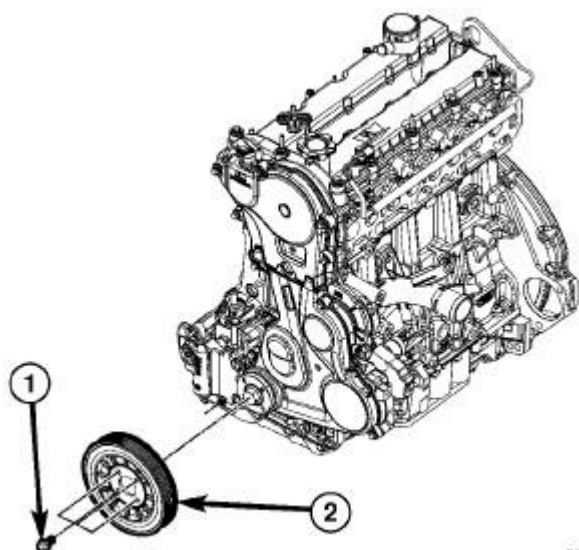

81dc8640

Fig. 464: Crankshaft Damper & Bolts
Courtesy of CHRYSLER LLC

8. Remove the bolts (1) and the crankshaft damper (2).

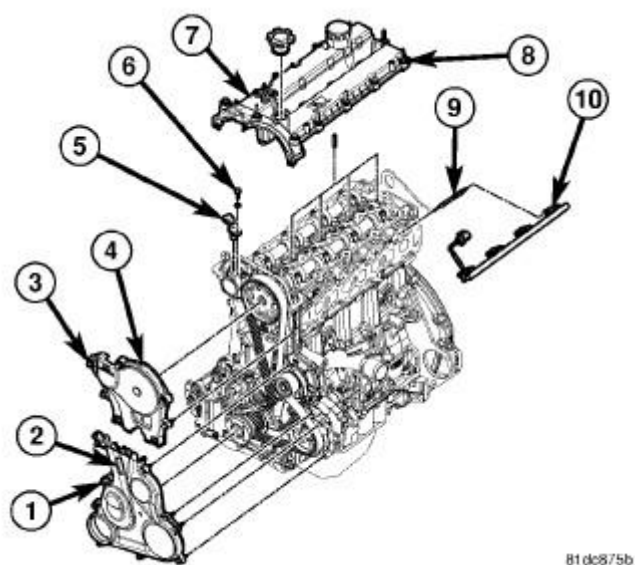


Fig. 465: Upper And Lower Front Covers With Fasteners
Courtesy of CHRYSLER LLC

9. Remove the bolts (1), and the lower timing belt cover (2).

INSTALLATION

INSTALLATION - TIMING BELT INNER COVER


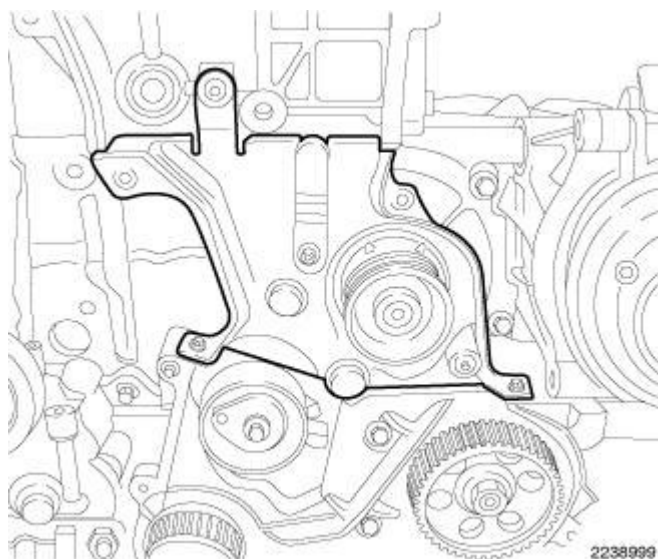


Fig. 466: Inner Timing Belt Cover
Courtesy of CHRYSLER LLC

1. Install the inner timing belt cover. Tighten the bolts to 11 N.m (97 in. lbs.).

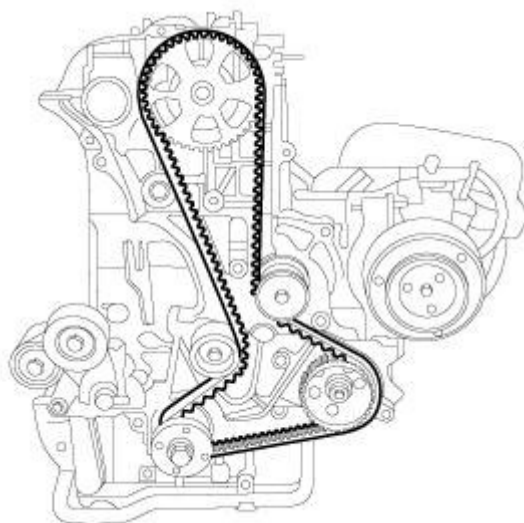


2238720

Fig. 467: Timing Belt Routing
Courtesy of CHRYSLER LLC

2. Install the timing belt. Refer to **BELT, TIMING, INSTALLATION**.
3. Connect the negative battery cable.

UPPER AND LOWER OUTER TIMING BELT COVERS

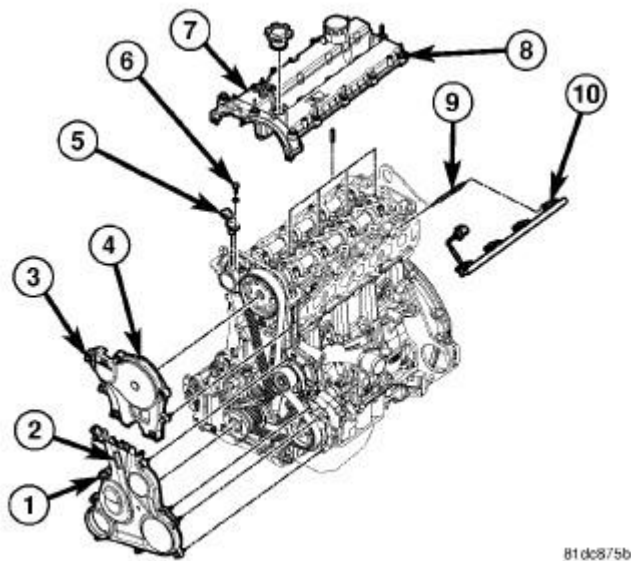

81dc8/5b

Fig. 468: Upper And Lower Outer Timing Belt Covers
Courtesy of CHRYSLER LLC

1. Install the lower timing belt cover (2). Tighten the bolts to 8 N.m (71 in. lbs.).

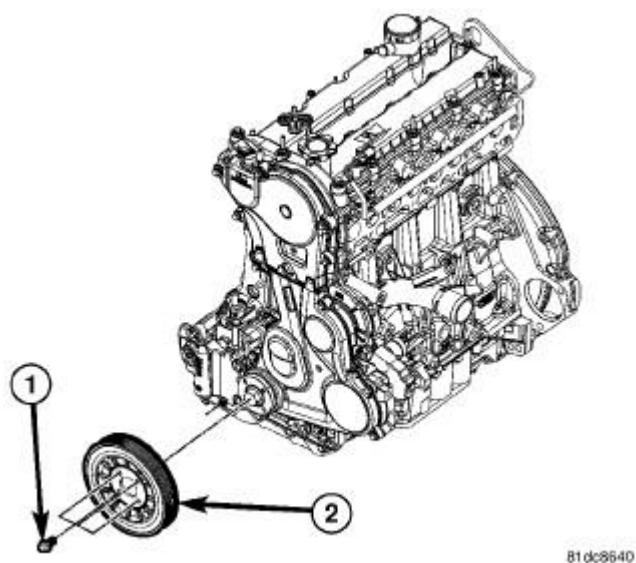


Fig. 469: Crankshaft Damper & Bolts
Courtesy of CHRYSLER LLC

2. Install the crankshaft damper (1). Tighten the bolts to 32 N.m (24 ft. lbs.).

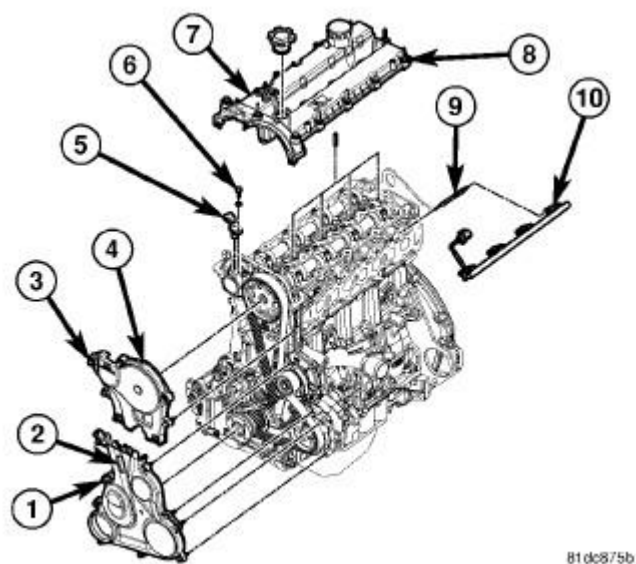


Fig. 470: Upper And Lower Outer Timing Belt Covers
Courtesy of CHRYSLER LLC

3. Install the upper timing cover (4). Tighten the bolts to 8 N.m (71 in. lbs.).

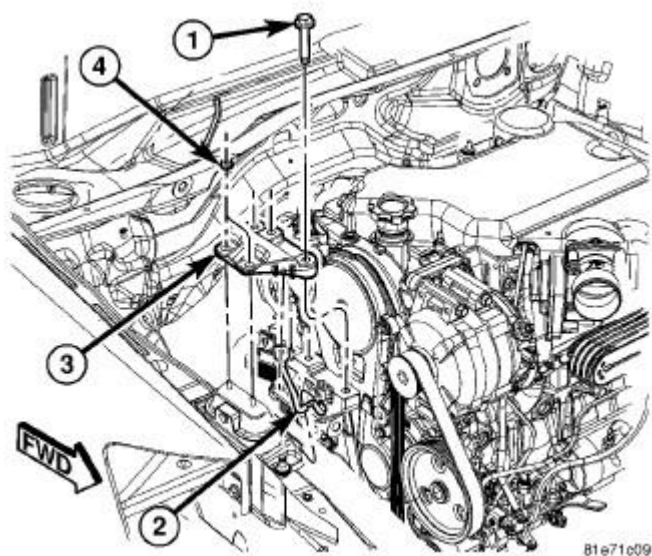



Fig. 471: Right Front Engine Mount Bracket & Fasteners
Courtesy of CHRYSLER LLC

4. Install the accessory drive idler pulley. Tighten bolts to 45 N.m (33 ft. lbs.).
5. Install the accessory drive belt. Refer to **BELT, SERPENTINE, INSTALLATION**.
6. Install the right front engine mount bracket (2). Refer to **INSULATOR, ENGINE MOUNT, RIGHT, INSTALLATION**, **INSULATOR, ENGINE MOUNT, LEFT, INSTALLATION**, **INSULATOR, ENGINE MOUNT, REAR, INSTALLATION** and **INSULATOR, ENGINE MOUNT, FRONT MOUNT, INSTALLATION**.
7. Install the air cleaner body. Refer to **BODY, AIR CLEANER, INSTALLATION**.
8. Install the engine cover.
9. Connect the negative battery cable.

SPROCKET(S), TIMING BELT AND CHAIN

REMOVAL


REMOVAL - CAMSHAFT SPROCKET

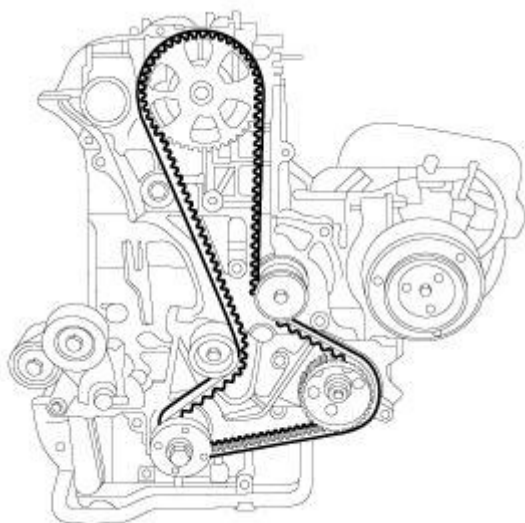

2238720

Fig. 472: Timing Belt Routing
Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Remove the timing belt. Refer to **BELT, TIMING, REMOVAL**.

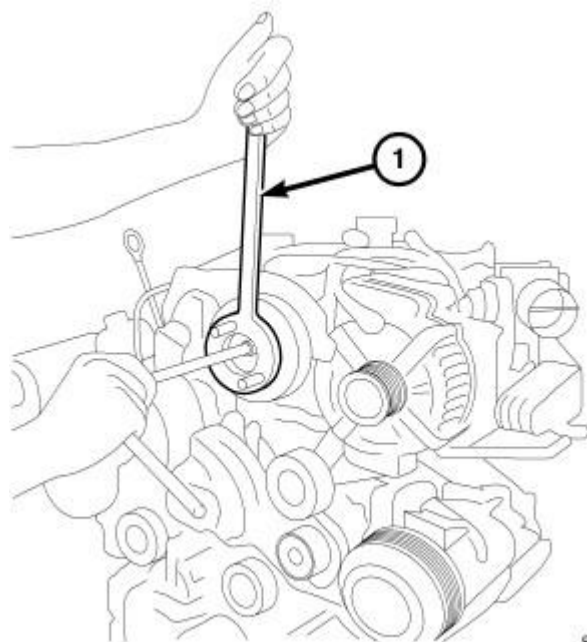

81b4a227

Fig. 473: Intake Camshaft Sprocket Locking Tool
Courtesy of CHRYSLER LLC

CAUTION: Always use (special tool #VM.1055, Locking Tool) to hold the camshaft while loosening the camshafts. Failure to use this tool can cause the camshaft holding tool to rotate the tone wheel on the camshaft. If the tone wheel is spun on the camshaft, the camshaft

must be replaced.

3. Using the Locking Tool (special tool #VM.1055, Locking Tool) to hold the intake camshaft sprocket, remove the bolt.

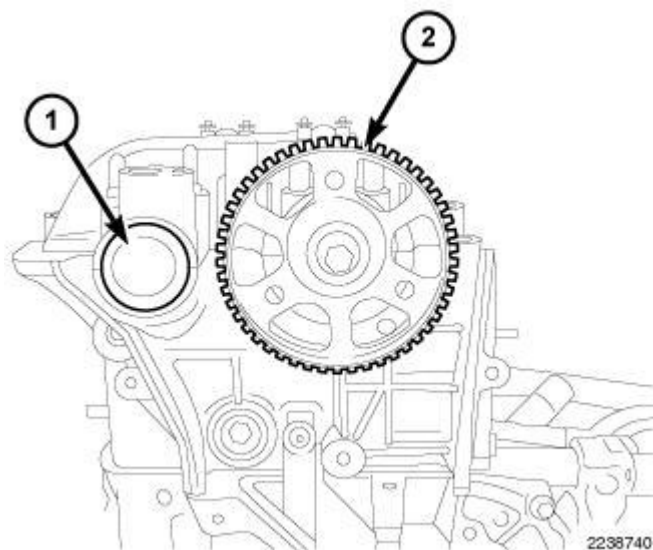


Fig. 474: Exhaust Camshaft Oil Seal & Camshaft Sprocket
Courtesy of CHRYSLER LLC

4. Remove the camshaft sprocket (2).

REMOVAL - CRANKSHAFT SPROCKET

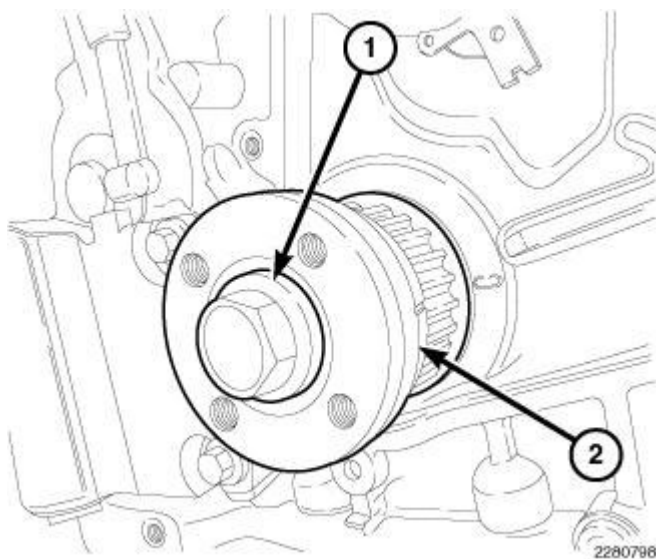


Fig. 475: Crankshaft Timing Belt Sprocket & Bolt
Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.

2. Remove the timing belt. Refer to **BELT, TIMING, REMOVAL**.
3. Remove the bolt (1) and the crankshaft sprocket (2).

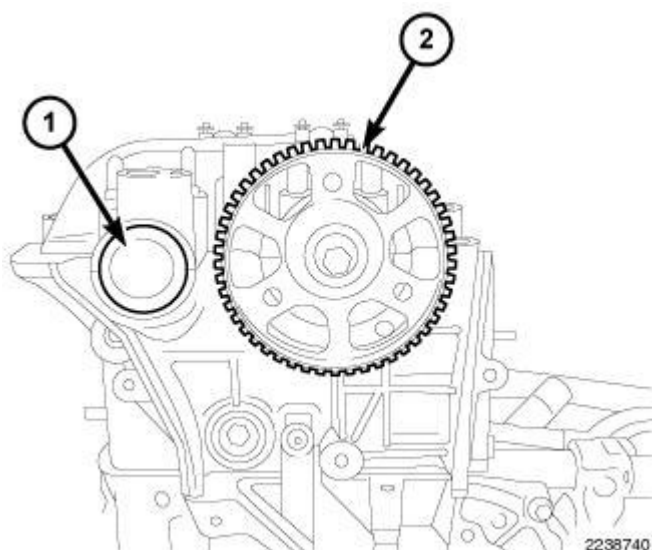
INSTALLATION**INSTALLATION - CAMSHAFT SPROCKET**

Fig. 476: Exhaust Camshaft Oil Seal & Camshaft Sprocket
Courtesy of CHRYSLER LLC

1. Install the intake camshaft sprocket (2) and finger tighten bolt.

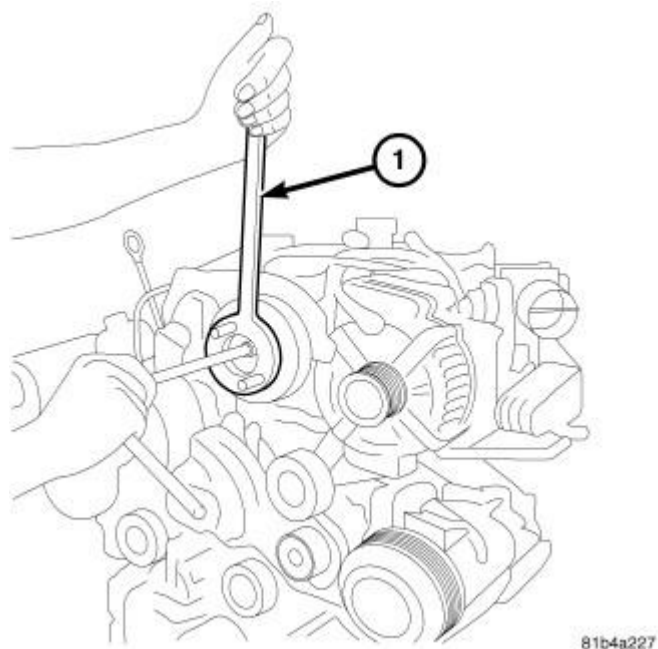


Fig. 477: Intake Camshaft Sprocket Locking Tool

Courtesy of CHRYSLER LLC

2. Using the Locking Tool (special tool #VM.1055, Locking Tool), tighten bolt to 64 N.m (47 ft. lbs.).

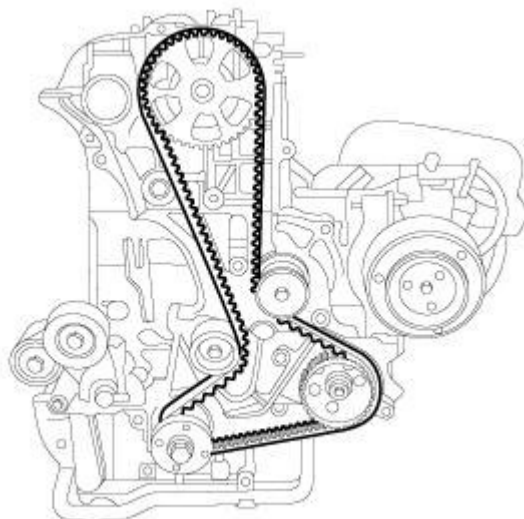


Fig. 478: Timing Belt Routing
Courtesy of CHRYSLER LLC

3. Install the timing belt. Refer to **BELT, TIMING, INSTALLATION**.

INSTALLATION - CRANKSHAFT SPROCKET


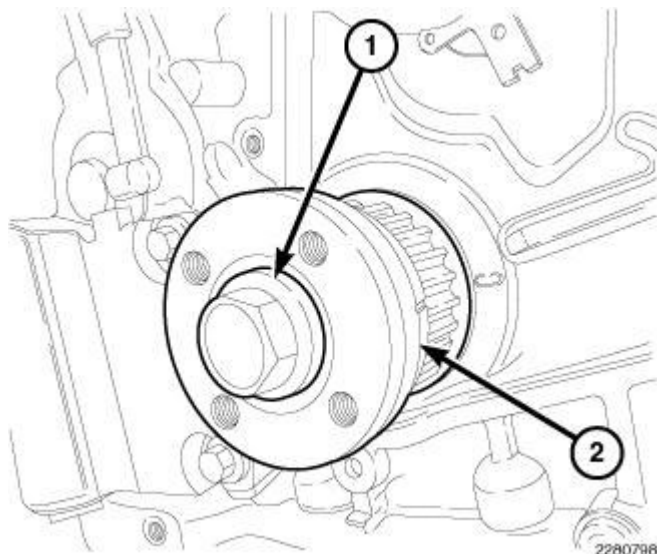


Fig. 479: Crankshaft Timing Belt Sprocket & Bolt
Courtesy of CHRYSLER LLC

NOTE: The crankshaft sprocket bolt is a left handed thread.

1. Install the crankshaft sprocket. Tighten bolt to 100 N.m (74 ft. lbs.) plus an additional 120 degrees turn.

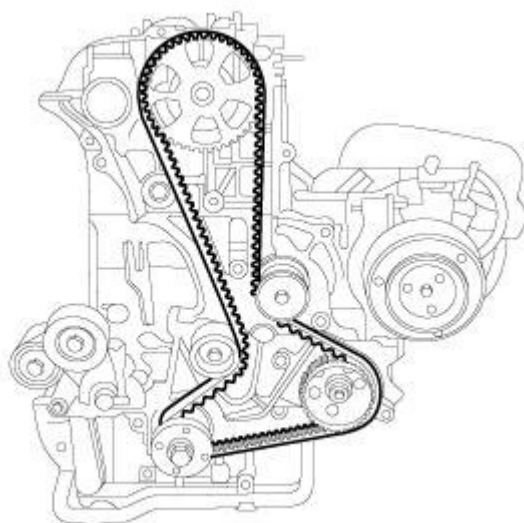

2238720

Fig. 480: Timing Belt Routing
Courtesy of CHRYSLER LLC

2. Install the timing belt. Refer to **BELT, TIMING, INSTALLATION**.
3. Connect the negative battery cable.

TENSIONER, ENGINE TIMING

ADJUSTMENTS

ADJUSTMENT

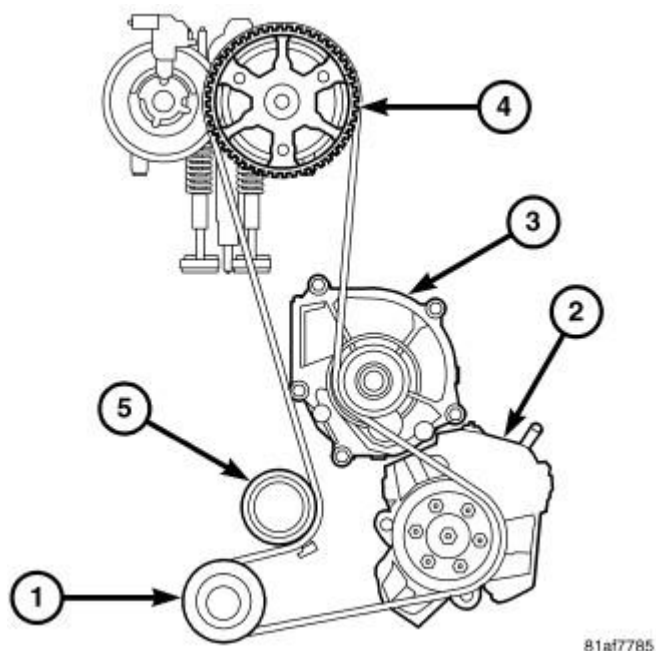


Fig. 481: Timing Belt Routing
Courtesy of CHRYSLER LLC

1. With the upper and lower front covers removed and the timing belt installed, loosen timing belt tensioner (5).

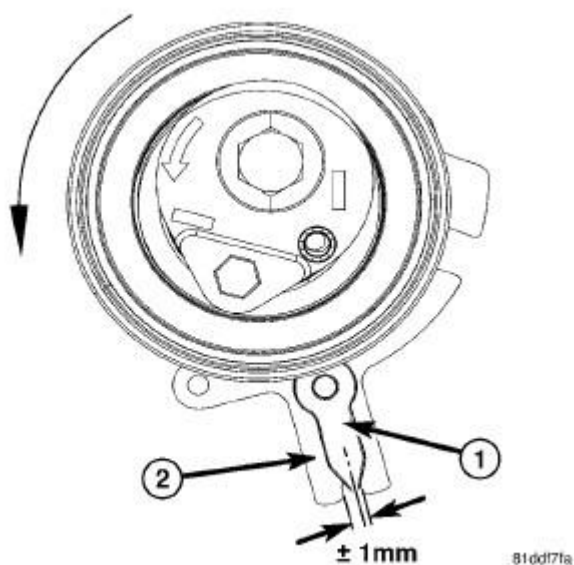


Fig. 482: Timing Belt Tensioner Load Indicator & Gauge
Courtesy of CHRYSLER LLC

NOTE: Turning the belt tensioner counter clockwise moves the pointer in a clockwise direction. Also, if the tensioner bolt is too loose this will cause the tensioner alignment slot to jump off the alignment boss on timing

cover.

2. Align timing belt tensioner pointer (1) so that it is centered in the notch (2) and tighten timing belt tensioner retaining bolt to 28 N.m (21 ft.lbs.).


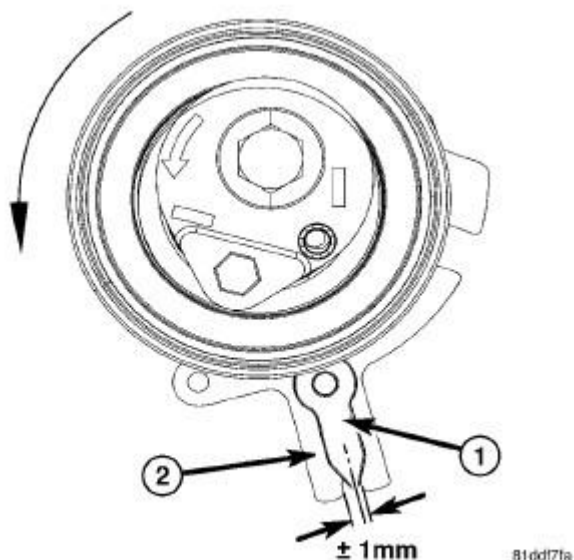


Fig. 483: Timing Belt Tensioner Load Indicator & Gauge
Courtesy of CHRYSLER LLC

3. Rotate engine 2 complete revolutions and then recheck tensioner alignment. Verify that the tension indicator (1) is centered in the slot on the tensioner gage (2) as shown in illustration. Readjust tensioner alignment as necessary.

REMOVAL


REMOVAL - ENGINE TIMING TENSIONER

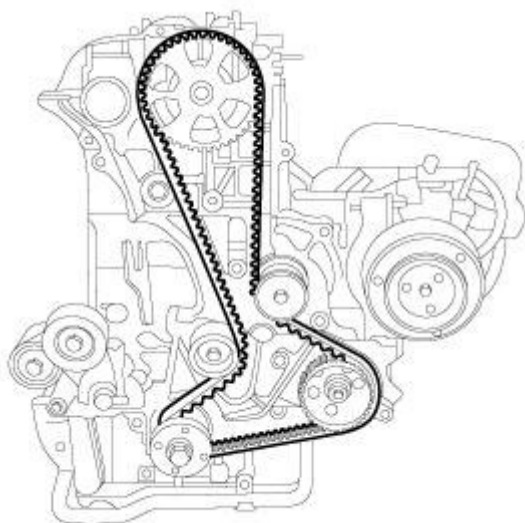

2238720

Fig. 484: Timing Belt Routing
Courtesy of CHRYSLER LLC

1. Disconnect negative battery cable.
2. Remove the timing belt. Refer to **BELT, TIMING, REMOVAL**.

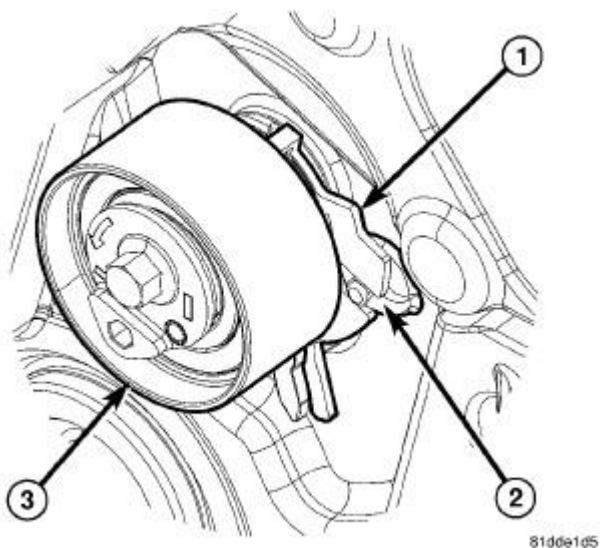

81d0e1d5

Fig. 485: Timing Belt Tensioner, Alignment Plate & Engine Cover Boss
Courtesy of CHRYSLER LLC

3. Remove bolt, and the timing belt tensioner (3).

INSTALLATION

INSTALLATION - ENGINE TIMING TENSIONER

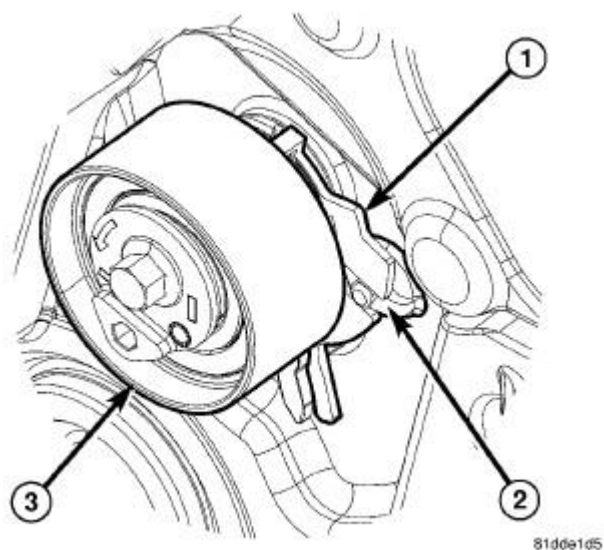


Fig. 486: Timing Belt Tensioner, Alignment Plate & Engine Cover Boss
 Courtesy of CHRYSLER LLC

1. Install the timing belt tensioner (3). Do not tighten at this time. Verify that the slot in the tensioner alignment plate (1) is aligned with the boss (2) on the engine cover.

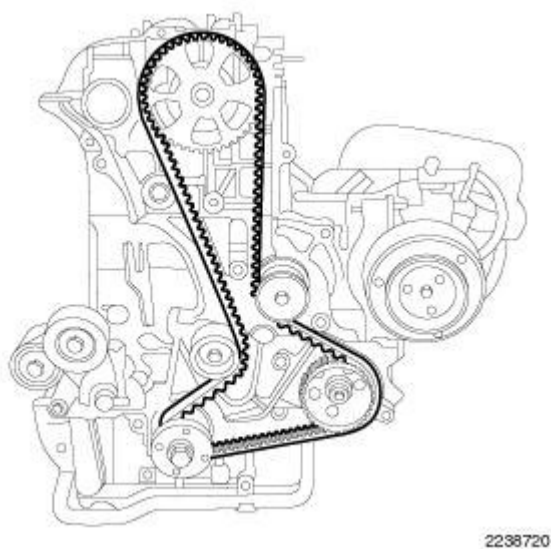


Fig. 487: Timing Belt Routing
 Courtesy of CHRYSLER LLC

2. Install the timing belt. Refer to **BELT, TIMING, INSTALLATION**.
3. Connect the negative battery cable.

AIR INTAKE SYSTEM

BODY, AIR CLEANER

REMOVAL**REMOVAL**

1. Disconnect and isolate the negative battery cable.

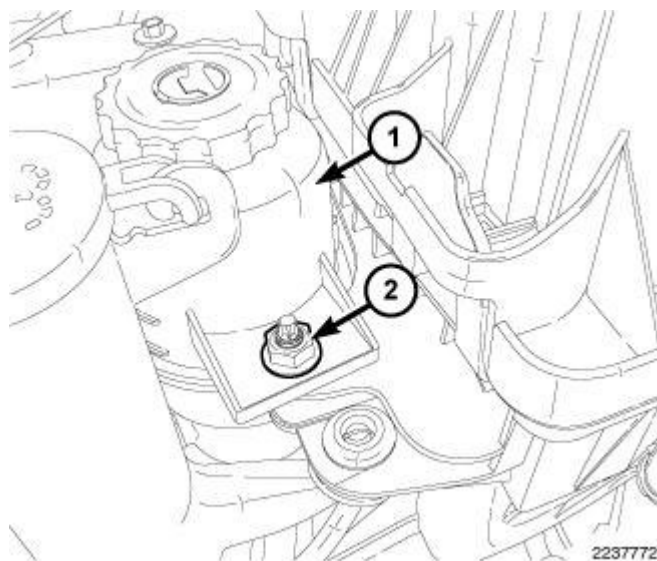


Fig. 488: Power Steering Reservoir & Retaining Nut
Courtesy of CHRYSLER LLC

2. Remove the retaining nut (2) and position the power steering reservoir (1) aside.

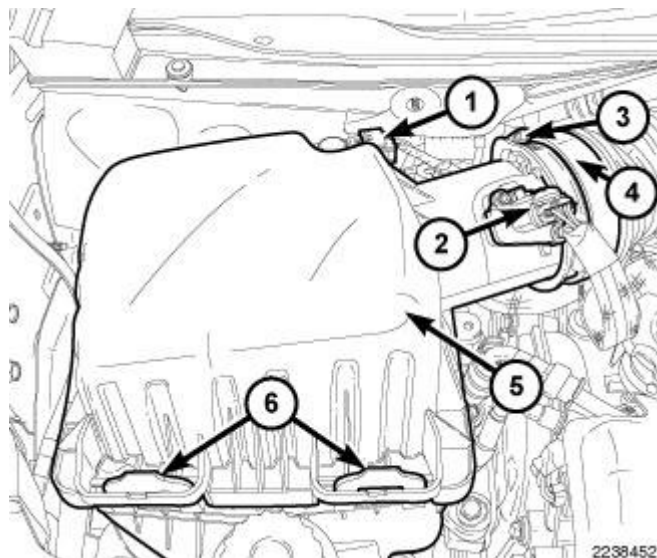


Fig. 489: Intake Air Housing Cover
Courtesy of CHRYSLER LLC

3. Disconnect the Inlet Air Pressure (IAP) sensor harness connector (1).
4. Disconnect the Mass Airflow (MAF) sensor harness connector (2).

5. Loosen clamp (3) and disconnect the turbocharger air inlet tube (4) from the intake air housing (5).
6. Pull upward on the intake air housing (5) to release it from the grommets, and remove the intake air housing.

INSTALLATION

INSTALLATION

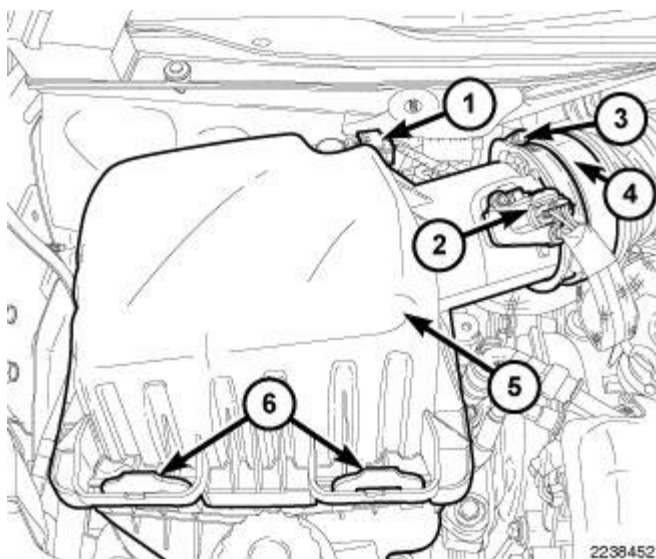


Fig. 490: Intake Air Housing Cover
Courtesy of CHRYSLER LLC

1. Position the intake air housing (5) in the grommets, and push down on the intake air housing to seat it.
2. Connect the turbocharger air inlet tube (4) to the intake air housing (5) and tighten the clamp (3).
3. Connect the Mass Airflow (MAF) sensor harness connector (2).
4. Connect the Inlet Air Pressure (IAP) sensor harness connector (1).

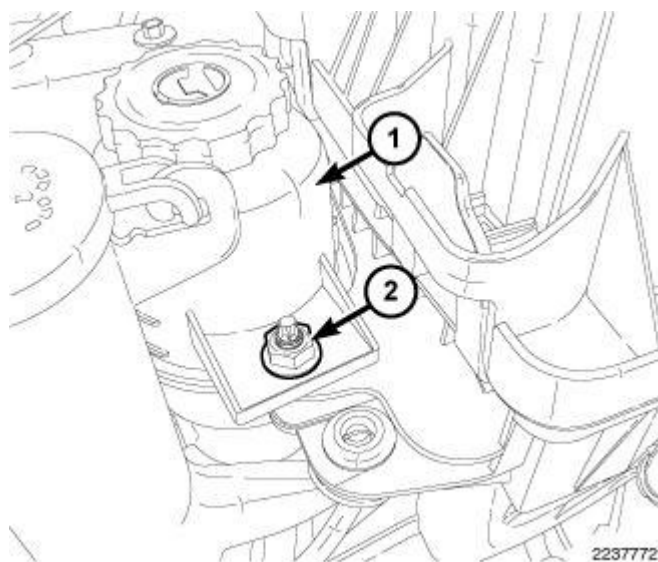


Fig. 491: Power Steering Reservoir & Retaining Nut
Courtesy of CHRYSLER LLC

5. Position the power steering reservoir (1) to the intake air housing. Tighten retaining nut (2) to 12 N.m (105 in. lbs.).
6. Reconnect the negative battery cable.

AIR CLEANER

REMOVAL

REMOVAL - AIR CLEANER

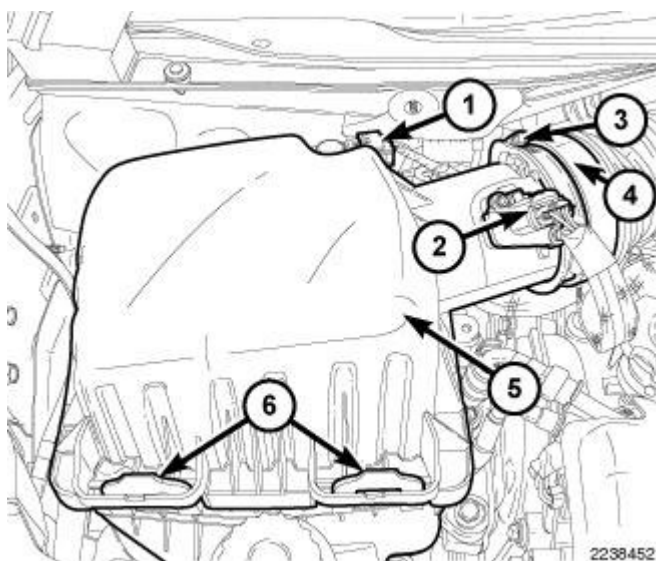
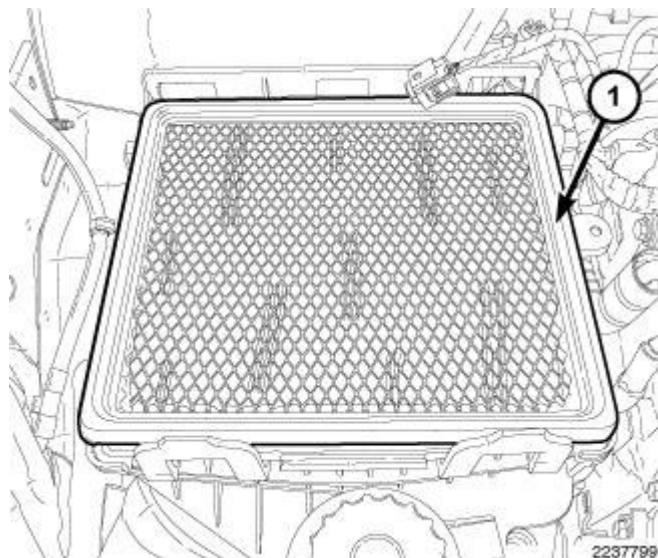



Fig. 492: Intake Air Housing Cover
Courtesy of CHRYSLER LLC

1. Release the lock tabs (6) and remove the intake air body cover (5).

**Fig. 493: Air Filter**

Courtesy of CHRYSLER LLC

2. Lift up and remove the air cleaner (1) from air cleaner body.

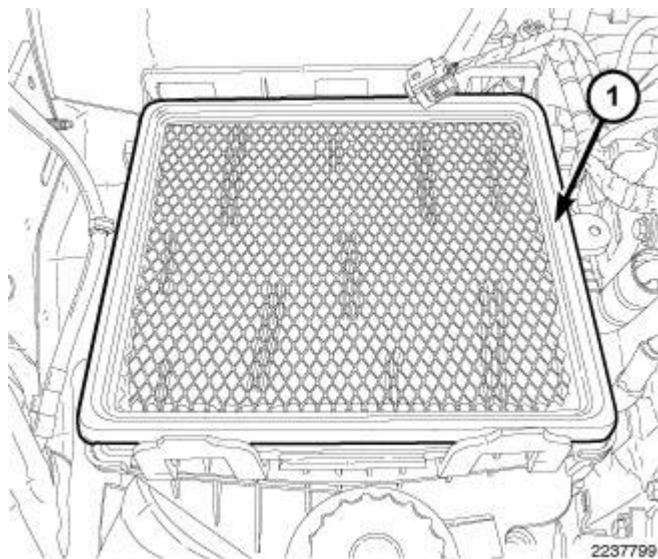INSTALLATION**INSTALLATION****Fig. 494: Air Filter**

Courtesy of CHRYSLER LLC

1. Clean out the inside of air cleaner body.
2. Install the new air cleaner (1).

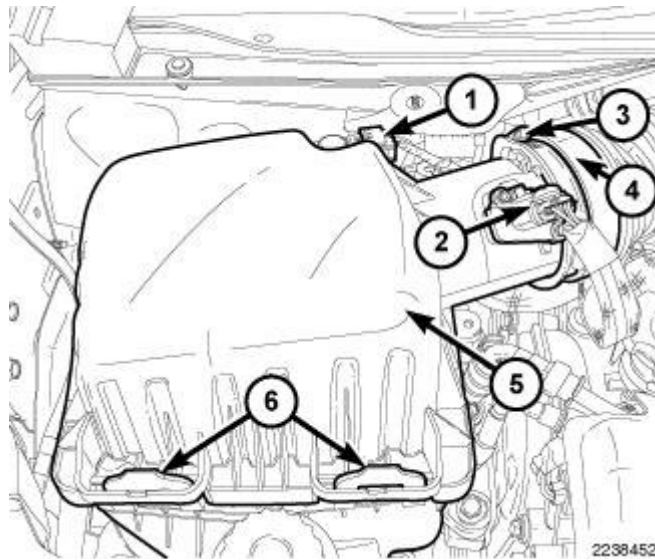


Fig. 495: Intake Air Housing Cover
Courtesy of CHRYSLER LLC

3. Install the intake air body cover (5) and push down to lock the tabs (6).