

2008 ENGINE

Engine Mechanical - G35 (Sedan)

SYMPTOM DIAGNOSIS

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

NVH Troubleshooting - Engine Noise

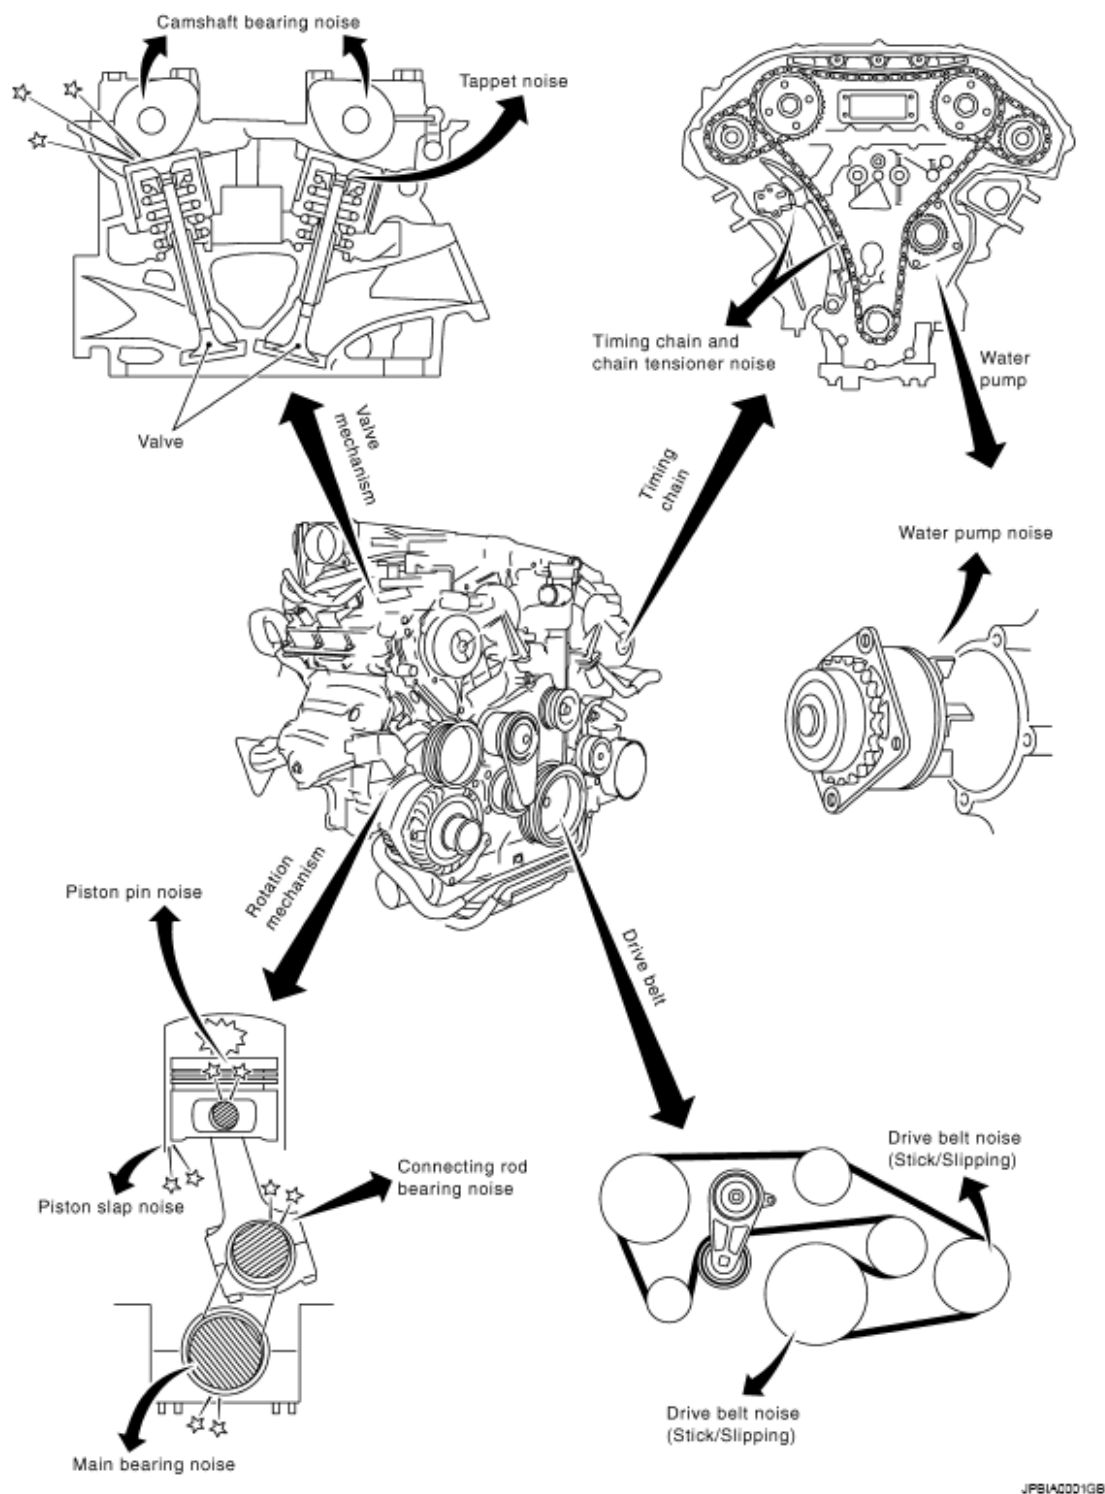


Fig. 1: Engine Noise - NVH Troubleshooting Chart
Courtesy of NISSAN MOTOR CO., U.S.A.

Use the Chart Below to Help You Find the Cause of the Symptom

1. Locate the area where noise occurs.
2. Confirm the type of noise.
3. Specify the operating condition of the engine.
4. Check specified noise source.

If necessary, repair or replace these parts.

DIAGNOSIS PROCEDURE

Location of noise	Type of noise	Operating condition of engine						Source of noise	Check item	Reference
		Before warm-up	After warm-up	When starting	When idling	When racing	While driving			
Top of engine Rocker cover Cylinder head	Ticking or clicking	C	A	-	A	B	-	Tappet noise	Valve clearance	<u>CAMSHAFT VALVE CLEARANCE</u>
	Rattle	C	A	-	A	B	C	Camshaft bearing noise	Camshaft runout Camshaft journal oil clearance	<u>CAMSHAFT CAMSHAFT</u>
Crankshaft pulley Cylinder block (Side of engine) Oil pan	Slap or knock	-	A	-	B	B	-	Piston pin noise	Piston to piston pin oil clearance Connecting rod bushing oil clearance	<u>VALVE SPRING MAIN BEARING OIL CLEARANCE</u>
	Slap or rap	A	-	-	B	B	A	Piston slap noise	Piston to cylinder bore clearance Piston ring side clearance Piston ring end gap Connecting rod bend and torsion	<u>VALVE SPRING VALVE SPRING MAIN BEARING OIL CLEARANCE</u>
	Knock	A	B	C	B	B	B	Connecting rod bearing noise	Connecting rod bushing oil clearance Connecting rod bearing	<u>MAIN BEARING OIL CLEARANCE</u> <u>MAIN BEARING</u>

2008 Infiniti G35

2008 ENGINE Engine Mechanical - G35 (Sedan)

									oil clearance	<u>OIL CLEARANCE</u>
	Knock	A	B	-	A	B	C	Main bearing noise	Main bearing oil clearance Crankshaft runout	<u>MAIN BEARING VALVE SPRING</u>
Front of engine Timing chain case	Tapping or ticking	A	A	-	B	B	B	Timing chain and timing chain tensioner noise	Timing chain cracks and wear Timing chain tensioner operation	<u>TIMING CHAIN TIMING CHAIN</u>
Front of engine	Squeaking or fizzing	A	B	-	B	-	C	Drive belts (Sticking or slipping)	Drive belts deflection	<u>DRIVE BELTS</u>
	Creaking	A	B	A	B	A	B	Drive belts (Slipping)	Idler pulley bearing operation	
	Squall Creak	A	B	-	B	A	B	Water pump noise	Water pump operation	<u>"EXPLODED VIEW"</u>
A: Closely related B: Related C: Sometimes related -: Not related										

PRECAUTION

PRECAUTIONS

Precaution for Procedure without Cowl Top Cover

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc.

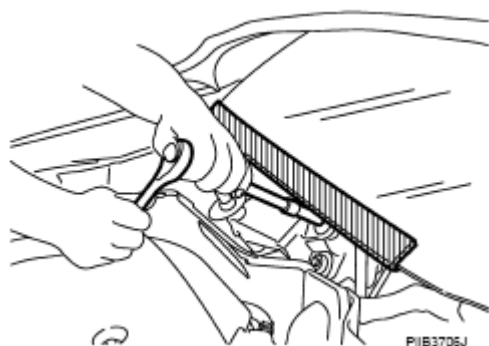


Fig. 2: Identifying Windshield Precaution
Courtesy of NISSAN MOTOR CO., U.S.A.

Precaution Necessary for Steering Wheel Rotation after Battery Disconnect

NOTE:

- Before removing and installing any control units, first turn the push-button ignition switch to the LOCK position, then disconnect both battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

This vehicle is equipped with a push-button ignition switch and a steering lock unit.

If the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

If turning the steering wheel is required with the battery disconnected or discharged, follow the procedure below before starting the repair operation.

OPERATION PROCEDURE

1. Connect both battery cables.

NOTE: Supply power using jumper cables if battery is discharged.

2. Carry the Intelligent Key or insert it to the key slot and turn the push-button ignition switch to ACC position.

(At this time, the steering lock will be released.)

3. Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned.
4. Perform the necessary repair operation.
5. When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn

the push-button ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the push-button ignition switch is turned to LOCK position.)

6. Perform self-diagnosis check of all control units using CONSULT-III.

Draining Engine Coolant

Drain engine coolant and engine oil when the engine is cooled.

Disconnecting Fuel Piping

- Before starting work, make sure no fire or spark producing items are in the work area.
- Release fuel pressure before disconnecting and disassembly.
- After disconnecting pipes, plug openings to stop fuel leakage.

Removal and Disassembly

- When instructed to use SST, use specified tools. Always be careful to work safely, avoid forceful or uninstructed operations.
- Exercise maximum care to avoid damage to mating or sliding surfaces.
- Dowel pins are used for several parts alignment. When replacing and reassembling parts with dowel pins, make sure that dowel pins are installed in the original position.
- Cover openings of engine system with a tape or equivalent, if necessary, to seal out foreign materials.
- Mark and arrange disassembly parts in an organized way for easy troubleshooting and re-assembly.
- When loosening nuts and bolts, as a basic rule, start with the one furthest outside, then the one diagonally opposite, and so on. If the order of loosening is specified, do exactly as specified. Power tools may be used in the step.

Inspection, Repair and Replacement

Before repairing or replacing, thoroughly inspect parts. Inspect new replacement parts in the same way, and replace if necessary.

Assembly and Installation

- Use torque wrench to tighten bolts or nuts to specification.
- When tightening nuts and bolts, as a basic rule, equally tighten in several different steps starting with the ones in center, then ones on inside and outside diagonally in this order. If the order of tightening is specified, do exactly as specified.
- Replace with new gasket, packing, oil seal or O-ring.
- Thoroughly wash, clean, and air-blow each part. Carefully check engine oil or engine coolant passages for any restriction and blockage.
- Avoid damaging sliding or mating surfaces. Completely remove foreign materials such as cloth lint or dust. Before assembly, oil sliding surfaces well.
- Release air within route when refilling after draining engine coolant.

- After repairing, start the engine and increase engine speed to check engine coolant, fuel, engine oil, and exhaust gases for leakage.

Parts Requiring Angle Tightening

- Use the angle wrench [SST: KV10112100 (BT8653-A)] for the final tightening of the following engine parts:
 - Cylinder head bolts
 - Lower cylinder block bolts
 - Connecting rod cap bolts
- Do not use a torque value for final tightening.
- The torque value for these parts are for a preliminary step.
- Ensure thread and seat surfaces are clean and coated with engine oil.

Liquid Gasket

REMOVAL OF LIQUID GASKET SEALING

- After removing mounting nuts and bolts, separate the mating surface using the seal cutter [SST:KV10111100 (J37228)] (A) and remove old liquid gasket sealing.

CAUTION: Be careful not to damage the mating surfaces.

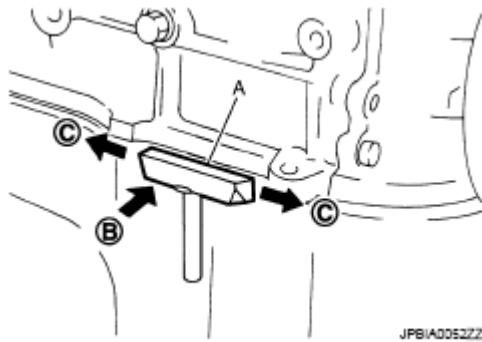


Fig. 3: Separating Mating Surface Using Seal Cutter
Courtesy of NISSAN MOTOR CO., U.S.A.

- Tap the seal cutter [SST: KV10111100 (J37228)] to insert it (B), and then slide it (C) by tapping on the side as shown in the figure.
- In areas where the seal cutter [SST: KV10111100 (J37228)] is difficult to use, use a plastic hammer to lightly tap the parts, to remove it.

CAUTION: If for some unavoidable reason tool such as a screwdriver is used, be careful not to damage the mating surfaces.

LIQUID GASKET APPLICATION PROCEDURE

1. Using a scraper (A), remove old liquid gasket adhering to the liquid gasket application surface and the mating surface.
 - Remove liquid gasket completely from the groove of the liquid gasket application surface, mounting bolts, and bolt holes.
2. Wipe the liquid gasket application surface and the mating surface with white gasoline (lighting and heating use) to remove adhering moisture, grease and foreign materials.

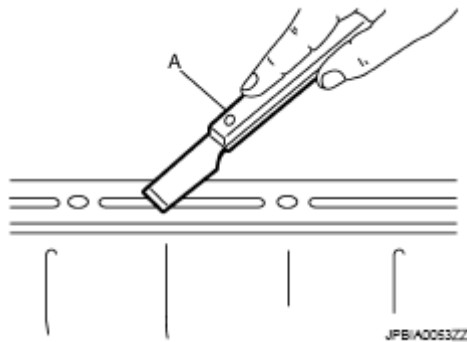


Fig. 4: View Of Old Liquid Gasket
 Courtesy of NISSAN MOTOR CO., U.S.A.

3. Attach liquid gasket tube to the tube presser [SST: WS39930000 (-)].

Use Genuine RTV Silicone Sealant or equivalent. Refer to "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS".

4. Apply liquid gasket without breaks to the specified location with the specified dimensions.
 - If there is a groove for liquid gasket application, apply liquid gasket to the groove.

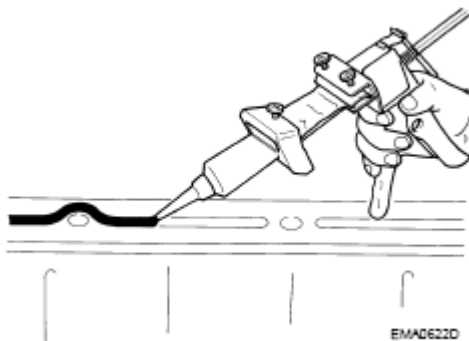


Fig. 5: Applying Liquid Gasket
 Courtesy of NISSAN MOTOR CO., U.S.A.

- As for bolt holes (B), normally apply liquid gasket inside the holes. Occasionally, it should be applied outside the holes. Make sure to read the text of this information.

A: Groove

<=: Inside

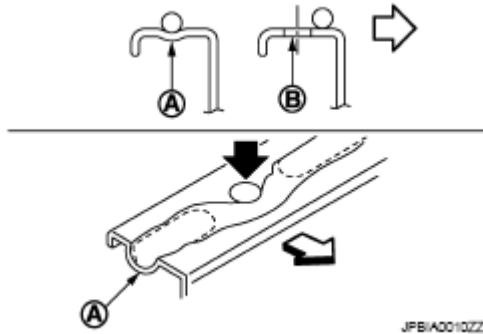


Fig. 6: Locating Bolt Holes

Courtesy of NISSAN MOTOR CO., U.S.A.

- Within five minutes of liquid gasket application, install the mating component.
- If liquid gasket protrudes, wipe it off immediately.
- Do not retighten mounting bolts or nuts after the installation.
- After 30 minutes or more have passed from the installation, fill engine oil and engine coolant.


CAUTION: If there are specific instructions in this information, observe them.

Definitions of Bank Names

- In this manual, each bank name is defined as follows:
 - A. Bank 1 (The conventional right bank)
 - B. Bank 2 (The conventional left bank)

<-- Engine front

- For cylinder numbers and bank layout, refer to the illustration.

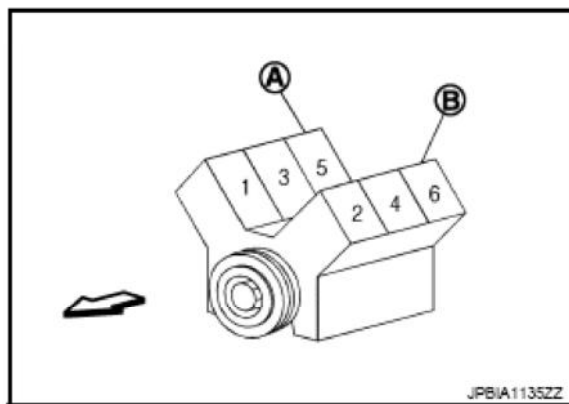**Fig. 7: Locating Bolt Holes**

Courtesy of NISSAN MOTOR CO., U.S.A.

Bank 1 : The bank side including cylinder No. 1 (odd-numbered cylinder side)

Bank 2 : The other bank side of the above (even-numbered cylinder side)


PREPARATION

PREPARATION


Special Service Tools

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.


SPECIAL SERVICE TOOLS CHART

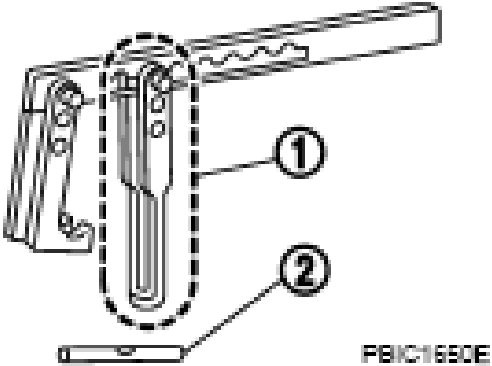Tool number (Kent-Moore No.) Tool name	Description
KV10116200 (J26336-A) Valve spring compressor 1. KV10115900 (J26336-20) Attachment 2. KV10109220 (-) Adapter	 Disassembling valve mechanism Part (1) is a component of KV10116200 (J26336-A), but Part (2) is not so.
KV10107902	Replacing valve oil seal

(J38959)
Valve oil seal puller

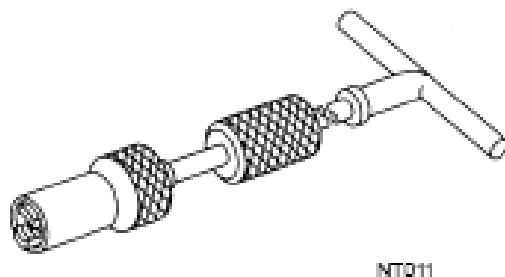

KV10115600
(J-38958)
Valve oil seal drift

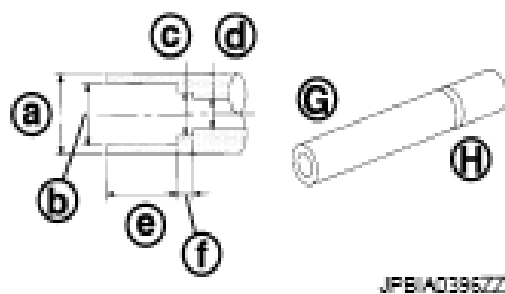


Installing valve oil seal
Use side A (G).

- a. 20 (0.79) dia.
- b. 13 (0.51) dia.
- c. 10.3 (0.406) dia.
- d. 8 (0.31) dia.
- e. 10.7 (0.421)
- f. 5 (0.20)


H: side B
Unit: mm (in)

EM03470000
(J8037)
Piston ring compressor

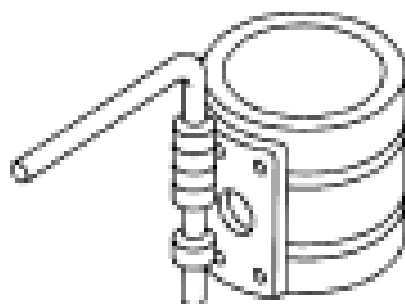

Installing piston assembly
into cylinder bore

ST16610001
(J23907)
Pilot bushing puller

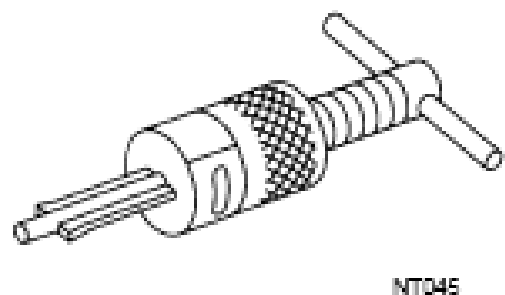


Removing pilot converter

KV10111100

Removing oil pan (lower and


(J37228)
Seal cutter

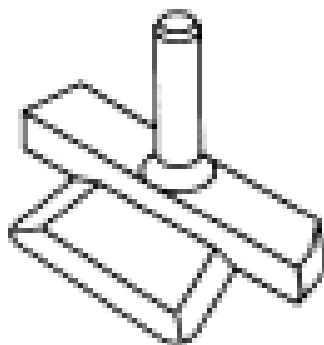

NT046

upper), front and rear timing chain case, etc.


KV10112100
(BT8653-A)
Angle wrench

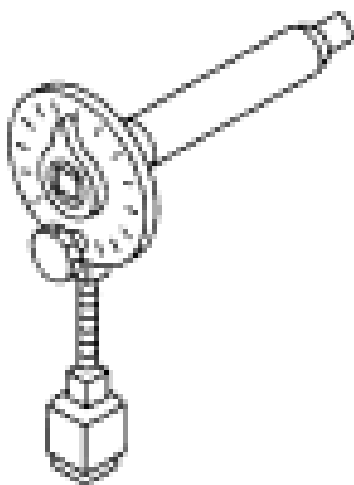

NT014

Tightening bolts for connecting rod bearing cap, cylinder head, etc. in angle

KV10114400
(J38365)
Heated oxygen sensor wrench

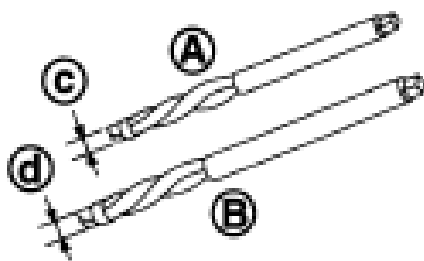

JP81A0401ZZ



Loosening or tightening air fuel ratio sensor 1
a: 22 mm (0.87 in)

KV10118600
(J-48641)
Ring gear stopper

Removing and installing crankshaft pulley


2008 Infiniti G35

2008 ENGINE Engine Mechanical - G35 (Sedan)

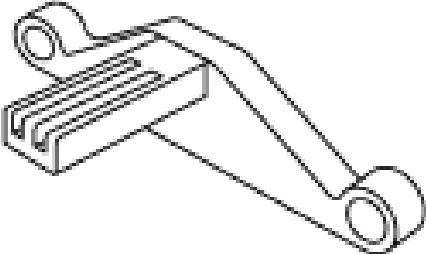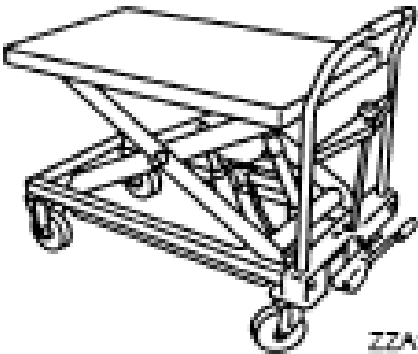 JP81A0406ZZ	
- (J-45488) Quick connector release  ZZA12100	Removing fuel tube quick connectors in engine room


Commercial Service Tools

COMMERCIAL SERVICE TOOLS CHART

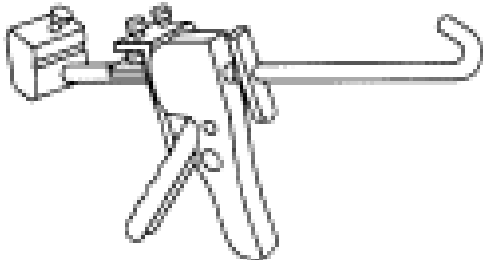(Kent-Moore No.) Tool name	Description
 NT052 (-) Tube presser	Pressing the tube of liquid gasket
(-) Power tool	Loosening nuts and bolts


2008 Infiniti G35

2008 ENGINE Engine Mechanical - G35 (Sedan)

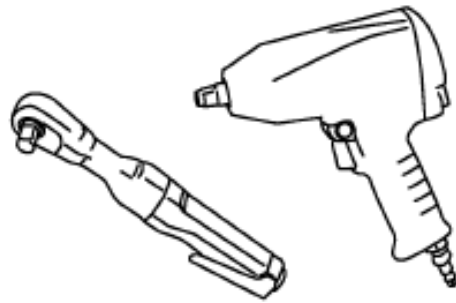

PSIC0190E


(BT3373-F)
Belt tension gauge

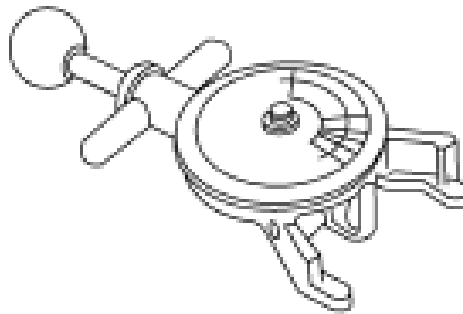

AMA126

Checking drive belt tension

(-)
TORX socket

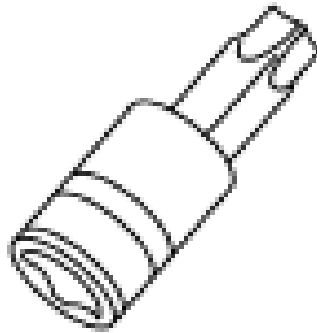

PSIC1113E

Removing and installing
drive plate
Size: T55


(-)
Manual lift table caddy

Removing and installing
engine



77A12100

(J24239-01)
Cylinder head bolt wrench

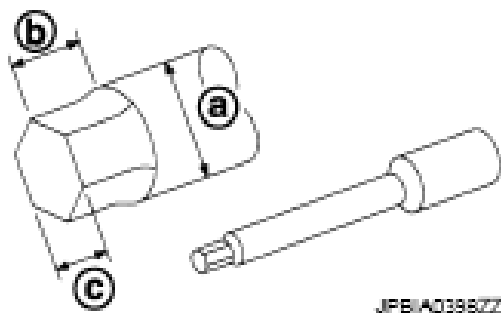


JFBIAD398ZZ

Loosening and tightening
cylinder head bolt, and used
with the angle wrench [SST:
KV10112100 (BT8653-A)]

- a. 13 (0.51) dia.
- b. 12 (0.47)
- c. 10 (0.39)


Unit: mm (in)

- (-)
- 1. Compression gauge
 - 2. Adapter

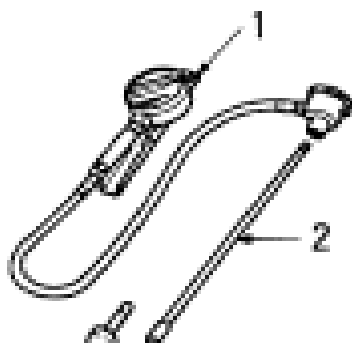

Checking compression
pressure

(-)
Spark plug wrench

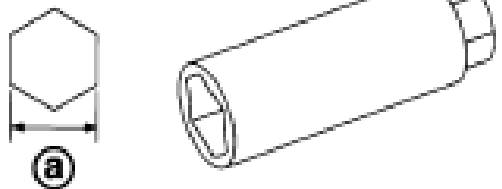

JFBIAD398ZZ


Removing and installing
spark plug

- a. 14 mm (0.55 in)

(-)

Finishing valve seat

Valve seat cutter set

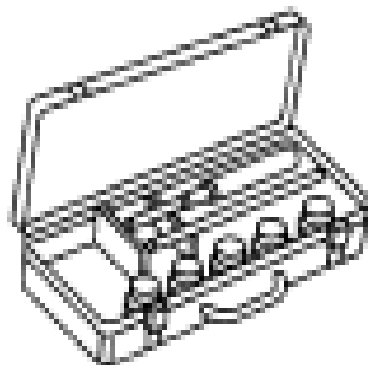

NT048

dimensions


(-)
Piston ring expander



NT030

Removing and installing
piston ring

(-)
Valve guide drift

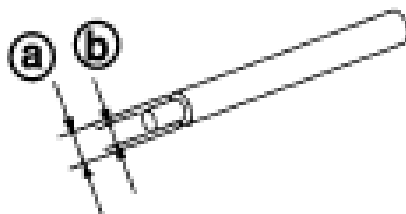

JPE1A0400ZZ

Removing and installing
valve guide


Intake and Exhaust:

- a. 9.5 mm (0.374 in) dia.
- b. 5.5 mm (0.217 in) dia.

(-)
Valve guide reamer


- A. Reaming valve guide inner hole
- B. Reaming hole for oversize valve guide

Intake and Exhaust:
c: 6.0 mm (0.236 in) dia.
d: 10.2 mm (0.402 in) dia.

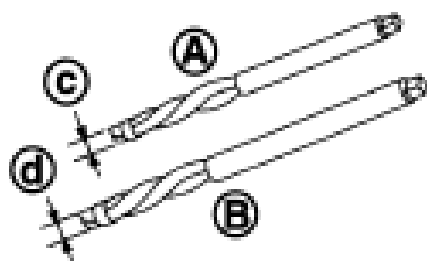

JPBIA0401ZZ

(J-43897-18)
(J-43897-12)
Oxygen sensor thread cleaner

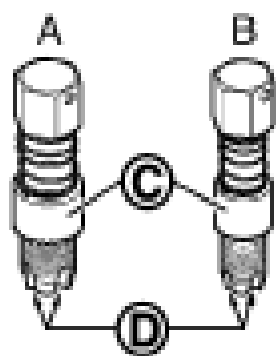


JPBIA0238ZZ

Reconditioning the exhaust system threads before installing a new air fuel ratio sensor and heated oxygen sensor (Use with anti-seize lubricant shown below.)

- A. **J-43897-18 [18 mm (0.71 in) dia.] for zirconia heated oxygen sensor and air fuel ratio sensor**
- B. **J-43897-12 [12 mm (0.47 in) dia.] for titania heated oxygen sensor**
- C. Mating surface shave cylinder
- D. Flutes

(-)
Anti-seize lubricant (Permatex 133AR or equivalent meeting MIL specification MIL-A-907)

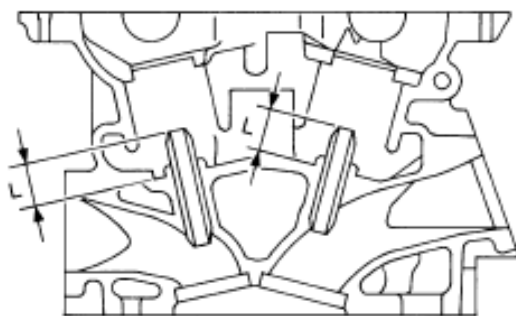


SEIMS0E

Lubricating oxygen sensor thread cleaning tool when reconditioning exhaust system threads

ON-VEHICLE MAINTENANCE

DRIVE BELTS

Exploded View

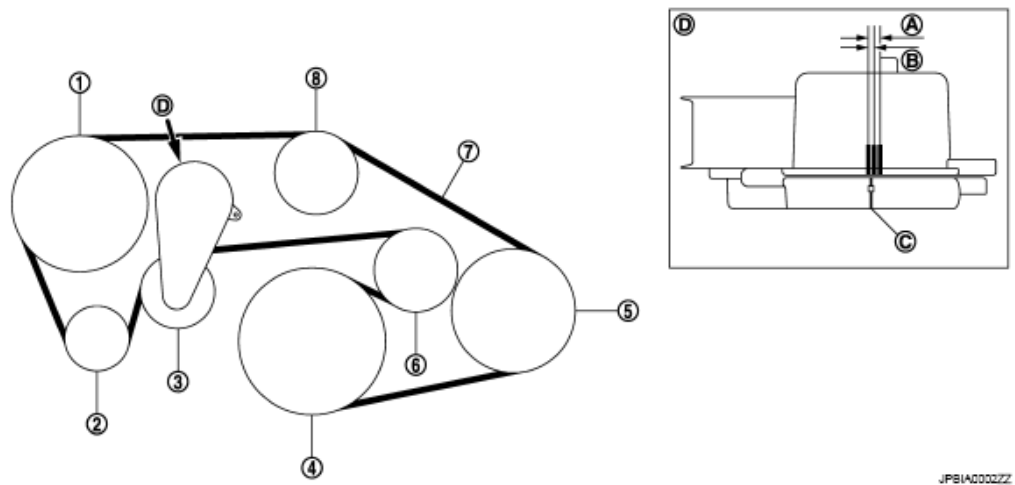

JPB(A000222)

- | | | |
|----------------------------|---|------------------------------|
| 1. Power steering oil pump | 2. Alternator | 3. Drive belt auto-tensioner |
| 4. Crankshaft pulley | 5. A/C compressor | 6. Idler pulley |
| 7. Drive belt | 8. Idler pulley | |
| A. Possible use range | B. Range when new drive belt is installed | C. Indicator |
| D. View D | | |

Fig. 8: View Of Drive Belts And Pulley
Courtesy of NISSAN MOTOR CO., U.S.A.

Checking

WARNING: Be sure to perform the this step when engine is stopped.

- Make sure that the indicator (C) (notch on fixed side) of drive belt auto-tensioner is within the possible use range (A).

NOTE:

- Check the drive belt auto-tensioner indication when the engine is cold.
- When new drive belt is installed, the indicator (notch on fixed side) should be within the range (B) in the figure.
- Visually check entire drive belt for wear, damage or cracks.
- If the indicator (notch on fixed side) is out of the possible use range or belt is damaged, replace drive belt.

Tension Adjustment

Refer to , "DRIVE BELT".

Removal and Installation

REMOVAL

1. Remove radiator reservoir tank. Refer to radiator.
2. Remove engine undercover with power tool.
3. Remove radiator cooling fan assembly.
4. While securely holding the square hole (A) in pulley center of auto tensioner (1) with a spinner handle, move spinner handle in the direction of arrow (loosening direction of drive belt).

CAUTION: Avoid placing hand in a location where pinching may occur if the holding tool accidentally comes off.

<--: Loosening direction of drive belt

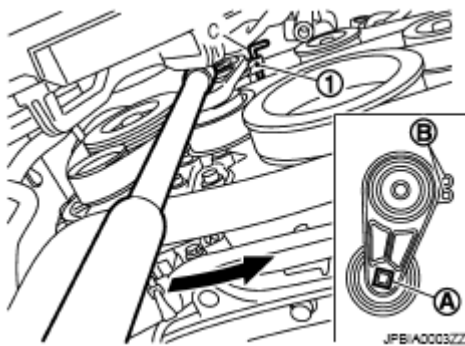


Fig. 9: Moving Spinner Handle

Courtesy of NISSAN MOTOR CO., U.S.A.

5. Under the above condition, insert a metallic bar of approximately 6mm (0.24 in) in diameter [hexagonal wrench (C) shown as example in the figure] through the holding boss (B) to lock auto tensioner pulley arm.
6. Remove drive belt.

INSTALLATION

Note the following, and install in the reverse order of removal.

- CAUTION:**
- Make sure drive belt is securely installed around all pulleys.
 - Make sure drive belt is correctly engaged with the pulley groove.
 - Check for engine oil and engine coolant are not adhered drive belt and pulley groove.

Inspection

INSPECTION AFTER INSTALLATION

- Turn crankshaft pulley clockwise several times to equalize tension between each pulley, and then confirm tension of drive belt at indicator (notch on fixed side) is within the possible use range.

AIR CLEANER FILTER

Removal and Installation

REMOVAL

1. Unhook clips (1) and remove holder (3) from air cleaner case (2).

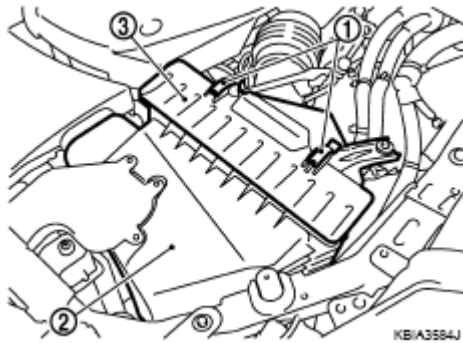


Fig. 10: Identifying Clips And Holder
Courtesy of NISSAN MOTOR CO., U.S.A.

2. Remove air cleaner filter (1) from air cleaner case (2).

3: Holder

4: Clip

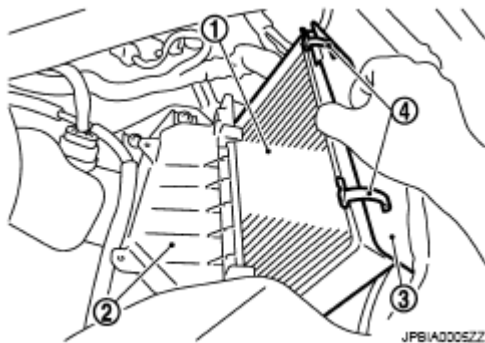


Fig. 11: View Of Air Cleaner Filter And Air Cleaner Case
Courtesy of NISSAN MOTOR CO., U.S.A.

INSTALLATION

Note the following, and install in the reverse order of removal.


- Install the air cleaner filter by aligning the seal with the notch of air cleaner case.

SPARK PLUG

Exploded View

B. See **IGNITION COIL, SPARK PLUG AND ROCKER COVER**.

Symbol	Description
	N·m (kg-m, ft-lb)
	N·m (kg-m, in-lb)
	Always replace after disassembly.

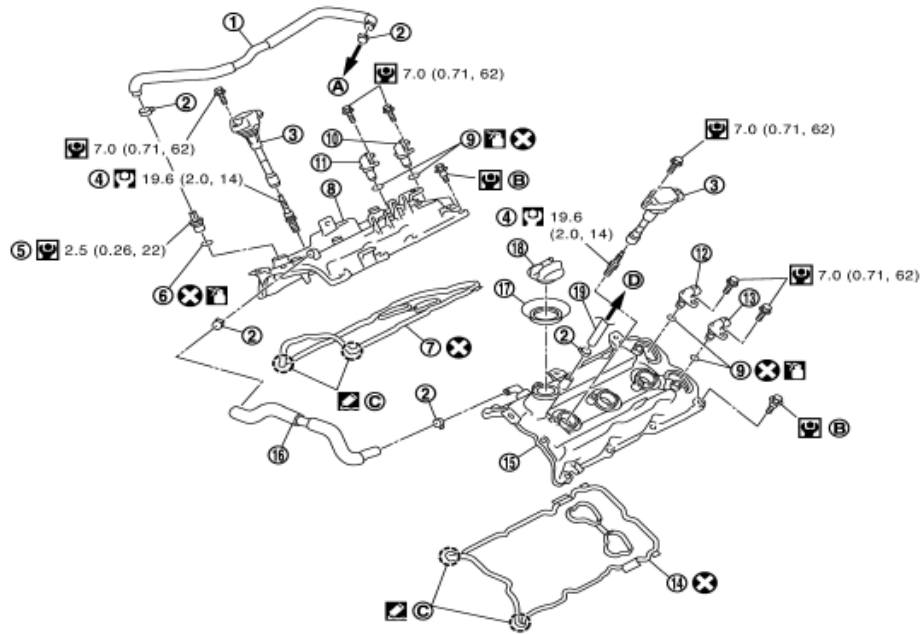

JPSIA0009ZZ

- | | | |
|---|---|---|
| 1. PCV hose | 2. Clamp | 3. Ignition coil |
| 4. Spark plug | 5. PCV valve | 6. O-ring |
| 7. Rocker cover gasket (right bank) | 8. Rocker cover (right bank) | 9. O-ring |
| 10. Camshaft position sensor (PHASE) (bank 1) | 11. Exhaust valve timing control position sensor (bank 1) | 12. Camshaft position sensor (PHASE) (bank 2) |
| 13. Exhaust valve timing control position sensor (bank 2) | 14. Rocker cover gasket (left bank) | 15. Rocker cover (left bank) |
| 16. PCV hose | 17. Oil catcher | 18. Oil filler cap |
| 19. PCV hose | | |
| A. To intake manifold collector | B. See appropriate information | C. Camshaft bracket side |
| D. To air duct | | |

Fig. 12: Exploded View Of Spark Plug With Torque Specifications
Courtesy of NISSAN MOTOR CO., U.S.A.

Removal and Installation

REMOVAL

1. Remove engine cover with power tool. Refer to , "**EXPLODED VIEW**".
2. Remove air cleaner case and air duct (RH and LH). Refer to , "**EXPLODED VIEW**".
3. Remove electric throttle control actuator. Refer to , "**EXPLODED VIEW**".

4. Remove ignition coil. Refer to , "**REMOVAL AND INSTALLATION**".
5. Remove spark plug with a spark plug wrench (commercial service tool).

a :14 mm (0.55 in)

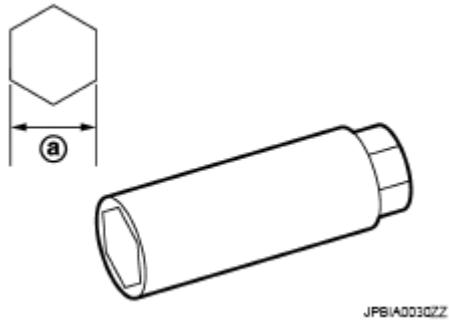


Fig. 13: Identifying Spark Plug Wrench
Courtesy of NISSAN MOTOR CO., U.S.A.

INSTALLATION

Installation is the reverse order of removal.

Inspection

INSPECTION AFTER REMOVAL

Use the standard type spark plug for normal condition.


Spark plug (Standard type) : Refer to , "**SPARK PLUG**".

CAUTION:

- Do not drop or shock spark plug.
- Do not use a wire brush for cleaning.
- If plug tip is covered with carbon, spark plug cleaner may be used.

Cleaner air pressure: Less than 588 kPa (6 kg/ cm² , 85 psi)


Cleaning time: Less than 20 seconds

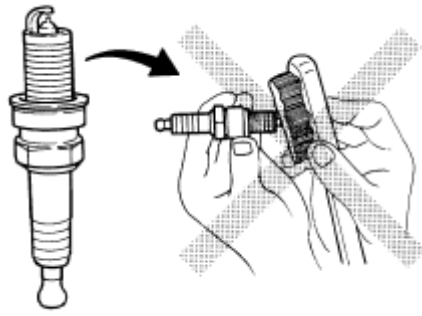

SMA773C

Fig. 14: Precaution For Spark Plug Cleaning
Courtesy of NISSAN MOTOR CO., U.S.A.

- Checking and adjusting plug gap is not required between change intervals.

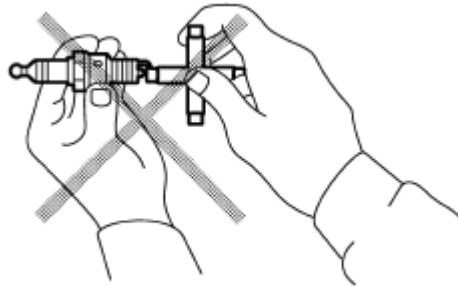

JPB/A0031ZZ

Fig. 15: Precaution For Adjusting Spark Plug Gap
Courtesy of NISSAN MOTOR CO., U.S.A.

CAMSHAFT VALVE CLEARANCE


Inspection and Adjustment

INSPECTION

Perform inspection as follows after removal, installation or replacement of camshaft or valve-related parts, or if there is unusual engine conditions regarding valve clearance.

In cases of removing/installing or replacing camshaft and valve related parts, or of unusual engine conditions due to changes in valve clearance (found malfunctions during starting, idling or causing noise), perform inspection as follows:

<=: Engine front

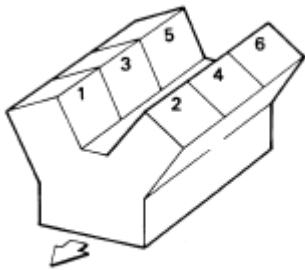


JFBIAD164ZZ

Fig. 16: Identifying Engine Block

Courtesy of NISSAN MOTOR CO., U.S.A.

1. Remove rocker covers (right and left bank). Refer to , "**REMOVAL AND INSTALLATION**".
2. Measure the valve clearance as follows:
 - a. Set No. 1 cylinder at TDC of its compression stroke.
 - Rotate crankshaft pulley clockwise to align timing mark (grooved line without color) with timing indicator.

<--: Timing mark (grooved line without color)

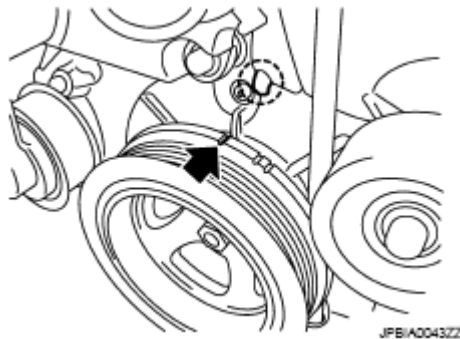

JFBIAD043ZZ

Fig. 17: Locating Timing Mark

Courtesy of NISSAN MOTOR CO., U.S.A.

- Make sure that intake and exhaust cam nose on No. 1 cylinder (engine front side of right bank) are located as shown in the figure.
- If not, turn crankshaft one revolution (360 degrees) and align as shown in the figure.

<=: Engine front

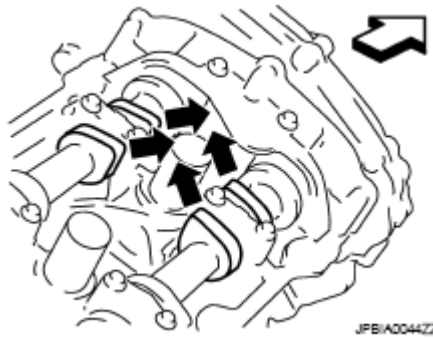


Fig. 18: Locating Intake And Exhaust Cam Nose
Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Use a feeler gauge, measure the clearance between valve lifter and camshaft.

Valve clearance : Refer to , "CAMSHAFT".

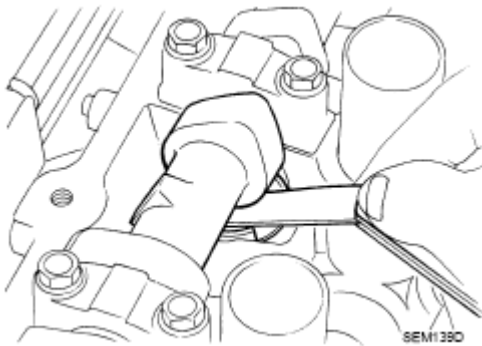


Fig. 19: Measuring Clearance Between Valve Lifter And Camshaft
Courtesy of NISSAN MOTOR CO., U.S.A.

- By referring to the figure, measure the valve clearances at locations marked "x" as shown in the table below (locations indicated in the figure).

<=: Engine front

- No. 1 cylinder at compression TDC

COMPRESSION CHART

Measuring position [right bank (A)]		No. 1 CYL.	No. 3 CYL.	No. 5 CYL.
No. 1 cylinder at compression TDC	EXH (C)		x (B)	
	INT (D)	x (E)		
Measuring position [left bank (H)]		No. 2 CYL.	No. 4 CYL.	No. 6 CYL.
No. 1 cylinder at compression TDC	INT (D)			x (F)
	EXH (C)	x (G)		

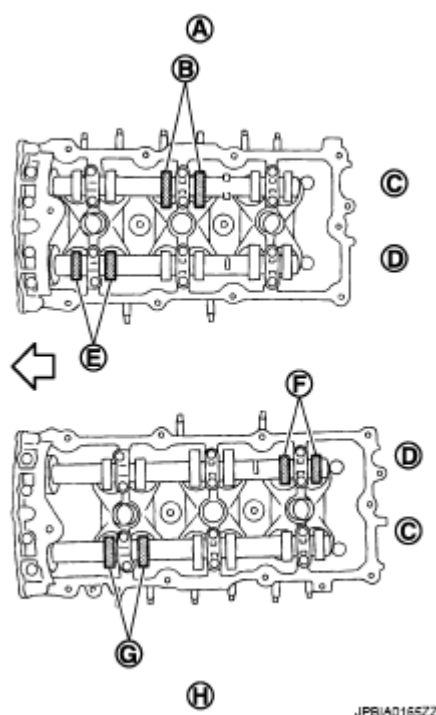


Fig. 20: Identifying Camshaft Valve
Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Rotate crankshaft by 240 degrees clockwise (when viewed from engine front) to align No. 3 cylinder at TDC its compression stroke.

NOTE: To align cylinder No. 3 with the compression top dead center, place matching marks (A) on the crankshaft pulley (1) side and on the cylinder block side at a point 240°(b) counterclockwise from the compression top dead center using the hex head of the crankshaft pulley bolt as a guide.

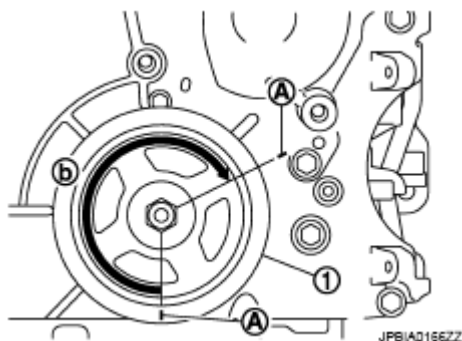


Fig. 21: Rotating Crankshaft Clockwise
Courtesy of NISSAN MOTOR CO., U.S.A.

- By referring to the figure, measure the valve clearances at locations marked "x" as shown in

the table below (locations indicated in the figure).

<=: Engine front

- No. 3 cylinder at compression TDC

COMPRESSION CHART

Measuring position [right bank (A)]		No. 1 CYL.	No. 3 CYL.	No. 5 CYL.
No. 3 cylinder at compression TDC	EXH (C)	-	-	x (B)
	INT (D)	-	x (E)	-
Measuring position [left bank (H)]		No. 2 CYL.	No. 4 CYL.	No. 6 CYL.
No. 3 cylinder at compression TDC	INT (D)	x (F)	-	-
	EXH (C)	-	x (G)	-

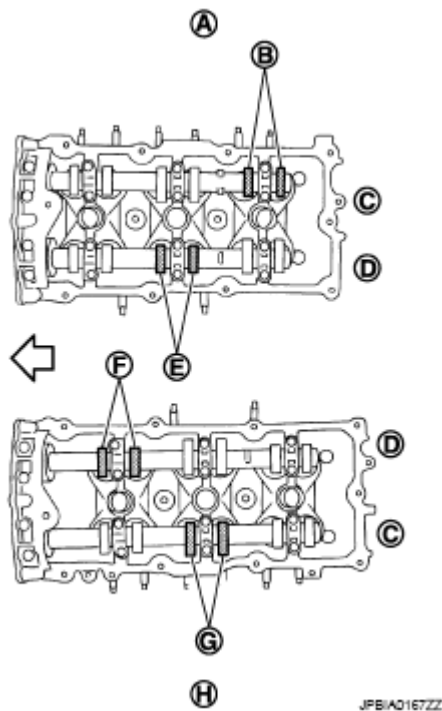


Fig. 22: Identifying Camshaft Valve
Courtesy of NISSAN MOTOR CO., U.S.A.

- Rotate crankshaft by 240 degrees clockwise (when viewed from engine front) to align No. 5 cylinder at TDC of compression stroke.

NOTE: To align cylinder No. 5 with the compression top dead center, place matching marks (A) on the crankshaft pulley (1) side and on the cylinder block side at a point 240°counterclockwise from the compression top dead center using the hex head of the crankshaft pulley bolt as a guide.

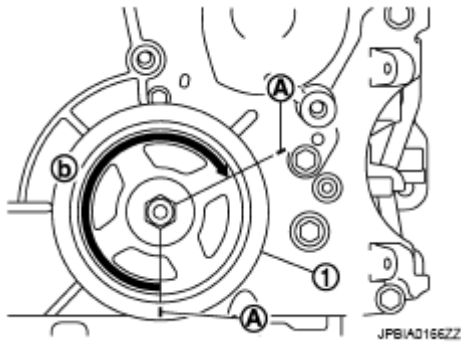


Fig. 23: Rotating Crankshaft Clockwise
Courtesy of NISSAN MOTOR CO., U.S.A.

- By referring to the figure, measure the valve clearances at locations marked "x" as shown in the table below (locations indicated in the figure).

<=: Engine front

- No. 5 cylinder at compression TDC

COMPRESSION CHART

Measuring position [right bank (A)]		No. 1 CYL.	No. 3 CYL.	No. 5 CYL.
No. 5 cylinder at compression TDC	EXH (C)	x (B)	-	-
	INT (D)	-	-	x (E)
Measuring position [left bank (H)]		No. 2 CYL.	No. 4 CYL.	No. 6 CYL.
No. 5 cylinder at compression TDC	INT (D)	-	x (F)	-
	EXH (C)	-	-	x (G)

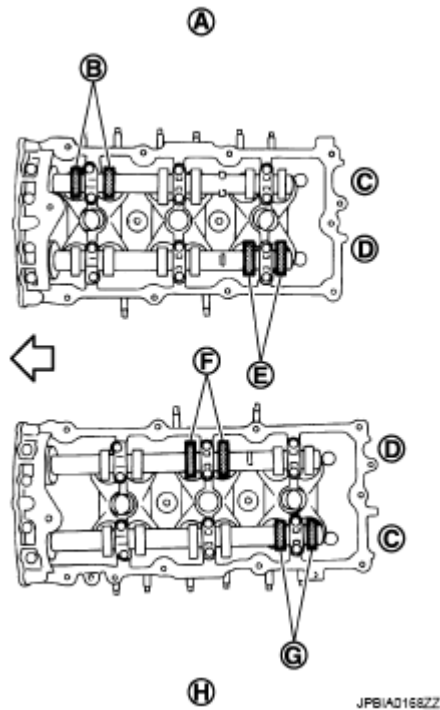


Fig. 24: Identifying Camshaft Valve
Courtesy of NISSAN MOTOR CO., U.S.A.

3. Perform adjustment if the measured value is out of the standard. Refer to "**ADJUSTMENT**".

ADJUSTMENT

- Perform adjustment depending on selected head thickness of valve lifter.
1. Measure the valve clearance. Refer to "**INSPECTION**".
 2. Remove camshaft. Refer to , "**REMOVAL AND INSTALLATION**".
 3. Remove valve lifters at the locations that are out of the standard.
 4. Measure the center thickness of the removed valve lifters with a micrometer (A).

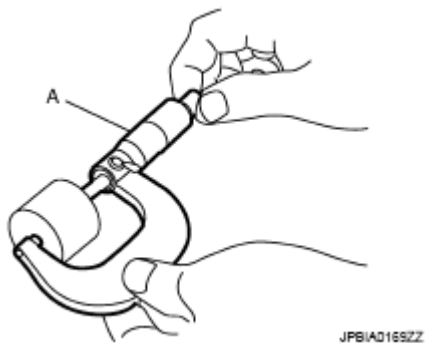


Fig. 25: Measuring Center Thickness Of Valve Lifters
Courtesy of NISSAN MOTOR CO., U.S.A.

5. Use the equation below to calculate valve lifter thickness for replacement.

Valve lifter thickness calculation: $t = t1 + (C1 - C2)$

t = Valve lifter thickness to be replaced

t1 = Removed valve lifter thickness

C1 = Measured valve clearance

C2 = Standard valve clearance:

Intake : 0.30 mm (0.012 in)


Exhaust : 0.33 mm (0.013 in)

- Thickness of new valve lifter can be identified by stamp marks on the reverse side (inside the cylinder).

Stamp mark 788T indicates 7.88 mm (0.3102 in) in thickness.

A. Stamp

B. thickness of valve lifter

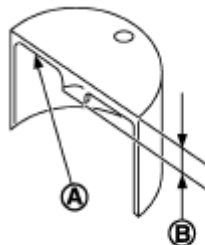

JFBIAD170ZZ

Fig. 26: Identifying Thickness Of Valve Lifter
Courtesy of NISSAN MOTOR CO., U.S.A.

Available thickness of valve lifter: 27 sizes with range 7.88 to 8.40 mm (0.3102 to 0.3307 in) in steps of 0.02 mm (0.0008 in) (when manufactured at factory). Refer to , "CAMSHAFT".

6. Install selected valve lifter.
7. Install camshaft. Refer to , "REMOVAL AND INSTALLATION".
8. Manually turn crankshaft pulley a few turns.
9. Make sure that the valve clearances for cold engine are within the specifications by referring to the specified values. Refer to , "INSPECTION AND ADJUSTMENT".
10. Install all removal parts in the reverse order of removal.

11. Warm up the engine, and check for unusual noise and vibration.

COMPRESSION PRESSURE

Inspection

1. Warm up engine thoroughly. Then, stop it.
2. Release fuel pressure. Refer to "INSPECTION".
3. Disconnect fuel pump fuse (1) from IPDM E/R (2) to avoid fuel injection during measurement.

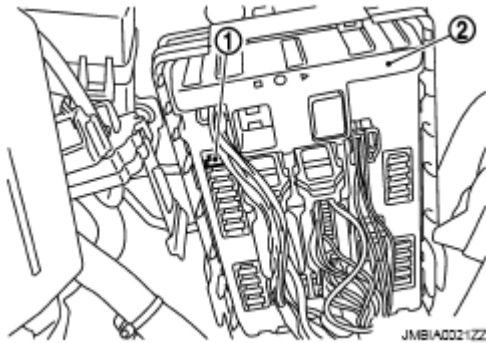


Fig. 27: Identifying Fuel Pump Fuse
Courtesy of NISSAN MOTOR CO., U.S.A.

4. Remove engine cover with power tool. Refer to , "EXPLODED VIEW".
5. Remove ignition coil and spark plug from each cylinder. Refer to , "EXPLODED VIEW".
6. Connect engine tachometer (not required in use of CONSULT-III).
7. Install compression gauge with an adapter (commercial service tool) onto spark plug hole.

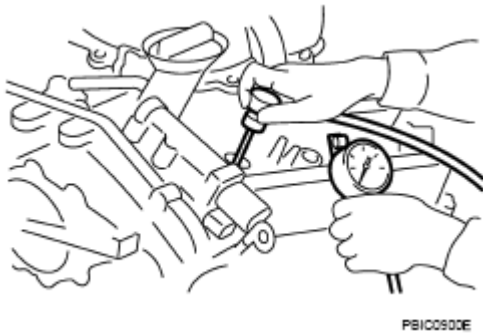


Fig. 28: Installing Compression Gauge With An Adapter Onto Spark Plug Hole
Courtesy of NISSAN MOTOR CO., U.S.A.

- Use the adapter whose picking up end inserted to spark plug hole is smaller than 20 mm (0.79 in) in diameter. Otherwise, it may be caught by cylinder head during removal.

a : 20 mm (0.79 in)



JPB/AQ171ZZ

Fig. 29: Identifying Adapter Dimension
 Courtesy of NISSAN MOTOR CO., U.S.A.

8. With accelerator pedal fully depressed, turn ignition switch to "START" for cranking. When the gauge pointer stabilizes, read the compression pressure and the engine rpm. Perform these steps to check each cylinder.

Compression pressure : Refer to , "GENERAL SPECIFICATION".

CAUTION: Always use a fully charged battery to obtain the specified engine speed.

- If the engine speed is out of the specified range, check battery liquid for proper gravity. Check the engine speed again with normal battery gravity.
 - If compression pressure is below minimum value, check valve clearances and parts associated with combustion chamber (valve, valve seat, piston, piston ring, cylinder bore, cylinder head, cylinder head gasket). After the checking, measure compression pressure again.
 - If some cylinder has low compression pressure, pour small amount of engine oil into the spark plug hole of the cylinder to re-check it for compression.
 - If the added engine oil improves the compression, piston rings may be worn out or damaged. Check piston rings and replace if necessary.
 - If the compression pressure remains at low level despite the addition of engine oil, valves may be malfunctioning. Check valves for damage. Replace valve or valve seat accordingly.
 - If two adjacent cylinders have respectively low compression pressure and their compression remains low even after the addition of engine oil, cylinder head gaskets are leaking. In such a case, replace cylinder head gaskets.
9. After inspection is completed, install removed parts.
 10. Start the engine, and make sure that the engine runs smoothly.
 11. Perform trouble diagnosis. If DTC appears, erase it. Refer to "DESCRIPTION".

ON-VEHICLE REPAIR

DRIVE BELT AUTO TENSIONER AND IDLER PULLEY

Exploded View

Symbol	Description
	N·m (kg-m, ft-lb)
	N·m (kg-m, in-lb)
	Always replace after disassembly.

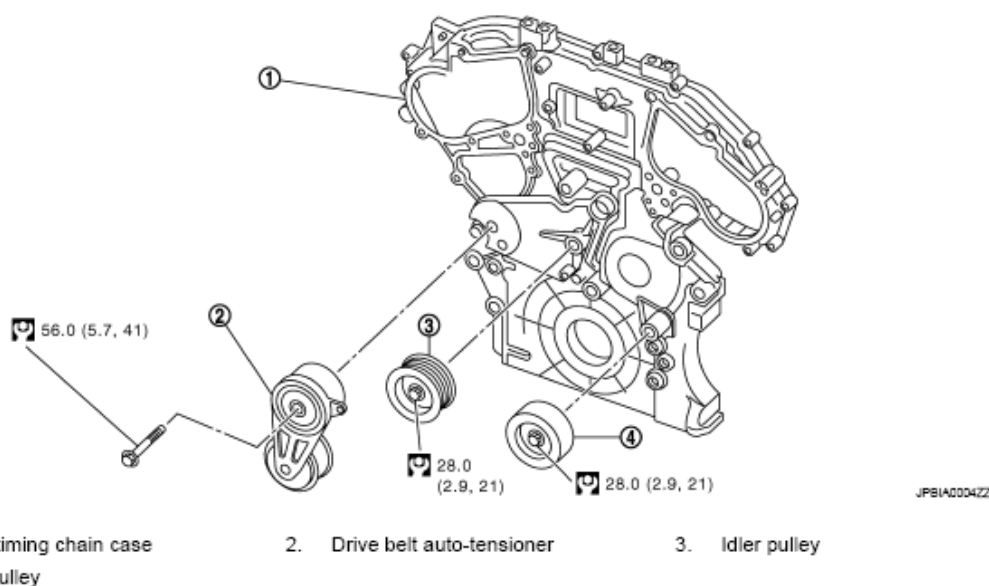


Fig. 30: Exploded View Of Drive Belt Auto Tensioner And Idler Pulley With Torque Specifications
 Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to "COMPONENTS" for symbol marks in the figure.

Removal and Installation

Removal

1. Remove drive belt. Refer to , "EXPLODED VIEW".
 - Keep auto-tensioner pulley arm locked after drive belt is removed.
2. Remove auto-tensioner and idler pulley. Refer to , "EXPLODED VIEW".
 - Keep auto-tensioner pulley arm locked to install or remove auto-tensioner.

Installation


Installation is the reverse order of removal.

CAUTION: If there is damage greater than peeled paint, replace drive belt auto-tensioner.

AIR CLEANER AND AIR DUCT

Exploded View

Symbol	Description
	N·m (kg-m, ft-lb)
	N·m (kg-m, in-lb)
	Always replace after disassembly.

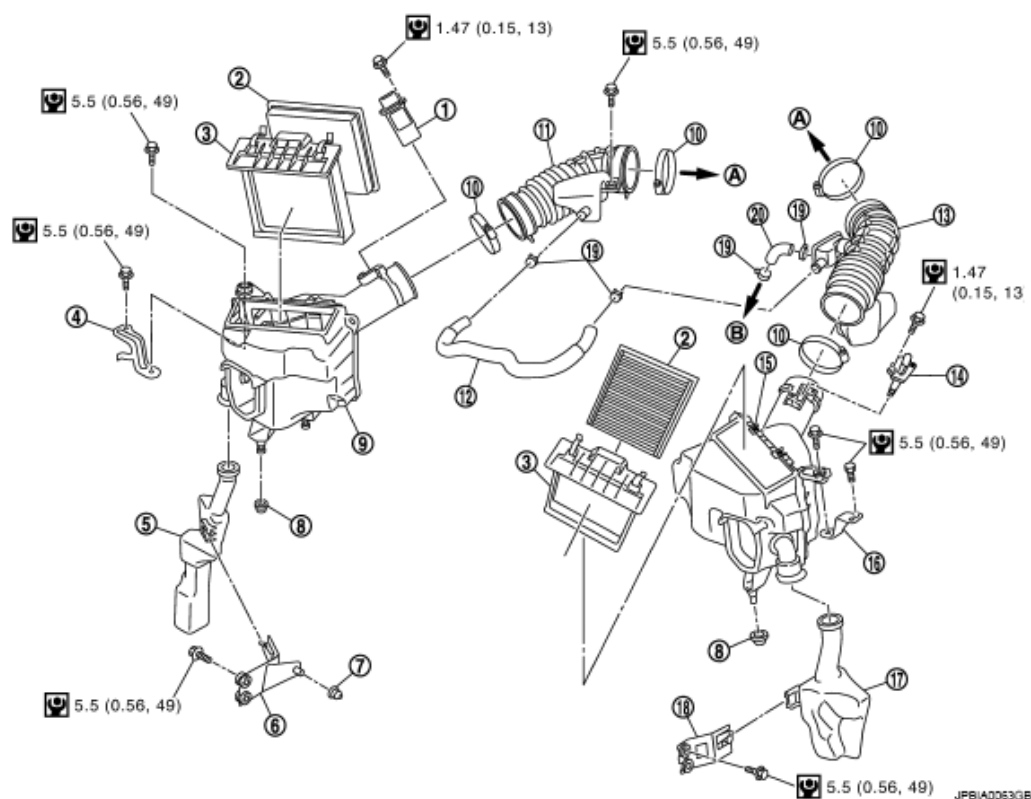

- | | | |
|--|--------------------------------|---------------------------|
| 1. Mass air flow sensor (RH) | 2. Air cleaner filter | 3. Holder |
| 4. Bracket | 5. Resonator (RH) | 6. Bracket |
| 7. Grommet | 8. Grommet | 9. Air cleaner case (RH) |
| 10. Clamp | 11. Air duct (RH) | 12. PCV hose |
| 13. Air duct (LH) | 14. Mass air flow sensor (LH) | 15. Air cleaner case (LH) |
| 16. Bracket | 17. Resonator (LH) | 18. Bracket |
| 19. Clamp | 20. PCV hose | |
| A. To electric throttle control actuator | B. To rocker cover (left bank) | |

Fig. 31: Exploded View Of Air Cleaner And Air Duct With Torque Specifications
 Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to "**COMPONENTS**" for symbol marks in the figure.

Removal and Installation

REMOVAL

1. Disconnect mass air flow sensor harness connector.
2. Disconnect PCV hose.
3. Remove air cleaner case/mass air flow sensor assembly and air duct/air hose disconnecting their joints.

- Add marks as necessary for easier installation.
4. Remove mass air flow sensor from air cleaner case, as necessary.

CAUTION: Handle mass air flow sensor with the following cares.

- **Do not shock it.**
- **Do not disassemble it.**
- **Do not touch its sensor.**

INSTALLATION

Note the following, and install in the reverse order of removal.

Inspection

INSPECTION AFTER REMOVAL


Inspect air duct and resonator assembly for crack or tear.

- If anything found, replace air duct and resonator assembly

INTAKE MANIFOLD COLLECTOR

Exploded View

Symbol	Description
	N·m (kg-m, ft-lb)
	N·m (kg-m, in-lb)
	Always replace after disassembly.

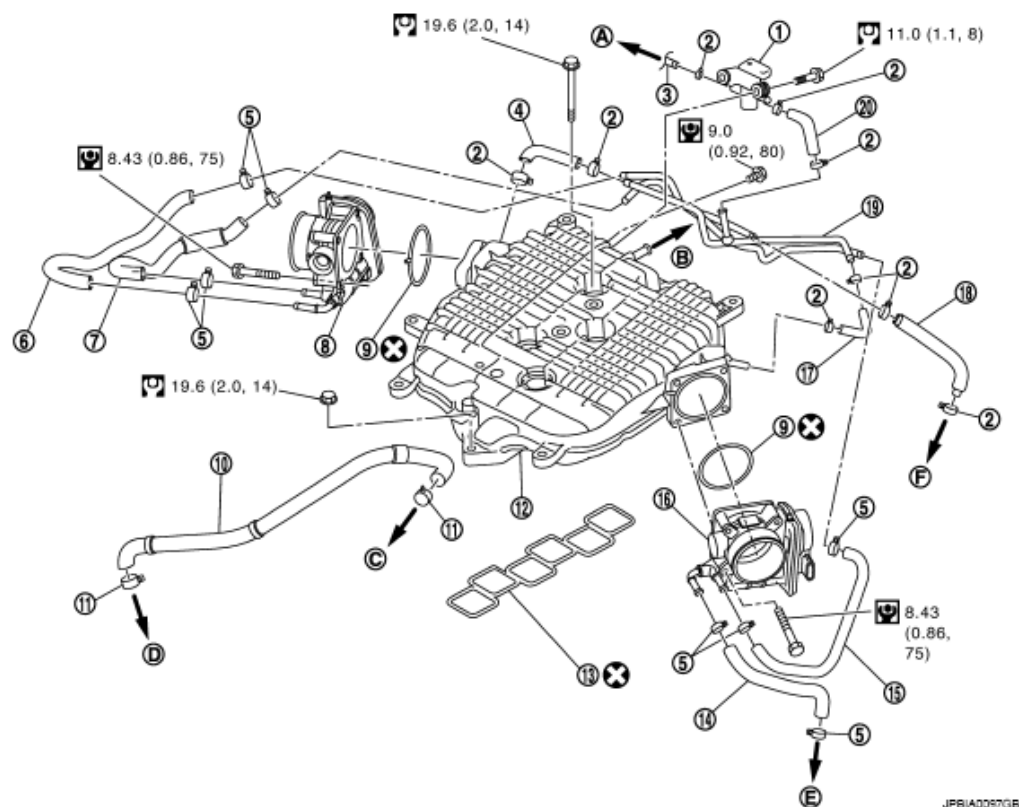

JPB/A0357GB

- | | | |
|--|---|---------------------------------|
| 1. EVAP canister purge control solenoid valve | 2. Clamp | 3. EVAP hose |
| 4. EVAP hose | 5. Clamp | 6. Water hose |
| 7. Water hose | 8. Electric throttle control actuator (bank1) | 9. Gasket |
| 10. PCV hose | 11. Clamp | 12. Intake manifold collector |
| 13. Gasket | 14. Water hose | 15. Water hose |
| 16. Electric throttle control actuator (bank2) | 17. EVAP hose | 18. Water hose |
| 19. EVAP tube assembly | 20. EVAP hose | |
| A. To vacuum pipe | B. To brake booster | C. To intake manifold collector |
| D. To PCV valve | E. To heater pipe | F. To water outlet (rear) |

Fig. 32: Exploded View Of Intake Manifold Collector With Torque Specifications
 Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to "**COMPONENTS**" for symbol marks in the figure.

Removal and Installation

REMOVAL

WARNING: To avoid the danger of being scalded, never drain engine coolant when the engine is hot.

1. Remove engine cover (1) with power tool.

Symbol	Description
	N·m (kg-m, ft-lb)
	N·m (kg-m, in-lb)
	Always replace after disassembly.

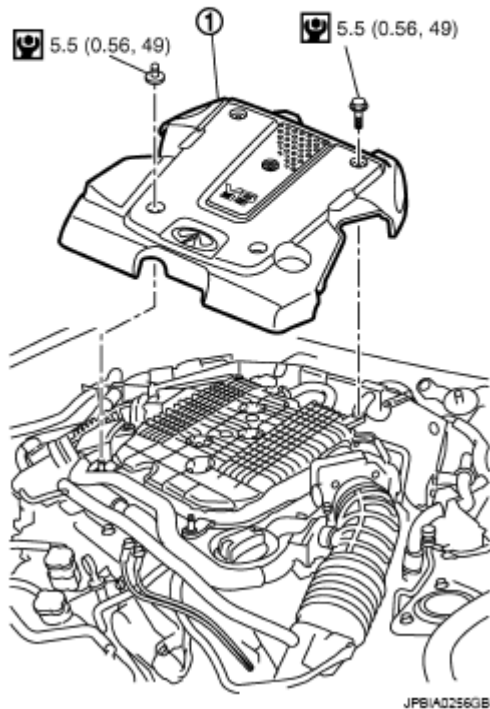


Fig. 33: Identifying Engine Cover With Torque Specifications
 Courtesy of NISSAN MOTOR CO., U.S.A.

2. Remove air cleaner case and air duct (RH and LH). Refer to , "EXPLODED VIEW".
3. Remove electric throttle control actuator as follows:
 - a. Drain engine coolant, or when water hoses are disconnected, attach plug to prevent engine coolant leakage.

CAUTION:

- Perform this step when engine is cold.
- Do not spill engine coolant on drive belt.

- b. Disconnect water hoses from electric throttle control actuator. when engine coolant is not drained from radiator, attach plug to water hoses to prevent engine coolant leakage.
- c. Disconnect harness connector.

d. Loosen mounting bolts in reverse order as shown in the figure.

NOTE:

- When removing only intake manifold collector, move electric throttle control actuator without disconnecting the water hose.
- The figure shows the electric throttle control actuator (bank 1) viewed from the air duct side.
- Viewed from the air duct side, order of loosening mounting bolts of electric throttle control actuator (bank 2) is the same as that of the electric throttle control actuator (bank 1).

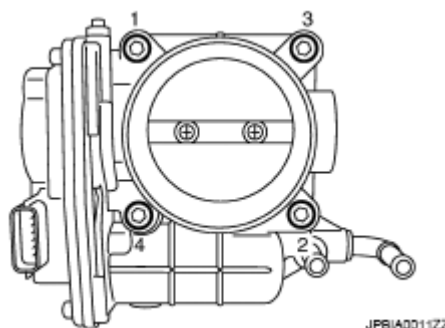


Fig. 34: Identifying Electric Throttle Control Actuator Bolts Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

4. Disconnect vacuum hose, PCV hose and EVAP hose from intake manifold collector.
5. Remove EVAP canister purge volume control solenoid valve and EVAP tube assembly from intake manifold collector.
6. Loosen mounting bolts and nuts with power tool in the reverse order as shown in the figure to remove intake manifold collector.

<=: Engine front

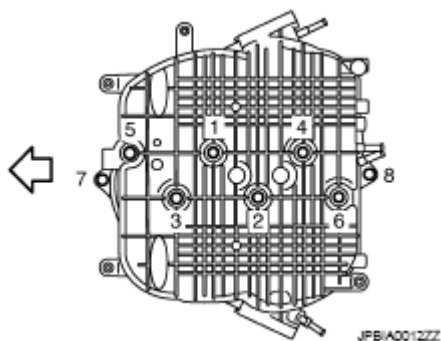


Fig. 35: Loosening Mounting Bolts And Nuts In Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

INSTALLATION

Note the following, and install in the reverse order of removal.

INTAKE MANIFOLD COLLECTOR

- If stud bolts were removed, install them and tighten to the specified torque below.

(Torque spec): **10.8 N.m (1.1 kg-m, 8 ft-lb)**

- Tighten mounting bolts and nuts in numerical order as shown in the figure.

<=: Engine front

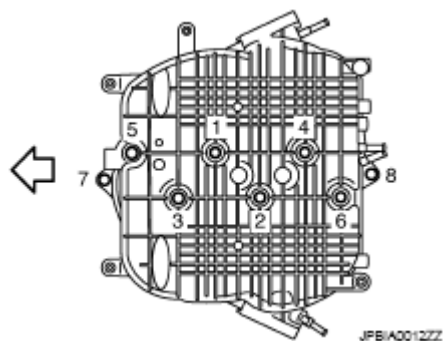


Fig. 36: Tightening Mounting Bolts And Nuts In Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

WATER HOSE

- Insert hose by 27 to 32 mm (1.06 to 1.26 in) from connector end.
- Clamp hose at location of 3 to 7 mm (0.12 to 0.28 in) from hose end.

ELECTRIC THROTTLE CONTROL ACTUATOR (BANK 1 AND BANK 2)

- Tighten in numerical order as shown in the figure.
- Perform the "Throttle Valve Closed Position Learning" when harness connector of electric throttle control actuator is disconnected. Refer to "**THROTTLE VALVE CLOSED POSITION LEARNING : DESCRIPTION**".
- Perform the "Idle Air Volume Learning" and "Throttle Valve Closed Position Learning" when electric throttle control actuator is replaced. Refer to "**IDLE AIR VOLUME LEARNING : DESCRIPTION**" and "**THROTTLE VALVE CLOSED POSITION LEARNING : DESCRIPTION**".

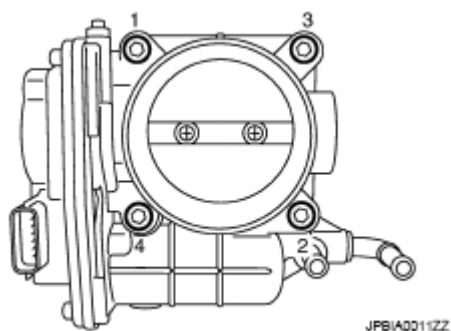


Fig. 37: Identifying Electric Throttle Control Actuator Bolts Sequence
 Courtesy of NISSAN MOTOR CO., U.S.A.

NOTE:


- The figure shows the electric throttle control actuator (bank 1) viewed from the air duct side.
- Viewed from the air duct side, order of loosening mounting bolts of electric throttle control actuator (bank 2) is the same as that of the electric throttle control actuator (bank 1).

INTAKE MANIFOLD

Exploded View

A. See **INTAKE MANIFOLD**.

Symbol	Description
	N·m (kg-m, ft-lb)
	N·m (kg-m, in-lb)
	Always replace after disassembly.

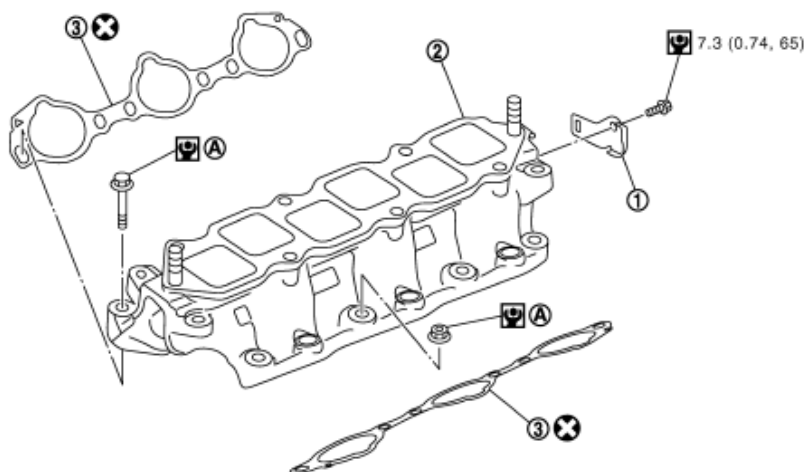

JPSIA0006ZZ

1. Harness bracket

2. Intake manifold

3. Gasket

A. See appropriate information

Fig. 38: Exploded View Of Intake Manifold With Torque Specifications
Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to "**COMPONENTS**" for symbol marks in the figure.

Removal and Installation

REMOVAL

1. Release fuel pressure. Refer to "**INSPECTION**".
2. Remove intake manifold collector. Refer to , "**EXPLODED VIEW**".
3. Remove fuel tube and fuel injector assembly. Refer to , "**EXPLODED VIEW**".
4. Remove harness bracket.
5. Loosen mounting bolts and nuts in reverse order as shown in the figure to remove intake manifold with power tool.

<=: Engine front

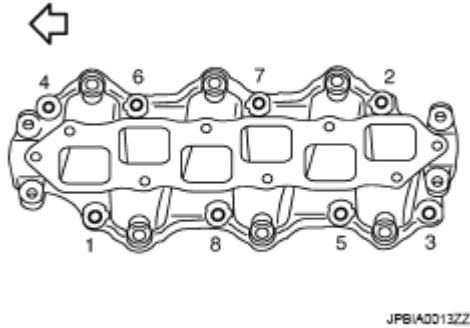


Fig. 39: Loosening Mounting Bolts And Nuts In Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

6. Remove gaskets.

CAUTION: Cover engine openings to avoid entry of foreign materials.

INSTALLATION

Note the following, and install in the reverse order of removal.

INTAKE MANIFOLD

- If stud bolts were removed, install them and tighten to the specified torque below.

(Torque spec): 9.8 N.m (1.0 kg-m, 7 ft-lb)

- Tighten all mounting bolts and nuts to the specified torque in two or more steps in numerical order as shown in the figure.

<=: Engine front

1st step: (Torque spec): 7.4 N.m (0.75 kg-m, 5 ft-lb)

2nd step and after: (Torque spec): 29.0 N.m (3.0 kg-m, 21 ft-lb)

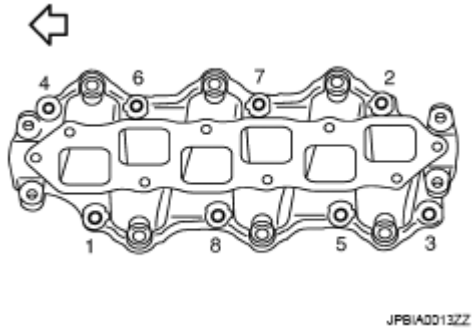


Fig. 40: Tightening Mounting Bolts And Nuts In Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

Inspection

INSPECTION AFTER REMOVAL

Surface Distortion

- Check the surface distortion of the intake manifold mating surface with a straightedge (A) and a feeler gauge (B).

Limit : Refer to , "INTAKE MANIFOLD".

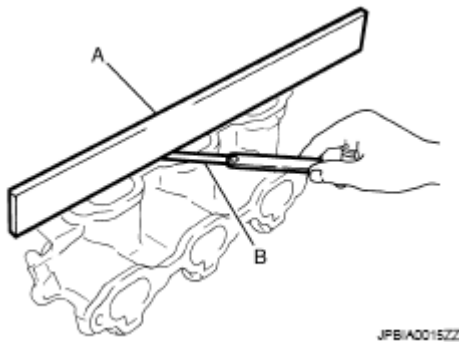



Fig. 41: Checking Surface Distortion Of Intake Manifold Mating Surface
Courtesy of NISSAN MOTOR CO., U.S.A.

- If it exceeds the limit, replace intake manifold.

EXHAUST MANIFOLD

Exploded View

Symbol	Description
	N·m (kg-m, ft-lb)
	N·m (kg-m, in-lb)
	Always replace after disassembly.

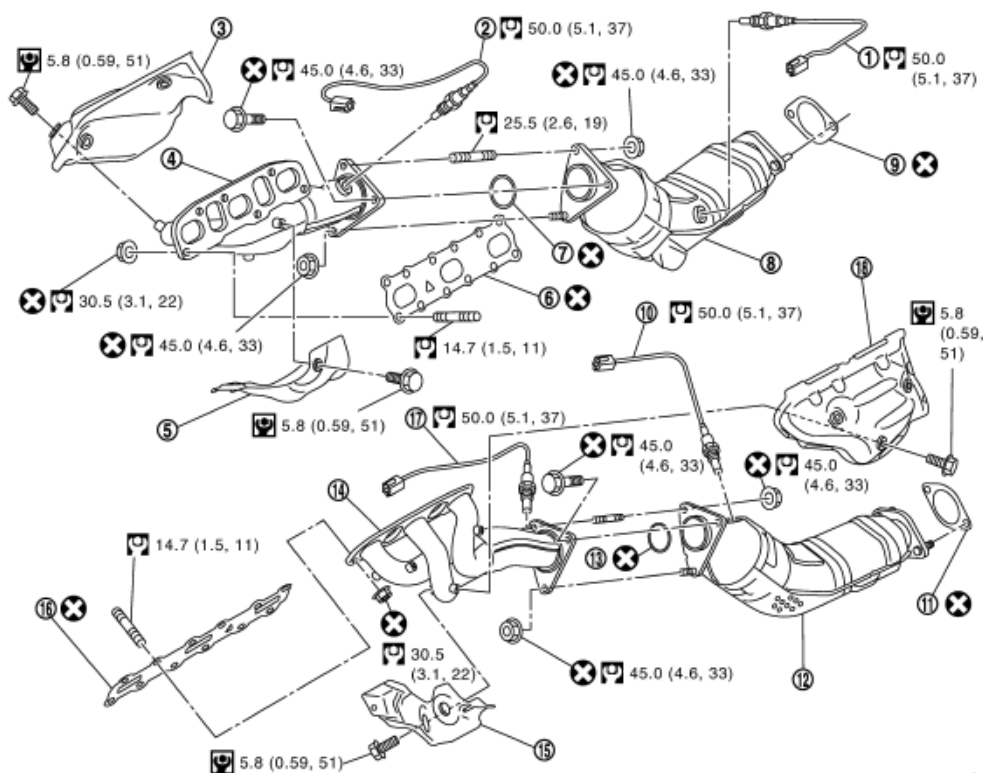

JPB1A0007GB

- | | | |
|-----------------------------------|------------------------------------|------------------------------------|
| 1. Heated oxygen sensor (bank 1) | 2. Air fuel ratio sensor (bank 1) | 3. Exhaust manifold cover (upper) |
| 4. Exhaust manifold (right bank) | 5. Exhaust manifold cover (lower) | 6. Gasket |
| 7. Ring gasket | 8. Three way catalyst (right bank) | 9. Gasket |
| 10. Heated oxygen sensor (bank 2) | 11. Gasket | 12. Three way catalyst (left bank) |
| 13. Ring gasket | 14. Exhaust manifold (left bank) | 15. Exhaust manifold cover (lower) |
| 16. Gasket | 17. Air fuel ratio sensor (bank 2) | 18. Exhaust manifold cover (upper) |

Fig. 42: Exploded View Of Exhaust Manifold With Torque Specifications

Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to "COMPONENTS" for symbol marks in the figure.

Removal and Installation

REMOVAL

WARNING: Perform the work when the exhaust and cooling system have completely

cooled down.

NOTE: When removing right bank side parts only, step 1, 4 and 7 are unnecessary.

1. Drain engine coolant. Refer to "**DRAINING**".
2. Remove engine cover with power tool. Refer to , "**EXPLODED VIEW**".
3. Remove air cleaner case and air duct (RH and LH). Refer to , "**EXPLODED VIEW**".
4. Remove water pipe and water hose. Refer to "**EXPLODED VIEW**".
5. Remove engine undercover with power tool.
6. Remove exhaust front tube and three way catalysts (right and left bank). Refer to "**EXPLODED VIEW**".
7. Disconnect steering lower joint at power steering gear assembly side, and release steering lower shaft.
8. Disconnect air fuel ratio sensor (bank 1 and bank 2) harness connectors and remove harness clip.
9. Using the heated oxygen sensor wrench [SST: KV10114400 (J38365)] (C), remove air fuel ratio sensor (bank 1 and bank 2).
 - A. Left bank
 - B. Right bank

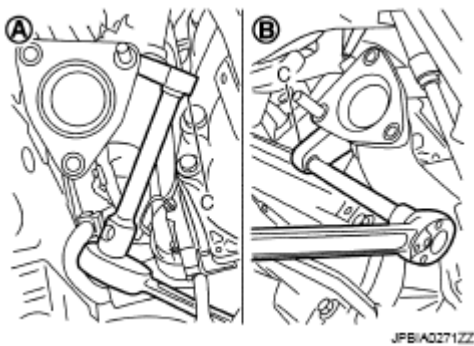


Fig. 43: View Of Air Fuel Ratio Sensor
Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION:

- Be careful not to damage air fuel ratio sensor.
- Discard any air fuel ratio sensor which has been dropped onto a hard surface such as a concrete floor. Replace with a new sensor.

10. Remove exhaust manifold cover (upper) (right and left bank).
11. Loosen mounting nuts in the reverse order as shown in the figure to remove exhaust manifold.

NOTE: Disregard the numerical order No. 7 and 8 in removal.

- A. Right bank
- B. Left bank

<=: Engine front

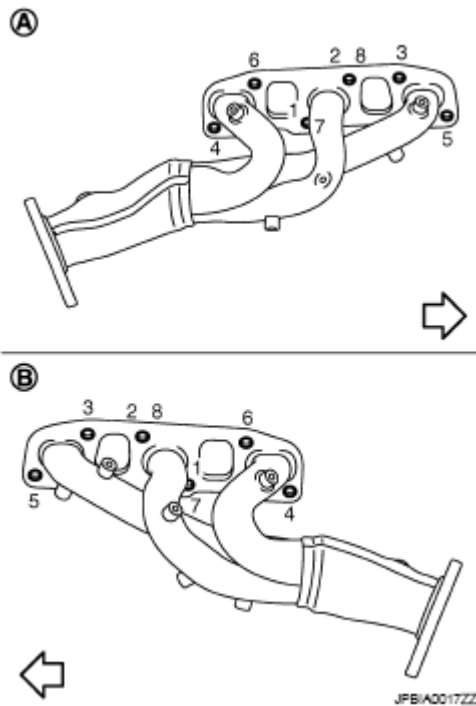


Fig. 44: Loosening Mounting Nuts In Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

12. Remove gaskets.

CAUTION: Cover engine openings to avoid entry of foreign materials.

INSTALLATION

Note the following, and install in the reverse order of removal.

EXHAUST MANIFOLD GASKET

- Install exhaust manifold gasket in direction shown in the figure. (Follow same procedure for both banks.)
 - A. Right bank
 - B. Triangle press
 - C. Left bank

<=: Engine front

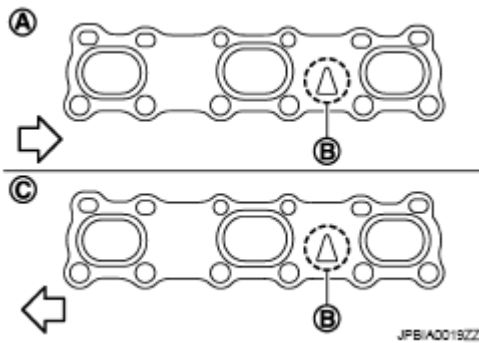


Fig. 45: Identifying Exhaust Manifold Gasket
Courtesy of NISSAN MOTOR CO., U.S.A.

EXHAUST MANIFOLD

- If stud bolts were removed, install them and tighten to the specified torque below.

Tightening torque : Refer to , "EXPLODED VIEW".

- Install exhaust manifold and tighten mounting bolts in numerical order as shown in the figure.
 - A. Right bank
 - B. Left bank

<=: Engine front

NOTE: Tighten nuts No. 1 and 2 in two steps. The numerical order No. 7 and 8 shows second step.

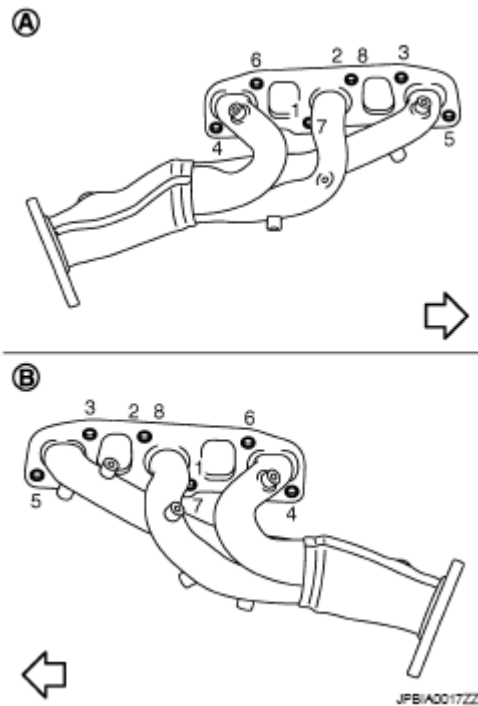


Fig. 46: Tightening Mounting Bolts In Sequence
 Courtesy of NISSAN MOTOR CO., U.S.A.

AIR FUEL RATIO SENSOR

CAUTION:

- Before installing a new air fuel ratio sensor, clean exhaust system threads using heated oxygen sensor thread cleaner tool (Commercial Service Tool: J-43897-18 or J-43897-12) and apply anti-seize lubricant.
- Do not over torque air fuel ratio sensor. Doing so may cause damage to air fuel ratio sensor, resulting in the "MIL" coming on.


Inspection

INSPECTION AFTER REMOVAL

Surface Distortion

- Check the surface distortion of the exhaust manifold mating surface with a straightedge (A) and a feeler gauge (B).

Limit : Refer to , "EXHAUST MANIFOLD".

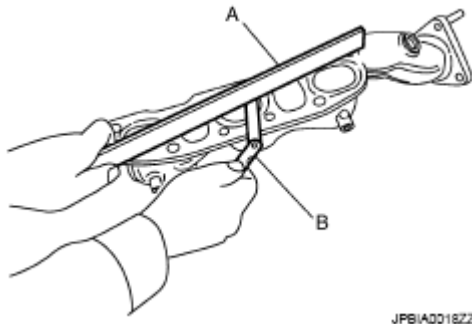

JPBIA0018ZZ

Fig. 47: Checking Surface Distortion Of Exhaust Manifold Mating Surface
Courtesy of NISSAN MOTOR CO., U.S.A.


- If it exceeds the limit, replace exhaust manifold.

FUEL INJECTOR AND FUEL TUBE

Exploded View

A. See **FUEL INJECTOR AND FUEL TUBE**.

Symbol	Description
	N·m (kg-m, ft-lb)
	N·m (kg-m, in-lb)
	Always replace after disassembly.

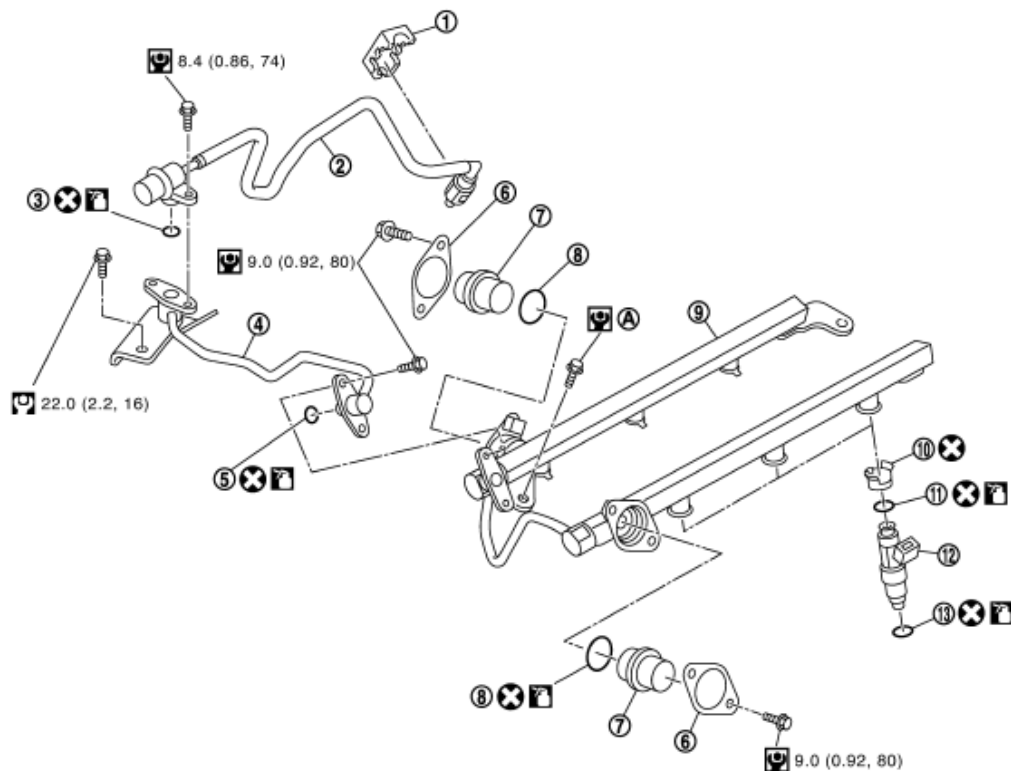

JPB/A0054GB

- | | | |
|--------------------------------|---------------------------------|--------------------|
| 1. Quick connector cap | 2. Fuel feed hose (with damper) | 3. O-ring |
| 4. Fuel sub tube | 5. O-ring | 6. Fuel damper cap |
| 7. Fuel damper | 8. O-ring | 9. Fuel tube |
| 10. Clip | 11. O-ring (black) | 12. Fuel injector |
| 13. O-ring (green) | | |
| A. See appropriate information | | |

Fig. 48: Exploded View Of Fuel Injector And Fuel Tube With Torque Specifications
 Courtesy of NISSAN MOTOR CO., U.S.A.

71 Refer to "COMPONENTS" for symbol marks in the figure.

CAUTION: Do not remove or disassemble parts unless instructed as shown in the figure.

Removal and Installation

REMOVAL

WARNING:

- Put a "CAUTION: FLAMMABLE" sign in the workshop.
- Be sure to work in a well ventilated area and furnish workshop with a CO2 fire extinguisher.
- Do not smoke while servicing fuel system. Keep open flames and sparks away from the work area.
- To avoid the danger of being scalded, do not drain engine coolant when the engine is hot.

1. Release fuel pressure. Refer to "INSPECTION".
2. Disconnect battery cable from the negative terminal. Refer to "EXPLODED VIEW".
3. Remove engine cover with power tool. Refer to , "EXPLODED VIEW".
4. Remove air cleaner case and air duct (RH and LH). Refer to , "EXPLODED VIEW".
5. Remove intake manifold collector. Refer to , "EXPLODED VIEW".
6. Remove fuel feed hose (with damper) (1) from fuel sub-tube (2) and remove harness bracket (3).

<=: Engine front

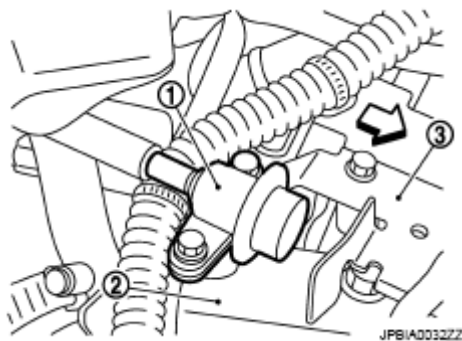


Fig. 49: Identifying Fuel Feed Hose And Fuel Sub-Tube
Courtesy of NISSAN MOTOR CO., U.S.A.

NOTE: There is no fuel return route.

- CAUTION:**
- While hoses are disconnected, plug them to prevent fuel from draining.
 - Do not separate damper and hose.

7. When separating fuel feed hose (with damper) and centralized under-floor piping connection, disconnect quick connector as follows:
 - a. Remove quick connector cap (2) from quick connector connection on right member side.
 - b. Disconnect fuel feed hose (with damper) (1) from bracket hose clamp.

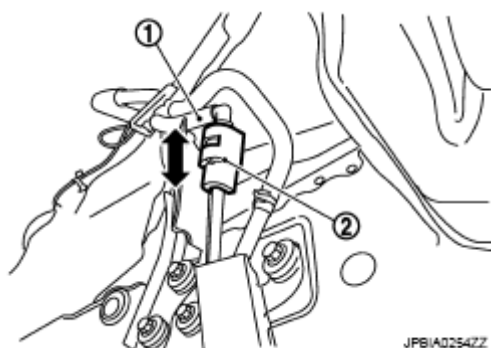


Fig. 50: Disconnecting Fuel Feed Hose
Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Disconnect quick connector from centralized under-floor piping as follows:

CAUTION: Disconnect quick connector by using quick connector release [SST: - (J-45488)], not by picking out retainer tabs.

- i. With the sleeve side of quick connector release facing quick connector, install quick connector release onto centralized under-floor piping.
- ii. Insert quick connector release (A) into quick connector (2) until sleeve (B) contacts and goes no further. Hold quick connector release on that position.

1 :Centralized under-floor piping

C :Insert and retain

D :Holding position

E :Pull quick connector

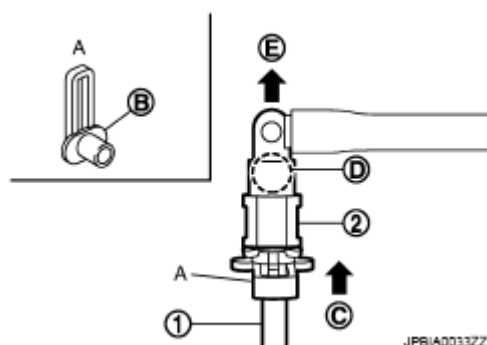


Fig. 51: Inserting Quick Connector Release Into Quick Connector
Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION: Inserting quick connector release hard will not disconnect

quick connector. Hold quick connector release where it contacts and goes no further.

iii. Draw and pull out quick connector straight from centralized under-floor piping.

CAUTION:

- Pull quick connector holding "D" position as shown in the figure.
- Do not pull with lateral force applied. O-ring inside quick connector may be damaged.
- Prepare container and cloth beforehand as fuel will leak out.
- Avoid fire and sparks.
- Keep parts away from heat source. Especially, be careful when welding is performed around them.
- Do not expose parts to battery electrolyte or other acids.
- Do not bend or twist connection between quick connector and fuel feed hose (with damper) during installation/removal.
- To keep clean the connecting portion and to avoid damage and foreign materials, cover them completely with plastic bags, etc. (A) or something similar.


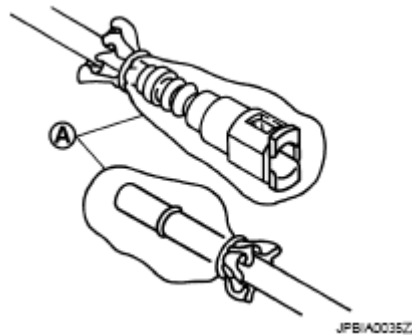


Fig. 52: Covering Connecting Portion In Plastic Bags
Courtesy of NISSAN MOTOR CO., U.S.A.

8. Remove fuel sub tube mounting bolt.
9. Disconnect harness connector from fuel injector.
10. Loosen mounting bolts in reverse order as shown in the figure, and remove fuel tube and fuel injector assembly.

<=: Engine front

CAUTION: Do not tilt it, or remaining fuel in pipes may flow out from pipes.

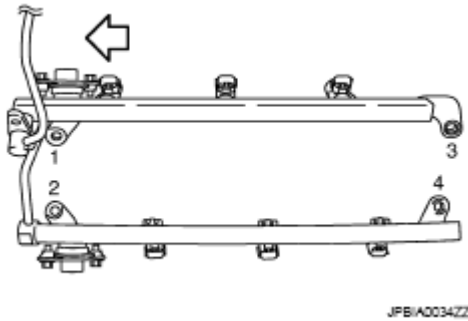


JFBI/A0034ZZ

Fig. 53: Loosening Mounting Bolts In Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

11. Remove fuel injector (2) from fuel tube (4) as follows:

3 :O-ring

- A. Installed condition
- B. Clip mounting groove

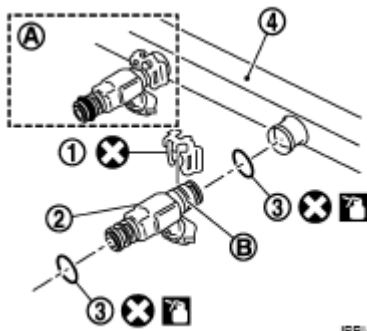

JFBI/A0035ZZ

Fig. 54: Identifying Fuel Injector And Fuel Tube
Courtesy of NISSAN MOTOR CO., U.S.A.

- a. Open and remove clip (1).
- b. Remove fuel injector from fuel tube by pulling straight.

CAUTION:

- Be careful with remaining fuel that may go out from fuel tube.
- Be careful not to damage injector nozzles during removal.
- Do not bump or drop fuel injector.
- Do not disassemble fuel injector.

12. Remove fuel sub-tube and fuel damper, if necessary.

INSTALLATION

1. Install fuel damper (4) as follows:

- a. Install new O-ring (2) to fuel tube (1) as shown. When handling new O-ring, be careful of the following caution:

CAUTION:

- Handle O-ring with bare hands. Do not wear gloves.
- Lubricate O-ring with new engine oil.
- Do not clean O-ring with solvent.
- Make sure that O-ring and its mating part are free of foreign material.
- When installing O-ring, be careful not to scratch it with tool or fingernails. Also be careful not to twist or stretch O-ring. If O-ring was stretched while it was being attached, do not insert it quickly into fuel tube.
- Insert new O-ring straight into fuel tube. Do not twist it.

- b. Install spacer (3) to fuel damper.
 - c. Insert fuel damper straight into fuel tube.

CAUTION:

- Insert straight, making sure that the axis is lined up.
- Do not pressure-fit with excessive force.

Reference value :130 N (13.3 kg, 29.2 lb)

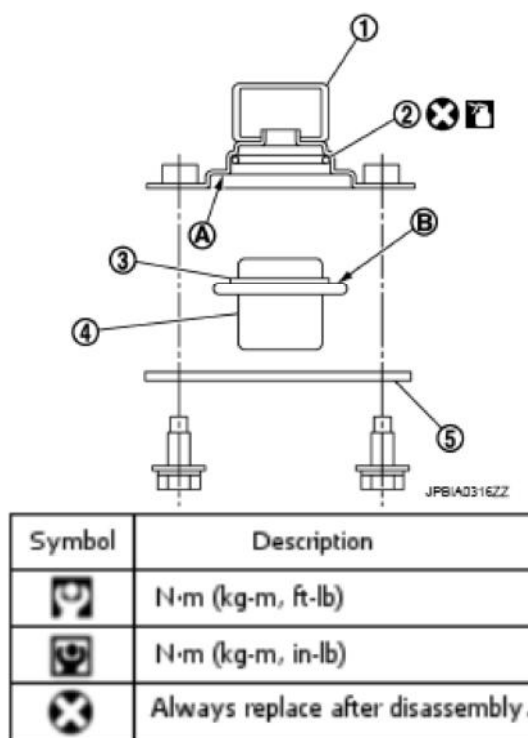


Fig. 55: Identifying O-Ring, Fuel Tube And Spacer
 Courtesy of NISSAN MOTOR CO., U.S.A.

- Insert fuel damper until (B) is touching (A) of fuel tube.

d. Tighten bolts evenly in turn.

- After tightening bolts, make sure that there is no gap between fuel damper cap (5) and fuel tube.

2. Install fuel sub-tube.

- When handling new O-rings, be careful of the following caution:

CAUTION:

- Handle O-ring with bare hands. Do not wear gloves.
- Lubricate O-ring with new engine oil.
- Do not clean O-ring with solvent.
- Make sure that O-ring and its mating part are free of foreign material.
- When installing O-ring, be careful not to scratch it with tool or fingernails. Also be careful not to twist or stretch O-ring. If O-ring was stretched while it was being attached, do not insert it quickly into fuel tube.
- Insert new O-ring straight into fuel tube. Do not decenter or twist it.

- Insert fuel sub-tube straight into fuel tube.
 - Tighten mounting bolts evenly in turn.
 - After tightening mounting bolts, make sure that there is no gap between flange and fuel tube.
3. Install new O-rings to fuel injector, paying attention to the following.

CAUTION:

- **Upper and lower O-ring are different. Be careful not to confuse them.**

Fuel tube side :Black

Nozzle side :Green

- **Handle O-ring with bare hands. Do not wear gloves.**
- **Lubricate O-ring with new engine oil.**
- **Do not clean O-ring with solvent.**
- **Make sure that O-ring and its mating part are free of foreign material.**
- **When installing O-ring, be careful not to scratch it with tool or fingernails. Also be careful not to twist or stretch O-ring. If O-ring was stretched while it was being attached, do not insert it quickly into fuel tube.**
- **Insert O-ring straight into fuel injector. Do not decenter or twist it.**

4. Install fuel injector to fuel tube as follows:

2 :O-ring (Black)


4 :O-ring (Green)

- a. Insert clip (3) into clip mounting groove (D) on fuel injector (5).

CAUTION:

- **Do not reuse clip. Replace it with a new one.**
- **Be careful to keep clip from interfering with O-ring. If interference occurs, replace O-ring.**

- b. Insert fuel injector into fuel tube (1) with clip attached.
- Insert it while matching it to the axial center.
 - Insert fuel injector so that protrusion (A) of fuel tube matches cutout (B) of clip.
 - Make sure that fuel tube flange (E) is securely fixed in flange fixing groove (C) on clip.
- c. Make sure that installation is complete by checking that fuel injector does not rotate or come off.
- Make sure that protrusions of fuel injectors are aligned with cutouts of clips after installation.

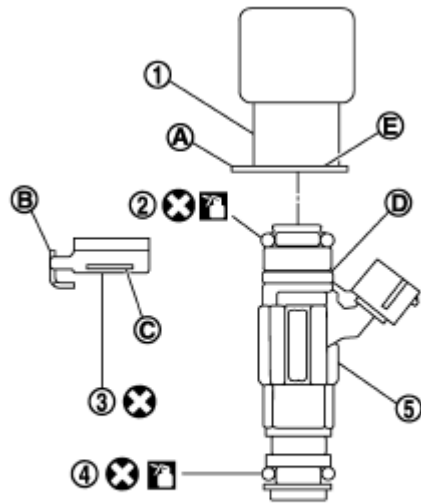

JFB/A0037ZZ

Fig. 56: Identifying Clip, Clip Mounting Groove And Fuel Tube
Courtesy of NISSAN MOTOR CO., U.S.A.

5. Install fuel tube and fuel injector assembly to intake manifold.


CAUTION: Be careful not to let tip of injector nozzle come in contact with other parts.

- Tighten mounting bolts in two steps in numerical order as shown in the figure.

<=: Engine front

(Torque Spec) 1st step :10.1 N.m (1.0 kg-m, 7 ft-lb)

(Torque Spec) 2nd step :23.6 N.m (2.4 kg-m, 17 ft-lb)

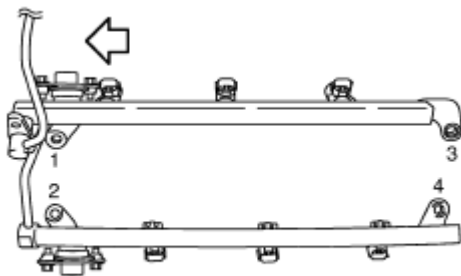

JFB/A0034ZZ

Fig. 57: Tightening Mounting Bolts In Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

6. Connect injector sub-harness.
7. Install fuel sub tube mounting bolt.
8. Connect fuel feed hose (with damper).
 - Handling procedure of O-ring is the same as that of fuel damper and fuel sub-tube.
 - Insert fuel damper straight into fuel sub-tube.
 - Tighten mounting bolts evenly in turn.
 - After tightening mounting bolts, make sure that there is no gap between flange and fuel sub-tube.
9. Connect quick connector between fuel feed hose (with damper) and centralized under-floor piping connection as follows:
 - a. Make sure no foreign substances are deposited in and around centralized under-floor piping and quick connector, and no damage on them.
 - b. Thinly apply new engine oil around centralized under-floor piping from tip end to spool end.
 - c. Align center to insert quick connector (1) straightly into centralized under-floor piping.

B :Fitted condition

<=: Upright insertion

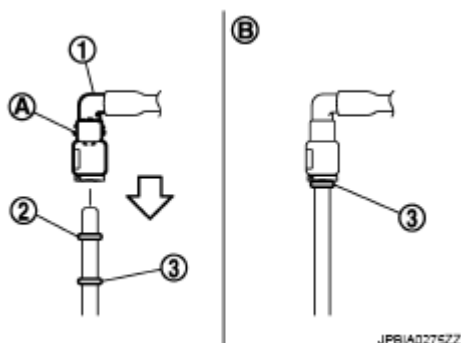


Fig. 58: Inserting Quick Connector Into Centralized Under-Floor Piping
 Courtesy of NISSAN MOTOR CO., U.S.A.

- Insert quick connector to centralized under-floor piping until top spool (2) is completely inside quick connector and 2nd level spool (3) exposes right below quick connector.

CAUTION:

- Hold (A) position as shown in the figure when inserting centralized under-floor piping into quick connector.
- Carefully align center to avoid inclined insertion to prevent damage to O-ring inside quick connector.
- Insert until you hear a "click" sound and actually feel the engagement.
- To avoid misidentification of engagement with a similar sound, be sure to perform the next step.

- d. Pull quick connector by hand holding (A) position. Make sure it is completely engaged (connected) so that it does not come out from centralized under-floor piping.
 1. Centralized under-floor piping
 2. Fuel feed hose

B :Under view

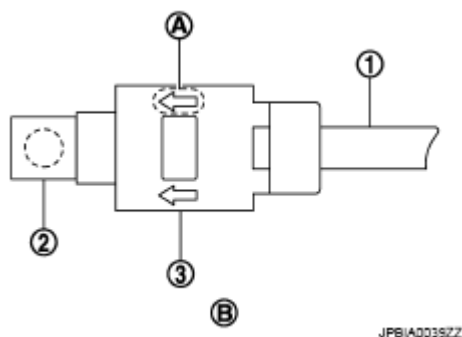


Fig. 59: Identifying Quick Connector Cap
 Courtesy of NISSAN MOTOR CO., U.S.A.

- e. Install quick connector cap (3) to quick connector connection.
 - Install quick connector cap with arrow on surface facing in direction of quick connector (fuel feed hose side).

CAUTION: If quick connector cap cannot be installed smoothly, quick connector may have not been installed correctly. Check the connection again.

10. Install in the reverse order of removal after this step.

Inspection

INSPECTION AFTER INSTALLATION

Check on Fuel Leakage

1. Turn ignition switch "ON" (with the engine stopped). With fuel pressure applied to fuel piping, make sure there are no fuel leaks at connection points.

NOTE: Use mirrors for checking at points out of clear sight.

2. Start the engine. With engine speed increased, make sure again that there are no fuel leaks at connection points.

CAUTION: Do not touch the engine immediately after stopped, as the engine



becomes extremely hot.

OIL PAN (LOWER)

Exploded View (2WD)

A. See OIL FILTER.

Symbol	Description
	N·m (kg-m, ft-lb)
	N·m (kg-m, in-lb)
	Always replace after disassembly.

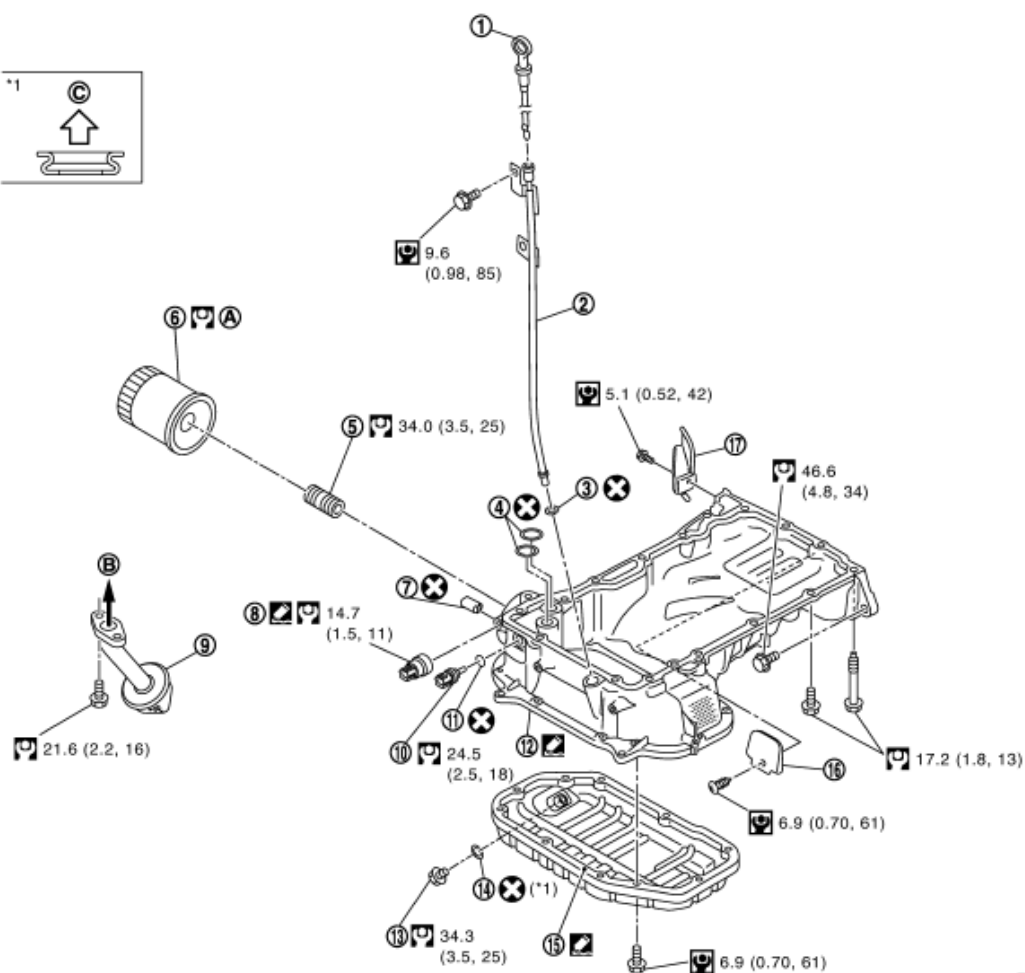

JPBIA0008ZZ

- | | | |
|--------------------------------|-----------------------------------|---------------------|
| 1. Oil level gauge | 2. Oil level gauge guide | 3. O-ring |
| 4. O-ring | 5. Connector bolt | 6. Oil filter |
| 7. Plug | 8. Oil pressure switch | 9. Oil strainer |
| 10. Oil temperature sensor | 11. Washer | 12. Oil pan (upper) |
| 13. Drain plug | 14. Drain plug washer | 15. Oil pan (lower) |
| 16. Rear plate cover | 17. Rear cover plate (M/T models) | |
| A. See appropriate information | B. To oil pump | C. Oil pan side |


Fig. 60: Exploded View Of Oil Pan (Lower) - (2WD) With Torque Specifications
Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to "**COMPONENTS**" for symbol marks in the figure.

Exploded View (AWD)

A. See **OIL FILTER** .

Symbol	Description
	N·m (kg-m, ft-lb)
	N·m (kg-m, in-lb)
	Always replace after disassembly.

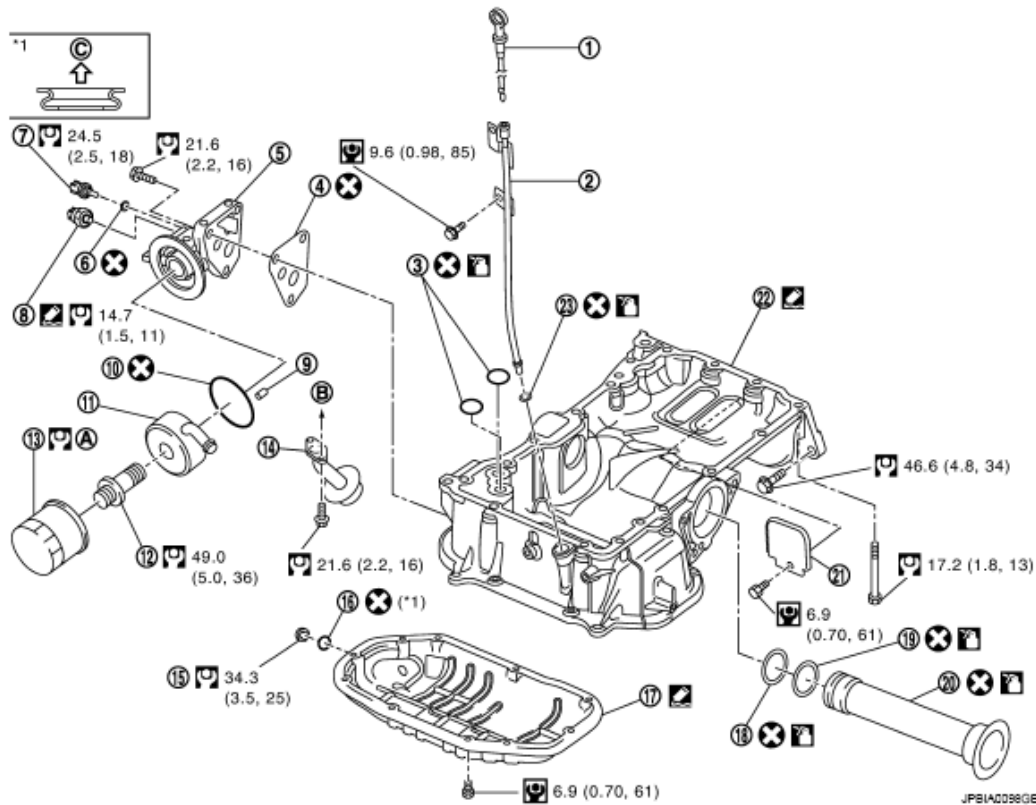

- | | | |
|---------------------------|--------------------------|----------------------|
| 1. Oil level gauge | 2. Oil level gauge guide | 3. O-ring |
| 4. Gasket | 5. Oil filter bracket | 6. Washer |
| 7. Oil temperature sensor | 8. Oil pressure switch | 9. Relief valve |
| 10. O-ring | 11. Oil cooler | 12. Connector bolt |
| 13. Oil filter | 14. Oil strainer | 15. Drain plug |
| 16. Drain plug washer | 17. Oil pan (lower) | 18. O-ring (small) |
| 19. O-ring (large) | 20. Axle pipe | 21. Rear plate cover |
| 22. Oil pan (upper) | | |
- A. See appropriate information B. To oil pump C. Oil pan side

Fig. 61: Exploded View Of Oil Pan (Lower) - (AWD) With Torque Specifications
Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to "**COMPONENTS**" for symbol marks in the figure.

Removal and Installation

REMOVAL

CAUTION: To avoid the danger of being scalded, never drain engine oil when the engine is hot.

1. Remove engine undercover with power tool.
2. Remove oil pan (lower) as follows:
 - a. Loosen mounting bolts in reverse order as shown in the figure to remove.

<=: Engine front

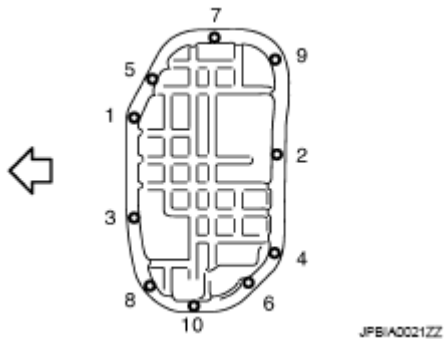


Fig. 62: Loosening Mounting Bolts In Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Insert the seal cutter [SST: KV10111100 (J37228)] (A) between oil pan (upper) and oil pan (lower).

CAUTION:

- Be careful not to damage the mating surfaces.
- Do not insert a screwdriver, this will damage the mating surfaces.

- c. Slide the seal cutter by tapping on the side of tool with a hammer. Remove oil pan (lower).

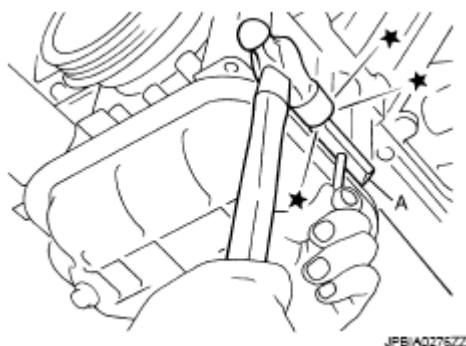


Fig. 63: Inserting Seal Cutter Between Oil Pan (Upper) And Oil Pan (Lower)
 Courtesy of NISSAN MOTOR CO., U.S.A.

INSTALLATION

1. Install oil pan (lower) as follows:
 - a. Use scraper (A) to remove old liquid gasket from mating surfaces.
 - Remove old liquid gasket from the bolt holes and thread.

CAUTION: Do not scratch or damage the mating surfaces when cleaning off old liquid gasket.

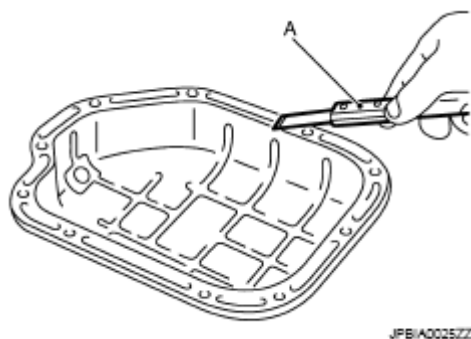


Fig. 64: Removing Old Liquid Gasket From Mating Surfaces
 Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Apply a continuous bead of liquid gasket with the tube presser [SST: WS39930000 (-)] (A) to the oil pan (lower) as shown in the figure.

Use Genuine RTV Silicone Sealant or equivalent. Refer to "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS".

CAUTION: Attaching should be done within 5 minutes after coating.

b :4.0 - 5.0 mm (0.157 - 0.197 in)

- c. Install oil pan (lower).

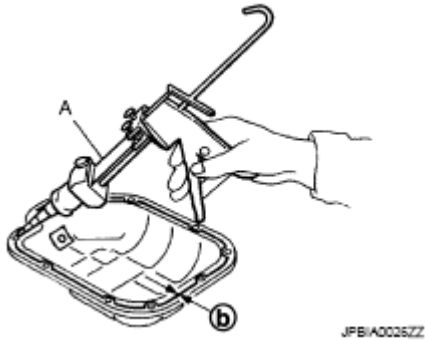


Fig. 65: Applying Continuous Bead Of Liquid Gasket With Tube Presser To Oil Pan
Courtesy of NISSAN MOTOR CO., U.S.A.

- Tighten mounting bolts in numerical order as shown in the figure.

<=: Engine front

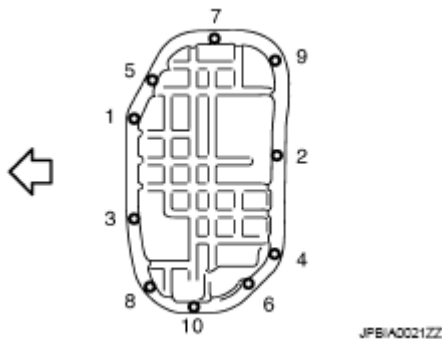


Fig. 66: Tightening Mounting Bolts In Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

2. Install oil pan drain plug.
 - Refer to the figure of components above for installation direction of drain plug washer. Refer to , "**EXPLODED VIEW (2WD)**" and , "**EXPLODED VIEW (AWD)**".
3. Install in the reverse order of removal after this step.

NOTE: At least 30 minutes after oil pan is installed, pour engine oil.

Inspection

INSPECTION AFTER REMOVAL

Clean oil strainer if any object attached.

INSPECTION AFTER INSTALLATION


1. Check the engine oil level and adjust engine oil. Refer to "**INSPECTION**".
2. Start engine, and check there is no leak of engine oil.
3. Stop engine and wait for 10 minutes.
4. Check the engine oil level again. Refer to "**INSPECTION**".

IGNITION COIL, SPARK PLUG AND ROCKER COVER

Exploded View

B. See **IGNITION COIL, SPARK PLUG AND ROCKER COVER**.

Symbol	Description
	N·m (kg-m, ft-lb)
	N·m (kg-m, in-lb)
	Always replace after disassembly.

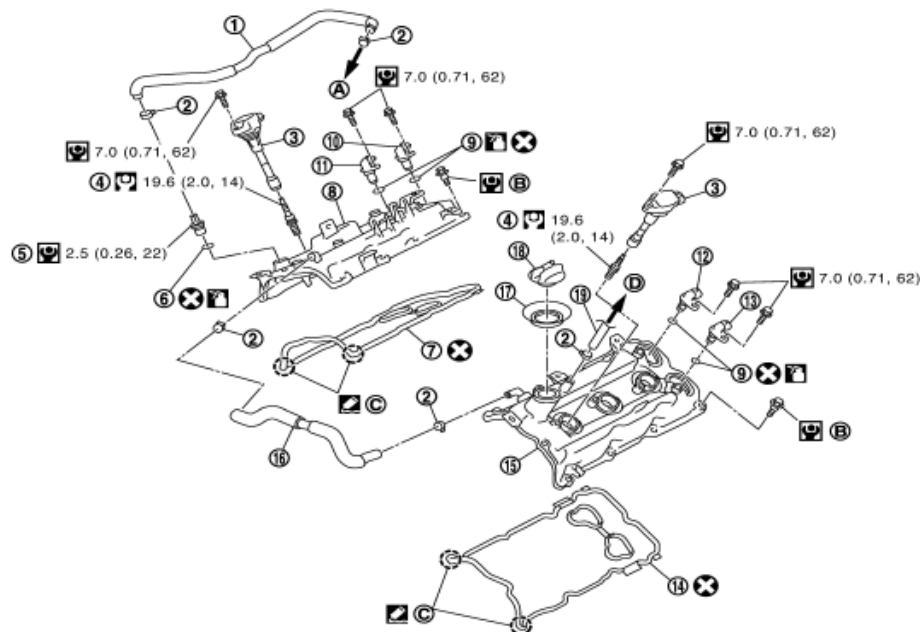

JPB/A0009ZZ

- | | | |
|---|---|---|
| 1. PCV hose | 2. Clamp | 3. Ignition coil |
| 4. Spark plug | 5. PCV valve | 6. O-ring |
| 7. Rocker cover gasket (right bank) | 8. Rocker cover (right bank) | 9. O-ring |
| 10. Camshaft position sensor (PHASE) (bank 1) | 11. Exhaust valve timing control position sensor (bank 1) | 12. Camshaft position sensor (PHASE) (bank 2) |
| 13. Exhaust valve timing control position sensor (bank 2) | 14. Rocker cover gasket (left bank) | 15. Rocker cover (left bank) |
| 16. PCV hose | 17. Oil catcher | 18. Oil filler cap |
| 19. PCV hose | | |
| A. To intake manifold collector | B. See appropriate information | C. Camshaft bracket side |
| D. To air duct | | |

Fig. 67: Exploded View Of Ignition Coil, Spark Plug And Rocker Cover With Torque Specifications
 Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to "**COMPONENTS**" for symbol marks in the figure.

Removal and Installation

REMOVAL

1. Remove the following parts:
 - Engine cover: Refer to , "**EXPLODED VIEW**".
 - Air cleaner case and air duct (RH and LH): Refer to , "**EXPLODED VIEW**".
 - Intake manifold collector: Refer to , "**EXPLODED VIEW**".
2. Disconnect PCV hose from rocker cover.
3. Remove camshaft position sensor (PHASE) and exhaust valve timing control position sensor (bank 1 and bank 2).

A :Keep off any magnetic materials

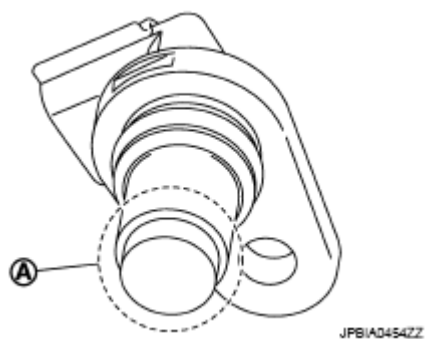


Fig. 68: Identifying Camshaft Position Sensor (PHASE)

Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION:

- Handle carefully to avoid dropping and shocks.
- Do not disassemble
- Do not allow metal powder to adhere to magnetic part at sensor tip.
- Do not place sensors in a location where they are exposed to magnetism.

4. Remove PCV valve and O-ring from rocker cover, if necessary.
5. Remove oil filler cap from rocker cover, if necessary.
6. Remove ignition coil.

CAUTION: Do not shock it.

7. Remove harness clips on the rocker cover.
8. Loosen bolts in reverse order shown in the figure.

<=: Engine front

9. Remove rocker cover gasket from rocker cover.
10. Use scraper to remove all traces of liquid gasket from cylinder head and camshaft bracket (No. 1).

CAUTION: Do not scratch or damage the mating surface when cleaning off old liquid gasket.

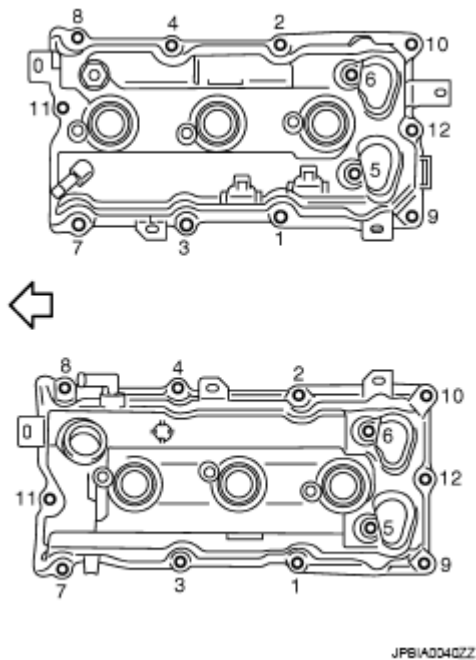


Fig. 69: Loosening Bolts In Sequence
 Courtesy of NISSAN MOTOR CO., U.S.A.

INSTALLATION

1. Apply liquid gasket to the position shown in the figure with the following procedure:

A :Liquid gasket application point

b :4 mm (0.16 in)

c :2.5 - 3.5 mm (0.098 - 0.138 in)

d :5 mm (0.20 in)

F :View C

g :10 mm (0.39 in)

I :End surface of camshaft bracket (No.1)

<=: Engine front

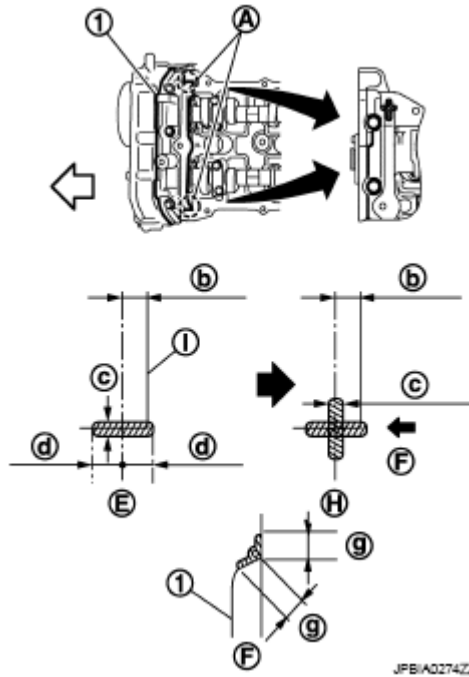


Fig. 70: Identifying Liquid Gasket Area
 Courtesy of NISSAN MOTOR CO., U.S.A.

- Refer to figure (E) to apply liquid gasket to joint part of camshaft bracket (No. 1) (1) and cylinder head.
- Refer to figure (H) to apply liquid gasket in 90 degrees to figure.

Use Genuine RTV silicone sealant or equivalent. Refer to "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS".

- Install rocker cover gasket to rocker cover.
- Install rocker cover.
 - Check if rocker cover gasket is not dropped from the installation groove of rocker cover.
- Tighten bolts in two steps separately in numerical order as shown in the figure.

<=: Engine front

(Torque Spec) 1st step : 2.0 N.m (0.2 kg-m, 18 in-lb)

(Torque Spec) 2nd step : 8.3 N.m (0.85 kg-m, 73 in-lb)

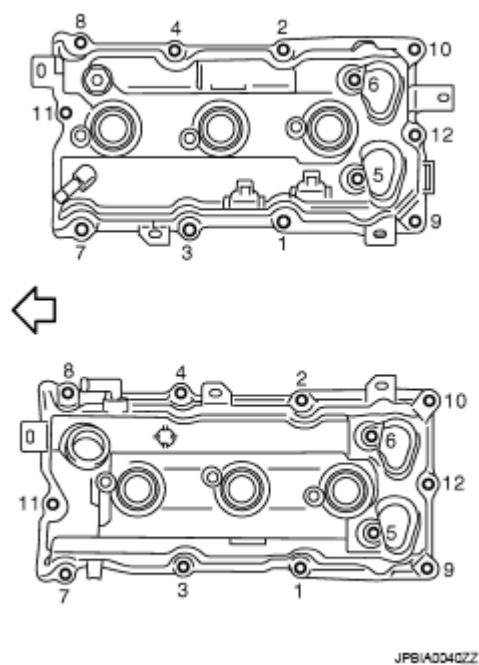


Fig. 71: View Of Tightening Bolts Sequence
 Courtesy of NISSAN MOTOR CO., U.S.A.


5. Install in the reverse order of removal after this step.

TIMING CHAIN

Exploded View

A. & B. See Removal and Installation

Symbol	Description
	N·m (kg-m, ft-lb)
	N·m (kg-m, in-lb)
	Always replace after disassembly.

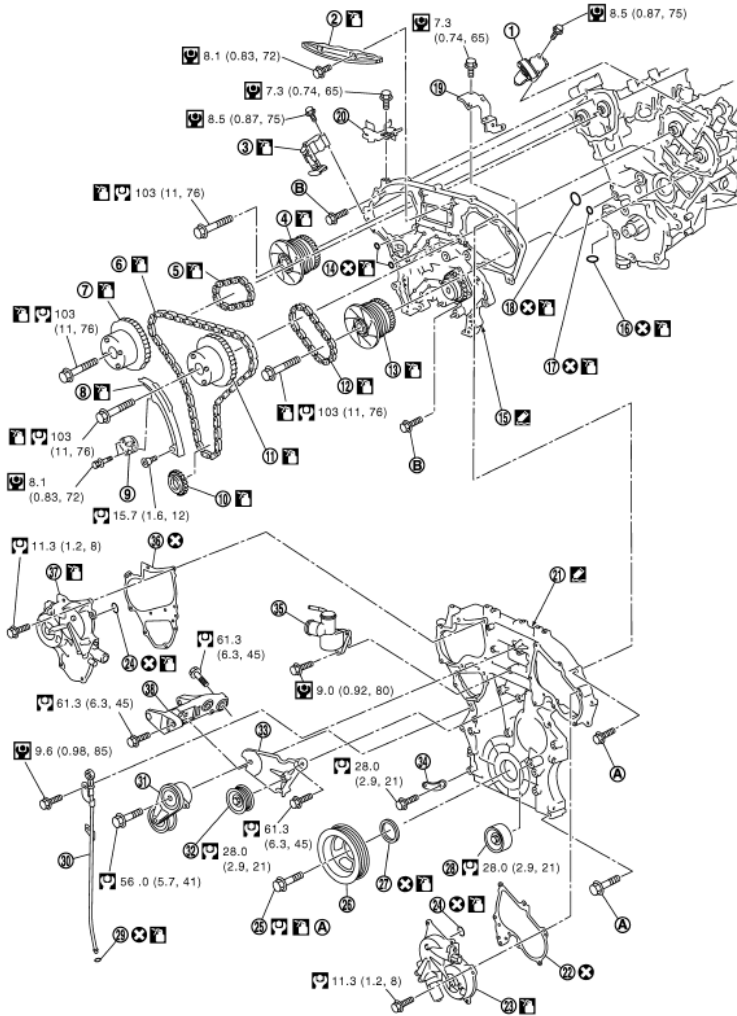

JPBAC05508

- | | | |
|---|-------------------------------------|--|
| 1. Timing chain tensioner (secondary) (left bank) | 2. Internal chain guide | 3. Timing chain tensioner (secondary) (right bank) |
| 4. Camshaft sprocket (EXH) | 5. Timing chain (secondary) | 6. Timing chain (primary) |
| 7. Camshaft sprocket (INT) | 8. Slack guide | 9. Timing chain tensioner (primary) |
| 10. Crankshaft sprocket | 11. Camshaft sprocket (INT) | 12. Timing chain (secondary) |
| 13. Camshaft sprocket (EXH) | 14. O-ring | 15. Rear timing chain case |
| 16. O-ring | 17. O-ring | 18. O-ring |
| 19. Bracket | 20. Bracket | 21. Front timing chain case |
| 22. Valve timing control cover gasket (LH) | 23. Valve timing control cover (LH) | 24. O-ring |
| 25. Crankshaft pulley bolt | 26. Crankshaft pulley | 27. Front oil seal |
| 28. Idler pulley | 29. O-ring | 30. Oil level gauge guide |
| 31. Drive belt auto-tensioner | 32. Idler pulley | 33. Idler pulley bracket |
| 34. Alternator bracket | 35. Water outlet (front) | 36. Valve timing control cover gasket (RH) |
| 37. Valve timing control cover (RH) | | |

A. & B. See appropriate information

Fig. 72: Exploded View Of Timing Chain With Torque Specifications
Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to "COMPONENTS" for symbol marks in the figure.

Removal and Installation**REMOVAL**

1. Release the fuel pressure. Refer to "**INSPECTION**".
2. Disconnect the battery cable from the negative terminal.
3. Remove engine cover with power tool. Refer to , "**EXPLODED VIEW**".
4. Remove radiator reservoir tank.
5. Remove air duct and air cleaner case assembly (RH and LH). Refer to , "**EXPLODED VIEW**".
6. Remove engine undercover with power tool.
7. Drain engine coolant from radiator. Refer to "**DRAINING**".

CAUTION:

- Perform this step when the engine is cold.
- Do not spill engine coolant on drive belts.

8. Remove radiator hose (upper and lower). Refer to "**EXPLODED VIEW**".
9. Drain engine oil. Refer to "**DRAINING**".

CAUTION:

- Perform this step when the engine is cold.
- Do not spill engine oil on drive belts.

10. Remove radiator cooling fan assembly. Refer to "**EXPLODED VIEW**".
11. Remove drive belts. Refer to , "**EXPLODED VIEW**".
12. Separate engine harnesses removing their brackets from front timing chain case.
13. Remove oil cooler tube (AWD models). Refer to "**AWD : EXPLODED VIEW**".
14. Remove intake manifold collector. Refer to , "**EXPLODED VIEW**".
15. Remove fuel sub tube mounting bolt. Refer to , "**EXPLODED VIEW**".
16. Remove oil level gauge and guide.
17. Remove A/C compressor from bracket with piping connected, and temporarily secure it aside. Refer to "**EXPLODED VIEW**".
18. Remove power steering oil pump from bracket with piping connected, and temporarily secure it aside. Refer to "**WITHOUT 4WAS : EXPLODED VIEW**" (without 4WAS models) or "**WITH 4WAS : EXPLODED VIEW**" (with 4WAS models).
19. Remove power steering oil pump bracket. Refer to "**WITHOUT 4WAS : EXPLODED VIEW**" (without 4WAS models) or "**WITH 4WAS : EXPLODED VIEW**" (with 4WAS models).
20. Remove idler pulley, auto tensioner and bracket.
21. Remove alternator and alternator bracket. Refer to "**2WD : EXPLODED VIEW**" (2WD models) or "**AWD : EXPLODED VIEW**" (AWD models).
22. Remove water outlet and water piping. Refer to "**EXPLODED VIEW**".
23. Remove valve timing control covers (RH and LH) and gasket as follows:
 - a. Disconnect valve timing control harness connector.

- b. Loosen mounting bolts in reverse order as shown in the figure.
- Right bank
 - Left bank
 - Dowel pin hole

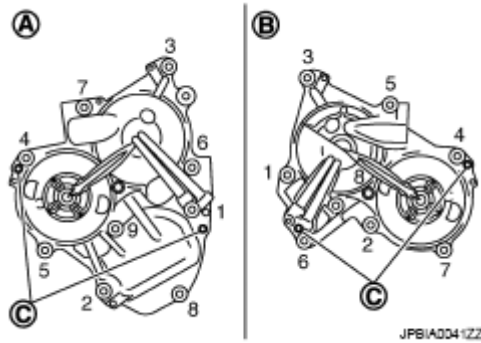


Fig. 73: Loosening Mounting Bolts In Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION: Shaft is internally jointed with camshaft sprocket (INT) center hole. When removing, keep it horizontal until it is completely disconnected.

- c. Shaft is engaged with intake side camshaft sprocket center hole on inside. pull straight out so as not to tilt until the joint is disengaged.
- The mating surface of magnet retarder (2) may be fitted with the exhaust side camshaft sprocket via the engine oil. Open valve timing control cover (1) carefully
 - If the mating surface of magnet retarder is fitted with the camshaft sprocket, open the cover within the range that the load is not applied to the harness. And then, remove it so as to prevent magnet retarder from dropping.

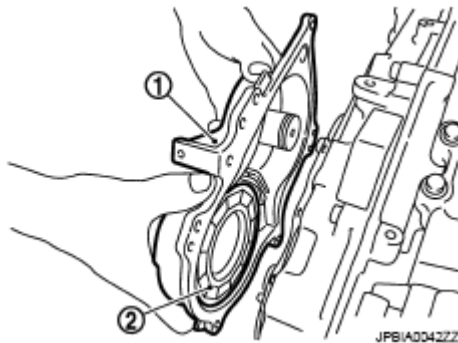


Fig. 74: View Of Valve Timing Control Cover
Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION: • Be careful not to damage magnet retarder.

- When carrying valve timing control cover, face the magnet retarder side up to prevent the cover from falling from magnet retarder.
- Do not remove magnet retarder from valve timing control cover. (Disassembly prohibited parts)

24. Remove rocker covers (right and left bank). Refer to , "EXPLODED VIEW".

25. Obtain No.1 cylinder at TDC of its compression stroke as follows:

- a. Rotate crankshaft pulley clockwise to align timing mark (grooved line without color) with timing indicator.

<--: Timing mark (grooved line without color)

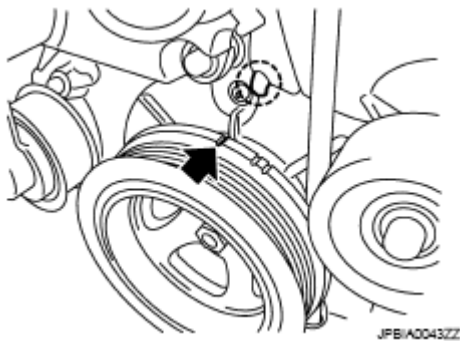


Fig. 75: Locating Timing Mark

Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Make sure that intake and exhaust cam noses on No.1 cylinder (engine front side of right bank) are located as shown in the figure.

<=: Engine front

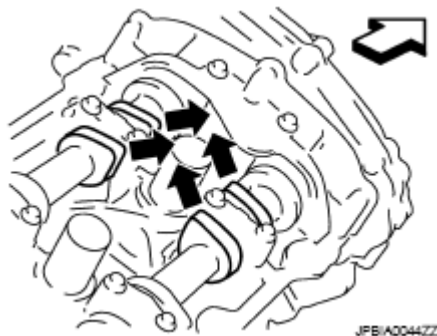


Fig. 76: Locating Intake And Exhaust Cam Nose

Courtesy of NISSAN MOTOR CO., U.S.A.

- If not, turn crankshaft one revolution (360 degrees) and align as shown in the figure.

26. Remove crankshaft pulley as follows:

- a. Remove rear cover plate and set the ring gear stopper [SST: KV10118600 (J-48641)] (A) as shown in the figure.
 1. Oil pan (upper)
 2. Flywheel (M/T models) or driveplate (A/T models)

<=: Vehicle front

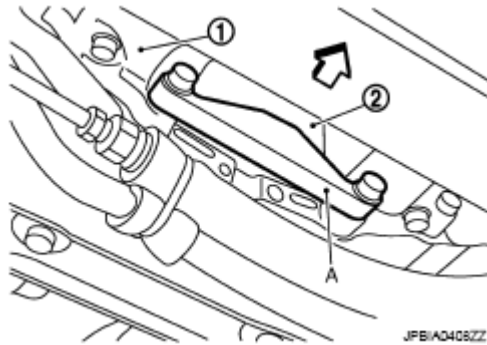


Fig. 77: Identifying Ring Gear Stopper
Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Loosen crankshaft pulley bolt and rotate bolt seating surface at 10 mm (0.39 in) from its original position.

1 : Crankshaft pulley

CAUTION: Do not remove crankshaft pulley bolt as it will be used as a supporting point for suitable puller.

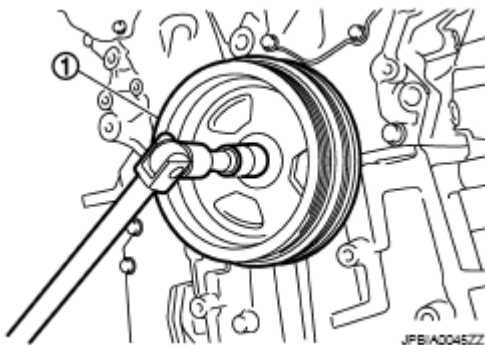


Fig. 78: View Of Crankshaft Pulley Bolt
Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Place suitable puller tab on holes of crankshaft pulley, and pull crankshaft pulley through.

CAUTION: Do not put suitable puller tab on crankshaft pulley periphery, as this will damage internal damper.

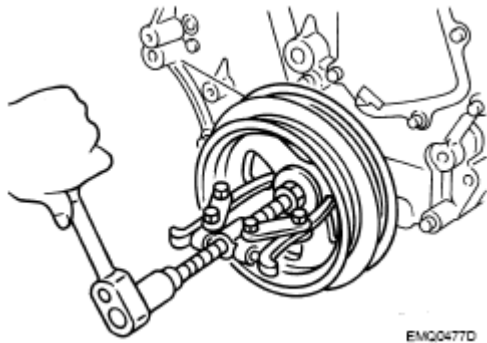


Fig. 79: Pulling Crankshaft Pulley Through
Courtesy of NISSAN MOTOR CO., U.S.A.

27. Remove oil pan (lower). Refer to , "**EXPLODED VIEW (2WD)**" or , "**EXPLODED VIEW (AWD)**".
28. Loosen two mounting bolts in front of oil pan (upper) with power tool in reverse order as shown in the figure.

<=: Engine front

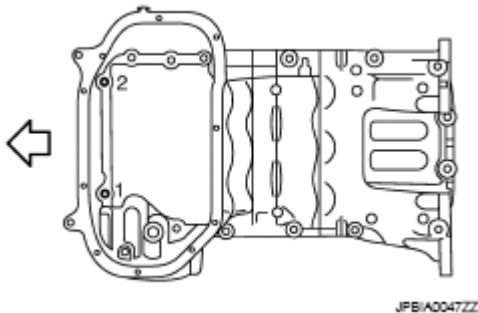


Fig. 80: Identifying Oil Pan Mounting Bolts
Courtesy of NISSAN MOTOR CO., U.S.A.

29. Remove front timing chain case as follows:
 - a. Loosen mounting bolts in reverse order as shown in the figure.

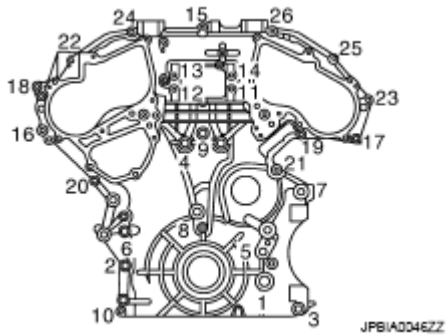


Fig. 81: Loosening Mounting Bolts In Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Insert a suitable tool (A) into the notch at the top of front timing chain case as shown.
- c. Pry off case by moving the suitable tool as shown.
 - Use the seal cutter [SST: KV10111100 (J37228)] to cut liquid gasket for removal.

CAUTION:

- Do not use a screwdriver or something similar.
- After removal, handle front timing chain case carefully so it does not tilt, cant, or warp under a load.

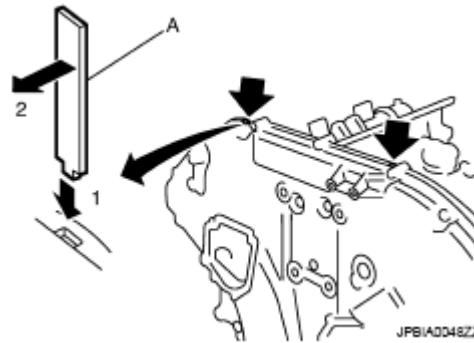


Fig. 82: Inserting Suitable Tool Into Notch At Top Of Front Timing Chain Case
Courtesy of NISSAN MOTOR CO., U.S.A.

30. Remove front oil seal from front timing chain case using a suitable tool.
 - Use a screwdriver for removal.

CAUTION: Be careful not to damage front timing chain case.

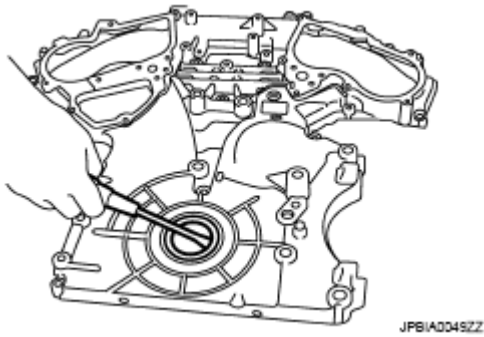


Fig. 83: View Of Front Oil Seal And Front Timing Chain Case
 Courtesy of NISSAN MOTOR CO., U.S.A.

31. Remove timing chain tensioner (primary) as follows:
 - a. Remove lower mounting bolt (1).
 - b. Loosen upper mounting bolt (2) slowly, and then turn timing chain tensioner (primary) (3) on the upper mounting bolt so that plunger (4) is fully expanded.

NOTE: Even if plunger is fully expanded, it is not dropped from the body of timing chain tensioner (primary).

- c. Remove upper mounting bolt, and then remove timing chain tensioner (primary).


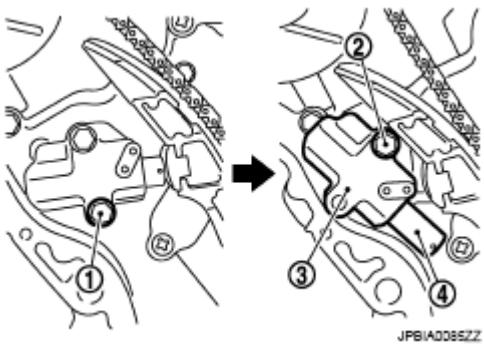


Fig. 84: Identifying Upper Mounting Bolt
 Courtesy of NISSAN MOTOR CO., U.S.A.

32. Remove internal chain guide (1), and slack guide (2).

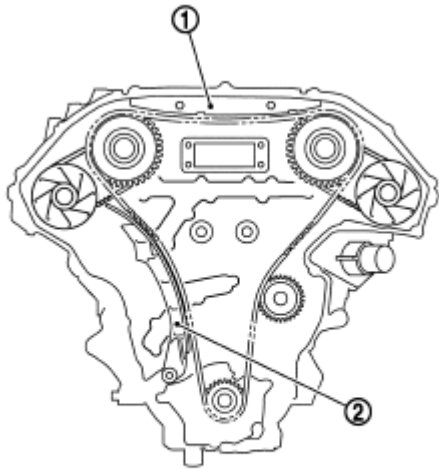


JFBIAD085ZZ

Fig. 85: Identifying Internal Chain Guide And Slack Guide
Courtesy of NISSAN MOTOR CO., U.S.A.

33. Remove timing chain (primary) and crankshaft sprocket.

CAUTION: After removing timing chain tensioner (primary), do not turn crankshaft and camshaft separately, or valves will strike the piston heads.

34. Remove timing chain (secondary) and camshaft sprockets as follows:
- Attach suitable stopper pin (2) to the right and left timing chain tensioners (secondary) (1).
- Right bank
 - Left bank

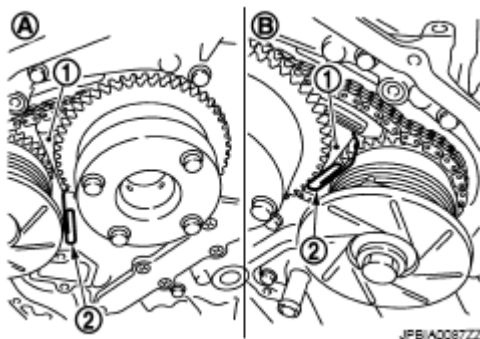

JFBIAD087ZZ

Fig. 86: Identifying Suitable Stopper Pin And Left Timing Chain Tensioners
Courtesy of NISSAN MOTOR CO., U.S.A.

NOTE:

- Use approximately 0.5 mm (0.02 in) dia. hard metal pin as a

stopper pin.

- For removal of timing chain tensioners (secondary), refer to , **"EXPLODED VIEW"**. [Removing camshaft bracket (No.1) is required.]
- b. Remove camshaft sprocket mounting bolts (INT and EXH).
- Secure the hexagonal portion of camshaft using a wrench to loosen mounting bolts.
- c. Remove timing chain (secondary) together with camshaft sprockets.

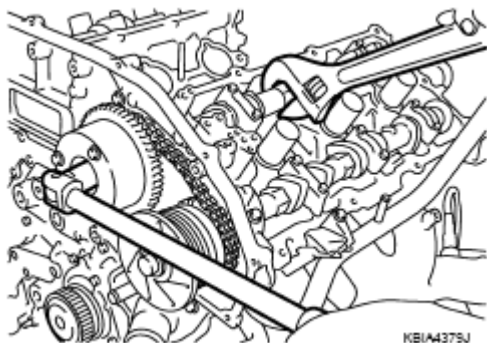


Fig. 87: View Of Camshaft Sprocket Mounting Bolts
Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION:

- Do not loosen the mounting bolts with securing anything other than the camshaft hexagonal portion or with tensioning the timing chain.
- Do not disassemble. [Do not loosen bolts (A) and (B) as shown in the figure.]

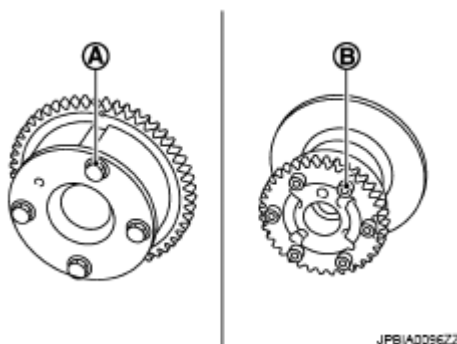


Fig. 88: Identifying Mounting Bolt
Courtesy of NISSAN MOTOR CO., U.S.A.

35. Remove timing chain tensioners (secondary) from cylinder head as follows, if necessary.
- a. Remove camshaft brackets (No. 1). Refer to , **"EXPLODED VIEW"**.
 - b. Remove timing chain tensioners (secondary) with a stopper pin attached.

36. Use a scraper to remove all traces of old liquid gasket from front and rear timing chain cases and oil pan (upper), and liquid gasket mating surfaces.

CAUTION: Be careful not to allow gasket fragments to enter oil pan.

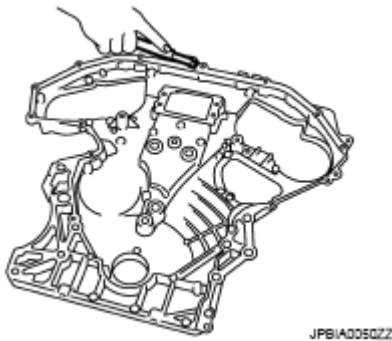


Fig. 89: Identifying Old Liquid Gasket From Front And Rear Timing Chain Cases
Courtesy of NISSAN MOTOR CO., U.S.A.

37. Remove old liquid gasket from bolt hole and thread.
 - A. Remove sticking old liquid gasket
 - B. Bolt hole


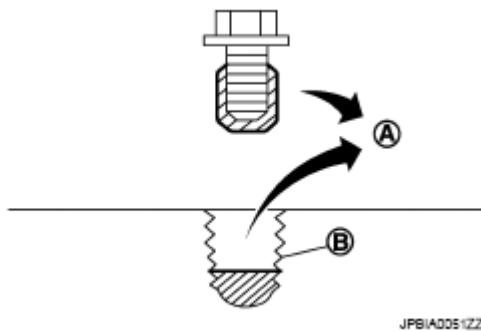


Fig. 90: Identifying Liquid Gasket Area
Courtesy of NISSAN MOTOR CO., U.S.A.

INSTALLATION

NOTE: The below figure shows the relationship between the mating mark on each timing chain and that on the corresponding sprocket, with the components installed.

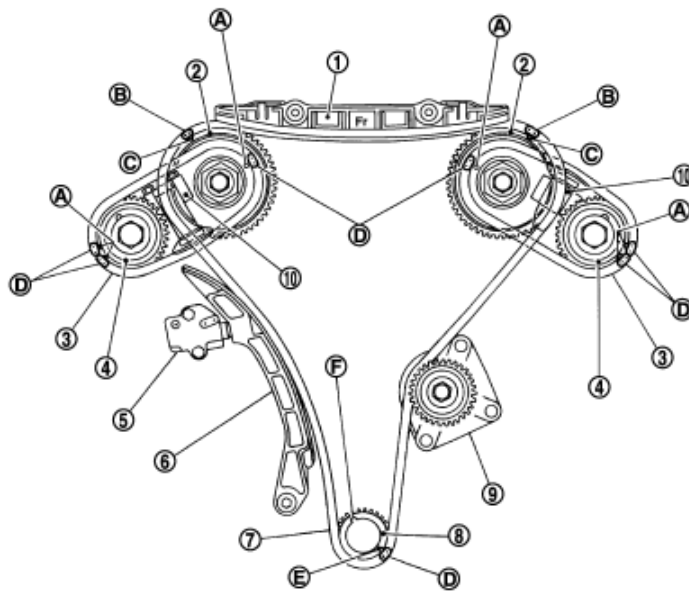

JPB/A0066ZZ

- | | | |
|--|-------------------------------------|-----------------------------|
| 1. Internal chain guide | 2. Camshaft sprocket (INT) | 3. Timing chain (secondary) |
| 4. Camshaft sprocket (EXH) | 5. Timing chain tensioner (primary) | 6. Slack guide |
| 7. Timing chain (primary) | 8. Crankshaft sprocket | 9. Water pump |
| 10. Timing chain tensioner (secondary) | | |
| A. Mating mark [punched (back side)] | B. Mating mark (yellow link) | C. Mating mark (punched) |
| D. Mating mark (orange link) | E. Mating mark (notched) | F. Crankshaft key |

Fig. 91: Identifying Mating Marks

Courtesy of NISSAN MOTOR CO., U.S.A.

1. Install timing chain tensioners (secondary) to cylinder head as follows if removed. Refer to , **"EXPLODED VIEW"**.
2. Make sure that dowel pin (A) and crankshaft key (1) are located as shown in the figure. (No. 1 cylinder at compression TDC)

NOTE: Though camshaft does not stop at the position as shown in the figure, for the placement of cam noses, it is generally accepted camshaft is placed for the same direction of the figure.

Camshaft dowel pin : At cylinder head upper face side in each bank.

Crankshaft key : At cylinder head side of right bank.

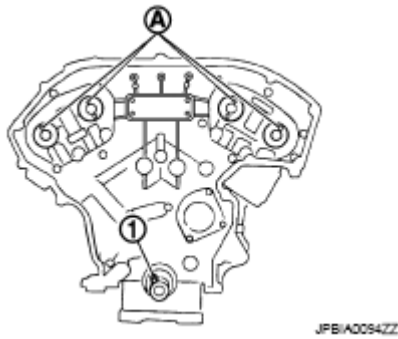


Fig. 92: Identifying Dowel Pin And Crankshaft Key
Courtesy of NISSAN MOTOR CO., U.S.A.

3. Install timing chains (secondary) and camshaft sprockets as follows:

CAUTION: Mating marks between timing chain and sprockets slip easily. Confirm all mating mark positions repeatedly during the installation process.

- a. Push plunger of timing chain tensioner (secondary) and keep it pressed in with a stopper pin (A).


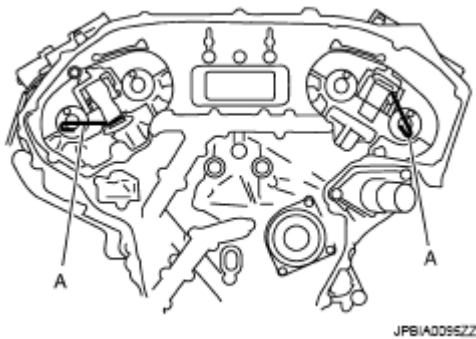


Fig. 93: Identifying Stopper Pin
Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Install timing chains (secondary) and camshaft sprockets.
 - A. Camshaft sprocket (INT) back face
 - B. Orange link
 - C. Dowel groove or hole
 - D. Mating mark (Oval)
 - E. Mating mark (2 oval)
 - F. Mating mark (Circle)
 - G. Camshaft sprocket (EXH) back face
 - H. Mating mark (2 circle)
 - I. Timing chain (secondary)

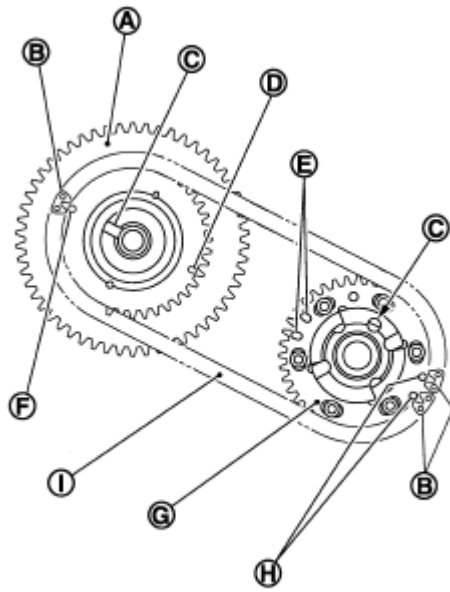

JPSIA0113ZZ

Fig. 94: Identifying Timing Chain And Camshaft Sprockets Marks
 Courtesy of NISSAN MOTOR CO., U.S.A.

- Align the mating marks on timing chain (secondary) (orange link) with the ones on intake and exhaust camshaft sprockets (punched), and install them.

NOTE:

- **Mating marks for camshaft sprockets are on the back side of camshaft sprockets (secondary).**
- **There are two types of mating marks, circle and oval types. They should be used for the right and left banks, respectively.**

Right bank : Use circle type.

Left bank : Use oval type.

- Align dowel pin camshafts with the groove or dowel hole on sprockets, and install them.
- On the intake side, align dowel pin on camshaft front end with pin groove on the back side of camshaft sprocket, and install them.
- On the exhaust side, align dowel pin on camshaft front end with pin hole on camshaft sprocket, and install them.
- In case that positions of each mating mark and each dowel pin are not fit on mating parts, make fine adjustment to the position holding the hexagonal portion on camshaft with wrench or equivalent.
- Mounting bolts for camshaft sprockets must be tightened in the next step. Tightening them by hand is enough to prevent the dislocation of dowel pins.
- Make sure the mating marks (punched) (D) on each camshaft sprocket are positioned on the

mating marks (orange link) (C) on timing chain (secondary).

- A. Intake side
- B. Exhaust side

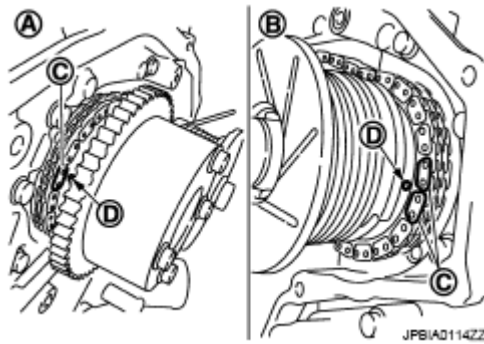


Fig. 95: Identifying Mating Marks
Courtesy of NISSAN MOTOR CO., U.S.A.

NOTE: Mating mark (punched) in the figure is for checking loose at this step.

- c. After confirming the mating marks are aligned, tighten camshaft sprocket mounting bolts.
 - Secure camshaft using a wrench at the hexagonal portion to tighten mounting bolts.

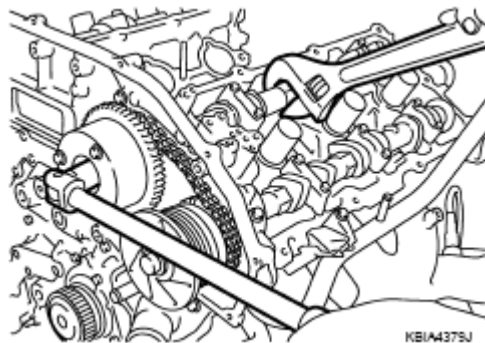


Fig. 96: Tightening Camshaft Sprocket Mounting Bolts
Courtesy of NISSAN MOTOR CO., U.S.A.

- d. Pull stopper pins (2) out from timing chain tensioners (secondary) (1).
 - A. Right bank
 - B. Left bank

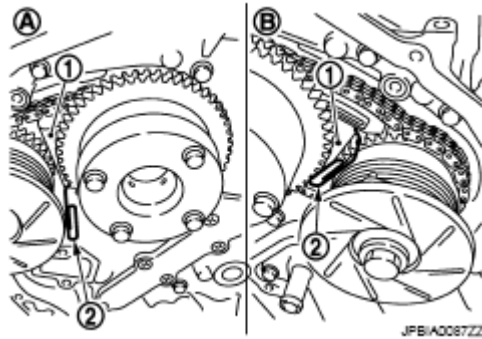


Fig. 97: Identifying Suitable Stopper Pin And Left Timing Chain Tensioners
Courtesy of NISSAN MOTOR CO., U.S.A.

4. Install timing chain (primary) as follows:

- a. Install crankshaft sprocket (1).
 - A. Crankshaft side
 - B. Engine front
 - C. Mating mark (Front side)

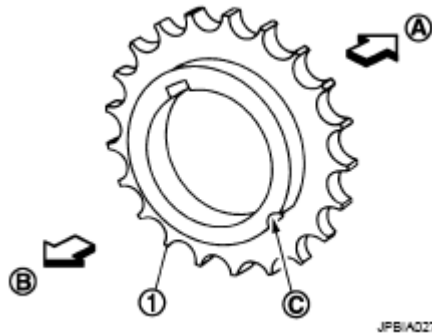



Fig. 98: Identifying Crankshaft Sprocket
Courtesy of NISSAN MOTOR CO., U.S.A.

- Make sure the mating marks on crankshaft sprocket face the front of the engine.
- b. Install timing chain (primary).
 - Install timing chain (primary) so the mating mark (punched) (B) on camshaft sprocket (INT) (1) is aligned with the yellow link (A) on timing chain, while the mating mark (notched) (C) on crankshaft sprocket (2) is aligned with the orange link (D) one on timing chain, as shown in the figure.

3 : Water pump

- When it is difficult to align mating marks of timing chain (primary) with each sprocket, gradually turn camshaft using wrench on the hexagonal portion to align it with the mating marks.
- During alignment, be careful to prevent dislocation of mating mark alignments of timing


chains (secondary).

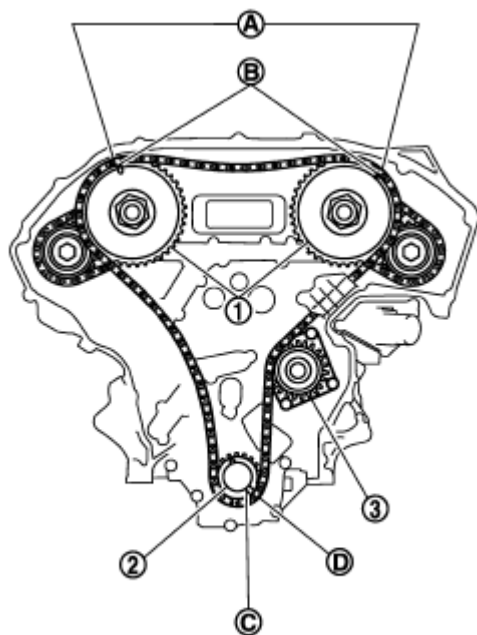

JPBIAQ116ZZ

Fig. 99: Identifying Timing Chain And Mating Mark
Courtesy of NISSAN MOTOR CO., U.S.A.

5. Install internal chain guide (1), slack guide (2) and timing chain tensioner (primary).

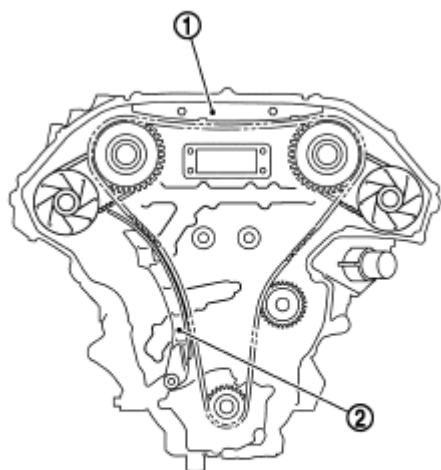

JPBIAQ085ZZ

Fig. 100: Identifying Internal Chain Guide And Slack Guide
Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION: Do not overtighten slack guide mounting bolts (2). It is normal for a gap (A) to exist under the bolt seats when mounting bolts are tightened to the specification.

1 : Slack guide

3 : Cylinder block

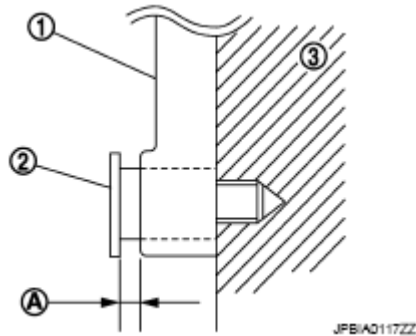


Fig. 101: Identifying Slack Guide Mounting Bolts
Courtesy of NISSAN MOTOR CO., U.S.A.

6. Install the timing chain tensioner (primary) with the following procedure:
 - a. Pull plunger stopper tab (A) up (or turn lever downward) so as to remove plunger stopper tab from the ratchet of plunger (D).

NOTE: Plunger stopper tab and lever (C) are synchronized.

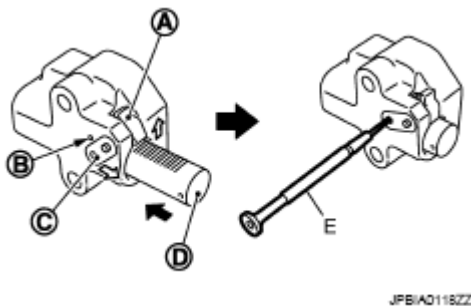


Fig. 102: Identifying Plunger Stopper Tab And Lever
Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Push plunger into the inside of tensioner body.
- c. Hold plunger in the fully compressed position by engaging plunger stopper tab with the tip of ratchet.
- d. To secure lever, insert stopper pin (E) through hole of lever into tensioner body hole (B).
 - The lever parts and the plunger stopper tab are synchronized. Therefore, the plunger will be secured under this condition.

NOTE: Figure shows the example of 1.2 mm (0.047 in) diameter thin screwdriver being used as the stopper pin.

- e. Install timing chain tensioner (primary) (1).
 - Remove any dirt and foreign materials completely from the back and the mounting surfaces of timing chain tensioner (primary).
- f. Pull out stopper pin (A) after installing, and then release plunger.

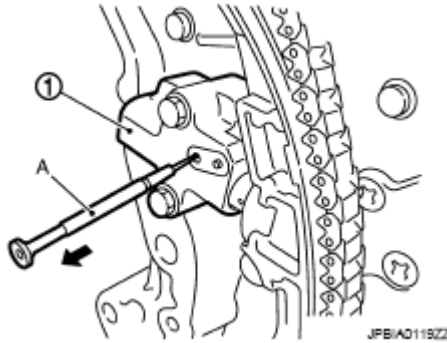


Fig. 103: Pulling Out Stopper Pin
Courtesy of NISSAN MOTOR CO., U.S.A.

7. Make sure again that the mating marks on sprockets and timing chain have not slipped out of alignment.
8. Install new o-rings (1) on rear timing chain case.
 - A. Right bank
 - B. Left bank

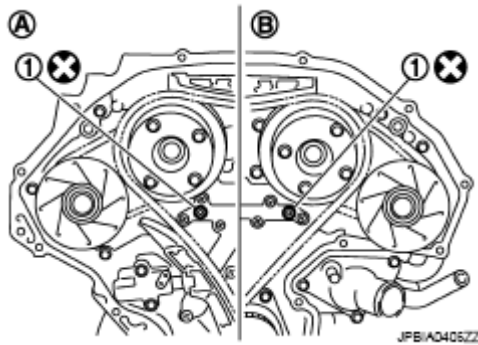


Fig. 104: Identifying O-Rings
Courtesy of NISSAN MOTOR CO., U.S.A.

9. Install new front oil seal on front timing chain case.

<=: Engine inside

<--: Engine outside

- Apply new engine oil to both oil seal lip (A) and dust seal lip (B).
- Install it so that each seal lip is oriented as shown in the figure.

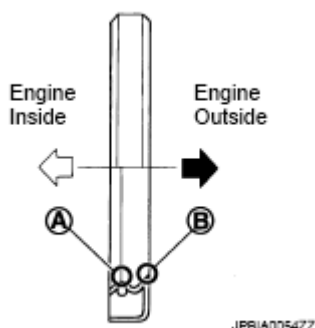


Fig. 105: Identifying Oil Seal Lip And Dust Seal Lip
Courtesy of NISSAN MOTOR CO., U.S.A.

- Using a suitable drift [outer diameter: 60 mm (2.36 in)] (A), press-fit oil seal until it becomes flush with front timing chain case end face.
- Make sure the garter spring is in position and seal lip is not inverted.

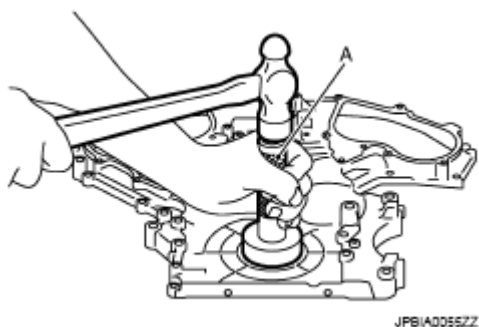


Fig. 106: Pressing-Fit Oil Seal
Courtesy of NISSAN MOTOR CO., U.S.A.

10. Install front timing chain case as follows:

- Make sure O-rings stay in place during installation to rear timing chain case.
- a. Apply a continuous bead of liquid gasket with the tube presser [SST: WS39930000 (-)] to front timing chain case back side as shown in the figure.

Use Genuine RTV Silicone Sealant or equivalent. Refer to "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS".

C : Bolt hole

D : Protrusion

e : 2.6 - 3.6 mm (0.102 - 0.142 in) dia.

f : 3.4 - 4.4 mm (0.134 - 0.173 in) dia.

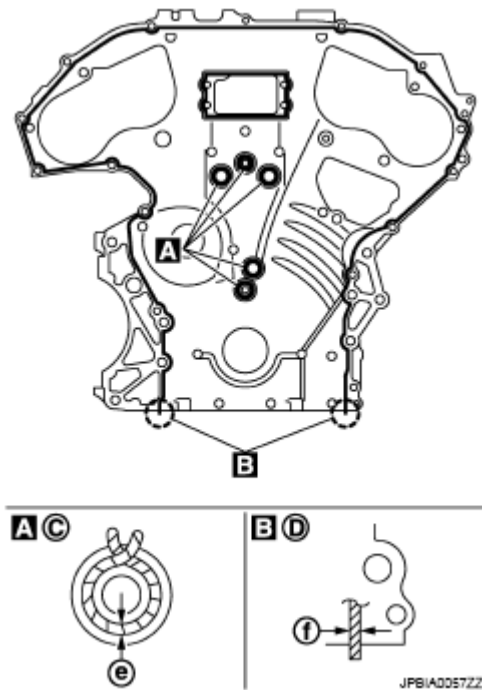


Fig. 107: Applying Continuous Bead Of Liquid Gasket To Front Timing Chain Case Back Side

Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Apply liquid gasket to top surface of oil pan (upper) as shown in the figure.

A : 4.0 - 5.0 mm (0.157 - 0.197 in) dia.

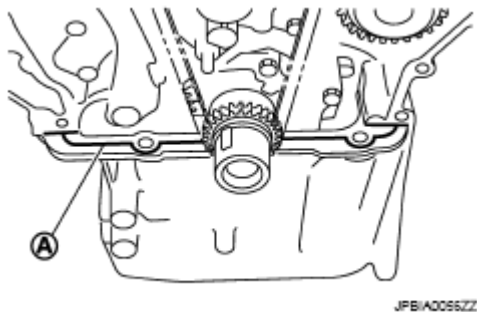


Fig. 108: Applying Liquid Gasket To Top Surface Of Oil Pan (Upper)

Courtesy of NISSAN MOTOR CO., U.S.A.

Use Genuine RTV silicone Sealant or equivalent. Refer to "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS".

- c. Assemble front timing chain case.

1. Front timing chain case
2. Oil pan (upper)
3. Cylinder block

<=: Engine front

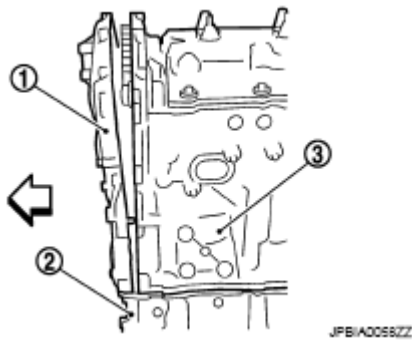


Fig. 109: Identifying Front Timing Chain Case And Oil Pan
Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION:

- Be careful not to damage front oil seal by interference with front end of crankshaft.
- Attaching should be done within 5 minutes after liquid gasket application.

- d. Install front timing chain case as to fit its dowel pin hole together dowel pin on rear timing chain case.
- e. Tighten mounting bolts to the specified torque in numerical order as shown in the figure.
 - There are two types of mounting bolts. Refer to the following for locating bolts.

M10 bolts : 1, 2, 3, 4, 5, 6, 7 (Torque spec): 55.0 N.m (5.6 kg-m, 41 ft-lb)

M6 bolts : Except the above (Torque spec): 12.7 N.m (1.3 kg-m, 9 ft-lb)

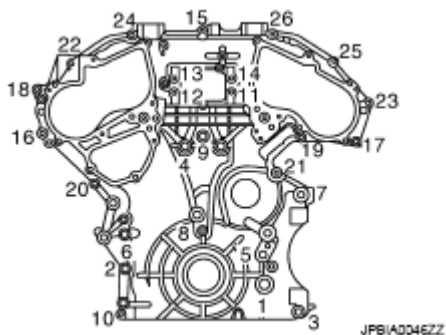


Fig. 110: Tightening Mounting Bolts In Sequence

Courtesy of NISSAN MOTOR CO., U.S.A.

- f. After all bolts are tightened, retighten them to the specified torque in numerical order shown in the figure.

CAUTION: Be sure to wipe off any excessive liquid gasket leaking on surface mating with oil pan (upper).

- g. Install two mounting bolts in front of oil pan (upper) in numerical order shown in the figure.

Tightening torque : Refer to , "2WD : EXPLODED VIEW".

<=: Engine front

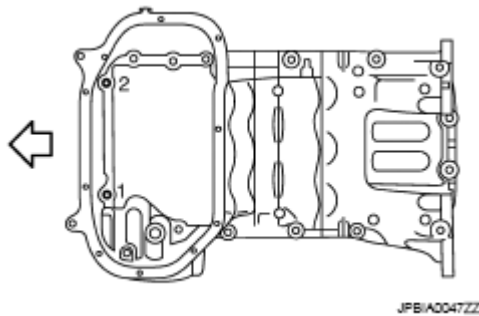


Fig. 111: Identifying Oil Pan Mounting Bolts
Courtesy of NISSAN MOTOR CO., U.S.A.

11. Install right and left valve timing control covers as follows:
 - a. Install new seal rings (1) in shaft grooves.

A : Left bank

CAUTION: When replacing seal ring, replace all rings with new one.

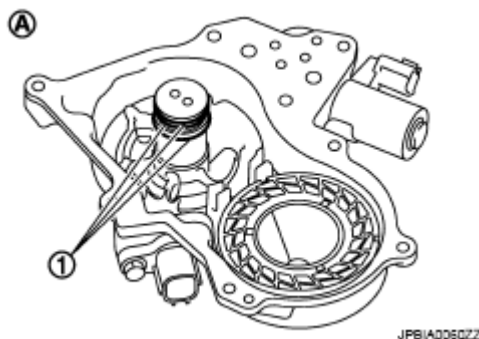



Fig. 112: Identifying Seal Rings

Courtesy of NISSAN MOTOR CO., U.S.A.

- b. To check the joint between dowel pins and dowel pin holes, check the looseness in the axle direction by pushing the circumferential looseness (between dowel pins and dowel pin holes) by twisting in the circumferential direction.


CAUTION: Always perform this procedure when removing because the gap between dowel pins and dowel pin holes may not be caused on purpose.

- A. Mating surface of magnet retarder
- B. Moves slightly
- C. Not shaken

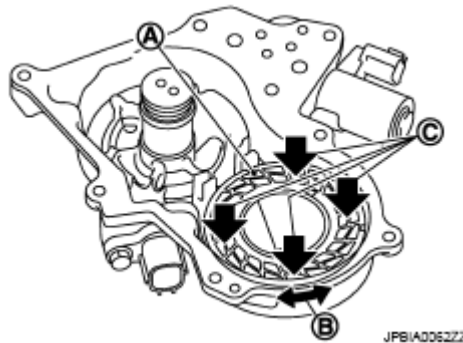**Fig. 113: Checking Joint Between Dowel Pins And Dowel Pin Holes**

Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Install valve timing control cover with new gasket to front timing chain case.
1. Valve timing control cover
 2. Magnet retarder

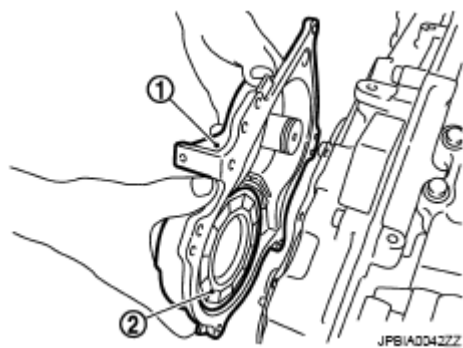**Fig. 114: Installing Valve Timing Control Cover**

Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION:

- Do not face the magnet retarder side down to prevent magnet retarder from dropping.
 - Check the mating surface of magnet retarder and the drum of exhaust side camshaft sprocket for foreign materials.
 - Align the center of both shaft holes of the shaft and the intake side camshaft sprocket, and then insert them.
 - Be careful not to drop the seal ring from the shaft groove.
 - When setting the valve timing control cover in position by hand, if valve timing control cover is not contacting with the front timing chain case, the dowel pin of magnet retarder may not be aligned with the dowel pin holes of cover. In this case, return to step "b".
- d. Being careful not to move seal ring from the installation groove, align dowel pins on front timing chain case with holes to install valve timing control covers.
 - e. Tighten mounting bolts in numerical order as shown in the figure.

Tightening torque : Refer to , "EXPLODED VIEW".

- A. Right bank
- B. Left bank
- C. Dowel pin hole

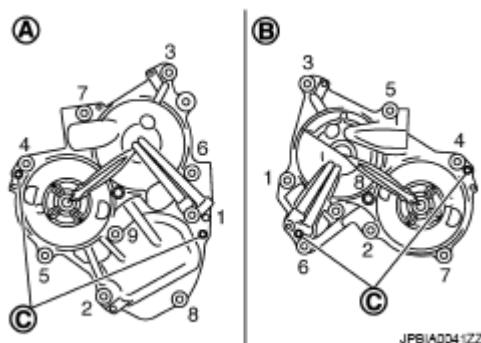


Fig. 115: Tightening Mounting Bolts In Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

- After all bolts are tightened, tighten No.1 bolt to the specified torque again.
12. Install oil pan (lower). Refer to , "EXPLODED VIEW (2WD)" or , "EXPLODED VIEW (AWD)".
 13. Install rocker covers (right and left banks). Refer to , "EXPLODED VIEW".
 14. Install crankshaft pulley as follows:
 - a. Fix crankshaft using the ring gear stopper [SST: KV10118600 (J-48641)].
 - b. Install crankshaft pulley, taking care not to damage front oil seal.
 - When press-fitting crankshaft pulley with plastic hammer, tap on its center portion (not

circumference).

- c. Tighten crankshaft pulley bolt.

(Torque spec): **44.1 N.m (4.5 kg-m, 33 ft-lb)**

- d. Place a matching mark (A) on crankshaft pulley (2) aligning with the matching (C) of crankshaft pulley bolt (1). Tighten the bolt 90 degrees (one marks) (b).

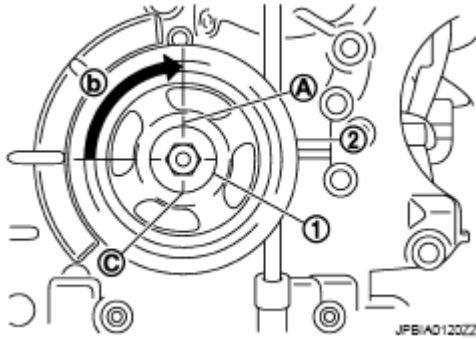


Fig. 116: Identifying Matching Mark And Crankshaft Pulley
Courtesy of NISSAN MOTOR CO., U.S.A.

- e. Rotate crankshaft pulley in normal direction (clockwise when viewed from front) to confirm it turns smoothly.

15. For the following operations, perform steps in the reverse order of removal.

Inspection

INSPECTION AFTER REMOVAL

Timing Chain

Check for cracks and any excessive wear at link plates and roller links of timing chain. Replace timing chain as necessary.

- A. Crack
- B. Wear

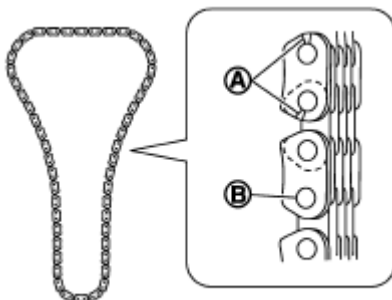


Fig. 117: Identifying Link Plates And Roller Links Of Timing Chain
 Courtesy of NISSAN MOTOR CO., U.S.A.

INSPECTION AFTER INSTALLATION

Inspection for Leaks

The following are procedures for checking fluids leak, lubricates leak.

- Before starting engine, check oil/fluid levels including engine coolant and engine oil. If less than required quantity, fill to the specified level. Refer to "**RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS**".
- Use procedure below to check for fuel leakage.
 - Turn ignition switch "ON" (with engine stopped). With fuel pressure applied to fuel piping, check for fuel leakage at connection points.
 - Start engine. With engine speed increased, check again for fuel leakage at connection points.
- Run engine to check for unusual noise and vibration.

NOTE: If hydraulic pressure inside chain tensioner drops after removal/installation, slack in guide may generate a pounding noise during and just after the engine start. However, this does not indicate an unusualness. Noise will stop after hydraulic pressure rises.

- Warm up engine thoroughly to make sure there is no leakage of fuel, or any oil/fluids including engine oil and engine coolant.
- Bleed air from lines and hoses of applicable lines, such as in cooling system.
- After cooling down engine, again check oil/fluid levels including engine oil and engine coolant. Refill to the specified level, if necessary.

Summary of the inspection items:

SUMMARY OF THE INSPECTION ITEMS


Items	Before starting engine	Engine running	After engine stopped
Engine coolant	Level	Leakage	Level
Engine oil	Level	Leakage	Level
Other oils and fluid ⁽¹⁾	Level	Leakage	Level
Fuel	Leakage	Leakage	Leakage
(1) Transmission/transaxle/CVT fluid, power steering fluid, brake fluid, etc.			

CAMSHAFT

Exploded View

A. See **CAMSHAFT**.

Symbol	Description
	N·m (kg-m, ft-lb)
	N·m (kg-m, in-lb)
	Always replace after disassembly.

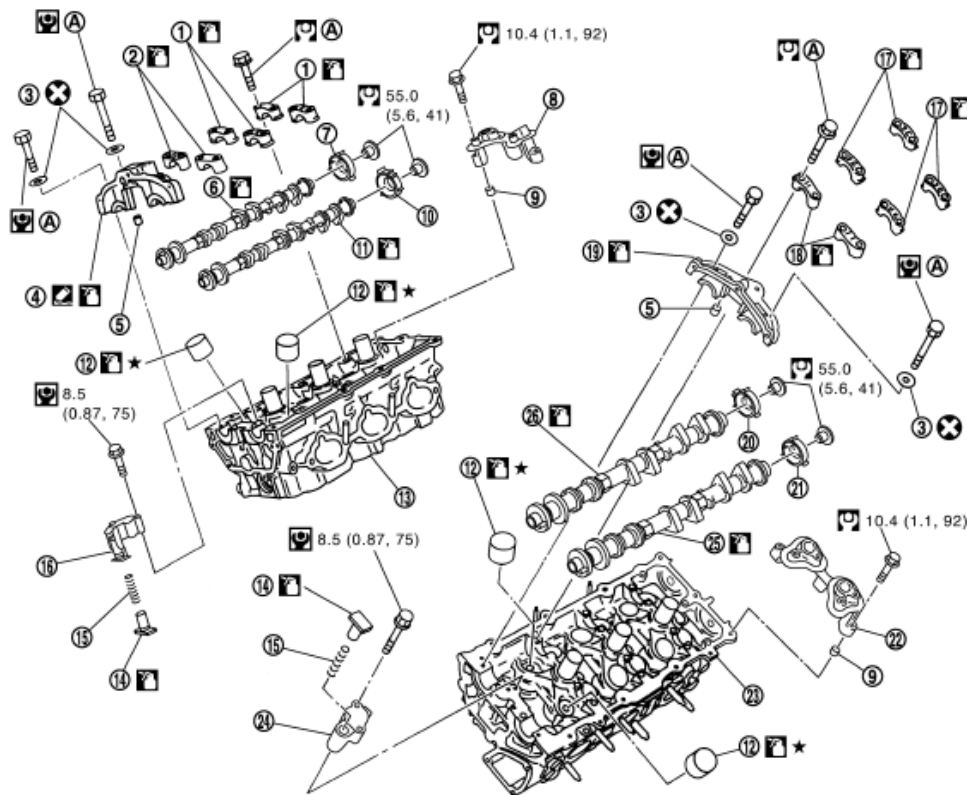

JPB/A0057GB

- | | | |
|---|---------------------------------|--|
| 1. Camshaft bracket (No. 3, 4) | 2. Camshaft bracket (No. 2) | 3. Seal washer |
| 4. Camshaft bracket (No. 1) | 5. Dowel pin | 6. Camshaft (EXH) (right bank) |
| 7. Camshaft signal plate (EXH) | 8. Camshaft sensor bracket | 9. Dowel pin |
| 10. Camshaft signal plate (INT) | 11. Camshaft (INT) (right bank) | 12. Valve lifter |
| 13. Cylinder head (right bank) | 14. Plunger | 15. Spring |
| 16. Timing chain tensioner (secondary) (right bank) | 17. Camshaft bracket (No. 3, 4) | 18. Camshaft bracket (No. 2) |
| 19. Camshaft bracket (No. 1) | 20. Camshaft signal plate (INT) | 21. Camshaft signal plate (EXH) |
| 22. Camshaft sensor bracket | 23. Cylinder head (left bank) | 24. Timing chain tensioner (secondary) (left bank) |
| 25. Camshaft (EXH) | 26. Camshaft (INT) | |
- A. See appropriate information

Fig. 118: Exploded View Of Camshaft With Torque Specifications
Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to "**COMPONENTS**" for symbol marks in the figure.

Removal and Installation

REMOVAL

1. Remove front timing chain case, camshaft sprocket and timing chain. Refer to , "**EXPLODED VIEW**".
2. Remove fuel sub tube. Refer to , "**EXPLODED VIEW**".
3. Loosen camshaft sensor bracket bolts in reverse order as shown in the figure.

<=: Engine front

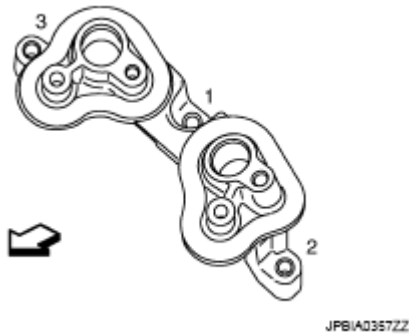


Fig. 119: Identifying Camshaft Sensor Bracket Bolts In Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

NOTE: The order of loosening bolts is the same for bank 1 and bank 2.

4. Remove camshaft brackets.
 - Mark camshafts, camshaft brackets and bolts so they are placed in the same position and direction for installation.
 - Equally loosen camshaft bracket bolts in several steps in reverse order as shown in the figure.

<=: Engine front

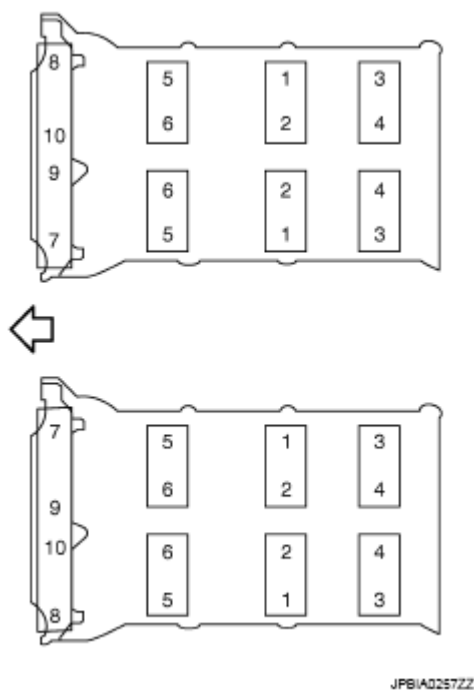


Fig. 120: Loosening Camshaft Bracket Bolts In Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

5. Remove camshaft.
6. Remove valve lifter.
 - Identify installation positions, and store them without mixing them up.
7. Remove timing chain tensioners (secondary) (1) from cylinder head.
 - A. Right bank
 - B. Left bank

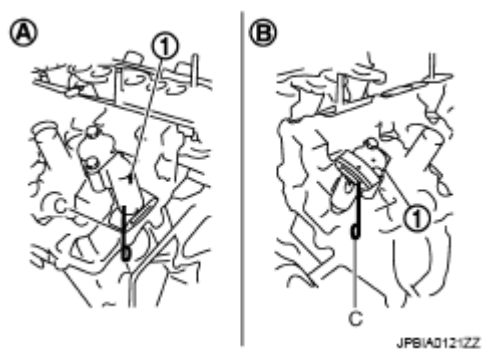


Fig. 121: Identifying Timing Chain Tensioners
Courtesy of NISSAN MOTOR CO., U.S.A.

- Remove timing chain tensioners (secondary) with its stopper pin (C) attached.

NOTE: Stopper pin should be attached when timing chain (secondary) is removed.

INSTALLATION

1. Install timing chain tensioners (secondary) (1) on both sides of cylinder head.
 - A. Right bank
 - B. Left bank
 - Install timing chain tensioner with its stopper pin (C) attached.
 - Install timing chain tensioner with sliding part facing downward on right-side cylinder head, and with sliding part facing upward on left-side cylinder head.

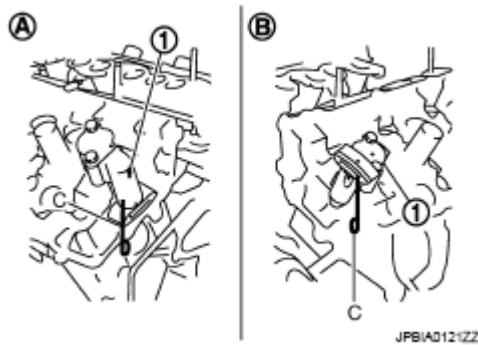


Fig. 122: Identifying Stopper Pin
Courtesy of NISSAN MOTOR CO., U.S.A.

2. Install valve lifter.
 - Install it in the original position.
3. Install camshafts.

<=: Engine front

- Follow your identification marks made during removal, or follow the identification marks that are present on new camshafts for proper placement and direction.

IDENTIFICATION MARK CHART

Bank	INT/EXH	Dowel pin (1)	Paint marks			Identification mark (D)
			M1 (E)	M2 (F)	M3 (C)	
RH	EXH (B)	Yes	No	Green	Light blue	1F
	INT (A)	Yes	Green	No	Light blue	1E
LH	INT (A)	Yes	Green	No	Light blue	1G
	EXH (B)	Yes	No	Green	Light blue	1H

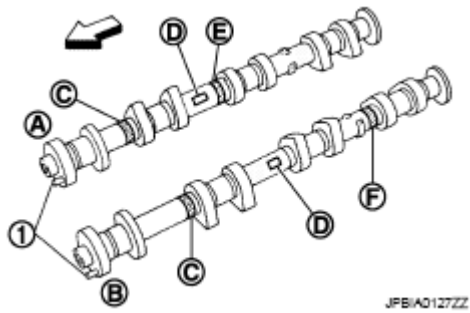


Fig. 123: Identifying Camshaft

Courtesy of NISSAN MOTOR CO., U.S.A.

- Install camshaft so that dowel pin (A) on front end face are positioned as shown in the figure. (No. 1 cylinder TDC on its compression stroke)

1 : Crankshaft key

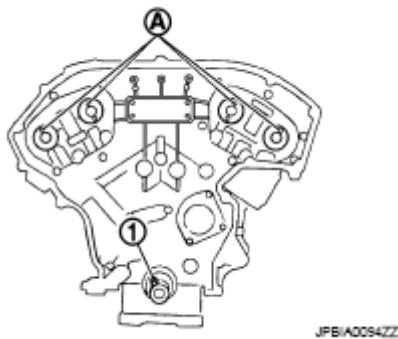


Fig. 124: Identifying Dowel Pin

Courtesy of NISSAN MOTOR CO., U.S.A.

NOTE: Though camshaft does not stop at the portion as shown in the figure, for the placement of cam nose, it is generally accepted camshaft is placed for the same direction of the figure.

4. Install camshaft brackets.

- Remove foreign material completely from camshaft bracket backside and from cylinder head installation face.
- Install camshaft bracket in original position and direction as shown in figure.
 - A. No. 1
 - B. No. 2
 - C. No. 3
 - D. No. 4
 - E. Right camshaft bracket
 - F. Exhaust side

- G. Intake side
- H. Left camshaft bracket
- I. Intake side
- J. Exhaust side

<=: Engine front

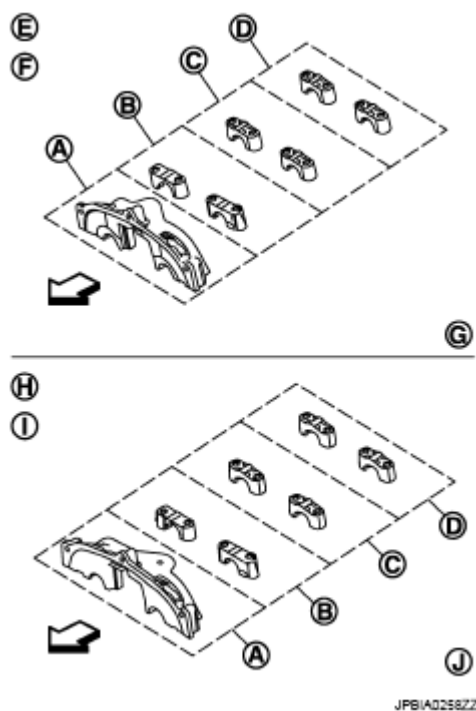


Fig. 125: Identifying Camshaft Brackets
Courtesy of NISSAN MOTOR CO., U.S.A.

- Install camshaft brackets (No. 2 to 4) aligning the stamp marks (A) as shown in the figure.

B :Right bank

C :Left bank

<=: Engine front

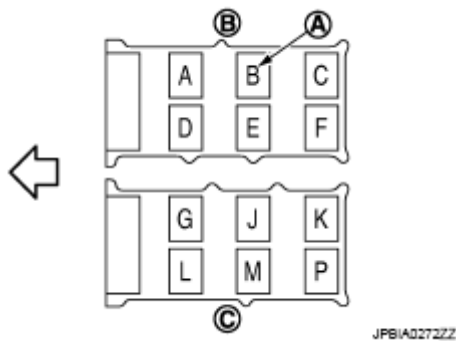


Fig. 126: Identifying Stamp Marks

Courtesy of NISSAN MOTOR CO., U.S.A.

NOTE: There are no identification marks indicating left and right for camshaft bracket (No. 1).

- Apply liquid gasket to mating surface of camshaft bracket (No. 1) as shown on both right and left banks.

Use Genuine RTV Silicone Sealant or equivalent. Refer to "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS".

- 8.5 mm (0.335 in)
- 2 mm (0.08 in)
- Clearance 5 mm (0.20 in)
- Ø2.5 mm (0.098 in)


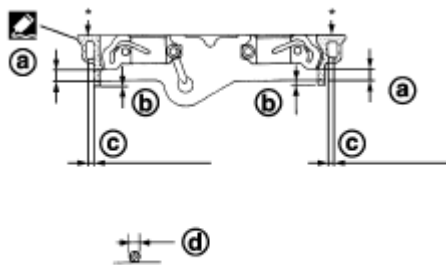


Fig. 127: Identifying Camshaft Bracket Clearance

Courtesy of NISSAN MOTOR CO., U.S.A.

- Apply liquid gasket to camshaft bracket (No. 1) contact surface on the rear timing chain case backside as shown on both bank 1 and bank 2.

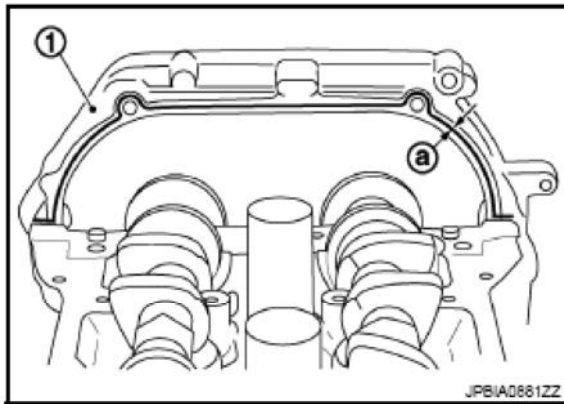

1 : Rear timing chain case

a : $\phi 3.9$ mm (0.154 in)

Fig. 128: Identifying Rear Timing Chain Case
 Courtesy of NISSAN MOTOR CO., U.S.A.

Use Genuine RTV Silicone Sealant or equivalent. Refer to **RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS** .

CAUTION: For camshaft bracket (No. 1) near installation position, and install it without disturbing the liquid gasket applied to the surfaces.

5. Tighten camshaft bracket bolts in the following steps, in numerical order as shown.

<=: Engine front

a. Tighten No. 7 to 10 in numerical order as shown.

(Torque spec): **1.96 N.m (0.20 kg-m, 1 ft-lb)**

b. Tighten No. 1 to 6 in numerical order as shown.

(Torque spec): **1.96 N.m (0.20 kg-m, 1 ft-lb)**

c. Tighten No. 1 to 10 in numerical order as shown.

(Torque spec): **5.88 N.m (0.60 kg-m, 4 ft-lb)**

d. Tighten No. 1 to 10 in numerical order as shown.

(Torque spec): **10.4 N.m (1.1 kg-m, 8 ft-lb)**

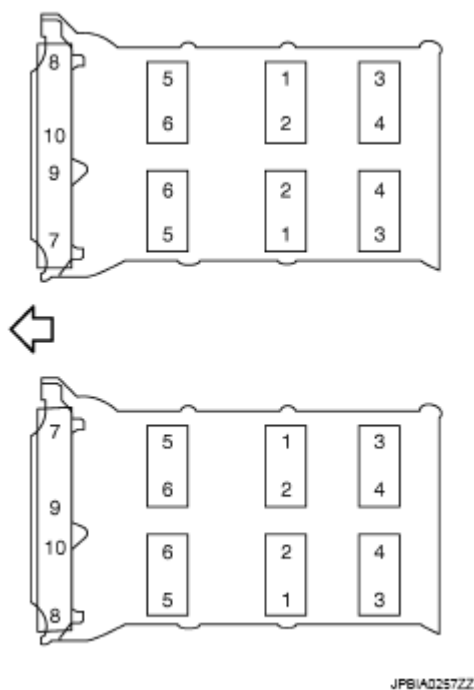


Fig. 129: Tightening Camshaft Bracket Bolts In Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

6. Tighten camshaft sensor bracket bolts in numerical order as shown in the figure.

<=: Engine front

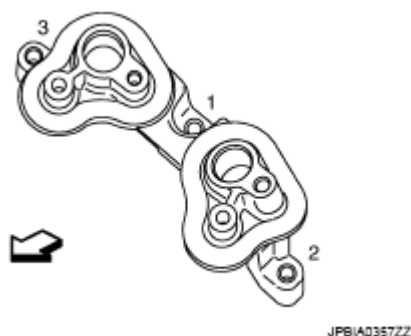


Fig. 130: Identifying Camshaft Sensor Bracket Bolts In Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

NOTE: The order of tightening bolts is the same for bank 1 and bank 2.

7. Inspect and adjust the valve clearance. Refer to , "INSPECTION AND ADJUSTMENT".
8. Install in the reverse order of removal after this step.

Inspection

INSPECTION AFTER REMOVAL**Camshaft Runout**

1. Put V-block on precise flat table, and support No. 2 and 4 journals of camshaft.

CAUTION: Do not support No. 1 journal (on the side of camshaft sprocket) because it has a different diameter from the other three locations.

2. Set a dial indicator vertically to No. 3 journal.
3. Turn camshaft to one direction with hands, and measure the camshaft runout on a dial indicator. (Total indicator reading)

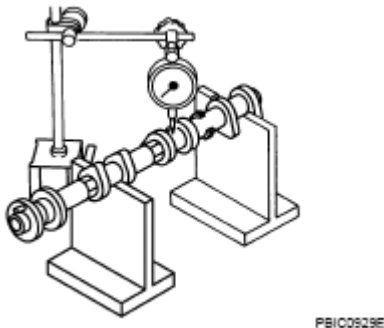


Fig. 131: Checking Camshaft Runout
Courtesy of NISSAN MOTOR CO., U.S.A.

Standard & limit : Refer to , "CAMSHAFT".

4. If it exceeds the limit, replace camshaft.

Camshaft Cam Height

1. Measure the camshaft cam height with a micrometer.

Standard cam height : Refer to , "CAM - (INTAKE & EXHAUST) SHAFT".

Cam wear limit : Refer to , "CAMSHAFT".

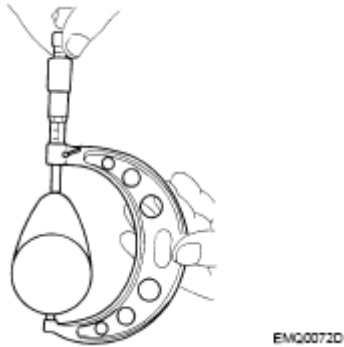


Fig. 132: Measuring Camshaft Cam Height
Courtesy of NISSAN MOTOR CO., U.S.A.

2. If wear exceeds the limit, replace camshaft.

Camshaft Journal Oil Clearance

CAMSHAFT JOURNAL DIAMETER

- Measure the outer diameter of camshaft journal with a micrometer (A).

Standard and limit : Refer to , "CAMSHAFT".

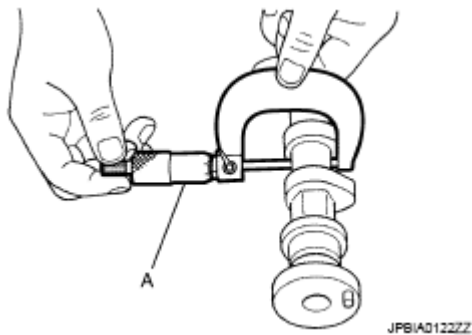


Fig. 133: Measuring Outer Diameter Of Camshaft Journal
Courtesy of NISSAN MOTOR CO., U.S.A.

CAMSHAFT BRACKET INNER DIAMETER

- Tighten camshaft bracket bolt with the specified torque. Refer to "INSTALLATION" for the tightening procedure.
- Measure inner diameter (A) of camshaft bracket with a bore gauge.

Standard : Refer to , "CAMSHAFT".

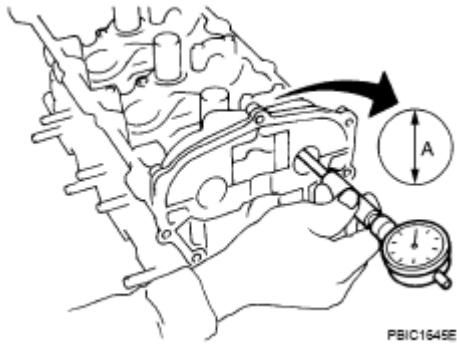


Fig. 134: Measuring Inner Diameter Of Camshaft Bracket
Courtesy of NISSAN MOTOR CO., U.S.A.

CAMSHAFT JOURNAL OIL CLEARANCE

- (Oil clearance) = (Camshaft bracket inner diameter) - (Camshaft journal diameter).

Standard and limit : Refer to , "CAMSHAFT".

- If the calculated value exceeds the limit, replace either or both camshaft and cylinder head.

NOTE: Camshaft brackets cannot be replaced as single parts, because there are machined together with cylinder head. Replace whole cylinder head assembly.

Camshaft End Play

- Install a dial indicator in thrust direction on front end of camshaft. Measure the end play of a dial indicator when camshaft is moved forward/backward (in direction to axis).

Standard and limit : Refer to , "CAMSHAFT".

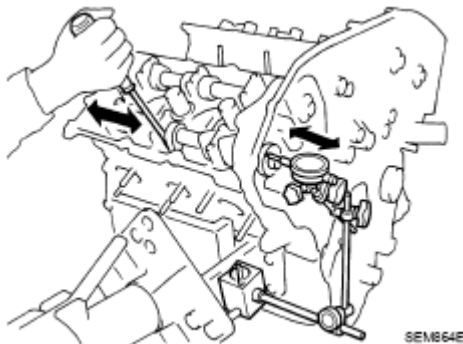


Fig. 135: Measuring Camshaft End Play
Courtesy of NISSAN MOTOR CO., U.S.A.

- Measure the following parts if out of the limit.

- Dimension "A" for camshaft No. 1 journal

Standard : 27.500 - 27.548 mm (1.0827 - 1.0846 in)

- Dimension "B" for cylinder head No. 1 journal bearing

Standard : 27.360 - 27.385 mm (1.0772 - 1.0781 in)

- Refer to the standards above, and then replace camshaft and/or cylinder head.

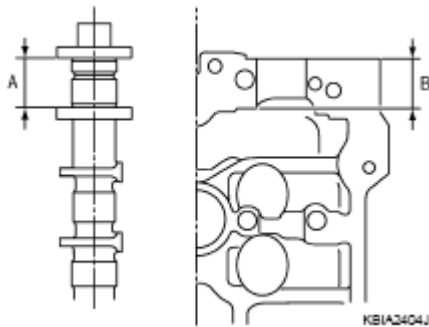


Fig. 136: Identifying Camshaft No. 1 Journal Dimension
 Courtesy of NISSAN MOTOR CO., U.S.A.

Camshaft Sprocket Runout

1. Put V-block on precise flat table, and support No. 2 and 4 journals of camshaft.

CAUTION: Do not support No. 1 journal (on the side of camshaft sprocket) because it has a different diameter from the other three locations.

2. Measure the camshaft sprocket runout with a dial indicator. (Total indicator reading)

Limit : Refer to , "CAMSHAFT".

- If it exceeds the limit, replace camshaft sprocket.


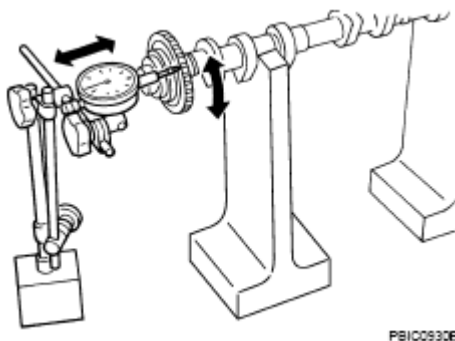


Fig. 137: Measuring Camshaft Sprocket Runout
 Courtesy of NISSAN MOTOR CO., U.S.A.

Valve Lifter

Check if surface of valve lifter has any wear or cracks.

- If anything above is found, replace valve lifter. Refer to , "CAMSHAFT".

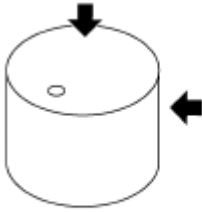

KBIA0162E


Fig. 138: Identifying Valve Lifter
 Courtesy of NISSAN MOTOR CO., U.S.A.

Valve Lifter Clearance

VALVE LIFTER OUTER DIAMETER

- Measure the outer diameter at 1/2 height of valve lifter with a micrometer (A) since valve lifter is in barrel shape.

Standard (Intake and exhaust) : Refer to , "CAMSHAFT".

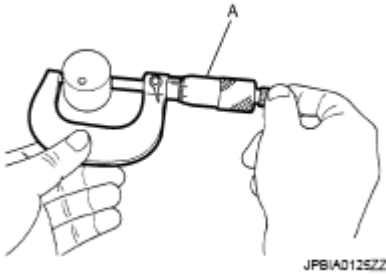

JPSIA0125ZZ

Fig. 139: Measuring Outer Diameter Of Valve Lifter
 Courtesy of NISSAN MOTOR CO., U.S.A.

VALVE LIFTER HOLE DIAMETER

- Measure the inner diameter of valve lifter hole of cylinder head with an inside micrometer.

Standard (Intake and exhaust) : Refer to , "CAMSHAFT".

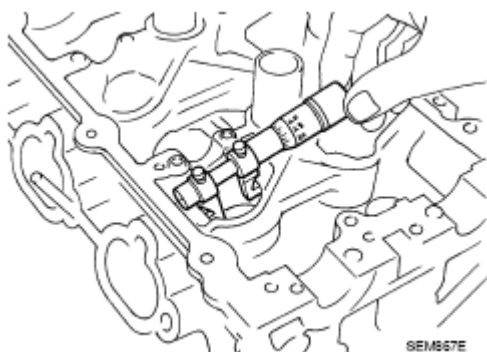


Fig. 140: Measuring Inner Diameter Of Valve Lifter Hole
 Courtesy of NISSAN MOTOR CO., U.S.A.

VALVE LIFTER CLEARANCE

- $(\text{Valve lifter clearance}) = (\text{Valve lifter hole diameter}) - (\text{Valve lifter outer diameter})$

Standard (Intake and exhaust) : Refer to , "CAMSHAFT".

- If the calculated value is out of the standard, referring to each standard of valve lifter outer diameter and valve lifter hole diameter, replace either or both valve lifter and cylinder head.

INSPECTION AFTER INSTALLATION

Inspection of Camshaft Sprocket (INT) Oil Groove

CAUTION:

- **Perform this inspection only when DTC P0011 is detected in self-diagnostic results of CONSULT-III and it is directed according to inspection procedure in this information. Refer to "DIAGNOSIS DESCRIPTION".**
- **Check when engine is cold so as to prevent burns from the splashing engine oil.**

1. Check engine oil level. Refer to "INSPECTION".
2. Perform the following procedure so as to prevent the engine from being unintentionally started while checking.
 - a. Release the fuel pressure. Refer to "INSPECTION".
 - b. Disconnect ignition coil and injector harness connectors. Refer to , "EXPLODED VIEW".
3. Remove intake valve timing control solenoid valve. Refer to , "EXPLODED VIEW".
4. Crank engine, and then make sure that engine oil comes out from intake valve timing control solenoid valve hole (A). End crank after checking.

1 : Valve timing control cover (RH)

<=: Engine front

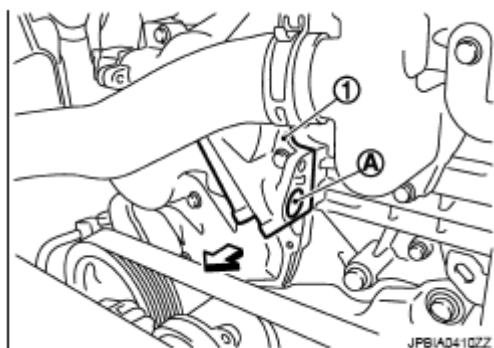


Fig. 141: Identifying Intake Valve Timing Control Solenoid Valve Hole
 Courtesy of NISSAN MOTOR CO., U.S.A.

WARNING: Be careful not to touch rotating parts. (drive belts, idler pulley, and crankshaft pulley, etc.)

CAUTION:

- Prevent splashing by using a shop cloth so as to prevent the worker from injury from engine oil and so as to prevent engine oil contamination.
- Prevent splashing by using a shop cloth so as to prevent engine oil from being splashed to engine and vehicle. Especially, be careful no to apply engine oil to rubber parts of drive belts, engine mounting insulator, etc. Wipe engine oil off immediately if it is splashed.

5. Perform the following inspection if engine oil does not come out from intake valve timing control solenoid valve oil hole of the cylinder head.
 - Remove oil filter, and then clean it. Refer to "**REMOVAL AND INSTALLATION**".
 - Clean oil groove between oil strainer and intake valve timing control solenoid valve. Refer to "**ENGINE LUBRICATION SYSTEM**".
6. Remove components between intake valve timing control solenoid valve and camshaft sprocket (INT), and then check each oil groove for clogging.
 - Clean oil groove if necessary. Refer to "**ENGINE LUBRICATION SYSTEM**".
7. After inspection, install removed parts in the reverse order.

Inspection for Leaks

The following are procedures for checking fluids leak, lubricates leak.

- Before starting engine, check oil/fluid levels including engine coolant and engine oil. If less than required quantity, fill to the specified level. Refer to "**RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS**".
- Use procedure below to check for fuel leakage.
 - Turn ignition switch "ON" (with engine stopped). With fuel pressure applied to fuel piping, check

for fuel leakage at connection points.

- Start engine. With engine speed increased, check again for fuel leakage at connection points.
- Run engine to check for unusual noise and vibration.

NOTE: If hydraulic pressure inside timing chain tensioner drops after removal/installation, slack in the guide may generate a pounding noise during and just after engine start. However, this is normal. Noise will stop after hydraulic pressure rises.

- Warm up engine thoroughly to make sure there is no leakage of fuel, or any oil/fluids including engine oil and engine coolant.
- Bleed air from lines and hoses of applicable lines, such as in cooling system.
- After cooling down engine, again check oil/fluid levels including engine oil and engine coolant. Refill to the specified level, if necessary.

Summary of the inspection items:

SUMMARY OF THE INSPECTION ITEMS

Items	Before starting engine	Engine running	After engine stopped
Engine coolant	Level	Leakage	Level
Engine oil	Level	Leakage	Level
Other oils and fluid ⁽¹⁾	Level	Leakage	Level
Fuel	Leakage	Leakage	Leakage
(1) Transmission/transaxle/CVT fluid, power steering fluid, brake fluid, etc.			

OIL SEAL

VALVE OIL SEAL

VALVE OIL SEAL : Removal and Installation

REMOVAL

1. Remove camshaft relating to valve oil seal to be removed. Refer to , "**EXPLODED VIEW**".
2. Remove valve lifters. Refer to , "**EXPLODED VIEW**".
3. Turn crankshaft until the cylinder requiring new oil seals is at TDC. This will prevent valve from dropping into cylinder.
4. Remove valve collet.
 - Compress valve spring with the valve spring compressor [SST: KV10116200 (J26336-A)] (A), the attachment [SST: KV10115900 (J26336-20)] (C), the adapter [SST: KV10109220 (-)] (B). Remove valve collet with a magnet hand.

CAUTION: When working, take care not to damage valve lifter holes.

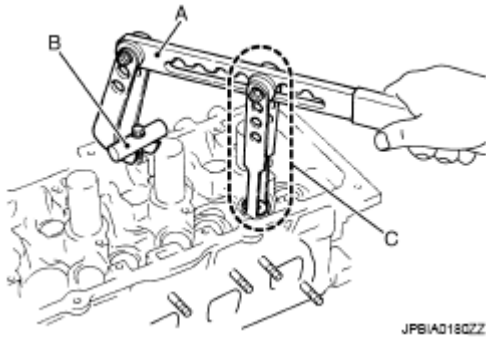


Fig. 142: Compressing Valve Spring With Valve Spring Compressor
 Courtesy of NISSAN MOTOR CO., U.S.A.

5. Remove valve spring retainer, and valve spring.
6. Remove valve oil seal using the valve oil seal puller [SST: KV10107902 (J38959)] (A).

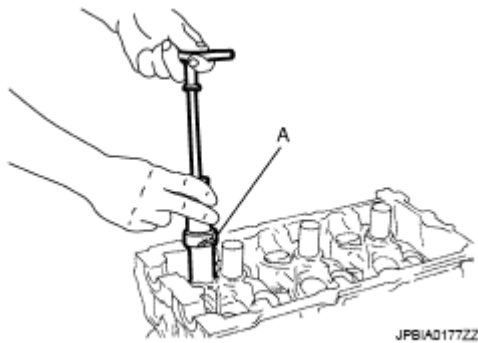


Fig. 143: Removing Valve Oil Seal Using Valve Oil Seal Puller
 Courtesy of NISSAN MOTOR CO., U.S.A.

INSTALLATION

1. Apply new engine oil on new valve oil seal joint and seal lip.
2. Using the valve oil seal drift [SST: KV10115600 (J38958)] (A), press fit valve seal to height (b) shown in figure.

NOTE: **Dimension: Height measured before valve spring seat installation**

Intake and exhaust : 14.3 - 14.9 mm (0.563 - 0.587 in)

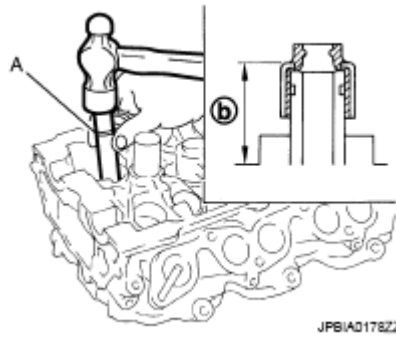


Fig. 144: Pressing Fit Valve Seal
Courtesy of NISSAN MOTOR CO., U.S.A.

3. Install in the reverse order of removal after this step.

FRONT OIL SEAL

FRONT OIL SEAL : Removal and Installation

REMOVAL

1. Remove the following parts:
 - Engine undercover with power tool.
 - Drive belts: Refer to , "EXPLODED VIEW".
 - Crankshaft pulley: Refer to , "EXPLODED VIEW".
2. Remove front oil seal using a suitable tool.

CAUTION: Be careful not to damage front timing chain case and crankshaft.

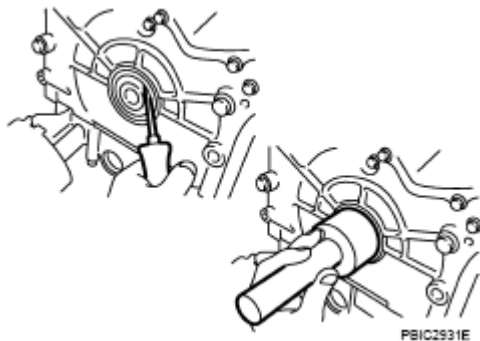


Fig. 145: View Of Oil Seal
Courtesy of NISSAN MOTOR CO., U.S.A.

INSTALLATION

1. Apply new engine oil to both oil seal lip and dust seal lip of new front oil seal.
2. Install front oil seal.
 - Install front oil seal so that each seal lip is oriented as shown in the figure.
 - A. Oil seal lip
 - B. Dust seal lip

<=: Engine inside

<--: Engine outside

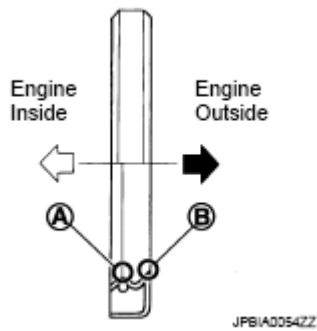


Fig. 146: Identifying Oil Seal Lip And Dust Seal Lip
Courtesy of NISSAN MOTOR CO., U.S.A.

- Using a suitable drift, press-fit until the height of front oil seal is level with the mounting surface.
 - Suitable drift: outer diameter 60 mm (2.36 in), inner diameter 50 mm (1.97 in).
- Make sure the garter spring is in position and seal lips not inverted

CAUTION:

- Be careful not to damage front timing chain case and crankshaft.
- Press-fit straight and avoid causing burrs or tilting oil seal.

3. Install in the reverse order of removal after this step.

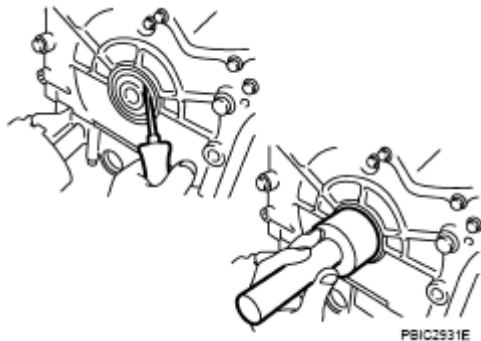


Fig. 147: Identifying Oil Seal

Courtesy of NISSAN MOTOR CO., U.S.A.

REAR OIL SEAL

REAR OIL SEAL : Removal and Installation

REMOVAL

1. Remove transmission assembly. Refer to "**EXPLODED VIEW** " (M/T models) or "**2WD : EXPLODED VIEW** " (A/T 2WD models), "**AWD : EXPLODED VIEW** " (A/T AWD models).
2. Remove drive plate (A/T models) or fly wheel (M/T models). Refer to , "**EXPLODED VIEW**".
3. Remove rear oil seal with a suitable tool.

CAUTION: Be careful not to damage crankshaft and cylinder block.

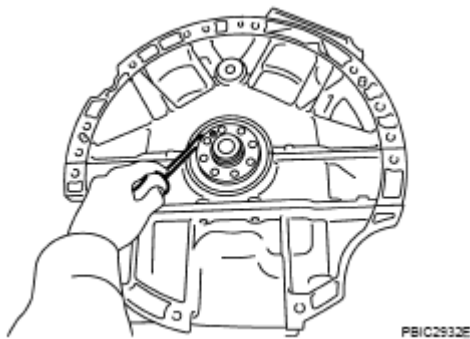


Fig. 148: View Of Oil Seal
Courtesy of NISSAN MOTOR CO., U.S.A.

INSTALLATION

1. Install rear oil seal.
 - Install rear oil seal so that each seal lip is oriented as shown in the figure.
 - A. Oil seal lip
 - B. Dust seal lip

<=: Engine inside

<--: Engine outside

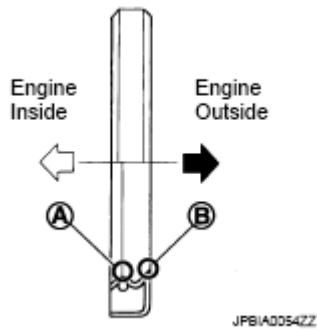


Fig. 149: Identifying Oil Seal Lip And Dust Seal Lip
Courtesy of NISSAN MOTOR CO., U.S.A.

- Press in rear oil seal (1) to the position as shown in the figure.

a :0 - 0.5 mm (0 - 0.020 in)

B :Cylinder block rear end face

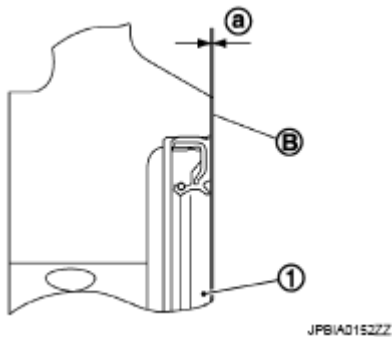


Fig. 150: Identifying Rear Oil Seal
Courtesy of NISSAN MOTOR CO., U.S.A.

- Using a suitable drift (A), press-fit until the height of rear oil seal is level with the mounting surface.
- Suitable drift: outer diameter 100 mm (3.94 in), inner diameter 85mm (3.35 in).

CAUTION:

- Be careful not to damage crankshaft and cylinder block.
- Press-fit straight and avoid causing burrs or tilting oil seal.

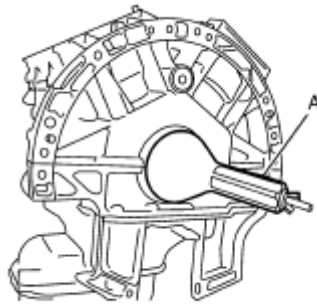


Fig. 151: Identifying Oil Seal
Courtesy of NISSAN MOTOR CO., U.S.A.

2. Install in the reverse order of removal after this step.


REMOVAL AND INSTALLATION

ENGINE ASSEMBLY

2WD

2WD :Exploded View

Symbol	Description
	N·m (kg-m, ft-lb)
	N·m (kg-m, in-lb)
	Always replace after disassembly.

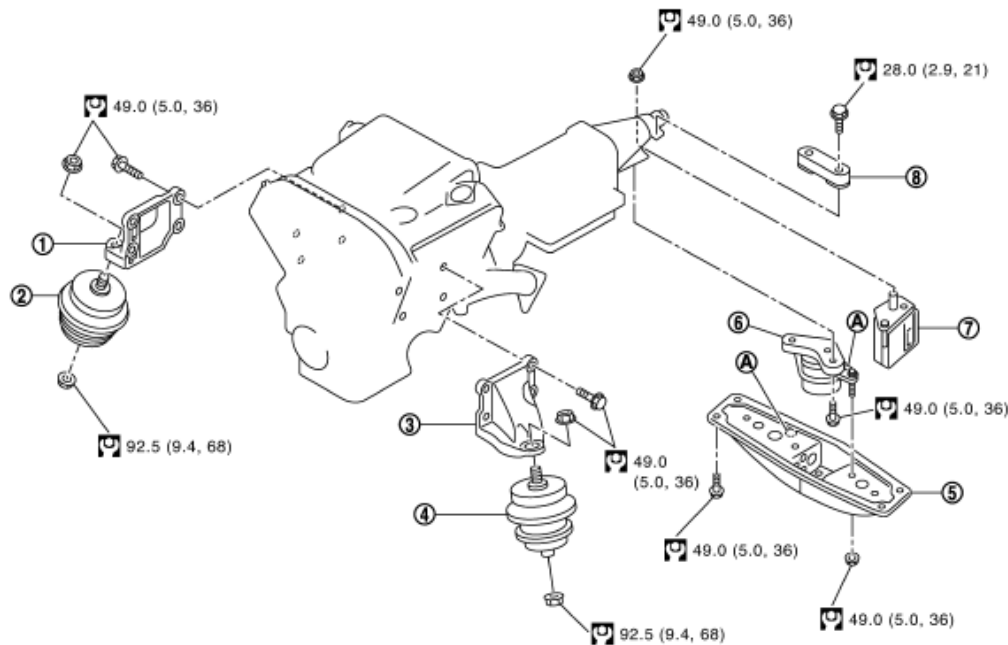

JPB/A0059GB

- | | | |
|-----------------------------------|-----------------------------------|-------------------------------------|
| 1. Engine mounting bracket (RH) | 2. Engine mounting insulator (RH) | 3. Engine mounting bracket (LH) |
| 4. Engine mounting insulator (LH) | 5. Rear engine mounting member | 6. Engine mounting insulator (rear) |
| 7. Dynamic damper (M/T models) | 8. Dynamic damper (A/T models) | |
| A. Front mark | | |

Fig. 152: Exploded View Of Engine Assembly With Torque Specifications
 Courtesy of NISSAN MOTOR CO., U.S.A.

2WD :Removal and Installation

WARNING:

- Situate the vehicle on a flat and solid surface.
- Place chocks at front and back of rear wheels.
- For engines not equipped with engine slingers, attach proper slingers and bolts described in PARTS CATALOG.

CAUTION:

- Always be careful to work safely, avoid forceful or uninstructed operations.
- Do not start working until exhaust system and engine coolant are cool enough.
- If items or work required are not covered by this article, refer to the

applicable information.

- Always use the support point specified for lifting.
- Use either 2-pole lift type or separate type lift as best you can. If board-on type is used for unavoidable reasons, support at rear axle jacking point with transmission jack or similar tool before starting work, in preparation for the backward shift of center of gravity.
- For supporting points for lifting and jacking point at rear axle, refer to "**GARAGE JACK AND SAFETY STAND AND 2-POLE LIFT**".

REMOVAL

Outline

At first, remove the engine and the transmission assembly with front suspension member downward. Then separate the engine from transmission.

Preparation

1. Release fuel pressure. Refer to "**INSPECTION**".
2. Disconnect both battery cables. Refer to "**EXPLODED VIEW**".
3. Drain engine coolant from radiator. Refer to "**DRAINING**".

CAUTION:

- Perform this step when engine is cold.
- Do not spill engine coolant on drive belts.

4. Remove the following parts:
 - Radiator reservoir tank: Refer to "**EXPLODED VIEW**".
 - Engine cover: Refer to , "**EXPLODED VIEW**".
 - Front road wheel and tires (power tool)
 - Engine undercover (power tool)
 - Cowl top cover: Refer to "**EXPLODED VIEW**".
 - Air duct and air cleaner case assembly (RH and LH): Refer to , "**EXPLODED VIEW**".
 - Cooling fan assembly: Refer to "**EXPLODED VIEW**".
5. Discharge refrigerant from A/C circuit. Refer to "**EXPLODED VIEW**".
6. Remove radiator hoses (upper and lower). Refer to "**EXPLODED VIEW**".

Engine Room LH

1. Disconnect heater hose from vehicle-side, and fit a plug onto hose end to prevent engine coolant leak.
2. Disconnect A/C piping from A/C compressor, and temporarily fasten it on vehicle with a rope. Refer to "**EXPLODED VIEW**".
3. Disconnect brake booster vacuum hose.

4. Disconnect ground cable.

Engine Room RH

1. Disconnect battery positive cable at vehicle side and temporarily fasten it on engine.
2. Disconnect all clips and connector of the engine room harness from engine back side.
3. Disconnect fuel feed hose (with damper) and EVAP hose. Refer to , "**EXPLODED VIEW**".

CAUTION: Fit plugs onto disconnected hoses to prevent fuel leak.

4. Remove reservoir tank of power steering oil pump and piping from vehicle, and temporarily secure them on engine. Refer to "**WITHOUT 4WAS : EXPLODED VIEW**" (without 4WAS models) or "**WITH 4WAS : EXPLODED VIEW**" (with 4WAS models).

CAUTION: When temporarily securing, keep the reservoir tank upright to avoid a fluid leak.

Vehicle Inside

Follow procedure below to disconnect engine room harness connectors at passenger room side, and temporarily secure them on engine.

1. Remove passenger-side kicking plate and dash side finisher. Refer to "**EXPLODED VIEW**" and "**EXPLODED VIEW**".
2. Disconnect engine room harness connectors at unit sides TCM, ECM and other.
3. Disengage intermediate fixing point. Pull out engine room harnesses to engine room side, and temporarily secure them on engine.

CAUTION:

- When pulling out harnesses, take care not to damage harnesses and connectors.
- After temporarily securing, cover connectors with vinyl or similar material to protect against foreign material adhesion.

Vehicle Underbody

1. Remove A/T fluid cooler hoses (A/T models) and power steering oil pump oil cooler hoses.
 - Install plug to avoid leakage of A/T fluid and power steering fluid.
2. Disconnect heated oxygen sensor 2 harness.
3. Remove three way catalyst and exhaust front tube. Refer to "**EXPLODED VIEW**".
4. Disconnect steering lower joint at power steering gear assembly side, and release steering lower shaft. Refer to "**2WD : EXPLODED VIEW**".

5. Remove rear propeller shaft. Refer to "**EXPLODED VIEW**" (M/T models) or "**EXPLODED VIEW**" (A/T models).
6. Disengage shift lever and remove clutch tube (M/T models). Refer to "**REMOVAL AND INSTALLATION**".
7. Disengage A/T control rod at control device assembly side. Then, temporarily secure it on the transmission assembly, so that it does not sag (A/T models). Refer to "**2WD : EXPLODED VIEW**".
8. Remove rear plate cover from oil pan (upper). Then remove bolts fixing drive plate to torque converter (A/ T models). Refer to , "**2WD : Disassembly and Assembly**".
9. Remove transmission joint bolts which pierce at oil pan (upper) lower rear side. Refer to , "**EXPLODED VIEW (2WD)**".
10. Remove front stabilizer connecting rod from transverse link. Refer to "**EXPLODED VIEW**".
11. Remove lower ends of left and right steering knuckle from transverse link. Refer to "**EXPLODED VIEW**".
12. Separate steering outer sockets from steering knuckle. Refer to "**2WD : EXPLODED VIEW**".
13. Remove transverse links mounting bolts at suspension member side. Refer to "**EXPLODED VIEW**".

Removal Work

1. Use a manual lift table caddy (commercial service tool) or equivalently rigid tool such as a transmission jack. Securely support bottom of suspension member and the transmission assembly.

CAUTION: Put a piece of wood or something similar as the supporting surface, secure a completely stable condition.

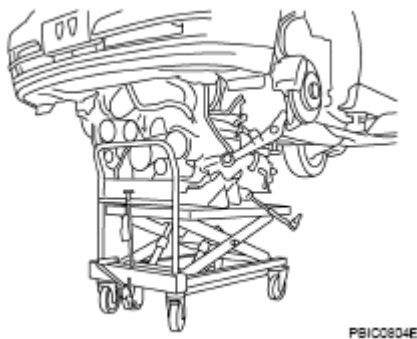


Fig. 153: Supporting Bottom Of Suspension Member And Transmission Assembly
Courtesy of NISSAN MOTOR CO., U.S.A.

2. Remove rear engine mounting member bolts.
3. Remove front suspension member mounting bolts and nuts. Refer to "**EXPLODED VIEW**".
4. Carefully lower jack, or raise lift to remove the engine, the transmission assembly and front suspension member. When performing work, observe the following caution:

CAUTION: • Confirm there is no interference with the vehicle.

- Make sure that all connection points have been disconnected.
- Keep in mind the center of vehicle gravity changes. If necessary, use jack(s) to support the vehicle at rear jacking point(s) to prevent it from falling off the lift.

Separation Work

1. Install engine slingers into front of cylinder head (right bank) and rear of cylinder head (left bank).

Slinger bolts:(Torque spec): 28.0 N.m (2.9 kg-m, 21 ft-lb)

1. Engine front slinger
2. Engine rear upper slinger
3. Spacer
4. Engine rear lower slinger

A :Right bank

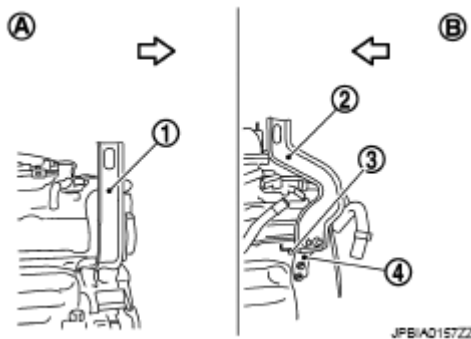


Fig. 154: Identifying Engine Front Slinger, Spacer And Engine Rear Lower Slinger
 Courtesy of NISSAN MOTOR CO., U.S.A.

B :Left bank

<=: Engine front

- To protect rocker cover against damage caused by tilting of engine slinger, insert spacer between cylinder head and engine rear lower slinger (3), in direction shown in the figure.

1 :Engine rear upper slinger

<=: Engine front

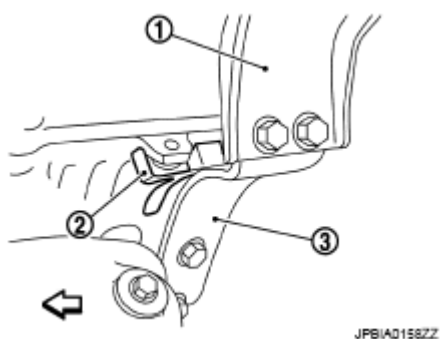


Fig. 155: Identifying Engine Rear Lower Slinger
 Courtesy of NISSAN MOTOR CO., U.S.A.

NOTE: **Spacer (2) is a component part of engine rear upper slinger assembly.**

2. Remove power steering oil pump from engine side. Refer to "**WITHOUT 4WAS : EXPLODED VIEW**" (without 4WAS models) or "**WITH 4WAS : EXPLODED VIEW**" (with 4WAS models).
3. Remove engine mounting insulators (RH and LH) under side nuts with power tool.
4. Lift with hoist and separate the engine and the transmission assembly from front suspension member.

CAUTION:

- **Before and during this lifting, always make sure that any harnesses are left connected.**
- **Avoid damage to and oil/grease smearing or spills onto engine mounting insulator.**

5. Remove alternator. Refer to "**2WD : EXPLODED VIEW**" (2WD models) or "**AWD : EXPLODED VIEW**" (AWD models).
6. Remove starter motor. Refer to "**EXPLODED VIEW**".
7. Separate the engine from the transmission assembly. Refer to "**EXPLODED VIEW**" (M/T models) or "**2WD : EXPLODED VIEW**" (A/T models).
8. Remove each engine mounting insulator and each engine mounting bracket from the engine with power tool.

INSTALLATION

Note the following, and install in the reverse order of removal.

- Do not allow engine mounting insulator to be damage and careful no oil gets on it.
- For a location with a positioning pin, insert it securely into hole of mating part.
- For a part with a specified installation orientation, refer to component figure in , "**2WD : EXPLODED VIEW**".
- When installing engine mounting bracket (RH and LH) on cylinder block, tighten two upper bolts [shown as (B) in the figure] first.

Then tighten two lower bolts [shown as (C) in the figure].

- Make sure all engine mounting insulators are seated properly, then tighten mounting nuts.

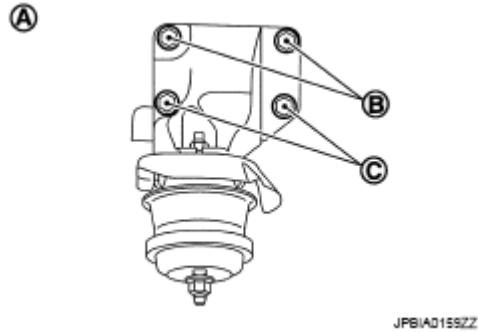


Fig. 156: Identifying Engine Mounting Bracket Bolts
Courtesy of NISSAN MOTOR CO., U.S.A.

A : Example Left

- Tighten rear engine mounting member bolts in numerical order as shown in the figure.

<=: Vehicle front

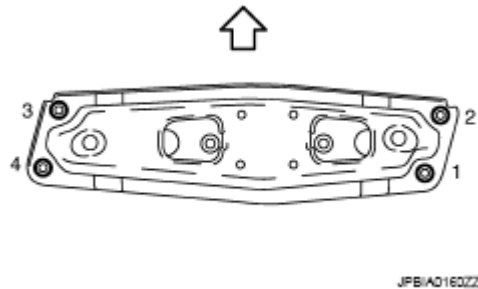


Fig. 157: Tightening Rear Engine Mounting Member Bolts In Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

2WD : Inspection

INSPECTION AFTER INSTALLATION

Inspection for Leaks

The following are procedures for checking fluids leak, lubricates leak and exhaust gases leak.

- Before starting engine, check oil/fluid levels including engine coolant and engine oil. If less than required quantity, fill to the specified level. Refer to "**RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS**".
- Use procedure below to check for fuel leakage.

2008 Infiniti G35

2008 ENGINE Engine Mechanical - G35 (Sedan)

- Turn ignition switch "ON" (with engine stopped). With fuel pressure applied to fuel piping, check for fuel leakage at connection points.
- Start engine. With engine speed increased, check again for fuel leakage at connection points.
- Run engine to check for unusual noise and vibration.
- Warm up engine thoroughly to make sure there is no leakage of fuel, exhaust gases, or any oil/fluids including engine oil and engine coolant.
- Bleed air from lines and hoses of applicable lines, such as in cooling system.
- After cooling down engine, again check oil/fluid levels including engine oil and engine coolant. Refill to the specified level, if necessary.

Summary of the inspection items:


SUMMARY OF THE INSPECTION ITEMS

Items	Before starting engine	Engine running	After engine stopped
Engine coolant	Level	Leakage	Level
Engine oil	Level	Leakage	Level
Other oils and fluid ⁽¹⁾	Level	Leakage	Level
Fuel	Leakage	Leakage	Leakage
Exhaust gases	-	Leakage	-
(1) Transmission/transaxle/CVT fluid, power steering fluid, brake fluid, etc.			

AWD

AWD : Exploded View

Symbol	Description
	N·m (kg-m, ft-lb)
	N·m (kg-m, in-lb)
	Always replace after disassembly.

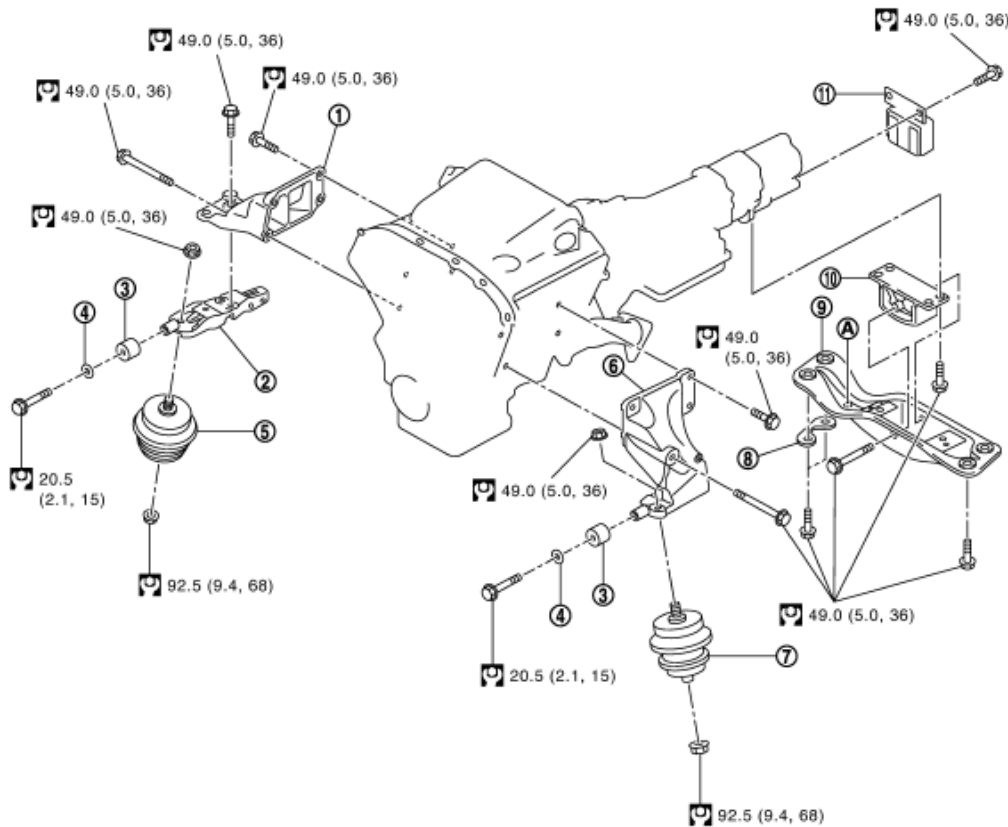

JPSIAQ100GB

- | | | |
|--------------------------------------|---|---------------------------------|
| 1. Engine mounting bracket (RH) | 2. Engine mounting bracket (RH) (lower) | 3. Dynamic damper |
| 4. Washer | 5. Engine mounting insulator (RH) | 6. Engine mounting bracket (LH) |
| 7. Engine mounting insulator (LH) | 8. Heat insulator | 9. Rear engine mounting member |
| 10. Engine mounting insulator (rear) | 11. Dynamic damper | |
| A. Front mark | | |

Fig. 158: Exploded View Of Engine Assembly - AWD With Torque Specifications
 Courtesy of NISSAN MOTOR CO., U.S.A.

AWD : Removal and Installation

WARNING:

- Situate the vehicle on a flat and solid surface.
- Place chocks at front and back of rear wheels.
- For engines not equipped with engine slingers, attach proper slingers and bolts described in PARTS CATALOG.

CAUTION:

- Always be careful to work safely, avoid forceful or uninstructed operations.
- Do not start working until exhaust system and engine coolant are cool enough.
- If items or work required are not covered by this article, refer to the applicable information.
- Always use the support point specified for lifting.
- Use either 2-pole lift type or separate type lift as best you can. If board-on type is used for unavoidable reasons, support at rear axle jacking point with transmission jack or similar tool before starting work, in preparation for the backward shift of center of gravity.
- For supporting points for lifting and jacking point at rear axle, refer to "GARAGE JACK AND SAFETY STAND AND 2-POLE LIFT".

REMOVAL

Outline

At first, remove the engine, the transmission assembly, the transfer assembly and the front final drive assembly with front suspension member downward. Then separate the engine, the transmission assembly, the transfer and the front final drive assembly.

Preparation

1. Release fuel pressure. Refer to "INSPECTION".
2. Drain engine coolant from radiator. Refer to "DRAINING".

CAUTION:

- Perform this step when engine is cold.
- Do not spill engine coolant on drive belts.

3. Disconnect both battery terminals. Refer to "EXPLODED VIEW".
4. Remove the following parts:
 - Radiator reservoir tank: Refer to "EXPLODED VIEW".
 - Engine cover: Refer to , "EXPLODED VIEW".
 - Front road wheel and tires (power tool)
 - Engine undercover (power tool)
 - Front cross bar: Refer to "RADIATOR CORE SUPPORT".
 - Cowl top cover: Refer to "EXPLODED VIEW".
 - Air duct and air cleaner case assembly (RH and LH): Refer to , "EXPLODED VIEW".
 - Cooling fan assembly: Refer to "EXPLODED VIEW".
5. Discharge refrigerant from A/C circuit. Refer to "EXPLODED VIEW".
6. Remove radiator hoses (upper and lower). Refer to "EXPLODED VIEW".

Engine Room LH

1. Disconnect heater hose from vehicle-side, and fit a plug onto hose end to prevent engine coolant leak.
2. Disconnect A/C piping from A/C compressor, and temporarily fasten it on vehicle with a rope. Refer to "**EXPLODED VIEW**".
3. Disconnect brake booster vacuum hose.
4. Disconnect ground cables.

Engine Room RH

1. Disconnect battery positive cable vehicle side and temporarily fasten it on engine.
2. Disconnect all clips and connectors of the engine room harness from engine back side.
3. Disconnect fuel feed hose (with damper) and EVAP hose. Refer to , "**EXPLODED VIEW**".

CAUTION: Fit plugs onto disconnected hoses to prevent fuel leak.

4. Remove reservoir tank of power steering oil pump and piping from vehicle, and temporarily secure them on engine. Refer to "**WITHOUT 4WAS : EXPLODED VIEW**" (without 4WAS models) or "**WITH 4WAS : EXPLODED VIEW**" (with 4WAS models).

CAUTION: When temporarily securing, keep the reservoir tank upright to avoid a fluid leak.

Vehicle Inside

Follow procedure below to disconnect engine room harness connectors at passenger room side, and temporarily secure them on engine.

1. Remove passenger-side kicking plate and dash side finisher. Refer to "**EXPLODED VIEW**" and "**EXPLODED VIEW**".
2. Disconnect engine room harness connectors at unit sides TCM, ECM and other.
3. Disengage intermediate fixing point. Pull out engine room harnesses to engine room side, and temporarily secure them on engine.

CAUTION:

- When pulling out harnesses, take care not to damage harnesses and connectors.
- After temporarily securing, cover connectors with vinyl or similar material to protect against foreign material adhesion.

Vehicle Underbody

1. Remove A/T fluid cooler hoses and power steering oil pump oil cooler hoses.

- Install plug to avoid leakage of A/T fluid and power steering fluid.
2. Disconnect heated oxygen sensor 2 harness. Refer to "**EXPLODED VIEW**".
 3. Remove three way catalyst and exhaust front tube. Refer to "**EXPLODED VIEW**".
 4. Disconnect steering lower joint at power steering gear assembly side, and release steering lower shaft. Refer to "**AWD : EXPLODED VIEW**".
 5. Remove rear propeller shaft. Refer to "**EXPLODED VIEW**".
 6. Remove front drive shaft (both side). Refer to "**EXPLODED VIEW**".
 7. Disconnect harness connector from transmission assembly and transfer assembly.
 8. Disengage A/T control rod at control device assembly side. Then, temporarily secure it on the transmission assembly, so that it does not sag. Refer to "**AWD : EXPLODED VIEW**".
 9. Remove rear plate cover from oil pan (upper). Then remove bolts fixing drive plate to torque converter. Refer to , "**AWD : EXPLODED VIEW**".
 10. Remove bolts fixing the transmission assembly to lower rear side of oil pan (upper). Refer to , "**AWD : EXPLODED VIEW**".
 11. Remove front stabilizer connecting rod from transverse link. Refer to "**EXPLODED VIEW**".
 12. Remove lower ends of left and right steering knuckle from transverse link. Refer to "**EXPLODED VIEW**".
 13. Separate steering outer sockets from steering knuckle. Refer to "**AWD : EXPLODED VIEW**".
 14. Remove transverse links mounting bolts at suspension member side. Refer to "**EXPLODED VIEW**".

Removal Work

1. Use a manual lift table caddy (commercial service tool) or equivalently rigid tool such as a transmission jack. Securely support bottom of suspension member and transmission.

CAUTION: Put a piece of wood or something similar as the supporting surface, secure a completely stable condition.

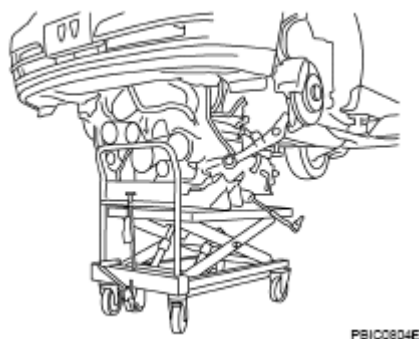


Fig. 159: Supporting Bottom Of Suspension Member And Transmission Assembly
Courtesy of NISSAN MOTOR CO., U.S.A.

2. Remove rear engine mounting member bolts.

3. Remove front suspension member mounting bolts and nuts. Refer to "**EXPLODED VIEW**".
4. Carefully lower jack, or raise lift to remove the engine, transmission assembly, transfer, front final drive assembly and front suspension member. When performing work, observe the following caution:

CAUTION:

- Confirm there is no interference with the vehicle.
- Make sure that all connection points have been disconnected.
- Keep in mind the center of the vehicle gravity changes. If necessary, use jack(s) to support the vehicle at rear jacking point(s) to prevent it from falling off the lift.

Separation Work

1. Install engine slingers into front of cylinder head (right bank) and rear of cylinder head (left bank).

Slinger bolts: (Torque spec): 28.0 N.m (2.9 kg-m, 21 ft-lb)

1. Engine front slinger
2. Engine rear upper slinger
3. Spacer
4. Engine rear lower slinger
 - A. Right bank
 - B. Left bank

<=: Engine front

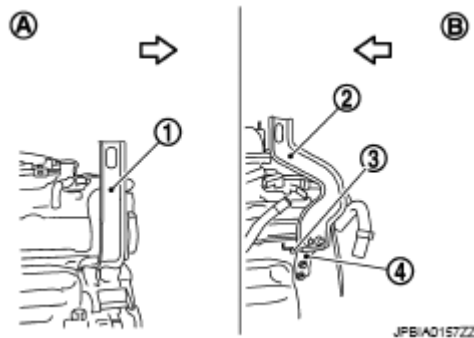


Fig. 160: Identifying Engine Front Slinger, Spacer And Engine Rear Lower Slinger
 Courtesy of NISSAN MOTOR CO., U.S.A.

- To protect rocker cover against damage caused by tilting of engine slinger, insert spacer between cylinder head and engine rear lower slinger (3), in direction shown in the figure.

NOTE:

Spacer (2) is a component part of engine rear upper slinger assembly.

1 : Engine rear upper slinger

<=: Engine front

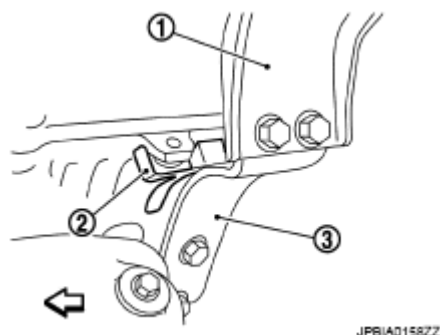


Fig. 161: Identifying Engine Rear Lower Slinger
Courtesy of NISSAN MOTOR CO., U.S.A.

2. Remove power steering oil pump from engine side. Refer to "**WITHOUT 4WAS : EXPLODED VIEW**" (without 4WAS) or "**WITH 4WAS : EXPLODED VIEW**" (with 4WAS).
3. Remove engine mounting insulators (RH and LH) under side nuts with power tool.
4. Lift with hoist and separate the engine, the transmission assembly, the transfer assembly and the front final drive assembly from front suspension member.

CAUTION:

- Before and during this lifting, always check if any harnesses are left connected.
- Avoid damage to and oil/grease smearing or spills onto engine mounting insulator.

5. Remove alternator. Refer to "**AWD : EXPLODED VIEW**".
6. Remove starter motor. Refer to "**EXPLODED VIEW**".
7. Remove front propeller shaft from the front final drive assembly side. Refer to "**EXPLODED VIEW**".
8. Separate the engine from the transmission assembly. Refer to "**AWD : EXPLODED VIEW**".
9. Remove the front final drive assembly from oil pan (upper). Refer to "**EXPLODED VIEW**".
10. Remove each engine mounting insulator and each engine mounting bracket from the engine with power tool.

INSTALLATION

Note the following, and install in the reverse order of removal.

- Do not allow engine mounting insulator to be damage and careful no engine oil gets on it.
- For a location with a positioning pin, insert it securely into hole of mating part.
- For a part with a specified installation orientation, refer to component figure in , "**AWD : EXPLODED VIEW**".

- When installing engine mounting bracket (RH and LH) on cylinder block, tighten two upper bolts [shown as (B) in the figure] first.

Then tighten two lower bolts [shown as (C) in the figure].

3 : Engine mounting bracket (LH)

A : Right side

G : Left side

- Install engine mounting bracket (RH) (lower) (2) as follows:
 - Temporarily tighten mounting bolts [shown as (D), (E) and (F) in the figure].
 - Tighten mounting bolts to the specified torque with following mounting surfaces touched.
- Engine mounting bracket (RH) (1) to engine mounting bracket (RH) (lower) [shown as and in figure].
- Front final drive to engine mounting bracket (RH) (lower) [shown as in figure].
- Make sure all engine mounting insulators are seated properly, then tighten mounting nuts.


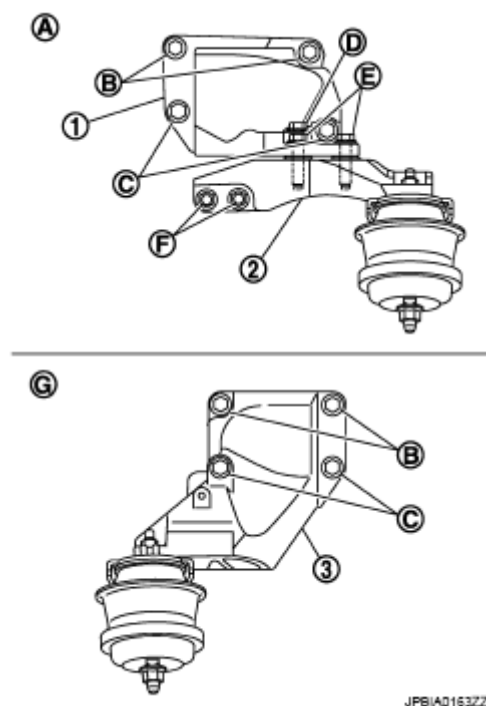


Fig. 162: Identifying Engine Mounting Bracket Bolts
Courtesy of NISSAN MOTOR CO., U.S.A.

- Tighten rear engine mounting member bolts in numerical order as shown in the figure.

<=: Vehicle front

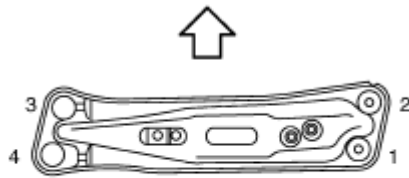

JPBIA0407ZZ

Fig. 163: Tightening Rear Engine Mounting Member Bolts In Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

AWD : Inspection

INSPECTION AFTER INSTALLATION

Inspection for Leaks

The following are procedures for checking fluids leak, lubricates leak and exhaust gases leak.

- Before starting engine, check oil/fluid levels including engine coolant and engine oil. If less than required quantity, fill to the specified level. Refer to "**FLUIDS AND LUBRICANTS**".
- Use procedure below to check for fuel leakage.
 - Turn ignition switch "ON" (with engine stopped). With fuel pressure applied to fuel piping, check for fuel leakage at connection points.
 - Start engine. With engine speed increased, check again for fuel leakage at connection points.
- Run engine to check for unusual noise and vibration.
- Warm up engine thoroughly to make sure there is no leakage of fuel, exhaust gases, or any oil/fluids including Engine oil and engine coolant.
- Bleed air from lines and hoses of applicable lines, such as in cooling system.
- After cooling down engine, again check oil/fluid levels including engine oil and engine coolant. Refill to the specified level, if necessary.

Summary of the inspection items:

SUMMARY OF THE INSPECTION ITEMS

Items	Before starting engine	Engine running	After engine stopped
Engine coolant	Level	Leakage	Level
Engine oil	Level	Leakage	Level
Other oils and fluid ⁽¹⁾	Level	Leakage	Level
Fuel	Leakage	Leakage	Leakage
Exhaust gases	-	Leakage	-

(1) Transmission/transaxle/CVT fluid, power steering fluid, brake fluid, etc.

DISASSEMBLY AND ASSEMBLY

ENGINE STAND SETTING

Setting

NOTE: Explained here is how to disassemble with engine stand supporting transmission surface. When using different type of engine stand, note with difference in steps and etc.

1. Remove the engine assembly from the vehicle. Refer to , "2WD : EXPLODED VIEW" or , "AWD : EXPLODED VIEW".
2. Remove the parts that may restrict installation of engine to widely use engine stand.

NOTE: The procedure is described assuming that you use a widely use engine stand holding the surface, to which transmission is installed.

- Remove clutch cover and clutch disc (M/T models). Refer to "EXPLODED VIEW".
- Remove drive plate (A/T models) or flywheel (M/T models) with power tool. Fix crankshaft with a ring gear stopper [SST: KV10118600 (J-48641)], and remove mounting bolts.
- Loosen mounting bolts in diagonal order.
- Check for deformation or damage drive plate (A/T models) or flywheel (M/T models).

CAUTION:

- Do not disassemble drive plate (A/T models) or flywheel (M/T models).
- Never place drive plate (A/T models) or flywheel (M/T models) with signal plate facing down.
- When handling signal plate, take care not to damage or scratch it.
- Handle signal plate in a manner that prevents it from becoming magnetized.

3. Remove pilot converter (A/T models) using the pilot bushing puller [SST: ST1661001 (J-23907)] (A) as necessary.

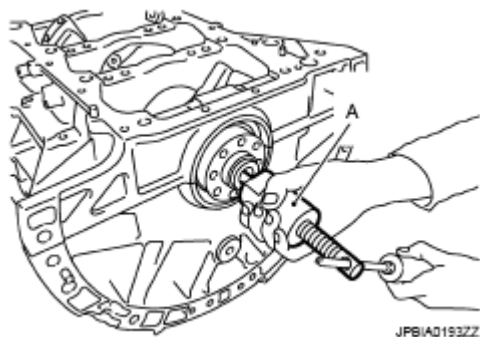


Fig. 164: Removing Pilot Converter Using Pilot Bushing Puller
Courtesy of NISSAN MOTOR CO., U.S.A.

4. Lift the engine with hoist to install it onto the widely use engine stand.

CAUTION: Use an engine stand that has a load capacity [220 kg (441 lb) or more] large enough for supporting the engine weight.

- If the load capacity of the stand is not adequate, remove the following parts beforehand to reduce the potential risk of overturning the stand.
 - Remove intake manifold collector. Refer to , "EXPLODED VIEW".
 - Remove intake manifold. Refer to , "EXPLODED VIEW".
 - Remove fuel injector and fuel tube assembly. Refer to , "EXPLODED VIEW".
 - Remove ignition coil. Refer to , "EXPLODED VIEW".
 - Remove rocker cover. Refer to , "EXPLODED VIEW".
 - Remove exhaust manifold. Refer to , "EXPLODED VIEW".
 - Other removable brackets.

NOTE: The figure shows an example of widely use engine stand (A) that can hold mating surface of transmission with drive plate (A/T models) or flywheel (M/T models) removed.

CAUTION: Before removing the hanging chains, make sure the engine stand is stable and there is no risk of overturning.



JPB/AQ150ZZ

Fig. 165: Holding Mating Surface Of Transmission With Drive Plate
Courtesy of NISSAN MOTOR CO., U.S.A.

5. Drain engine oil. Refer to "INSPECTION".
6. Drain engine coolant by removing water drain plugs (1) and (4) from cylinder block both sides as shown in the figure.

2 : Washer

3 : Plug

<=: Engine front

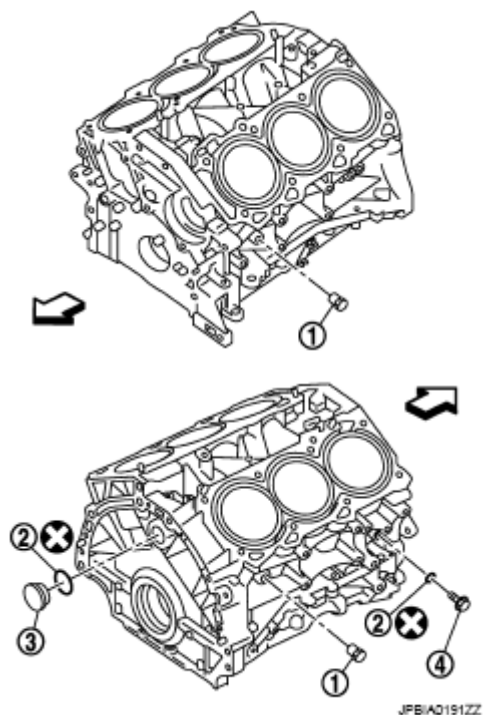


Fig. 166: Identifying Water Drain Plugs
Courtesy of NISSAN MOTOR CO., U.S.A.

ENGINE UNIT**Disassembly**

1. Remove intake manifold collector. Refer to , "**EXPLODED VIEW**".
2. Remove intake manifold. Refer to , "**EXPLODED VIEW**".
3. Remove exhaust manifold. Refer to , "**EXPLODED VIEW**".
4. Remove oil pan (lower). Refer to , "**EXPLODED VIEW (2WD)**" or , "**EXPLODED VIEW (AWD)**".
5. Remove ignition coil, spark plug and rocker cover. Refer to , "**EXPLODED VIEW**".
6. Remove fuel injector and fuel tube. Refer to , "**EXPLODED VIEW**".
7. Remove timing chain. Refer to , "**EXPLODED VIEW**".
8. Remove rear timing chain case. Refer to , "**EXPLODED VIEW**".
9. Remove camshaft. Refer to , "**EXPLODED VIEW**".
10. Remove cylinder head. Refer to , "**EXPLODED VIEW**".

Assembly


Assembly in the reverse order of disassembly.

REAR TIMING CHAIN CASE**Exploded View**

A. See **TIMING CHAIN**.

B. See **Assembly**.

Symbol	Description
	N·m (kg-m, ft-lb)
	N·m (kg-m, in-lb)
	Always replace after disassembly.

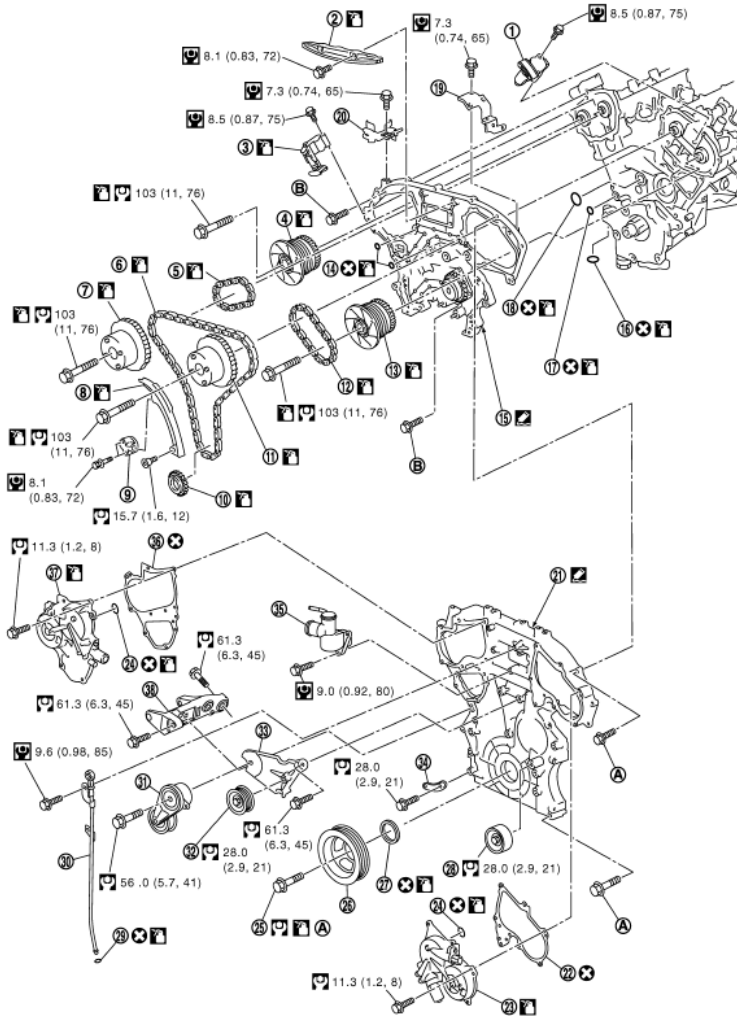

JPB/A05508

- | | | |
|---|-------------------------------------|--|
| 1. Timing chain tensioner (secondary) (left bank) | 2. Internal chain guide | 3. Timing chain tensioner (secondary) (right bank) |
| 4. Camshaft sprocket (EXH) | 5. Timing chain (secondary) | 6. Timing chain (primary) |
| 7. Camshaft sprocket (INT) | 8. Slack guide | 9. Timing chain tensioner (primary) |
| 10. Crankshaft sprocket | 11. Camshaft sprocket (INT) | 12. Timing chain (secondary) |
| 13. Camshaft sprocket (EXH) | 14. O-ring | 15. Rear timing chain case |
| 16. O-ring | 17. O-ring | 18. O-ring |
| 19. Bracket | 20. Bracket | 21. Front timing chain case |
| 22. Valve timing control cover gasket (LH) | 23. Valve timing control cover (LH) | 24. O-ring |
| 25. Crankshaft pulley bolt | 26. Crankshaft pulley | 27. Front oil seal |
| 28. Idler pulley | 29. O-ring | 30. Oil level gauge guide |
| 31. Drive belt auto-tensioner | 32. Idler pulley | 33. Idler pulley bracket |
| 34. Alternator bracket | 35. Water outlet (front) | 36. Valve timing control cover gasket (RH) |
| 37. Valve timing control cover (RH) | 38. Power steering oil pump bracket | |
- A. & B. See appropriate information

Fig. 167: Exploded View Of Rear Timing Chain Case With Torque Specifications
 Courtesy of NISSAN MOTOR CO., U.S.A.

Disassembly

1. Remove front timing chain case and timing chain. Refer to , "**EXPLODED VIEW**".
2. Remove water pump. Refer to "**EXPLODED VIEW**".
3. Remove oil pan (upper). Refer to , "**2WD : EXPLODED VIEW**" (2WD models) or , "**AWD : EXPLODED VIEW**" (AWD models).
4. Remove rear timing chain case as follows:
 - a. Loosen and remove mounting bolts in reverse order as shown in the figure.
 - b. Cut liquid gasket using the seal cutter [SST: KV10111100 (J37228)] and remove rear timing chain case.

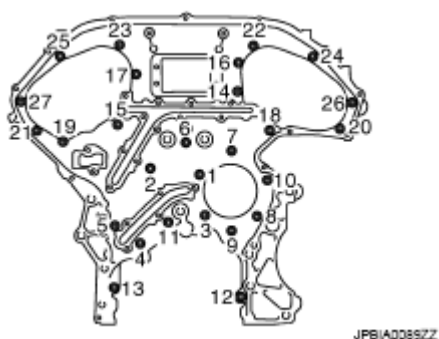


Fig. 168: Loosen Mounting Bolts In Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION:

- Do not remove plate metal cover (1) of oil passage.
- After removal, handle rear timing chain case carefully so it does not tilt, cant, or warp under a load.

5. Remove O-rings (1) from cylinder block.

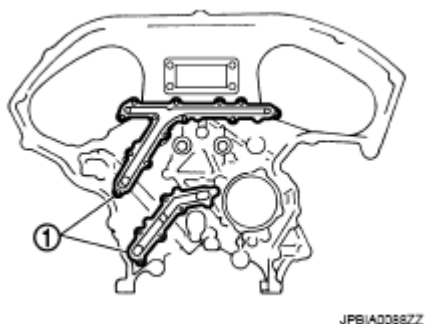


Fig. 169: Identifying Plate Metal Cover
Courtesy of NISSAN MOTOR CO., U.S.A.

<=: Engine front

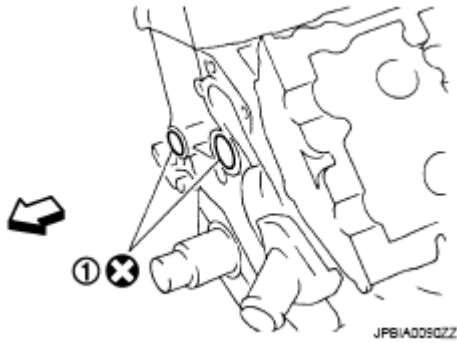


Fig. 170: Identifying O-Rings

Courtesy of NISSAN MOTOR CO., U.S.A.

6. Remove timing chain tensioners (secondary) from cylinder head as follows, if necessary.
 - a. Remove camshaft brackets (No. 1). Refer to , "**EXPLODED VIEW**".
 - b. Remove timing chain tensioners (secondary) with a stopper pin (A) attached.

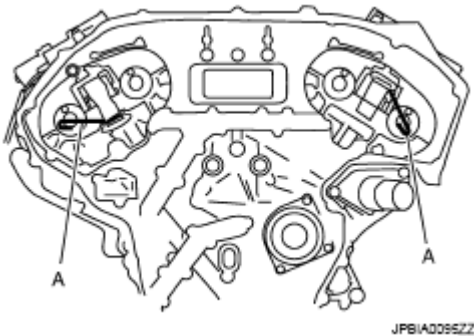


Fig. 171: Identifying Stopper Pin

Courtesy of NISSAN MOTOR CO., U.S.A.

Assembly

1. Install timing chain tensioners (secondary) to cylinder head as follows if removed. Refer to , "**EXPLODED VIEW**".
 - a. Install timing chain tensioners (secondary) with a stopper pin attached and new O-rings.
 - b. Install camshaft brackets (No. 1). Refer to , "**EXPLODED VIEW**".
 - c. Measure difference in levels between front end faces of camshaft bracket (No.1) and cylinder head.

Standard : -0.14 to 0.14 mm (-0.0055 to 0.0055 in)

- Measure two positions (both intake and exhaust side) for a single bank.
- If the measured value is out of the standard, re-install camshaft bracket (No.1).

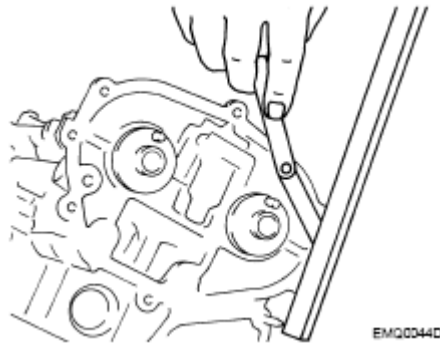


Fig. 172: Measuring Difference In Levels Between Front End Faces Of Camshaft Bracket And Cylinder Head
 Courtesy of NISSAN MOTOR CO., U.S.A.

2. Install rear timing chain case as follows:
 - a. Install new O-rings (1) onto cylinder block.

<=: Engine front

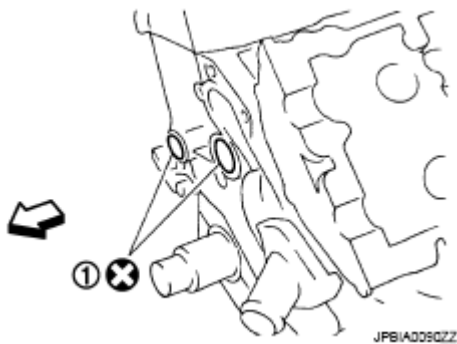



Fig. 173: Identifying O-Rings
 Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Apply liquid gasket with the tube presser [SST: WS39930000 (-)] to rear timing chain case back side as shown in the figure.

Use Genuine RTV Silicone Sealant or equivalent. Refer to "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS".

CAUTION:

- For (A) in the figure, completely wipe out liquid gasket exterior portion touching at engine coolant.
- Apply liquid gasket on installation position of water pump a head very completely.

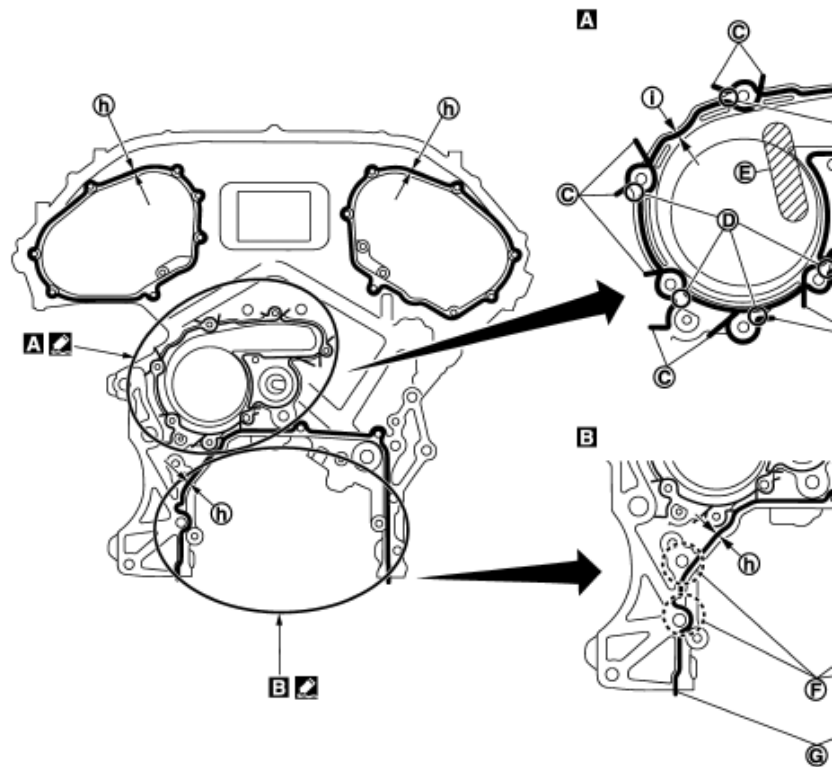

- | | | |
|-----------------------------------|---|-----------|
| C. Protrusion | D. Clearance 1 mm (0.04 in) | E. Do not |
| F. Run along bolt hole inner side | G. Protrusions at beginning and end of gasket | |
| h. 3.9 mm (0.154 in) dia | i. 2.7 mm (0.106 in) dia | |

Fig. 174: Applying Liquid Gasket On Water Pump And Cylinder Head
Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to "**COMPONENTS**" for symbol marks in the figure.

- c. Align rear timing chain case with dowel pins (right bank and left bank) on cylinder block and install rear timing chain case.
 - Make sure O-rings stay in place during installation to cylinder block and cylinder head.
- d. Tighten mounting bolts in numerical order as shown in the figure.
 - There are two types of mounting bolts. Refer to the following for locating bolts.

Bolt length: Bolt position

20 mm (0.79 in) : 1, 2, 3, 6, 7, 8, 9, 10

16 mm (0.63 in) : Except the above

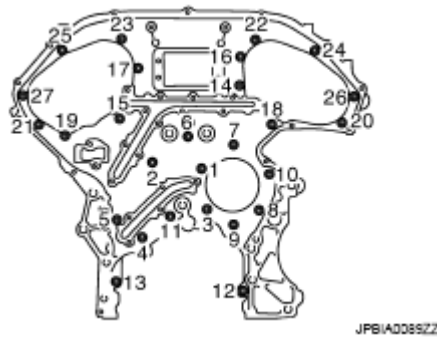


Fig. 175: Tightening Mounting Bolts In Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

Tightening torque : Refer to , "EXPLODED VIEW".

- e. After all bolts are tightened, retighten them to the specified torque in numerical order shown in the figure.
 - If liquid gasket protrudes, wipe it off immediately.
- f. After installing rear timing chain case, check the surface height difference between the following parts on the oil pan (upper) mounting surface.
 1. Front timing chain case
 2. Rear timing chain case
 3. Lower cylinder block

Standard

Rear timing chain case to lower cylinder block: -0.24 to 0.14 mm (-0.0094 to 0.0055 in)

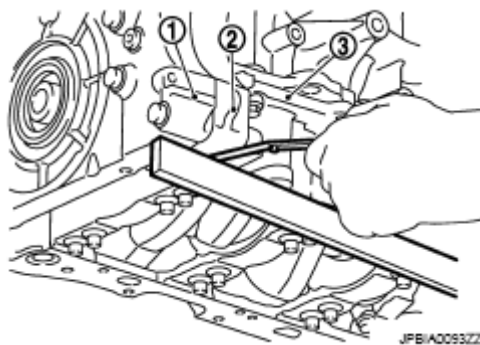


Fig. 176: Measuring Surface Height Difference Between Oil Pan (Upper) Mounting Surface
Courtesy of NISSAN MOTOR CO., U.S.A.

- If not within the standard, repeat the installation procedure.
3. Install water pump with new O-rings. Refer to "EXPLODED VIEW".
 4. Make sure that dowel pin (A) and crankshaft key (1) are located as shown in the figure. (No. 1 cylinder at

compression TDC)

NOTE: Though camshaft does not stop at the position as shown in the figure, for the placement of cam nose, it is generally accepted camshaft is placed for the same direction of the figure.

Camshaft dowel pin : At cylinder head upper face side in each bank.

Crankshaft key : At cylinder head side of right bank.

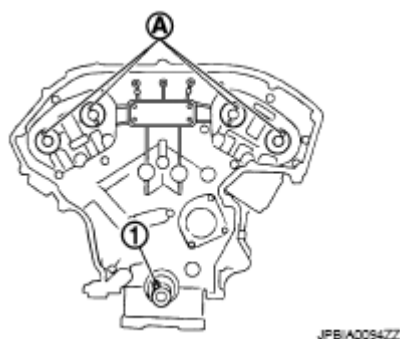


Fig. 177: Identifying Dowel Pin And Crankshaft Key
Courtesy of NISSAN MOTOR CO., U.S.A.

5. Install timing chains (secondary) and camshaft sprockets as follows:

CAUTION: Mating marks between timing chain and sprockets slip easily.
Confirm all mating mark positions repeatedly during the installation process.

- a. Push plunger of timing chain tensioner (secondary) and keep it pressed in with a stopper pin (A).

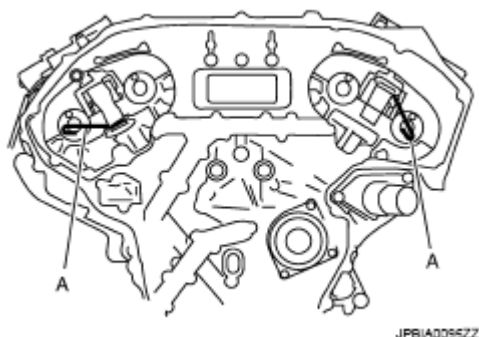


Fig. 178: Identifying Stopper Pin
Courtesy of NISSAN MOTOR CO., U.S.A.

6. For the following operations, perform steps in the reverse order of removal.


OIL PAN (UPPER) AND OIL STRAINER

2WD

2WD : Exploded View

A. See **OIL FILTER**.

Symbol	Description
	N·m (kg-m, ft-lb)
	N·m (kg-m, in-lb)
	Always replace after disassembly.

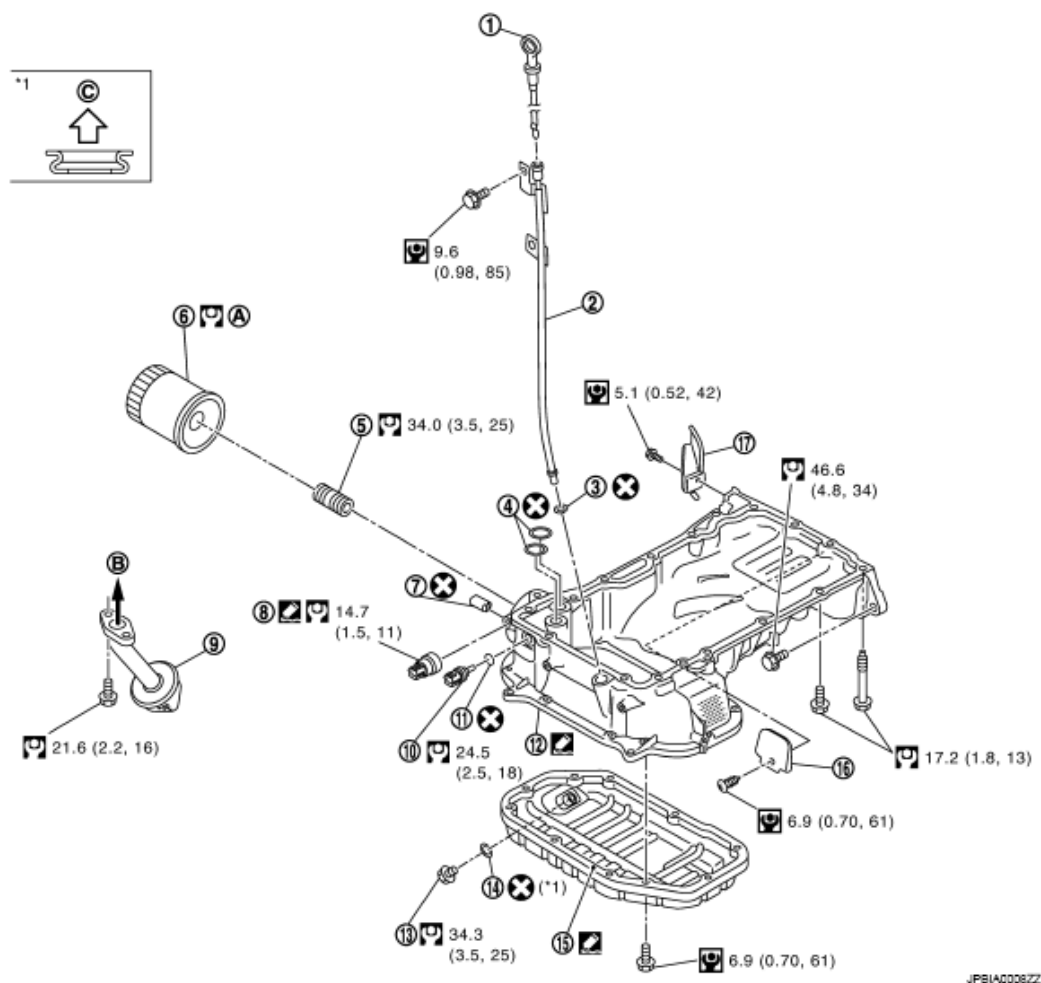

JPSIA0008ZZ

- | | | |
|--------------------------------|-----------------------------------|---------------------|
| 1. Oil level gauge | 2. Oil level gauge guide | 3. O-ring |
| 4. O-ring | 5. Connector bolt | 6. Oil filter |
| 7. Plug | 8. Oil pressure switch | 9. Oil strainer |
| 10. Oil temperature sensor | 11. Washer | 12. Oil pan (upper) |
| 13. Drain plug | 14. Drain plug washer | 15. Oil pan (lower) |
| 16. Rear plate cover | 17. Rear cover plate (M/T models) | |
| A. See appropriate information | B. To oil pump | C. Oil pan side |

Fig. 179: Exploded View Of Oil Pan (Upper) And Oil Strainer - 2WD With Torque Specifications
 Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to "**COMPONENTS**" for symbol marks in the figure.

2WD : Disassembly and Assembly

REMOVAL

CAUTION: To avoid the danger of being scalded, never drain engine oil when the engine is hot.

1. Remove oil level gauge, oil pressure switch and oil temperature sensor.
2. Remove oil pan (lower). Refer to , "**EXPLODED VIEW (2WD)**".
3. Remove oil strainer.
4. Loosen mounting bolts in the reverse order as shown in the figure with power tool to remove.

<=: Engine front

- Insert the seal cutter [SST: KV10111100 (J37228)] between oil pan (upper) and lower cylinder block. Slide seal cutter by tapping on the side of tool with a hammer. Remove oil pan (upper).

CAUTION:

- Be careful not to damage the mating surfaces.
- Do not insert a screwdriver, this will damage the mating surfaces.

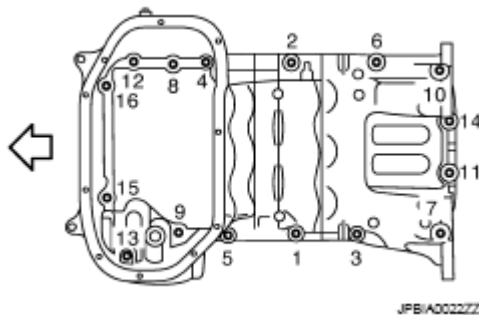


Fig. 180: Loosening Mounting Bolts In Sequence
 Courtesy of NISSAN MOTOR CO., U.S.A.

5. Remove o-rings (2) from bottom of lower cylinder block (1) and oil pump (3).

<=: Engine front

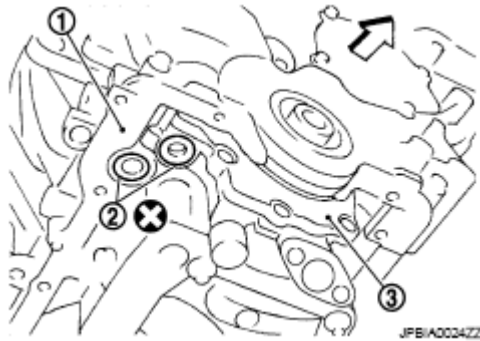


Fig. 181: Identifying O-Rings, Lower Cylinder Block And Oil Pump
Courtesy of NISSAN MOTOR CO., U.S.A.

INSTALLATION

1. Install oil pan (upper) as follows:
 - a. Use a scraper (A) to remove old liquid gasket from mating surfaces.

CAUTION: Do not scratch or damage the mating surfaces when cleaning off old liquid gasket.

- Also remove old liquid gasket from mating surface of lower cylinder block.
- Remove old liquid gasket from the bolt holes and threads.

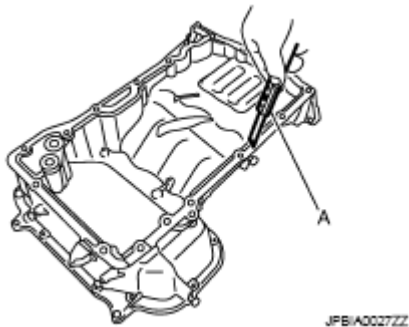


Fig. 182: Removing Old Liquid Gasket From Mating Surfaces
Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Install new O-rings (2) on the bottom of lower cylinder block (1) and oil pump (3).

<=: Engine front

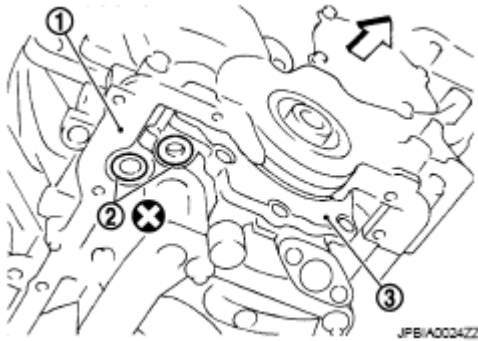


Fig. 183: Identifying O-Rings, Lower Cylinder Block And Oil Pump
Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Apply a continuous bead of liquid gasket with the tube presser [SST: WS39930000 (-)] to the cylinder block mating surface of oil pan (upper) to a limited portion as shown in the figure.

a : 4.0 - 5.0 mm (0.157 - 0.197 in)

<=: Engine front

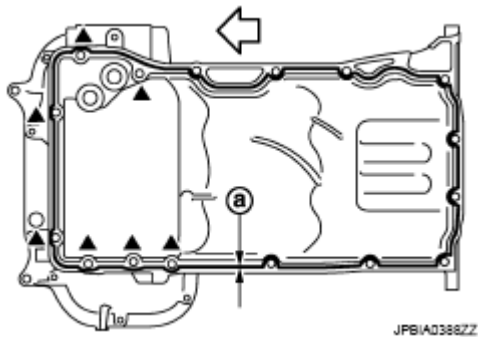


Fig. 184: Applying Continuous Bead Of Liquid Gasket To Cylinder Block Mating Surface
Courtesy of NISSAN MOTOR CO., U.S.A.

Use Genuine RTV Silicone Sealant or equivalent. Refer to "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS".

CAUTION:

- For bolt holes with marks (7 locations), apply liquid gasket outside the holes.
- Attaching should be done within 5 minutes after coating.

- d. Install oil pan (upper).

CAUTION: Install avoiding misalignment of both O-rings.

- Tighten mounting bolts in numerical order as shown in the figure.

<=: Engine front

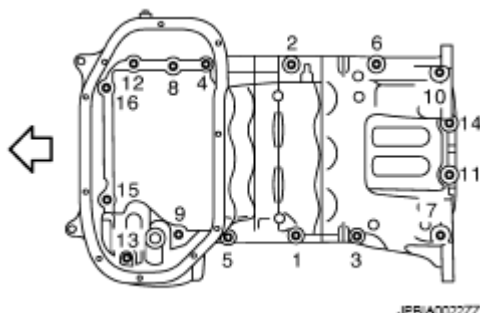


Fig. 185: Tightening Mounting Bolts In Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

- There are two types of mounting bolts. Refer to the following for locating bolts.

M8 x 90 mm (3.54 in) : 7, 10, 13

M8 x 25 mm (0.98 in) : Except the above

2. Install oil strainer to oil pump.
3. Install oil pan (lower). Refer to , "**EXPLODED VIEW (2WD)**".
4. Install oil pan drain plug.
 - Refer to the figure of components above for installation direction of drain plug washer. Refer to , "**EXPLODED VIEW (2WD)**".
5. Install in the reverse order of removal after this step.

NOTE: **At least 30 minutes after oil pan is installed, pour engine oil.**

2WD : Inspection

INSPECTION AFTER REMOVAL

Clean oil strainer if any object attached.

INSPECTION AFTER INSTALLATION


1. Check the engine oil level and adjust engine oil. Refer to "**INSPECTION**".
2. Start engine, and check there is no leak of engine oil.
3. Stop engine and wait for 10 minutes.
4. Check the engine oil level again. Refer to "**INSPECTION**".

AWD

AWD : Exploded View

A. See **OIL FILTER**.

Symbol	Description
	N·m (kg-m, ft-lb)
	N·m (kg-m, in-lb)
	Always replace after disassembly.

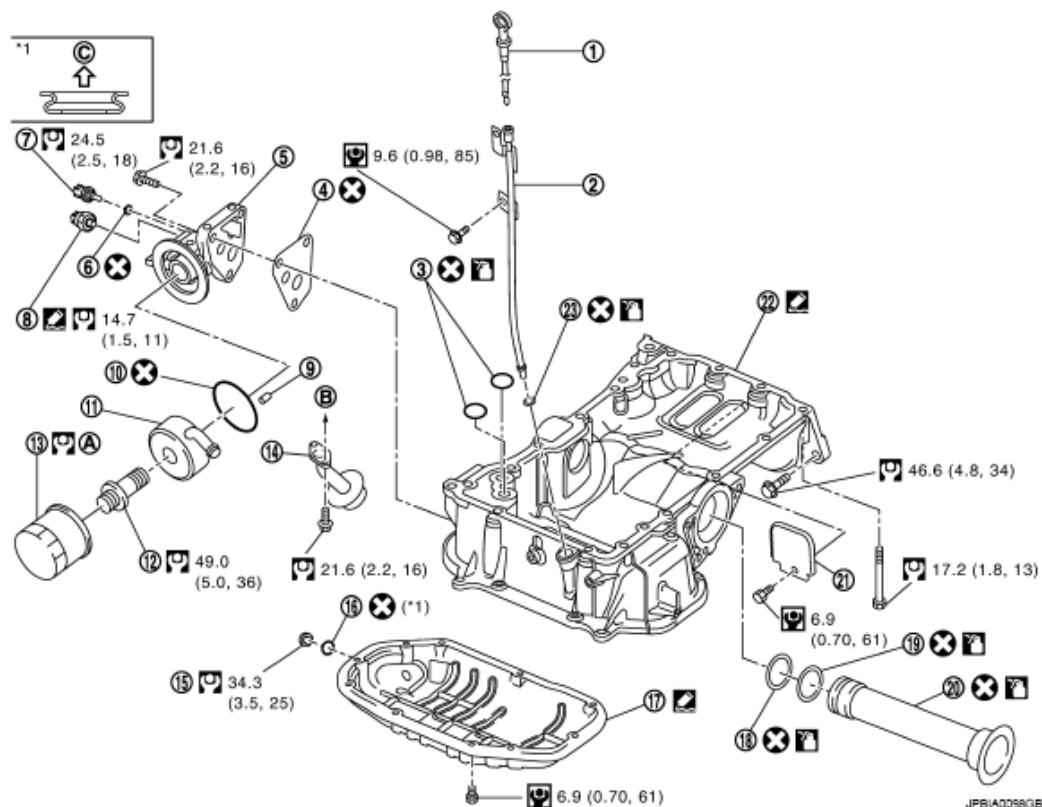

- | | | |
|---------------------------|--------------------------|----------------------|
| 1. Oil level gauge | 2. Oil level gauge guide | 3. O-ring |
| 4. Gasket | 5. Oil filter bracket | 6. Washer |
| 7. Oil temperature sensor | 8. Oil pressure switch | 9. Relief valve |
| 10. O-ring | 11. Oil cooler | 12. Connector bolt |
| 13. Oil filter | 14. Oil strainer | 15. Drain plug |
| 16. Drain plug washer | 17. Oil pan (lower) | 18. O-ring (small) |
| 19. O-ring (large) | 20. Axle pipe | 21. Rear plate cover |
| 22. Oil pan (upper) | | |
- A. See appropriate information B. To oil pump C. Oil pan side

Fig. 186: Exploded View Of Oil Pan (Upper) And Oil Strainer - AWD With Torque Specifications
Courtesy of NISSAN MOTOR CO., U.S.A.

AWD : Disassembly and Assembly

REMOVAL

CAUTION: To avoid the danger of being scalded, never drain engine oil when the engine is hot.

1. Remove oil level gauge, oil pressure switch and oil temperature sensor.
2. Disconnect oil cooler water hoses, and remove oil cooler water pipe mounting bolt. Refer to "**AWD : EXPLODED VIEW**".
3. Remove oil filter bracket. Refer to "**AWD : EXPLODED VIEW**".
4. Remove oil pan (lower). Refer to , "**EXPLODED VIEW (2WD)**" or , "**EXPLODED VIEW (AWD)**".
5. Remove oil strainer.
6. Loosen mounting bolts in the reverse order as shown in the figure with power tool to remove.

<=: Engine front

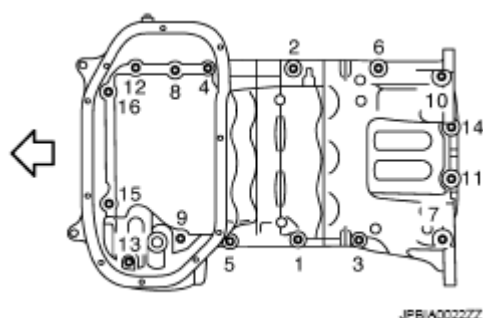


Fig. 187: Loosening Mounting Bolts In Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

- Insert the seal cutter [SST: KV10111100 (J37228)] between oil pan (upper) and lower cylinder block. Slide seal cutter by tapping on the side of tool with a hammer. Remove oil pan (upper).

CAUTION:

- Be careful not to damage the mating surfaces.
- Do not insert a screwdriver, this will damage the mating surfaces.

7. Remove O-rings (2) from bottom of lower cylinder block (1) and oil pump (3).

<=: Engine front

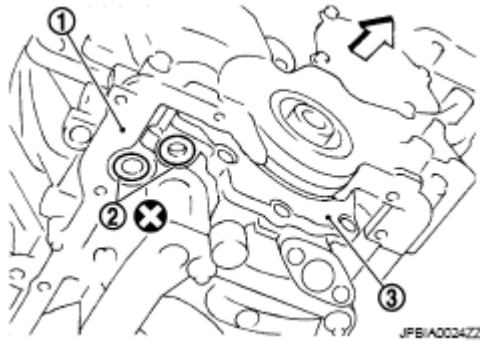


Fig. 188: Identifying O-Rings, Cylinder Block And Oil Pump
Courtesy of NISSAN MOTOR CO., U.S.A.

8. Remove axle pipe, as necessary.
 - Remove axle pipe from oil pan (upper) using a suitable drift (A) [outer diameter: 37 mm (1.46 in)].

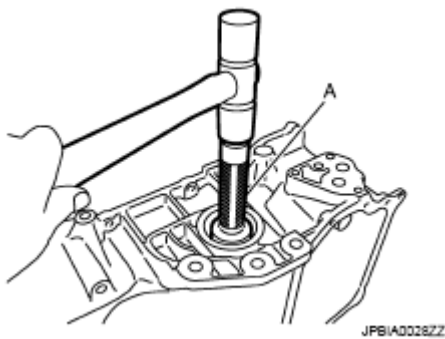


Fig. 189: View Of Axle Pipe And Oil Pan
Courtesy of NISSAN MOTOR CO., U.S.A.

INSTALLATION

1. Install axle pipe (3) to oil pan (upper), if removed.
 - Lubricate O-ring groove of axle pipe, O-rings (1) (2), and O-ring joint of oil pan with new engine oil.

O-RING INNER DIAMETER CHART

Unit: mm (in)	
Items	O-ring inner diameter
Final drive side (right side)	31.4 (1.24)
Axle pipe flange side (left side)	33.6 (1.32)

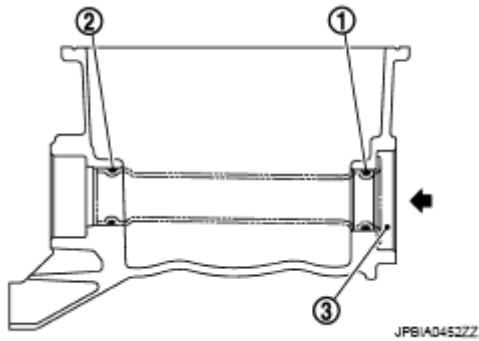


Fig. 190: Identifying Axle Pipe And O-Ring
Courtesy of NISSAN MOTOR CO., U.S.A.

- Install axle pipe (1) to oil pan (upper) from axle pipe flange side (left side) using a suitable drift (A) [outer diameter: 43 to 57 mm (1.69 to 2.24 in)].

CAUTION: Insert it with care to prevent O-ring from sliding.

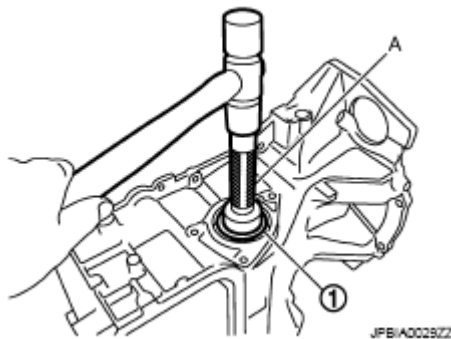


Fig. 191: Installing Axle Pipe To Oil Pan
Courtesy of NISSAN MOTOR CO., U.S.A.

2. Install oil pan (upper) as follows:
 - a. Use a scraper (A) to remove old liquid gasket from mating surfaces.

CAUTION: Do not scratch or damage the mating surfaces when cleaning off old liquid gasket.

- Also remove old liquid gasket from mating surface of lower cylinder block.
- Remove old liquid gasket from the bolt holes and threads.

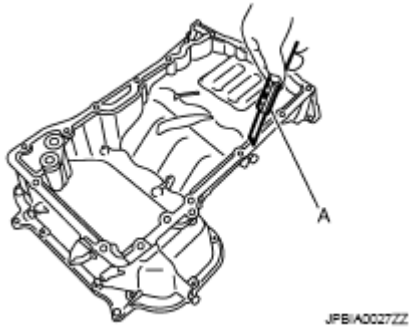


Fig. 192: Removing Old Liquid Gasket From Mating Surfaces
Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Install new O-rings (2) on the bottom of lower cylinder block (1) and oil pump (3).

<=: Engine front

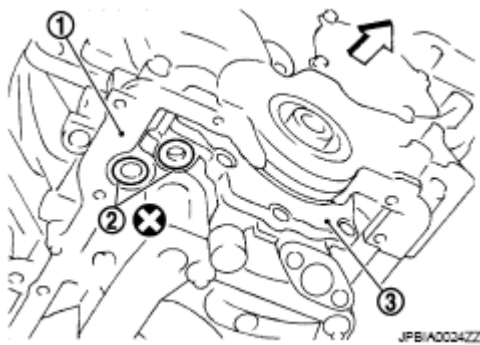


Fig. 193: Identifying O-Rings, Cylinder Block And Oil Pump
Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Apply a continuous bead of liquid gasket with the tube presser [SST: WS39930000 (-)] to the cylinder block mating surface of oil pan (upper) to a limited portion as shown in the figure.

a : 4.0 - 5.0 mm (0.157 - 0.197 in)

<=: Engine front

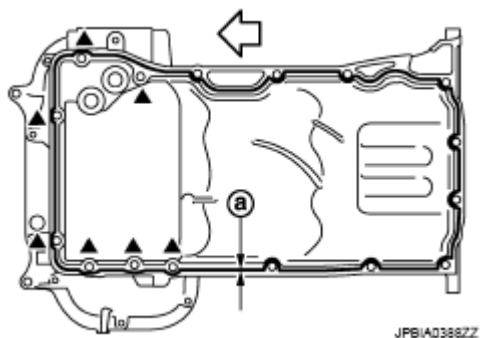


Fig. 194: Applying Continuous Bead Of Liquid Gasket To Cylinder Block Mating Surface
 Courtesy of NISSAN MOTOR CO., U.S.A.

Use Genuine RTV Silicone Sealant or equivalent. Refer to "**RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS**".

CAUTION:

- For bolt holes with marks (7 locations), apply liquid gasket outside the holes.
- Attaching should be done within 5 minutes after coating.

d. Install oil pan (upper).

CAUTION: Install avoiding misalignment of O-rings.

- Tighten mounting bolts in numerical order as shown in the figure.

<=: Engine front

- There are three types of mounting bolts. Refer to the following for locating bolts.

M8 x 25 mm (0.98 in) : 3, 6, 8, 9, 11, 12, 14, 15, 16

M8 x 50 mm (1.97 in) : 2

M8 x 90 mm (3.54 in) : 1, 4, 5, 7, 10, 13

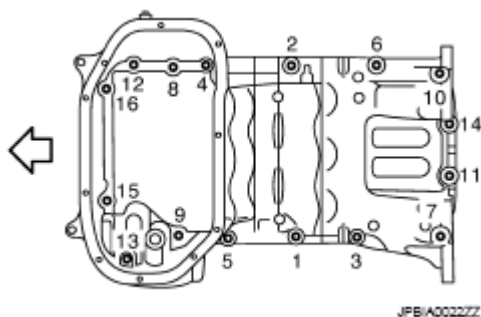


Fig. 195: View Of Mounting Bolts Tightening Sequence
 Courtesy of NISSAN MOTOR CO., U.S.A.

3. Install oil strainer to oil pump.
4. Install oil pan (lower). Refer to , "**EXPLODED VIEW (AWD)**".
5. Install oil pan drain plug.
 - Refer to the figure of components above for installation direction of drain plug washer. Refer to , "**EXPLODED VIEW (AWD)**".

6. Install in the reverse order of removal after this step.

NOTE: **At least 30 minutes after oil pan is installed, pour engine oil.**

AWD : Inspection

INSPECTION AFTER REMOVAL

Clean oil strainer if any object attached.

INSPECTION AFTER INSTALLATION


1. Check the engine oil level and adjust engine oil. Refer to "**INSPECTION**".
2. Start engine, and check there is no leak of engine oil.
3. Stop engine and wait for 10 minutes.
4. Check the engine oil level again. Refer to "**INSPECTION**".

CYLINDER HEAD

Exploded View

- A. See **INSPECTION AFTER INSTALLATION**.

Symbol	Description
	N·m (kg-m, ft-lb)
	N·m (kg-m, in-lb)
	Always replace after disassembly.

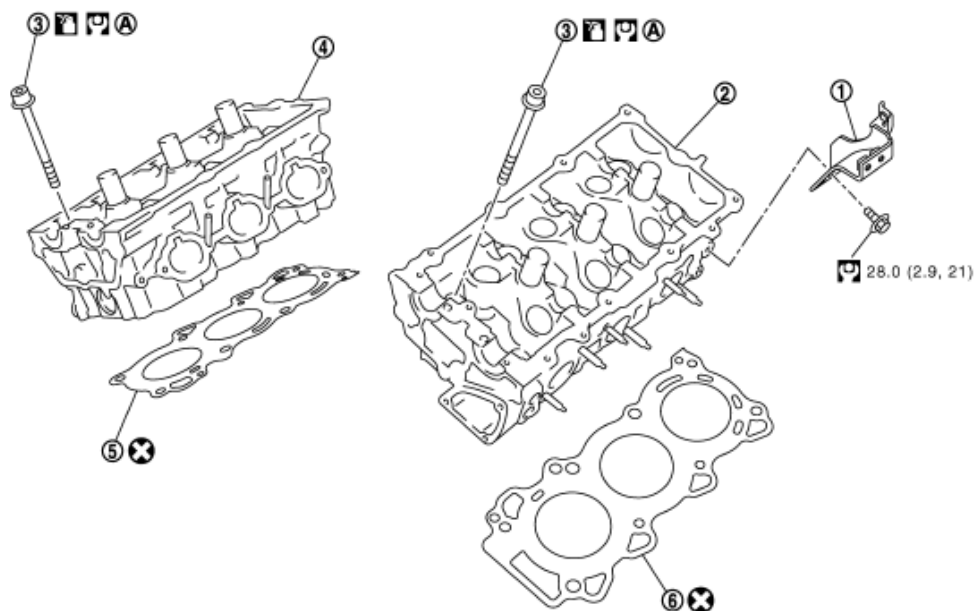


JPBIA0058GB

- 1. Engine rear lower slinger
- 2. Cylinder head (left bank)
- 3. Cylinder head bolt
- 4. Cylinder head (right bank)
- 5. Cylinder head gasket (right bank)
- 6. Cylinder head gasket (left bank)
- A. See appropriate information

Fig. 196: Exploded View Of Cylinder Head With Torque Specifications
 Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to "COMPONENTS" symbols not described on the above.

Symbol	Description
	N·m (kg-m, ft-lb)
	N·m (kg-m, in-lb)
	Always replace after disassembly.

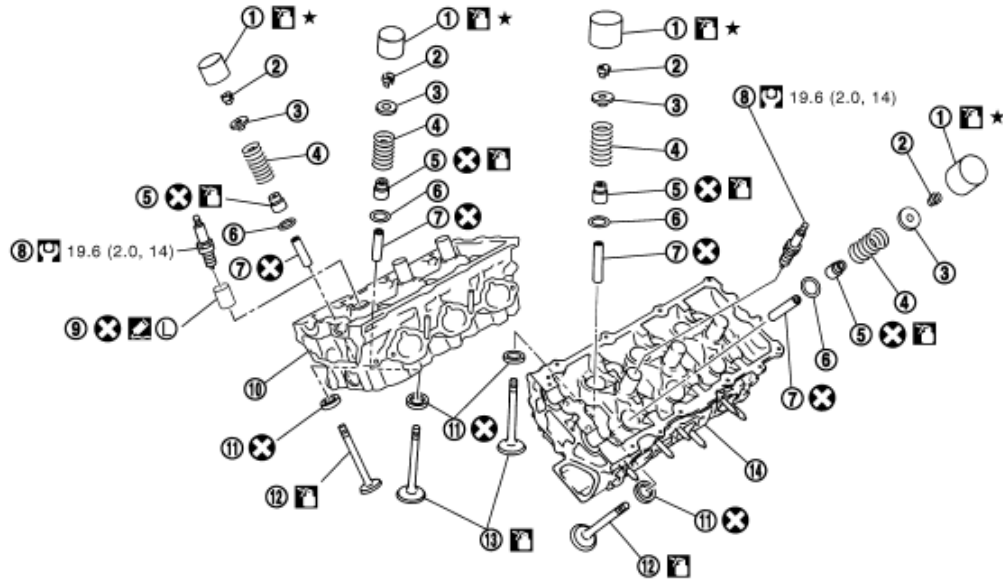

JPB1A0059GB

- | | | |
|--------------------------------|-------------------------------|--------------------------|
| 1. Valve lifter | 2. Valve collet | 3. Valve spring retainer |
| 4. Valve spring | 5. Valve oil seal | 6. Valve spring seat |
| 7. Valve guide | 8. Spark plug | 9. Spark plug tube |
| 10. Cylinder head (right bank) | 11. Valve seat | 12. Valve (EXH) |
| 13. Valve (INT) | 14. Cylinder head (left bank) | |

Fig. 197: Exploded View Of Cylinder Head With Torque Specifications
Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to "**COMPONENTS**" for symbol marks in the figure.

Removal and Installation


REMOVAL

- Remove the following parts:
 - Intake manifold collector: Refer to , "**EXPLODED VIEW**".
 - Rocker cover: Refer to , "**EXPLODED VIEW**".
 - Fuel tube and fuel injector assembly: Refer to , "**EXPLODED VIEW**".
 - Intake manifold: Refer to , "**EXPLODED VIEW**".
 - Exhaust manifold: Refer to , "**EXPLODED VIEW**".
 - Water inlet and thermostat assembly: Refer to "**EXPLODED VIEW**".
 - Water outlet, water pipe and heater pipe: Refer to "**EXPLODED VIEW**".


- Timing chain: Refer to , "**EXPLODED VIEW**".
 - Rear timing chain case: Refer to , "**EXPLODED VIEW**".
 - Camshaft: Refer to , "**EXPLODED VIEW**".
2. Remove cylinder head bolts in reverse order as shown in the figure with cylinder head bolt wrench (commercial service tool) and power tool to remove cylinder heads (right bank and left bank).
 3. Remove cylinder head gaskets.
 - A. Right bank
 - B. Left bank

<=: Engine front

Ⓐ

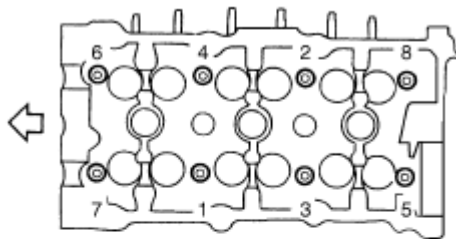

Ⓑ

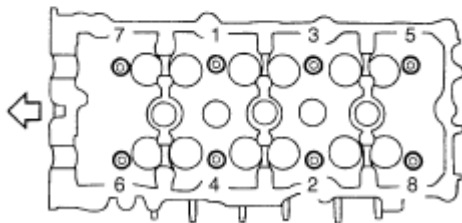

JFBIAD17ZZZ

Fig. 198: Loosening Cylinder Head Bolts In Sequence
 Courtesy of NISSAN MOTOR CO., U.S.A.

INSTALLATION

1. Install new cylinder head gaskets.
2. Turn crankshaft until No. 1 piston is set at TDC.

1 : Crankshaft key

: Right bank side


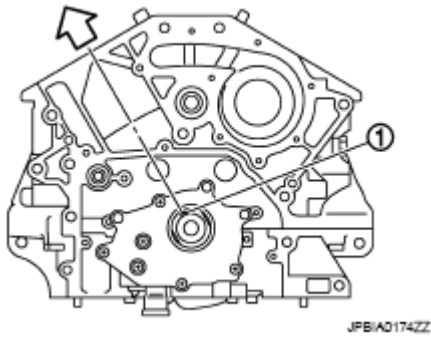


Fig. 199: Identifying Crankshaft Key
Courtesy of NISSAN MOTOR CO., U.S.A.

- Crankshaft key should line up with the right bank cylinder center line as shown in the figure.
3. Install cylinder head follow the steps below to tighten cylinder head bolts in numerical order as shown in the figure with cylinder head bolts wrench (commercial service tool).
 - A. Right bank
 - B. Left bank

<=: Engine front

Ⓐ

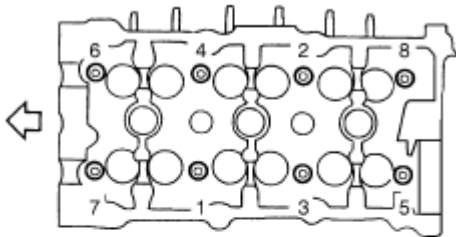

Ⓑ

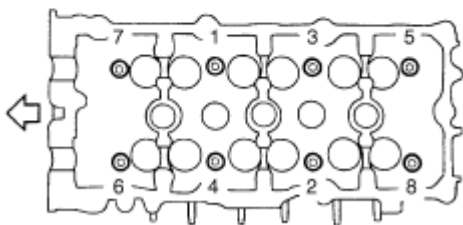


Fig. 200: Tightening Cylinder Head Bolts In Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION: • If cylinder head bolts re-used, check their outer diameters

before installation. Refer to , "EXPLODED VIEW".

- Before installing cylinder head, inspect cylinder head distortion. Refer to , "EXPLODED VIEW".

- Apply new engine oil to threads and seat surfaces of cylinder head bolts.
- Tighten all cylinder head bolts.

(Torque Spec): **105 N.m (11 kg-m, 77 ft-lb)**

- Completely loosen all cylinder head bolts.

(Torque spec): **0 N.m (0 kg-m, 0 ft-lb)**

CAUTION: In step "c", loosen bolts in reverse order of that indicated in the figure.

- Tighten all cylinder head bolts.

(Torque spec): **40.0 N.m (4.1 kg-m, 30 ft-lb)**

- Turn all cylinder head bolts 95 degrees clockwise (angle tightening).

CAUTION: Check the tightening angle by using the angle wrench [SST: KV10112100 (BT8653-A)] (A). Avoid judgment by visual inspection without.

- Check tightening angle indicated on the angle wrench indicator plate.

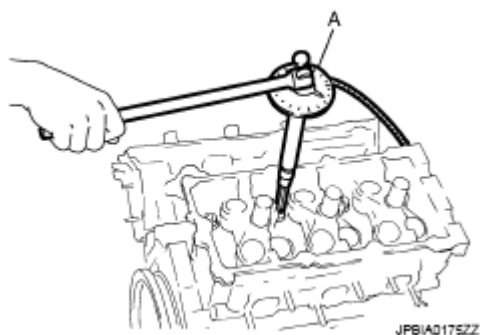


Fig. 201: Checking Tightening Angle By Using Angle Wrench
Courtesy of NISSAN MOTOR CO., U.S.A.

- Turn all cylinder head bolts 95 degrees clockwise again (angle tightening).
- After installing cylinder head, measure distance between front end faces of cylinder block and cylinder head (left and right banks).

Standard : 14.1 - 14.9 mm (0.555 - 0.587 in)

- If measured value is out of the standard, re-install cylinder head.

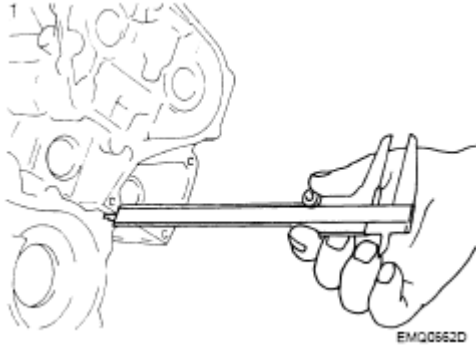


Fig. 202: Measuring Distance Between Front End Faces Of Cylinder Block And Cylinder Head

Courtesy of NISSAN MOTOR CO., U.S.A.

5. Install in the reverse order of removal after this step.

INSPECTION AFTER INSTALLATION

Inspection for Leaks

The following are procedures for checking fluids leak, lubricates leak and exhaust gases leak.

- Before starting engine, check oil/fluid levels including engine coolant and engine oil. If less than required quantity, fill to the specified level. Refer to "**FLUIDS AND LUBRICANTS**".
- Use procedure below to check for fuel leakage.
 - Turn ignition switch "ON" (with engine stopped). With fuel pressure applied to fuel piping, check for fuel leakage at connection points.
 - Start engine. With engine speed increased, check again for fuel leakage at connection points.
- Run engine to check for unusual noise and vibration.
- Warm up engine thoroughly to make sure there is no leakage of fuel, exhaust gases, or any oil/fluids including engine oil and engine coolant.
- Bleed air from lines and hoses of applicable lines, such as in cooling system.
- After cooling down engine, again check oil/fluid levels including engine oil and engine coolant. Refill to the specified level, if necessary.

Summary of the inspection items:

SUMMARY OF THE INSPECTION ITEMS

Items	Before starting engine	Engine running	After engine stopped
Engine coolant	Level	Leakage	Level
Engine oil	Level	Leakage	Level

Other oils and fluid ⁽¹⁾	Level	Leakage	Level
Fuel	Leakage	Leakage	Leakage
Exhaust gases	-	Leakage	-
(1) Transmission/transaxle/CVT fluid, power steering fluid, brake fluid, etc.			

Disassembly and Assembly

DISASSEMBLY

1. Remove spark plug with spark plug wrench (commercial service tool).
2. Remove valve lifter.
 - Identify installation positions, and store them without mixing them up.
3. Remove valve collet.
 - Compress valve spring with the valve spring compressor [SST: KV10116200 (J-26336-)] (A), the attachment [SST: KV10115900 (J26336-20)] (C) and the adapter [SST: KV10109220 (-)] (B). Remove valve collet with a magnet hand.

CAUTION: When working, take care not to damage valve lifter holes.

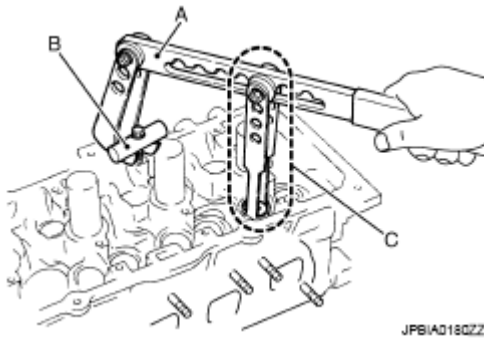


Fig. 203: Compressing Valve Spring With Valve Spring Compressor
 Courtesy of NISSAN MOTOR CO., U.S.A.

4. Remove valve spring retainer, valve spring and valve spring seat.
5. Push valve stem to combustion chamber side, and remove valve.
 - Identify installation positions, and store them without mixing them up.
6. Remove valve oil seal using the valve oil seal puller [SST: KV10107902 (J38959)] (A).

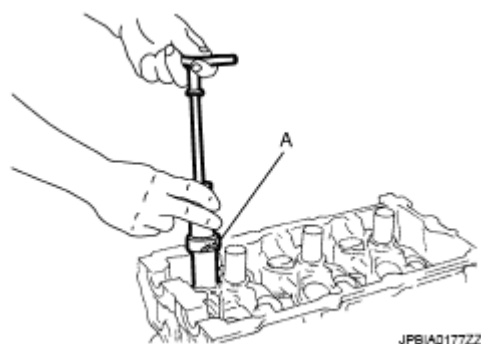


Fig. 204: Removing Valve Oil Seal Using Valve Oil Seal Puller
 Courtesy of NISSAN MOTOR CO., U.S.A.

7. Remove valve seat, if valve seat must be replaced.
 - Bore out old seat until it collapses. Boring should not continue beyond the bottom face of the seat recess in cylinder head. Set the machine depth stop to ensure this. Refer to , "CYLINDER HEAD".

CAUTION: Prevent to scratch cylinder head by excessive boring.

8. Remove valve guide, if valve guide must be replaced.
 - a. To remove valve guide, heat cylinder head to 110 to 130°C (230 to 266°F) by soaking in heated oil (A).

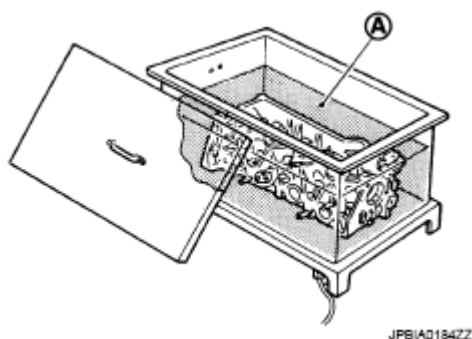


Fig. 205: Heating Cylinder Head In Heated Oil
 Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Drive out valve guide with a press [under a 20 kN (2 ton, 2.2 US ton, 2.0 Imp ton) pressure] or a hammer and the valve guide drift (commercial service tool).

WARNING: Cylinder head contains heat. When working, wear protective equipment to avoid getting burned.



Fig. 206: Driving Out Valve Guide
Courtesy of NISSAN MOTOR CO., U.S.A.

9. Remove spark plug tube, as necessary.
 - Using a pliers, pull spark plug tube out of cylinder head.

CAUTION:

- Take care not to damage cylinder head.
- Once removed, spark plug tube will be deformed and cannot be reused. Do not remove it unless absolutely necessary.

ASSEMBLY

1. If valve guide is removed in step 8 (DISASSEMBLY), install it.

Replace with oversized [0.2 mm (0.008 in)] valve guide.

- a. Using the valve guide reamer (commercial service tool) (A), ream cylinder head valve guide hole.

Valve guide hole diameter (for service parts):

Intake and exhaust

: Refer to , "CYLINDER HEAD".



Fig. 207: Reaming Cylinder Head Valve Guide Hole

Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Heat cylinder head to 110 to 130°C (230 to 266°F) by soaking in heated oil (A).

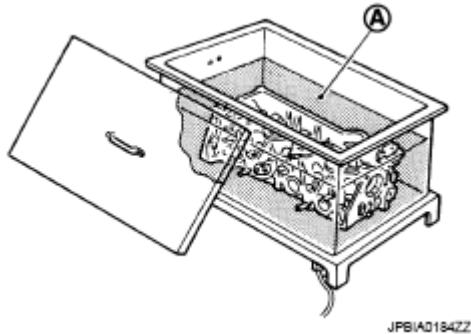


Fig. 208: Heating Cylinder Head In Heated Oil
Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Using the valve guide drift (commercial service tool), press valve guide from camshaft side to the dimensions as in the figure.

Projection (A)

Intake and exhaust

: Refer to , "CYLINDER HEAD".

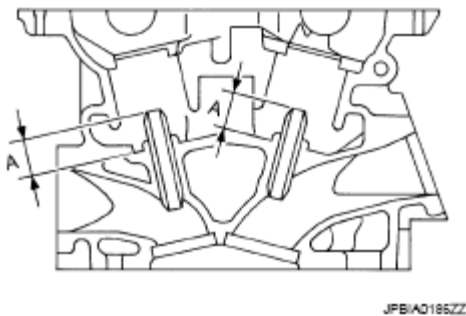


Fig. 209: Identifying Valve Guide Dimension
Courtesy of NISSAN MOTOR CO., U.S.A.

WARNING: Cylinder head contains heat. When working, wear protective equipment to avoid getting burned.

- d. Using the valve guide reamer (commercial service tool) (A), apply reamer finish to valve guide.

Standard (Intake and exhaust) : Refer to , "CYLINDER HEAD".

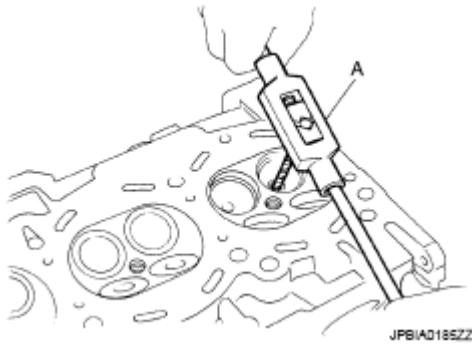


Fig. 210: Reaming Cylinder Head Valve Guide Hole
Courtesy of NISSAN MOTOR CO., U.S.A.

2. If valve seat is removed in step 7 (DISASSEMBLY), install it. Replace with oversize [0.5 mm (0.020 in)] valve seat.
 - a. Ream cylinder head recess diameter (a) for service valve seat.

Oversize (Intake and exhaust) : Refer to , "CYLINDER HEAD".

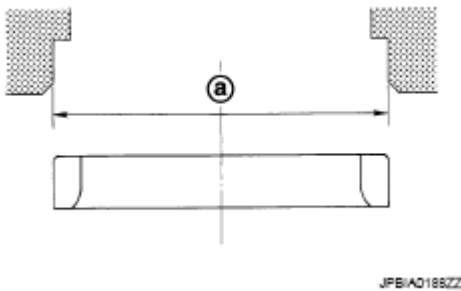


Fig. 211: Identifying Cylinder Head Recess Diameter
Courtesy of NISSAN MOTOR CO., U.S.A.

- Be sure to ream in circles concentric to valve guide center. This will enable valve to fit correctly.
- b. Heat cylinder head to 110 to 130°C (230 to 266°F) by soaking in heated oil (A).

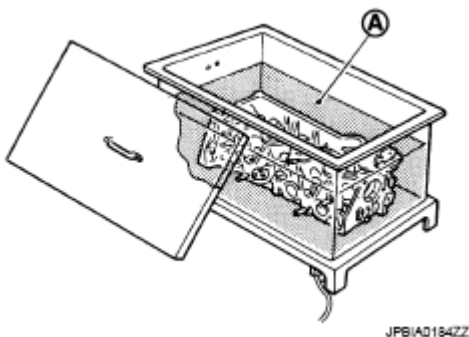


Fig. 212: Heating Cylinder Head In Heated Oil

Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Provide valve seats cooled well with dry ice. Force fit valve seat into cylinder head.

WARNING: Cylinder head contains heat. When working, wear protective equipment to avoid getting burned.

CAUTION: Avoid directly touching cold valve seats.

- d. Using the valve seat cutter set (commercial service tool) or valve seat grinder, finish seat to the specified dimensions. Refer to , "CYLINDER HEAD".

CAUTION: When using the valve seat cutter, firmly grip cutter handle with both hands. Then, press on the contacting surface all around the circumference to cut in a single drive. Improper pressure on with cutter or cutting many different times may result in stage valve seat.

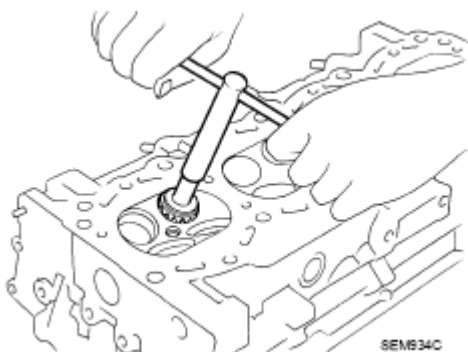


Fig. 213: Grinding Valve Seat Using Valve Seat Grinder
Courtesy of NISSAN MOTOR CO., U.S.A.

- e. Using compound, grind to adjust valve fitting.
 - f. Check again for normal contact. Refer to "VALVE SEAT CONTACT".
3. Install new valve oil seals as follows:
- a. Apply new engine oil on valve oil seal joint and seal lip.
 - b. Install with the valve oil seal drift [SST: KV10115600 (J-38958)] (A) to match dimension in the figure.

Height (b) (Without valve spring seat installed) Intake and exhaust : 14.3 - 14.9 mm (0.563 - 0.587 in)

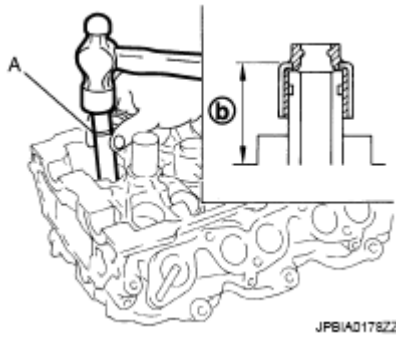


Fig. 214: Installing Valve Oil Seals
Courtesy of NISSAN MOTOR CO., U.S.A.

4. Install valve spring seat.
5. Install valve.

NOTE: Larger diameter valves are for intake side.

6. Install valve spring (uneven pitch type).
 - Install narrow pitch (B) end [paint mark (C)] to cylinder head side (valve spring seat side).

A : Wide pitch

<=: Cylinder head side

Paint mark color : Yellowish green

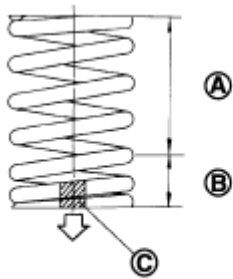


Fig. 215: Identifying Valve Spring Dimension
Courtesy of NISSAN MOTOR CO., U.S.A.

7. Install valve spring retainer.
8. Install valve collet.
 - Compress valve spring with the valve spring compressor [SST: KV10116200 (J26336-A)] (A), the attachment [SST: KV10115900 (J26336-20)] (C) and the adapter [SST: KV10116200 (-)] (B). Install valve collet with a magnet hand.

CAUTION: When working, take care not to damage valve lifter holes.

- Tap valve stem edge lightly with plastic hammer after installation to check its installed condition.

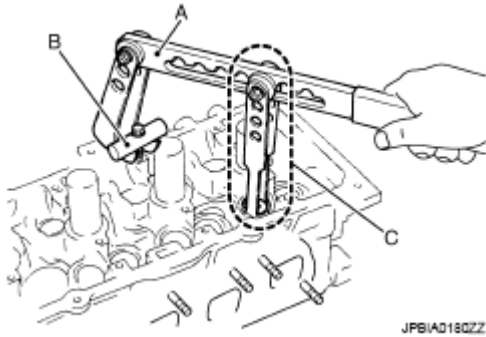


Fig. 216: Compressing Valve Spring With Valve Spring Compressor
Courtesy of NISSAN MOTOR CO., U.S.A.

- Install valve lifter.
 - Install it in the original position.
- Install spark plug tube.
 - Press-fit spark plug tube as follows:
 - Remove old locking sealant adhering to cylinder head mounting hole.
 - Apply sealant to area within approximately 12 mm (0.47 in) from edge of spark plug tube press-fit side.

Use Genuine High Strength Locking Sealant or equivalent. Refer to "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS".

- Using drift, press-fit spark plug tube so that its height (A) is as specified in the figure.

B : High strength locking sealant application area

Standard press-fit height: : 37.7 - 38.7 mm (1.484 - 1.524 in)

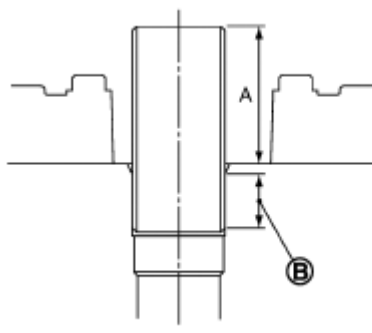


Fig. 217: Identifying Spark Plug Tube Dimension
 Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION:

- When press-fitting, take care not to deform spark plug tube.
- After press-fitting, wipe off liquid gasket protruding onto cylinder-head upper face.

11. Install spark plug with spark plug wrench (commercial service tool).

Inspection

INSPECTION AFTER REMOVAL

Cylinder Head Bolts Outer Diameter

- Cylinder head bolts are tightened by plastic zone tightening method. Whenever the size difference between (C) and (B) exceeds the limit, replace them with new one.

Limit [(C) - (B)] : 0.18 mm (0.0071 in)

A : Measuring point

e : 48 mm (1.89 in)

d : 11 mm (0.43 in)

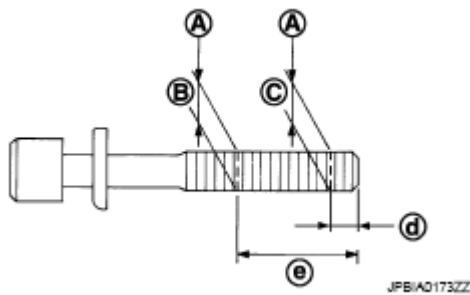


Fig. 218: Identifying Cylinder Head Bolt Dimension
 Courtesy of NISSAN MOTOR CO., U.S.A.

- If reduction of outer diameter appears in a position other than (B), use it as (B) point.

Cylinder Head Distortion

NOTE: When performing this inspection, cylinder block distortion should be also checking. Refer to , "CYLINDER BLOCK".

1. Using a scraper, wipe off oil, scale, gasket, sealant and carbon deposits from surface of cylinder head.

CAUTION: Do not allow gasket fragments to enter engine oil or engine coolant passages.

2. At each of several locations on bottom surface of cylinder head, measure the distortion in six directions (A- F).

Limit : Refer to , "CYLINDER HEAD".

- If it exceeds the limit, replace cylinder head.

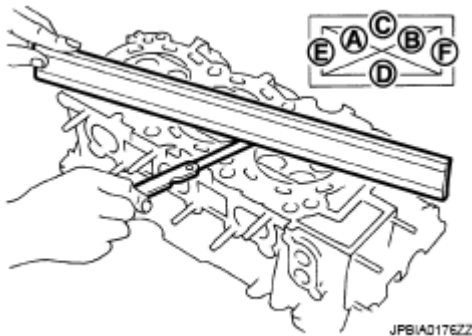


Fig. 219: Checking Cylinder Head Distortion
Courtesy of NISSAN MOTOR CO., U.S.A.

INSPECTION AFTER DISASSEMBLY

Valve Dimensions

- Check the dimensions of each valve. For the dimensions, refer to , "CYLINDER HEAD".
- If dimensions are out of the standard, replace valve and check valve seat contact. Refer to "VALVE SEAT CONTACT".

Valve Guide Clearance

Valve Stem Diameter

- Measure the diameter of valve stem with micrometer (A).

Standard (Intake and exhaust) : Refer to , "CYLINDER HEAD".

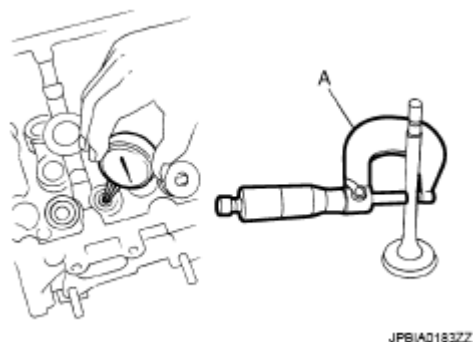


Fig. 220: Measuring Diameter Of Valve Stem
 Courtesy of NISSAN MOTOR CO., U.S.A.

Valve Guide Inner Diameter

- Measure the inner diameter of valve guide with bore gauge.

Standard (Intake and exhaust) : Refer to , "CYLINDER HEAD".

Valve Guide Clearance

- $(\text{Valve guide clearance}) = (\text{Valve guide inner diameter}) - (\text{Valve stem diameter})$

Valve guide clearance Standard and limit (Intake and exhaust) : Refer to , "CYLINDER HEAD".

- If the calculated value exceeds the limit, replace valve and/or valve guide. When valve guide must be replaced, refer to , "EXPLODED VIEW".

Valve Seat Contact

- After confirming that the dimensions of valve guides and valves are within the specifications, perform this procedure.
- Apply prussian blue (or white lead) onto contacting surface of valve seat to check the condition of the valve contact on the surface.
- Check if the contact area band is continuous all around the circumference.
- If not, grind to adjust valve fitting and check again. If the contacting surface still has "NG" (B) conditions even after the re-check, replace valve seat. Refer to , "EXPLODED VIEW".

A : OK

Valve Spring Squareness

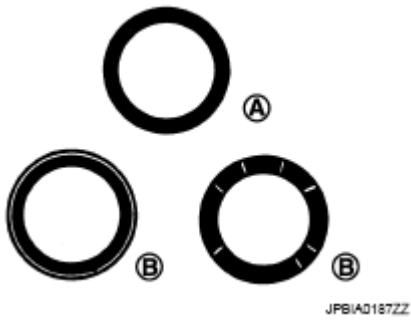


Fig. 221: Identifying Valve Seat

Courtesy of NISSAN MOTOR CO., U.S.A.

- Set a try square (A) along the side of valve spring and rotate spring. Measure the maximum clearance between the top of spring and try square.

Limit : Refer to , "CYLINDER HEAD".

B : Contact

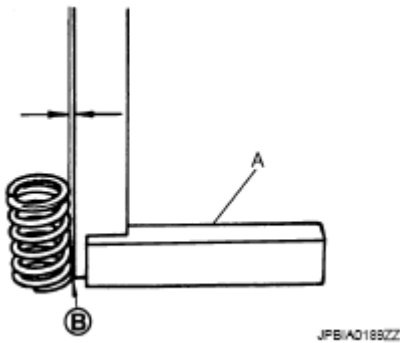


Fig. 222: Measuring Maximum Clearance Between Top Of Spring And Try Square

Courtesy of NISSAN MOTOR CO., U.S.A.

- If it exceeds the limit, replace valve spring.

Valve Spring Dimensions and Valve Spring Pressure Load

- Check the valve spring pressure at specified spring height.

Standard (Intake and exhaust) : Refer to , "CYLINDER HEAD".

Free height

Installation height

Installation load

Height during valve open

Load with valve open

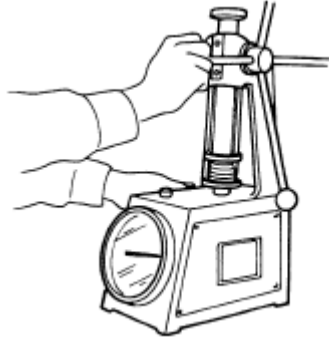


Fig. 223: Checking Valve Spring Pressure
Courtesy of NISSAN MOTOR CO., U.S.A.

- If the installation load or load with valve open is out of the standard, replace valve spring.

INSPECTION AFTER INSTALLATION

Inspection for Leaks

The following are procedures for checking fluids leak, lubricates leak and exhaust gases leak.

- Before starting engine, check oil/fluid levels including engine coolant and engine oil. If less than required quantity, fill to the specified level. Refer to "**RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS**".
- Use procedure below to check for fuel leakage.
 - Turn ignition switch "ON" (with engine stopped). With fuel pressure applied to fuel piping, check for fuel leakage at connection points.
 - Start engine. With engine speed increased, check again for fuel leakage at connection points.
- Run engine to check for unusual noise and vibration.
- Warm up engine thoroughly to make sure there is no leakage of fuel, exhaust gases, or any oil/fluids including engine oil and engine coolant.
- Bleed air from lines and hoses of applicable lines, such as in cooling system.
- After cooling down engine, again check oil/fluid levels including engine oil and engine coolant. Refill to the specified level, if necessary.

Summary of the inspection items:

SUMMARY OF THE INSPECTION ITEMS

Items	Before starting engine	Engine running	After engine stopped
Engine coolant	Level	Leakage	Level
Engine oil	Level	Leakage	Level

2008 Infiniti G35

2008 ENGINE Engine Mechanical - G35 (Sedan)

Other oils and fluid ⁽¹⁾	Level	Leakage	Level
Fuel	Leakage	Leakage	Leakage
Exhaust gases	-	Leakage	-
(1) Transmission/transaxle/CVT fluid, power steering fluid, brake fluid, etc.			

CYLINDER BLOCK**Exploded View**A. See **CYLINDER BLOCK**.

Symbol	Description
	N·m (kg-m, ft-lb)
	N·m (kg-m, in-lb)
	Always replace after disassembly.

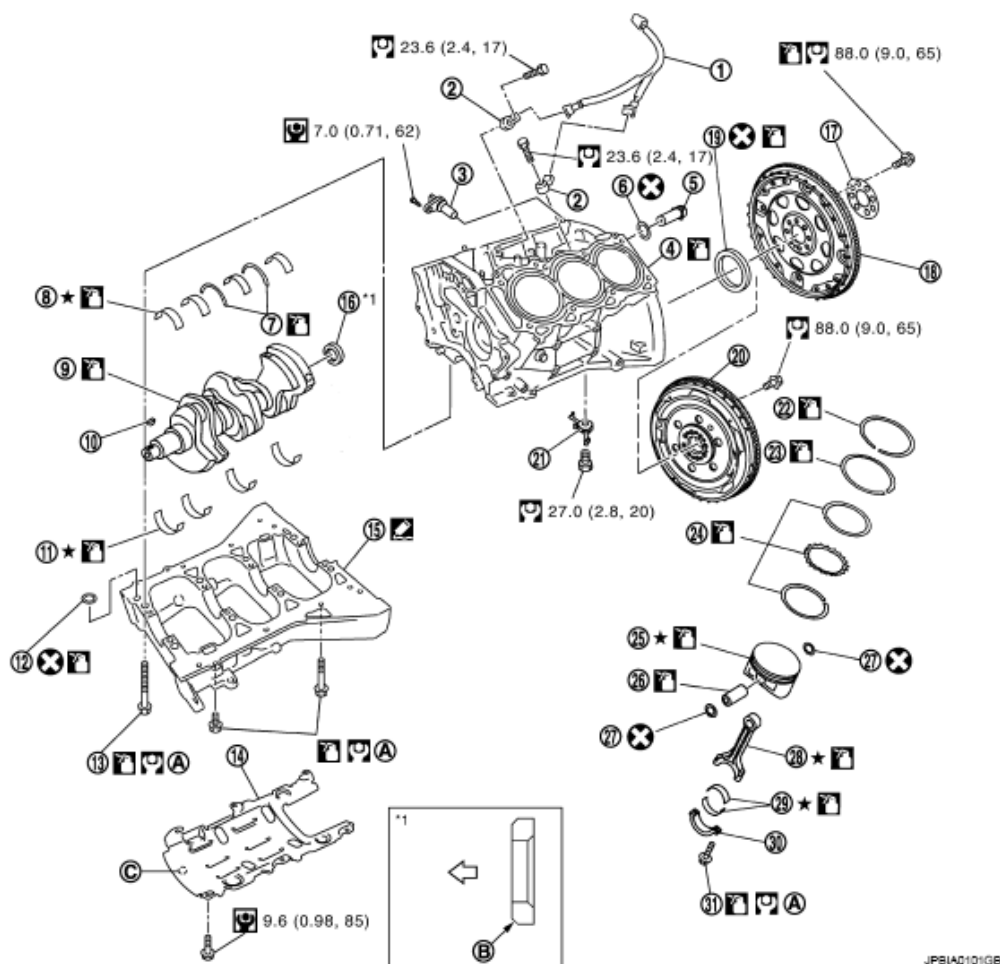


Fig. 224: Exploded View Of Cylinder Block With Torque Specifications
Courtesy of NISSAN MOTOR CO., U.S.A.

Disassembly and Assembly**DISASSEMBLY**

1. Remove the following parts:
 - Oil pans (lower and upper): Refer to , "2WD : EXPLODED VIEW" (2WD models) or , "AWD : EXPLODED VIEW" (AWD models).
 - Front and rear timing chain case: Refer to , "EXPLODED VIEW" and , "EXPLODED VIEW".
 - Cylinder head: Refer to , "EXPLODED VIEW".
2. Remove knock sensor.

CAUTION: Carefully handle sensor avoiding shocks.

3. Remove baffle plate from lower cylinder block.
4. Remove piston and connecting rod assembly with the following procedure:
 - Before removing piston and connecting rod assembly, check the connecting rod side clearance. Refer to , "CONNECTING ROD BEARING".

CAUTION: Be careful not to drop connecting rod bearing, and to scratch the surface.

- a. Position crankshaft pin corresponding to connecting rod to be removed onto the bottom dead center.
- b. Remove connecting rod bearing cap.
- c. Using a hammer handle or similar tool, push piston and connecting rod assembly out to the cylinder head side.

CAUTION: Be careful not to damage the cylinder wall and crankshaft pin, resulting from an interference of the connecting rod big end.

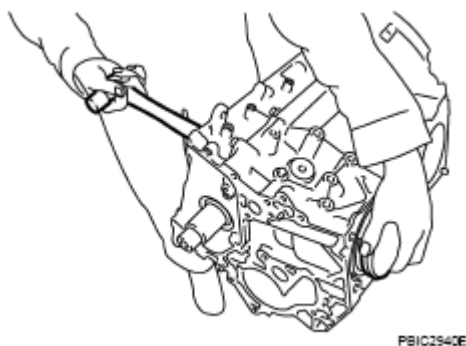


Fig. 225: Pushing Piston And Connecting Rod Assembly Out To Cylinder Head Side
Courtesy of NISSAN MOTOR CO., U.S.A.

5. Remove connecting rod bearings from connecting rod and connecting rod bearing cap.

CAUTION:

- Be careful not to drop connecting rod bearing, and to scratch the surface.
- Identify installation positions, and store them without mixing them up.

6. Remove piston rings from piston.

- Before removing piston rings, check the piston ring side clearance. Refer to , "CYLINDER BLOCK".
- Use a piston ring expander (commercial service tool) (A).

CAUTION:

- When removing piston rings, be careful not to damage piston.
- Be careful not to damage piston rings by expanding them excessively.

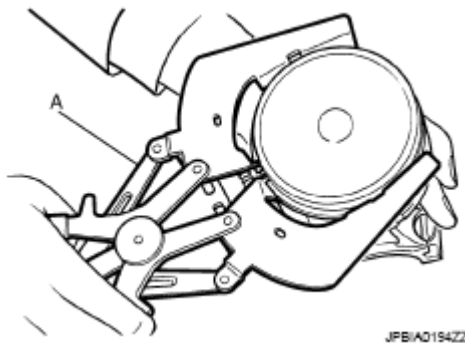


Fig. 226: View Of Piston Rings
Courtesy of NISSAN MOTOR CO., U.S.A.

7. Remove piston from connecting rod as follows:
- a. Using a snap ring pliers (A), remove snap rings.

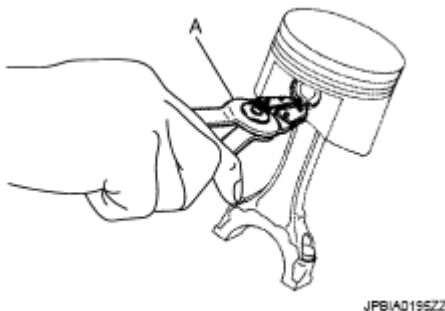


Fig. 227: View Of Snap Rings

Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Heat piston to 60 to 70°C (140 to 158°F) with an industrial use drier (A) or equivalent.

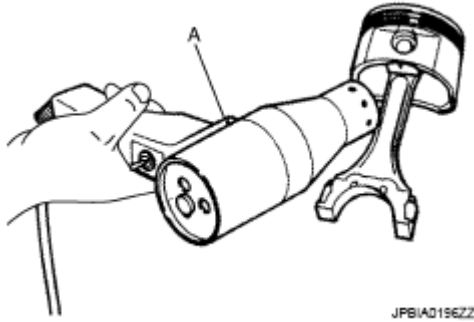


Fig. 228: View Of Piston Using Drier
Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Push out piston pin with stick of outer diameter approximately 20 mm (0.79 in).

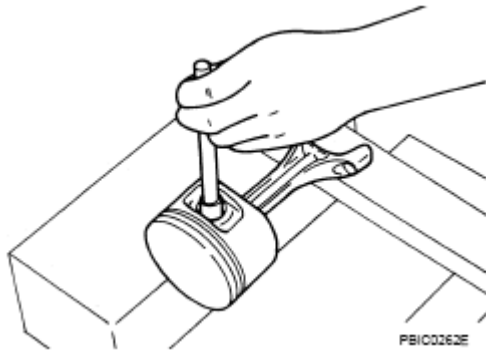


Fig. 229: View Of Piston Pin
Courtesy of NISSAN MOTOR CO., U.S.A.

8. Remove lower cylinder block bolts.

NOTE: Use TORX socket (size E14) for bolts No.1 to 16.

- Before loosening lower cylinder block bolts, measure the crankshaft end play. Refer to , **"CYLINDER BLOCK"**.
- Loosen lower cylinder block bolts in the reverse order shown in the figure in several different steps.

<=: Engine front

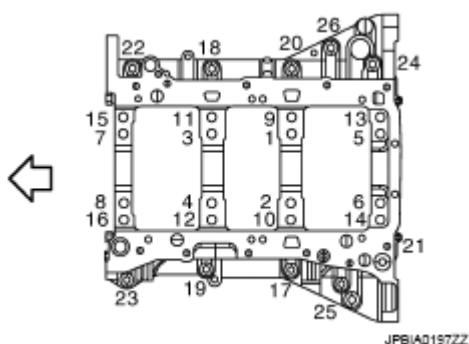


Fig. 230: Loosening Lower Cylinder Block Bolts In Sequence
 Courtesy of NISSAN MOTOR CO., U.S.A.

9. Remove lower cylinder block as follows:

Screw M8 bolt [pitch: 1.25 mm (0.049 in) length: approx 50 mm (1.97 in)] into bolt holes (A). Then equally tighten each bolt, and remove lower cylinder block.

<=: Engine front

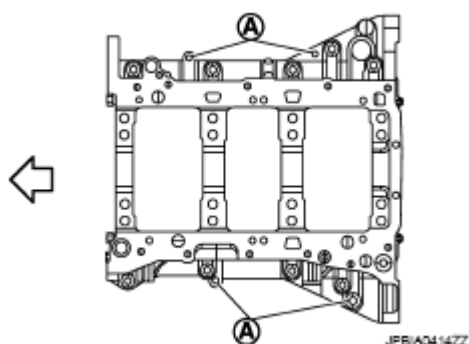


Fig. 231: Identifying Bolt Holes
 Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION:

- Be careful not to damage the mounting surfaces.
- Do not tighten bolts too much.
- Do not insert screw driver, this will damage the mating surface.

10. Remove crankshaft.
 11. Pull rear oil seal out from rear end of crankshaft.
 12. Remove main bearings and thrust bearings from cylinder block and lower cylinder block.

CAUTION:

- Be careful not to drop main bearing, and to scratch the surface.
- Identify installation positions, and store them without mixing them up.

13. Remove oil jet.

ASSEMBLY

1. Fully air-blow engine coolant and engine oil passages in cylinder block, cylinder bore and crankcase to remove any foreign material.

CAUTION: Use a goggles to protect your eye.

2. Install each plug to cylinder block as shown in the figure.

- Apply sealant to the thread of water drain plugs (1) (4).

Use Genuine RTV Silicone Sealant or equivalent. Refer to "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS".

- Apply sealant to the thread of plugs.

Use Genuine High Strength Thread Locking Sealant or equivalent. Refer to "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS".

- Replace washers (2) with new one.

3 : plug

<=: Engine front

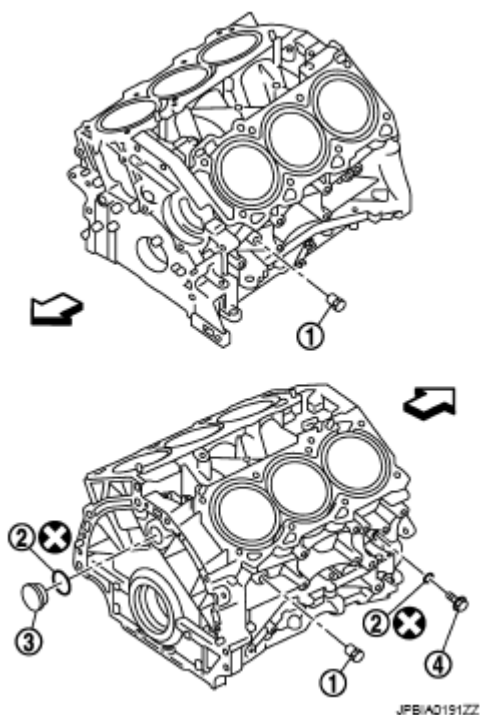


Fig. 232: Identifying Water Drain Plugs
 Courtesy of NISSAN MOTOR CO., U.S.A.

- Tighten each plug as specified below.

TIGHTENING TORQUE

Part	Washer	Tightening torque
1	No	19.6 N.m (2.0 kg-m, 14 ft-lb)
3	Yes	78.0 N.m (8.0 kg-m, 58 ft-lb)
4	Yes	12.3 N.m (1.3 kg-m, 9 ft-lb)

3. Install oil jet.

- Insert oil jet dowel pin (A) into cylinder block dowel pin hole, and tighten mounting bolts.

<=: Engine front

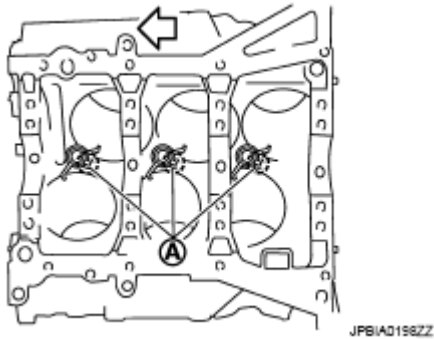


Fig. 233: Identifying Oil Jet Dowel Pin
Courtesy of NISSAN MOTOR CO., U.S.A.

4. Install main bearings and thrust bearings as follows:

CAUTION: Be careful not to drop main bearing, and to scratch the surface.

- a. Remove dust, dirt, and engine oil on bearing mating surfaces of cylinder block and lower cylinder block.
- b. Install thrust bearings (1) to the both sides of the No. 3 journal housing on cylinder block.
 - A. No. 1
 - B. No. 2
 - C. No. 3
 - D. No. 4

F: Thrust bearing installation position

<=: Engine front

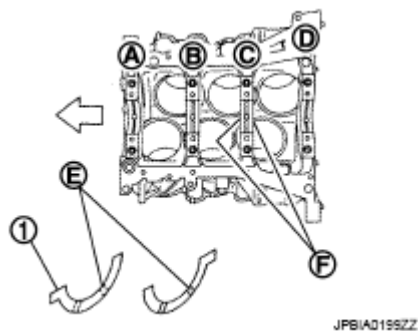


Fig. 234: Identifying Thrust Bearings
Courtesy of NISSAN MOTOR CO., U.S.A.

- Install thrust bearings with the oil groove (E) facing crankshaft arm (outside).

- c. Install main bearings paying attention to the direction.

A : Cylinder block side

D : Lower cylinder block side

<=: Engine front

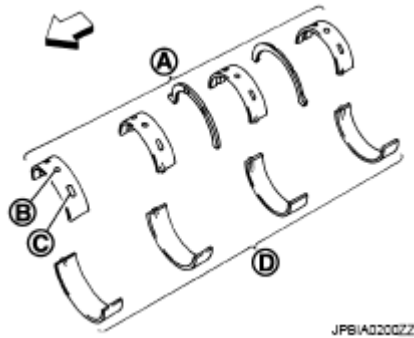


Fig. 235: Identifying Oil Hole And Groove
Courtesy of NISSAN MOTOR CO., U.S.A.

- Main bearing with oil hole (B) and groove (C) goes on cylinder block. The one without them goes on lower cylinder block.
 - Before installing main bearings, apply engine oil to the bearing surface (inside). Do not apply engine oil to the back surface, but thoroughly clean it.
 - When installing, align main bearing stopper protrusion to cutout of cylinder block and lower cylinder block.
 - Ensure the oil holes on cylinder block and those on the corresponding bearing are aligned.
5. Install crankshaft to cylinder block.
- While turning crankshaft by hand, check that it turns smoothly.
6. Install lower cylinder block.

NOTE: Lower cylinder block cannot be replaced as a single part, because it is machined together with cylinder block.

- Apply a continuous bead of liquid gasket with the tube presser [SST: WS39930000 (-)] to lower cylinder block as shown in the figure.

a : 3.5 - 4.5 mm (0.138 - 0.177 in) dia

B : Apply to end

Use Genuine RTV Silicone Sealant or equivalent. Refer to "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS".

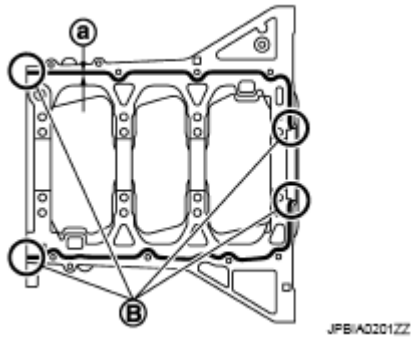


Fig. 236: Applying Continuous Bead Of Liquid Gasket To Lower Cylinder Block
Courtesy of NISSAN MOTOR CO., U.S.A.

7. Install lower cylinder block bolts in numerical order as shown in the figure as follows:

<=: Engine front

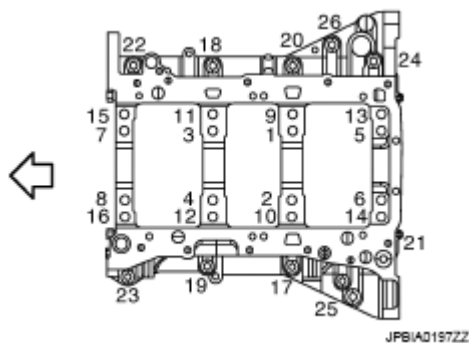


Fig. 237: Tightening Lower Cylinder Block Bolts In Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

- a. Inspect the outer diameter of lower cylinder block bolt. Refer to , "MAIN BEARING".
- b. Apply new engine oil to threads and seat surfaces of lower cylinder block bolts.
- c. Tighten lower cylinder block bolts (No. 1 to 16) in numerical order as shown in the figure.

NOTE: Use TORX socket (size E14) for bolts No. 1 to 16.

(Torque spec): 35.3 N.m (3.6 kg-m, 26 ft-lb)

- d. Turn lower cylinder block bolts (No. 1 to 16) 90 degrees clockwise (angle tightening).

CAUTION: Use the angle wrench [SST: KV10112100 (BT8653-A)] (A) to check tightening angle. Do not make judgment by visual inspection.

- e. Completely loosen lower cylinder block bolts (No. 1 to 16).

(Torque spec): 0 N.m (0 kg-m, 0 ft-lb)

CAUTION: In step "e", loosen lower cylinder block bolts (No. 1 to 16) in reverse order of that indicated in the figure.

- f. Repeat step c.
- g. Repeat step d.
- h. Tighten lower cylinder block bolt (No. 17 to 26).

(Torque spec): 22.0 N.m (2.2 kg-m, 16 ft-lb)

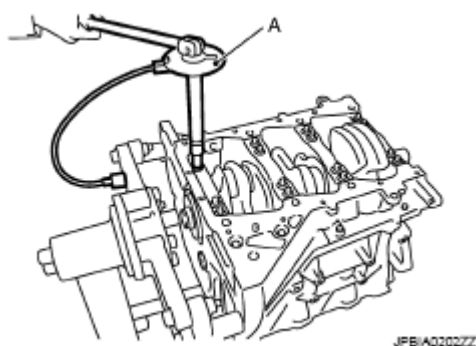


Fig. 238: Checking Lower Cylinder Block Bolt Torque
Courtesy of NISSAN MOTOR CO., U.S.A.

- After installing lower cylinder block bolts, make sure that crankshaft can be rotated smoothly by hand.
 - Check the crankshaft end play. Refer to , "**CYLINDER BLOCK**".
8. Install piston to connecting rod as follows:
- a. Using a snap ring pliers, install new snap ring to the groove of piston rear side.
 - Insert it fully into groove to install.
 - b. Install piston to connecting rod.
 - Using an industrial use drier or similar tool, heat piston until piston pin can be pushed in by hand without excess force [approx. 60 to 70°C (140 to 158°F)]. From the front to the rear, insert piston pin into piston and connecting rod.
 - Assemble so that the front mark on the piston head and the cylinder number on connecting rod are positioned as shown in the figure.
 - A. Piston grade number
 - B. Front mark
 - C. Pin grade number
 - D. Cylinder number
 - E. Front mark

<=: Engine front

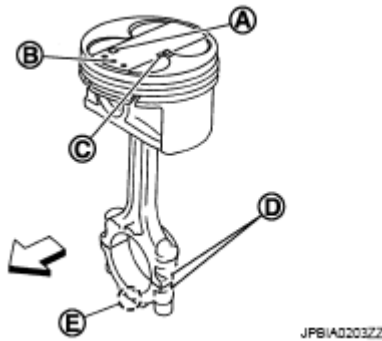


Fig. 239: Identifying Front Mark On Piston Head
Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Install new snap ring to the groove of the piston front side.
 - Insert it fully into groove to install.
 - After installing, make sure that connecting rod moves smoothly.
9. Using a piston ring expander (commercial service tool) (A), install piston rings.

CAUTION:

- When installing piston rings, be careful not to damage piston.
- Be careful not to damage piston rings by expending them excessively.

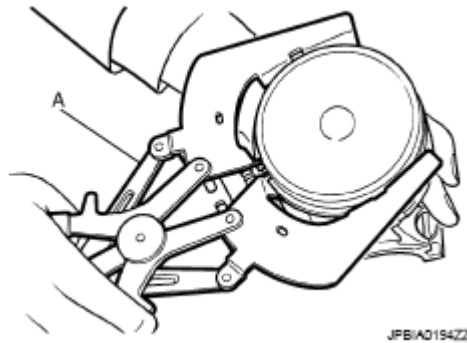


Fig. 240: Installing Piston Rings
Courtesy of NISSAN MOTOR CO., U.S.A.

- If there is stamped mark on ring, mount it with marked side up.

Stamped mark:

Top ring (A) : 1 N

Second ring (B) : 2 N

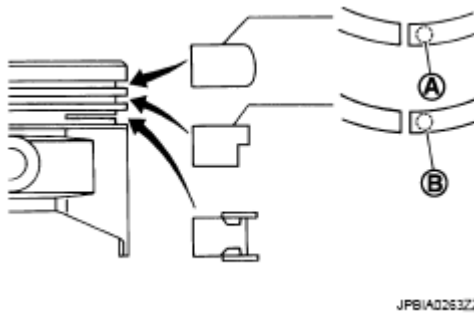


Fig. 241: Identifying Stamped Mark On Ring
Courtesy of NISSAN MOTOR CO., U.S.A.

- Position each ring with the gap as shown in the figure referring to the piston front mark (D).
 - a. 90 degrees
 - b. 45 degrees

C :Top ring gap

E :Oil ring upper or lower rail gap (either of them)

F :Second ring and oil ring spacer gap

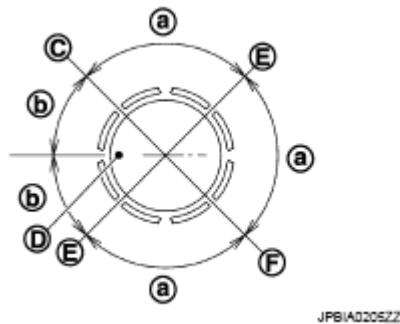


Fig. 242: Identifying Piston Ring Gap Direction
Courtesy of NISSAN MOTOR CO., U.S.A.

- Check the piston ring side clearance. Refer to , "**CYLINDER BLOCK**".
10. Install connecting rod bearings to connecting rod and connecting rod bearing cap.

CAUTION: Be careful not to drop connecting rod bearing, and to scratch the surface.

- Before installing connecting rod bearings, apply engine oil to the bearing surface (inside). Do not apply engine oil to the back surface, but thoroughly clean it.
- When installing, align connecting rod bearing stopper protrusion (B) with cutout (C) of connecting rods and connecting rod bearing caps to install.

- Ensure the oil hole (A) on connecting rod and that on the corresponding bearing are aligned.

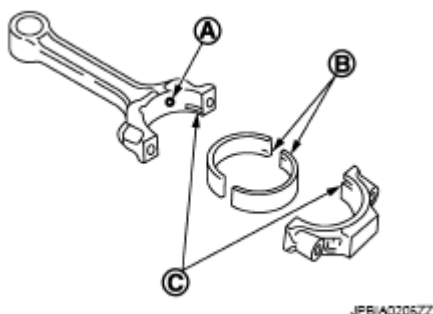


Fig. 243: Identifying Connecting Rod Bearing Stopper Protrusion And Cutout Of Connecting Rods

Courtesy of NISSAN MOTOR CO., U.S.A.

11. Install piston and connecting rod assembly to crankshaft.
 - Position crankshaft pin corresponding to connecting rod to be installed onto the bottom dead center.
 - Apply engine oil sufficiently to the cylinder bore, piston and crankshaft pin journal.
 - Match the cylinder position with the cylinder number on connecting rod to install.
 - Be sure that front mark on piston crown is facing front of engine.
 - Using a piston ring compressor [SST: EM03470000 (J8037)] (A) or suitable tool, install piston with the front mark on the piston crown facing the front of the engine.

CAUTION: Be careful not to damage the cylinder wall and crankshaft pin, resulting from an interference of the connecting rod big end.

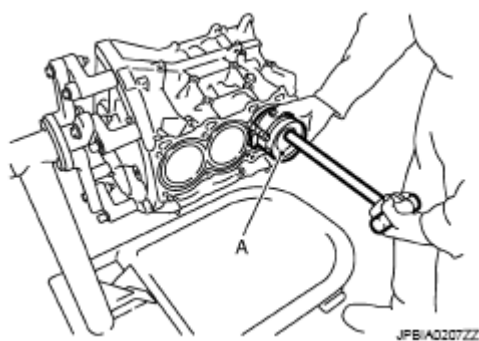


Fig. 244: Installing Piston

Courtesy of NISSAN MOTOR CO., U.S.A.

12. Install connecting rod bearing cap.
 - Match the stamped cylinder number marks on connecting rod with those on connecting rod bearing cap to install.

A. Sample codes

- B. Bearing stopper groove
- C. Small-end diameter grade
- D. Big-end diameter grade
- E. Weight grade
- F. Cylinder No.
- G. Management code

I :Management code

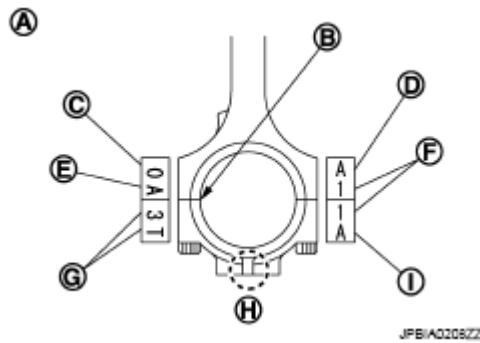


Fig. 245: Identifying Stamped Cylinder Number Marks On Connecting Rod
 Courtesy of NISSAN MOTOR CO., U.S.A.

- Be sure that front mark (H) on connecting rod bearing cap is facing front of the engine.

13. Tighten connecting rod bolt as follows:

- a. Inspect the outer diameter of connecting rod bolt. Refer to , "**CYLINDER BLOCK**".
- b. Apply engine oil to the threads and seats of connecting rod bolts.
- c. Tighten connecting rod bolts.

(Torque spec): **28.4 N.m (2.9 kg-m, 21 ft-lb)**

- d. Completely loosen connecting rod bolts.

(Torque spec): **0 N.m (0 kg-m, 0 ft-lb)**

- e. Tighten connecting rod bolts.

v: 24.5 N.m (2.5 kg-m, 18 ft-lb)

- f. Then turn connecting rod bolts 90 degrees clockwise (angle tightening).

CAUTION: Always use the angle wrench [SST: KV10112100 (BT8653- A)] (A). Avoid tightening based on visual check alone.

- After tightening connecting rod bolts, make sure that crankshaft rotates smoothly.
- Check the connecting rod side clearance. Refer to , "**CYLINDER BLOCK**".

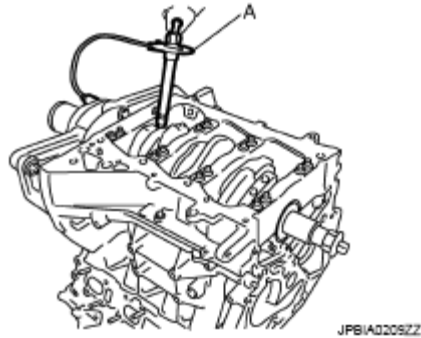


Fig. 246: Checking Connecting Rod Bolts Torque
Courtesy of NISSAN MOTOR CO., U.S.A.

14. Install baffle plate.
15. Install new rear oil seal. Refer to , "**REAR OIL SEAL : REMOVAL AND INSTALLATION**".
 - Apply new engine oil to both oil seal lip and dust seal lip.
16. Install pilot converter (A/T models) or pilot bushing (M/T models).
 - With a drift of the following outer diameter, press-fit as far as it will go.

Pilot bushing : Approx. 17 mm (0.67 in)

Pilot converter : Approx. 33 mm (1.30 in)

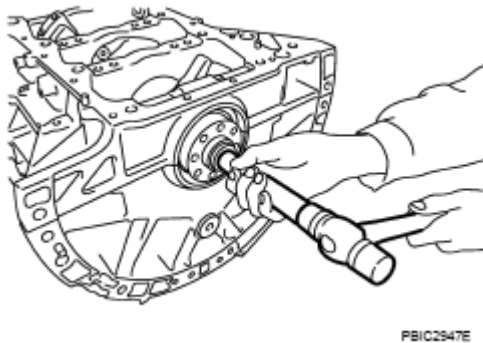


Fig. 247: Installing Pilot Converter
Courtesy of NISSAN MOTOR CO., U.S.A.

- Press-fit pilot converter with its chamfer facing crankshaft as shown in the figure. (A/T models)

<=: Crankshaft side

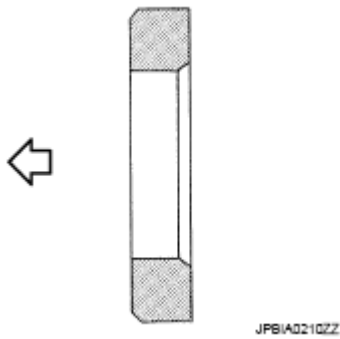


Fig. 248: Identifying Pilot Converter With Chamfer Facing Crankshaft
Courtesy of NISSAN MOTOR CO., U.S.A.

- Press-fit pilot bushing (1) as the dimension in the figure. (M/T models)

A : Crankshaft (rear end surface)

b : 10.20 - 10.85 mm (0.402 - 0.427 in)

[Target: 10.20 mm (0.402 in)]

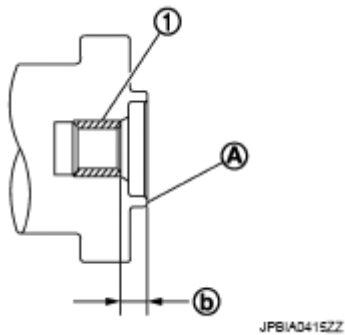


Fig. 249: Identifying Pilot Bushing
Courtesy of NISSAN MOTOR CO., U.S.A.

17. Install knock sensors.

- A. Right bank
- B. Left bank

<=: Engine front

- Install knock sensor so that connector faces rear of the engine.
- After installing knock sensor, connect harness connector, and lay it out to rear of the engine.

CAUTION:

- Do not tighten mounting bolts while holding connector.
- If any impact by dropping is applied to knock sensor, replace it

with new one.

NOTE:

- Make sure that there is no foreign material on the cylinder block mating surface and the back surface of knock sensor.
- Make sure that knock sensor does not interfere with other parts.

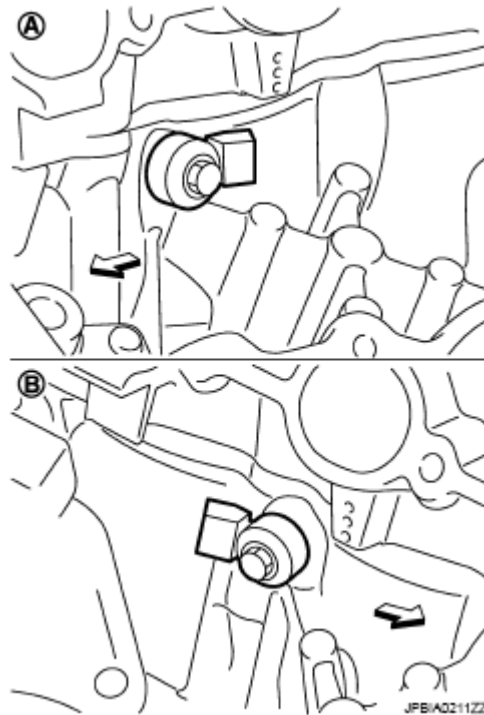


Fig. 250: Installing Knock Sensor
Courtesy of NISSAN MOTOR CO., U.S.A.

18. Note the following, assemble in the reverse order of disassembly after this step.

Flywheel (M/T models)

- Ensure the dowel pin (1) is installed in the crankshaft.

4 :Rear oil seal

- When installing flywheel (3) to crankshaft (2), be sure to correctly align crankshaft side dowel pin and flywheel side dowel pin hole (A).

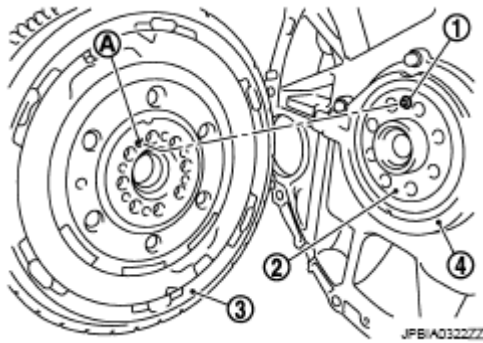


Fig. 251: Identifying Flywheel And Crankshaft
Courtesy of NISSAN MOTOR CO., U.S.A.

- There is a mating mark (B) on the clutch cover side of flywheel (4). Refer it during installation.
 1. Dowel pin
 2. Rear oil seal
 3. Crankshaft

A :Hole

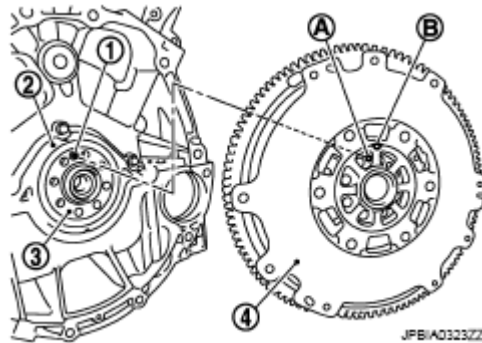


Fig. 252: Identifying Mating Mark On Clutch Cover Side Of Flywheel
Courtesy of NISSAN MOTOR CO., U.S.A.

Drive plate (A/T models)

- When installing drive plate to crankshaft, be sure to correctly align crankshaft side dowel pin and drive plate side dowel pin hole.

CAUTION: If these are not aligned correctly, engine runs roughly and "MIL" turns on.

- Install drive plate (2) and reinforcement plate (3) as shown in the figure.

1 :Ring gear

4 :Pilot converter

5 :Crankshaft

<=: Engine front

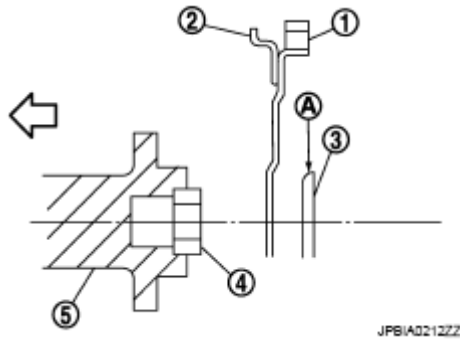


Fig. 253: Identifying Drive Plate And Reinforcement Plate
Courtesy of NISSAN MOTOR CO., U.S.A.

- Holding ring gear with the ring gear stopper [SST: KV10118600 (J-48641)].
- Tighten the mounting bolts crosswise over several times.

Inspection

CRANKSHAFT END PLAY

- Measure the clearance between thrust bearings and crankshaft arm when crankshaft is moved fully forward or backward with a dial indicator.

Standard and limit : Refer to , "CYLINDER BLOCK".

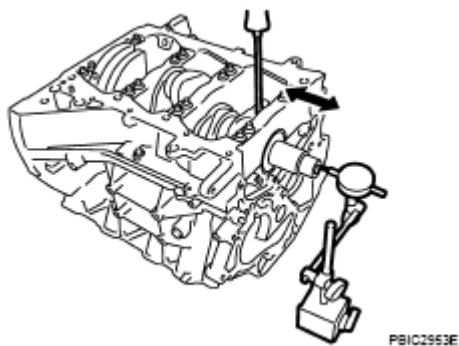


Fig. 254: Measuring Clearance Between Thrust Bearings And Crankshaft Arm
Courtesy of NISSAN MOTOR CO., U.S.A.

- If the measured value exceeds the limit, replace thrust bearings, and measure again. If it still exceeds the limit, replace crankshaft also.

CONNECTING ROD SIDE CLEARANCE

- Measure the side clearance between connecting rod and crankshaft arm with a feeler gauge.

Standard and limit : Refer to , "CYLINDER BLOCK".

- If the measured value exceeds the limit, replace connecting rod, and measure again. If it still exceeds the limit, replace crankshaft also.

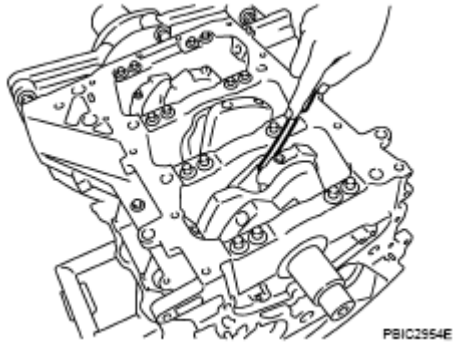


Fig. 255: Measuring Side Clearance Between Connecting Rod And Crankshaft Arm
 Courtesy of NISSAN MOTOR CO., U.S.A.

PISTON TO PISTON PIN OIL CLEARANCE

Piston Pin Hole Diameter

Measure the inner diameter of piston pin hole with an inside micrometer (A).

Standard : Refer to , "CYLINDER BLOCK".

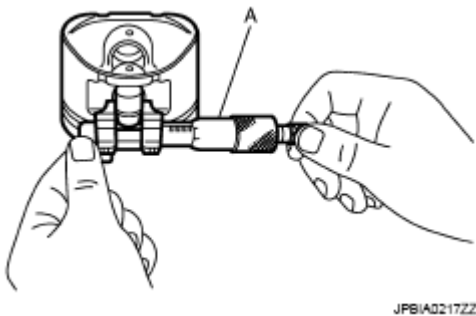


Fig. 256: Measuring Inner Diameter Of Piston Pin Hole
 Courtesy of NISSAN MOTOR CO., U.S.A.

Piston Pin Outer Diameter

Measure the outer diameter of piston pin with a micrometer (A).

Standard : Refer to , "CYLINDER BLOCK".

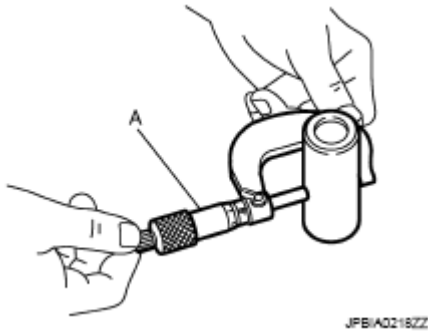


Fig. 257: Measuring Outer Diameter Of Piston Pin
 Courtesy of NISSAN MOTOR CO., U.S.A.

Piston to Piston Pin Oil Clearance

$(\text{Piston to piston pin oil clearance}) = (\text{Piston pin hole diameter}) - (\text{Piston pin outer diameter})$

Standard : Refer to , "CYLINDER BLOCK".

- If the calculated value is out of the standard, replace piston and piston pin assembly.
- When replacing piston and piston pin assembly, refer to , "DESCRIPTION".

NOTE:

- **Piston is available together with piston pin as assembly.**
- **Piston pin (piston pin hole) grade is provided only for the parts installed at the plant. For service parts, no piston pin grades can be selected. (Only "0" grade is available.)**

PISTON RING SIDE CLEARANCE

- Measure the side clearance of piston ring (1) and piston ring groove with a feeler gauge (C).
 - A. NG
 - B. OK

Standard and limit : Refer to , "CYLINDER BLOCK".

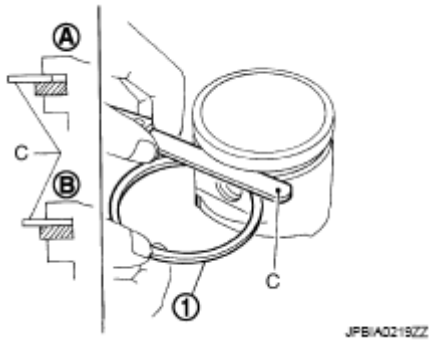


Fig. 258: Measuring Side Clearance Of Piston Ring
Courtesy of NISSAN MOTOR CO., U.S.A.

- If the measured value exceeds the limit, replace piston ring, and measure again. If it still exceeds the limit, replace piston also.

PISTON RING END GAP

- Make sure that the cylinder bore inner diameter is within the specification. Refer to , "**DISASSEMBLY AND ASSEMBLY**".
- Lubricate with new engine oil to piston (1) and piston ring (2), and then insert piston ring until middle of cylinder with piston, and measure the piston ring end gap with a feeler gauge (B).

A :Press-fit

C :Measuring point

Standard and limit : Refer to , "CYLINDER BLOCK".

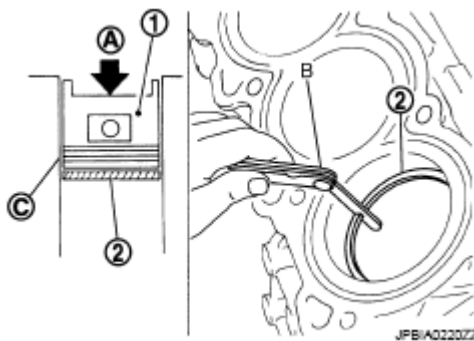


Fig. 259: Checking Piston Ring End Gap
Courtesy of NISSAN MOTOR CO., U.S.A.

- If the measured value exceeds the limit, replace piston ring, and measure again. If it still exceeds the limit, re-bore cylinder and use oversize piston and piston rings.

CONNECTING ROD BEND AND TORSION

- Check with a connecting rod aligner.
 - A. Bend
 - B. Torsion
 - C. Feeler gauge

Bend limit Torsion limit : Refer to , "CYLINDER BLOCK".

- If it exceeds the limit, replace connecting rod assembly.


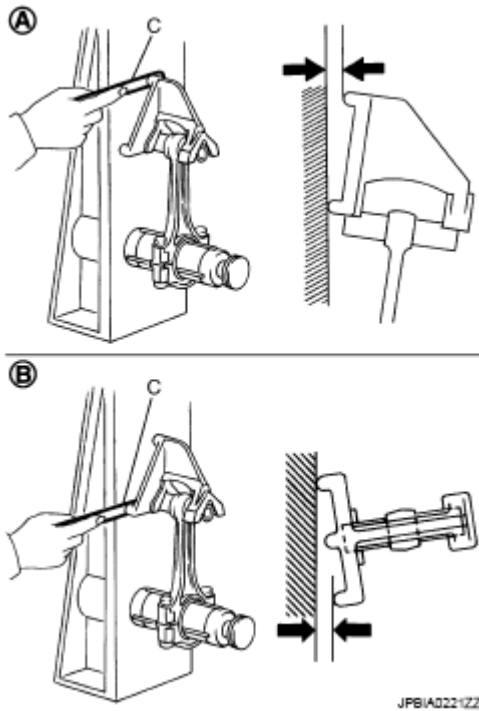


Fig. 260: Checking Connecting Rod Bend And Torsion
 Courtesy of NISSAN MOTOR CO., U.S.A.

CONNECTING ROD BIG END DIAMETER

- Install connecting rod bearing cap without installing connecting rod bearing, and tightening connecting rod bolts to the specified torque. Refer to , "DISASSEMBLY AND ASSEMBLY" for the tightening procedure.

1 : Connecting rod

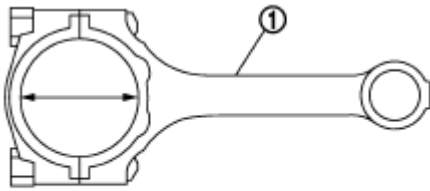

JPBIA0222ZZ

Fig. 261: Identifying Connecting Rod Big End Diameter
 Courtesy of NISSAN MOTOR CO., U.S.A.

- Measure the inner diameter of connecting rod big end with an inside micrometer.

Standard :Refer to , "CYLINDER BLOCK".


- If out of the standard, replace connecting rod assembly.

CONNECTING ROD BUSHING OIL CLEARANCE

Connecting Rod Bushing Inner Diameter

Measure the inner diameter of connecting rod bushing with an inside micrometer (A).

Standard :Refer to , "CYLINDER BLOCK".

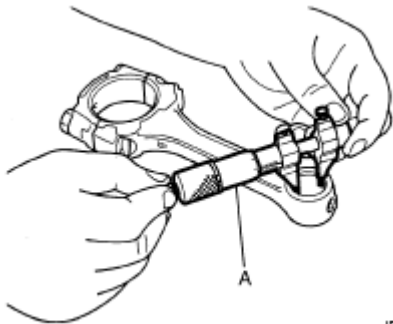

JPBIA0222ZZ

Fig. 262: Measuring Inner Diameter Of Connecting Rod Bushing
 Courtesy of NISSAN MOTOR CO., U.S.A.

Piston Pin Outer Diameter

Measure the outer diameter of piston pin with a micrometer (A).

Standard : Refer to , "CYLINDER BLOCK".

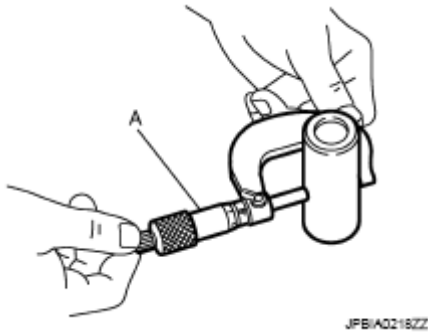


Fig. 263: Measuring Outer Diameter Of Piston Pin
Courtesy of NISSAN MOTOR CO., U.S.A.

Connecting Rod Bushing Oil Clearance

(Connecting rod bushing oil clearance) = (Connecting rod bushing inner diameter) - (Piston pin outer diameter)

Standard and limit : Refer to , "CYLINDER BLOCK".

- If the calculated value exceeds the limit, replace connecting rod assembly and/or piston and piston pin assembly.
- If replacing piston and piston pin assembly, refer to , "DESCRIPTION".
- If replacing connecting rod assembly, refer to , "CONNECTING ROD BEARING" to select the connecting rod bearing.
 - A. Sample codes
 - B. Bearing stopper groove
 - C. Small-end diameter grade
 - D. Big-end diameter grade
 - E. Weight grade
 - F. Cylinder No.
 - G. Management code
 - H. Front mark
 - I. Management code

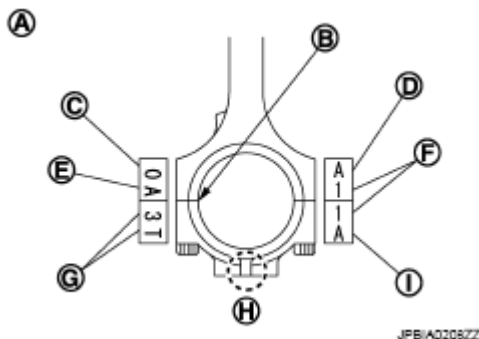



Fig. 264: Identifying Connecting Rod Assembly, Piston And Piston Pin Assembly
 Courtesy of NISSAN MOTOR CO., U.S.A.

Factory installed parts grading:

- Service parts apply only to grade "0".
 - A. Piston grade number
 - B. Front mark
 - C. Piston pin grade number

PISTON GRADE NUMBER CHART

Unit: mm (in)		
Grade	0	1
Connecting rod bushing inner diameter ⁽¹⁾	22.000 - 22.006 (0.8661 - 0.8664)	22.006 - 22.012 (0.8664 - 0.8666)
Piston pin hole diameter	21.993 - 21.999 (0.8659 - 0.8661)	21.999 - 22.005 (0.8661 - 0.8663)
Piston pin outer diameter	21.989 - 21.995 (0.8657 - 0.8659)	21.995 - 22.001 (0.8659 - 0.8662)
(1) After installing in connecting rod		

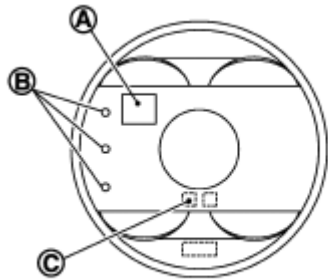

JPE/A0267ZZ

Fig. 265: Identifying Front Mark On Piston
 Courtesy of NISSAN MOTOR CO., U.S.A.

CYLINDER BLOCK DISTORTION

- Using a scraper, remove gasket on the cylinder block surface, and also remove engine oil, scale, carbon, or other contamination.

CAUTION: Be careful not to allow gasket flakes to enter engine oil or engine coolant passages.

- Measure the distortion on the cylinder block upper face at some different points in six directions (C, D, E, F, G and H) with a straightedge (A) and a feeler gauge (B).

Limit : Refer to , "CYLINDER BLOCK".

- If it exceeds the limit, replace cylinder block.

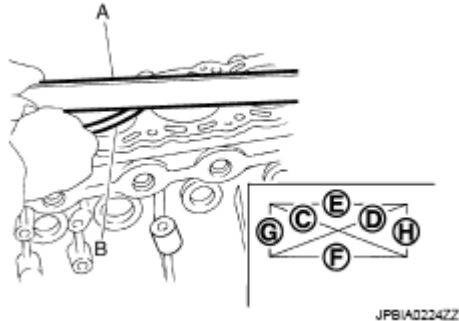


Fig. 266: Measuring Distortion On Cylinder Block Upper Face
Courtesy of NISSAN MOTOR CO., U.S.A.

MAIN BEARING HOUSING INNER DIAMETER

- Install lower cylinder block (2) without installing main bearings, and tighten lower cylinder block bolts to the specified torque. Refer to , "DISASSEMBLY AND ASSEMBLY" for the tightening procedure.
- Measure the inner diameter of main bearing housing with a bore gauge.

Standard : Refer to , "CYLINDER BLOCK".

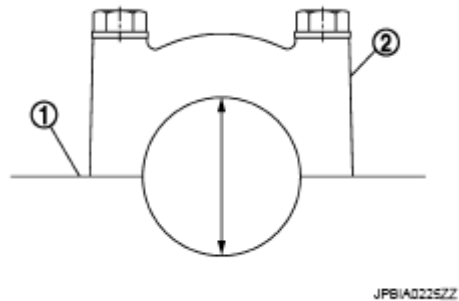


Fig. 267: Identifying Inner Diameter Of Main Bearing Housing
Courtesy of NISSAN MOTOR CO., U.S.A.

- If out of the standard, replace cylinder block (1) and lower cylinder block as assembly.

NOTE: **Cylinder block cannot be replaced as a single part, because it is machined together with lower cylinder block.**

PISTON TO CYLINDER BORE CLEARANCE

Cylinder Bore inner Diameter

- Using a bore gauge, measure cylinder bore for wear, out-of-round and taper at six different points on each

cylinder. [(A) and (B) directions at (C), (D) and (E)] is in longitudinal direction of engine.

f :10 mm (0.39 in)

g :60 mm (2.36 in)

h :120 mm (4.72 in)

Standard and limit : Refer to , "CYLINDER BLOCK".

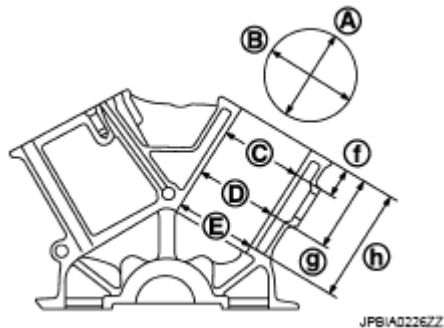


Fig. 268: Identifying Cylinder Bore
Courtesy of NISSAN MOTOR CO., U.S.A.

- If the measured value exceeds the limit, or if there are scratches and/or seizure on the cylinder inner wall, hone or re-bore the inner wall.
- Oversize piston is provided. When using oversize piston, re-bore cylinder so that the clearance of the piston-to-cylinder bore satisfies the standard.

CAUTION: When using oversize piston, use oversize pistons for all cylinders with oversize piston rings.

Oversize (O/S) : 0.2 mm (0.008 in)

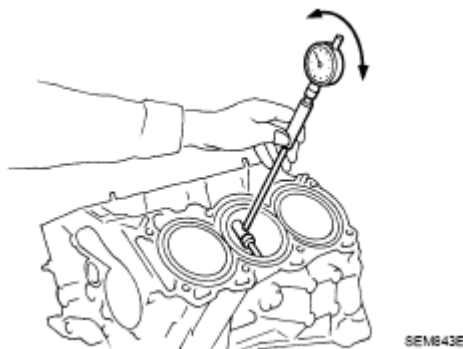


Fig. 269: Checking Clearance Of Piston-To-Cylinder Bore
Courtesy of NISSAN MOTOR CO., U.S.A.

Piston Skirt Diameter

Measure the outer diameter of piston skirt with a micrometer (A).

Measure point Standard : Refer to , "CYLINDER BLOCK".

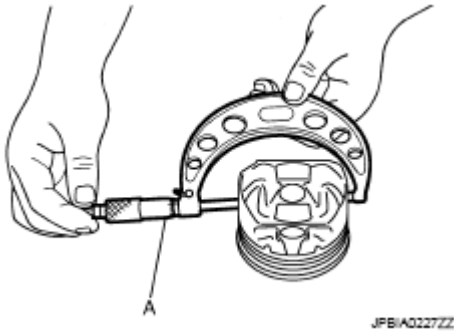


Fig. 270: Measuring Outer Diameter Of Piston Skirt
Courtesy of NISSAN MOTOR CO., U.S.A.

Piston-to-Cylinder Bore Clearance

Calculate by piston skirt diameter and cylinder bore inner diameter [direction (B), position (D)].

(Clearance) = (Cylinder bore inner diameter) - (Piston skirt diameter).

Standard and limit : Refer to , "CYLINDER BLOCK".

- If the calculated value exceeds the limit, replace piston and piston pin assembly. Refer to , "CYLINDER BLOCK".

Re-boring Cylinder Bore

1. Cylinder bore size is determined by adding piston to cylinder bore clearance to piston skirt diameter.

Re-bored size calculation: $D = A + B - C$

where,

D: Bored diameter

A: Piston skirt diameter as measured

B: Piston to cylinder bore clearance (standard value)

C: Honing allowance 0.02 mm (0.0008 in)

2. Install lower cylinder block, and tighten to the specified torque. Otherwise, cylinder bores may be

distorted in final assembly.

3. Cut cylinder bores.

NOTE:

- When any cylinder needs boring, all other cylinders must also be bored.
- Do not cut too much out of cylinder bore at a time. Cut only 0.05 mm (0.0020 in) or so in diameter at a time.

4. Hone cylinders to obtain the specified piston to cylinder bore clearance.

5. Measure finished cylinder bore for the out-of-round and taper.

NOTE: Measurement should be done after cylinder bore cools down.

CRANKSHAFT MAIN JOURNAL DIAMETER

- Measure the outer diameter of crankshaft main journals with a micrometer.

Standard : Refer to , "CYLINDER BLOCK".

- If out of the standard, measure the main bearing oil clearance. Then use undersize bearing. Refer to , "MAIN BEARING".

CRANKSHAFT PIN JOURNAL DIAMETER

- Measure the outer diameter of crankshaft pin journal with a micrometer (A).

Standard : Refer to , "CYLINDER BLOCK".

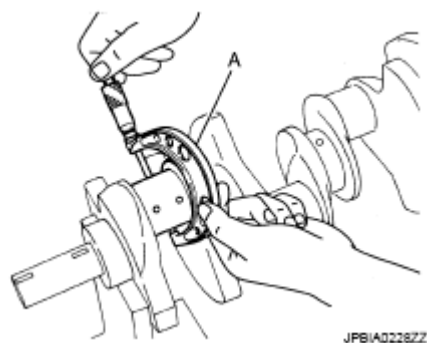


Fig. 271: Measuring Outer Diameter Of Crankshaft Pin Journal
Courtesy of NISSAN MOTOR CO., U.S.A.

- If out of the standard, measure the connecting rod bearing oil clearance. Then use undersize bearing. Refer to , "CONNECTING ROD BEARING".

CRANKSHAFT OUT-OF-ROUND AND TAPER

- Measure the dimensions at four different points as shown in the figure on each main journal and pin journal with a micrometer.
- Out-of-round is indicated by the difference in the dimensions between (d) and (C) at (a) and (b).
- Taper is indicated by the difference in the dimensions between.

Limit : Refer to , "CYLINDER BLOCK".

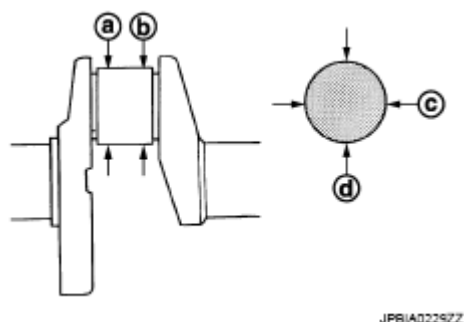


Fig. 272: Checking Crankshaft Out-Of-Round And Taper
Courtesy of NISSAN MOTOR CO., U.S.A.

- If the measured value exceeds the limit, correct or replace crankshaft.
- If corrected, measure the bearing oil clearance of the corrected main journal and/or pin journal. Then select the main bearing and/ or connecting rod bearing. Refer to , "MAIN BEARING" and/ or , "CONNECTING ROD BEARING".

CRANKSHAFT RUNOUT

- Place V-block on precise flat table, and support the journals on the both end of crankshaft.
- Place a dial indicator straight up on the No. 3 journal.
- While rotating crankshaft, read the movement of the pointer on a dial indicator. (Total indicator reading)

Standard and limit : Refer to , "CYLINDER BLOCK".

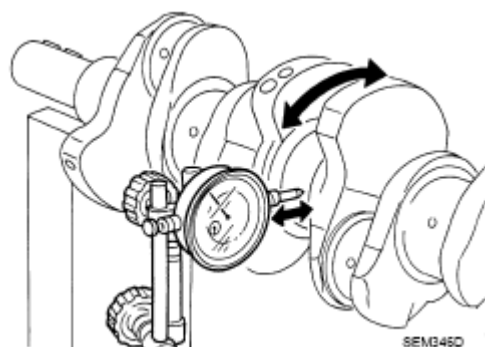


Fig. 273: Checking Crankshaft Runout
Courtesy of NISSAN MOTOR CO., U.S.A.

- If it exceeds the limit, replace crankshaft.


CONNECTING ROD BEARING OIL CLEARANCE

Method by Calculation

- Install connecting rod bearings (1) to connecting rod (2) and connecting rod cap, and tighten connecting rod bolts to the specified torque. Refer to , "**DISASSEMBLY AND ASSEMBLY**" for the tightening procedure.
- Measure the inner diameter of connecting rod bearing with an inside micrometer.

(Oil clearance) = (Connecting rod bearing inner diameter) - (Crankshaft pin journal diameter)

Standard and limit : Refer to , "MAIN BEARING".

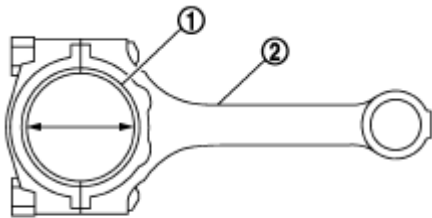

JPS/A0230ZZ

Fig. 274: Identifying Inner Diameter Of Connecting Rod Bearing
Courtesy of NISSAN MOTOR CO., U.S.A.

- If the calculated value exceeds the limit, select proper connecting rod bearing according to connecting rod big end diameter and crankshaft pin journal diameter to obtain the specified bearing oil clearance. Refer to , "**DESCRIPTION**".

Method of Using Plastigage

- Remove oil and dust on crankshaft pin journal and the surfaces of each bearing completely.
- Cut a plastigage slightly shorter than the bearing width, and place it in crankshaft axial direction, avoiding oil holes.
- Install connecting rod bearings to connecting rod and connecting rod bearing cap, and tighten connecting rod bolts to the specified torque. Refer to , "**DISASSEMBLY AND ASSEMBLY**" for the tightening procedure.

CAUTION: Do not rotate crankshaft.

- Remove connecting rod bearing cap and bearings, and using the scale on the plastigage bag, measure the plastigage width.

NOTE: The procedure when the measured value exceeds the limit is same as that described in the "Method by Calculation".

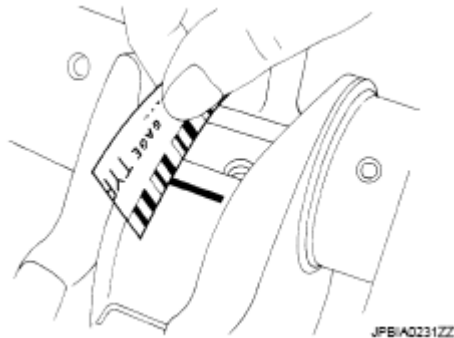


Fig. 275: Measuring Plastigage Width
Courtesy of NISSAN MOTOR CO., U.S.A.

MAIN BEARING OIL CLEARANCE

Method by Calculation

- Install main bearings (3) to cylinder block (1) and lower cylinder block (2), and tighten lower cylinder block bolts to the specified torque. Refer to , "**DISASSEMBLY AND ASSEMBLY**" for the tightening procedure.
- Measure the inner diameter of main bearing with a bore gauge.

(Oil clearance) = (Main bearing inner diameter) - (Crankshaft main journal diameter)

Standard and limit : Refer to , "**MAIN BEARING**".

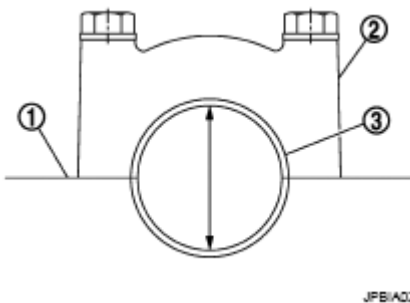


Fig. 276: Identifying Inner Diameter Of Main Bearing
Courtesy of NISSAN MOTOR CO., U.S.A.

- If the calculated value exceeds the limit, select proper main bearing according to main bearing inner diameter and crankshaft main journal diameter to obtain the specified bearing oil clearance. Refer to , "**DESCRIPTION**".

Method of Using Plastigage

- Remove engine oil and dust on crankshaft journal and the surfaces of each bearing completely.
- Cut a plastigage slightly shorter than the bearing width, and place it in crankshaft axial direction, avoiding oil holes.
- Install main bearing to cylinder block and lower cylinder block, and tighten lower cylinder block bolts with lower cylinder block to the specified torque. Refer to , "DISASSEMBLY AND ASSEMBLY" for the tightening procedure.

CAUTION: Never rotate crankshaft.

- Remove lower cylinder block and bearings, and using the scale on the plastigage bag, measure the plastigage width.

NOTE: The procedure when the measured value exceeds the limit is same as that described in the "Method by Calculation".

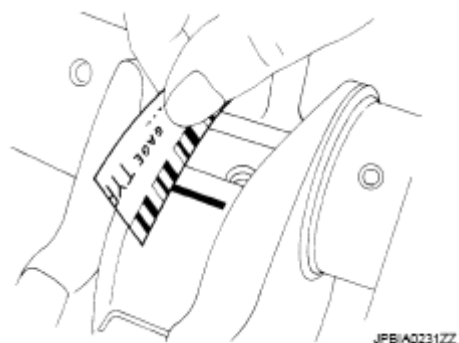


Fig. 277: Measuring Plastigage Width
Courtesy of NISSAN MOTOR CO., U.S.A.

MAIN BEARING CRUSH HEIGHT

- When lower cylinder block is removed after being tightened to the specified torque with main bearings (1) installed, the tip end of bearing must protrude. Refer to , "DISASSEMBLY AND ASSEMBLY" for the tightening procedure.

A : Crush height

Standard : There must be crush height.

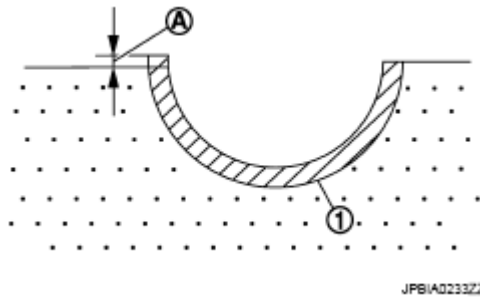


Fig. 278: Identifying Main Bearings
Courtesy of NISSAN MOTOR CO., U.S.A.

- If the standard is not met, replace main bearings.

CONNECTING ROD BEARING CRUSH HEIGHT

- When connecting rod bearing cap is removed after being tightened to the specified torque with connecting rod bearings (1) installed, the tip end of bearing must protrude. Refer to , "**DISASSEMBLY AND ASSEMBLY**" for the tightening procedure.

A :Crush height

Standard : There must be crush height.

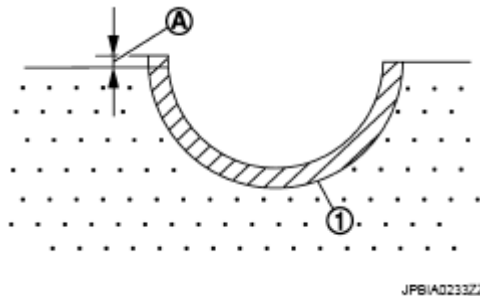



Fig. 279: Identifying Connecting Rod Bearings
Courtesy of NISSAN MOTOR CO., U.S.A.

- If the standard is not met, replace connecting rod bearings.

LOWER CYLINDER BLOCK BOLT OUTER DIAMETER

- Measure the outer diameters (c), (d) at two positions as shown in the figure.
 - 20 mm (0.79 in)
 - 30 mm (1.18 in)

e :10 mm (0.39 in)

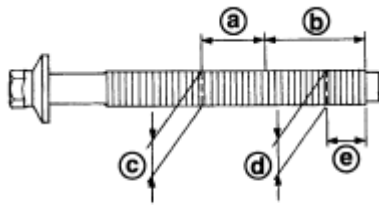

JPB(A0234ZZ

Fig. 280: Identifying Lower Cylinder Block Bolt Outer Diameter
Courtesy of NISSAN MOTOR CO., U.S.A.

- If reduction appears in (a) range, regard it (d) as (c).

Limit [(c) - (d)] : 0.11 mm (0.0043 in)

- If it exceeds the limit (large difference in dimensions), replace lower cylinder block bolt with new one.

CONNECTING ROD BOLT OUTER DIAMETER

1. Measure the outer diameters [(a), (b) and (c)] at the position shown in the figure.


a :Value at the end of the smaller diameter of the bolt

b :Value at the end of the smaller diameter of the bolt [opposite side of (a)]

c :Value of the smallest diameter of the smaller of the bolt

2. Obtain a mean value (d) of (a) and (b).
3. Subtract (c) from (d).

Limit [(d) - (c)] : 0.09 mm (0.0035 in)

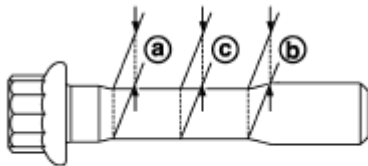

JPB(A0262ZZ

Fig. 281: Identifying Connecting Rod Bolt Outer Diameter
Courtesy of NISSAN MOTOR CO., U.S.A.

4. If it exceeds the limit (large difference in dimensions), replace the bolt with new one.

FLYWHEEL DEFLECTION (M/T models)

- Measure the deflection of flywheel contact surface to clutch with a dial indicator (A).
- Measure the deflection at 210 mm (8.27 in) dia.

Standard : 0.45 mm (0.0177 in) or less.

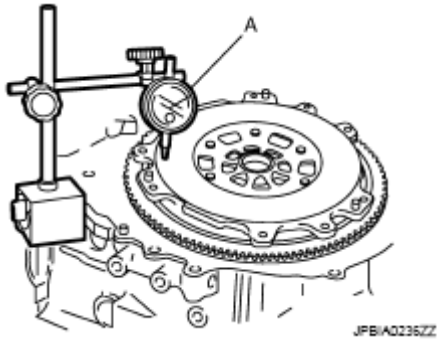


Fig. 282: Measuring Deflection Of Flywheel Contact Surface
Courtesy of NISSAN MOTOR CO., U.S.A.

- If measured value is out of the standard, replace flywheel.

MOVEMENT AMOUNT OF FLYWHEEL (M/T models)

CAUTION: Do not disassemble double mass flywheel.

Movement Amount in Radial (Rotation) Direction

Check the movement amount of radial (rotation) direction with the following procedure:

1. Install a bolt to clutch cover mounting hole, and place a torque wrench on the extended line of the flywheel center line.
 - Tighten bolt at a force of 9.8 N.m (1.0 kg-m, 87 in-lb) to keep it from loosening.
2. Put a matching mark on circumferences of the two flywheel masses without applying any load (Measurement standard points).
 1. Clutch cover mounting bolt
 2. Flywheel (transaxle side)

A :Torque wrench

b :9.8 N.m (1.0 kg-m, 87 in-lb)

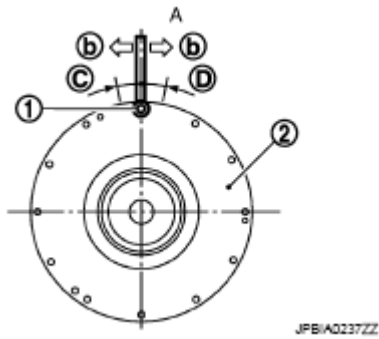


Fig. 283: Identifying Matching Mark On Circumferences Of Flywheel
Courtesy of NISSAN MOTOR CO., U.S.A.

3. Apply a force of 9.8 N.m (1.0 kg-m, 87 in-lb) in each direction, and mark the movement amount on the mass on the transaxle side.
4. Measure the dimensions of movement amounts (C) and (D) on circumference of the flywheel on the transaxle side.

Standard: Less than 24 mm (0.94 in)

- If measured value is out of the standard, replace flywheel.

DRIVE PLATE (A/T models)

- Check drive plate and signal plate for deformation or damage.

CAUTION:

- Do not disassemble drive plate.
- Do not place drive plate with signal plate facing down.
- When handling signal plate, take care not to damage or scratch it.
- Handle signal plate in a manner that prevents it from becoming magnetized.

- If anything is found, replace drive plate.

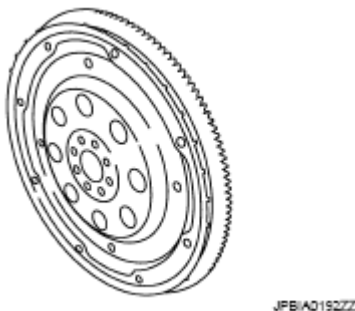


Fig. 284: Identifying Drive Plate


Courtesy of NISSAN MOTOR CO., U.S.A.

OIL JET

- Check nozzle for deformation and damage.
- Blow compressed air from nozzle, and check for clogs.
- If it is not satisfied, clean or replace oil jet.

OIL JET RELIEF VALVE

- Using a clean plastic stick, press check valve in oil jet relief valve. Make sure that valve moves smoothly with proper reaction force.
- If it is not satisfied, replace oil jet relief valve.

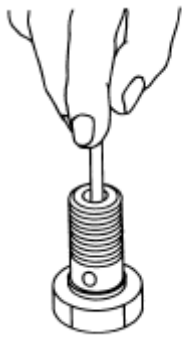

EMU04680

Fig. 285: Pressing Check Valve In Oil Jet Relief Valve
 Courtesy of NISSAN MOTOR CO., U.S.A.

HOW TO SELECT PISTON AND BEARING

Description

PISTON AND BEARING SPECIFICATIONS

Selection points	Selection parts	Selection items	Selection methods
Between cylinder block and crankshaft	Main bearing	Main bearing grade (bearing thickness)	Determined by match of cylinder block bearing housing grade (inner diameter of housing) and crankshaft journal grade (outer diameter of journal)
Between crankshaft and connecting rod	Connecting rod bearing	Connecting rod bearing grade (bearing thickness)	Combining service grades for connecting rod big end diameter and crankshaft pin outer diameter determine connecting rod bearing selection.
	Piston and piston pin	Piston grade	Piston grade = cylinder bore

2008 Infiniti G35

2008 ENGINE Engine Mechanical - G35 (Sedan)

Between cylinder block and piston	assembly (Piston is available together with piston pin as assembly.)	(piston skirt diameter)	grade (inner diameter of bore)
Between piston and connecting rod ⁽¹⁾	-	-	-

(1) For the service parts, the grade for fitting cannot be selected between piston pin and connecting rod. (Only "0" grade is available.) The information at the shipment from the plant is described as a reference.

- The identification grade stamped on each part is the grade for the dimension measured in new condition. This grade cannot apply to reused parts.
- For reused or repaired parts, measure the dimension accurately. Determine the grade by comparing the measurement with the values of each selection table.
- For details of the measurement method of each part, the reuse standards and the selection method of the selective fitting parts, refer to the text.

Piston**WHEN NEW CYLINDER BLOCK IS USED**

Check the cylinder bore grade ("1", "2" or "3") on rear side of cylinder block, and select piston of the same grade.

- A. Bearing housing grade No. 1
- B. Bearing housing grade No. 2
- C. Bearing housing grade No. 3
- D. Bearing housing grade No. 4
- E. Cylinder bore grade No. 1
- F. Cylinder bore grade No. 2
- G. Cylinder bore grade No. 3
- H. Cylinder bore grade No. 4
- I. Cylinder bore grade No. 5
- J. Cylinder bore grade No. 6
- K. Identification

<=: Engine front

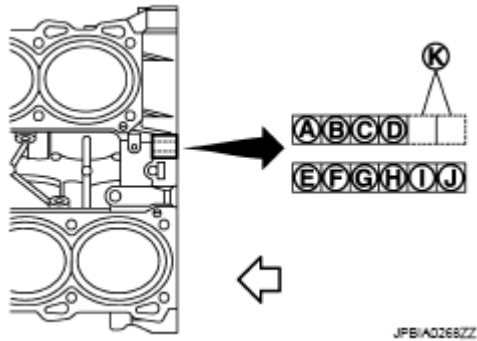


Fig. 286: Identifying Cylinder Bore Grade
Courtesy of NISSAN MOTOR CO., U.S.A.

NOTE: Piston is available with piston pin as a set for the service part. (Only "0" grade piston pin is available.)

WHEN NEW CYLINDER BLOCK IS REUSED

1. Measure the cylinder bore inner diameter. Refer to , "**CYLINDER BLOCK**".
2. Determine the bore grade by comparing the measurement with the values under the cylinder bore inner diameter of the "PISTON SELECTION TABLE".
 - A. Piston grade number
 - B. Front mark
 - C. Piston pin grade number

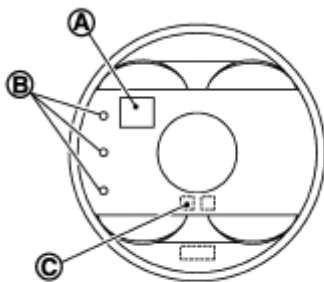


Fig. 287: Identifying Front Mark On Piston
Courtesy of NISSAN MOTOR CO., U.S.A.

3. Select piston of the same grade.

PISTON SELECTION TABLE

PISTON SELECTION CHART

Unit: mm (in)			
Grade	1	2	3

Cylinder bore inner diameter	95.500 - 95.510 (3.7598 - 3.7602)	95.510 - 95.520 (3.7602 - 3.7606)	95.520 - 95.530 (3.7606 - 3.7610)
Piston skirt diameter	95.480 - 95.490 (3.7590 - 3.7594)	95.490 - 95.500 (3.7594 - 3.7598)	95.500 - 95.510 (3.7598 - 3.7602)

NOTE:

- Piston is available together with piston pin as assembly.
- Piston pin (piston pin hole) grade is provided only for the parts installed at the plant. For service parts, no piston pin grades can be selected. (Only "0" grade is available.)
- No second grade mark is available on piston.

Connecting Rod Bearing**WHEN NEW CONNECTING ROD AND CRANKSHAFT ARE USED**

1. Apply connecting rod big end diameter grade stamped (D) on connecting rod side face to the row in the "CONNECTING ROD BEARING SELECTION TABLE".

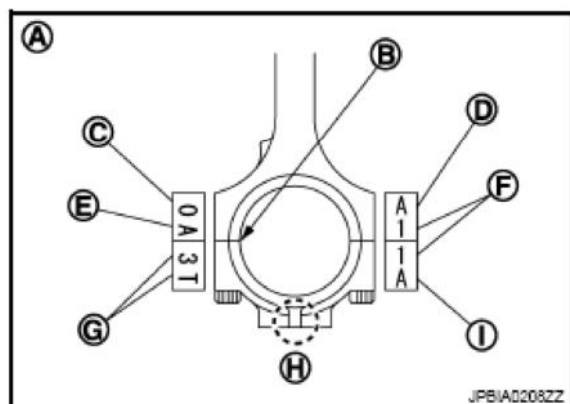


Fig. 288: Identifying Rod Big End Diameter Grade Stamped
 Courtesy of NISSAN MOTOR CO., U.S.A.

- A. Sample codes
 - B. Bearing stopper groove
 - C. Small-end diameter grade
 - D. Big end diameter grade
 - E. Weight grade
 - F. Cylinder No.
 - G. Management code
 - H. Front mark
 - I. Management code
2. Apply crankshaft pin journal diameter grade stamped on crankshaft front side to the column in the "CONNECTING ROD BEARING SELECTION TABLE"

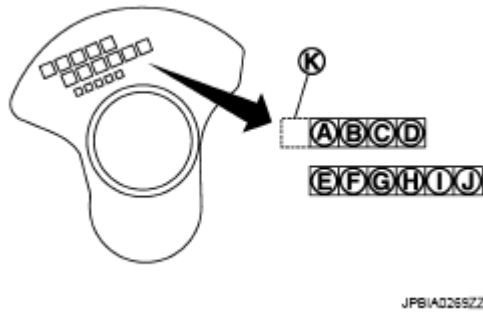


Fig. 289: Identifying Pin Diameter Grade
Courtesy of NISSAN MOTOR CO., U.S.A.

- A. Journal diameter grade No. 1
 - B. Journal diameter grade No. 2
 - C. Journal diameter grade No. 3
 - D. Journal diameter grade No. 4
 - E. Pin diameter grade No. 1
 - F. Pin diameter grade No. 2
 - G. Pin diameter grade No. 3
 - H. Pin diameter grade No. 4
 - I. Pin diameter grade No. 5
 - J. Pin diameter grade No. 6
 - K. Identification
3. Read the symbol at the cross point of selected row and column in the "CONNECTING ROD BEARING SELECTION TABLE".
 4. Apply the symbol obtained to the "CONNECTING ROD BEARING GRADE TABLE" to select connecting rod bearing.

WHEN CONNECTING ROD AND CRANKSHAFT ARE REUSED

1. Measure the connecting rod big end diameter. Refer to , "**CONNECTING ROD BEARING**".
2. Make sure that the connecting rod big end diameter is within the standard value.
3. Measure the crankshaft pin journal diameter. Refer to , "**CYLINDER BLOCK**".
4. Determine the grade of crankshaft pin diameter grade by corresponding to the measured dimension in "Crankshaft pin journal diameter" column of "CONNECTING ROD BEARING SELECTION TABLE".
5. Select connecting rod bearing of the same grade.

CONNECTING ROD BEARING SELECTION TABLE

Connecting rod big end diameter Unit: mm (in) Crankshaft pin journal diameter Unit: mm (in)		Mark	
		Hole diameter	
Mark	Axle diameter		
		57.000 - 57.001 (2.2441 - 2.2441)	0
		57.001 - 57.002 (2.2441 - 2.2442)	1
		57.002 - 57.003 (2.2442 - 2.2442)	2
		57.003 - 57.004 (2.2442 - 2.2442)	3
		57.004 - 57.005 (2.2442 - 2.2443)	4
		57.005 - 57.006 (2.2443 - 2.2443)	5
		57.006 - 57.007 (2.2443 - 2.2444)	6
		57.007 - 57.008 (2.2444 - 2.2444)	7
		57.008 - 57.009 (2.2444 - 2.2444)	8
		57.009 - 57.010 (2.2444 - 2.2445)	9
		57.010 - 57.011 (2.2445 - 2.2445)	W
		57.011 - 57.012 (2.2445 - 2.2446)	X
		57.012 - 57.013 (2.2446 - 2.2446)	Y
A	53.974 - 53.973 (2.1250 - 2.1249)	0 0 0 0 0 0 1 1 1 1 1 1 1 2	
B	53.973 - 53.972 (2.1249 - 2.1249)	0 0 0 0 0 1 1 1 1 1 1 1 2 2	
C	53.972 - 53.971 (2.1249 - 2.1248)	0 0 0 0 1 1 1 1 1 1 1 2 2 2	
D	53.971 - 53.970 (2.1248 - 2.1248)	0 0 0 1 1 1 1 1 1 1 2 2 2 2	
E	53.970 - 53.969 (2.1248 - 2.1248)	0 0 1 1 1 1 1 1 1 2 2 2 2 2	
F	53.969 - 53.968 (2.1248 - 2.1247)	0 1 1 1 1 1 1 1 2 2 2 2 2 2	
G	53.968 - 53.967 (2.1247 - 2.1247)	1 1 1 1 1 1 1 2 2 2 2 2 2 3	
H	53.967 - 53.966 (2.1247 - 2.1246)	1 1 1 1 1 2 2 2 2 2 2 2 3 3	
J	53.966 - 53.965 (2.1246 - 2.1246)	1 1 1 1 2 2 2 2 2 2 2 3 3 3	
K	53.965 - 53.964 (2.1246 - 2.1246)	1 1 1 2 2 2 2 2 2 2 3 3 3 3	
L	53.964 - 53.963 (2.1246 - 2.1245)	1 1 2 2 2 2 2 2 2 3 3 3 3 3	
M	53.963 - 53.962 (2.1245 - 2.1245)	1 2 2 2 2 2 2 2 3 3 3 3 3 3	
N	53.962 - 53.961 (2.1245 - 2.1244)	2 2 2 2 2 2 2 3 3 3 3 3 3 4	
P	53.961 - 53.960 (2.1244 - 2.1244)	2 2 2 2 2 3 3 3 3 3 3 3 4 4	
R	53.960 - 53.959 (2.1244 - 2.1244)	2 2 2 2 3 3 3 3 3 3 3 4 4 4	
S	53.959 - 53.958 (2.1244 - 2.1243)	2 2 2 3 3 3 3 3 3 3 4 4 4 4	
T	53.958 - 53.957 (2.1243 - 2.1243)	2 2 3 3 3 3 3 3 3 4 4 4 4 4	
U	53.957 - 53.956 (2.1243 - 2.1242)	2 3 3 3 3 3 3 3 4 4 4 4 4 4	

JPB/A0265ZZ

Fig. 290: Connecting Rod Bearing Selection Chart
 Courtesy of NISSAN MOTOR CO., U.S.A.

CONNECTING ROD BEARING GRADE TABLE

Connecting rod bearing grade table : Refer to , "CONNECTING ROD BEARING".

UNDERSIZE BEARING USAGE GUIDE

- When the specified connecting rod bearing oil clearance is not obtained with standard size connecting rod bearings, use undersize (US) bearings.
- When using undersize (US) bearing, measure the connecting rod bearing inner diameter with bearing installed, and grind crankshaft pin so that the connecting rod bearing oil clearance satisfies the standard.

CAUTION: In grinding crankshaft pin to use undersize bearings, keep the fillet R (A) [1.5 - 1.7 mm (0.059 - 0.067 in)].



Fig. 291: Identifying Crankshaft Pin
 Courtesy of NISSAN MOTOR CO., U.S.A.

Bearing undersize table : Refer to , "CONNECTING ROD BEARING".

Main Bearing

WHEN NEW CYLINDER BLOCK AND CRANKSHAFT ARE USED

1. "MAIN BEARING SELECTION TABLE" rows correspond to bearing housing grade on rear left side of cylinder block.
 - A. Bearing housing grade No. 1
 - B. Bearing housing grade No. 2
 - C. Bearing housing grade No. 3
 - D. Bearing housing grade No. 4
 - E. Cylinder bore grade No. 1
 - F. Cylinder bore grade No. 2
 - G. Cylinder bore grade No. 3
 - H. Cylinder bore grade No. 4
 - I. Cylinder bore grade No. 5
 - J. Cylinder bore grade No. 6
 - K. Identification code

<=: Engine front

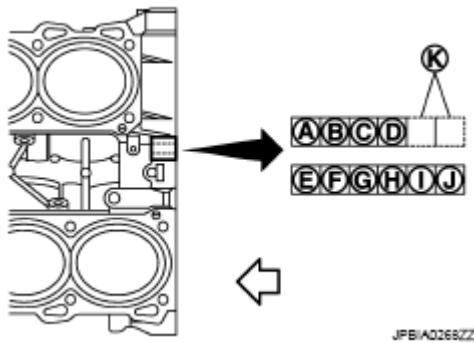


Fig. 292: Identifying Bearing Housing Grade
Courtesy of NISSAN MOTOR CO., U.S.A.

2. "MAIN BEARING SELECTION TABLE" columns correspond to journal diameter grade on front side of crankshaft.
 - A. Journal diameter grade No. 1
 - B. Journal diameter grade No. 2
 - C. Journal diameter grade No. 3
 - D. Journal diameter grade No. 4
 - E. Pin diameter grade No. 1
 - F. Pin diameter grade No. 2
 - G. Pin diameter grade No. 3
 - H. Pin diameter grade No. 4
 - I. Pin diameter grade No. 5
 - J. Pin diameter grade No. 6
 - K. Identification code

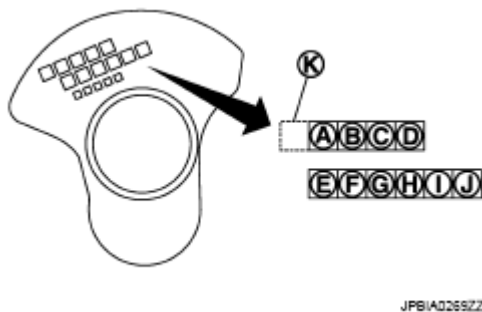


Fig. 293: Identifying Journal Diameter Grade
Courtesy of NISSAN MOTOR CO., U.S.A.

3. Select main bearing grade at the point where selected row and column meet in "MAIN BEARING SELECTION TABLE".
4. Apply sign at crossing in above step 3 to "MAIN BEARING GRADE TABLE".

NOTE:

- **"MAIN BEARING GRADE TABLE"** applies to all journals.
- **Service parts is available as a set of both upper and lower.**

WHEN CYLINDER BLOCK AND CRANKSHAFT ARE REUSED

1. Measure cylinder block main bearing housing inner diameter and crankshaft main journal diameter. Refer to , **"MAIN BEARING"** and , **"CYLINDER BLOCK"**.
2. Correspond the measured dimension in "Cylinder block main bearing housing inner diameter" row of "MAIN BEARING SELECTION TABLE".
3. Correspond the measured dimension in "Crankshaft main journal diameter" column of "MAIN BEARING SELECTION TABLE".
4. Follow step 3 and later in "When New Cylinder Block and Crankshaft are Used".

MAIN BEARING SELECTION TABLE

Cylinder block main bearing housing inner diameter Unit: mm (in) Crankshaft main journal diameter Unit: mm (in)		Mark	Hole diameter																									
		A	B	C	D	E	F	G	H	J	K	L	M	N	P	R	S	T	U	V	W	X	Y	4	7			
Mark	Axle diameter	69.993 - 69.994 (2.7556 - 2.7557)	69.994 - 69.995 (2.7557 - 2.7557)	69.995 - 69.996 (2.7557 - 2.7557)	69.996 - 69.997 (2.7557 - 2.7558)	69.997 - 69.998 (2.7558 - 2.7558)	69.998 - 69.999 (2.7558 - 2.7559)	69.999 - 70.000 (2.7559 - 2.7559)	70.000 - 70.001 (2.7559 - 2.7559)	70.001 - 70.002 (2.7559 - 2.7560)	70.002 - 70.003 (2.7560 - 2.7560)	70.003 - 70.004 (2.7560 - 2.7561)	70.004 - 70.005 (2.7561 - 2.7561)	70.005 - 70.006 (2.7561 - 2.7561)	70.006 - 70.007 (2.7561 - 2.7562)	70.007 - 70.008 (2.7562 - 2.7562)	70.008 - 70.009 (2.7562 - 2.7563)	70.009 - 70.010 (2.7563 - 2.7563)	70.010 - 70.011 (2.7563 - 2.7563)	70.011 - 70.012 (2.7563 - 2.7564)	70.012 - 70.013 (2.7564 - 2.7564)	70.013 - 70.014 (2.7564 - 2.7565)	70.014 - 70.015 (2.7565 - 2.7565)	70.015 - 70.016 (2.7565 - 2.7565)	70.016 - 70.017 (2.7565 - 2.7566)			
A	64.975 - 64.974 (2.5581 - 2.5580)	0	0	0	01	01	01	1	1	1	12	12	12	2	2	2	23	23	23	3	3	3	3	3	3	3		
B	64.974 - 64.973 (2.5580 - 2.5580)	0	0	01	01	01	1	1	1	12	12	12	2	2	2	2	23	23	23	3	3	3	3	3	3	3		
C	64.973 - 64.972 (2.5580 - 2.5579)	0	01	01	01	1	1	1	1	12	12	12	2	2	2	2	23	23	23	3	3	3	3	3	3	3		
D	64.972 - 64.971 (2.5579 - 2.5579)	01	01	1	1	1	1	12	12	12	12	2	2	2	2	23	23	23	3	3	3	3	3	3	3	3		
E	64.971 - 64.970 (2.5579 - 2.5579)	01	01	1	1	1	12	12	12	2	2	2	2	23	23	23	3	3	3	3	3	3	3	3	3	3		
F	64.970 - 64.969 (2.5579 - 2.5578)	01	1	1	1	12	12	12	2	2	2	2	23	23	23	3	3	3	3	3	3	3	3	3	3	3		
G	64.969 - 64.968 (2.5578 - 2.5578)	1	1	1	12	12	12	2	2	2	2	23	23	23	3	3	3	3	3	3	3	3	3	3	3	3		
H	64.968 - 64.967 (2.5578 - 2.5578)	1	1	12	12	12	2	2	2	23	23	23	3	3	3	3	3	3	3	3	3	3	3	3	3	3		
J	64.967 - 64.966 (2.5578 - 2.5577)	1	12	12	12	2	2	2	23	23	23	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3		
K	64.966 - 64.965 (2.5577 - 2.5577)	12	12	12	2	2	2	23	23	23	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3		
L	64.965 - 64.964 (2.5577 - 2.5576)	12	12	2	2	2	23	23	23	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3		
M	64.964 - 64.963 (2.5576 - 2.5576)	12	2	2	2	23	23	23	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3		
N	64.963 - 64.962 (2.5576 - 2.5576)	2	2	2	23	23	23	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3		
P	64.962 - 64.961 (2.5576 - 2.5575)	2	2	23	23	23	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3		
R	64.961 - 64.960 (2.5575 - 2.5575)	2	23	23	23	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3		
S	64.960 - 64.959 (2.5575 - 2.5574)	23	23	23	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3		
T	64.959 - 64.958 (2.5574 - 2.5574)	23	23	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3		
U	64.958 - 64.957 (2.5574 - 2.5574)	23	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3		
V	64.957 - 64.956 (2.5574 - 2.5573)	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3		
W	64.956 - 64.955 (2.5573 - 2.5573)	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3		
X	64.955 - 64.954 (2.5573 - 2.5572)	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3		
Y	64.954 - 64.953 (2.5572 - 2.5572)	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3		
4	64.953 - 64.952 (2.5572 - 2.5572)	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3		
7	64.952 - 64.951 (2.5572 - 2.5571)	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3		

JPBIA0264ZZ

Fig. 294: Main Bearing Selection Chart
Courtesy of NISSAN MOTOR CO., U.S.A.

MAIN BEARING GRADE TABLE (ALL JOURNALS)

Main bearing grade table (All journals) : Refer to , "CONNECTING ROD BEARING".

UNDERSIZE BEARING USAGE GUIDE

- When the specified main bearing oil clearance is not obtained with standard size main bearings, use undersize (US) bearing.
- When using undersize (US) bearing, measure the main bearing inner diameter with bearing installed, and grind main journal so that the main bearing oil clearance satisfies the standard.

CAUTION: In grinding crankshaft main journal to use undersize bearings, keep the fillet R (A) [1.5 - 1.7 mm (0.059 - 0.067 in)].



Fig. 295: Identifying Crankshaft Pin
Courtesy of NISSAN MOTOR CO., U.S.A.

Bearing undersize table : Refer to , "CONNECTING ROD BEARING".

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

General Specification


GENERAL SPECIFICATIONS

GENERAL SPECIFICATIONS

Cylinder arrangement	V-6
Displacement cm ³ (cu in)	3,498 (213.45)
Bore and stroke mm (in)	95.5 x 81.4 (3.760 x 3.205)
Valve arrangement	DOHC


2008 Infiniti G35

2008 ENGINE Engine Mechanical - G35 (Sedan)

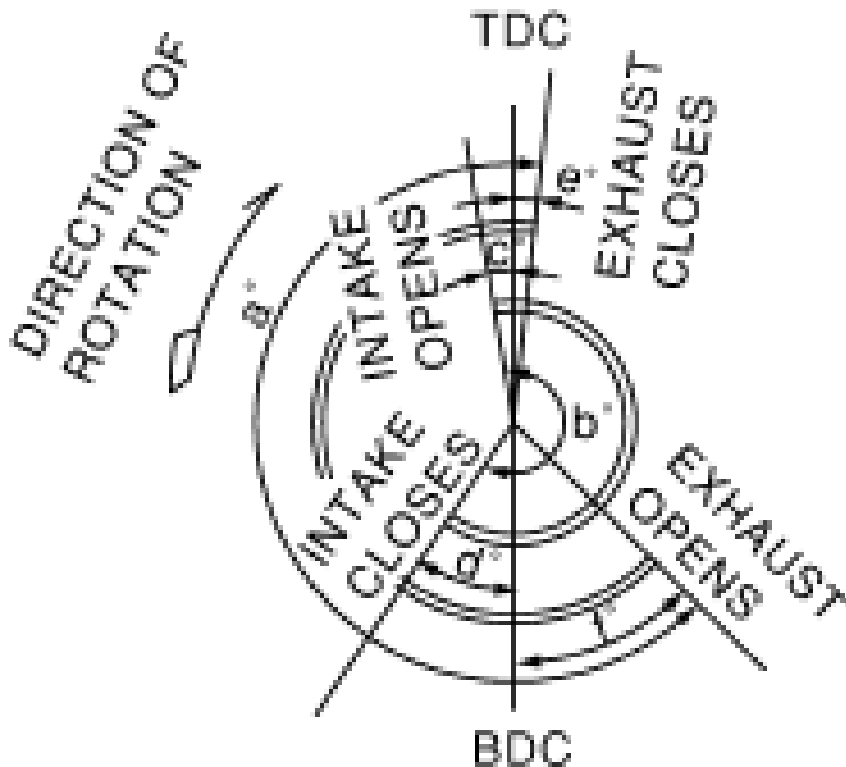Firing order		1-2-3-4-5-6
Number of piston rings	Compression	2
	Oil	1
Number of main bearings		4
Compression ratio		10.6
Compression pressure kPa (kg/cm ² , psi)/300 rpm	Standard	1,275 (13.0, 185)
	Minimum	981 (10.0, 142)
	Differential limit between cylinders	98 (1.0, 14)
Cylinder number		
Valve timing (Valve timing control - "OFF")		

2008 Infiniti G35

2008 ENGINE Engine Mechanical - G35 (Sedan)

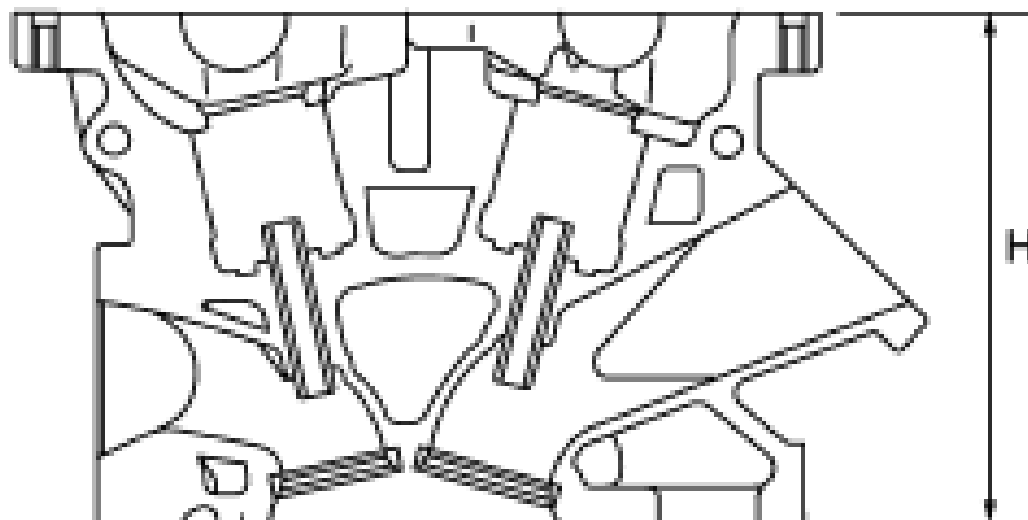

FEIC0904E

GENERAL SPECIFICATIONS

Unit: degree					
a	b	c	d	e	f
248	248	2	66	0	68

Drive Belt

DRIVE BELT

DRIVE BELT SPECIFICATIONS

Tension of drive belt	Belt tension is not necessary, as it is automatically adjusted by drive belt auto-tensioner.
-----------------------	--

Spark Plug

SPARK PLUG

SPARK PLUG SPECIFICATIONS

Unit: mm (in)	
Make	DENSO
Standard type	FXE22HR11
Gap (Nominal)	1.1 (0.043)

Intake Manifold

2008 Infiniti G35

2008 ENGINE Engine Mechanical - G35 (Sedan)

INTAKE MANIFOLD**INTAKE MANIFOLD SPECIFICATIONS**

		Unit: mm (in)
Items		Limit
Surface distortion	Intake manifold	0.1 (0.004)


Exhaust Manifold**EXHAUST MANIFOLD****EXHAUST MANIFOLD SPECIFICATIONS**

		Unit: mm (in)
Items		Limit
Surface distortion	Exhaust manifold	0.7 (0.028)

Camshaft**CAMSHAFT****CAMSHAFT SPECIFICATIONS**

Items		Standard	L
Camshaft journal oil clearance	No. 1	0.045 - 0.086 (0.0018 - 0.0034)	0.15 (
	No. 2, 3, 4	0.035 - 0.076 (0.0014 - 0.0030)	
Camshaft bracket inner diameter	No. 1	26.000 - 26.021 (1.0236 - 1.0244)	
	No. 2, 3, 4	23.500 - 23.521 (0.9252 - 0.9260)	
Camshaft journal diameter	No. 1	25.935 - 25.955 (1.0211 - 1.0218)	
	No. 2, 3, 4	23.445 - 23.465 (0.9230 - 0.9238)	
Camshaft end play		0.115 - 0.188 (0.0045 - 0.0074)	0.24 (
Camshaft cam height "A"	Intake	45.865 - 46.055 (1.8057 - 1.8132)	0.2 (C
	Exhaust	45.875 - 46.065 (1.8061 - 1.8136)	0.2 (C
Camshaft runout [TIR ⁽²⁾]		Less than 0.02 mm (0.001)	0.05
Camshaft sprocket runout [TIR ⁽²⁾]		-	0.15 (

T (Margin thickness)

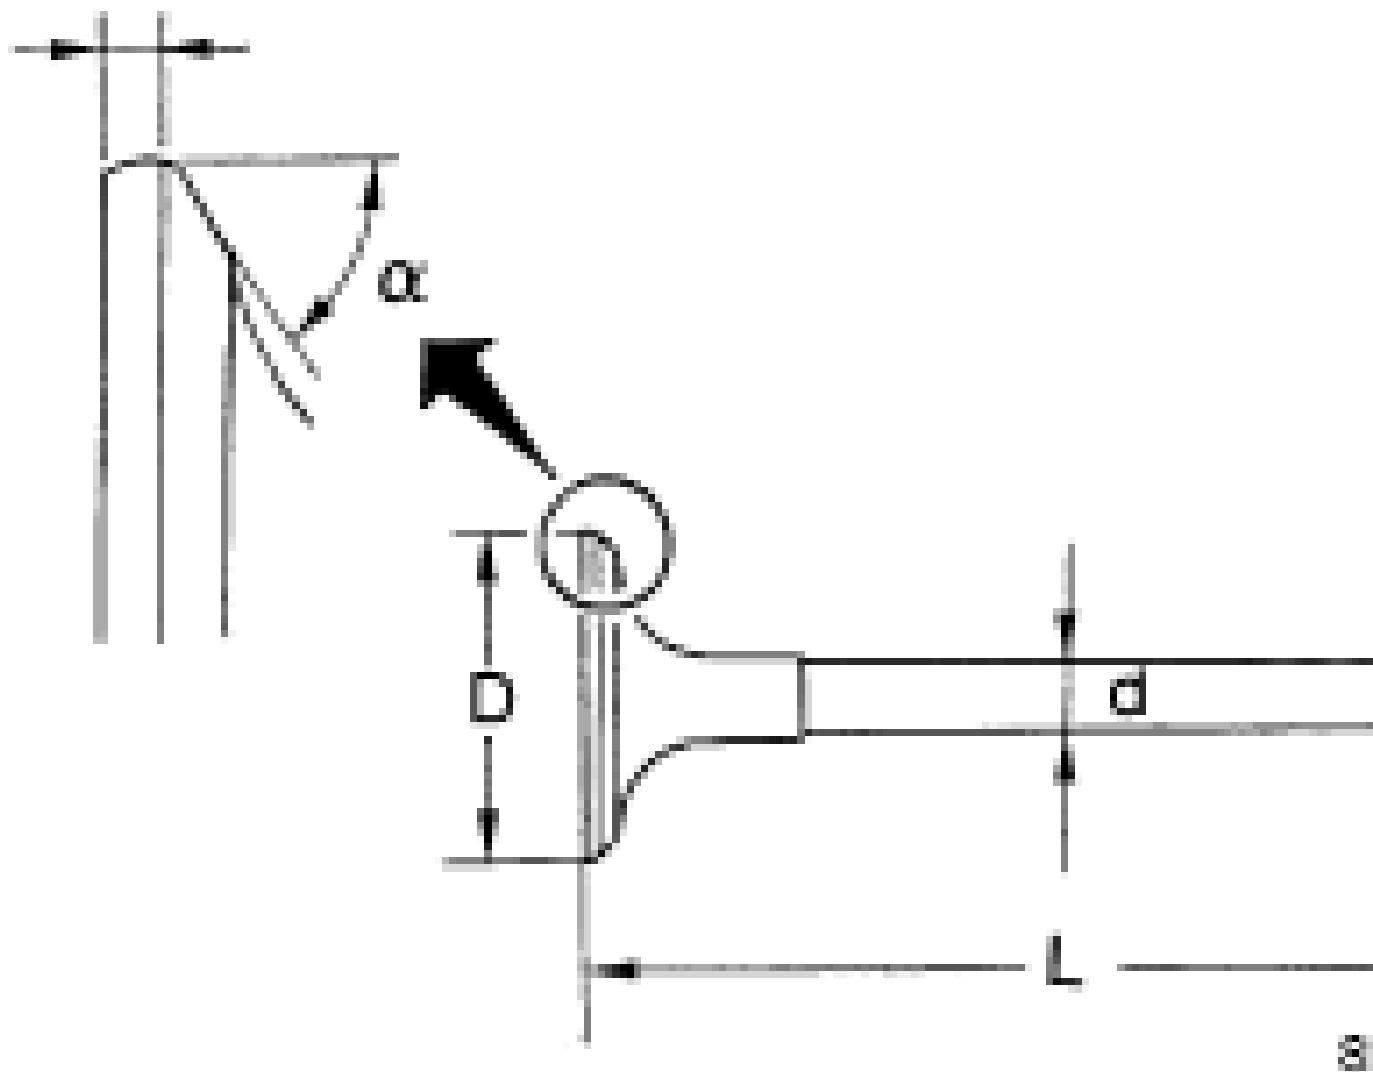

(1) Cam wear limit

(2) Total indicator reading

VALVE LIFTER

VALVE LIFTER SPECIFICATIONS

Unit: mm (in)	
Items	Standard
Valve lifter outer diameter	33.980 - 33.990 (1.3378 - 1.3382)
Valve lifter hole diameter	34.000 - 34.016 (1.3386 - 1.3392)

2008 Infiniti G35

2008 ENGINE Engine Mechanical - G35 (Sedan)

Valve lifter clearance

0.010 - 0.036 (0.0004 - 0.0014)

VALVE CLEARANCE**VALVE CLEARANCE SPECIFICATIONS**

Unit: mm (in)		
Items	Cold	Hot ⁽¹⁾ (reference data)
Intake	0.26 - 0.34 (0.010 - 0.013)	0.304 - 0.416 (0.012 - 0.016)
Exhaust	0.29 - 0.37 (0.011 - 0.015)	0.308 - 0.432 (0.012 - 0.017)
(1) Approximately 80°C (176°F)		

AVAILABLE VALVE LIFTER**VALVE LIFTER SPECIFICATIONS**

Identification (stamped) mark	Thickness
788P	7.88 (0.3102)
790P	7.90 (0.3110)
792P	7.92 (0.3118)
794P	7.94 (0.3126)
796P	7.96 (0.3134)
798P	7.98 (0.3142)
800P	8.00 (0.3150)
802P	8.02 (0.3157)
804P	8.04 (0.3165)
806P	8.06 (0.3173)
808P	8.08 (0.3181)
810P	8.10 (0.3189)
812P	8.12 (0.3197)
814P	8.14 (0.3205)
816P	8.16 (0.3213)
818P	8.18 (0.3220)
820P	8.20 (0.3228)
822P	8.22 (0.3236)
824P	8.24 (0.3244)
826P	8.26 (0.3252)
828P	8.28 (0.3260)
830P	8.30 (0.3268)
832P	8.32 (0.3276)
834P	8.34 (0.3283)
836P	8.36 (0.3291)

2008 Infiniti G35


2008 ENGINE Engine Mechanical - G35 (Sedan)

838P

8.38 (0.3299)

840P

8.40 (0.3307)

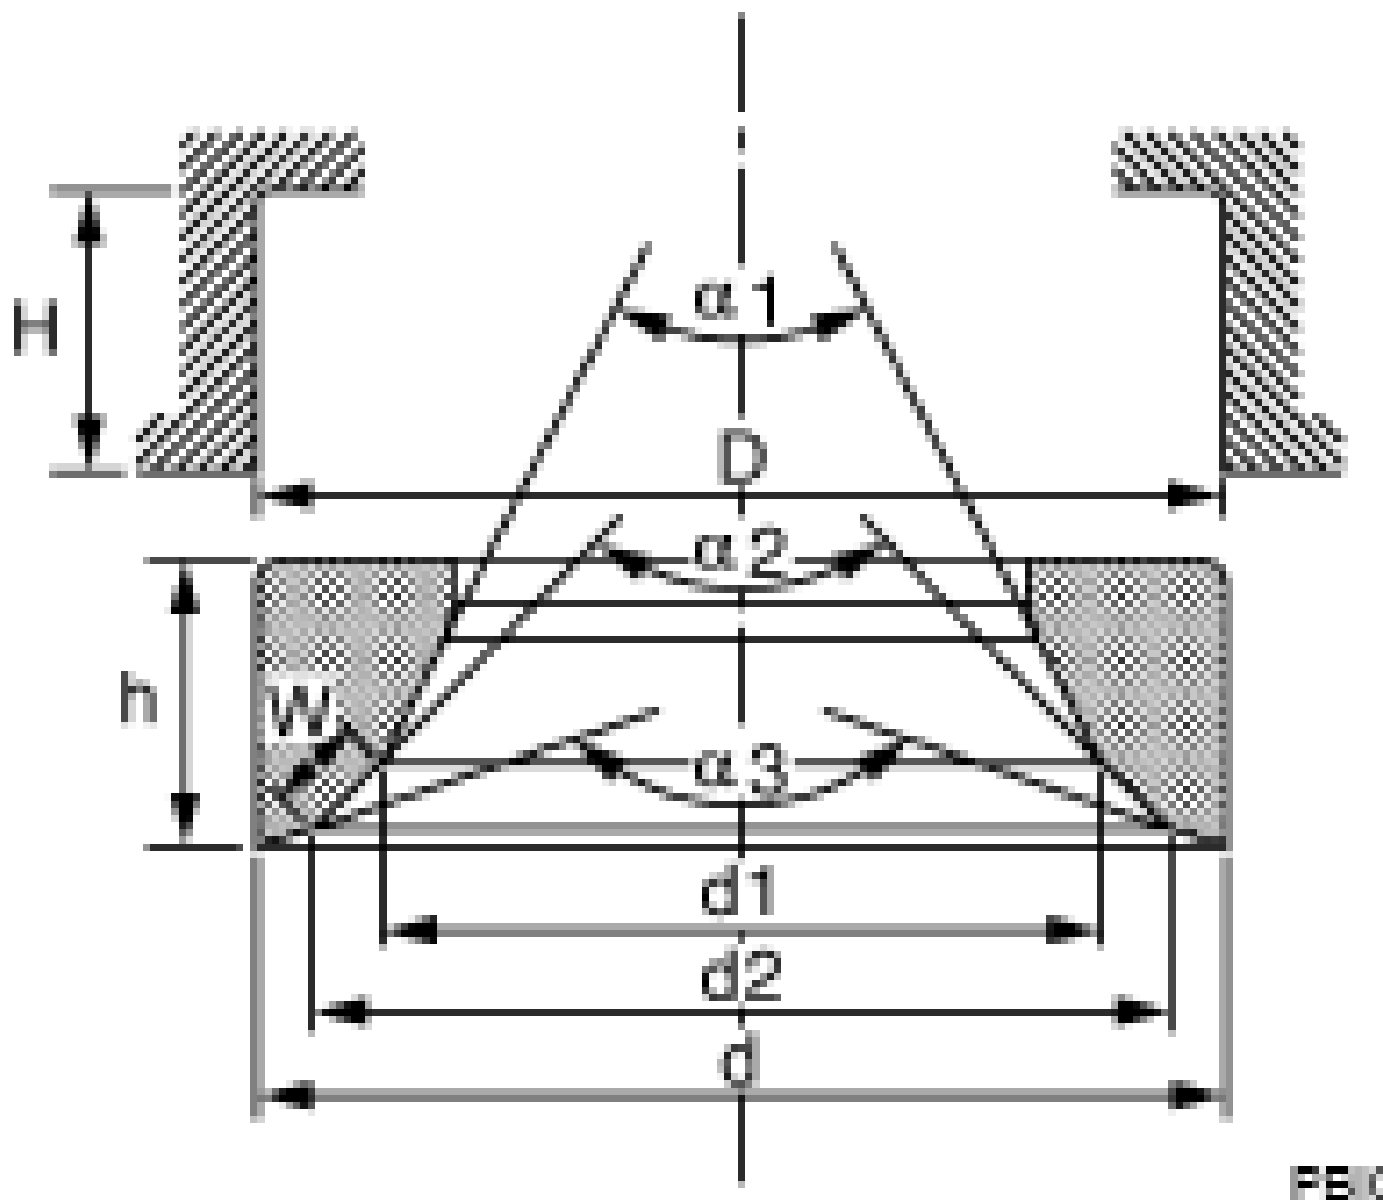

Cylinder Head

CYLINDER HEAD


CYLINDER HEAD SPECIFICATIONS

Items	Standard	Limit
-------	----------	-------

2008 Infiniti G35


2008 ENGINE Engine Mechanical - G35 (Sedan)

Head surface distortion	Less than	0.03 (0.0012) 0.1
Normal cylinder head height "H"	126.3 - 126.5 (4.972 - 4.980)	-

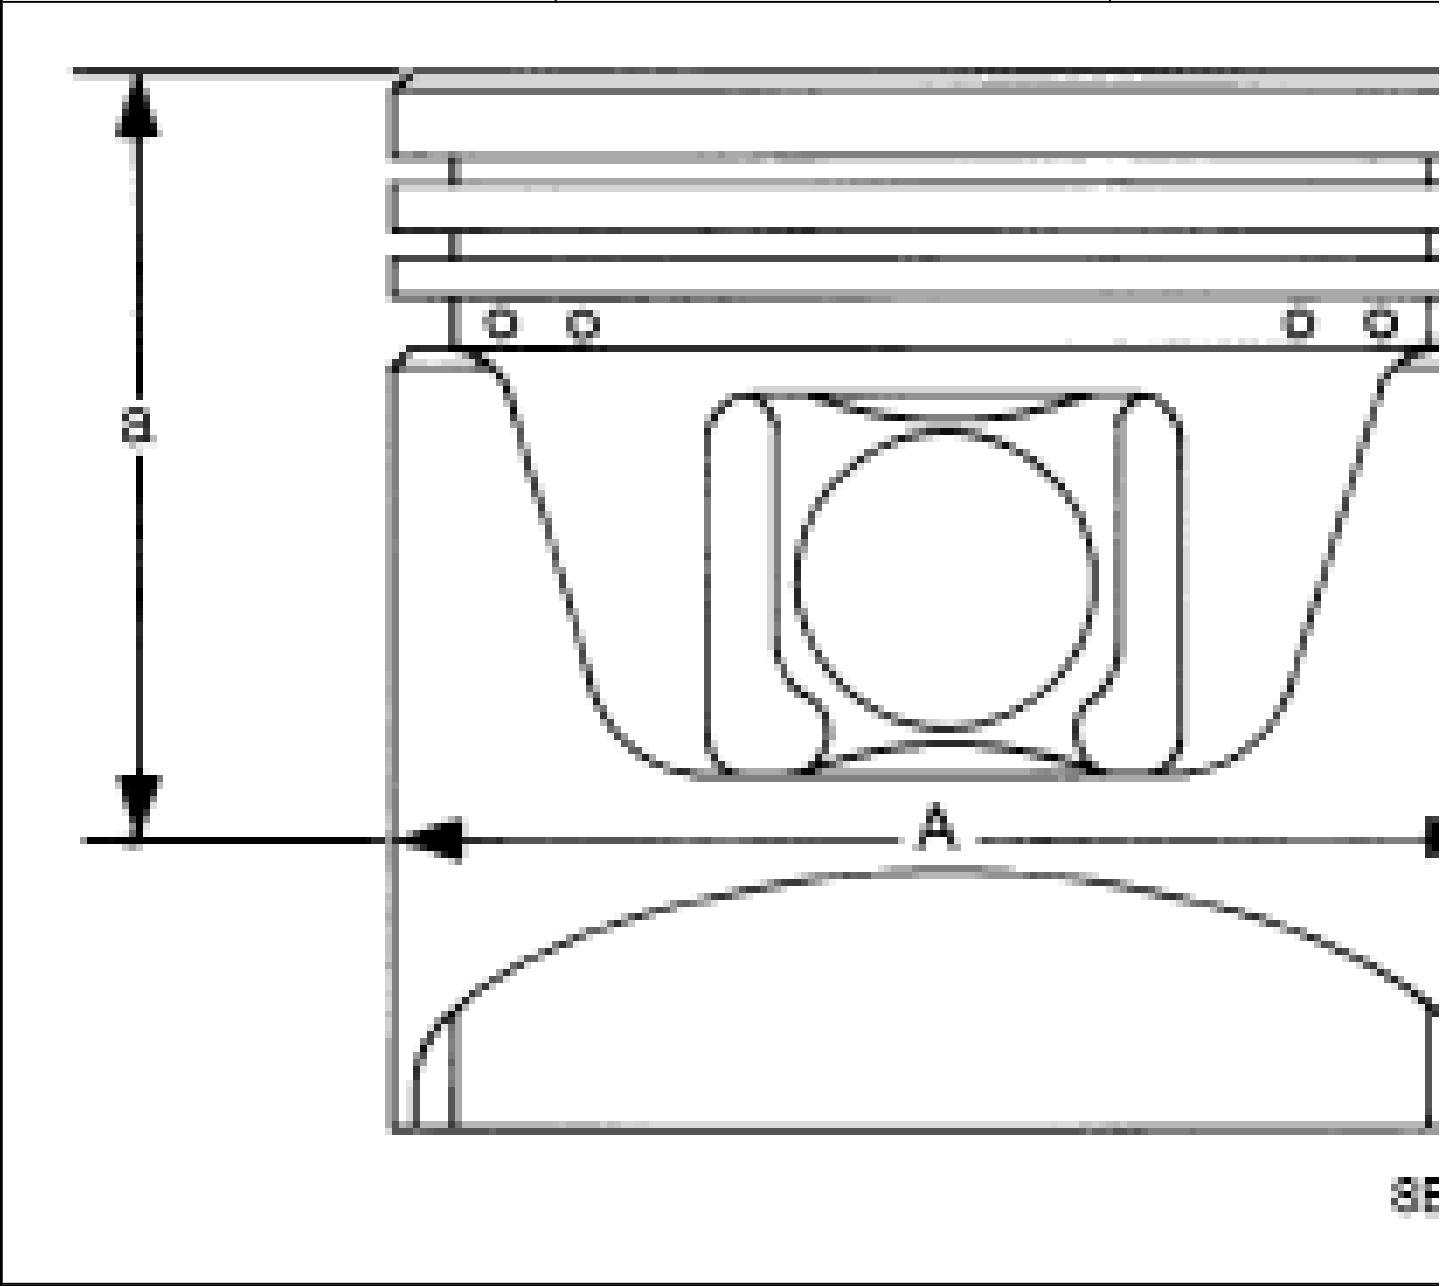

VALVE DIMENSIONS

VALVE DIMENSIONS CHART

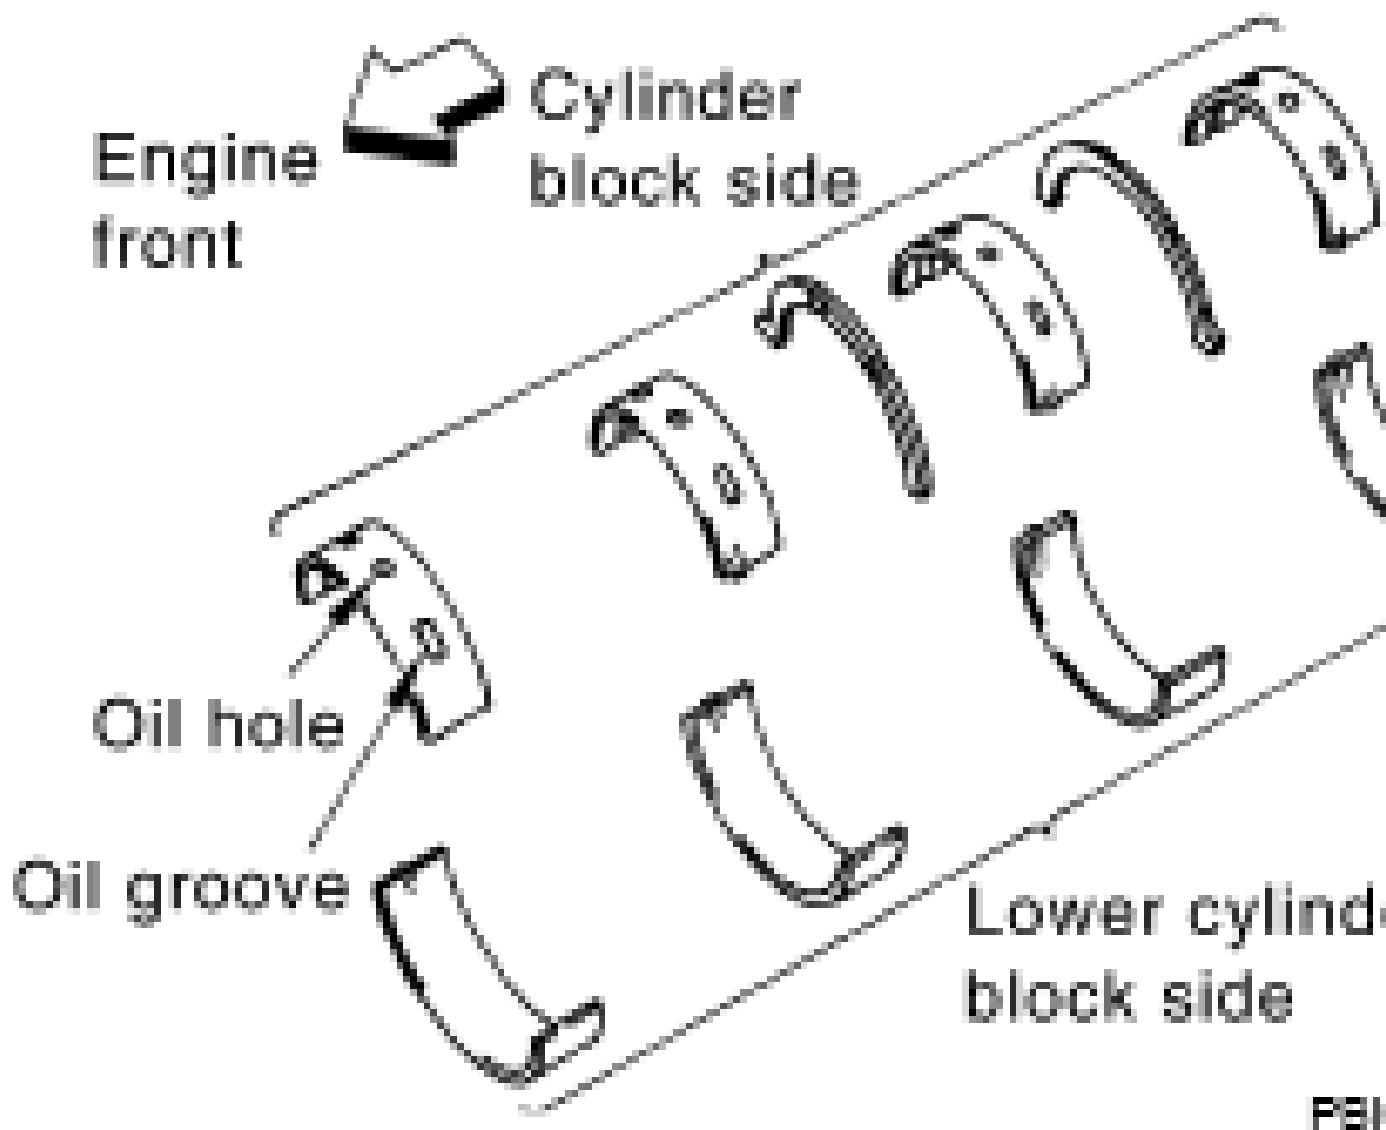

FBI

Valve head diameter "D"	Intake	36.6 - 36.9 (1.441)
	Exhaust	30.2 - 30.5 (1.189)
Valve length "L"	Intake	97.13 (3.82)
	Exhaust	94.67 (3.72)
Valve stem diameter "d"	Intake	5.965 - 5.980 (0.234)
	Exhaust	5.962 - 5.970 (0.234)
Valve seat angle "a"	Intake	45°15' - 45°
	Exhaust	
Valve margin "T"	Intake	1.1 (0.043)
	Exhaust	1.3 (0.051)
Valve margin "T" limit		0.5 (0.020)

2008 Infiniti G35


2008 ENGINE Engine Mechanical - G35 (Sedan)

Valve stem end surface grinding limit

0.2 (0.008)

VALVE GUIDE

VALVE GUIDE SPECIFICATIONS

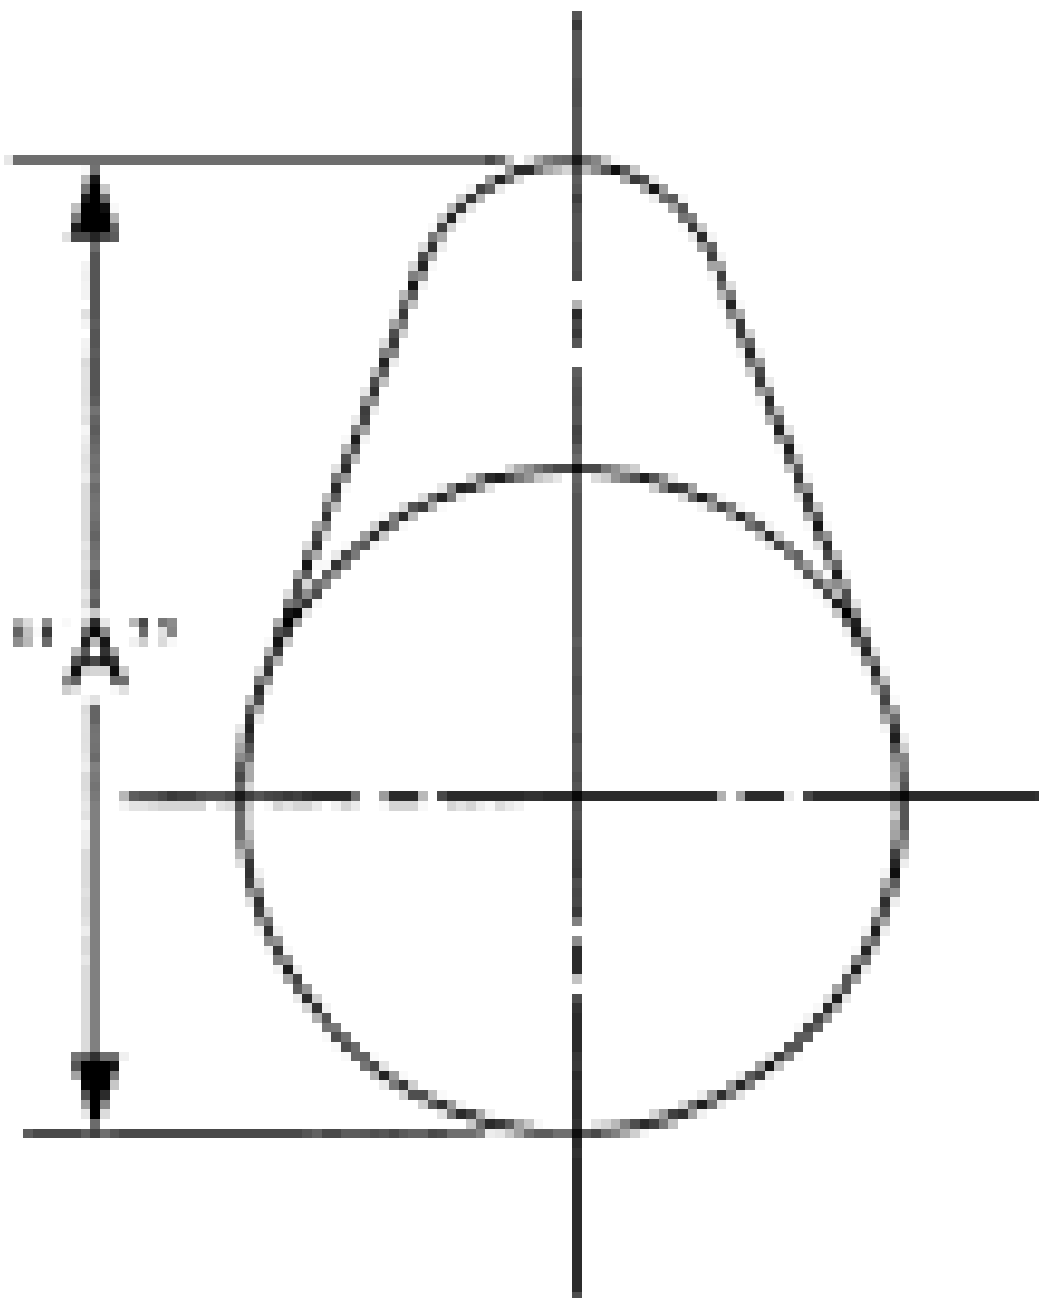


Items		Standard	Oversize (Service)
Valve guide	Outer diameter	10.023 - 10.034 (0.3946 - 0.3950)	10.223 - 10.234 (0

2008 Infiniti G35

2008 ENGINE Engine Mechanical - G35 (Sedan)

Inner diameter (Finished size)		6.000 - 6.018 (0.2362 - 0.2369)	
Cylinder head valve guide hole diameter		9.975 - 9.996 (0.3927 - 0.3935)	10.175 - 10.196 (0.3998 - 0.4014)
Interference fit of valve guide		0.027 - 0.059 (0.0011 - 0.0023)	
Items		Standard	Lim.
Valve guide clearance	Intake	0.020 - 0.053 (0.0008 - 0.0021)	0.08 (0.0031 - 0.0031)
	Exhaust	0.030 - 0.056 (0.0012 - 0.0022)	0.09 (0.0035 - 0.0035)
Projection length "L"		12.6 - 12.8 (0.496 - 0.504)	

VALVE SEAT**VALVE SEAT SPECIFICATIONS**

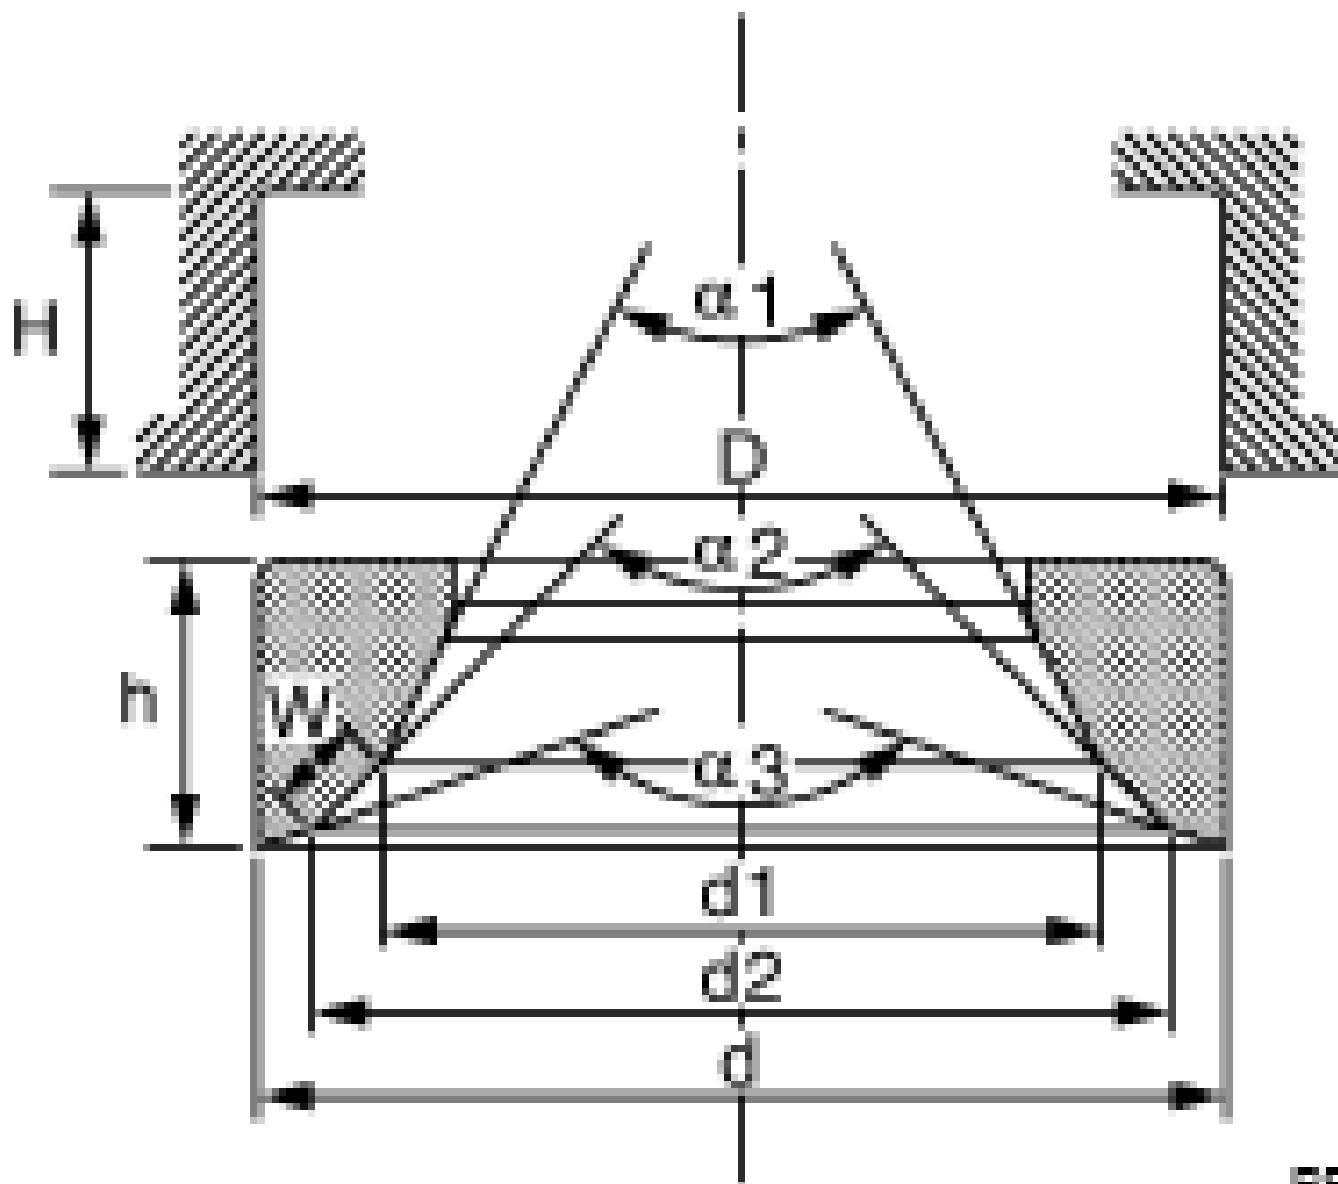

Items		Standard	Oversize (Serv)
Cylinder head seat recess diameter "D"	Intake	38.000 - 38.016 (1.4961 - 1.4967)	38.500 - 38.516 (
	Exhaust	31.600 - 31.616 (1.2441 - 1.2447)	32.100 - 32.116 (
Valve seat outer diameter "d"	Intake	38.097 - 38.113 (1.4999 - 1.5005)	38.597 - 38.613 (
	Exhaust	31.680 - 31.696 (1.2472 - 1.2479)	32.180 - 32.196 (
Valve seat interference fit	Intake	0.081 - 0.113 (0.0032 - 0.0044)	
	Exhaust	0.064 - 0.096 (0.0025 - 0.0038)	
Diameter "d1"(1)	Intake	34.6 (1.362)	
	Exhaust	27.7 (1.091)	

2008 Infiniti G35

2008 ENGINE Engine Mechanical - G35 (Sedan)

Diameter "d2" ⁽²⁾	Intake	35.9 - 36.4 (1.413 - 1.433)	
	Exhaust	29.3 - 29.8 (1.154 - 1.173)	
Angle "a1"	Intake	60°	
	Exhaust	60°	
Angle "a2"	Intake	88°45' - 90°15'	
	Exhaust	88°45' - 90°15'	
Angle "a3"	Intake	120°	
	Exhaust	120°	
Contacting width "W" ⁽³⁾	Intake	1.0 - 1.4 (0.039 - 0.055)	
	Exhaust	1.2 - 1.6 (0.047 - 0.063)	
Height "h"	Intake	5.9 - 6.0 (0.232 - 0.236)	5.05 - 5.15 (0.199 - 0.201)
	Exhaust	5.9 - 6.0 (0.232 - 0.236)	4.95 - 5.05 (0.199 - 0.201)
Depth "H"		6.0 (0.236)	

(1) Diameter made by intersection point of conic angles "a1" and "a2"

(2) Diameter made by intersection point of conic angles "a2" and "a3"

(3) Machining data

VALVE SPRING

VALVE SPRING SPECIFICATIONS

Items	
Free height	43.85 (1.7264)
Installation height	37.00 (1.4567)
Installation load	166 - 188 N (16.9 - 19.2 kg, 37 - 42 lb)
Height during valve open	26.8 (1.055)
Load with valve open	502 - 566 N (51.2 - 57.7 kg, 113 - 127 lb)
Squareness	1.9 (0.075)

Cylinder Block

CYLINDER BLOCK

CYLINDER BLOCK SPECIFICATIONS



Surface flatness		Standard		Less than 0.03
		Limit		0.1 (0.004)
Main bearing housing inner diameter		Standard		69.993 - 70.017 (2.7)
Cylinder bore	Inner diameter	Standard	Grade No. 1	95.500 - 95.510 (3.7)
			Grade No. 2	95.510 - 95.520 (3.7)
			Grade No.	3 95.520 - 95.530 (3.7)
		Wear limit		0.2 (0.008)
Out-of-round		Limit		0.015 (0.0006)
Taper				0.010 (0.0004)
			Grade No. A	69.993 - 69.994 (2.7)

2008 Infiniti G35


2008 ENGINE Engine Mechanical - G35 (Sedan)

Main bearing housing inner diameter grade (Without bearing)	Grade No. B	69.994 - 69.995 (2.5)
	Grade No. C	69.995 - 69.996 (2.5)
	Grade No. D	69.996 - 69.997 (2.5)
	Grade No. E	69.997 - 69.998 (2.5)
	Grade No. F	69.998 - 69.999 (2.5)
	Grade No. G	69.999 - 70.000 (2.5)
	Grade No. H	70.000 - 70.001 (2.5)
	Grade No. J	70.001 - 70.002 (2.5)
	Grade No. K	70.002 - 70.003 (2.5)
	Grade No. L	70.003 - 70.004 (2.5)
	Grade No. M	70.004 - 70.005 (2.5)
	Grade No. N	70.005 - 70.006 (2.5)
	Grade No. P	70.006 - 70.007 (2.5)
	Grade No. R	70.007 - 70.008 (2.5)
	Grade No. S	70.008 - 70.009 (2.5)
	Grade No. T	70.009 - 70.010 (2.5)
	Grade No. U	70.010 - 70.011 (2.5)
	Grade No. V	70.011 - 70.012 (2.5)
	Grade No. W	70.012 - 70.013 (2.5)
	Grade No. X	70.013 - 70.014 (2.5)
	Grade No. Y	70.014 - 70.015 (2.5)
	Grade No. 4	70.015 - 70.016 (2.5)
	Grade No. 7	70.016 - 70.017 (2.5)
Difference in inner diameter between cylinders Standard		Less than 0.03

AVAILABLE PISTON**PISTON CHART**

2008 Infiniti G35

2008 ENGINE Engine Mechanical - G35 (Sedan)

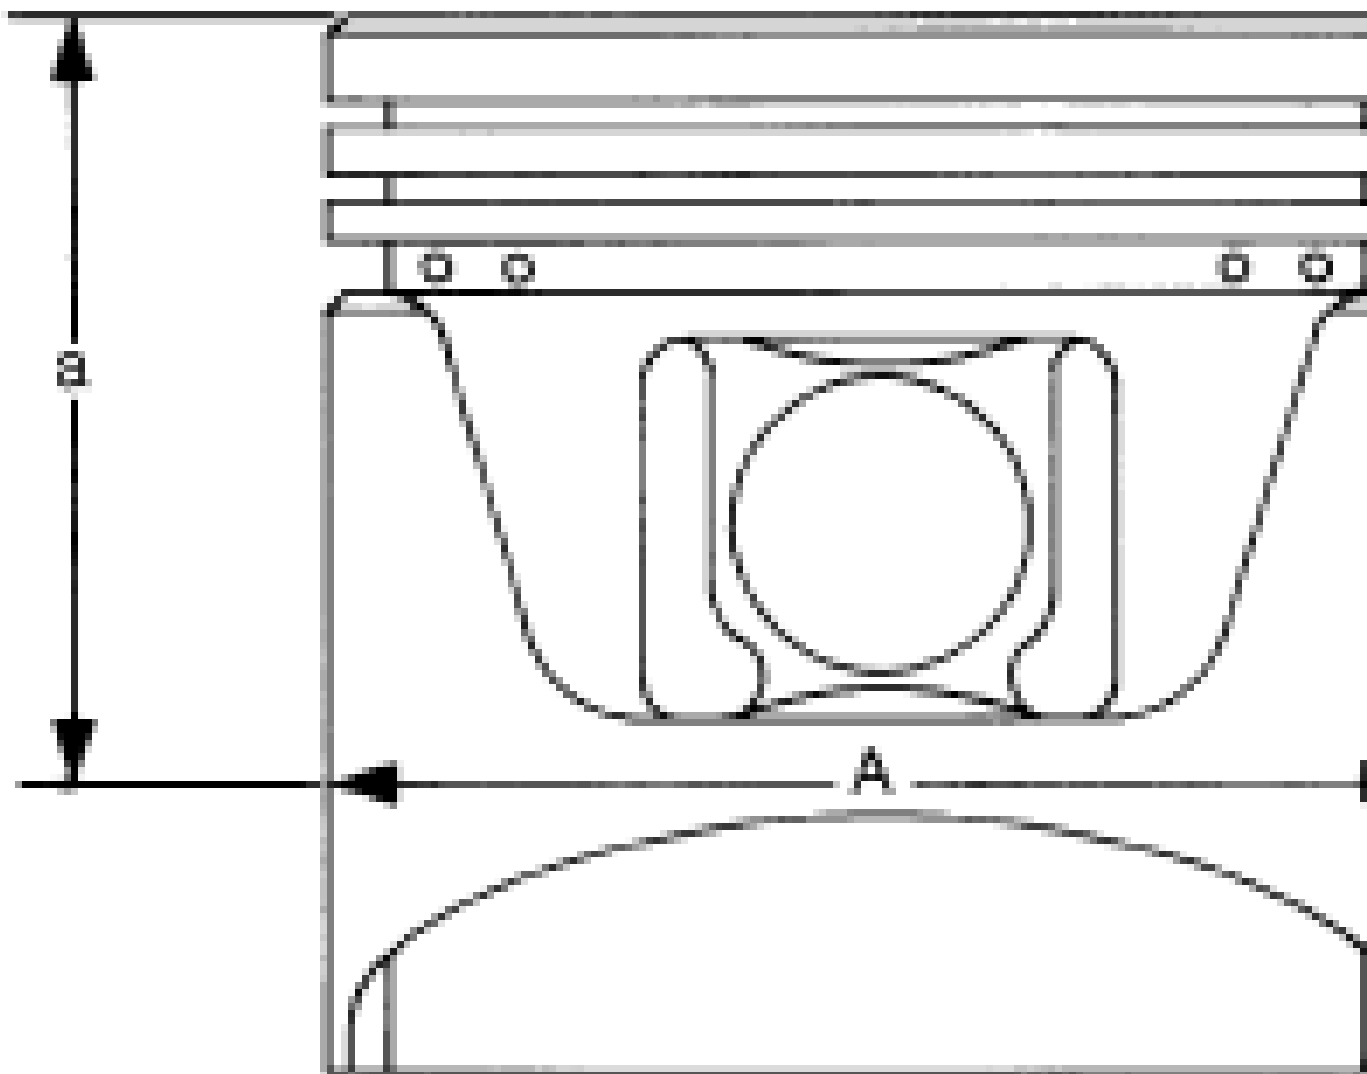

8E

Items		Standard	Oversize (Service)
Piston skirt diameter "A"	Grade No. 1	95.480 - 95.490 (3.7590 - 3.7594)	-
	Grade No. 2	95.490 - 95.500 (3.7594 - 3.7598)	-
	Grade No. 3	95.500 - 95.510 (3.7598 - 3.7602)	-
	Service	-	95.680 - 95.710 (3.7661 - 3.7681)
Items		Standard	Lir
"a" dimension		38.8 (1.528)	-
Piston pin hole diameter	Grade No. 0	21.993 - 21.999 (0.8659 - 0.8661)	-
	Grade No. 1	21.999 - 22.005 (0.8661 - 0.8663)	-
Piston to cylinder bore clearance		0.010 - 0.030 (0.0004 - 0.0012)	0.08 (0.0031)

2008 Infiniti G35

2008 ENGINE Engine Mechanical - G35 (Sedan)

PISTON RING**PISTON RING SPECIFICATIONS**

			Unit: mm (in)
Items		Standard	Limit
Side clearance	Top	0.040 - 0.080 (0.0016 - 0.0031)	0.11 (0.0043)
	2nd	0.030 - 0.070 (0.0012 - 0.0028)	0.10 (0.004)
	Oil ring	0.055 - 0.155 (0.0022 - 0.0061)	-
End gap	Top	0.23 - 0.33 (0.0091 - 0.0130)	0.42 (0.0169)
	2nd	0.33 - 0.48 (0.0130 - 0.0189)	0.57 (0.0224)
	Oil (rail ring)	0.17 - 0.47 (0.0067 - 0.0185)	0.63 (0.0248)

PISTON PIN**PISTON PIN SPECIFICATIONS**



			Unit: mm (in)
Items		Standard	Limit
Piston pin outer diameter	Grade No. 0	21.989 - 21.995 (0.8657 - 0.8659)	-
	Grade No. 1	21.995 - 22.001 (0.8659 - 0.8662)	-
Piston to piston pin oil clearance		0.002 - 0.006 (0.0001 - 0.0002)	-
Connecting rod bushing oil clearance		0.005 - 0.017 (0.0002 - 0.0007)	0.030 (0.0012)

CONNECTING ROD**CONNECTING ROD SPECIFICATIONS**

			Unit: mm (in)
Items		Standard	Limit
Center distance		144.15 - 144.25 (5.675 - 5.679)	-
Bend [per 100 (3.94)]		-	0.15 (0.0059)
Torsion [per 100 (3.94)]		-	0.30 (0.0118)
Connecting rod bushing inner diameter ⁽¹⁾	Grade No. 0	22.000 - 22.006 (0.8661 - 0.8664)	-
	Grade No. 1	22.006 - 22.012 (0.8664 - 0.8666)	-
Connecting rod big end diameter (Without bearing)		57.000 - 57.013 (2.2441 - 2.2446)	-
Side clearance		0.20 - 0.35 (0.0079 - 0.0138)	0.40 (0.0157)
(1) After installing in connecting rod			

CRANKSHAFT

CRANKSHAFT SPECIFICATIONS

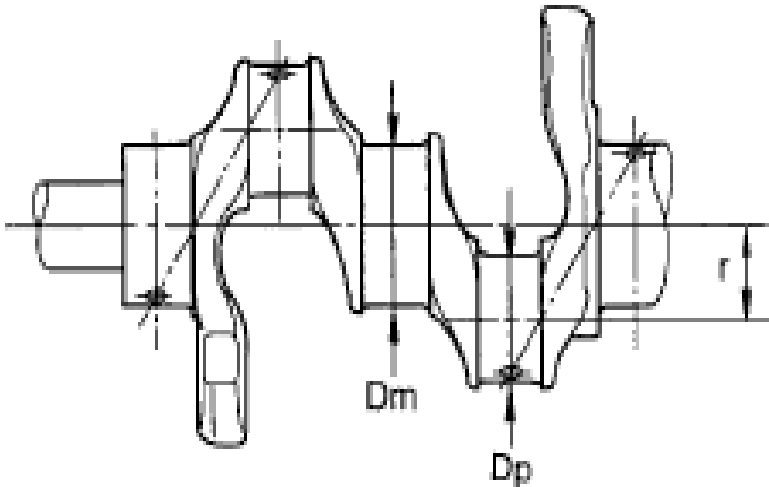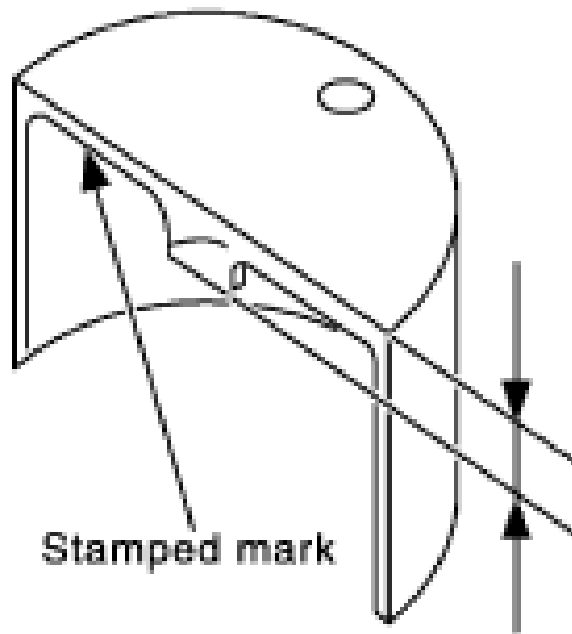 8EM645		 Stamped mark Valve lifter thickness	
Main journal diameter. "Dm" grade	Standard	Grade No. A	64.975 - 64.974 (2.5
		Grade No. B	64.974 - 64.973 (2.5
		Grade No. C	64.973 - 64.972 (2.5
		Grade No. D	64.972 - 64.971 (2.5
		Grade No. E	64.971 - 64.970 (2.5
		Grade No. F	64.970 - 64.969 (2.5
		Grade No. G	64.969 - 64.968 (2.5
		Grade No. H	64.968 - 64.967 (2.5
		Grade No. J	64.967 - 64.966 (2.5
		Grade No. K	64.966 - 64.965 (2.5
		Grade No. L	64.965 - 64.964 (2.5
		Grade No. M	64.964 - 64.963 (2.5
		Grade No. N	64.963 - 64.962 (2.5
		Grade No. P	64.962 - 64.961 (2.5
		Grade No. R	64.961 - 64.960 (2.5
		Grade No. S	64.960 - 64.959 (2.5
		Grade No. T	64.959 - 64.958 (2.5
		Grade No. U	64.958 - 64.957 (2.5
		Grade No. V	64.957 - 64.956 (2.5
Grade No. W	64.956 - 64.955 (2.5		

2008 Infiniti G35


2008 ENGINE Engine Mechanical - G35 (Sedan)

		Grade No. X	64.955 - 64.954 (2.5
		Grade No. Y	64.954 - 64.953 (2.5
		Grade No. 4	64.953 - 64.952 (2.5
		Grade No. 7	64.952 - 64.951 (2.5
Pin journal diameter. "Dp"	Standard	Grade No. A	53.974 - 53.973 (2.1
		Grade No. B	53.973 - 53.972 (2.
		Grade No. C	53.972 - 53.971 (2.1
		Grade No. D	53.971 - 53.970 (2.1
		Grade No. E	53.970 - 53.969 (2.1
		Grade No. F	53.969 - 53.968 (2.1
		Grade No. G	53.968 - 53.967 (2.1
		Grade No. H	53.967 - 53.966 (2.1
		Grade No. J	53.966 - 53.965 (2.1
		Grade No. K	53.965 - 53.964 (2.1
		Grade No. L	53.964 - 53.963 (2.1
		Grade No. M	53.963 - 53.962 (2.1
		Grade No. N	53.962 - 53.961 (2.1
		Grade No. P	53.961 - 53.960 (2.1
		Grade No. R	53.960 - 53.959 (2.1
		Grade No. S	53.959 - 53.958 (2.1
		Grade No. T	53.958 - 53.957 (2.1
		Grade No. U	53.957 - 53.956 (2.1
Center distance "r"			40.66 - 40.74 (1.60
Taper (Difference between "A" and "B")	Limit		0.0025 (0.0
Out-of-round (Difference between "X" and "Y")			0.0025 (0.0
Crankshaft runout [TIR ⁽¹⁾]	Standard		Less than 0.05
	Limit		0.10 (0.00
Crankshaft end play	Standard		0.10 - 0.25 (0.004
	Limit		0.30 (0.0
(1) Total indicator reading			

Main Bearing

MAIN BEARING

MAIN BEARING SPECIFICATIONS

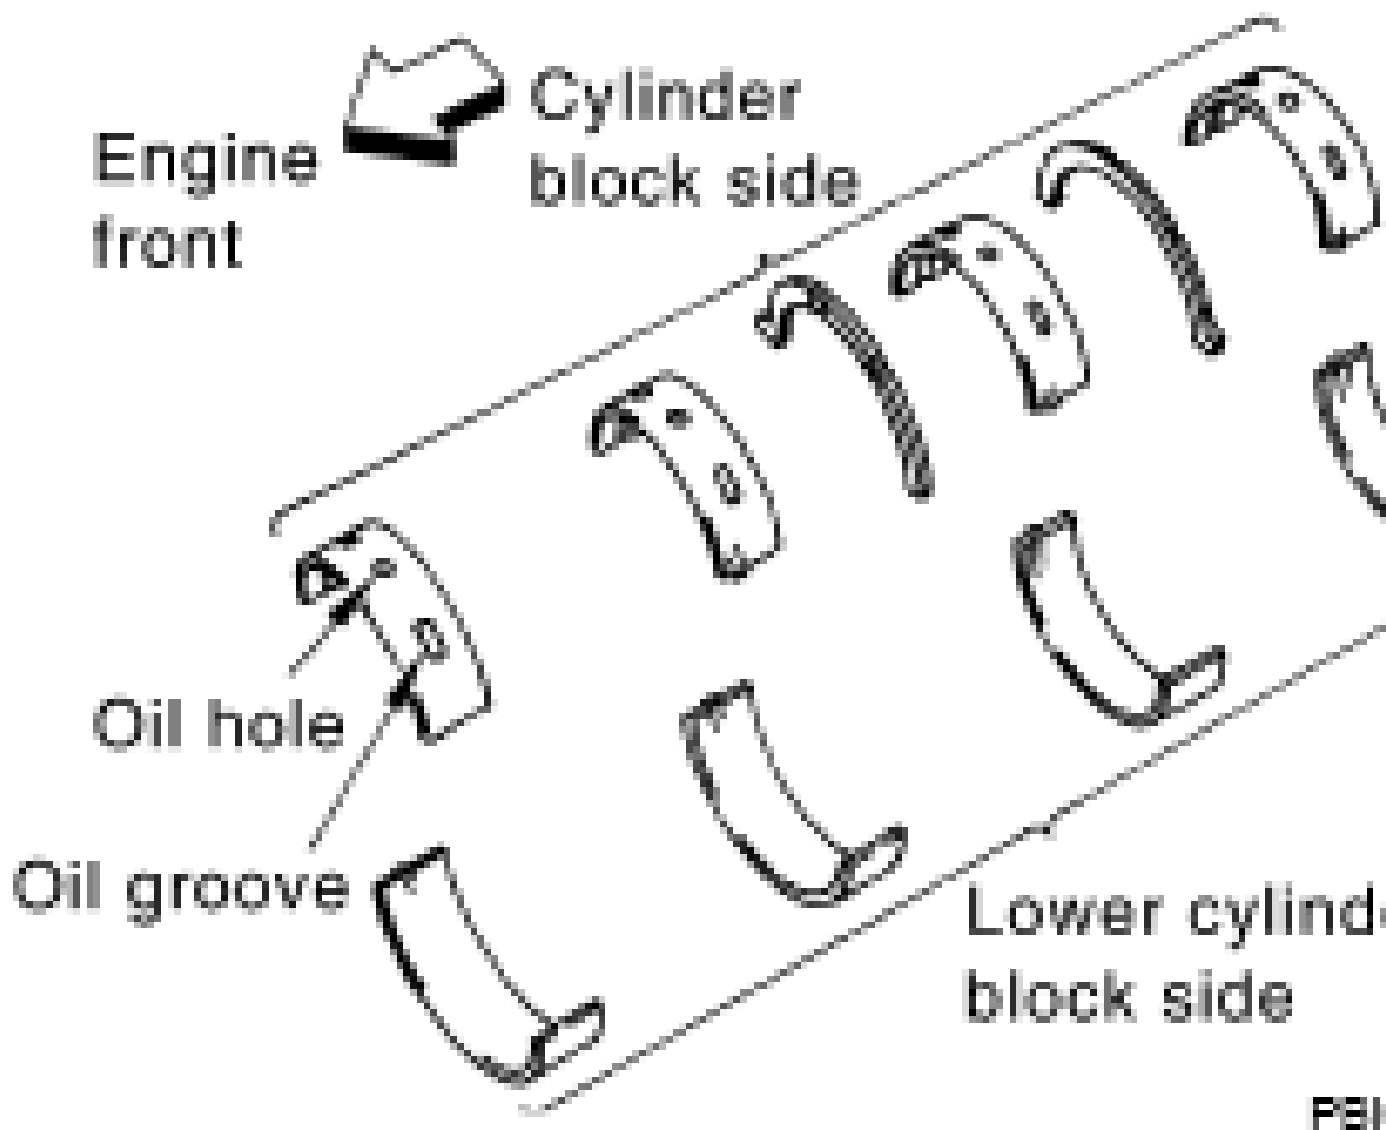

FBI

Grade number		Thickness mm (in)	Width mm (in)	Identification color	
0		2.500 - 2.503 (0.0984 - 0.0985)		Black	Grade is upper and lower bearings
1		2.503 - 2.506 (0.0985 - 0.0987)		Brown	
2		2.506 - 2.509 (0.0987 - 0.0988)		Green	
3		2.509 - 2.512 (0.0988 - 0.0989)		Yellow	
4		2.512 - 2.515 (0.0989 - 0.0990)		Blue	
5		2.515 - 2.518 (0.0990 - 0.0991)		Pink	
6		2.518 - 2.521 (0.0991 - 0.0993)		Purple	
7		2.521 - 2.524 (0.0993 - 0.0994)		White	
01	UPR	2.503 - 2.506 (0.0985 - 0.0987)		Brown	
	LWR	2.500 - 2.503 (0.0984 - 0.0985)		Black	

2008 Infiniti G35

2008 ENGINE Engine Mechanical - G35 (Sedan)

12	UPR	2.506 - 2.509 (0.0987 - 0.0988)	19.9 - 20.1 (0.783 - 0.791)	Green	Grade at different lower be
	LWR	2.503 - 2.506 (0.0985 - 0.0987)		Brown	
23	UPR	2.509 - 2.512 (0.0988 - 0.0989)		Yellow	
	LWR	2.506 - 2.509 (0.0987 - 0.0988)		Green	
34	UPR	2.512 - 2.515 (0.0989 - 0.0990)		Blue	
	LWR	2.509 - 2.512 (0.0988 - 0.0989)		Yellow	
45	UPR	2.515 - 2.518 (0.0990 - 0.0991)		Pink	
	LWR	2.512 - 2.515 (0.0989 - 0.0990)		Blue	
56	UPR	2.518 - 2.521 (0.0991 - 0.0993)		Purple	
	LWR	2.515 - 2.518 (0.0990 - 0.0991)		Pink	
67	UPR	2.521 - 2.524 (0.0993 - 0.0994)		White	
	LWR	2.518 - 2.521 (0.0991 - 0.0993)		Purple	

UNDERSIZE

UNDERSIZE CHART

Unit: mm (in)		
Items	Thickness	Main journal diameter
0.25 (0.0098)	2.633 - 2.641 (0.1037 - 0.1040)	Grind so that bearing clearance is the specified value.

MAIN BEARING OIL CLEARANCE

MAIN BEARING OIL CLEARANCE CHART

Unit: mm (in)		
Items	Standard	Limit
Main bearing oil clearance	0.035 - 0.045 (0.0014 - 0.0018) ⁽¹⁾	0.065 (0.0026)
(1) Actual clearance		

Connecting Rod Bearing

CONNECTING ROD BEARING

CONNECTING ROD BEARING CHART

Grade number	Thickness mm (in)	Identification color (mark)
0	1.497 - 1.500 (0.0589 - 0.0591)	Black
1	1.500 - 1.503 (0.0591 - 0.0592)	Brown
2	1.503 - 1.506 (0.0592 - 0.0593)	Green
3	1.506 - 1.509 (0.0593 - 0.0594)	Yellow
4	1.509 - 1.512 (0.0594 - 0.0595)	Blue

UNDERSIZE

2008 Infiniti G35

2008 ENGINE Engine Mechanical - G35 (Sedan)

UNDERSIZE CHART

Unit: mm (in)		
Items	Thickness	Crank pin journal diameter
0.25 (0.0098)	1.626 - 1.634 (0.0640 - 0.0643)	Grind so that bearing clearance is the specified value.

CONNECTING ROD BEARING OIL CLEARANCE**CONNECTING ROD BEARING OIL CLEARANCE CHART**

Unit: mm (in)		
Items	Standard	Limit
Connecting rod bearing oil clearance	0.040 - 0.053 (0.0016 - 0.0021) ⁽¹⁾	0.070 (0.0028)
(1) Actual clearance		