

2002 ENGINE**Engine Mechanical - Q45****PRECAUTIONS****PRECAUTIONS FOR DRAIN COOLANT**

- Drain coolant when engine is cooled.

PRECAUTIONS FOR DISCONNECTING FUEL PIPING

- Before starting work, make sure no fire or spark producing items are in the work area.
- Release fuel pressure before disassembly.
- After disconnecting pipes, plug openings to stop fuel leakage.

PRECAUTIONS FOR REMOVAL AND DISASSEMBLY

- When instructed to use special service tools, use the specified tools. Always be careful to work safely, avoid forceful or uninstructed operations.
- Exercise maximum care to avoid damage to mating or sliding surfaces.
- Cover openings of engine system with tape or the equivalent, if necessary, to seal out foreign materials.
- Mark and arrange disassembly parts in an organized way for easy troubleshooting and re-assembly.
- When loosening nuts and bolts, as a basic rule, start with the one furthest outside, then the one diagonally opposite, and so on. If the order of loosening is specified, do exactly as specified.

PRECAUTIONS FOR INSPECTION, REPAIR AND REPLACEMENT

- Before repairing or replacing, thoroughly inspect parts. Inspect new replacement parts in the same way, and replace if necessary.

PRECAUTIONS FOR ASSEMBLY AND INSTALLATION

- Use torque wrench to tighten bolts or nuts.
- When tightening nuts and bolts, as a basic rule, equally tighten in several different steps starting with the ones in center, then ones on inside and outside diagonally in this order. If the order of tightening is specified, do exactly as specified.
- Replace with new gasket, packing, oil seal or O-ring.
- Thoroughly wash, clean, and air-blow each part. Carefully check oil or coolant passages for any restriction and blockage.
- Avoid damaging sliding or mating surfaces. Completely remove foreign materials such as cloth lint or dust. Before assembly, oil sliding surfaces well.
- Release air within route after draining coolant.
- After repairing, start engine and increase engine speed to check coolant, fuel, oil, and exhaust systems for

leakage.

PARTS REQUIRING ANGULAR TIGHTENING

- Use an angle wrench for the final tightening of the following engine parts:
 - Cylinder head bolts
 - Main bearing cap bolts
 - Connecting rod cap nuts
 - Crankshaft pulley bolt (No angle wrench is required as the bolt flange is provided with notches for angular tightening)
- Do not use a torque value for final tightening.
- The torque value for these parts are for a preliminary step.
- Ensure thread and seat surfaces are clean and coated with engine oil.

PRECAUTIONS FOR LIQUID GASKET


REMOVAL OF LIQUID GASKET SEALING

- After removing the mounting bolts and nuts, disconnect and remove the liquid gasket sealing using a seal cutter.

CAUTION: Be careful not to damage the mating surfaces.

- In areas where the cutter is difficult to use, use a plastic hammer to lightly tap the areas where the liquid gasket is applied.

CAUTION: If for some unavoidable reason a tool such as a flat-bladed screwdriver is used, be careful not to damage the mating surfaces.

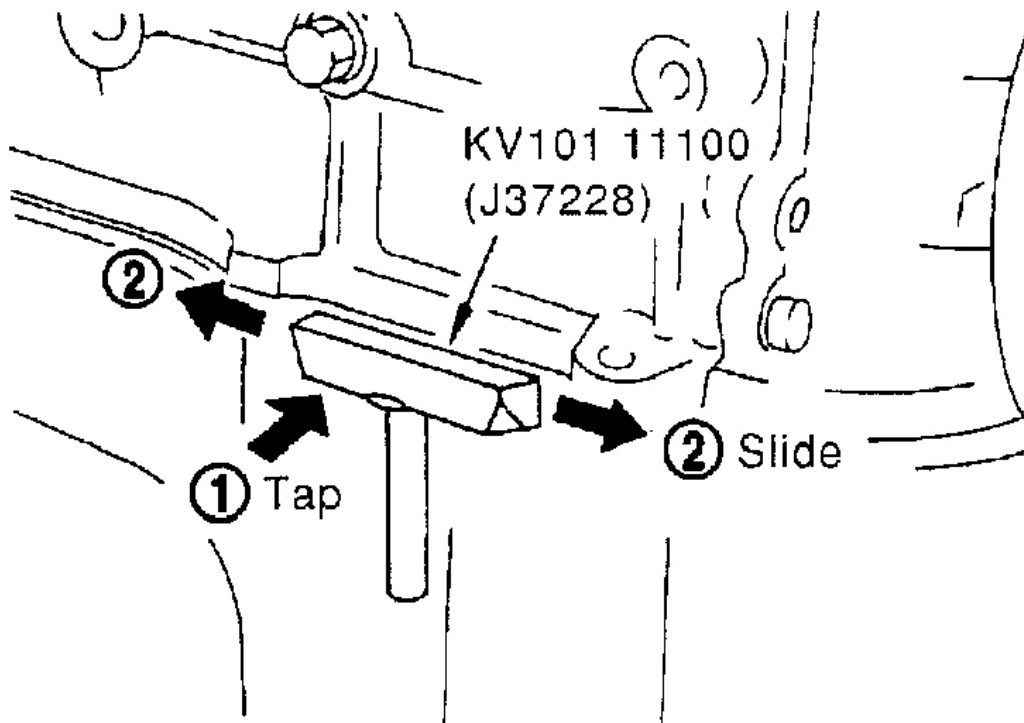


G02036536

Fig. 1: Removing The Mounting Bolts And Nuts
Courtesy of NISSAN MOTOR CO., U.S.A.

LIQUID GASKET APPLICATION PROCEDURE

1. Using a scraper, remove the old liquid gasket adhering to the gasket application surface and the mating surface.
 - Remove the liquid gasket completely from the groove of the gasket application surface, mounting bolts, and bolt holes.
2. Wipe the gasket application surface and the mating surface with white gasoline (lighting and heating use) to remove adhering moisture, grease and foreign materials.
3. Attach the liquid gasket to the tube presser.


Use Genuine Ultra Grey RTV silicone sealant Part No. 999MP-AM003 or equivalent.

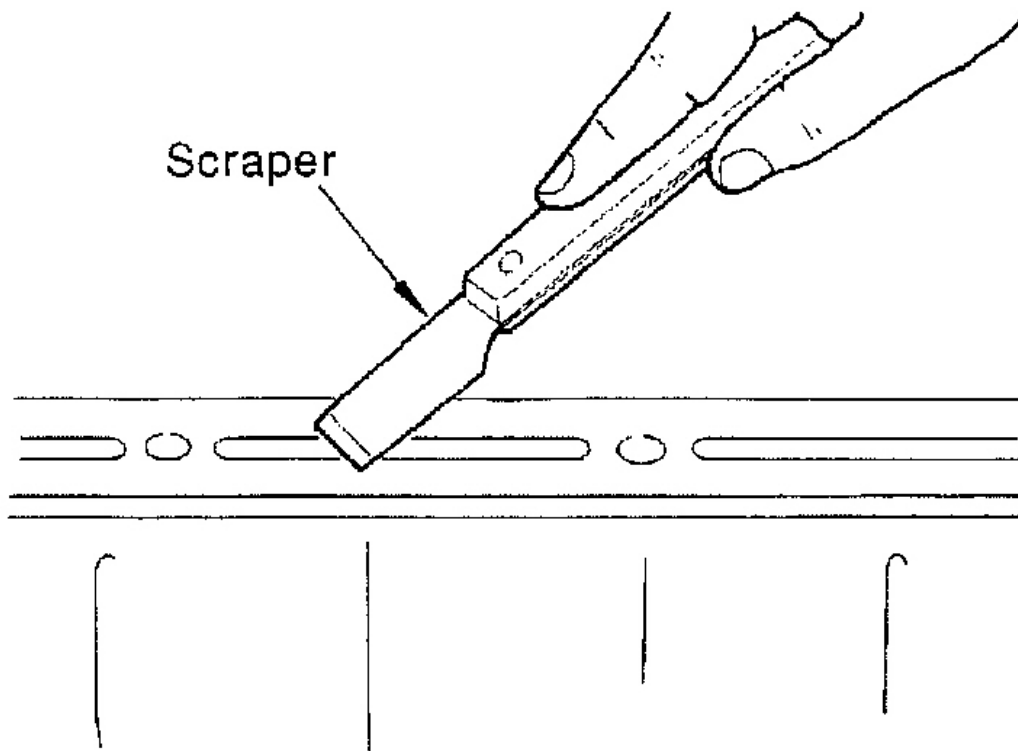

G02036537

Fig. 2: Removing Old Liquid Gasket
Courtesy of NISSAN MOTOR CO., U.S.A.

4. Apply the gasket without breaks to the specified location with the specified dimensions.
 - If there is a groove for the liquid gasket application, apply the gasket to the groove.
 - As for the bolt holes, normally apply the gasket inside the holes. Occasionally, it should be applied outside the holes. Make sure to read the text of service manual.
 - Within five minutes of gasket application, install the mating component.
 - If the liquid gasket protrudes, wipe it off immediately.
 - Do not retighten after the installation.

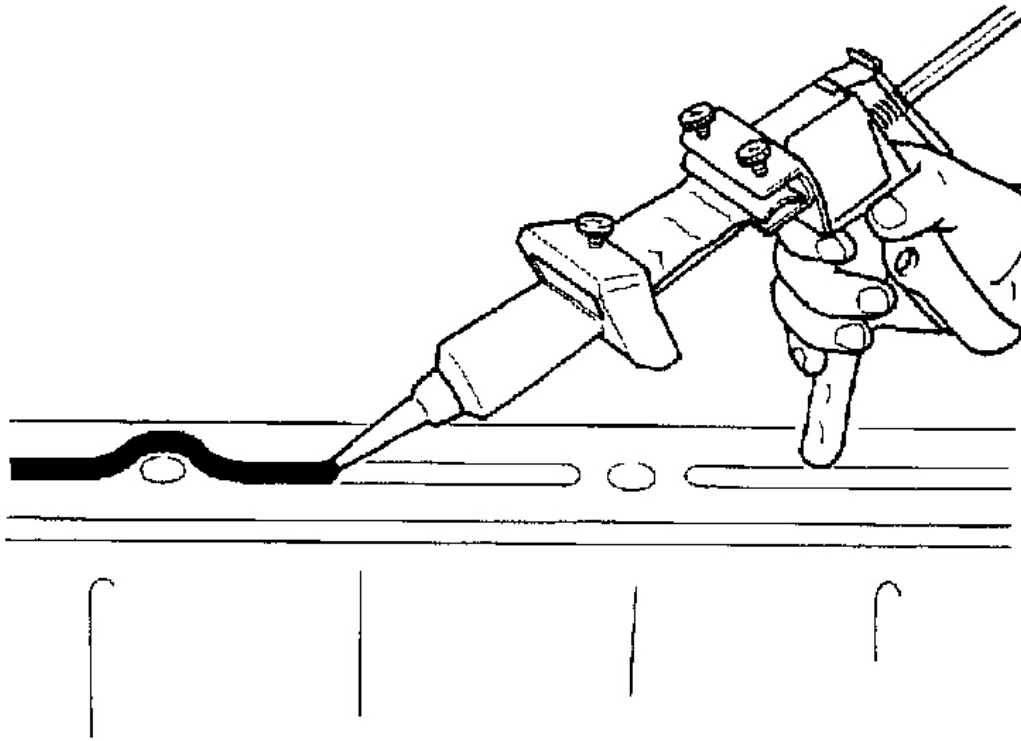

G02036538

Fig. 3: Applying The Gasket Without Breaks To The Specified Location
Courtesy of NISSAN MOTOR CO., U.S.A.

- After 30 minutes or more have passed from the installation, fill the engine oil and coolant.

CAUTION: If there are specific instructions in the service manual, observe them.






PREPARATION

SPECIAL SERVICE TOOLS

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

2002 Infiniti Q45

2002 ENGINE Engine Mechanical - Q45


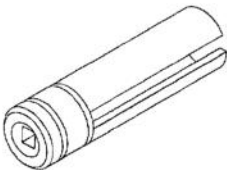
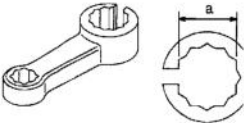
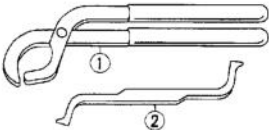

Tool number (Kent-Moore No.) Tool name		Description
KV10111100 (J37228) Seal cutter		Removing steel oil pan and rear timing chain case
KV10117100 (J36471-A) Heated oxygen sensor wrench		Loosening or tightening heated oxygen sensors with 22 mm (0.87 in) hexagon nut
KV10114400 (J-38365) Heated oxygen sensor wrench		Loosening or tightening heated oxygen sensors a: 22 mm (0.87 in)
EG15050500 (J45402) Compression gauge adapter		Inspection of compression pressure
KV101151S0 (J38972) Lifter stopper set 1 KV10115110 (J38972-1) Camshaft pliers 2 KV10115120 (J38972-2) Lifter stopper		Changing valve lifter shims
KV10112100 (BT8653-A) Angle wrench		Tightening bolts for bearing cap, cylinder head, etc.

G02036539

Fig. 4: Identifying Special Service Tools (1 Of 2)
Courtesy of NISSAN MOTOR CO., U.S.A.

2002 Infiniti Q45

2002 ENGINE Engine Mechanical - Q45

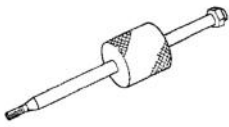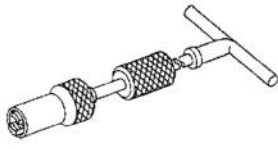Tool number (Kent-Moore No.) Tool name	Description
KV10114700 (J38139) Main bearing cap remover	Removing crankshaft main bearing cap 
KV10107902 (J38959) Valve oil seal puller	Removing valve oil seal 
KV10115600 (J38958) Valve oil seal drift	Installing valve oil seal Use side A. a: 20 (0.79) dia. d: 8 (0.31) dia. b: 13 (0.51) dia. e: 10.7 (0.421) dia. c: 10.3 (0.406) dia. f: 5 (0.20) dia. Unit: mm (in) 
EM03470000 (J8037) Piston ring compressor	Installing piston assembly into cylinder bore 
ST16610001 (J23907) Pilot bushing puller	Removing crankshaft pilot bushing 
WS39930000 (—) Tube presser	Pressing the tube of liquid gasket 

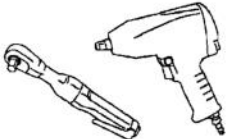
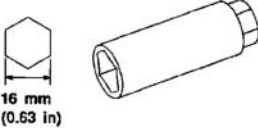

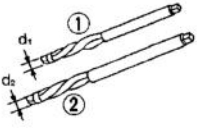
G02036540

Fig. 5: Identifying Special Service Tools (2 Of 2)
Courtesy of NISSAN MOTOR CO., U.S.A.

COMMERCIAL SERVICE TOOLS




2002 Infiniti Q45

2002 ENGINE Engine Mechanical - Q45

Tool number (Kent-Moore No.) Tool name	Description	
Quick connector release		Removing fuel tube quick connectors in engine room (Available in SEC. 164 of PARTS CATALOG: Part No. 16441 6N210)
Power tool		Loosening bolts and nuts
Spark plug wrench		Removing and installing spark plug
Valve seat cutter set		Finishing valve seat dimensions
Piston ring expander		Removing and installing piston ring
Valve guide drift		Removing and installing valve guide Intake & Exhaust: a: 9.5 mm (0.374 in) dia. b: 5.5 mm (0.217 in) dia.
Valve guide reamer		1: Reaming valve guide inner hole 2: Reaming hole for oversize valve guide Intake & Exhaust: d1 : 6.0 mm (0.236 in) dia. d2 : 10.2 mm (0.402 in) dia.

G02036541

Fig. 6: Identifying Commercial Service Tools (1 Of 2)
Courtesy of NISSAN MOTOR CO., U.S.A.

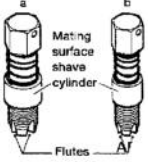Tool number (Kent-Moore No.) Tool name	Description	
Front oil seal drift		Installing front oil seal
Rear oil seal drift		Installing rear oil seal
(J-43897-18) (J-43897-12) Oxygen sensor thread cleaner		Reconditioning the exhaust system threads before installing a new oxygen sensor (Use with anti-seize lubricant shown below.) a: J-43897-18 (18 mm dia.) for zirconia oxygen sensor b: J-43897-12 (12 mm dia.) for titania oxygen sensor
Anti-seize lubricant (Permatex 133AR or equivalent meeting MIL specification MIL-A-907)		Lubricating oxygen sensor thread cleaning tool when reconditioning exhaust system threads


G02036542

Fig. 7: Identifying Commercial Service Tools (2 Of 2)

Courtesy of NISSAN MOTOR CO., U.S.A.

NOISE, VIBRATION, AND HARSHNESS (NVH) TROUBLESHOOTING

NVH TROUBLESHOOTING - ENGINE NOISE

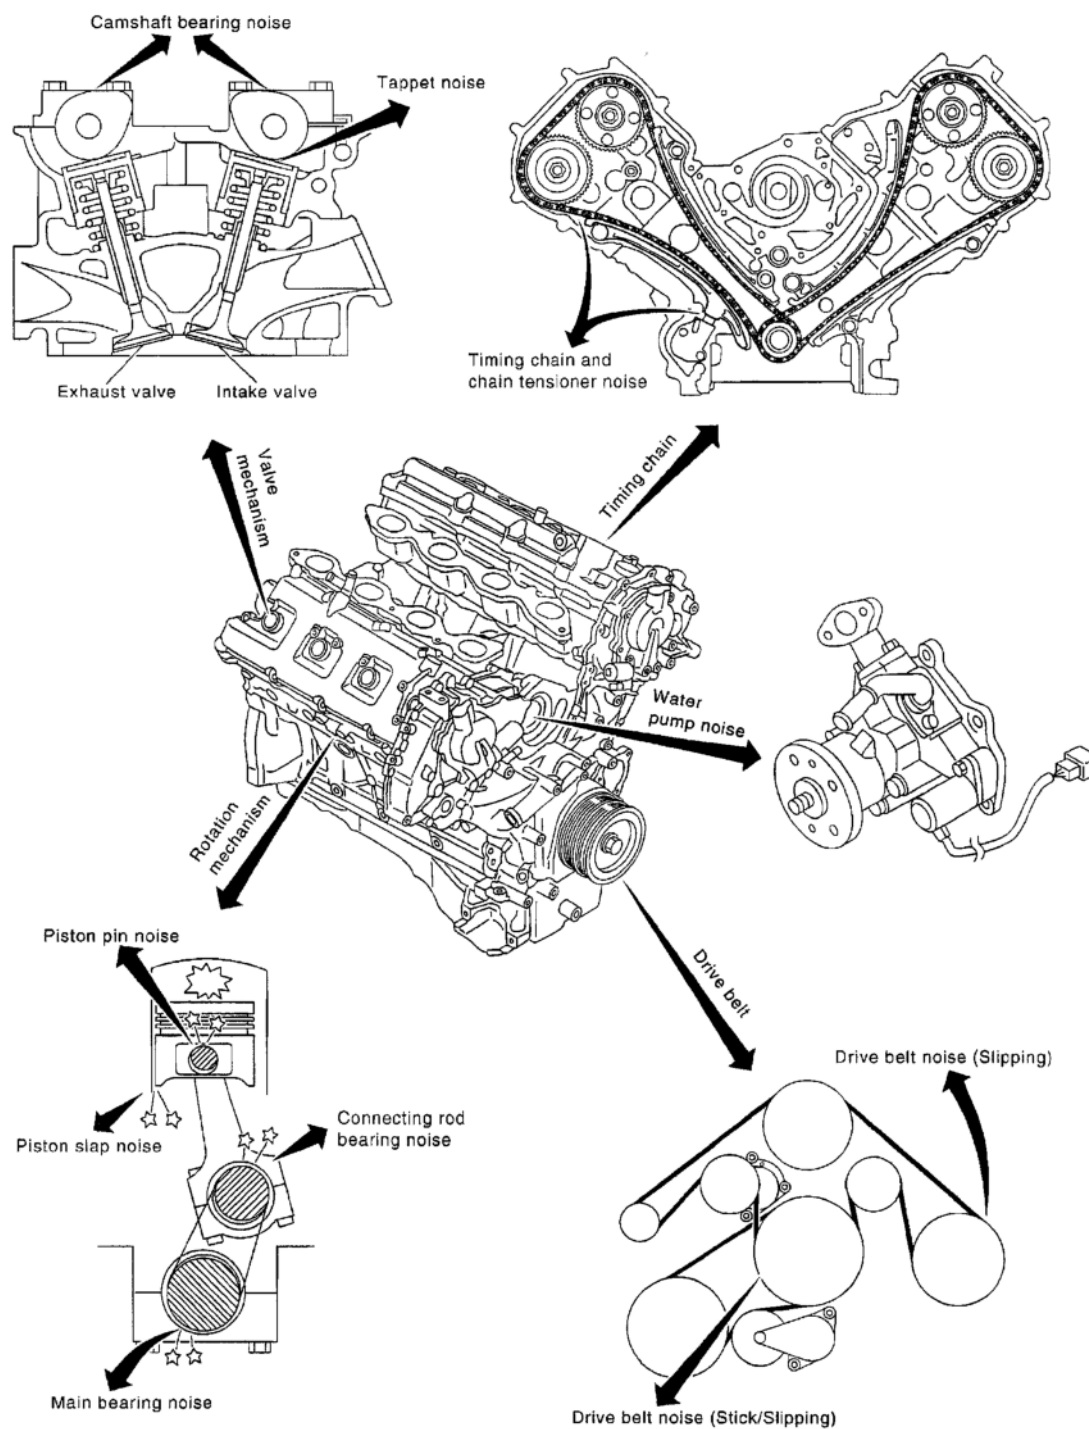

G02036543

Fig. 8: NVH Troubleshooting - Engine Noise
Courtesy of NISSAN MOTOR CO., U.S.A.

USE THE CHART BELOW TO HELP YOU FIND THE CAUSE OF THE SYMPTOM.

1. Locate the area where noise occurs.
2. Confirm the type of noise.
3. Specify the operating condition of engine.
4. Check specified noise source.

If necessary, repair or replace these parts.

Location of noise	Type of noise	Operating condition of engine						Source of noise	Check item
		Before warm-up	After warm-up	When starting	When idling	When racing	While driving		
Top of engine Rocker cover Cylinder head	Ticking or clicking	C	A	—	A	B	—	Tappet noise	Valve clearance
	Rattle	C	A	—	A	B	C	Camshaft bearing noise	Camshaft journal clearance Camshaft runout
Crankshaft pulley Cylinder block (Side of engine) Oil pan	Slap or knock	—	A	—	B	B	—	Piston pin noise	Piston and piston pin clearance Connecting rod bushing clearance
	Slap or rap	A	—	—	B	B	A	Piston slap noise	Piston-to-bore clearance Piston ring side clearance Piston ring end gap Connecting rod bend and torsion
	Knock	A	B	C	B	B	B	Connecting rod bearing noise	Connecting rod bushing clearance (Small end) Connecting rod bearing clearance (Big end)
	Knock	A	B	—	A	B	C	Main bearing noise	Main bearing oil clearance Crankshaft runout
Front of engine Timing chain cover	Tapping or ticking	A	A	—	B	B	B	Timing chain and chain tensioner noise	Timing chain cracks and wear Timing chain tensioner operation
Front of engine	Squeaking or fizzing	A	B	—	B	—	C	Other drive belts (Sticking or slipping)	Drive belts deflection
	Creaking	A	B	A	B	A	B	Other drive belts (Slipping)	Idler pulley bearing operation
	Squall Creak	A	B	—	B	A	B	Water pump noise	Water pump operation

A: Closely related B: Related C: Sometimes related —: Not related

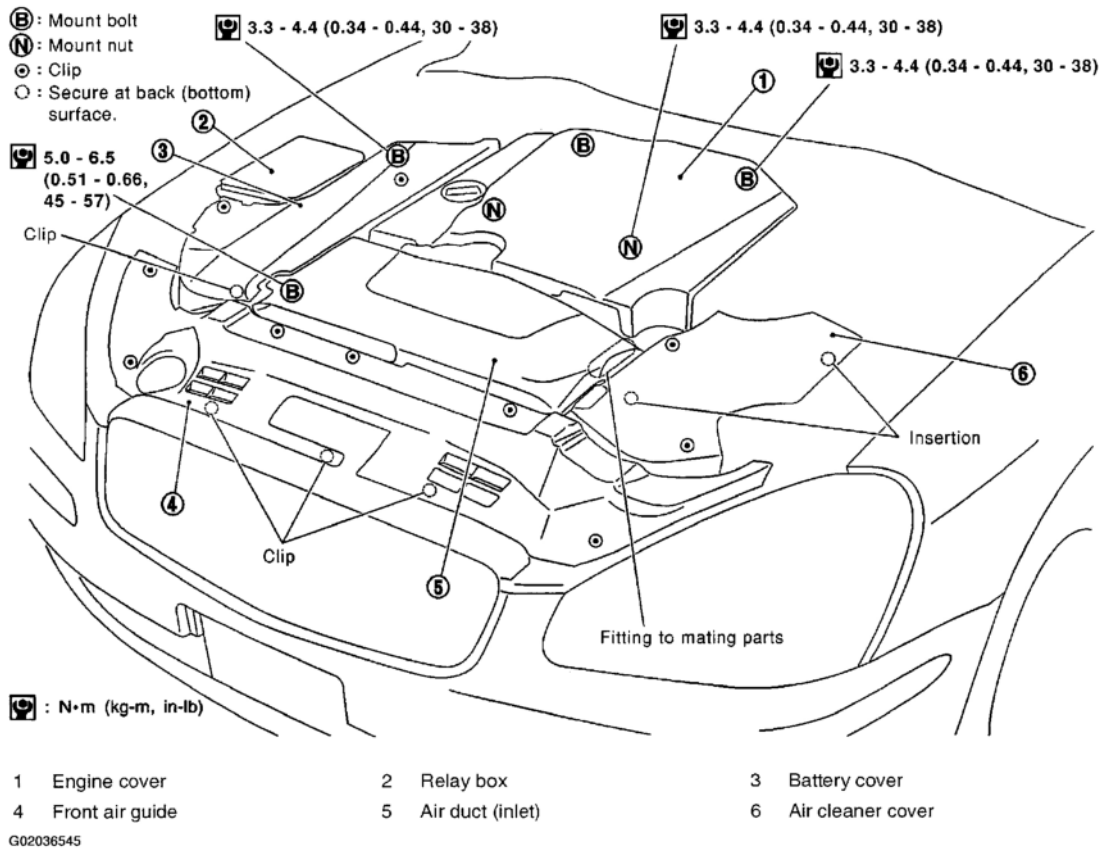
G02036544

Fig. 9: Symptom Chart

Courtesy of NISSAN MOTOR CO., U.S.A.

ENGINE ROOM COVER

REMOVAL AND INSTALLATION

**Fig. 10: Identifying Engine Room Cover**

Courtesy of NISSAN MOTOR CO., U.S.A.

REMOVAL

- Remove clips on back with clip driver.

CAUTION: Do not damage or scratch cover when installing or removing.

- Major parts and inspection points under each cover are as follows; (numbered as in illustration)
 - Upper side of engine assembly, power steering reservoir tank, cooling fan reservoir tank
 - Relay

3. Battery, relay box.
4. Cooling fan fluid cooler, power steering fluid cooling tube
5. Engine assembly front side, drive belts, cooling fan
6. Mass air flow sensor, air cleaner case

INSTALLATION

- Install in the reverse order of removal.

DRIVE BELTS

CHECKING DRIVE BELTS

SEC. 117

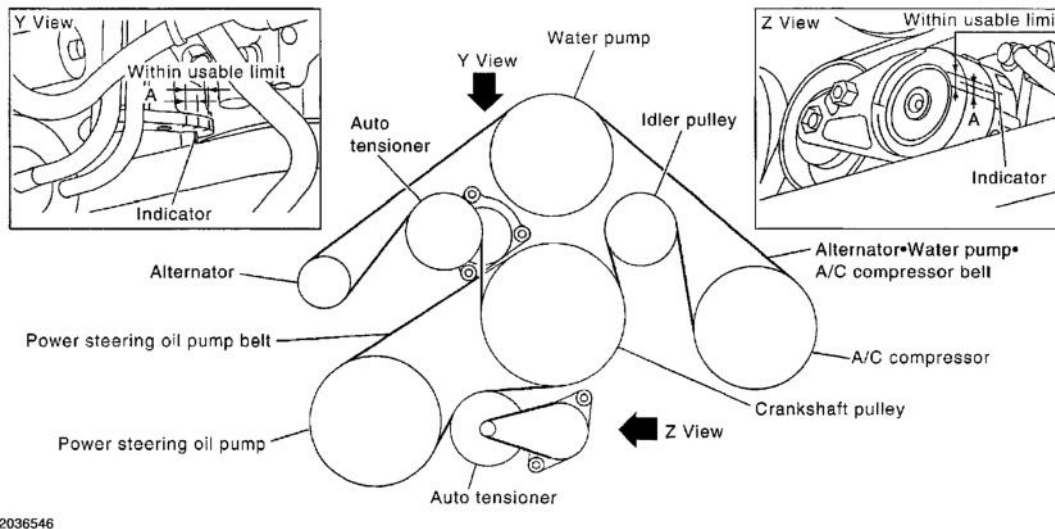


Fig. 11: Identifying Drive Belts

Courtesy of NISSAN MOTOR CO., U.S.A.

WARNING: Be sure to perform when the engine is stopped.

- Remove air duct (inlet) when inspecting drive belt for alternator, water pump and A/C compressor.
- Remove under cover (with power tool) when inspecting power steering pump belt.
- Make sure that indicator (single line notch) of each automatic tensioner is within the allowable working range (between three line notches).

NOTE:

- Check the automatic tensioner indication when the engine is cold.
- When the new drive belt is installed, the range should be A.

- **The indicator notch is located on the moving side of the tensioner for alternator, water pump, and A/C compressor belt, while it is found on the fixed side for power steering pump belt.**

- Visually check entire belt for wear, damage or cracks.
- If the indicator is out of allowable working range or belt is damaged, replace the belt.

TENSION ADJUSTMENT

- Belt tensioning is not necessary, as it is automatically adjusted by auto belt tensioner.

REMOVAL AND INSTALLATION


REMOVAL

Alternator, Water Pump and A/C Compressor Belt

1. Remove air duct (inlet).
2. With box wrench, and while securely holding the hexagonal part in pulley center of automatic tensioner, move the wrench handle in the direction of arrow (loosening direction of tensioner).

CAUTION: Avoid placing hand in a location where pinching may occur if the holding tool accidentally comes off.

3. Under the above condition, insert a metal bar of approximately 6 mm (0.24 in) in diameter (hexagonal bar wrench shown as example in the figure) through the holding boss to lock tensioner pulley arm.
 - Leave tensioner pulley arm locked until belt is installed again.

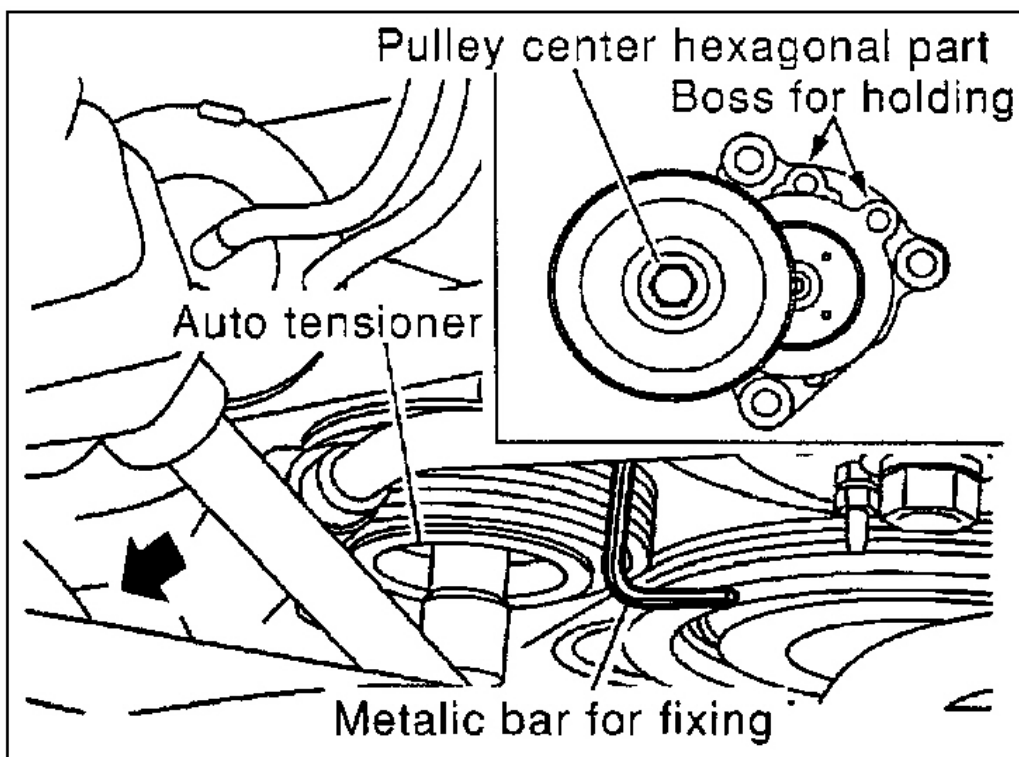

G02036547

Fig. 12: Removing Alternator, Water Pump And A/C Compressor Belt
 Courtesy of NISSAN MOTOR CO., U.S.A.


4. Remove alternator, water pump and A/C compressor belt.

Power Steering Pump Belt

1. Remove air duct (inlet) and under cover (with power tool).
2. While securely holding the hex part of automatic tensioner pulley center with box wrench, move the wrench handle in the direction of arrow (loosening direction of tensioner).

CAUTION: Avoid placing hand in a location where pinching may occur if the holding tool accidentally comes off.

3. Under the above condition, insert a metal bar of approximately 6 mm (0.24 in) in diameter (hexagonal bar wrench shown as example in the figure) through the holding boss to lock tensioner pulley arm.
 - Leave tensioner pulley arm locked until belt is installed again.

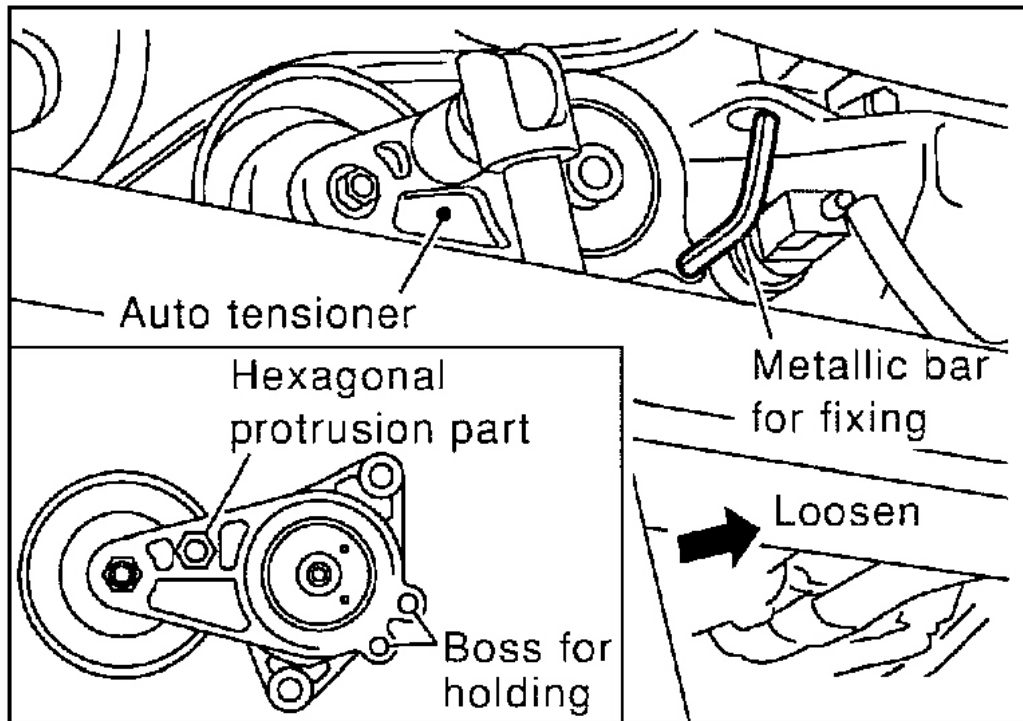

G02036548

Fig. 13: Removing Air Duct (Inlet) And Under Cover
 Courtesy of NISSAN MOTOR CO., U.S.A.

4. Remove power steering pump belt.
5. Remove alternator, water pump and A/C compressor belt.

INSTALLATION

Power Steering Pump Belt

1. Lock tensioner pulley arm the same way as instructed for removal.
2. Install power steering pump belt around each pulley.

CAUTION: Make sure belt is securely installed around all pulleys.

3. Unlock tensioner pulley arm to give tension to belt.
4. Rotate crankshaft pulley several turns clockwise to equalize belt tension between pulleys.

5. Check that belt tension is within the allowable working range, using indicator notch on the tensioner. Refer to , "**CHECKING DRIVE BELTS**".

Alternator, Water Pump and A/C Compressor Belt

1. Install power steering pump belt.
2. Lock tensioner pulley arm just as in removal procedures.
3. Set alternator, water pump and A/C compressor belt to each pulley.

CAUTION: Confirm belts are completely set to pulleys.

4. Release tensioner, and apply tensions to belt.
5. Turn crankshaft pulley clockwise several times to equalize tension between each pulley.
6. Confirm tensions of belt at indicator is within the allowable working range. Refer to , "**CHECKING DRIVE BELTS**".
7. Install air duct (inlet) and under cover.

DRIVE BELT AUTO TENSIONER AND IDLER PULLEY

SEC. 172

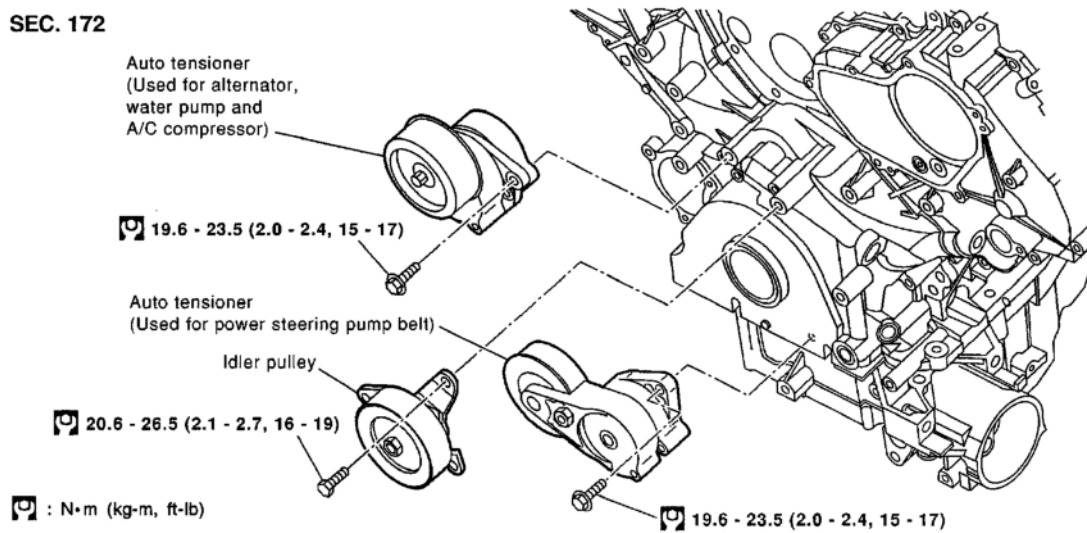


Fig. 14: Identifying Drive Belt Auto Tensioner And Idler Pulley
Courtesy of NISSAN MOTOR CO., U.S.A.

REMOVAL

1. Remove air duct (inlet) and engine under cover (with power tool).
2. Remove drive belts.

- Keep tensioner pulley arm locked after belt is removed. Refer to , "**REMOVAL AND INSTALLATION**".
3. Remove auto tensioner and idler pulley with power tool.
- Keep tensioner pulley arm locked to install or remove auto tensioner.

INSTALLATION

- Install in the reverse order of removal.

AIR CLEANER AND AIR DUCT

REMOVAL AND INSTALLATION

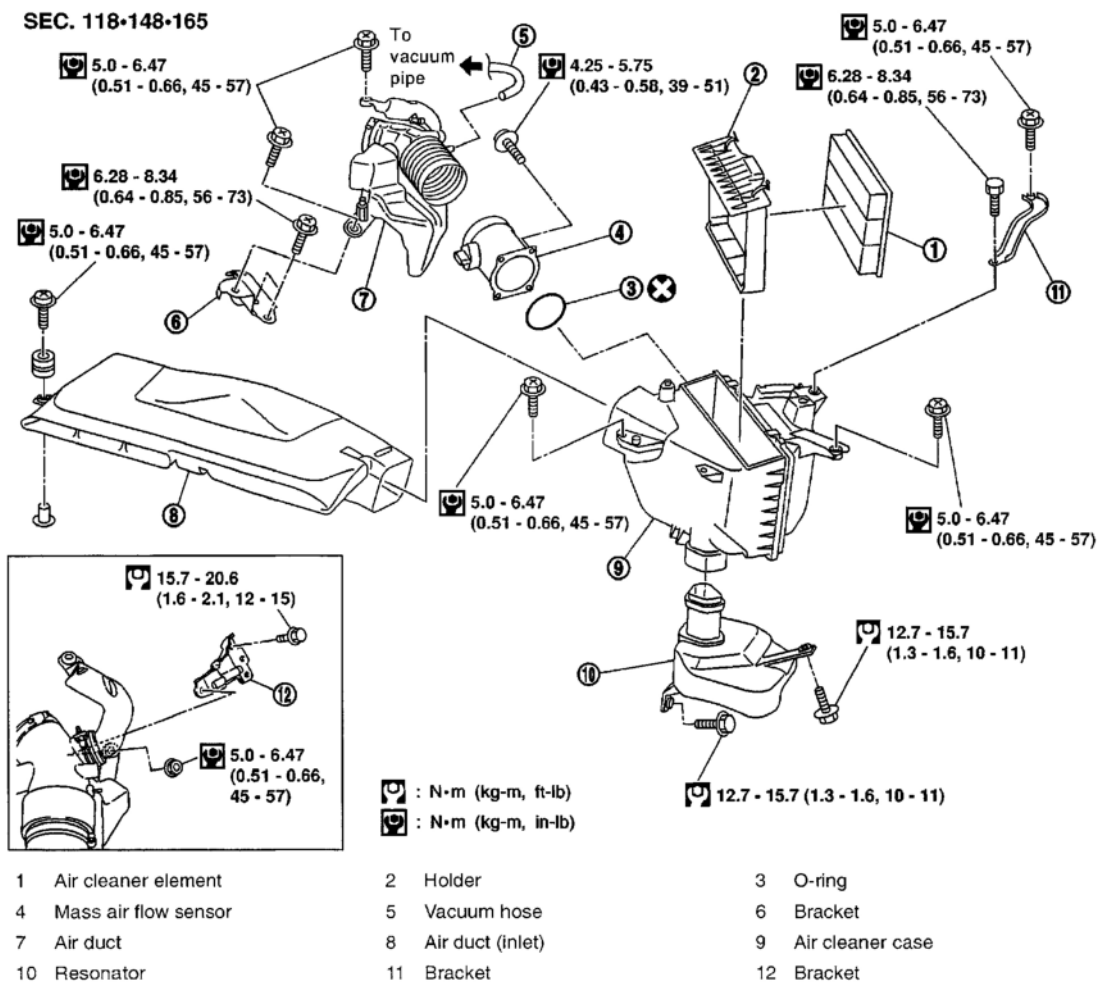


Fig. 15: Exploded View Of Air Cleaner And Air Duct
Courtesy of NISSAN MOTOR CO., U.S.A.

REMOVAL

1. Remove engine cover and air cleaner cover. Refer to **ENGINE ROOM COVER**, , "**REMOVAL AND INSTALLATION**".
2. Remove harness connector from mass air flow sensor.
3. Remove air duct (inlet), air cleaner case/mass air flow sensor assembly and air duct/resonator assembly disconnecting their joints.
 - Add marks as necessary for easier installation.
4. Remove mass air flow sensor from air cleaner case.

CAUTION: Handle mass air flow sensor with following cares.

- Do not shock it.
- Do not disassembly it.
- Do not touch its sensor.

5. Remove resonator in fender lifting left fender protector.

INSTALLATION

1. Align marks. Attach each joint. Screw clamps firmly.
2. Install in the reverse order of removal.

CHANGING AIR CLEANER ELEMENT

1. Remove air cleaner cover.

Refer to **ENGINE ROOM COVER**, , "**REMOVAL AND INSTALLATION**".

2. Remove two clips and lift up air cleaner element along with holder.
3. Remove air cleaner element from holder.

INTAKE MANIFOLD

REMOVAL AND INSTALLATION

SEC. 118-140-163-211-223

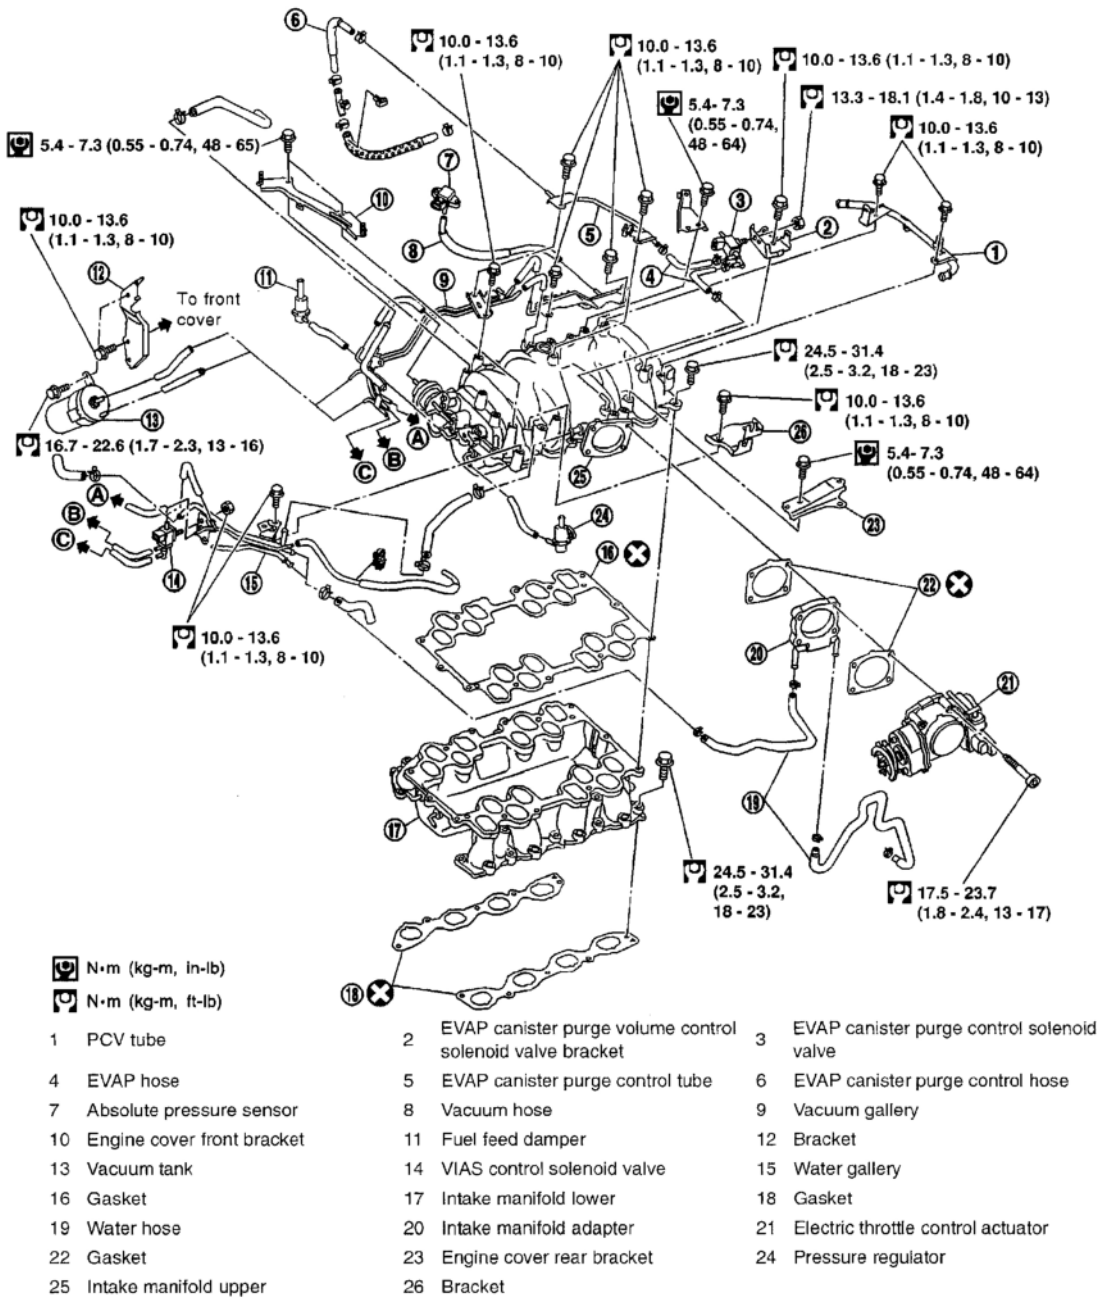


Fig. 16: Exploded View Of Intake Manifold
Courtesy of NISSAN MOTOR CO., U.S.A.

REMOVAL

WARNING: To avoid the danger of being scalded, never drain the coolant when the engine is hot.

1. Remove engine cover (with power tool), air cleaner cover and battery cover.

Refer to, "**REMOVAL AND INSTALLATION**".


2. Release fuel pressure.

Refer to **FUEL PRESSURE RELEASE** .

3. Remove air cleaner case and air duct assembly.

Refer to, "**REMOVAL AND INSTALLATION**".

4. Drain coolant when engine is cooled. Refer to **CHANGING ENGINE COOLANT** .
5. Disconnect fuel tube quick connector on engine side (The same apply to the quick connector on vehicle side excepting quick connector cap).

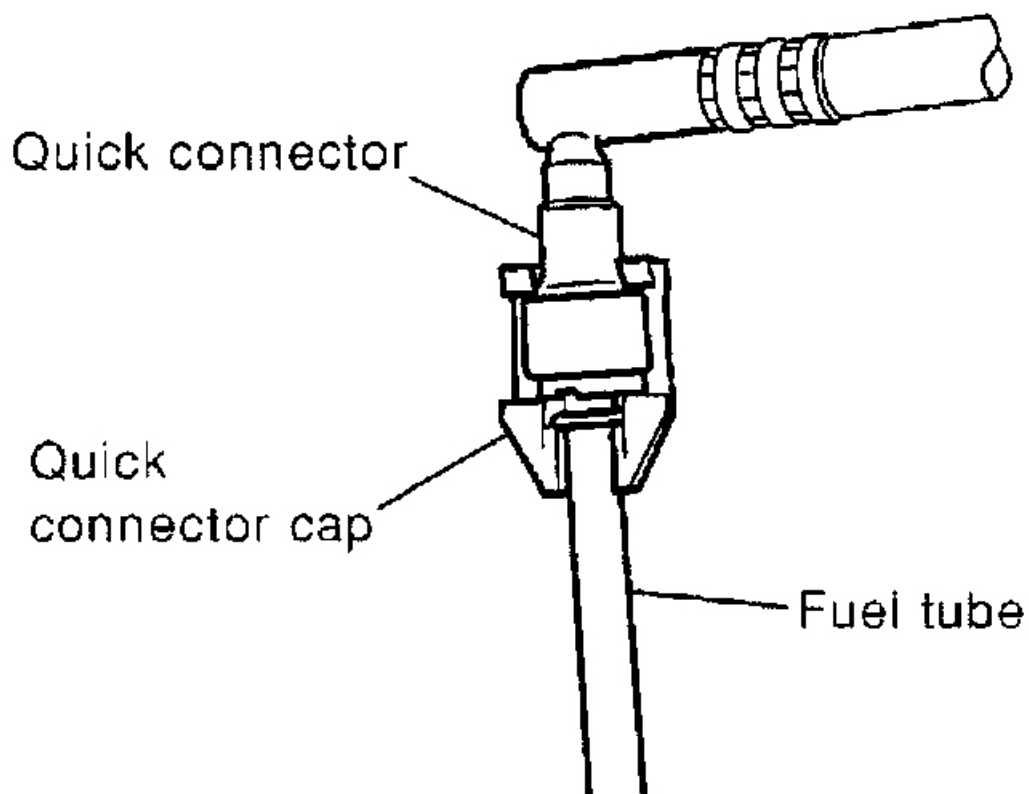


G02036552

Fig. 17: Disconnecting Fuel Tube Quick Connector

Courtesy of NISSAN MOTOR CO., U.S.A.

- Using tool of quick connector release (here in after "release"), perform the following steps to disconnect quick connector.

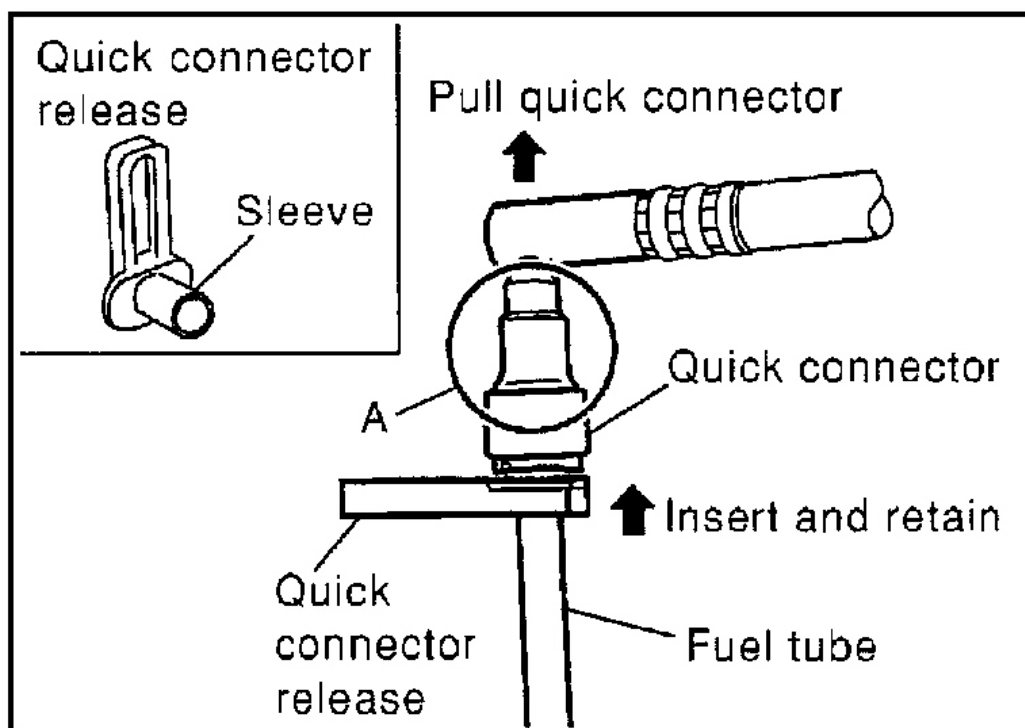

G02036553


Fig. 18: Disconnecting Quick Connector
Courtesy of NISSAN MOTOR CO., U.S.A.

- Remove quick connector cap (engine side only).
- With the sleeve side of release facing quick connector, install release onto fuel tube.
- Insert release into quick connector until sleeve contacts and goes no further. Hold the release on that position.

CAUTION: Inserting the release hard will not disconnect quick connector.
Hold release where it contacts and goes no further.

- Draw and pull out quick connector straight from fuel tube.

CAUTION: • Pull quick connector holding A position in illustration.

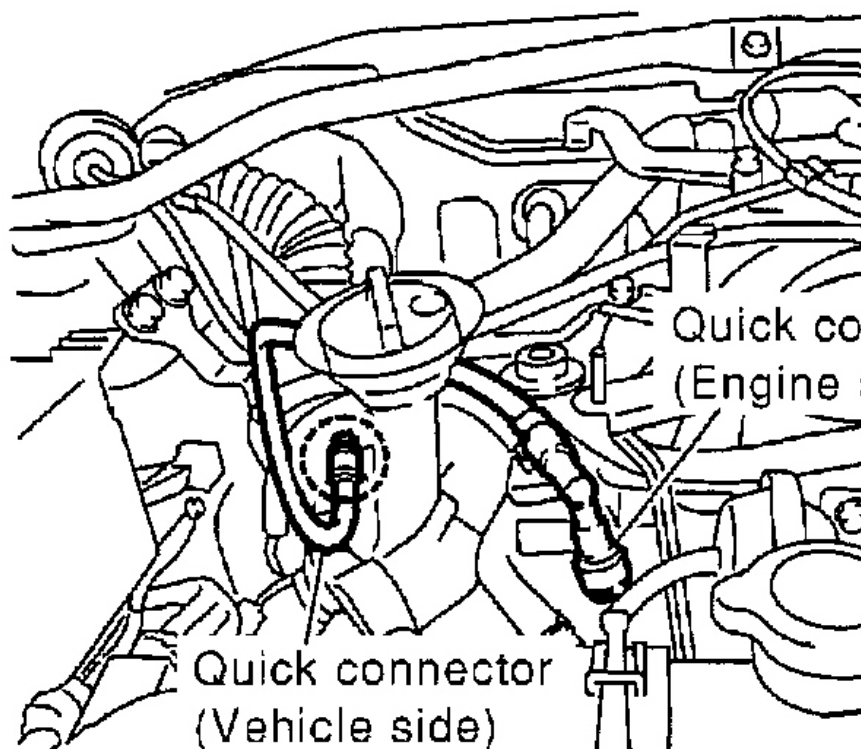

G02036554

Fig. 19: Removing Quick Connector Cap
Courtesy of NISSAN MOTOR CO., U.S.A.

- Do not pull with lateral force applied. O-ring inside quick co be damaged.
- Prepare container and cloth beforehand as fuel will leak out
- Avoid fire and sparks.
- Be sure to cover openings of disconnected pipes with plug to avoid fuel leakage and entry of foreign materials.


6. Move cooling fan fluid reservoir tank.
7. Remove or disconnect intake manifold upper, wiring harnesses, brackets, vacuum hose, vacuum gallery and PCV hose and tube.

CAUTION: • Cover engine openings to avoid entry of foreign materials.

8. Disconnect water hoses.
9. Remove electric throttle control actuator loosening fixing bolts diagonally.

CAUTION: Handle carefully to avoid any shock.


10. Loosen bolts in reverse order of illustration to remove intake manifold upper assembly with power tool.

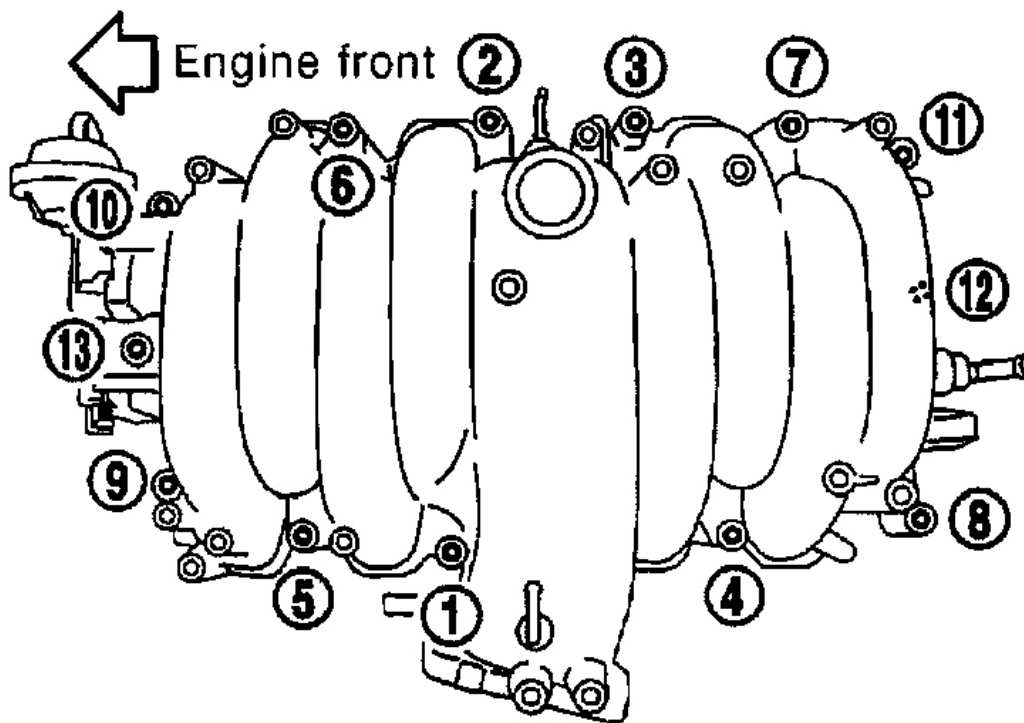

G02036555

Fig. 20: Removing Intake Manifold Upper Assembly
Courtesy of NISSAN MOTOR CO., U.S.A.

11. Loosen bolts in reverse order of illustration to remove intake manifold lower assembly with power tool.

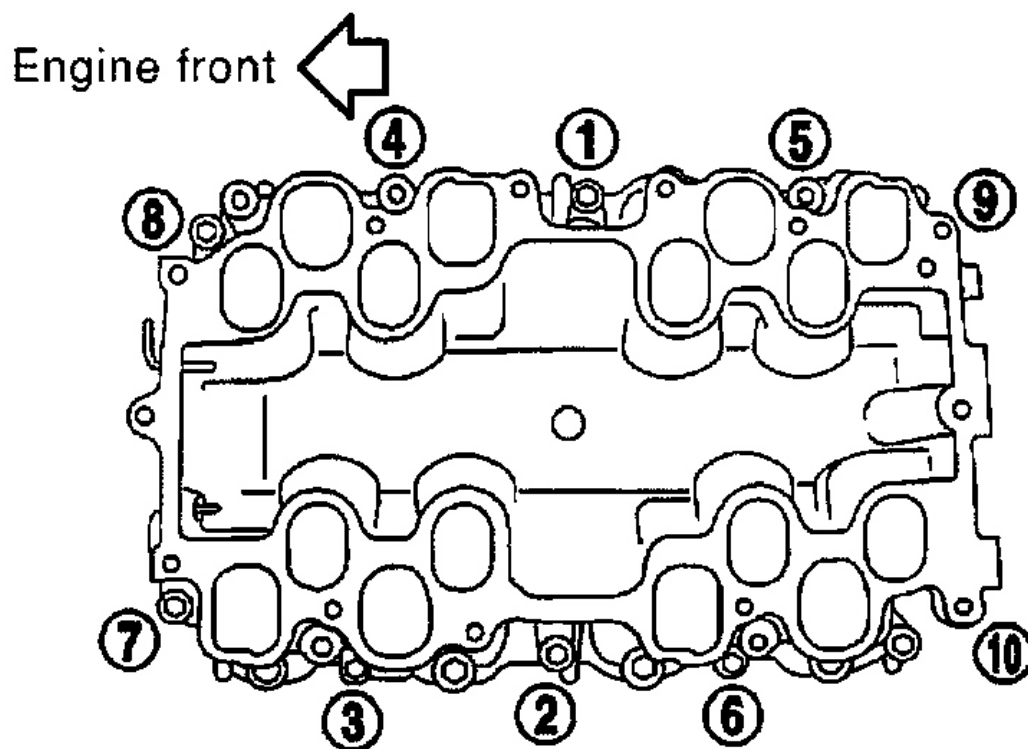

G02036556


Fig. 21: Removing Intake Manifold Lower Assembly
Courtesy of NISSAN MOTOR CO., U.S.A.

INSPECTION AFTER REMOVAL

Surface Distortion

- Using straightedge and feeler gauge, inspect surface distortion of intake manifold lower and intake manifold upper.

Standard: 0.1 mm (0.004 in)

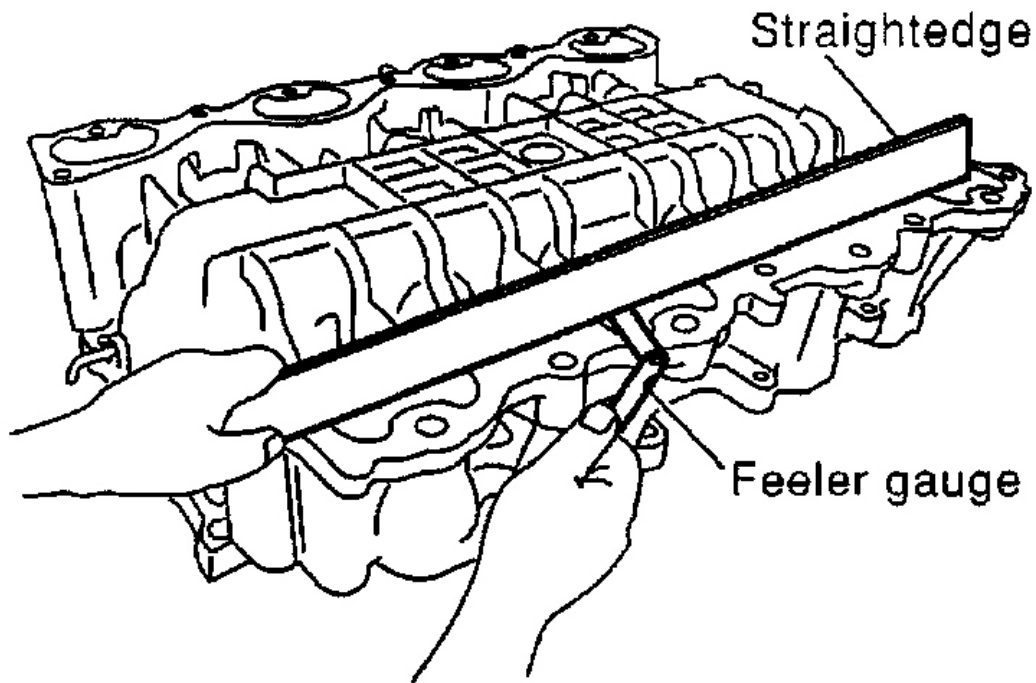

G02036557

Fig. 22: Inspecting Surface Distortion Of Intake Manifold Lower And Intake Manifold Upper
Courtesy of NISSAN MOTOR CO., U.S.A.


INSTALLATION

- Install intake manifold bolts in the reverse order of removal.

Tightening Intake Manifold Lower Bolts

- Tighten in numerical order as shown in the figure.

NOTE: No.7 and 8 have longer bolt length than others.

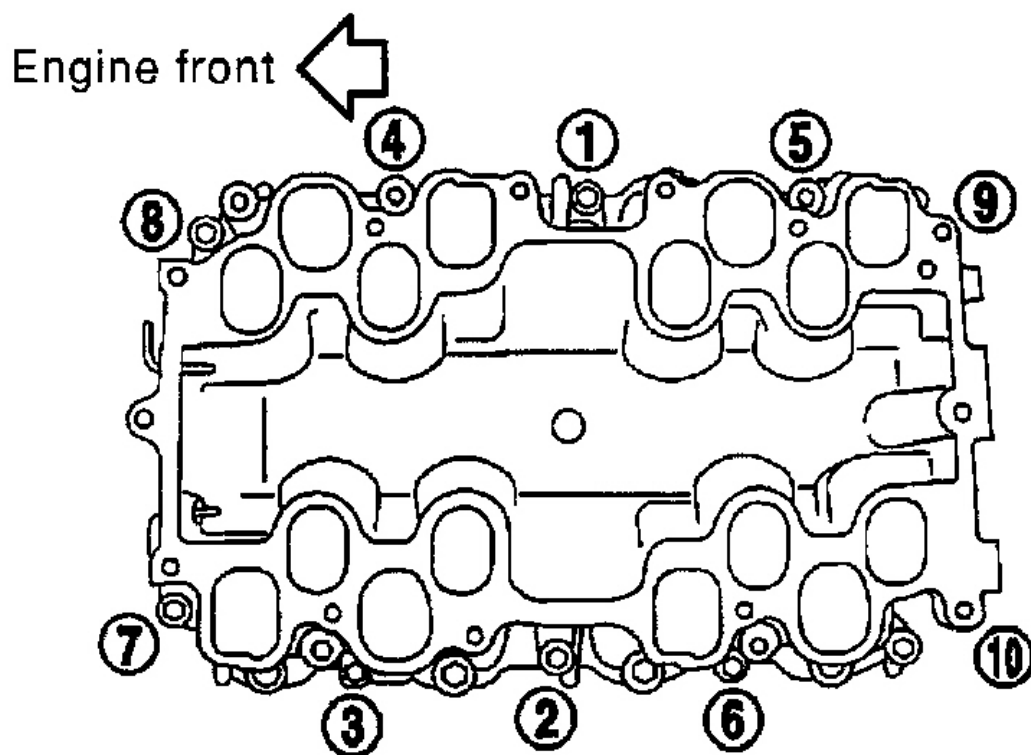


G02036558

Fig. 23: Tightening Intake Manifold Lower Bolts
Courtesy of NISSAN MOTOR CO., U.S.A.

Tightening Intake Manifold Upper Bolts

- Tighten in numerical order as shown in the figure.

NOTE: No.1 to 4 have longer bolt length than others.

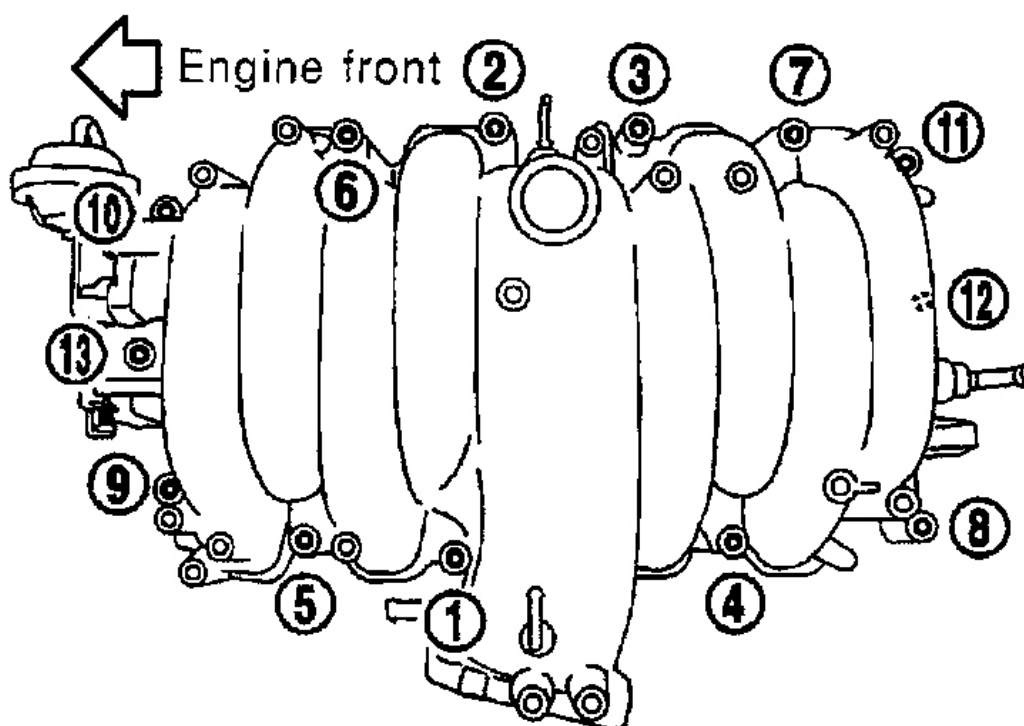

G02036559

Fig. 24: Tightening Intake Manifold Upper Bolts
 Courtesy of NISSAN MOTOR CO., U.S.A.

Installation of Electric Throttle Control Actuator

- Install intake manifold adapter gasket and electric throttle control actuator gasket so that three protrusions for installation identification do not face downward.
- Tighten fixing bolts of electric throttle control actuator equally and diagonally in several steps.
- After installation perform procedure in , "**INSPECTION AFTER INSTALLATION**".

Connecting Water Hose


- Install water hose so that its overlap width for connection is between 27 mm (1.06 in) and 32 mm (1.26 in) (target: 27 mm, 1.06 in).

Connecting Vacuum Tube

- Refer to **VACUUM DIAGRAMS** .

Connecting Quick Connector of Fuel Tube

- Install quick connector as follows. (The steps are the same for quick connectors on engine side and vehicle side excepting quick connector cap.)
 1. Make sure no foreign substances are deposited in and around tube and quick connector and no damage on them.
 2. Thinly apply new engine oil around the fuel tube from tip end to the spool end.
 3. Align center to insert quick connector straightly into fuel tube. On vehicle piping side:
 - Insert until the paint mark for engagement identification (white) goes completely inside quick connector so that you cannot see it from the straight side of the connected part. Use a mirror to check this where it is not possible to view directly from the straight side, such as quick connector on vehicle side.

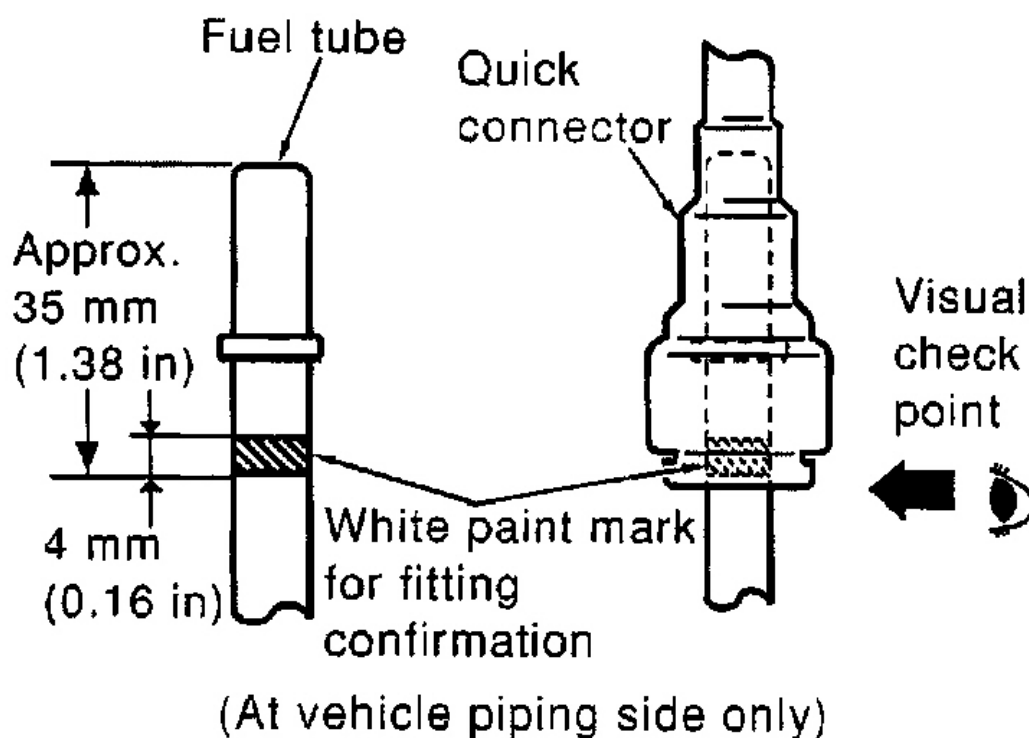

G02036560


Fig. 25: Aligning Center To Insert Quick Connector Straightly Into Fuel Tube
Courtesy of NISSAN MOTOR CO., U.S.A.

On engine side:

- Insert fuel tube into quick connector until upper spool is completely inside quick connector, and lower spool exposes right below quick connector.

CAUTION:

- Hold A position in illustration when inserting fuel tube connector.
- Carefully align center to avoid inclined insertion to pre ring inside quick connector.
- Insert until you hear a "click" sound and actually feel t

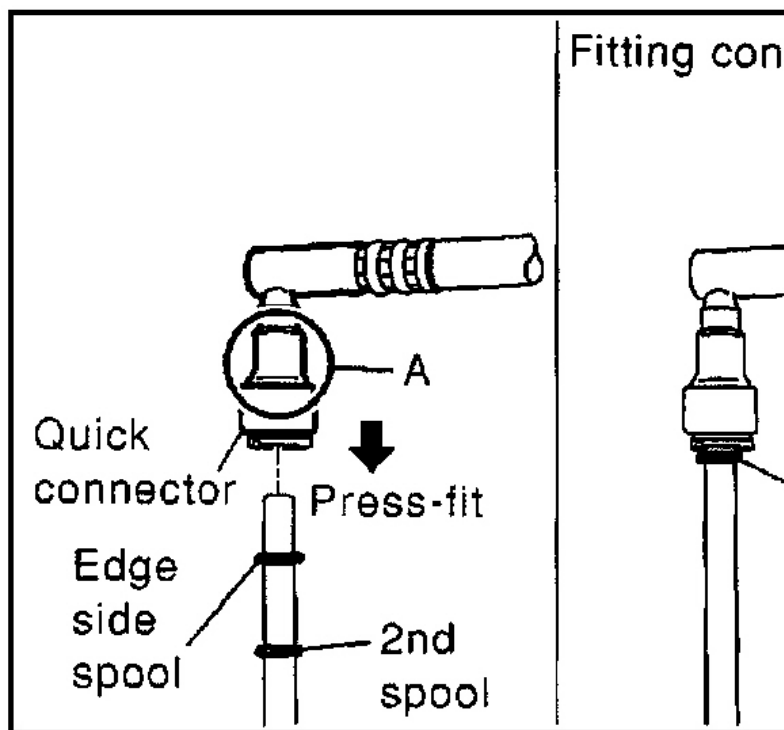

G02036561


Fig. 26: Inserting Fuel Tube Into Quick Connector
 Courtesy of NISSAN MOTOR CO., U.S.A.

- To avoid misidentification of engagement with a simila perform the next step.
4. Before clamping fuel tube with hose clamps, pull quick connector hard by hand holding A position. Make sure it is completely engaged (connected) so that it does not come out from fuel tube.

NOTE: Recommended pulling force is 50 N (5.1 kg, 11.2 lb.).

5. Install quick connector cap on quick connector joint (on engine side only).

6. Install fuel tube to hose clamp.

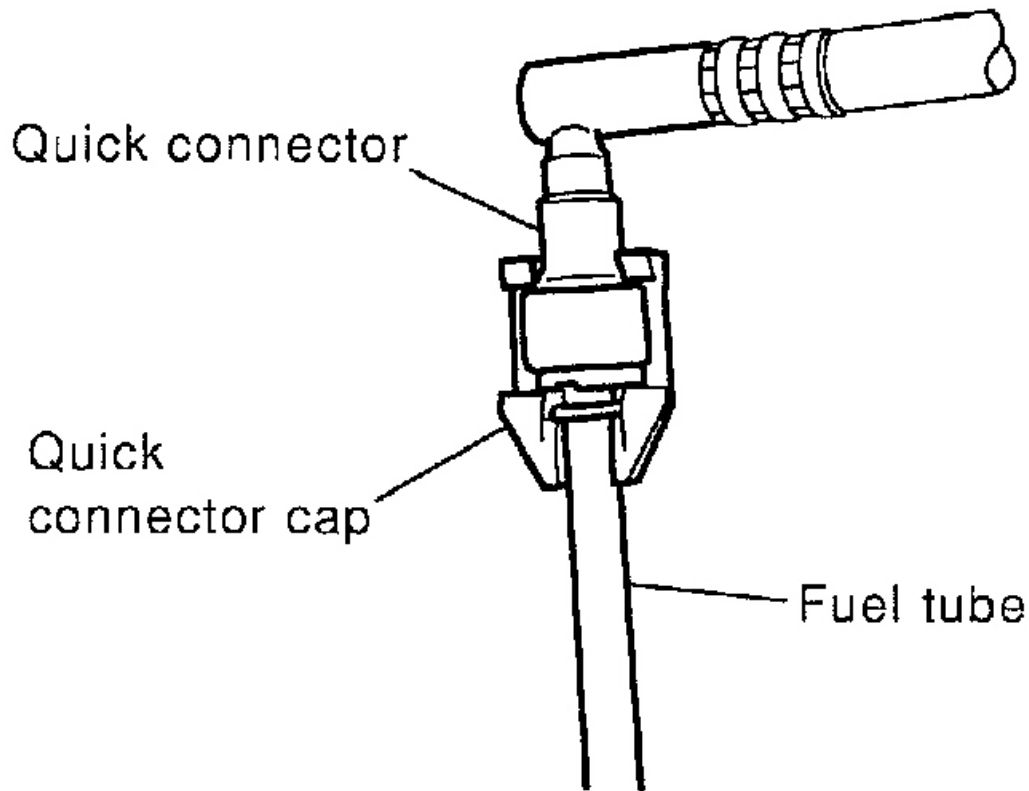

G02036562

Fig. 27: Installing Fuel Tube To Hose Clamp
Courtesy of NISSAN MOTOR CO., U.S.A.

INSPECTION AFTER INSTALLATION

- Perform procedures for "Throttle Valve Closed Position Learning" after finishing repairs. Refer to **THROTTLE POSITION SENSOR, IGNITION TIMING & IDLE SPEED** .
- If electric throttle control actuator is replaced, perform procedures for "Idle Air Volume Learning" after finishing repairs. Refer to **THROTTLE POSITION SENSOR, IGNITION TIMING & IDLE SPEED** .

EXHAUST MANIFOLD AND THREE WAY CATALYST

REMOVAL AND INSTALLATION

SEC. 110•140•147•226

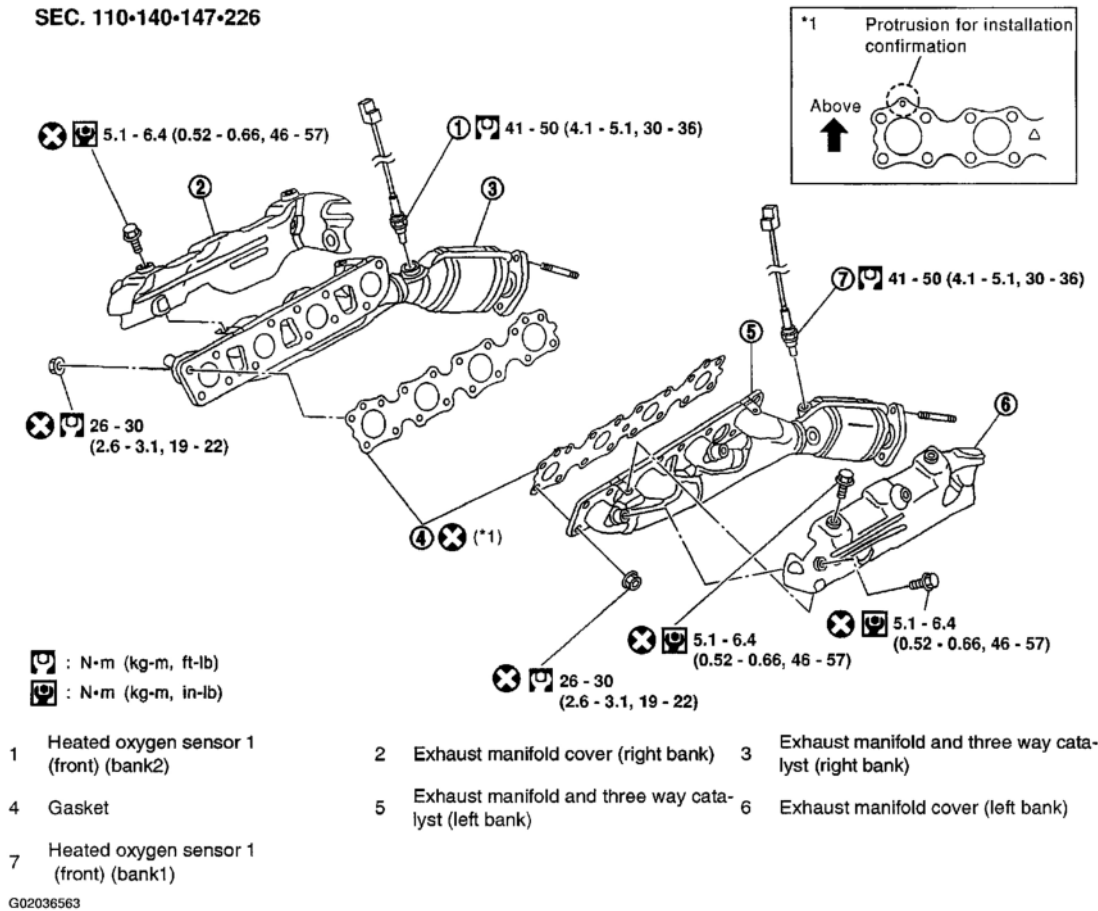


Fig. 28: Exploded View Of Exhaust Manifold And Three Way Catalyst
Courtesy of NISSAN MOTOR CO., U.S.A.


REMOVAL

1. Remove heated oxygen sensors.
 - Follow below steps to remove each heated oxygen sensor.
 - a. Remove engine under cover, engine cover and other engine room covers with power tool (Right, Left, right rear and left rear).
 - b. Remove harness connector of each heated oxygen sensor, and harness from bracket and middle clamp.
 - c. Using heated oxygen sensor wrench, remove both left and right heated oxygen sensors.

CAUTION:

- Be careful not to damage heated oxygen sensor.
- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

2. Remove exhaust manifold and three way catalyst (left bank) below steps.
 - a. Remove A/C compressor with power tool.
 - b. Remove exhaust front tube with power tool.

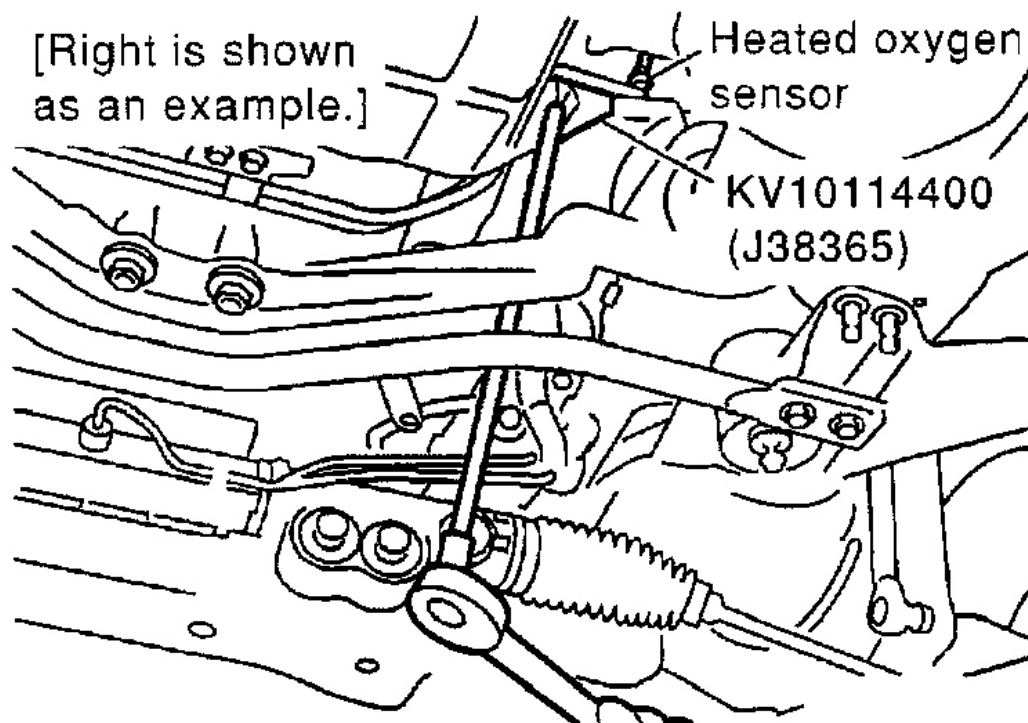


G02036564

Fig. 29: Removing Heated Oxygen Sensors
Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Remove nuts on bottom of left engine mounting insulator, and lift up left side of engine approximately 3 cm (1.18 in) with mission jack.
- d. Remove starter motor with power tool. Refer to **STARTER**.
- e. Support and lift up bottom of engine with mission jack. Remove left engine mount insulator along with left engine mount brackets.
- f. Remove exhaust manifold cover.
- g. Loosen nuts in reverse order of illustration to remove exhaust manifold and three way catalyst.

CAUTION: Disregard the numerical order No.9 to 12 in removal.

3. Remove exhaust manifold and three way catalyst right bank loosening bolts in reverse order in the figure.
 - a. Remove drive belt and alternator with power tool. Refer to **GENERATOR**.
 - b. Remove exhaust front tube with power tool.

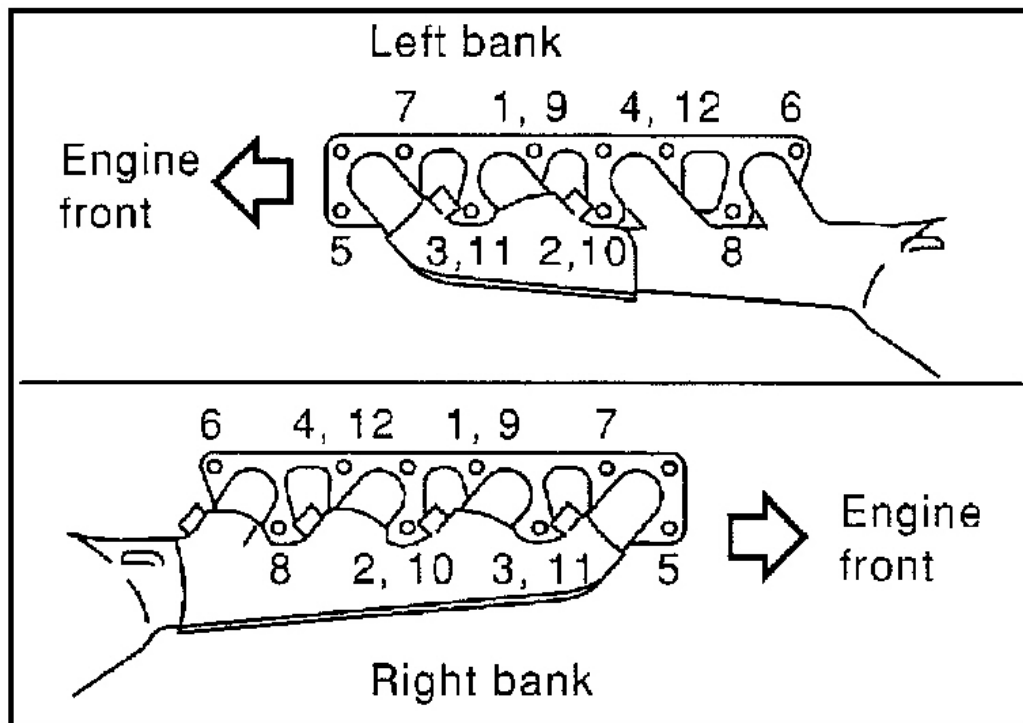

G02036565

Fig. 30: Removing Exhaust Manifold

Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Remove steering lower joint to enable steering shaft to move freely.
- d. Support and lift up bottom of engine with transmission jack. Remove right engine mount insulator along with right engine mount brackets.
- e. Remove exhaust manifold cover.
- f. Loosen nuts in reverse order of illustration to remove exhaust manifold and three way catalyst with power tool.


CAUTION: Disregard the numerical order No.9 to 12 in removal.

INSPECTION AFTER REMOVAL

Surface Distortion

- Use a reliable straightedge and feeler gauge to check the flatness of exhaust manifold fitting surface.

Standard : 0.3mm (0.012in)

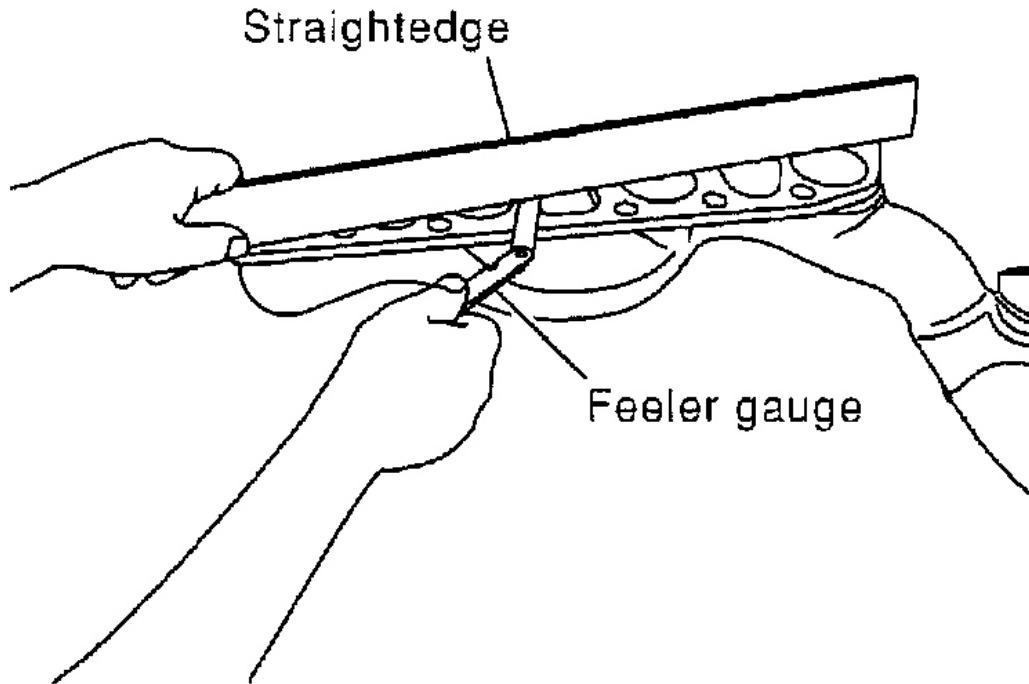

G02036566

Fig. 31: Checking Flatness Of Exhaust Manifold Fitting Surface
Courtesy of NISSAN MOTOR CO., U.S.A.

INSTALLATION

- Install in the reverse order of removal.

Exhaust Manifold Gasket


- Install exhaust manifold gasket with its directional protrusion set upward.

Refer to **Fig. 28**.

Tightening Exhaust Manifold Nuts

- Install exhaust manifold and three way catalyst in the numerical order shown in the figure.

- Tighten nuts No.1 to No.4 in two steps. Order No.9 to 12 shows second step.

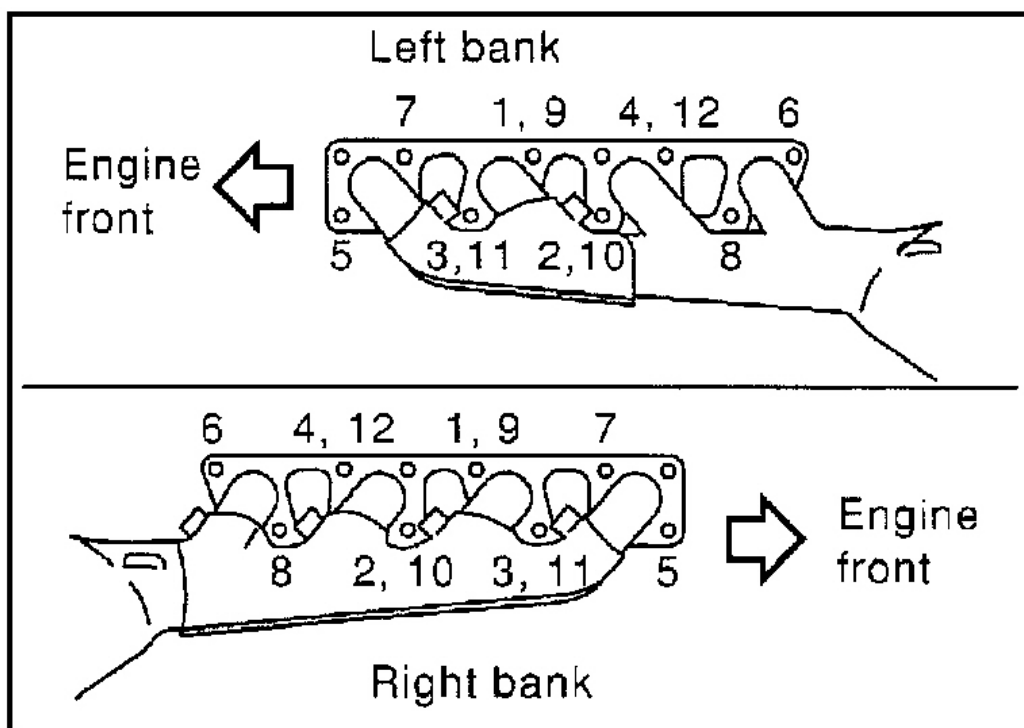

G02036567

Fig. 32: Installing Exhaust Manifold

Courtesy of NISSAN MOTOR CO., U.S.A.


Installation of Heated Oxygen Sensor**CAUTION:**

- When using heated oxygen sensor wrench (KV10114400), tighten to the middle of specified torque because length of tool may induce sight indication increase. (Do not tighten to the maximum specified torque)
- Before installing a new heated oxygen sensor, clean exhaust system threads using oxygen sensor thread cleaner tool, J-43897-18 or J-43897-12, and apply anti-seize lubricant.
- Do not over torque the heated oxygen sensor. Doing so may cause damage to the heated oxygen sensor, resulting in the MIL coming on.

OIL PAN AND OIL STRAINER

REMOVAL AND INSTALLATION

SEC. 110-150

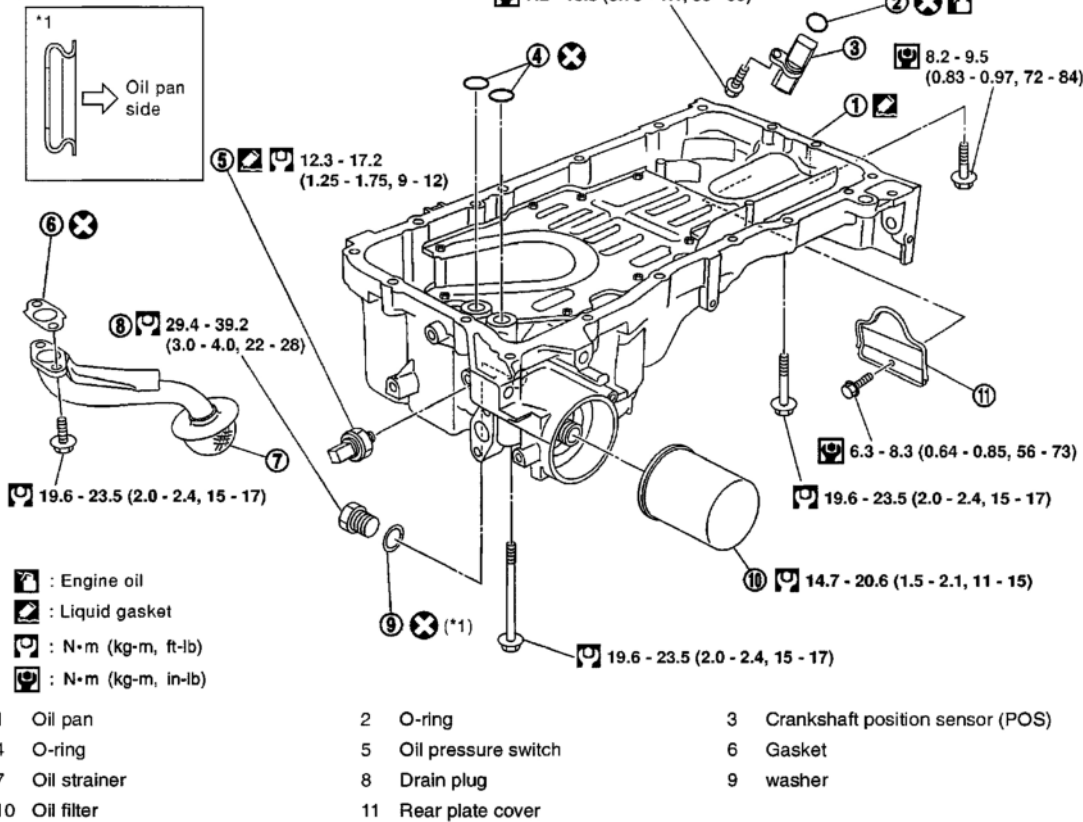

G02036568

Fig. 33: Exploded View Of Oil Pan And Oil Strainer
 Courtesy of NISSAN MOTOR CO., U.S.A.

REMOVAL

WARNING: To avoid the danger of being scalded, never drain the engine oil when the engine is hot.

1. Remove engine under cover, engine cover and engine room cover with power tool.
2. Drain engine oil.
3. Remove drive belts. Refer to , "**REMOVAL AND INSTALLATION**".
4. Remove auto tensioner of power steering pump belt. Refer to , "**DRIVE BELT AUTO TENSIONER AND IDLER PULLEY**".
5. Move power steering pump and remove power steering pump bracket.
6. Remove oil filter.
7. Remove A/C compressor fitting bolts, and install A/C compressor temporarily on vehicle side with ropes or equivalent.

8. Remove harness and wires of lower side of oil pan from oil pan.
9. Remove crankshaft position sensor (POS) from transmission.

CAUTION:


- Do not drop or shock it.
- Do not disassembly it.
- Do not let steel powders contact magnetic parts of sensor tips.
- Do not leave where magnetically effected.

10. Install engine slinger and hang engine assembly to secure position. Refer to **CONNECTING ROD BEARING (BIG END)**, "Removal and Installation".
11. Remove front suspension member.

Refer to **REMOVAL & INSTALLATION** .

12. Remove oil pan in the order shown below.
 - a. Remove rear plate cover.
 - b. Remove transmission joint bolts (M12: 4 bolts) which pierce oil pan.
 - c. Loosen oil pan bolts with power tool in reverse order of illustration to remove.

CAUTION: Exclude No. 11 and 17 in removal.

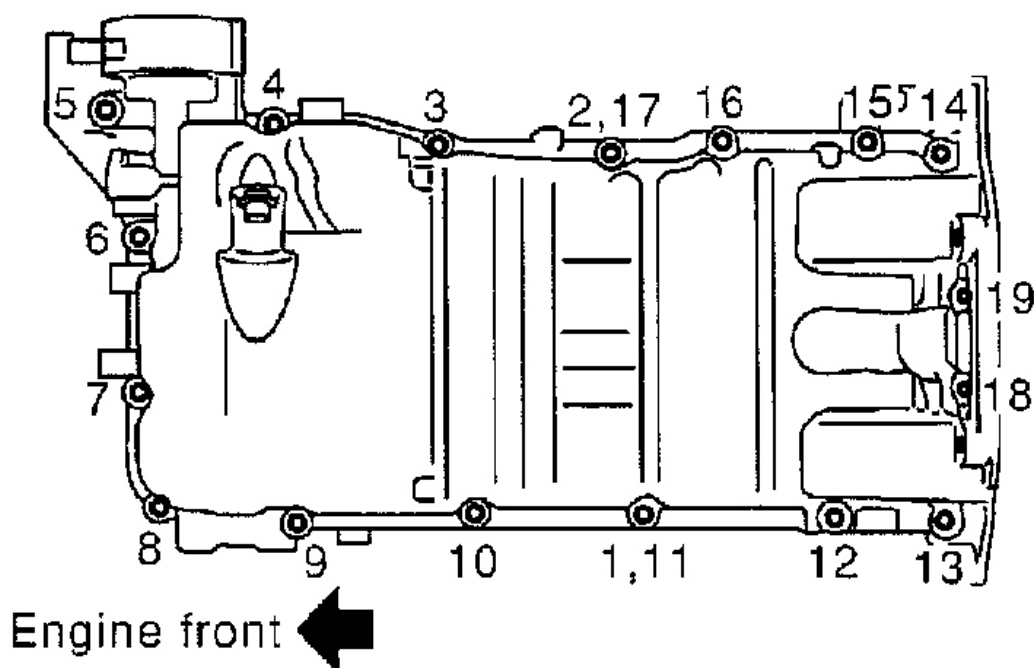


G02036569

Fig. 34: Removing Oil Pan Bolts

Courtesy of NISSAN MOTOR CO., U.S.A.

- d. Insert tool between oil pan and cylinder block. Slide tool by tapping on the side of the tool with a hammer. Remove oil pan.
13. . Remove oil strainer.

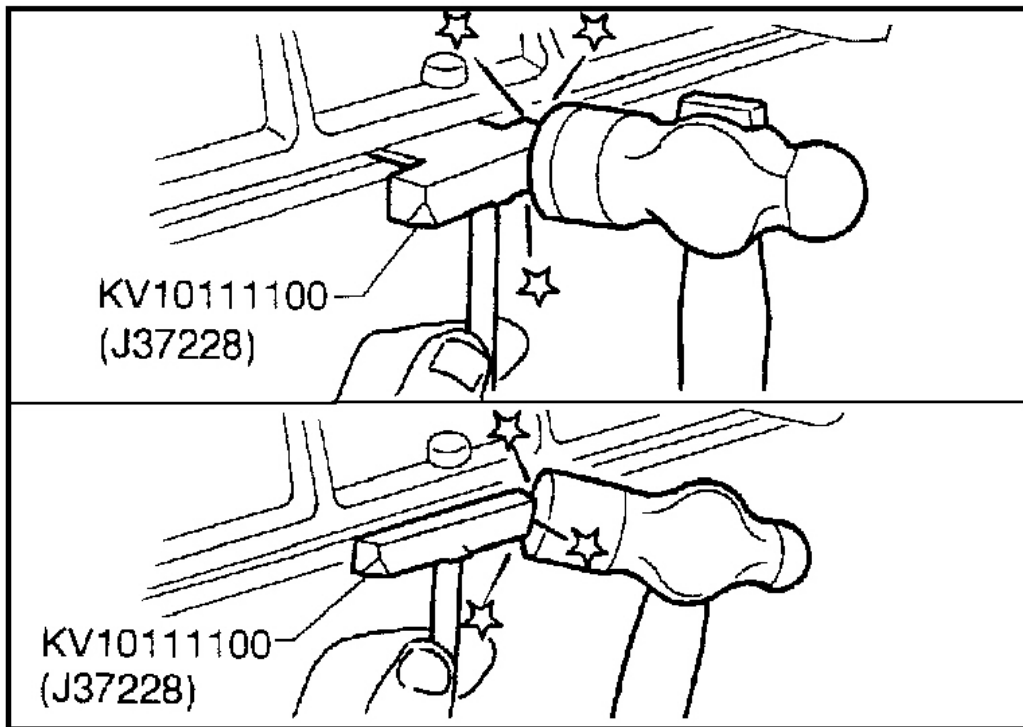

G02036570


Fig. 35: Inserting Tool Between Oil Pan And Cylinder Block
Courtesy of NISSAN MOTOR CO., U.S.A.

INSPECTION AFTER REMOVAL

- Clean oil strainer if any object attached.

INSTALLATION

1. Install oil strainer.
2. Install oil pan in the order below.
 - a. Apply liquid gasket thoroughly as in illustration.
 - **Use Genuine Ultra Grey RTV Silicone Sealant Part No. 999MP-AM003P or equivalent.**
 - b. Install O-ring to oil pump and timing chain side.

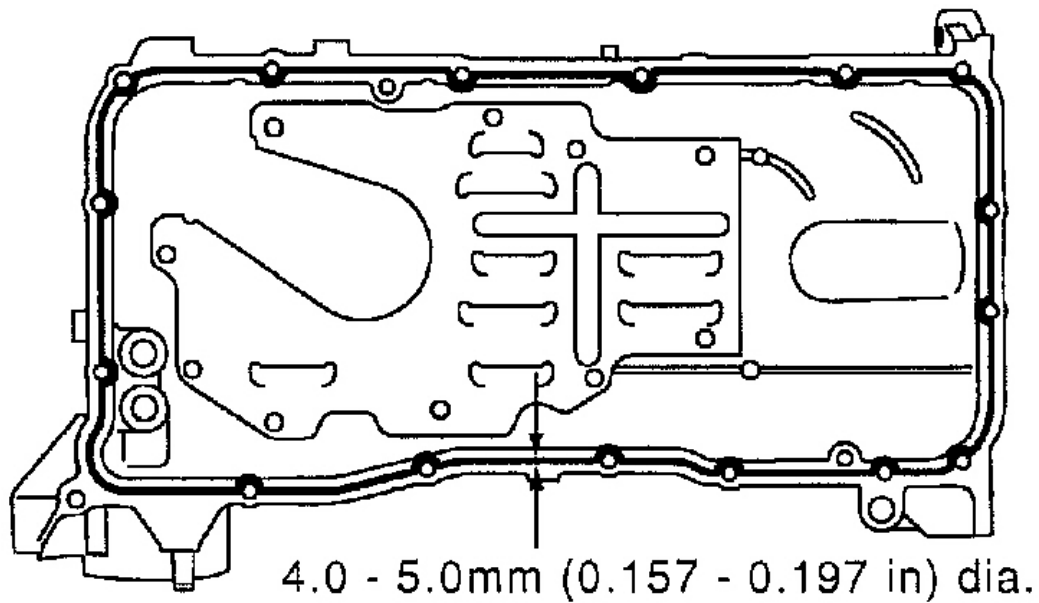

G02036571

Fig. 36: Applying Liquid Gasket

Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Tighten bolts in numerical order as shown.
 - No. 11 and 17 indicate double tightening of bolts 1 and 2.

NOTE: Refer to below for locating bolts.
M6 x 30 mm (1.18 in) : No.18, 19
M8 x 100 mm (3.97 in) : No.5, 9
M8 x 45 mm (1.77 in) : Except the above.

- d. Tighten transmission joint bolts.
 - e. Install rear plate cover.
3. Install oil pan drain plug.
- Refer to **Fig. 33** for installation direction of washer.

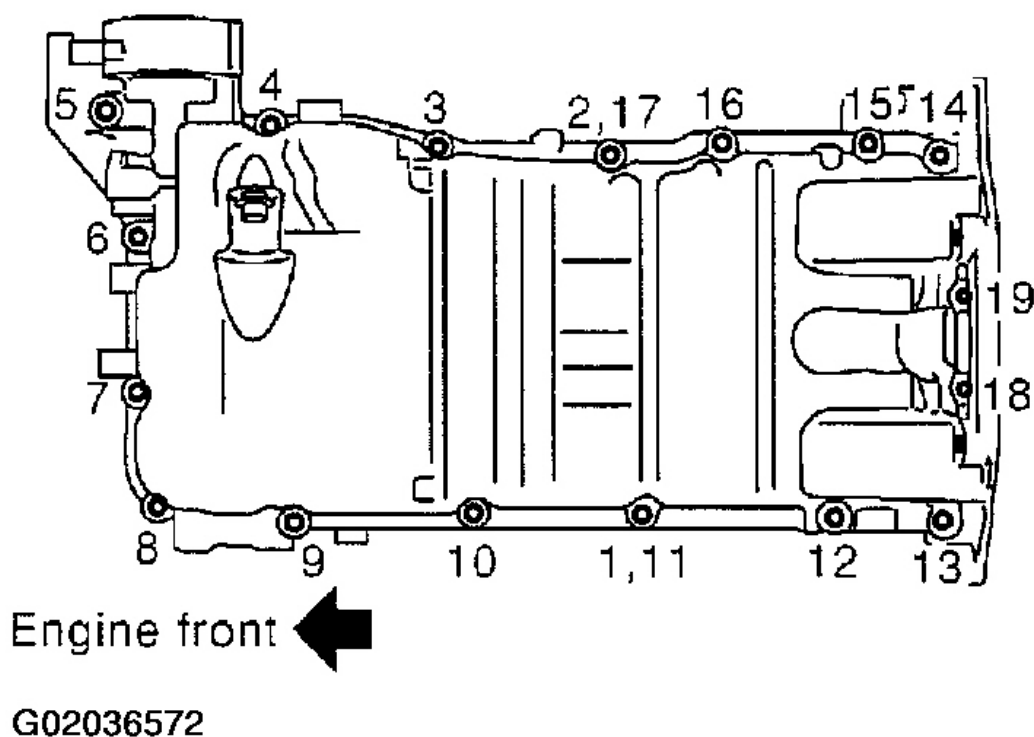


Fig. 37: Tightening Bolts In Sequence
 Courtesy of NISSAN MOTOR CO., U.S.A.

4. Install in the reverse order of removal after this step.
 - Pour engine oil or start engine at least 30 minutes after oil pan is installed.


INSPECTION AFTER INSTALLATION

- Check for leakage of engine oil when engine is warmed.

IGNITION COIL

REMOVAL AND INSTALLATION

SEC. 111 • 220

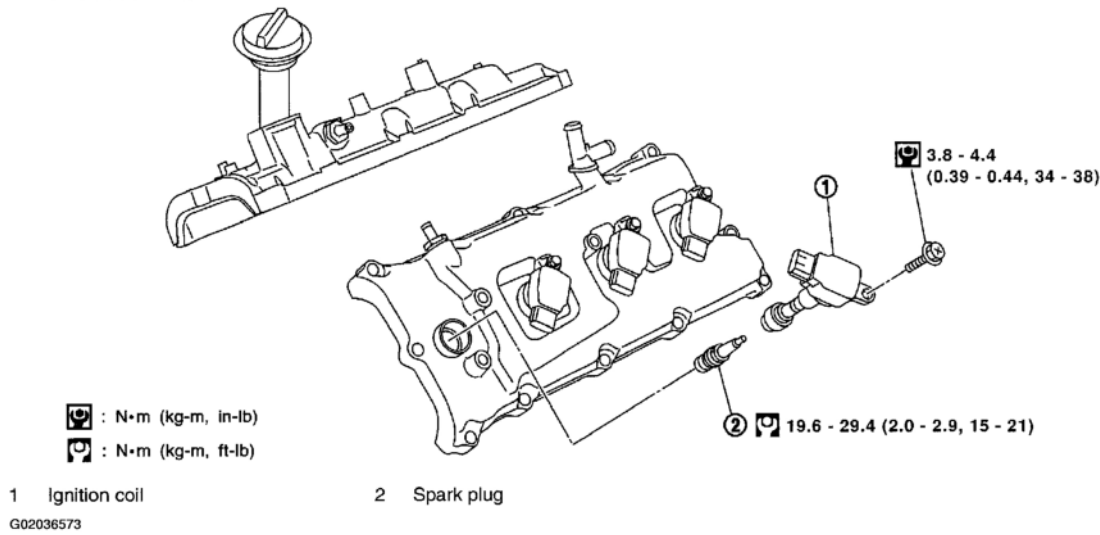**Fig. 38: Identifying Ignition Coil**

Courtesy of NISSAN MOTOR CO., U.S.A.

REMOVAL

1. Remove engine cover (with power tool), air cleaner cover and battery cover. Refer to **ENGINE ROOM COVER**, "**REMOVAL AND INSTALLATION**".
2. Move heater hose and its peripheral parts. (No.7 cylinder)
3. Remove harness connector from ignition coil.
4. Remove ignition coil.

CAUTION: Do not shock it.**INSTALLATION**

- Install in the reverse order of removal.

SPARK PLUG (PLATINUM-TIPPED TYPE)**REMOVAL AND INSTALLATION****REMOVAL**

1. Remove ignition coil. Refer to **IGNITION COIL**, "**REMOVAL AND INSTALLATION**".
2. Remove spark plug.
 - Disconnect ignition wire from spark plug at boot. Do not pull on the wire.


- Reconnect ignition wires according to numbers indicated on them.

Make	NGK
Standard type	PLFR5A-11
Hot type	PLFR4A-11
Cold type	PLFR6A-11


G02036574

Fig. 39: Spark Plug Specifications

Courtesy of NISSAN MOTOR CO., U.S.A.

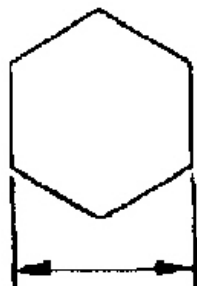**16 mm
(0.63 in)**

Wrench with a magnet
to hold spark plug

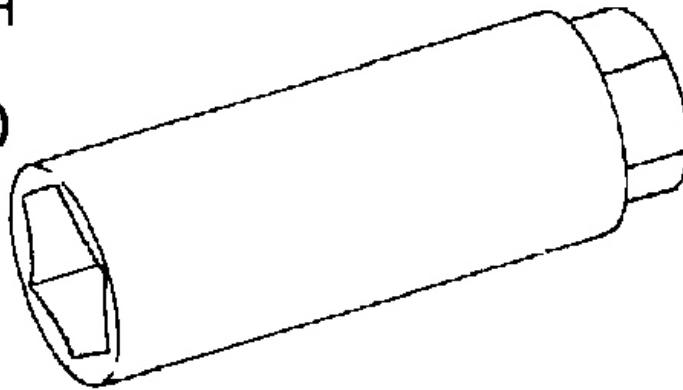

G02036575

Fig. 40: Identifying Spark Plug Wrench

Courtesy of NISSAN MOTOR CO., U.S.A.

INSPECTION AFTER REMOVAL

- **Use standard type spark plug for normal condition.**

The hot type spark plug is suitable when fouling occurs with the standard type spark plug under conditions such as:

- frequent engine starts
- low ambient temperatures

The cold type spark plug is suitable when spark plug knock occurs with the standard type spark plug under conditions such as:

- extended highway driving
- frequent high engine revolution


Gap (Nominal): 1.1mm (0.043 in)

- **Do not use a wire brush for cleaning.**
- **If plug tip is covered with carbon, spark plug cleaner may be used.**

Cleaner air pressure:

Less than 588 kPa (6 kg/cm² , 85 psi) Cleaning time:


Less than 20 seconds

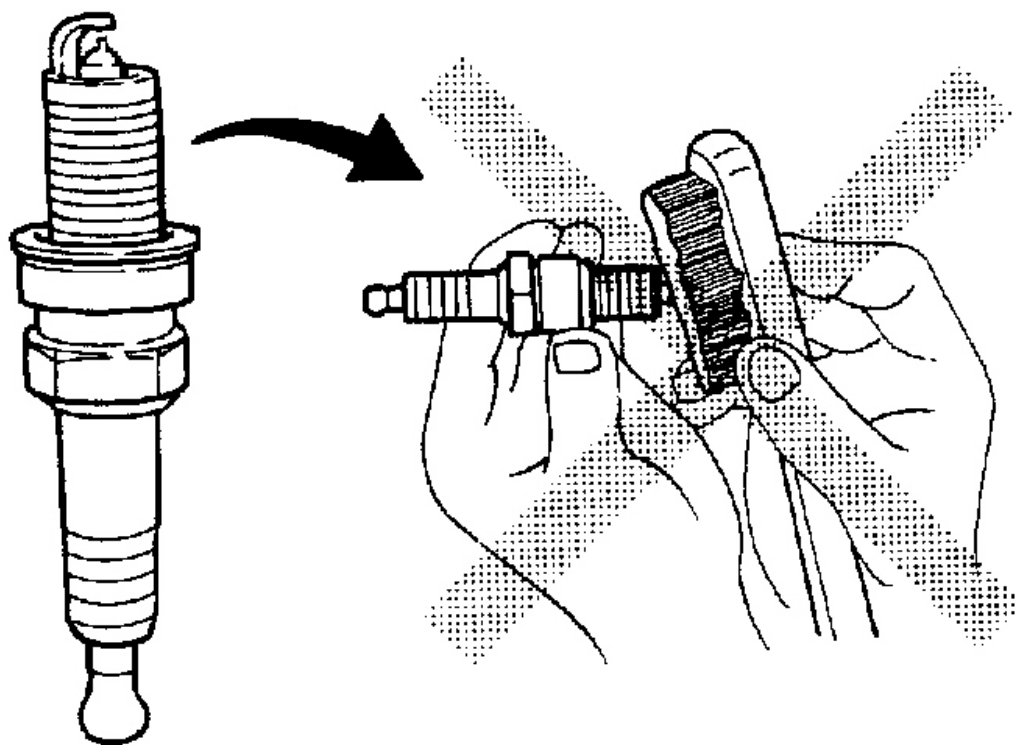

G02036576

Fig. 41: Wrong Method Of Clean Spark Plug
Courtesy of NISSAN MOTOR CO., U.S.A.

- Checking and adjusting plug gap is required between change intervals.

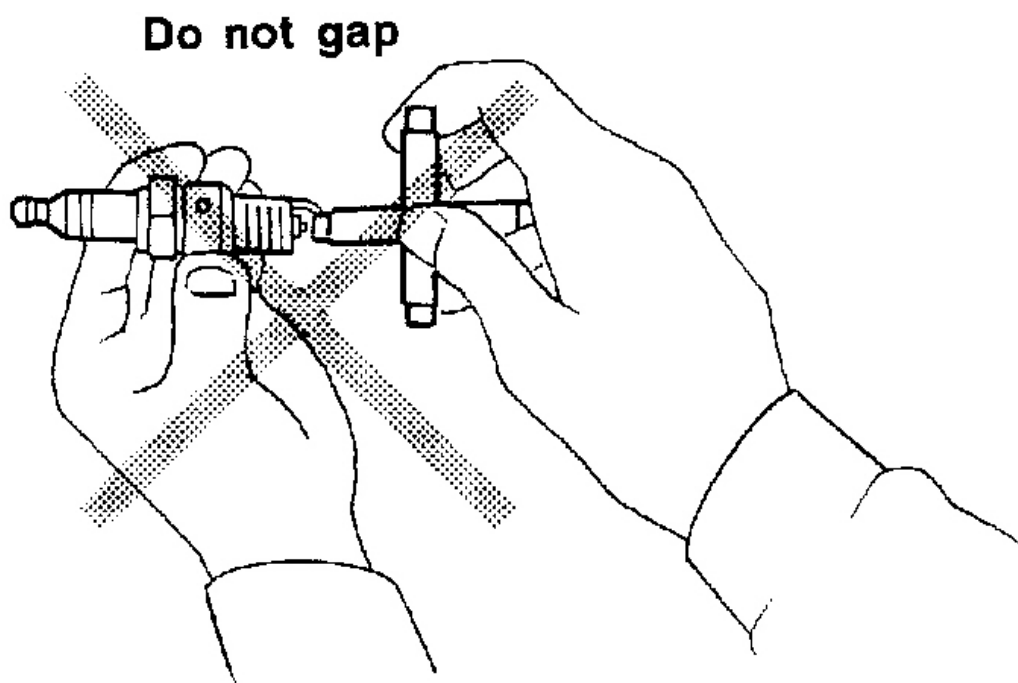

G02036577

Fig. 42: Wrong Method Of Checking And Adjusting Spark Plug Gap
Courtesy of NISSAN MOTOR CO., U.S.A.

INSTALLATION

- Install in the reverse order of removal.

20 - 29 Nm (2.0 - 3.0 kg-m, 14 - 22 ft-lb)

FUEL INJECTOR AND FUEL TUBE

REMOVAL AND INSTALLATION

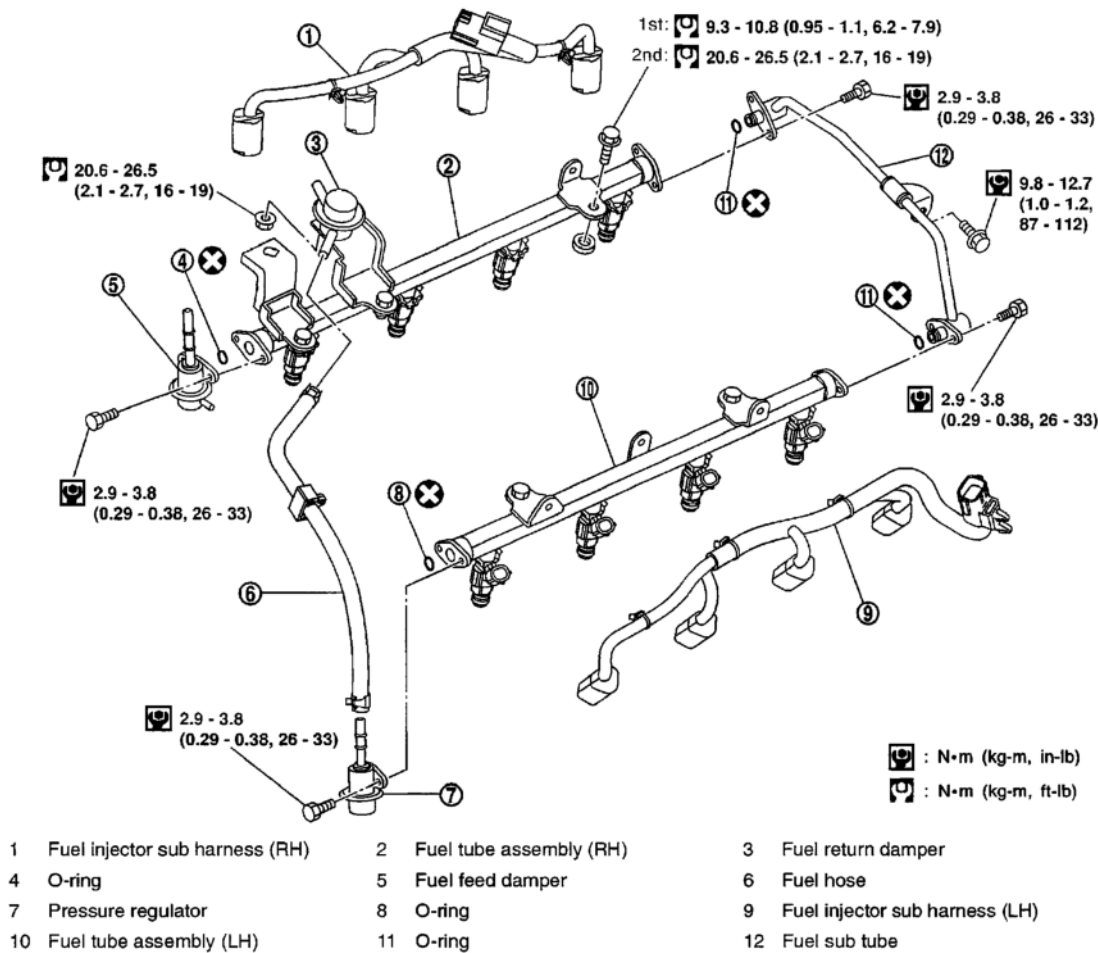


Fig. 43: Identifying Fuel Injector And Fuel Tube
Courtesy of NISSAN MOTOR CO., U.S.A.


CAUTION:

- Apply new engine oil when installing the parts that specified to do so in the figure.
- Do not remove or disassembly parts unless instructed as shown in the figure.

REMOVAL

1. Release fuel pressure. Refer to **FUEL PRESSURE RELEASE**.
2. Remove intake manifold upper with power tool. Refer to , "**REMOVAL AND INSTALLATION**".
3. Disconnect injector harness connectors.
4. Disconnect vacuum hoses from fuel pressure regulator and fuel damper.
5. Disconnect fuel hoses from fuel tube assembly.
6. Disconnect fuel sub tube from fuel tube RH and LH.

7. Remove injectors with fuel tube assembly.
8. Expand and remove clips securing fuel injectors.
9. Extract fuel injectors straight from fuel tubes.
 - Be careful not to damage injector nozzles during removal.
 - Do not bump or drop fuel injectors.

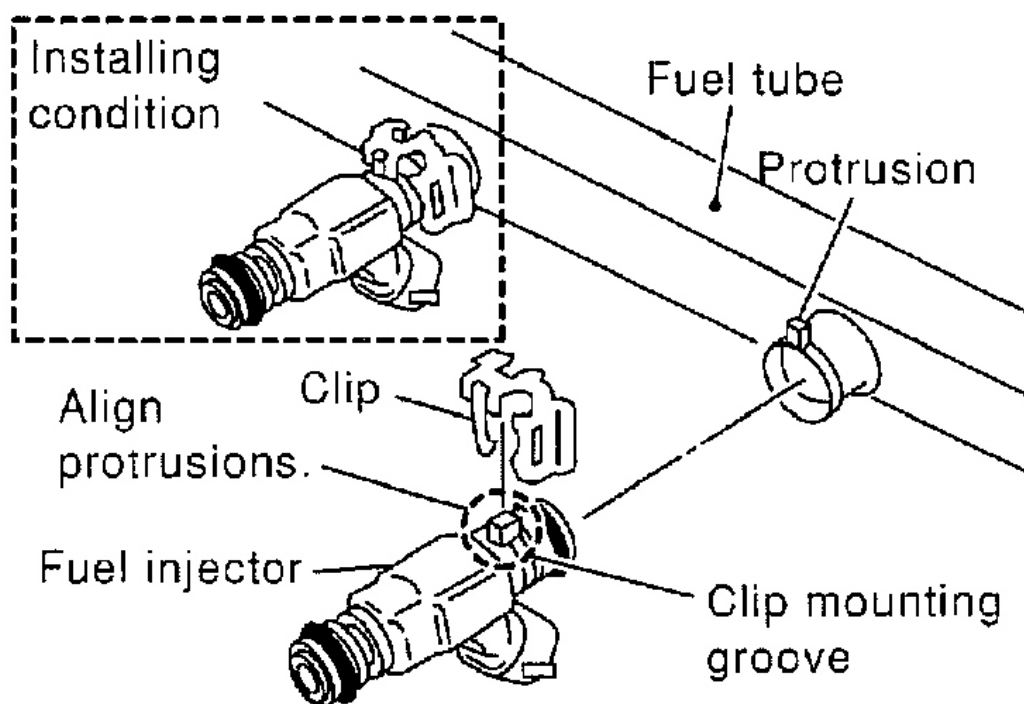

G02036579

Fig. 44: Removing Clips Securing Fuel Injectors
Courtesy of NISSAN MOTOR CO., U.S.A.

INSTALLATION

1. Carefully install O-rings, including the one used with the pressure regulator.
 - Lubricate O-rings by smearing new engine oil.
 - Be careful not to damage O-rings and surfaces for O-ring sealing with service tools, finger nails or clips. Do not expand or twist O-rings.
 - Discard old clips; replace with new ones.
2. Position clips in grooves on fuel injectors.
 - Make sure that protrusions of fuel injectors are aligned with cutouts of clips after installation.

3. Align protrusions of fuel tubes with those of fuel injectors.
4. After properly inserting fuel injectors, check to make sure that fuel tube protrusions are engaged with those of fuel injectors, and that flanges of fuel tubes are engaged with clips.
5. Tighten fuel tube assembly mounting bolts "a" to "c" in illustration and in two steps.

1st step : 9.3 -10.8 N,m (0.95 -1.1 kg-m, 6.2 - 7.9 ft-lb)

2nd step : 20.6 - 26.5 N,m (2.1 - 2.7 kg-m, 16 -19 ft-lb)

6. Install all removed parts in the reverse order of removal.

CAUTION:

- After properly connecting fuel tube assembly to injector and fuel check connection for fuel leakage.

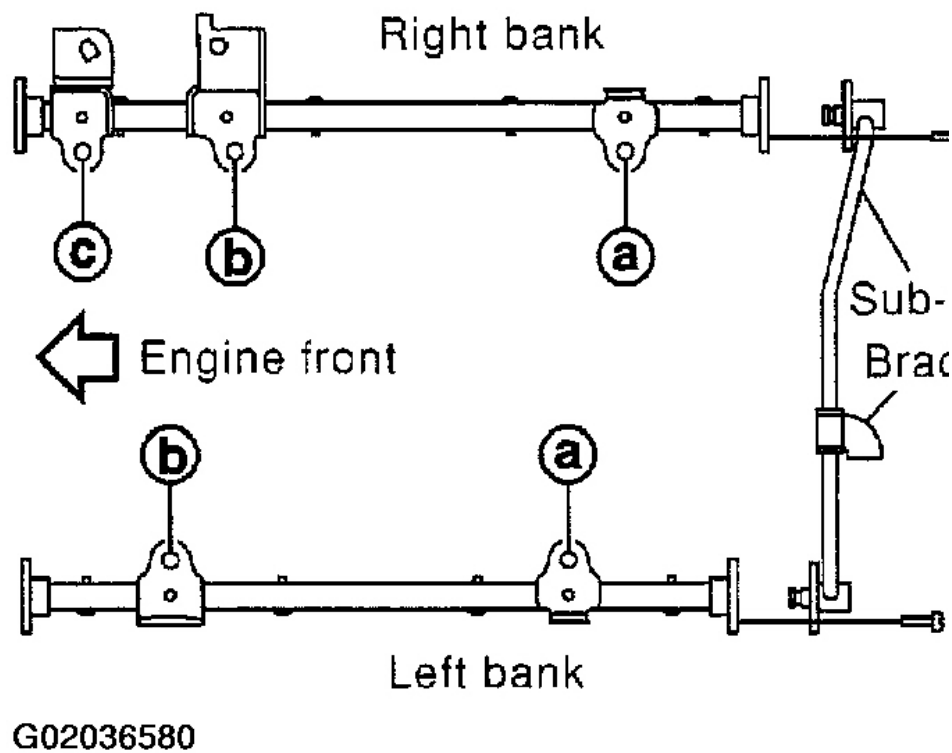



Fig. 45: Identifying Fuel Tube Assembly
Courtesy of NISSAN MOTOR CO., U.S.A.

INSPECTION AFTER INSTALLATION

Check on Fuel Leakage

- a. Remove engine cover (with power tool) and air cleaner cover. Refer to ENGINE ROOM COVER , **"REMOVAL AND INSTALLATION"**.
 - b. Remove air duct and air cleaner case assembly. Refer to AIR CLEANER AND AIR DUCT , **"REMOVAL AND INSTALLATION"**.
 - c. Remove bracket (installation parts for No.6 camshaft bracket).
 - d. Move harness on upper rocker cover and its peripheral.
 - e. Remove ignition coil. Refer to IGNITION COIL , **"REMOVAL AND INSTALLATION"**.
 - f. Remove PCV hose.
2. Refer to the followings for removal works related to right-bank.
 - a. Remove engine cover (with power tool) and battery cover. Refer to ENGINE ROOM COVER , **"REMOVAL AND INSTALLATION"**.
 - b. Move harness on upper rocker cover and its peripheral.
 - c. Remove ignition coil , **"REMOVAL AND INSTALLATION"**.
 - d. Remove PCV hose.
 3. Loosen bolts in reverse order shown in the figure (with power tool).

CAUTION: Do not hold oil filler neck (right bank) not to damage it.

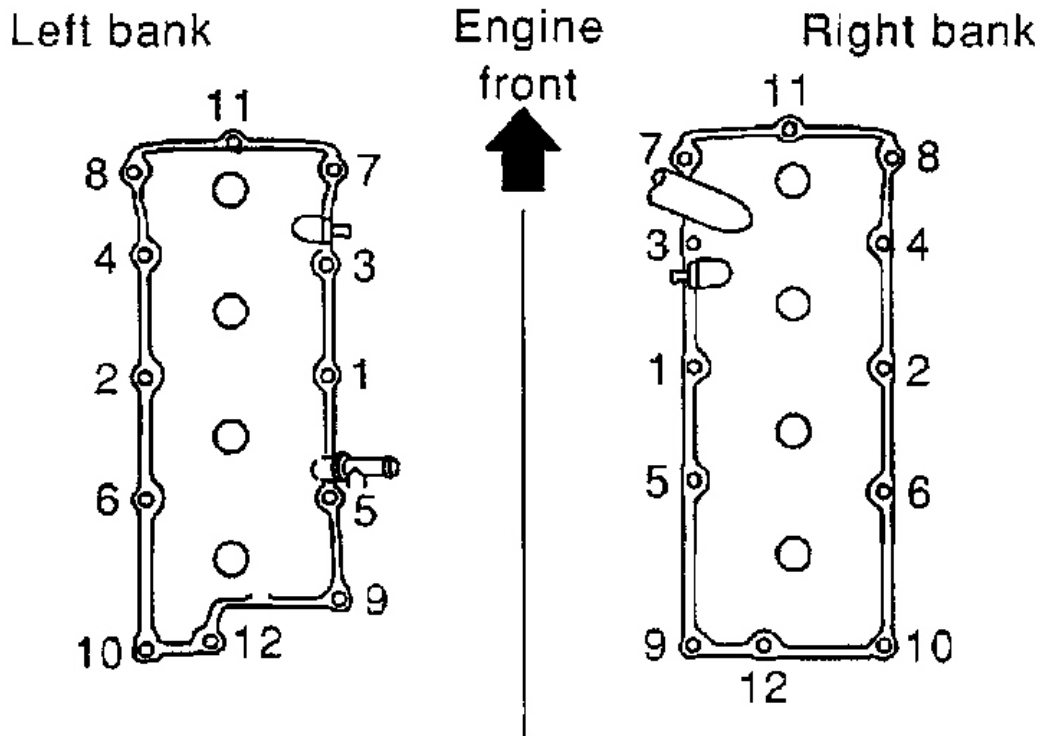

G02036582

Fig. 47: Loosening Bolts In Sequence
 Courtesy of NISSAN MOTOR CO., U.S.A.

INSTALLATION

1. Apply liquid gasket to joint part of cylinder head and camshaft bracket following the below steps.



NOTE: Illustration shows an example of left-bank side (zoomed in shows No.1 camshaft bracket). Apply only to No.1 camshaft bracket for right-bank side.

- a. Refer to illustration "a" to apply liquid gasket to joint part of No.1 and No.6 camshaft bracket and cylinder head.
- b. Refer to illustration "b" to apply liquid gasket in 90 to illustration "a".

- Use Genuine Ultra Grey RTV Silicone Sealant Part No. 999MP-AM003P or equivalent.

2. Install rocker cover.

- Check if rocker cover gasket is dropped from installation groove of rocker cover.

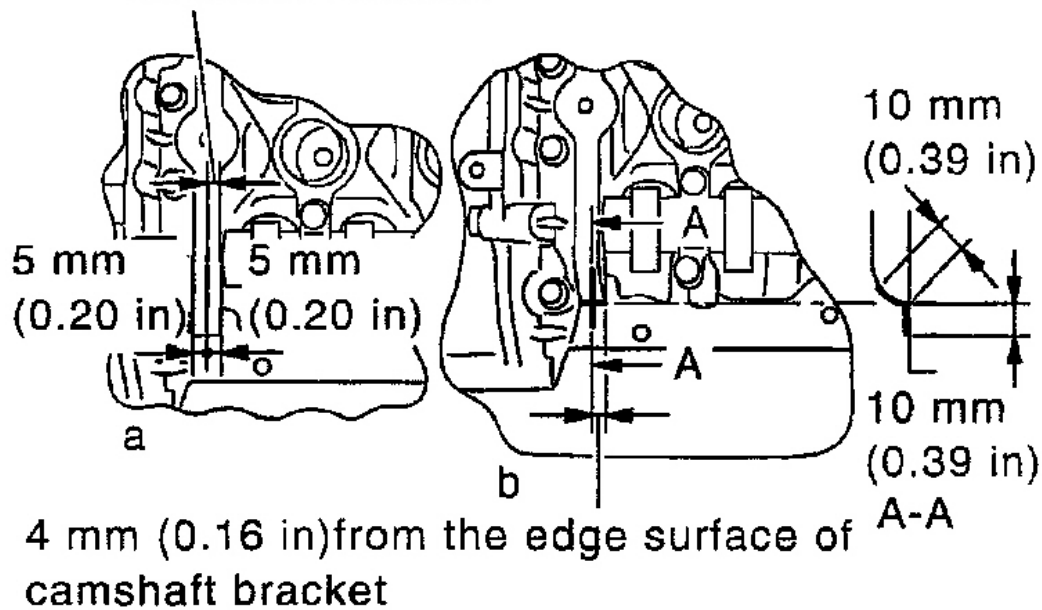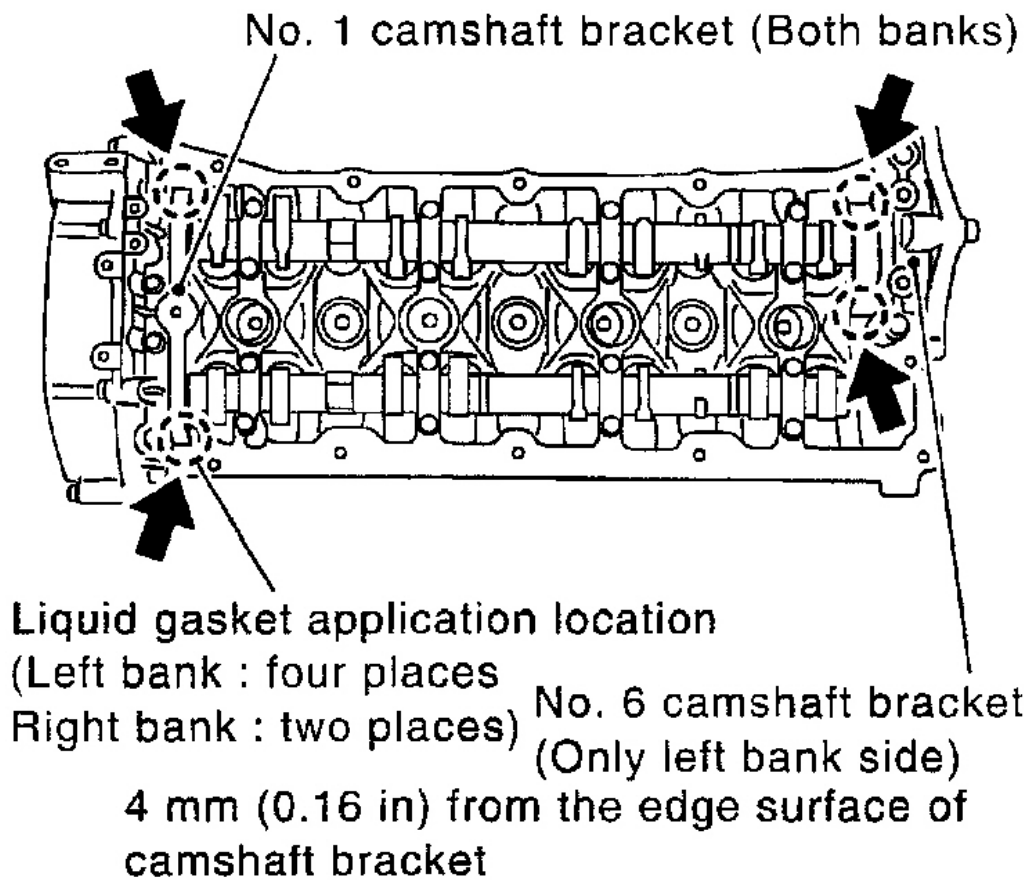


G02036583

Fig. 48: Applying Liquid Gasket To Joint Part Of Cylinder Head And Camshaft Bracket
Courtesy of NISSAN MOTOR CO., U.S.A.

3. Tighten bolts two steps separately in order numbers in illustration.

1st step : 1.0 - 3.0 Nm (0.1 - 0.31 kg-m, 9 - 26 in-lb)

2nd step : 7.4 - 9.3 Nm (0.75 - 0.95 kg-m, 66 -82 in-lb)

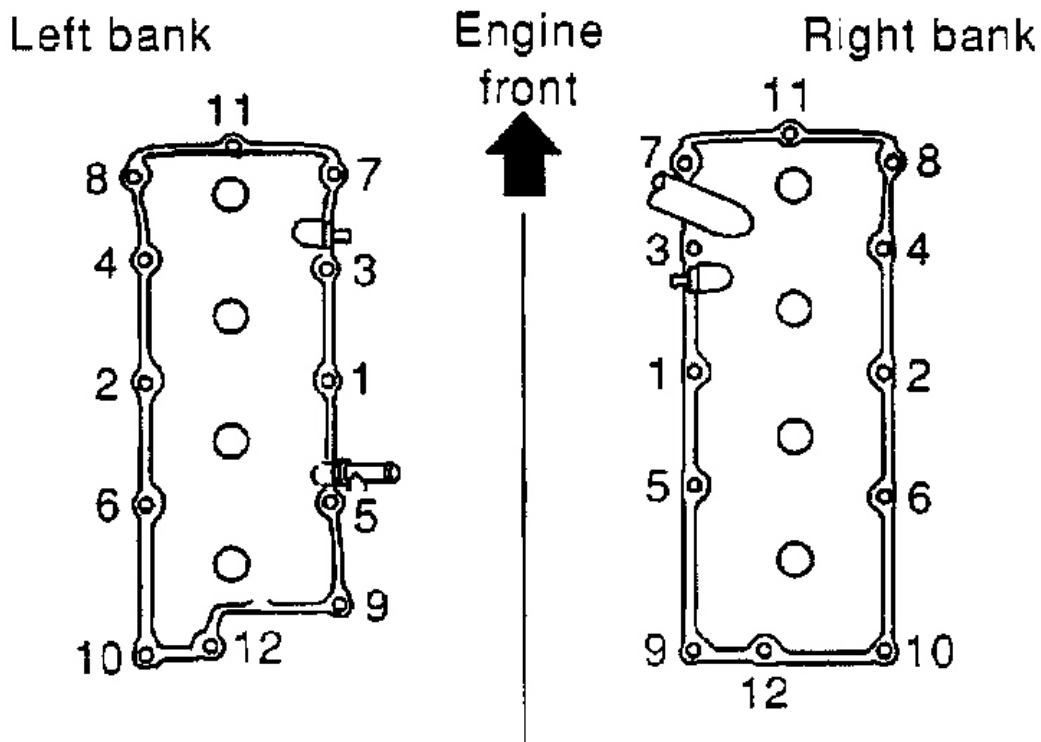

G02036584


Fig. 49: Tightening Bolts In Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

4. Install in the reverse order of removal after this step.

CAMSHAFT

REMOVAL AND INSTALLATION

SEC. 111•130•135•221

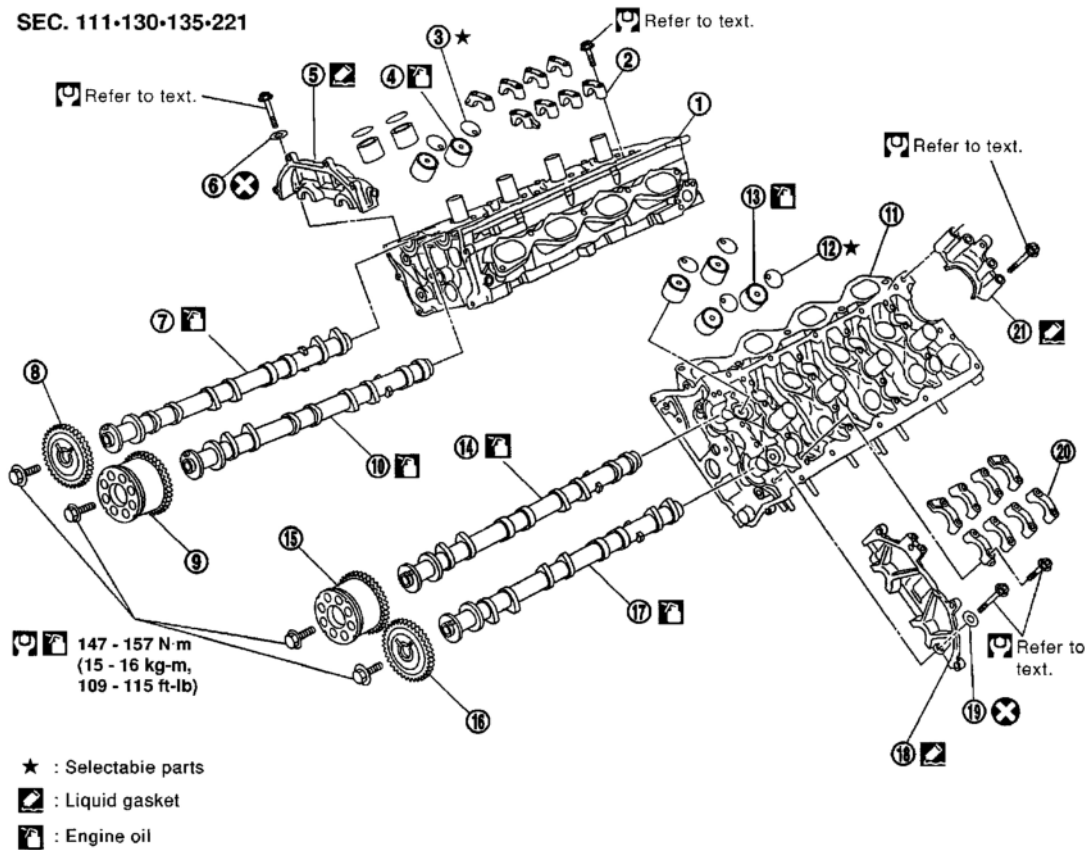

- | | | |
|--------------------------------|-------------------------------------|------------------------------------|
| 1 Cylinder head (right bank) | 2 Camshaft bracket (No.2, 3, 4, 5) | 3 Adjusting shim |
| 4 Valve lifter | 5 Camshaft bracket (No.1) | 6 Washer |
| 7 Camshaft (exhaust) | 8 Camshaft sprocket (exhaust) | 9 Camshaft sprocket (intake) |
| 10 Camshaft (intake) | 11 Cylinder head (left bank) | 12 Adjusting shim |
| 13 Valve lifter | 14 Camshaft (intake) | 15 Camshaft sprocket (intake) |
| 16 Camshaft sprocket (exhaust) | 17 Camshaft (exhaust) | 18 Camshaft bracket (No.1) |
| 19 Washer | 20 Camshaft bracket (No.2, 3, 4, 5) | 21 Camshaft bracket (intake, No.6) |

G02036585

Fig. 50: Exploded View Of Camshaft
 Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION: Apply new engine oil to parts marked in illustration before installation.


REMOVAL

1. Remove crankshaft pulley, front cover, oil pump and timing chain.

Refer to **TIMING CHAIN** , "**REMOVAL AND INSTALLATION**".

2. With hexagonal part of camshaft locked with wrench, loosen bolts securing camshaft sprocket to remove camshaft sprocket.

CAUTION: To avoid interference between valves and pistons, do not turn crankshaft or camshaft with timing chain disconnected.

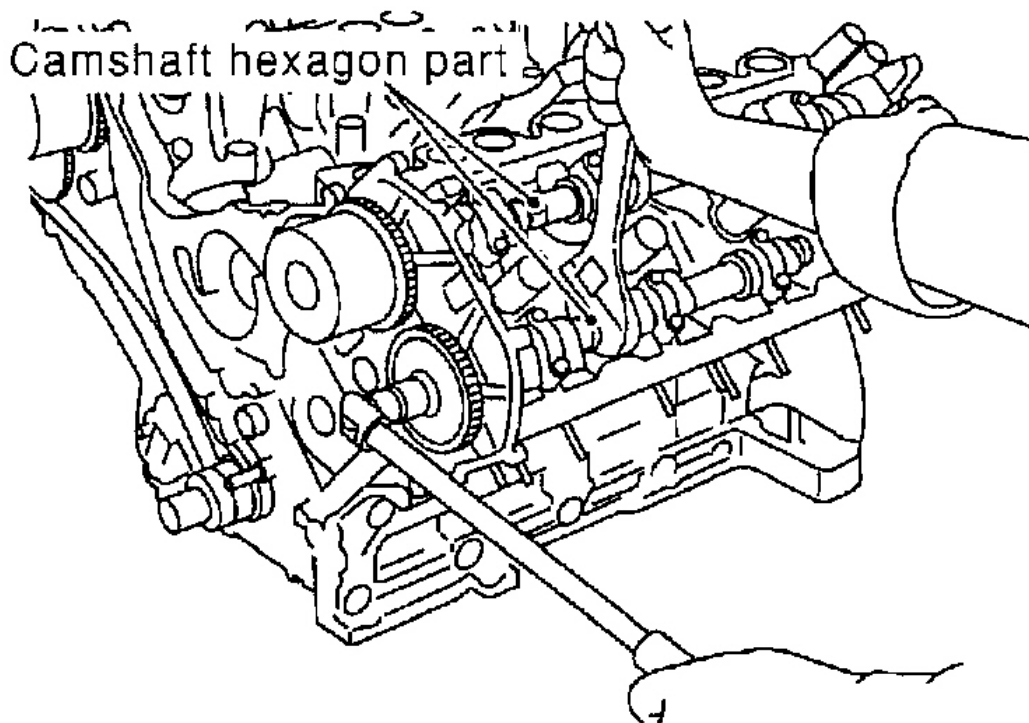

G02036586

Fig. 51: Removing Camshaft Sprocket Bolt
Courtesy of NISSAN MOTOR CO., U.S.A.


3. Loosen fixing bolts in the reverse order of that shown in figure to remove camshaft brackets and camshafts.
 - Lightly tapping with plastic hammer, remove No. 1 camshaft bracket and No. 6 camshaft bracket on exhaust side.

NOTE: The bottom surface of each bracket will be stuck to cylinder head because of liquid gasket.

4. Remove adjusting shims and valve lifters.
 - Correctly identify location where each part is installed. Keep parts in an organized way to avoid mixing them up.

Right bank


Exhaust

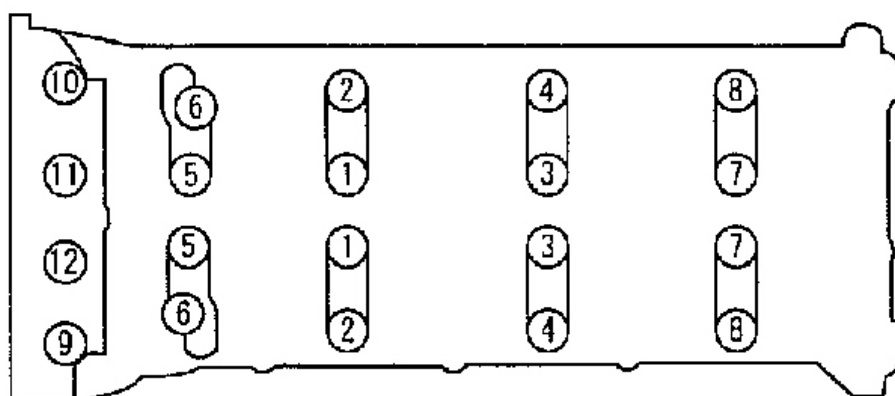


Engine
front



Intake



Left bank

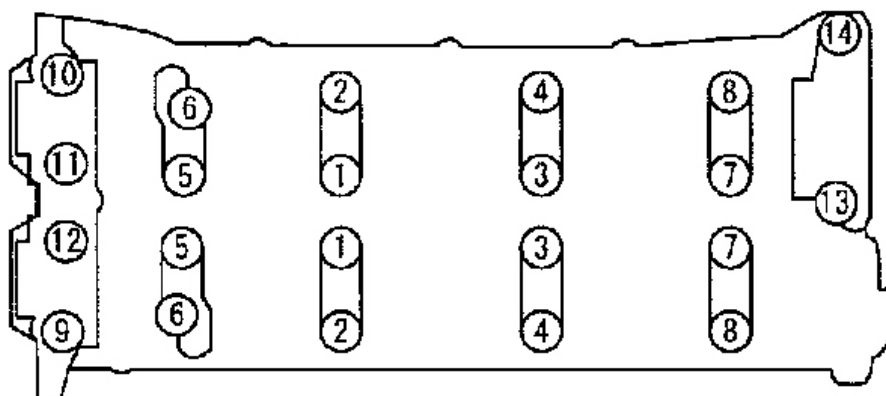

Exhaust

G02036587

Fig. 52: Loosening Fixing Bolts In Sequence
 Courtesy of NISSAN MOTOR CO., U.S.A.


INSTALLATION

1. Install adjusting shims and valve lifters.
 - Install removed parts in the same locations as before.
2. Install camshafts. Refer to the table below for identification of right and left bank, and intake and exhaust.

Bank	INT/ EXH	ID paint (front)	ID paint (rear)	ID rib	ID sym- bol
RH	INT	Orange	—	No.	LH
	EXH	—	Orange	No.	LH
LH	INT	Orange	—	Yes.	RH
	EXH	—	Orange	Yes.	RH

G02036588


Fig. 53: Camshafts Specifications
 Courtesy of NISSAN MOTOR CO., U.S.A.

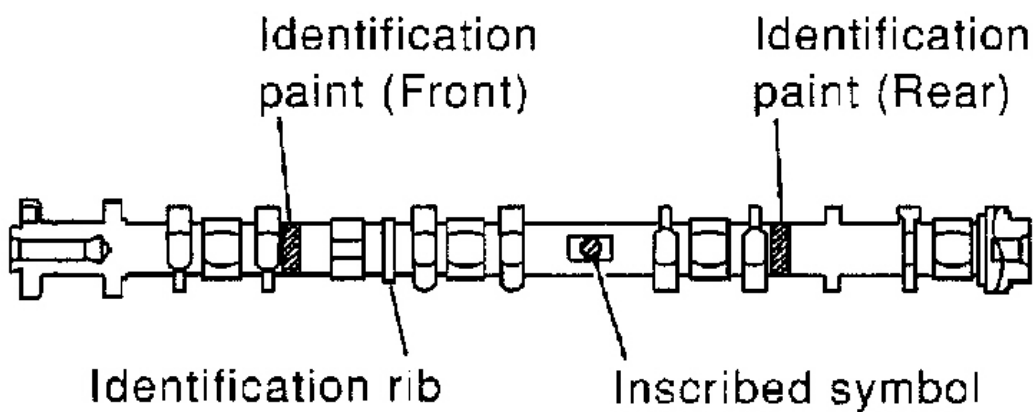

G02036589

Fig. 54: Identifying Camshafts Paint Mark
Courtesy of NISSAN MOTOR CO., U.S.A.


- Install so that knock pin at the front of camshaft face is in the direction shown in the figure.

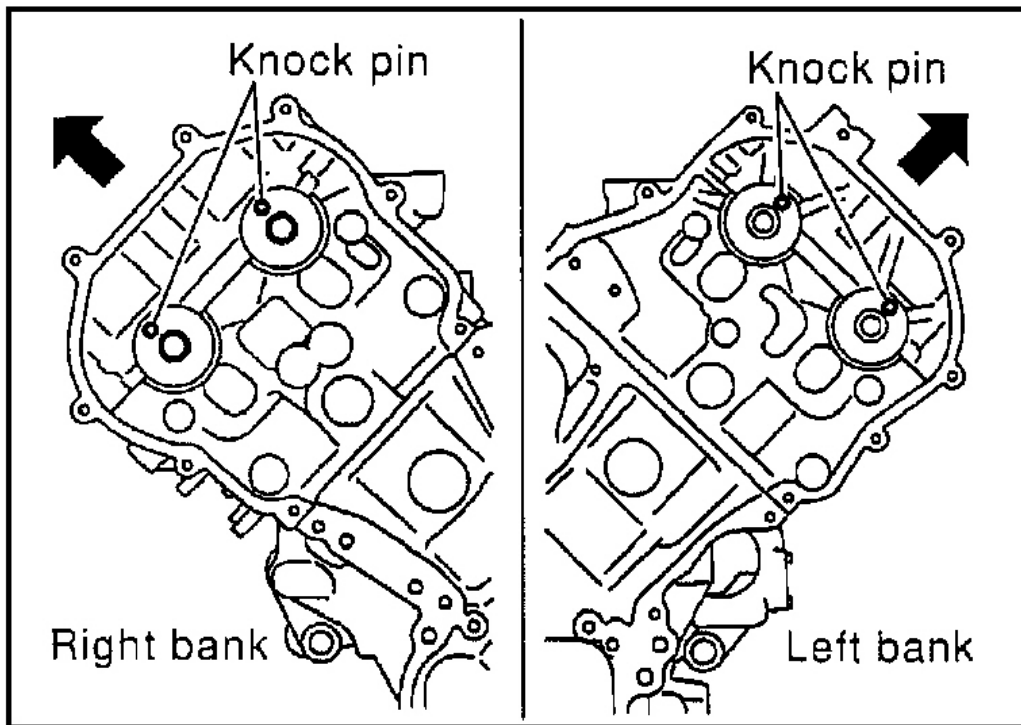

G02036590

Fig. 55: Installing Knock Pin At The Front Of Camshaft
Courtesy of NISSAN MOTOR CO., U.S.A.

3. Install camshaft brackets.
 - Install by referring to identification mark on upper surface and front mark.
 - Install so that identification mark can be correctly read when viewed from the side of left exhaust bank.

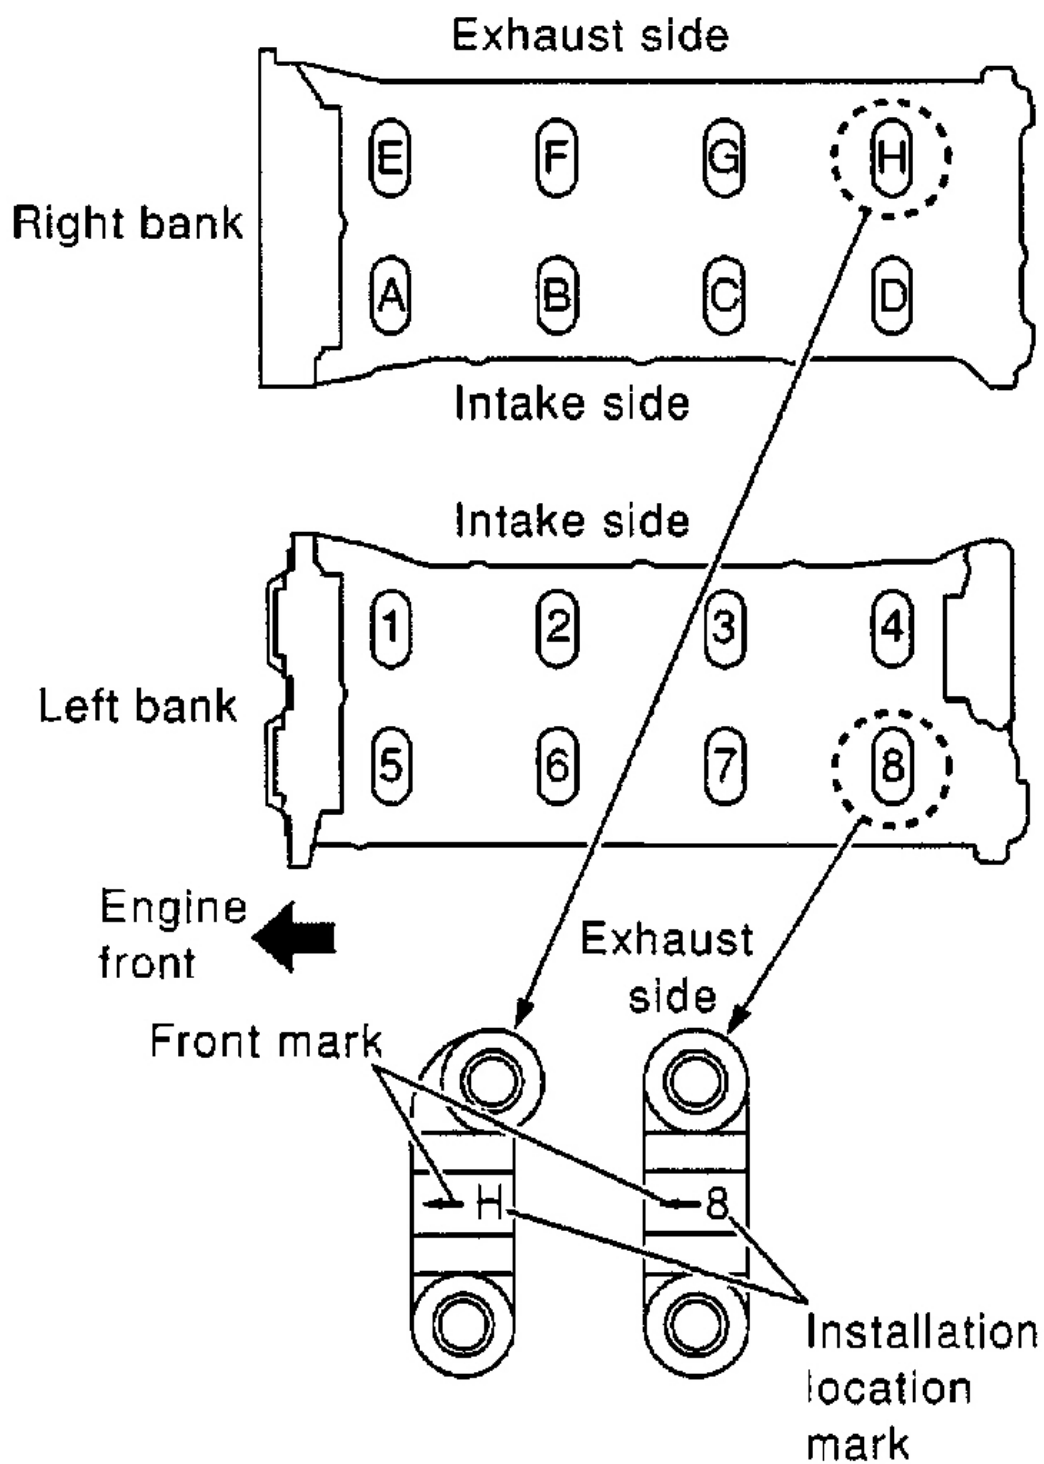


G02036591

Fig. 56: Identifying Identification Mark On Upper Surface And Front Mark
 Courtesy of NISSAN MOTOR CO., U.S.A.

- Install No. 1 camshaft bracket as follow:
 - Apply liquid gasket to No.1 camshaft bracket as in illustration.
 - Use Genuine Ultra Grey RTV Silicone Sealant Part No. 999MP-AM003P or equivalent.

CAUTION:

- After installation, be sure to wipe off any excessive liquid gasket from part "A" and "B" (both on right and left sides).
- Remove completely any excess of liquid gasket inside

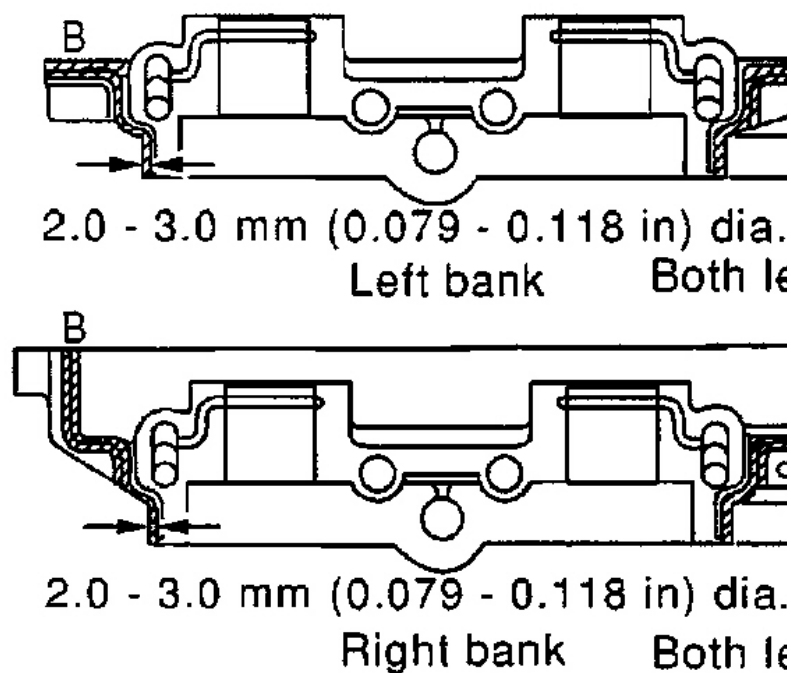

G02036592

Fig. 57: Applying Liquid Gasket To No.1 Camshaft Bracket
 Courtesy of NISSAN MOTOR CO., U.S.A.

- Apply liquid gasket to No.6 camshaft bracket on left bank intake as in illustration.

CAUTION:

- After installation, be sure to wipe off any excessive liquid gasket from part "A" and "B" (both on right and left sides).

- Remove completely any excess of liquid gasket inside bracket

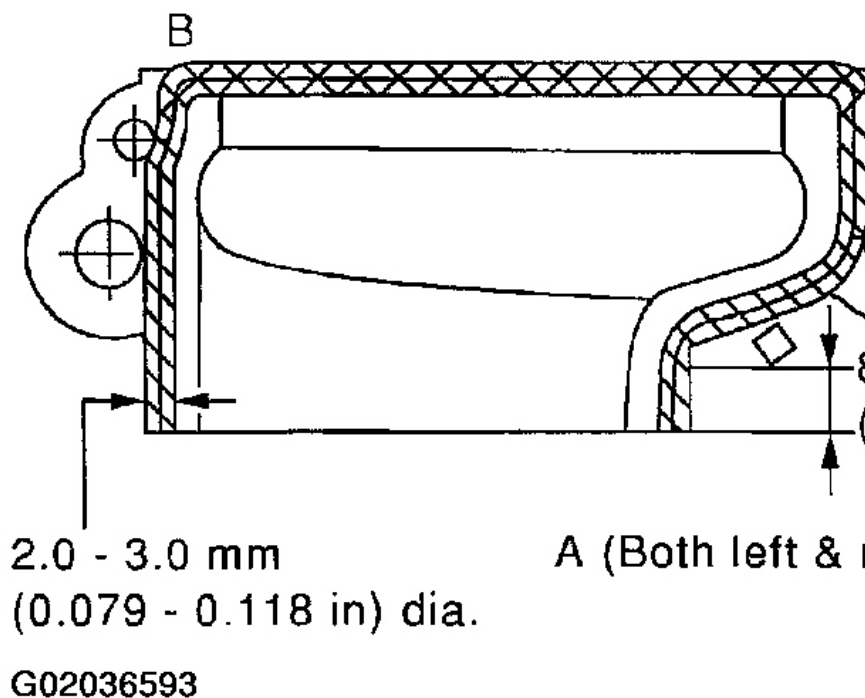


Fig. 58: Applying Liquid Gasket To No.6 Camshaft Bracket
Courtesy of NISSAN MOTOR CO., U.S.A.


4. Tighten fixing bolts of camshaft brackets as follows:
 - a. Tighten in the order from 9 to 12 with tightening torque 1.96 N.m (0.2 kg-m, 17 in-lb).
 - b. Tighten in the order from 1 to 8 with tightening torque 1.96 N.m (0.2 kg-m, 17 in-lb) for left bank only.
 - c. Tighten in the order from 13 to 14 with tightening torque 1.96 N.m (0.2 kg-m, 17 in-lb) (Left bank only).
 - d. Tighten all bolts in the specified order with tightening torque 5.88 N.m (0.6 kg-m, 52 in-lb)
 - e. Tighten in the order from 1 to 12 with tightening torque 9.02 to 11.8 N.m (0.92 to 1.2 kg-m, 80 to 104 in-lb).
 - f. Tighten in the order from 13 to 14 with tightening torque 29.4 to 33.3 N.m (3.0 to 3.3 kg-m, 22 to 24 ft-lb).

CAUTION: After tightening fixing bolts of camshaft brackets, be sure to wipe off excessive liquid gasket from the parts listed below.

- Mating surface of rocker cover
- Mating surface of front cover

Right bank

Exhaust

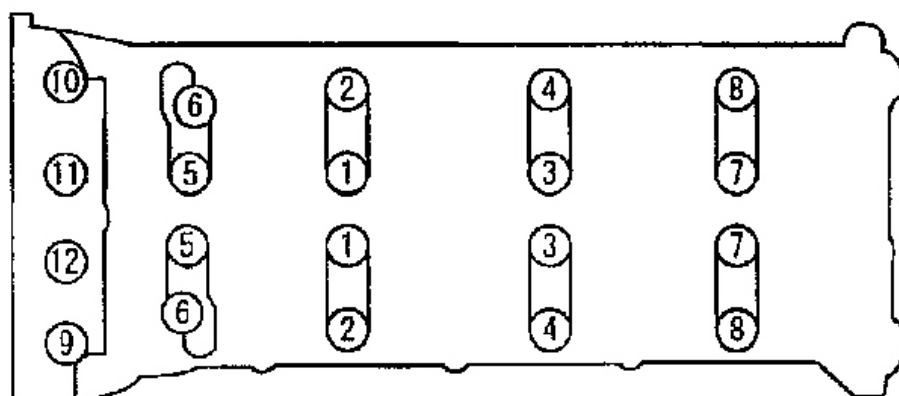


Engine
front



Intake

Left bank

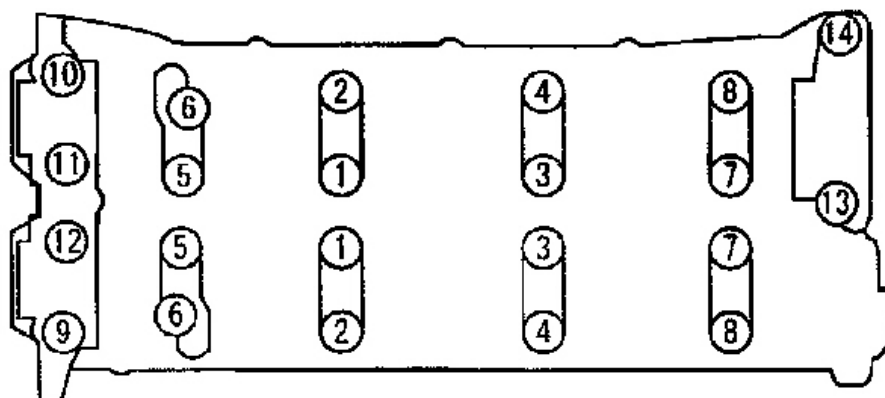

Exhaust

G02036594

Fig. 59: Tightening Fixing Bolts Of Camshaft Brackets
 Courtesy of NISSAN MOTOR CO., U.S.A.

5. Install camshaft sprockets.
 - Install by checking with identification mark on surface.
 - Install exhaust-side camshaft sprocket by selectively using the groove of dowel pin according to the bank. (Common part used for both banks.)
 - Lock the hexagonal part of camshaft in the same way as for removal, and tighten fixing bolts.
6. For the following operations, perform steps in the reverse order of removal.
7. Check and adjust valve clearances.

Refer to CAMSHAFT , "VALVE CLEARANCE".

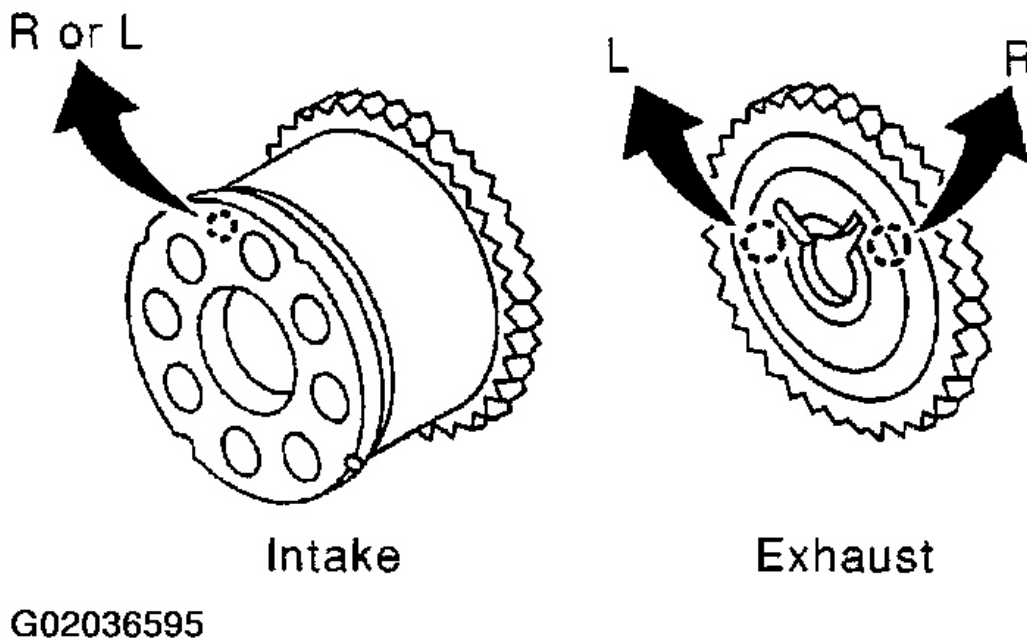


Fig. 60: Identifying Camshaft Sprockets
 Courtesy of NISSAN MOTOR CO., U.S.A.

INSPECTION AFTER REMOVAL

Camshaft Runout

- Put V block on, and support No.2 and No.5 journal of camshaft.
- Set dial gauge vertically to No.3 journal.

- Turn camshaft to one direction with hands, and measure camshaft runout on dial gauge.
- 1/2 of runout is bend.

Standard : Less than 0.02 mm (0.0008 in)

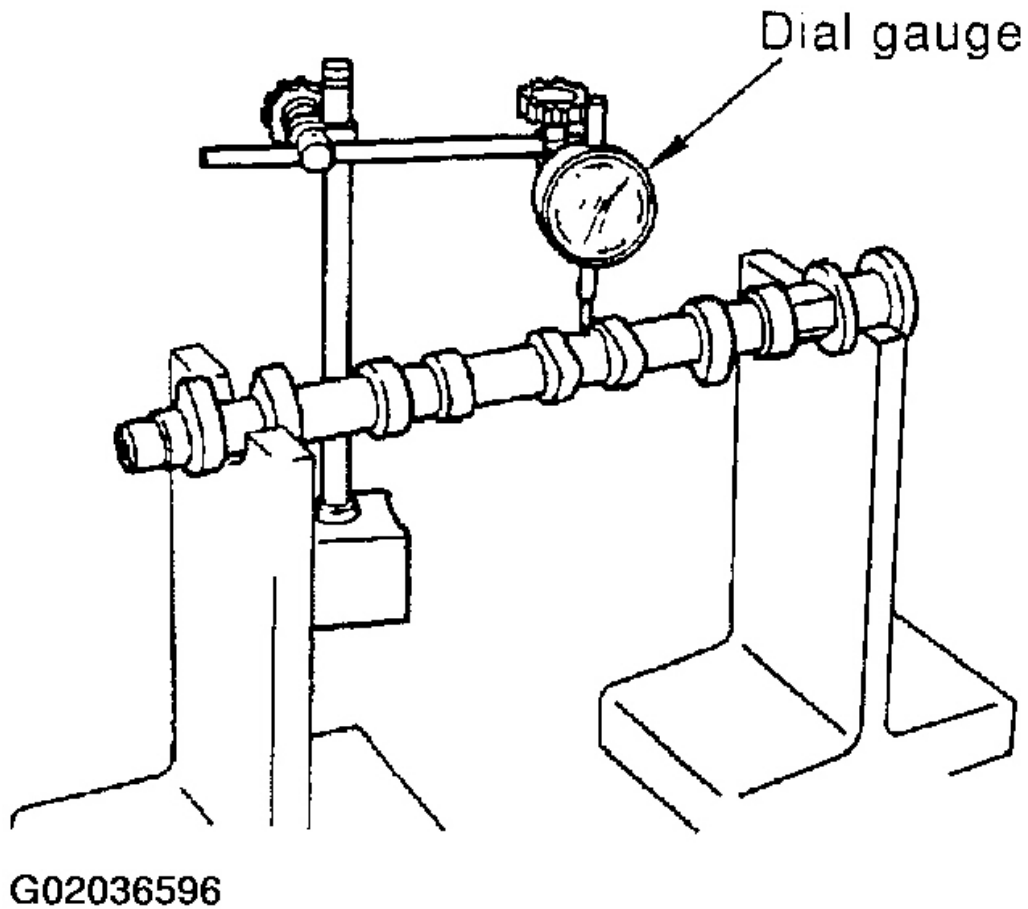


Fig. 61: Measuring Camshaft Runout
Courtesy of NISSAN MOTOR CO., U.S.A.

Camshaft Cam Height


1. Measure camshaft cam height.

Standard cam height:

Intake: 44.865 - 45.055 mm (1.7663 - 1.7738 in)

Exhaust: 43.925 - 44.115 mm (1.7293 - 1.7368 in)

2. If wear is beyond the limit, replace camshaft.

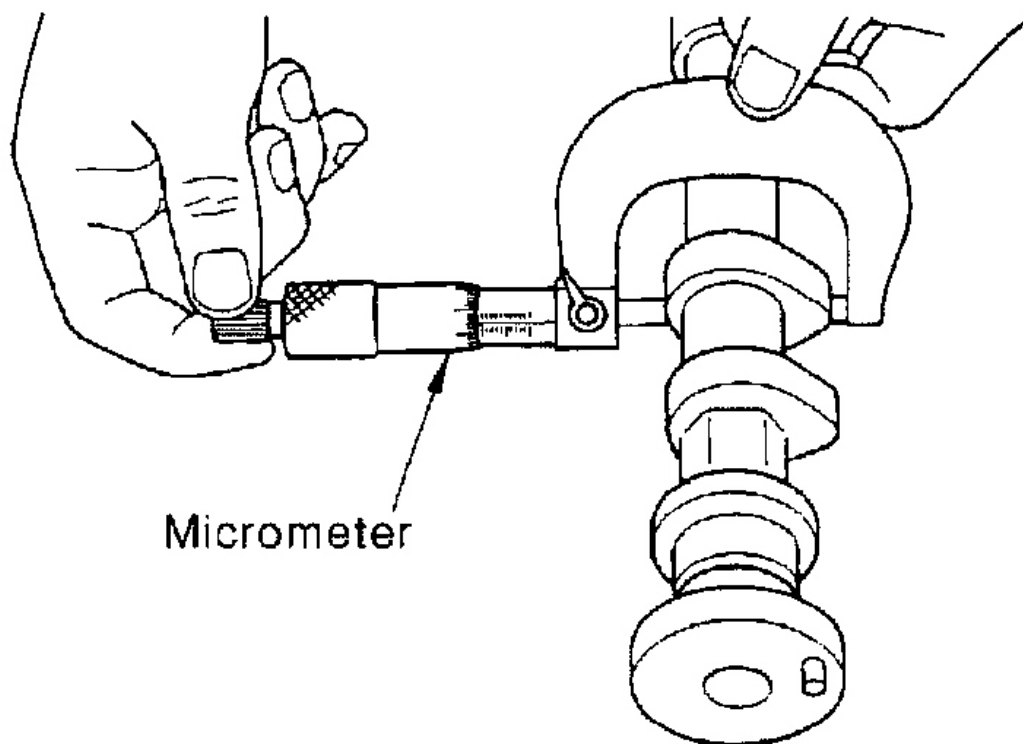

G02036597

Fig. 62: Measuring Camshaft Cam Height
Courtesy of NISSAN MOTOR CO., U.S.A.

Camshaft Journal Clearance


Outer Diameter of Camshaft Journal

- Measure outer diameter of camshaft journal.

Standard outer diameter:

No.1: 25.938 - 25.955 mm (1.0212 - 1.0218 in)

No.2, 3, 4, 5: 25.953 - 25.970 mm (1.0218 - 1.0224 in)

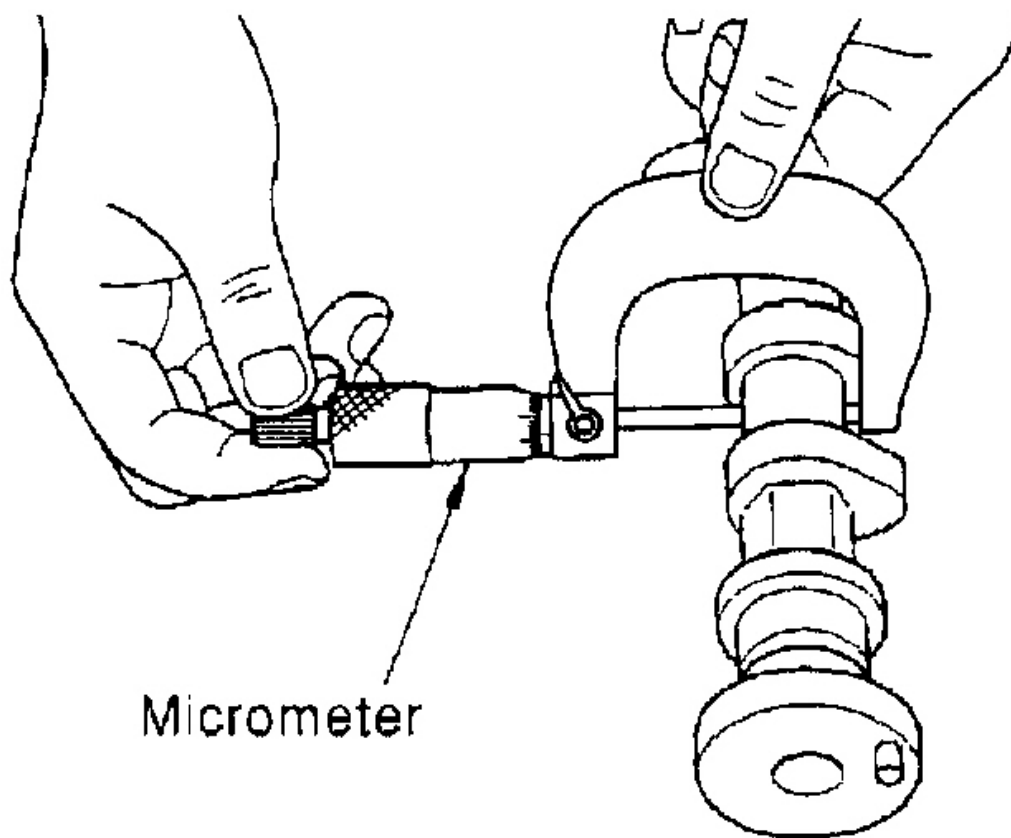

G02036598

Fig. 63: Measuring Outer Diameter Of Camshaft Journal
Courtesy of NISSAN MOTOR CO., U.S.A.

Inner Diameter of Camshaft Bracket

- Tighten camshaft bracket bolt with specified torque.
- Using inside micrometer, measure inner diameter of camshaft bracket.

Standard:

26.000 - 26.021 mm (1.0236 - 1.0244 in)

Calculation of Camshaft Journal Clearance

(Journal clearance) = (inner diameter of camshaft bracket) - (outer diameter of camshaft journal)

Standard:

No.1 : 0.045 - 0.083 mm (0.0018 - 0.0033 in)

No.2, 3, 4, 5 : 0.030 - 0.068 mm (0.0012 - 0.0027 in)

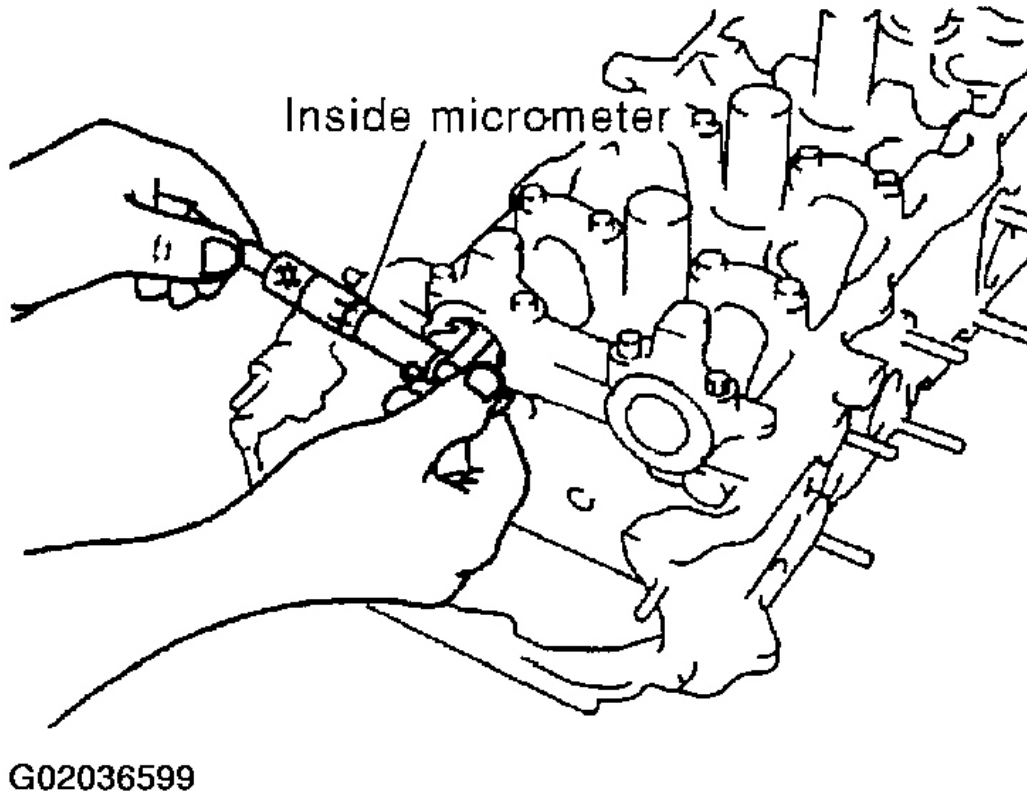


Fig. 64: Measuring Inner Diameter Of Camshaft Bracket
Courtesy of NISSAN MOTOR CO., U.S.A.

- When out of the specified range above, replace either or both camshaft and cylinder head.


NOTE: Inner diameter of camshaft bracket is manufactured together with cylinder head. Replace the whole cylinder head assembly.

Camshaft End Play

- Install dial gauge in thrust direction on front end of camshaft. Measure end play of dial gauge when camshaft is moved forward/backward (in direction to axis).

Standard: 0.115 - 0.188 mm (0.0045 - 0.0074 in)

- When out of the specified range, replace with new camshaft and measure again.
- When out of the specified range again, replace with new camshaft cylinder head.

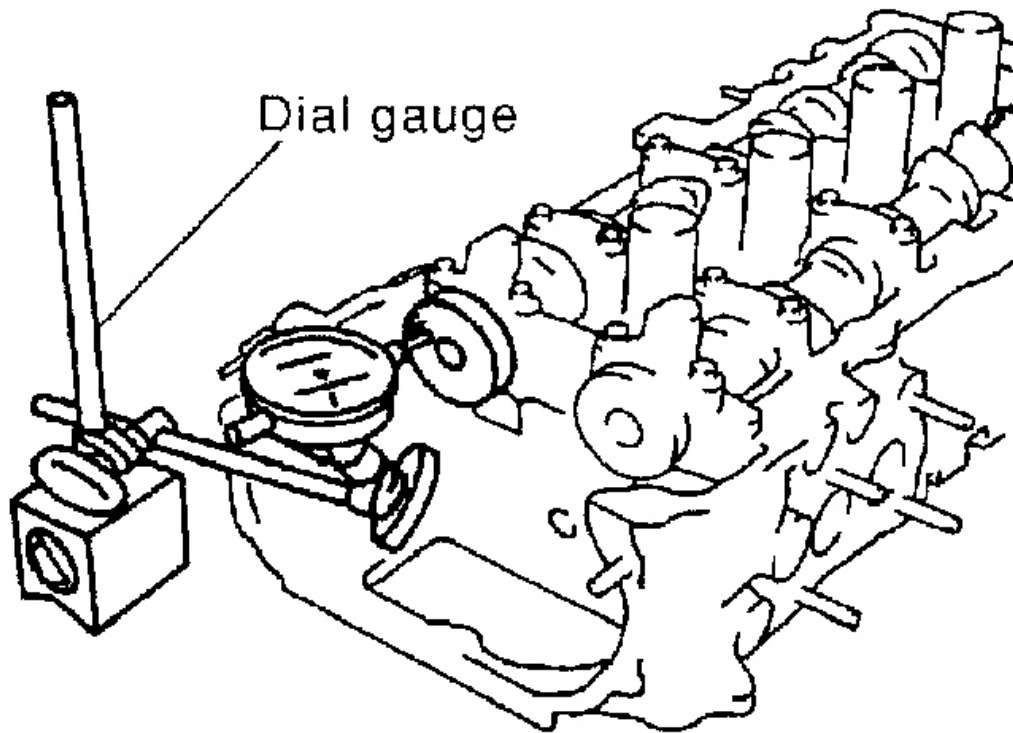

G02036600

Fig. 65: Measuring Camshaft End Play
Courtesy of NISSAN MOTOR CO., U.S.A.

Camshaft Sprocket Runout

1. Install camshaft in cylinder head.
2. Install camshaft sprocket to camshaft.
3. Measure camshaft sprocket runout.

Runout : Less than 0.15 mm (0.0059 in)

4. If it exceeds the limit, replace camshaft sprocket.

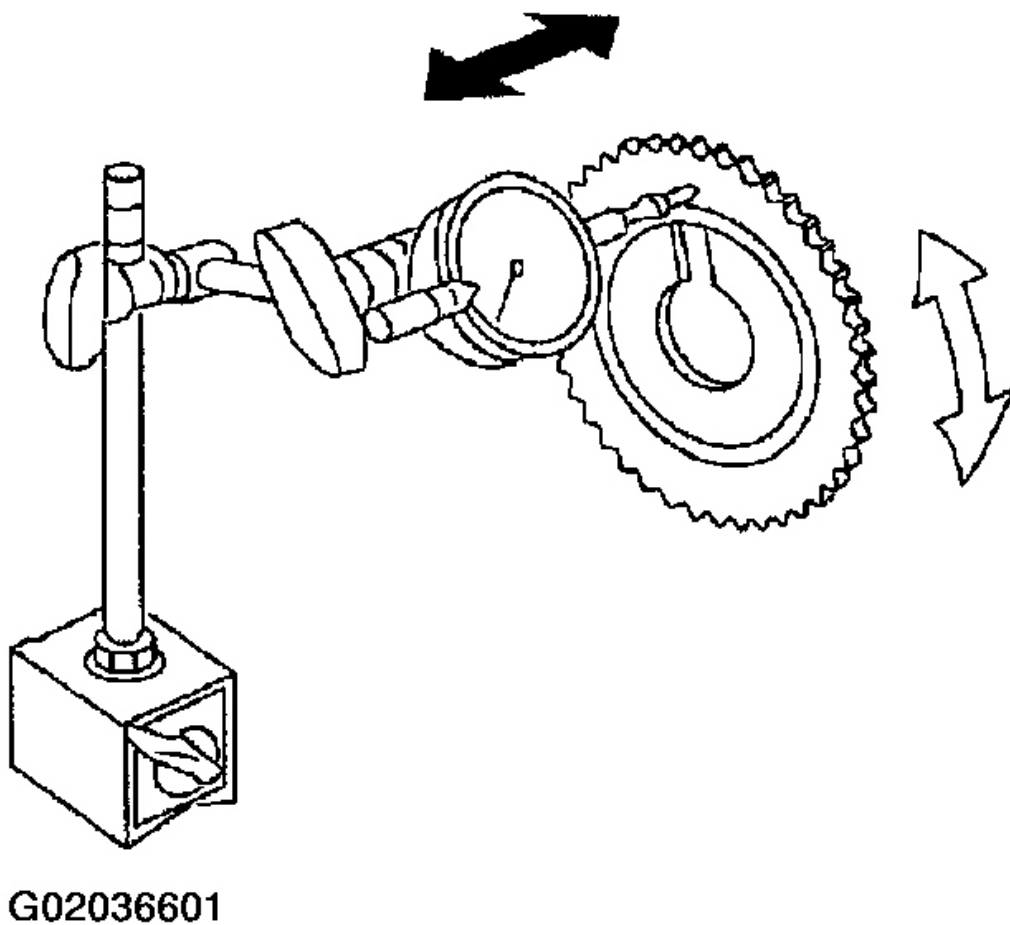


Fig. 66: Measuring Camshaft Sprocket Runout
Courtesy of NISSAN MOTOR CO., U.S.A.

Valve Lifter and Adjusting Shim

- Check if surface of valve lifter and adjusting shim has any wear or cracks.

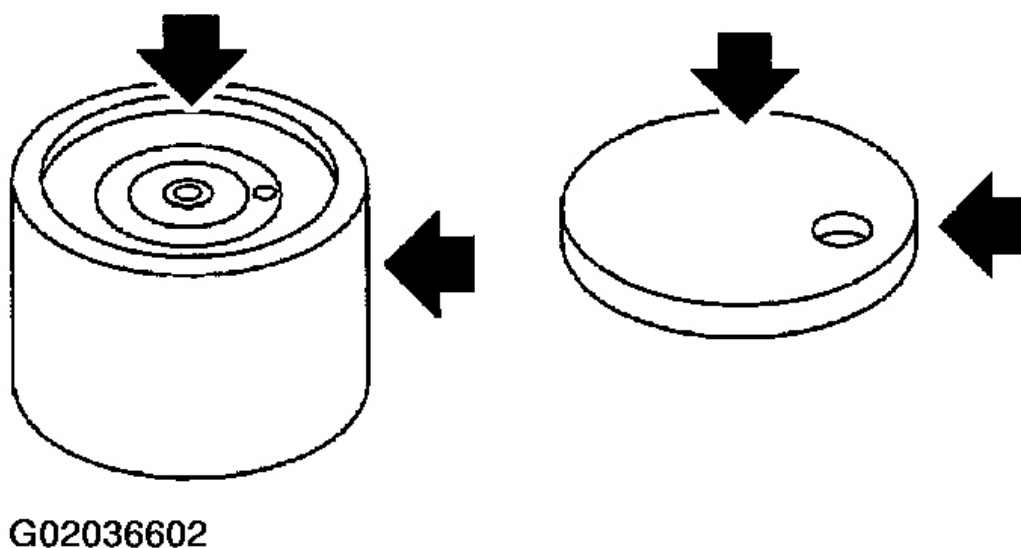



Fig. 67: Checking Surface Of Valve Lifter And Adjusting Shim
Courtesy of NISSAN MOTOR CO., U.S.A.

Valve Lifter Clearance

Outer Diameter of Valve Lifter

- Measure outer diameter of valve lifter.

Valve lifter outer diameter: 33.965 - 33.975 mm (1.3372 - 1.3376 in)

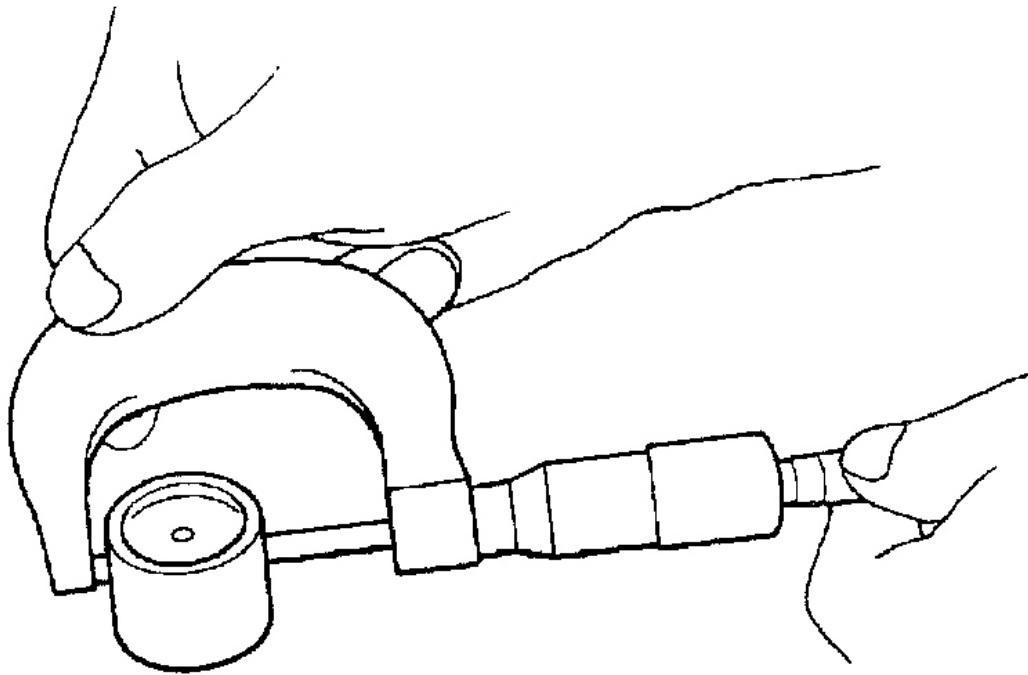

G02036603

Fig. 68: Measuring Outer Diameter Of Valve Lifter
Courtesy of NISSAN MOTOR CO., U.S.A.

Valve Lifter Hole Diameter

- Using inside micrometer, measure diameter of valve lifter hole of cylinder head.

Standard:


34.000-34.016 mm (1.3386 - 1.3392 in)

Calculation of Valve Lifter Clearance

(Valve lifter clearance) = (hole diameter of valve lifter) - (outer diameter of valve lifter)

Standard:

0.025 - 0.051 mm (0.0010 - 0.0020 in)

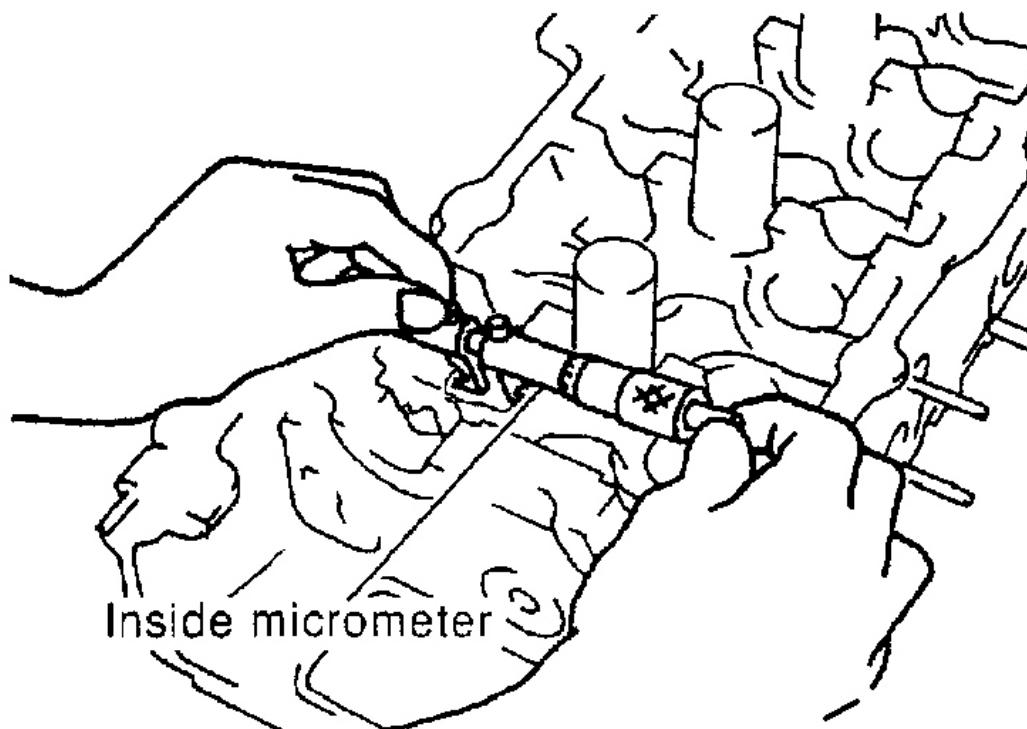

G02036604

Fig. 69: Measuring Diameter Of Valve Lifter Hole Of Cylinder Head
Courtesy of NISSAN MOTOR CO., U.S.A.

- When out of specified range, referring to each specification of outer and inner diameter, replace either or both valve lifter and cylinder head.


VALVE CLEARANCE

INSPECTION

- Perform inspection as follows after removal, installation or replacement of camshaft or valve-related parts, or if there is unusual engine conditions due to changes in valve clearance over time (starting, idling, and/ or noise).
 1. Warm up engine. Then, stop it.
 2. Remove engine cover, engine room covers (RH and LH) with power tool and air duct (inlet). Refer to **ENGINE ROOM COVER , "REMOVAL AND INSTALLATION"**.
 3. Remove RH and LH rocker covers with power tool.

Refer to **ROCKER COVER , "REMOVAL AND INSTALLATION"**.


4. Turn crankshaft pulley in normal direction (clockwise when viewed from FRONT) to align TDC identification notch (without paint mark) with timing indicator.

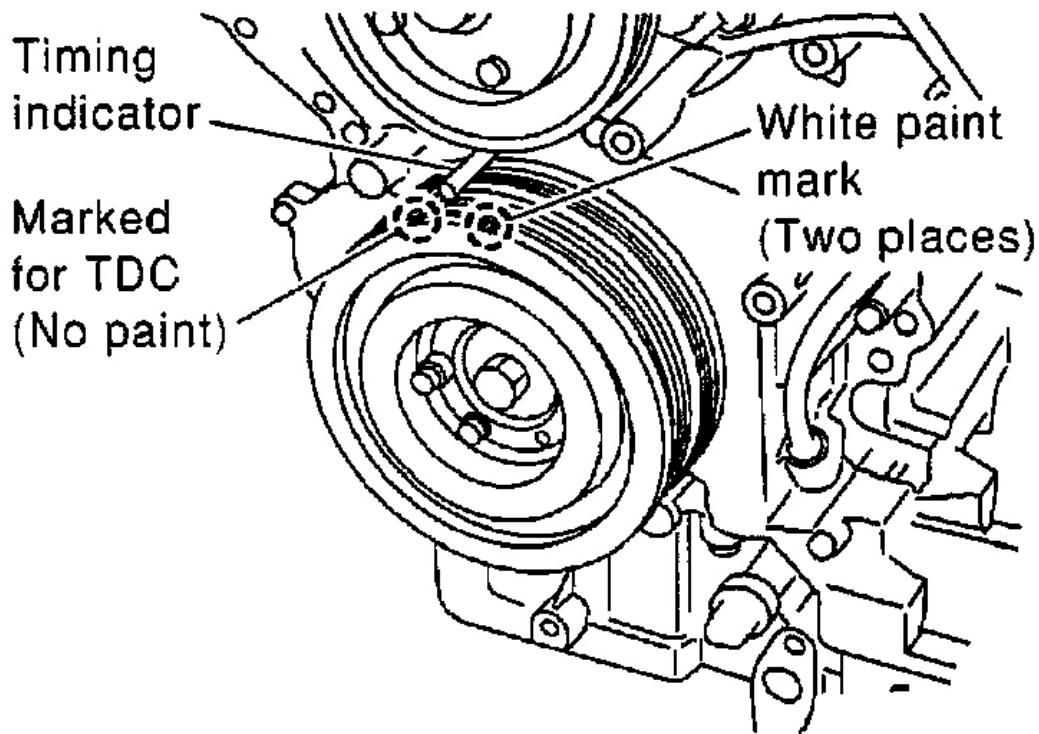

G02036605

Fig. 70: Identifying Timing Mark
Courtesy of NISSAN MOTOR CO., U.S.A.

5. At this time, check that the both intake and exhaust cam noses of No. 1 cylinder (top front on left bank) face outside.
 - If they do not face outside, turn crankshaft pulley once more.

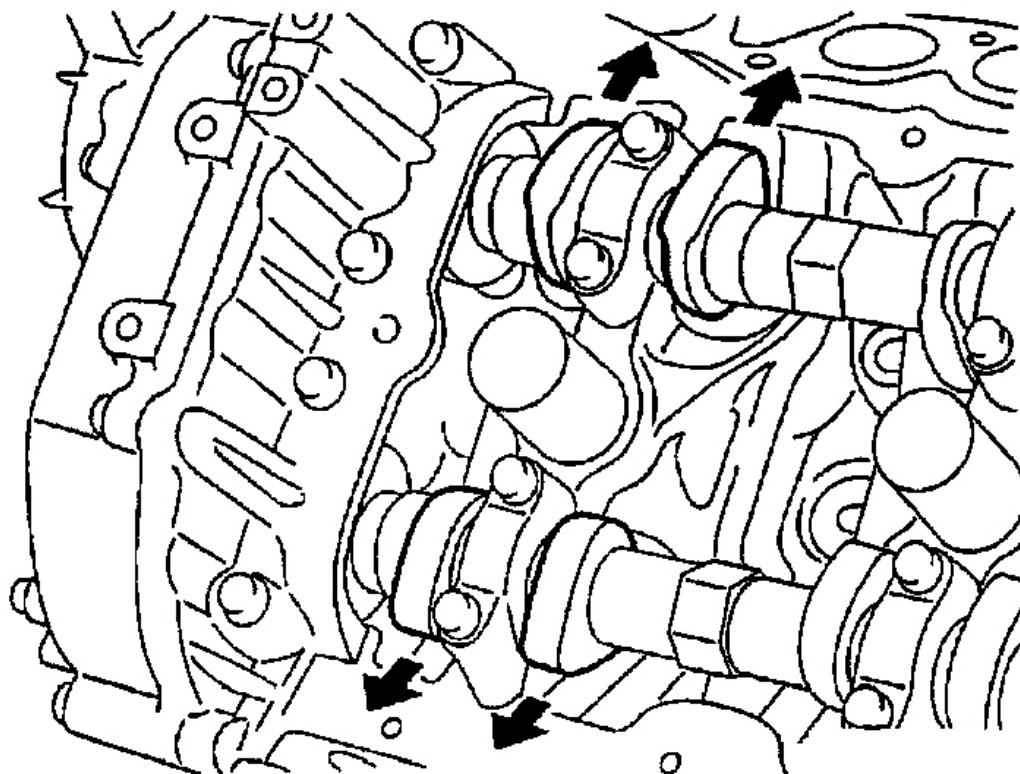

G02036606

Fig. 71: Identifying Intake And Exhaust Cam Noses
Courtesy of NISSAN MOTOR CO., U.S.A.

6. By referring to the figure, measure valve clearances at locations marked X as shown in the table below (locations indicated with black arrow in figure) with a thickness gauge.

NOTE: **Firing order 1-8-7-3-6-5-4-2.**

- No. 1 cylinder compression TDC

2002 Infiniti Q45

2002 ENGINE Engine Mechanical - Q45


Cylinder	No.1		No.2		No.3		No.4	
Valve	INT	EXH	INT	EXH	INT	EXH	INT	EXH
Measurable	×	×	×				×	
Cylinder	No.5		No.6		No.7		No.8	
Valve	INT	EXH	INT	EXH	INT	EXH	INT	EXH
Measurable	×					×		×

G02036607

Fig. 72: Firing Order Table**Courtesy of NISSAN MOTOR CO., U.S.A.**

▲ : Measurable at No. 1 cylinder
compression top dead center

⬆ : Measurable at No. 3 cylinder
compression top dead center

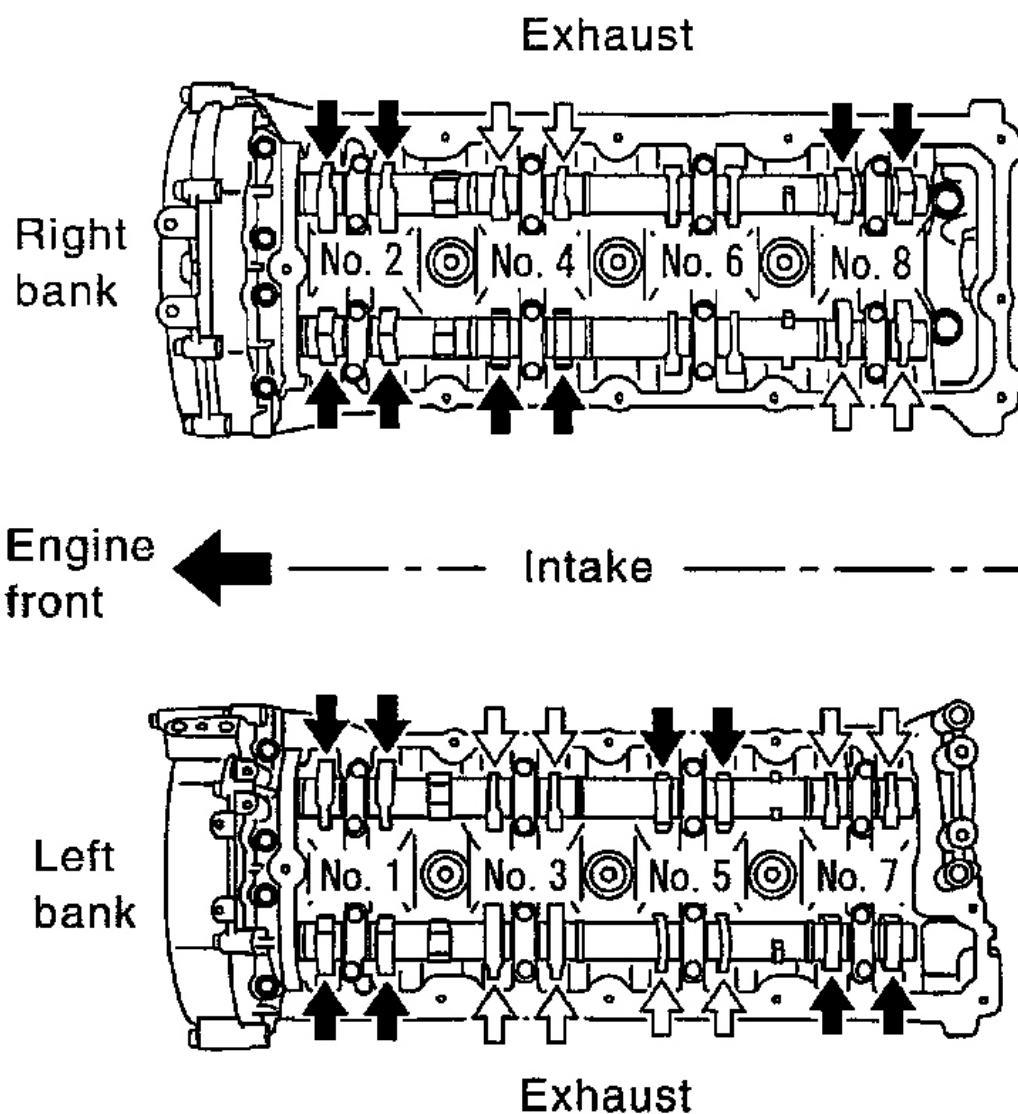

G02036608

Fig. 73: Identifying Rocker Arm Position
Courtesy of NISSAN MOTOR CO., U.S.A.

- Use a fine thickness gauge.

Valve clearance standard:

Hot Intake : 0.32 - 0.40 mm (0.013 - 0.016 in)


Exhaust : 0.33 - 0.41 mm (0.013 - 0.016 in)

Cold* Intake : 0.26 - 0.34 mm (0.010 - 0.013 in)

Exhaust : 0.29 - 0.37 mm (0.011 - 0.015 in)

* Approximately 20°C (68°F)

CAUTION: If inspection was carried out with cold engine, check that values with fully warmed up engine are still within specifications.

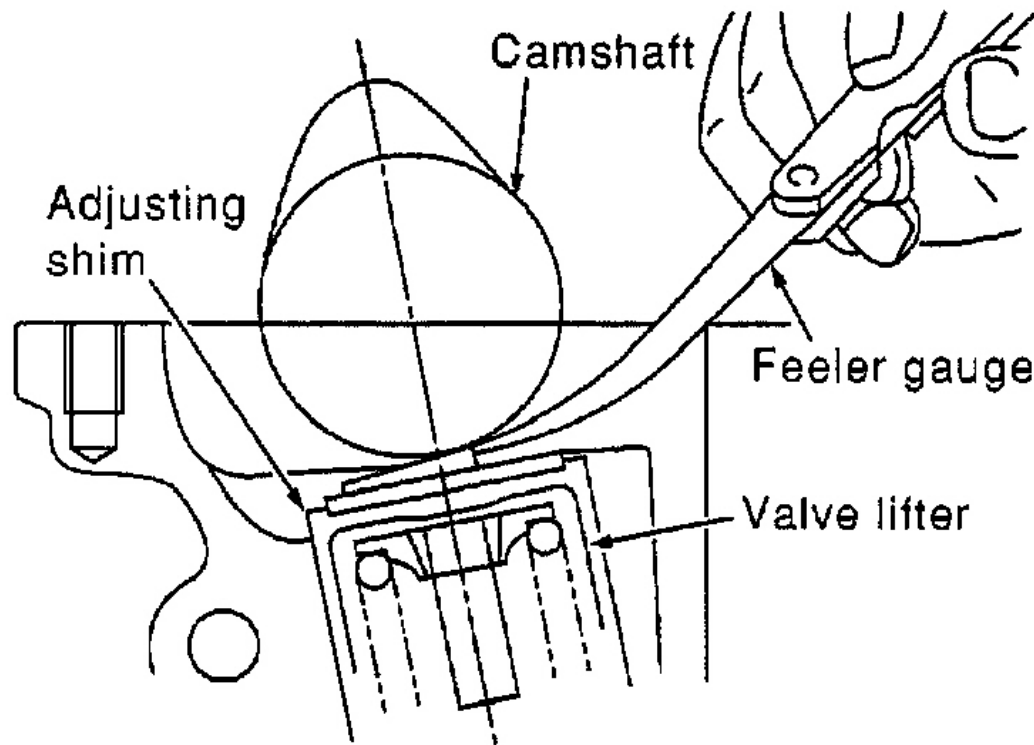

G02036609

Fig. 74: Measuring Valve Clearances
Courtesy of NISSAN MOTOR CO., U.S.A.

7. Turn crankshaft pulley clockwise by 270° from the position of No. 1 cylinder compression TDC to obtain No. 3 cylinder compression TDC.
8. By referring to the figure, measure valve clearances at locations marked X as shown in the table below (locations indicated with white arrow in figure)
 - No. 3 cylinder compression TDC

2002 Infiniti Q45


2002 ENGINE Engine Mechanical - Q45

Cylinder	No.1		No.2		No.3		No.4	
Valve	INT	EXH	INT	EXH	INT	EXH	INT	EXH
Measurable					×	×		×
Cylinder	No.5		No.6		No.7		No.8	
Valve	INT	EXH	INT	EXH	INT	EXH	INT	EXH
Measurable		×			×		×	

G02036610

Fig. 75: Firing Order Table
Courtesy of NISSAN MOTOR CO., U.S.A.

- ▲ : Measurable at No. 1 cylinder
compression top dead center
 ↑ : Measurable at No. 3 cylinder
compression top dead center

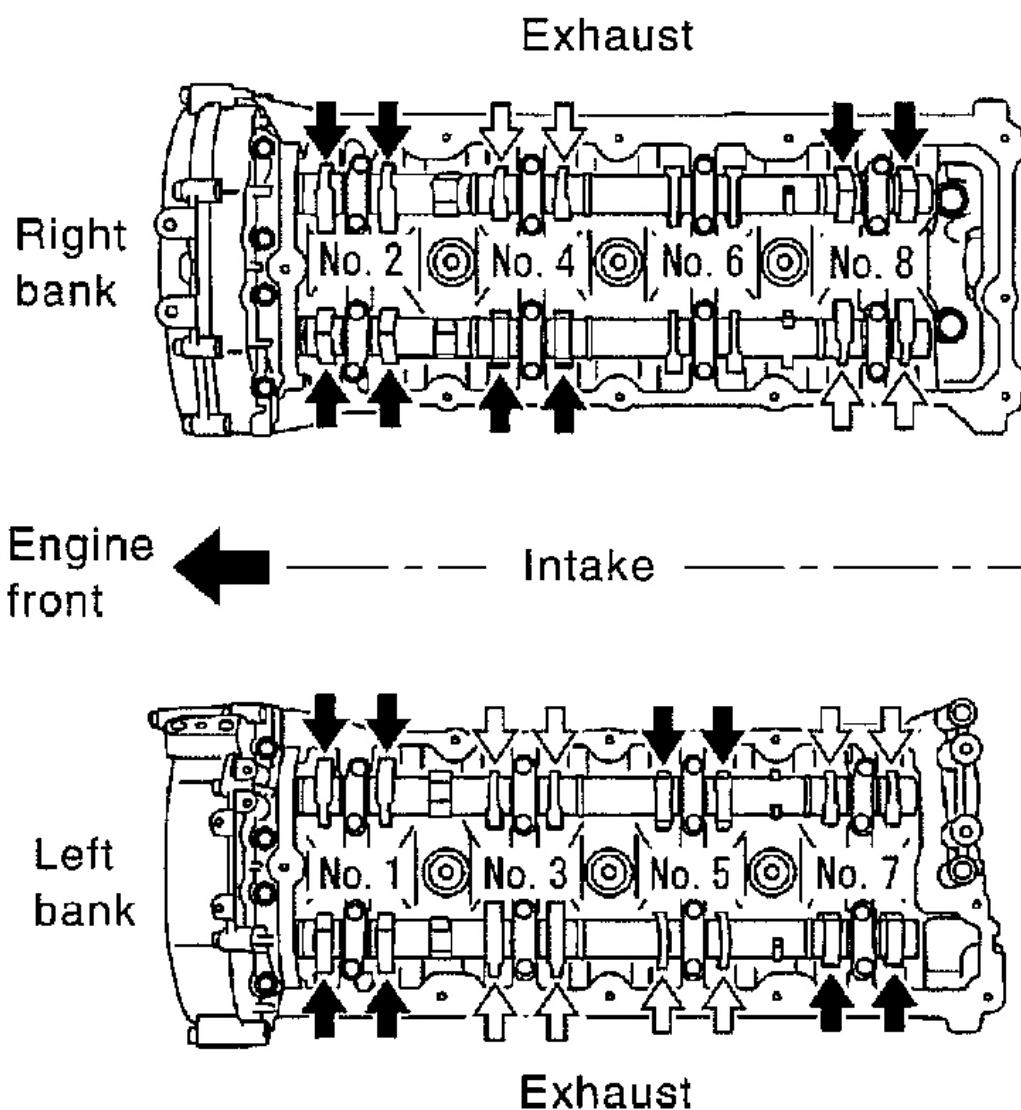

G02036611

Fig. 76: Identifying Rocker Arm Position (1 Of 2)

Courtesy of NISSAN MOTOR CO., U.S.A.

9. Turn crankshaft pulley clockwise by 90° from the position of No. 3 cylinder compression TDC (clockwise by 360° from the position of No. 1 cylinder compression TDC) to measure intake and exhaust valve clearances of No. 6 cylinder and exhaust valve clearance of No.2 cylinder.

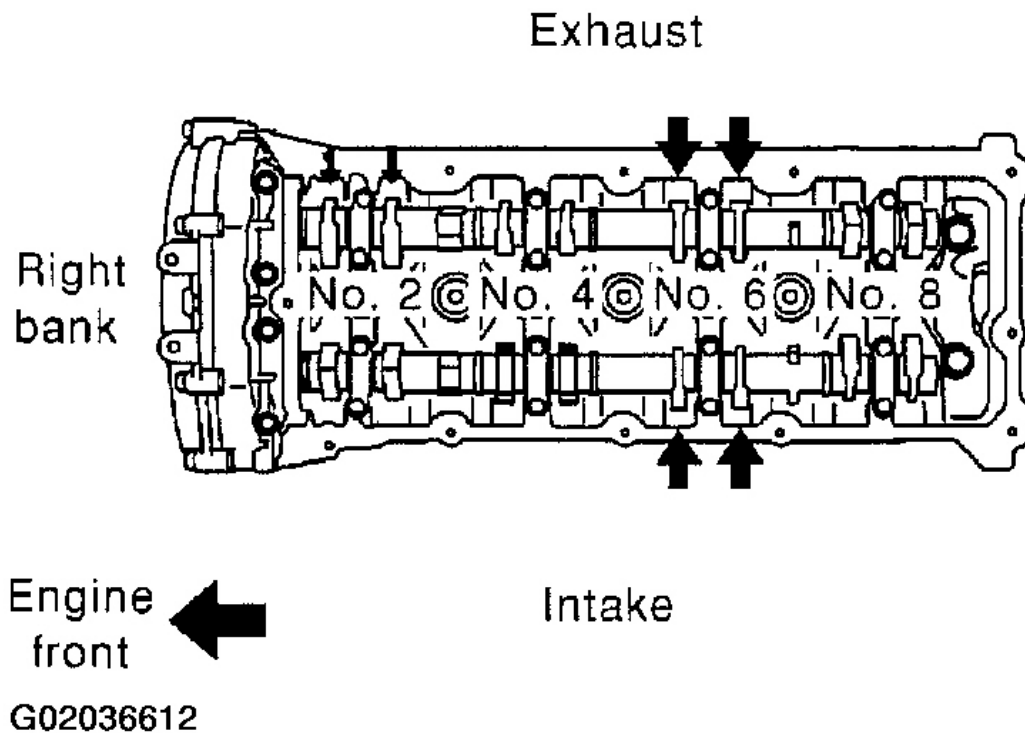



Fig. 77: Identifying Rocker Arm Position (2 Of 2)
Courtesy of NISSAN MOTOR CO., U.S.A.

10. If out of specifications, adjust as follows:

ADJUSTMENT

Adjust valve clearance while engine is cold.

1. Turn crankshaft, to position cam lobe on camshaft of valve that must be adjusted upward.
2. Thoroughly wipe off engine oil around adjusting shim using a rag.
3. Using a extra-fine screwdriver, turn the round hole of the adjusting shim in the direction of the arrow.

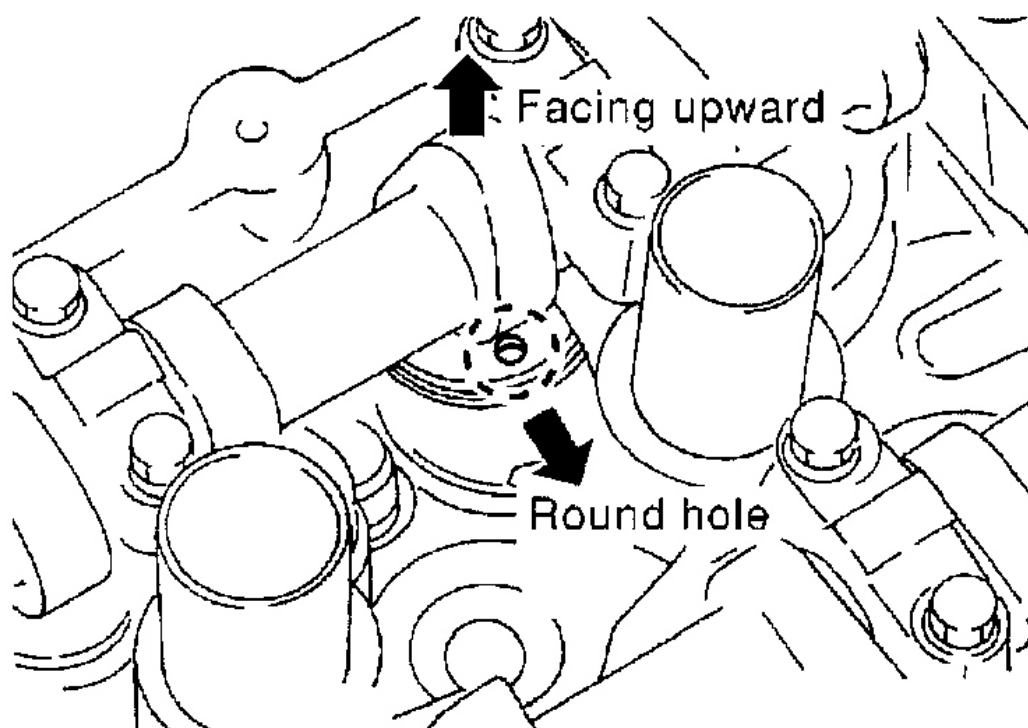

G02036613

Fig. 78: Identifying Round Hole Of The Adjusting Shim
Courtesy of NISSAN MOTOR CO., U.S.A.

4. Place Tool (A) around camshaft as shown in figure.

Before placing Tool (A), rotate notch toward center of cylinder head (See figure), to simplify shim removal later .

CAUTION: Be careful not to damage cam surface with Tool (A).

5. Rotate Tool (A) (See figure.) so that valve lifter is pushed down.

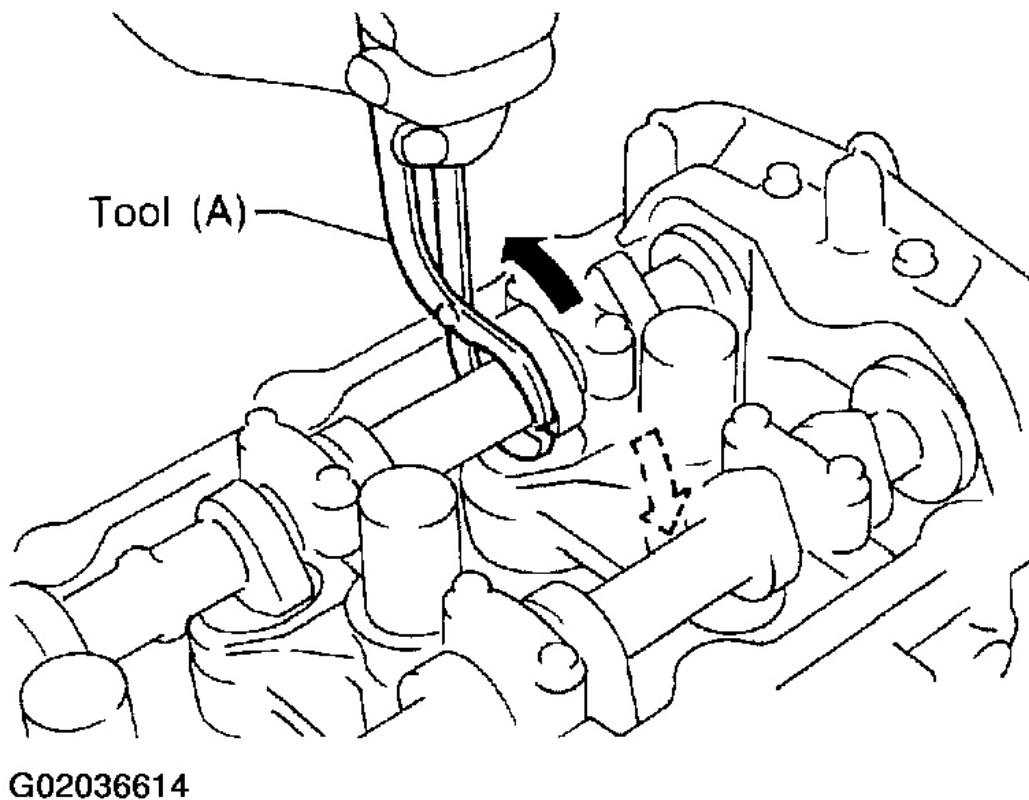


Fig. 79: Placing Tool Around Camshaft
Courtesy of NISSAN MOTOR CO., U.S.A.

6. Place Tool (B) between camshaft and the edge of the valve lifter to retain valve lifter.

CAUTION:

- Tool (B) must be placed as close to camshaft bracket as possible.
- Be careful not to damage cam surface with Tool (B).

7. Remove Tool (A).

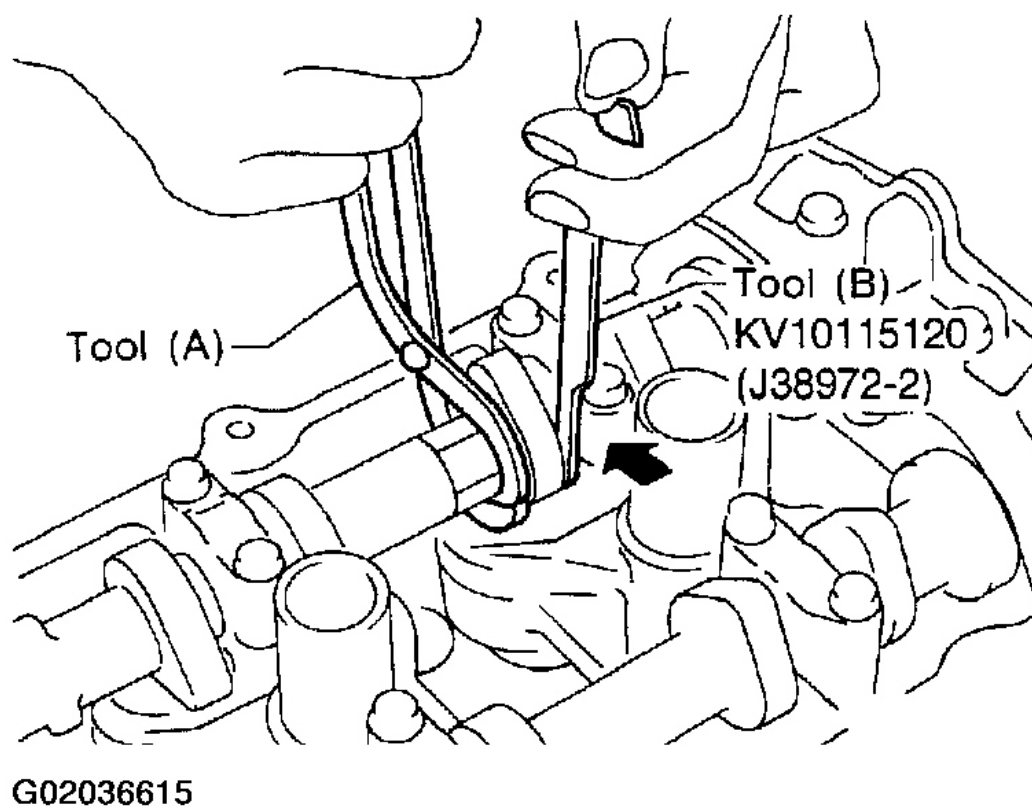


Fig. 80: Removing Tool

Courtesy of NISSAN MOTOR CO., U.S.A.

8. Blow air into the hole to separate adjusting shim from valve lifter.

CAUTION: • When blowing, use goggles to protect your eye.

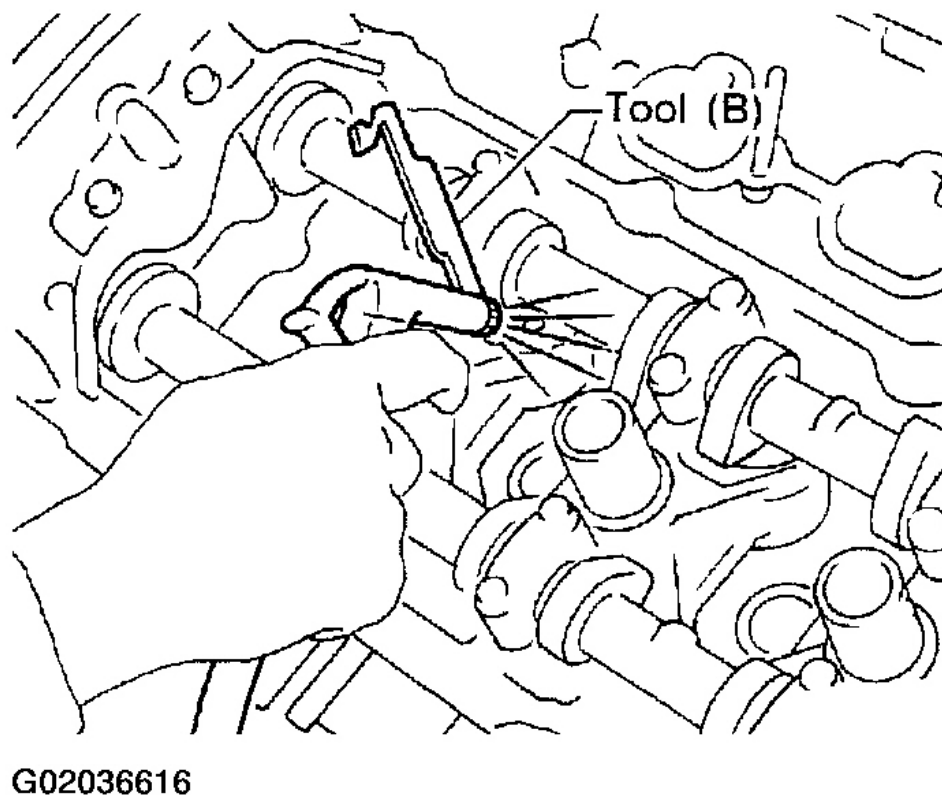



Fig. 81: Blowing Air Into The Hole
Courtesy of NISSAN MOTOR CO., U.S.A.

9. Remove adjusting shim using a small screwdriver and a magnetic finger.
10. Determine replacement adjusting shim size following formula.
 - Using a micrometer determine thickness of removed shim with measured at center.
 - Calculate thickness of new adjusting shim so valve clearance comes within specified values.

R = Thickness of removed shim

N = Thickness of new shim

M = Measured valve clearance

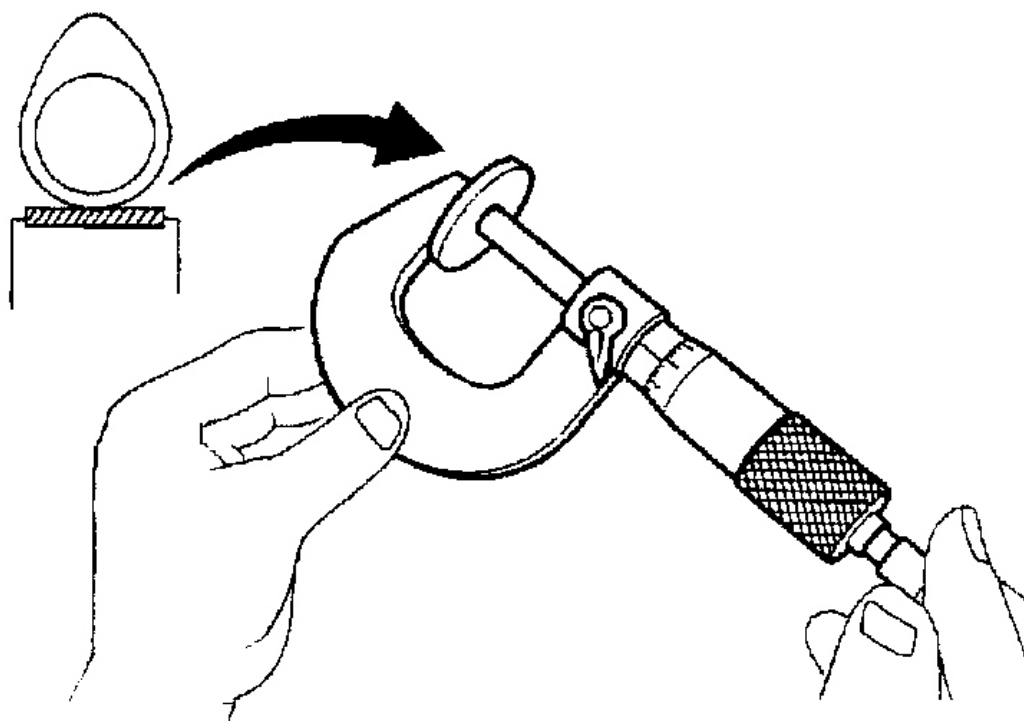

G02036617

Fig. 82: Measuring Thickness Of Shim
Courtesy of NISSAN MOTOR CO., U.S.A.

Intake : $N = R + [M - 0.30 \text{ mm (0.0118 in)}]$

Exhaust : $N = R + [M - 0.33 \text{ mm (0.0130 in)}]$

Shims are available in 64 sizes from 2.32 mm (0.0913 in) to 2.95 mm (0.1161 in), in steps of 0.01 mm (0.0004 in) .

- Select new shim with thickness as close as possible to calculated value.


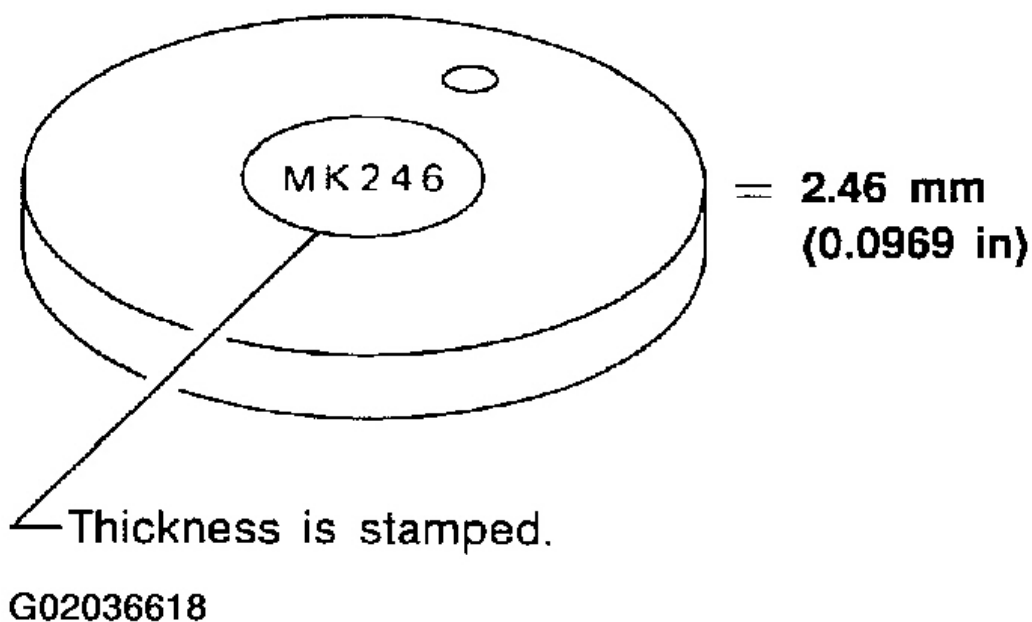


Fig. 83: Identifying Shim With Thickness
Courtesy of NISSAN MOTOR CO., U.S.A.


11. Install new shim using a suitable tool.
 - Install with the surface on which the thickness is stamped facing down .

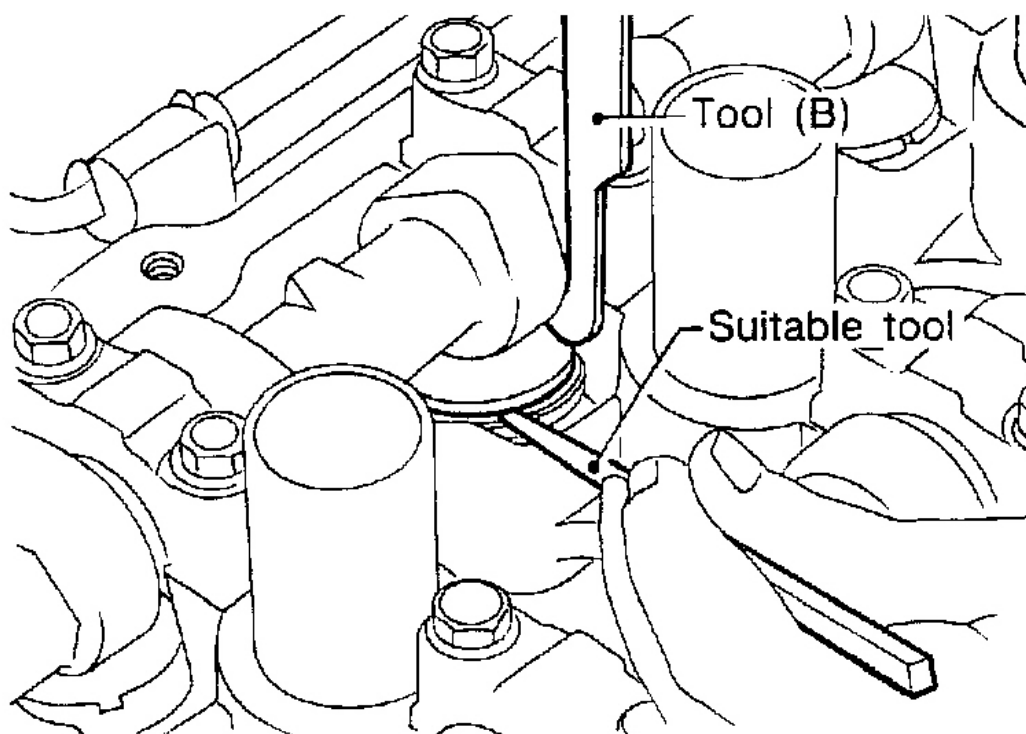

G02036619

Fig. 84: Installing Shim Using Suitable Tool
Courtesy of NISSAN MOTOR CO., U.S.A.

12. Place Tool (A) as mentioned in steps 4 and 5.
13. Remove Tool (B).
14. Remove Tool (A).
15. Recheck valve clearance. (Cold value)
16. Finally check valve clearance with warmed up engine. (Hot value)

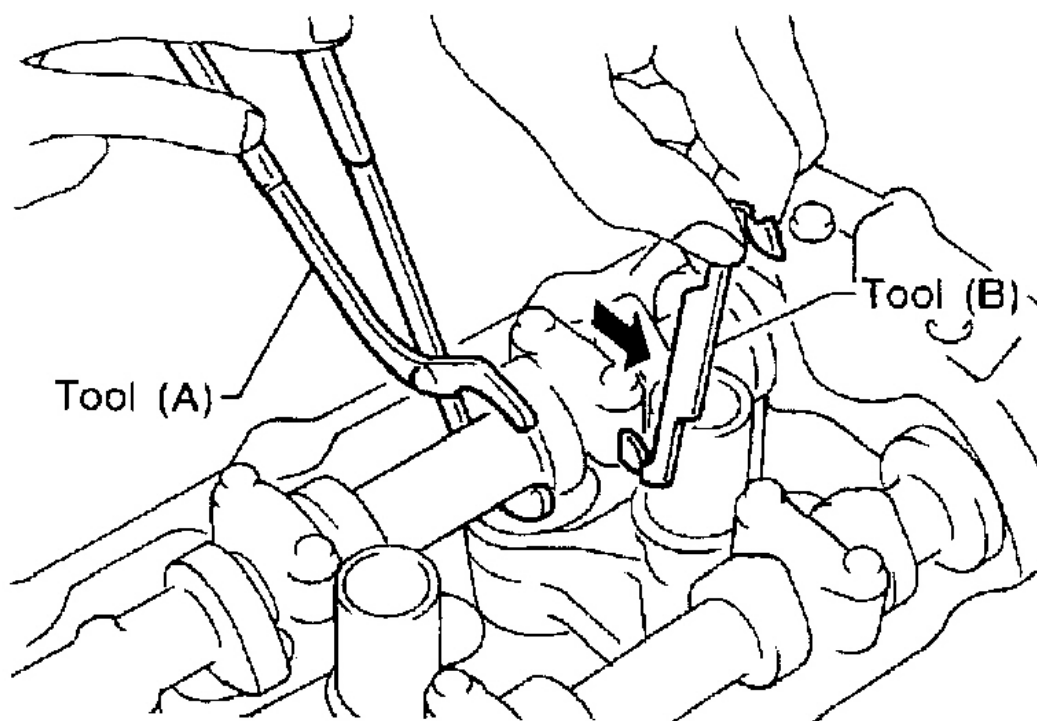

G02036620

Fig. 85: Checking Valve Clearance

Courtesy of NISSAN MOTOR CO., U.S.A.

Valve clearance:

Unit: mm (in)

	Cold* (reference data)	Hot
Intake	0.26 - 0.34 (0.010 - 0.013)	0.32 - 0.40 (0.013 - 0.016)
Exhaust	0.29 - 0.37 (0.011 - 0.015)	0.33 - 0.41 (0.013 - 0.016)

*: Approximately 20°C (68°F)


G02036621

Fig. 86: Valve Clearance Table

Courtesy of NISSAN MOTOR CO., U.S.A.

TIMING CHAIN

REMOVAL AND INSTALLATION

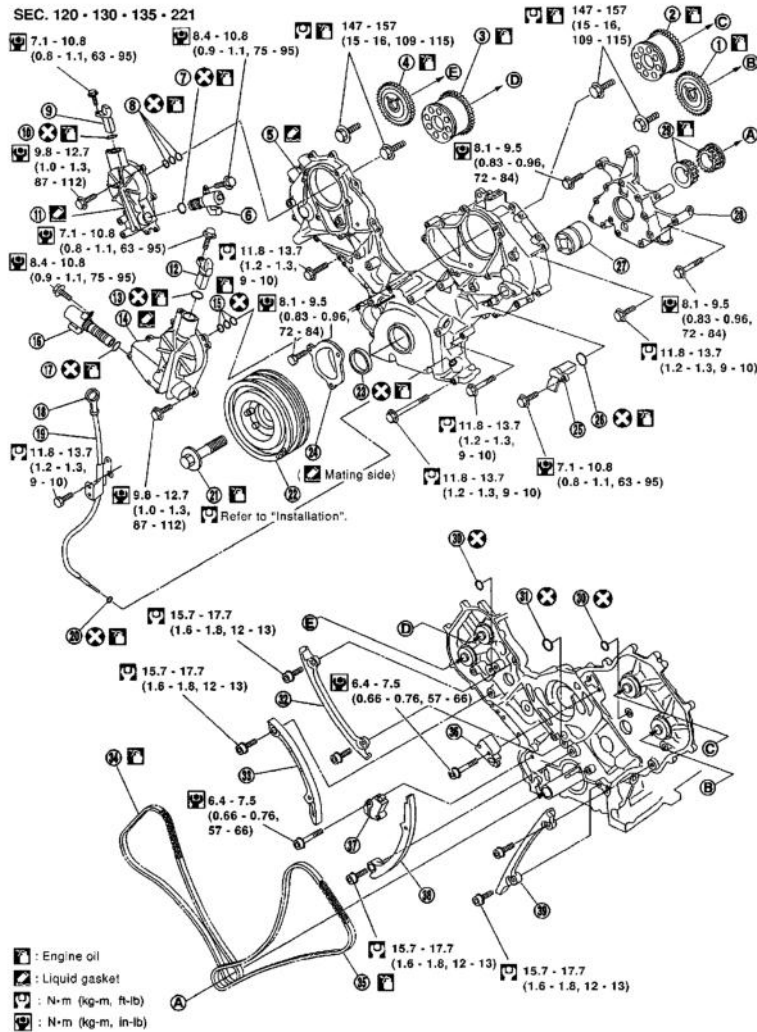

- | | | |
|---|---|--|
| 1 Camshaft sprocket (left bank EXH) | 2 Camshaft sprocket (left bank INT) | 3 Camshaft sprocket (right bank INT) |
| 4 Camshaft sprocket (right bank EXH) | 5 Front cover | 6 Intake valve timing control solenoid valve (right bank) |
| 7 O-ring | 8 Seal ring | 9 Intake valve timing control position sensor (right bank) |
| 10 O-ring | 11 Intake valve timing control cover (right bank) | 12 Intake valve timing control position sensor (left bank) |
| 13 O-ring | 14 Intake valve timing control cover (left bank) | 15 Seal ring |
| 16 Intake valve timing control solenoid valve (left bank) | 17 O-ring | 18 Oil level gauge |
| 19 Oil level gauge guide | 20 O-ring | 21 Crankshaft pulley bolt |
| 22 Crankshaft pulley | 23 Front oil seal | 24 Chain tensioner cover |
| 25 Camshaft position sensor (PHASE) | 26 O-ring | 27 Oil pump drive spacer |
| 28 Oil pump assembly | 29 Crankshaft sprocket | 30 O-ring |
| 31 O-ring | 32 Timing chain tension guide (right bank) | 33 Timing chain slack guide (right bank) |
| 34 Timing chain (right bank) | 35 Timing chain (left bank) | 36 Chain tensioner (left bank) |
| 37 Chain tensioner (right bank) | 38 Timing chain slack guide (left bank) | 39 Timing chain tension guide (right bank) |

G02036622

Fig. 87: Exploded View Of Timing Chain
Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION: Apply new engine oil to parts marked in illustration before installation.

REMOVAL

1. Remove engine assembly from vehicle. Refer to , "**REMOVAL AND INSTALLATION**".
2. Remove the following components and related parts:
 - Drive belt auto tensioner and idler pulley. Refer to , "**DRIVE BELT AUTO TENSIONER AND IDLER PULLEY**".
 - Thermostat housing and hose. Refer to **REMOVAL AND INSTALLATION** .
 - Oil pan and oil strainer. Refer to , "**REMOVAL AND INSTALLATION**".
 - Ignition coil (When camshaft sprocket is removed). Refer to , "**IGNITION COIL**".
 - Rocker cover (When camshaft sprocket is removed). Refer to , "**REMOVAL AND INSTALLATION**".
3. If necessary, remove intake valve timing control position sensor (right and left) and camshaft position sensor (PHASE) from intake valve timing control cover and front cover.

CAUTION:

- Handle components and parts carefully to avoid dropping and shocks.
- Do not disassemble.

4. If necessary, remove intake valve timing control solenoid valve from intake valve timing control cover.

CAUTION:

- Handle components and parts carefully to avoid dropping and sh
- Do not disassemble.


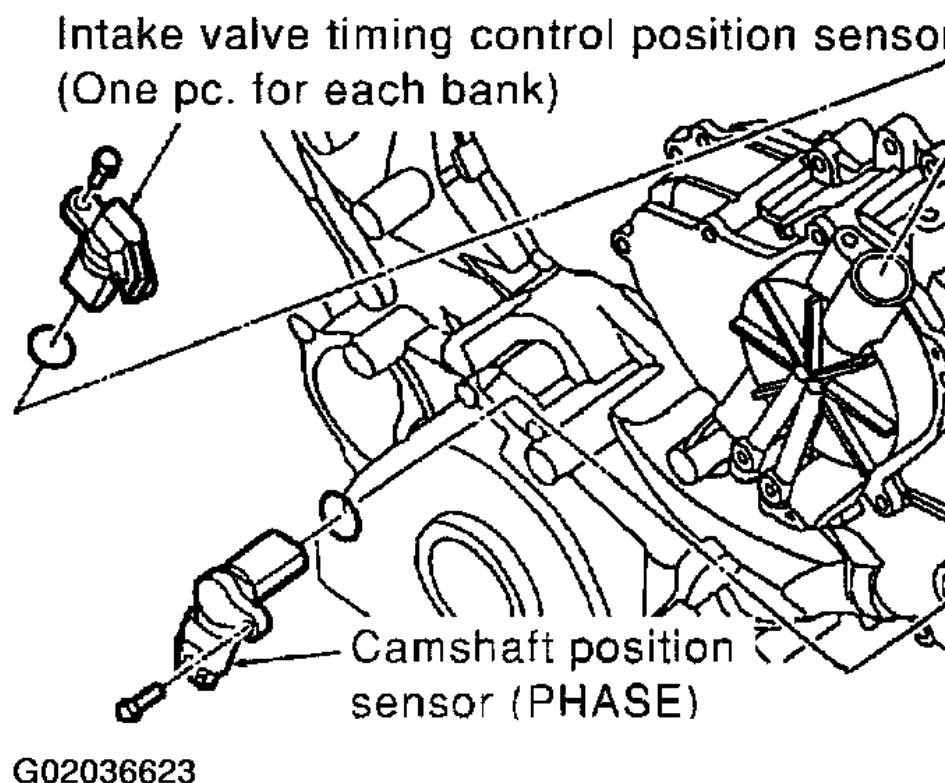


Fig. 88: Removing Intake Valve Timing Control Position Sensor (Right And Left) And Camshaft Position Sensor
Courtesy of NISSAN MOTOR CO., U.S.A.

5. Remove intake valve timing control cover as follows:
 - a. Loosen and remove fixing bolts in the reverse order of that shown in figure.
 - b. Use seal cutter or the equivalent to cut liquid gasket for removal.

CAUTION:


- Exercise care not to damage mating surfaces.
- Pull out cover keeping levelness without an angle, as inner is engaged with the center of intake cam sprocket.

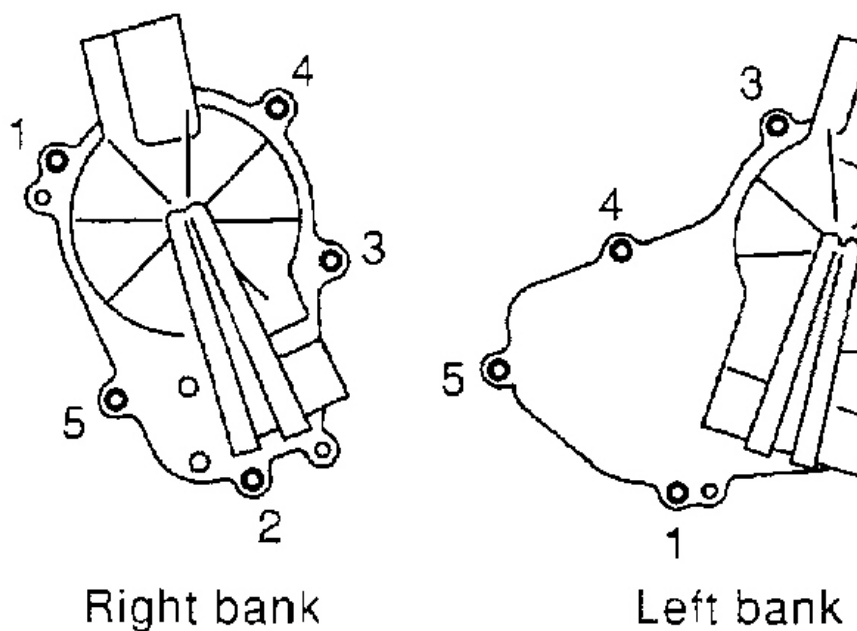

G02036624

Fig. 89: Removing Fixing Bolts In Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.


6. Obtain compression TDC of No. 1 cylinder as follows:
 - a. Turn crankshaft pulley clockwise to align the TDC identification notch (without paint mark) with timing indicator on front cover.

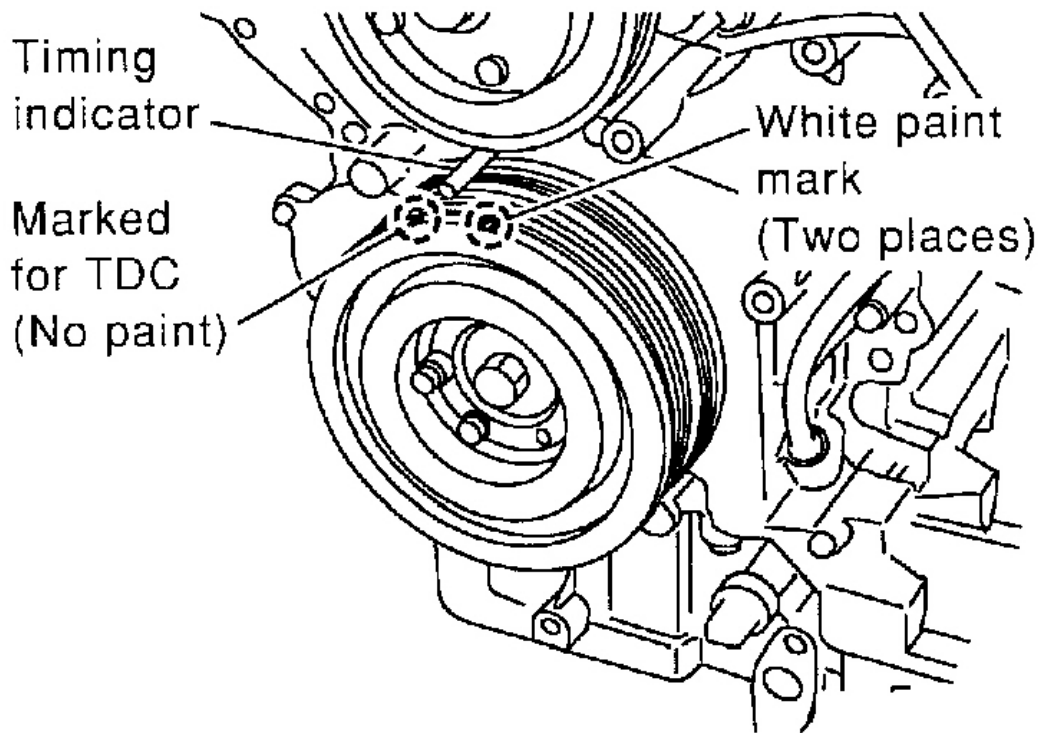

G02036625

Fig. 90: Turning Crankshaft Pulley Clockwise
Courtesy of NISSAN MOTOR CO., U.S.A.

- b. At this time, check that the mating mark on camshaft sprocket is in the position as shown in the figure.
 - If the mating mark does not come in the position shown, turn crankshaft pulley once more to bring the mark in the position.

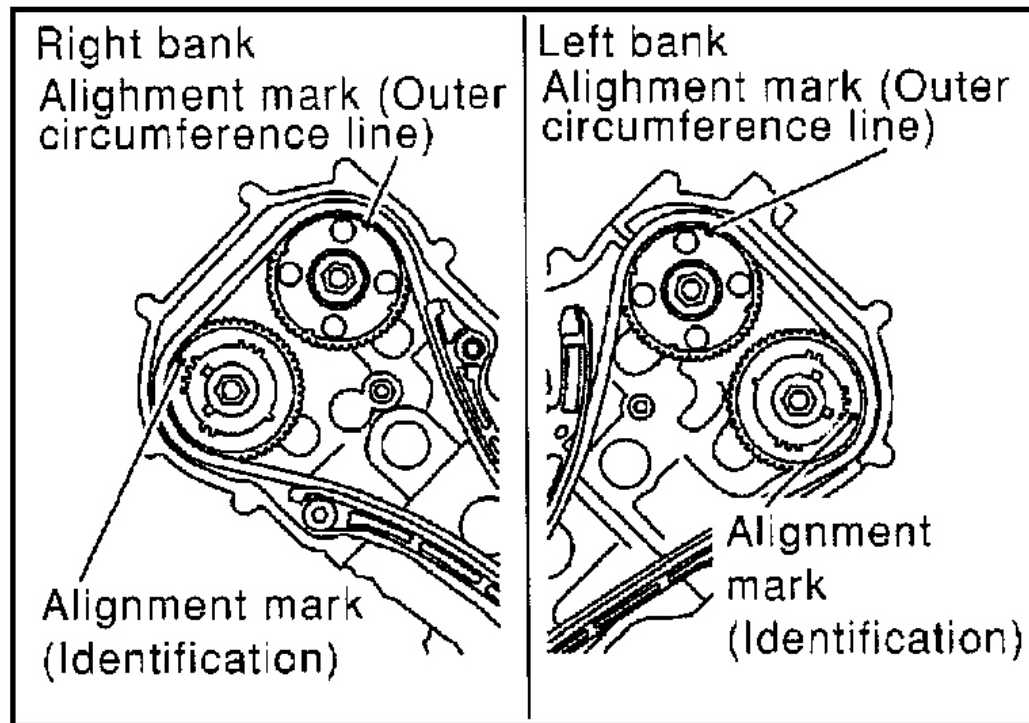


G02036626

Fig. 91: Identifying Mating Mark On Camshaft Sprocket
Courtesy of NISSAN MOTOR CO., U.S.A.

7. Remove crankshaft pulley as follows:
- Lock crankshaft with a hammer handle or similar tool to loosen fixing bolts.
 - Pull crankshaft pulley with both hands to remove it.

CAUTION:

- Do not remove fixing bolts. Keep loosened fixing bolts in place to prevent removed crankshaft pulley from dropping.
- Do not remove balance weight (inner hexagon bolt) at the front of crankshaft pulley.

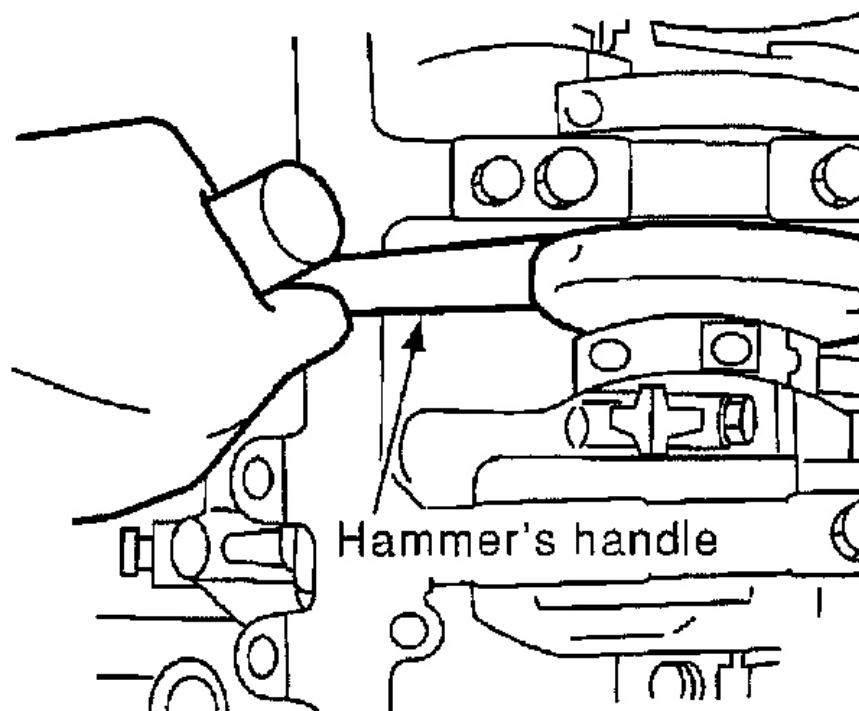


G02036627

Fig. 92: Removing Fixing Bolts
Courtesy of NISSAN MOTOR CO., U.S.A.

8. Remove front cover as follows:
 - a. Loosen and remove fixing bolts in the reverse order of that shown in figure.
 - b. Use seal cutter or the equivalent to cut liquid gasket for removal.

CAUTION: Exercise care not to damage mating surfaces.

9. If replacement of front oil seal is necessary, lift the seal with a screwdriver for removal.

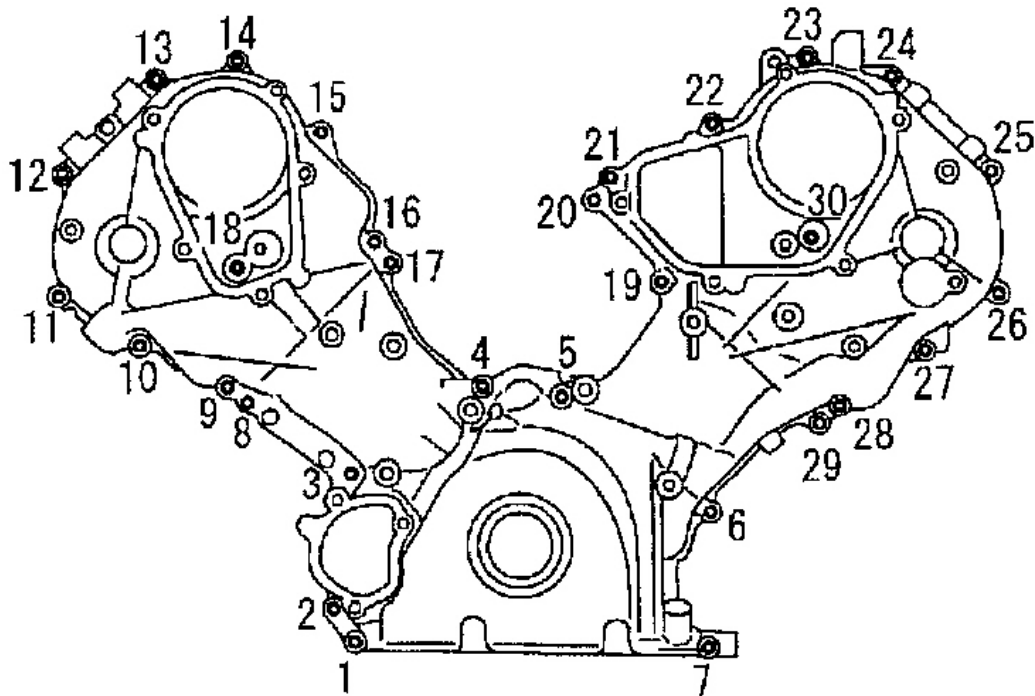

G02036628

Fig. 93: Removing Front Cover

Courtesy of NISSAN MOTOR CO., U.S.A.

10. Remove oil pump drive spacer.

- Install bolts into two bolt holes [M6 x pitch 1.0 mm (0.04 in)] on front surface. Using a small puller, pull spacer off from crankshaft.

NOTE:


- The center-to-center dimension between the two bolt holes is 33 mm (1.30 in).

11. Remove oil pump.

12. Remove chain tensioner on left bank.

NOTE:


To remove timing chain and associated parts, start with those on left bank. The procedure for removing parts on right bank is omitted because it is the same as that for left bank.

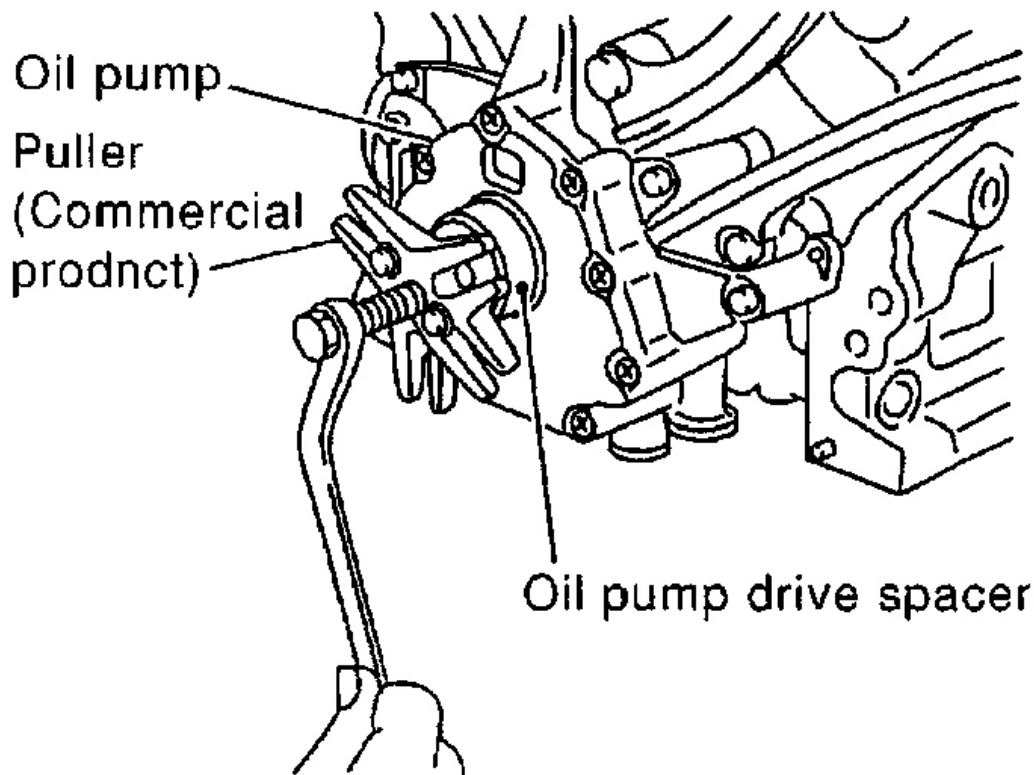

G02036629

Fig. 94: Removing Chain Tensioner On Left Bank
Courtesy of NISSAN MOTOR CO., U.S.A.

- a. Press tab in the direction of arrow (or turn lever in the direction of arrow) to unlock the locking with the groove that stops tensioner plunger from returning.
 - Lightly press tensioner plunger to release the tension of spring for this operation.
- b. Push in tensioner plunger to align the hole on lever and that on pump main body.
 - Pushing in tensioner too far does not allow the holes to align. Therefore, push in plunger to the degree at which the start of stopper groove and tab engages.

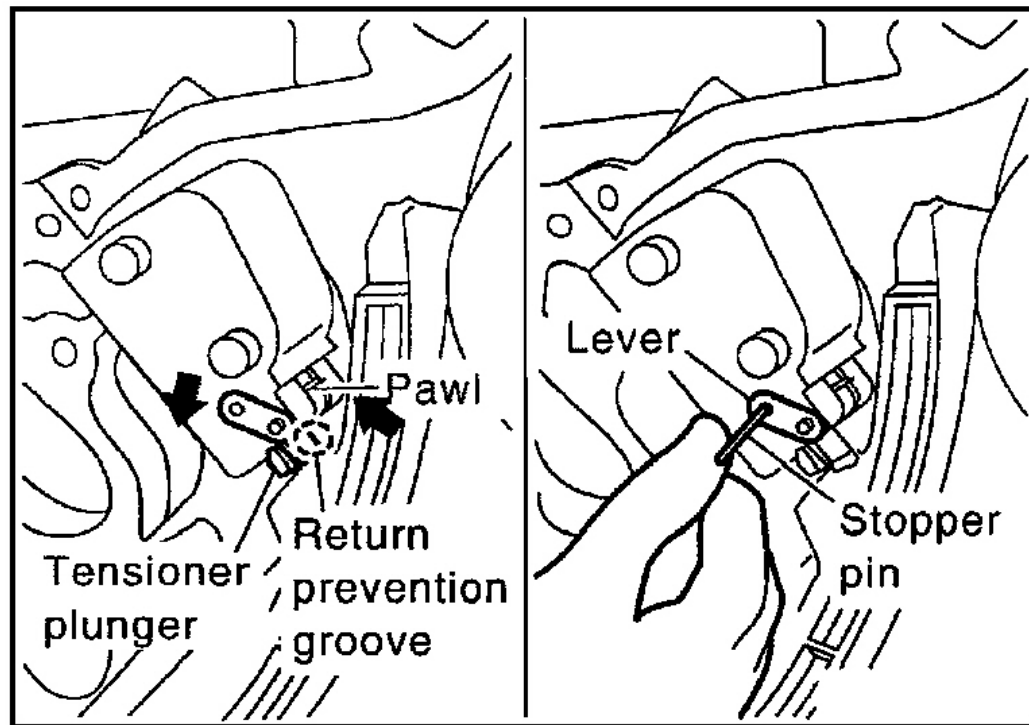


G02036630

Fig. 95: Aligning The Hole On Lever
Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Insert a stopper pin [hard wire with approx. 0.5 mm (0.020 in) diameter or a similar tool] to fix plunger. With plunger fixed, remove chain tensioner.
13. Remove chain tensioner guide and slack guide.
14. Remove timing chain and crankshaft sprocket.
15. With hexagonal part of camshaft locked with wrench, loosen bolts securing camshaft sprocket to remove camshaft sprocket.

CAUTION: To avoid interference between valves and pistons, do not turn crankshaft or camshaft with timing chain is disconnected.

16. Using the same procedure as for left bank, remove timing chain and associated parts on right side.

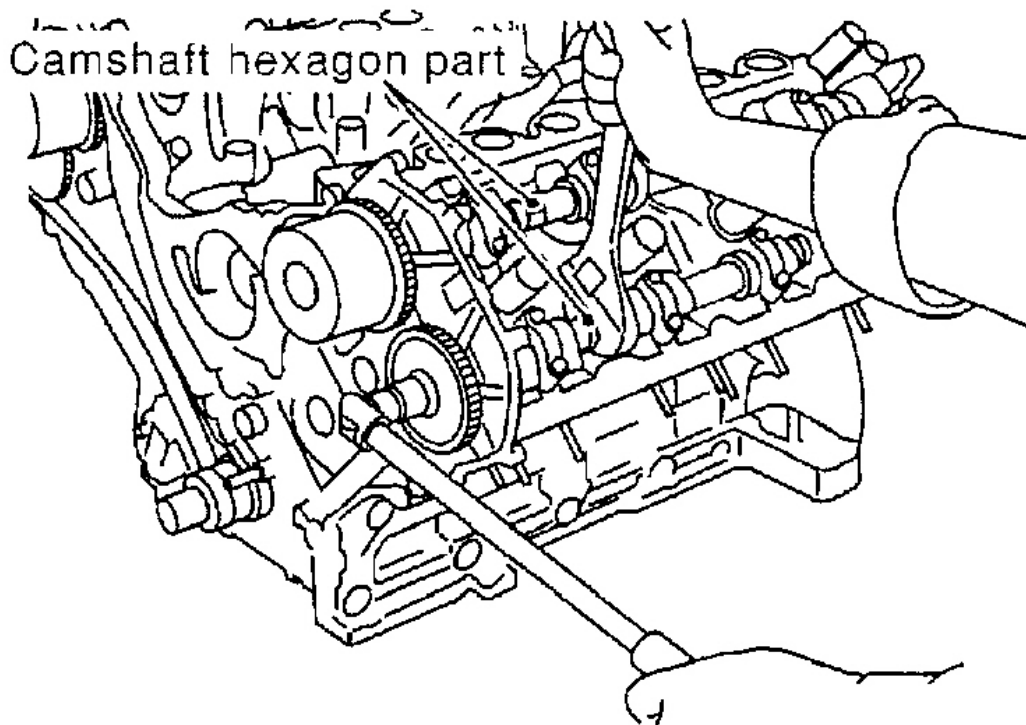


G02036631

Fig. 96: Removing Timing Chain
Courtesy of NISSAN MOTOR CO., U.S.A.

INSPECTION AFTER REMOVAL

Check for cracks and at link plates. Replace chain if necessary.

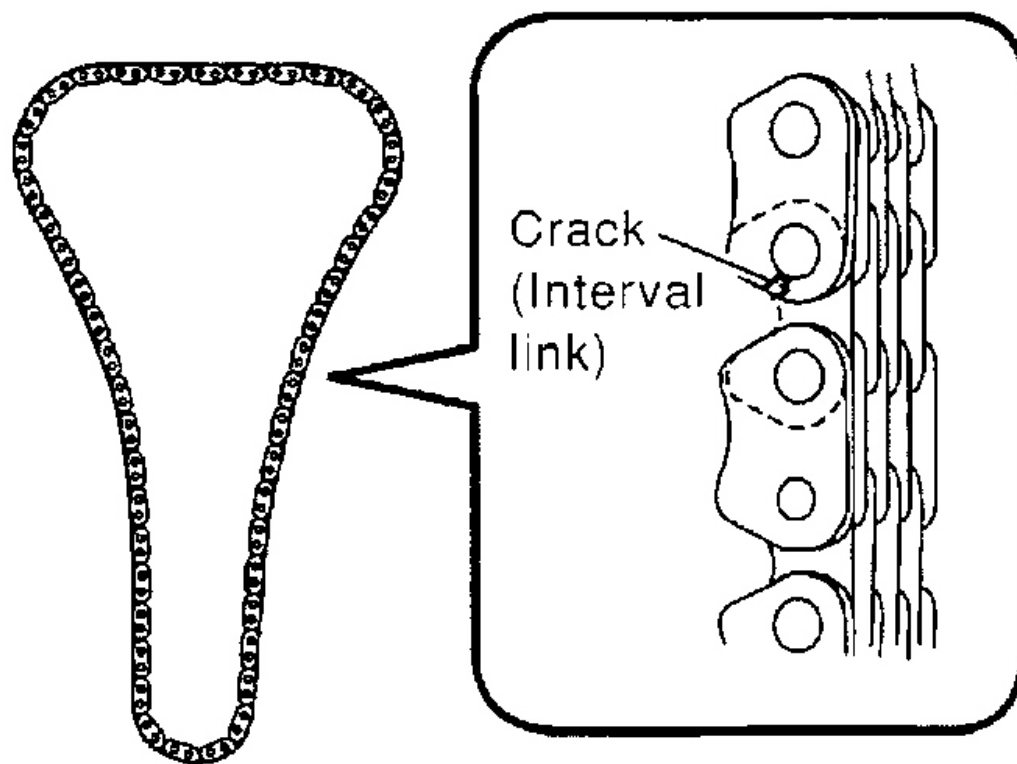


G02036632

Fig. 97: Checking Timing Chain

Courtesy of NISSAN MOTOR CO., U.S.A.

INSTALLATION

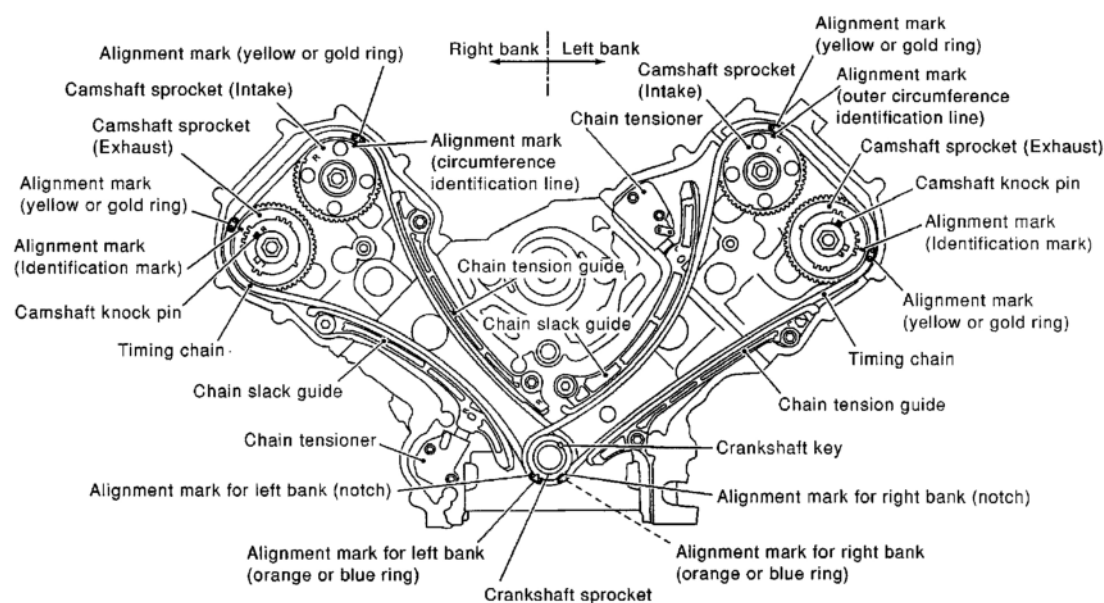

G02036633

Fig. 98: Installing Timing Chain And Associated Parts

Courtesy of NISSAN MOTOR CO., U.S.A.


NOTE:

- The above figure shows the relationship between the mating mark on each timing chain and that on the corresponding sprocket, with the components installed.
- Parts with an identification mark (R or L) should be installed on the corresponding bank according to the mark.

Parts with an identification mark:

- Intake camshaft sprocket
- Knock pin groove of exhaust camshaft sprocket (camshaft sprocket is same part both banks)
- Chain tension guide
- Chain slack guide
- Because of parallel manufacture, there are two types of mark (link colors) for timing chain.
- To install timing chain and associated parts, start with those on right bank. The procedure for installing parts on left bank is omitted because it is the same as that for installation on right bank.

1. Check that the crankshaft key and knock pin of each camshaft are facing in the direction indicated.

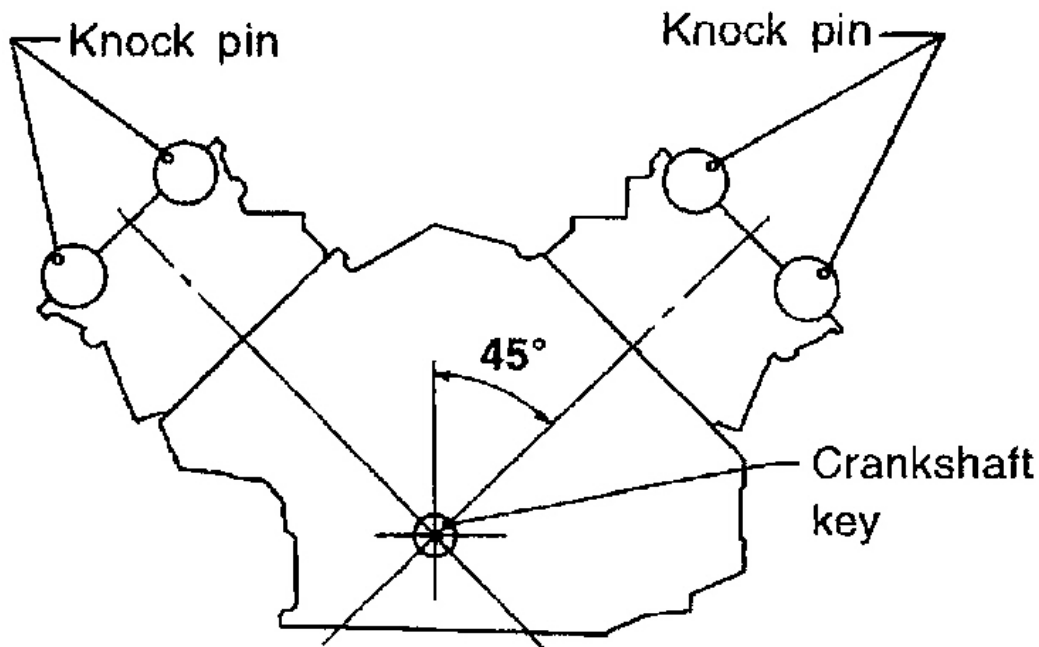

G02036634

Fig. 99: Identifying Crankshaft Key And Knock Pin
Courtesy of NISSAN MOTOR CO., U.S.A.

2. Install camshaft sprockets.

- Install onto correct side by checking with identification mark on surface
- Install exhaust-side camshaft sprocket by selectively using the groove of knock pin according to the bank. (Common part used for both banks.)
- Lock the hexagonal part of camshaft in the same way as for removal, and tighten fixing bolts.

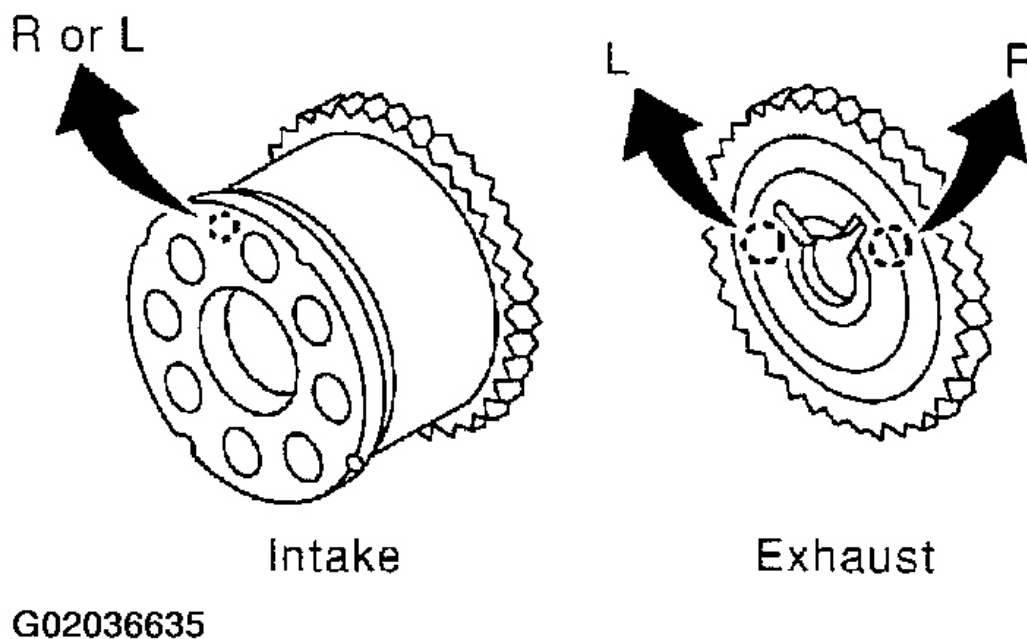


Fig. 100: Identifying Camshaft Sprockets
Courtesy of NISSAN MOTOR CO., U.S.A.

3. Install crankshaft sprockets for both banks.
 - Install each crankshaft sprocket so that its flange side (the larger diameter side without teeth) faces in the direction shown in figure.

NOTE: The same parts are used but facing directions are different.


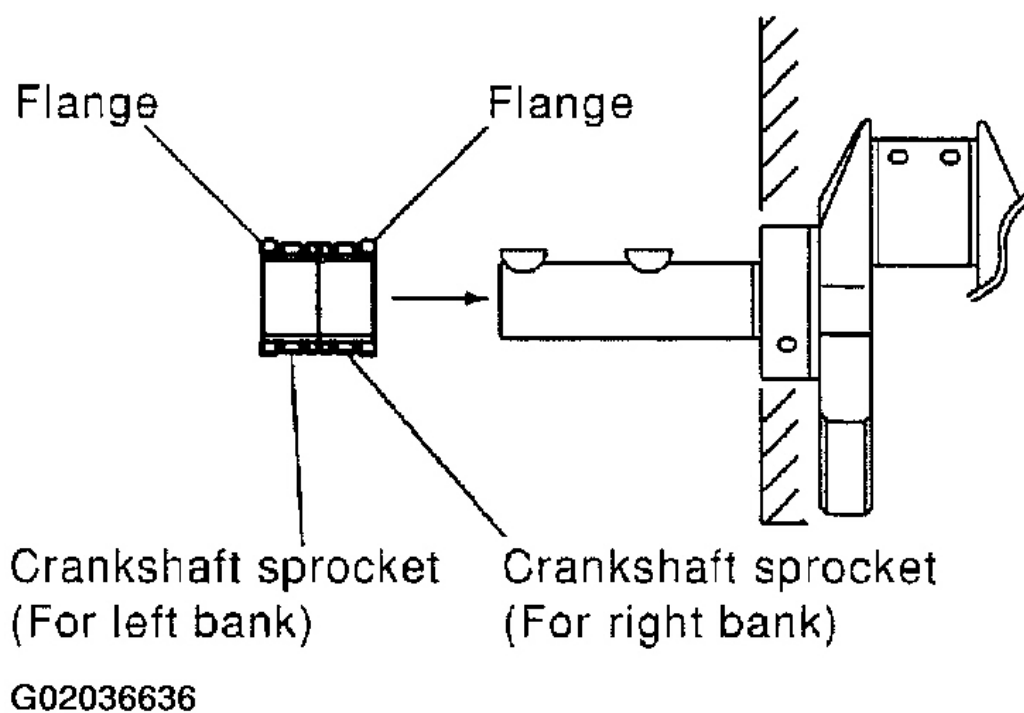


Fig. 101: Installing Crankshaft Sprockets For Both Banks
Courtesy of NISSAN MOTOR CO., U.S.A.

4. Install timing chains and associated parts.

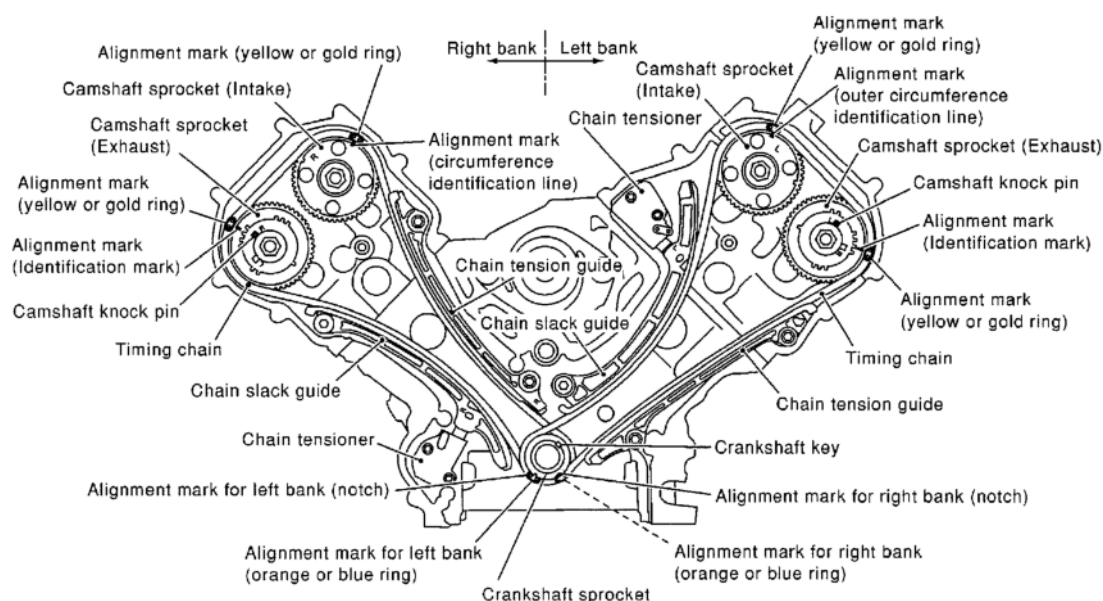

G02036637

Fig. 102: Installing Timing Chains
 Courtesy of NISSAN MOTOR CO., U.S.A.

- Align the mating mark on each sprocket and the timing chain for installation.

NOTE: Before installing chain tensioner, it is possible to change the position of mating mark on timing chain for that on each sprocket for alignment.

CAUTION: For the above reason, after the mating marks are aligned, keep them aligned by holding them with a hand.


- Install slack guides and tension guides onto correct side by checking with identification mark on surface.
- Install chain tensioner with plunger fixed as described in its removal.

CAUTION:

- Before and after the installation of chain tensioner, make sure that the mating mark on timing chain is not out of alignment.
- After installing chain tensioner, remove the stopper pin to release tensioner. Check that tensioner is released.
- To avoid chain-link skipping of timing chain, never move crankshaft or camshafts until front cover is installed.

5. The same way as for right bank, install timing chain and associated parts on left side.


6. Install oil pump.
7. Install oil pump drive spacer as follows:
 - a. Insert oil pump drive spacer according to the directions of crankshaft key and the two flat surfaces of oil pump inner rotor.
 - If the positional relationship does not allow the insertion, rotate oil pump inner rotor with a finger to allow the spacer.
 - b. After confirming that the position of each part is in correct condition to allow for the spacer, force fit the spacer by lightly tapping with a plastic hammer until it contacts and does not go further.

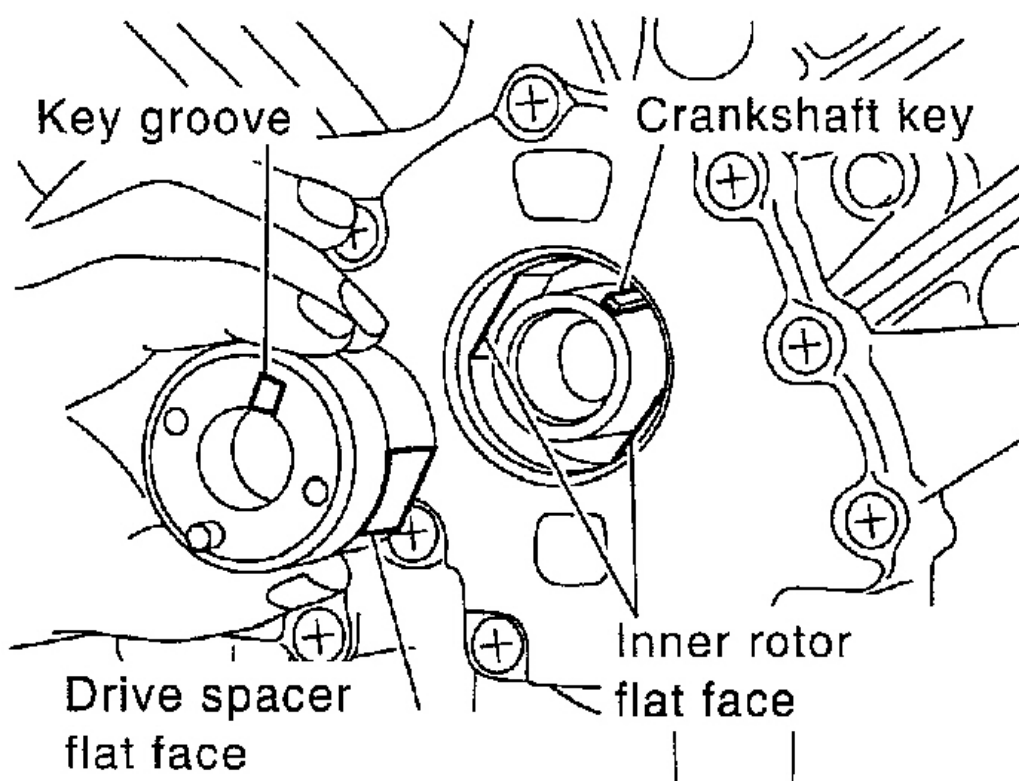

G02036638

Fig. 103: Installing Oil Pump
Courtesy of NISSAN MOTOR CO., U.S.A.

8. Install front oil seal onto front cover.
 - Using oil seal drift or drift with 54 mm (2.13 in) diameter, force fit the seal until it levels with the front end surface of front cover.

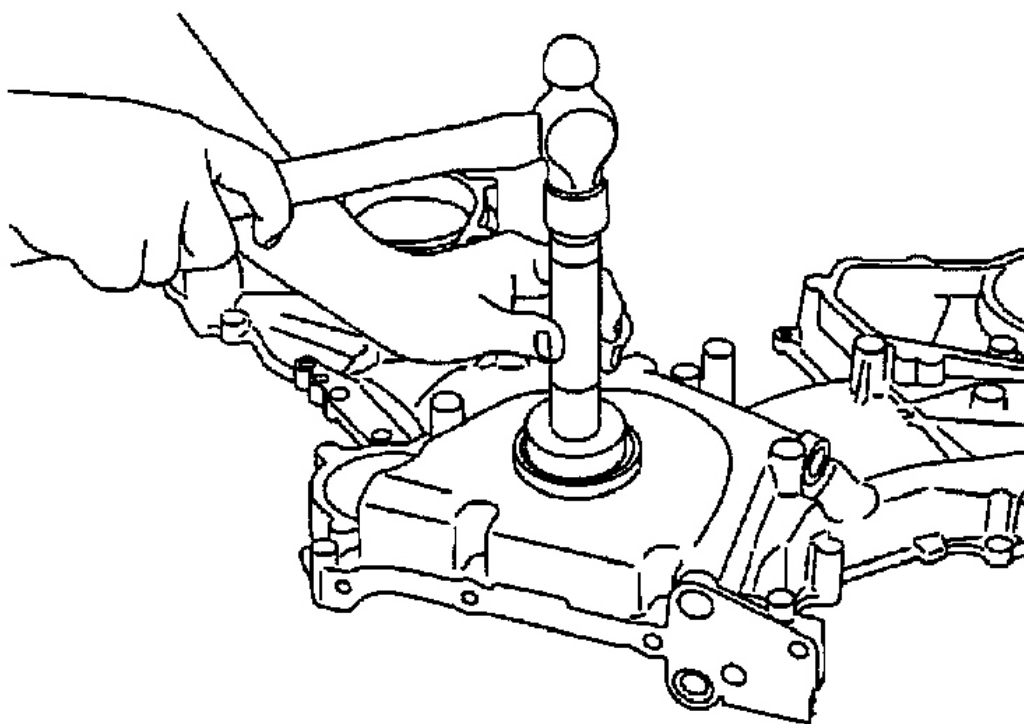


G02036639

Fig. 104: Installing Front Oil Seal Onto Front Cover
Courtesy of NISSAN MOTOR CO., U.S.A.

- Install new oil seal in the direction shown in the figure.

CAUTION: Be careful not to scratch or make burrs on circumference of oil seal.

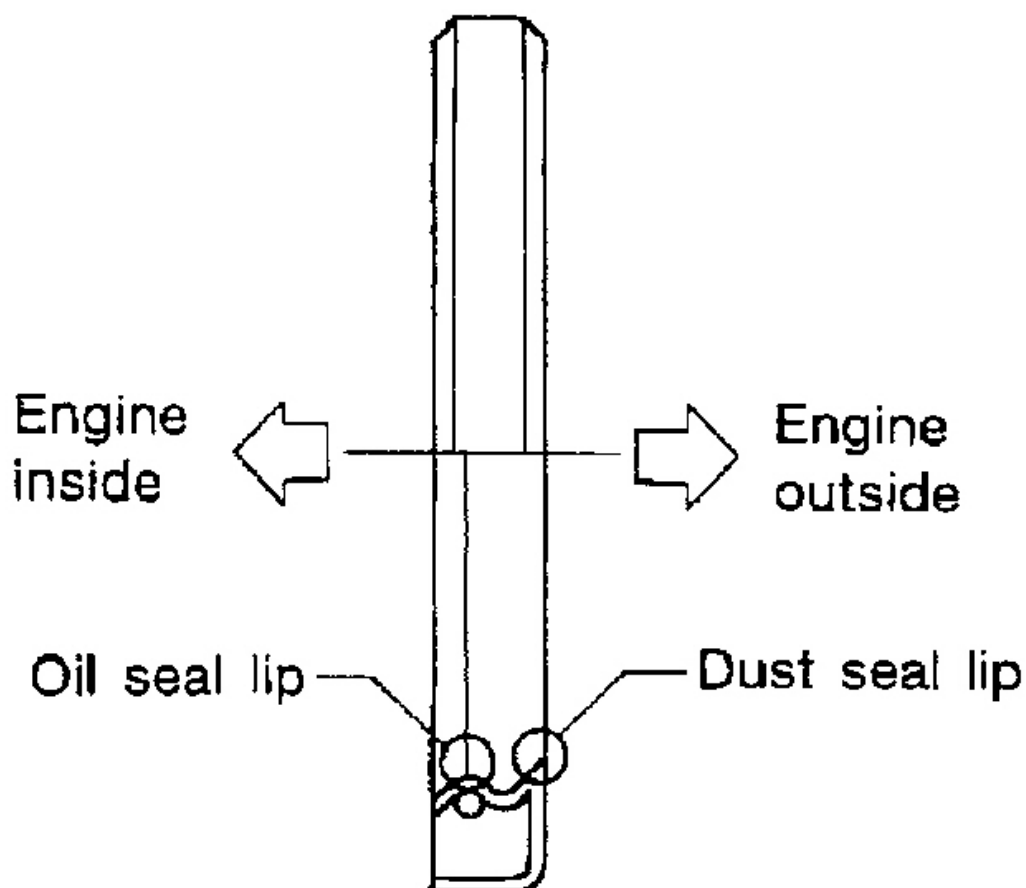


G02036640

Fig. 105: Installing Oil Seal

Courtesy of NISSAN MOTOR CO., U.S.A.


9. Install tensioner cover onto front cover.
 - Apply liquid gasket as shown in the figure.
 - Use **Genuine Ultra Grey RTV Silicone Sealant Part No. 999MP-AM003P or equivalent** .

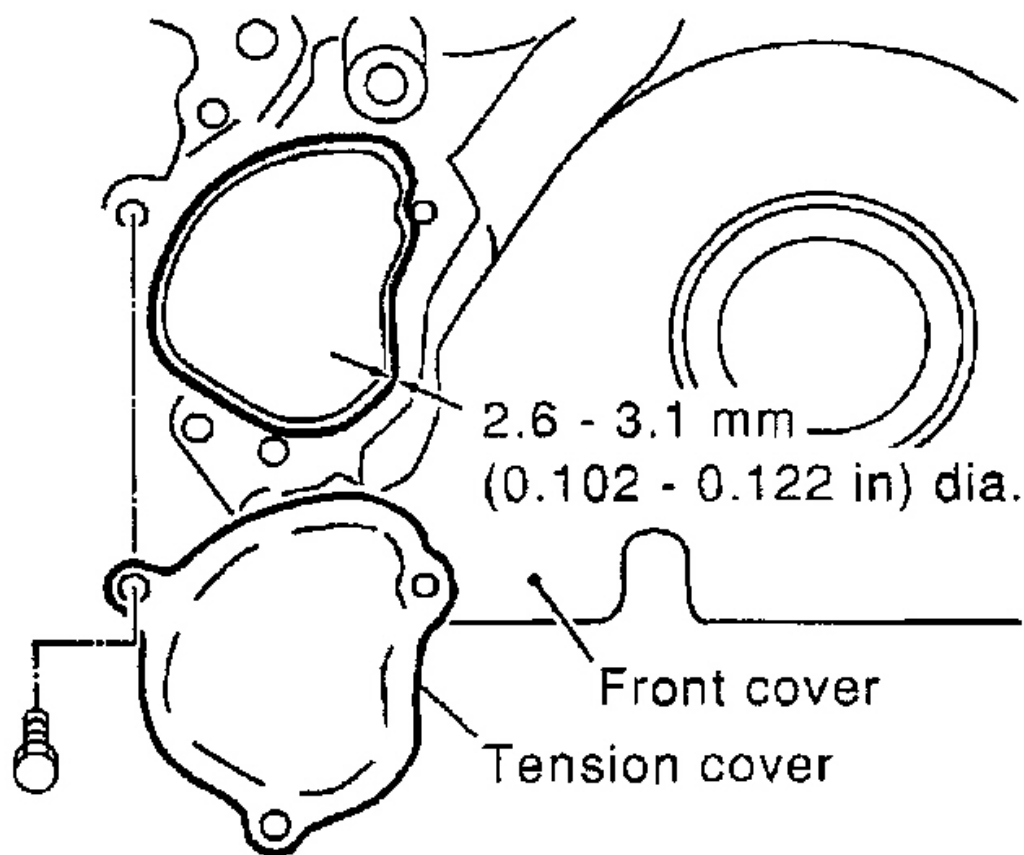

G02036641

Fig. 106: Applying Liquid Gasket
Courtesy of NISSAN MOTOR CO., U.S.A.

10. Install front cover as follows:
 - a. Install O-rings onto RH and LH cylinder heads and cylinder block.

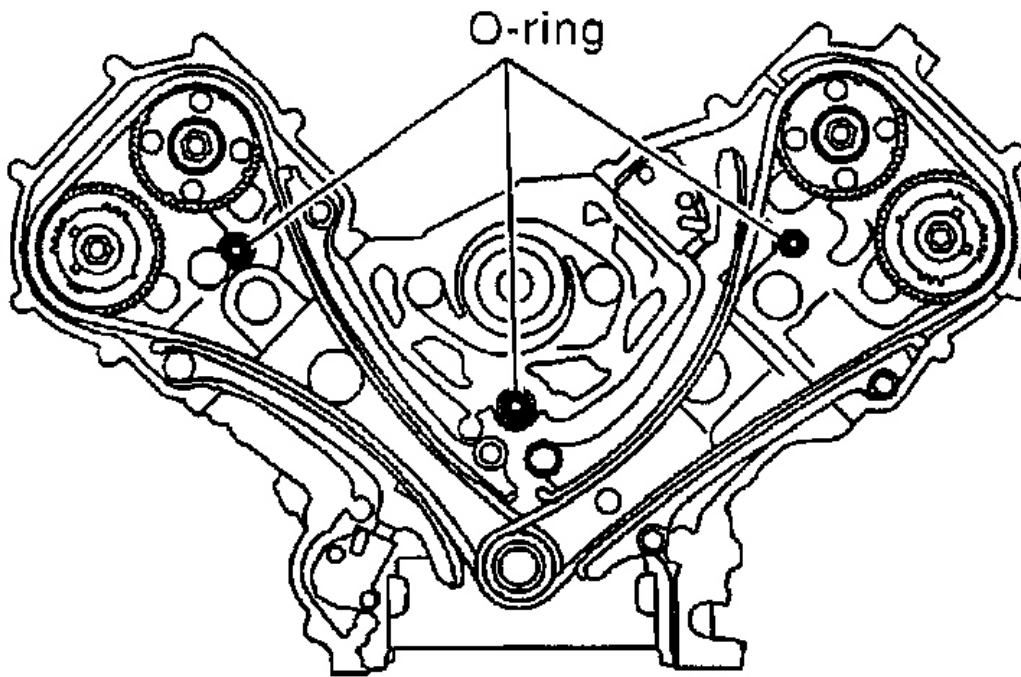


G02036642

Fig. 107: Installing Front Cover

Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Apply liquid gasket as shown in the figure.
 - **Use Genuine Ultra Grey RTV Silicone Sealant Part No. 999MP-AM003P or equivalent .**
- c. Check again that the timing mating mark on timing chain and that on each sprocket are aligned. Then, install front cover.

CAUTION: Be careful to avoid interference with the front end of oil pump drive spacer. Such interference may damage front oil seal.

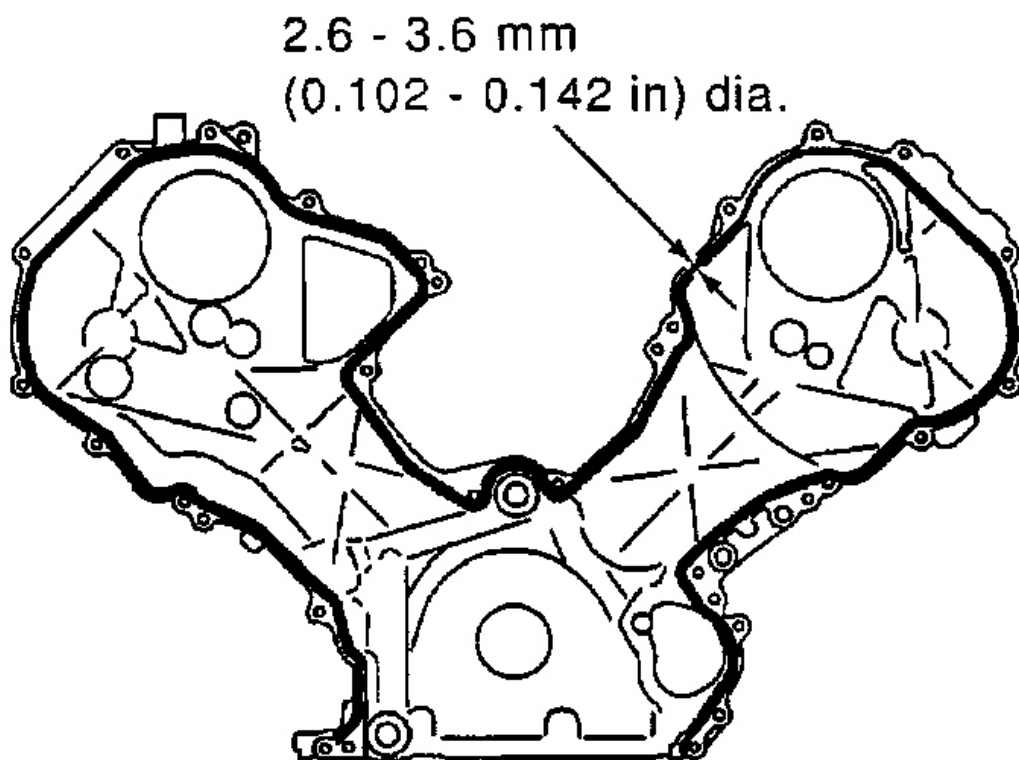


G02036643

Fig. 108: Applying Liquid Gasket

Courtesy of NISSAN MOTOR CO., U.S.A.


- d. Tighten fixing bolts in the order shown in figure.
- e. After tightening, re-tighten to the specified torque.

CAUTION: Be sure to wipe off any excessive liquid gasket leaking onto surface mating with oil pan.

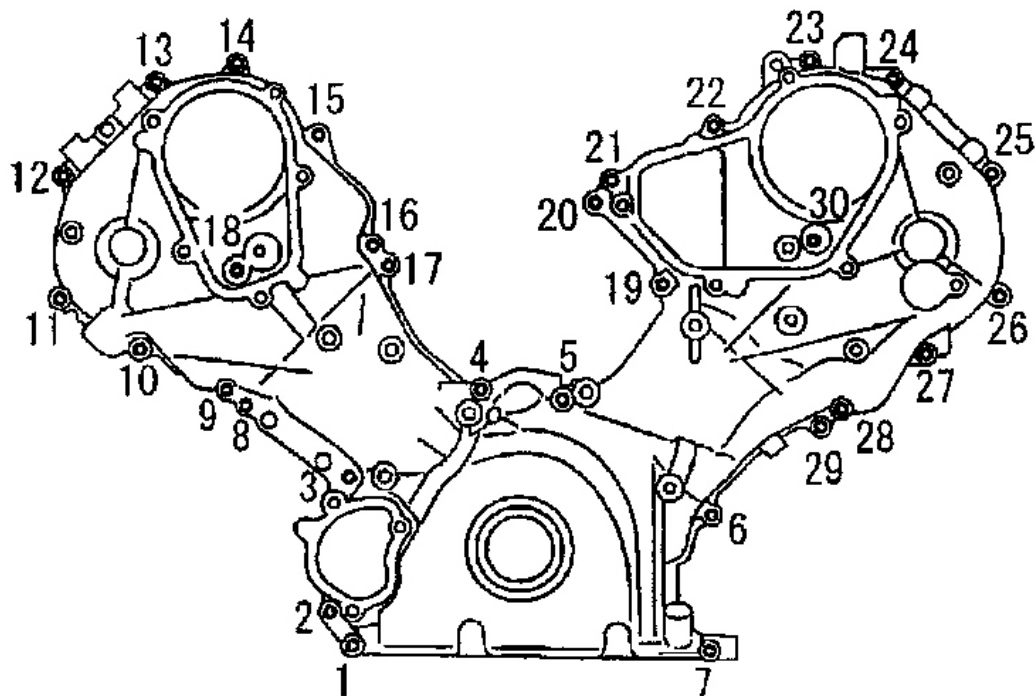

G02036644

Fig. 109: Tightening Fixing Bolts In Sequence (1 Of 2)
Courtesy of NISSAN MOTOR CO., U.S.A.

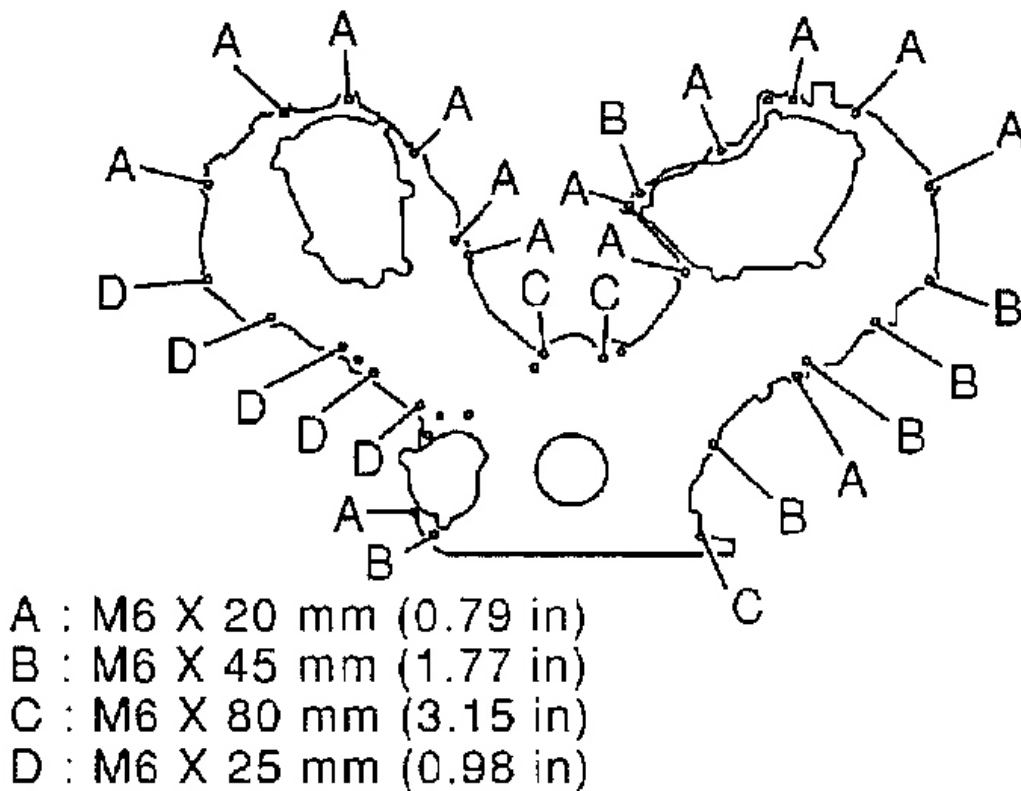

G02036645

Fig. 110: Tightening Fixing Bolts In Sequence (2 Of 2)

Courtesy of NISSAN MOTOR CO., U.S.A.

11. Install intake valve timing control cover as follows:

- a. At the back of intake valve timing control cover, install seal rings (three for each) to the area to be inserted into intake camshaft sprocket.

CAUTION: Do not spread seal ring excessively to avoid breaks and deformation.

- b. On the side of front cover, install O-ring (one for each bank).
- c. Apply liquid gasket as shown in the figure.
 - Use Genuine Ultra Grey RTV Silicone Sealant Part No. 999MP-AM003P or equivalent .


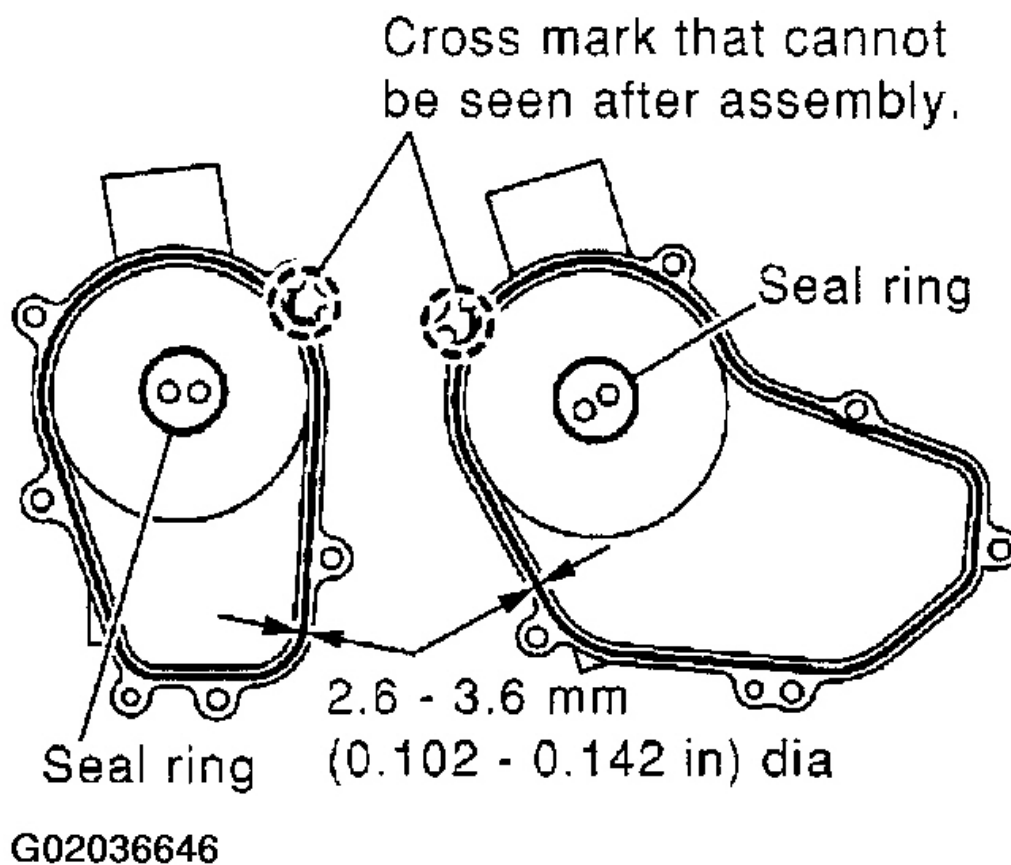


Fig. 111: Applying Liquid Gasket
Courtesy of NISSAN MOTOR CO., U.S.A.

- d. Tighten fixing bolts in the order shown in figure.

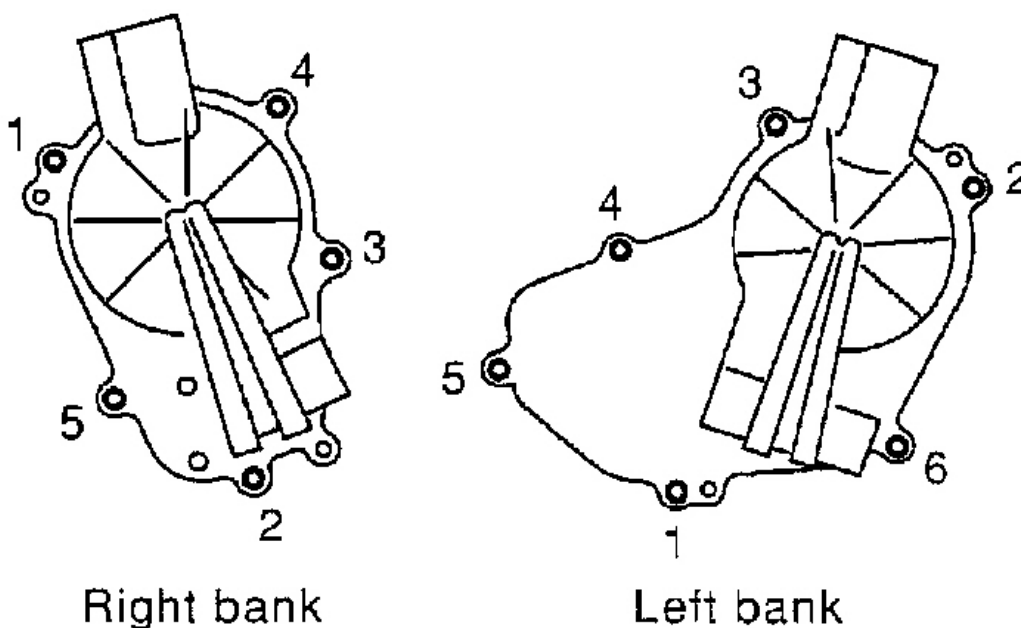

G02036647

Fig. 112: Tightening Fixing Bolts In Sequence

Courtesy of NISSAN MOTOR CO., U.S.A.


12. Install intake valve timing control position sensor, intake valve timing control solenoid valve, camshaft position sensor (PHASE) to intake valve timing control cover and front cover.
 - Be sure to tighten bolts with flanges completely seated.
13. Install crankshaft pulley.
 - Install according to the dowel pin of oil pump drive spacer.
 - Lightly tapping its center with plastic hammer, insert pulley.

CAUTION: Do not tap pulley on the side surface where belt is installed (outer circumference).

14. Tighten fixing bolts of crankshaft pulley.
 - Lock crankshaft with a hammer handle or similar tool to tighten fixing bolts.
 - Perform the following steps for angular tightening:
 - a. Apply engine oil onto threaded parts of bolts and seating areas.
 - b. Tighten bolt 88.2 to 98.0 N.m (9.0 to 9.9 kg-m, 65 to 72 ft-lb).
 - c. Select one most visible notch of the four on bolt flange. Corresponding to the selected notch, put a

mating mark (such as paint) on crankshaft pulley.

- d. Tighten further by 90° to 96° [target: 90°].
 - Check the tightening angle by referencing to the notches. The angle between two notches is 90° .

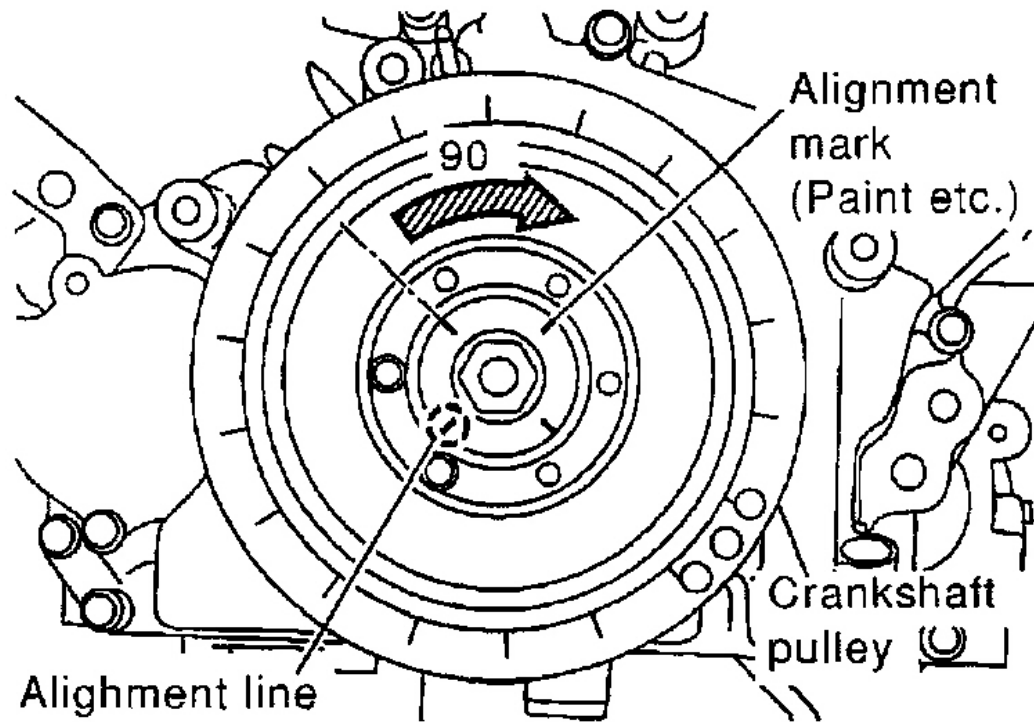

G02036648

Fig. 113: Checking Tightening Angle
Courtesy of NISSAN MOTOR CO., U.S.A.

15. Rotate crankshaft pulley in normal direction (clockwise when viewed from FRONT) to check for interference among parts.
16. For the following operations, perform steps in the reverse order of removal.

CYLINDER HEAD

ON-VEHICLE SERVICE

CHECKING COMPRESSION PRESSURE


1. Remove engine cover (with power tool), air cleaner cover and battery cover. Refer to ENGINE ROOM

COVER , **"REMOVAL AND INSTALLATION"**.

2. Warm up engine thoroughly. Then, stop it.
3. Release fuel pressure. Refer to **FUEL PRESSURE RELEASE** .
4. Remove ignition coil and spark plug from each cylinder.

Refer to IGNITION COIL , **"REMOVAL AND INSTALLATION"** and SPARK PLUG , **"REMOVAL AND INSTALLATION"**.

5. Connect engine tachometer (not required in use of CONSULT-II).
6. Install compression tester with adapter onto spark plug hole.
 - Use compression gauge adapter which is required on No.7 and No.8 cylinders.

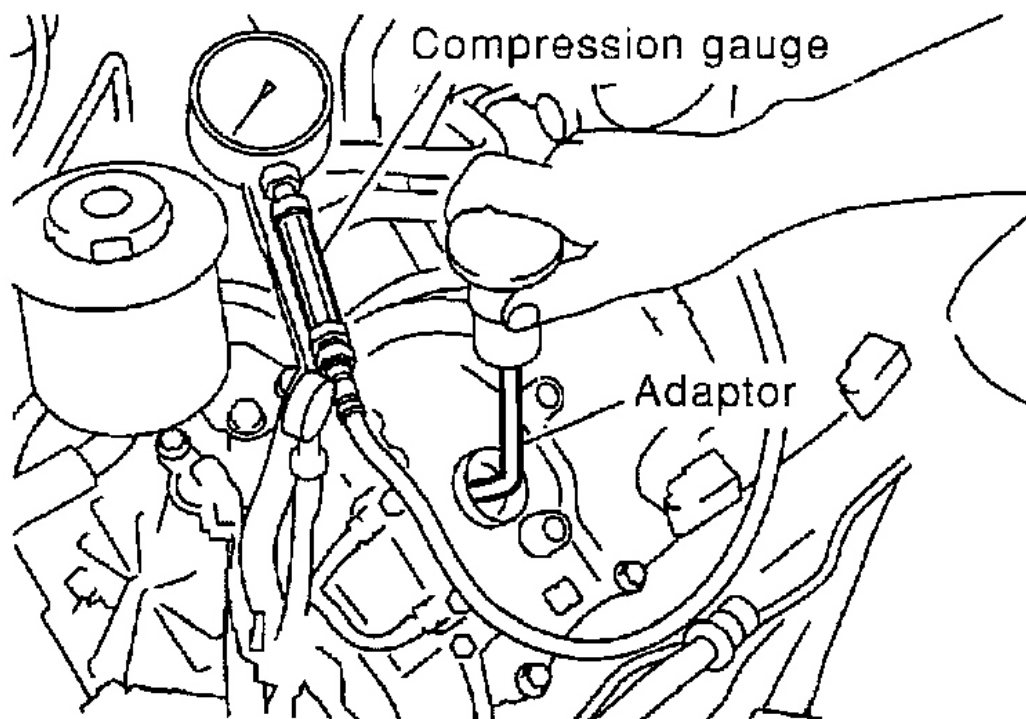

G02036649

Fig. 114: Installing Compression Tester With Adapter Onto Spark Plug Hole
Courtesy of NISSAN MOTOR CO., U.S.A.

- Use compression gauge whose picking up end inserted to spark plug hole is smaller than 20 mm (0.79 in) in diameter. Otherwise, it may be caught by cylinder head during removal.
7. With accelerator pedal fully depressed, turn ignition switch to "START" for cranking. When the gauge pointer stabilizes, read the compression pressure and engine RPM. Perform these steps to check each

cylinder.

Unit: kPa (kg/cm ² , psi) /rpm		
Standard	Minimum	Deference limit between cylinders
1,320 (13.5, 191) / 300	1,130 (11.5, 164) / 300	98 (1.03, 14) / 300

G02036650

Fig. 115: Compression Pressure And Engine RPM Table
Courtesy of NISSAN MOTOR CO., U.S.A.



20 mm (0.79 in) dia.

Use compressor tester whose end (rubber portion) is less than 20 mm (0.79 in) dia. Otherwise, it may be caught by cylinder head during removal.

G02036651

Fig. 116: Identifying Compression Gauge
Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION: Always use a fully charged battery to obtain specified engine speed.

- If the engine speed is out of specified range, check battery liquid for proper gravity. Check engine


- If compression pressure is below minimum value, check valve clearances and parts associated with combustion chamber (Valve, valve seat, piston, piston ring, cylinder bore, cylinder head, cylinder head gasket). After the checking, measure compression pressure again.
- If some cylinders have low compression pressure, pour small amount of engine oil into the spark plug hole of the cylinder to re-check it for compression.
 - If the added engine oil improves the compression, the piston rings may be worn out or damaged. Check the piston rings and replace if necessary.
 - If the compression pressure remains at low level despite the addition of engine oil, the valves may be malfunctioning. Check the valves for damage. Replace the valve or valve seat accordingly.
- If two adjacent cylinders have respectively low compression pressure and their compression remains low even after the addition of engine oil, the gaskets are leaking. In such a case, replace the cylinder head gaskets.

REMOVAL AND INSTALLATION



1. Remove engine assembly from vehicle. Refer to, "**REMOVAL AND INSTALLATION**".
2. Remove the following components and related parts:

- Auto tensioner of drive belts and idler pulley. Refer to DRIVE BELTS , "**DRIVE BELT AUTO TENSIONER AND IDLER PULLEY**".
 - Thermostat housing and hose. Refer to **THERMOSTAT AND WATER CONTROL VALVE** .
 - Oil pan and oil strainer. Refer to OIL PAN AND OIL STRAINER , "**REMOVAL AND INSTALLATION**".
 - Intake manifold upper and intake manifold lower. Refer to INTAKE MANIFOLD , "**REMOVAL AND INSTALLATION**".
 - Fuel sub-tube, fuel pressure sensor assembly & fuel tube and fuel injector assembly. Refer to FUEL INJECTOR AND FUEL TUBE , "**REMOVAL AND INSTALLATION**".
 - Ignition coil. Refer to IGNITION COIL , "**REMOVAL AND INSTALLATION**".
 - Rocker cover. Refer to **ROCKER COVER** , "**REMOVAL AND INSTALLATION**".
 - Exhaust manifold and three way catalyst. Refer to , "**REMOVAL AND INSTALLATION**".
3. Remove crankshaft pulley, front cover, oil pump, and timing chain. Refer to **TIMING CHAIN** , "**REMOVAL AND INSTALLATION**".
 4. Remove camshaft sprockets and camshafts. Refer to CAMSHAFT , "**REMOVAL AND INSTALLATION**".
 5. Remove cylinder head loosening bolts in reverse order shown in the figure.

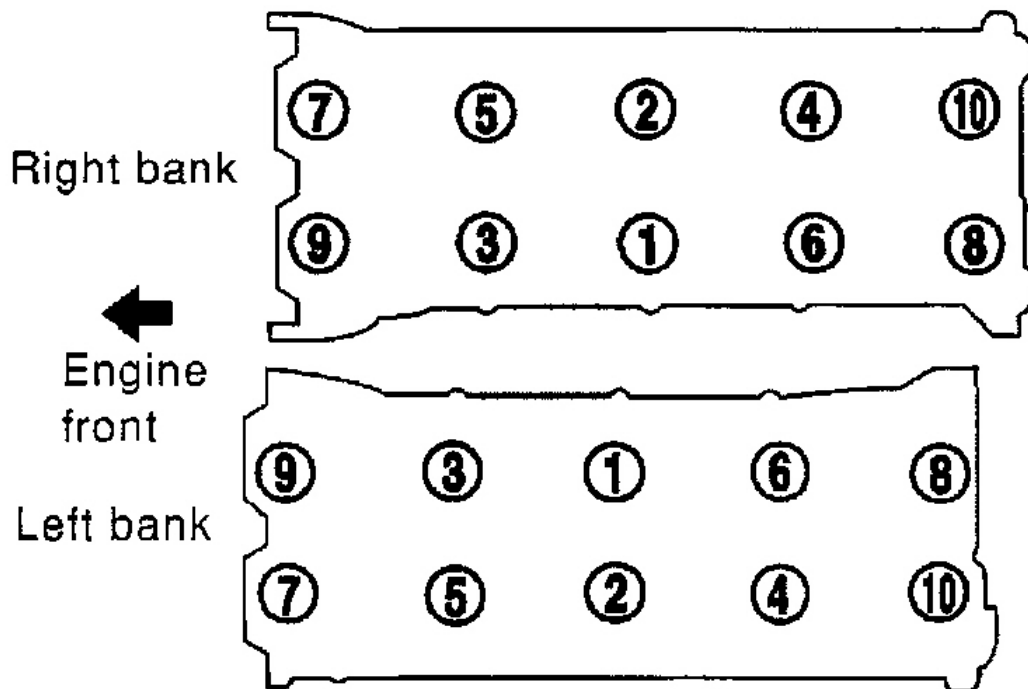

G02036653

Fig. 118: Cylinder Head Loosening Bolts In Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.


INSPECTION AFTER REMOVAL

Outer Diameter of Cylinder Head Bolts

- Cylinder head bolts are tightened by plastic zone tightening method. Whenever the size difference between d1 and d2 exceeds the limit, replace them with new one.

Limit (d1 - d2) : More than 0.18 mm (0.0071 in)

- If reduction of outer diameter appears in a position other than d2, use it as d2 point.

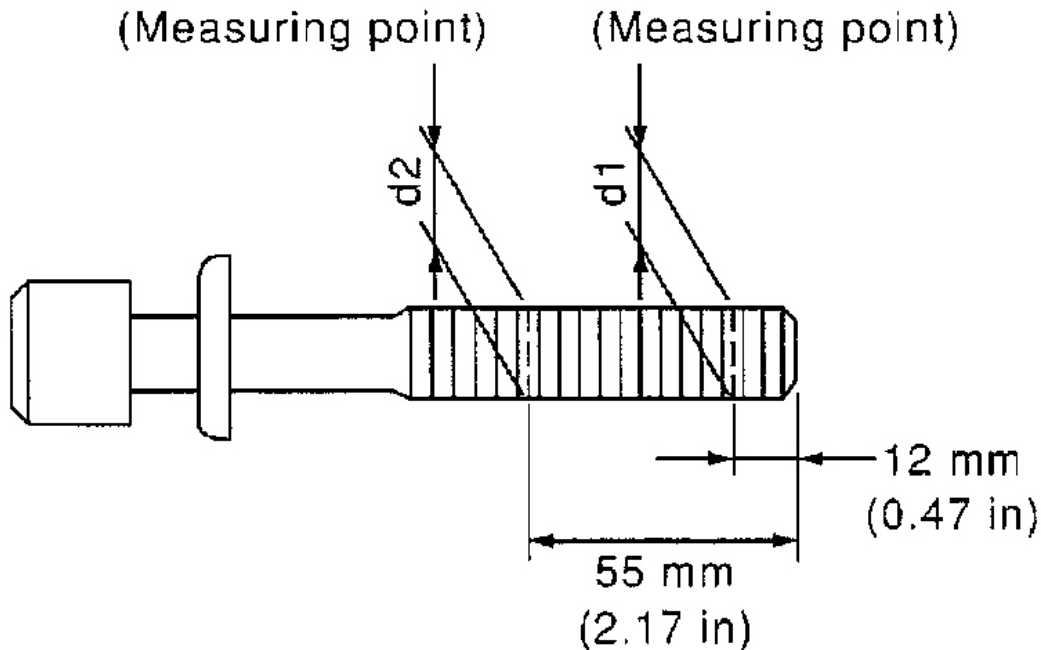

G02036654


Fig. 119: Identifying Cylinder Head Bolts Dimension
Courtesy of NISSAN MOTOR CO., U.S.A.

INSTALLATION

1. Install cylinder head gasket.
2. Follow the steps below to tighten fixing bolts in the order shown in figure to install cylinder head.

CAUTION:

- If cylinder head bolts are re-used, check their outer diameters before installation. Refer to above, "OUTER DIAMETER OF CYLINDER HEAD BOLTS".
- In step "c", loosen bolts in the reverse order of that indicated in figure 120.

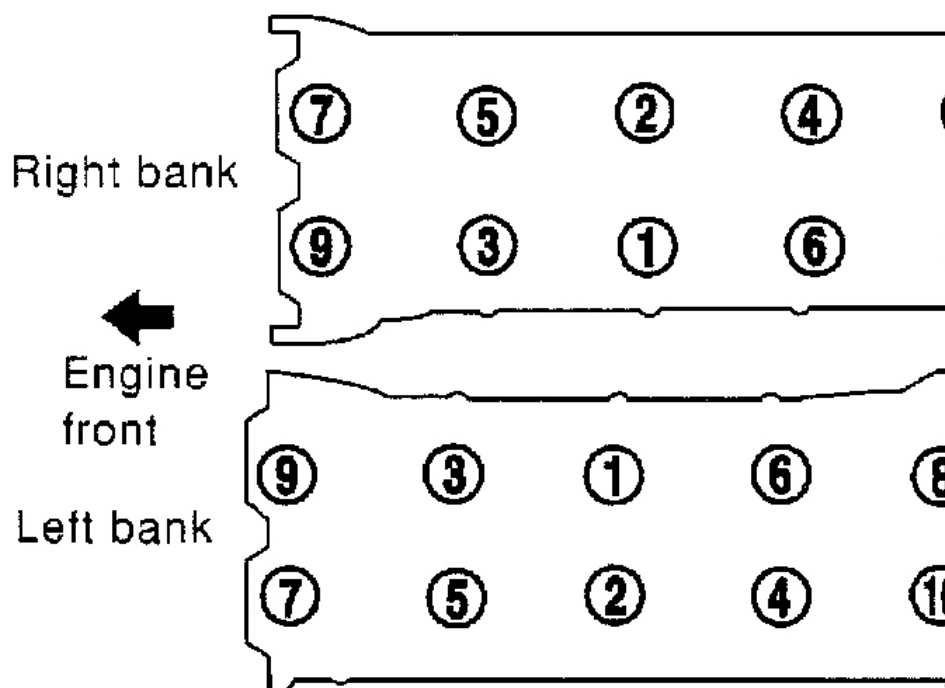

G02036655

Fig. 120: Tightening Cylinder Head Bolts In Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

- Apply engine oil to threads and seating surface of bolts.
- Tighten all bolts to 98.1 N.m (10 kg-m, 72 ft-lb).
- Completely loosen all bolts.
- Tighten all bolts to 39.2 to 49.0 N.m (4.0 to 5.0 kg-m, 29 to 36 ft-lb).
- Turn all bolts 60 to 65 (target: 60) degrees clockwise.
- Turn all bolts 60 to 65 (target: 60) degrees clockwise again.

CAUTION: Check and confirm the tightening angle by using angle wrench or protractor. Avoid judgment by visual inspection without the tool.


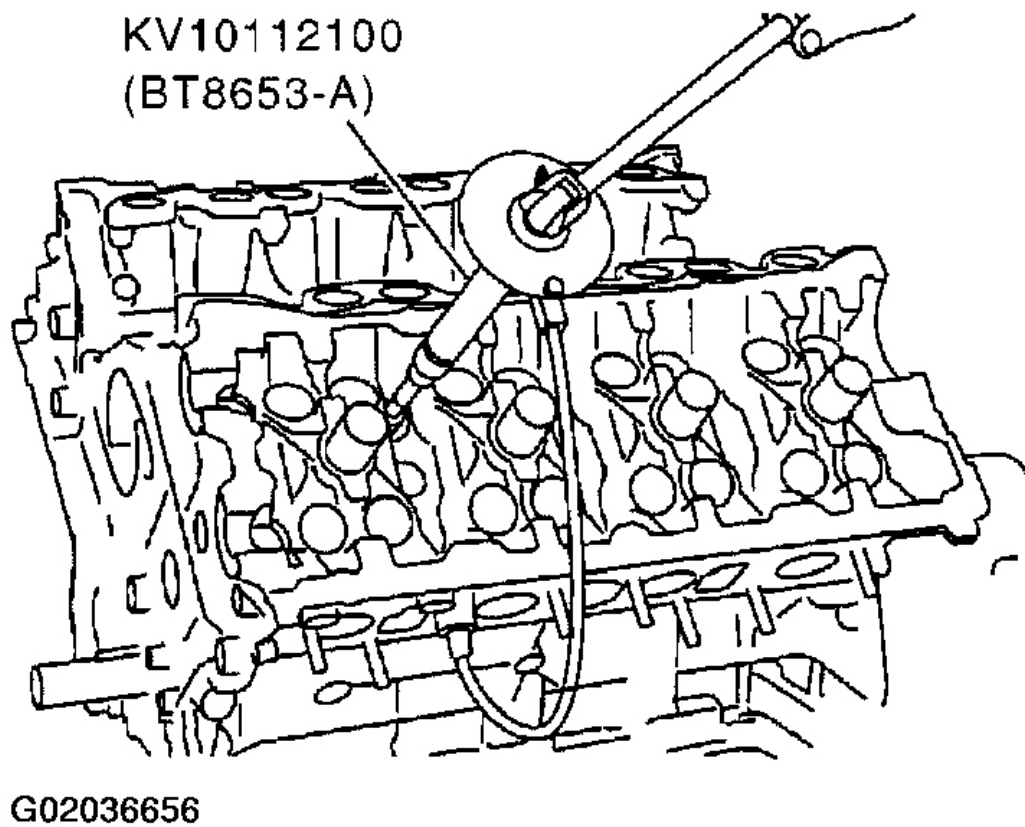


Fig. 121: Checking Tightening Angle
Courtesy of NISSAN MOTOR CO., U.S.A.

3. Install followings in reverse order of removal.

DISASSEMBLY AND ASSEMBLY

SEC. 111•130•220

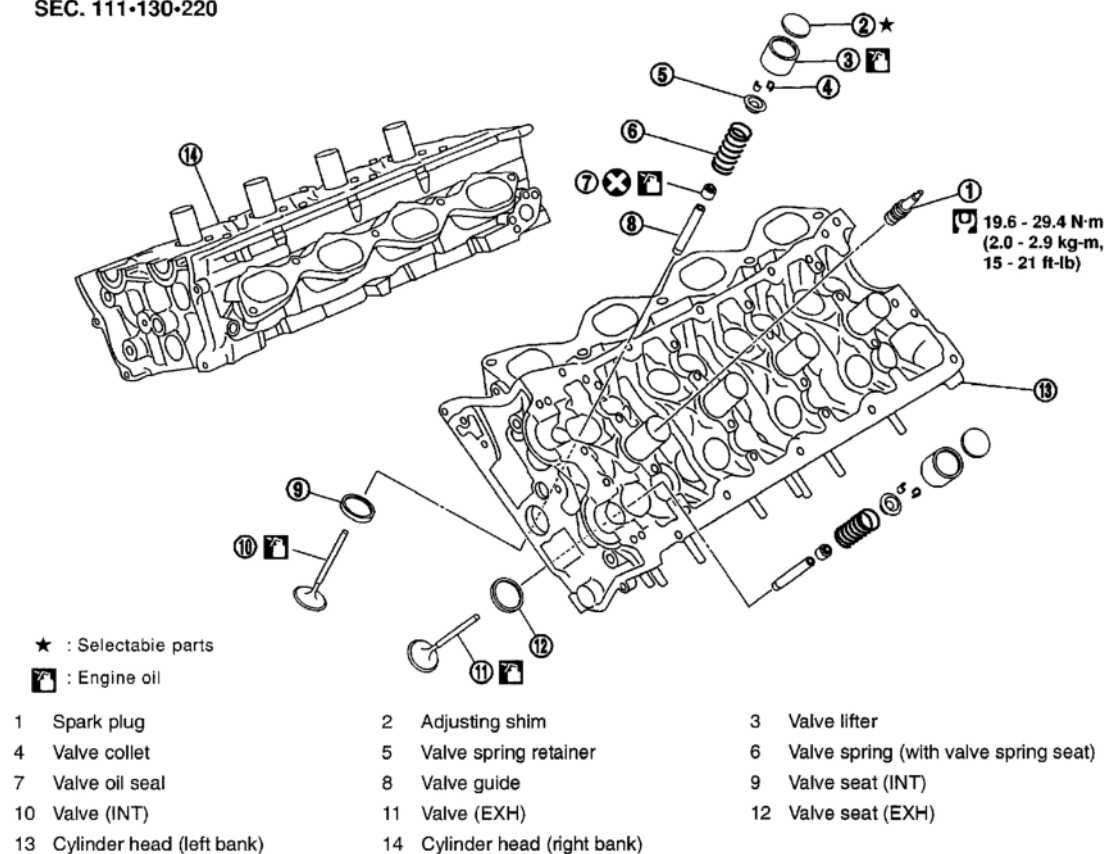

G02036657

Fig. 122: Exploded View Of Cylinder Head
 Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION:

- When installing camshafts, chain tensioners, oil seals, or other sliding parts, lubricate contacting surface with new engine oil.
- Apply new engine oil to threads and seat surface when installing cylinder head, camshaft sprocket, crankshaft pulley, and camshaft bracket.
- Attach tags to valve lifters so as not to mix them up.

DISASSEMBLY


1. Remove adjusting shim and valve lifter.
 - Confirm installation point.
2. Remove valve collet.
 - Compress valve spring with valve spring compressor.

Remove valve collet with magnet driver.

3. Remove valve spring retainer and valve spring.

CAUTION: Do not remove valve spring seat from valve spring.

4. Push valve stem to combustion chamber side, and remove valve.
 - Inspect valve guide clearance before removal. Refer to , "VALVE GUIDE CLEARANCE".
 - Confirm installation point.

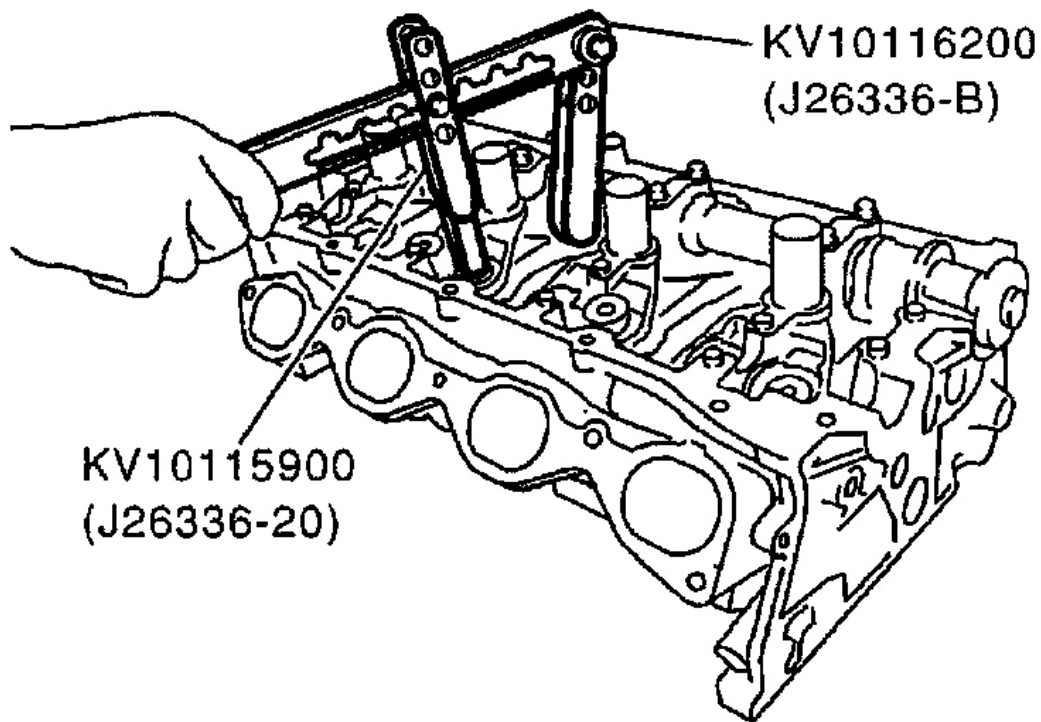

G02036658

Fig. 123: Inspecting Valve Guide Clearance
Courtesy of NISSAN MOTOR CO., U.S.A.

5. Remove valve oil seal with valve oil seal puller.
6. When valve seat must be replaced, refer to , "VALVE SEAT REPLACEMENT" to removal.
7. When valve guide must be replaced, refer to , "VALVE GUIDE REPLACEMENT" to removal.
8. Remove spark plug with spark plug wrench.


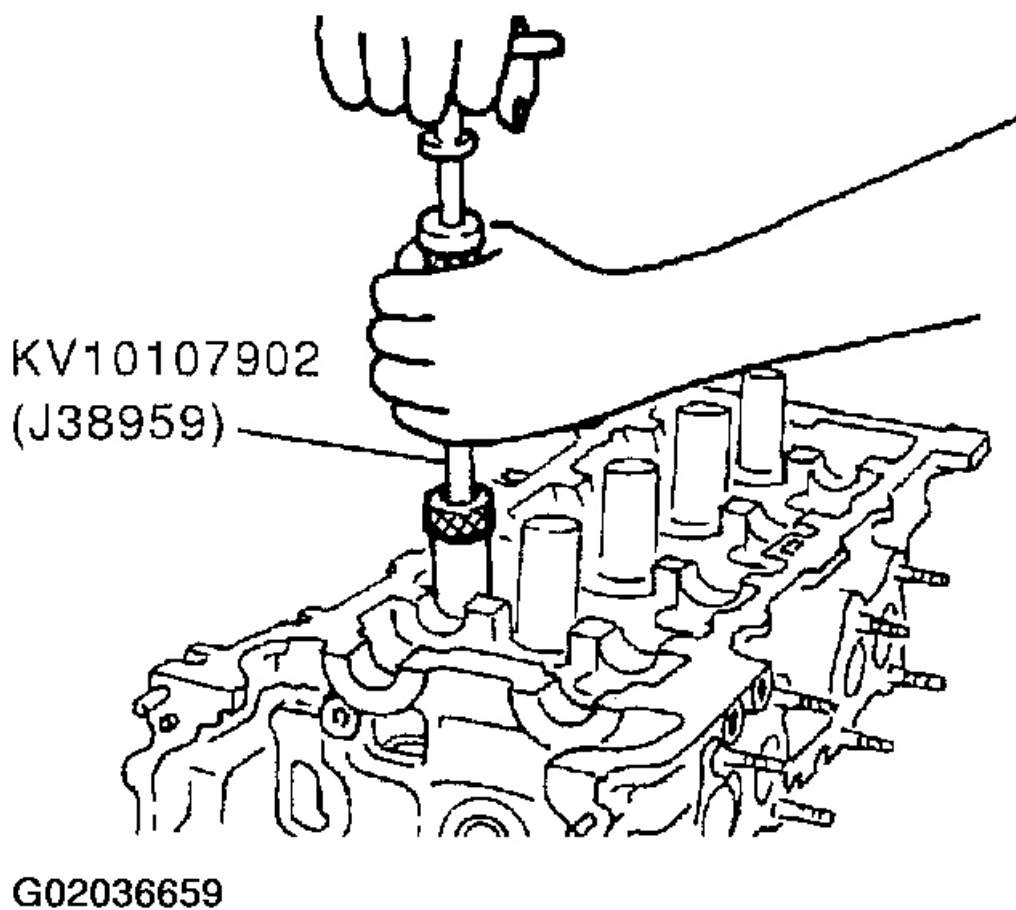


Fig. 124: Removing Spark Plug
Courtesy of NISSAN MOTOR CO., U.S.A.

ASSEMBLY

1. Install valve guide. Refer to , "VALVE GUIDE REPLACEMENT".
2. Install valve seat. Refer to , "VALVE SEAT REPLACEMENT".
3. Install valve oil seal.
 - Install with valve oil seal drift to match dimension in illustration.
4. Install valve.
 - Install larger diameter to intake side.

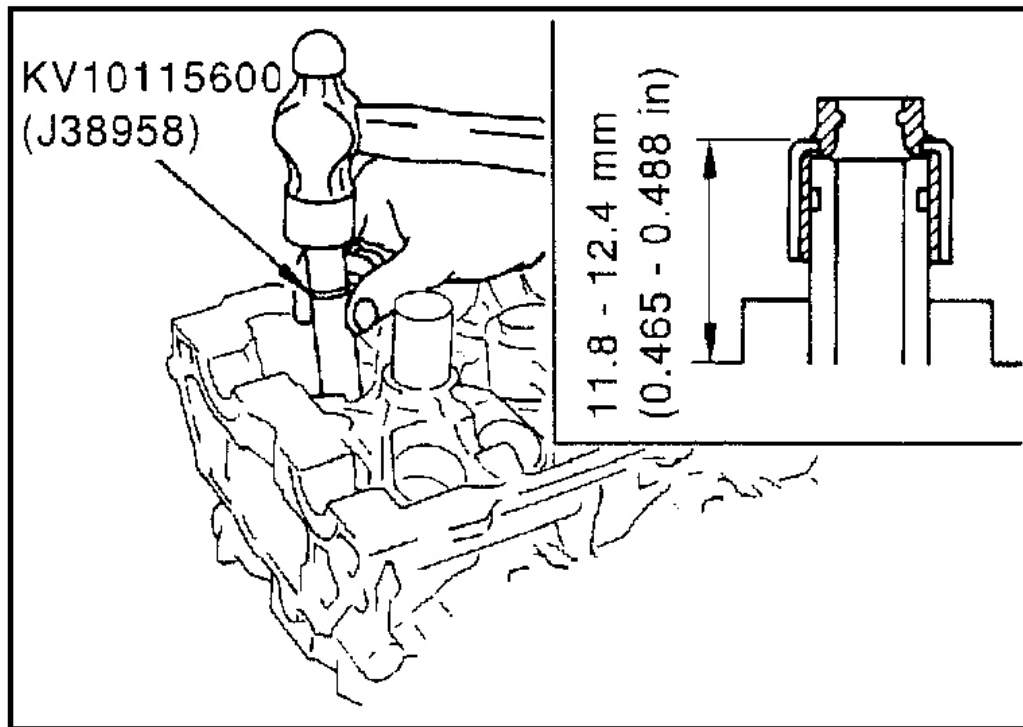

G02036660

Fig. 125: Installing Valve Oil Seal
Courtesy of NISSAN MOTOR CO., U.S.A.

5. Install valve spring.
 - Install smaller pitch (valve spring seat side) to cylinder head side.
6. Install valve spring retainer.
7. Install valve collet.
 - Compress valve spring with valve spring compressor. Install valve collet with magnet hand.
 - Tap stem edge lightly with plastic hammer after installation to check its installed condition.
8. Install valve lifter.
9. Install spark plug with spark plug wrench.

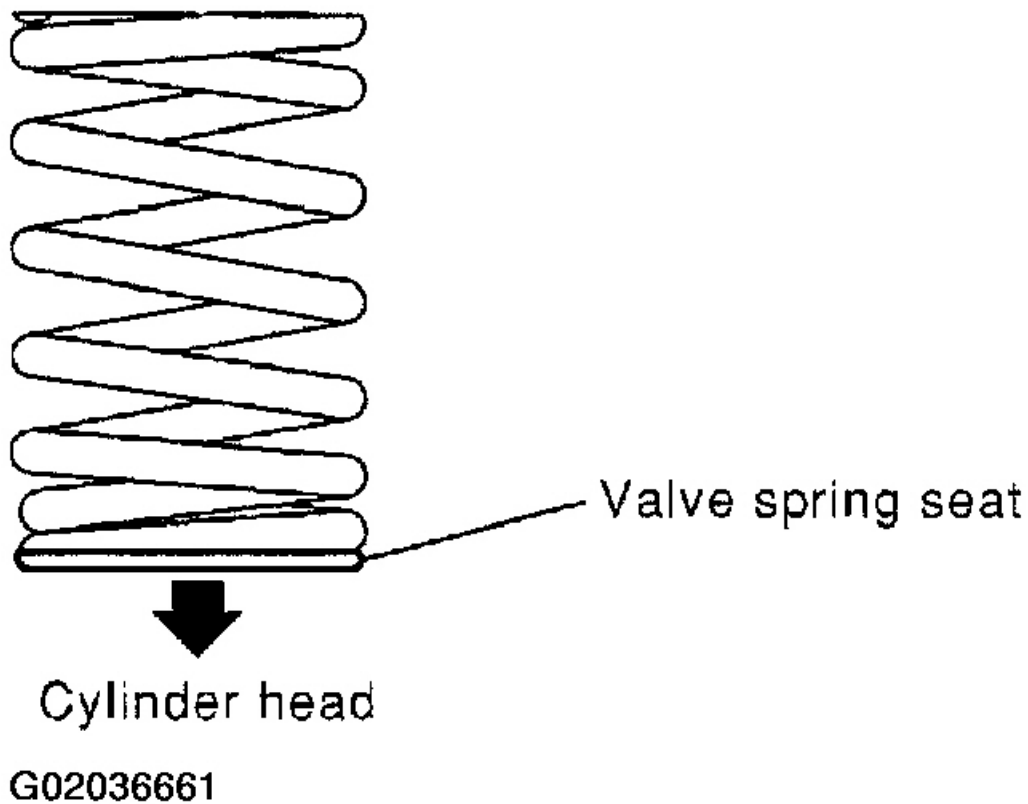


Fig. 126: Identifying Valve Spring
Courtesy of NISSAN MOTOR CO., U.S.A.

INSPECTION AFTER DISASSEMBLY

CYLINDER HEAD DISTORTION

1. Wipe off oil and remove water scale (like deposit), gasket, sealer, carbon, etc with scraper.

CAUTION: Use utmost care not to allow gasket debris to enter passages for oil or water.

2. At each of several locations on bottom surface of cylinder head, measure distortion in six directions.

Standard : 0.1mm (0.004 in)

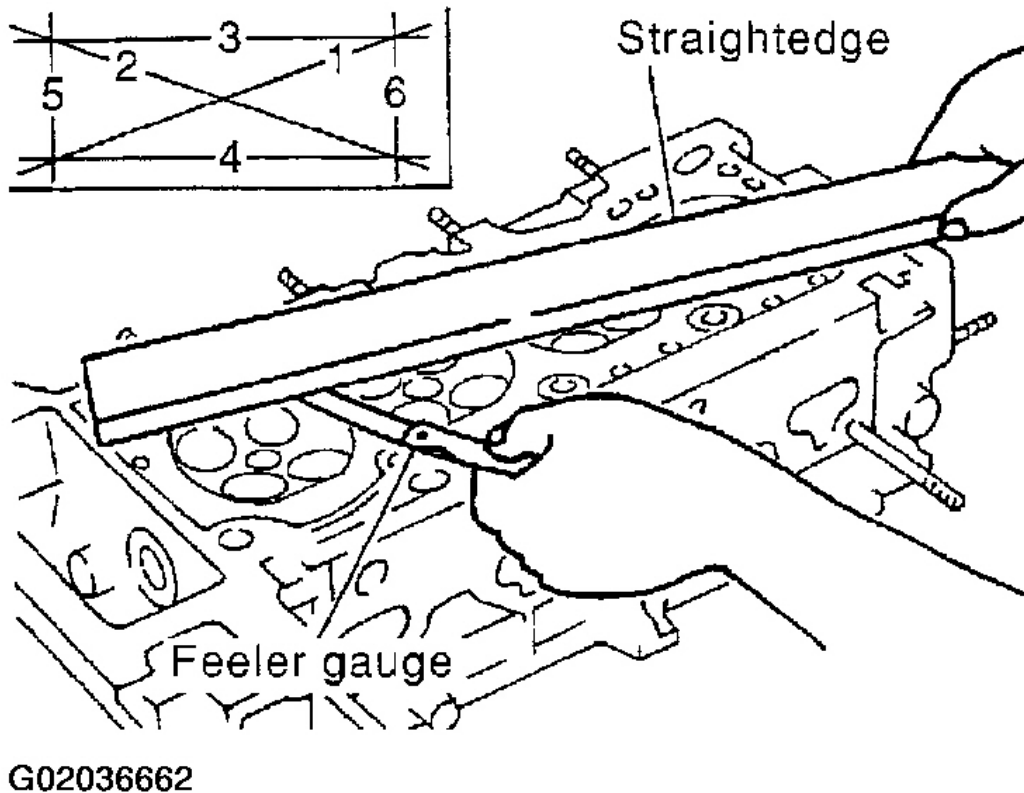


Fig. 127: Measuring Cylinder Head Distortion
 Courtesy of NISSAN MOTOR CO., U.S.A.

VALVE GUIDE CLEARANCE


Perform this inspection before removing valve guide.

1. Make sure that the valve stem diameter is within the specification.
2. Push the valve out by approx. 15 mm (0.59 in) toward the combustion chamber side to measure the valve's run-out volume (in the direction of dial gauge) with dial gauge.
3. The half of the run-out volume accounts for the valve guide clearance.

Standard

Intake : 0.020 - 0.046 mm (0.0008 - 0.0018 in)

Exhaust : 0.030 - 0.056 mm (0.0012 - 0.0022 in)

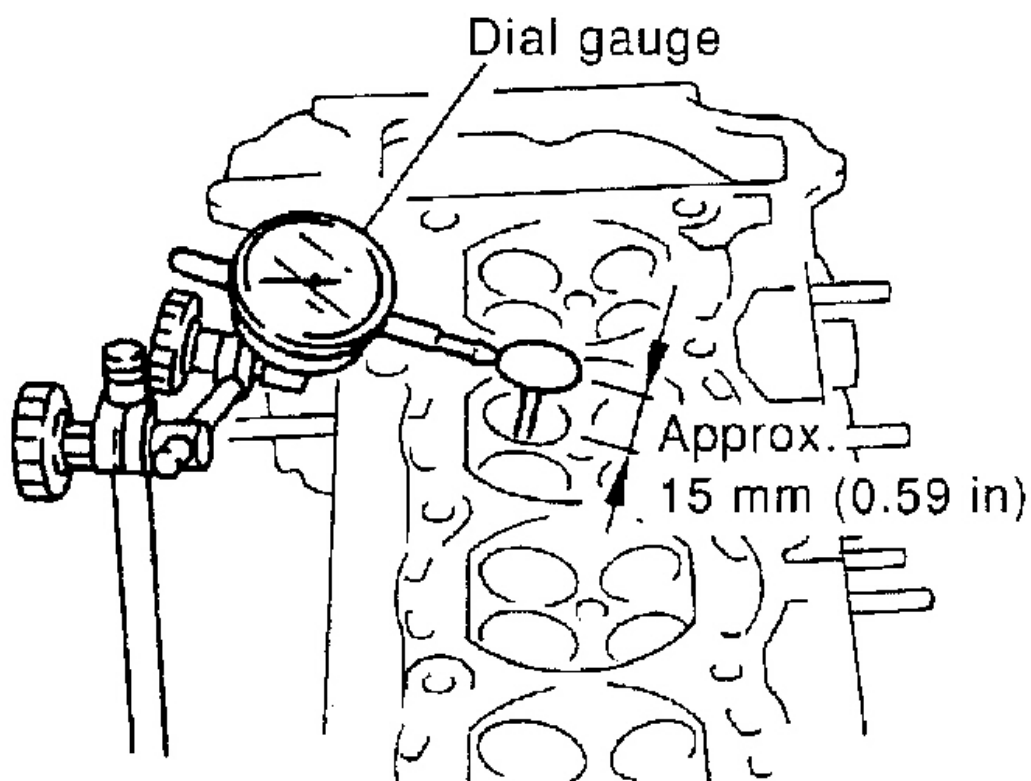


G02036663

Fig. 128: Measuring The Valve'S Run-Out Volume
Courtesy of NISSAN MOTOR CO., U.S.A.

VALVE GUIDE REPLACEMENT

When valve guide is removed, replace with oversized (0.2 mm, 0.008 in) valve guide.


1. To remove valve guide, heat cylinder head to 110 to 130°C (230 to 266°F) by soaking in heated oil.

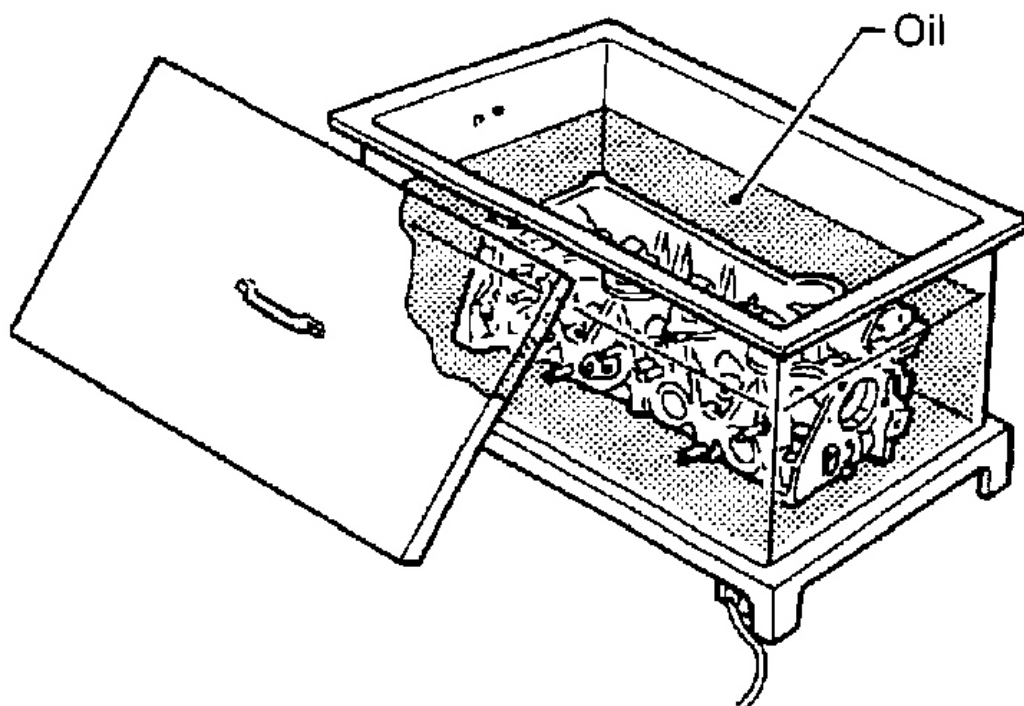

G02036664

Fig. 129: Installing Cylinder Head Into Heated Oil
Courtesy of NISSAN MOTOR CO., U.S.A.

2. Drive out valve guide with a press [under a 20 kN (2 ton, 2.2 US ton, 2.0 Imp ton) pressure] or hammer and suitable tool.

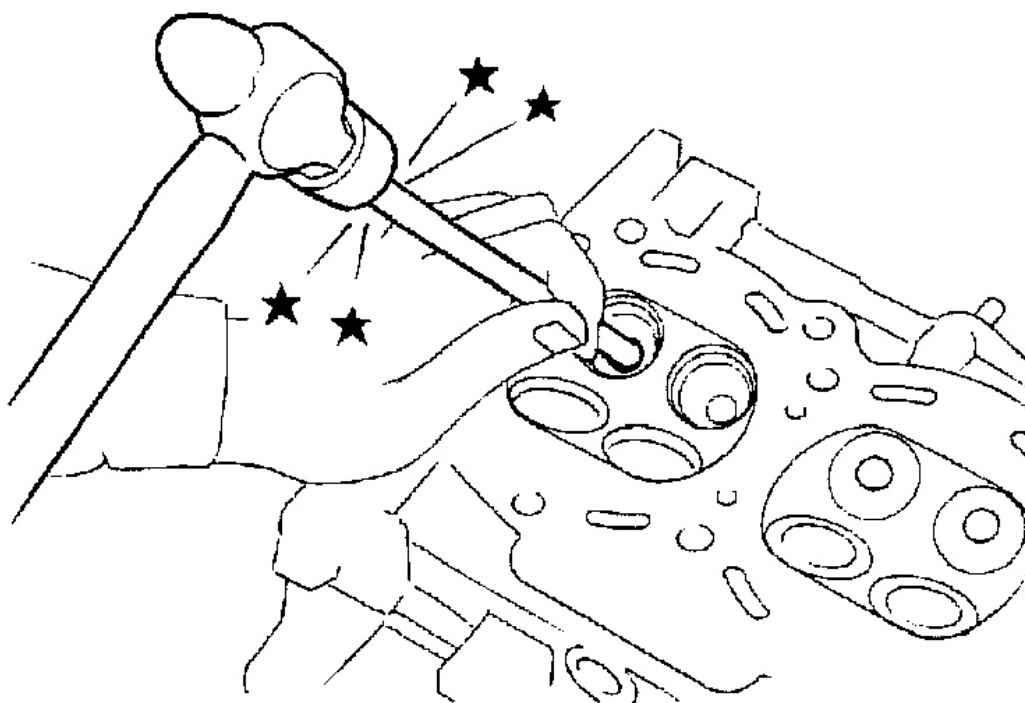

G02036665


Fig. 130: Removing Valve Guide
Courtesy of NISSAN MOTOR CO., U.S.A.

3. Ream cylinder head valve guide hole.

Valve guide hole diameter (for service parts) Intake and exhaust

: 10.175 - 10.196 mm (0.4006 - 0.4014 in)


4. Heat cylinder head to 110 to 130°C (230 to 266°F) by soaking in heated oil.

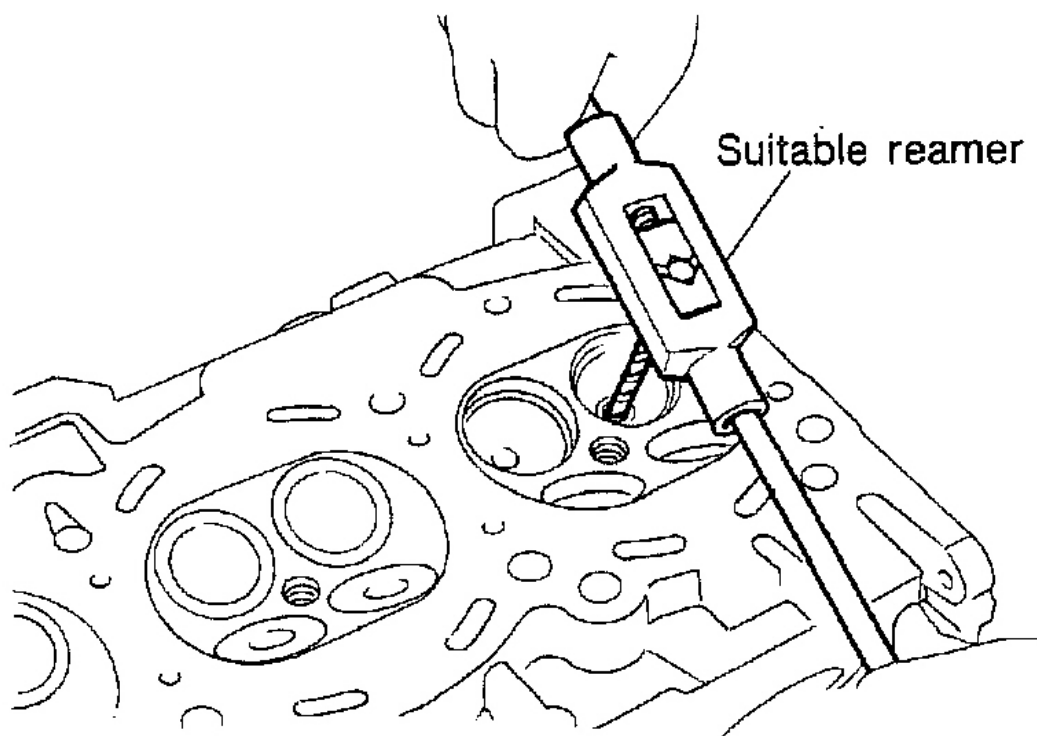

G02036666

Fig. 131: Reaming Cylinder Head Valve Guide Hole
Courtesy of NISSAN MOTOR CO., U.S.A.

5. Press valve guide from camshaft side to dimensions as in illustration.

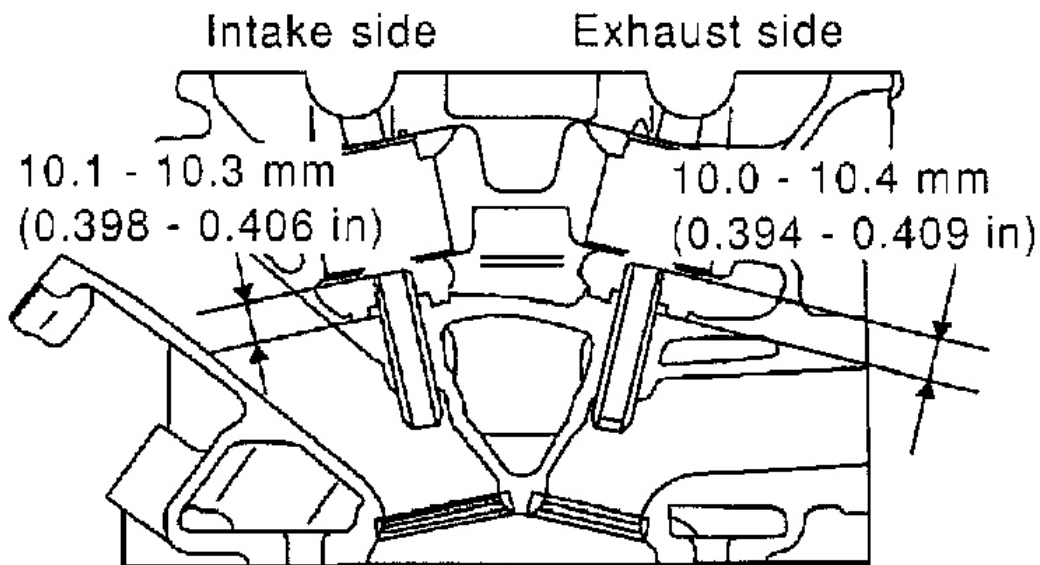


G02036667

Fig. 132: Pressing Valve Guide From Camshaft
Courtesy of NISSAN MOTOR CO., U.S.A.

6. Using valve guide reamer, apply reamer finish to valve guide.

Standard

Intake and exhaust : 6.000 - 6.018 mm (0.2362 - 0.2369 in)

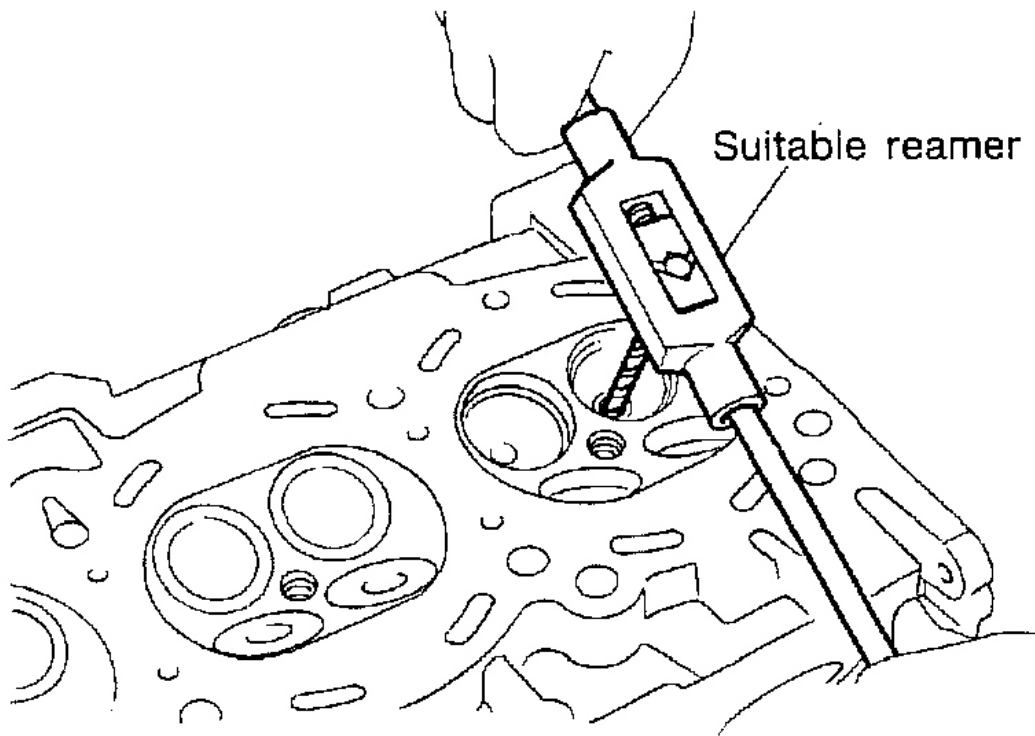

G02036668

Fig. 133: Applying Reamer Finish To Valve Guide
Courtesy of NISSAN MOTOR CO., U.S.A.

VALVE SEAT CONTACT

- After confirming that the dimensions of valve guides and valves are within specifications, perform this procedure.
- Apply prussian blue (or white lead) onto contacting surface of valve seat to check the condition of the valve contact on the surface.
- Check if the contact area band is continuous all around the circumference.
- If not, grind to adjust valve fitting and check again. If the contacting surface still has N.G conditions even after the re-check, replace valve seat.

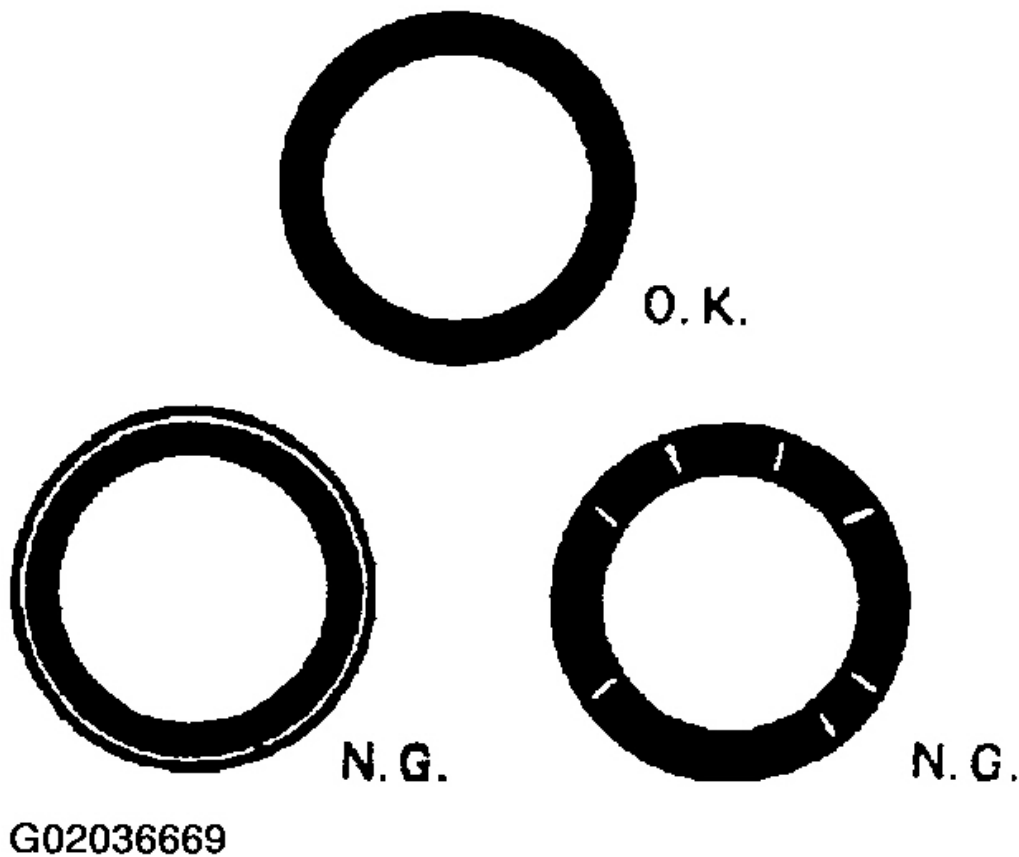


Fig. 134: Checking Contact Area Of Valve Seat
Courtesy of NISSAN MOTOR CO., U.S.A.

VALVE SEAT REPLACEMENT

When valve seat is removed, replace with oversized (0.5 mm, 0.020 in) valve seat.


1. Bore out old seat until it collapses. Boring should not continue beyond the bottom face of the seat recess in cylinder head. Set the machine depth stop to ensure this.
2. Ream cylinder head recess diameter for service valve seat.

Oversize [0.5 mm (0.020 in)]:

Intake 37.500 - 37.516 mm (1.4764 - 1.4770 in)

Exhaust 32.700 - 32.716 mm (1.2874 - 1.2880 in)

- Be sure to ream in circles concentric to the valve guide center.
- This will enable valve seat to fit correctly.

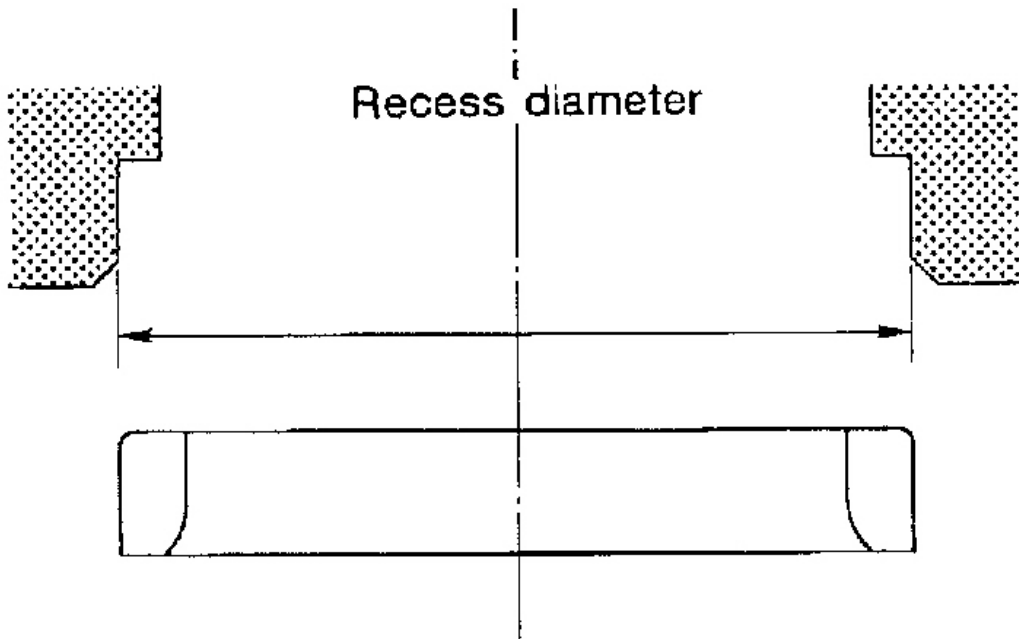


G02036670

Fig. 135: Identifying Ream Cylinder Head Recess Diameter
Courtesy of NISSAN MOTOR CO., U.S.A.

3. Heat cylinder head to 110 to 130°C (230 to 266°F) by soaking in heated oil.
4. Provide valve seats cooled well with dry ice. Force fit valve seat into cylinder head.

CAUTION: Avoid directly to touching cold valve seats.

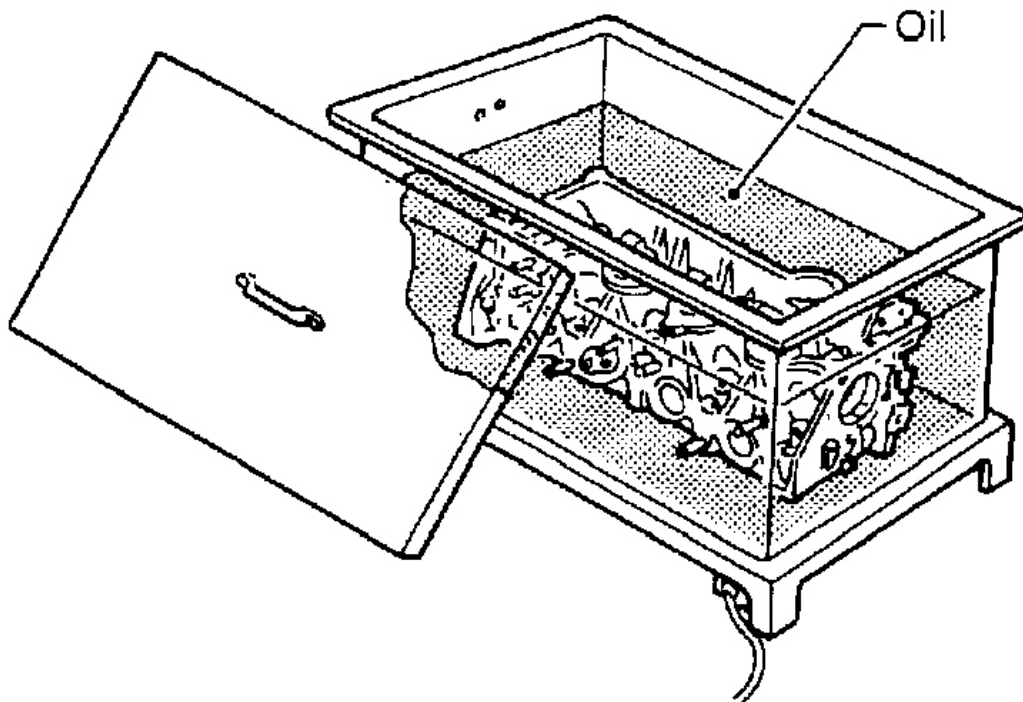


G02036671

Fig. 136: Installing Cylinder Head Into Heated Oil
Courtesy of NISSAN MOTOR CO., U.S.A.

5. Using valve seat cutter set and valve seat grinder, finish the seat to the specified dimensions.

CAUTION: When using valve seat cutter, firmly grip the cutter handle with both hands. Then, press on the contacting surface all around the circumference to cut in a single drive. Improper pressure on with the cutter or cutting many different times may result in stage valve seat.

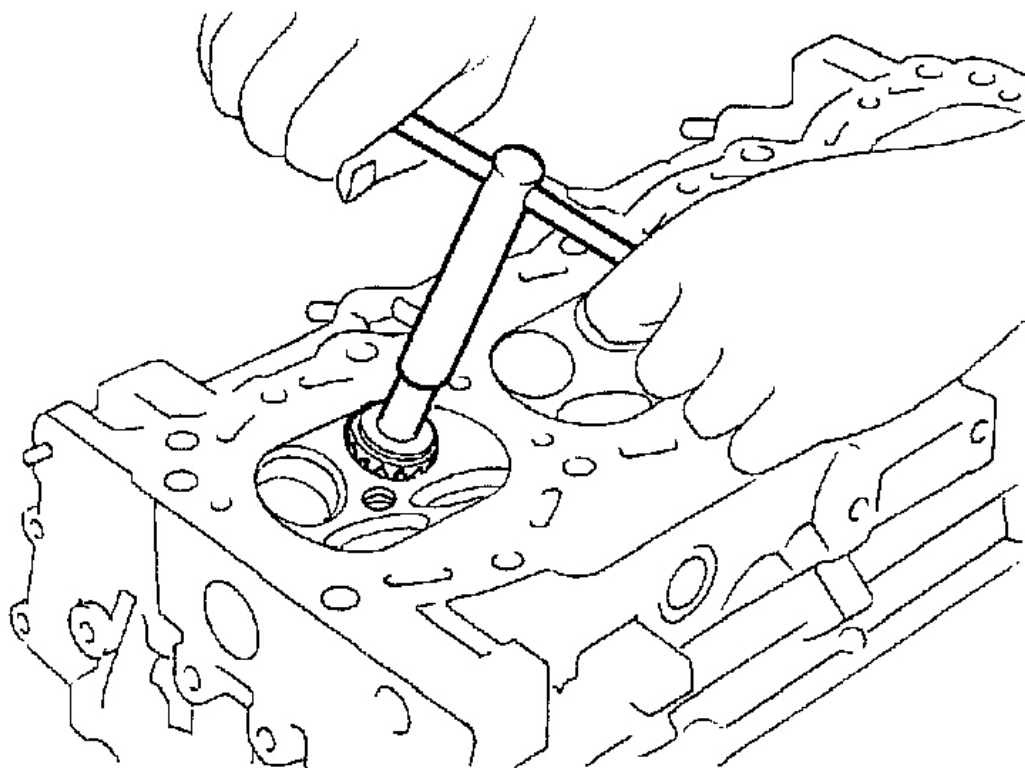

G02036672

Fig. 137: Installing Valve Seat Grinder
Courtesy of NISSAN MOTOR CO., U.S.A.

Grind to obtain the dimensions indicated in figure.

Standard

D1 dia. : 34 mm (1.34 in)


D2 dia. : 35.6 - 35.8 mm (1.402 - 1.409 in)

D3 dia. : 40.0 - 40.2 mm (1.575 - 1.583 in)

D4 dia. : 28.7 mm (1.130 in)

D5 dia. : 30.6 - 30.8 mm (1.205 - 1.213 in)

D6 dia. : 34.8 - 35.0 mm (1.370 - 1.378 in)

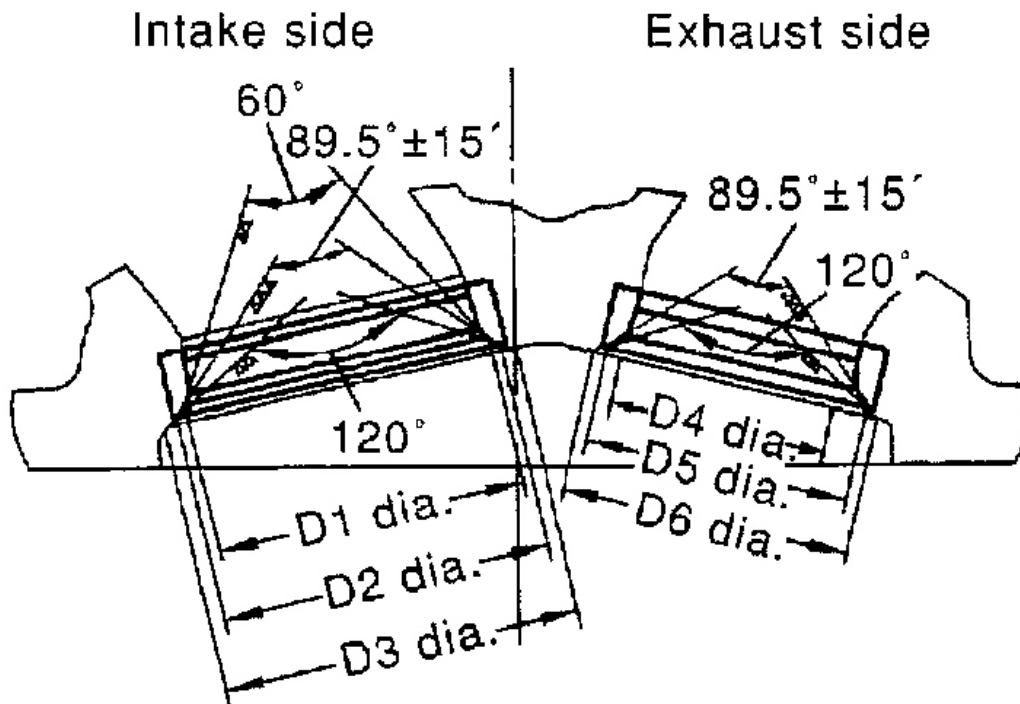

G02036673


Fig. 138: Identifying Valve Hole Diameter
 Courtesy of NISSAN MOTOR CO., U.S.A.

6. Using compound, grind to adjust valve fitting.
7. Check again for normal contact.

VALVE SPRING SQUARENESS

Set try square along the side of valve spring and rotate the spring. Measure the maximum clearance between the top face of spring and try square.

Limit : Less than 2.2 mm (0.087 in)

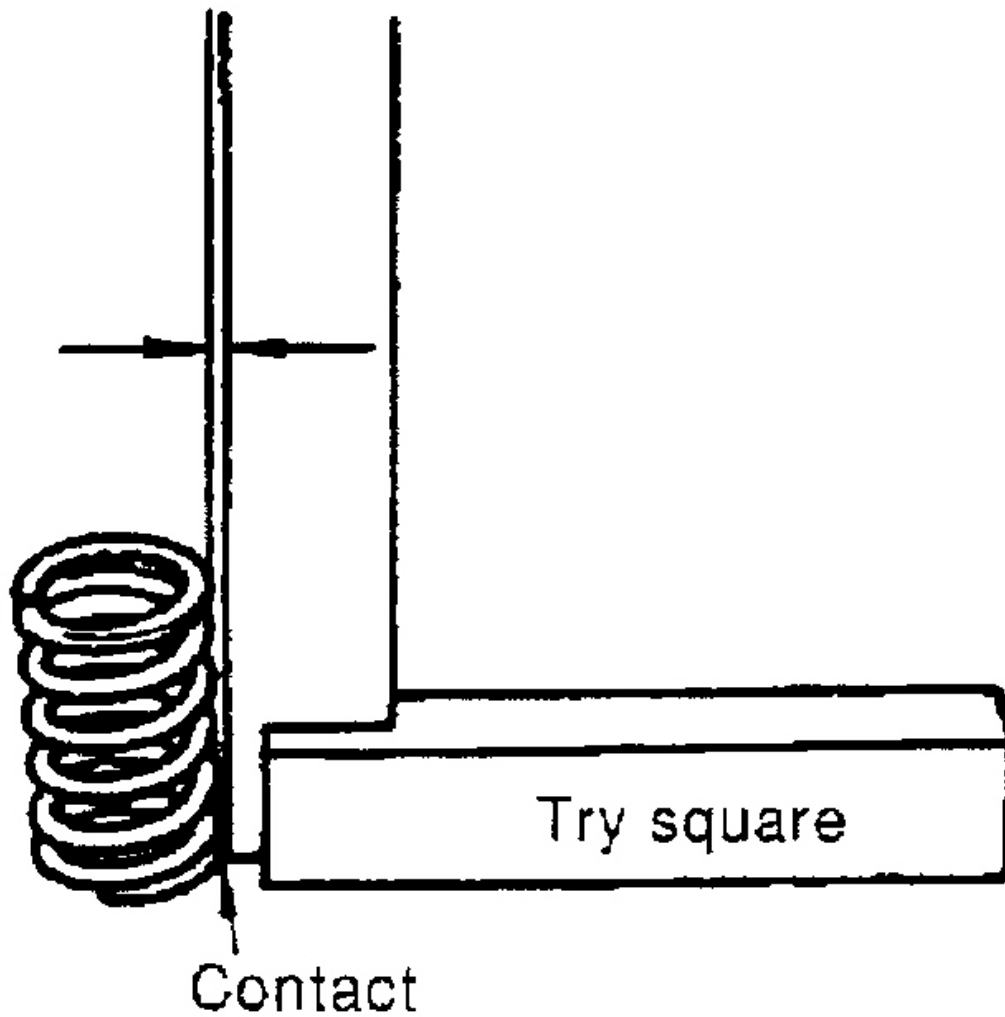

G02036674

Fig. 139: Measuring The Maximum Clearance Between The Top Face Of Spring And Try Square
Courtesy of NISSAN MOTOR CO., U.S.A.

VALVE SPRING DIMENSIONS AND VALVE SPRING PRESSURE LOAD

Check valve spring pressure at specified spring height.

Standard:


Free height 51.28 - 51.48 mm (2.0189 - 2.0268 in)

Installation height 33.8 mm (1.331 in)

Installation load 166- 188 N (16.9 - 19.2 kg, 37-42 lb)

Height during valve open 24.4 mm (0.961 in)

Load with valve open 291-329 N (29.7-33.6 kg, 65 - 74 lb)

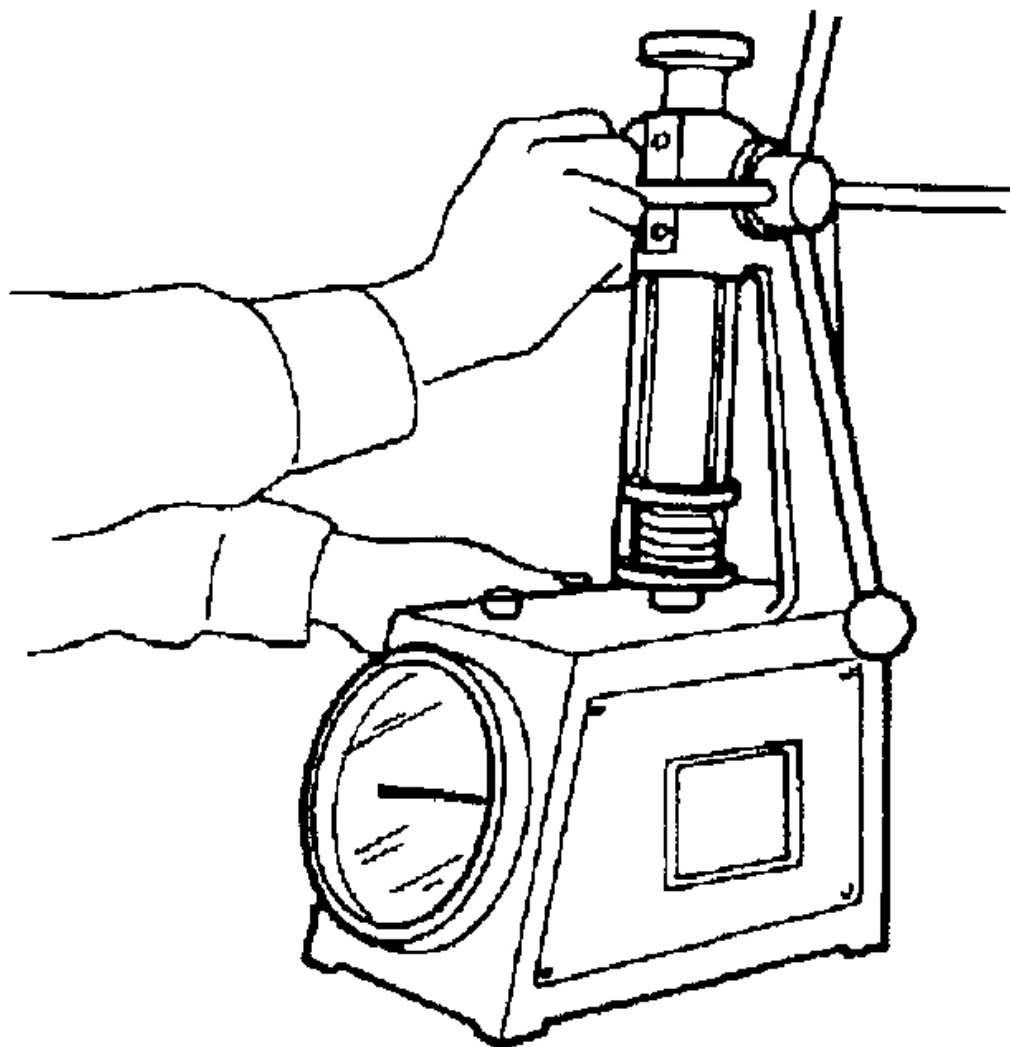

G02036675

Fig. 140: Measuring Valve Spring Pressure Load
Courtesy of NISSAN MOTOR CO., U.S.A.

ENGINE ASSEMBLY

REMOVAL AND INSTALLATION

SEC. 112

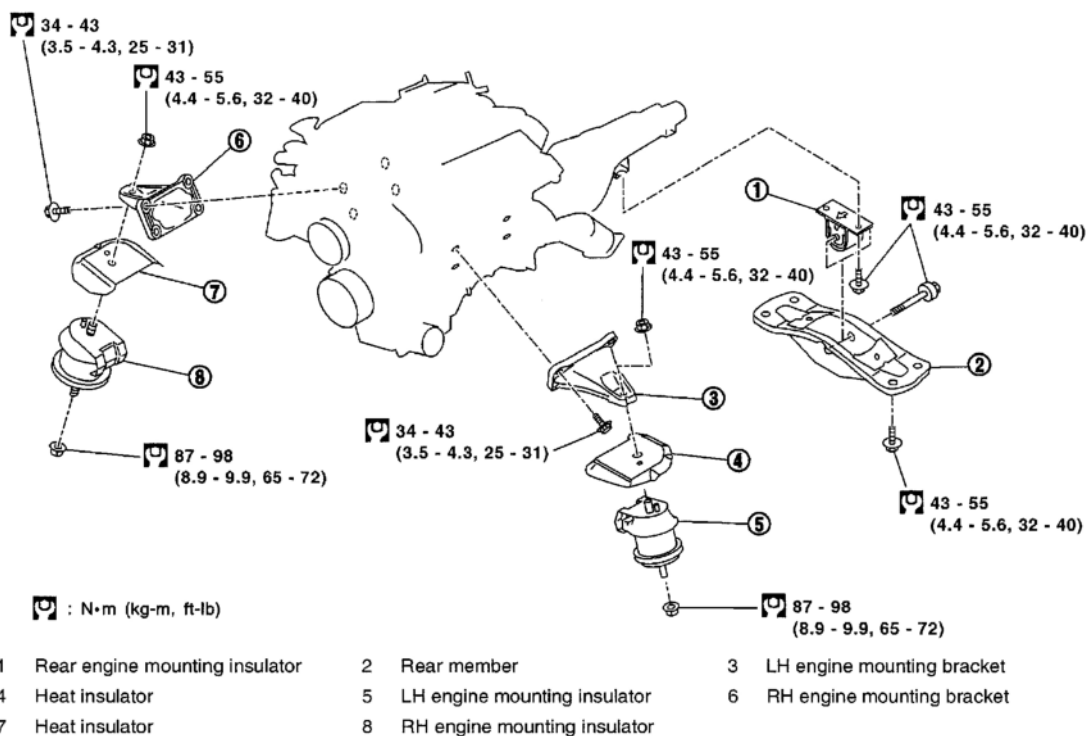


Fig. 141: Exploded View Of Engine Assembly
 Courtesy of NISSAN MOTOR CO., U.S.A.

WARNING:

- Situate vehicle on a flat and solid surface.
- Place chocks at front and back of rear wheels.
- For engines not equipped with engine slingers, attach proper slingers and bolts described in PARTS CATALOG.

CAUTION:

- Always be careful to work safely, avoid forceful or uninstructed operations.
- Do not start working until exhaust system and coolant are cool enough.
- If items or work required are not covered by the engine main body section, refer to the applicable sections.
- Always use the support point specified for lifting.

- Use either 2-point lift type or separate type lift as best you can. If board-on type is used for unavoidable reasons, support at the rear axle jacking point with transmission jack or similar tool before starting work, in preparation for the backward shift of center of gravity.
- For supporting points for lifting and jacking point at rear axle, refer to **GARAGE JACK AND SAFETY STAND** .

REMOVAL

Outline

After removal of transmission, lift up engine assembly to remove it from vehicle.

Preparation

1. Release fuel pressure. Refer to **FUEL PRESSURE RELEASE** .
2. Remove engine cover, engine room cover and engine under cover with power tool.
3. Drain coolant from radiator drain plug.
4. Remove the following parts:
 - Engine hood
 - Front tower bar
 - Battery
 - Air duct (inlet)
 - Air duct, air cleaner case assembly
 - Drive belts
 - Power valve vacuum tank
 - Cooling fan and tubes
 - Radiator assembly and hoses
 - Water suction pipe

Engine room LH

5. Disconnect engine room harness from the engine side and set it aside for easier work.
6. Disconnect heater hoses, and install plugs to avoid leakage of coolant.
7. Disconnect wire bonding exhaust manifold cover to vehicle.
8. Disconnect vacuum hose between vehicle and engine and set it aside.
9. Remove reservoir tank for cooling fan.
10. Remove A/C compressor from brackets, and install A/C compressor temporarily with ropes or equivalent to avoid applying any pressures on piping or disturbing installation or removal of any vehicle parts.

Engine room RH

11. Disconnect fuel hose at the engine side connection.
 - For disconnection/connection of quick connector, refer to , "**REMOVAL AND INSTALLATION**".
12. Disconnect engine room harness from the engine side and set it aside for easier work.
13. Disconnect wire bonding exhaust manifold cover to vehicle.
14. Disconnect vacuum hose between vehicle and engine and set it aside.
15. Disconnect reservoir tank for power steering from engine and move it aside for easier work.
16. Move away relay case.

Vehicle underbody


17. Disconnect power steering pump from engine. Move it from its location and secure with a rope for easier work.
18. Remove pipe of cooler for automatic transmission.
19. Remove exhaust front tube.
20. Disconnect steering lower joint, and release steering shaft.
21. Disconnect propeller shaft.
 - After disconnection, plug the opening on transmission side.

Removal

22. Remove transmission assembly. Refer to **TRANSMISSION ASSEMBLY** .
23. Install engine slingers into front of left bank cylinder head and rear of right bank cylinder head.

Slinger bolts:**30.4 - 36.3 N.m (3.1 - 3.7 kg-m, 23 - 26 ft-lb)**

24. Lift with hoist and secure the engine in position.
25. Remove engine mounting nuts on bottom surface.
26. Carefully lift up engine assembly, avoiding interference with vehicle body, move it away and upward.
27. With engine assembly lifted up, remove rear end of exhaust manifold to avoid contact with vehicle.

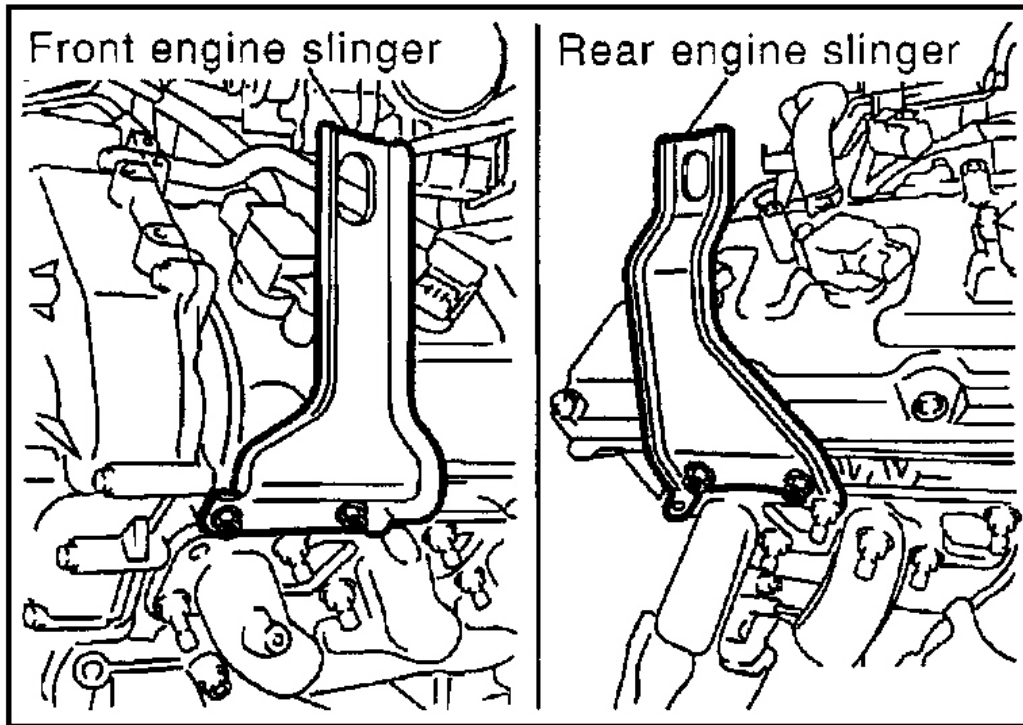

G02036677


Fig. 142: Installing Engine Slingers Into Front Of Left Bank Cylinder Head And Rear Of Right Bank Cylinder Head

Courtesy of NISSAN MOTOR CO., U.S.A.

28. Remove engine assembly from vehicle.

CAUTION:

- Before and during this lifting, always check if any harnesses are connected.
- Avoid damage to and oil/grease smearing or spills onto engine m insulator.

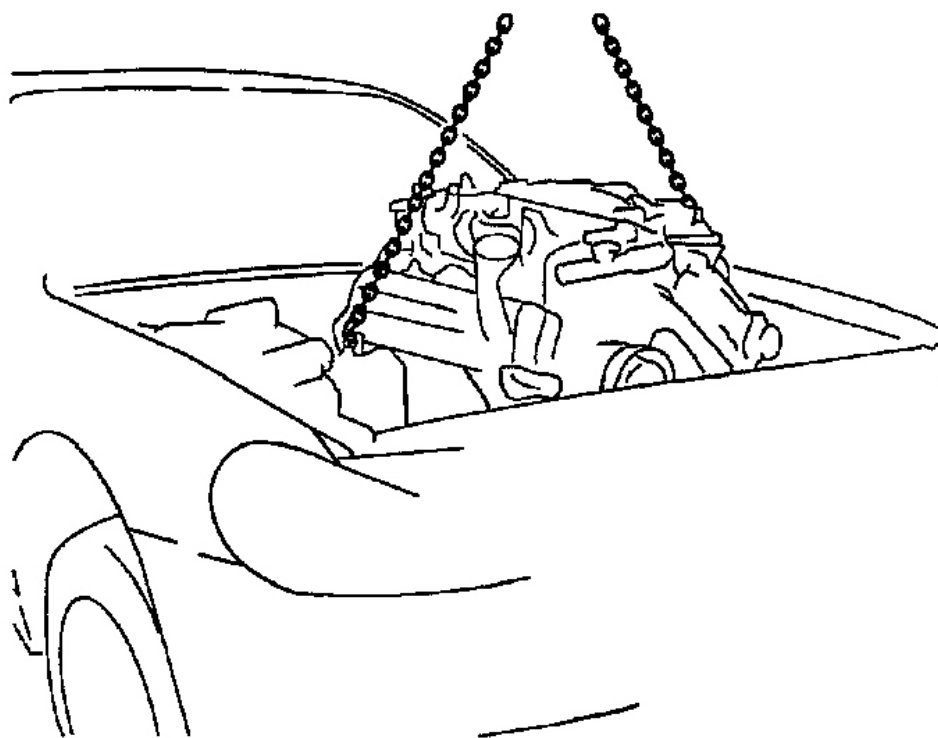


G02036678

Fig. 143: Removing Engine Assembly From Vehicle
Courtesy of NISSAN MOTOR CO., U.S.A.

INSTALLATION

Install in the reverse order of removal.

- Where positioning pin is used, be sure to securely insert it into the hole of mating part.
- When installing front engine mount bracket to cylinder block, first tighten two bolts on upper side. Then, tighten two bolts on lower side. (The same applies to both right and left.)

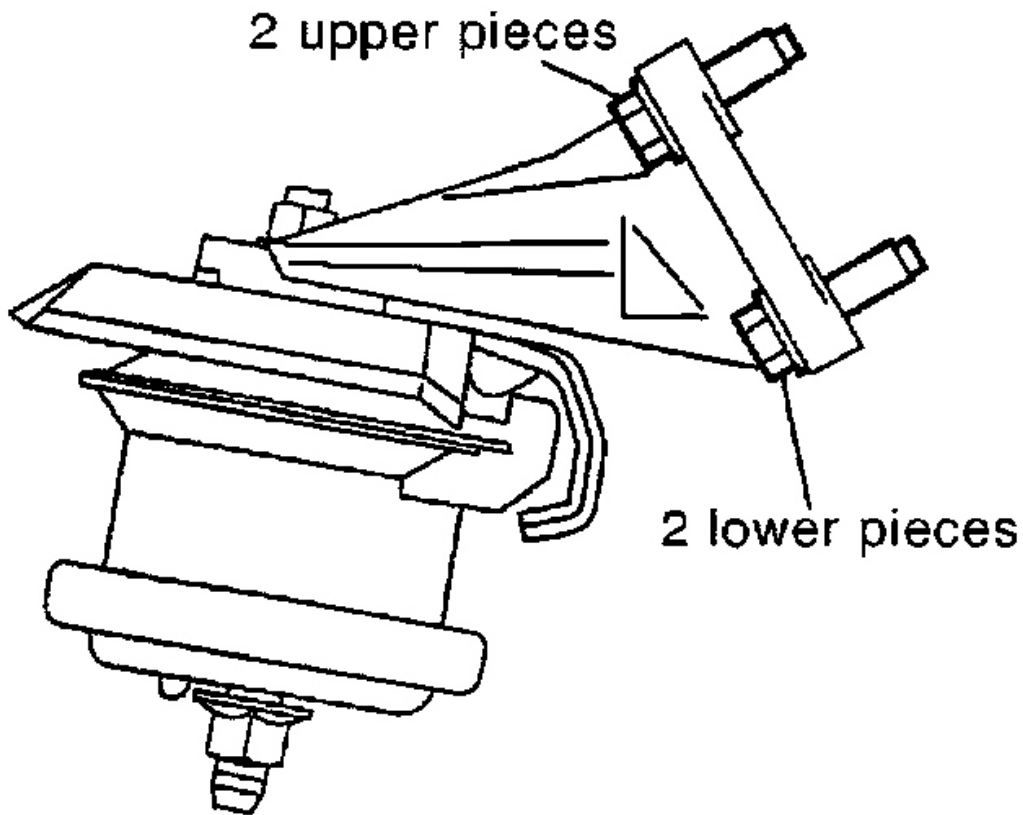

G02036679

Fig. 144: Installing Front Engine Mount Bracket To Cylinder Block
Courtesy of NISSAN MOTOR CO., U.S.A.

INSPECTION AFTER INSTALLATION

- Before starting engine, check the levels of coolant, lubrications, working oils, and of air conditioner refrigerant. If less than required quantity, fill to the specified level.
- Run engine to check for unusual noise and vibration.
- Warm up engine thoroughly to make sure there is no leakage of coolant, lubricants, working oil, fuel, and exhaust gas.
- Bleed air from passages in pipes and tubes of applicable lines.

CYLINDER BLOCK

DISASSEMBLY AND ASSEMBLY

SEC. 110•120•226

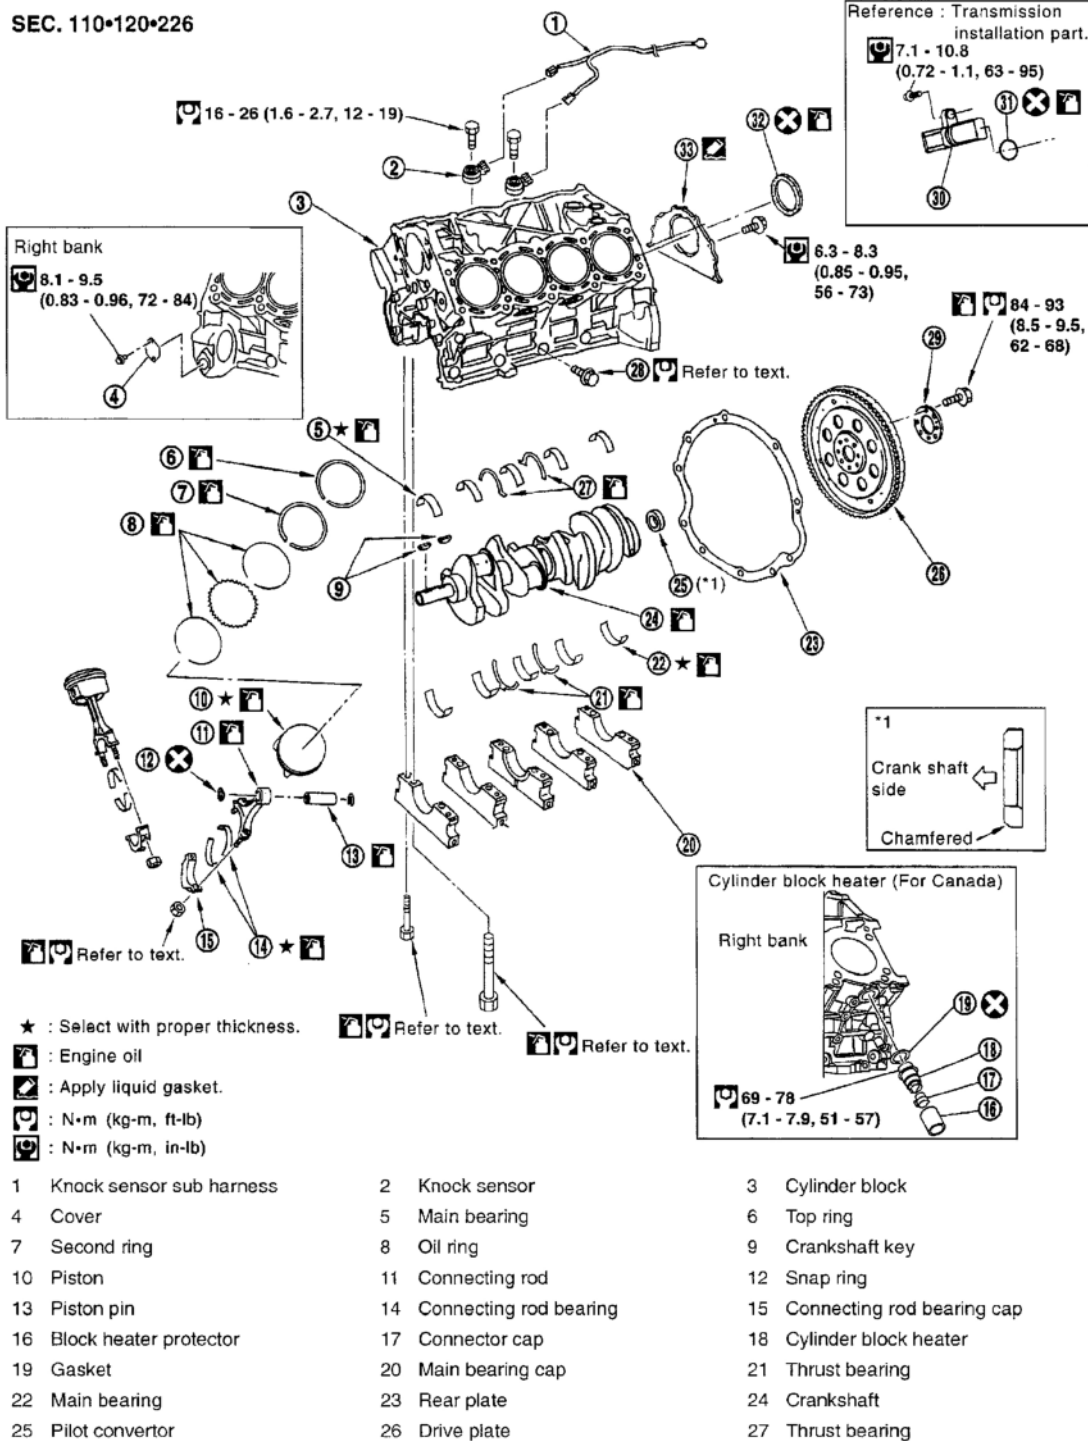


Fig. 145: Exploded View Of Cylinder Block
Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION: Apply new engine oil to parts marked in illustration before installation.

DISASSEMBLY

NOTE: Explained here is how to disassemble with engine stand supporting transmission surface. When using different type of engine stand, note with difference in steps and etc.

1. Remove engine assembly. Refer to CONNECTING ROD BEARING (BIG END), "ENGINE ASSEMBLY".
2. Remove the parts that may restrict installation of engine to general-purpose engine stand.

NOTE: The procedure is described assuming that you use a general-purpose engine holding the surface, to which transmission is installed.

- a. Remove drive plate.
 - Holding crankshaft pulley mounting bolts, lock crankshaft to remove bolts fixing drive plate.
 - Loosen fixing bolts diagonally.

CAUTION:

- Be careful not to damage drive plate. Especially, avoid deforming and damaging of signal plate teeth (circumference position).
- Place the drive plate with signal plate surface facing other than downward.
- Keep magnetic materials away from signal plate.

- b. Remove engine rear plate.
3. Lift the engine with hoist to install it onto the general-purpose engine stand.

CAUTION: Use an engine stand that has a load capacity large enough for supporting the engine weight.


- If the load capacity of the stand is not adequate, remove the following parts beforehand to reduce the potential risk of overturning the stand.
 - Remove intake manifold upper and intake manifold lower. Refer to , "INTAKE MANIFOLD".
 - Remove exhaust manifold and three way catalyst. Refer to , "EXHAUST MANIFOLD AND THREE WAY CATALYST".
 - Remove fuel injector and fuel tube. Refer to , "FUEL INJECTOR AND FUEL TUBE".
 - Remove starter motor. Refer to STARTER .
 - Remove ignition coil. Refer to , "IGNITION COIL".
 - Remove rocker cover. Refer to , "ROCKER COVER".

- Other removable brackets.

NOTE: The figure shows an example of general-purpose engine stand that can hold mating surface of transmission with drive plate and rear plate removed.

CAUTION: Before removing the hanging chains, make sure the engine stand is stable and there is no risk of overturning.

4. Drain engine oil and coolant from inside of engine.
5. Remove the following components and associated parts (The parts listed in step 3 are not included here.)
 - Oil pan and oil strainer: Refer to , "OIL PAN AND OIL STRAINER".

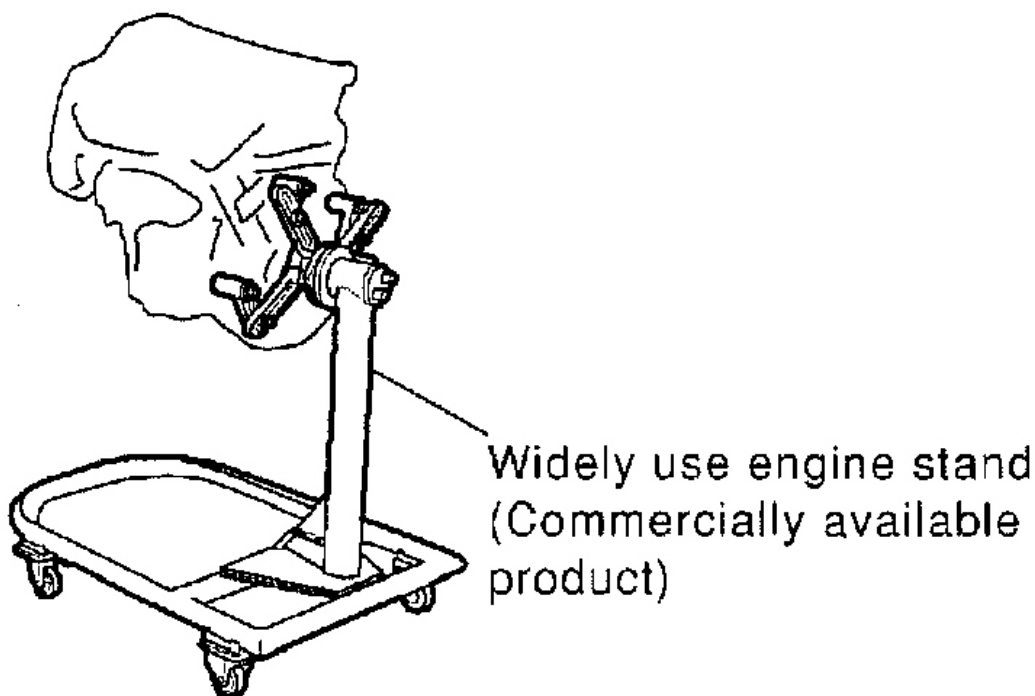

G02036681

Fig. 146: Identifying Engine Stand
Courtesy of NISSAN MOTOR CO., U.S.A.

- Crankshaft pulley, front cover and timing chain: Refer to , "TIMING CHAIN".
- Camshaft: Refer to , "CAMSHAFT".

- Cylinder head: Refer to , "CYLINDER HEAD".

6. Remove knock sensor.

CAUTION: Carefully handle the sensor, avoiding shocks.


7. Remove the piston and connecting rod assembly.

- a. Position the crankshaft pin corresponding to the connecting rod to be removed onto the bottom dead center.
- b. Remove the connecting rod cap.
- c. Using a hammer handle or similar tool, push the piston and connecting rod assembly out to the cylinder head side.
 - Before removing the piston and connecting rod assembly, check the connecting rod side clearance. Refer to , "CONNECTING ROD SIDE CLEARANCE".

8. Remove the connecting rod bearings.

CAUTION:

- When removing them, note the installation position. Keep them in correct order.

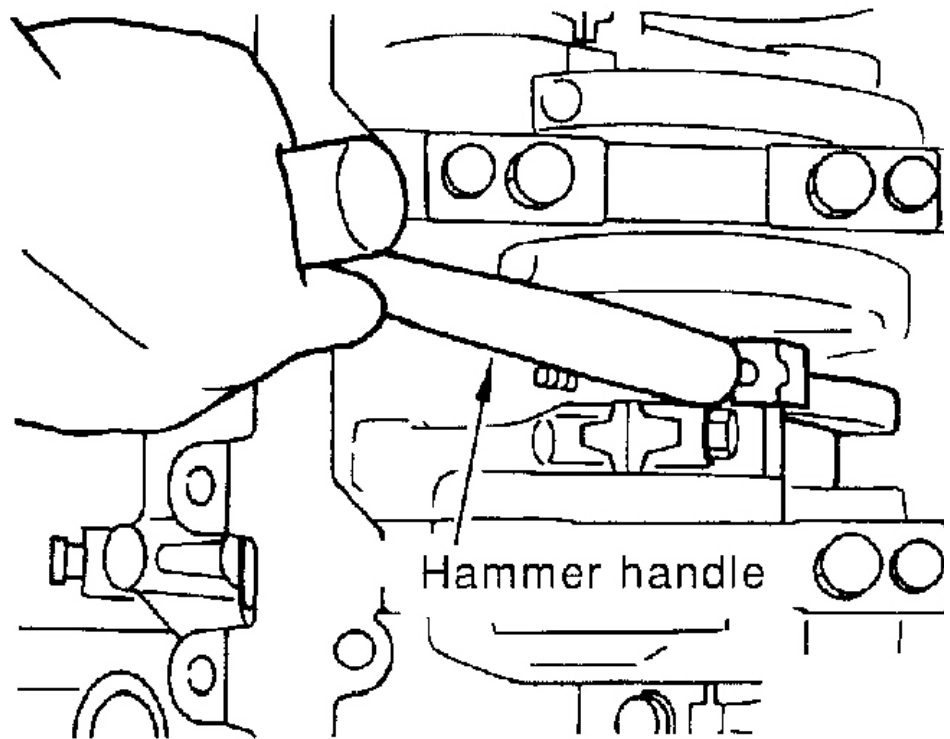

G02036682


Fig. 147: Removing The Piston And Connecting Rod Assembly
Courtesy of NISSAN MOTOR CO., U.S.A.

9. Remove the piston rings from the piston.

- Use a piston ring expander.

CAUTION:


- When removing the piston rings, be careful not to damage the piston.
- Be careful not to damage piston rings by expanding them excessively.
- Before removing the piston rings, check the piston ring side clearance. Refer to , "**PISTON RING SIDE CLEARANCE**".

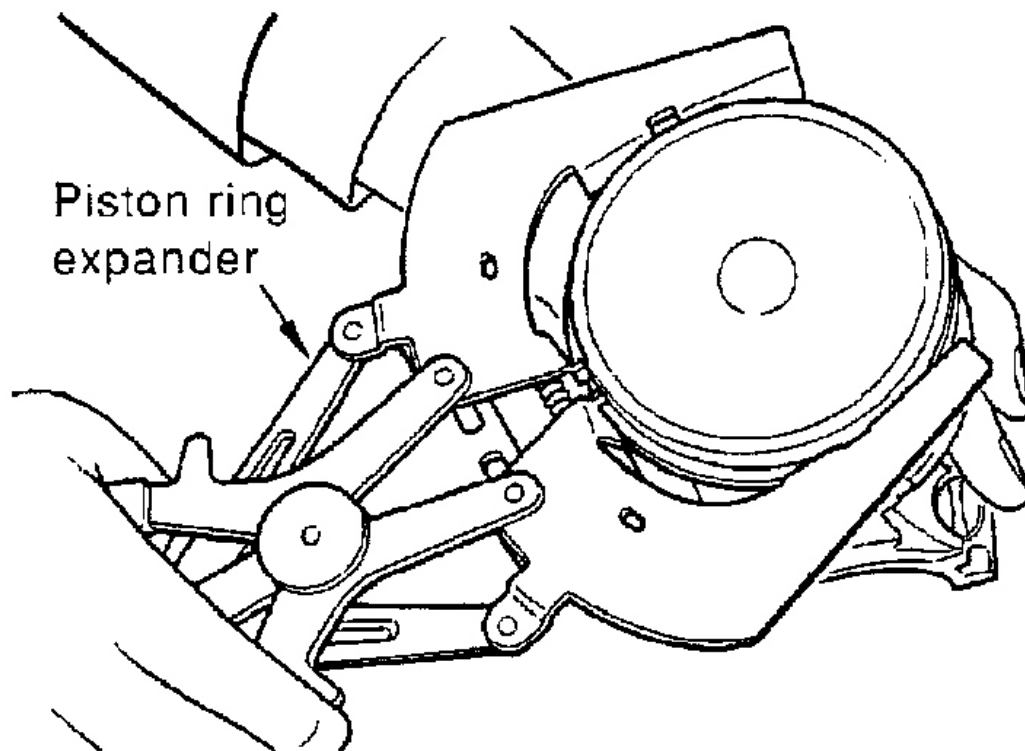

G02036683

Fig. 148: Removing Piston Rings From The Piston
Courtesy of NISSAN MOTOR CO., U.S.A.

10. Remove the piston from the connecting rod as follows.
 - a. Using a snap ring pliers, remove the snap ring.

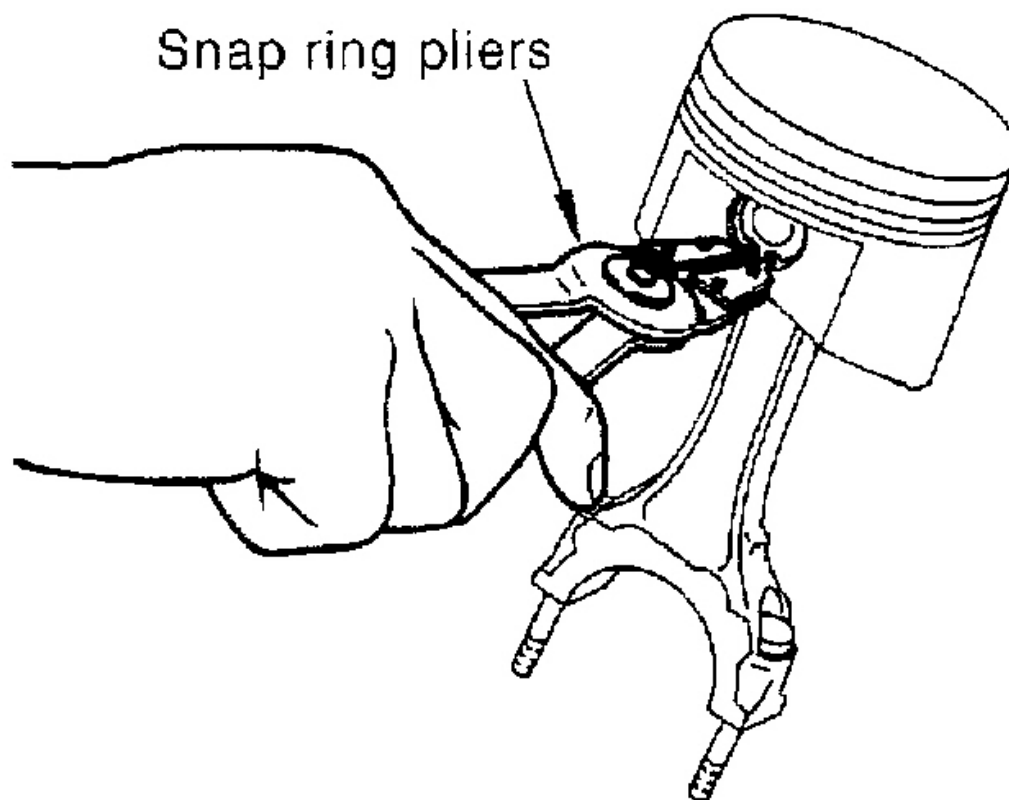


G02036684

Fig. 149: Removing Snap Ring

Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Heat piston to 60 to 70°C (140 to 158°F) with drier or equivalent.

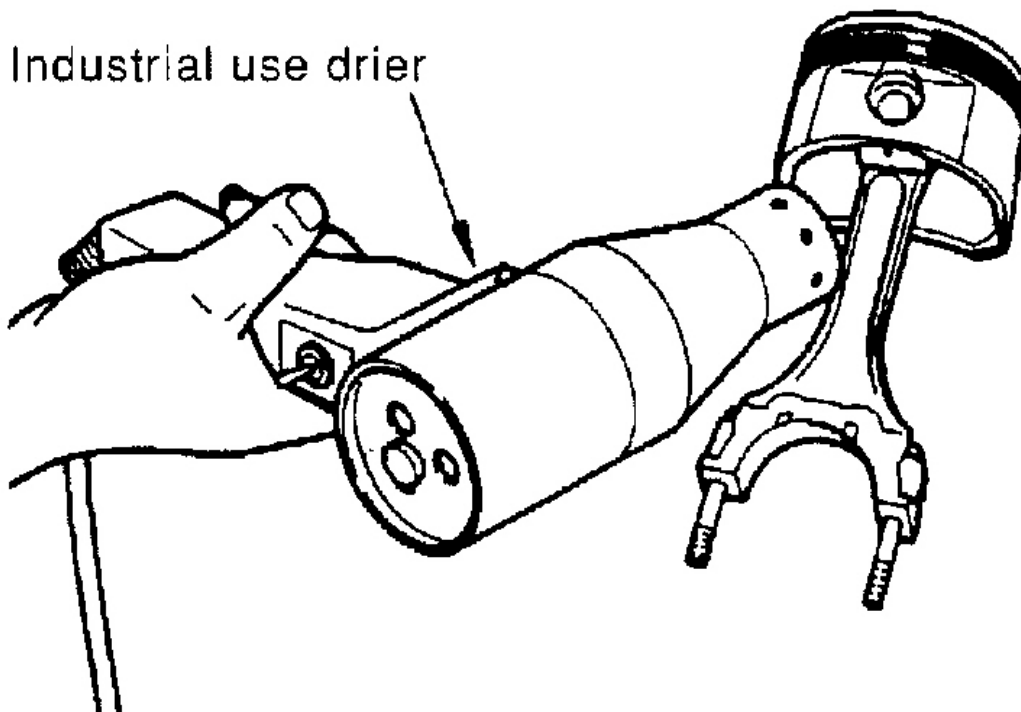


G02036685

Fig. 150: Applying Heat To Piston
Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Push out piston pin with stick of outer diameter approximately 20 mm (0.8 in).
11. Remove the rear oil seal retainer from the cylinder block.
 - Insert a minus-head screwdriver or similar tool between the rear end of the crankshaft counter weight and rear oil seal retainer, and separate the liquid gasket to remove.

CAUTION: Be careful not to damage the mating surface.

12. Using a minus-head screwdriver or similar tool, and lever off the rear oil seal from the rear oil seal retainer.

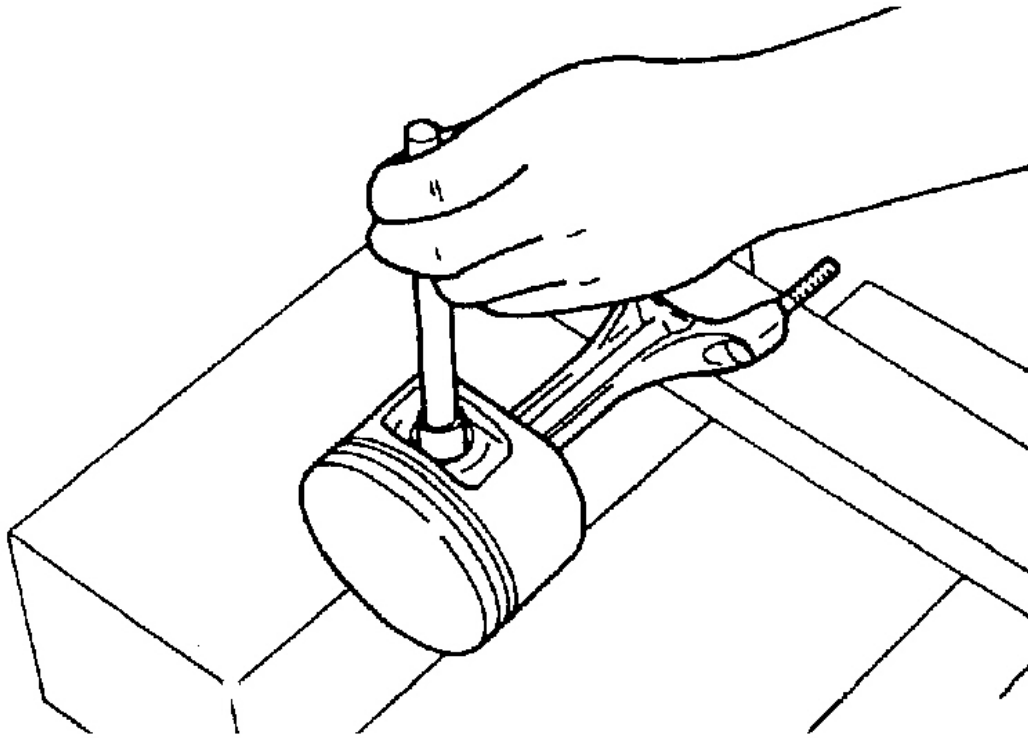

G02036686

Fig. 151: Removing Piston Pin

Courtesy of NISSAN MOTOR CO., U.S.A.


13. Remove the main bearing cap as follows:

- Before loosening the main bearing cap bolts, measure the crankshaft side clearance.

Refer to , "CRANKSHAFT SIDE CLEARANCE".

- a. Remove the cover attached to the rear left side of the cylinder block (next to the starter motor housing).

NOTE: **Bolts (No. 27 shown in the figure) are installed on the inside of the cover.**

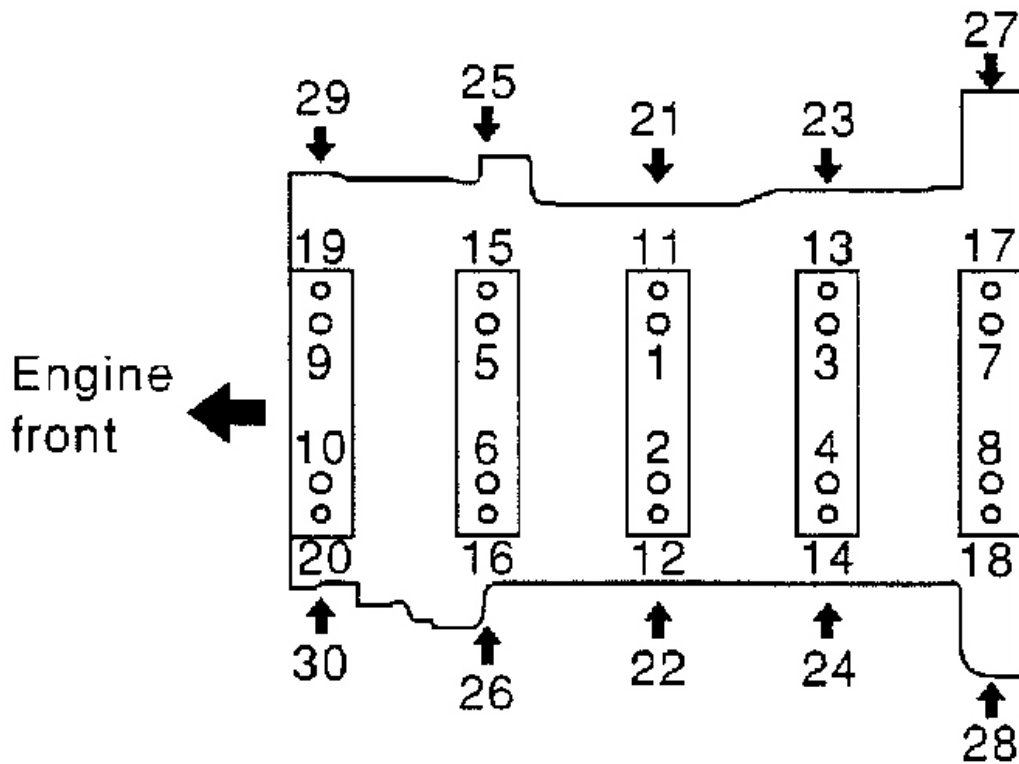

G02036687

Fig. 152: Loosening The Main Bearing Cap Bolts

Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Loosen the side bolts (M10) starting from 30 to 21 to remove.
- c. Loosen the main bearing cap sub bolts (M9) starting from 20 to 11 to remove.
- d. Loosen the main bearing cap bolts (M12) starting from 10 to 1 to remove.
- e. Using a main bearing cap remover, remove the main bearing cap.

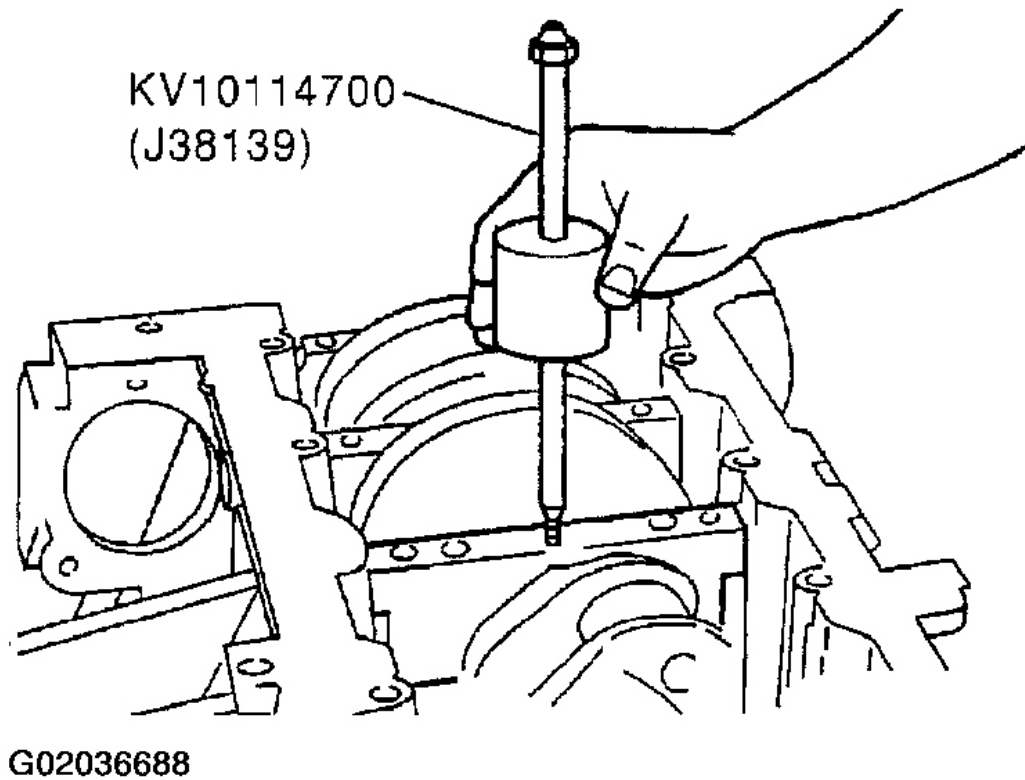


Fig. 153: Removing Main Bearing Cap
Courtesy of NISSAN MOTOR CO., U.S.A.

14. Remove the crankshaft.
15. Remove the main bearings and thrust bearings from the cylinder block and main bearing caps.
 - When removing them, note the installation position. Keep them in the correct order.
16. If the pilot converter must be removed, remove it from the rear end of the crankshaft using a pilot bearing puller.
 - Removal and installation without the engine stand is possible.

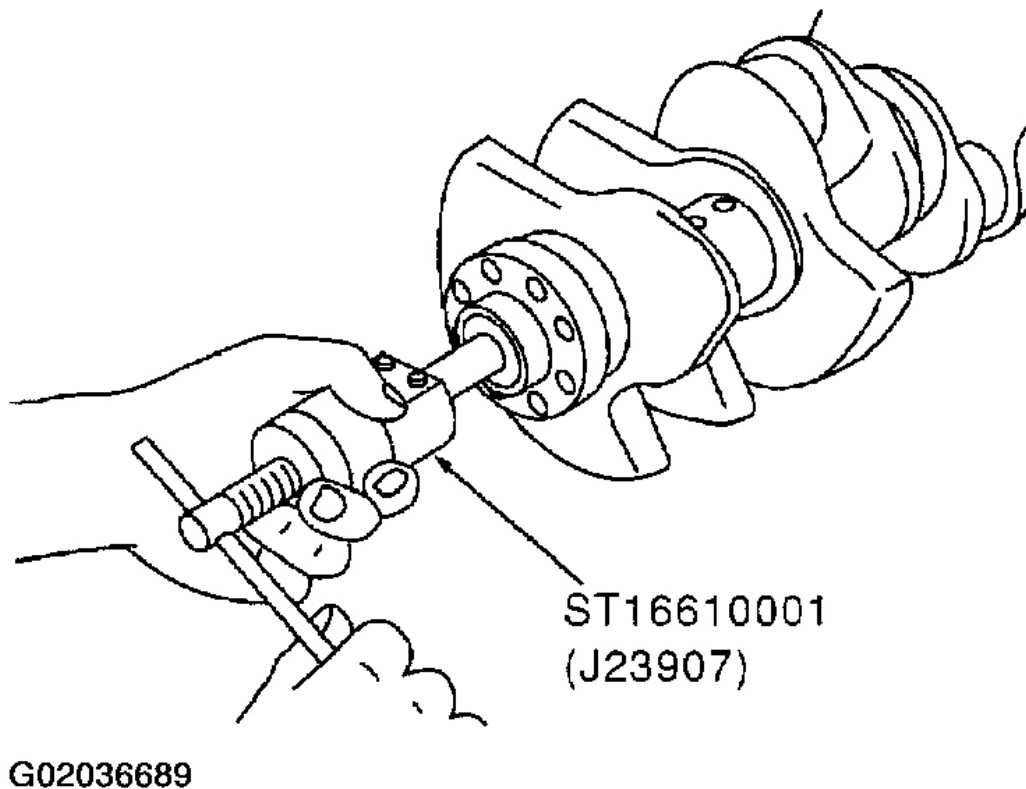


Fig. 154: Removing Rear End Of The Crankshaft
Courtesy of NISSAN MOTOR CO., U.S.A.

ASSEMBLY

1. Fully air-blow the coolant and oil passages in the cylinder block, the cylinder bore, and the crankcase to remove any foreign material.

CAUTION: Use a goggles to protect your eye.

2. Install each plug to the cylinder block. (Only screwed-type plugs are shown in the figure.)
 - Apply liquid gasket.

Use Genuine Ultra Grey RTV Silicone Sealant Part No. 999MP-AM003P or equivalent.


- Replace the copper washers with new ones.
- Tighten them as specified below.

Part	Washer	Tightening torque
A	Yes.	49.0 - 58.8 N·m (5.0 - 6.0 kg-m, 37 - 43 ft-lb)
B	No.	14.7 - 24.5 N·m (1.5 - 2.5 kg-m, 11 - 18 ft-lb)
C	Yes.	57.8 - 67.6 N·m (5.9 - 6.9 kg-m, 43 - 49 ft-lb)
D	Yes.	57.8 - 67.6 N·m (5.9 - 6.9 kg-m, 43 - 49 ft-lb)

G02036690

Fig. 155: Tightening Torque Table

Courtesy of NISSAN MOTOR CO., U.S.A.

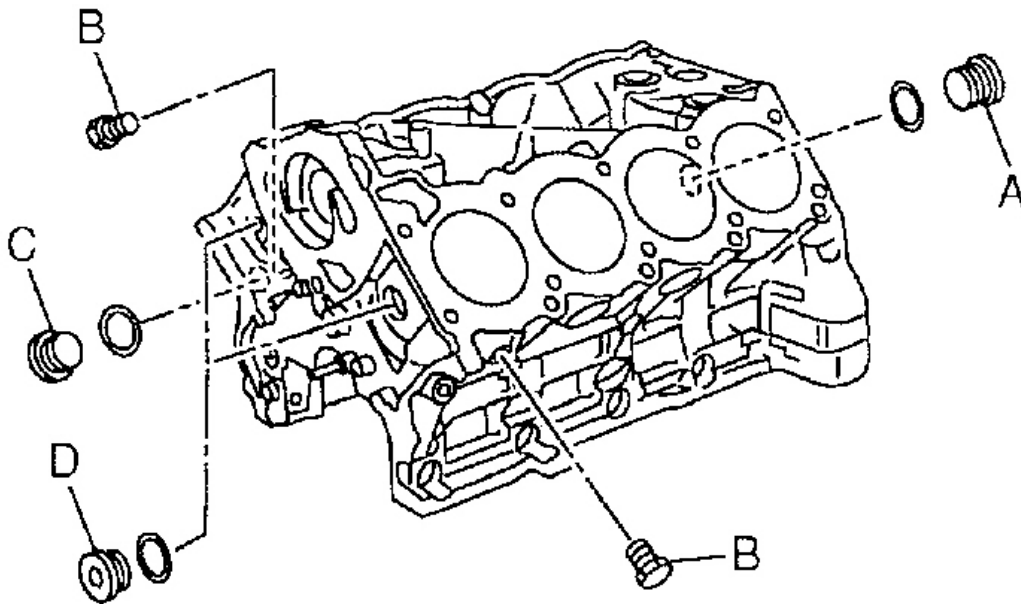


G02036691

Fig. 156: Installing Plug To The Cylinder Block

Courtesy of NISSAN MOTOR CO., U.S.A.

3. Install the main bearings and the thrust bearings.

- a. Remove dust, dirt, and oil on the bearing mating surfaces of the cylinder block and the main bearing caps.
- b. Install the thrust bearings to the both sides of the No. 3 journal housing on the cylinder block and main bearing caps
 - Install the thrust bearings with the oil groove facing the crankshaft arm (outside).
 - Install the thrust bearings with a protrusion in the center on the main bearing caps.

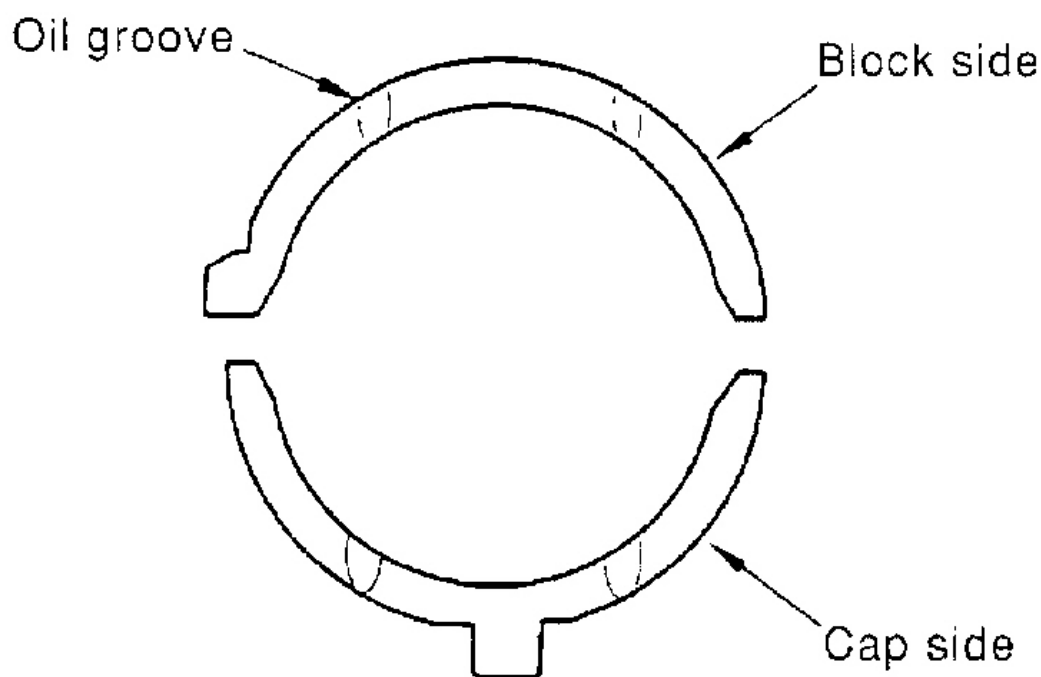

G02036692

Fig. 157: Identifying Thrust Bearings Oil Groove
Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Install the main bearings paying attention to the direction.
 - Install the one with oil holes onto the cylinder block and the one without oil holes onto the main bearing cap.
 - Before installing the bearings, apply engine oil to the bearing surface (inside). Do not apply oil to the back surface, but thoroughly clean it.
 - When installing, align the bearing stopper to the notch.
 - Insure the oil holes on cylinder block and those on the corresponding bearing are aligned.


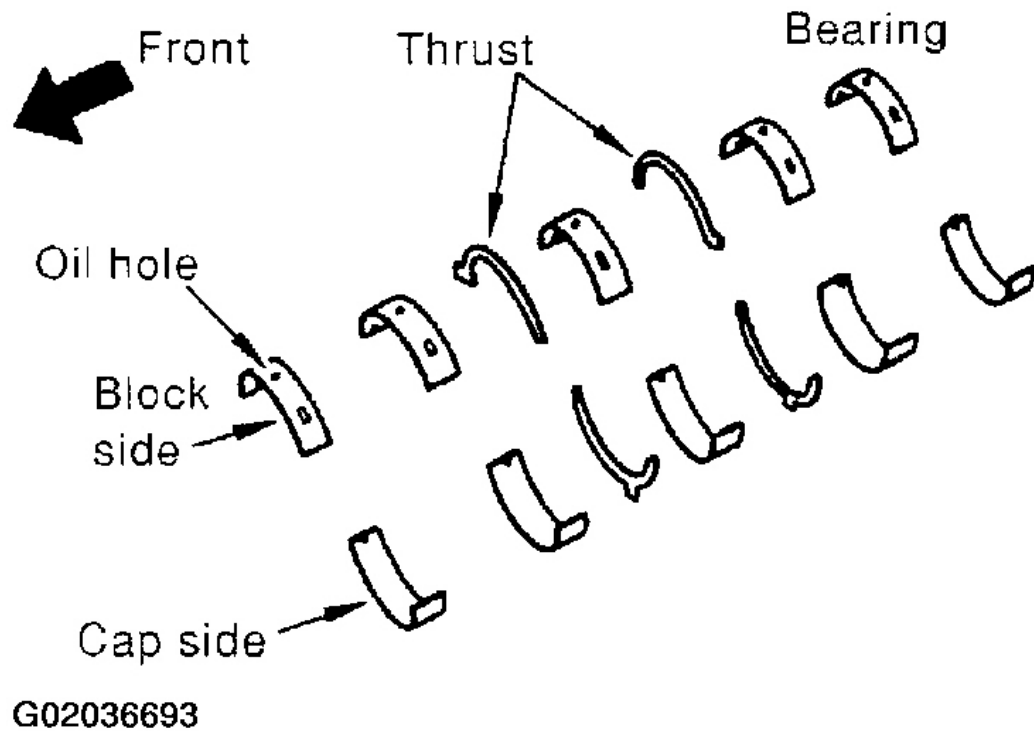


Fig. 158: Identifying Main Bearings
Courtesy of NISSAN MOTOR CO., U.S.A.

4. Install the pilot converter to the crankshaft.
 - Using a drift approximately 35 mm (1.38 in) in outer diameter, drive the pilot converter until its front end contacts the crankshaft.
 - Press-fit the pilot converter with its chamfering side facing the crankshaft. (Refer to "**Fig. 154**".)
 - It is acceptable to install it without the engine stand.
5. Install the crankshaft to the cylinder block.
 - While turning the crankshaft by hand, check that it turns smoothly.

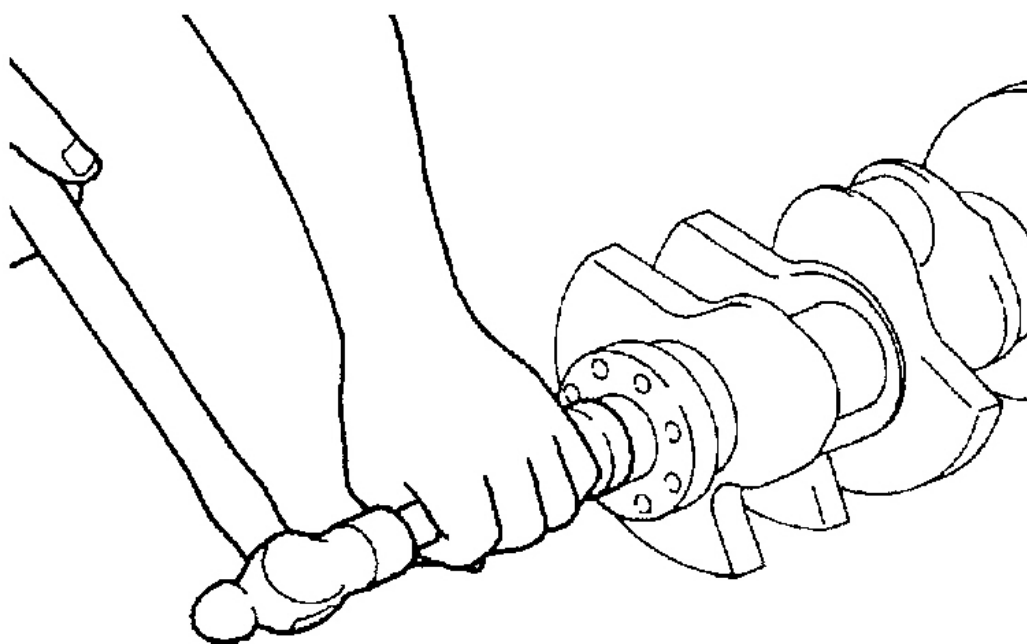

G02036694

Fig. 159: Installing Pilot Converter To The Crankshaft
Courtesy of NISSAN MOTOR CO., U.S.A.

6. Install the main bearing caps.
 - Align the identification number to the journal position to install.
 - Install the upper side of the identification number facing the front of the engine. (The number shall be read correctly from the rear of the engine.)
 - Using a plastic hammer or similar tool, tap them lightly to seat them on the installation position.


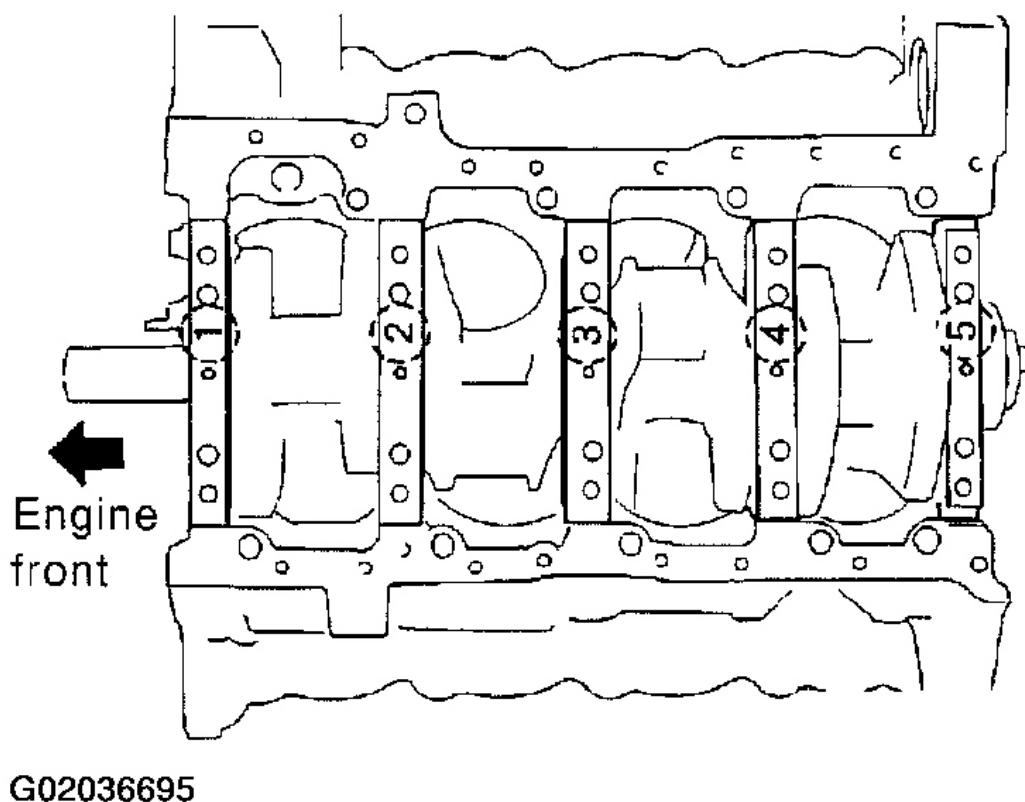


Fig. 160: Installing Main Bearing Caps
Courtesy of NISSAN MOTOR CO., U.S.A.

7. Follow the below steps to tighten each main bearing cap bolts.
 - a. Apply engine oil to threads and seating surface of bolts, and tighten all bolts temporarily.
 - b. Tighten main bearing cap bolt (M12) to 36.3 to 42.1 N.m (3.7 to 4.3 kg-m, 27 to 31 ft-lb) in order of 1 to 10.
 - c. Tighten main bearing cap sub bolt (M9) to 26.5 to 32.3 N.m (2.7 to 3.3 kg-m, 20 to 23 ft-lb) in order of 11 to 20.
 - d. Tighten main bearing cap bolt (M12) to 40 to 45° degrees (ideal 40 degrees) in order of 1 to 10.
 - e. Tighten main bearing cap sub bolt (M9) to 30 to 35° degrees (ideal 30 degrees) in order of 11 to 20.
 - f. Tighten side bolt (M10) to 46.1 to 51.9 N.m (4.7 to 5.3 kg-m, 34 to 38 ft-lb) in order of 21 to 30.
 - g. Install cover of cylinder block left-rear side (next to starter motor housing).

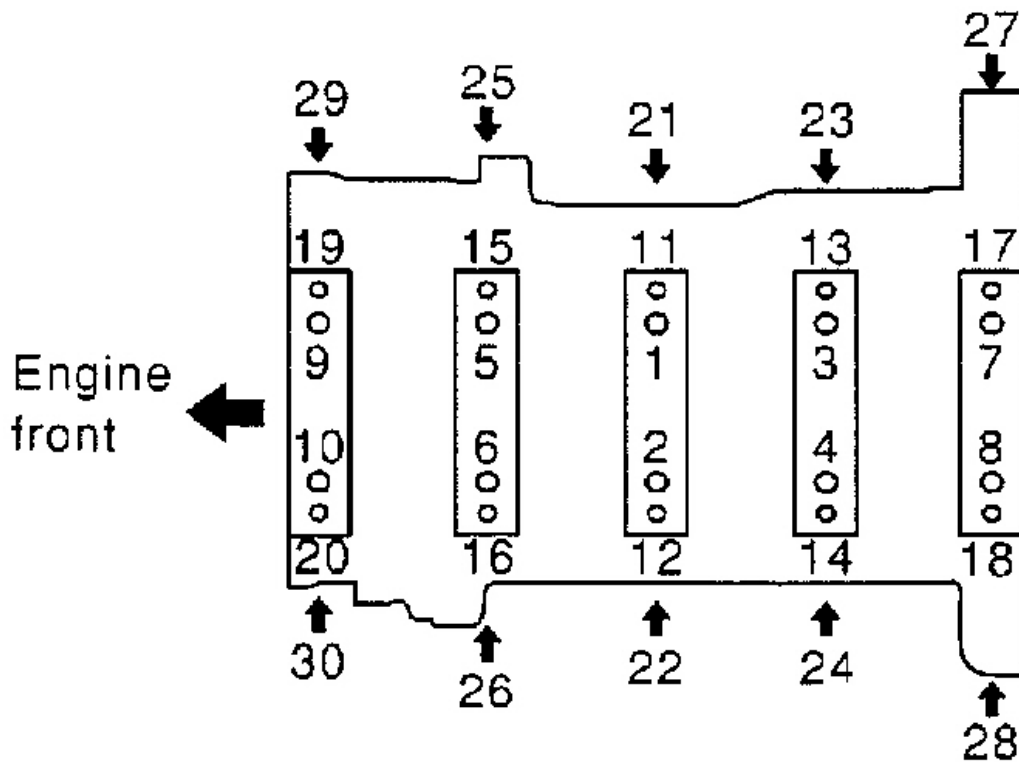


G02036696

Fig. 161: Tightening Main Bearing Caps Bolts
 Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION: Measure tighten angle in step "d" and "e" with angle wrench.
 Do not measure visually.


- Rotate crankshaft by hands after bolts are tightened. Check if it rotates smoothly.
- Check the crankshaft side clearance. Refer to , "CRANKSHAFT SIDE CLEARANCE".

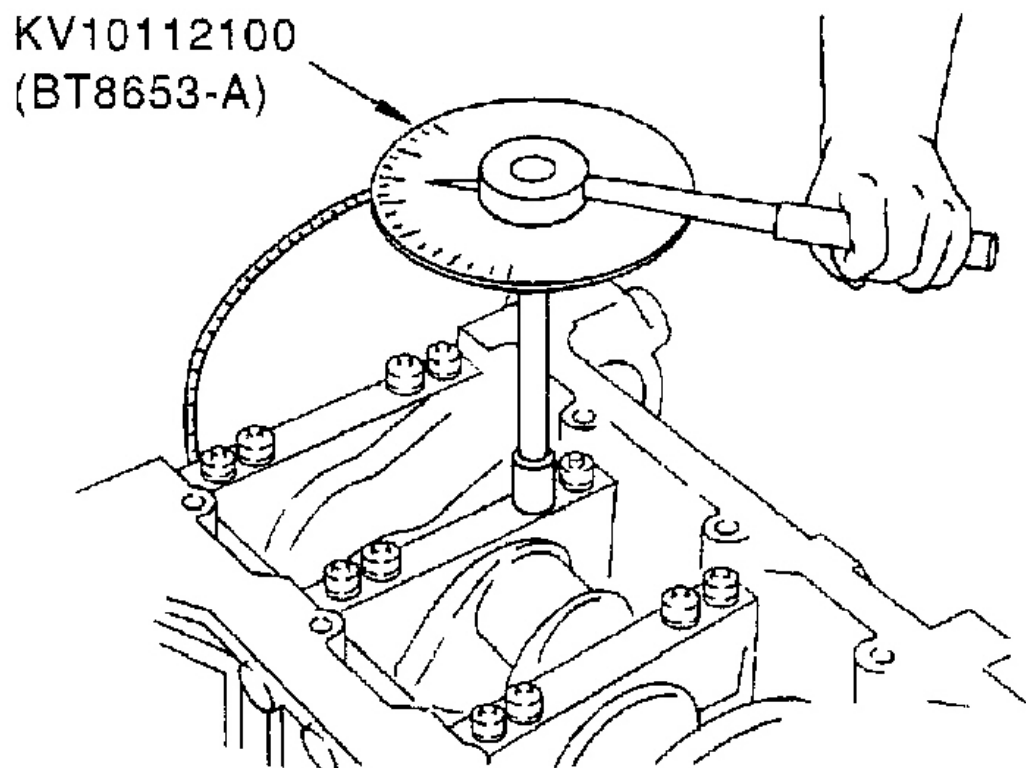

G02036697

Fig. 162: Measuring Tighten Angle
Courtesy of NISSAN MOTOR CO., U.S.A.


8. Install rear oil seal to oil seal retainer.
 - Tap until flattened with front edge of oil seal retainer. Do not damage or scratch outer circumference of oil seal.

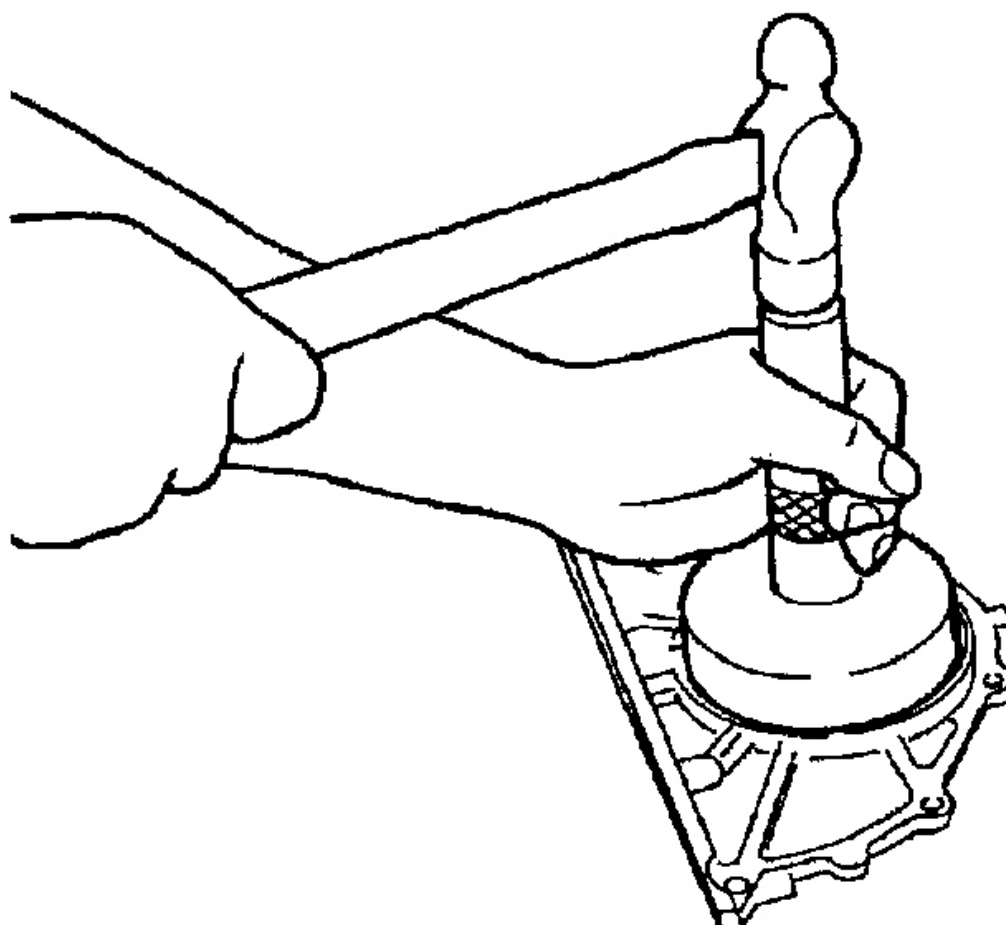

G02036698

Fig. 163: Installing Rear Oil Seal To Oil Seal Retainer
Courtesy of NISSAN MOTOR CO., U.S.A.

- Install new oil seal in the direction shown in the figure.

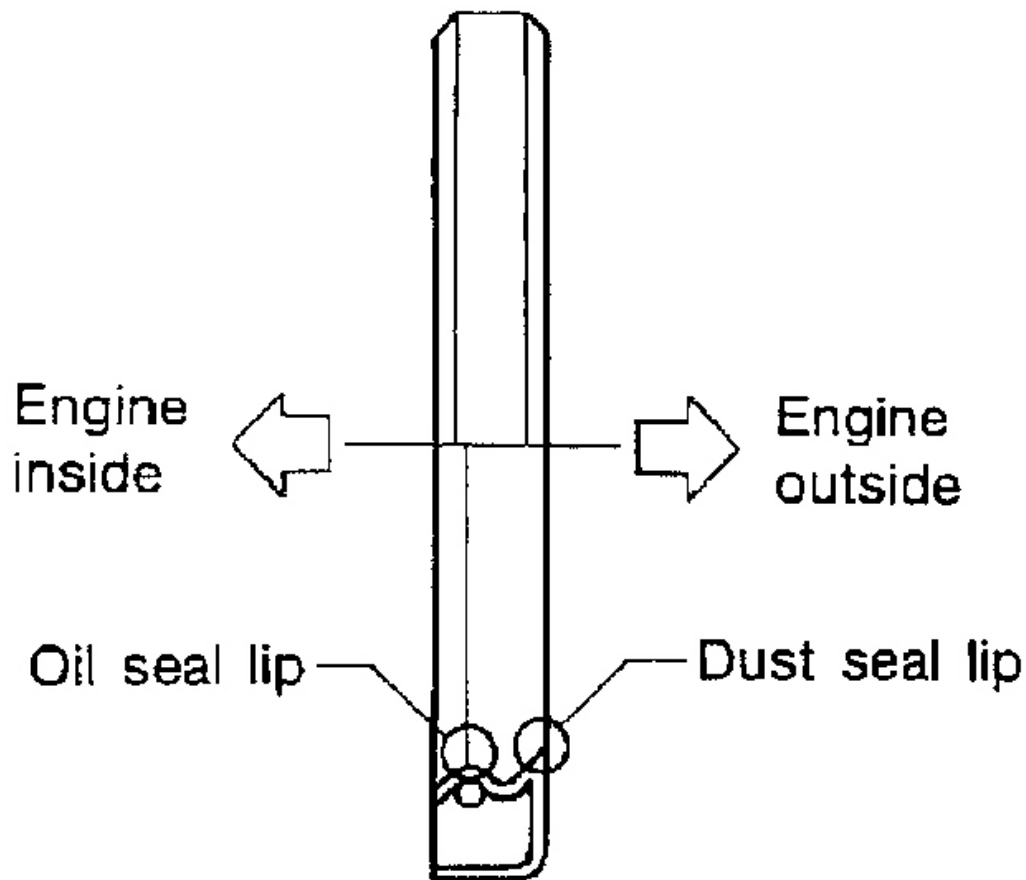

G02036699

Fig. 164: Installing Oil Seal

Courtesy of NISSAN MOTOR CO., U.S.A.

9. Install rear oil seal retainer.

- Apply liquid gasket thoroughly to rear oil seal retainer.

Use Genuine Ultra Grey RTV Silicone Sealant Part No. 999MP-AM003P or equivalent.

- Grease is applied on lips of oil seal. Do not touch.

10. Install the piston to the connecting rod.

- a. Using a snap ring pliers, install the snap ring to the grooves of the piston rear side.
 - Insert it fully into groove to install.


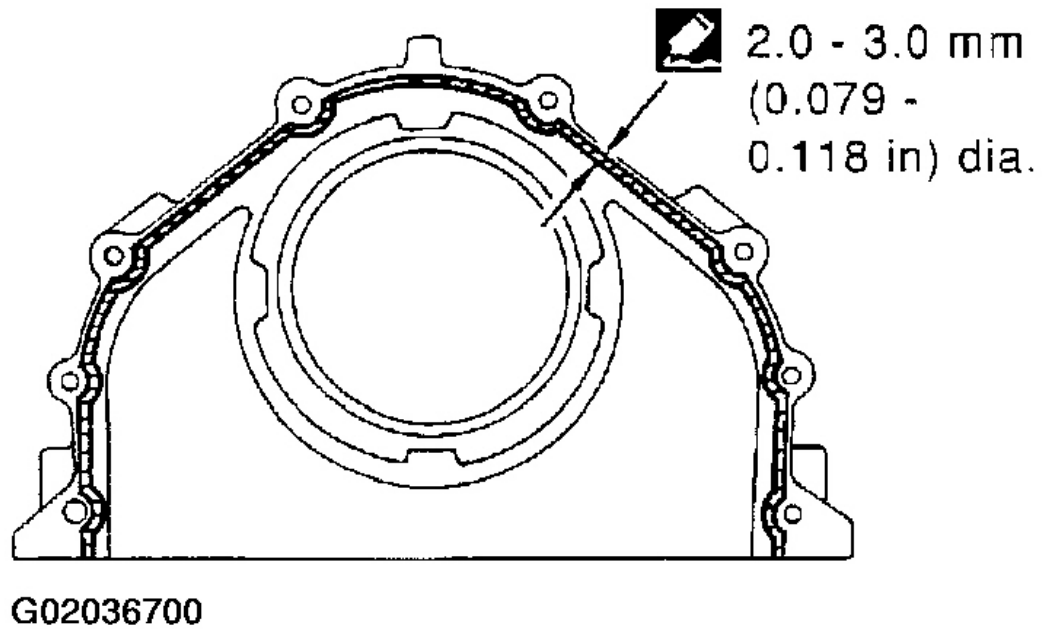


Fig. 165: Applying Liquid Gasket
Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Install the piston to the connecting rod.
 - Using an industrial drier or similar tool, heat the piston until the piston pin can be pushed in by hand without excess force [approx. 60 to 70 C° (140 to 158 °F)]. From the front to the rear, insert the piston pin into the piston and the connecting rod.
 - Assemble so that the front mark on the piston crown and the oil holes and the cylinder No. on the connecting rod are positioned as shown in the figure.
- c. Install the snap rings to the front of the piston.
 - After installing, check that the connecting rod moves smoothly.

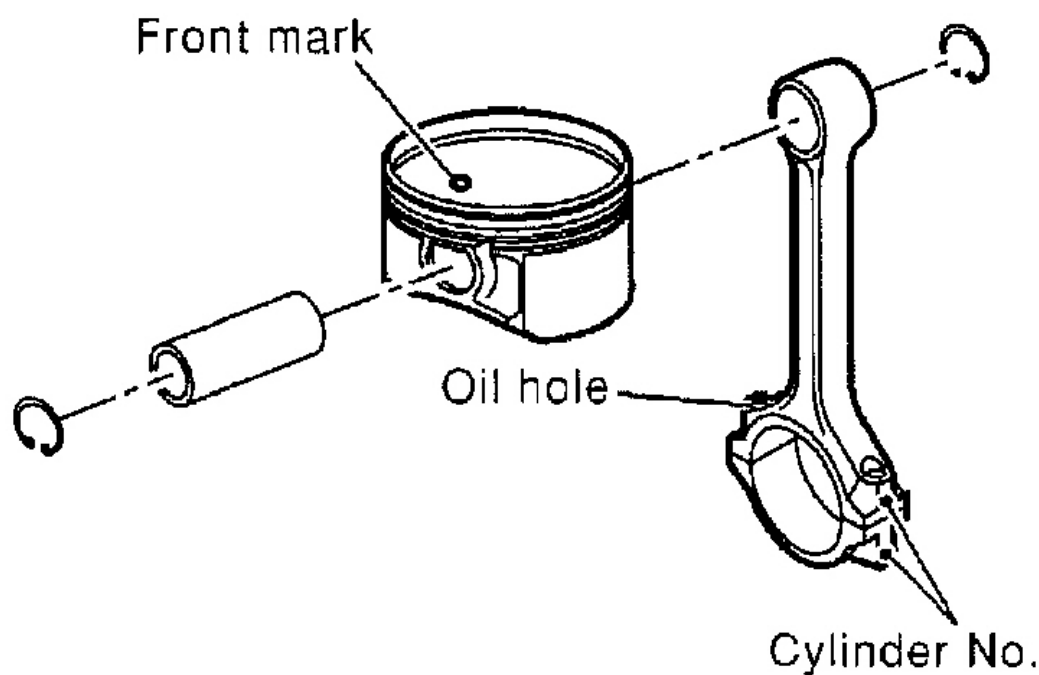

G02036701

Fig. 166: Installing Piston To The Connecting Rod
Courtesy of NISSAN MOTOR CO., U.S.A.


11. Using a piston ring expander, install the piston rings.

CAUTION: Be careful not to damage the piston.

- Position each ring with the gap as shown in the figure, referring to the piston front mark.
- Install the top ring and the second ring with the stamped surface facing upward.

Stamped mark : R (top ring)


: 2R (second ring)

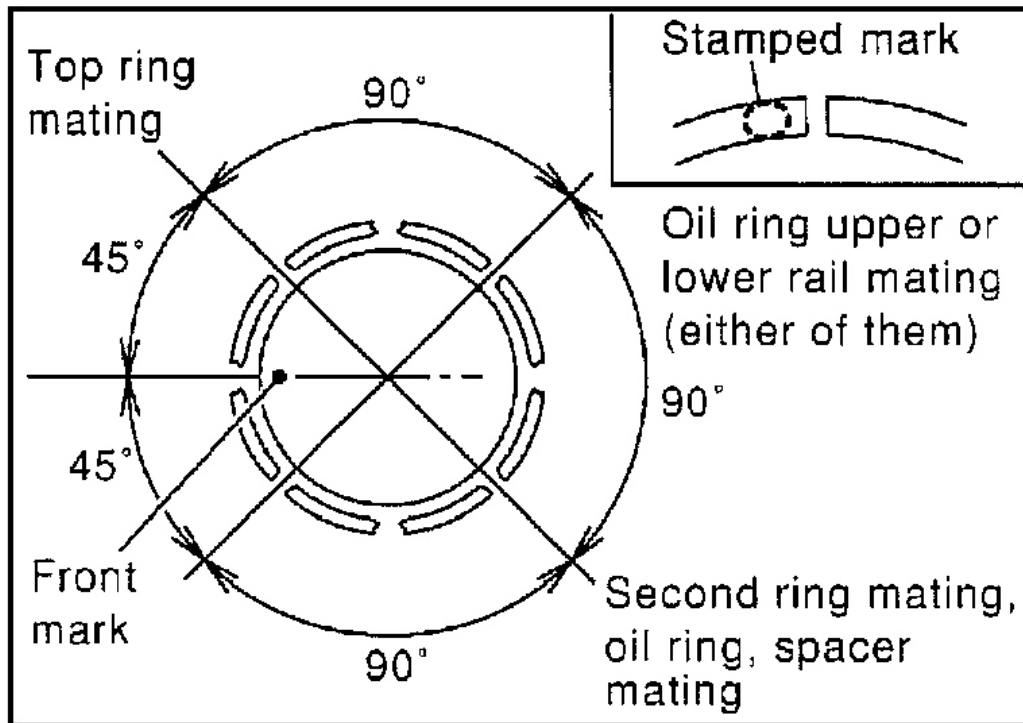

G02036702

Fig. 167: Identifying Piston Ring Direction
Courtesy of NISSAN MOTOR CO., U.S.A.

12. Install the connecting rod bearings to the connecting rod and the connecting rod cap.
 - When installing the connecting rod bearings, apply engine oil to the bearing surface (inside). Do not apply oil to the back surface, but thoroughly clean it.
 - When installing, align the connecting rod bearing stopper protrusion with the notch of the connecting rod to install.
 - Check the oil holes on the connecting rod and those on the corresponding bearing are aligned.

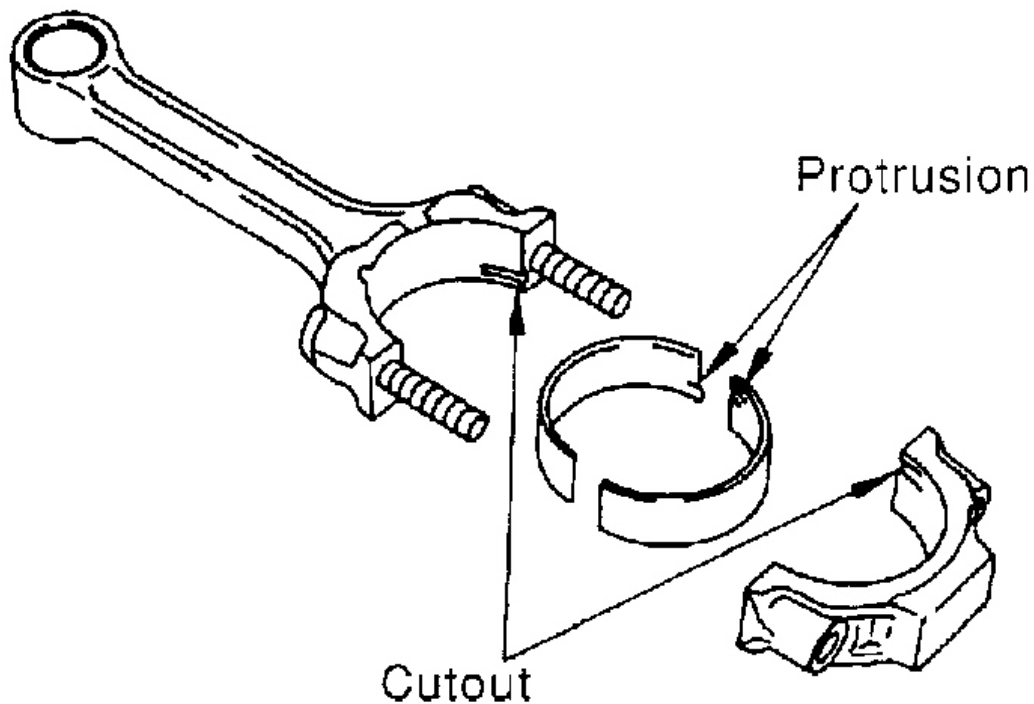


G02036703

Fig. 168: Installing Connecting Rod Bearings To The Connecting Rod And The Connecting Rod Cap

Courtesy of NISSAN MOTOR CO., U.S.A.

13. Install the piston and connecting rod assembly to the crankshaft.
 - Position the crankshaft pin corresponding to the connecting rod to be installed onto the bottom dead center.
 - Apply engine oil sufficiently to the cylinder bore, piston, and crankshaft pin.
 - Match the cylinder position with the cylinder No. on the connecting rod to install.
 - Using a piston ring compressor, install the piston with the front mark on the piston crown facing the front of the engine.

CAUTION: Be careful not to damage the crankshaft pin, resulting from an interference of the connecting rod big end.

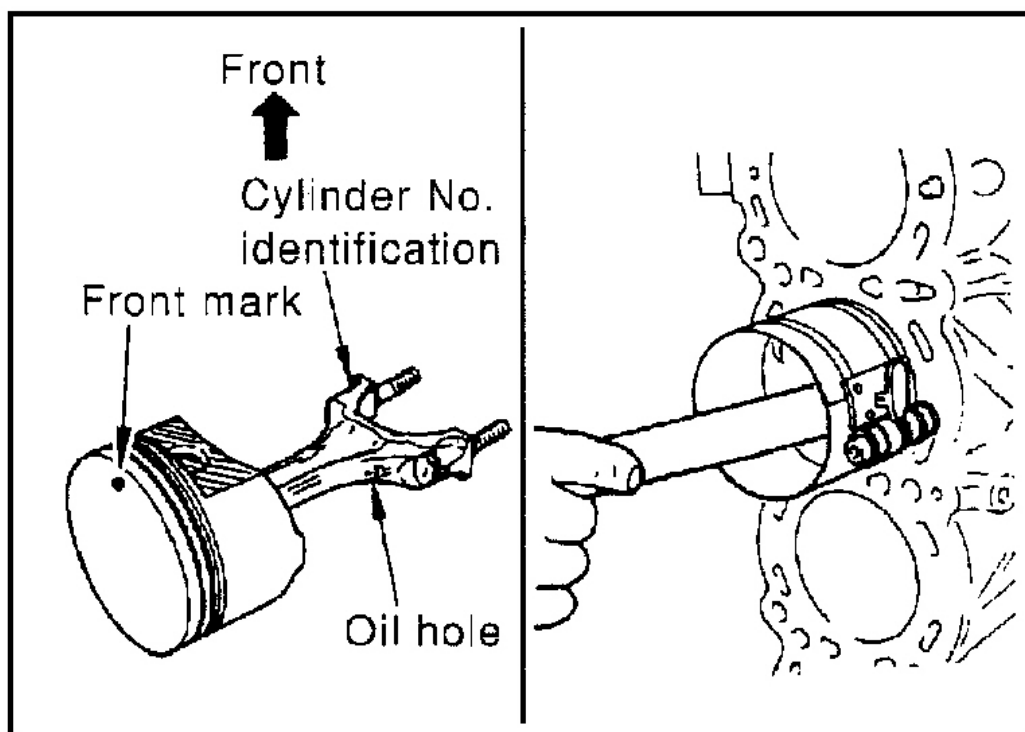

G02036704

Fig. 169: Installing Piston And Connecting Rod Assembly To The Crankshaft
Courtesy of NISSAN MOTOR CO., U.S.A.

14. Install the connecting rod cap.
 - Match the stamped cylinder number marks on the connecting rod with those on the cylinder cap to install.

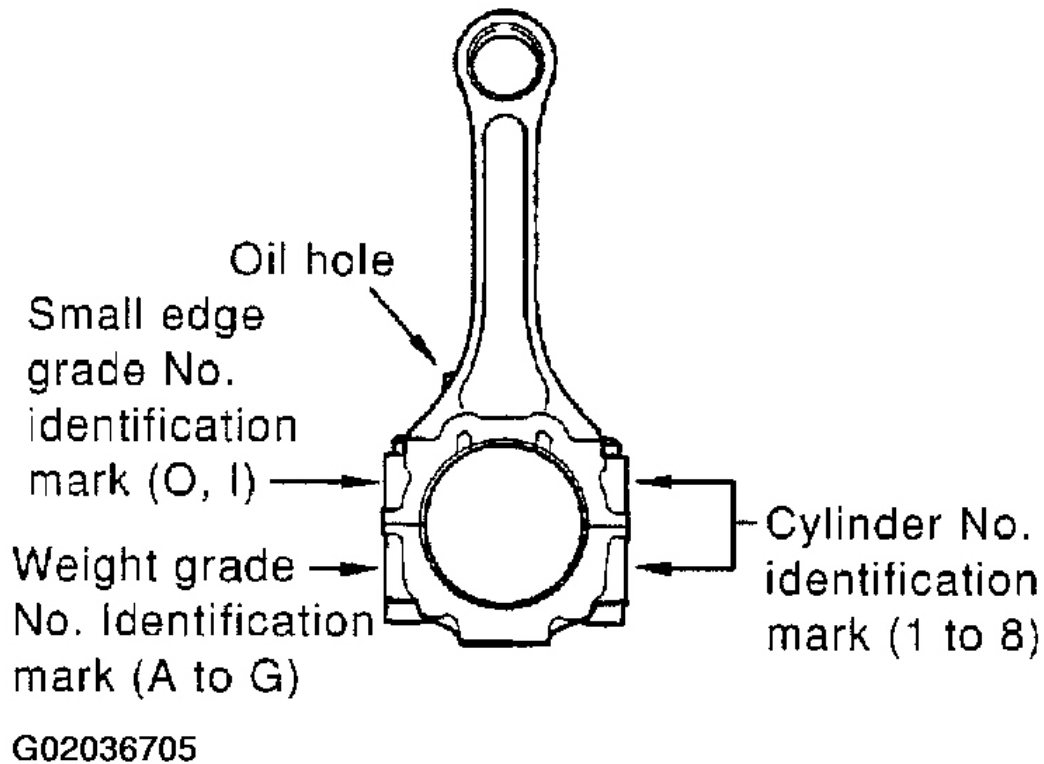


Fig. 170: Installing Connecting Rod Cap
Courtesy of NISSAN MOTOR CO., U.S.A.

15. Tighten the connecting rod nuts as follows:
 - a. Apply engine oil to the threads and seats of the connecting rod bolts and nuts.
 - b. Tighten nuts to 13.7 to 15.7 N.m (1.4 to 1.6 kg-m, 10 to 12 ft-lb).
 - c. Put mating (with paint) on each nut and connecting rod cap, all in the same direction (when using a protractor).
 - d. Then all nuts 60 to 65 degrees clockwise [target: 60 degrees] (angle tightening).

CAUTION: Always use either an angle wrench or protractor. Avoid tightening based on visual check alone.

- After tightening the nuts, make sure that the crankshaft rotates smoothly.
- Check the connecting rod side clearance. Refer to , "CONNECTING ROD SIDE CLEARANCE".

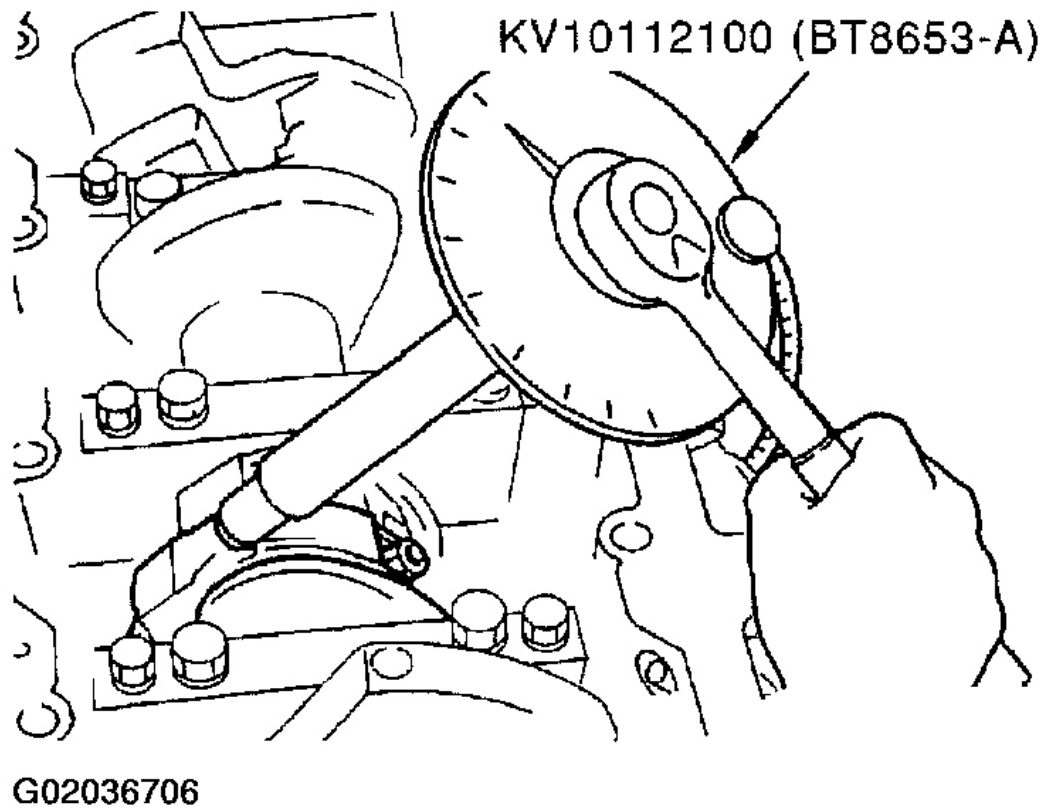


Fig. 171: Checking Nut Angle
Courtesy of NISSAN MOTOR CO., U.S.A.

16. Install knock sensor.

- Make sure that there is no foreign material on the cylinder block mating surface and the back surface of the knock sensor.
- Install it with its connector facing the rear side.
- Do not tighten the mounting bolts while holding the connector.
- Make sure that the knock sensor does not interfere with other-parts.
- Install the sub-harness with its shorter branch line to the RH bank.

CAUTION: If any impact by dropping is applied to the knock sensor, replace it with new one.


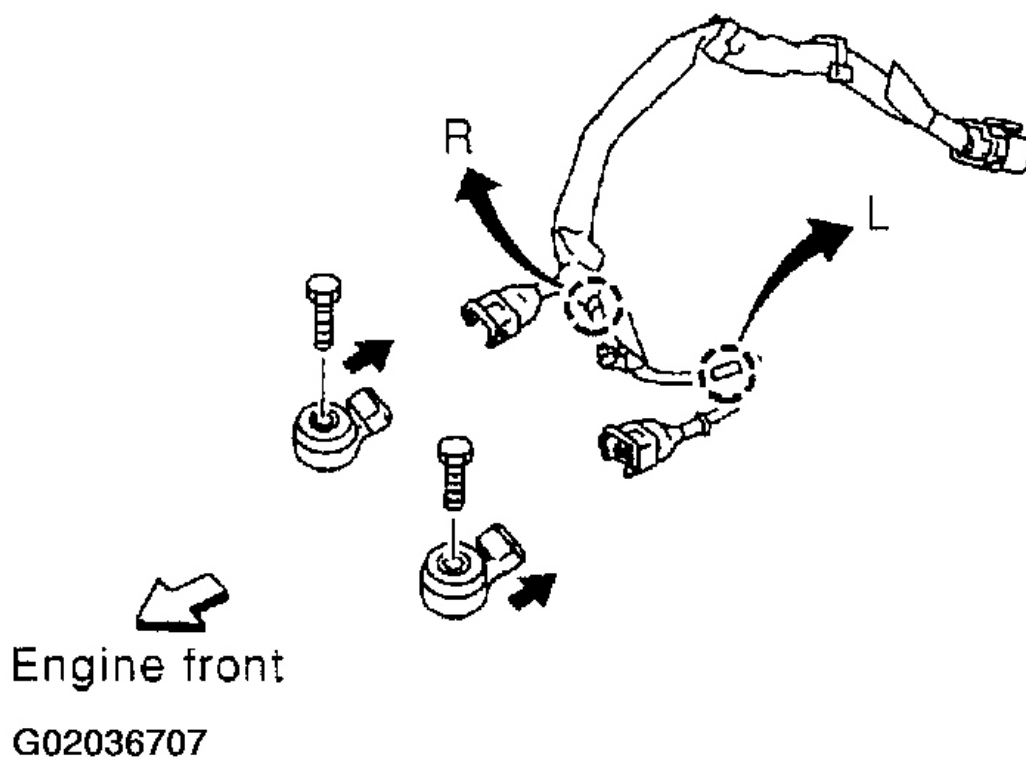


Fig. 172: Installing Knock Sensor
Courtesy of NISSAN MOTOR CO., U.S.A.


17. Install followings in reverse order of removal.
18. Remove engine assembly from engine stand.
19. Install drive plate.
 - Align guide pin of crankshaft rear end with pin holes of each parts to install.

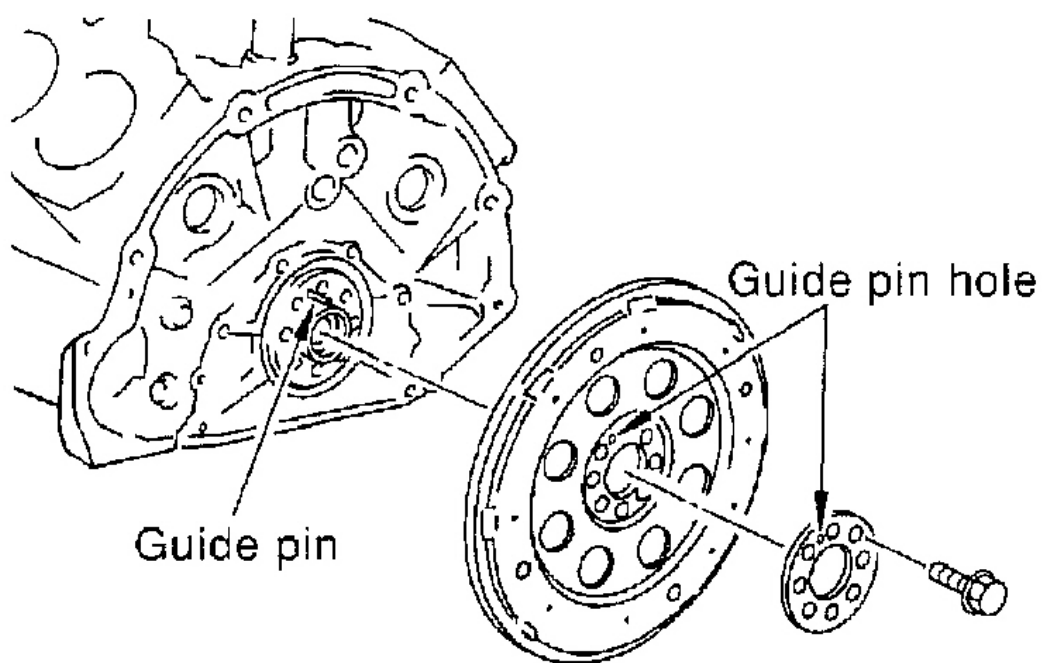

G02036708

Fig. 173: Aligning Guide Pin Of Crankshaft Rear End With Pin Holes
Courtesy of NISSAN MOTOR CO., U.S.A.

- Install drive plate, reinforcement plate and pilot converter (if not installed in step 4) as shown in figure.
- Using drift of 33 mm (1.30 in), push pilot converter into the end.
- Face chamfered or rounded edge side to crankshaft.

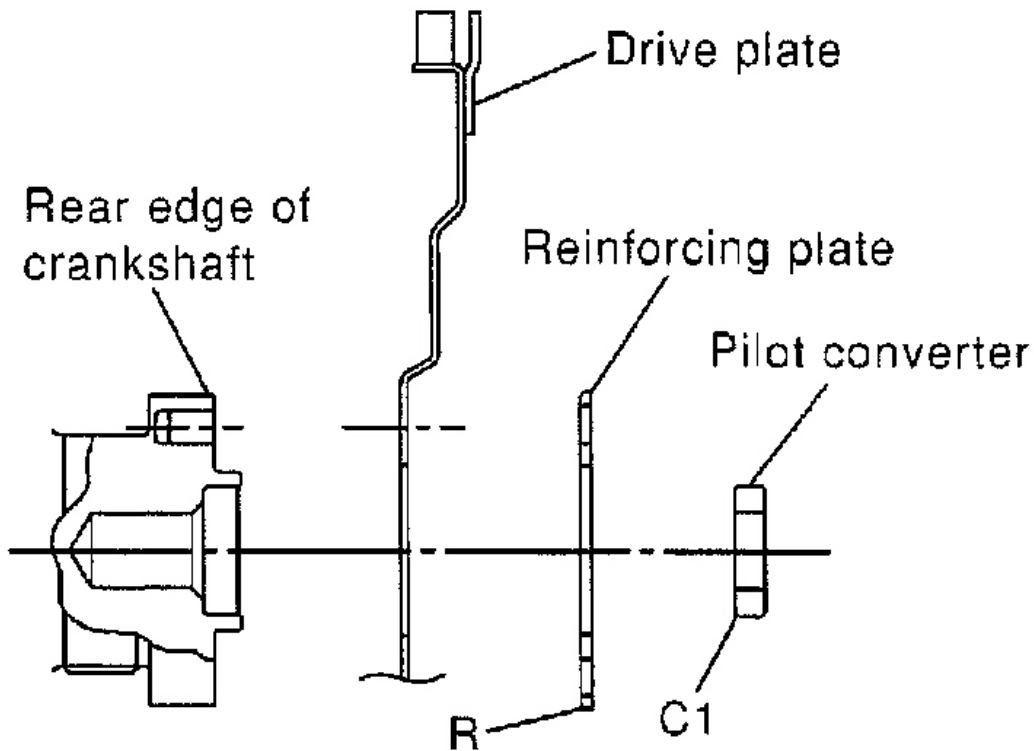

G02036709

Fig. 174: Installing Drive Plate, Reinforcement Plate And Pilot Converter
 Courtesy of NISSAN MOTOR CO., U.S.A.

HOW TO SELECT PISTON AND BEARING

DESCRIPTION

Connecting points	Connecting parts	Selection items	Selection methods
Between cylinder block to crankshaft	Main bearing	Main bearing grade (bearing thickness)	Determined by match of cylinder block bearing housing grade (inner diameter of housing) and crankshaft journal grade (outer diameter of journal)
Between crankshaft to connecting rod	Connecting rod bearing	Connecting rod bearing grade (bearing thickness)	Connecting rod bearing grade = crankshaft pin grade (outer diameter of pin). No grade exists for inner diameter of connecting rod large end.

G02036710

Fig. 175: Piston And Bearing Description Table (1 Of 2)

Courtesy of NISSAN MOTOR CO., U.S.A.

Connecting points	Connecting parts	Selection items	Selection methods
Between cylinder block to piston	Piston and piston pin assembly. The piston is available together with piston pin as an assembly.	Piston grade (piston outer diameter)	Piston grade = cylinder bore grade (inner diameter of bore)
*Between piston to connecting rod	---	---	---

G02036711

Fig. 176: Piston And Bearing Description Table (2 Of 2)


Courtesy of NISSAN MOTOR CO., U.S.A.

- The identification grade stamped on each part is the grade for the dimension measured in new condition. This grade cannot apply to reused parts.
- For reused or repaired parts, measure the dimension accurately. Determine the grade by comparing the measurement with the values of each selection table.
- For details of the measurement method of each part, the reuse standards, and the selection method of the selective fitting parts, refer to the text.

HOW TO SELECT PISTON

Piston Selective Fitting When New Cylinder Block is Used:

- Check the cylinder bore grade on the rear upper side between cylinder block banks, and select the piston of the same grade.

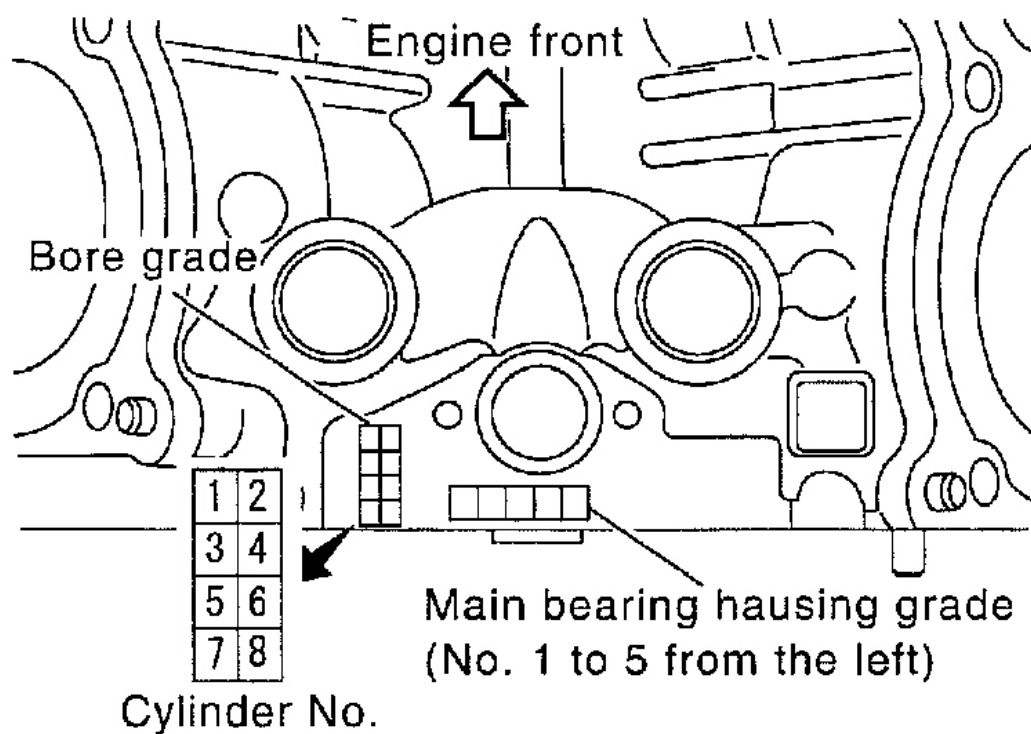

G02036712

Fig. 177: Identifying Cylinder Bore Grade On The Rear Upper Side
Courtesy of NISSAN MOTOR CO., U.S.A.

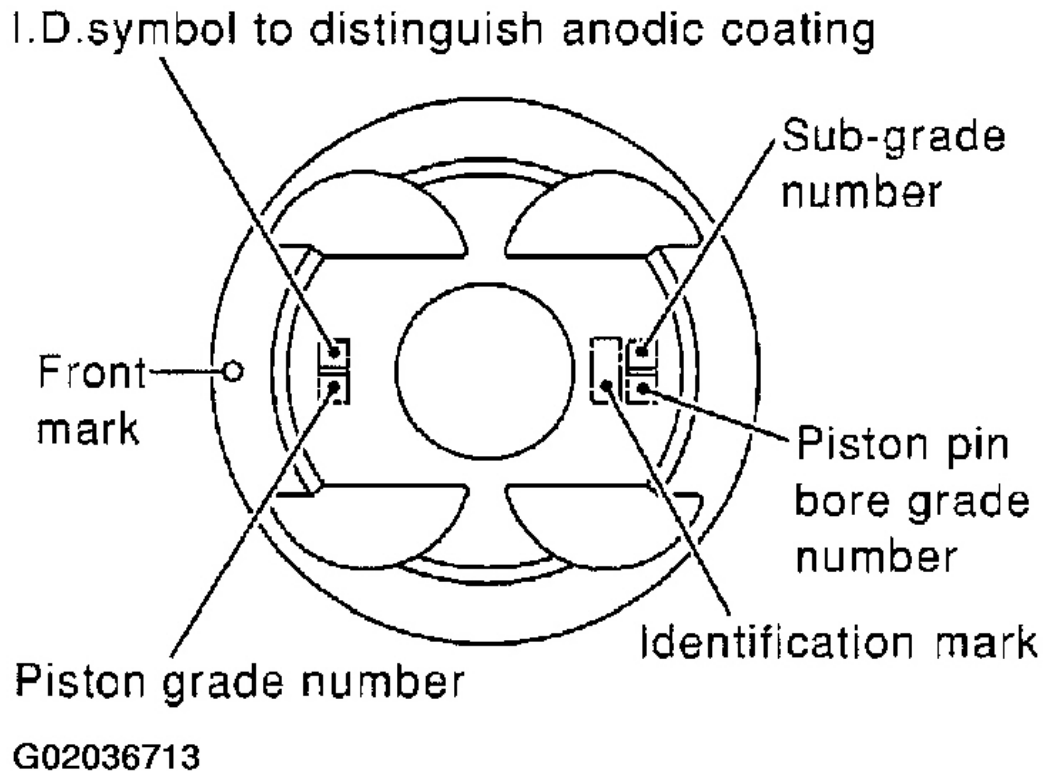


Fig. 178: Identifying Piston Mark
 Courtesy of NISSAN MOTOR CO., U.S.A.

When Cylinder Block is Reused:

1. Measure the cylinder block bore inner diameter.
2. Determine the bore grade by comparing the measurement with the values under the "Cylinder bore inner diameter" of the piston selection table. Select the piston of the same grade.

Piston Selection Table

Unit: mm (in)

Grade number (Mark)	1	2	3
Inner diameter of cylinder bore	93.000-93.010 (3.6614-3.6618)	93.010-93.020 (3.6618-3.6622)	93.020-93.030 (3.6622-3.6626)
Outer diameter of piston	92.980-92.990 (3.6606-3.6610)	92.990-93.000 (3.6610-3.6614)	93.000-93.010 (3.6614-3.6618)

G02036714

Fig. 179: Piston Selection Table
 Courtesy of NISSAN MOTOR CO., U.S.A.

NOTE:

- The piston is available together with piston pin as an assembly.
- The piston pin (piston pin bore) grade is provided only for the parts installed at the plant. For service parts, no grades can be selected (Only 0 grade is available).

HOW TO SELECT CONNECTING ROD BEARING

When New Connecting Rod and Crankshaft are Used:


- Compare the pin diameter grade of the crankshaft front surface with the values of the selection table of connecting rod bearing.

NOTE:

There is no grading for connecting rod big end.

Journal dia. grade
(No. 1 to 5
from left)

Pin dia. grade
(No. 1 to 4 from left)

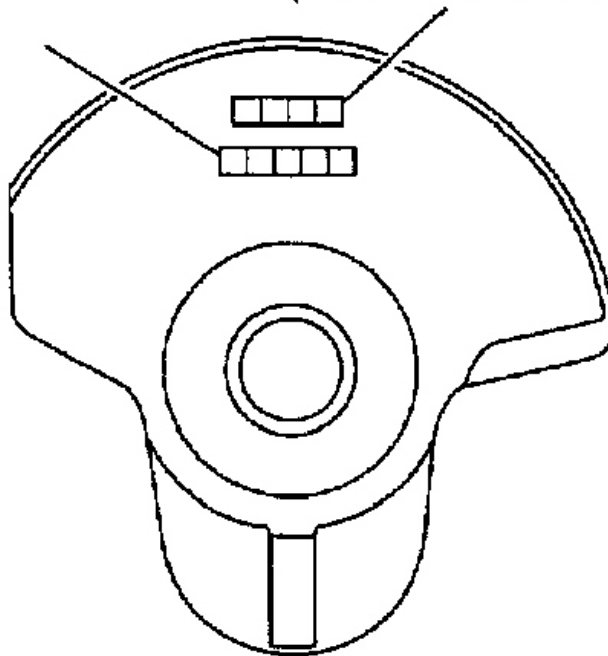

G02036715

Fig. 180: Identifying Pin Diameter Grade Of The Crankshaft Front Surface
Courtesy of NISSAN MOTOR CO., U.S.A.

When Crankshaft and Connecting Rod are Reused:

1. Measure the pin outer diameter of the crankshaft.
2. Compare the measurement with the values of the selection table of connecting rod bearing.

Selection Table of Connecting Rod Bearing

Unit: mm (in)

Connecting rod big end inner diameter		55.000 - 55.013 (2.1654 - 2.1659)
Crankshaft pin outer diameter	Grade (Mark)	—(No grade)
51.968 - 51.974 (2.0460 - 2.0462)	0	Bearing grade No. 0 Bearing thickness range: 1.500 - 1.503 (0.00591 - 0.0592) Color: No color
51.962 - 51.968 (2.0457 - 2.0460)	1	Bearing grade No.1 Bearing thickness range: 1.503 - 1.506 (0.0592 - 0.0593) Color: Brown
51.956 - 51.962 (2.0455 - 2.0457)	2	Bearing grade No.2 Bearing thickness range: 1.506 - 1.509 (0.0593 - 0.0594) Color: Green

G02036716

Fig. 181: Selection Table Of Connecting Rod Bearing
 Courtesy of NISSAN MOTOR CO., U.S.A.

NOTE:

- (At shipment from the plant) For an engine, all the connecting rod assemblies are in the same weight class. For service parts, no weight grades can be selected.

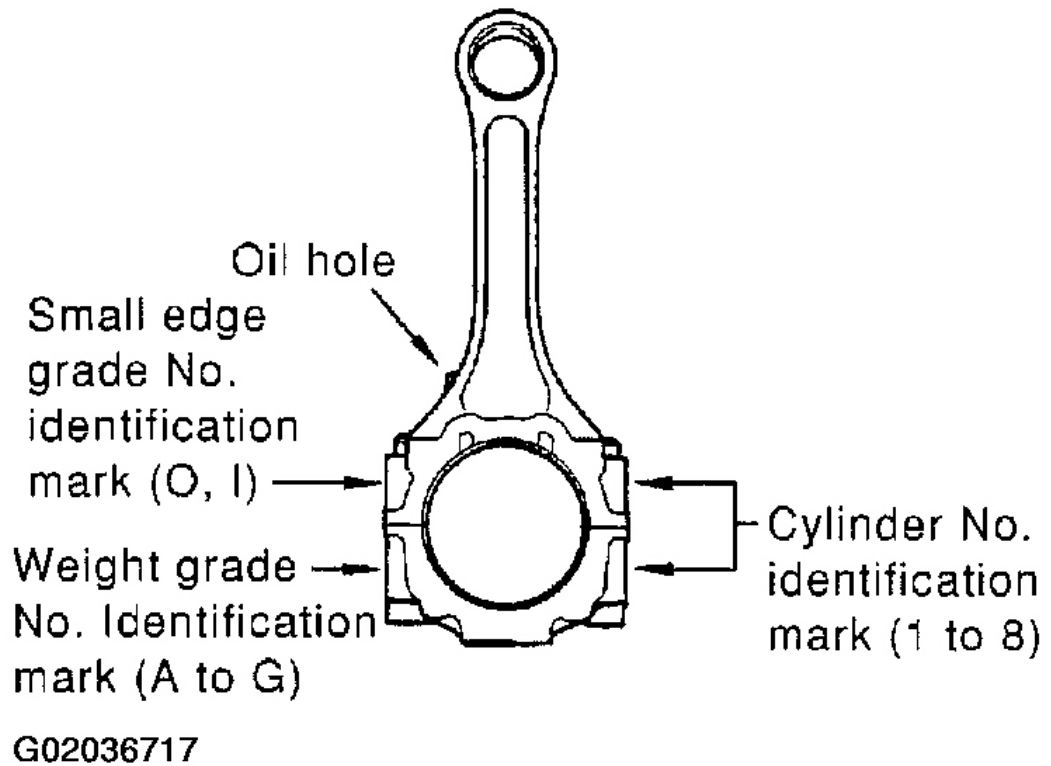


Fig. 182: Identifying Connecting Rod Assemblies
Courtesy of NISSAN MOTOR CO., U.S.A.

Under Size Bearings Usage Guide

- When the specified oil clearance is not obtained with standard size connecting rod bearings, use under-size (US) bearings.
- When using undersize bearings, measure the bearing inner diameters with bearings installed, and grind the crankshaft pin so that the oil clearance satisfies the standard.


Bearing undersize table

Unit: mm (in)		
Size		Thickness
US	0.25 (0.0098)	1.626 - 1.634 (0.0640 - 0.0643)

G02036718

Fig. 183: Bearing Undersize Table
Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION: In grinding the crankshaft pin to use undersize bearings, do not damage the fillet R (All crankshaft pins).

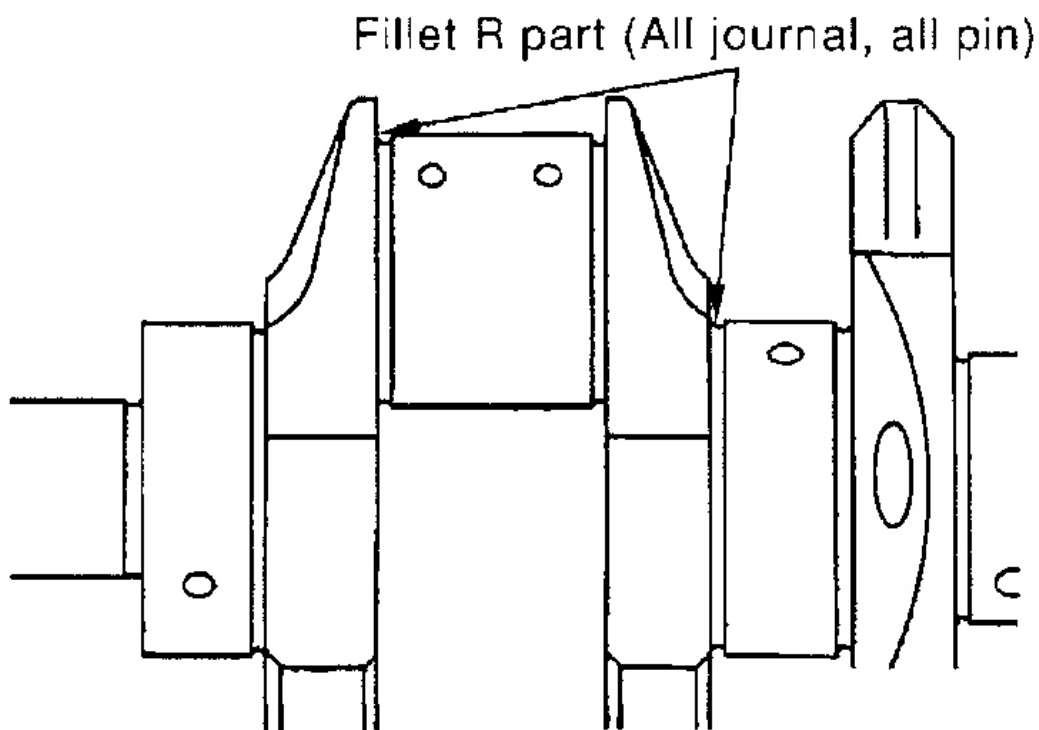


G02036719

Fig. 184: Identifying Grinding The Crankshaft Pin Undersize Bearings
Courtesy of NISSAN MOTOR CO., U.S.A.

HOW TO SELECT MAIN BEARING

When New Cylinder Block and Crankshaft are Used:


1. Apply main bearing housing grade on upper rear side between cylinder block banks to row in main bearing selection table.

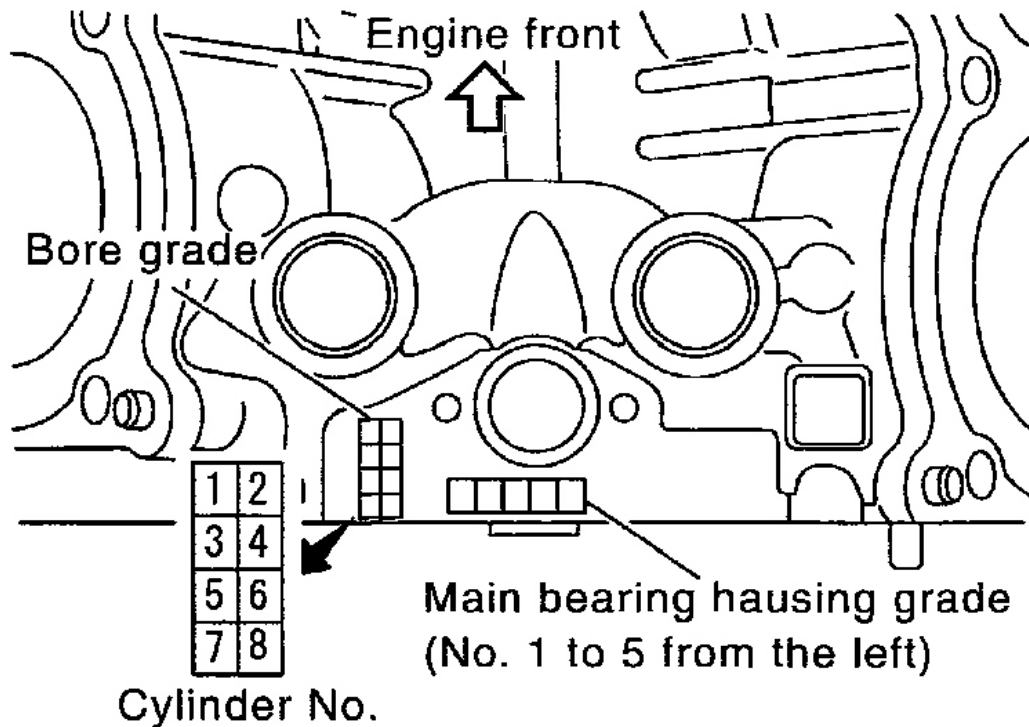

G02036720

Fig. 185: Identifying Main Bearing Housing Grade
Courtesy of NISSAN MOTOR CO., U.S.A.

2. Apply journal diameter grade on crankshaft front to column in main bearing selection table.

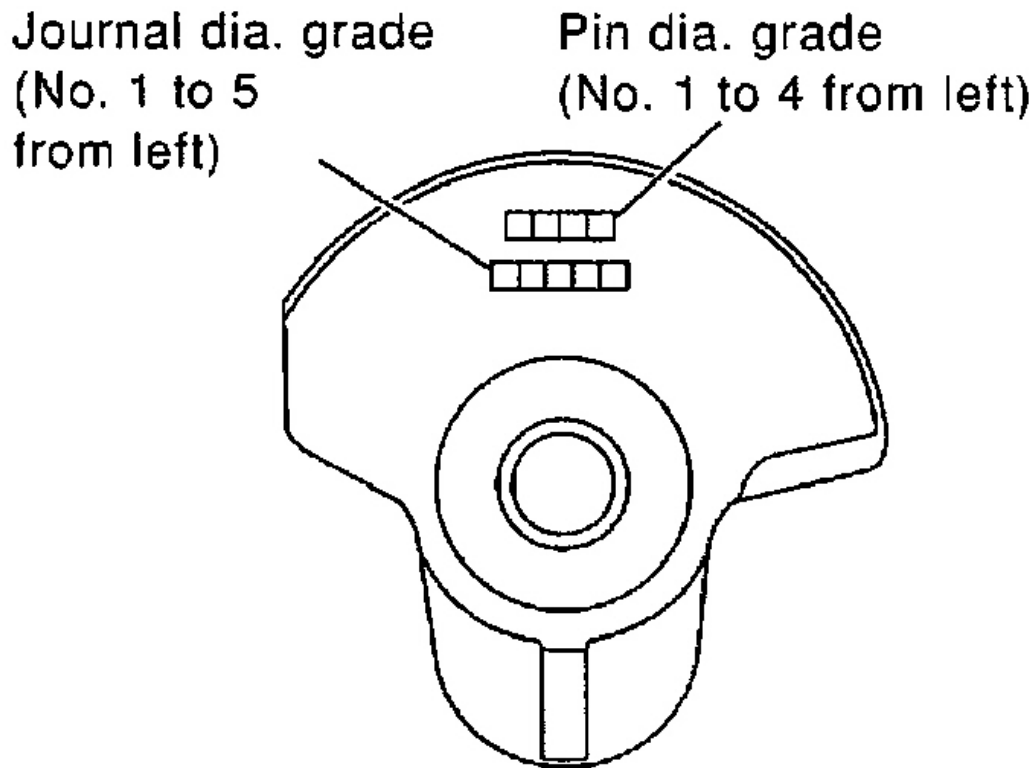

G02036721

Fig. 186: Identifying Journal Diameter Grade On Crankshaft Front
 Courtesy of NISSAN MOTOR CO., U.S.A.

3. Find sign at crossing of row and column in main bearing selection table.

CAUTION:

- Initial clearance for No.1, 5 journal and No. 2, 3, 4 journal is different. Use two different selection lists for each part.
- No. 1, 5 journal and No. 2, 3, 4 journal have the same signs but different measures. Do not confuse.

4. Apply sign at crossing in above step 3 to main bearing grade table.

NOTE:

- Grade list applies to all journals.
- Service parts is available as a set of both upper and lower.

When Cylinder Block and Crankshaft are Reused:

1. Measure inner diameter of cylinder block main bearing housing and outer diameter of crankshaft journal.
2. Apply measurement in above step 1 to main bearing selection table.
3. Follow step 3 and later in "When new cylinder block and crankshaft are used".

Main Bearings Selection Table (No.1 and No.5 journal)

Cylinder block main bearing housing inner diameter		I.D. mark	I.D. mark																									
			Inner diameter Unit : mm (in)																									
			Outer diameter Unit : mm (in)																									
			Outer diameter Unit : mm (in)																									
I.D. mark	Outer diameter Unit : mm (in)	A	B	C	D	E	F	G	H	J	K	L	M	N	P	R	S	T	U	V	W	X	Y	I	2			
		68.944 - 68.945 (2.7143 - 2.7144)	68.945 - 68.946 (2.7144 - 2.7144)	68.946 - 68.947 (2.7144 - 2.7144)	68.947 - 68.948 (2.7144 - 2.7145)	68.948 - 68.949 (2.7145 - 2.7145)	68.949 - 68.950 (2.7145 - 2.7146)	68.950 - 68.951 (2.7146 - 2.7146)	68.951 - 68.952 (2.7146 - 2.7146)	68.952 - 68.953 (2.7146 - 2.7147)	68.953 - 68.954 (2.7147 - 2.7147)	68.954 - 68.955 (2.7147 - 2.7148)	68.955 - 68.956 (2.7148 - 2.7148)	68.956 - 68.957 (2.7148 - 2.7148)	68.957 - 68.958 (2.7148 - 2.7149)	68.958 - 68.959 (2.7149 - 2.7149)	68.959 - 68.960 (2.7149 - 2.7150)	68.960 - 68.961 (2.7150 - 2.7150)	68.961 - 68.962 (2.7150 - 2.7150)	68.962 - 68.963 (2.7150 - 2.7151)	68.963 - 68.964 (2.7151 - 2.7151)	68.964 - 68.965 (2.7151 - 2.7152)	68.965 - 68.966 (2.7152 - 2.7152)	68.966 - 68.967 (2.7152 - 2.7152)	68.967 - 68.968 (2.7152 - 2.7153)			
G	63.964 - 63.963 (2.5183 - 2.5182)	1	1	12	12	12	2	2	2	23	23	23	3	3	3	34	34	34	4	4	4	45	45	45	5	5		
H	63.963 - 63.962 (2.5182 - 2.5182)	1	12	12	12	2	2	2	23	23	23	3	3	3	34	34	34	4	4	4	45	45	45	5	5	5		
J	63.962 - 63.961 (2.5182 - 2.5181)	12	12	12	2	2	2	23	23	23	3	3	3	34	34	34	4	4	4	45	45	45	5	5	5	5		
K	63.961 - 63.960 (2.5181 - 2.5181)	12	12	2	2	2	23	23	23	3	3	3	34	34	34	4	4	4	45	45	45	5	5	5	5	56		
L	63.960 - 63.959 (2.5181 - 2.5181)	12	2	2	2	23	23	23	3	3	3	34	34	34	4	4	4	45	45	45	5	5	5	5	56	56		
M	63.959 - 63.958 (2.5181 - 2.5180)	2	2	2	23	23	23	3	3	3	34	34	34	4	4	4	45	45	45	5	5	5	5	56	56	56		
N	63.958 - 63.957 (2.5180 - 2.5180)	2	2	23	23	23	3	3	3	34	34	34	4	4	4	45	45	45	5	5	5	5	56	56	56	6		
P	63.957 - 63.956 (2.5180 - 2.5179)	2	23	23	23	3	3	3	34	34	34	4	4	4	45	45	45	5	5	5	5	56	56	56	6	6		
R	63.956 - 63.955 (2.5179 - 2.5179)	23	23	23	3	3	3	34	34	34	4	4	4	45	45	45	5	5	5	5	56	56	56	6	6	6		
S	63.955 - 63.954 (2.5179 - 2.5179)	23	23	3	3	3	34	34	34	4	4	4	45	45	45	5	5	5	5	56	56	56	6	6	6	67		
T	63.954 - 63.953 (2.5179 - 2.5178)	23	3	3	3	34	34	34	4	4	4	45	45	45	5	5	5	5	56	56	56	6	6	6	6	67		
U	63.953 - 63.952 (2.5178 - 2.5178)	3	3	3	34	34	34	4	4	4	45	45	45	5	5	5	5	56	56	56	6	6	6	6	67	67		
V	63.952 - 63.951 (2.5178 - 2.5178)	3	3	34	34	34	4	4	4	4	45	45	45	5	5	5	5	56	56	56	6	6	6	6	67	67		
W	63.951 - 63.950 (2.5178 - 2.5177)	3	34	34	34	4	4	4	45	45	45	5	5	5	56	56	56	6	6	6	6	67	67	67	7	7		
X	63.950 - 63.949 (2.5177 - 2.5177)	34	34	34	4	4	4	45	45	45	5	5	5	56	56	56	6	6	6	6	67	67	67	7	7	7		
Y	63.949 - 63.948 (2.5177 - 2.5176)	34	34	4	4	4	45	45	45	5	5	5	56	56	56	6	6	6	6	67	67	67	7	7	7	78		
1	63.948 - 63.947 (2.5176 - 2.5176)	34	4	4	4	45	45	45	5	5	5	56	56	56	6	6	6	6	67	67	67	7	7	7	7	78		
2	63.947 - 63.946 (2.5176 - 2.5176)	4	4	4	45	45	45	5	5	5	56	56	56	6	6	6	6	67	67	67	7	7	7	7	7	78		
3	63.946 - 63.945 (2.5176 - 2.5175)	4	4	45	45	45	5	5	5	56	56	56	6	6	6	6	67	67	67	7	7	7	7	78	78	8		
4	63.945 - 63.944 (2.5175 - 2.5175)	4	45	45	45	5	5	5	56	56	56	6	6	6	6	67	67	67	7	7	7	7	78	78	78	8		
5	63.944 - 63.943 (2.5175 - 2.5174)	45	45	45	5	5	5	56	56	56	6	6	6	6	67	67	67	7	7	7	7	78	78	78	8	8		
6	63.943 - 63.942 (2.5174 - 2.5174)	45	45	5	5	5	56	56	56	6	6	6	6	67	67	67	7	7	7	7	78	78	78	8	8	8		
7	63.942 - 63.941 (2.5174 - 2.5174)	45	5	5	5	56	56	56	6	6	6	67	67	67	7	7	7	7	78	78	78	8	8	8	8	8		
9	63.941 - 63.940 (2.5174 - 2.5173)	5	5	5	56	56	56	6	6	6	67	67	67	7	7	7	7	78	78	78	8	8	8	8	8	8		

G02036722

Fig. 187: Main Bearings Selection Table (No.1 And No.5 Journal)
 Courtesy of NISSAN MOTOR CO., U.S.A.

Main Bearings Selection Table (No.2, 3 and 4 journal)

2002 Infiniti Q45

2002 ENGINE Engine Mechanical - Q45

Unit: mm (in)

Grade number	Thickness	Identification color (UPR/LWR)	Remarks
0	2.483 - 2.486 (0.0978 - 0.0979)	Black	Grade and color are the same for upper and lower bearings.
1	2.486 - 2.489 (0.0979 - 0.0980)	Brown	
2	2.489 - 2.492 (0.0980 - 0.0981)	Green	
3	2.492 - 2.495 (0.0981 - 0.0982)	Yellow	
4	2.495 - 2.498 (0.0982 - 0.0983)	Blue	
5	2.498 - 2.501 (0.0983 - 0.0985)	Pink	
6	2.501 - 2.504 (0.0985 - 0.0986)	Purple	
7	2.504 - 2.507 (0.0986 - 0.0987)	White	
8	2.507 - 2.510 (0.0987 - 0.0988)	Red	
01	UPP	2.483 - 2.486 (0.0978 - 0.0979)	Grade and color are different for upper and lower bearings.
	LWR	2.486 - 2.489 (0.0979 - 0.0980)	
12	UPR	2.486 - 2.489 (0.0979 - 0.0980)	
	LWR	2.489 - 2.492 (0.0980 - 0.0981)	
23	UPR	2.489 - 2.492 (0.0980 - 0.0981)	
	LWR	2.492 - 2.495 (0.0981 - 0.0982)	
34	UPR	2.492 - 2.495 (0.0981 - 0.0982)	
	LWR	2.495 - 2.498 (0.0982 - 0.0983)	
45	UPR	2.495 - 2.498 (0.0982 - 0.0983)	
	LWR	2.498 - 2.501 (0.0983 - 0.0985)	
56	UPR	2.498 - 2.501 (0.0983 - 0.0985)	
	LWR	2.501 - 2.504 (0.0985 - 0.0986)	
67	UPR	2.501 - 2.504 (0.0985 - 0.0986)	
	LWR	2.504 - 2.507 (0.0986 - 0.0987)	
78	UPR	2.504 - 2.507 (0.0986 - 0.0987)	
	LWR	2.507 - 2.510 (0.0987 - 0.0988)	

G02036724

Fig. 189: Main Bearings Grade Table (All Journals)
Courtesy of NISSAN MOTOR CO., U.S.A.

Use Under Size Bearing Usage Guide

- Use under size (US) bearing when oil clearance with standard size main bearing is not within specification.
- When using under size (US) bearing, measure inner diameter of bearing installed and grind journal until oil clearance falls within specification.

Bearing under size table

Unit: mm (in)


Size		Thickness
US	0.25 (0.0098)	2.618 - 2.626 (0.1031 - 0.1034)

G02036725

Fig. 190: Bearing Under Size Table

Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION: Do not damage fillet R when grinding crankshaft journal in order to use undersized bearing (All journals).

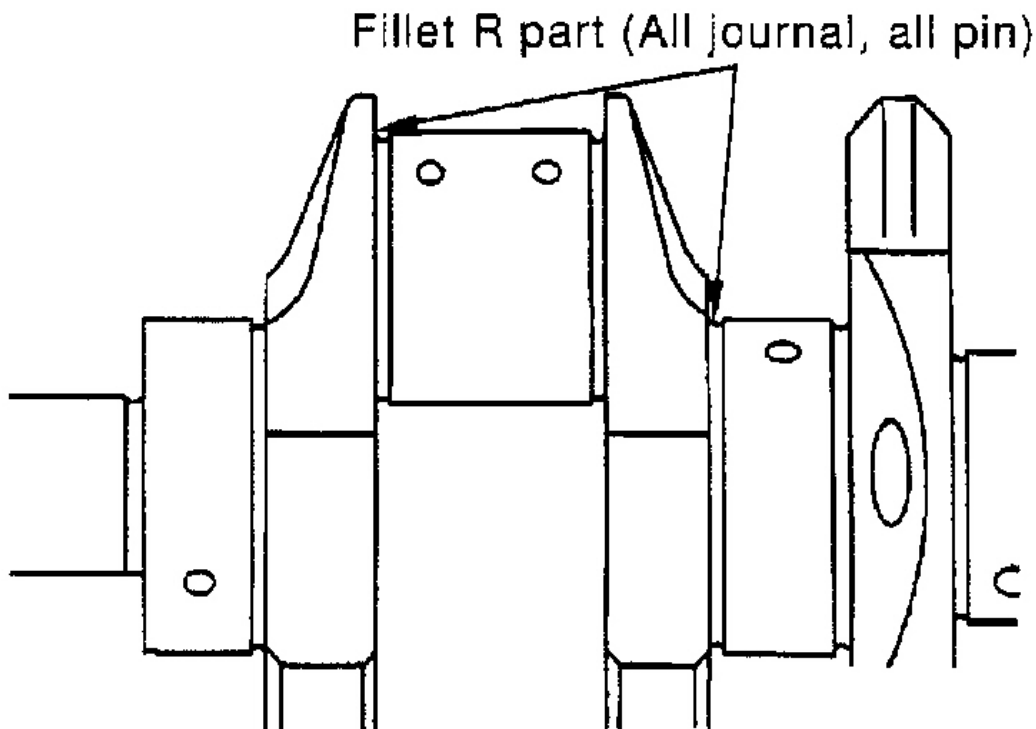

G02036726

Fig. 191: Identifying Grinding Crankshaft Journal Undersized Bearing

Courtesy of NISSAN MOTOR CO., U.S.A.

INSPECTION AFTER DISASSEMBLY


CRANKSHAFT SIDE CLEARANCE

- Using a dial gauge, measure the clearance between the thrust bearings and the crankshaft arm when the crankshaft is moved fully forward or backward.

Standard : 0.10 - 0.26 mm (0.0039 - 0.0102 in)

Limit : 0.30 mm (0.0118 in)

- If the measured value exceeds the repair limit, replace the thrust bearings, and measure again. If it still exceeds the repair limit, replace the crankshaft also.

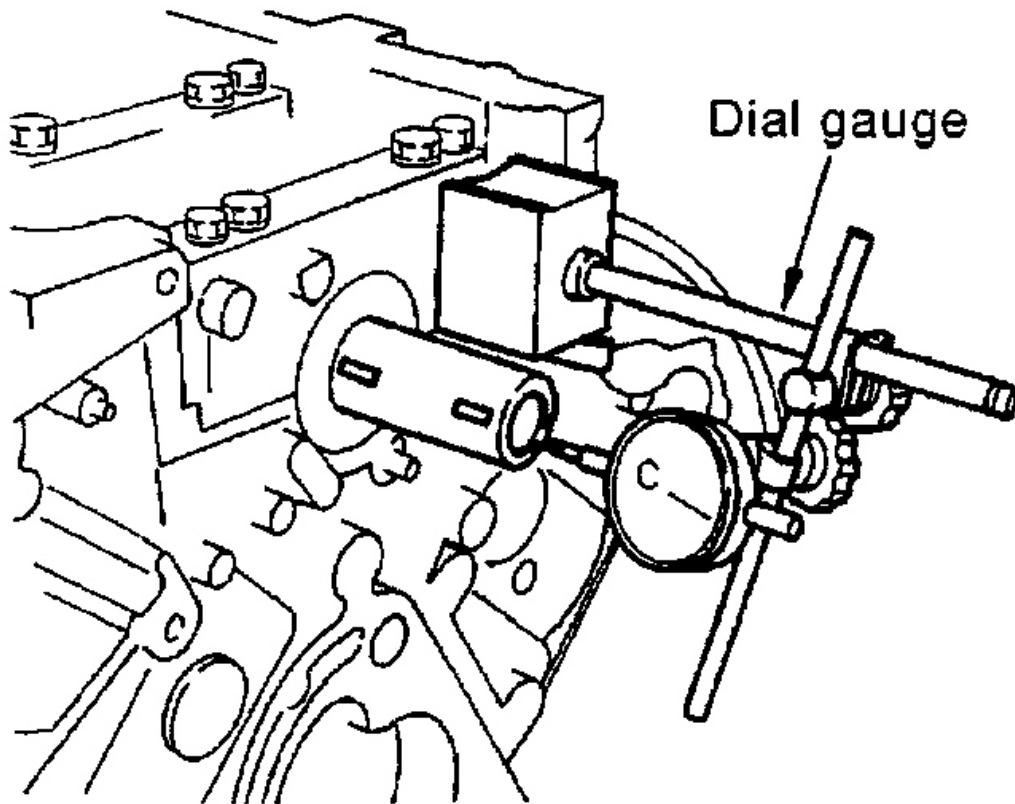

G02036727

Fig. 192: Measuring The Clearance Between The Thrust Bearings And The Crankshaft Arm
Courtesy of NISSAN MOTOR CO., U.S.A.


CONNECTING ROD SIDE CLEARANCE

- Measure side clearance between connecting rod and crankshaft arm with feeler gauge.

Standard : 0.20 - 0.35 mm (0.0079 - 0.0138 in)

Limit : 0.40 mm (0.0157 in)

- If the measured value exceeds the repair limit, replace the connecting rod bearings, and measure again. If it still exceeds the repair limit, replace the crankshaft also.

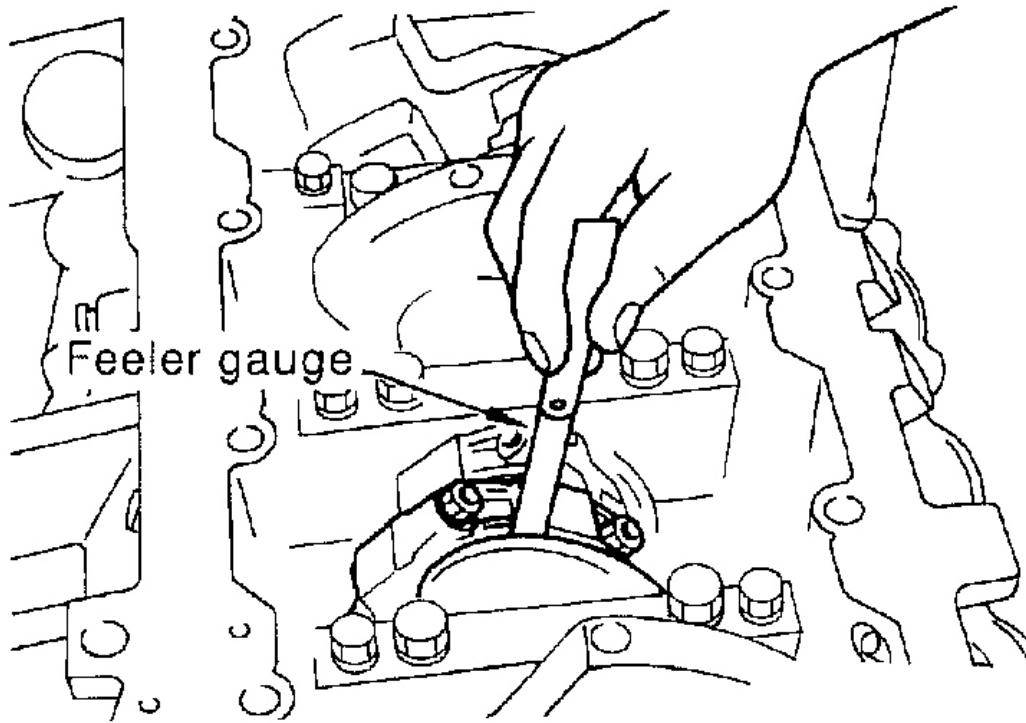

G02036728


Fig. 193: Measuring Connecting Rod Side Clearance

Courtesy of NISSAN MOTOR CO., U.S.A.

PISTON AND PISTON PIN CLEARANCE**Inner Diameter of Piston Pin**

- Measure the inner diameter of piston pin bore with an inside micrometer.

Standard : 21.993 - 22.005 mm (0.8659 - 0.8663 in)

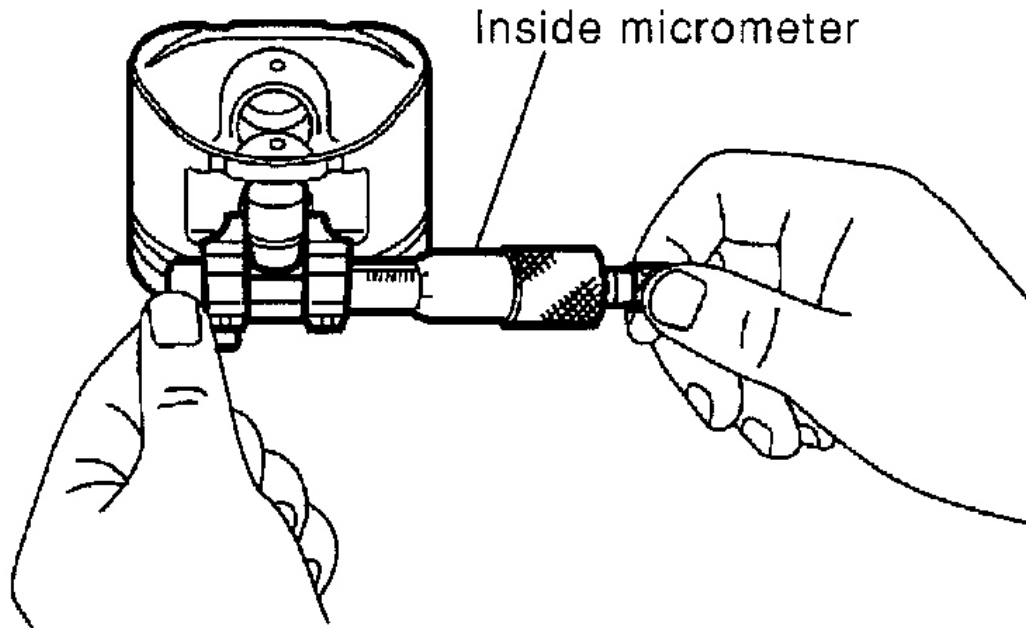


G02036729

Fig. 194: Measuring Inner Diameter Of Piston Pin
Courtesy of NISSAN MOTOR CO., U.S.A.

Outer Diameter of Piston Pin

- Measure outer diameter of piston pin with a micrometer.

Standard : 21.989 - 22.001 mm (0.8657 - 0.8662 in)

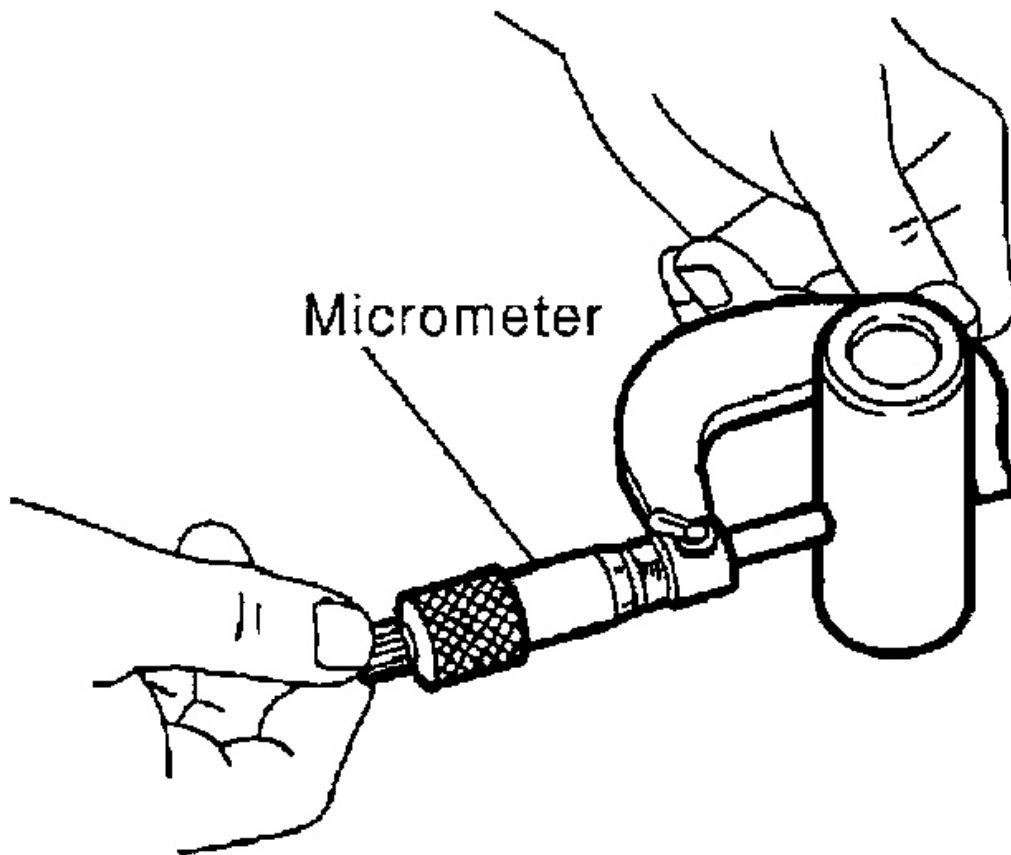

G02036730

Fig. 195: Measuring Outer Diameter Of Piston Pin
Courtesy of NISSAN MOTOR CO., U.S.A.

Piston and Piston Pin Clearance

(Piston pin clearance) = (Piston pin bore diameter) - (Outer diameter of piston pin)

Standard : 0.002 - 0.006 mm (0.0001 - 0.0002 in)

- If clearance exceeds specification, replace either or both of piston/piston pin assembly and connecting rod assembly with reference to specification of each parts.
- Refer to piston selection table to replace piston/piston pin assembly. Refer to , "**HOW TO SELECT PISTON**".
- Refer to connecting rod bearing selection table to replace connecting rod. Refer to , "**HOW TO SELECT CONNECTING ROD BEARING**".

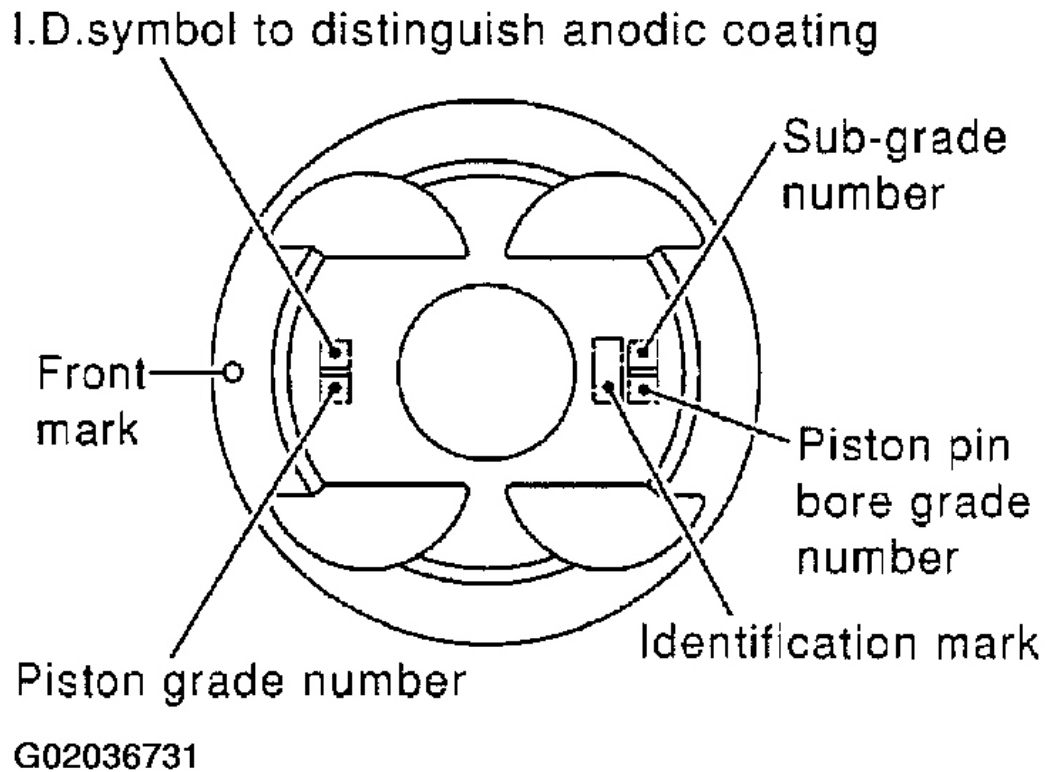


Fig. 196: Identifying Front Mark Of Piston
Courtesy of NISSAN MOTOR CO., U.S.A.

NOTE:

- The connecting rod small end grade and piston pin hole (piston pin) grade are provided only for the parts installed at the plant. For service parts, no grades can be selected. (Only 0 grade is available.)
- Refer to , "CONNECTING ROD BUSHING OIL CLEARANCE (SMALL END)" for the values for each grade at the plant.

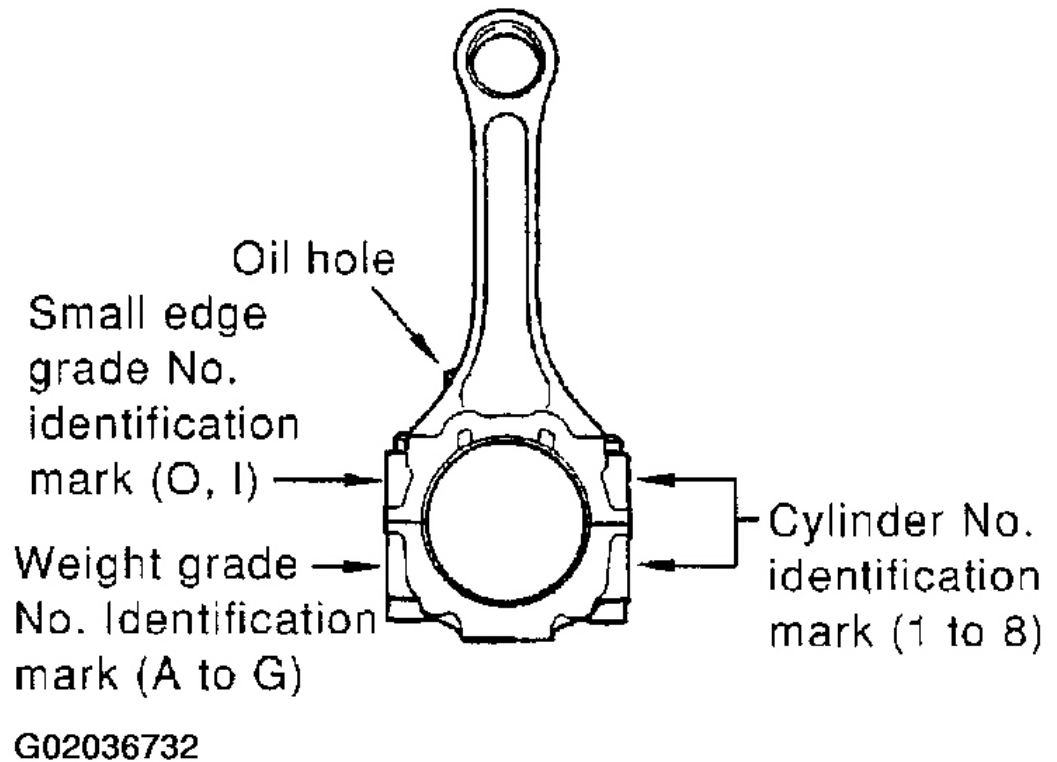


Fig. 197: Identifying Connecting Rod Assembly
Courtesy of NISSAN MOTOR CO., U.S.A.

PISTON RING SIDE CLEARANCE

- Measure side clearance of piston ring and piston ring groove with feeler gauge.

Standard:

Top ring 0.045 - 0.080 mm (0.0018 - 0.0031 in)


2nd ring 0.030 - 0.070 mm (0.0012 - 0.0028 in)

Oil ring 0.065 - 0.135 mm (0.0026 - 0.0053 in)

Limit:

Top ring 0.11 mm (0.0043 in)

2nd ring 0.10 mm (0.0039 in)

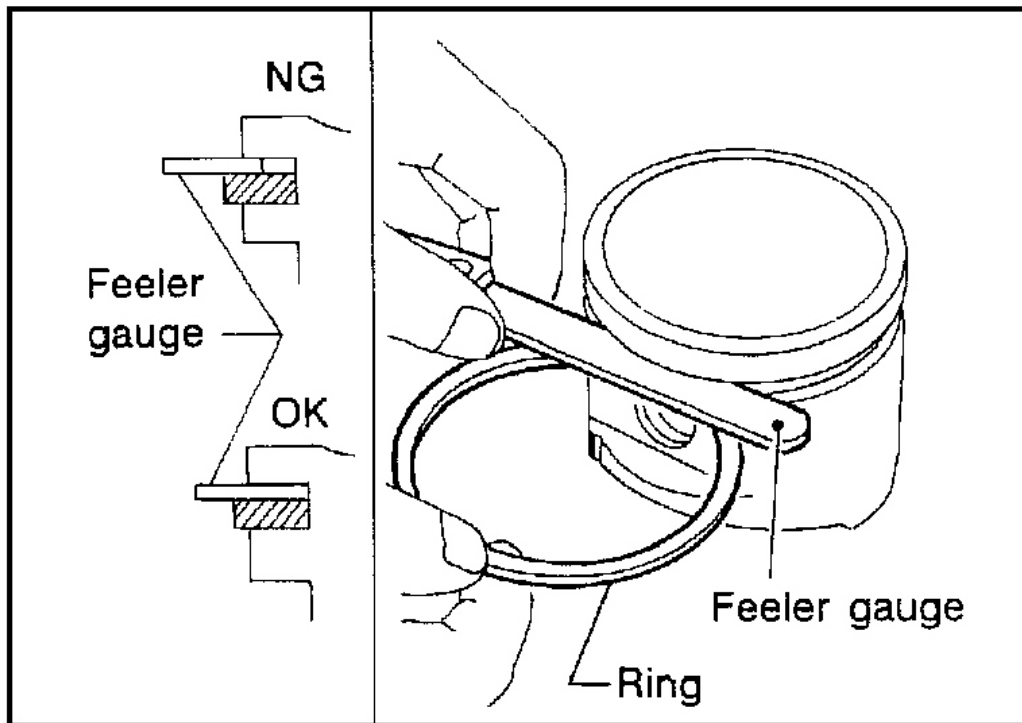

G02036733

Fig. 198: Measuring Side Clearance Of Piston Ring And Piston Ring Groove
Courtesy of NISSAN MOTOR CO., U.S.A.

- If out of specification, replace piston and/or piston ring assembly.

PISTON RING END GAP

- Check if inner diameter of cylinder bore is within specification. Refer to , "**PISTON TO CYLINDER BORE CLEARANCE**".
- Insert piston ring until middle of cylinder with piston, and measure gap.

Standard:

Top ring 0.22 - 0.32 mm (0.0087 - 0.0126 in)

2nd ring 0.32 - 0.47 mm (0.0126 - 0.0185 in)


Oil ring 0.20 - 0.60 mm (0.0079 - 0.0236 in)

Limit:

Top ring 0.56 mm (0.0220 in)

2nd ring 0.67 mm (0.0264 in)

Oil ring 0.96 mm (0.0378 in)

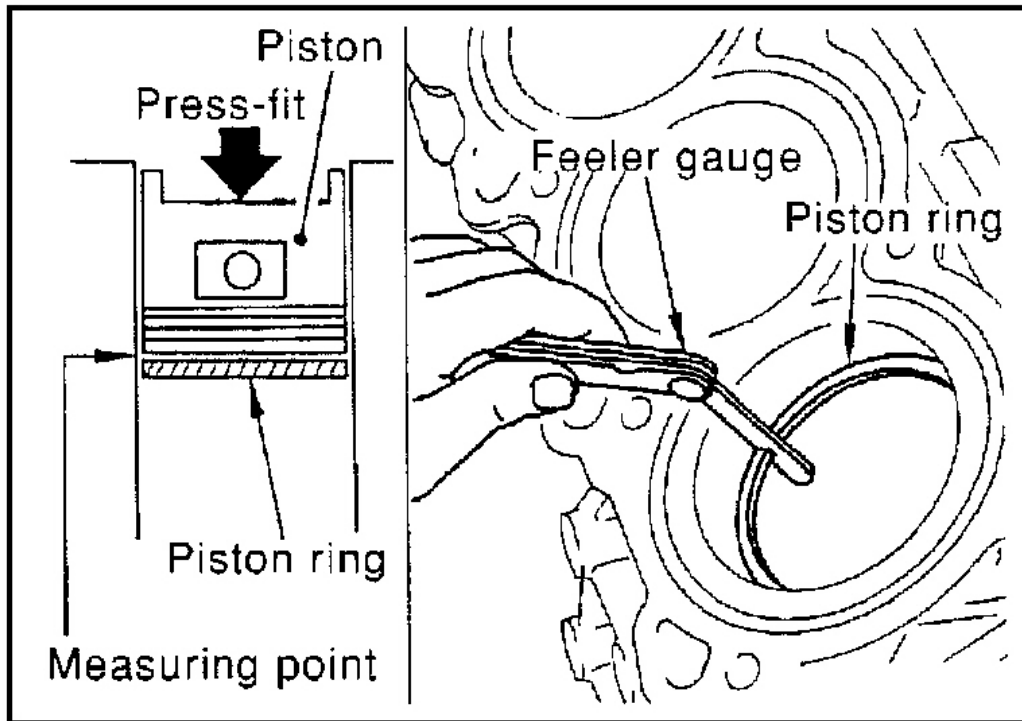

G02036734

Fig. 199: Measuring Piston Ring Gap

Courtesy of NISSAN MOTOR CO., U.S.A.

- If out of specification, replace piston ring. If gap still exceeds the limit even with a new ring, re-bore cylinder and use oversized piston and piston ring.

CONNECTING ROD BEND AND TORSION

- Check with connecting rod aligner.

Bend:

Limit 0.15 mm (0.0059 in) per 100 mm (3.94 in) length

Torsion:

Limit 0.30 mm (0.0118 in) per 100 mm (3.94 in) length

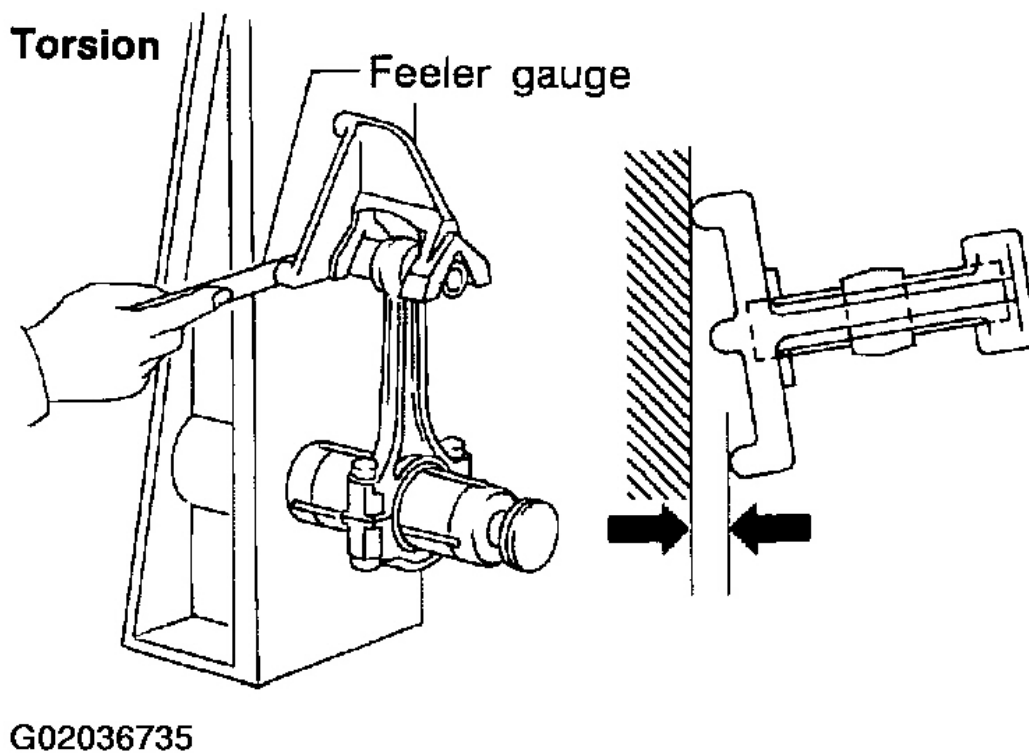


Fig. 200: Checking Connecting Rod Bend
Courtesy of NISSAN MOTOR CO., U.S.A.

- If it exceeds the limit, replace connecting rod assembly.


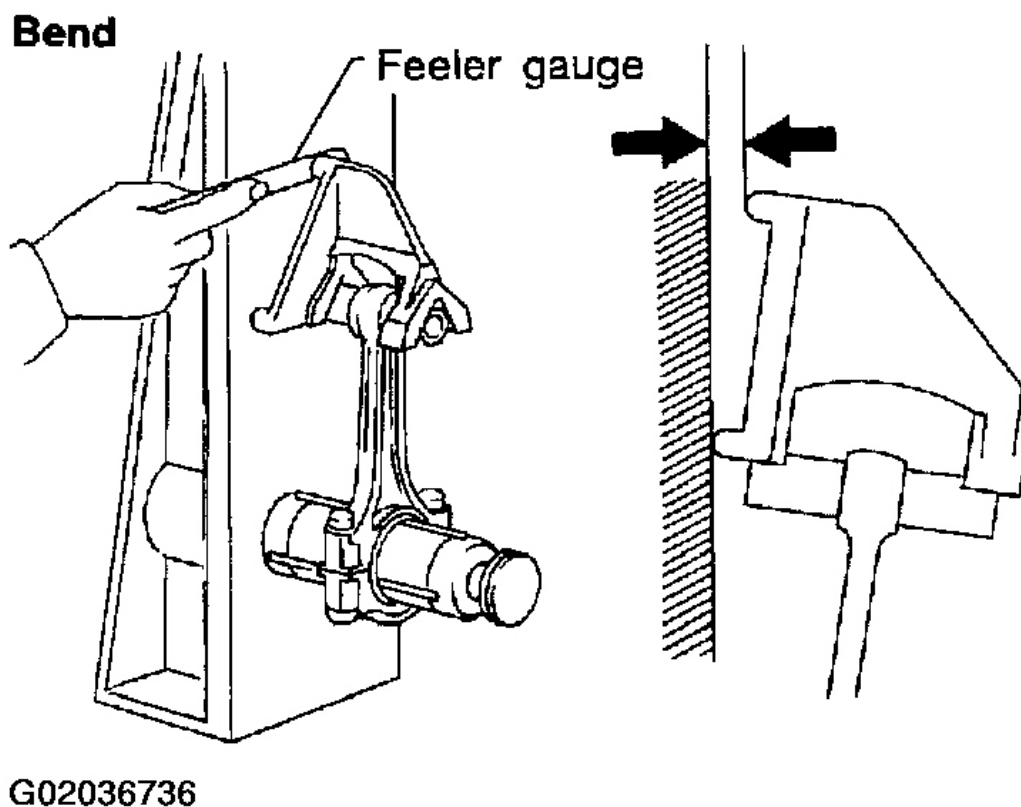


Fig. 201: Checking Connecting Rod Torsion
Courtesy of NISSAN MOTOR CO., U.S.A.

CONNECTING ROD BEARING (BIG END)

- Install the connecting rod cap without the connecting rod bearing installed. After tightening the connecting rod nut to the specified torque, measure the connecting rod large end inner diameter using an inside micrometer.

Standard : 55.000 - 55.013 mm (2.1654 - 2.1659 in)

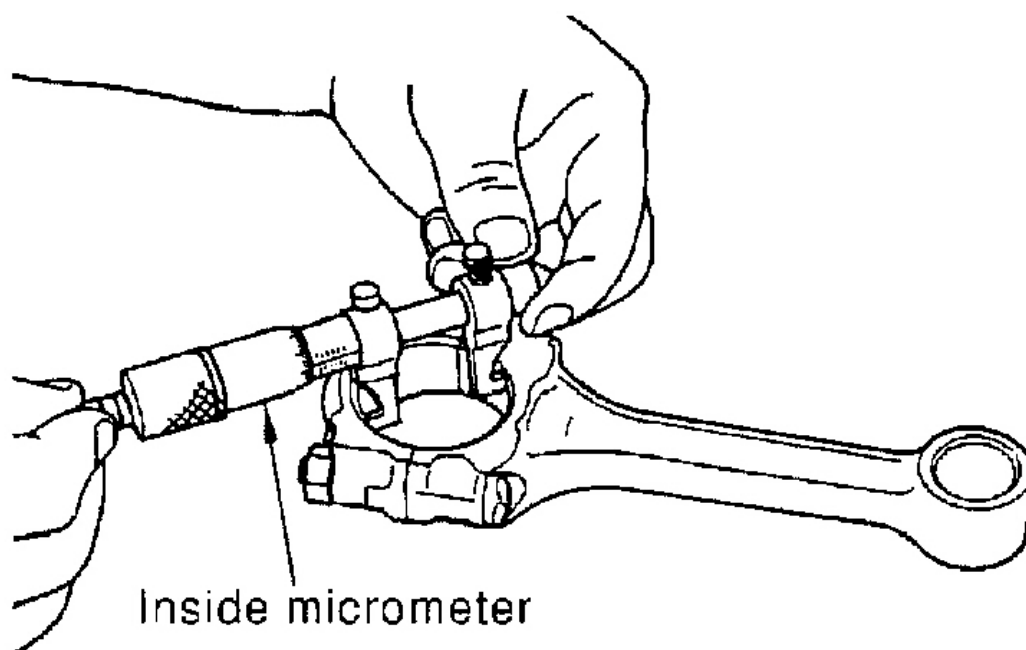

G02036737


Fig. 202: Measuring The Connecting Rod Large End Inner Diameter
Courtesy of NISSAN MOTOR CO., U.S.A.

CONNECTING ROD BUSHING OIL CLEARANCE (SMALL END)

Inner Diameter of Connecting Rod (Small End)

- Measure inner diameter of bushing.

Standard : 22.000 - 22.012 mm (0.8661 - 0.8666 in)

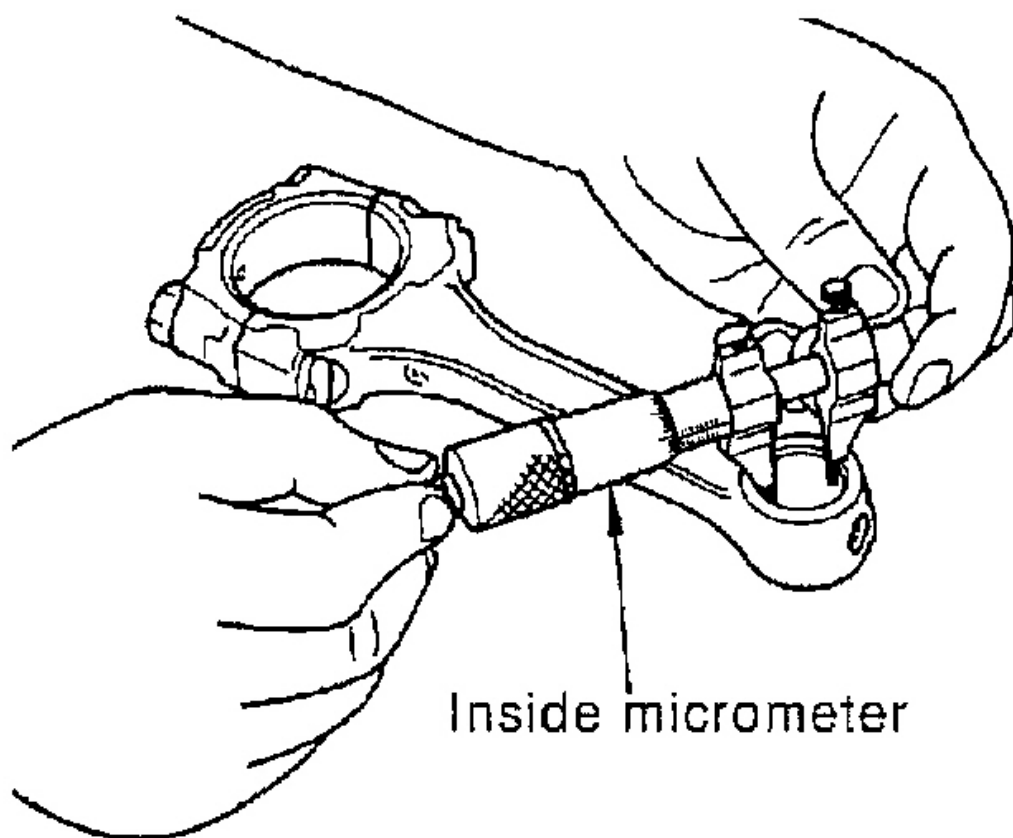


G02036738

Fig. 203: Measuring Inner Diameter Of Bushing
Courtesy of NISSAN MOTOR CO., U.S.A.

Outer Diameter of Piston Pin

- Measure outer diameter of piston pin.

Standard : 21.989 - 22.001 mm (0.8657 - 0.8662 in)

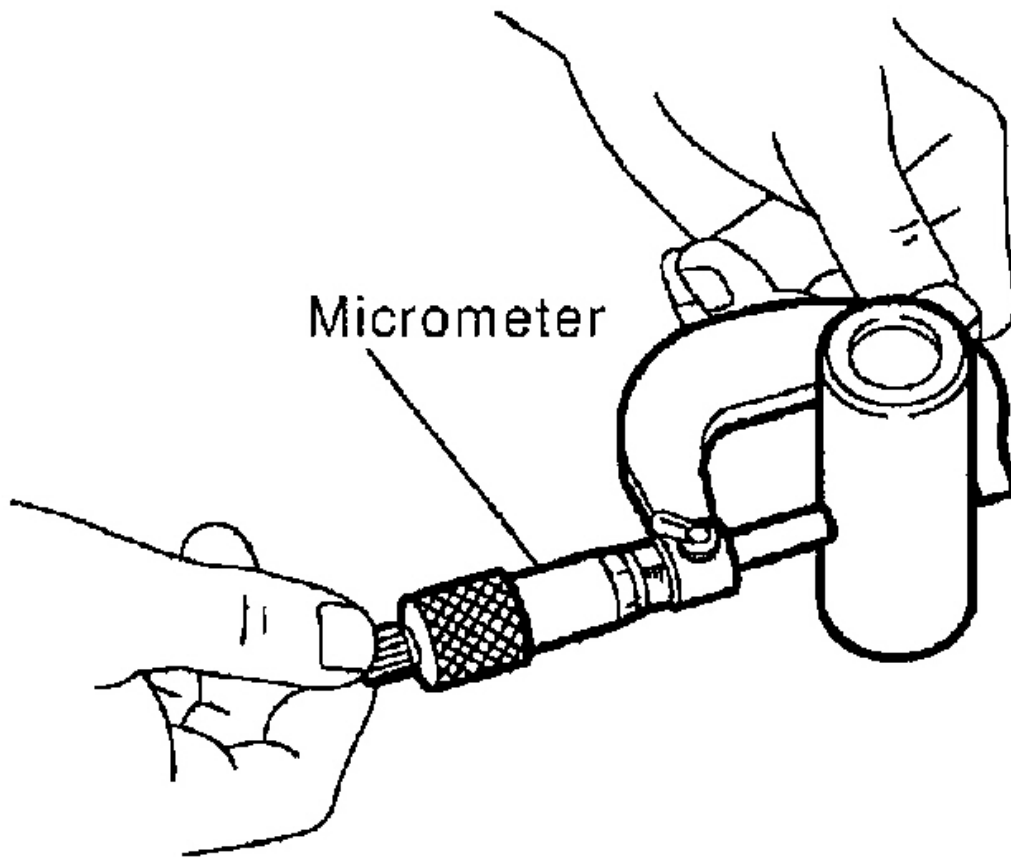

G02036739


Fig. 204: Measuring Outer Diameter Of Piston Pin
Courtesy of NISSAN MOTOR CO., U.S.A.

Connecting Rod Bushing Oil Clearance (Small End)

(Connecting rod small end oil clearance) = (Inner diameter of connecting rod small end) - (Outer diameter of piston pin)

Standard : 0.005 - 0.017 mm (0.0002 - 0.007 in)

- If the measured value exceeds the standard, replace the connecting rod assembly and/or piston and piston pin assembly.
- If replacing the piston and piston pin assembly, refer to the Table for Selective Fitting for Piston to select the piston corresponding to the applicable bore grade of the cylinder block to be used. Refer to , "**HOW TO SELECT PISTON**".

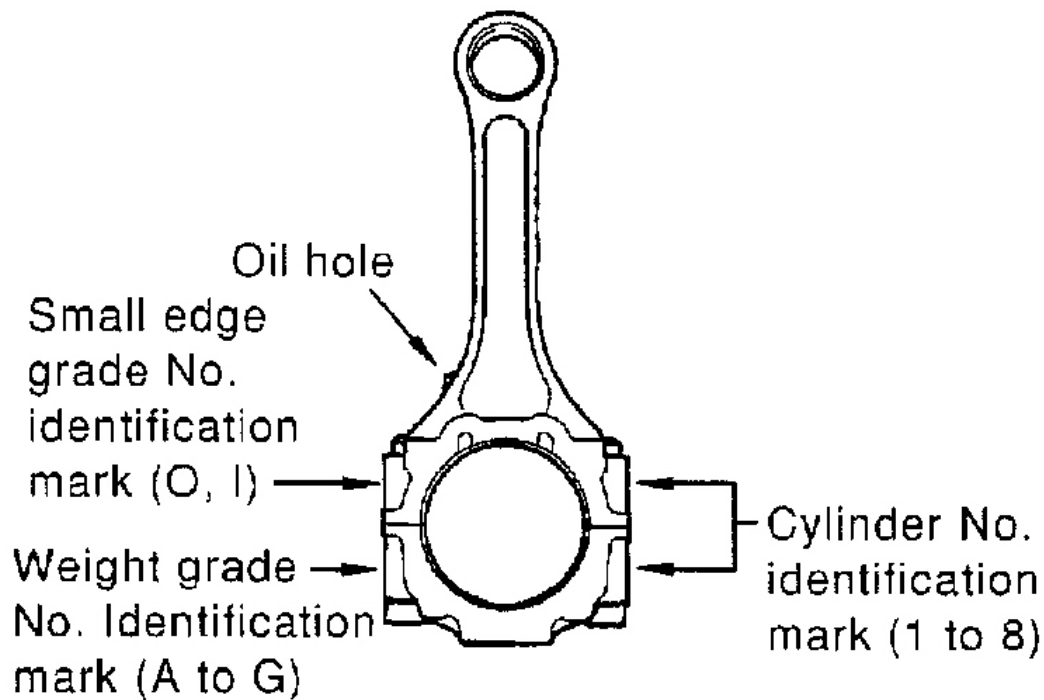

G02036740

Fig. 205: Identifying Connecting Rod Bushing Oil Clearance
 Courtesy of NISSAN MOTOR CO., U.S.A.

Factory installed parts grading:

- Service parts apply only to grade 0.


Unit: mm (in)

Grade	0	1
Connecting rod small end inner diameter	22.000 - 22.006 (0.8661 - 0.8664)	22.006 - 22.012 (0.8664 - 0.8666)
Piston pin outer diameter	21.989 - 21.995 (0.8657 - 0.8659)	21.995 - 22.001 (0.8659 - 0.8662)
Piston pin bore diameter	21.993 - 21.999 (0.8659 - 0.8661)	21.999 - 22.005 (0.8661 - 0.8663)

G02036741

Fig. 206: Piston Diameter Table

Courtesy of NISSAN MOTOR CO., U.S.A.

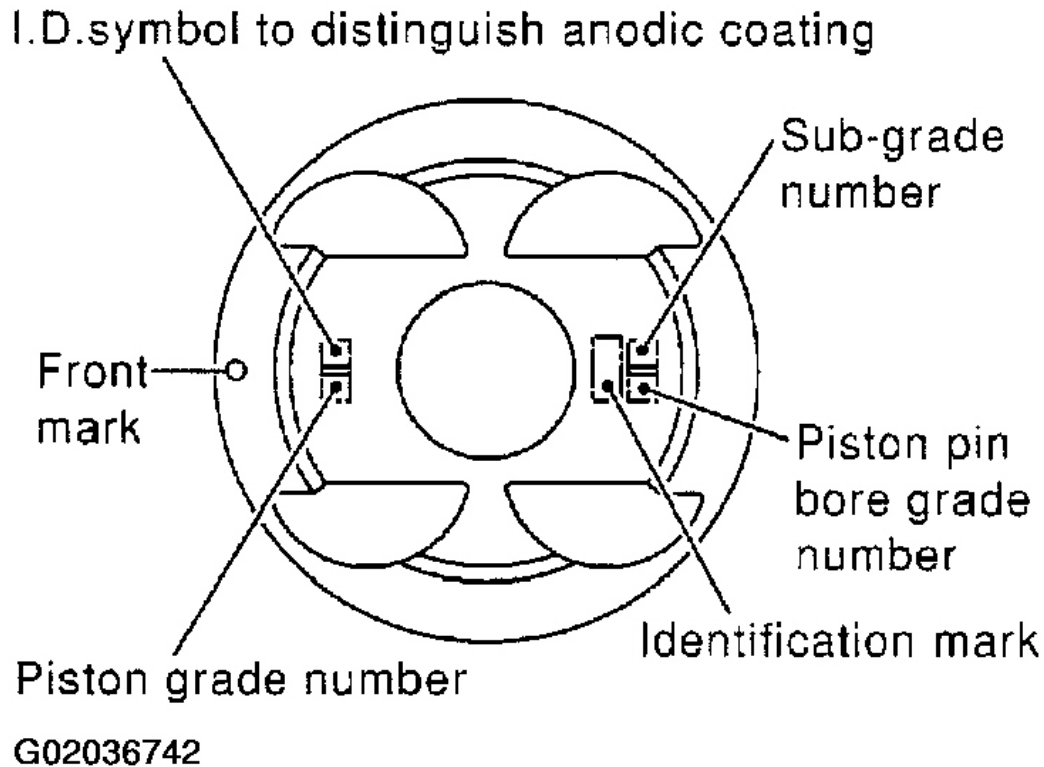**Fig. 207: Identifying Piston Mark**

Courtesy of NISSAN MOTOR CO., U.S.A.

CYLINDER BLOCK DISTORTION


- Using a scraper, remove gasket on the cylinder block surface, and also remove oil, scale, carbon, or other contamination.

CAUTION: Be careful not to allow gasket flakes to enter the oil or coolant passages.

- Measure the distortion on the block upper face at some different points in 6 directions.

Limit : 0.1 mm (0.004 in)

- If out of the distortion limit, replace the cylinder block.

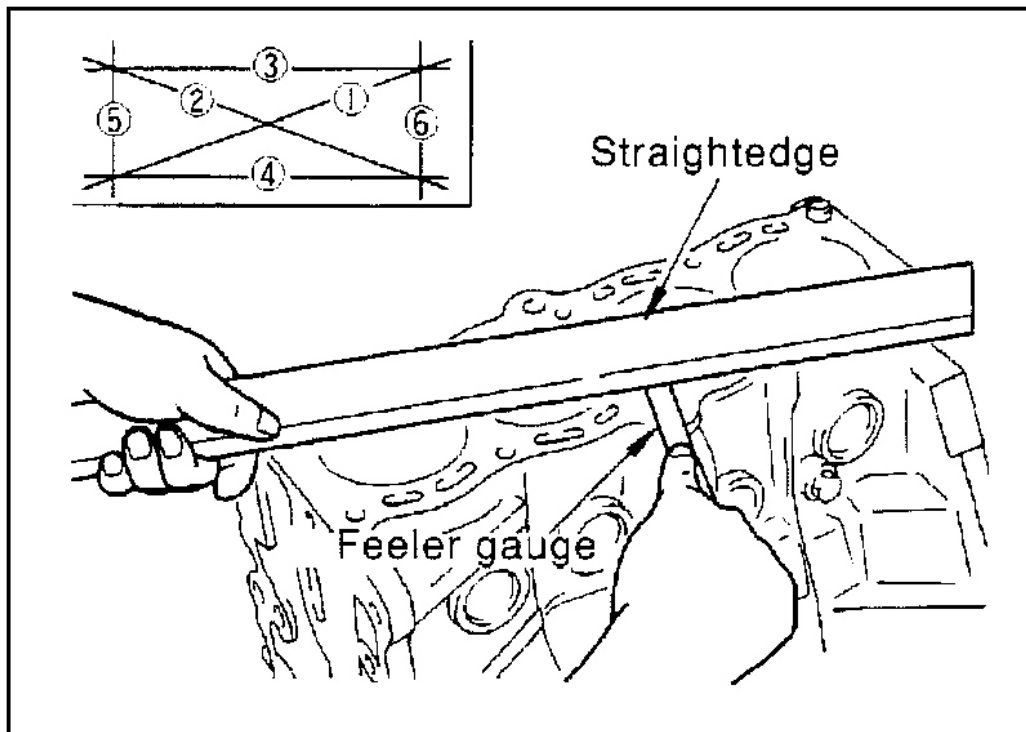

G02036743

Fig. 208: Measuring The Distortion On The Block Upper Face
Courtesy of NISSAN MOTOR CO., U.S.A.


INNER DIAMETER OF MAIN BEARING HOUSING

- Install the main bearing caps with the main bearings removed, and tighten the mounting bolts to the specified torque.
- Using a bore gauge, measure the inner diameter of the main bearing housing.

Standard : 68.944 - 68.968 mm (2.7143 - 2.7153 in)

- If out of the standard, replace the cylinder block and main bearing caps as an assembly.

NOTE: **These components cannot be replaced as a single unit, because they were processed together.**

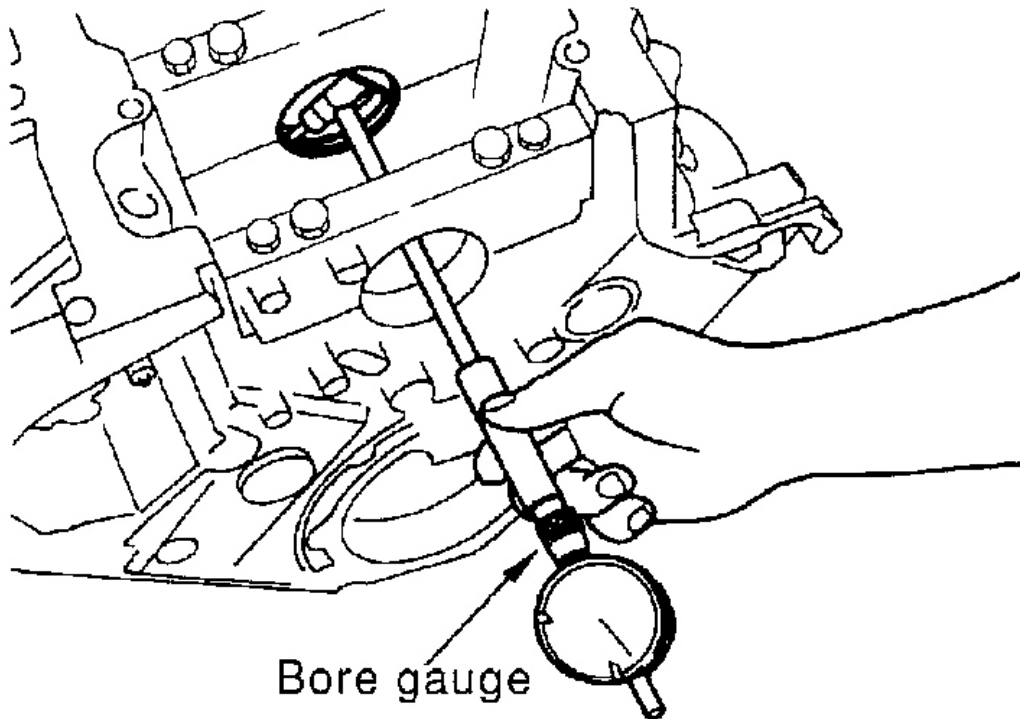

G02036744


Fig. 209: Measuring Inner Diameter Of Main Bearing Housing
Courtesy of NISSAN MOTOR CO., U.S.A.

PISTON TO CYLINDER BORE CLEARANCE

Inner Diameter of Cylinder Bore

- Using a bore gauge, measure cylinder bore for wear, out-of-round and taper at 6 different points on each cylinder. (X and Y directions at A, B and C)

NOTE: When determining cylinder bore grade, measure cylinder bore at B position.

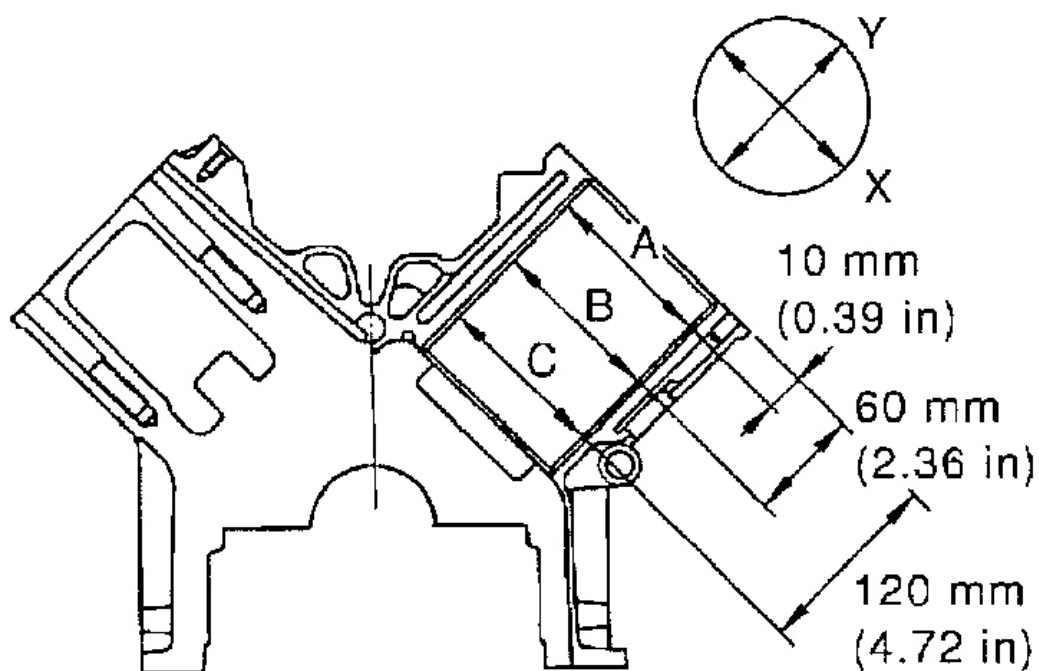

G02036745


Fig. 210: Identifying Inner Diameter Of Cylinder Bore
Courtesy of NISSAN MOTOR CO., U.S.A.

Standard inner diameter: 93.000 - 93.030 mm (3.6614 - 3.6626 in)

Wear limit: 0.20 mm (0.0079 in)

Out-of-round (Difference between X and Y): 0.015 mm (0.0006 in)

Taper limit (Difference between A and C): 0.01 mm (0.0004 in)

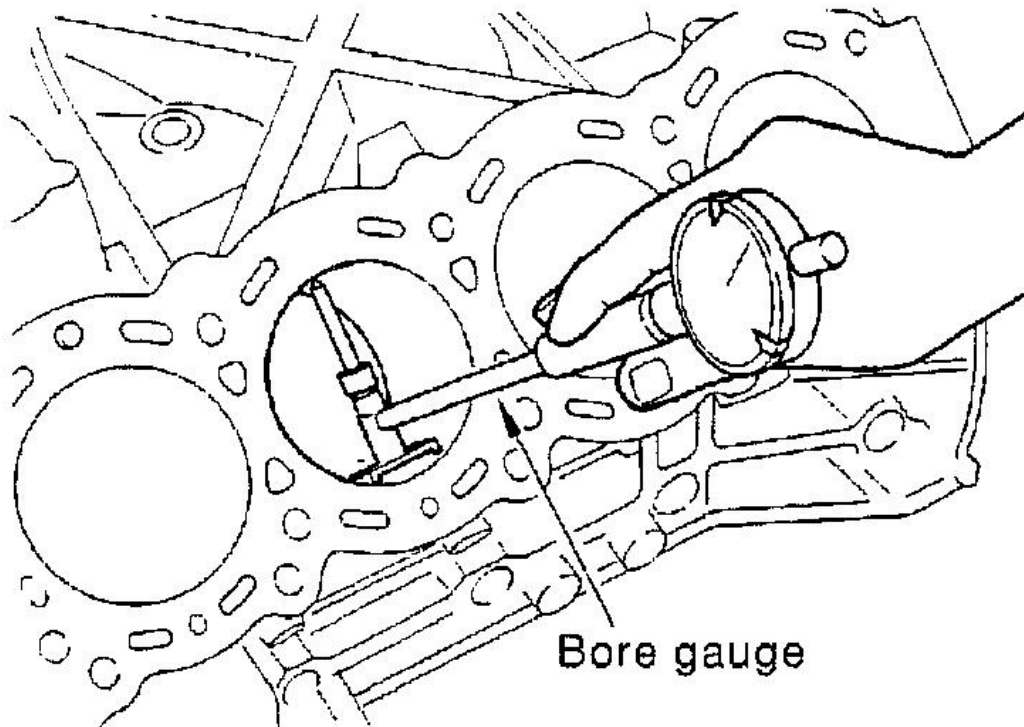

G02036746

Fig. 211: Measuring Inner Diameter Of Cylinder Bore
Courtesy of NISSAN MOTOR CO., U.S.A.


- If the measured value exceeds the repair limit, or if there are scratches and/or seizure on the cylinder inner wall, hone or bore the inner wall.
- An oversize piston is provided. When using an oversize piston, hone the cylinder so that the clearance of the piston cylinder satisfies the standard.

Over size (OS) : 0.2 mm (0.008 in)

Outer Diameter of Piston

- Measure piston skirt diameter.


Standard : 92.980 - 93.010 mm (3.6606 - 3.6618 in)

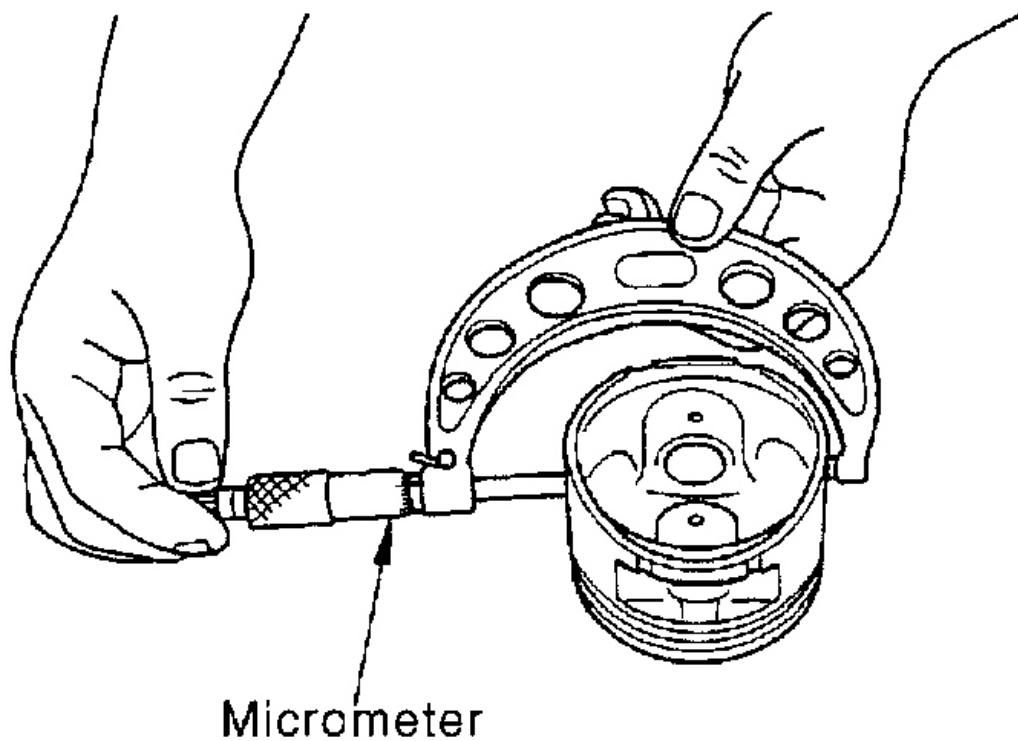

G02036747

Fig. 212: Measuring Piston Skirt Diameter
Courtesy of NISSAN MOTOR CO., U.S.A.

- Measure point "H" (Distance from the top): 42 mm (1.65 in)

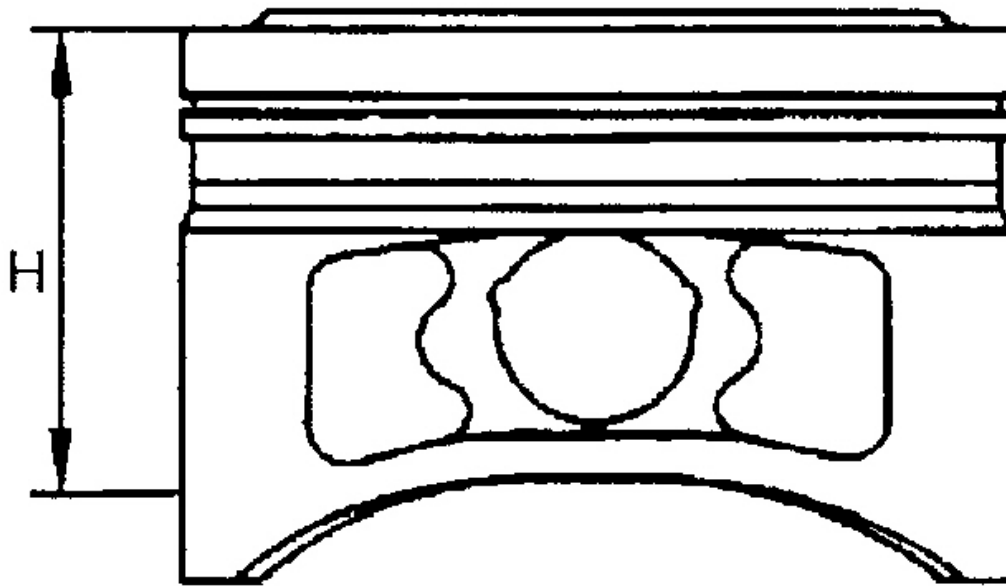

G02036748

Fig. 213: Identifying Piston Height

Courtesy of NISSAN MOTOR CO., U.S.A.

Piston to Cylinder Bore Clearance

- Calculate by outer diameter of piston skirt and inner diameter of cylinder (direction X, position B).
(Clearance) = (Inner diameter of cylinder) - (Outer diameter of piston skirt)

Standard : 0.010 - 0.030 mm (0.0004 - 0.0012 in)**Limit : 0.08 mm (0.0031 in)**

- If it exceeds the limit, replace piston/piston pin assembly.

Reboring Cylinder Bore

1. Cylinder bore size is determined by adding piston-to-bore clearance to piston diameter "A".

Rebored size calculation: $D = A + B - C$ **where,****D: Bored diameter**

A: Piston diameter as measured

B: Piston - to - bore clearance (standard value)

C: Honing allowance 0.02 mm (0.0008 in)

2. Install main bearing caps, and tighten to the specified torque. Otherwise, cylinder bores may be distorted in final assembly.
3. Cut cylinder bores.
 - **When any cylinder needs boring, all other cylinders must also be bored.**
 - **Do not cut too much out of cylinder bore at a time. Cut only 0.05 mm (0.0020 in) or so in diameter at a time.**
4. Hone cylinders to obtain specified piston-to-bore clearance.
5. Measure finished cylinder bore for out-of-round and taper.
 - **Measurement should be done after cylinder bore cools down.**

OUTER DIAMETER OF CRANKSHAFT JOURNAL


- Measure outer diameter of crankshaft journals.

Standard : 63.940 - 63.964 mm (2.5173 - 2.5183 in)

OUTER DIAMETER OF CRANKSHAFT PIN

- Measure outer diameter of crankshaft pin.

Standard : 51.956 - 51.974 mm (2.0455-2.0462 in)

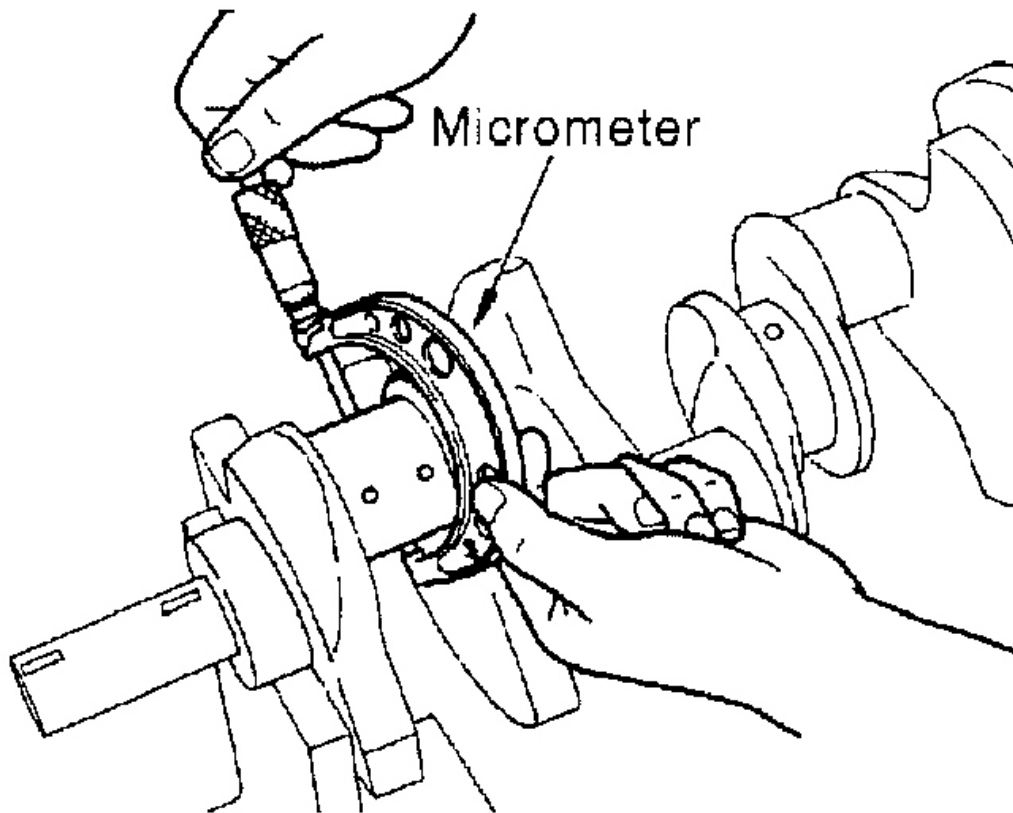

G02036749

Fig. 214: Measuring Outer Diameter Of Crankshaft Pin
Courtesy of NISSAN MOTOR CO., U.S.A.


OUT-OF-ROUND AND TAPER OF CRANKSHAFT

- Using a micrometer, measure the dimensions at 4 different points shown in the figure on each journal and pin.
- Out-of-roundness is indicated by the difference in dimension between X and Y at A and B.
- Taper is indicated by the difference in dimension between A and B at X and Y.

Limit:

Out-of-round (X-Y) : 0.015 mm (0.0006 in)

Taper (A-B) : 0.010 mm (0.0004 in)

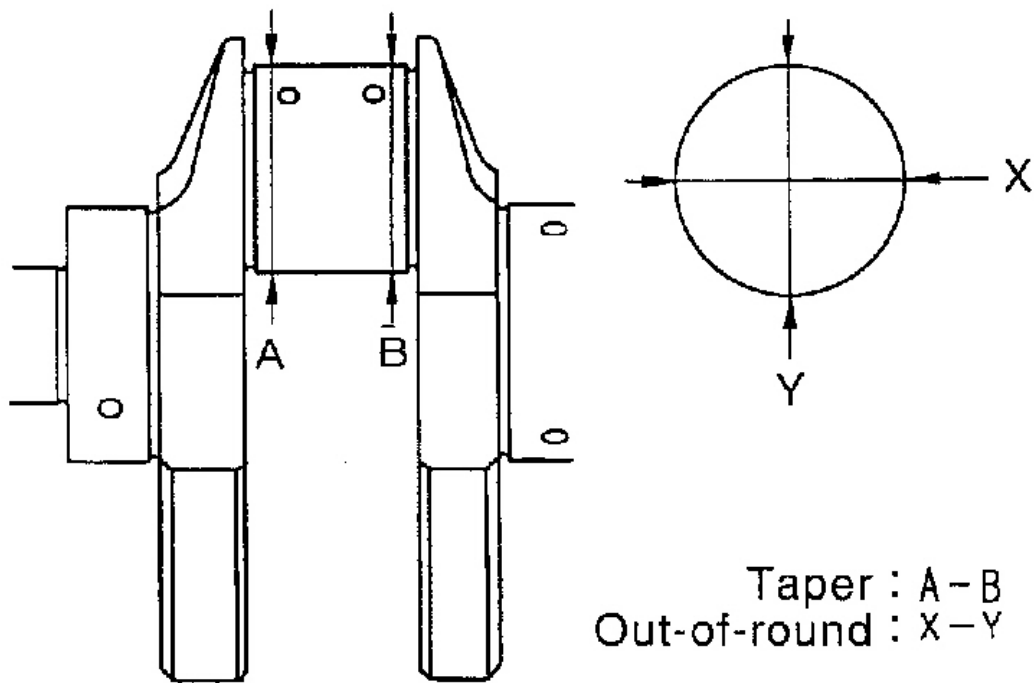


G02036750

Fig. 215: Measuring The Dimensions Of Crankshaft Journal
Courtesy of NISSAN MOTOR CO., U.S.A.

CRANKSHAFT RUNOUT

- Place a V-block on a precise flat table to support the journals on the both end of the crankshaft.
- Place a dial gauge straight up on the No. 3 journal.
- While rotating the crankshaft, read the movement of the pointer on the dial gauge.
- Half of the movement shows the runout.

Limit : 0.05 mm (0.002 in)

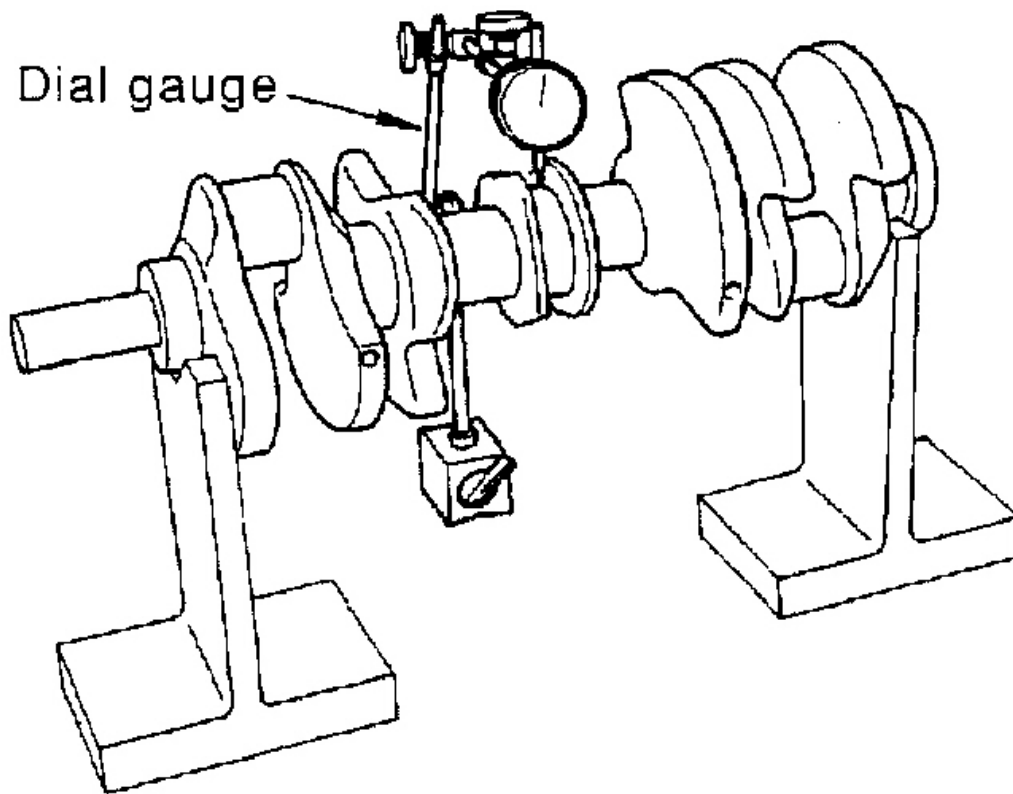

G02036751

Fig. 216: Measuring Crankshaft Runout
Courtesy of NISSAN MOTOR CO., U.S.A.

OIL CLEARANCE OF CONNECTING ROD BEARING

Method of Measurement

- Install the connecting rod bearings to the connecting rod and the cap, and tighten the connecting rod nut to the specified torque. Using an inside micrometer measure the inner diameter of connecting rod bearing.

(Oil clearance) = (Inner diameter of connecting rod bearing) - (Outer diameter of crankshaft pin)

Standard : 0.020 - 0.045 mm (0.0008 - 0.0018 in)

Limit : 0.055 mm (0.0022 in)

- If clearance cannot be adjusted within the standard, grind crankshaft pin and use undersized bearing.

Refer to , "HOW TO SELECT CONNECTING ROD BEARING".

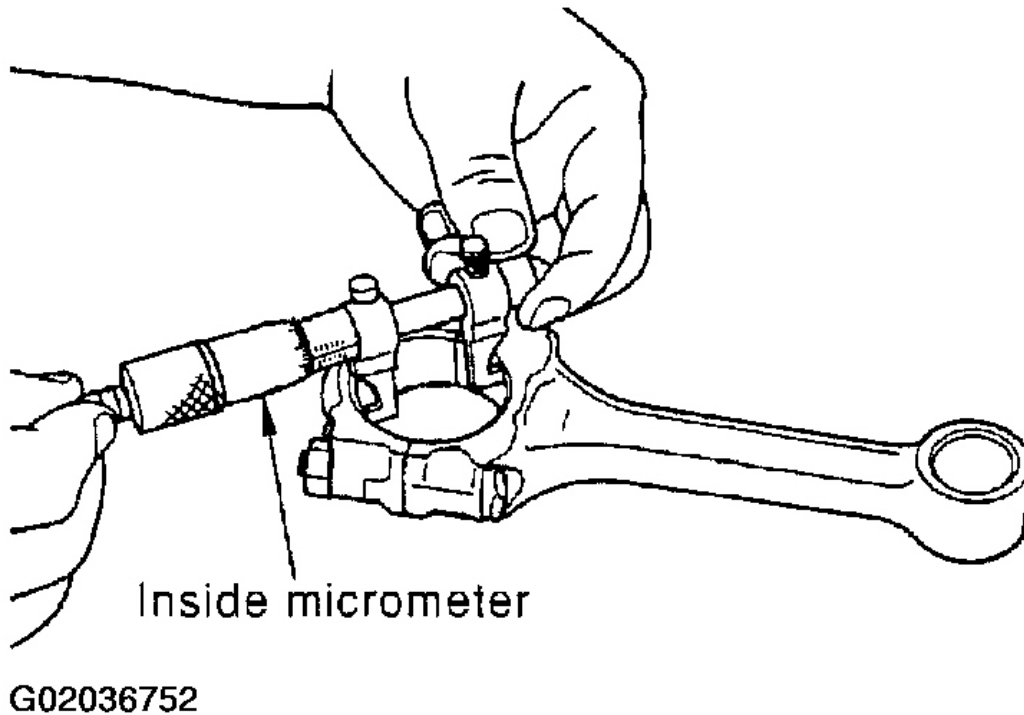


Fig. 217: Measuring The Inner Diameter Of Connecting Rod Bearing
Courtesy of NISSAN MOTOR CO., U.S.A.

Method of Using Plastigage

- Remove oil and dust on the crankshaft pin and the surfaces of each bearing completely.
- Cut a plastic gauge slightly shorter than the bearing width, and place it in crankshaft axial direction, avoiding oil holes.
- Install the connecting rod bearings to the connecting rod cap, and tighten the connecting rod nut to the specified torque.

CAUTION: Never rotate the crankshaft.

- Remove the connecting rod cap and bearings, and using the scale on the plastic gauge bag, measure the plastic gauge width.

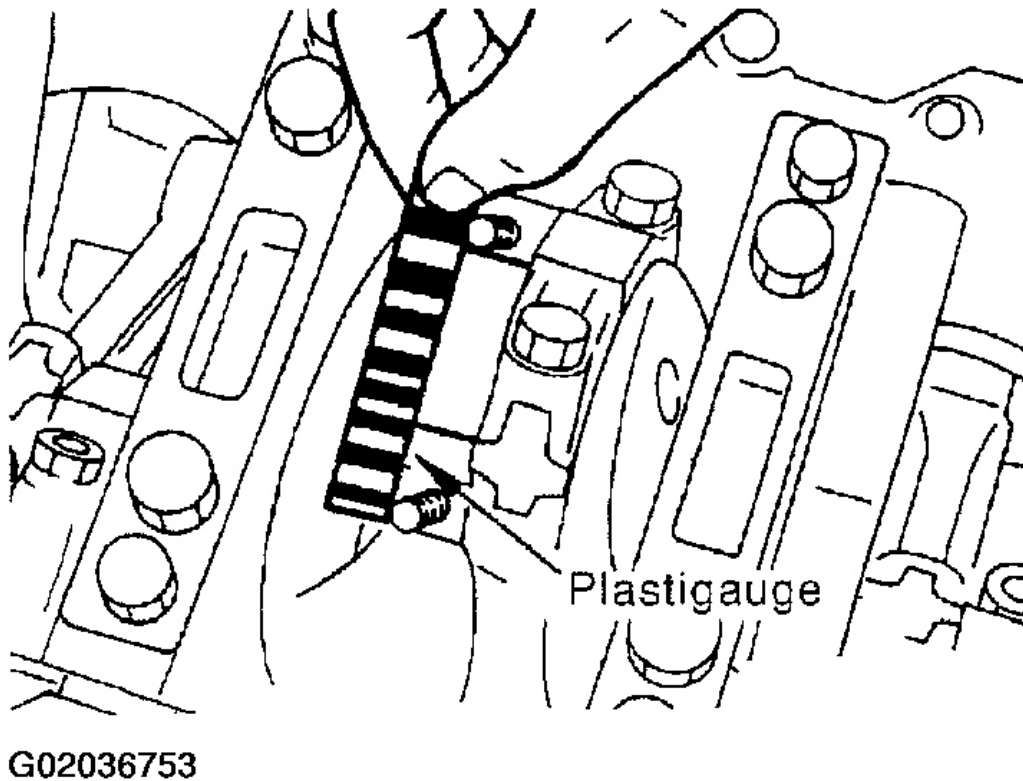


Fig. 218: Installing Plastigage

Courtesy of NISSAN MOTOR CO., U.S.A.

NOTE: The procedure when the measured value exceeds the repair limit is same as that described in "the method by calculation."

OIL CLEARANCE OF MAIN BEARING

Method of Measurement

- Install the main bearings to the cylinder block and bearing cap. Measure the main bearing inner diameter with the bearing cap bolt tightened to the specified torque.

(Oil clearance) = (Inner diameter of main bearing) - (Outer diameter of crankshaft journal)

Standard:

No. 1 and 5 journals : 0.001 - 0.011 mm (0.0004 - 0.0004 in)

No. 2, 3, and 4 journals : 0.007 - 0.017 mm (0.0003 - 0.0007 in)

Limit:

No.1 and 5 journals : 0.021 mm (0.0008 in)

No. 2, 3, and 4 journals : 0.027 mm (0.0011 in)

- If the measured value exceeds the repair limit, select main bearings referring to the main bearing inner diameter and crankshaft journal outer diameter, so that the oil clearance satisfies the standard. Refer to , **"HOW TO SELECT MAIN BEARING"**.


Method of Using Plastigage

- Remove oil and dust on the crankshaft journal and the surfaces of each bearing completely.
- Cut a plastic gauge slightly shorter than the bearing width, and place it in crankshaft axial direction, avoiding oil holes
- Tighten the main bearing bolts to the specified torque.

CAUTION: Never rotate the crankshaft.

- Remove the bearing cap and bearings, and using the scale on the plastic gauge bag, measure the plastic gauge width.

NOTE: **The procedure when the measured value exceeds the repair limit is same as that described in "the method by calculation."**

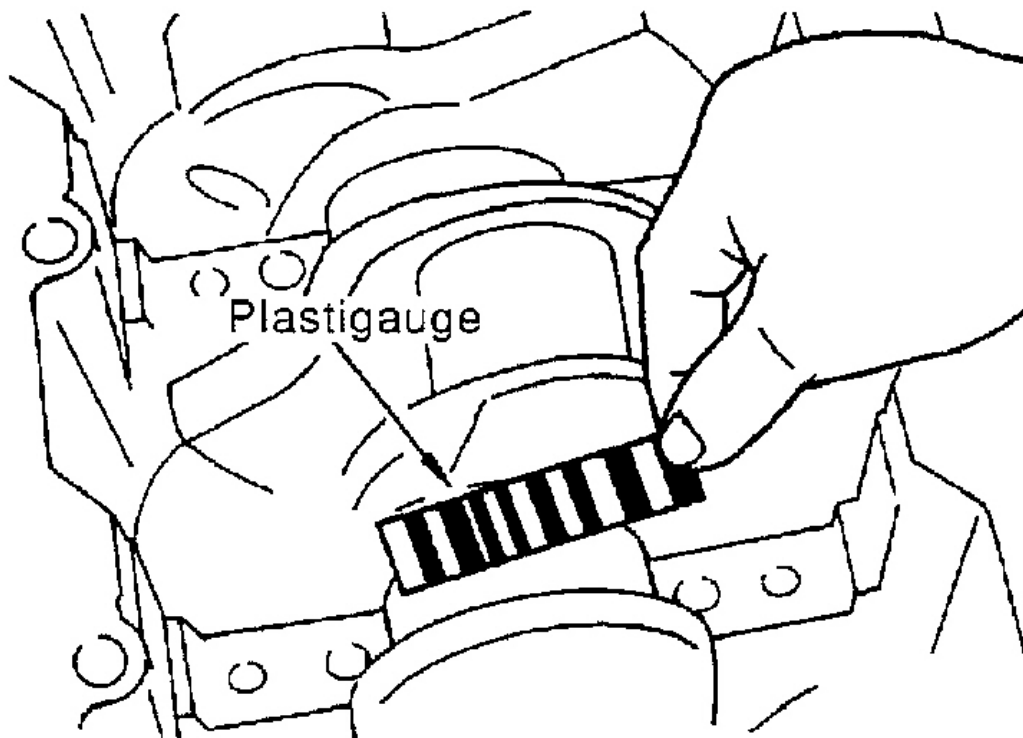

G02036754

Fig. 219: Removing Plastigage

Courtesy of NISSAN MOTOR CO., U.S.A.

CRUSH HEIGHT OF MAIN BEARING

- When the bearing cap is removed after being tightened to the specified torque with main bearings installed, the tip end of bearing must protrude.

Standard: There must be crush height

- If the standard is not met, replace main bearings.

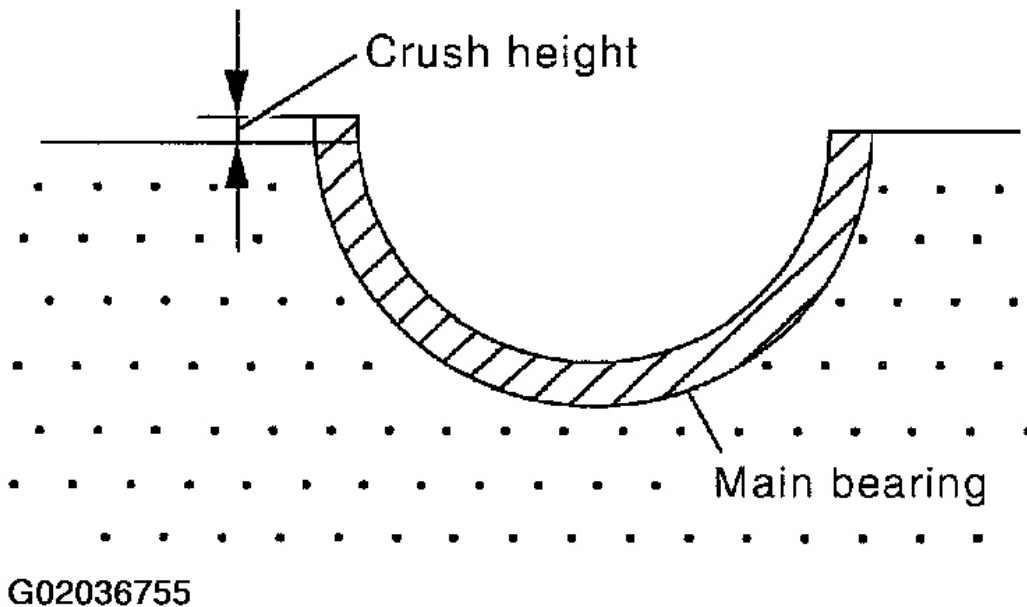


Fig. 220: Identifying Crush Height Of Main Bearing
 Courtesy of NISSAN MOTOR CO., U.S.A.

SERVICE DATA AND SPECIFICATIONS (SDS)


STANDARD AND LIMIT

GENERAL SPECIFICATIONS


General Specifications

Cylinder arrangement		V-8
Displacement cm ³ (cu in)		4,494 (274.22)
Bore and stroke mm (in)		93 x 82.7 (3.66 x 3.256)
Valve arrangement		DOHC
Firing order		1-8-7-3-6-5-4-2
Number of piston rings	Compression	2
	Oil	1
Number of main bearings		5
Compression ratio		10.5
Compression pressure kPa (kg/cm ² , psi)/300 rpm	Standard	1,320 (13.5, 191)
	Minimum	1,130 (11.5, 164)
	Differential limit between cylinders	98 (1.0, 14)

Cylinder number

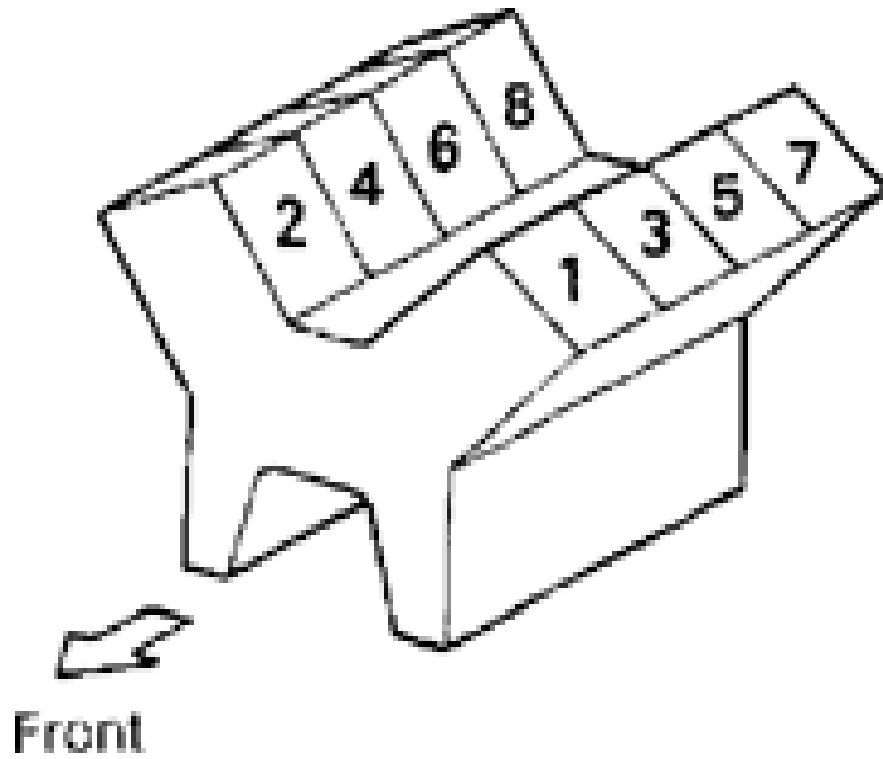

Valve timing

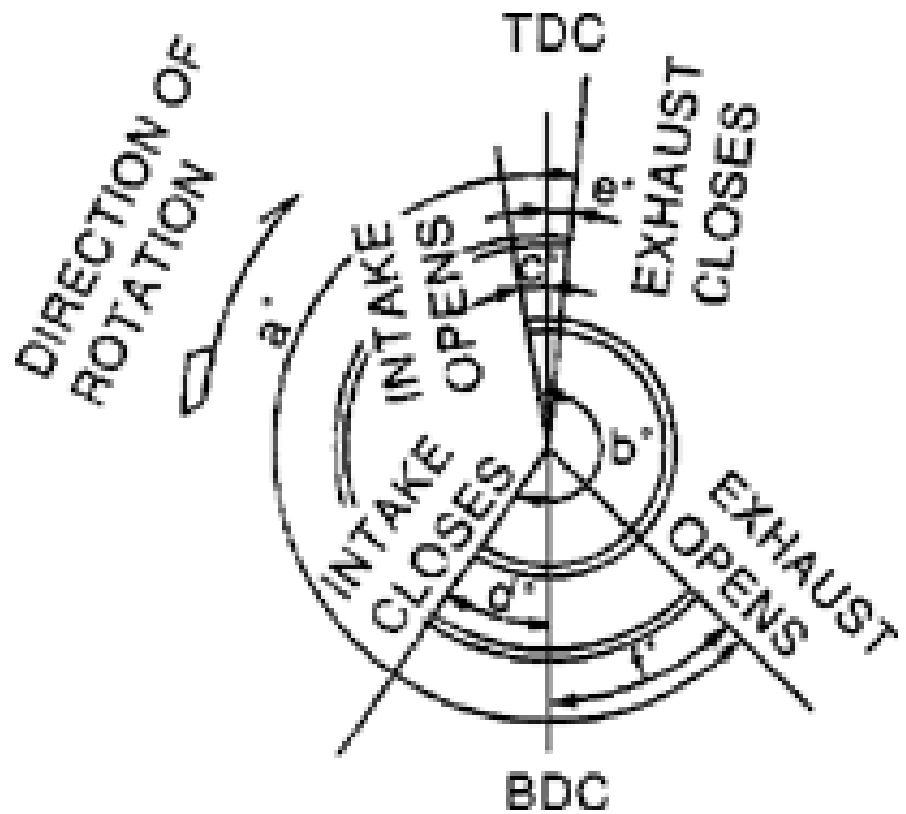

Unit: degree

a	b	c	d	e	f
228	240	-8	68	0	48

INTAKE MANIFOLD AND EXHAUST MANIFOLD

Unit: mm (in)

		Limit
Surface distortion	Intake manifold upper	0.1 (0.004)
	Intake manifold lower	0.1 (0.004)
	Exhaust manifold	0.3 (0.012)

G02036757

Fig. 221: Intake Manifold And Exhaust Manifold Specifications
 Courtesy of NISSAN MOTOR CO., U.S.A.

DRIVE BELTS

Tension of drive belts	Auto adjustment by auto tensioner
------------------------	-----------------------------------

G02036758


Fig. 222: Drive Belts Specifications

Courtesy of NISSAN MOTOR CO., U.S.A.

CYLINDER HEAD

Unit: mm (in)

	Limit
Head surface distortion	0.1 (0.004)

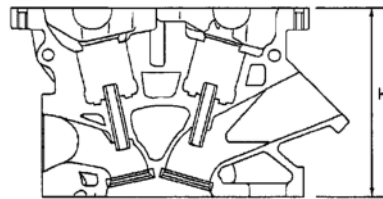

Nominal cylinder head height:
H = 126.4 mm (4.98 in)


G02036759

Fig. 223: Cylinder Head Specifications

Courtesy of NISSAN MOTOR CO., U.S.A.

VALVE**Valve Dimensions**

Unit: mm (in)

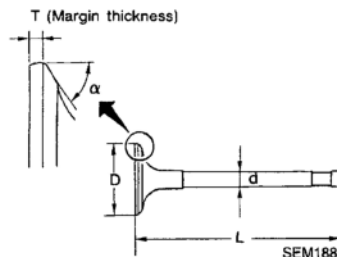

Valve head diameter "D"	Intake	36.0 - 36.3 (1.417 - 1.429)
	Exhaust	31.2 - 31.5 (1.228 - 1.240)
Valve length "L"	Intake	96.57 (3.8020)
	Exhaust	94.50 (3.720)
Valve stem diameter "d"	Intake	5.972 - 5.980 (0.2351 - 0.2354)
	Exhaust	5.962 - 5.970 (0.2347 - 0.2350)
Valve seat angle "α"	Intake	45°15' - 45°45'
	Exhaust	
Valve margin "T"	Intake	1.1 (0.043)
	Exhaust	1.7 (0.067)

G02036760

Fig. 224: Valve Dimensions Table

Courtesy of NISSAN MOTOR CO., U.S.A.

Valve Clearance

Unit: mm (in)

	Cold* (reference data)	Hot
Intake	0.26 - 0.34 (0.010 - 0.013)	0.32 - 0.40 (0.013 - 0.016)
Exhaust	0.29 - 0.37 (0.011 - 0.015)	0.33 - 0.41 (0.013 - 0.016)

*: Approximately 20°C (68 °F)

G02036761

Fig. 225: Valve Clearance Table

Courtesy of NISSAN MOTOR CO., U.S.A.

Available Shims

Thickness mm (in)	Identification mark
2.32 (0.0913)	232
2.33 (0.0917)	233

G02036762

Fig. 226: Shims Specifications (1 Of 3)

Courtesy of NISSAN MOTOR CO., U.S.A.

2002 Infiniti Q45**2002 ENGINE Engine Mechanical - Q45**

Thickness mm (in)	Identification mark
2.34 (0.0921)	234
2.35 (0.0925)	235
2.36 (0.0929)	236
2.37 (0.0933)	237
2.38 (0.0937)	238
2.39 (0.0941)	239
2.40 (0.0945)	240
2.41 (0.0949)	241
2.42 (0.0953)	242
2.43 (0.0957)	243
2.44 (0.0961)	244
2.45 (0.0965)	245
2.46 (0.0969)	246
2.47 (0.0972)	247
2.48 (0.0976)	248
2.49 (0.0980)	249
2.50 (0.0984)	250
2.51 (0.0988)	251
2.52 (0.0992)	252
2.53 (0.0996)	253
2.54 (0.1000)	254
2.55 (0.1004)	255
2.56 (0.1008)	256
2.57 (0.1012)	257
2.58 (0.1016)	258
2.59 (0.1020)	259
2.60 (0.1024)	260
2.61 (0.1028)	261
2.62 (0.1031)	262
2.63 (0.1035)	263
2.64 (0.1039)	264
2.65 (0.1043)	265
2.66 (0.1047)	266
2.67 (0.1051)	267
2.68 (0.1055)	268
2.69 (0.1059)	269
2.70 (0.1063)	270
2.71 (0.1067)	271
2.72 (0.1071)	272
2.73 (0.1075)	273
2.74 (0.1079)	274
2.75 (0.1083)	275
2.76 (0.1087)	276
2.77 (0.1091)	277


G02036763

Fig. 227: Shims Specifications (2 Of 3)
Courtesy of NISSAN MOTOR CO., U.S.A.

2002 Infiniti Q45

2002 ENGINE Engine Mechanical - Q45

Thickness mm (in)	Identification mark
2.78 (0.1094)	278
2.79 (0.1098)	279
2.80 (0.1102)	280
2.81 (0.1106)	281
2.82 (0.1110)	282
2.83 (0.1114)	283
2.84 (0.1118)	284
2.85 (0.1122)	285
2.86 (0.1126)	286
2.87 (0.1130)	287
2.88 (0.1134)	288
2.89 (0.1138)	289
2.90 (0.1142)	290
2.91 (0.1146)	291
2.92 (0.1150)	292
2.93 (0.1154)	293
2.94 (0.1157)	294
2.95 (0.1161)	295

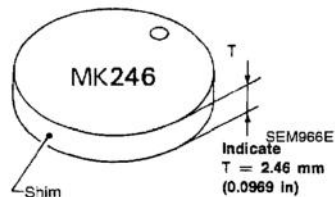

G02036764

Fig. 228: Shims Specifications (3 Of 3)
Courtesy of NISSAN MOTOR CO., U.S.A.

Valve Spring

Free height mm (in)	51.28 - 51.48 (2.0189 - 2.0268)
Pressure N (kg, lb) at height mm (in)	166 - 188 (16.9 - 19.2, 37 - 42) at 33.8 (1.331)
	291 - 329 (29.7 - 33.6, 65 - 74) at 24.4 (0.961)
Out-of-square mm (in)	Less than 2.2 (0.087)

G02036765

Fig. 229: Valve Spring Specifications
Courtesy of NISSAN MOTOR CO., U.S.A.

Valve Lifter

2002 Infiniti Q45

2002 ENGINE Engine Mechanical - Q45

Unit: mm (in)


	Standard
Valve lifter outer diameter	33.965 - 33.975 (1.3372 - 1.3776)
Lifter guide inner diameter	34.000 - 34.016 (1.3386 - 1.3392)
Clearance between lifter and lifter guide	0.025 - 0.051 (0.0010 - 0.0020)

G02036766

Fig. 230: Valve Lifter Specifications
Courtesy of NISSAN MOTOR CO., U.S.A.

Valve Guide

Unit: mm (in)

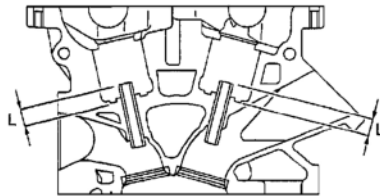


		Standard	Service
Valve guide	Outer diameter	10.023 - 10.034 (0.3946 - 0.3950)	10.223 - 10.234 (0.4025 - 0.4029)
	Inner diameter (Finished size)	6.000 - 6.018 (0.2362 - 0.2369)	
Cylinder head valve guide hole diameter		9.975 - 9.996 (0.3927 - 0.3935)	10.175 - 10.196 (0.4006 - 0.4014)
Interference fit of valve guide		0.027 - 0.059 (0.0011 - 0.0023)	
		Standard	
Stem to guide clearance	Intake	0.020 - 0.046 (0.0008 - 0.0018)	
	Exhaust	0.030 - 0.056 (0.0012 - 0.0022)	
Projection length "L"	Intake	10.1 - 10.3 (0.398 - 0.406)	
	Exhaust	10.0 - 10.4 (0.394 - 0.409)	

G02036767

Fig. 231: Valve Guide Specifications
Courtesy of NISSAN MOTOR CO., U.S.A.

Valve Seat

Unit: mm (in)

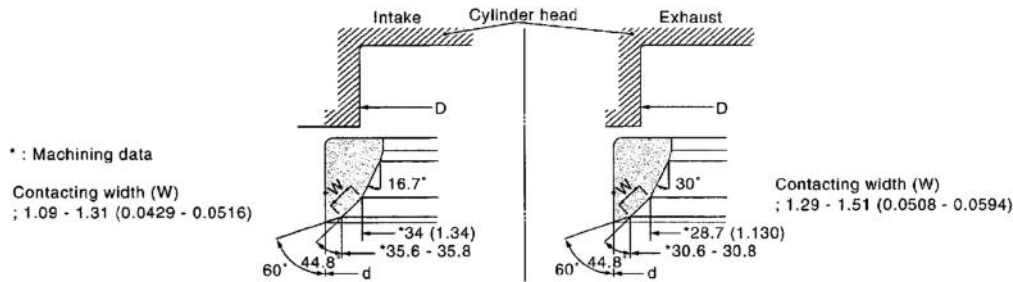

		Standard	Service
Cylinder head seat recess diameter (D)	Intake	37.000 - 37.016 (1.4567 - 1.4573)	37.500 - 37.516 (1.4764 - 1.4770)
	Exhaust	32.200 - 32.216 (1.2677 - 1.2683)	32.700 - 32.716 (1.2874 - 1.2880)
Valve seat interference fit	Intake	0.081 - 0.113 (0.0032 - 0.0044)	
	Exhaust	0.064 - 0.096 (0.0025 - 0.0038)	
Valve seat outer diameter (d)	Intake	37.097 - 37.113 (1.4605 - 1.4611)	37.597 - 37.613 (1.4802 - 1.4808)
	Exhaust	32.280 - 32.296 (1.2709 - 1.2715)	32.780 - 32.796 (1.2905 - 1.2912)


G02036768

Fig. 232: Valve Seat Specifications
Courtesy of NISSAN MOTOR CO., U.S.A.

CAMSHAFT AND CAMSHAFT BEARING

Unit: mm (in)

	Standard
Camshaft runout [TIR*]	Less than 0.02 (0.0008)

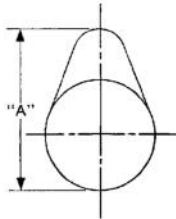

Cam height "A"	Intake	44.865 - 45.055 (1.7663 - 1.7738)
	Exhaust	43.925 - 44.115 (1.7293 - 1.7368)
Outer diameter of camshaft journal	No. 1	25.938 - 25.955 (1.0212 - 1.0218)
	No. 2, 3, 4, 5	25.953 - 25.970 (1.0218 - 1.0224)
		26.000 - 26.021 (1.0236 - 1.0244)
Inner diameter of camshaft bracket		26.000 - 26.021 (1.0236 - 1.0244)
Camshaft journal clearance	No. 1	0.045 - 0.083 (0.0018 - 0.0033)
	No. 2, 3, 4, 5	0.030 - 0.068 (0.0012 - 0.0027)
		0.115 - 0.188 (0.0045 - 0.0074)
Camshaft end play		0.115 - 0.188 (0.0045 - 0.0074)
Camshaft sprocket runout [TIR*]		Less than 0.15 (0.0059)

*: Total indicator reading


G02036769

Fig. 233: Camshaft And Camshaft Bearing Specifications

Courtesy of NISSAN MOTOR CO., U.S.A.

CYLINDER BLOCK

Unit: mm (in)

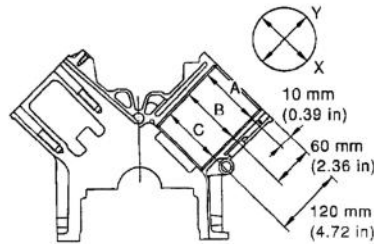

Surface flatness	Limit			0.1 (0.004)
Cylinder bore	Inner diameter	Standard	Grade No. 1	93.000 - 93.010 (3.6614 - 3.6618)
			Grade No. 2	93.011 - 93.020 (3.6618 - 3.6622)
			Grade No. 3	93.021 - 93.030 (3.6622 - 3.6626)
			Wear limit	0.2 (0.008)
Out-of-round (X – Y)				Less than 0.015 (0.0006)
Taper (A – B – C)				Less than 0.01 (0.0004)
Main journal inner diameter grade (Without bearing)	Grade No. A			68.944 - 68.945 (2.7143 - 2.7144)
	Grade No. B			68.945 - 68.946 (2.7144 - 2.7144)
	Grade No. C			68.946 - 68.947 (2.7144 - 2.7144)
	Grade No. D			68.947 - 68.948 (2.7144 - 2.7145)
	Grade No. E			68.948 - 68.949 (2.7145 - 2.7145)
	Grade No. F			68.949 - 68.950 (2.7145 - 2.7146)
	Grade No. G			68.950 - 68.951 (2.7146 - 2.7146)
	Grade No. H			68.951 - 68.952 (2.7146 - 2.7146)
	Grade No. J			68.952 - 68.953 (2.7146 - 2.7147)
	Grade No. K			68.953 - 68.954 (2.7147 - 2.7147)
	Grade No. L			68.954 - 68.955 (2.7147 - 2.7148)
	Grade No. M			68.955 - 68.956 (2.7148 - 2.7148)
	Grade No. N			68.956 - 68.957 (2.7148 - 2.7148)
	Grade No. P			68.957 - 68.958 (2.7148 - 2.7149)
	Grade No. R			68.958 - 68.959 (2.7149 - 2.7149)
	Grade No. S			68.959 - 68.960 (2.7149 - 2.7150)
	Grade No. T			68.960 - 68.961 (2.7150 - 2.7150)
	Grade No. U			68.961 - 68.962 (2.7150 - 2.7150)
	Grade No. V			68.962 - 68.963 (2.7150 - 2.7151)
	Grade No. W			68.963 - 68.964 (2.7151 - 2.7151)
Grade No. X			68.964 - 68.965 (2.7151 - 2.7152)	
Grade No. Y			68.965 - 68.966 (2.7152 - 2.7152)	
Grade No. 1			68.966 - 68.967 (2.7152 - 2.7152)	
Grade No. 2			68.967 - 68.968 (2.7152 - 2.7153)	
Difference in inner diameter between cylinders	Standard			Less than 0.03 (0.0012)

G02036770

Fig. 234: Cylinder Block Specifications


Courtesy of NISSAN MOTOR CO., U.S.A.

PISTON, PISTON RING AND PISTON PIN**Available Piston**

2002 Infiniti Q45

2002 ENGINE Engine Mechanical - Q45

Unit: mm (in)

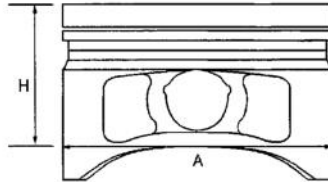

Piston skirt diameter "A"	Standard	Grade No. 1	92.980 - 92.990 (3.6606 - 3.6609)
		Grade No. 2	92.990 - 93.000 (3.6609 - 3.6614)
		Grade No. 3	93.000 - 93.010 (3.6614 - 3.6618)
		0.20 (0.0079) oversize (Service)	93.180 - 93.210 (3.6685 - 3.6697)
"H" dimension		42 (1.65)	
Piston pin bore diameter	Grade No.0	21.993 - 21.999 (0.8659 - 0.8661)	
	Grade No.1	21.999 - 22.005 (0.8661 - 0.8663)	
Piston clearance to cylinder block	Standard	0.010 - 0.030 (0.0004 - 0.0012)	
	Limit	0.08 (0.0031)	

G02036771

Fig. 235: Piston, Piston Ring And Piston Pin Specifications
Courtesy of NISSAN MOTOR CO., U.S.A.

Piston Ring

Unit: mm (in)

		Standard	Limit
Side clearance	Top	0.045 - 0.080 (0.0018 - 0.0031)	0.11 (0.0043)
	2nd	0.030 - 0.070 (0.0012 - 0.0028)	0.10 (0.004)
	Oil ring	0.065 - 0.135 (0.0026 - 0.0053)	—
End gap	Top	0.22 - 0.32 (0.0087 - 0.0126)	0.56 (0.0220)
	2nd	0.32 - 0.47 (0.0126 - 0.0185)	0.67 (0.0264)
	Oil (rail ring)	0.20 - 0.60 (0.0079 - 0.0236)	0.96 (0.0378)

G02036772

Fig. 236: Piston Ring Specifications
Courtesy of NISSAN MOTOR CO., U.S.A.

Piston Pin

2002 Infiniti Q45

2002 ENGINE Engine Mechanical - Q45

Unit: mm (in)

Piston pin outer diameter	Grade No.0	21.989 - 21.995 (0.8657 - 0.8659)
	Grade No.1	21.995 - 22.001 (0.8659 - 0.8662)
Interference fit of piston pin to piston		0.002 - 0.006 (0.0001 - 0.0002)
Piston pin to connecting rod bushing clearance	Standard	0.005 - 0.017 (0.0002 - 0.0007)

G02036773

Fig. 237: Piston Pin Specifications

Courtesy of NISSAN MOTOR CO., U.S.A.

CONNECTING ROD

Unit: mm (in)

Center distance		146.95 - 147.05 (5.79 - 5.79)
Bend [per 100 (3.94)]	Limit	0.15 (0.0059)
Torsion [per 100 (3.94)]	Limit	0.30 (0.0118)
Connecting rod small end inner diameter		24.980 - 25.000 (0.9835 - 0.9843)
Piston pin bushing inner diameter*	Grade No. 0	22.000 - 22.006 (0.8661 - 0.8664)
	Grade No. 1	22.006 - 22.012 (0.8664 - 0.8666)
Connecting rod big end inner diameter		55.000 - 55.013 (2.1654 - 2.1659)
Side clearance	Standard	0.20 - 0.35 (0.0079 - 0.0138)
	Limit	0.40 (0.0157)

*: After installing in connecting rod

G02036774

Fig. 238: Connecting Rod Specifications

Courtesy of NISSAN MOTOR CO., U.S.A.

CRANKSHAFT

2002 Infiniti Q45

2002 ENGINE Engine Mechanical - Q45


Unit: mm (in)

Main journal dia. "Dm" grade (No.1 and 5)	Grade No. G	63.963 - 63.964 (2.5182 - 2.5183)
	Grade No. H	63.962 - 63.963 (2.5182 - 2.5182)
	Grade No. J	63.961 - 63.962 (2.5181 - 2.5182)
	Grade No. K	63.960 - 63.961 (2.5181 - 2.5181)
	Grade No. L	63.959 - 63.960 (2.5181 - 2.5181)
	Grade No. M	63.958 - 63.959 (2.5180 - 2.5181)
	Grade No. N	63.957 - 63.958 (2.5180 - 2.5180)
	Grade No. P	63.956 - 63.957 (2.5179 - 2.5180)
	Grade No. R	63.955 - 63.956 (2.5179 - 2.5179)
	Grade No. S	63.954 - 63.955 (2.5179 - 2.5179)
	Grade No. T	63.953 - 63.954 (2.5178 - 2.5179)
	Grade No. U	63.952 - 63.953 (2.5178 - 2.5178)
	Grade No. V	63.951 - 63.952 (2.5178 - 2.5178)
	Grade No. W	63.950 - 63.951 (2.5177 - 2.5178)
	Grade No. X	63.949 - 63.950 (2.5177 - 2.5177)
	Grade No. Y	63.948 - 63.949 (2.5176 - 2.5177)
	Grade No. 1	63.947 - 63.948 (2.5176 - 2.5176)
	Grade No. 2	63.946 - 63.947 (2.5176 - 2.5176)
	Grade No. 3	63.945 - 63.946 (2.5175 - 2.5176)
	Grade No. 4	63.944 - 63.945 (2.5175 - 2.5175)
Main journal dia. "Dm" grade (No.2, 3 and 4)	Grade No. 5	63.943 - 63.944 (2.5174 - 2.5175)
	Grade No. 6	63.942 - 63.943 (2.5174 - 2.5174)
	Grade No. 7	63.941 - 63.942 (2.5174 - 2.5174)
	Grade No. 9	63.940 - 63.941 (2.5173 - 2.5174)
	Grade No. A	63.963 - 63.964 (2.5182 - 2.5183)
	Grade No. B	63.962 - 63.963 (2.5182 - 2.5182)
	Grade No. C	63.961 - 63.962 (2.5181 - 2.5182)
	Grade No. D	63.960 - 63.961 (2.5181 - 2.5181)
	Grade No. E	63.959 - 63.960 (2.5181 - 2.5181)
	Grade No. F	63.958 - 63.959 (2.5180 - 2.5181)
	Grade No. G	63.957 - 63.958 (2.5180 - 2.5180)
	Grade No. H	63.956 - 63.957 (2.5179 - 2.5180)
	Grade No. J	63.955 - 63.956 (2.5179 - 2.5179)
	Grade No. K	63.954 - 63.955 (2.5179 - 2.5179)
	Grade No. L	63.953 - 63.954 (2.5178 - 2.5179)
	Grade No. M	63.952 - 63.953 (2.5178 - 2.5178)
	Grade No. N	63.951 - 63.952 (2.5178 - 2.5178)
	Grade No. P	63.950 - 63.951 (2.5177 - 2.5178)
	Grade No. R	63.949 - 63.950 (2.5177 - 2.5177)
	Grade No. S	63.948 - 63.949 (2.5176 - 2.5177)
Pin journal dia. "Dp"	Grade No. T	63.947 - 63.948 (2.5176 - 2.5176)
	Grade No. U	63.946 - 63.947 (2.5176 - 2.5176)
	Grade No. V	63.945 - 63.946 (2.5175 - 2.5176)
Center distance "r"	Grade No. W	63.944 - 63.945 (2.5175 - 2.5175)
	Grade No. X	63.943 - 63.944 (2.5174 - 2.5175)
	Grade No. Y	63.942 - 63.943 (2.5174 - 2.5174)
Out-of-round (X - Y)	Grade No. 1	63.941 - 63.942 (2.5174 - 2.5174)
	Grade No. 2	63.940 - 63.941 (2.5173 - 2.5174)
	Grade No. 0	51.968 - 51.974 (2.0460 - 2.0462)
Taper (A - B)	Grade No. 1	51.962 - 51.967 (2.0457 - 2.0459)
	Grade No. 2	51.956 - 51.961 (2.0455 - 2.0457)
	Grade No. 0	51.968 - 51.974 (2.0460 - 2.0462)
Runout [TIR*]		41.31 - 41.39 (1.6264 - 1.6295)
Standard		Less than 0.002 (0.0001)
Limit		Less than 0.002 (0.0001)
Limit		Less than 0.10 (0.0039)


G02036775

Fig. 239: Crankshaft Specifications (1 Of 2)
Courtesy of NISSAN MOTOR CO., U.S.A.

Free end play	Standard	0.10 - 0.26 (0.0039 - 0.0102)
	Limit	0.30 (0.0118)

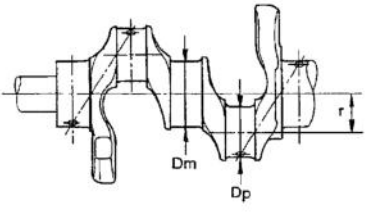

Out-of-round (X) - (Y)
Taper (A) - (B)

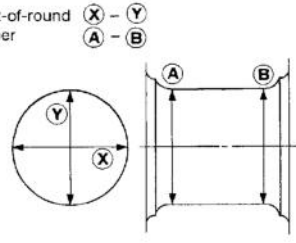

*: Total indicator reading

G02036776


Fig. 240: Crankshaft Specifications (2 Of 2)
Courtesy of NISSAN MOTOR CO., U.S.A.

MAIN BEARING

2002 Infiniti Q45

2002 ENGINE Engine Mechanical - Q45

Unit: mm (in)

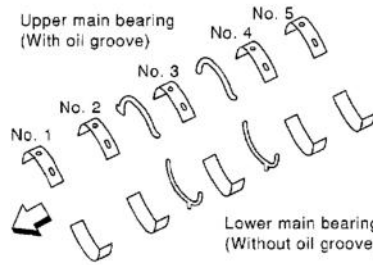

Grade number		Thickness	Identification color (UPR/LWR)	Remarks
0		2.483 - 2.486 (0.0978 - 0.0979)	Black	Grade and color are the same for upper and lower bearings.
1		2.486 - 2.489 (0.0979 - 0.0980)	Brown	
2		2.489 - 2.492 (0.0980 - 0.0981)	Green	
3		2.492 - 2.495 (0.0981 - 0.0982)	Yellow	
4		2.495 - 2.498 (0.0982 - 0.0983)	Blue	
5		2.498 - 2.501 (0.0983 - 0.0985)	Pink	
6		2.501 - 2.504 (0.0985 - 0.0986)	Purple	
7		2.504 - 2.507 (0.0986 - 0.0987)	White	
8		2.507 - 2.510 (0.0987 - 0.0988)	Red	
01	UPP	2.483 - 2.486 (0.0978 - 0.0979)	Black/Brown	Grade and color are different for upper and lower bearings.
	LWR	2.486 - 2.489 (0.0979 - 0.0980)		
12	UPR	2.486 - 2.489 (0.0979 - 0.0980)	Brown/Green	
	LWR	2.489 - 2.492 (0.0980 - 0.0981)		
23	UPR	2.489 - 2.492 (0.0980 - 0.0981)	Green/Yellow	
	LWR	2.492 - 2.495 (0.0981 - 0.0982)		
34	UPR	2.492 - 2.495 (0.0981 - 0.0982)	Yellow/Blue	
	LWR	2.495 - 2.498 (0.0982 - 0.0983)		
45	UPR	2.495 - 2.498 (0.0982 - 0.0983)	Blue/Pink	
	LWR	2.498 - 2.501 (0.0983 - 0.0985)		
56	UPR	2.498 - 2.501 (0.0983 - 0.0985)	Pink/Purple	
	LWR	2.501 - 2.504 (0.0985 - 0.0986)		
67	UPR	2.501 - 2.504 (0.0985 - 0.0986)	Purple/White	
	LWR	2.504 - 2.507 (0.0986 - 0.0987)		
78	UPR	2.504 - 2.507 (0.0986 - 0.0987)	White/Red	
	LWR	2.507 - 2.510 (0.0987 - 0.0988)		

G02036777

Fig. 241: Main Bearing Specifications
Courtesy of NISSAN MOTOR CO., U.S.A.

Undersize

Unit: mm (in)

	Thickness	Main journal diameter
0.25 (0.0098)	2.618 - 2.626 (0.1031 - 0.1034)	Grind so that bearing clearance is the specified value.

G02036778

2002 Infiniti Q45**2002 ENGINE Engine Mechanical - Q45****Fig. 242: Undersize Specifications****Courtesy of NISSAN MOTOR CO., U.S.A.****Bearing Clearance**

Unit: mm (in)

Main bearing clearance	Standard	No.1 and 5	0.001 - 0.011 (0.0004 - 0.0004)
		No.2, 3 and 4	0.007 - 0.017 (0.0003 - 0.0007)
	Limit	No.1 and 5	0.021 (0.0008)
		No.2, 3 and 4	0.027 (0.0011)

G02036779

Fig. 243: Bearing Clearance Specifications**Courtesy of NISSAN MOTOR CO., U.S.A.****CONNECTING ROD BEARING**

Grade number	Thickness "T" mm (in)	Identification color (mark)
0	1.500 - 1.503 (0.0591 - 0.0592)	No color
1	1.503 - 1.506 (0.0592 - 0.0593)	Brown
2	1.506 - 1.509 (0.0593 - 0.0594)	Green

G02036780

Fig. 244: Connecting Rod Bearing Specifications**Courtesy of NISSAN MOTOR CO., U.S.A.****Undersize**

Unit: mm (in)

	Thickness	Crank pin journal diameter "Dp"
0.25 (0.0098)	1.626 - 1.634 (0.0640 - 0.0643)	Grind so that bearing clearance is the specified value.

G02036781

Fig. 245: Undersize Specifications**Courtesy of NISSAN MOTOR CO., U.S.A.****Bearing Clearance**

Unit: mm (in)

Connecting rod bearing clearance	Standard	0.020 - 0.045 (0.0008 - 0.0018)
	Limit	0.055 (0.0022)

G02036782

Fig. 246: Bearing Clearance Specifications**Courtesy of NISSAN MOTOR CO., U.S.A.**

TIGHTENING TORQUE

*1: Parts to be tightened in particular orders.

1)-: Order of tightening when tightening two or more times separately.

2002 Infiniti Q45

2002 ENGINE Engine Mechanical - Q45

Unit: N·m (kg·m, in·lb)*

Auto tensioner (Used for alternator, water pump and A/C compressor)		19.6 - 23.5 (2.0 - 2.4, 15 - 17)
Auto tensioner (Used for power steering pump belt)		19.6 - 23.5 (2.0 - 2.4, 15 - 17)
Idler pulley		20.6 - 26.5 (2.1 - 2.7, 16 - 19)
Engine cover		3.3 - 4.4 (0.34 - 0.45, 30 - 39)* ²
Mass air flow sensor		4.25 - 5.75 (0.43 - 0.58, 39 - 51)* ²
Electric throttle control actuator		17.5 - 23.7 (1.8 - 2.4, 13 - 17)
EVAP canister purge volume control solenoid valve		13.3 - 18.1 (1.4 - 1.8, 10 - 13)
EVAP canister purge volume control solenoid valve bracket		10.0 - 13.6 (1.1 - 1.3, 8 - 10)
*1 Intake manifold upper		24.5 - 31.4 (2.5 - 3.2, 18 - 23)
*1 Intake manifold lower		24.5 - 31.4 (2.5 - 3.2, 18 - 23)
*1 Exhaust manifold		26 - 30 (2.6 - 3.1, 19 - 22)
Exhaust manifold cover		5.1 - 6.4 (0.52 - 0.66, 46 - 57)* ²
Heated oxygen sensor		41 - 50 (4.1 - 5.1, 30 - 36)
1 Oil pan	M6 bolt	8.2 - 9.5 (0.83 - 0.97, 72 - 84) ²
	M8 bolt	19.6 - 23.5 (2.0 - 2.4, 15 - 17)
Oil pan drain plug		29.4 - 39.2 (3.0 - 4.0, 22 - 28)
Oil pressure switch		12.3 - 17.2 (1.25 - 1.75, 9 - 12)
Oil strainer		19.6 - 23.5 (2.0 - 2.4, 15 - 17)
Oil filter		14.7 - 20.6 (1.5 - 2.1, 11 - 15)
Oil level gauge guide		11.8 - 13.7 (1.2 - 1.3, 9 - 10)
Rear plate cover		6.3 - 8.3 (0.64 - 0.85, 56 - 73)* ²
Ignition coil		3.8 - 4.4 (0.39 - 0.44, 34 - 38)* ²
Spark plug		19.6 - 29.4 (2.0 - 2.9, 15 - 21)
Fuel feed damper		2.9 - 3.8 (0.29 - 0.38, 26 - 33)* ²
Fuel tube assembly	1) 9.3 - 10.8 (0.95 - 1.1, 6.2 - 7.9) 2) 20.6 - 26.5 (2.1 - 2.7, 16 - 19)	
Fuel sub tube assembly		2.9 - 3.8 (0.29 - 0.38, 26 - 33)* ²
Pressure regulator		2.9 - 3.8 (0.29 - 0.38, 26 - 33)* ²
1 Rocker cover	1) 1.0 - 3.0 (0.1 - 0.31, 9 - 26) ² 2) 7.4 - 9.3 (0.75 - 0.95, 66 - 82)* ²	
PCV valve		1.96 - 2.94 (0.20 - 0.29, 18 - 26)* ²
PCV tube		10.0 - 13.6 (1.1 - 1.3, 8 - 10)
1 Camshaft bracket	M6 and M8 bolts 1) 1.96 (0.2, 17) ² M6 and M8 bolts 2) 5.88 (0.6, 52)* ² M6 bolt 3) 9.0 - 11.8 (0.92 - 1.2, 80 - 104)* ² M8 bolt 4) 29.4 - 33.3 (3.0 - 3.4, 22 - 24)	
Camshaft sprocket		147 - 157 (15.0 - 16.0, 109 - 115)
*1 Front cover		11.8 - 13.7 (1.2 - 1.3, 9 - 10)
Crankshaft pulley	1) 88.2 - 98.0 (9.0 - 9.9, 65 - 72) 2) 90° - 96° (angle tightening)	
Oil pump		8.1 - 9.5 (0.83 - 0.96, 72 - 84)* ²
Timing chain slack guide		15.7 - 17.7 (1.6 - 1.8, 12 - 13)
Timing chain tension guide		15.7 - 17.7 (1.6 - 1.8, 12 - 13)
Chain tensioner		6.4 - 7.5 (0.66 - 0.76, 57 - 66)* ²

G02036783

Fig. 247: Tightening Torque (1 Of 2)
Courtesy of NISSAN MOTOR CO., U.S.A.

2002 Infiniti Q45

2002 ENGINE Engine Mechanical - Q45

Chain tensioner cover		8.1 - 9.5 (0.83 - 0.96, 72 - 84)* ²
Intake valve timing control cover		9.8 - 12.7 (1.0 - 1.3, 87 - 112)* ²
Intake valve timing control solenoid valve		8.4 - 10.8 (0.9 - 1.1, 75 - 95)* ²
Camshaft position sensor (PHASE)		7.1 - 10.8 (0.8 - 1.1, 63 - 95)* ²
Crankshaft position sensor (POS)		7.1 - 10.8 (0.8 - 1.1, 63 - 95)* ²
Intake valve timing control position sensor		7.1 - 10.8 (0.8 - 1.1, 63 - 95)* ²
*1 Cylinder head		1) 98.1 (10.0, 72)
		2) 0 (0.0, 0)
		3) 39.2 - 49.0 (4.0 - 5.0, 29 - 36)
		4) 60° - 65° (angle tightening)
		5) 60° - 65° (angle tightening)
Engine coolant temperature sensor		19.6 - 29.4 (2.0 - 3.0, 15 - 21)
Engine slinger (front and rear)		30.4 - 36.3 (3.1 - 3.7, 23 - 26)
*1 Main bearing cap	M12 bolt	1) 36.3 - 42.1 (3.7 - 4.3, 27 - 31)
	M9 bolt	2) 26.5 - 32.3 (2.7 - 3.3, 20 - 23)
	M12 bolt	3) 40° - 45° (angle tightening)
	M9 bolt	4) 30° - 35° (angle tightening)
	M10 side bolt	5) 46.1 - 51.9 (4.7 - 5.3, 34 - 38)
Connecting rod cap		1) 13.7 - 15.7 (1.4 - 1.6, 10 - 12)
		2) 60° - 65° (angle tightening)
Rear oil seal retainer		6.3 - 8.3 (0.85 - 0.95, 56 - 73)* ²
Drive plate		84 - 93 (8.5 - 9.5, 62 - 68)
Knock sensor		16 - 26 (1.6 - 2.7, 12 - 19)

G02036784

Fig. 248: Tightening Torque (2 Of 2)
Courtesy of NISSAN MOTOR CO., U.S.A.