

**2007 ENGINE****Engine Mechanical (2GR-FE) - Camry****ENGINE****ON-VEHICLE INSPECTION****1. INSPECT ENGINE COOLANT**

- a. Inspect the engine coolant (See ON-VEHICLE INSPECTION ).

**2. INSPECT ENGINE OIL**

- a. Inspect the engine oil (See ON-VEHICLE INSPECTION ).

**3. INSPECT BATTERY**

- a. Inspect the battery (See ON-VEHICLE INSPECTION ).

**4. INSPECT SPARK PLUGS**

- a. Inspect the spark plugs (See ON-VEHICLE INSPECTION ).

**5. INSPECT AIR CLEANER FILTER ELEMENT SUB-ASSEMBLY**

- a. Remove the air cleaner filter element sub-assembly.
- b. Visually check that there is no dirt, blockage, and/or damage to the air cleaner filter element.

**HINT:**

- If there is any dirt or a blockage in the air cleaner filter element, clean it with compressed air.
- If any dirt or a blockage remains even after cleaning the air cleaner filter element with compressed air, replace it.

**6. INSPECT VALVE LASH ADJUSTER NOISE**

- a. Rev up the engine several times. Check that the engine does not emit unusual noises.

If unusual noises occur, warm up the engine and idle it for over 30 minutes. Then repeat this procedure.

**HINT:**


If any defects or problems are found during the inspection above, perform lash adjuster inspection (See INSPECTION).

**7. INSPECT IGNITION TIMING**

- a. Warm up the engine.
- b. When using the intelligent tester:

Check the ignition timing.

1. Connect the intelligent tester to the DLC3.

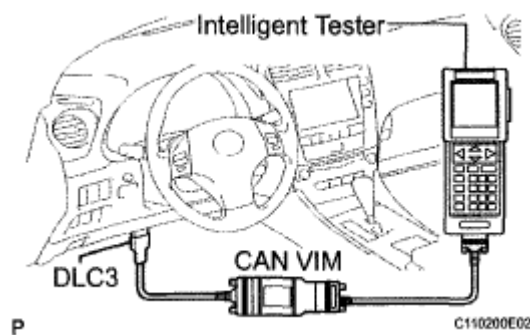

**Fig. 1: Connecting Cable Of Intelligent Tester (With Can Vim) To DLC3**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

2. Enter DATA LIST mode with the intelligent tester.

**Ignition timing:**


**8 to 12° BTDC at idle**

**HINT:**

Refer to the intelligent tester operator's service information for help when selecting the DATA LIST.

- c. When not using the intelligent tester: Check the ignition timing.
  1. Using SST, connect terminals 13 (TC) and 4 (CG) of the DLC3.

**SST 09843-18040**

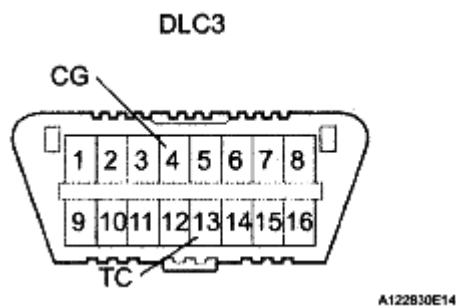

**Fig. 2: Identifying DLC3 Connector**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


**NOTE:**

- **Confirm the terminal numbers before connecting them. Connection with a wrong terminal can damage the engine.**
- **Turn off all electrical systems before connecting the terminals.**

- **Perform this inspection after the cooling fan motor is turned off.**

2. Remove the V-bank cover.
3. Pull out the red lead wire harness.
4. Connect the tester terminal of the timing light to the red lead wire as shown in the illustration.

**NOTE:** Use a timing light which can detect the first signal.

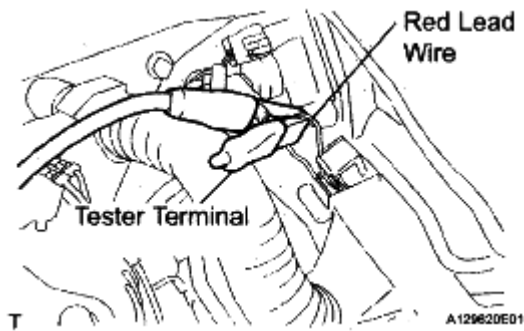

**Fig. 3: Connecting Tester Terminal Of Timing Light To Red Lead Wire**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

5. Check the ignition timing at idle.

**Ignition timing:**

**8 to 12° BTDC at idle**

**NOTE:** When checking the ignition timing, the transmission should be in neutral.

**HINT:**

Run the engine at 1,000 to 1,300 rpm for 5 seconds, and then check that the engine rpm returns to idle speed.

6. Disconnect terminals 13 (TC) and 4 (CG) of the DLC3.
7. Check the ignition timing at idle.

**Ignition timing:**

**12 to 22° BTDC at idle**

8. Confirm that the ignition timing moves to the advanced angle side when the engine rpm is

increased.


9. Remove the timing light.

## 8. INSPECT ENGINE IDLE SPEED

- a. Warm up the engine.
- b. When using the intelligent tester:

Check the idle speed.

1. Connect the intelligent tester to the DLC3.

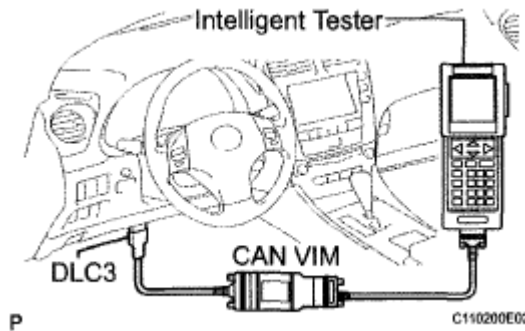

**Fig. 4: Connecting Intelligent Tester To DLC3**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

2. Enter DATA LIST mode with the intelligent tester.

**Idle speed:**

**600 to 700 rpm**

**NOTE:**

- When checking the idle speed, the transmission should be in neutral.
- Check the idle speed with the cooling fan off.
- Switch off all accessories and air conditioning before connecting the intelligent tester.


**HINT:**

Refer to the intelligent tester operator's service information for further details.

- c. When not using the intelligent tester:

Check the idle speed.

1. Using SST, connect the tachometer test probe to terminal 9 (TAC) of the DLC3.

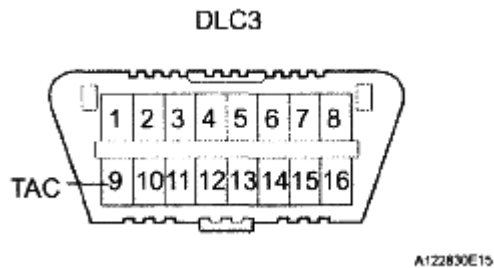**SST 09843-18030**


**Fig. 5: Identifying DLC3 Connector**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

2. Check the idle speed.

**Idle speed:****600 to 700 rpm**

## 9. INSPECT COMPRESSION

- a. Warm up and stop the engine.
- b. Disconnect the injector connectors.
- c. Remove the intake air surge tank (See **REMOVAL** ).
- d. Remove the 6 ignition coils.
- e. Remove the 6 spark plugs.
- f. Check the cylinder compression pressure.

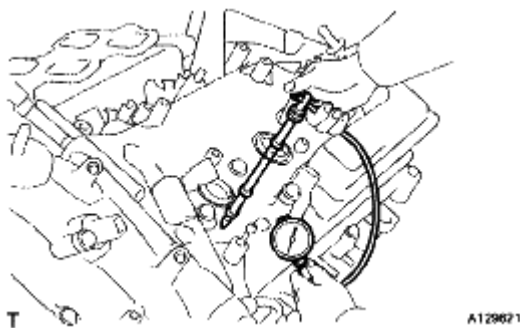

**Fig. 6: Checking Cylinder Compression Pressure**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

1. Insert a compression gauge into the spark plug hole.
2. While cranking the engine, measure the compression pressure.

**Compression pressure:**

**1.4 MPa (14 kgf/cm<sup>2</sup> , 199 psi)**

**Minimum pressure:**

**0.98 MPa (10 kgf/cm<sup>2</sup> , 142 psi)**

**Difference between each cylinder:**

**0.1 MPa (1.0 kgf/cm<sup>2</sup> , 15 psi)**

**NOTE:**

- **Always use a fully charged battery to obtain an engine speed of 250 rpm or more.**
  - **Check the other cylinders' compression pressure in the same way.**
  - **This measurement must be done as quickly as possible.**
3. If the cylinder compression is low, pour a small amount of engine oil into the cylinder through the spark plug hole and inspect again.

**HINT:**

- If adding oil increases the compression, the piston rings and/or cylinder bore may be worn or damaged.
  - If pressure stays low, a valve may be stuck or seated improperly, or there may be leakage in the gasket.
- g. Install the 6 spark plugs.

**Torque: 18 N\*m (184 kgf\*cm, 13 ft.\*lbf)**

- h. Install the 6 ignition coils.

**Torque: 10 N\*m (102 kgf\*cm, 7 ft.\*lbf)**

- i. Install the intake air surge tank. (See **INSTALLATION** ).

**10. INSPECT CO/HC**

- a. Start the engine.
- b. Run the engine at 2,500 rpm for approximately 180 seconds.
- c. Insert the CO/HC meter testing probe at least 40 cm (1.3 ft) into the tailpipe during idling.
- d. Check CO/HC concentration at idle and/or 2,500 rpm.

**HINT:**

Check regulations and restrictions in your area when performing 2 mode CO/HC concentration testing (engine check at both idle speed and at 2,500 rpm).

## 2007 Toyota Camry XLE

### 2007 ENGINE Engine Mechanical (2GR-FE) - Camry

If the CO/HC concentration does not comply with regulations, perform troubleshooting in the order given below.


1. Check A/F sensor and heated oxygen sensor operation.
2. See the table below for possible causes, and then inspect and repair.

#### CO/HC

CO	HC	Problems	Causes
Normal	High	Rough idle	<ol style="list-style-type: none"><li>1. Faulty ignitions:<ul style="list-style-type: none"><li>○ Incorrect timing</li><li>○ Fouled, shorted or improperly gapped plugs</li></ul></li><li>2. Incorrect valve clearance</li><li>3. Leaks in intake and exhaust valves</li><li>4. Leaks in cylinders</li></ol>
Low	High	Rough idle (fluctuating HC reading)	<ol style="list-style-type: none"><li>1. Vacuum leaks:<ul style="list-style-type: none"><li>○ PCV hoses</li><li>○ Intake manifold</li><li>○ Throttle body</li><li>○ Brake booster line</li></ul></li><li>2. Lean mixture causing misfire</li></ol>
High	High	Rough idle (black smoke from exhaust)	<ol style="list-style-type: none"><li>1. Restricted air filter</li><li>2. Plugged PCV valve</li><li>3. Faulty SFI system:<ul style="list-style-type: none"><li>○ Faulty fuel pressure regulator</li><li>○ Defective ECT sensor</li><li>○ Defective MAF meter</li><li>○ Faulty ECM</li><li>○ Faulty injectors</li><li>○ Faulty throttle position sensor</li></ul></li></ol>

## DRIVE BELT

### COMPONENTS

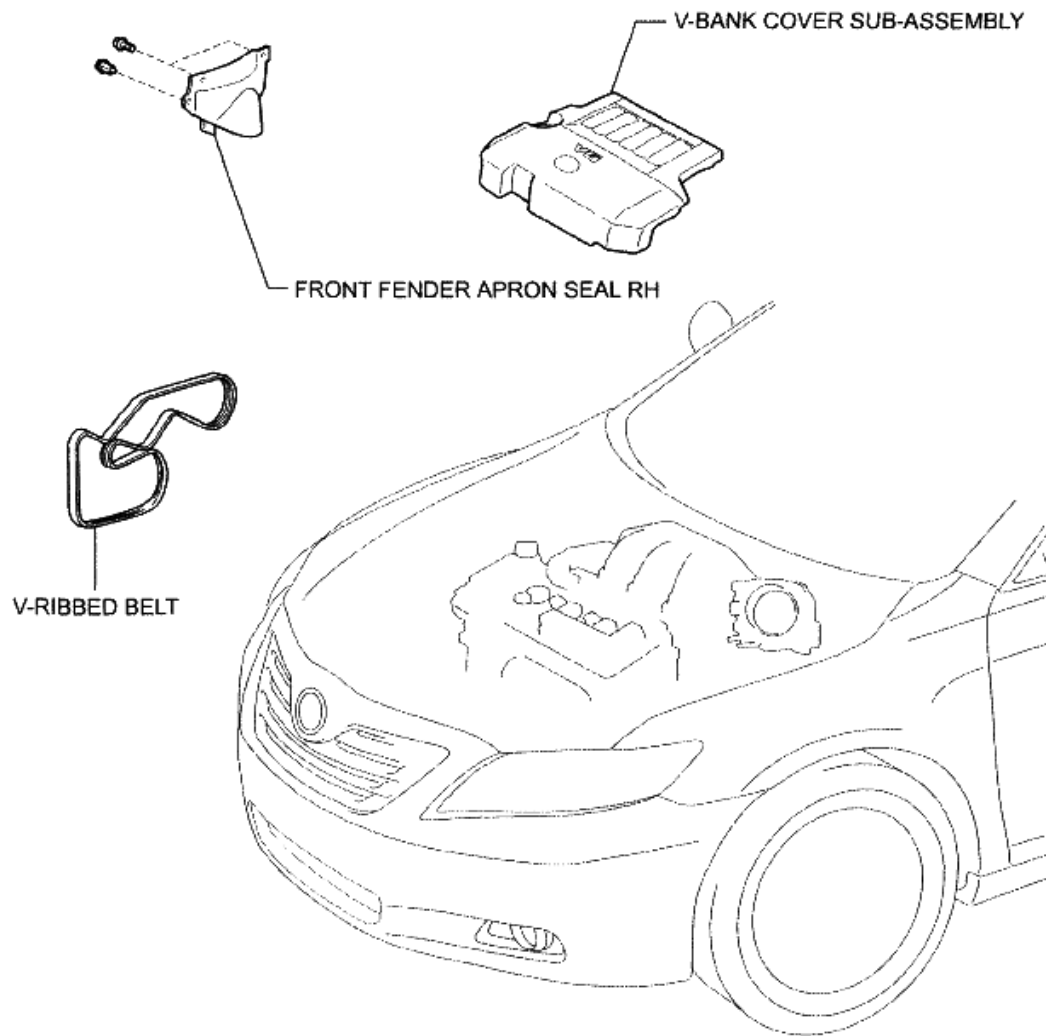

A134931E01

**Fig. 7: Identifying Drive Belt Components**


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**REMOVAL**

1. **REMOVE FRONT WHEEL RH**
2. **REMOVE FRONT FENDER APRON SEAL RH**
3. **REMOVE V-BANK COVER SUB-ASSEMBLY** (See **REMOVAL**)
4. **REMOVE V-RIBBED BELT**
  - a. Using SST, release the belt tension by turning the belt tensioner counterclockwise, and remove the V-ribbed belt from the belt tensioner.


**SST 09249-63010**



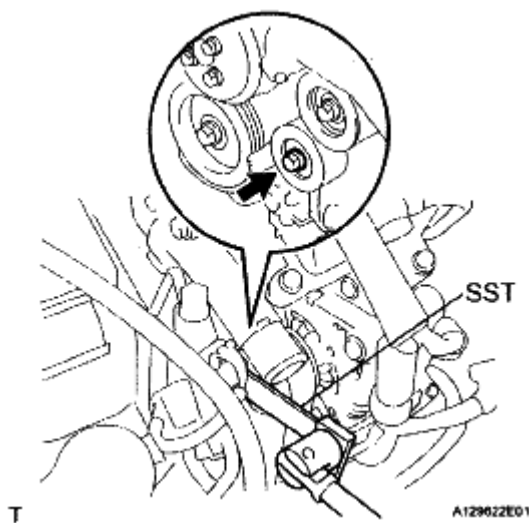

**Fig. 8: Turning Belt Tensioner Counterclockwise**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. While turning the belt tensioner counterclockwise, align with its holes, and then insert the 5 mm bi-hexagon wrench into the holes to fix the V-ribbed belt tensioner.

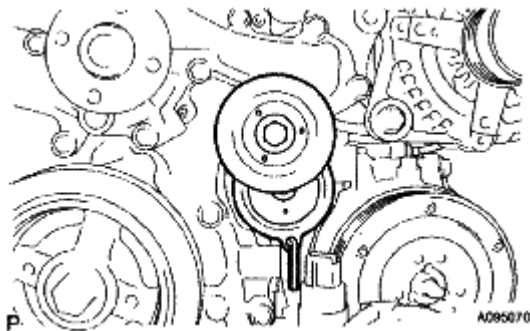

**Fig. 9: Inserting Bi-Hexagon Wrench Into Holes To Fix V-Ribbed Belt Tensioner**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## INSPECTION

### 1. INSPECT V-RIBBED BELT

- a. Visually check the V-ribbed belt for excessive wear, frayed cords, etc.

If any defect has been found, replace the V-ribbed belt.


#### HINT:

Cracks on the rib side of a V-ribbed belt are considered acceptable.

If the drive belt has chunks missing from its ribs, it should be replaced.

**HINT:**

- A "new belt" is a belt which has been used for less than 5 minutes with the engine running.
- A "used belt" is a belt which has been used for 5 minutes or more with the engine running.

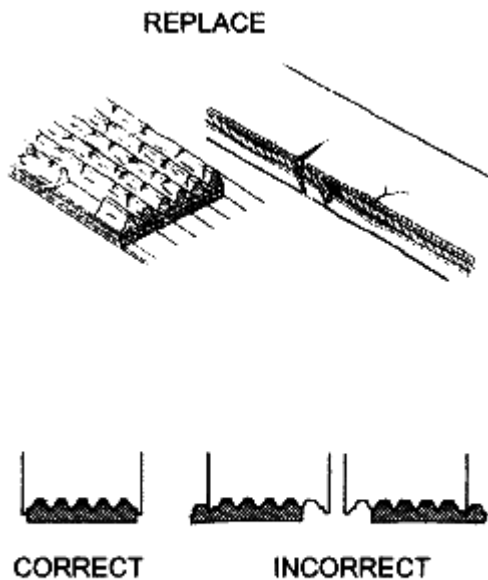

A131418E01

**Fig. 10: Checking V-Ribbed Belt For Excessive Wear And Frayed Cords**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**2. INSPECT V-RIBBED BELT TENSIONER ASSEMBLY**


- a. Check that nothing gets caught in the tensioner by turning it clockwise and counterclockwise.

If a malfunction exists, replace the tensioner.

**INSTALLATION****1. INSTALL V-RIBBED BELT**


- a. Install the V-ribbed belt.
- b. Using SST, turn the belt tensioner counterclockwise and remove the bar.

**SST 09249-63010**

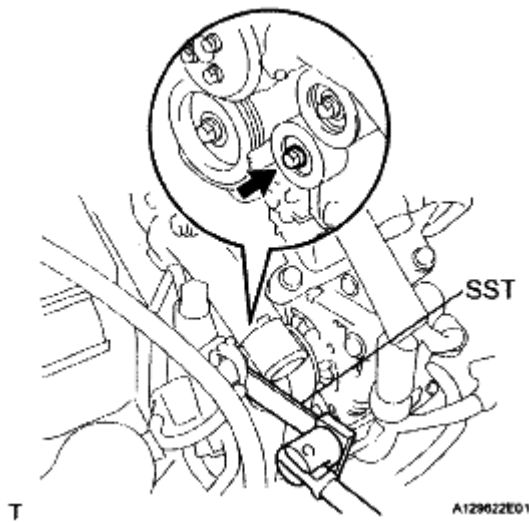

**Fig. 11: Turning Belt Tensioner Counterclockwise**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. If it is difficult to install the V-ribbed belt, perform the following procedure:
1. Put the V-ribbed belt on every pulley except the tensioner pulley as shown in the illustration.

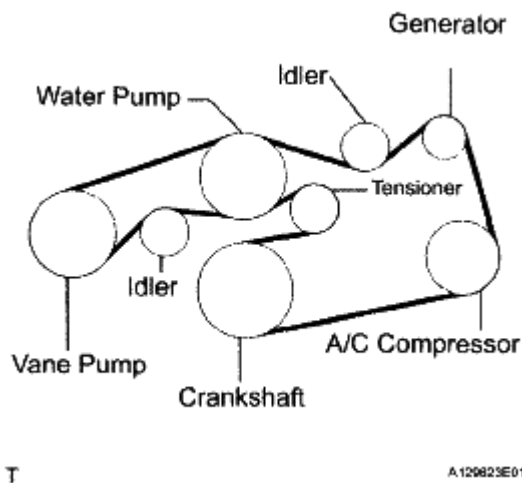

**Fig. 12: View Of Drive Belt Routing**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

2. While releasing the belt tension by turning the belt tensioner counterclockwise, put the V-ribbed belt on the tensioner pulley.

**NOTE:**

- Put the backside of the V-ribbed belt on the tensioner pulley and idler pulley.
- Check that the V-ribbed belt is properly set to each pulley.

3. After installing the V-ribbed belt, check that it fits properly in the ribbed grooves. Confirm


that the belt has not slipped out of the grooves on the bottom of the crank pulley by hand.

2. INSTALL V-BANK COVER SUB-ASSEMBLY (See **INSTALLATION**)
3. INSTALL FRONT FENDER APRON SEAL RH
4. INSTALL FRONT WHEEL RH

Torque: 103 N\*m (1,050 kgf\*cm, 76 ft.\*lbf)

## ENGINE FRONT OIL SEAL

### COMPONENTS

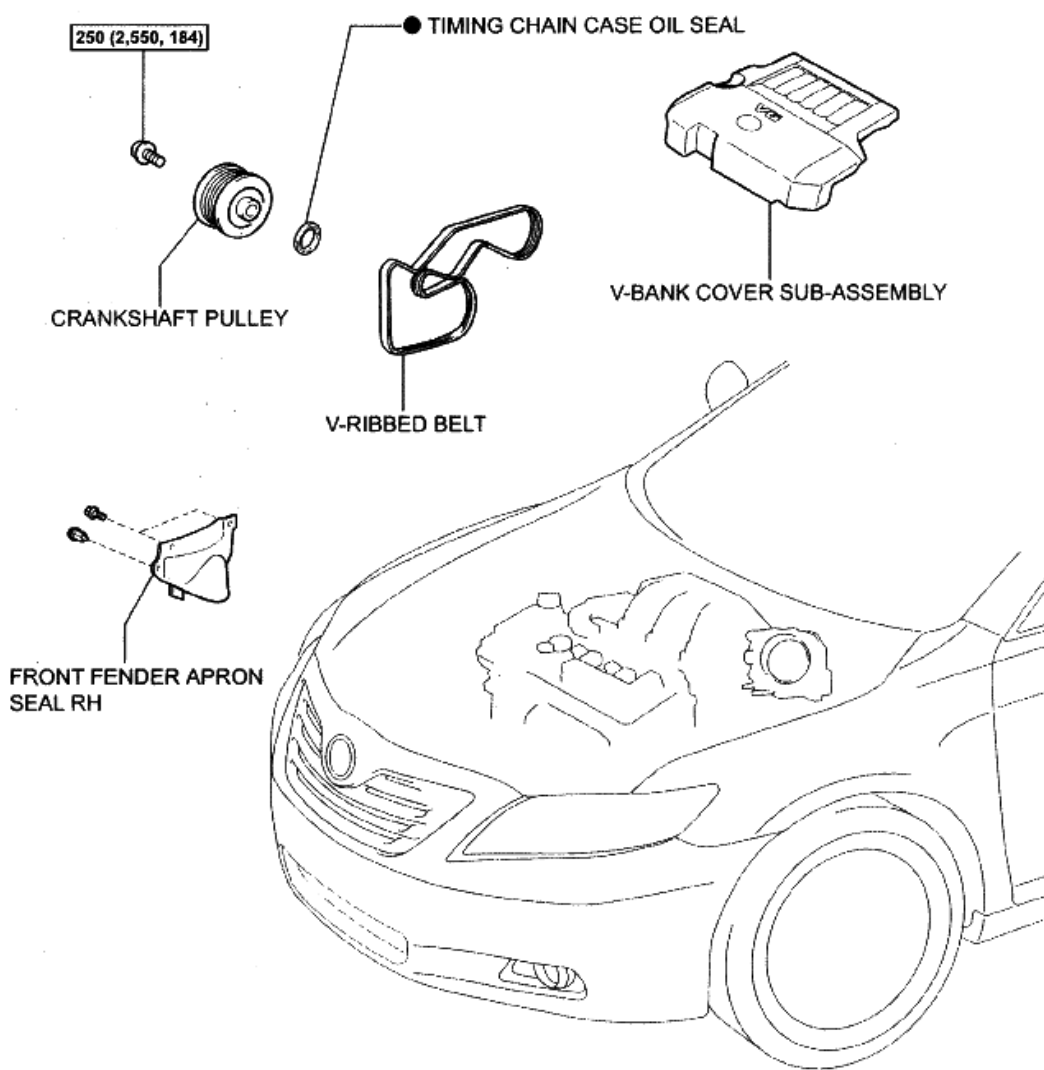

**N\*m (kgf\*cm, ft.\*lbf)**: Specified torque

● Non-reusable part

A134832E01


**Fig. 13: Identifying Engine Front Oil Seal Components With Torque Specifications**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## REMOVAL

1. **REMOVE FRONT WHEEL RH**
2. **REMOVE FRONT FENDER APRON SEAL RH**
3. **REMOVE V-BANK COVER SUB-ASSEMBLY** (See **REMOVAL**)
4. **REMOVE V-RIBBED BELT** (See **REMOVAL**)
5. **REMOVE CRANKSHAFT PULLEY**
  - a. Using SST, loosen the crankshaft pulley bolt.


**SST 09213-70011 (09213-70020), 09330-00021**

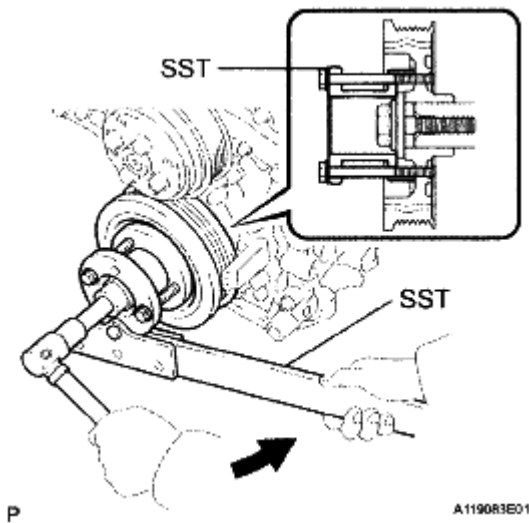

**Fig. 14: Loosening Crankshaft Pulley Bolt Using SST**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Using SST, remove the crankshaft pulley bolt and crankshaft pulley.

**SST 09950-50013 (09951 -05010, 09952-05010, 09953-05020, 09954-05021)**

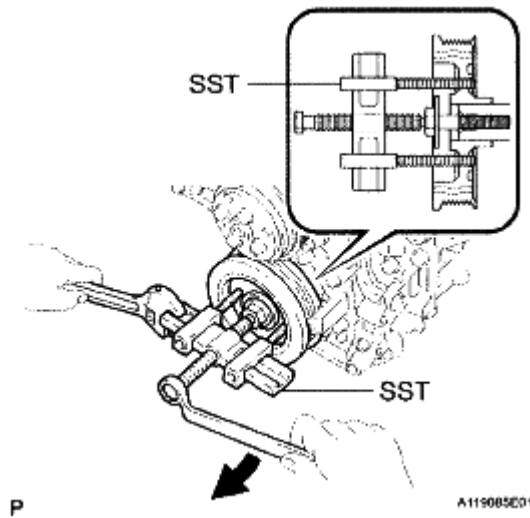

**Fig. 15: Removing Pulley Bolt And Pulley**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


## 6. REMOVE TIMING CHAIN CASE OIL SEAL

- Using a screwdriver, pry out the oil seal.

HINT:

Tape the screwdriver tip before use.

**NOTE:** After the removal, check the crankshaft for damage. If it is damaged, smooth the surface with 400-grit sandpaper.

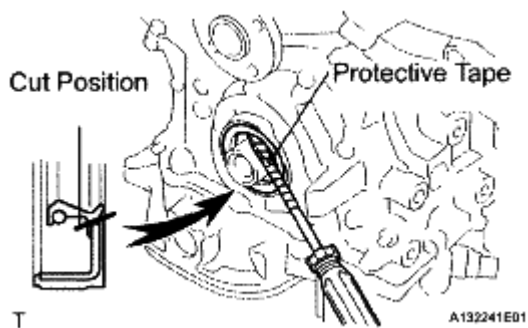

**Fig. 16: Prying Out Oil Seal**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## INSTALLATION

### 1. INSTALL TIMING CHAIN CASE OIL SEAL


- Apply MP grease to a new oil seal lip.
- Using SST and a hammer, tap in the oil seal until its surface is flush with the timing chain cover

edge.

SST 09316-60011 (09316-00011)

**NOTE:**

- Keep the lip free of foreign matter.
- Do not tap the oil seal at an angle.

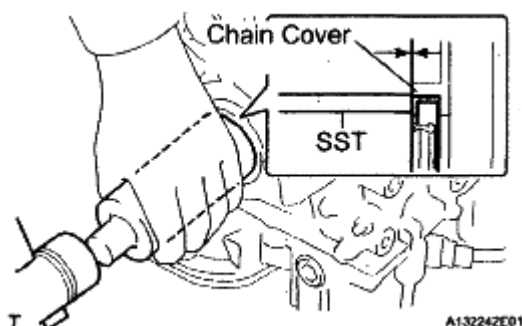

**Fig. 17: Installing Oil Seal**


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 2. INSTALL CRANKSHAFT PULLEY

- a. Align the pulley set key with the key groove of the pulley, and slide on the pulley.
- b. Using SST, install the pulley bolt.

SST 092113-70011 (09213-70020), 09330-00021

**Torque: 250 N\*m (2,550 kgf\*cm, 184 ft.\*lbf)**

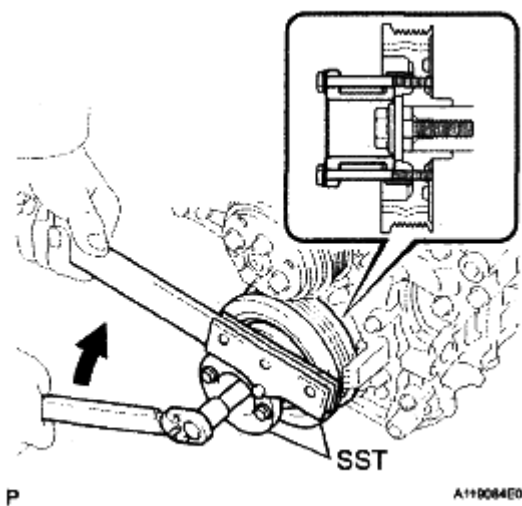

**Fig. 18: Installing Crankshaft Pulley Bolt**


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

3. INSTALL V-RIBBED BELT (See INSTALLATION)
4. INSTALL V-BANK COVER SUB-ASSEMBLY (See INSTALLATION)
5. INSTALL FRONT FENDER APRON SEAL RH
6. INSTALL FRONT WHEEL RH

Torque: 103 N\*m (1,050 kgf\*cm, 76 ft.\*lbf)

## ENGINE REAR OIL SEAL

### COMPONENTS

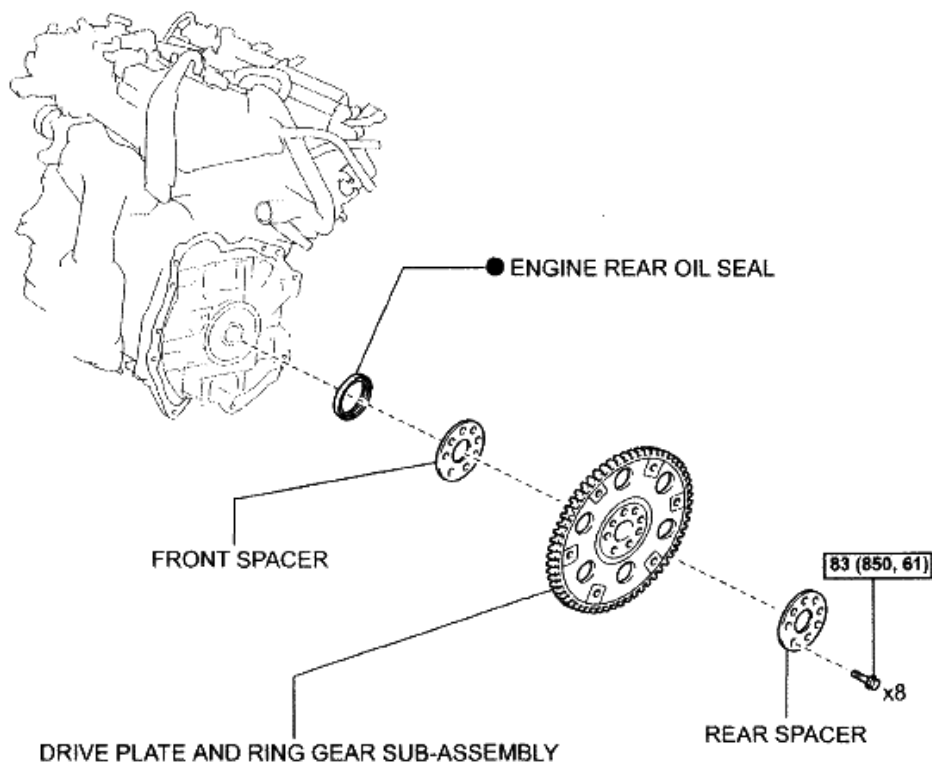

A134930E01

**Fig. 19: Identifying Engine Rear Oil Seal Components With Torque Specifications**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### REMOVAL



**1. REMOVE AUTOMATIC TRANSAXLE ASSEMBLY**


HINT:

See **REMOVAL** .

**2. REMOVE DRIVE PLATE AND RING GEAR SUB-ASSEMBLY**


- a. Using SST, hold the crankshaft.

**SST 09213-70011 (09213-70020), 09330-00021**

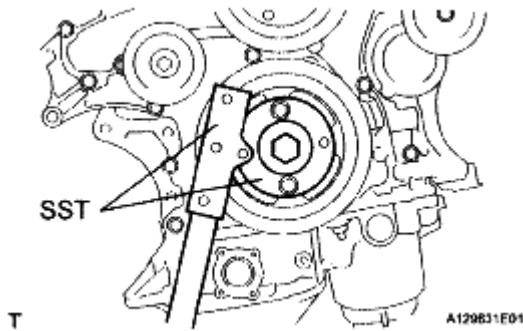

**Fig. 20: Holding Crankshaft Using SST**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Remove the 8 bolts, front spacer, drive plate and rear spacer.

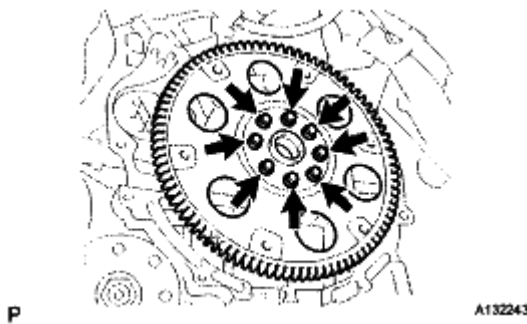


**Fig. 21: Removing Bolts, Front Spacer, Drive Plate And Rear Spacer**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**3. REMOVE ENGINE REAR OIL SEAL**

- a. Using a knife, cut off the oil seal lip.
- b. Using a screwdriver, pry out the oil seal.

**NOTE:** Be careful not to damage the crankshaft. Tape the screwdriver tip before use.

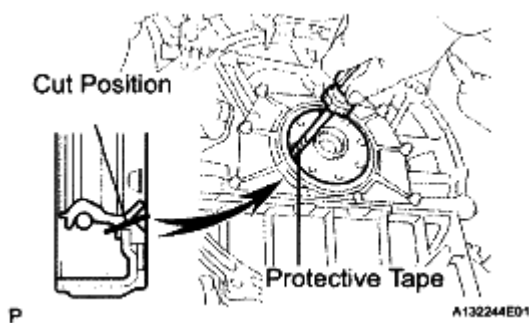**Fig. 22: Prying Out Oil Seal**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## INSTALLATION


### 1. INSTALL ENGINE REAR OIL SEAL

- Apply MP grease to a new oil seal lip.
- Using SST and a hammer, tap in the oil seal.

**SST 09223-15030, 09950-70010 (09951-07150)**

**Oil seal tap in depth:**

**-0.5 to 0.5 mm (-0.020 to 0.020 in.)**

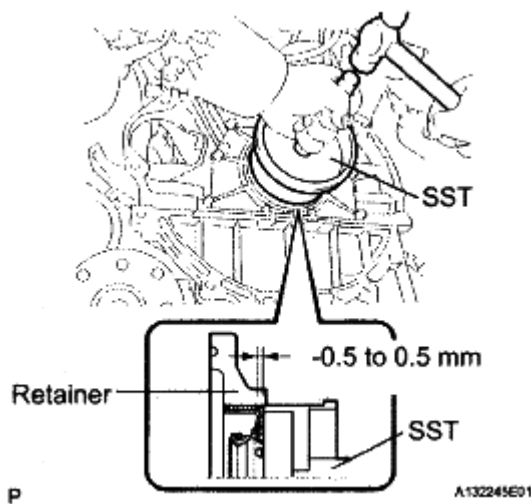
**Fig. 23: Tapping In Oil Seal**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### 2. INSTALL DRIVE PLATE AND RING GEAR SUB-ASSEMBLY

- Using SST, hold the crankshaft.

**SST 09213-70011 (09213-70020), 09330-00021**

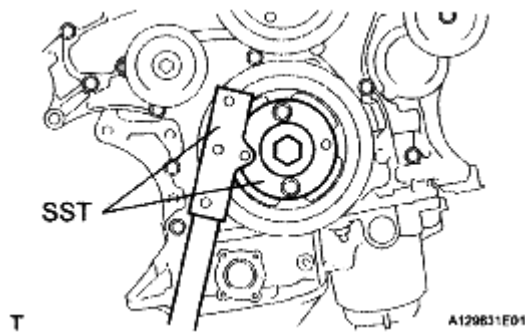


**Fig. 24: Holding Crankshaft Using SST**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Apply adhesive to 2 or 3 threads of the mounting bolt end.

**Adhesive:**


**Part No. 08833-00070, THREE BOND 1324 or equivalent**

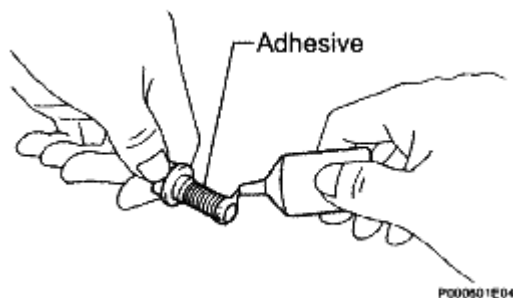

**Fig. 25: Applying Adhesive To 2 Or 3 Threads Of Mounting Bolt End**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

1. Install the front spacer, drive plate and rear spacer on the crankshaft.
2. Install and tighten the 8 mounting bolts uniformly in several steps.

**Torque: 83 N\*m (850 kgf\*cm, 61 ft.\*lbf)**

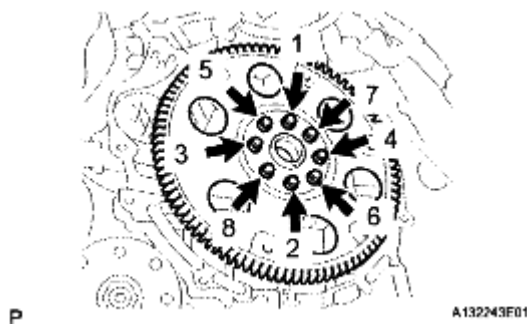

**Fig. 26: Tightening Mounting Bolts**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### 3. INSTALL AUTOMATIC TRANSAXLE ASSEMBLY

HINT:


See INSTALLATION .

## ENGINE ASSEMBLY

### COMPONENTS

## 2007 Toyota Camry XLE

2007 ENGINE Engine Mechanical (2GR-FE) - Camry

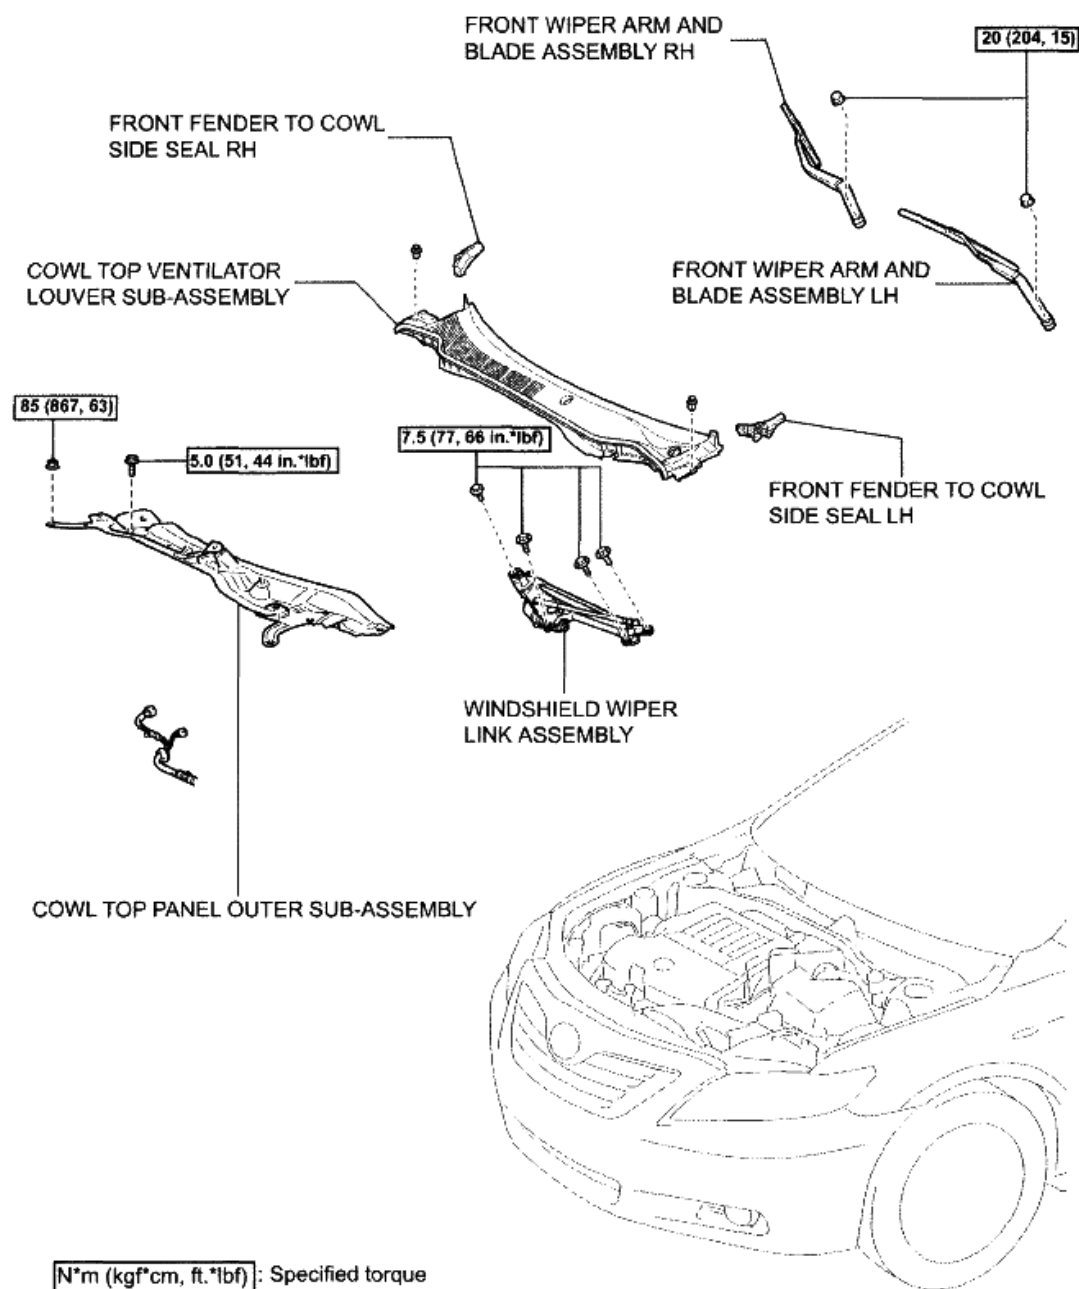


A134938E01

**Fig. 27: Identifying Engine Assembly Components With Torque Specifications (1 Of 9)**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 2007 Toyota Camry XLE


2007 ENGINE Engine Mechanical (2GR-FE) - Camry

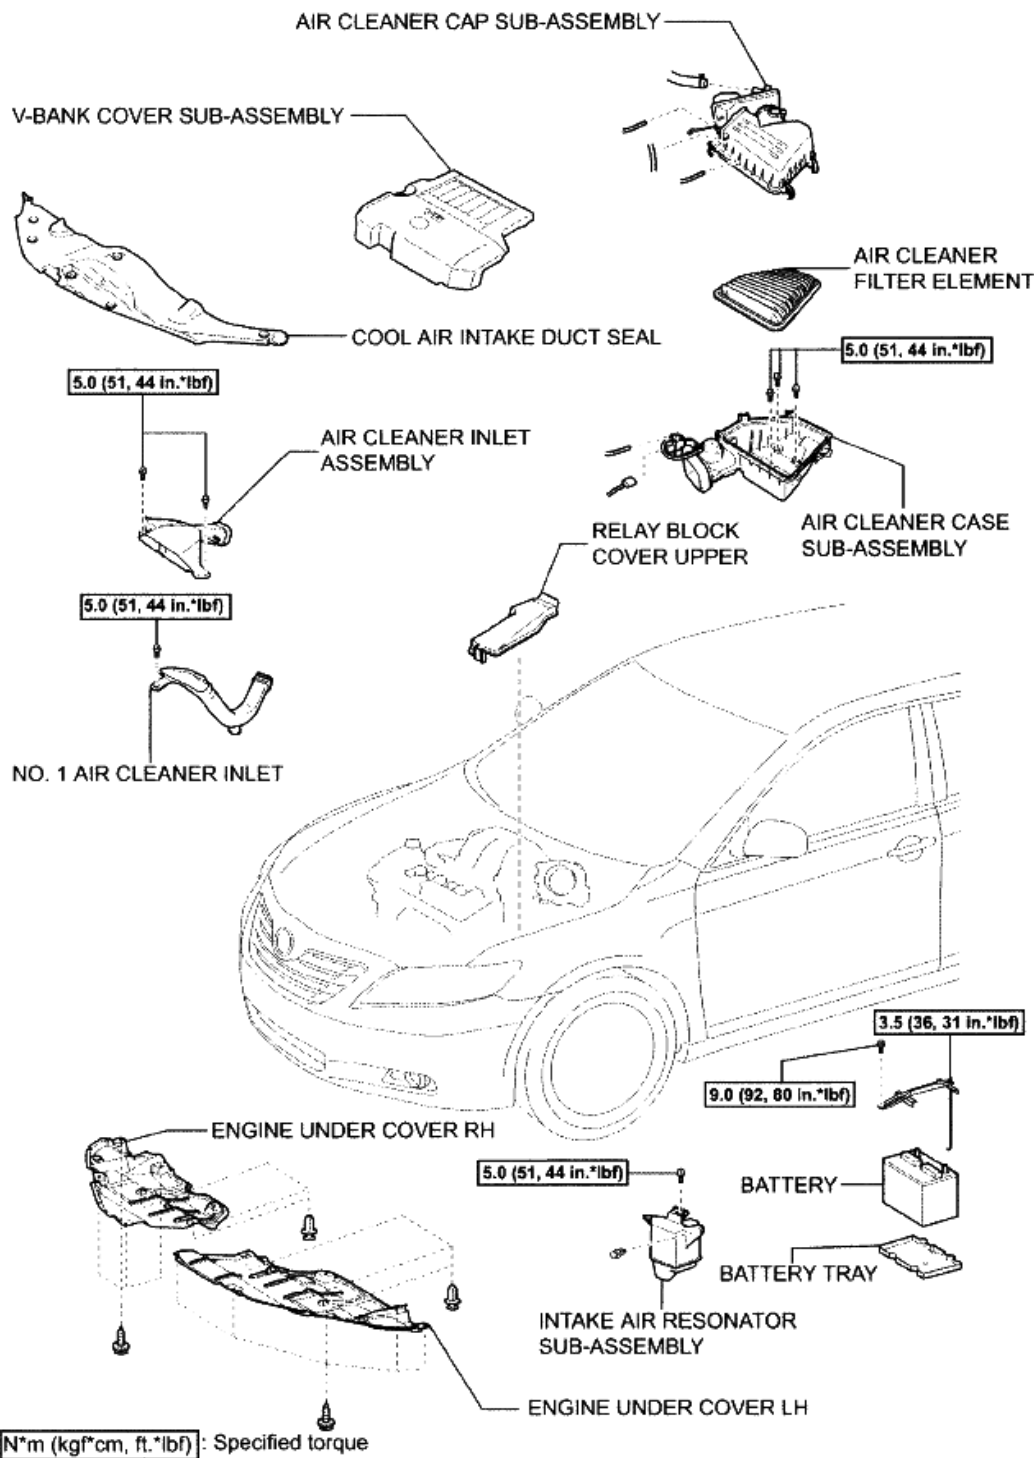

**Fig. 28: Identifying Engine Assembly Components With Torque Specifications (2 Of 9)**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 2007 Toyota Camry XLE

2007 ENGINE Engine Mechanical (2GR-FE) - Camry

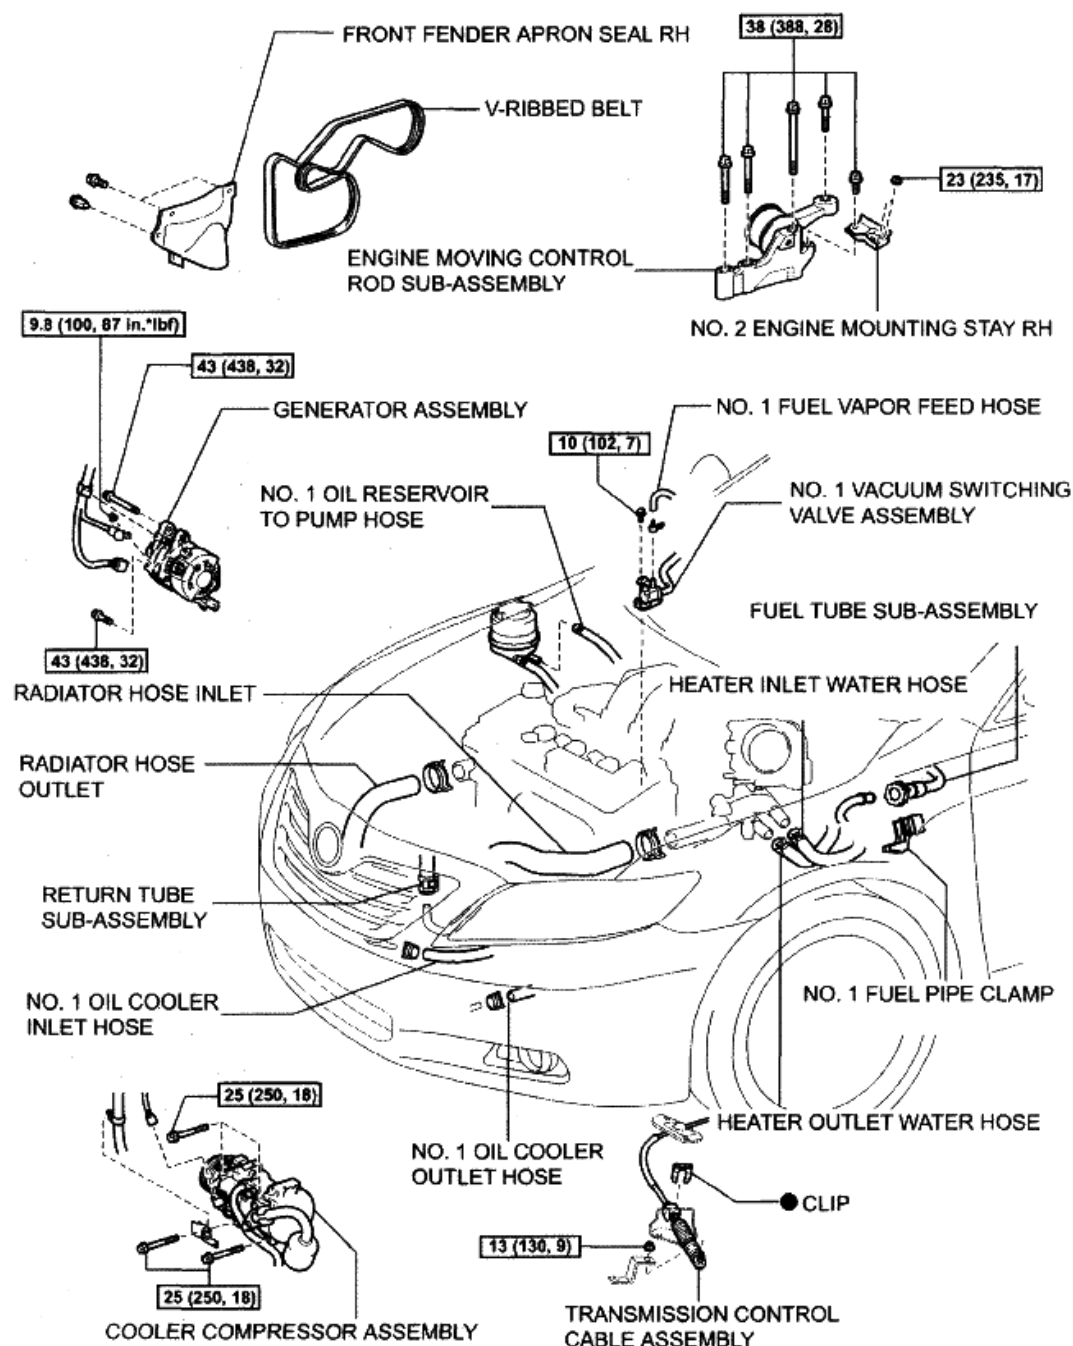


N\*m (kgf\*cm, ft.\*lbf) : Specified torque ● Non-reusable part

A132995E01

**Fig. 29: Identifying Engine Assembly Components With Torque Specifications (3 Of 9)**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 2007 Toyota Camry XLE

2007 ENGINE Engine Mechanical (2GR-FE) - Camry

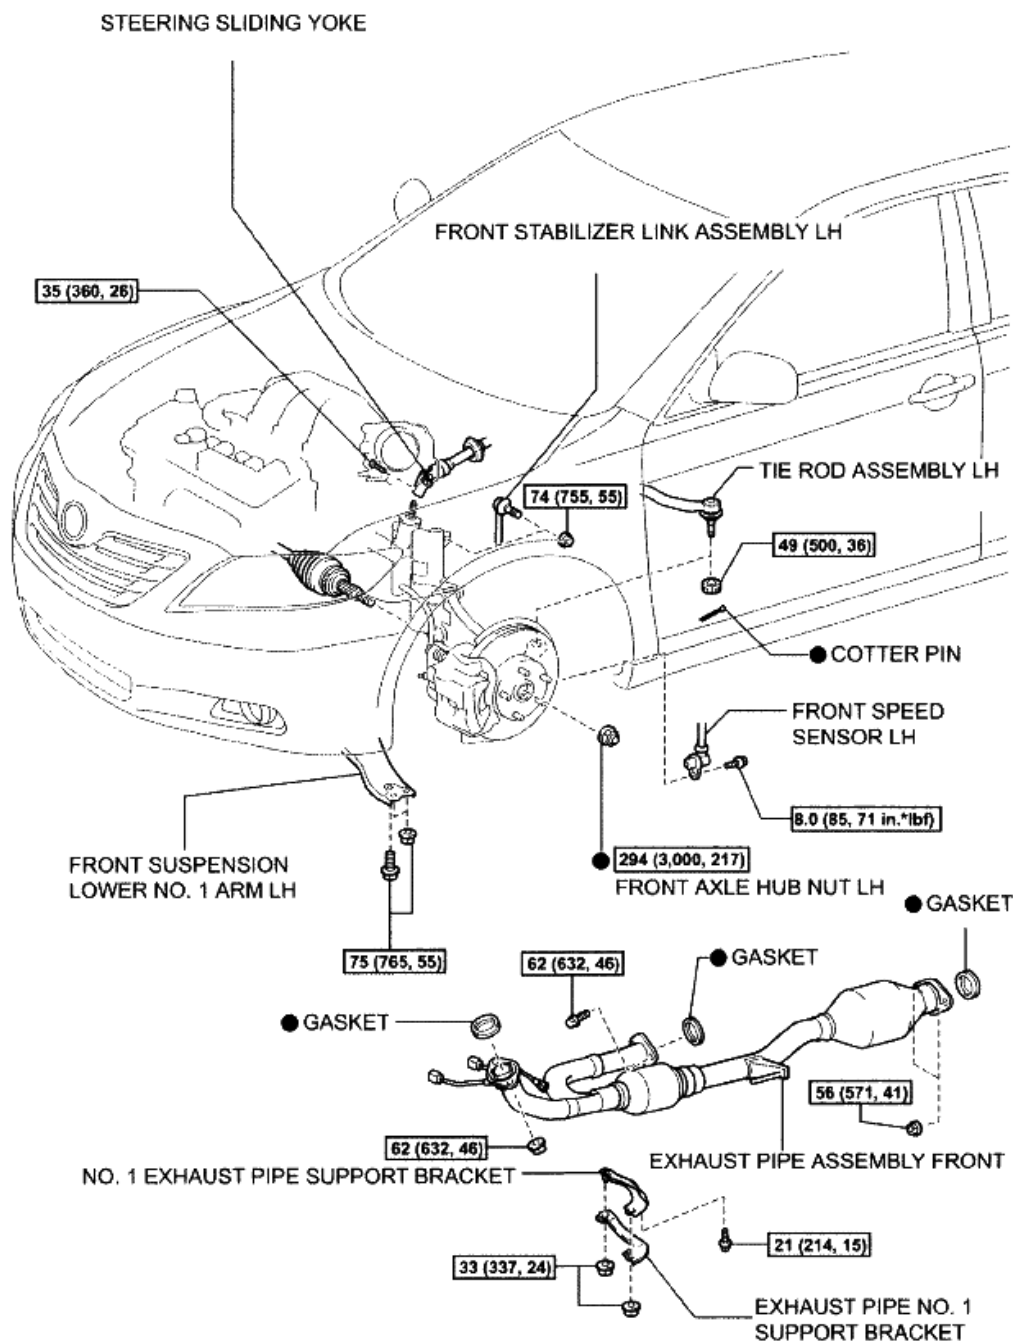

[N\*m (kgf\*cm, ft.\*lbf)]: Specified torque

● Non-reusable part

c


A132996E01

**Fig. 30: Identifying Engine Assembly Components With Torque Specifications (4 Of 9)**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.



## 2007 Toyota Camry XLE


2007 ENGINE Engine Mechanical (2GR-FE) - Camry

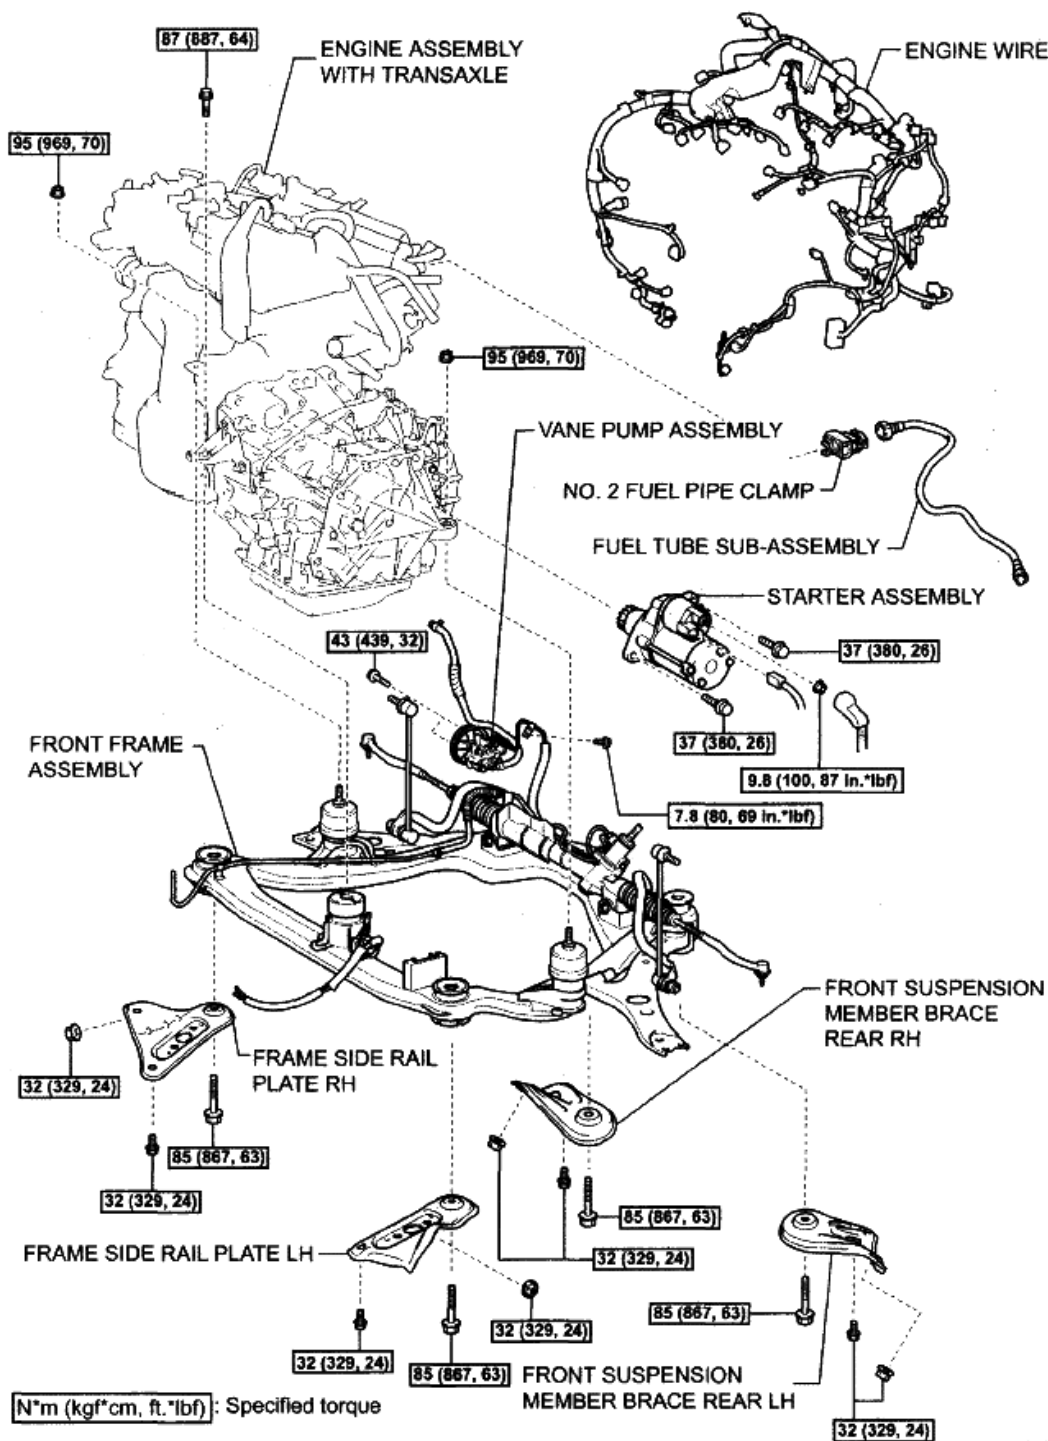

**Fig. 31: Identifying Engine Assembly Components With Torque Specifications (5 Of 9)**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 2007 Toyota Camry XLE

2007 ENGINE Engine Mechanical (2GR-FE) - Camry

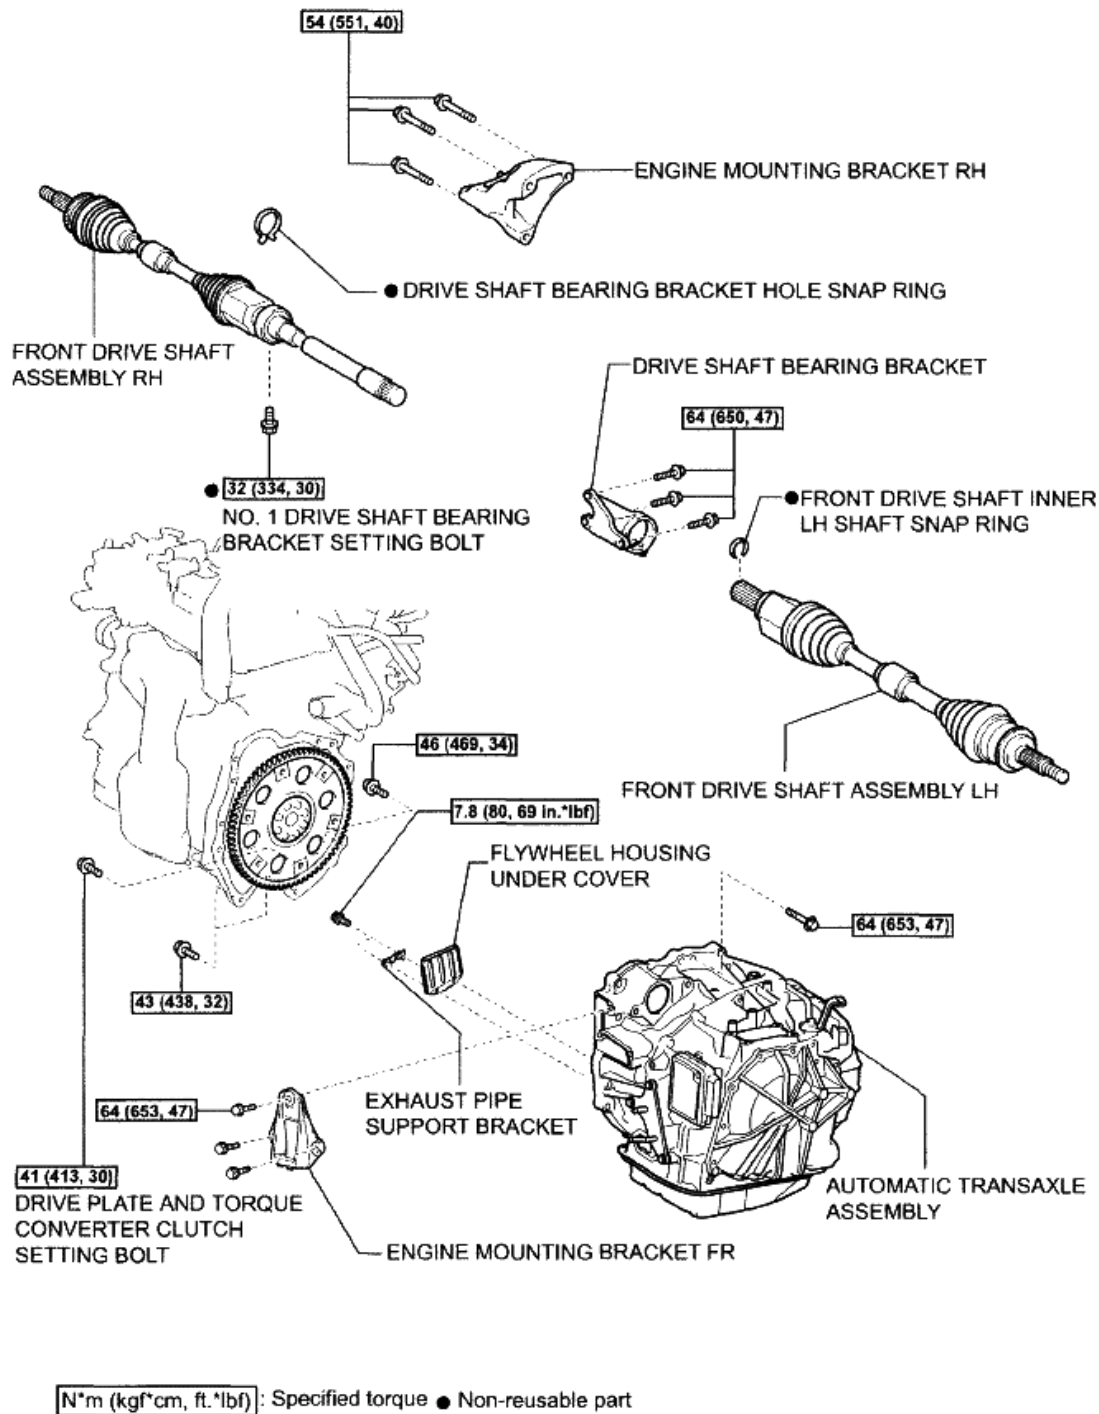


A134940E01

**Fig. 32: Identifying Engine Assembly Components With Torque Specifications (6 Of 9)**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 2007 Toyota Camry XLE

2007 ENGINE Engine Mechanical (2GR-FE) - Camry

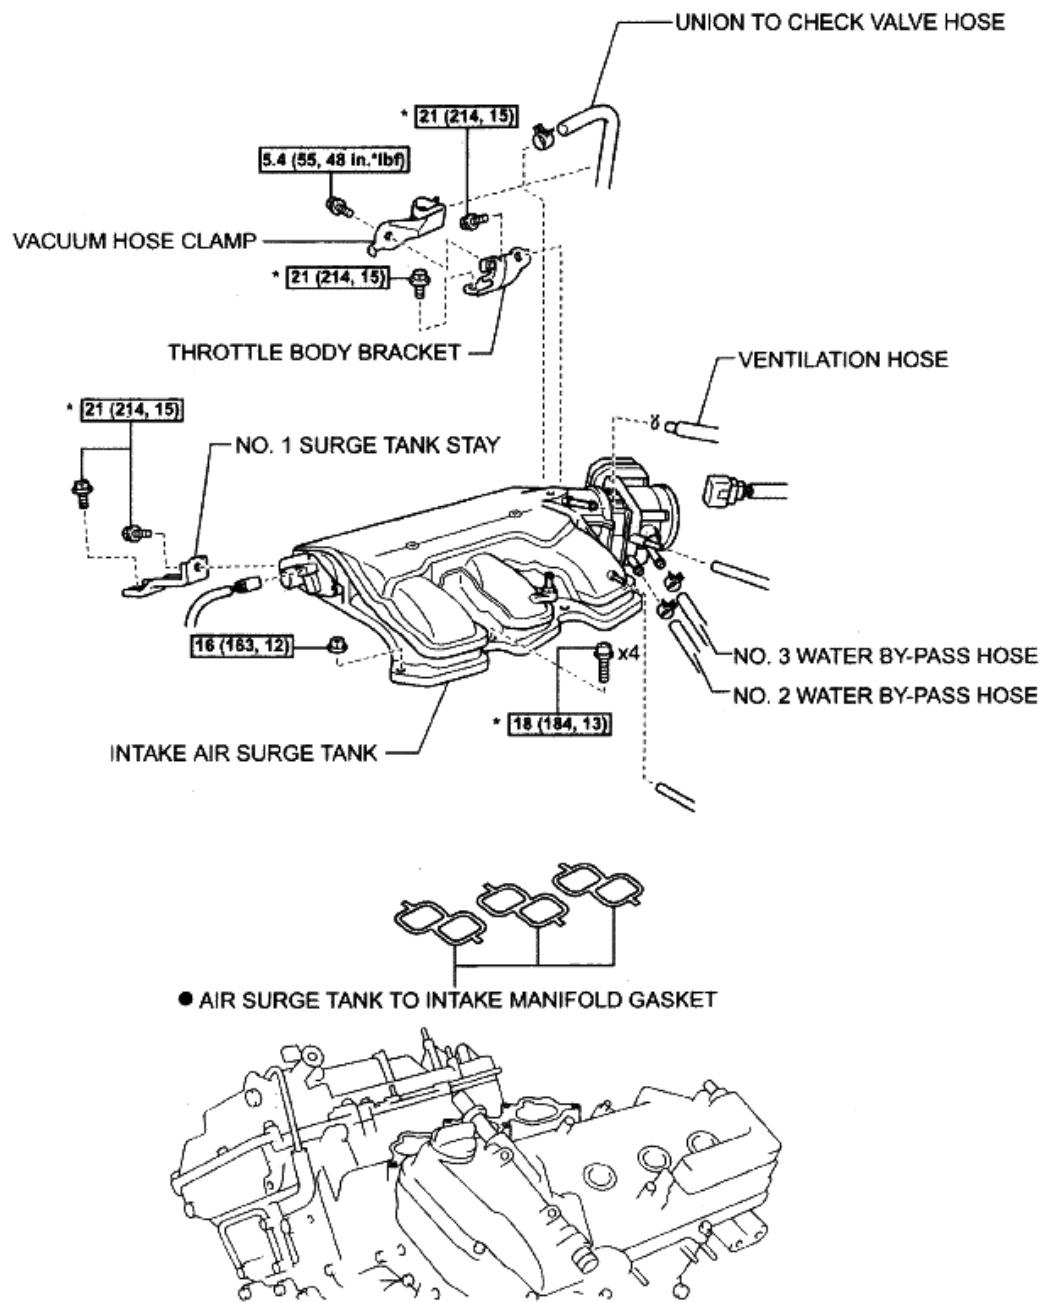

**N\*m (kgf\*cm, ft.\*lbf)**: Specified torque

● Non-reusable part


\* DO NOT apply oil

A134939E01

**Fig. 33: Identifying Engine Assembly Components With Torque Specifications (7 Of 9)**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 2007 Toyota Camry XLE

2007 ENGINE Engine Mechanical (2GR-FE) - Camry

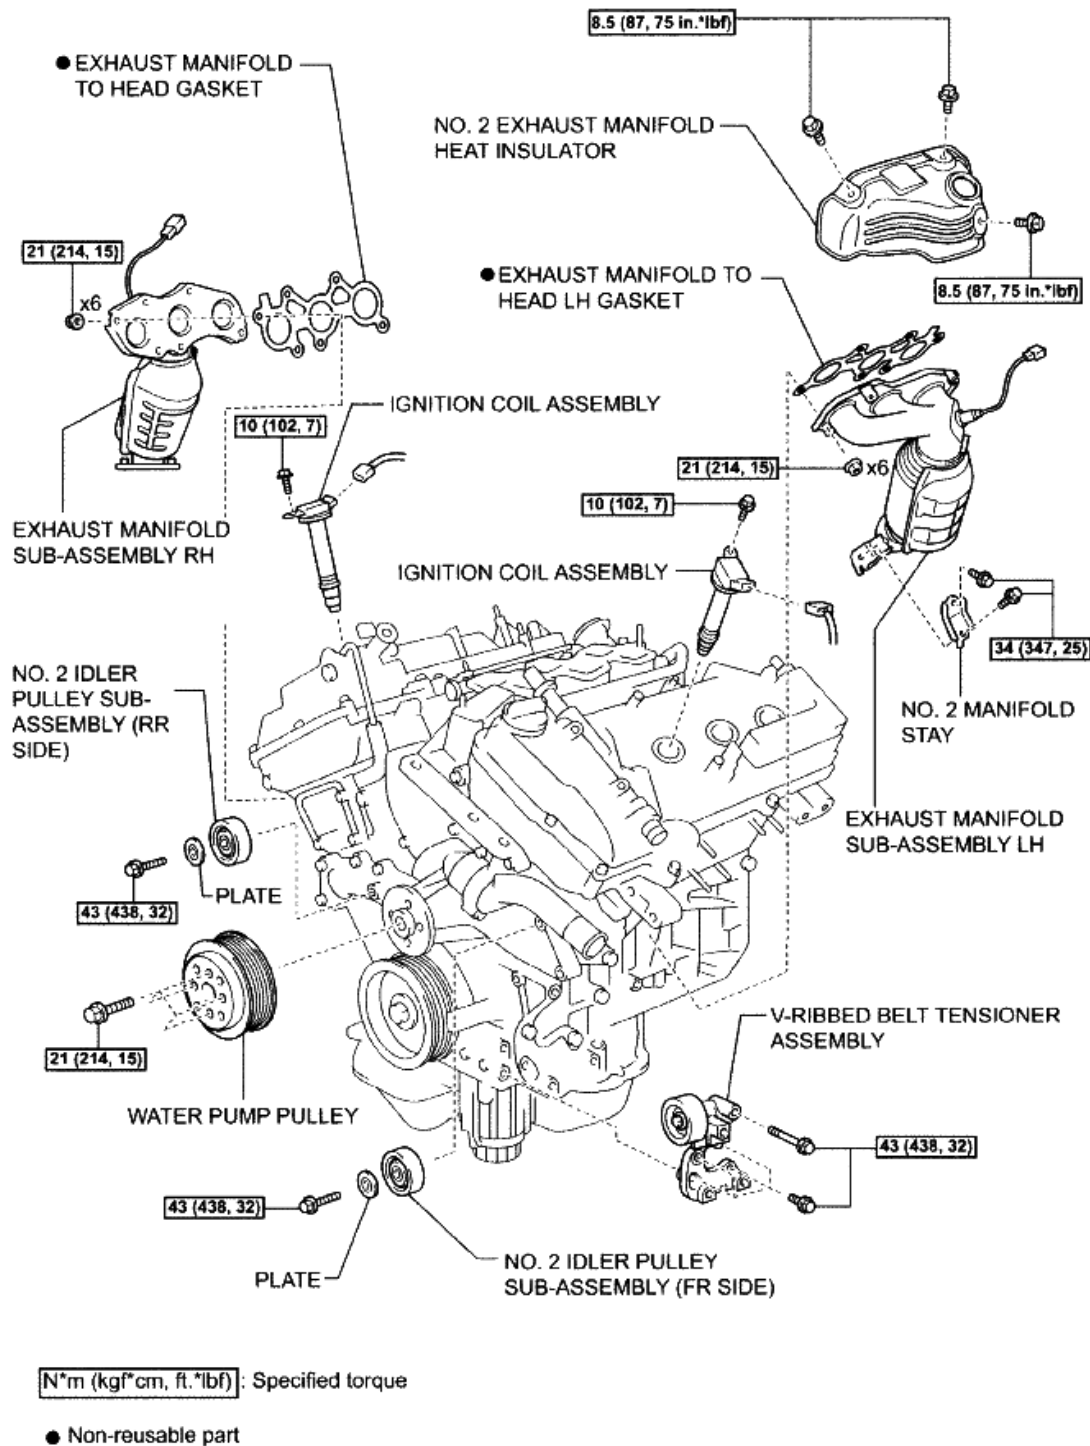


A134941E01

**Fig. 34: Identifying Engine Assembly Components With Torque Specifications (8 Of 9)**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 2007 Toyota Camry XLE

2007 ENGINE Engine Mechanical (2GR-FE) - Camry

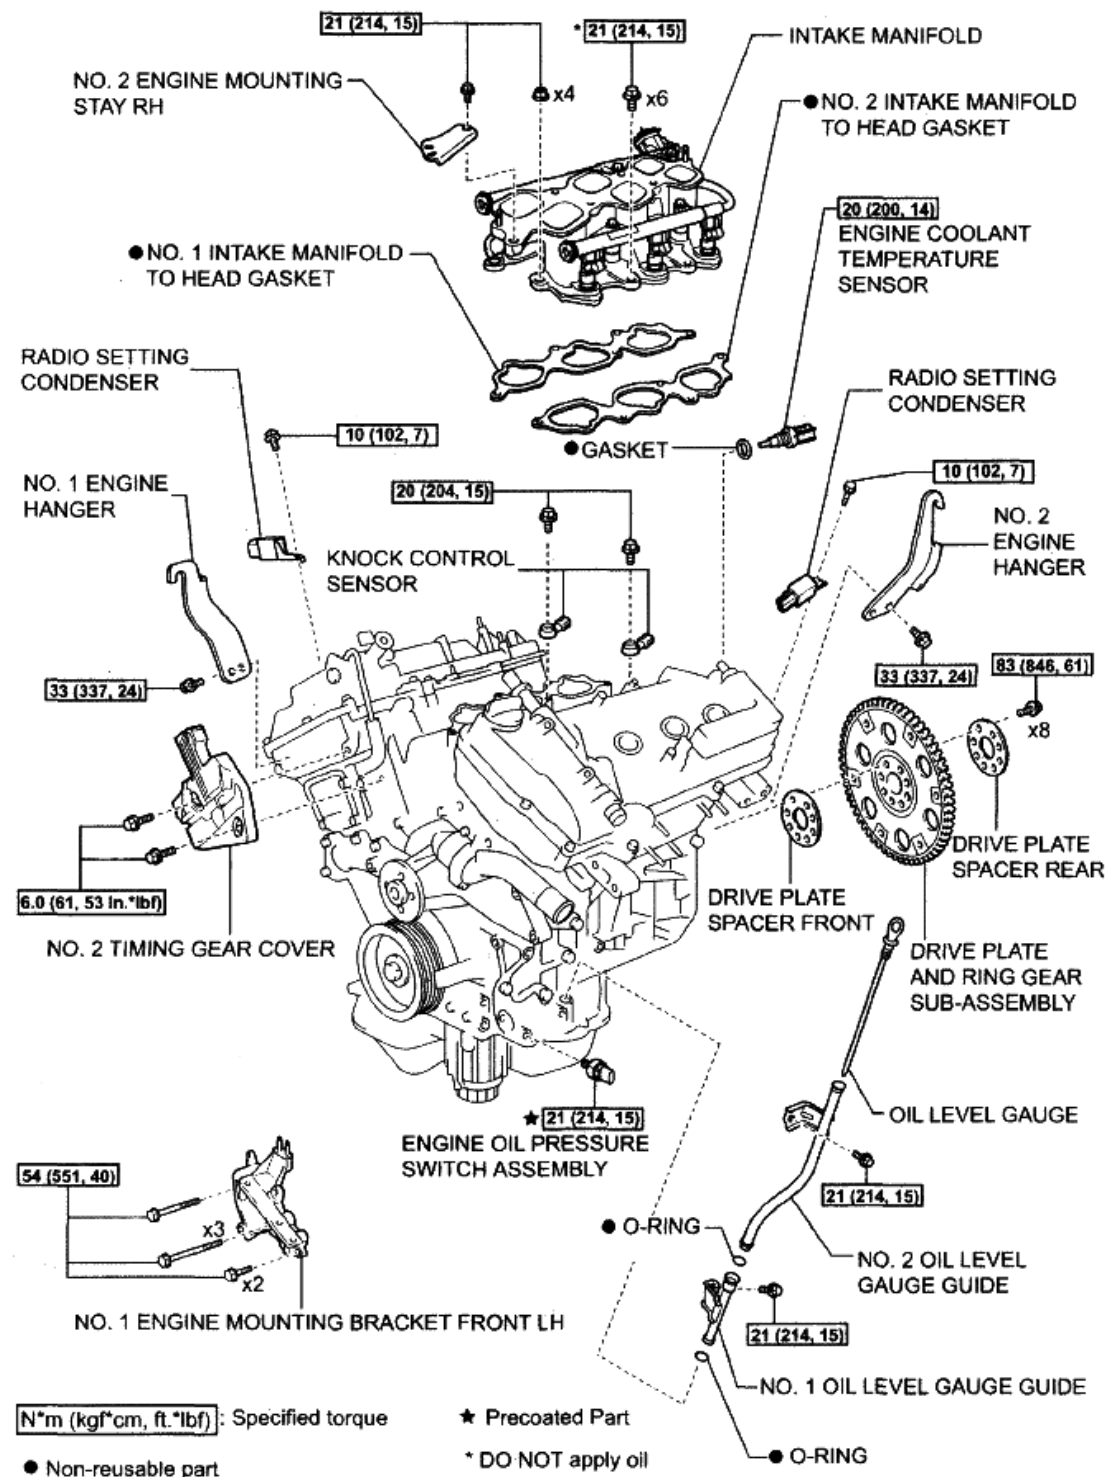

A134942E01

**Fig. 35: Identifying Engine Assembly Components With Torque Specifications (9 Of 9)**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### REMOVAL

**1. DISCHARGE FUEL SYSTEM PRESSURE**

HINT:

See **PRECAUTION** .

- 2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
- 3. PLACE FRONT WHEELS FACING STRAIGHT AHEAD**
- 4. REMOVE FRONT WHEELS**
- 5. REMOVE ENGINE UNDER COVER LH**
- 6. REMOVE ENGINE UNDER COVER RH**
- 7. REMOVE FRONT FENDER APRON SEAL RH**
- 8. DRAIN ENGINE OIL (See **REPLACEMENT** )**
- 9. DRAIN ENGINE COOLANT (See **ON-VEHICLE INSPECTION** )**
- 10. DRAIN AUTOMATIC TRANSAXLE FLUID (See **REMOVAL** )**
- 11. REMOVE WINDSHIELD WIPER LINK ASSEMBLY**

See **REMOVAL** .


- 12. REMOVE COWL TOP PANEL OUTER SUB-ASSEMBLY (See **REMOVAL** )**
- 13. REMOVE COOL AIR INTAKE DUCT SEAL**
  - a. Remove the 7 clips and intake duct seal.



**Fig. 36: Identifying Clips And Intake Duct Seal**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


- 14. REMOVE V-BANK COVER SUB-ASSEMBLY**
  - a. Hold the front of the V-bank cover and raise it to disengage the 2 clips on the front of the cover. Continue to raise the cover to disengage the clip on the rear of the cover and remove the cover.

**NOTE:**      **Attempting to disengage both front and rear clips at the same time may cause the cover to break.**

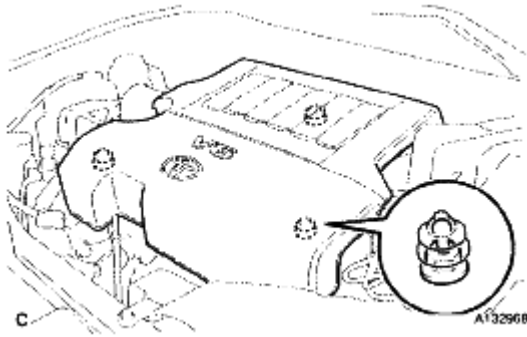


**Fig. 37: Identifying Clips On Front Of Cover**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

15. **REMOVE V-RIBBED BELT** (See **REMOVAL**)
16. **REMOVE AIR CLEANER INLET ASSEMBLY**
  - a. Remove the 2 bolts, clamp and air cleaner inlet.

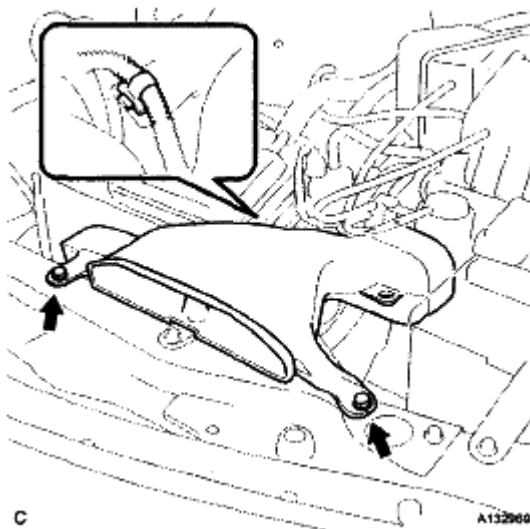

**Fig. 38: Locating Bolts, Clamp And Air Cleaner Inlet**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


17. **REMOVE AIR CLEANER CAP SUB-ASSEMBLY** (See **REMOVAL**)
18. **REMOVE AIR CLEANER CASE SUB-ASSEMBLY**
  - a. Disconnect the vacuum hose and hose clamp.
  - b. Remove the 3 bolts and air cleaner case.

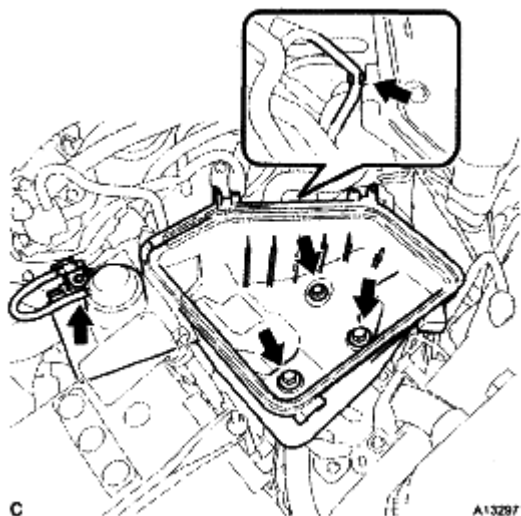

**Fig. 39: Locating Bolts And Air Cleaner Case**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**19. REMOVE NO. 1 AIR CLEANER INLET**

- a. Remove the bolt and No. 1 air cleaner inlet.

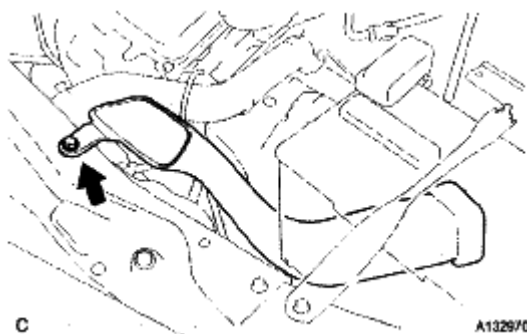


**Fig. 40: Locating No. 1 Air Cleaner Inlet Bolt**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**20. REMOVE BATTERY**

- a. Loosen the bolt and nut, and remove the battery clamp.



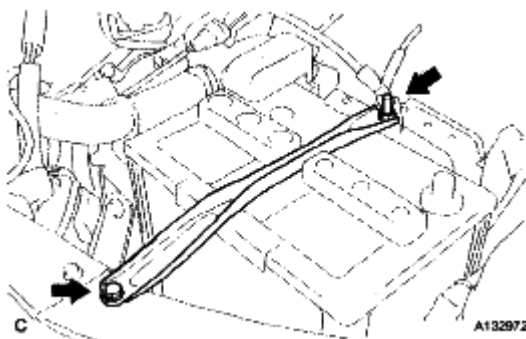


**Fig. 41: Removing Battery Clamp With Bolt And Nut**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

b. Remove the battery and battery tray.

**21. REMOVE INTAKE AIR RESONATOR SUB-ASSEMBLY**


a. Remove the clip, bolt and intake air resonator.

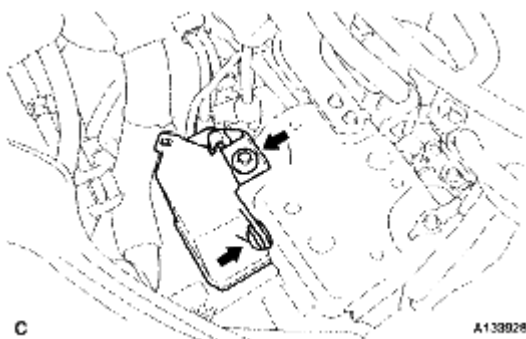

**Fig. 42: Locating Intake Air Resonator Sub-Assembly Bolt And Clip**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**22. REMOVE NO. 2 ENGINE MOUNTING STAY RH**


a. Remove the bolt, 2 nuts, and No. 2 mounting stay RH.

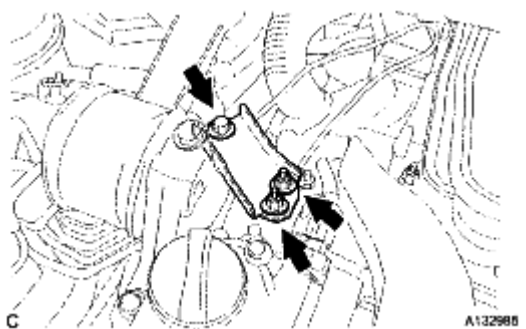

**Fig. 43: Locating Bolt And Nuts For No. 2 Engine Mounting Stay RH**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**23. REMOVE ENGINE MOVING CONTROL ROD SUB-ASSEMBLY**


- a. Remove the 4 bolts and engine moving control rod.

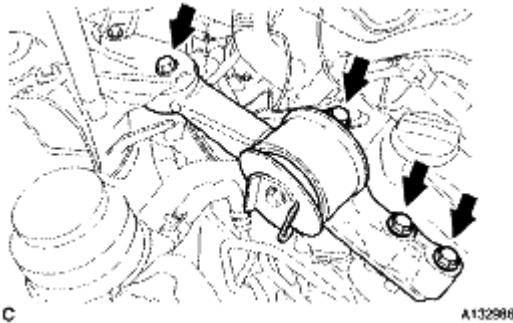

**Fig. 44: Locating Bolts And Engine Moving Control Rod**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**24. DISCONNECT NO. 1 FUEL VAPOR FEED HOSE**


- a. Remove the clamp and disconnect the No. 1 fuel vapor feed hose.

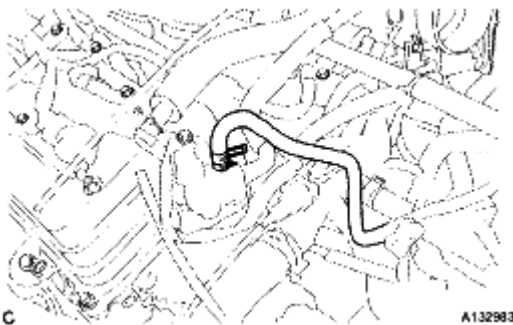

**Fig. 45: Identifying No. 1 Fuel Vapor Feed Hose**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**25. DISCONNECT CHECK VALVE TO BRAKE BOOSTER HOSE**

- a. Remove the clamp and disconnect the check valve to brake booster hose.

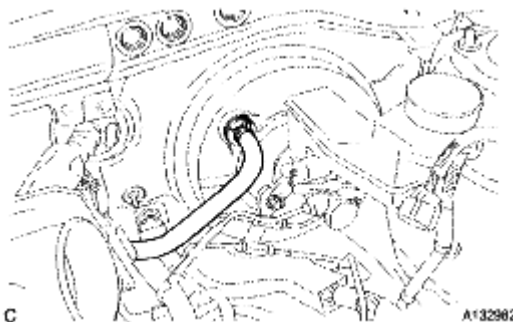


**Fig. 46: Identifying Check Valve To Brake Booster Hose**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**26. REMOVE RADIATOR HOSE INLET**

- a. Remove the clamp and disconnect the radiator hose inlet.

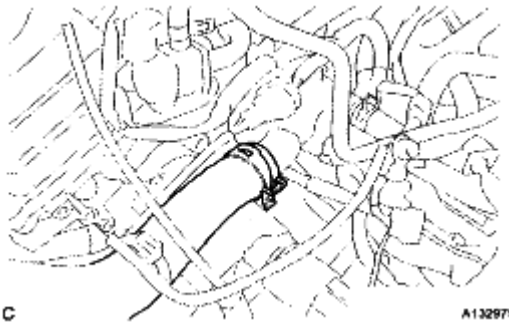


**Fig. 47: Identifying Radiator Hose Inlet**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**27. REMOVE RADIATOR HOSE OUTLET**

- a. Remove the clamp and disconnect the radiator hose outlet.

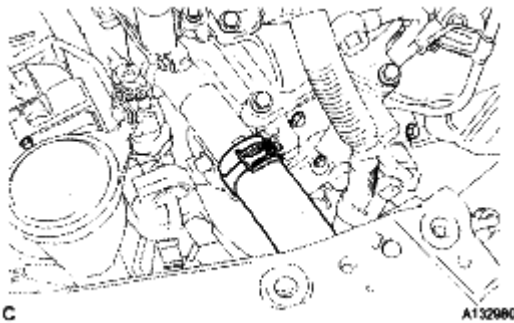


**Fig. 48: Identifying Radiator Hose Outlet And Clamp**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**28. DISCONNECT NO. 1 OIL COOLER INLET HOSE**

- a. Remove the clamp and disconnect the oil cooler inlet hose.

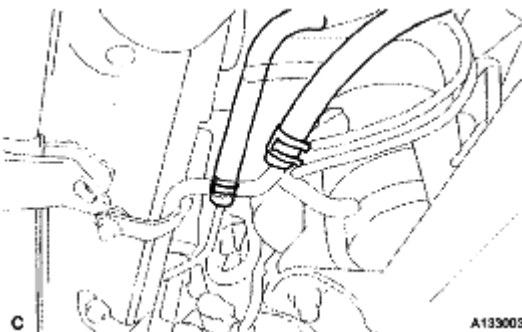

**Fig. 49: Identifying Oil Cooler Outlet Hose**


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**29. DISCONNECT NO. 1 OIL COOLER OUTLET HOSE**

- a. Remove the clamp and disconnect the oil cooler outlet hose.

**30. DISCONNECT HEATER INLET WATER HOSE**

- a. Disconnect the heater inlet water hose.

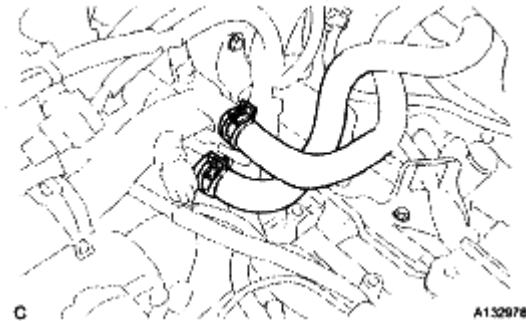**Fig. 50: Identifying Heater Inlet Water Hose**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**31. DISCONNECT HEATER OUTLET WATER HOSE**


- a. Disconnect the heater outlet water hose.

**32. REMOVE ECM**

HINT:


See **REMOVAL** .**33. REMOVE RELAY BLOCK COVER UPPER****34. DISCONNECT ENGINE WIRE**

- a. Disconnect the engine wire from the engine room junction block.
  1. Remove the nut and separate the wire harness.
  2. Using a screwdriver, unlock the engine room J/ B. Pull the engine room J/B upward.
  3. Disconnect the engine wire connectors.

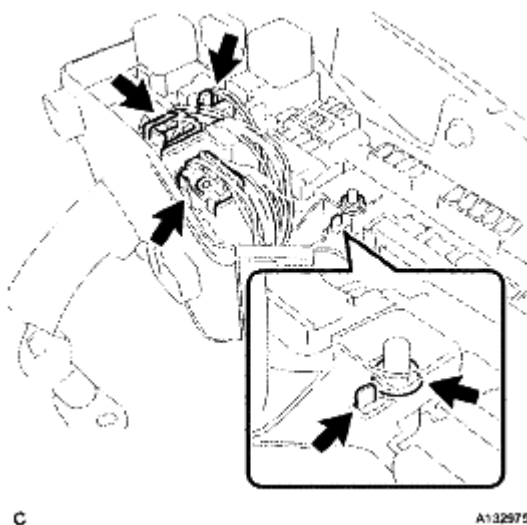


**Fig. 51: Disconnecting Engine Wire From Engine Room Junction Block**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Remove the 2 bolts and 2 clamps from the body.

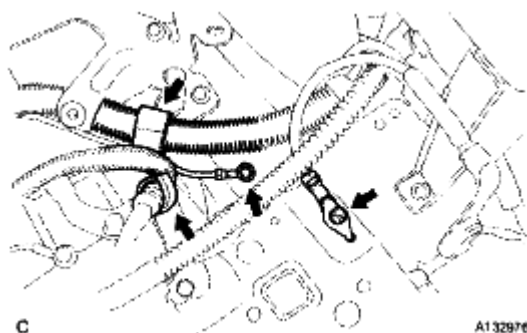

**Fig. 52: Locating Body Bolts And Clamps**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


- c. Remove the bolt and clamp from the bracket.

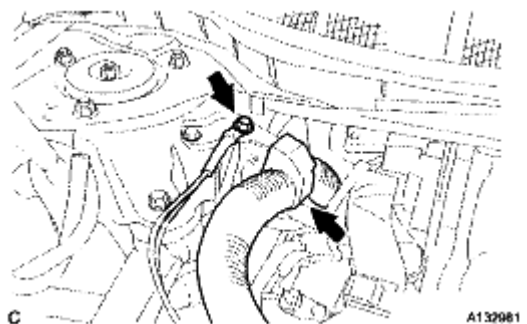

**Fig. 53: Locating Bracket Bolt And Clamp**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**35. DISCONNECT TRANSMISSION CONTROL CABLE ASSEMBLY**


- a. Remove the clip and nut, and separate the cable from the transaxle.

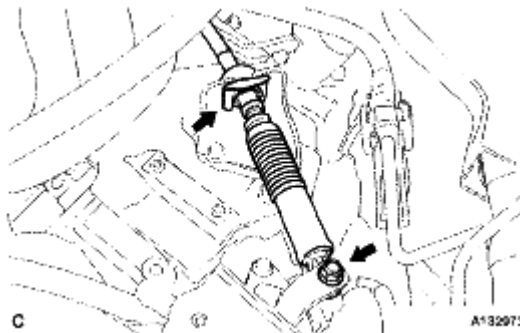

**Fig. 54: Locating Transmission Control Cable Assembly Clip And Nut**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


**36. SEPARATE FUEL TUBE SUB-ASSEMBLY**

- a. Remove the No. 1 fuel pipe clamp.

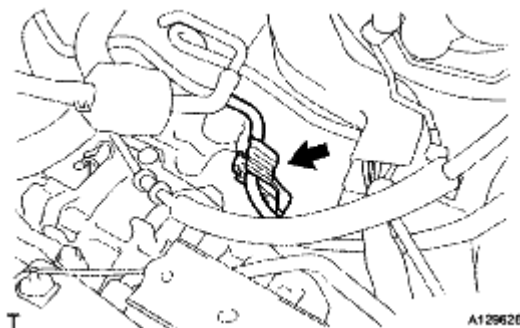

**Fig. 55: Removing Fuel Pipe Clamp**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Disconnect the connector from the tube while pinching part: A with your fingers as shown in the illustration.

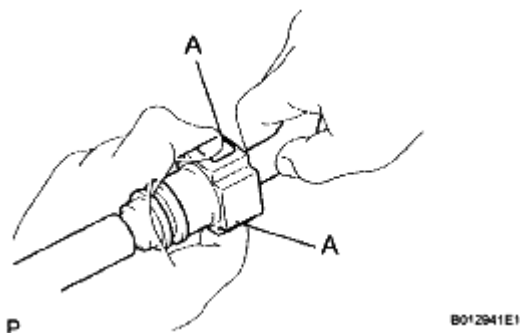

**Fig. 56: Disconnecting Connector From Tube**


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**NOTE:**

- Check for contamination in the pipe and around the connector. Clean if necessary and then disconnect the connector.
- Disconnect the connector by hand.
- Do not bend, fold or rotate the nylon tube.
- If the pipe and connector are stuck together, push and pull the connector until it becomes free.
- Put the pipe and connector ends in vinyl bags to prevent damage and contamination.

**37. DISCONNECT NO. 1 OIL RESERVOIR TO PUMP HOSE**

- a. Disconnect the No. 1 oil reservoir to pump hose.

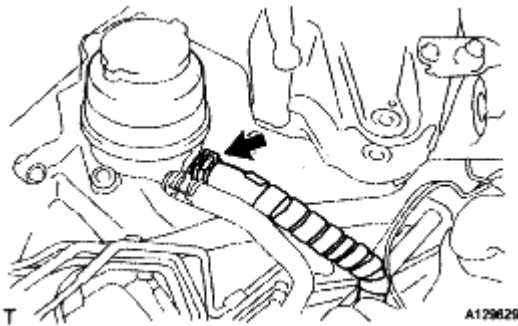


**Fig. 57: Locating Oil Reservoir To Pump Hose**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**38. DISCONNECT RETURN TUBE SUB-ASSEMBLY**

- a. Disconnect the return tube sub-assembly.

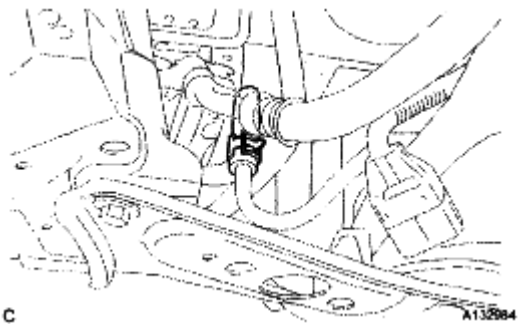

**Fig. 58: Disconnecting Return Tube Sub-Assembly**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**39. REMOVE EXHAUST PIPE NO. 1 SUPPORT BRACKET (See REMOVAL )**

**40. REMOVE EXHAUST PIPE ASSEMBLY FRONT (See REMOVAL )**

- 41. **REMOVE FRONT AXLE HUB NUT LH** (See REMOVAL )
- 42. **REMOVE FRONT AXLE HUB NUT RH**

HINT:

Use the same procedures described for the LH side.

- 43. **DISCONNECT FRONT STABILIZER LINK ASSEMBLY LH** (See REMOVAL )
- 44. **DISCONNECT FRONT STABILIZER LINK ASSEMBLY RH**

HINT:

Use the same procedures described for the LH side.

- 45. **DISCONNECT FRONT SPEED SENSOR LH** (See REMOVAL )
- 46. **DISCONNECT FRONT SPEED SENSOR RH**

HINT:

Use the same procedures described for the LH side.

- 47. **DISCONNECT TIE ROD ASSEMBLY LH** (See REMOVAL )
- 48. **DISCONNECT TIE ROD ASSEMBLY RH**

HINT:

Use the same procedures described for the LH side.

- 49. **DISCONNECT FRONT SUSPENSION LOWER NO. 1 ARM LH** (See REMOVAL )
- 50. **DISCONNECT FRONT SUSPENSION LOWER NO. 1 ARM RH**

HINT:

Use the same procedures described for the LH side.

- 51. **SEPARATE FRONT AXLE ASSEMBLY LH** (See REMOVAL )
- 52. **SEPARATE FRONT AXLE ASSEMBLY RH**

HINT:

Use the same procedures described for the LH side.

- 53. **REMOVE NO. 1 EXHAUST PIPE SUPPORT BRACKET**
  - a. Remove the No. 1 exhaust pipe support bracket with the 2 bolts.
- 54. **REMOVE DRIVE PLATE AND TORQUE CONVERTER CLUTCH SETTING BOLT** (See




**REMOVAL )**

- 55. **DISCONNECT STEERING SLIDING YOKE** (See **REMOVAL** )
- 56. **REMOVE GENERATOR ASSEMBLY** (See **REMOVAL** )
- 57. **SEPARATE COOLER COMPRESSOR ASSEMBLY**
  - a. Remove the 2 connector clamps.
  - b. Remove the 4 bolts and separate the compressor.


**HINT:**

Hang up the hoses instead of detaching them.

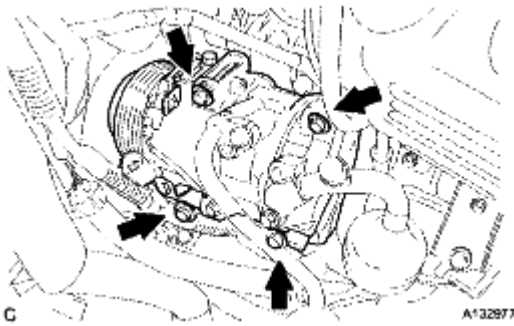

**Fig. 59: Locating Cooler Compressor Assembly Bolts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- 58. **REMOVE ENGINE ASSEMBLY WITH TRANSAXLE**
  - a. Set the engine lifter.
  - b. Remove the 4 bolts, 2 nuts, and frame side rail plates RH and LH.

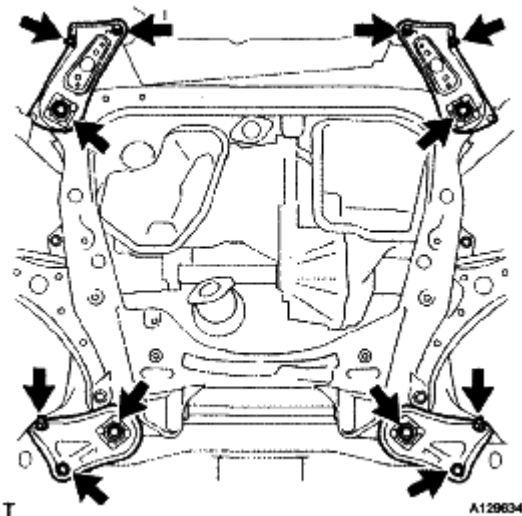


**Fig. 60: Removing Bolts, Nuts, Front Suspension Member Brace Rear RH And LH**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Remove the 4 bolts, 2 nuts, and front suspension member brace rear RH and LH.
- d. Operate the engine lifter, then remove the engine assembly from the vehicle.

**NOTE:**        **Make sure that the engine is clear of all wiring and hoses.**

#### 59. REMOVE VANE PUMP ASSEMBLY

- a. Disconnect the power steering oil pressure switch connector.
- b. Remove the pressure feed tube clamp bolt.
- c. Loosen the bolt A.
- d. Remove the bolt B and vane pump.

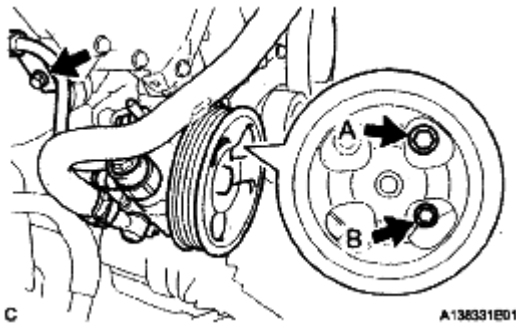

**Fig. 61: Removing Bolt And Vane Pump**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

#### 60. INSTALL ENGINE HANGERS

- a. Install the 2 engine hangers with the 4 bolts as shown in the illustration.


**Part No.:**

**No. 1 Engine hanger 12281-31070**

**No. 2 Engine hanger 12282-31050**

**Bolts 91671-10825**

**Torque: 33 N\*m (337 kgf\*cm, 24 ft.\*lbf)**

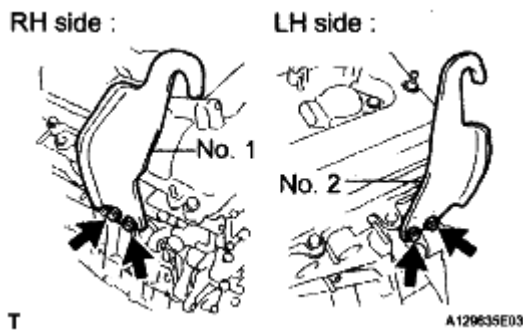


**Fig. 62: Installing Engine Hangers With Bolts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Attach the engine sling device and hang the engine with the chain block.


### 61. REMOVE FRONT FRAME ASSEMBLY

- a. Disconnect the connector and clamp.

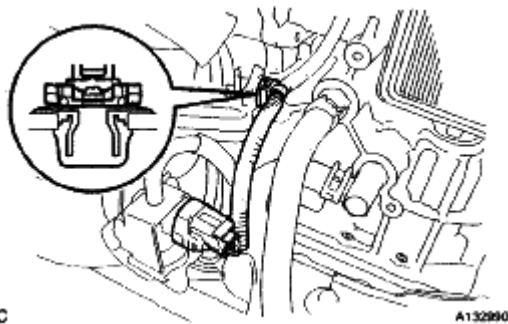


**Fig. 63: Disconnecting Connector And Clamp**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Disconnect the 2 clamps.

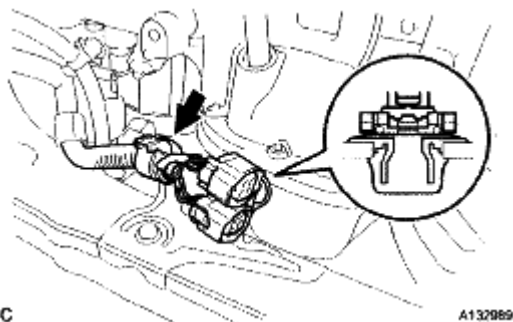


**Fig. 64: Disconnecting Clamps**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Remove the 2 nuts and disconnect the engine mounting insulators RH and LH.

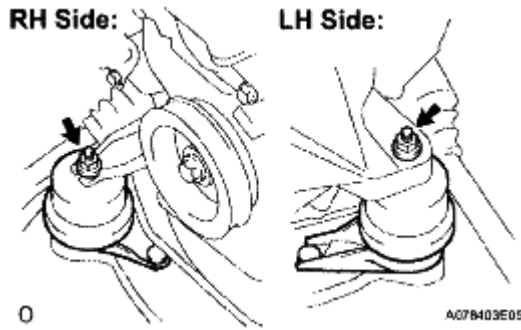

**Fig. 65: Disconnecting Engine Mounting Insulators RH And LH**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Remove the bolt and disconnect the engine mounting insulator FR.

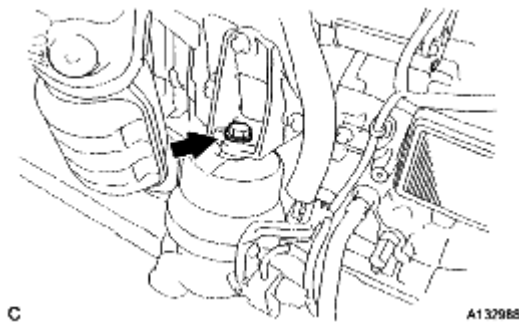


**Fig. 66: Disconnecting Engine Mounting Insulator FR**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

62. REMOVE FRONT DRIVE SHAFT ASSEMBLY LH (See DISASSEMBLY )
63. REMOVE FRONT DRIVE SHAFT ASSEMBLY RH (See DISASSEMBLY )
64. REMOVE ENGINE WIRE
65. REMOVE STARTER ASSEMBLY (See REMOVAL )
66. REMOVE AUTOMATIC TRANSAXLE ASSEMBLY

HINT:


See REMOVAL

67. REMOVE DRIVE PLATE AND RING GEAR SUB-ASSEMBLY (See REMOVAL )
68. SECURE ENGINE
  - a. Secure the engine onto an engine stand with the bolts.
69. REMOVE INTAKE AIR SURGE TANK ASSEMBLY
  - a. Disconnect the 2 water by-pass hoses from the throttle with motor body assembly.

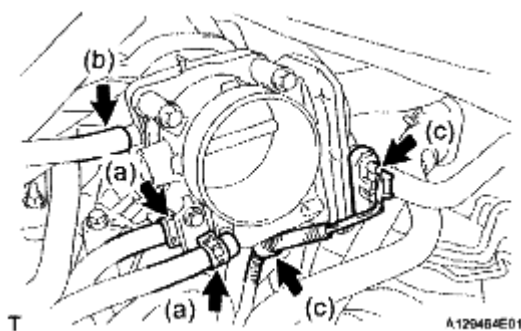


**Fig. 67: Disconnecting Water By-Pass Hoses From Throttle W/ Motor Body Assembly**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Disconnect the vapor feed hose.
- c. Disconnect the throttle with motor body assembly connector and clamp.
- d. Disconnect the No. 1 ventilation hose.
- e. Remove the bolt and vacuum hose clamp.

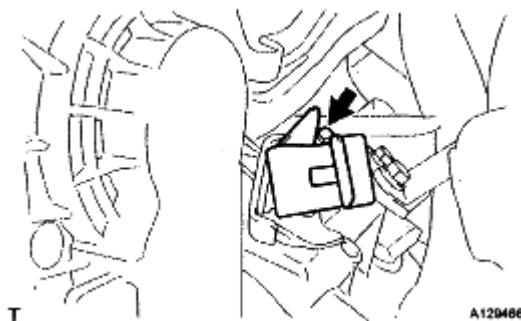


**Fig. 68: Installing Vacuum Hose Clamp**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- f. Disconnect the connector.
- g. Remove the 4 bolts, No. 1 surge tank stay and throttle body bracket.

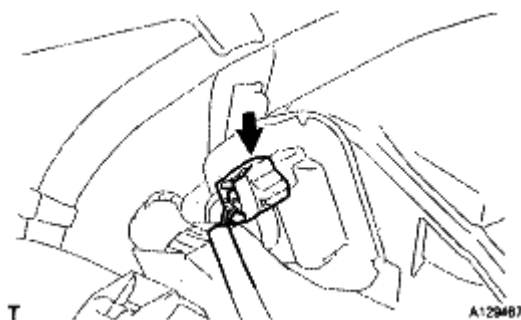

**Fig. 69: Connecting Connector**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- h. Using a 5 mm socket hexagon wrench, remove the 4 bolts.

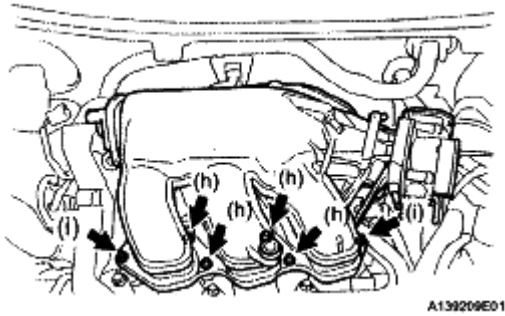

**Fig. 70: Identifying Bolts Using Socket Hexagon Wrench**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- i. Remove the 2 nuts and intake air surge tank.
- j. Remove the gasket from the intake air surge tank.

**70. REMOVE IGNITION COIL ASSEMBLY**


- a. Remove the 6 bolts and 6 ignition coils.

**71. REMOVE NO. 2 ENGINE MOUNTING STAY RH**

- a. Remove the bolt and No. 2 engine mounting stay RH.

**72. REMOVE INTAKE MANIFOLD**


- a. Uniformly loosen and remove the 6 bolts and 4 nuts.
- b. Remove the intake manifold and 2 gaskets.

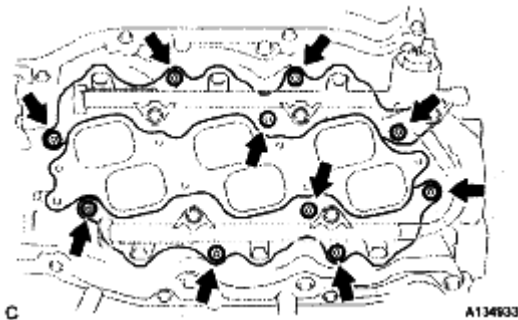

**Fig. 71: Locating Intake Manifold Bolts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**73. REMOVE EXHAUST MANIFOLD SUB-ASSEMBLY RH**


- a. Disconnect the A/F sensor connector clamp.
- b. Uniformly loosen and remove the 6 nuts.
- c. Remove the manifold and gasket.

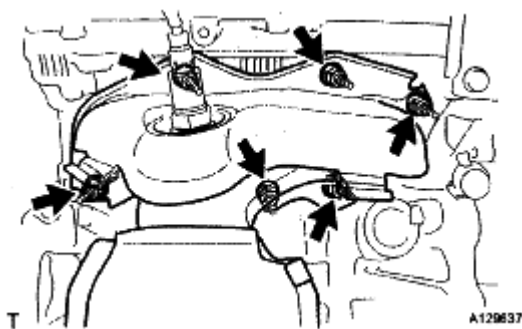

**Fig. 72: Removing Exhaust Manifold Sub-Assembly Nuts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**74. REMOVE OIL LEVEL GAUGE GUIDE SUB-ASSEMBLY**


- a. Remove the oil level gauge.
- b. Remove the 2 bolts, oil level gauge guides No. 1 and No. 2.
- c. Remove the O-rings from the oil level gauge guide.

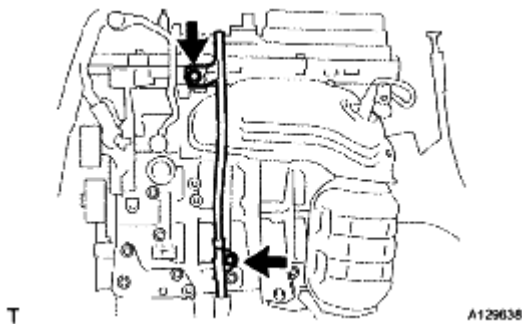

**Fig. 73: Removing Dipstick**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**75. REMOVE NO. 2 MANIFOLD STAY**


- a. Remove the 2 bolts and No. 2 manifold stay.

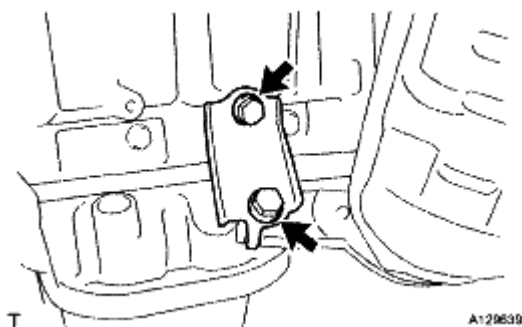

**Fig. 74: Locating Manifold Stay**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**76. REMOVE NO. 2 EXHAUST MANIFOLD HEAT INSULATOR**


- a. Remove the 3 bolts and No. 2 insulator.

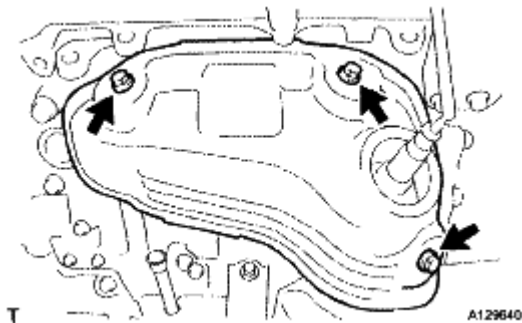**Fig. 75: Locating Insulator**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**77. REMOVE EXHAUST MANIFOLD SUB-ASSEMBLY LH**


- a. Uniformly loosen and remove the 6 nuts.
- b. Remove the manifold and gasket.

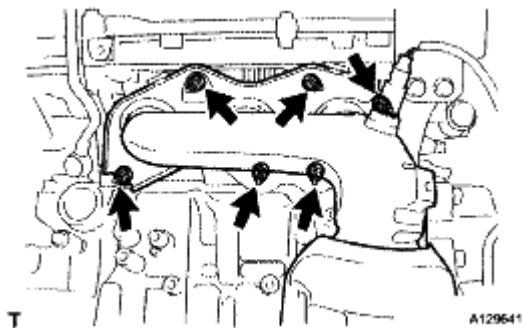**Fig. 76: Removing Manifold**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**78. REMOVE ENGINE MOUNTING BRACKET RH**

- a. Remove the 3 bolts and engine mounting bracket RH.

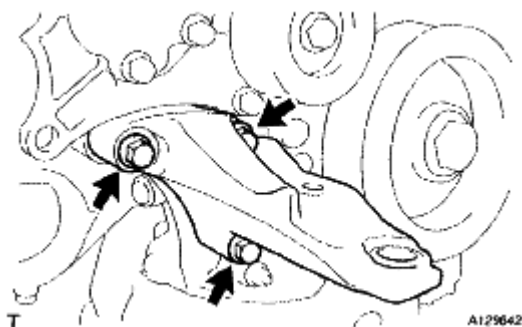




**Fig. 77: Installing Engine Mounting Bracket RH With Bolts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**79. REMOVE DRIVE SHAFT BEARING BRACKET**


- a. Remove the 3 bolts and drive shaft bearing bracket.

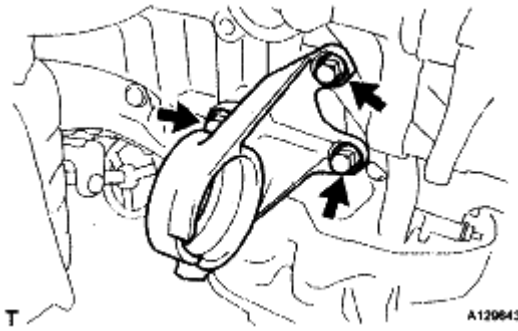

**Fig. 78: Installing Drive Shaft Bearing Bracket**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**80. REMOVE V-RIBBED BELT TENSIONER ASSEMBLY**


- a. Remove the 5 bolts and V-ribbed belt tensioner assembly.

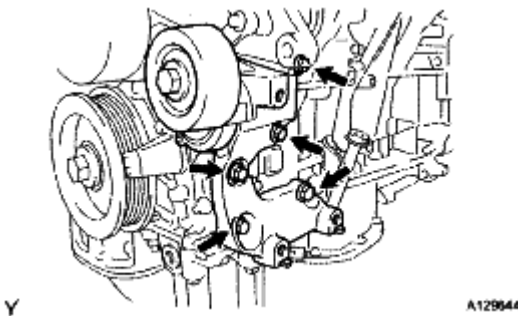

**Fig. 79: Removing Bolts And Timing Gear Cover**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**81. REMOVE NO. 2 TIMING GEAR COVER**


- a. Remove the 2 bolts and No. 2 timing gear cover.

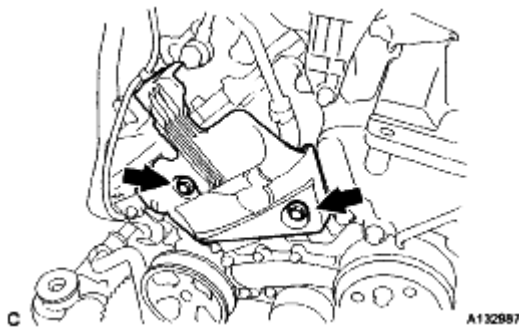

**Fig. 80: Removing Bolts And No. 2 Timing Gear Cover**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**82. REMOVE NO. 2 IDLER PULLEY SUB-ASSEMBLY**

- a. Remove the bolt, plate and No. 2 idler pulley sub-assembly.

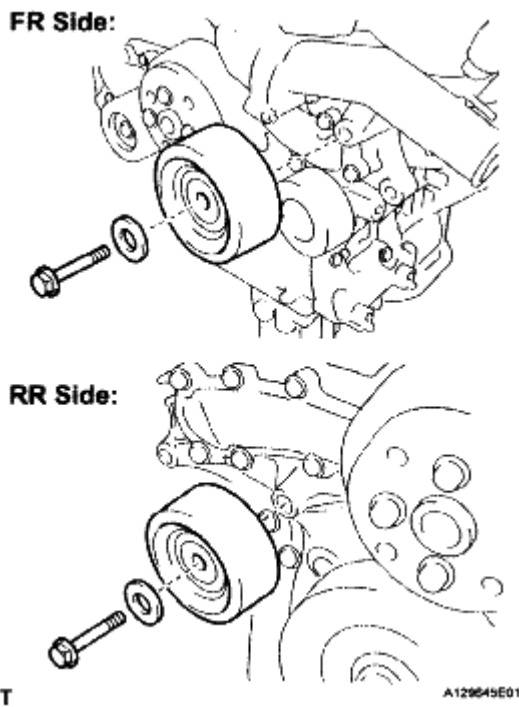


**Fig. 81: Installing Idler Pulley Sub-Assembly And Cover Plate With Bolt**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**83. REMOVE WATER PUMP PULLEY (See REMOVAL )**

**84. REMOVE NO. 1 ENGINE MOUNTING BRACKET FRONT LH**


- a. Remove the 6 bolts and No. 1 engine mounting bracket front LH.

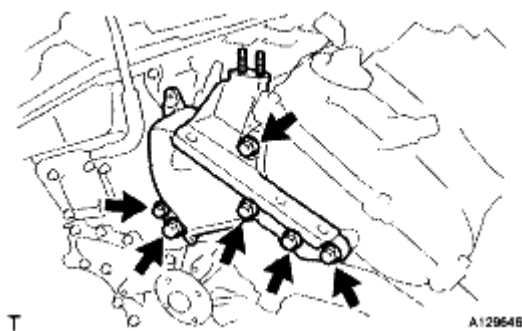

**Fig. 82: Removing Bolts And No. 1 Engine Mounting Bracket Front LH**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**85. REMOVE RADIO SETTING CONDENSER**


- a. Remove the 2 bolts and 2 radio setting condensers.

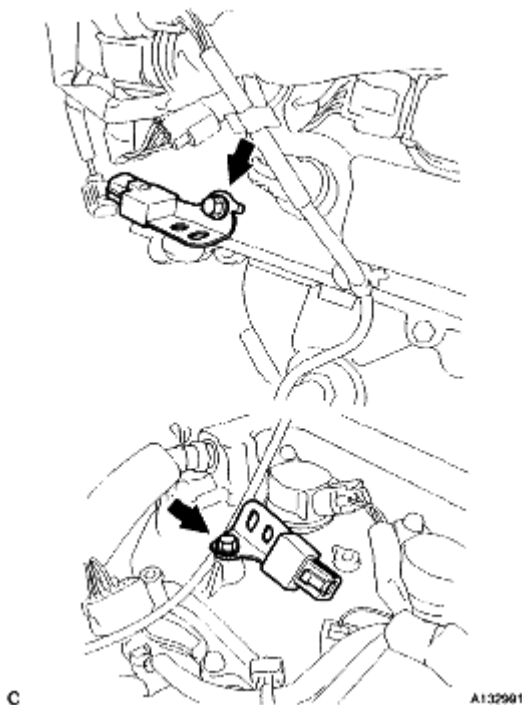

**Fig. 83: Removing Bolts And Radio Setting Condensers**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**86. REMOVE NO. 1 VACUUM SWITCHING VALVE ASSEMBLY**


- a. Remove the bolt and No. 1 vacuum switching valve.

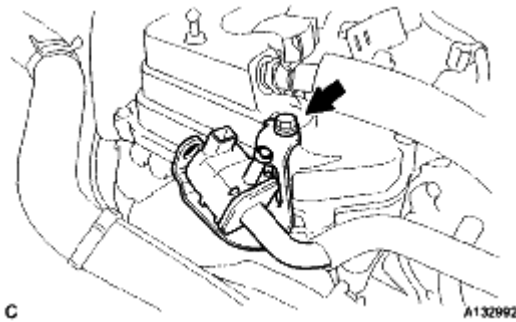

**Fig. 84: Removing Bolt And No. 1 Vacuum Switching Valve**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**87. REMOVE ENGINE OIL PRESSURE SWITCH ASSEMBLY**

- a. Using a 24 mm deep socket wrench, remove the engine oil pressure switch assembly.

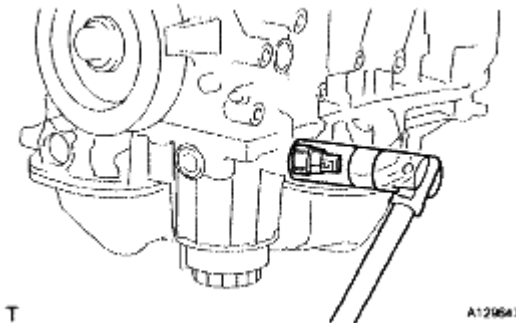


**Fig. 85: Installing Oil Pressure Switch**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**88. REMOVE KNOCK CONTROL SENSOR (See REMOVAL )**

**89. REMOVE ENGINE COOLANT TEMPERATURE SENSOR**

- a. Using a 19 mm deep socket wrench, remove the EFI engine coolant temperature sensor and gasket.

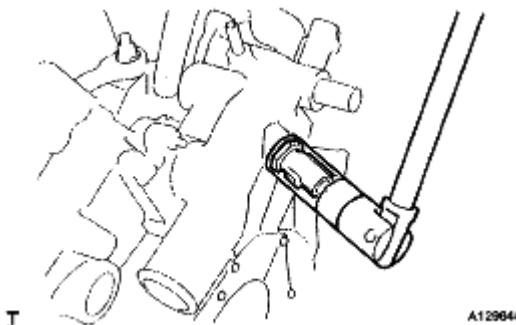

**Fig. 86: Installing EFI Engine Coolant Temperature Sensor**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**INSPECTION**

**1. INSPECT EXHAUST MANIFOLD SUB-ASSEMBLY LH**

- a. Using a precision straightedge and feeler gauge, measure the warpage on the contact surface of the cylinder head.


**Maximum warpage:**

**0.7 mm (0.028 in.)**

**HINT:**

The maximum allowable warpage of each installation surface is 0.3 mm (0.012 in.).

If the warpage is greater than the maximum, replace the manifold.

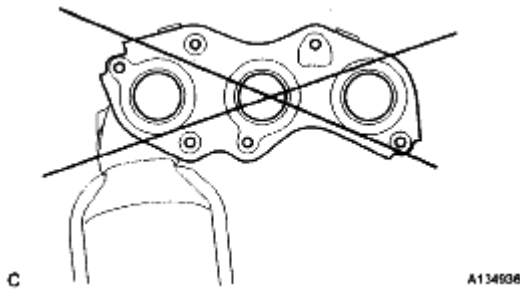

**Fig. 87: Inspecting Exhaust Manifold Sub-Assembly LH**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**2. INSPECT EXHAUST MANIFOLD SUB-ASSEMBLY RH**

- a. Using a precision straightedge and feeler gauge, measure the warpage on the contact surface of the cylinder head.


**Maximum warpage:**

**0.7 mm (0.028 in.)**

**HINT:**

The maximum allowable warpage of each installation surface is 0.3 mm (0.012 in.).

If the warpage is greater than the maximum, replace the manifold.

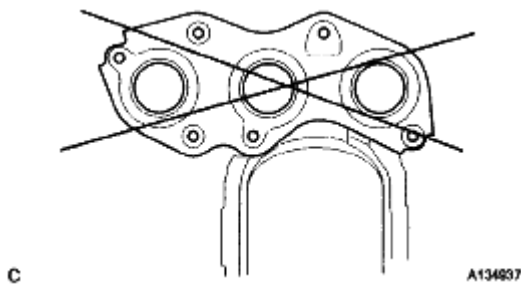

**Fig. 88: Inspecting Exhaust Manifold Sub-Assembly RH**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


### 3. INSPECT INTAKE AIR SURGE TANK ASSEMBLY

- a. Using a precision straightedge and feeler gauge, measure the warpage on the contact surface of the intake manifold.

**Maximum warpage:**

**2.5 mm (0.098 in.)**

**If the warpage is greater than the maximum, replace the surge tank.**

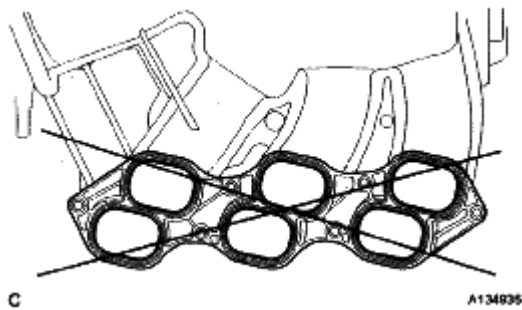

**Fig. 89: Inspecting Intake Air Surge Tank Assembly**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### 4. INSPECT INTAKE MANIFOLD

- a. Cylinder head side:
  1. Using a precision straightedge and feeler gauge, measure the surface contacting the cylinder head for warpage.

**Maximum warpage:**

**0.1 mm (0.003 in.)**

**If the warpage is greater than the maximum, replace the intake manifold.**

- b. Surge tank side:


1. Using a precision straightedge and feeler gauge, measure the surface contacting the surge tank for warpage.

**Maximum warpage:**


**0.1 mm (0.003 in.)**

**If the warpage is greater than the maximum, replace the intake manifold.**

**Cylinder head side:**

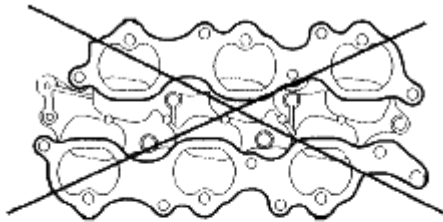

**Surge tank side:**

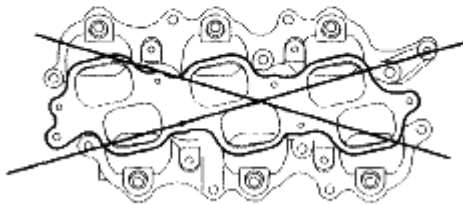

C

A134834E01

**Fig. 90: Inspecting Intake Manifold**


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## INSTALLATION

### 1. INSTALL ENGINE COOLANT TEMPERATURE SENSOR

- a. Using a 19 mm deep socket wrench, install the engine coolant temperature sensor and a new gasket.

**Torque: 20 N\*m (200 kgf\*cm, 14 ft.\*lbf)**

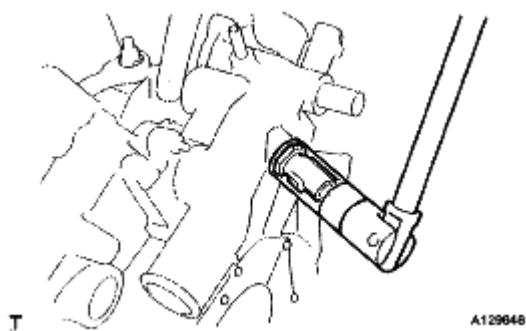


**Fig. 91: Installing EFI Engine Coolant Temperature Sensor**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

2. **INSTALL KNOCK CONTROL SENSOR** (See **INSTALLATION** )
3. **INSTALL ENGINE OIL PRESSURE SWITCH ASSEMBLY**
  - a. Clean the threads of the oil pressure switch. Apply adhesive to 2 or 3 threads of the oil pressure switch.

**Adhesive:**

**Part No. 08833-00080 THREE BOND 1344, LOCTITE 242 or equivalent**

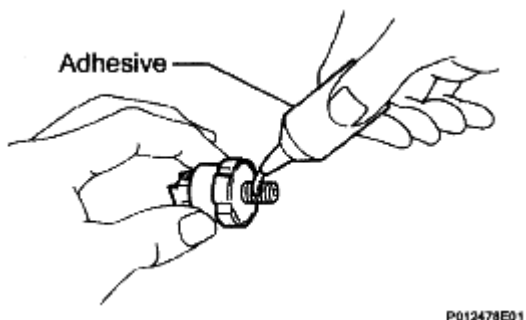


**Fig. 92: Applying Adhesive On Threads Of Oil Pressure Switch**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Using a 24 mm deep socket wrench, install the oil pressure switch.

**Torque: 21 N\*m (214 kgf\*cm, 15 ft.\*lbf)**

**NOTE:**      **Do not start the engine within 1 hour after installation to prevent oil leaks.**



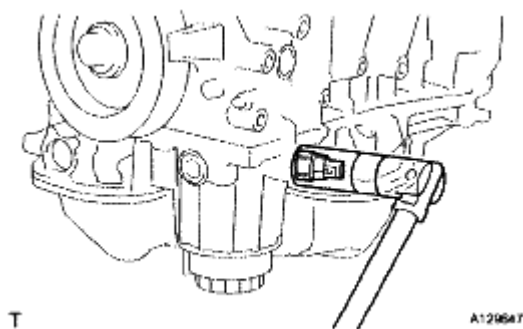


**Fig. 93: Installing Oil Pressure Switch**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**4. INSTALL NO. 1 VACUUM SWITCHING VALVE ASSEMBLY**

- a. Install the bolt and No. 1 vacuum switching valve.

**Torque: 10 N\*m (102 kgf cm, 7 ft.\*lbf)**

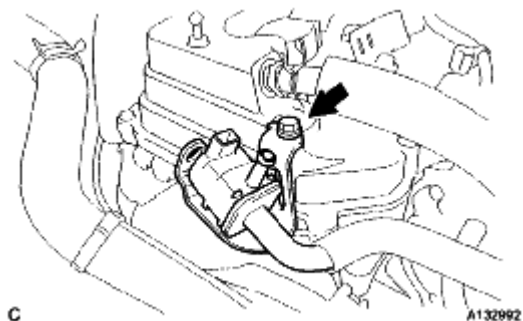


**Fig. 94: Installing Bolt And No. 1 Vacuum Switching Valve**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**5. INSTALL RADIO SETTING CONDENSER**

- a. Install the 2 bolts and 2 radio setting condensers.

**Torque: 10 N\*m (102 kgf\*cm, 7 ft.\*lbf)**

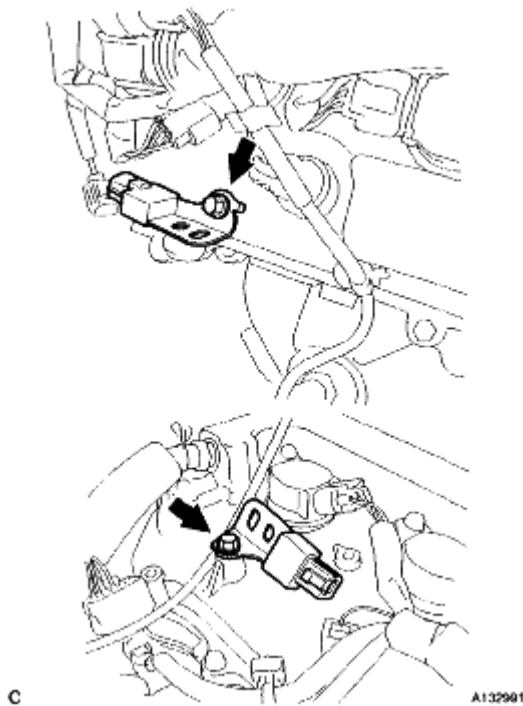


**Fig. 95: Installing Bolts And Radio Setting Condensers**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**6. INSTALL NO. 1 ENGINE MOUNTING BRACKET FRONT LH**

- a. Install the No. 1 engine mounting bracket front LH with the 6 bolts.

**Torque: 54 N\*m (551 kgf\*cm, 40 ft.\*lbf)**

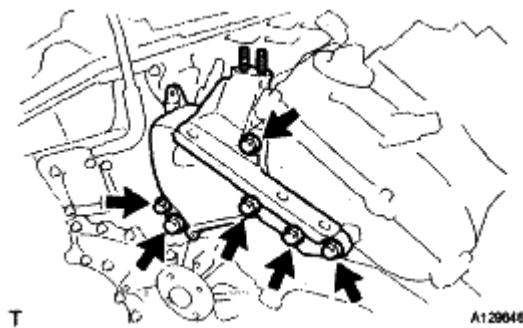



**Fig. 96: Installing Engine Mounting Bracket Front**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**7. INSTALL WATER PUMP PULLEY (See INSTALLATION )**

**8. INSTALL NO. 2 IDLER PULLEY SUB-ASSEMBLY**

- a. Install the No. 2 idler pulley sub-assembly and cover plate with the bolt.

**Torque: 43 N\*m (438 kgf\*cm, 32 ft.\*lbf)**

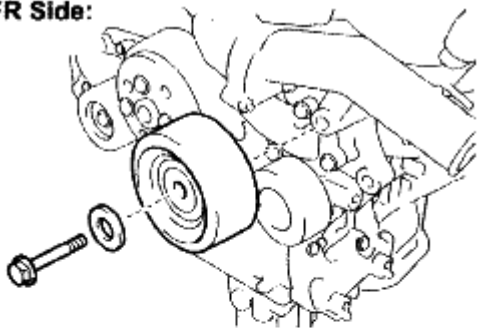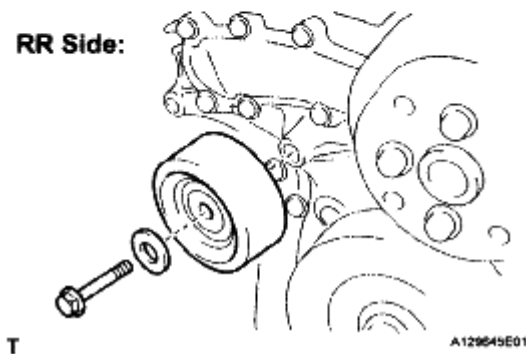
**FR Side:****RR Side:**

**Fig. 97: Installing Idler Pulley Sub-Assembly And Cover Plate With Bolt**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

#### **9. INSTALL NO. 2 TIMING GEAR COVER**

- a. Install the No. 2 timing gear cover with the 2 bolts.

**Torque: 6.0 N\*m (61 kgf\*cm, 53 in.\*lbf)**

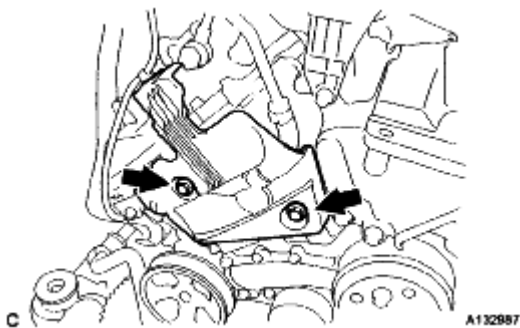

**Fig. 98: Installing No. 2 Timing Gear Cover With Bolts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

#### **10. INSTALL V-RIBBED BELT TENSIONER ASSEMBLY**

- a. Temporarily install the V-ribbed belt tensioner with the 5 bolts.

**HINT:**

Each bolt length is as follows:

A: 70 mm (2.76 in.)


B: 33 mm (1.30 in.)

- b. Install the V-ribbed belt tensioner by tightening the bolt 1 and bolt 2 in the order shown in the illustration.

**Torque: 43 N\*m (438 kgf\*cm, 32 ft.\*lbf)**

- c. Tighten the other bolts.

**Torque: 43 N\*m (438 kgf\*cm, 32 ft.\*lbf)**

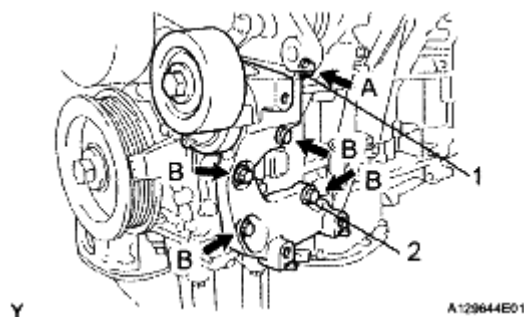


**Fig. 99: Installing V-Ribbed Belt Tensioner**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

#### 11. INSTALL DRIVE SHAFT BEARING BRACKET

- a. Install the drive shaft bearing bracket with the 3 bolts.

**Torque: 64 N\*m (650 kgf\*cm, 47 ft.\*lbf)**

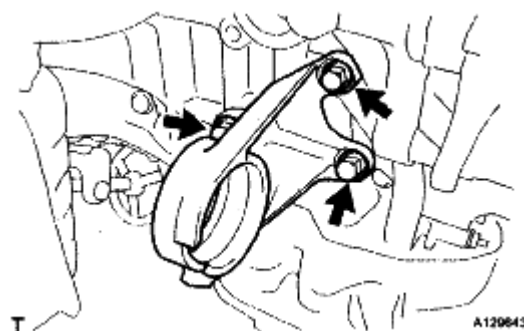


**Fig. 100: Installing Drive Shaft Bearing Bracket**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

#### 12. INSTALL ENGINE MOUNTING BRACKET RH

- a. Install the engine mounting bracket RH with the 3 bolts.


**Torque: 54 N\*m (551 kgf\*cm, 40 ft.\*lbf)**

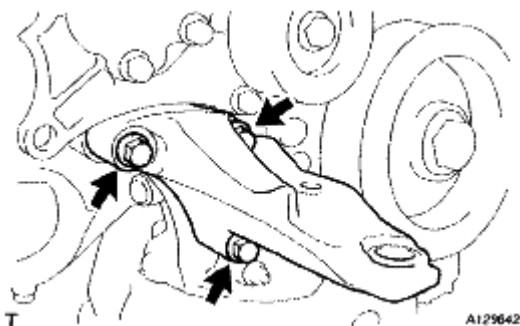

**Fig. 101: Installing Engine Mounting Bracket RH With Bolts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**13. INSTALL EXHAUST MANIFOLD SUB-ASSEMBLY LH**


- a. Install a new gasket as shown in the illustration.

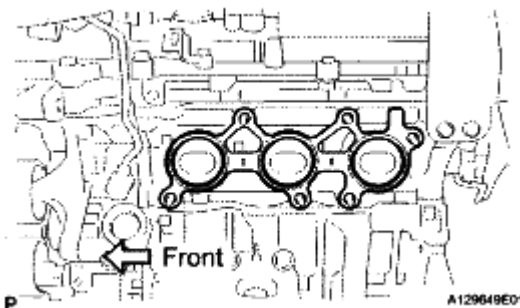

**Fig. 102: Identifying Exhaust Manifold Sub-Assembly Gasket**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Install the exhaust manifold sub-assembly LH with the 6 nuts.

**Torque: 21 N\*m (214 kgf\*cm, 15 ft.\*lbf)**

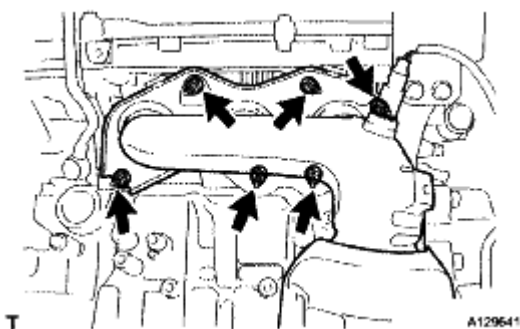


**Fig. 103: Installing Exhaust Manifold Sub-Assembly RH With Nuts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**14. INSTALL NO. 2 EXHAUST MANIFOLD HEAT INSULATOR**

- a. Install the No. 2 insulator with the 3 bolts.

**Torque: 8.5 N\*m (87 kgf\*cm, 75 in.\*lbf)**

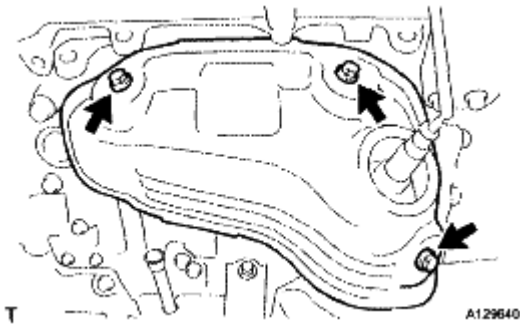


**Fig. 104: Installing Insulator Bolts**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**15. INSTALL NO. 2 MANIFOLD STAY**

- a. Install the No. 2 manifold stay with the 2 bolts.

**Torque: 34 N\*m (347 kgf\*cm, 25 ft.\*lbf)**

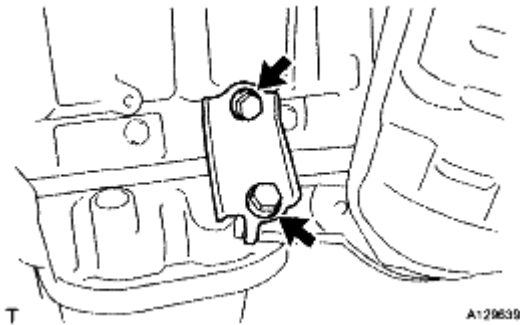

**Fig. 105: Installing Manifold Stay Bolts**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**16. INSTALL OIL LEVEL GAUGE GUIDE SUB-ASSEMBLY**


- a. Install 2 new O-rings to the oil level gauge guide.
- b. Apply a light coat of engine oil to the O-rings.
- c. Push in the oil level gauge guide end into the guide hole.
- d. Install the oil level gauge guide No. 1 with the bolt.

**Torque: 21 N\*m (214 kgf\*cm, 15 ft.\*lbf)**

- e. Install the oil level gauge guide No. 2 with the bolt.

**Torque: 21 N\*m (214 kgf\*cm, 15 ft.\*lbf)**

- f. Install the oil level gauge.

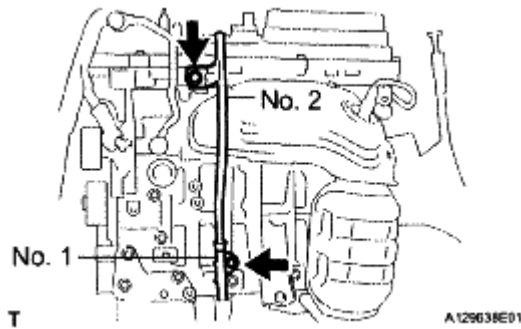


**Fig. 106: Installing Dipstick**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 17. INSTALL EXHAUST MANIFOLD SUB-ASSEMBLY RH

- a. Install a new gasket as shown in the illustration.

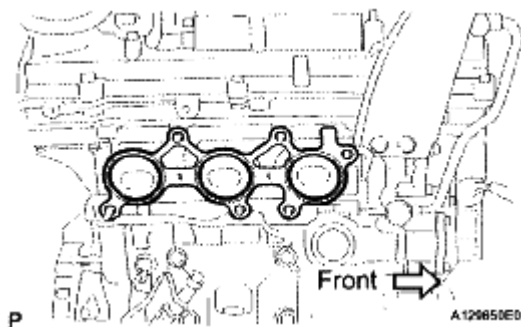


**Fig. 107: Installing Exhaust Manifold Sub-Assembly Gasket**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Install the exhaust manifold sub-assembly RH with the 6 nuts.

**Torque: 21 N\*m (214 kgf\*cm, 15 ft.\*lbf)**

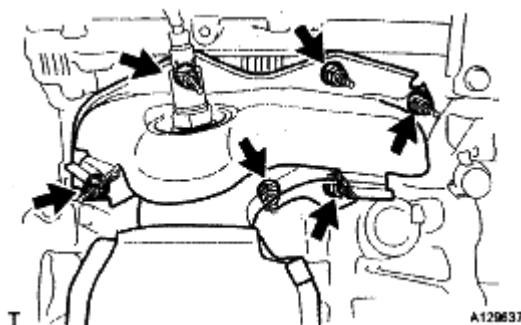

**Fig. 108: Removing Exhaust Manifold Sub-Assembly Nuts**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

# 18. INSTALL INTAKE MANIFOLD


- a. Set a new gasket on each cylinder head.

**NOTE:**

- Align the port holes of the gasket and cylinder head.
- Make sure that the gasket is installed in the correct direction.

- b. Set the intake manifold on the cylinder heads.
- c. Install and tighten the 6 bolts and 4 nuts uniformly in several steps.

**Torque: 21 N\*m (214 kgf\*cm, 15 ft.\*lbf)**

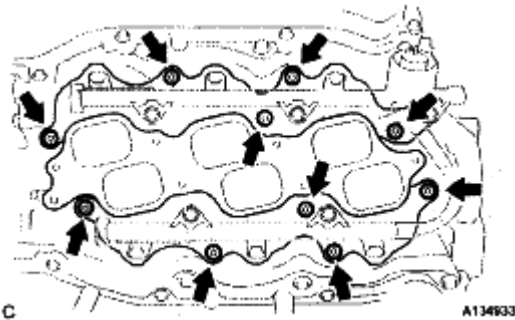

**Fig. 109: Locating Intake Manifold Bolts**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

# 19. INSTALL NO. 2 ENGINE MOUNTING STAY RH

- a. Install the No. 2 mounting stay RH with the bolt.

**Torque: 21 N\*m (214 kgf\*cm, 15 ft.\*lbf)**

# 20. INSTALL IGNITION COIL ASSEMBLY

- a. Install the 6 ignition coil assemblies with the 6 bolts.

**Torque: 10 N\*m (102 kgf\*cm, 7 ft.\*lbf)**

# 21. INSTALL INTAKE AIR SURGE TANK ASSEMBLY

**NOTE: DO NOT apply oil to the bolts as listed below**

## INTAKE AIR SURGE TANK ASSEMBLY

Tightening Parts	Torque N*m (kgf*cm, ft.*lbf)	QTY
Surge Tank and Intake Manifold	18 (184, 13)	4



No. 1 Surge Tank Stay and Cylinder Head Cover	21 (214,1 5)	1
Ho. 1 Surge Tank Stay and Surge Tank	21 (214, 15)	1
Throttle Body Bracket and Cylinder Head Cover	21 (214, 15)	1
Throttle Body Bracket and Surge Tank	21 (214, 15)	1

- a. Install a new gasket to the intake air surge tank.
- b. Using a 5 mm hexagon socket wrench, install the 4 bolts and 2 nuts.

**Torque:**

**Bolt**


**18 N\*m (184 kgf\*cm, 13 ft.\*lbf)**

**Nut**

**16 N\*m (163 kgf\*cm, 12 ft.\*lbf)**


- c. Install the throttle body bracket, No. 1 surge tank stay and 4 bolts.

**Torque: 21 N\*m (214 kgf\*cm, 15 ft.\*lbf)**

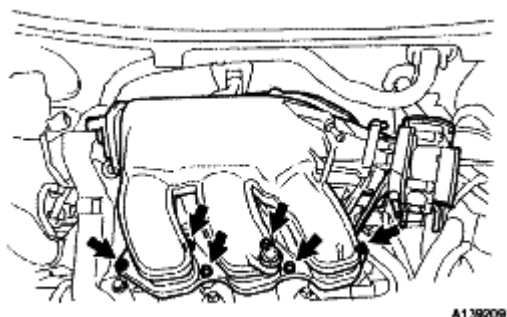

**Fig. 110: Installing Throttle Body Bracket, No. 1 Surge Tank Stay And Bolts**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


- d. Connect the connector.

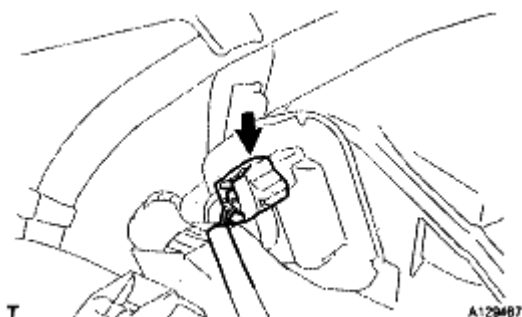

**Fig. 111: Connecting Connector**


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- e. Install the vacuum hose clamp with the bolt.

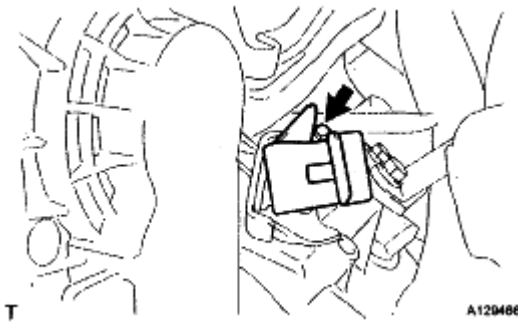**Torque: 5.4 N\*m (55 kgf\*cm, 48 in.\*lbf)****Fig. 112: Installing Vacuum Hose Clamp**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- f. Connect the No. 1 ventilation hose.
- g. Install the clamp and connect the throttle with motor body assembly connector.
- h. Connect the vapor feed hose.
- i. Connect the 2 water by-pass hoses to the throttle with motor body assembly.

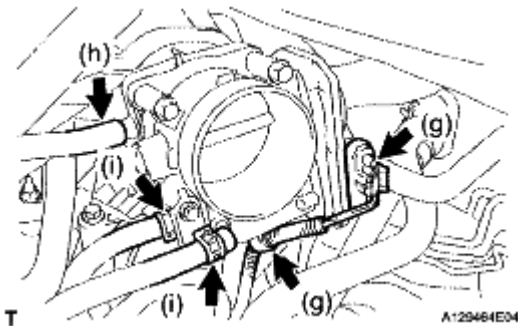**Fig. 113: Connecting Water By-Pass Hoses To Throttle With Motor Body Assembly**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


- 22. REMOVE ENGINE STAND
- 23. INSTALL DRIVE PLATE AND RING GEAR SUB-ASSEMBLY (See INSTALLATION)
- 24. INSTALL AUTOMATIC TRANSAXLE ASSEMBLY

HINT:

See INSTALLATION .


25. **INSTALL STARTER ASSEMBLY** (See **INSTALLATION** )
26. **INSTALL ENGINE WIRE**
27. **INSTALL FRONT DRIVE SHAFT ASSEMBLY LH** (See **INSTALLATION** )
28. **INSTALL FRONT DRIVE SHAFT ASSEMBLY RH** (See **INSTALLATION** )
29. **INSTALL FRONT FRAME ASSEMBLY**
  - a. Install the engine mounting insulators RH and LH with the 2 nuts.

**Torque: 95 N\*m (969 kgf\*cm, 70 ft.\*lbf)**

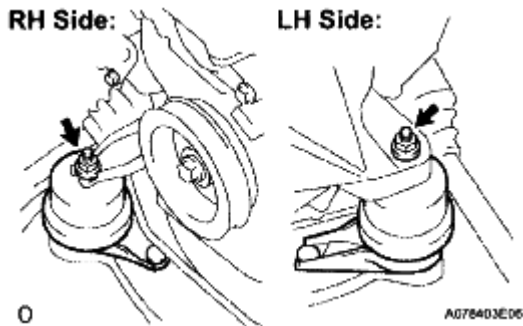

**Fig. 114: Installing Engine Mounting Insulators RH And LH With Nuts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


- b. Install the engine mounting insulator FR with the bolt.

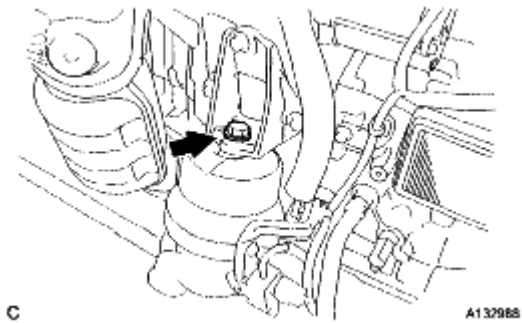

**Fig. 115: Installing Engine Mounting Insulator FR With Bolt**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


**Torque: 87 N\*m (887 kgf\*cm, 64 ft.\*lbf)**

- c. Connect the connector and clamp.

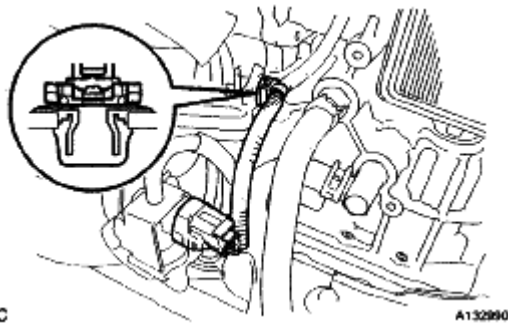

**Fig. 116: Connecting Connector And Clamp**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Connect the 2 clamps.

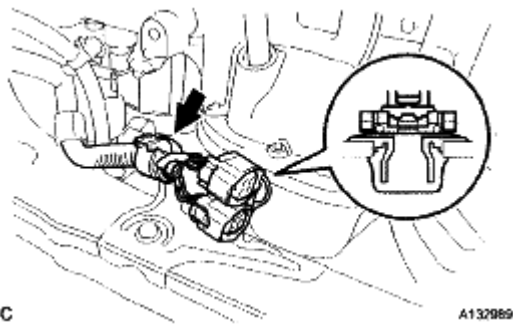

**Fig. 117: Connecting Clamps**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### 30. INSTALL VANE PUMP ASSEMBLY


- a. Install the vane pump with the 2 bolts.

**Torque: 43 N\*m (438 kgf\*cm, 32 ft.\*lbf)**

- b. Install the pressure feed tube clamp bolt.

**Torque: 9.8 N\*m (100 kgf\*cm, 87 in.\*lbf)**

- c. Connect the power steering oil pressure switch connector.

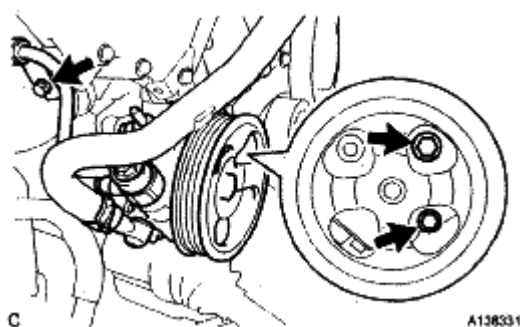

**Fig. 118: Identifying Vane Pump Assembly Bolts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### 31. INSTALL ENGINE ASSEMBLY WITH TRANSAXLE

- a. Set the engine assembly with transaxle on the engine lifter.
- b. Install the engine assembly to the vehicle.
- c. Install the frame side rail plates RH and LH with the 4 bolts and 2 nuts.

#### **Torque:**

**A**

**85 N\*m (867 kgf\*cm, 63 ft.\*lbf)**

**B**

**32 N\*m (329 kgf\*cm, 24 ft.\*lbf)**

- d. Install the front suspension member brace rear RH and LH with the 4 bolts and 2 nuts.


#### **Torque:**

**C**

**85 N\*m (867 kgf\*cm, 63 ft.\*lbf)**

**D**

**32 N\*m (329 kgf\*cm, 24 ft.\*lbf)**

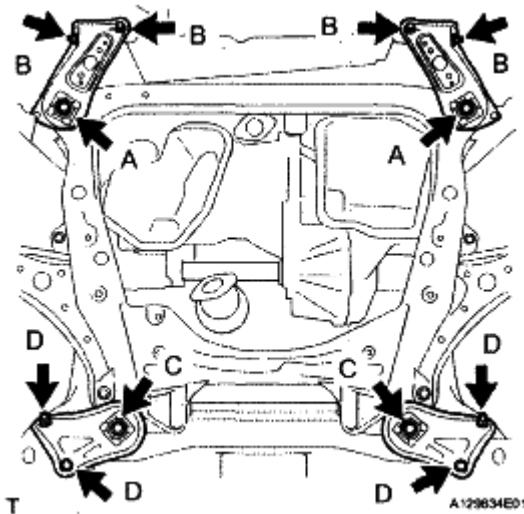


**Fig. 119: Installing Front Suspension Member Brace Rears**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**32. INSTALL COOLER COMPRESSOR ASSEMBLY**

- a. Temporarily install the cooler compressor with the 4 bolts.
- b. Install the compressor with the 4 bolts by tightening the bolts in the order shown in the illustration.

**Torque: 25 N\*m (250 kgf\*cm, 18 ft.\*lbf)**

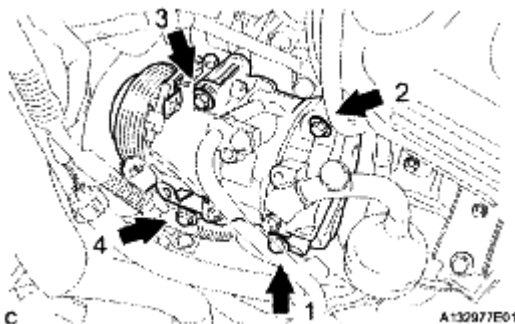

**Fig. 120: Tightening Cooler Compressor Assembly Bolts In Order**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Install the 2 connector clamps.

**33. INSTALL GENERATOR ASSEMBLY (See INSTALLATION )**

**34. INSTALL STEERING SLIDING YOKE (See INSTALLATION )**

**35. INSTALL DRIVE PLATE AND TORQUE CONVERTER CLUTCH SETTING BOLT (See INSTALLATION )**

**36. INSTALL NO. 1 EXHAUST PIPE SUPPORT BRACKET**

- a. Install the No. 1 exhaust pipe support bracket with the bolt.

**Torque: 21 N\*m (214 kgf\*cm, 15 ft.\*lbf)**

**37. INSTALL FRONT AXLE ASSEMBLY LH (See INSTALLATION )**

**38. INSTALL FRONT AXLE ASSEMBLY RH**

**HINT:**

Use the same procedures described for the LH side.

**39. INSTALL FRONT SUSPENSION LOWER NO. 1 ARM LH (See INSTALLATION )**

**40. INSTALL FRONT SUSPENSION LOWER NO. 1 ARM RH**

**HINT:**

Use the same procedures described for the LH side.

**41. INSTALL TIE ROD ASSEMBLY LH (See INSTALLATION )**

**42. INSTALL TIE ROD ASSEMBLY RH**

**HINT:**

Use the same procedures described for the LH side.

**43. INSTALL FRONT SPEED SENSOR LH (See INSTALLATION )**

**44. INSTALL FRONT SPEED SENSOR RH**

**HINT:**

Use the same procedures described for the LH side.

**45. INSTALL FRONT STABILIZER LINK ASSEMBLY LH (See INSTALLATION )**

**46. INSTALL FRONT STABILIZER LINK ASSEMBLY RH**

**HINT:**

Use the same procedures described for the LH side.

**47. INSTALL FRONT AXLE HUB NUT LH (See INSTALLATION )**

**48. INSTALL FRONT AXLE HUB NUT RH**


**HINT:**

Use the same procedures described for the LH side.

**49. INSTALL EXHAUST PIPE ASSEMBLY FRONT (See INSTALLATION )**

**50. INSTALL EXHAUST PIPE NO. 1 SUPPORT BRACKET (See INSTALLATION )****51. CONNECT NO. 1 OIL RESERVOIR TO PUMP HOSE**


- a. Connect the No. 1 oil reservoir to pump hose.

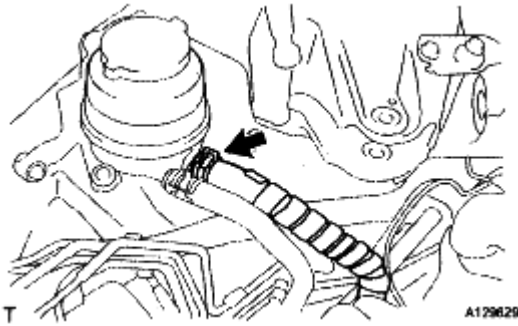

**Fig. 121: Connecting Oil Reservoir To Pump Hose**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**52. CONNECT RETURN TUBE SUB-ASSEMBLY**

- a. Connect the return tube sub-assembly.

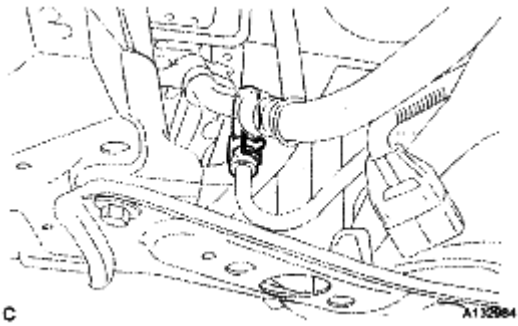

**Fig. 122: Connecting Return Tube Sub-Assembly**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**53. CONNECT FUEL TUBE SUB-ASSEMBLY**


- a. Push in the fuel tube connector to the fuel pipe until the connector makes a "click" sound.

**NOTE:**

- Check for damage or contamination on the connected part of the pipe.
- Check if the pipe and the connector are securely connected by trying to pull them apart.

- b. Install the No. 1 fuel pipe clamp.



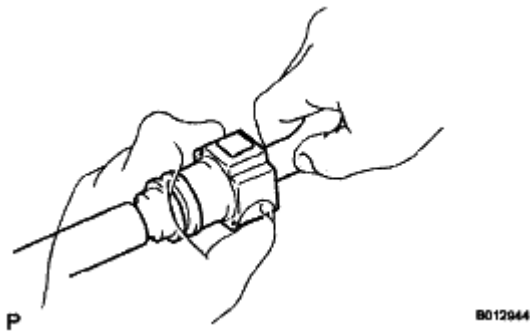


**Fig. 123: Connecting Fuel Tube Connector**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**54. CONNECT TRANSMISSION CONTROL CABLE ASSEMBLY**

- a. Install the clip and nut, and connect the cable to the transaxle.

**Torque: 13 N\*m (130 kgf\*cm, 9 ft.\*lbf)**

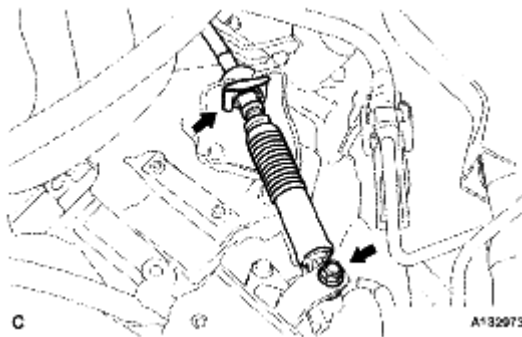


**Fig. 124: Locating Transmission Control Cable Assembly Clip And Nut**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**55. CONNECT ENGINE WIRE**

- a. Install the bolt and clamp to the bracket.


**Torque: 8.4 N\*m (85 kgf\*cm, 74 in.\*lbf)**

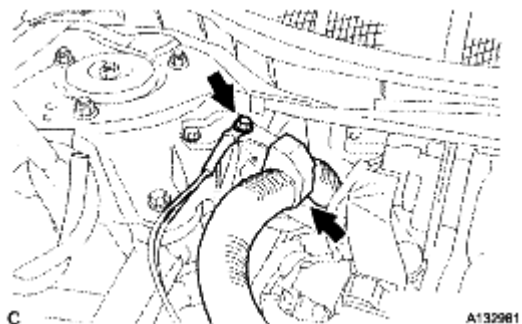

**Fig. 125: Locating Engine Wire Bolt And Clamp**


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Install the 2 bolts and 2 clamps to the body.

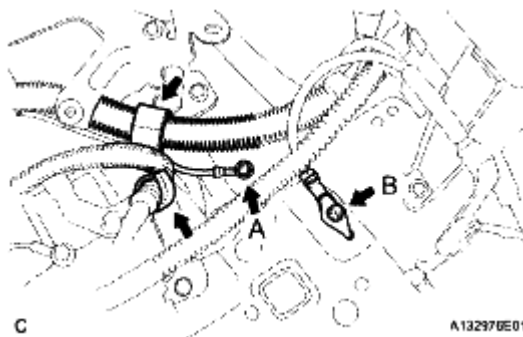**Torque:****Bolt A****12 N\*m (123 kgf\*cm, 9 ft.\*lbf)****Bolt B****8.4 N\*m (85 kgf\*cm, 74 in.\*lbf)****Fig. 126: Locating Body Bolts And Clamps**


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Connect the wire to the engine room junction block. Then, install it with the nut and 3 connectors.

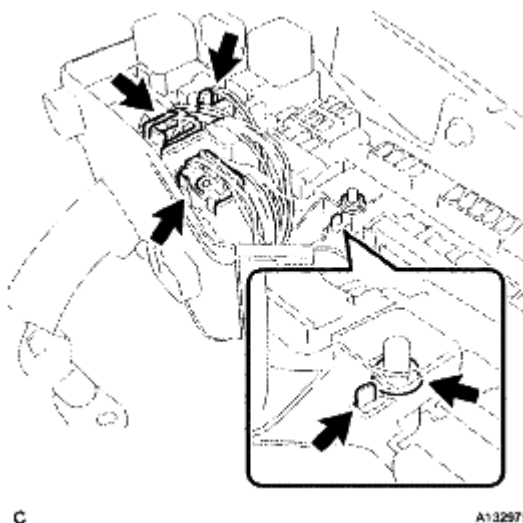**Torque: 8.4 N\*m (85 kgf\*cm, 74 in.\*lbf)**


**Fig. 127: Connecting Wire To Engine Room Junction Block**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- 56. **INSTALL RELAY BLOCK COVER UPPER**
- 57. **INSTALL ECM** (See **INSTALLATION** )
- 58. **CONNECT HEATER INLET WATER HOSE**
  - a. Connect the heater inlet water hose.

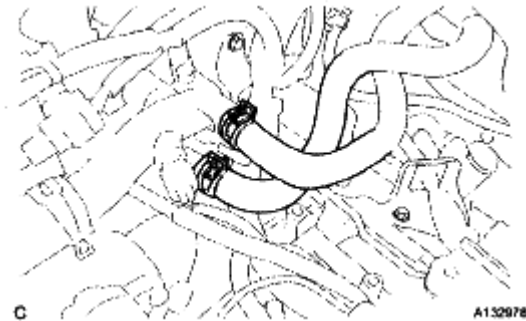


**Fig. 128: Connecting Heater Outlet Water Hose**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- 59. **CONNECT HEATER OUTLET WATER HOSE**
  - a. Connect the heater outlet water hose.
- 60. **CONNECT NO. 1 OIL COOLER INLET HOSE**
  - a. Install the clamp and connect the oil cooler inlet hose.

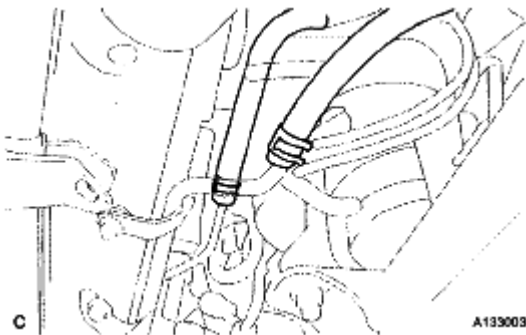

**Fig. 129: Identifying Oil Cooler Outlet Hose**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


- 61. **CONNECT NO. 1 OIL COOLER OUTLET HOSE**
  - a. Install the clamp and connect the oil cooler outlet hose.
- 62. **INSTALL RADIATOR HOSE INLET**
  - a. Install the clamp and connect the radiator hose inlet.

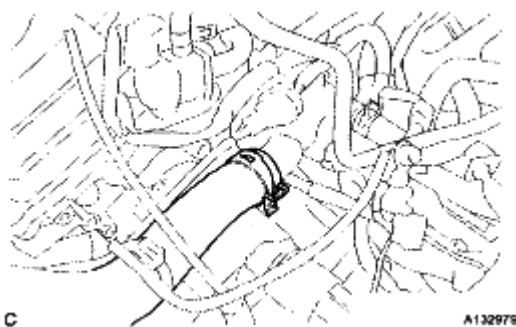

**Fig. 130: Identifying Radiator Hose Inlet Clamp**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**63. INSTALL RADIATOR HOSE OUTLET**


- a. Install the clamp and connect the radiator hose outlet.

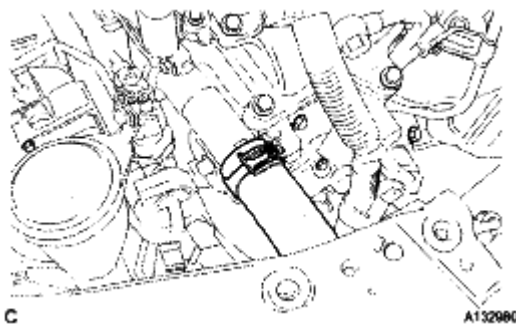

**Fig. 131: Identifying Radiator Hose Outlet Clamp**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**64. CONNECT CHECK VALVE TO BRAKE BOOSTER HOSE**


- a. Install the clamp and connect the check valve to brake booster hose.

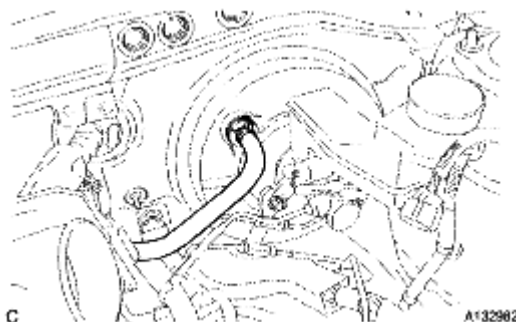

**Fig. 132: Identifying Brake Booster Hose Clamp**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**65. CONNECT NO. 1 FUEL VAPOR FEED HOSE**

- a. Install the clamp and connect the No. 1 fuel vapor feed hose.

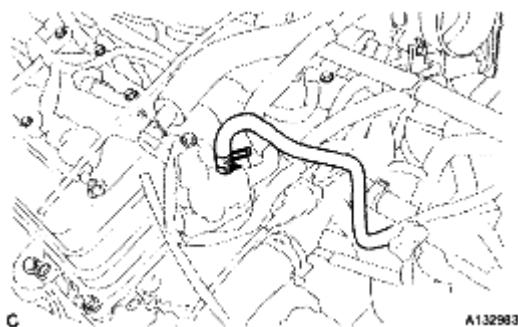


**Fig. 133: Identifying No. 1 Fuel Vapor Feed Hose Clamp**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**66. INSTALL ENGINE MOVING CONTROL ROD SUB-ASSEMBLY**

- Temporarily install the engine moving control rod with the 4 bolts.
- First install the bolts A, and then the remaining bolt B.

**Torque: 38 N\*m (388 kgf\*cm, 28 ft.\*lbf)**

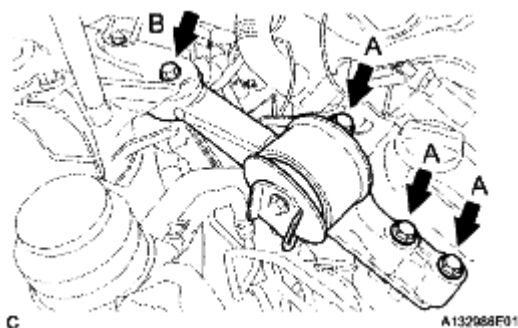

**Fig. 134: Installing Engine Moving Control Rod With Bolts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


**67. INSTALL NO. 2 ENGINE MOUNTING STAY RH**

- Temporarily install the No. 2 engine mounting stay RH with the bolt.

**Torque: 38 N\*m (388 kgf\*cm, 28 ft.\*lbf)**

- Tighten the 2 nuts.

**Torque: 23 N\*m (235 kgf\*cm, 17 ft.\*lbf)**

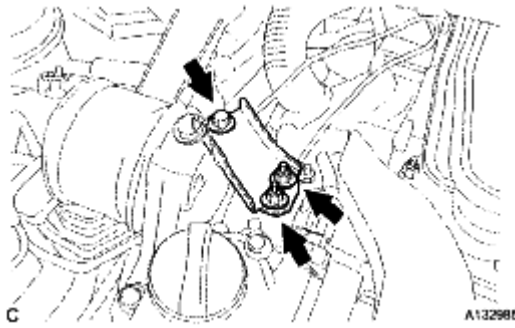


**Fig. 135: Installing No. 2 Engine Mounting Stay RH With Bolt**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**68. INSTALL INTAKE AIR RESONATOR SUB-ASSEMBLY**

- a. Install the intake air resonator with the bolt and clip.

**Torque: 5.0 N\*m (51 kgf\*cm, 44 in.\*lbf)**

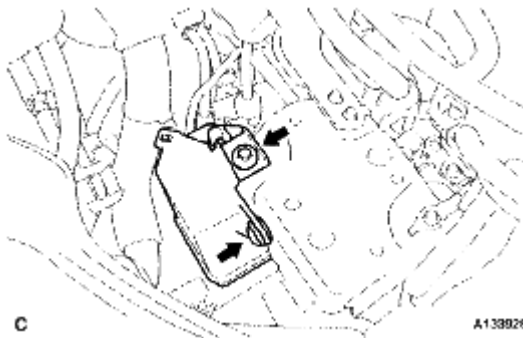

**Fig. 136: Installing Intake Air Resonator With Bolt And Clip**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**69. INSTALL BATTERY**

- a. Install the battery and battery tray.
- b. Install the battery clamp with the bolt and nut.


**Torque:**

**Bolt**

**9.0 N\*m (92 kgf\*cm, 80 in.\*lbf)**

**Nut**

**3.5 N\*m (36 kgf\*cm, 31 in.\*lbf)**

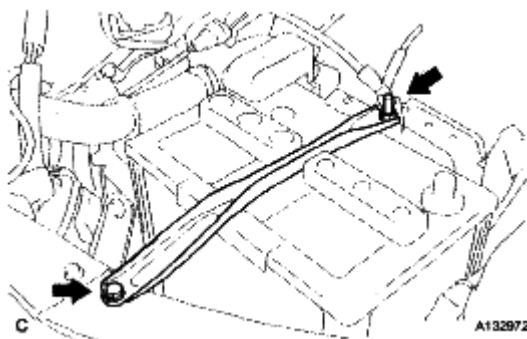


**Fig. 137: Installing Battery Clamp With Bolt And Nut**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**70. INSTALL NO. 1 AIR CLEANER INLET**

- a. Install the No. 1 air cleaner inlet with the bolt.

**Torque: 5.0 N\*m (51 kgf\*cm, 44 in.\*lbf)**

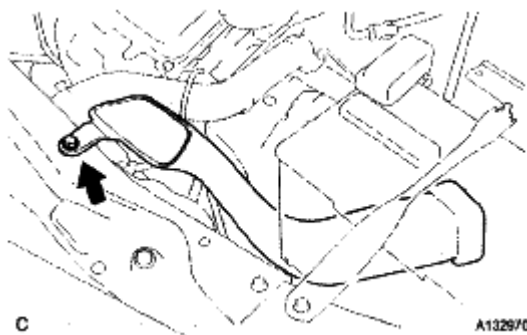


**Fig. 138: Installing No. 1 Air Cleaner Inlet With Bolt**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**71. INSTALL AIR CLEANER CASE SUB-ASSEMBLY**

- a. Install the air cleaner case with the 3 bolts.

**Torque: 5.0 N\*m (51 kgf\*cm, 44 in.\*lbf)**

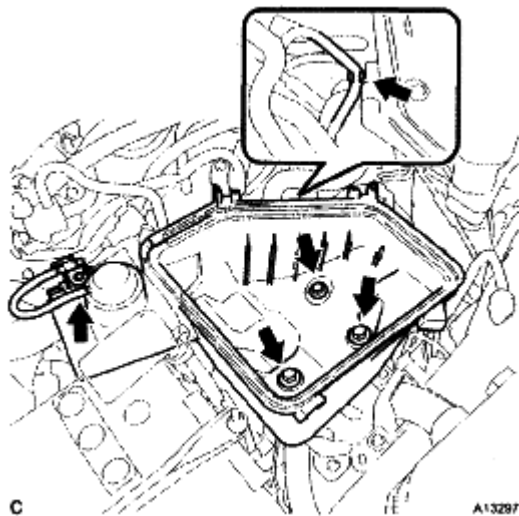

**Fig. 139: Installing Air Cleaner Case With Bolts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


b. Connect the vacuum hose and hose clamp.

72. **INSTALL AIR CLEANER CAP SUB-ASSEMBLY** (See **INSTALLATION** )

73. **INSTALL AIR CLEANER INLET ASSEMBLY**

a. Install the air cleaner inlet with the clamp and 2 bolts.


**Torque: 5.0 N\*m (51 kgf\*cm, 44 in.\*lbf)**

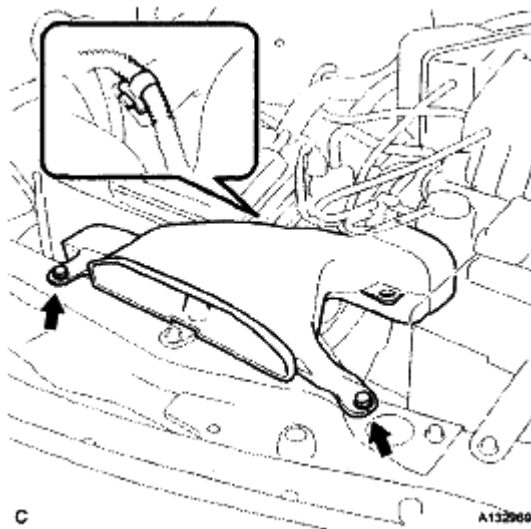

**Fig. 140: Installing Air Cleaner Inlet With Clamp And Bolts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

74. **CONNECT VACUUM HOSES**

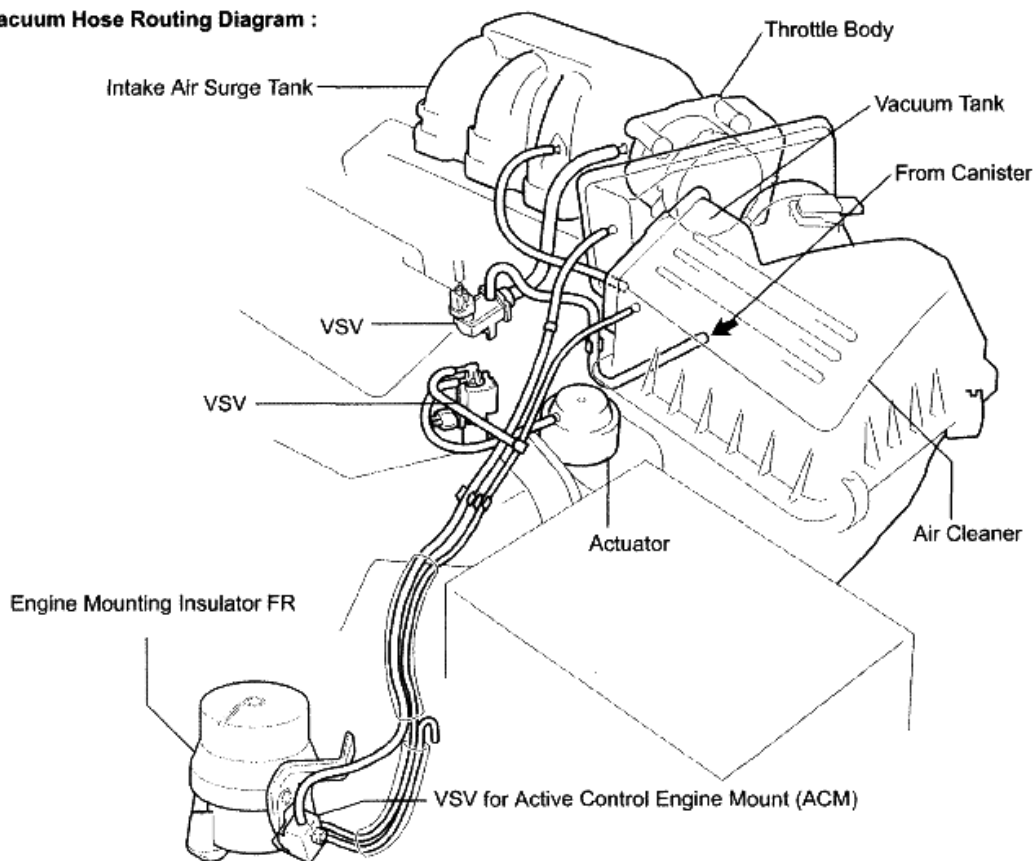

**Vacuum Hose Routing Diagram :**

C

A152993E01

**Fig. 141: Identifying Vacuum Hoses**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

75. **INSTALL V-RIBBED BELT** (See INSTALLATION)
76. **INSTALL COWL TOP PANEL OUTER SUB-ASSEMBLY** (See INSTALLATION)
77. **INSTALL WINDSHIELD WIPER LINK ASSEMBLY**

HINT:

See INSTALLATION .

78. **INSTALL FRONT WHEELS**

**Torque: 103 N\*m (1,050 kgf\*cm, 76 ft.\*lbf)**

79. **ADD ENGINE OIL**
80. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**

**Torque: 6.9 N\*m (70 kgf\*cm, 61 in.\*lbf)**


81. **ADD ENGINE COOLANT** (See ON-VEHICLE INSPECTION )

- 82. **ADD AUTOMATIC TRANSAXLE FLUID** (See INSTALLATION )
- 83. **ADD POWER STEERING FLUID**
- 84. **BLEED POWER STEERING FLUID** (See BLEEDING )
- 85. **CHECK FOR FUEL LEAKS** (See ON-VEHICLE INSPECTION )
- 86. **CHECK FOR ENGINE OIL LEAKS**
- 87. **CHECK FOR ENGINE COOLANT LEAKS** (See ON-VEHICLE INSPECTION )
- 88. **CHECK FOR EXHAUST GAS LEAKS**
- 89. **CHECK SHIFT LEVER POSITION** (See COMPONENTS )
- 90. **CHECK AND ADJUST FRONT WHEEL ALIGNMENT**

HINT:

See ADJUSTMENT .


- 91. **CHECK IGNITION TIMING** (See ON-VEHICLE INSPECTION)
- 92. **CHECK ENGINE IDLE SPEED** (See ON-VEHICLE INSPECTION)
- 93. **CHECK CO/HC** (See ON-VEHICLE INSPECTION)
- 94. **CHECK FUNCTION OF THROTTLE BODY** (See REMOVAL )
- 95. **INSTALL FRONT FENDER APRON SEAL RH**
- 96. **INSTALL ENGINE UNDER COVER LH**
- 97. **INSTALL ENGINE UNDER COVER RH**
- 98. **INSTALL V-BANK COVER SUB-ASSEMBLY**
  - a. Fit the 3 retainers and install the V-bank cover.

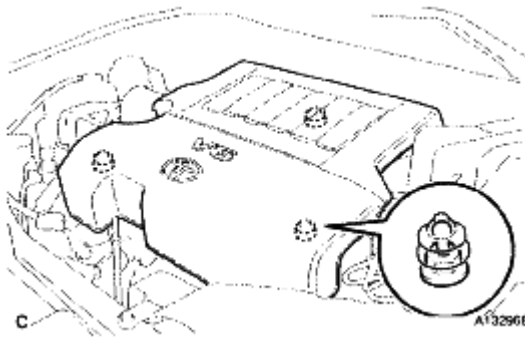

**Fig. 142: Installing V-Bank Cover**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- 99. **INSTALL COOL AIR INTAKE DUCT SEAL**
  - a. Install the intake duct seal with the 7 clips.

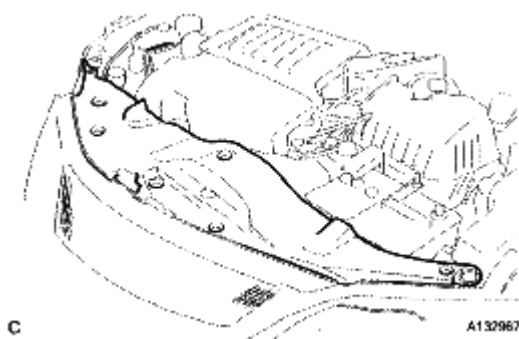

**Fig. 143: Installing Intake Duct Seal With Clips**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**100. CHECK ABS SPEED SENSOR SIGNAL**

- a. ABS: (See **TEST MODE PROCEDURE** ).
- b. VSC (for BOSCH): (See **TEST MODE PROCEDURE** ).
- c. VSC (for ADVICS): (See **TEST MODE PROCEDURE** ).


**ENGINE UNIT**

**COMPONENTS**

## 2007 Toyota Camry XLE

2007 ENGINE Engine Mechanical (2GR-FE) - Camry

RH SIDE:

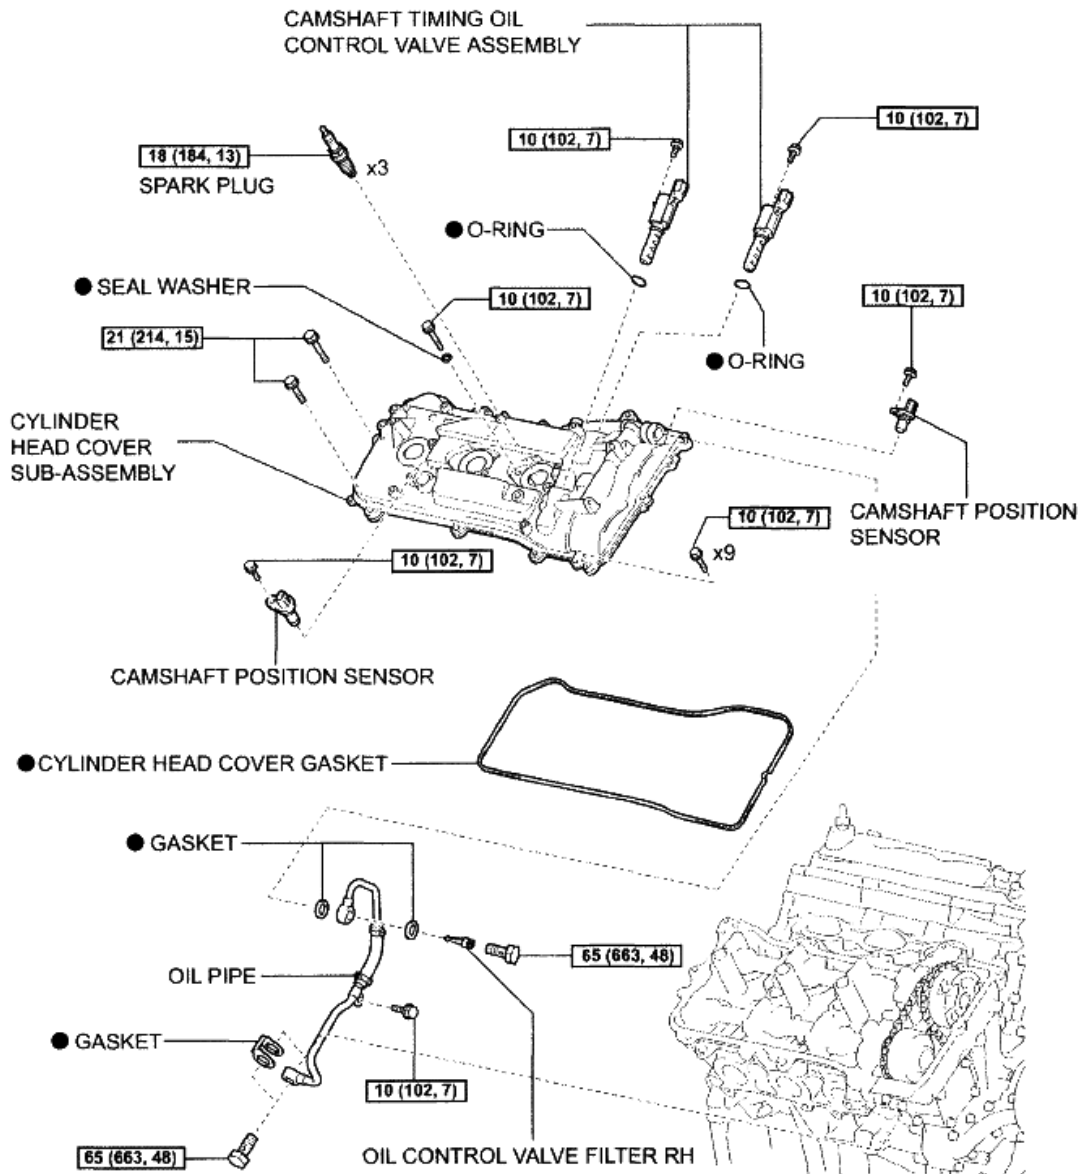

[N\*m (kgf\*cm, ft.\*lbf)]: Specified torque ● Non-reusable part


P

A152493E01

**Fig. 144: Identifying Engine Unit Components With Torque Specifications (1 Of 11)**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 2007 Toyota Camry XLE

2007 ENGINE Engine Mechanical (2GR-FE) - Camry

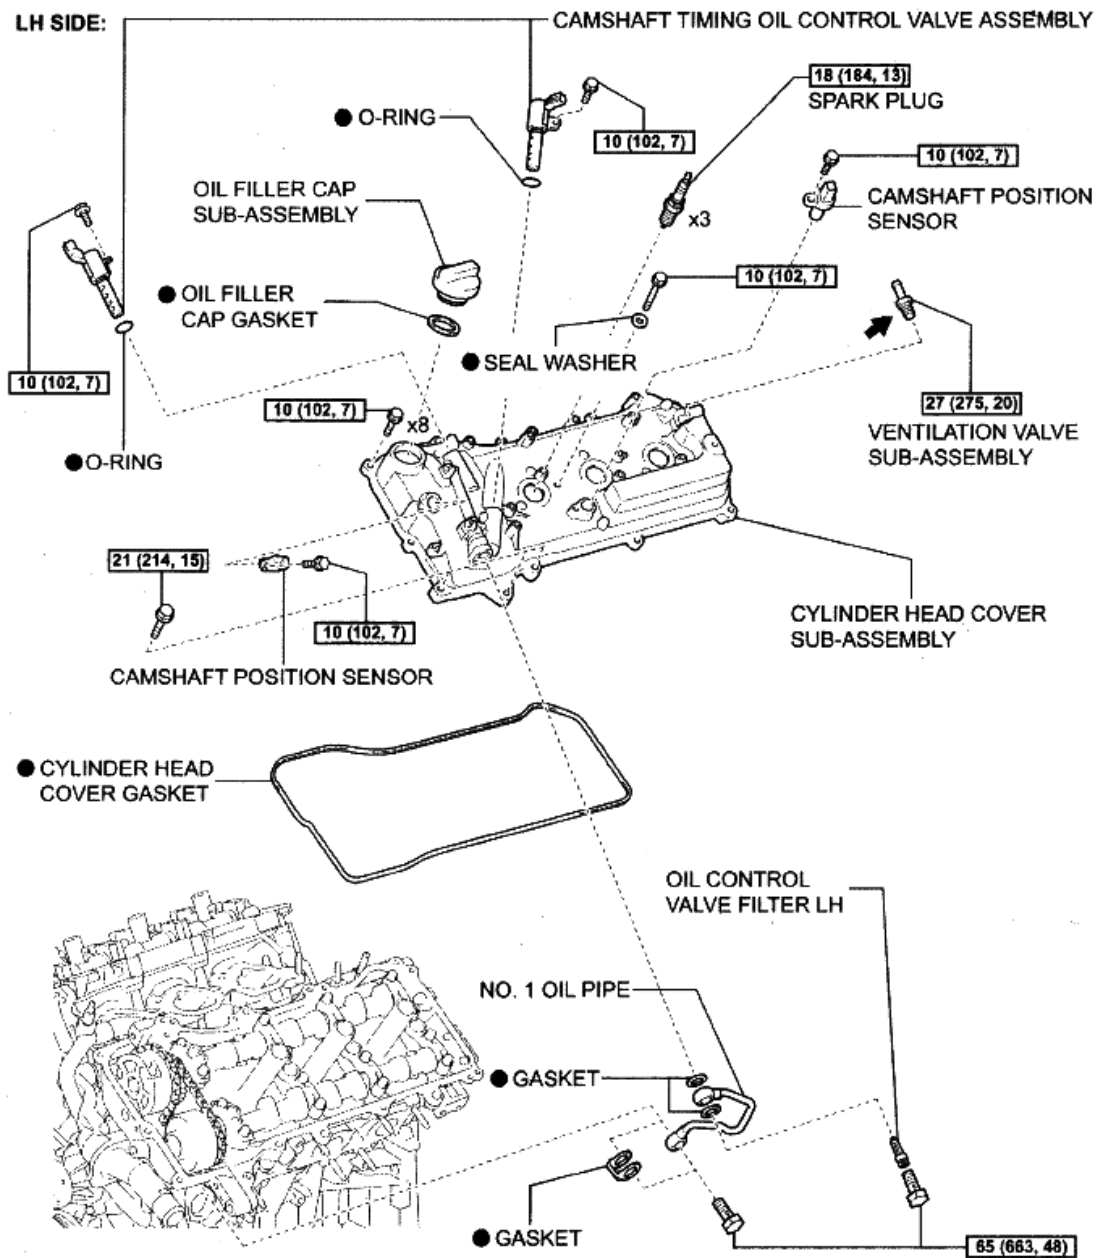

**[N\*m (kgf\*cm, ft.\*lbf)]:** Specified torque    ● Non-reusable part    ← Precoated part

P

A132#94E01

**Fig. 145: Identifying Engine Unit Components With Torque Specifications (2 Of 11)**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


## 2007 ENGINE Engine Mechanical (2GR-FE) - Camry




domingo, 25 de octubre de 2020 11:36:57 p. m.	Page 86	© 2011 Mitchell Repair Information Company, LLC.
-----------------------------------------------	---------	--------------------------------------------------

## 2007 Toyota Camry XLE

2007 ENGINE Engine Mechanical (2GR-FE) - Camry

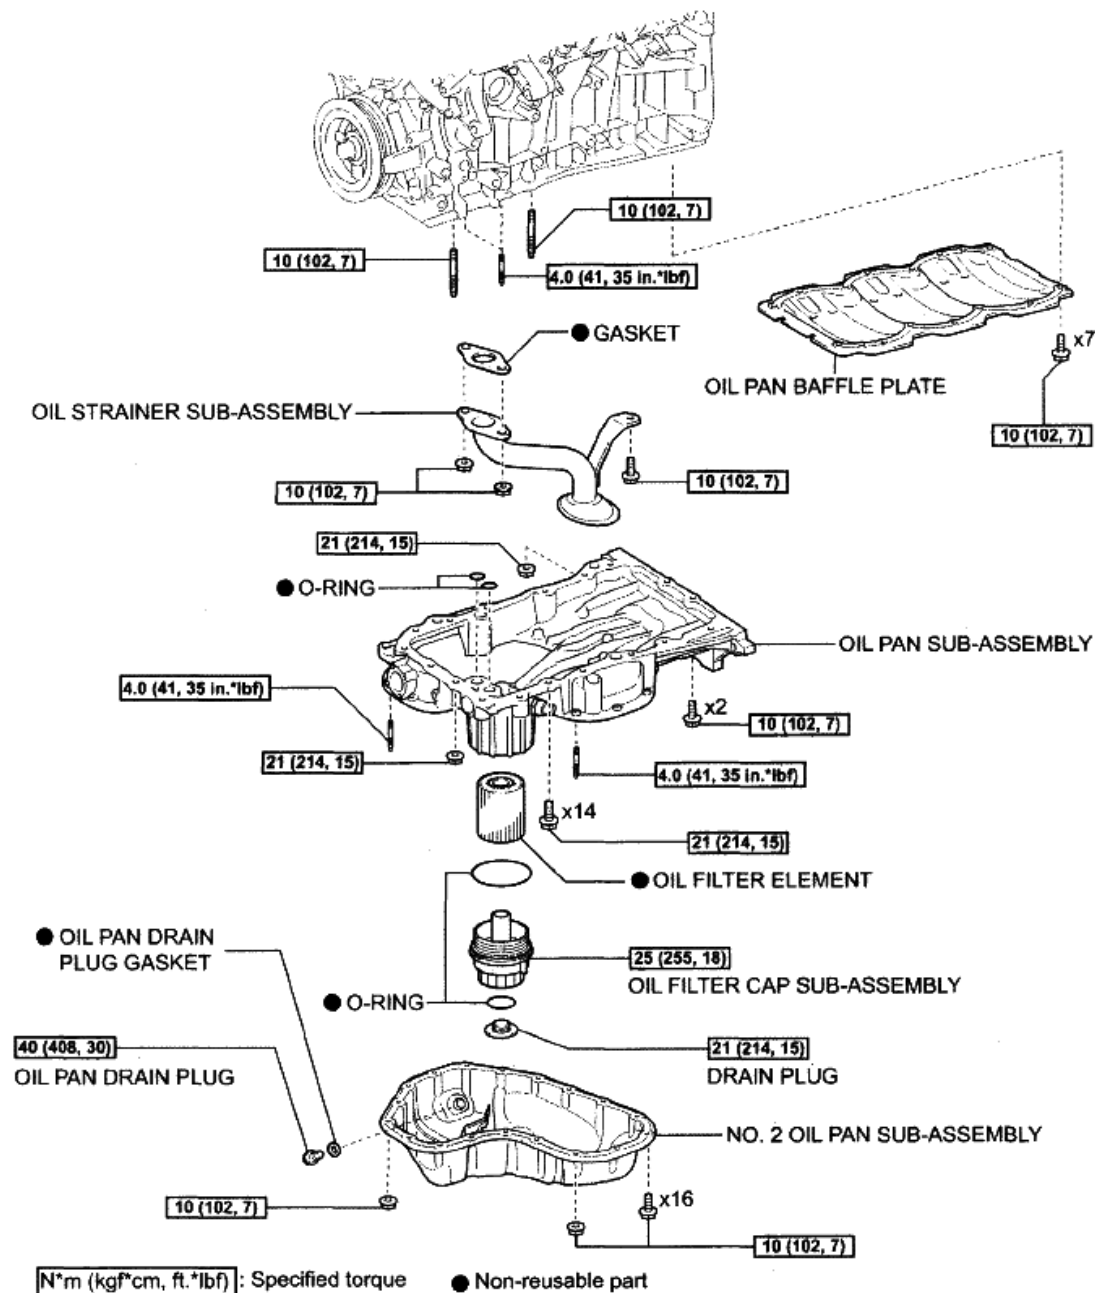

**Fig. 147: Identifying Engine Unit Components With Torque Specifications (4 Of 11)**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

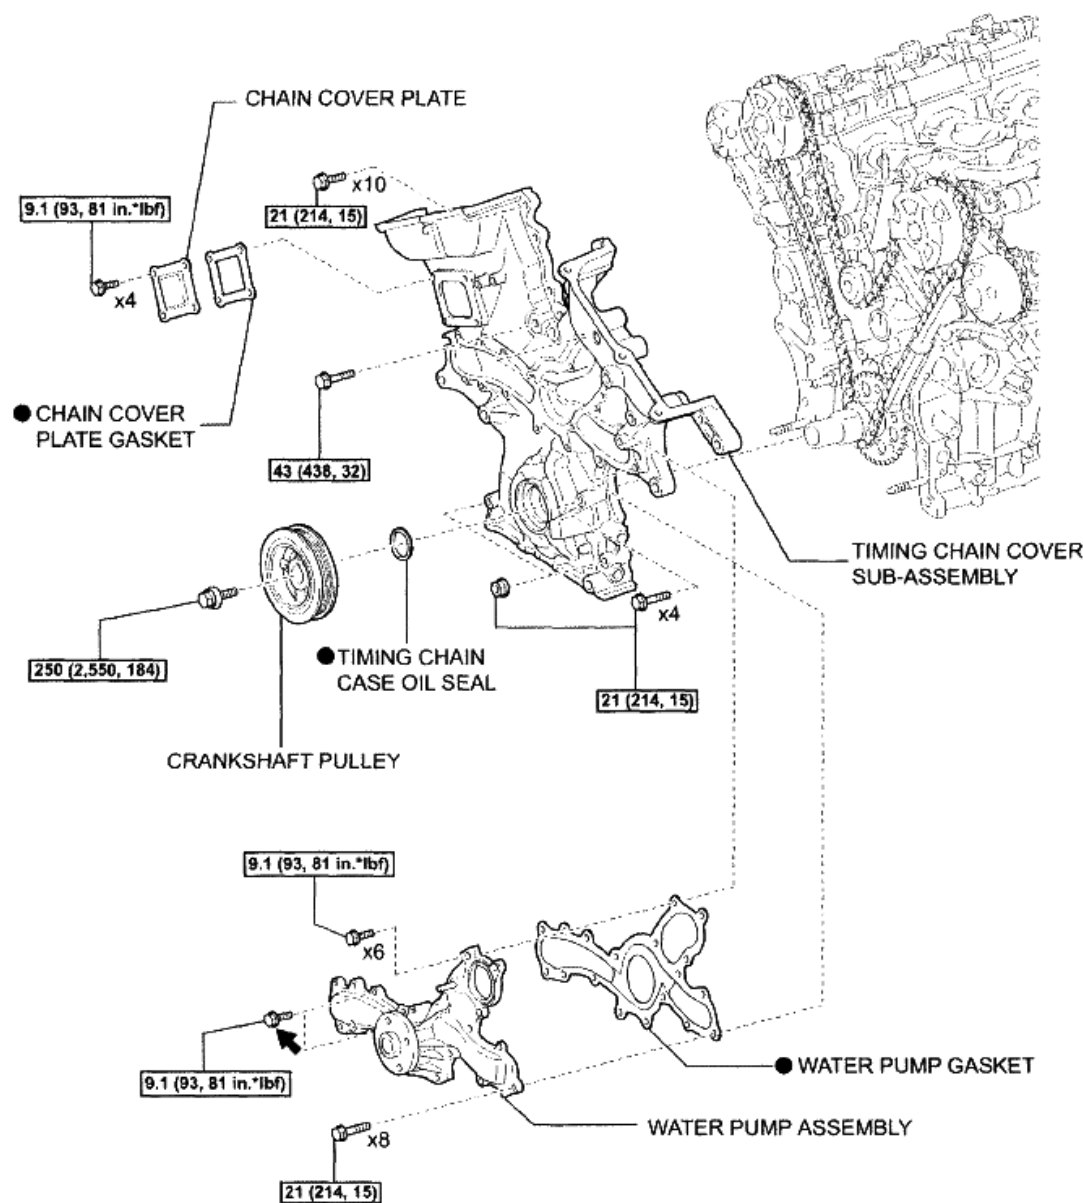

[N\*m (kgf\*cm, ft.\*lbf)]: Specified torque

● Non-reusable part

◀ Precoated part


A13249/7ED1

**Fig. 148: Identifying Engine Unit Components With Torque Specifications (5 Of 11)**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.



## 2007 Toyota Camry XLE

2007 ENGINE Engine Mechanical (2GR-FE) - Camry

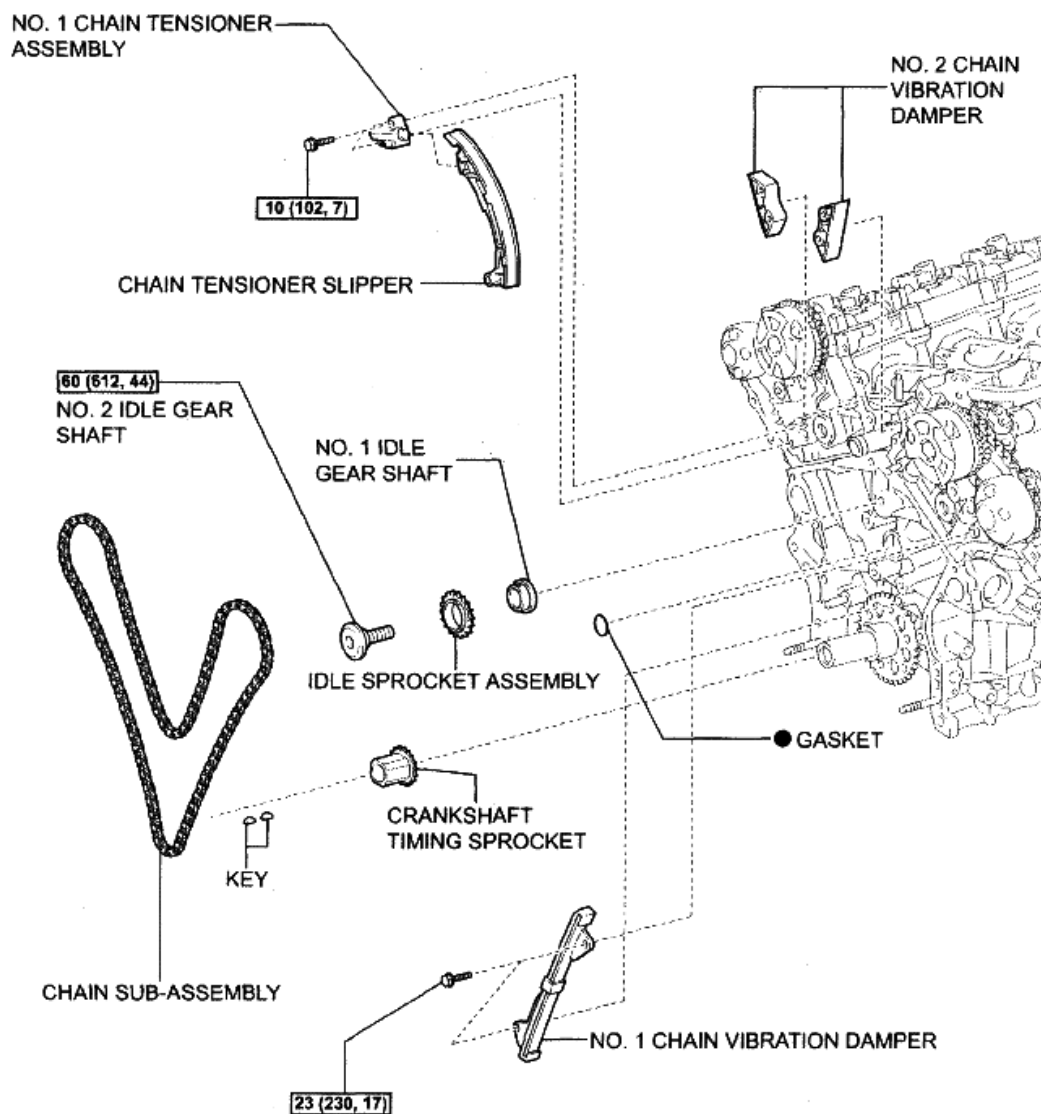

**N\*m (kgf\*cm, ft.\*lbf)**: Specified torque    ● Non-reusable part


A132498E01

**Fig. 149: Identifying Engine Unit Components With Torque Specifications (6 Of 11)**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 2007 Toyota Camry XLE

2007 ENGINE Engine Mechanical (2GR-FE) - Camry

RH SIDE:

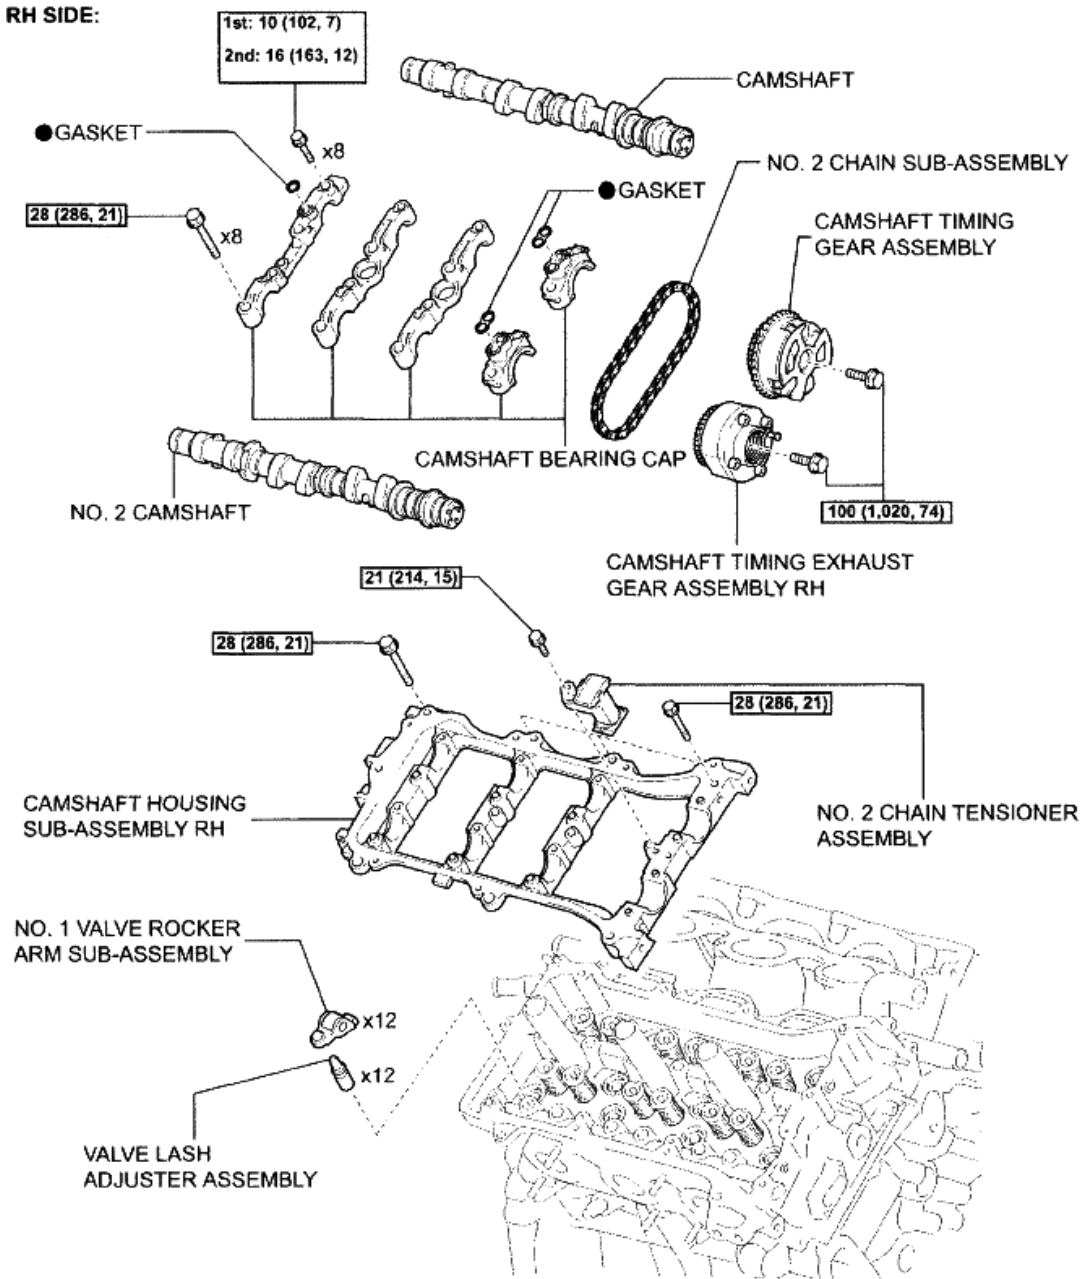

[N\*m (kgf\*cm, ft.\*lbf)]: Specified torque

● Non-reusable part

P


A132498E01

**Fig. 150: Identifying Engine Unit Components With Torque Specifications (7 Of 11)**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 2007 Toyota Camry XLE


2007 ENGINE Engine Mechanical (2GR-FE) - Camry

LH SIDE:

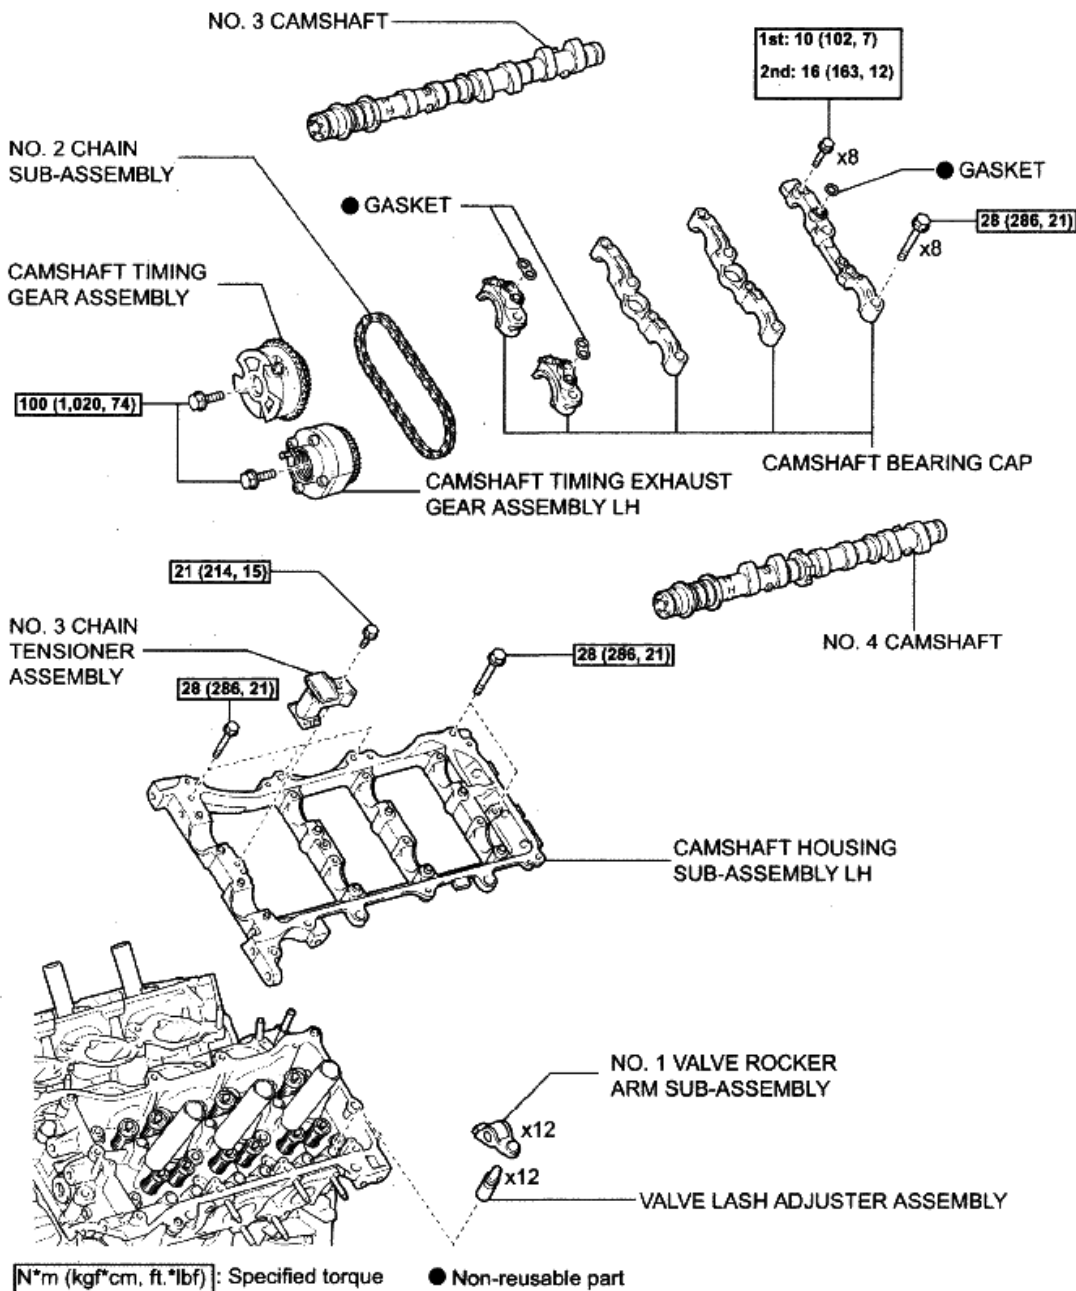

A132900E01

**Fig. 151: Identifying Engine Unit Components With Torque Specifications (8 Of 11)**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

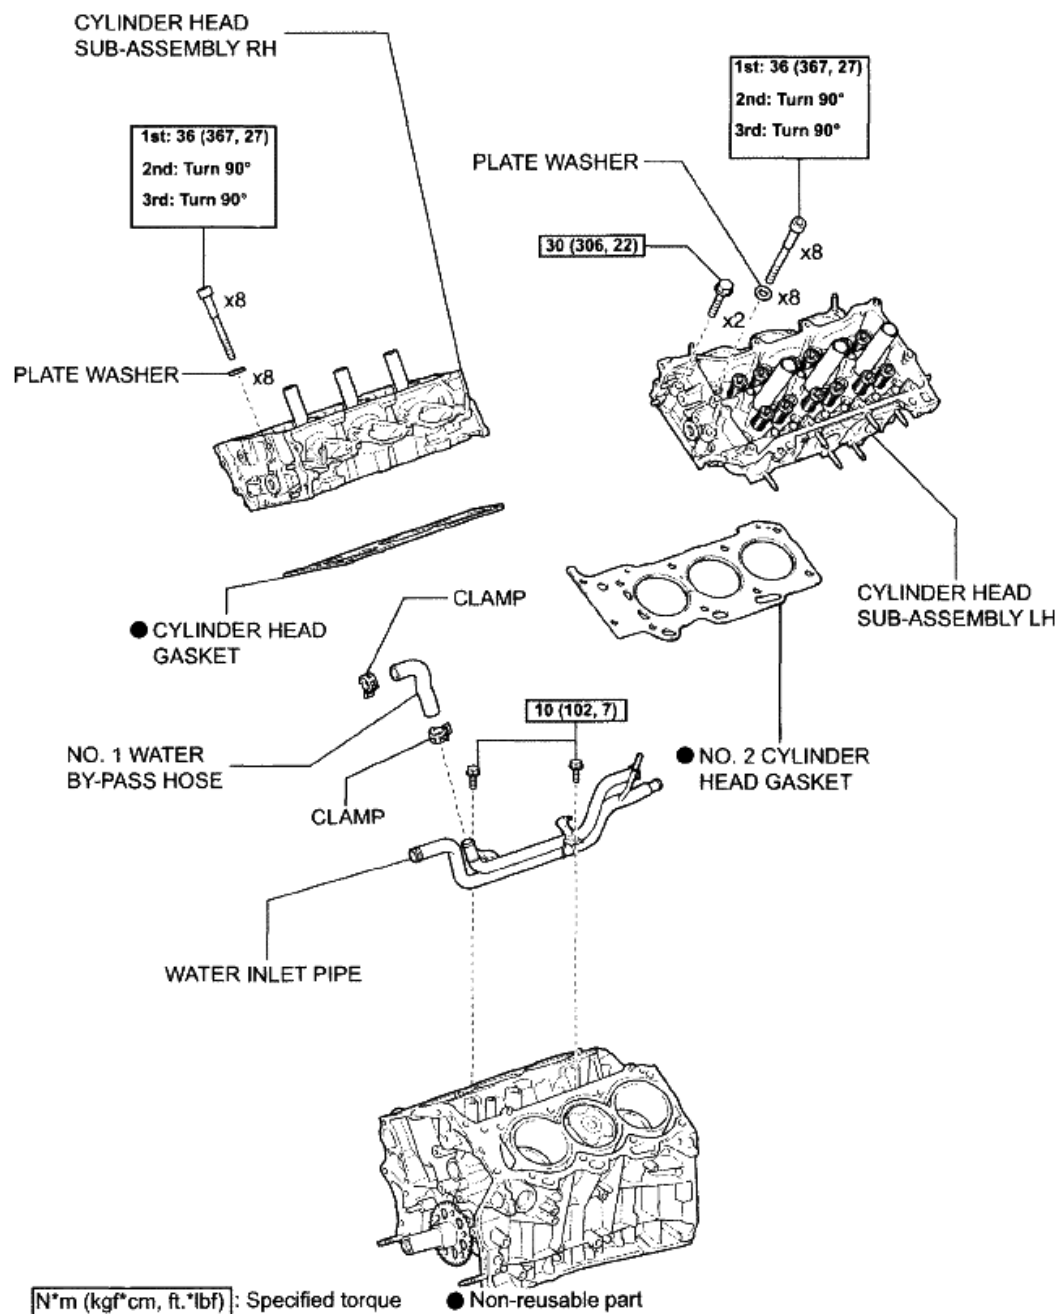


A132501E01

**Fig. 152: Identifying Engine Unit Components With Torque Specifications (9 Of 11)**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 2007 Toyota Camry XLE

2007 ENGINE Engine Mechanical (2GR-FE) - Camry

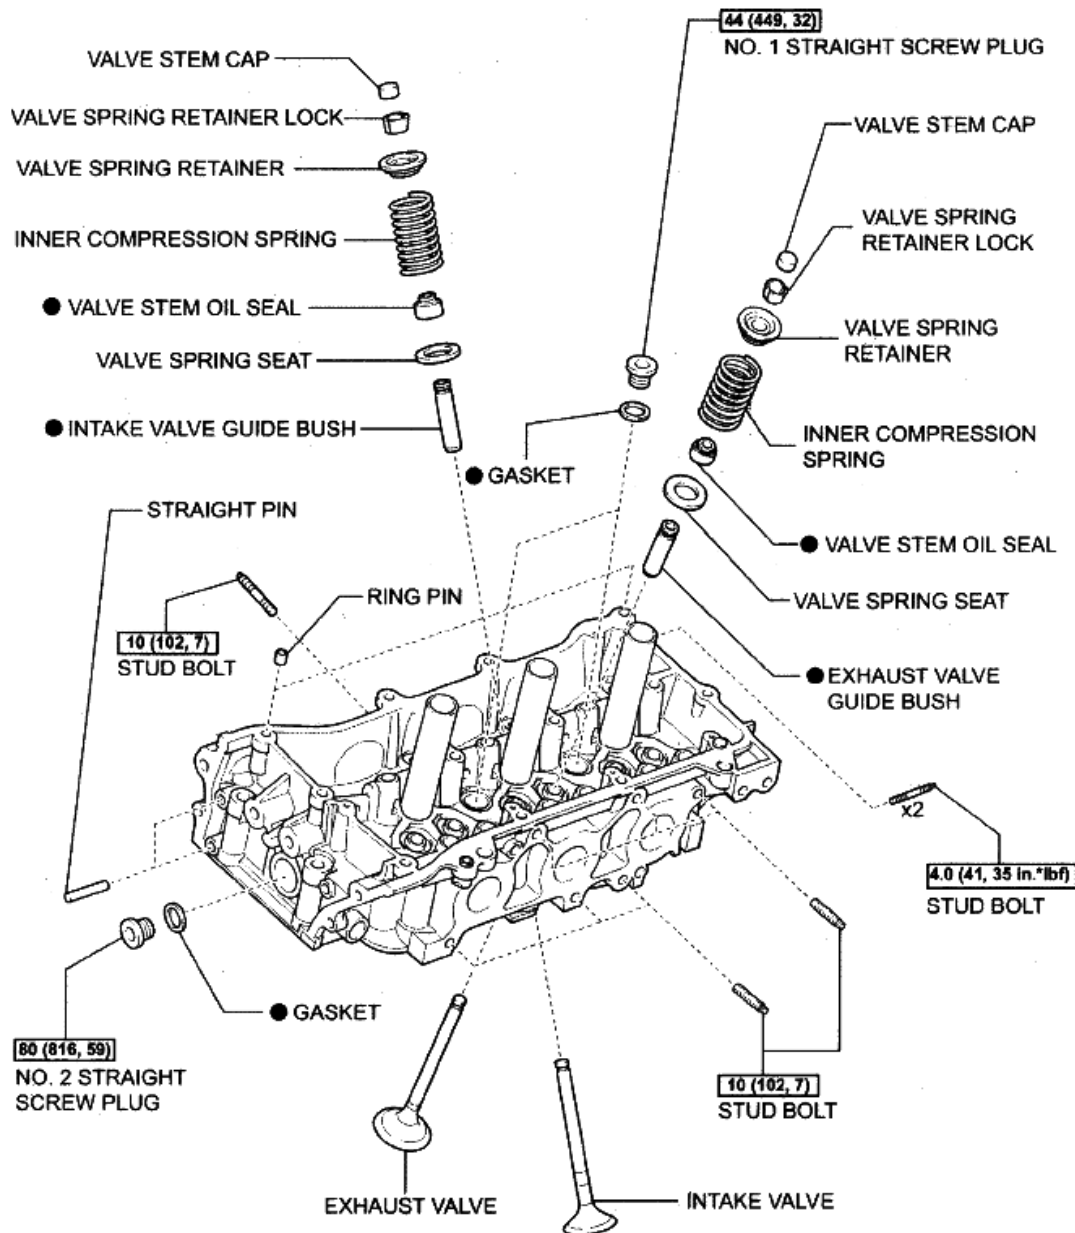


N\*m (kgf\*cm, ft.\*lbf) : Specified torque ● Non-reusable part

A132502E01

**Fig. 153: Identifying Engine Unit Components With Torque Specifications (10 Of 11)**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 2007 Toyota Camry XLE

2007 ENGINE Engine Mechanical (2GR-FE) - Camry

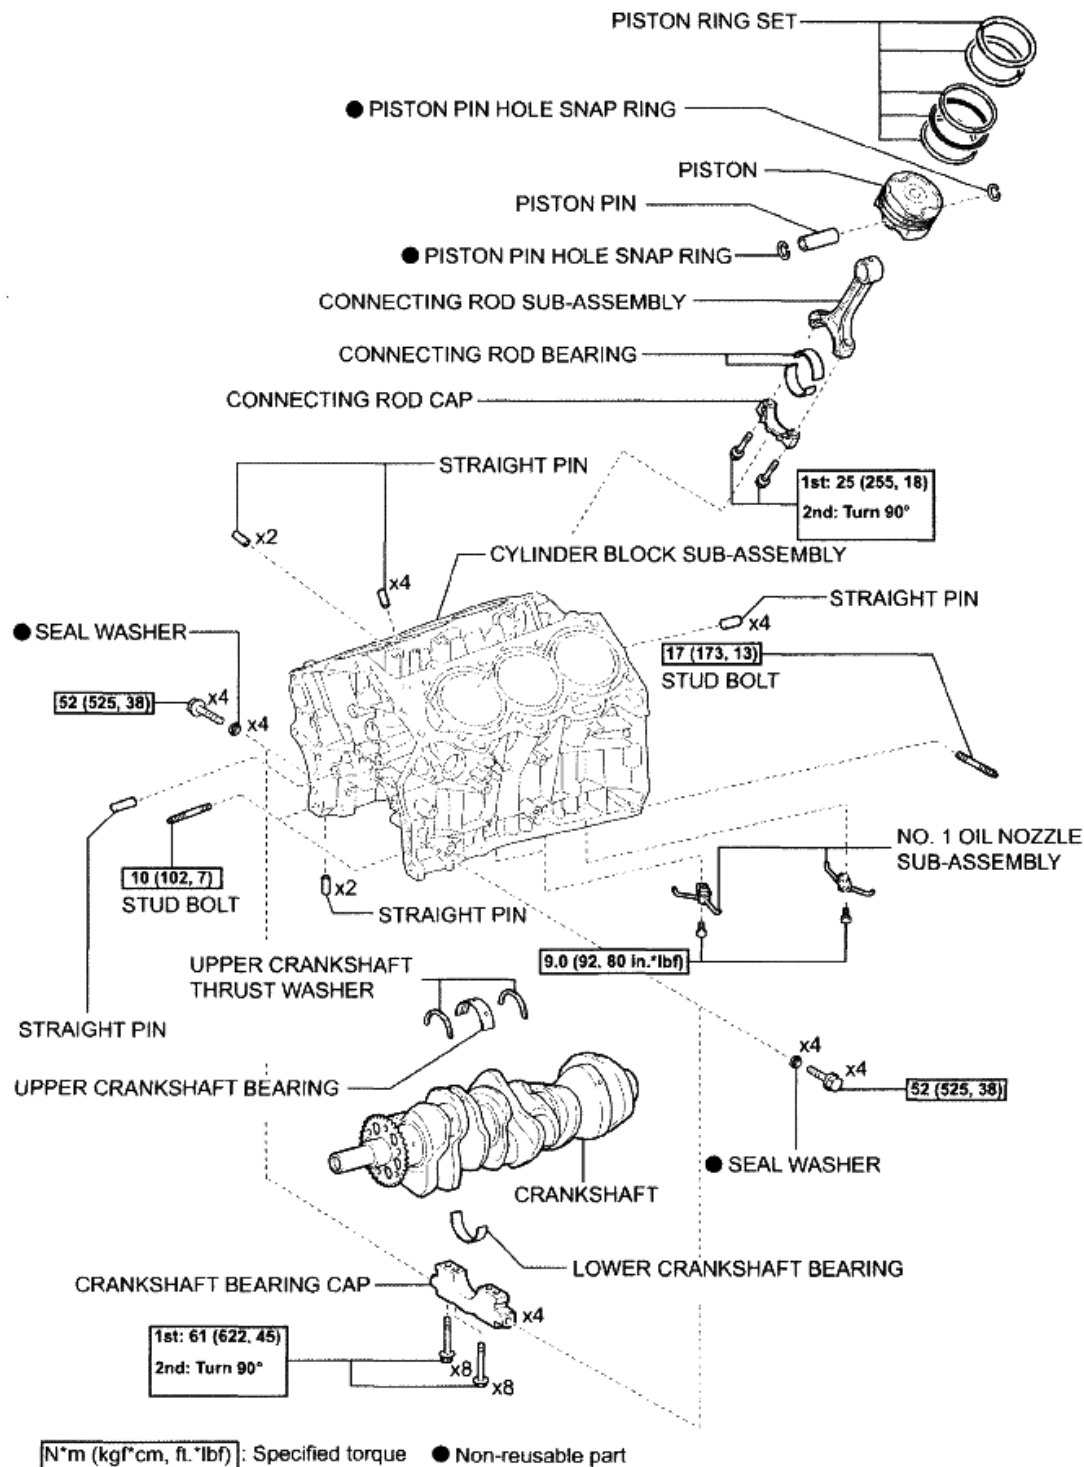

**Fig. 154: Identifying Engine Unit Components With Torque Specifications (11 Of 11)**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### DISASSEMBLY

**CAUTION:** For additional information on timing chain/gear removal guidelines, installation and camshaft timing gear alignment, see 2GR-FE VALVE TIMING PROCEDURE .

**1. REMOVE OIL FILLER CAP SUB-ASSEMBLY**


- a. Remove the oil filler cap and gasket.

**2. REMOVE SPARK PLUG**

- a. Remove the spark plugs.

**3. REMOVE OIL PAN DRAIN PLUG**

- a. Remove the drain plug and gasket.

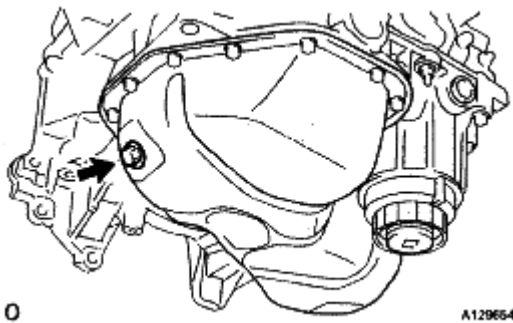


**Fig. 155: Locating Oil Pan Drain Plug**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**4. REMOVE VENTILATION VALVE SUB-ASSEMBLY**

- a. Remove the ventilation valve.


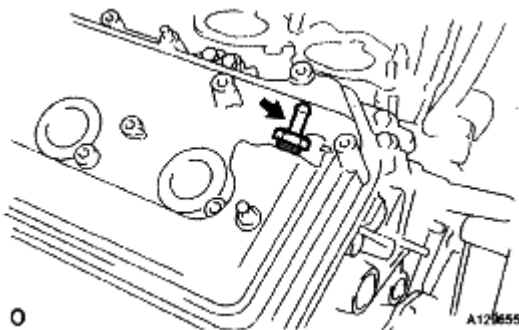


**Fig. 156: Locating Ventilation Valve Sub-Assembly**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**5. REMOVE CAMSHAFT POSITION SENSOR**

- a. Remove the 4 bolts and 4 sensors.

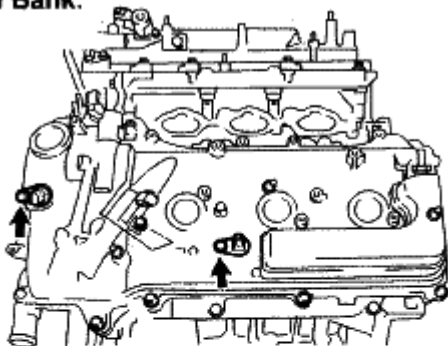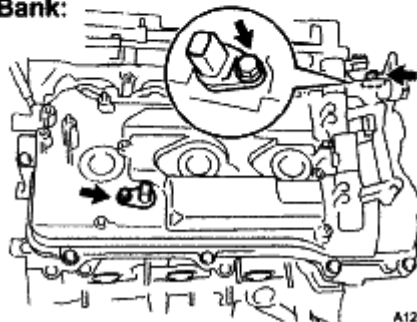**LH Bank:****RH Bank:**



0

A129656E01

**Fig. 157: Locating Camshaft Position Sensors With Bolts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**6. REMOVE CAMSHAFT TIMING OIL CONTROL VALVE ASSEMBLY**

- a. Remove the 4 bolts and 4 oil control valves.

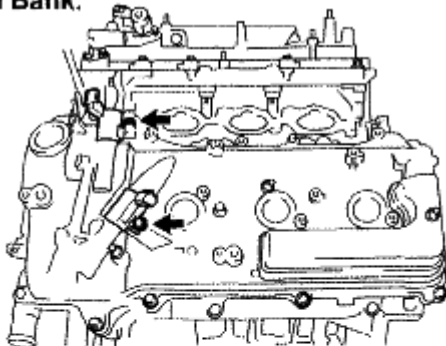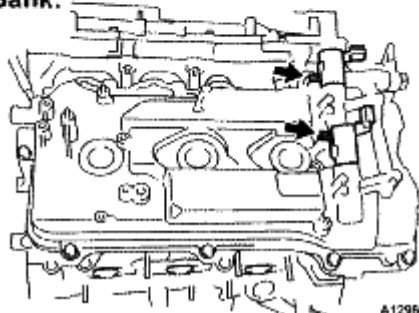**LH Bank:****RH Bank:**

0


A129662E01



**Fig. 158: Locating Camshaft Timing Oil Control Valves With Bolts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 7. REMOVE CRANKSHAFT POSITION SENSOR


- a. Remove the bolt and sensor.

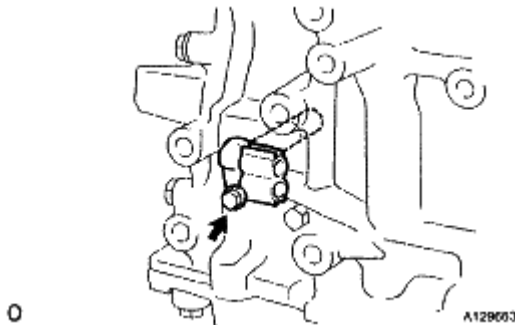

**Fig. 159: Removing Crankshaft Position Sensor Bolt And Sensor**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 8. REMOVE NO. 1 OIL PIPE


- a. Remove the 2 oil pipe unions and oil pipe.
- b. Remove the oil control valve filter LH and gaskets.

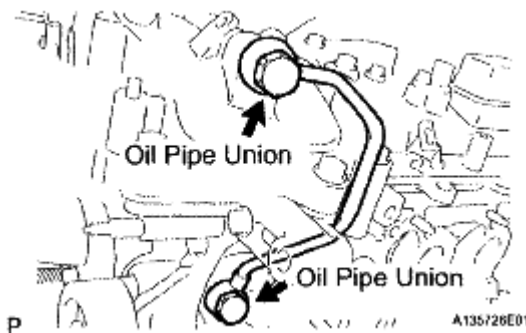

**Fig. 160: Removing Oil Control Valve Filter LH And Gaskets**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 9. REMOVE OIL PIPE


- a. Remove the bolt.
- b. Remove the 2 oil pipe unions and oil pipe.
- c. Remove the oil control valve filter RH and gaskets.

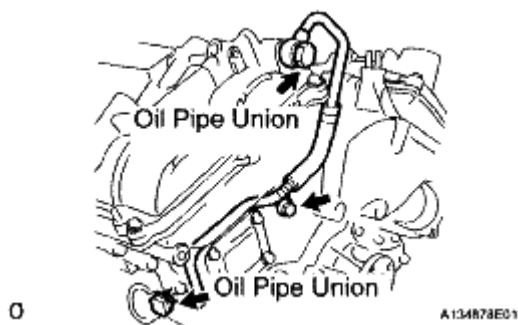

**Fig. 161: Removing Oil Control Valve Filter RH And Gaskets**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

# 10. REMOVE CYLINDER BLOCK WATER DRAIN COCK SUB-ASSEMBLY

- a. Remove the water drain cocks from the cylinder block.
- b. Remove the water drain cock plugs from the water drain cocks.

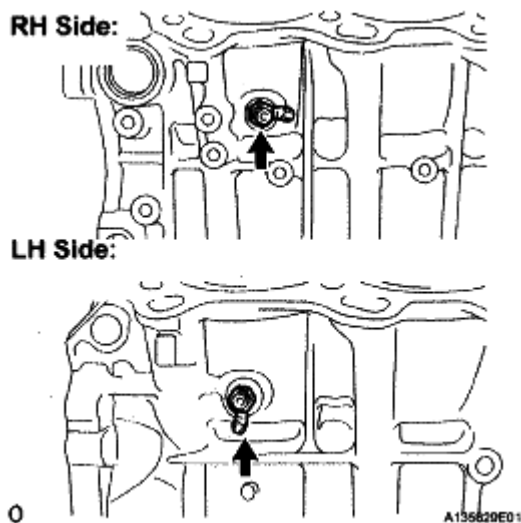


**Fig. 162: Removing Water Drain Cock Plugs From Water Drain Cocks**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

# 11. REMOVE OIL FILTER ELEMENT

- a. Remove the drain plug.


**NOTE:** Do not remove the O-ring from the oil filter cap.

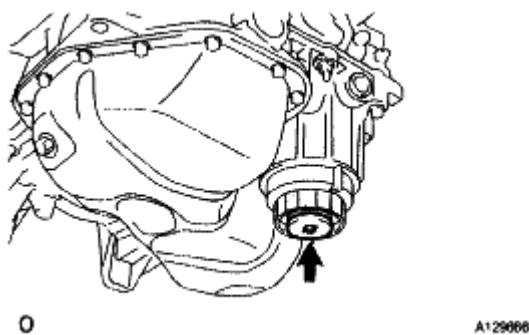

**Fig. 163: Removing Drain Plug**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Connect the hose to the pipe.

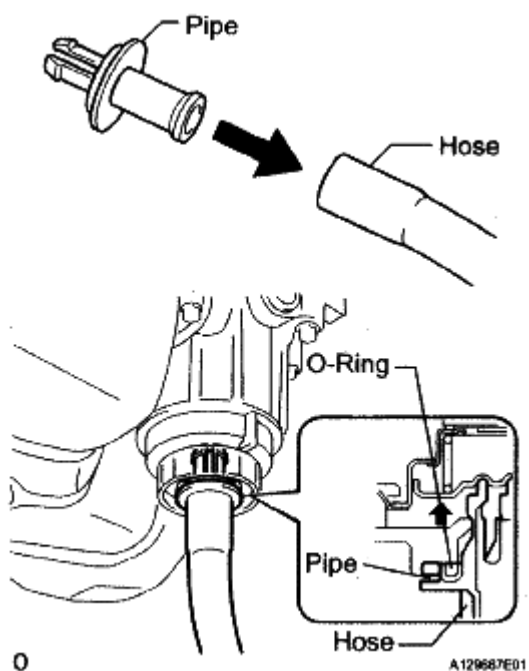


**Fig. 164: Connecting Hose To Pipe**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Insert the pipe with the hose into the oil filter cap.
- d. Make sure that the oil is completely drained and remove the pipe and O-ring.
- e. Using SST, remove the oil filter cap.


**SST 09228-06501**

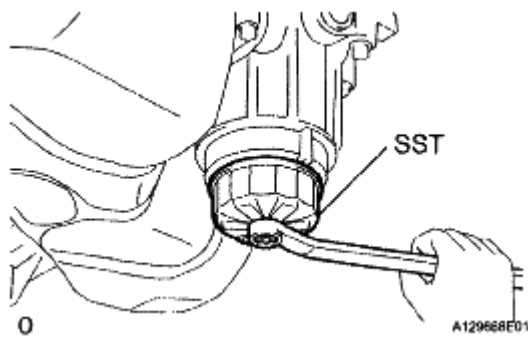**Fig. 165: Removing Oil Filter Cap**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- f. Remove the oil filter element and O-ring from the oil filter cap.

**NOTE:** Do not use any tools when removing the O-ring to prevent the O-ring groove from being damaged.

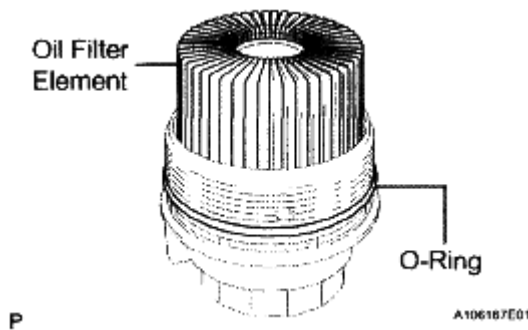
**Fig. 166: Removing Oil Filter Element And O-Ring From Oil Filter Cap**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 12. REMOVE CRANKSHAFT PULLEY

- a. Using SST, loosen the crankshaft pulley bolt.


**SST 09213-70011 (09213-70020), 09330-00021**

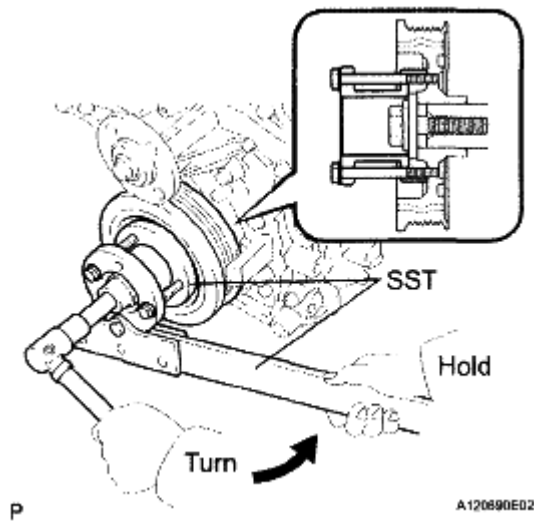**Fig. 167: Loosening Crankshaft Pulley Bolt**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Using SST, remove the crankshaft pulley bolt and crankshaft pulley.


SST 09950-50013 (09951 -05010, 09952-05010, 09953-05020, 09954-05021)

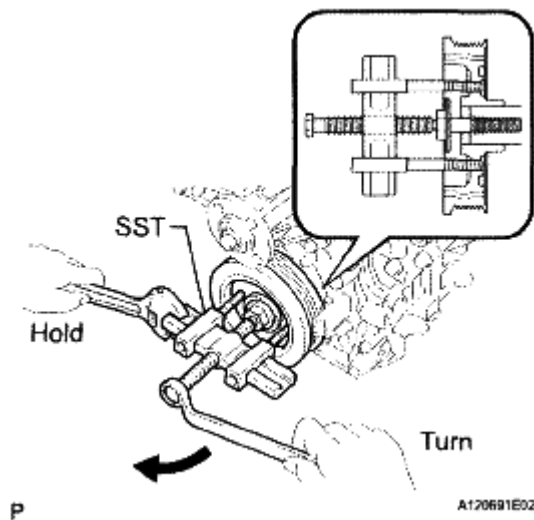**Fig. 168: Removing Crankshaft Pulley**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### 13. REMOVE FRONT ENGINE MOUNTING BRACKET NO. 1 LH


- Remove the 6 bolts and engine mounting bracket.
- Using "Torx" socket wrench E8, remove the 2 stud bolts.

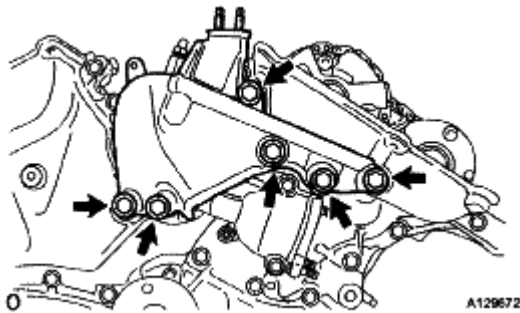

**Fig. 169: Locating Engine Mounting Bracket Front**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


#### 14. REMOVE WATER INLET HOUSING

- a. Remove the 2 nuts, water inlet and thermostat.

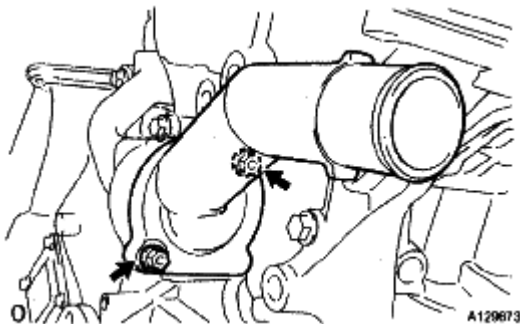


**Fig. 170: Installing Water Inlet With Nuts**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Remove the gasket.
- c. Remove the housing plug.
- d. Remove the housing drain cock.
- e. Remove the 2 stud bolts.
- f. Separate the water by-pass hose No. 1.
- g. Remove the 2 bolts, nut, and water inlet housing.

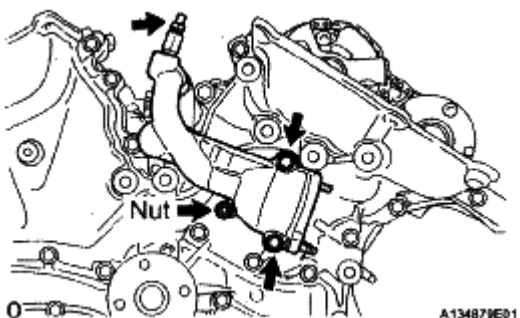

**Fig. 171: Removing Bolts, Nut, And Water Inlet Housing**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


- h. Remove the 2 O-rings.

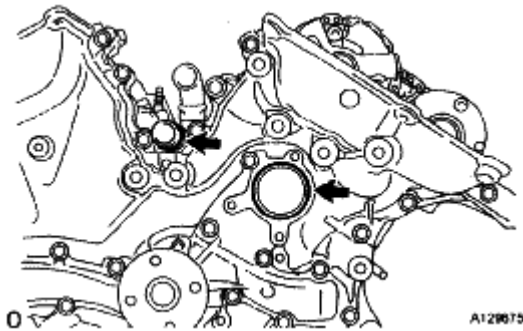

**Fig. 172: Installing O-Rings**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


#### 15. REMOVE WATER OUTLET

- a. Remove the 2 bolts, 4 nuts and water outlet.

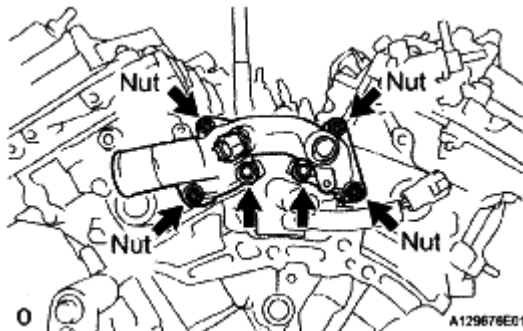

**Fig. 173: Removing Bolts, Nuts And Water Outlet**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Remove the 2 gaskets and O-ring.

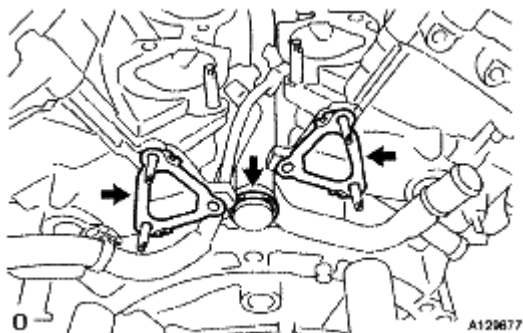


**Fig. 174: Installing Gaskets And O-Ring**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


**16. REMOVE CYLINDER HEAD COVER SUB-ASSEMBLY (for Bank 1)**

- a. Remove the 12 bolts, seal washer, head cover and gasket.

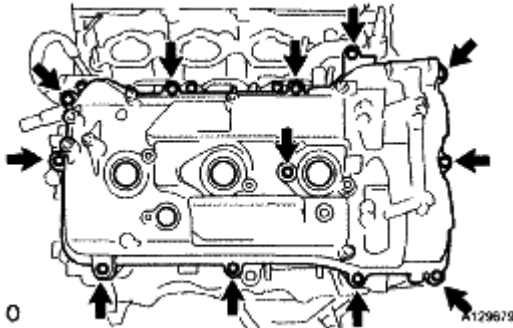**Fig. 175: Removing Bolts, Head Cover And Gasket**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Remove the 3 gaskets.

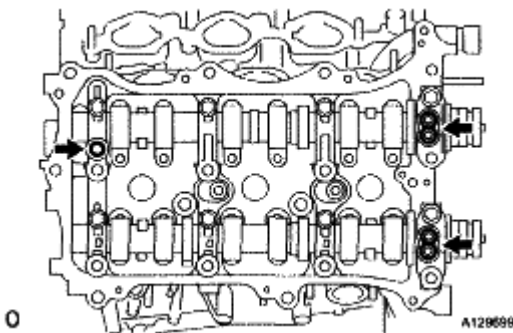**Fig. 176: Identifying Gaskets**


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**17. REMOVE CYLINDER HEAD COVER SUB-ASSEMBLY (for Bank 2)**

- a. Remove the 12 bolts, seal washer, head cover and gasket.


**NOTE:** The baffle plate is located on the back of the portion shown in the illustration. Do not damage the baffle plate when removing the head cover.



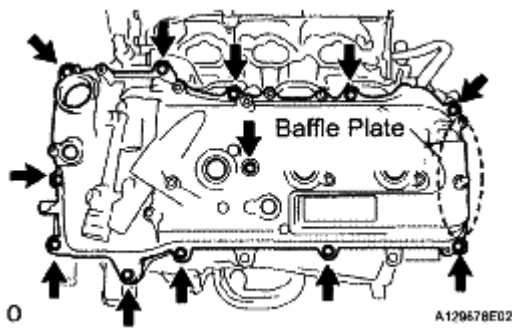

**Fig. 177: Removing Bolts, Seal Washer, Head Cover And Gasket**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


- b. Remove the 3 gaskets.

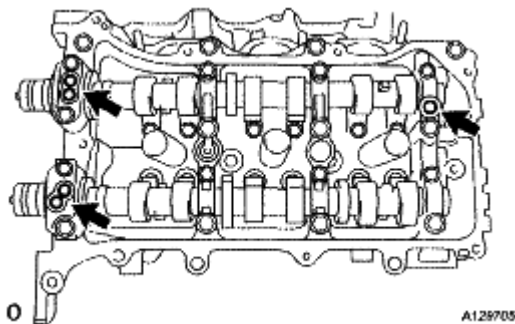

**Fig. 178: Identifying Gaskets**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 18. REMOVE NO. 2 OIL PAN SUB-ASSEMBLY

- a. Remove the 16 bolts and 2 nuts.

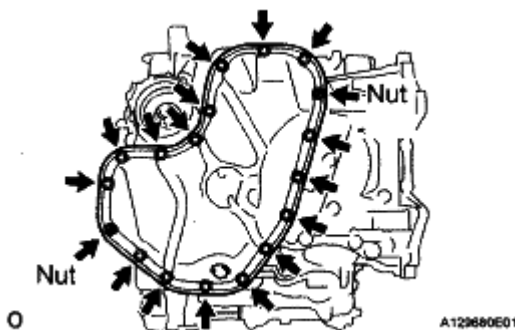


**Fig. 179: Installing Oil Pan With Bolts And Nuts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Insert the blade of SST between the oil pans. Cut through the applied sealer and remove the No. 2 oil pan sub-assembly.


**SST 09032-00100**

**NOTE:** Be careful not to damage the contact surfaces of the oil pans.

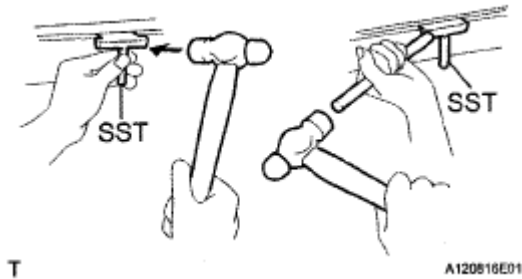

**Fig. 180: Inserting Blade Of SST Between Oil Pans**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Using "Torx" socket wrench E6, remove the 2 stud bolts.
19. **REMOVE OIL STRAINER SUB-ASSEMBLY**
- a. Remove the bolt, 2 nuts, oil strainer and gasket.
  - b. Using "Torx" socket wrench E6, remove the 2 stud bolts.

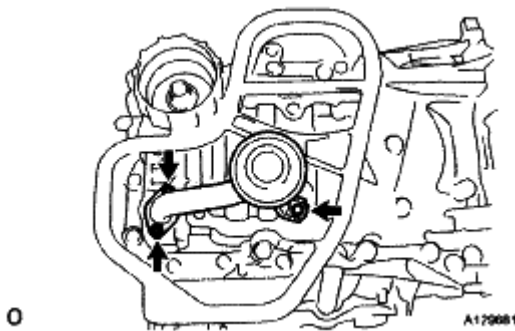


**Fig. 181: Installing Oil Strainer With Bolt And Nuts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

20. **REMOVE OIL PAN SUB-ASSEMBLY**
- a. Remove the 16 bolts and 2 nuts.

**HINT:**

Be sure to clean the bolts and stud bolts and check the threads for cracks or other damage.

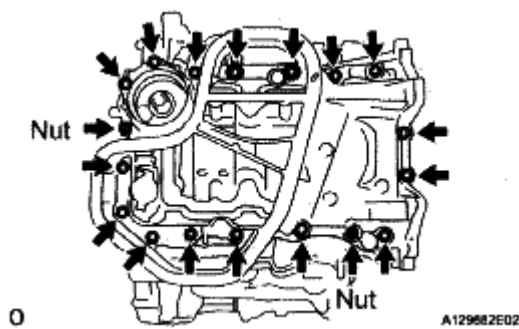


**Fig. 182: Removing Oil Pan Sub-Assembly Bolts And Nuts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Remove the oil pan by prying between the oil pan and cylinder block with a screwdriver.

**NOTE:** Be careful not to damage the contact surfaces of the cylinder block and oil pan.


**HINT:**

Tape the screwdriver tip before use.

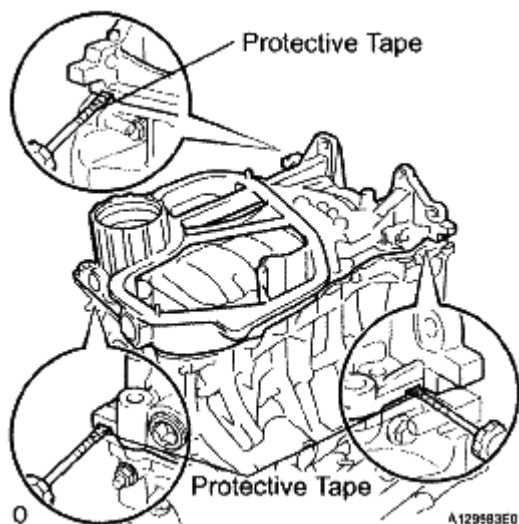

**Fig. 183: Prying Oil Pan And Cylinder Block With Screwdriver**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Remove the 2 O-rings.

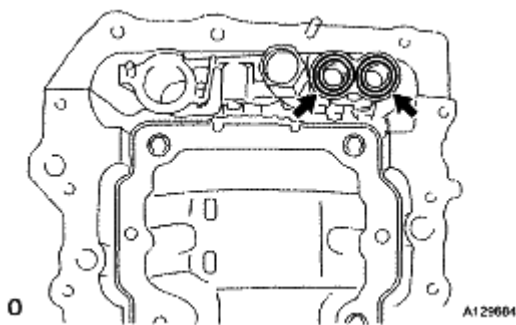
**Fig. 184: Identifying O-Rings**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Using "Torx" socket wrench E8, remove the 2 stud bolts.

#### **21. REMOVE OIL PAN BAFFLE PLATE**


- a. Remove the 7 bolts and baffle plate.

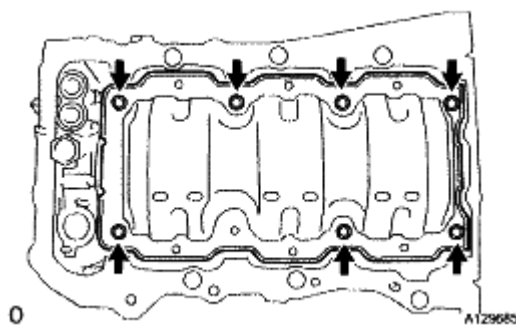**Fig. 185: Locating Oil Pan Baffle Plate**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

#### **22. REMOVE ENGINE REAR OIL SEAL RETAINER**

- a. Remove the 6 bolts.

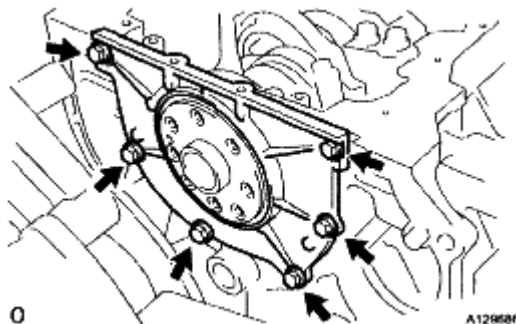**Fig. 186: Removing Bolts**


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Using a screwdriver, pry out the oil seal retainer.

**NOTE:** Be careful not to damage the engine rear oil seal retainer.

**HINT:**

Tape the screwdriver tip before use.

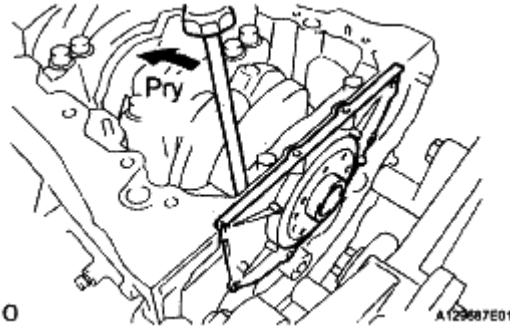

**Fig. 187: Prying Out Oil Seal Retainer**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 23. REMOVE ENGINE REAR OIL SEAL


- a. Place the oil seal retainer on wooden blocks.

**NOTE:** Be careful not to damage the engine rear oil seal retainer.

- b. Using a screwdriver and a hammer, tap out the oil seal.

**HINT:**

Tape the screwdriver tip before use.

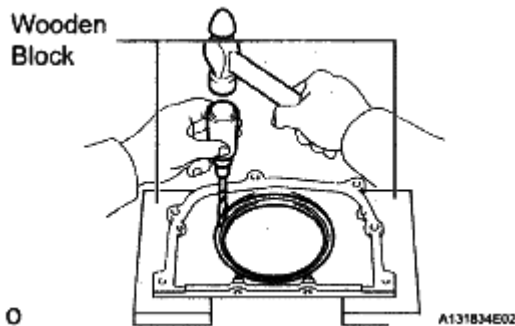


**Fig. 188: Tapping Out Oil Seal**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 24. REMOVE WATER PUMP ASSEMBLY


- a. Remove the 16 bolts, water pump and gasket.

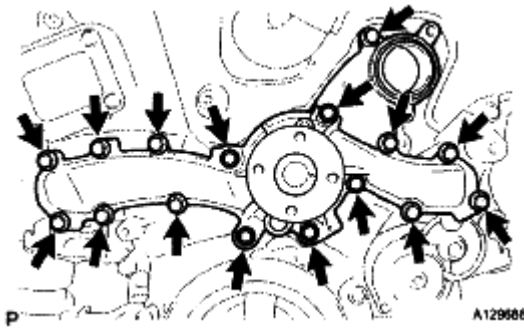

**Fig. 189: Removing Bolts, Water Pump And Gasket**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**25. REMOVE TIMING CHAIN COVER SUB-ASSEMBLY**

- a. Remove the 15 bolts and 2 nuts as shown in the illustration.

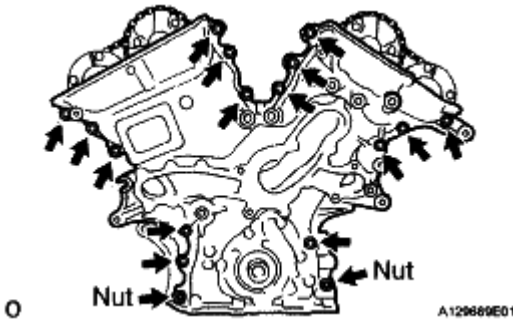

**Fig. 190: Removing Bolts And Nuts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


- b. Remove the timing chain cover by prying between the timing chain cover and cylinder head or cylinder block with a screwdriver.

**NOTE:** Be careful not to damage the contact surfaces of the cylinder head, cylinder block and chain cover.

**HINT:**


Tape the screwdriver tip before use.

- c. Remove the 4 bolts, chain cover plate and gasket.

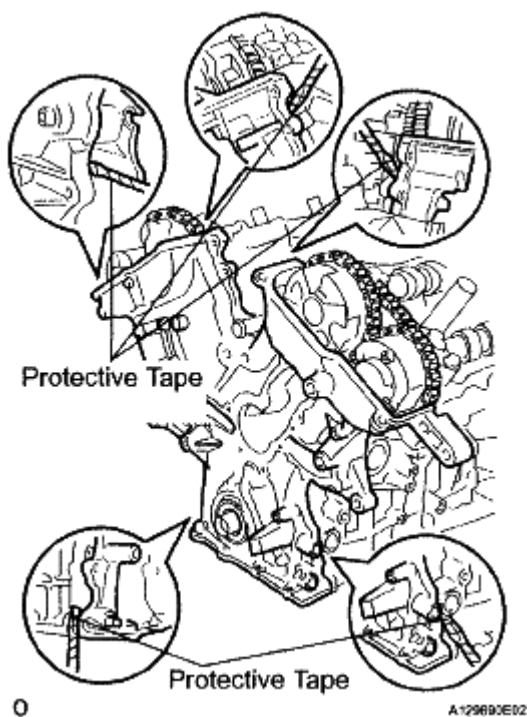

**Fig. 191: Removing Bolts, Chain Cover Plate And Gasket**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


- d. Remove the gasket.

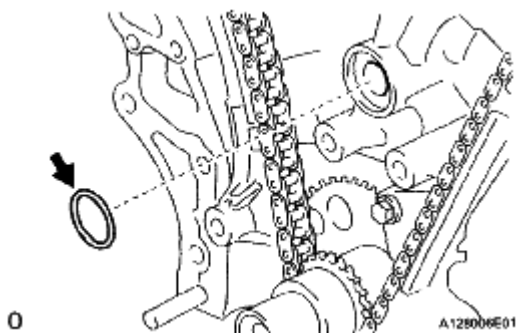

**Fig. 192: Removing Gasket**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 26. REMOVE TIMING CHAIN CASE OIL SEAL

- a. Using a screwdriver, pry out the oil seal.

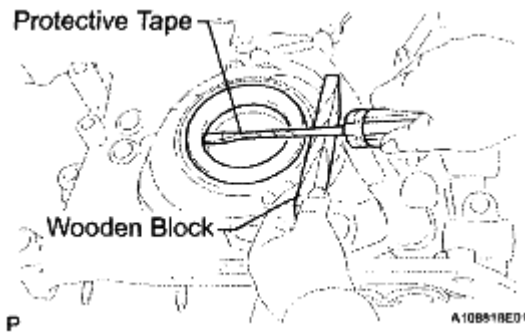

**Fig. 193: Prying Out Oil Seal Using Screwdriver**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


HINT:

Tape the screwdriver tip before use.

## 27. SET NO. 1 CYLINDER TO TDC / COMPRESSION

**CAUTION:** For additional information on timing chain/gear removal guidelines, installation and camshaft timing gear alignment, see 2GR-FE VALVE TIMING PROCEDURE .

- Temporarily tighten the pulley set bolt.
- Set the timing mark on the crank angle sensor plate to the RH block bore center line (TDC / compression).

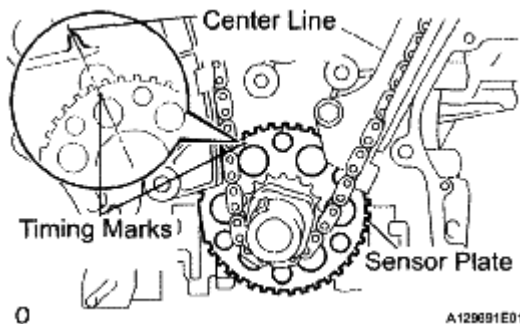


**Fig. 194: Identifying Timing Mark On Crank Angle Sensor Plate To RH Block Bore Center Line**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- Check that the timing marks of the camshaft timing gears are aligned with the timing marks of the bearing cap as shown in the illustration. If not, turn the crankshaft 1 revolution (360°) and align the timing marks as above.




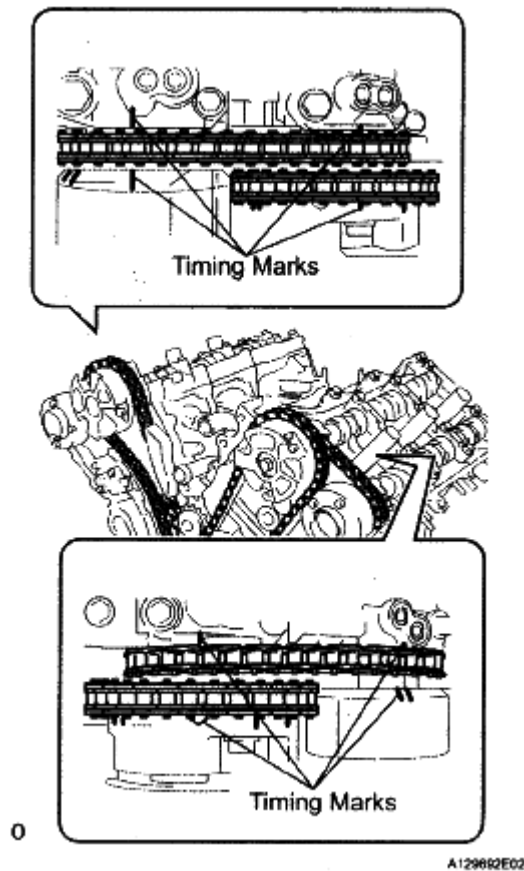

**Fig. 195: Identifying Bearing Cap Timing Marks**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


**28. REMOVE NO. 1 CHAIN TENSIONER ASSEMBLY**

- a. Move the stopper plate upward to release the lock, and push the plunger deep into the tensioner.

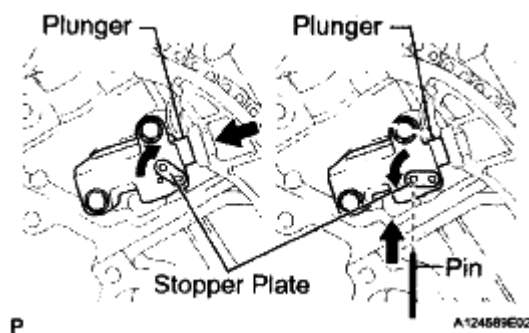

**Fig. 196: Removing No.1 Chain Tensioner Assembly**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Move the stopper plate downward to set the lock, and insert a pin of  $\varnothing 1.27$  mm (0.05 in.) into the stopper plate's hole.
- c. Remove the 2 bolts and chain tensioner.

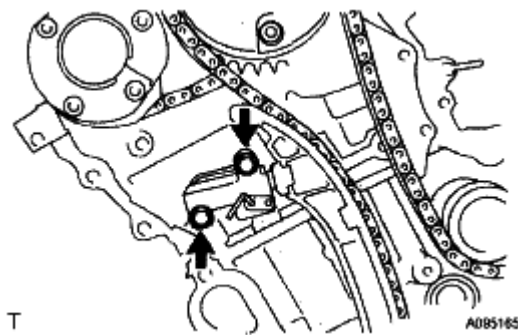


**Fig. 197: Identifying Chain Tensioner With Bolts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**29. REMOVE CHAIN TENSIONER SLIPPER**

- a. Remove the chain tensioner slipper.


**30. REMOVE CHAIN SUB-ASSEMBLY**

- a. Turn the crankshaft counterclockwise 10° to loosen the chain of the crankshaft timing sprocket.
- b. Remove the pulley set bolt.

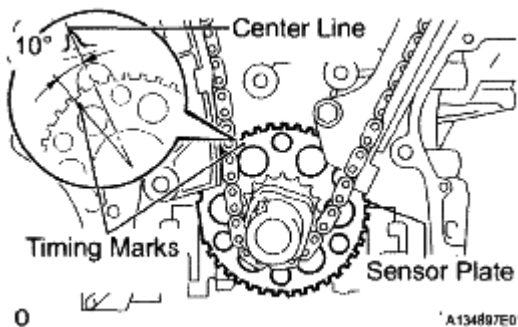

**Fig. 198: Identifying Crankshaft Timing Sprocket Position**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


- c. Remove the chain from the crankshaft timing sprocket and place it on the crankshaft.

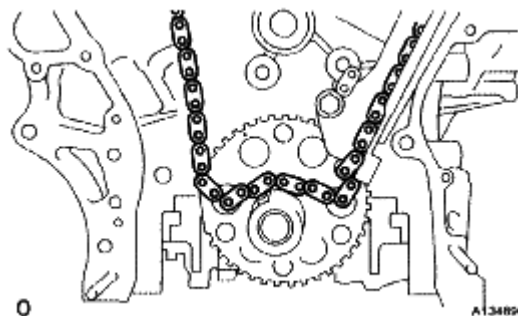

**Fig. 199: Removing Chain From Crankshaft Timing Sprocket**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Turn the camshaft timing gear assembly on the RH bank clockwise (approximately 60°) and set it as shown in the illustration. Be sure to loosen the chain between the banks.

**RH Bank:**

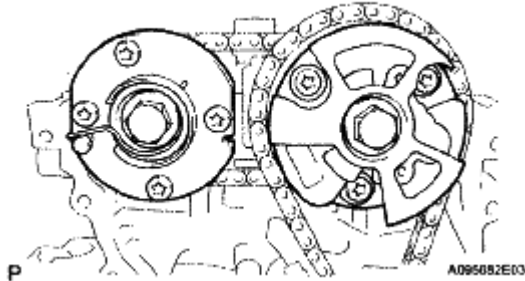


**Fig. 200: Camshaft Timing Gear Setting Position**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- e. Remove the chain.

### **31. REMOVE IDLE SPROCKET ASSEMBLY**


- a. Using a 10 mm hexagon wrench, remove the No. 2 idle gear shaft, sprocket and No. 1 idle gear shaft.

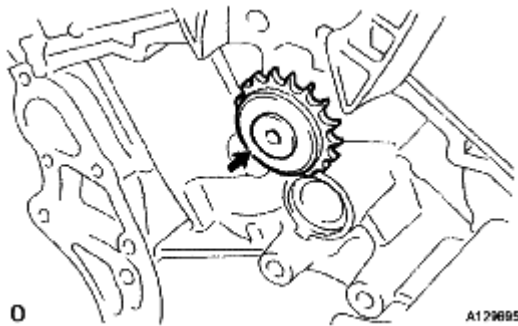

**Fig. 201: Removing Idle Gear Shaft No. 2, Idle Sprocket And Idle Gear Shaft**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### **32. REMOVE NO. 1 CHAIN VIBRATION DAMPER**

- a. Remove the 2 bolts and vibration damper.

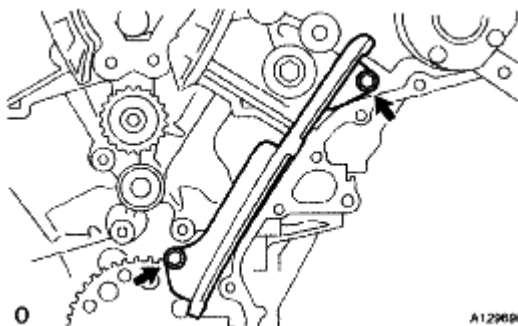


**Fig. 202: Locating Chain Vibration Damper With Bolts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**33. REMOVE NO. 2 CHAIN VIBRATION DAMPER**

- a. Remove the 2 vibration dampers.

**34. REMOVE CRANKSHAFT TIMING SPROCKET**


- a. Remove the crankshaft timing sprocket from the crankshaft.
- b. Remove the 2 pulley set keys from the crankshaft.

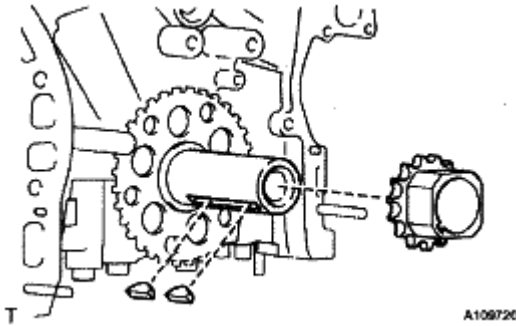

**Fig. 203: Identifying Crankshaft Timing Sprocket**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**35. REMOVE CAMSHAFT TIMING GEARS AND NO. 2 CHAIN (for Bank 1)**

- a. While raising the No. 2 chain tensioner, insert a pin of  $\varnothing$  1.0 mm (0.039 in.) into the hole to fix the No. 2 chain tensioner.

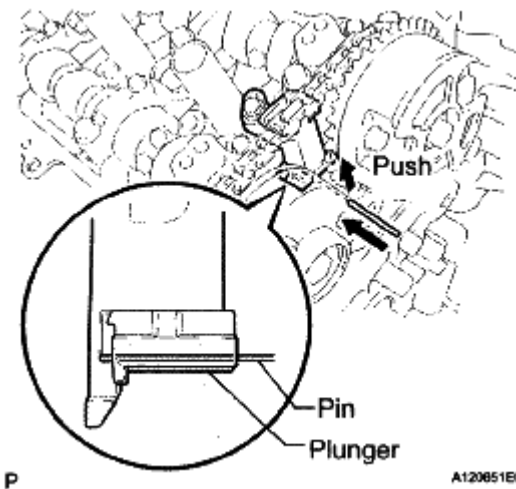


**Fig. 204: Inserting Pin Into Hole For Fixing No. 2 Chain Tensioner**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Hold the hexagonal portion of the camshaft with a wrench, and remove the 2 bolts and 2 camshaft timing gear assemblies.

**NOTE:**

- Be careful not to damage the cylinder head with the wrench.
- Do not disassemble the camshaft timing gear assemblies.

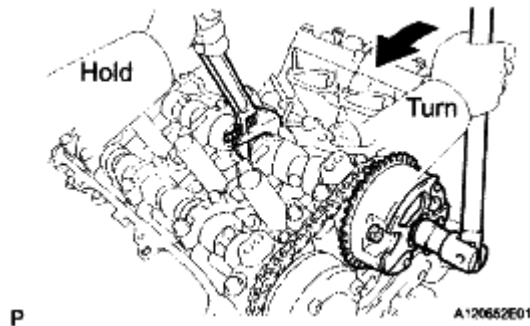


**Fig. 205: Removing Camshaft Timing Gear Assemblies**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Remove the No. 2 chain.

**36. REMOVE NO. 2 CHAIN TENSIONER ASSEMBLY**


- a. Remove the bolt and No. 2 chain tensioner.

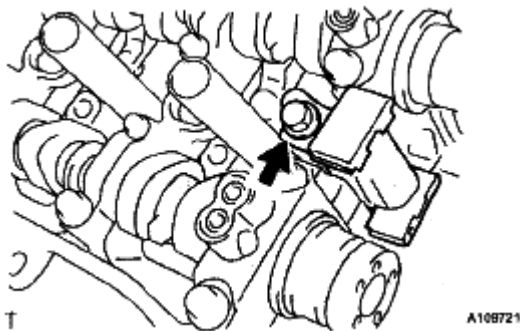

**Fig. 206: Locating No.2 Chain Tensioner Bolt**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**37. REMOVE CAMSHAFT BEARING CAP (for Bank 1)**


- a. Check that the camshafts are positioned as shown in the illustration.

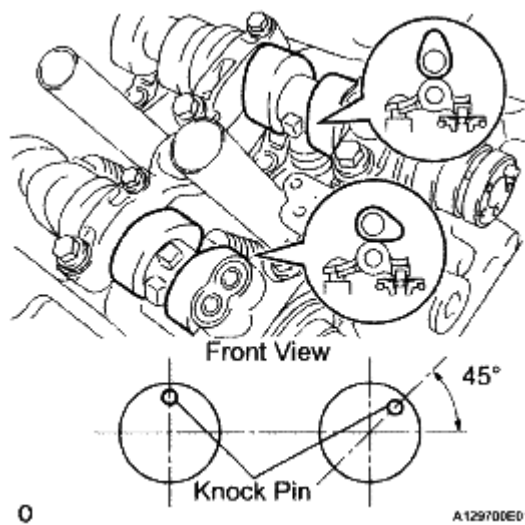

**Fig. 207: Identifying Knock Pin Of Camshaft**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Uniformly loosen and remove the 8 bearing cap bolts in the sequence shown in the illustration.

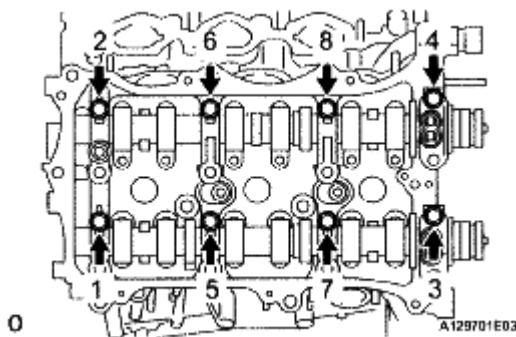


**Fig. 208: Locating Bearing Cap Bolts Loosening Sequence**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Uniformly loosen and remove the 12 bearing cap bolts in the sequence shown in the illustration.

**NOTE:** Uniformly loosen the bolts while keeping the camshaft level.

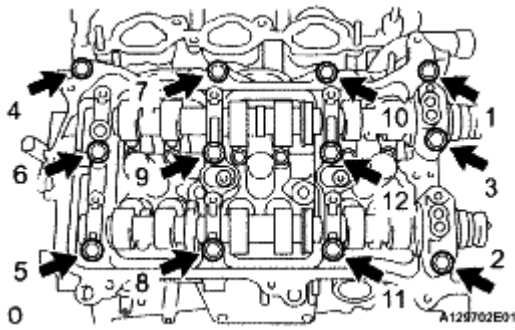


**Fig. 209: Removing Bearing Cap Bolts In Sequence**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Remove the 5 bearing caps.
- 38. **REMOVE CAMSHAFT**
  - a. Remove the camshaft.
- 39. **REMOVE NO. 2 CAMSHAFT**
  - a. Remove the No. 2 camshaft.
- 40. **REMOVE CAMSHAFT HOUSING SUB-ASSEMBLY RH**
  - a. Remove the camshaft housing sub-assembly RH by prying between the cylinder head and camshaft housing sub-assembly RH with a screwdriver.

**NOTE:** Be careful not to damage the contact surfaces of the cylinder head and camshaft housing.

**HINT:**

Tape the screwdriver tip before use.

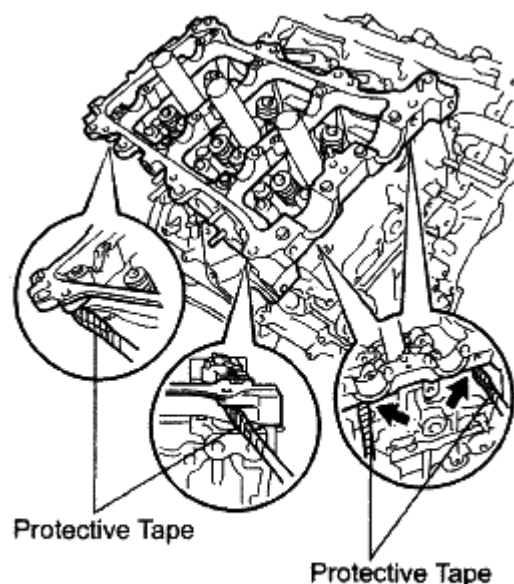

O


A129703E01

**Fig. 210: Taping Screwdriver Tip**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**41. REMOVE CAMSHAFT TIMING GEARS AND NO. 2 CHAIN (for Bank 2)**

- a. While pushing down the No. 3 chain tensioner, insert a pin of  $\varnothing$  1.0 mm (0.039 in.) into the hole to fix the No. 3 chain tensioner.

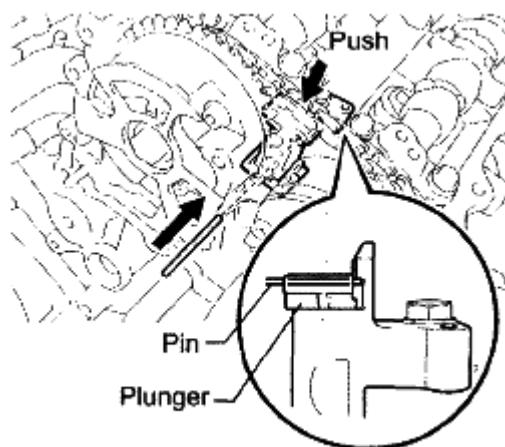

P

A120657E01

**Fig. 211: Inserting Pin Into Hole For Fixing No. 3 Chain Tensioner**


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Hold the hexagonal portion of the camshaft with a wrench, and remove the 2 bolts and 2 camshaft timing gear assemblies.



**NOTE:**

- Be careful not to damage the cylinder head with the wrench.
- Do not disassemble the camshaft timing gear assemblies.

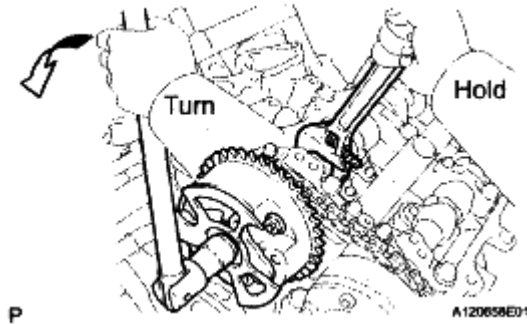


**Fig. 212: Removing Bolts And Camshaft Timing Gear Assemblies**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

c. Remove the No. 2 chain.

**42. REMOVE NO. 3 CHAIN TENSIONER ASSEMBLY**


a. Remove the bolt and No. 3 chain tensioner.

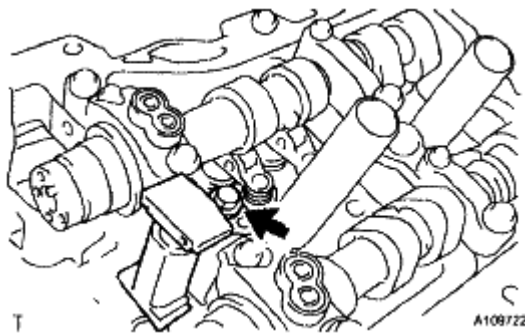

**Fig. 213: Identifying No. 3 Chain Tensioner Bolt**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


**43. REMOVE CAMSHAFT BEARING CAP (for Bank 2)**

a. Check that the camshafts are positioned as shown in the illustration.

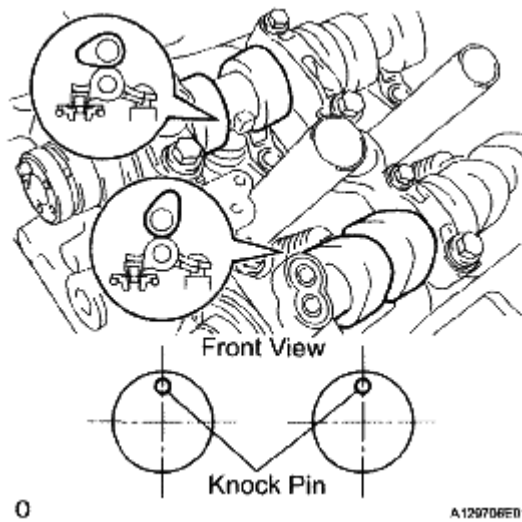

**Fig. 214: Removing Knock Pin Of Camshaft**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


- b. Uniformly loosen and remove the 8 bearing cap bolts in the sequence shown in the illustration.

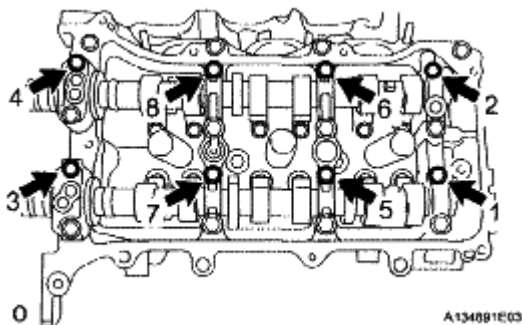

**Fig. 215: Locating Bearing Cap Bolts Loosening Sequence**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Uniformly loosen and remove the 13 bearing cap bolts in the sequence shown in the illustration.

**NOTE:**

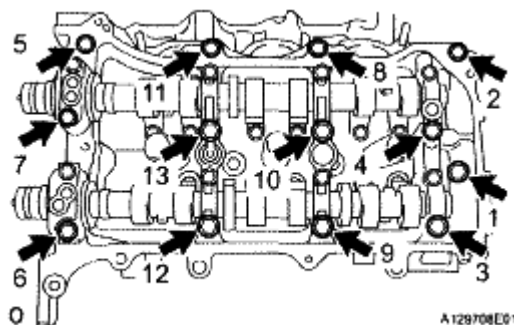

**Fig. 216: Locating Bearing Cap Bolts In Sequence**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**Uniformly loosen the bolts while keeping the camshaft level.**

- d. Remove the 5 bearing caps.

**44. REMOVE NO. 3 CAMSHAFT**

- a. Remove the No. 3 camshaft.

**45. REMOVE NO. 4 CAMSHAFT**

- a. Remove the No. 4 camshaft.


**46. REMOVE CAMSHAFT HOUSING SUB-ASSEMBLY LH**

- a. Remove the camshaft housing by prying between the cylinder head and camshaft housing with a screwdriver.

**NOTE:** Be careful not to damage the contact surfaces of the cylinder head and camshaft housing.

**HINT:**

Tape the screwdriver tip before use.

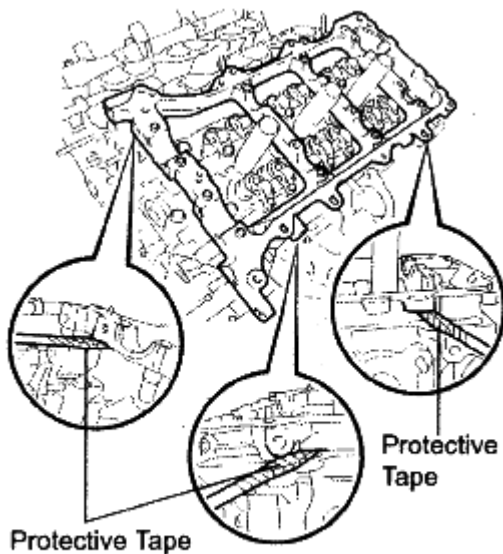

P

A129709E01

**Fig. 217: Taping Screwdriver Tip**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**47. REMOVE NO. 1 VALVE ROCKER ARM SUB-ASSEMBLY**

- a. Remove the 24 valve rocker arms.

**HINT:**

Arrange the removed parts in the correct order.

**48. REMOVE VALVE LASH ADJUSTER ASSEMBLY**


- a. Remove the 24 valve lash adjusters from the cylinder head.

HINT:

Arrange the removed parts in the correct order.

**49. REMOVE CYLINDER HEAD SUB-ASSEMBLY RH**

- a. Using a 10 mm bi-hexagon wrench, uniformly loosen the 8 bolts in the sequence shown in the illustration. Remove the 8 cylinder head bolts and plate washers.

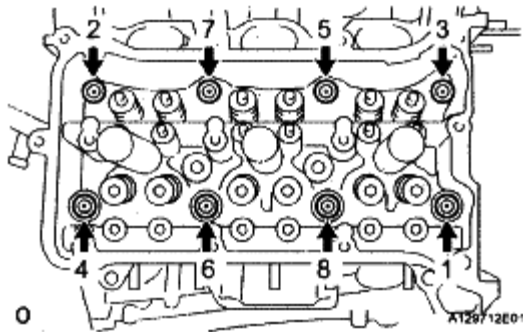

**Fig. 218: Removing Cylinder Head Bolts And Plate Washers**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**NOTE:**

- Be careful not to drop washers into the cylinder head
- Cylinder head warpage or cracking could result from removing bolts in an incorrect order.


HINT:

Be sure to keep separate the removed parts for each installation position.

- b. Remove the cylinder head and gasket.

**50. REMOVE CYLINDER HEAD SUB-ASSEMBLY LH**

- a. Uniformly loosen and remove the bolts in the sequence shown in the illustration.

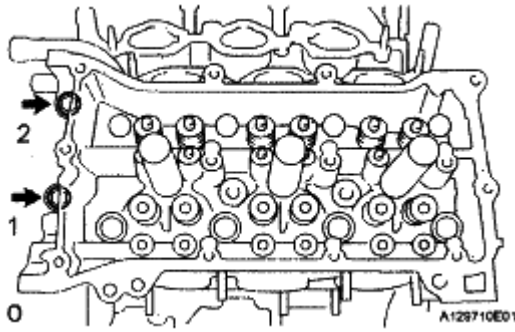

**Fig. 219: Removing Bolts In Sequence**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


- b. Using a 10 mm bi-hexagon wrench, uniformly loosen the 8 bolts in the sequence shown in the illustration. Remove the 8 cylinder head bolts and plate washers.

**NOTE:**

- Be careful not to drop washers into the cylinder head.
- Cylinder head warpage or cracking could result from removing bolts in an incorrect order.

**HINT:**

Be sure to keep separate the removed parts for each installation position.

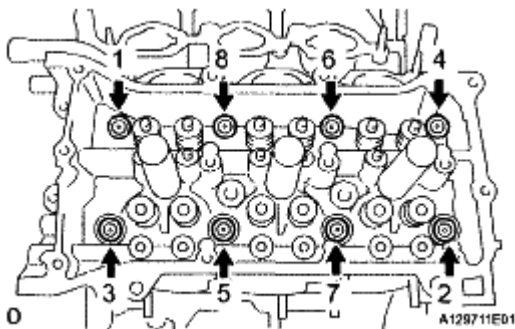


**Fig. 220: Locating Cylinder Head Bolts And Plate Washers**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Remove the cylinder head and gasket.

**51. REMOVE WATER INLET PIPE**

- a. Separate the No. 1 water by-pass hose.
- b. Remove the 2 bolts and water inlet pipe.

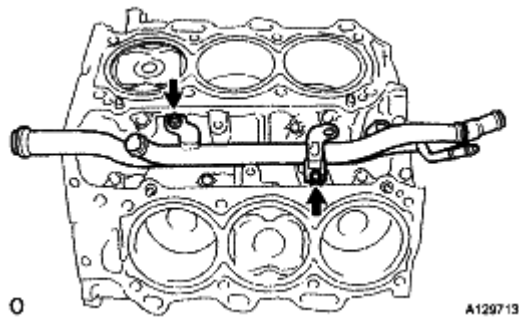

**Fig. 221: Locating Water By-Pass Hose**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**52. REMOVE VALVE STEM CAP**

- a. Remove the valve stem caps from the cylinder heads.


HINT:

Arrange the removed parts in the correct order.

**53. REMOVE INTAKE VALVE**

- a. Using SST, compress the compression spring and remove the valve spring retainer locks.

**SST 09202-70020 (09202-00010)**

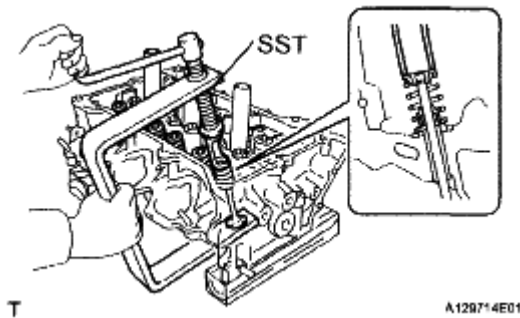

**Fig. 222: Compressing Spring Using SST**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Remove the retainer, compression spring and valve.


HINT:

Arrange the removed parts in the correct order.

**54. REMOVE EXHAUST VALVE**

- a. Using SST, compress the compression spring and remove the valve spring retainer locks.

**SST 09202-70020(09202-00010)**

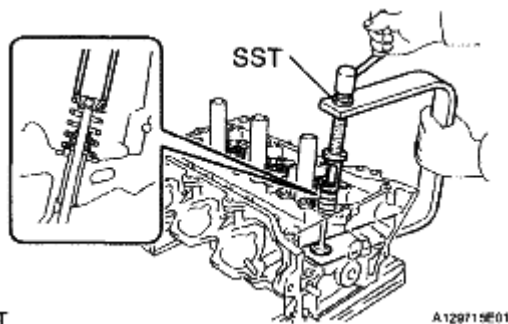

**Fig. 223: Compressing Compression Spring**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


- b. Remove the retainer, compression spring and valve.

HINT:

Arrange the removed parts in the correct order.

#### **55. REMOVE VALVE STEM OIL SEAL**

- a. Using needle-nose pliers, remove the oil seals.

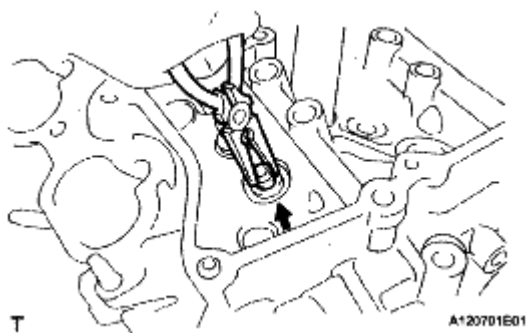


**Fig. 224: Removing Valve Stem Oil Seal Using Needle-Nose Pliers**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

#### **56. REMOVE VALVE SPRING SEAT**

- a. Using compressed air and a magnetic finger, remove the valve spring seats by blowing air onto them.


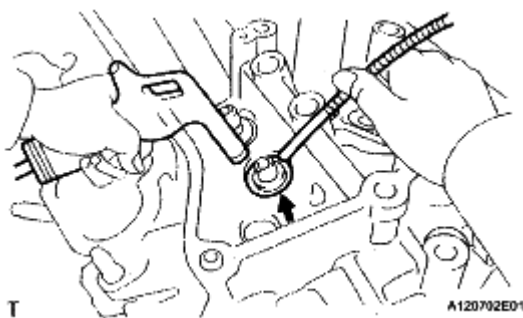
**Fig. 225: Removing Valve Spring Seat**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**57. REMOVE NO. 1 STRAIGHT SCREW PLUG**

- a. Using a 10 mm hexagon wrench, remove the 4 screw plugs and 4 gaskets.

**NOTE:** If water leaks from the straight screw plug or the plug corrodes, replace it.

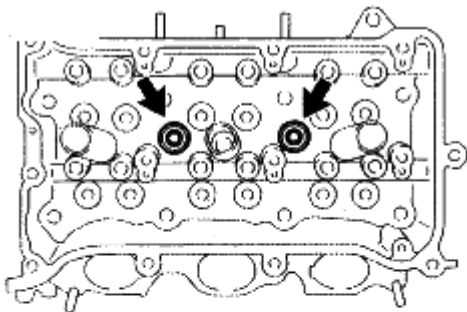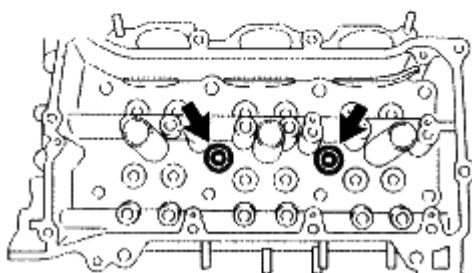**RH Bank:****LH Bank:**

T

A129718E01

**Fig. 226: Identifying No. 1 Straight Screw Plug**



Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**58. REMOVE NO. 2 STRAIGHT SCREW PLUG**

- a. Using a 14 mm hexagon wrench, remove the screw plugs and gaskets.

**NOTE:** If water leaks from the straight screw plug or the plug corrodes, replace it.

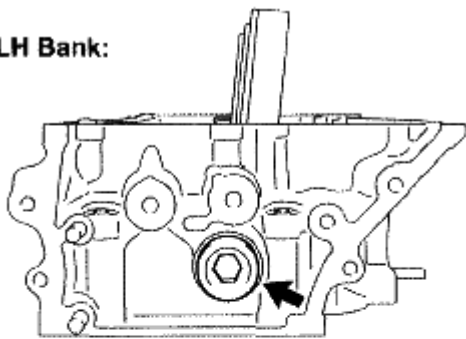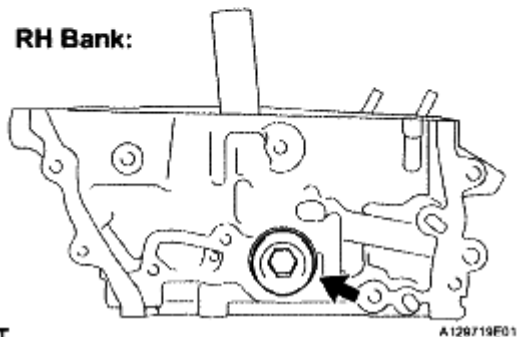

**LH Bank:****RH Bank:**

T


A128719F01

**Fig. 227: Locating Straight Screw Plugs**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**59. REMOVE RING PIN****NOTE:** It is not necessary to remove the ring pin unless it is being replaced.**60. REMOVE STUD BOLT****NOTE:** If the stud bolt is deformed or the threads are damaged, replace it.**61. REMOVE INTAKE VALVE GUIDE BUSH**

- a. Heat the cylinder head to 80 to 100°C (176 to 212°F).
- b. Place the cylinder head on wooden blocks.
- c. Using SST and a hammer, tap out the guide bushes.

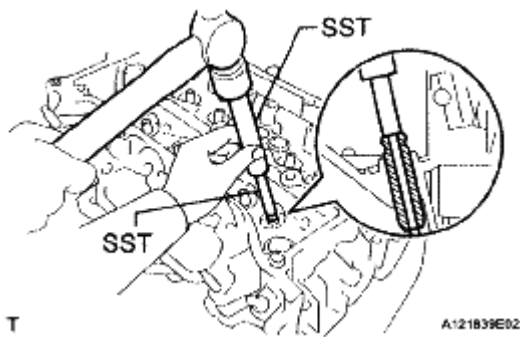

**Fig. 228: Removing Intake Valve Guide Bush**


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**SST 09201-10000 (09201-01050), 09950-70010 (09951-07100)**

**62. REMOVE EXHAUST VALVE GUIDE BUSH**

- a. Heat the cylinder head to 80 to 100°C (176 to 212°F).
- b. Place the cylinder head on wooden blocks.
- c. Using SST and a hammer, tap out the guide bushes.

**SST 09201-10000 (09201-01050), 09950-70010 (09951-07100)**

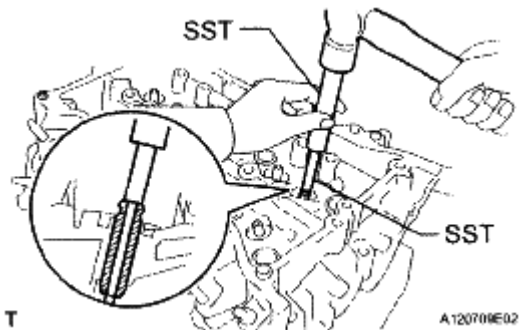

**Fig. 229: Removing Exhaust Valve Guide Bush**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


**63. REMOVE PISTON SUB-ASSEMBLY WITH CONNECTING ROD**

- a. Check that the matchmarks on the connecting rod and cap are aligned.

**HINT:**


The matchmarks on the connecting rods and caps are for ensuring the correct reassembly.

- b. Remove the 2 connecting rod cap bolts.

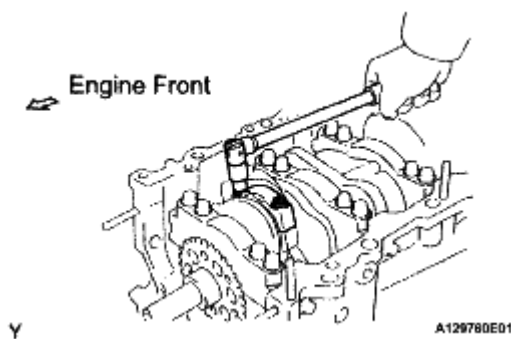**Fig. 230: Removing Connecting Rod Cap Bolts**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Using the 2 removed connecting rod cap bolts, remove the connecting rod cap and lower bearing by wiggling the connecting rod cap right and left.

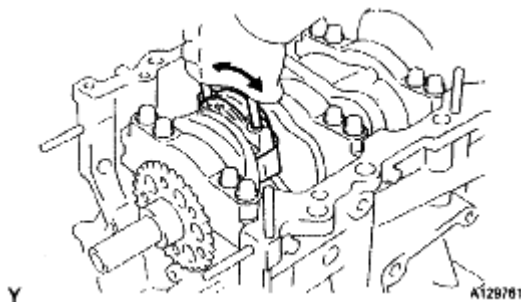
**Fig. 231: Removing Connecting Rod Cap**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

HINT:

Keep the lower bearing inserted to the connecting rod cap.

- d. Using a ridge reamer, remove all the carbon from the top of the cylinder.

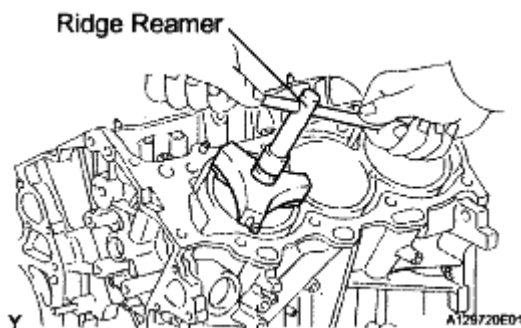**Fig. 232: Removing Carbon From Top Of Cylinder**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- e. Push the piston, connecting rod assembly and upper bearing through the top of the cylinder block.

HINT:


- Keep the bearing, connecting rod and cap together.
- Arrange the piston and connecting rod assemblies in the correct order.

#### 64. REMOVE CONNECTING ROD BEARING

**NOTE:** Arrange the removed parts in the correct order.


#### 65. REMOVE CRANKSHAFT

- a. Uniformly loosen and remove the 8 main bearing cap bolts and seal washers in the several steps and in the sequence shown in the illustration.

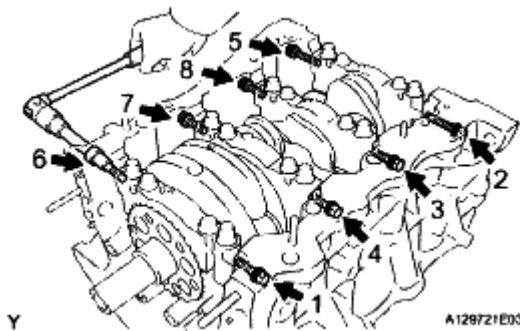

**Fig. 233: Removing Main Bearing Cap Bolts In Sequence**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Uniformly loosen the 16 bearing cap bolts, in several steps and in the sequence shown in the illustration.

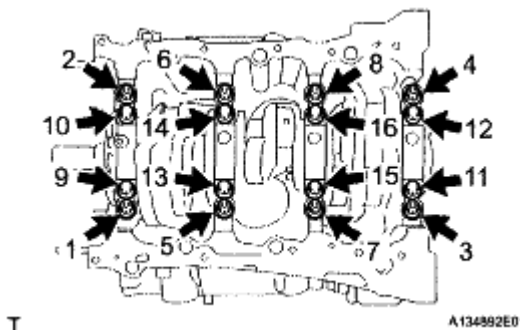


**Fig. 234: Removing Bearing Cap Bolts In Several Steps In Sequence**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Using a screwdriver, pry out the main bearing caps. Remove the 4 main bearing caps and lower bearings.

**NOTE:**

- Push up on the cap little by little, from the right and left side alternately so that the cap can be removed.
- Be careful not to damage the joint surface of the cylinder block and the main bearing cap.

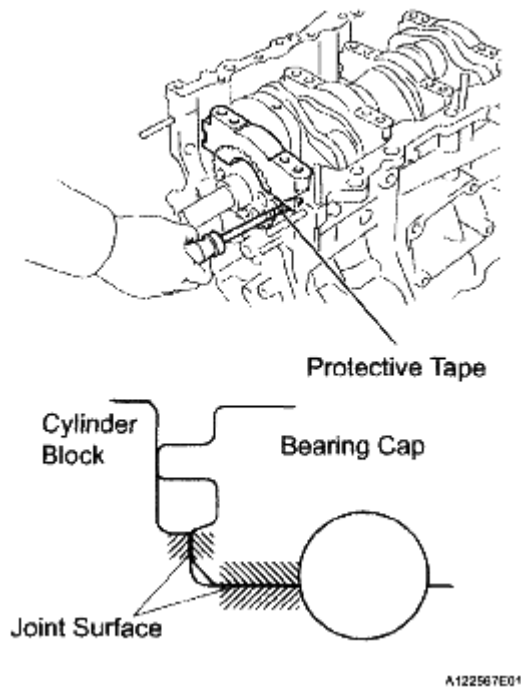

**Fig. 235: Removing Bearing Caps And Lower Bearings**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


d. Remove the crankshaft.

**66. REMOVE CRANKSHAFT BEARING****HINT:**

Arrange the removed parts in the correct order.

**67. REMOVE CRANKSHAFT THRUST WASHER SET**


- a. Remove the upper bearings and upper thrust washers from the cylinder block.

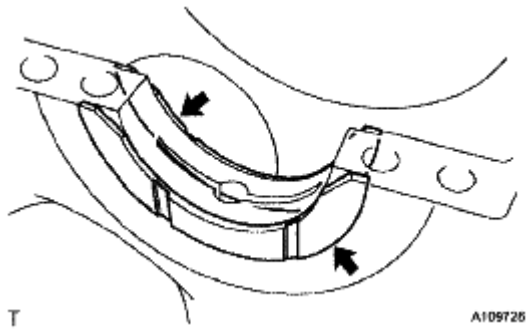

**Fig. 236: Locating Upper Bearings And Upper Thrust Washers**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 68. REMOVE PISTON RING SET

- a. Using a piston ring expander, remove the 2 compression rings.

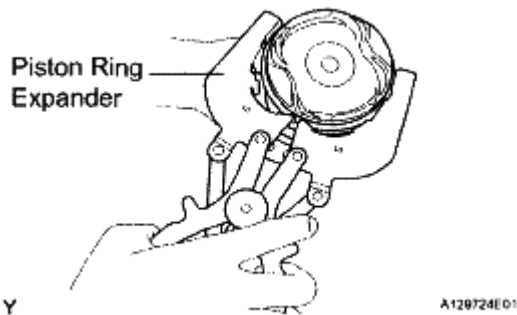

**Fig. 237: Removing Compression Rings**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Remove the oil ring expander and 2 side rails by hand.


HINT:

Arrange the removed parts in the correct order.

## 69. REMOVE PISTON SUB-ASSEMBLY WITH PIN

- a. Check the fitting condition between the piston and piston pin.
  1. Try to move the piston back and forth on the piston pin.

If any movement is felt, replace the piston and pin as a set.

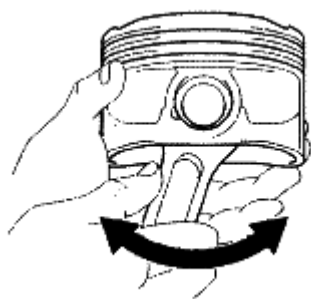


Y

A128726

**Fig. 238: Checking Fitting Condition Between Piston And Piston Pin**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Disconnect the connecting rod from the piston.
  1. Using a screwdriver, pry off the snap rings from the piston.

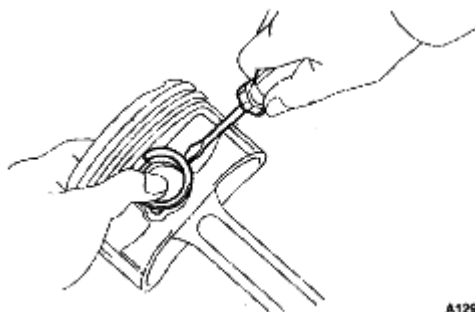


Y

A128728

**Fig. 239: Prying Off Snap Rings From Piston**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

2. Gradually heat the piston to approximately 80°C (176°F).

80°C (176°F)

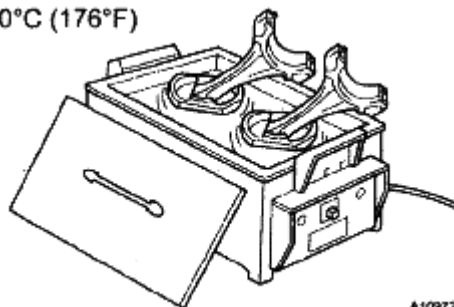


Y

A109728E02

**Fig. 240: Heating Piston**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


3. Using a brass bar and plastic hammer, lightly tap out the piston pin and remove the connecting rod.
    - The piston and pin are a matched set.
    - Arrange the pistons, pins, rings, connecting rods and bearings in the correct order.

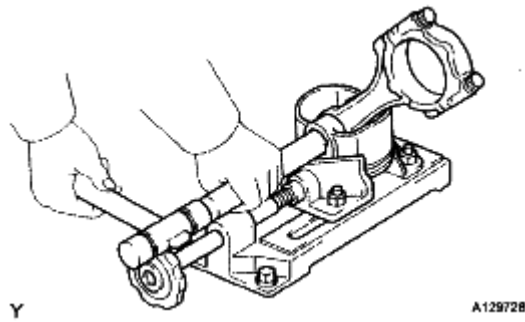

**Fig. 241: Removing Connecting Rod**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


HINT:

- c. Using a gasket scraper, remove the carbon from the piston top.

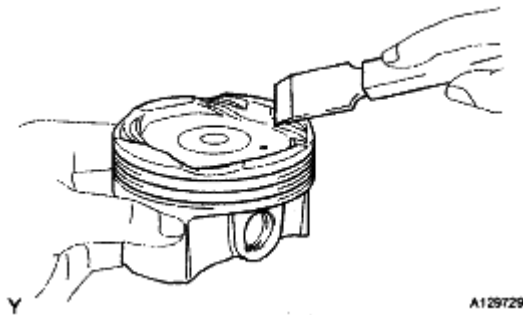

**Fig. 242: Removing Carbon From Piston Top**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Using a groove cleaning tool or broken ring, clean the piston ring grooves.

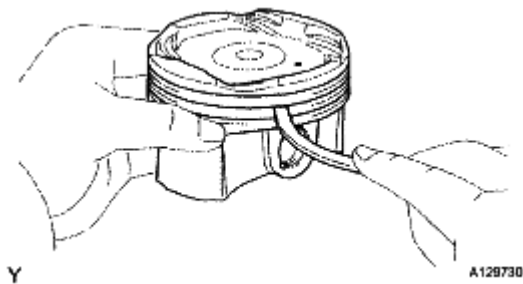


**Fig. 243: Cleaning Piston Ring Grooves**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- e. Using solvent and a brush, thoroughly clean the piston.

**NOTE:**        **Do not use a wire brush.**




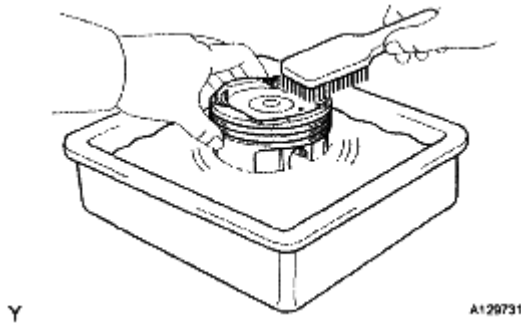

**Fig. 244: Cleaning Piston Using Solvent And Brush**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

#### **70. REMOVE NO. 1 OIL NOZZLE SUB-ASSEMBLY**

- a. Using a 5 mm hexagon wrench, remove the bolts and oil nozzles.
- b. Check the 3 oil nozzles for damage or clogging. If necessary, replace the oil nozzle.

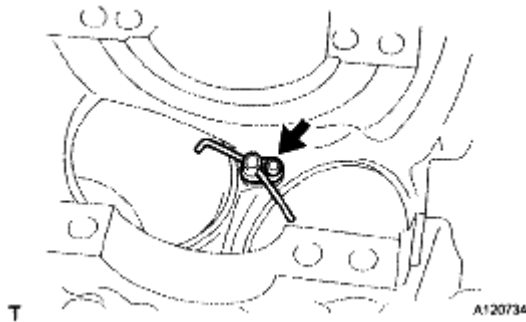

**Fig. 245: Identifying Bolt And Oil Nozzle**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

#### **71. CLEAN CYLINDER BLOCK**


##### **INSPECTION**

##### **1. INSPECT NO. 1 VALVE ROCKER ARM SUB-ASSEMBLY**

- a. Turn the roller by hand to check that it turns smoothly.

##### **HINT:**

If the roller does not turn smoothly, replace the valve rocker arm sub-assembly.

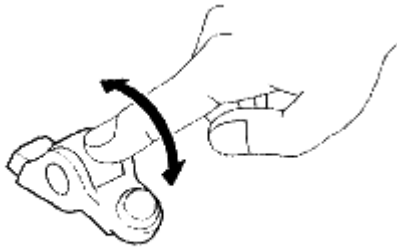

T

A125485

**Fig. 246: Turning Roller By Hand For Checking Smoothly Turns**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 2. INSPECT VALVE LASH ADJUSTER ASSEMBLY


**NOTE:**

- Keep the lash adjuster free of dirt and foreign objects.
- Only use clean engine oil.

- a. Place the lash adjuster into a container filled with engine oil.
- b. Insert the SST's tip into the lash adjuster's plunger and use the tip to press down on the check ball inside the plunger.

**SST 09276-75010**

- c. Squeeze the SST and lash adjuster together to move the plunger up and down 5 to 6 times.
- d. Check the movement of the plunger and bleed the air.

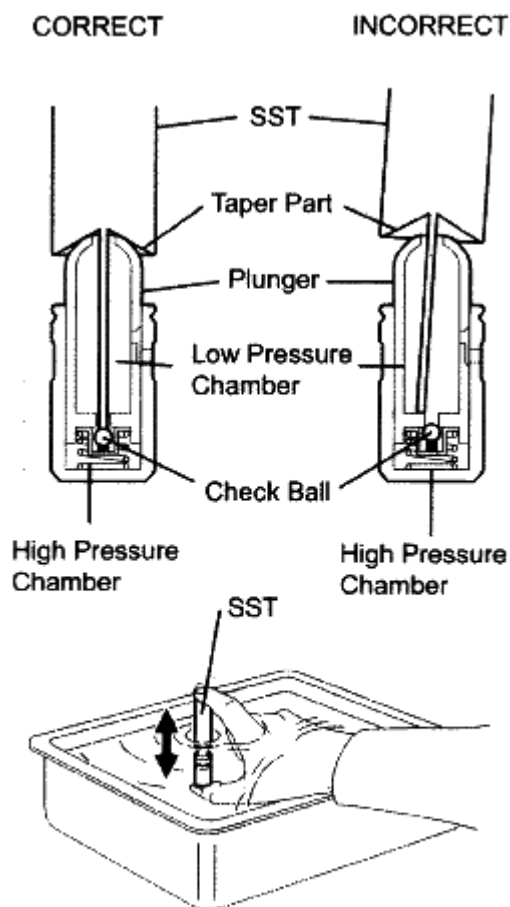

T

A100630ED1

**Fig. 247: Checking Movement Of Plunger And Bleed Air**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**OK: GO TO NEXT STEP**

**Plunger moves up and down.**

**NOTE:** When bleeding air from the high-pressure chamber, make sure that the tip of the SST is actually pressing the check ball as shown in the illustration. If the check ball is not pressed, air will not bleed.

- e. After bleeding the air, remove the SST. Then try to quickly and firmly press the plunger with a finger.


**OK: GO TO NEXT STEP**

**Plunger is very difficult to move.**

If the result is not as specified, replace the lash adjuster.

### 3. INSPECT CAMSHAFT

- a. Inspect the camshaft for runout.
  1. Place the camshaft on V-blocks.
  2. Using a dial indicator, measure the circle runout at the center journal.

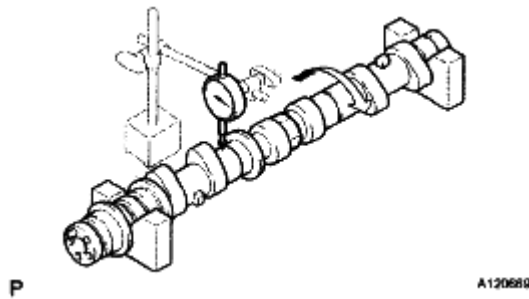

**Fig. 248: Measuring Circle Runout At Center Journal**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**Maximum circle runout:**


**0.04 mm (0.0016 in.)**

If the circle runout is greater than the maximum, replace the camshaft.

HINT:

Check the oil clearance after replacing the camshaft.

- b. Using a micrometer, measure the cam lobe height.

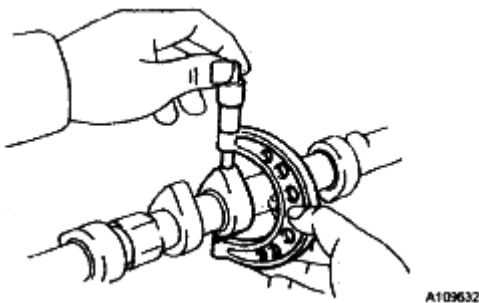

**Fig. 249: Checking Cam Lobe Height**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**Standard cam lobe height**

**STANDARD CAM LOBE HEIGHT**

## 2007 Toyota Camry XLE

2007 ENGINE Engine Mechanical (2GR-FE) - Camry


Item	Specification
Intake camshaft	44.316 to 44.416 mm (1.7447 to 1.7487 in.)
Exhaust camshaft	44.262 to 44.362 mm (1.7426 to 1.7465 in.)

### Maximum cam lobe height

#### MAXIMUM CAM LOBE HEIGHT

Item	Specification
Intake camshaft	44.166 mm (1.7388 in.)
Exhaust camshaft	44.112 mm (1.7367 in.)

- c. Using a micrometer, measure the journal diameter.

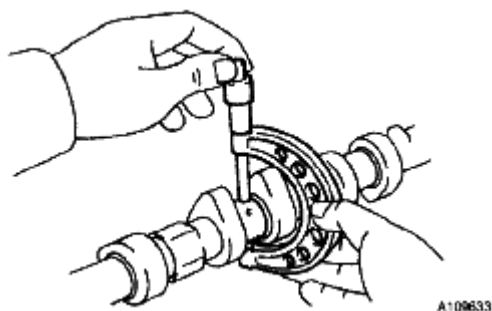

**Fig. 250: Checking Journal Diameter**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### Standard journal diameter

#### STANDARD JOURNAL DIAMETER

Item	Specification
No. 1 journal	35.946 to 35.960 mm (1.4152 to 1.4157 in.)
Other journals	25.959 to 25.975 mm (1.0220 to 1.0226 in.)


If the journal diameter is not as specified, check the oil clearance.

#### 4. INSPECT CAMSHAFT TIMING GEAR ASSEMBLY

- a. Clamp the camshaft in a vise.

**NOTE:** Be careful not to damage the camshaft in the vise.

- b. Put the camshaft timing gear and camshaft together by aligning the key groove and straight pin.

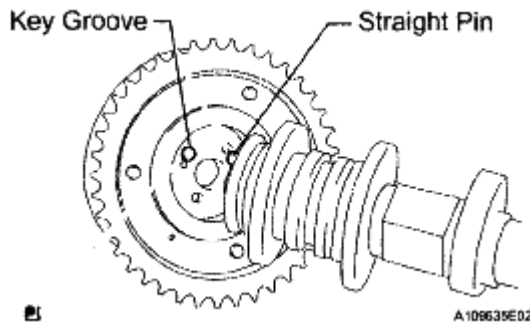

**Fig. 251: Aligning Key Groove And Straight Pin**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Lightly press the gear against the camshaft, and turn the gear. Push further at the position where the pin enters the groove.


**NOTE:** Be sure not to turn the camshaft timing gear in the retard direction (the right angle).

- d. Check that there is no clearance between the gear's flange and the camshaft.
- e. Tighten the flange bolt with the camshaft timing gear fixed.

**Torque: 100 N\*m (1,020 kgf\*cm, 74 ft.\*lbf)**

- f. Check the lock of the camshaft timing gear.
  1. Clamp the camshaft in a vise, and confirm that the camshaft timing gear is locked.

**NOTE:** Be careful not to damage the camshaft.

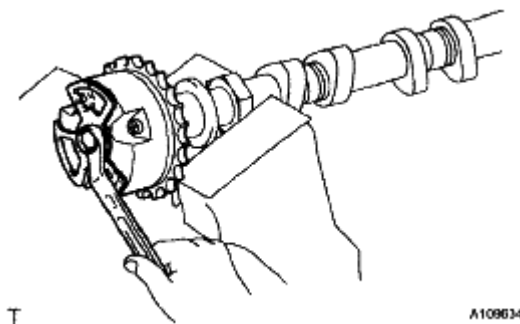


**Fig. 252: Checking Lock Of Camshaft Timing Gear**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- g. Release the lock pin.
  1. Cover the 4 oil paths of the cam journal with vinyl tape as shown in the illustration.

**HINT:**


2 advance side paths are provided in the groove of the camshaft Plug one of the paths with a rubber piece.

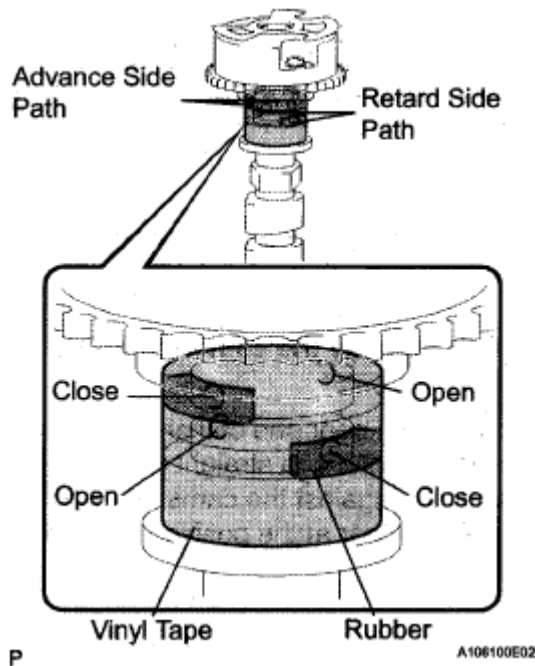

**Fig. 253: Covering Oil Paths Of Cam Journal With Vinyl Tape**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

2. Break through the tape of the advance side path and the retard side path on the opposite side to the hole of the advance side path, as shown in the illustration.
3. Apply approximately 200 kPa (2.0 kgf/cm<sup>2</sup>, 28 psi) of air pressure to the 2 broken paths.

**CAUTION: Cover the paths with a piece of cloth when applying pressure to keep oil from splashing.**

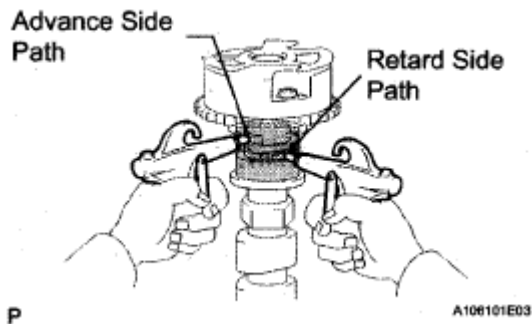


**Fig. 254: Applying Air Pressure To Broken Paths**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

4. Check that the camshaft timing gear revolves in the advance direction when reducing the air

pressure applied to the retard side path.

HINT:

This operation releases the lock pin for the most retarded position.

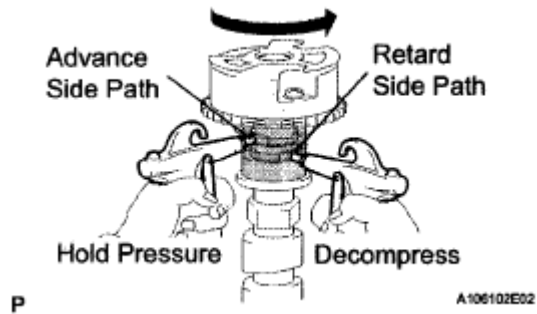

**Fig. 255: Checking Camshaft Timing Gear Revolves In Advance Direction**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

5. When the camshaft timing gear reaches the most advanced position, release the air pressure from the retard side path and advance side path, in that order.

**NOTE:** Do not release the air pressure from the advance side path first. The gear may abruptly shift in the retard direction and break the lock pin.

h. Check for smooth rotation.

1. Turn the camshaft timing gear within its movable range ( $21^{\circ}$ ) 2 or 3 times, but do not turn it to the most retarded position. Make sure that the gear turns smoothly.

**NOTE:** Do not use air pressure to perform the smooth operation check.

i. Check the lock in the most retarded position.


1. Confirm that the camshaft timing gear is locked at the most retarded position.

j. Remove the flange bolt and camshaft timing gear.

**NOTE:**

- Do not remove the other 3 bolts.
- If planning to reuse the gear, be sure to release the straight pin lock before installing the gear.



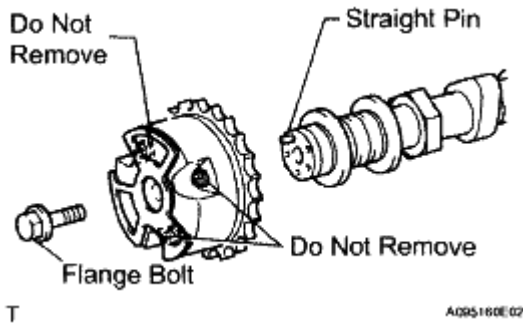


**Fig. 256: Removing Flange Bolt And Camshaft Timing Gear**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 5. INSPECT CAMSHAFT TIMING EXHAUST GEAR ASSEMBLY

- a. Clamp the camshaft in a vise.

**NOTE:** Be careful not to damage the camshaft in the vise.

- b. Put the camshaft timing exhaust gear and camshaft together by aligning the key groove and straight pin.

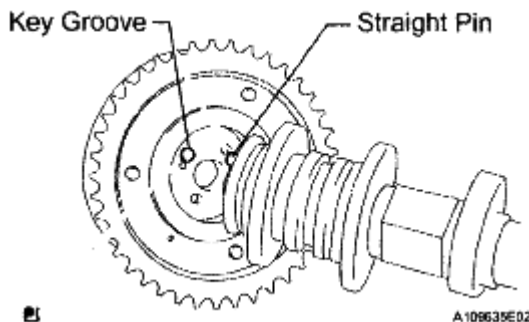


**Fig. 257: Aligning Key Groove And Straight Pin**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Lightly press the gear against the camshaft, and turn the gear. Push further at the position where the pin enters the groove.

**NOTE:** Be sure not to turn the camshaft timing exhaust gear in the retard direction (the right angle).


- d. Check that there is no clearance between the gear's flange and the camshaft.
- e. Tighten the flange bolt with the camshaft timing exhaust gear fixed.

**Torque: 100 N\*m (1,020 kgf\*cm, 74 ft.\*lbf)**

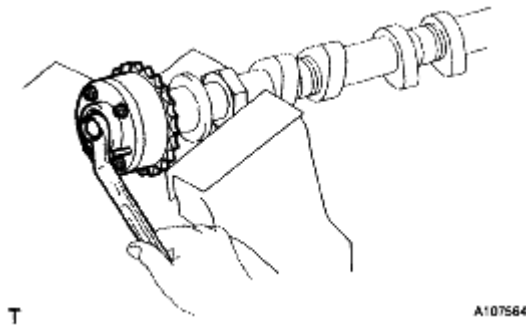

**Fig. 258: Checking Camshaft Timing Exhaust Gear Lock**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- f. Check the camshaft timing exhaust gear lock.
  1. Make sure that the camshaft timing exhaust gear is locked.
- g. Release the lock pin.
  1. Cover the 4 oil paths of the cam journal with vinyl tape as shown in the illustration.

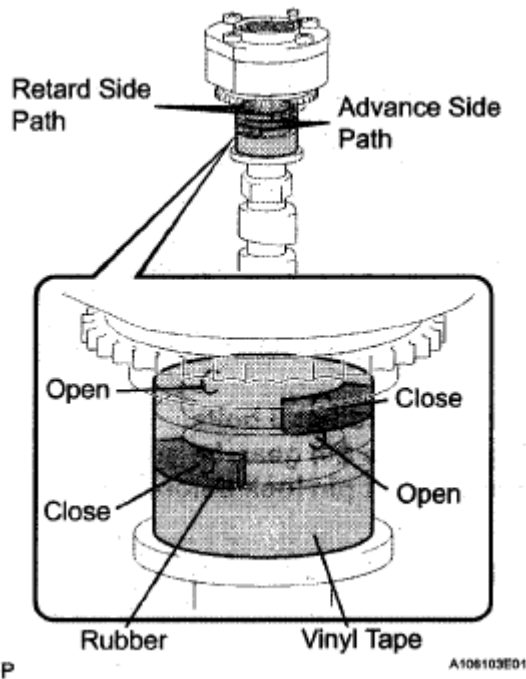

**Fig. 259: Covering Oil Paths Of Cam Journal With Vinyl Tape**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

HINT:


4 oil paths are provided in the groove. Plug 2 paths with rubber pieces.

2. Prick a hole in the tape placed on the advance side path. Prick a hole in the tape placed on the retard side path, on the opposite side to that of the advance side path, as shown in the

illustration.

3. Apply approximately 200 kPa (2.0 kgf/cm<sup>2</sup>, 28 psi) of air pressure to the 2 broken paths (the advance side path and the retard side path).

**CAUTION:** Cover the paths with a piece of cloth when applying pressure to keep oil from splashing.

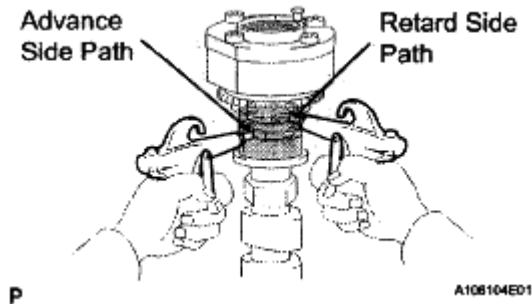


**Fig. 260: Applying Air Pressure To Two Broken Paths**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

4. Make sure that the camshaft timing exhaust gear turns in the retard direction when reducing the air pressure applied to the advance side path.

HINT:

The lock pin is released and the camshaft timing exhaust gear turns in the retard direction.

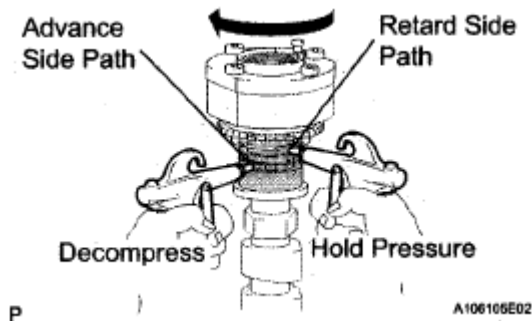

**Fig. 261: Checking Camshaft Timing Exhaust Gear Turns In Retard Direction**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

5. When the camshaft timing exhaust gear moves to the most retarded position, release the air pressure from the advance side path, and then release the air pressure from the retard side path.

**NOTE:** Be sure to release the air pressure from the advance side path first. If the air pressure of the retard side path is released first,

**the camshaft timing exhaust gear may abruptly shift in the advance direction and break the lock pin or other parts.**

h. Check for smooth rotation.

1. Turn the camshaft timing exhaust gear within its movable range ( $18.5^{\circ}$ ) 2 or 3 times, but do not turn it to the most advanced position. Make sure that the gear turns smoothly.

**NOTE:** When the air pressure is released from the advance side path and then from the retard side path, the gear automatically returns to the most advanced position due to the advance assist spring operation and locks. Gradually release the air pressure from the retard side path before performing the smooth rotation check.


i. Check the lock at the most advanced position.

1. Make sure that the camshaft timing exhaust gear is locked at the most advanced position.

j. Remove the flange bolt and camshaft timing exhaust gear.

**NOTE:**

- Be sure not to remove the other 4 bolts.
- If planning to reuse the gear, be sure to release the straight pin lock before installing the gear.

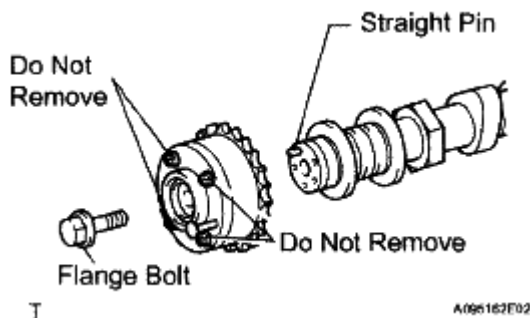

**Fig. 262: Identifying Flange Bolt And Camshaft Timing Exhaust Gear**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 6. INSPECT CYLINDER HEAD SET BOLT

- a. Using vernier calipers, measure the minimum diameter of the elongated thread at the measuring point.

**Standard outside diameter:**

**10.85 to 11.00 mm (0.4272 to 0.4331 in.)**

**Minimum outside diameter:**

10.70 mm (0.4213 in.)


**Measuring Point:**

103 mm (4.06 in.)

**HINT:**

If a visual check reveals no excessively thin areas, check the center of the bolt and find the area that has the lowest diameter.

If the diameter is less than the minimum, replace the cylinder head bolt.

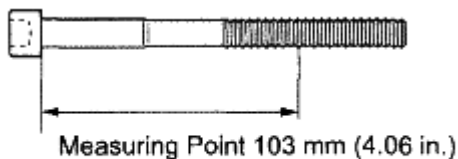

P

A122880E03

**Fig. 263: Identifying Cylinder Head Set Bolt Length**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 7. INSPECT CHAIN SUB-ASSEMBLY


- Pull the chain with a force of 147 N (15 kgf, 33 lbf) as shown in the illustration.
- Using vernier calipers, measure the length of 15 links.

**Maximum chain elongation:**

136.9 mm (5.390 in.)

**NOTE:** Perform the measurement at 3 random places. Use the average of the measurements.

If the elongation is greater than the maximum, replace the chain.

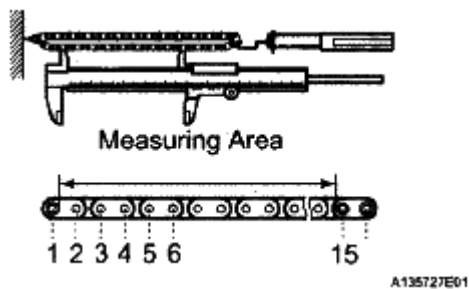

A135727E01

**Fig. 264: Measuring Chain Sub-Assembly**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### 8. INSPECT NO. 2 CHAIN SUB-ASSEMBLY


- Pull the chain with a force of 147 N (15 kgf, 33 lbf) as shown in the illustration.
- Using vernier calipers, measure the length of 15 links.

**Maximum chain elongation:**

**137.6 mm (5.417 in.)**

**NOTE:** Perform the measurement at 3 random places. Use the average of the measurements.

If the elongation is greater than the maximum, replace the chain.

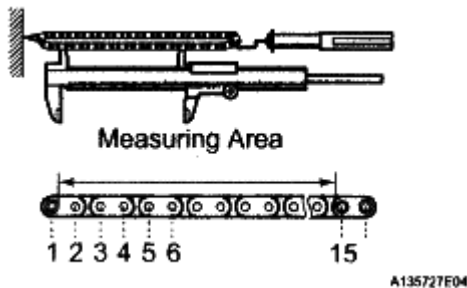

**Fig. 265: Measuring No. 2 Chain Sub-Assembly**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### 9. INSPECT CRANKSHAFT TIMING SPROCKET

- Wrap the chain around the sprocket.
- Using vernier calipers, measure the sprocket diameter with the chain.


**Minimum sprocket diameter (with chain):**

**61.4 mm (2.417 in.)**

**HINT:**

The vernier calipers must contact the chain rollers for the measurement.


If the diameter is less than the minimum, replace the chain and sprocket.

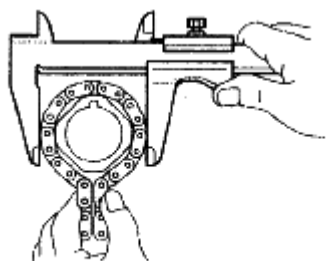

**Fig. 266: Checking Crankshaft Timing Sprocket Diameter With Chain**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

#### **10. INSPECT IDLE SPROCKET ASSEMBLY**

- a. Wrap the chain around the sprocket.
- b. Using vernier calipers, measure the sprocket diameter with the chain.

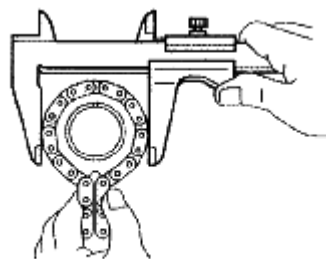

**Fig. 267: Checking Idle Sprocket Diameter With Chain**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**Minimum sprocket diameter (with chain):**

**61.4 mm (2.417 in.)**

**HINT:**

The vernier calipers must contact the chain rollers for the measurement.


If the diameter is less than the minimum, replace the chain and sprocket.

#### **11. INSPECT IDLE GEAR SHAFT OIL CLEARANCE**

- a. Using a micrometer, measure the idle gear shaft diameter.

**Idle gear shaft diameter:**

**22.987 to 23.000 mm (0.9050 to 0.9055 in.)**

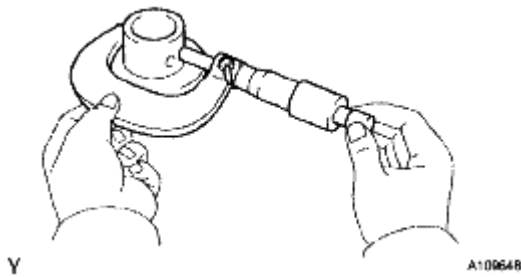
**Fig. 268: Checking Idle Gear Shaft Diameter**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Using a caliper gauge, measure the inside diameter of the idle gear.

**Idle gear inside diameter:**

**23.020 to 23.030 mm (0.9063 to 0.9067 in.)**

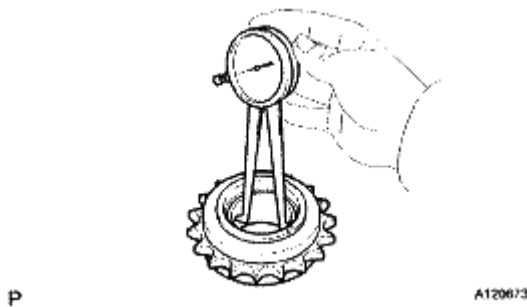**Fig. 269: Checking Inside Diameter Of Idle Gear**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Subtract the idle gear shaft diameter measurement from the idle gear inside diameter measurement.

**Standard oil clearance:**

**0.020 to 0.043 mm (0.0008 to 0.0017 in.)**

**Maximum oil clearance:**


**0.093 mm (0.0037 in.)**

If the thrust oil clearance is greater than the maximum, replace the idle gear shaft and idle gear.

## **12. INSPECT NO. 1 CHAIN TENSIONER ASSEMBLY**

- a. Move the stopper plate upward to release the lock. Push the plunger and check that it moves smoothly. If necessary, replace the chain tensioner assembly.



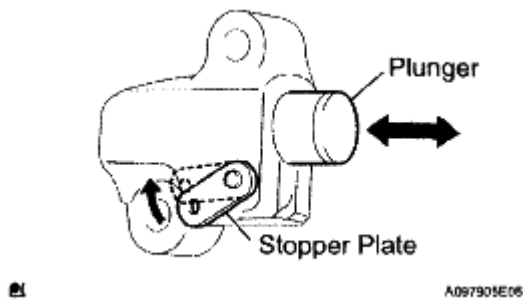

**Fig. 270: Inspecting No. 1 Chain Tensioner Assembly**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


### 13. INSPECT NO. 2 CHAIN TENSIONER ASSEMBLY

- Check that the plunger moves smoothly.
- Measure the worn depth of the chain tensioner.

**Maximum depth:**

**0.9 mm (0.035 in.)**

If the depth is greater than the maximum, replace the chain tensioner assembly.

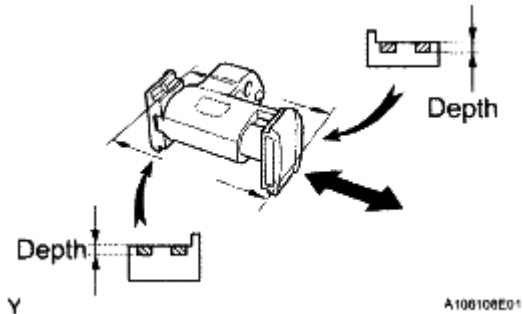

**Fig. 271: Checking No. 2 Chain Tensioner Assembly**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


### 14. INSPECT NO. 3 CHAIN TENSIONER ASSEMBLY

- Check that the plunger moves smoothly.
- Measure the worn depth of the chain tensioner.

**Maximum depth:**

**0.9 mm (0.035 in.)**

If the depth is greater than the maximum, replace the chain tensioner assembly.

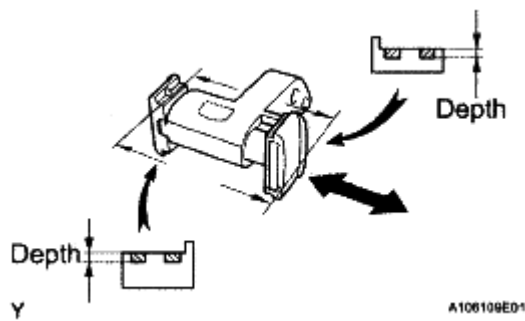

**Fig. 272: Checking No. 3 Chain Tensioner Assembly**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


### 15. INSPECT CHAIN TENSIONER SLIPPER

- a. Measure the worn depth of the chain tensioner slipper.

**Maximum depth:**

**1.0 mm (0.039 in.)**

If the depth is greater than the maximum, replace the chain tensioner slipper.

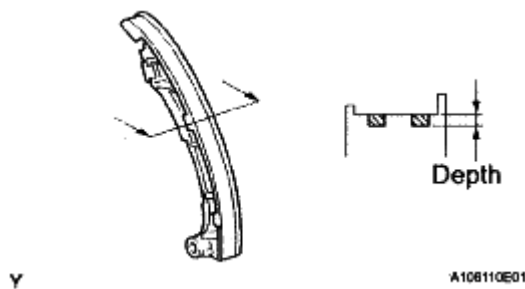

**Fig. 273: Identifying Worn Depth Of Chain Tensioner Slipper**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


### 16. INSPECT NO. 1 CHAIN VIBRATION DAMPER

- a. Measure the worn depth of the chain vibration damper.

**Maximum depth:**

**1.0 mm (0.039 in.)**

If the depth is greater than the maximum, replace the chain vibration damper.

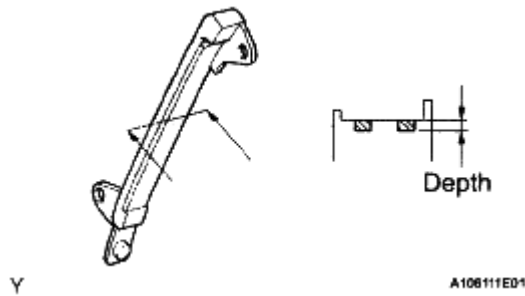

**Fig. 274: Identifying Worn Depth Of Chain Vibration Damper**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


#### 17. INSPECT NO. 2 CHAIN VIBRATION DAMPER

- a. Measure the worn depth of the chain vibration damper.

**Maximum depth:**

**1.0 mm (0.039 in.)**


If the depth is greater than the maximum, replace the chain vibration damper.

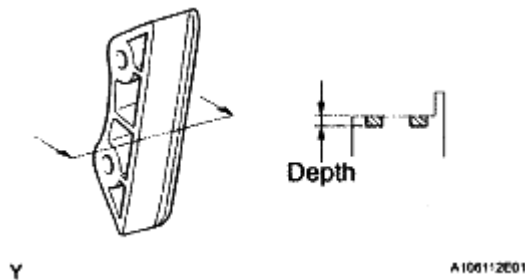


**Fig. 275: Identifying Worn Depth Of No. 2 Chain Vibration Damper**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

#### 18. INSPECT CYLINDER HEAD ASSEMBLY

- a. Using a precision straight edge and feeler gauge, measure the warpage of the contact surface of the cylinder block and manifolds.

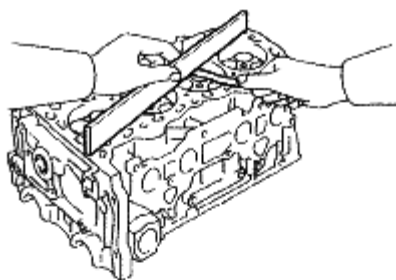


**Cylinder head lower side:**

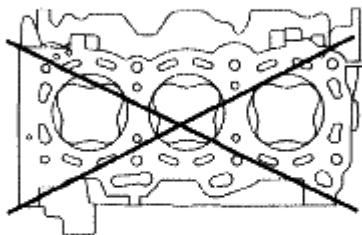

**Intake side:**



**Exhaust side:**



T

A12874FE01

**Fig. 276: Measuring Warpage Of Contact Surface Of Cylinder Block And Manifolds**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### Standard warpage

#### STANDARD WARPAGE

Item	Warpage
Cylinder head lower	0.05 mm (0.0020 in.)
Intake	0.08 mm (0.0031 in.)
Exhaust	0.08 mm (0.0031 in.)

### Maximum warpage


#### MAXIMUM WARPAGE

Item	Warpage
Cylinder head lower	0.10 mm (0.0039 in.)

Intake	0.10 mm (0.0039 in.)
Exhaust	0.10 mm (0.0039 in.)

If the warpage is greater than the maximum, replace the cylinder head assembly.

- b. Using a dye penetrant, check the intake ports, exhaust ports and cylinder surface for cracks. If cracked, replace the cylinder head assembly.

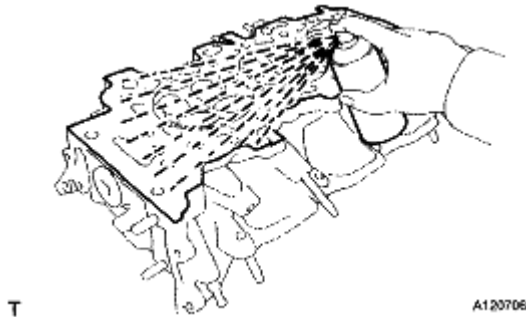

**Fig. 277: Checking Intake Ports, Exhaust Ports And Cylinder Surface For Cracks**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


#### 19. INSPECT INTAKE VALVE

- a. Using a micrometer, measure the diameter of the valve stem.

**Valve stem diameter:**

**5.470 to 5.485 mm (0.2154 to 0.2159 in.)**

If the valve stem is not as specified, check the oil clearance.

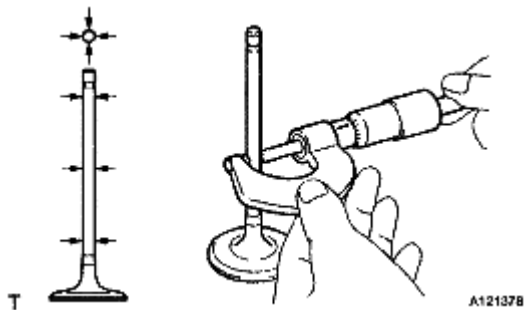

**Fig. 278: Checking Diameter Of Valve Stem**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Using vernier calipers, measure the valve head margin thickness.


**Standard margin thickness:**

**1.0 mm (0.03937 in.)**

**Minimum margin thickness:**

**0.5 mm (0.0197 in.)**

If the margin thickness is less than the minimum, replace the intake valve.

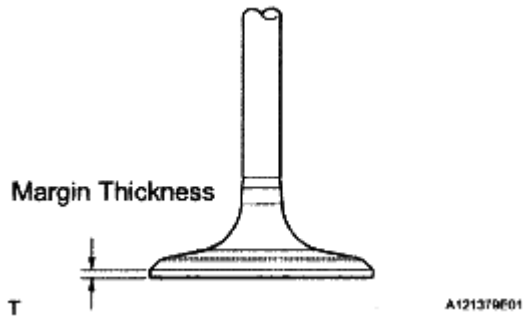

**Fig. 279: Identifying Valve Head Margin Thickness**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Using vernier calipers, measure the valve's overall length.


**Standard overall length:**

**105.85 mm (4.1673 in.)**

**Minimum overall length:**

**105.35 mm (4.1476 in.)**


If the overall length is less than the minimum, replace the intake valve.

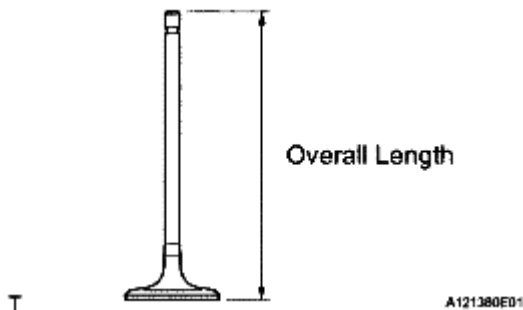

**Fig. 280: Identifying Valve's Overall Length**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 20. INSPECT EXHAUST VALVE

- a. Using a micrometer, measure the diameter of the valve stem.

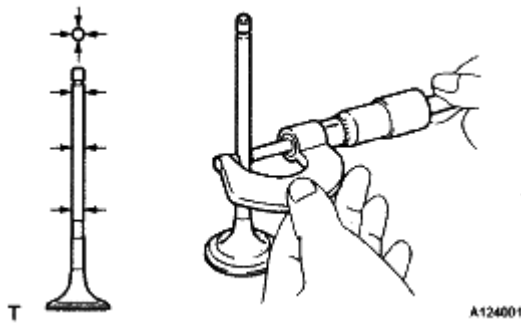

**Fig. 281: Checking Diameter Of Exhaust Valve Stem**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**Valve stem diameter:**

**5.465 to 5.480 mm (0.2151 to 0.2157 in.)**

If the valve stem is not as specified, check the oil clearance.

- b. Using vernier calipers, measure the valve head margin thickness.


**Standard margin thickness:**

**1.0 mm (0.0397 in.)**

**Minimum margin thickness:**

**0.5 mm (0.0197 in.)**

If the margin thickness is less than the minimum, replace the exhaust valve.

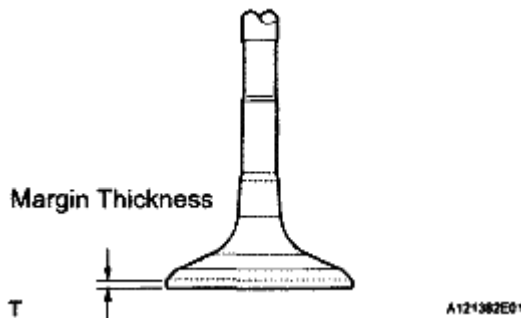

**Fig. 282: Identifying Valve Head Margin Thickness**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Using vernier calipers, measure the valve's overall length.


**Standard overall length:**

**110.40 mm (4.3464 in.)**

**Minimum overall length:**

**109.90 mm (4.3268 in.)**


If the overall length is less than the minimum, replace the exhaust valve.

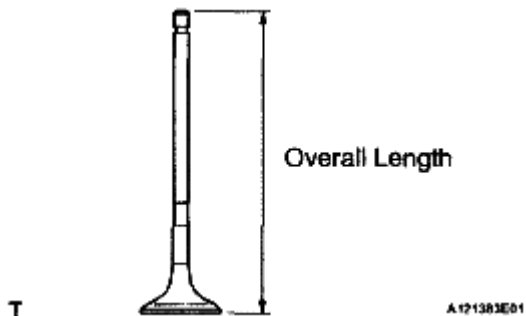

**Fig. 283: Identifying Valve Overall Length**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 21. INSPECT INTAKE VALVE SEAT

- a. Apply a light coat of Prussian blue to the valve face.
- b. Lightly press the valve face against the valve seat.
- c. Check the valve face and valve seat by using the following procedure.
  1. If Prussian blue appears around the entire valve face, the valve face is concentric. If not, replace the valve.
  2. If Prussian blue appears around the entire valve seat, the guide and valve face are concentric. If not, resurface the valve seat.
  3. Check that the valve seat contacts in the middle of the valve face with the width between 1.1 and 1.5 mm (0.043 and 0.059 in.).

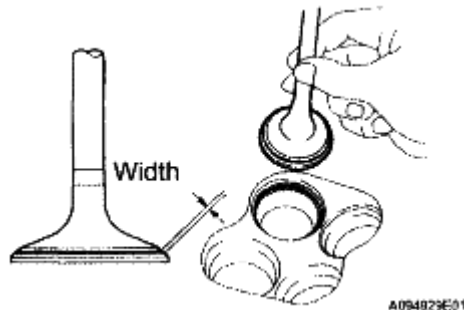


**Fig. 284: Inspecting Intake Valve Seat**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 22. INSPECT EXHAUST VALVE SEAT



- a. Apply a light coat of Prussian blue to the valve face.
- b. Lightly press the valve face against the valve seat.
- c. Check the valve face and valve seat by using the following procedure.
  1. If Prussian blue appears around the entire valve face, the valve face is concentric. If not, replace the valve.
  2. If Prussian blue appears around the entire valve seat, the guide and valve face are concentric. If not, resurface the valve seat.
  3. Check that the valve seat contacts in the middle of the valve face with the width between 1.1 and 1.5 mm (0.043 and 0.059 in.).

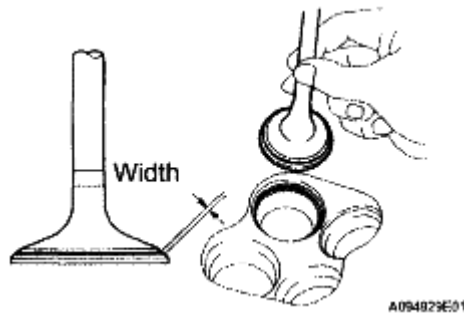


**Fig. 285: Inspecting Exhaust Valve Seat**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### 23. REPAIR INTAKE VALVE SEAT

**NOTE:**

- Repair the seat while checking the seating position.
- Keep the lip free of foreign matter.

- a. Using a 45° cutter, resurface the valve seat so that the valve seat width is more than the specification.

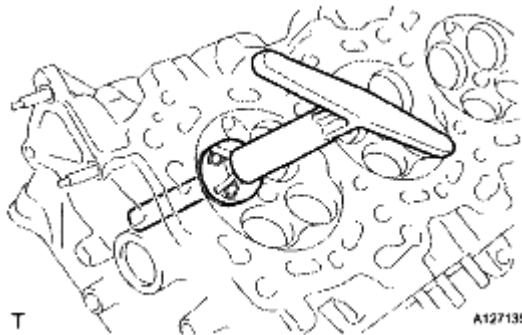


**Fig. 286: Resurfacing Valve Seat**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Using 30° and 60° cutters, correct the valve seat so that the valve contacts the entire circumference

of the seat. The contact should be in the center of the valve seat, and the valve seat width should be maintained within the specified range around the entire circumference of the seat.

**Width:**

**1.1 to 1.5 mm (0.043 to 0.059 in.)**

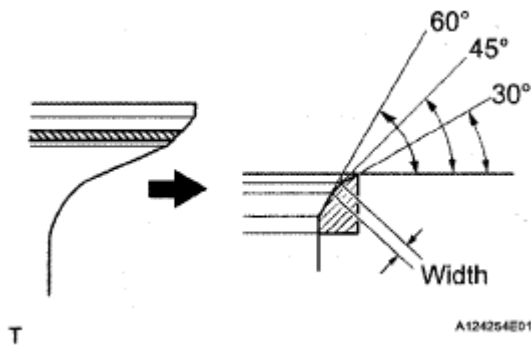

**Fig. 287: Identifying Valve Seat Width**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


- c. Handrub the valve and valve seat with an abrasive compound.
- d. Check the valve seating position.

#### 24. REPAIR EXHAUST VALVE SEAT

**NOTE:**

- Repair the seat while checking the seating position.
- Keep the lip free of foreign matter.

- a. Using a 45° cutter, resurface the valve seat so that the valve seat width is more than the specification.

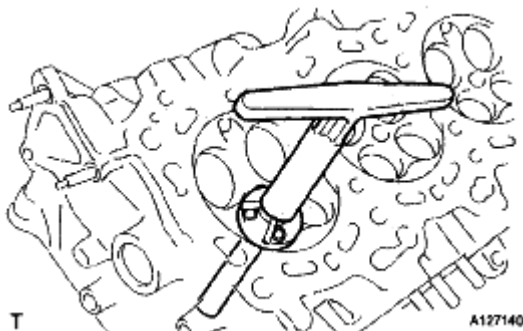

**Fig. 288: Resurfacing Valve Seat**


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Using 30° and 75° cutters, correct the valve seat so that the valve contacts the entire circumference of the seat. The contact should be in the center of the valve seat, and the valve seat width should be

maintained within the specified range around the entire circumference of the seat.

**Width:**

**1.1 to 1.5 mm (0.043 to 0.059 in.)**

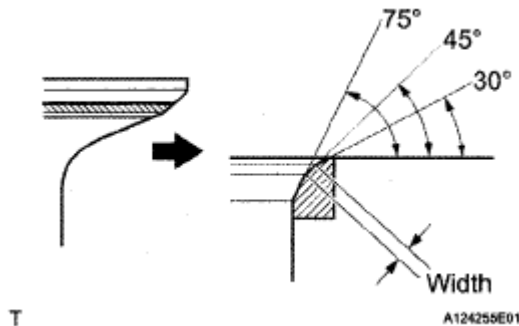

**Fig. 289: Correcting Valve Seat Using 30° And 75° Cutters**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Handrub the valve and valve seat with an abrasive compound.
- d. Check the valve seating position.


## 25. INSPECT COMPRESSION SPRING

- a. Using vernier calipers, measure the free length of the compression spring.

**Free length:**

**45.46 mm (1.7898 in.)**

If the free length is not as specified, replace the spring.

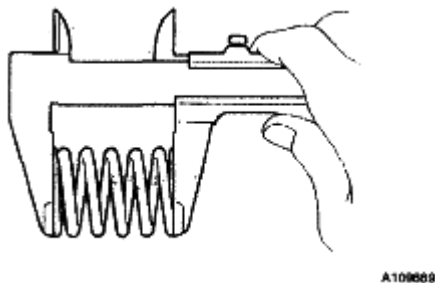

**Fig. 290: Measuring Free Length Of Compression Spring**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Using a steel square, measure the deviation of the inner compression spring.


**Maximum deviation:**

**1.0 mm (0.039 in.)**

**Maximum angle (reference):**

**2°**

If the deviation is greater than the maximum, replace the spring.

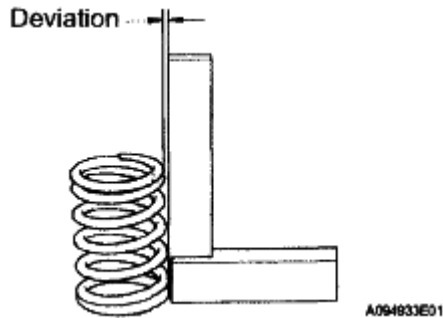


**Fig. 291: Measuring Deviation Of Inner Compression Spring**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 26. INSPECT VALVE GUIDE BUSH OIL CLEARANCE

- Using a caliper gauge, measure the inside diameter of the guide bush.

**Bush inside diameter:**

**5.510 to 5.530 mm (0.2169 to 0.2177 in.)**

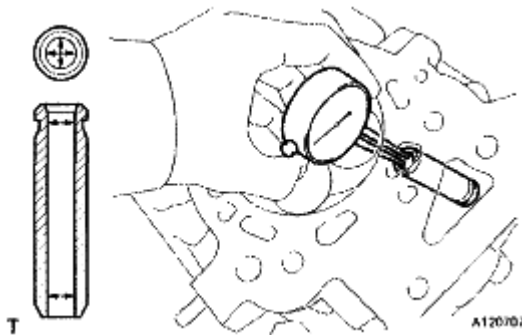

**Fig. 292: Checking Inside Diameter Of Guide Bush**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- Subtract the valve stem diameter measurement from the guide bush inside diameter measurement.

**Standard clearance**

### STANDARD CLEARANCE VALVE GUIDE BUSH OIL CLEARANCE

Item	Clearance
Intake	0.025 to 0.060 mm (0.0010 to 0.0024 in.)

Exhaust	0.030 to 0.065 mm (0.0012 to 0.0026 in.)
---------	------------------------------------------

**Maximum oil clearance****MAXIMUM OIL CLEARANCE VALVE GUIDE BUSH OIL CLEARANCE**

Item	Clearance
Intake	0.08 mm (0.0032 In.)
Exhaust	0.10 mm (0.0039 in.)

For intake side:

If the clearance is greater than the maximum, replace the intake valve and intake guide bush. For exhaust side:

If the clearance is greater than the maximum, replace the exhaust valve and exhaust guide bush.

**27. INSPECT CAMSHAFT THRUST CLEARANCE**

- a. Inspect the RH bank camshaft thrust clearance.
  1. Install the RH bank camshafts (See **REASSEMBLY**).
  2. Using a dial indicator, measure the thrust clearance while moving the camshaft back and forth.


**Standard thrust clearance:**

**0.08 to 0.13 mm (0.0031 to 0.0051 in.)**

**Maximum thrust clearance:**

**0.15 mm (0.006 in.)**

If the thrust clearance is greater than the maximum, replace the cylinder head. If the thrust surface is damaged, replace the camshaft.

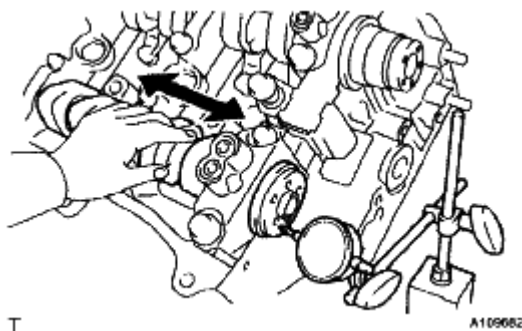

**Fig. 293: Checking Camshaft Thrust Clearance**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

b. Inspect the LH bank camshaft thrust clearance.

1. Install the LH bank camshafts (See **REASSEMBLY**).
2. Using a dial indicator, measure the thrust clearance while moving the camshaft back and forth.

**Standard thrust clearance:**

**0.08 to 0.13 mm (0.0031 to 0.0051 in.)**


**Maximum thrust clearance:**

**0.15 mm (0.006 in.)**

If the thrust clearance is greater than the maximum, replace the cylinder head. If the thrust surface is damaged, replace the camshaft.

## 28. INSPECT CAMSHAFT OIL CLEARANCE

- a. Clean the bearing caps, camshaft housing and camshaft journals.
- b. Place the camshafts on the camshaft housing.
- c. Lay a strip of Plastigage across each of the camshaft journals.

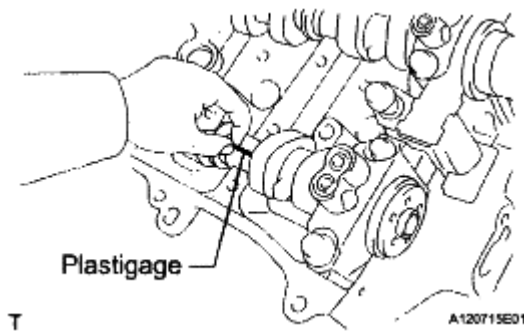


**Fig. 294: Laying Strip Of Plastigage Across Camshaft Journals**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Install the bearing caps (See **REASSEMBLY**).

**NOTE: Do not turn the camshaft.**

- e. Remove the bearing caps (See **DISASSEMBLY**).
- f. Measure the Plastigage at its widest point.

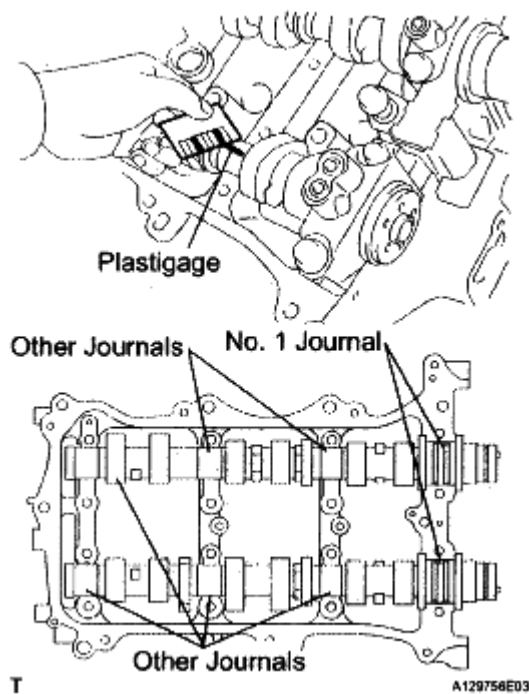

**Fig. 295: Measuring Plastigage At Camshaft Widest Point**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### Standard oil clearance

#### STANDARD OIL CLEARANCE

Item	Oil Clearance
No. 1 journal	0.040 to 0.079 mm (0.0016 to 0.0031 in.)
Other journals	0.025 to 0.062 mm (0.00098 to 0.0024 in.)


### Maximum oil clearance

#### MAXIMUM OIL CLEARANCE

Item	Oil Clearance
No. 1 Journal	0.10 mm (0.0039 in.)
Other journals	0.09 mm (0.0035 in.)

If the oil clearance is greater than the maximum, replace the camshaft. If necessary, replace the camshaft housing.

- Clean the bearing caps, camshaft housing and camshaft journals.
- Place the camshafts on the camshaft housing.
- Lay a strip of Plastigage across each of the camshaft journals.

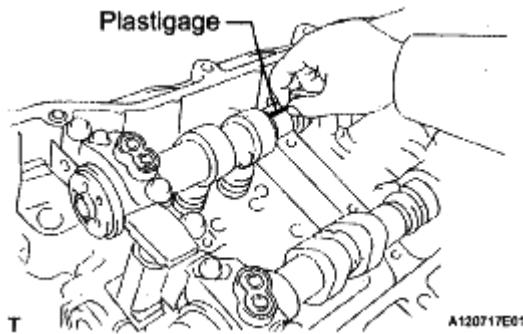


**Fig. 296: Laying Strip Of Plastigage Across Each Of Camshaft Journals**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- j. Install the bearing caps (See REASSEMBLY).

**NOTE:** Do not turn the camshaft.

- k. Remove the bearing caps (See DISASSEMBLY).  
l. Measure the Plastigage at its widest point.

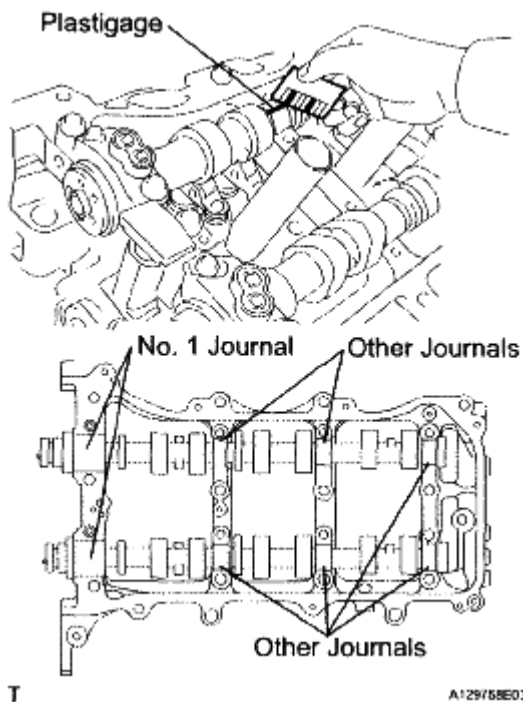

**Fig. 297: Measuring Plastigage At Camshaft Widest Point**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

Standard oil clearance

**STANDARD OIL CLEARANCE**



Item	Oil Clearance
No. 1 journal	0.040 to 0.079 mm (0.0016 to 0.0031 in.)
Other journals	0.025 to 0.062 mm (0.00098 to 0.0024 In.)

**Maximum oil clearance****MAXIMUM OIL CLEARANCE**

Item	Oil Clearance
No. 1 journal	0.10 mm (0.0039 In.)
Other journals	0.09 mm (0.0035 in.)

If the oil clearance is greater than the maximum, replace the camshaft. If necessary, replace the camshaft housing.

**29. INSPECT CONNECTING ROD THRUST CLEARANCE**

- Install the connecting rod cap (See **REASSEMBLY**).
- Using a dial indicator, measure the thrust clearance while moving the connecting rod back and forth.


**Standard thrust clearance:**

**0.15 to 0.40 mm (0.0059 to 0.0157 in.)**

**Maximum thrust clearance:**

**0.50 mm (0.020 in.)**

If the thrust clearance is greater than the maximum, replace the connecting rod assemblies as necessary. If necessary, replace the crankshaft.

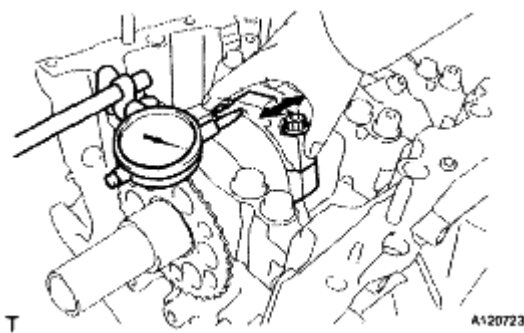


**Fig. 298: Checking Thrust Clearance**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**30. INSPECT CONNECTING ROD OIL CLEARANCE**


- Clean the crank pin and bearing.

- b. Check the crank pin and bearing for pitting and scratches.
- c. Lay a strip of Plastigage on the crank pin.

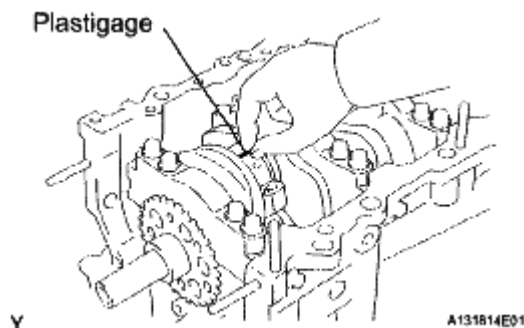

**Fig. 299: Laying Strip Of Plastigage On Crank Pin**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Check that the front mark of the connecting rod cap is facing forward.

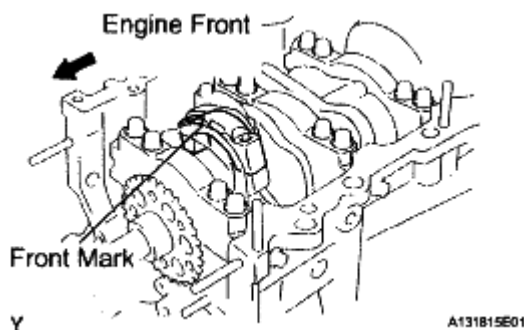

**Fig. 300: Checking Front Mark Of Connecting Rod Cap**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- e. Install the connecting rod cap (See **REASSEMBLY**).

**NOTE:** Do not turn the crankshaft.

- f. Remove the 2 bolts and connecting rod cap (See **DISASSEMBLY**).
- g. Measure the Plastigage at its widest point.


**Standard oil clearance:**

**0.045 to 0.067 mm (0.0018 to 0.0026 in.)**

**Maximum oil clearance:**

**0.070 mm (0.0028 in.)**

If the oil clearance is greater than the maximum, replace the connecting rod bearings. If necessary, inspect the crankshaft.

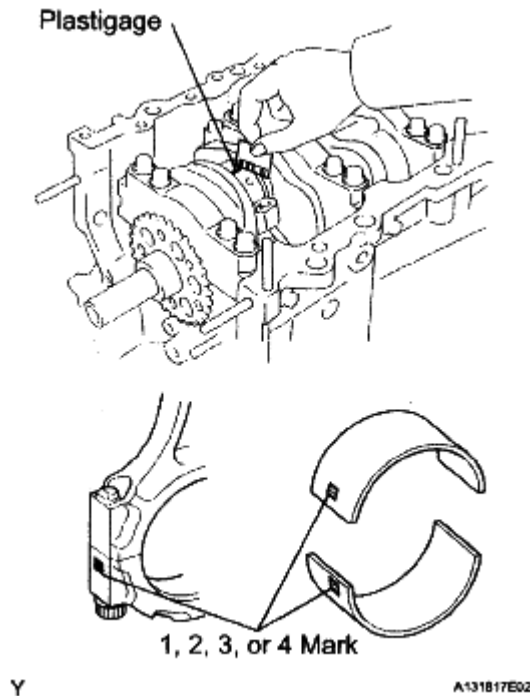

**Fig. 301: Checking Crankshaft Pin Diameter**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

HINT:

If replacing a bearing, replace it with one that has the same number as its respective connecting rod cap. Each bearing's standard thickness is indicated by a 1, 2, 3 or 4 mark on its surface.

### Connecting rod diameter

#### CONNECTING ROD DIAMETER

Mark	Diameter
1	56.000 to 56.006 mm (2.2047 to 2.2050 In.)
2	56.007 to 56.012 mm (2.2050 to 2.2052 in.)
3	56.013 to 56.018 mm (2.2052 to 2.2054 In.)
4	56.019 to 56.024 mm (2.2055 to 2.2057 In.)

### Connecting rod bearing center wall thickness

#### CONNECTING ROD BEARING CENTER WALL THICKNESS

Mark	Thickness
1	1.481 to 1.484 mm (0.0583 to 0.0584 in.)

2	1.484 to 1.487 mm (0.0584 to 0.0585 in.)
3	1.487 to 1.490 mm (0.0585 to 0.0587 in.)
4	1.490 to 1.493 mm (0.0587 to 0.0586 in.)

**Crankshaft pin diameter:**

**52.992 to 53.000 mm (2.0863 to 2.0866 in.)**

**NOTE:** Completely remove the Plastigage after the measurement.

### 31. INSPECT CRANKSHAFT THRUST CLEARANCE

- Install the main bearing cap (See **REASSEMBLY**).
- Using a dial indicator, measure the thrust clearance while prying the crankshaft back and forth with a screwdriver.

**Standard thrust clearance:**

**0.04 to 0.24 mm (0.0016 to 0.0094 in.)**


**Maximum thrust clearance:**

**0.30 mm (0.0118 in.)**

If the thrust clearance is greater than the maximum, replace the thrust washers as a set. If necessary, replace the crankshaft.

**Thrust washer thickness:**

**2.43 to 2.48 mm (0.0957 to 0.0976 in.)**

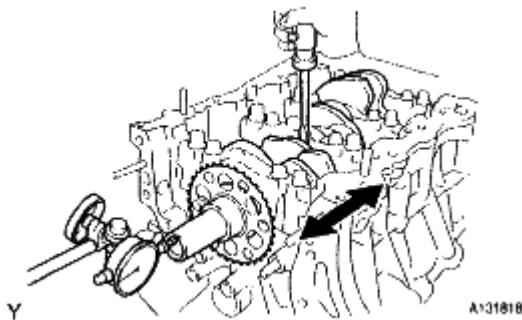



**Fig. 302: Measuring Crankshaft Thrust Clearance**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### 32. INSPECT CYLINDER BLOCK FOR WARPAGE

- Using a precision straight edge and feeler gauge, measure the warpage of the contact surface of the cylinder head gasket.

**Maximum warpage:****0.07 mm (0.0028 in.)**

If the warpage is greater than the maximum, replace the cylinder block.

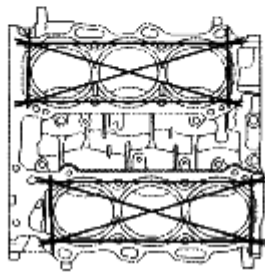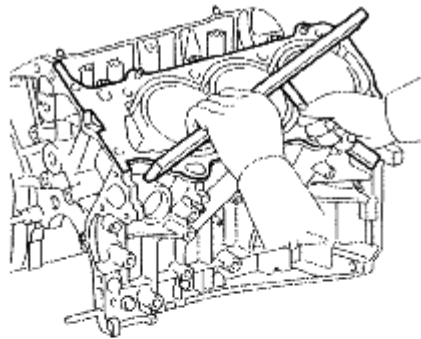


**Fig. 303: Measuring Warpage Of Contact Surface Of Cylinder Head Gasket**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**33. INSPECT CYLINDER BORE**

- a. Visually check the cylinder for vertical scratches.

If deep scratches are present, rebore all the 6 cylinders. If necessary, replace the cylinder block.

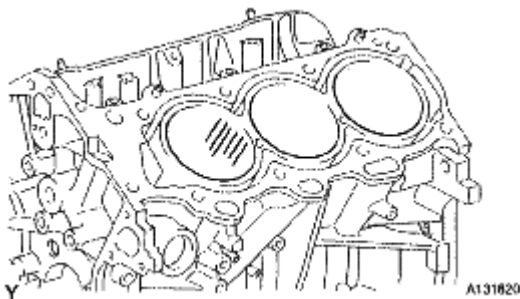

**Fig. 304: Checking Cylinder**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Using a cylinder gauge, measure the cylinder bore diameter at positions A and B in the thrust and

axial directions.


**Standard diameter:**

**94.000 to 94.012 mm (3.7008 to 3.7013 in.)**

**Maximum diameter:**

**94.200 mm (3.7087 in.)**

If the average diameter of 4 positions is greater than the maximum, replace the cylinder block.

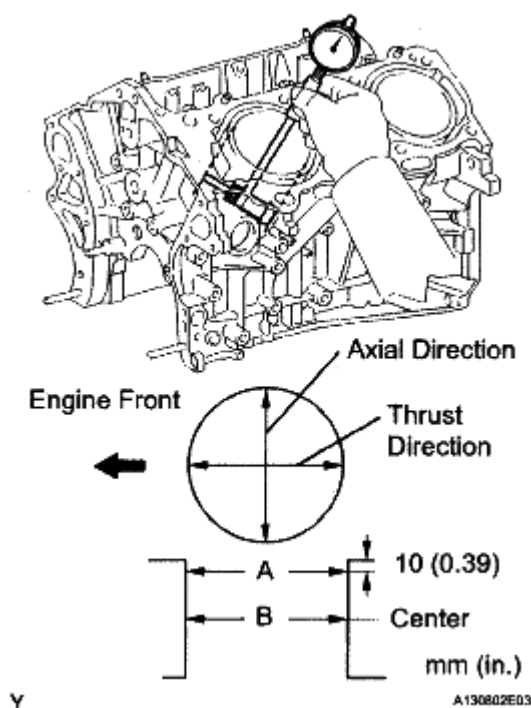

**Fig. 305: Measuring Cylinder Bore Diameter**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**34. INSPECT PISTON SUB-ASSEMBLY WITH PIN**

- Using a micrometer, measure the piston diameter at right angles to the piston center line where the distance from the piston end is as specified.

**Distance:**


**9.8 mm (0.3858 in.)**

**Standard diameter:**

**93.960 to 93.980 mm (3.6992 to 3.7000 in.)**

**Maximum diameter:**

**93.830 mm (3.6941 in.)**

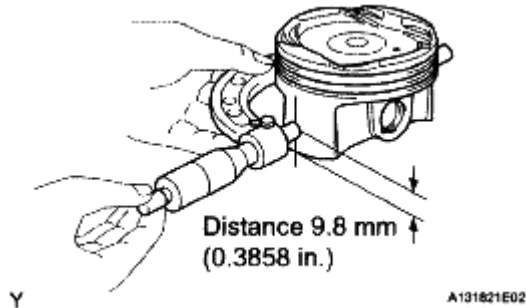

**Fig. 306: Measuring Piston Diameter**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### **35. INSPECT PISTON OIL CLEARANCE**

- a. Measure the cylinder bore diameter in the thrust directions.
- b. Subtract the piston diameter measurement from the cylinder bore diameter measurement.

**Standard oil clearance:**

**0.020 to 0.052 mm (0.0008 to 0.0020 in.)**


**Maximum oil clearance:**

**0.060 mm (0.0024 in.)**

If the oil clearance is greater than the maximum, replace all the pistons. If necessary, replace the cylinder block.

### **36. INSPECT RING GROOVE CLEARANCE**

- a. Using a feeler gauge, measure the clearance between a new piston ring and the wall of the ring groove.

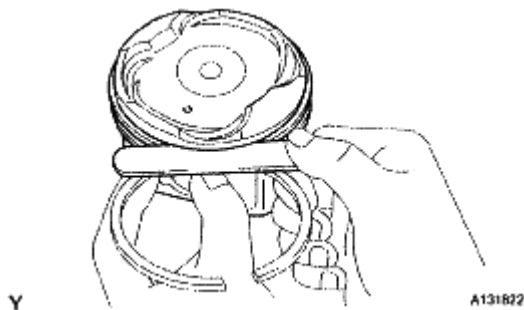

**Fig. 307: Measuring Ring Groove**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### Ring groove clearance


#### RING GROOVE CLEARANCE

Item	Clearance
No. 1	0.020 to 0.070 mm (0.0008 to 0.0028 In.)
No. 2	0.020 to 0.060 mm (0.0008 to 0.0024 In.)
Oil	0.070 to 0.150 mm (0.0028 to 0.0059 In.)

If the clearance is not as specified, replace the piston.


### 37. INSPECT PISTON RING END GAP

- Insert the piston ring into the cylinder bore.
- Using a piston, push the piston ring a little beyond the bottom of the ring travel, 110 mm (4.33 in.) from the top of the cylinder block.

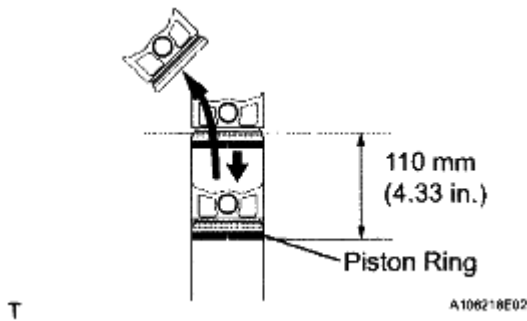

**Fig. 308: Inserting Piston Ring Into Cylinder Bore**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- Using a feeler gauge, measure the end gap.

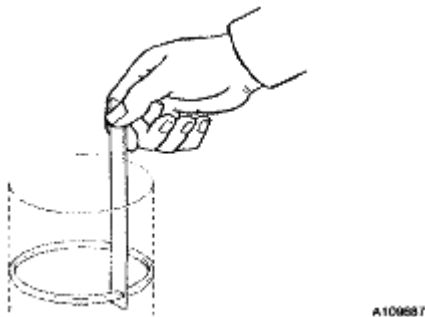

**Fig. 309: Checking End Gap**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### Standard end gap



**STANDARD END GAP**

Item	End Gap
No. 1	0.25 to 0.35 mm (0.0098 to 0.0138 In.)
No. 2	0.50 to 0.60 mm (0.0197 to 0.0236 in.)
Oil	0.10 to 0.40 mm (0.0039 to 0.0157 In.)


**Maximum end gap****MAXIMUM END GAP**

Item	End Gap
No. 1	0.50 mm (0.0197 in.)
No. 2	0.85 mm (0.0335 in.)
Oil	0.60 mm (0.0236 in.)

If the end gap is greater than the maximum, replace the piston ring. If the end gap is greater than the maximum even with a new piston ring, rebore all the 6 cylinders or replace the cylinder block.

**38. INSPECT PISTON PIN OIL CLEARANCE**

- a. Using a caliper gauge, measure the inside diameter of the piston pin hole.

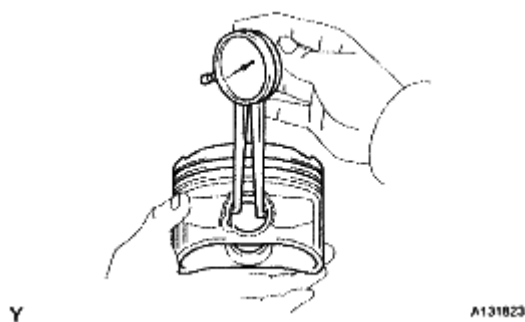


**Fig. 310: Measuring Inside Diameter Of Piston Pin Hole**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**Piston pin hole inside diameter****PISTON PIN HOLE INSIDE DIAMETER**

Mark	Diameter
A	22.001 to 22.004 mm (0.8662 to 0.8663 in.)
B	22.004 to 22.007 mm (0.8663 to 0.8664 in.)
C	22.007 to 22.010 mm (0.8664 to 0.8665 in.)

- b. Using a micrometer, measure the piston pin diameter.

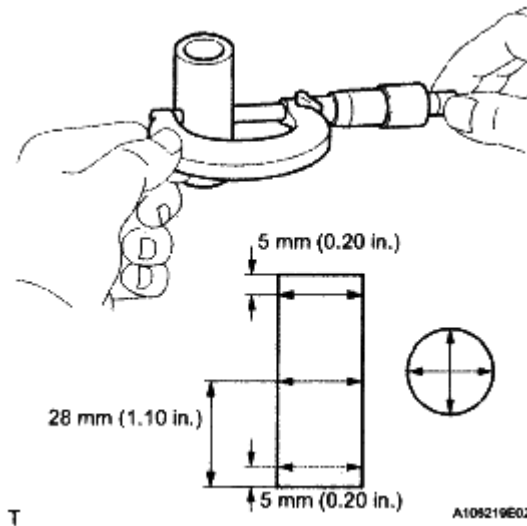

**Fig. 311: Checking Piston Pin Diameter**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### Piston pin diameter

#### PISTON PIN DIAMETER

Mark	Diameter
A	21.997 to 22.000 mm (0.8660 to 0.8661 In.)
B	22.000 to 22.003 mm (0.8661 to 0.8663 In.)
C	22.003 to 22.006 mm (0.8663 to 0.8664 In.)

- c. Subtract the piston pin diameter measurement from the piston pin hole diameter measurement.

#### Standard oil clearance:


**0.001 to 0.007 mm (0.00004 to 0.00028 in.)**

#### Maximum oil clearance:

**0.015 mm (0.0006 in.)**

If the oil clearance is greater than the maximum, replace the piston and piston pin as a set.

- d. Using a caliper gauge, measure the inside diameter of the connecting rod bushing.

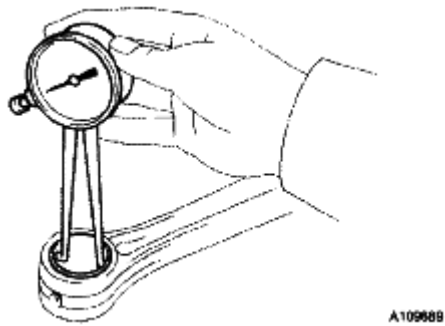

**Fig. 312: Checking Inside Diameter Of Connecting Rod Bushing**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### Bushing inside diameter

#### BUSHING INSIDE DIAMETER

Mark	Diameter
A	22.005 to 22.008 mm (0.8663 to 0.8665 in.)
B	22.009 to 22.011 mm (0.8665 to 0.8666 In.)
C	22.012 to 22.014 mm (0.8666 to 0.8667 in.)

- e. Subtract the piston pin diameter measurement from the bushing inside diameter measurement.


#### Standard oil clearance:

**0.005 to 0.011 mm (0.0002 to 0.0004 in.)**

#### Maximum oil clearance:

**0.030 mm (0.0012 in.)**

If the oil clearance is greater than the maximum, replace the bushing. If necessary, replace the connecting rod and piston pin as a set.

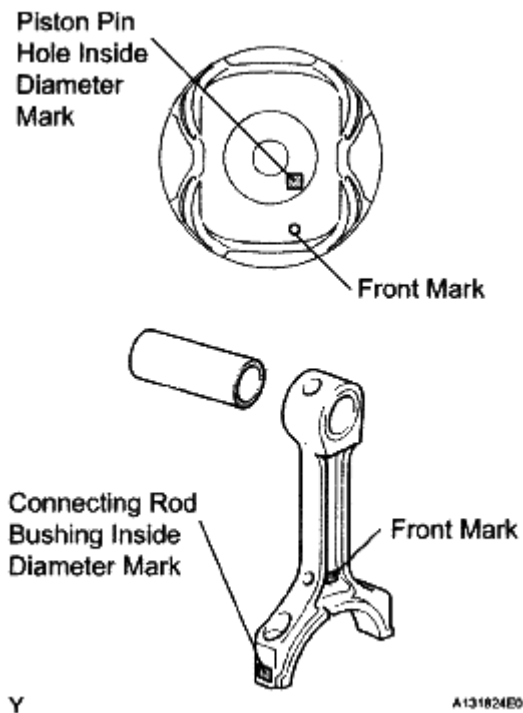

**Fig. 313: Identifying Front Mark Of Piston Pin**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


### 39. INSPECT CONNECTING ROD

- a. Using a rod aligner and feeler gauge, check the connecting rod alignment.
  1. Check for out-of-alignment.

**Maximum out-of-alignment:**

**0.05 mm (0.0020 in.) per 100 mm (3.94 in.)**

If the out-of-alignment is greater than the maximum, replace the connecting rod assembly.

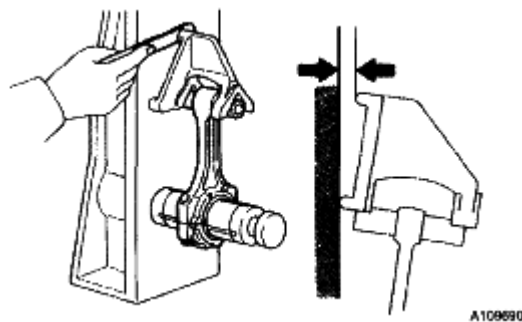


**Fig. 314: Checking Connecting Rod**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

2. Check for twist.

**Maximum twist:**

**0.15 mm (0.0059 in.) per 100 mm (3.94 in.)**

If the twist is greater than the maximum, replace the connecting rod assembly.

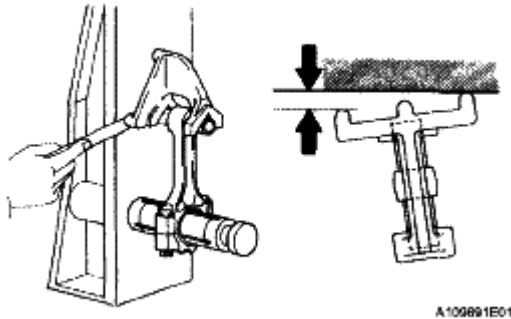

**Fig. 315: Checking Connecting Rod For Twist**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**40. INSPECT CONNECTING ROD BOLT**

- a. Using vernier calipers, measure the tension portion diameter of the bolt.


**Standard diameter:**

**7.2 to 7.3 mm (0.284 to 0.287 in.)**

**Minimum diameter:**

**7.0 mm (0.276 in.)**

If the diameter is less than the minimum, replace the bolt.

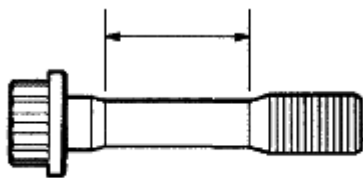

**Fig. 316: Identifying Tension Portion Diameter Of Bolt**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


**41. INSPECT CRANKSHAFT**

- a. Inspect for circle runout.

1. Clean the crank journal.
2. Place the crankshaft on V-blocks.
3. Using a dial indicator, measure the circle runout at the center journal.

**Maximum circle runout:****0.06 mm (0.0024 in.)**

If the circle runout is greater than the maximum, replace the crankshaft.

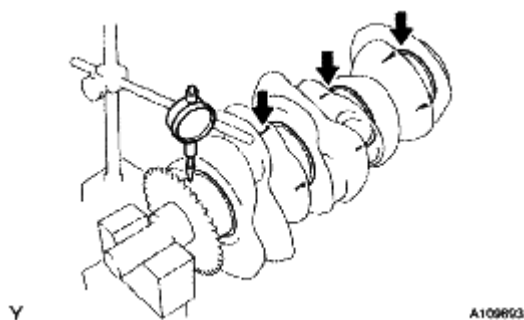

**Fig. 317: Checking Circle Runout At Center Journal**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Inspect the main journals.
  1. Using a micrometer, measure the diameter of each main journal.


**Standard journal diameter:****60.988 to 61.000 mm (2.4011 to 2.4016 in.)**

If the diameter is not as specified, check the oil clearance. If necessity, replace the crankshaft.

2. Check each main journal for taper and out-of-round as shown in the illustration.

**Maximum taper and out-of-round:****0.02 mm (0.0008 in.)**

If the taper and out-of-round is greater than the maximum, replace the crankshaft.

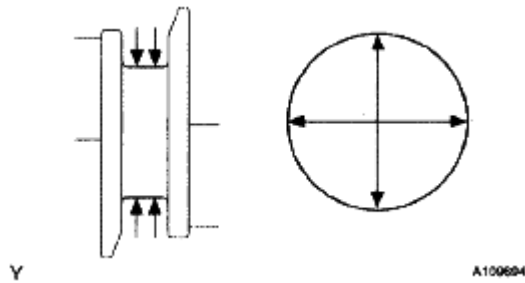

**Fig. 318: Checking Main Journal For Taper And Out-Of Round**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Inspect the crank pin.
  1. Using a micrometer, measure the diameter of each crank pin.

**Crankshaft pin diameter:**

**52.992 to 53.000 mm (2.0863 to 2.0866 in.)**


If the diameter is not as specified, check the oil clearance. If necessary, replace the crankshaft.

2. Check each crank pin for taper and out-of-round as shown in the illustration.

**Maximum taper and out-of-round:**

**0.02 mm (0.0008 in.)**

If the taper and out-of-round is greater than the maximum, replace the crankshaft.

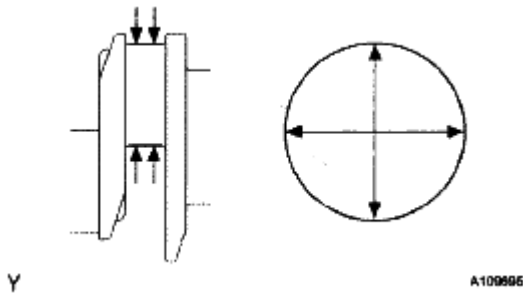


**Fig. 319: Checking Crank Pin For Taper And Out-Of Round**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**42. INSPECT CRANKSHAFT OIL CLEARANCE**

- a. Check the crank journal and bearing for pitting and scratches.
- b. Install the crankshaft bearing (See **REASSEMBLY**).
- c. Place the crankshaft on the cylinder block.

- d. Lay a strip of Plastigage across each journal.

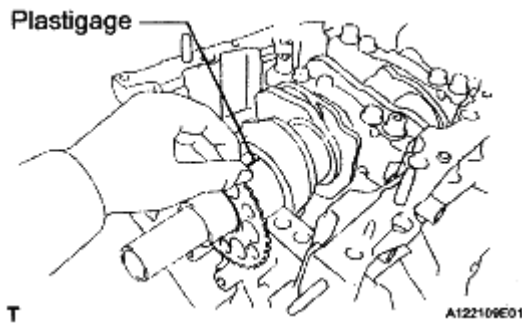

**Fig. 320: Laying Strip Of Plastigage Across Each Journal**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- e. Examine the front marks and numbers and install the bearing caps on the cylinder block.

HINT:

A number is marked on each main bearing cap to indicate the installation position.

- f. Install the main bearing cap (See **REASSEMBLY**).

**NOTE:** Do not turn the crankshaft.

- g. Remove the main bearing caps (See **DISASSEMBLY**).

- h. Measure the Plastigage at its widest point.

**Standard oil clearance:**

**0.026 to 0.047 mm (0.0010 to 0.0019 in.)**


**Maximum oil clearance:**

**0.050 mm (0.0020 in.)**

If the oil clearance is greater than the maximum, replace the bearings. If necessary, replace the crankshaft.


**NOTE:** Completely remove the Plastigage after the measurement.

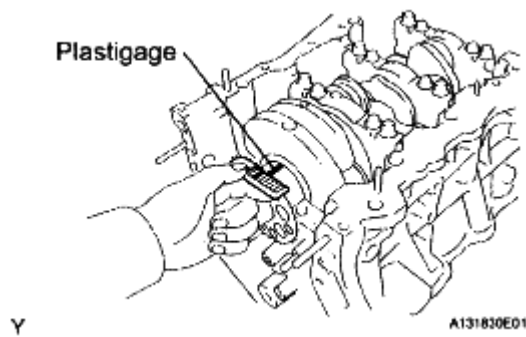

**Fig. 321: Measuring Plastigage At Widest Point**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- i. If replacing a bearing, replace it with one having the same number. If the number of the bearing cannot be determined, select the correct bearing by adding together the numbers imprinted on the cylinder block and crankshaft, then refer to the table below for the appropriate bearing number. There are 5 sizes of standard bearings, marked "1", "2", "3", "4" and "5" accordingly.

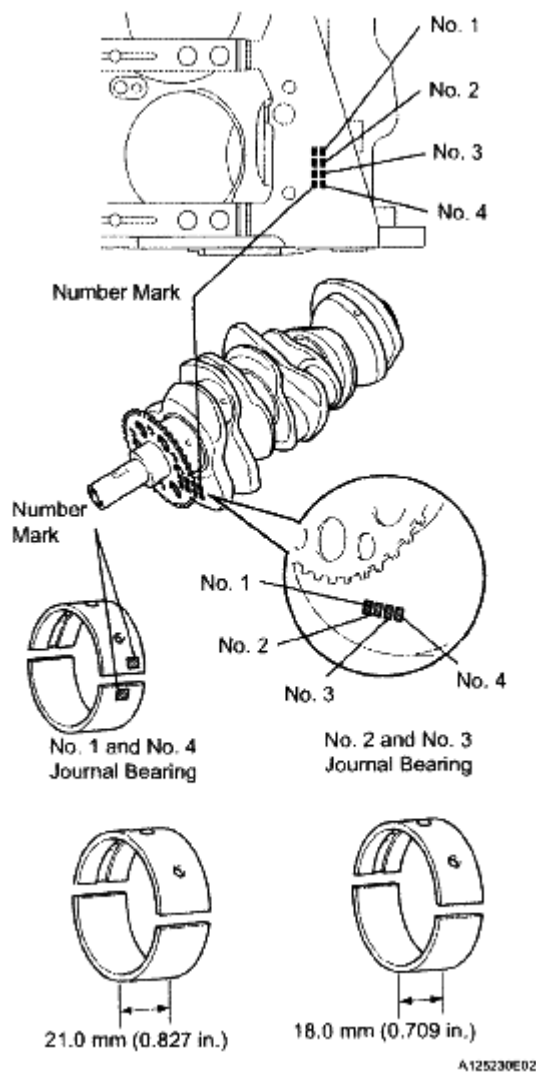

**Fig. 322: Identifying Journal Bearing Diameter**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**Journal bearings:**

### JOURNAL BEARINGS

Cylinder block + Crankshaft	0 - 5	6 - 11	12 - 17	18 - 23	24 - 28
Bearing to be used	"1"	"2"	"3"	"4"	"5"

**HINT:**

EXAMPLE: Cylinder block "11" + Crankshaft "06" Total number 17 (Use bearing "3")

**Crankshaft main journal diameter**

### CRANKSHAFT MAIN JOURNAL DIAMETER

**2007 Toyota Camry XLE**

2007 ENGINE Engine Mechanical (2GR-FE) - Camry

Mark	Diameter
"00"	60.999 to 61.000 mm (2.4015 to 2.4016 in.)
"01"	60.998 to 60.999 mm (2.4015 to 2.4015 in.)
"02"	60.997 to 60.998 mm (2.4015 to 2.4015 in.)
"03"	60.996 to 60.997 mm (2.4014 to 2.4015 in.)
"04"	60.995 to 60.996 mm (2.4014 to 2.4014 in.)
"05"	60.994 to 60.995 mm (2.4013 to 2.4014 in.)
"06"	60.993 to 60.994 mm (2.4013 to 2.4013 in.)
"07"	60.992 to 60.993 mm (2.4013 to 2.4013 in.)
"08"	60.991 to 60.992 mm (2.4012 to 2.4013 in.)
"09"	60.990 to 60.991 mm (2.4012 to 2.4012 In.)
"10"	60.989 to 60.990 mm (2.4011 to 2.4012 In.)
"11"	60.988 to 60.989 mm (2.4011 to 2.4011 in.)

**Standard upper bearing center wall thickness (No. 1 and No. 4 journal)****STANDARD UPPER BEARING CENTER WALL THICKNESS (NO. 1 AND NO. 4 JOURNAL)**

Mark	Thickness
"1"	2.500 to 2.503 mm (0.0984 to 0.0985 in.)
"2"	2.503 to 2.506 mm (0.0985 to 0.0987 in.)
"3"	2.506 to 2.509 mm (0.0987 to 0.0988 In.)
"4"	2.509 to 2.512 mm (0.0988 to 0.0989 In.)
"5"	2.512 to 2.515 mm (0.0989 to 0.0990 in.)

**Standard lower bearing center wall thickness (No. 1 and No. 4 journal)****STANDARD LOWER BEARING CENTER WALL THICKNESS (NO. 1 AND NO. 4 JOURNAL)**

Mark	Thickness
"1"	2.478 to 2.481 mm (0.0976 to 0.0977 in.)
"2"	2.481 to 2.484 mm (0.0977 to 0.0978 In.)
"3"	2.484 to 2.487 mm (0.0978 to 0.0979 in.)
"4"	2.487 to 2.490 mm (0.0979 to 0.0980 in.)
"5"	2.490 to 2.493 mm (0.0980 to 0.0981 in.)

**Standard upper bearing center wall thickness (No. 2 and No. 3 journal)****STANDARD UPPER BEARING CENTER WALL THICKNESS (NO. 2 AND NO. 3 JOURNAL)**

Mark	Thickness
"1"	2.478 to 2.481 mm (0.0976 to 0.0977 In.)
"2"	2.481 to 2.484 mm (0.0977 to 0.0978 In.)

"3"	2.484 to 2.487 mm (0.0978 to 0.0979 In.)
"4"	2.487 to 2.490 mm (0.0979 to 0.0980 in.)
"5"	2.490 to 2.493 mm (0.0980 to 0.0981 in.)

**Standard lower bearing center wall thickness (No. 2 and No. 3 journal)**

**STANDARD LOWER BEARING CENTER WALL THICKNESS (NO. 2 AND NO. 3 JOURNAL)**

Mark	Thickness
"1"	2.500 to 2.503 mm (0.0984 to 0.0985 In.)
"2"	2.503 to 2.506 mm (0.0985 to 0.0987 in.)
"3"	2.506 to 2.509 mm (0.0987 to 0.0988 In.)
"4"	2.509 to 2.512 mm (0.0988 to 0.0989 In.)
"5"	2.512 to 2.515 mm (0.0989 to 0.0990 In.)

**43. INSPECT CRANKSHAFT BEARING CAP SET BOLT**

- Using vernier calipers, measure the minimum diameter of the compressed thread at the measuring point.

**Standard diameter:**

**10.8 to 11.0 mm (0.4252 to 0.4331 in.)**


**Minimum diameter:**

**10.7 mm (0.4213 in.)**

**Measuring Point:**

**40 mm (1.57 in.)**

If the diameter is less than the minimum, replace the bolt.

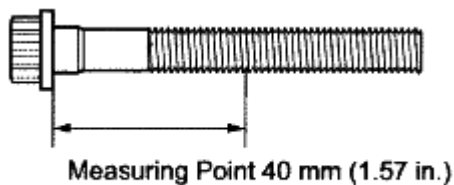

A125160E02

**Fig. 323: Identifying Crankshaft Bearing Cap Set Bolt Length**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


**REASSEMBLY**

**CAUTION:** For additional information on timing chain/gear removal guidelines, installation and camshaft timing gear alignment, see 2GR-FE VALVE TIMING PROCEDURE.


# 1. INSTALL STRAIGHT PIN

- a. Using a plastic hammer, tap in new straight pins to the cylinder block.


**Front Cylinder Block:**

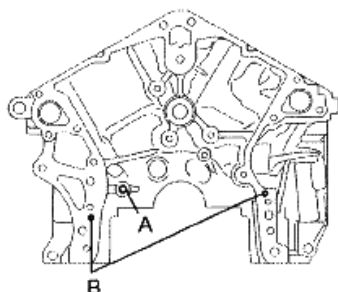


**Rear Cylinder Block:**

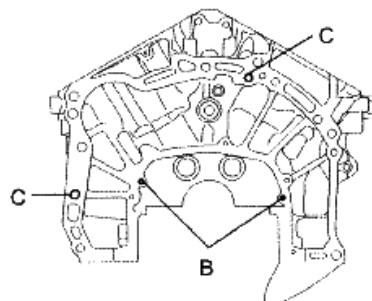



**Upper Cylinder Block:**

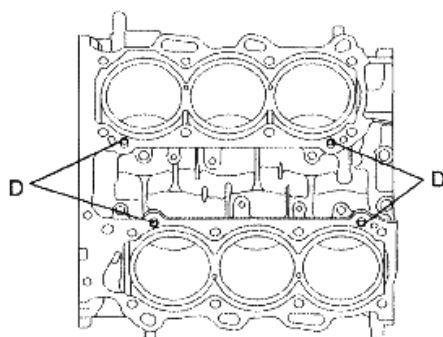

**Lower Cylinder Block:**

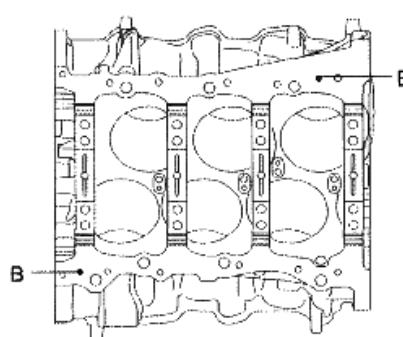

**Cylinder Block RH Side:**

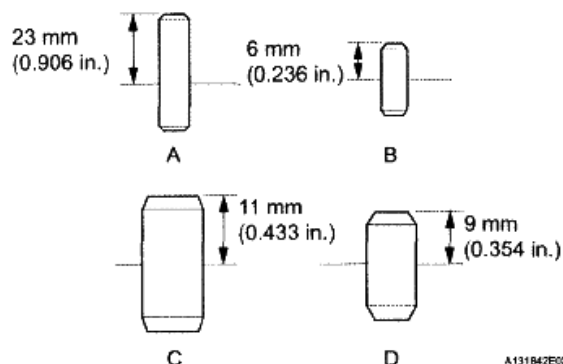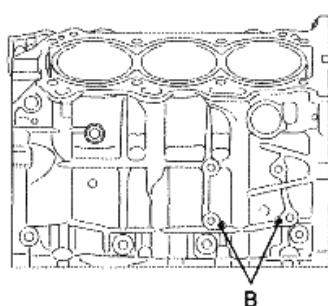

A131B42E02

**Fig. 324: Installing Straight Pin**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

Standard protrusion


STANDARD PROTRUSION

Item	Protrusion
Pin A	23 mm (0.906 in.)
Pin B	6 mm (0.236 in.)
Pin C	11 mm (0.433 In.)
Pin D	9 mm (0.354 in.)




## 2. INSTALL STUD BOLT

- Using E8 and E10 "torx" sockets, install the stud bolts.

Front Cylinder Block:

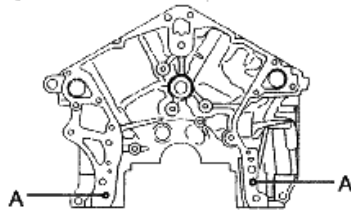

LH Side:

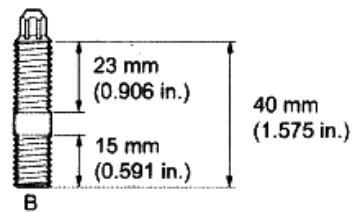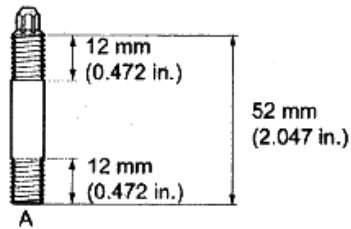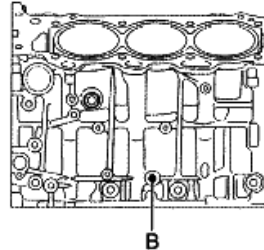

Y

A134958E01

**Fig. 325: Identifying Stud Bolt Installation Position**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### Torque:


10 N\*m (102 kgf\*cm, 7 ft.\*lbf) for bolt A

17 N\*m (173 kgf\*cm, 13 ft.\*lbf) for bolt B

## 3. INSTALL NO. 1 OIL NOZZLE SUB-ASSEMBLY

- Using a 5 mm hexagon wrench, install the oil nozzles.

**Torque: 9.0 N\*m (92 kgf\*cm, 80 in.\*lbf)**

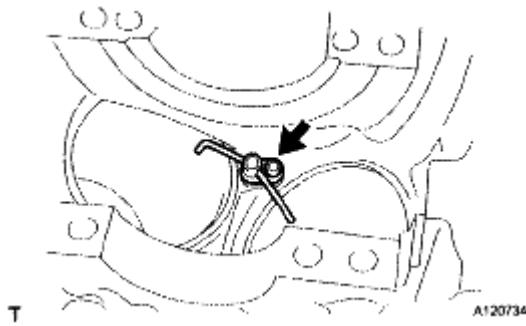


**Fig. 326: Identifying Bolt And Oil Nozzle**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

#### 4. INSTALL PISTON SUB-ASSEMBLY WITH PIN

- a. Using a screwdriver, install a new snap ring at one end of the piston pin hole.

HINT:


Be sure that the end gap of the snap ring is not aligned with the pin hole cutout portion of the piston.

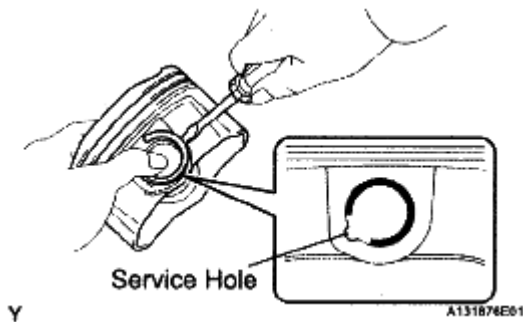

**Fig. 327: Installing Snap Ring**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Gradually heat the piston to approximately 60°C (176°F).

80°C (176°F)

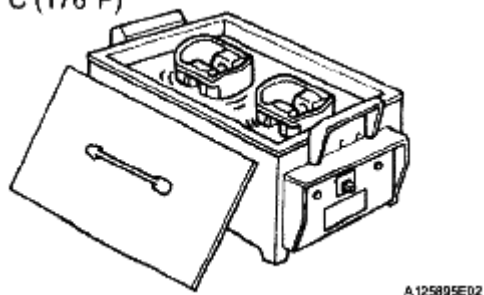


**Fig. 328: Heating Piston**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Coat the piston pin with engine oil.
- d. Align the front marks of the piston and connecting rod, and push in the piston pin with your thumb.


HINT:

The piston and pin are a matched set.

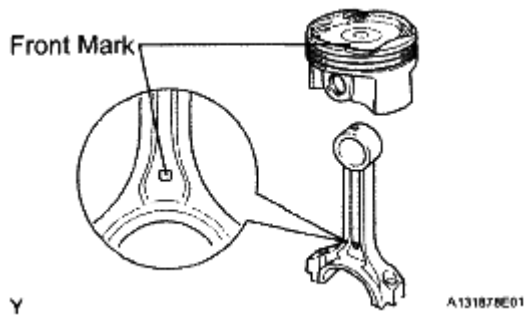

**Fig. 329: Aligning Front Marks Of Piston And Connecting Rod**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- e. Check the fitting condition between the piston and piston pin by trying to move the piston back and forth on the piston pin.

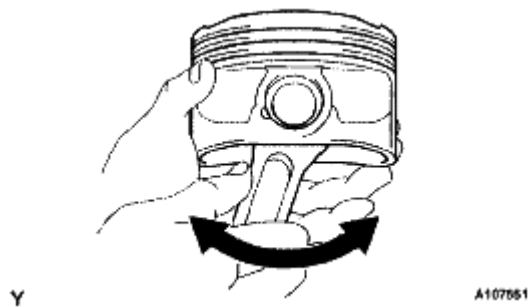


**Fig. 330: Checking Fitting Condition Between Piston And Piston Pin**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- f. Using a screwdriver, install a new snap ring at the other end of the piston pin hole.

HINT:

Be sure that the end gap of the snap ring is not aligned with the pin hole cutout portion of the piston.



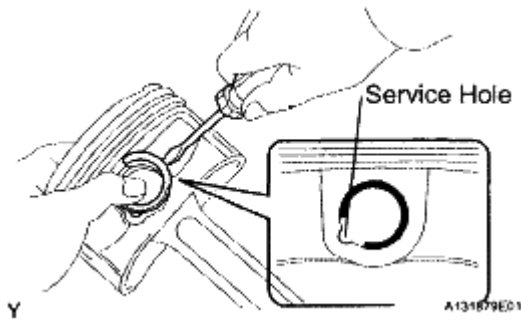


**Fig. 331: Installing Snap Ring**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 5. INSTALL PISTON RING SET

- Install the oil ring expander and 2 side rails by hand.
- Using a piston ring expander, install the oil ring rail as shown in the illustration.

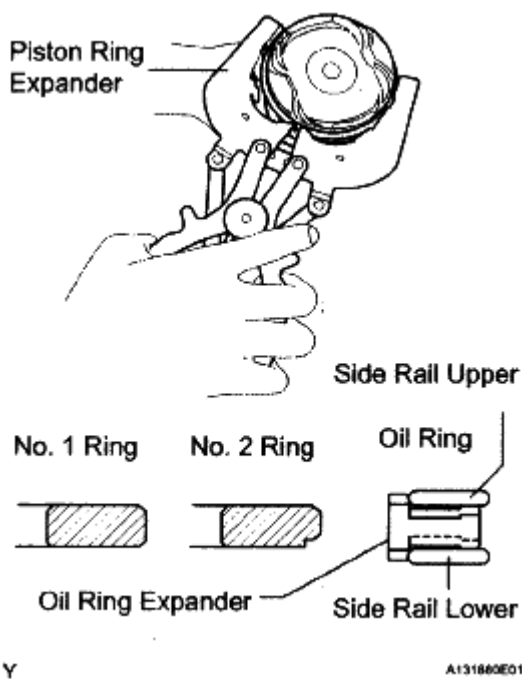


**Fig. 332: Installing Oil Ring Rail**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- Position the piston rings so that the ring ends are as shown in the illustration.

**NOTE:** Do not align the ring ends.

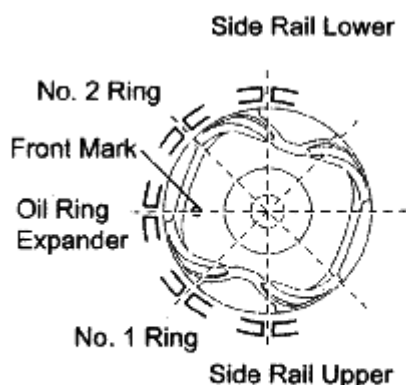

Y

A131881E01

**Fig. 333: Identifying Piston Rings**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


**6. INSTALL CRANKSHAFT BEARING**

- a. Clean the main journal and both surfaces of the bearing.


**NOTE:** Main bearings come in widths between 18.0 mm (0.709 in.) and 21.0 mm (0.827 in.). Install the 21.0 mm (0.827 in.) bearings in the No. 1 and No. 4 cylinder block journal positions with the main bearing cap. Install the 18.0 mm (0.709 in.) bearings in the No. 2 and No. 3 positions.

No. 1 and No. 4  
Journal Bearing

No. 2 and No. 3  
Journal Bearing

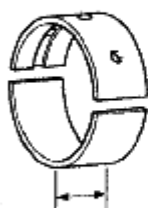

21.0 mm  
(0.827 in.)

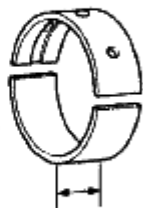

18.0 mm  
(0.709 in.)

A124282E02


**Fig. 334: Identifying Journal Bearings Diameter**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Install the upper bearing.
  1. Install the upper bearings to the cylinder block as shown in the illustration.

**NOTE:**

- Do not apply engine oil to the bearings and the contact surfaces.
- Both sides of the oil groove in the cylinder block should be visible through the oil feed holes in the bearing. The amount visible on each side of the holes should be equal.

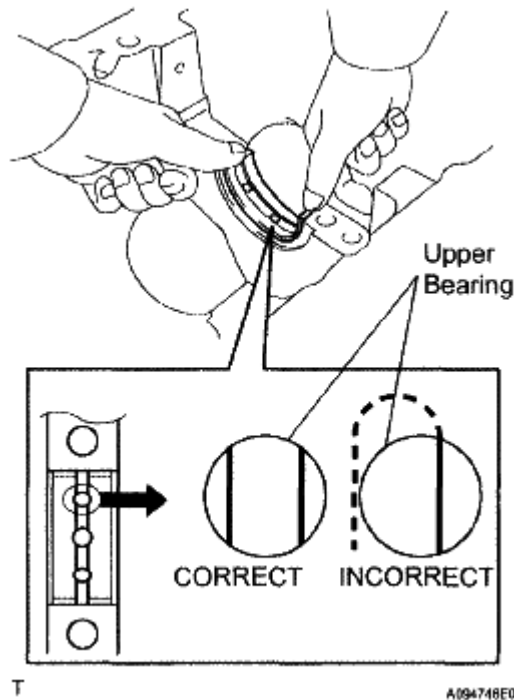

**Fig. 335: Installing Upper Bearing**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


- Install the lower bearing.
  - Install the lower bearings to the bearing caps.
  - Using vernier calipers, measure the distance between the bearing cap's edge and the lower bearing's edge.

**Dimension (A - B):**

**0.7 mm (0.0276 in.) or less**

**NOTE:**


**Do not apply engine oil to the bearings and the contact surfaces.**

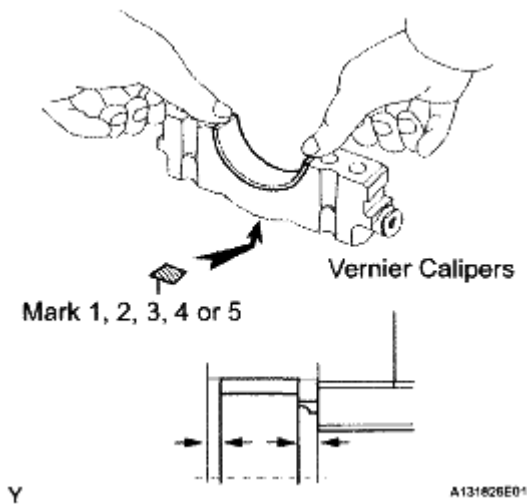

**Fig. 336: Installing Lower Bearing To Bearing Cap**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

#### 7. INSTALL CRANKSHAFT THRUST WASHER SET

- Apply engine oil to the crankshaft thrust washer.
- Install the 2 thrust washers under the No. 2 journal position of the cylinder block with the oil grooves facing outward.

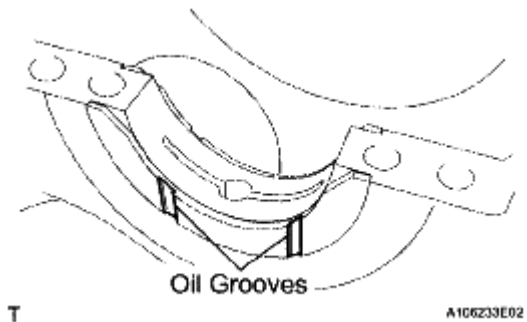


**Fig. 337: Identifying Oil Grooves**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

#### 8. INSTALL CRANKSHAFT

- Apply engine oil to the upper bearing, then place the crankshaft on the cylinder block.
- Confirm the projection and numbers of the main bearing caps and install the bearing caps on the cylinder block.

HINT:

A number is marked on each main bearing cap to indicate the installation position.


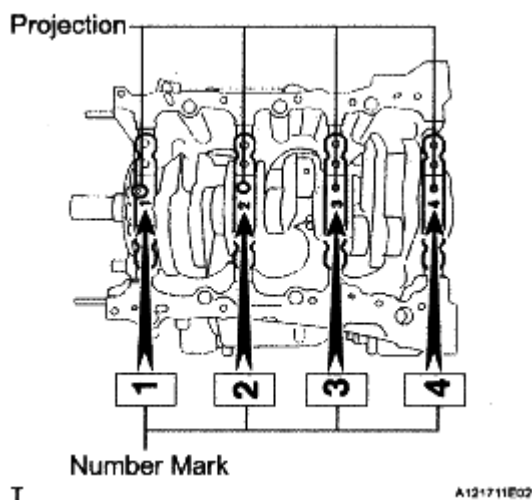


**Fig. 338: Confirming Projection And Numbers Of Main Bearing Caps**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- Apply a light coat of engine oil to the threads and under the heads of the bearing cap bolts.
- Temporarily install the 8 main bearing cap bolts to the inside positions.
- Insert the main bearing cap with your hand until the clearance between the main bearing cap and the cylinder block is less than 6 mm (0.23 in.) by marking the 2 internal bearing cap bolts as a guide.

**Bolt length:**

**100 to 102 mm (3.94 to 4.02 in.)**

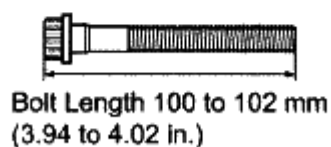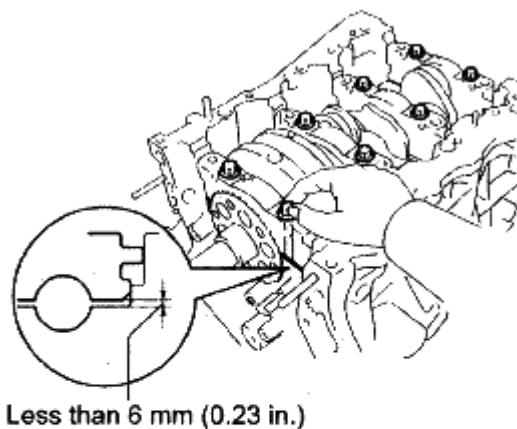


A134893E01

**Fig. 339: Identifying Bolt Length**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- f. Using a plastic hammer, lightly tap the bearing cap to ensure a proper fit.

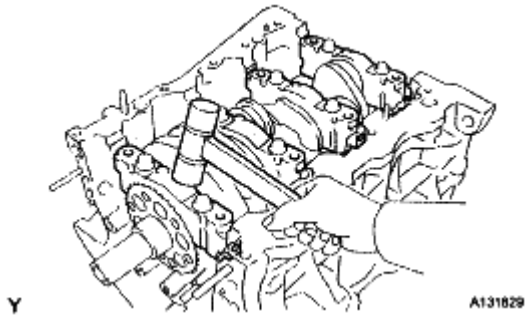**Fig. 340: Tapping Bearing Cap To Ensure Proper Fit**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- g. Apply a light coat of engine oil to the threads and under the heads of the 8 main bearing cap bolts.  
h. Install the 8 main bearing cap bolts to the outside positions.



Bolt Length 105.5 to 107.5 mm  
(4.15 to 4.23 in.)

A134894E01

**Fig. 341: Identifying Main Bearing Cap Bolt Length**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- i. Install the crankshaft bearing cap bolts.

HINT:


The main bearing cap bolts are tightened in 2 progressive steps.

j. Step 1

1. Install and uniformly tighten the 16 main bearing cap bolts in the sequence shown in the illustration.

**Torque: 61 N\*m (622 kgf\*cm, 45 ft.\*lbf)**


If any of the main bearing cap bolts does not meet the torque specified, replace it.

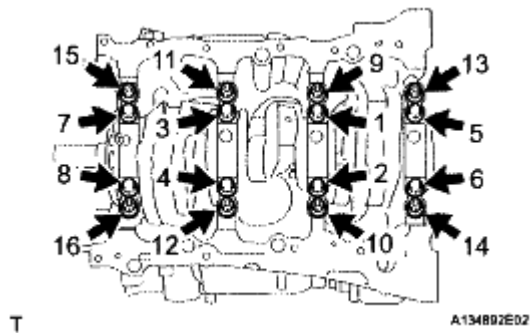

**Fig. 342: Locating Main Bearing Cap Bolts Loosening Sequence**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

k. Step 2


1. Mark the front of the bearing cap bolts with paint.
2. Retighten the bearing cap bolts by 90° in the order above.
3. Check that the painted mark is now at a 90° angle to the front.

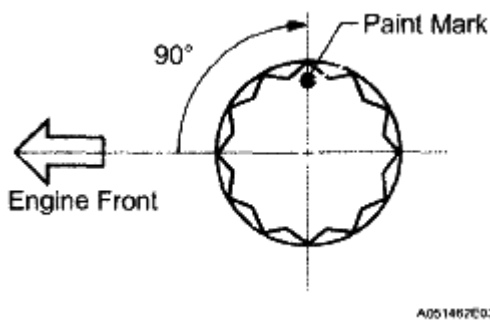

**Fig. 343: Retightening Bearing Cap Bolts An Additional 90°**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

1. Install 8 new seal washers and uniformly tighten the 8 main bearing cap bolts in several steps and in the sequence shown in the illustration.

**Torque: 52 N\*m (525 kgf\*cm, 38 ft.\*lbf)**

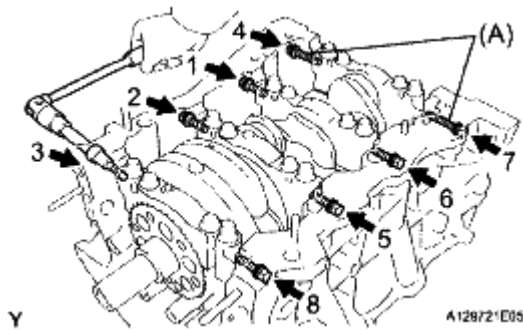

**Fig. 344: Locating Main Bearing Cap Tightening Sequence**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### Bolt length

#### BOLT LENGTH

Item	Length
Bolt A	45 mm (1.77 in.)
Except bolt A	30 mm (1.18 in.)

- m. Check that the crankshaft turns smoothly.
- n. Check the crankshaft thrust clearance (See **INSPECTION**).

### 9. INSTALL CONNECTING ROD BEARING


- a. Install the connecting rod bearing to the connecting rod and bearing cap.
- b. Using vernier calipers, measure the distance between the connecting rod's and bearing cap's edges and the connecting rod bearing's edge.

#### Dimension (A - B):

**0.7 mm (0.0276 in.) or less**

**NOTE:** Do not apply engine oil to the bearings and the contact surfaces.



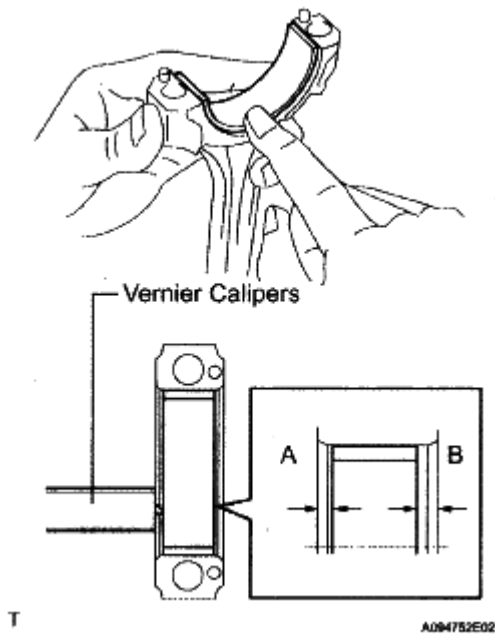


**Fig. 345: Measuring Distance Between Connecting Rod's And Bearing Cap's Edges And Connecting Rod Bearing's Edge**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**10. INSTALL PISTON SUB-ASSEMBLY WITH CONNECTING ROD**

- Apply engine oil to the cylinder walls, the pistons, and the surfaces of the connecting rod bearings.
- Position the piston rings so that the ring ends are as shown in the illustration.

**NOTE: Do not align the ring ends.**

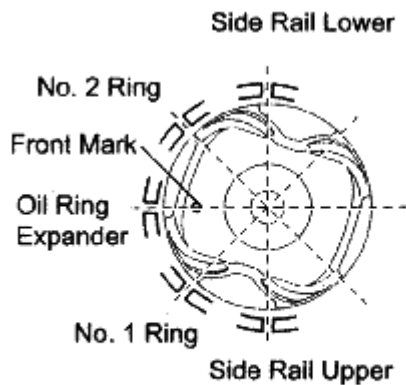


**Fig. 346: Identifying Piston Rings Gap Position**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- Using a piston ring compressor, push the correctly numbered piston and connecting rod assembly


into the cylinder with the front mark of the piston facing forward.

**NOTE:** Match the numbered connecting rod cap with the connecting rod.

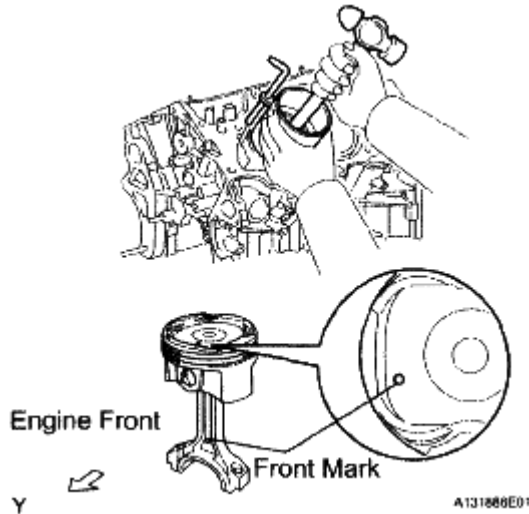

**Fig. 347: Pushing Piston And Connecting Rod Assembly Into Cylinder**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Check that the front mark of the connecting rod cap is facing forward.

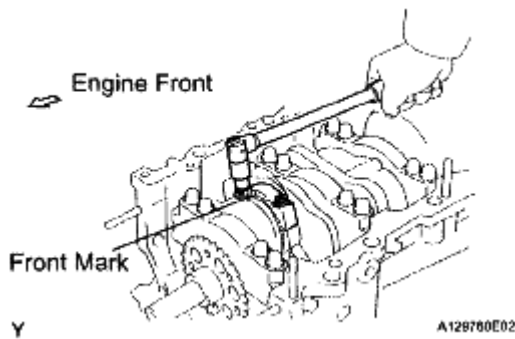

**Fig. 348: Identifying Front Mark Of Connecting Rod Cap**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


- e. Apply a light coat of engine oil to the threads and under the heads of the connecting rod cap bolts.  
f. Install the connecting cap bolts.

**HINT:**

The connecting cap bolts are tightened in 2 progressive steps.

- g. Step 1  
1. Install and alternately tighten the bolts of the connecting rod cap in several steps.

**Torque: 25 N\*m (255 kgf\*cm, 18 ft.\*lbf)**

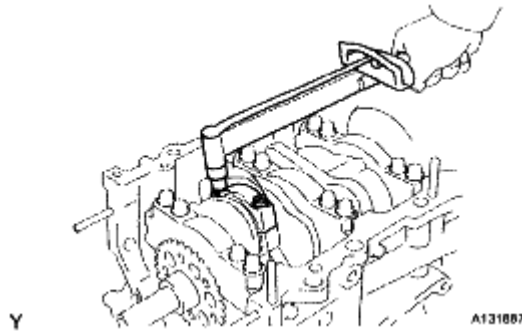


**Fig. 349: Tightening Connecting Cap Bolts**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

h. Step 2

1. Mark the front side of each connecting cap bolt with paint.
2. Retighten the cap bolts by 90° as shown in the illustration.
3. Check the painted mark is now at a 90° angle to the front.

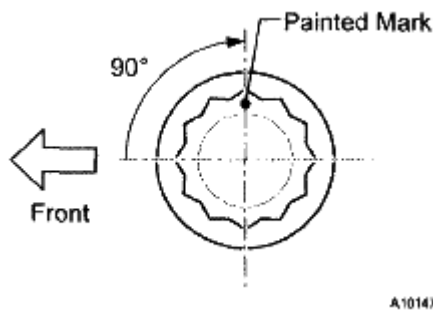

**Fig. 350: Retightening Connecting Rod Cap Bolts An Additional 90°**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- i. Check that the crankshaft turns smoothly.
- j. Check the connecting rod thrust clearance (See **INSPECTION**).

**11. INSTALL INTAKE VALVE GUIDE BUSH**

- a. Using a caliper gauge, measure the bush bore diameter of the cylinder head.



**Fig. 351: Checking Bush Bore Diameter Of Cylinder Head**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**Cylinder bore diameter:**

**10.285 to 10.306 mm (0.4049 to 0.4057 in.)**

**Select a new guide bush (STD or O/S 0.05)**

**BUSH BORE DIAMETER**

Bush size	Bush bore diameter
STD	10.285 to 10.306 mm (0.4049 to 0.4057 in.)
O/S 0.05	10.335 to 10.356 mm (0.4069 to 0.4077 in.)

If the bush bore diameter of the cylinder head is greater than 10.306 mm (0.4057 in.), machine the bush bore to the dimension of 10.335 to 10.356 mm (0.4069 to 0.4077 in.) to install a O/S 0.05 valve guide bush.


If the bush bore diameter of the cylinder head is greater than 10.356 mm (0.4077 in.), replace the cylinder head.

- Heat the cylinder head to 80 to 100°C (176 to 212°F).
- Place the cylinder head on wooden blocks.
- Using SST, tap in new valve guide bushes to the specified protrusion height.

**SST 09201 -10000 (09201 -01050), 09950-70010 (09951-07100)**

**Protrusion height:**

**9.30 to 9.70 mm (0.3661 to 0.3819 in.)**

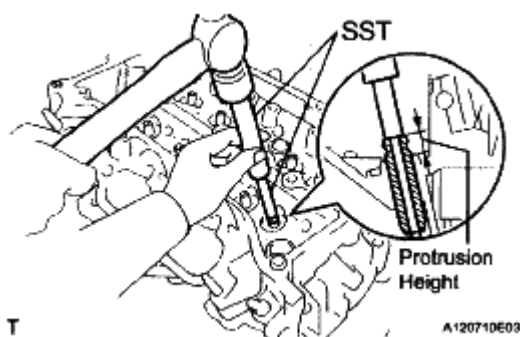


**Fig. 352: Taping In Valve Guide Bushes**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- e. Using a sharp 5.5 mm reamer, ream the valve guide bushings to obtain the specified clearance.

**Standard oil clearance:**

**0.025 to 0.060 mm (0.0010 to 0.0023 in.)**

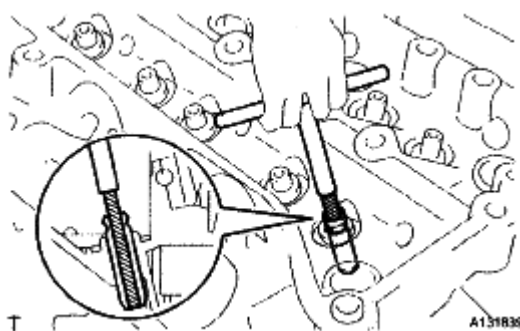

**Fig. 353: Reaming Valve Guide Bush**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 12. INSTALL EXHAUST VALVE GUIDE BUSH

- a. Using a caliper gauge, measure the bush bore diameter of the cylinder head.



**Fig. 354: Checking Bush Bore Diameter Of Cylinder Head**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**Cylinder bore diameter:**

**10.285 to 10.306 mm (0.4049 to 0.4057 in.)**

**Select a new guide bush (STD or O/S 0.05)**

**BUSH BORE DIAMETER**

Bush size	Bush bore diameter
STD	10.285 to 10.306 mm (0.4049 to 0.4057 in.)
O/S 0.05	10.335 to 10.356 mm (0.4069 to 0.4077 in.)

If the bush bore diameter of the cylinder head is greater than 10.306 mm (0.4057 in.), machine the bush bore to the dimension of 10.335 to 10.356 mm (0.4069 to 0.4077 in.) to install a O/S 0.05 valve guide bush.


If the bush bore diameter of the cylinder head is greater than 10.356 mm (0.4077 in.), replace the cylinder head.

- Heat the cylinder head to 80 to 100°C (176 to 212°F).
- Place the cylinder head on wooden blocks.
- Using SST, tap in new valve guide bushes to the specified protrusion height.

**SST 09201 -10000 (09201 -01050), 09950-70010 (09951-07100)**

**Protrusion height:**

**9.30 to 9.70 mm (0.3661 to 0.3819 in.)**

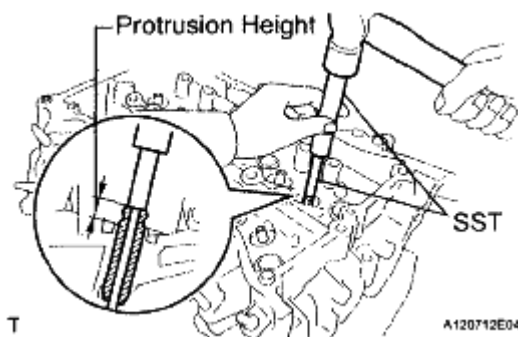


**Fig. 355: Tapping Valve Guide Bushes**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- Using a sharp 5.5 mm reamer, ream the valve guide bushings to obtain the specified clearance.

**Standard oil clearance:**

**0.030 to 0.065 mm (0.0012 to 0.0026 in.)**

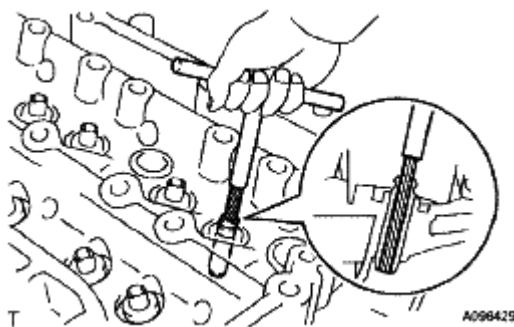

**Fig. 356: Reaming Valve Guide Bushing**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


### 13. INSTALL RING PIN

- a. Using a plastic hammer, tap in new ring pins to the specified protrusion height.


**Specified protrusion height:**

**2.5 to 3.5 mm (0.098 to 0.138 in.)**

**RH Bank:**

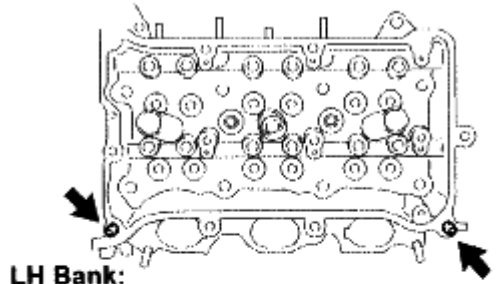

**LH Bank:**

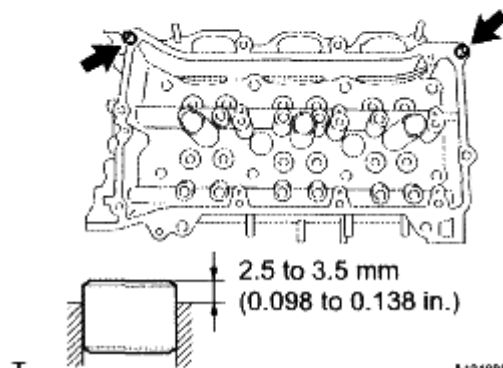


**Fig. 357: Installing Ring Pin**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### 14. INSTALL NO. 1 STRAIGHT SCREW PLUG


- a. Using a 10 mm hexagon wrench, install 4 new gaskets and the straight screw plugs.

**Torque: 44 N\*m (449 kgf\*cm, 32 ft.\*lbf)**

**RH Bank:**

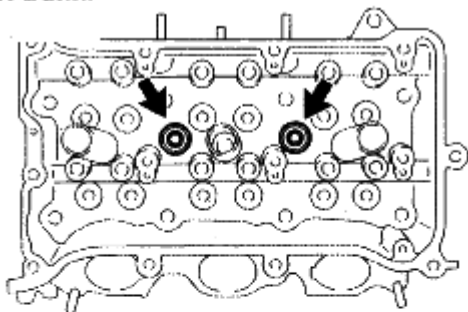

**LH Bank:**

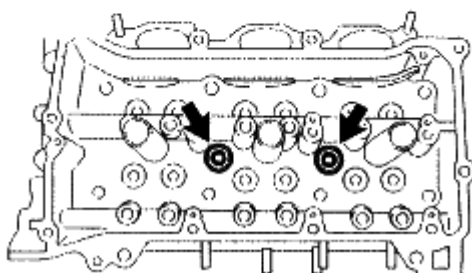

T

A129718E01

**Fig. 358: Identifying No. 1 Straight Screw Plugs**


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**15. INSTALL NO. 2 STRAIGHT SCREW PLUG**

- a. Using a 14 mm hexagon wrench, install 2 new gaskets and the 2 straight screw plugs.

**Torque: 80 N\*m (816 kgf\*cm, 59 ft.\*lbf)**



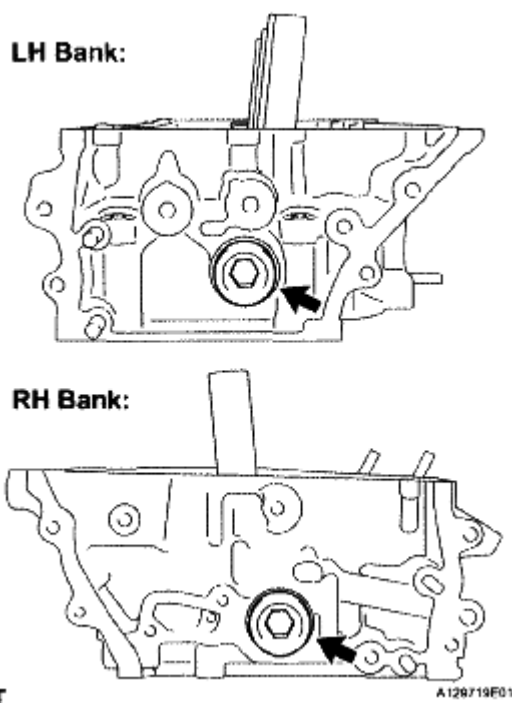

**Fig. 359: Installing No. 2 Straight Screw Plugs**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 16. INSTALL STUD BOLT

**NOTE:** If the stud bolt is deformed or the threads are damaged, replace it.

- a. Using E6 and E8 "torx" sockets, install the stud bolts.


### **Torque:**

**10 N\*m (102 kgf\*cm, 7 ft.\*lbf) for bolts A and B**

**4.0 N\*m (41 kgf\*cm, 35 in.\*lbf) for bolt C**

## 2007 Toyota Camry XLE

2007 ENGINE Engine Mechanical (2GR-FE) - Camry

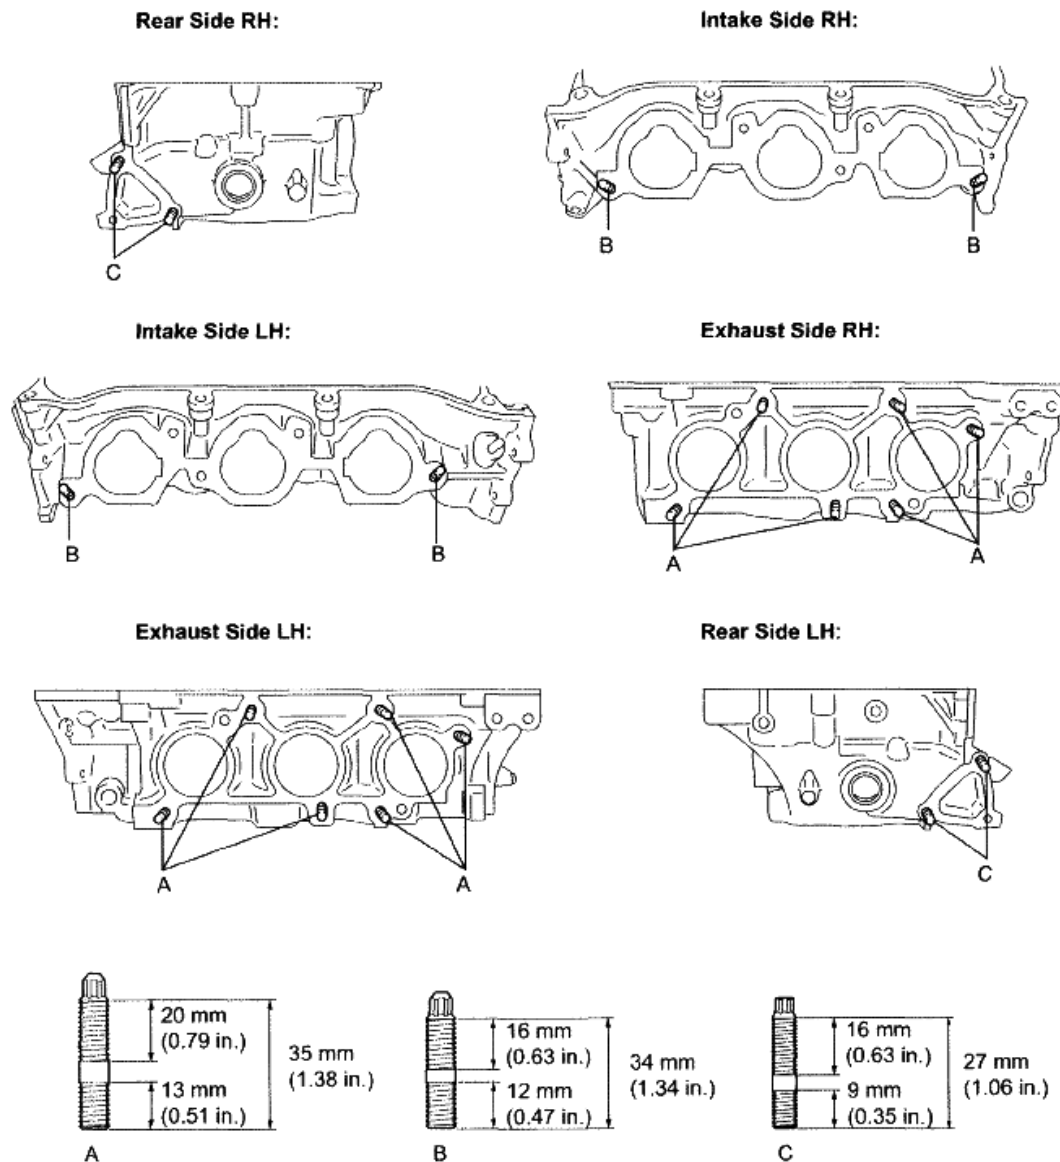

T

A134987E01

**Fig. 360: Identifying Stud Bolts Installation Position**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### 17. INSTALL STRAIGHT PIN

- Using a plastic hammer, tap in new straight pins as shown in the illustration.

**Protrusion height:**

**17.5 to 19.5 mm (0.689 to 0.768 in.)**



**Fig. 361: Identifying Straight Pin Position**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**18. INSTALL VALVE SPRING SEAT**

- a. Install the valve spring seats to the cylinder head.


**19. INSTALL VALVE STEM OIL SEAL**

- a. Apply a light coat of engine oil to new oil seals.

**NOTE:** Pay attention when installing the intake and exhaust oil seals. For example, installing the intake oil seal into the exhaust side or installing the exhaust oil seal to the intake side can cause installation problems later.

**HINT:**

The intake valve oil seals are gray and the exhaust valve oil seals are black.

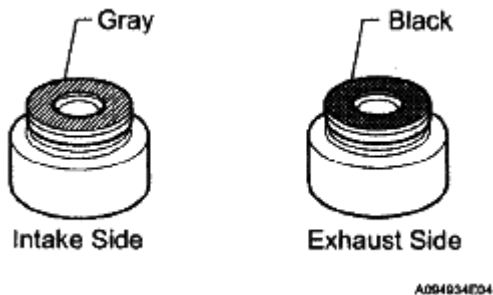


**Fig. 362: Identifying Intake And Exhaust Valve Oil Seals**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Using SST, push in the oil seals.

**SST 09201-41020**


**NOTE:** Failure to use SST will cause the seal to be damaged or improperly seated.

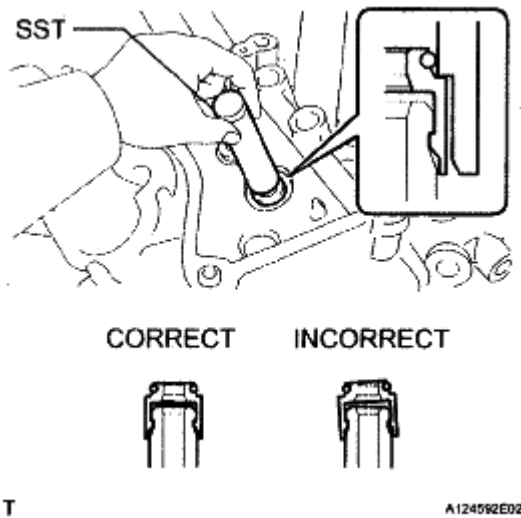

**Fig. 363: Pushing In Oil Seals Using SST**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 20. INSTALL EXHAUST VALVE

- Apply a sufficient coat of engine oil to the tip area of the intake valve shown in the illustration.

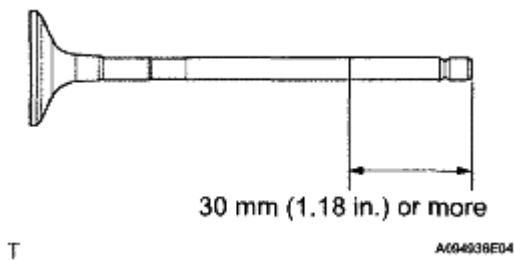


**Fig. 364: Identifying Intake Valve Tip Area Length**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- Install the valve, compression spring and spring retainer to the cylinder head.

**NOTE:** Install the same parts in the same combination to the original locations.

- Using SST, compress the spring and install the 2 retainer locks.


**SST 09202-70020 (09202-00010)**

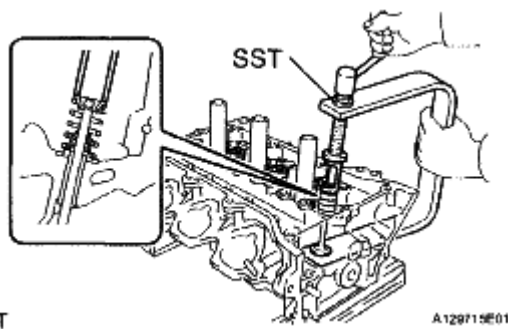

**Fig. 365: Compressing Spring**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Using a plastic hammer, lightly tap the valve stem tip to ensure a proper fit.


**NOTE:** Be careful not to damage the retainer.

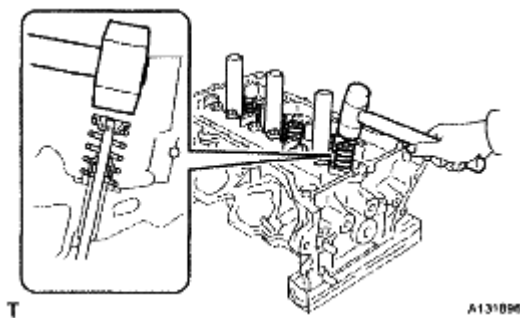

**Fig. 366: Tapping Valve Stem Tip To Ensure Proper Fit**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 21. INSTALL INTAKE VALVE

- a. Apply a sufficient coat of engine oil to the tip area of the intake valve shown in the illustration.

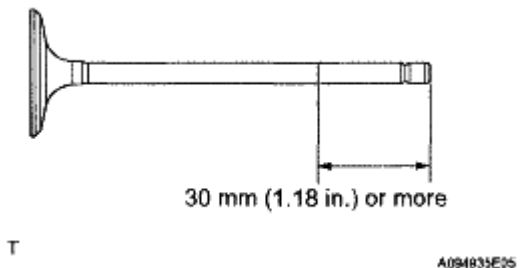


**Fig. 367: Identifying Intake Valve Tip Area Length**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Install the valve, compression spring and spring retainer to the cylinder head.

**NOTE:** Install the same parts in the same combination to the original locations.

- c. Using SST, compress the spring and install the 2 retainer locks.

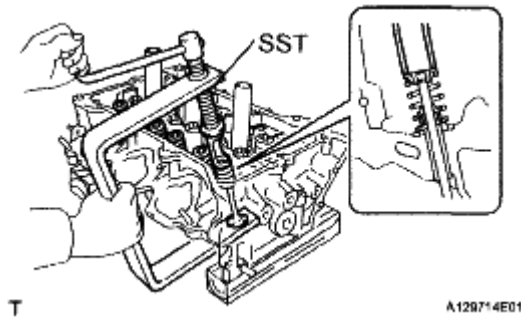


**Fig. 368: Compressing Spring Using SST**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

SST 09202-70020 (09202-00010)

- d. Using a plastic hammer, lightly tap the valve stem tip to ensure a proper fit.

**NOTE:** Be careful not to damage the retainer.

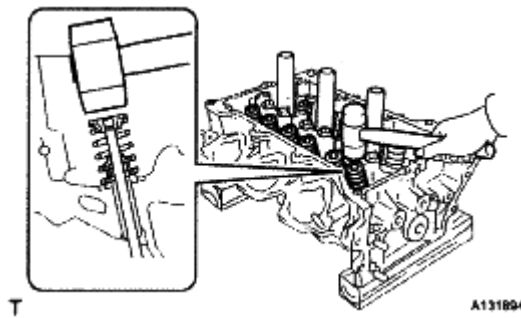

**Fig. 369: Tapping Valve Stem Tip To Ensure Proper Fit**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 22. INSTALL VALVE STEM CAP

- Apply a light coat of engine oil to the valve stem caps.
- Install the valve stem caps on the valves.


## 23. INSTALL ENGINE REAR OIL SEAL

- Place the oil seal retainer on wooden blocks.
- Using SST, tap in a new oil seal until its surface is flush with the oil seal retainer edge.

SST 09223-15030, 09950-70010 (09951 -07100)

**NOTE:**

- Keep the lip free of foreign matter.
- Do not tap on the oil seal at an angle.

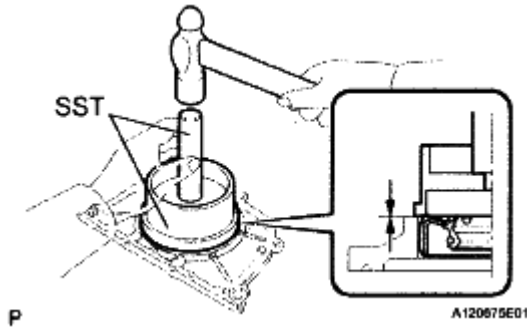

**Fig. 370: Installing Engine Rear Oil Seal**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**24. INSTALL ENGINE REAR OIL SEAL RETAINER**

- Apply seal packing in a continuous line as shown in the illustration.

**Seal packing:**


Toyota Genuine Seal packing Black, Three Bond 1207B or equivalent

**Seal Diameter:**

2.0 to 3.0 mm (0.079 to 0.118 in.)

**NOTE:**

- Remove any oil from the contact surface.
- Install the oil seal retainer within 3 minutes after applying seal packing.
- Do not start the engine for at least 2 hours after installation.

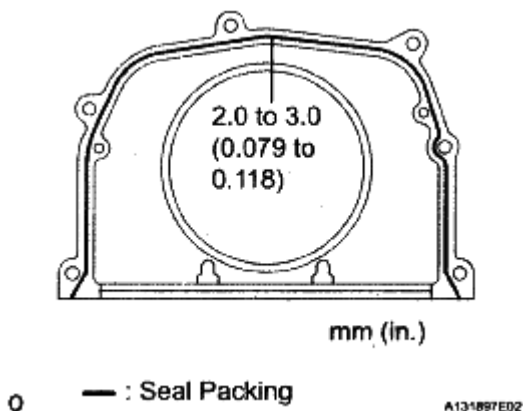

**Fig. 371: Identifying Seal Packing**


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Install the oil seal retainer with the 6 bolts.

**Torque: 10 N\*m (102 kgf\*cm, 7 ft.\*lbf)**

**NOTE:** Be sure to apply adhesive 1324 to the bolts in the places indicated by A before installing them. Adhesive:

**Toyota Genuine Adhesive 1324, Three Bond 1324 or Equivalent**

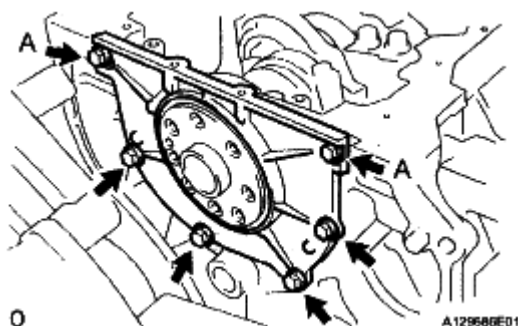


**Fig. 372: Installing Oil Seal Retainer**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 25. INSTALL WATER INLET PIPE

- a. Install the water inlet pipe with the 2 bolts.

**Torque: 10 N\*m (102 kgf\*cm, 7 ft.\*lbf)**

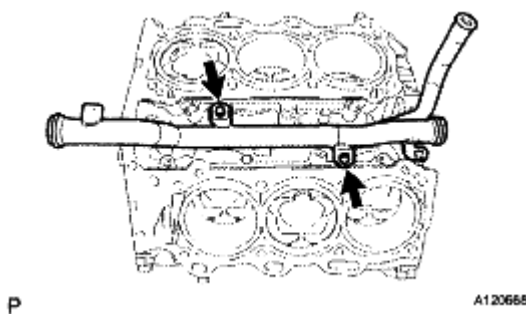

**Fig. 373: Installing Water Outlet Pipe**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Install the water by-pass hose No. 1.


## 26. INSTALL CYLINDER HEAD SUB-ASSEMBLY RH

- a. Place the cylinder head gasket on the cylinder block surface with the Lot No. stamp upward.



**NOTE:**

- Be careful of the installation direction.
- Gently place the cylinder head in order not to damage the gasket with the bottom part of the head.

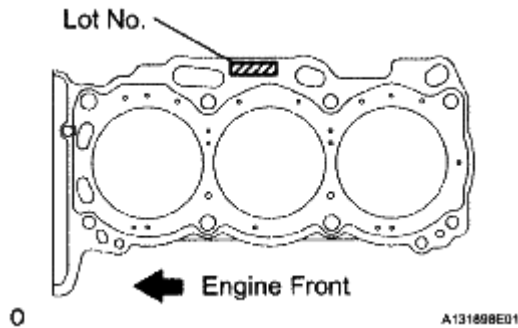

**Fig. 374: Placing Cylinder Head Gasket On Cylinder Block Surface With Front Face**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Place the cylinder head on the cylinder block.

**NOTE:**


**Be careful not to allow oil to adhere to the bottom part of the cylinder head.**

**HINT:**

The cylinder head bolts are tightened in 3 progressive steps.

- c. Apply a light coat of engine oil to the threads and under the heads of the cylinder head bolts.
- d. Step 1
1. Using a 10 mm bi-hexagon wrench, install and uniformly tighten the 8 cylinder head bolts with the plate washers in several steps and in the sequence shown in the illustration.


**Torque: 36 N\*m (367 kgf\*cm, 27 ft.\*lbf)**

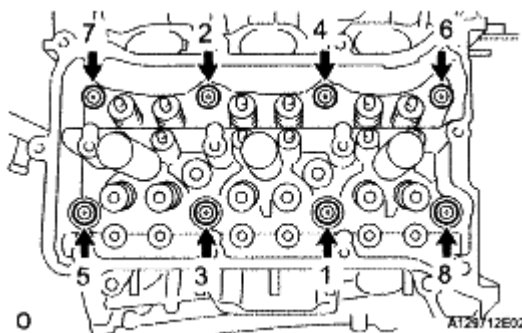

**Fig. 375: Installing Cylinder Head Bolts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

e. Step 2

1. Mark the cylinder head bolt head with paint as shown in the illustration.
2. Tighten the cylinder head bolts another 90°.

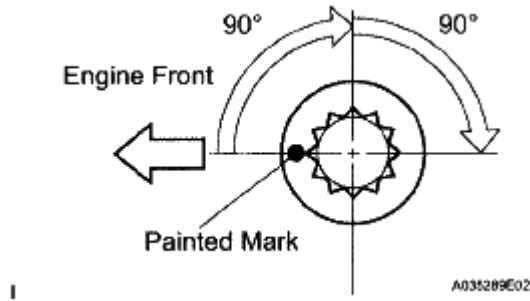

**Fig. 376: Identifying Painted Mark**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

f. Step 3


1. Tighten the cylinder head bolts by an additional 90°.
2. Check that the painted mark is now facing rearward.

**27. INSTALL CYLINDER HEAD SUB-ASSEMBLY LH**

- a. Place the cylinder head gasket on the cylinder block surface with the Lot No. stamp upward.

**NOTE:**

- Be careful of the installation direction.
- Gently place the cylinder head in order not to damage the gasket With the bottom part of the head.

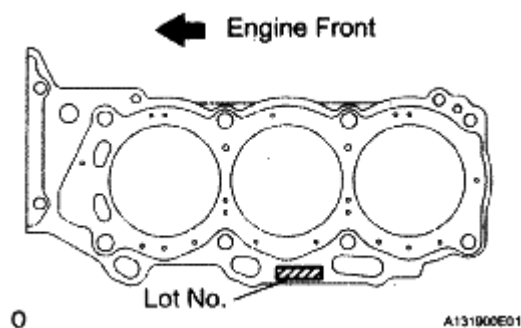

**Fig. 377: Placing Cylinder Head Gasket On Cylinder Block Surface With Front Face**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Place the cylinder head on the cylinder block.

**NOTE:**


**Be careful not to allow oil to adhere to the bottom part of the cylinder head.**

**HINT:**

The cylinder head bolts are tightened in 3 progressive steps.

- c. Apply a light coat of engine oil to the threads and under the heads of the cylinder head bolts.
- d. Step 1
  - 1. Using a 10 mm bi-hexagon wrench, install and uniformly tighten the 8 cylinder head bolts with the plate washers in several steps in the sequence shown in the illustration.


**Torque: 36 N\*m (367 kgf\*cm, 27 ft.\*lbf)**

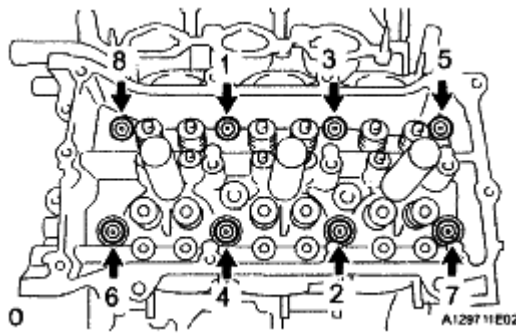

**Fig. 378: Installing Cylinder Head Bolts**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- e. Step 2
  - 1. Mark the cylinder head bolt head with paint as shown in the illustration.
  - 2. Tighten the cylinder head bolts by 90°.

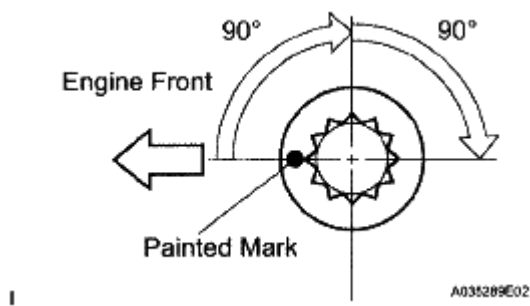


**Fig. 379: Identifying Painted Mark**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- f. Step 3
  - 1. Tighten the cylinder head bolts by an additional 90°.
  - 2. Check that the painted mark is now facing rearward.
- g. Tighten the 2 bolts in the order shown in the illustration.

**Torque: 30 N\*m (306 kgf\*cm, 22 ft.\*lbf)**

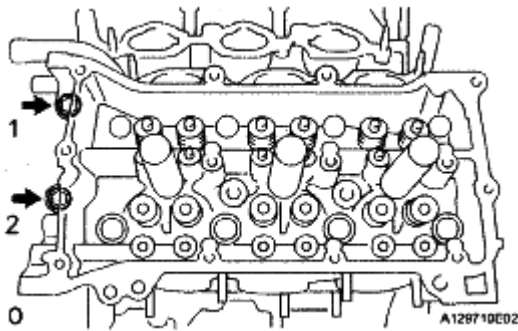

**Fig. 380: Tightening Bolts**


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 28. INSTALL VALVE LASH ADJUSTER ASSEMBLY

**NOTE:**

- Keep the lash adjuster free of dirt and foreign objects.
  - Only use clean engine oil.
- a. Place the lash adjuster into a container filled with engine oil.
  - b. Insert the SST's tip into the lash adjuster's plunger and use the tip to press down on the check ball inside the plunger.

**SST 09276-75010**

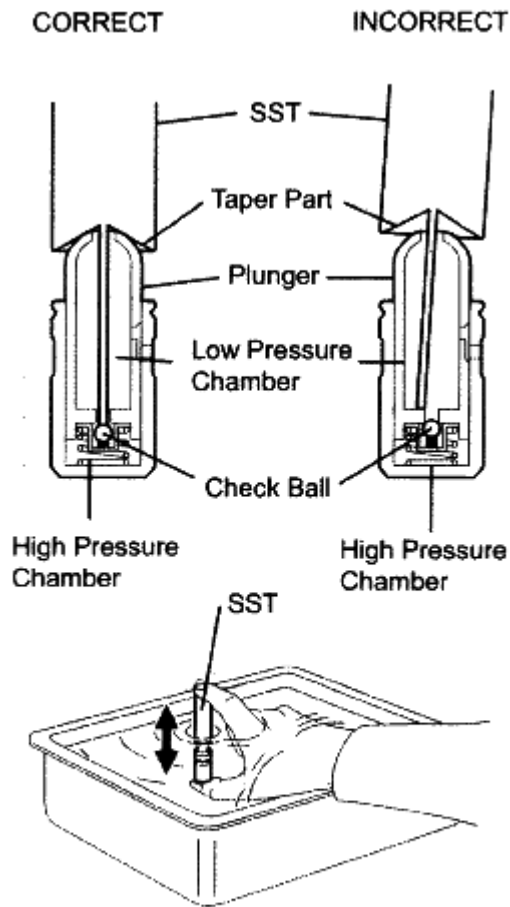

T

A100630ED1

**Fig. 381: Checking Movement Of Plunger And Bleed Air**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Squeeze the SST and lash adjuster together to move the plunger up and down 5 to 6 times.
- d. Check the movement of the plunger and bleed the air.

**OK: GO TO NEXT STEP**

**Plunger moves up and down.**

**NOTE:** When bleeding air from the high-pressure chamber, make sure that the tip of the SST is actually pressing the check ball as shown in the illustration. If the check ball is not pressed, air will not bleed.

- e. After bleeding the air, remove the SST. Then, try to press the plunger quickly and firmly with a finger.

**OK: GO TO NEXT STEP**

Plunger is very difficult to move.


If the result is not as specified, replace the lash adjuster.

- f. Install the lash adjusters.

**NOTE:** Install the lash adjuster to the same place it was removed from.

## 29. INSTALL NO. 1 VALVE ROCKER ARM SUB-ASSEMBLY


- a. Apply engine oil to the lash adjuster tip and valve stem cap end.
- b. Make sure that the valve rocker arms are installed as shown in the illustration.

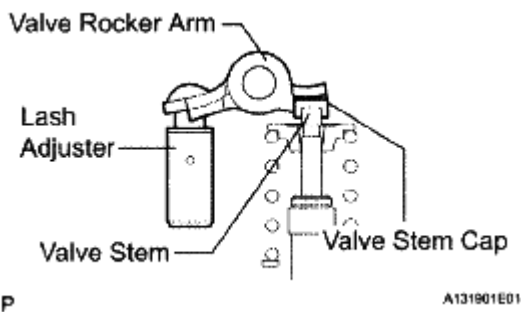

**Fig. 382: Applying Engine Oil To Lash Adjuster Tips And Valve Stem Cap Ends**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 30. INSTALL CAMSHAFT BEARING CAP (for Bank 1)


- a. Apply engine oil to the camshaft journals, camshaft housing and bearing caps.
- b. Install the camshaft and No. 2 camshaft to the camshaft housing RH.
- c. Make sure of the marks and numbers on the camshaft bearing caps and place them in each proper position and direction.

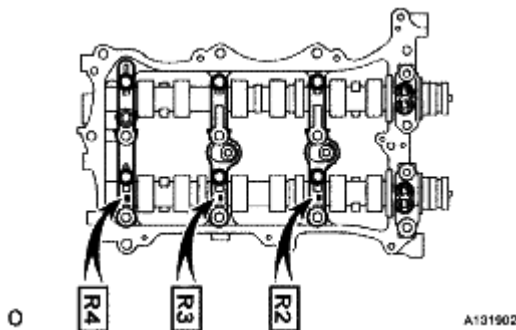

**Fig. 383: Identifying Marks And Numbers On Camshaft Bearing Caps**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Temporarily tighten the 8 bolts in the order shown in the illustration.

**Torque: 10 N\*m (102 kgf\*cm, 7 ft.\*lbf)**

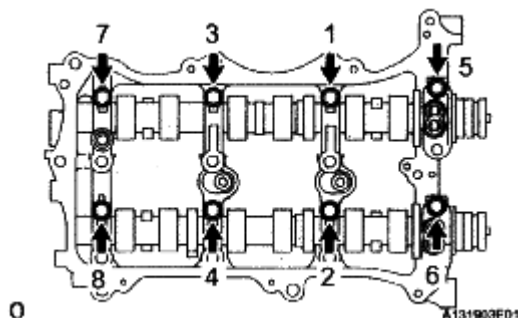


**Fig. 384: Tightening Bolts In Sequence**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### 31. INSTALL CAMSHAFT HOUSING SUB-ASSEMBLY RH

- Make sure that the valve rocker arm is installed as shown in the illustration.

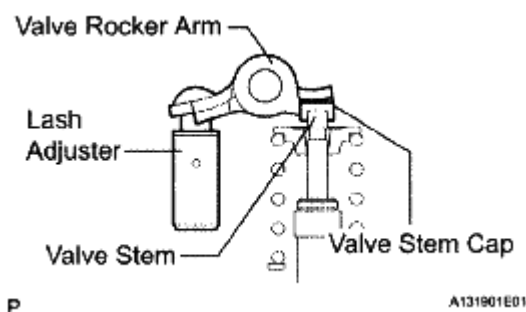

**Fig. 385: Applying Engine Oil To Lash Adjuster Tips And Valve Stem Cap Ends**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


- Apply seal packing in a continuous line as shown in the illustration.

**Seal packing:**

**Toyota Genuine Seal Packing Black, Three Bond 1207B or equivalent**

**Seal diameter:**

**3.5 to 4.5 mm (0.138 to 0.177 in.)**

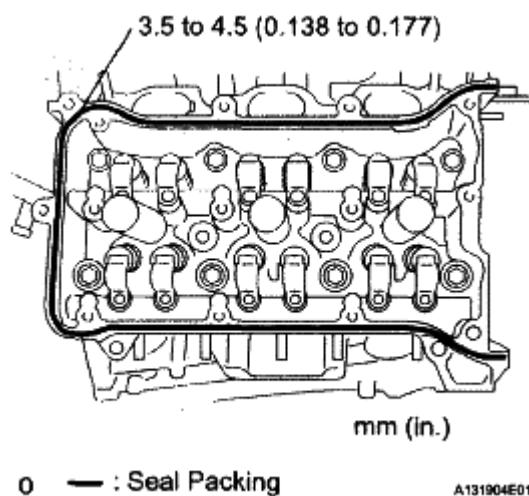


**Fig. 386: Applying Seal Packing In Continuous Bead**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**NOTE:**

- Remove any oil from the contact surface.
- Install the camshaft housing sub-assembly RH within 3 minutes.
- Do not start the engine for at least 2 hours after installing.

- c. Install the camshaft housing RH and tighten the 12 bolts in the order shown in the illustration.

**Torque: 28 N\*m (286 kgf\*cm, 21 ft.\*lbf)**

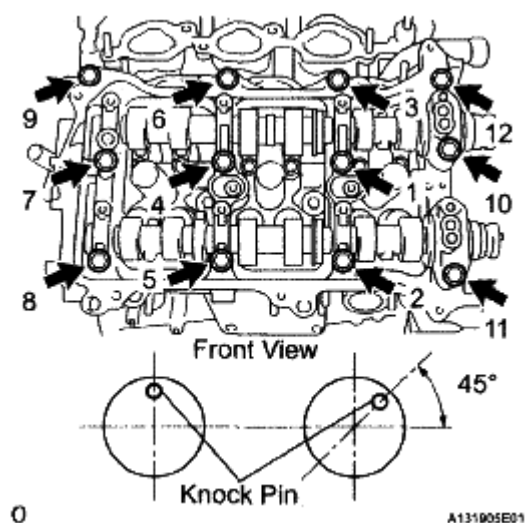

**Fig. 387: Tightening Bolts In Sequence**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**NOTE:**

- When installing the camshaft housing RH, it is necessary to correctly position the camshafts as shown in the illustration.




Failure to correctly position these parts may result in damage due to contact between the pistons and valves. If a camshaft is rotated with a piston at TDC, valve contact will occur.

- If any of the bolts are loosened during installation, remove the camshaft housing, clean the installation surfaces, and reapply seal packing.
- If the camshaft housing is removed because any of the bolts are loosened during installation, make sure that the previously applied seal packing does not enter any oil passages.

d. Tighten the 8 bolts in the order shown in the illustration.

**Torque: 16 N\*m (163 kgf\*cm, 12 ft.\*lbf)**

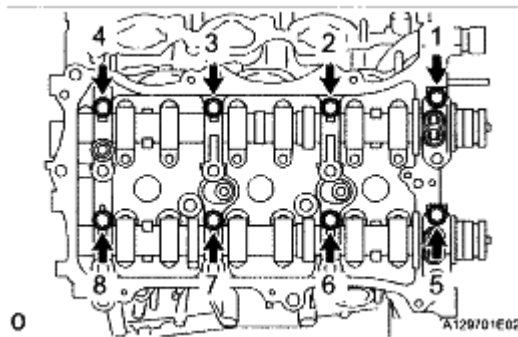


**Fig. 388: Tightening Bolts In Sequence**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### 32. INSTALL CAMSHAFT BEARING CAP (for Bank 2)

- Apply engine oil to the camshaft journals, camshaft housing and bearing caps.
- Install the No. 3 camshaft and No. 4 camshaft to the camshaft housing LH.
- Make sure of the marks and numbers on the camshaft bearing caps and place them in each proper position and direction.

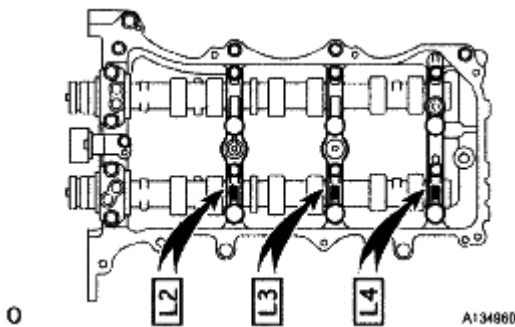


**Fig. 389: Identifying Marks And Numbers On Camshaft Bearing Caps**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Temporarily tighten the 8 bolts in the order shown in the illustration.

**Torque: 10 N\*m (102 kgf\*cm, 7 ft.\*lbf)**

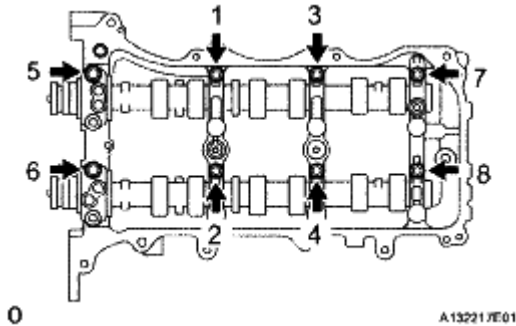


**Fig. 390: Tightening Bolts In Sequence**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**33. INSTALL CAMSHAFT HOUSING SUB-ASSEMBLY LH**

- a. Make sure that the valve rocker arm is installed as shown in the illustration.

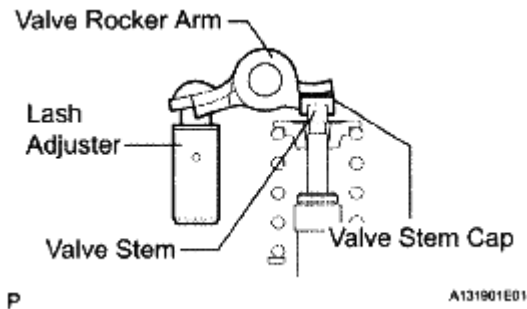

**Fig. 391: Applying Engine Oil To Lash Adjuster Tips And Valve Stem Cap Ends**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


- b. Apply seal packing in a continuous fine as shown in the illustration.

**Seal packing:**

**Toyota Genuine Seal Packing Black, Three Bond 1207B or equivalent**

**Seal diameter:**

**3.5 to 4.5 mm (0.138 to 0.177 in.)**

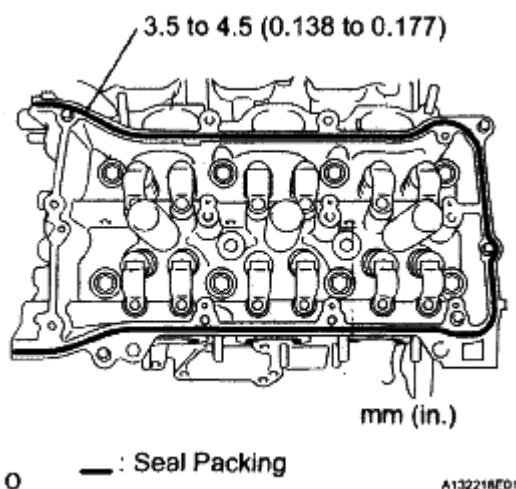

**Fig. 392: Applying Seal Packing**


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**NOTE:**

- Remove any oil from the contact surface.
- Install the camshaft housing sub-assembly LH within 3 minutes.
- Do not start the engine for at least 2 hours after installing.

- c. Install the camshaft housing LH and tighten the 13 bolts in the order shown in the illustration.

**Torque: 28 N\*m (286 kgf\*cm, 21 ft.\*lbf)**

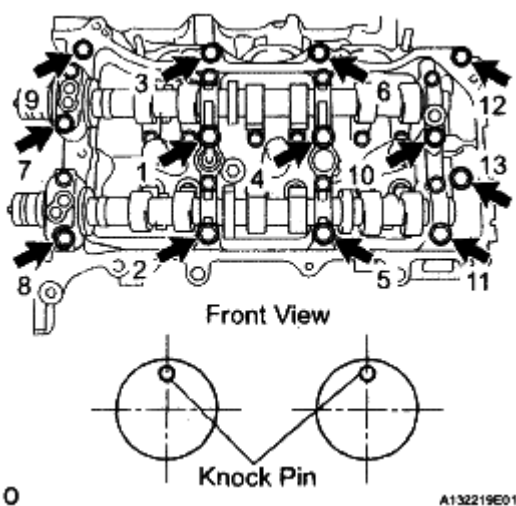

**Fig. 393: Tightening Bolts In Sequence**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**NOTE:**


- When installing the camshaft housing LH, it is necessary to correctly position the camshafts as shown in the illustration.

Failure to correctly position these parts may result in damage due to contact between the pistons and valves. If a camshaft is rotated with a piston at TDC, valve contact will occur.

- if any of the bolts are loosened during installation, remove the camshaft housing, clean the installation surfaces, and reapply seal packing.
- If the camshaft housing is removed because any of the bolts are loosened during installation, make sure that the previously applied seal packing does not enter any oil passages.

d. Tighten the 8 bolts in the order shown in the illustration.

**Torque: 16 N\*m (163 kgf\*cm, 12 ft.\*lbf)**

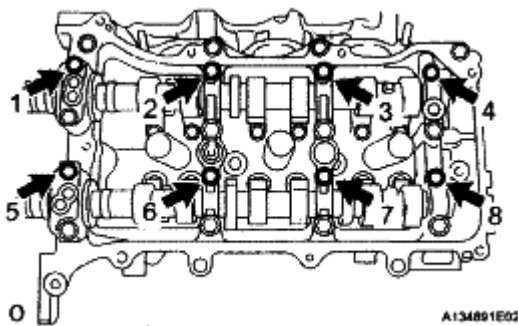

**Fig. 394: Locating Bolts**


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

#### 34. INSTALL NO. 2 CHAIN TENSIONER ASSEMBLY

- a. Install the No. 2 chain tensioner with the bolt.

**Torque: 21 N\*m (214 kgf\*cm, 15 ft.\*lbf)**

- b. While pushing in the tensioner, insert a pin of  $\varnothing$  1.0 mm (0.039 in.) into the hole to fix it.

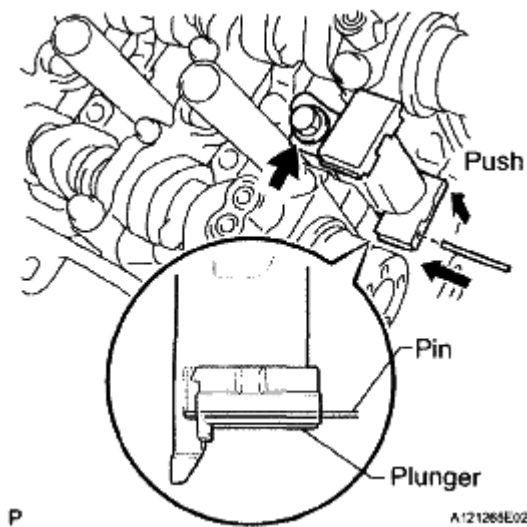


**Fig. 395: Installing No. 2 Chain Tensioner**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**35. INSTALL CAMSHAFT TIMING GEARS AND NO. 2 CHAIN (for Bank 1)**

**CAUTION:** For additional information on timing chain/gear removal guidelines, installation and camshaft timing gear alignment, see 2GR-FE VALVE TIMING PROCEDURE .

- a. Align the mark plate (yellow) with the timing marks (1-dot mark) of the camshaft timing gears as shown in the illustration.

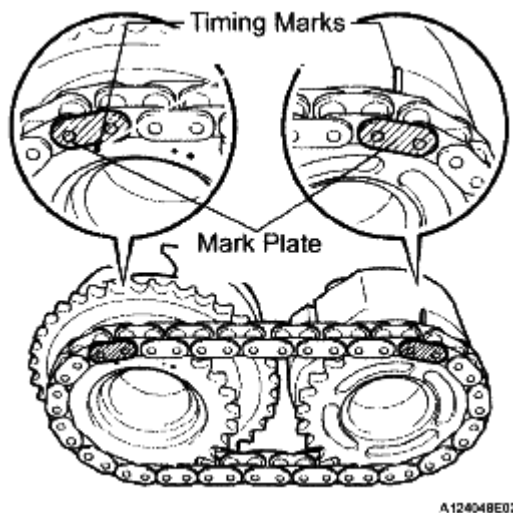


**Fig. 396: Aligning Mark Plate (Yellow) With Timing Marks (1-Dot Mark) Of Camshaft Timing Gears**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Apply a light coat of engine oil to the bolt threads and bolt-seating surface.
- c. Align the knock pin of the camshaft with the pin hole of the camshaft timing gear. Install the camshaft timing gear and camshaft timing exhaust gear RH with the No. 2 chain installed.
- d. Hold the hexagonal portion of the camshaft with a wrench, and tighten the 2 bolts.

**Torque: 100 N\*m (1,020 kgf\*cm, 74 ft.\*lbf)**

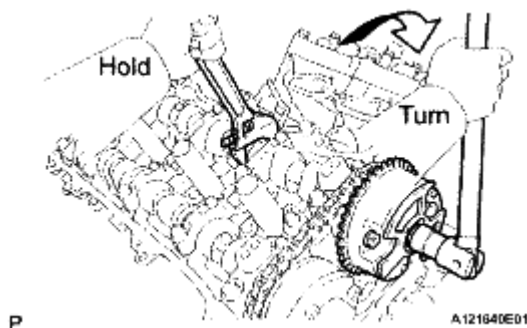


**Fig. 397: Tightening Camshaft Bolt**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- e. Remove the pin from the chain tensioner.
36. **INSTALL NO. 3 CHAIN TENSIONER ASSEMBLY**
- a. Install the chain tensioner with the bolt.

**Torque: 21 N\*m (214 kgf\*cm, 15 ft.\*lbf)**

- b. While pushing in the tensioner, insert a pin of  $\leq 1.0$  mm (0.039 in.) into the hole to hold it.

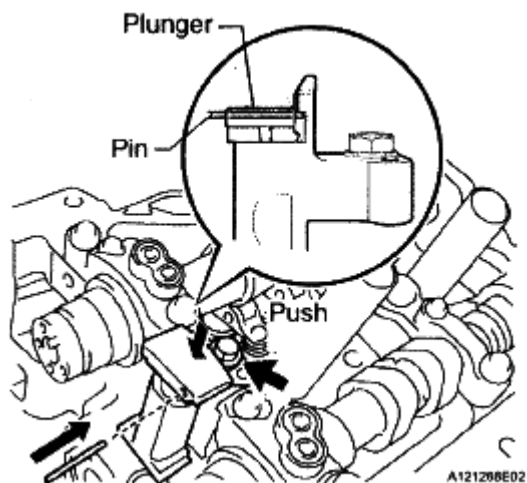


**Fig. 398: Installing No. 3 Chain Tensioner**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**37. INSTALL CAMSHAFT TIMING GEARS AND NO. 2 CHAIN (for Bank 2)**

**CAUTION:** For additional information on timing chain/gear removal guidelines, installation and camshaft timing gear alignment, see 2GR-FE VALVE TIMING PROCEDURE .

- a. Align the mark plate (yellow) with the timing marks (2-dot mark) of the camshaft timing gears as shown in the illustration.

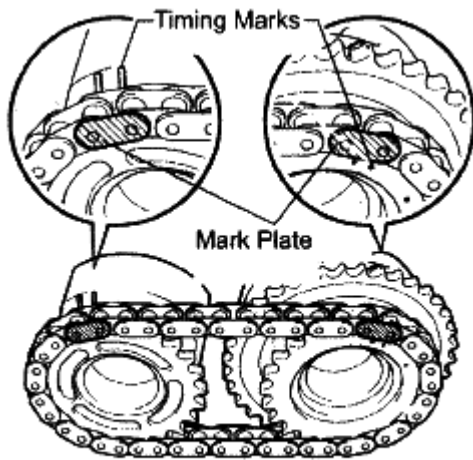


A12M048E03

**Fig. 399: Aligning Mark Plate (Yellow) With Timing Marks (2-Dot Mark) Of Camshaft Timing Gears**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Apply a light coat of engine oil to the bolt threads and bolt-seating surface.
- c. Align the knock pin of the camshaft with the pin hole of the camshaft timing gear. Install the camshaft timing gear and camshaft timing exhaust gear LH with the No. 2 chain installed.
- d. Hold the hexagonal portion of the camshaft with a wrench, and tighten the 2 bolts.

**Torque: 100 N\*m (1,020 kgf\*cm, 74 ft.\*lbf)**

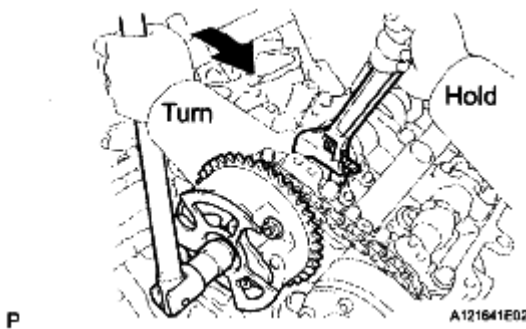

P

A121641E02

**Fig. 400: Holding Hexagonal Portion Of Camshaft Using Wrench**


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- e. Remove the pin from the chain tensioner.

**38. INSTALL NO. 1 CHAIN VIBRATION DAMPER**

- a. Install the chain vibration damper with the 2 bolts.

**Torque: 23 N\*m (230 kgf\*cm, 17 ft.\*lbf)**

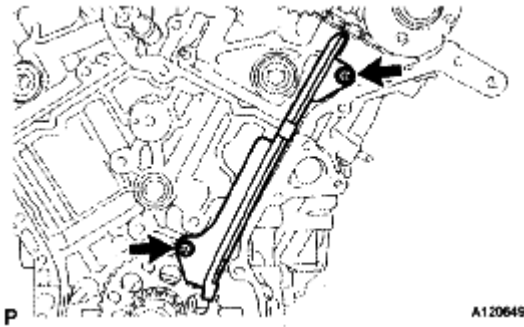


**Fig. 401: Locating Chain Vibration Damper Bolts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**39. INSTALL NO. 2 CHAIN VIBRATION DAMPER**

- a. Install the 2 chain vibration dampers.

**40. INSTALL CRANKSHAFT TIMING SPROCKET**

- a. Install the 2 timing gear set keys and timing sprocket as shown in the illustration.

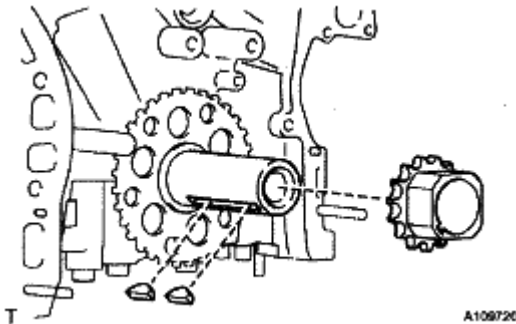

**Fig. 402: Installing Crankshaft Timing Sprocket**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**41. INSTALL IDLE SPROCKET ASSEMBLY**


- a. Apply a light coat of engine oil to the rotating surface of the No. 1 idle gear shaft.
- b. Temporarily install the No. 1 idle gear shaft and idle sprocket with the No. 2 idle gear shaft while aligning the knock pin of the No. 1 idle gear with the knock pin groove of the cylinder block.

**NOTE: Be careful of the idle gear direction.**

**HINT:**



Check that no foreign objects are on the idle gear shafts No. 1 and No. 2.

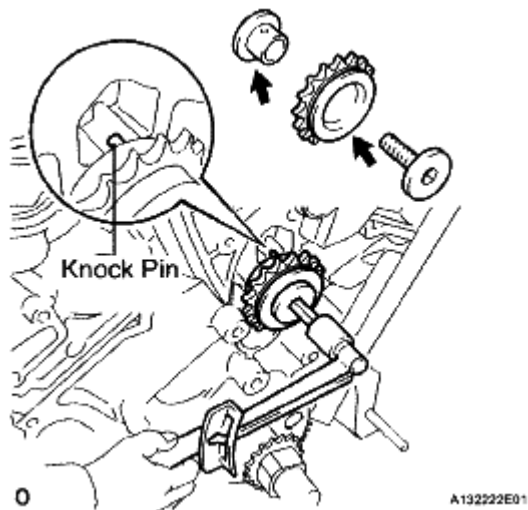

**Fig. 403: Installing Idle Sprocket Assembly**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Using a 10 mm hexagon wrench, tighten the No. 2 idle gear shaft.

**Torque: 60 N\*m (612 kgf\*cm, 44 ft.\*lbf)**

HINT:


After installing the idle sprocket assembly, check that the idle sprocket turns smoothly.

#### **42. INSTALL CHAIN SUB-ASSEMBLY**

- a. Align the mark plate and timing marks as shown in the illustration and install the chain.


HINT:

The camshaft mark plate is orange.

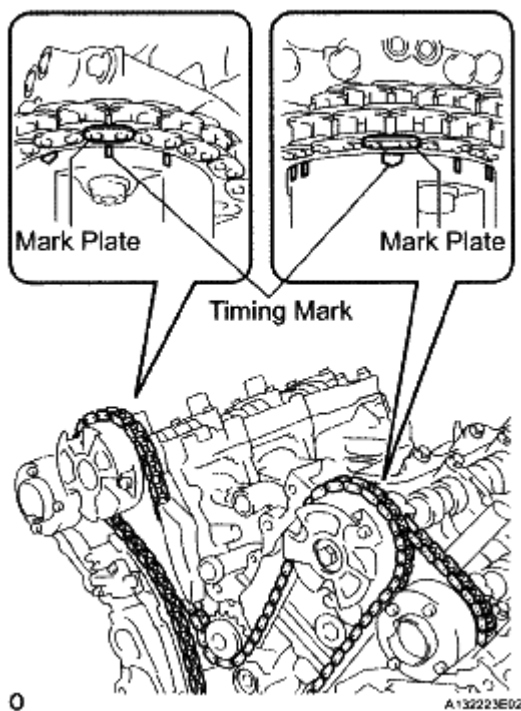

**Fig. 404: Aligning Mark Plate And Timing Marks**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


- b. Do not pass the chain over the crankshaft, just put it on it.

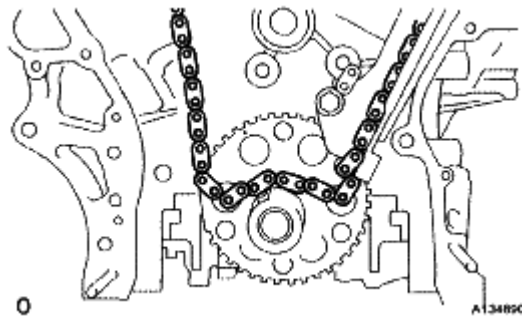


**Fig. 405: Identifying Chain Set**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Turn the camshaft timing gear assembly on the RH bank counterclockwise to tighten the chain between the banks.

**NOTE:** When the idle sprocket is reused, align the chain plate with the mark where the plate had been in order to tighten the chain between the banks.

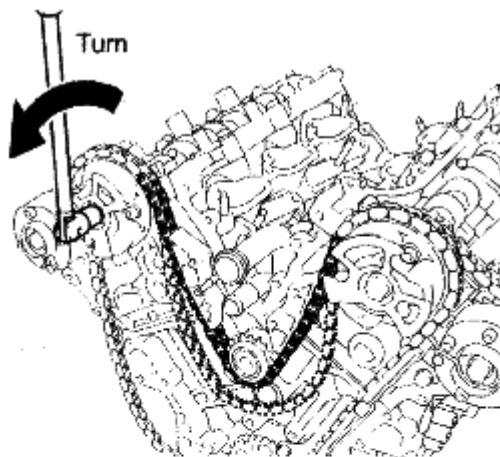

**When the Idle sprocket is reused:**

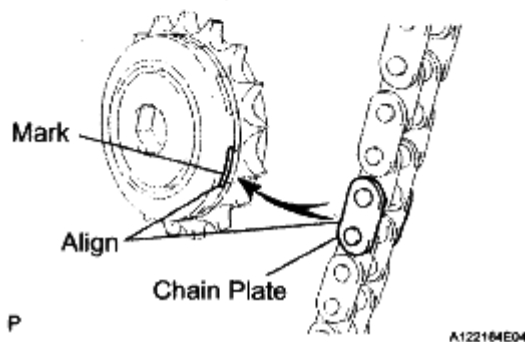


**Fig. 406: Turning Camshaft Timing Gear Assembly**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Align the mark plate and timing mark as shown in the illustration and install the chain onto the crankshaft timing sprocket.


**HINT:**

The crankshaft mark plate is yellow.

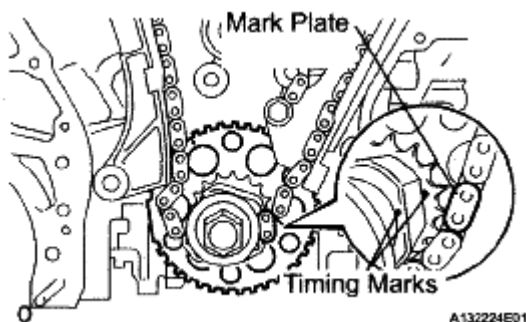

**Fig. 407: Aligning Mark Plate And Timing Mark**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- e. Temporarily tighten the pulley set bolt.
- f. Turn the crankshaft clockwise to set it to the RH block bore center line (TDC / compression).

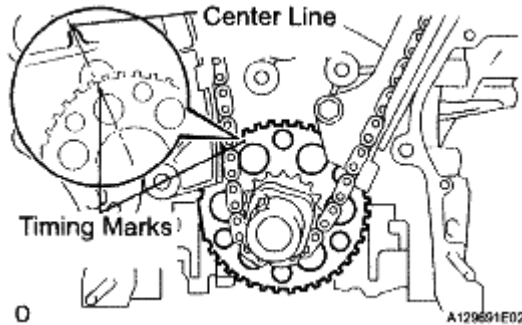


**Fig. 408: Turning Crankshaft Clockwise**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**43. INSTALL CHAIN TENSIONER SLIPPER**

- a. Install the chain tensioner slipper.

**44. INSTALL NO. 1 CHAIN TENSIONER ASSEMBLY**


- a. Move the stopper plate upward to release the lock, and push the plunger deep into the tensioner.

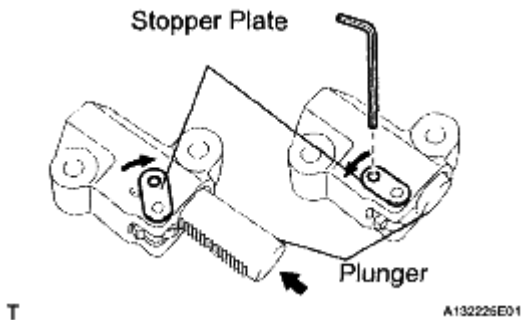

**Fig. 409: Moving Stopper Plate Upward To Release Lock**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Move the stopper plate downward to set the lock, and insert a hexagon wrench into the hole of the stopper plate.
- c. Install the chain tensioner with the 2 bolts.


**Torque: 10 N\*m (102 kgf\*cm, 7 ft.\*lbf)**

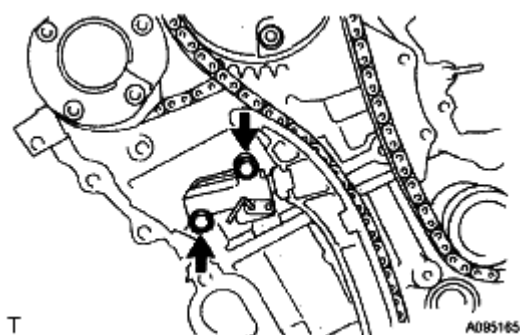

**Fig. 410: Installing Chain Tensioner With Bolts**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- d. Remove the hexagon wrench of the chain tensioner. Check that each timing mark is aligned with the crankshaft at the TDC / compression.

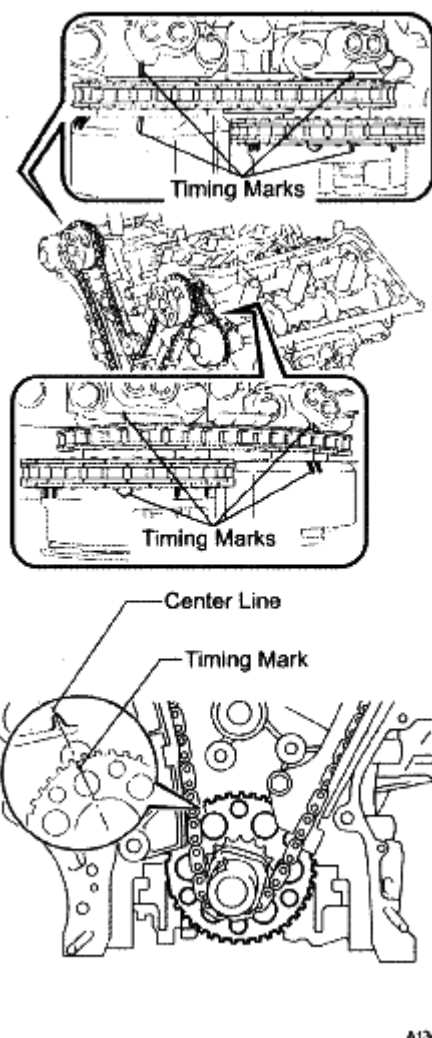

**Fig. 411: Identifying Timing Mark Aligning Position**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- e. Remove the pulley set bolt.


#### 45. INSTALL TIMING CHAIN CASE OIL SEAL

- a. Using SST, tap in a new oil seal until its surface is flush with the timing gear case edge.

SST 09223-22010,09506-35010

**NOTE:**

- Keep the lip free of foreign matter.
- Do not tap on the oil seal at an angle.
- Make sure that the oil seal edge does not stick out of the timing chain case.

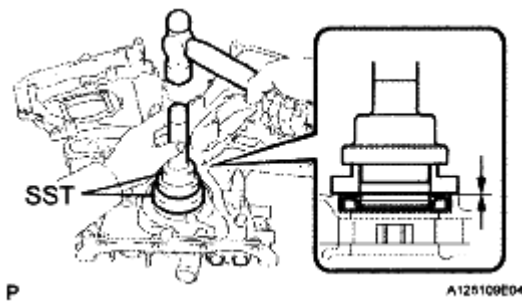

**Fig. 412: Installing Timing Chain Case Oil Seal**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


#### 46. INSTALL WATER PUMP ASSEMBLY

- a. Install a new gasket and the water pump with the 8 bolts.

Torque: 9.1 N\*m (93 kgf\*cm, 81 in.\*lbf)

**NOTE:**

Be sure to replace the bolts indicated by A with new ones or reuse them after applying adhesive 1344.

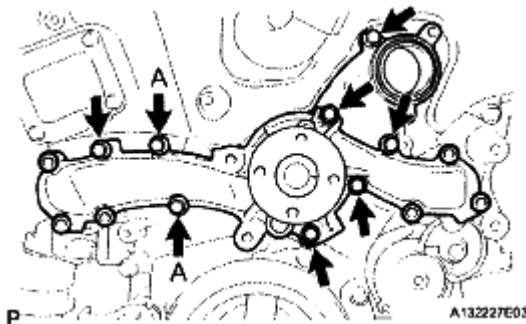

**Fig. 413: Locating Water Pump With Bolts**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**47. INSTALL TIMING CHAIN COVER SUB-ASSEMBLY**


- a. Apply seal packing in a continuous line to the engine unit as shown in the following illustration.

**Seal packing:**

**Toyota Genuine Seal Packing Black, Three Bond 1207B or equivalent**

**Seal diameter:**

**3.0 mm (0.118 in.)**

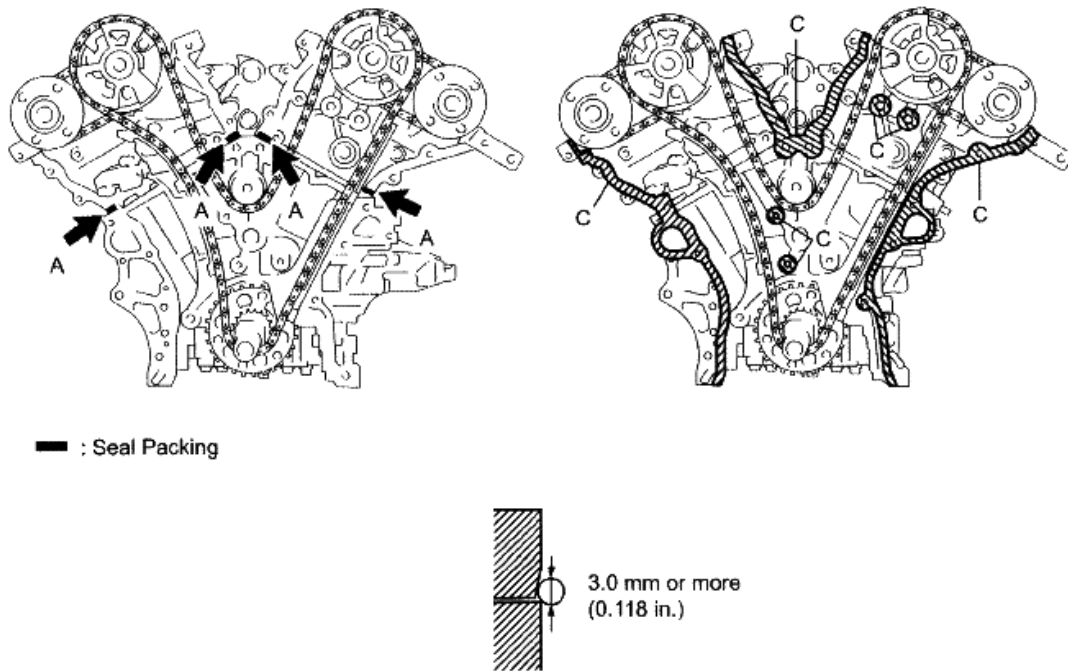

0

A132228E01


**Fig. 414: Applying Seal Packing To Engine Unit**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**NOTE:**

- Be sure to clean and degrease the contact surfaces, especially the surfaces indicated by C in the illustration.
- When the contact surfaces are wet, wipe them with an oil-free cloth before applying seal packing.
- Install the chain cover within 3 minutes.
- Do not start the engine for at least 2 hours after installing.

- b. Apply seal packing in a continuous line to the timing chain cover as shown in the following illustration.

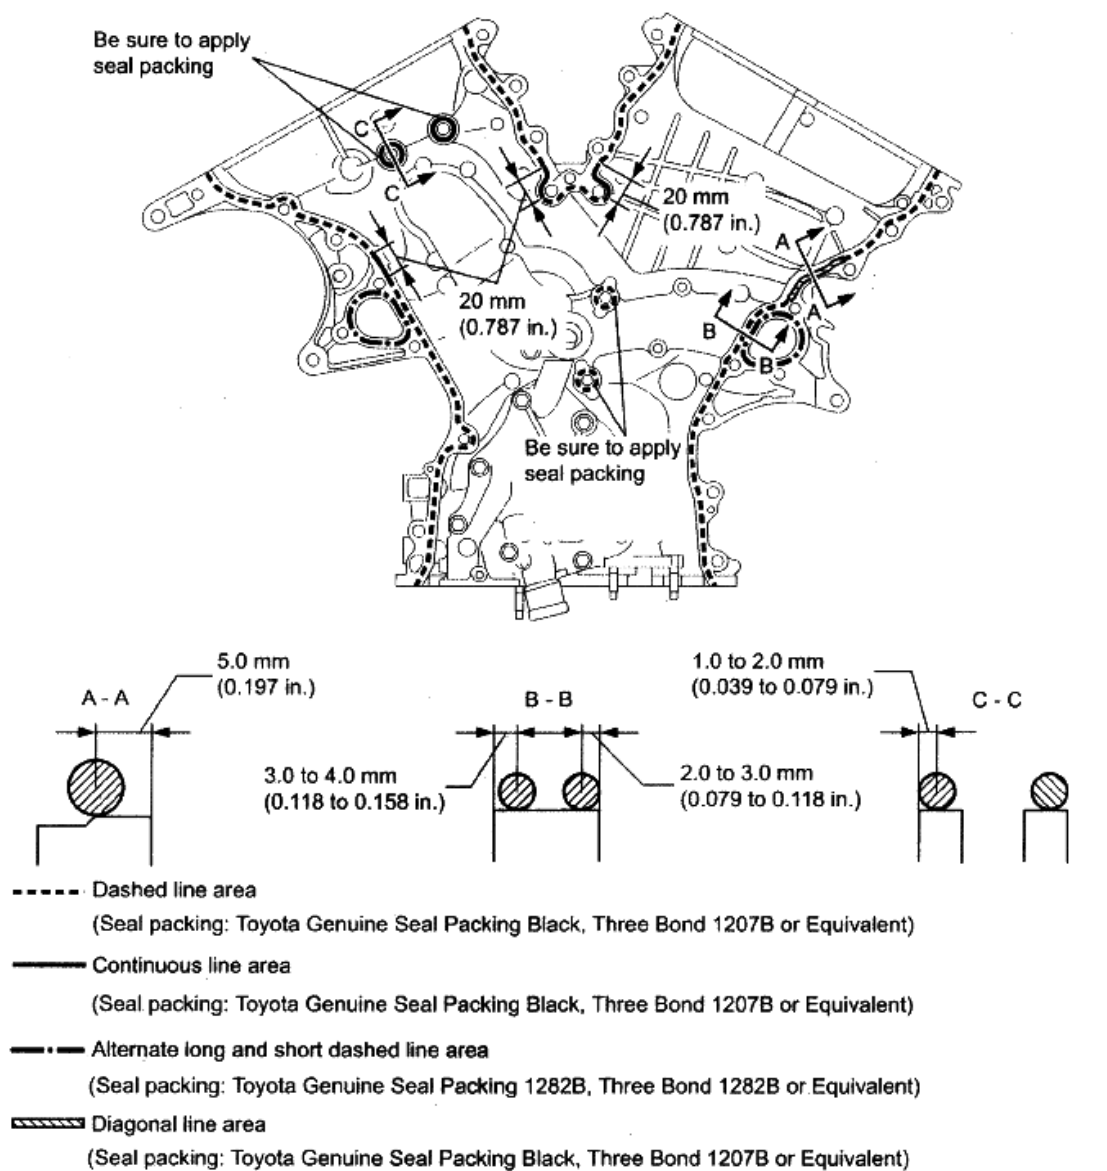

**Fig. 415: Applying Seal Packing In Continuous Line To Timing Chain Cover**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**Seal packing:**

**Toyota Genuine Seal Packing Black, Three Bond 1207B or equivalent**

**Toyota Genuine Seal Packing Black 1282B, Three Bond 1282B or equivalent**

**NOTE:**

- When the contact surfaces are wet, wipe them with an oil-free cloth before applying seal packing.
- Install the chain cover within 3 minutes and tighten the bolts within 15 minutes after applying seal packing.




- Do not start the engine for at least 2 hours after installing.

Apply seal packing as follows

**SEAL PACKING DIAMETER**

Area	Seal Packing Diameter	Application Position from Inside Seal Line
Continuous Line Area	4.5 mm or more (0.177 in.)	3.0 to 4.0 mm (0.118 to 0.158 in.)
Alternate Long and Dashed Line Area	3.5 mm or more (0.138 in.)	2.0 to 3.0 mm (0.079 to 0.118 in.)
Dashed Line Area	3.5 mm or more (0.138 in.)	3.0 to 4.0 mm (0.118 to 0.158 in.)
Diagonal Line Area	6.0 mm or more (0.236 in.)	5.0 mm (0.197 in.)


- c. Install a new gasket.

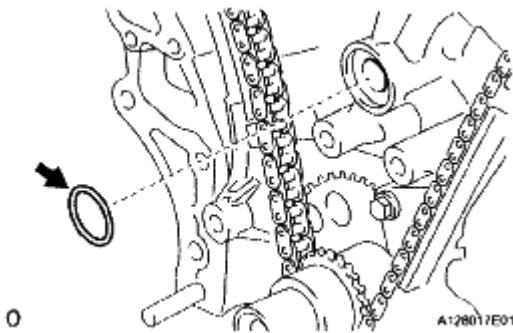

**Fig. 416: Installing Gasket**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


- d. Align the oil pump's drive rotor spline and the crankshaft as shown in the illustration. Install the spline and chain cover to the crankshaft.

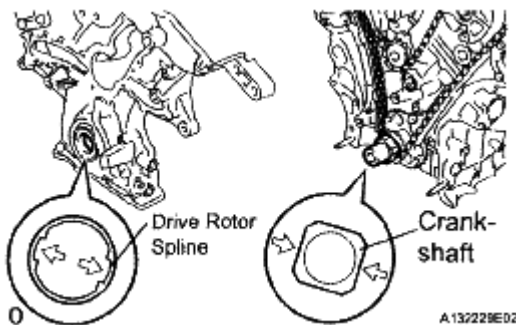

**Fig. 417: Aligning Oil Pump's Drive Rotor Spline And Crankshaft**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- e. Temporarily tighten the timing chain cover with the 23 bolts and 2 nuts.

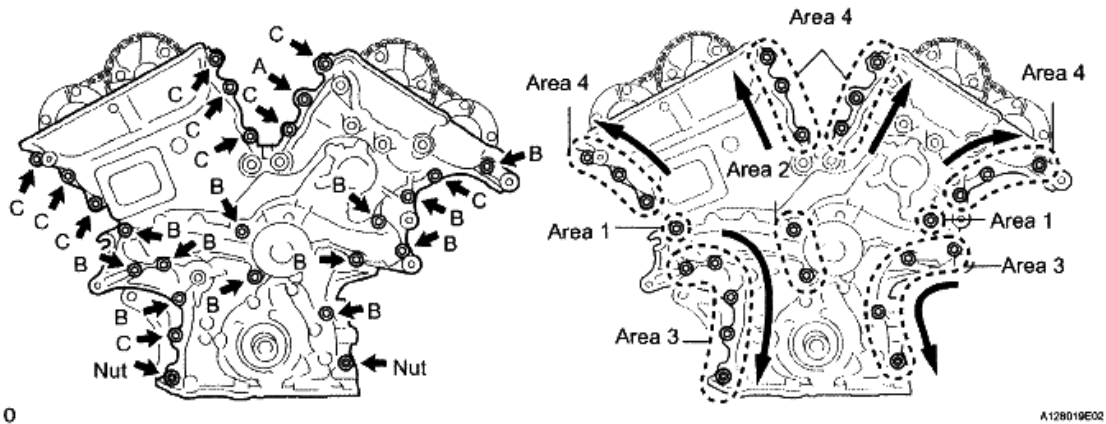

**Fig. 418: Tightening Timing Chain Cover With Bolts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

#### Bolt length

##### BOLT LENGTH

Item	Length
Bolt A	40 mm (1.57 In.)
Bolt B	55 mm (2.17 In.)
Bolt C	25 mm (0.98 In.)

**NOTE:** Make sure that there is no oil on the bolt threads.

- f. Fully tighten the bolts in this order: Area 1 and Area 2.

**Torque: 21 N\*m (214 kgf\*cm, 15 ft.\*lbf)**

- g. Fully tighten the bolts and nuts in this order: Area 3.

**Torque: 21 N\*m (214 kgf\*cm, 15 ft.\*lbf)**

#### HINT:

Tighten the bolts and nuts in the order of upper to lower as shown in the illustration.

- h. Fully tighten the bolts in this order: Area 4.

**Torque: 43 N\*m (438 kgf\*cm, 32 ft.\*lbf) for bolt A**

**21 N\*m (214 kgf\*cm, 15 ft.\*lbf) for bolts except bolt A**

HINT:


Tighten the bolts in the order of lower to upper as shown in the illustration.

- i. Install a new gasket and the chain cover plate with the 4 bolts.

**Torque: 9.1 N\*m (93 kgf\*cm, 81 in.\*lbf)**

#### 48. INSTALL WATER INLET HOUSING

- a. Install 2 new O-rings.

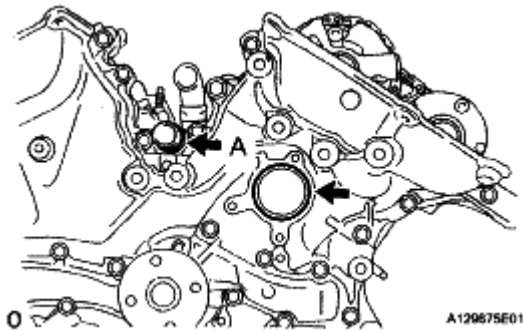

**Fig. 419: Locating O-Ring**


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

HINT:

Apply a small amount of water or soapy water to o-ring (A) in the illustration before installing it.

- b. Install the stud bolts.

**Torque: 4.0 N\*m (41 kgf\*cm, 35 in.\*lbf)**

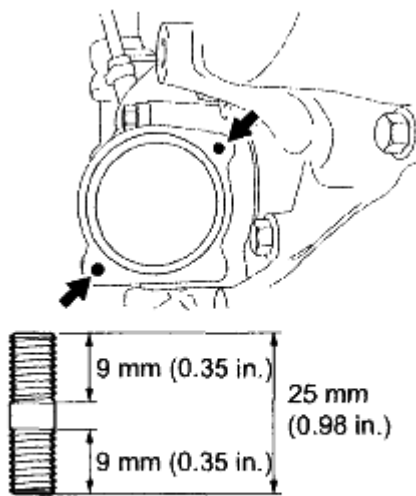


A137975E01

**Fig. 420: Identifying Stud Bolt Length**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Install the water inlet with the 2 bolts and nut.

**Torque: 10 N\*m (102 kgf\*cm, 7 ft.\*lbf)**

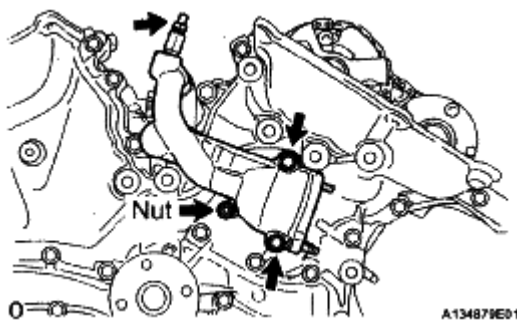

**Fig. 421: Installing Water Inlet With Bolts And Nut**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**NOTE:** Be careful that the O-ring does not get caught between the parts.

- d. Connect the water by-pass hose No. 1.
- e. Apply adhesive around the drain cock.

**Adhesive:**

**Toyota Genuine Adhesive 1324, Three Bond 1324 or Equivalent**

- f. Install the housing drain cock to the water inlet housing.

**Torque: 30 N\*m (306 kgf\*cm, 22 ft.\*lbf)**

- g. Install the housing plug to the water drain cock.


**Torque: 13 N\*m (130 kgf\*cm, 9 ft.\*lbf)**

- h. Install a new gasket to the thermostat.

- i. Align the thermostat jiggle valve with the upper stud bolt, and insert the thermostat in the water inlet housing.

HINT:


The jiggle valve may be set within 10° of either side of the prescribed positions.

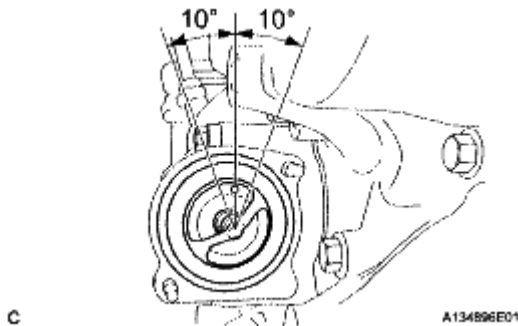

**Fig. 422: Aligning Thermostat Jiggle Valve With Upper Stud Bolt**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- j. Install the water inlet with the 2 nuts.

**Torque: 10 N\*m (102 kgf\*cm, 7 ft.\*lbf)**

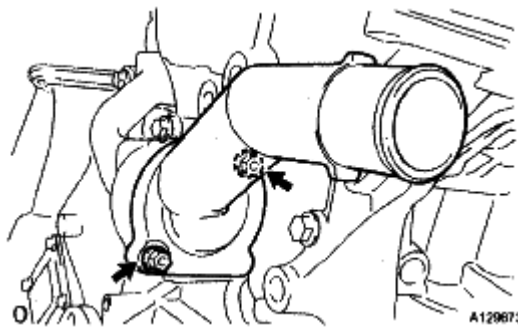

**Fig. 423: Installing Water Inlet With Nuts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


#### 49. INSTALL FRONT ENGINE MOUNTING BRACKET NO. 1 LH

- a. Install the engine mounting bracket with the 6 bolts.

**Torque: 54 N\*m (551 kgf\*cm, 40 ft.\*lbf)**

**NOTE:**

- Install the water inlet and mounting bracket within 15 minutes after installing the chain cover.
- Do not start the engine for at least 2 hours after installation.

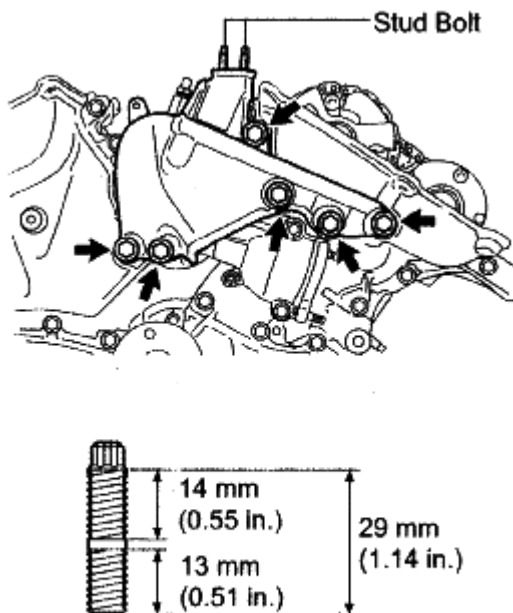

A134961E01

**Fig. 424: Identifying Engine Mounting Bracket Bolts**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. When replacing a stud bolt, install it by using an E8 "torx" socket wrench.

**Torque: 10 N\*m (102 kgf\*cm, 7 ft.\*lbf)**


## 50. INSTALL OIL PAN BAFFLE PLATE

- a. Install the oil pan baffle plate with the 7 bolts.

**Torque: 10 N\*m (102 kgf\*cm, 7 ft.\*lbf)**

**HINT:**

Temporarily tighten the 7 bolts. Fully tighten 2 bolts A as shown in the illustration before tightening the other bolts.

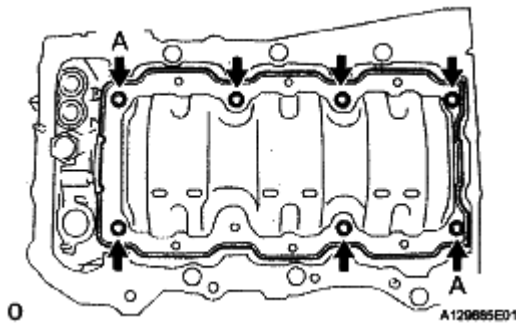


**Fig. 425: Locating Oil Pan Baffle Plate Bolts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 51. INSTALL OIL PAN SUB-ASSEMBLY



- a. When replacing a stud bolt, install it by using an E8 "torx" socket wrench.

**Torque: 10 N\*m (102 kgf\*cm, 7 ft.\*lbf)**

**Timing Chain Cover:**

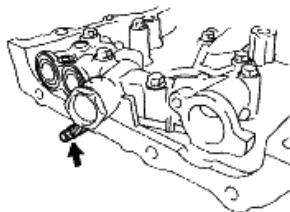


**Lower Cylinder Block:**

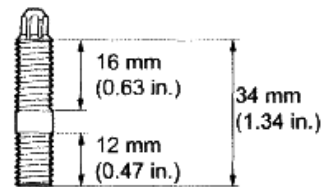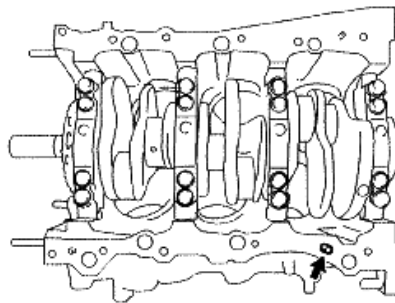

**Fig. 426: Identifying Oil Pan Sub-Assembly Bolt**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Install 2 new O-rings.

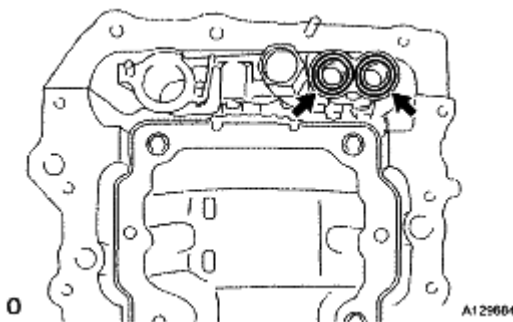

**Fig. 427: Installing O-Rings**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


- c. Apply seal packing in a continuous line as shown in the illustration.

**Seal packing:**

**Toyota Genuine Seal Packing Black, Three Bond 1207B or equivalent**

**Seal diameter:**

**3.0 to 4.0 mm (0.118 to 0.156 in.)**

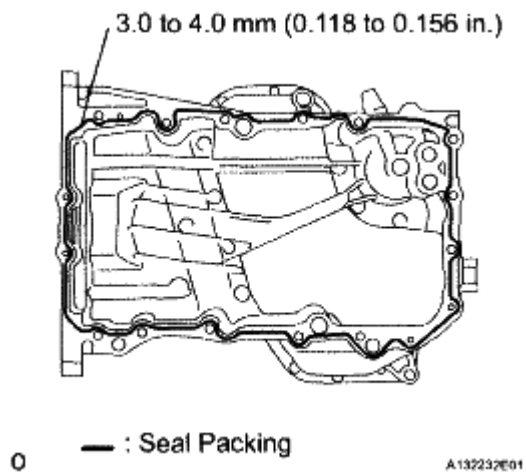

**Fig. 428: Applying Seal Packing**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**NOTE:**

- Remove any oil from the contact surface.
- Install the oil pan within 3 minutes after applying seal packing.
- Do not start the engine for at least 2 hours after installing.


- d. Install the oil pan with the 16 bolts and 2 nuts.

**Torque:**

**10 N\*m (102 kgf\*cm, 7 ft.\*lbf) for bolt A**

**21 N\*m (214 kgf\*cm, 15 ft.\*lbf) for bolts except A**



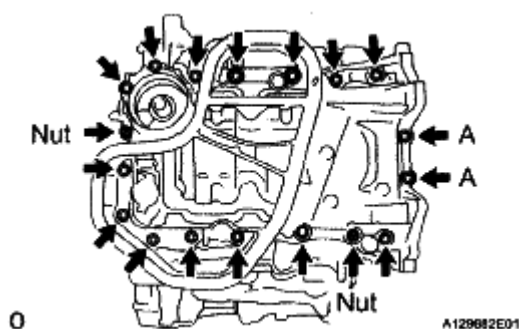


**Fig. 429: Installing Oil Pan With Bolts And Nuts**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

## 52. INSTALL OIL STRAINER SUB-ASSEMBLY

- a. Using an E6 "torx" socket, install the stud bolts as shown in the illustration.

**Torque: 4.0 N\*m (41 kgf\*cm, 35 in.\*lbf)**


### Timing Chain Cover:

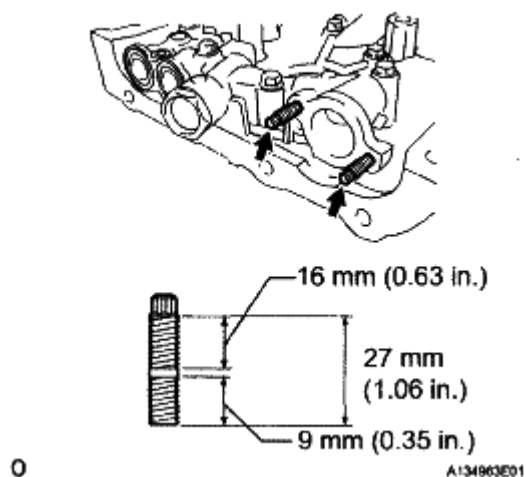

**Fig. 430: Identifying Oil Strainer Sub-Assembly Bolts**  
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Install a new gasket and the oil strainer with the bolt and 2 nuts.

**Torque: 10 N\*m (102 kgf\*cm, 7 ft.\*lbf)**

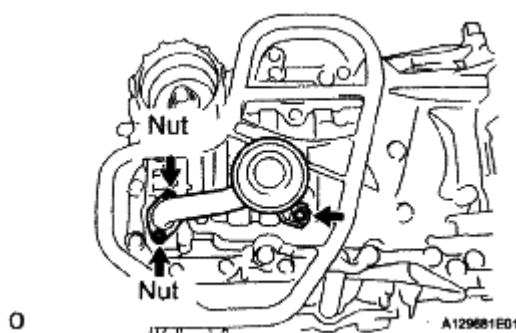


**Fig. 431: Installing Gasket And Oil Strainer With Bolt And Nuts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**53. INSTALL NO. 2 OIL PAN SUB-ASSEMBLY**

- a. Using an E6 "torx" socket, install the stud bolts as shown in the illustration.

**Torque: 4.0 N\*m (41 kgf\*cm, 35 in.\*lbf)**

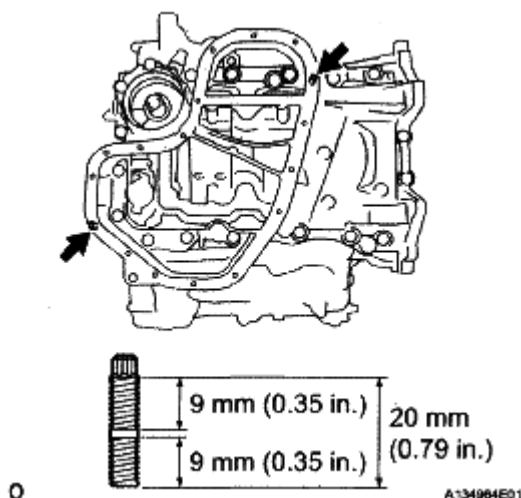

**Fig. 432: Installing No. 2 Oil Pan Sub-Assembly Bolts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


- b. Apply seal packing in a continuous line as shown in the illustration.

**Seal packing:**

**Toyota Genuine Seal Packing Black, Three Bond 1207B or equivalent**

**Seal diameter:**

**3.0 to 4.0 mm (0.118 to 0.156 in.)**

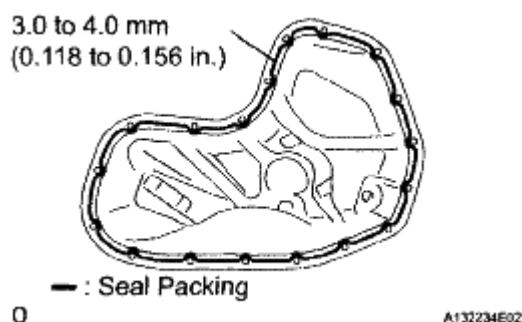

**Fig. 433: Identifying Seal Packing**


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**NOTE:**

- Remove any oil from the contact surface.
- Install the oil pan No. 2 within 3 minutes after applying seal packing.
- Do not start the engine for at least 2 hours after installing.

- c. Install the oil pan with the 16 bolts and 2 nuts.

**Torque: 10 N\*m (102 kgf\*cm, 7 ft.\*lbf)**

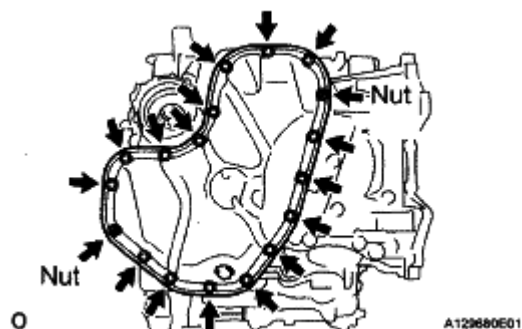


**Fig. 434: Installing Oil Pan With Bolts And Nuts**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### 54. INSTALL OIL PAN DRAIN PLUG

- a. Install a new gasket and the drain plug.

**Torque: 40 N\*m (408 kgf\*cm, 30 ft.\*lbf)**

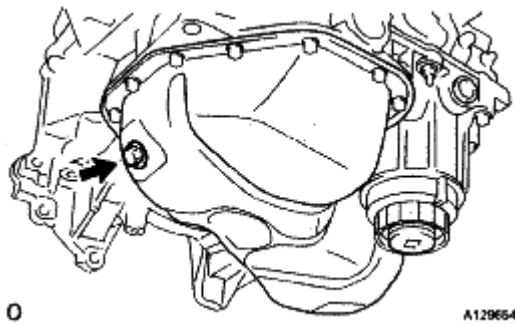

**Fig. 435: Installing Oil Pan Drain Plug**


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**55. INSTALL CYLINDER HEAD COVER SUB-ASSEMBLY (for Bank 1)**

- a. Apply seal packing as shown in the illustration.

**Seal packing:**

**Toyota Genuine Seal Packing Black, Three Bond 1207B or equivalent**

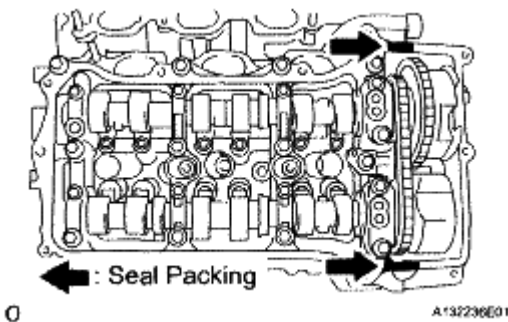


**Fig. 436: Applying Seal Packing**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**NOTE:**

- Remove any oil from the contact surface.
- Install the head cover within 3 minutes after applying seal packing.
- Do not start the engine for at least 2 hours after installing.

- b. Install 3 new gaskets as shown in the illustration.

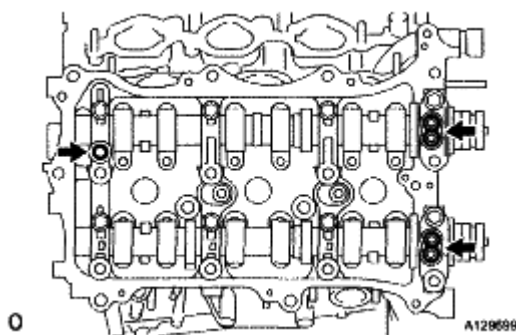

**Fig. 437: Installing Gaskets**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Install a new gasket to the head cover.
- d. Install a head cover with the 12 bolts and a new washer.


**Torque:**

**21 N\*m (214 kgf\*cm, 15 ft.\*lbf) for bolt A**

**10 N\*m (102 kgf\*cm, 7 ft.\*lbf) for bolts except A**

**HINT:**

Make sure the tightening torque of bolt 1.

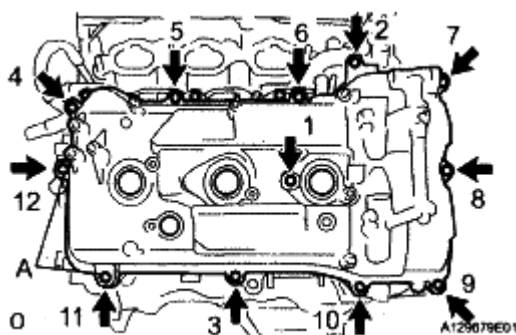

**Fig. 438: Installing Head Cover With Bolts**


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**56. INSTALL CYLINDER HEAD COVER SUB-ASSEMBLY (for Bank 2)**

- a. Apply seal packing as shown in the illustration.

**Seal packing:**

**Toyota Genuine Seal Packing Black, Three Bond 1207B or equivalent**

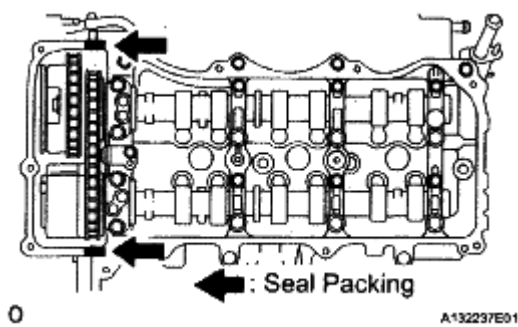


**Fig. 439: Applying Seal Packing**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**NOTE:**

- Remove any oil from the contact surface.
- Install the head cover within 3 minutes after applying seal packing.
- Do not start the engine for at least 2 hours after installing.


b. Install 3 new gaskets as shown in the illustration.

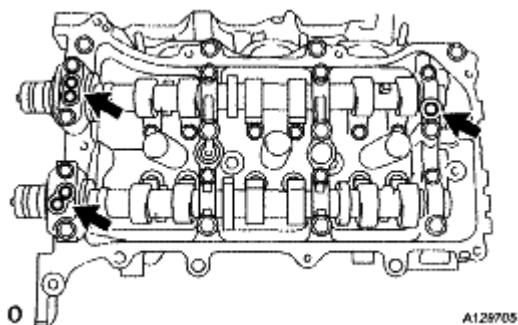

**Fig. 440: Installing Gaskets**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Install a new gasket to the head cover.
- d. Install the head cover with the 12 bolts and a new washer.

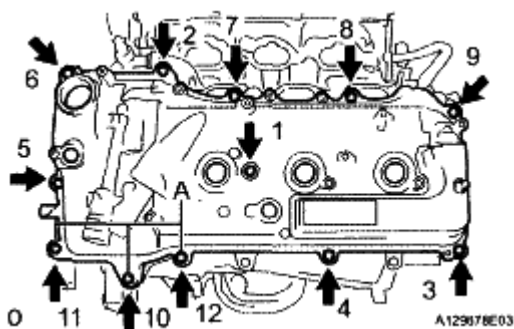

**Fig. 441: Installing Head Cover With Bolts And Washer**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**Torque:**

**21 N\*m (214 kgf\*cm, 15 ft.\*lbf) for bolt A**

**10 N\*m (102 kgf\*cm, 7 ft.\*lbf) for bolts except A**

**HINT:**


Make sure the tightening torque of bolts 1 and 10.

**57. INSTALL WATER OUTLET**

- a. Install 2 new gaskets and a new O-ring.

**HINT:**

Apply soapy water to the O-ring.

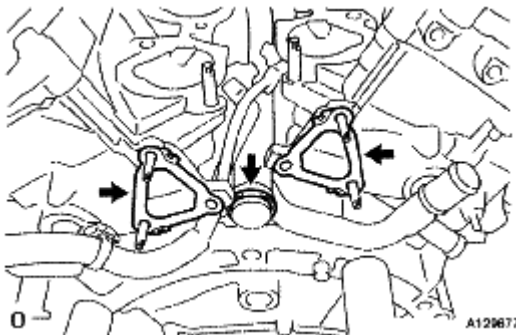

**Fig. 442: Installing Gaskets And O-Ring**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


- b. Install the water by-pass joint with the 2 bolts and 4 nuts.

**Torque:**

**10 N\*m (102 kgf\*cm, 7 ft.\*lbf) for bolts**

**10 N\*m (103 kgf\*cm, 7 ft.\*lbf) for nuts**

**NOTE:** Be careful that the O-ring does not get caught between the parts.

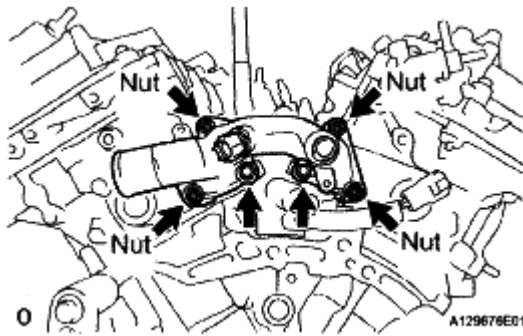


**Fig. 443: Installing Water By-Pass Joint With Bolts And Nuts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

#### 58. INSTALL CRANKSHAFT PULLEY

- Align the pulley set key with the key groove of the pulley, and slide on the pulley.
- Using SST, install the pulley bolt.

SST 09213-70011 (09213-70020), 09330-00021

Torque: 250 N\*m (2,550 kgf\*cm, 184 ft.\*lbf)

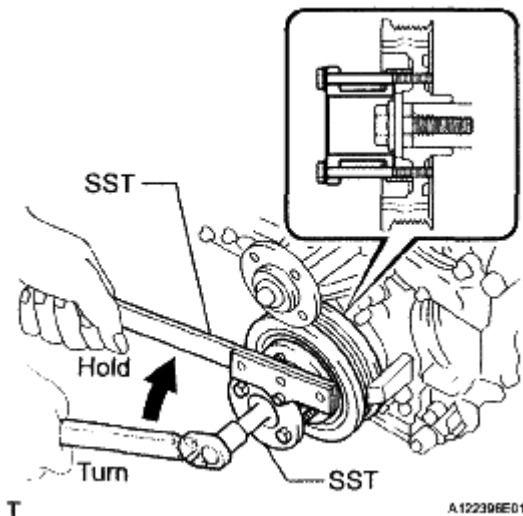


**Fig. 444: Installing Crankshaft Pulley Bolt Using SST**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

#### 59. INSTALL OIL FILTER ELEMENT

- Clean the inside of the oil filter cap, the threads and O-ring groove.
- Apply a light coat of engine oil to a new O-ring and install it to the oil filter cap.
- Set a new oil filter element to the oil filter cap.
- Remove dirt or foreign matter from the installation surface of the engine.
- Apply a light coat of engine oil to the O-ring again and install the oil filter cap.



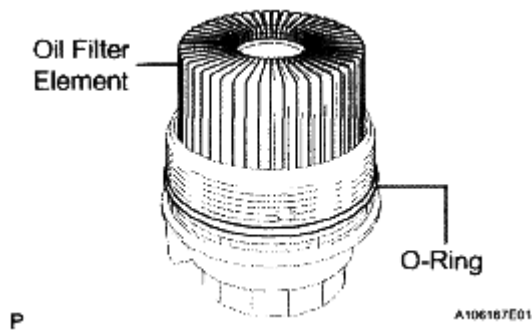

**Fig. 445: Applying Light Coat Of Engine Oil To New O-Ring**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**NOTE:**

- Be careful that the O-ring does not get caught between the parts.
- The O-ring must not be twisted on the groove.


f. Using SST, tighten the oil filter cap.

**SST 09228-06501**

**Torque: 25 N\*m (255 kgf\*cm, 18 ft.\*lbf)**

**NOTE:**

**Make sure that the oil filter is installed securely as shown in the illustration.**

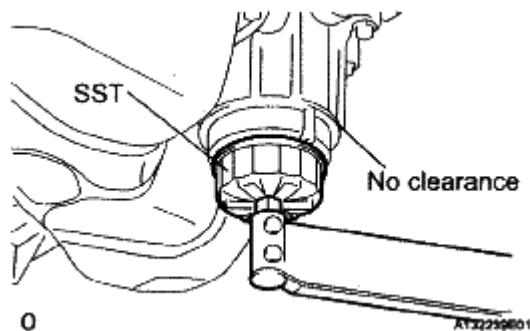


**Fig. 446: Tightening Oil Filter Cap**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

g. Apply a light coat of engine oil to a new O-ring and install it to the oil filter cap.

**NOTE:**

**Remove all dirt and foreign matter from the installation surface.**

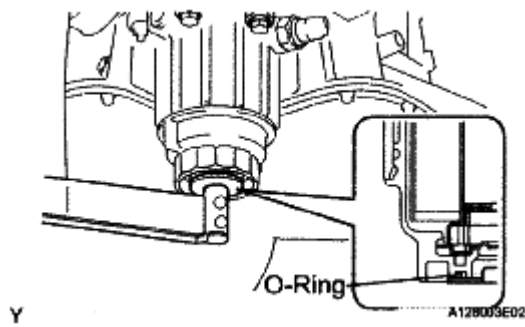

**Fig. 447: Installing Oil Filter Drain Plug To Oil Filter Cap**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- h. Install the oil filter drain plug to the oil filter cap.

**Torque: 13 N\*m (130 kgf\*cm, 9 ft.\*lbf)**


**NOTE:** Make sure that the O-ring does not get caught between the parts.

**60. INSTALL CYLINDER BLOCK WATER DRAIN COCK SUB-ASSEMBLY**

- a. Apply adhesive around the drain cocks.

**Adhesive:**


**Toyota Genuine Adhesive 1324, Three Bond 1324 or Equivalent**

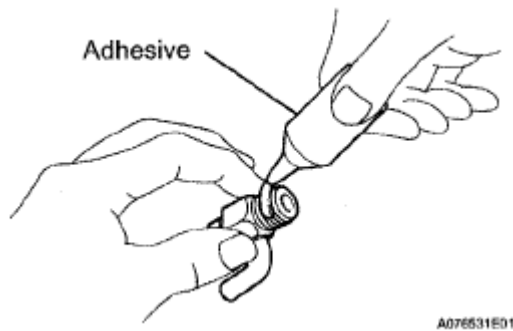

**Fig. 448: Applying Adhesive Around Drain Cocks**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Install the water drain cocks as shown in the illustration.

**NOTE:** Do not rotate the drain cocks more than 1 revolution (360°) after tightening the drain cocks with the specified torque.

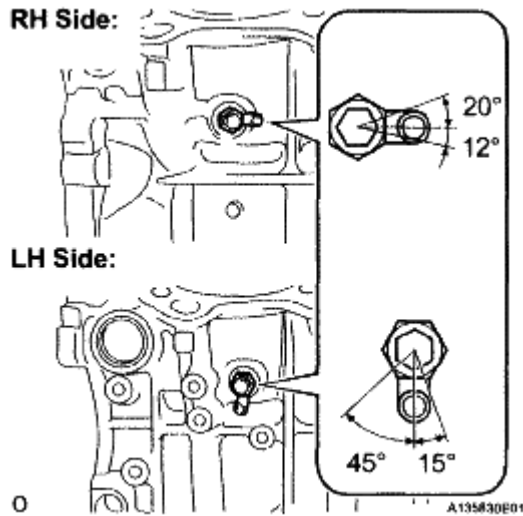

**Fig. 449: Installing Water Drain Cocks**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**Torque: 25 N\*m (255 kgf\*cm, 18 ft.\*lbf)**

- c. Install the water drain cock plugs to the water drain cocks


**Torque: 13 N\*m (130 kgf\*cm, 9 ft.\*lbf)**

#### 61. INSTALL NO. 1 OIL PIPE

- a. Make sure that there is no foreign matter on the mesh of the oil control valve filter LH.

**NOTE: Do not touch the mesh when installing the oil control valve filter.**

- b. Install the oil control valve filter LH to the oil pipe union. Install new gaskets and temporarily install the oil pipe (on the head cover side).

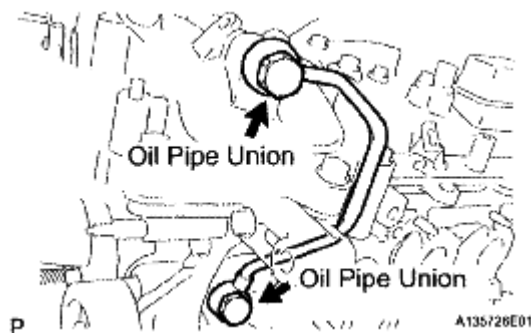

**Fig. 450: Installing Oil Control Valve Filter LH To Oil Pipe Union**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Install a new gasket and temporarily install the oil pipe (on the cylinder head side) with the oil

check valve bolt.

- d. Tighten the oil pipe union (on the head cover side).

**Torque: 65 N\*m (663 kgf\*cm, 48 ft.\*lbf)**

- e. Tighten the oil pipe union (on the cylinder head side).

**Torque: 65 N\*m (663 kgf\*cm, 48 ft.\*lbf)**


**NOTE:** If the link that connects the gaskets is broken, remove the connecting link by using nippers or similar tools.

## 62. INSTALL OIL PIPE

- a. Make sure that there is no foreign matter on the mesh of the oil control valve filter RH.

**NOTE:** Do not touch the mesh when installing the oil control valve filter.

- b. Install the oil control valve filter RH to the oil pipe union. Install new gaskets and temporarily install the oil pipe (on the head cover side).

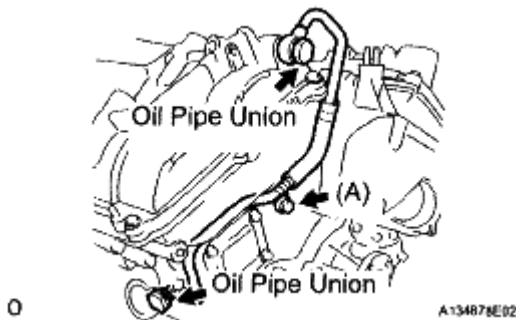

**Fig. 451: Locating Oil Pipe Union**

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- c. Install a new gasket and temporarily install the oil pipe (on the cylinder head side) with the oil check valve bolt.
- d. Install the bolt (A) to the cylinder head.

**Torque: 10 N\*m (102 kgf\*cm, 7 ft.\*lbf)**

- e. Tighten the oil pipe union (on the head cover side).

**Torque: 65 N\*m (663 kgf\*cm, 48 ft.\*lbf)**

- f. Tighten the oil pipe union (on the cylinder head side).


**Torque: 65 N\*m (663 kgf\*cm, 48 ft.\*lbf)**

**NOTE:** If the link that connects the gaskets is broken, remove the connecting link by using nippers or similar tools.

### 63. INSTALL CRANKSHAFT POSITION SENSOR

- a. Install the sensor with the bolt.

**Torque: 10 N\*m (102 kgf\*cm, 7 ft.\*lbf)**

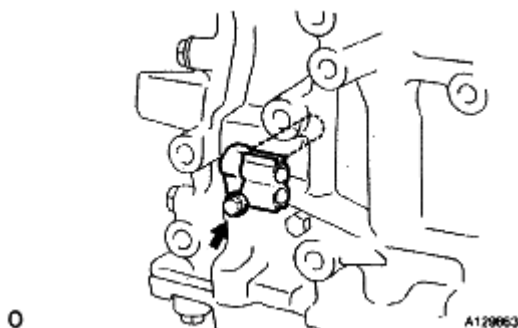


**Fig. 452: Installing Crankshaft Position Sensor**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

### 64. INSTALL CAMSHAFT TIMING OIL CONTROL VALVE ASSEMBLY


- a. Install the 4 oil control valves with the 4 bolts.

**Torque: 10 N\*m (102 kgf\*cm, 7 ft.\*lbf)**

**LH Bank:**

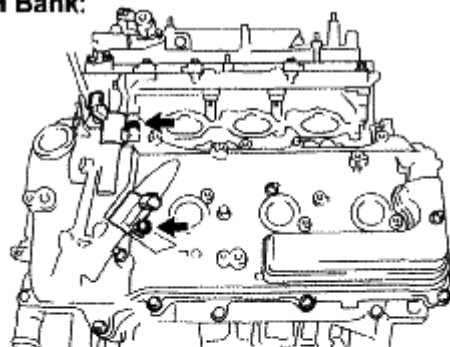

**RH Bank:**

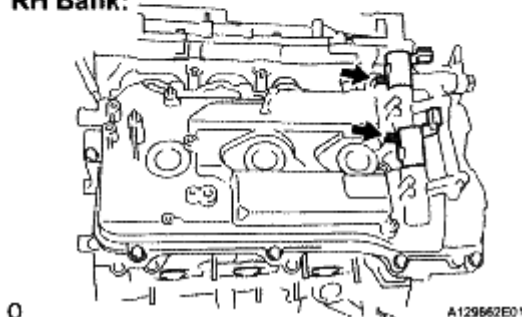


**Fig. 453: Installing Camshaft Timing Oil Control Valves With Bolts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**65. INSTALL CAMSHAFT POSITION SENSOR**


- a. Install the 4 sensors with the 4 bolts.

**Torque: 10 N\*m (102 kgf\*cm, 7 ft.\*lbf)**

**LH Bank:**

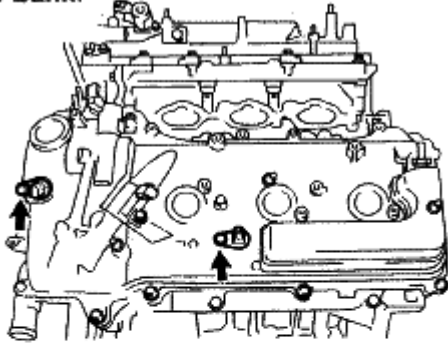

**RH Bank:**

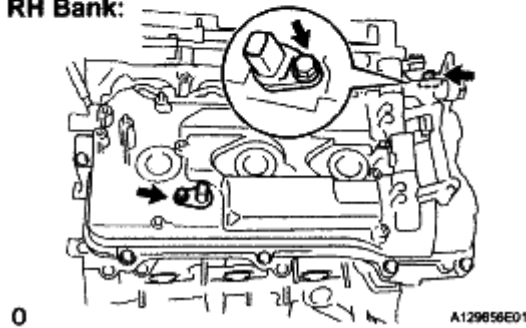

**Fig. 454: Installing Camshaft Position Sensors With Bolts**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**66. INSTALL VENTILATION VALVE SUB-ASSEMBLY**


- a. Apply adhesive around the ventilation valve.

**Adhesive:**

**Toyota Genuine Adhesive 1324, Three Bond 1324 or Equivalent**

- b. Install the ventilation valve.

**Torque: 27 N\*m (275 kgf\*cm, 20 ft.\*lbf)**

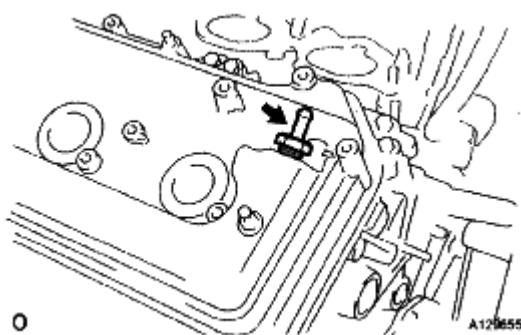

**Fig. 455: Identifying Ventilation Valve Sub-Assembly**  
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

**67. INSTALL SPARK PLUG**

- a. Install the 6 spark plugs.

**Torque: 18 N\*m (184 kgf\*cm, 13 ft.\*lbf)**

**68. INSTALL OIL FILLER CAP SUB-ASSEMBLY**

- a. Install a new gasket.
- b. Install the oil filler cap.