

2006 Hyundai Elantra GLS

2006 ENGINE Engine Mechanical System (G4GC - GSL 2.0L) - Elantra

2006 ENGINE**Engine Mechanical System (G4GC - GSL 2.0L) - Elantra****GENERAL****SPECIFICATIONS****ENGINE MECHANICAL SYSTEM SPECIFICATIONS****ENGINE MECHANICAL SYSTEM SPECIFICATION**

Description	Specifications	Limit
General		
Type	In-line, Double Overhead Camshaft	
Number of cylinder	4	
Bore	82 mm (3.228 in.)	
Stroke	93.5 mm (3.681 in.)	
Total displacement	1975 cc (120.52 cu.in.)	
Compression ratio	10.1	
Firing order	1-3-4-2	
Valve timing (W/O - CVVT)		
Intake valve		
Opens (BTDC)	9°	
Closes (ABDC)	43°	
Exhaust valve		
Opens (BBDC)	50°	
Closes (ATDC)	6°	
Valve timing (W/CVVT)		
Intake valve		
Opens (ATDC)	11°	
Closes (ABDC)	59°	
Exhaust		
Opens (BBDC)	42°	
Closes (ATDC)	6°	
Valve		
Valve length		
Intake	114.34 mm (4.5016 in.)	
Exhaust	116.8 mm (4.598 in.)	
Stem O.D.		
Intake	5.965 ~ 5.98 mm (0.2348 ~ 0.2354 in.)	
Exhaust	5.950 ~ 5.965 mm (0.2343 ~ 0.2348 in.)	

2006 Hyundai Elantra GLS

2006 ENGINE Engine Mechanical System (G4GC - GSL 2.0L) - Elantra

Face angle thickness of valve head (Margin)		
Intake	1.15 mm (0.0452 in.)	0.8 mm (0.031 in.)
Exhaust	1.35 mm (0.0531 in.)	1.0 mm (0.039 in.)
Valve stem to valve guide clearance		
Intake	0.02 ~ 0.05 mm (0.0008 ~ 0.0019 in.)	0.10 mm (0.0039 in.)
Exhaust	0.035 ~ 0.065 mm (0.0014 ~ 0.0026 in.)	0.13 mm (0.0051 in.)
Valve guide		
Installed Dimension O.D.		
Intake	46 mm (1.811 in.)	
Exhaust	54.5 mm (2.146 in.)	
Service Oversize	0.05, 0.25, 0.50 mm (0.002, 0.010, 0.020 in.)	
Valve seat		
Width of seat contact		
Intake	1.1 ~ 1.5 mm (0.043 ~ 0.059 in.)	
Exhaust	1.3 ~ 1.7 mm (0.051 ~ 0.066 in.)	
Seat angle	45°	
Oversize	0.3, 0.6 mm (0.012, 0.024 in.) oversize	
Valve spring		
Free length	48.86 mm (1.9236 in.)	
Load	18.3 kg/39 mm (40.3 lb/1.535 in.)	
Installed height	39 mm (1.5354 in.)	
Squareness	1.5° or less	
Valve clearance		
Cold (20°C [68°F])		
Intake	0.20 mm (0.0079 in.)	0.12 ~ 0.28 mm (0.0047 ~ 0.0110 in.)
Exhaust	0.28 mm (0.0110 in.)	0.20 ~ 0.38 mm (0.0079 ~ 0.0150 in.)
Cylinder head		
Flatness of gasket surface	Max. 0.03 mm (0.0012 in.)	0.06 mm (0.0024 in.)
Flatness of manifold mounting surface	Max. 0.15 mm (0.0059 in.)	0.03 mm (0.0012 in.)
Oversize rework dimensions of valve seat hole		
Intake		
0.3 mm (0.012 in.) O.S.	33.300 ~ 33.325 mm (1.3110 ~ 1.3120 in.)	
0.6 mm (0.024 in.) O.S.	33.600 ~ 33.625 mm (1.3228 ~	

2006 Hyundai Elantra GLS

2006 ENGINE Engine Mechanical System (G4GC - GSL 2.0L) - Elantra

Exhaust	1.3238in.)	
0.3 mm (0.012in.) O.S.	28.800 ~ 28.821 mm (1.1338 ~ 1.1346in.)	
0.6 mm (0.024in.) O.S.	29.100 ~ 29.121 mm (1.1456 ~ 1.1465in.)	
Oversize rework dimensions of valve guide hole (both intake and exhaust)		
0.05 mm (0.002in.) O.S	11.05 ~ 11.068 mm (0.435 ~ 0.4357in.)	
0.25 mm (0.010in.) O.S	11.25 ~ 11.268 mm (0.443 ~ 0.4436in.)	
0.50 mm (0.020in.) O.S	11.50 ~ 11.518 mm (0.453 ~ 0.4535in.)	
Cylinder block		
Cylinder bore	82.00 ~ 82.03 mm (3.2283 ~ 3.2295in.)	
Out-of-round and taper of cylinder bore	Less than 0.01 mm (0.0004in.)	
Clearance with piston (To set limits to new parts)	0.02 ~ 0.04 mm (0.0008 ~ 0.0016in.)	
Piston		
O.D (To set limits to new parts)	81.97 ~ 82.00 mm (3.2271 ~ 3.2283in.)	
Service oversize	0.25, 0.50 mm (0.010, 0.020in.) oversize	
Piston ring		
Side clearance		
No. 1	0.04 ~ 0.08 mm (0.0015 ~ 0.0031 in.)	0.1 mm (0.004in.)
No. 2	0.03 ~ 0.07 mm (0.0012 ~ 0.0027in.)	
End gap		
No. 1	0.23 ~ 0.38 mm (0.0090 ~ 0.0149in.)	1 mm (0.039in.)
No. 2	0.33 ~ 0.48 mm (0.0130 ~ 0.0189in.)	1 mm (0.039in.)
Oil ring side rail	0.20 ~ 0.60 mm (0.0078 ~ 0.0236in.)	1 mm (0.039in.)
Service oversize	0.25, 0.50 mm (0.010, 0.020in.) oversize	
Connecting rod		
Bend	0.05 mm (0.0020in.) or less	
Twist	0.1 mm (0.004in.) or less	

2006 Hyundai Elantra GLS

2006 ENGINE Engine Mechanical System (G4GC - GSL 2.0L) - Elantra

Connecting rod big end to crankshaft side clearance	0.100 ~ 0.250 mm (0.0039 ~ 0.010in.)	0.4 mm (0.0157in.)
Connecting rod bearing Oil clearance (To seat limits to new parts) Undersize	0.024 ~ 0.044 mm (0.0009 ~ 0.0017in.) 0.25, 0.50, 0.75 mm (0.01, 0.02, 0.03in.)	
Camshaft (W/O - CVVT) Cam lobe height Intake Exhaust Camshaft (W/CVVT) Cam height Intake Exhaust Journal O.D. Bearing oil clearance End play	44.820 mm (1.7646in.) 44.720 mm (1.7606in.) 44.618 mm (1.7566in.) 44.518 mm (1.7527in.) 28 mm (1.1023in.) 0.02 ~ 0.061 mm (0.0008 ~ 0.0024in.) 0.1 ~ 0.2 mm (0.004 ~ 0.008in.)	44.720 mm (1.7606in.) 44.620 mm (1.7567in.) 44.518 mm (1.7527in.) 44.418 mm (1.7487in.) 0.1 mm (0.0039in.)
Crankshaft Pin O.D. Journal O.D. Bend Out-of-round, taper of journal and pin End play Undersize rework dimension of pin 0.25 mm (0.010in.) 0.50 mm (0.020in.) 0.75 mm (0.030in.) Undersize rework dimension of journal 0.25 mm (0.010in.) 0.50 mm (0.020in.) 0.75 mm (0.030in.)	45 mm (1.77in.) 57 mm (2.244in.) 0.03 mm (0.0012in.) or less 0.01 mm (0.0004in.) or less 0.06 ~ 0.260 mm (0.0023 ~ 0.010in.) 44.725 ~ 44.740 mm (1.7608 ~ 1.7614in.) 44.475 ~ 44.490 mm (1.7509 ~ 1.7516in.) 44.225 ~ 44.240 mm (1.7411 ~ 1.7417in.) 56.727 ~ 56.742 mm (2.2333 ~ 2.2339in.) 56.477 ~ 56.492 mm (2.2235 ~ 2.2240in.) 56.227 ~ 56.242 mm (2.2136 ~ 2.2142in.)	0.030 mm (0.0012in.)
Crankshaft bearing		

2006 Hyundai Elantra GLS

2006 ENGINE Engine Mechanical System (G4GC - GSL 2.0L) - Elantra

Oil clearance	0.028 ~ 0.046 mm (0.0011 ~ 0.0018in.)	
Flywheel Runout	0.1 mm (0.0039in.)	0.13 mm (0.0051 in.)
Cooling method	Water-cooled, pressurized. Forced circulation with electrical fan	
Coolant Quantity	6 liter (6.3U.S qts, 5.2Imp. qts)	
Radiator Type	Pressurized corrugated fin type	
Radiator cap Main valve opening pressure Vacuum valve opening pressure	83 ~ 110kpa (12 ~ 16psi, 0.83 ~ 1.1 kg/cm ²) -7kpa (-100psi, -0.07kg/cm ²) or less	
Thermostat Type Valve opening temperature Full-opening temperature	Wax pellet type with jiggle valve 82°C (177°F) 95°C (201°F)	
Coolant pump	Centrifugal type impeller	
Drive belt Type	V-ribbed belt	
Engine coolant temperature sensor Type Resistance	Heat-sensitive thermistor type 2.31 ~ 2.59Kohms at 20°C (68°F)	
Oil pump Clearance between outer circumference and front case. Front case tip clearance Side clearance Inner gear Outer gear Engine oil pressure at 1,500RPM [Oil temperature is 90 to 110°C 194 to 230°F]	0.120 ~ 0.185 mm (0.0049 ~ 0.0073in.) 0.025 ~ 0.069 mm (0.0009 ~ 0.0027in.) 0.04 ~ 0.085 mm (0.0016 ~ 0.0033in.) 0.04 ~ 0.09 mm (0.0016 ~ 0.0035in.) 245KPa (2.5kg/cm ² , 35.5psi)	
Relief spring Free height Load	43.8 mm (1.725in.) 3.7kg at 40.1 mm	

2006 Hyundai Elantra GLS

2006 ENGINE Engine Mechanical System (G4GC - GSL 2.0L) - Elantra

	(3.15lb/1.578in.)	
Air cleaner		
Type	Dry type	
Element	Unwoven cloth type	
Exhaust pipe		
Muffler	Expansion resonance type	
Suspension system	Rubber hangers	

SERVICE STANDARDS**SERVICE STANDARDS**

Standard value	
Antifreeze	Mixture ratio of anti-freeze in coolant
ETHYLENE GLYCOL BASE FOR ALUMINUM	50%

TIGHTENING TORQUE**TIGHTENING TORQUE**

Item	Nm	kgf.cm	lbf.ft
Cylinder Block			
Front engine support bracket bolt and nut	35 ~ 50	350 ~ 500	25 ~ 37
Front roll stopper bracket bolt	70 ~ 90	700 ~ 900	51 ~ 65
Rear roll stopper bracket bolt	70 ~ 90	700 ~ 900	51 ~ 65
Rear engine stopper bracket bolt	35 ~ 50	350 ~ 500	25 ~ 37
Engine Mounting			
Right mounting insulator (large) nut	90 ~ 110	900 ~ 1100	65 ~ 80
Right mounting insulator (small) nut	45 ~ 60	450 ~ 600	33 ~ 44
Right mounting bracket to engine nuts and bolts	50 ~ 65	500 ~ 650	36 ~ 48
Transmission mount insulator nut	90 ~ 110	900 ~ 1100	65 ~ 80
Transmission insulator bracket to side member bolt	40 ~ 50	400 ~ 500	30 ~ 36
Rear roll stopper insulator nut	50 ~ 65	500 ~ 650	36 ~ 48
Rear roll stopper bracket to center member bolts	40 ~ 50	400 ~ 500	30 ~ 36

2006 Hyundai Elantra GLS

2006 ENGINE Engine Mechanical System (G4GC - GSL 2.0L) - Elantra

Front roll stopper insulator nut	50 ~ 65	500 ~ 650	36 ~ 48
Front roll stopper bracket to center member bolts.	40 ~ 50	400 ~ 500	30 ~ 36
Main Moving			
Connecting rod cap nut	50 ~ 53	500 ~ 530	36 ~ 39
Crankshaft bearing cap bolt	27~33 + (60°~65°)	270~330 + (60°~65°)	20~24 + (60°~65°)
Fly wheel M/T bolt	120 ~ 130	1200 ~ 1300	88 ~ 95
Drive plate A/T bolt	120 ~ 130	1200 ~ 1300	88 ~ 95
Engine cover	4~6	40 ~ 60	3~4
Heat protector	15 ~ 20	150 ~ 200	11 ~ 15
Water pipe bracket bolts	12 ~ 15	120 ~ 150	9 ~ 11
Cooling system			
Alternator support bolt and nut	20 ~ 25	200 ~ 250	14 ~ 18
Alternator lock bolt	12 ~ 15	120 ~ 150	9 ~ 11
Alternator brace mounting bolt	20 ~ 27	200 ~ 270	15 ~ 20
Coolant pump pulley bolts	8 ~ 10	80 ~ 100	6 ~ 7
Coolant pump bolts	20 ~ 27	200 ~ 270	14 ~ 19
Coolant temperature sensor	20 ~ 40	200 ~ 400	15 ~ 30
Coolant inlet fitting nuts	15 ~ 20	150 ~ 200	11 ~ 14
Thermostat housing bolts and nuts	15 ~ 20	150 ~ 200	11 ~ 14
Lubrication system			
Oil filter	12 ~ 16	120 ~ 160	9 ~ 12
Oil pan bolts	10 ~ 12	100 ~ 120	7 ~ 9
Oil pan drain plug	40 ~ 45	400 ~ 450	30 ~ 33
Oil screen bolts	15 ~ 22	150 ~ 220	11 ~ 16
Oil pressure switch	13 ~ 15	130 ~ 150	9.7 ~ 11
Intake and Exhaust system			
Air cleaner body mounting bolts	8~ 10	80 ~ 100	6 ~ 7
Resonator mounting bolts	4 ~ 6	40 ~ 60	3 ~ 4
Intake manifold to cylinder head nuts and bolts	16 ~ 23	160 ~ 230	12 ~ 17
Intake manifold stay to cylinder block bolts	18 ~ 25	180 ~ 250	13 ~ 18

2006 Hyundai Elantra GLS

2006 ENGINE Engine Mechanical System (G4GC - GSL 2.0L) - Elantra

Throttle body to surge tank nuts	15 ~ 20	150 ~ 200	11 ~ 14
Exhaust manifold to cylinder head nuts	43 ~ 55	430 ~ 550	32 ~ 40
Exhaust manifold cover to exhaust	15 ~ 20	150 ~ 200	11 ~ 14
Manifold bolts			
Oxygen sensor to front muffler	50 ~ 60	500 ~ 600	36 ~ 43
Oxygen sensor to exhaust manifold	50 ~ 60	500 ~ 600	36 ~ 43
Front exhaust pipe to exhaust manifold nuts	30 ~ 40	300 ~ 400	22 ~ 29
Front exhaust pipe bracket bolts	30 ~ 40	300 ~ 400	22 ~ 29
Front exhaust pipe to catalytic converter bolts	40 ~ 60	400 ~ 600	29 ~ 43
Main muffler hanger support bracket bolts	10 ~ 15	100 ~ 150	7 ~ 11
Cylinder head			
Cylinder head bolts - M10	25 + (60°~65°) + (60°~65°)	250 + (60°~65°) + (60°~65°)	18 + (60°~65°) + (60°~65°)
Cylinder head bolts - M12	30 + (60°~65°) + (60°~65°)	300 + (60°~65°) + (60°~65°)	22 + (60°~65°) + (60°~65°)
Intake manifold nuts	18 ~ 25	180 ~ 250	13 ~ 18
Exhaust manifold nuts	43 ~ 55	430 ~ 550	32 ~ 41
Cylinder head cover bolts	8 ~ 10	80 ~ 100	6 ~ 7
Camshaft bearing cap bolts	14 ~ 15	140 ~ 150	10 ~ 11
Oil control valve bolt	10 ~ 12	100 ~ 120	7.3 ~ 8.8
OCV Filter	41 ~ 51	410 ~ 510	30 ~ 37.6
CVVT unit to exhaust camshaft bolt	66 ~ 78	660 ~ 780	48.7 ~ 57.5
Rear plate bolts	8 ~ 10	80 ~ 100	6 ~ 7
Timing Belt			
Crankshaft pulley bolt	170 ~ 180	1700 ~ 1800	125 ~ 133
Camshaft sprocket bolt	100 ~ 120	1000 ~ 1200	74 ~ 89
Timing belt tensioner bolts	43 ~ 550	430 ~ 550	31 ~ 40
Timing belt cover bolts	8 ~ 10	80 ~ 100	6 ~ 7
Front case bolts	20 ~ 27	200 ~ 270	14 ~ 20
Timing belt idler bolt	43 ~ 55	430 ~ 550	31 ~ 40
M/T: Manual Transmission			

A/T: Automatic Transmission

COMPRESSION

NOTE: **If the there is lack of power, excessive oil consumption or poor fuel economy, measure the compression pressure.**


1. Warm up and stop engine

Allow the engine to warm up to normal operating temperature.

2. Remove ignition coils. (See **IGNITION COIL**)
3. Remove spark plugs.

Using a 16 mm plug wrench, remove the 4 spark plugs.

4. Check cylinder compression pressure.
 - a. Insert a compression gauge into the spark plug hole.

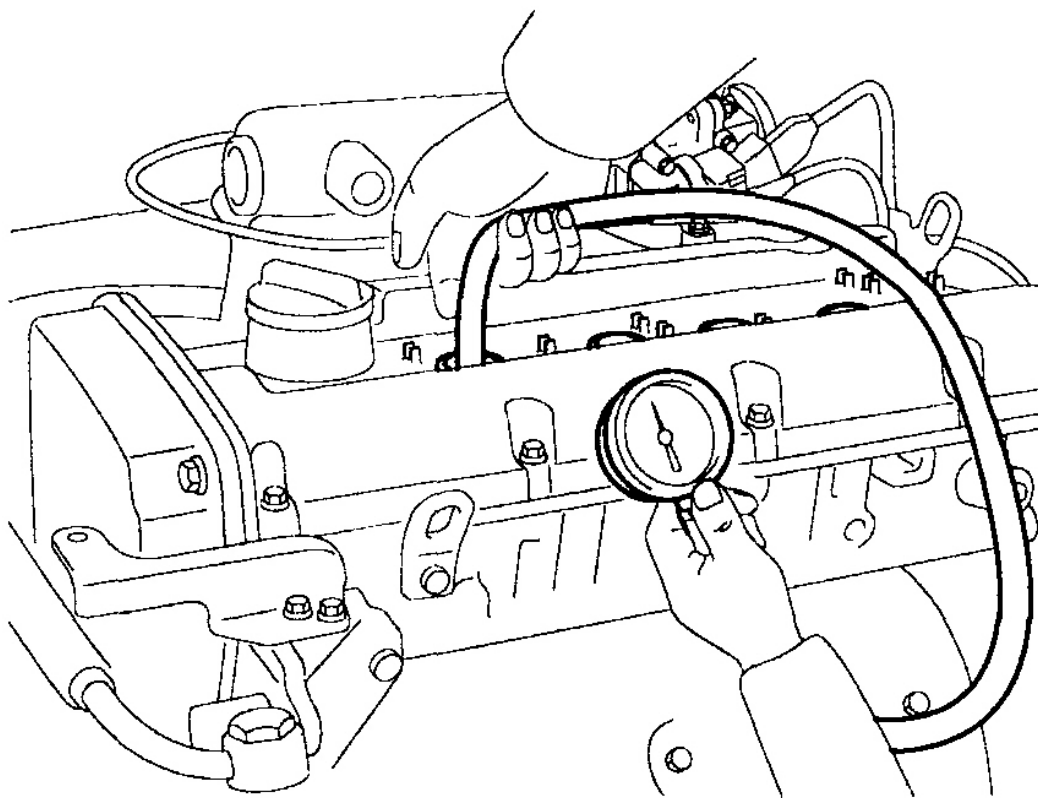

G03842249

Fig. 1: Inserting Compression Gauge Into Spark Plug Hole
Courtesy of HYUNDAI MOTOR CO.

- b. Fully open the throttle.
- c. While cranking the engine, measure the compression pressure.

NOTE: Always use a fully charged battery to obtain engine speed of 250 RPM or more.

- d. Repeat steps (a) through (c) for each cylinder.

NOTE: This measurement must be done in as short a time as possible.

Compression pressure:

1,500kPa (15.3kgf/cm² , 218psi)

Minimum pressure:

1,000kPa (10.2kgf/cm² , 145psi)


Difference between each cylinder:

100kPa (1.0kgf/cm² , 15psi) or less

- e. If the cylinder compression in 1 or more cylinders is low, pour a small amount of engine oil into the cylinder through the spark plug hole and repeat steps (a) through (c) for cylinders with low compression.
 - If adding oil helps the compression, it is likely that the piston rings and/or cylinder bore are worn or damaged.
 - If pressure stays low, a valve may be sticking or seating is improper, or there may be leakage past the gasket.
5. Reinstall spark plugs.
6. Install ignition coils. (See **IGNITION COIL**)

TIMING BELT TENSION ADJUSTMENT


1. Remove the engine cover (A).

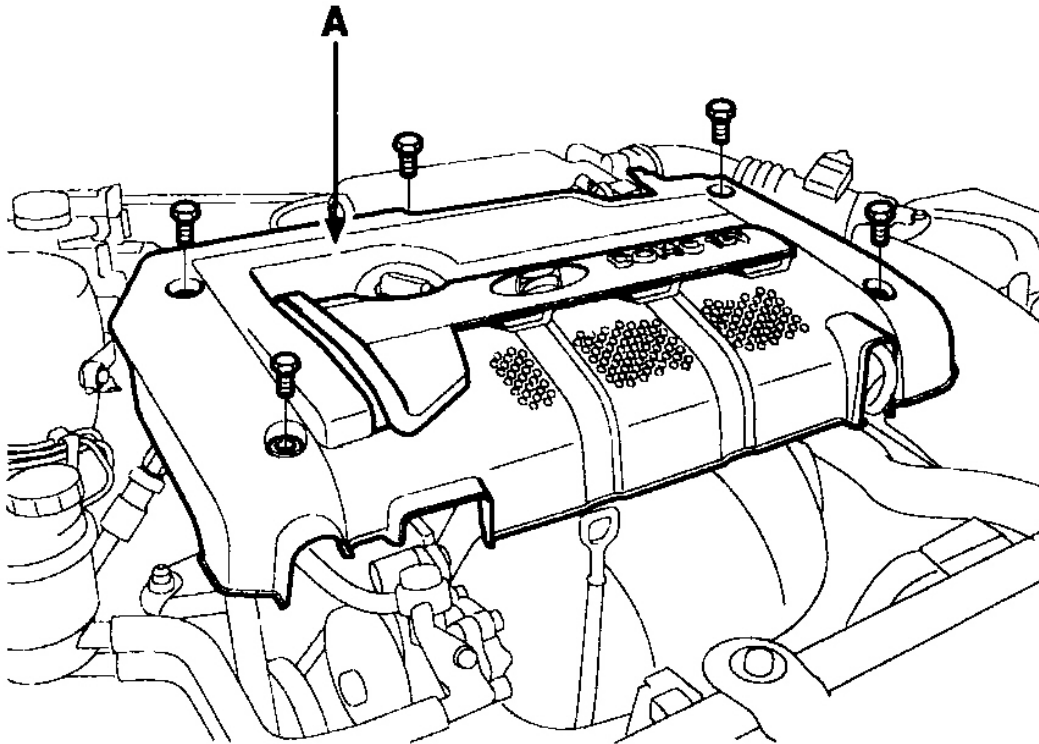

G03842250

Fig. 2: Locating Engine Cover
Courtesy of HYUNDAI MOTOR CO.


2. Remove RH front wheel.
3. Remove the 4 bolts (B) and timing belt upper cover (A).

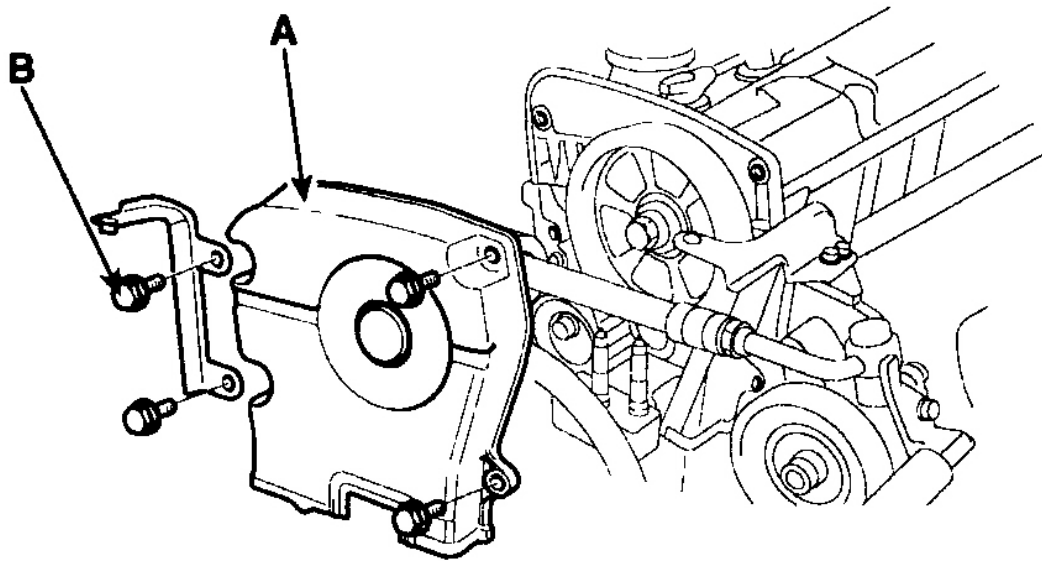

G03842251

Fig. 3: Removing Bolts And Timing Belt Upper Cover
Courtesy of HYUNDAI MOTOR CO.


4. Turn the crankshaft pulley, and align its groove with timing mark "T" of the timing belt cover.

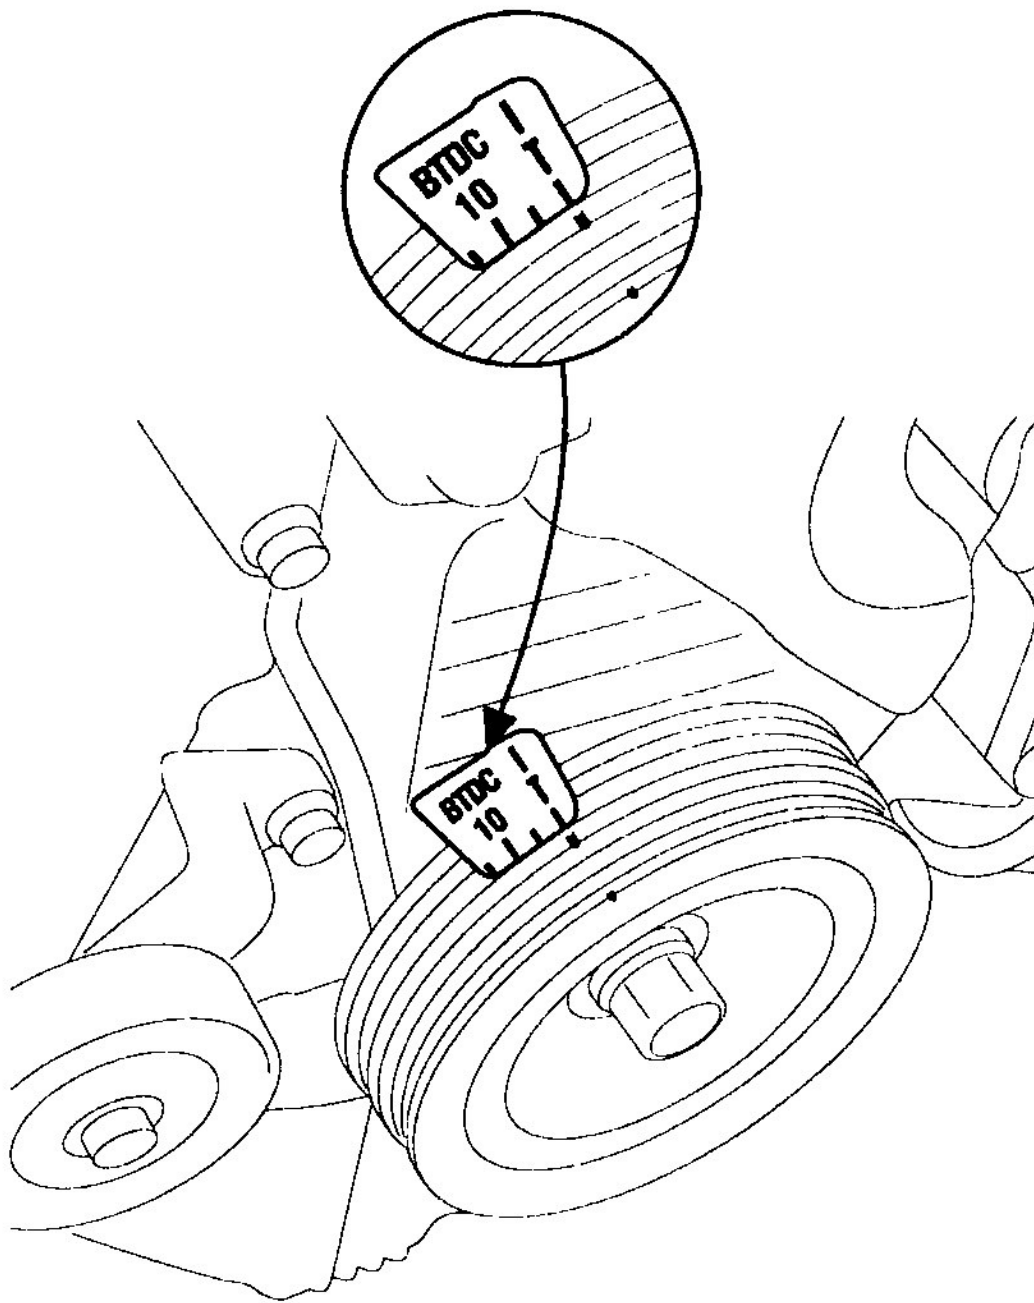

G03842252

Fig. 4: Identifying Crankshaft Alignment Mark
Courtesy of HYUNDAI MOTOR CO.


5. Temporarily loosen tensioner pulley (A) by center bolt.

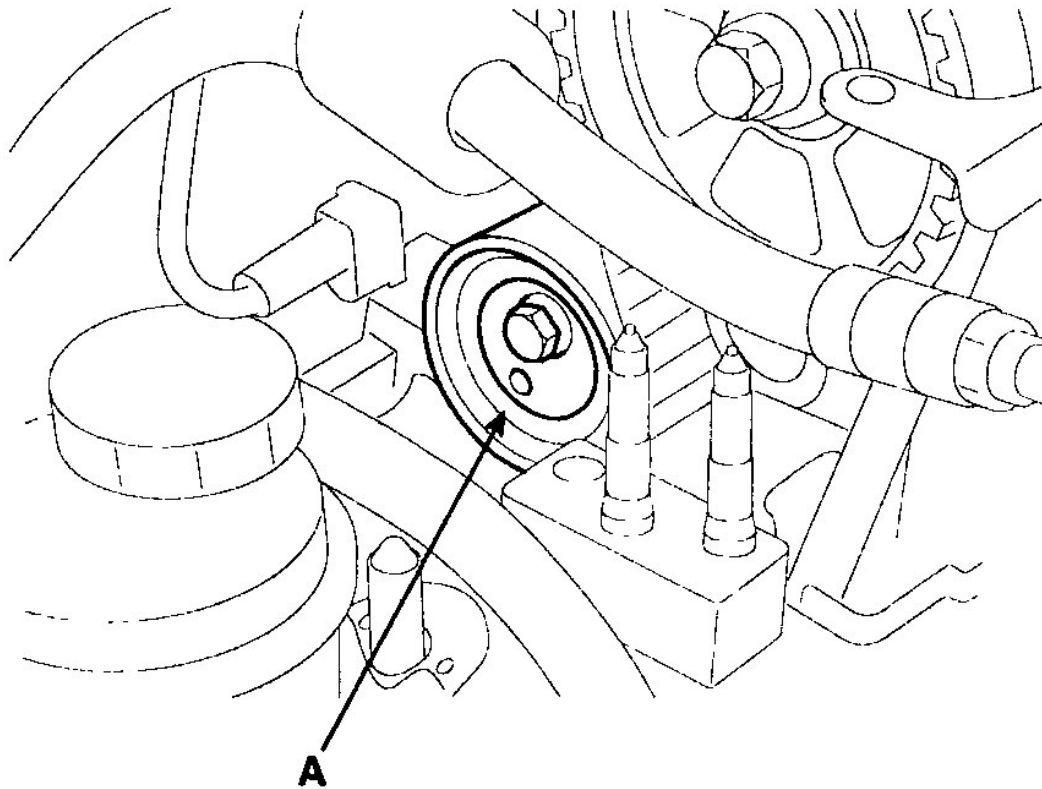

G03842253

Fig. 5: Loosening Tensioner Pulley
Courtesy of HYUNDAI MOTOR CO.

6. Timing belt tension adjusting
 1. Rotate crankshaft in regular direction (clock wise view from front) through angle equivalent to two teeth (18°) of camshaft sprocket (A).

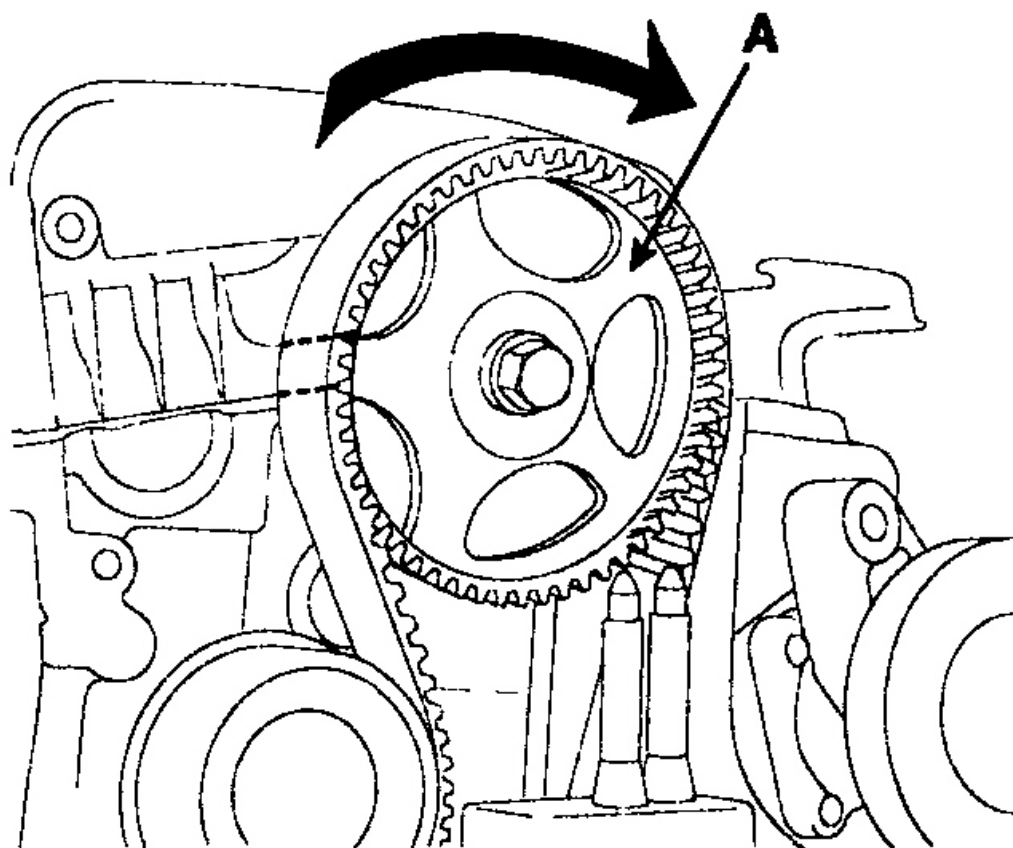

G03842254

Fig. 6: Rotating Crankshaft
Courtesy of HYUNDAI MOTOR CO.

2. Give tension to timing belt rotating tensioner in arrow direction tool and set timing belt not to give slack to tension side.
3. Tightening tensioner bolt.


Tightening torque

Tensioner bolt:

43 ~ 55Nm (430 ~ 550kgf.cm, 32 ~ 40lbf.ft)

4. Recheck the belt tension, When the tension side of timing belt is pushed horizontally with a moderate force [approx. 2kg (20N, 5lb)], the timing belt cog end segs in approx. 4 ~ 6 mm (0.16 ~


0.24 in.)

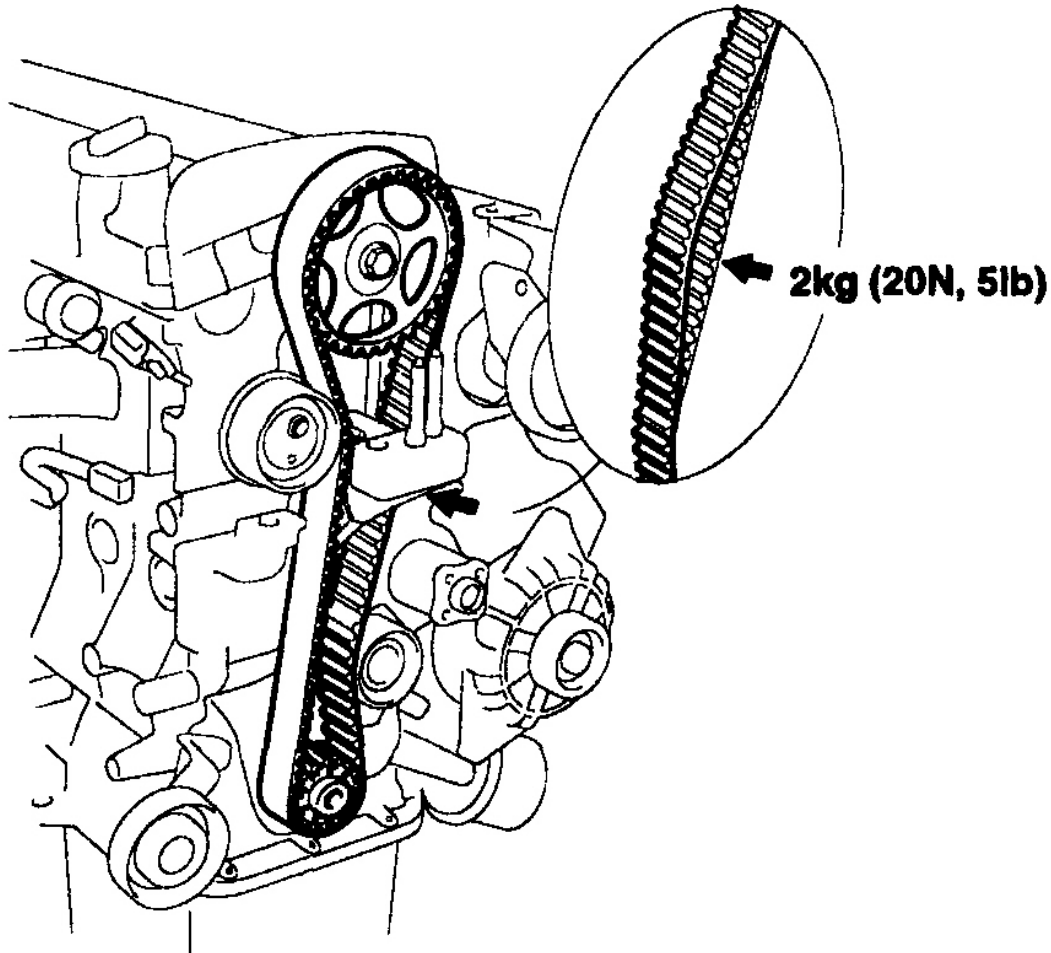

G03842255

Fig. 7: Checking Timing Belt Tension
Courtesy of HYUNDAI MOTOR CO.


7. Turn the crankshaft two turns in the operating direction (clockwise) and realign crankshaft sprocket and camshaft sprocket timing mark.
8. Install the timing belt upper cover (A) with 4 bolts (B).

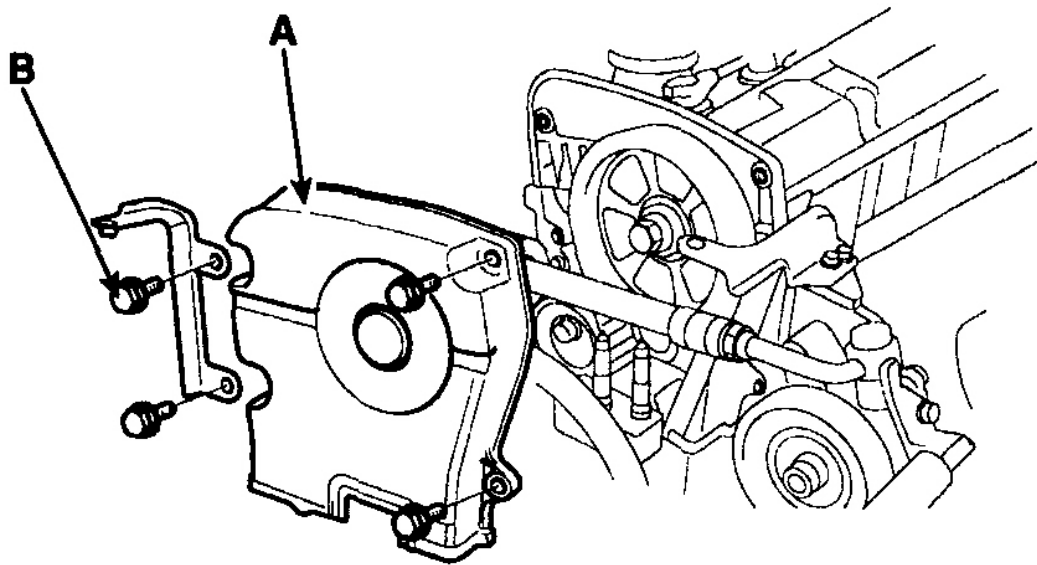

G03842256

Fig. 8: Installing Timing Belt Upper Cover
Courtesy of HYUNDAI MOTOR CO.

9. Install RH front wheel.
10. Install engine cover (A) with 5 bolts.

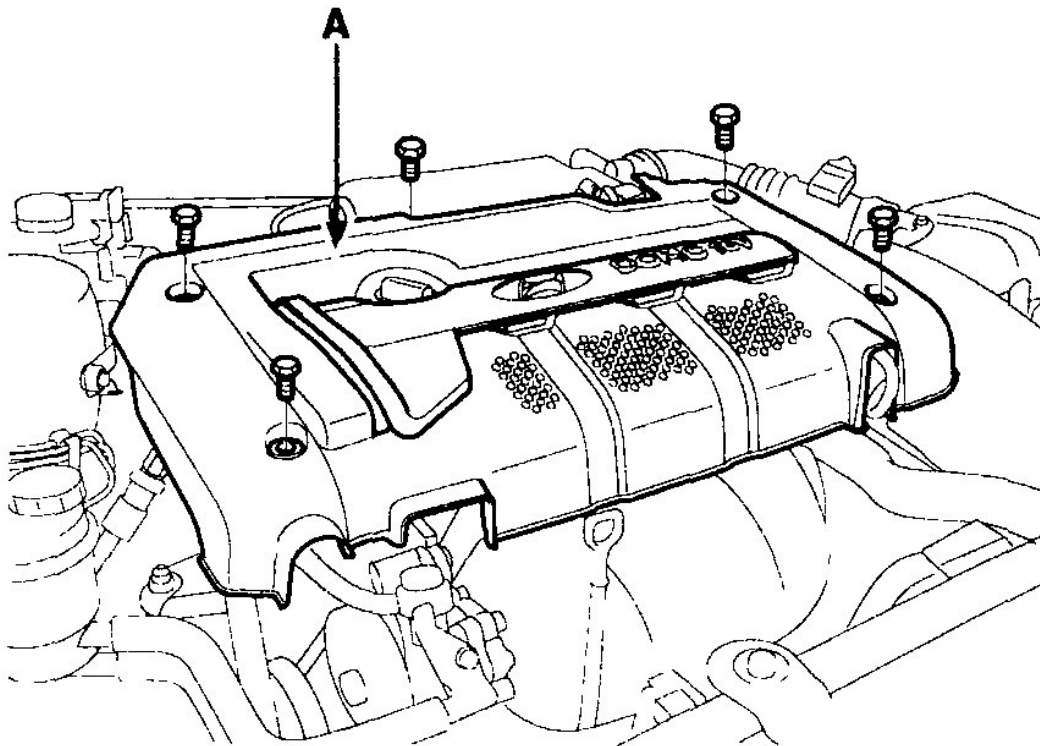

G03842257


Fig. 9: Installing Engine Cover
Courtesy of HYUNDAI MOTOR CO.

VALVE CLEARANCE INSPECTION AND ADJUSTMENT

MLA (MECHANICAL LASH ADJUSTER)

NOTE: Inspect and adjust the valve clearance when the engine is cold (Engine coolant temperature: 20°C) and cylinder head is installed on the cylinder block.


1. Remove the engine cover (A).

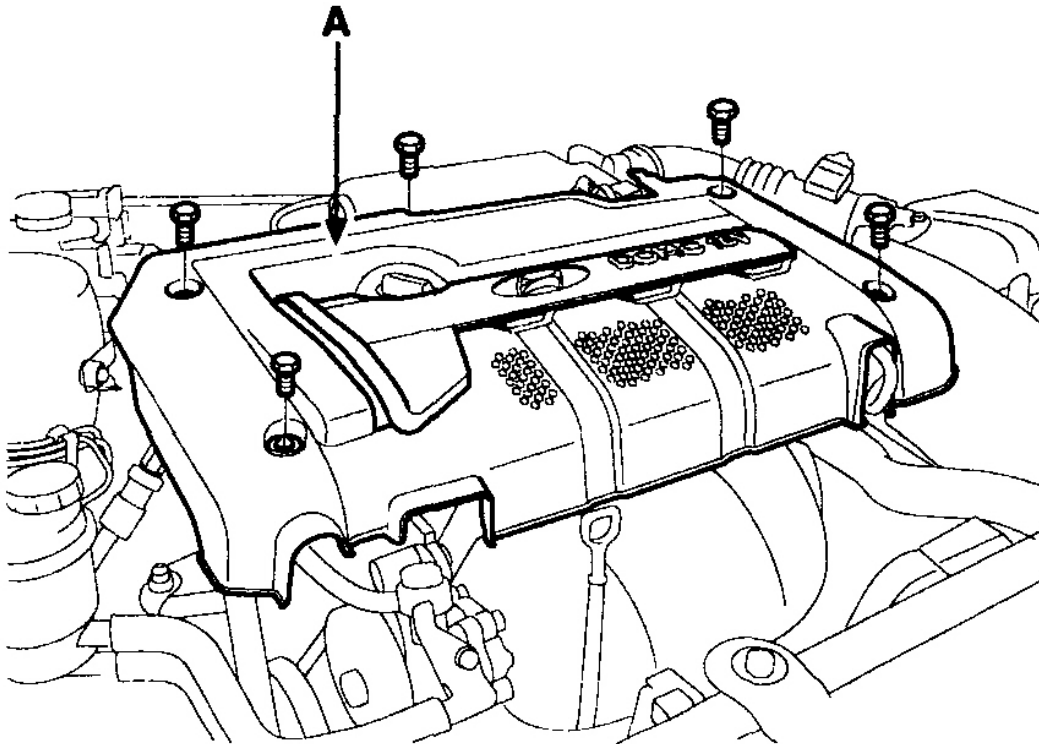

G03842258

Fig. 10: Removing Engine Cover
Courtesy of HYUNDAI MOTOR CO.

2. Remove the upper timing belt cover (A).

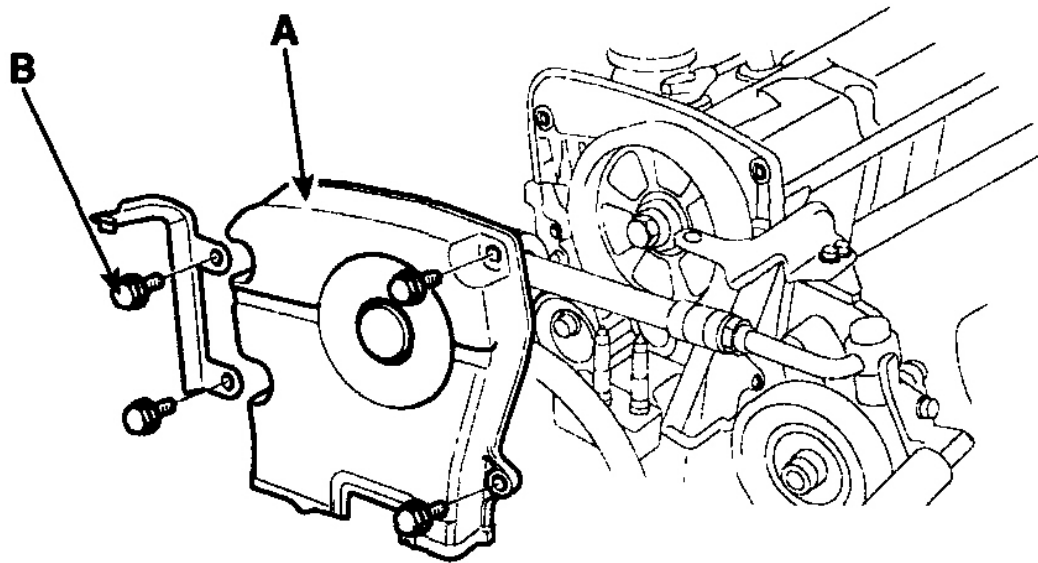


G03842259

Fig. 11: Removing Upper Timing Belt Cover
 Courtesy of HYUNDAI MOTOR CO.

- a. Loosen the upper timing cover bolts and then remove the cover.
3. Remove the cylinder head cover.
 - a. Disconnect the spark plug cables and do not pull on the spark plug by force.

NOTE: Pulling on or bending the cables may damage the conductor inside.


- b. Disconnect the PCV hose (A) and the breather hose (B) from the cylinder head cover.

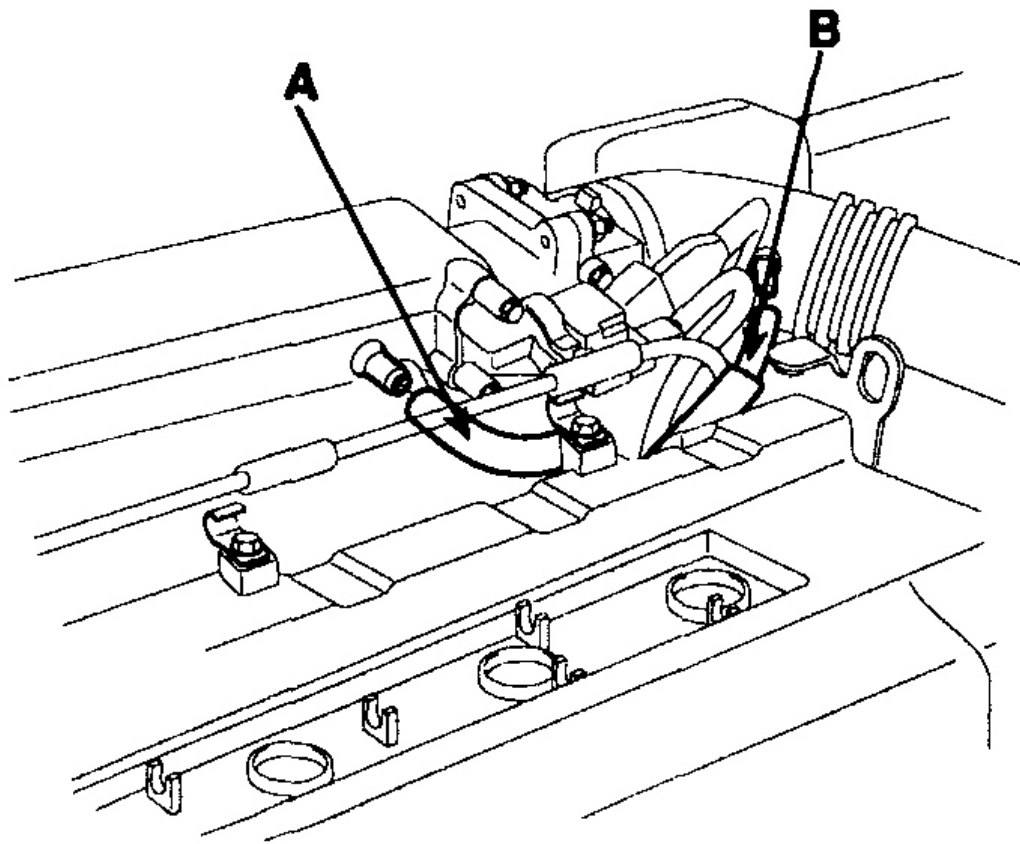

G03842260

Fig. 12: Disconnecting PCV Hose And Breather Hose
Courtesy of HYUNDAI MOTOR CO.


- c. Disconnect the accelerator cable (A) from the cylinder head cover.

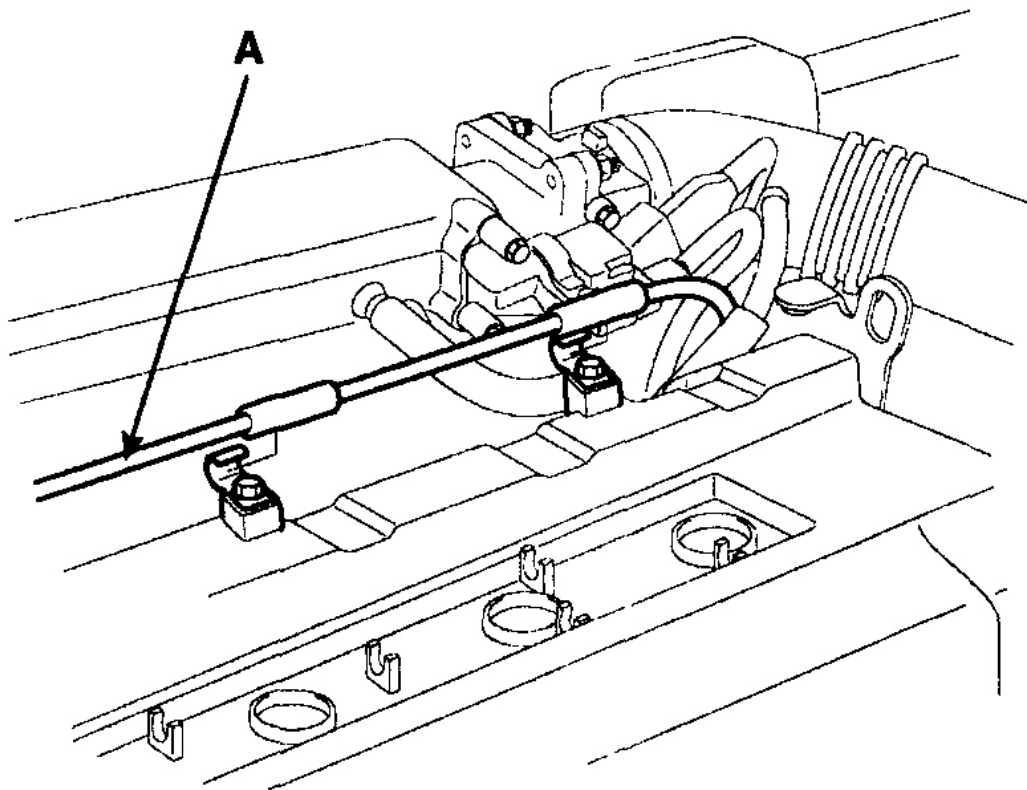

G03842261

Fig. 13: Locating Accelerator Cable
Courtesy of HYUNDAI MOTOR CO.


- d. Loosen the cylinder head cover bolts (B) and then remove the cover (A) and gasket.

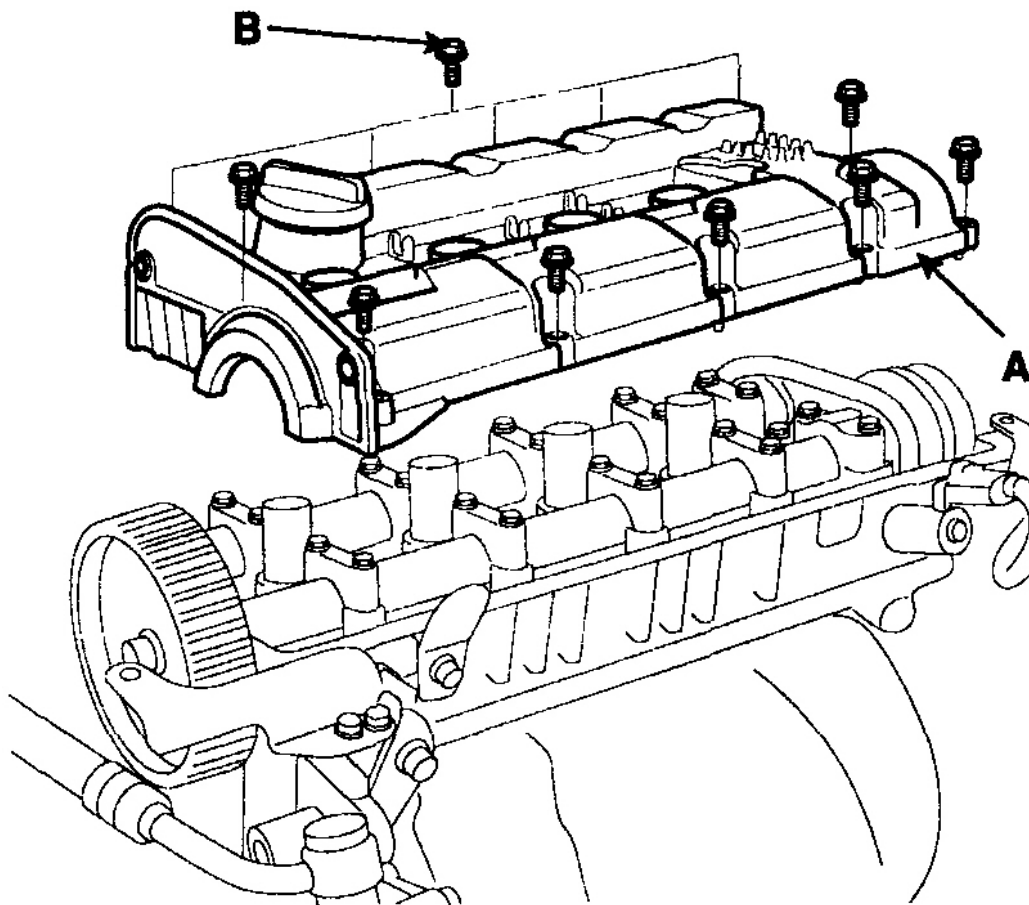

G03842262

Fig. 14: Removing Cylinder Head Bolts
Courtesy of HYUNDAI MOTOR CO.

4. Set No. 1 cylinder to TDC/compression.
 - a. Turn the crankshaft pulley and align its groove with the timing mark "T" of the lower timing belt cover.

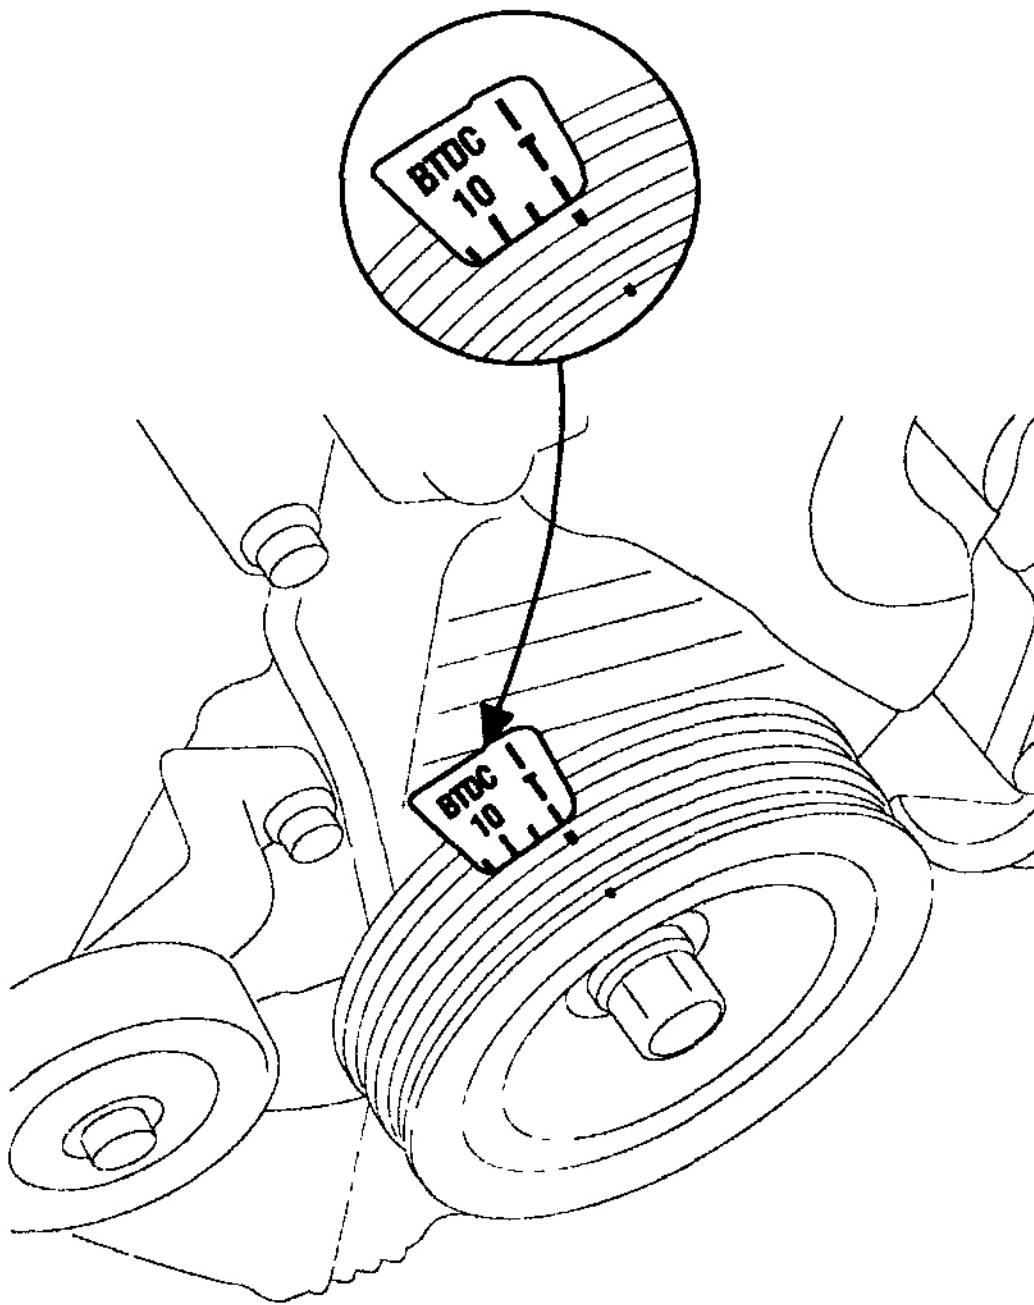


G03842263

Fig. 15: Identifying Crankshaft Pulley Alignment Mark
Courtesy of HYUNDAI MOTOR CO.

- b. Check that the hole of the camshaft timing pulley (A) is aligned with the timing mark of the bearing cap.


If not, turn the crankshaft one revolution (360°)

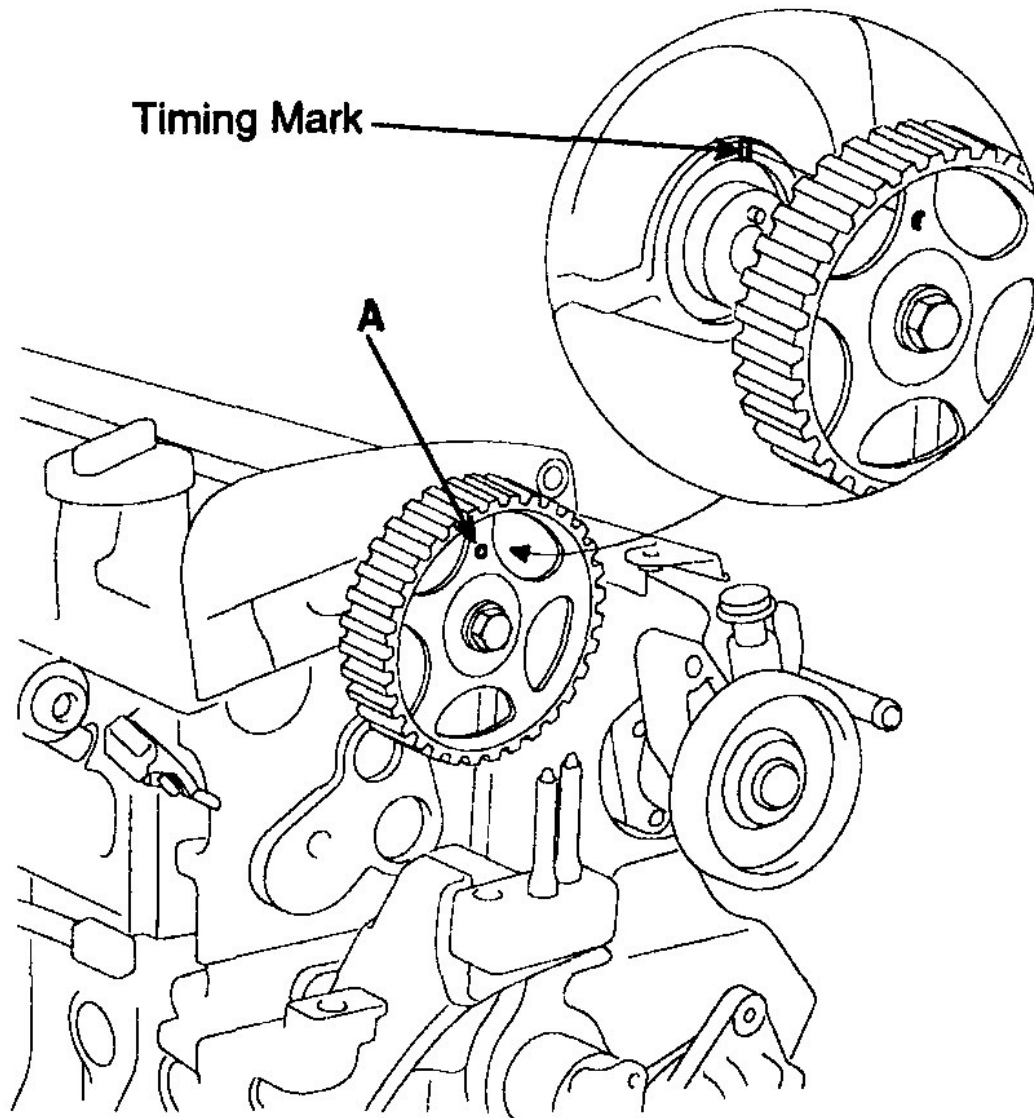

G03842264

Fig. 16: Identifying Timing Mark
Courtesy of HYUNDAI MOTOR CO.

5. Inspect the valve clearance
 - a. Check only the valve indicated as shown in **Fig. 17**. [No. 1 cylinder: TDC/Compression] measure the valve clearance

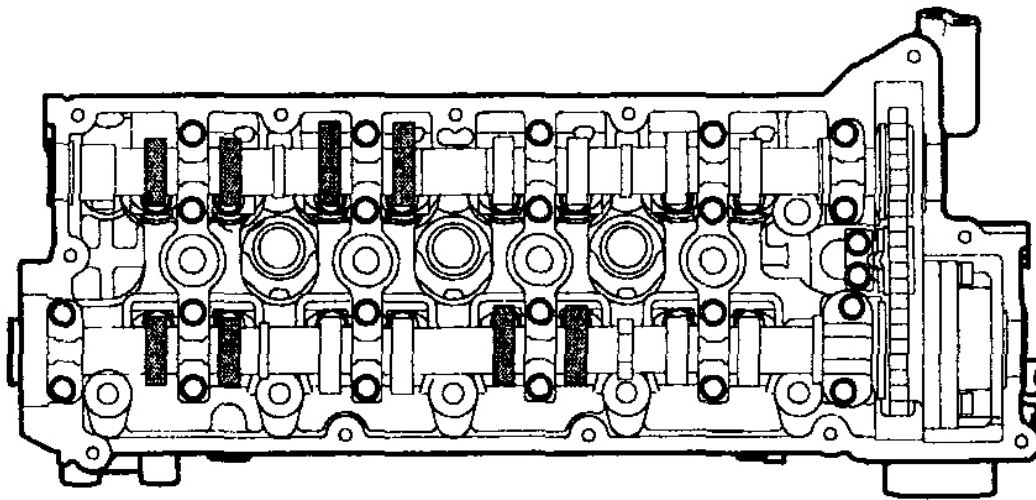

G03842265

Fig. 17: Identifying Valve Clearance
Courtesy of HYUNDAI MOTOR CO.

- Using a thickness gauge, measure the clearance between the tappet shim and the base circle of camshaft.
- Record the out-of-specification valve clearance measurements. They will be used later to determine the required replacement adjusting shim.

Valve clearance

Specification

Engine coolant temperature: 20°C (68°F)

Intake: 0.20 mm (0.0079in.)

Exhaust: 0.28 mm (0.0110in.)


Limit

Intake: 0.12 ~ 0.28 mm (0.0047 ~ 0.0110in.)

Exhaust: 0.20 ~ 0.38 mm (0.0079 ~ 0.0150in.)

- Turn the crankshaft pulley one revolution (360°) and align the groove with timing mark "T" of the lower timing belt cover.


- c. Check only valves indicated as shown in **Fig. 18**. [NO. 4 cylinder: TDC/compression]. Measure the valve clearance. (See procedure in step 6.

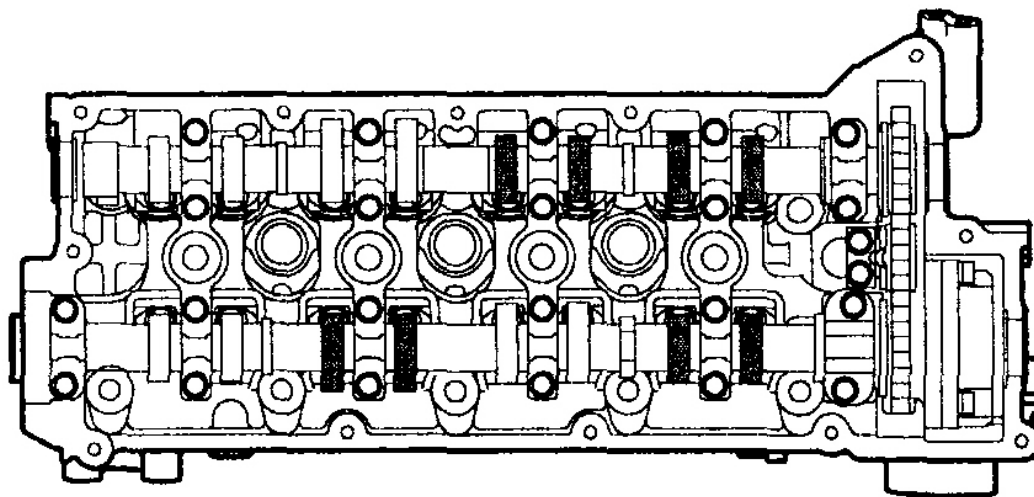

G03842266

Fig. 18: Identifying Valve Clearance
Courtesy of HYUNDAI MOTOR CO.


6. Adjust the intake and exhaust valve clearance.
- Turn the crankshaft so that the cam lobe of the camshaft on the adjusting valve is upward.
 - Using the SST(09220 ~ 2D000), press down the valve lifter and place the stopper between the camshaft and valve lifter and remove the special tool.

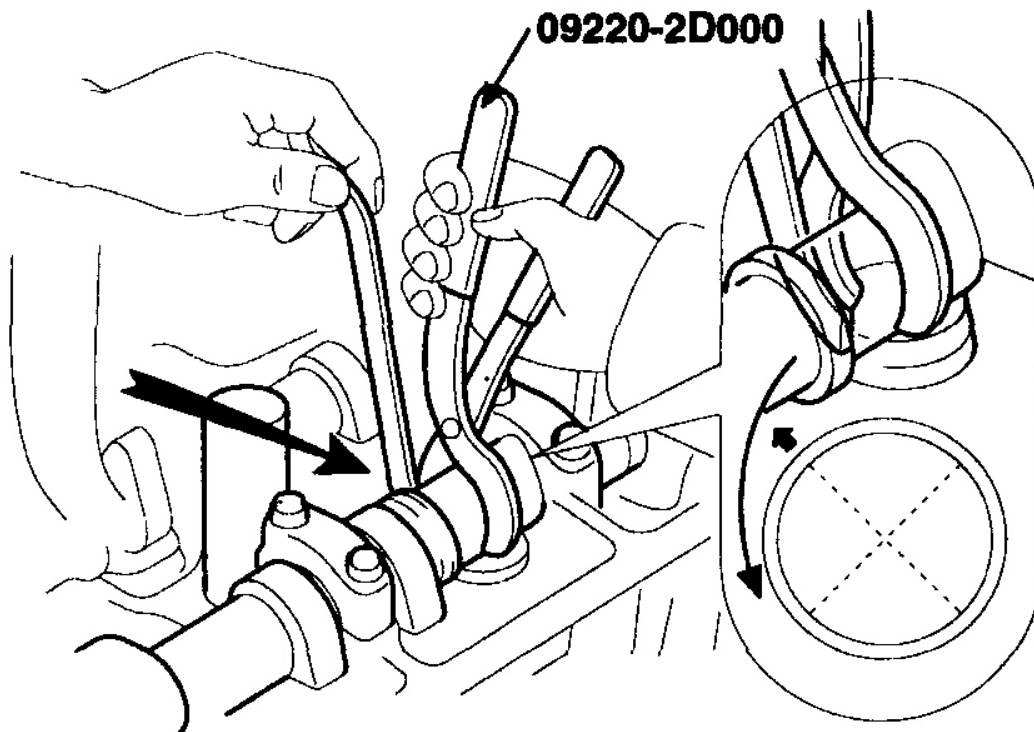

G03842267

Fig. 19: Pressing Down Valve Lifter Using SST
Courtesy of HYUNDAI MOTOR CO.


- c. Remove the adjusting shim with a small screw driver (A) and magnet (B).

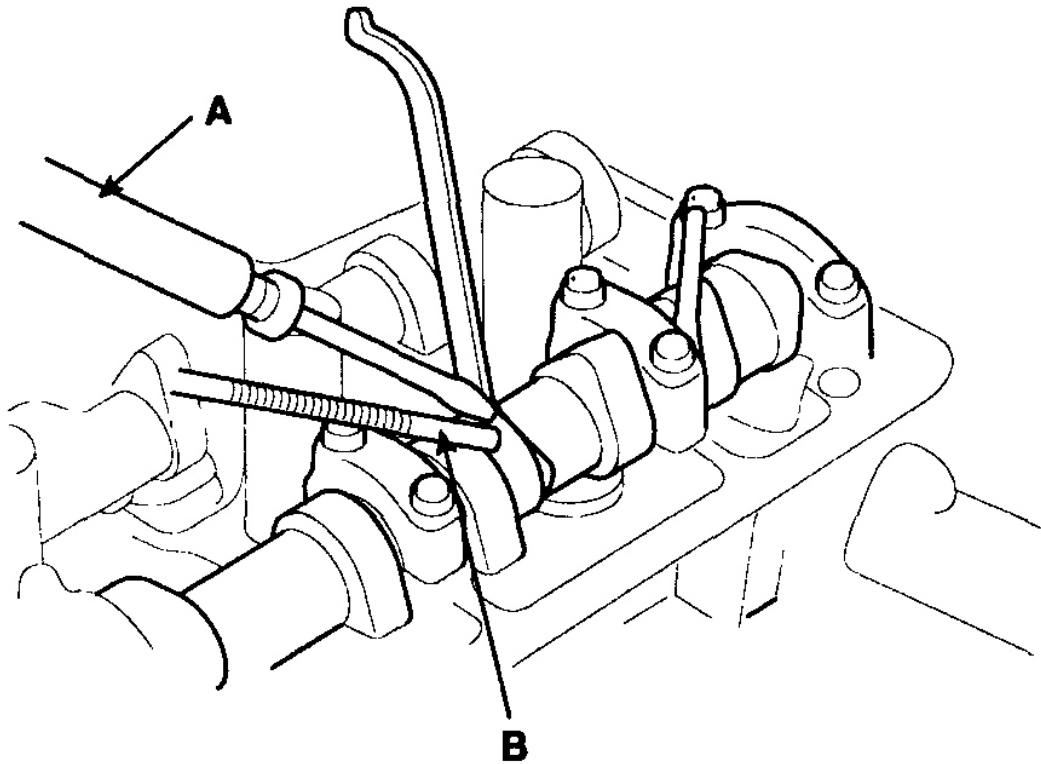

G03842268

Fig. 20: Removing Adjusting Shim Using Screw Driver And Magnet
Courtesy of HYUNDAI MOTOR CO.

- d. Measure the thickness of the removed shim using a micrometer.

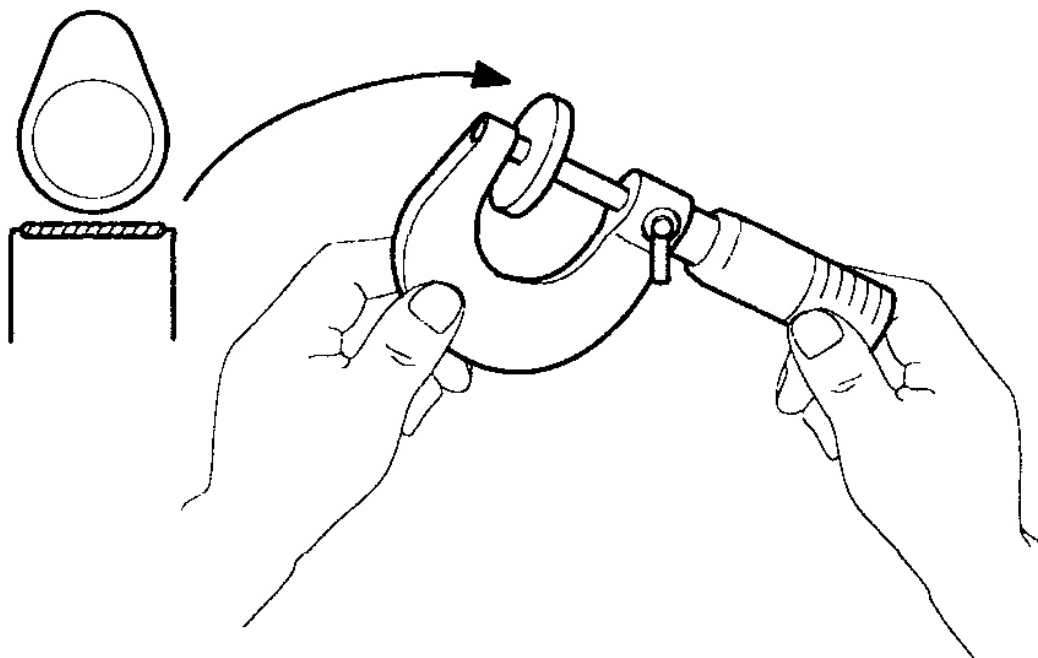

G03842269

Fig. 21: Measuring Thickness Of Removed Shim Using Micrometer
Courtesy of HYUNDAI MOTOR CO.

- e. Calculate the thickness of a new shim so that the valve clearance comes within the specified value.

Valve clearance (Engine coolant temperature: 20°C)

T: Thickness of removed shim

A: Measured valve clearance

N: Thickness of new shim

Intake: $N = T + [A - 0.20 \text{ mm}(0.0079\text{in.})]$

Exhaust: $N = T + [A - 0.28 \text{ mm}(0.0110\text{in.})]$

- f. Select a new shim with a thickness as close as possible to the calculated value. [Refer to the Adjusting shim selection chart]

NOTE: Shims are available in 20size increments of 0.04 mm (0.0016in.) from 2.00 mm (0.079in.) to 2.76 mm (0.1087in.)

2006 Hyundai Elantra GLS

2006 ENGINE Engine Mechanical System (G4GC - GSL 2.0L) - Elantra

Adjusting Shim Selection Chart (Exhaust)

Measured clearance mm (in.)	Install shim thickness mm (in.)	2.000 (0.787)	2.020 (0.795)	2.040 (0.803)	2.060 (0.811)	2.080 (0.819)	2.100 (0.827)	2.120 (0.835)	2.140 (0.843)	2.160 (0.851)	2.180 (0.859)	2.200 (0.867)	2.220 (0.875)	2.240 (0.883)	2.260 (0.891)	2.280 (0.900)	2.300 (0.908)	2.320 (0.916)	2.340 (0.924)	2.360 (0.932)	2.380 (0.940)	2.400 (0.948)	2.420 (0.956)	2.440 (0.964)	2.460 (0.972)	2.480 (0.980)	2.500 (0.988)	2.520 (0.996)	2.540 (1.004)	2.560 (1.012)	2.580 (1.020)	2.600 (1.028)	2.620 (1.036)	2.640 (1.044)	2.660 (1.052)	2.680 (1.060)	2.700 (1.068)	2.720 (1.076)	2.740 (1.084)	2.760 (1.092)	2.780 (1.100)	2.800 (1.108)	2.820 (1.116)	2.840 (1.124)	2.860 (1.132)	2.880 (1.140)	2.900 (1.148)	2.920 (1.156)	2.940 (1.164)	2.960 (1.172)	2.980 (1.180)	3.000 (1.188)	3.020 (1.196)	3.040 (1.204)	3.060 (1.212)	3.080 (1.220)	3.100 (1.228)	3.120 (1.236)	3.140 (1.244)	3.160 (1.252)	3.180 (1.260)	3.200 (1.268)	3.220 (1.276)	3.240 (1.284)	3.260 (1.292)	3.280 (1.300)	3.300 (1.308)	3.320 (1.316)	3.340 (1.324)	3.360 (1.332)	3.380 (1.340)	3.400 (1.348)	3.420 (1.356)	3.440 (1.364)	3.460 (1.372)	3.480 (1.380)	3.500 (1.388)	3.520 (1.396)	3.540 (1.404)	3.560 (1.412)	3.580 (1.420)	3.600 (1.428)	3.620 (1.436)	3.640 (1.444)	3.660 (1.452)	3.680 (1.460)	3.700 (1.468)	3.720 (1.476)	3.740 (1.484)	3.760 (1.492)	3.780 (1.500)	3.800 (1.508)	3.820 (1.516)	3.840 (1.524)	3.860 (1.532)	3.880 (1.540)	3.900 (1.548)	3.920 (1.556)	3.940 (1.564)	3.960 (1.572)	3.980 (1.580)	4.000 (1.588)	4.020 (1.596)	4.040 (1.604)	4.060 (1.612)	4.080 (1.620)	4.100 (1.628)	4.120 (1.636)	4.140 (1.644)	4.160 (1.652)	4.180 (1.660)	4.200 (1.668)	4.220 (1.676)	4.240 (1.684)	4.260 (1.692)	4.280 (1.700)	4.300 (1.708)	4.320 (1.716)	4.340 (1.724)	4.360 (1.732)	4.380 (1.740)	4.400 (1.748)	4.420 (1.756)	4.440 (1.764)	4.460 (1.772)	4.480 (1.780)	4.500 (1.788)	4.520 (1.796)	4.540 (1.804)	4.560 (1.812)	4.580 (1.820)	4.600 (1.828)	4.620 (1.836)	4.640 (1.844)	4.660 (1.852)	4.680 (1.860)	4.700 (1.868)	4.720 (1.876)	4.740 (1.884)	4.760 (1.892)	4.780 (1.900)	4.800 (1.908)	4.820 (1.916)	4.840 (1.924)	4.860 (1.932)	4.880 (1.940)	4.900 (1.948)	4.920 (1.956)	4.940 (1.964)	4.960 (1.972)	4.980 (1.980)	5.000 (1.988)	5.020 (1.996)	5.040 (2.004)	5.060 (2.012)	5.080 (2.020)	5.100 (2.028)	5.120 (2.036)	5.140 (2.044)	5.160 (2.052)	5.180 (2.060)	5.200 (2.068)	5.220 (2.076)	5.240 (2.084)	5.260 (2.092)	5.280 (2.100)	5.300 (2.108)	5.320 (2.116)	5.340 (2.124)	5.360 (2.132)	5.380 (2.140)	5.400 (2.148)	5.420 (2.156)	5.440 (2.164)	5.460 (2.172)	5.480 (2.180)	5.500 (2.188)	5.520 (2.196)	5.540 (2.204)	5.560 (2.212)	5.580 (2.220)	5.600 (2.228)	5.620 (2.236)	5.640 (2.244)	5.660 (2.252)	5.680 (2.260)	5.700 (2.268)	5.720 (2.276)	5.740 (2.284)	5.760 (2.292)	5.780 (2.300)	5.800 (2.308)	5.820 (2.316)	5.840 (2.324)	5.860 (2.332)	5.880 (2.340)	5.900 (2.348)	5.920 (2.356)	5.940 (2.364)	5.960 (2.372)	5.980 (2.380)	6.000 (2.388)	6.020 (2.396)	6.040 (2.404)	6.060 (2.412)	6.080 (2.420)	6.100 (2.428)	6.120 (2.436)	6.140 (2.444)	6.160 (2.452)	6.180 (2.460)	6.200 (2.468)	6.220 (2.476)	6.240 (2.484)	6.260 (2.492)	6.280 (2.500)	6.300 (2.508)	6.320 (2.516)	6.340 (2.524)	6.360 (2.532)	6.380 (2.540)	6.400 (2.548)	6.420 (2.556)	6.440 (2.564)	6.460 (2.572)	6.480 (2.580)	6.500 (2.588)	6.520 (2.596)	6.540 (2.604)	6.560 (2.612)	6.580 (2.620)	6.600 (2.628)	6.620 (2.636)	6.640 (2.644)	6.660 (2.652)	6.680 (2.660)	6.700 (2.668)	6.720 (2.676)	6.740 (2.684)	6.760 (2.692)	6.780 (2.700)	6.800 (2.708)	6.820 (2.716)	6.840 (2.724)	6.860 (2.732)	6.880 (2.740)	6.900 (2.748)	6.920 (2.756)	6.940 (2.764)	6.960 (2.772)	6.980 (2.780)	7.000 (2.788)	7.020 (2.796)	7.040 (2.804)	7.060 (2.812)	7.080 (2.820)	7.100 (2.828)	7.120 (2.836)	7.140 (2.844)	7.160 (2.852)	7.180 (2.860)	7.200 (2.868)	7.220 (2.876)	7.240 (2.884)	7.260 (2.892)	7.280 (2.900)	7.300 (2.908)	7.320 (2.916)	7.340 (2.924)	7.360 (2.932)	7.380 (2.940)	7.400 (2.948)	7.420 (2.956)	7.440 (2.964)	7.460 (2.972)	7.480 (2.980)	7.500 (2.988)	7.520 (2.996)	7.540 (3.004)	7.560 (3.012)	7.580 (3.020)	7.600 (3.028)	7.620 (3.036)	7.640 (3.044)	7.660 (3.052)	7.680 (3.060)	7.700 (3.068)	7.720 (3.076)	7.740 (3.084)	7.760 (3.092)	7.780 (3.100)	7.800 (3.108)	7.820 (3.116)	7.840 (3.124)	7.860 (3.132)	7.880 (3.140)	7.900 (3.148)	7.920 (3.156)	7.940 (3.164)	7.960 (3.172)	7.980 (3.180)	8.000 (3.188)	8.020 (3.196)	8.040 (3.204)	8.060 (3.212)	8.080 (3.220)	8.100 (3.228)	8.120 (3.236)	8.140 (3.244)	8.160 (3.252)	8.180 (3.260)	8.200 (3.268)	8.220 (3.276)	8.240 (3.284)	8.260 (3.292)	8.280 (3.300)	8.300 (3.308)	8.320 (3.316)	8.340 (3.324)	8.360 (3.332)	8.380 (3.340)	8.400 (3.348)	8.420 (3.356)	8.440 (3.364)	8.460 (3.372)	8.480 (3.380)	8.500 (3.388)	8.520 (3.396)	8.540 (3.404)	8.560 (3.412)	8.580 (3.420)	8.600 (3.428)	8.620 (3.436)	8.640 (3.444)	8.660 (3.452)	8.680 (3.460)	8.700 (3.468)	8.720 (3.476)	8.740 (3.484)	8.760 (3.492)	8.780 (3.500)	8.800 (3.508)	8.820 (3.516)	8.840 (3.524)	8.860 (3.532)	8.880 (3.540)	8.900 (3.548)	8.920 (3.556)	8.940 (3.564)	8.960 (3.572)	8.980 (3.580)	9.000 (3.588)	9.020 (3.596)	9.040 (3.604)	9.060 (3.612)	9.080 (3.620)	9.100 (3.628)	9.120 (3.636)	9.140 (3.644)	9.160 (3.652)	9.180 (3.660)	9.200 (3.668)	9.220 (3.676)	9.240 (3.684)	9.260 (3.692)	9.280 (3.700)	9.300 (3.708)	9.320 (3.716)	9.340 (3.724)	9.360 (3.732)	9.380 (3.740)	9.400 (3.748)	9.420 (3.756)	9.440 (3.764)	9.460 (3.772)	9.480 (3.780)	9.500 (3.788)	9.520 (3.796)	9.540 (3.804)	9.560 (3.812)	9.580 (3.820)	9.600 (3.828)	9.620 (3.836)	9.640 (3.844)	9.660 (3.852)	9.680 (3.860)	9.700 (3.868)	9.720 (3.876)	9.740 (3.884)	9.760 (3.892)	9.780 (3.900)	9.800 (3.908)	9.820 (3.916)	9.840 (3.924)	9.860 (3.932)	9.880 (3.940)	9.900 (3.948)	9.920 (3.956)	9.940 (3.964)	9.960 (3.972)	9.980 (3.980)	10.000 (3.988)	10.020 (3.996)	10.040 (4.004)	10.060 (4.012)	10.080 (4.020)	10.100 (4.028)	10.120 (4.036)	10.140 (4.044)	10.160 (4.052)	10.180 (4.060)	10.200 (4.068)	10.220 (4.076)	10.240 (4.084)	10.260 (4.092)	10.280 (4.100)	10.300 (4.108)	10.320 (4.116)	10.340 (4.124)	10.360 (4.132)	10.380 (4.140)	10.400 (4.148)	10.420 (4.156)	10.440 (4.164)	10.460 (4.172)	10.480 (4.180)	10.500 (4.188)	10.520 (4.196)	10.540 (4.204)	10.560 (4.212)	10.580 (4.220)	10.600 (4.228)	10.620 (4.236)	10.640 (4.244)	10.660 (4.252)	10.680 (4.260)	10.700 (4.268)	10.720 (4.276)	10.740 (4.284)	10.760 (4.292)	10.780 (4.300)	10.800 (4.308)	10.820 (4.316)	10.840 (4.324)	10.860 (4.332)	10.880 (4.340)	10.900 (4.348)	10.920 (4.356)	10.940 (4.364)	10.960 (4.372)	10.980 (4.380)	11.000 (4.388)	11.020 (4.396)	11.040 (4.404)	11.060 (4.412)	11.080 (4.420)	11.100 (4.428)	11.120 (4.436)	11.140 (4.444)	11.160 (4.452)	11.180 (4.460)	11.200 (4.468)	11.220 (4.476)	11.240 (4.484)	11.260 (4.492)	11.280 (4.500)	11.300 (4.508)	11.320 (4.516)	11.340 (4.524)	11.360 (4.532)	11.380 (4.540)	11.400 (4.548)	11.420 (4.556)	11.440 (4.564)	11.460 (4.572)	11.480 (4.580)	11.500 (4.588)	11.520 (4.596)	11.540 (4.604)	11.560 (4.612)	11.580 (4.620)	11.600 (4.628)	11.620 (4.636)	11.640 (4.644)	11.660 (4.652)	11.680 (4.660)	11.700 (4.668)	11.720 (4.676)	11.740 (4.684)	11.760 (4.692)	11.780 (4.700)	11.800 (4.708)	11.820 (4.716)	11.840 (4.724)	11.860 (4.732)	11.880 (4.740)	11.900 (4.748)	11.920 (4.756)	11.940 (4.764)	11.960 (4.772)	11.980 (4.780)	12.000 (4.788)	12.020 (4.796)	12.040 (4.804)	12.060 (4.812)	12.080 (4.820)	12.100 (4.828)	12.120 (4.836)	12.140 (4.844)	12.160 (4.852)	12.180 (4.860)	12.200 (4.868)	12.220 (4.876)	12.240 (4.884)	12.260 (4.892)	12.280 (4.900)	12.300 (4.908)	12.320 (4.916)	12.340 (4.924)	12.360 (4.932)	12.380 (4.940)	12.400 (4.948)	12.420 (4.956)	12.440 (4.964)	12.460 (4.972)	12.480 (4.980)	12.500 (4.988)	12.520 (4.996)	12.540 (5.004)	12.560 (5.012)	12.580 (5.020)	12.600 (5.028)	12.620 (5.036)	12.640 (5.044)	12.660 (5.052)	12.680 (5.060)	12.700 (5.068)	12.720 (5.076)	12.740 (5.084)	12.760 (5.092)	12.780 (5.100)	12.800 (5.108)	12.820 (5.116)	12.840 (5.124)	12.860 (5.132)	12.880 (5.140)	12.900 (5.148)	12.920 (5.156)	12.940 (5.164)	12.960 (5.172)	12.980 (5.180)	13.000 (5.188)	13.020 (5.196)	13.040 (5.204)	13.060 (5.212)	13.080 (5.220)	13.100 (5.228)	13.120 (5.236)	13.140 (5.244)	13.160 (5.252)	13.180 (5.260)	13.200 (5.268)	13.220 (5.276)	13.240 (5.284)	13.260 (5.292)	13.280 (5.300)	13.300 (5.308)	13.320 (5.316)	13.340 (5.324)	13.360 (5.332)	13.380 (5.340)	13.400 (5.348)	13.420 (5.356)	13.440 (5.364)	13.460 (5.372)	13.480 (5.380)	13.500 (5.388)	13.520 (5.396)	13.540 (5.404)	13.560 (5.412)	13.580 (5.420)	13.600 (5.428)	13.620 (5.436)	13.640 (5.444)	13.660 (5.452)	13.680 (5.460)	13.700 (5.468)	13.720 (5.476)	13.740 (5.484)	13.760 (5.492)	13.780 (5.500)	13.800 (5.508)	13.820 (5.516)	13.840 (5.524)	13.860 (5.532)	13.880 (5.540)	13.900 (5.548)	13.920 (5.556)	13.940 (5.564)	13.960 (5.572)	13.980 (5.580)	14.000 (5.588)	14.020 (5.596)	14.040 (5.604)	14.060 (5.612)	14.080 (5.620)	14.100 (5.628)	14.120 (5.636)	14.140 (5.644)	14.160 (5.652)	14.180 (5.660)	14.200 (5.668)	14.220 (5.676)	14.240 (5.684)	14.260 (5.692)	14.280 (5.700)	14.300 (5.708)	14.320 (5.716)	14.340 (5.724)	14.360 (5.732)	14.380 (5.740)	14.400 (5.748)	14.420 (5.756)	14.440 (5.764)	14.460 (5.772)	14.480 (5.780)	14.500 (5.788)	14.520 (5.796)	14.540 (5.804)	14.560 (5.812)	14.580 (5.820)	14.600 (5.828)	14.620 (5.836)	14.640 (5.844)	14.660 (5.852)	14.680 (5.860)	14.700 (5.868)	14.720 (5.876)	14.740 (5.884)	14.760 (5.892)	14.780 (5.900)	14.800 (5.908)	14.820 (5.916)	14.840 (5.924)	14.860 (5.932)	14.880 (5.940)	14.900 (5.948)	14.920 (5.956)	14.940 (5.964)	14.960 (5.972)	14.980 (5.980)	15.000 (5.988)	15.020 (5.996)	15.040 (6.004)	15.060 (6.012)	15.080 (6.020)	15.100 (6.028)	15.120 (6.036)	15.140 (6.044)	15.160 (6.052)	15.180 (6.060)	15.200 (6.068)	15.220 (6.076)	15.240 (6.084)	15.260 (6.092)	15.280 (6.100)	15.300 (6.108)	15.320 (6.116)	15.340 (6.124)	15.360 (6.132)	15.380 (6.140)	15.400 (6.148)	15.420 (6.156)	15.440 (6.164)	15.460 (6.172)	15.480 (6.180)	15.500 (6.188)	15.520 (6.196)	15.540 (6.204)	15.560 (6.212)	15.580 (6.220)	15.600 (6.228)	15.620 (6.236)	15.640 (6.244)	15.660 (6.252)	15.680 (6.260)	15.700 (6.268)	15.720 (6.276)	15.740 (6.284)	15.760 (6.292)	15.780 (6.300)	15.800 (6.308)	15.820 (6.316)	15.840 (6.324)	15.860 (6.332)	15.880 (6.340)	15.900 (6.348)	15.920 (6.356)	15.940 (6.364)	15.960 (6.372)	15.980 (6.380)	16.000 (6.388)	16.020 (6.396)	16.040 (6.404)	16.060 (6.412)	16.080 (6.420)	16.100 (6.428)	16.120 (6.436)	16.140 (6.444)	16.160 (6.452)	16.180 (6.460)	16.200 (6.468)	16.220 (6.476)	16.240 (6.484)	16.260 (6.492)	16.280 (6.500)	16.300 (6.508)	16.320 (6.516)	16.340 (6.524)	16.360 (6.532)	16.380 (6.540)	16.400 (6.548)	16.420 (6.556)	16.440 (6.564)	16.460 (6.572)	16.480 (6.580)	16.500 (6.588)	16.520 (6.596)	16.540 (6.604)	16.560 (6.612)	16.580 (6.620)	16.600 (6.628)	16.620 (6.636)	16.640 (6.644)	16.660 (6.652)	16.680 (6.660)	16.700 (6.668)	16.720 (6.676)	16.740 (6.684)	16.760 (6.692)	16
--------------------------------	------------------------------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	---------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----

2006 Hyundai Elantra GLS

2006 ENGINE Engine Mechanical System (G4GC - GSL 2.0L) - Elantra

		lifters.
Engine misfire with coolant consumption.	- Faulty cylinder head gasket and/or cranking or other damage to the cylinder head and engine block cooling system. - Coolant consumption may or may not cause the engine to overheat.	- Inspect the cylinder head and engine block for damage to the coolant passages and/or a faulty head gasket. - Repair or replace as required.
Engine misfire with excessive oil consumption	Worn valves, valve guides and/or valve stem oil seals.	Repair or replace as required.
	Worn piston rings. (Oil consumption may or may not cause the engine to misfire)	- Inspect the cylinder for a loss of compression. - Repair or replace as required.
Engine noise on start-up, but only lasting a few seconds.	Incorrect oil viscosity	- Drain the oil. - Install the correct viscosity oil.
	Worn crankshaft thrust bearing	- Inspect the thrust bearing and crankshaft. - Repair or replace as required.
Upper engine noise, regardless of engine speed.	Low oil pressure	Repair or replace as required.
	Broken valve spring.	Replace the valve spring.
	Worn or dirty valve lifters.	Replace the valve lifters.
	Stretched or broken timing chain and/or damaged sprocket teeth.	Replace the timing chain and sprockets.
	Worn timing chain tensioner, if applicable.	Replace the timing chain tensioner as required.
	Worn camshaft lobes.	- Inspect the camshaft lobes. - Replace the timing camshaft and valve lifters as required.
	Worn valve guides or valve stems.	Inspect the valves and valve guides, then repair as required.
	Stuck valves. (Carbon on the valve stem or valve seat may cause the valve to stay open.)	Inspect the valves and valve guides, then repair as required.
Lower engine noise, regardless of engine speed.	Low oil pressure.	Repair or replace damaged components as required.
	Loose or damaged flywheel.	Repair or replace the flywheel.
	Damaged oil pan, contacting the oil	Inspect the oil pan.

2006 Hyundai Elantra GLS

2006 ENGINE Engine Mechanical System (G4GC - GSL 2.0L) - Elantra

	pump screen.	- Inspect the oil pump screen. - Repair or replace as required.
	Oil pump screen loose, damaged or restricted.	- Inspect the oil pump screen. - Repair or replace as required.
	Excessive piston-to-cylinder bore clearance.	- Inspect the piston and cylinder bore. - Repair as required.
	Excessive piston pin-to-bore clearance	- Inspect the piston, piston pin and the connecting rod. - Repair or replace as required.
	Excessive connecting rod bearing clearance	Inspect the following components and repair as required. - The connecting rod bearings. - The connecting rods. - The crankshaft. - The crankshaft journal.
	Excessive crankshaft bearing clearance	Inspect the following components, and repair as required: - The crankshaft bearing. - The crankshaft journals.
	Incorrect piston, piston pin and connecting rod installation	- Verify the piston pins and connecting rods are installed correctly. - Repair as required.
Engine noise under load	Low oil pressure	Repair or replace as required.
	Excessive connecting rod bearing clearance	Inspect the following components and repair as required: The connecting rod bearings.

2006 Hyundai Elantra GLS

2006 ENGINE Engine Mechanical System (G4GC - GSL 2.0L) - Elantra

		• The connecting rods. • The crankshaft
	Excessive crankshaft bearing clearance	Inspect the following components, and repair as required: • The crankshaft bearings. • The crankshaft journals. • The cylinder block crankshaft bearing bore.
Engine will not crank-crankshaft will not rotate	Hydraulically locked cylinder • Coolant/antifreeze in cylinder. • Oil in cylinder. • Fuel in cylinder	1. Remove spark plugs and check for fluid. 2. Inspect for broken head gasket. 3. Inspect for cracked engine block or cylinder head. 4. Inspect for a sticking fuel injector and/or leaking fuel regulator.
	Broken timing chain and/or timing chain gears.	1. Inspect timing chain and gears. 2. Repair as required.
	Material cylinder • Broken valve • Piston material • Foreign material	1. Inspect cylinder for damaged components and/or foreign materials. 2. Repair or replace as required
	Seized crankshaft or connecting rod bearings.	1. Inspect crankshaft and connecting rod bearing. 2. Repair as required.
	Bent or broken connecting rod.	1. Inspect connecting rods. 2. Repair as required.
	Broken crankshaft	1. Inspect crankshaft. 2. Repair as required.


SPECIAL TOOLS

ENGINE MECHANICAL SYSTEM SPECIAL TOOLS

Tool (Number and name)	Illustration	Use
Crankshaft front oil seal installer (09214-33000)		Installation of the front oil seal


2006 Hyundai Elantra GLS

2006 ENGINE Engine Mechanical System (G4GC - GSL 2.0L) - Elantra

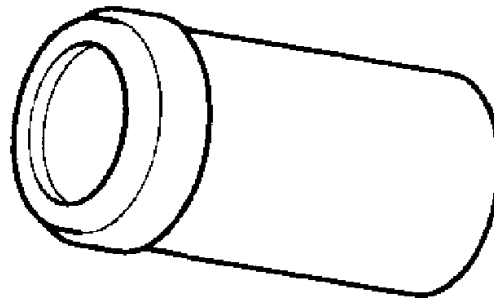

G03842272


Valve clearance adjust tool set (09220-2D000)

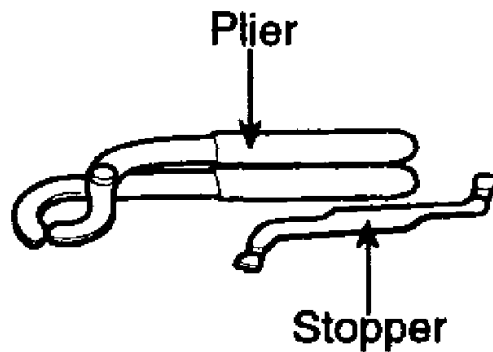

G03842273

Removal and installation of the tappet shim

Camshaft oil seal installer (09221-21000)

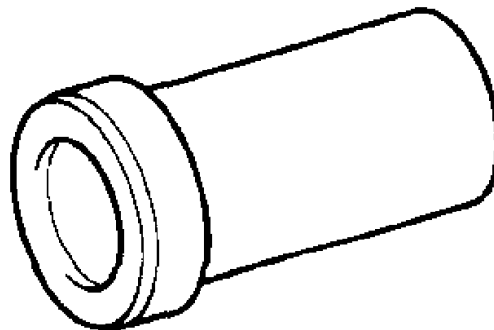

G03842274




Installation of the camshaft oil seal


Valve guide installer (09221-3F100 A/B)

Remove and installation of the valve guide

2006 Hyundai Elantra GLS

2006 ENGINE Engine Mechanical System (G4GC - GSL 2.0L) - Elantra

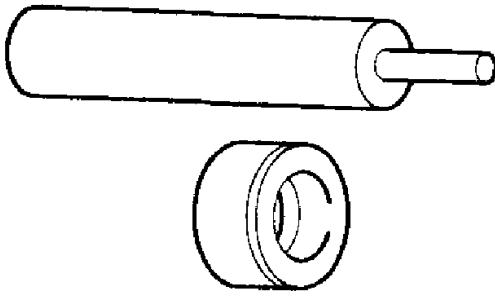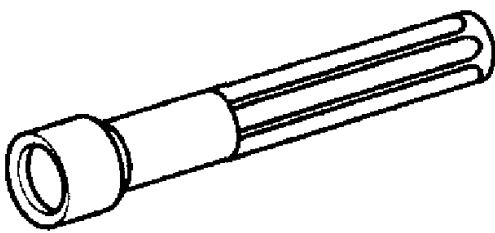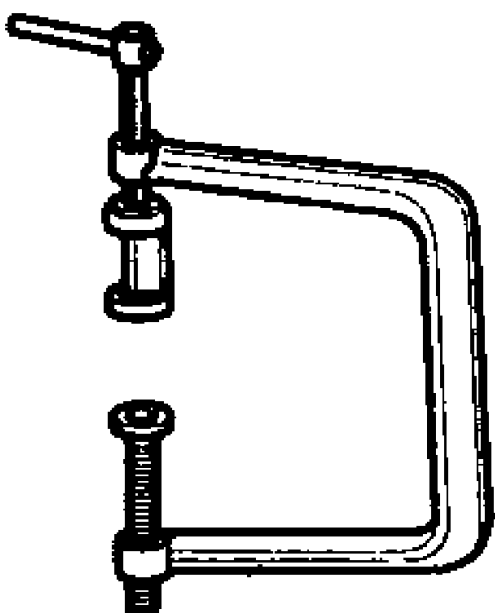	 G03842275	
Valve stem oil seal installer (09222-22001)	 G03842276	Installation of the valve stem oil seal
Valve spring compressor & adaptor (09222-28000, 09222-28100)	 G03842277	Removal and installation of the intake or exhaust valve
Crankshaft rear oil seal installer (09231-21000)		1. Installation of the engine rear oil seal

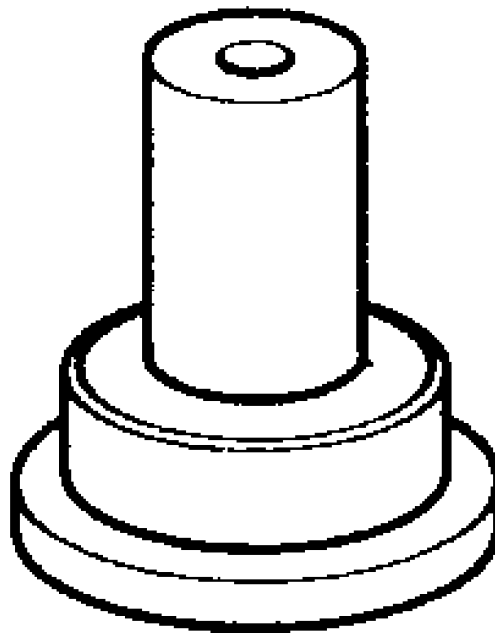


G03842278

2. Installation of the crankshaft rear oil seal

TIMING SYSTEM

TIMING BELT

COMPONENT

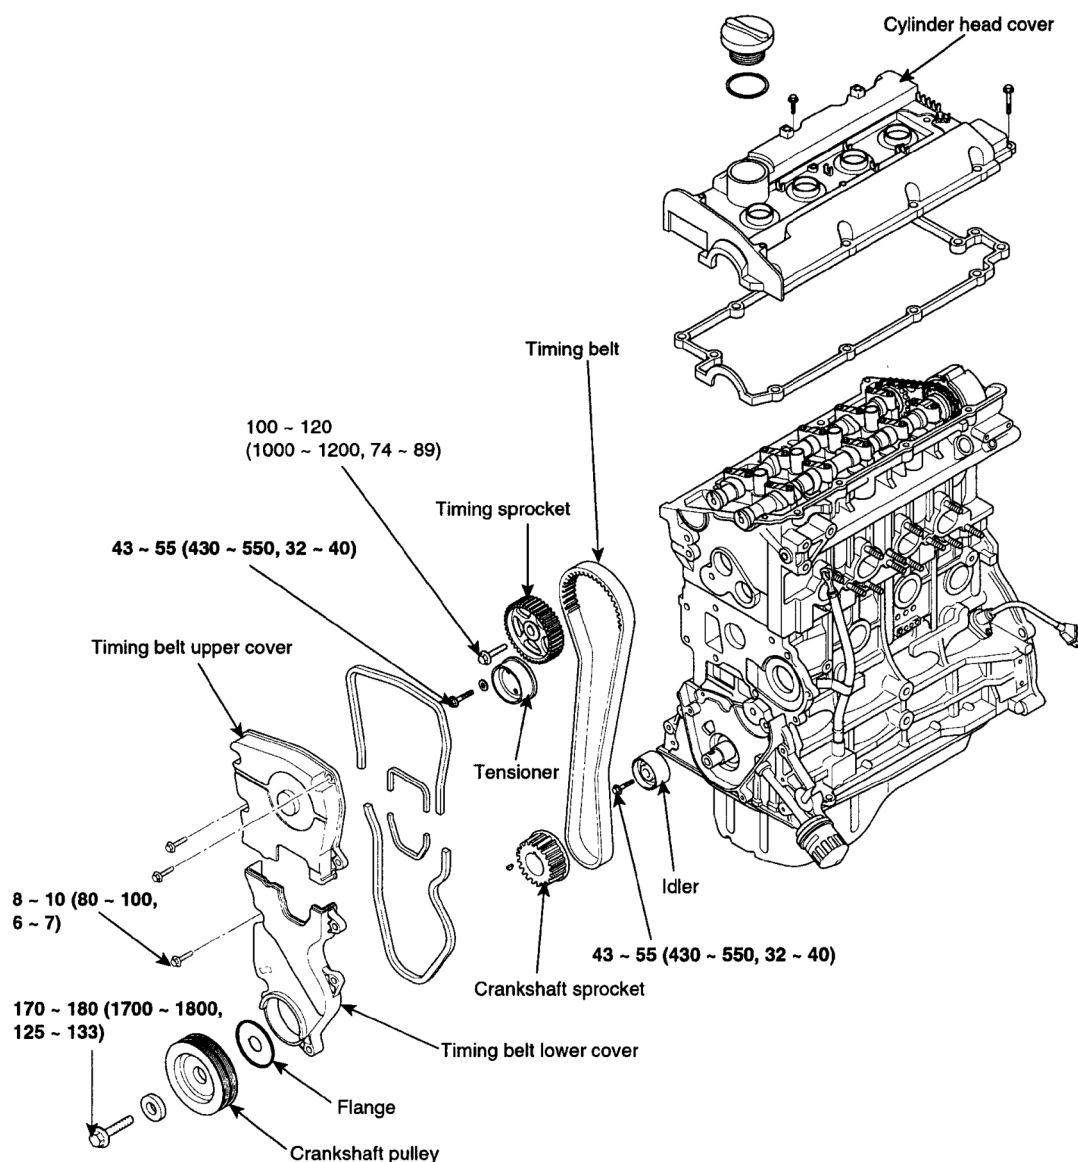

TORQUE : Nm (kgf.cm, lbf.ft)


G03842279

Fig. 24: Identifying Timing Belt Components With Torque Specifications
Courtesy of HYUNDAI MOTOR CO.

REMOVAL

Engine removal is not required for this procedure.


1. Remove the engine cover (A).

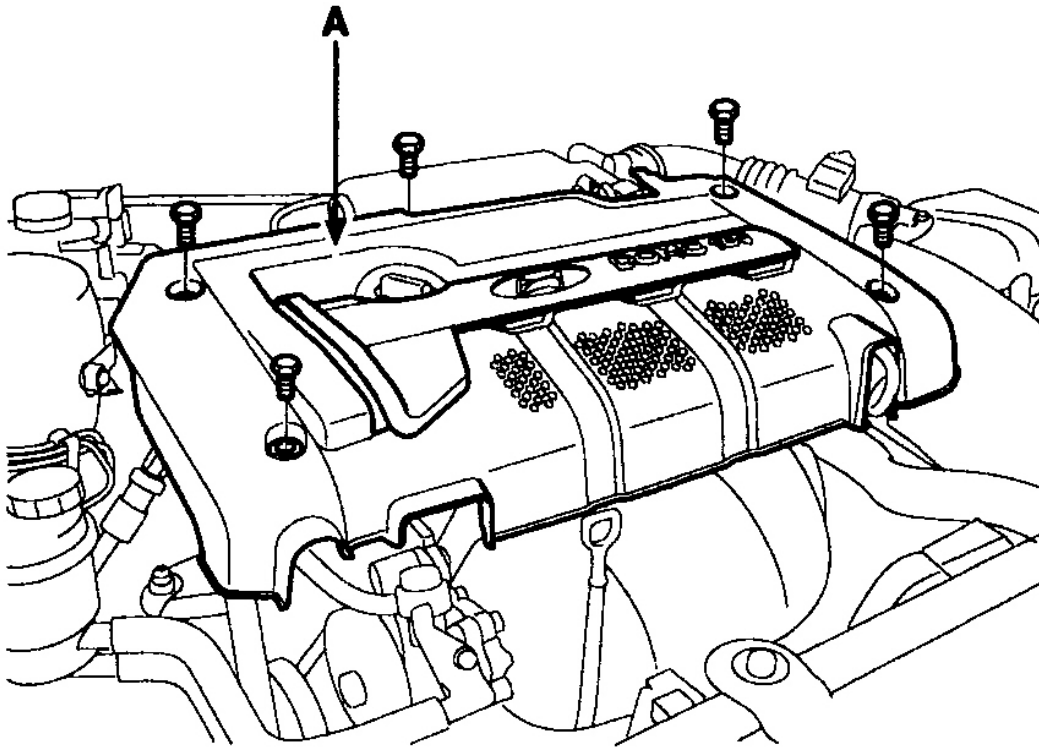

G03842280

Fig. 25: Removing Engine Cover
Courtesy of HYUNDAI MOTOR CO.


2. Remove RH front wheel.
3. Remove 2 bolts (B) and RH side cover (A).

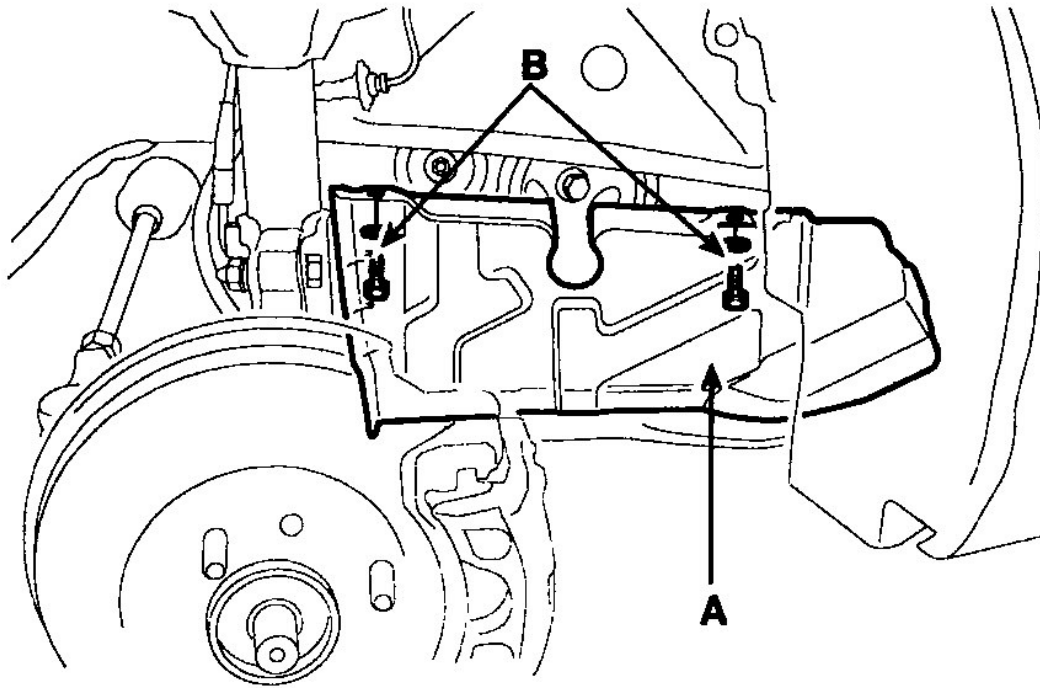

G03842281

Fig. 26: Identifying Bolts And RH Side Cover
Courtesy of HYUNDAI MOTOR CO.

4. Remove the engine mount bracket.
 1. Set the jack to the engine oil pan.

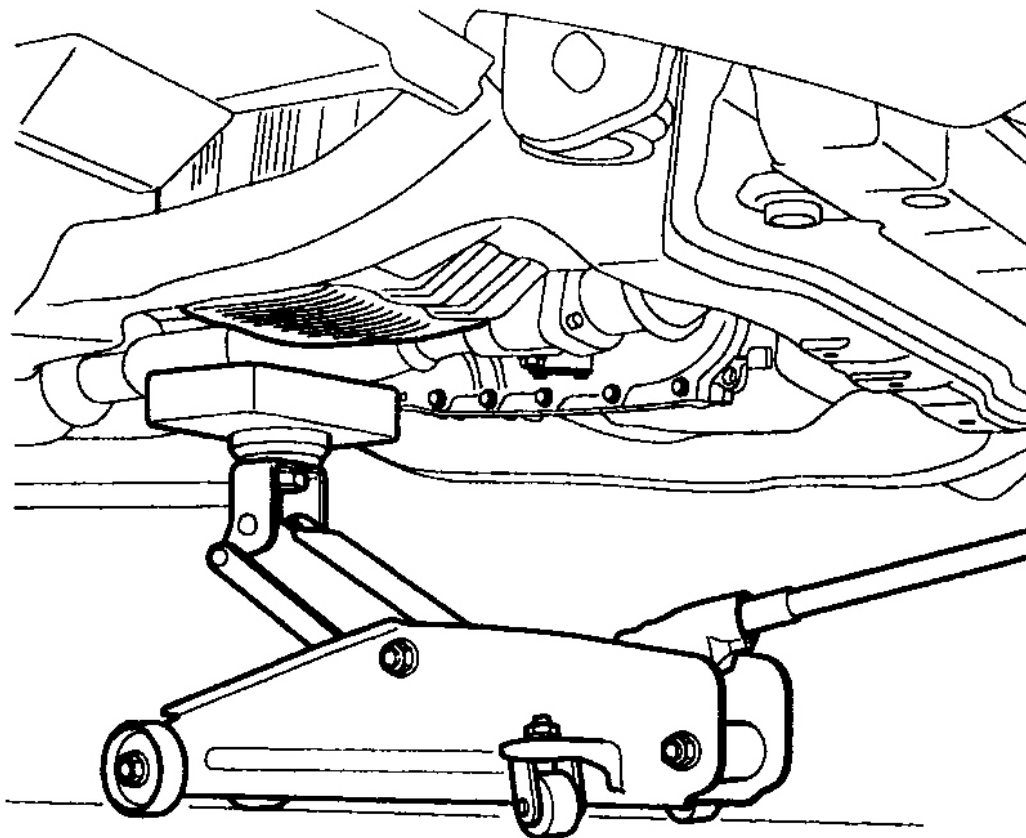


G03842282

Fig. 27: Setting Jack To Engine Oil Pan
Courtesy of HYUNDAI MOTOR CO.

NOTE: Place wooden block between the jack and engine oil pan.


2. Remove the bolt (B), 3 nuts (C) and engine mount bracket (A).

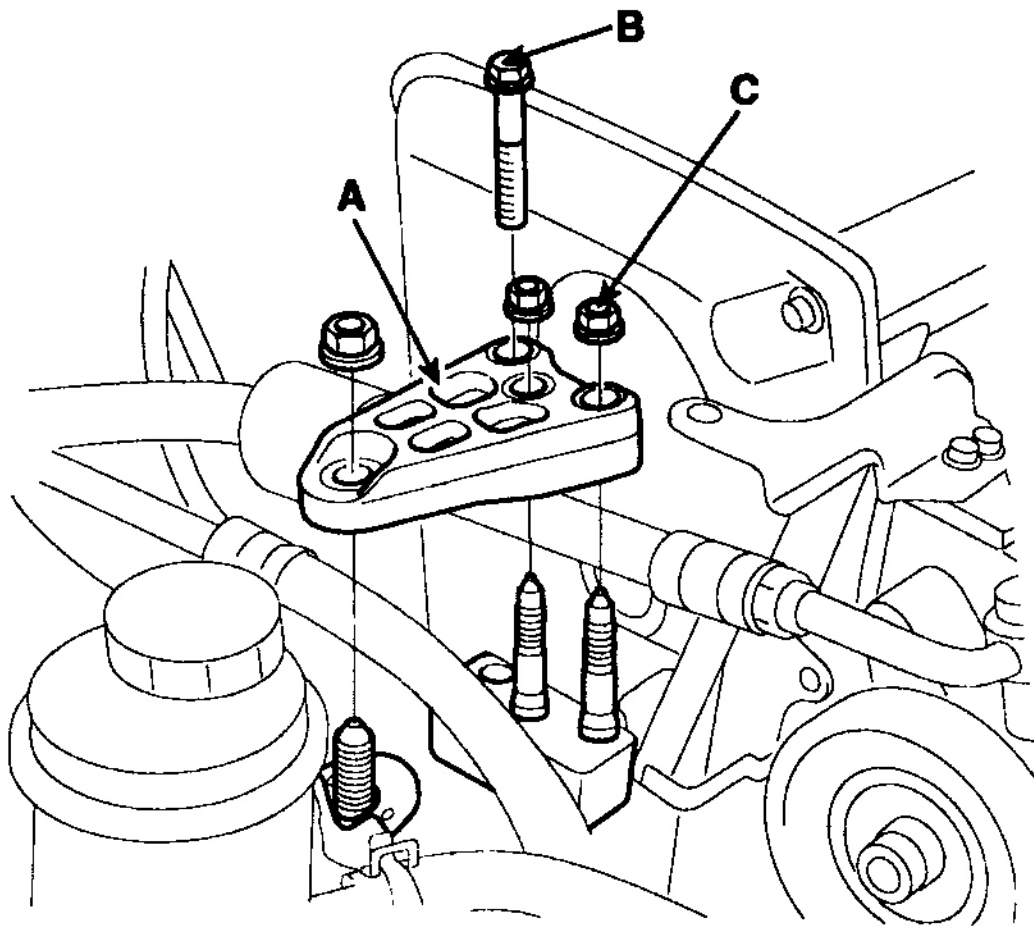

G03842283

Fig. 28: Removing Engine Mount Bracket
Courtesy of HYUNDAI MOTOR CO.

3. Remove the bolt (B) and stay plate (A).

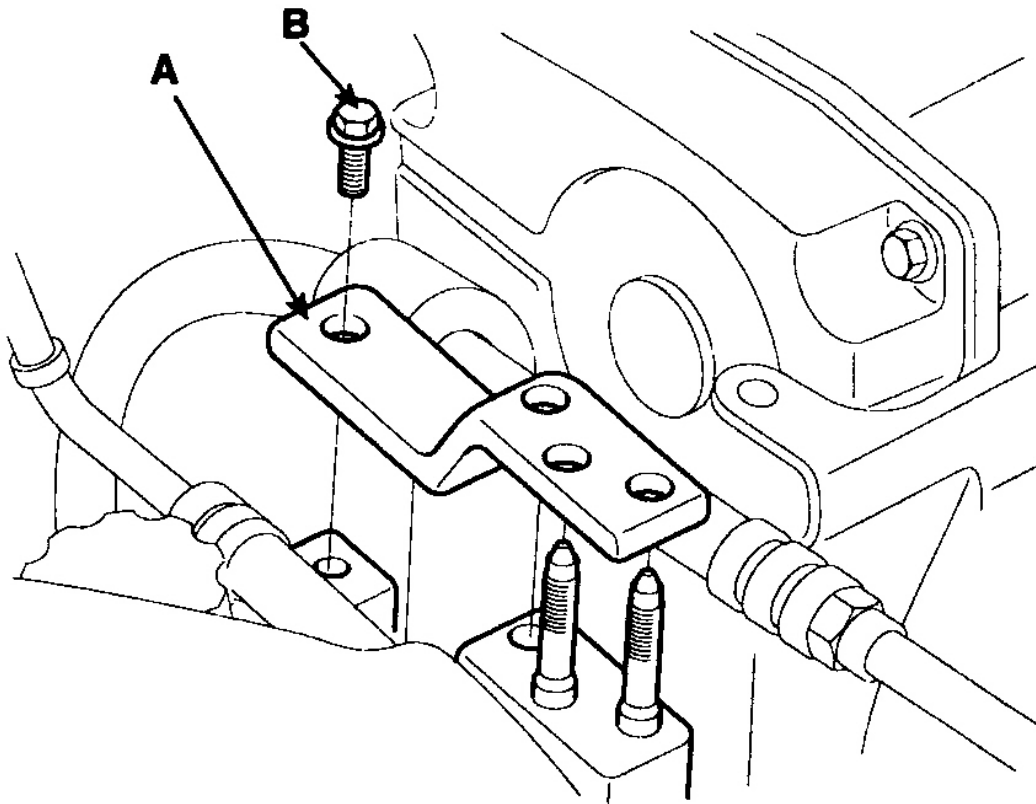

G03842284

Fig. 29: Removing Bolt And Stay Plate
Courtesy of HYUNDAI MOTOR CO.

5. Temporarily loosen the water pump pulley bolts.


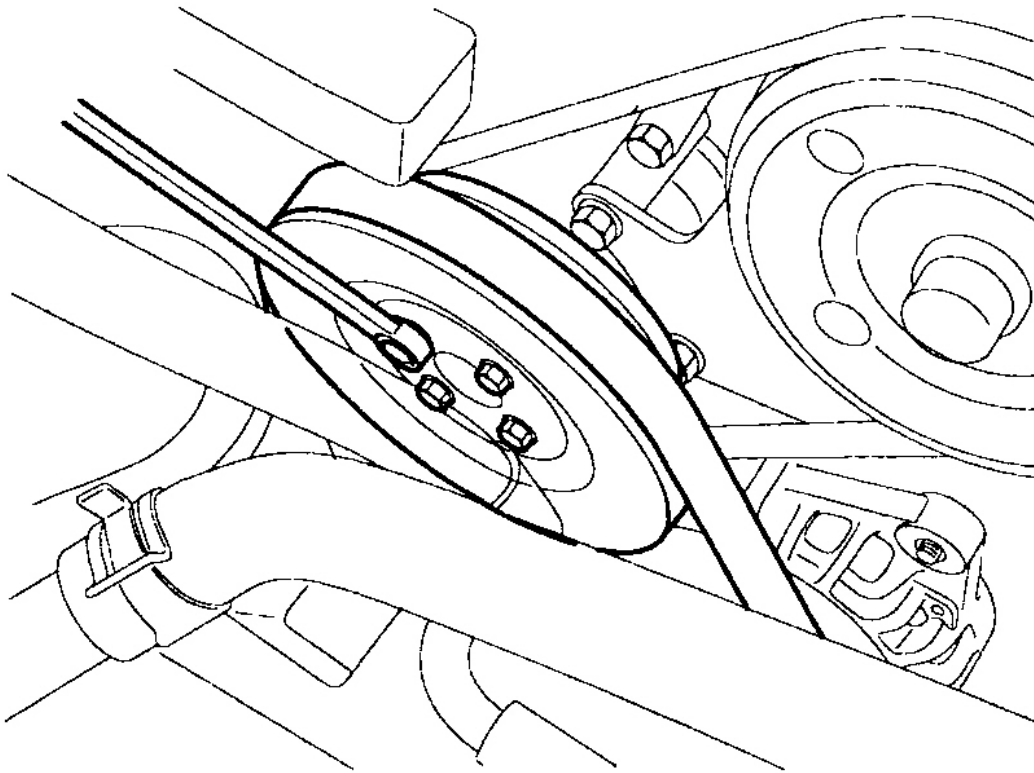
**G03842285**

Fig. 30: Loosening Water Pump Pulley Bolts
Courtesy of HYUNDAI MOTOR CO.


6. Remove alternator belt. (See **ALTERNATOR BELT INSPECTION AND ADJUSTMENT**)
7. Remove air compressor belt. (See **REPLACEMENT**)
8. Remove power steering belt. (See **REMOVAL**)
9. Remove 4 bolts and water pump pulley.
10. Remove the 4 bolts (B) and timing belt upper cover (A).

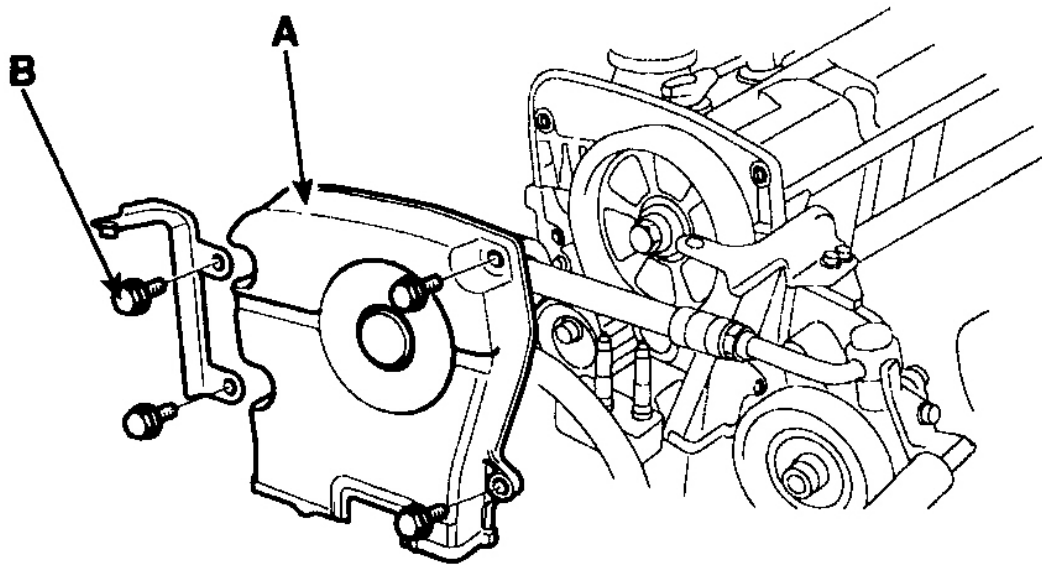

G03842286

Fig. 31: Removing Alternator Belt And Timing Belt Upper Cover
Courtesy of HYUNDAI MOTOR CO.


11. Turn the crankshaft pulley, and align its groove with timing mark "T" of the timing belt cover.

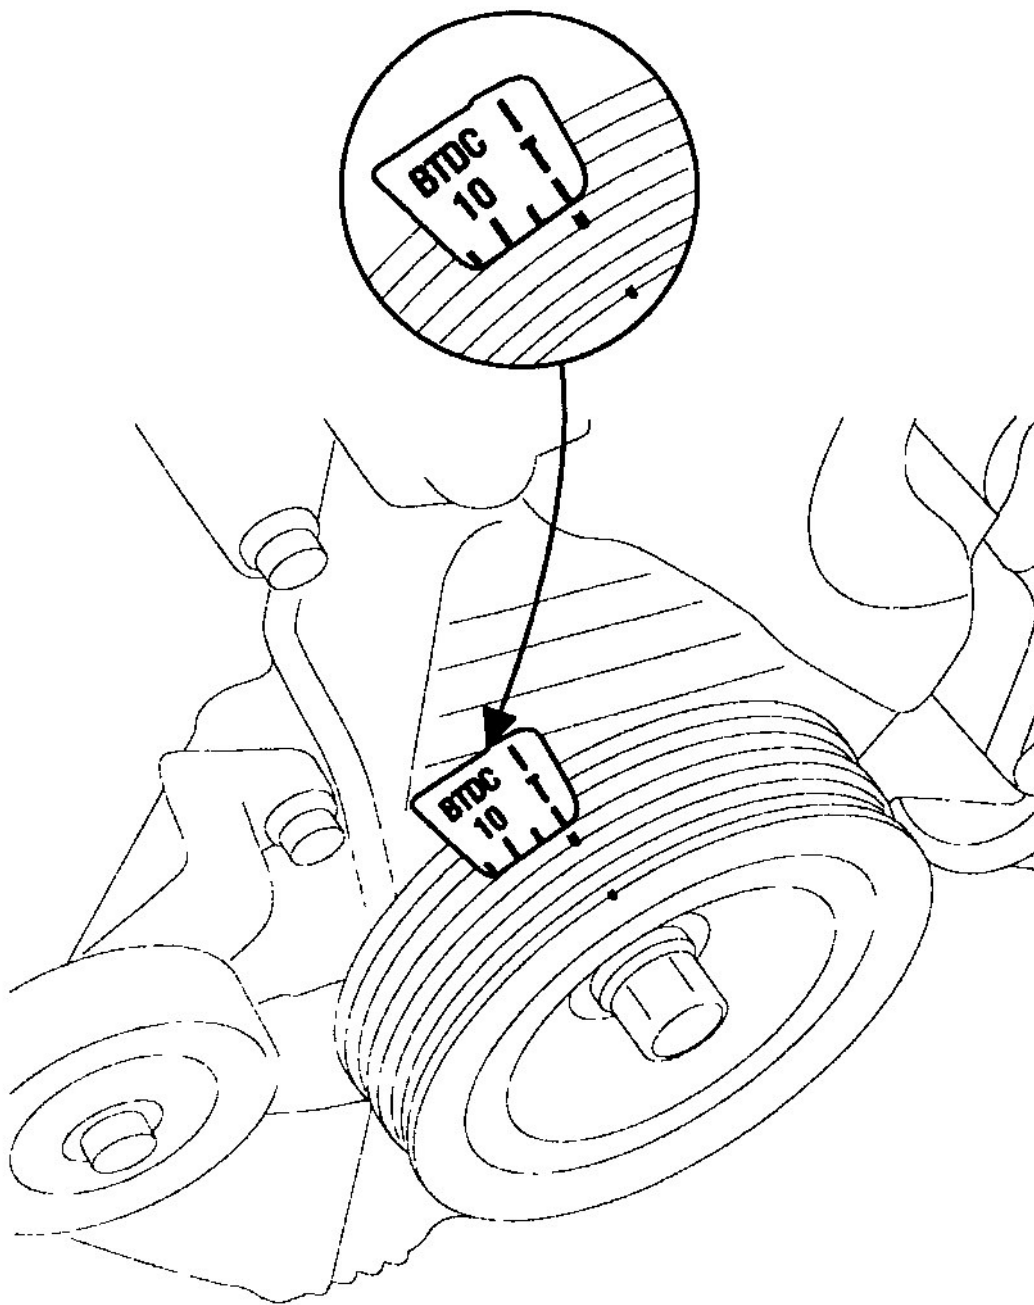

G03842287

Fig. 32: Align Timing Mark
Courtesy of HYUNDAI MOTOR CO.


12. Remove the crankshaft pulley bolt (B) and crankshaft pulley (A).

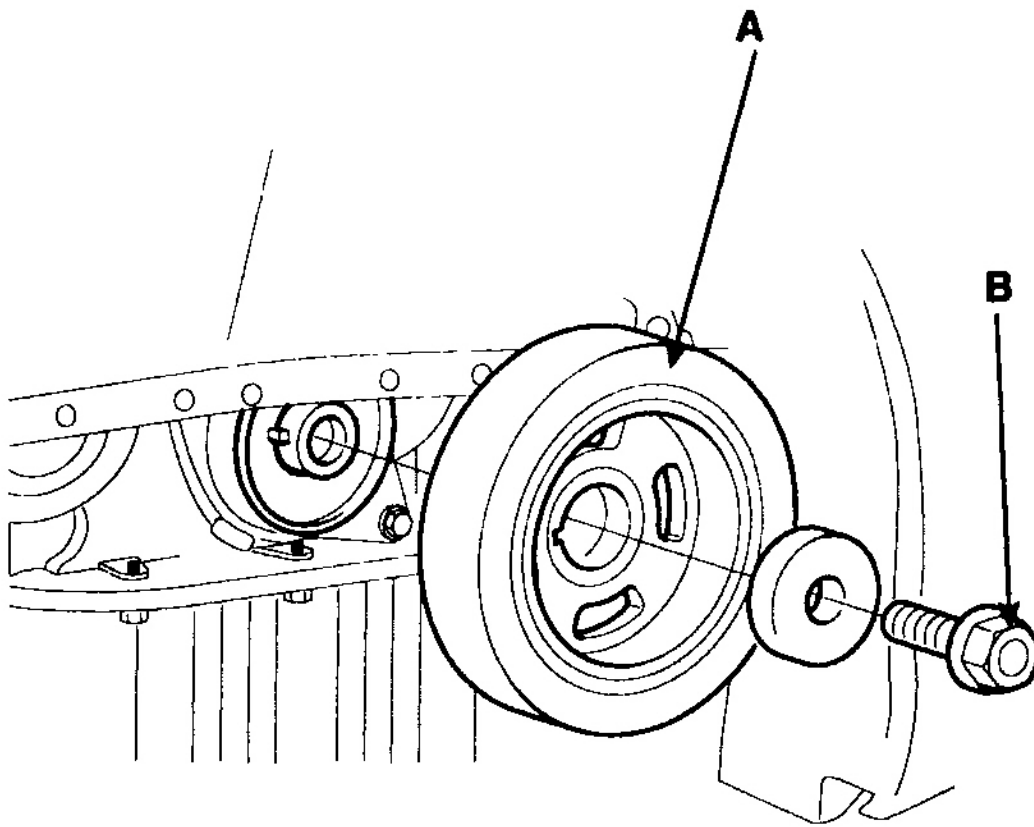

G03842288

Fig. 33: Removing Crankshaft Pulley And Bolt
Courtesy of HYUNDAI MOTOR CO.


13. Remove the crankshaft flange (A).

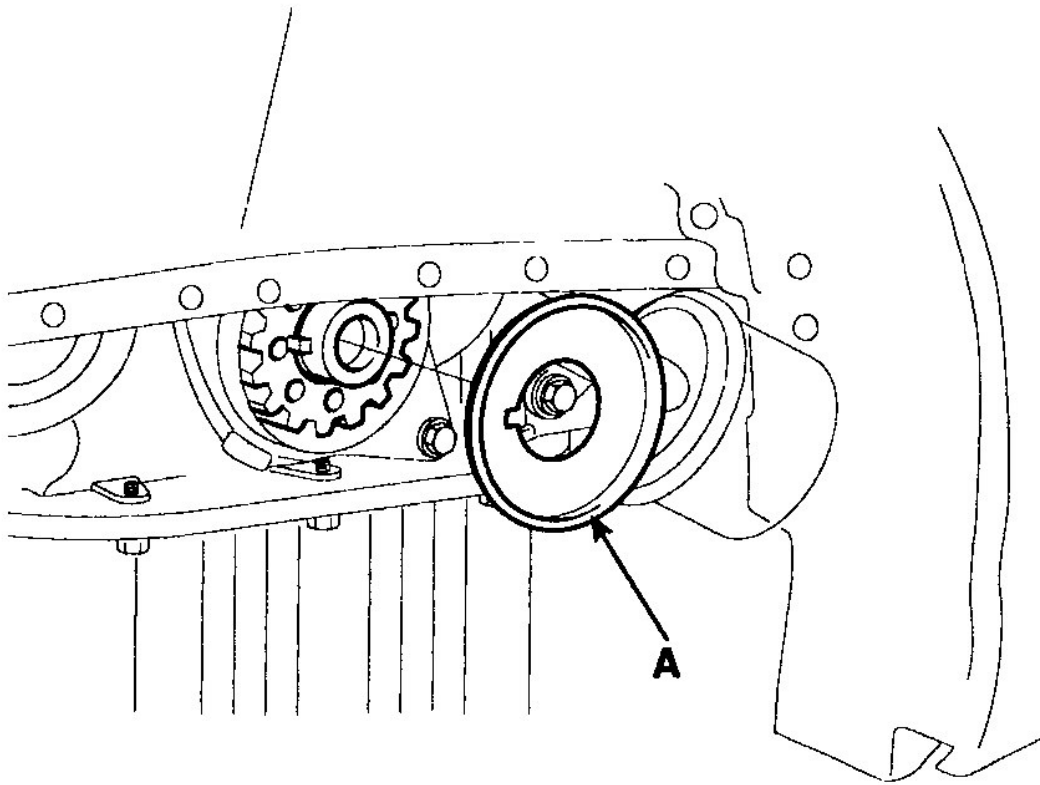

G03842289

Fig. 34: Removing Crankshaft Flange
Courtesy of HYUNDAI MOTOR CO.


14. Remove the 5 bolts (B) and timing belt lower cover (A).

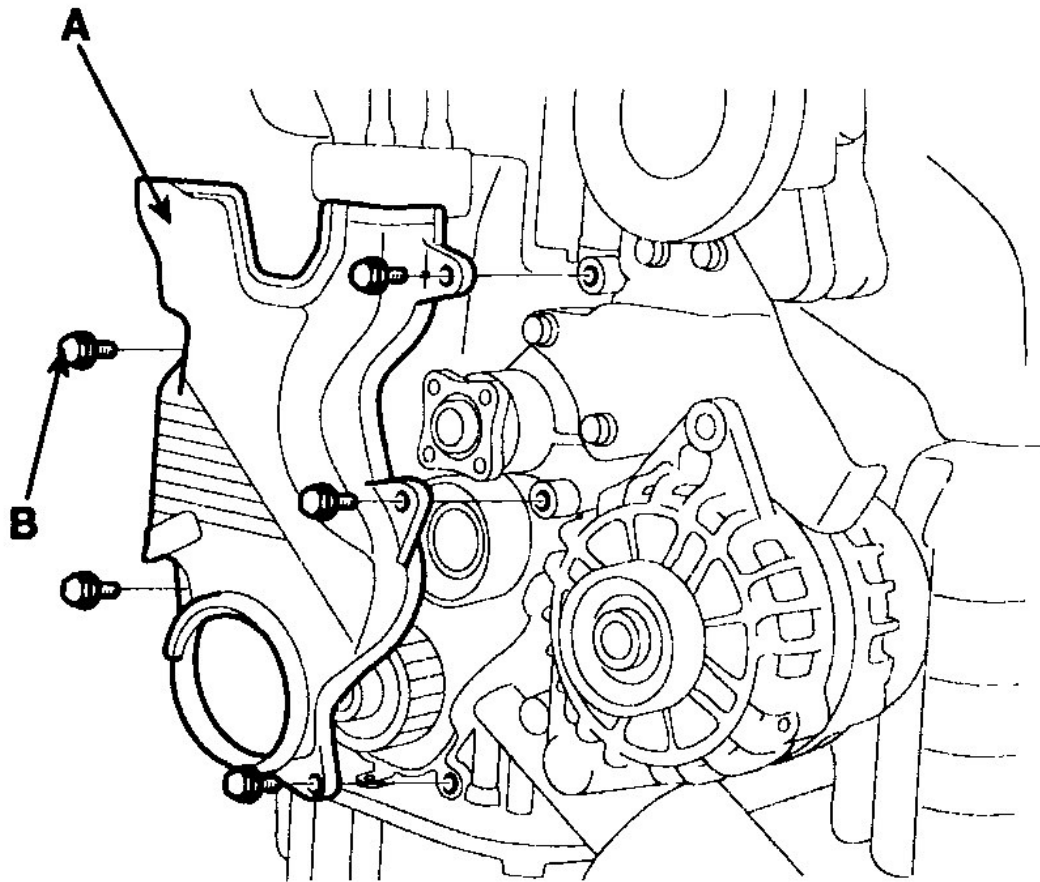

G03842290


Fig. 35: Removing Bolts And Timing Belt Lower Cover
Courtesy of HYUNDAI MOTOR CO.

15. Remove the timing belt tensioner (A) and timing belt (B).

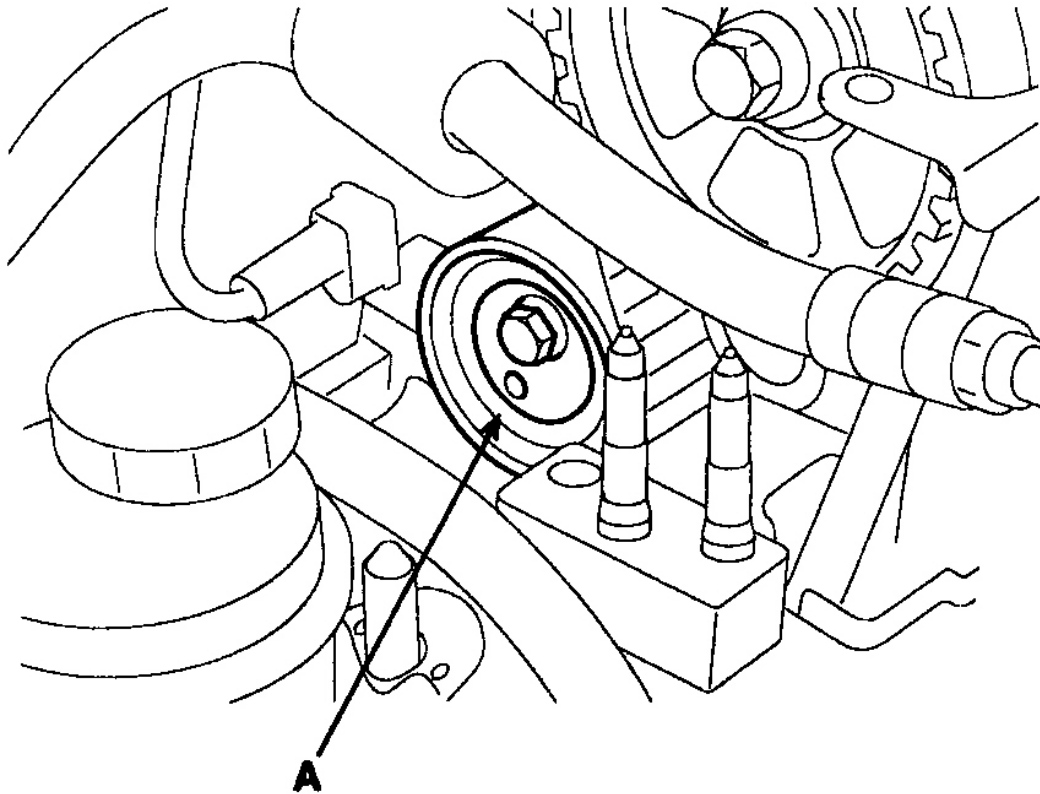

G03842291

Fig. 36: Removing Timing Belt Tensioner
Courtesy of HYUNDAI MOTOR CO.

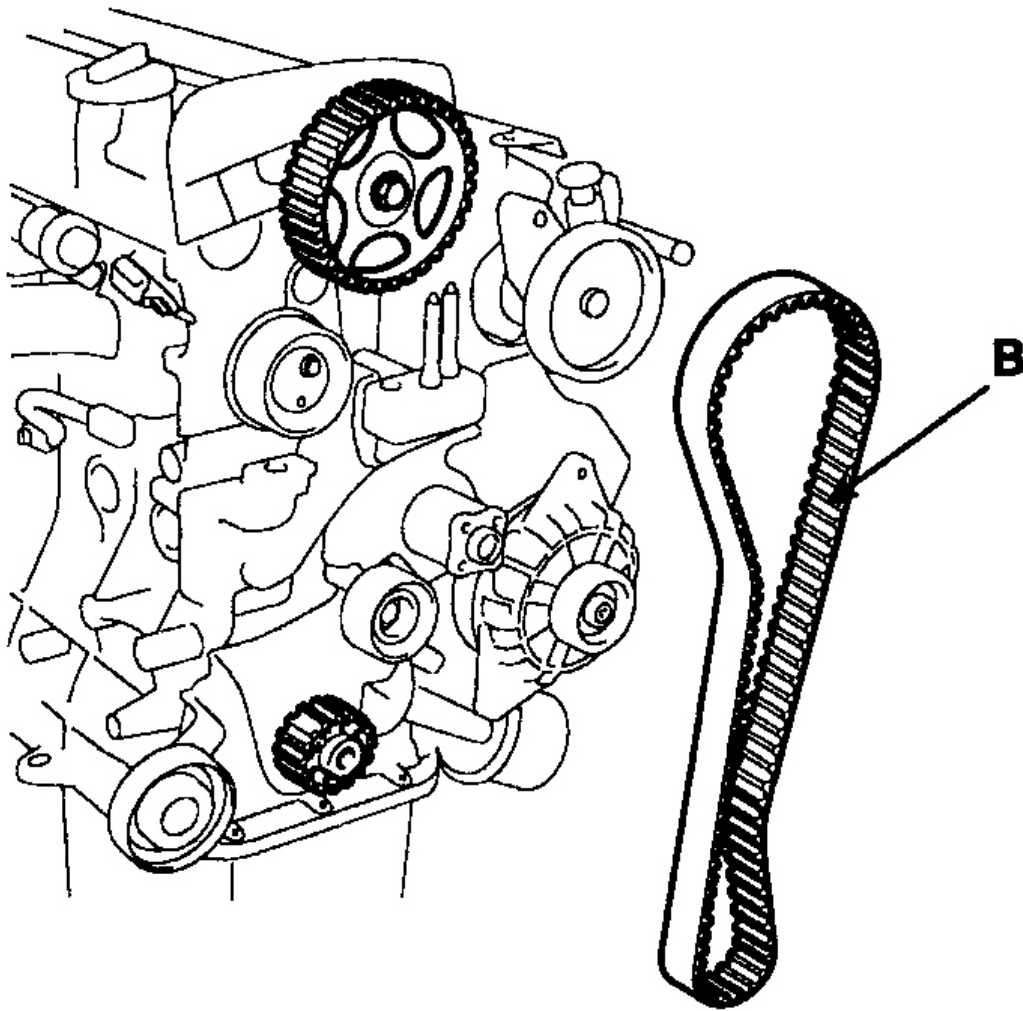


G03842292

Fig. 37: Removing Timing Belt
Courtesy of HYUNDAI MOTOR CO.

NOTE: If the timing belt is reused, make an arrow indicating the turning direction to make sure that the belt is reinstalled in the same direction as before.


16. Remove the bolt (B) and timing belt idler (A).

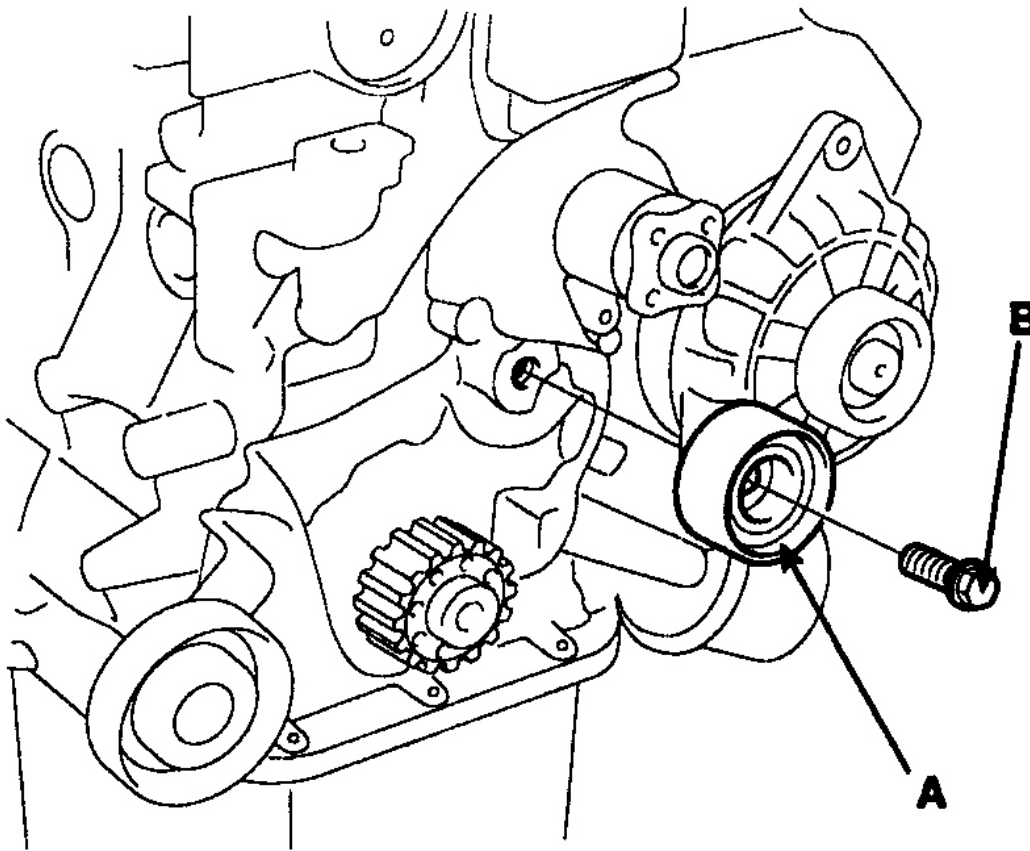

G03842293

Fig. 38: Removing Bolt And Timing Belt Idler
Courtesy of HYUNDAI MOTOR CO.


17. Remove the crankshaft sprocket (A).

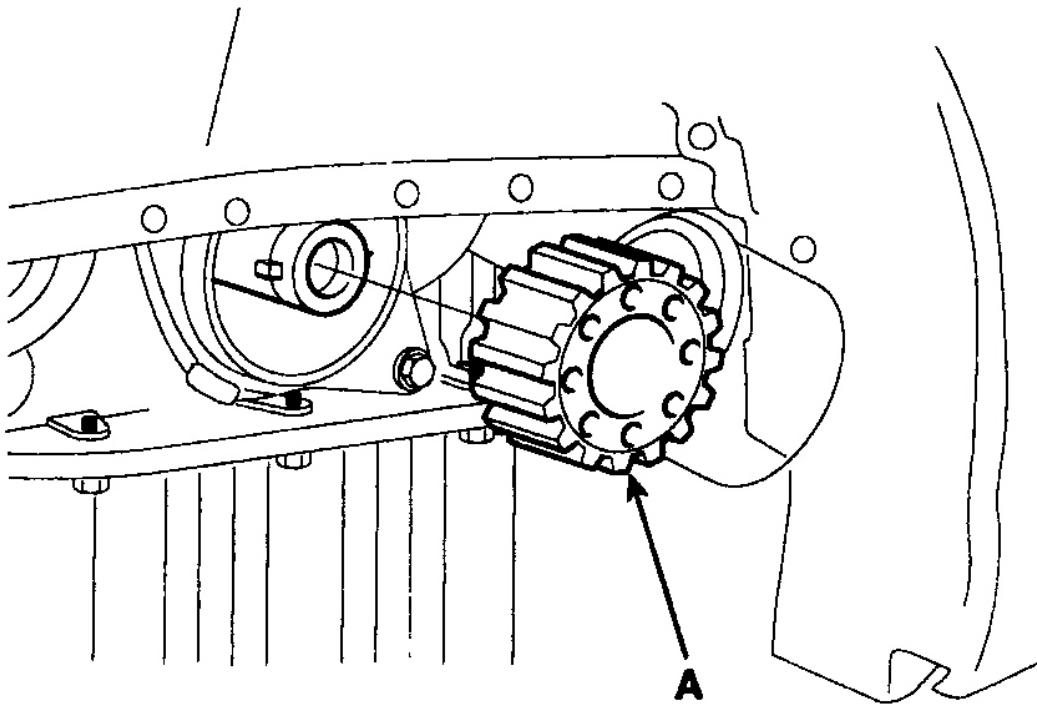

G03842294

Fig. 39: Removing Crankshaft Sprocket
Courtesy of HYUNDAI MOTOR CO.


18. Remove the cylinder head cover.
 1. Remove the spark plug cable.
 2. Remove the accelerator cable (A) from the cylinder head cover.

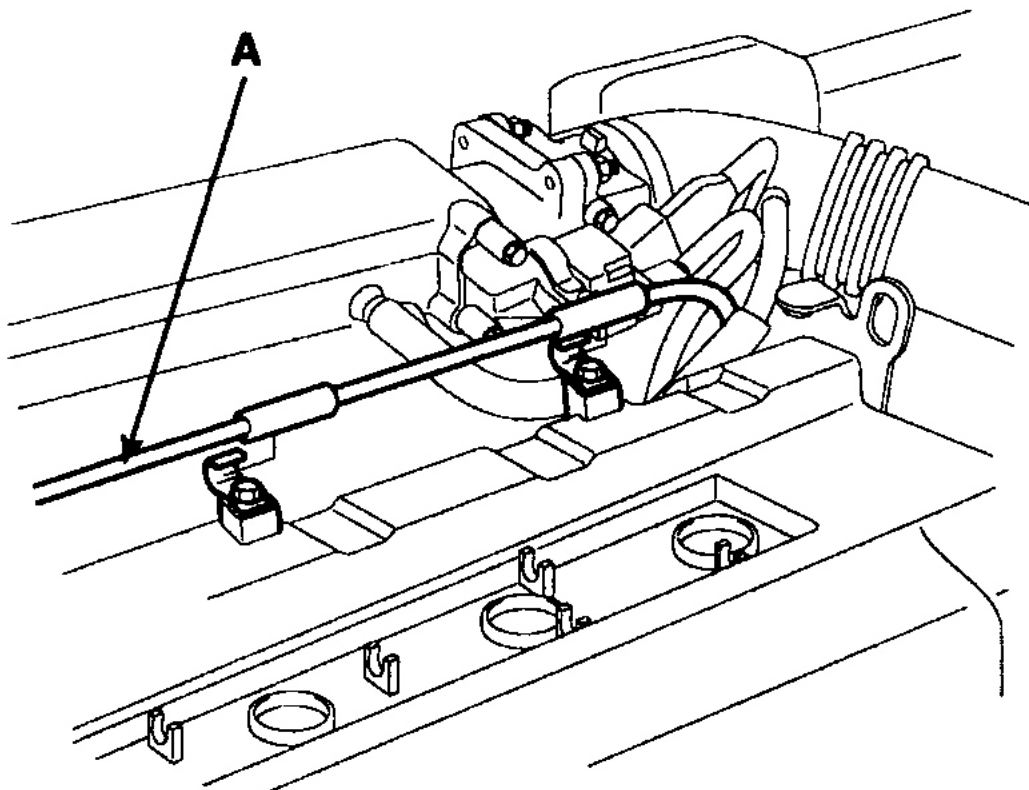

G03842295

Fig. 40: Removing Accelerator Cable
Courtesy of HYUNDAI MOTOR CO.


3. Remove the PCV (Positive Crankcase Ventilation) hose (A) and breather hose (B).

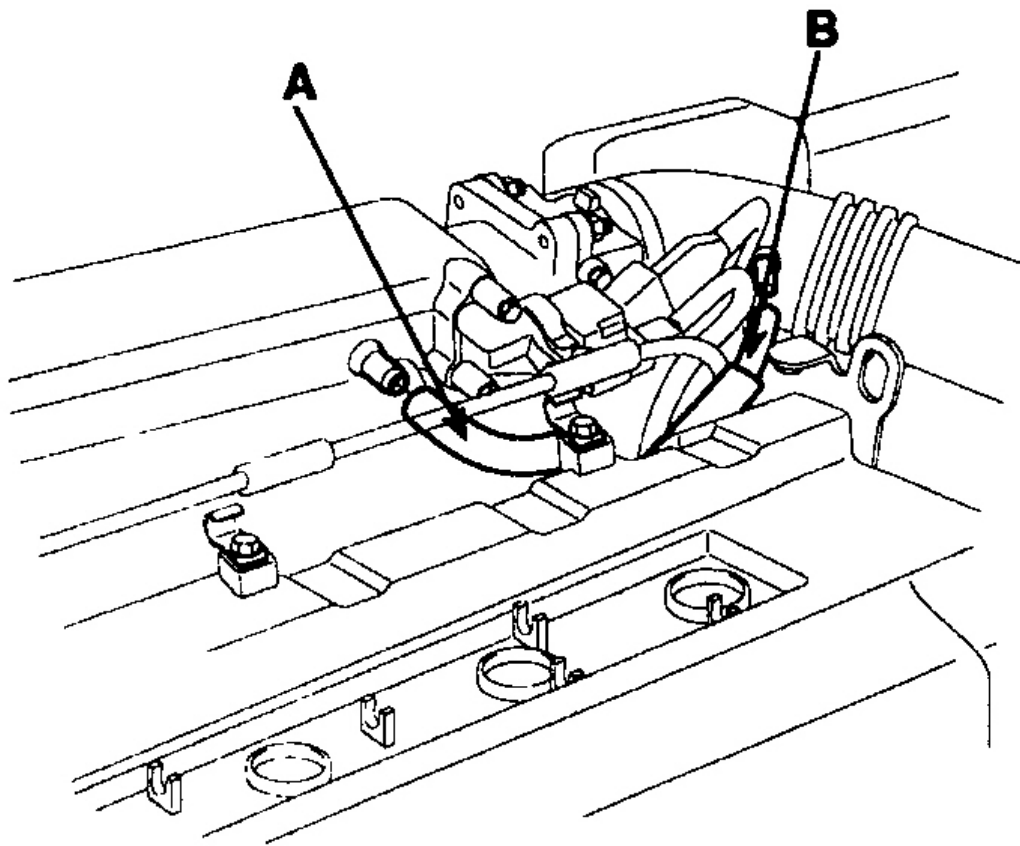

G03842296

Fig. 41: Removing PCV (Positive Crankcase Ventilation) Hose And Breather Hose
Courtesy of HYUNDAI MOTOR CO.


4. Remove the 12 bolts (B) and cylinder head cover (A).

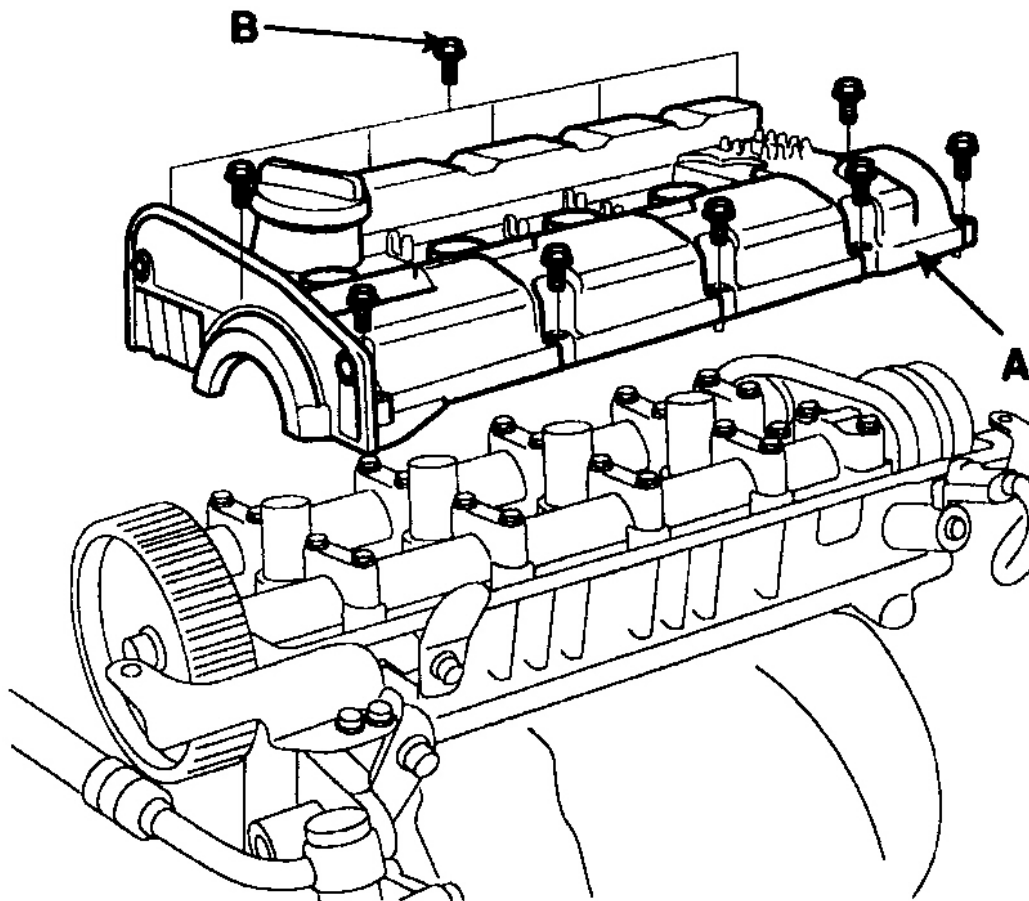

G03842297

Fig. 42: Removing Cylinder Head Cover Bolts
 Courtesy of HYUNDAI MOTOR CO.

19. Remove camshaft sprocket.
 1. Hold the hexagonal head wrench (A) portion of the camshaft with a wrench (B), and remove the bolt and camshaft sprocket (C).

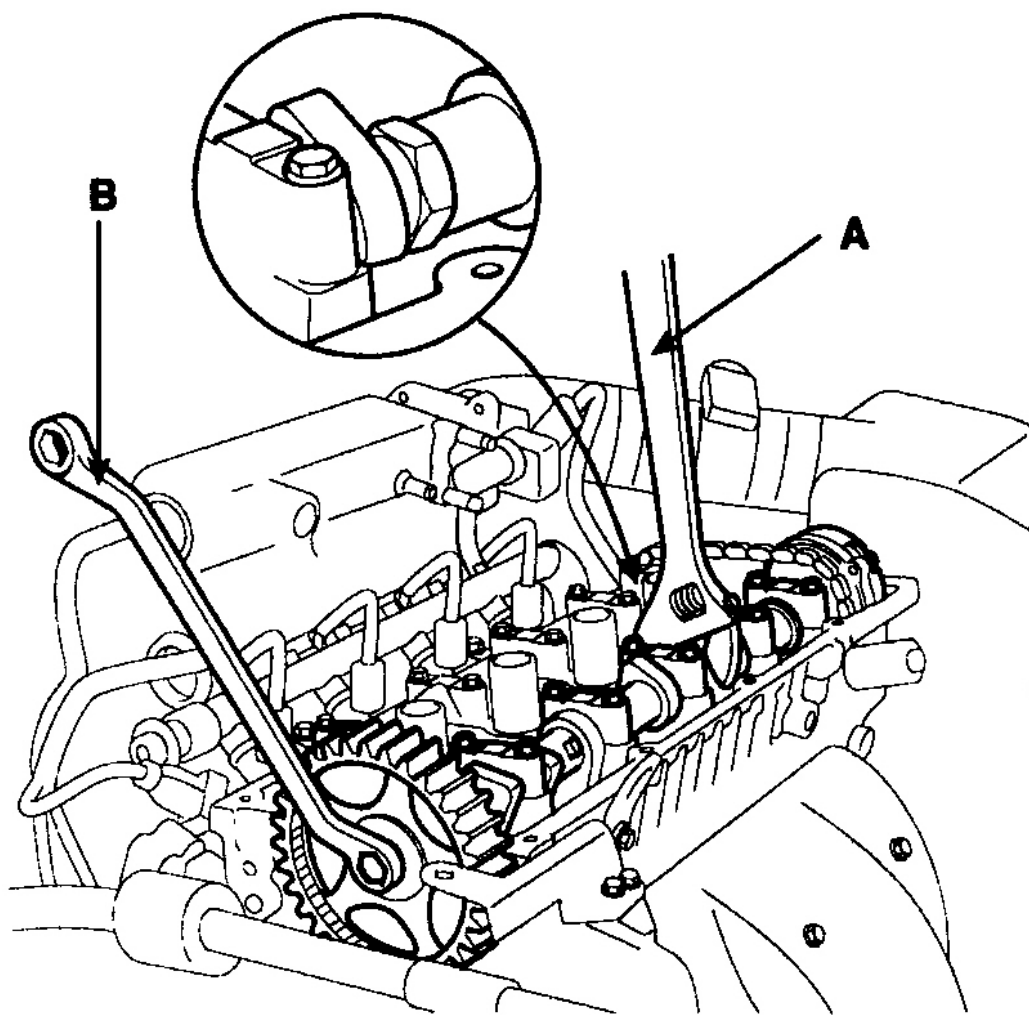

G03842298

Fig. 43: Removing Camshaft Sprocket
Courtesy of HYUNDAI MOTOR CO.


CAUTION: Be careful not to damage the cylinder head and valve lifter with the wrench.

INSPECTION

SPROCKETS, TENSIONER, IDLER

1. Check the camshaft sprocket, crankshaft sprocket, tensioner pulley, and idler pulley for abnormal wear, cracks, or damage. Replace as necessary.

2. Inspect the tensioner pulley and the idler pulley for easy and smooth rotation and check for play or noise. Replace as necessary.

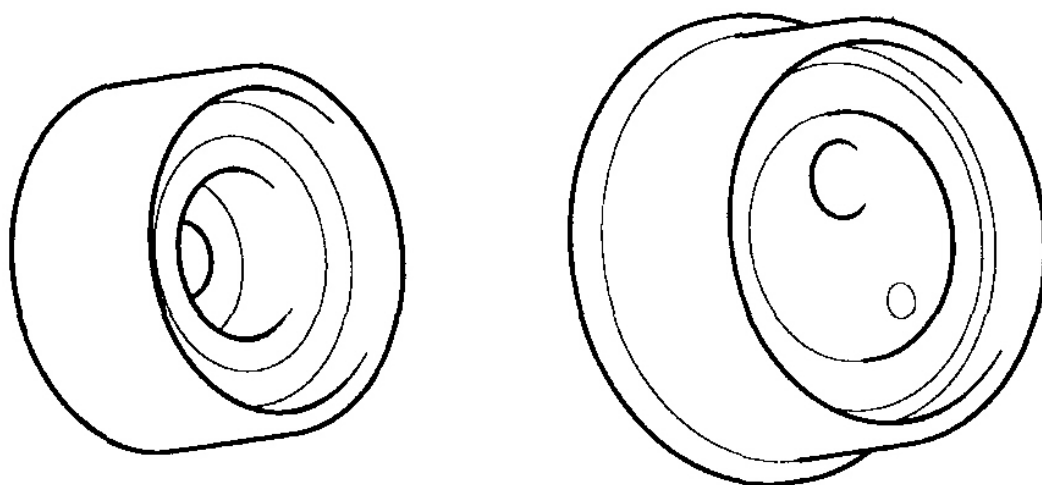

G03842299

Fig. 44: Inspecting Tensioner Pulley
Courtesy of HYUNDAI MOTOR CO.

3. Replace the pulley if there is a grease leak from its bearing.

TIMING BELT

1. Check the belt for oil or dust deposits.

Replace, if necessary.

Small deposits should be wiped away with a dry cloth or paper. Do not clean with solvent.

2. When the engine is overhauled or belt tension adjusted, check the belt carefully. If any of the following flaws are evident, replace the belt.

NOTE:

- Do not bend, twist or turn the timing belt inside out.
- Do not allow the timing belt to come into contact with oil, water and steam.

INSTALLATION


1. Install the camshaft sprocket and tighten the bolt to the specified torque

1. Temporarily install the camshaft sprocket bolt.
2. Hold the hexagonal head wrench (A) portion of the camshaft with a wrench (B), and tighten the camshaft sprocket (C) bolt.

Tightening torque

Camshaft sprocket bolt


100 ~ 120Nm (1000 ~ 1200kgf.cm, 74 ~ 89lbf.ft)

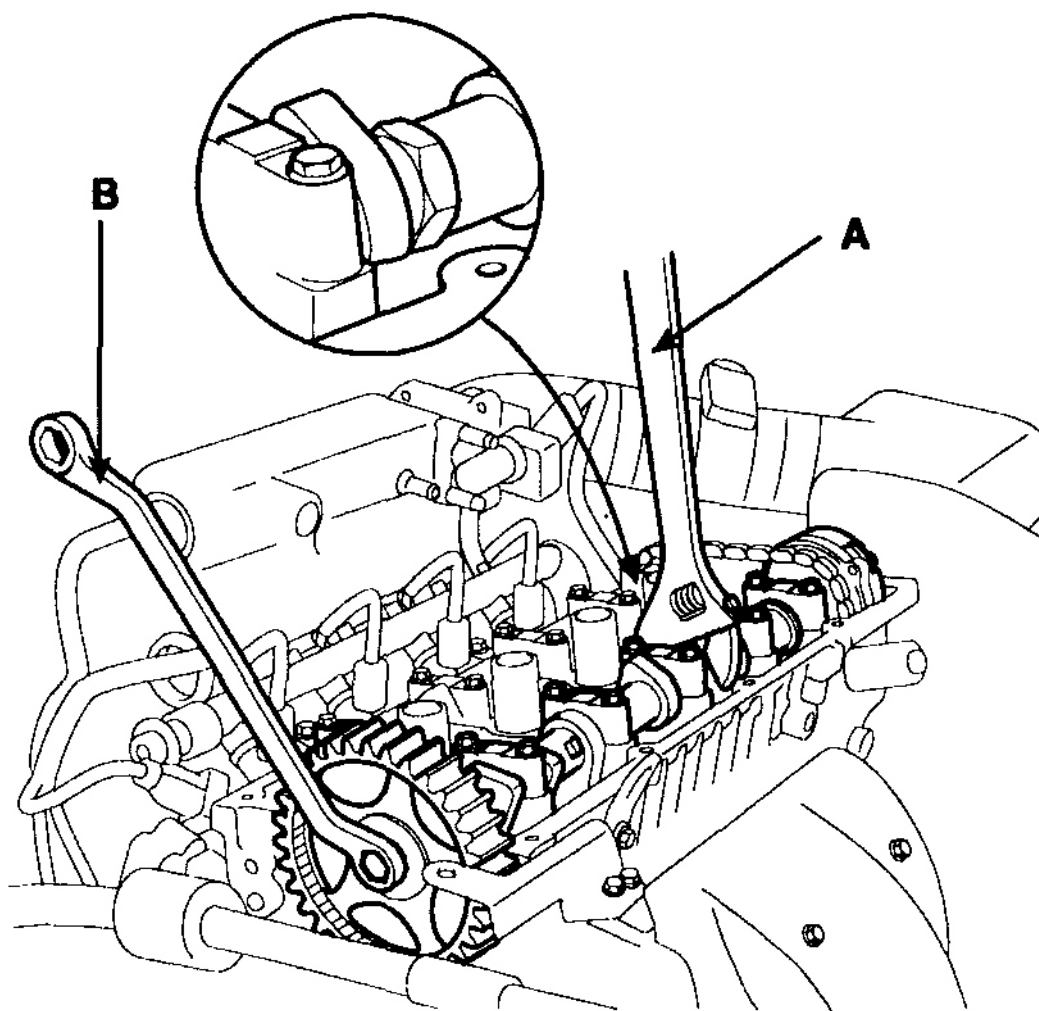

G03842300

Fig. 45: Holding Hexagonal Head Wrench Of Camshaft With A Wrench
Courtesy of HYUNDAI MOTOR CO.


2. Install cylinder head cover.
 1. Install cylinder head cover (A) and 12 bolts (B).

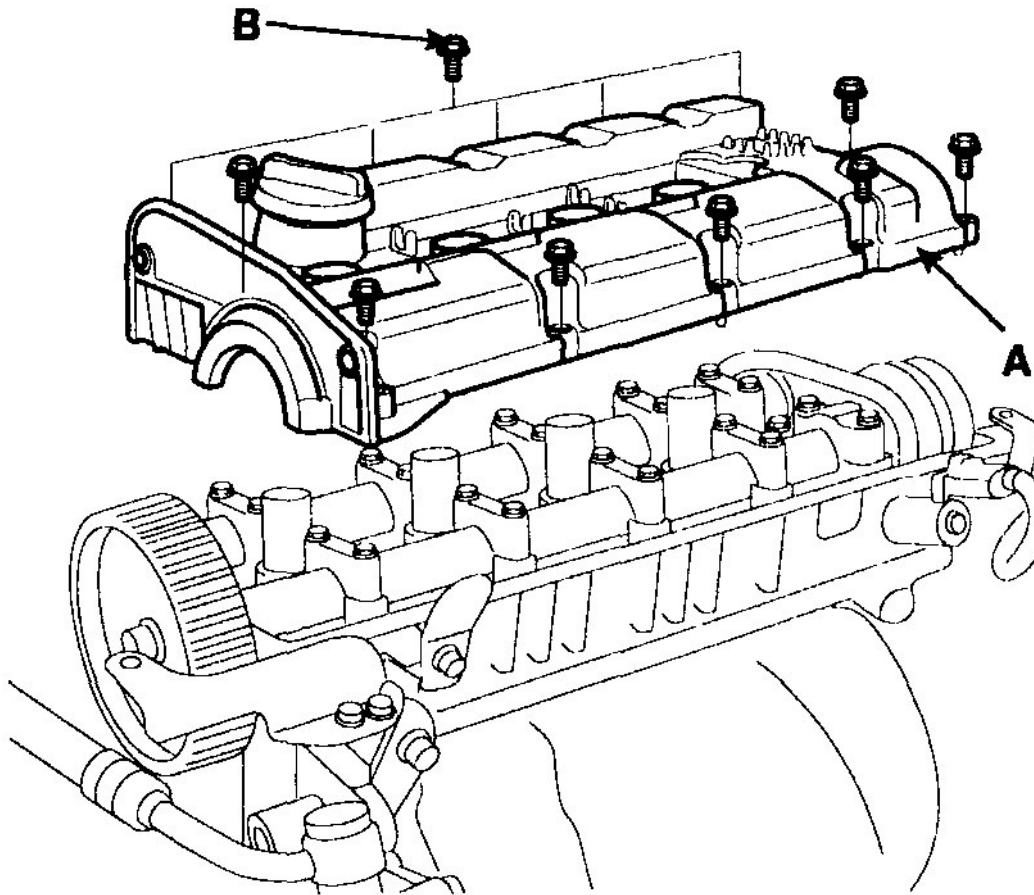

G03842301

Fig. 46: Installing Cylinder Head Cover Bolts
Courtesy of HYUNDAI MOTOR CO.


2. Install the PCV hose (A) and breather hose (B).

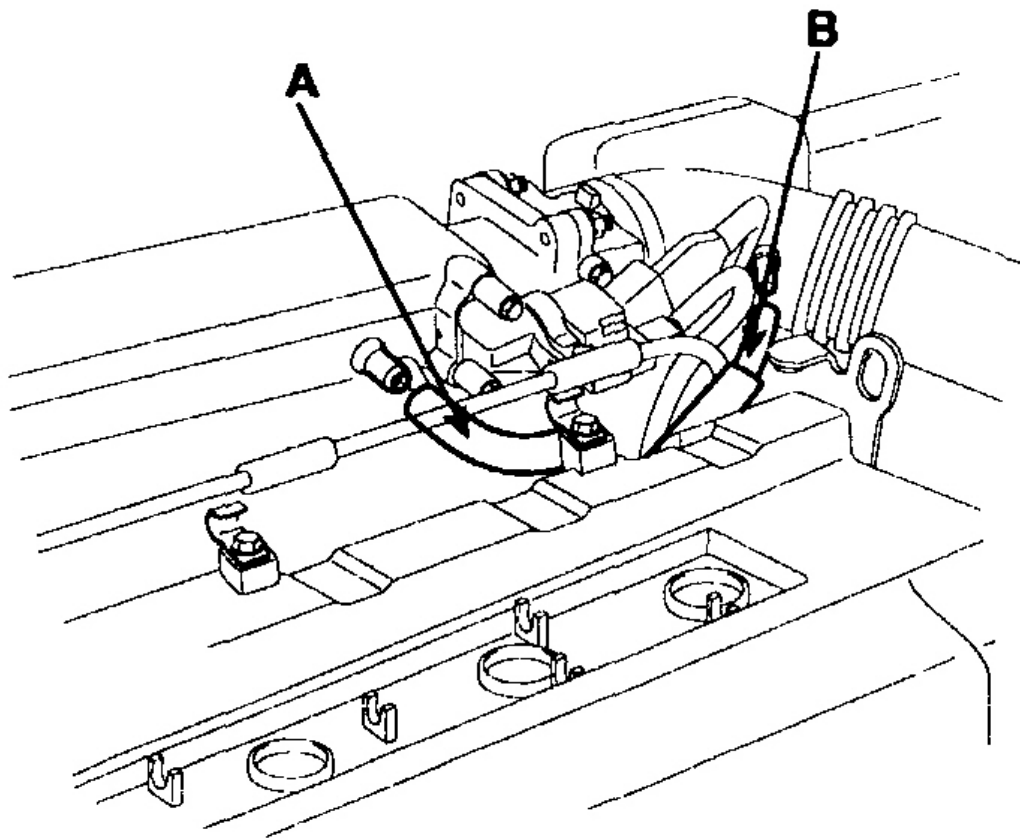

G03842302

Fig. 47: Installing PCV Hose And Breather Hose
Courtesy of HYUNDAI MOTOR CO.


3. Install the accelerator cable (A) from the cylinder head cover.

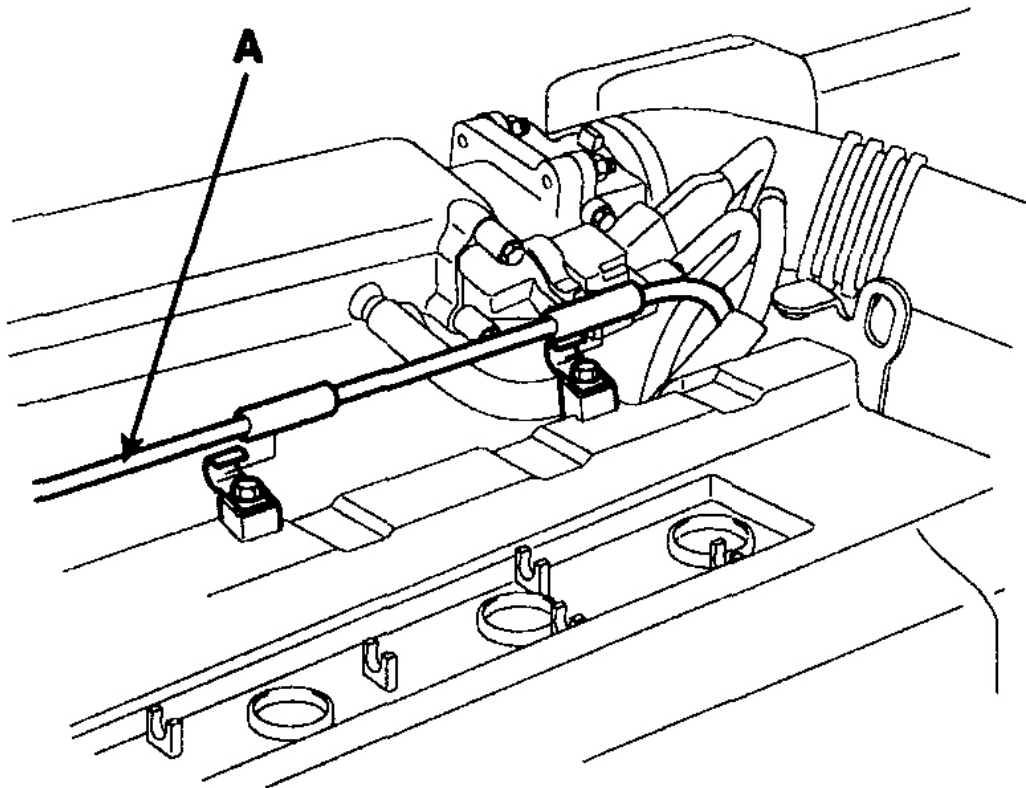

G03842303

Fig. 48: Installing Accelerator Cable
Courtesy of HYUNDAI MOTOR CO.


4. Install the spark plug cable.
3. Install the crankshaft sprocket (A).

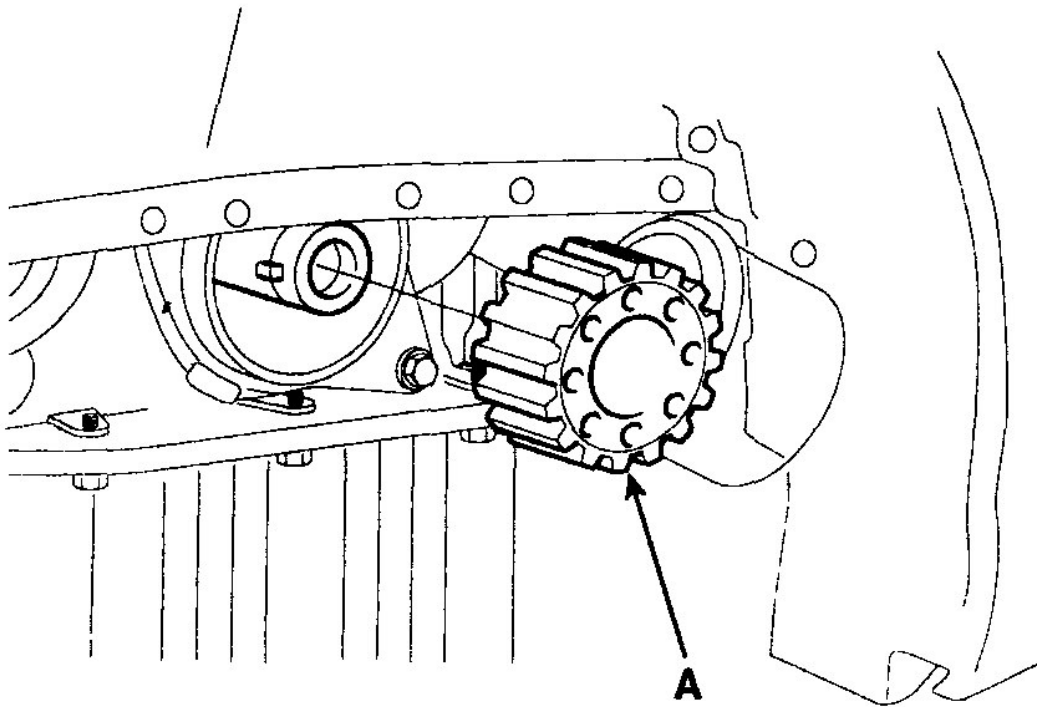

G03842304

Fig. 49: Installing Crankshaft Sprocket
Courtesy of HYUNDAI MOTOR CO.

4. Align the timing marks of the camshaft sprocket (A) and crankshaft sprocket (B) with the No. 1 piston placed at top dead center and its compression stroke.

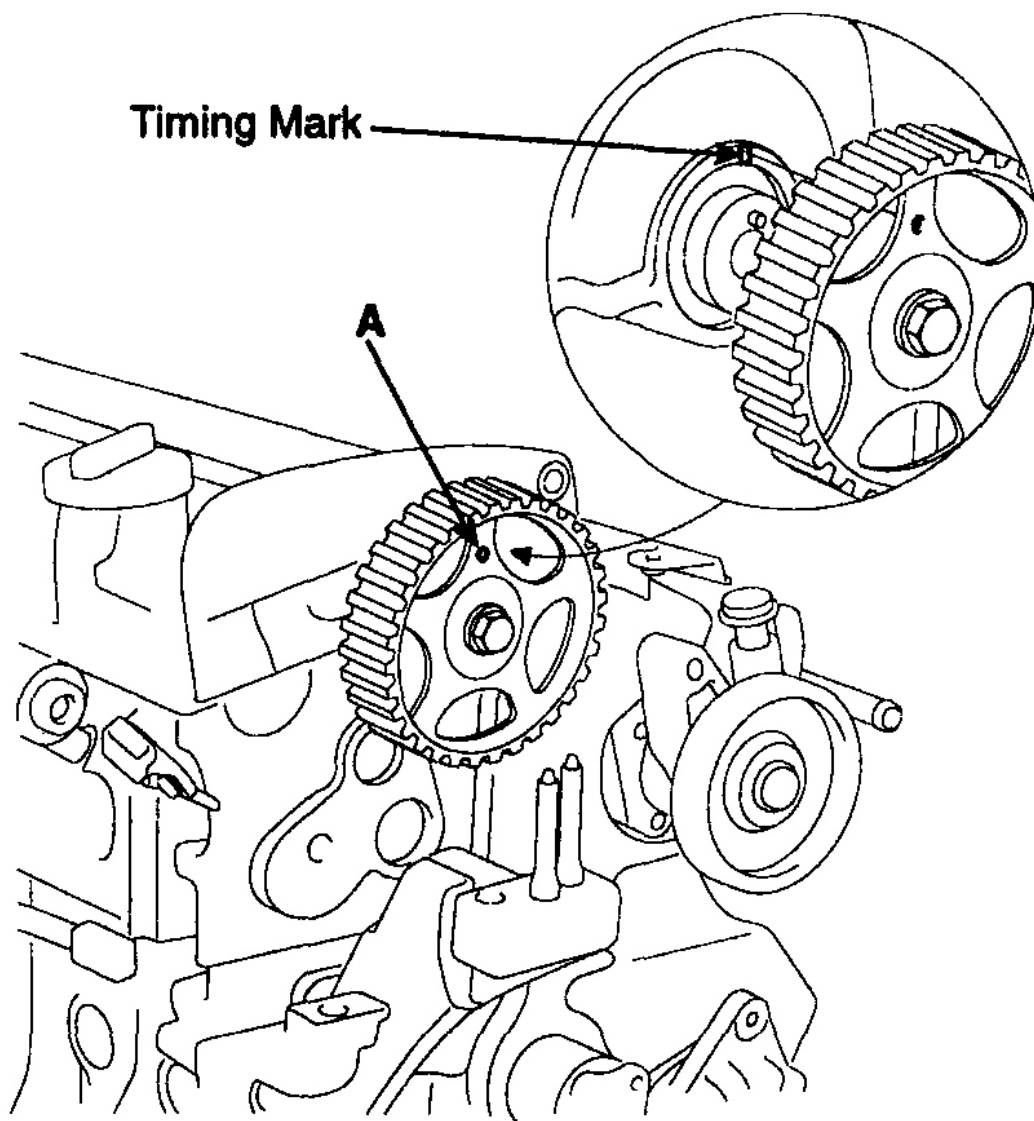

G03842305

Fig. 50: Identifying Camshaft Timing Mark
Courtesy of HYUNDAI MOTOR CO.

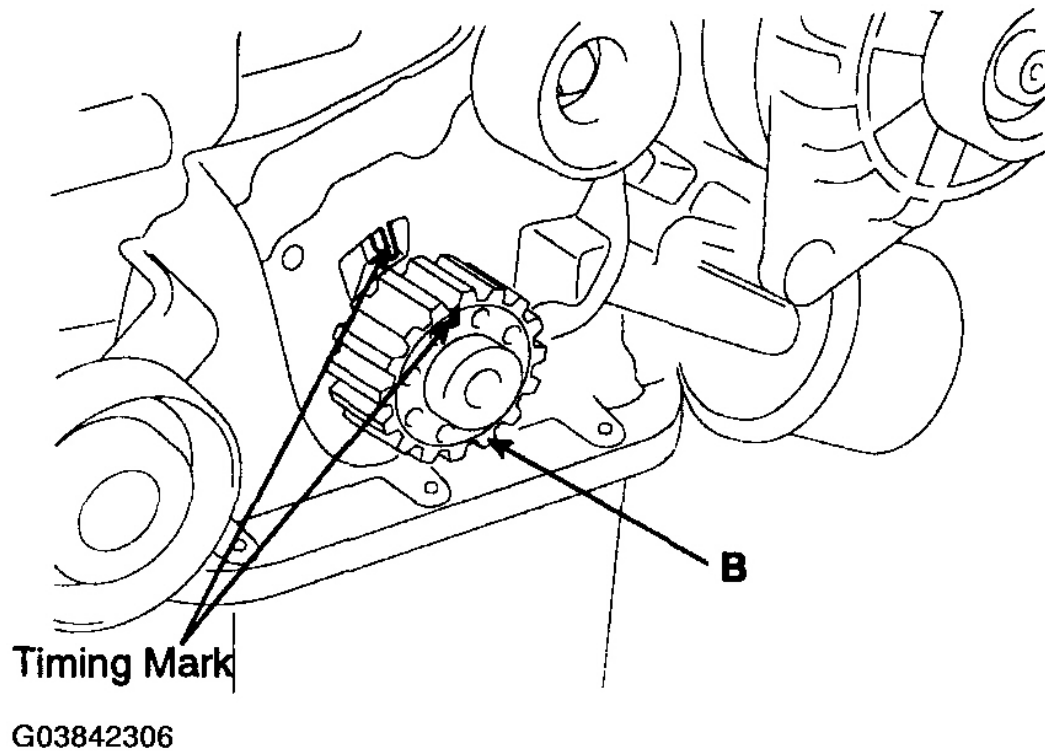



Fig. 51: Aligning Crankshaft Timing Mark
Courtesy of HYUNDAI MOTOR CO.

5. Install the idler pulley (A) and tighten the bolt (B) to the specified torque.

Tightening torque

Idler pulley bolt:


43 ~ 55Nm (430 ~ 550kgf.cm, 32 ~ 40lbf.ft)

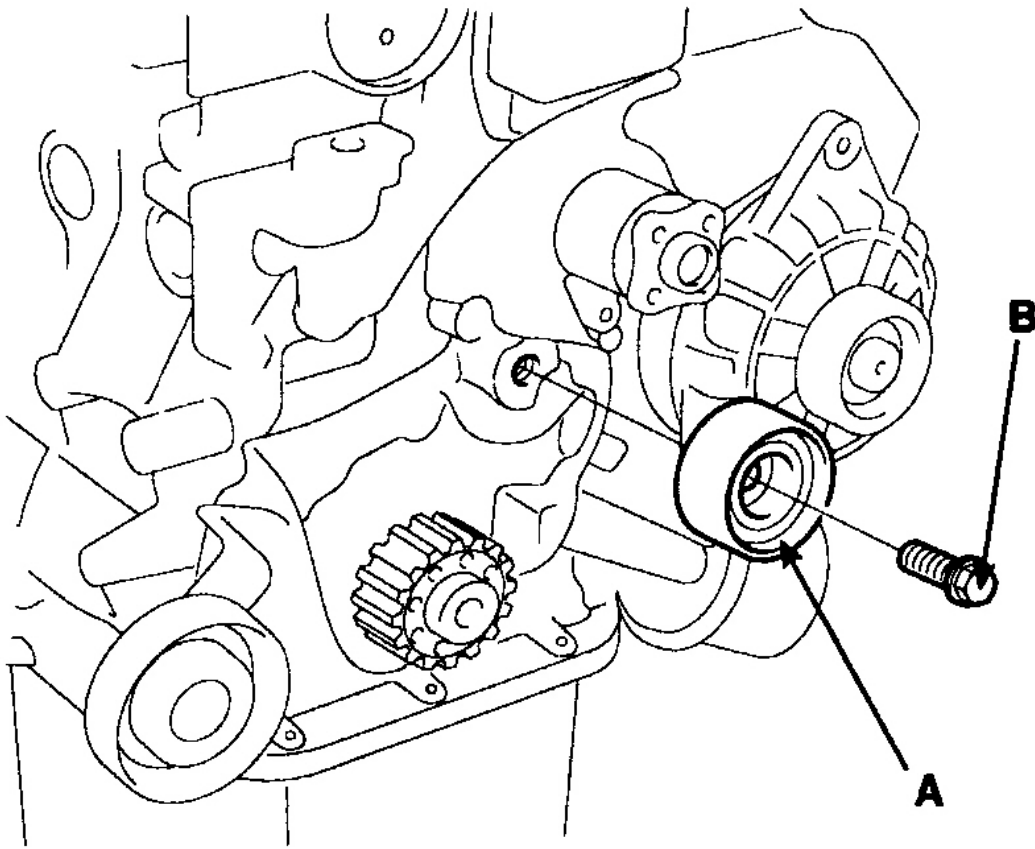

G03842307

Fig. 52: Installing Idler Pulley And Bolt
Courtesy of HYUNDAI MOTOR CO.


6. Temporarily install the timing belt tensioner (A) with plain washer (B).

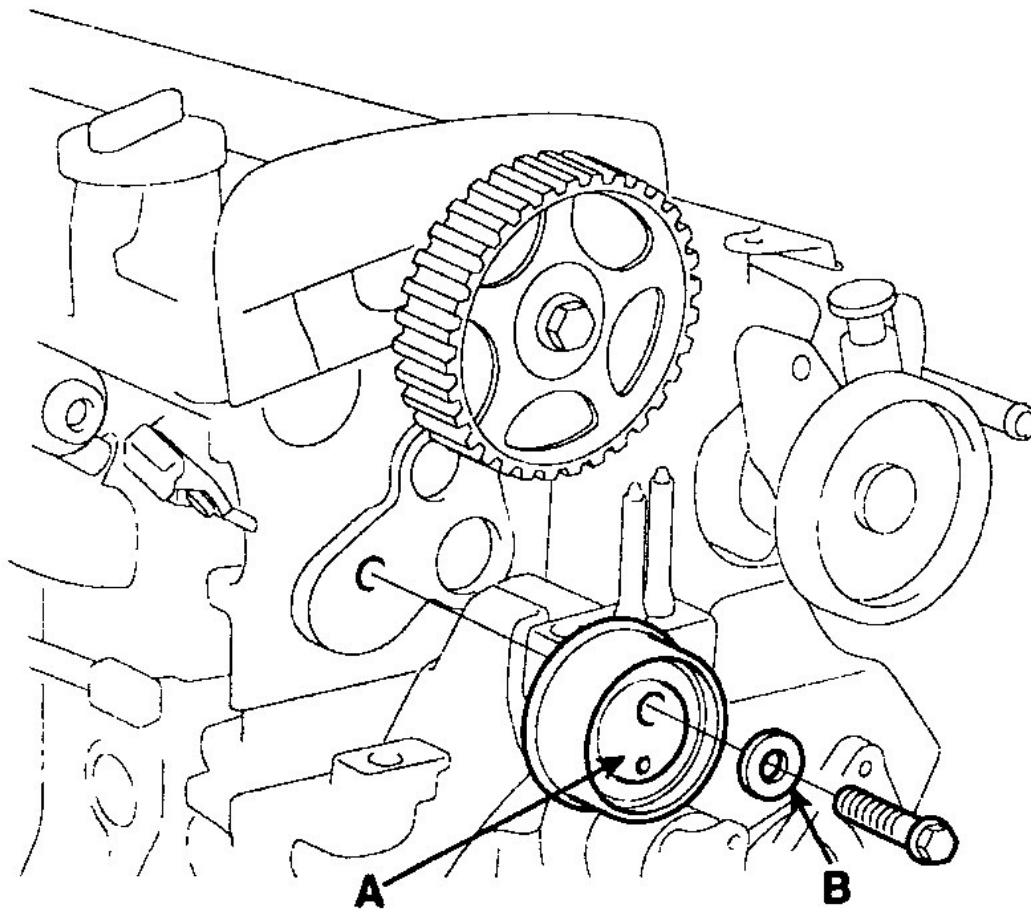

G03842308

Fig. 53: Installing Timing Belt Tensioner With Plain Washer
Courtesy of HYUNDAI MOTOR CO.

7. Belt so as not give slack at each center of shaft. Do as following procedures when installing timing belt.
Crankshaft sprocket (A) --> Idler pulley (B) --> Camshaft sprocket (C) --> timing belt tensioner (D).

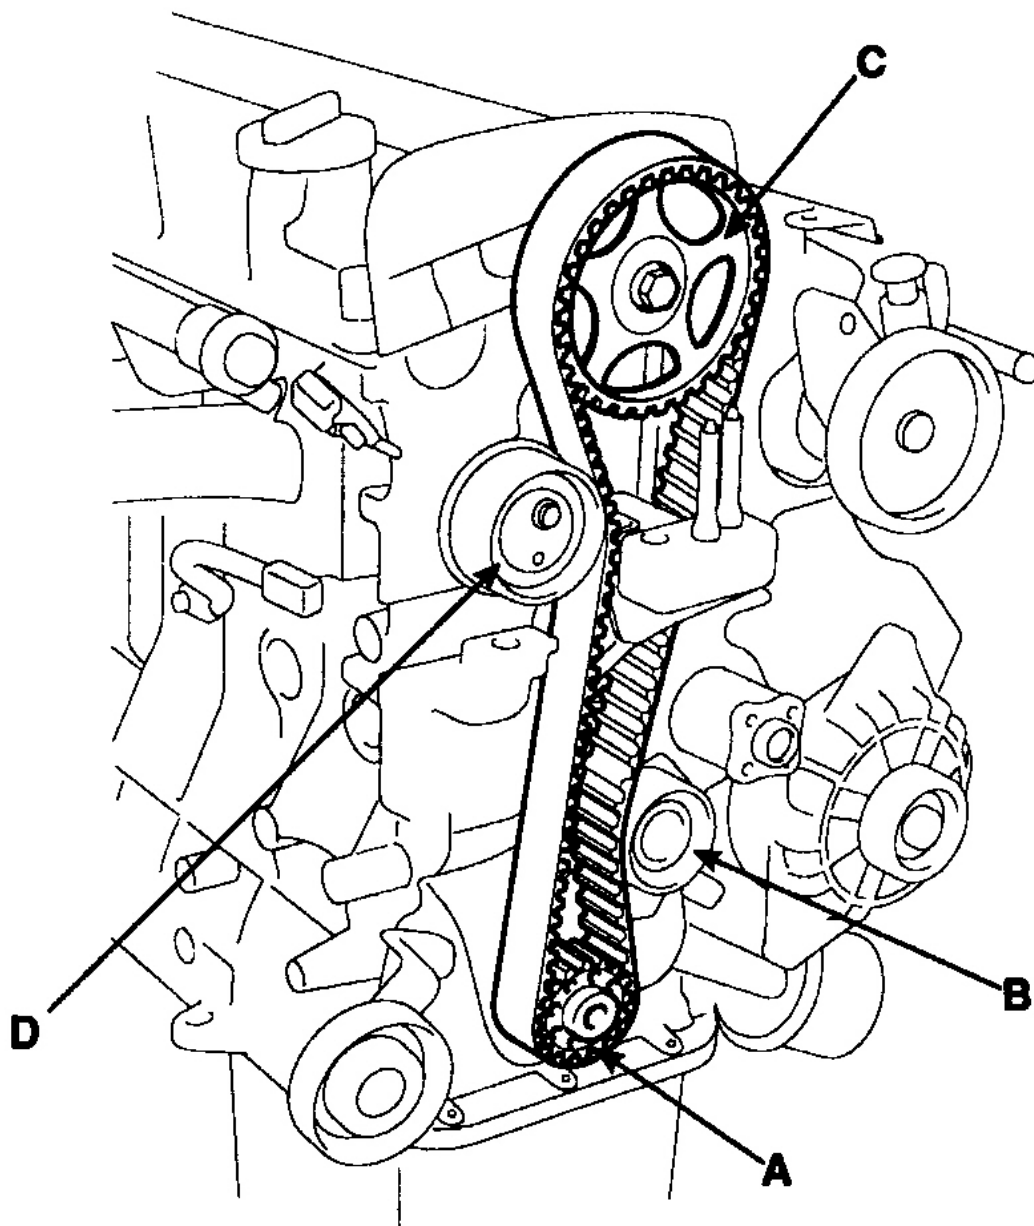


G03842309

Fig. 54: Identifying Crankshaft Sprocket, Idler Pulley, Camshaft Sprocket And Timing Belt Tensioner

Courtesy of HYUNDAI MOTOR CO.

8. Temporarily fasten tensioner pulley by center bolt to add force at belt.
9. Timing belt tension adjusting

1. Rotate crankshaft in regular direction (clock wise view from front) through angle equivalent to two teeth (18°) of camshaft sprocket (A).

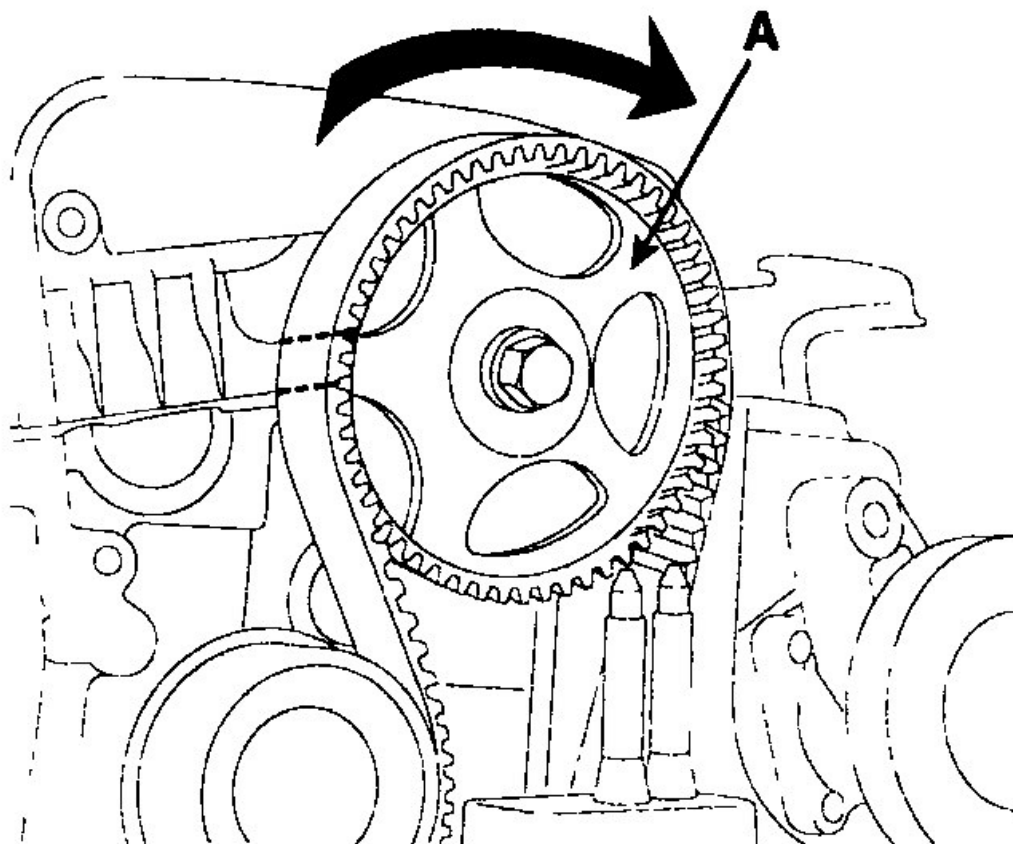

G03842310

Fig. 55: Adjusting Timing Belt Tension
Courtesy of HYUNDAI MOTOR CO.


2. Give tension to timing belt by rotating tensioner in arrow direction with tool and set timing belt not to give slack to tension side
3. Tightening tensioner bolt.

Tightening torque

Tensioner bolt:

43 ~ 55Nm (430 ~ 550kgf.cm, 32 ~ 40lbf.ft)

4. Recheck the belt tension. When the tension side of timing belt is pushed horizontally with a moderate force [approx. 2kg (20N, 5lb)], the timing belt cog end sags in approx. 4 ~ 6 mm (0.16 ~ 0.24 in.)

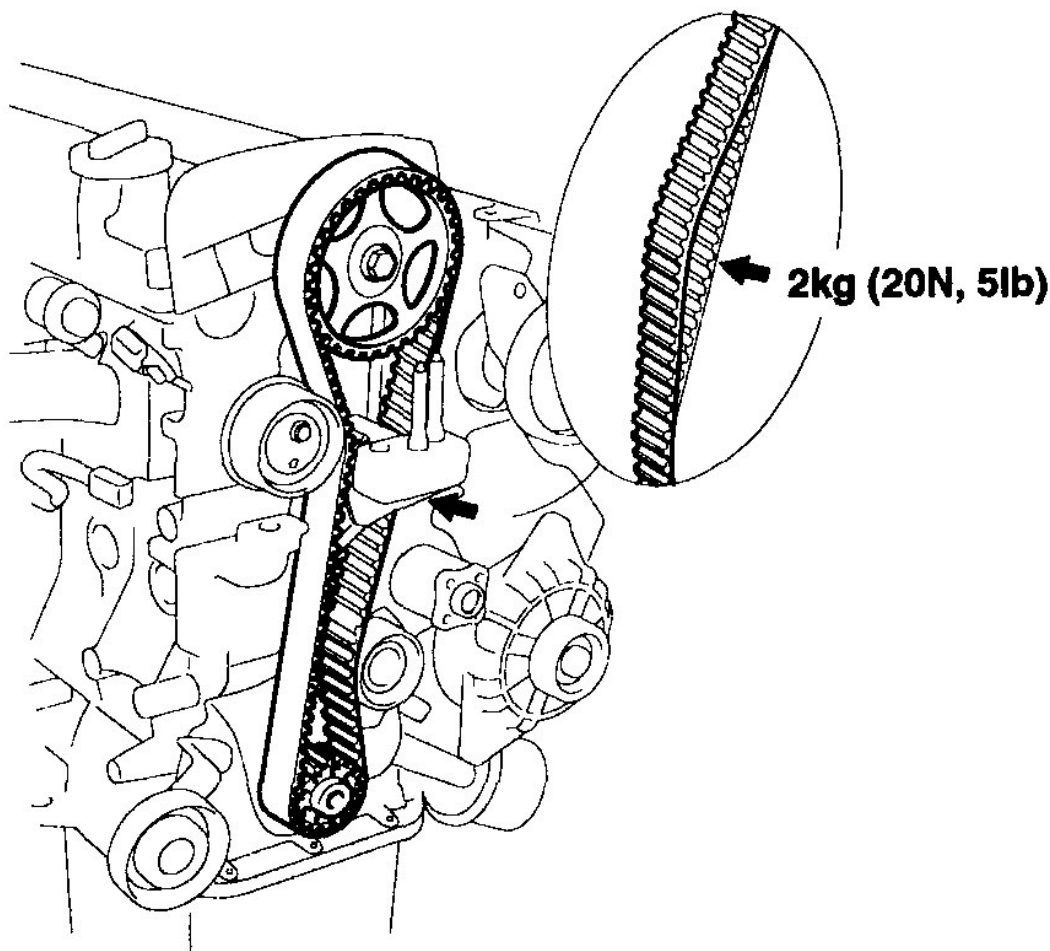

G03842311


Fig. 56: Checking Belt Tension
Courtesy of HYUNDAI MOTOR CO.

10. Turn the crankshaft two turns in the operating direction (clockwise) and realign crankshaft sprocket and camshaft sprocket timing mark.
11. Install the timing belt lower cover (A) with 5 bolts (B).

Tightening torque

Timing belt cover bolt:

8 ~ 10Nm (80 ~ 100kg.cm, 6 ~ 7lbf.ft)

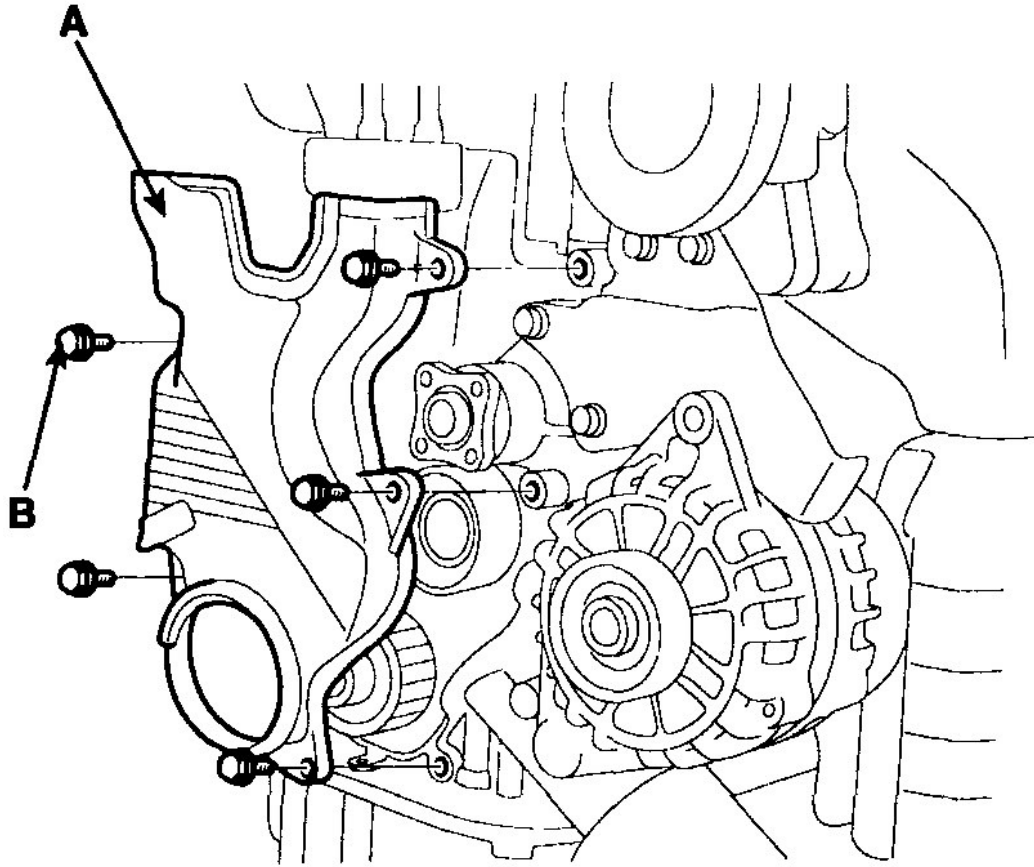

G03842312

Fig. 57: Installing Timing Belt Lower Cover
Courtesy of HYUNDAI MOTOR CO.


12. Install the flange and crankshaft pulley (A).

Make sure that crankshaft sprocket pin fits the small hole in the pulley.

Tightening torque

Crankshaft pulley bolt:


170 ~ 180Nm (1700 ~ 1800kgf.cm, 125 ~ 133lbf.ft)

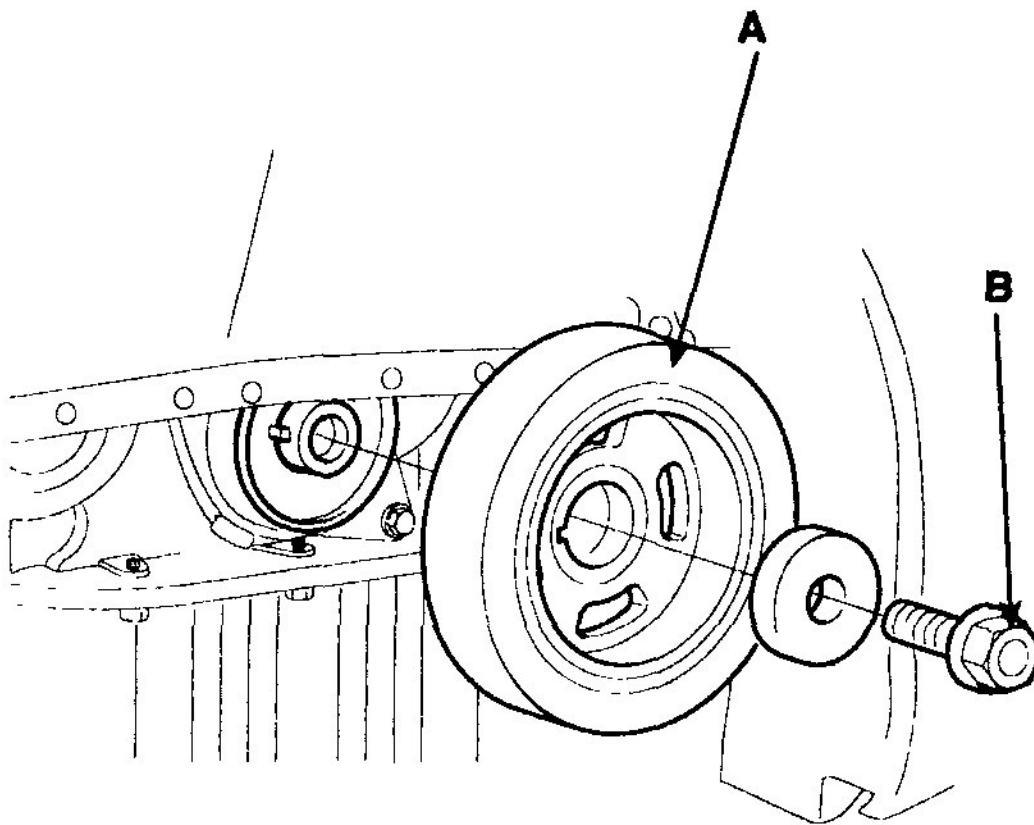

G03842313

Fig. 58: Installing Flange And Crankshaft Pulley
Courtesy of HYUNDAI MOTOR CO.

13. Install the timing belt upper cover (A) with 4 bolts (B).

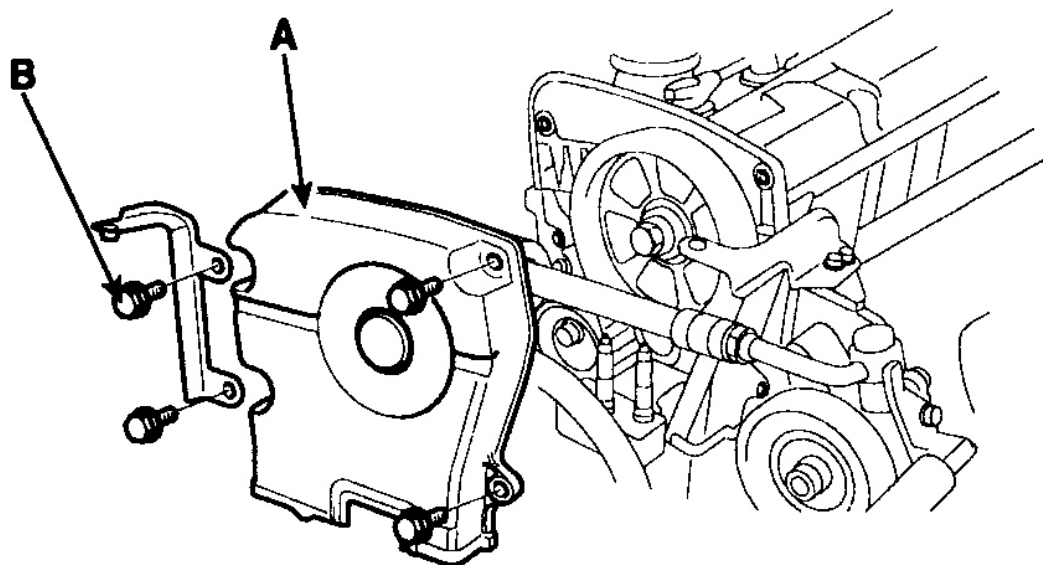

G03842314


Fig. 59: Installing Timing Belt Upper Cover
 Courtesy of HYUNDAI MOTOR CO.

14. Install the coolant pump pulley with 4 bolts.
15. Install power steering belt, (See **INSTALLATION**)
16. Install air compressor bolt. (See **REPLACEMENT**)
17. Install alternator belt. (See **ALTERNATOR BELT INSPECTION AND ADJUSTMENT**)
18. Install the engine mount bracket
 1. Install the stay plate (A) with bolt (B).

Tightening torque

Stay plate bolt:

43 ~ 55Nm (430 ~ 550kgf.cm, 32 ~ 40lbf.ft)

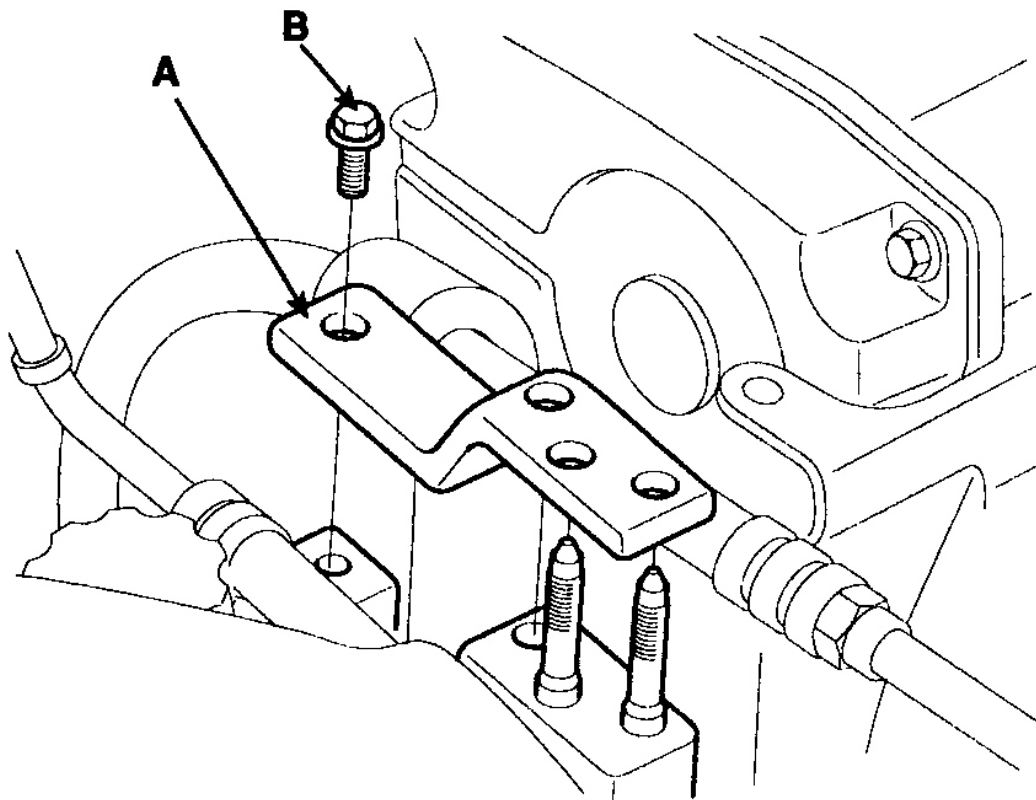

G03842315


Fig. 60: Installing Engine Mount Bracket
Courtesy of HYUNDAI MOTOR CO.

2. Install engine mount bracket with 3 nuts (C) and bolt (B).

Tightening torque

17 mm nut: 60 ~ 80Nm (600 ~ 800kgf.cm, 44 ~ 59lbf.ft)


14 mm nut: 50 ~ 65Nm (500 ~ 650kgf.cm, 37 ~ 48lbf.ft)

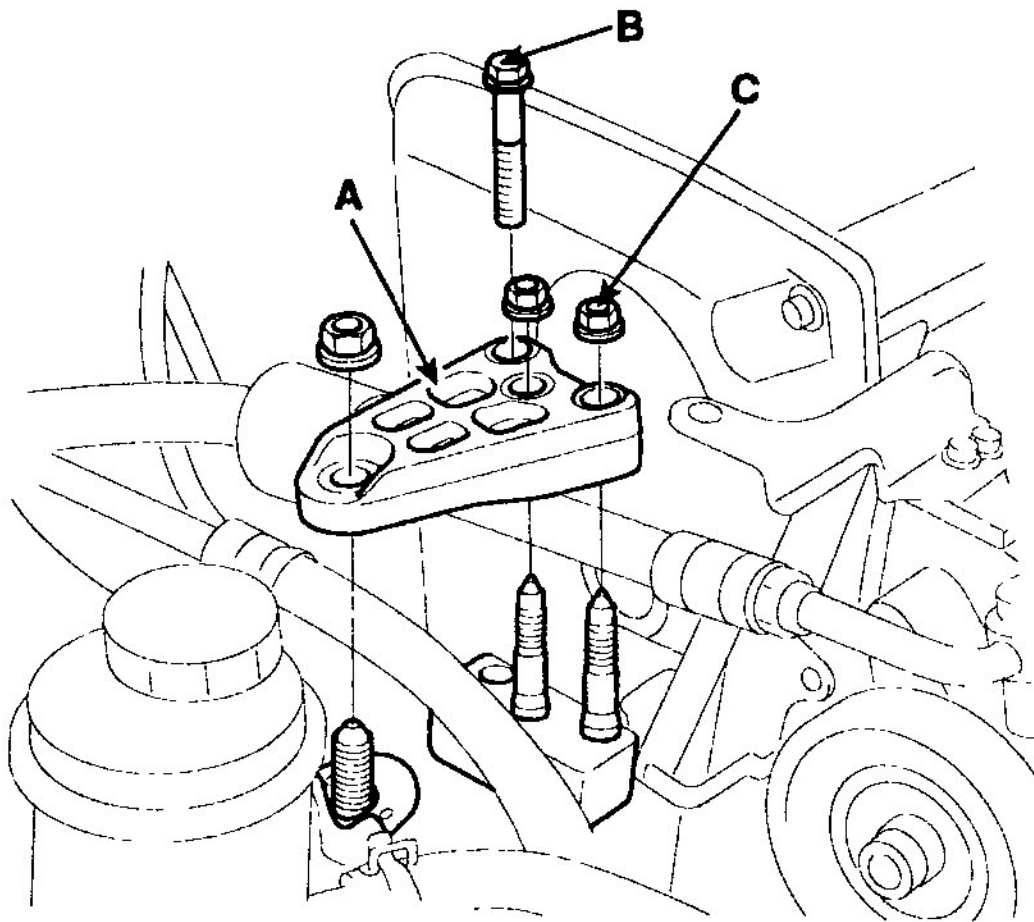

G03842316

Fig. 61: Installing Engine Mount Bracket
Courtesy of HYUNDAI MOTOR CO.


19. Install RH side cover (A) with 2 bolts (B).

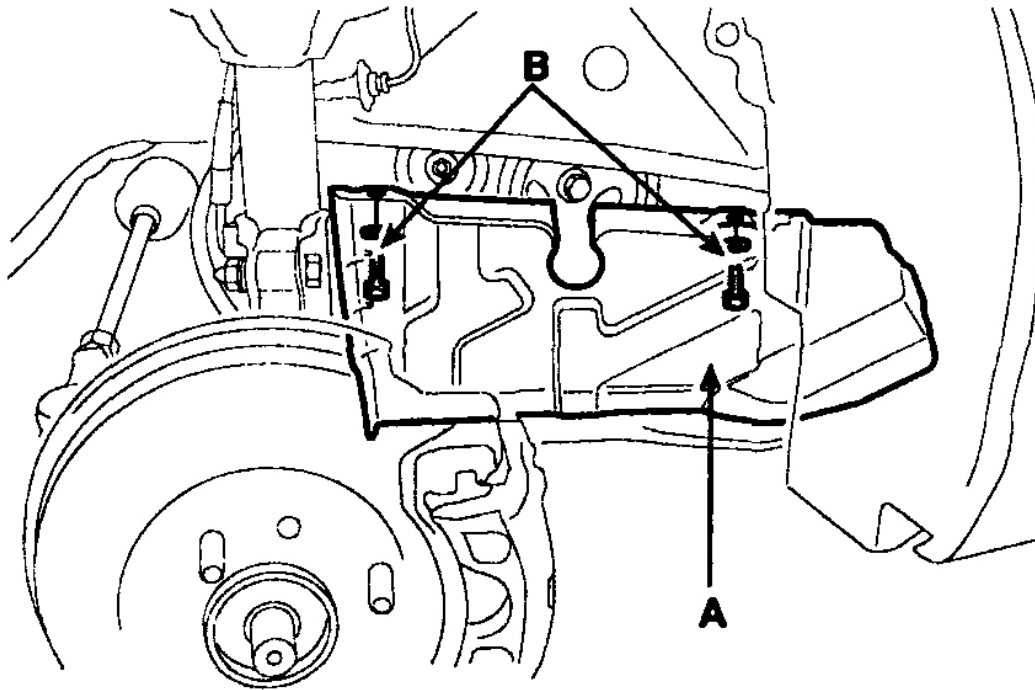

G03842317

Fig. 62: Installing RH Side Cover
Courtesy of HYUNDAI MOTOR CO.

20. Install RH front wheel.
21. Install engine cover (A) with 5 bolts.

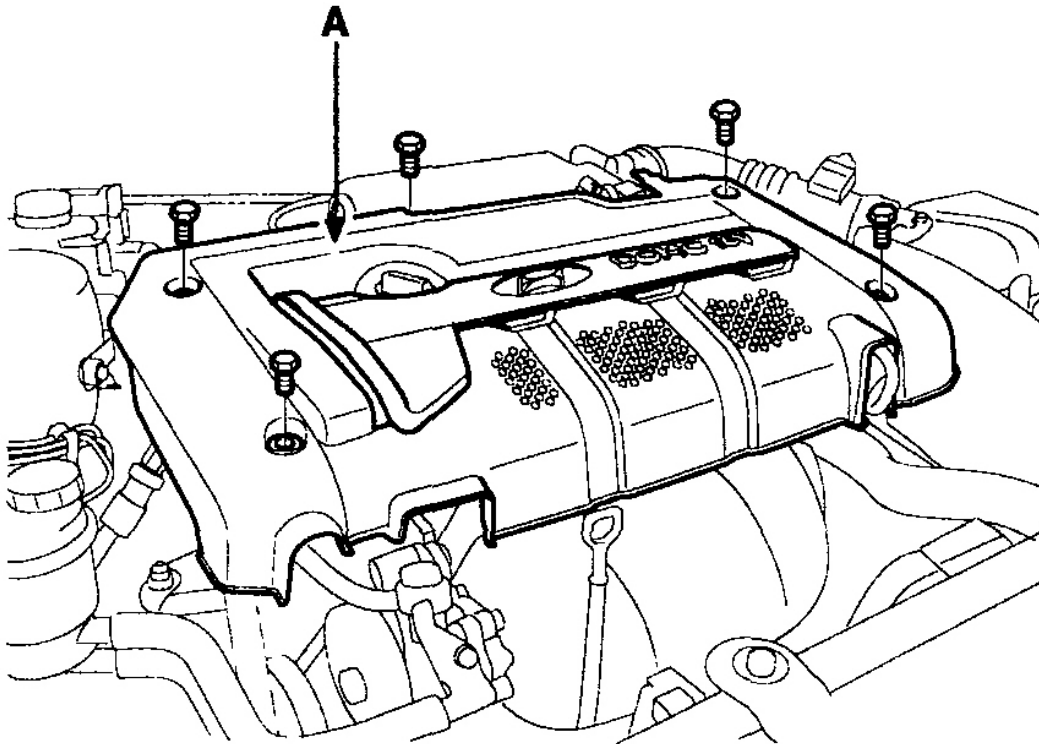


G03842318

Fig. 63: Install Engine Cover Using Bolts
Courtesy of HYUNDAI MOTOR CO.

CYLINDER HEAD ASSEMBLY


COMPONENTS

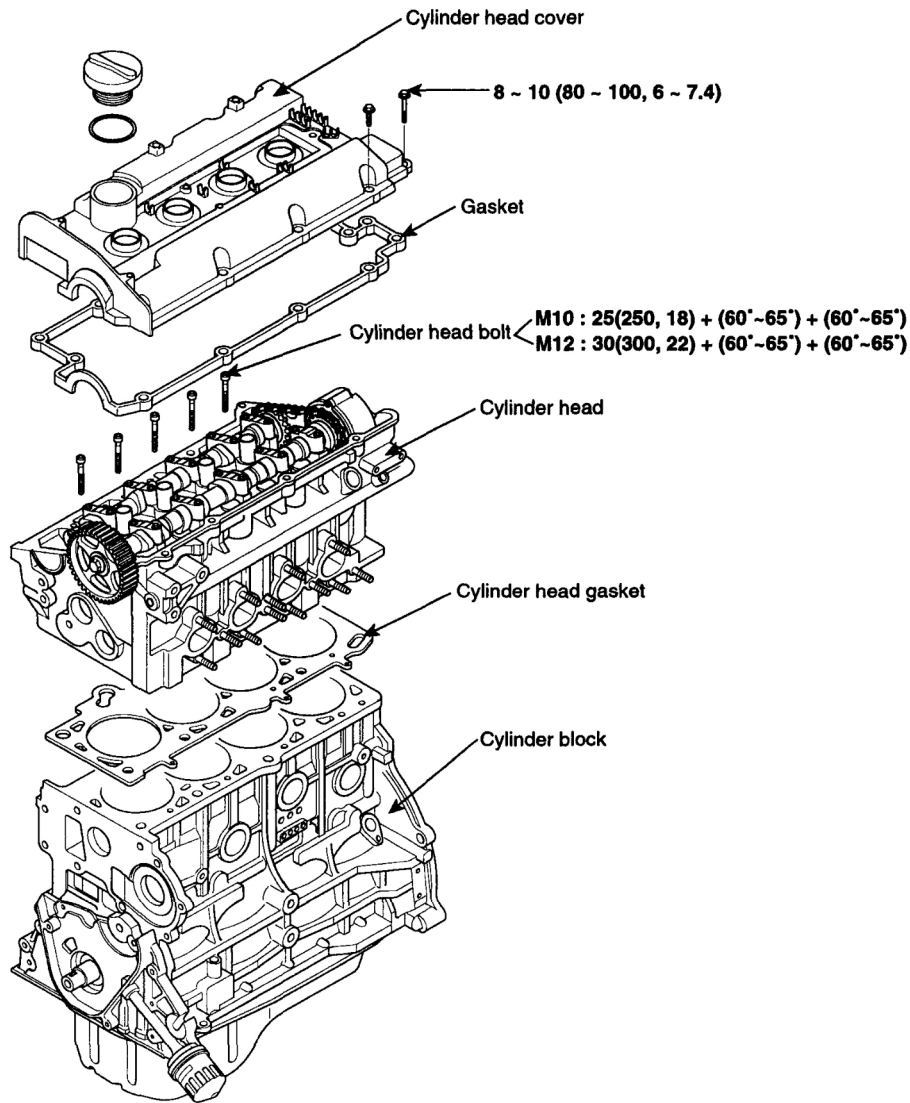

TORQUE : Nm (kgf.cm, lbf.ft)

G03842319

Fig. 64: Identifying Cylinder Head Assembly Components With Torque Specifications (1 Of 2)
Courtesy of HYUNDAI MOTOR CO.

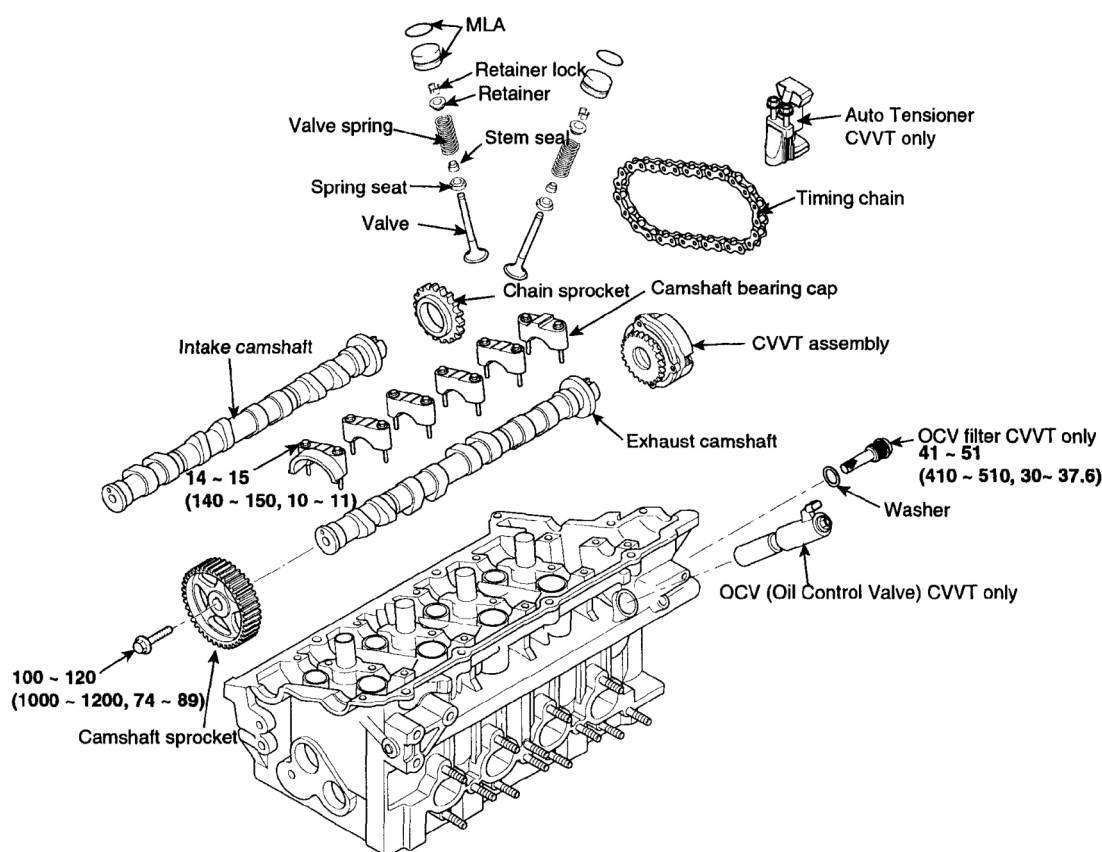

TORQUE : Nm (kgf.cm, lbf.ft)

G03842320

Fig. 65: Identifying Cylinder Head Assembly Components With Torque Specifications (2 Of 2)
Courtesy of HYUNDAI MOTOR CO.

REMOVAL

Engine removal is not required for this procedure.


CAUTION:

- Use fender covers to avoid damaging painted surfaces.
- To avoid damaging the cylinder head, wait until the engine coolant temperature drops below normal temperature before removing it.
- When handling a metal gasket, take care not to fold the gasket or damage the contact surface of the gasket.
- To avoid damage, unplug the wiring connectors carefully while holding the connector portion.

NOTE:

- Mark all wiring and hoses to avoid misconnection.
- Inspect the timing belt before removing the cylinder head.
- Turn the crankshaft pulley so that the No. 1 piston is at top dead center. (See a).


1. Disconnect the negative terminal from the battery.

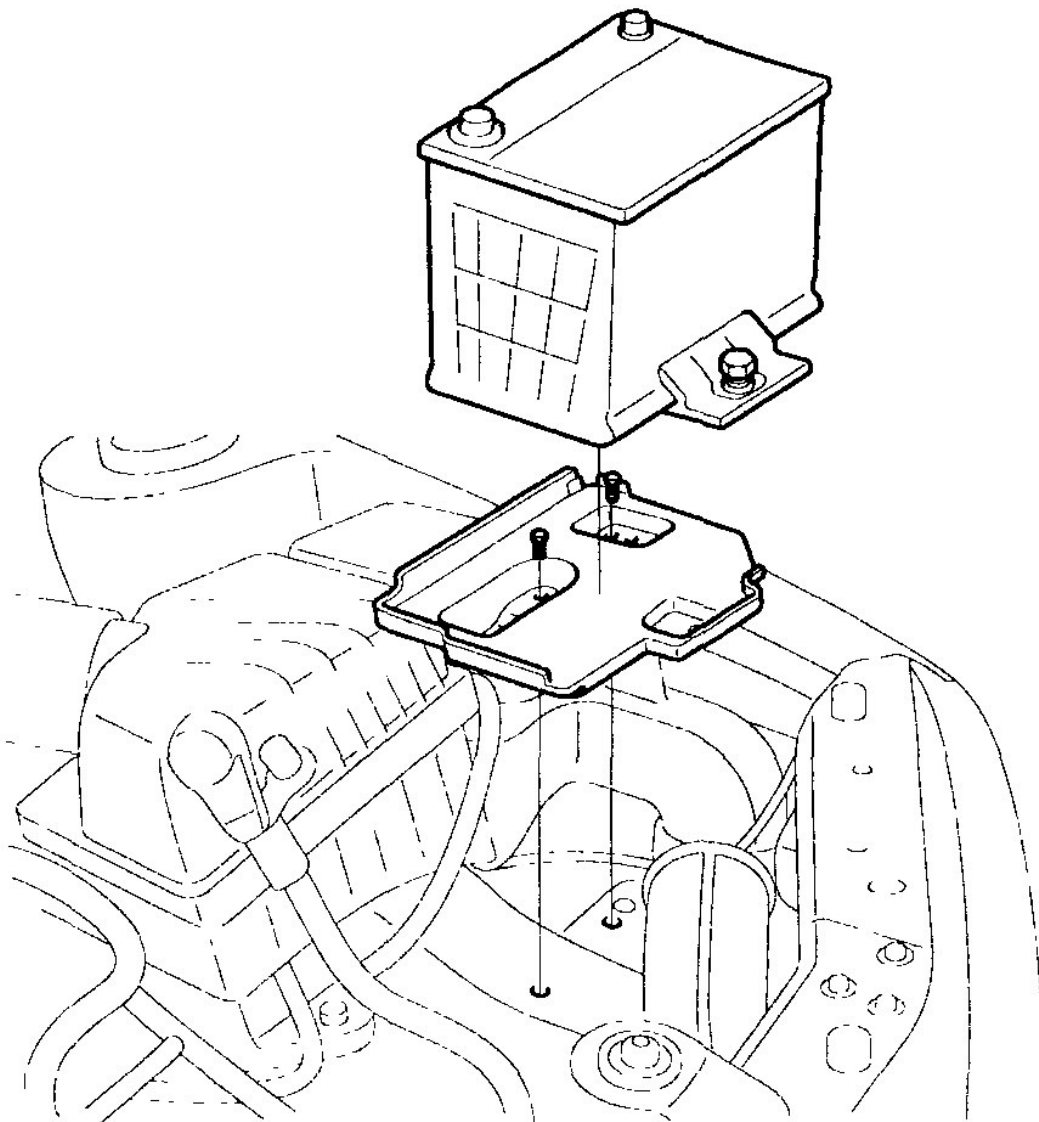

G03842321

Fig. 66: Disconnecting Negative Terminal From Battery
Courtesy of HYUNDAI MOTOR CO.

2. Remove the engine cover (A).

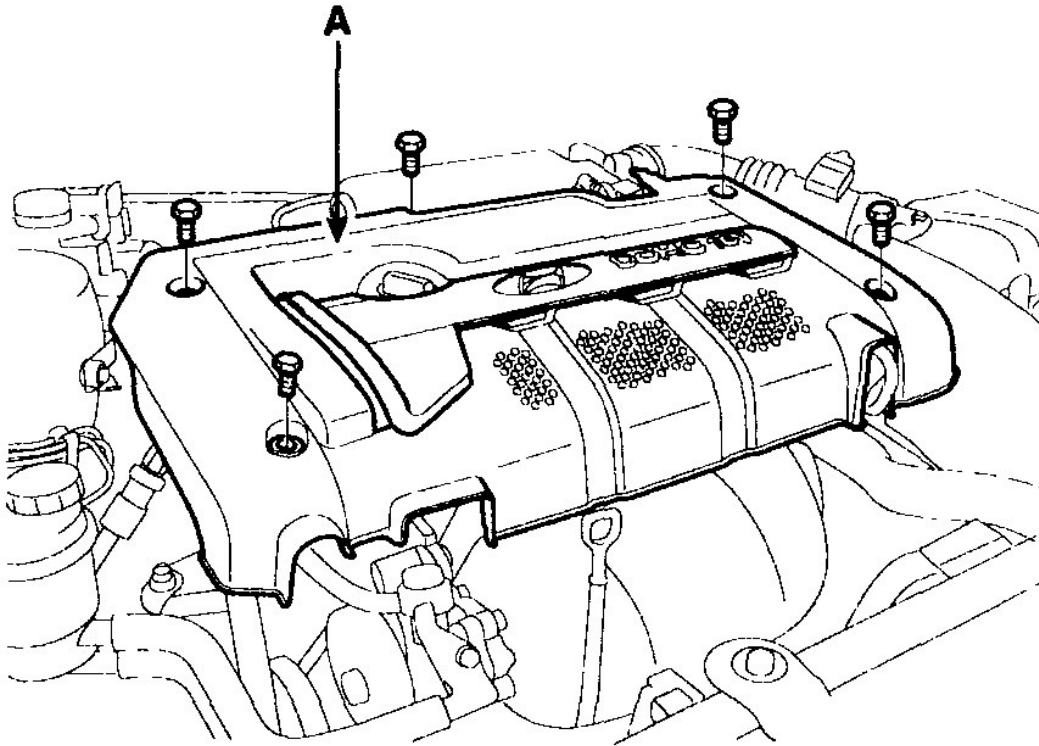

G03842322

Fig. 67: Removing Engine Cover
Courtesy of HYUNDAI MOTOR CO.

3. Drain the engine coolant (See **ENGINE COOLANT REFILLING AND BLEEDING**). Remove the radiator cap to speed draining.
4. Remove the intake air hose and air cleaner assembly.
 1. Remove the heat shield (A).


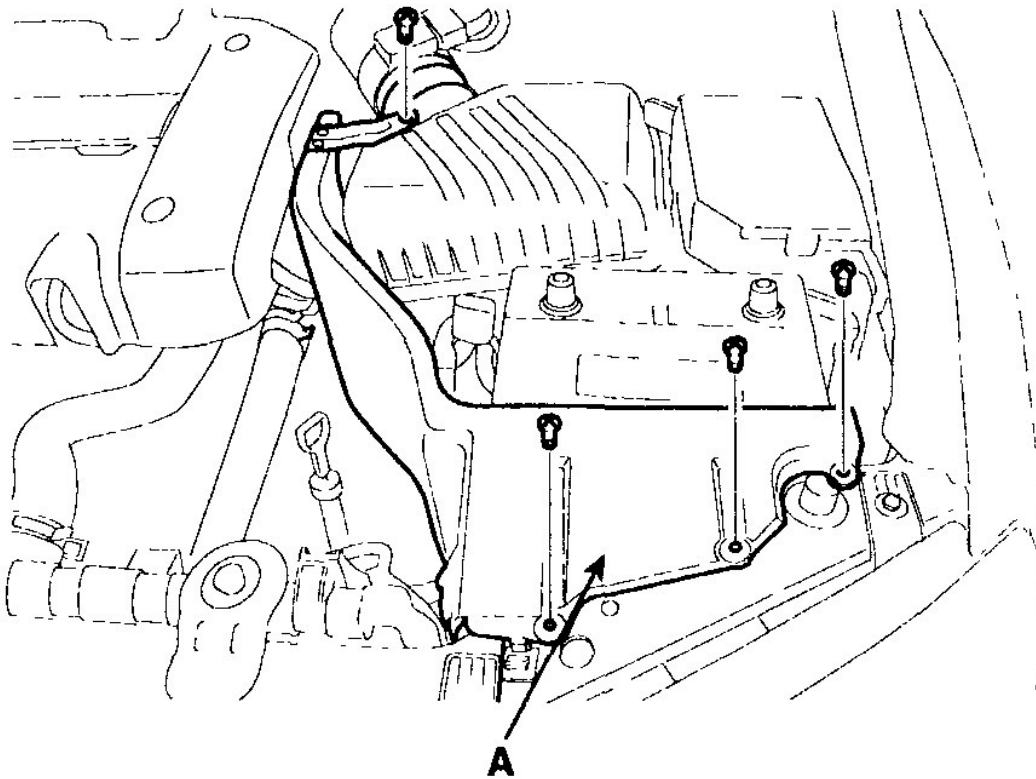
**G03842323**

Fig. 68: Removing Heat Shield
Courtesy of HYUNDAI MOTOR CO.


2. Disconnect the AFS connector.
3. Disconnect the breather hose from air cleaner hose.
4. Remove the intake air hose and air cleaner assembly.
5. Remove the upper radiator hose (A) and lower radiator hose (B).

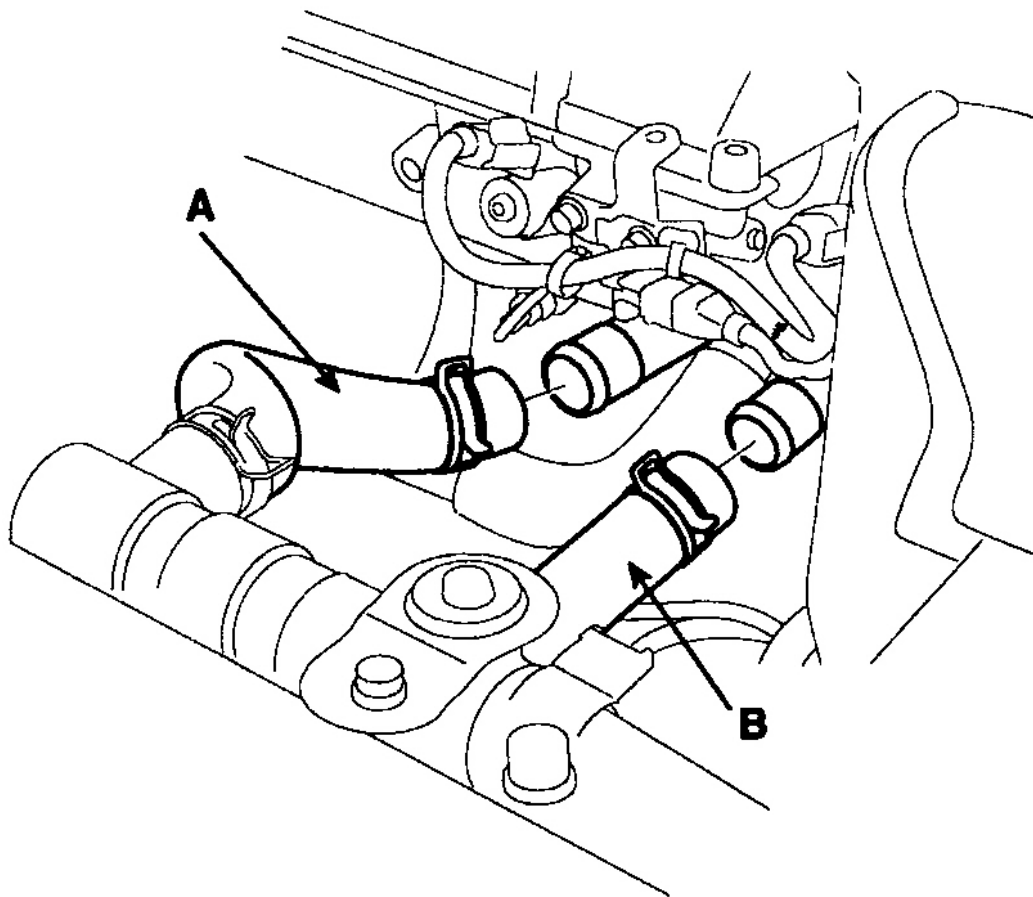

G03842324

Fig. 69: Removing Upper Radiator Hose And Lower Radiator Hose
Courtesy of HYUNDAI MOTOR CO.


6. Remove the heater hoses (A).

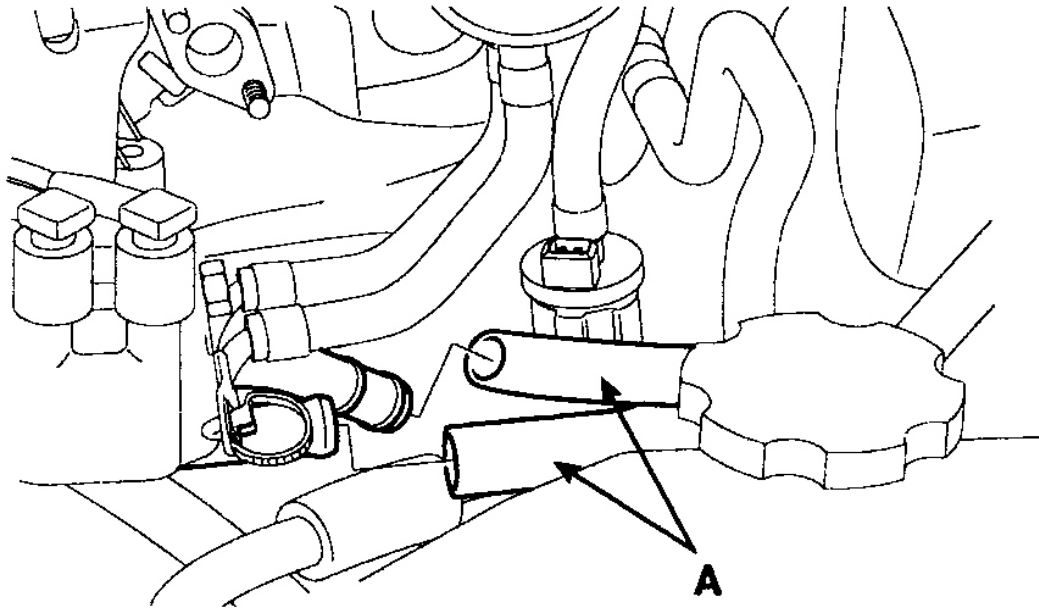

G03842325

Fig. 70: Removing Heater Hoses**Courtesy of HYUNDAI MOTOR CO.**


7. Remove the engine wire harness connectors and wire harness clamps from the cylinder head and the intake manifold.
 1. OCV (Oil control Valve) connector (A).
 2. Oil temperature sensor connector (B).
 3. ECT (Engine Coolant Temperature) sensor connector (C).
 4. Ignition coil connector (D).

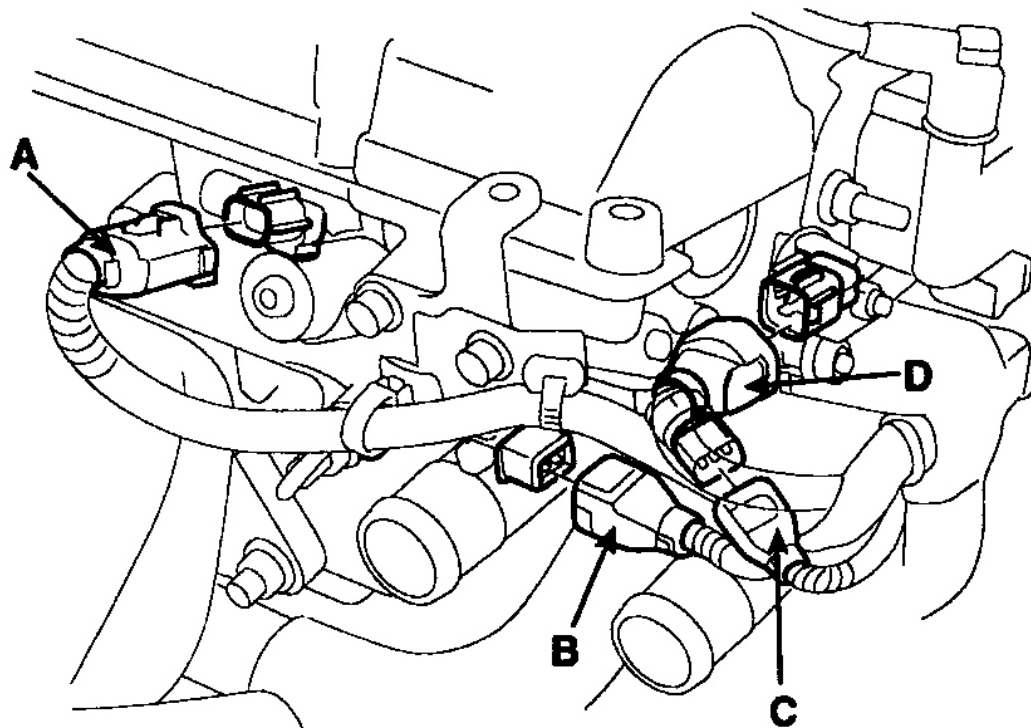

G03842326

Fig. 71: Removing Engine Wire Harness Connectors And Wire Harness Clamps
Courtesy of HYUNDAI MOTOR CO.


5. TPS (Throttle Position Sensor) connector (A).
6. ISA (Idle Speed Actuator) connector (B).

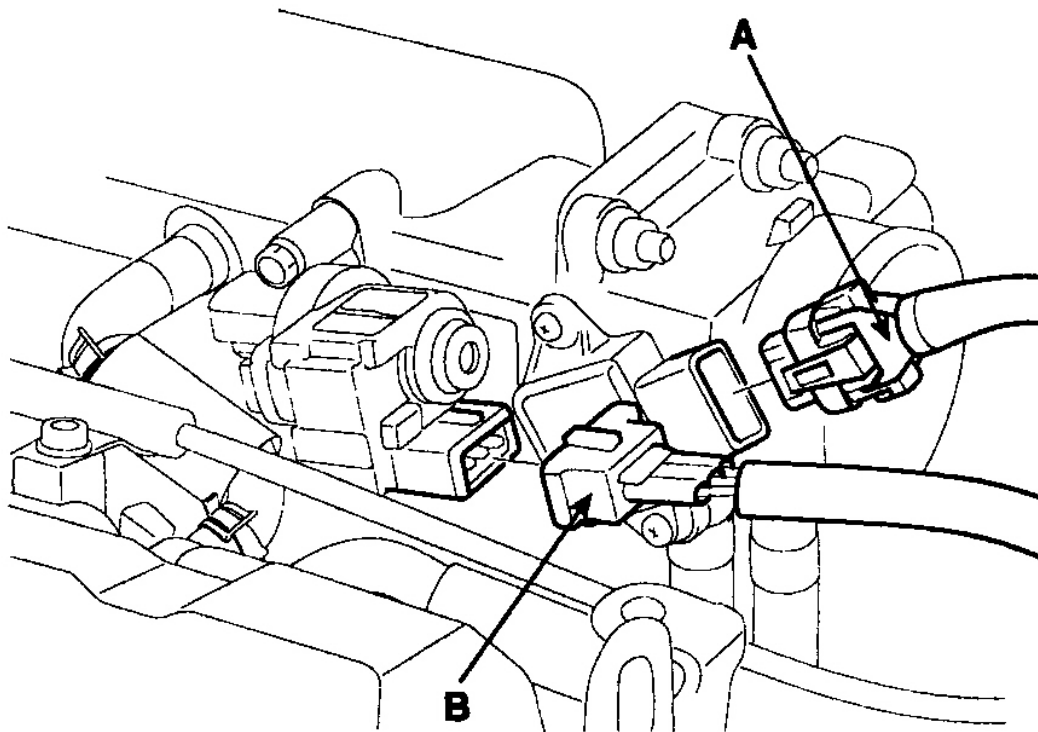

G03842327

Fig. 72: Identifying Throttle Position Sensor And Idle Speed Actuator Connectors
Courtesy of HYUNDAI MOTOR CO.

7. CMP (Camshaft Position Sensor) connector (A).
8. Four fuel injector connectors (B).
9. Knock sensor connector (C).
10. Disconnect ground cable (D) from the intake manifold.

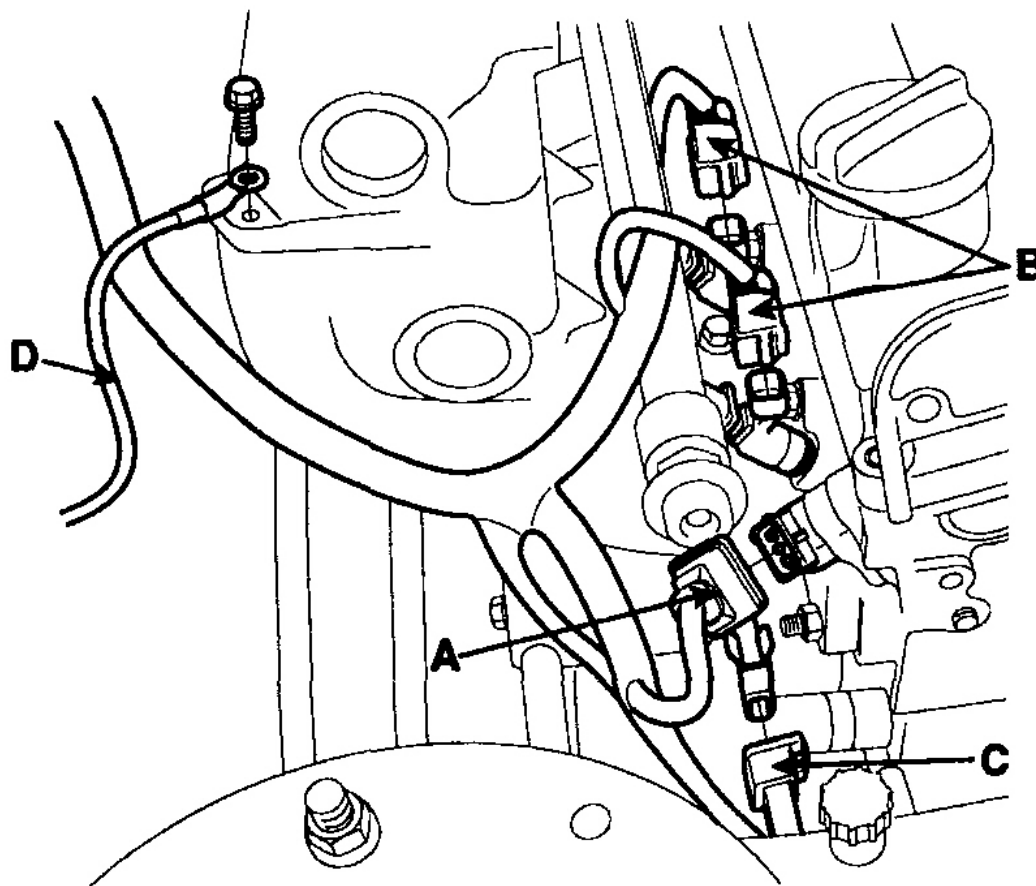


G03842328

Fig. 73: Identifying Camshaft Position Sensor, Four Fuel Injector, Knock Sensor Connectors And Ground Cable

Courtesy of HYUNDAI MOTOR CO.


11. Front heated oxygen sensor connector (A).

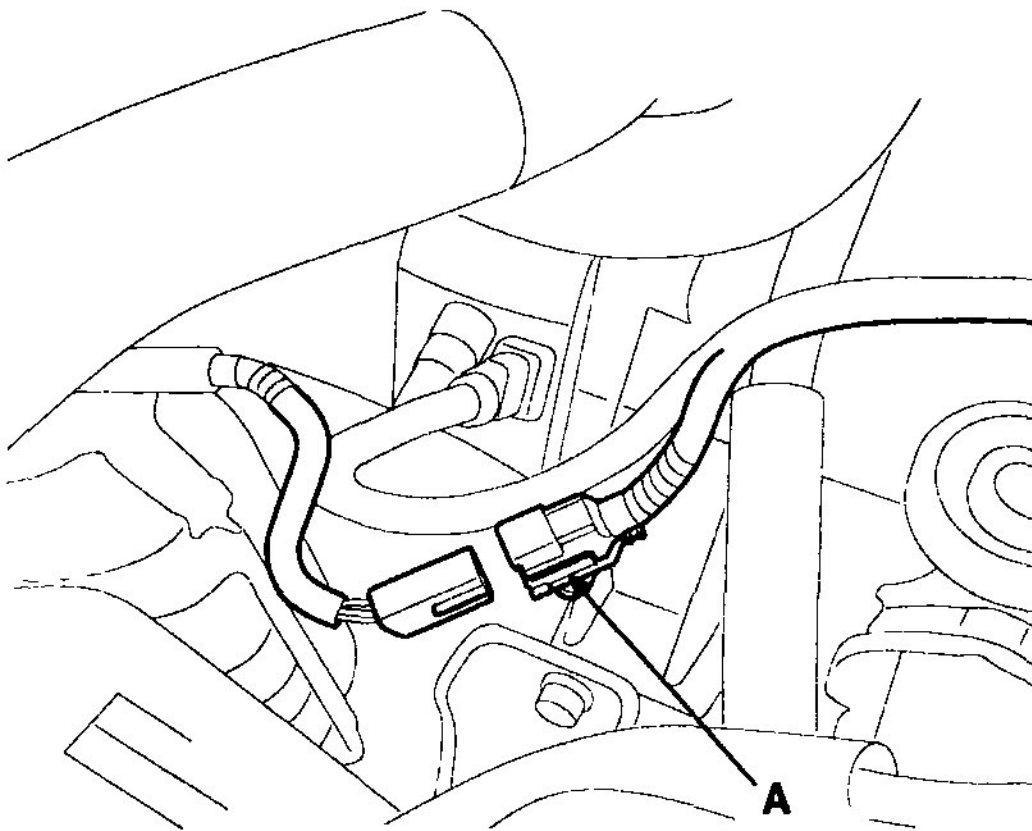

G03842329

Fig. 74: Identifying Front Heated Oxygen Sensor Connector
Courtesy of HYUNDAI MOTOR CO.


12. PCSV (Purge Control Solenoid Valve) connector (A).

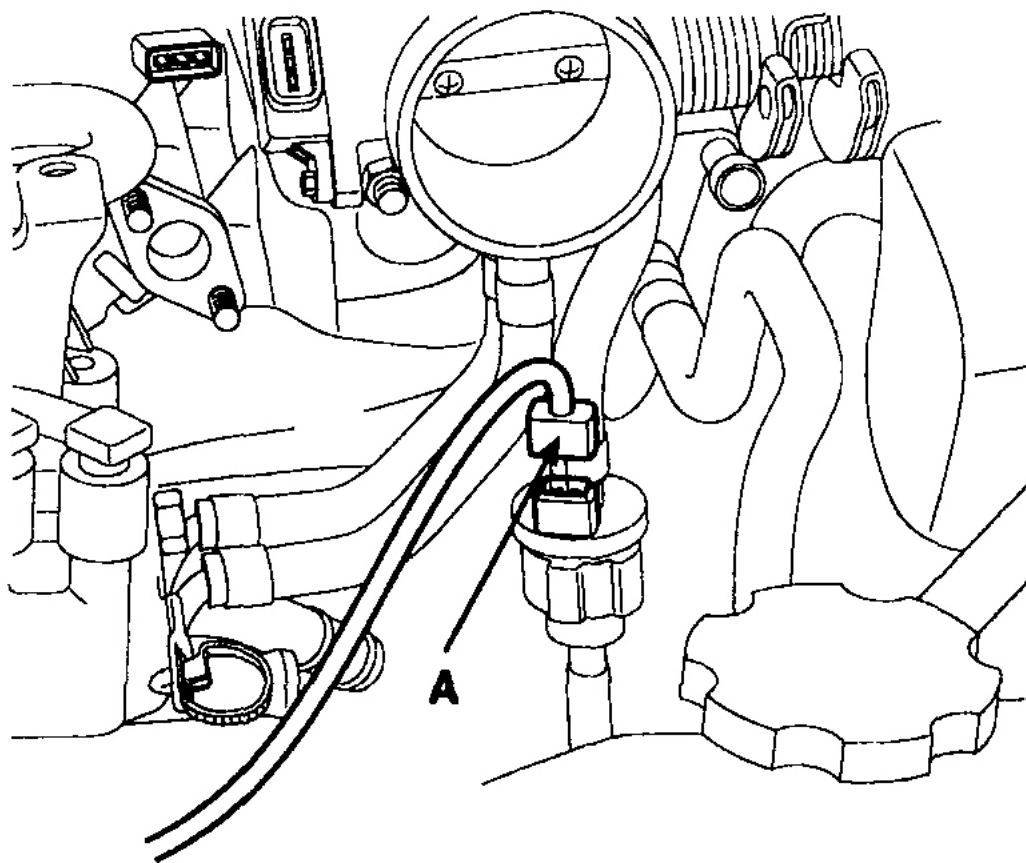

G03842330

Fig. 75: Identifying Purge Control Solenoid Valve Connector
Courtesy of HYUNDAI MOTOR CO.


8. Remove the fuel inlet hose (A) from delivery pipe.

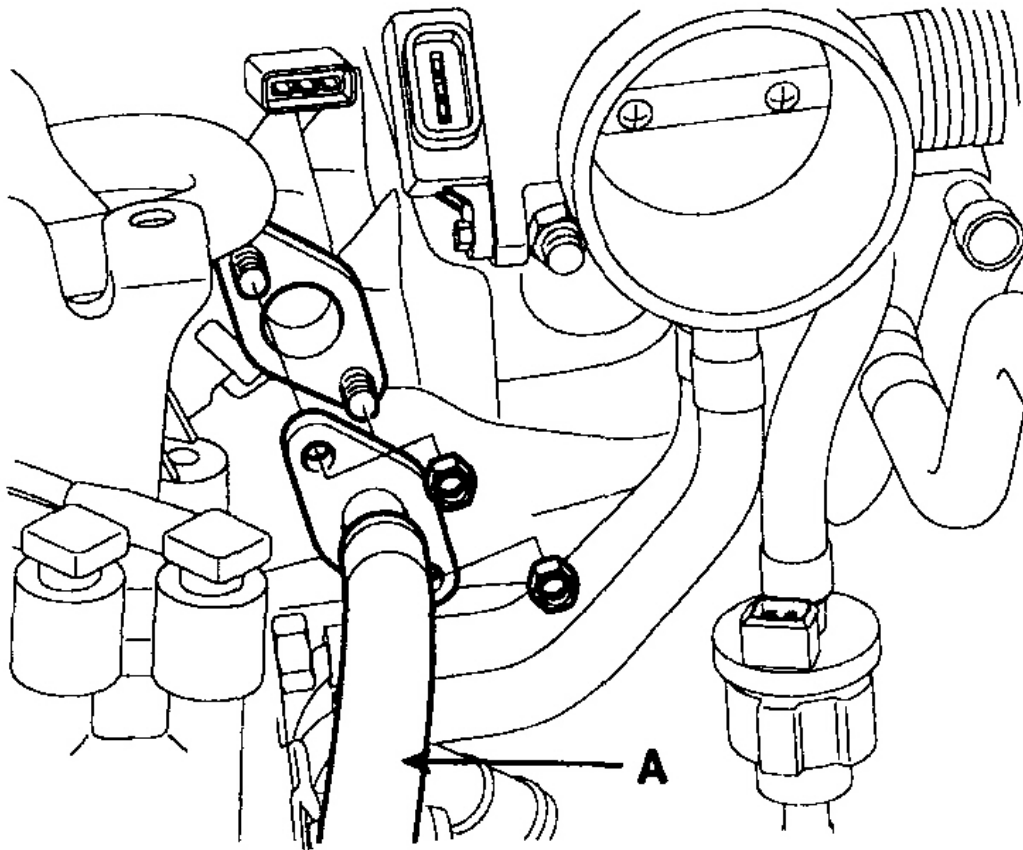

G03842331

Fig. 76: Removing Fuel Inlet Hose
Courtesy of HYUNDAI MOTOR CO.

9. Remove the PCSV hose (A).

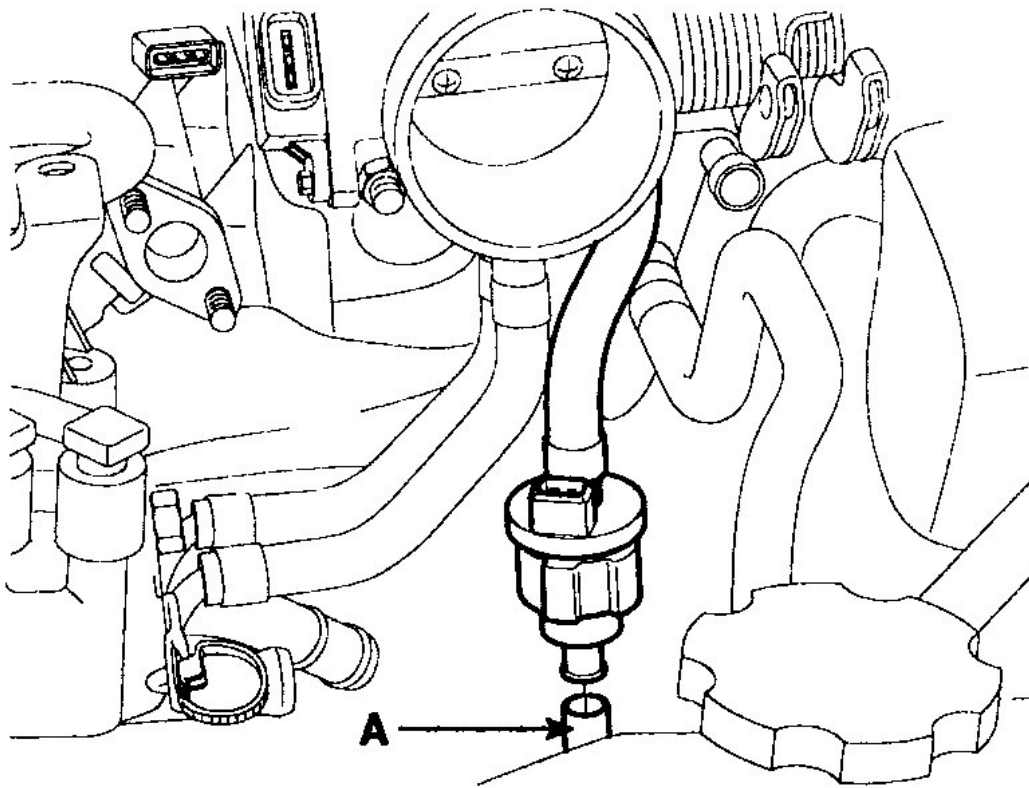

G03842332

Fig. 77: Removing PCSV Hose
Courtesy of HYUNDAI MOTOR CO.

10. Remove the brake booster vacuum hose (A).


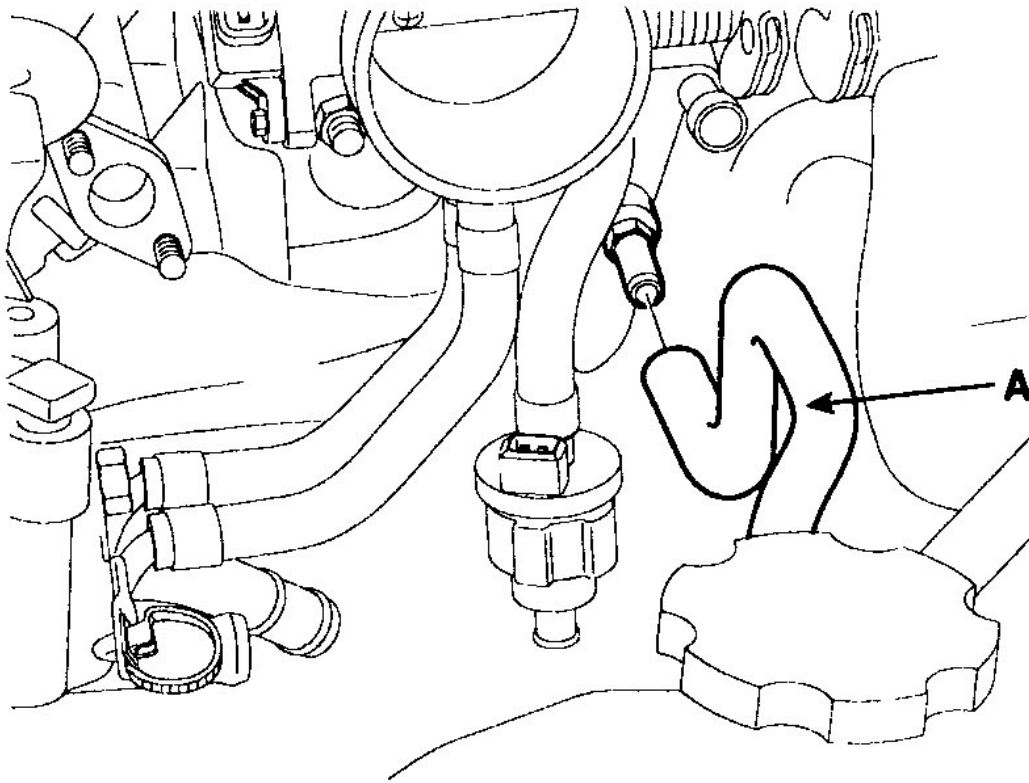
**G03842333**

Fig. 78: Removing Brake Booster Vacuum Hose
Courtesy of HYUNDAI MOTOR CO.


11. Remove the accelerator cable by loosening the lock-nut, then slip the cable end out of the throttle linkage.
12. Remove the power steering pump. (See **REMOVAL**).
13. Remove the power steering pump bracket bolts (A).

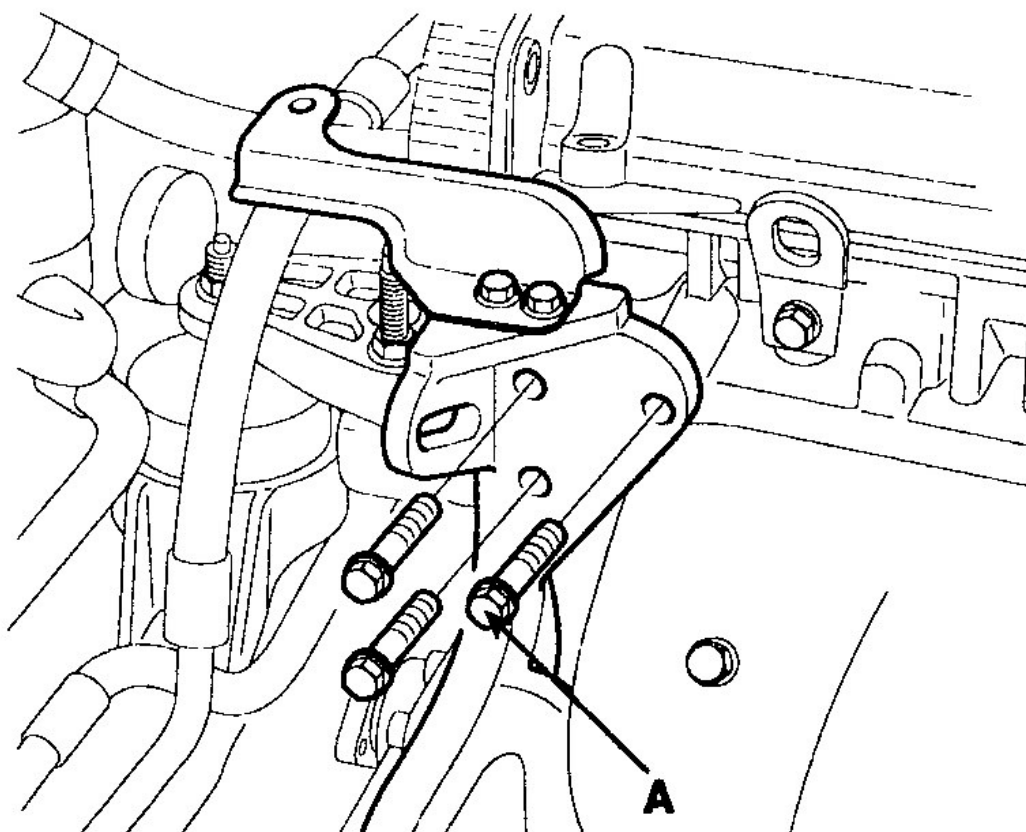

G03842334

Fig. 79: Removing Power Steering Pump Bracket Bolts
Courtesy of HYUNDAI MOTOR CO.


14. Remove the spark plug cable. (See INSPECT SPARK PLUG AND SPARK PLUG CABLE)
15. Remove the PCV hose. (See VALVE CLEARANCE INSPECTION AND ADJUSTMENT)
16. Remove the cylinder head cover. (See d)
17. Remove the timing belt. (See REMOVAL)
18. Remove the exhaust manifold. (See EXHAUST MANIFOLD)
19. Remove the intake manifold. (See INTAKE AND EXHAUST SYSTEM)
20. Remove the camshaft sprocket. (See SPROCKETS, TENSIONER, IDLER)
21. Remove the timing chain auto tensioner (A).

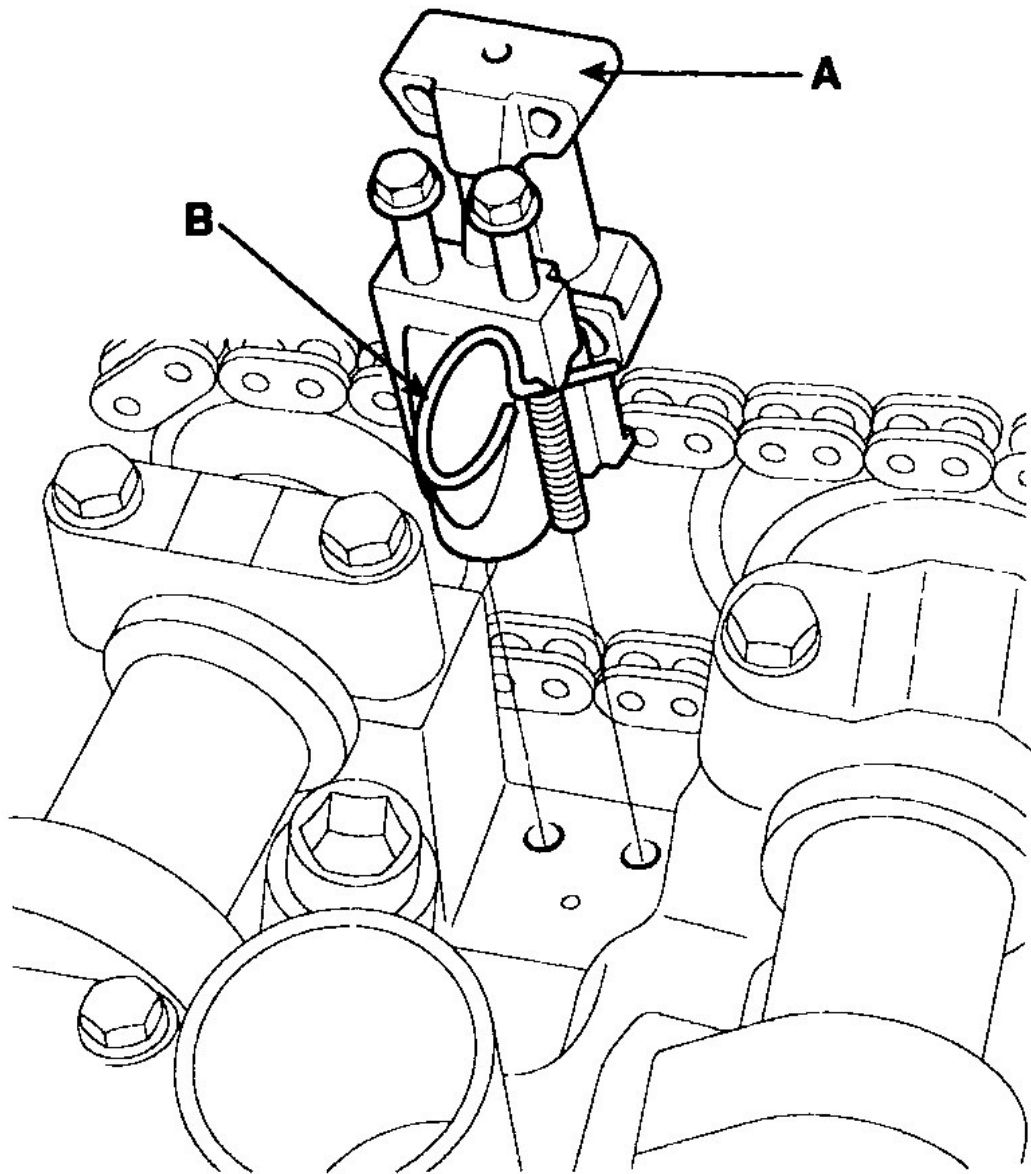

G03842335

Fig. 80: Removing Timing Chain Auto Tensioner
Courtesy of HYUNDAI MOTOR CO.


22. Remove the camshaft bearing caps (A) and camshafts (B).

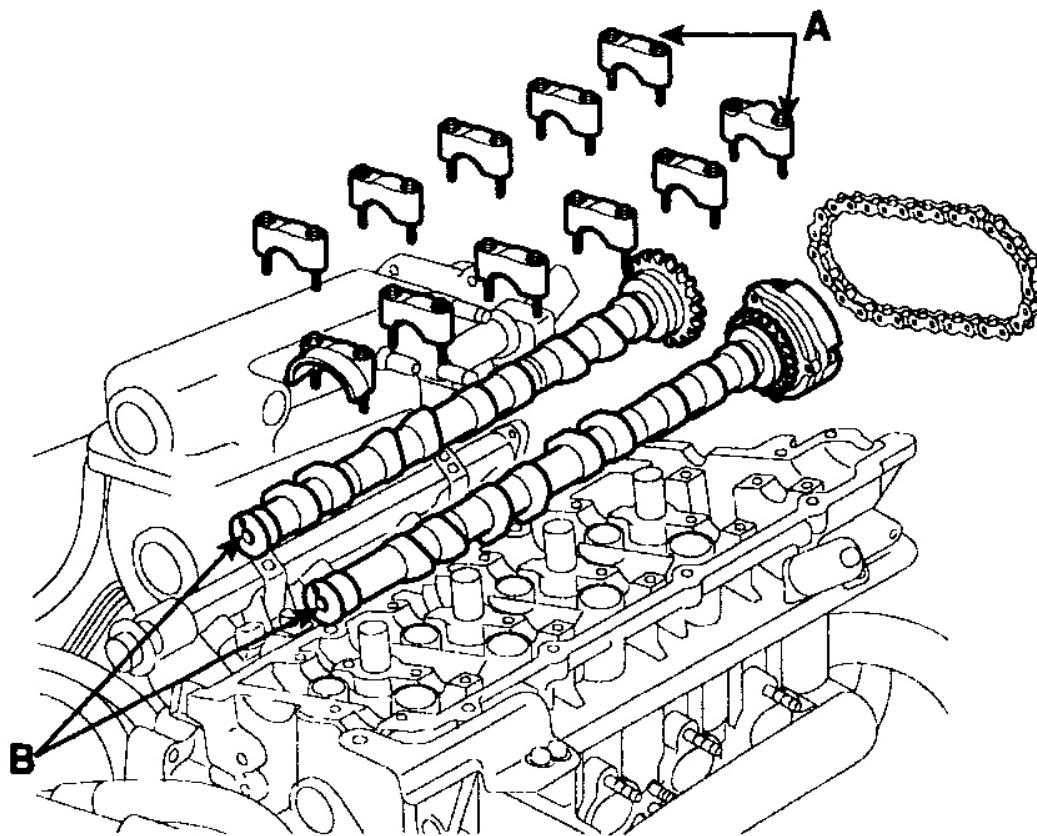

G03842336

Fig. 81: Removing Camshaft Bearing Caps And Camshaft
Courtesy of HYUNDAI MOTOR CO.


23. Remove the OCV (oil control valve) (A).

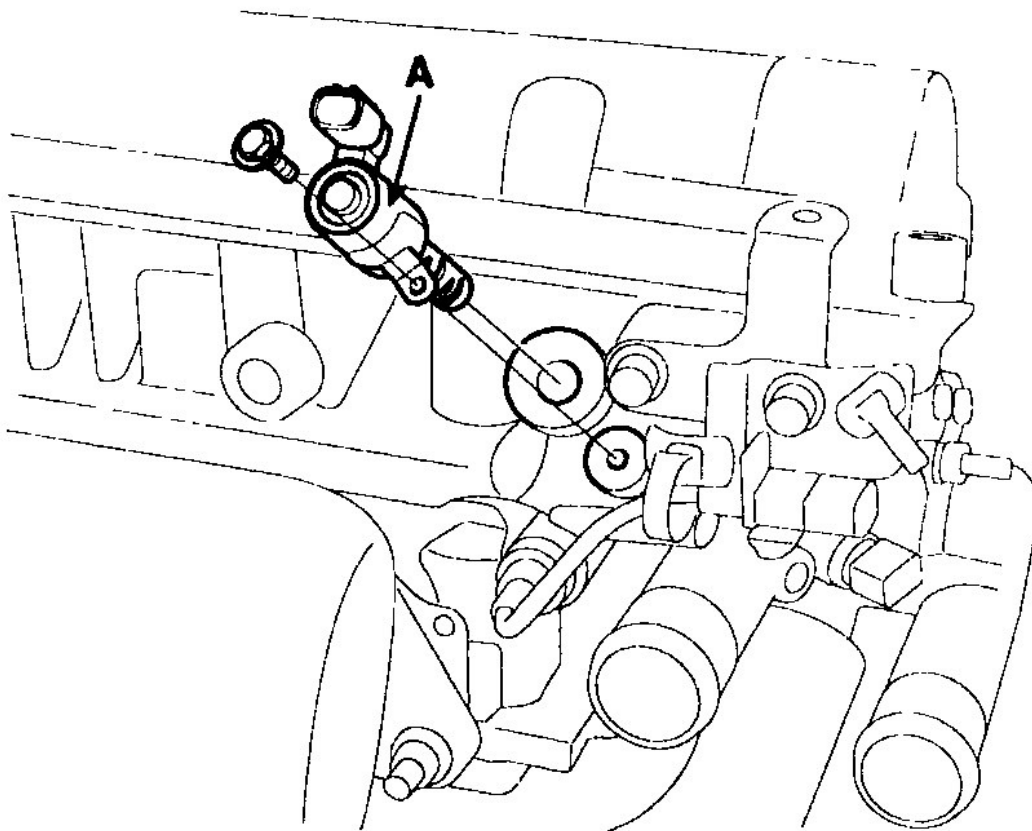

G03842337

Fig. 82: Removing Oil Control Valve
Courtesy of HYUNDAI MOTOR CO.


24. Remove the OCV (oil control valve) filter (A).

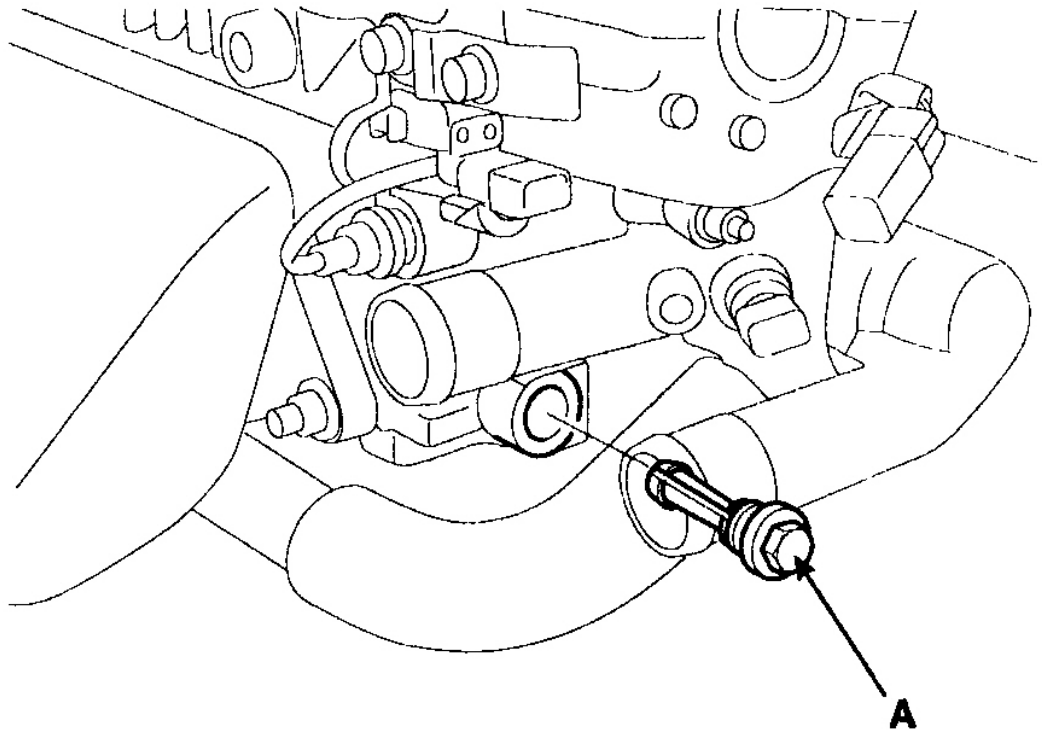

G03842338

Fig. 83: Removing Oil Control Valve Filter
 Courtesy of HYUNDAI MOTOR CO.

25. Remove the cylinder head bolts, then remove the cylinder head.
 1. Using 8 mm and 10 mm hexagon wrench, uniformly loosen and remove the 10 cylinder head bolts, in several passes, in the sequence shown in **Fig. 84**. Remove the 10 cylinder head bolts and plate washers.

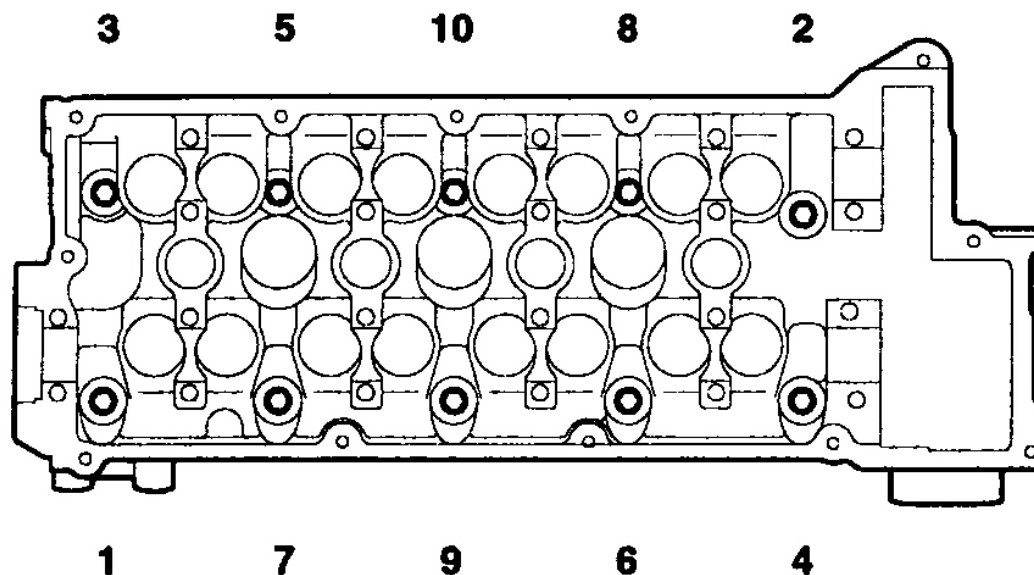

G03842339

Fig. 84: Identifying Bolt Removing Sequence

Courtesy of HYUNDAI MOTOR CO.

CAUTION: Head warpage or cracking could result from removing bolts in an incorrect order.


2. Lift the cylinder head from the dowels on the cylinder block and replace the cylinder head on wooden blocks on a bench.

CAUTION: Be careful not to damage the contact surfaces of the cylinder head and cylinder block.

DISASSEMBLY

NOTE: Identify MLA (Mechanical Lash Adjuster), valves, valve springs as they are removed so that each item can be reinstalled in its original position.

1. Remove MLAs. (A)

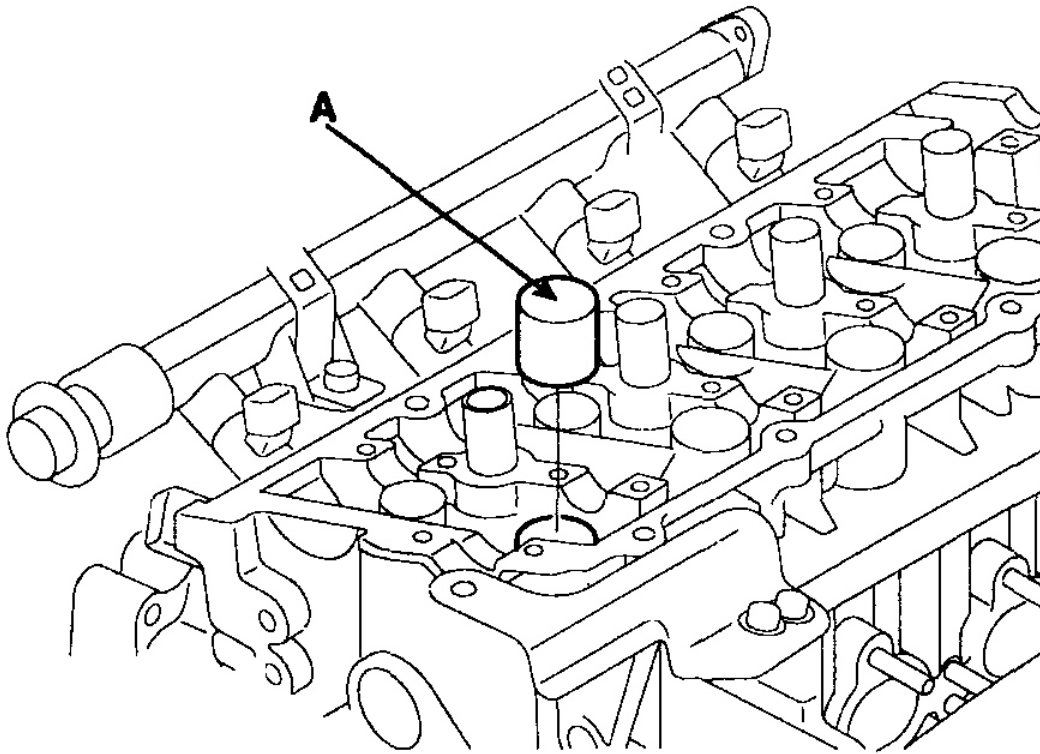

G03842340

Fig. 85: Locating MLAs

Courtesy of HYUNDAI MOTOR CO.

2. Remove valves.
 1. Using SST(09222-28000, 09222-28100), compress the valve spring and remove retainer lock.

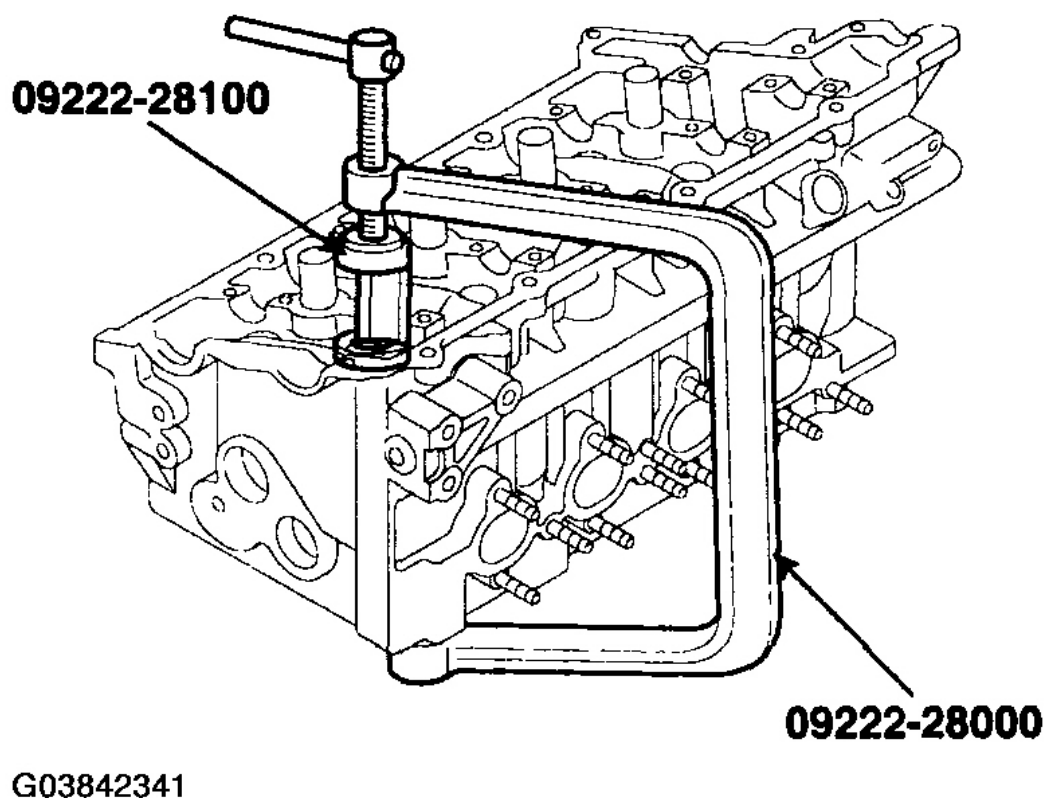


Fig. 86: Compressing Valve Spring Using SST
Courtesy of HYUNDAI MOTOR CO.

2. Remove the spring retainer.
3. Remove the valve spring.
4. Remove the valve.
5. Remove the using needle-nose pliers, remove the oil seal.
6. Using a magnetic finger, remove the spring seat.

INSPECTION

CYLINDER HEAD

1. Inspect for flatness.

Using a precision straight edge and feeler gauge, measure the surface the contacting the cylinder block and the manifolds for warpage.



Flatness of cylinder head gasket surface

2006 Hyundai Elantra GLS

2006 ENGINE Engine Mechanical System (G4GC - GSL 2.0L) - Elantra

Standard: Less than 0.03 mm (0.0012 in.)

Limit: 0.06 mm (0.0024 in.)

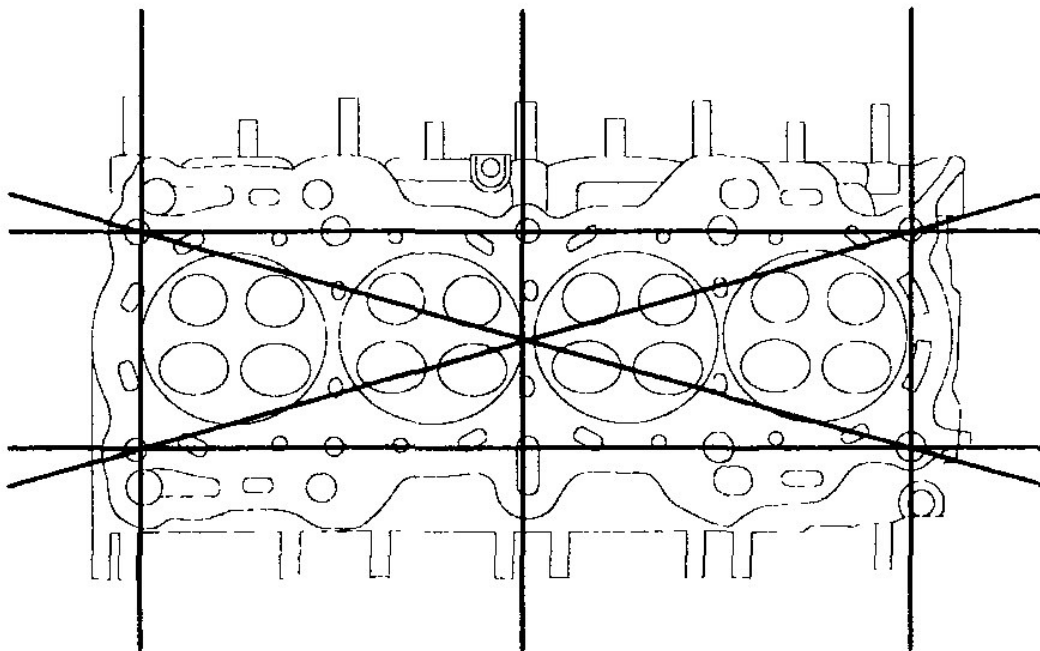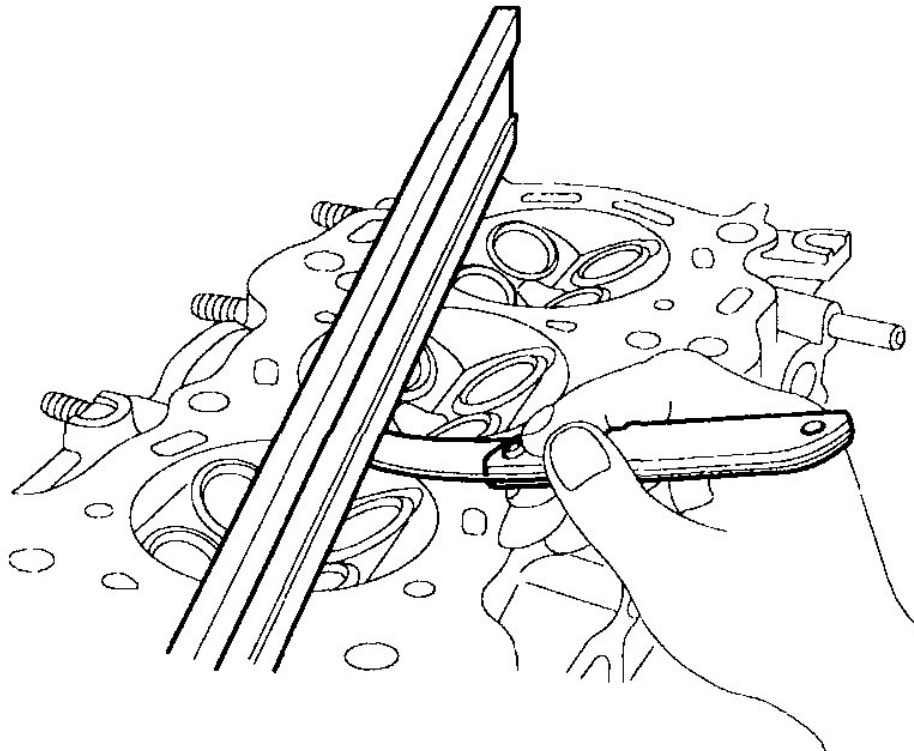

G03842342

Fig. 87: Measuring Surface Contacting Cylinder Block
Courtesy of HYUNDAI MOTOR CO.


2. Inspect for cracks.

Check the combustion chamber, intake ports, exhaust ports and cylinder block surface for cracks. If cracked, replace the cylinder head.

VALVE AND VALVE SPRING

1. Inspect valve stems and valve guides.
 1. Using a caliper gauge, measure the inside diameter or the valve guide.

Valve guide inside.

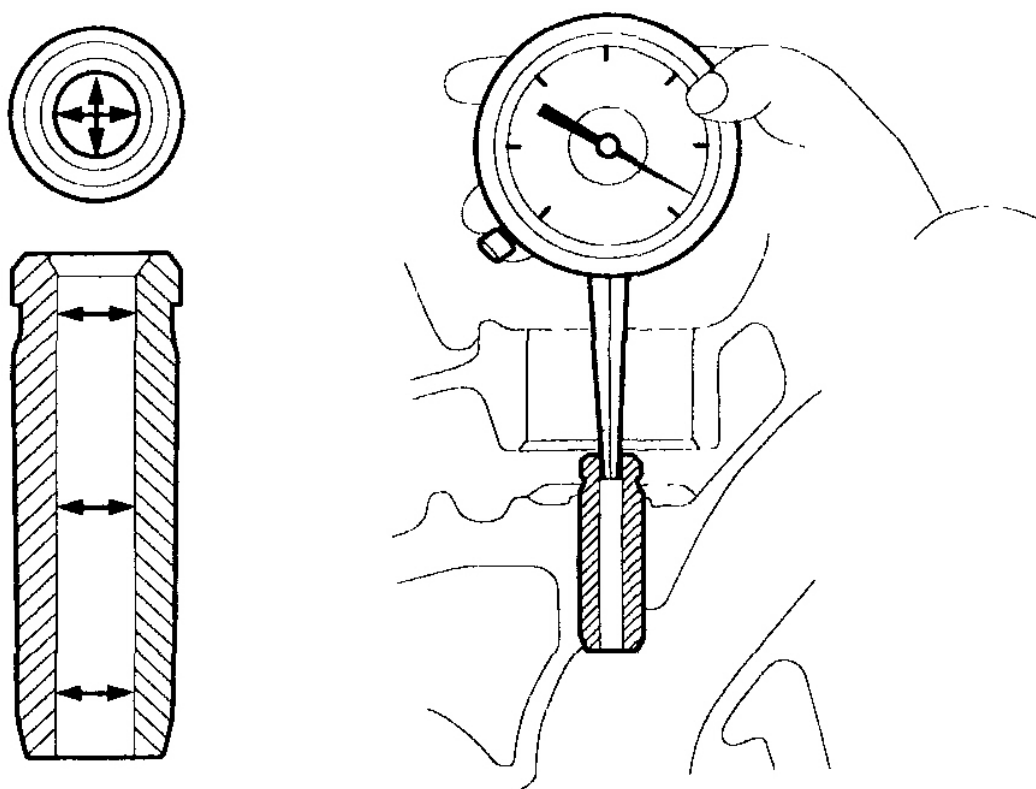

G03842343

Fig. 88: Measuring Inside Diameter Of Valve Guide
Courtesy of HYUNDAI MOTOR CO.

2. Using a micrometer, measure the diameter of the valve stem.

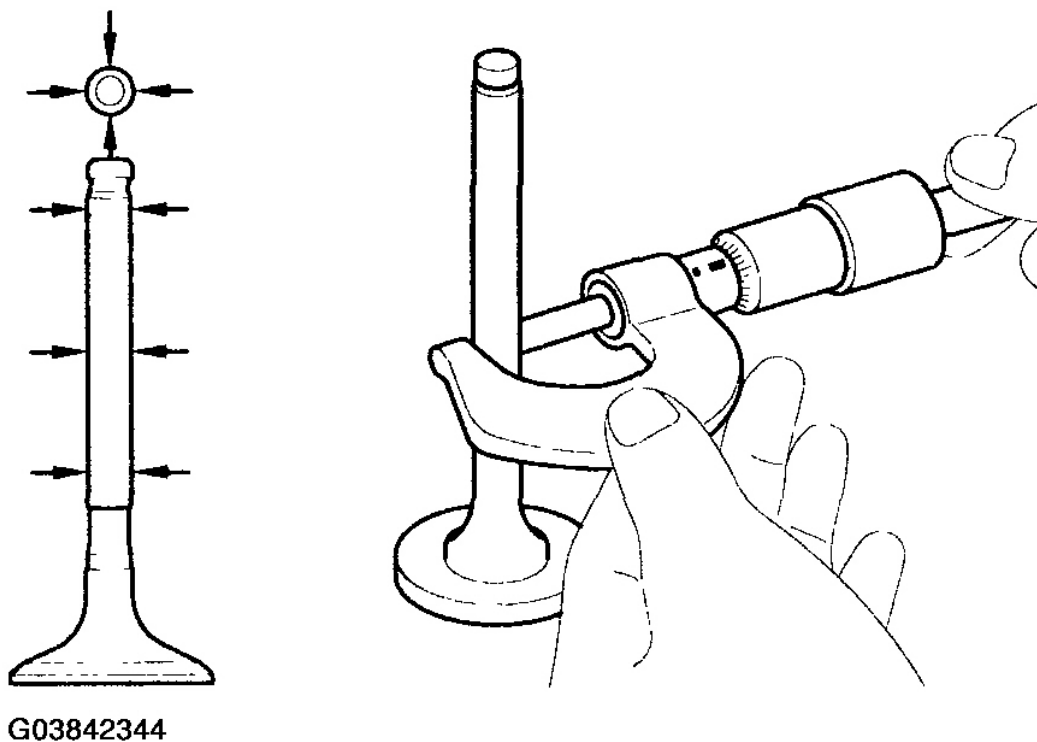


Fig. 89: Measuring Diameter Of Valve Stem
Courtesy of HYUNDAI MOTOR CO.

3. Subtract the valve stem diameter measurement from the valve guide inside diameter measurement.

Valve stem-to-guide clearance

[Standard]

Intake: 0.02 ~ 0.05 mm (0.0008 ~ 0.0020 in.)

Exhaust: 0.035 ~ 0.065 mm (0.0014 ~ 0.0026 in.)

[Limit]

Intake: 0.1 mm (0.0040 in.)

Exhaust: 0.13 mm (0.0051 in.)

If the clearance is greater than maximum, replace the valve and valve guide.

2. Inspect valves.

1. Check the valve is ground to the correct valve face angle.
2. Check that the surface of the valve for wear. If the valve face is worn, replace the valve.
3. Check the valve head margin thickness. If the margin thickness is less than minimum, replace the valve.

Margin

[Standard]


Intake: 1.15 mm (0.0453 in.)

Exhaust: 1.35 mm (0.0531 in.)

[Limit]

Intake: 0.8 mm (0.0315 in.)

Exhaust: 1.0 mm (0.040 in.)

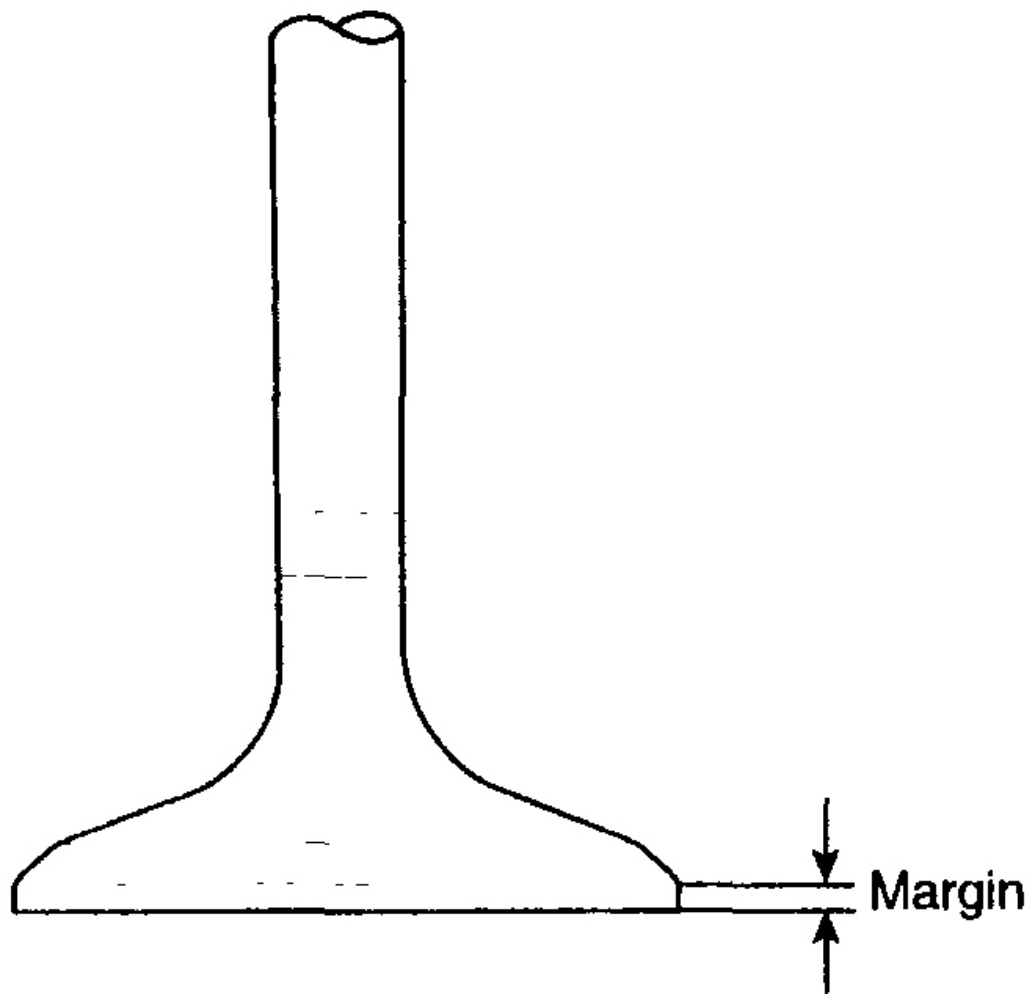

G03842345

Fig. 90: Identifying Valve Margin
Courtesy of HYUNDAI MOTOR CO.

4. Check the surface of the valve stem tip for wear. If the valve stem tip is worn, replace the valve.
3. Inspect valve seats

Check the valve seat for evidence of overheating and improper contact with the valve face.

Replace the seat if necessary.

Before reconditioning the seat, check the valve guide for wear. If the valve guide is worn, replace it, then

recondition the seat. Recondition the valve seat with a valve seat grinder or cutter. The valve seat contact width should be within specifications and centered on the valve face.

4. Inspect valve springs.
 1. Using a steel square, measure the out-of-square of the valve spring.
 2. Using a vernier calipers, measure the free length of the valve spring.

Valve spring

[Standard]


Free height: 48.86 mm (1.9236 in.)

Load: 18.3kg/39 mm (40.3lb/1.535 in.)

[Limit]

Free height: -1.0 mm(-0.0394 in.)

Out-of-square: 3°

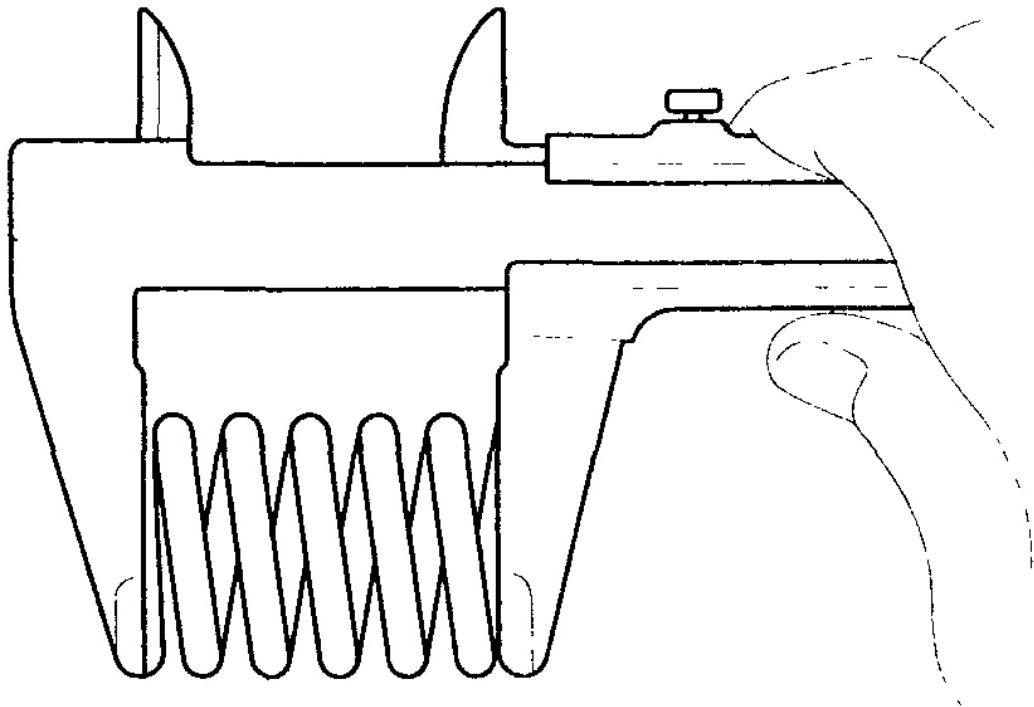

G03842346

Fig. 91: Measuring Free Length Of Valve Spring
Courtesy of HYUNDAI MOTOR CO.

If the free length is not as specified, replace the valve spring.

CAMSHAFT

1. Inspect cam lobes.

Using a micrometer, measure the cam lobe height.

Cam height

W/O CVVT

[Standard value]

Intake: 44.820 mm (1.7646 in.)

Exhaust: 44.720 mm (1.7606 in.)

[Limit]

Intake: 44.720 mm (1.7606 in.)

Exhaust: 44.620 mm (1.7567 in.)

W/CVVT

[Standard value]

Intake: 44.618 mm (1.7566 in.)

Exhaust: 44.518 mm (1.7527 in.)

[Limit]

Intake: 44.518 mm (1.7527 in.)

Exhaust: 44.418 mm (1.7487 in.)


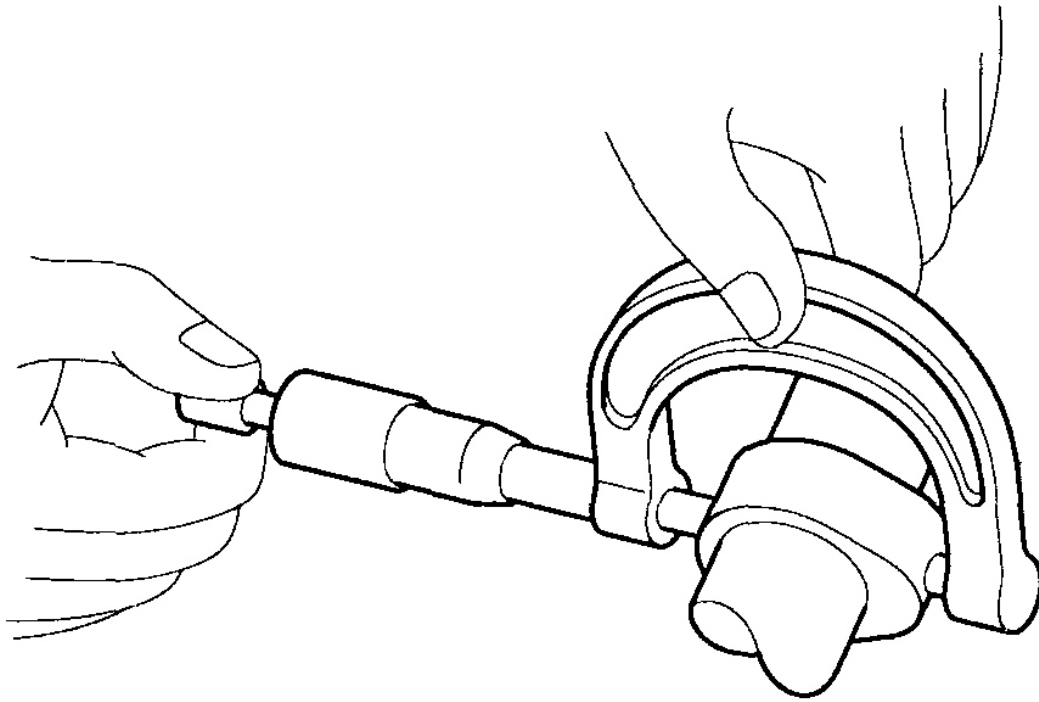
**G03842347**

Fig. 92: Measuring Cam Lobe Height
Courtesy of HYUNDAI MOTOR CO.

If the cam lobe height is less than minimum, replace the camshaft.

2. Inspect camshaft journal clearance.
 1. Clean the bearing caps and camshaft journals.
 2. Place the camshafts on the cylinder head.
 3. Lay a strip of plastigage across each of the camshaft journal.

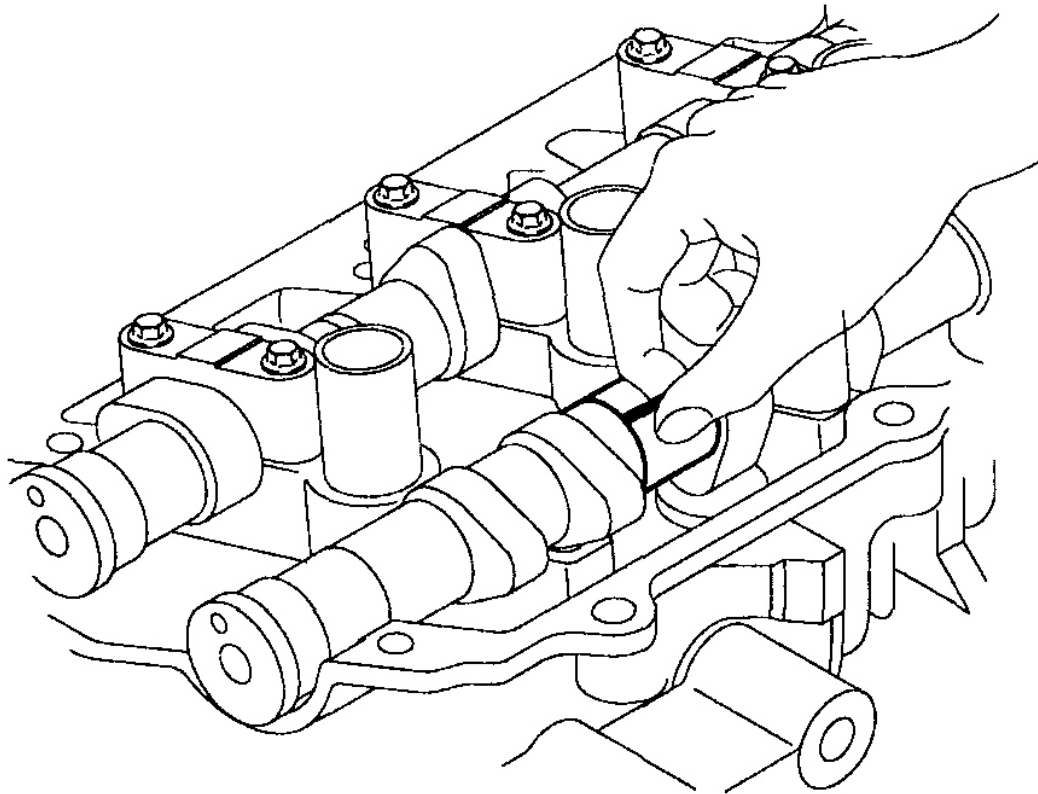

G03842348

Fig. 93: Laying Strip Of Plastigage Across Camshaft Journal
Courtesy of HYUNDAI MOTOR CO.

4. Install the bearing caps. (See 2)


CAUTION: Do not turn the camshaft.

5. Remove the bearing caps.
6. Measure the plastigage at its widest point.

Bearing oil clearance:

[Standard value]: 0.02 ~ 0.061 mm (0.0008 ~ 0.0024 in.)

[Limit]: 0.1 mm (0.0039 in.)

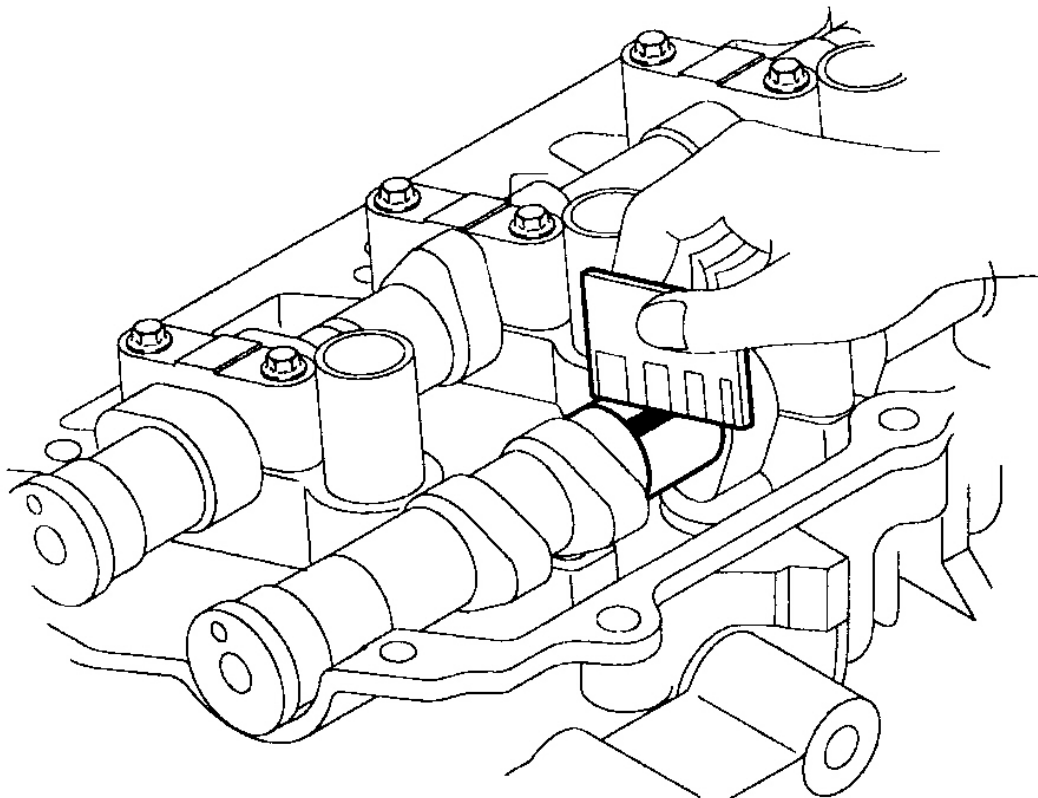

G03842349


Fig. 94: Measuring Plastigage At Its Widest Point
Courtesy of HYUNDAI MOTOR CO.

If the oil clearance is greater than maximum, replace the camshaft. If necessary, replace the bearing caps and cylinder head as a set.

7. Completely remove the plastigage.
8. Remove the camshafts.
3. Inspect camshaft end play.
 1. Install the camshafts. (See 6).
 2. Using a dial indicator, measure the end play while moving the camshaft back and forth.

Camshaft end play

[Standard value]: 0.1 ~ 0.2 mm (0.004 ~ 0.008 in.)

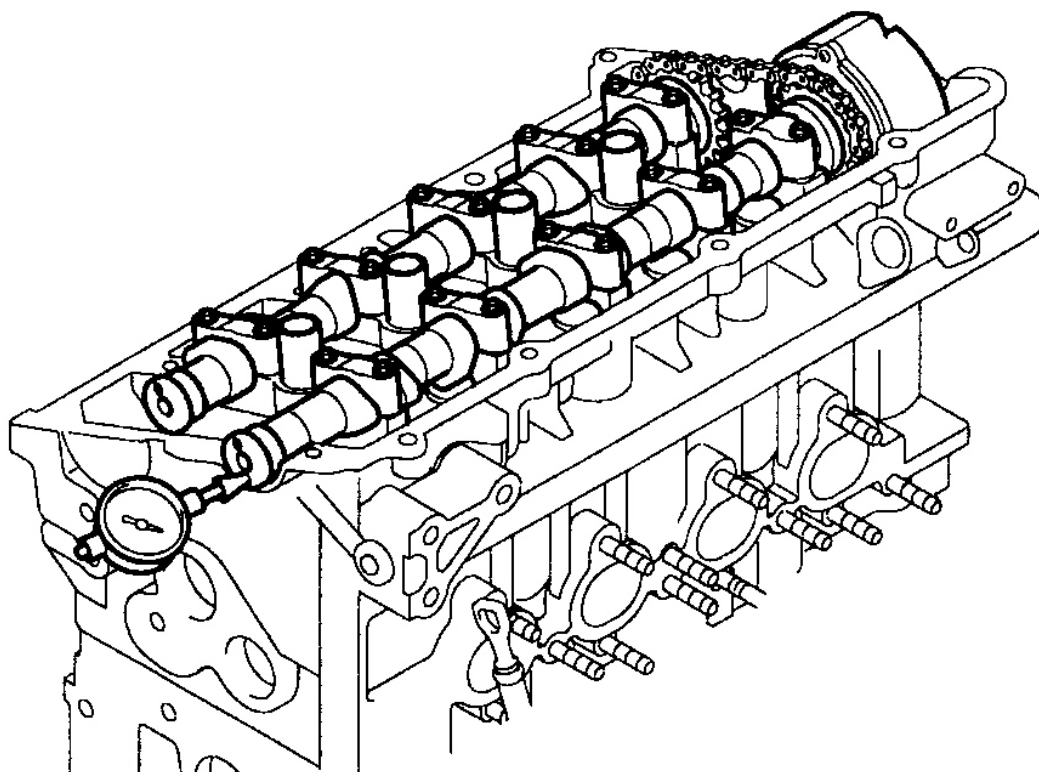

G03842350


Fig. 95: Measuring End Play While Moving Camshaft Back And Forth
Courtesy of HYUNDAI MOTOR CO.

If the end play is greater than maximum, replace the camshaft. If necessary, replace the bearing caps and cylinder head as a set.

3. Remove the camshafts.

CVVT ASSEMBLY

1. Inspect CVVT assembly.
 1. Check that the CVVT assembly will not turn.
 2. Apply vinyl tape to all the parts except the one indicated by the arrow in the illustration.

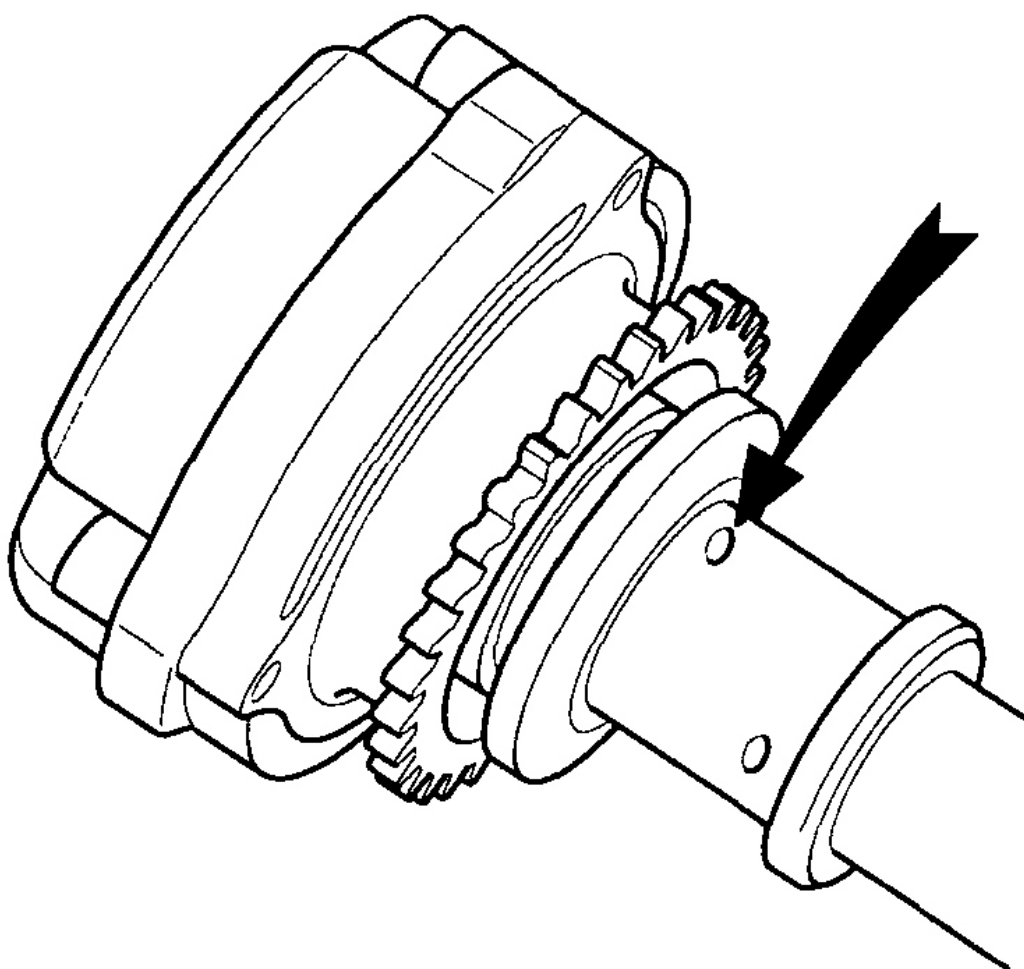

G03842351

Fig. 96: Inspecting CVVT Assembly
Courtesy of HYUNDAI MOTOR CO.

3. Wind tape around the tip of the air gun and apply air of approx. 100 kpa (1kgf/cm² , 14 psi) to the port of the camshaft.

(Perform this order to release the lock pin for the maximum delay angle locking.)

NOTE: When the oil splashes, wipe it off with a shop rag and the likes.

4. Under the condition of (3), turn the CVVT assembly to the advance angle side (the arrow marked direction in the illustration) with your hand. Depending on the air pressure, the CVVT assembly will turn to the advance side without applying force by hand. Also, under the condition that the

pressure can be hardly applied because of the air leakage from the port, there may be the case that the lock pin could be hardly released.

5. Except the position where the lock pin meets at the maximum delay angle, let the CVVT assembly turn back and forth and check the movable range and that there is no disturbance.


Standard: Movable smoothly in the range about 20°

6. Turn the CVVT assembly with your hand and lock it at the maximum delay angle position.

REPLACEMENT

VALVE GUIDE

1. Using the SST(09221-3F100A), withdraw the old valve guide toward the bottom of cylinder head.

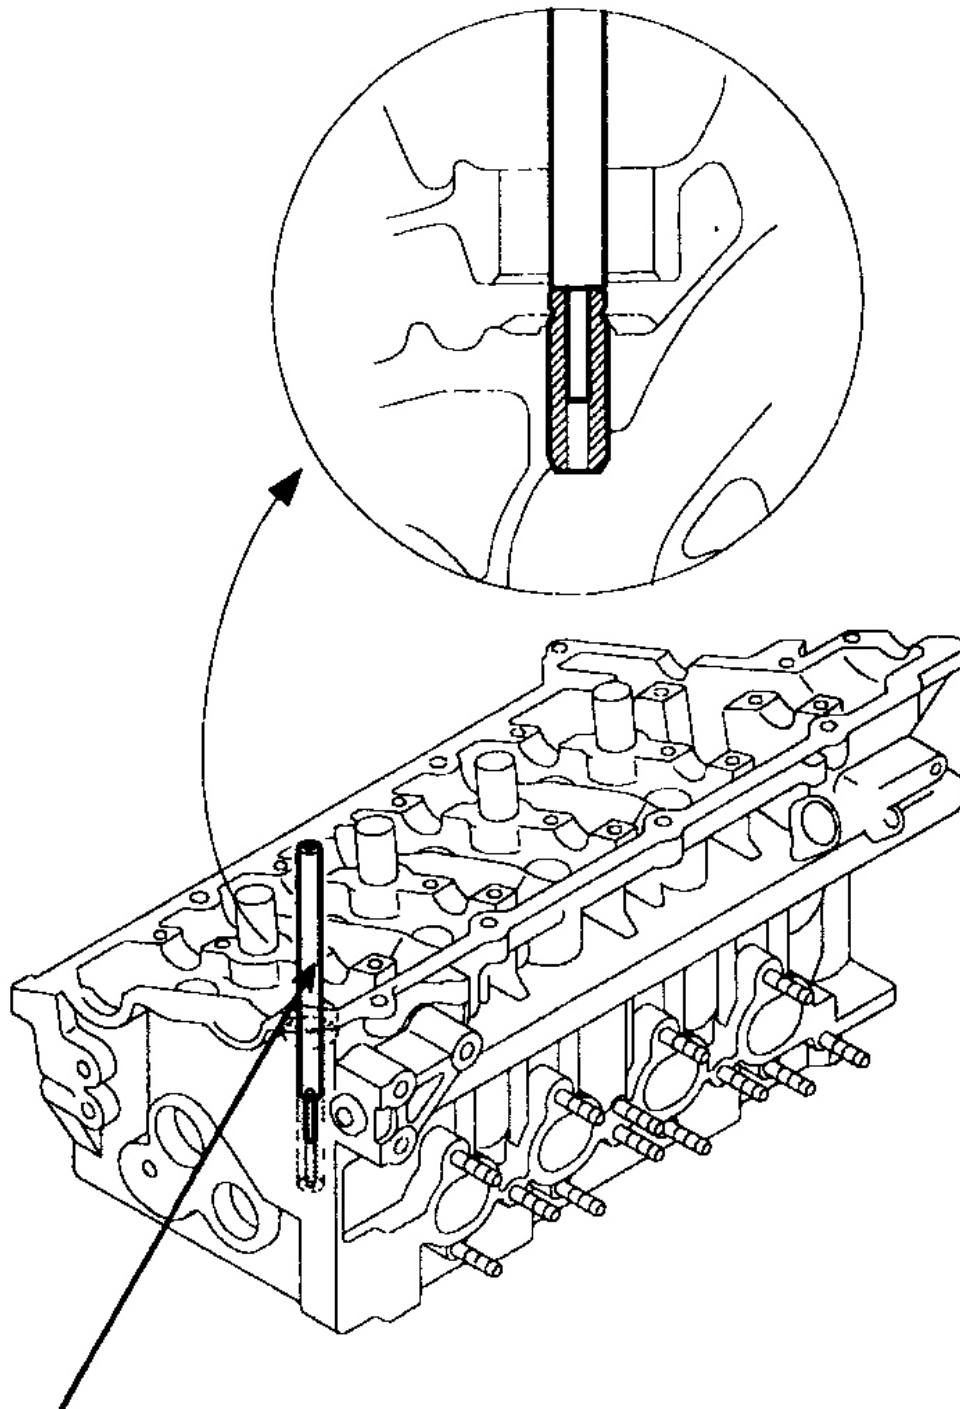

09221-3F100A

G03842352

Fig. 97: Withdrawing Old Valve Guide Using SST
Courtesy of HYUNDAI MOTOR CO.

2. Recondition the valve guide hole so that it can match the newly press-fitted oversize valve guide.
3. Using the SST(09221-3F100 A/B), press-fit the valve guide. The valve guide must be press-fitted from the upper side of the cylinder head. Keep in mind that the intake and exhaust valve guides are different in length.


VALVE SPECIFICATION

Over size mm (in.)	Size mark	Oversize valve guide hole size mm (in.)
0.05 (0.002)	5	11.05 ~ 11.068 (0.4350 ~ 0.4357)
0.25(0.010)	25	11.25 ~ 11.268 (0.4429 ~ 0.4436)
0.50 (0.020)	50	11.50~ 11.518 (0.4528 ~ 0.4535)

Valve guide length

Intake: 46 mm (1.8in.)

Exhaust: 54.5 mm (2.1 5in.)

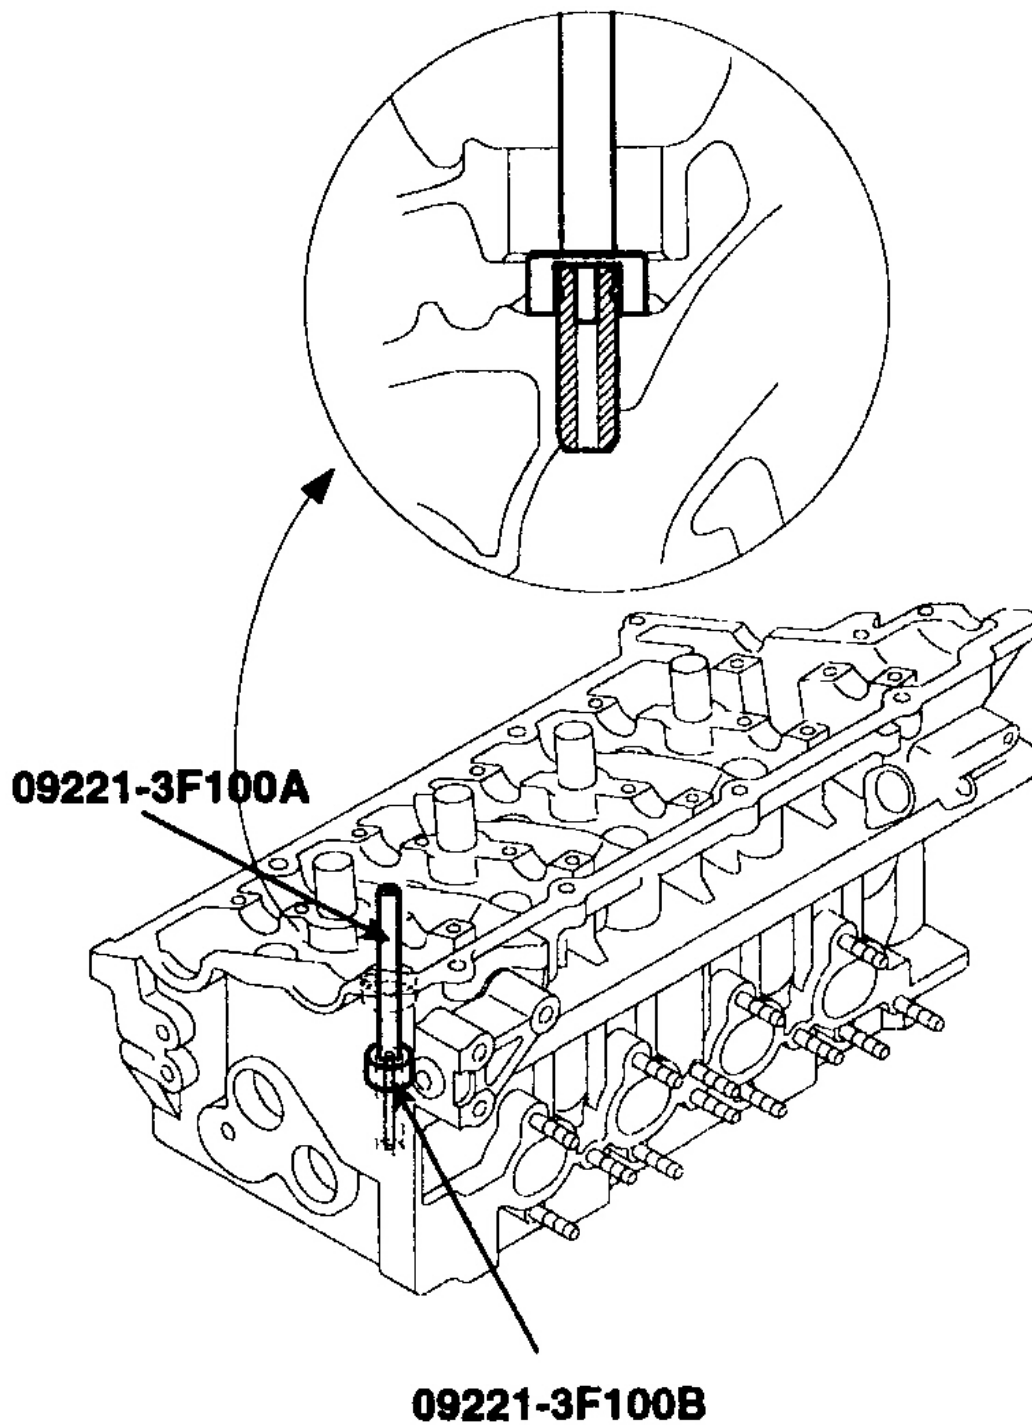

G03842353

Fig. 98: Press-Fitting Valve Guide

Courtesy of **HYUNDAI MOTOR CO.**


4. After the valve guide is press-fitted, insert a new valve and check for proper stem-to-guide clearance.
5. After the valve guide is replaced, check that the valve is seated properly. Recondition the valve seats as necessary.

REASSEMBLY

NOTE: Thoroughly clean all parts to be assembled. Before installing the parts, apply fresh engine oil to all sliding and rotating surfaces. Replace oil seals with new ones.

1. Install valves.
 1. Install the spring seats.
 2. Using SST (09222-22001), push in a new oil seal.

NOTE: Do not reuse old valve stem seals. Incorrect installation of the seal could result in oil leakage past the valve guides.

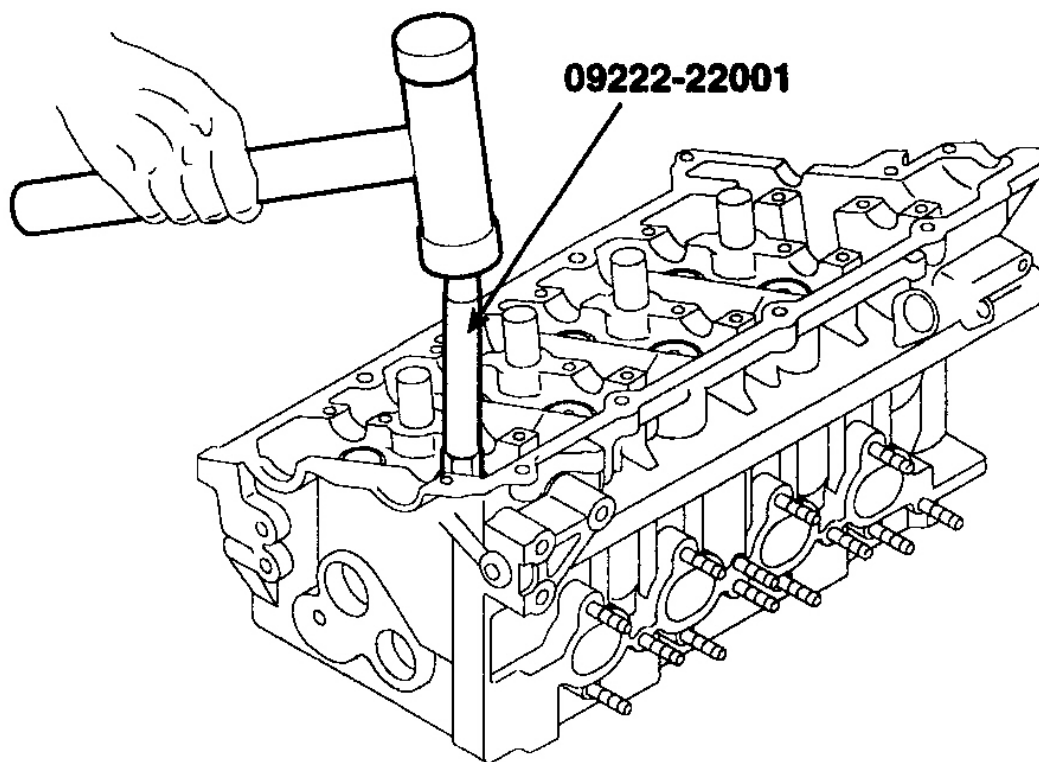

G03842354


Fig. 99: Installing Valve

Courtesy of HYUNDAI MOTOR CO.

3. Install the valve, valve spring and spring retainer.


NOTE: Place valve springs so that the side coated with enamel faces toward the valve spring retainer and then installs the retainer.

4. Using the SST (09222-28000, 09222-28100), compress the spring and install the retainer locks. After installing the valves, ensure that the retainer locks are correctly in place before releasing the valve spring compressor.

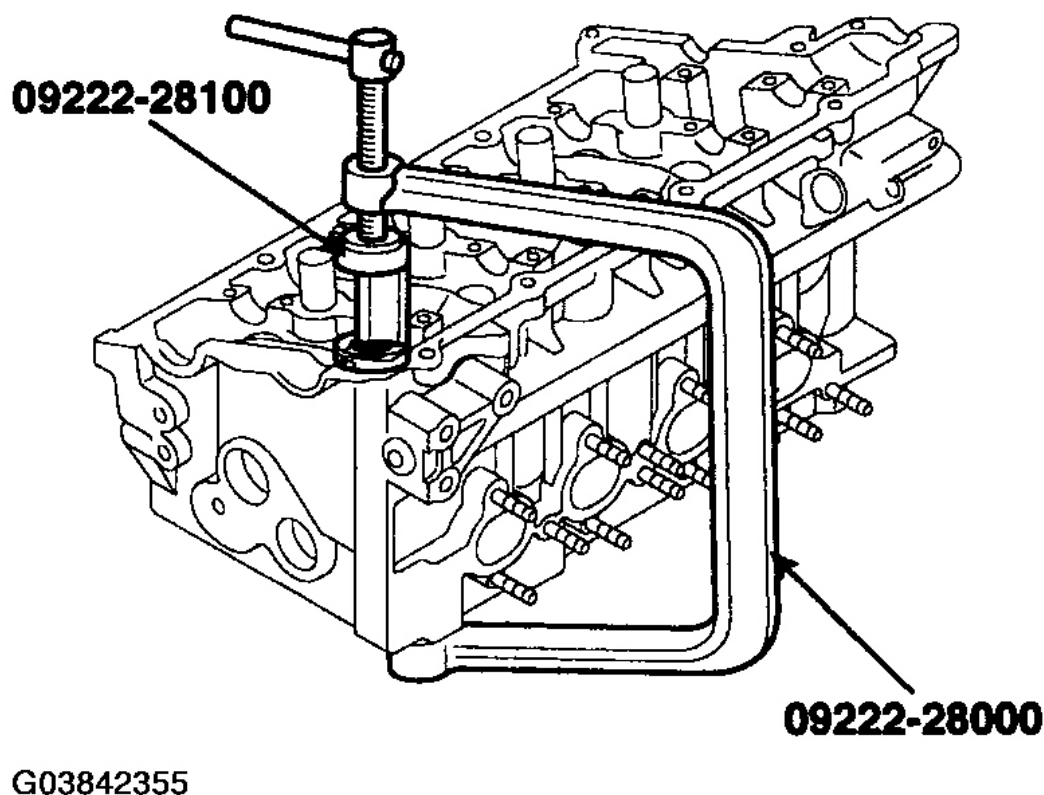**Fig. 100: Installing Retainer Locks Using SST**

Courtesy of HYUNDAI MOTOR CO.

5. Lightly tap the end of each valve stem two or three times with the wooden handle of a hammer to ensure proper seating of the valve and retainer lock.

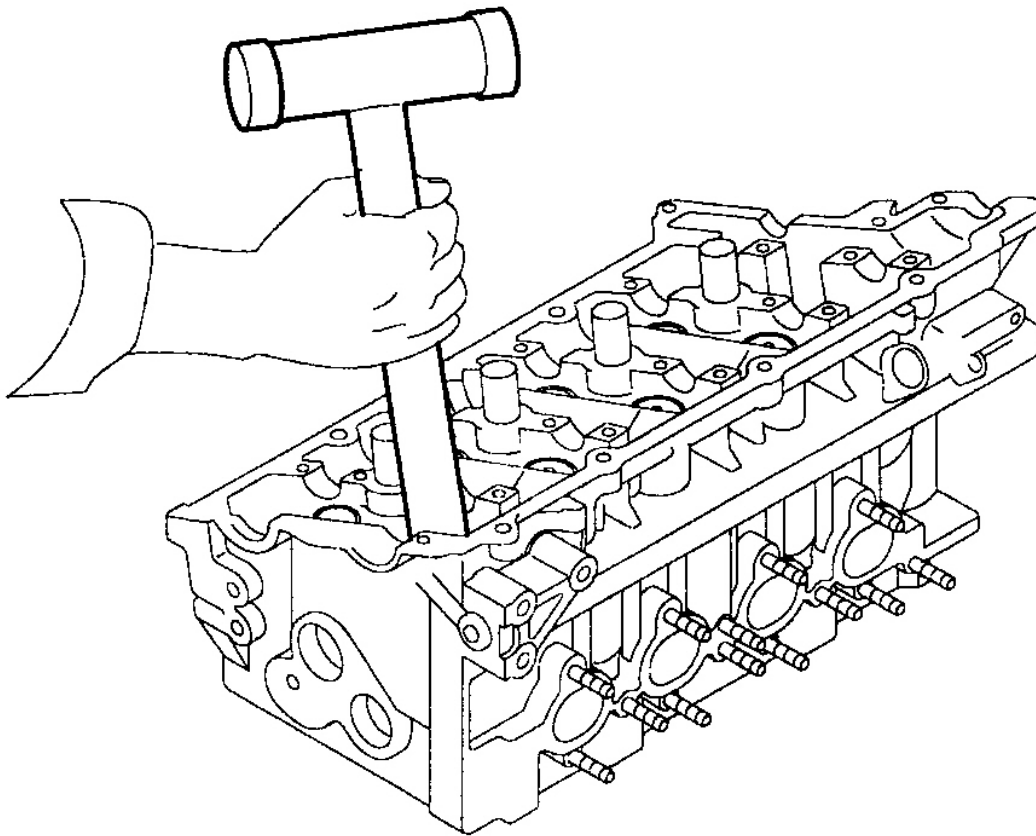


G03842356

Fig. 101: Taping End Of Each Valve Stem
Courtesy of HYUNDAI MOTOR CO.

2. Install MLAs.

Check that the MLA rotates smoothly by hand.

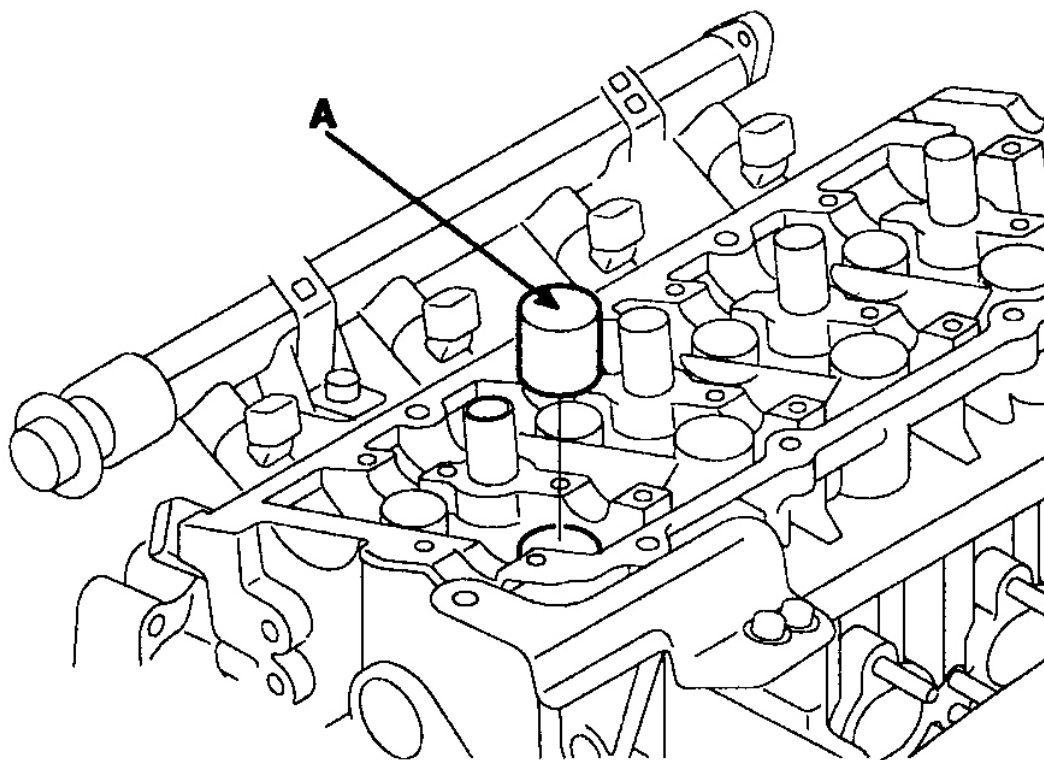

G03842357


Fig. 102: Identifying MLAs
Courtesy of HYUNDAI MOTOR CO.

INSTALLATION

NOTE:

- Thoroughly clean all parts to be assembled.
- Always use a new head and manifold gasket.
- The cylinder head gasket is a metal gasket. Take care not to bend it.
- Rotate the crankshaft, set the No. 1 piston at TDC. (See 4).

1. Install the cylinder head gasket (A) on the cylinder block.

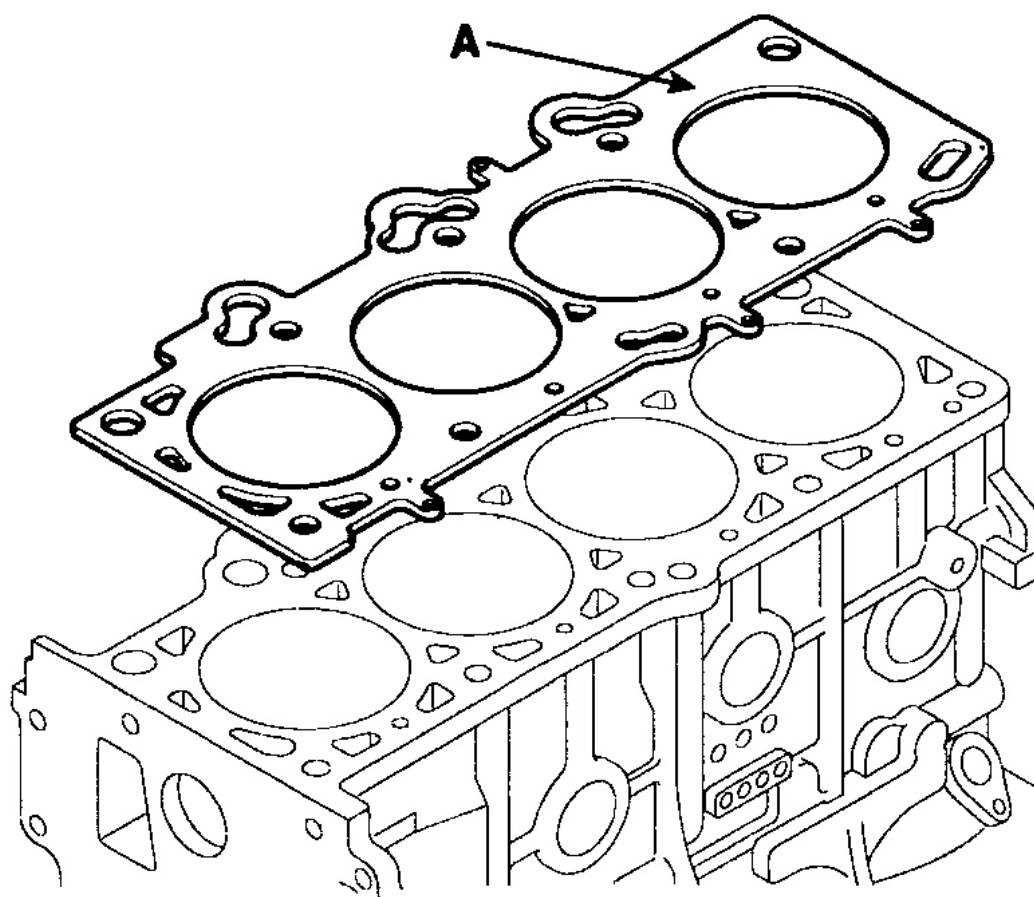

G03842358

Fig. 103: Installing Cylinder Head Gasket
Courtesy of HYUNDAI MOTOR CO.

NOTE: Be careful of the installation direction.

2. Place the cylinder head quietly in order not to damage the gasket with the bottom part of the end.
3. Install cylinder head bolts.
 1. Apply a light coat of engine oil on the threads and under the heads of the cylinder head bolts.
 2. Using 8 mm and 10 mm hexagon wrench, install and tighten the 10 cylinder head bolts and plate washers, in several passes, in the sequence shown in **Fig. 104**.

Tightening torque

M10:

25Nm (250kgf.cm, 18lbf.ft) + (60° ~ 65°) + (60° ~ 65°)

M12:

30Nm (300kgf.cm, 22lbf.ft) + (60° ~ 65°) + (60° ~ 65°)


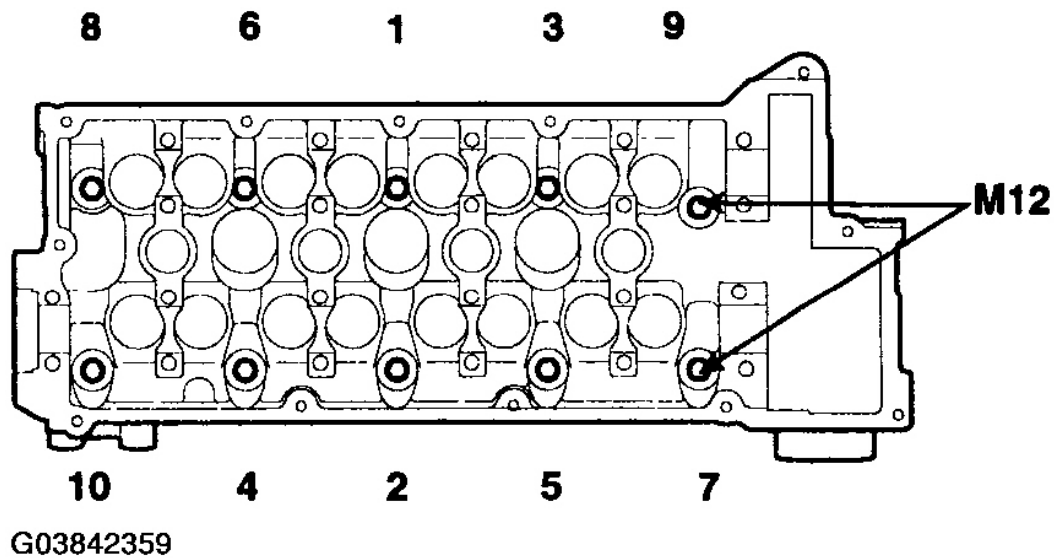


Fig. 104: Identifying Cylinder Head Bolts Tightening Sequence
Courtesy of HYUNDAI MOTOR CO.

4. Install OCV filter (A).

Tightening torque

41 ~ 51 Nm (410 ~ 510kgf.cm, 30 ~ 37.6lbf.ft)

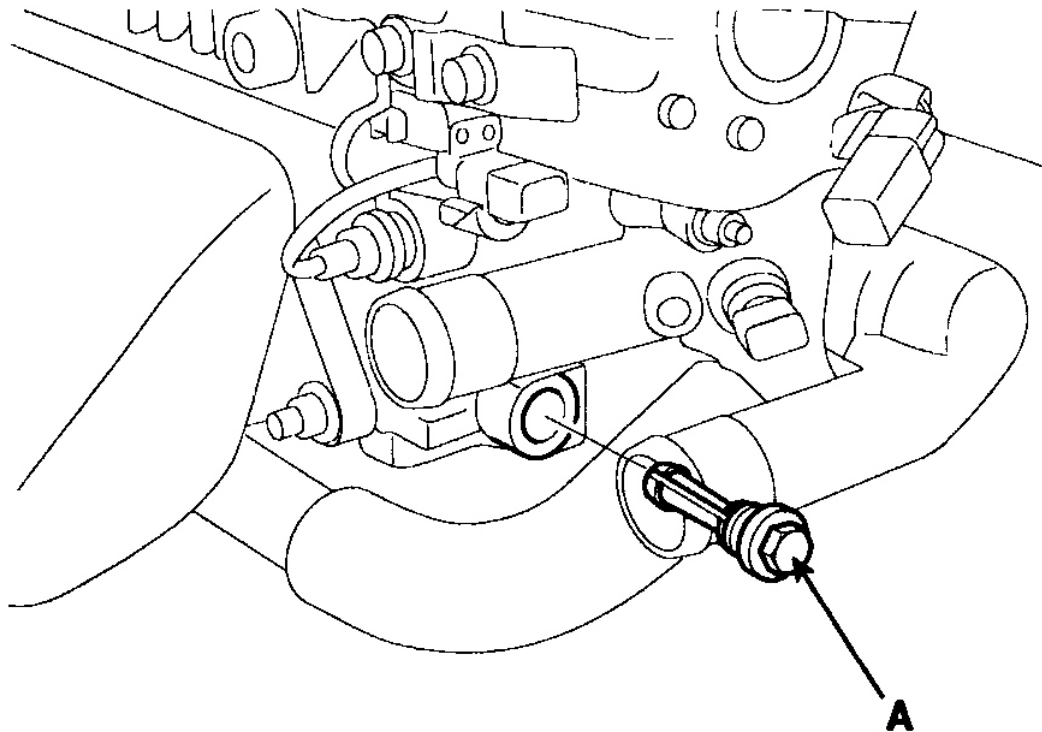

G03842360


Fig. 105: Installing OCV Filter
Courtesy of HYUNDAI MOTOR CO.

NOTE: Always use a new OCV filter gasket. Keep clean the OCV filter.

5. Install OCV. (A)

Tightening torque

10 ~ 12Nm (100 ~ 120kgf.cm, 7.3 ~ 8.8lbf.ft)

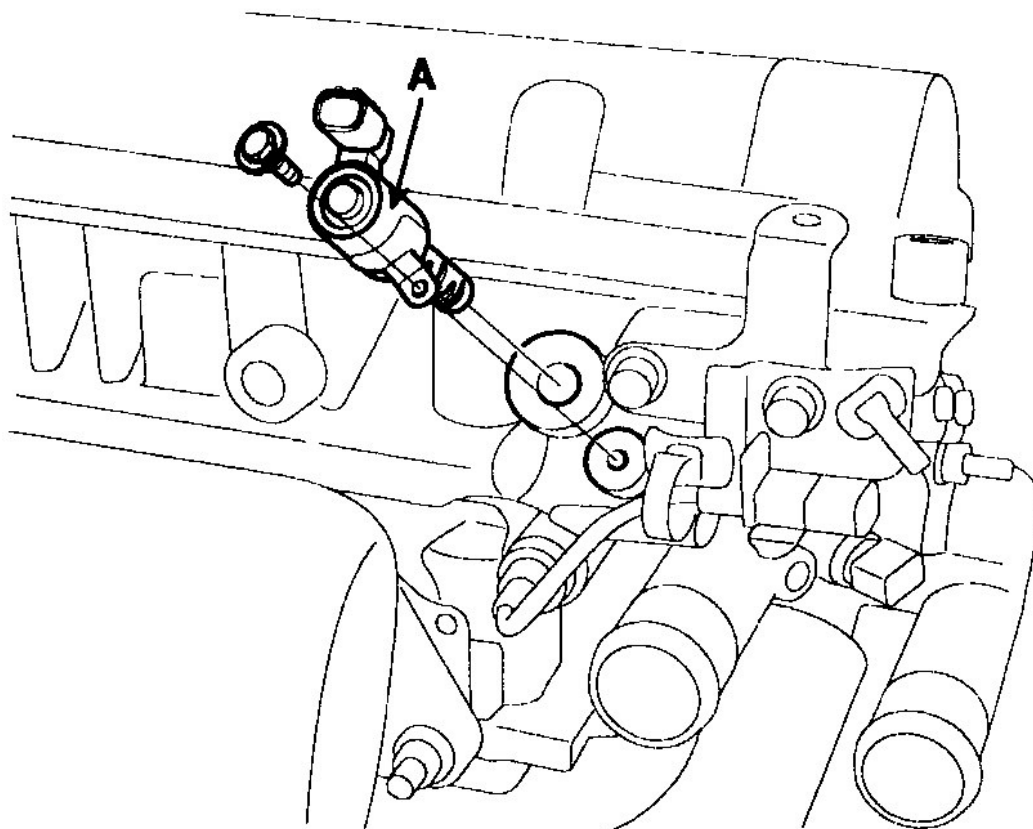

G03842361

Fig. 106: Installing OCV


Courtesy of HYUNDAI MOTOR CO.

CAUTION:

- Do not reuse the OCV when dropped.
- Keep clean the OCV.
- Do not hold the OCV sleeve during servicing.
- When the OCV is installed on the engine, do not move the engine with holding the OCV yoke.

6. Install the camshafts.

1. Align the camshaft timing chain with the intake timing chain sprocket and exhaust timing chain sprocket as shown in **Fig. 107**.

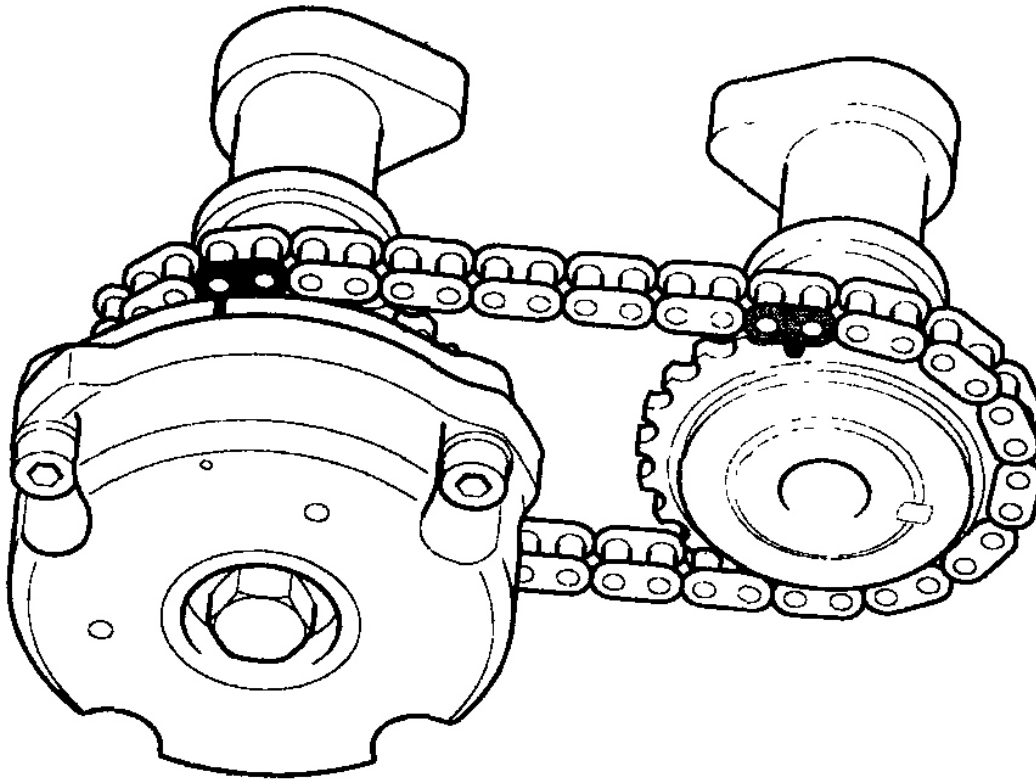


G03842362

Fig. 107: Aligning Camshaft Timing Chain
Courtesy of HYUNDAI MOTOR CO.

2. Install the camshafts (A) and bearing caps (B).

Tightening torque

14 ~ 15Nm (140 ~ 150kgf.cm, 10 ~ 11lbf.ft)

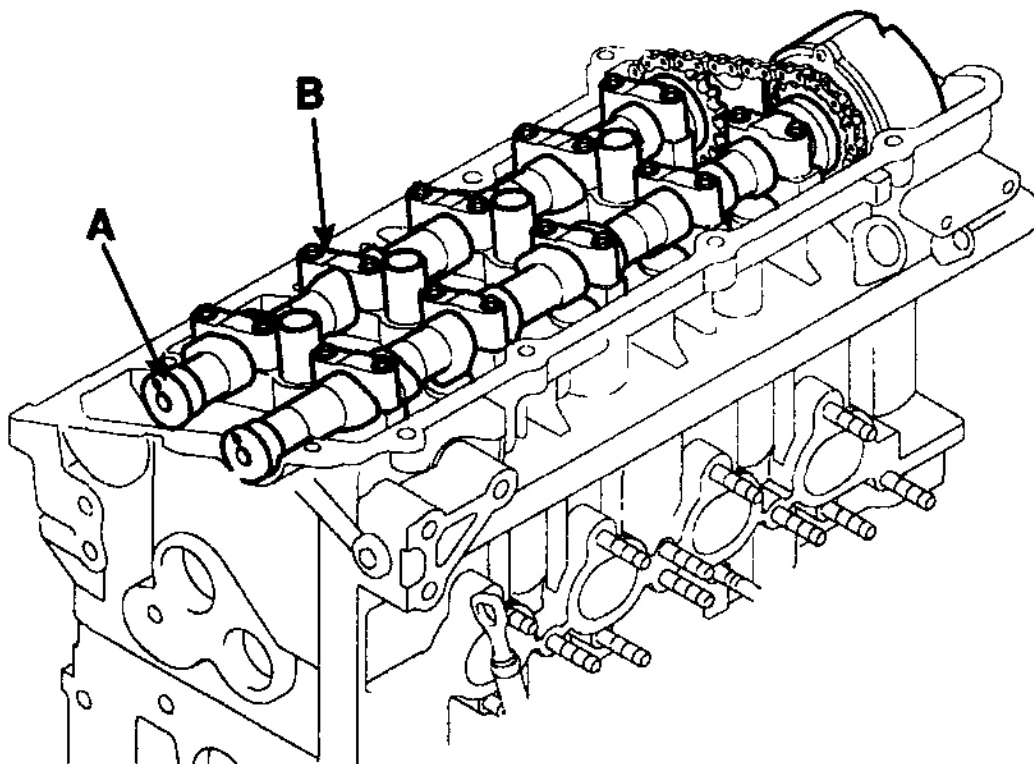


G03842363

Fig. 108: Installing Camshafts And Bearing Caps
Courtesy of HYUNDAI MOTOR CO.

3. Install the timing chain auto tensioner (A).

Tightening torque

8 ~ 10Nm (80 ~ 100kgf.cm, 6 ~ 7.4lbf.ft)

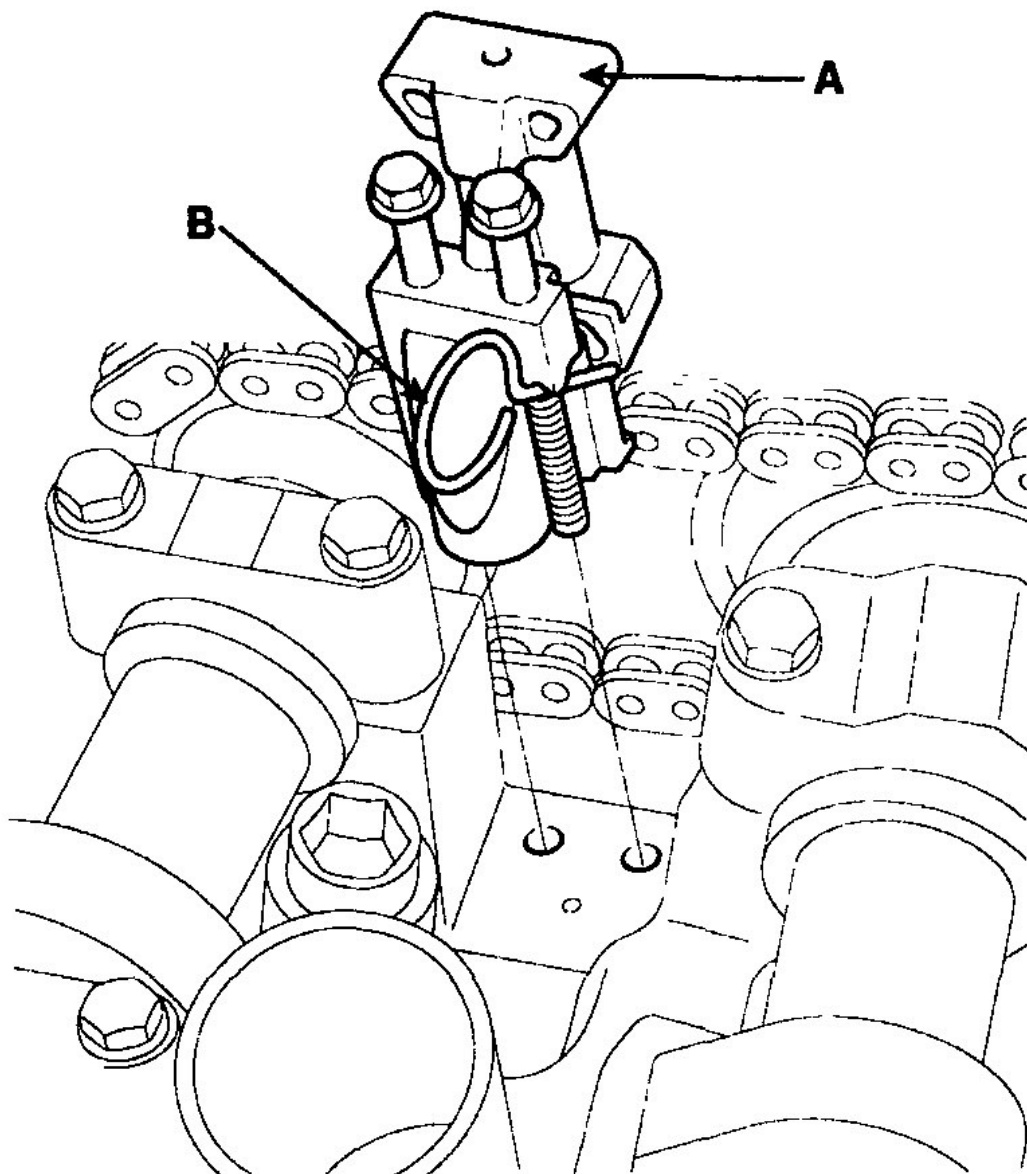

G03842364

Fig. 109: Installing Timing Chain Auto Tensioner
Courtesy of HYUNDAI MOTOR CO.

4. Remove the auto tensioner stopper pin (B).
7. Check and adjust valve clearance. (See **VALVE CLEARANCE INSPECTION AND ADJUSTMENT**).
8. Using the SST (09221-21000), install the camshaft bearing oil seal.


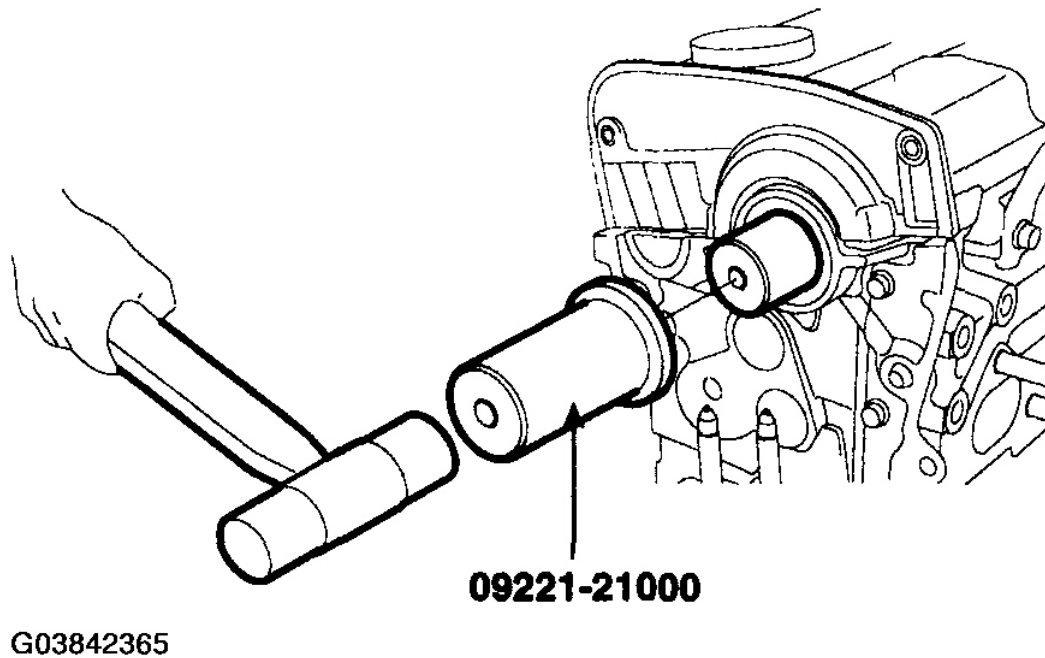


Fig. 110: Installing Camshaft Bearing Oil Seal Using SST
Courtesy of HYUNDAI MOTOR CO.

9. Install the camshaft sprocket. (See **INSTALLATION**).
10. Install the timing belt. (See **INSTALLATION**).
11. Install the cylinder head cover.
 1. Install the cylinder head cover gasket (A) in the groove of the cylinder head cover (B).

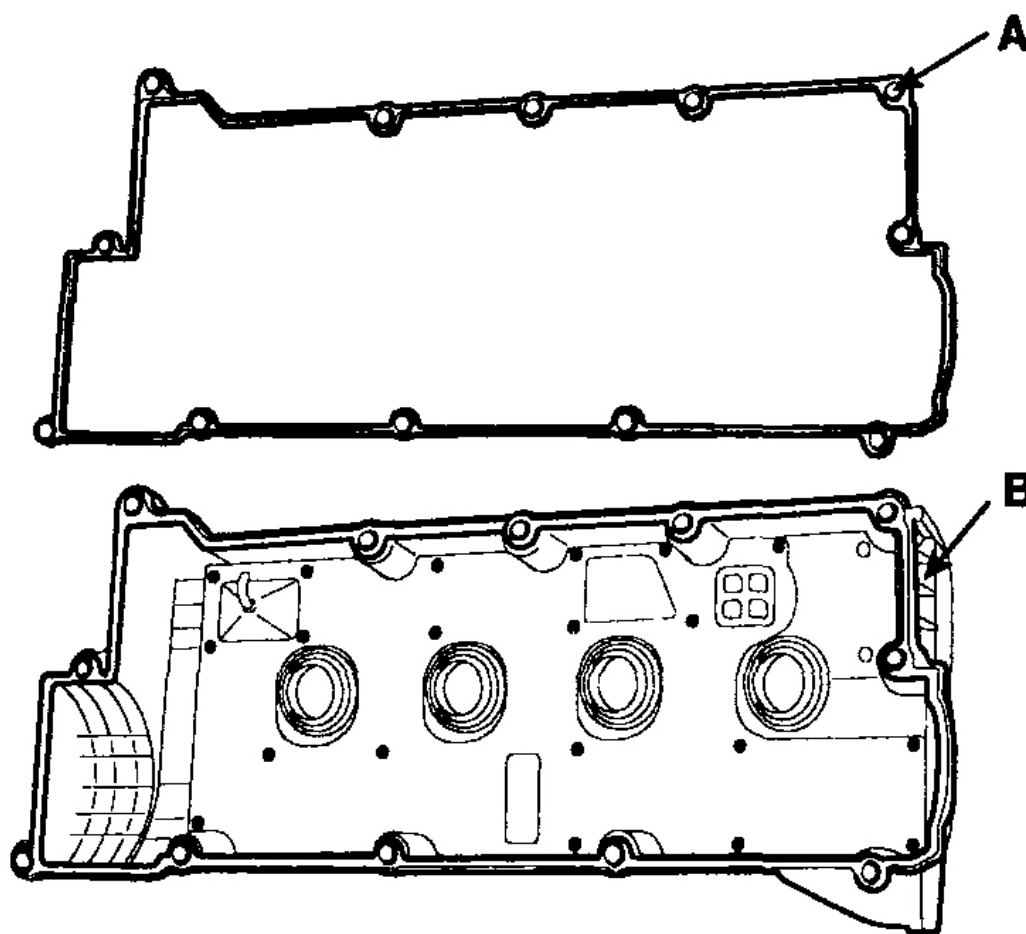


G03842366

Fig. 111: Installing Cylinder Head Cover Gasket
Courtesy of HYUNDAI MOTOR CO.

NOTE:

- Before installing the head cover gasket, thoroughly clean the head cover gasket and the groove.
- When installing, make sure the head cover gasket is seated securely in the corners of the recesses with no gap.

2. Apply liquid gasket to the head cover gasket at the corners of the recess.

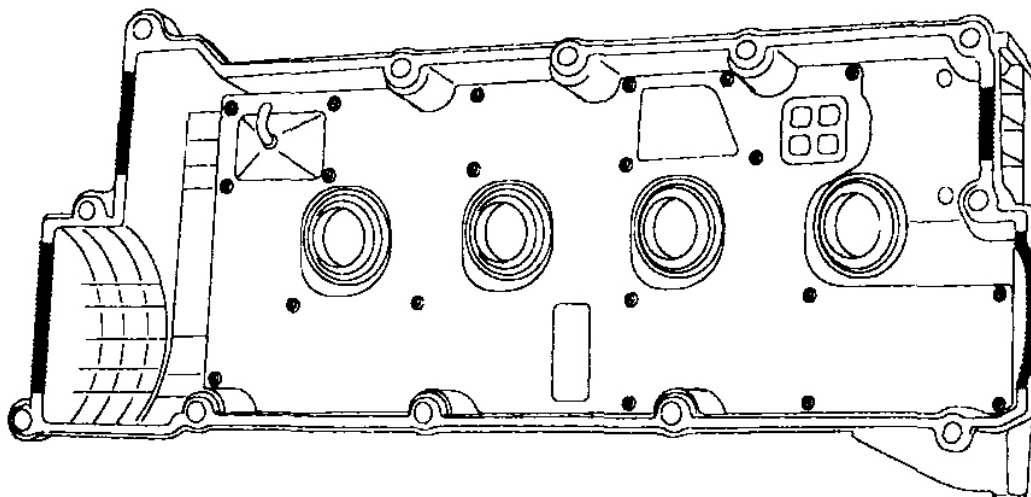

G03842367

Fig. 112: Applying Liquid Gasket To Head Cover Gasket
Courtesy of HYUNDAI MOTOR CO.


NOTE:

- Use liquid gasket, loctite No. 5999.
- Check that the mating surfaces are clean and dry before applying liquid gasket
- After assembly, wait at least 30 minutes before filling the engine with oil.

3. Install the cylinder head cover (A) with the 12 bolts (B). Uniformly tighten the bolts in several passes.

Tightening torque

8 ~ 10Nm (80 ~ 100kgf.cm, 6 ~ 7.4 lbf.ft)

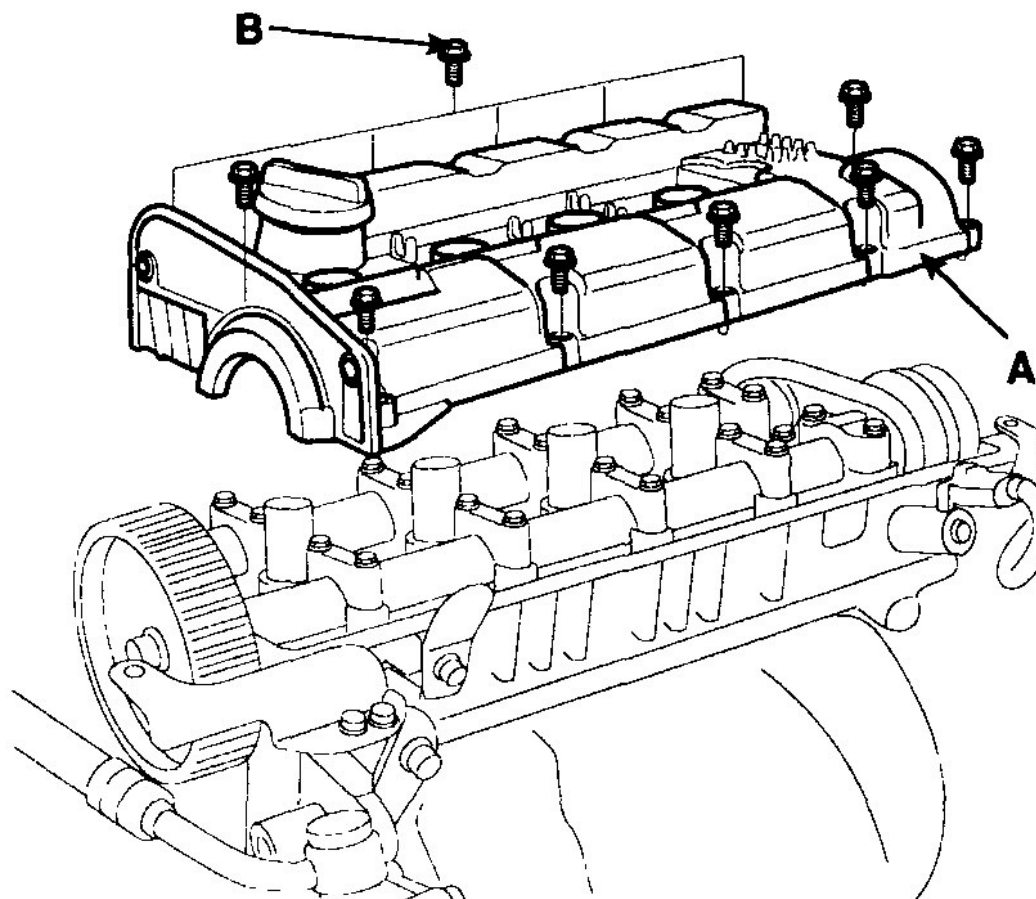

G03842368

Fig. 113: Installing Cylinder Head Cover
Courtesy of HYUNDAI MOTOR CO.

12. Install the intake manifold. (See INTAKE AND EXHAUST SYSTEM).
13. Install the exhaust manifold. (See EXHAUST MANIFOLD)
14. Install the PCV. (See INSTALLATION)
15. Install the spark plug cable. (See REPLACEMENT)
16. Install the power steering pump bracket bolts (A).

Tightening torque

35 ~ 50Nm (350 ~ 500kgf.cm, 26 ~ 37lbf.ft)


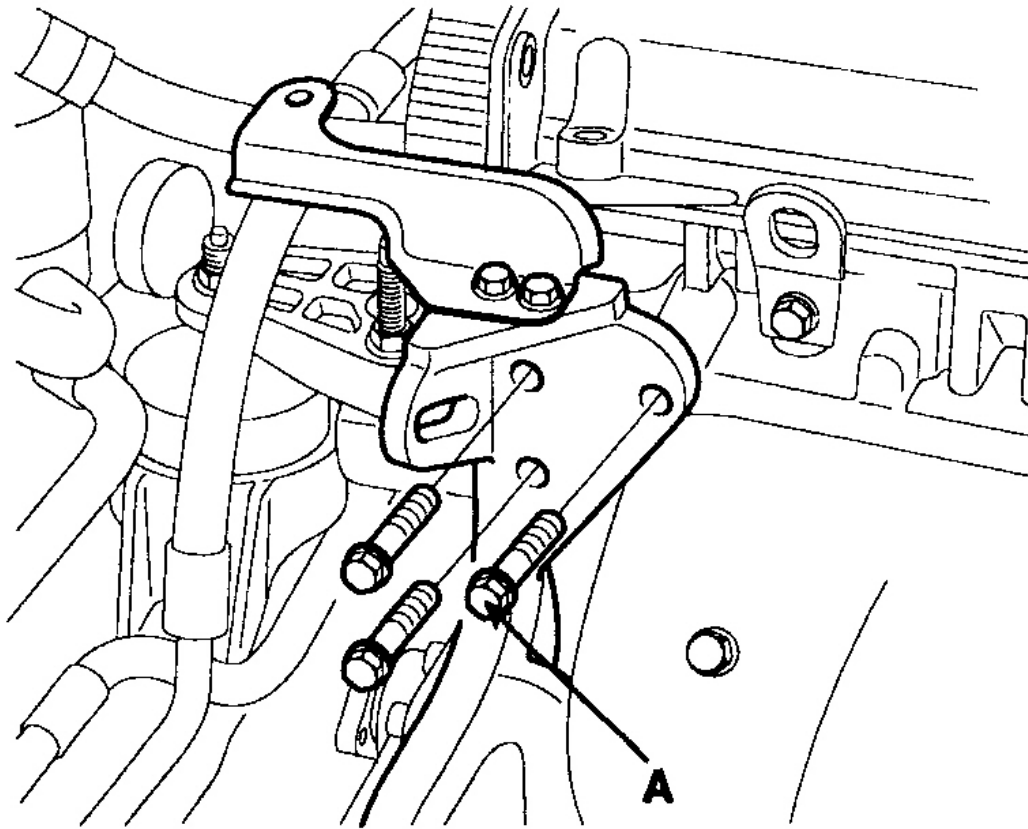
**G03842369**

Fig. 114: Installing Power Steering Pump Bracket Bolts
Courtesy of HYUNDAI MOTOR CO.

17. Install the power steering pump. (See **INSTALLATION**)
18. Install the accelerator cable.
19. Install the brake booster hose.
20. Install the PCSV hose (A).

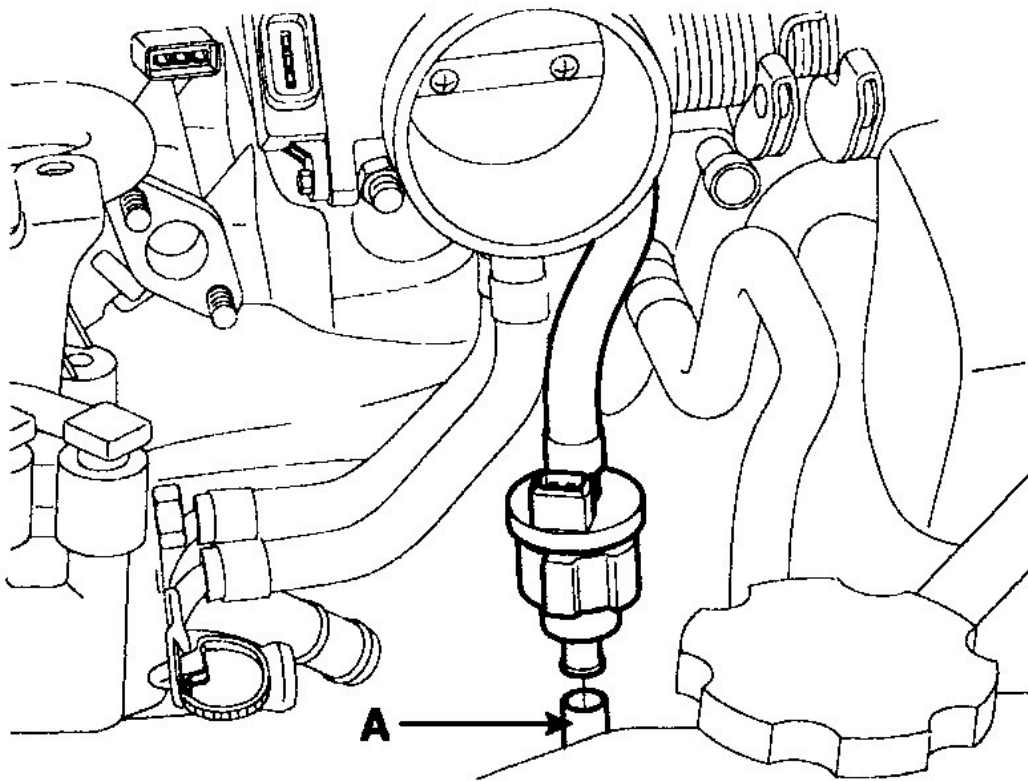

G03842370

Fig. 115: Installing PCSV Hose
Courtesy of HYUNDAI MOTOR CO.

21. Install the fuel inlet hose (A).


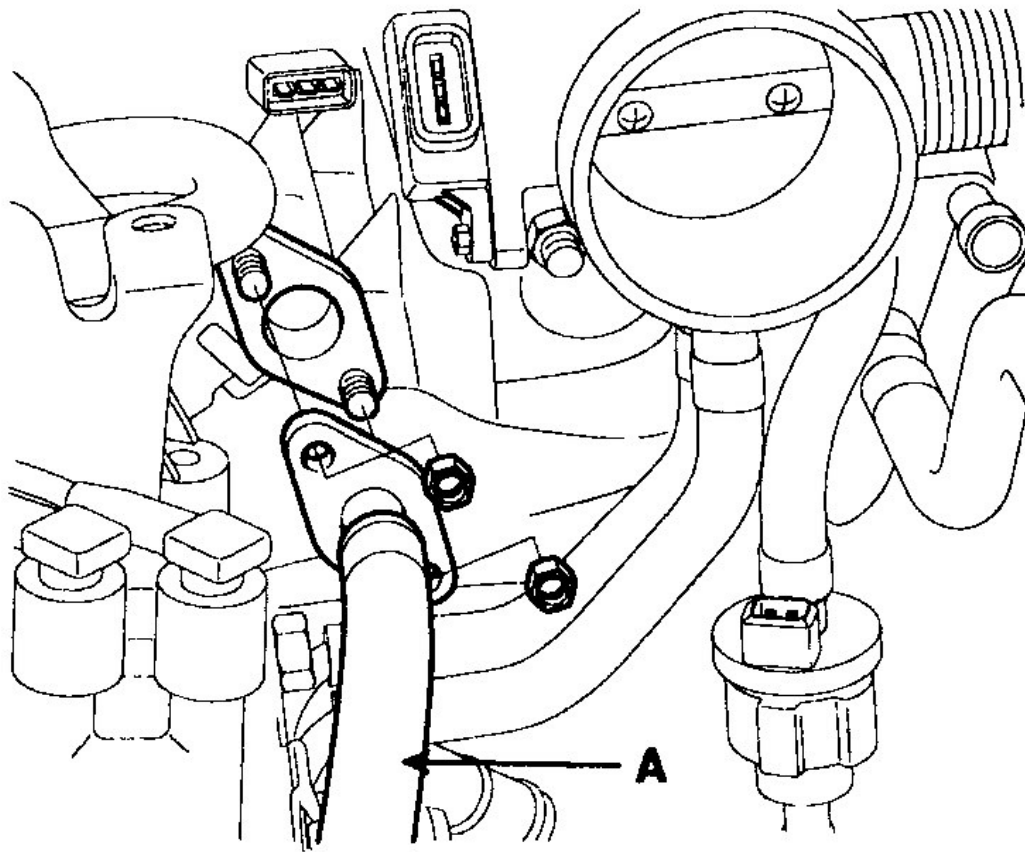


Fig. 116: Installing Fuel Inlet Hose
Courtesy of HYUNDAI MOTOR CO.


- viernes, 19 de febrero de 2021 10:52:08 p. m.

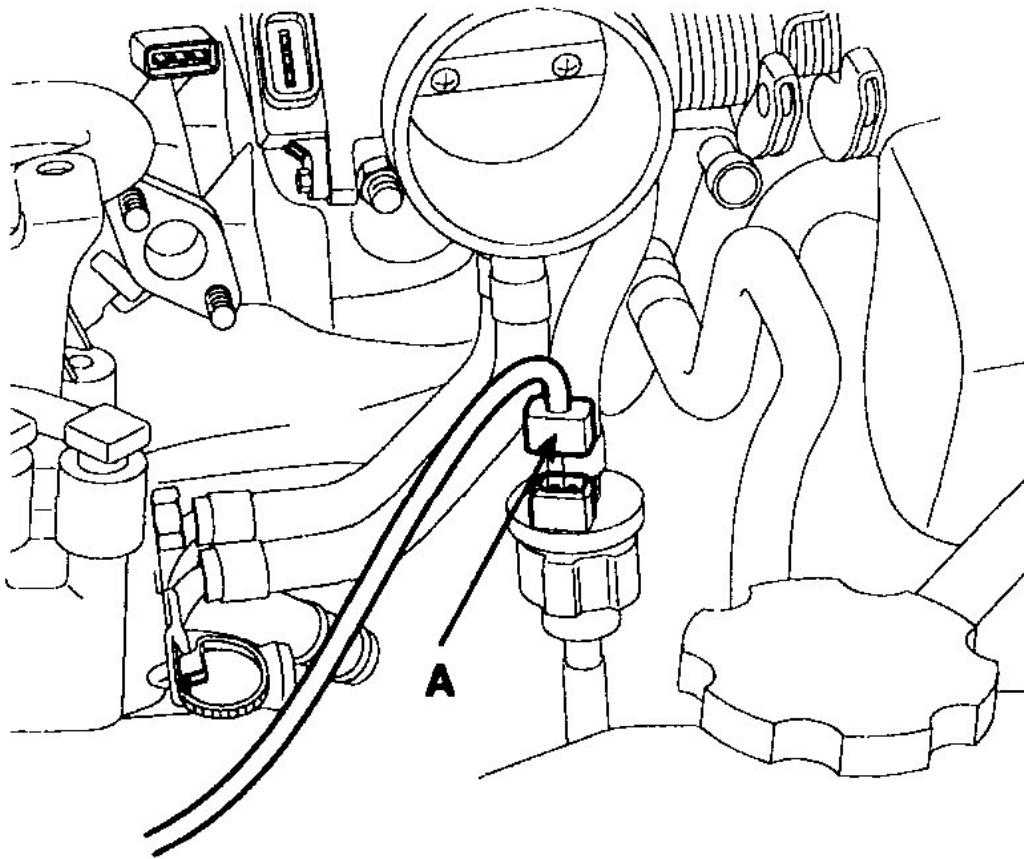

G03842372

Fig. 117: Installing Engine Wire Harness Connectors
Courtesy of HYUNDAI MOTOR CO.


2. Front heated oxygen sensor connector (A).

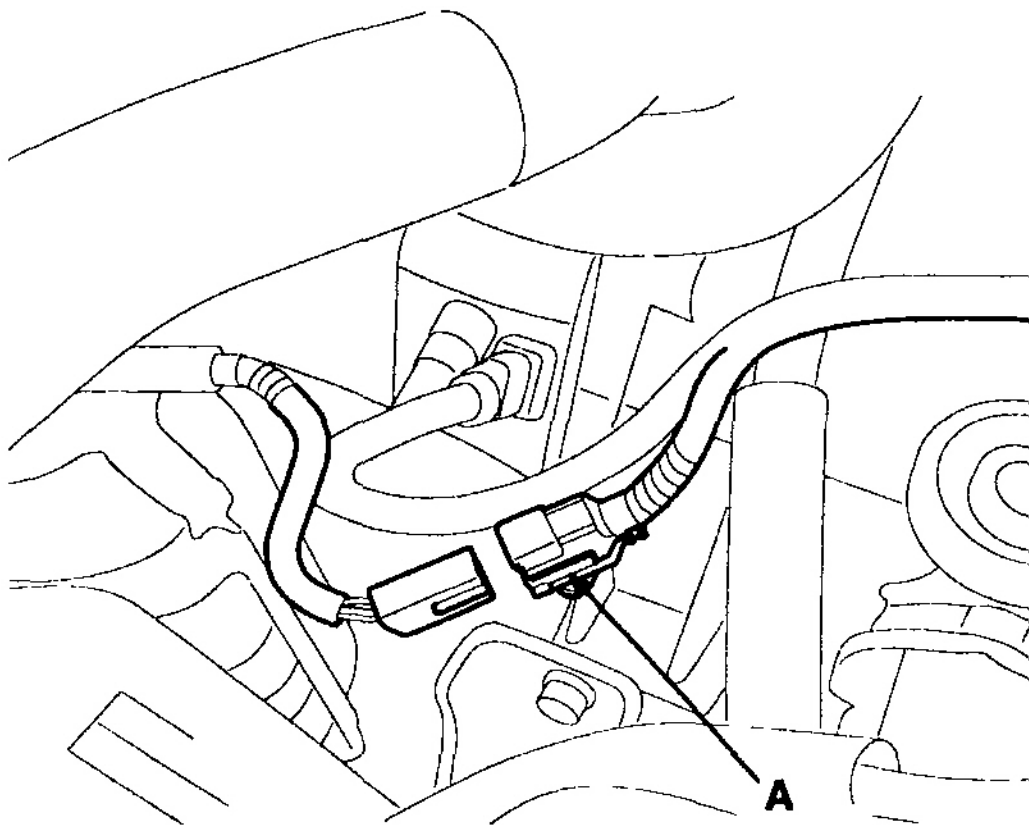

G03842373

Fig. 118: Identifying Front Heated Oxygen Sensor Connector
Courtesy of HYUNDAI MOTOR CO.


3. Connect the ground cable to the intake manifold (D).
4. Knock sensor connector (C).
5. Four fuel injector connectors (B).
6. CMP connector (A).

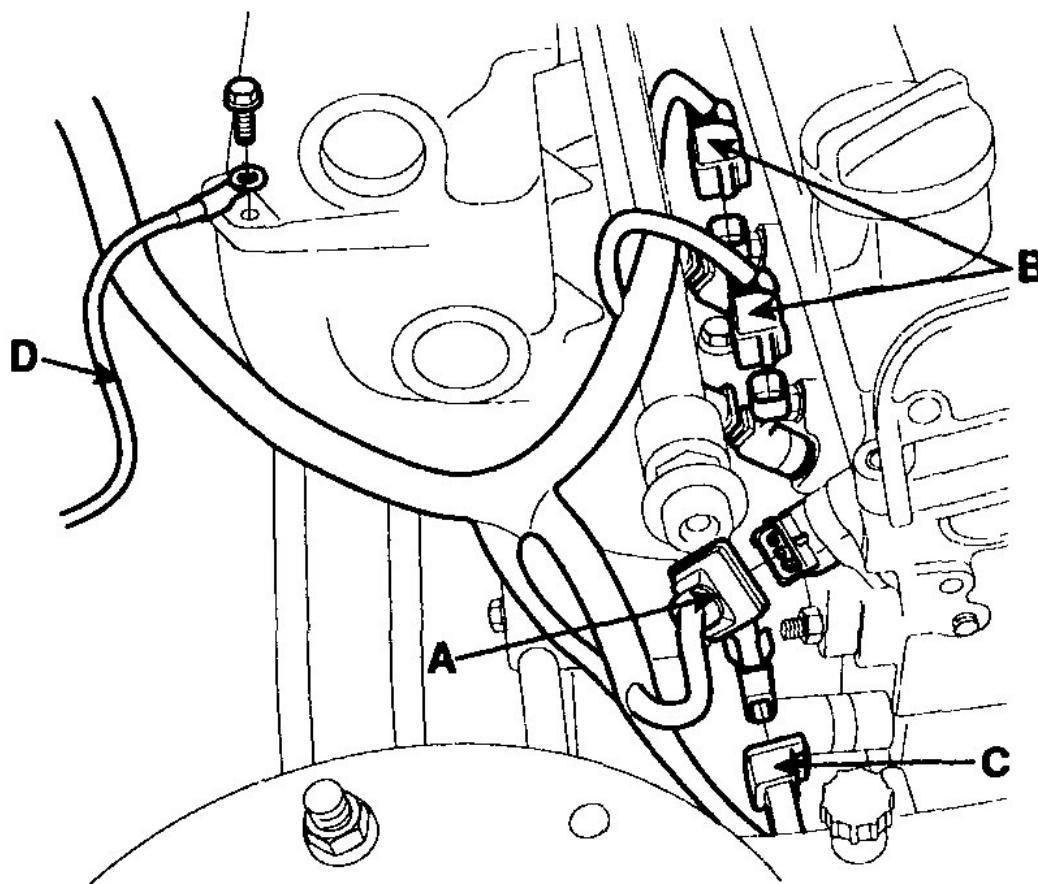

G03842374

Fig. 119: Identifying CMP Connector, Four Fuel Injector Connectors, Knock Sensor Connector And Ground Cable
Courtesy of HYUNDAI MOTOR CO.


7. ISA connector (B).
8. TPS connector (A).

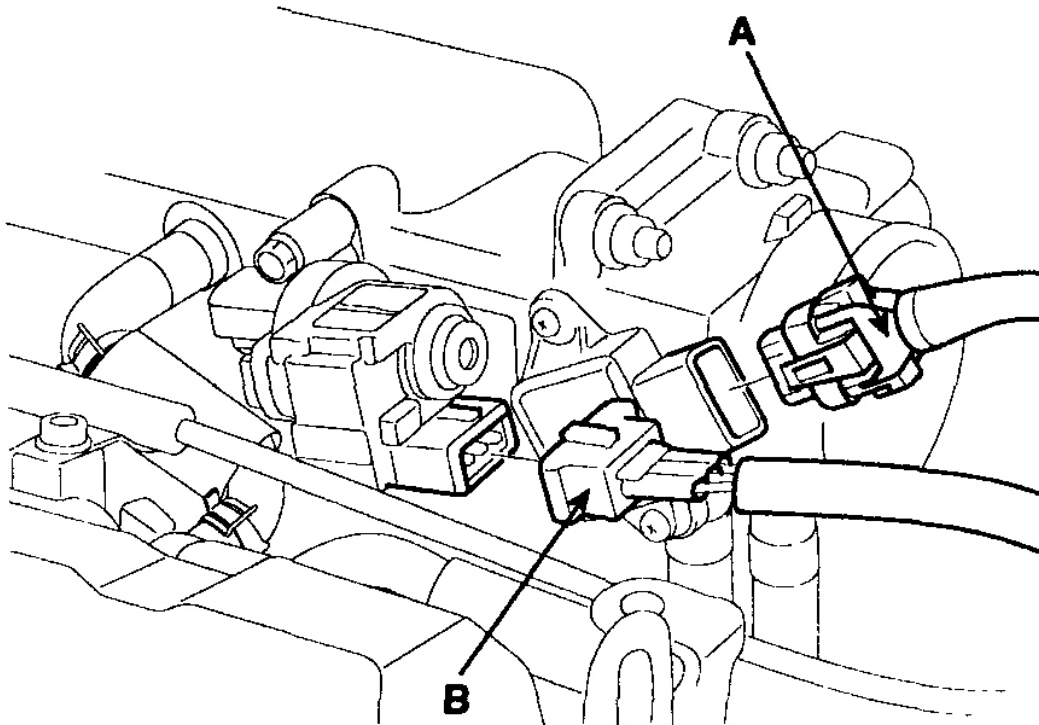

G03842375

Fig. 120: Identifying TPS And ISA Connectors
Courtesy of HYUNDAI MOTOR CO.


- 9. Ignition coil connector (D).
- 10. ECT sensor connector (C).
- 11. Oil temperature sensor connector (B).
- 12. OCV connector (A).

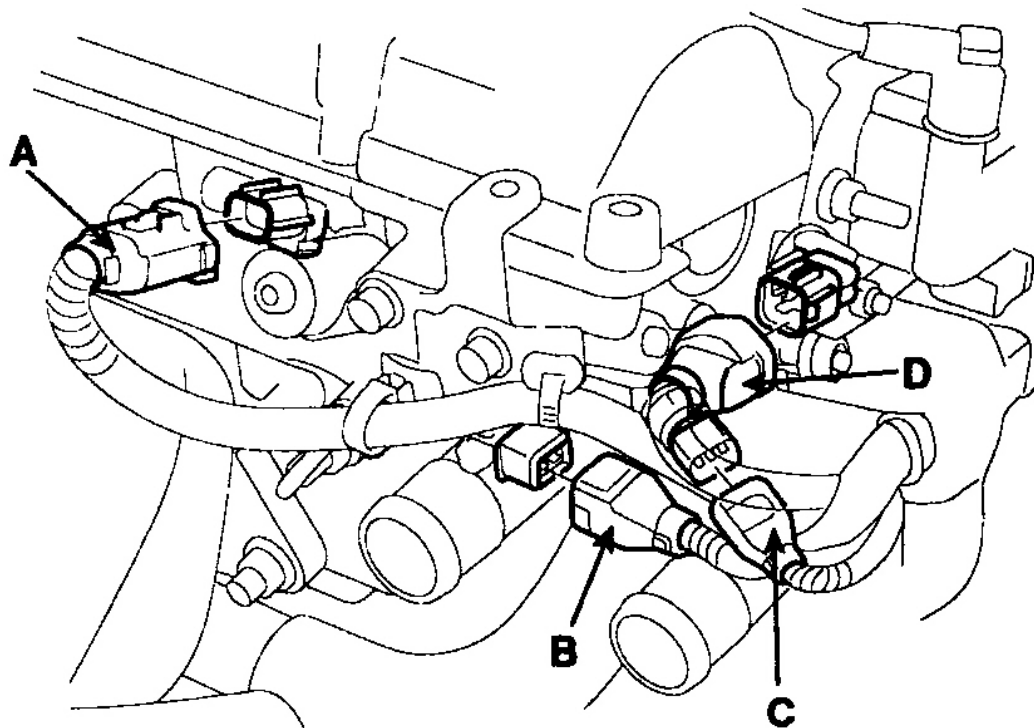

G03842376

Fig. 121: Ignition Coil Connector, ECT Sensor Connector, Oil Temperature Sensor Connector And OCV Connector
Courtesy of HYUNDAI MOTOR CO.


23. Install the heater hoses (A).

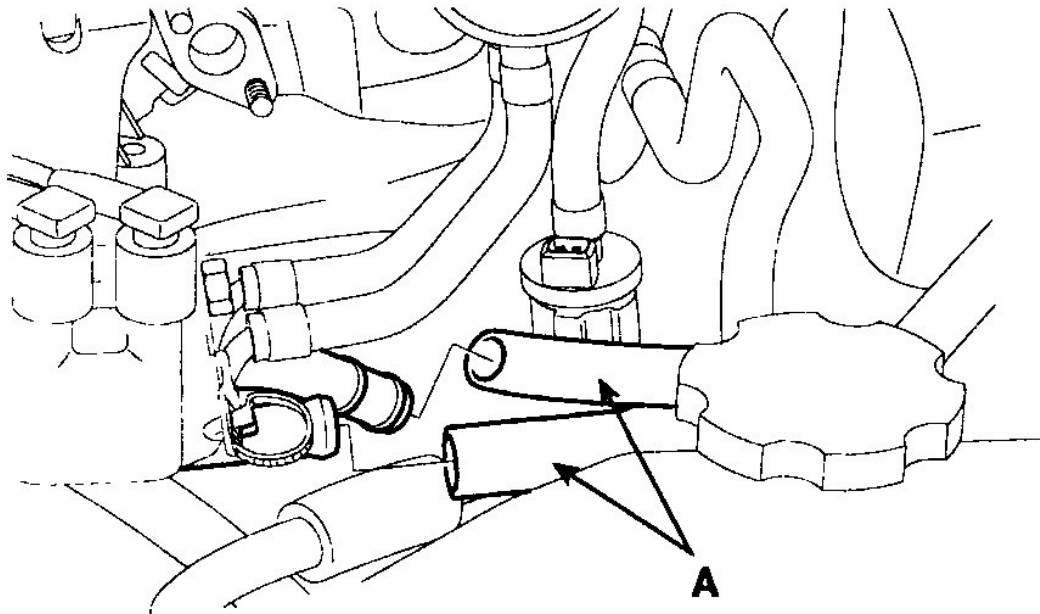

G03842377

Fig. 122: Installing Heater Hoses
Courtesy of HYUNDAI MOTOR CO.


24. Install the upper radiator hose (A) and lower radiator hose (B).

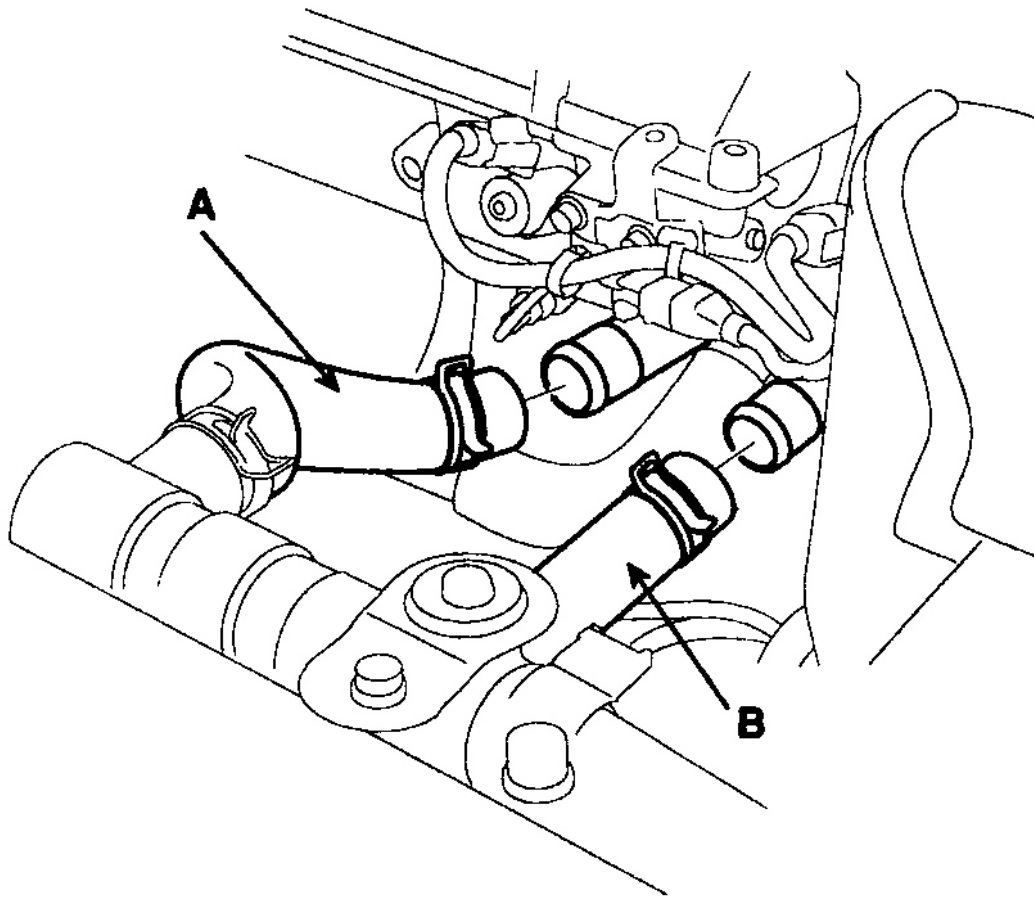

G03842378

Fig. 123: Installing Upper Radiator Hose And Lower Radiator Hose
Courtesy of HYUNDAI MOTOR CO.

25. Install the intake air hose and air cleaner assembly.
26. Install the engine cover (A).

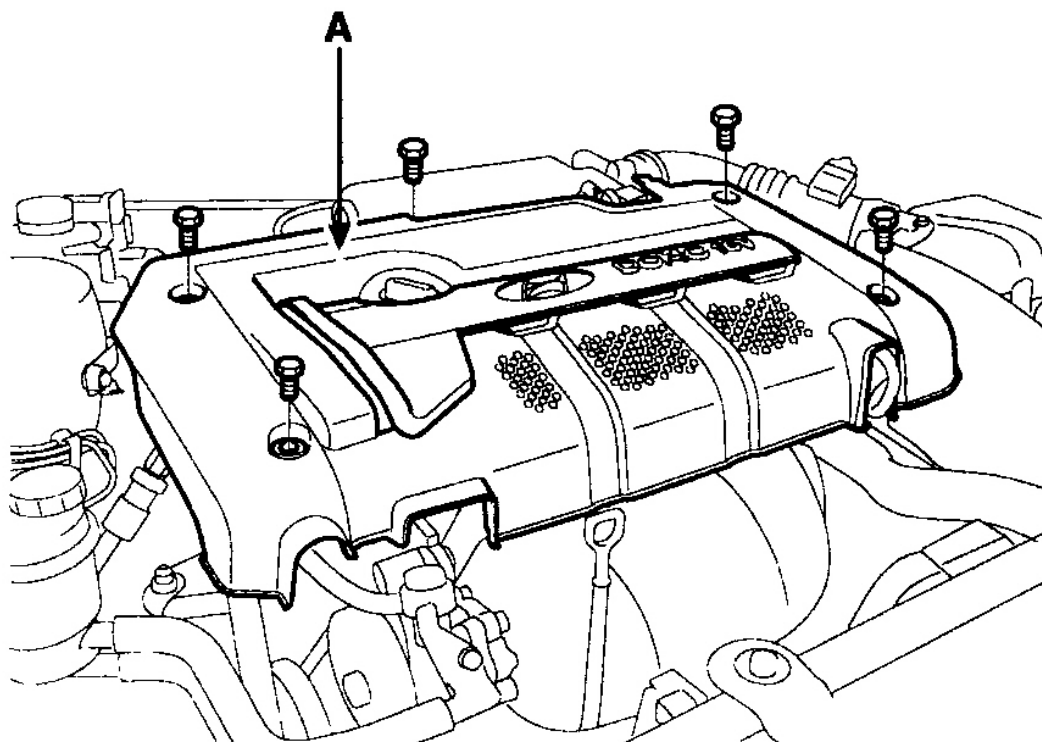

G03842379

Fig. 124: Installing Engine Cover
Courtesy of HYUNDAI MOTOR CO.

27. Connect the negative terminal to the battery.
28. Fill with engine coolant.
29. Start the engine and check for leaks.
30. Recheck engine coolant level and oil level.

ENGINE AND TRANSAXLE ASSEMBLY


REMOVAL

- CAUTION:**
- Use fender covers to avoid damaging painted surfaces.
 - To avoid damage, unplug the wiring connectors carefully while holding the connector portion.

- NOTE:**
- Mark all wiring and hoses to avoid misconnection.

- Inspection the timing belt before removing the cylinder head.
- Turn the crankshaft pulley so that the No. 1 piston is at top dead center. (See a)


1. Disconnect the negative terminal from the battery.

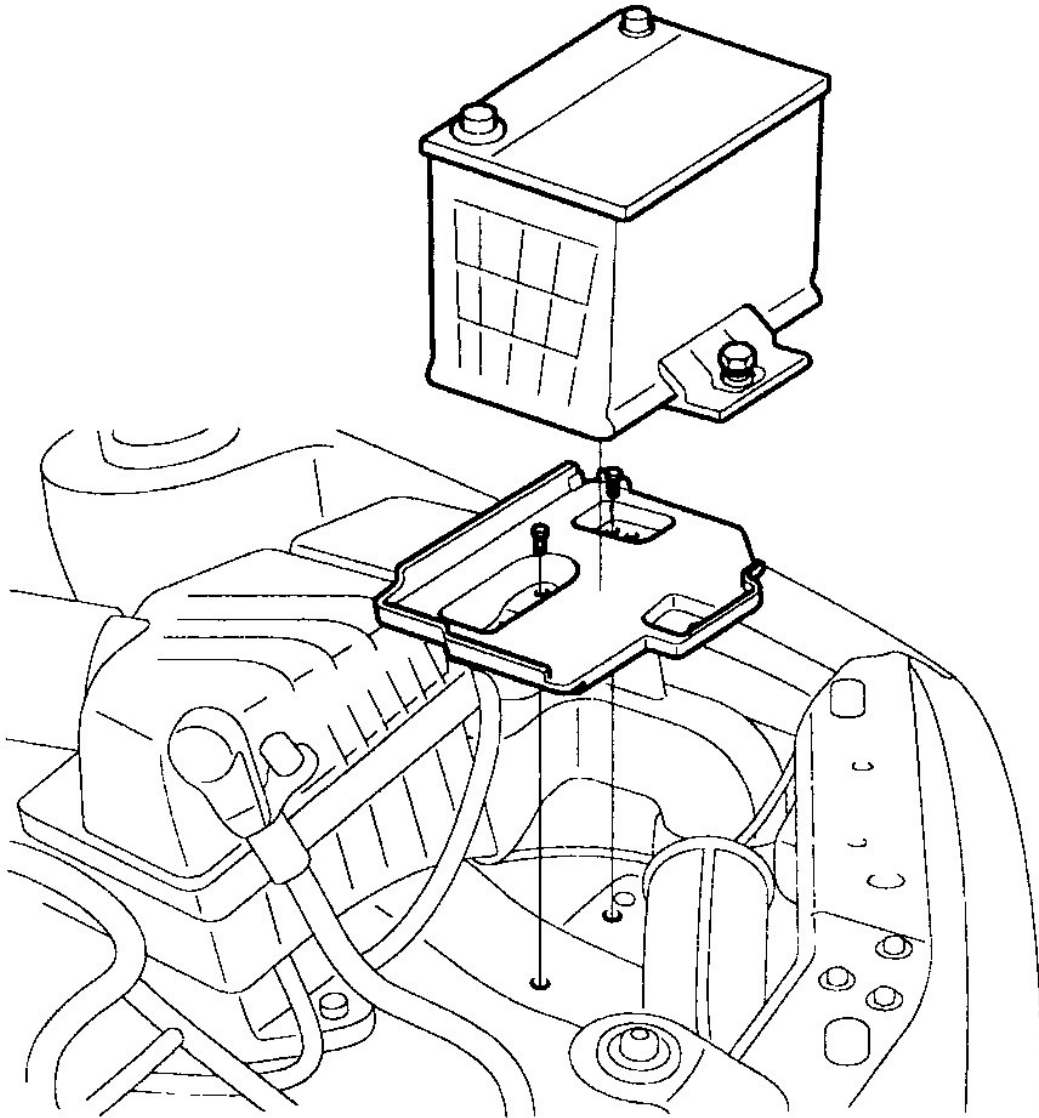

G03842380

Fig. 125: Disconnecting Negative Terminal From Battery
Courtesy of HYUNDAI MOTOR CO.


2. Remove the engine cover.

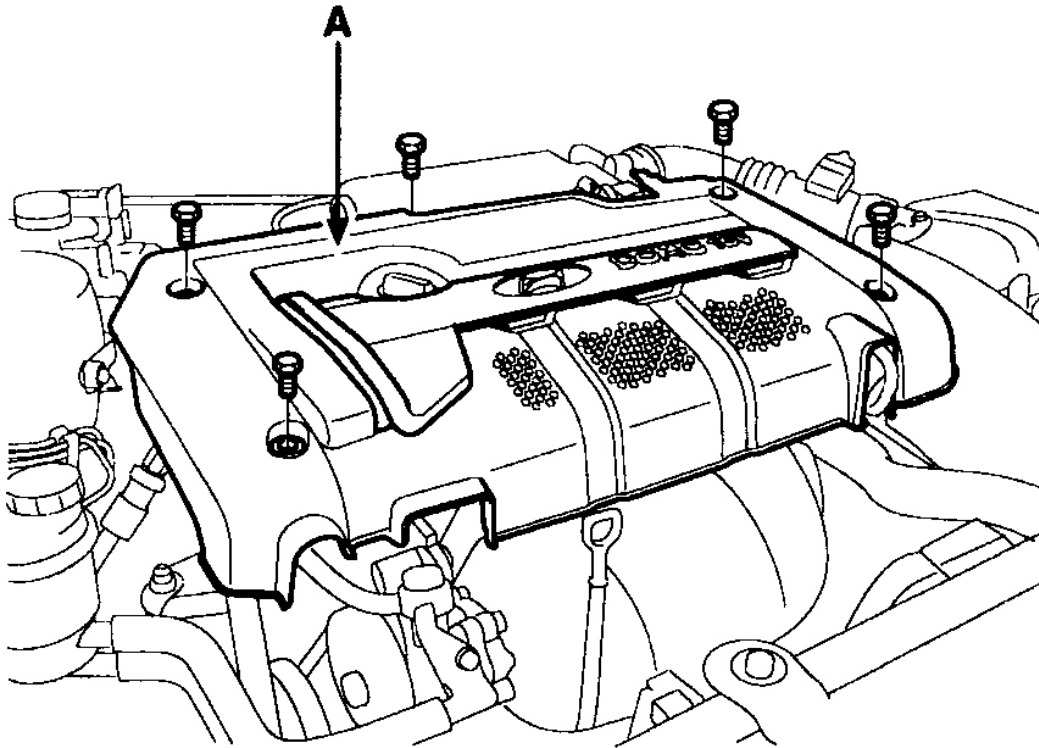

G03842381

Fig. 126: Removing Engine Cover
Courtesy of HYUNDAI MOTOR CO.


3. Drain the engine coolant (See **ENGINE COOLANT REFILLING AND BLEEDING**) Remove the radiator cap to speed draining.
4. Remove the intake air hose and air cleaner assembly.
 1. Remove the heat shield (A).

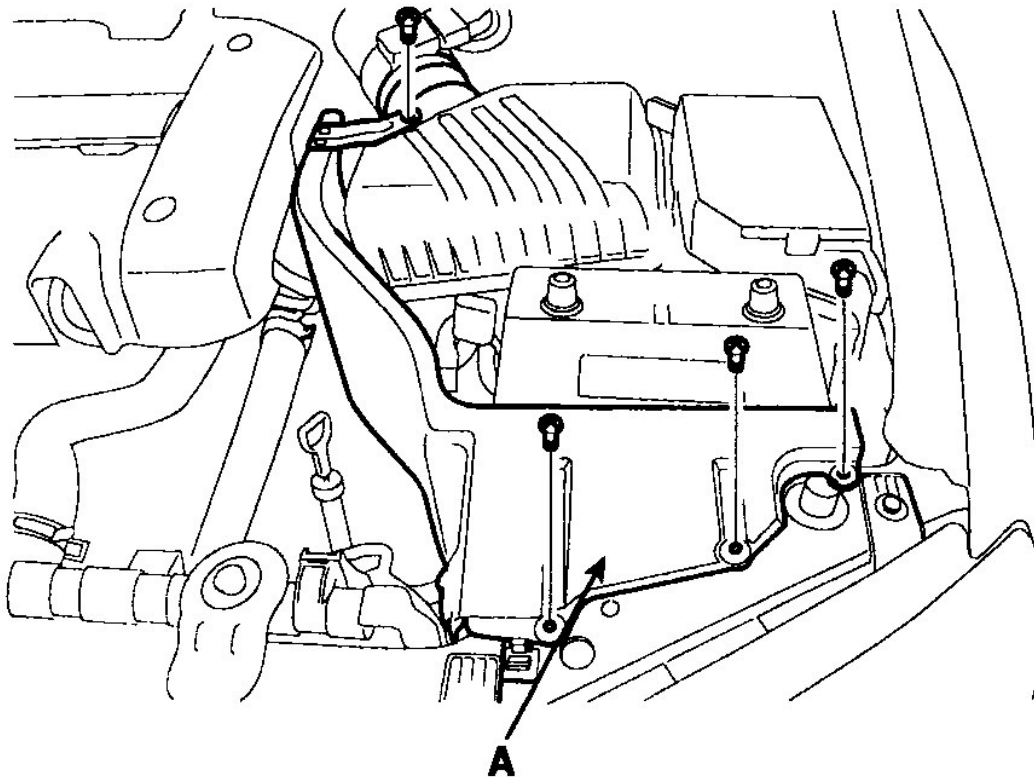

G03842382

Fig. 127: Removing Heat Shield
Courtesy of HYUNDAI MOTOR CO.


2. Disconnect the AFS connector.
3. Disconnect the breather hose from air cleaner hose.
4. Remove the intake air hose and air cleaner.
5. Remove the upper radiator hose (A) and lower radiator hose (B).

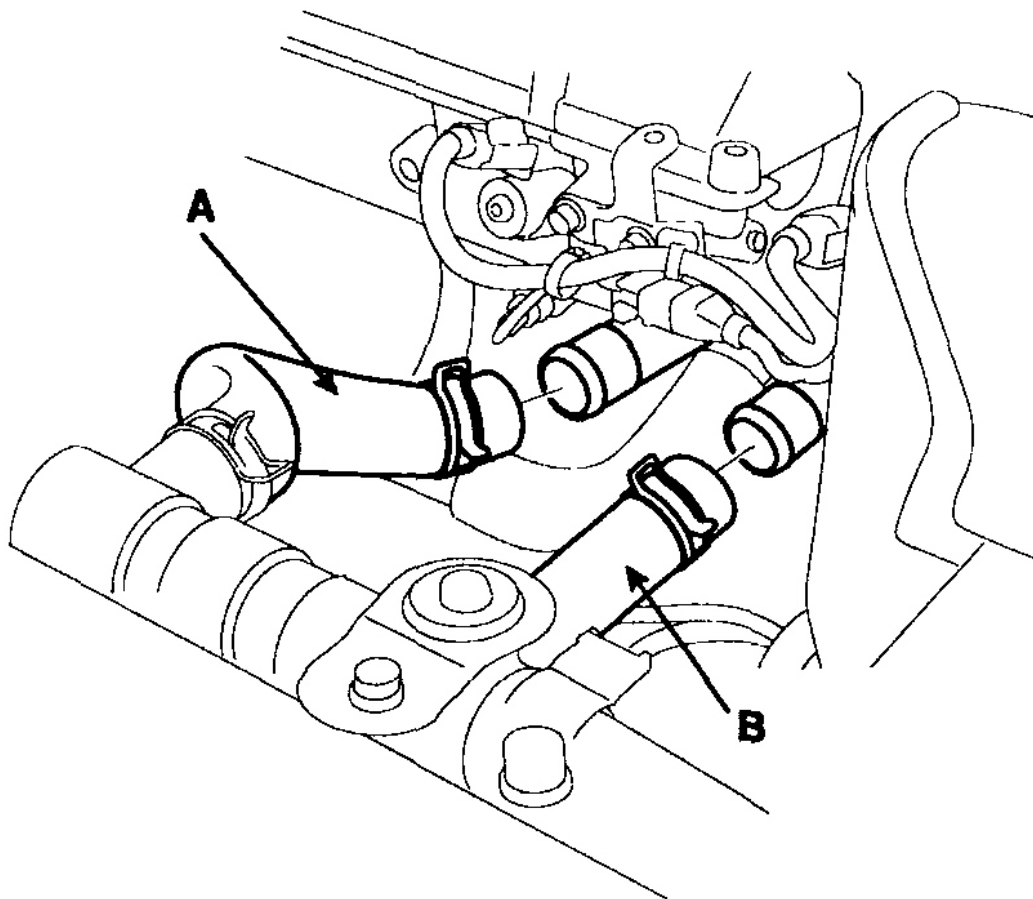

G03842383

Fig. 128: Removing Upper Radiator Hose And Lower Radiator Hose
Courtesy of HYUNDAI MOTOR CO.


6. Remove the heater hoses (A).

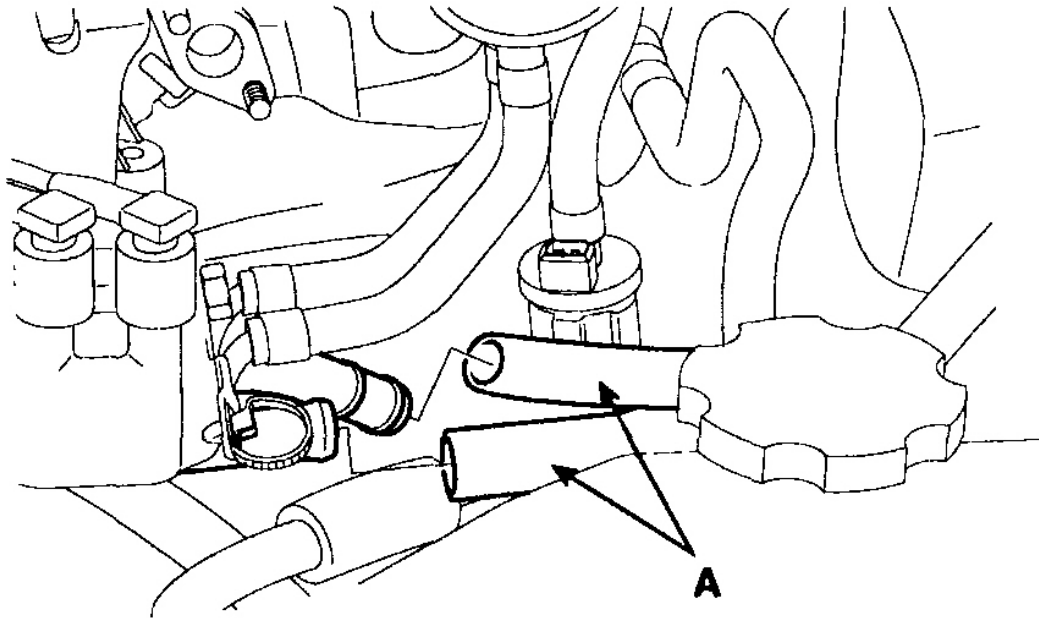

G03842384

Fig. 129: Removing Heater Hoses
Courtesy of HYUNDAI MOTOR CO.


7. Remove the engine wire harness connectors and wire harness clamps from the cylinder head and the intake manifold.
 1. OCV (Oil Control Valve) connector (A).
 2. Oil temperature sensor connector (B).
 3. ECT (Engine Coolant Temperature) sensor (C) connector.
 4. Ignition coil connector (D).

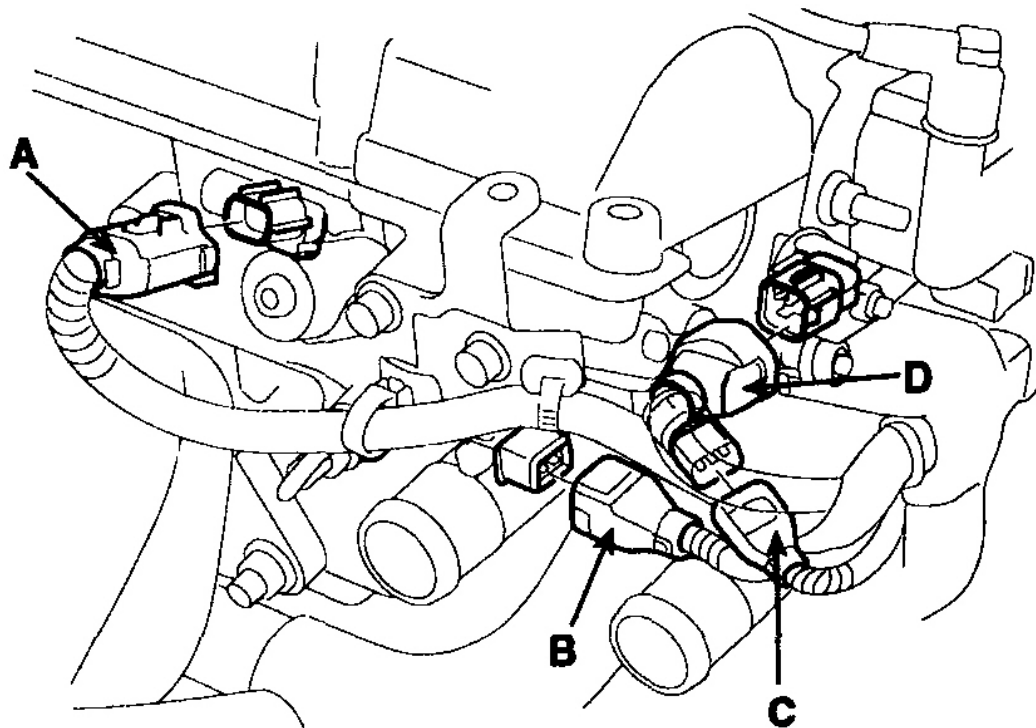

G03842385

Fig. 130: Identifying Ignition Coil Connector, ECT (Engine Coolant Temperature) Sensor, Oil Temperature Sensor And OCV (Oil Control Valve) Connectors
Courtesy of HYUNDAI MOTOR CO.


5. TPS (Throttle Position Sensor) connector (A).
6. ISA (Idle Speed Actuator) connector (B).

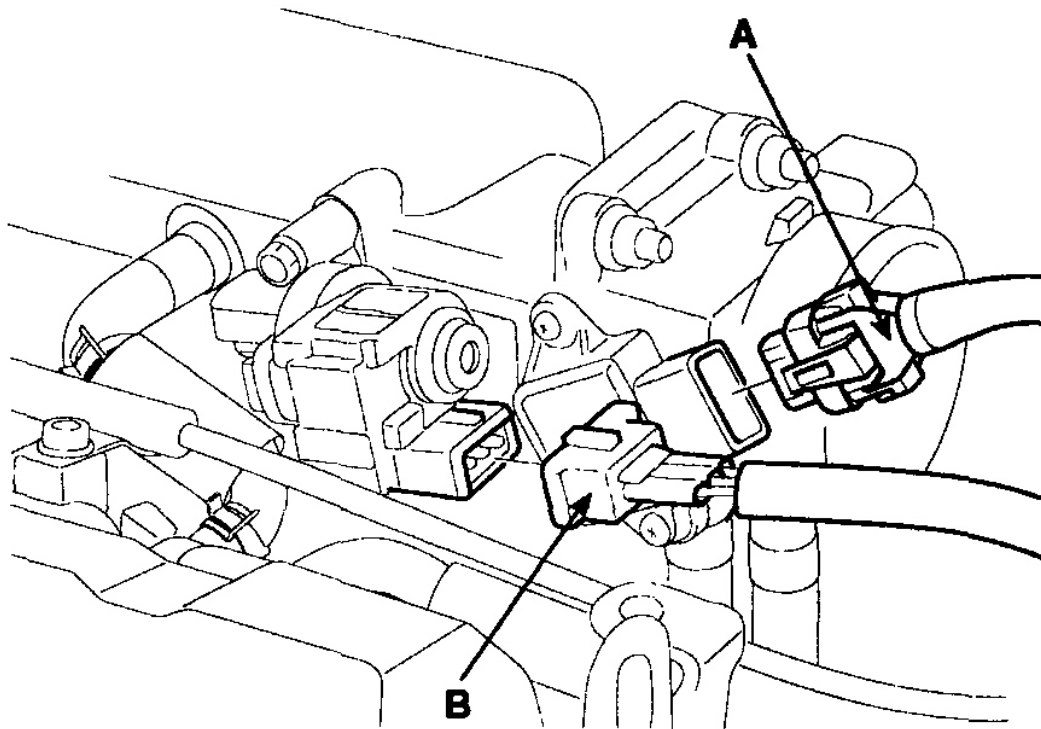

G03842386

Fig. 131: Identifying Throttle Position Sensor And Idle Speed Actuator Connectors
Courtesy of HYUNDAI MOTOR CO.

7. CMP (Camshaft Position Sensor) connector (A).
8. Four fuel injector connectors (B).
9. Knock sensor connector (C).
10. Disconnect ground cable (D) from the intake manifold.

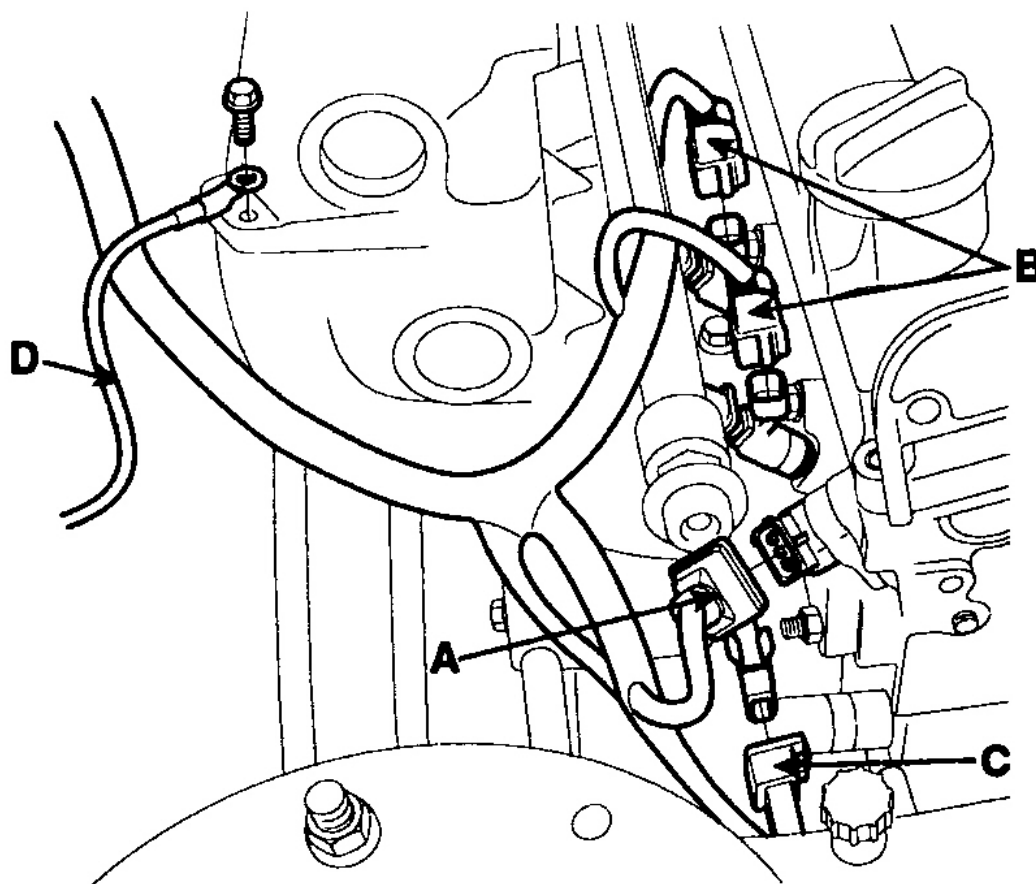


G03842387

Fig. 132: Identifying Camshaft Position Sensor, Four Fuel Injector, Knock Sensor Connectors And Ground Cable

Courtesy of HYUNDAI MOTOR CO.


11. Front heated oxygen sensor (A) connector.

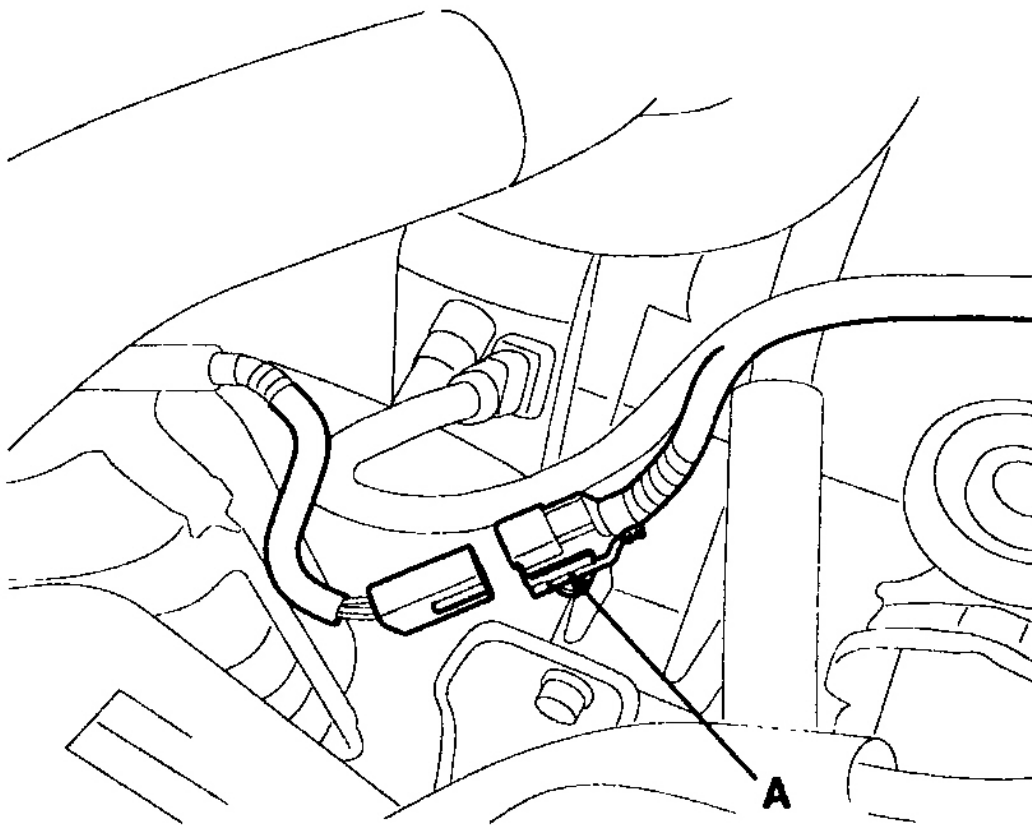

G03842388

Fig. 133: Identifying Front Heated Oxygen Sensor
Courtesy of HYUNDAI MOTOR CO.


12. PCSV (Purge Control Solenoid Valve) (A) connector.

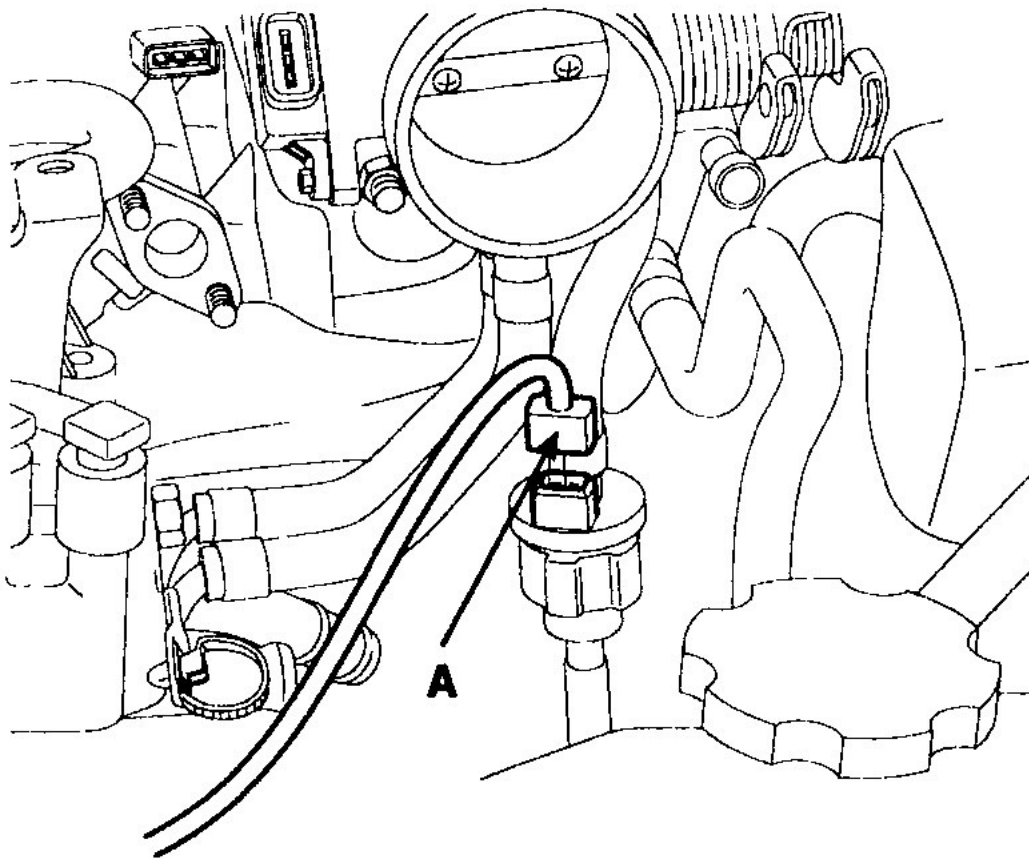

G03842389

Fig. 134: Identifying Purge Control Solenoid Valve
Courtesy of HYUNDAI MOTOR CO.


8. Remove the fuel inlet from delivery pipe (A).

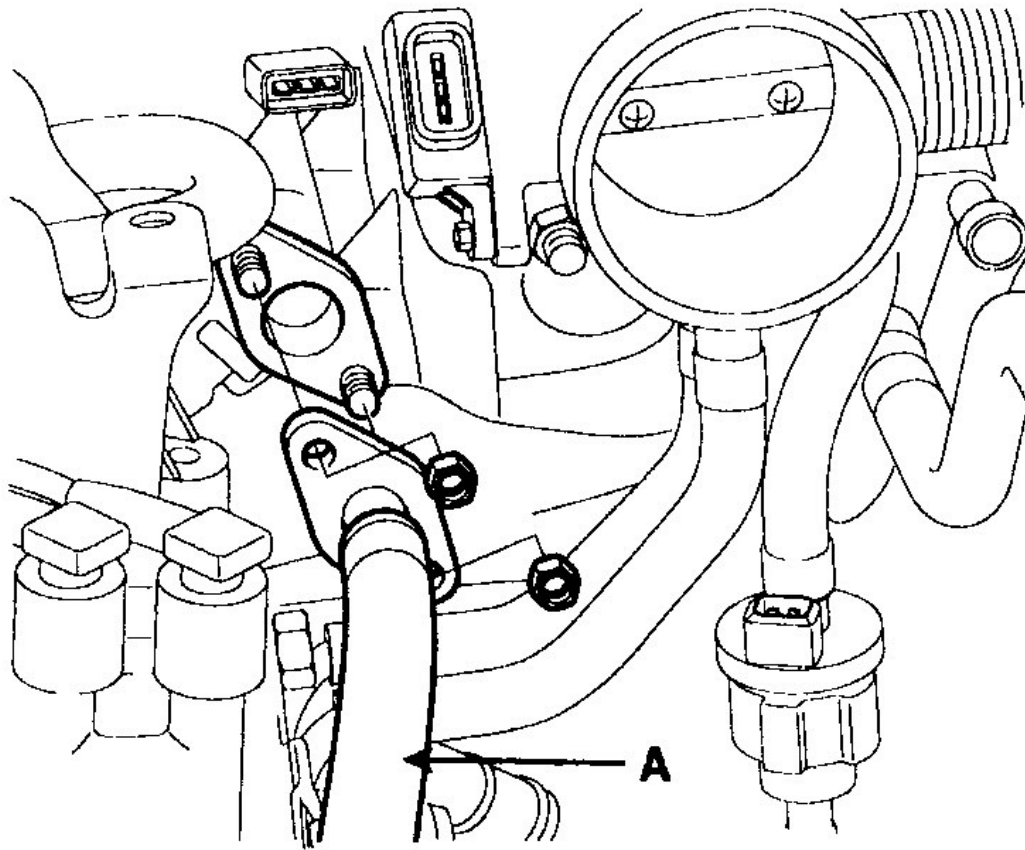

G03842390

Fig. 135: Removing Fuel Inlet From Delivery Pipe
Courtesy of HYUNDAI MOTOR CO.


9. Remove the PCSV hose (A).

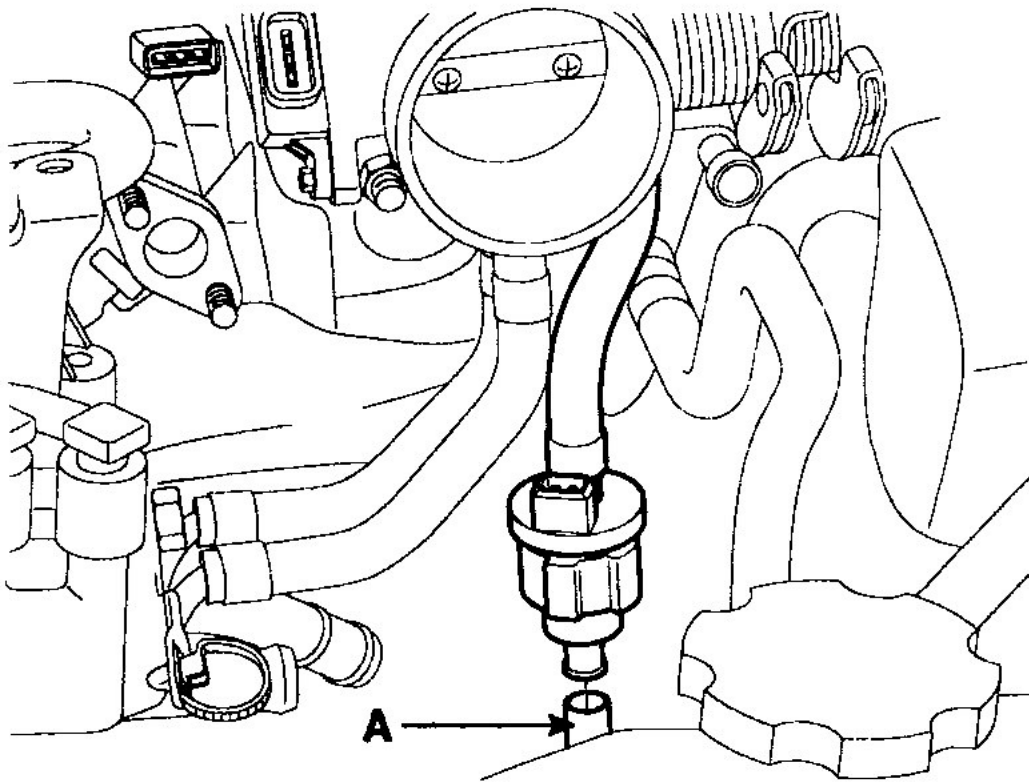

G03842391

Fig. 136: Removing PCSV Hose
Courtesy of HYUNDAI MOTOR CO.


10. Remove the brake booster vacuum hose (A).

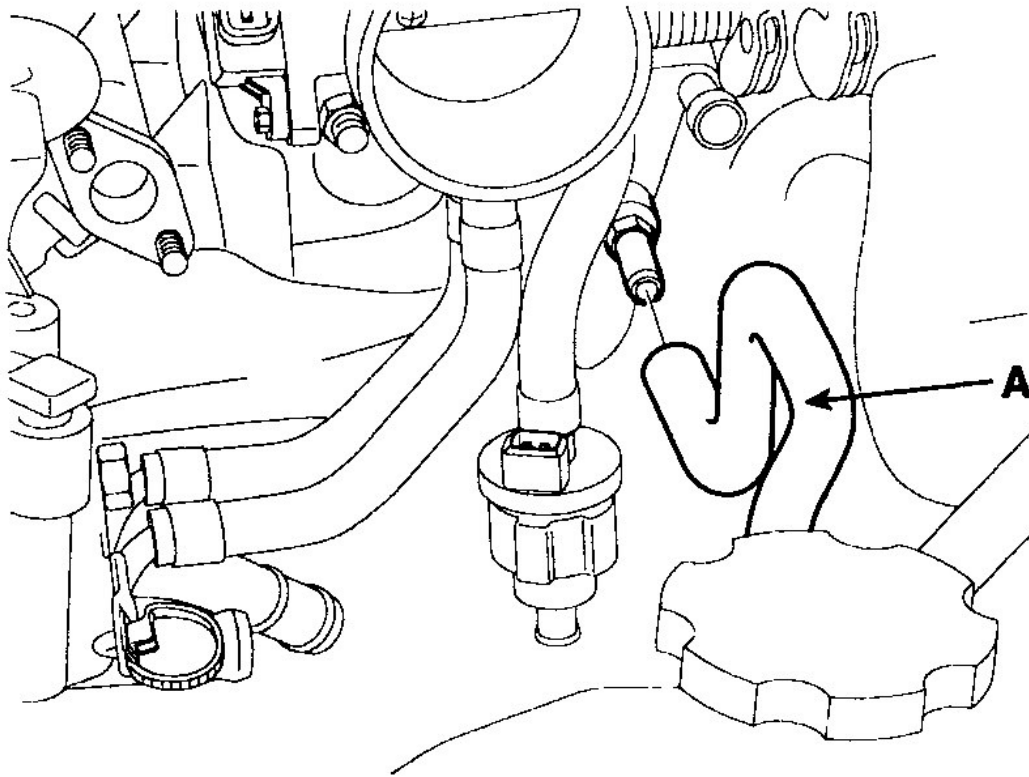

G03842392

Fig. 137: Removing Brake Booster Vacuum Hose
 Courtesy of HYUNDAI MOTOR CO.

11. Remove the accelerator cable by loosening the locknut, then slip the cable end out of the throttle linkage.
12. Remove the power steering pump, (See page **REMOVAL**)
13. Disconnect the inhibitor switch and solenoid valve connector (A).

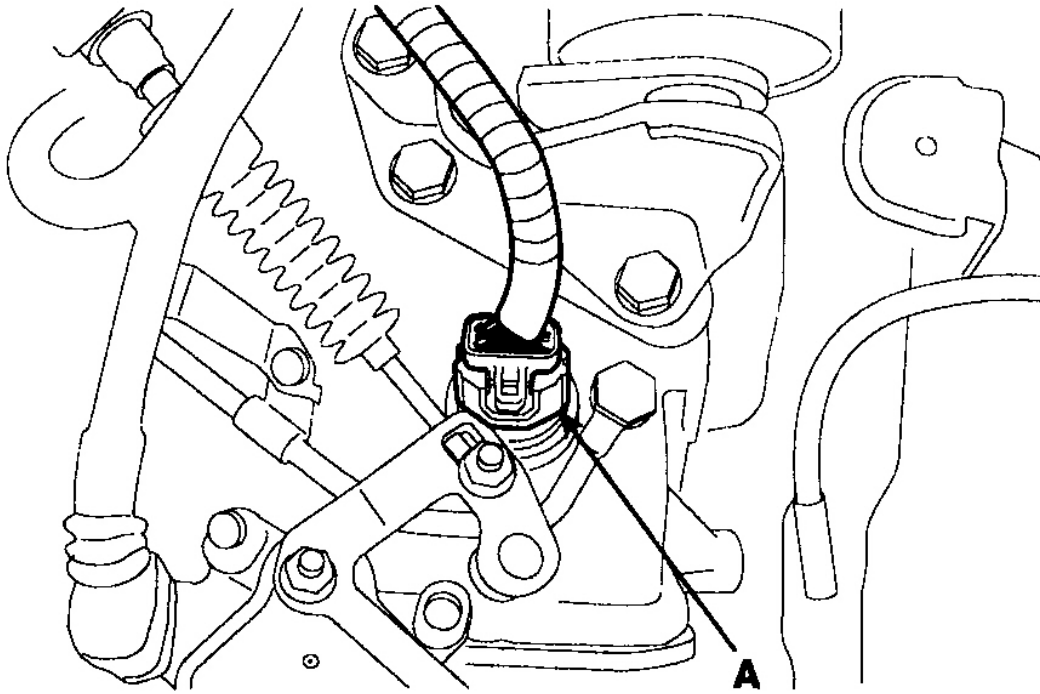

G03842393

Fig. 138: Disconnecting Solenoid Valve Connector
Courtesy of HYUNDAI MOTOR CO.

14. Remove the transaxle range switch connector (A).


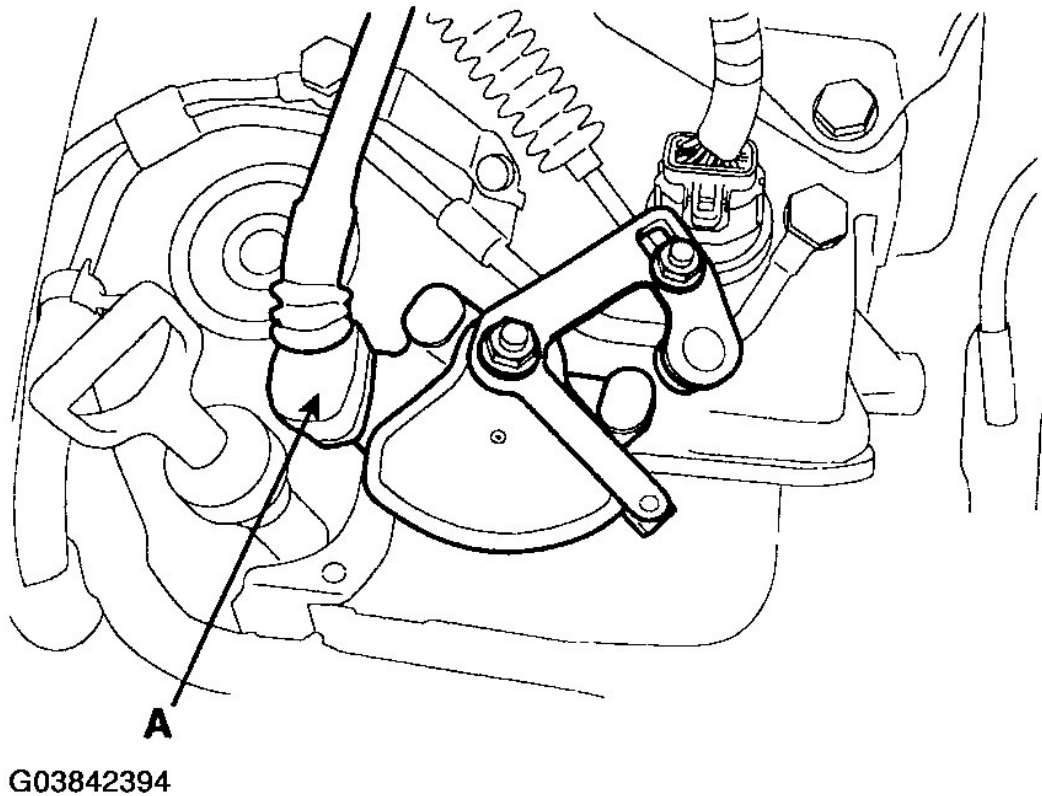


Fig. 139: Removing Transaxle Range Switch Connector
Courtesy of HYUNDAI MOTOR CO.


15. Remove the vehicle speed sensor connector (A).

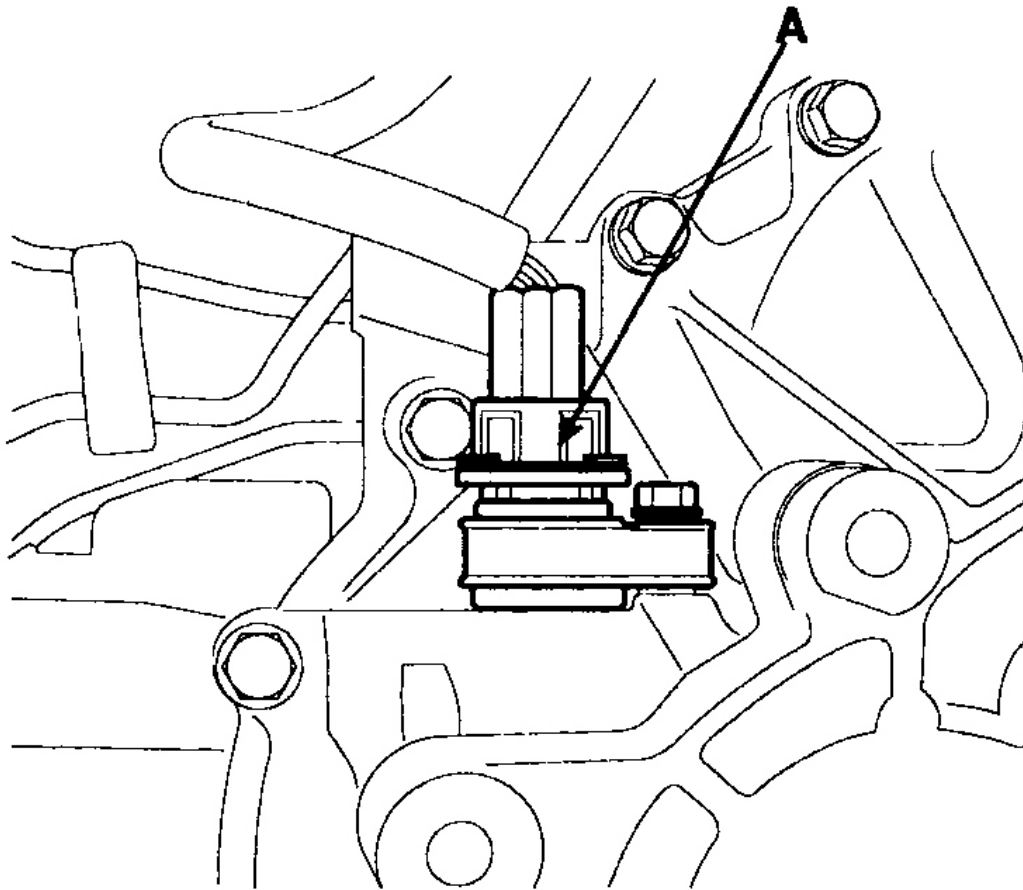

G03842395

Fig. 140: Removing Vehicle Speed Sensor Connector
Courtesy of HYUNDAI MOTOR CO.


16. Remove the control cable transaxle range switch nut (A).

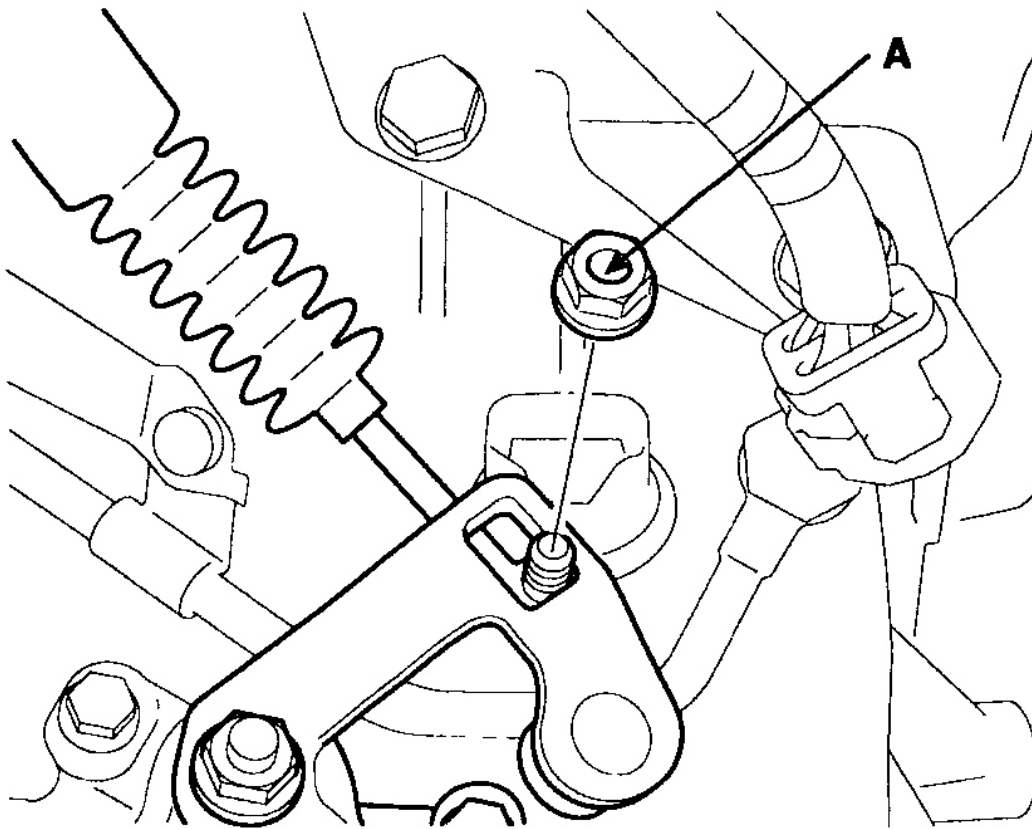

G03842396

Fig. 141: Removing Control Cable Transaxle Range Switch Nut
Courtesy of HYUNDAI MOTOR CO.


17. Remove the clip (A) of the control cable.

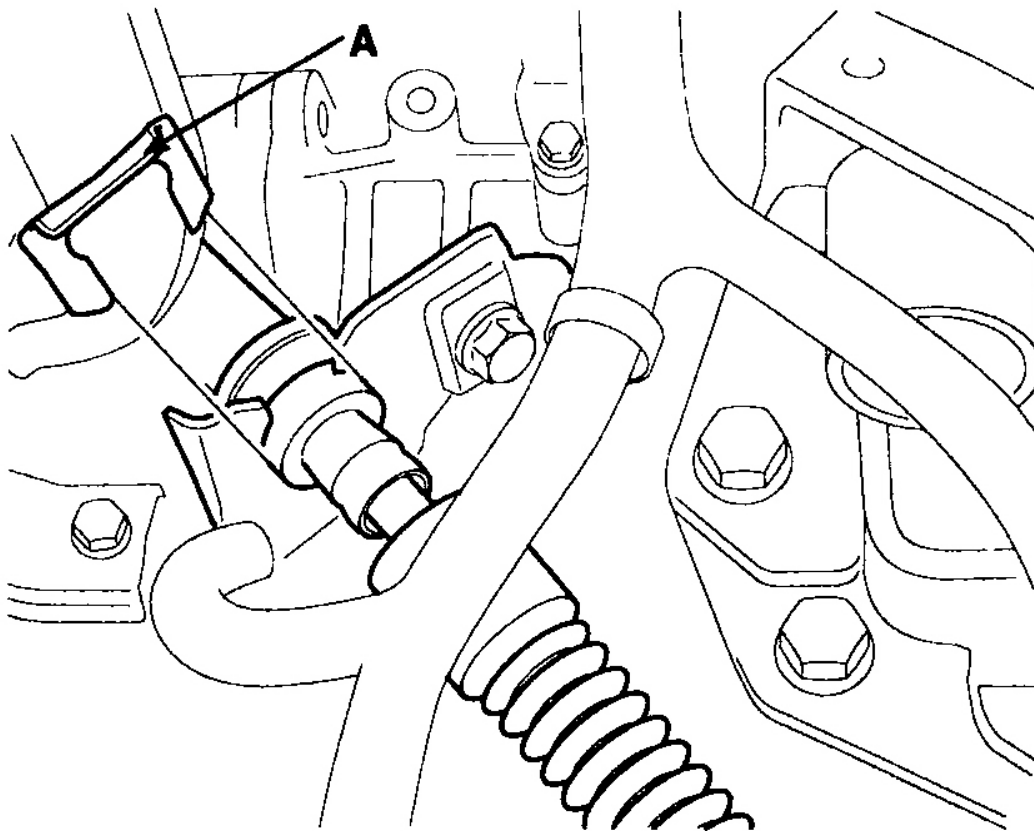

G03842397

Fig. 142: Removing Clip Of Control Cable
Courtesy of HYUNDAI MOTOR CO.


18. Remove the input shaft speed sensor connector (A).

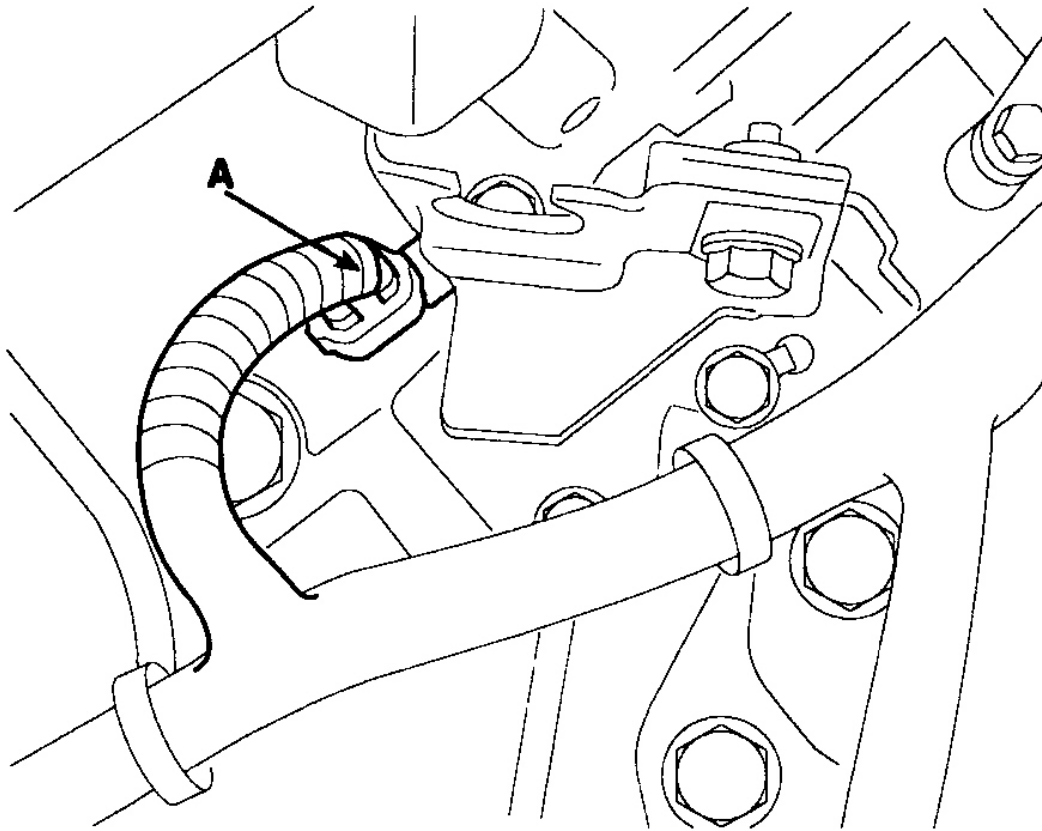

G03842398

Fig. 143: Removing Input Shaft Speed Sensor
Courtesy of HYUNDAI MOTOR CO.


19. Remove the output shaft speed sensor connector (A).

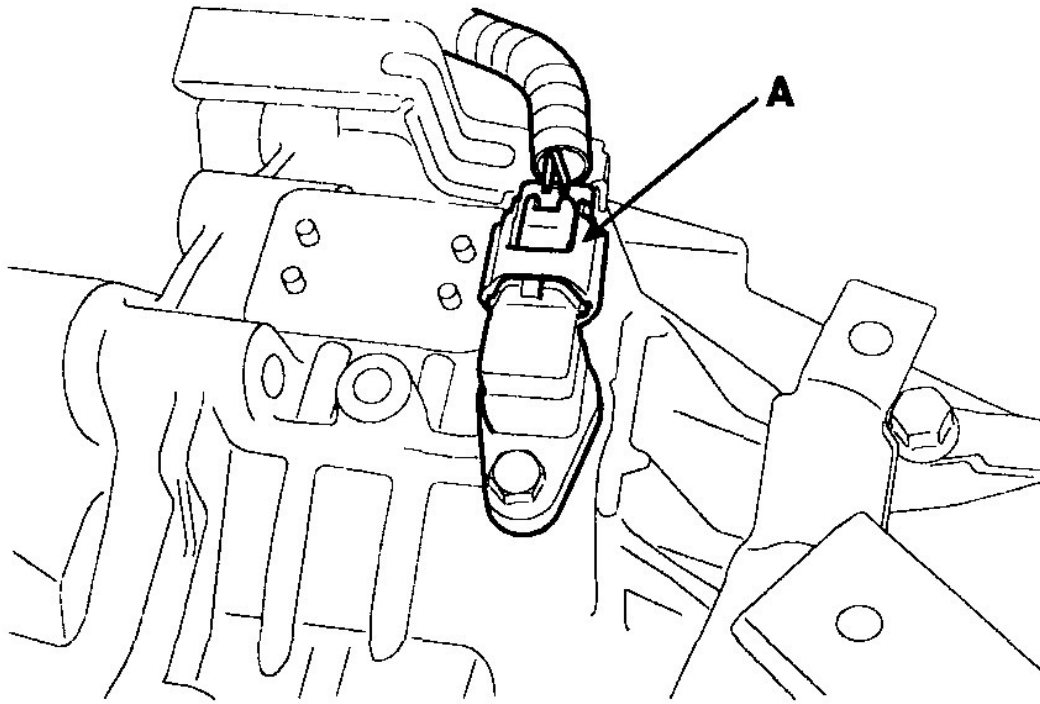

G03842399

Fig. 144: Removing Output Shaft Speed Sensor Connector
Courtesy of HYUNDAI MOTOR CO.

20. Remove the transaxle earth cable (A).

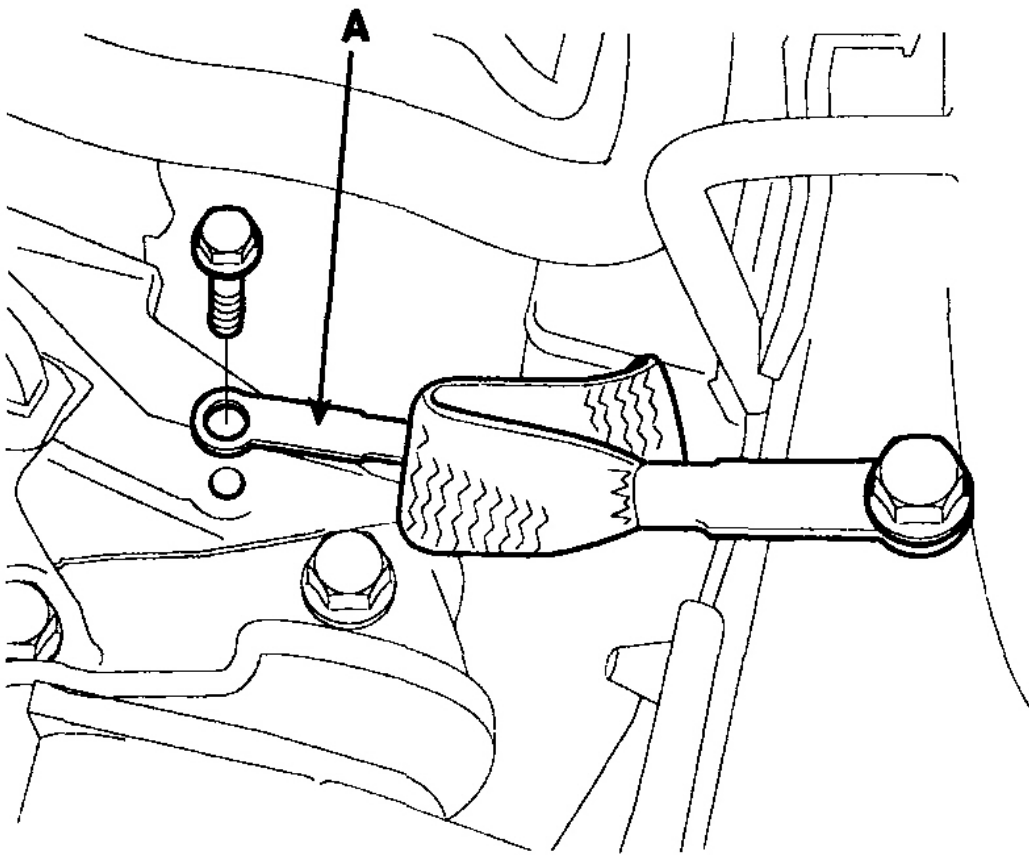

G03842400

Fig. 145: Removing Transaxle Earth Cable
Courtesy of HYUNDAI MOTOR CO.

21. Remove the start motor cable mounting bolt (A).


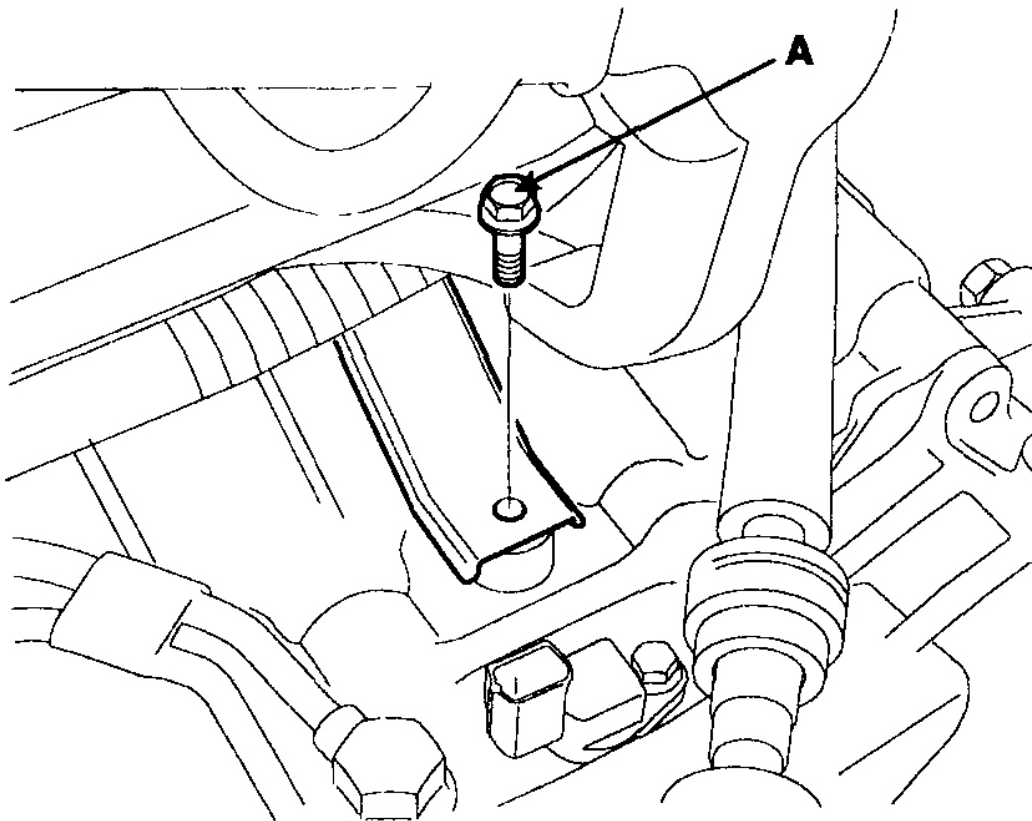
**G03842401**

Fig. 146: Removing Start Motor Cable Mounting Bolt
Courtesy of HYUNDAI MOTOR CO.


22. Remove the starting motor connector.
23. Remove the alternator connector.
24. Install the SST (09200-38001, 09200-1C000), the engine support fixture and the adapter, on the engine and transaxle assembly.

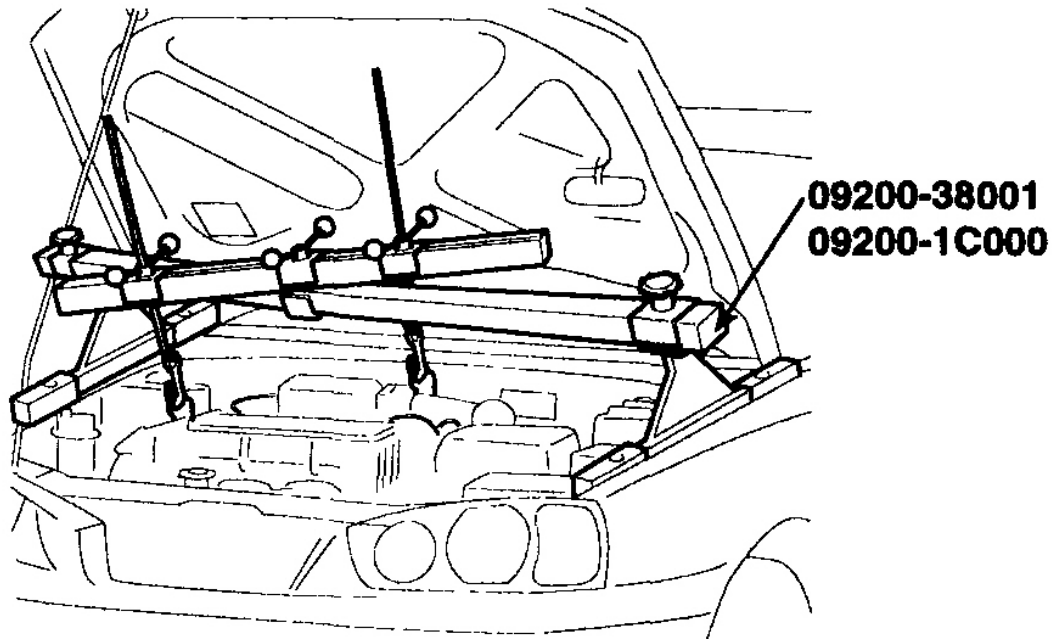

G03842402

Fig. 147: Installing SST (09200-38001, 09200-1C000)
Courtesy of HYUNDAI MOTOR CO.


25. Remove the engine mounting bracket (A).

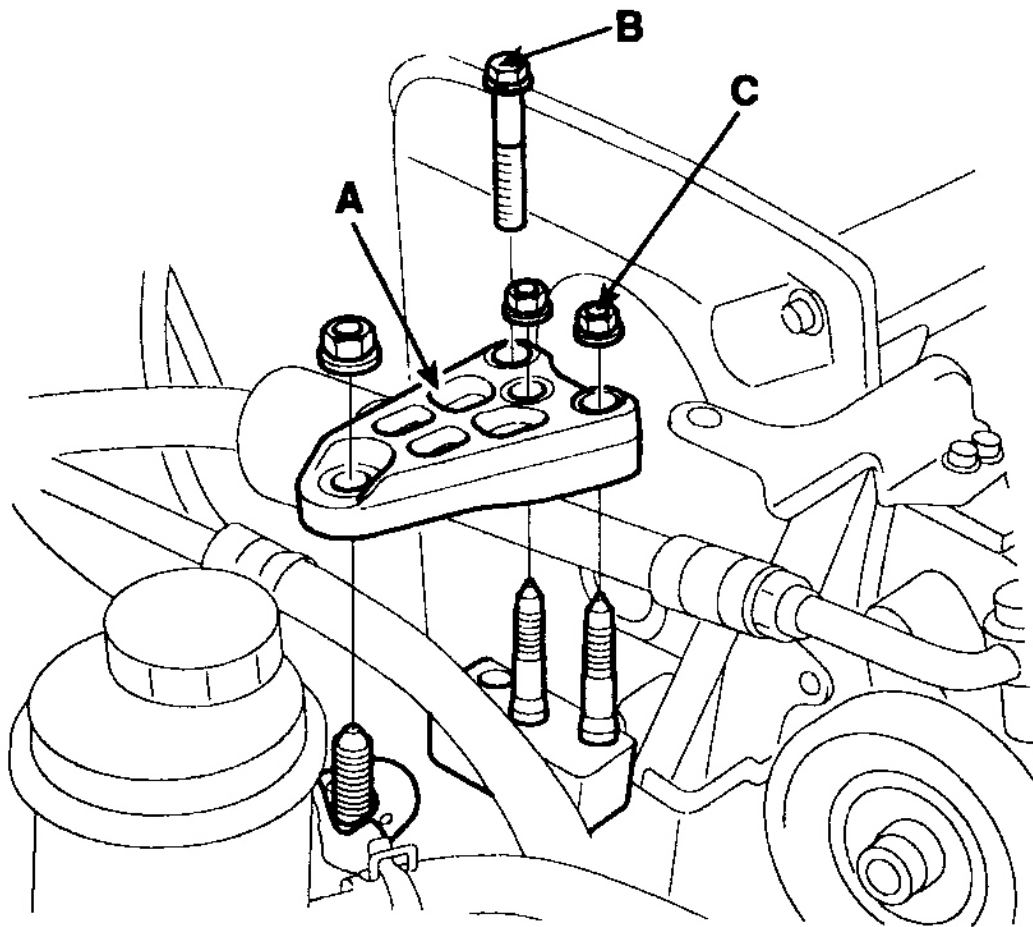

G03842403

Fig. 148: Removing Engine Mounting Bracket
Courtesy of HYUNDAI MOTOR CO.


26. Remove the transaxle mounting bracket (A).

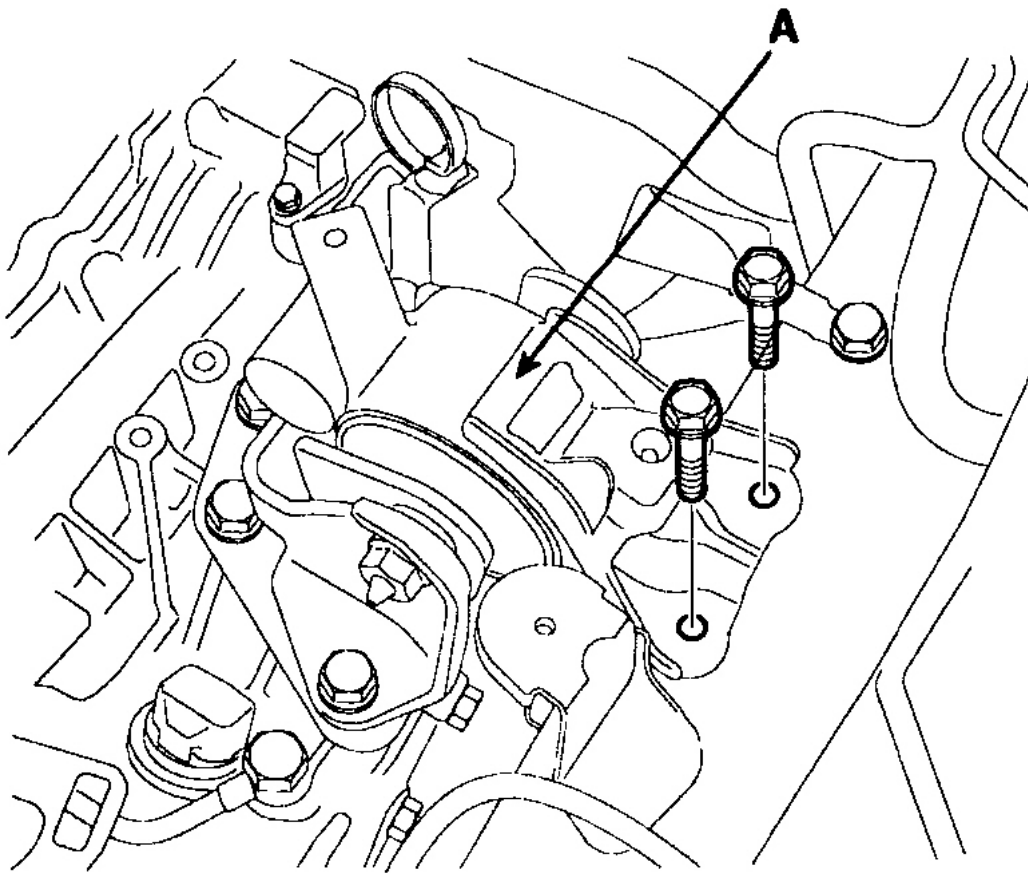

G03842404

Fig. 149: Removing Transaxle Mounting Bracket
Courtesy of HYUNDAI MOTOR CO.


27. Remove the front tires.
28. Remove the ABS wheel speed sensor (A).

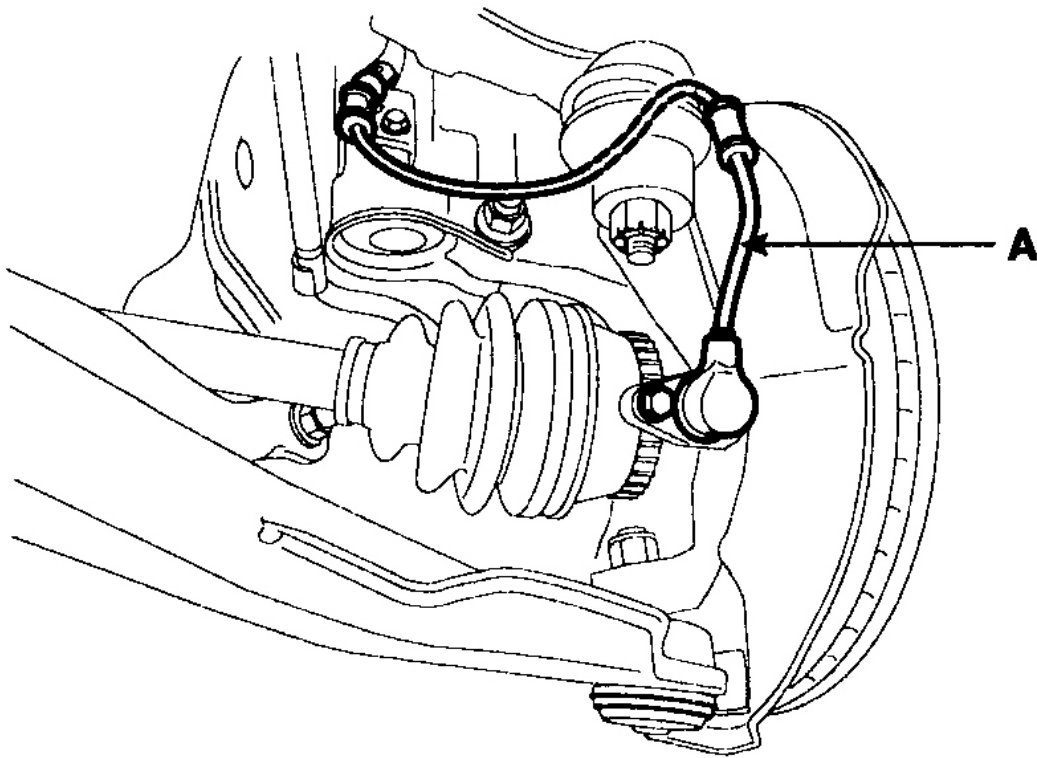

G03842405


Fig. 150: Removing ABS Wheel Speed Sensor
Courtesy of HYUNDAI MOTOR CO.

29. Remove the caliper and hang the caliper assembly (A).

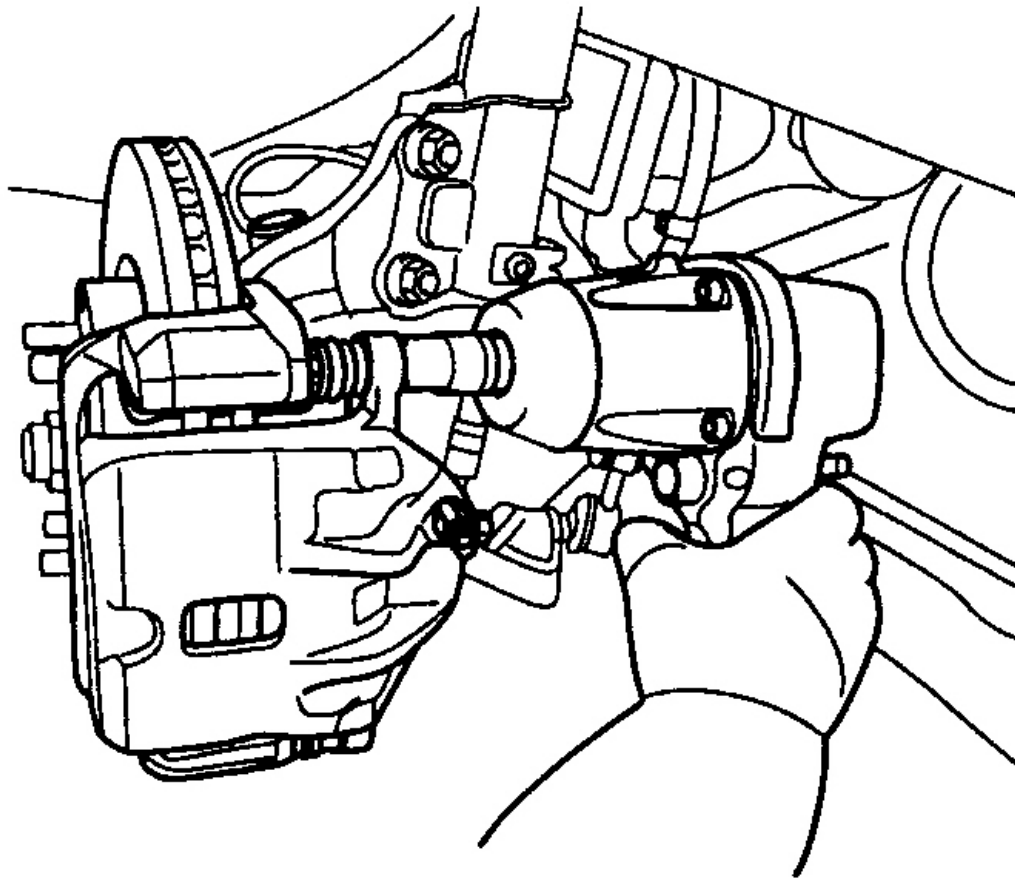

G03842406


Fig. 151: Locating Caliper Assembly
Courtesy of HYUNDAI MOTOR CO.

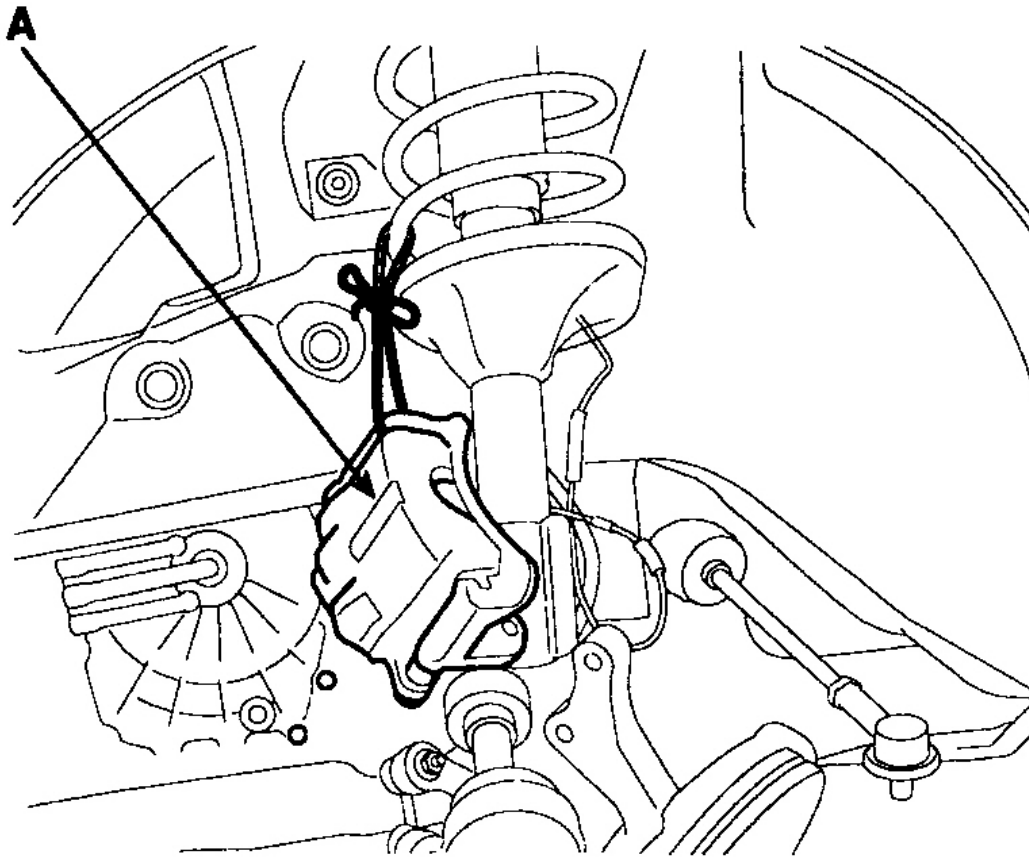

G03842407

Fig. 152: Removing Caliper
Courtesy of HYUNDAI MOTOR CO.


30. Remove the knuckle mounting bolts (A).

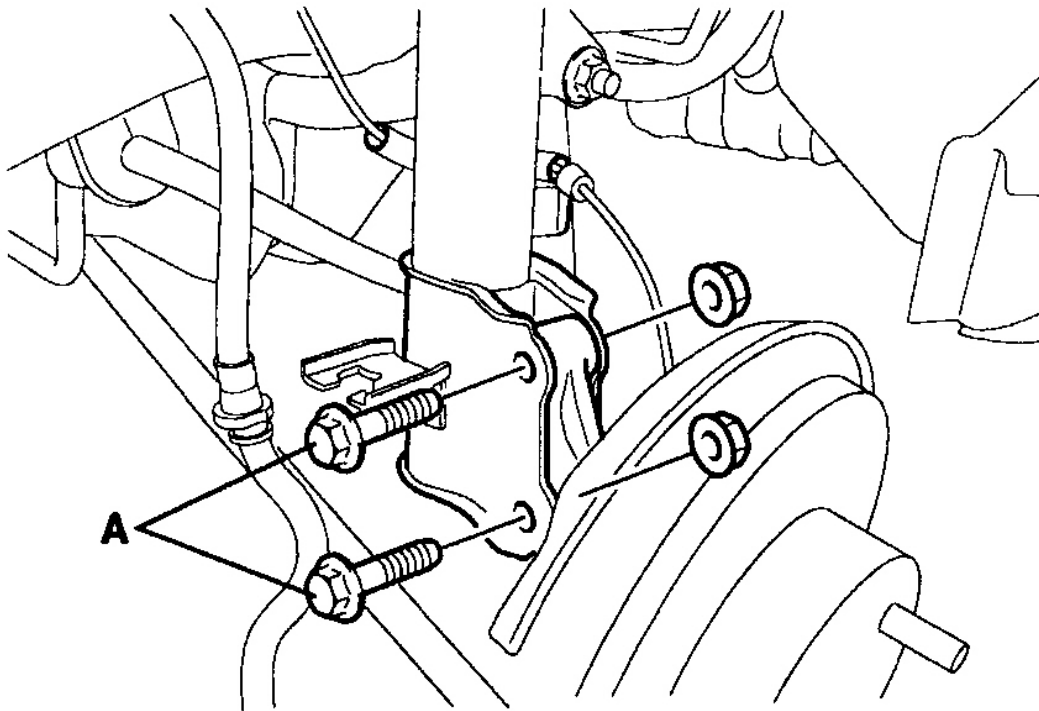

G03842408

Fig. 153: Removing Knuckle Mounting Bolts
Courtesy of HYUNDAI MOTOR CO.


31. Remove the power steering return hose (A) and drain the power steering oil.

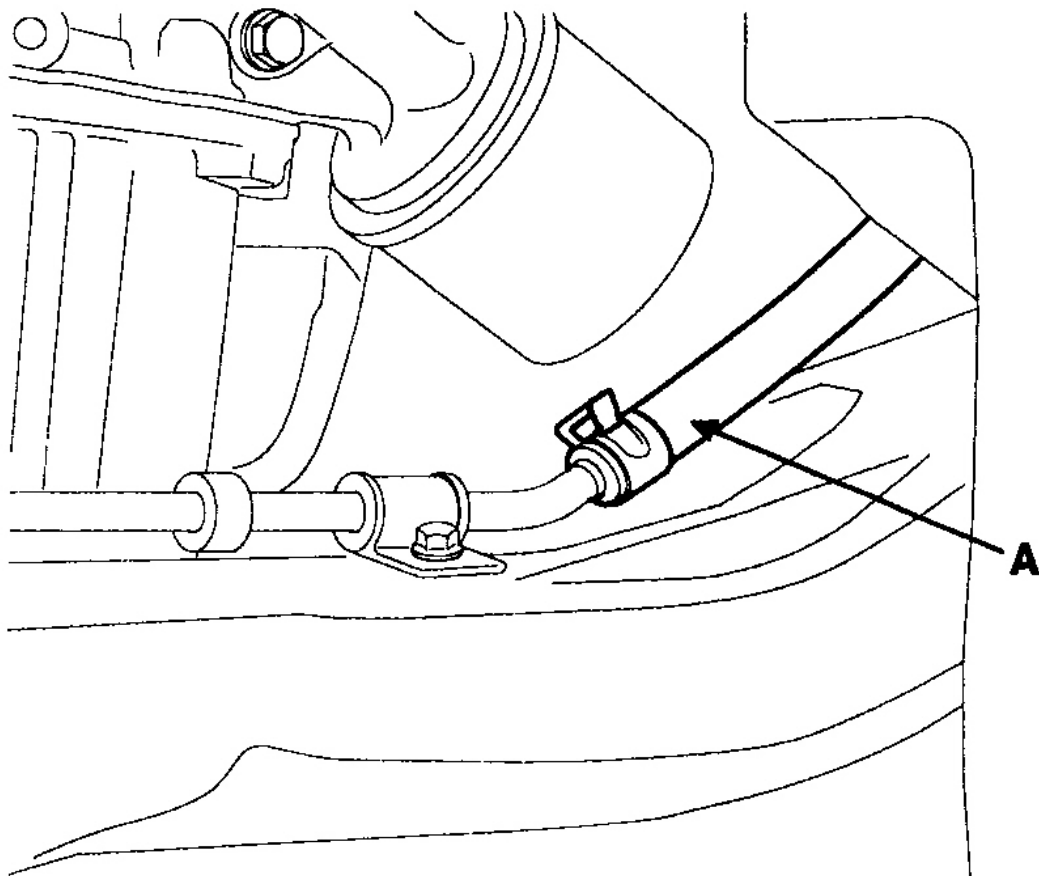

G03842409

Fig. 154: Removing Power Steering Return Hose
Courtesy of HYUNDAI MOTOR CO.


32. Disconnect the rear oxygen sensor connector (A).

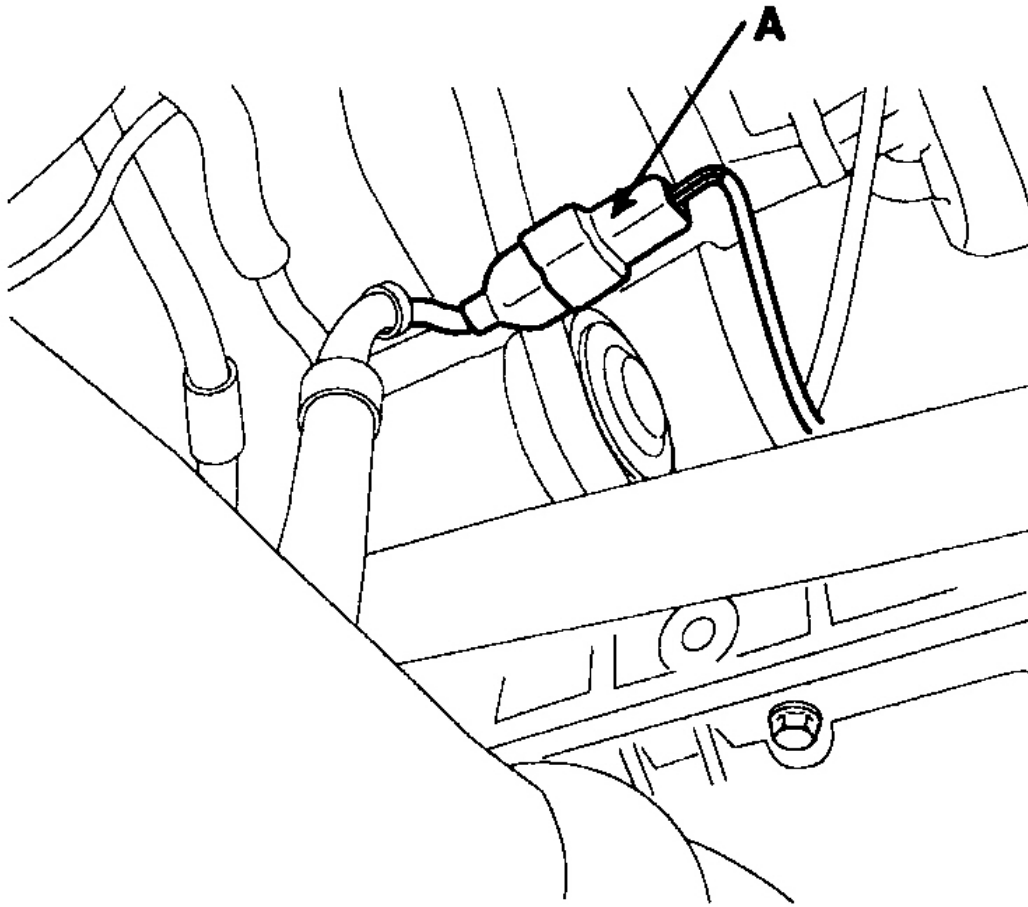

G03842410

Fig. 155: Disconnecting Rear Oxygen Sensor Connector
Courtesy of HYUNDAI MOTOR CO.


33. Remove the front muffler (A).

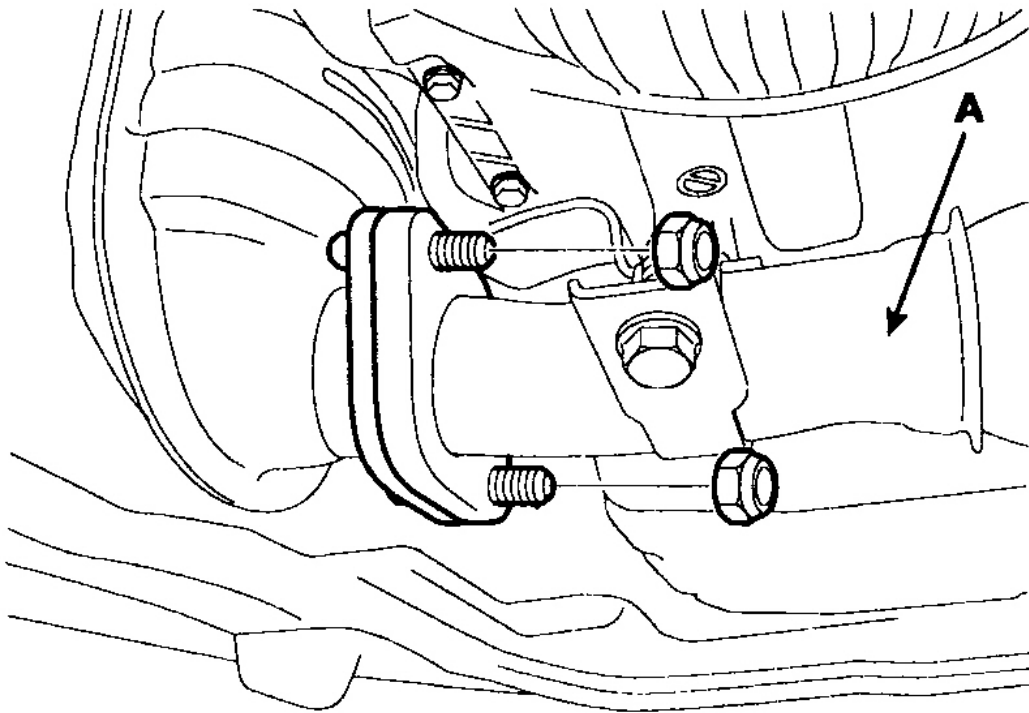

G03842411

Fig. 156: Removing Front Muffler
Courtesy of HYUNDAI MOTOR CO.


34. Remove the steering u-joint mounting bolt (A).

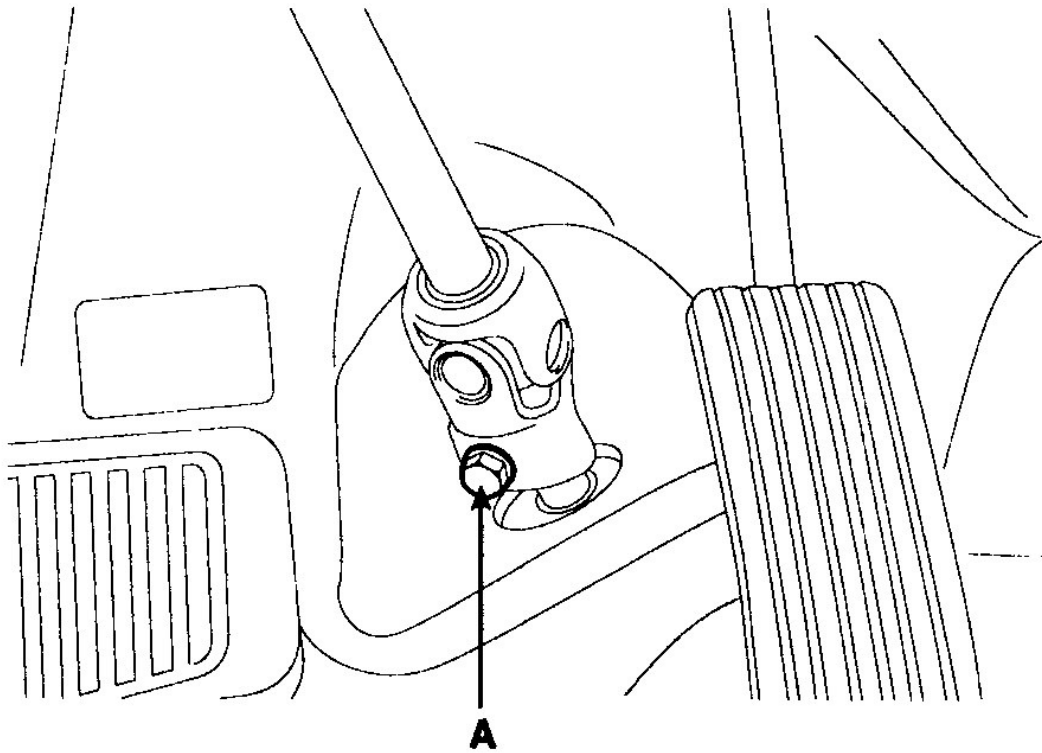

G03842412

Fig. 157: Removing Steering U-Joint Mounting Bolt
Courtesy of HYUNDAI MOTOR CO.

35. Remove the sub frame bolts (A).

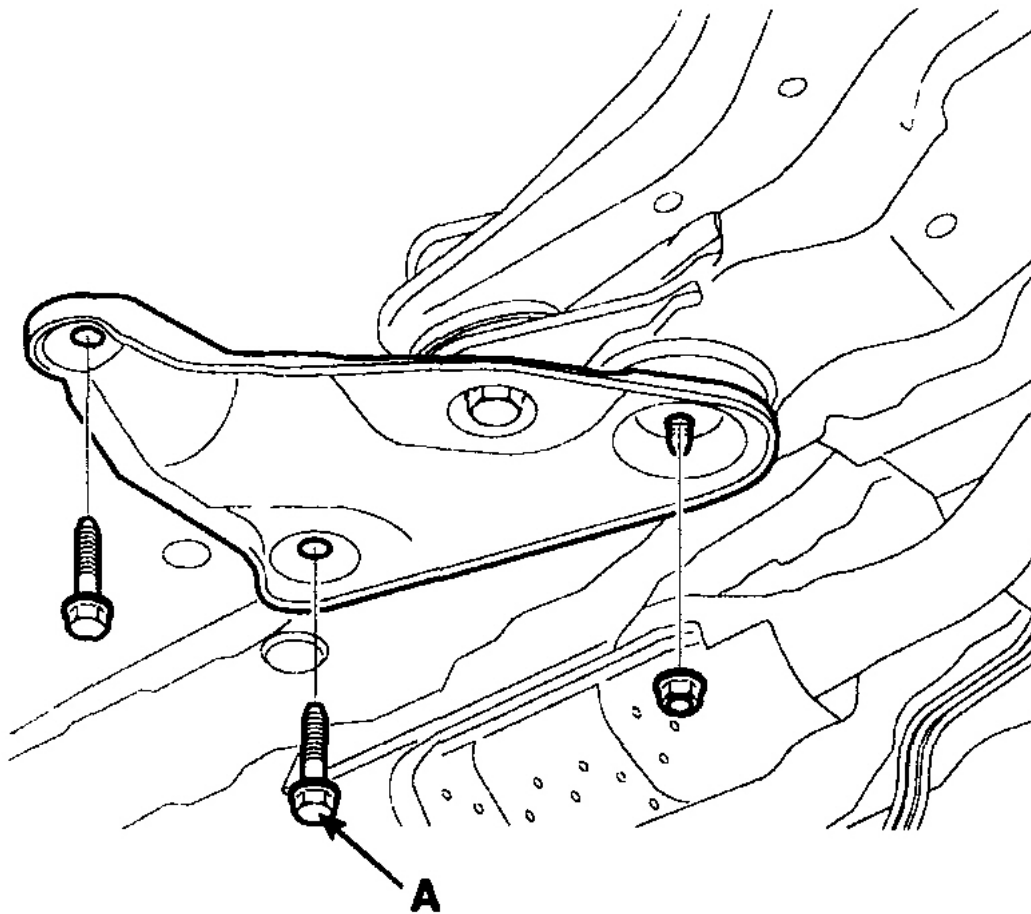

G03842413

Fig. 158: Removing Sub Frame Bolts
Courtesy of HYUNDAI MOTOR CO.

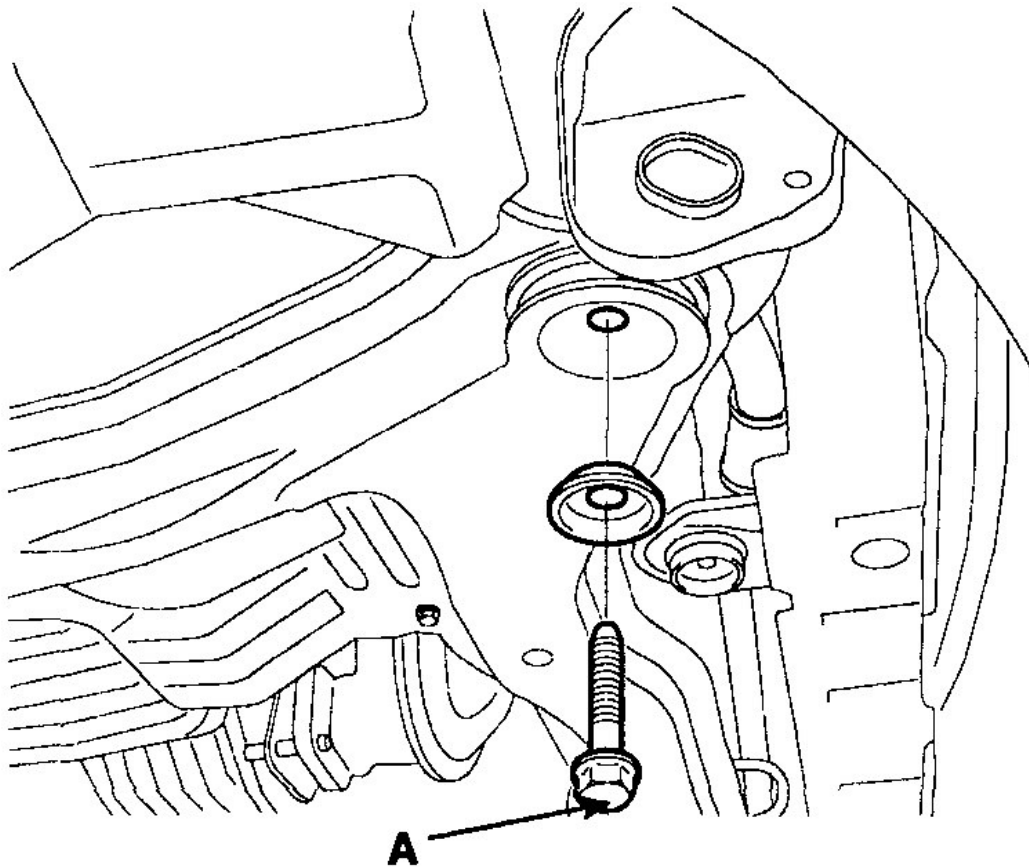
**G03842414**

Fig. 159: Removing Sub Frame Bolts
Courtesy of HYUNDAI MOTOR CO.

36. Remove the engine support fixture and the adapter.
37. Jack up the vehicle.

INSTALLATION

Installation is in the reverse order of removal.

Perform the following:

- Adjust the shift cable.
- Adjust the throttle cable.
- Refill the engine with engine oil.

- Refill the transaxle with fluid.
- Refill the radiator with engine coolant.
- Bleed air form the cooling system with the heater valve open.
- Clean the battery posts and cable terminals with sandpaper assemble them, then apply grease to prevent corrosion.
- Inspect for fuel leakage.

After assembling the fuel line, turn on the ignition switch (do not operate the starter) so that the from pump runs for approximately two seconds and fuel line pressurizes.


Repeat this operation two or three times, then check for fuel leakage at any point in the fuel line.

ENGINE BLOCK

COMPONENT

2006 Hyundai Elantra GLS


2006 ENGINE Engine Mechanical System (G4GC - GSL 2.0L) - Elantra

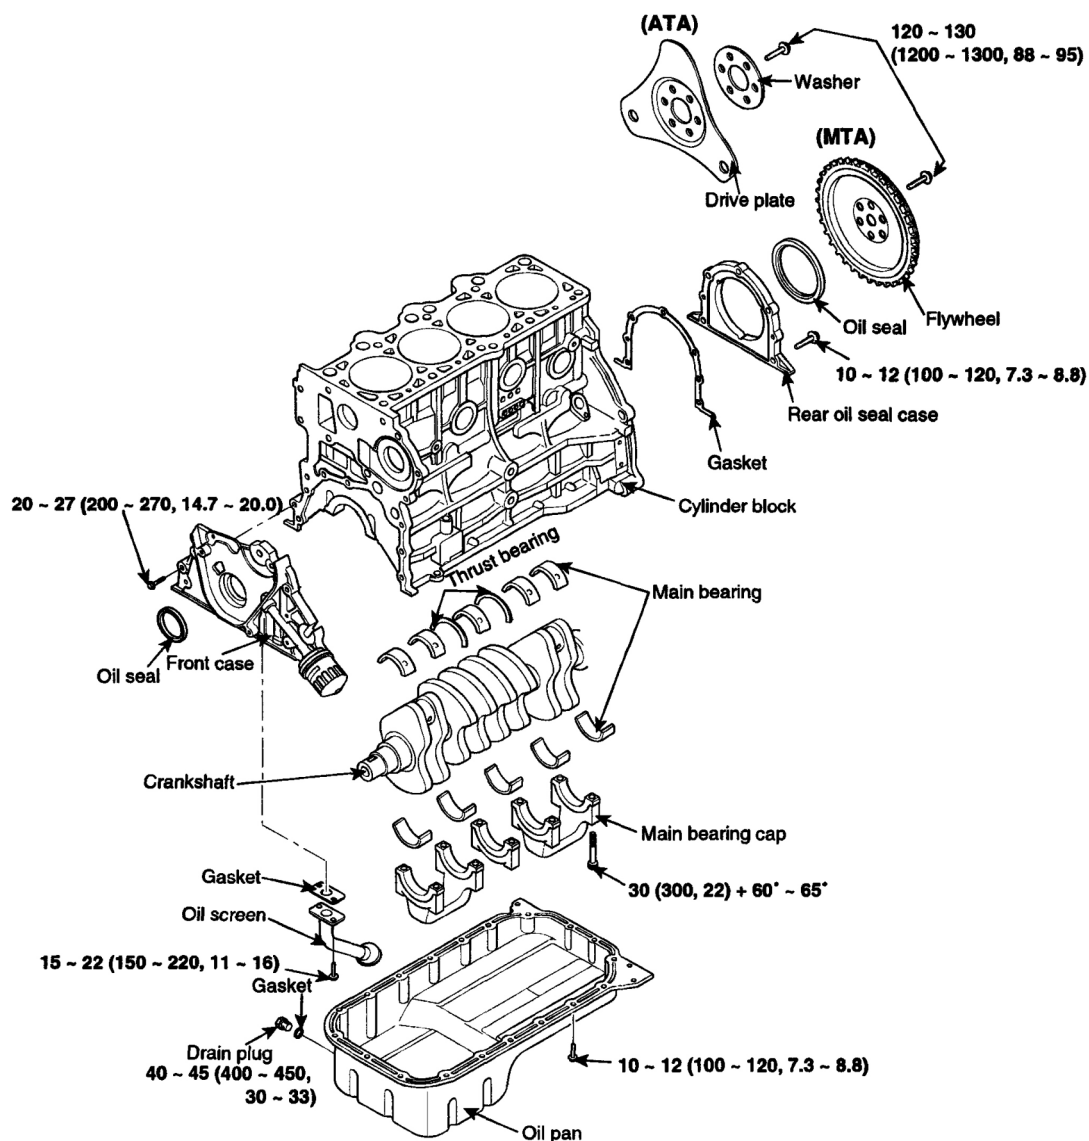

TORQUE : Nm (kgf.cm, lbf.ft)

G03842415

Fig. 160: Identifying Engine Block Components With Torque Specifications (1 Of 2)
Courtesy of HYUNDAI MOTOR CO.

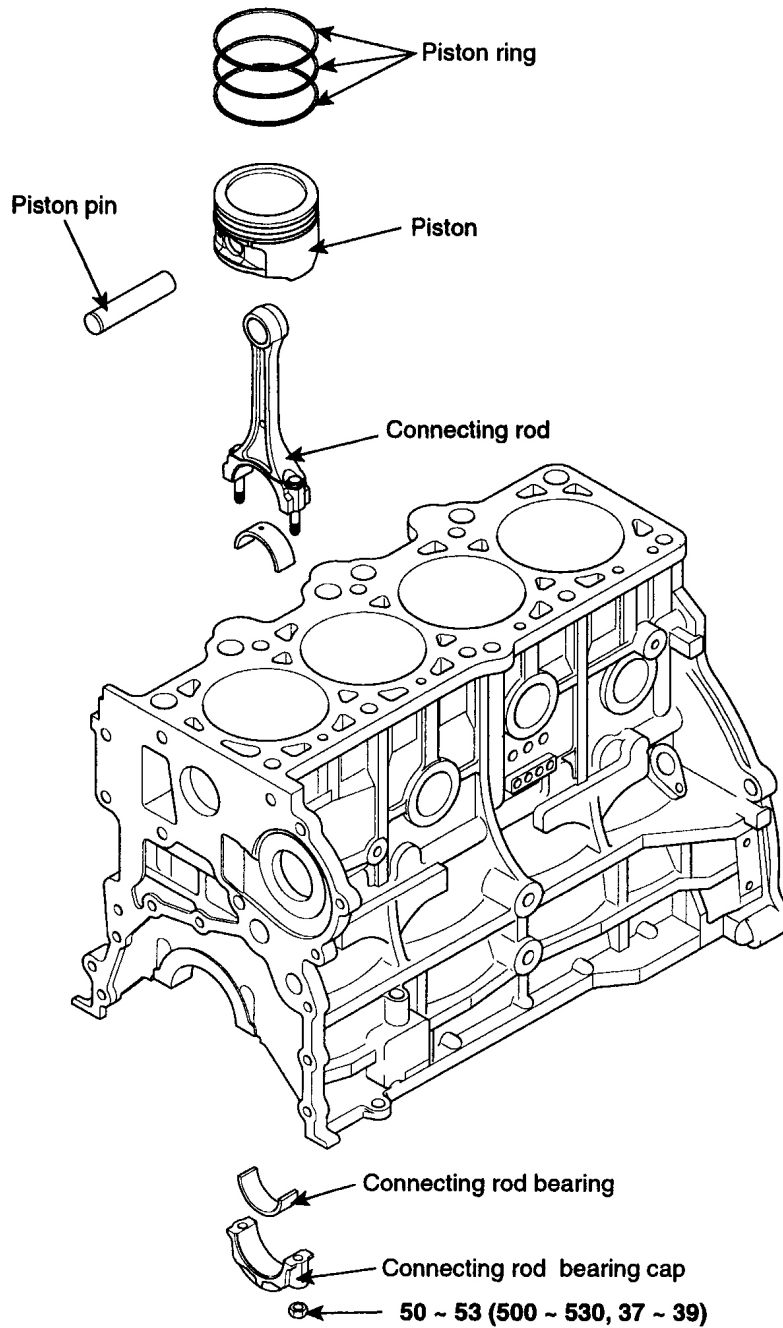

TORQUE : Nm (kgf.cm, lbf.ft)

G03842416

Fig. 161: Identifying Engine Block Components With Torque Specifications (2 Of 2)
Courtesy of HYUNDAI MOTOR CO.

DISASSEMBLY

1. M/T: remove flywheel.
2. A/T: remove drive plate.
3. Install engine to engine stand for disassembly.
4. Remove timing belt. (See **REMOVAL**).
5. Remove cylinder head. (See **REMOVAL**)
6. Remove oil level gauge assembly (A).


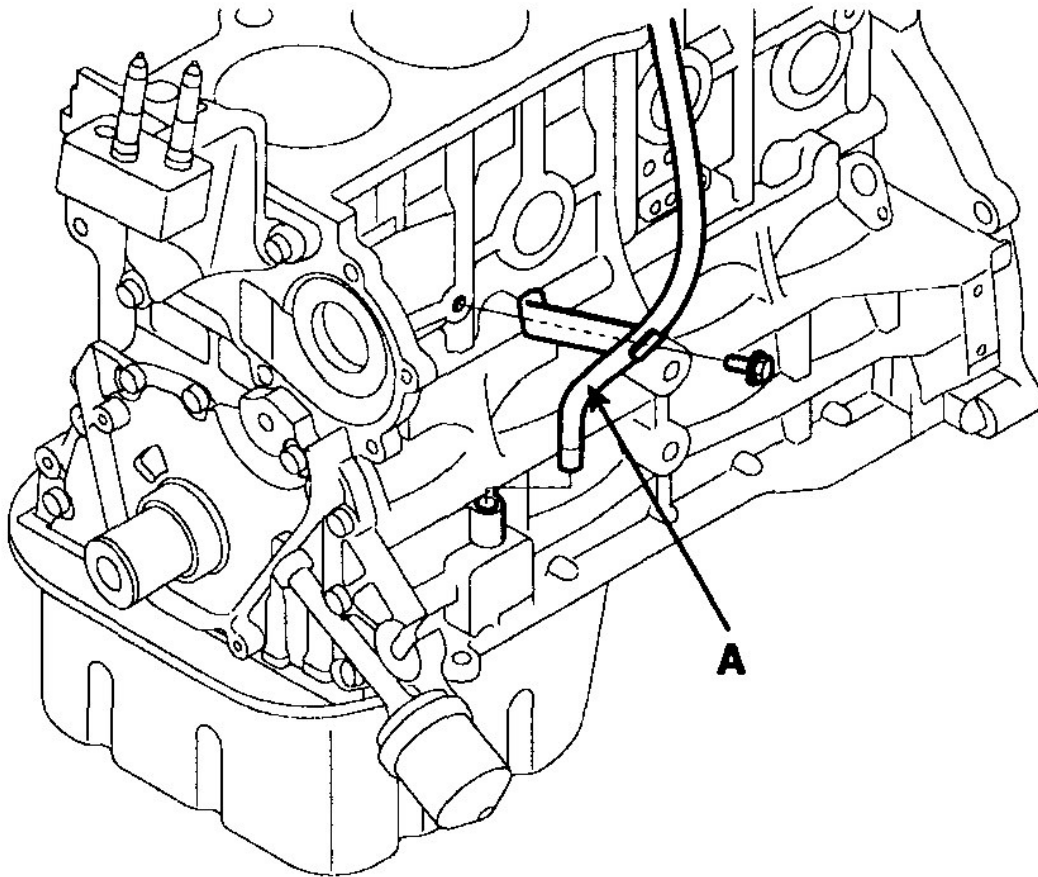
**G03842417**

Fig. 162: Removing Oil Level Gauge Assembly
Courtesy of HYUNDAI MOTOR CO.


7. Remove knock sensor (A).

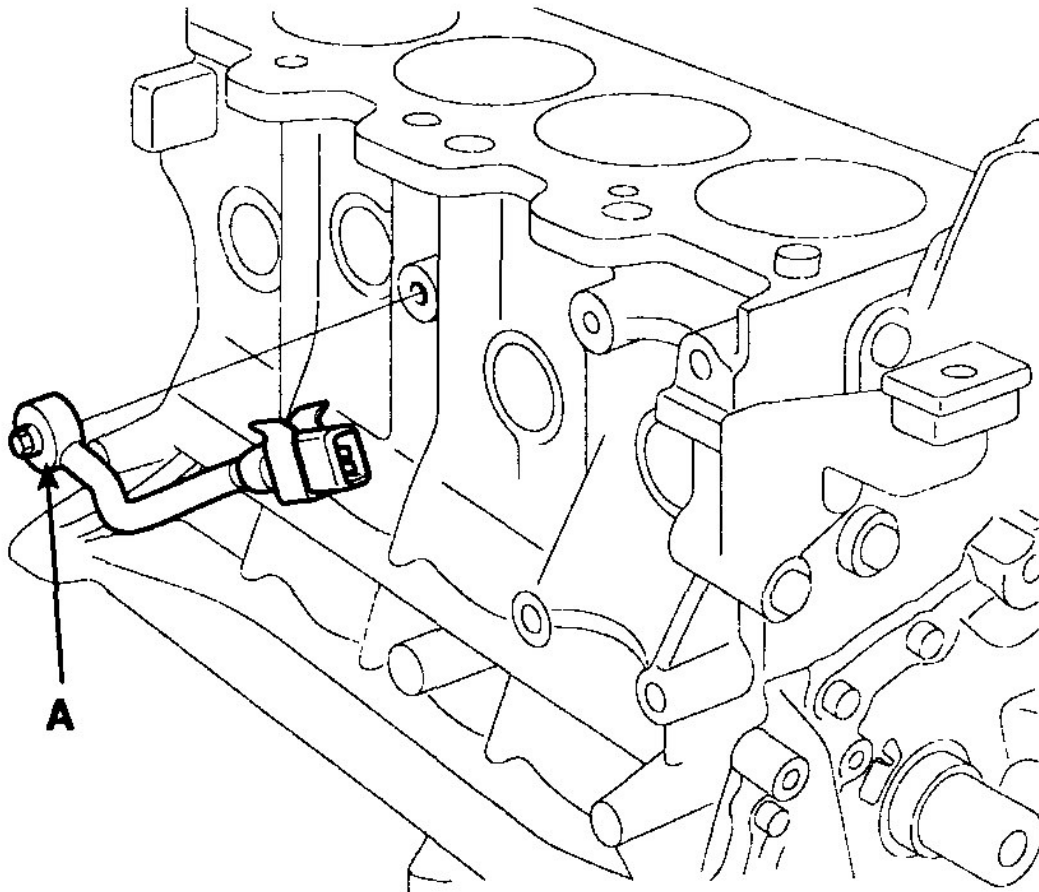

G03842418

Fig. 163: Removing Knock Sensor
Courtesy of HYUNDAI MOTOR CO.


8. Remove oil pressure sensor (A).

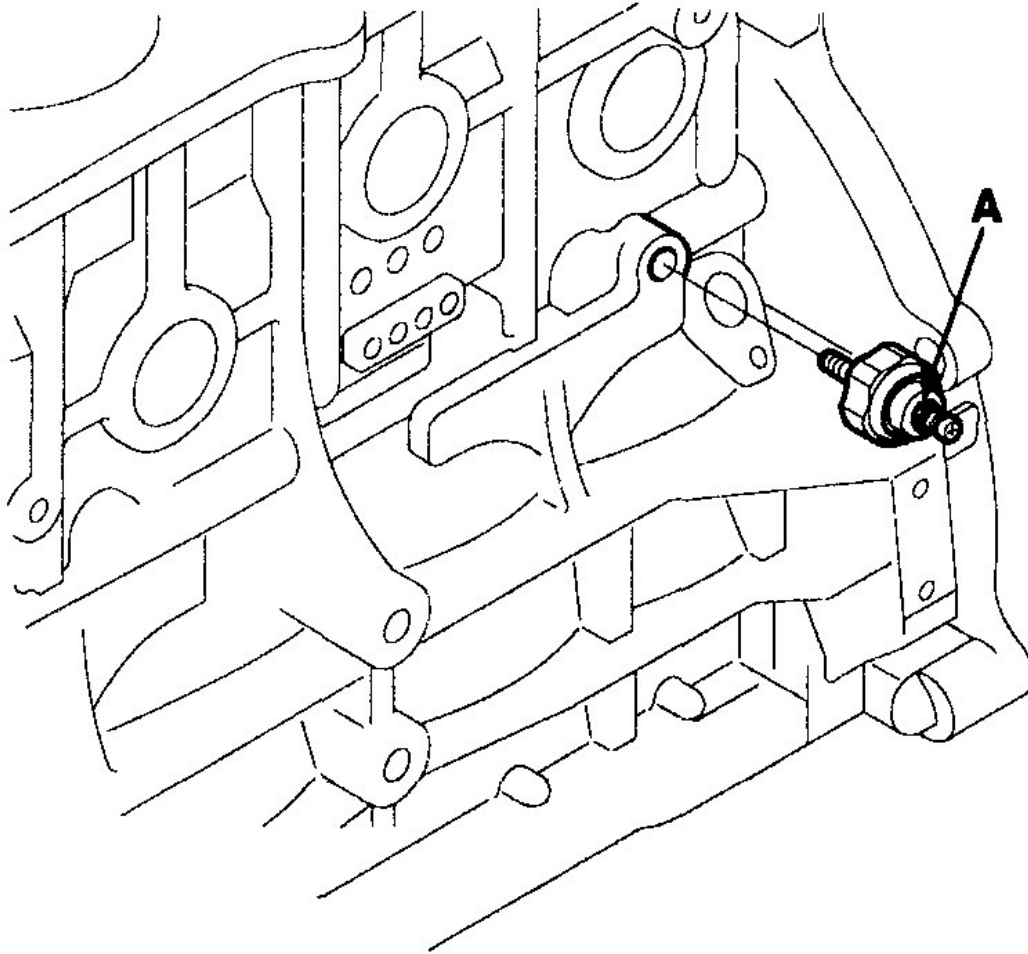

G03842419

Fig. 164: Removing Oil Pressure Sensor
Courtesy of HYUNDAI MOTOR CO.

9. Remove water pump. (See **REMOVAL**)
10. Remove oil pan (A).

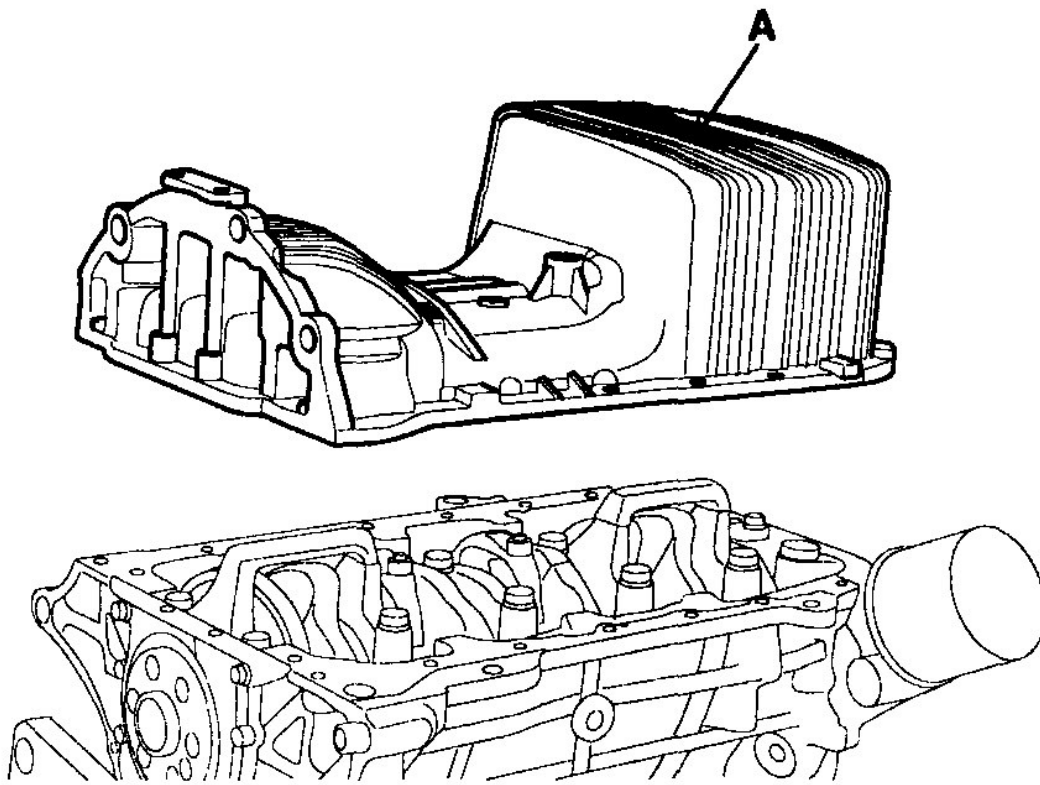


G03842420

Fig. 165: Removing Oil Pan

Courtesy of HYUNDAI MOTOR CO.

11. Remove oil screen. Remove the 2 bolts (C), oil screen (A) and gasket (B).

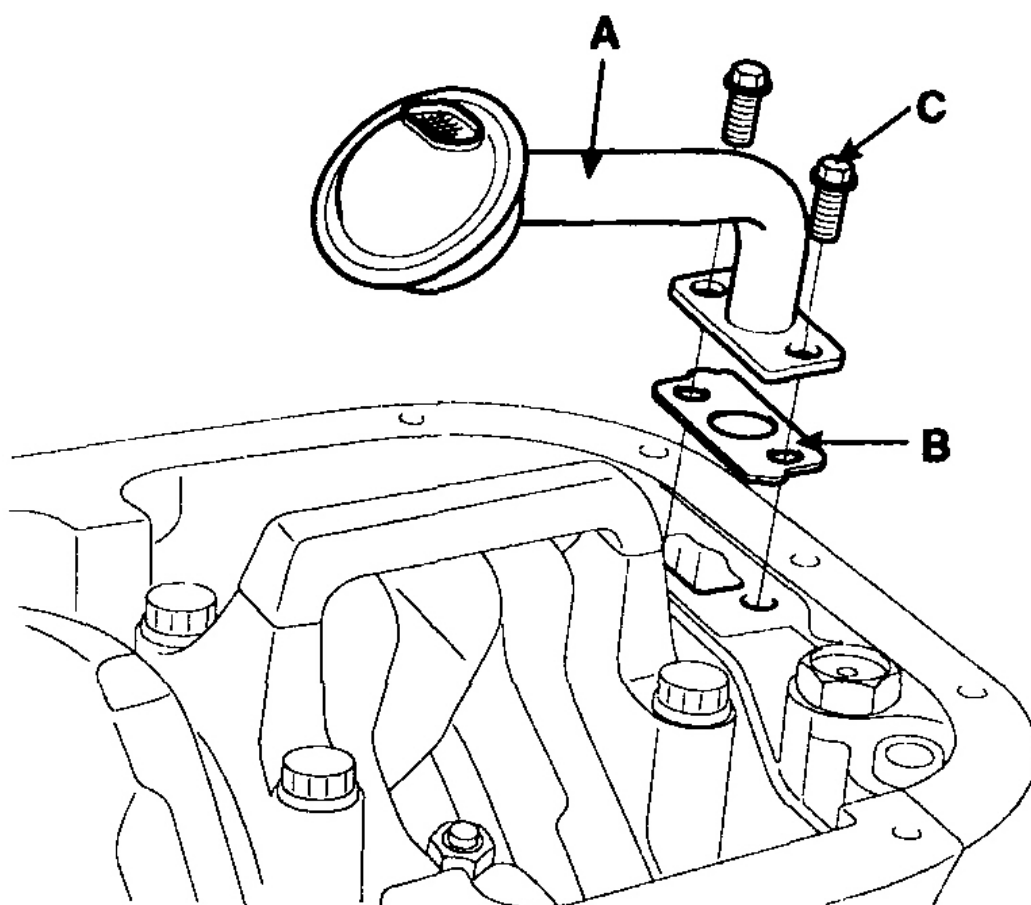

G03842421


Fig. 166: Removing Oil Screen, Bolts, Oil Screen And Gasket
Courtesy of HYUNDAI MOTOR CO.

12. Check the connecting rod end play. (See **INSPECTION**)
13. Remove the connecting rod caps and check oil clearance. (See **INSPECTION**)
14. Remove piston and connecting rod assemblies.
 1. Using a ridge reamer, remove all the carbon from the top of the cylinder.
 2. Push the piston, connecting rod assembly and upper bearing through the top of the cylinder block.

NOTE:

- Keep the bearings, connecting rod and cap together.
- Arrange the piston and connecting rod assemblies in the correct order.

15. Remove front case. (See **INSTALLATION**)
16. Remove rear oil seal case. Remove the 5 bolts (B) and rear oil seal case (A).

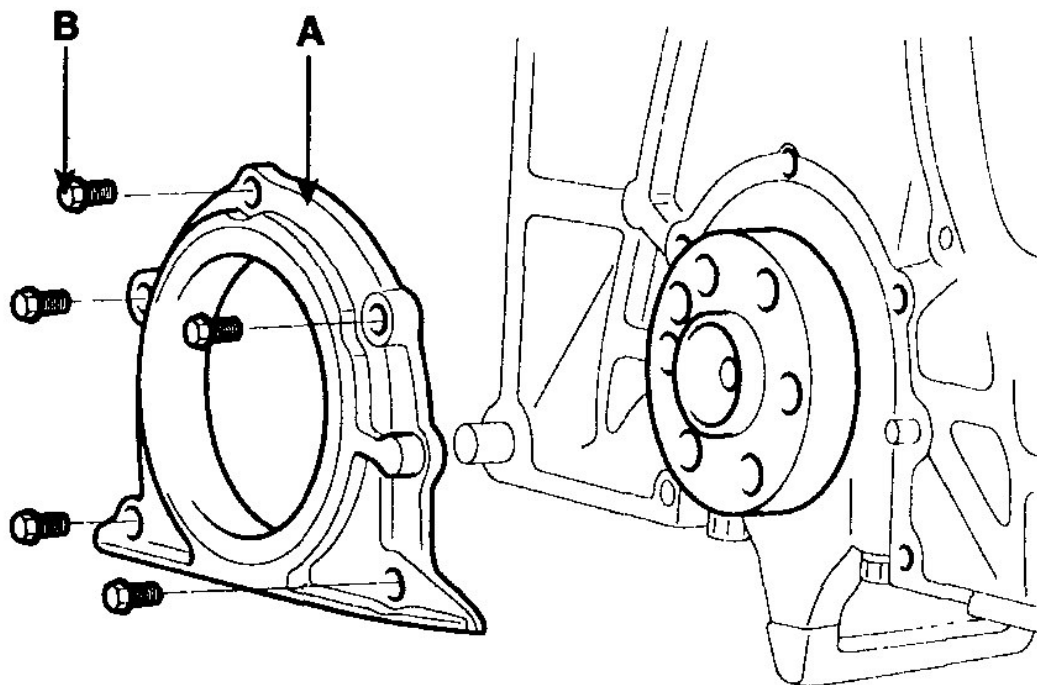


G03842422

Fig. 167: Removing Rear Oil Seal Case And Bolts
Courtesy of HYUNDAI MOTOR CO.

17. Remove crankshaft bearing cap and check oil clearance. (See **INSPECTION**)
18. Check the crankshaft end play.
19. Lift the crankshaft (A) out of the engine, being careful not to damage journals.

NOTE: Arrange the main bearings and trust washers in the correct order.

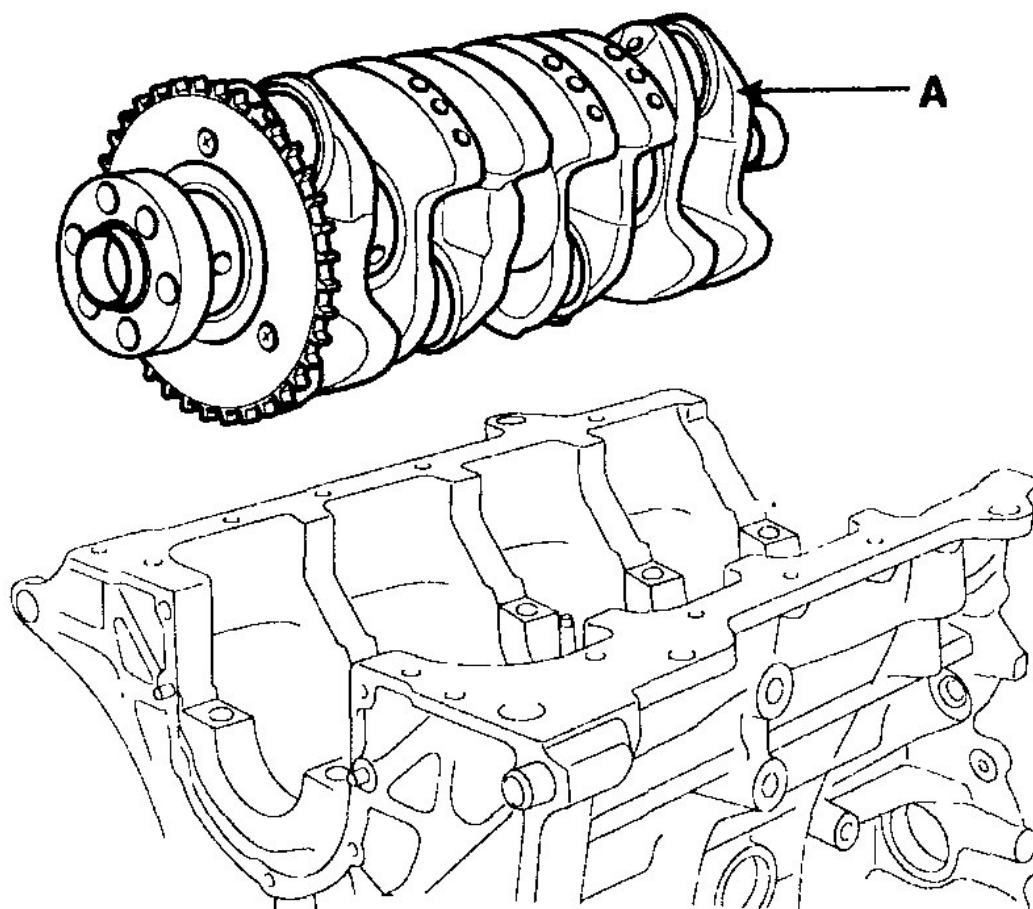

G03842423

Fig. 168: Removing Crankshaft
Courtesy of HYUNDAI MOTOR CO.

20. Check fit between piston and piston pin.

Try to move the piston back and forth on the piston pin. If any movement is felt, replace the piston and pin as a set.

21. Remove piston rings.
1. Using a piston ring expander, remove the 2 compression rings.
 2. Remove the 2 side rails and oil ring by hand.

NOTE: Arrange the piston rings in the correct order only.

22. Disconnect connecting rod from piston.

INSPECTION


CONNECTING ROD AND CRANKSHAFT

1. Check the connecting rod end play.

Using feeler gauge, measure the end play while moving the connecting rod back and forth.

Standard end play: 0.1~ 0.25 mm(0.004 ~ 0.010in.)

Maximum end play: 0.4 mm(0.016in.)

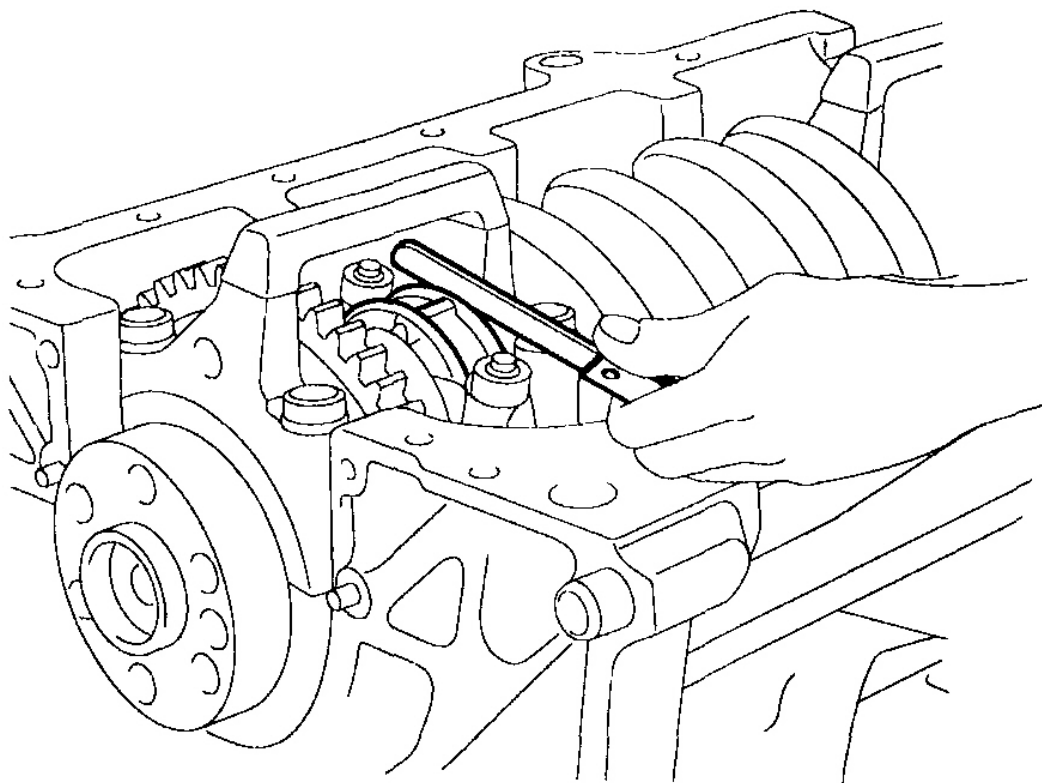

G03842424

Fig. 169: Measuring End Play While Moving Connecting Rod Back And Forth
Courtesy of HYUNDAI MOTOR CO.

- If out-of-tolerance, install a new connecting rod.
- If still out-of-tolerance, replace the crankshaft.

2. Check the connecting rod bearing oil clearance.
 1. Check the matchmarks on the connecting rod and cap are aligned to ensure correct reassembly.
 2. Remove the 2 connecting rod cap nuts.
 3. Remove the connecting rod cap and bearing half.
 4. Clean the crank pin and bearing.
 5. Place plastigage across the crank pin.
 6. Reinstall the bearing half and cap, and torque the nuts.

Tightening torque


50 ~ 53 Nm (500 ~ 530kgf.cm, 36.9 ~ 39lbf.ft)

NOTE: **Do not turn the crankshaft.**

7. Remove the 2 nuts, connecting rod cap and bearing half.
8. Measure the plastigage at its widest point.

Standard oil clearance

0.024 ~ 0.042 mm (0.0009 ~ 0.0017in.)

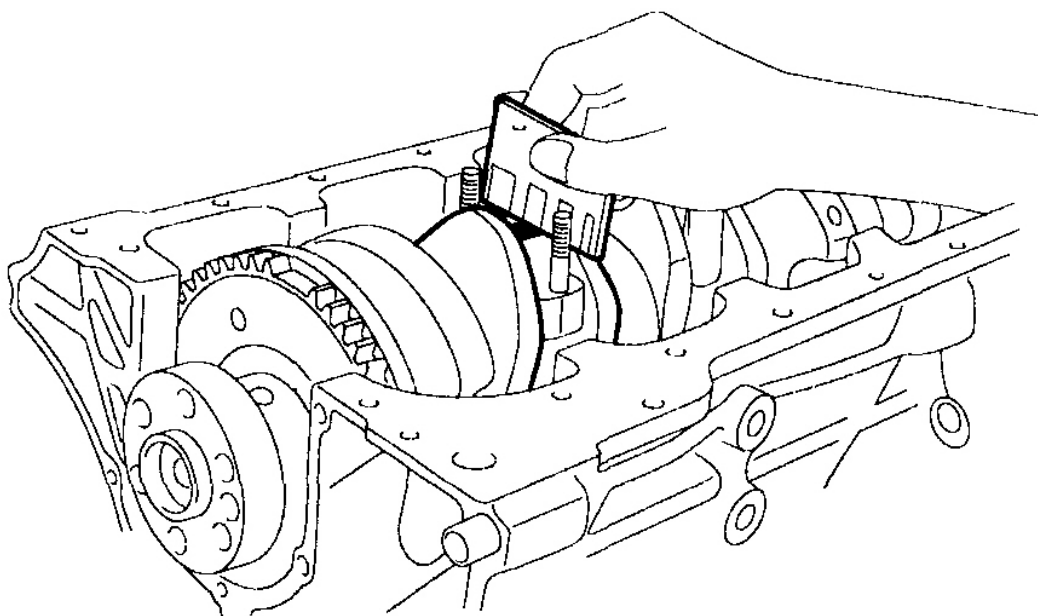

G03842425

Fig. 170: Measuring Plastigage At Its Widest Point
Courtesy of HYUNDAI MOTOR CO.


9. If the plastigage measures too wide or too narrow, remove the upper half of the bearing, install a new, complete bearing with the same color mark (select the color as shown in the next column), and recheck the clearance.

CAUTION: Do not file, shim, or scrape the bearings or the caps to adjust clearance.

10. If the plastigage shows the clearance is still incorrect, try the next larger or smaller bearing (the color listed above or below that one), and check clearance again.

NOTE: If the proper clearance cannot be obtained by using the appropriate larger or smaller bearings, replace the crankshaft and start over.

CAUTION: If the marks are indecipherable because of an accumulation of dirt and dust, do not scrub them with a wire brush or scraper. Clean them only with solvent or detergent.

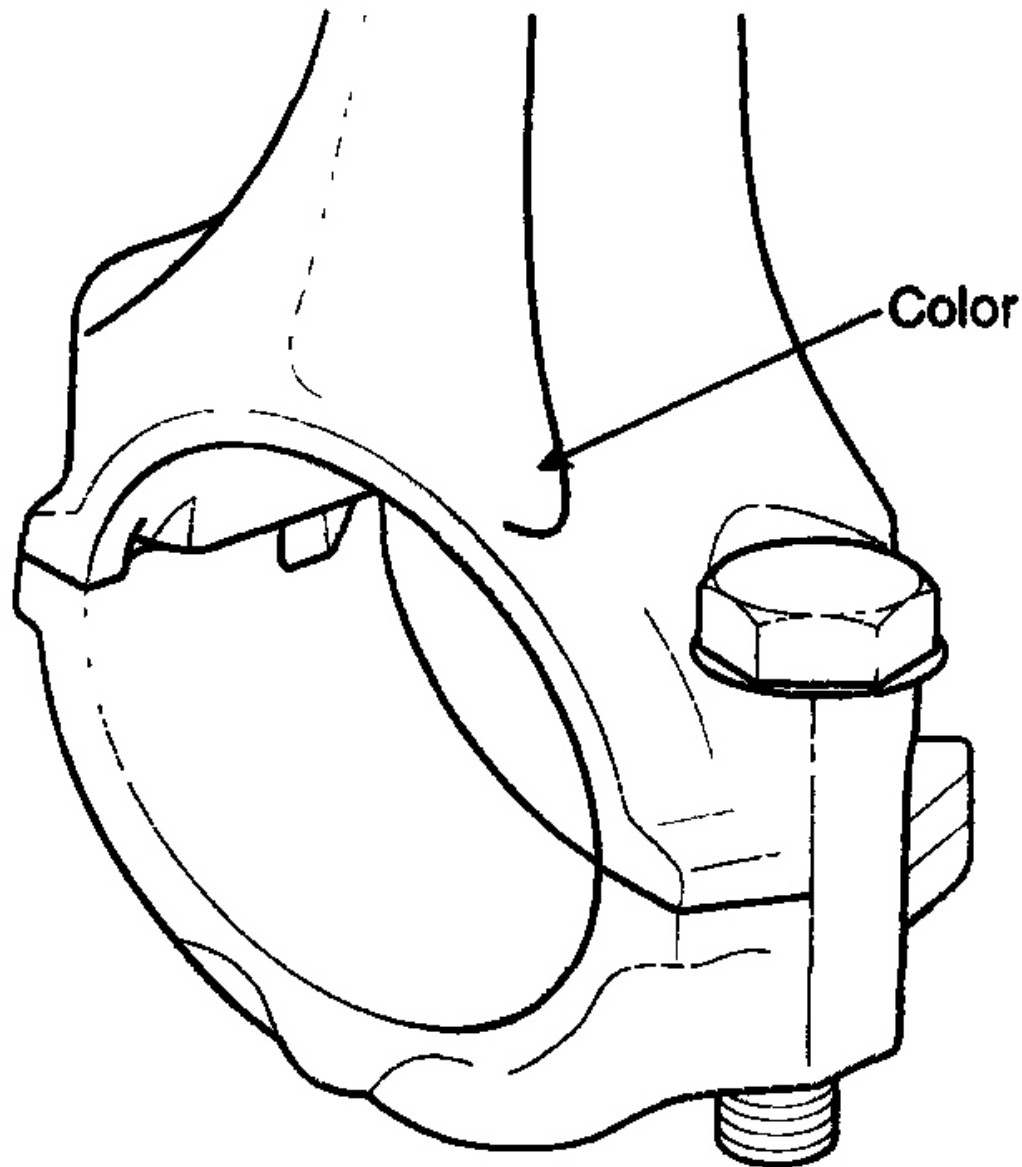

G03842426

Fig. 171: Identifying Connecting Rod Mark Location
Courtesy of HYUNDAI MOTOR CO.


CONNECTING ROD INNER DIAMETER

CLASS	MARK	INSIDE DIAMETER
a	WHITE	48.00 ~ 48.006 mm (1.8896~ 1.8899in.)

2006 Hyundai Elantra GLS

2006 ENGINE Engine Mechanical System (G4GC - GSL 2.0L) - Elantra

b	NONE	48.006~48.012 mm (1.8899~ 1.8902in.)
c	YELLOW	48.012~48.018 mm (1.8902 ~ 1.8904in.)

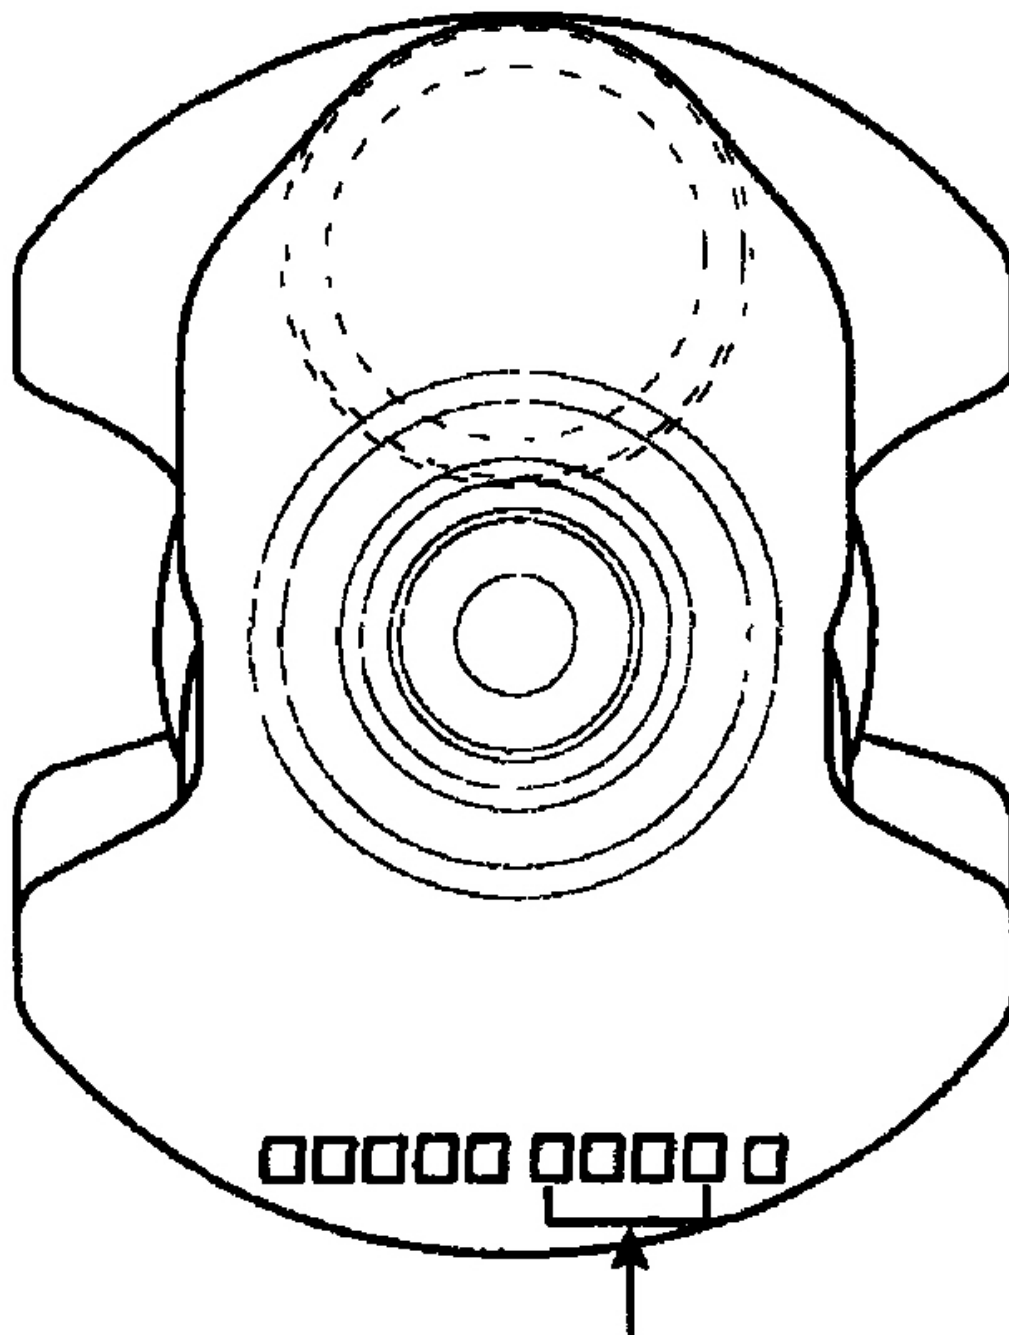

G03842427

Fig. 172: Identifying Crankshaft Pin Mark Location
Courtesy of HYUNDAI MOTOR CO.

CRANKSHAFT OUTSIDE DIAMETER

CLASS	MARK	OUTSIDE DIAMETER OF PIN
I	1	44.960 ~ 44.966 mm (1.7700 ~ 1.7703in.)
II	2	44.952 ~ 44.960 mm (1.7698~ 1.7700in.)
III	3	44.946 ~ 44.952 mm (1.7696 ~ 1.7698in.)

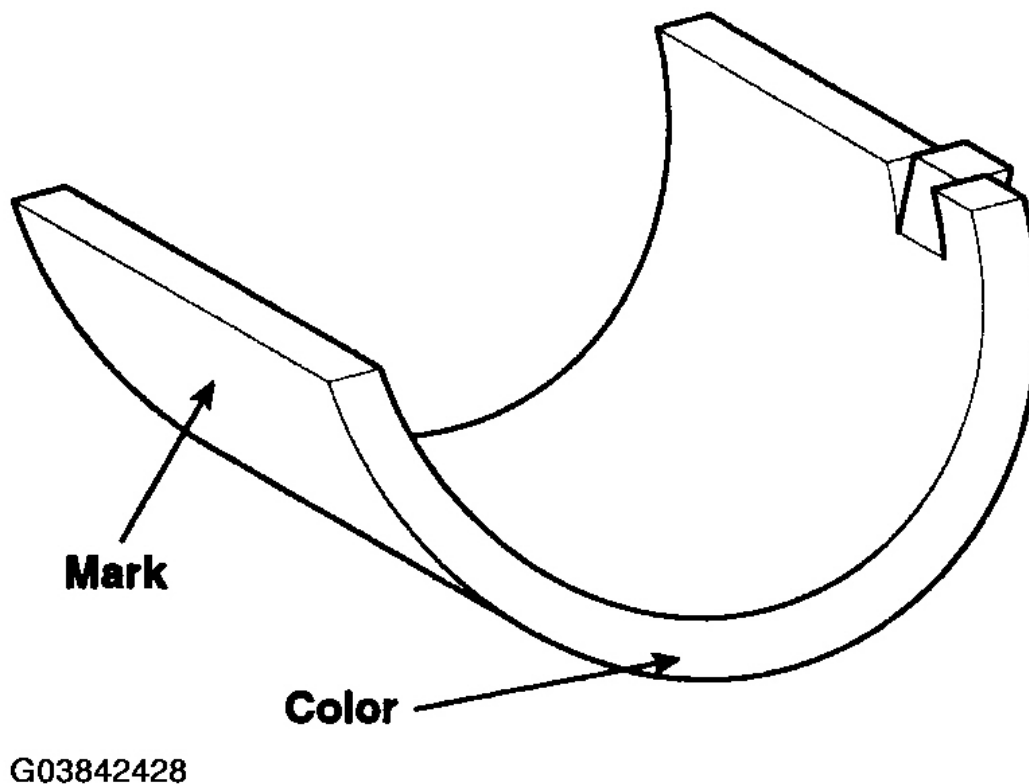


Fig. 173: Identifying Identification Mark (Connecting Rod Bearing)
Courtesy of HYUNDAI MOTOR CO.

CONNECTING ROD BEARING SPECIFICATIONS

CLASS	MARK	THICKNESS OF BEARING
AA	BLUE	1.514~ 1.517 mm (0.0596 ~ 0.0597in.)
A	BLACK	1.511 ~ 1.514 mm (0.0595 ~ 0.0596in.)
B	NONE	1.508~ 1.511 mm (0.0594 ~ 0.0595in.)
C	GREEN	1.505 ~ 1.508 mm (0.0593 ~ 0.0594in.)
D	YELLOW	1.502~ 1.505 mm (0.0591 ~ 0.0593in.)

11. Selection

CONNECTING ROD BEARING SELECTION

CRANKSHAFT INDEMNIFICATION MARK	CONNECTING ROD IDENTIFICATION MARK	ASSEMBLING CLASSIFICATION OF BEARING
I (YELLOW)	a (WHITE)	D (YELLOW)
	b (NONE)	C (GREEN)
	c (YELLOW)	B (NONE)
II (NONE)	a (WHITE)	C (GREEN)
	b (NONE)	B (NONE)
	c (YELLOW)	A (BLACK)
III (WHITE)	a (WHITE)	B (NONE)
	b (NONE)	A (BLACK)
	c (YELLOW)	AA (BLUE)

3. Check the crankshaft bearing oil clearance.
 1. To check main bearing-to-journal oil clearance, remove the main caps and bearing halves.
 2. Clean each main journal and bearing half with a clean shop towel.
 3. Place one strip of plastigage across each main journal.
 4. Reinstall the bearings and caps, then torque the bolts.

Tightening torque


30Nm (300kgf.cm, 22lbf.ft) + 60° - 65°

NOTE: Do not turn the crankshaft.

5. Remove the cap and bearing again, and measure the widest part of the plastigage.

Standard oil clearance

0.028 ~ 0.046 mm (0.0011 ~ 0.0018in.)

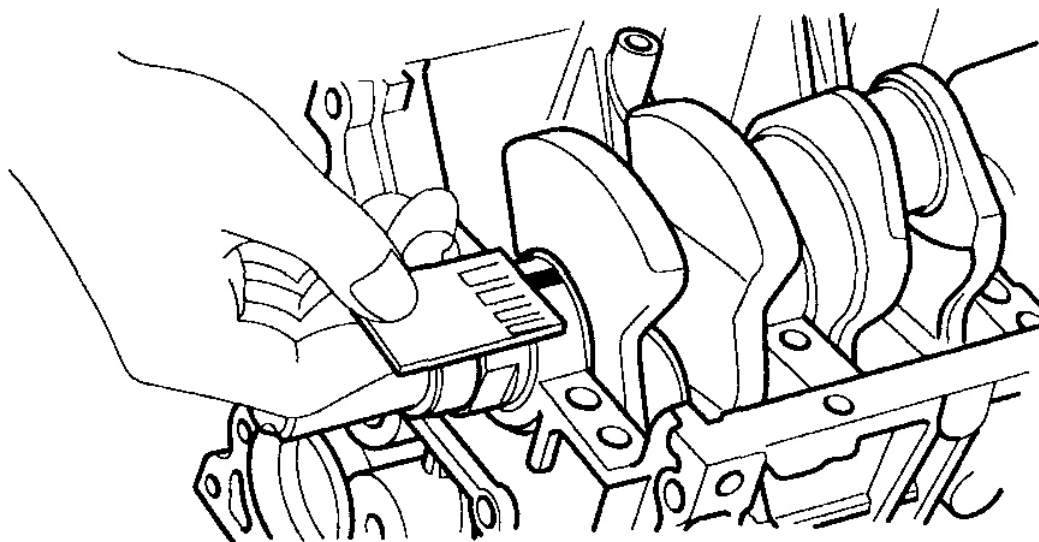

G03842429

Fig. 174: Measuring Widest Part Of Plastigage
Courtesy of HYUNDAI MOTOR CO.

6. If the plastigage measures too wide or too narrow, remove the upper half of the bearing, install a new, complete bearing with the same color mark (select the color as shown in the next column), and recheck the clearance.

CAUTION: Do not file, shim, or scrape the bearings or the caps to adjust clearance.

7. If the plastigage shows the clearance is still incorrect, try the next larger or smaller bearing (the color listed above or below that one), and check clearance again.

NOTE: If the proper clearance cannot be obtained by using the appropriate larger or smaller bearings, replace the crankshaft and start over.

CAUTION: If the marks are indecipherable because of an accumulation of dirt and dust, do not scrub them with a wire brush or scraper. Clean them only with solvent or detergent.

Connecting rods

1. When reinstalling, make sure that cylinder numbers put on the connecting rod and cap at disassembly match. When a new connecting rod is installed, make sure that the notches for holding the bearing in

place are on the same side.

2. Replace the connecting rod if it is damaged on the thrust faces at either end. Also if step wear or a severely rough surface of the inside diameter of the small end is apparent, the rod must be replaced as well.
3. Using a connecting rod aligning tool, check the rod for bend and twist. If the measured value is close to the repair limit, correct the rod by a press. Any connecting rod that has been severely bent or distorted should be replaced.

Allowable bend of connecting rod:

0.05 mm/100 mm (0.0020 in./3.94 in.) or less


Allowable twist of connecting rod:

0.1 mm/100 mm (0.0039 in./3.94 in.) or less

Crankshaft Bore Mark Location

Letters have been stamped on the end of the block as a mark for the size of each of the 5 main journal bores.

Use them, and the numbers or bar stamped on the crank (marks for main journal size), to choose the correct bearings.

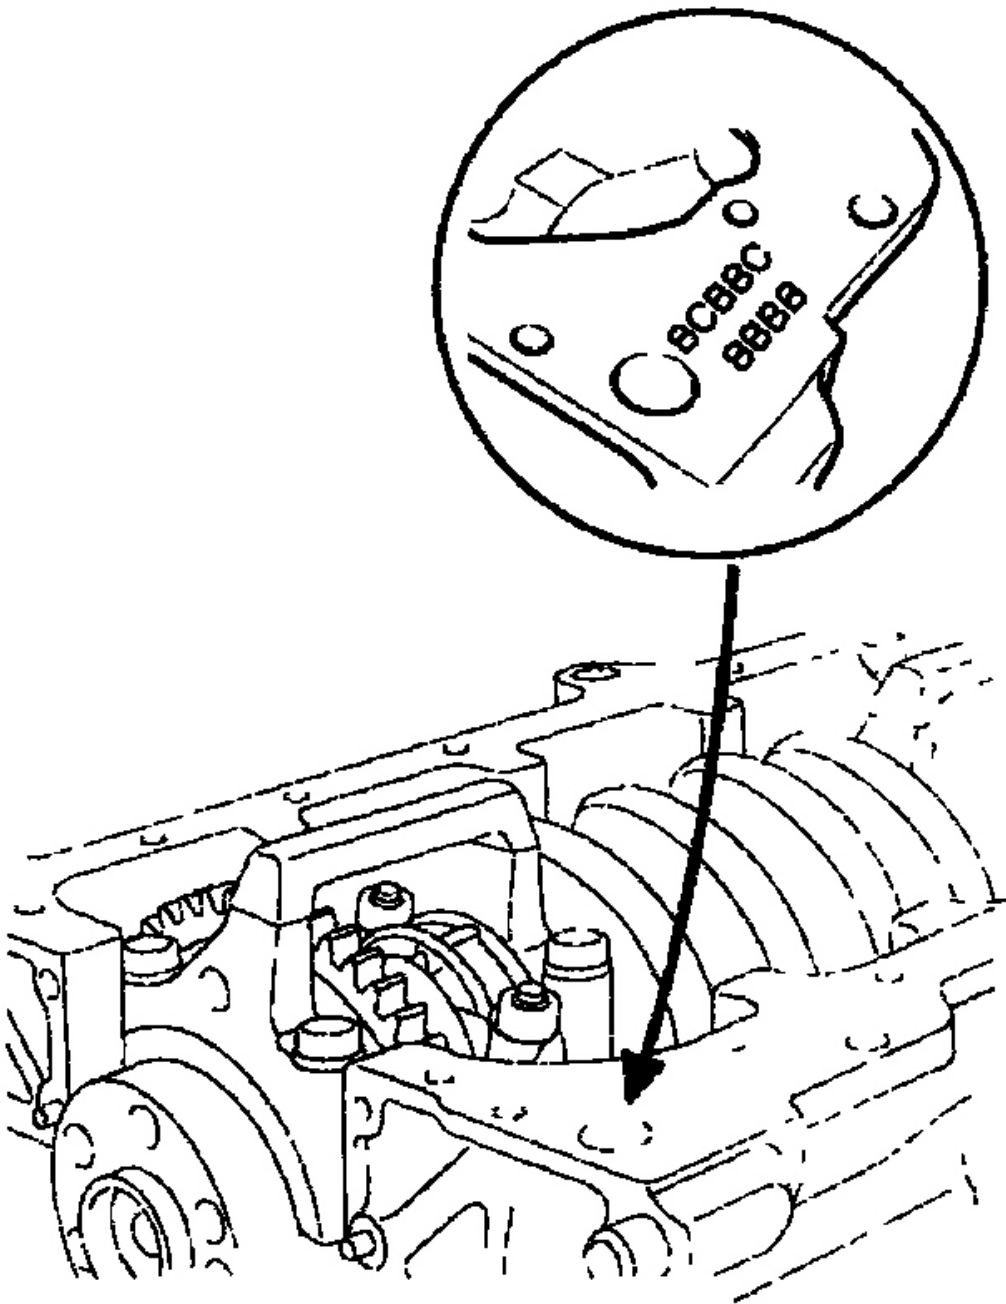


G03842430

Fig. 175: Locating Crankshaft Bore Mark
Courtesy of HYUNDAI MOTOR CO.

CYLINDER BLOCK INSIDE DIAMETER

CLASS	MARK	INSIDE DIAMETER
a	A	61.000 ~ 61.006 mm (2.4015~2.4018in.)
b	B	61.006~61.012 mm (2.4018~2.4020in.)
c	C	61.012~61.018 mm (2.4020 ~ 2.4023in.)

Crankshaft Journal Mark Location

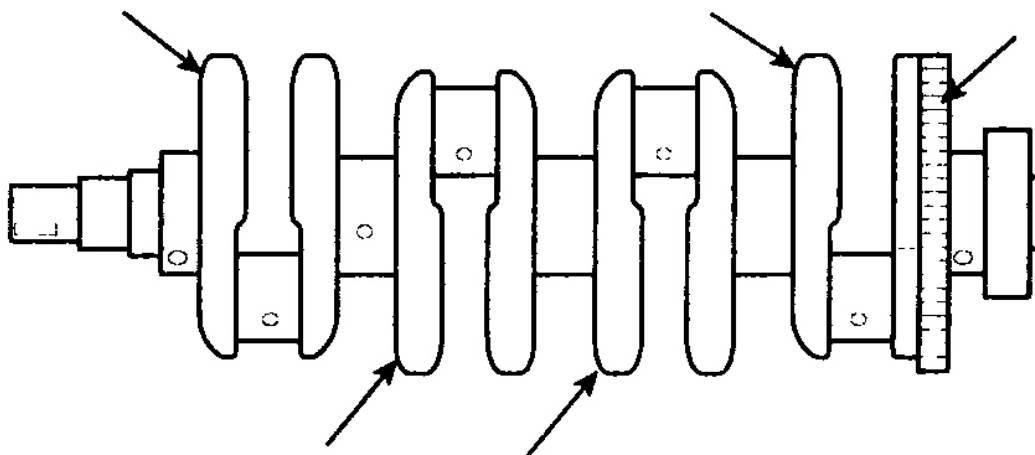


G03842431

Fig. 176: Identifying Crankshaft Journal Mark Location
Courtesy of HYUNDAI MOTOR CO.

CRANKSHAFT OUTSIDE DIAMETER

CLASS	MARK	OUTSIDE DIAMETER OF JOURNAL
I	YELLOW	56.956 ~ 56.962 mm (2.2423 ~ 2.2426in.)
II	NONE	56.948 ~ 56.956 mm (2.2420 ~ 2.2423in.)
III	WHITE	56.942 ~ 56.948 mm (2.2418 ~ 2.2420in.)

Place Of Identification Mark (Crankshaft Bearing)

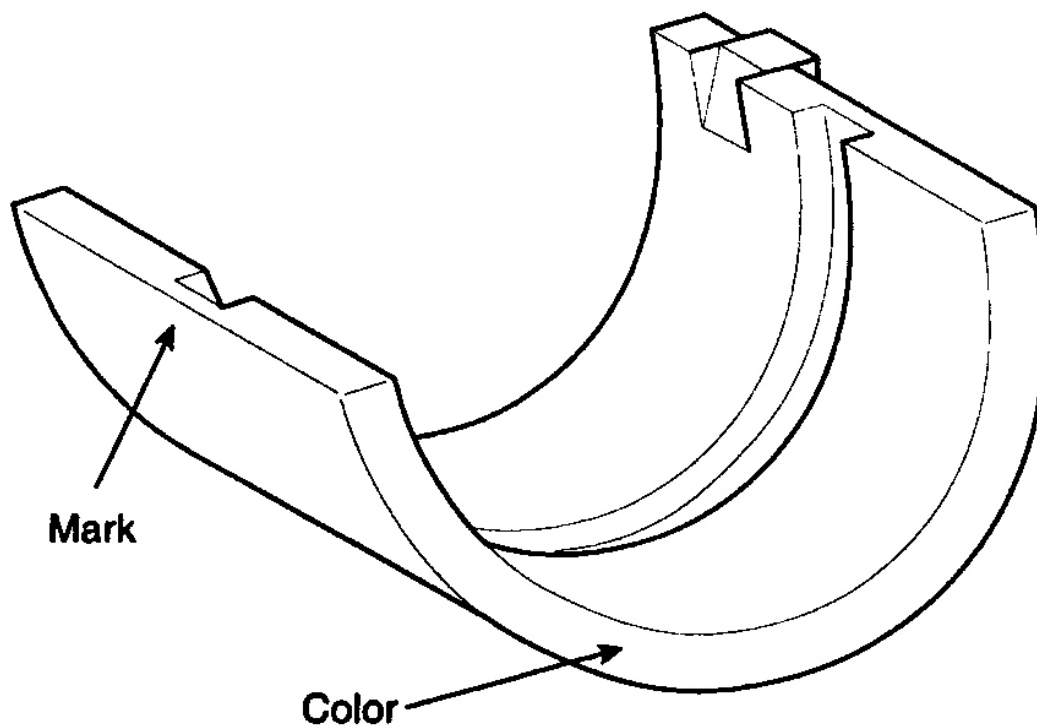

G03842432

Fig. 177: Identifying Crankshaft Bearing Identification Mark
 Courtesy of HYUNDAI MOTOR CO.

CRANKSHAFT BEARING SPECIFICATION

CLASS	MARK	THICKNESS OF BEARING
AA	BLUE	2.014~2.017 mm (0.0793 ~ 0.0794in.)
A	BLACK	2.011 ~ 2.014 mm (0.0791 ~ 0.0793in.)
B	NONE	2.008~2.011 mm (0.0790 ~ 0.0791 in.)
C	GREEN	2.005 ~ 2.008 mm (0.0789 ~ 0.0790in.)
D	YELLOW	2.002 ~ 5.005 mm (0.0788 ~ 0.0789in.)

CRANKSHAFT BEARING SELECTION

CRANKSHAFT IDENTIFICATION MARK	CRANKSHAFT BORE IDENTIFICATION MARK	ASSEMBLING CLASSIFICATION OF BEARING
I (YELLOW)	a (A)	D (YELLOW)
	b (B)	C (GREEN)
	c (C)	B (NONE)

II (NONE)	a (A)	C (GREEN)
	b (B)	B (NONE)
	c (C)	A (BLACK)
III (WHITE)	a (A)	B (NONE)
	b (B)	A (BLACK)
	c (C)	AA (BLUE)


4. Check crankshaft end play.

Using a dial indicator, measure the thrust clearance while prying the crankshaft back and forth with a screwdriver.

Standard end play

0.06 ~ 0.26 mm (0.0023 ~ 0.010in.)

Limit: 0.30 mm (0.0118in.)

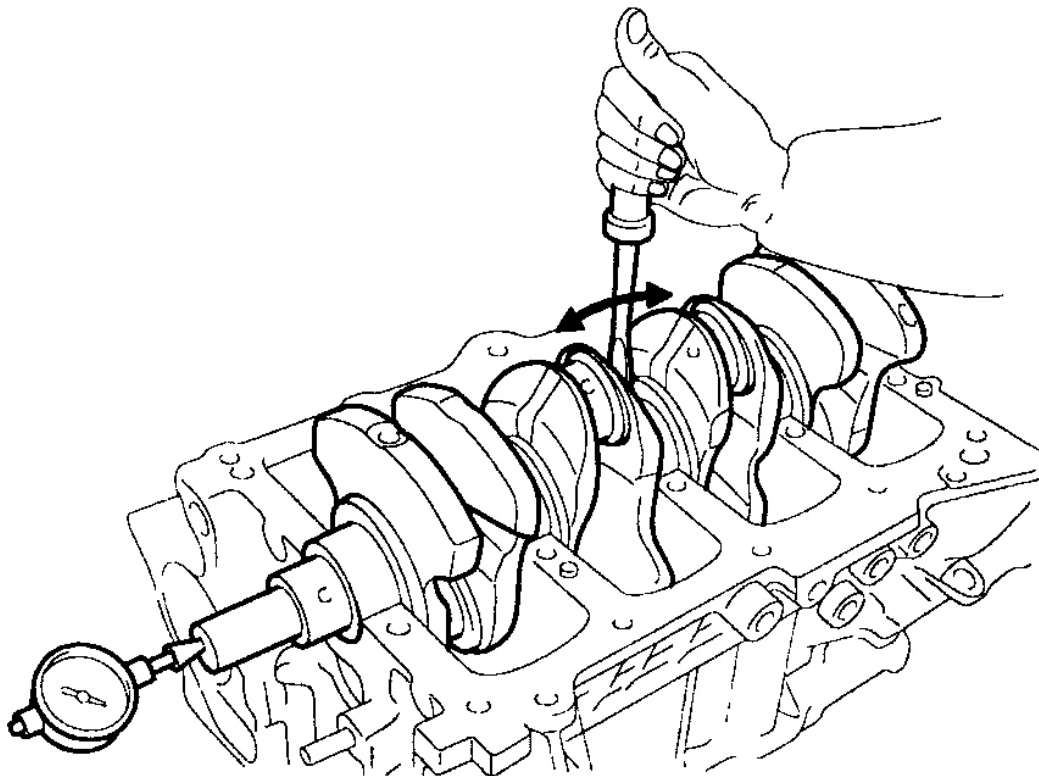

G03842433

Fig. 178: Checking Crankshaft End Play
Courtesy of HYUNDAI MOTOR CO.

If the end play is greater than maximum, replace the thrust bearings as a set.

Thrust bearing thickness


2.44 ~ 2.47 mm(0.096 ~ 0.097in.)

5. Inspect main journals and crank pins

Using a micrometer, measure the diameter of each main journal and crank pin.

Main journal diameter: 57 mm (2.244in.)

Crank pin diameter: 45 mm (1.77in.)

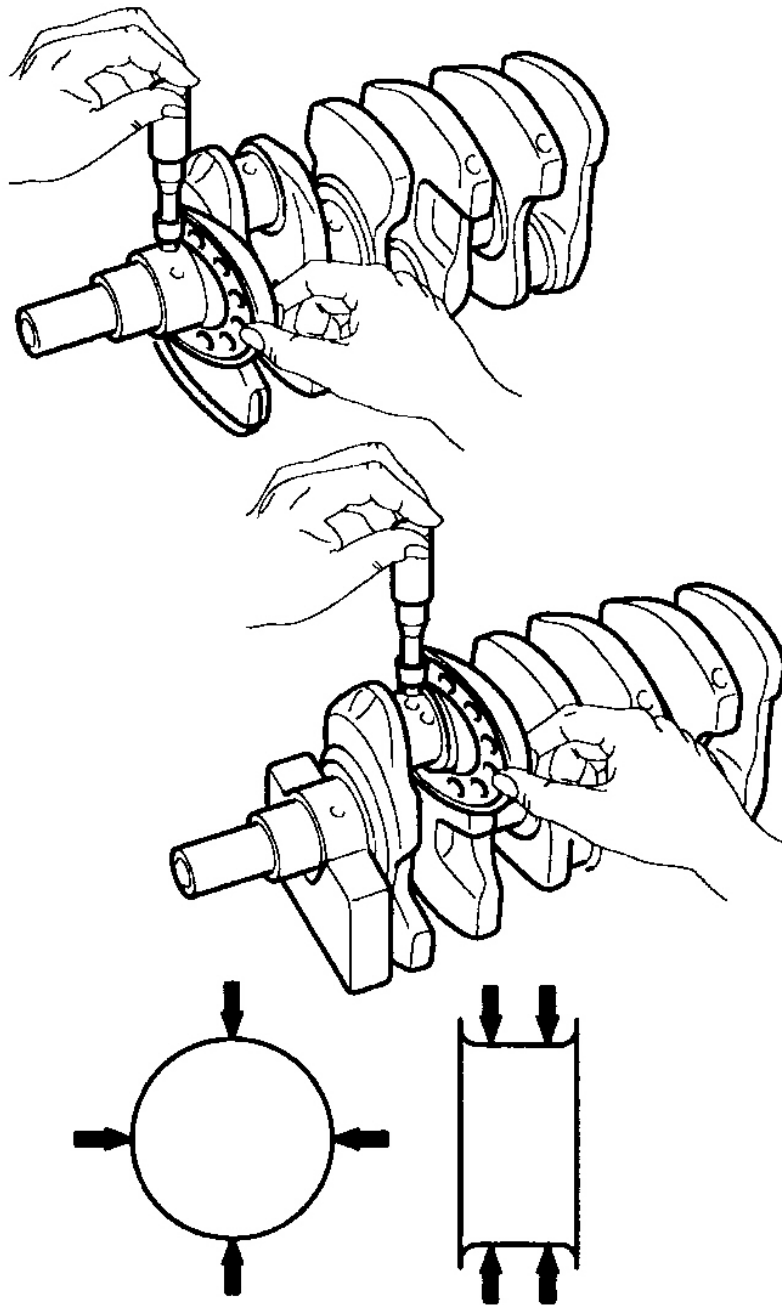

G03842434

Fig. 179: Inspecting Main Journals And Crank Pins
Courtesy of HYUNDAI MOTOR CO.

CYLINDER BLOCK

1. Remove gasket material.

Using a gasket scraper, remove all the gasket material from the top surface of the cylinder block.

2. Clean cylinder block

Using a soft brush and solvent, thoroughly clean the cylinder block.


3. Inspect top surface of cylinder block for flatness.

Using a precision straight edge and feeler gauge, measure the surface contacting the cylinder head gasket for warpage.

Flatness of cylinder block gasket surface

Standard: Less than 0.03 mm (0.0012 in.)

Limit: 0.05 mm (0.0020 in.)

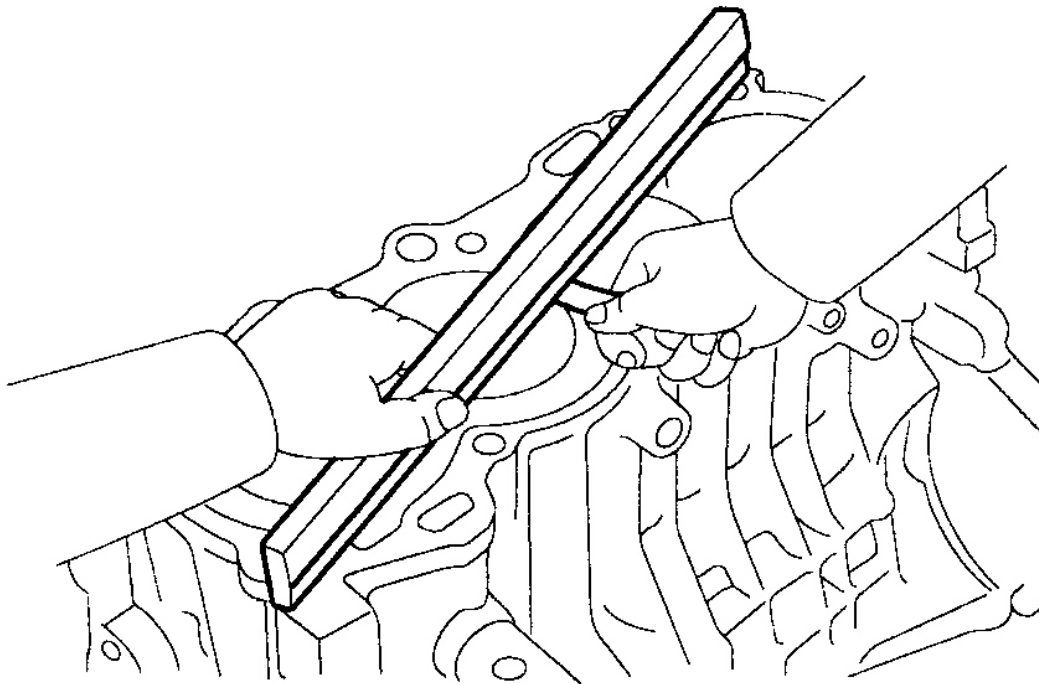

G03842435

Fig. 180: Measuring Surface Contacting Cylinder Head Gasket For Warpage
Courtesy of HYUNDAI MOTOR CO.

4. Inspect cylinder bore diameter


Visually check the cylinder for vertical scratches. If deep scratches are present, replace the cylinder block.

5. Inspect cylinder bore diameter

Using a cylinder bore gauge, measure the cylinder bore diameter at position in the thrust and axial directions.

Standard diameter


82.00 ~ 82.03 mm (3.2283 ~ 3.2295in.)

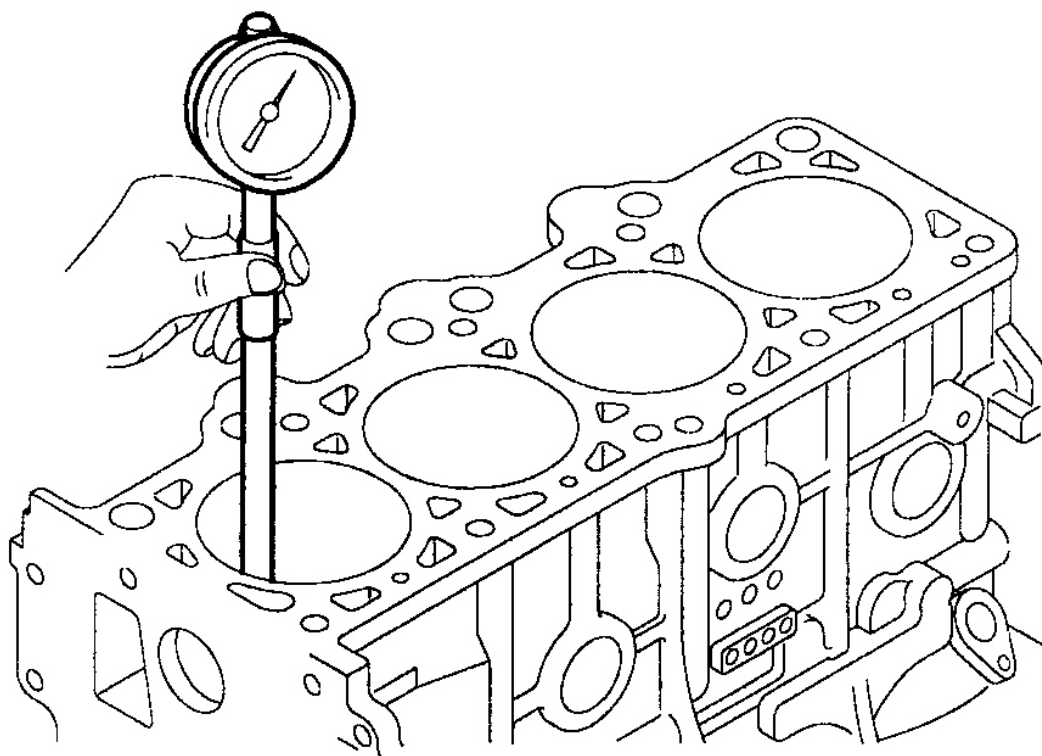

G03842436

Fig. 181: Inspecting Cylinder Bore Diameter
Courtesy of HYUNDAI MOTOR CO.

6. Check the cylinder bore size code on the cylinder block bottom face.

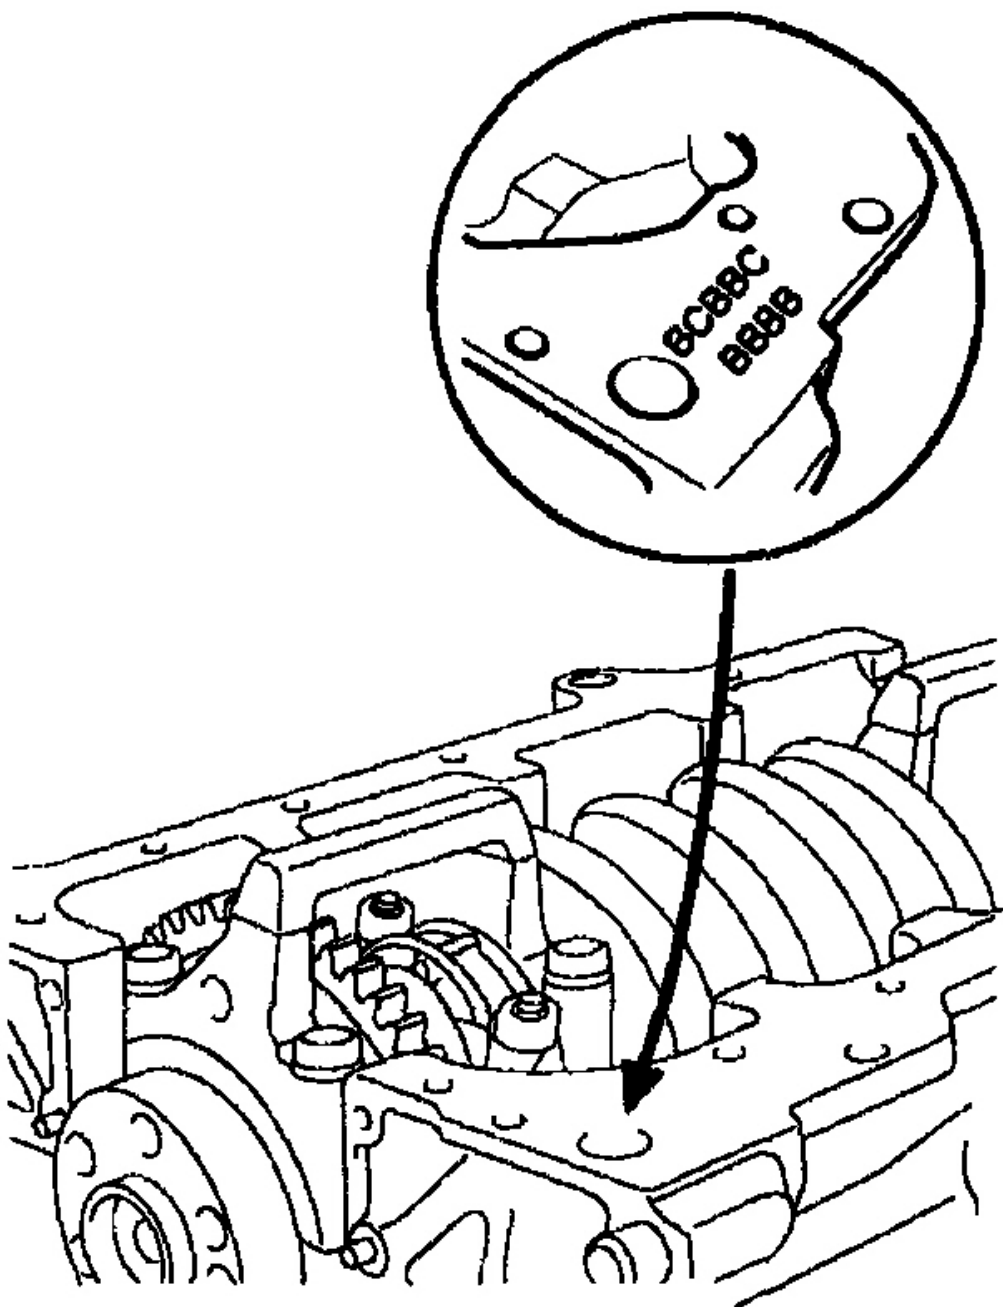


G03842437

Fig. 182: Checking Cylinder Bore Size Code
Courtesy of HYUNDAI MOTOR CO.

CYLINDER BORE INNER DIAMETER

Class	Cylinder bore inner diameter	Size code
A	82.00 ~ 82.01 mm (3.2283 ~ 3.2287in.)	A
B	82.01 ~ 82.02 mm (3.2287 ~ 3.2291 in.)	B
C	82.02 ~ 82.03 mm (3.2291 ~ 3.2295in.)	C

7. Check the piston size code (A) on the piston top face

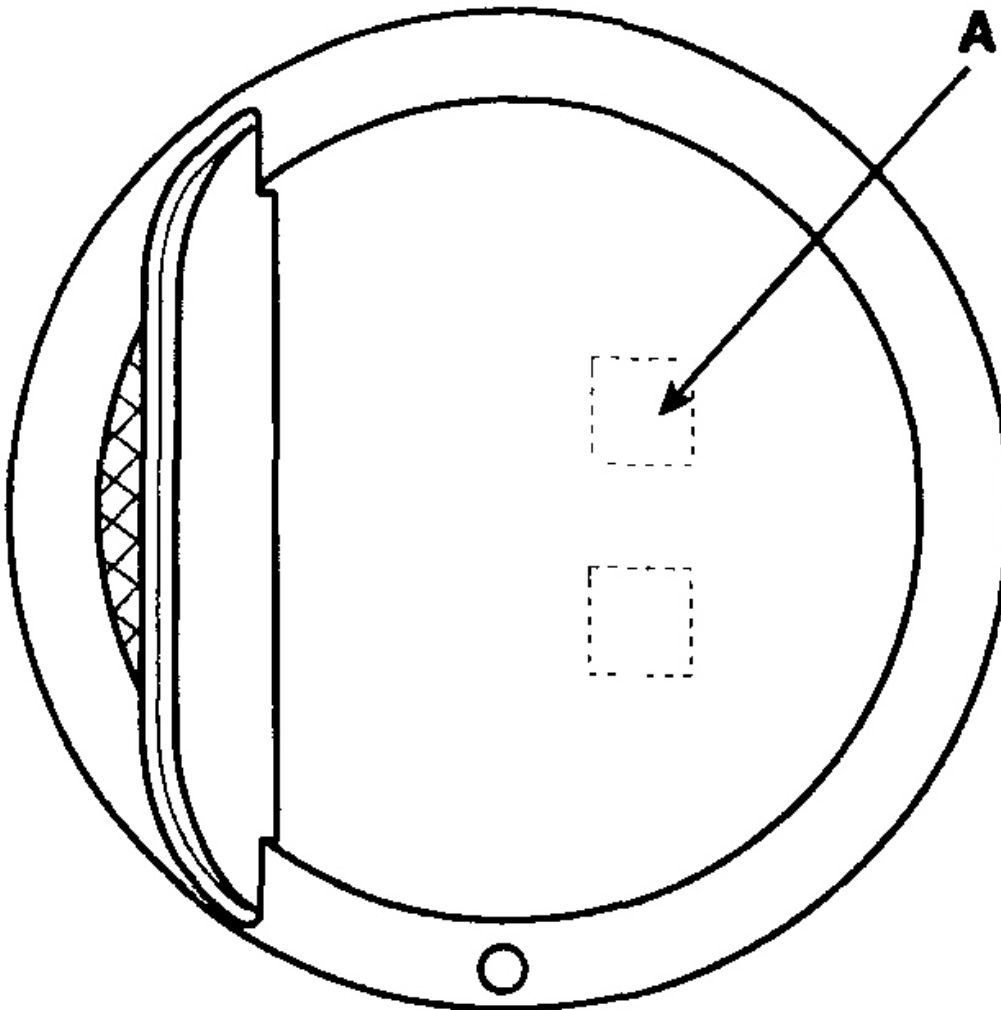

G03842438

Fig. 183: Checking Piston Size Code
Courtesy of HYUNDAI MOTOR CO.

NOTE: Stamp the grade mark of basic diameter with rubber stamp

CYLINDER BORE INNER DIAMETER

Class	Cylinder bore inner diameter	Size code
A	81.97 ~ 81.98 mm (3.2271 ~ 3.2275in.)	A
B	81.98 ~ 81.99 mm (3.2275 ~ 3.2279in.)	None
C	81.99 ~ 82.00 mm (3.2279 ~ 3.2283in.)	C

- Select the piston related to cylinder bore class.

Clearance

0.02 ~ 0.04 mm (0.00078 ~ 0.00157 in.)

Boring cylinder

- Oversize pistons should be selected according to the largest bore cylinder.

PISTON SPECIFICATION

Identification Mark	Size
0.25	0.25 mm (0.010in.)
0.50	0.50 mm (0.020in.)

NOTE: The size of piston is stamped on top of the piston.

- Measure the outside diameter of the piston to be used.
- According to the measured O.D., calculate the new bore size.

New bore size = Piston O.D + 0.02 to 0.04 mm (0.0008 to 0.0016 in.) (clearance between piston and cylinder) - 0.01 mm (0.0004 in.) (honing margin.)

- Bore each of the cylinders to the calculated size.

CAUTION: To prevent distortion that may result from temperature rise during honing, bore the cylinder holes in the firing order.

- Hone the cylinders, finishing them to the proper dimension (piston outside diameter + gap with cylinder).
- Check the clearance between the piston and cylinder.

Standard: 0.02-0.04 mm (0.0008-0.0016 in.)

NOTE: When boring the cylinders, finish all of the cylinders to the same oversize. Do not bore only one cylinder to the oversize.

PISTON AND RINGS**1. Clean piston**


1. Using a gasket scraper, remove the carbon from the piston top.
2. Using a groove cleaning tool or broken ring, clean the piston ring grooves.
3. Using solvent and a brush, thoroughly clean the piston.

NOTE: **Do not use a wire brush.**

2. The standard measurement of the piston outside diameter is taken 47 mm (1.85 in.) from the top land of the piston.

Standard diameter

81.97 ~ 82.00 mm (3.2272 ~ 3.2283 in.)

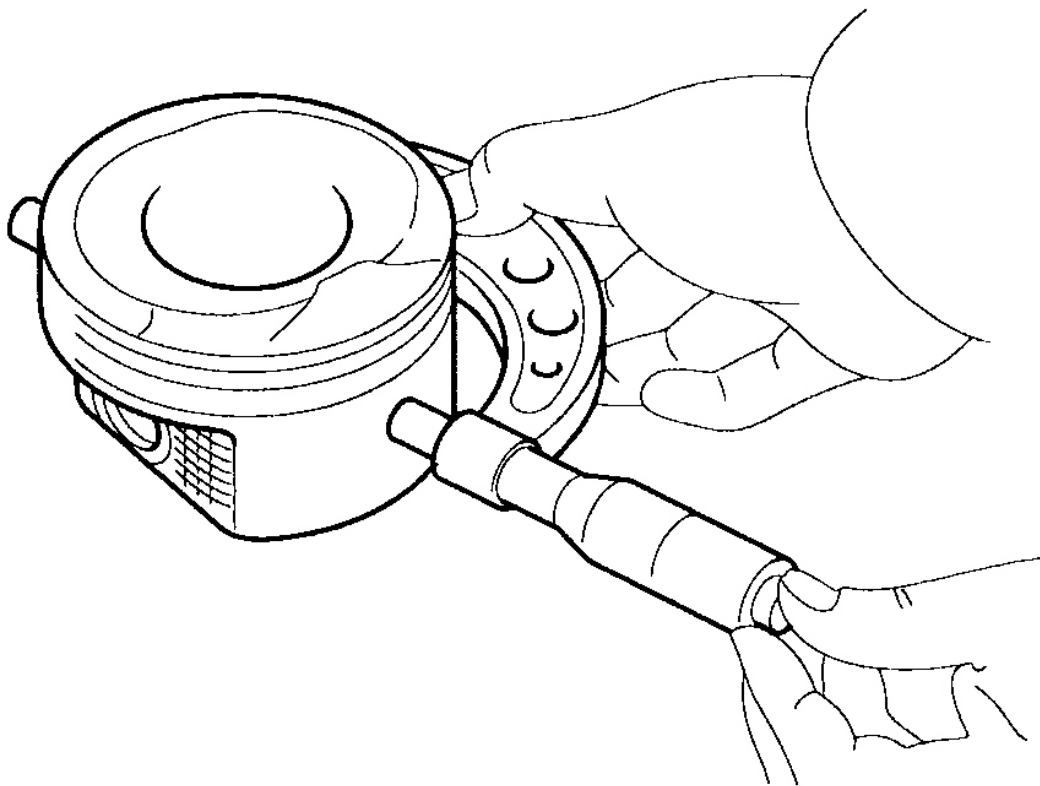

G03842439

Fig. 184: Measuring Piston Outside Diameter
Courtesy of HYUNDAI MOTOR CO.

3. Calculate the difference between the cylinder bore diameter and the piston diameter.

Piston-to-cylinder clearance

0.02 ~ 0.04 mm(0.0008 ~ 0.0016in.)

4. Inspect the piston ring side clearance.

Using a feeler gauge, measure the clearance between new piston ring and the wall of the ring groove.

Piston ring side clearance


No. 1: 0.04 ~ 0.08 mm (0.0016 ~ 0.0031 in.)

No. 2: 0.03 ~ 0.07 mm (0.0012 ~ 0.0028 in.)

Limit

No. 1: 0.1 mm (0.004 in.)

No. 2: 0.1 mm (0.004 in.)

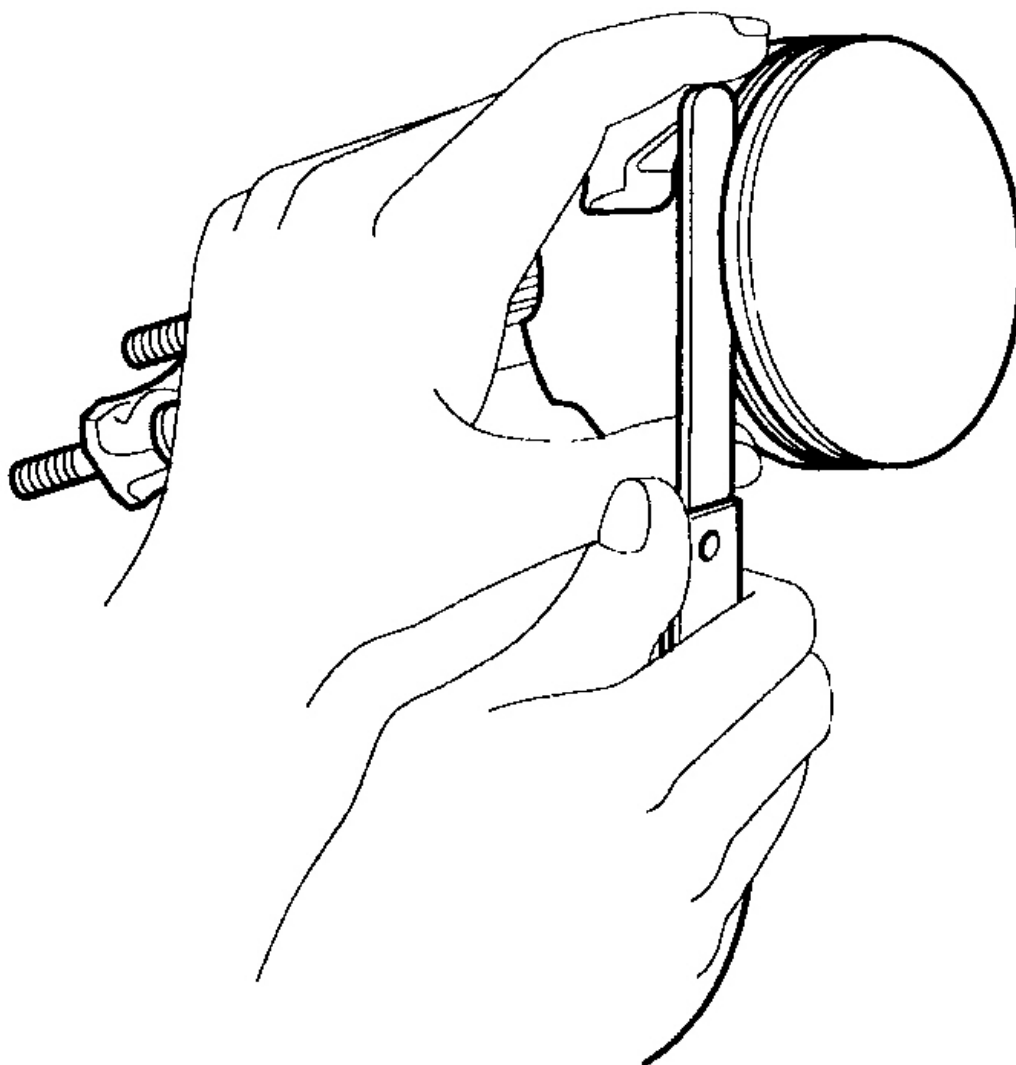

G03842440

Fig. 185: Measuring Piston Ring Side Clearance
Courtesy of HYUNDAI MOTOR CO.

If the clearance is greater than maximum, replace the piston.

5. Inspect piston ring end gap.

To measure the piston ring end gap, insert a piston ring into the cylinder bore. Position the ring at right angles to the cylinder wall by gently pressing it down with a piston. Measure the gap with a feeler gauge. If the gap exceeds the service limit, replace the piston ring. If the gap is too large, recheck the cylinder

bore diameter against the wear limits. If the bore is over the service limit, the cylinder block must be rebored. (See **BORING CYLINDER**).

Piston ring end gap


Standard

No. 1: 0.23 ~ 0.38 mm (0.0091 ~ 0.0150 in.)

No. 2: 0.33 ~ 0.48 mm (0.0130 ~ 0.0189 in.)

Limit

No. 1, 2, oil ring: 1.0 mm (0.039 in.)

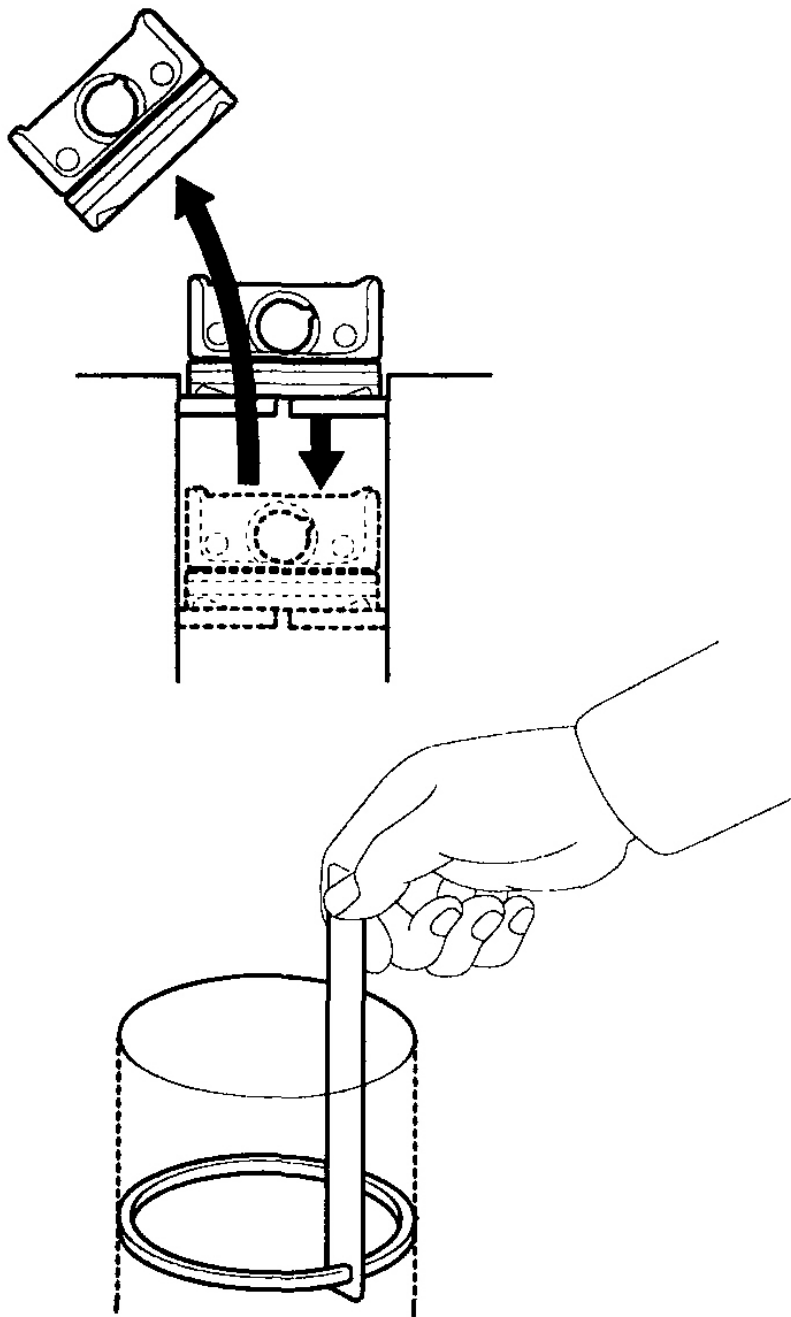

G03842441


Fig. 186: Measuring Piston Ring End Gap Using Feeler Gauge
Courtesy of HYUNDAI MOTOR CO.

PISTON PINS

1. Measure the diameter of the piston pin.

Piston pin diameter

20.001 ~ 20.006 mm (0.7874 ~ 0.7876 in.)

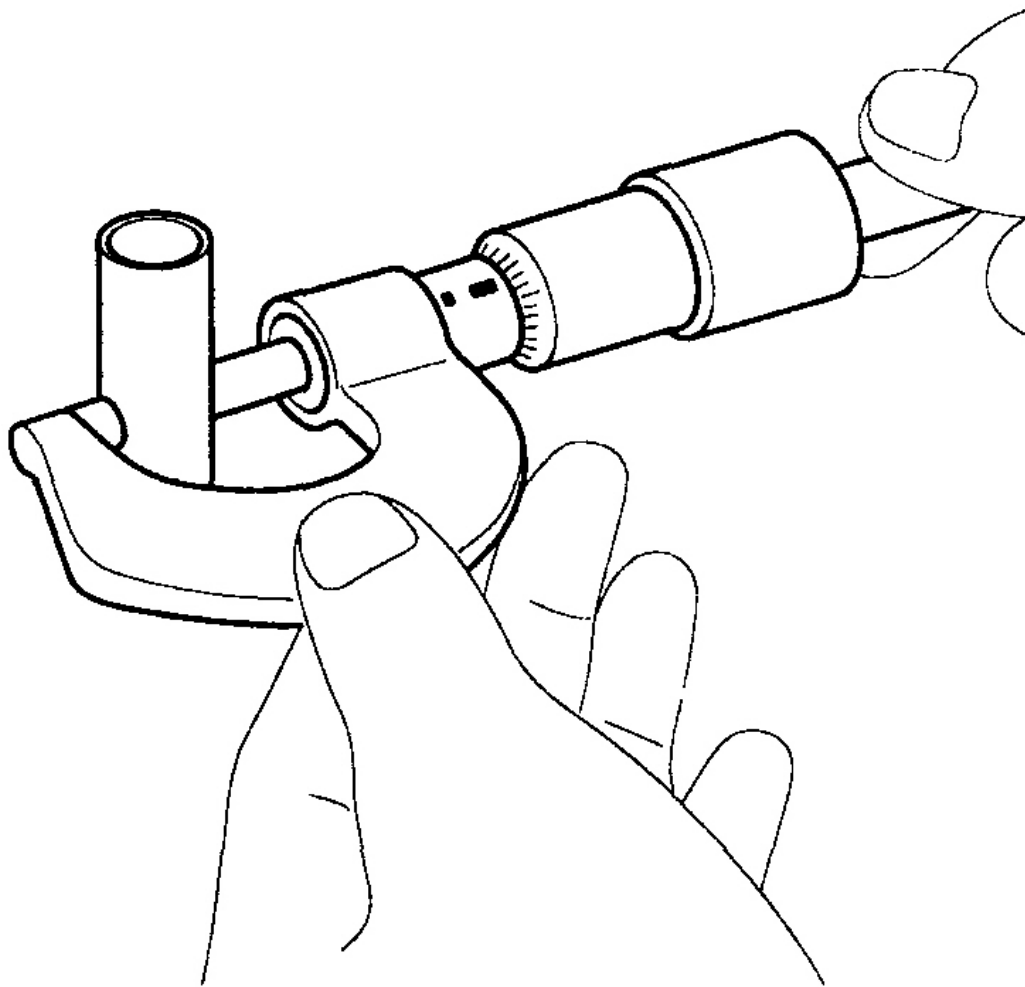

G03842442

Fig. 187: Measuring Diameter Of Piston Pin
Courtesy of HYUNDAI MOTOR CO.

2. Measure the piston pin-to-piston clearance.

Piston pin-to-piston clearance

0.01 ~ 0.02 mm (0.0004 ~ 0.0008 in.)

3. Check the difference between the piston pin diameter and the connecting rod small end diameter.


Piston pin-to-connecting rod interference

0.016 ~ 0.032 mm (0.00063 ~ 0.00126 in.)

OIL PRESSURE SWITCH

1. Check the continuity between terminal and the body with an ohmmeter.

If there is no continuity, replace the oil pressure switch.

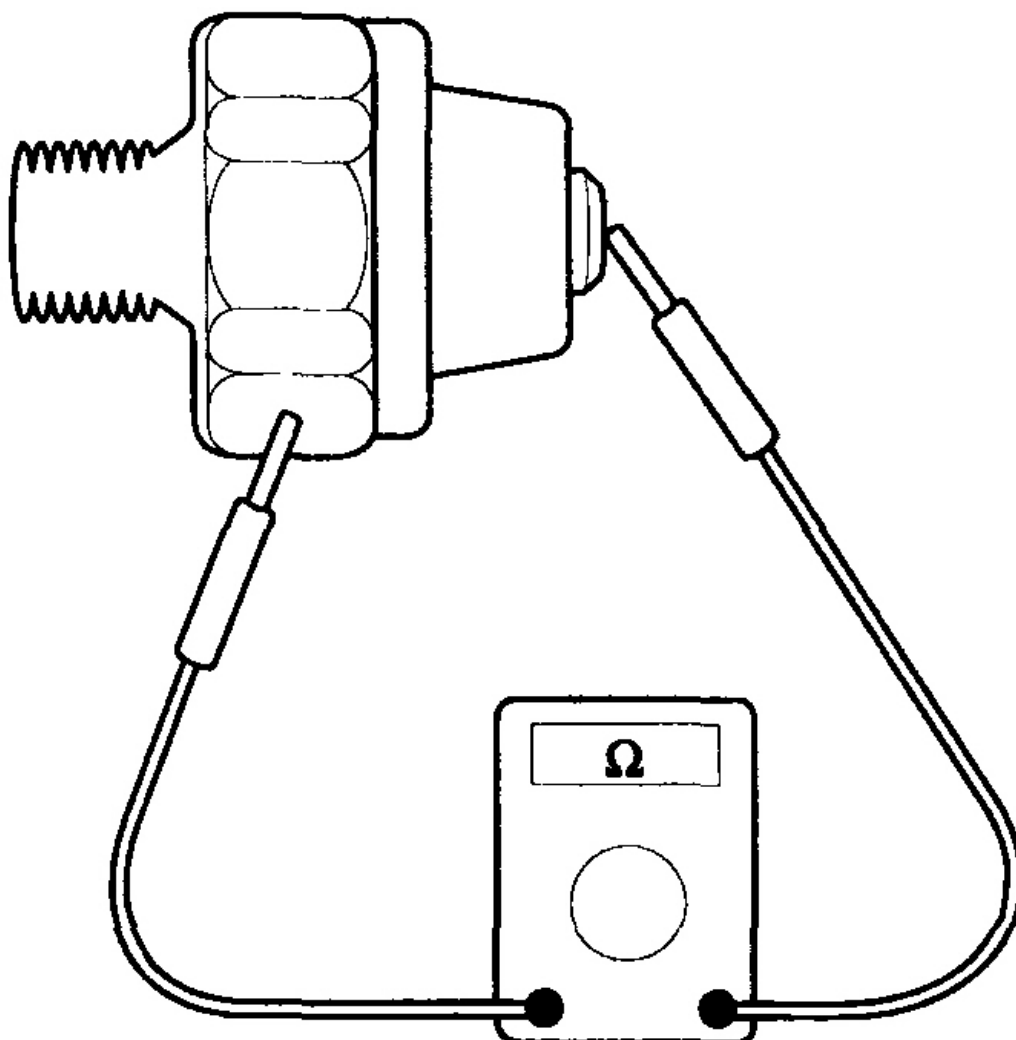


G03842443

Fig. 188: Checking Continuity Between Terminal And Body With Ohmmeter
Courtesy of HYUNDAI MOTOR CO.

2. Check the continuity between the terminal and the body when the fine wire is pushed. If there is continuity even when the fine wire is pushed, replace the switch.
3. If there is no continuity when a 50 kpa (7 psi) vacuum is applied through the oil hole, the switch is operating properly.

Check for air leakage. If air leaks, the diaphragm is broken. Replace it

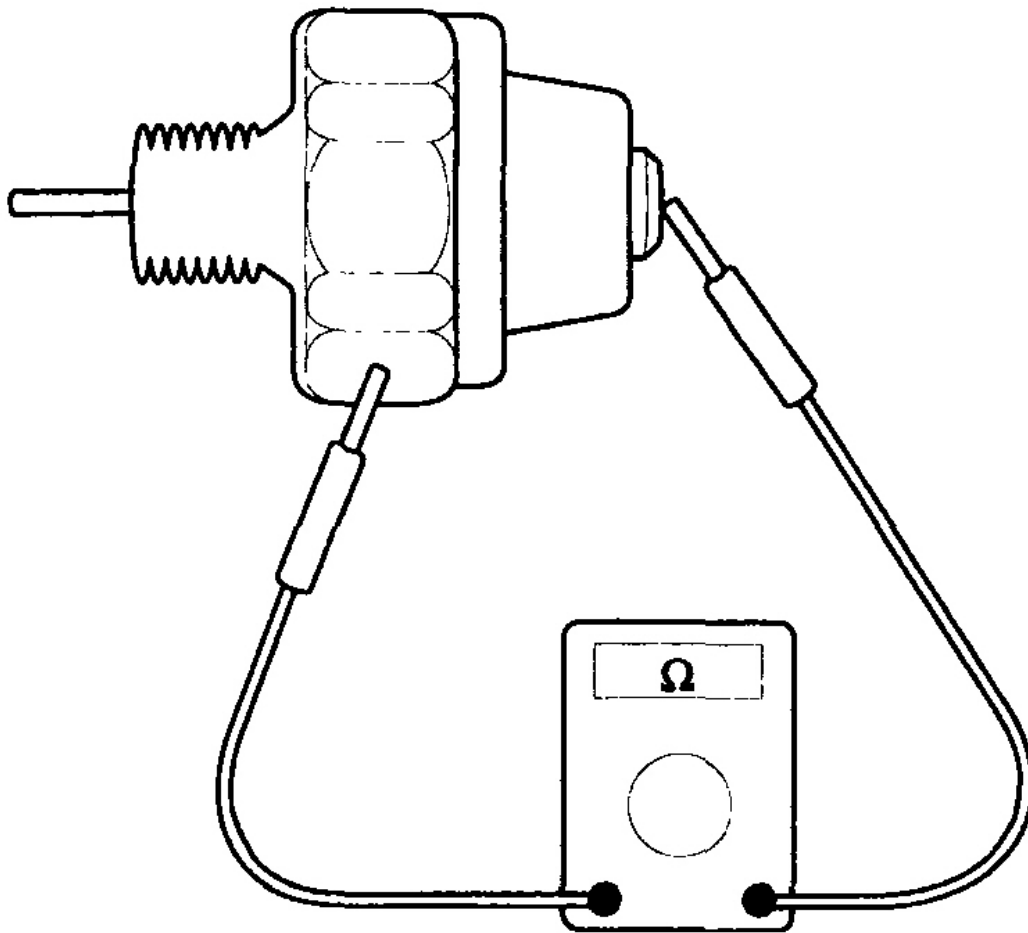

G03842444

Fig. 189: Checking Continuity Between Terminal And Body
Courtesy of HYUNDAI MOTOR CO.


REASSEMBLY

NOTE:

- Thoroughly clean all parts to assembled.
- Before installing the parts, apply fresh engine oil to all sliding and rotating surfaces.
- Replace all gaskets, O-rings and oil seals with new parts.

1. Assemble piston and connecting rod.
 1. Use a hydraulic press for installation.


2. The piston front mark and the connecting rod front mark must face the timing belt side of the engine.

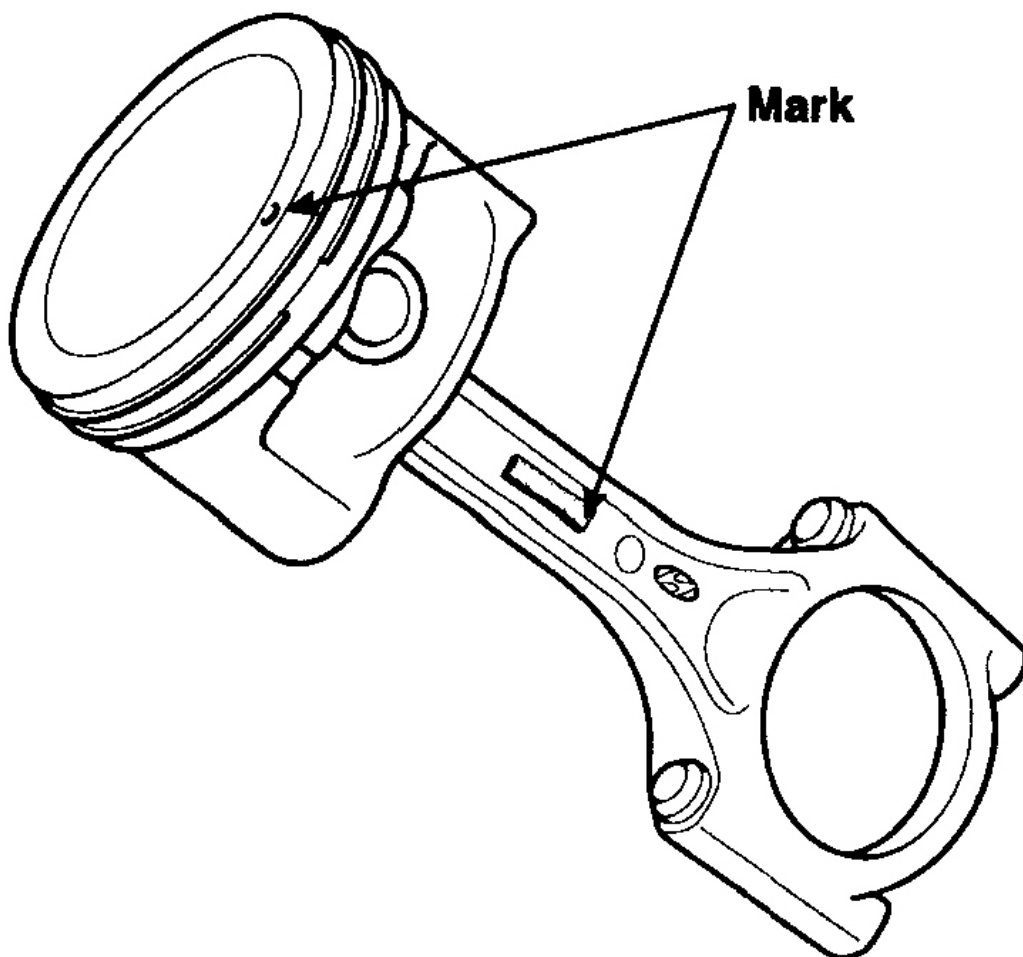

G03842445

Fig. 190: Identifying Piston Marks
Courtesy of HYUNDAI MOTOR CO.


2. Install piston rings.
 1. Install the oil ring expander and 2 side rails by hand.
 2. Using a piston ring expander, install the 2 compression rings with the code mark facing upward.
 3. Position the piston rings so that the ring ends are as shown in **Fig. 191**.

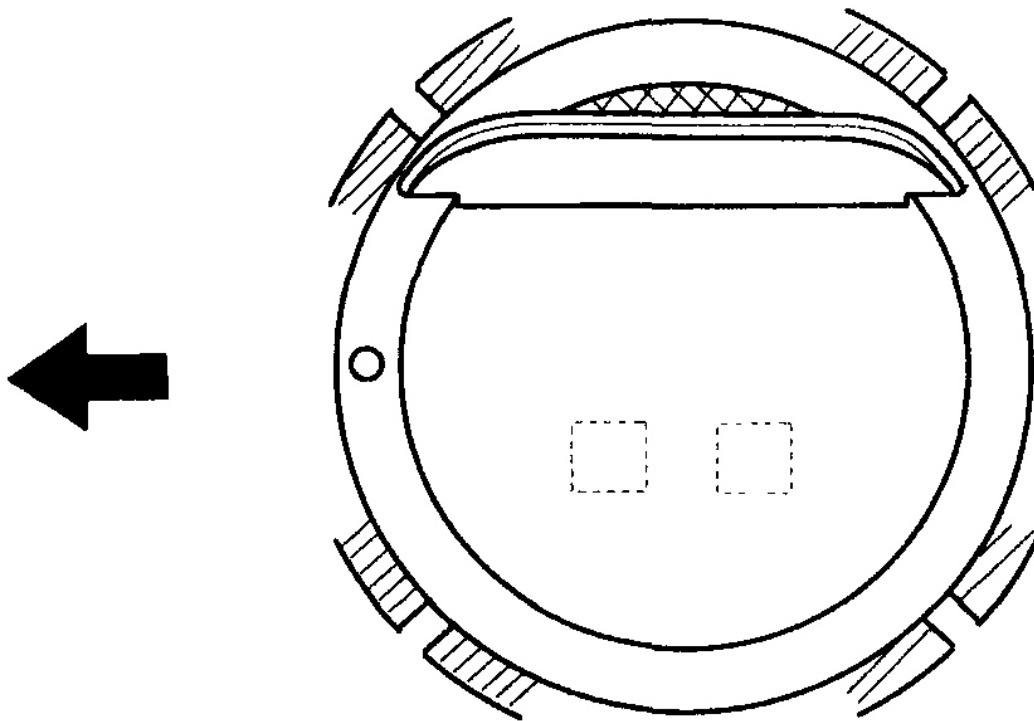

G03842446

Fig. 191: Positioning Piston Rings
Courtesy of HYUNDAI MOTOR CO.

3. Install connecting rod bearings.
 1. Align the bearing claw with the groove of the connecting rod or connecting rod cap.
 2. Install the bearings (A) in the connecting rod and connecting rod cap (B).

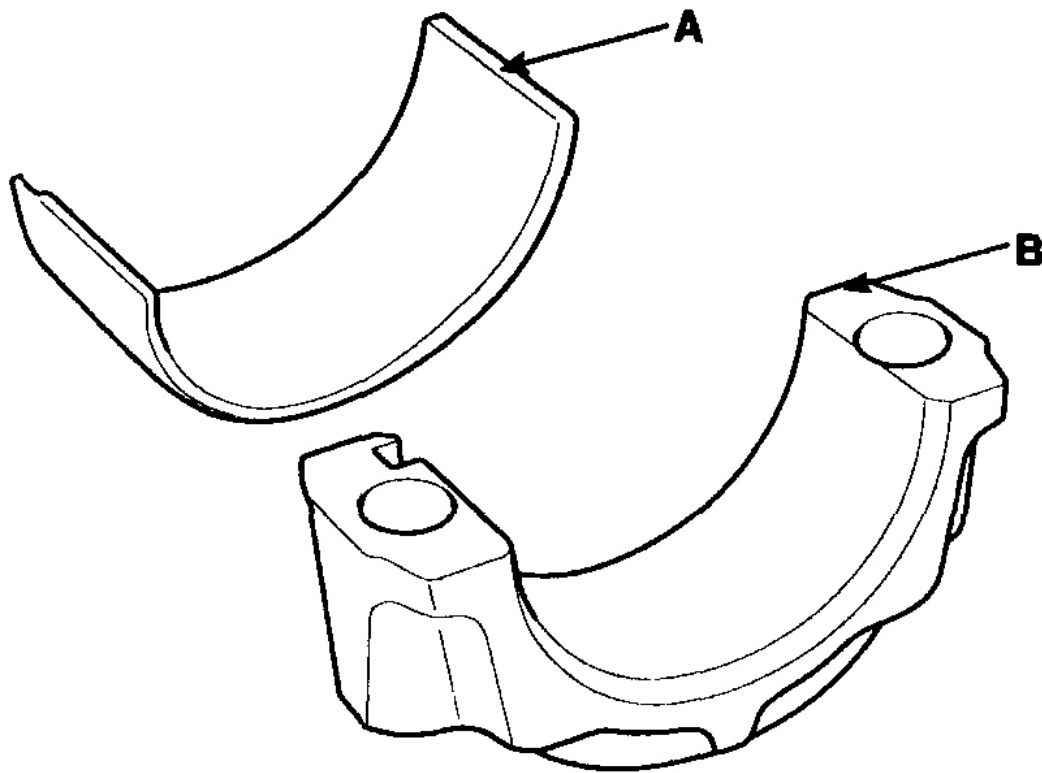


G03842447

Fig. 192: Installing Bearings In Connecting Rod And Connecting Rod Cap
Courtesy of HYUNDAI MOTOR CO.

4. Install main bearings.

NOTE: Upper 1, 2, 4, 5 bearings have an oil groove of oil holes; Lower bearings do not.

1. Align the bearing claw with the claw groove of the cylinder block, push in the 5 upper bearings (A).

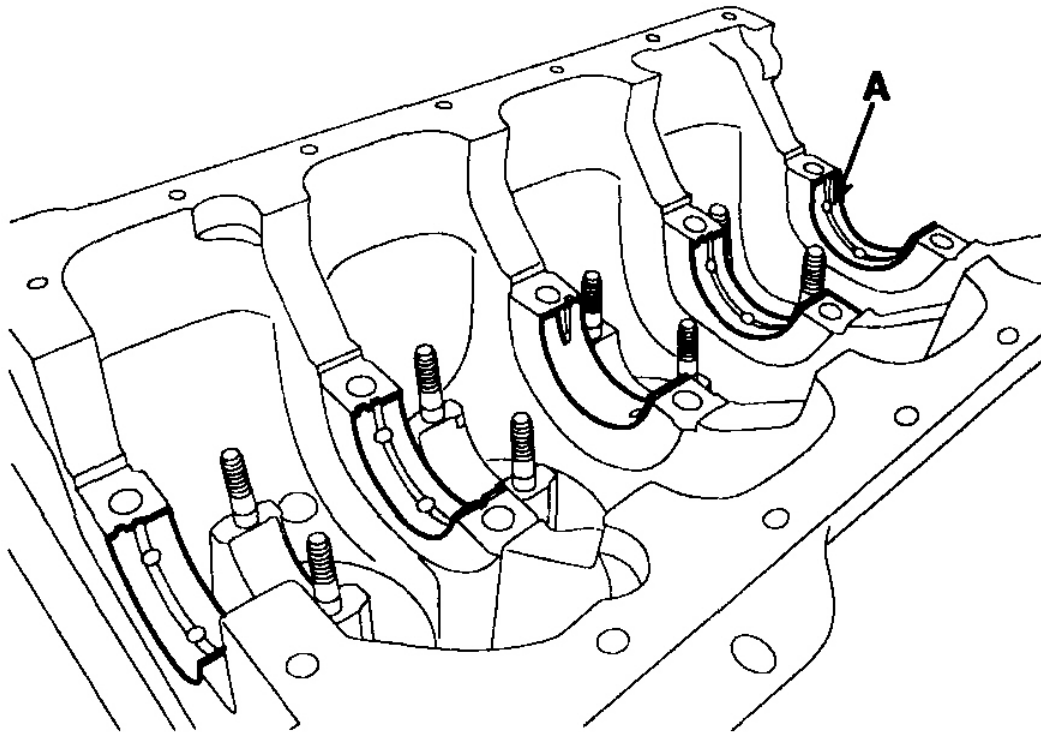


G03842448

Fig. 193: Aligning Bearing Claw
Courtesy of HYUNDAI MOTOR CO.

2. Align the bearing claw with the claw groove of the main bearing cap, and push in the 5 lower bearings.
5. Install thrust bearings.

Install the 2 thrust bearings (A) under the No.3 journal position of the cylinder block with the oil grooves facing outward.

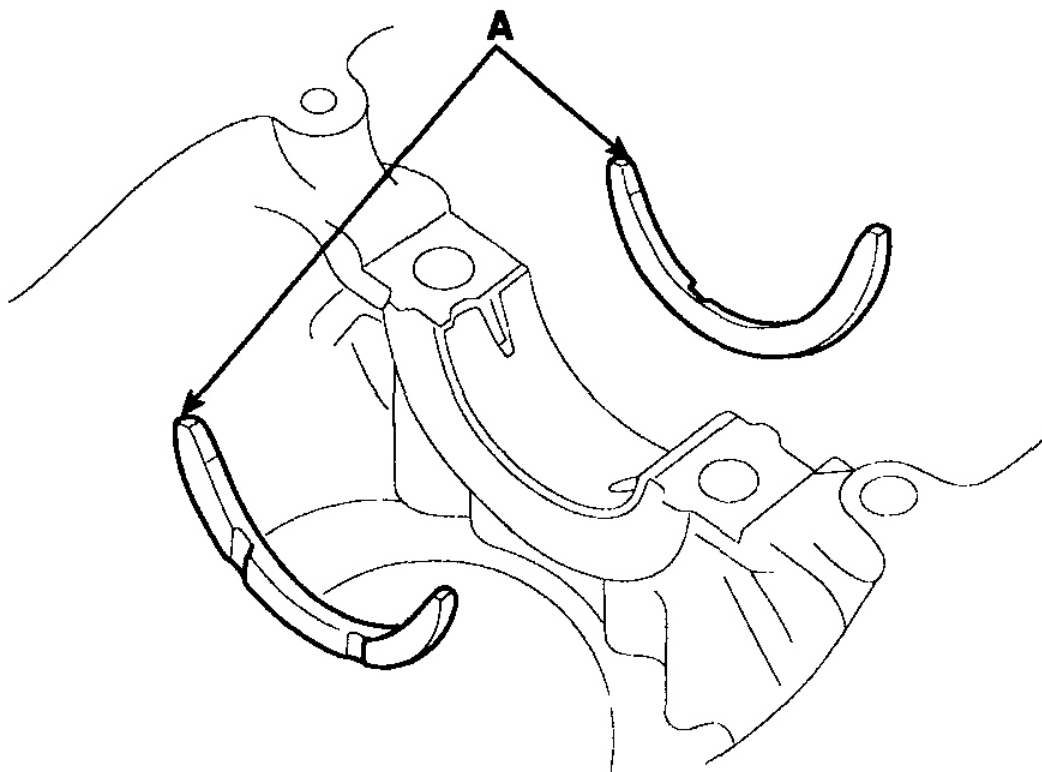

G03842449

Fig. 194: Installing Thrust Bearings
Courtesy of HYUNDAI MOTOR CO.


6. Place crankshaft on the cylinder block.
7. Place main bearing caps on cylinder block.
8. Install main bearing cap bolts.

NOTE:

- The main bearing cap bolts are tightened in 2 progressive steps.
- If any of the bearing cap bolts is broken or deformed, replace it.

1. Apply a light coat of engine oil on the threads and under the bearing cap bolts.
2. Install and uniformly tighten the 10 bearing cap bolts (A), in several passes, in the sequence shown in **Fig. 195**.

Tightening torque: 30Nm (300kgf.cm, 22lbf.ft)

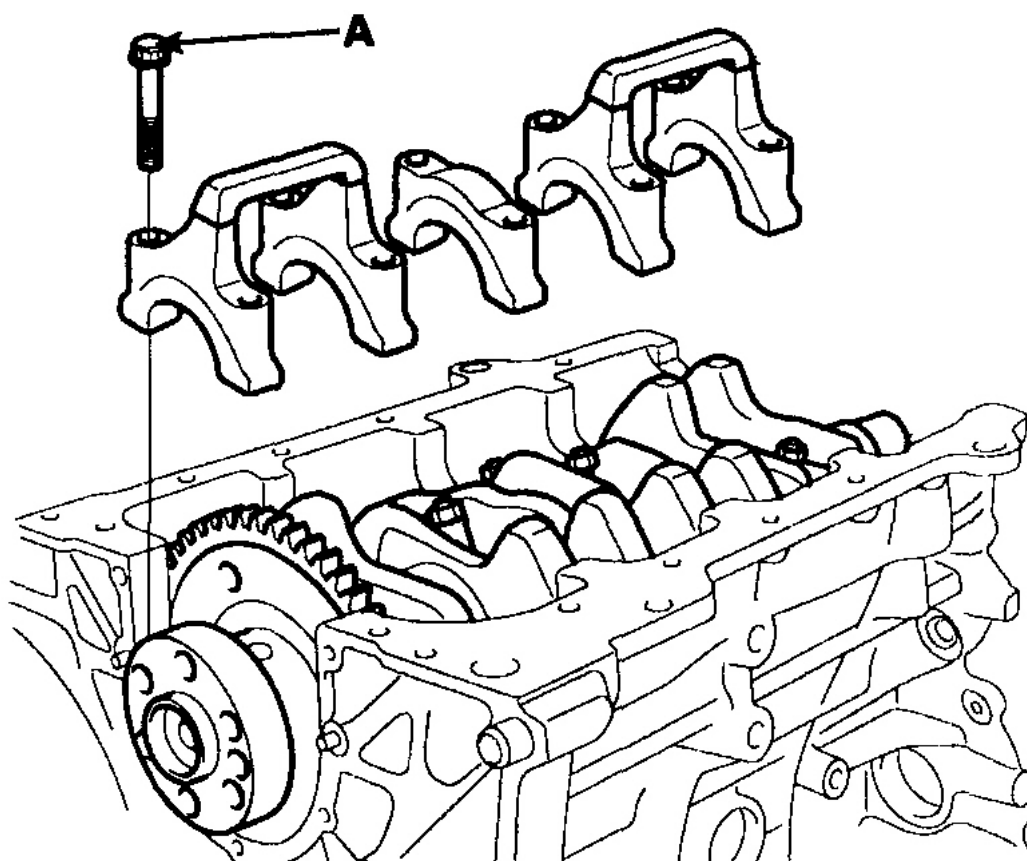

G03842450

Fig. 195: Tightening Bearing Caps Bolts
Courtesy of HYUNDAI MOTOR CO.

3. Retighten the bearing cap bolts by 60° ~ 65° in the numerical order shown in **Fig. 195**.

Tightening torque

Main bearing cap bolt:

30Nm (300kgf.cm, 22lbf.ft) + 60° ~ 65°


4. Check that the crankshaft turns smoothly.
9. Check crankshaft end play.
10. Install piston and connecting rod assemblies.

NOTE: Before installing the pistons, apply a coat of engine oil to the ring grooves

and cylinder bores.

1. Remove the connecting rod caps, and slip short sections of rubber hose over the threaded ends of the connecting rod bolts.
2. Install the ring compressor, check that the bearing is securely in place, then position the piston in the cylinder, and tap it in using the wooden handle of a hammer.
3. Stop after the ring compressor pops free, and check the connecting rod-to-check journal alignment before pushing the piston into place.
4. Apply engine oil to the bolt threads. Install the rod caps with bearings, and torque the nuts: 50 ~ 53Nm (500 ~ 530kgf.cm, 36.9 ~ 39lbf.ft)

NOTE: Maintain downward force on the ring compressor to prevent the rings from expanding before entering the cylinder bore.

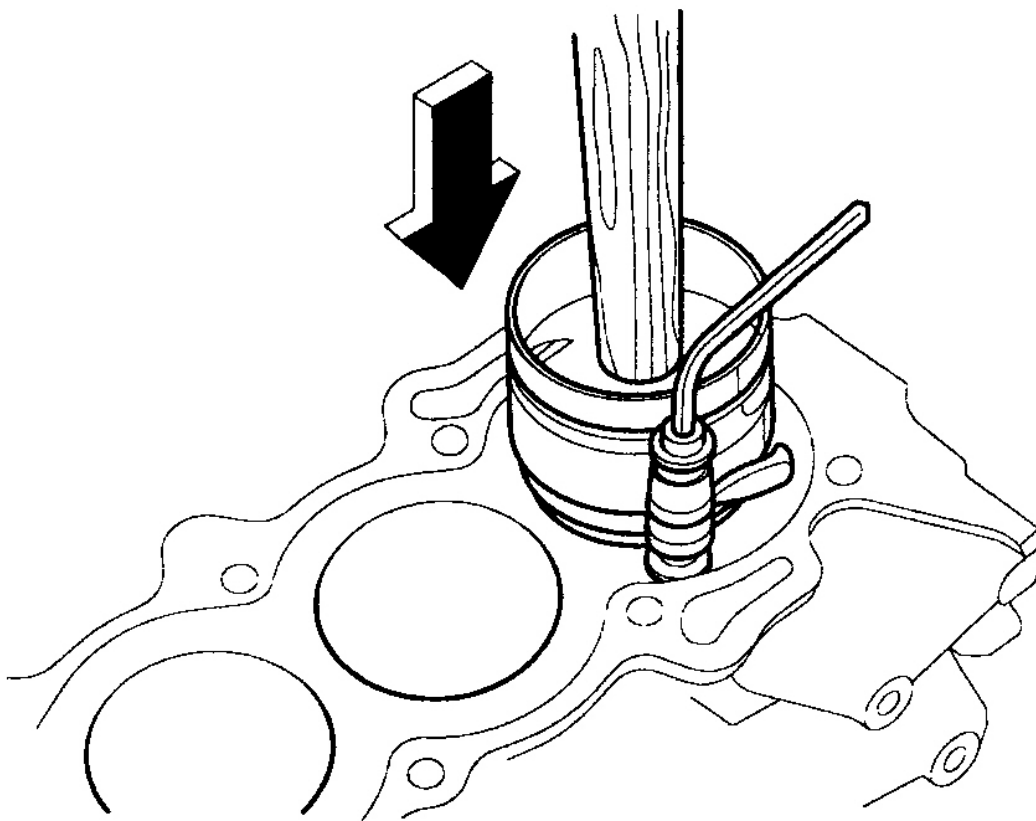


G03842451

Fig. 196: Installing Piston And Connecting Rod Assemblies
Courtesy of HYUNDAI MOTOR CO.

11. Install a new gasket and rear oil seal case (A) with 5 bolts (B).

Tightening torque

10 ~ 12Nm (100 ~ 120kgf.cm, 7.3 ~ 8.8lbf.ft)

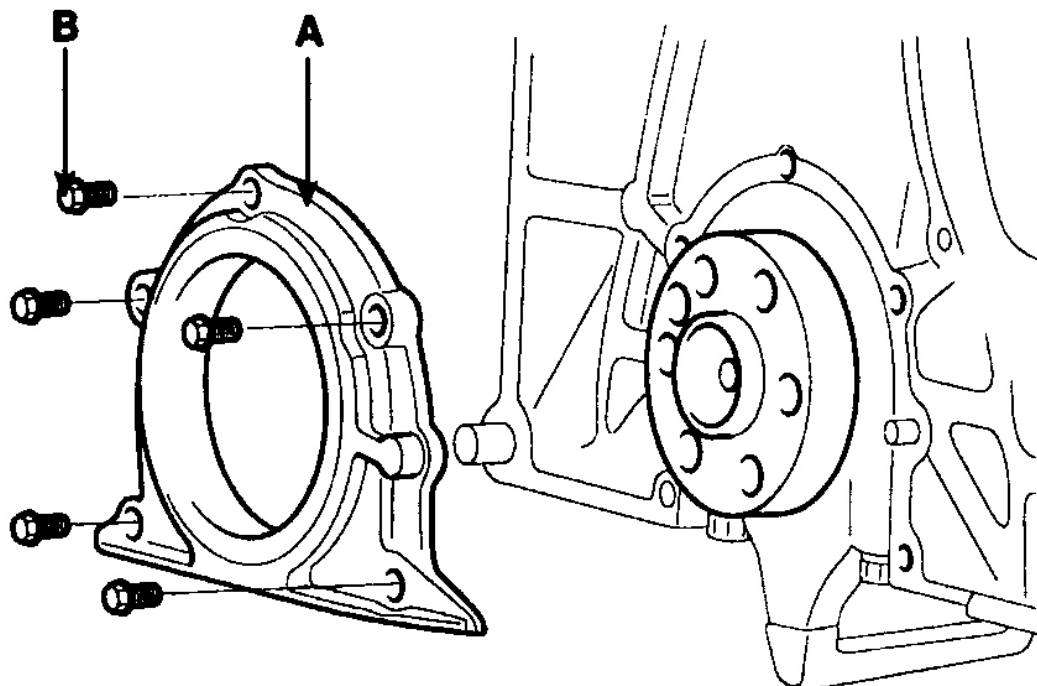

G03842452

Fig. 197: Installing Gasket And Rear Oil Seal Case
Courtesy of HYUNDAI MOTOR CO.

NOTE: Check that the mating surfaces are clean and dry.

12. Install rear oil seal.
1. Apply engine oil to a new oil seal lip.
 2. Using SST (09231-21000) and a hammer, tap in the oil seal until its surface is flush with the rear oil seal retainer edge.

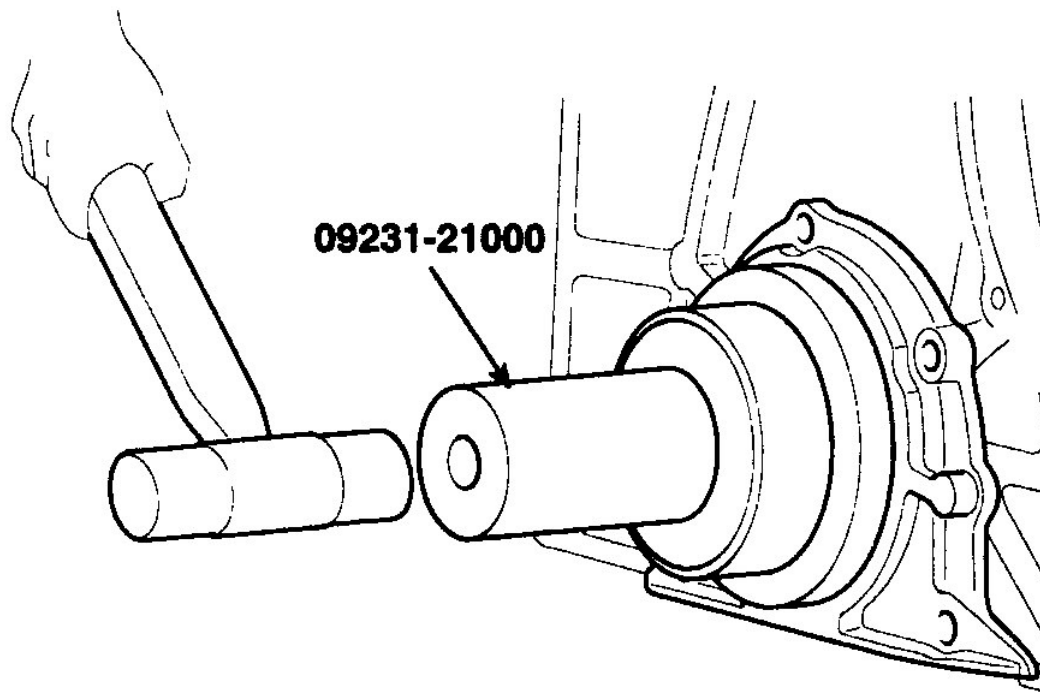
**G03842453**


Fig. 198: Applying Engine Oil To Oil Seal Lip
Courtesy of HYUNDAI MOTOR CO.

13. Install front case. (See **INSTALLATION**)
14. Install oil screen.

Install a new gasket (B) and oil screen (A) with 2 bolts (C).

Tightening torque

15 ~ 22Nm (150 ~ 220kgf.cm, 11 ~ 16lbf.ft)

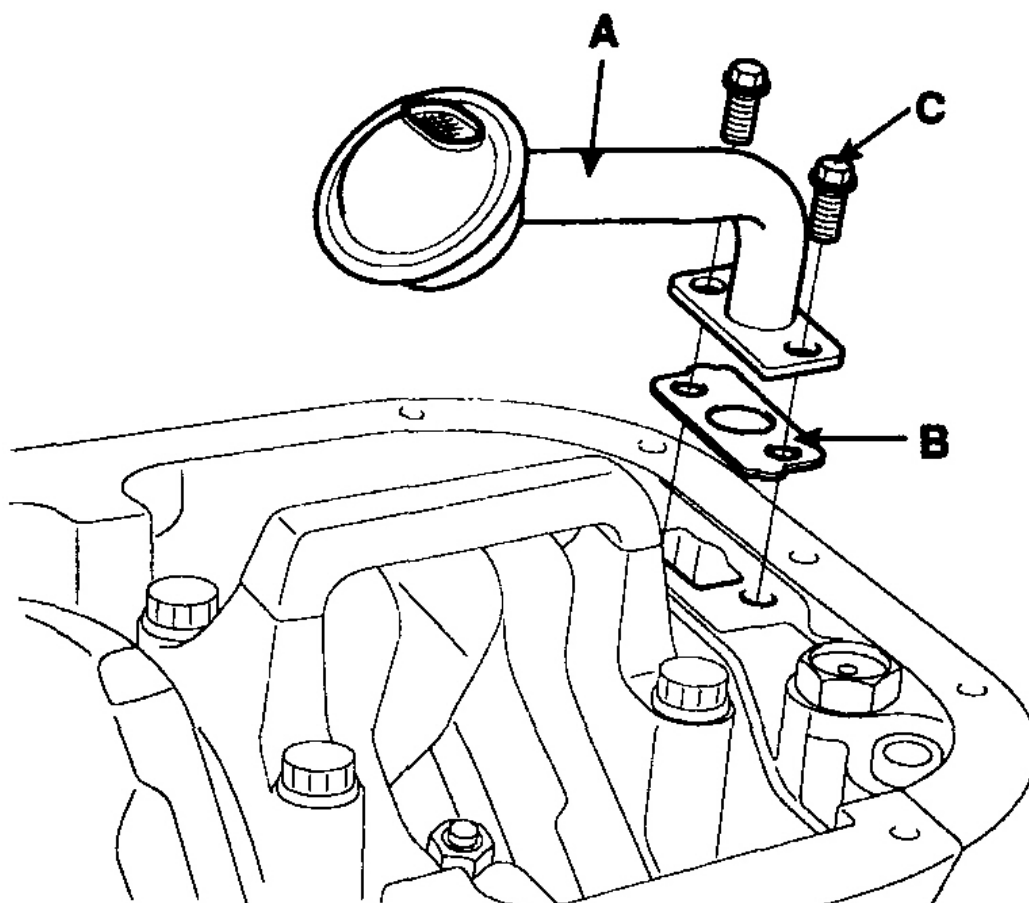

G03842454

Fig. 199: Installing Oil Screen

Courtesy of HYUNDAI MOTOR CO.

15. Install oil pan.

1. Using a razor blade and gasket scraper, remove all the old packing material from the gasket surfaces.

NOTE: Check that the mating surfaces are clean and dry before applying liquid gasket.

2. Apply liquid gasket as an even bead, centered between the edges of the mating surface. Use liquid gasket MS 721-40A or equivalent.

NOTE: • To prevent leakage of oil, apply liquid gasket to the inner


threads of the bolt holes.

- Do not install the parts if five minutes or more have elapsed since applying the liquid gasket. Instead, reapply liquid gasket after removing the residue.
- After assembly, wait at least 30 minutes before filling the engine with oil.

3. Install the oil pan (A) with the 19 bolts. Uniformly tighten the bolts in several passes.

Tightening torque

10 ~ 12Nm (100 ~ 120kgf.cm, 7.3 ~ 8.8lbf.ft)

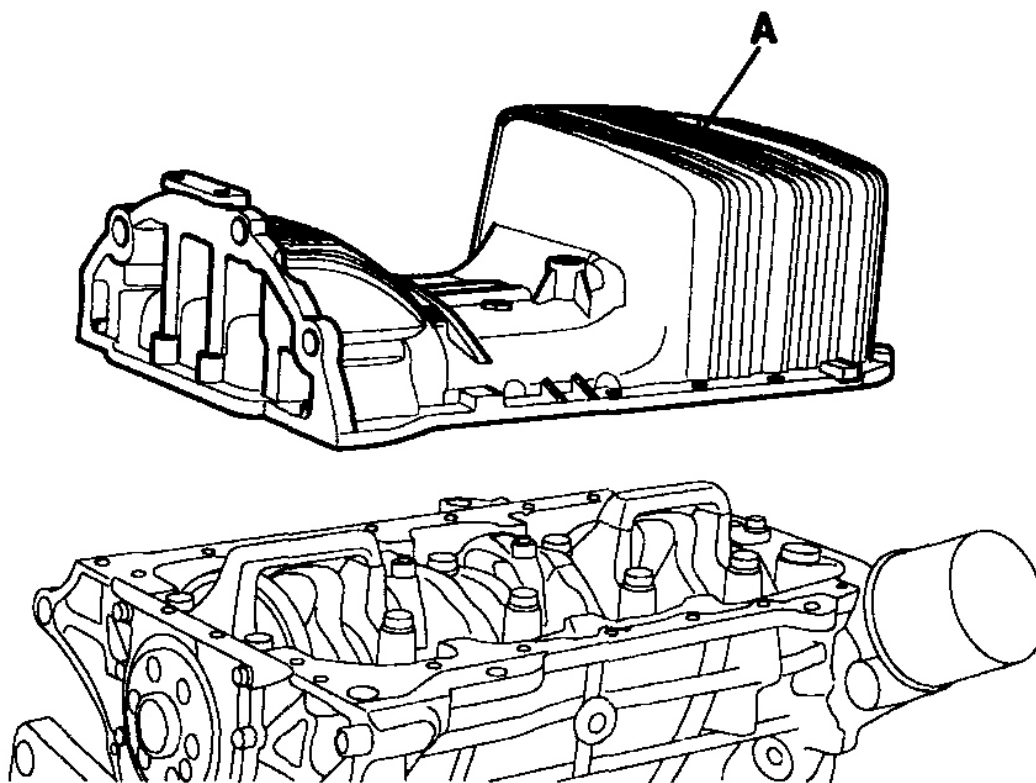

G03842455


Fig. 200: Installing Oil Pan
Courtesy of HYUNDAI MOTOR CO.

16. Install water pump. (See **INSTALLATION**)
17. Install oil pressure sensor.

1. Apply adhesive to 2 or 3 threads. Adhesive: MS 721-39 (B) or equivalent.
2. Install the oil pressure sensor (A).

Tightening torque

15 ~ 22Nm (150 ~ 220kgf.cm, 11 ~ 16lbf.ft)

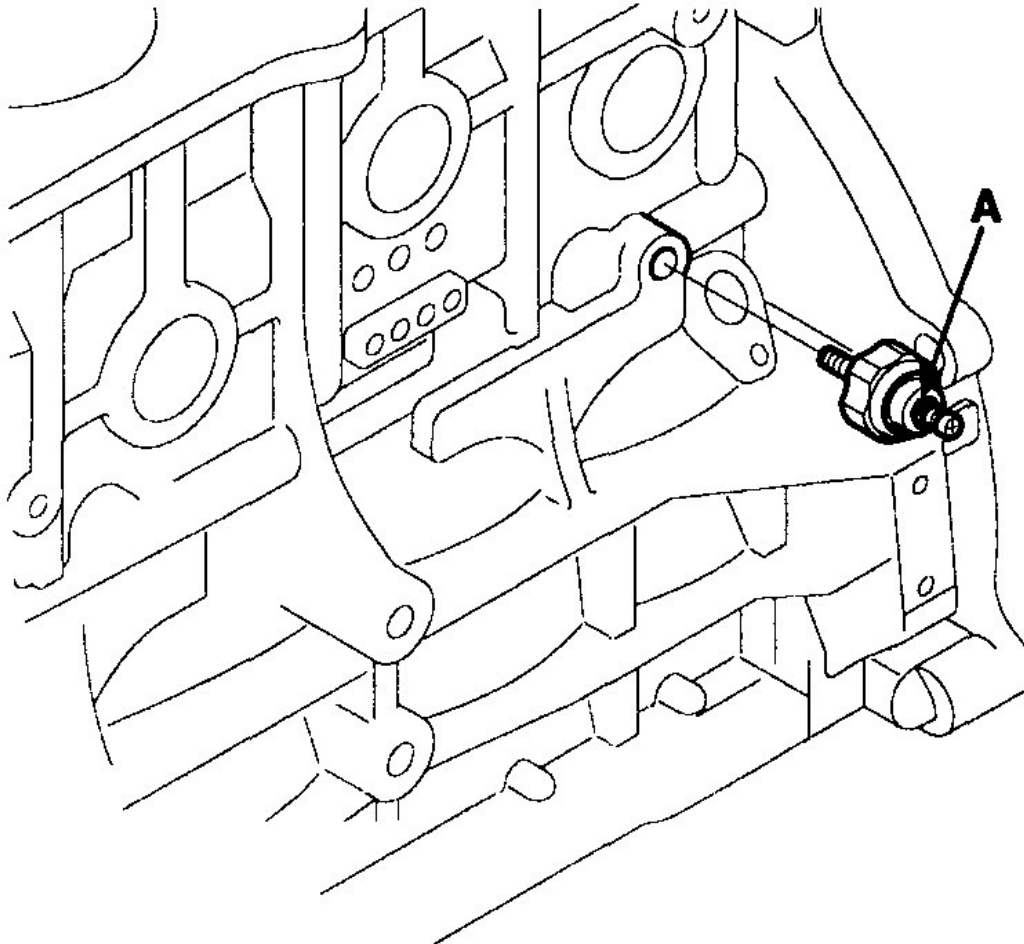


G03842456

Fig. 201: Installing Oil Pressure Sensor
Courtesy of HYUNDAI MOTOR CO.

18. Install knock sensor (A).

Tightening torque

17 ~ 27Nm (170 ~ 270kgf.cm, 12.5 ~ 20lbf.ft)

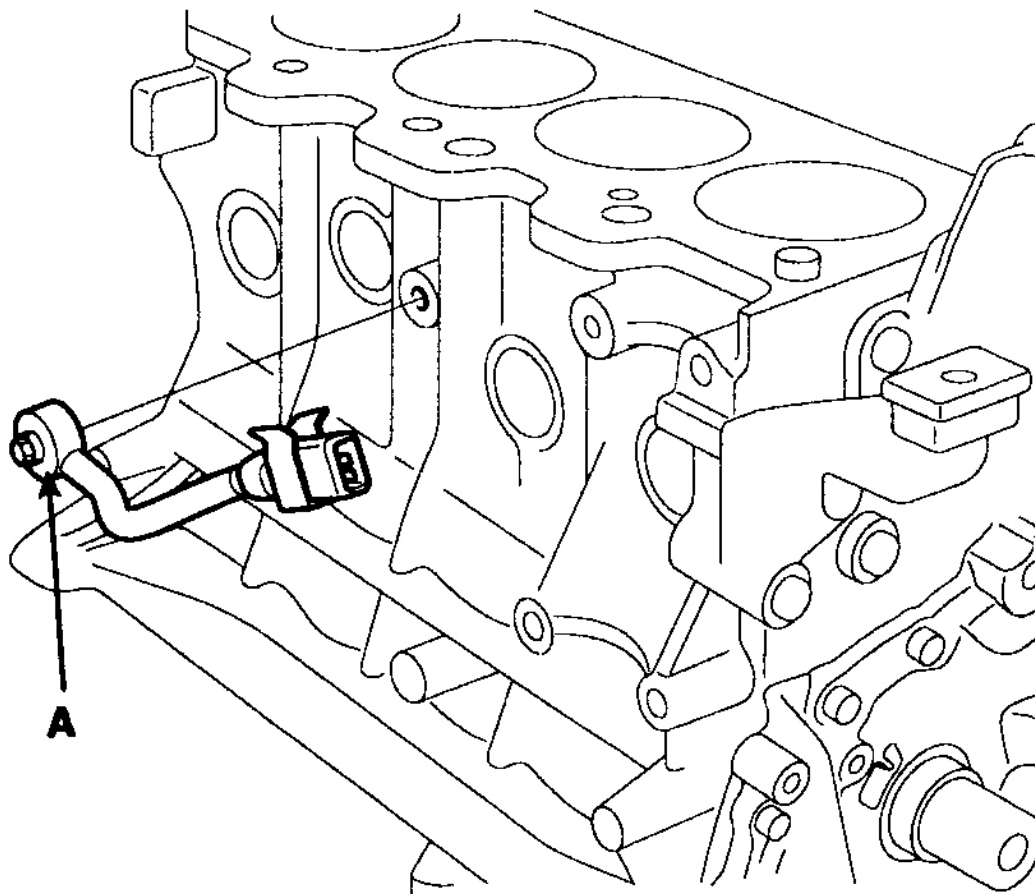

G03842457

Fig. 202: Installing Knock Sensor
Courtesy of HYUNDAI MOTOR CO.

19. Install oil level gauge assembly.
 1. Install a new O-ring on the oil level gauge.
 2. Apply engine oil on the O-ring.
 3. Install the oil level gauge assembly (A) with the bolt.

Tightening torque

12 ~ 15Nm (120 ~ 150kgf.cm, 9 ~ 11lbf.ft)

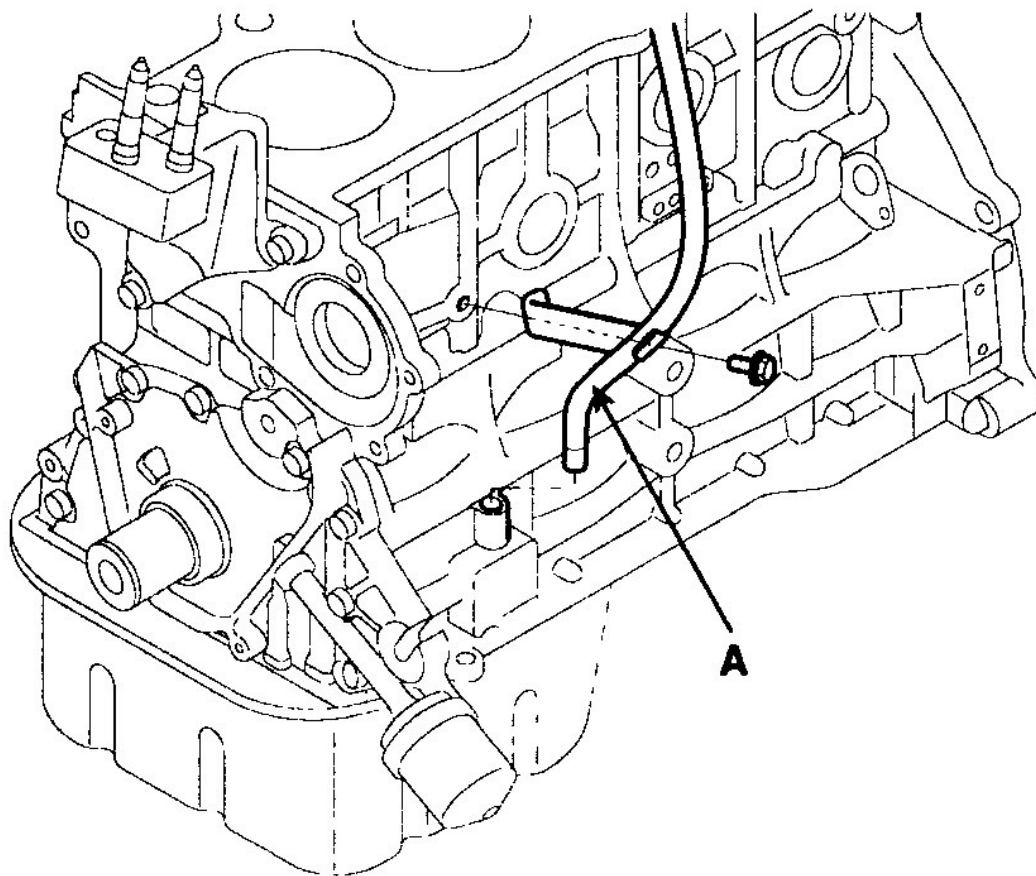
**G03842458**

Fig. 203: Installing Oil Level Gauge Assembly
Courtesy of HYUNDAI MOTOR CO.

20. Install cylinder head. (See **INSTALLATION**)
21. Install timing belt. (See **INSTALLATION**)
22. Remove engine stand.
23. A/T: Install drive plate.

Tightening torque

120 ~ 130Nm (1200 ~ 1300kgf.cm, 89 ~ 96lbf.ft)


24. M/T: Install flywheel.

Tightening torque

120~ 130Nm (1200 ~ 1300kgf.cm, 89 ~ 96lbf.ft)

COOLING SYSTEM


COMPONENT

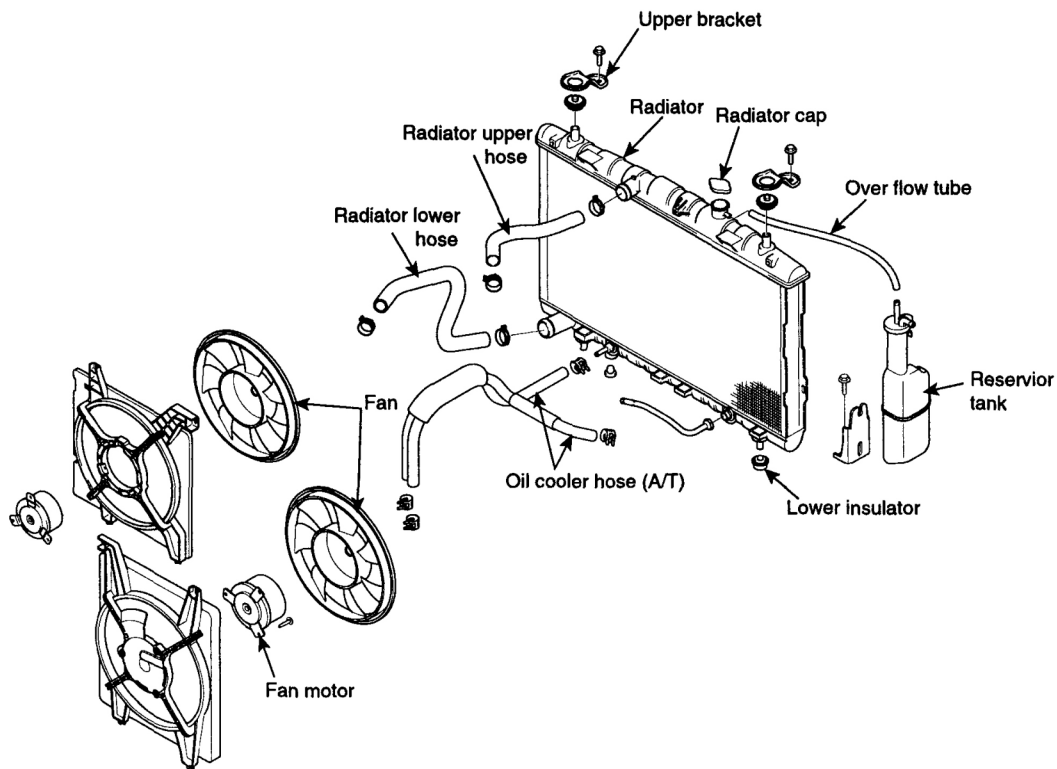

TORQUE : Nm (kgf.cm, lbf.ft)

G03842459

Fig. 204: Identifying Cooling System Components With Torque Specifications (1 Of 2)
Courtesy of HYUNDAI MOTOR CO.

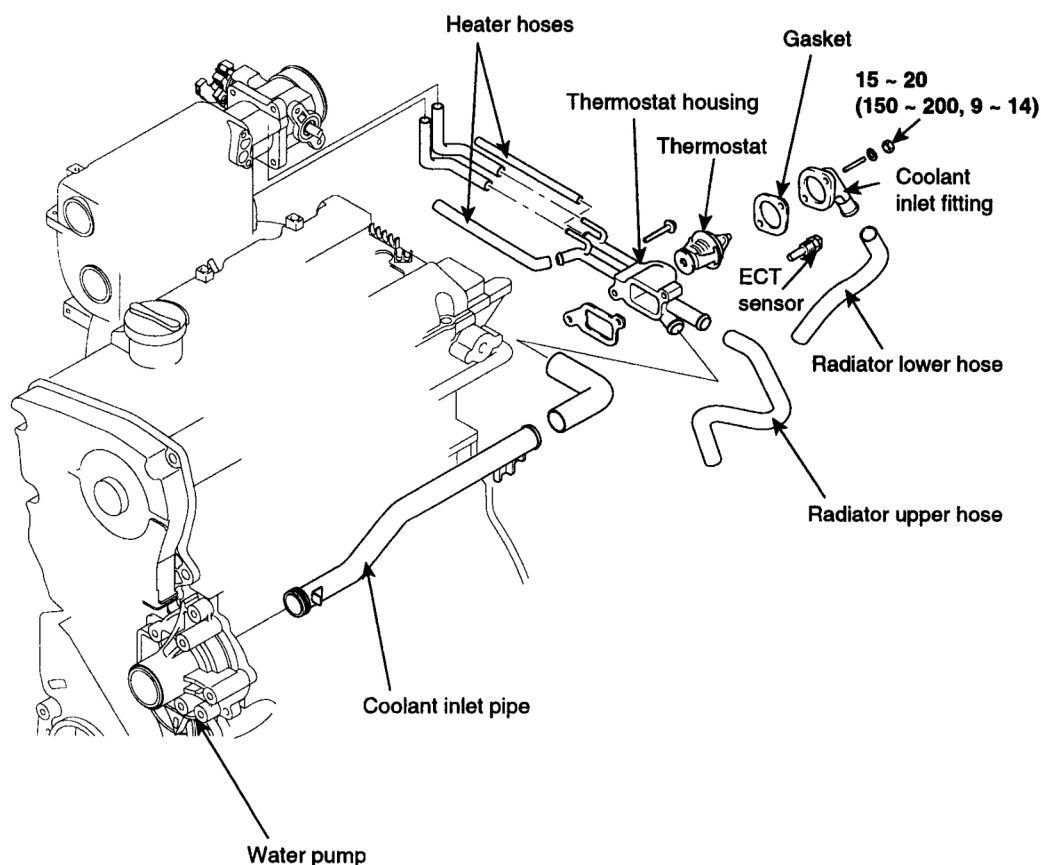

TORQUE : Nm (kgf.cm, lbf.ft)


G03842460

Fig. 205: Identifying Cooling System Components With Torque Specifications (2 Of 2)
Courtesy of HYUNDAI MOTOR CO.

ENGINE COOLANT REFILLING AND BLEEDING

CAUTION: When pouring engine coolant, be sure to shut the relay box lid and not to let coolant spill on the electrical parts or the paint. If any coolant spills, rinse it off immediately.


1. Slide the heater temperature control lever to maximum heat. Make sure the engine and radiator are cool to the touch.
2. Remove radiator cap (A).

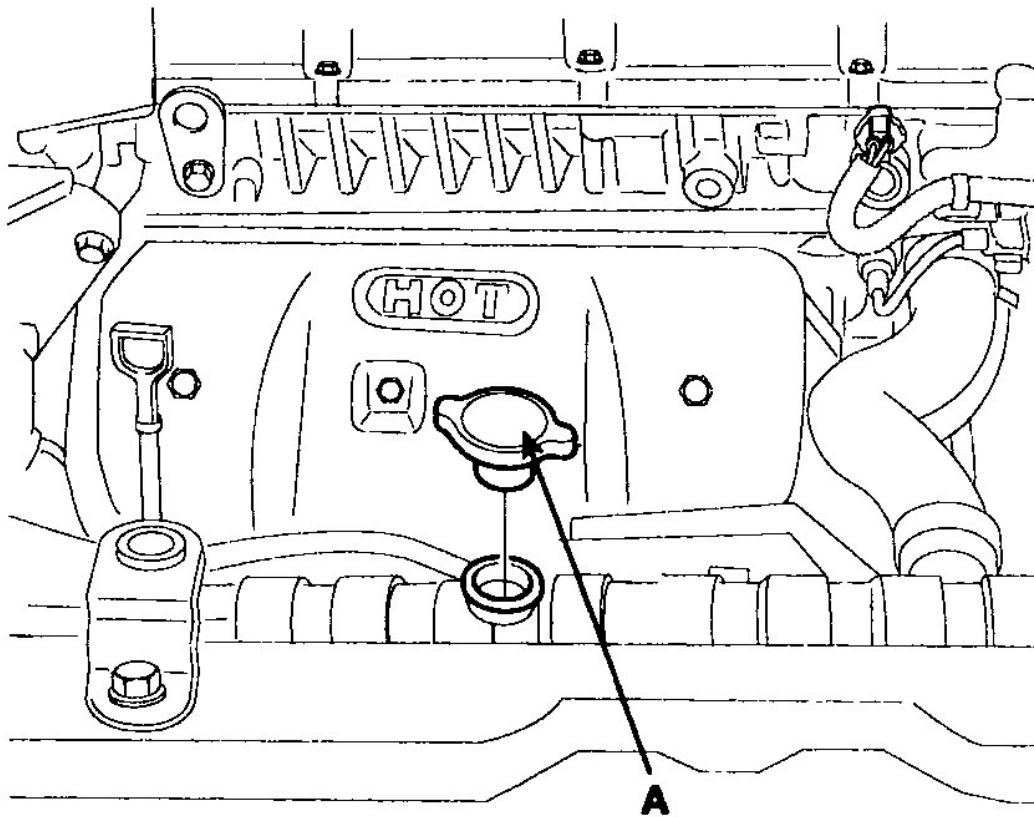

G03842461

Fig. 206: Removing Radiator Cap
Courtesy of HYUNDAI MOTOR CO.

3. Loosen the drain plug, and drain the coolant.
4. Tighten the radiator drain plug (A) securely.

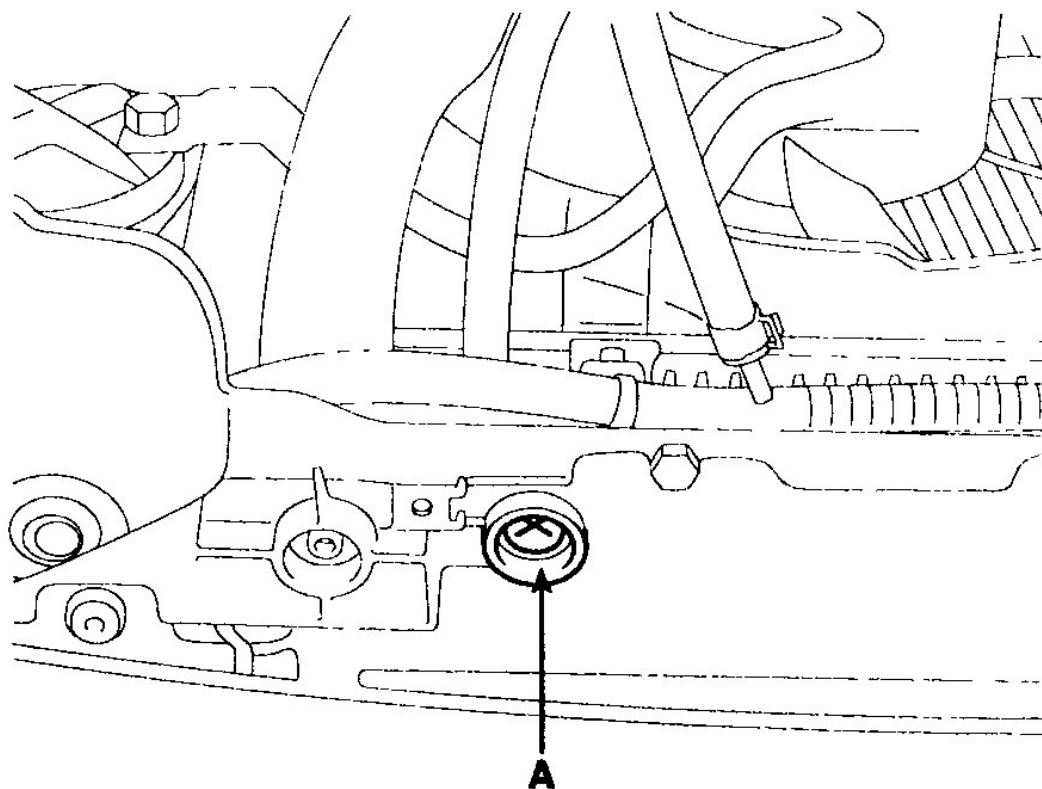

G03842462

Fig. 207: Loosening Radiator Drain Plug
Courtesy of HYUNDAI MOTOR CO.

5. Remove, drain and reinstall the reservoir. Fill the tank halfway to the MAX mark with water, then up to the MAX mark with antifreeze.
6. Mix the recommended antifreeze with an equal amount of water in a clean container.

NOTE:

- Use only genuine antifreeze/coolant.
- For best corrosion protection, the coolant concentration must be maintained year-round at 50% minimum. Coolant concentrations less than 50% may not provide sufficient protection against corrosion or freezing.
- Coolant concentrations greater than 60% will impair cooling efficiency and are not recommended.

CAUTION:


- Do not mix different brands of antifreeze/coolants.
- Do not use additional rust inhibitors or anti-rust products; they

may not be compatible with the coolant.

7. Pour coolant into the radiator up to base of the filler neck, and install the radiator cap loosely.
8. Start the engine and let it run until it warms up (the radiator fan comes on at least twice).
9. Turn off the engine. Check the level in the radiator, add coolant if needed.
10. Put the radiator cap on tightly, then run the engine again and check for leaks.

CAP TESTING

1. Remove the radiator cap, wet its seal with engine coolant, then install it no pressure tester.

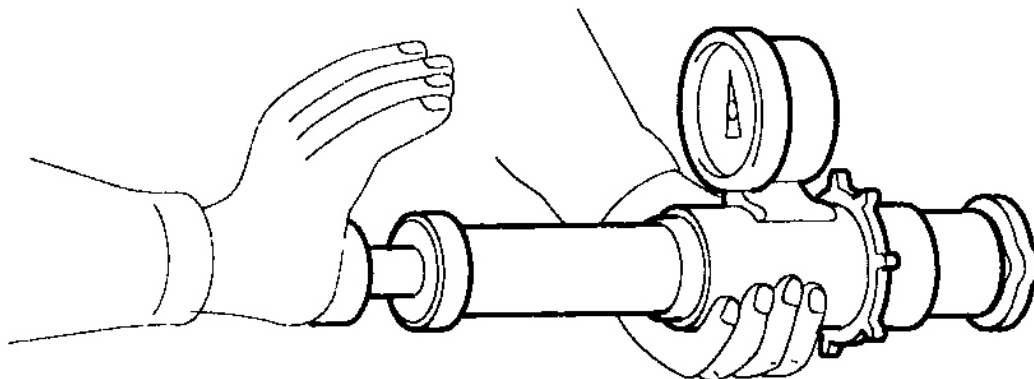


G03842463

Fig. 208: Identifying Pressure Tester
Courtesy of HYUNDAI MOTOR CO.

2. Apply a pressure of 93 ~ 123kPa (0.95 ~ 1.25kgf/cm² , 14 ~ 19psi)
3. Check for a drop in pressure.
4. If the pressure drops, replace the cap.

TESTING

1. Wait until engine is cool, then carefully remove the radiator cap and fill the radiator with engine coolant, then install it on the pressure tester.
2. Apply a pressure tester to the radiator and apply a pressure of 93 ~ 123kPa (0.95 ~ 1.25kgf/cm² 14 ~ 19psi).

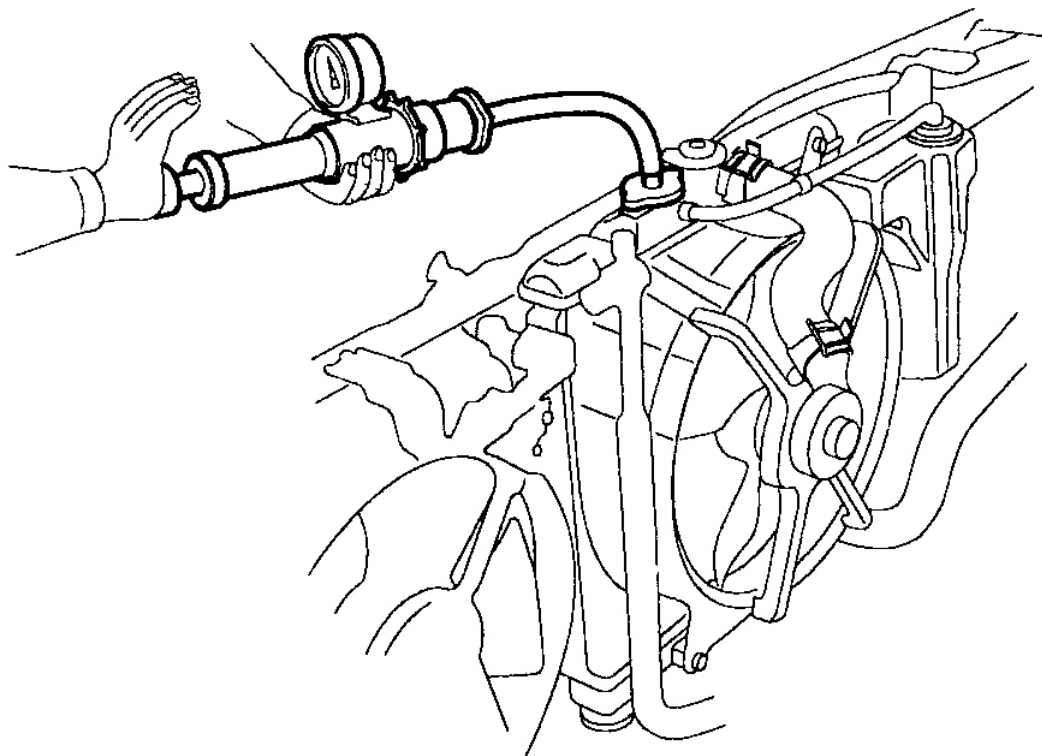

G03842464

Fig. 209: Applying Pressure Tester To Radiator
Courtesy of HYUNDAI MOTOR CO.

3. Inspect for engine coolant leaks and a drop in pressure.
4. Remove the tester and reinstall the radiator cap.

NOTE: Check for engine oil in the coolant and/or coolant in the engine oil.

REMOVAL


WATER PUMP

1. Drain the engine coolant.

WARNING: System is under high pressure when the engine is hot. To avoid danger of releasing scalding engine coolant, remove the cap only when the engine is cool.

2. Remove drive belts.

3. Remove the timing belt. (See **REMOVAL**)
4. Remove the timing belt idler. (See 15)
5. Remove the water pump.
 1. Remove the 4 bolts and pump pulley.
 2. Remove the 2 bolts (C), then remove the alternator brace (A).
 3. Remove the water (B) pump and gasket.

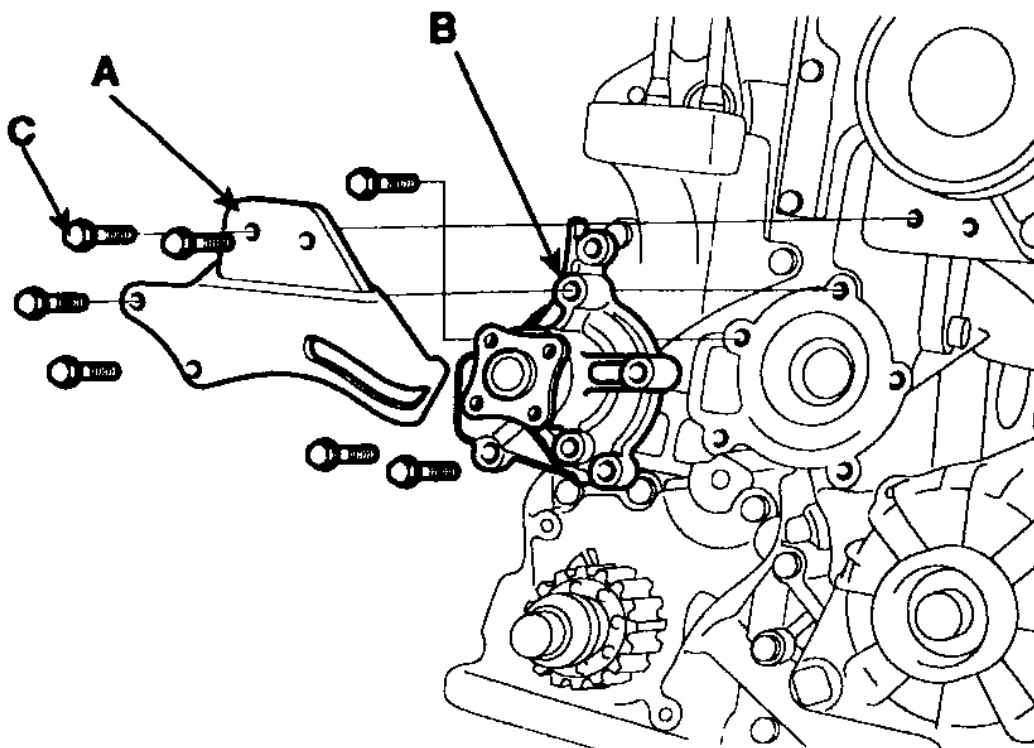


G03842465

Fig. 210: Removing Water Pump And Gasket
Courtesy of HYUNDAI MOTOR CO.

THERMOSTAT

NOTE: Removal of the thermostat would have an adverse effect, causing a lowering of cooling efficiency. Do not remove the thermostat, even if the engine tends to overheat.

1. Drain engine coolant so its level is below thermostat.
2. Remove water inlet (A), gasket and thermostat.

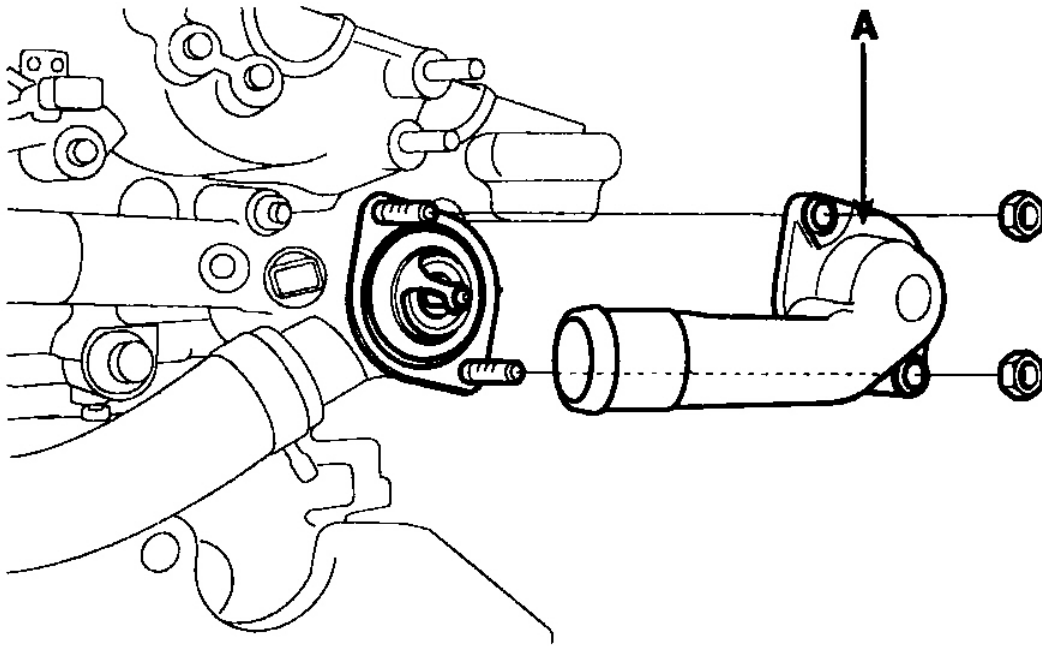


G03842466

Fig. 211: Removing Water Inlet, Gasket And Thermostat
Courtesy of HYUNDAI MOTOR CO.

RADIATOR


1. Drain the engine coolant.
2. Remove the upper and lower radiator hoses (A), and ATF cooler hoses.

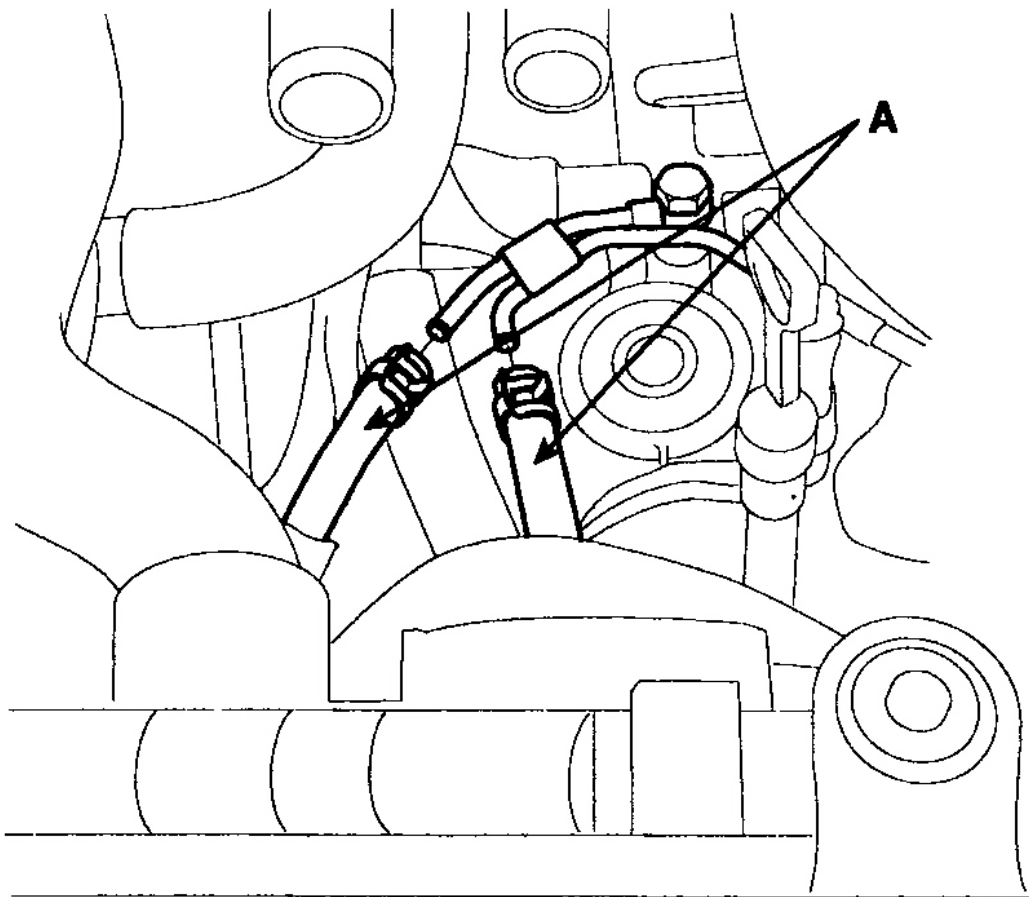

G03842467


Fig. 212: Removing Upper, Lower Radiator Hoses And ATF Cooler Hoses
Courtesy of HYUNDAI MOTOR CO.

3. Disconnect the fan motor connector (A).

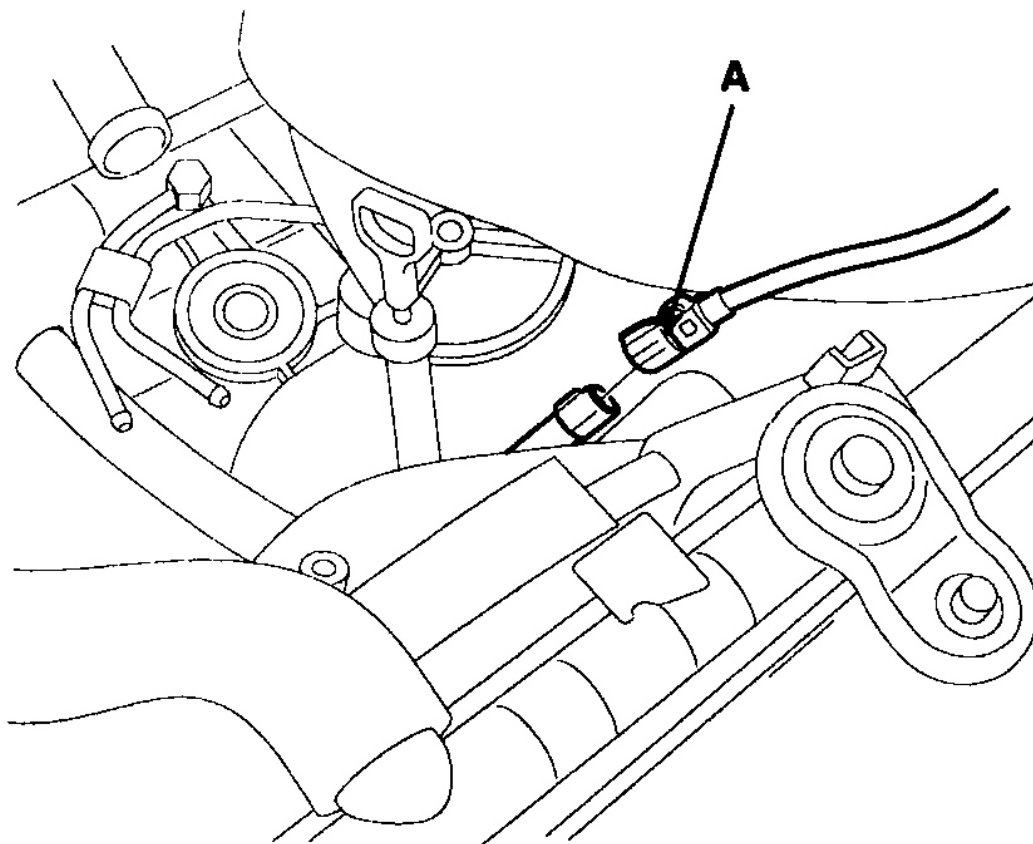

G03842468


Fig. 213: Disconnecting Fan Motor Connector
Courtesy of HYUNDAI MOTOR CO.

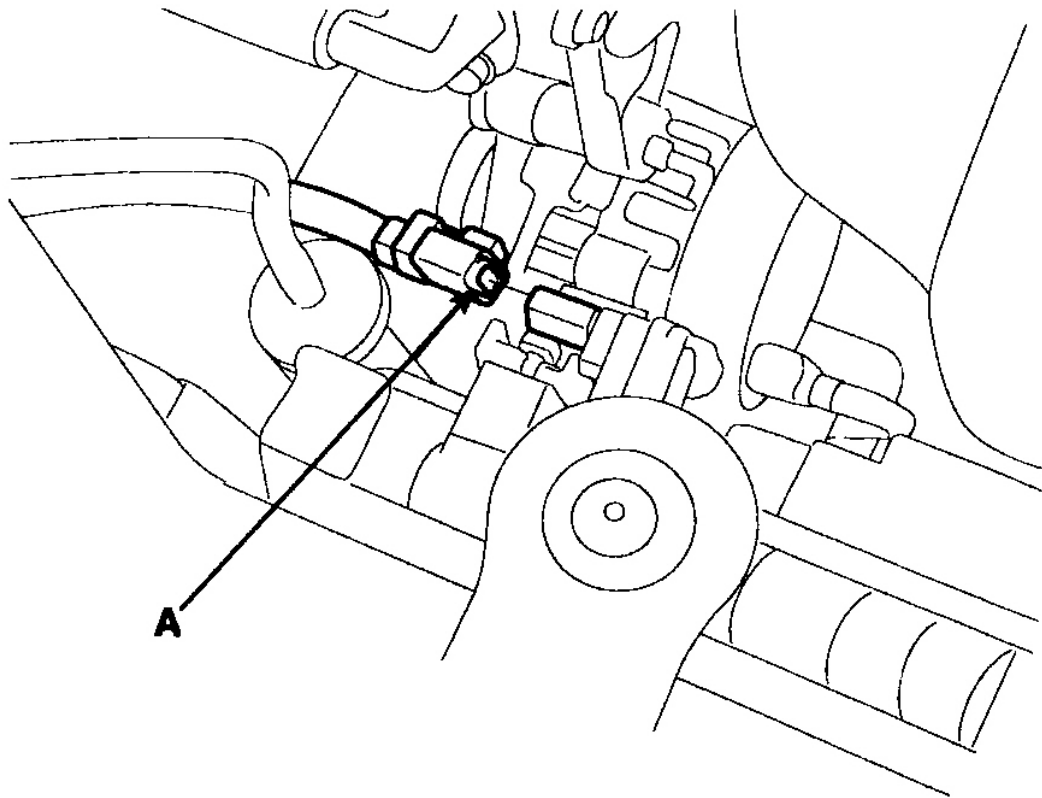

G03842469

Fig. 214: Disconnecting Fan Motor Connector
Courtesy of HYUNDAI MOTOR CO.


4. Separate the air conditioner condenser with radiator.
 1. Remove the heat shield.
 2. Remove the battery and battery tray.
 3. Remove the air duct (A) and make the task space.

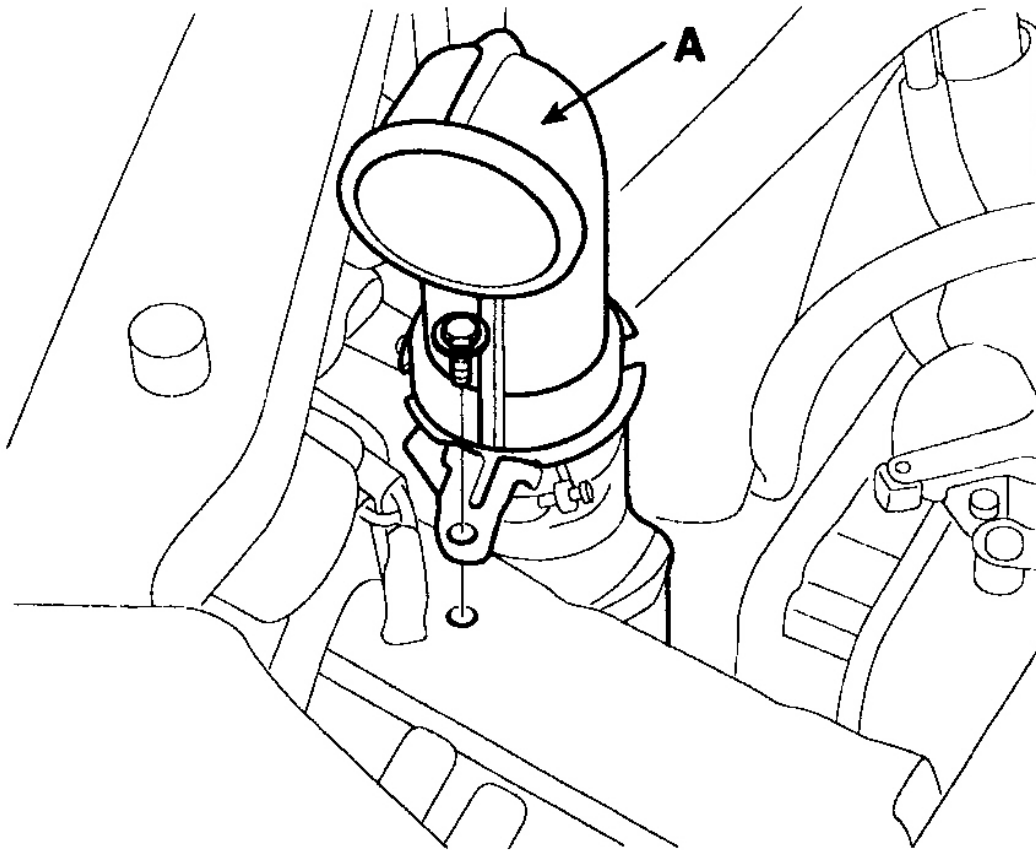

G03842470

Fig. 215: Removing Air Duct
Courtesy of HYUNDAI MOTOR CO.


4. Remove the reservoir tank (A) and make the task space.

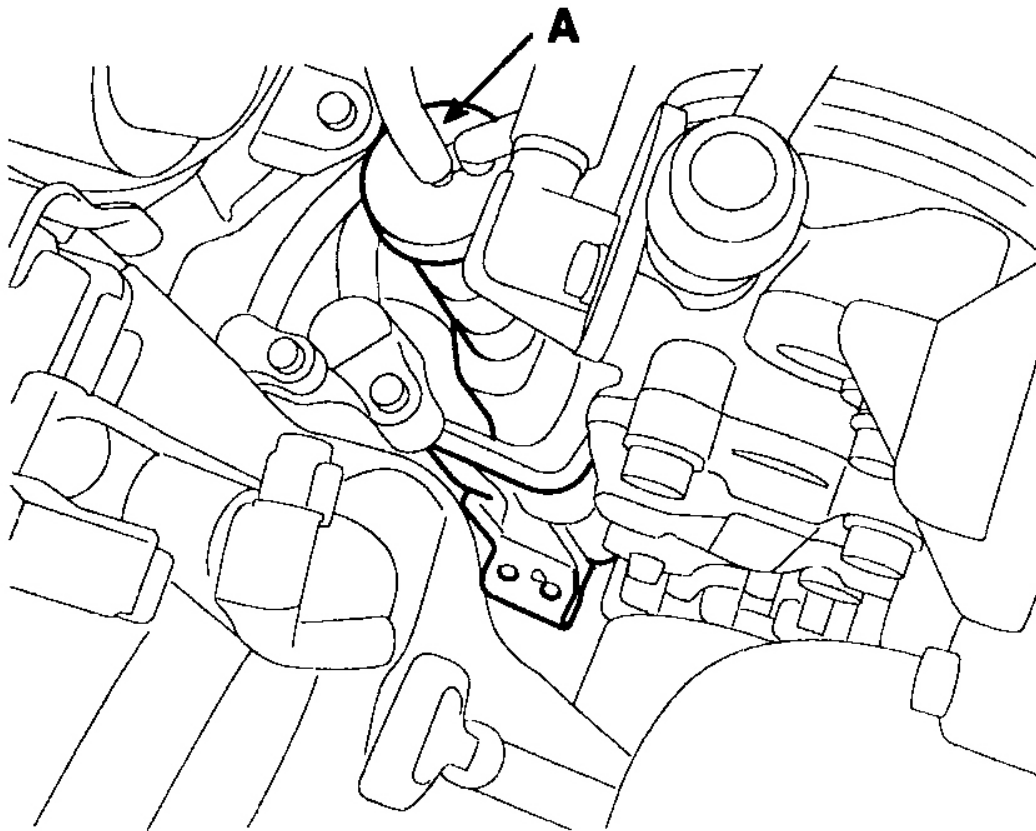

G03842471


Fig. 216: Removing Reservoir Tank
Courtesy of HYUNDAI MOTOR CO.

5. Remove the 10 mm bolt (A).

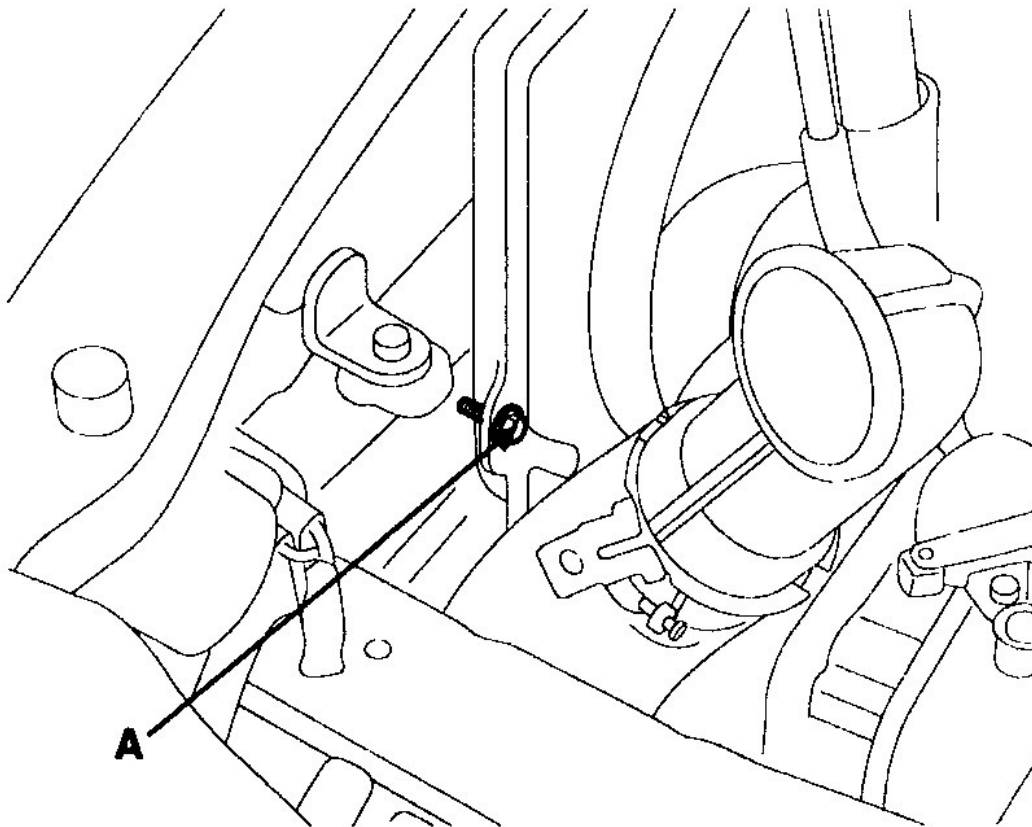

G03842472


Fig. 217: Removing Bolt
Courtesy of HYUNDAI MOTOR CO.

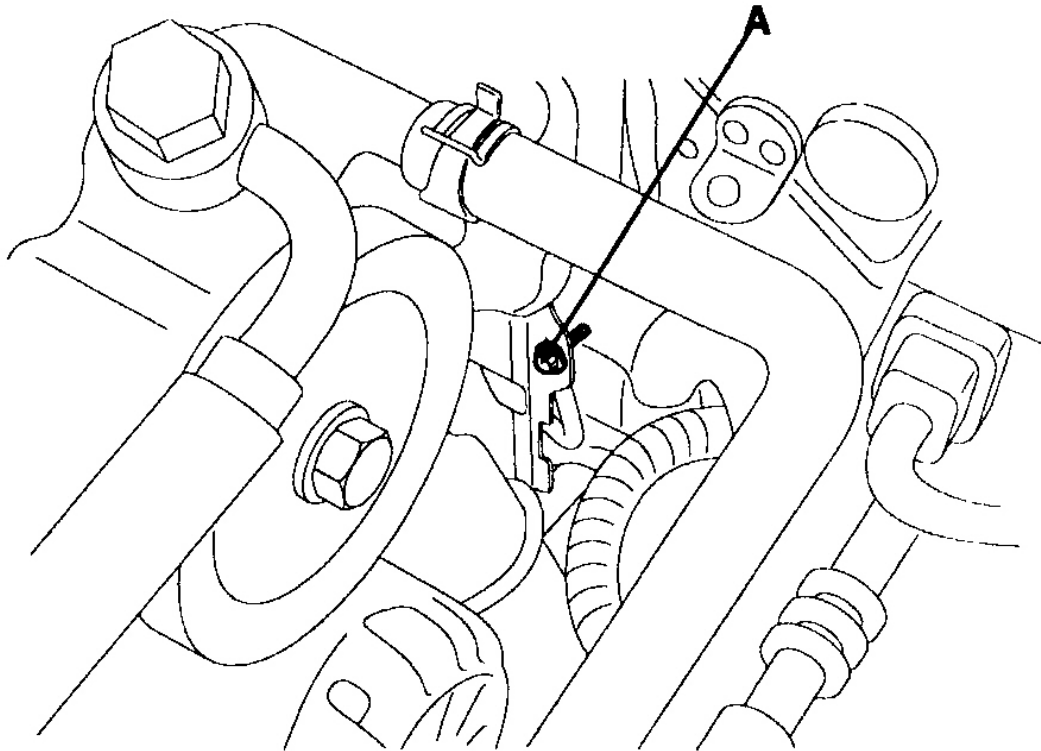

G03842473

Fig. 218: Locating Bolt
Courtesy of HYUNDAI MOTOR CO.

5. Remove the radiator upper bracket (A), then pull up the radiator.

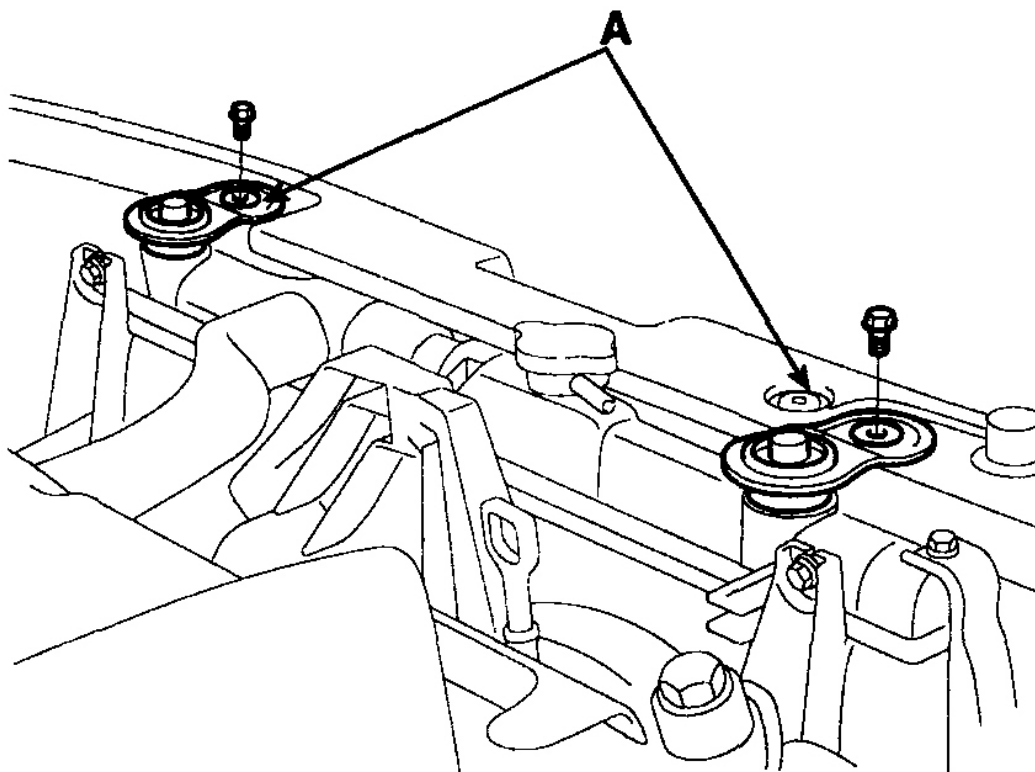

G03842474


Fig. 219: Removing Radiator Upper Bracket
Courtesy of HYUNDAI MOTOR CO.

6. Remove the cooling fan from the radiator.

INSPECTION

WATER PUMP

1. Check each part for cracks, damage or wear, and replace the coolant pump assembly if necessary.
2. Check the bearing for damage, abnormal noise and sluggish rotation, and replace the coolant pump assembly if necessary.

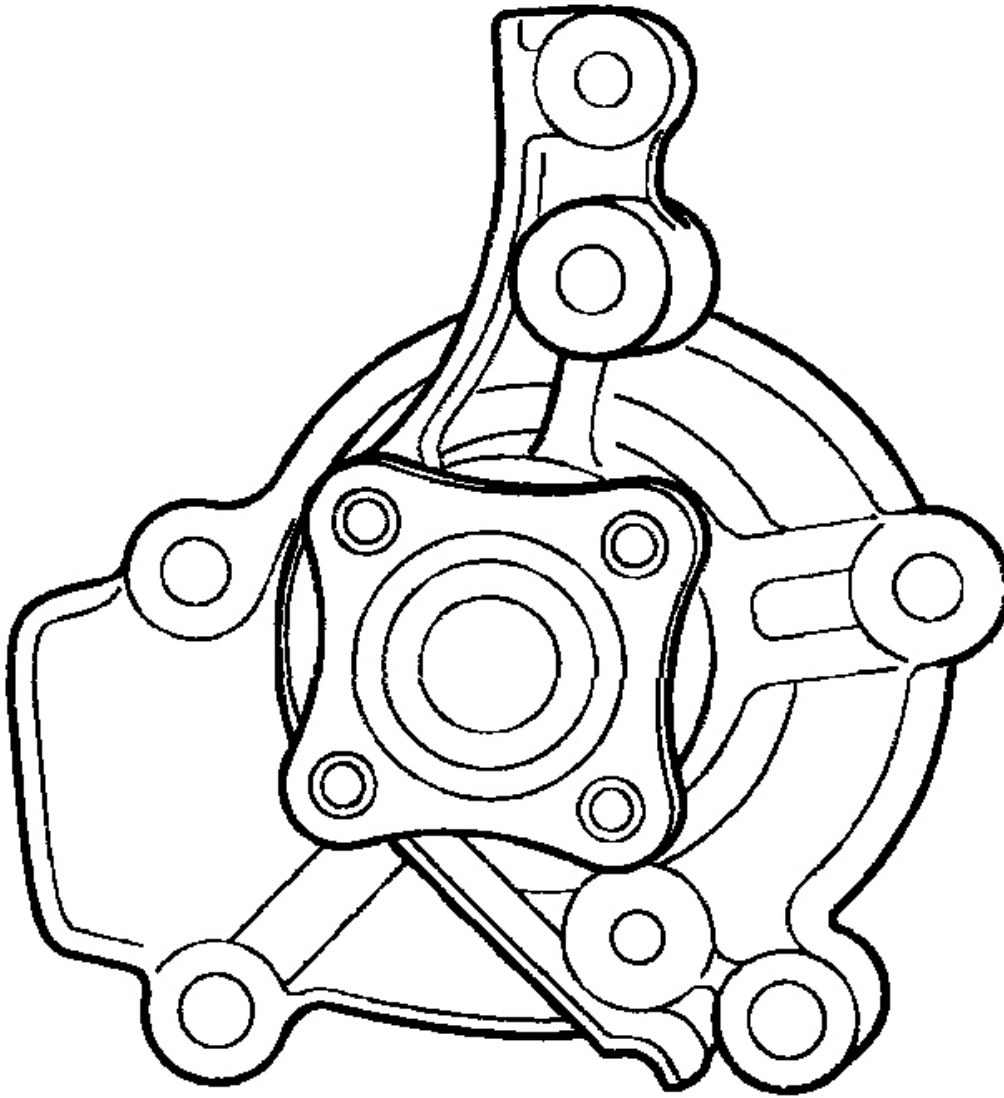

G03842475


Fig. 220: Identifying Water Pump
Courtesy of HYUNDAI MOTOR CO.

3. Check for coolant leakage. If coolant leaks from hole, the seal is defective. Replace the coolant pump assembly

NOTE: A small amount of "weeping" from the bleed hole is normal.

THERMOSTAT

1. Immerse the thermostat in water and gradually heat the water.

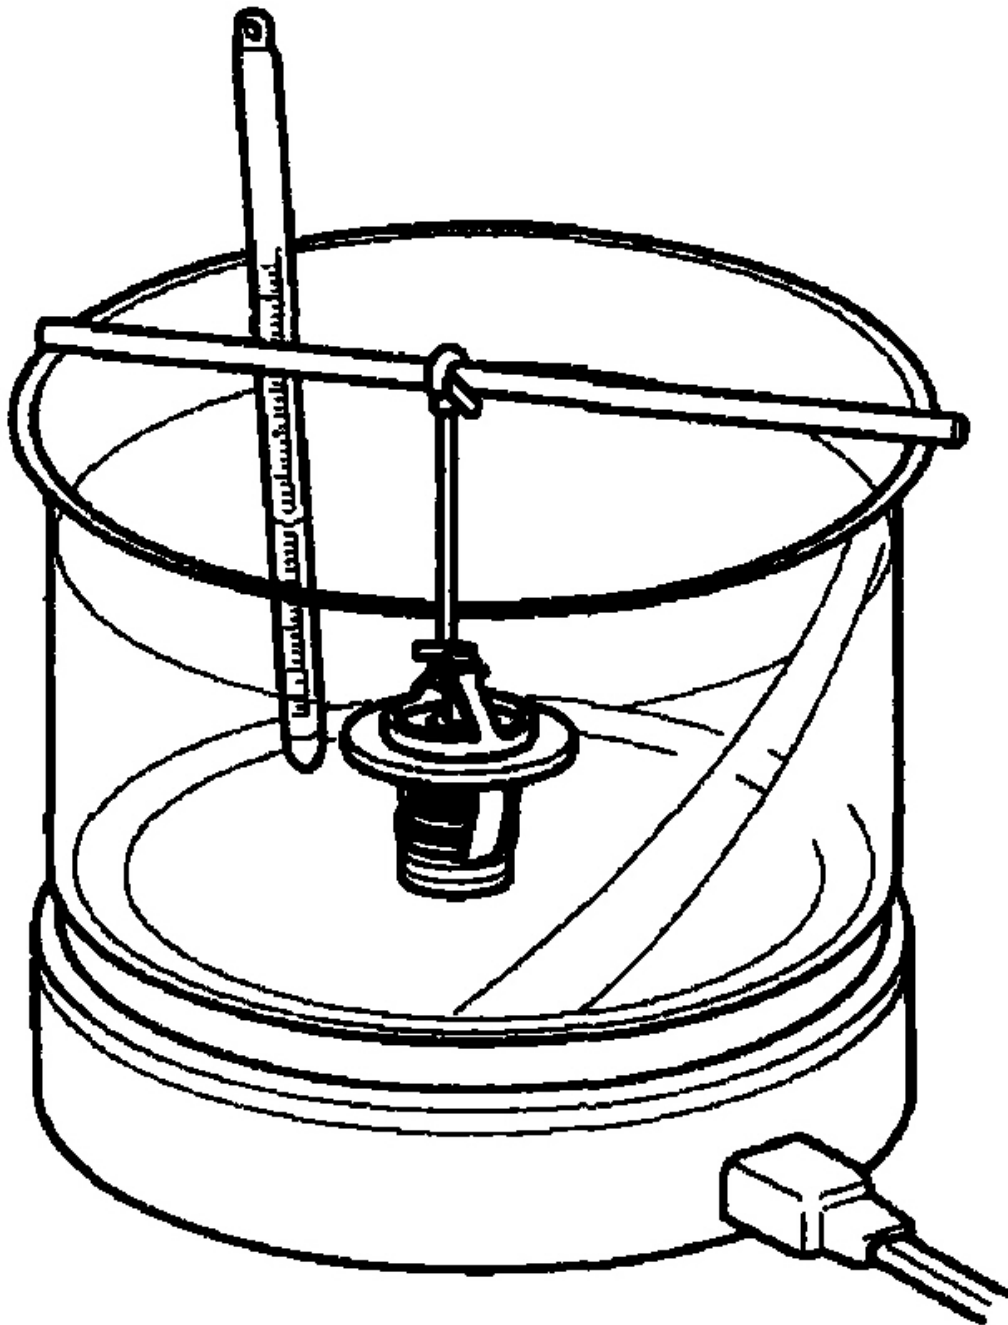

G03842476

Fig. 221: Immersing Thermostat In Water
Courtesy of HYUNDAI MOTOR CO.

2. Check the valve opening temperature.

Valve opening temperature: 82°C (177°F)

Full opening temperature: 95°C (205°F)

If the valve opening temperature is not as specified, replace the thermostat.

3. Check the valve lift.

Valve lift: 8 mm (0.3in.) or more at 95°C (205°F)

If the valve lift is not as specified, replace the thermostat.


INSTALLATION

WATER PUMP

1. Install the water pump.
 1. Install the water pump (B) and a new gasket with the 3 bolts.

Tightening torque

20 ~ 27Nm (200 ~ 270kgf.cm, 15 ~ 20lbf.ft)

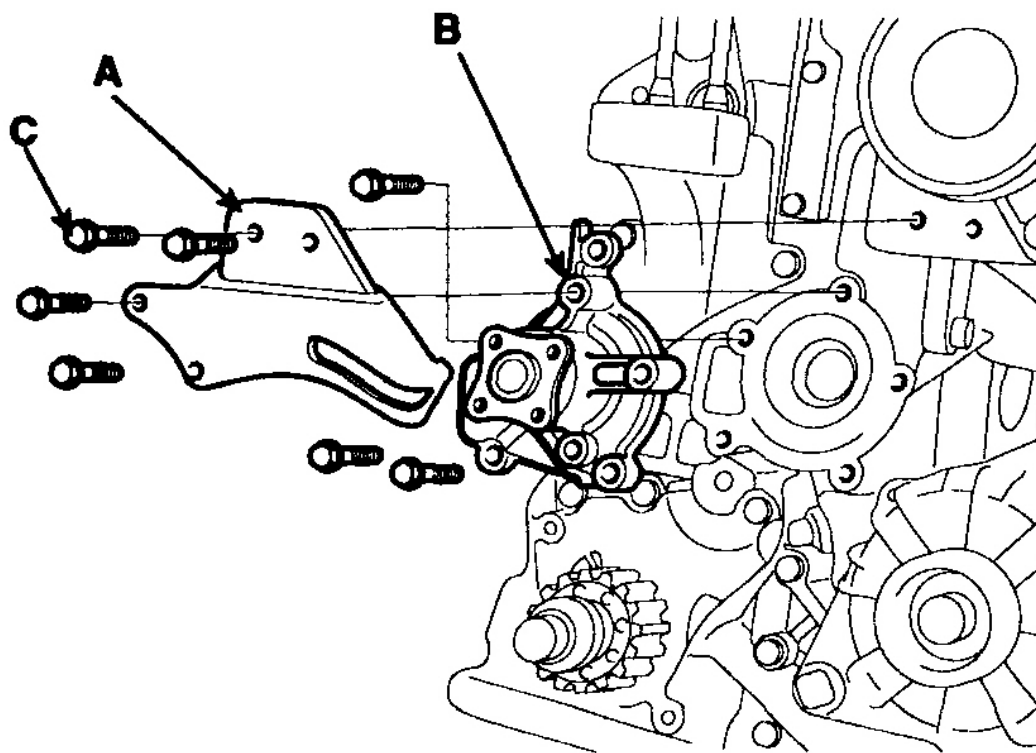


G03842477

Fig. 222: Installing Water Pump And New Gasket
Courtesy of HYUNDAI MOTOR CO.

2. Install the alternator brace (A) with the 2 bolts (C).
3. Install the 4 bolts and pump pulley.
2. Install the timing belt idler. (See 5)
3. Install the timing belt. (See **INSTALLATION**)
4. Install drive belts.
5. Fill with engine coolant.
6. Start engine and check for leaks.
7. Recheck engine coolant level.

THERMOSTAT

1. Place thermostat in thermostat housing.
 1. Install the thermostat with the jiggle valve upward.
 2. Install a new gasket (A) to the thermostat (B).

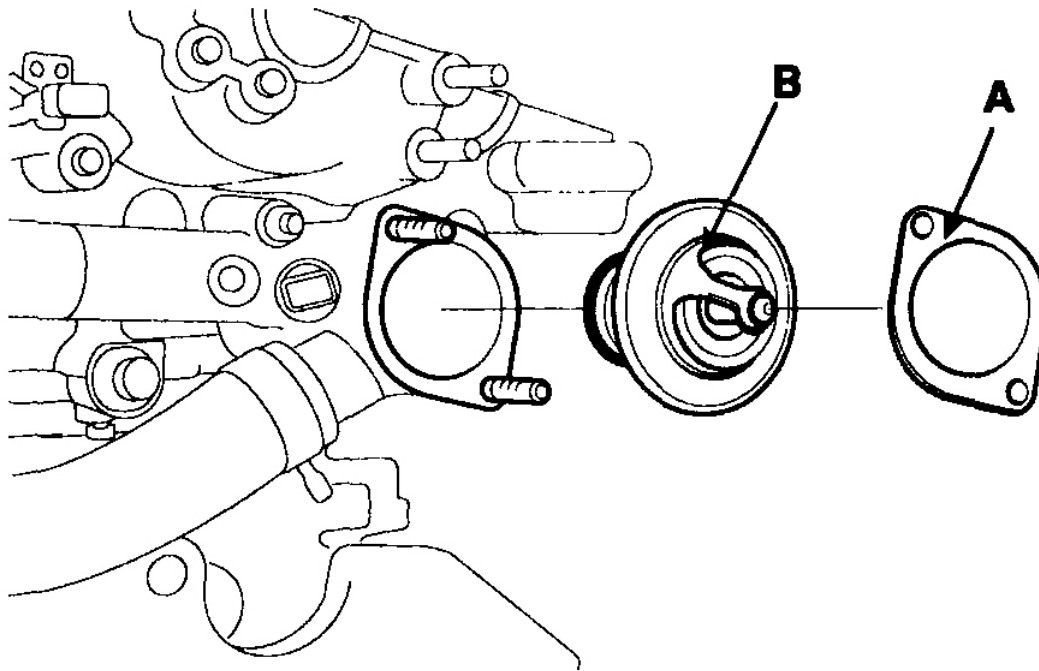


G03842478

Fig. 223: Placing Thermostat In Thermostat Housing
Courtesy of HYUNDAI MOTOR CO.

2. Install water inlet (A).

Tightening torque

15 ~ 20Nm (150 ~ 200kf.cm, 9 ~14bf.ft)

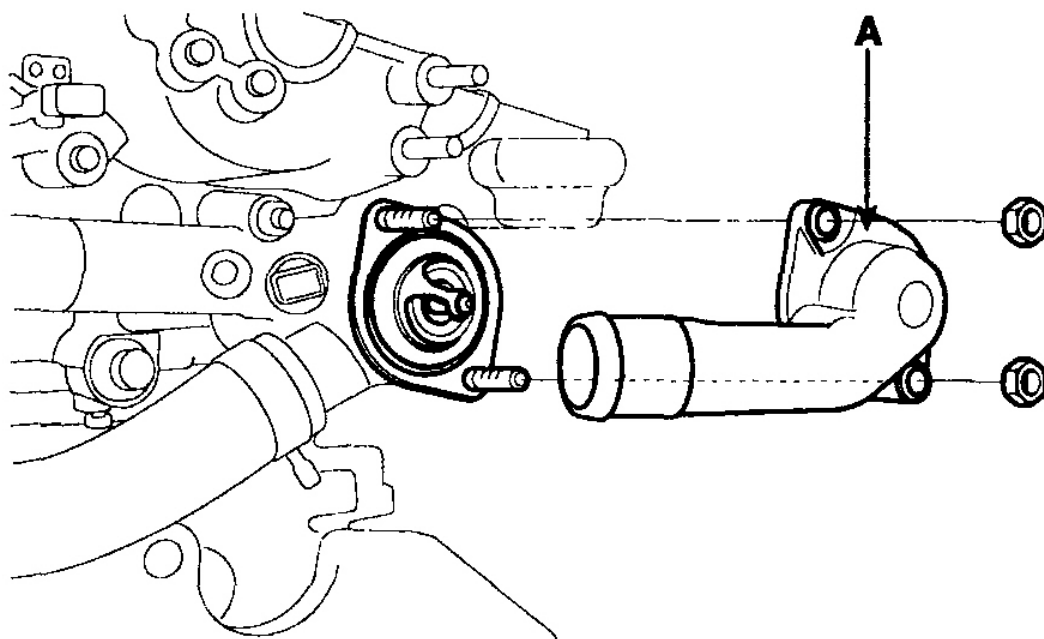

G03842479

Fig. 224: Installing Water Inlet
Courtesy of HYUNDAI MOTOR CO.


3. Fill with engine coolant.
4. Start engine and check for leaks.

RADIATOR

1. Install the cooling fan to the radiator.
2. Install the radiator at the air conditioner condenser. Installation is in the reverse order of removal.
3. Connect the fan motor connector.
4. Install the upper and lower radiator hoses, and ATF cooler hoses.
5. Fill with engine coolant.
6. Start engine and check for leaks.

LUBRICATION SYSTEM


COMPONENT

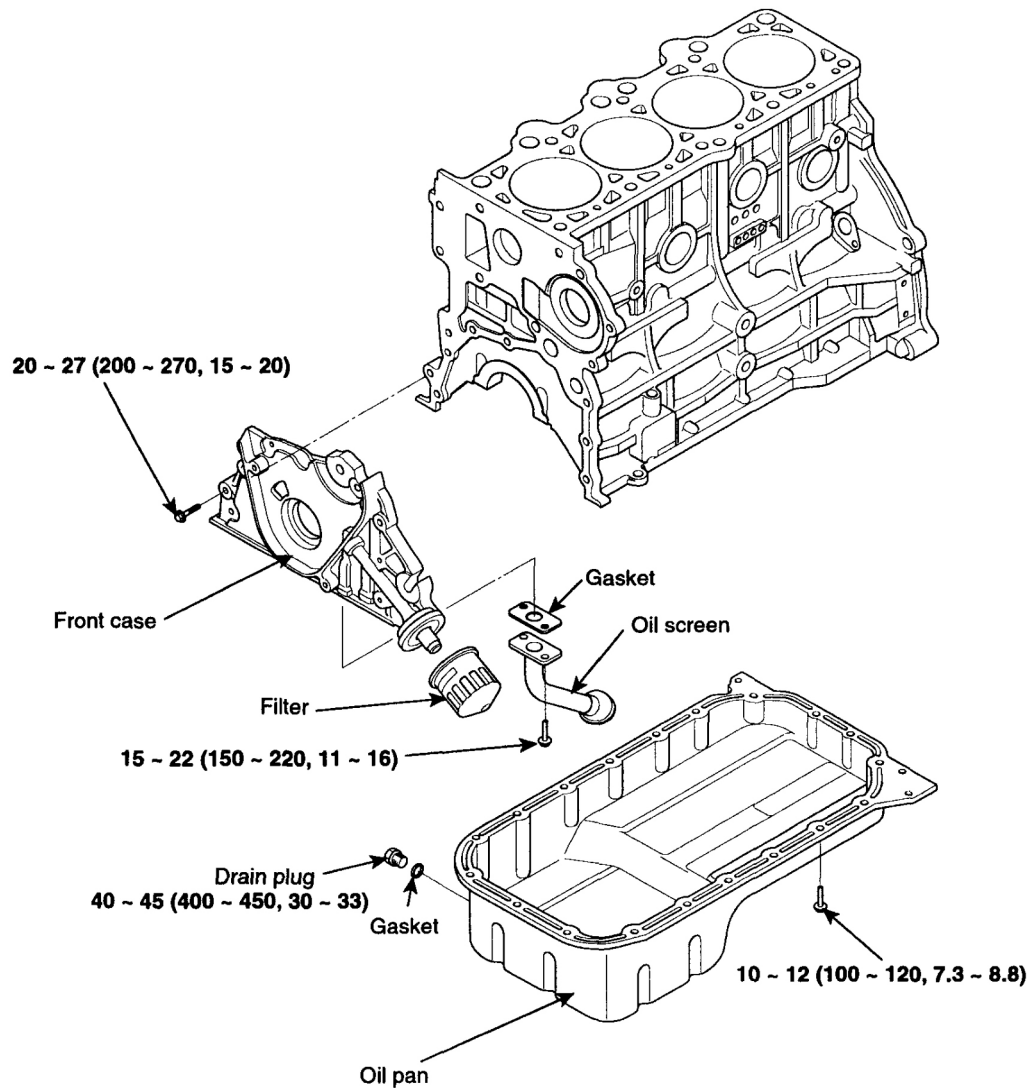

TORQUE : Nm (kgf.cm, lbf.ft)

G03842480

Fig. 225: Identifying Lubrication System Components With Torque Specifications (1 Of 2)
 Courtesy of HYUNDAI MOTOR CO.

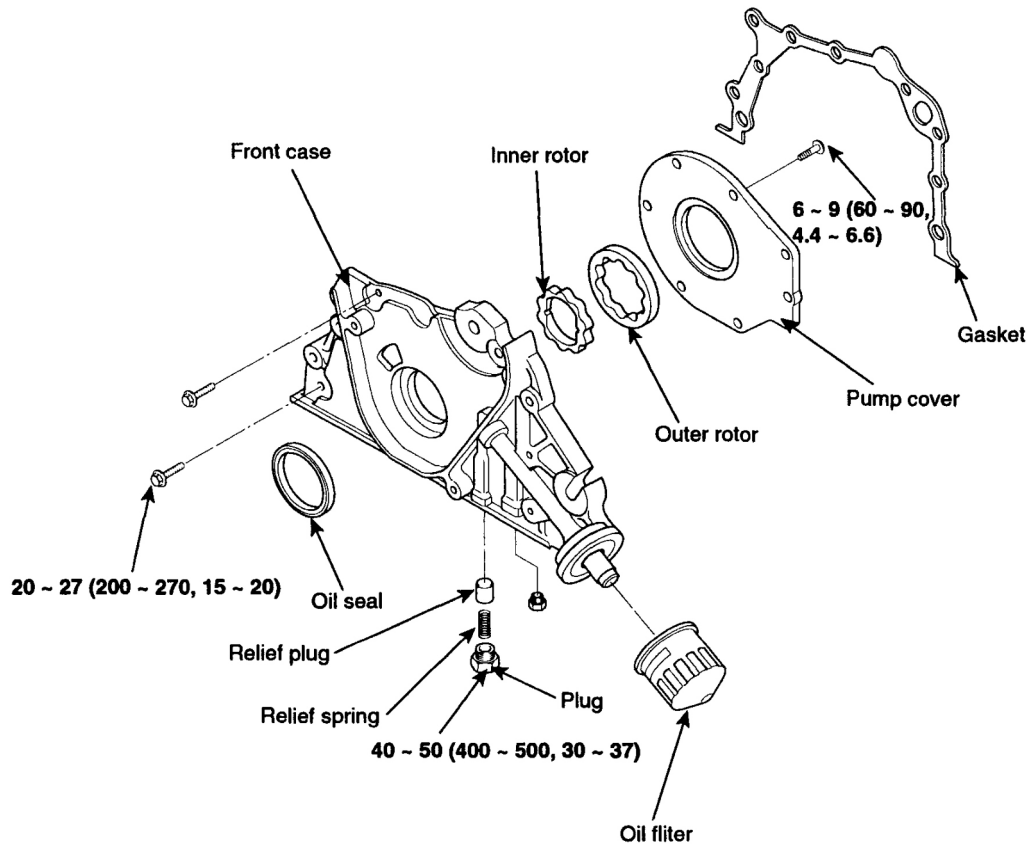

TORQUE : Nm (kgf.cm, lbf.ft)

G03842481

Fig. 226: Identifying Lubrication System Components With Torque Specifications (2 Of 2)
Courtesy of HYUNDAI MOTOR CO.

OIL AND FILTER

CAUTION:

- Prolonged and repeated contact with mineral oil will result in the removal of natural fats from the skin, leading to dryness, irritation and dermatitis. In addition, used engine oil contains potentially harmful contaminants which may cause skin cancer.
- Exercise caution in order to minimize the length and frequency of contact of your skin to used oil. Wear protective clothing and gloves. Wash your skin thoroughly with soap and water, or use water-less hand cleaner, to remove any used engine oil. Do not use gasoline,

thinners, or solvents.

- **In order to preserve the environment, used oil and used oil filter must be disposed of only at designated disposal sites.**

1. Drain engine oil.
 - a. Remove the oil filter cap.
 - b. Remove the oil drain plug, and drain the oil into a container.
2. Replace oil filter.
 - a. Remove the oil filter.
 - b. Check and clean the oil filter installation surface.
 - c. Check the part number of the new oil filter is as same as old one.
 - d. Apply clean engine oil to the gasket of a new oil filter.
 - e. Lightly screw the oil filter into place, and tighten it until the gasket contacts the seat.
 - f. Tighten it an additional 3/4 turn.
3. Refill with engine oil filter.
 - a. Clean and install the oil drain plug with a new gasket.

Tightening torque

40 ~ 45Nm (400 ~ 450kgf.cm, 30 ~ 33lbf.ft)

- b. Fill with fresh engine oil

Capacity

Drain and refill:

W/Oil filter change: 4.0I (4.23U.S.qts, 3.52Imp qts)

W/O Oil filter change: 3.7I (3.90U.S. qts, 3.26Imp qts)

- c. Install the oil filter cap.
4. Start engine and check for oil leaks.
 5. Recheck engine oil level.

INSPECTION

1. Check engine oil quality

Check the oil for deterioration, entry of water, discoloring or thinning.

If the quality is visibly poor, replace the oil.

2. Check engine oil level.

After warming up the engine and then 5 minutes after the engine stop, oil level should be between the "L" and "F" marks on the dipstick.

If low, check for leakage and add oil up to the "F" mark.

NOTE: Do not fill with engine oil above the "F" mark.

SELECTION OF ENGINE OIL

Recommended ILSAC classification GF3 OR ABOVE


Recommended API classification: SJ/SL OR ABOVE

Recommended SAE viscosity grades:

W/O-CVVT

2006 Hyundai Elantra GLS

2006 ENGINE Engine Mechanical System (G4GC - GSL 2.0L) - Elantra

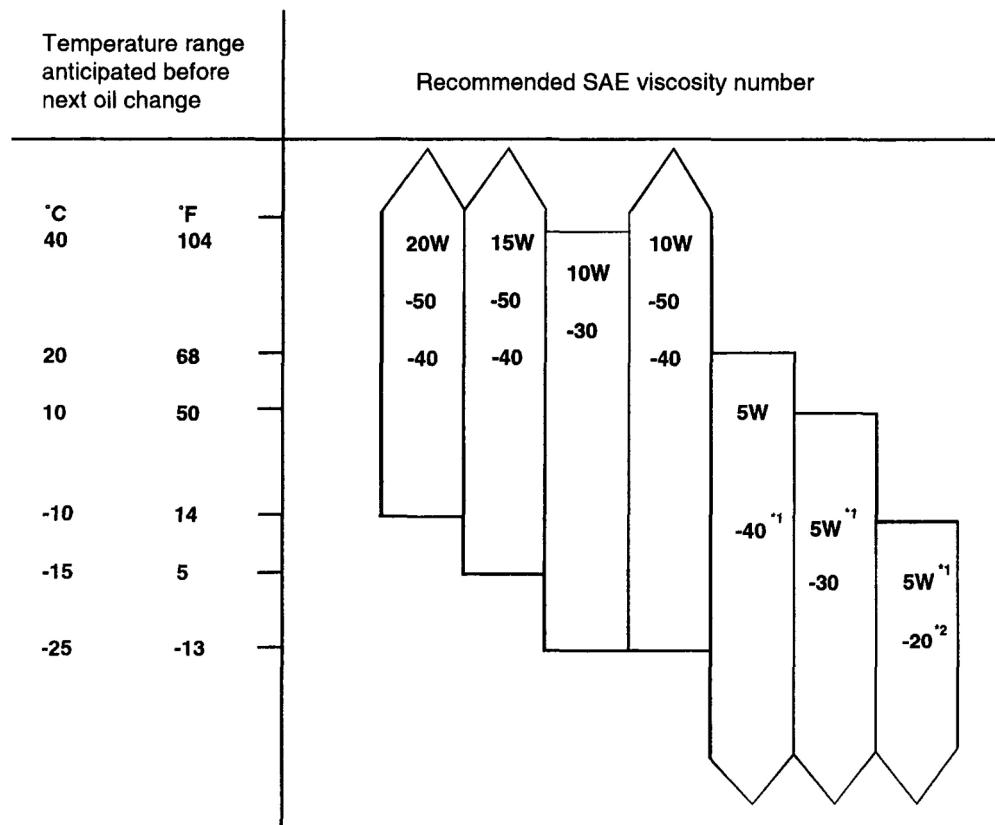

*1 Restricted by driving condition and environment.


*2 Not recommended for sustained high speed vehicle operation

G03842482

Fig. 227: Recommended SAE Viscosity Grades (W/O-CVVT)
 Courtesy of HYUNDAI MOTOR CO.

W/CVVT


4. Remove the timing belt. (See **REMOVAL**)
5. Remove the oil pan and oil screen. (See **DISASSEMBLY**)
6. Remove the front case.

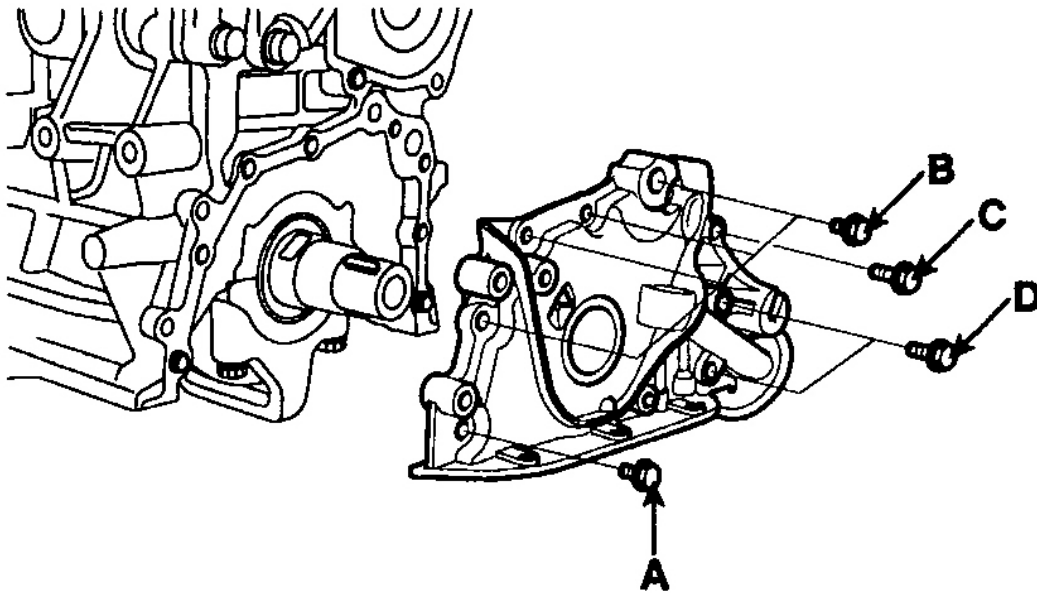

G03842484

Fig. 229: Removing Front Case
Courtesy of HYUNDAI MOTOR CO.


1. Remove the screws (B) from the pump housing, then separate the housing and cover (A).

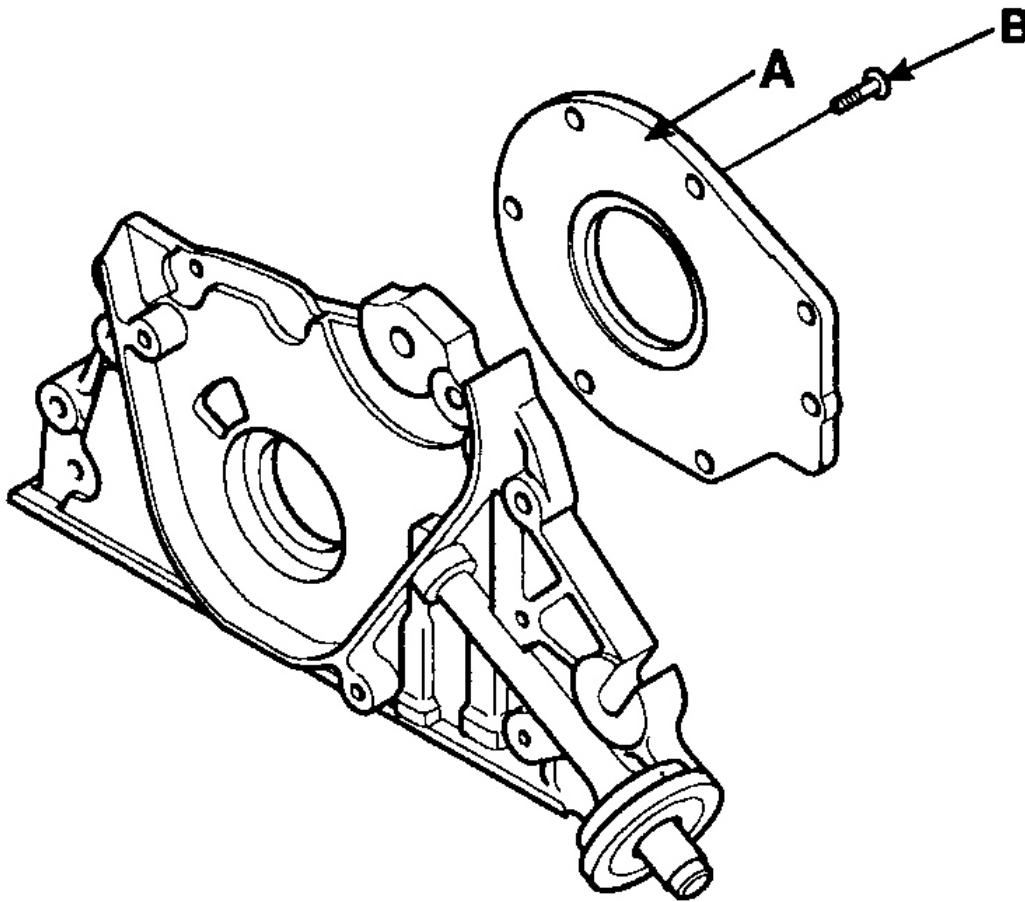

G03842485

Fig. 230: Separating Housing And Cover
Courtesy of HYUNDAI MOTOR CO.

2. Remove the inner (A) and outer (B) rotors.

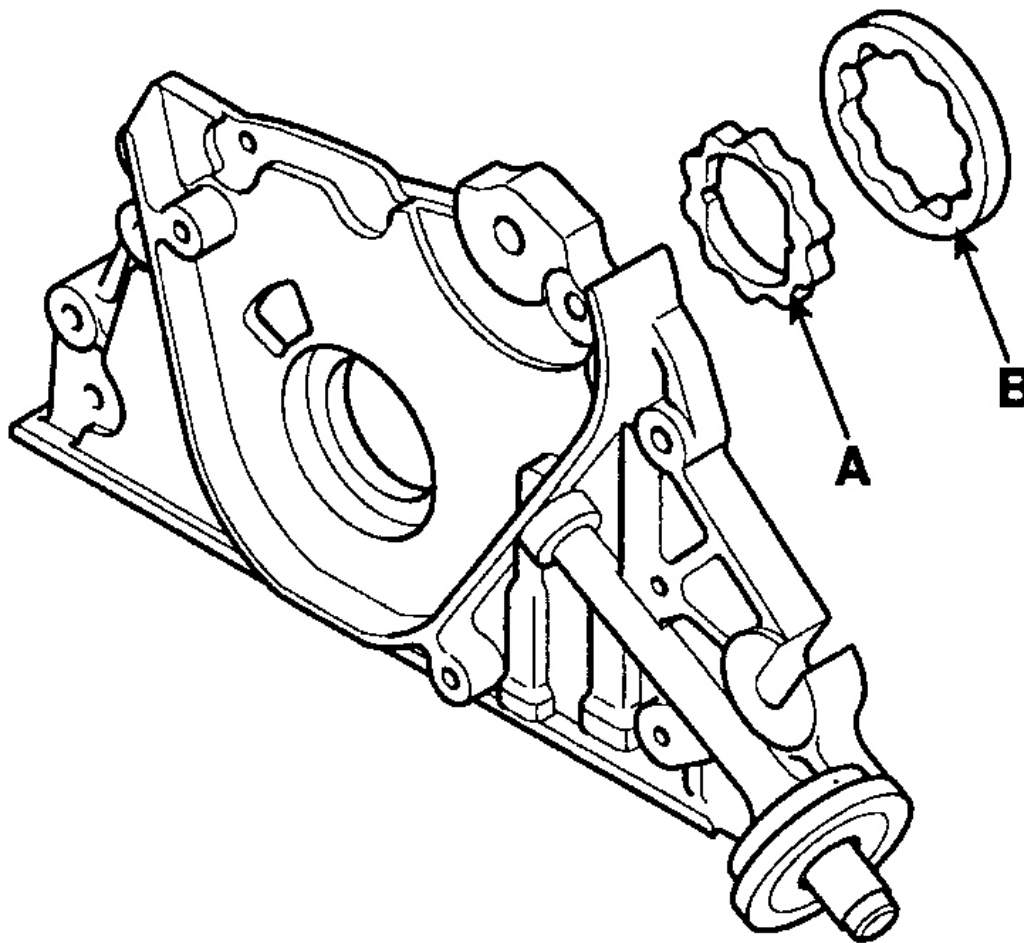


G03842486

Fig. 231: Removing Inner And Outer Rotors
Courtesy of HYUNDAI MOTOR CO.

DISASSEMBLY

1. Remove the relief plunger.

Remove the plug (A), spring (B) and relief plunger (C).

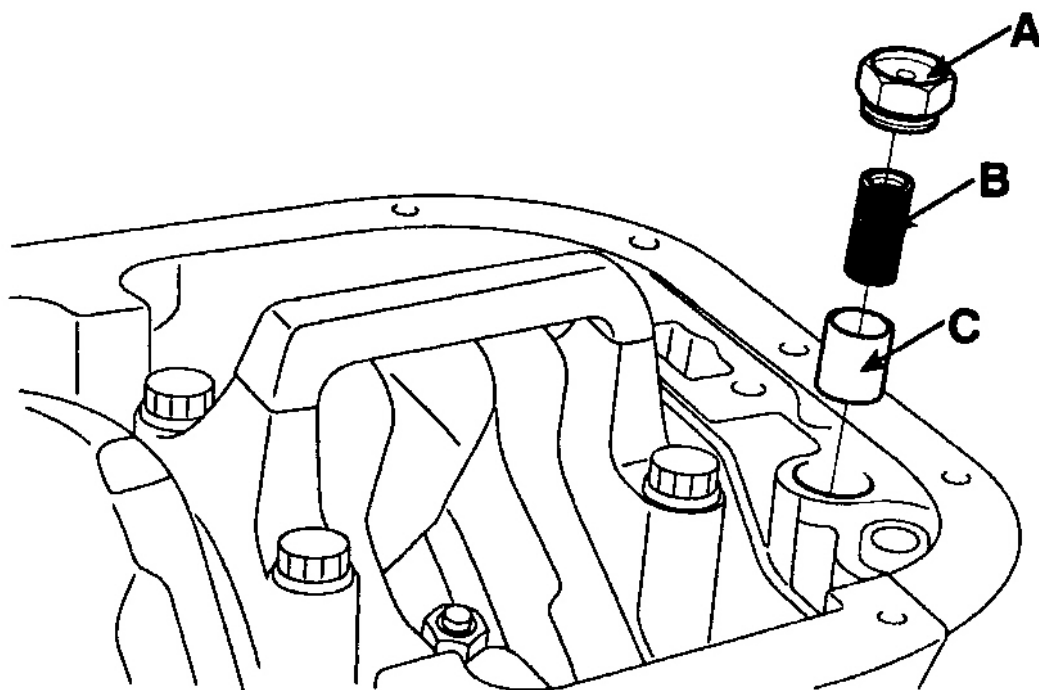

G03842487

Fig. 232: Removing Plug, Spring And Relief Plunger
Courtesy of HYUNDAI MOTOR CO.

INSPECTION

1. Inspect relief plunger.

Coat the valve with engine oil and check that it falls smoothly into the plunger hole by its own weight. If it does not, replace the relief plunger. If necessary, replace the front case.

2. Inspect relief valve spring.

Inspect for distorted or broken relief valve spring.

Standard value

Free height: 43.8 mm (1.724 in.)

Load: 3.7kg/40.1 mm (8.14 lb/1.579 in.)

3. Inspect rotor side clearance.

Using a feeler gauge and precision straight edge, measure the clearance between the rotors and precision straight edge.

SIDE CLEARANCE SPECIFICATION

Side clearance	Outer gear	0.04 ~ 0.09 mm (0.0016 ~0.0035in.)
	Inner gear	0.04 ~ 0.085 mm (0.0016 ~0.0033in.)

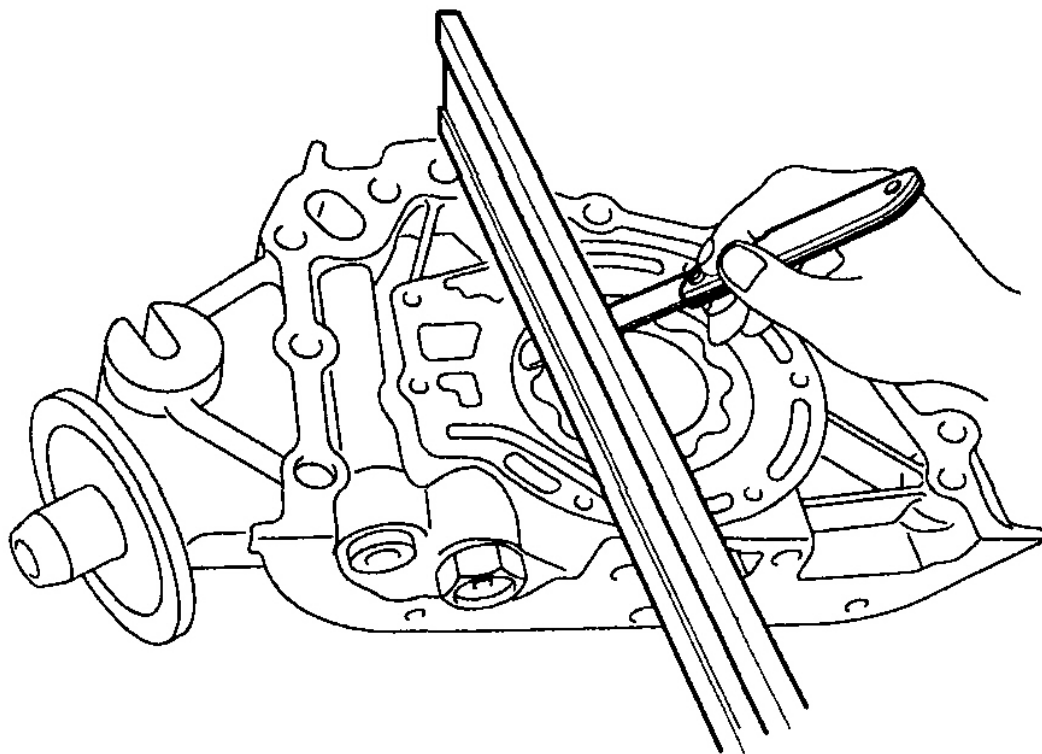
**G03842488**

Fig. 233: Measuring Clearance Between Rotors And Precision Straight Edge
Courtesy of HYUNDAI MOTOR CO.


If the side clearance is greater than maximum, replace the rotors as a set. If necessary, replace the front case.

4. Inspect rotor tip clearance.

Using a feeler gauge, measure the tip clearance between the inner and outer rotor tips.

Tip clearance

0.025 ~ 0.069 mm (0.0010 ~ 0.0027 in.)

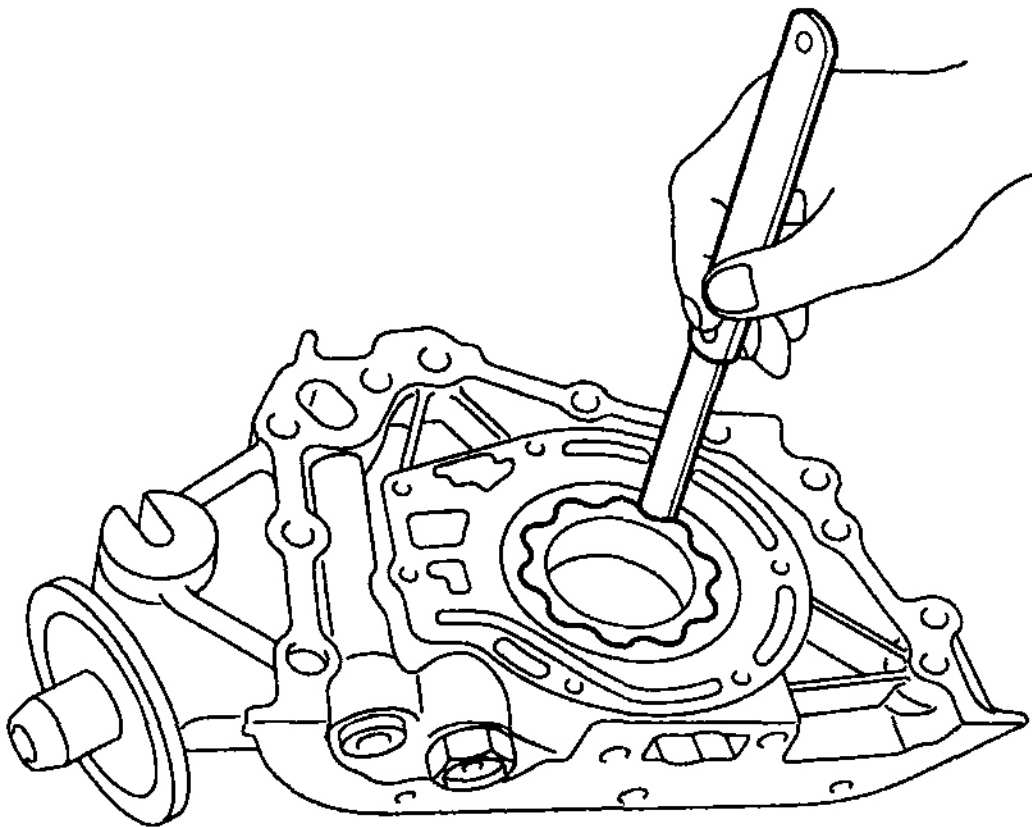

G03842489

Fig. 234: Inspecting Rotor Tip Clearance
Courtesy of HYUNDAI MOTOR CO.


If the tip clearance is greater than maximum, replace the rotor as a set.

5. Inspect rotor body clearance.

Using a feeler gauge, measure the clearance between the outer rotor and body.

Body clearance

0.12 ~ 0.185 mm (0.0047 ~ 0.0073 in.)

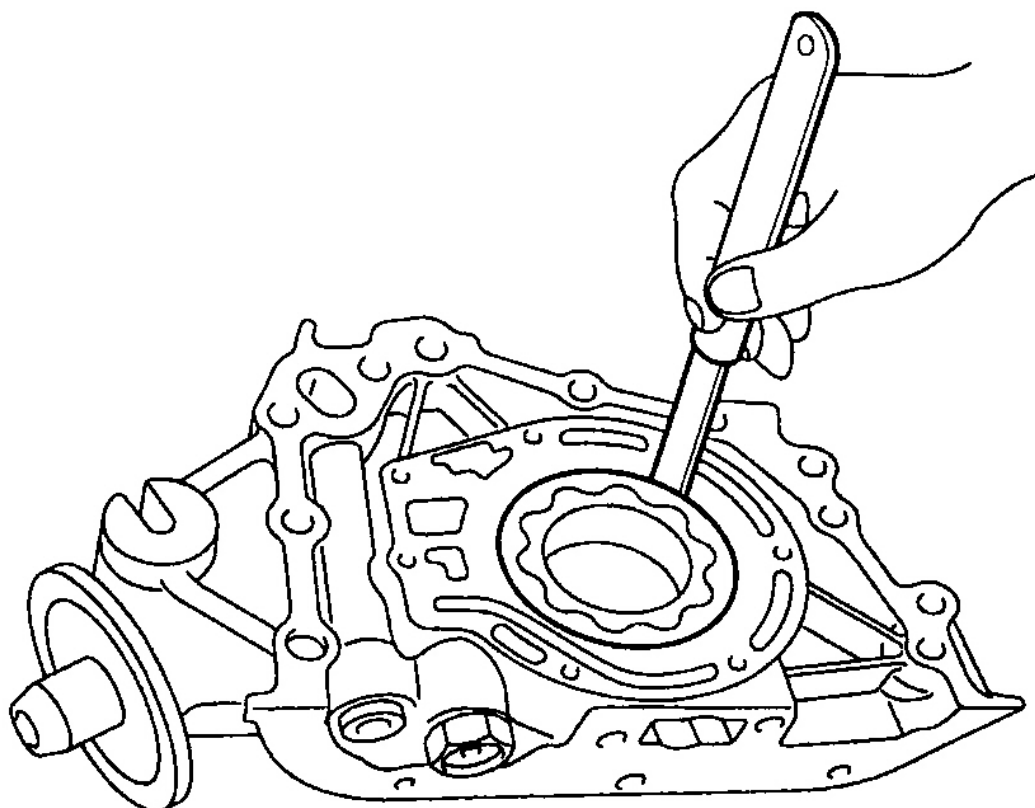

G03842490

Fig. 235: Measuring Clearance Between Outer Rotor And Body
Courtesy of HYUNDAI MOTOR CO.

If the body clearance is greater than maximum, replace the rotors as a set. If necessary, replace the front case.


REASSEMBLY

1. Install relief plunger.

Install relief plunger (C) and spring (B) into the front case hole, and install the plug (A).

Tightening torque

40 ~ 50Nm (400 ~ 500kgf.cm, 30 ~ 37lbf.ft)

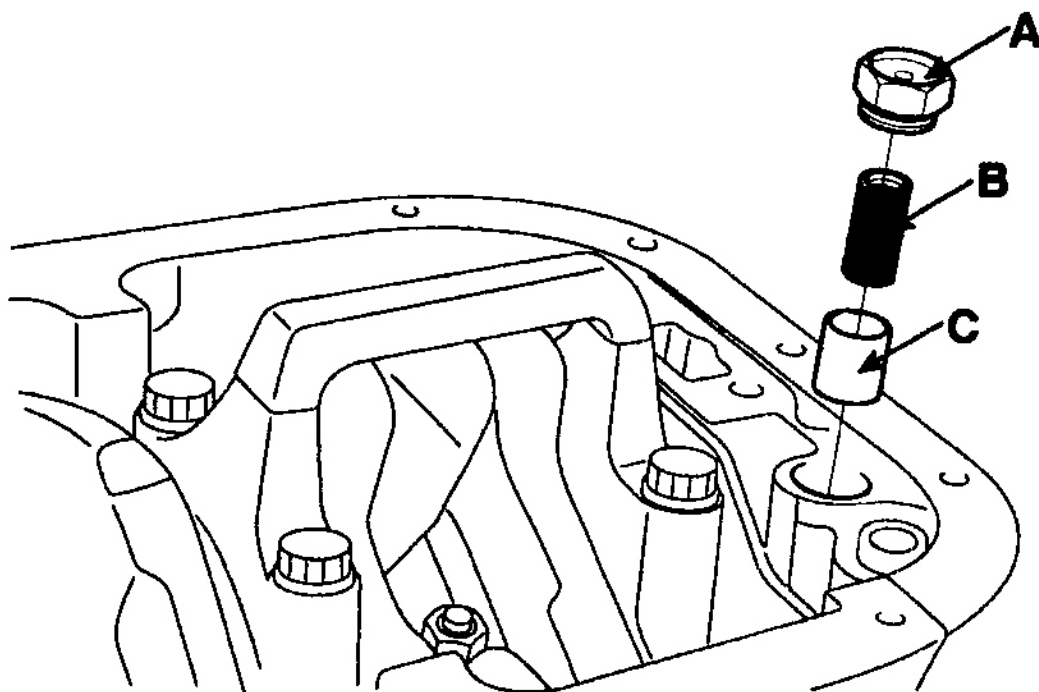

G03842491


Fig. 236: Installing Relief Plunger, Spring And Plug
Courtesy of HYUNDAI MOTOR CO.

INSTALLATION

1. Install oil pump.
 1. Place the inner and outer rotors into front case with the marks facing the oil pump cover side.
 2. Install the oil pump cover (A) to front case with the 7 screws (B).

Tightening torque

6 ~ 9Nm (60 ~ 90kgf.cm, 4.4 ~ 6.6lbf.ft)

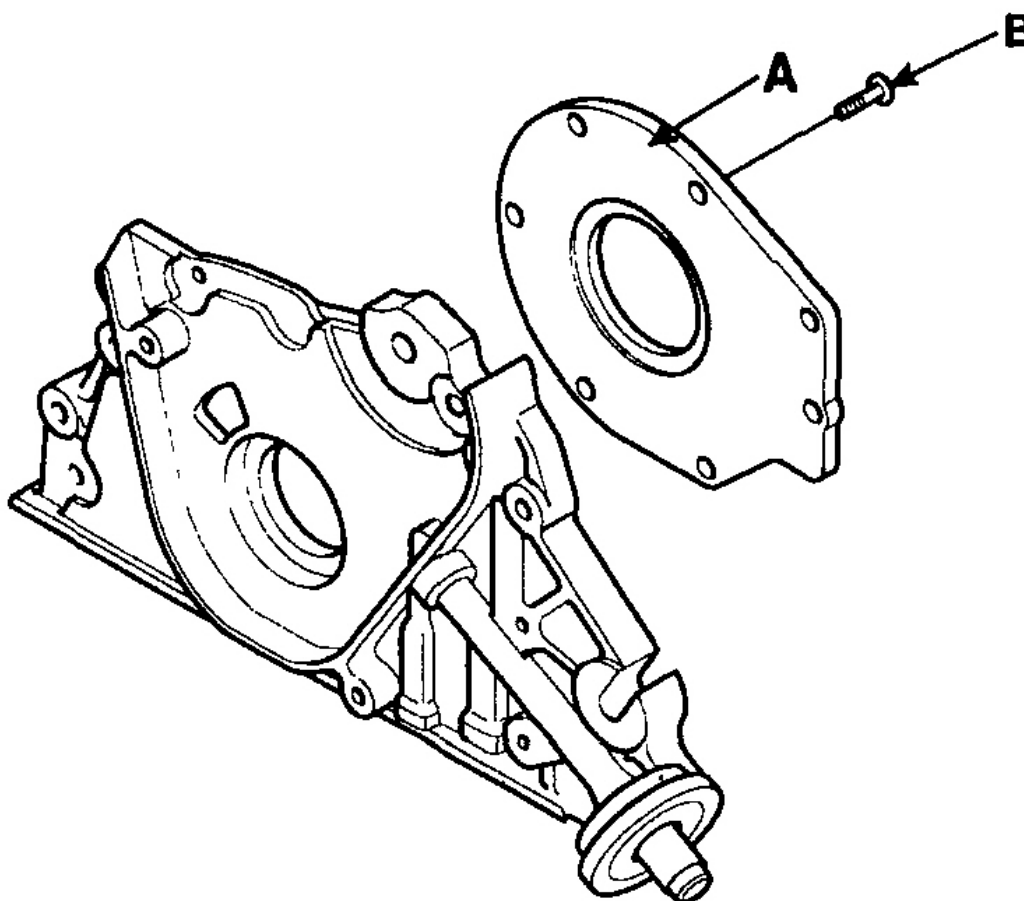


G03842492

Fig. 237: Installing Oil Pump Cover
Courtesy of HYUNDAI MOTOR CO.

2. Check that the oil pump turns freely.
3. Install the oil pump on the cylinder block.

Place a new front case gasket on the cylinder block. Apply engine oil to the lip of the oil pump seal. Then, install the oil pump onto the crankshaft. When the pump is in place, clean any excess grease off the crankshaft and check that the oil seal lip is not distorted.

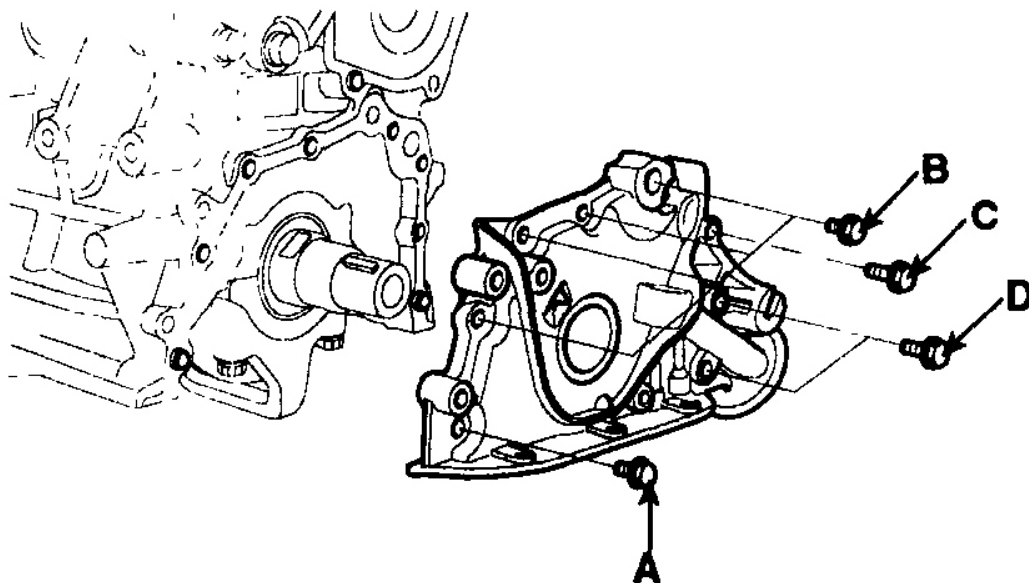

Body length

(A) : 25mm (0.98 in)

(B) : 20mm (0.787 in)

(C) : 38mm (1.496 in)

(D) : 45mm (1.771 in)

G03842493

Fig. 238: Installing Oil Pump On Cylinder Block
Courtesy of HYUNDAI MOTOR CO.

Body length

A. : 25 mm (0.98 in)

B. : 20 mm (0.787 in)


C. : 38 mm (1.496 in)

D. : 45 mm (1.771 in)

Tightening torque

20 ~ 27Nm (200 ~ 270kg.cm, 14.5 ~ 19.8 lb.ft)

4. Apply a light coat of oil to the seal lip.
5. Using the SST(09214-33000), install the oil seal.

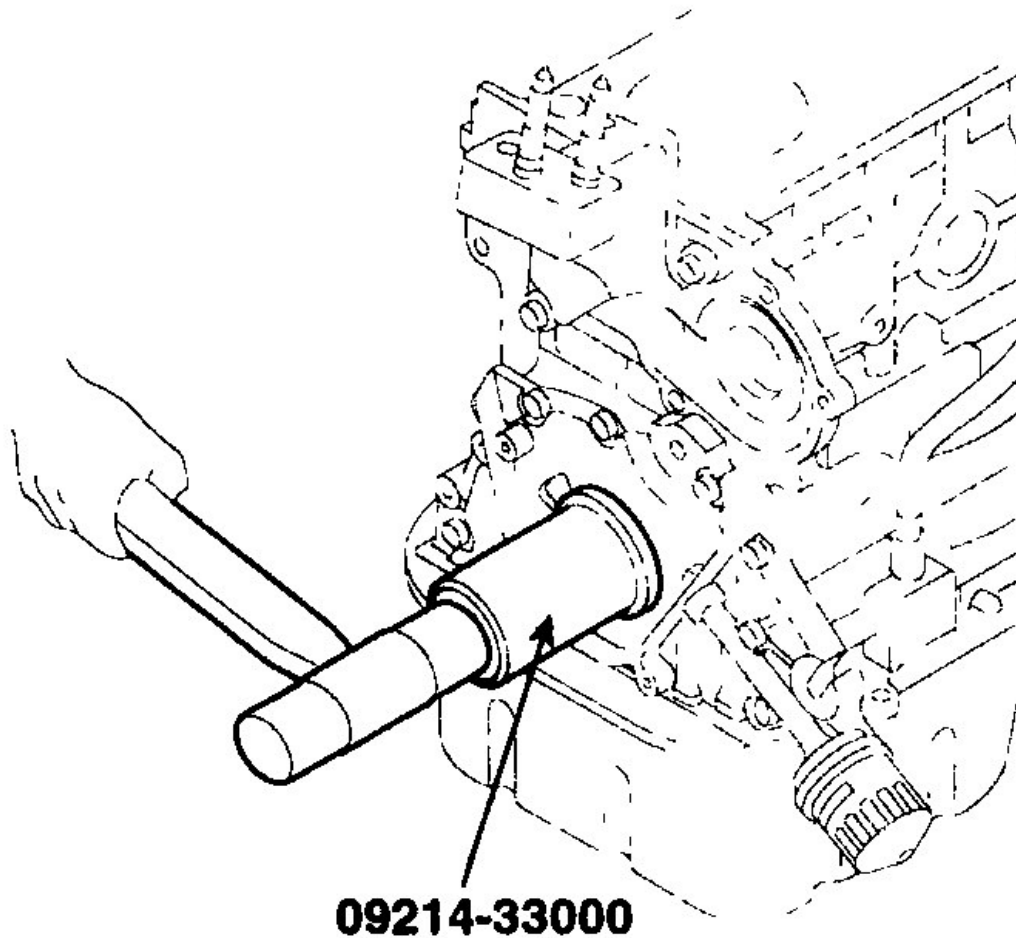

G03842494

Fig. 239: Installing Oil Seal Using SST(09214-33000)
Courtesy of HYUNDAI MOTOR CO.


6. Install the oil screen. (See 14)
7. Install the oil pan. (See 15)

NOTE: Clean the oil pan gasket mating surfaces.

INTAKE AND EXHAUST SYSTEM

COMPONENT

INTAKE MANIFOLD

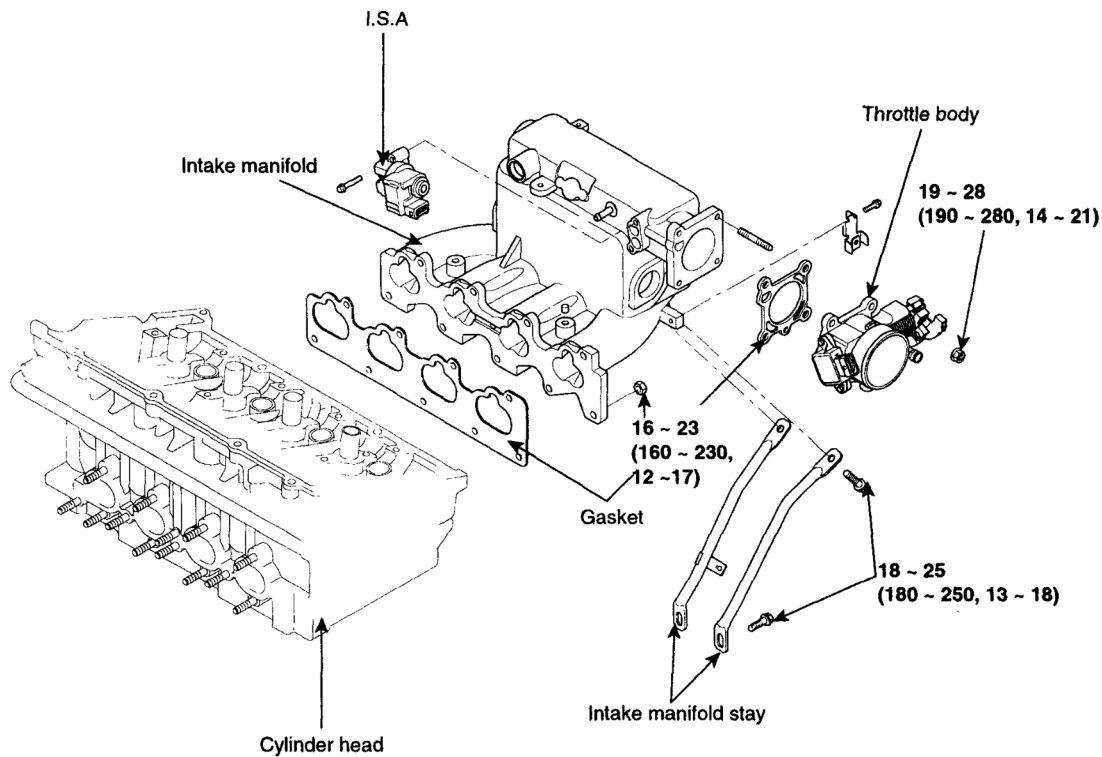


TORQUE : Nm (kgf.cm, lbf.ft)

G03842495

Fig. 240: Identifying Intake Manifold Components With Torque Specifications
Courtesy of HYUNDAI MOTOR CO.

EXHAUST MANIFOLD

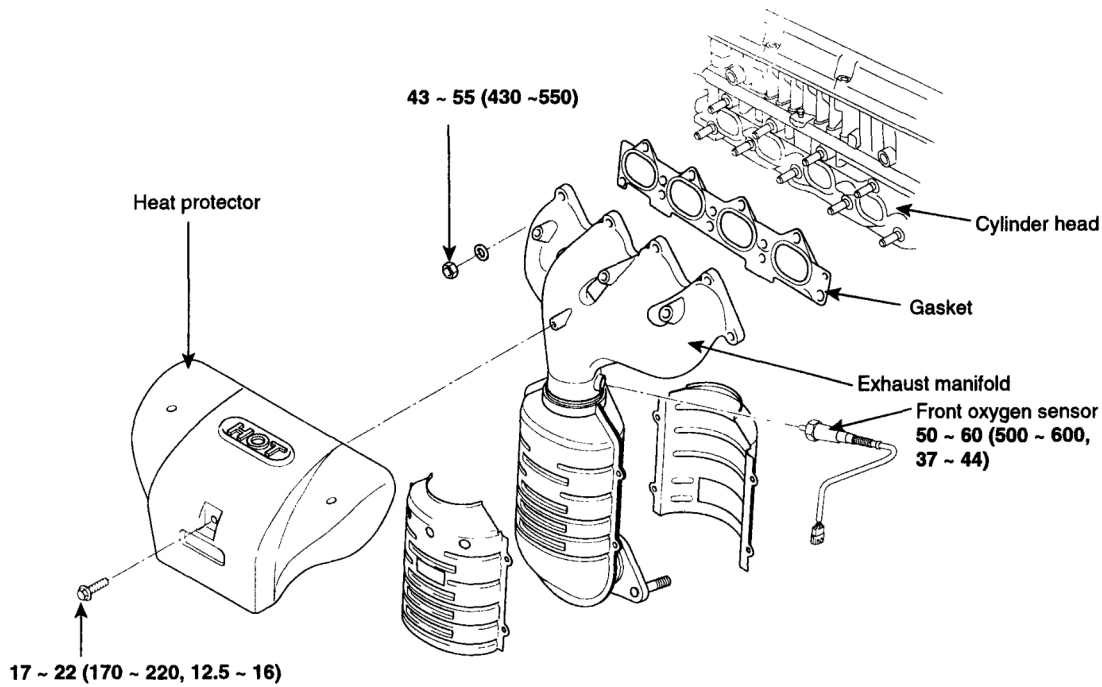


TORQUE : Nm (kgf.cm, lb.ft)

G03842496

Fig. 241: Identifying Exhaust Manifold Components With Torque Specifications
Courtesy of HYUNDAI MOTOR CO.

MUFFLER

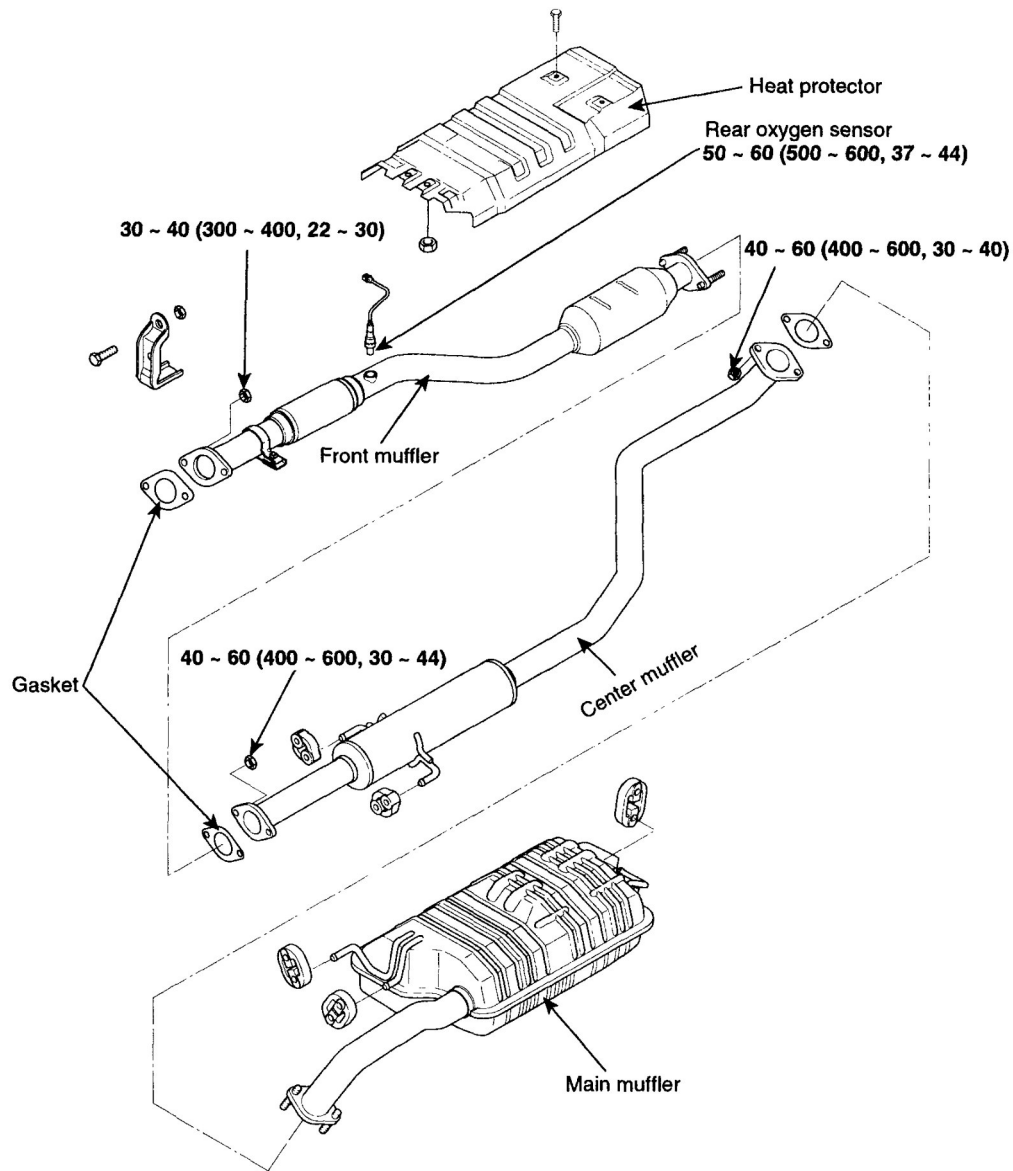

TORQUE : Nm (kgf.cm, lbf.ft)

G03842497

Fig. 242: Identifying Intake And Exhaust System Components - Muffler With Torque Specifications
Courtesy of HYUNDAI MOTOR CO.