

2010 ENGINE

Engine Mechanical (VK50VE) - FX35 & FX50

SYMPTOM DIAGNOSIS

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

NVH Troubleshooting - Engine Noise

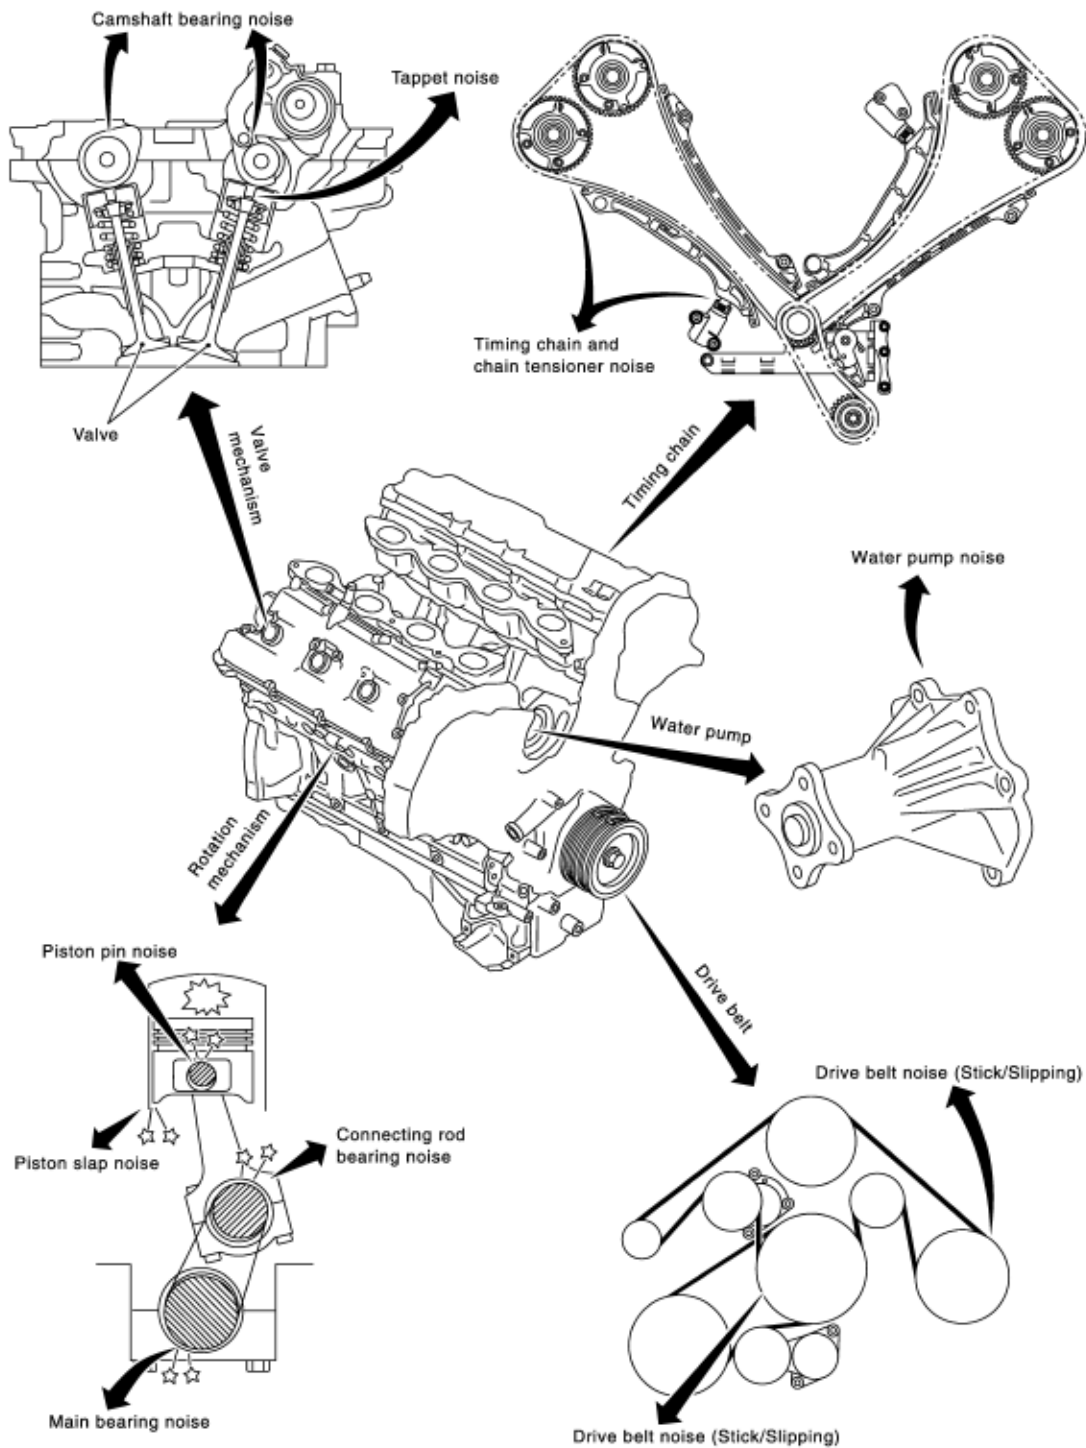


Fig. 1: NVH Troubleshooting Table
Courtesy of NISSAN MOTOR CO., U.S.A.

Use the Table Below to Help You Find the Cause of the Symptom

1. Locate the area where noise occurs.

2. Confirm the type of noise.
3. Specify the operating condition of the engine.
4. Check specified noise source.

If necessary, repair or replace these parts.

TROUBLESHOOTING REFERENCE TABLE

| Location of noise | Type of noise | Operating condition of engine | | | | | | Source of noise | Check item | Reference |
|---|---------------------|-------------------------------|---------------|---------------|-------------|-------------|---------------|------------------------------|---|---|
| | | Before warm-up | After warm-up | When starting | When idling | When racing | While driving | | | |
| Top of engine Rocker cover Cylinder head | Ticking or clicking | C | A | - | A | B | - | Tappet noise | Valve clearance | <u>CAMSHAFT VALVE CLEARANCE</u> |
| | Rattle | C | A | - | A | B | C | Camshaft bearing noise | Camshaft runout Camshaft journal oil clearance | <u>CAMSHAFT (EXH) VALVE CLEARANCE ADJUSTMENT</u> |
| Crankshaft pulley Cylinder block (Side of engine) Oil pan | Slap or knock | - | A | - | B | B | - | Piston pin noise | Piston to piston pin oil clearance Connecting rod bushing oil clearance | <u>CONNECTING ROD SIDE CLEARANCE</u> |
| | Slap or rap | A | - | - | B | B | A | Piston slap noise | Piston to cylinder bore clearance Piston ring side clearance Piston ring end gap Connecting rod bend and torsion | <u>CONNECTING ROD SIDE CLEARANCE</u> |
| | Knock | A | B | C | B | B | B | Connecting rod bearing noise | Connecting rod bushing oil clearance Connecting rod bearing oil | <u>CONNECTING ROD SIDE CLEARANCE</u> |

2010 Infiniti FX50

2010 ENGINE Engine Mechanical (VK50VE) - FX35 & FX50

| | | | | | | | | | | |
|--------------------------------------|----------------------|---|---|---|---|---|---|---|---|---------------------------------------|
| | | | | | | | | | clearance | |
| | Knock | A | B | - | A | B | C | Main bearing noise | Main bearing oil clearance Crankshaft runout | <u>CRANKSHAFT END PLAY</u> |
| Front of engine Timing chain case | Tapping or ticking | A | A | - | B | B | B | Timing chain and timing chain tensioner noise | Timing chain cracks and wears Timing chain tensioner operation | <u>INSPECTION</u> |
| Front of engine | Squeaking or fizzing | A | B | - | B | - | C | Drive belts (Sticking or slipping) | Drive belts deflection | <u>TENSION ADJUSTMENT</u> |
| | Creaking | A | B | A | B | A | B | Drive belts (Slipping) | Idler pulley bearing operation | |
| | Squall Creak | A | B | - | B | A | B | Water pump noise | Water pump operation | <u>INSTALLATION</u> |

A: Closely related B: Related C: Sometimes related -: Not related

PRECAUTION

PRECAUTIONS

Precaution for Procedure without Cowl Top Cover

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc.

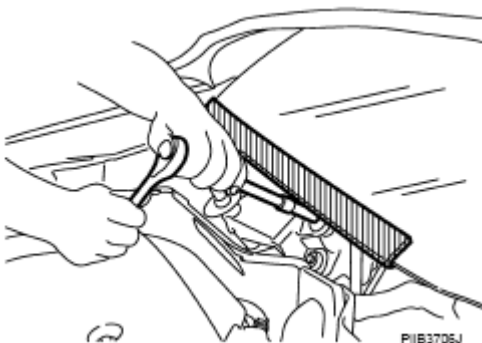


Fig. 2: Identifying Windshield Precaution

Courtesy of NISSAN MOTOR CO., U.S.A.

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted.

Information necessary to service the system safely is included in SRS AIRBAG and SEAT BELTS of this Service Information.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see SRS AIRBAG .
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Information. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precaution Necessary For Steering Wheel Rotation After Battery Disconnect**NOTE:**

- Before removing and installing any control units, first turn the push-button ignition switch to the LOCK position, then disconnect both battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

This vehicle is equipped with a push-button ignition switch and a steering lock unit.

If the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

If turning the steering wheel is required with the battery disconnected or discharged, follow the procedure below before starting the repair operation.

OPERATION PROCEDURE

1. Connect both battery cables.

NOTE: **Supply power using jumper cables if battery is discharged.**

2. Turn the push-button ignition switch to ACC position.

(At this time, the steering lock will be released.

3. Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned.
4. Perform the necessary repair operation.
5. When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn the push-button ignition switch from ACC position to ON position, then to LOCK position. The steering wheel will lock when the push-button ignition switch is turned to LOCK position.
6. Perform self-diagnosis check of all control units using CONSULT-III.

Precaution for Drain Engine Coolant and Engine Oil

Drain engine coolant and engine oil when engine is cooled.

Precaution for Disconnecting Fuel Piping

- Before starting work, check no fire or spark producing items are in the work area.
- Release fuel pressure before disconnecting and disassembly.
- After disconnecting pipes, plug openings to stop fuel leakage.

Precaution for Removal and Disassembly

- When instructed to use SST, use specified tools. Always be careful to work safely, avoid forceful or uninstructed operations.
- Exercise maximum care to avoid damage to mating or sliding surfaces.
- Cover openings of engine system with tape or the equivalent, if necessary, to seal out foreign materials.
- Mark and arrange disassembly parts in an organized way for easy troubleshooting and assembly.
- When loosening nuts and bolts, as a basic rule, start with the one furthest outside, then the one diagonally opposite, and so on. If the order of loosening is specified, do exactly as specified. Power tools may be used where noted in the step.

Precaution for Inspection, Repair and Replacement

Before repairing or replacing, thoroughly inspect parts. Inspect new replacement parts in the same way, and replace if necessary.

Precaution for Assembly and Installation

- Use torque wrench to tighten bolts or nuts to specification.

- When tightening nuts and bolts, as a basic rule, equally tighten in several different steps starting with the ones in center, then ones on inside and outside diagonally in this order. If the order of tightening is specified, do exactly as specified.
- Replace with new gasket, packing, oil seal or O-ring.
- Thoroughly wash, clean, and air-blow each part. Carefully check engine oil or engine coolant passages for any restriction and blockage.
- Dowel pins are used for several parts alignment. When replacing and reassembling parts with dowel pins, check that dowel pins are installed in the original position.
- Avoid damaging sliding or mating surfaces. Completely remove foreign materials such as cloth lint or dust. Before assembly, oil sliding surfaces well.
- Release air within route when refilling after draining engine coolant.
- After repairing, start engine and increase engine speed to check engine coolant, fuel, engine oil, and exhaust gases for leakage.

Parts Requiring Angle Tightening

- Use angle wrench [SST: KV10112100 (BT8653-A)] for the final tightening of the following engine parts:
 - Cylinder head bolts
 - Main bearing cap bolts
 - Main bearing cap sub bolts
 - Connecting rod cap bolts
 - Crankshaft pulley bolt (No angle wrench is required as the bolt flange is provided with notches for angle tightening)
- Ensure thread and seat surfaces are clean and coated with engine oil.

Precaution for Liquid Gasket**REMOVAL OF LIQUID GASKET SEALING**

- After removing mounting nuts and bolts, separate the mating surface using the seal cutter [SST:KV10111100 (J-37228)] (A) and remove old liquid gasket sealing.

CAUTION: Be careful not to damage the mating surfaces.

- Tap the seal cutter to insert it (B), and then slide it (C) by tapping on the side as shown below.
- In areas where the seal cutter is difficult to use, lightly tap the parts using a plastic hammer to remove it.

CAUTION: If for some unavoidable reason a tool such as a screwdriver is used, be careful not to damage the mating surfaces.

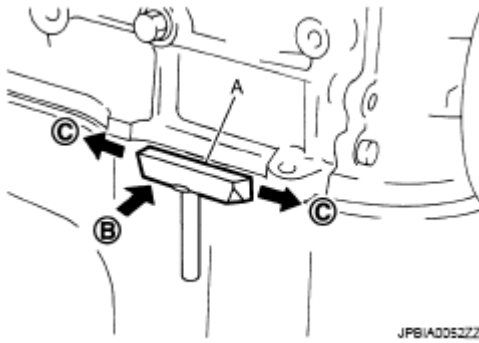


Fig. 3: Separating Mating Surface Using Seal Cutter
Courtesy of NISSAN MOTOR CO., U.S.A.

LIQUID GASKET APPLICATION PROCEDURE

1. Using a scraper (A), remove old liquid gasket adhering to the liquid gasket application surface and the mating surface.
 - Remove liquid gasket completely from the groove of the liquid gasket application surface, mounting bolts and bolt holes.
2. Wipe the liquid gasket application surface and the mating surface with white gasoline (lighting and heating use) to remove adhering moisture, grease and foreign materials.

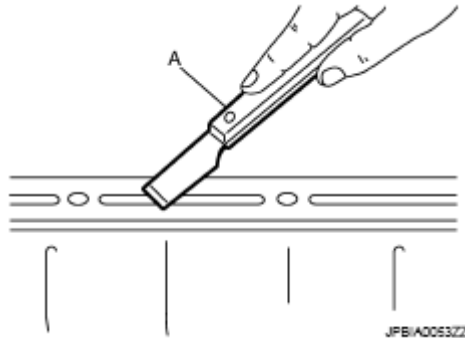


Fig. 4: Using Scraper To Remove Old Liquid Gasket
Courtesy of NISSAN MOTOR CO., U.S.A.

3. Attach liquid gasket tube to the tube presser (commercial service tool).

Use Genuine RTV Silicone Sealant or an equivalent. Refer to **RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS** .

4. Apply liquid gasket without gaps to the specified location according to the specified dimensions.
 - If there is a groove for liquid gasket application, apply liquid gasket to the groove.

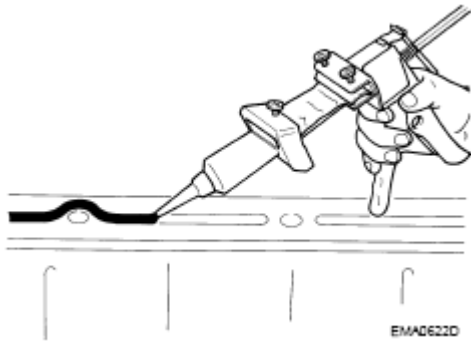


Fig. 5: Applying Liquid Gasket

Courtesy of NISSAN MOTOR CO., U.S.A.

- As for bolt holes (B), normally apply liquid gasket inside the holes. Occasionally, it should be applied outside the holes. Check to read the text of this information.

A : Groove
 ⇐ : Inside

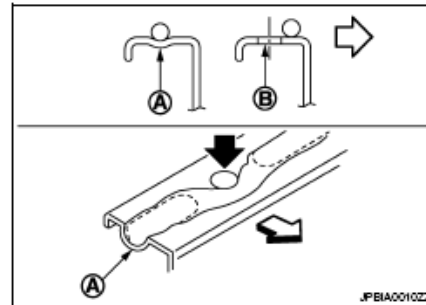


Fig. 6: Identifying Bolt Hole Location

Courtesy of NISSAN MOTOR CO., U.S.A.

- Within 5 minutes of liquid gasket application, install the mating component.
- If liquid gasket protrudes, wipe it off immediately.
- Do not retighten mounting bolts or nuts after the installation.
- After 30 minutes or more have passed from the installation, fill engine oil and engine coolant.

CAUTION: If there are specific instructions in this information, observe them.

Definitions of Bank Names

- In this information, each bank name is defined as per the following:

A : Bank 2 (The conventional right bank)
 B : Bank 1 (The conventional left bank)
 ⇐ : Engine front

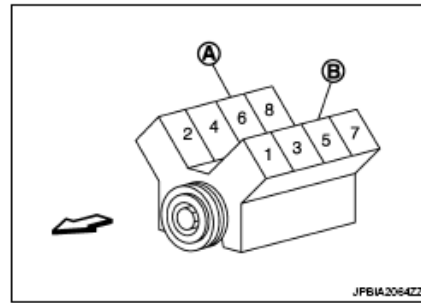


Fig. 7: Identifying Cylinder Number And Bank Layout
 Courtesy of NISSAN MOTOR CO., U.S.A.

- For cylinder numbers and bank layout, refer to **Fig. 7**.

Bank 1: The bank side including cylinder No. 1 (odd-numbered cylinder side)




Bank 2: The other bank side of the above (even-numbered cylinder side)

PREPARATION

PREPARATION







Special Service Tool

SPECIAL SERVICE TOOL REFERENCE
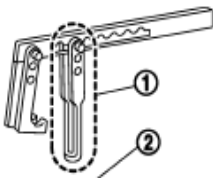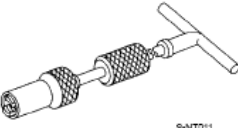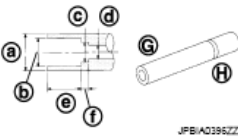
| Tool number (Kent-Moore No.) | Tool name | Description |
|--|---|---|
| KV10116200 (J-26336-A) Valve spring compressor |  | Disassembling valve mechanism Part (1) is a component of KV10116200 (J26336-A), but part (2) is not so. |
| 1. KV10115900 (J-26336-20) Attachment 2. KV10109220 (-) Adapter | | |
| KV10107902 (J-38959) Valve oil seal puller |  | Removing valve oil seal |
| KV10115600 (J-38958) Valve oil seal drift |  | Installing valve oil seal Use side A (G) a. 20 (0.79) dia. b. 13 (0.51) dia. c. 10.3 (0.406) dia. d. 8 (0.31) dia. e. 10.7 (0.421) |





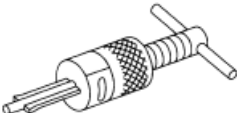


2010 Infiniti FX50

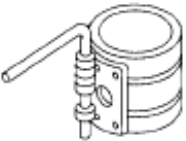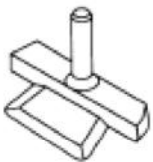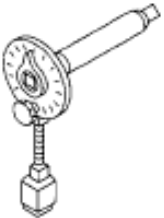
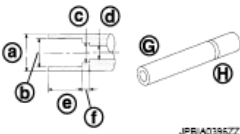
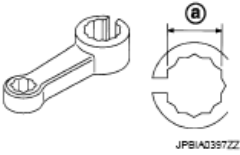

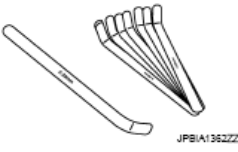
2010 ENGINE Engine Mechanical (VK50VE) - FX35 & FX50

| | | |
|---|--|---|
| | | f. 5 (0.20) |
| | | H: Side B Unit: mm (in) |
| EM03470000 (J-8037) Piston ring compressor |  S-NT044 | Installing piston assembly into cylinder bore |
| KV10111100 (J-37228) Seal cutter |  S-NT045 | Removing steel oil pan and front cover |
| KV10112100 (BT8653-A) Angle wrench |  S-NT014 | Tightening bolts for bearing cap, cylinder head, etc. |
| KV10114400 (J-38365) Heated oxygen sensor wrench |  JPB/A0395ZZ | Loosening or tightening air fuel ratio sensor 1 and heated oxygen sensor 2 a. 22 mm (0.87 in) |
| KV10119200 (J-49277) Ring gear stopper |  JPB/A0397ZZ | Removing and installing crankshaft pulley |
| - (J-45488) Quick connector release |  PSIC0198E | Removing fuel tube quick connectors in engine room |
| KV10119300 (-) Adapter and torque wrench assembly | | Tightening rocker cover mounting bolts. (specified torque) |

Commercial Service Tool

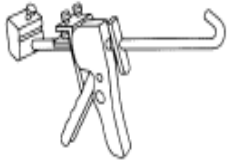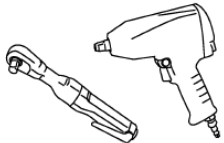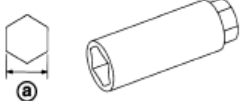COMMERCIAL SERVICE TOOL REFERENCE


| (Kent-Moore No.) Tool name | Description |
|---|---|
| (-) Tube presser  S-NT052 | Pressing the tube of liquid gasket |
| (-) Power tool  PBIC0150E | Loosening nuts and bolts |
| (-) Spark plug wrench  JPBIA0389ZZ | Removing and installing spark plug a. 14 mm (0.55 in) |
| (-) Manual lift table caddy  ZZA1210D | Removing and installing engine |
| (-) Pilot bushing puller  INT045 | Removing pilot converter |
| (-) Valve seat cutter set  S-NT048 | Finishing valve seat (EXH) dimensions |
| (-) Piston ring expander  S-NT030 | Removing and installing piston ring |
| (-) Valve guide drift | Removing and installing valve guide (EXH) a. 9.5 mm (0.374 in) dia. |
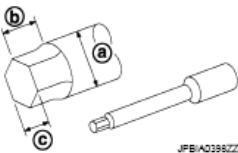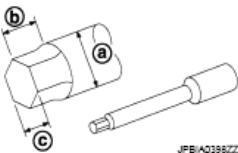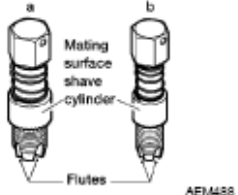
| | | |
|---|---|--|
| |  | b. 5.5 mm (0.217 in) dia. |
| (-) Valve guide reamer |  | <ol style="list-style-type: none"> (1): Reaming valve guide (EXH) inner hole (2): Reaming hole for oversize valve guide (EXH) <p>c: 6.0 mm (0.236 in) dia. d: 10.2 mm (0.402 in) dia.</p> |
| (J-43897-18) (J-43897-12) Oxygen sensor thread cleaner |  | <p>Reconditioning the exhaust system threads before installing a new heated oxygen sensor. Use with anti-seize lubricant shown below.</p> <p>a. J-43897-18 (18 mm dia.) for zirconia heated oxygen sensor and air fuel ratio sensor</p> <p>b. J-43897-12 (12 mm dia.) for titania heated oxygen sensor and air fuel ratio sensor</p> |
| (-) Anti-seize lubricant (Permatex 133AR or equivalent meeting MIL specification MIL-A-907) |  | Lubricating oxygen sensor thread cleaning tool when reconditioning exhaust system threads |
| (-) Feeler gauge |  | Inspection valve clearance (use a curved-tip gauge) |
| (-) Compression gauge with flexible type adapter | | Checking compression pressure |

ON-VEHICLE MAINTENANCE

DRIVE BELTS

Exploded View

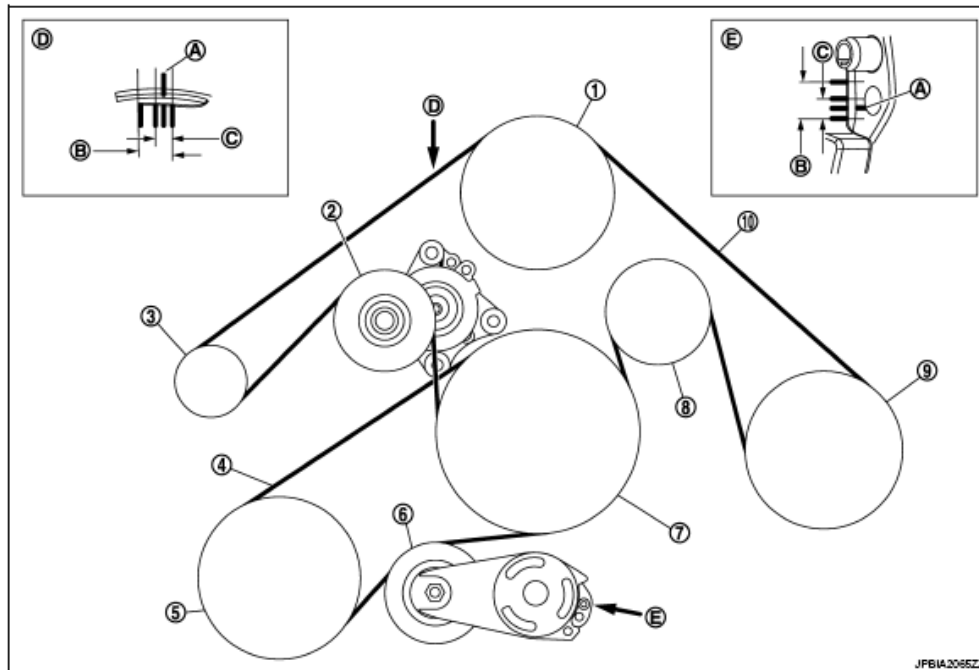

JFB(A2065ZZ)

- | | | |
|--|--|--|
| 1. Water pump | 2. Auto-tensioner (for alternator, water pump and A/C compressor belt) | 3. Alternator |
| 4. Power steering oil pump belt | 5. Power steering oil pump | 6. Auto-tensioner (for power steering oil pump belt) |
| 7. Crankshaft pulley | 8. Idler pulley | 9. A/C compressor |
| 10. Alternator, water pump and A/C compressor belt | | |
| A. Indicator | B. Possible use range | C. Range when new drive belt is installed |
| D. View D | E. View E | |

Fig. 8: Exploded View Of Drive Belts

Courtesy of NISSAN MOTOR CO., U.S.A.

Checking**WARNING:** Be sure to perform the these steps when engine is stopped.

- Remove air duct (inlet) when inspecting alternator, water pump and A/C compressor belt.
- Remove engine undercover with power tool when inspecting power steering oil pump belt.
- Check that the indicator (A) (notch on fixed side) of each auto-tensioner is within the possible use range (B).

NOTE:

- Check the each auto-tensioners indication when the engine is cold.
- When new drive belts is installed, the indicator (notch on fixed side) should be within the range (C) shown above.
- Visually check all drive belts for wear, damage or cracks.

- If the indicator (notch on fixed side) is out of the possible use range or drive belts are damaged, replace drive belts.

Tension Adjustment

Refer to **DRIVE BELTS**.

Removal and Installation

REMOVAL

Alternator, Water Pump and A/C Compressor Belt

1. Remove air duct (inlet). Refer to **EXPLODED VIEW**.
2. Remove reservoir tank. Refer to **EXPLODED VIEW**.
3. With box wrench, and while securely holding the hexagonal part in pulley center of auto tensioner (1), move wrench handle in the direction of arrow (loosening direction of tensioner).

CAUTION:

- Never place hand in a location where pinching may occur if the holding tool accidentally comes off.
- Never loosen the hexagonal part in center of auto tensioner pulley (Never turn it clockwise). If turned clockwise, the complete auto tensioner must be replaced as a unit, including the pulley.

4. Under the above condition, insert a metallic bar (A) of approximately 6 mm (0.24 in) in diameter (hexagonal bar wrench shown as example below) through the holding boss to lock auto tensioner pulley arm.
 - Leave auto tensioner pulley arm locked until belt is installed again.
5. Remove alternator, water pump and A/C compressor belt.

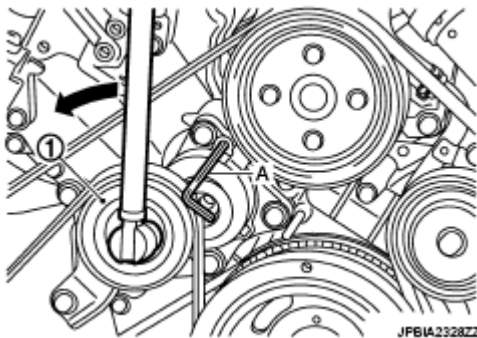


Fig. 9: Loosening Tensioner

Courtesy of NISSAN MOTOR CO., U.S.A.


Power Steering Oil Pump Belt

1. Remove engine undercover with power tool.
2. Remove alternator, water pump and A/C compressor belt.
3. With box wrench, and while securely holding the hexagonal part in pulley center of auto tensioner (1), move wrench handle in the direction of arrow (loosening direction of tensioner).

CAUTION:

- Never place hand in a location where pinching may occur if the holding tool accidentally comes off.
- Never loosen the hexagonal part in center of auto tensioner pulley (Never turn it clockwise). If turned clockwise, the complete auto tensioner must be replaced as a unit, including the pulley.

4. Under the above condition, insert a metallic bar (A) of approximately 6 mm (0.24 in) in diameter (hexagonal bar wrench shown as example in the graphic) through the holding boss to lock auto tensioner pulley arm.
 - Leave auto tensioner pulley arm locked until belt is installed again.

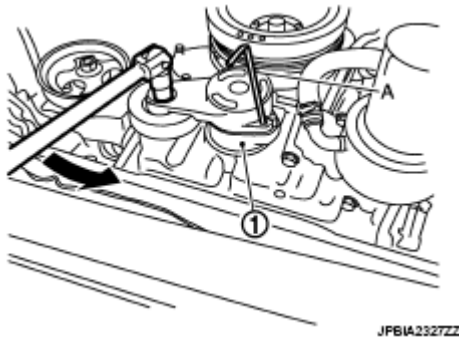**Fig. 10: Loosening Tensioner**

Courtesy of NISSAN MOTOR CO., U.S.A.

5. Remove power steering oil pump belt.

INSTALLATION

Note the following item, and install in the reverse order of removal.

CAUTION:

- Check drive belts are securely installed around all pulleys.
- Check drive belts are correctly engaged with the pulley groove.
- Check for engine oil and engine coolant are not adhered drive belts and pulley groove.

Inspection**INSPECTION AFTER INSTALLATION**

- Turn crankshaft pulley clockwise several times to equalize tension between each pulley, and then confirm tension of drive belts at indicator (notch on fixed side) is within the possible use range. Refer to **EXPLODED VIEW**.

AIR CLEANER FILTER

Removal and Installation

REMOVAL

1. Unhook clips (A).

- 1 : Holder
2 : Air cleaner case

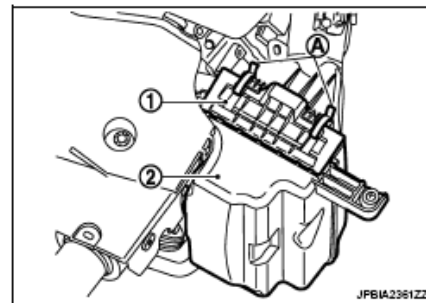


Fig. 11: Identifying Air Cleaner Case And Holder
Courtesy of NISSAN MOTOR CO., U.S.A.

2. Remove air cleaner filter (2) from air cleaner case (3).

- 1 : Holder

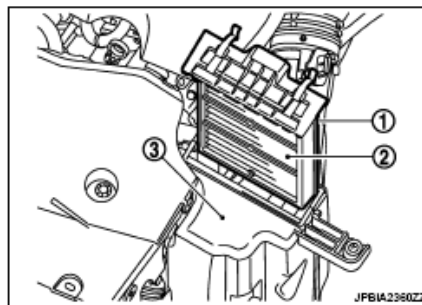


Fig. 12: Identifying Air Cleaner Filter And Air Cleaner Case
Courtesy of NISSAN MOTOR CO., U.S.A.

INSTALLATION


Note the following item, and install in the reverse order of removal.

- Install the air cleaner filter by aligning the seal with the notch of air cleaner case.

SPARK PLUG

Exploded View

| Symbol | Description |
|--------|-----------------------------------|
| | N·m (kg-m, ft-lb) |
| | N·m (kg-m, in-lb) |
| | Always replace after disassembly. |

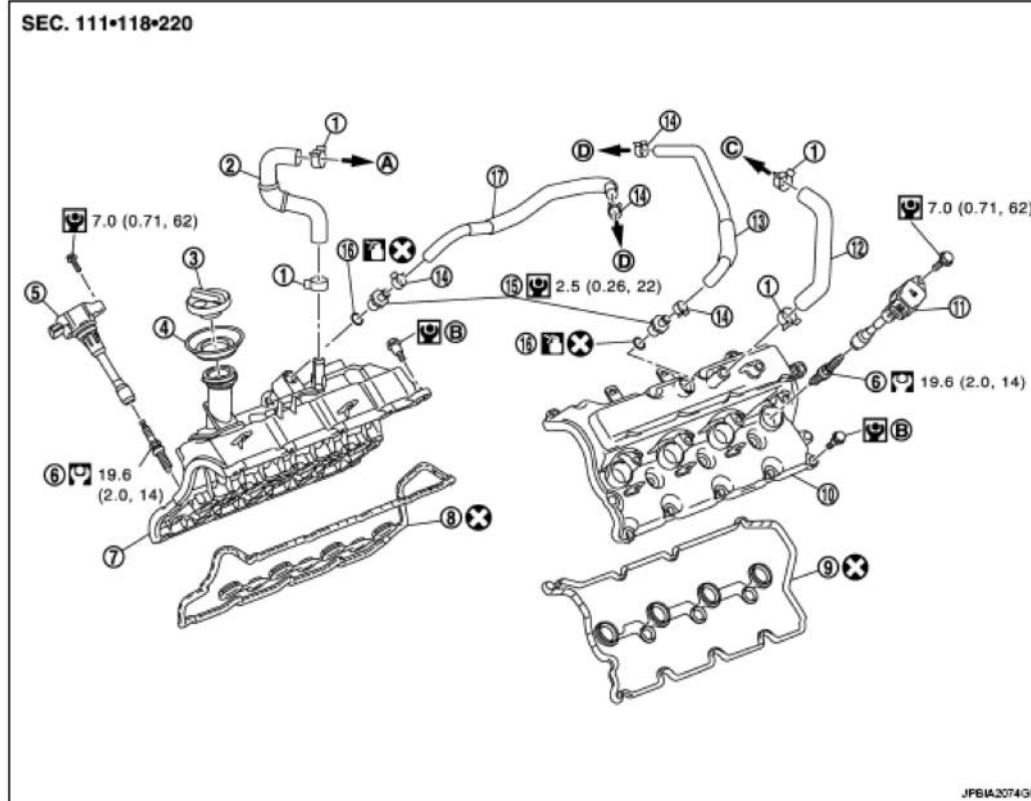

- | | | |
|---------------------------|--|---------------------------------|
| 1. Clamp | 2. PCV hose | 3. Oil filler cap |
| 4. Oil catcher | 5. Ignition coil (No. 1 - 6) | 6. Spark plug |
| 7. Rocker cover (bank 2) | 8. Rocker cover gasket (bank 2) | 9. Rocker cover gasket (bank 1) |
| 10. Rocker cover (bank 1) | 11. Ignition coil (No. 7, 8) | 12. PCV hose |
| 13. PCV hose | 14. Clamp | 15. PCV valve |
| 16. O-ring | 17. PCV hose | |
| A. To air duct (bank 2) | B. Refer to IGNITION COIL, SPARK PLUG AND ROCKER COVER | C. To air duct (bank 1) |
| D. To intake manifold | | |

Fig. 13: Exploded View Of Spark Plug With Torque Specification
 Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to **COMPONENTS** for symbols above.

Removal and Installation

REMOVAL

1. Remove engine cover. Refer to **EXPLODED VIEW**.
2. Remove ignition coil. Refer to **EXPLODED VIEW**.
3. Remove spark plug with a spark plug wrench (commercial service tool).

a : 14 mm (0.55 in)

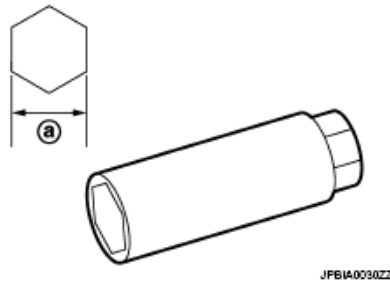


Fig. 14: Identifying Spark Plug

Courtesy of NISSAN MOTOR CO., U.S.A.

INSTALLATION

Installation is the reverse order of removal.

Inspection

INSPECTION AFTER REMOVAL

Use the standard type spark plug for normal condition.

Spark plug (Standard type): Refer to **SPARK PLUG**.

CAUTION:

- Never drop or impact spark plug.
- Never use a wire brush for cleaning.
- If plug tip is covered with carbon, use spark plug cleaner to clean.

Cleaner air pressure: Less than 588 kPa (6 kg/cm² , 85 psi)

Cleaning time: Less than 20 seconds

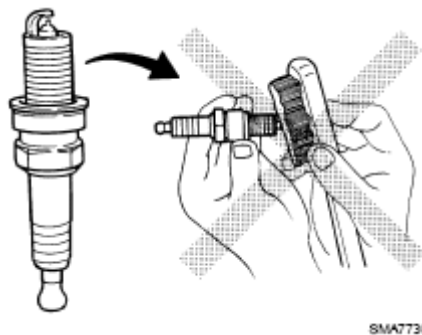


Fig. 15: Caution - Do Not Use Wire Brush For Cleaning Spark Plugs

Courtesy of NISSAN MOTOR CO., U.S.A.

- Measure spark plug gap. When it exceeds the limit, replace spark

plug even if it is within the specified replacement mileage. Refer to **SPARK PLUG**.

- Spark plug gap adjustment is not required between replacement intervals.

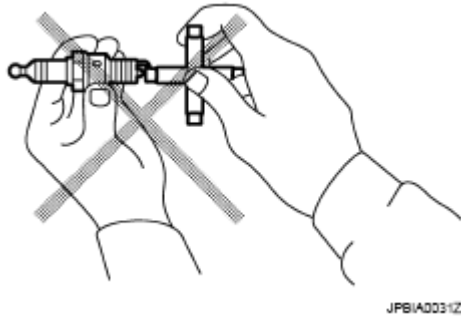


Fig. 16: Caution - Spark Plug Gap Adjustment
Courtesy of NISSAN MOTOR CO., U.S.A.

CAMSHAFT VALVE CLEARANCE

Inspection

INSPECTION

Check valve clearance if applicable to the following cases:

Intake side:

- At the removal and installation of VVEL ladder assembly or valve-related parts, or at the occurrence of malfunction (poor starting, idle malfunction, unusual noise) due to aged deterioration in valve clearance.

CAUTION: Valve clearance check on the intake side is not required after replacing the VVEL ladder assembly & cylinder head assembly with a new one. Install new VVEL ladder assembly & cylinder head assembly in factory-shipped condition because it is factory-adjusted and inspected.

NOTE: VVEL ladder assembly cannot be replaced as a single part, because it is machined together with cylinder head assembly.

Exhaust side:

- At the removal, installation, and replacement of camshaft (EXH) or valve-related parts, or at the occurrence of malfunction (poor starting, idle malfunction, unusual noise) due to aged deterioration in valve clearance.

1. Remove rocker covers (bank 1 and bank 2). Refer to **REMOVAL AND INSTALLATION**.

2. Measure the valve clearance as per the following:

- Use the feeler gauge (commercial service tool) of curved-tip. This allows the feeler gauge to access the clearance between camshaft (drive shaft) nose and valve lifter with ease.

Valve clearance: Refer to CAMSHAFT.

NOTE: Be sure to note the following points when measuring valve clearance on the intake side.

- Before measuring, check that the position of drive shaft nose is within the angle shown below.

- A : Bank 2
 B : Feeler gauge (commercial service tool)
 c : 45 degrees (drive shaft nose angle)
 D : View D
 ⇨ : Insertion direction of feeler gauge on the bank 2
 ⇐ : Insertion direction of feeler gauge on the bank 1

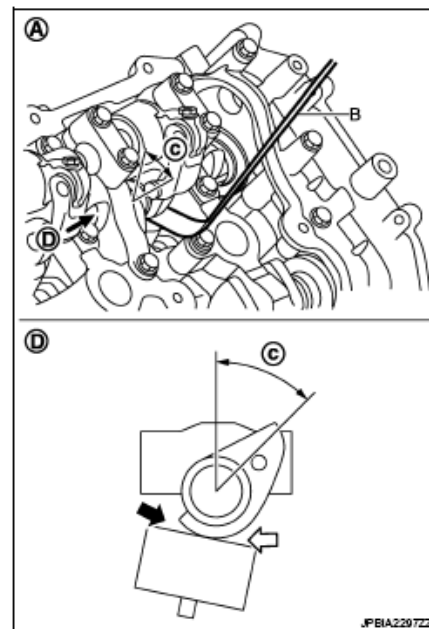


Fig. 17: Identifying Position Of Drive Shaft Nose
 Courtesy of NISSAN MOTOR CO., U.S.A.

- Refer to the graphic for the insertion direction of the feeler gauge since the direction depends on the bank.
- a. Set No. 1 cylinder at TDC of its compression stroke.
- Rotate crankshaft pulley clockwise to align timing mark (grooved line without color) (B) with timing indicator (A).

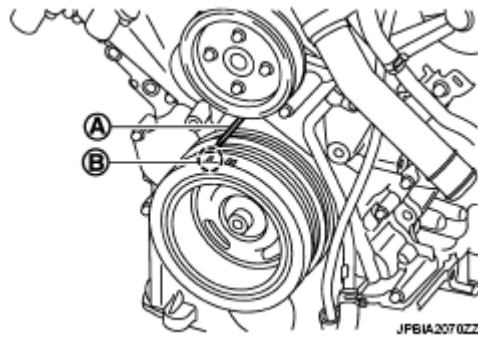


Fig. 18: Identifying Timing Mark With Timing Indicator
 Courtesy of NISSAN MOTOR CO., U.S.A.

- Check that exhaust cam nose on No. 1 cylinder (engine front side of bank 1) is located as shown below.

1 : Camshaft (EXH) (bank 1)
 ⇨ : Engine front

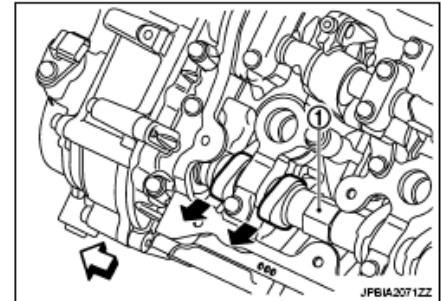


Fig. 19: Checking Exhaust Cam Nose On No. 1 Cylinder
 Courtesy of NISSAN MOTOR CO., U.S.A.

- If not, turn crankshaft one revolution (360 degrees) and align as shown below.
- By referring to the graphic, measure the valve clearances at locations marked "x" as shown in the table below (locations indicated in the graphic).

↔ : Engine front

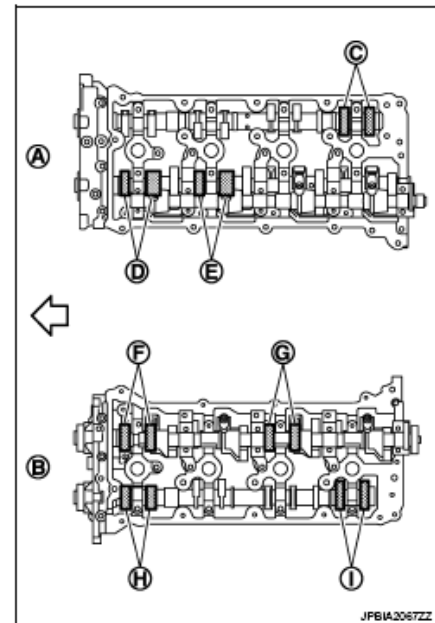


Fig. 20: Identifying Crankshaft Bearing
Courtesy of NISSAN MOTOR CO., U.S.A.

- No. 1 cylinder at compression TDC

CYLINDER REFERENCE TABLE

| Measuring position [bank 2 (A)] | | No. 2 CYL. | No. 4 CYL. | No. 6 CYL. | No. 8 CYL. |
|--|-----|---------------|---------------|---------------|---------------|
| No. 1 cylinder at compression TDC | EXH | - | - | - | x (C) |
| | INT | x (D) | x (E) | - | - |
| Measuring position [bank 1 (B)] | | No. 1 CYL. | No. 3 CYL. | No. 5 CYL. | No. 7 CYL. |
| No. 1 cylinder at compression TDC | INT | x (F) | - | x (G) | - |
| | EXH | x (H) | - | - | x (I) |

NOTE: To measure valve clearance of No. 1 cylinder INT valve (front side), insert feeler gauge (commercial service tool) from the front side (A) of the control shaft bracket or camshaft (EXH) side (B).

1 : Valve lifter

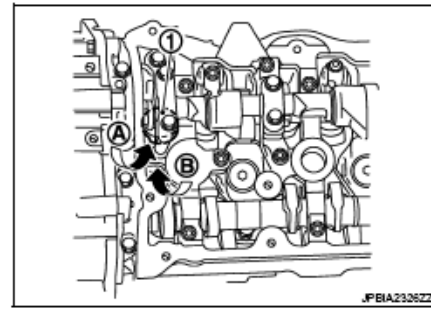


Fig. 21: Locating No. 1 Cylinder INT Valve
Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Rotate crankshaft 270 degrees clockwise (when viewed from engine front) to align No. 3 cylinder at TDC its compression stroke.

NOTE: Crankshaft pulley mounting bolt flange has an angle mark (B) every 90 degrees (c). They can be used as a guide to rotation angle.

A : Paint mark

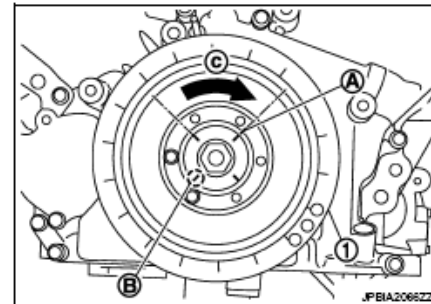


Fig. 22: Rotating Crankshaft Pulley
Courtesy of NISSAN MOTOR CO., U.S.A.

- By referring to the graphic, measure the valve clearances at locations marked "x" as shown in the table below (locations indicated in the graphic).

↔ : Engine front

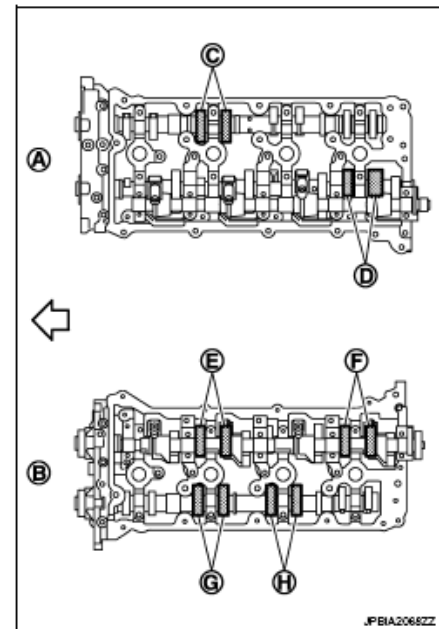


Fig. 23: Identifying Crankshaft Bearing
Courtesy of NISSAN MOTOR CO., U.S.A.

- No. 3 cylinder at compression TDC

CYLINDER REFERENCE TABLE

| Measuring position [bank 2 (A)] | | No. 2 CYL. | No. 4 CYL. | No. 6 CYL. | No. 8 CYL. |
|--|-----|---------------|---------------|---------------|---------------|
| No. 3 cylinder at compression TDC | EXH | - | x (C) | - | - |
| | INT | - | - | - | x (D) |
| Measuring position [bank 1 (B)] | | No. 1 CYL. | No. 3 CYL. | No. 5 CYL. | No. 7 CYL. |
| No. 3 cylinder at compression TDC | INT | - | x (E) | - | x (F) |
| | EXH | - | x (G) | x (H) | - |

- Rotate crankshaft 90 degrees clockwise (when viewed from engine front) to align No. 6 cylinder at TDC of compression stroke.

NOTE: Crankshaft pulley mounting bolt flange has an angle mark (B) every 90 degrees (c). They can be used as a guide to rotation angle.

A : Paint mark

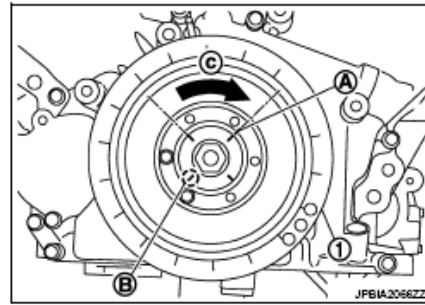


Fig. 24: Identifying Crankshaft Pulley Mounting Bolt
Courtesy of NISSAN MOTOR CO., U.S.A.

- By referring to the graphic, measure the valve clearances at locations marked "x" as shown in the table below (locations indicated in the graphic).

↔ : Engine front

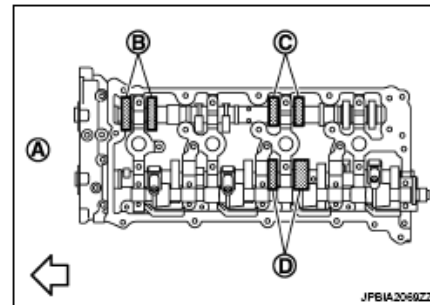


Fig. 25: Identifying Crankshaft Bearing
Courtesy of NISSAN MOTOR CO., U.S.A.

- No. 6 cylinder at compression TDC

CYLINDER REFERENCE TABLE

| Measuring position [bank 2 (A)] | | No. 2 CYL. | No. 4 CYL. | No. 6 CYL. | No. 8 CYL. |
|--|-----|---------------|---------------|---------------|---------------|
| No. 6 cylinder at compression TDC | EXH | x (B) | - | x (C) | - |
| | INT | - | - | x (D) | - |

3. Perform adjustment or replacement if the measured value is out of the standard.

- If a valve clearance on the exhaust side is out of specification, adjust the valve clearance. Refer to **INSPECTION**.
- If a valve clearance on the intake side is out of specification, replace VVEL ladder assembly & cylinder head assembly. Refer to **EXPLODED VIEW**.

CAUTION: Never adjust valve clearance on the intake side.

NOTE: Since the valve lifter (INT) cannot be replaced by the piece, VVEL ladder assembly & cylinder head assembly replacement are required.

COMPRESSION PRESSURE

Inspection

1. Warm up engine thoroughly. Then, stop it.
2. Release fuel pressure. Refer to **INSPECTION**.
3. Disconnect fuel pump fuse (1) from IPDM E/R (2) to avoid fuel injection during measurement.

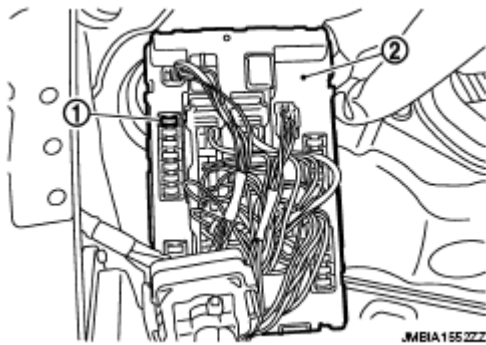


Fig. 26: Identifying Fuel Pump Fuse
Courtesy of NISSAN MOTOR CO., U.S.A.

4. Remove engine cover. Refer to **EXPLODED VIEW**.
5. Remove ignition coil and spark plug from each cylinder. Refer to **EXPLODED VIEW**.
6. Connect engine tachometer (not required in use of CONSULT-III).
7. Measure compression pressure using compression gauge connected with flexible type adapter (commercial service tool).
8. With accelerator pedal fully depressed, turn ignition switch to "START" for cranking. When the gauge pointer stabilizes, read the compression pressure and the engine RPM. Perform these steps to check each cylinder.

Compression pressure: Refer to **GENERAL SPECIFICATION**.

CAUTION:

- Measure a six-cylinder under the same conditions since a measurement depends on measurement conditions engine water temperature, etc.
- Always use a fully charged battery to obtain the specified engine speed.
- If the engine speed is out of the specified range, check battery liquid for proper gravity. Check the engine speed again with normal battery gravity. Refer to **HOW TO HANDLE BATTERY**.
- If compression pressure is below the minimum value, check

valve clearances and parts associated with combustion chamber (valve, valve seat, piston, piston ring, cylinder bore, cylinder head, cylinder head gasket). After checking, measure compression pressure again.

- If a cylinder has low compression pressure, pour a small amount of engine oil into the spark plug hole of the cylinder to re-check it for compression.
 - If the added engine oil improves the compression, piston rings may be worn out or damaged. Check piston rings and replace if necessary. Refer to DISASSEMBLY AND ASSEMBLY.
 - If the compression pressure remains at low level despite the addition of engine oil, valves may be malfunctioning. Check valves for damage. Replace valve or valve seat accordingly. Refer to DISASSEMBLY AND ASSEMBLY.
- If two adjacent cylinders have respectively low compression pressure and their compression remains low even after the addition of engine oil, cylinder head gaskets are leaking. In such a case, replace cylinder head gaskets. Refer to DISASSEMBLY AND ASSEMBLY.


9. After inspection is completed, install removed parts.
10. Start the engine, and check that the engine runs smoothly.
11. Perform trouble diagnosis. If DTC appears, erase it. Refer to DESCRIPTION.

ON-VEHICLE REPAIR

ENGINE ROOM COVER

Exploded View

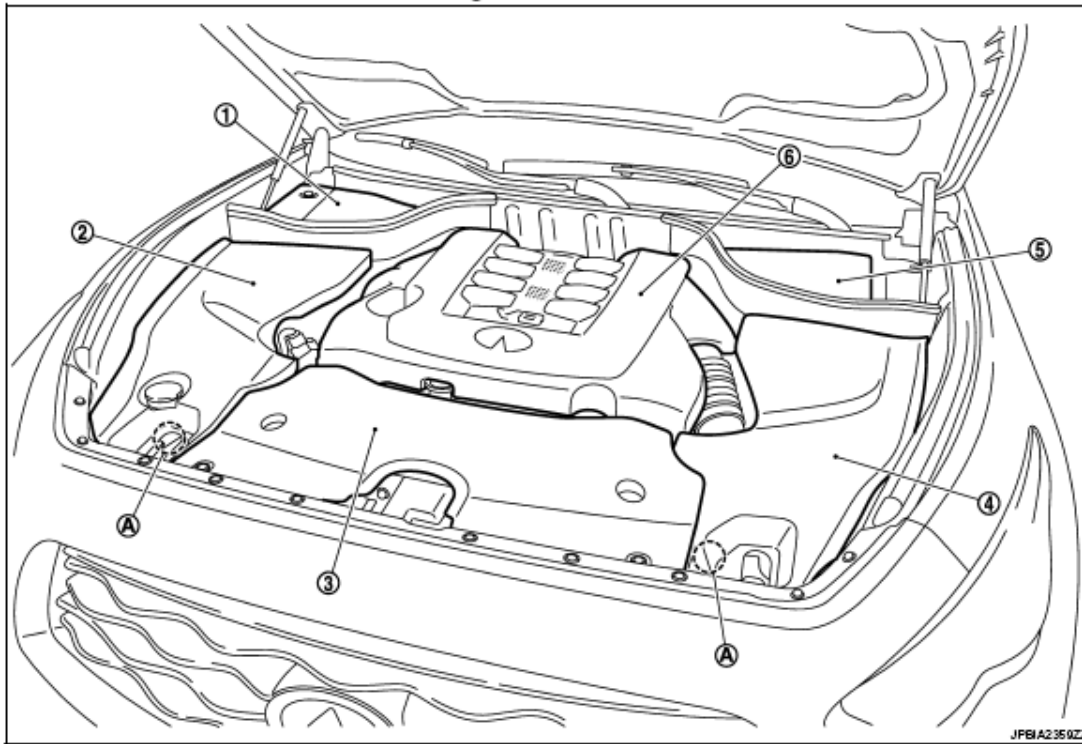


Engine room cover




- | | | |
|---------------------------|--------------------------------|---------------------|
| 1. Battery cover | 2. Engine room cover (RH) | 3. Air duct (inlet) |
| 4. Engine room cover (LH) | 5. Brake master cylinder cover | 6. Engine cover |
| A. Clip | | |

Fig. 27: Exploded View Of Engine Room Cover
 Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to **COMPONENTS** for symbols above.

| Symbol | Description |
|---|-----------------------------------|
|  | N-m (kg-m, ft-lb) |
|  | N-m (kg-m, in-lb) |
|  | Always replace after disassembly. |

SEC. 140

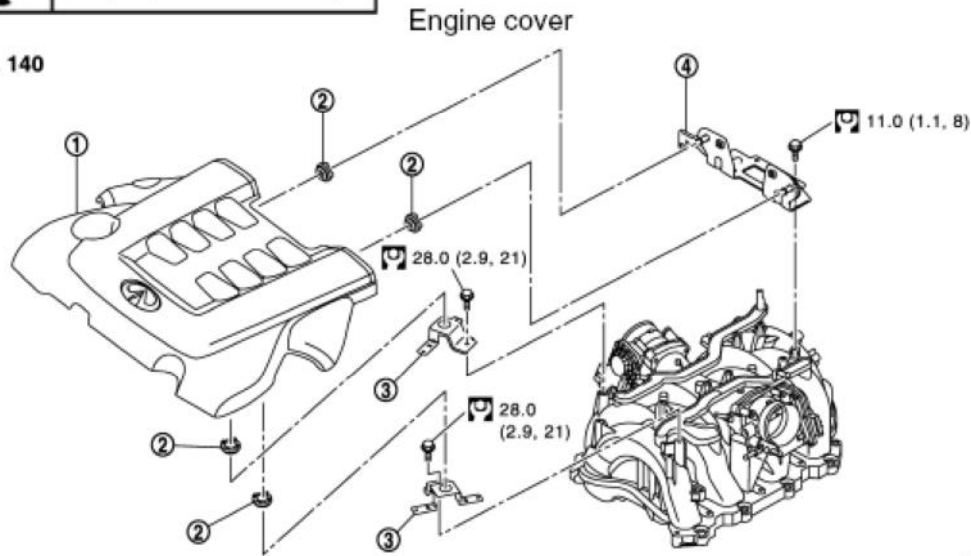

JPBIA2072GB

- | | | |
|-------------------|------------|------------|
| 1. Engine cover | 2. Grommet | 3. Bracket |
| 4. Bracket (rear) | | |

Fig. 28: Exploded View Of Engine Cover With Torque Specifications
 Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to **COMPONENTS** for symbols above.

Removal and Installation

REMOVAL

CAUTION: Never damage or scratch engine cover when installing or removing.


1. Remove clip, and remove engine room cover (RH and LH).
2. Remove engine cover as per the following:
 - Front side: Lift and remove fit.
 - Rear side: Pull out to forward and remove fit.
3. Remove battery cover and brake master cylinder cover, if necessary.
4. Remove air duct (inlet). Refer to **EXPLODED VIEW**.

INSTALLATION

Installation is the reverse order of removal.

DRIVE BELT AUTO TENSIONER AND IDLER PULLEY

Exploded View

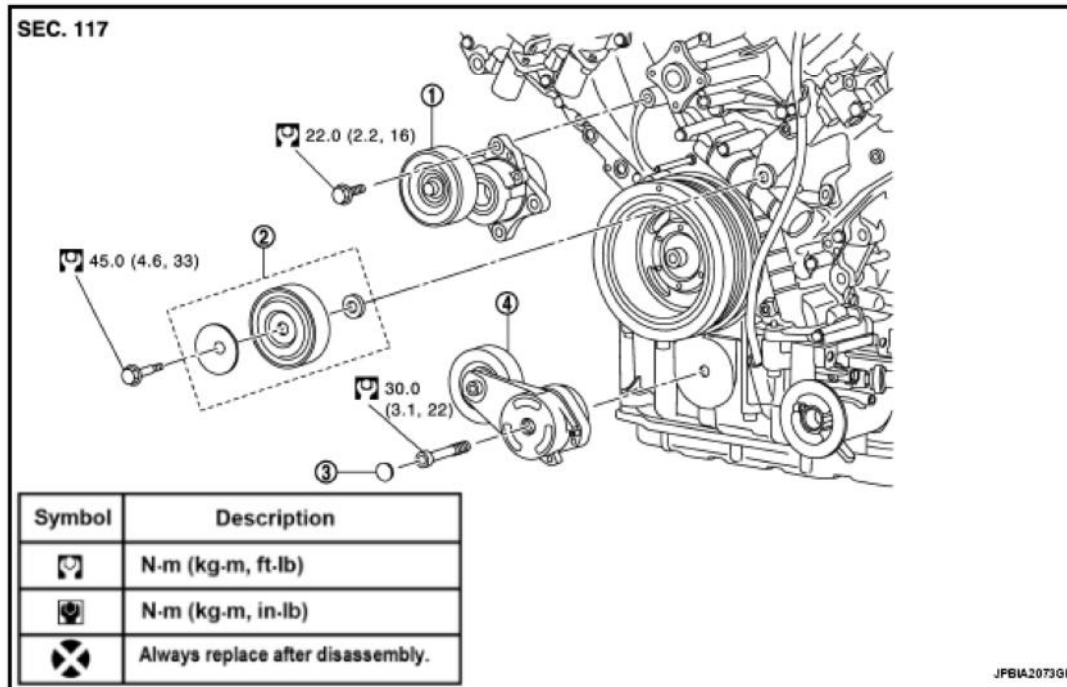

1. Auto-tensioner (for alternator, water pump and A/C compressor belt)
2. Idler pulley
3. Cover
4. Auto-tensioner (for power steering oil pump belt)

Fig. 29: Exploded View Of Belt Auto Tensioner And Idler Pulley With Torque Specifications
Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to **COMPONENTS** for symbols above.

Removal and Installation

Removal

CAUTION: The complete drive belt auto-tensioner must be replaced as a unit, including the pulley.

1. Remove drive belts. Refer to **EXPLODED VIEW**.
 - Keep auto-tensioner pulley arm locked after drive belt is removed.
2. Remove drive belt auto-tensioners.
 - Keep auto-tensioner pulley arm locked to install or remove auto-tensioner.

CAUTION: Never loosen the hexagonal part in center of drive belt auto tensioner pulley (Never turn it clockwise). If turned clockwise, the complete drive belt auto tensioner must be replaced as a unit, including the pulley.




3. Remove idler pulley.


Installation

Installation is the reverse order of removal.

CAUTION: Never swap the pulley between new and old drive belt auto tensioner.

AIR CLEANER AND AIR DUCT**Exploded View**

| Symbol | Description |
|---|-----------------------------------|
|  | N·m (kg·m, ft·lb) |
|  | N·m (kg·m, in·lb) |
|  | Always replace after disassembly. |

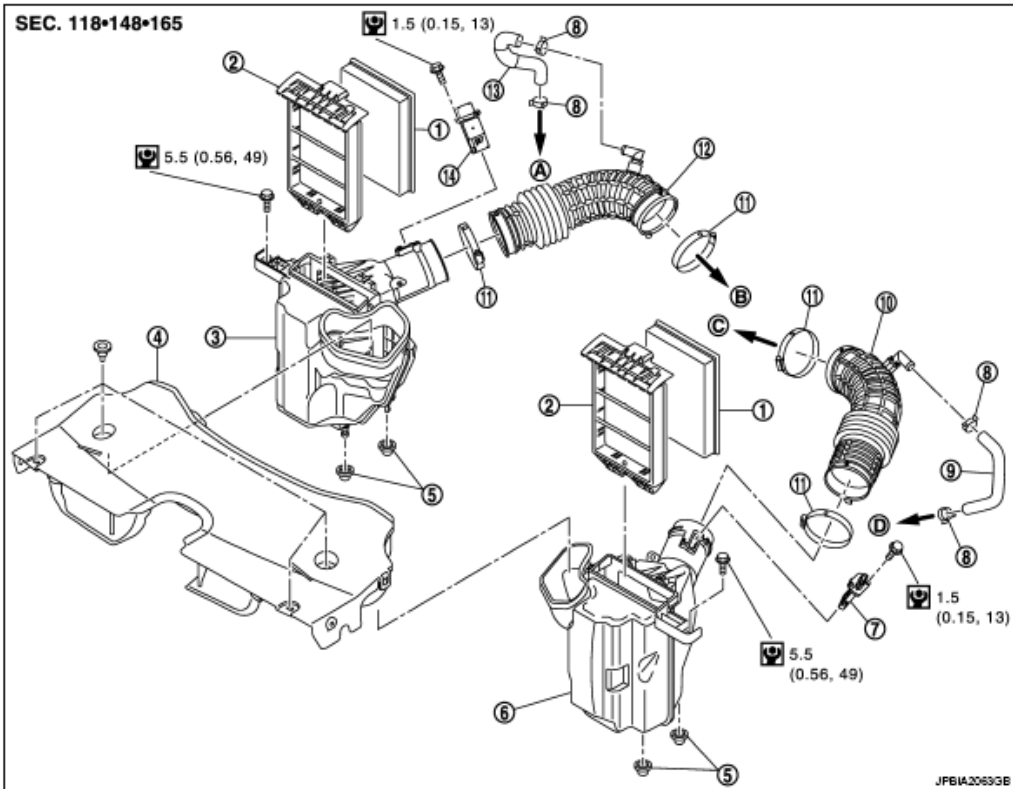

- | | | |
|----------------------------------|---|---|
| 1. Air cleaner filter | 2. Holder | 3. Air cleaner case (bank 2) |
| 4. Air duct (inlet) | 5. Grommet | 6. Air cleaner case (bank 1) |
| 7. Mass air flow sensor (bank 1) | 8. Clamp | 9. PCV hose |
| 10. Air duct (bank 1) | 11. Clamp | 12. Air duct (bank 2) |
| 13. PCV hose | 14. Mass air flow sensor (bank 2) | |
| A. To rocker cover (bank 2) | B. To electric throttle control actuator (bank 2) | C. To electric throttle control actuator (bank 1) |
| D. To rocker cover (bank 1) | | |

Fig. 30: Exploded View Of Air Cleaner And Air Duct With Torque Specification
 Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to **COMPONENTS** for symbols above.

Removal and Installation

REMOVAL

1. Remove engine cover and engine room cover (RH and LH). Refer to **EXPLODED VIEW**.
2. Remove air duct (inlet).
3. Disconnect mass air flow sensor harness connector.

4. Disconnect PCV hose.
5. Remove air cleaner case & mass air flow sensor assembly and air duct by disconnecting their joints.
 - Add matching marks, if necessary for easier installation.
6. Remove mass air flow sensor from air cleaner case, if necessary.

CAUTION: Handle mass air flow sensor according to the following instructions.

- **Never impact it.**
- **Never disassemble it.**
- **Never touch its sensor.**

INSTALLATION

Note the following item, and install in the reverse order of removal.

- Align marks. Attach each joint. Screw clamps firmly.

Clamp tightening torque: 4.5 N.m (0.46 kg-m, 40 in-lb)

Inspection

INSPECTION AFTER REMOVAL

Inspect air duct assembly for crack or tear.


- If damage is found, replace air duct assembly

INTAKE MANIFOLD

Exploded View

| Symbol | Description |
|--------|-----------------------------------|
| | N·m (kg-m, ft-lb) |
| | N·m (kg-m, in-lb) |
| | Always replace after disassembly. |

SEC. 118•140•163•211•223

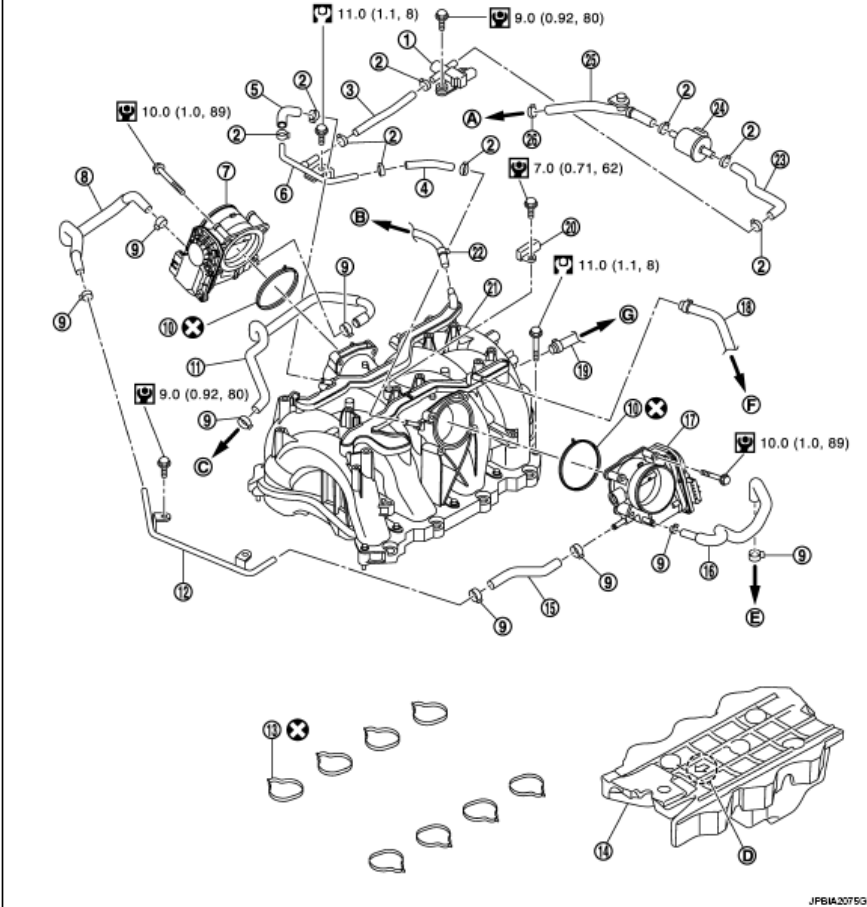

- | | | |
|--|---|-----------------------------|
| 1. EVAP canister purge control solenoid valve | 2. Clamp | 3. EVAP hose |
| 4. EVAP hose | 5. EVAP hose | 6. EVAP tube |
| 7. Electric throttle control actuator (bank 2) | 8. Water hose | 9. Clamp |
| 10. Gasket | 11. Water hose | 12. Water pipe |
| 13. Gasket | 14. Acoustic absorbent | 15. Water hose |
| 16. Water hose | 17. Electric throttle control actuator (bank 1) | 18. PCV hose |
| 19. Vacuum hose | 20. Manifold absolute pressure (MAP) sensor | 21. Intake manifold |
| 22. PCV hose | 23. EVAP hose | 24. Vacuum tank |
| 25. EVAP service port hose | 26. Clamp | |
| A. To centralized under-floor piping | B. To rocker cover (bank 2) | C. To water inlet |
| D. Front mark | E. To cylinder head | F. To rocker cover (bank 1) |
| G. To brake booster | | |

Fig. 31: Exploded View Of Intake Manifold With Torque Specifications
 Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to **COMPONENTS** for symbols above.

Removal and Installation**REMOVAL**

WARNING: To avoid the danger of being scalded, never drain the engine coolant when the engine is hot.

1. Remove engine cover and engine room cover (RH and LH). Refer to **EXPLODED VIEW**.
2. Release fuel pressure. Refer to **INSPECTION**.
3. Remove air duct (inlet) and air duct. Refer to **EXPLODED VIEW**.
4. Remove quick connector cap (1) and disconnect fuel feed hose (2) on engine side. Refer to **EXPLODED VIEW**.

⇐ : Engine front

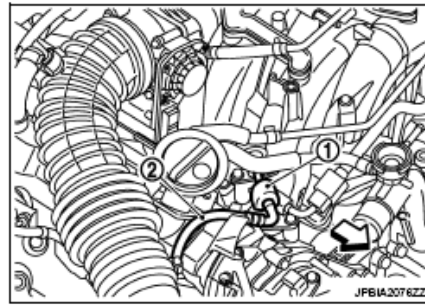


Fig. 32: Identifying Quick Connector Cap And Fuel Feed Hose
Courtesy of NISSAN MOTOR CO., U.S.A.

5. Remove engine cover bracket. Refer to **EXPLODED VIEW**.
6. Remove fuel injector and fuel tube assembly. Refer to **EXPLODED VIEW**.
7. Disconnect manifold absolute pressure (MAP) sensor and air fuel ratio sensor 1 (bank 1) harness connector.
8. Remove vacuum tank, EVAP service port hose and EVAP canister purge control solenoid valve.
9. Disconnect PCV hoses and vacuum hose from intake manifold.
 - Add matching marks as necessary for easier installation.
10. Drain engine coolant from radiator. Refer to **DRAINING**.

CAUTION:

- Perform this step when the engine is cold.
- Never spill engine coolant on drive belts.

NOTE: When removing only intake manifold, move electric throttle control actuator without disconnecting the water hoses.

11. Remove electric throttle control actuator.
 - Loosen mounting bolts in reverse order as shown below.

NOTE:

- The graphic shows the electric throttle control actuator (bank 1) viewed from the air duct side.
- Viewed from the air duct side, the order of loosening mounting bolts of electric throttle control actuator (bank 1) is the same as that of the electric throttle control actuator (bank 2).

CAUTION:

- Handle carefully to avoid any impact to electric throttle control actuator.
- Never disassemble.

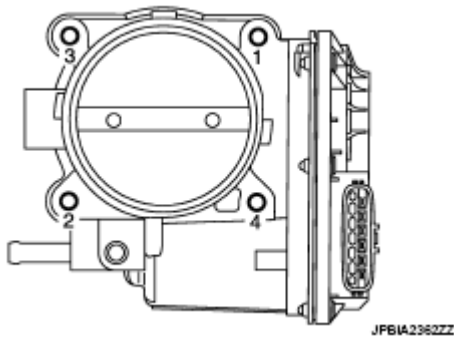


Fig. 33: Identifying Electric Throttle Control Actuator Mounting Bolts
Courtesy of NISSAN MOTOR CO., U.S.A.

12. Remove intake manifold with power tool.

- Loosen mounting bolts in reverse order as shown below.

⇐ : Engine front

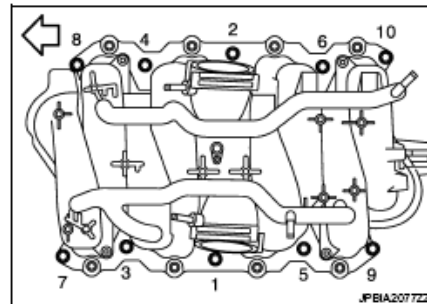


Fig. 34: Identifying Intake Manifold Mounting Bolt Loosening Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

13. Remove intake manifold gaskets.

CAUTION: Cover engine openings to avoid entry of foreign materials.

14. Remove manifold absolute pressure (MAP) sensor, if necessary.

CAUTION: Handle carefully to avoid any impact to manifold absolute pressure (MAP) sensor.

15. Remove acoustic absorbent.

INSTALLATION

Note the following item, and install in the reverse order of removal.

Intake Manifold

Tighten in numerical order as shown below.

⇐ : Engine front

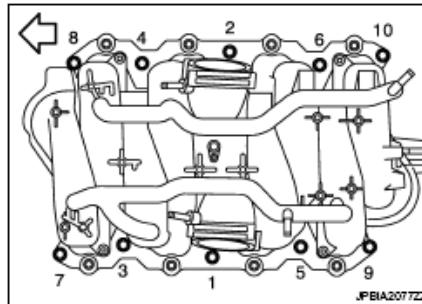


Fig. 35: Identifying Intake Manifold Mounting Bolt Tightening Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

Electric Throttle Control Actuator

- Tighten in numerical order as shown above.

NOTE:

- The graphic shows the electric throttle control actuator (bank 1) viewed from the air duct side.
- Viewed from the air duct side, the order of tightening mounting bolts of electric throttle control actuator (bank 1) is the same as that of the electric throttle control actuator (bank 2).
- Perform the "Throttle Valve Closed Position Learning" when harness connector of electric throttle control actuator is disconnected. Refer to **THROTTLE VALVE CLOSED POSITION LEARNING : DESCRIPTION**.
- Perform the "Idle Air Volume Learning" and "Throttle Valve Closed Position Learning" when electric throttle control actuator is replaced. Refer to **IDLE AIR VOLUME LEARNING: DESCRIPTION** and **THROTTLE VALVE CLOSED POSITION LEARNING: DESCRIPTION**.

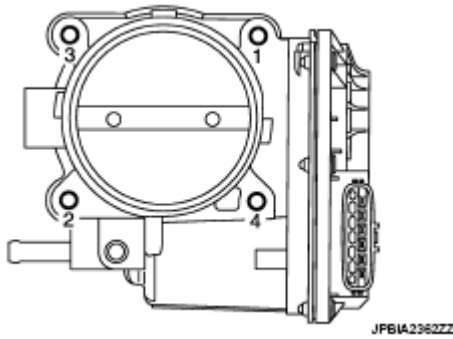


Fig. 36: Identifying Electric Throttle Control Actuator Mounting Bolts
Courtesy of NISSAN MOTOR CO., U.S.A.

Water Hose

Insert hose by 27 to 32 mm (1.06 to 1.26 in) from connector end.


Vacuum Hose

Refer to **INSPECTION** .

FUEL INJECTOR AND FUEL TUBE

Exploded View

| Symbol | Description |
|--------|-----------------------------------|
| | N·m (kg-m, ft-lb) |
| | N·m (kg-m, in-lb) |
| | Always replace after disassembly. |

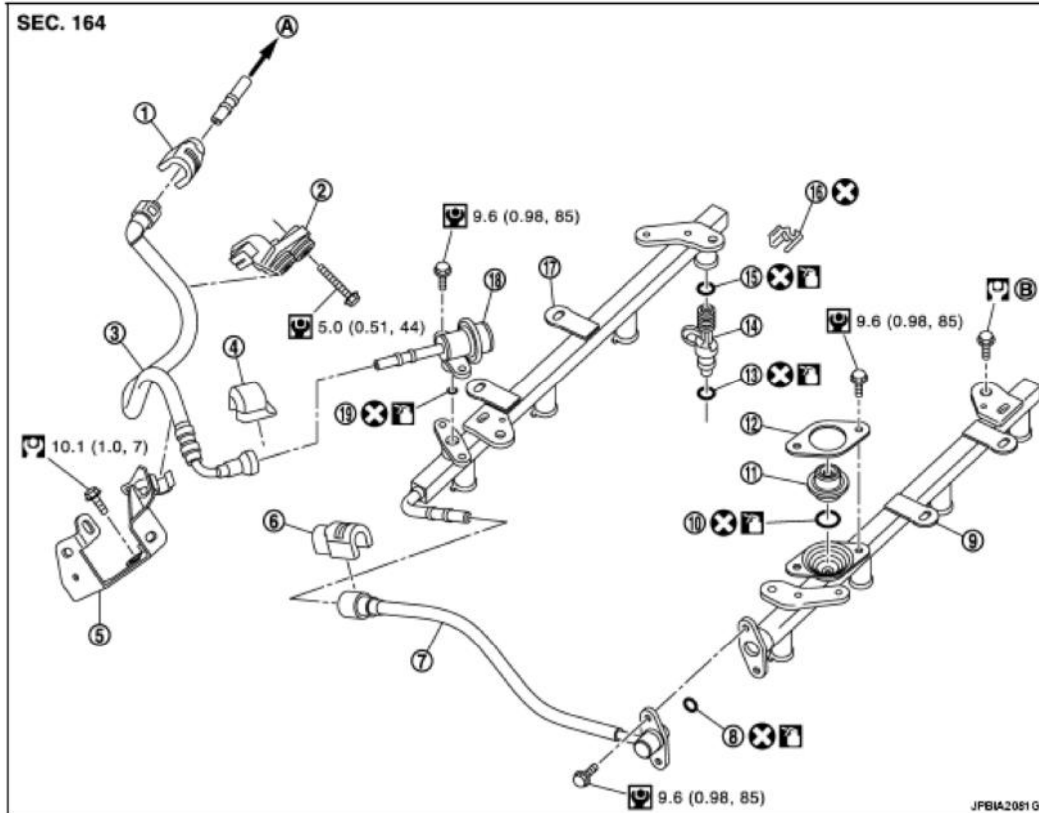

- | | | |
|------------------------|------------------------|------------------------|
| 1. Quick connector cap | 2. Fuel hose bracket | 3. Fuel feed hose |
| 4. Quick connector cap | 5. Fuel hose bracket | 6. Quick connector cap |
| 7. Fuel hose (center) | 8. O-ring | 9. Fuel tube (bank 1) |
| 10. O-ring | 11. Fuel damper | 12. Fuel damper cap |
| 13. O-ring (green) | 14. Fuel injector | 15. O-ring (black) |
| 16. Clip | 17. Fuel tube (bank 2) | 18. Fuel feed damper |
| 19. O-ring | | |

A. To centralized under-floor piping B. Refer to INTAKE MANIFOLD

Fig. 37: Exploded View Of Fuel Injector And Fuel Tube With Torque Specifications
 Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to **COMPONENTS** for symbols above.

CAUTION: Never remove or disassemble parts unless instructed as shown above.

Removal and Installation

REMOVAL

WARNING:

- Put a "CAUTION: FLAMMABLE" sign in the workshop.
- Be sure to work in a well ventilated area and furnish workshop with a CO2 fire extinguisher.
- Never smoke while servicing fuel system. Keep open flames and sparks away from the work area.
- To avoid the danger of being scalded, never drain engine coolant when engine is hot.

1. Remove engine cover and engine room cover (RH and LH). Refer to **EXPLODED VIEW**.
2. Release fuel pressure. Refer to **INSPECTION**.
3. Remove the fuel feed hose (2) on the fuel feed damper side with quick connector release [SST: - (J-45488)] as per the followings steps.

1. : Quick connector cap
 ⇐ : Engine front

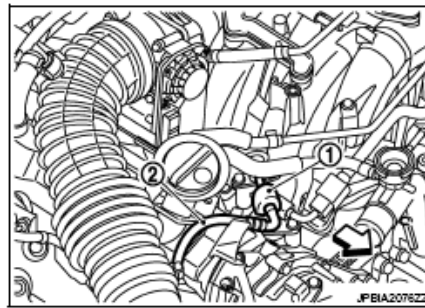


Fig. 38: Identifying Fuel Feed Hose
 Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION: Use the quick connector release for removing the fuel feed hose on the centralized under-floor piping side as well as the fuel feed damper side although the shape of the quick connector is different.

- a. Remove quick connector cap from quick connector connection.
- b. With the sleeve side (B) of quick connector release (A) facing to quick connector (D), install quick connector release onto fuel feed hose.

- 1 : Fuel feed damper
 C : Insert and retain

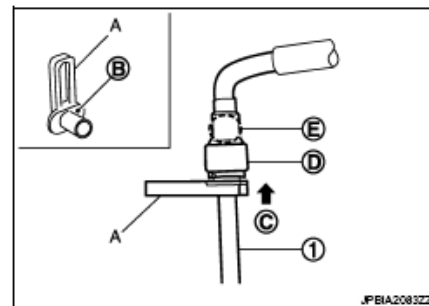


Fig. 39: Identifying Sleeve Side And Quick Connector
 Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Insert quick connector release into quick connector until sleeve contacts and goes no further. Hold quick connector release on that position.

CAUTION: Inserting quick connector release hard will not disconnect quick connector. Hold quick connector release where it contacts and goes no further.

- d. Pull out quick connector straight from fuel feed damper.

CAUTION:

- Pull quick connector holding position (E) as shown above.
- Never pull with lateral force applied. O-ring inside quick connector may be damaged.
- Prepare container and cloth beforehand as fuel will leak out.
- Avoid fire and sparks.
- Keep parts away from heat source. Especially, be careful when welding is performed around them.
- Never expose parts to battery electrolyte or other acids.
- Never bend or twist connection between quick connector and fuel feed hose during installation/removal.
- To keep the connecting portion clean and to avoid damage and foreign materials, cover them completely with plastic bags (A) or something similar.

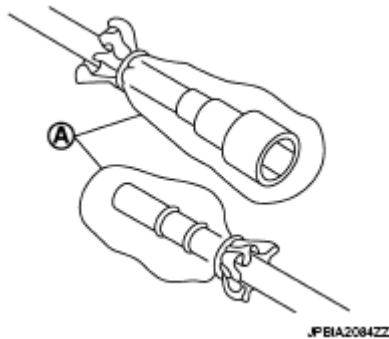


Fig. 40: Identifying Connector Completely Covered With Plastic Bags
Courtesy of NISSAN MOTOR CO., U.S.A.

4. Remove air duct. Refer to **EXPLODED VIEW**.
5. Remove electric throttle control actuator. Refer to **EXPLODED VIEW**.
6. Remove fuel hose (center).
 - The procedure for removing the quick connector is the same as for removing the fuel feed damper.

CAUTION: Disconnect quick connector by using quick connector release [SST: - (J-45488)], not by picking out retainer tabs.

7. Remove fuel tube and fuel injector assembly.

- Loosen mounting bolts (b) first. Then loosen mounting bolts (a) shown below.

- 1 : Fuel tube (bank 2)
 2 : Fuel tube (bank 1)
 ⇐ : Engine front

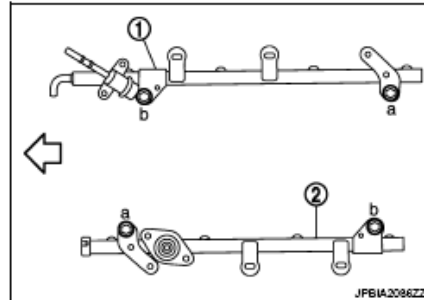


Fig. 41: Identifying Fuel Tube Mounting Bolts
 Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION: Never tilt it, or remaining fuel in pipes may flow out from pipes.

8. Remove fuel injector (1) from fuel tube (3) as per the following:

- A : Installed condition
 B : Clip mounting groove
 C : Protrusion

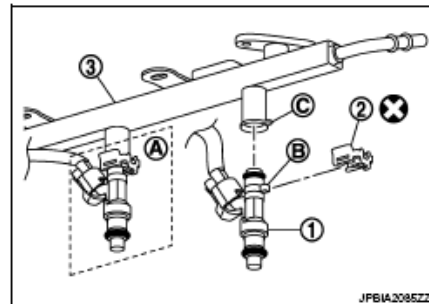


Fig. 42: Identifying Fuel Injector And Fuel Tube
 Courtesy of NISSAN MOTOR CO., U.S.A.

- Open and remove clip (2).
- Remove fuel injector from fuel tube by pulling straight.

CAUTION:

- Be careful with remaining fuel that may go out from fuel tube.
- Be careful not to damage injector nozzles during removal.
- Never bump or drop fuel injector.
- Never disassemble fuel injector.

9. Disconnect sub harness connector from fuel injectors.

10. Remove fuel damper and fuel feed damper, if necessary.

INSTALLATION

1. Install fuel damper (4) as per the following:

1 : Fuel damper cap

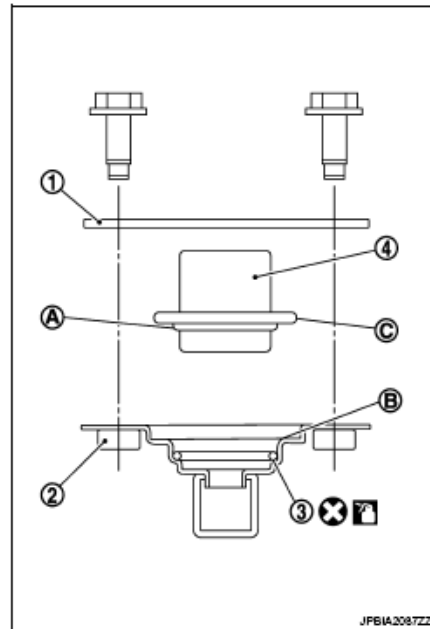


Fig. 43: Identifying Fuel Damper And O-Ring
Courtesy of NISSAN MOTOR CO., U.S.A.

- a. Install new O-ring (3) to fuel tube (bank 1) (2) as shown above. When handling new O-ring, pay attention to the following caution items:

CAUTION:

- Handle O-ring with bare hands. Never wear gloves.
- Lubricate O-ring with new engine oil.
- Never clean O-ring with solvent.
- Check that O-ring and its mating part are free of foreign material.
- When installing O-ring, be careful not to scratch it with tool or fingernails. Also be careful not to twist or stretch O-ring. If O-ring was stretched while it was being attached, never insert it quickly into fuel tube.
- Insert new O-ring straight into fuel tube. Never decenter or twist it.

- b. Install spacer (A) to fuel damper. Insert fuel damper straight into fuel tube (bank 1).

CAUTION:

- Insert straight, check that the axis is lined up.
- Insert fuel damper at 130 N (13.3 kg, 29.2 lb) or less to prevent damage to the parts
- Insert fuel damper until the rim (C) reaches the cap flange (B).

c. Tighten mounting bolts evenly in turn.

- After tightening mounting bolts, check that there is no gap between flange and fuel tube (bank 1).

2. Install fuel feed damper.

- Handling procedure of O-ring is the same as that of fuel damper.
- Insert fuel feed damper straight into fuel tube (bank 2).

CAUTION: Insert fuel feed damper at 147 N (15 kg, 33.1 lb) or less to prevent damage to the parts

- Tighten mounting bolts evenly in turn.
- After tightening mounting bolts, check that there is no gap between flange and fuel tube (bank 2).

3. Install new O-rings to fuel injector paying attention to the following caution.

CAUTION:

- Upper and lower O-ring are different. Be careful not to confuse them.

Fuel tube side: Black

Nozzle side: Green

- Handle O-ring with bare hands. Never wear gloves.
- Lubricate O-ring with new engine oil.
- Never clean O-ring with solvent.
- Check that O-ring and its mating part are free of foreign material.
- When installing O-ring, be careful not to scratch it with tool or fingernails. Also be careful not to twist or stretch O-ring. If O-ring was stretched while it was being attached, never insert it quickly into fuel tube.
- Insert O-ring straight into fuel injector. Never decenter or twist it.

4. Install fuel injector (3) to fuel tube (1) as per the following:

- 2 : O-ring (black)
4 : O-ring (green)

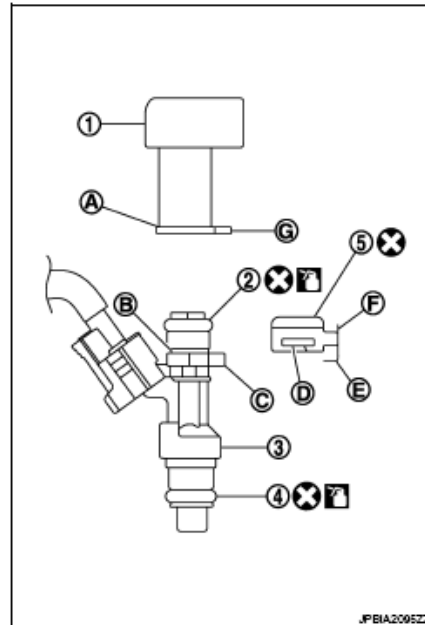


Fig. 44: Identifying Fuel Injector And Fuel Tube
Courtesy of NISSAN MOTOR CO., U.S.A.

- a. Insert clip (5) into clip mounting groove (B) on fuel injector.
 - Insert clip so that protrusion (C) of fuel injector matches cutout (E) of clip.

CAUTION:

- **Never reuse clip. Replace it with a new one.**
- **Be careful to keep clip from interfering with O-ring. If interference occurs, replace O-ring.**

- b. Insert fuel injector into fuel tube with clip attached.
 - Insert it while matching it to the axial center.
 - Insert fuel injector so that protrusion (G) of fuel tube matches cutout (F) of clip.
 - Check that fuel tube flange (A) is securely fixed in flange fixing groove (D) on clip.

CAUTION: Insert fuel injector at 147 N (15 kg, 33.1 lb) or less to prevent damage to the parts

- c. Check that installation is complete by checking that fuel injector does not rotate or come off.
 - Check that protrusions of fuel injectors and fuel tube are aligned with cutouts of clips after installation.
5. Install fuel tube and fuel injector assembly.
 - Tighten mounting bolts (a) first. Then tighten mounting bolts (b) shown below.

- 1 : Fuel tube (bank 2)
 2 : Fuel tube (bank 1)
 ← : Engine front

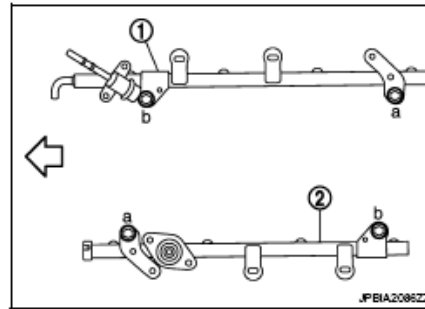


Fig. 45: Identifying Fuel Tube Mounting Bolts
 Courtesy of NISSAN MOTOR CO., U.S.A.

1st step: 10.1 N.m (1.0 kg-m, 7 ft-lb)

2nd step: 23.6 N.m (2.4 kg-m, 17 ft-lb)

CAUTION:

- Be careful not to let tip of injector nozzle come in contact with other parts.
- Insert fuel injector at 147 N (15 kg, 33.1 lb) or less to prevent damage to the parts

6. Install quick connectors as per the following:


- Unless otherwise indicated, the installation to the engine side and centralized under-floor piping side is exactly alike.
- a. Check no foreign substances are deposited in and around fuel piping and quick connector, and no damage on them.
- b. Thinly apply new engine oil around fuel piping from tip end to spool end.
- c. Align center to insert quick connector straightly into fuel piping.

Fuel hose (center) and centralized under-floor piping side:

- Visually confirm that the two retainer tabs (A) are connected to the quick connector (B).

CAUTION:

- Carefully align center to avoid inclined insertion to prevent damage to O-ring inside quick connector.
- Insert until you hear a "click" sound and actually feel the engagement.
- To avoid misidentification of engagement with a similar sound, be sure to perform the next step.

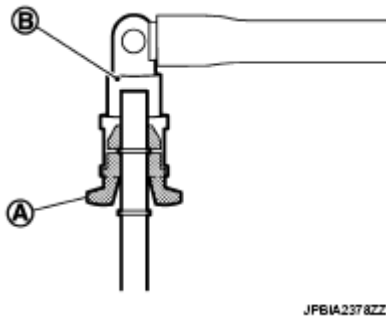


JF6IA2378ZZ

Fig. 46: Identifying Retainer Tabs And Quick Connector
 Courtesy of NISSAN MOTOR CO., U.S.A.

Fuel feed damper side:

- Insert quick connector to fuel feed damper piping until top spool (2) is completely inside quick connector and 2nd level spool (3) exposes just below quick connector.

B : Fitted condition
 ⇐ : Upright insertion

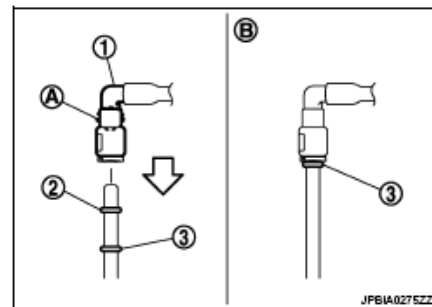

JF6IA0275ZZ

Fig. 47: Identifying Fuel Feed Damper Side
 Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION:

- Hold (A) position as shown below when inserting fuel feed hose (1) into quick connector.
 - Carefully align center to avoid inclined insertion to prevent damage to O-ring inside quick connector.
 - Insert until you hear a "click" sound and actually feel the engagement.
 - To avoid misidentification of engagement with a similar sound, be sure to perform the next step.
- d. Pull quick connector by hand holding position (A). Check it is completely engaged (connected) so that it does not come out from fuel piping (1).

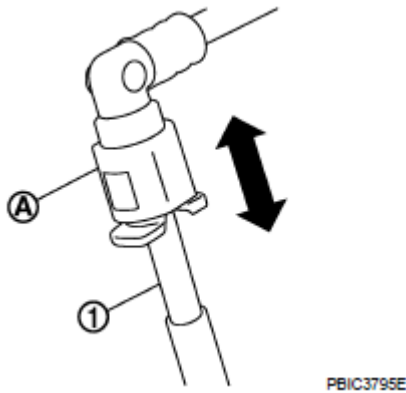


Fig. 48: Pulling Quick Connector
Courtesy of NISSAN MOTOR CO., U.S.A.

- e. Install quick connector cap (3) to quick connector connection.

- 1 : Fuel tube (bank 1)
2 : Fuel hose (center)

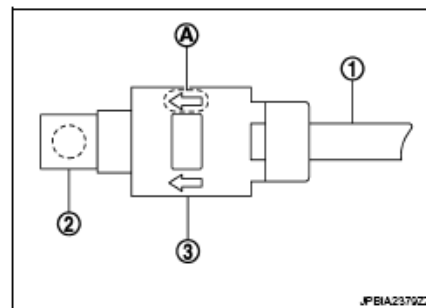


Fig. 49: Identifying Quick Connector Cap
Courtesy of NISSAN MOTOR CO., U.S.A.

- Install quick connector cap with arrow (A) on surface facing the direction of quick connector.

CAUTION: If cap cannot be installed smoothly, quick connector may have not be installed correctly. Check connection again.

NOTE: Graphic shows an example fuel feed damper side.

7. Install in the reverse order of removal.

Inspection

INSPECTION AFTER INSTALLATION

Check for Fuel Leakage

1. Turn ignition switch "ON" (with the engine stopped). With fuel pressure applied to fuel piping, check that there is no fuel leakage at connection points.

NOTE: Use mirrors for checking at points out of clear sight.

2. Start the engine. With engine speed increased, check again that there is no fuel leakage at connection points.


CAUTION: Never touch the engine immediately after it is stopped because the engine is extremely hot.

OIL PAN (LOWER) AND OIL STRAINER

Exploded View

| Symbol | Description |
|--------|-----------------------------------|
| | N·m (kg-m, ft-lb) |
| | N·m (kg-m, in-lb) |
| | Always replace after disassembly. |

SEC. 110•150•213

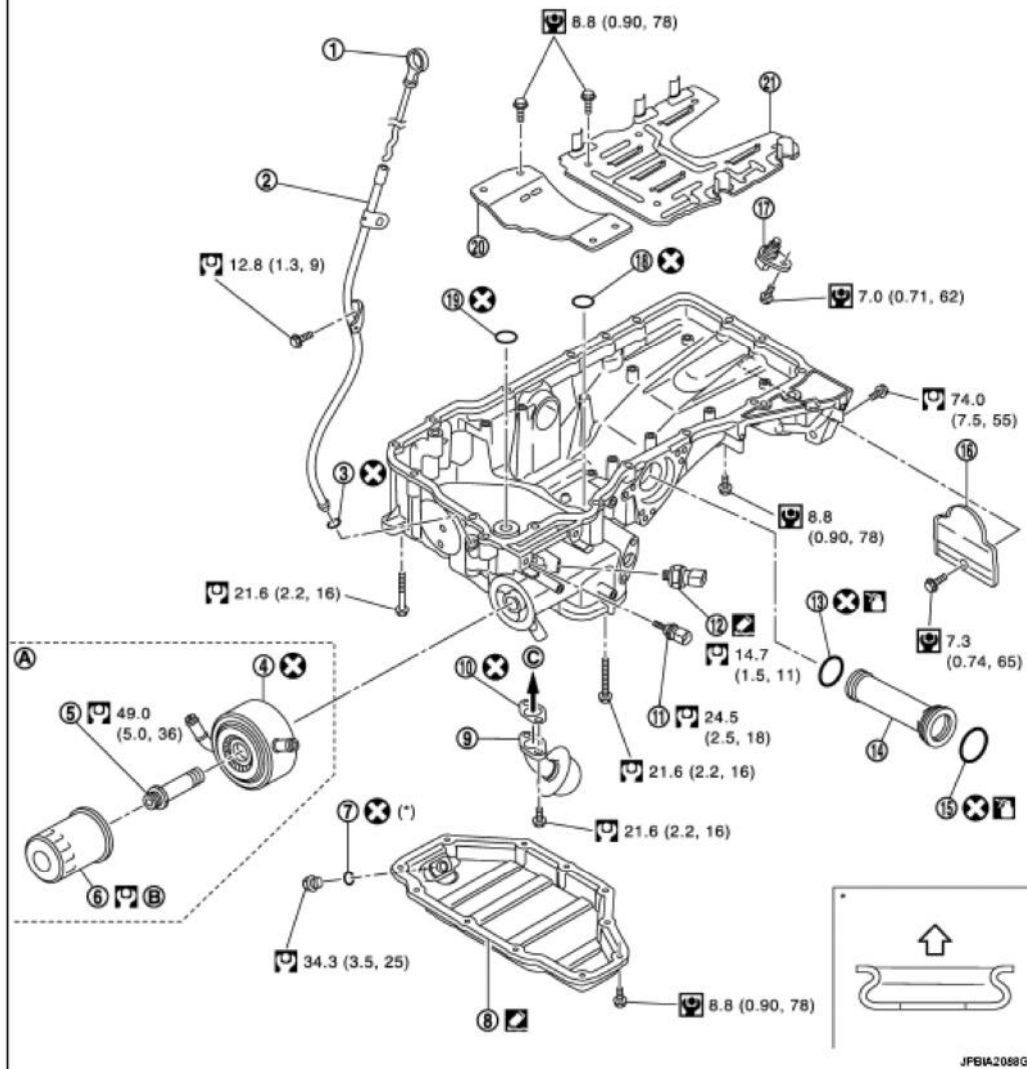

- | | | |
|----------------------|--------------------------------------|-------------------------|
| 1. Oil level gauge | 2. Oil level gauge guide | 3. O-ring |
| 4. Oil cooler | 5. Connector bolt | 6. Oil filter |
| 7. Drain plug washer | 8. Oil pan (lower) | 9. Oil strainer |
| 10. Gasket | 11. Oil temperature sensor | 12. Oil pressure switch |
| 13. O-ring | 14. Axle pipe | 15. O-ring |
| 16. Rear plate cover | 17. Crankshaft position sensor (POS) | 18. O-ring |
| 19. O-ring | 20. Baffle plate | 21. Baffle plate |
- A. Refer to ON-VEHICLE REPAIR B. Refer to OIL FILTER C. Oil pump side

⇐ : Oil pan side

Fig. 50: Exploded View Of Oil Pan (Lower) And Oil Strainer With Torque Specification
 Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to **COMPONENTS** for symbols above.

Removal and Installation

REMOVAL

WARNING: To avoid the danger of being scalded, never drain engine oil when engine is hot.

1. Drain engine oil. Refer to **DRAINING**.
2. Remove oil pan (lower) as per the following:
 - a. Loosen mounting bolts in reverse order as shown below to remove.

↩ : Engine front

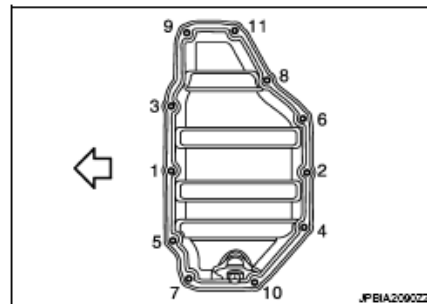


Fig. 51: Identifying Oil Pan Mounting Bolts Loosening Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Insert the seal cutter [SST: KV10111100 (J-37228)] (A) between oil pan (upper) and oil pan (lower).

CAUTION:

- Be careful not to damage the mating surfaces.
- Never insert a screwdriver. This damages the mating surfaces.

- c. Slide the seal cutter by tapping on the side of tool with a hammer. Remove oil pan (lower).

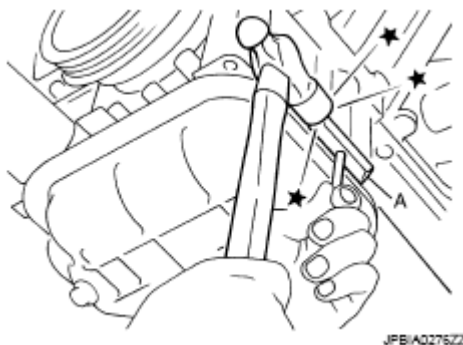


Fig. 52: Inserting Seal Cutter Between Oil Pan (Upper) And Oil Pan (Lower)
Courtesy of NISSAN MOTOR CO., U.S.A.

3. Remove oil strainer.

INSTALLATION

1. Install oil strainer.
2. Install oil pan (lower) as per the following:
 - a. Use scraper (A) to remove old liquid gasket from mating surfaces.
 - Remove old liquid gasket from the bolt holes and thread.

CAUTION: Never scratch or damage the mating surfaces when cleaning off old liquid gasket.

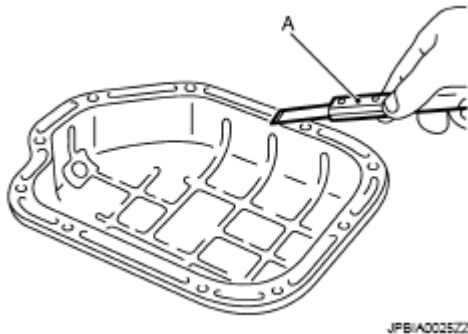


Fig. 53: Using Scraper To Remove Old Liquid Gasket
Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Apply a continuous bead of liquid gasket with the tube presser (commercial service tool) to the oil pan (lower) as shown below.

- a : 7.5 - 9.5 mm (0.295 - 0.374 in)
 b : ϕ 4.0 - 5.0 mm (0.157 - 0.197 in)
 ← : Engine front

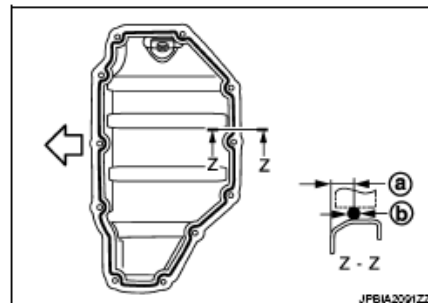


Fig. 54: Identifying Oil Pan (Lower)
Courtesy of NISSAN MOTOR CO., U.S.A.

Use Genuine RTV Silicone Sealant or an equivalent. Refer to RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS.

CAUTION: Attaching must be done within 5 minutes after coating.

- c. Install oil pan (lower).
 - Tighten mounting bolts in numerical order as shown below.

↔ : Engine front

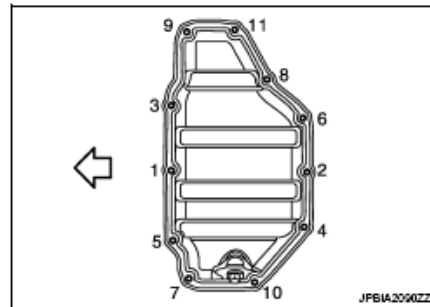


Fig. 55: Identifying Oil Pan (Lower) Bolt Tightening Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

3. Install oil pan drain plug.
 - Refer to the graphic of the components for installation direction of drain plug washer. Refer to **EXPLODED VIEW**.
4. Install in the reverse order of removal after this step.

NOTE: Wait at least 30 minutes after oil pan is installed before pouring engine oil.

Inspection

INSPECTION AFTER REMOVAL


Clean oil strainer if any object is attached.

INSPECTION AFTER INSTALLATION

1. Check the engine oil level and adjust engine oil. Refer to **INSPECTION**.
2. Start engine, and check there is no leakage of engine oil.
3. Stop engine and wait for 15 minutes.
4. Check the engine oil level again. Refer to **INSPECTION**.

IGNITION COIL, SPARK PLUG AND ROCKER COVER

Exploded View

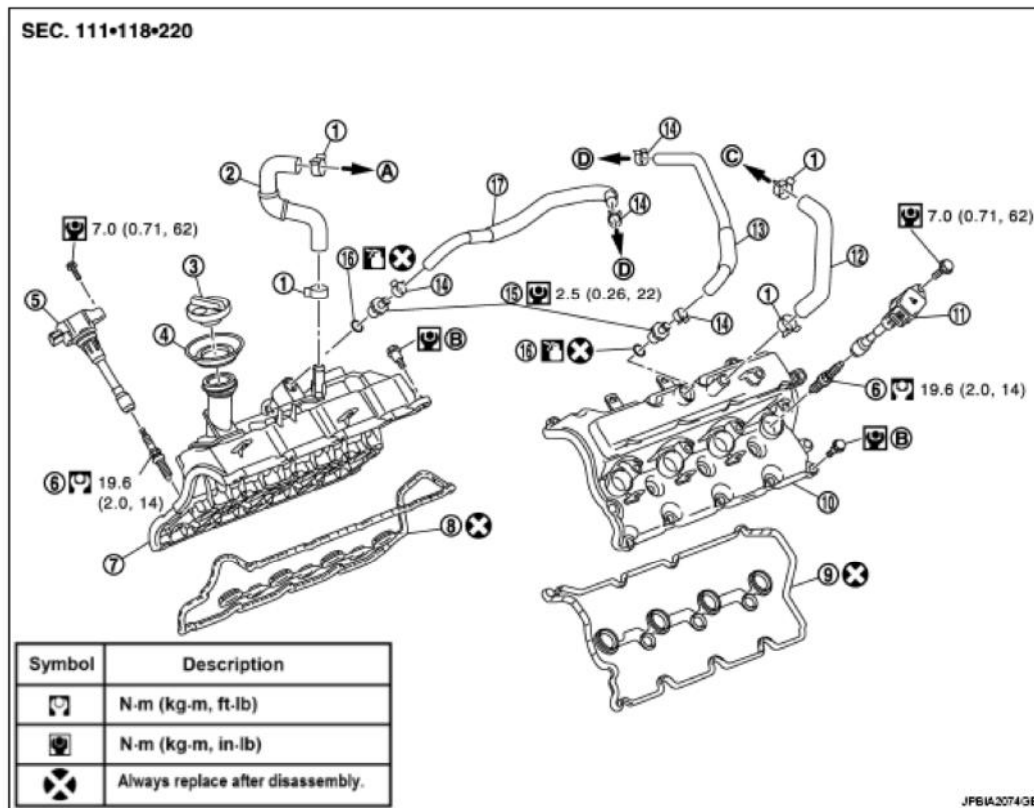

- | | | |
|---------------------------|--|---------------------------------|
| 1. Clamp | 2. PCV hose | 3. Oil filler cap |
| 4. Oil catcher | 5. Ignition coil (No. 1 - 6) | 6. Spark plug |
| 7. Rocker cover (bank 2) | 8. Rocker cover gasket (bank 2) | 9. Rocker cover gasket (bank 1) |
| 10. Rocker cover (bank 1) | 11. Ignition coil (No. 7, 8) | 12. PCV hose |
| 13. PCV hose | 14. Clamp | 15. PCV valve |
| 16. O-ring | 17. PCV hose | |
| A. To air duct (bank 2) | B. Refer to IGNITION COIL, SPARK PLUG AND ROCKER COVER | C. To air duct (bank 1) |
| D. To intake manifold | | |

Fig. 56: Exploded View Of Ignition Coil, Spark Plug And Rocker Cover With Torque Specification
 Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to **COMPONENTS** for symbols above.

Removal and Installation

REMOVAL

- Remove the following parts:
 - Engine cover and engine room cover (RH and LH): Refer to **EXPLODED VIEW**.
 - Air cleaner case and air duct: Refer to **EXPLODED VIEW**.
 - Fuel feed hose: Refer to **EXPLODED VIEW**.
- Disconnect PCV hose from rocker cover.
- Remove ignition coil.

CAUTION: Never impact it.

NOTE: Installation position of Ignition coil depends on cylinder position.

4. Remove spark plugs. Refer to **REMOVAL AND INSTALLATION**.

CAUTION: Never impact it.

5. Remove rocker cover.
- Loosen bolts in reverse order shown below.

A : Bank 2
B : Bank 1
⇐ : Engine front

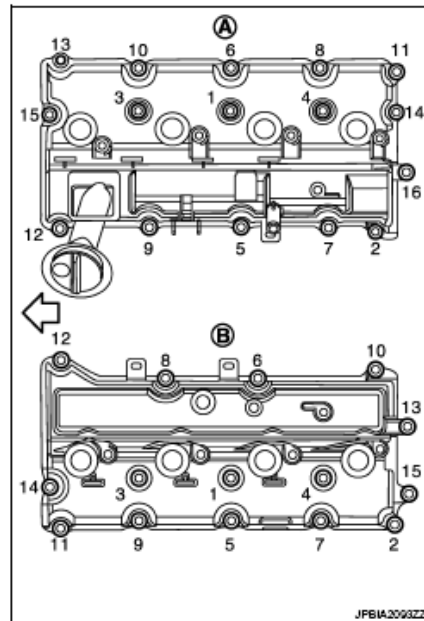


Fig. 57: Identifying Rocker Cover Bolt Loosening Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

6. Remove rocker cover gasket from rocker cover.
7. Use scraper to remove all traces of liquid gasket from cylinder head & VVEL ladder assembly.

CAUTION: Never scratch or damage the mating surface when cleaning off old liquid gasket.

8. Remove PCV valve from rocker cover, if necessary.
9. Remove oil filler cap and oil catcher from rocker cover, if necessary.

INSTALLATION

1. Apply liquid gasket with the tube presser (commercial service tool) to VVEL ladder assembly (1) and actuator bracket (rear) (2).

- 3 : VVEL actuator sub assembly
A : Liquid gasket application point
b : 4 mm (0.16 in)
c : 2.5 - 3.5 mm (0.098 - 0.138 in)
d : 5 mm (0.20 in)
e : 10 mm (0.39 in)
F : End surface of VVEL ladder assembly
⇐ : Engine front

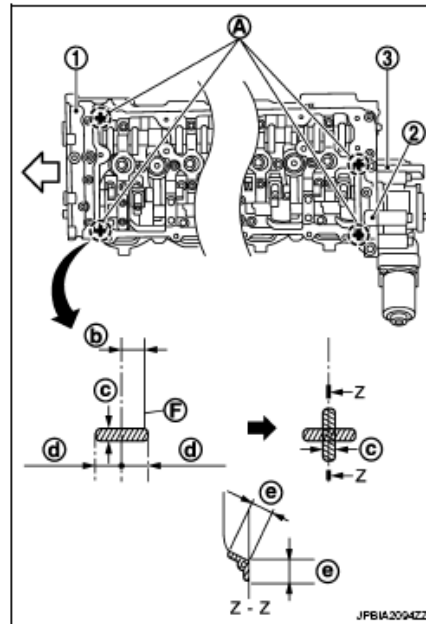


Fig. 58: Identifying VVEL Ladder Assembly
Courtesy of NISSAN MOTOR CO., U.S.A.

Use Genuine RTV Silicone Sealant or an equivalent. Refer to RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS .

NOTE: The graphic shows an example of bank 1 side.

- Apply liquid gasket on the front and rear side of engine first. [5 mm (0.20 in) + 5 mm (0.20 in) side as shown in the graphic]
2. Install rocker cover gasket to rocker cover.
 3. Install rocker cover.
 - Check that rocker cover gasket does not drop from the installation groove of rocker cover.
 4. Tighten bolts in two steps separately in numerical order as shown below.

A : Bank 2
B : Bank 1
⇐ : Engine front

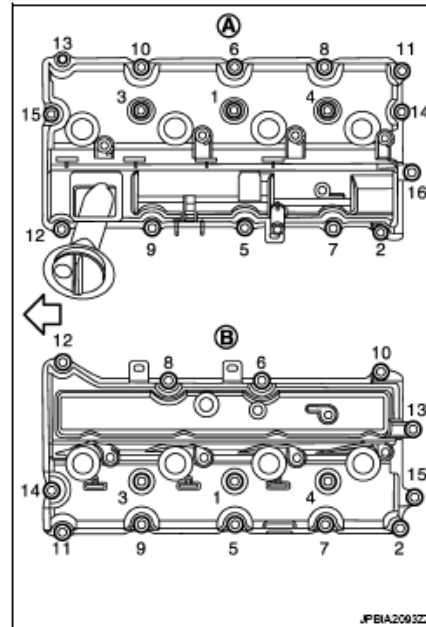


Fig. 59: Identifying Rocker Cover Bolt With Tightening Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

1st step: 2.0 N.m (0.2 kg-m, 18 in-lb)

2nd step: 8.3 N.m (0.85 kg-m, 73 in-lb)

- Because of the limited working space, use adapter (A) and torque wrench (B) assembly [SST: KV10119300 (-)] to tighten bolts (on the No. 7 and No. 8 cylinders) to the specified torque.

⇐ : Engine front

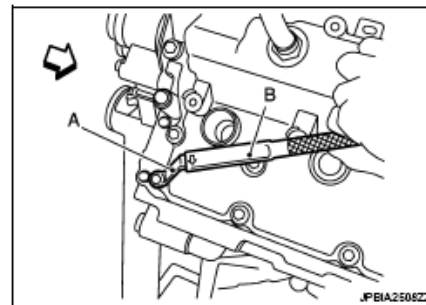


Fig. 60: Tightening Adapter Bolts
Courtesy of NISSAN MOTOR CO., U.S.A.

- Install spark plug. Refer to **REMOVAL AND INSTALLATION**.
- Install ignition coil.
 - Install Ignition coil marked with an identification mark (A) on cylinder No. 7 and 8.

↔ : Engine front

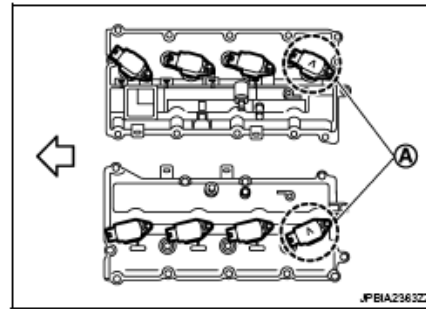


Fig. 61: Identifying Mark On Cylinder Number
Courtesy of NISSAN MOTOR CO., U.S.A.

7. Install in the reverse order of removal.

OIL SEAL

FRONT OIL SEAL

FRONT OIL SEAL : Removal and Installation

REMOVAL

1. Remove the following parts:
 - Engine undercover with power tool.
 - Drive belts: Refer to **EXPLODED VIEW**.
 - Cooling fan assembly: Refer to **EXPLODED VIEW**.
 - Front cross bar: Refer to **EXPLODED VIEW**.
2. Remove crankshaft pulley as per the following:
 - a. Remove rear plate cover. Refer to **EXPLODED VIEW**.
 - b. Set the ring gear stopper [SST: KV10119200 (J-49277)] (A) as shown below.

↔ : Engine front

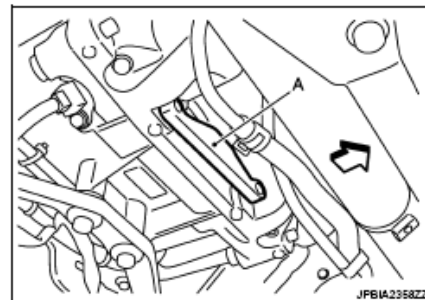


Fig. 62: Identifying Ring Gear Stopper
Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Loosen crankshaft pulley bolt, and then pull crankshaft pulley with both hands to remove it.

CAUTION: Never remove crankshaft pulley bolt. Keep loosened crankshaft pulley bolt in place to protect removed crankshaft pulley from dropping.

3. Remove front oil seal using a suitable tool.

CAUTION: Be careful not to damage front cover and crankshaft.

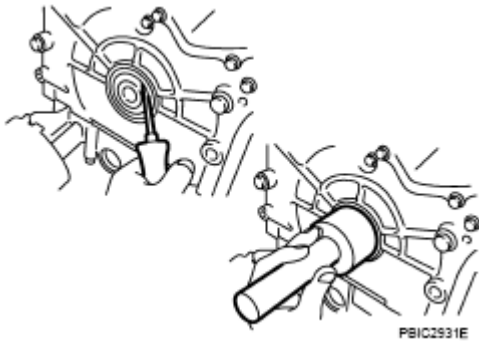


Fig. 63: Fitting Front Oil Seal
Courtesy of NISSAN MOTOR CO., U.S.A.

INSTALLATION

1. Install front oil seal on front cover.

⇐ : Engine inside
➡ : Engine outside

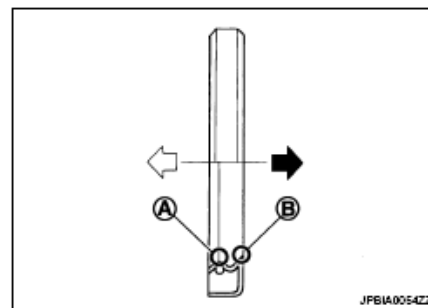


Fig. 64: Identifying Front Oil Seal On Front Cover
Courtesy of NISSAN MOTOR CO., U.S.A.

- Apply new engine oil to both oil seal lip (A) and dust seal lip (B).
- Install it so that each seal lip is oriented as shown in the graphic.

CAUTION: Be careful not to scratch or make burrs on circumference of oil seal.

- Using a suitable drift [outer diameter: 56 mm (2.20 in)], press-fit oil seal until it becomes flush with front cover end face.
- Check the garter spring is in position and seal lips are not inverted.

2. Install in the reverse order of removal.

REAR OIL SEAL

REAR OIL SEAL: Removal and Installation

REMOVAL

1. Remove transmission assembly. Refer to **EXPLODED VIEW** .
2. Remove drive plate. Refer to **EXPLODED VIEW**.
3. Remove rear oil seal with a suitable tool.

CAUTION: Be careful not to damage crankshaft and cylinder block.

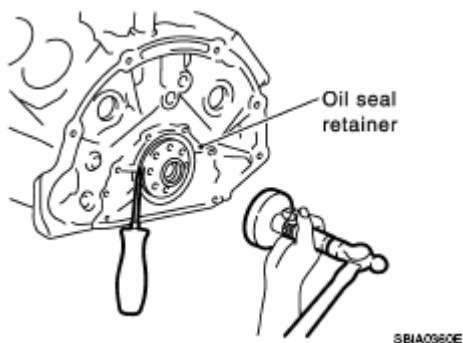




Fig. 65: View Of Removing Oil Seal Retainer
Courtesy of NISSAN MOTOR CO., U.S.A.

INSTALLATION

1. Install rear oil seal.
 - Install rear oil seal so that each seal lip is oriented as shown below.

- A : Oil seal lip
 B : Dust seal lip
 : Engine inside
 : Engine outside

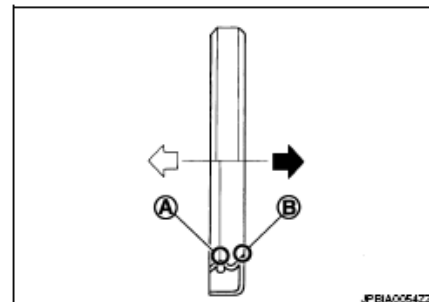
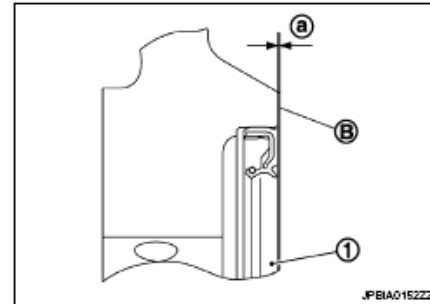


Fig. 66: Identifying Rear Oil Seal

Courtesy of NISSAN MOTOR CO., U.S.A.

- Press in rear oil seal (1) to the position as shown below.

B : Rear oil seal retainer rear end face
 a : 0 - 0.5 mm (0 - 0.020 in)


**Fig. 67: Positioning Rear Oil Seal**

Courtesy of NISSAN MOTOR CO., U.S.A.

- Using a suitable drift [outer diameter 101 mm (3.98 in)], press-fit until the height of rear oil seal is level with the mounting surface.
- Check the garter spring is in position and seal lips are not inverted.

CAUTION:


- Be careful not to damage crankshaft and cylinder block.
- Press-fit straight and avoid causing burrs or tilting oil seal.

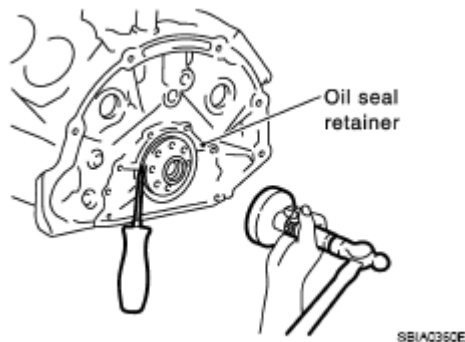**Fig. 68: Removing/Installing Rear Oil Seal**

Courtesy of NISSAN MOTOR CO., U.S.A.

2. Install in the reverse order of removal after this step.

REMOVAL AND INSTALLATION**ENGINE ASSEMBLY****Exploded View**

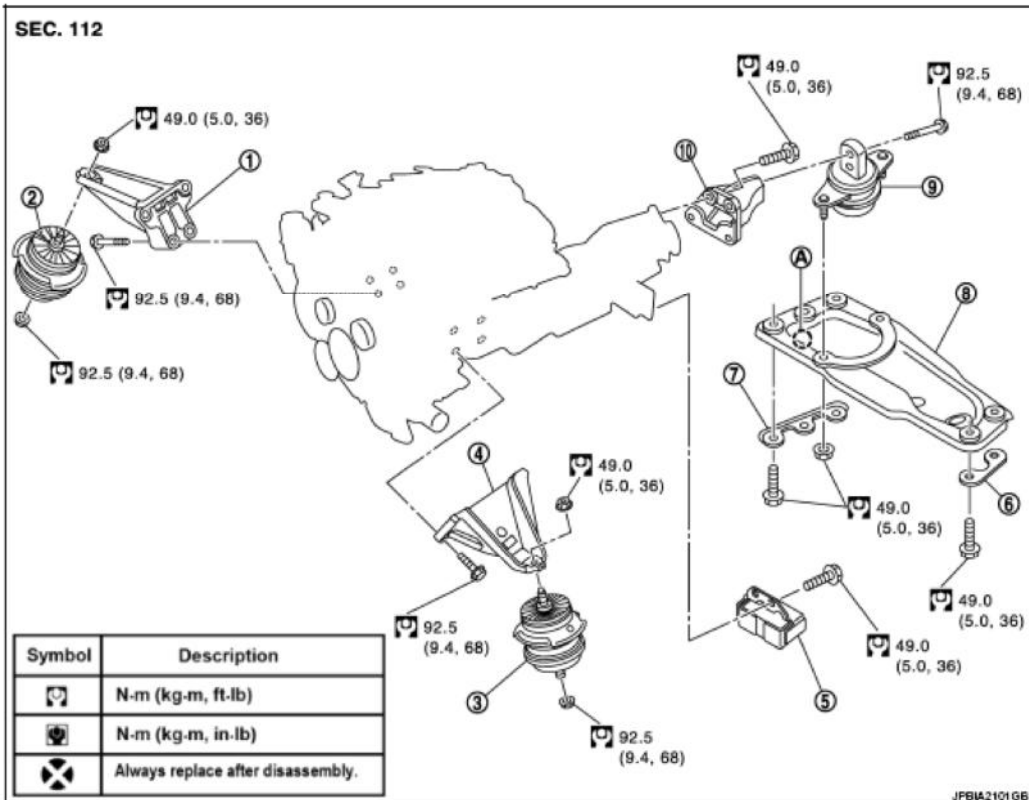

- | | | |
|------------------------------------|-----------------------------------|-------------------------------------|
| 1. Engine mounting bracket (RH) | 2. Engine mounting insulator (RH) | 3. Engine mounting insulator (LH) |
| 4. Engine mounting bracket (LH) | 5. Dynamic damper | 6. Heat insulator (LH) |
| 7. Heat insulator (RH) | 8. Rear engine mounting member | 9. Engine mounting insulator (rear) |
| 10. Engine mounting bracket (rear) | | |
| A. Front mark | | |

Fig. 69: Exploded View Of Engine Assembly With Torque Specification
 Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to **COMPONENTS** for symbols above.

Removal and Installation

WARNING:

- Situate the vehicle on a flat and solid surface.
- Place chocks at the front and back of rear wheels.
- For engines not equipped with engine slingers, attach proper slingers and bolts described in Parts Information.

CAUTION:

- Always be careful to work safely, and avoid forceful or uninstructed operations.
- Never start working until exhaust system and engine coolant are cool enough.
- If items or work required are not covered by the engine information,

refer to the applicable informations.

- Always use the support point specified for lifting.
- Use either 2-pole lift type or separate type lift as much as possible. If board-on type is used for unavoidable reasons, support at rear axle jacking point with transmission jack or similar tool before starting work, in preparation for the backward shift of the center of gravity.
- For supporting points for lifting and jacking point at rear axle, refer to **GARAGE JACK AND SAFETY STAND AND 2-POLE LIFT**.

NOTE: When removing/installing only the engine mounting, the hold engine assembly as instructed bellow:

1. Remove food assembly. Refer to **HOOD ASSEMBLY: EXPLODED VIEW**.
2. Install engine slinger on both front right and front left sides of the engine.
3. Hoist the slinger to obtain room for engine assembly.

CAUTION: Use an engine lifter to prevent the engine slinger from falling and damaging the rocker cover.

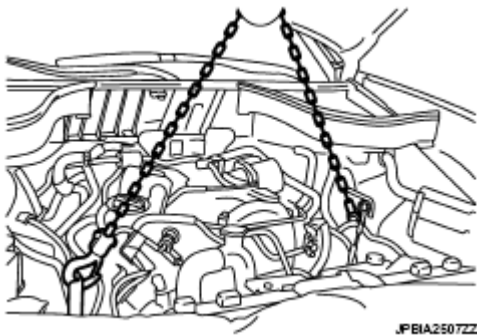


Fig. 70: Lifting Engine Assembly

Courtesy of NISSAN MOTOR CO., U.S.A.

REMOVAL

Outline

At first, remove the engine, transmission, transfer and front final drive assembly with front suspension member facing downward. Then separate the engine from transmission.

Preparation

1. Remove engine cover, engine room cover (RH and LH), battery cover and brake master cylinder cover. Refer to **EXPLODED VIEW**.
2. Release fuel pressure. Refer to **INSPECTION**.

3. Remove the following parts:

- Engine undercover (power tool)
- Front road wheel and tires (power tool)
- Cowl top cover: Refer to **EXPLODED VIEW** .
- Air duct, air cleaner case assembly and PCV hose: Refer to **EXPLODED VIEW** .
- Drive belts: Refer to **REMOVAL AND INSTALLATION** .
- Front cross bar: Refer to **EXPLODED VIEW** .

4. Disconnect both battery cables. Refer to **EXPLODED VIEW** .

5. Drain engine coolant from radiator. Refer to **DRAINING** .

CAUTION: Perform this step when engine is cold.

6. Discharge refrigerant from A/C circuit. Refer to **COLLECTION AND CHARGE** .

7. Remove radiator hoses (upper and lower). Refer to **EXPLODED VIEW** .

Engine Room LH

1. Disconnect heater hose at engine side, and fit a plug onto hose end to prevent engine coolant leakage.
2. Disconnect A/C piping from A/C compressor, and temporarily fasten it on vehicle with a rope. Refer to **EXPLODED VIEW** .
3. Disconnect vacuum hose from brake booster. Refer to **EXPLODED VIEW** .
4. Disconnect ground cable.

Engine Room RH

1. Disconnect all clips and connectors of the engine room harness from engine side.
2. Disconnect fuel feed hose and EVAP service port hose. Refer to **EXPLODED VIEW** .

CAUTION: Fit plugs onto disconnected hoses to prevent fuel leakage.

3. Remove reservoir tank of power steering oil pump and piping from vehicle, and temporarily secure them on engine. Refer to **VK50VE: EXPLODED VIEW** .

CAUTION: When temporarily securing, keep the reservoir tank upright to avoid fluid leakage.

Vehicle Inside

Follow the procedure below to disconnect engine room harness connectors at passenger room side, and

temporarily secure them on engine.

1. Remove glove box assembly and instrument assist lower panel. Refer to **EXPLODED VIEW** .
2. Disconnect engine room harness connectors at unit sides and other locations.
3. Disengage intermediate fixing point. Pull out engine room harnesses to engine room side, and temporarily secure them on engine.

CAUTION:

- When pulling out harnesses, take care not to damage harnesses and connectors.
- After temporarily securing, cover connectors with vinyl or similar material to protect against adhesion of foreign materials.

Vehicle Underbody

1. Remove A/T fluid cooler hoses and power steering oil pump oil cooler hoses.
 - Install plug to avoid leakage of A/T fluid and power steering fluid.
2. Disconnect ground cable from exhaust manifold cover (bank 2).
3. Disconnect heated oxygen sensor 2 harness.
4. Remove three way catalyst and exhaust front tube. Refer to **EXPLODED VIEW** and **EXPLODED VIEW** .
5. Remove rear propeller shaft. Refer to **EXPLODED VIEW** .
6. Disconnect lower joint at power steering gear assembly side, and release lower shaft. Refer to **WITHOUT ELECTRIC MOTOR: EXPLODED VIEW** or **WITH ELECTRIC MOTOR: EXPLODED VIEW** .
7. Disengage A/T control rod at control device assembly side. Then, temporarily secure it on the transmission assembly, so that it does not sag. Refer to **EXPLODED VIEW** .
8. Preparation for the separation work of transaxle is as per the following:
 - Remove rear plate cover from oil pan (upper). Then remove bolts fixing drive plate to torque converter. Refer to **EXPLODED VIEW**.
 - Remove transmission joint bolts that pierce at oil pan (upper) lower rear side. Refer to **EXPLODED VIEW**.
9. Remove front stabilizer connecting rod. Refer to **EXPLODED VIEW** .
10. Remove front wheel sensor for ABS from steering knuckle. Refer to **FRONT WHEEL SENSOR: EXPLODED VIEW** .
11. Remove brake caliper assembly with piping connected from steering knuckle. Temporarily secure it on the vehicle side with a rope to avoid load on it. Refer to **BRAKE CALIPER ASSEMBLY (4 PISTON TYPE): EXPLODED VIEW** .
12. Separate upper link from steering knuckle. Refer to **EXPLODED VIEW** .
13. Separate shock absorber from transverse link. Refer to **EXPLODED VIEW** .

Removal Work

1. Use a manual lift table caddy (commercial service tool) or an equivalently rigid tool such as a transmission jack. Securely support bottom of suspension member and the transmission assembly.

CAUTION: Use a piece of wood or a similar item as the supporting surface to secure a completely stable condition.

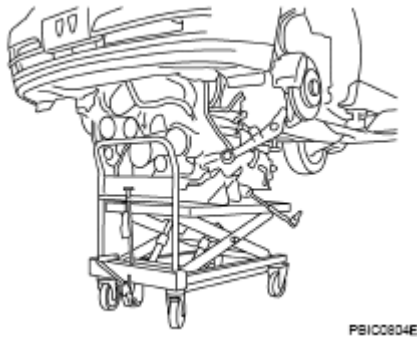


Fig. 71: Manual Lift Table Caddy (Commercial Service Tool)
Courtesy of NISSAN MOTOR CO., U.S.A.

2. Loosen rear engine mounting member mounting bolts.
3. Loosen front suspension member mounting bolts. Refer to **EXPLODED VIEW**.
4. Carefully lower jack, or raise lift, to remove the engine, the transmission assembly and front suspension member. When performing work, observe the following caution items:

CAUTION:

- Confirm there is no interference with the vehicle.
- Check that all connection points have been disconnected.
- Keep in mind that the center of gravity of the vehicle changes. If necessary, use jack(s) to support the vehicle at rear jacking point(s) to prevent it from falling off the lift.

Separation Work

1. Install engine slingers into front of cylinder head (bank 1) and rear of cylinder head (bank 2).

- 1 : Engine front slinger (bank 1)
2 : Engine rear slinger (bank 2)
↔ : Engine front

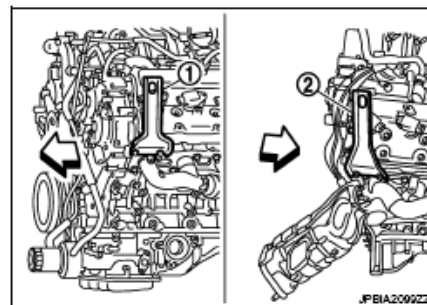


Fig. 72: Identifying Cylinder Head (Bank 1) And Cylinder Head (Bank 2)


Courtesy of NISSAN MOTOR CO., U.S.A.

Slinger bolts:

Torque Specifications: 45.0 N.m (4.6 kg-m, 33 ft-lb)

2. Hang the lifting hook of a two-point engine lifter (commercial service tool) (A) from the front and rear engine slingers to hoist engine and flywheel housing assembly.
 - For the flywheel housing side, use a webbing slinger (B) or an equivalent to hoist the assembly horizontally.

CAUTION: Always hoist the engine by using a two-point engine lifter (i.e. hoisting the front and rear slingers from one point in the air), or the rocker cover and parts around the engine may be damaged due to the fall of the engine slinger.

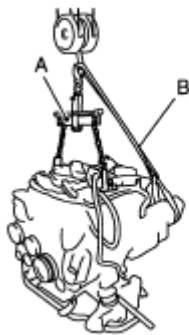

JPEIA25092Z

Fig. 73: Lifting Flywheel Housing Assembly

Courtesy of NISSAN MOTOR CO., U.S.A.

3. Remove power steering oil pump from engine side. Refer to **VK50VE: EXPLODED VIEW** .
4. Remove engine mounting insulators (RH and LH) under side nuts with power tool.
5. Lift with hoist and separate the engine, transmission, transfer and front final drive assembly from front suspension member.

CAUTION:

- Before and during this lifting, always check that any harnesses are left connected.
- Never damage engine mounting insulator and avoid oil/grease smearing or spills onto engine mounting insulator.

6. Remove alternator. Refer to **VK50VE: EXPLODED VIEW** .
7. Separate the engine from the transmission assembly. Refer to **EXPLODED VIEW** .
8. Remove front propeller shaft. Refer to **VK50VE: EXPLODED VIEW** .
9. Remove the front final drive assembly from oil pan (upper). Refer to **VK50VE: EXPLODED VIEW** .
10. Remove each engine mounting insulator and each engine mounting bracket from the engine with power

tool.

INSTALLATION

Note the following item, and install in the reverse order of removal.

- Do not allow engine mounting insulator to be damage and careful no engine oil gets on it.
- For a location with a positioning pin, insert it securely into hole of matching part.
- For a part with a specified installation orientation, refer to component graphic in **EXPLODED VIEW**.
- When installing engine mounting bracket (RH and LH) on cylinder block, tighten two upper bolts (A) first. Then tighten two lower bolts (B).

⇐: Engine front

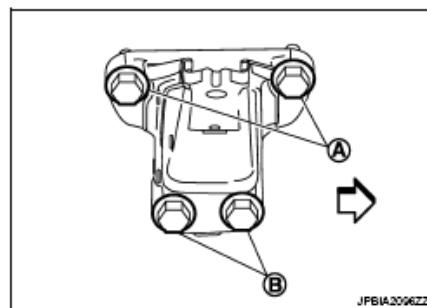


Fig. 74: Identifying Engine Mounting Bracket Bolts
Courtesy of NISSAN MOTOR CO., U.S.A.

NOTE: This graphic shows an example of bank 2.

- When installing engine mounting bracket (rear) on transfer, tighten two upper bolts (B) first. Then tighten two lower bolts (C).

A : Rear view

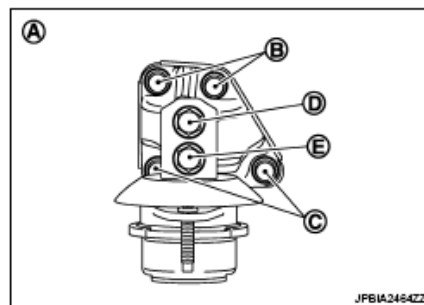


Fig. 75: Identifying Engine Mounting Bracket Bolts
Courtesy of NISSAN MOTOR CO., U.S.A.

- When installing engine mounting insulator (rear) on engine mounting bracket (rear), tighten upper bolts (D) first. Then tighten lower bolts (E).
- Tighten rear engine mounting member bolts in numerical order as shown below.

↔: Vehicle front

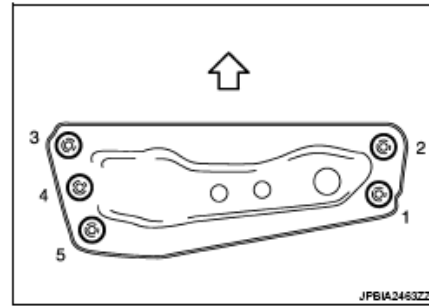


Fig. 76: Identifying Rear Engine Mounting Member Bolts Tightening Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

- Check that all engine mounting insulators are seated properly, then tighten mounting nuts and bolts.

Inspection

INSPECTION AFTER INSTALLATION

Inspection for Leakage

The following are procedures for checking fluid leakage, lubricant leakage.

- Before starting engine, check oil/fluid levels including engine coolant and engine oil. If any are less than the required quantity, fill them to the specified level. Refer to **FLUIDS AND LUBRICANTS**.
- Follow the procedure below to check for fuel leakage.
 - Turn ignition switch to the "ON" position (with engine stopped). With fuel pressure applied to fuel piping, check for fuel leakage at connection points.
 - Start engine. With engine speed increased, check again for fuel leakage at connection points.
- Run engine to check for unusual noise and vibration.

NOTE: If hydraulic pressure inside chain tensioner drops after removal/installation, slack in guide may generate a pounding noise during and just after the engine start. However, this does not indicate a malfunction. The noise will stop after hydraulic pressure rises.

- Warm up engine thoroughly to check that there is no leakage of fuel, or any oil/fluids including engine oil and engine coolant.
- Bleed air from lines and hoses of applicable lines, such as in cooling system.
- After cooling down engine, again check oil/fluid levels including engine oil and engine coolant. Refill them to the specified level, if necessary.

Summary of the inspection items:

ENGINE OPERATION TABLE

| Items | Before starting engine | Engine running | After engine stopped |
|-------|------------------------|----------------|----------------------|
|-------|------------------------|----------------|----------------------|

| | | | |
|--------------------------------------|---------|---------|---------|
| Engine coolant | Level | Leakage | Level |
| Engine oil | Level | Leakage | Level |
| Other oils and fluids ⁽¹⁾ | Level | Leakage | Level |
| Fuel | Leakage | Leakage | Leakage |

(1) Transmission/transaxle/CVT fluid, power steering fluid, brake fluid, etc.

DISASSEMBLY AND ASSEMBLY

ENGINE STAND SETTING

Setting

NOTE: Explained here is how to disassemble with engine stand supporting transmission surface. When using a different type of engine stand, note the difference in the steps, etc.

1. Remove the engine assembly from the vehicle. Refer to **EXPLODED VIEW**.
2. Remove crankshaft pulley. Refer to **FRONT OIL SEAL: REMOVAL AND INSTALLATION**.

NOTE: The drive plate is fixed with a ring gear stopper [SST: KV10119200 (J-49277)]. Loosen the crankshaft pulley mounting bolts before installing the engine stand.

3. Remove the parts that may restrict installation of engine to a widely used engine stand.
 - Fix crankshaft with a ring gear stopper [SST: KV10119200 (J-49277)]. Loosen drive plate mounting bolt with power tool.
 - Check for deformation or damage of drive plate. Refer to **INSPECTION**.

NOTE: The procedure is described assuming that you use a widely used engine stand holding the surface, to which transmission is installed.

4. Remove pilot converter using the pilot bushing puller (commercial service tool), if necessary.
5. Lift the engine with hoist to install it onto the widely used engine stand.

CAUTION: Use an engine stand that has a load capacity [240 kg (529 lb) or more] large enough for supporting the engine weight.

- If the load capacity of the stand is not adequate, remove the following parts beforehand to reduce the potential risk of overturning the stand.
 - Remove intake manifold. Refer to **EXPLODED VIEW**.
 - Remove fuel injector and fuel tube assembly. Refer to **EXPLODED VIEW**.
 - Remove ignition coil. Refer to **EXPLODED VIEW**.

- Remove rocker cover. Refer to **EXPLODED VIEW**.
- Remove exhaust manifold. Refer to **EXPLODED VIEW**.
- Other removable brackets.

NOTE: The graphic shows an example of widely used engine stand (A) that can hold mating surface of transmission with drive plate removed.

CAUTION: Before removing the hanging chains, check the engine stand is stable and there is no risk of overturning.

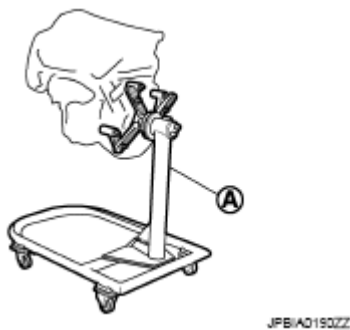


Fig. 77: Identifying Engine Stand
Courtesy of NISSAN MOTOR CO., U.S.A.

6. Drain engine oil. Refer to **DRAINING**.
7. Drain engine coolant by removing water drain plug (3) from both sides of the cylinder block as shown below.

- 1 : Washer
- 2 : Plug
- 4 : Plug
- 5 : Washer
- ⇐ : Engine front

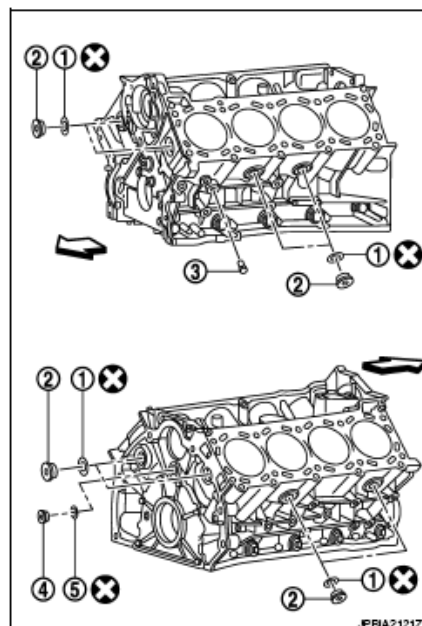


Fig. 78: Identifying Cylinder Block And Parts
Courtesy of NISSAN MOTOR CO., U.S.A.

ENGINE UNIT

Disassembly

1. Remove intake manifold. Refer to **EXPLODED VIEW**.
2. Remove exhaust manifold. Refer to **EXPLODED VIEW**.
3. Remove oil pan (lower). Refer to **EXPLODED VIEW**.
4. Remove ignition coil, spark plug and rocker cover. Refer to **EXPLODED VIEW**.
5. Remove timing chain. Refer to **EXPLODED VIEW**.
6. Remove camshaft (EXH) and VVEL ladder assembly. Refer to **EXPLODED VIEW**.
7. Remove cylinder head. Refer to **EXPLODED VIEW**.

Assembly


Assemble in the reverse order of disassembly.

EXHAUST MANIFOLD AND THREE WAY CATALYST

Exploded View

| Symbol | Description |
|--------|-----------------------------------|
| | N·m (kg-m, ft-lb) |
| | N·m (kg-m, in-lb) |
| | Always replace after disassembly. |

SEC. 140•208•226

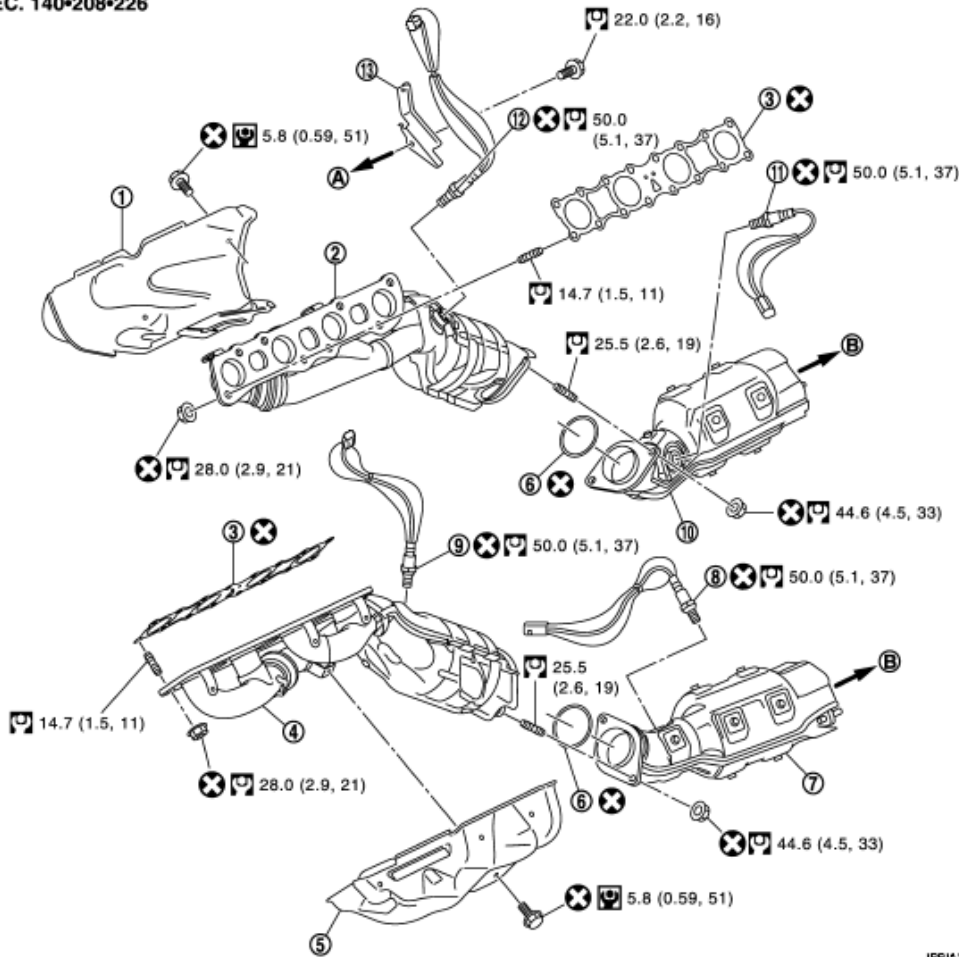

JPBIA20793B

- | | | |
|------------------------------------|-------------------------------------|--------------------------------------|
| 1. Exhaust manifold cover (bank 2) | 2. Exhaust manifold (bank 2) | 3. Gasket |
| 4. Exhaust manifold (bank 1) | 5. Exhaust manifold cover (bank 1) | 6. Gasket |
| 7. Three way catalyst (bank 1) | 8. Heated oxygen sensor 2 (bank 1) | 9. Air fuel ratio sensor 1 (bank 1) |
| 10. Three way catalyst (bank 2) | 11. Heated oxygen sensor 2 (bank 2) | 12. Air fuel ratio sensor 1 (bank 2) |
| 13. Harness bracket | | |
| A. To cylinder head (bank 2) | B. To exhaust front tube | |

Fig. 79: Exploded View Of Exhaust Manifold And Three Way Catalyst With Torque Specification
 Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to **COMPONENTS** for symbols above.

Disassembly and Assembly

DISASSEMBLY

1. Remove heated oxygen sensor 2.

CAUTION: Heated oxygen sensor 2 is not reusable. Never remove heated oxygen sensor 2 unless this is required.

- Using the heated oxygen sensor wrench [SST: KV10114400 (J-38365)] (A), remove heated oxygen sensor 2 (1).

NOTE:

- The heated oxygen sensor 2 is removable under vehicle mounted condition.
- The graphic shows an example of bank 1.

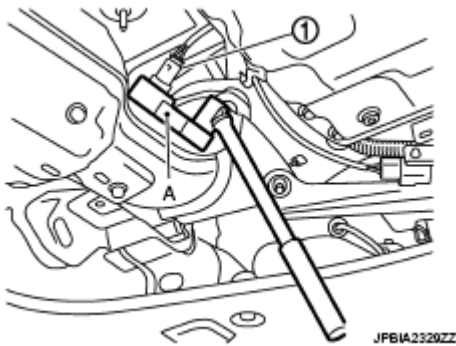


Fig. 80: View Of Removing Heated Oxygen Sensor 2
Courtesy of NISSAN MOTOR CO., U.S.A.

2. Remove three way catalyst (bank 1 and bank 2).
3. Remove air fuel ratio sensor 1 as per the following:

CAUTION: Air fuel ratio sensor 1 is not reusable. Never remove air fuel ratio sensor 1 unless this is required.

- Using the heated oxygen sensor wrench [SST: KV10114400 (J-38365)], remove air fuel ratio sensor 1.

NOTE: The air fuel ration sensor 1 is removable under vehicle-mounted condition.

4. Remove exhaust manifold.
 - Loosen nuts in the reverse order of graphic to remove exhaust manifold with power tool.

A : Bank 1
B : Bank 2
⇐ : Engine front

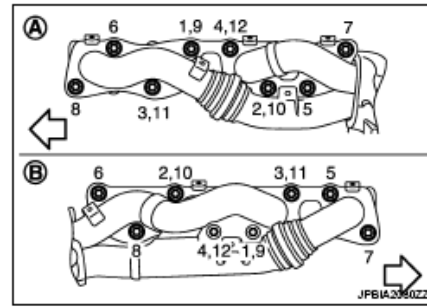


Fig. 81: Identifying Exhaust Manifold Bolt Loosening Sequence

Courtesy of NISSAN MOTOR CO., U.S.A.

NOTE: Disregard No. 9 to No. 12 when loosening.

5. Remove exhaust manifold gaskets.

CAUTION: Cover engine openings to avoid entry of foreign materials.

ASSEMBLY

Note the following item, and install in the reverse order of removal.

Exhaust Manifold Gasket

- Install exhaust manifold gasket in directional shown below.

A : Triangle press
⇐ : Above

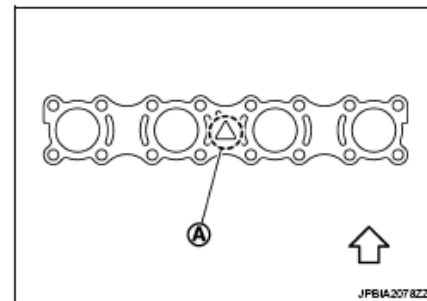


Fig. 82: Identifying Exhaust Manifold Gasket

Courtesy of NISSAN MOTOR CO., U.S.A.

Exhaust Manifold

- Tighten mounting nuts in numerical order as shown below.

A : Bank 1
B : Bank 2
⇐ : Engine front

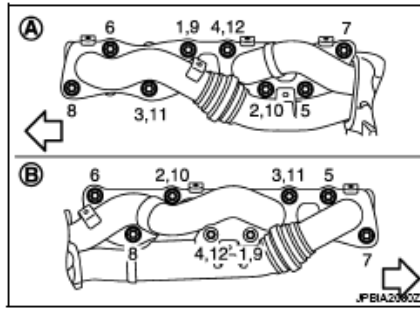


Fig. 83: Identifying Exhaust Manifold Bolts Tightening Sequence

Courtesy of NISSAN MOTOR CO., U.S.A.

NOTE: Tighten mounting nuts No. 1 to 4 in two steps. The numerical order No. 9 to 12 shown second steps.

Air Fuel Ratio Sensor 1, Heated Oxygen Sensor 2

CAUTION:

- Before installing a new sensors, clean exhaust system threads using oxygen sensor thread cleaner (commercial service tool: J-43897-18 or 43897-12), and apply anti-seize lubricant (commercial service tool).
- Sensors are not reusable. Replace them with a new one after removal. When replacing them, handle with care not to impact on them.
- When installing the new sensors, set the heated oxygen sensor wrench [SST: KV10114400(J-38365)] (A) in the hexagonal part to tighten the th

1 : Heated oxygen sensor 2 (bank 1)

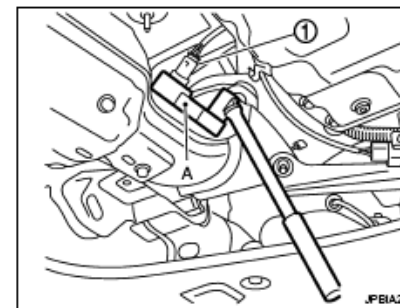


Fig. 84: Setting Heated Oxygen Sensor

Courtesy of NISSAN MOTOR CO., U.S.A.

- Never over torque sensors. Doing so may cause damage to the sensor resulting in "MIL" coming on.

Inspection

INSPECTION AFTER DISASSEMBLY

Surface Distortion

- Check the surface distortion of the exhaust manifold mating surface with a straightedge (A) and a feeler gauge (B).

Limit: Refer to EXHAUST MANIFOLD.

- If it exceeds the limit, replace exhaust manifold.

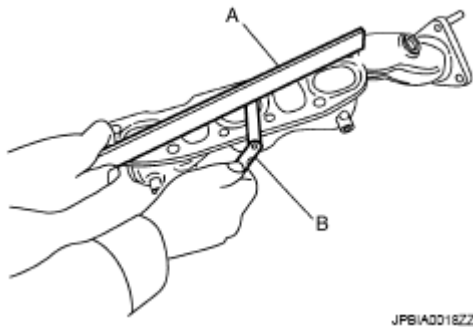



Fig. 85: Checking Surface Distortion Of Exhaust Manifold Mating Surface
Courtesy of NISSAN MOTOR CO., U.S.A.

OIL PAN (UPPER)

Exploded View

| Symbol | Description |
|--------|-----------------------------------|
| | N·m (kg-m, ft-lb) |
| | N·m (kg-m, in-lb) |
| | Always replace after disassembly. |

SEC. 110•150•213

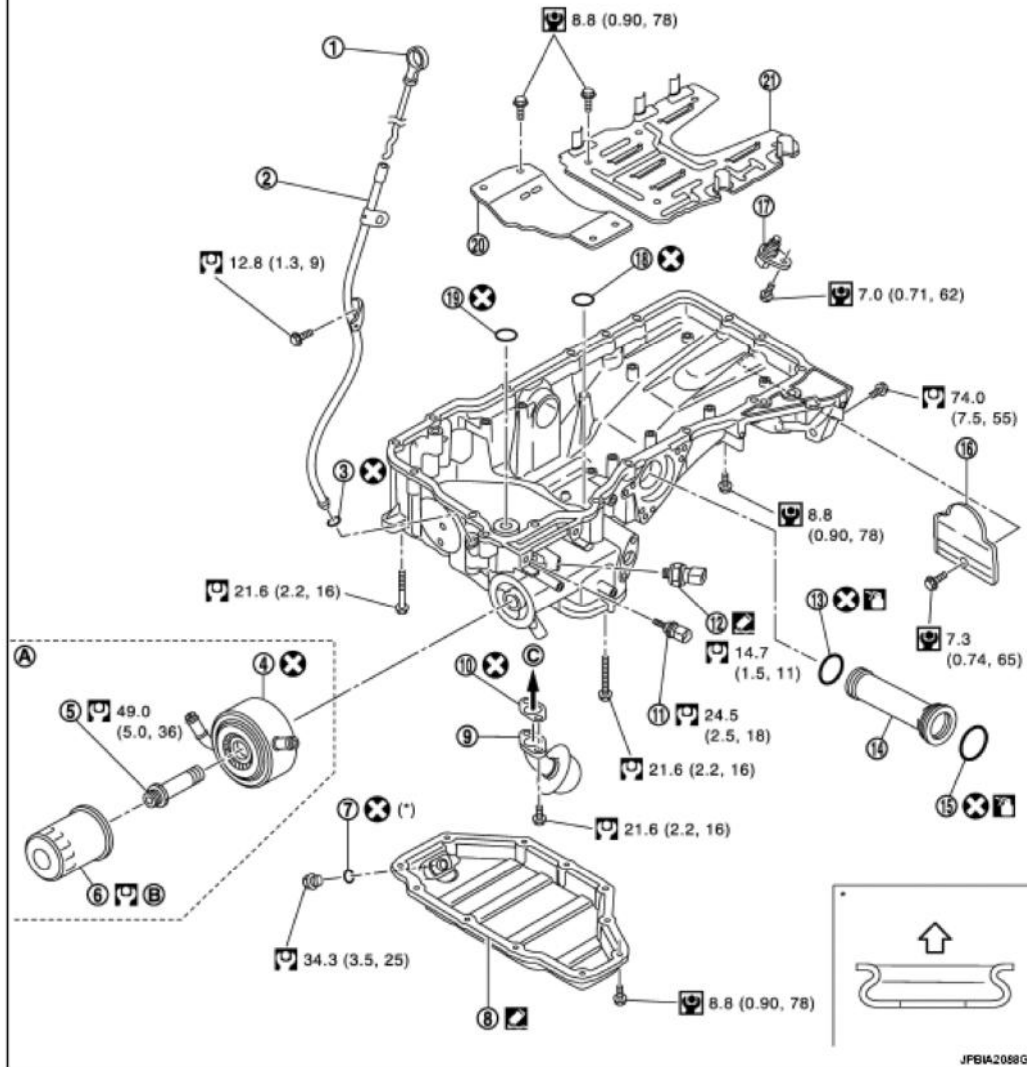

JFBA2088GB

- | | | |
|----------------------|--------------------------------------|-------------------------|
| 1. Oil level gauge | 2. Oil level gauge guide | 3. O-ring |
| 4. Oil cooler | 5. Connector bolt | 6. Oil filter |
| 7. Drain plug washer | 8. Oil pan (lower) | 9. Oil strainer |
| 10. Gasket | 11. Oil temperature sensor | 12. Oil pressure switch |
| 13. O-ring | 14. Axle pipe | 15. O-ring |
| 16. Rear plate cover | 17. Crankshaft position sensor (POS) | 18. O-ring |
| 19. O-ring | 20. Baffle plate | 21. Baffle plate |
- A. Refer to ON-VEHICLE REPAIR B. Refer to OIL FILTER C. Oil pump side

⇐ : Oil pan side

Fig. 86: Exploded View Of Oil Pan With Torque Specification
 Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to **COMPONENTS** for symbols above.

Disassembly and Assembly

DISASSEMBLY

WARNING: To avoid the danger of being scalded, never drain engine oil when engine is hot.

1. Remove oil filter. Refer to **REMOVAL AND INSTALLATION**.
2. Remove oil cooler. Refer to **EXPLODED VIEW**.
3. Remove A/C compressor and A/C compressor bracket. Refer to **EXPLODED VIEW** and **EXPLODED VIEW**.
4. Remove oil level gauge and oil level gauge guide.
5. Remove oil pressure switch and oil temperature sensor if necessary.
6. Remove rear plate cover.
7. Remove oil pan (lower). Refer to **EXPLODED VIEW**.
8. Remove oil strainer. Refer to **EXPLODED VIEW**.
9. Remove oil pan (upper) as per the following:
 - a. Loosen mounting bolts in the reverse order as shown below with power tool to remove.

← : Engine front

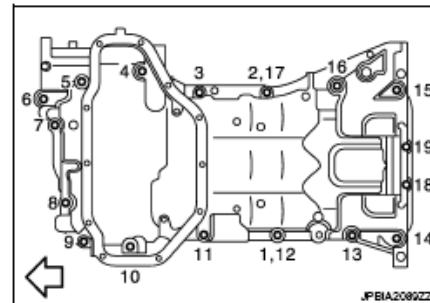


Fig. 87: Identifying Oil Pan Mounting Bolts Loosening Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

NOTE: Disregard No. 12, 17 when loosening.

- b. Insert a suitable tool into the notch at oil pan (upper) (1) as shown below.
 - Pry off case by moving a suitable tool.

↩ : Engine front

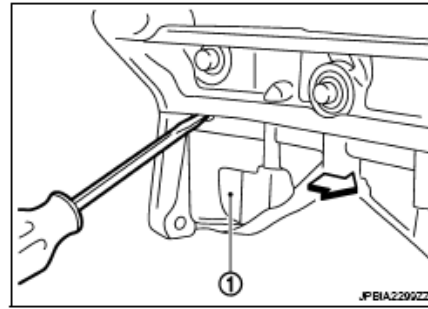


Fig. 88: Inserting Suitable Tool Into Notch Oil Pan
Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION: Be careful not to damage the mating surfaces.

10. Remove O-ring from bottom of cylinder block and oil pump.
11. Remove baffle plate, if necessary.
12. Remove axle pipe from oil pan (upper), if necessary.
 - Pull axle pipe from oil pan (upper) using a suitable drift.

ASSEMBLY

1. Install axle pipe (1) to oil pan (upper), if removed.

- 2 : O-ring
 3 : O-ring (with identification paint)
 A : Front final drive side
 B : Drive shaft (LH) side

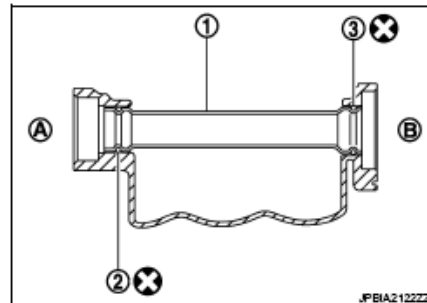


Fig. 89: Identifying Axle Pipe To Oil Pan (Upper)
Courtesy of NISSAN MOTOR CO., U.S.A.

- Lubricate O-ring groove of axle pipe, O-ring, and O-ring joint of oil pan with new engine oil.
- Install axle pipe to oil pan (upper) from drive shaft (LH) side.

CAUTION: Insert it with care to prevent O-ring from sliding.

2. Install oil pan (upper) as per the following:
 - a. Use a scraper (A) to remove old liquid gasket from mating surfaces.

- Also remove the old liquid gasket from mating surface of cylinder block.
- Remove old liquid gasket from the bolt holes and threads.

CAUTION: Never scratch or damage the mating surfaces when cleaning off old liquid gasket.

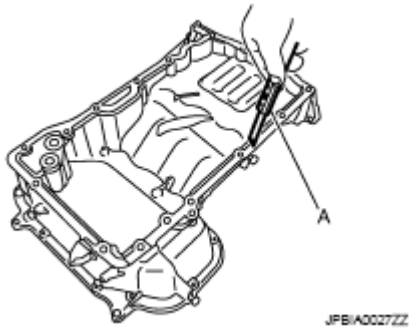


Fig. 90: Using Scraper To Remove Old Liquid Gasket From Mating Surface Of Lower Cylinder Block

Courtesy of NISSAN MOTOR CO., U.S.A.

- Install new O-rings on the bottom of cylinder block and oil pump.
- Apply a continuous bead of liquid gasket with tube presser (commercial service tool) to the cylinder block mating surfaces of oil pan (upper) to a limited portion as shown below.

- a : 5.5 - 7.5 mm (0.217 - 0.295 in)
 b : ϕ 4.0 - 5.0 mm (0.157 - 0.197 in)
 ⇐ : Engine front

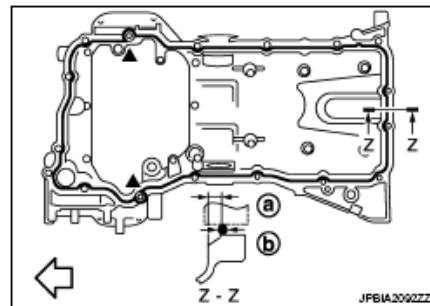


Fig. 91: Identifying Oil Pan Limited Portion

Courtesy of NISSAN MOTOR CO., U.S.A.

Use Genuine RTV Silicone Sealant or an equivalent. Refer to RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS .

CAUTION: Attaching must be done within 5 minutes after coating.

- Tighten mounting bolts in numerical order as shown below.

← : Engine front

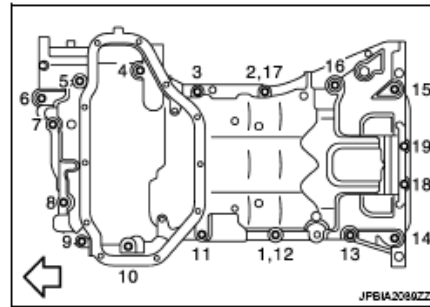


Fig. 92: Identifying Oil Pan Mounting Bolt Tightening Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION: Install avoiding misalignment of O-rings.

NOTE: Tighten mounting bolts No. 1 and 2 in two steps. The numerical order No. 12 and 17 shown second steps.

- There are three types of mounting bolts. Refer to the following for locating bolts.

M6 x 30 mm. (1.18 in): 18, 19

M8 x 100 mm (3.94 in): 3, 4, 5, 7, 10, 11, 14, 15

M8 x 45 mm (1.77 in): Except the above

- Tighten transmission joint bolts.
 - Install rear plate cover.
- Install oil strainer.
 - Install oil pan (lower). Refer to **REMOVAL AND INSTALLATION**.
 - Install in the reverse order of removal.

NOTE: At least 30 minutes after oil pan is installed, pour engine oil.

Inspection

INSPECTION AFTER DISASSEMBLY

Clean oil strainer if any object is attached.

INSPECTION AFTER ASSEMBLY


- Check the engine oil level and adjust engine oil. Refer to **INSPECTION**.
- Start engine, and check there is no leakage of engine oil.

3. Stop engine and wait for 15 minutes.
4. Check the engine oil level again. Refer to **INSPECTION** .

TIMING CHAIN**Exploded View**

| Symbol | Description |
|--------|-----------------------------------|
| | N·m (kg·m, ft·lb) |
| | N·m (kg·m, in·lb) |
| | Always replace after disassembly. |


SEC. 120•130•135•221

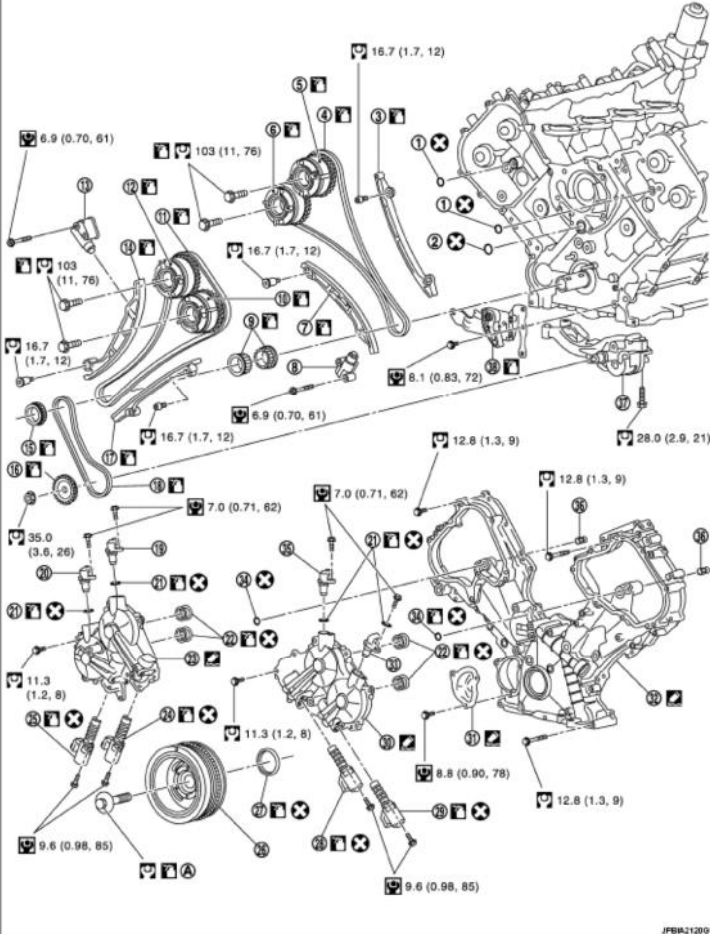

- | | | |
|--|--|--|
| 1. O-ring | 2. O-ring | 3. Tension guide (bank 2) |
| 4. Timing chain (bank 2) | 5. Camshaft sprocket (INT) (bank 2) | 6. Camshaft sprocket (EXH) (bank 2) |
| 7. Slack guide (bank 2) | 8. Timing chain tensioner (bank 2) | 9. Crankshaft sprocket |
| 10. Camshaft sprocket (EXH) (bank 1) | 11. Timing chain (bank 1) | 12. Camshaft sprocket (INT) (bank 1) |
| 13. Timing chain tensioner (bank 1) | 14. Slack guide (bank 1) | 15. Oil pump sprocket (crankshaft side) |
| 16. Oil pump sprocket (oil pump side) | 17. Tension guide (bank 1) | 18. Oil pump drive chain |
| 19. Camshaft position sensor (INT) (bank 2) | 20. Camshaft position sensor (EXH) (bank 2) | 21. O-ring |
| 22. Seal ring | 23. Valve timing control cover (bank 2) | 24. Intake valve timing control solenoid valve (bank 2) |
| 25. Exhaust valve timing control solenoid valve (bank 2) | 26. Crankshaft pulley | 27. Front oil seal |
| 28. Intake valve timing control solenoid valve (bank 1) | 29. Exhaust valve timing control solenoid valve (bank 1) | 30. Valve timing control cover (bank 1) |
| 31. Timing chain tensioner cover | 32. Front cover | 33. Camshaft position sensor (EXH) (bank 1) |
| 34. O-ring | 35. Camshaft position sensor (INT) (bank 1) | 36. Oil filter (for valve timing control solenoid valve) |
| 37. Oil pump | 38. Oil pump drive chain tensioner | |
| A. Refer to TIMING CHAIN | | |

Fig. 93: Exploded View Of Timing Chain With Torque Specification
 Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to **COMPONENTS** for symbol marks above.

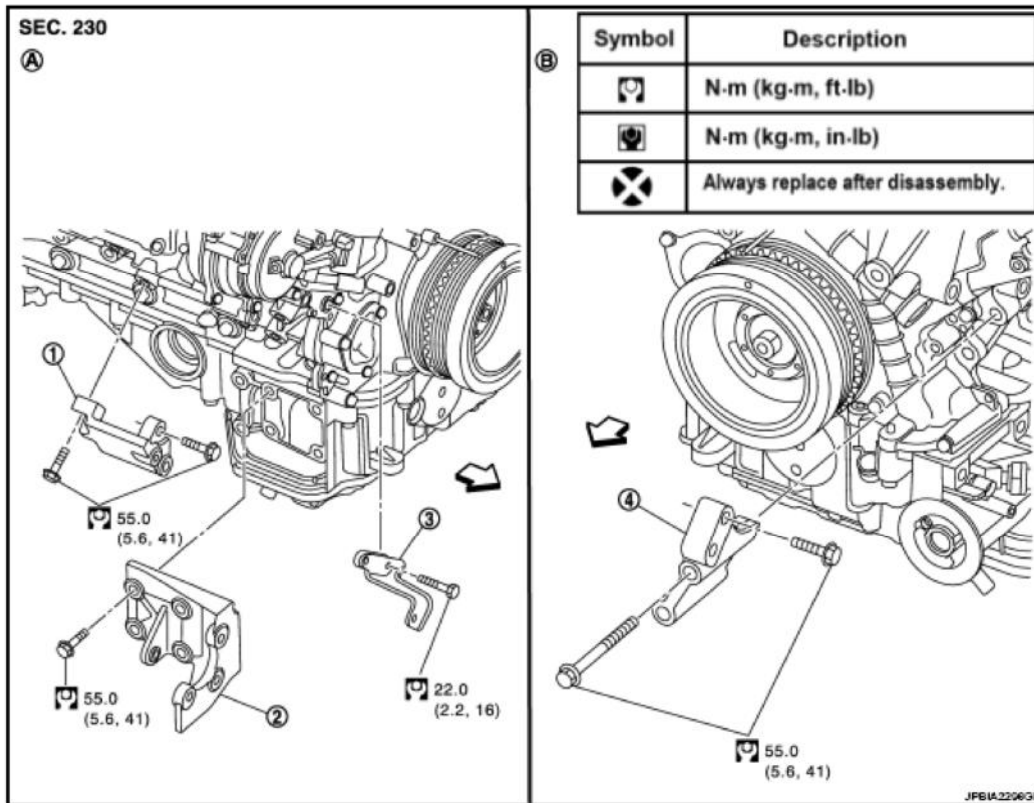

- | | | |
|---------------------------|--------------------------------|-----------------------|
| 1. Alternator bracket | 2. Power steering pump bracket | 3. Alternator support |
| 4. A/C compressor bracket | | |
| A. Right side | B. Front side | |
| ↔ : Engine front | | |

Fig. 94: Identifying Alternator Bracket, Power Steering Pump Bracket And Alternator Support With Torque Specifications
 Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to **COMPONENTS** for symbol marks above.

Disassembly and Assembly

DISASSEMBLY

1. Remove auto tensioners and idler pulley. Refer to **EXPLODED VIEW**.
2. Remove oil level gauge and oil level gauge guide. Refer to **EXPLODED VIEW**.
3. Remove alternator bracket and alternator stay.
4. Remove camshaft position sensors.

A : Keep free from magnetic materials

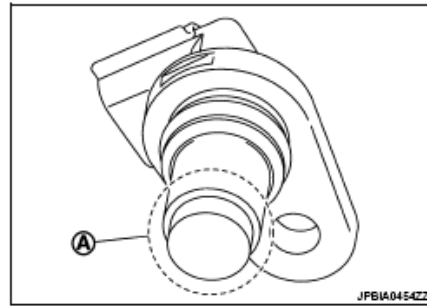


Fig. 95: Identifying Camshaft Position Sensors
Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION:

- Handle carefully to avoid dropping and shocks.
- Never disassemble.
- Never allow metal powder to adhere to magnetic part at sensor tip.
- Never place sensors in a location where they are exposed to magnetism.

5. Remove valve timing control cover as per the following:
 - a. Disconnect valve timing control solenoid valve harness connector.
 - b. Loosen mounting bolts in the reverse order as shown below.

A : Bank 2
B : Bank 1
C : Dowel pin hole

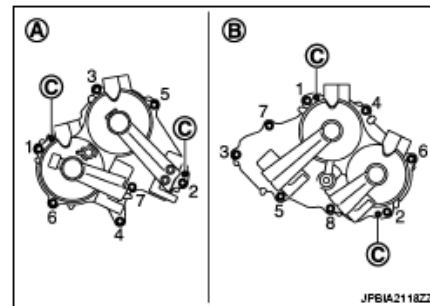


Fig. 96: Identifying Timing Control Cover Mounting Bolts Loosening Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION:


- Exercise care not to damage mating surfaces.
- Shaft is internally jointed with camshaft sprocket center hole. When removing, keep it horizontal until it is completely disconnected.

6. Remove valve timing control solenoid valve (INT and EXH), if necessary.

CAUTION: Valve timing control solenoid valve is not reusable. Never remove it

unless required.

7. Remove O-rings (1) from front cover.

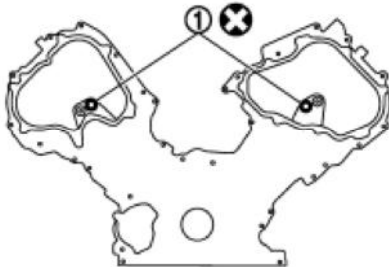

JFBI42117ZZ

| Symbol | Description |
|--------|-----------------------------------|
| | N·m (kg·m, ft·lb) |
| | N·m (kg·m, in·lb) |
| | Always replace after disassembly. |

Fig. 97: Identifying O-Rings On Front Cover
 Courtesy of NISSAN MOTOR CO., U.S.A.

8. Remove rocker cover. Refer to **EXPLODED VIEW**.
9. Obtain No. 1 cylinder at TDC of its compression stroke. Refer to **INSPECTION**.
10. Remove crankshaft pulley. Refer to **FRONT OIL SEAL: REMOVAL AND INSTALLATION**.
11. Remove water pump pulley. Refer to **EXPLODED VIEW**.
12. Remove oil pan (lower) and oil strainer. Refer to **EXPLODED VIEW**.
13. Remove oil pan (upper). Refer to **EXPLODED VIEW**.
14. Remove front cover as per the following:
 - a. Loosen mounting bolts in reverse order as shown below.
 - b. Insert a suitable tool into the notch at front cover.
 - Pry off case by moving a suitable tool.

CAUTION:

- Exercise care not to damage mating surfaces.
- After removal, handle front cover carefully so it does not tilt, cant, or warp under a load.


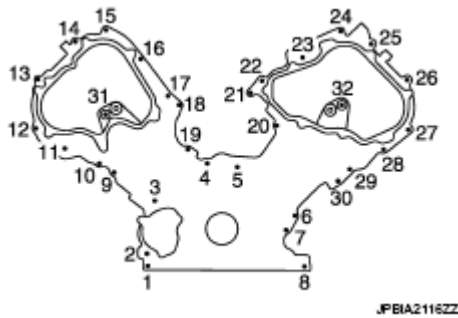


Fig. 98: Identifying Timing Cover Mounting Bolts Loosening Sequence
 Courtesy of NISSAN MOTOR CO., U.S.A.

15. Remove front oil seal from front cover using suitable tool.
 - Use screwdriver for removal.

CAUTION: Be careful not to damage front cover.

16. Remove O-rings (1), (2) from cylinder heads and cylinder block.

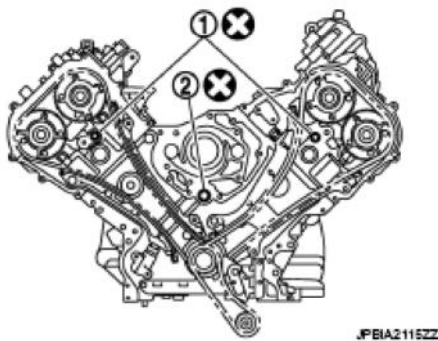

| Symbol | Description |
|--------|-----------------------------------|
| | N·m (kg·m, ft·lb) |
| | N·m (kg·m, in·lb) |
| | Always replace after disassembly. |

Fig. 99: Identifying Cylinder Head O-Ring
 Courtesy of NISSAN MOTOR CO., U.S.A.

17. Remove oil filter (for valve timing control solenoid valve), if necessary.
18. Remove timing chain tensioner cover from front cover, if necessary.
 - Use seal cutter [SST: KV10111100 (J-37228)] to cut liquid gasket for removal.
19. Remove oil pump drive chain as per the following:

- a. Push oil pump drive chain tensioner (1).
- b. Insert a stopper pin (A) into the body hole.

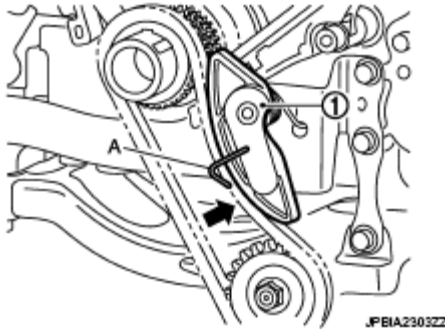


Fig. 100: Inserting Stopper Pin Into Body Hole
Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Hold the two flat parts of oil pump shaft, and then loosen the oil pump sprocket (oil pump side) nut.

1 : Oil pump sprocket (oil pump side)

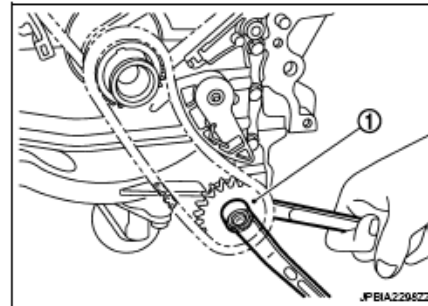


Fig. 101: Loosening Oil Pump Sprocket
Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION: Secure the oil pump unit shaft with the two flat parts.

20. Remove oil pump drive chain tensioner.
21. Remove timing chain tensioner (bank 1) as per the following:

NOTE: To remove timing chain and related parts, start with those on bank 1. The procedure for removing parts on bank 2 is omitted because it is the same as that for bank 1.

- a. Push both sides of spring (A) against spring tension, and then press in plunger with a slack guide (2).

1 : Timing chain tensioner (bank 1)

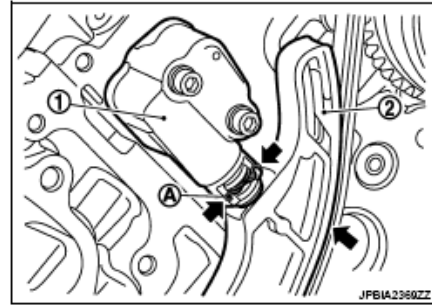


Fig. 102: Identifying Spring And Slack Guide
Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Insert a stopper pin (A) into the body hole, and then fix it with the plunger pushed in.

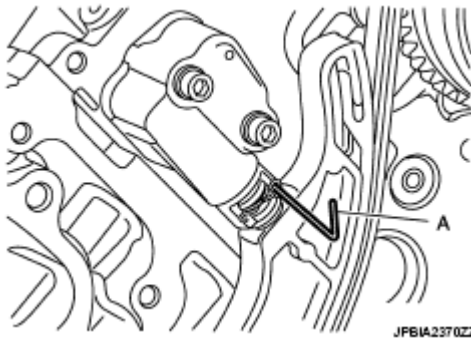


Fig. 103: Identifying Stopper Pin Into Body Hole
Courtesy of NISSAN MOTOR CO., U.S.A.

22. Remove tension guide and slack guide.
23. Remove timing chain and crankshaft sprocket.

CAUTION: After removing timing chain, never turn crankshaft and camshaft separately, or valves will strike the piston head.

24. Remove camshaft sprocket (INT) and (EXH) as per the following:

Exhaust side:

- Secure the hexagonal portion of camshaft (EXH) using a wrench to loosen mounting bolt. Refer to **EXPLODED VIEW**.

Intake side:

- Secure the hexagonal portion (located in between journal No. 1 and journal No. 2) of drive shaft (A) using a wrench (B) to loosen mounting bolt. Refer to **EXPLODED VIEW**.

↔ : Engine front

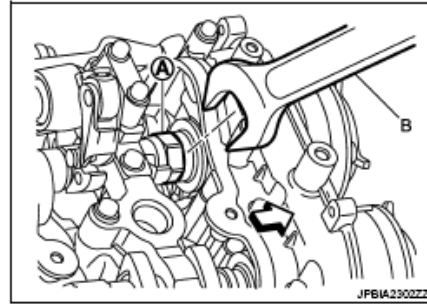


Fig. 104: Loosening Drive Shaft Mounting Bolt
Courtesy of NISSAN MOTOR CO., U.S.A.

NOTE: The graphic shows an example of bank 2.

CAUTION:

- Never loosen the mounting bolt by securing anything other than the camshaft (drive shaft) hexagonal portion or with tensioning the timing chain.
- When holding the hexagonal part of camshaft (drive shaft) with a wrench, be careful not to allow the wrench to cause interference with other parts.
- Never disassemble camshaft sprocket. [Never loosen bolts (C), (D) as shown below.]

A : Intake
B : Exhaust

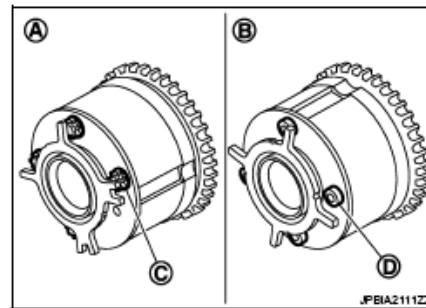


Fig. 105: Identifying Camshaft Bolts
Courtesy of NISSAN MOTOR CO., U.S.A.

25. Use scraper to remove all traces of old liquid gasket from front cover and opposite mating surfaces.
 - Remove old liquid gasket from bolt hole and thread.

- A : Remove old liquid gasket that is stuck
B : Bolt hole


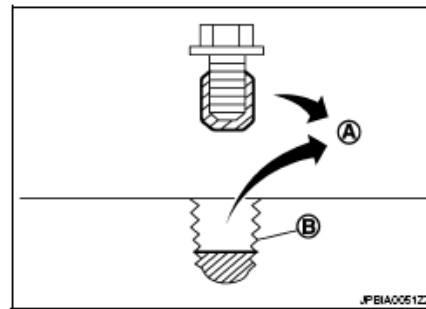


Fig. 106: Identifying Bolt Hole And Thread
Courtesy of NISSAN MOTOR CO., U.S.A.

ASSEMBLY

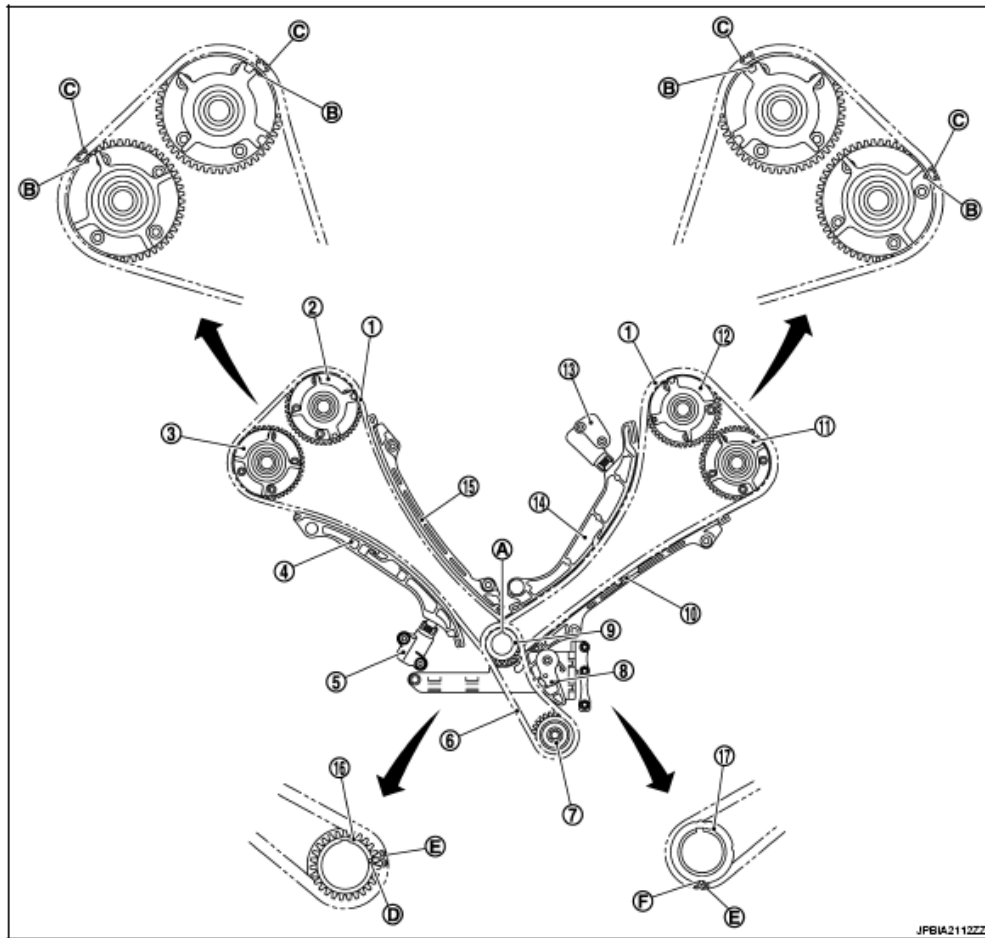

- | | | |
|---------------------------------------|---------------------------------------|--|
| 1. Timing chain | 2. Camshaft sprocket (INT) (bank 2) | 3. Camshaft sprocket (EXH) (bank 2) |
| 4. Slack guide (bank 2) | 5. Timing chain tensioner (bank 2) | 6. Oil pump drive chain |
| 7. Oil pump sprocket (oil pump side) | 8. Oil pump drive chain tensioner | 9. Oil pump sprocket (crankshaft side) |
| 10. Tension guide (bank 1) | 11. Camshaft sprocket (EXH) (bank 1) | 12. Camshaft sprocket (INT) (bank 1) |
| 13. Timing chain tensioner (bank 1) | 14. Slack guide (bank 1) | 15. Tension guide (bank 2) |
| 16. Crankshaft sprocket (bank 2 side) | 17. Crankshaft sprocket (bank 1 side) | |
| A. Crankshaft key | B. Matching mark (outer groove) | C. Matching mark (copper link) |
| D. Matching mark (punched) | E. Matching mark (yellow link) | F. Matching mark (notched) |

Fig. 107: Timing Chain Operation

Courtesy of NISSAN MOTOR CO., U.S.A.

NOTE:

- The above graphic shows the relationship between the matching mark on each timing chain and that on the corresponding sprocket, with the components installed.
- Parts with an identification mark (R or L) should be installed on the corresponding bank according to the mark.
 - Camshaft sprocket (INT), camshaft sprocket (EXH)
 - Tension guide
 - Slack guide

- To install timing chain and related parts, start with those on bank 2. The procedure for installing parts on bank 1 is omitted because it is the same as that for installation on bank 2.
- There is no matching mark in the oil pump related parts.

1. Check that crankshaft key (1) and dowel pin (A) of each camshaft are located as shown below.

Camshaft dowel pin: At cylinder head upper face side in each bank

Crankshaft key: Straight up

NOTE: Though camshaft does not stop at the position as shown below, for the placement of cam nose, it is generally accepted camshaft is placed for the same direction of the graphic.

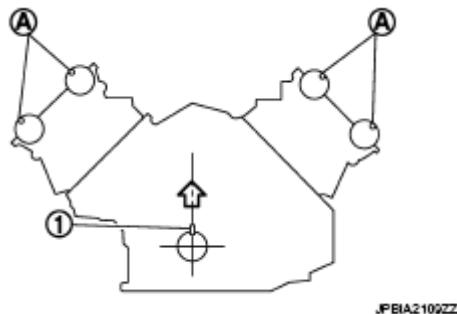


Fig. 108: Identifying Crankshaft Key And Dowel Pin
Courtesy of NISSAN MOTOR CO., U.S.A.

2. Install camshaft sprockets (INT and EXH).
- Install onto correct side by checking with identification mark (A) on surface.

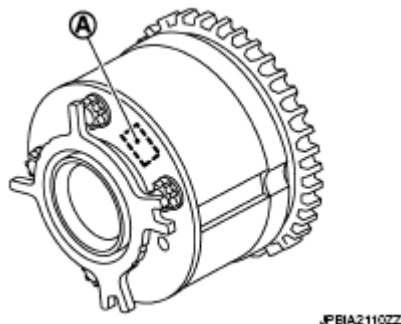


Fig. 109: Identifying Camshaft Sprockets Identification Mark
Courtesy of NISSAN MOTOR CO., U.S.A.

Exhaust side:

- Secure the hexagonal portion of camshaft (EXH) using a wrench to tighten mounting bolt. Refer to **EXPLODED VIEW**.

Intake side:

- Secure the hexagonal portion (located in between journal No. 1 and journal No. 2) of drive shaft (A) using a wrench (B) to tighten mounting bolt. Refer to **EXPLODED VIEW**.

⇐ : Engine front

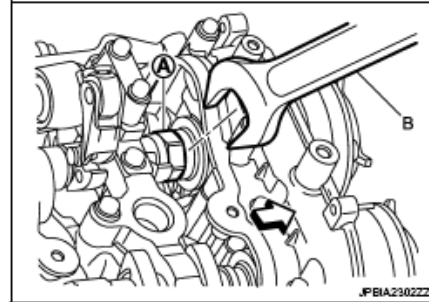


Fig. 110: Tightening Drive Shaft Mounting Bolts
Courtesy of NISSAN MOTOR CO., U.S.A.

NOTE: The graphic shows an example of bank 2.

3. Install timing chains as per the following:
 - a. Install crankshaft sprockets for both banks.
 - Install each crankshaft sprocket so that its flange side (the larger diameter side without teeth) (A) faces in the direction shown below.

- 1 : Crankshaft sprocket (bank 1 side)
2 : Crankshaft sprocket (bank 2 side)

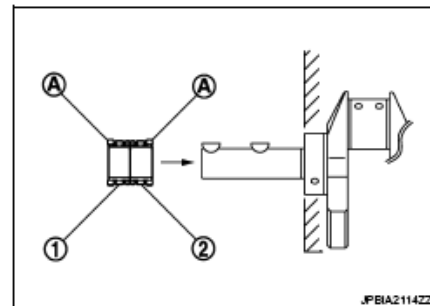


Fig. 111: Identifying Crankshaft Sprocket
Courtesy of NISSAN MOTOR CO., U.S.A.

NOTE: The same parts are used but facing directions are different.

- b. Install timing chains.

Bank 2 (F):

- Install timing chain so that the matching mark (outer groove) (B) on camshaft sprocket is aligned with the copper link (A) on timing chain, while the matching mark (punched) (C) on crankshaft sprocket is aligned with the yellow link (D) one on timing chain, as shown below.

Bank 1 (G):

- Install timing chain so that the matching mark (outer groove) (B) on camshaft sprocket is aligned with the copper link (A) on timing chain, while the matching mark (notched) (E) on crankshaft sprocket is aligned with the yellow link (D) one on timing chain, as shown below.

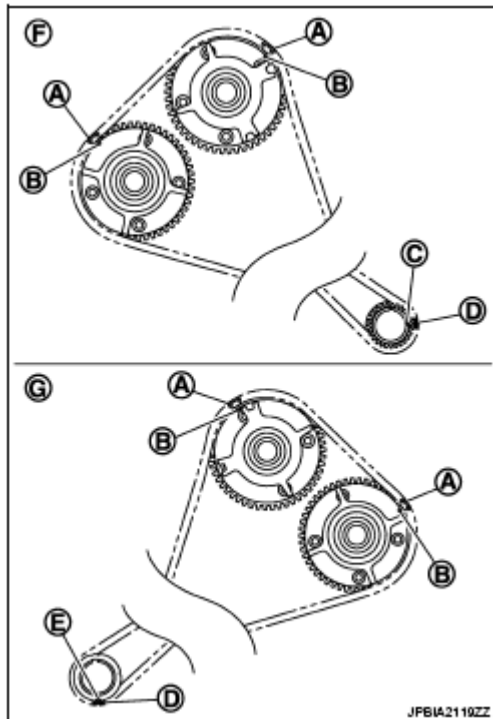


Fig. 112: Identifying Timing Chain
Courtesy of NISSAN MOTOR CO., U.S.A.

4. Install slack guides and tension guides onto correct side by checking with identification mark (A) on surface.

- 1 : Slack guide (bank 2)
- 2 : Tension guide (bank 2)
- 3 : Slack guide (bank 1)
- 4 : Tension guide (bank 1)

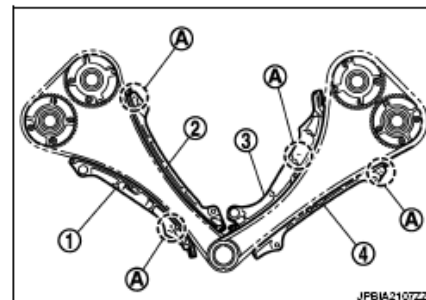


Fig. 113: Identifying Slack Guides And Tension Guides

Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION: Never overtighten slack guide mounting bolt (2). It is normal for a gap (A) to exist under the bolt seats when mounting bolt are tightened to the specification.

- 1 : Slack guide
3 : Cylinder block

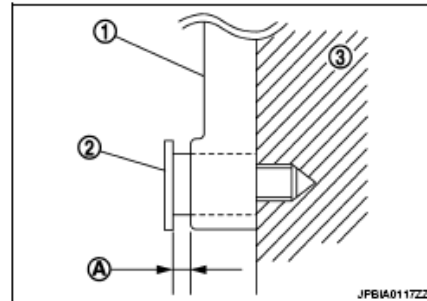


Fig. 114: Identifying Slack Guide Mounting Bolt
Courtesy of NISSAN MOTOR CO., U.S.A.

5. Install timing chain tensioner as per the following:
 - a. Fix the plunger at the most compressed position using a stopper pin (A).
 - Remove any dirt and foreign materials completely from the back and the mounting surfaces of timing chain tensioner.
 - b. Pull out stopper pin after installing, and then release plunger.

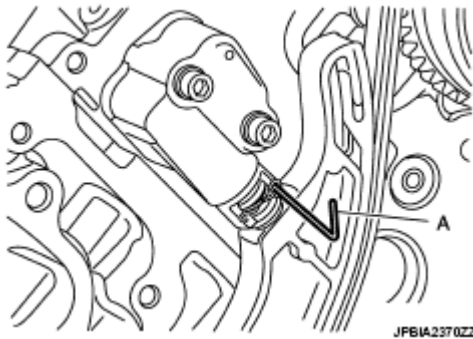


Fig. 115: Identifying Stopper Pin
Courtesy of NISSAN MOTOR CO., U.S.A.

6. Check again that the matching marks on sprockets and timing chain have not slipped out of alignment.
7. Install oil pump drive chain as per the following:
 - a. Install oil pump drive chain tensioner.
 - Fix the tensioner at the most compressed position using a stopper pin. and then install it.
 - b. Install the oil pump sprocket (crankshaft side), oil pump sprocket (oil pump side) and oil pump drive chain at the same time.
 - Install each oil pump sprocket so that its flange side (the larger diameter side without teeth)

(A) faces in the direction shown below.

- 1 : Oil pump sprocket (crankshaft side)
- 2 : Oil pump sprocket (oil pump side)
- 3 : Oil pump
- 4 : Crankshaft

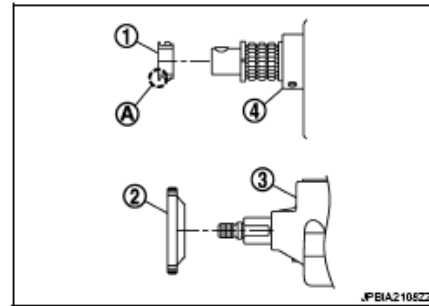


Fig. 116: Identifying Oil Pump Sprocket, Oil Pump And Crankshaft
Courtesy of NISSAN MOTOR CO., U.S.A.

NOTE: There is no matching mark in the oil pump related parts.

- c. Hold the two flat parts of oil pump shaft, and then tighten the oil pump sprocket (oil pump side) nut.

- 1 : Oil pump sprocket (oil pump side)

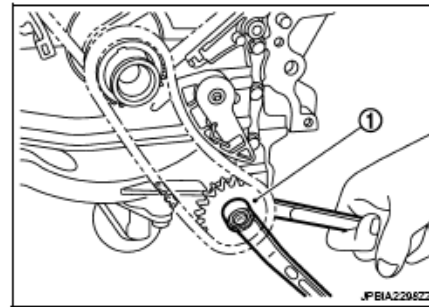


Fig. 117: Tightening Oil Pump Sprocket
Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION: Secure the oil pump shaft with the two flat parts.

- d. Securely pull out the stopper pin (A) after installing the oil pump drive chain.
 - Check that the tension is applied to the oil pump drive chain (1) after installing.

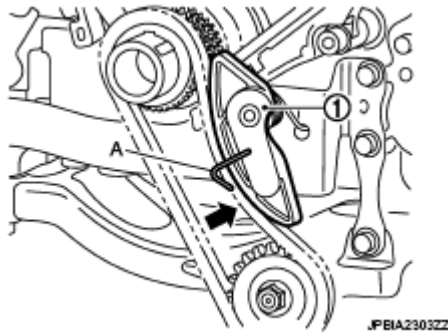


Fig. 118: Identifying Stopper Pin And Oil Pump Drive Chain
Courtesy of NISSAN MOTOR CO., U.S.A.

8. Install front oil seal on front cover. Refer to **FRONT OIL SEAL: REMOVAL AND INSTALLATION**.
9. Install timing chain tensioner cover (2) to front cover (1).

a : $\phi 3.4 - 4.4$ mm (0.134 - 0.173 in)

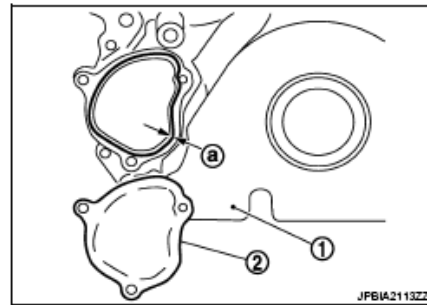
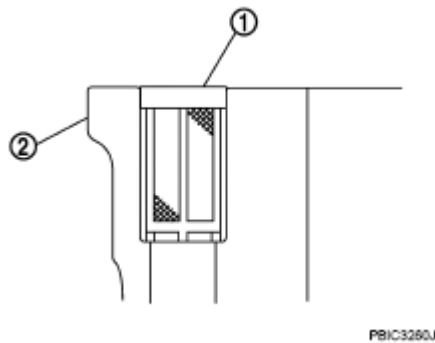


Fig. 119: Identifying Timing Chain Tensioner Cover To Front Cover
Courtesy of NISSAN MOTOR CO., U.S.A.

- Apply a continuous bead of liquid gasket with tube presser (commercial service tool) to front cover as shown.


Use Genuine RTV Silicone Sealant or an equivalent. Refer to RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS .

10. Install oil filter (for valve timing control solenoid valve) (1) in the direction shown below, if removed.
 - Check that the oil filter does not protrude from the upper surface of front cover (2) after installation.

**Fig. 120: Identifying Oil Filter**

Courtesy of NISSAN MOTOR CO., U.S.A.

11. Install front cover as per the following:
 - a. Install new O-ring (1), (2) onto cylinder heads and cylinder block.

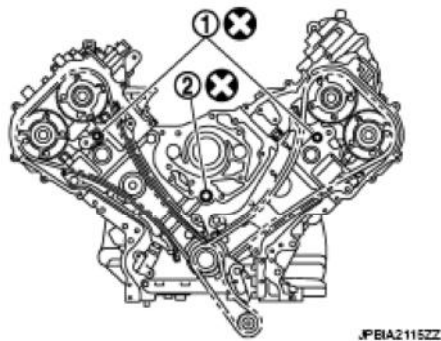

| Symbol | Description |
|--------|-----------------------------------|
| | N·m (kg·m, ft·lb) |
| | N·m (kg·m, in·lb) |
| | Always replace after disassembly. |

Fig. 121: Identifying O-Ring, Cylinder Heads And Cylinder Block

Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Apply a continuous bead of liquid gasket with tube presser (commercial service tool) to front cover as shown below.

Use Genuine RTV Silicone Sealant or equivalent. Refer to RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS .

- A : Junction between cylinder block and cylinder head
 B : Protrusion
 c : 4.3 - 5.3 mm (0.169 - 0.209 in)
 d : ϕ 3.4 - 4.4 mm (0.134 - 0.173 in)
 e : ϕ 4.0 - 5.6 mm (0.157 - 0.220 in)
 f : ϕ 4.8 - 5.8 mm (0.189 - 0.228 in)

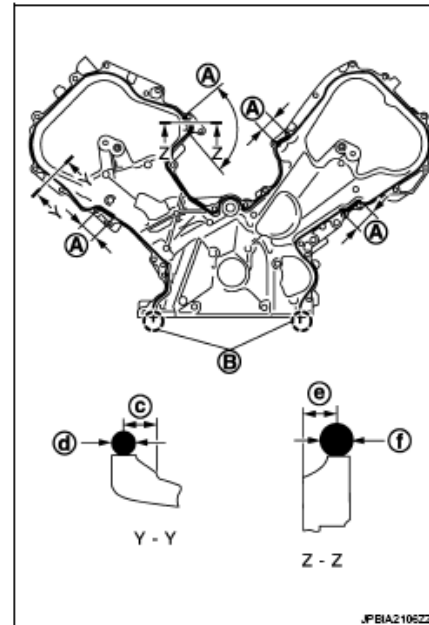


Fig. 122: Identifying Timing Chain Liquid Gasket Area
 Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Check again that the matching marks on timing chain and that on each sprocket are aligned. Then, install front cover.

CAUTION: Be careful not to damage front oil seal by interference with front end of crankshaft.

- d. Tighten mounting bolts in numerical order as shown below.

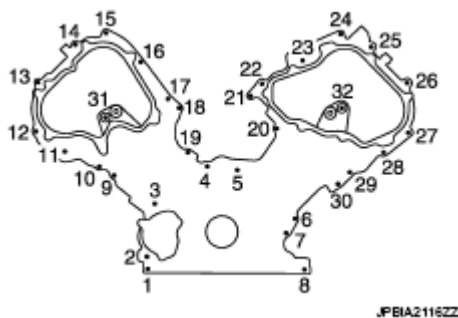


Fig. 123: Identifying Timing Chain Mounting Bolt Loosening Sequence
 Courtesy of NISSAN MOTOR CO., U.S.A.

- There are three types of mounting bolts.

- A. 20 mm (0.79 in)
 B. 45 mm (1.77 in)
 C. 80 mm (3.15 in)


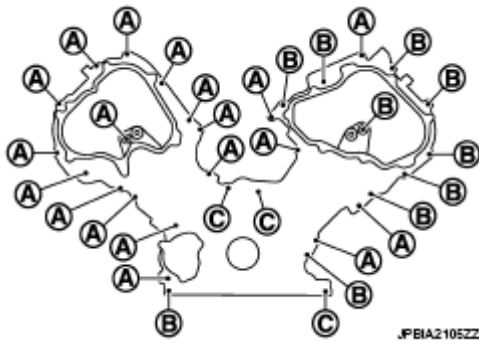


Fig. 124: Identifying Timing Chain Mounting Bolt Area
Courtesy of NISSAN MOTOR CO., U.S.A.

- e. After all mounting bolts are tightened, retighten them in numerical order as shown above.

CAUTION: Be sure to wipe out any excessive liquid gasket leaking onto surface mating with oil pan.

12. Install valve timing control cover as per the following:
- Install new O-rings (1) on front cover.

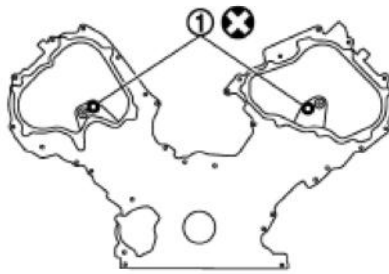


| Symbol | Description |
|--------|-----------------------------------|
| | N·m (kg·m, ft·lb) |
| | N·m (kg·m, in·lb) |
| | Always replace after disassembly. |

Fig. 125: Identifying O-Rings On Front Cover
Courtesy of NISSAN MOTOR CO., U.S.A.

- Install new seal rings (1) in shaft grooves.

CAUTION: When replacing seal ring, replace all rings with new ones.

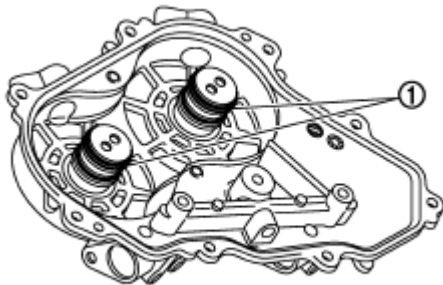

JFBIA2103ZZ

Fig. 126: Identifying Seal Rings In Shaft Grooves

Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Apply a continuous bead of liquid gasket with tube presser (commercial service tool) to valve timing control covers as shown below.

A : Bank 1
B : Bank 2
c : $\phi 3.4 - 4.4$ mm (0.134 - 0.173 in)

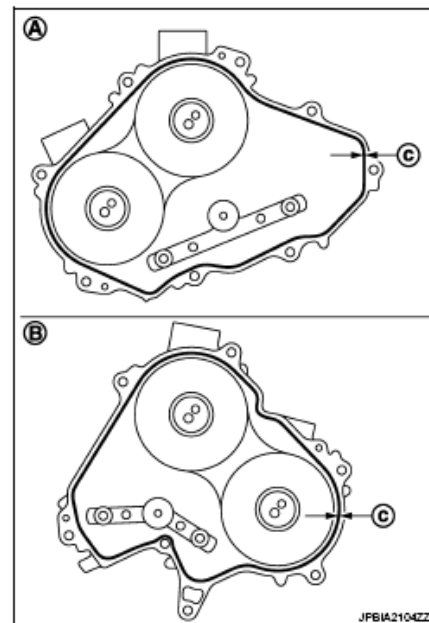


Fig. 127: Identifying Valve Timing Control Covers

Courtesy of NISSAN MOTOR CO., U.S.A.

Use Genuine RTV Silicone Sealant or equivalent. Refer to "RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS".

- d. Being careful not to move seal ring from the installation groove, align dowel pins on front cover with dowel pin holes (C) to install valve timing control covers.

A : Bank 2
B : Bank 1

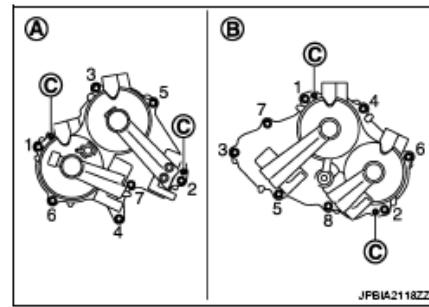


Fig. 128: Identifying Dowel Pins On Front Cover With Dowel Pin Holes
Courtesy of NISSAN MOTOR CO., U.S.A.

- e. Tighten mounting bolts in numerical order as shown below.
13. Install camshaft position sensor and valve timing control solenoid valve (RH and LH) to valve timing control cover, if removed.
 - Be sure to tighten mounting bolts with flanges completely seated.
14. Install oil pan (lower) and oil strainer. Refer to **EXPLODED VIEW**.
15. Install oil pan (upper). Refer to **EXPLODED VIEW**.
16. Install water pump pulley. Refer to **EXPLODED VIEW**.
17. Install crankshaft pulley.
 - Fix the crankshaft as instructed in the removal procedure. Refer to **FRONT OIL SEAL: REMOVAL AND INSTALLATION**.
 - a. Install crankshaft pulley, taking care not to damage front oil seal.
 - b. Apply engine oil onto threaded parts of crankshaft pulley bolt and seating area.
 - Lightly tapping its center with plastic hammer, insert crankshaft pulley.

CAUTION: Never tap crankshaft pulley on the side surface where belt is installed (outer circumference).

- c. Tighten crankshaft pulley bolt.

Torque Specifications: 157 N.m (16 kg-m, 116 ft-lb)

- d. Put a paint mark (A) on crankshaft pulley (1) aligning with angle mark (B) on crankshaft pulley bolt.
- e. Tighten crankshaft pulley bolt (clockwise).

Angle tightening: 90 degrees (c)

- Check the tightening angle by referencing to the notches. The angle between two notches is 90 degrees.

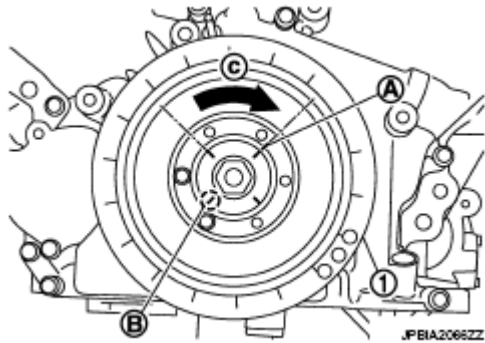


Fig. 129: Tightening Crankshaft Pulley Bolt
Courtesy of NISSAN MOTOR CO., U.S.A.

18. Rotate crankshaft pulley in normal direction (clockwise when viewed from engine front) to confirm it turns smoothly.
19. Install in the reverse order of removal.

Inspection

INSPECTION AFTER DISASSEMBLY

Timing Chain

Check for cracks and any excessive wear at link plates and roller links of timing chain. Replace timing chain if necessary.

- A : Crack
B : Wear

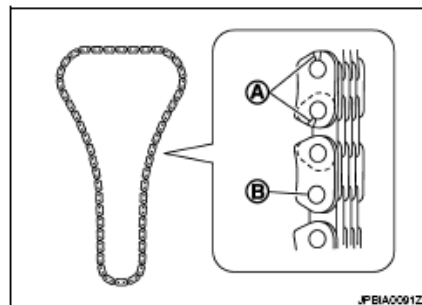


Fig. 130: Identifying Timing Chain Crack And Wear
Courtesy of NISSAN MOTOR CO., U.S.A.

INSPECTION AFTER ASSEMBLY

Inspection for Leakage

The following are procedures for checking fluid leakage, lubricant leakage.

- Before starting engine, check oil/fluid levels including engine coolant and engine oil. If any are less than the required quantity, fill them to the specified level. Refer to **FLUIDS AND LUBRICANTS**.

- Follow the procedure below to check for fuel leakage.
 - Turn ignition switch to the "ON" position (with engine stopped). With fuel pressure applied to fuel piping, check for fuel leakage at connection points.
 - Start engine. With engine speed increased, check again for fuel leakage at connection points.
- Run engine to check for unusual noise and vibration.

NOTE: If hydraulic pressure inside chain tensioner drops after removal/installation, slack in guide may generate a pounding noise during and just after the engine start. However, this does not indicate a malfunction. The noise will stop after hydraulic pressure rises.

- Warm up engine thoroughly to check that there is no leakage of fuel, or any oil/fluids including engine oil and engine coolant.
- Bleed air from lines and hoses of applicable lines, such as in cooling system.
- After cooling down engine, again check oil/fluid levels including engine oil and engine coolant. Refill them to the specified level, if necessary.

Summary of the inspection items:


ENGINE OPERATION TABLE

| Items | Before starting engine | Engine running | After engine stopped |
|---|------------------------|----------------|----------------------|
| Engine coolant | Level | Leakage | Level |
| Engine oil | Level | Leakage | Level |
| Other oils and fluids ⁽¹⁾ | Level | Leakage | Level |
| Fuel | Leakage | Leakage | Leakage |
| (1) Transmission/transaxle/CVT fluid, power steering fluid, brake fluid, etc. | | | |

CAMSHAFT

Exploded View

| Symbol | Description |
|--------|-----------------------------------|
| | N·m (kg-m, ft-lb) |
| | N·m (kg-m, in-lb) |
| | Always replace after disassembly. |

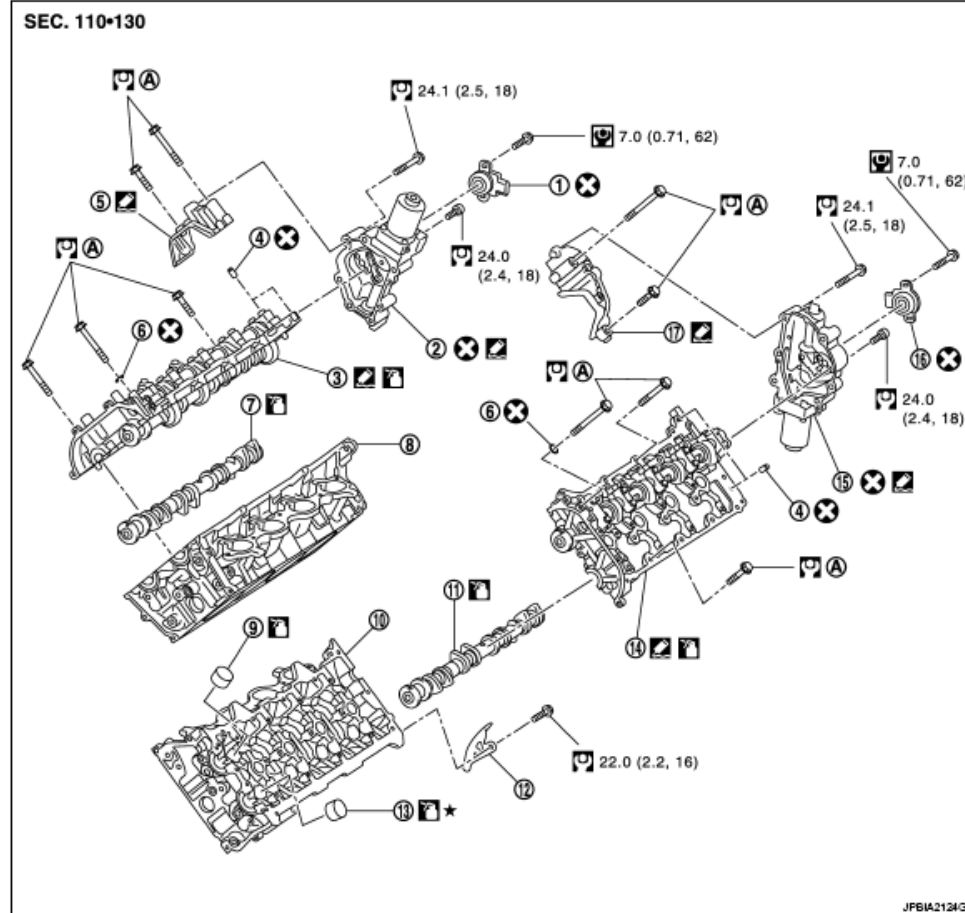

- | | | |
|---|--|---|
| 1. VVEL control shaft position sensor (bank 2) | 2. VVEL actuator sub assembly (bank 2) | 3. VVEL ladder assembly (bank 2) |
| 4. Dowel pin | 5. Actuator bracket (rear) (bank 2) | 6. Washer |
| 7. Camshaft (EXH) (bank 2) | 8. Cylinder head (bank 2) | 9. Valve lifter (INT) |
| 10. Cylinder head (bank 1) | 11. Camshaft (EXH) (bank 1) | 12. Actuator cover |
| 13. Valve lifter (EXH) | 14. VVEL ladder assembly (bank 1) | 15. VVEL actuator sub assembly (bank 1) |
| 16. VVEL control shaft position sensor (bank 1) | 17. Actuator bracket (rear) (bank 1) | |
| A. Refer to CAMSHAFT | | |

Fig. 131: Exploded View Of Camshaft With Torque Specification
 Courtesy of NISSAN MOTOR CO., U.S.A.


Refer to **COMPONENTS** for symbol marks above.

CAUTION: A high degree of precision is required for a valve on the intake side. Never remove the valve related parts unless necessary.

NOTE:

- As for replacement of parts on the intake side as shown in the exploded view, replace VVEL ladder assembly & cylinder head assembly.
- VVEL ladder assembly cannot be replaced as a single part, because it is machined together with cylinder head assembly.

VVEL Ladder Assembly & Cylinder Head Assembly Features

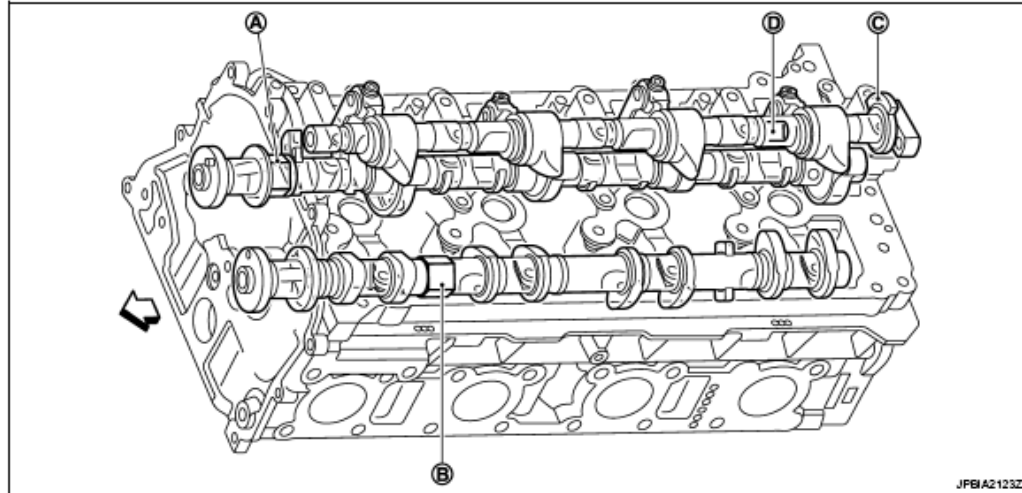

- A. Hexagonal part of drive shaft (for holding)
 B. Hexagonal part of camshaft (EXH) (for holding)
 C. Stopper of control shaft
 D. Two flat areas of control shaft (for holding)
- ↶ : Engine front

Fig. 132: Identifying Drive Shaft, Camshaft And Control Shaft
 Courtesy of NISSAN MOTOR CO., U.S.A.

NOTE: The graphic shows an example of bank 1.

Disassembly and Assembly**DISASSEMBLY**

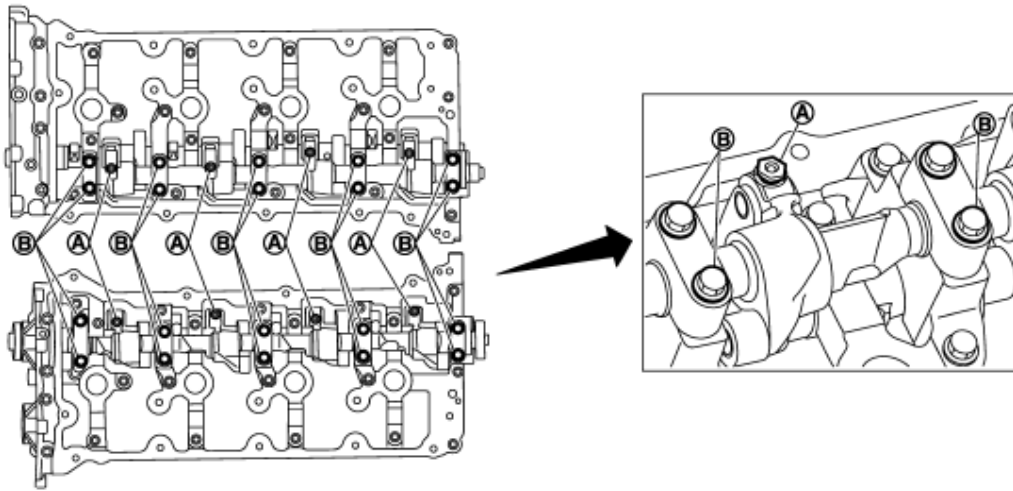


Fig. 133: Identifying Camshaft Adjusting Bolts

Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION: Never loosen adjusting bolts (A) and mounting bolts (black color) (B) of VVEL ladder assembly. If loosened, the stroke of cam lift becomes out of adjustment. In such case, replacement of VVEL ladder assembly and cylinder head assembly is required.

NOTE: VVEL ladder assembly cannot be replaced as a single part, because it is machined together with cylinder head assembly.

1. Remove rocker covers (bank 1 and bank 2). Refer to EXPLODED VIEW.
2. Remove VVEL actuator sub assembly as per the following:

CAUTION: VVEL actuator sub assembly and VVEL control shaft position sensor are not reusable. Never remove them unless they are required.

- a. Remove VVEL control shaft position sensor.
- b. Fix two flat areas (C) of control shaft with a wrench to remove mounting bolts of control shaft.

A : Bank 2
B : Bank 1
⇐ : Engine front

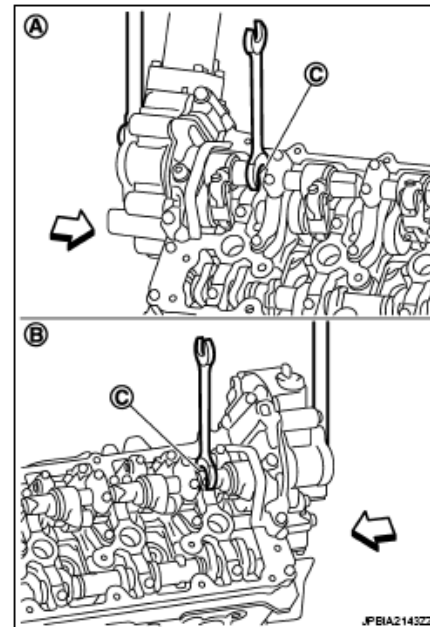


Fig. 134: Removing Mounting Bolts Of Control Shaft
Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION:

- During the operation, never allow a wrench to interfere with other parts.
- Fix control shaft to prevent the interference of the stopper surface.

c. Remove VVEL actuator sub assembly.

- Loosen mounting bolts in the reverse order as shown below.

A : Bank 1
B : Bank 2

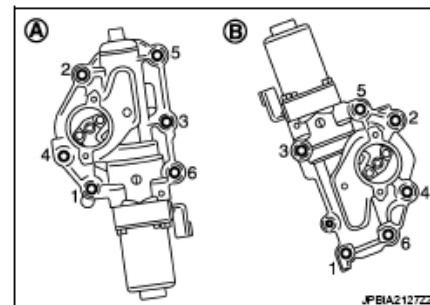


Fig. 135: Identifying VVEL Actuator Sub Assembly
Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION:

- When removing, prepare wastes because oil spills.
- When installing, be careful with VVEL actuator sub assembly (bank 1) mounting bolt No. 4 because its length

is different.

- d. Remove actuator bracket (rear).
 - Loosen mounting bolts in the reverse order as shown below.

A : Bank 2
 B : Bank 1
 ⇐ : Engine front

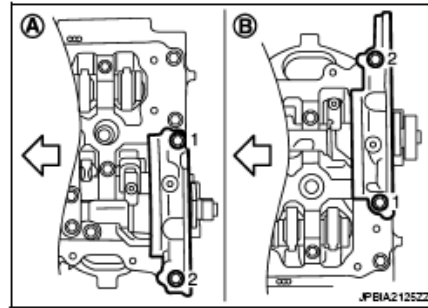


Fig. 136: Identifying Actuator Bracket Mounting Bolt Loosening Sequence
 Courtesy of NISSAN MOTOR CO., U.S.A.

3. Remove front cover, camshaft sprockets, and timing chains. Refer to **EXPLODED VIEW**.
4. Remove VVEL ladder assembly.
 - Loosen mounting bolts (gold color) in the reverse order as shown below.

A : Bank 2
 B : Bank 1
 ⇐ : Engine front

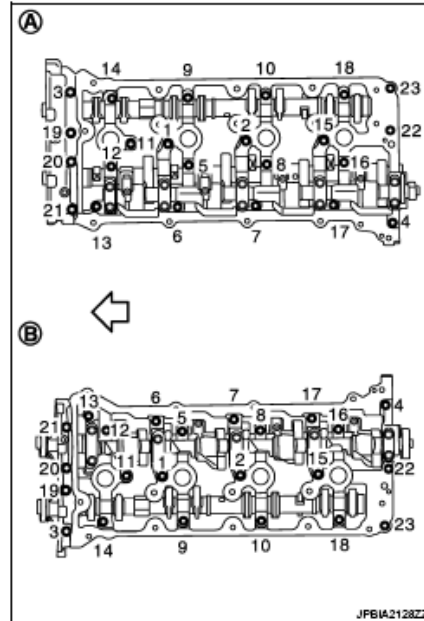


Fig. 137: Identifying Camshaft Mounting Bolts Loosening Sequence
 Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION:

- Never loosen adjusting bolts and mounting bolts (black color).
- When removing VVEL ladder assembly, hold the drive shaft

from below so as not to drop it.

5. Remove camshaft (EXH).
6. Remove valve lifter, if necessary.
 - Identify installation positions, and store them without mixing them up.

ASSEMBLY

1. Install valve lifter.
 - Install it in the original position.
2. Install camshaft (EXH).
 - Distinction between camshaft (EXH) is performed with the identification mark.

↔ : Engine front

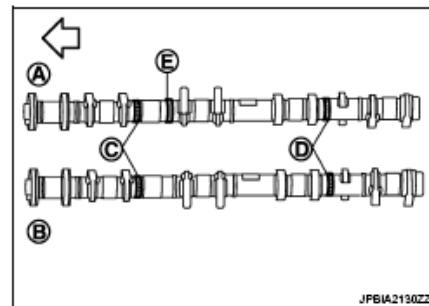


Fig. 138: Identifying Camshaft Identification Mark
Courtesy of NISSAN MOTOR CO., U.S.A.

CAMSHAFT PAINT MARK TABLE

| Bank | Paint marks | | Identification rib (E) |
|------------|-------------|--------|------------------------|
| | M1 (C) | M2 (D) | |
| Bank 2 (A) | No | Green | Yes |
| Bank 1 (B) | No | Green | No |

3. Install VVEL ladder assembly as per the following:
 - a. Apply a continuous bead of liquid gasket with tube presser (commercial service tool) to the cylinder head as shown below.

- A : Bank 1
 B : Bank 2
 c : $\phi 3.4 - 4.4 \text{ mm}$ (0.134 - 0.173 in)
 ← : Engine front

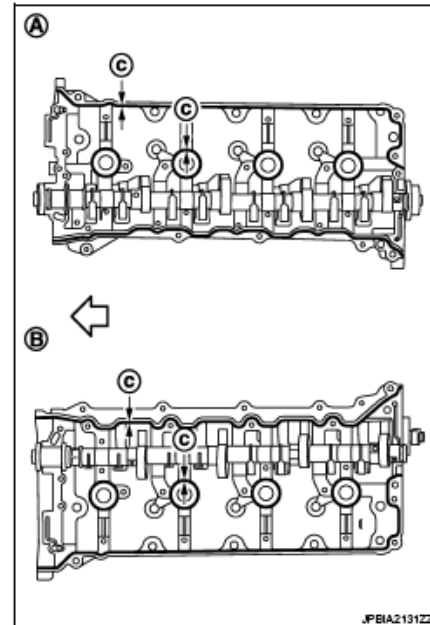


Fig. 139: Identifying Cylinder Head Liquid Gasket Area
 Courtesy of NISSAN MOTOR CO., U.S.A.

Use Genuine RTV Silicone Sealant or an equivalent. Refer to **RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS**.

- b. Tighten mounting bolts in the following step, in numerical order as shown below.

- A : Bank 2
 B : Bank 1
 ← : Engine front

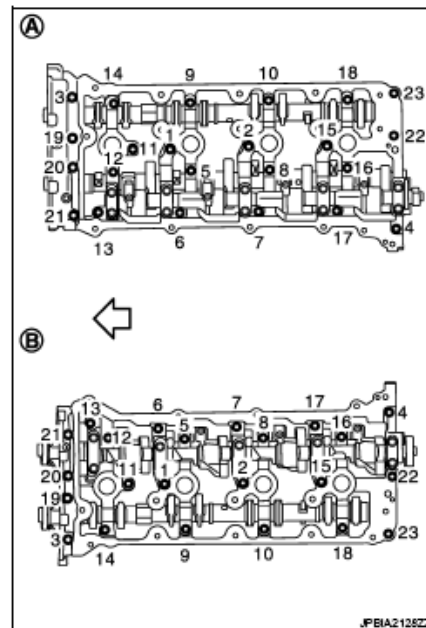


Fig. 140: Identifying Cylinder Head Mounting Bolt Loosening Sequence
 Courtesy of NISSAN MOTOR CO., U.S.A.

- i. Tighten bolts in numerical order as shown above.

Torque Specifications: 1.96 N.m (0.20 kg-m, 1 ft-lb)

- ii. Tighten bolts in numerical order as shown above.

Torque Specifications: 5.88 N.m (0.60 kg-m, 4 ft-lb)

- iii. Tighten bolts in numerical order as shown above.

Torque Specifications: 10.4 N.m (1.1 kg-m, 8 ft-lb)

4. Install camshaft sprockets and timing chains. Refer to **EXPLODED VIEW**.
5. Install actuator bracket (rear) as per the following:
 - a. Refer to the graphic to replace new dowel pins (2), if removed.

- 1 : Actuator bracket
 3 : VVEL ladder assembly
 a : 4.0 - 6.0 mm (0.157 - 0.236 in)

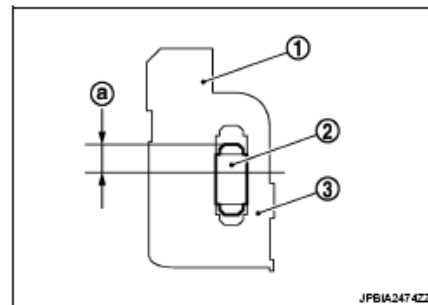


Fig. 141: Identifying Actuator Bracket And Valve Ladder Assembly
 Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Apply a continuous bead of liquid gasket with tube presser (commercial service tool) to the actuator bracket (rear) as shown below.

- A : Bank 2
 B : Bank 1
 c : $\phi 3.4 - 4.4$ mm (0.134 - 0.173 in)
 ⇐ : Engine front

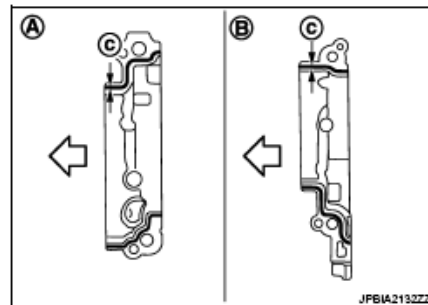


Fig. 142: Identifying Actuator Bracket
 Courtesy of NISSAN MOTOR CO., U.S.A.

Use Genuine RTV Silicone Sealant or an equivalent. Refer to RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS .

CAUTION: Never apply gasket to the oil passage.

- c. Tighten mounting bolts in the following steps, in numerical order as shown below.

A : Bank 2
B : Bank 1
⇐ : Engine front

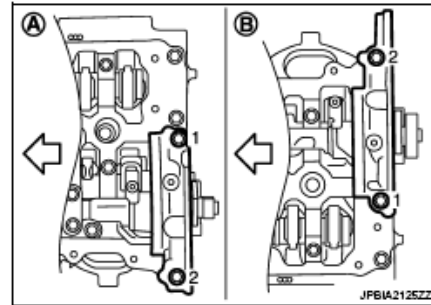


Fig. 143: Identifying Actuator Bracket Mounting Bolt Tightening Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

- i. Tighten bolts in numerical order as shown.

Torque Specifications: 1.96 N.m (0.20 kg-m, 1 ft-lb)

- ii. Tighten bolts in numerical order as shown.

Torque Specifications: 5.88 N.m (0.60 kg-m, 4 ft-lb)

- iii. Tighten bolts in numerical order as shown.

Torque Specifications: 31.4 N.m (3.2 kg-m, 23 ft-lb)

6. Install new VVEL actuator sub assembly as per the following:

CAUTION: Regarding replacement, because VVEL actuator sub assembly and VVEL control shaft position sensor are controlled on a one-on-one basis, replace them as a set.

NOTE:

- VVEL actuator arm (B) is factory-fixed at 10 degrees from the small lift with a holding jig (A).
- The holding jig is supplied in the new VVEL actuator sub assembly.

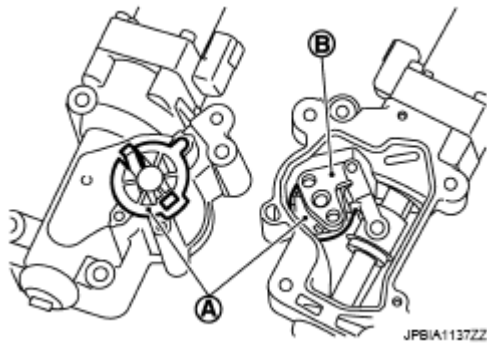


Fig. 144: Identifying VVEL Actuator Arm And Holding Jig
 Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION:

- Never disassemble VVEL actuator sub assembly. [Never loosen actuator motor mounting bolts (A) shown below]
- Never impact VVEL actuator sub assembly.

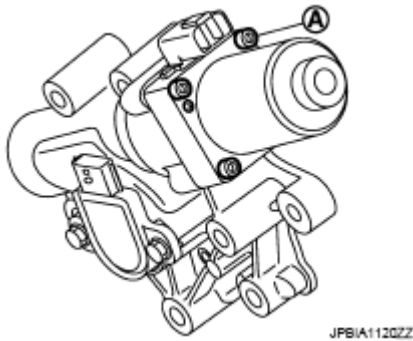


Fig. 145: Identifying Actuator Motor Mounting Bolts
 Courtesy of NISSAN MOTOR CO., U.S.A.

- a. Move control shaft to the position of small lift stopper.
 - The position where a part of the stopper of control shaft contacts VVEL ladder bracket.

- 1 : VVEL ladder assembly (bank 2)
- 2 : VVEL ladder assembly (bank 1)
- A : Stopper of control shaft
- ← : Small lift side

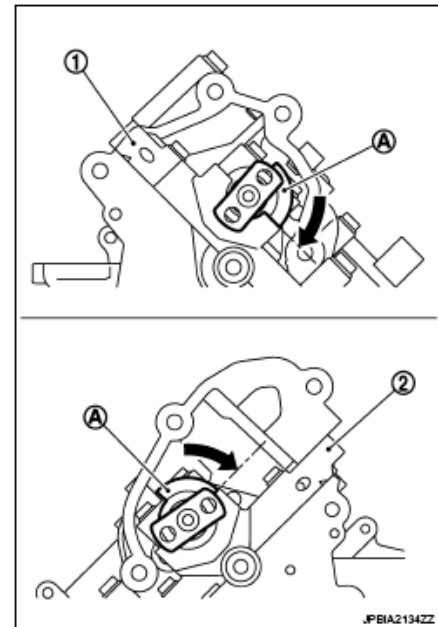


Fig. 146: Identifying VVEL Ladder Bracket
 Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION: Be careful not to damage the stopper surface.

- If control shaft cannot be moved, set crankshaft in position referring to the information below. (To displace cam nose)

Bank 1: Turn 360 degrees from No. 1 cylinder at TDC

Bank 2: No. 1 cylinder at TDC

- b. Hold two flat areas of control shaft with a wrench, and rotate the control shaft (10 degrees from the stopper) to the large lift side. This is for aligning the bolt hole of control shaft and the hole of VVEL actuator arm.

- 1 : VVEL actuator sub assembly (bank 2)
- A : Control shaft
- B : View B
- C : Holding jig
- d : 10 degrees
- ← : Large lift side

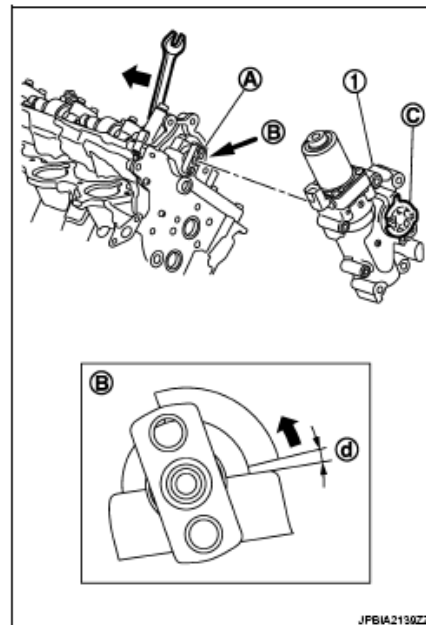


Fig. 147: Rotating Control Shaft
Courtesy of NISSAN MOTOR CO., U.S.A.

NOTE: The graphic shows an example of bank 2.

- c. Apply a continuous bead of liquid gasket with tube presser (commercial service tool) to the VVEL actuator sub assembly as shown below.

- 1 : VVEL actuator sub assembly (bank 2)
- 2 : VVEL actuator sub assembly (bank 1)
- a : 4.0 - 5.6 mm (0.157 - 0.220 in)
- b : ϕ 3.4 - 4.4 mm (0.134 - 0.173 in)

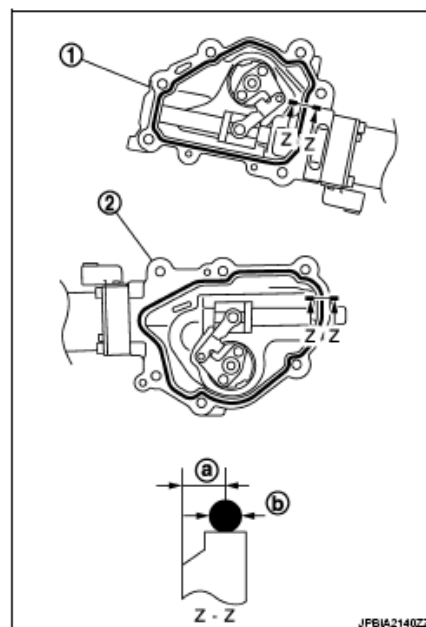


Fig. 148: Identifying VVEL Actuator Sub Assembly
Courtesy of NISSAN MOTOR CO., U.S.A.

Use Genuine RTV Silicone Sealant or an equivalent. Refer to **RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS** .

CAUTION: Never apply gasket to the oil passage.

- d. Install new VVEL actuator sub assembly.
- Tighten mounting bolts in the following step, in numerical order as shown below.

A : Bank 1
B : Bank 2

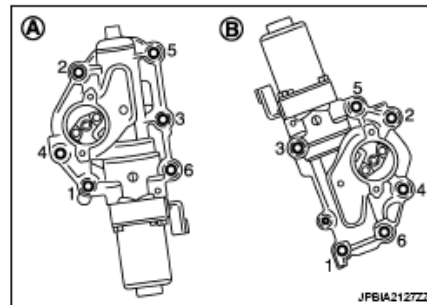


Fig. 149: Identifying VVEL Actuator Sub Assembly Mounting Bolt Tightening Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION:

- When installing, be careful with VVEL actuator sub assembly (bank 1) mounting bolt No. 4 because its length is different.
- Be sure to check that the VVEL actuator sub assembly is in contact with the cylinder head before tightening the mounting bolts.

- e. Remove holding jig.
- f. Check that VVEL actuator arm bolt hole is aligned with control shaft tapped hole. If it is not aligned, turn control shaft for alignment.

CAUTION: Never give an impact to the magnet part. (A)

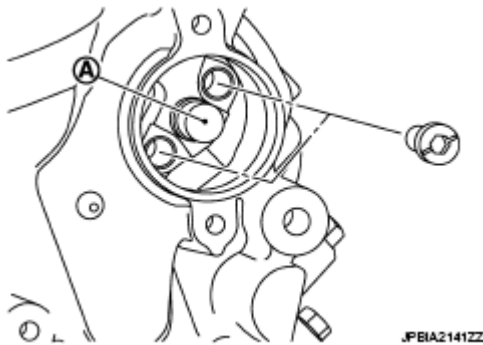


Fig. 150: Identifying VVEL Actuator Arm Bolt
 Courtesy of NISSAN MOTOR CO., U.S.A.

- g. Fix two flat areas (C) of control shaft with a wrench to tighten mounting bolts of control shaft.

A : Bank 2
 B : Bank 1
 ⇐ : Engine front

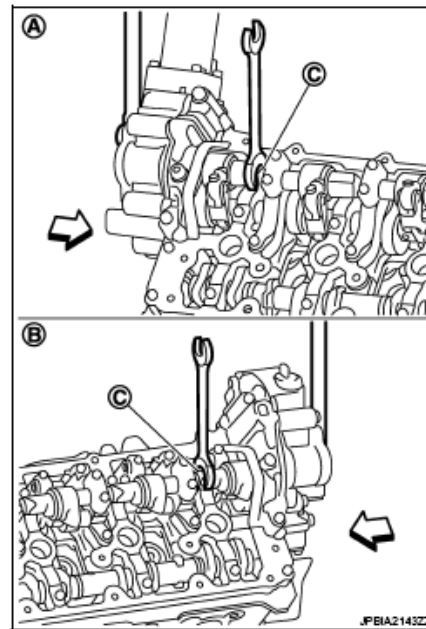


Fig. 151: Tightening Control Shaft Bolt
 Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION:


- During the operation, never allow a wrench to interfere with other parts.
- Fix control shaft to prevent the interference of the stopper surface.

7. Install new VVEL control shaft position sensor as per the following:

CAUTION: Regarding replacement, because VVEL actuator sub assembly and VVEL control shaft position sensor are controlled on a one-on-one

basis, replace them as a set.

- a. Apply engine oil to O-ring or contact surface of O-ring.
- b. Align matching marks (B) of VVEL control shaft position sensor and upper housing.
 - Face connector toward matching mark (A).

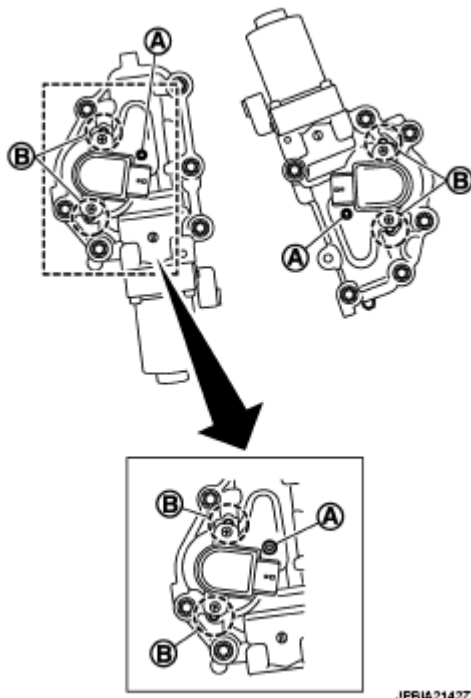

JPBIA2142ZZ

Fig. 152: Aligning Matching Marks Of VVEL Control Shaft Position Sensor
Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Temporarily tighten bolt.
- d. Adjust VVEL control shaft position sensor after setting the engine assembly in the vehicle. Refer to **VVEL CONTROL SHAFT POSITION SENSOR ADJUSTMENT: DESCRIPTION**.

CAUTION: Be sure to adjust VVEL control shaft position sensor.

- e. After adjusting VVEL control shaft position sensor, tighten bolts to the specified torque.
8. Install actuator cover.
9. Inspect the valve clearance. Refer to **INSPECTION**.
10. Install in the reverse order of removal.

Inspection

CAMSHAFT (EXH) VALVE CLEARANCE ADJUSTMENT

- Perform adjustment depending on selected head thickness of valve lifter (EXH).
1. Measure the valve clearance. Refer to **INSPECTION**.
 2. Remove VVEL ladder assembly and camshaft (EXH). Refer to **DISASSEMBLY AND ASSEMBLY**.

CAUTION: Never loosen adjusting bolts and mounting bolts (black color) of VVEL ladder assembly.

3. Remove valve lifter (EXH) at the locations that are out of the standard.
4. Measure the center thickness of the removed valve lifters (EXH) with a micrometer (A).

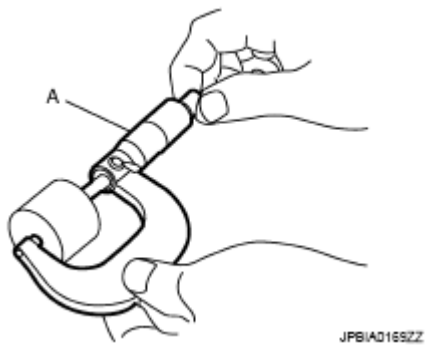


Fig. 153: Measuring Center Thickness Of Valve Lifters
 Courtesy of NISSAN MOTOR CO., U.S.A.

5. Use the equation below to calculate valve lifter (EXH) thickness for replacement.

Valve lifter (EXH) thickness calculation: $t = t1 + (C1 - C2)$

t = Valve lifter (EXH) thickness to be replaced

$t1$ = Removed valve lifter (EXH) thickness

$C1$ = Measured valve clearance

$C2$ = Standard valve clearance:

Exhaust : 0.33 mm (0.013 in)

- Thickness of new valve lifter (EXH) can be identified by stamp marks on the reverse side (inside the cylinder).

Stamp mark 788 indicates 7.88 mm (0.3102 in) in thickness.

- A : Stamp
B : Thickness of valve lifter (EXH)

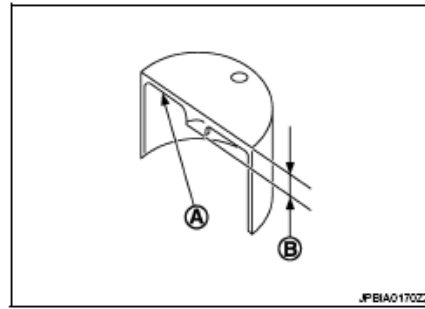


Fig. 154: Identifying Thickness Of Valve Lifter
Courtesy of NISSAN MOTOR CO., U.S.A.

Available thickness of valve lifter (EXH): 27 sizes with range 7.88 to 8.40 mm (0.3102 to 0.3307 in) in steps of 0.02 mm (0.0008 in) (when manufactured at factory). Refer to **CAMSHAFT**.

6. Install selected valve lifter (EXH).
7. Install VVEL ladder assembly and camshaft (EXH). Refer to **DISASSEMBLY AND ASSEMBLY**.
8. Manually turn crankshaft pulley a few turns.
9. Check that the valve clearances for cold engine are within the specifications by referring to the specified values. Refer to **INSPECTION**.
10. Install all removed parts in the reverse order of removal.
11. Warm up the engine, and check for unusual noise and vibration.

INSPECTION AFTER DISASSEMBLY (EXHAUST SIDE)

Camshaft (EXH) Runout

1. Put V-block on precise flat table, and support No. 2 and 5 journals of camshaft.

CAUTION: Never support No. 1 journal (on the side of camshaft sprocket) because it has a different diameter from the other four locations.

2. Set a dial indicator vertically to No. 3 journal.
3. Turn camshaft (EXH) to one direction with hands, and measure the camshaft runout on a dial indicator. (Total indicator reading)

Standard and limit: Refer to CAMSHAFT.

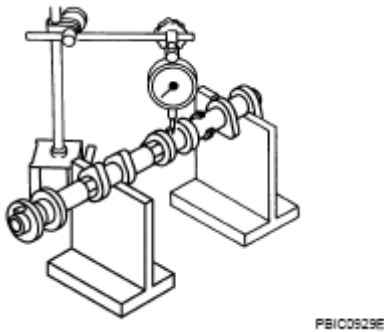


Fig. 155: Checking Camshaft Runout
Courtesy of NISSAN MOTOR CO., U.S.A.

4. If it exceeds the limit, replace camshaft (EXH).

Camshaft (EXH) Cam Height

- Measure the camshaft (EXH) cam height with a micrometer.

Standard and limit: Refer to CAMSHAFT.

- If wear exceeds the limit, replace camshaft (EXH).



Fig. 156: Checking Camshaft Cam Height
Courtesy of NISSAN MOTOR CO., U.S.A.

Camshaft (EXH) Journal Oil Clearance

CAMSHAFT (EXH) JOURNAL DIAMETER

- Measure the outer diameter of camshaft (EXH) journal with a micrometer (A).

Standard: Refer to CAMSHAFT.

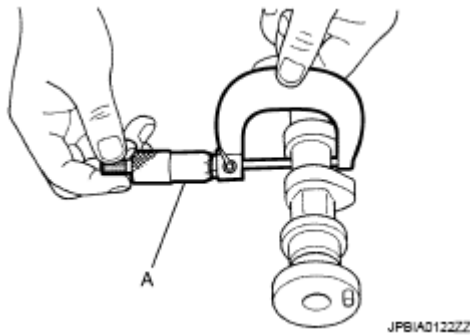


Fig. 157: Measuring Outer Diameter Of Camshaft Journal
 Courtesy of NISSAN MOTOR CO., U.S.A.

VVEL LADDER ASSEMBLY (EXH SIDE) INNER DIAMETER

- Installation is performed in the reverse order of removal. Tighten VVEL ladder assembly bolts to the specified torque. See the appropriate graphic for the tightening procedure.
- Measure inner diameter (A) of VVEL ladder assembly (EXH side) with a bore gauge.

Standard: Refer to CAMSHAFT.

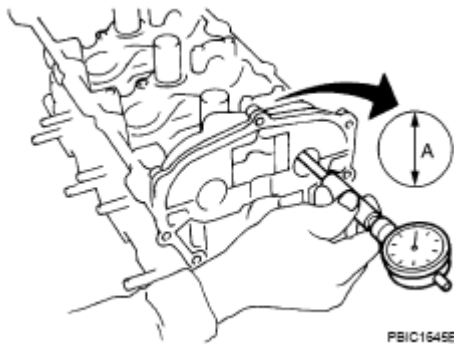


Fig. 158: Checking Inner Diameter A Of Camshaft Bracket With Bore Gauge
 Courtesy of NISSAN MOTOR CO., U.S.A.

CAMSHAFT (EXH) JOURNAL OIL CLEARANCE

- (Oil clearance) = [VVEL ladder assembly (EXH side) inner diameter] - [Camshaft (EXH) journal diameter].

Standard and limit: Refer to CAMSHAFT.

- If the calculated value exceeds the limit, replace either or both camshaft (EXH) and VVEL ladder assembly & cylinder head assembly.

NOTE: VVEL ladder assembly cannot be replaced as a single part, because it is machined together with cylinder head assembly.

Camshaft (EXH) End Play

- Install a dial indicator in thrust direction on front end of camshaft. Measure the end play of a dial indicator when camshaft (EXH) is moved forward/backward (in direction of axis).

Standard and limit: Refer to CAMSHAFT.

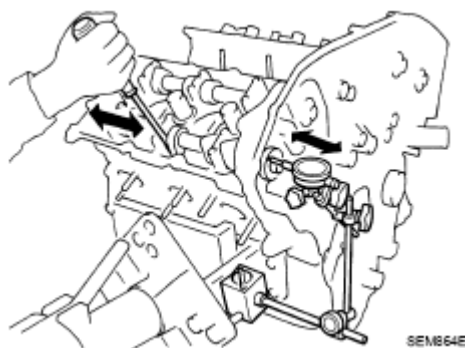


Fig. 159: Checking Camshaft End Play
Courtesy of NISSAN MOTOR CO., U.S.A.

- Measure the following parts if out of the limit.
 - Dimension "A" for camshaft (EXH) No. 1 journal

Standard: 30.500 - 30.548 mm (1.2008 - 1.2027 in)

- Dimension "B" for cylinder head No. 1 journal bearing

Standard: 30.360 - 30.385 mm (1.1953 - 1.1963 in)

- Refer to the standards above, and then replace camshaft (EXH) and/or VVEL ladder assembly & cylinder head assembly.

NOTE: **Cylinder head assembly cannot be replaced as a single part, because it is machined together with VVEL ladder assembly.**

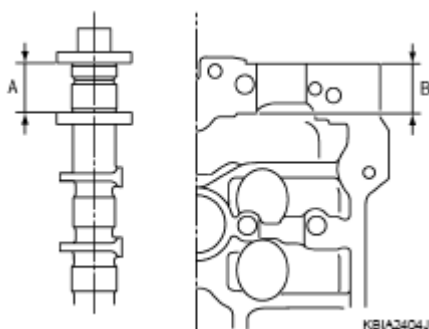


Fig. 160: Identifying Camshaft Journal Dimensions

Courtesy of NISSAN MOTOR CO., U.S.A.

Camshaft Sprocket (EXH) Runout

1. Put V-block on precise flat table, and support No. 2 and 5 journals of camshaft (EXH).

CAUTION: Never support No. 1 journal (on the side of camshaft sprocket) because it has a different diameter from the other four locations.

2. Measure the camshaft sprocket (EXH) runout with a dial indicator. (Total indicator reading)

Limit: Refer to CAMSHAFT.

3. If it exceeds the limit, replace camshaft sprocket (EXH).

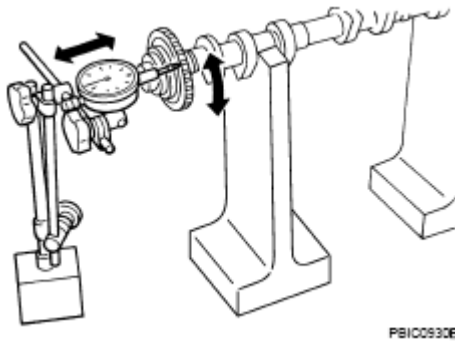


Fig. 161: Measuring Camshaft Sprocket Runout
Courtesy of NISSAN MOTOR CO., U.S.A.

Valve Lifter (EXH)

- Check if surface of valve lifter has any wear or crack.
- If wear or crack is found, replace valve lifter (EXH). Refer to CAMSHAFT.

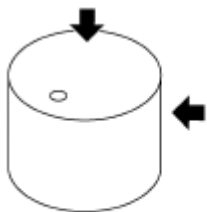


Fig. 162: Identifying Surface Of Valve Lifter
Courtesy of NISSAN MOTOR CO., U.S.A.

Valve Lifter Clearance (EXH)

VALVE LIFTER OUTER DIAMETER

- Measure the outer diameter at 1/2 height of valve lifter with a micrometer (A) since valve lifter is in barrel shape.

Standard: Refer to CAMSHAFT.

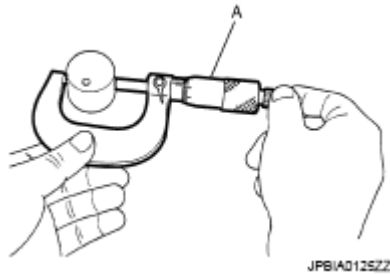


Fig. 163: Measuring Outer Diameter Of Valve Lifter
Courtesy of NISSAN MOTOR CO., U.S.A.

VALVE LIFTER HOLE DIAMETER

- Measure the inner diameter of valve lifter hole of cylinder head with an inside micrometer.

Standard: Refer to CAMSHAFT.

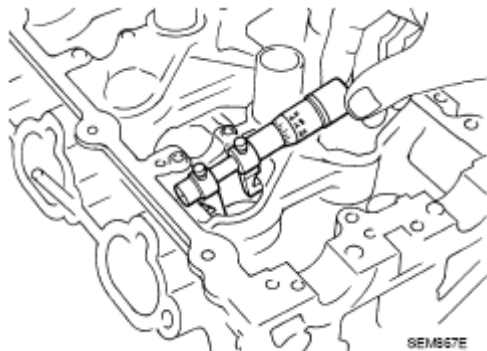


Fig. 164: Measuring Diameter Of Valve Lifter Bore Of Cylinder Head
Courtesy of NISSAN MOTOR CO., U.S.A.

VALVE LIFTER CLEARANCE

- (Valve lifter clearance) = (Valve lifter hole diameter) - (Valve lifter outer diameter)

Standard: Refer to CAMSHAFT.

- If the calculated value is out of the standard, referring to each standard of valve lifter outer diameter and valve lifter hole diameter, replace either or both valve lifter and VVEL ladder assembly & cylinder head assembly.

NOTE: **Cylinder head assembly cannot be replaced as a single part, because it is machined together with VVEL ladder assembly.**

INSPECTION AFTER DISASSEMBLY (INTAKE SIDE)

Drive Shaft End Play

- Install a dial indicator in thrust direction on front end of drive shaft. Measure the end play of a dial indicator when drive shaft is moved forward/backward (in direction of axis).

Standard and limit: Refer to CAMSHAFT.

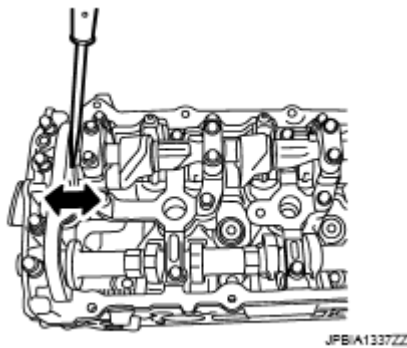


Fig. 165: Measuring End Play Of Dial Indicator
Courtesy of NISSAN MOTOR CO., U.S.A.

- Measure the following parts if out of the limit.
 - Dimension "A" for drive shaft No. 1 journal
Standard: 30.500 - 30.548 mm (1.2008 - 1.2027 in)
 - Dimension "B" for cylinder head No. 1 journal bearing
Standard: 30.360 - 30.385 mm (1.1953 - 1.1963 in)

- If it exceeds the limit, replace VVEL ladder assembly & cylinder head assembly.

NOTE: **Cylinder head assembly cannot be replaced as a single part, because it is machined together with VVEL ladder assembly.**

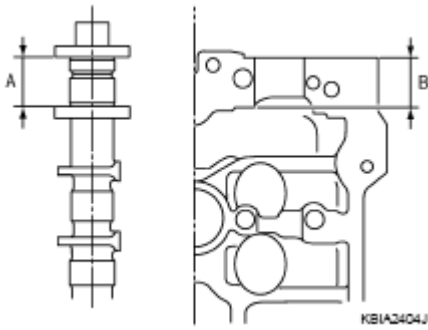


Fig. 166: Identifying Camshaft Journal Dimensions
Courtesy of NISSAN MOTOR CO., U.S.A.

Camshaft Sprocket (INT) Runout

1. Put V-block on precise flat table, and support No. 2 and 5 journals of drive shaft.

CAUTION: Never support No. 1 journal (on the side of camshaft sprocket) because it has a different diameter from the other four locations.

2. Measure the camshaft sprocket (INT) runout with a dial indicator. (Total indicator reading)


Limit: Refer to **CAMSHAFT**.

3. If it exceeds the limit, replace camshaft sprocket (INT).

Valve Lifter (INT)

- Check if surface of valve lifter has any wear or crack.
- If wear or crack is found, replace VVEL ladder assembly & cylinder head assembly. Refer to **CAMSHAFT**.

NOTE: Since the valve lifter (INT) cannot be replaced by the piece, VVEL ladder assembly & cylinder head assembly replacement are required.

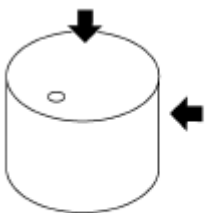

KB1A0182E

Fig. 167: Identifying Surface Of Valve Lifter
Courtesy of NISSAN MOTOR CO., U.S.A.

Valve Lifter Clearance (INT)

VALVE LIFTER OUTER DIAMETER

- Measure the outer diameter at 1/2 height of valve lifter (INT) with a micrometer (A) since valve lifter is in barrel shape.

Standard: Refer to CAMSHAFT.

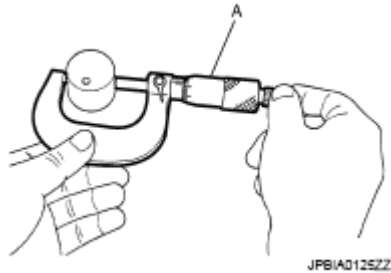


Fig. 168: Measuring Outer Diameter Of Valve Lifter
Courtesy of NISSAN MOTOR CO., U.S.A.

VALVE LIFTER HOLE DIAMETER

- Measure the inner diameter of valve lifter hole of cylinder head with an inside micrometer.

Standard: Refer to CAMSHAFT.

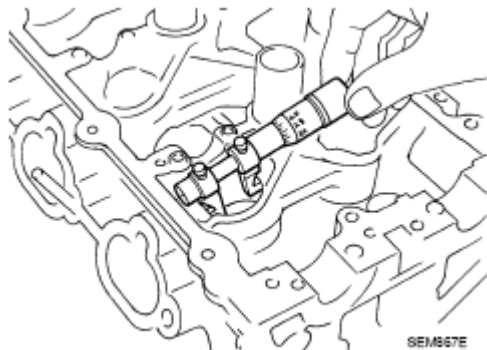


Fig. 169: Measuring Diameter Of Valve Lifter Bore Of Cylinder Head
Courtesy of NISSAN MOTOR CO., U.S.A.

VALVE LIFTER CLEARANCE

- (Valve lifter clearance) = (Valve lifter hole diameter) - (Valve lifter outer diameter)

Standard: Refer to CAMSHAFT.

- If the calculated value is out of the standard, replace VVEL ladder assembly & cylinder head assembly.


NOTE: Since the valve lifter (INT) cannot be replaced by the piece, VVEL ladder assembly & cylinder head assembly replacement are required.

VVEL Ladder Assembly

DRIVE SHAFT OPERATIONAL CHECK

- Hold the both ends of the drive shaft (A) and rotate it to check that it rotates smoothly.

CAUTION: Turn VVEL ladder assembly upside down to prevent the drive shaft from dropping off.

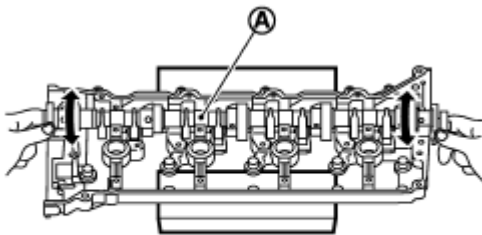


JF6IA2135ZZ

Fig. 170: Identifying Drive Shaft
Courtesy of NISSAN MOTOR CO., U.S.A.

CONTROL SHAFT OPERATIONAL CHECK

- Move control shaft (A) to the small stopper and large stopper to check that the control shaft functions smoothly.

CAUTION: Turn VVEL ladder assembly upside down to prevent the drive shaft from dropping off.

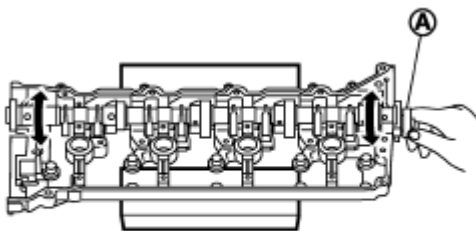

JF6IA2136ZZ

Fig. 171: Checking Control Shaft
Courtesy of NISSAN MOTOR CO., U.S.A.

RINK CHECK FOR BACK-LASH (BONDING)

- Check that the link and the shaft of drive shaft and control shaft are not fixed.
- Check this by moving drive shaft and control shaft in the axial and rotation directions.

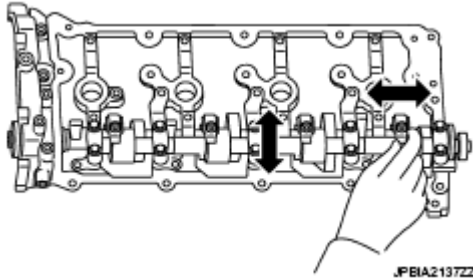


Fig. 172: Checking Drive Shaft And Control Shaft
 Courtesy of NISSAN MOTOR CO., U.S.A.

- If there is an unusualness related to the above three items, replace VVEL ladder assembly & cylinder head assembly.

NOTE: VVEL ladder assembly cannot be replaced as a single part, because it is machined together with cylinder head assembly.

INSPECTION AFTER ASSEMBLY**Inspection of Camshaft Sprocket (INT) Oil Groove****CAUTION:**

- Perform this inspection only when DTC P0011, P0012 is detected in self-diagnostic results of CONSULT-III and it is directed according to inspection procedure of EC information. Refer to DIAGNOSIS DESCRIPTION .
- Check when engine is cold to prevent burns from the splashing engine oil.

1. Check engine oil level. Refer to INSPECTION .
2. Perform the following procedure to prevent the engine from being unintentionally started while checking.
 - a. Release the fuel pressure. Refer to INSPECTION .
 - b. Disconnect ignition coil and injector harness connectors. Refer to EXPLODED VIEW.
3. Remove valve timing control solenoid valve. Refer to EXPLODED VIEW.
4. Crank engine, and then check that engine oil comes out from valve timing control solenoid valve hole (A). End crank after checking.

1 : Valve timing control cover (bank 2)

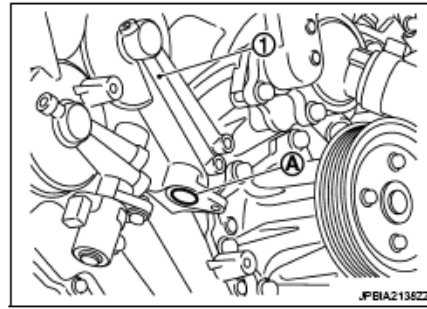


Fig. 173: Identifying Valve Timing Control Cover
Courtesy of NISSAN MOTOR CO., U.S.A.

WARNING: Be careful not to touch rotating parts, drive belt, idler pulley, and crankshaft pulley, etc.

CAUTION:

- Prevent splashing by using a shop cloth to prevent the worker from injury from engine oil and to prevent engine oil contamination.
- Prevent splashing by using a shop cloth to prevent engine oil from being splashed to engine and vehicle. Especially, be careful not to apply engine oil to rubber parts of drive belt, engine mounting insulator, etc. Wipe engine oil out immediately if it is splashed.

5. Perform the following inspection if engine oil does not come out from valve timing control solenoid valve oil hole of the valve timing control cover.
 - Remove oil filter, and then clean it. Refer to **EXPLODED VIEW**.
 - Clean oil groove between oil strainer and valve timing control solenoid valve. Refer to **ENGINE LUBRICATION SYSTEM** and **ENGINE LUBRICATION SYSTEM SCHEMATIC**.
6. Remove components between valve timing control solenoid valve and camshaft sprocket, and then check each oil groove for clogging.
 - Clean oil groove if necessary. Refer to **ENGINE LUBRICATION SYSTEM** and **ENGINE LUBRICATION SYSTEM SCHEMATIC**.
7. After inspection, install removed parts in the reverse order.

Inspection for Leakage

The following are procedures for checking fluid leakage, lubricant leakage.

- Before starting engine, check oil/fluid levels including engine coolant and engine oil. If any are less than the required quantity, fill them to the specified level. Refer to **FLUIDS AND LUBRICANTS**.
- Follow the procedure below to check for fuel leakage.
 - Turn ignition switch to the "ON" position (with engine stopped). With fuel pressure applied to fuel piping, check for fuel leakage at connection points.

- Start engine. With engine speed increased, check again for fuel leakage at connection points.
- Run engine to check for unusual noise and vibration.

NOTE: If hydraulic pressure inside chain tensioner drops after removal/installation, slack in guide may generate a pounding noise during and just after the engine start. However, this does not indicate a malfunction. The noise will stop after hydraulic pressure rises.

- Warm up engine thoroughly to check that there is no leakage of fuel, or any oil/fluids including engine oil and engine coolant.
- Bleed air from lines and hoses of applicable lines, such as in cooling system.
- After cooling down engine, again check oil/fluid levels including engine oil and engine coolant. Refill them to the specified level, if necessary.

Summary of the inspection items:


ENGINE OPERATION TABLE

| Items | Before starting engine | Engine running | After engine stopped |
|---|------------------------|----------------|----------------------|
| Engine coolant | Level | Leakage | Level |
| Engine oil | Level | Leakage | Level |
| Other oils and fluids ⁽¹⁾ | Level | Leakage | Level |
| Fuel | Leakage | Leakage | Leakage |
| (1) Transmission/transaxle/CVT fluid, power steering fluid, brake fluid, etc. | | | |

CYLINDER HEAD

Exploded View

| Symbol | Description |
|--------|-----------------------------------|
| | N·m (kg-m, ft-lb) |
| | N·m (kg-m, in-lb) |
| | Always replace after disassembly. |

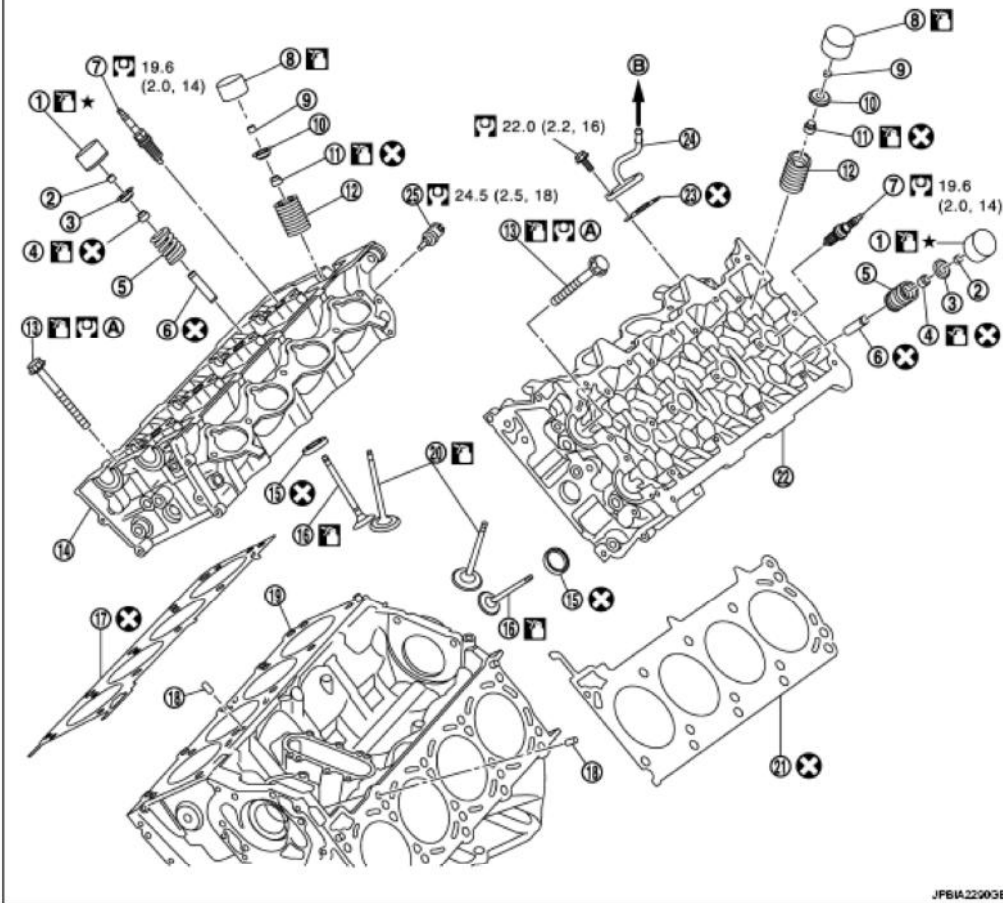SEC. 111•130•220


JF6IA22003B

- | | | |
|---------------------------------------|---|---|
| 1. Valve lifter (EXH) | 2. Valve collet (EXH) | 3. Valve spring retainer (EXH) |
| 4. Valve oil seal (EXH) | 5. Valve spring (with valve spring seat) (EXH) | 6. Valve guide (EXH) |
| 7. Spark plug | 8. Valve seat (INT) | 9. Valve collet (INT) |
| 10. Valve spring retainer (INT) | 11. Valve oil seal (INT) | 12. Valve spring (with valve spring seat) (INT) |
| 13. Cylinder head bolt | 14. Cylinder head (bank 2) | 15. Valve seat (EXH) |
| 16. Valve (EXH) | 17. Cylinder head gasket (bank 2) | 18. Oil filter (for VVEL ladder assembly) |
| 19. Cylinder block | 20. Valve (INT) | 21. Cylinder head gasket (bank 1) |
| 22. Cylinder head (bank 1) | 23. Gasket | 24. Water pipe |
| 25. Engine coolant temperature sensor | | |
| A. Refer to CYLINDER HEAD | B. To Electric throttle control actuator (bank 1) | |

Fig. 174: Exploded View Of Cylinder Head With Torque Specification
 Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to **COMPONENTS** for symbol marks above.

CAUTION: A high degree of precision is required for a valve on the intake side. Never remove the valve related parts unless necessary.

NOTE:

- As for replacement of parts on the intake side as shown in the exploded view, replace VVEL ladder assembly & cylinder head assembly. Only valve oil seals are replaceable as a single part.
- VVEL ladder assembly cannot be replaced as a single part, because it is machined together with cylinder head assembly.

Disassembly and Assembly

DISASSEMBLY

1. Remove the following parts:

- Rocker cover and spark plug: Refer to **EXPLODED VIEW**.
- Intake manifold: Refer to **EXPLODED VIEW**.
- Exhaust manifold: Refer to **EXPLODED VIEW**.
- Water inlet and thermostat housing: Refer to **EXPLODED VIEW**.
- Water pipe and heater pipe: Refer to **EXPLODED VIEW**.
- Timing chain: Refer to **EXPLODED VIEW**.
- Camshaft (EXH) and VVEL ladder assembly: Refer to **EXPLODED VIEW**.

2. Remove cylinder head.

- Loosen mounting bolts in reverse order as shown below.

A : Bank 2
B : Bank 1
⇐ : Engine front

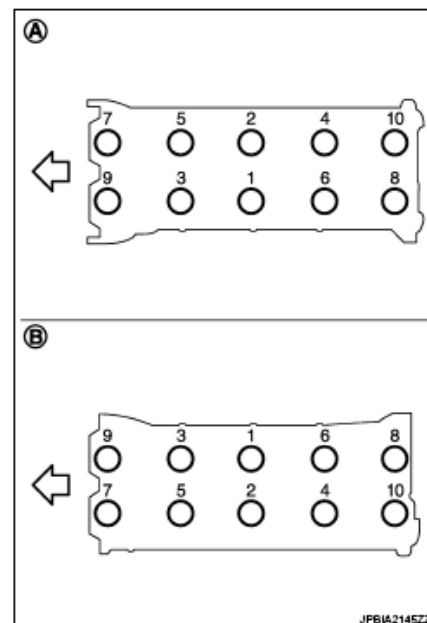


Fig. 175: Identifying Cylinder Head Mounting Bolts Loosening Sequence

Courtesy of NISSAN MOTOR CO., U.S.A.

- Use TORX socket and power tool.
3. Remove cylinder head gaskets.
 4. Remove oil filter (for VVEL ladder assembly) from cylinder block, if necessary.
 5. Remove valve lifter.
 - Identify installation positions, and store them without mixing them up.
 6. Remove valve collet.
 - Compress valve spring with the valve spring compressor [SST: KV10116200 (J-26336-A)] (A), the attachment [SST: KV10115900 (J-26336-20)] (C) and the adapter [SST: KV10109220 (-)] (B). Remove valve collet with a magnet hand.

CAUTION: When working, take care not to damage valve lifter holes.

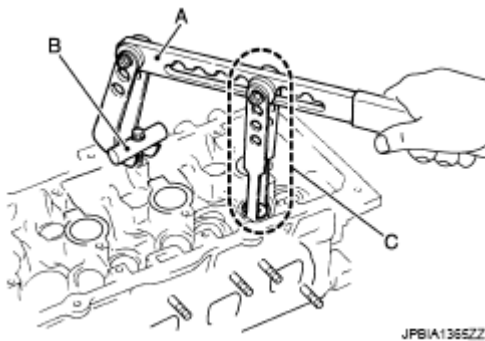


Fig. 176: Compressing Valve Spring
Courtesy of NISSAN MOTOR CO., U.S.A.

7. Remove valve spring retainer and valve spring (with valve spring seat).
8. Push valve stem to combustion chamber side, and remove valve.
 - Identify installation positions, and store them without mixing them up.
9. Remove valve oil seal using the valve oil seal puller [SST: KV10107902 (J38959)] (A).

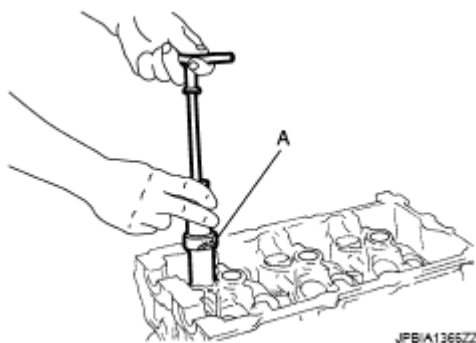


Fig. 177: Removing Valve Oil Seal Using Valve Oil Seal Puller
Courtesy of NISSAN MOTOR CO., U.S.A.

10. Remove valve seat (EXH), if valve seat (EXH) must be replaced.
 - Bore out old seat until it collapses. Boring should not continue beyond the bottom face of the seat recess in cylinder head. Set the machine depth stop to ensure this. Refer to **CYLINDER HEAD**.

CAUTION: Prevent to scratch cylinder head by excessive boring.

11. Remove valve guide (EXH), if valve guide (EXH) must be replaced.
 - a. To remove valve guide (EXH), heat cylinder head to 110 to 130°C (230 to 266°F) by soaking in heated oil (A).

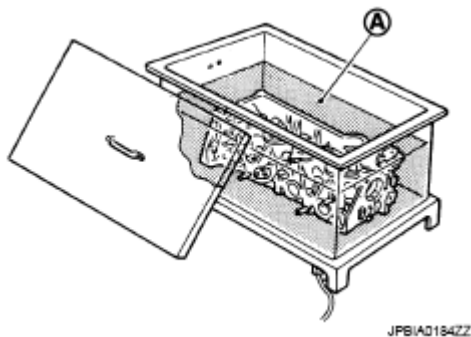


Fig. 178: Heating Cylinder Head
Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Drive out valve guide (EXH) with a press [under a 20 kN (2 ton, 2.2 US ton, 2.0 Imp ton) pressure] or a hammer and the valve guide drift (commercial service tool).

WARNING: Cylinder head contains heat. When working, wear protective equipment to avoid getting burned.



Fig. 179: Driving Out Valve Guide
Courtesy of NISSAN MOTOR CO., U.S.A.

ASSEMBLY

1. Install valve guide (EXH), if removed.

Replace with oversized [0.2 mm (0.008 in)] valve guide (EXH).

- a. Using the valve guide reamer (commercial service tool) (A), ream cylinder head valve guide (EXH) hole.

Oversize (service) [0.2 mm (0.008 in)]:

: Refer to CYLINDER HEAD.

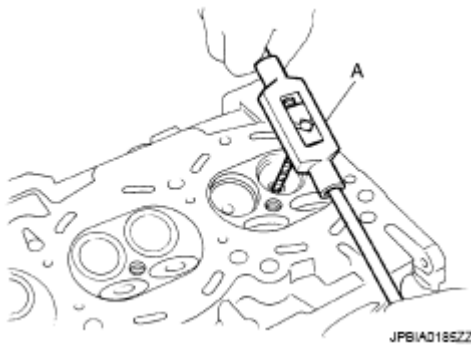


Fig. 180: Reaming Cylinder Head Valve Guide (EXH) Hole
Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Heat cylinder head to 110 to 130°C (230 to 266°F) by soaking in heated oil (A).

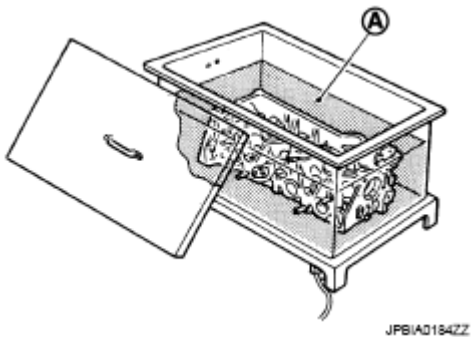


Fig. 181: Heating Cylinder Head
Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Using the valve guide drift (commercial service tool), press valve guide (EXH) from camshaft side to the dimensions as shown below.

Projection (A)

Refer to CYLINDER HEAD.

WARNING: Cylinder head contains heat. When working, wear protective equipment to avoid getting burned.

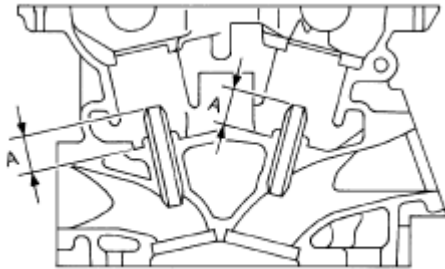


Fig. 182: Identifying Valve Guide To Camshaft Side
Courtesy of NISSAN MOTOR CO., U.S.A.

- d. Using the valve guide reamer (commercial service tool) (A), apply reamer finish to valve guide (EXH).

Standard: Refer to CYLINDER HEAD.

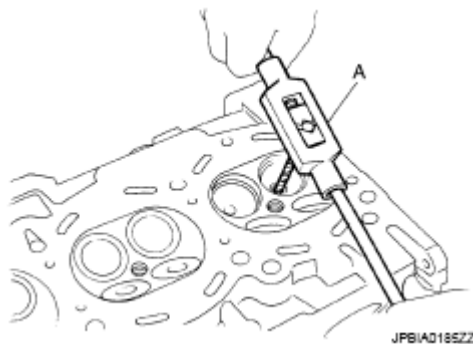


Fig. 183: Reaming Valve Guide
Courtesy of NISSAN MOTOR CO., U.S.A.

2. Install valve seat (EXH), if removed.

Replace with oversize [0.5 mm (0.020 in)] valve seat (EXH).

- a. Ream cylinder head recess diameter (a) for service valve seat (EXH).

Oversize (service) [0.5 mm (0.020 in)]:

Refer to CYLINDER HEAD.

- Be sure to ream in circles concentric to valve guide center. This enables valve to fit correctly.

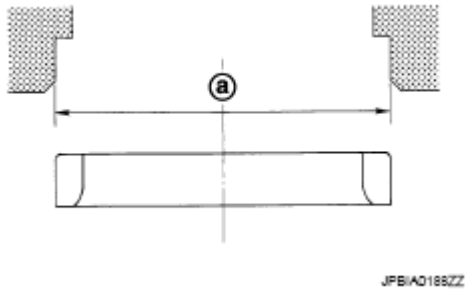


Fig. 184: Identifying Cylinder Head Recess Diameter
Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Heat cylinder head to 110 to 130°C (230 to 266°F) by soaking in heated oil (A).

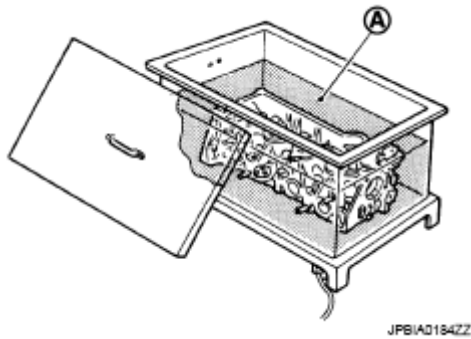


Fig. 185: Heating Cylinder Head
Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Provide valve seats (EXH) cooled well with dry ice. Force fit valve seat (EXH) into cylinder head.

WARNING: Cylinder head contains heat. When working, wear protective equipment to avoid getting burned.

CAUTION: Avoid directly touching cold valve seats.

- d. Using the valve seat cutter set (commercial service tool) or valve seat grinder, finish seat to the specified dimensions. Refer to CYLINDER HEAD.

CAUTION: When using the valve seat cutter, firmly grip cutter handle with both hands. Then, press on the contacting surface all around the circumference to cut in a single drive. Improper pressure on cutter or cutting many different times may result in staged valve seat.

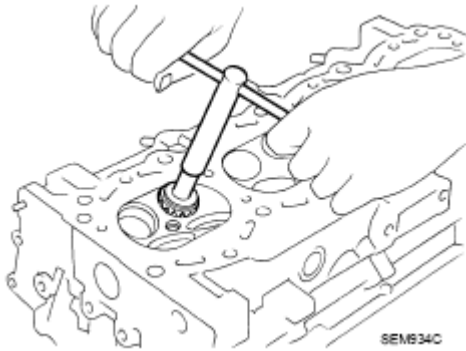


Fig. 186: Cutting Valve Seat
Courtesy of NISSAN MOTOR CO., U.S.A.

- e. Using compound, grind to adjust valve fitting.
- f. Check again for normal contact. Refer to **INSPECTION**.
3. Install new valve oil seals as per the following:
 - a. Apply new engine oil on new valve oil seal joint and seal lip.
 - b. Using the valve oil seal drift [SST: KV10115600 (J-38958)] (A), press fit valve seal to height (b) shown below.

Height (b)

Intake: 14.3 - 14.9 mm (0.563 - 0.587 in)

Exhaust: 13.6 - 14.2 mm (0.535 - 0.559 in)

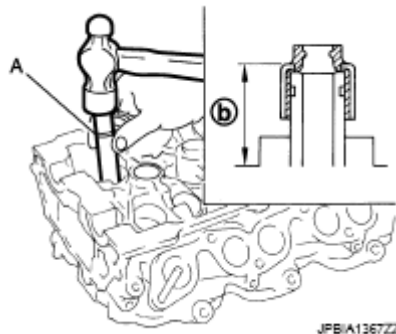



Fig. 187: Pressing Valve Seat
Courtesy of NISSAN MOTOR CO., U.S.A.

4. Install valve.

NOTE: Larger diameter valves are for intake side.

5. Install oil filter (for VVEL ladder assembly) (1) in the direction shown below, if removed.
 - Check that the oil filter does not protrude from the upper surface of cylinder block (2) after

installation.

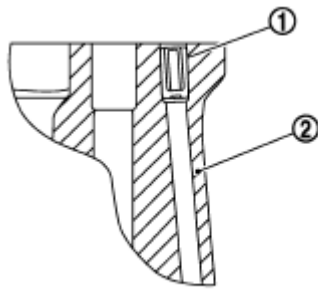

JFBIA2129ZZ

Fig. 188: Identifying VVEL Ladder Assembly
Courtesy of NISSAN MOTOR CO., U.S.A.

6. Install new cylinder head gaskets.
7. Install cylinder head as per the following:

CAUTION:

- If cylinder head bolts are re-used, check their outer diameters before installation. Refer to INSPECTION.
- Before installing cylinder head, inspect cylinder head distortion. Refer to INSPECTION.
- Tighten cylinder head bolts in numerical order as shown below.

A : Bank 2
B : Bank 1
⇐ : Engine front

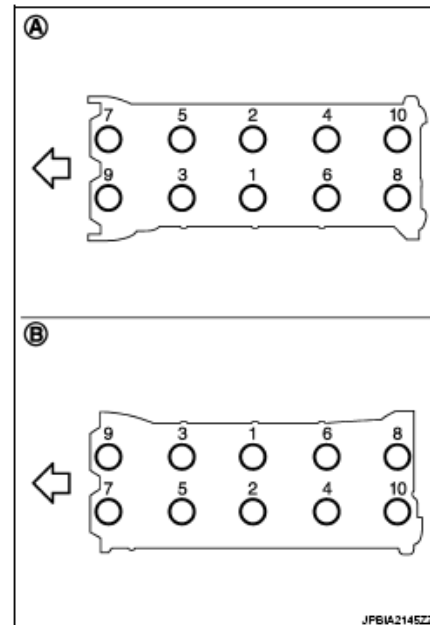


Fig. 189: Identifying Cylinder Head Mounting Bolts Loosening Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

- Use TORX socket.
- a. Apply new engine oil to threads and seat surfaces of cylinder head bolts.
- b. Tighten all cylinder head bolts.

Torque Specifications: 40 N.m (4.1 kg-m, 30 ft-lb)

- c. Tighten all cylinder head bolts (clockwise).

Angle tightening: 75 degrees

- d. Completely loosen all cylinder head bolts.

Torque Specifications: 0 N.m (0 kg-m, 0 ft-lb)

CAUTION: In step "d", loosen bolts in the reverse order of that indicated in the graphic.

- e. Tighten all cylinder head bolts.

Torque Specifications: 40.0 N.m (4.1 kg-m, 30 ft-lb)

- f. Tighten all cylinder head bolts (clockwise).

Angle tightening: 65 degrees

CAUTION: Check the tightening angle using the angle wrench [SST: KV10112100 (BT8653-A)] (A). Never make judgment by visual inspection.

- Check tightening angle indicated on the angle wrench indicator plate.
- g. Tighten all cylinder head bolts again (clockwise).

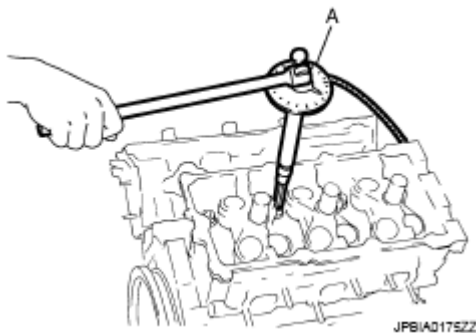


Fig. 190: Tightening Cylinder Head Bolts
Courtesy of NISSAN MOTOR CO., U.S.A.

Angle tightening: 65 degrees

8. Install valve spring (with valve spring seat).
 - Install narrow pitch (B) end [paint mark (C)] to cylinder head side (valve spring seat side).

A : Wide pitch
 ⇐ : Cylinder head side

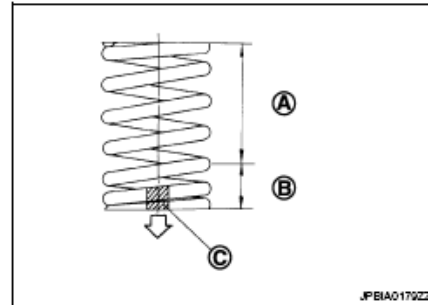


Fig. 191: Identifying Valve Spring
 Courtesy of NISSAN MOTOR CO., U.S.A.

Paint mark color

Intake: Yellow

Exhaust: Pink

9. Install valve spring retainer.
10. Install valve collet.
 - Compress valve spring with the valve spring compressor [SST: KV10116200 (J26336-A)] (A), the attachment [SST: KV10115900 (J26336-20)] (C) and the adapter [SST: KV10109220 (-)] (B). Install valve collet with a magnet hand.

CAUTION: When working, take care not to damage valve lifter holes.

- Tap valve stem edge lightly with plastic hammer after installation to check its installed condition.

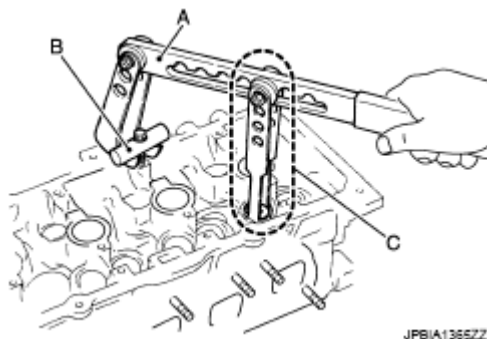


Fig. 192: Compressing Valve Spring

Courtesy of NISSAN MOTOR CO., U.S.A.

11. Install valve lifter.
 - Install it in the original position.
12. Install in the reverse order of removal.

Inspection**INSPECTION AFTER DISASSEMBLY****Cylinder Head Bolts Outer Diameter**

- Cylinder head bolts are tightened by plastic zone tightening method. Whenever the size difference between (B) and (A) exceeds the limit, replace them with new one.

Limit [(B) - (A)] : 0.18 mm (0.0071 in)

c : 55 mm (2.17 in)
d : 12 mm (0.47 in)

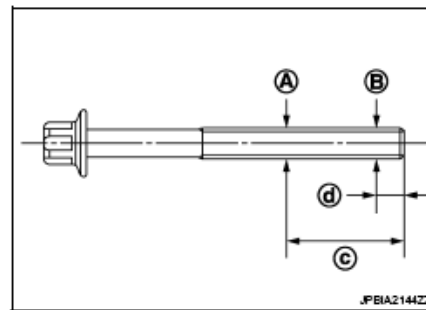


Fig. 193: Identifying Cylinder Head Bolts Outer Diameter
Courtesy of NISSAN MOTOR CO., U.S.A.

- If reduction of outer diameter appears in a position other than (A), use it as (A) point.

Cylinder Head Distortion

NOTE: When performing this inspection, cylinder block distortion should be also checked. Refer to **INSPECTION**.

1. Using a scraper, wipe out oil, scale, gasket, sealant and carbon deposits from surface of cylinder head.

CAUTION: Never allow gasket fragments to enter engine oil or engine coolant passages.

2. At each of several locations on bottom surface of cylinder head, measure the distortion in six directions (A, B, C, D, E, F).

Limit: Refer to **CYLINDER HEAD**.

- If it exceeds the limit, replace VVEL ladder assembly & cylinder head assembly.

NOTE: Cylinder head assembly cannot be replaced as a single part, because it is machined together with VVEL ladder assembly.

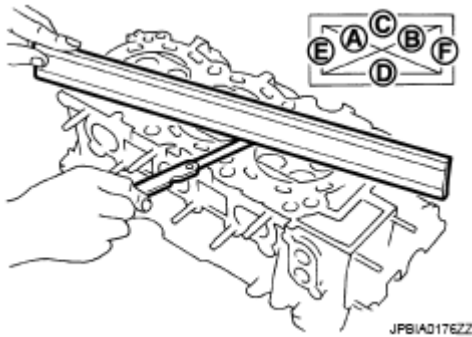


Fig. 194: Checking Cylinder Head Surface
Courtesy of NISSAN MOTOR CO., U.S.A.

Valve Dimensions

- Check the dimensions of each valve. For the dimensions, refer to **CYLINDER HEAD**.
- If dimensions are out of the standard.
 - Replace valve (EXH) and check valve seat contact.
 - Replace VVEL ladder assembly & cylinder head assembly. Refer to **EXPLODED VIEW**. (Intake side)

NOTE: Since the valve (INT) cannot be replaced by the piece, VVEL ladder assembly & cylinder head assembly replacement are required.

Valve Guide Clearance

Valve Stem Diameter

- Measure the diameter of valve stem with micrometer (A).

Standard: Refer to **CYLINDER HEAD**.

Valve Guide Inner Diameter

- Measure the inner diameter of valve guide with bore gauge.

Standard: Refer to **CYLINDER HEAD**.

Valve Guide Clearance

- (Valve guide clearance) = (Valve guide inner diameter) - (Valve stem diameter)

Standard: Refer to CYLINDER HEAD.

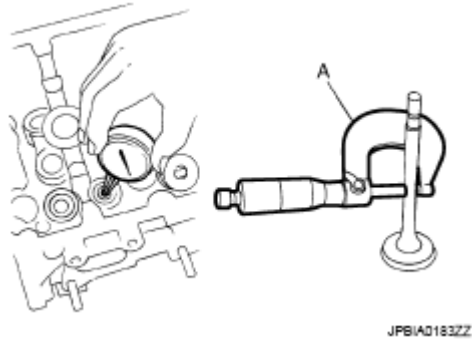


Fig. 195: Measuring Inner Diameter Of Valve Guide
Courtesy of NISSAN MOTOR CO., U.S.A.

- If the calculated value exceeds the limit.
 - Replace valve (EXH) and/or valve guide (EXH). Refer to EXPLODED VIEW. (Exhaust side)
 - Replace VVEL ladder assembly & cylinder head assembly. Refer to EXPLODED VIEW. (Intake side)

NOTE: Since the valve (INT) and valve guide (INT) cannot be replaced by the piece, VVEL ladder assembly & cylinder head assembly replacement are required.

Valve Seat Contact

- After confirming that the dimensions of valve guides and valves are within the specifications, perform this procedure.
- Apply Prussian blue (or white lead) onto contacting surface of valve seat to check the condition of the valve contact on the surface.
- Check if the contact area band is continuous all around the circumference.

A : OK
B : NG

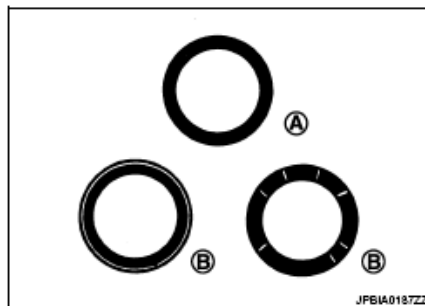


Fig. 196: Identifying Valve Seat Contact
Courtesy of NISSAN MOTOR CO., U.S.A.

- If not, grind to adjust valve fitting and check again. If the contacting surface still has "NG" conditions even after the re-check, replace valve seat (EXH). Refer to **EXPLODED VIEW**. (Exhaust side)
- If not, replace VVEL ladder assembly & cylinder head assembly. Refer to **EXPLODED VIEW**. (Intake side)

NOTE: Since the valve seat (INT) cannot be replaced by the piece, VVEL ladder assembly & cylinder head assembly replacement are required.

Valve Spring (with valve spring seat) Squareness

- Set a try square (A) along the side of valve spring (with valve spring seat) and rotate spring. Measure the maximum clearance between the top of spring and try square.

B : Contact

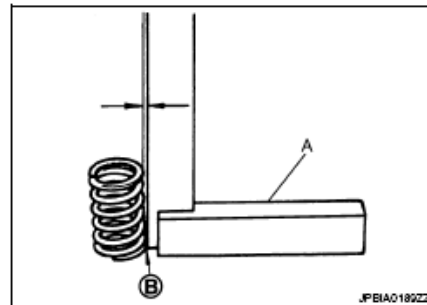


Fig. 197: Measuring Clearance Between Top Of Spring And Try Square
Courtesy of NISSAN MOTOR CO., U.S.A.

Limit: Refer to **CYLINDER HEAD**.

- If it exceeds the limit.
- Replace valve spring (with valve spring seat) (EXH). Refer to **EXPLODED VIEW**. (Exhaust side)
- Replace VVEL ladder assembly & cylinder head assembly. Refer to **EXPLODED VIEW**. (Intake side)

NOTE: Since the valve spring (with valve spring seat) (INT) cannot be replaced by the piece, VVEL ladder assembly & cylinder head assembly replacement are required.

Valve Spring Dimensions and Valve Spring Pressure Load

- Check the valve spring (with valve spring seat) pressure at specified spring height.

Standard: Refer to **CYLINDER HEAD**.

- If the installation load or load with valve open is out of the standard.
- Replace valve spring (with valve spring seat) (EXH). Refer to **EXPLODED VIEW**. (Exhaust side)

- Replace VVEL ladder assembly & cylinder head assembly. Refer to **EXPLODED VIEW**. (Intake side)

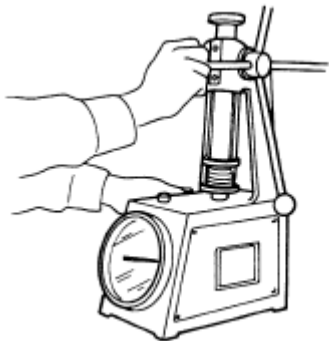


Fig. 198: Checking Valve Spring Dimensions And Valve Spring Pressure Load
Courtesy of NISSAN MOTOR CO., U.S.A.

NOTE: Since the valve spring (with valve spring seat) (INT) cannot be replaced by the piece, VVEL ladder assembly & cylinder head assembly replacement are required.

INSPECTION AFTER ASSEMBLY

Inspection for Leakage

The following are procedures for checking fluid leakage, lubricant leakage.

- Before starting engine, check oil/fluid levels including engine coolant and engine oil. If any are less than the required quantity, fill them to the specified level. Refer to **FLUIDS AND LUBRICANTS**.
- Follow the procedure below to check for fuel leakage.
 - Turn ignition switch to the "ON" position (with engine stopped). With fuel pressure applied to fuel piping, check for fuel leakage at connection points.
 - Start engine. With engine speed increased, check again for fuel leakage at connection points.
- Run engine to check for unusual noise and vibration.

NOTE: If hydraulic pressure inside chain tensioner drops after removal/installation, slack in guide may generate a pounding noise during and just after the engine start. However, this does not indicate a malfunction. The noise will stop after hydraulic pressure rises.

- Warm up engine thoroughly to check that there is no leakage of fuel, or any oil/fluids including engine oil and engine coolant.
- Bleed air from lines and hoses of applicable lines, such as in cooling system.
- After cooling down engine, again check oil/fluid levels including engine oil and engine coolant. Refill them to the specified level, if necessary.


Summary of the inspection items:

ENGINE OPERATION TABLE

| Items | Before starting engine | Engine running | After engine stopped |
|---|------------------------|----------------|----------------------|
| Engine coolant | Level | Leakage | Level |
| Engine oil | Level | Leakage | Level |
| Other oils and fluids ⁽¹⁾ | Level | Leakage | Level |
| Fuel | Leakage | Leakage | Leakage |
| (1) Transmission/transaxle/CVT fluid, power steering fluid, brake fluid, etc. | | | |

CYLINDER BLOCK**Exploded View**

| Symbol | Description |
|--------|-----------------------------------|
| | N·m (kg-m, ft-lb) |
| | N·m (kg-m, in-lb) |
| | Always replace after disassembly. |

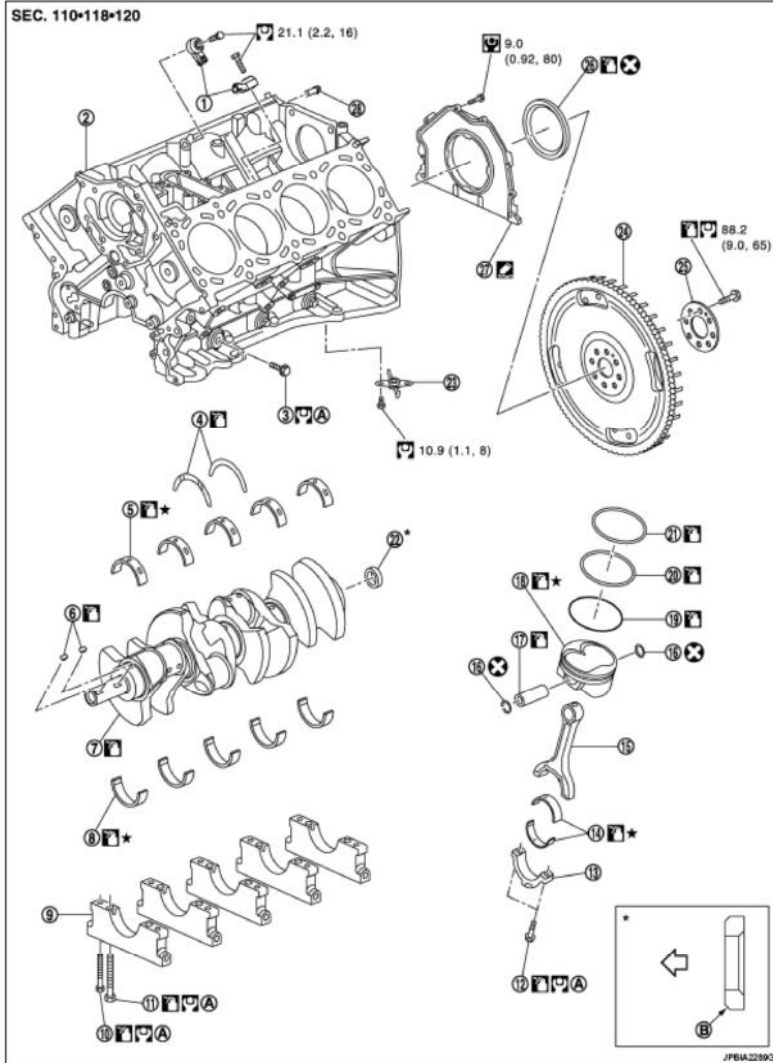

- | | | |
|-------------------------------|----------------------------|-----------------------------|
| 1. Knock sensor | 2. Cylinder block | 3. Side bolt |
| 4. Thrust bearing | 5. Main bearing (upper) | 6. Crankshaft key |
| 7. Crankshaft | 8. Main bearing (lower) | 9. Main bearing cap |
| 10. Main bearing cap sub bolt | 11. Main bearing cap bolt | 12. Connecting rod cap bolt |
| 13. Connecting rod cap | 14. Connecting rod bearing | 15. Connecting rod |
| 16. Snap ring | 17. Piston pin | 18. Piston |
| 19. Oil ring | 20. Second ring | 21. Top ring |
| 22. Pilot converter | 23. Piston oil jet | 24. Drive plate |
| 25. Reinforcement plate | 26. Rear oil seal | 27. Rear oil seal retainer |
- A. Refer to
B. Chamfered
- ← : Crankshaft side

Fig. 199: Exploded View Of Cylinder Block With Torque Specifications
Courtesy of NISSAN MOTOR CO., U.S.A.

Refer to **COMPONENTS** for symbol marks above.

Disassembly and Assembly**DISASSEMBLY**

1. Remove the following parts:
 - Oil pans (lower and upper): Refer to **EXPLODED VIEW**.
 - Front cover and timing chain: Refer to **EXPLODED VIEW**.
 - Cylinder head: Refer to **EXPLODED VIEW**.
2. Remove knock sensor.

CAUTION: Carefully handle knock sensor avoiding shocks.

3. Remove oil filter (for VVEL ladder assembly) from cylinder block, if necessary. Refer to **EXPLODED VIEW**.
4. Remove piston and connecting rod assembly as per the following:
 - Before removing piston and connecting rod assembly, check the connecting rod side clearance. Refer to **INSPECTION**.

CAUTION: Be careful not to drop connecting rod bearing, and to scratch the surface.

- a. Position crankshaft pin corresponding to connecting rod to be removed onto the bottom dead center.
- b. Loosen mounting bolts, and remove connecting rod bearing cap.
- c. Using a hammer handle (A) or similar tool, push piston and connecting rod assembly out to the cylinder head side.

CAUTION: Be careful not to damage the cylinder wall and crankshaft pin, resulting from an interference of the connecting rod big end.

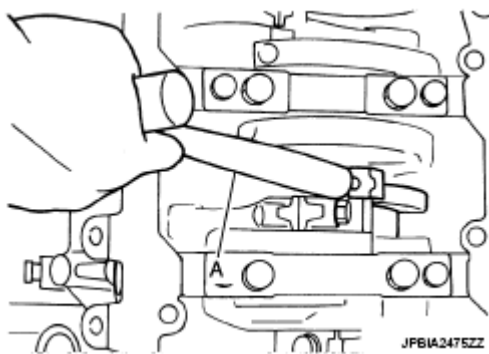


Fig. 200: Pushing Piston And Connecting Rod Assembly
Courtesy of NISSAN MOTOR CO., U.S.A.

5. Remove connecting rod bearings from connecting rod and connecting rod bearing cap.

CAUTION:

- Be careful not to drop connecting rod bearing, and to scratch the surface.
- Identify installation positions, and store them without mixing them up.

6. Remove piston rings from piston.

- Before removing piston rings, check the piston ring side clearance. Refer to **INSPECTION**.
- Use a piston ring expander (commercial service tool) (A).

CAUTION:

- When removing piston rings, be careful not to damage piston.
- Be careful not to damage piston rings by expanding them excessively.

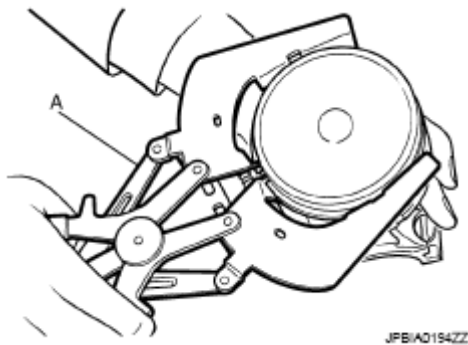


Fig. 201: View Of Piston Rings

Courtesy of NISSAN MOTOR CO., U.S.A.

7. Remove piston from connecting rod as per the following:
- a. Using snap ring pliers (A), remove snap rings.

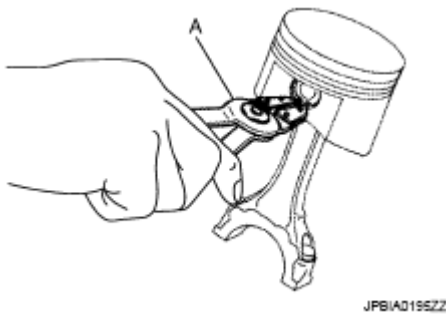


Fig. 202: View Of Snap Rings

Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Heat piston to 60 to 70°C (140 to 158°F) with an industrial use dryer (A) or an equivalent.

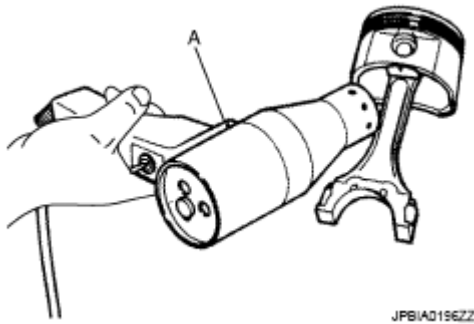


Fig. 203: Heating Piston

Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Push out piston pin using a stick that has an outer diameter of approximately 20 mm (0.79 in).

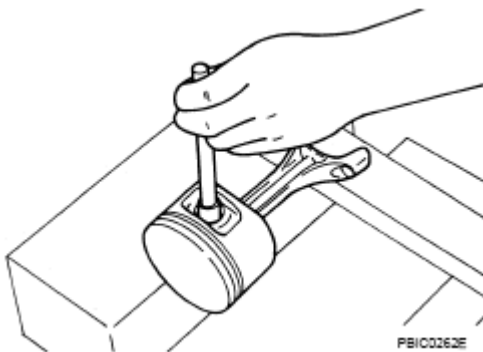


Fig. 204: Pushing Out Piston Pin

Courtesy of NISSAN MOTOR CO., U.S.A.

8. Remove rear oil seal and rear oil seal retainer assembly from cylinder block.
- Insert screwdriver or similar tool between rear end of crankshaft counter weight and rear oil seal retainer, and separate liquid gasket to remove.

CAUTION: Be careful not to damage the mating surfaces.

9. Using screwdriver or similar tool, and lever off rear oil seal from rear oil seal retainer.
10. Remove main bearing cap as per the following:
- Before loosening cylinder block bolts, measure the crankshaft end play. Refer to **INSPECTION**.
 - a. Loosen side bolts starting from No. 30 to 21 to remove.

← : Engine front

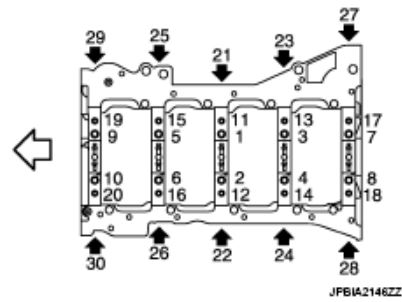


Fig. 205: Identifying Cylinder Block Mounting Bolts Loosening Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

- b. Loosen main bearing cap sub bolts starting from No. 20 to 11 to remove.
- c. Loosen main bearing cap bolts starting from No. 10 to 1 to remove.
- d. Remove the main bearing cap.
 - Insert bolts (1) into bolt holes, and then remove main bearing cap (2) by lifting up and shaking forward and backward.

CAUTION: Be careful not to damage the mounting surface.

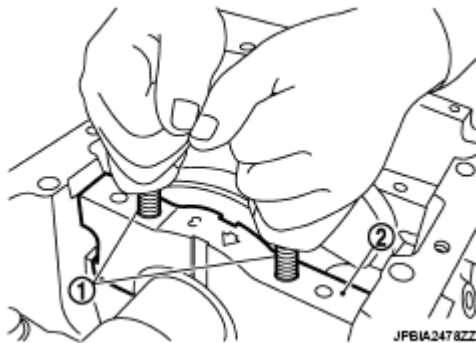


Fig. 206: View Of Removing Main Bearing Cap
Courtesy of NISSAN MOTOR CO., U.S.A.

11. Remove crankshaft.
12. Remove main bearings and thrust bearings from main bearing cap and cylinder block.

CAUTION:

- Be careful not to drop main bearing, and to scratch the surface.
- Identify installation positions, and store them without mixing them up.

13. Remove pilot converter using the pilot bushing puller (commercial service tool), if necessary.
14. Remove oil jet.

ASSEMBLY

1. Fully air-blow engine coolant and engine oil passages in cylinder block, cylinder bore and crankcase to remove any foreign material.

CAUTION: Use goggles to protect your eyes.

2. Install each plug to cylinder block as shown below.

⇐ : Engine front

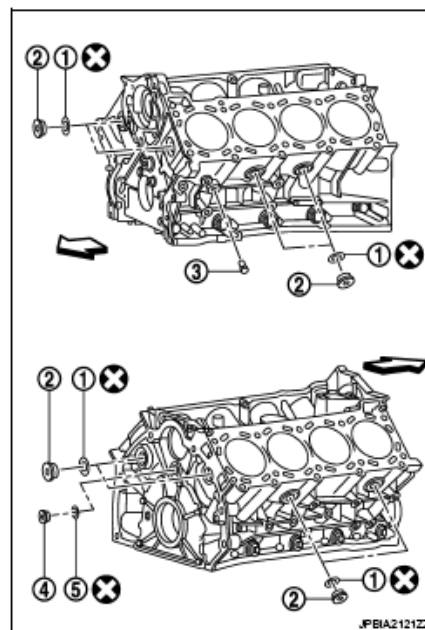


Fig. 207: Identifying Cylinder Block
Courtesy of NISSAN MOTOR CO., U.S.A.

- Tighten each plug as specified below.

TIGHTENING TORQUE SPECIFICATION

| Part | Tightening torque |
|----------------------|-------------------------------|
| Plug (2) | 78.0 N.m (8.0 kg-m, 58 ft-lb) |
| Water drain plug (3) | 19.6 N.m (2.0 kg-m, 14 ft-lb) |
| Plug (4) | 53.9 N.m (5.5 kg-m, 40 ft-lb) |

- Replace washers (1), (5) with new ones.
- Apply sealant to the thread of water drain plug (3).


Use Genuine RTV Silicone Sealant or an equivalent. Refer to RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS .

- Apply sealant to the thread of plug (4).

Use Genuine High Strength Thread Locking Sealant or an equivalent. Refer to RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS .

3. Install oil jet.

- Insert oil jet into cylinder block hole, and tighten the mounting bolt on the corner side (A) first.

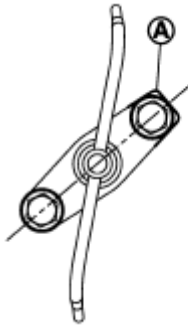

JPBIA2147ZZ

Fig. 208: Identifying Mounting Bolt On Corner Side
Courtesy of NISSAN MOTOR CO., U.S.A.

4. Install pilot converter to crankshaft, if removed.

- With drift [outer diameter: approx. 35 mm (1.38 in)], press-fit as far as it will go.



EMF0569D

Fig. 209: Identifying Crankshaft To Cylinder Block
Courtesy of NISSAN MOTOR CO., U.S.A.

- Press-fit pilot converter with its chamfering side facing crankshaft as shown below.

⇐ : Crankshaft side

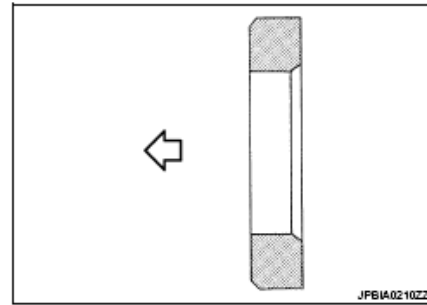


Fig. 210: Identifying Crankshaft Side
Courtesy of NISSAN MOTOR CO., U.S.A.

5. Install main bearings and thrust bearings as per the following:

CAUTION: Be careful not to drop main bearing, and to scratch the surface.

- Remove dust, dirt, and engine oil on bearing mating surfaces of cylinder block and main bearing caps.
- Install thrust bearings (2) to both sides of the No. 3 journal housing on cylinder block (1).

- 3 : Main bearing (upper) (cylinder block side)
4 : Crankshaft
5 : Main bearing (lower) (main bearing cap side)
⇐ : Engine front

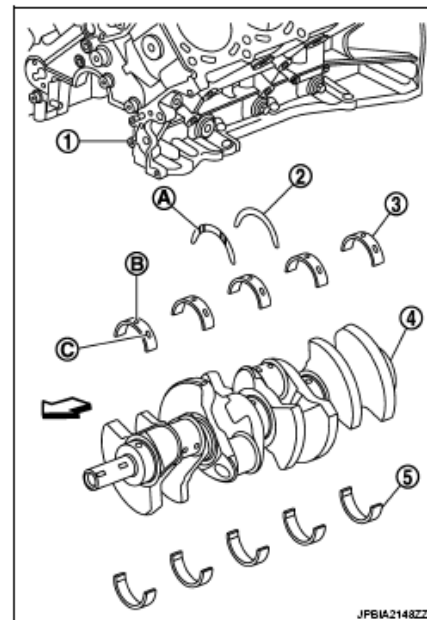


Fig. 211: Identifying Cylinder Block And Thrust Bearings
Courtesy of NISSAN MOTOR CO., U.S.A.

- Install thrust bearings with the oil groove (A) facing crankshaft arm (outside).
- Install main bearings paying attention to the direction.
 - Main bearing with oil hole (B) and groove (C) goes on cylinder block. The one without them

goes on main bearing cap.

- Before installing main bearings, apply engine oil to the bearing surface (inside). Do not apply engine oil to the back surface, but thoroughly clean it.
- When installing, align main bearing stopper protrusion to cutout of cylinder block and main bearing.
- Ensure the oil holes on cylinder block and those on the corresponding bearing are aligned.

6. Install crankshaft to cylinder block.

- While turning crankshaft by hand, check that it turns smoothly.

7. Install main bearing caps as per the following:

- Align the identification number to the journal position to install.

↩ : Engine front

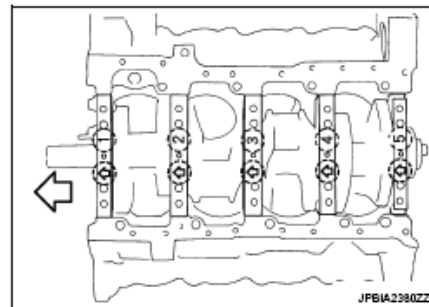


Fig. 212: Identifying Main Bearing Caps
Courtesy of NISSAN MOTOR CO., U.S.A.

- Install it with the front mark (indicated by stamping) facing the front of engine.
- Using plastic hammer or similar tool, tap them lightly to seat them on the installation position.

NOTE: Main bearing cap cannot be replaced as a single parts, because it is machined together with cylinder block.

8. Install each main bearing cap bolts as per the following:

CAUTION: If main bearing cap bolts and sub bolts are re-used, check their outer diameters before installation. Refer to INSPECTION.

- a. Apply new engine oil to threads and seat surfaces of main bearing cap bolts and sub bolts.
- b. Tighten all bolts in order of (No. 1 - 30) temporarily.

← : Engine front

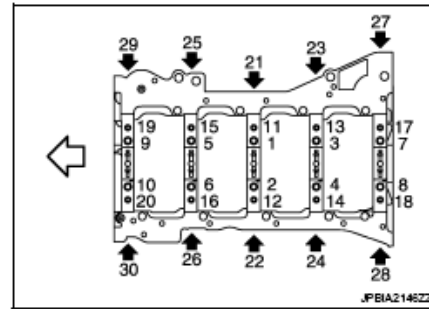


Fig. 213: Identifying Cylinder Block Bolts Tightening Sequence
Courtesy of NISSAN MOTOR CO., U.S.A.

- c. Tighten main bearing cap bolts (M12) in order of No. 1 - 10.

Torque Specifications: 53.9 N.m (5.5 kg-m, 40 ft-lb)

- d. Tighten main bearing cap sub bolts (M9) in order of No. 11 - 20.

Torque Specifications: 19.6 N.m (2.0 kg-m, 14 ft-lb)

- e. Tighten main bearing cap bolts (M12) in order of No. 1 - 10 (clockwise).

Angle tightening: 90 degrees

CAUTION: Use the angle wrench [SST: KV10112100 (BT8653-A)] (A) to check tightening angle. Never make judgment by visual inspection.

- f. Tighten main bearing cap sub bolts (M9) in order of No. 11 - 20. (clockwise)

Angle tightening: 90 degrees

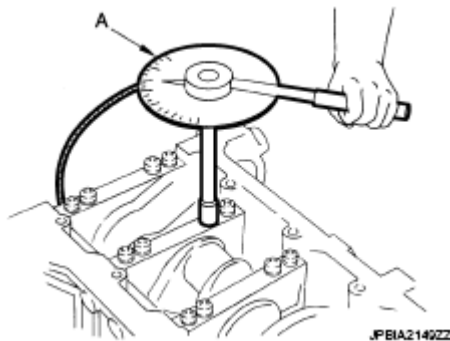


Fig. 214: Tightening Main Bearing Cap Sub Bolts
Courtesy of NISSAN MOTOR CO., U.S.A.

- g. Tighten side bolts (M10) in order of No. 21 - 30.

Torque Specifications: 49.0 N.m (5.0 kg-m, 36 ft-lb)

- After installing bolts, check that crankshaft can be rotated smoothly by hand.
- Check the crankshaft end play. Refer to **CYLINDER BLOCK**.

9. Install rear oil seal retainer.

- Apply a continuous bead of liquid gasket with tube presser (commercial service tool) to rear oil seal retainer as shown below.

- A : Protrusion
b : 4.0 - 5.6 mm (0.157 - 0.220 in)
c : ϕ 3.4 - 4.4 mm (0.134 - 0.173 in)

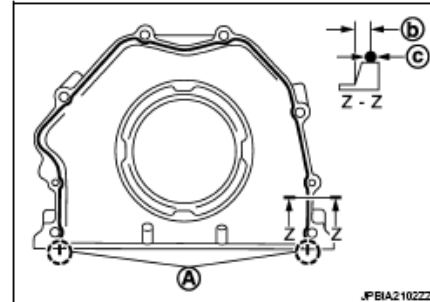


Fig. 215: Identifying Rear Oil Seal Retainer
Courtesy of NISSAN MOTOR CO., U.S.A.

Use Genuine RTV Silicone Sealant or an equivalent. Refer to RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS .

10. Install rear oil seal on rear oil seal retainer.

- ↶ : Engine inside
↷ : Engine outside

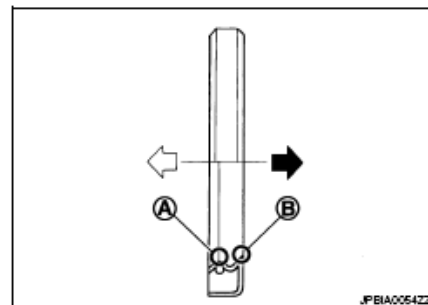


Fig. 216: Identifying Rear Oil Seal On Rear Oil Seal Retainer
Courtesy of NISSAN MOTOR CO., U.S.A.

- Apply new engine oil to both oil seal lip (A) and dust seal lip (B).
- Install it so that each seal lip is oriented as shown above.

CAUTION: Be careful not to scratch or make burrs on circumference of oil seal.

- Press in rear oil seal (1) to the position as shown below.

B : Rear oil seal retainer rear end face
a : 0 - 0.5 mm (0 - 0.020 in)

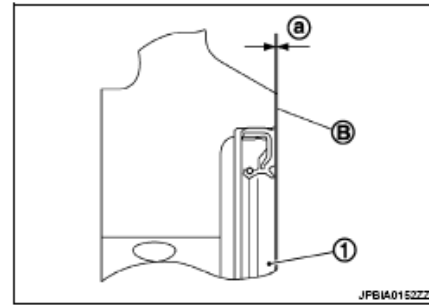


Fig. 217: Identifying Rear Oil Seal
Courtesy of NISSAN MOTOR CO., U.S.A.

- Using a suitable drift [outer diameter: 101 mm (3.98 in)].
 - Check the garter spring is in position and seal lips are not inverted.
11. Install piston to connecting rod as per the following:
- Assemble so that the front mark (A) on the piston head and the cylinder number (D) on connecting rod are positioned as shown below.

B : Oil hole
C : Front mark
↔ : Engine front

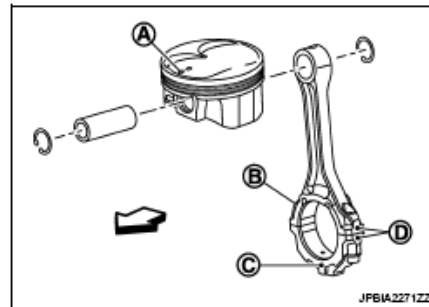


Fig. 218: Identifying Front Mark On Piston Head And Cylinder Number
Courtesy of NISSAN MOTOR CO., U.S.A.

- a. Using snap ring pliers, install new snap ring to the groove of piston rear side.
 - Insert it fully into groove to install.
 - b. Install piston to connecting rod.
 - Using an industrial use dryer or similar tool, heat piston until piston pin can be pushed in by hand without excess force [approximately 60 to 70°C (140 to 158°F)]. From the front to the rear, insert piston pin into piston and connecting rod.
 - c. Install new snap ring to the groove of the piston front side.
 - Insert it fully into groove to install.
 - After installing, check that connecting rod moves smoothly.
12. Using a piston ring expander (commercial service tool) (A), install piston rings.

CAUTION:

- When installing piston rings, be careful not to damage piston.
- Be careful not to damage piston rings by expending them

excessively.

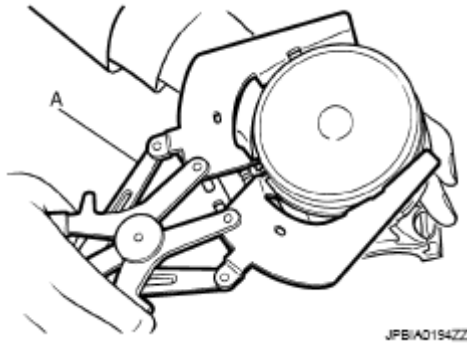


Fig. 219: View Of Piston Rings

Courtesy of NISSAN MOTOR CO., U.S.A.

- If there is stamped mark on ring, mount it with marked side up.

Stamped mark:

Top ring (A): 1 N

Second ring (B): 2 N

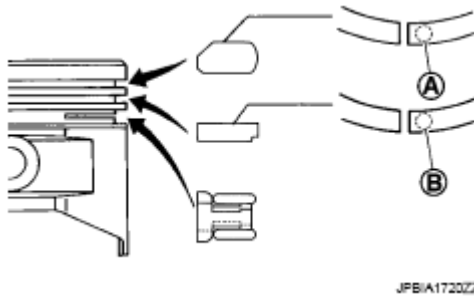


Fig. 220: Identifying Stamped Mark On Ring

Courtesy of NISSAN MOTOR CO., U.S.A.

- Position each ring with the gap as shown below referring to the piston front mark (D).

- a : 90 degrees
- b : 45 degrees
- C : Top ring gap
- E : Oil ring upper or lower rail gap (either of them)
- F : Second ring and oil ring spacer gap

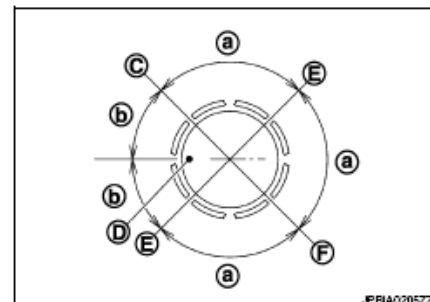


Fig. 221: Positioning Ring With Gap
Courtesy of NISSAN MOTOR CO., U.S.A.

- Check the piston ring side clearance. Refer to **INSPECTION**.
13. Install connecting rod bearings to connecting rod and connecting rod bearing cap.

CAUTION: Be careful not to drop connecting rod bearing, and to scratch the surface.

- Before installing connecting rod bearings, apply engine oil to the bearing surface (inside). Do not apply engine oil to the back surface, but thoroughly clean it.
- When installing, align connecting rod bearing stopper protrusion (B) with cutout (A) of connecting rods and connecting rod bearing caps to install.
- Ensure the oil hole (C) on connecting rod and that on the corresponding bearing are aligned.

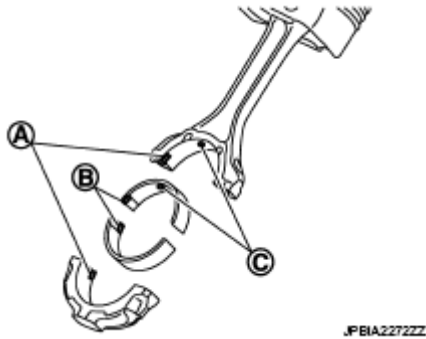


Fig. 222: Identifying Connecting Rod Bearings
Courtesy of NISSAN MOTOR CO., U.S.A.

14. Install piston and connecting rod assembly to crankshaft.
- Position crankshaft pin corresponding to connecting rod to be installed onto the bottom dead center.
 - Apply engine oil sufficiently to the cylinder bore, piston and crankshaft pin journal.
 - Match the cylinder position with the cylinder number on connecting rod to install.
 - Be sure that front mark on piston crown is facing the front of the engine.
 - Using a piston ring compressor [SST: EM03470000 (J-8037)] (A) or suitable tool, install piston with the front mark on the piston crown facing the front of the engine.

CAUTION: Be careful not to damage the cylinder wall and crankshaft pin, resulting from an interference of the connecting rod big end.

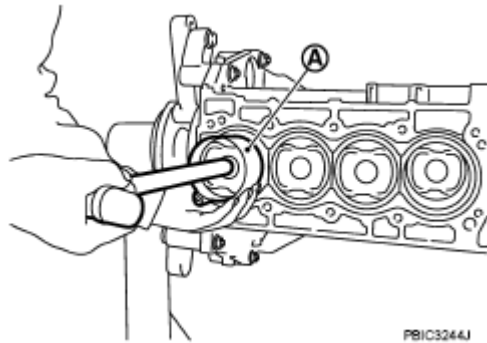


Fig. 223: Installing Piston Using Piston Ring Compressor
Courtesy of NISSAN MOTOR CO., U.S.A.

15. Install connecting rod bearing cap.

- Match the stamped cylinder number marks on connecting rod with those on connecting rod bearing cap to install.

- A : Sample codes
- B : Bearing stopper groove
- C : Small-end diameter grade
- D : Big-end diameter grade
- E : Weight grade
- F : Cylinder No.
- G : Management code

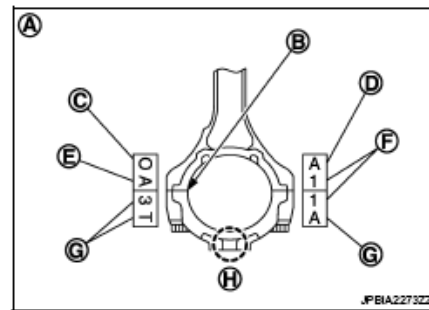


Fig. 224: Identifying Stamped Cylinder Number Marks On Connecting Rod
Courtesy of NISSAN MOTOR CO., U.S.A.

- Be sure that front mark (H) on connecting rod bearing cap is facing the front of the engine.

16. Tighten connecting rod bolts as per the following:

- Inspect the outer diameter of connecting rod bolt. Refer to **INSPECTION**.
- Apply engine oil to the threads and seats of connecting rod bolts.
- Tighten connecting rod bolts.

Torque Specifications: 28.4 N.m (2.9 kg-m, 21 ft-lb)

- Completely loosen connecting rod bolts.

Torque Specifications: 0 N.m (0 kg-m, 0 ft-lb)

- Tighten connecting rod bolts.

Torque Specifications: 24.5 N.m (2.5 kg-m, 18 ft-lb)

- f. Tighten connecting rod bolts. (clockwise)

Angle tightening: 90 degrees

CAUTION: Always use the angle wrench [SST: KV10112100 (BT8653-A)]. Never make judgment by visual inspection.

- After tightening connecting rod bolts, check that crankshaft rotates smoothly.
- Check the connecting rod side clearance. Refer to **INSPECTION**.

17. Install knock sensors.

- Install knock sensors in the direction shown below.

↔ : Engine front

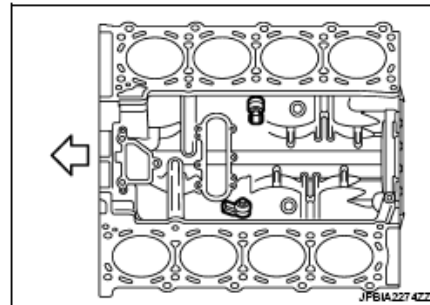


Fig. 225: Identifying Knock Sensors
Courtesy of NISSAN MOTOR CO., U.S.A.

- After installing knock sensor, connect harness connector, and lay it out to front of the engine.

CAUTION:

- Never tighten mounting bolts while holding connector.
- If any impact by dropping is applied to knock sensor, replace it with new one.

NOTE:

- Check that there is no foreign material on the cylinder block mating surface and the back surface of knock sensor.
- Check that knock sensor does not interfere with other parts.

18. Install oil filter (for VVEL ladder assembly).

19. Install drive plate.

- Install drive plate (4) and reinforcement plate (3) as shown below.

- 2 : Pilot converter
A : Rounded
← : Engine front

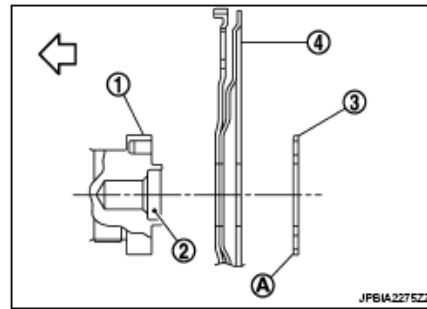


Fig. 226: Identifying Drive Plate And Reinforcement Plate
Courtesy of NISSAN MOTOR CO., U.S.A.

- When installing drive plate to crankshaft (1), be sure to correctly align crankshaft side dowel pin and drive plate side dowel pin hole.

CAUTION: If these are not aligned correctly, engine runs roughly and "MIL" illuminates.

- Holding ring gear with the ring gear stopper [SST: KV10119200 (J-49277)].
- Tighten the mounting bolts crosswise over several times.

20. Assemble in the reverse order of disassembly.

Inspection

CRANKSHAFT END PLAY

- Measure the clearance between thrust bearings and crankshaft arm when crankshaft is moved fully forward or backward with a dial indicator (A).

Standard and limit: Refer to CYLINDER BLOCK.

- If the measured value exceeds the limit, replace thrust bearings, and measure again. If it still exceeds the limit, replace crankshaft also.

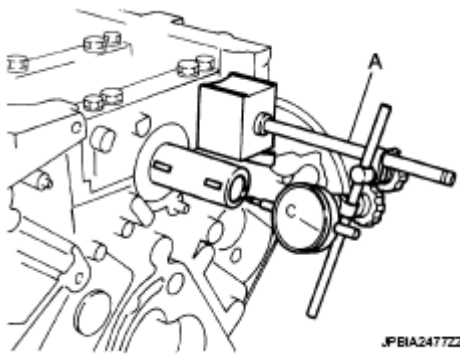


Fig. 227: Measuring Clearance Between Thrust Bearings And Crankshaft Arm

Courtesy of NISSAN MOTOR CO., U.S.A.

CONNECTING ROD SIDE CLEARANCE

- Measure the side clearance between connecting rod and crankshaft arm with a feeler gauge (A).

Standard and limit: Refer to CYLINDER BLOCK.

- If the measured value exceeds the limit, replace connecting rod, and measure again. If it still exceeds the limit, replace crankshaft also.

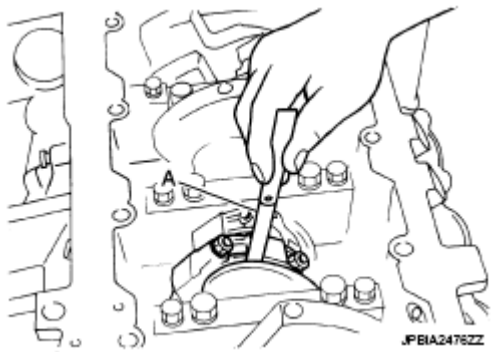


Fig. 228: Measuring Side Clearance Between Connecting Rod And Crankshaft Arm
Courtesy of NISSAN MOTOR CO., U.S.A.

PISTON TO PISTON PIN OIL CLEARANCE

Piston Pin Hole Diameter

Measure the inner diameter of piston pin hole with an inside micrometer (A).

Standard: Refer to CYLINDER BLOCK.

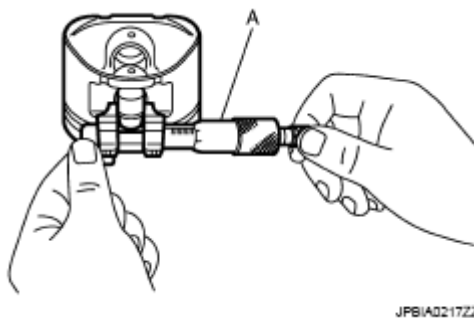


Fig. 229: Measuring Inner Diameter Of Piston Pin Hole
Courtesy of NISSAN MOTOR CO., U.S.A.

Piston Pin Outer Diameter

Measure the outer diameter of piston pin with a micrometer (A).

Standard: Refer to CYLINDER BLOCK.

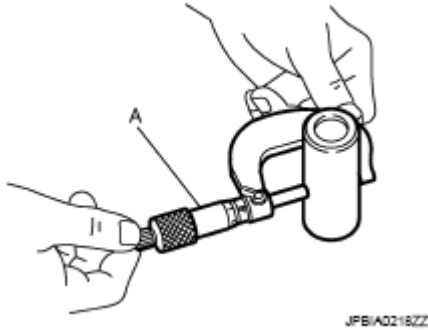


Fig. 230: Measuring Outer Diameter Of Piston Pin
Courtesy of NISSAN MOTOR CO., U.S.A.

Piston to Piston Pin Oil Clearance

$(\text{Piston to piston pin oil clearance}) = (\text{Piston pin hole diameter}) - (\text{Piston pin outer diameter})$

Standard: Refer to CYLINDER BLOCK.

- If the calculated value is out of the standard, replace piston and piston pin assembly.
- When replacing piston and piston pin assembly, refer to DESCRIPTION.

NOTE: Piston is available together with piston pin as assembly.

PISTON RING SIDE CLEARANCE

- Measure the side clearance of piston ring (1) and piston ring groove with a feeler gauge (C).

A : OK
B : NG

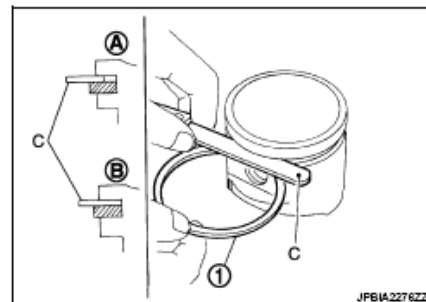


Fig. 231: Measuring Side Clearance Of Piston Ring And Piston Ring Groove
Courtesy of NISSAN MOTOR CO., U.S.A.

Standard and limit: Refer to CYLINDER BLOCK.

- If the measured value exceeds the limit, replace piston ring, and measure again. If it still exceeds the limit, replace piston also.

PISTON RING END GAP

- Check that the cylinder bore inner diameter is within the specification.
- Lubricate with new engine oil to piston (1) and piston ring (2), and then insert piston ring until middle of cylinder with piston, and measure the piston ring end gap with a feeler gauge (B).

A : Press-fit

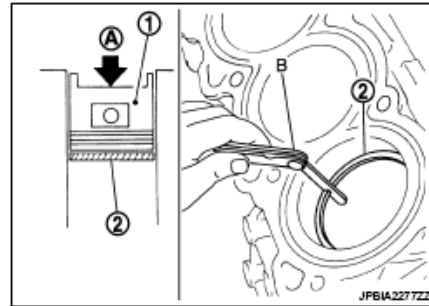


Fig. 232: Checking Piston Ring End Gap
Courtesy of NISSAN MOTOR CO., U.S.A.

Standard and limit: Refer to CYLINDER BLOCK.

- If the measured value exceeds the limit, replace piston ring, and measure again. If it still exceeds the limit, re-bore cylinder and use oversize piston and piston rings.

CONNECTING ROD BEND AND TORSION

- Check with a connecting rod aligner.

- A : Bend
B : Torsion
C : Feeler gauge

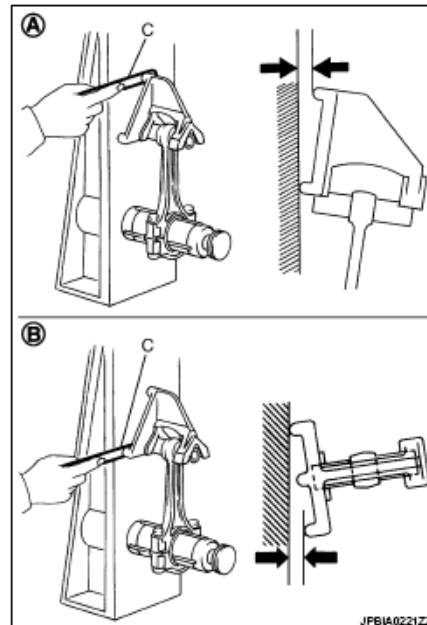


Fig. 233: Checking Connecting Rod Aligner
Courtesy of NISSAN MOTOR CO., U.S.A.

Bend limit Torsion limit: Refer to **CYLINDER BLOCK**.

- If it exceeds the limit, replace connecting rod assembly.

CONNECTING ROD BIG END DIAMETER

- Install connecting rod bearing cap without installing connecting rod bearing, and tighten connecting rod bolts to the specified torque. Refer to **DISASSEMBLY AND ASSEMBLY** for the tightening procedure.

- 1 : Connecting rod

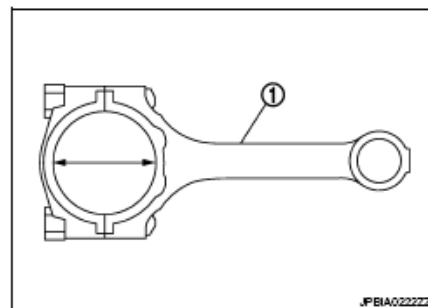


Fig. 234: Identifying Connecting Rod
Courtesy of NISSAN MOTOR CO., U.S.A.

- Measure the inner diameter of connecting rod big end with an inside micrometer.

Standard: Refer to **CYLINDER BLOCK.**

- If out of the standard, replace connecting rod assembly.

CONNECTING ROD BUSHING OIL CLEARANCE**Connecting Rod Bushing Inner Diameter**

Measure the inner diameter of connecting rod bushing with an inside micrometer (A).

Standard: Refer to CYLINDER BLOCK.

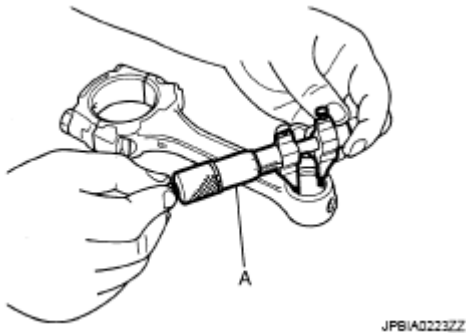


Fig. 235: Measuring Inner Diameter Of Connecting Rod Bushing
Courtesy of NISSAN MOTOR CO., U.S.A.

Piston Pin Outer Diameter

Measure the outer diameter of piston pin with a micrometer (A).

Standard: Refer to CYLINDER BLOCK.

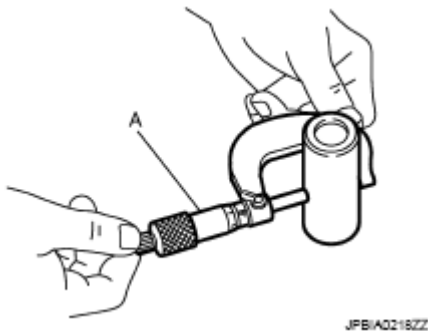


Fig. 236: Measuring Outer Diameter Of Piston Pin
Courtesy of NISSAN MOTOR CO., U.S.A.

Connecting Rod Bushing Oil Clearance

$(\text{Connecting rod bushing oil clearance}) = (\text{Connecting rod bushing inner diameter}) - (\text{Piston pin outer diameter})$

Standard and limit: Refer to CYLINDER BLOCK.

- If the calculated value exceeds the limit, replace connecting rod assembly and/or piston and piston pin

assembly.

- If replacing piston and piston pin assembly, refer to **DESCRIPTION**.
- If replacing connecting rod assembly, refer to **CONNECTING ROD BEARING** to select the connecting rod bearing.

CYLINDER BLOCK DISTORTION

- Using a scraper, remove gasket on the cylinder block surface, and also remove engine oil, scale, carbon, or other contamination.

CAUTION: Be careful not to allow gasket flakes to enter engine oil or engine coolant passages.

- Measure the distortion on the cylinder block upper face at some different points in six directions (C, D, E, F, G and H) with a straightedge (A) and a feeler gauge (B).

Limit: Refer to **CYLINDER BLOCK**.

- If it exceeds the limit, replace cylinder block.

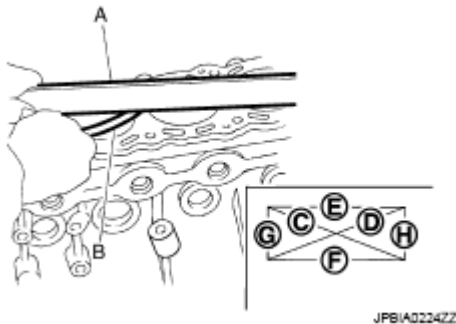


Fig. 237: Measuring Distortion On Cylinder Block Upper Face
Courtesy of NISSAN MOTOR CO., U.S.A.


MAIN BEARING HOUSING INNER DIAMETER

- Install main bearing cap (2) without installing main bearings, and tighten main bearing cap bolts to the specified torque. Refer to **DISASSEMBLY AND ASSEMBLY** for the tightening procedure.
- Measure the inner diameter of main bearing housing with a bore gauge.

Standard: Refer to **CYLINDER BLOCK**.

- If out of the standard, replace cylinder block (1) and main bearing cap as assembly.

NOTE: Cylinder block cannot be replaced as a single part, because it is machined together with main bearing cap.

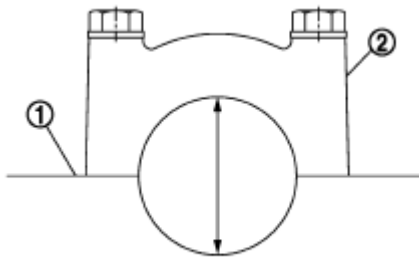

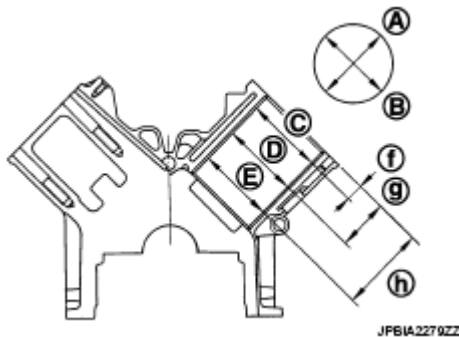
JPBIA0225ZZ

Fig. 238: Identifying Main Bearing Housing Inner Diameter

Courtesy of NISSAN MOTOR CO., U.S.A.

PISTON TO CYLINDER BORE CLEARANCE**Cylinder Bore Inner Diameter**

- Using a bore gauge, measure cylinder bore for wear, out-of-round and taper at six different points on each cylinder. [(A) and (B) directions at (C), (D) and (E)] is in longitudinal direction of engine.

f: 10 mm (0.39 in)**g: 60 mm (2.36 in)****h: 120 mm (4.72 in)**

JPBIA2279ZZ

Fig. 239: Identifying Cylinder Bore Inner Diameter

Courtesy of NISSAN MOTOR CO., U.S.A.

Wear limit:**Out-of-round (Difference between "A" and "B"):** Refer to CYLINDER BLOCK.**Taper limit (Difference between "C" and "E"):**

- If the measured value exceeds the limit, or if there are scratches and/or seizure on the cylinder inner wall, hone or re-bore the inner wall.
- Oversize piston is provided. When using oversize piston, re-bore cylinder so that the clearance of the

piston-to-cylinder bore satisfies the standard.

CAUTION: When using oversize piston, use oversize pistons for all cylinders with oversize piston rings.

Oversize (O/S): 0.2 mm (0.008 in)

Piston Skirt Diameter

Measure the outer diameter of piston skirt with a micrometer (A).

Measure point Standard: Refer to CYLINDER BLOCK.

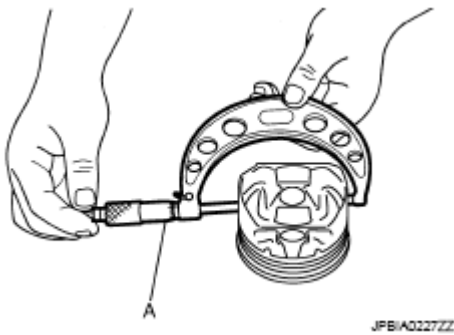


Fig. 240: Measuring Outer Diameter Of Piston Skirt
Courtesy of NISSAN MOTOR CO., U.S.A.

Piston-to-Cylinder Bore Clearance

Calculate by piston skirt diameter and cylinder bore inner diameter [direction (B), position (D)].

(Clearance) = (Cylinder bore inner diameter) - (Piston skirt diameter).

Standard and limit: Refer to CYLINDER BLOCK.

- If the calculated value exceeds the limit, replace piston and piston pin assembly. Refer to CYLINDER BLOCK.

Re-boring Cylinder Bore

1. Cylinder bore size is determined by adding piston to cylinder bore clearance to piston skirt diameter.

Re-bored size calculation: $D = A + B - C$

where,

D: Bored diameter

A: Piston skirt diameter as measured

B: Piston to cylinder bore clearance (standard value)

C: Honing allowance 0.02 mm (0.0008 in)

2. Install main bearing cap, and tighten to the specified torque. Otherwise, cylinder bores may be distorted in final assembly.
3. Cut cylinder bores.

NOTE:

- **When any cylinder needs boring, all other cylinders must also be bored.**
- **Do not cut too much out of cylinder bore at a time. Cut only 0.05 mm (0.0020 in) or so in diameter at a time.**

4. Hone cylinders to obtain the specified piston to cylinder bore clearance.
5. Measure finished cylinder bore for the out-of-round and taper.

NOTE: Perform measurement after cylinder bore cools down.

CRANKSHAFT MAIN JOURNAL DIAMETER

- Measure the outer diameter of crankshaft main journals with a micrometer.

Standard: Refer to CYLINDER BLOCK.

- If out of the standard, measure the main bearing oil clearance. Then use undersize bearing. Refer to MAIN BEARING.

CRANKSHAFT PIN JOURNAL DIAMETER

- Measure the outer diameter of crankshaft pin journal with a micrometer (A).

Standard: Refer to CYLINDER BLOCK.

- If out of the standard, measure the connecting rod bearing oil clearance. Then use undersize bearing. Refer to CONNECTING ROD BEARING.

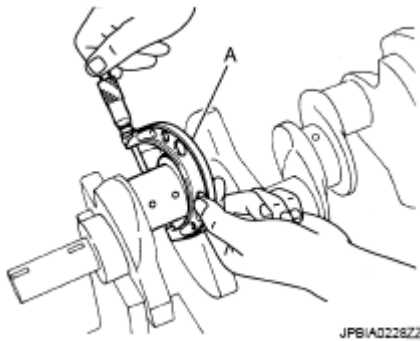


Fig. 241: Measuring Outer Diameter Of Crankshaft Pin Journal
 Courtesy of NISSAN MOTOR CO., U.S.A.

CRANKSHAFT OUT-OF-ROUND AND TAPER

- Measure the dimensions at four different points as shown below on each main journal and pin journal with a micrometer.
- Out-of-round is indicated by the difference in the dimensions between (d) and (c) at (a) and (b).
- Taper is indicated by the difference in the dimensions between.

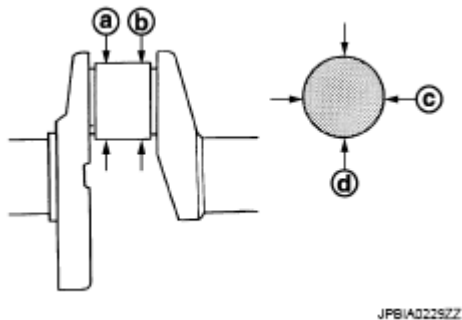


Fig. 242: Identifying Crankshaft Out-Of-Round And Taper
 Courtesy of NISSAN MOTOR CO., U.S.A.

Out-of-round (Difference between "c" and "d") Taper (Difference between "a" and "b"): Refer to CYLINDER BLOCK.

- If the measured value exceeds the limit, correct or replace crankshaft.
- If corrected, measure the bearing oil clearance of the corrected main journal and/or pin journal. Then select the main bearing and/or connecting rod bearing. Refer to MAIN BEARING and/or CONNECTING ROD BEARING.

CRANKSHAFT RUNOUT

- Place V-block on precise flat table, and support the journals on both ends of crankshaft.
- Place a dial indicator straight up on the No. 3 journal.
- While rotating crankshaft, read the movement of the pointer on a dial indicator. (Total indicator reading)

Standard and limit: Refer to CYLINDER BLOCK.

- If it exceeds the limit, replace crankshaft.

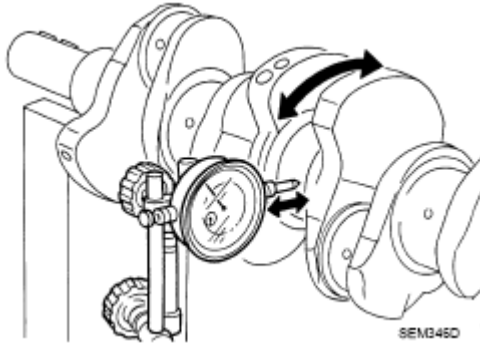


Fig. 243: Checking Crankshaft Runout
Courtesy of NISSAN MOTOR CO., U.S.A.

CONNECTING ROD BEARING OIL CLEARANCE

Method by Calculation

- Install connecting rod bearings (1) to connecting rod (2) and connecting rod cap, and tighten connecting rod bolts to the specified torque. Refer to DISASSEMBLY AND ASSEMBLY for the tightening procedure.

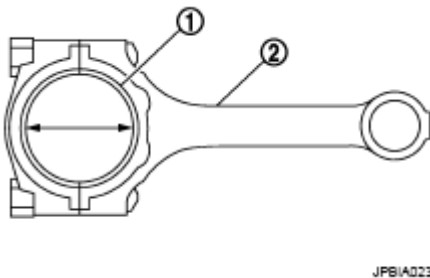


Fig. 244: Identifying Connecting Rod Bearings To Connecting Rod
Courtesy of NISSAN MOTOR CO., U.S.A.

- Measure the inner diameter of connecting rod bearing with an inside micrometer.

(Oil clearance) = (Connecting rod bearing inner diameter) - (Crankshaft pin journal diameter)

Standard and limit: Refer to CONNECTING ROD BEARING.

- If the calculated value exceeds the limit, select proper connecting rod bearing according to connecting rod big end diameter and crankshaft pin journal diameter to obtain the specified bearing oil clearance. Refer to DESCRIPTION.

Method of Using Plastigage

- Remove oil and dust on crankshaft pin journal and the surfaces of each bearing completely.
- Cut a plastigage slightly shorter than the bearing width, and place it in crankshaft axial direction, avoiding oil holes.
- Install connecting rod bearings to connecting rod and connecting rod bearing cap, and tighten connecting rod bolts to the specified torque. Refer to **DISASSEMBLY AND ASSEMBLY** for the tightening procedure.

CAUTION: Never rotate crankshaft.

- Remove connecting rod bearing cap and bearings, and using the scale on the plastigage bag, measure the plastigage width.

NOTE: The procedure when the measured value exceeds the limit is the same as that described in the Method by Calculation under **MAIN BEARING OIL CLEARANCE**.

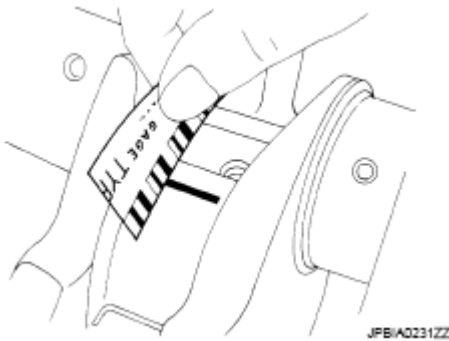


Fig. 245: Measuring Plastigage Width
Courtesy of NISSAN MOTOR CO., U.S.A.

MAIN BEARING OIL CLEARANCE

Method by Calculation


- Install main bearings (3) to cylinder block (1) and main bearing cap (2), and tighten main bearing cap bolts to the specified torque. Refer to **DISASSEMBLY AND ASSEMBLY** for the tightening procedure.
- Measure the inner diameter of main bearing with a bore gauge.

(Oil clearance) = (Main bearing inner diameter) - (Crankshaft main journal diameter)

Standard and limit: Refer to MAIN BEARING.

- If the calculated value exceeds the limit, select proper main bearing according to main bearing inner

diameter and crankshaft main journal diameter to obtain the specified bearing oil clearance. Refer to **DESCRIPTION**.

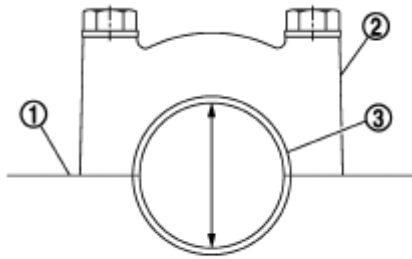

JFBI/A0232ZZ

Fig. 246: Identifying Main Bearing Inner Diameter
 Courtesy of NISSAN MOTOR CO., U.S.A.

Method of Using Plastigage

- Remove engine oil and dust on crankshaft journal and the surfaces of each bearing completely.
- Cut a plastigage slightly shorter than the bearing width, and place it in crankshaft axial direction, avoiding oil holes.
- Install main bearing to cylinder block and main bearing cap, and tighten main bearing cap bolts with main bearing cap to the specified torque. Refer to **DISASSEMBLY AND ASSEMBLY** for the tightening procedure.

CAUTION: Never rotate crankshaft.

- Remove main bearing cap and bearings, and using the scale on the plastigage bag, measure the plastigage width.

NOTE: The procedure when the measured value exceeds the limit is the same as that described in the Method by Calculation under **CONNECTING ROD BEARING OIL CLEARANCE**.

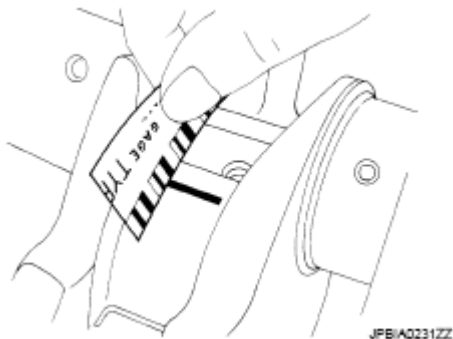


Fig. 247: Measuring Plastigage Width

Courtesy of NISSAN MOTOR CO., U.S.A.

MAIN BEARING CRUSH HEIGHT

- When main bearing cap is removed after being tightened to the specified torque with main bearings (1) installed, the tip end of bearing must protrude. Refer to **DISASSEMBLY AND ASSEMBLY** for the tightening procedure.

A : Crush height

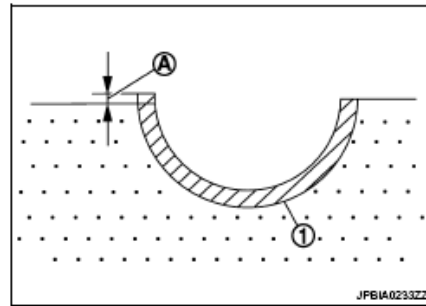


Fig. 248: Identifying Main Bearing Crush Height
Courtesy of NISSAN MOTOR CO., U.S.A.

Standard: There must be crush height.

- If the standard is not met, replace main bearings.

CONNECTING ROD BEARING CRUSH HEIGHT

- When connecting rod bearing cap is removed after being tightened to the specified torque with connecting rod bearings (1) installed, the tip end of bearing must protrude. Refer to **DISASSEMBLY AND ASSEMBLY** for the tightening procedure.

A : Crush height

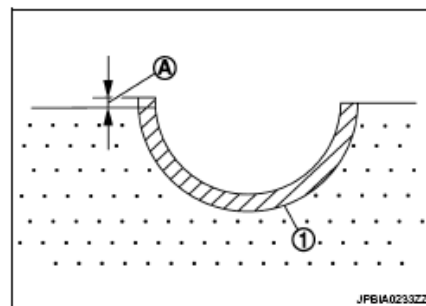


Fig. 249: Identifying Connecting Rod Bearing Crush Height
Courtesy of NISSAN MOTOR CO., U.S.A.

Standard: There must be crush height.

- If the standard is not met, replace connecting rod bearings.

MAIN BEARING CAP BOLT OUTER DIAMETER

- Measure the outer diameters (A), (B) at two positions as shown below.

c : 20 mm (0.79 in)
d : 40 mm (1.57 in)
e : 12 mm (0.47 in)

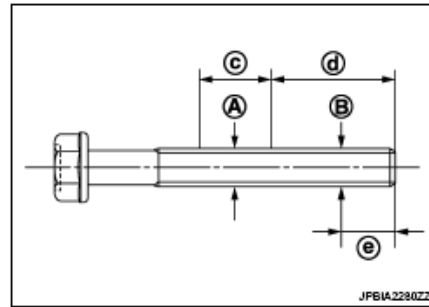


Fig. 250: Identifying Main Bearing Cap Bolt Outer Diameter
Courtesy of NISSAN MOTOR CO., U.S.A.

- If reduction appears in (A) range, regard it (B).

Limit [(B) - (A)]: 0.18 mm (0.0071 in)

- If it exceeds the limit (large difference in dimensions), replace main bearing cap bolts with new one.

MAIN BEARING CAP SUB BOLT OUTER DIAMETER

- Measure the outer diameters (A), (B) at two positions as shown below.

c : 20 mm (0.79 in)
d : 50 mm (1.97 in)
e : 9 mm (0.35 in)

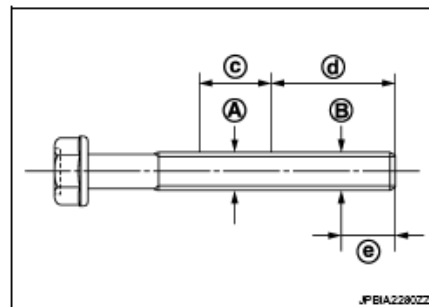


Fig. 251: Identifying Main Bearing Cap Sub Bolt Outer Diameter
Courtesy of NISSAN MOTOR CO., U.S.A.

- If reduction appears in (A) range, regard it (B).

Limit [(B) - (A)]: 0.13 mm (0.0051 in)

- If it exceeds the limit (large difference in dimensions), replace main bearing cap sub bolts with new one.

CONNECTING ROD BOLT OUTER DIAMETER

1. Measure the outer diameters [(a), (b) and (c)] at the position shown below.

- a : Value at the end of the smaller diameter of the bolt
 b : Value at the end of the smaller diameter of the bolt [opposite side of (a)]
 c : Value of the smallest diameter of the smaller of the bolt

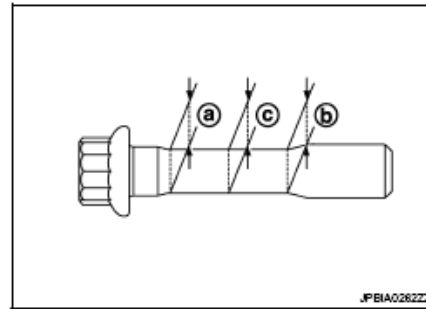


Fig. 252: Identifying Connecting Rod Bolt Outer Diameter
 Courtesy of NISSAN MOTOR CO., U.S.A.

2. Obtain a mean value (d) of (a) and (b).
3. Subtract (c) from (d).

Limit [(d) - (c)]: 0.09 mm (0.0035 in)

4. If it exceeds the limit (large difference in dimensions), replace the bolt with new one.

DRIVE PLATE

- Check drive plate and signal plate (A) for deformation or damage.

- B : Ring gear
 ⇐ : Engine front

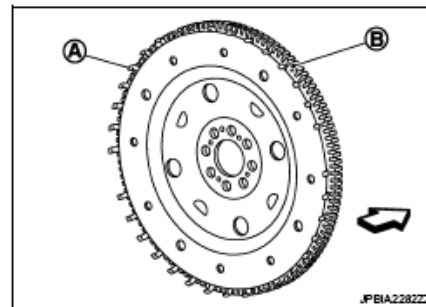


Fig. 253: Identifying Drive Plate And Signal Plate
 Courtesy of NISSAN MOTOR CO., U.S.A.

CAUTION:

- Never disassemble drive plate.
- Never place drive plate with signal plate facing down.
- When handling signal plate, take care not to damage or scratch it.
- Handle signal plate in a manner that prevents it from becoming magnetized.

- If damage is found, replace drive plate.

OIL JET

- Check nozzle for deformation and damage.
- Blow compressed air from nozzle, and check for clogs.
- Using a clean plastic stick, press check valve in oil jet relief valve. Check that valve moves smoothly with proper reaction force.
- If it is not satisfied, clean or replace oil jet.

HOW TO SELECT PISTON AND BEARING

Description

SELECTION METHODS TABLE

| Selection points | Selection parts | Selection items | Selection methods |
|---------------------------------------|---|--|--|
| Between cylinder block and crankshaft | Main bearing | Main bearing grade (bearing thickness) | Determined by match of cylinder block bearing housing grade (inner diameter of housing) and crankshaft journal grade (outer diameter of journal) |
| Between crankshaft and connecting rod | Connecting rod bearing | Connecting rod bearing grade (bearing thickness) | Determined by match of connecting rod big end diameter grade (inner diameter of housing) and crankshaft pin outer diameter. |
| Between cylinder block and piston | Piston and piston pin assembly. Piston is available together with piston pin as assembly. | Piston grade (piston skirt diameter) | Piston grade = cylinder bore grade (inner diameter of bore) |

- The identification grade stamped on each part is the grade for the dimension measured in new condition. This grade cannot apply to reused parts.
- For reused or repaired parts, measure the dimension accurately. Determine the grade by comparing the measurement with the values of each selection table.
- For details of the measurement method of each part, the reuse standards and the selection method of the selective fitting parts, refer to the text.

Piston

WHEN NEW CYLINDER BLOCK IS USED

Check the cylinder bore grade ("1", "2" or "3") on rear side of cylinder block, and select piston of the same grade.

- A : Bearing housing grade No. 1
 B : Bearing housing grade No. 2
 C : Bearing housing grade No. 3
 D : Bearing housing grade No. 4
 E : Bearing housing grade No. 5
 F : Cylinder bore grade No. 1
 G : Cylinder bore grade No. 2
 H : Cylinder bore grade No. 3
 I : Cylinder bore grade No. 4
 J : Cylinder bore grade No. 5
 K : Cylinder bore grade No. 6
 L : Cylinder bore grade No. 7
 M : Cylinder bore grade No. 8
 ⇐ : Engine front

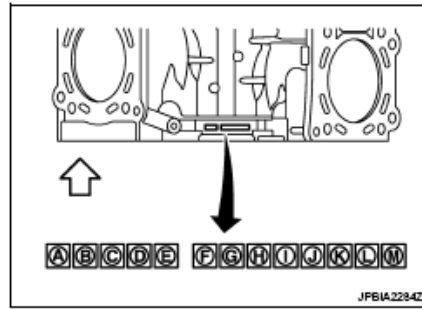


Fig. 254: Identifying Bearing Housing Grade Number
 Courtesy of NISSAN MOTOR CO., U.S.A.

NOTE: Piston is available with piston pin as a set for the service part.

WHEN NEW CYLINDER BLOCK IS REUSED

1. Measure the cylinder bore inner diameter. Refer to **CYLINDER BLOCK**.
2. Determine the bore grade by comparing the measurement with the values under the cylinder bore inner diameter of the "PISTON SELECTION TABLE".

- A : Bank 2
 B : Bank 1
 C : Front mark
 D : Piston grade number
 E : Piston pin grade number
 F : Identification code

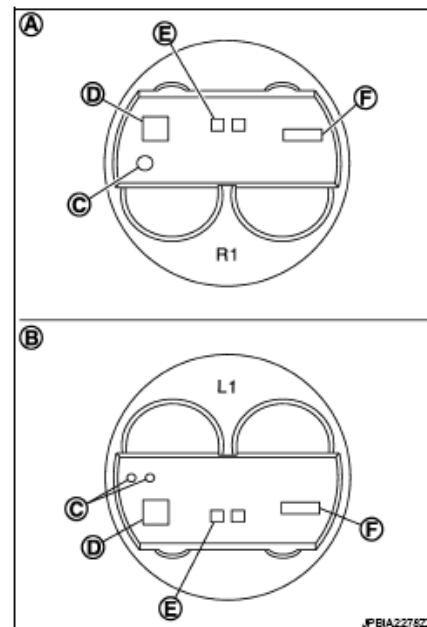


Fig. 255: Identifying Piston Grade Number
 Courtesy of NISSAN MOTOR CO., U.S.A.

3. Select piston of the same grade.

PISTON SELECTION TABLE**PISTON SELECTION TABLE**

| Unit: mm (in) | | | |
|------------------------------|-----------------------------------|-----------------------------------|-----------------------------------|
| Grade | 1 | 2 | 3 |
| Cylinder bore inner diameter | 95.500 - 95.510 (3.7598 - 3.7602) | 95.510 - 95.520 (3.7602 - 3.7606) | 95.520 - 95.530 (3.7606 - 3.7610) |
| Piston skirt diameter | 95.480 - 95.490 (3.7590 - 3.7594) | 95.490 - 95.500 (3.7594 - 3.7598) | 95.500 - 95.510 (3.7598 - 3.7602) |

NOTE: Piston is available together with piston pin as assembly.

Connecting Rod Bearing**WHEN NEW CONNECTING ROD AND CRANKSHAFT ARE USED**

1. Apply connecting rod big end diameter grade stamped (D) on connecting rod side face to the row in the "CONNECTING ROD BEARING SELECTION TABLE".

- A : Sample codes
 B : Bearing stopper groove
 C : Small-end diameter grade
 E : Weight grade
 F : Cylinder No.
 G : Management code
 H : Front mark

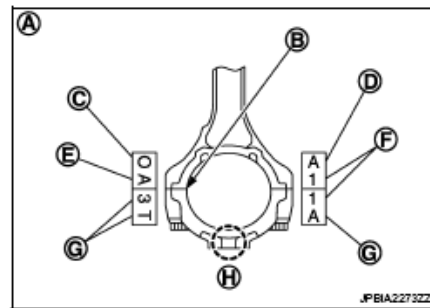


Fig. 256: Identifying Connecting Rod Big End Diameter Grade Stamped
 Courtesy of NISSAN MOTOR CO., U.S.A.

2. Apply crankshaft pin journal diameter grade stamped on crankshaft front side to the column in the "CONNECTING ROD BEARING SELECTION TABLE"

- A : Pin diameter grade No. 1
- B : Pin diameter grade No. 2
- C : Pin diameter grade No. 3
- D : Pin diameter grade No. 4
- E : Journal diameter grade No. 1
- F : Journal diameter grade No. 2
- G : Journal diameter grade No. 3
- H : Journal diameter grade No. 4
- I : Journal diameter grade No. 5

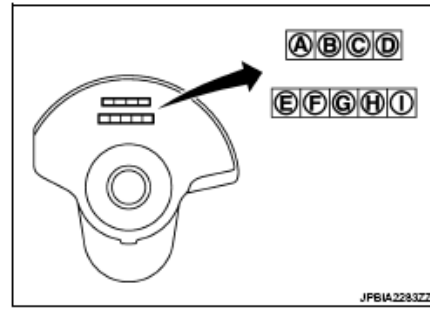


Fig. 257: Identifying Crankshaft Pin Journal Diameter Grade Number
Courtesy of NISSAN MOTOR CO., U.S.A.

3. Read the symbol at the cross point of selected row and column in the "CONNECTING ROD BEARING SELECTION TABLE".
4. Apply the symbol obtained to the "CONNECTING ROD BEARING GRADE TABLE" to select connecting rod bearing.

WHEN CONNECTING ROD AND CRANKSHAFT ARE REUSED

1. Measure connecting rod big end diameter and crankshaft pin journal diameter. Refer to **INSPECTION**.
2. Correspond the measured dimension in connecting rod big end diameter row of "CONNECTING ROD BEARING SELECTION TABLE".
3. Correspond the measured dimension in crankshaft pin journal diameter column of "CONNECTING ROD BEARING SELECTION TABLE".
4. Follow from step 3 in "WHEN NEW CONNECTING ROD AND CRANKSHAFT ARE USED".

CONNECTING ROD BEARING SELECTION TABLE

| <div> <div> Crankshaft pin journal diameter Unit: mm (in) </div> <div> Connecting rod big end diameter Unit: mm (in) </div> </div> | | Mark | | | | | | | | | | | | | | | | | |
|--|-----------------------------------|---------------|---|-----------------------------------|-----------------------------------|-----------------------------------|-----------------------------------|-----------------------------------|-----------------------------------|-----------------------------------|-----------------------------------|-----------------------------------|-----------------------------------|-----------------------------------|-----------------------------------|-----------------------------------|--|--|--|
| | | Hole diameter | | A | B | C | D | E | F | G | H | J | K | L | M | N | | | |
| Mark | Axle diameter | | | 57.000 - 57.001 (2.2441 - 2.2441) | 57.001 - 57.002 (2.2441 - 2.2442) | 57.002 - 57.003 (2.2442 - 2.2442) | 57.003 - 57.004 (2.2442 - 2.2442) | 57.004 - 57.005 (2.2442 - 2.2443) | 57.005 - 57.006 (2.2443 - 2.2443) | 57.006 - 57.007 (2.2443 - 2.2444) | 57.007 - 57.008 (2.2444 - 2.2444) | 57.008 - 57.009 (2.2444 - 2.2444) | 57.009 - 57.010 (2.2444 - 2.2445) | 57.010 - 57.011 (2.2445 - 2.2445) | 57.011 - 57.012 (2.2445 - 2.2446) | 57.012 - 57.013 (2.2446 - 2.2446) | | | |
| A | 53.974 - 53.973 (2.1250 - 2.1249) | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 1 | 1 | 1 | 1 | 1 | 1 | 2 | | | |
| B | 53.973 - 53.972 (2.1249 - 2.1249) | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 2 | | | |
| C | 53.972 - 53.971 (2.1249 - 2.1248) | 0 | 0 | 0 | 0 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 2 | 2 | 2 | | | |
| D | 53.971 - 53.970 (2.1248 - 2.1248) | 0 | 0 | 0 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 2 | 2 | 2 | 2 | | | |
| E | 53.970 - 53.969 (2.1248 - 2.1248) | 0 | 0 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 2 | 2 | 2 | 2 | 2 | | | |
| F | 53.969 - 53.968 (2.1248 - 2.1247) | 0 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | | | |
| G | 53.968 - 53.967 (2.1247 - 2.1247) | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 3 | | | |
| H | 53.967 - 53.966 (2.1247 - 2.1246) | 1 | 1 | 1 | 1 | 1 | 1 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 3 | 3 | | | |
| J | 53.966 - 53.965 (2.1246 - 2.1246) | 1 | 1 | 1 | 1 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 3 | 3 | 3 | 3 | | | |
| K | 53.965 - 53.964 (2.1246 - 2.1246) | 1 | 1 | 1 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 3 | 3 | 3 | 3 | 3 | | | |
| L | 53.964 - 53.963 (2.1246 - 2.1245) | 1 | 1 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 3 | 3 | 3 | 3 | 3 | 3 | | | |
| M | 53.963 - 53.962 (2.1245 - 2.1245) | 1 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | | | |
| N | 53.962 - 53.961 (2.1245 - 2.1244) | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 4 | | | |
| P | 53.961 - 53.960 (2.1244 - 2.1244) | 2 | 2 | 2 | 2 | 2 | 2 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 4 | 4 | | | |
| R | 53.960 - 53.959 (2.1244 - 2.1244) | 2 | 2 | 2 | 2 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 4 | 4 | 4 | 4 | | | |
| S | 53.959 - 53.958 (2.1244 - 2.1243) | 2 | 2 | 2 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 4 | 4 | 4 | 4 | 4 | | | |
| T | 53.958 - 53.957 (2.1243 - 2.1243) | 2 | 2 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 4 | 4 | 4 | 4 | 4 | 4 | | | |
| U | 53.957 - 53.956 (2.1243 - 2.1242) | 2 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | | | |

JPBIA2257GB

Fig. 258: Connecting Rod Bearing Selection Table
Courtesy of NISSAN MOTOR CO., U.S.A.

CONNECTING ROD BEARING GRADE TABLE

Connecting rod bearing grade table: Refer to CONNECTING ROD BEARING.

UNDERSIZE BEARING USAGE GUIDE

- When the specified connecting rod bearing oil clearance is not obtained with standard size connecting rod bearings, use undersize (US) bearings.
- When using undersize (US) bearing, measure the connecting rod bearing inner diameter with bearing installed, and grind crankshaft pin so that the connecting rod bearing oil clearance satisfies the standard.

CAUTION: In grinding crankshaft pin to use undersize bearings, keep the fillet R (A) [1.5 - 1.7 mm (0.059 - 0.067 in)].



Fig. 259: Identifying Connecting Rod Bearing Guide
Courtesy of NISSAN MOTOR CO., U.S.A.

Bearing undersize table: Refer to CONNECTING ROD BEARING.

Main Bearing

WHEN NEW CYLINDER BLOCK AND CRANKSHAFT ARE USED

1. "MAIN BEARING SELECTION TABLE" rows correspond to bearing housing grade on rear side of cylinder block.

- A : Bearing housing grade No. 1
- B : Bearing housing grade No. 2
- C : Bearing housing grade No. 3
- D : Bearing housing grade No. 4
- E : Bearing housing grade No. 5
- F : Cylinder bore grade No. 1
- G : Cylinder bore grade No. 2
- H : Cylinder bore grade No. 3
- I : Cylinder bore grade No. 4
- J : Cylinder bore grade No. 5
- K : Cylinder bore grade No. 6
- L : Cylinder bore grade No. 7
- M : Cylinder bore grade No. 8
- ↔ : Engine front

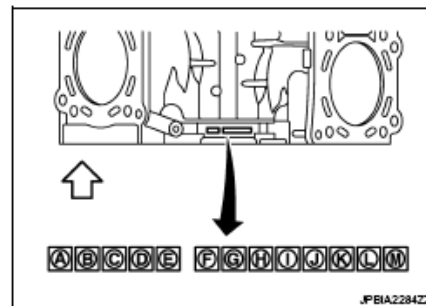


Fig. 260: Identifying Bearing Housing Grade Number
Courtesy of NISSAN MOTOR CO., U.S.A.

2. "MAIN BEARING SELECTION TABLE" columns correspond to journal diameter grade on front side of crankshaft.

- A : Pin diameter grade No. 1
 B : Pin diameter grade No. 2
 C : Pin diameter grade No. 3
 D : Pin diameter grade No. 4
 E : Journal diameter grade No. 1
 F : Journal diameter grade No. 2
 G : Journal diameter grade No. 3
 H : Journal diameter grade No. 4
 I : Journal diameter grade No. 5

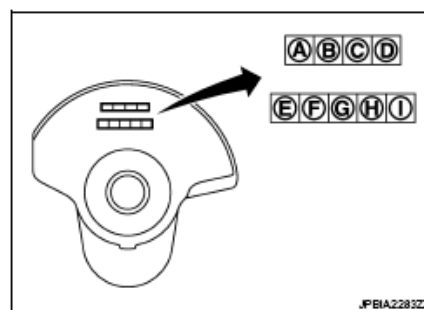


Fig. 261: Identifying Pin Diameter Grade Number
 Courtesy of NISSAN MOTOR CO., U.S.A.

3. Select main bearing grade at the point where selected row and column meet in "MAIN BEARING SELECTION TABLE".

CAUTION:

- Initial clearance for No. 1, 5 journal and No. 2, 3, 4 journal is different. Use two different selection table for each part.
- No. 1, 5 journal and No. 2, 3, 4 journal have the same signs but different measures. Never confuse.

4. Apply sign at crossing in above step 3 to "MAIN BEARING GRADE TABLE".

NOTE:

- "MAIN BEARING GRADE TABLE" applies to all journals.
- Service parts are available as a set of both upper and lower.

WHEN CYLINDER BLOCK AND CRANKSHAFT ARE REUSED

1. Measure cylinder block main bearing housing inner diameter and crankshaft main journal diameter. Refer to **INSPECTION**.
2. Correspond the measured dimension in "Cylinder block main bearing housing inner diameter" row of "MAIN BEARING SELECTION TABLE".
3. Correspond the measured dimension in "Crankshaft main journal diameter" column of "MAIN BEARING SELECTION TABLE".
4. Follow from step 3 in "When New Cylinder Block and Crankshaft are Used".

MAIN BEARING SELECTION TABLE (No. 1 and 5 Journal)

2010 Infiniti FX50

2010 ENGINE Engine Mechanical (VK50VE) - FX35 & FX50

| Cylinder block main bearing housing inner diameter | Crankshaft main journal diameter | I.D. mark | A | B | C | D | E | F | G | H | J | K | L | M | N | P | R | S | T | U | V | W | X | Y | 4 | 7 | Hole diameter Unit: mm (in) | | | | |
|---|--|--------------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|--------------------------------------|-----------------------------------|-----------------------------------|-----------------------------------|-----------------------------------|
| | | | | | | | | | | | | | | | | | | | | | | | | | | | I.D. mark | Axle diameter Unit: mm (in) | | | |
| G | 63.964 - 63.963 (2.5183 - 2.5182) | 1 | 1 | 12 | 12 | 12 | 2 | 2 | 2 | 23 | 23 | 23 | 3 | 3 | 3 | 3 | 34 | 34 | 34 | 4 | 4 | 4 | 4 | 45 | 45 | 45 | 5 | 5 | 68.944 - 68.945 (2.7143 - 2.7144) | 68.945 - 68.946 (2.7144 - 2.7144) | |
| H | 63.963 - 63.962 (2.5182 - 2.5182) | 1 | 12 | 12 | 12 | 2 | 2 | 2 | 2 | 23 | 23 | 23 | 3 | 3 | 3 | 3 | 34 | 34 | 34 | 4 | 4 | 4 | 4 | 45 | 45 | 45 | 5 | 5 | 68.945 - 68.946 (2.7144 - 2.7144) | 68.946 - 68.947 (2.7144 - 2.7144) | |
| J | 63.962 - 63.961 (2.5182 - 2.5181) | 12 | 12 | 12 | 2 | 2 | 2 | 2 | 23 | 23 | 23 | 3 | 3 | 3 | 3 | 34 | 34 | 34 | 4 | 4 | 4 | 4 | 45 | 45 | 45 | 5 | 5 | 68.946 - 68.947 (2.7144 - 2.7144) | 68.947 - 68.948 (2.7144 - 2.7145) | | |
| K | 63.961 - 63.960 (2.5181 - 2.5181) | 12 | 12 | 2 | 2 | 2 | 23 | 23 | 23 | 23 | 3 | 3 | 3 | 3 | 34 | 34 | 34 | 4 | 4 | 4 | 4 | 45 | 45 | 45 | 5 | 5 | 5 | 68.947 - 68.948 (2.7144 - 2.7145) | 68.948 - 68.949 (2.7145 - 2.7145) | | |
| L | 63.960 - 63.959 (2.5181 - 2.5181) | 12 | 2 | 2 | 2 | 23 | 23 | 23 | 3 | 3 | 3 | 3 | 34 | 34 | 34 | 4 | 4 | 4 | 4 | 4 | 45 | 45 | 45 | 5 | 5 | 5 | 56 | 68.948 - 68.949 (2.7145 - 2.7145) | 68.949 - 68.950 (2.7145 - 2.7146) | | |
| M | 63.959 - 63.958 (2.5181 - 2.5180) | 2 | 2 | 2 | 23 | 23 | 23 | 3 | 3 | 3 | 3 | 34 | 34 | 34 | 4 | 4 | 4 | 4 | 4 | 45 | 45 | 45 | 5 | 5 | 5 | 56 | 56 | 68.949 - 68.950 (2.7145 - 2.7146) | 68.950 - 68.951 (2.7146 - 2.7146) | | |
| N | 63.958 - 63.957 (2.5180 - 2.5180) | 2 | 2 | 23 | 23 | 23 | 3 | 3 | 3 | 3 | 34 | 34 | 34 | 4 | 4 | 4 | 4 | 45 | 45 | 45 | 5 | 5 | 5 | 5 | 56 | 56 | 6 | 68.950 - 68.951 (2.7146 - 2.7146) | 68.951 - 68.952 (2.7146 - 2.7146) | | |
| P | 63.957 - 63.956 (2.5180 - 2.5179) | 2 | 23 | 23 | 23 | 3 | 3 | 3 | 3 | 34 | 34 | 34 | 4 | 4 | 4 | 4 | 45 | 45 | 45 | 5 | 5 | 5 | 5 | 56 | 56 | 6 | 6 | 68.951 - 68.952 (2.7146 - 2.7146) | 68.952 - 68.953 (2.7146 - 2.7147) | | |
| R | 63.956 - 63.955 (2.5179 - 2.5179) | 23 | 23 | 23 | 3 | 3 | 3 | 34 | 34 | 34 | 4 | 4 | 4 | 4 | 45 | 45 | 45 | 45 | 5 | 5 | 5 | 5 | 56 | 56 | 56 | 6 | 6 | 6 | 68.952 - 68.953 (2.7146 - 2.7147) | 68.953 - 68.954 (2.7147 - 2.7147) | |
| S | 63.955 - 63.954 (2.5179 - 2.5179) | 23 | 23 | 3 | 3 | 3 | 34 | 34 | 34 | 4 | 4 | 4 | 4 | 45 | 45 | 45 | 45 | 5 | 5 | 5 | 5 | 56 | 56 | 56 | 6 | 6 | 6 | 67 | 68.953 - 68.954 (2.7147 - 2.7147) | 68.954 - 68.955 (2.7147 - 2.7148) | |
| T | 63.954 - 63.953 (2.5179 - 2.5178) | 23 | 3 | 3 | 3 | 3 | 34 | 34 | 34 | 4 | 4 | 4 | 45 | 45 | 45 | 5 | 5 | 5 | 5 | 5 | 56 | 56 | 56 | 6 | 6 | 6 | 67 | 67 | 68.954 - 68.955 (2.7147 - 2.7148) | 68.955 - 68.956 (2.7148 - 2.7148) | |
| U | 63.953 - 63.952 (2.5178 - 2.5178) | 3 | 3 | 3 | 34 | 34 | 34 | 4 | 4 | 4 | 4 | 45 | 45 | 45 | 5 | 5 | 5 | 5 | 5 | 5 | 56 | 56 | 56 | 6 | 6 | 6 | 67 | 67 | 68.955 - 68.956 (2.7148 - 2.7148) | 68.956 - 68.957 (2.7148 - 2.7148) | |
| V | 63.952 - 63.951 (2.5178 - 2.5178) | 3 | 3 | 34 | 34 | 34 | 4 | 4 | 4 | 4 | 45 | 45 | 45 | 5 | 5 | 5 | 5 | 56 | 56 | 56 | 6 | 6 | 6 | 6 | 6 | 67 | 67 | 7 | 68.956 - 68.957 (2.7148 - 2.7148) | 68.957 - 68.958 (2.7148 - 2.7149) | |
| W | 63.951 - 63.950 (2.5178 - 2.5177) | 3 | 34 | 34 | 34 | 4 | 4 | 4 | 4 | 45 | 45 | 45 | 5 | 5 | 5 | 5 | 56 | 56 | 56 | 6 | 6 | 6 | 6 | 6 | 67 | 67 | 7 | 7 | 68.957 - 68.958 (2.7148 - 2.7149) | 68.958 - 68.959 (2.7149 - 2.7149) | |
| X | 63.950 - 63.949 (2.5177 - 2.5177) | 34 | 34 | 34 | 4 | 4 | 4 | 4 | 45 | 45 | 45 | 5 | 5 | 5 | 5 | 56 | 56 | 56 | 6 | 6 | 6 | 6 | 6 | 67 | 67 | 7 | 7 | 7 | 68.958 - 68.959 (2.7149 - 2.7149) | 68.959 - 68.960 (2.7149 - 2.7150) | |
| Y | 63.949 - 63.948 (2.5177 - 2.5176) | 34 | 34 | 4 | 4 | 4 | 4 | 45 | 45 | 45 | 5 | 5 | 5 | 5 | 56 | 56 | 56 | 6 | 6 | 6 | 6 | 6 | 67 | 67 | 7 | 7 | 7 | 78 | 68.959 - 68.960 (2.7149 - 2.7150) | 68.960 - 68.961 (2.7150 - 2.7150) | |
| 1 | 63.948 - 63.947 (2.5176 - 2.5176) | 34 | 4 | 4 | 4 | 4 | 45 | 45 | 45 | 5 | 5 | 5 | 5 | 56 | 56 | 56 | 6 | 6 | 6 | 6 | 67 | 67 | 67 | 7 | 7 | 7 | 7 | 78 | 68.960 - 68.961 (2.7150 - 2.7150) | 68.961 - 68.962 (2.7150 - 2.7151) | |
| 2 | 63.947 - 63.946 (2.5176 - 2.5176) | 4 | 4 | 4 | 45 | 45 | 45 | 45 | 5 | 5 | 5 | 5 | 56 | 56 | 56 | 6 | 6 | 6 | 6 | 67 | 67 | 67 | 7 | 7 | 7 | 7 | 78 | 78 | 68.961 - 68.962 (2.7150 - 2.7151) | 68.962 - 68.963 (2.7150 - 2.7151) | |
| 3 | 63.946 - 63.945 (2.5176 - 2.5175) | 4 | 4 | 45 | 45 | 45 | 45 | 5 | 5 | 5 | 5 | 56 | 56 | 56 | 6 | 6 | 6 | 6 | 67 | 67 | 67 | 7 | 7 | 7 | 7 | 78 | 78 | 8 | 68.962 - 68.963 (2.7150 - 2.7151) | 68.963 - 68.964 (2.7151 - 2.7151) | |
| 4 | 63.945 - 63.944 (2.5175 - 2.5175) | 4 | 45 | 45 | 45 | 45 | 5 | 5 | 5 | 5 | 56 | 56 | 56 | 6 | 6 | 6 | 67 | 67 | 67 | 7 | 7 | 7 | 7 | 7 | 7 | 78 | 78 | 8 | 8 | 68.963 - 68.964 (2.7151 - 2.7151) | 68.964 - 68.965 (2.7151 - 2.7152) |
| 5 | 63.944 - 63.943 (2.5175 - 2.5174) | 45 | 45 | 45 | 45 | 5 | 5 | 5 | 5 | 56 | 56 | 56 | 6 | 6 | 6 | 67 | 67 | 67 | 7 | 7 | 7 | 7 | 7 | 7 | 78 | 78 | 8 | 8 | 8 | 68.964 - 68.965 (2.7151 - 2.7152) | 68.965 - 68.966 (2.7152 - 2.7152) |
| 6 | 63.943 - 63.942 (2.5174 - 2.5174) | 45 | 45 | 5 | 5 | 5 | 5 | 56 | 56 | 56 | 6 | 6 | 6 | 67 | 67 | 67 | 7 | 7 | 7 | 7 | 7 | 78 | 78 | 78 | 8 | 8 | 8 | 8 | 8 | 68.965 - 68.966 (2.7152 - 2.7152) | 68.966 - 68.967 (2.7152 - 2.7152) |
| 7 | 63.942 - 63.941 (2.5174 - 2.5174) | 45 | 5 | 5 | 5 | 56 | 56 | 56 | 6 | 6 | 6 | 6 | 67 | 67 | 67 | 7 | 7 | 7 | 7 | 7 | 78 | 78 | 78 | 8 | 8 | 8 | 8 | 8 | 8 | 68.966 - 68.967 (2.7152 - 2.7152) | 68.967 - 68.968 (2.7152 - 2.7153) |
| 9 | 63.941 - 63.940 (2.5174 - 2.5173) | 5 | 5 | 5 | 56 | 56 | 56 | 6 | 6 | 6 | 6 | 67 | 67 | 67 | 7 | 7 | 7 | 7 | 78 | 78 | 78 | 8 | 8 | 8 | 8 | 8 | 8 | 8 | 8 | 68.967 - 68.968 (2.7152 - 2.7153) | |

JPBIA2285G6

Fig. 262: Main Bearing Selection Table
Courtesy of NISSAN MOTOR CO., U.S.A.

MAIN BEARING SELECTION TABLE (No. 2, 3 and 4 Journal)

CAUTION: In grinding crankshaft main journal to use undersize bearings, keep the fillet R (A) [1.5 - 1.7 mm (0.059 - 0.067 in)].



Fig. 264: Identifying Connecting Rod Bearing Guide
Courtesy of NISSAN MOTOR CO., U.S.A.

Bearing undersize table: Refer to MAIN BEARING.

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

General Specification

GENERAL SPECIFICATIONS


SERVICE DATA SPECIFICATIONS

| Cylinder arrangement | | V-8 |
|--|--------------------------------------|----------------------------|
| Displacement cm ³ (cu in) | | 5,026 (306.69) |
| Bore and stroke mm (in) | | 95.5 x 87.7 (3.76 x 3.453) |
| Valve arrangement | | DOHC |
| Firing order | | 1-8-7-3-6-5-4-2 |
| Number of piston rings | Compression | 2 |
| | Oil | 1 |
| Number of main bearings | | 5 |
| Compression ratio | | 10.9 |
| Compression pressure kPa (kg/cm ² , psi)/200 RPM | Standard | 1,667 (17, 242) |
| | Minimum | 1,226 (12.5, 178) |
| | Differential limit between cylinders | 98 (1.0, 14) |
| | | |

2010 Infiniti FX50

2010 ENGINE Engine Mechanical (VK50VE) - FX35 & FX50

Cylinder number

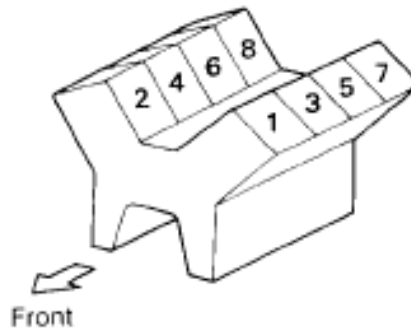

8EM957C

Unit: degree

| | | |
|--------------|----------------------------|----------|
| Valve timing | Intake valve open (BTDC) | -66 - 61 |
| | Intake valve close (ABDC) | -71 - 84 |
| | Exhaust valve open (BBDC) | 32 - 62 |
| | Exhaust valve close (ATDC) | -2 - 28 |

Drive Belts**DRIVE BELT****DRIVE BELT SERVICE DATA SPECIFICATIONS**

| | |
|------------------------|--|
| Tension of drive belts | Belt tension is not necessary, as it is automatically adjusted by drive belt auto-tensioner. |
|------------------------|--|

Spark Plug**SPARK PLUG****SPARK PLUG SERVICE DATA SPECIFICATIONS**

| | | |
|---------------|----------|--------------|
| Unit: mm (in) | | |
| Make | | DENSO |
| Standard type | | FXE22HR11 |
| Gap | Standard | 1.1 (0.043) |
| | Limit | 1.4 (0.055) |


Exhaust Manifold**EXHAUST MANIFOLD****EXHAUST MANIFOLD SERVICE DATA SPECIFICATIONS**

| | | |
|--------------------|------------------|--------------|
| Unit: mm (in) | | |
| Items | | Limit |
| Surface distortion | Exhaust manifold | 0.7 (0.028) |

Camshaft

CAMSHAFT (EXH)

CAMSHAFT SERVICE DATA SPECIFICATIONS
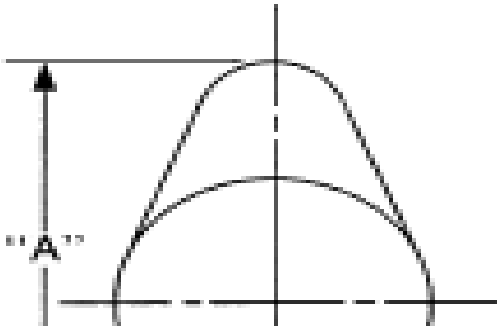
| Unit: mm (in) | | | |
|--|----------------|-----------------------------------|-----------------|
| Items | | Standard | Limit |
| Camshaft (EXH) journal oil clearance | No. 1 | 0.045 - 0.086 (0.0018 - 0.0034) | 0.150 (0.0059) |
| | No. 2, 3, 4, 5 | 0.030 - 0.071 (0.0012 - 0.0028) | |
| VVEL ladder assembly bracket inner diameter (EXH side) | | 26.000 - 26.021 (1.0236 - 1.0244) | - |
| Camshaft (EXH) journal diameter | No. 1 | 25.935 - 25.955 (1.0211 - 1.0218) | - |
| | No. 2, 3, 4, 5 | 25.950 - 25.970 (1.0217 - 1.0224) | - |
| Camshaft (EXH) end play | | 0.115 - 0.188 (0.0045 - 0.0074) | 0.24 (0.0094) |
| Camshaft (EXH) cam height "A" | | 45.475 - 45.665 (1.7904 - 1.7978) | 44.275 (1.7431) |
| Camshaft (EXH) runout [TIR ⁽¹⁾] | | Less than 0.02 mm (0.0008) | 0.05 (0.002) |
| Camshaft sprocket (EXH) runout [TIR ⁽¹⁾] | | - | 0.2 (0.0079) |
|  <p>The diagram illustrates a cam profile with a vertical centerline. A horizontal dashed line represents the base. A solid horizontal line with an upward-pointing arrow indicates the measurement of cam height 'A' from the base to the peak of the cam.</p> | | | |
| (1) Total indicator reading | | | |

CAMSHAFT (INT)

2010 Infiniti FX50

2010 ENGINE Engine Mechanical (VK50VE) - FX35 & FX50

CAMSHAFT SERVICE DATA SPECIFICATIONS

| Unit: mm (in) | | |
|--|---------------------------------|---------------|
| Items | Standard | Limit |
| Drive shaft end play | 0.115 - 0.188 (0.0045 - 0.0074) | 0.24 (0.0094) |
| Camshaft sprocket (INT) runout [TIR ⁽¹⁾] | - | 0.15 (0.0059) |
| (1) Total indicator reading | | |

VALVE LIFTER**VALVE LIFTER SERVICE DATA SPECIFICATIONS**

| Unit: mm (in) | |
|-----------------------------|-----------------------------------|
| Items | Standard |
| Valve lifter outer diameter | 33.980 - 33.990 (1.3378 - 1.3382) |
| Valve lifter hole diameter | 34.000 - 34.016 (1.3386 - 1.3392) |
| Valve lifter clearance | 0.010 - 0.036 (0.0004 - 0.0014) |

VALVE CLEARANCE**VALVE CLEARANCE SERVICE DATA SPECIFICATIONS**

| Unit: mm (in) | | |
|--------------------------------|-----------------------------|---|
| Items | Cold | Hot⁽¹⁾ (reference data) |
| Intake | 0.26 - 0.34 (0.010 - 0.013) | 0.304 - 0.416 (0.012 - 0.016) |
| Exhaust | 0.29 - 0.37 (0.011 - 0.015) | 0.308 - 0.432 (0.012 - 0.017) |
| (1) Approximately 80°C (176°F) | | |


AVAILABLE VALVE LIFTER**AVAILABLE VALVE LIFTER SERVICE DATA SPECIFICATIONS**

| Unit: mm (in) | |
|--------------------------------------|------------------|
| Identification (stamped) mark | Thickness |
| 788P | 7.88 (0.3102) |
| 790P | 7.90 (0.3110) |
| 792P | 7.92 (0.3118) |
| 794P | 7.94 (0.3126) |
| 796P | 7.96 (0.3134) |
| 798P | 7.98 (0.3142) |
| 800P | 8.00 (0.3150) |
| 802P | 8.02 (0.3157) |
| 804P | 8.04 (0.3165) |
| 806P | 8.06 (0.3173) |
| 808P | 8.08 (0.3181) |

2010 Infiniti FX50

2010 ENGINE Engine Mechanical (VK50VE) - FX35 & FX50


| | |
|------|---------------|
| 810P | 8.10 (0.3189) |
| 812P | 8.12 (0.3197) |
| 814P | 8.14 (0.3205) |
| 816P | 8.16 (0.3213) |
| 818P | 8.18 (0.3220) |
| 820P | 8.20 (0.3228) |
| 822P | 8.22 (0.3236) |
| 824P | 8.24 (0.3244) |
| 826P | 8.26 (0.3252) |
| 828P | 8.28 (0.3260) |
| 830P | 8.30 (0.3268) |
| 832P | 8.32 (0.3276) |
| 834P | 8.34 (0.3283) |
| 836P | 8.36 (0.3291) |
| 838P | 8.38 (0.3299) |
| 840P | 8.40 (0.3307) |

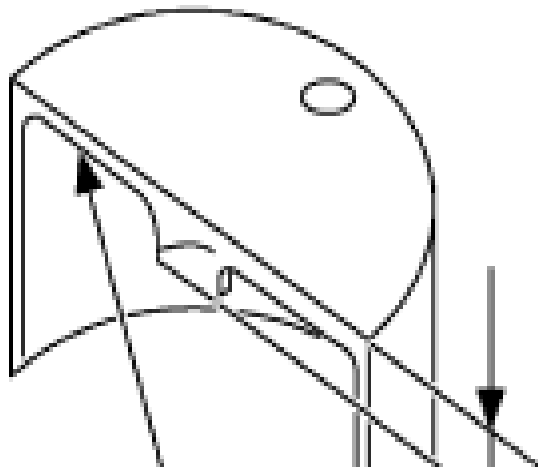**Cylinder Head****CYLINDER HEAD****CYLINDER HEAD SERVICE DATA SPECIFICATIONS****Unit: mm (in)**

2010 Infiniti FX50

2010 ENGINE Engine Mechanical (VK50VE) - FX35 & FX50


| Items | Standard | Limit |
|---------------------------------|-------------------------|-------------|
| Head surface distortion | Less than 0.03 (0.0012) | 0.1 (0.004) |
| Normal cylinder head height "H" | 126.4 (4.98) | - |

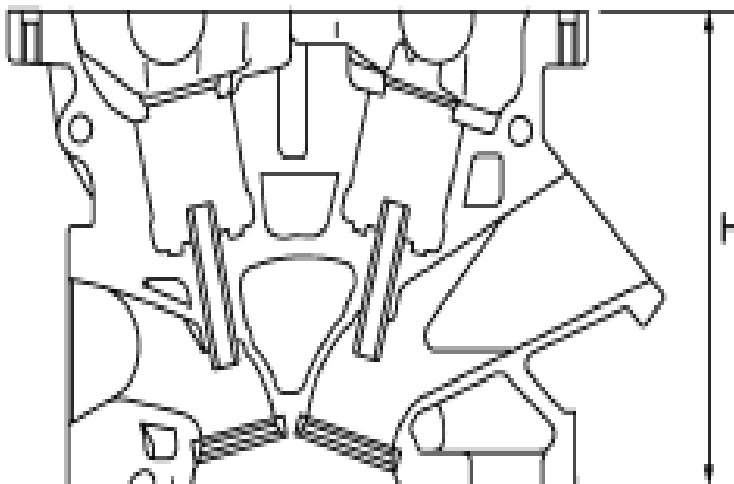

FBIC0924E

VALVE DIMENSIONS**VALVE DIMENSIONS SERVICE DATA SPECIFICATIONS**

Unit: mm (in)

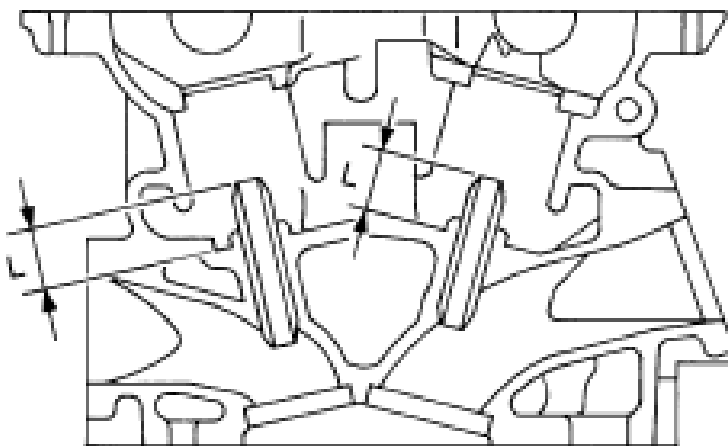


8EM950E

| | | |
|-------------------------|---------|-----------------------------|
| Valve head diameter "D" | Intake | 36.6 - 36.9 (1.441 - 1.453) |
| | Exhaust | 30.2 - 30.5 (1.189 - 1.201) |
| Valve length "L" | Intake | 100.11 (3.94) |
| | Exhaust | 94.67 (3.7272) |

2010 Infiniti FX50

2010 ENGINE Engine Mechanical (VK50VE) - FX35 & FX50

| | | |
|---------------------------------------|---------|---------------------------------|
| Valve stem diameter "d" | Intake | 5.965 - 5.980 (0.2348 - 0.2354) |
| | Exhaust | 5.955 - 5.970 (0.2344 - 0.2350) |
| Valve seat angle "a" | Intake | 45°15' - 45°45' |
| | Exhaust | |
| Valve margin "T" | Intake | 1.1 (0.043) |
| | Exhaust | 1.3 (0.051) |
| Valve margin "T" limit | | 0.5 (0.020) |
| Valve stem end surface grinding limit | | 0.2 (0.008) |

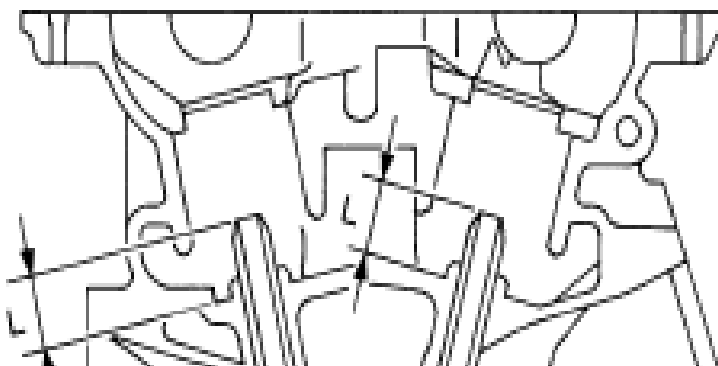VALVE GUIDE**VALVE GUIDE SERVICE DATA SPECIFICATIONS****Unit: mm (in)**

| Items | | Standard | Oversize (Service) [0.2 (0.008)] ⁽¹⁾ |
|---|--------------------------------|-----------------------------------|--|
| Valve guide | Outer diameter | 10.023 - 10.034 (0.3946 - 0.3950) | 10.223 - 10.234 (0.4025 - 0.4029) ⁽¹⁾ |
| | Inner diameter (Finished size) | 6.000 - 6.018 (0.2362 - 0.2369) | |
| Cylinder head valve guide hole diameter | | 9.975 - 9.996 (0.3927 - 0.3935) | 10.175 - 10.196 (0.4006 - 0.4014) ⁽¹⁾ |
| Interference fit of valve guide | | 0.027 - 0.059 (0.0011 - 0.0023) | |
| Items | | Standard | Limit |
| Valve guide clearance | Intake | 0.020 - 0.053 (0.0008 - 0.0021) | 0.08 (0.003) |
| | Exhaust | | |

2010 Infiniti FX50


2010 ENGINE Engine Mechanical (VK50VE) - FX35 & FX50

| | | | |
|--|---------|---------------------------------|--------------|
| | Exhaust | 0.030 - 0.063 (0.0012 - 0.0025) | 0.09 (0.004) |
| Projection length "L" | Intake | 12.6 - 12.8 (0.496 - 0.504) | |
| | Exhaust | 11.9 - 12.1 (0.469 - 0.476) | |
| (1) Parts settings are for exhaust side only | | | |

VALVE SEAT

VALVE SEAT SERVICE DATA SPECIFICATIONS

Unit: mm (in)

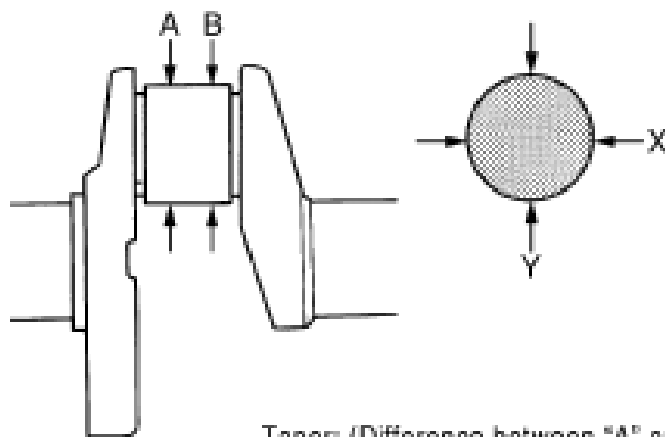

Taper: (Difference between "A" and "B")
Out-of-round: (Difference between "X" and "Y")

881A053EE

| Items | | Standard | Oversize (Service) [0.5 (0.02)] ⁽⁴⁾ |
|--|---------|-----------------------------------|--|
| Cylinder head seat recess diameter "D" | Intake | 38.000 - 38.016 (1.4961 - 1.4967) | - |
| | Exhaust | 31.600 - 31.616 (1.2441 - 1.2447) | 32.100 - 32.116 (1.2638 - 1.2644) ⁽⁴⁾ |
| Valve seat outer diameter "d" | Intake | 38.097 - 38.113 (1.4999 - 1.5005) | - |
| | Exhaust | 31.680 - 31.696 (1.2472 - 1.2479) | 32.180 - 32.196 (1.2669 - 1.2676) ⁽⁴⁾ |
| Valve seat interference fit | Intake | 0.081 - 0.113 (0.0032 - 0.0044) | |
| | Exhaust | 0.064 - 0.096 (0.0025 - 0.0038) | |
| Diameter "d1" ⁽¹⁾ | Intake | 34.6 (1.362) | |
| | Exhaust | 27.7 (1.091) | |
| Diameter "d2" ⁽²⁾ | Intake | 35.9 - 36.4 (1.413 - 1.433) | |
| | Exhaust | 29.3 - 29.8 (1.154 - 1.173) | |
| Angle "a1" | | 59 - 61° | |

2010 Infiniti FX50

2010 ENGINE Engine Mechanical (VK50VE) - FX35 & FX50

| | | | |
|---|---------|---------------------------|--|
| Angle "a2" | | 88°45' - 90°15' | |
| Angle "a3" | | 119 - 121° | |
| Contacting width "W" ⁽³⁾ | Intake | 1.0 - 1.4 (0.039 - 0.055) | |
| | Exhaust | 1.2 - 1.6 (0.047 - 0.063) | |
| Height "h" | Intake | 5.9 - 6.0 (0.232 - 0.236) | - |
| | Exhaust | 5.9 - 6.0 (0.232 - 0.236) | 4.9 - 5.0 (0.1949 - 0.1988) ⁽⁴⁾ |
| Depth "H" | | 6.0 (0.236) | |
| (1) Diameter made by intersection point of conic angles "a1" and "a2" | | | |
| (2) Diameter made by intersection point of conic angles "a2" and "a3" | | | |
| (3) Machining data | | | |
| (4) Parts settings are for exhaust side only | | | |

VALVE SPRING

VALVE SPRING SERVICE DATA SPECIFICATIONS

| Item | | Standard | |
|----------------------|--------------|--|--|
| | | Intake | Exhaust |
| Free height | | 48.69 mm (1.9169 in) | 47.35 mm (1.8642 in) |
| Pressure | Installation | 162 - 192 N (16.5 - 19.6 kg, 36 - 43 lb) at 42.40 mm (1.6693 in) | 163 - 191 N (16.6 - 19.5 kg, 37 - 43 lb) at 35.45 mm (1.3957 in) |
| | Valve open | 609 - 695 N (62.1 - 70.9 kg, 137 - 156 lb) at 28.83 mm (1.1350 in) | 370 - 426 N (37.7 - 43.5 kg, 83 - 96 lb) at 25.65 mm (1.0098 in) |
| Identification color | | Yellow | Pink |

VALVE SPRING SERVICE DATA SPECIFICATIONS

| Item | Limit | |
|---------------|-------------------|-------------------|
| | Intake | Exhaust |
| Out-of-square | 2.1 mm (0.083 in) | 2.0 mm (0.079 in) |

Cylinder Block

CYLINDER BLOCK

CYLINDER BLOCK SERVICE DATA SPECIFICATIONS

| Unit: mm (in) | | | | |
|-------------------------------------|--|----------|-------------|-----------------------------------|
| Surface flatness | | Limit | | 0.1 (0.004) |
| Main bearing housing inner diameter | | Standard | | 68.944 - 68.968 (2.7143 - 2.7153) |
| | | | Grade No. 1 | 95.500 - 95.510 |

2010 Infiniti FX50

2010 ENGINE Engine Mechanical (VK50VE) - FX35 & FX50

| | | | | |
|---|----------------|------------|----------------|--------------------------------------|
| Cylinder bore | Inner diameter | Standard | | (3.7598 - 3.7602) |
| | | | Grade No. 2 | 95.510 - 95.520 (3.7602 - 3.7606) |
| | | | Grade No. 3 | 95.520 - 95.530 (3.7606 - 3.7610) |
| | | Wear limit | | 0.2 (0.008) |
| Out-of-round | | Limit | 0.015 (0.0006) | |
| Taper | | | 0.010 (0.0004) | |
| Main bearing housing inner diameter grade (Without bearing) | | | Grade No. A | 68.944 - 68.945 |
| | | | Grade No. B | (2.7143 - 2.7144) |
| | | | Grade No. C | 68.945 - 68.946 |
| | | | Grade No. D | (2.7144 - 2.7144) |
| | | | Grade No. E | 68.946 - 68.947 |
| | | | Grade No. F | (2.7144 - 2.7144) |
| | | | Grade No. G | 68.947 - 68.948 |
| | | | Grade No. H | (2.7144 - 2.7145) |
| | | | Grade No. J | 68.948 - 68.949 |
| | | | Grade No. K | (2.7145 - 2.7145) |
| | | | Grade No. L | 68.949 - 68.950 |
| | | | Grade No. M | (2.7145 - 2.7146) |
| | | | Grade No. N | 68.950 - 68.951 |
| | | | Grade No. P | (2.7146 - 2.7146) |
| | | | Grade No. R | 68.951 - 68.952 |
| | | | Grade No. S | (2.7146 - 2.7146) |
| | | | Grade No. T | 68.952 - 68.953 |
| | | | Grade No. U | (2.7146 - 2.7147) |
| | | | Grade No. V | 68.953 - 68.954 |
| | | | Grade No. W | (2.7147 - 2.7147) |
| | | | Grade No. X | 68.954 - 68.955 |
| | | | Grade No. Y | (2.7147 - 2.7148) |
| | | | Grade No. 4 | 68.955 - 68.956 |
| | | | Grade No. 7 | (2.7148 - 2.7148) |
| | | | | 68.956 - 68.957 |
| | | | | (2.7148 - 2.7148) |
| | | | | 68.957 - 68.958 |
| | | | | (2.7148 - 2.7149) |
| | | | | 68.958 - 68.959 |
| | | | | (2.7149 - 2.7149) |
| | | | | 68.959 - 68.960 |
| | | | | (2.7149 - 2.7150) |
| | | | | 68.960 - 68.961 |
| | | | | (2.7150 - 2.7150) |
| | | | | 68.961 - 68.962 |
| | | | | (2.7150 - 2.7150) |
| | | | | 68.962 - 68.963 |
| | | | | (2.7150 - 2.7151) |
| | | | | 68.963 - 68.964 |

2010 Infiniti FX50


2010 ENGINE Engine Mechanical (VK50VE) - FX35 & FX50

| | | |
|--|----------|---|
| | | (2.7151 - 2.7151) 68.964 - 68.965 (2.7151 - 2.7152) 68.965 - 68.966 (2.7152 - 2.7152) 68.966 - 68.967 (2.7152 - 2.7152) 68.967 - 68.968 (2.7152 - 2.7153) |
| Difference in inner diameter between cylinders | Standard | Less than 0.03 (0.0012) |

AVAILABLE PISTON

PISTON SERVICE DATA SPECIFICATIONS

Unit: mm (in)

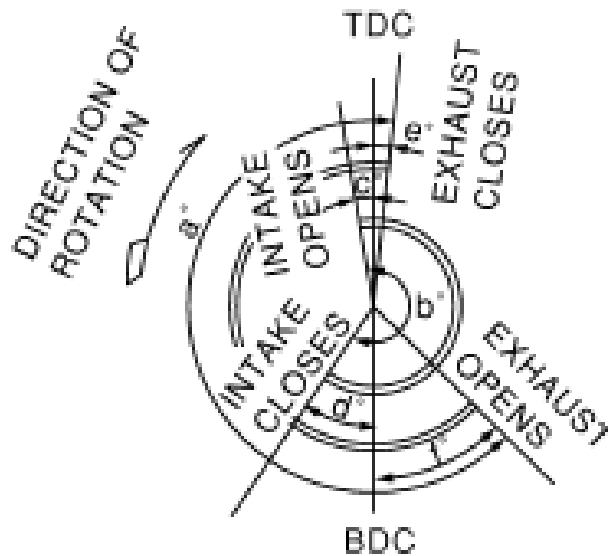

FBIC00187E

| Items | | Standard | Oversize (Service) [0.2 (0.008)] |
|---------------------------|-------------|-----------------------------------|-----------------------------------|
| Piston skirt diameter "A" | Grade No. 1 | 95.480 - 95.490 (3.7590 - 3.7594) | - |
| | Grade No. 2 | 95.490 - 95.500 (3.7594 - 3.7598) | - |
| | Grade No. 3 | 95.500 - 95.510 (3.7598 - 3.7602) | - |
| | Service | - | 95.680 - 95.710 (3.7669 - 3.7681) |
| Items | | Standard | Limit |
| "a" dimension | | 38.8 (1.528) | - |
| Piston pin hole diameter | | 21.993 - 21.999 (0.8659 - | - |

2010 Infiniti FX50

2010 ENGINE Engine Mechanical (VK50VE) - FX35 & FX50

| | | |
|-----------------------------------|---------------------------------|---------------|
| | 0.8661) | |
| Piston to cylinder bore clearance | 0.010 - 0.030 (0.0004 - 0.0012) | 0.08 (0.0031) |

PISTON RING**PISTON RING SERVICE DATA SPECIFICATIONS**

| Unit: mm (in) | | | |
|----------------|-----------------|---------------------------------|---------------|
| Items | | Standard | Limit |
| Side clearance | Top | 0.040 - 0.080 (0.0016 - 0.0031) | 0.11 (0.0043) |
| | 2nd | 0.030 - 0.070 (0.0012 - 0.0028) | 0.10 (0.0039) |
| | Oil ring | 0.055 - 0.155 (0.0022 - 0.0061) | 0.19 (0.0075) |
| End gap | Top | 0.23 - 0.33 (0.0091 - 0.0130) | 0.55 (0.0217) |
| | 2nd | 0.33 - 0.48 (0.0130 - 0.0189) | 0.67 (0.0264) |
| | Oil (rail ring) | 0.17 - 0.47 (0.0067 - 0.0185) | 0.82 (0.0323) |

PISTON PIN**PISTON PIN SERVICE DATA SPECIFICATIONS**

| Unit: mm (in) | | |
|--------------------------------------|-----------------------------------|----------------|
| Items | Standard | Limit |
| Piston pin outer diameter | 21.989 - 21.995 (0.8657 - 0.8659) | - |
| Piston to piston pin oil clearance | 0.002 - 0.006 (0.0001 - 0.0002) | - |
| Connecting rod bushing oil clearance | 0.005 - 0.017 (0.0002 - 0.0007) | 0.030 (0.0012) |

CONNECTING ROD**CONNECTING ROD SERVICE DATA SPECIFICATIONS**

| Unit: mm (in) | | |
|--|-----------------------------------|-----------------------------------|
| Items | Standard | Limit |
| Center distance | 157.68 - 157.78 (6.21 - 6.21) | - |
| Bend [per 100 (3.94)] | - | 0.15 (0.0059) |
| Torsion [per 100 (3.94)] | - | 0.30 (0.0118) |
| Connecting rod bushing inner diameter ⁽¹⁾ | 22.000 - 22.006 (0.8661 - 0.8664) | - |
| | Grade No. A | 57.000 - 57.001 (2.2441 - 2.2441) |
| | Grade No. B | 57.001 - 57.002 (2.2441 - 2.2442) |

2010 Infiniti FX50


2010 ENGINE Engine Mechanical (VK50VE) - FX35 & FX50

| | | |
|--|-------------------------------|-----------------------------------|
| Connecting rod big end diameter (Without bearing) | Grade No. C | 57.002 - 57.003 (2.2442 - 2.2442) |
| | Grade No. D | 57.003 - 57.004 (2.2442 - 2.2442) |
| | Grade No. E | 57.004 - 57.005 (2.2442 - 2.2443) |
| | Grade No. F | 57.005 - 57.006 (2.2443 - 2.2443) |
| | Grade No. G | 57.006 - 57.007 (2.2443 - 2.2444) |
| | Grade No. H | 57.007 - 57.008 (2.2444 - 2.2444) |
| | Grade No. J | 57.008 - 57.009 (2.2444 - 2.2444) |
| | Grade No. K | 57.009 - 57.010 (2.2444 - 2.2445) |
| | Grade No. L | 57.010 - 57.011 (2.2445 - 2.2445) |
| | Grade No. M | 57.011 - 57.012 (2.2445 - 2.2446) |
| | Grade No. N | 57.012 - 57.013 (2.2446 - 2.2446) |
| Side clearance | 0.20 - 0.35 (0.0079 - 0.0138) | 0.40 (0.0157) |
| (1) After installing in connecting rod | | |

CRANKSHAFT

CRANKSHAFT SERVICE DATA SPECIFICATIONS

Unit: mm (in)

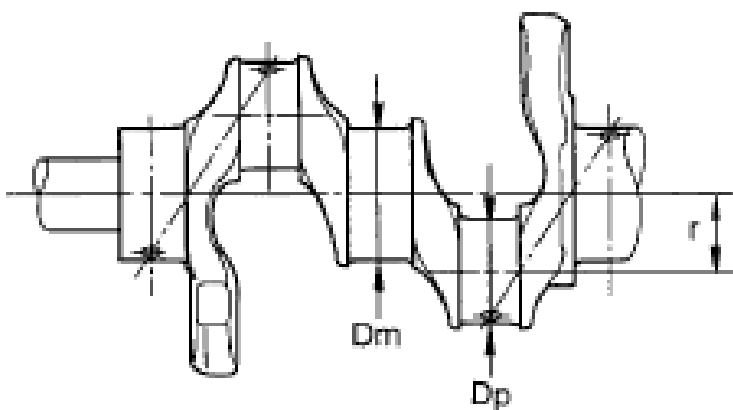

SEME45

| | | |
|--|-------------|-----------------------------------|
| | Grade No. G | 63.964 - 63.963 (2.5183 - 2.5182) |
| | Grade No. H | 63.963 - 63.962 (2.5182 - 2.5182) |
| | Grade No. J | 63.963 - 63.962 (2.5182 - 2.5182) |
| | Grade No. K | 63.962 - 63.961 (2.5182 - 2.5181) |
| | Grade No. L | 63.962 - 63.961 (2.5182 - 2.5181) |
| | Grade No. M | 63.961 - 63.960 (2.5181 - 2.5181) |
| | Grade No. N | 63.961 - 63.960 (2.5181 - 2.5181) |
| | Grade No. P | 63.960 - 63.959 (2.5181 - 2.5181) |
| | Grade No. R | 63.959 - 63.958 (2.5181 - 2.5180) |
| | Grade No. S | 63.959 - 63.958 (2.5181 - 2.5180) |
| | Grade No. T | 63.958 - 63.957 (2.5180 - 2.5180) |
| | Grade No. U | 63.958 - 63.957 (2.5180 - 2.5180) |
| | Grade No. V | 63.958 - 63.957 (2.5180 - 2.5180) |

2010 Infiniti FX50

2010 ENGINE Engine Mechanical (VK50VE) - FX35 & FX50

| | | | |
|---|----------|-------------|---------------------------|
| Main journal diameter. "Dm" grade (No. 1 and 5 journal) | Standard | Grade No. W | 2.5180) |
| | | Grade No. X | 63.957 - 63.956 (2.5180 - |
| | | Grade No. Y | 2.5179) |
| | | Grade No. 1 | 63.956 - 63.955 (2.5179 - |
| | | Grade No. 2 | 2.5179) |
| | | Grade No. 3 | 63.955 - 63.954 (2.5179 - |
| | | Grade No. 4 | 2.5179) |
| | | Grade No. 5 | 63.954 - 63.953 (2.5179 - |
| | | Grade No. 6 | 2.5178) |
| | | Grade No. 7 | 63.953 - 63.952 (2.5178 - |
| | | Grade No. 9 | 2.5178) |
| | | | 63.952 - 63.951 (2.5178 - |
| | | | 2.5178) |
| | | | 63.951 - 63.950 (2.5178 - |
| | | | 2.5177) |
| | | | 63.950 - 63.949 (2.5177 - |
| | | | 2.5177) |
| | | | 63.949 - 63.948 (2.5177 - |
| | | | 2.5176) |
| | | | 63.948 - 63.947 (2.5176 - |
| | | | 2.5176) |
| | | | 63.947 - 63.946 (2.5176 - |
| | | | 2.5176) |
| | | | 63.946 - 63.945 (2.5176 - |
| | | | 2.5175) |
| | | | 63.945 - 63.944 (2.5175 - |
| | | | 2.5175) |
| | | | 63.944 - 63.943 (2.5175 - |
| | | | 2.5174) |
| | | | 63.943 - 63.942 (2.5174 - |
| | | | 2.5174) |
| | | | 63.942 - 63.941 (2.5174 - |
| | | | 2.5174) |
| | | | 63.941 - 63.940 (2.5174 - |
| | | | 2.5173) |
| | | Grade No. A | 63.963 - 63.964 (2.5182 - |
| | | Grade No. B | 2.5183) |
| | | Grade No. C | 63.962 - 63.963 (2.5182 - |
| | | Grade No. D | 2.5182) |
| | | Grade No. E | 63.961 - 63.962 (2.5181 - |
| | | Grade No. F | 2.5182) |
| | | Grade No. G | 63.960 - 63.961 (2.5181 - |
| | | Grade No. H | 2.5181) |
| | | Grade No. J | 63.959 - 63.960 (2.5181 - |
| | | Grade No. K | 2.5181) |
| | | Grade No. L | 63.958 - 63.959 (2.5180 - |
| | | Grade No. M | 2.5181) |
| | | Grade No. N | 63.957 - 63.958 (2.5180 - |

2010 Infiniti FX50

2010 ENGINE Engine Mechanical (VK50VE) - FX35 & FX50

| | | | |
|--|----------|-------------|---------------------------|
| Main journal diameter. "Dm" grade (No. 2, 3 and 4 journal) | Standard | Grade No. P | 2.5180) |
| | | Grade No. R | 63.956 - 63.957 (2.5179 - |
| | | Grade No. S | 2.5180) |
| | | Grade No. T | 63.955 - 63.956 (2.5179 - |
| | | Grade No. U | 2.5179) |
| | | Grade No. V | 63.954 - 63.955 (2.5179 - |
| | | Grade No. W | 2.5179) |
| | | Grade No. X | 63.953 - 63.954 (2.5178 - |
| | | Grade No. Y | 2.5179) |
| | | Grade No. 1 | 63.952 - 63.953 (2.5178 - |
| | | Grade No. 2 | 2.5178) |
| | | | 63.951 - 63.952 (2.5178 - |
| | | | 2.5178) |
| | | | 63.950 - 63.951 (2.5177 - |
| | | | 2.5178) |
| | | | 63.949 - 63.950 (2.5177 - |
| | | | 2.5177) |
| | | | 63.948 - 63.949 (2.5176 - |
| | | | 2.5177) |
| | | | 63.947 - 63.948 (2.5176 - |
| | | | 2.5176) |
| | | | 63.946 - 63.947 (2.5176 - |
| | | | 2.5176) |
| | | | 63.945 - 63.946 (2.5175 - |
| | | | 2.5176) |
| | | | 63.944 - 63.945 (2.5175 - |
| | | | 2.5175) |
| | | | 63.943 - 63.944 (2.5174 - |
| | | | 2.5175) |
| | | | 63.942 - 63.943 (2.5174 - |
| | | | 2.5174) |
| | | | 63.941 - 63.942 (2.5174 - |
| | | | 2.5174) |
| | | | 63.940 - 63.941 (2.5173 - |
| | | | 2.5174) |
| | | Grade No. A | 53.974 - 53.973 (2.1250 - |
| | | Grade No. B | 2.1249) |
| | | Grade No. C | 53.973 - 53.972 (2.1249 - |
| | | Grade No. D | 2.1249) |
| | | Grade No. E | 53.972 - 53.971 (2.1249 - |
| | | Grade No. F | 2.1248) |
| | | Grade No. G | 53.971 - 53.970 (2.1248 - |
| | | Grade No. H | 2.1248) |
| | | Grade No. J | 53.970 - 53.969 (2.1248 - |
| | | Grade No. K | 2.1248) |
| | | Grade No. L | 53.969 - 53.968 (2.1248 - |
| | | Grade No. M | 2.1247) |
| | | Grade No. N | 53.968 - 53.967 (2.1247 - |

2010 Infiniti FX50

2010 ENGINE Engine Mechanical (VK50VE) - FX35 & FX50

| | | | |
|-------------------------------------|---------------------------|----------------------------------|------------------------------------|
| Pin journal diameter. "Dp" grade | Standard | Grade No. P | 2.1247) |
| | | Grade No. R | 53.967 - 53.966 (2.1247 - |
| | | Grade No. S | 2.1246) |
| | | Grade No. T | 53.966 - 53.965 (2.1246 - |
| | | Grade No. U | 2.1246) |
| | | | 53.965 - 53.964 (2.1246 - |
| | | | 2.1246) |
| | | | 53.964 - 53.963 (2.1246 - |
| | | | 2.1245) |
| | | | 53.963 - 53.962 (2.1245 - |
| | | | 2.1245) |
| | | | 53.962 - 53.961 (2.1245 - |
| | | | 2.1244) |
| | 53.961 - 53.960 (2.1244 - | | |
| | 2.1244) | | |
| | 53.960 - 53.959 (2.1244 - | | |
| | 2.1244) | | |
| | 53.959 - 53.958 (2.1244 - | | |
| | 2.1243) | | |
| | 53.958 - 53.957 (2.1243 - | | |
| | 2.1243) | | |
| | 53.957 - 53.956 (2.1243 - | | |
| | 2.1242) | | |
| Center distance "r" | | | 43.81 - 43.89 (1.7248 - 1.7279) |
| Taper | Limit | 0.0025 (0.0001) | |
| Out-of-round | | 0.0025 (0.0001) | |
| Crankshaft runout [TIR (1)] | Standard | Less than 0.05 (0.002) | |
| | Limit | 0.10 (0.0039) | |
| Crankshaft end play | Standard | 0.10 - 0.26 (0.0039 - 0.0102) | |
| | Limit | 0.30 (0.012) | |
| (1) Total indicator reading | | | |

Main Bearing

MAIN BEARING

MAIN BEARING SERVICE DATA SPECIFICATIONS

| Grade number | Thickness mm (in) | Width mm (in) | Identification color | Remarks |
|--------------|---------------------------------------|---------------|----------------------|---------|
| 0 | 2.483 - 2.486 (0.0978 - 0.0979) | | Black | |
| 1 | 2.486 - 2.489 | | Brown | |

2010 Infiniti FX50

2010 ENGINE Engine Mechanical (VK50VE) - FX35 & FX50

| | | | | | |
|----|-----|------------------------------------|--------------------------------|--------|---|
| | | (0.0979 - 0.0980) | | | |
| 2 | | 2.489 - 2.492 (0.0980 - 0.0981) | | Green | |
| 3 | | 2.492 - 2.495 (0.0981 - 0.0982) | | Yellow | |
| 4 | | 2.495 - 2.498 (0.0982 - 0.0983) | | Blue | |
| 5 | | 2.498 - 2.501 (0.0983 - 0.0985) | | Pink | Grade is the same for upper and lower bearings. |
| 6 | | 2.501 - 2.504 (0.0985 - 0.0986) | | Purple | |
| 7 | | 2.504 - 2.507 (0.0986 - 0.0987) | | White | |
| 8 | | 2.507 - 2.510 (0.0987 - 0.0988) | | Red | |
| | | | 19.9 - 20.1 (0.783 - 0.791) | Black | |
| 01 | UPR | 2.483 - 2.486 (0.0978 - 0.0979) | | Brown | |
| | LWR | 2.486 - 2.489 (0.0979 - 0.0980) | | Brown | |
| 12 | UPR | 2.486 - 2.489 (0.0979 - 0.0980) | | Green | |
| | LWR | 2.489 - 2.492 (0.0980 - 0.0981) | | Green | |
| 23 | UPR | 2.489 - 2.492 (0.0980 - 0.0981) | | Yellow | |
| | LWR | 2.492 - 2.495 (0.0981 - 0.0982) | | Yellow | |
| 34 | UPR | 2.492 - 2.495 (0.0981 - 0.0982) | | Blue | |
| | LWR | 2.495 - 2.498 | | | |

2010 Infiniti FX50

2010 ENGINE Engine Mechanical (VK50VE) - FX35 & FX50

| | | | | | |
|----|-----|------------------------------------|--|--------|---|
| | | (0.0982 - 0.0983) | | | |
| 45 | UPR | 2.495 - 2.498 (0.0982 - 0.0983) | | Blue | Grade and color are different for upper and lower bearings. |
| | LWR | 2.498 - 2.501 (0.0983 - 0.0985) | | Pink | |
| 56 | UPR | 2.498 - 2.501 (0.0983 - 0.0985) | | Pink | |
| | LWR | 2.501 - 2.504 (0.0985 - 0.0986) | | Purple | |
| 67 | UPR | 2.501 - 2.504 (0.0985 - 0.0986) | | Purple | |
| | LWR | 2.504 - 2.507 (0.0986 - 0.0987) | | White | |
| 78 | UPR | 2.504 - 2.507 (0.0986 - 0.0987) | | White | |
| | LWR | 2.507 - 2.510 (0.0987 - 0.0988) | | Red | |

UNDERSIZE

MAIN BEARING SERVICE DATA SPECIFICATIONS

| Unit: mm (in) | | |
|---------------|---------------------------------|---|
| Items | Thickness | Main journal diameter |
| 0.25 (0.0098) | 2.618 - 2.626 (0.1031 - 0.1034) | Grind so that bearing clearance is the specified value. |

MAIN BEARING OIL CLEARANCE

MAIN BEARING OIL CLEARANCE SPECIFICATIONS

| Unit: mm (in) | | |
|----------------------------|--|----------------|
| Items | Standard | Limit |
| Main bearing oil clearance | 0.035 - 0.045 (0.0014 - 0.0018) ⁽¹⁾ | 0.065 (0.0026) |
| (1) Actual clearance | | |

Connecting Rod Bearing

2010 Infiniti FX50

2010 ENGINE Engine Mechanical (VK50VE) - FX35 & FX50

CONNECTING ROD BEARING**CONNECTING ROD BEARING SPECIFICATIONS**

| Grade number | Thickness mm (in) | Width mm (in) | Identification color (mark) |
|--------------|---------------------------------|-----------------------------|-----------------------------|
| 0 | 1.497 - 1.500 (0.0589 - 0.0591) | 18.1 - 18.3 (0.713 - 0.720) | Red |
| 1 | 1.500 - 1.503 (0.0591 - 0.0592) | | Black |
| 2 | 1.503 - 1.506 (0.0592 - 0.0593) | | Brown |
| 3 | 1.506 - 1.509 (0.0593 - 0.0594) | | Green |
| 4 | 1.509 - 1.512 (0.0594 - 0.0595) | | Yellow |

UNDERSIZE**CONNECTING ROD BEARING SPECIFICATIONS**

| Unit: mm (in) | | |
|---------------|---------------------------------|---|
| Items | Thickness | Pin journal diameter |
| 0.25 (0.0098) | 1.626 - 1.634 (0.0640 - 0.0643) | Grind so that bearing clearance is the specified value. |

CONNECTING ROD BEARING OIL CLEARANCE**CONNECTING ROD BEARING OIL CLEARANCE SPECIFICATIONS**

| Unit: mm (in) | | |
|--------------------------------------|--|----------------|
| Items | Standard | Limit |
| Connecting rod bearing oil clearance | 0.040 - 0.053 (0.0016 - 0.0021) ⁽¹⁾ | 0.070 (0.0028) |
| (1) Actual clearance | | |