

2008 ENGINE

Engine Mechanical - Lancer

GENERAL INFORMATION

The 4B11 (2.0 L) engine is an in-line four-cylinder engine. The cylinder numbers are assigned as 1-2-3-4 from the front of the engine (timing belt side).

The firing order is 1-3-4-2.

FOUR-CYLINDER ENGINE SPECIFICATIONS CHART

FOR CYLINDER ENGINE SPECIFICATIONS CHART

ITEMS			SPECIFICATIONS
Type			In-line DOHC
Number of cylinders			4
Bore mm (in)			86 (3.39)
Stroke mm (in)			86 (3.39)
Total displacement cm ³ (cu. in)			1,998 (121.9)
Compression ratio			10.0
Firing order			1-3-4-2
Valve timing	Intake valve	Opens (BTDC)	0° -25° < FED>
			3° -28° < CAL>
		Closes (ABDC)	48° -23° < FED>
			45° -20° < CAL>
	Exhaust valve	Opens (BBDC)	44° -24° < FED>
			41° -21° < CAL>
		Closes (ATDC)	0° -20° < FED>
			3° -23° < CAL>
Lubrication system			Pressure feed, full-flow filtration
Oil pump type			Trochoid type

ENGINE DIAGNOSIS

SYMPTOMS CHART

SYMPTOMS	PROBABLE CAUSE	REMEDY
Compression is too low	Blown cylinder head gasket	Replace the gasket.
	Worn or damaged piston rings	Replace the rings.
	Worn piston or cylinder	Repair or replace the piston and/or the cylinder block.
	Worn or damaged valve seat	Repair or replace the valve and/or the seat ring
	Engine oil level is too low	Check the engine oil level.
	Malfunction of engine oil pressure	Replace the engine oil pressure

2008 Mitsubishi Lancer ES

2008 ENGINE Engine Mechanical - Lancer

Drop in engine oil pressure	switch	switch.
	Clogged oil filter	Install a new filter.
	Worn oil pump gears or cover	Replace the gears and/or the cover.
	Thin or diluted engine oil	Change the engine oil to the correct viscosity.
	Stuck (opened) oil relief valve	Repair the relief valve.
	Excessive bearing clearance	Replace the bearings.
Engine oil pressure too high	Stuck (closed) oil relief valve	Repair the relief valve.
Noisy valves	Incorrect valve clearance	Adjust valve clearance
	Thin or diluted engine oil (low engine oil pressure)	Change the engine oil.
	Worn or damaged valve stem or valve guide	Replace the valve and/or the guide.
Connecting rod noise/main bearing noise	Insufficient oil supply	Check the engine oil level.
	Thin or diluted engine oil	Change the engine oil.
	Excessive bearing clearance	Replace the bearings.

SERVICE SPECIFICATIONS**SERVICE SPECIFICATIONS**

Item		Standard value	Limit
Drive belt tension	Vibration frequency Hz (Reference)	102 - 129	-
	Tension N (lb) (Reference)	248 - 400 (56 - 90)	-
Valve clearance (at cold) mm (in)	Intake valve	0.20 ± 0.03 (0.008 ± 0.0012)	-
	Exhaust valve	0.03 ± 0.03 (0.012 ± 0.0012)	-
Basic ignition timing at idle		5° BTDC ± 3°	-
Actual ignition timing at curb idle		Approximately 10° BTDC	-
CO contents %		0.5 or less	-
HC contents ppm		100 or less	-
Curb idle speed r/min		700 ± 100	-
Compression pressure (200 r/min) kPa (psi)		1,470 (213)	Minimum 1,050 (152)
Compression pressure difference of all cylinder kPa (psi)		-	98 (14)
Intake manifold vacuum at curb idle kPa (in Hg)		-	Minimum 60 (18)
Auto-tensioner rod protrusion amount mm (in)		9.1 - 13.4 (0.36 - 0.52)	-

SEALANTS**SEALANTS SPECIFICATIONS**


2008 Mitsubishi Lancer ES

2008 ENGINE Engine Mechanical - Lancer

Item	Specified sealant	Remark
Flywheel bolt	LOCTITE 262, Three bond 1324 or equivalent	Semi-drying sealant
Cylinder head cover	Three bond 1227D, 1217G or equivalent	
Cylinder block	Three bond 1227D, 1217G, LOCTITE 5970, 5971, 5900 or equivalent	
Engine oil pan		
Timing chain case assembly		




SPECIAL TOOLS

SPECIAL TOOLS CHART

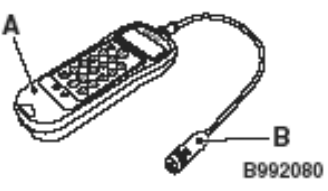Tool	Tool number and name	Supersession	Application
	MB992080 Belt tension meter set A. MB9912081 Belt tension meter B. MB992082Mic assembly	Tool not available	Drive belt tension check
	MB991958 Scan tool (M.U.T.-III sub assembly) A. A: MB991824 Vehicle communication interface (V.C.I.) B. B: MB991827 M.U.T.-III USB cable C. C: MB991910 M.U.T.-III main harness A (Vehicles with CAN communication system) D. D: MB991911 M.U.T.-III main harness B (Vehicles without CAN communication system)	MB991824-KIT NOTE: MB991826 M.U.T.-III Trigger Harness is not necessary when pushing V.C.I. ENTER key.	CAUTION: For vehicles with CAN communication, use M.U.T.-III main harness A to send simulated vehicle speed. If you connect M.U.T.-III main harness B instead, the CAN communication does not function correctly. • Drive belt tension check • Ignition timing check • Curb idle speed check






2008 Mitsubishi Lancer ES

2008 ENGINE Engine Mechanical - Lancer

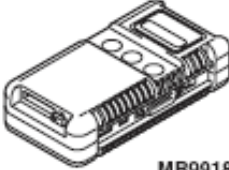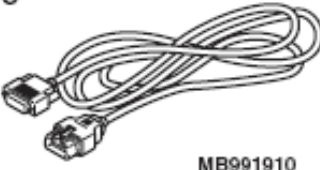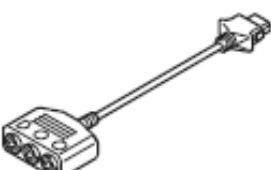A  MB991824 B  MB991827 C  MB991910 D  MB991911 E  MB991914 F  MB991825 G  MB991826 MB991958	E. E: MB991914 M.U.T.-III main harness C (for Daimler Chrysler models only) F. F: MB991825 M.U.T.-III adapter harness G. G: MB991826 M.U.T.-III trigger harness		• Idle mixture check • Erasing the diagnostic trouble code
 B990767	MB990767 Front hub and flange yoke holder	MB990767-01	






2008 Mitsubishi Lancer ES

2008 ENGINE Engine Mechanical - Lancer

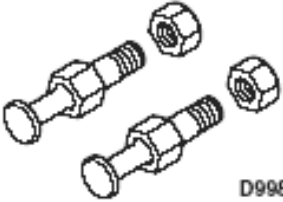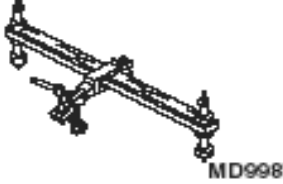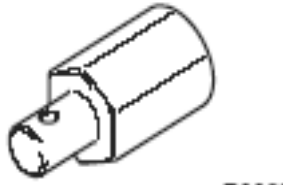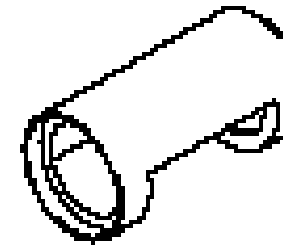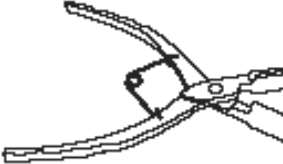 D998719	MD998719 Pin	MIT308239	Holding the camshaft sprocket
 B992103	MB992103 Chain tension release bar	-	Camshaft and camshaft sprocket assembly (exhaust side) removal
 MD998772	Valve spring compressor	General service tool	Valve spring compression
 B992090	MB992090 Retainer holder attachment	-	
	MB992089 Retainer holder C	-	
	MB992085 Valve stem seal pliers	-	Valve stem seal removal
	MD998737 Valve stem seal installer	MD998737-01	Valve stem seal press-fitting



2008 Mitsubishi Lancer ES

2008 ENGINE Engine Mechanical - Lancer

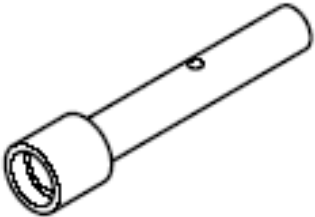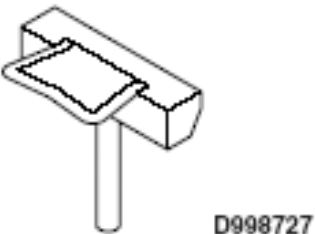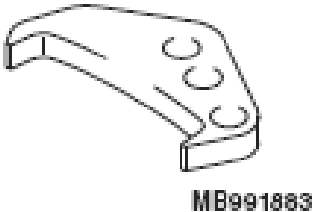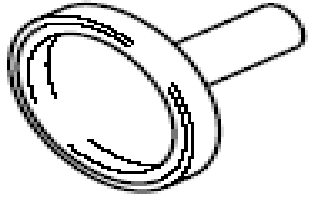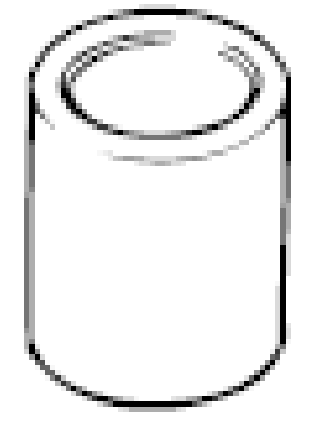			
 D998727	MD998727 Oil pan FIPG cutter	MD998727-01	Oil pan removal
 MB991883	MB991883 Flywheel stopper	General service tool	Supporting the drive plate < CVT> or flywheel < M/T>
 MD998718	MD998718 Crankshaft rear oil seal installer	MD998718-01	Press-fitting the crankshaft rear oil seal
 MB991448	MB991448 Bush remover and installer base	MB991448-01	Press-fitting the crankshaft front oil seal
	MB991346	-	Holding the oil pump sprocket

2008 Mitsubishi Lancer ES

2008 ENGINE Engine Mechanical - Lancer

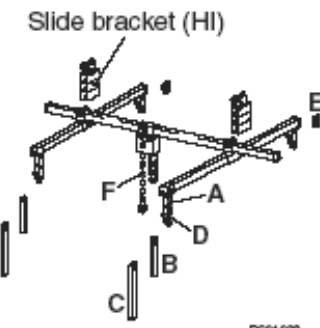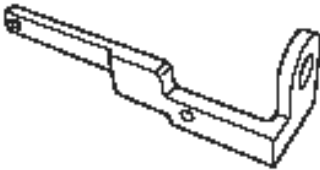 B991346	Top Cover Wrench		
 B991454	MB991454 Engine hanger balancer	MZ203827-01	
 MB991895	MB991895 Engine hanger	Tool not available	
 Slide bracket (HI) B991928	MB991928 Engine hanger A. A: MB991929 Joint (50) x 2 B. B: MB991930 Joint (90) x 2 C. C: MB991931 Joint (140) x 2 D. D: MB991932 Foot (standard) x 4 E. E: MB991933 Foot (short) x 2 F. F: MB991934 Chain and hook assembly	Tool not available	When the engine hanger is used: Supporting the engine assembly during removal and installation of the transaxle assembly NOTE: Special tool MB991454 is a part of engine hanger attachment set MB991453.
 B992201	MB992201 Engine hanger plate	-	Transaxle removal

ON-VEHICLE SERVICE

DRIVE BELT TENSION CHECK

1. Remove the radiator condenser tank mounting bolts.
2. Move the radiator condenser tank to a place where it will not be a hindrance when checking the drive belt tension.

CAUTION: Check the drive belt tension after turning the crankshaft clockwise one turn or more.

3. Make sure that the indicator mark on the auto-tensioner is within the area marked with A in the illustration.

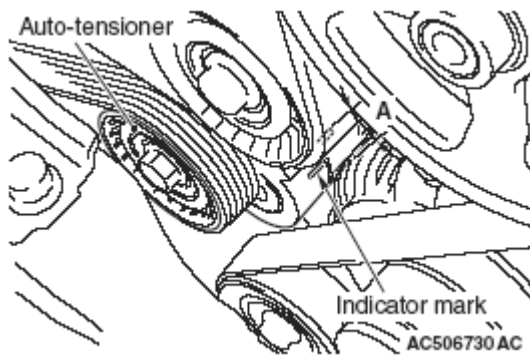


Fig. 1: Identifying Indicator Mark On Auto-Tensioner
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

4. If the mark is out of the area A, replace the drive belt (Refer to CRANKSHAFT PULLEY).

NOTE: The drive belt tension check is not necessary as the auto-tensioner is adopted.

5. Tighten the radiator condenser tank mounting bolts to the specified torque.

Tightening torque: 12 ± 2 N.m (102 ± 22 in-lb)

AUTO-TENSIONER CHECK**OPERATION CHECK**

1. Turn off the engine from the idle state then check to see that the drive belt is not protruding from the pulley width of the auto-tensioner.
2. Remove the drive belt (Refer to REMOVAL AND INSTALLATION).
3. Rotate the pulley bolt of the auto-tensioner clockwise and counterclockwise with an offset wrench [45°, a long offset wrench (5/8 x 11/16 inches) recommended] to check for binding.

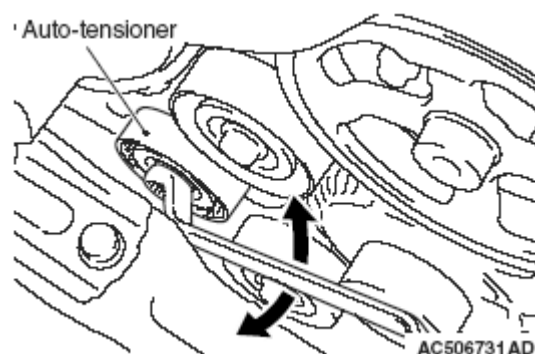


Fig. 2: Rotating Pulley Bolt Of Auto-Tensioner Clockwise And Counterclockwise
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

4. If there are any problems in the procedure 1 or 3, replace the auto-tensioner (Refer to **REMOVAL AND INSTALLATION**).
5. Install the drive belt (Refer to **REMOVAL AND INSTALLATION**).

FUNCTION CHECK

The auto-tensioner can be checked whether it is in good condition by checking its tension.

< When the vibration frequency is measured: Recommendation >

Required Special Tools:

- MB992080: Belt Tension Meter Set
- MB992081: Belt Tension Meter
- MB992082: Mic Assembly

1. Check the tension of the drive belt (Refer to **ON-VEHICLE SERVICE**).
2. Check the tension of the drive belt in the following procedures.
 1. Connect special tool microphone assembly (MB992082) to special tool belt tension meter (MB992081) of special tool belt tension meter set (MB992080).
 2. Press the "POWER" button to turn on the power supply.
 3. Press the numeral key of "1" and check that "No. 1" appears on the upper left of the display.

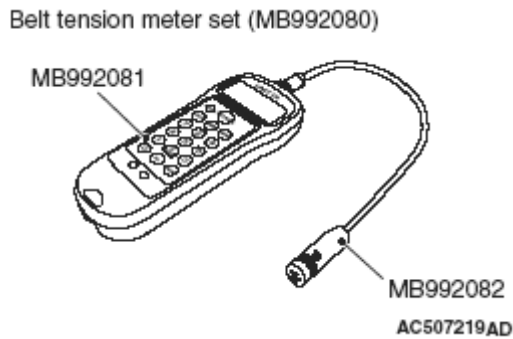


Fig. 3: Identifying Belt Tension Meter Set
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

NOTE: This operation is to temporarily set the preset data such as the belt specifications, because if the measurement is taken without input of the belt specifications, conversion to tension value (N) cannot be made, resulting in judgement of error.

4. Press "Hz" button twice to change the display to the frequency display (Hz).

CAUTION:

- The temperature of the surface of the belt should be as close to normal temperature as possible.
 - Do not allow any contaminants such as water or oil to get onto the microphone.
 - If strong gusts of wind blow against the microphone or if there are any loud sources of noise nearby, the values measured by the microphone may not correspond to actual values.
 - If the microphone is touching the belt while the measurement is being made, the values measured by the microphone may not correspond to actual values.
 - Do not take the measurement while the vehicle's engine is running.
5. Hold special tool MB992080 to the middle of the belt between the pulleys (at the place indicated by arrow) where it does not contact the belt (approximately 10 - 15 mm (0.4 - 0.59 inch) away from the rear surface of the belt) so that it is perpendicular to the belt (within an angle of ± 15 degree).

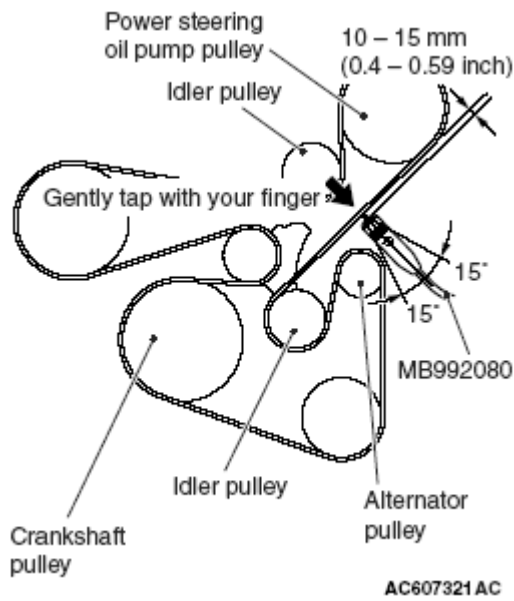


Fig. 4: Holding Special Tool MB992080 To Middle Of Belt Between Pulleys
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

6. Press the "MEASURE" button.
7. Gently tap the middle of the belt between the pulleys (the place indicated by the arrow) with your finger as shown in the illustration, and check that the vibration frequency of the belt is within the standard value.

Standard value: 102 - 129 Hz

NOTE: To take the measurement repeatedly, tap the belt again.

8. Press and hold the "POWER" button to turn off the power supply.
3. If not within the standard value, replace the auto-tensioner (Refer to **REMOVAL AND INSTALLATION**).

< When using a tension gauge >

1. Check the tension of the drive belt (Refer to **DRIVE BELT TENSION CHECK**).

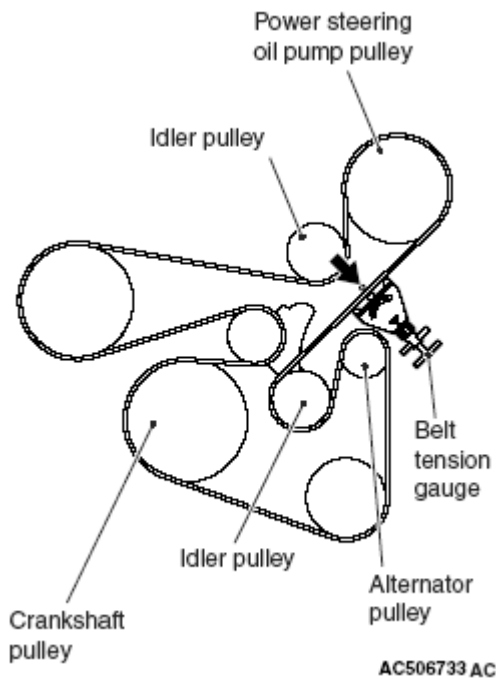


Fig. 5: Checking Belt Tension

Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

2. Use a belt tension gauge in the middle of the belt between the pulleys shown in the figure (at the place indicated by the arrow) to check that the belt tension is within the standard value.

Standard value: 248 - 400 N (56 - 90 lb)

3. If not within the standard value, replace the auto-tensioner (Refer to **REMOVAL AND INSTALLATION**).

VALVE CLEARANCE CHECK AND ADJUSTMENT

Refer to **6. INTAKE AND EXHAUST VALVE CLEARANCE (INSPECT AND ADJUST)**

IGNITION TIMING CHECK

Required Special Tool:

MB991958: Scan Tool (M.U.T.-III Sub Assembly)

- MB991824: V.C.I.
- MB991827: M.U.T.-III USB Cable
- MB991910: M.U.T.-III Main Harness A

1. Before inspection, set the vehicle in the following condition:
 - Engine coolant temperature: 80 -95°C (176 -203°F)

- Lights and all accessories: OFF
- Transaxle: Neutral (P range on vehicles with CVT)

NOTE: On vehicles for Canada, the headlight, taillight, etc. remain lit even when the lighting switch is in "OFF" position but this is no problem for checks.

CAUTION: To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

2. Connect scan tool MB991958 to the data link connector.

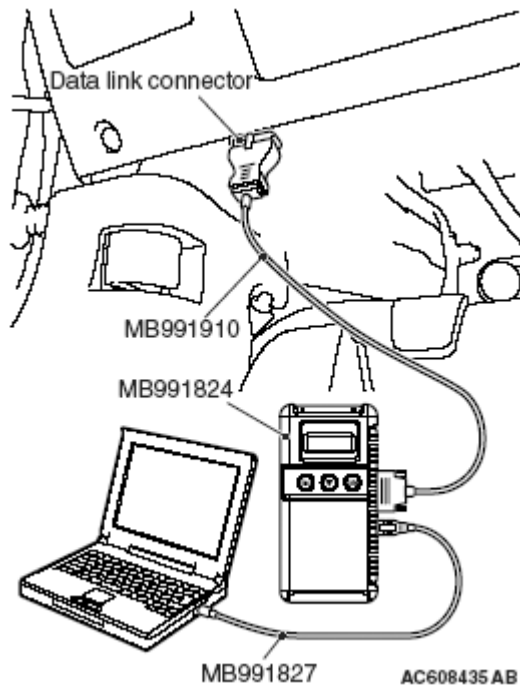


Fig. 6: Connecting Scan Tool MB991958 To Data Link Connector
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

3. Set the timing light to the power supply line (terminal No. 3) of the ignition coil No. 1.

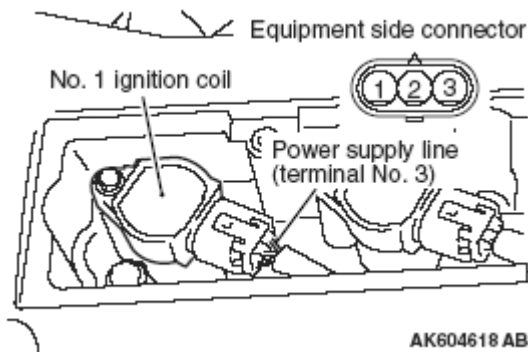


Fig. 7: Identifying Ignition Coil No. 1

Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

4. Start the engine and run it at idle.
5. Check that the idle speed is approximately 700 r/min.
6. Select scan tool MB991958 actuator test "item number 11".
7. Check that basic ignition timing is within the standard value.

Standard value: 5° BTDC ± 3°

8. If the basic ignition timing is not within the standard value, check the following items:
 - Diagnostic output
 - Timing belt cover and crankshaft position sensor installation conditions
 - Crankshaft sensing blade condition

CAUTION: If the actuator test is not canceled, the forced drive will continue for 27 minutes. Driving in this state could lead to engine failure.

9. Cancel the setting mode of the scan tool MB991958.
10. Check that the actual ignition timing is at the standard value.

Standard value: Approximately 10° BTDC

NOTE: Ignition timing fluctuates about ± 7° Before Top Dead Center, even under normal operating condition.

NOTE: It is automatically further advanced by about 5° to 10° Before Top Dead Center at higher altitudes.

11. Remove the timing light.

CAUTION: To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or

disconnecting scan tool MB991958.

12. Disconnect scan tool MB991958 from the data link connector.

CURB IDLE SPEED CHECK**Required Special Tool:**

MB991958: Scan Tool (M.U.T.-III Sub Assembly)

- MB991824: V.C.I.
- MB991827: M.U.T.-III USB Cable
- MB991910: M.U.T.-III Main Harness A

1. Before inspection, set the vehicle in the following condition:
 - Engine coolant temperature: 80 -95°C (176 -203°F)
 - Lights and all accessories: OFF
 - Transaxle: Neutral (P range on vehicles with CVT)

NOTE: On vehicles for Canada, the headlight, taillight, etc. remain lit even when the lighting switch is in "OFF" position but this is no problem for checks.

CAUTION: To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

2. Connect scan tool MB991958 to the data link connector.

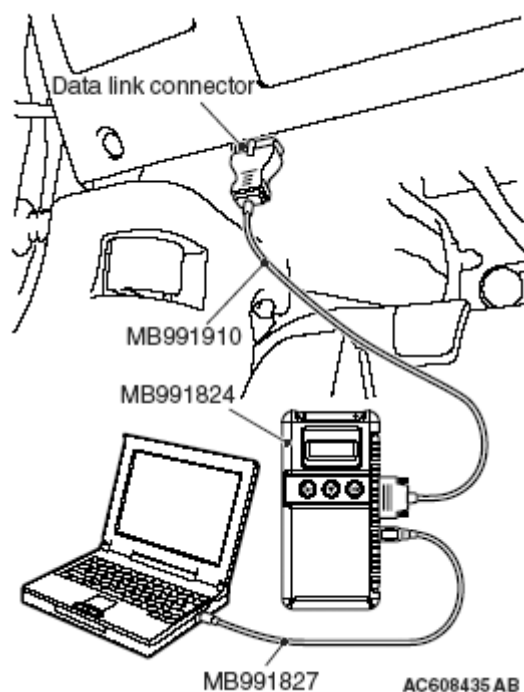


Fig. 8: Connecting Scan Tool MB991958 To Data Link Connector
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

3. Set the timing light to the power supply line (terminal No. 3) of the ignition coil No. 1.

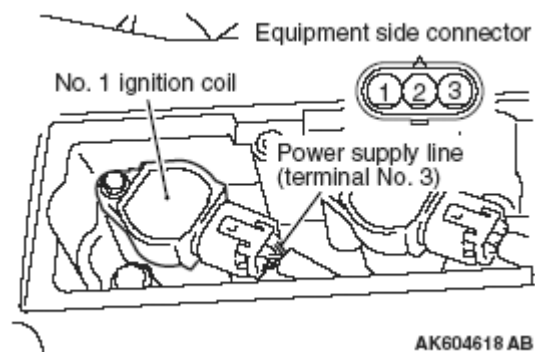


Fig. 9: Identifying Ignition Coil No. 1
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

4. Start the engine.
5. Run the engine at idle for 2 minutes.
6. Check the actual ignition timing is at the standard value.

Standard value: Approximately 10° BTDC

7. Check the idle speed. Select item number 2 and take a reading of the idle speed.

Curb idle speed: 700 ± 100 r/min

NOTE: The idle speed is controlled automatically by the idle air control system.

8. If the idle speed is outside the standard value, refer to SYMPTOM CHART.

NOTE: Ignition timing fluctuates about $\pm 7^\circ$ Before Top Dead Center, even under normal operating condition.

NOTE: It is automatically further advanced by about 5° to 10° Before Top Dead Center at higher altitudes.

9. Remove the timing light.

CAUTION: To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

10. Disconnect scan tool MB991958 from the data link connector.

IDLE MIXTURE CHECK

Required Special Tool:

MB991958: Scan Tool (M.U.T.-III Sub Assembly)

- MB991824: V.C.I.
- MB991827: M.U.T.-III USB Cable
- MB991910: M.U.T.-III Main Harness A

1. Before inspection, set the vehicle in the following condition:

- Engine coolant temperature: $80 - 95^\circ\text{C}$ ($176 - 203^\circ\text{F}$)
- Lights and all accessories: OFF
- Transaxle: Neutral (P range on vehicles with CVT)

NOTE: On vehicles for Canada, the headlight, taillight, etc. remain lit even when the lighting switch is in "OFF" position but this is no problem for checks.

CAUTION: To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

2. Connect scan tool MB991958 to the data link connector.

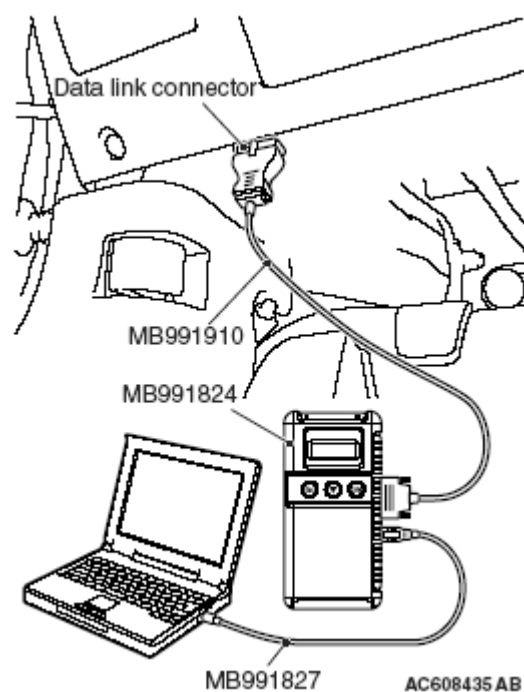


Fig. 10: Connecting Scan Tool MB991958 To Data Link Connector
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

3. Set the timing light to the power supply line (terminal No. 3) of the ignition coil No. 1.

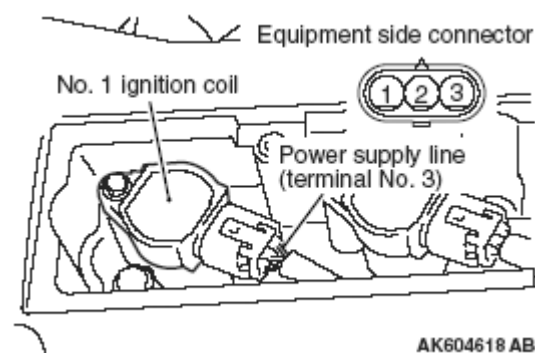


Fig. 11: Identifying Ignition Coil No. 1
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

4. Start the engine and let it run at idle.
5. Check that the actual ignition timing is at the standard value.

Standard value: Approximately 10° BTDC

NOTE: Ignition timing fluctuates about $\pm 7^\circ$ Before Top Dead Center, even under normal operating condition.

NOTE: It is automatically further advanced by about 5° to 10° Before Top Dead Center at higher altitudes.

6. Run the engine and increase the engine speed to 2,500 r/min for 2 minutes.
7. Set the CO, HC tester.
8. Check the CO contents and the HC contents at idle.

Standard value: CO contents: 0.5% or less

HC contents: 100 ppm or less

9. If there is a deviation from the standard value, inspect the MFI system (Refer to **SYMPTOM CHART**)
10. Remove the timing light.

CAUTION: To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

11. Disconnect scan tool MB991958 from the data link connector.

COMPRESSION PRESSURE CHECK

Required Special Tool:

MB991958: Scan Tool (M.U.T.-III Sub Assembly)

- MB991824: V.C.I.
 - MB991827: M.U.T.-III USB Cable
 - MB991910: M.U.T.-III Main Harness A
1. Before inspection, check that the engine oil, starter and battery are normal. Also, set the vehicle in the following condition:
 - Engine coolant temperature: 80 -95°C (176 -203°F)
 - Lights and all accessories: OFF
 - Transaxle: Neutral (P range on vehicles with CVT)
 2. Remove all of the ignition coils and spark plugs.
 3. Disconnect the all of the injector connectors.

NOTE: Doing this will prevent the engine control module from carrying out ignition and fuel injection.

WARNING: Keep your distance from the spark plug hole when cranking. Oil, fuel, etc., may spray out from the spark plug hole and may cause

serious injury.

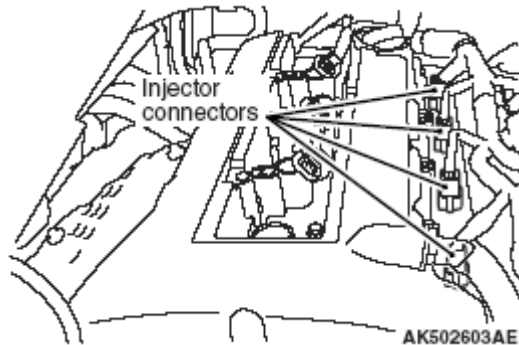


Fig. 12: Identifying Injector Connectors

Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

4. Cover the spark plug hole with a shop towel etc., after the engine has been cranked, check that no foreign material is adhering to the shop towel.
5. Set compression gauge to one of the spark plug holes.

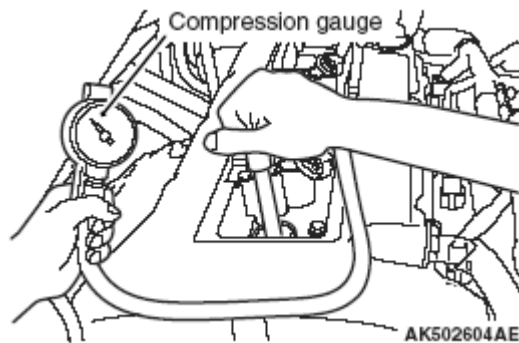


Fig. 13: Setting Compression Gauge To One Of Spark Plug Holes

Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

6. Crank the engine with the throttle valve fully open and measure the compression pressure.

Standard value (at engine speed of 200 r/min): 1,470 kPa (213 psi)

Limit (at engine speed of 200 r/min): Minimum 1,050 kPa (152 psi)

7. Measure the compression pressure for all the cylinders, and check that the pressure differences of the cylinders are below the limit.

Limit: Maximum 98 kPa (14 psi)

8. If there is a cylinder with compression or a compression difference that is outside the limit, pour a small amount of engine oil through the spark plug hole, and repeat the operations in steps from 5 to 7.
 1. If the compression increases after oil is added, the cause of the malfunction is a worn or damaged

piston ring and/or cylinder inner surface.

2. If the compression does not rise after oil is added, the cause is a burnt or defective valve seat, or pressure is leaking from the gasket.
9. Connect the all of the injector connector.
10. Install the spark plugs and ignition coils.
11. Use the scan tool MB991958 to erase the diagnosis codes.

NOTE: This will erase the diagnosis code resulting from the injector connectors being disconnected.

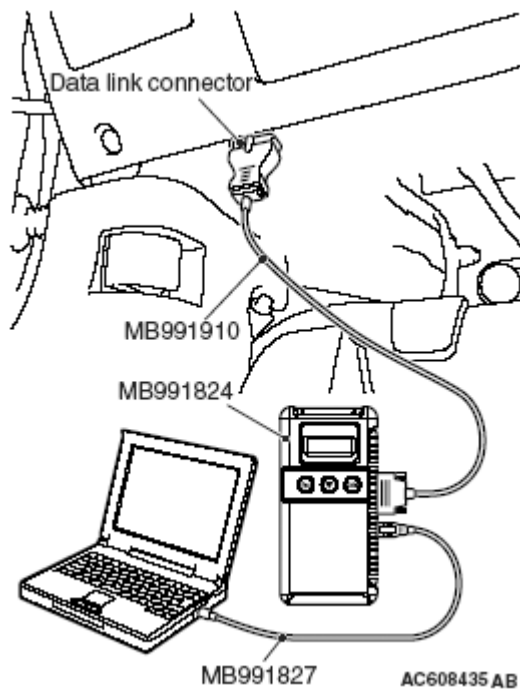


Fig. 14: Connecting Scan Tool MB991958 To Data Link Connector
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

MANIFOLD VACUUM CHECK

Required Special Tool:

MB991958: Scan Tool (M.U.T.-III Sub Assembly)

- MB991824: V.C.I.
- MB991827: M.U.T.-III USB Cable
- MB991910: M.U.T.-III Main Harness A

1. Before inspection, set the vehicle in the following condition:
 - Engine coolant temperature: 80 -95°C (176 -203°F)

- Lights and all accessories: OFF
- Transaxle: Neutral (P range on vehicles with CVT)

NOTE: On vehicles for Canada, the headlight, taillight, etc. remain lit even when the lighting switch is in "OFF" position but this is no problem for checks.

CAUTION: To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

2. Connect scan tool MB991958 to the data link connector.

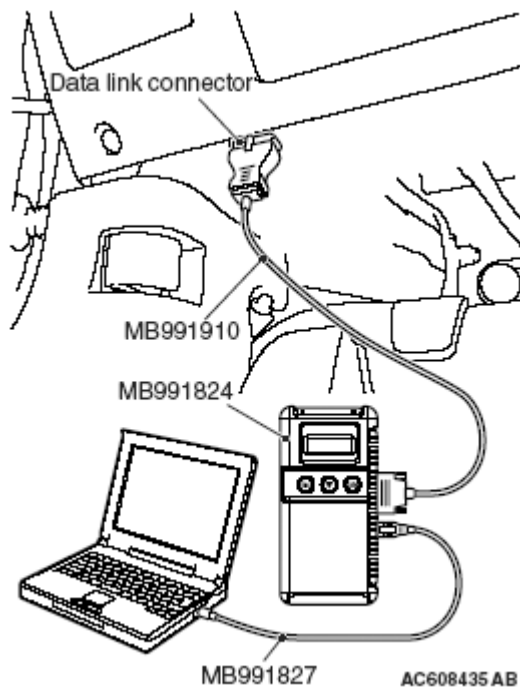


Fig. 15: Connecting Scan Tool MB991958 To Data Link Connector
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

3. Disconnect the ventilation hose from the positive crankcase ventilation (PCV) valve, and then connect a vacuum gauge to the ventilation hose. Plug the PCV valve.

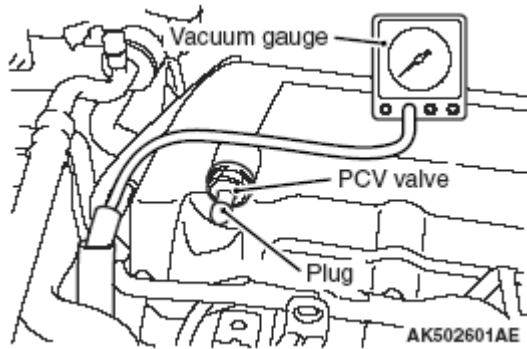


Fig. 16: Connecting Vacuum Gauge To Ventilation Hose
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

4. Start the engine and check that idle speed is approximately 700 r/min.
5. Check the intake manifold vacuum.

Limit: Minimum 60 kPa (18 in Hg)

6. Turn off the ignition switch.
7. Remove the vacuum gauge and then connect the ventilation hose to the PCV valve.

CAUTION: To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.


8. Disconnect scan tool MB991958 from the data link connector.

CRANKSHAFT PULLEY

REMOVAL AND INSTALLATION

REMOVAL AND INSTALLATION CHART

Pre-removal operation	Post-installation operation
• Engine Room Under Cover Front Removal (Refer to UNDER COVER). • Engine Room Side Cover (RH) Removal (Refer to UNDER COVER). • Radiator Condenser Tank Removal (Refer to RADIATOR).	• Radiator Condenser Tank Installation (Refer to RADIATOR). • DRIVE BELT TENSION CHECK (Refer to). • Engine Room Side Cover (RH) Installation (Refer to UNDER COVER). • Engine Room Under Cover Front Installation (Refer to UNDER COVER).

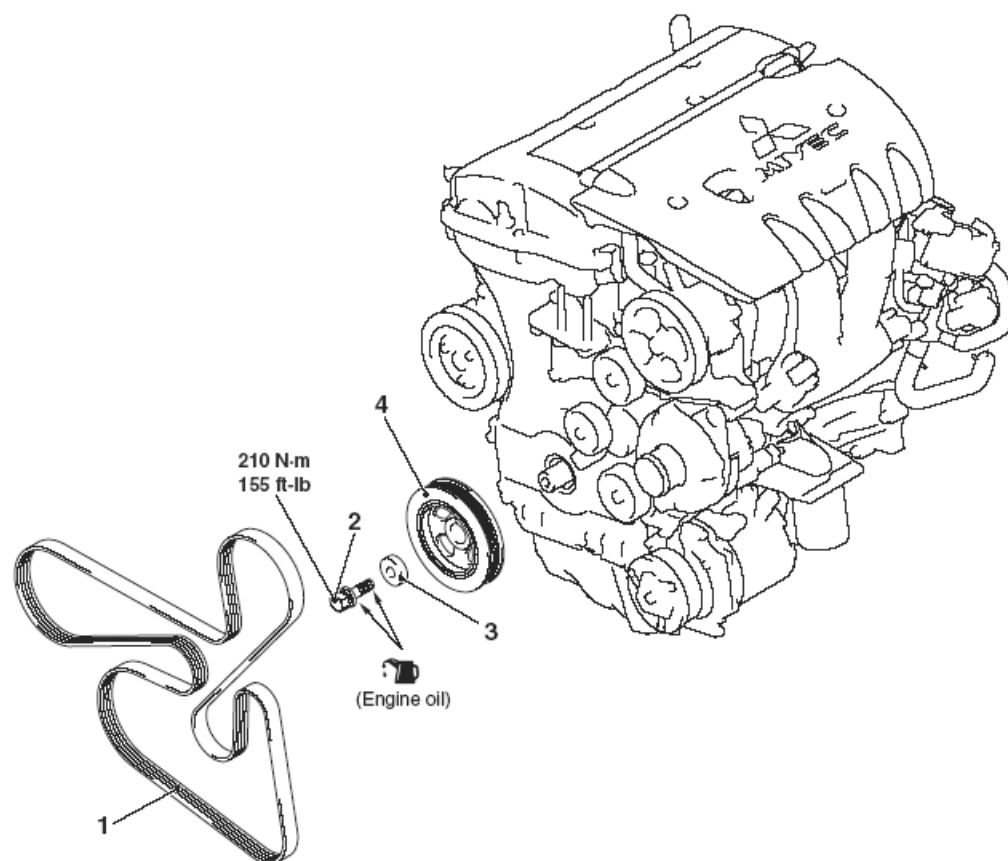

AC506736 AC

<<A>> Removal steps
 <> >>A<< 1. Drive belt
 <> >>A<< 2. Crank pulley center bolt

<> Removal steps (Continued)
 <> >>A<< 3. Crankshaft washer
 <> >>A<< 4. Crankshaft pulley

Fig. 17: Identifying Crankshaft Pulley Removing/Installing Components With Torque Specification
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

Required Special Tools:

- MB990767: Front Hub and Flange End Yoke Holder
- MD998719: Pin

REMOVAL SERVICE POINTS

<<A>> DRIVE BELT REMOVAL

To introduce the serpentine drive system with the drive belt auto-tensioner, the following operations will be required.

CAUTION: To reuse the Drive belt, draw an arrow indicating the rotating direction on the back of the belt using chalk to install the same direction.

1. Rotate the pulley bolt of the auto-tensioner counterclockwise with an offset wrench [45°, a long offset

wrench (5/8 x 11/16 inches) recommended] and insert the hexagon wrench into the auto-tensioner hole to fix the auto-tensioner.

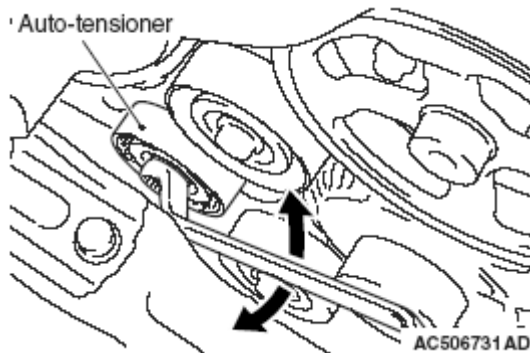


Fig. 18: Rotating Pulley Bolt Of Auto-Tensioner Counterclockwise
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

2. Remove the drive belt.

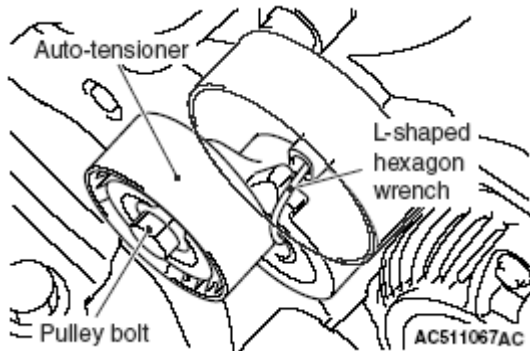


Fig. 19: Identifying Auto-Tensioner And Pulley Bolt
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

<> CRANKSHAFT PULLEY CENTER BOLT/CRANKSHAFT PULLEY WASHER/CRANKSHAFT PULLEY REMOVAL

1. Hold the crankshaft drive sprocket with special tools MB990767 and MD998719.
2. Loosen the crankshaft pulley center bolt and remove the crankshaft pulley washer and crankshaft pulley.

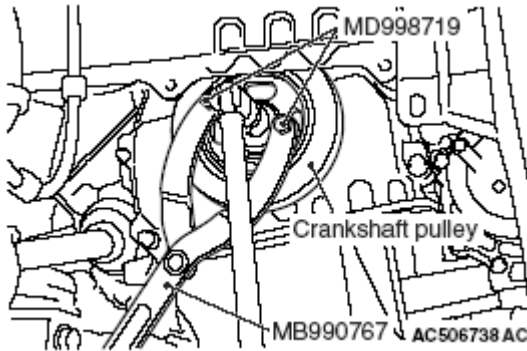


Fig. 20: Identifying Auto-Tensioner And Pulley Bolt
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

INSTALLATION SERVICE POINT

>>A<< CRANKSHAFT PULLEY/CRANKSHAFT PULLEY WASHER/CRANKSHAFT PULLEY CENTER BOLT INSTALLATION

1. Wipe off the dirt on the crankshaft and the crankshaft pulley as shown in the figure using a rag.

- : Wipe clean with a rag.
- * : Wipe clean with a rag and degrease.
- : Apply a small amount of engine oil.

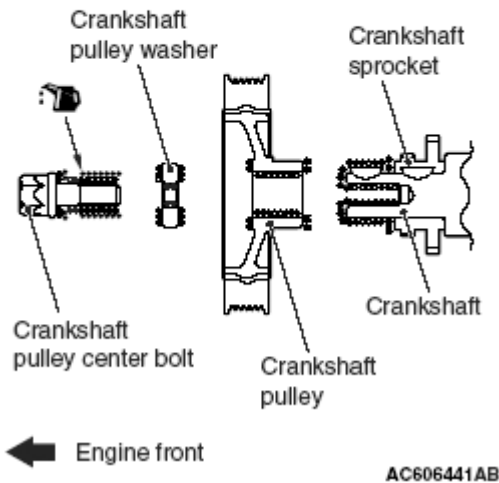


Fig. 21: Wiping Off Dirt On Crankshaft And Crankshaft Pulley
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

2. Wipe off the dirt on the crankshaft sprocket, the crankshaft and the crankshaft pulley as shown in the figure using a rag, and then degrease them.

NOTE: Degrease them to prevent drop in the friction coefficient of the pressed

area, which is caused by oil adhesion.

3. Install the crankshaft pulley.
4. Wipe off the dirt on the crankshaft pulley washer and the crankshaft pulley center bolt as shown in the figure using a rag.
5. Apply an adequate and minimum amount of engine oil to the threads of the crankshaft pulley center bolt and the lower area of the flange.
6. Hold the crankshaft pulley with special tools MB990767 and MD998719 in the same manner as removal.

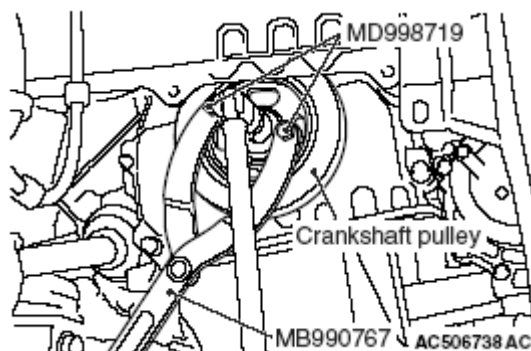



Fig. 22: Identifying Auto-Tensioner And Pulley Bolt
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

7. Tighten the crankshaft pulley center bolt to the specified torque.

Tightening torque: 210 N.m (155 ft-lb)

CAMSHAFT

REMOVAL AND INSTALLATION

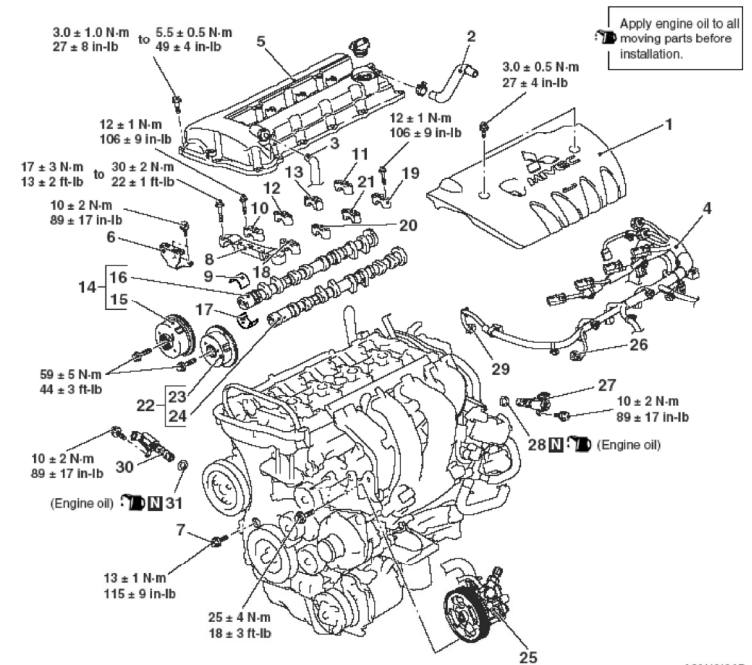

Camshaft removal steps		Camshaft removal steps	
• Air cleaner assembly	<>	• Cylinder No. 1 compression top dead center setting (only at removal)	
• Strut tower bar		• Valve clearance adjustment (only at installation)	
1. Engine upper cover		6. Timing chain upper guide	
• Ignition coil	<<C>>	7. Service hole bolt	
		• Camshaft and camshaft sprocket assembly (exhaust side) removal preparatory operation (only at removal)	
2. Breather hose connection		8. Front camshaft bearing cap assembly	
3. PCV hose connection		9. Camshaft bearing	
4. Control wiring harness connection	<<D>>	10. Oil feeding camshaft bearing cap (exhaust side)	
5. Cylinder head cover assembly	<<D>>	11. Camshaft bearing cap (exhaust side)	
		12. Camshaft bearing cap (exhaust side)	
		13. Thrust camshaft bearing cap (exhaust side)	
		14. Camshaft and camshaft sprocket assembly (exhaust side)	
		15. Camshaft sprocket (exhaust side)	
		16. Camshaft (exhaust side)	
		17. Camshaft bearing	
		18. Oil feeding camshaft bearing cap (intake side)	
		19. Camshaft bearing cap (intake side)	
		20. Camshaft bearing cap (intake side)	
		21. Thrust camshaft bearing cap (intake side)	
		22. Camshaft and camshaft sprocket assembly (intake side)	
		23. Camshaft sprocket (intake side)	
		24. Camshaft (intake side)	
		Oil control valve removal steps	
		• Drive belt	
		25. Power steering oil pump assembly	
		26. Intake engine oil control valve connector	
		27. Intake engine oil control valve	
		28. O-ring	
		29. Exhaust engine oil control valve connector	
		30. Exhaust engine oil control valve	
		31. O-ring	

Fig. 23: Identifying camshaft Removing/Installing Components With Torque Specifications
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

Required Special Tool:

- MB992103: Chain Tension Release Bar

REMOVAL SERVICE POINTS

<<A>> CYLINDER HEAD COVER ASSEMBLY REMOVAL

Loosen the cylinder head cover assembly mounting bolts in the order of number shown in the figure, and remove the cylinder head cover assembly.

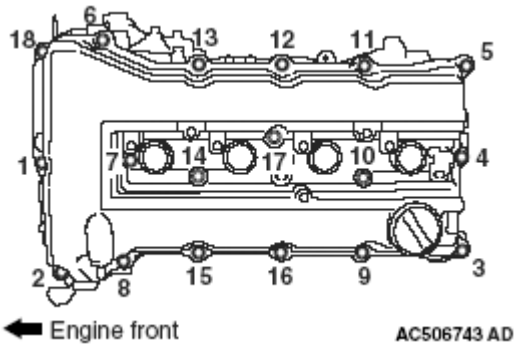


Fig. 24: Identifying Cylinder Head Cover Assembly Mounting Bolts Tightening Sequence
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

<>CYLINDER NO. 1 COMPRESSION TOP DEAD CENTER SETTING

CAUTION: Turn the crankshaft clockwise.

1. Turn the crankshaft clockwise so that the camshaft sprocket timing marks become horizontal to the cylinder head upper surface, and set the cylinder No. 1 to the top dead center of compression. At this time, check that the crankshaft pulley timing mark is in the 0-degree position of the ignition timing indicator of the timing chain case assembly.
2. Put paint marks on both the camshaft sprocket and timing chain at the position of camshaft sprocket timing chain mating mark (circular hole).

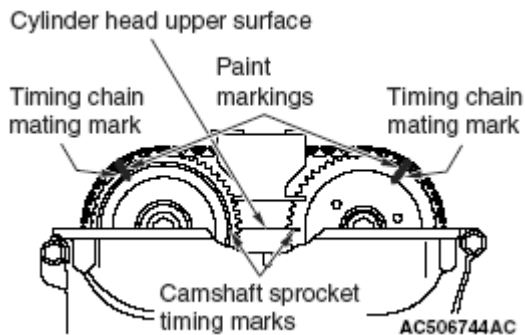


Fig. 25: Identifying Timing Chain Mating Mark
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

<<C>> CAMSHAFT AND CAMSHAFT SPROCKET ASSEMBLY (EXHAUST SIDE) REMOVAL PREPARATORY OPERATION

1. Insert a precision flat-tipped screwdriver (-) through the service hole of the timing chain case, press up the timing chain tensioner ratchet to unlock, and keep the timing chain tensioner with that state.

NOTE: Lightly press down the tail end of the precision flat-tipped screwdriver (-) to press up the tip of the precision flat-tipped screwdriver (-) inserted to the timing chain tensioner to unlock.

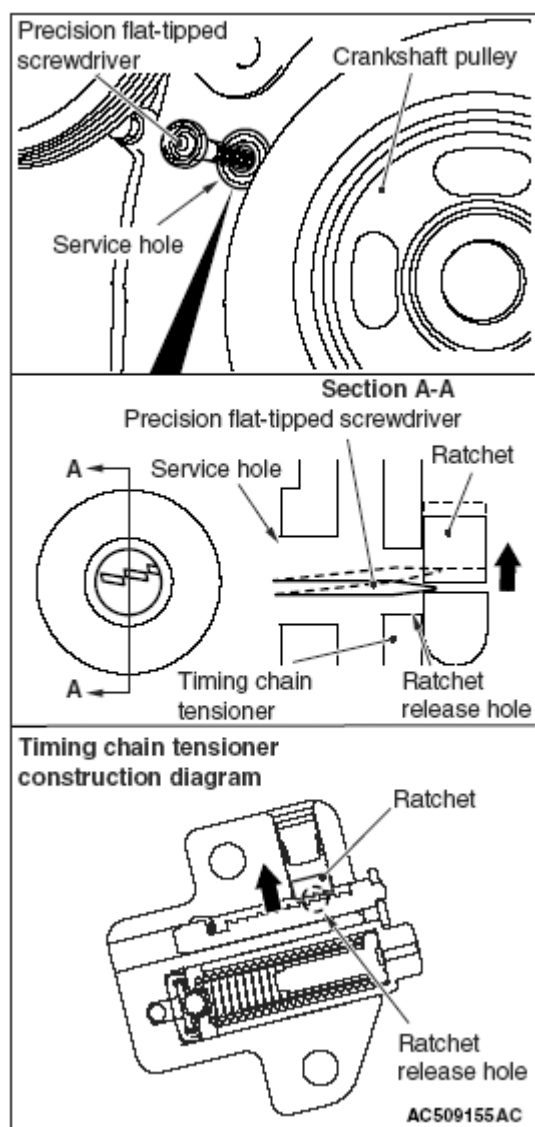


Fig. 26: Pressing Up Timing Chain Tensioner Ratchet To Unlock
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

CAUTION:

- When inserting special tool MB992103 into the timing chain case assembly inside, pay attention to the position of the timing

chain to avoid damage to the timing chain and timing chain tension side guide. Do not insert the special tool beyond its insertion guideline.

- If unlocking the timing chain tensioner is insufficient, the special tool cannot be inserted to the insertion guideline. Do not insert the special tool forcibly, follow Step 1 again to unlock the timing chain tensioner and insert the special tool.

2. With the timing chain tensioner unlocked, insert special tool MB992103 inside the timing chain case assembly along the tension side of the timing chain until the insertion guide line aligns with the upper surface of the timing chain case assembly (Figure A).

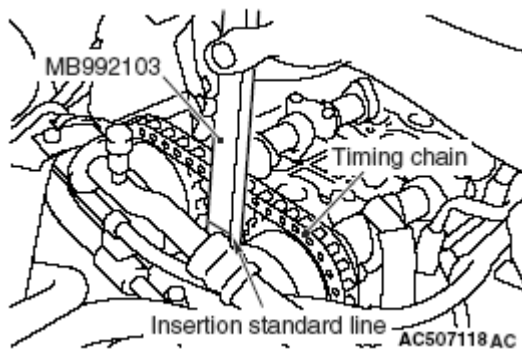


Fig. 27: Inserting Special Tool MB992103 Inside Timing Chain Case Assembly
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

NOTE: With the timing chain tensioner unlocked, insert the special tool along the tension side of the timing chain, according to the special tool top shape. The special tool can be inserted smoothly to the position where the special tool insertion guide line aligns with the timing chain case assembly top surface (Figure B), and the spread timing chain tension side guide can be held (Figure C).

3. With the special tool inserted up to the insertion guide line, press the special tool against the intake side camshaft sprocket and spread and hold the timing chain tension side guide.

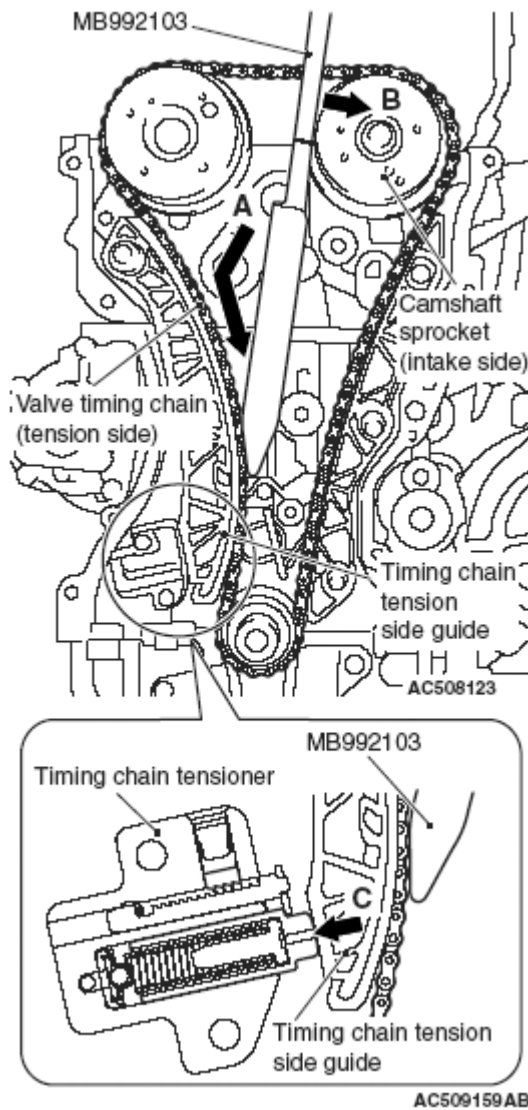


Fig. 28: Unlocking Timing Chain Tensioner

Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

4. Remove the flat-tipped precision screwdriver (-) unlocking the timing chain tensioner.

CAUTION: The timing chain may snag on by other parts. After sagging the timing chain, never rotate the crankshaft.

5. With the timing chain tension side guide spread, hook the special tool over the hexagon part of the camshaft on the exhaust side, and turn the camshaft clockwise to apply slack to the timing chain between the camshaft sprockets.

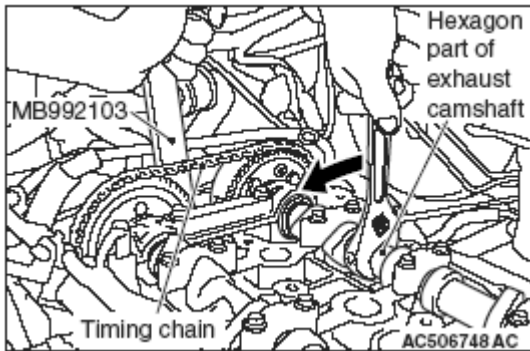


Fig. 29: Hooking Special Tool Over Hexagon Part Of Camshaft
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

<<D>> FRONT CAMSHAFT BEARING CAP ASSEMBLY REMOVAL

Loosen the mounting bolts of front camshaft bearing cap in the order of number shown in the figure, and remove the front camshaft bearing cap assembly.

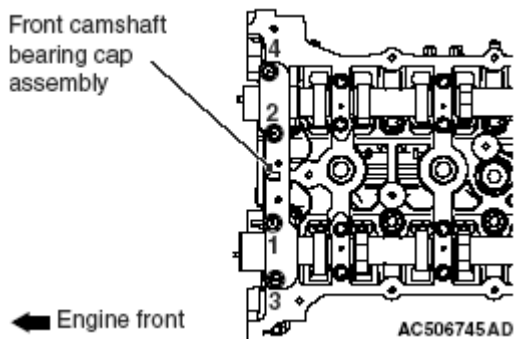


Fig. 30: Identifying Front Camshaft Bearing Cap Mounting Bolts Numerical Sequence
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

<<E>> OIL FEEDING CAMSHAFT BEARING CAP/CAMSHAFT BEARING CAP/THRUST CAMSHAFT BEARING CAP REMOVAL

CAUTION: When the camshaft bearing cap mounting bolts are loosened at once, the mounting bolts jump out by the spring force and the threads are damaged. Always loosen the mounting bolts in four or five steps.

Loosen the mounting bolts of the camshaft bearing caps in the order of number shown in the figure in four or five steps, and remove the camshaft bearing caps.

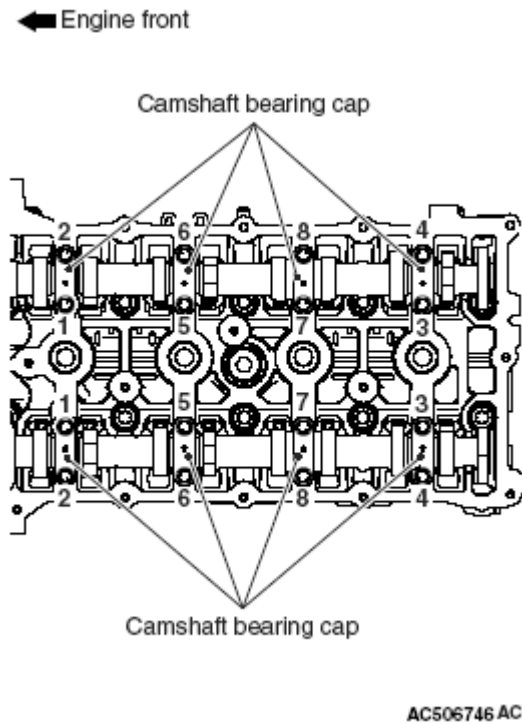


Fig. 31: Identifying Camshaft Bearing Cap Mounting Bolts Loosening Sequence
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

<<F>> CAMSHAFT AND CAMSHAFT SPROCKET ASSEMBLY (EXHAUST SIDE) REMOVAL

1. Raise slightly the transaxle side of the camshaft and camshaft sprocket assembly (exhaust side) by using the slack of the timing chain, and remove from the cam bearing.

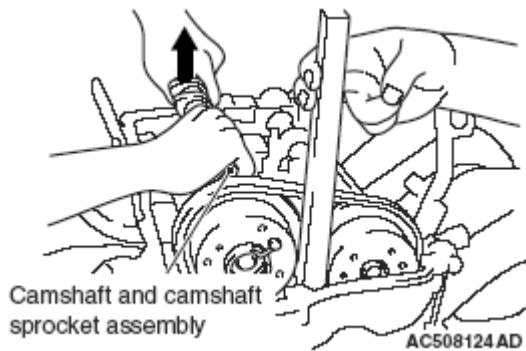


Fig. 32: Raising Transaxle Side Of Camshaft And Camshaft Sprocket Assembly
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

2. Remove the timing chain from the camshaft and camshaft sprocket assembly (exhaust side) toward the timing chain case assembly, and remove the camshaft and camshaft sprocket assembly (exhaust side) toward the transaxle.
3. Remove special tool MB992103 inserted into the timing chain case assembly.

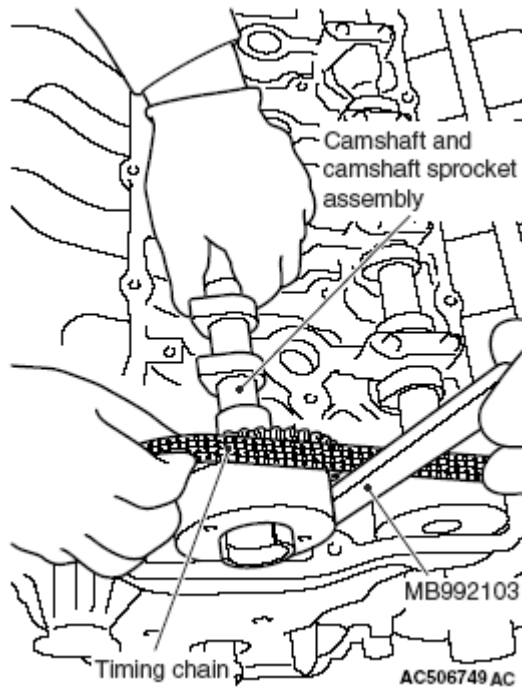


Fig. 33: Removing Timing Chain From Camshaft And Camshaft Sprocket Assembly
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

CAUTION: The timing chain may snag on other parts. After removing the camshaft and camshaft sprocket assembly, never rotate the crankshaft.

4. After removing the camshaft and camshaft sprocket assembly (exhaust side), hang up the timing chain with a rope to prevent the timing chain from falling into the timing chain case assembly.

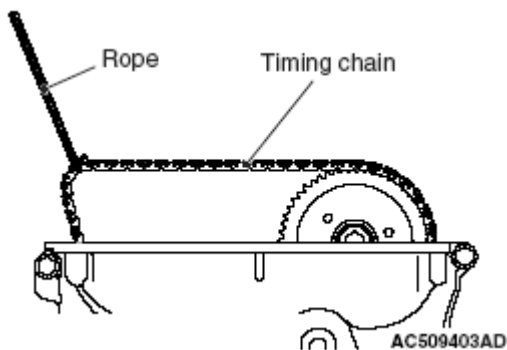


Fig. 34: Hanging Up Timing Chain With Rope
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

<<G>> CAMSHAFT SPROCKET/CAMSHAFT REMOVAL

Hold the flats of the camshaft with a monkey wrench. Loosen the camshaft sprocket mounting bolts and remove the camshaft sprocket from the camshaft.

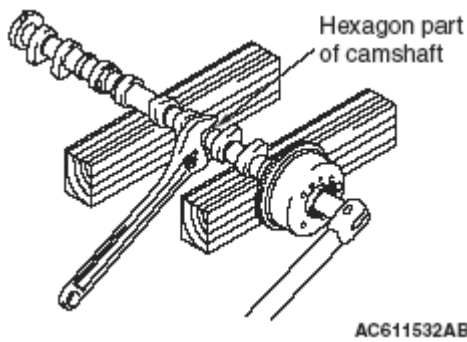


Fig. 35: Holding Flats Of Camshaft With Monkey Wrench
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

<<H>> POWER STEERING OIL PUMP ASSEMBLY REMOVAL

1. With the hose installed, remove the power steering oil pump assembly from the bracket.
2. Tie the removed power steering oil pump assembly with a string at a position where it will not interfere with the removal and installation of oil control valve.

<<I>> OIL CONTROL VALVE REMOVAL

CAUTION: After removal of the oil control valve, be careful to prevent dust from getting into the oil passage in the cylinder head.

INSTALLATION SERVICE POINTS

>>A<< O-RING/OIL CONTROL VALVE INSTALLATION

CAUTION: When installing the oil control valve, be careful to avoid damage to the O-ring.

Apply engine oil to the O-ring of the oil control valve and install the oil control valve to the cylinder head.

>>B<< CAMSHAFT/CAMSHAFT SPROCKET INSTALLATION

1. Use a monkey wrench to secure the flats of the camshaft in the same manner as removal.

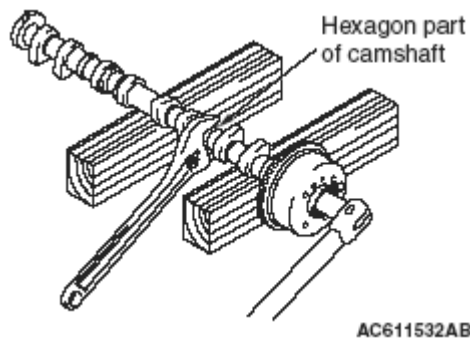


Fig. 36: Holding Flats Of Camshaft With Monkey Wrench
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

2. Apply an adequate and minimum amount of engine oil to the camshaft and camshaft sprocket as shown in the figure.

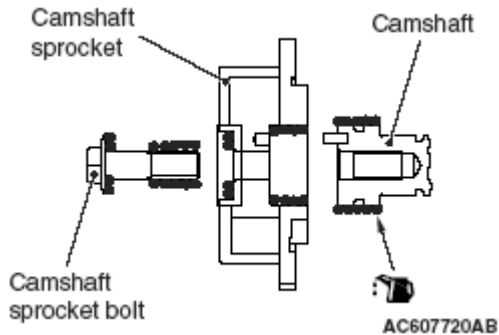


Fig. 37: Applying Engine Oil To Camshaft And Camshaft Sprocket
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

3. Install the camshaft sprocket to the camshaft.
4. Apply an adequate and minimum amount of engine oil to the camshaft sprocket bolt.
5. Tighten the camshaft sprocket bolts to the specified torque.

Tightening torque: 59 ± 5 N.m (44 ± 3 ft-lb)

>>C<< CAMSHAFT AND CAMSHAFT SPROCKET ASSEMBLY (INTAKE SIDE) INSTALLATION

1. Align the intake side paint mark of the timing chain which was put at removal with the paint mark of the intake side camshaft sprocket, and install the camshaft sprocket to the timing chain.

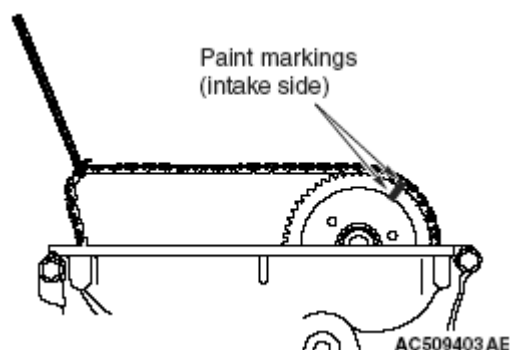


Fig. 38: Aligning Intake Side Paint Mark Of Timing Chain
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

2. Install the camshaft and camshaft sprocket assembly (intake side) to the cylinder head.

>>D<< THRUST CAMSHAFT BEARING CAP/CAMSHAFT BEARING CAP/OIL FEEDING CAMSHAFT BEARING CAP/CAMSHAFT BEARING INSTALLATION

1. Install the camshaft bearing caps to the cylinder heads.

NOTE: Because the thrust camshaft bearing cap and camshaft bearing cap are the same in shape, check the bearing cap number and additionally its symbol to identify the intake and exhaust sides for correct installation.

2. Tighten each camshaft bearing cap mounting bolt to the specified torque in the order of number shown in the figure in two or three steps.

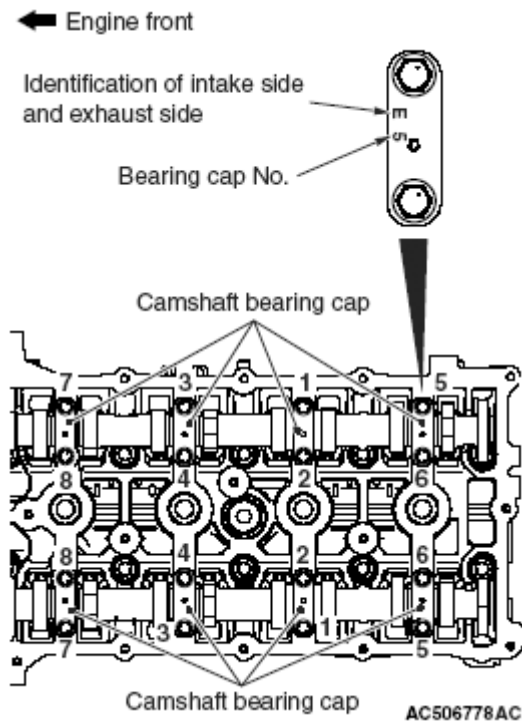


Fig. 39: Identifying Camshaft Bearing Cap Mounting Bolt Tightening Sequence
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

Tightening torque: 12 ± 1 N.m (106 ± 9 in-lb)

>>E<< CAMSHAFT BEARING/CAMSHAFT AND CAMSHAFT SPROCKET ASSEMBLY (EXHAUST SIDE) INSTALLATION


CAUTION: Be careful not to drop the camshaft bearing.

1. Install camshaft bearings on the cylinder head.

CAMSHAFT SPECIFICATIONS

Camshaft		Camshaft bearing identification color
Identification mark	Journal diameter mm (in)	
1	40.000 - 40.008 (1.5748 - 1.5751)	Black
2	40.008 - 40.016 (1.5751 - 1.5754)	None
3	40.016 - 40.024 (1.5754 - 1.5757)	Green

2. The identification color of the camshaft bearing is painted at the illustrated position.

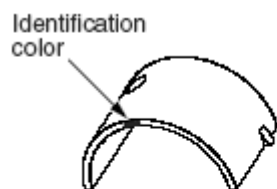

AC611233AB

Fig. 40: Identifying Camshaft Bearing Identification Color
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

3. In the same manner as removal, insert the precision flat-tipped screwdriver (-) through the service hole of the timing chain case, press up the ratchet of timing chain tensioner to unlock, and hold the unlocked timing chain tensioner.

NOTE: **Lightly press down the tail end of the precision flat-tipped screwdriver (-) to press up the tip of the precision flat-tipped screwdriver (-) inserted to the timing chain tensioner to unlock.**

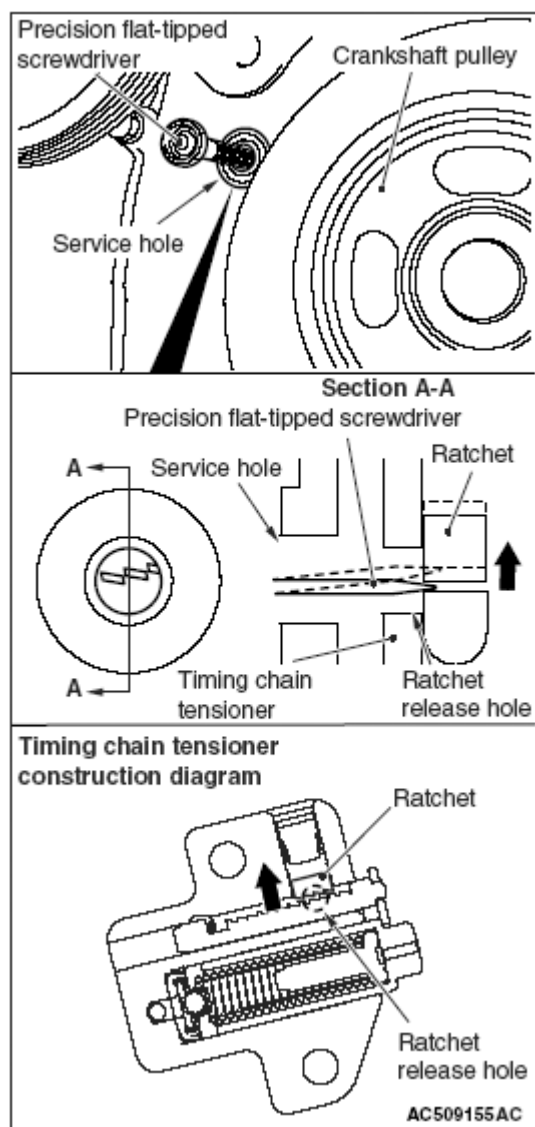


Fig. 41: Pressing Up Timing Chain Tensioner Ratchet To Unlock
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

CAUTION:

- When inserting special tool MB992103 into the timing chain case assembly, pay attention to the position of the timing chain to avoid damage to the timing chain and timing chain tension side guide. Do not insert the special tool beyond its insertion guideline.
- If unlocking the timing chain tensioner is insufficient, the special tool cannot be inserted to the insertion guideline. Do not insert the special tool forcibly, follow Step 1 again to unlock the timing chain tensioner and insert the special tool.

4. With the timing chain tensioner unlocked, insert special tool MB992103 inside the timing chain case

assembly along the tension side of the timing chain until the insertion guide line aligns with the upper surface of the timing chain case assembly (Figure A).

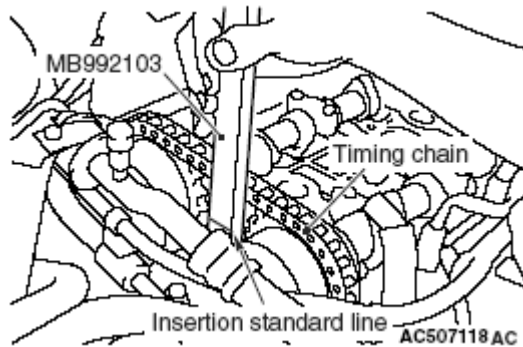


Fig. 42: Inserting Special Tool MB992103 Inside Timing Chain Case Assembly
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

NOTE: With the timing chain tensioner unlocked, insert the special tool along the tension side of the timing chain, according to the special tool top shape. The special tool can be inserted smoothly to the position where the special tool insertion guideline aligns with the timing chain case assembly top surface, and the spread timing chain tension side guide can be hold.

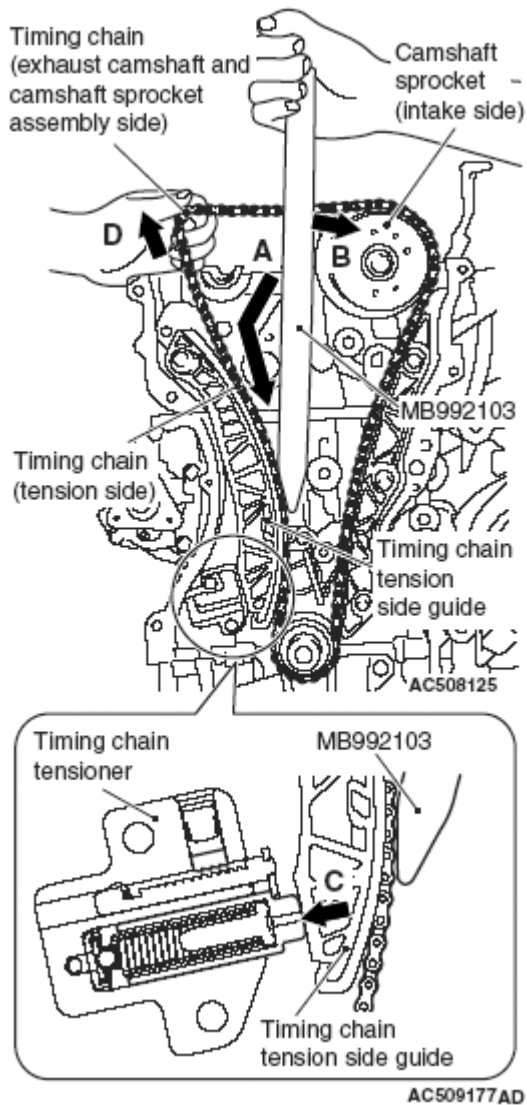


Fig. 43: Unlocking Timing Chain Tensioner

Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

5. With the special tool inserted up to the insertion guide line, press the special tool against the intake side camshaft sprocket (Figure B) and spread and hold the timing chain tension side guide (Figure C).
6. Remove the flat-tipped precision screwdriver (-) unlocking the timing chain tensioner.
7. Pull up the camshaft and camshaft sprocket assembly (exhaust side) mounting area of the timing chain (Figure D) to provide allowance for easy installation of the camshaft and camshaft sprocket assembly (exhaust side) to the timing chain.

CAUTION: When installing the camshaft and camshaft sprocket assembly (exhaust side), be careful not to let the camshaft bearing which is installed to the front cam bearing deviate from its position.

8. Align the exhaust side paint mark of the timing chain which was put at removal with the paint mark of the

exhaust side camshaft sprocket, and install the timing chain to the camshaft sprocket.

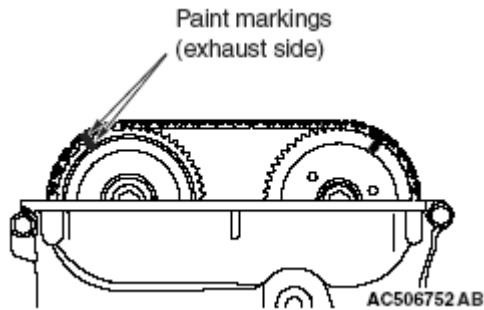


Fig. 44: Aligning Exhaust Side Paint Mark Of Timing Chain
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

9. Install the camshaft and camshaft sprocket assembly (exhaust side) to the cylinder head.
10. Remove the special tool inserted into the timing chain case assembly inside.

>>F<< FRONT CAMSHAFT BEARING CAP ASSEMBLY INSTALLATION

CAUTION: When the mounting bolts are tightened with the front camshaft bearing cap tilted, the front camshaft bearing cap is damaged. Install the front camshaft bearing cap properly to the cylinder head and camshaft.

1. Install the front camshaft bearing cap to the cylinder head, and temporarily tighten the camshaft bearing front cap to the specified torque in the order of the figure (1).

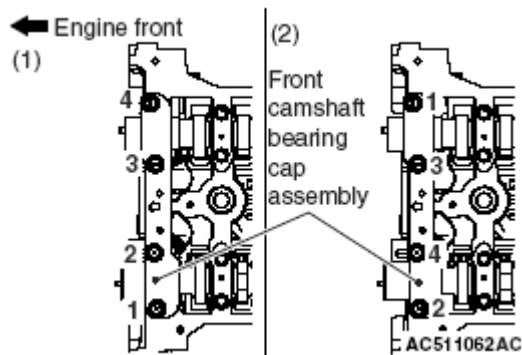


Fig. 45: Identifying Front Camshaft Bearing Cap Bolts Tightening Sequence
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

Tightening torque: 17 ± 3 N.m (13 ± 2 ft-lb)

2. Tighten the front camshaft bearing cap again to the specified torque in the order of the figure (2).

Tightening torque: 30 ± 2 N.m (22 ± 1 ft-lb)

3. After the front camshaft bearing cap installation, check that the paint markings of the camshaft sprocket

and the timing chain and the timing mark of the crankshaft pulley and the 0-degree position of ignition timing indicator are aligned respectively.

>>G<< CYLINDER HEAD COVER ASSEMBLY INSTALLATION

1. Wipe off the sealant on the mating surface of the cylinder head cover assembly and the cylinder head and timing chain case assembly, and degrease the surface where the sealant is applied by white gasoline or the like.
2. Apply sealant to the joint between the cylinder head and timing chain case assembly as shown in the figure and install the cylinder head cover assembly to the cylinder head.

Specified sealant: Three bond 1227D or equivalent

NOTE: Install the cylinder head cover assembly within 3 minutes after the application of sealant.

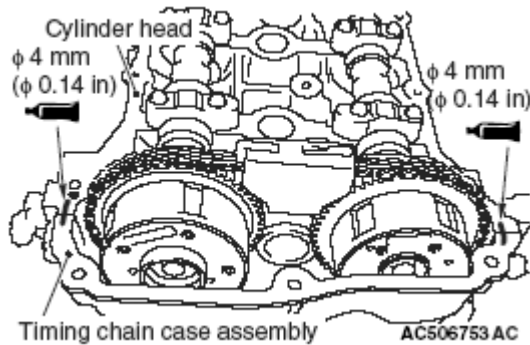


Fig. 46: Applying Sealant To Joint Between Cylinder Head And Timing Chain Case Assembly
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

3. Tighten the cylinder head cover assembly mounting bolts to the specified torque in the order of number shown in the figure.

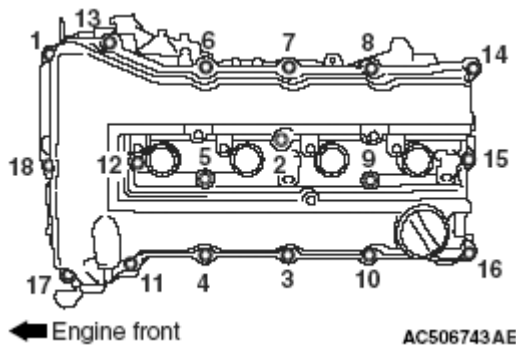


Fig. 47: Identifying Cylinder Head Cover Assembly Mounting Bolts Tightening Sequence
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

Tightening torque: 3.0 ± 1.0 N.m (27 ± 8 in-lb)

4. Tighten again the cylinder head cover assembly mounting bolts to the specified torque in the order of number shown in the figure.

Tightening torque: 5.5 ± 0.5 N.m (49 ± 4 in-lb)


VALVE STEM SEAL

REMOVAL AND INSTALLATION

CAUTION: *Remove and assemble the marked parts in each cylinder unit.

REMOVAL AND INSTALLATION CHART

Pre-removal operation	Post-installation operation
• Engine Room Under Cover Front Removal (Refer to <u>UNDER COVER</u>). • Engine Room Side Cover (RH) Removal (Refer to <u>UNDER COVER</u>). • Cylinder Head Cover Assembly Removal (Refer to <u>CAMSHAFT</u>). • Engine Oil Pan Removal (Refer to <u>OIL PAN</u>).	• Engine Oil Pan Installation (Refer to <u>OIL PAN</u>). • Valve Clearance Check (Refer to <u>VALVE CLEARANCE CHECK AND ADJUSTMENT</u>). • Cylinder Head Cover Assembly Installation (Refer to <u>CAMSHAFT</u>). • Engine Oil Refilling (Refer to <u>ON-VEHICLE SERVICE</u> , <u>ENGINE OIL REPLACEMENT</u>). • Engine Room Side Cover (RH) Installation (Refer to <u>UNDER COVER</u>). • Engine Room Under Cover Front Installation (Refer to <u>UNDER COVER</u>).

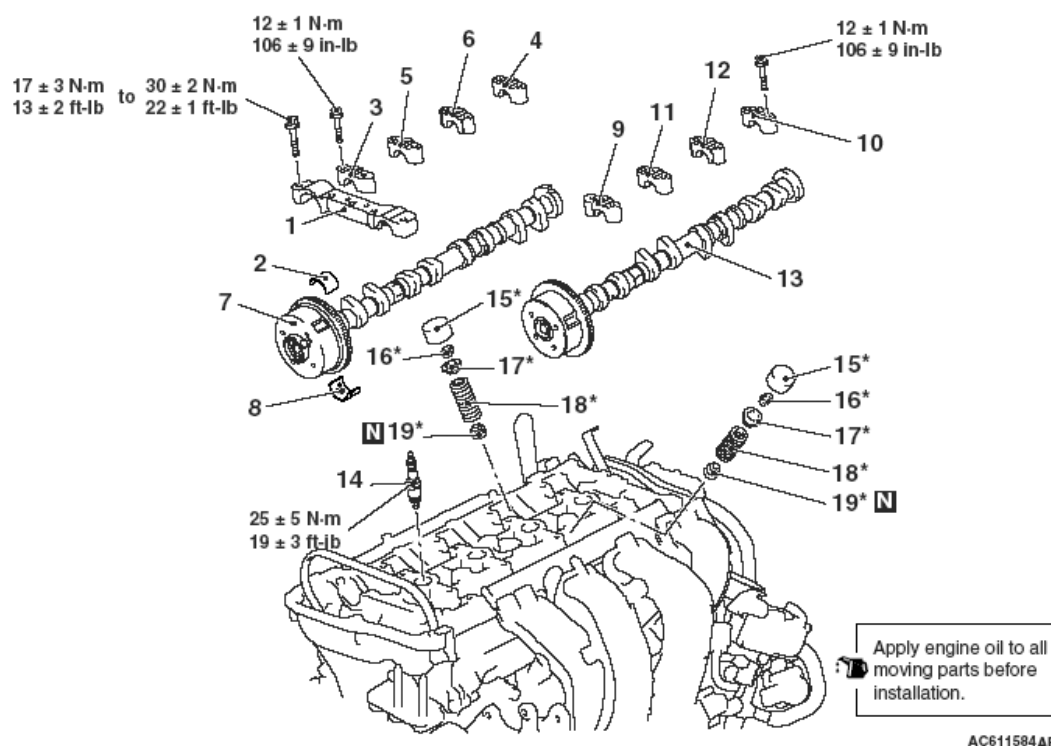

Removal steps		Removal steps (Continued)	
<<A>>	>>F<<	1.	Front camshaft bearing cap assembly
<>	>>D<<	2.	Camshaft bearing
<>	>>D<<	3.	Oil feeding camshaft bearing cap (exhaust side)
<>	>>D<<	4.	Camshaft bearing cap (exhaust side)
<>	>>D<<	5.	Camshaft bearing cap (exhaust side)
<>	>>D<<	6.	Thrust camshaft bearing cap (exhaust side)
<>	>>D<<	7.	Camshaft and camshaft sprocket assembly (exhaust side)
<>	>>D<<	8.	Camshaft bearing
<>	>>D<<	9.	Oil feeding camshaft bearing cap (intake side)
<>	>>D<<	10.	Camshaft bearing cap (intake side)
<>	>>D<<	11.	Camshaft bearing cap (intake side)
<>	>>D<<	12.	Thrust camshaft bearing cap (intake side)
<>	>>D<<	13.	Camshaft and camshaft sprocket assembly (intake side)
<<C>>	>>C<<	14.	Spark plug
<<D>>	>>B<<	15.	Valve tappet
<<D>>	>>B<<	16.	Valve spring retainer lock
<<D>>	>>B<<	17.	Valve spring retainer
<<D>>	>>B<<	18.	Valve spring
<<E>>	>>A<<	19.	Valve stem seal

Fig. 48: Identifying Valve Stem Seal Removing/Installing Components With Torque Specifications
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

Required Special Tools:

- MD998772: Valve Spring Compressor
- MB992089: Retainer Holder C
- MB992090: Retainer Holder Attachment
- MB992085: Valve Stem Seal Pliers
- MD998737: Valve Stem Seal Installer

REMOVAL SERVICE POINTS**<<A>> FRONT CAMSHAFT BEARING CAP ASSEMBLY REMOVAL**

CAUTION: Be careful not to drop the camshaft bearing.

Loosen the mounting bolts of front camshaft bearing cap in the order of number shown in the figure, and remove the front camshaft bearing cap assembly.


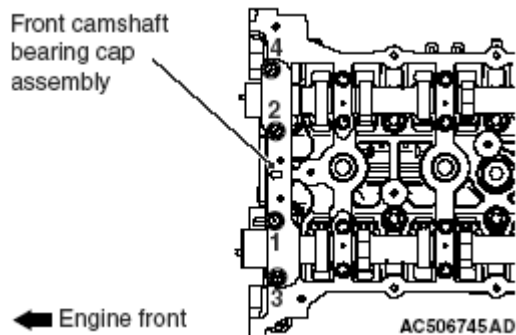


Fig. 49: Identifying Front Camshaft Bearing Cap Bolts Numerical Order
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

<> OIL FEEDING CAMSHAFT BEARING CAP/CAMSHAFT BEARING CAP/THRUST CAMSHAFT BEARING CAP REMOVAL

CAUTION: When the camshaft bearing cap mounting bolts are loosened at once, the mounting bolts jump out by the spring force and the threads are damaged. Always loosen the mounting bolts in four or five steps.

Loosen the mounting bolts of the camshaft bearing caps in the order of number shown in the figure in four or five steps, and remove the camshaft bearing caps.

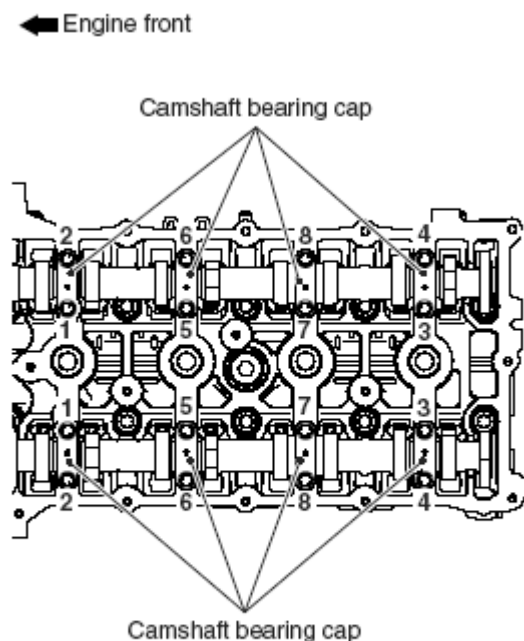

AC506746 AC


Fig. 50: Identifying Camshaft Bearing Cap Mounting Bolts Loosening Sequence
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

<<C>> VALVE TAPPET REMOVAL

CAUTION:

- Do not use pliers or other tools to remove the valve tappets. Always remove them by hand.
- When reusing the removed valve tappet, it has to be installed in the same position as before. Be sure to put a tab that shows the original installation position on the valve tappet when storing it.

Remove all of the valve tappets by hand.

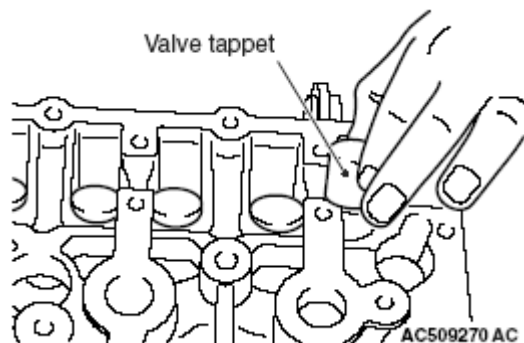

AC509270 AC

Fig. 51: Removing/Installing Valve Tappets
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

<<D>> VALVE SPRING RETAINER LOCK REMOVAL

1. Screw in special tool MB992090 to special tool MD998772 and assemble special tool MB992089.

CAUTION: When removing the valve spring retainer lock, leave the piston of the cylinder in the TDC (Top Dead Center) position. The valve may fall into the cylinder if the piston is not properly in the TDC position.

2. Install special tool MD998772 (with special tools MB992090 and MB992089 attached) to the cylinder head and compress the valve spring. Then, remove the valve spring retainer lock.

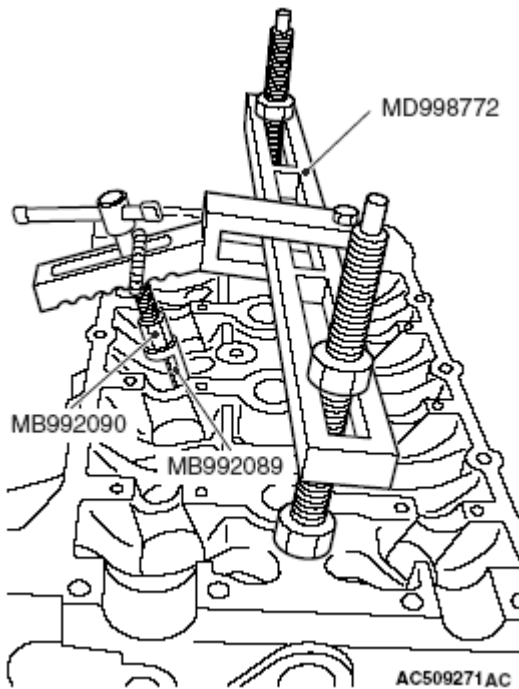


Fig. 52: Installing Special Tool MD998772 To Cylinder Head
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

<<E>> VALVE STEM SEAL REMOVAL

Use special tool MB992085 to grip the base of the stem seal (where the outside diameter is larger) securely, and remove it by twisting it to the left and right.

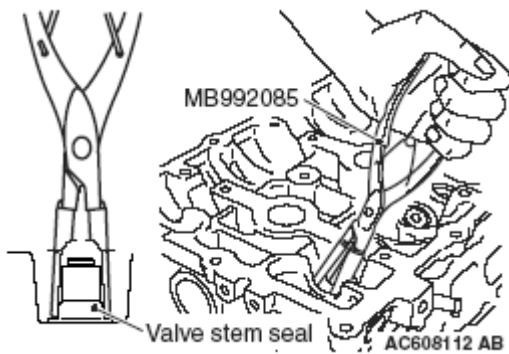


Fig. 53: Gripping Base Of Stem Seal

Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

INSTALLATION SERVICE POINTS

>>A<< VALVE STEM SEAL INSTALLATION

1. Apply a small amount of engine oil to the valve stem seals.

CAUTION:

- Valve stem seals cannot be reused.
- Do not damage the wall of the tappet hole when installing the valve stem seal.
- Special tool MD998737 must be used to install the valve stem seal. Improper installation of the valve stem seal could result in oil leaking past the valve guide.

2. Use special tool MD998737 to press-fit a new valve stem seal in the valve guide using the valve stem area as a guide.

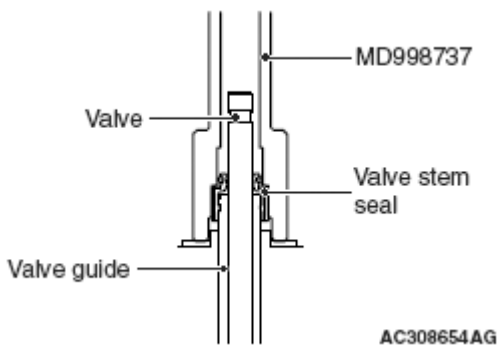


Fig. 54: Pressing Valve Stem Seal In Valve Guide

Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

>>B<< VALVE SPRING RETAINER LOCK INSTALLATION

In the same manner as removal, use special tool MD998772 with special tool MB992090 and special tool MB992089 attached to compress the valve spring, and install the valve spring retainer lock.

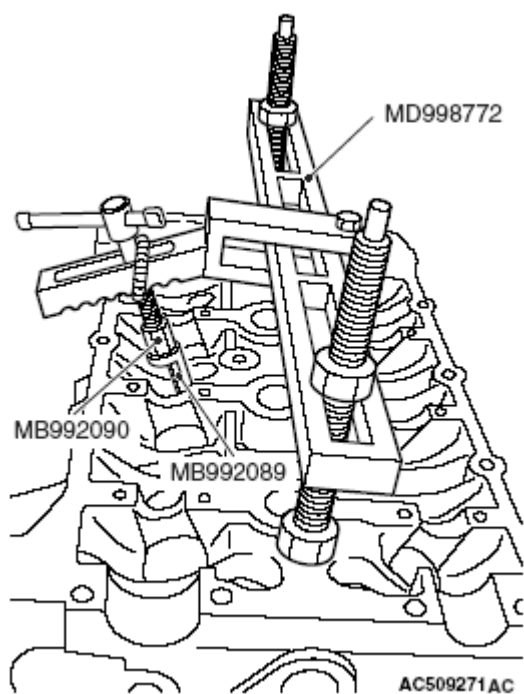


Fig. 55: Installing Special Tool MD998772 To Cylinder Head
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

>>C<< VALVE TAPPET INSTALLATION

1. Apply a small amount of engine oil to the valve tappets.

CAUTION: Be sure to install the valve tappets in the same position as before.

2. Install the valve tappet to the cylinder head.

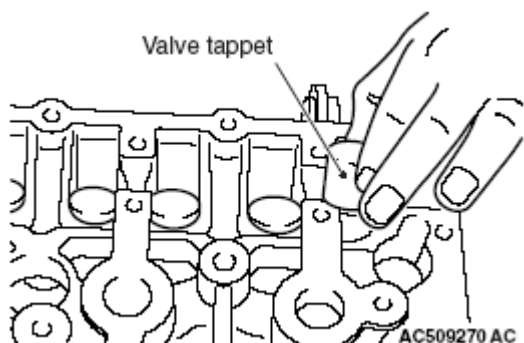


Fig. 56: Removing/Installing Valve Tappets
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

>>D<< THRUST CAMSHAFT BEARING CAP/CAMSHAFT BEARING CAP/OIL FEEDING CAMSHAFT BEARING CAP
INSTALLATION

1. Install the camshaft bearing caps to the cylinder heads.

NOTE: Because the thrust camshaft bearing cap and camshaft bearing cap are the same in shape, check the cap number and additionally its symbol to identify the intake and exhaust sides for correct installation.

2. Tighten each camshaft bearing cap to the specified torque in the order of number shown in the figure in two or three steps.

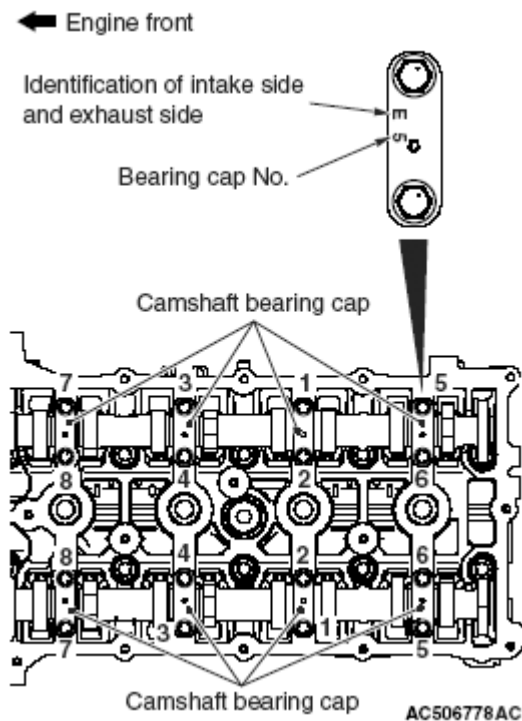


Fig. 57: Identifying Camshaft Bearing Cap Bolts Tightening Sequence
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

Tightening torque: 12 ± 1 N.m (106 ± 9 in-lb)

>>E<< CAMSHAFT AND CAMSHAFT SPROCKET ASSEMBLY (EXHAUST SIDE) INSTALLATION

CAUTION: When installing the camshaft and camshaft sprocket assembly (exhaust side), be careful not to let the camshaft bearing which is installed to the front cam bearing deviate from its position.

>>F<< FRONT CAMSHAFT BEARING CAP ASSEMBLY INSTALLATION

CAUTION: When the mounting bolts are tightened with the front camshaft bearing cap tilted, the front camshaft bearing cap is damaged. Install the front camshaft bearing cap properly to the cylinder head and camshaft.

1. Install the front camshaft bearing cap to the cylinder head, and temporarily tighten the front camshaft bearing cap to the specified torque in the order of the figure (1).

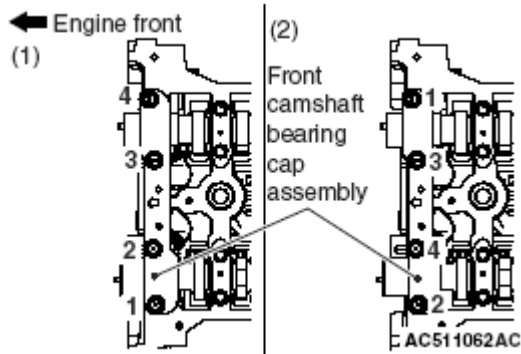


Fig. 58: Identifying Front Camshaft Bearing Cap Bolts Tightening Sequence
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

Tightening torque: 17 ± 3 N.m (13 ± 2 ft-lb)

2. Tighten the front camshaft bearing cap again to the specified torque in the order of the figure (2).


Tightening torque: 30 ± 2 N.m (22 ± 1 ft-lb)

OIL PAN

REMOVAL AND INSTALLATION

REMOVAL AND INSTALLATION CHART

Pre-removal operation	Post-installation operation
• Engine Room Under Cover Front Removal (Refer to <u>UNDER COVER</u>). • Engine Room Side Cover (RH) Removal (Refer to <u>UNDER COVER</u>). • Engine Oil Draining (Refer to <u>ENGINE OIL REPLACEMENT</u>). • Drive Belt Removal (Refer to <u>CRANKSHAFT PULLEY</u>).	• Drive Belt Installation (Refer to <u>CRANKSHAFT PULLEY</u>). • Engine Oil Refilling (Refer to <u>ON-VEHICLE SERVICE</u> , <u>ENGINE OIL REPLACEMENT</u>). • Engine Room Side Cover (RH) Installation (Refer to <u>UNDER COVER</u>). • Engine Room Under Cover Front Installation (Refer to <u>UNDER COVER</u>).

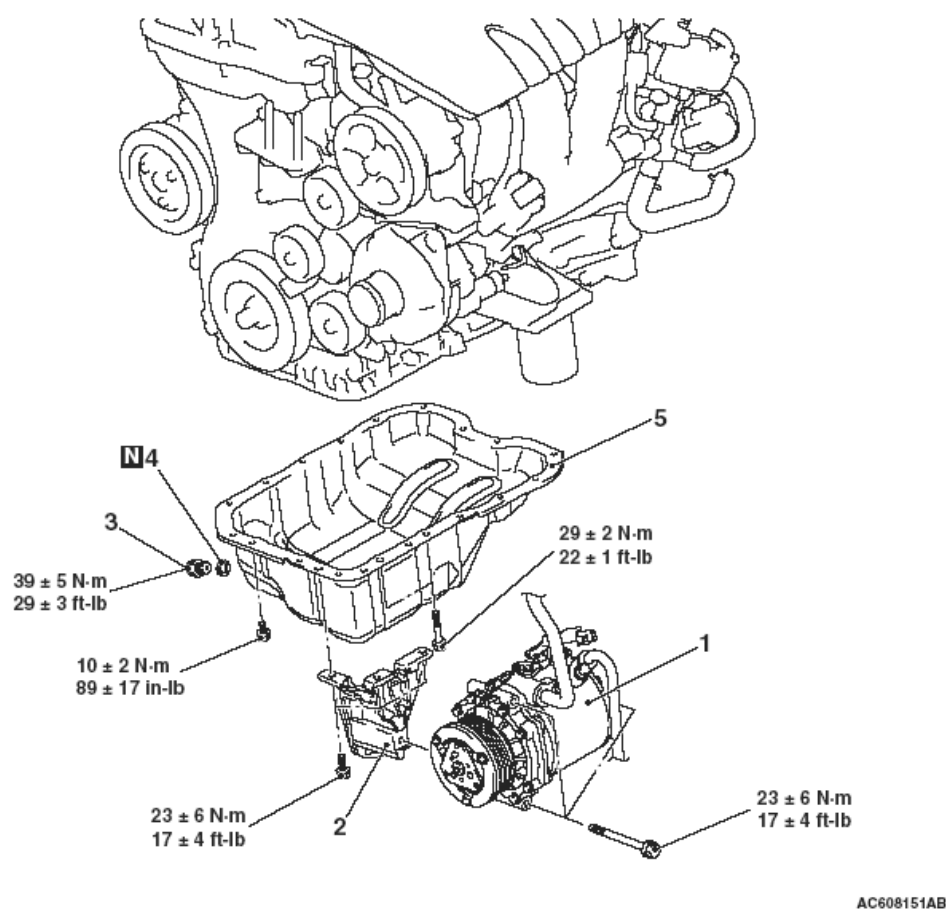

AC608151AB

- Removal steps**
- <<A>> >>C<< 1. A/C compressor and clutch assembly
2. A/C compressor bracket

- Removal steps (Continued)**
- >>B<< 3. Engine oil pan drain plug
- <> >>A<< 4. Engine oil pan drain plug gasket
5. Engine oil pan

Fig. 59: Identifying Oil Pan Removing/Installing Components With Torque Specifications
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

Required Special Tool:

- MD998727: Oil Pan FIPG Cutter

REMOVAL SERVICE POINTS

<<A>> A/C COMPRESSOR AND CLUTCH ASSEMBLY REMOVAL

1. Loosen the mounting bolts of A/C compressor and clutch assembly in the order of number as shown in the figure.

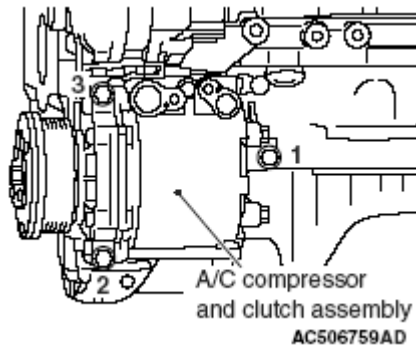


Fig. 60: Identifying A/C Compressor And Clutch Assembly
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

2. Remove the A/C compressor and clutch assembly together with the hose from the bracket.
3. Tie the removed A/C compressor and clutch assembly with a string at a position where they will not interfere with the removal and installation of engine oil pan.

<> ENGINE OIL PAN REMOVAL

1. Remove the engine oil pan mounting bolts.

CAUTION: Do not forcibly drive in special tool MD998727 to avoid damage to the engine oil pan seal surface of cylinder block assembly.

2. Insert special tool MD998727 from the engine oil pan removal groove of the cylinder block assembly.

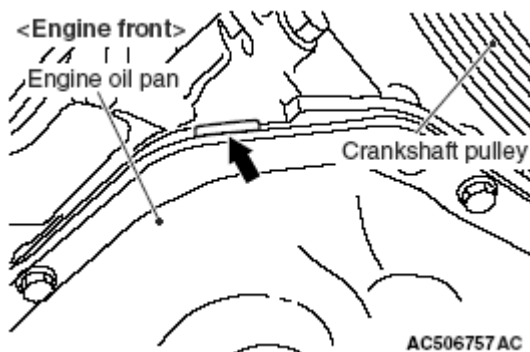


Fig. 61: Inserting Special Tool MD998727 From Engine Oil Pan Removal Groove - Engine Front
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

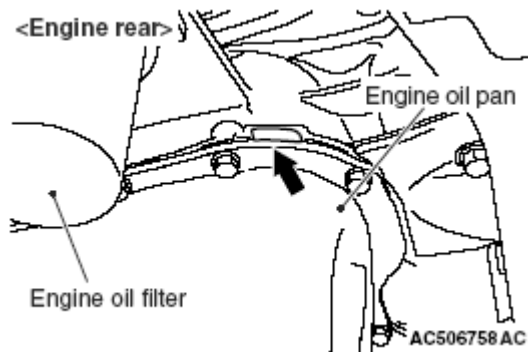


Fig. 62: Inserting Special Tool MD998727 From Engine Oil Pan Removal Groove - Engine Rear
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

3. Lightly tap the special tool with a hammer to slide the oil pan seal surface, cut off the liquid gasket, and remove the engine oil pan.

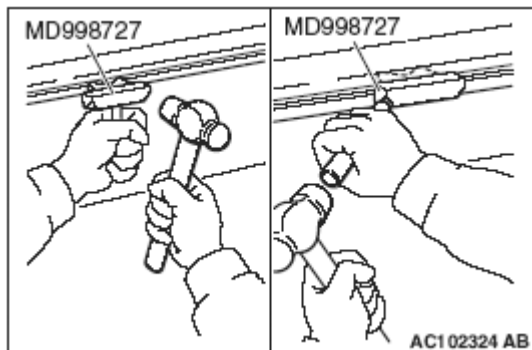


Fig. 63: Sliding Oil Pan Seal Surface
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

INSTALLATION SERVICE POINTS

>>A<< ENGINE OIL PAN INSTALLATION

1. Remove thoroughly the liquid gasket from the engine oil pan and cylinder block assembly with a remover.
2. Apply a bead of the sealant to the mating surface of the engine oil pan as shown in the figure, and install the engine oil pan to the cylinder block assembly.

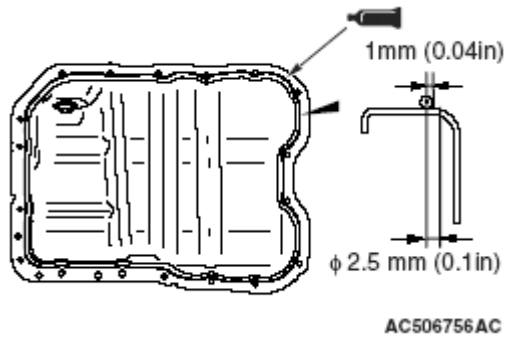


Fig. 64: Applying Sealant To Mating Surface Of Engine Oil Pan
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

Specified sealant: Three bond 1227D or equivalent

CAUTION: Do not apply oil or water to the sealant-applied area or start up the engine within 2 hours after the installation of the engine oil pan.

3. Tighten the engine oil pan mounting bolts to the specified torque.

Tightening torque:

M6: 10 ± 2 N.m (89 ± 17 in-lb)

M8: 29 ± 2 N.m (22 ± 1 ft-lb)

>>B<< ENGINE OIL PAN DRAIN PLUG GASKET INSTALLATION

Replace the engine oil pan drain plug gasket with a new one. Install the new gasket in the direction shown in the illustration.

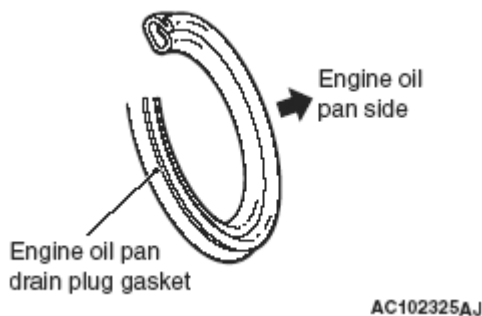


Fig. 65: Identifying Engine Oil Pan Drain Plug Gasket
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

>>C<< A/C COMPRESSOR AND CLUTCH ASSEMBLY INSTALLATION

Tighten A/C compressor and clutch assembly mounting bolts to the specified torque in the order of number

shown in the illustration.

Tightening torque: 23 ± 6 N.m (17 ± 4 ft-lb)

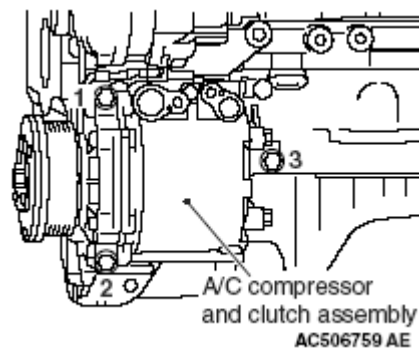



Fig. 66: Identifying A/C Compressor And Clutch Assembly Mounting Bolts In Numerical Order
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

INSPECTION

- Check the oil pan for cracks.
- Check the oil pan sealant-coated surface for damage and deformation.

CRANKSHAFT OIL SEAL

REMOVAL AND INSTALLATION

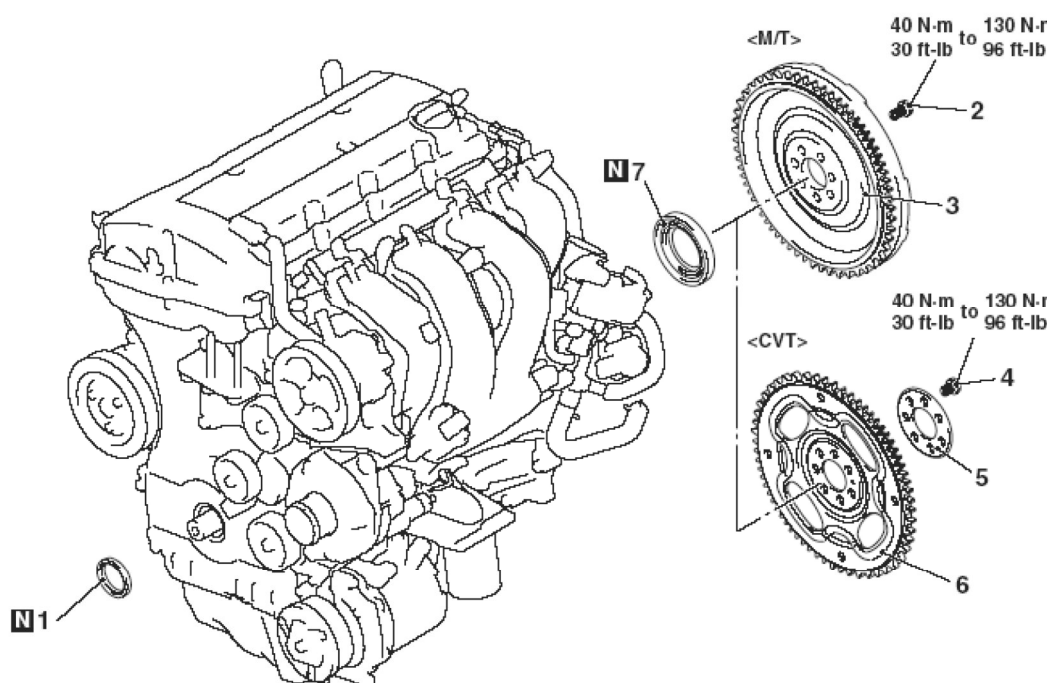

AC608163AB

Crankshaft front oil seal removal steps

- Crankshaft pulley

- >>D<< 1. Crankshaft front oil seal
Crankshaft rear oil seal removal steps <M/T>
- Manual transaxle assembly

Crankshaft rear oil seal removal steps <CVT>

- CVT assembly

- <<A>> >>C<< 2. Flywheel bolts
>>C<< 3. Flywheel
>>A<< 7. Crankshaft rear oil seal

- <<A>> >>B<< 4. Drive plate bolts
>>B<< 5. Drive plate adapter plate
>>B<< 6. Drive plate
>>A<< 7. Crankshaft rear oil seal

Fig. 67: Identifying Crankshaft Oil Seal Removing/Installing Components With Torque Specifications
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

Required Special Tools:

- MB991883: Flywheel Stopper
- MD998718: Crankshaft Rear Oil Seal Installer
- MB991448: Bush Remover And Installer Base

REMOVAL SERVICE POINT

<<A>> FLYWHEEL BOLTS/DRIVE PLATE BOLTS REMOVAL

Fix the flywheel or drive plate using special tool MB991883, and loosen the flywheel bolts or drive plate bolts.

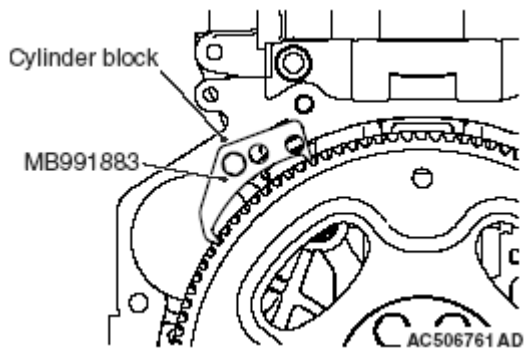


Fig. 68: Fixing Flywheel Or Drive Plate
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

INSTALLATION SERVICE POINTS

>>A<< CRANKSHAFT REAR OIL SEAL INSTALLATION

1. Apply a small amount of engine oil to the entire inner diameter of the oil seal lip.
2. Using special tool MD998718, press in the crankshaft rear oil seal up to the cylinder block assembly end surface.

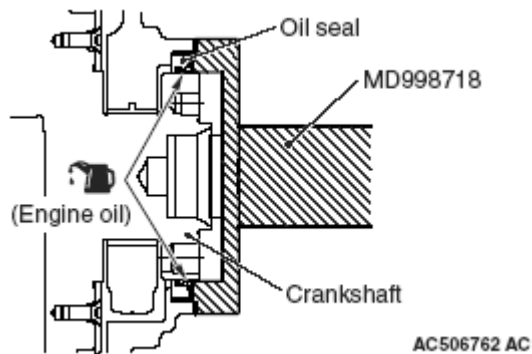


Fig. 69: Applying Engine Oil To Inner Diameter Of Oil Seal Lip
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

>>B<< DRIVE PLATE/DRIVE PLATE ADAPTER PLATE/DRIVE PLATE BOLT INSTALLATION

1. Remove the engine oil and deposit from the bolt threads of the drive plate, screw holes of crankshaft, and drive plate.
2. Apply a small amount of engine oil to the drive plate and the bearing surface of drive plate adapter plate.
3. Fix the flywheel or drive plate using special tool MB991883 in the same manner as removal.

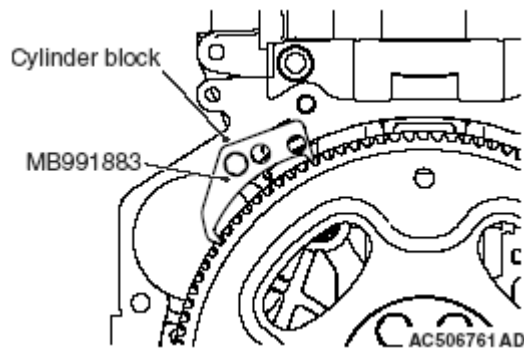


Fig. 70: Fixing Flywheel Or Drive Plate

Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

4. Apply a small amount of engine oil to the bolt threads of drive plate or the screw holes of crankshaft.
5. Tighten drive plate bolts to temporarily torque 40 N.m (30 ft-lb).
6. Tighten the drive plate bolts to the specified torque.

Tightening torque: 130 N.m (96 ft-lb)

>>C<< FLYWHEEL/FLYWHEEL BOLTS INSTALLATION

1. Remove the sealant, the engine oil, and other adhering materials from the flywheel assembly installation face, the crankshaft screw hole, and flywheel bolts.
2. Install the flywheel assembly to the crankshaft.
3. Use special tool MB991883 to secure the flywheel assembly in the same manner as removal.

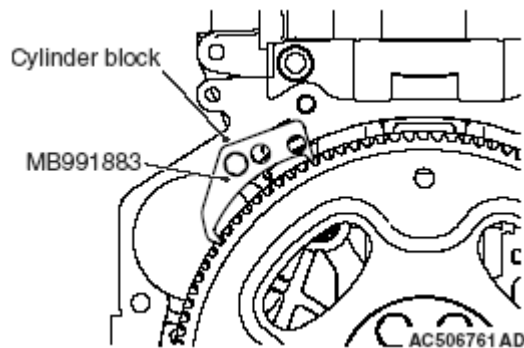


Fig. 71: Securing Flywheel Assembly

Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

4. Apply the engine oil to the installation face of the flywheel bolts for the flywheel assembly.

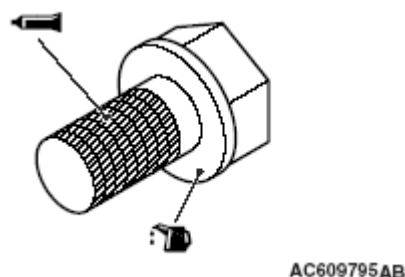


Fig. 72: Applying Engine Oil To Installation Face Of Flywheel Bolts
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

5. Apply specified sealant to the flywheel bolt threads.

Specified sealant: Three bond 1324 or equivalent

6. Tighten flywheel bolts to temporary torque 40 N.m (30 ft-lb) in the order shown in the illustration.

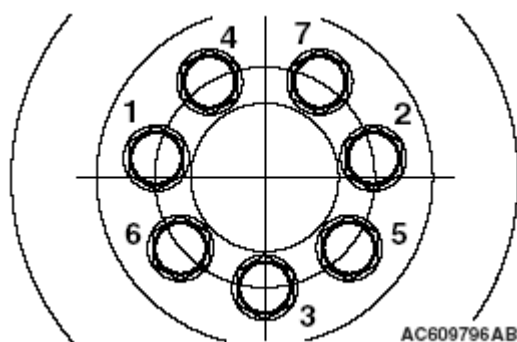


Fig. 73: Identifying Flywheel Bolts Tightening Sequence
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

7. Tighten flywheel bolts to temporary torque in the order shown in the illustration.

Tightening torque: 130 N.m (96 ft-lb)

>>D<< CRANKSHAFT FRONT OIL SEAL INSTALLATION

1. Apply a small amount of engine oil to the entire inner diameter of the oil seal lip.

CAUTION: When installing the crankshaft oil seal, be careful to avoid damage to the crankshaft front oil seal.

2. Using special tool MB991448, press in the crankshaft front oil seal up to the chamfered surface of timing chain case.

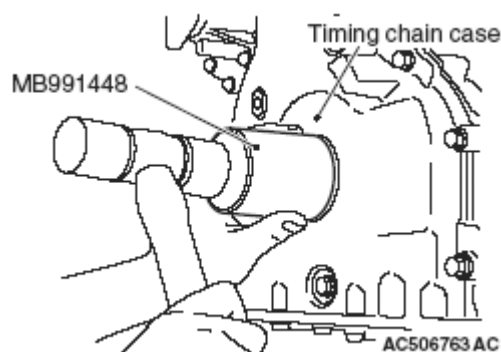


Fig. 74: Pressing Crankshaft Front Oil Seal

Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

CYLINDER HEAD GASKET

REMOVAL AND INSTALLATION

REMOVAL AND INSTALLATION CHART

Pre-removal operation	Post-installation operation
• Fuel Line Pressure Reduction [Refer to <u>FUEL PUMP CONNECTOR DISCONNECTION (HOW TO REDUCE PRESSURIZED FUEL LINES)</u>]. • Engine Coolant Draining (Refer to <u>ENGINE COOLANT REPLACEMENT</u>). • Air Cleaner Assembly Removal (Refer to <u>AIR CLEANER</u>). • Ignition Coil Removal (Refer to <u>IGNITION COIL</u>). • Strut Tower Bar Removal (Refer to <u>STRUT TOWER BAR</u>). • Exhaust Manifold Removal (Refer to <u>EXHAUST MANIFOLD</u>). • Throttle Body Assembly Removal (Refer to <u>THROTTLE BODY ASSEMBLY</u>). • EGR Valve and EGR Valve Stay Removal (Refer to <u>REMOVAL AND INSTALLATION</u>). • Water Pump Removal (Refer to <u>WATER PUMP</u>).	• Water Pump Installation (Refer to <u>WATER PUMP</u>). • EGR Valve and EGR Valve Stay Installation (Refer to <u>EGR VALVE</u>). • Throttle Body Assembly Installation (Refer to <u>THROTTLE BODY ASSEMBLY</u>). • Exhaust Manifold Installation (Refer to <u>EXHAUST MANIFOLD</u>). • Strut Tower Bar Installation (Refer to <u>STRUT TOWER BAR</u>). • Ignition Coil Installation (Refer to <u>IGNITION COIL</u>). • Air Cleaner Assembly Installation (Refer to <u>AIR CLEANER</u>). • Engine Coolant Refilling (Refer to <u>ENGINE COOLANT REPLACEMENT</u>). • Fuel Leak Check

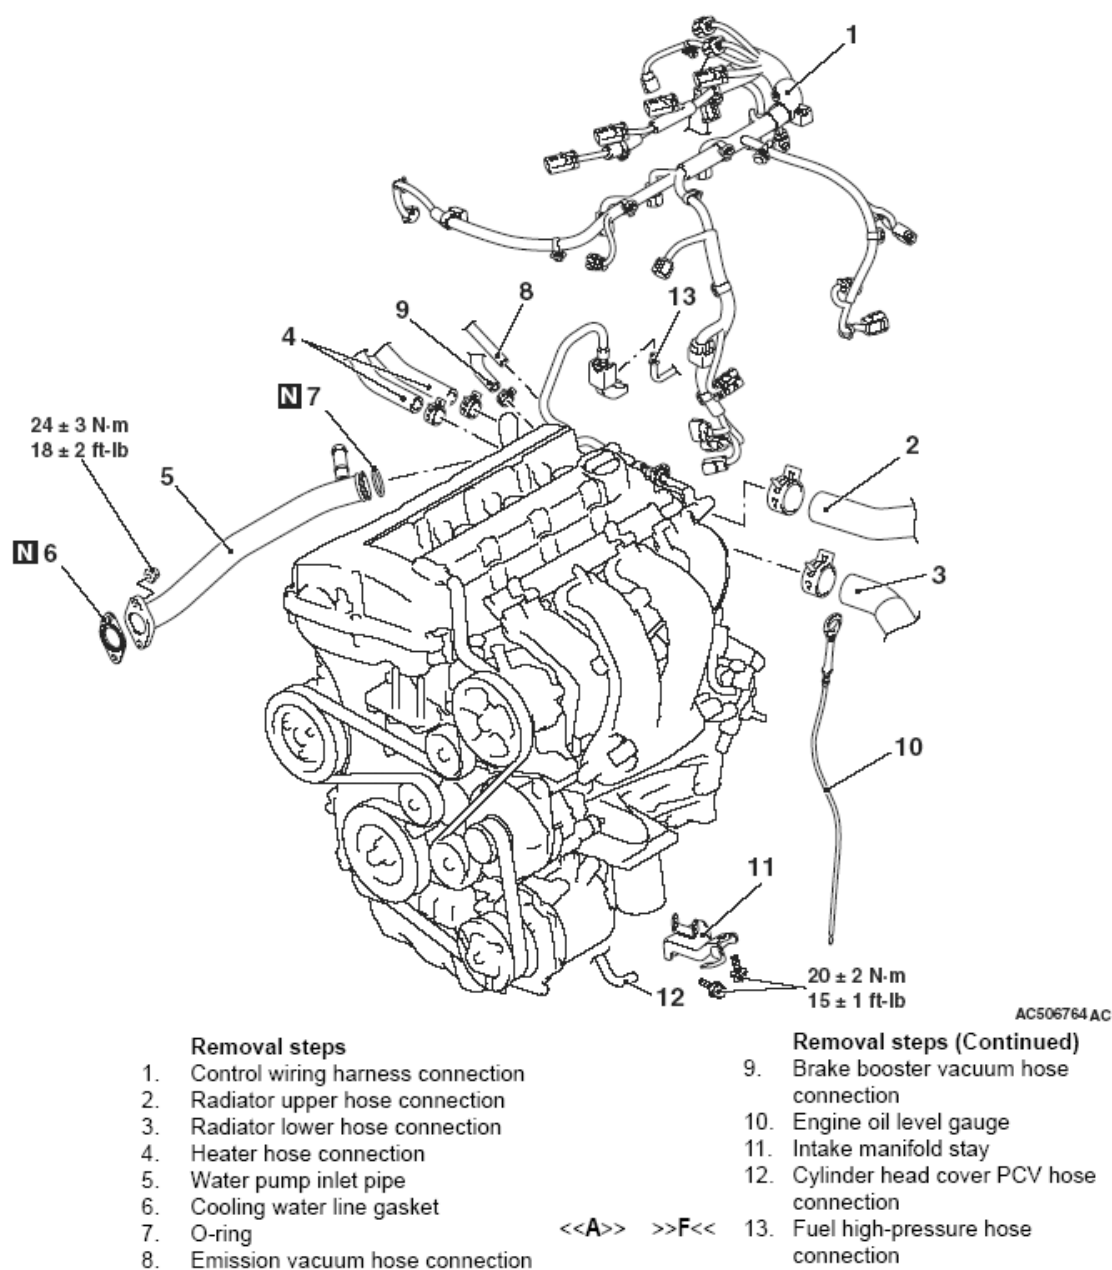


Fig. 75: Identifying Cylinder Head Gasket Removing/Installing Components With Torque Specifications (1 Of 2)

Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

- MB991928: Engine Hanger
- MB991956: Engine Hanger Plate

REMOVAL SERVICE POINTS

<<A>> FUEL HIGH-PRESSURE HOSE REMOVAL

1. Remove the stopper of the fuel high-pressure hose.

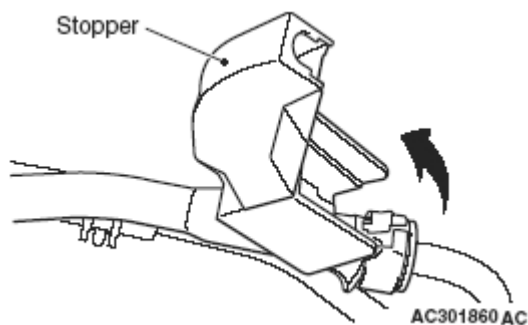


Fig. 77: Removing Stopper Of Fuel High-Pressure Hose
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

2. Raise the retainer of the fuel high-pressure hose and pull out the fuel high-pressure hose in the direction shown in the figure.

NOTE: If the retainer is released, install it securely after removing the fuel high-pressure hose.

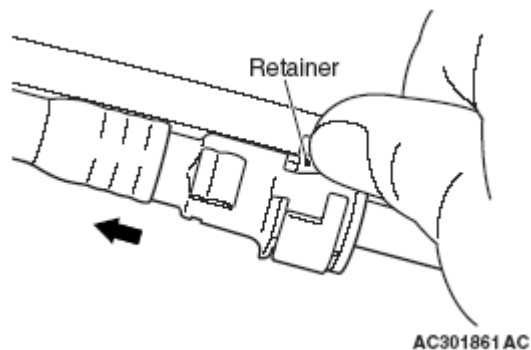


Fig. 78: Raising Retainer Of Fuel High-Pressure Hose
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

<> FRONT CAMSHAFT BEARING CAP ASSEMBLY REMOVAL

CAUTION: Be careful not to drop the camshaft bearing.

Loosen the mounting bolts of front camshaft bearing cap in the order of number shown in the figure, and remove the front camshaft bearing cap assembly.

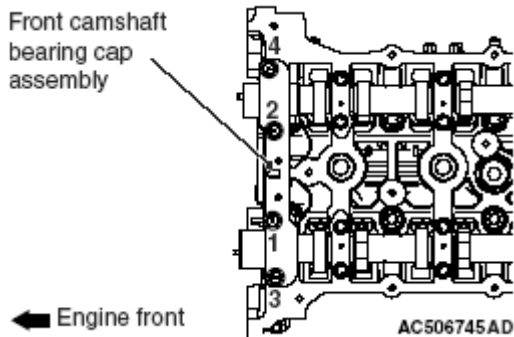


Fig. 79: Identifying Front Camshaft Bearing Cap Mounting Bolts Numerical Sequence
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

<<C>> OIL FEEDING CAMSHAFT BEARING CAP/CAMSHAFT BEARING CAP/THRUST CAMSHAFT BEARING CAP REMOVAL

CAUTION: When the camshaft bearing cap mounting bolts are loosened at once, the mounting bolts jump out by the spring force and the threads are damaged. Always loosen the mounting bolts in four or five steps.

Loosen the mounting bolts of the camshaft bearing caps in the order of number shown in the figure in four or five steps, and remove the camshaft bearing caps.

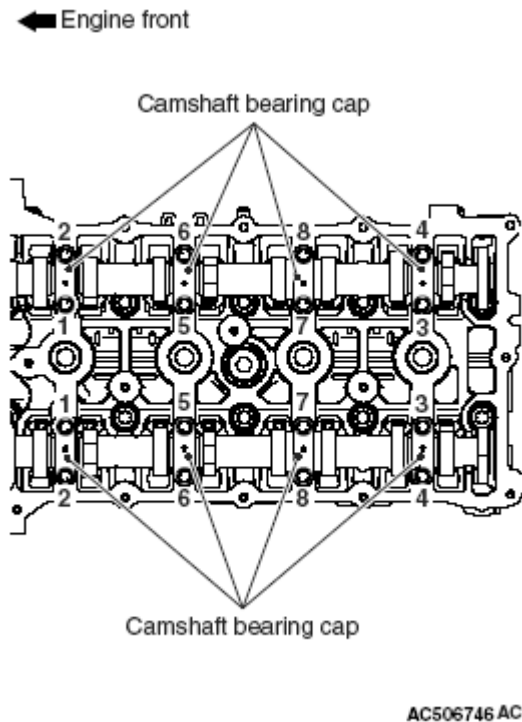


Fig. 80: Identifying Camshaft Bearing Caps Mounting Bolts Loosening Sequence
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

<<D>> CYLINDER HEAD BOLT/CYLINDER HEAD BOLT ASSEMBLY REMOVAL

1. Temporarily install the engine oil pan which was removed at the valve timing chain removal (Refer to **OIL PAN**).
2. Place a garage jack against the engine oil pan with a piece of wood in between to support the engine and transaxle assembly.
3. Remove special tool MB991928 or MB991895 which was installed for supporting the engine and transaxle assembly when the valve timing chain was removed.

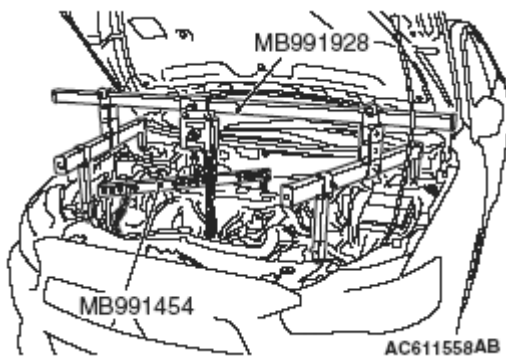


Fig. 81: Identifying Special Tool MB991928 Or MB991895 (1 Of 2)
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

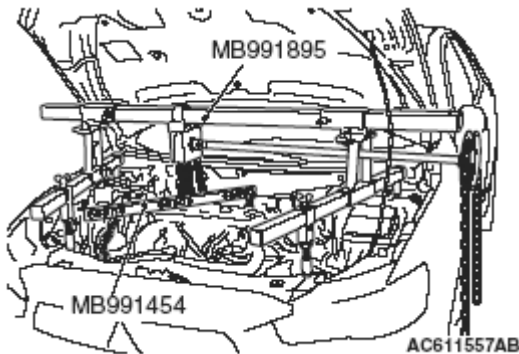


Fig. 82: Identifying Special Tool MB991928 Or MB991895 (2 Of 2)
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

4. Loosen and remove the bolts in two or three steps in the order of number shown in the figure.

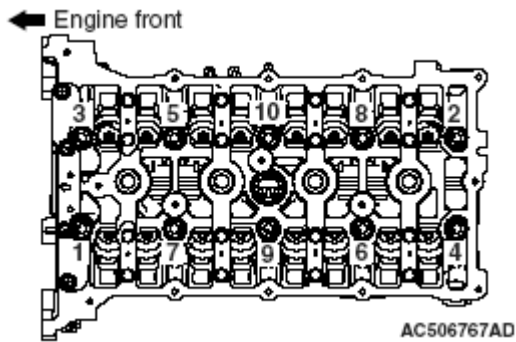




Fig. 83: Identifying Cylinder Head Bolts Numerical Order
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

INSTALLATION SERVICE POINTS

>>A<< CYLINDER HEAD GASKET/CYLINDER HEAD ASSEMBLY INSTALLATION

CAUTION: Do not allow any foreign materials get into the coolant passages, oil passages and cylinder.

1. Wipe off the sealant and grease on the top surface of cylinder head block and the bottom surface of the cylinder head, and degrease the surface where the sealant is applied.

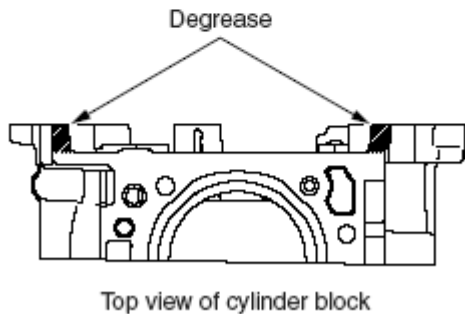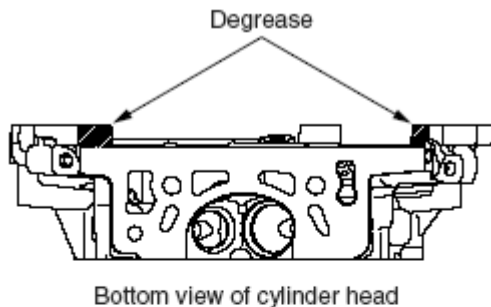

AC607682AB

Fig. 84: Identifying Top View Of Cylinder Block
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

2. Apply the sealant to the top surface of cylinder block as shown in the figure.

Specified sealant: Three bond 1227D or equivalent

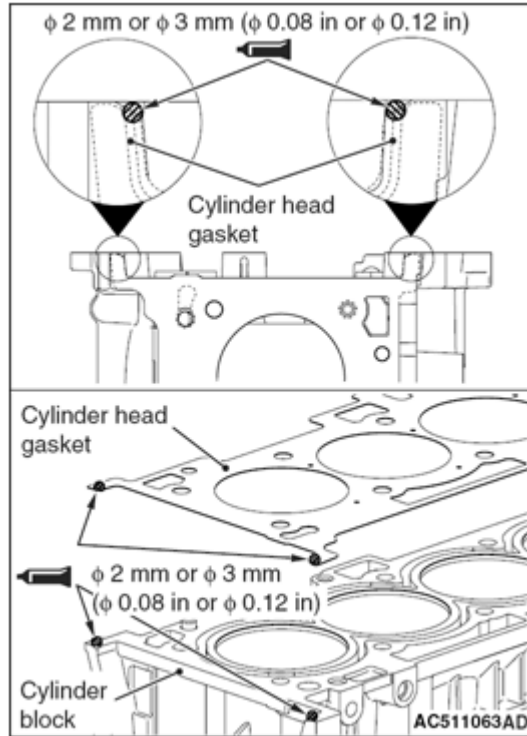


Fig. 85: Applying Sealant To Top Surface Of Cylinder Head Gasket
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

3. Install the cylinder head gasket to the cylinder block.

NOTE: When the cylinder gasket is installed to the cylinder block, check that the sealant is securely applied to the bead line of the cylinder head gasket.

4. Apply the sealant to the top surface of cylinder head gasket as shown in the figure.

Specified sealant: Three bond 1227D or equivalent

5. Install the cylinder head assembly.

>>B<< CYLINDER HEAD BOLT ASSEMBLY/CYLINDER HEAD BOLT INSTALLATION

1. Replace cylinder head bolts with a new ones.
2. For two bolts of the timing chain side, the washer can be removed from the bolt. Install the washer, with its sag facing upward, to the bolts.
3. Apply a small amount of engine oil to the cylinder head bolt threads and the washers.
4. Tighten the bolts by the following procedure (plastic region angular tightening method).

1. Tighten the bolts to 35 ± 2 N.m (26 ± 1 ft-lb) in the order of number shown in the figure.

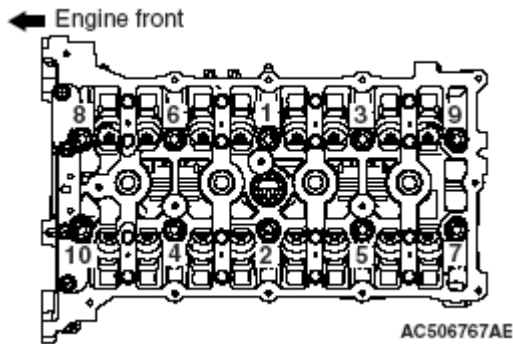


Fig. 86: Identifying Cylinder Head Bolts Numerical Order
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

CAUTION:

- The bolt is not tightened sufficiently if the tightening angle is less than a 180 degrees angle.
- If the tightening angle exceeds the standard specification, remove the bolt and repeat the installation steps from Step 1.

2. Put a paint mark on the cylinder head bolt head and cylinder head, tighten to 180 ± 2 degrees in the order shown in the figure, and check that the paint mark on the cylinder head bolt head aligns with the paint mark on the cylinder head.

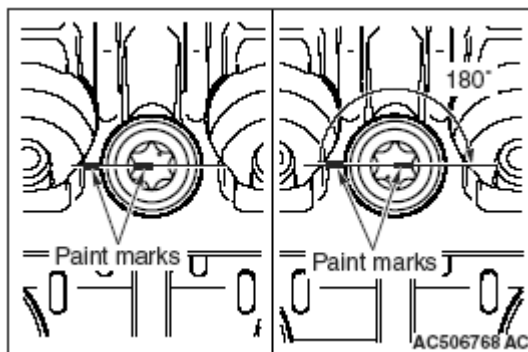


Fig. 87: Identifying Paint Mark On Cylinder Head Bolt Head And Cylinder Head
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

5. Install special tool MB991928 or MB991895 which was installed for supporting the engine and transmission assembly when the valve timing chain was removed (Refer to **REMOVAL AND INSTALLATION**).

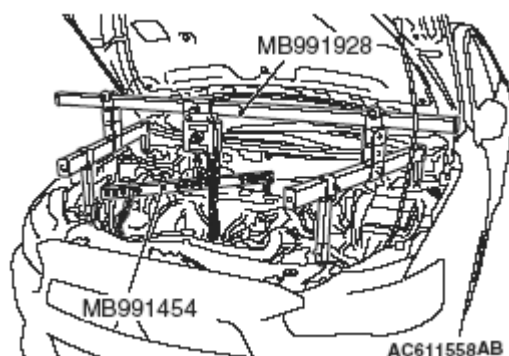


Fig. 88: Identifying Special Tool MB991928 Or MB991895 (1 Of 2)
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

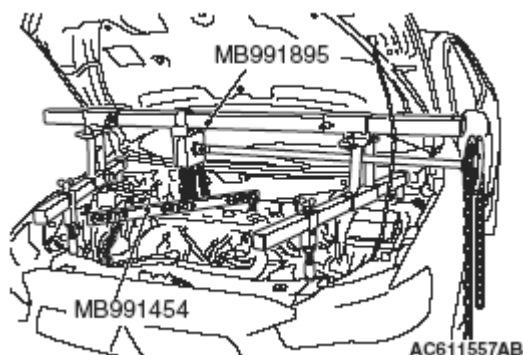


Fig. 89: Identifying Special Tool MB991928 Or MB991895 (2 Of 2)
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

6. Remove the garage jack which supports the engine and transaxle assembly.
7. Remove the engine oil pan installed temporarily.

>>C<< CAMSHAFT AND CAMSHAFT SPROCKET ASSEMBLY INSTALLATION

CAUTION: When installing the camshaft and camshaft sprocket assembly (exhaust side), be careful not to let the camshaft bearing which is installed to the front cam bearing deviate from its position.

>>D<< THRUST CAMSHAFT BEARING CAP/CAMSHAFT BEARING CAP/OIL FEEDING CAMSHAFT BEARING CAP INSTALLATION

1. Install the camshaft bearing caps to the cylinder heads.

NOTE: Because the thrust camshaft bearing cap and camshaft bearing cap are the same in shape, check the bearing cap number and additionally its symbol to identify the intake and exhaust sides for correct installation.

2. Tighten each camshaft bearing cap mounting bolt to the specified torque in the order of number shown in the figure in two or three steps.

Tightening torque: 12 ± 1 N.m (106 ± 9 in-lb)

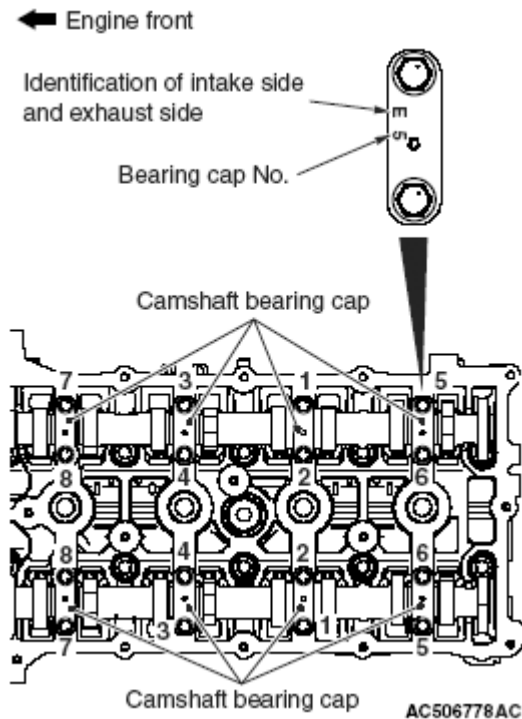


Fig. 90: Identifying Camshaft Bearing Cap Bolts Tightening Sequence
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

>>E<< FRONT CAMSHAFT BEARING CAP ASSEMBLY INSTALLATION

CAUTION: When the mounting bolts are tightened with the front camshaft bearing cap tilted, the front camshaft bearing cap is damaged. Install the front camshaft bearing cap properly to the cylinder head and camshaft.

1. Install the front camshaft bearing cap to the cylinder head, and temporarily tighten the front camshaft bearing cap to the specified torque in the order of the figure (1).

Tightening torque: 17 ± 3 N.m (13 ± 2 ft-lb)

2. Tighten the front camshaft bearing cap again to the specified torque in the order of the figure (2).

Tightening torque: 30 ± 2 N.m (22 ± 1 ft-lb)

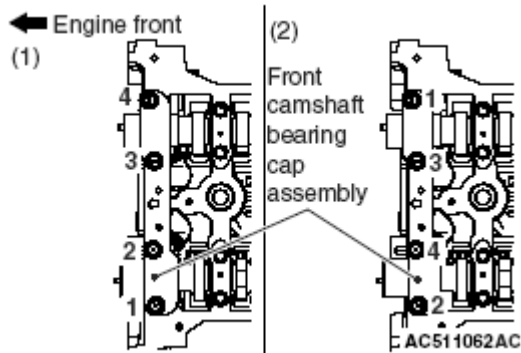


Fig. 91: Identifying Front Camshaft Bearing Cap Tightening Sequence
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

>>F<< FUEL HIGH-PRESSURE HOSE INSTALLATION

CAUTION: After connecting the fuel high-pressure hose, slightly pull it in the pull-out direction to check that it is installed firmly. In addition, check that there is approximately 3mm (0.12 inch) play. After the check, install the stopper securely.

Apply a small amount of engine oil to the fuel line pipe, and install the fuel high-pressure hose.

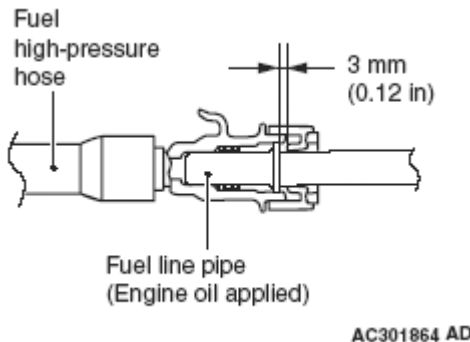


Fig. 92: Identifying Fuel High Pressure Hose
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

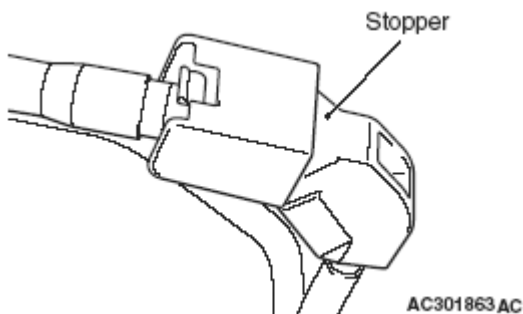


Fig. 93: Identifying Stopper

Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

TIMING CHAIN

REMOVAL AND INSTALLATION

REMOVAL AND INSTALLATION CHART

	Post-installation operation
Pre-removal operation • Engine Room Under Cover Front Removal (Refer to <u>UNDER COVER</u>). • Engine Room Side Cover (RH) Removal (Refer to <u>UNDER COVER</u>). • Cylinder Head Cover Assembly Removal (Refer to << A >> <u>CYLINDER HEAD COVER ASSEMBLY REMOVAL</u>). • Engine Oil Pan Removal (Refer to <u>OIL PAN</u>).	• Engine Oil Pan Installation (Refer to <u>OIL PAN</u>). • Cylinder Head Cover Assembly Installation (Refer to <u>CAMSHAFT</u>). • Engine Oil Refilling (Refer to <u>ENGINE OIL REPLACEMENT</u>). • Engine Room Side Cover (RH) Installation (Refer to <u>UNDER COVER</u>). • Engine Room Under Cover Front Installation (Refer to <u>UNDER COVER</u>).

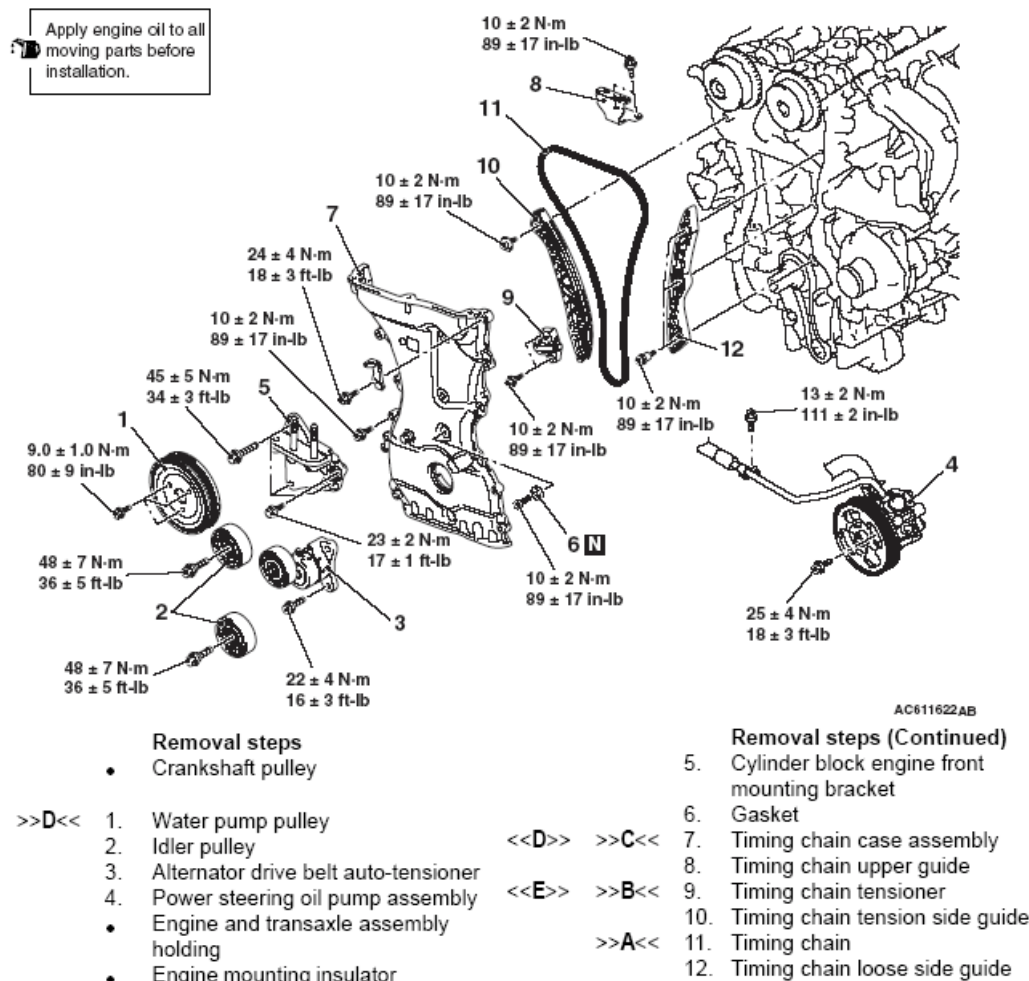


Fig. 94: Identifying Timing Chain Removing/Installing Components With Torque Specifications
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

Required Special Tools:

- MB991454: Engine Hanger Balancer
- MB991895: Engine Hanger
- MB991928: Engine Hanger

REMOVAL SERVICE POINTS

<<A>> CRANKSHAFT PULLEY REMOVAL

When removing the crankshaft pulley, slightly loosen the water pump pulley mounting bolts before removal of the drive belt.

<> POWER STEERING OIL PUMP ASSEMBLY REMOVAL

1. Remove the power steering oil pump assembly with hose on it.
2. Tie the removed power steering oil pump with a string at a position where it will not interfere with the removal and installation of timing chain.

<<C>> ENGINE AND TRANSAXLE ASSEMBLY HOLDING

Install a special tool for holding the engine and transaxle assembly.

1. < Engine hanger MB991928 is used>
 1. Assemble the engine hanger (special tool MB991928). Set the following parts on the base hanger.
 - Slide bracket (HI)
 - Foot x 4 (standard) (MB991932)
 - Joint x 2 (90) (MB991930)
 2. Set the foot of the special tool as shown in the figure.

NOTE: Slide the slide bracket (HI) to adjust the engine hanger balance.

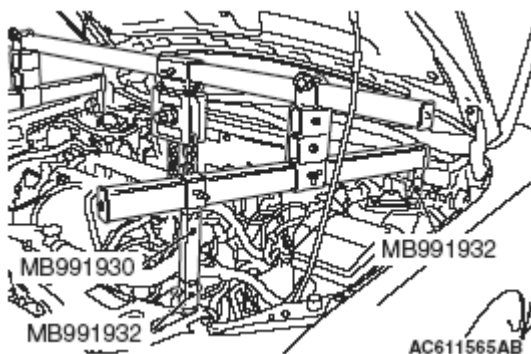


Fig. 95: Setting Foot Of Special Tool

Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

3. Mount special tool MB991454 to the power steering oil pump bracket and the engine hanger, and set it to special tool MB991928 to support the engine and transaxle assembly.

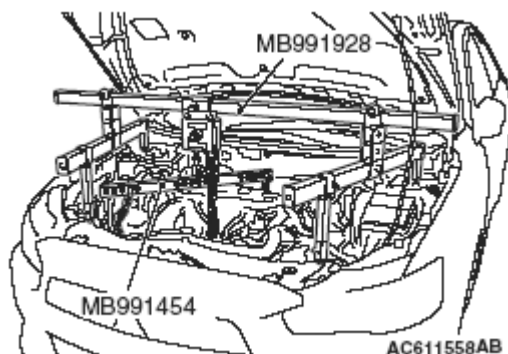


Fig. 96: Identifying Special Tool MB991928 Or MB991895

Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

2. < Engine hanger MB991895 is used>
1. Set the foot of special tool MB991895 as shown in the figure.

NOTE: Slide the foot to adjust the engine hanger balance.

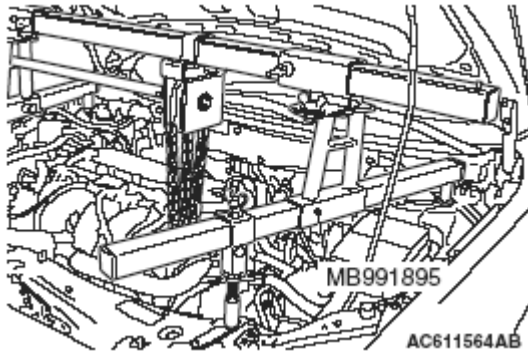


Fig. 97: Setting Foot Of Special Tool MB991895

Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

2. Mount special tool MB991454 to the power steering oil pump bracket and the engine hanger, and set it to special tool MB991895 to support the engine and transaxle assembly.

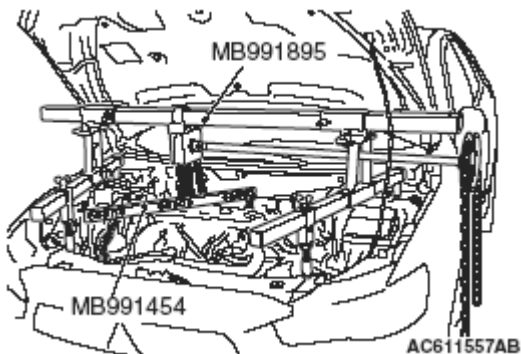


Fig. 98: Identifying Special Tool MB991928 Or MB991895 (1 Of 2)

Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

<<D>> TIMING CHAIN CASE ASSEMBLY REMOVAL

CAUTION: If the adhesive strength of sealant on the timing chain case assembly is so strong that the boss may be damaged by peeling off, do not peel it off forcibly.

1. After removing the timing chain case assembly mounting bolts, slightly pry the boss of the timing chain case assembly shown in the figure using a flat-tipped screwdriver (-), and remove the timing chain case

assembly from the cylinder head and cylinder block.

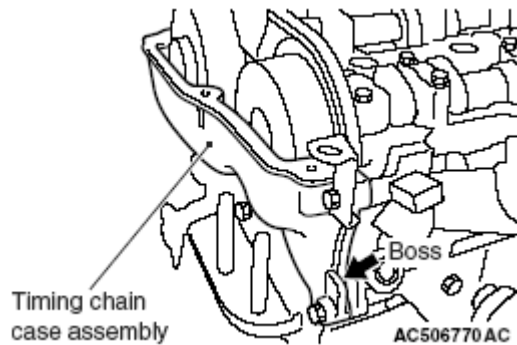


Fig. 99: Identifying Timing Chain Case Assembly And Boss
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

2. If the sealant cannot be peeled off easily, insert a wooden hammer shank into the timing chain case assembly inside as shown in the figure, pry slightly, and remove the timing chain case assembly from the cylinder head and cylinder block.

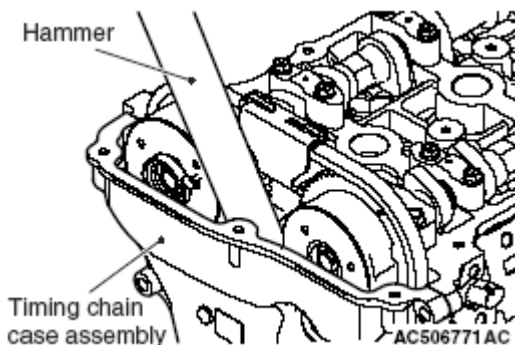


Fig. 100: Inserting Wooden Hammer Shank Into Timing Chain Case Assembly
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

<<E>> TIMING CHAIN TENSIONER REMOVAL

1. Temporarily install the crankshaft pulley to the crankshaft.

CAUTION: Turn the crankshaft clockwise.

2. Turn the crankshaft clockwise to align the sprocket timing marks as shown in the figure and set the cylinder No. 1 to the top dead center of compression stroke.

NOTE: At this time, it is not necessary that the link plate (orange) of the timing chain always aligns with each sprocket timing mark.

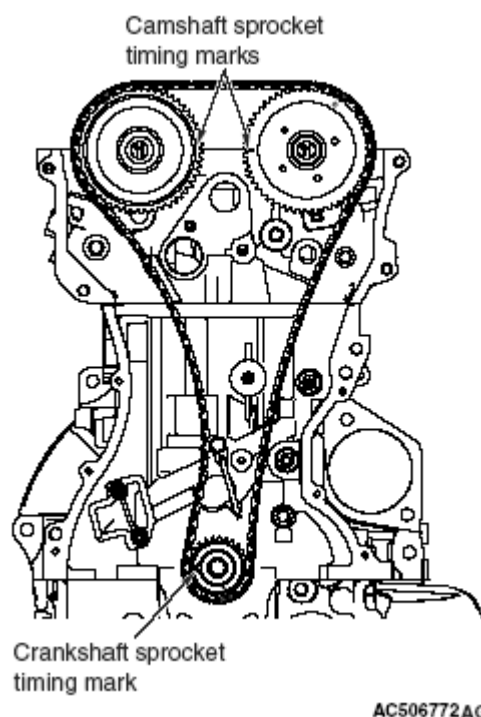


Fig. 101: Aligning Sprocket Timing Marks

Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

3. Remove the crankshaft pulley installed temporarily.
4. Using a flat-tipped precision screwdriver (-), release the ratchet of timing chain tensioner.
5. Compress the plunger of timing chain tensioner and insert hard wire (such as piano wire) or the L-shaped hexagon wrench (1.5 mm[0.05 inch]) to fix the plunger of the timing chain tensioner.

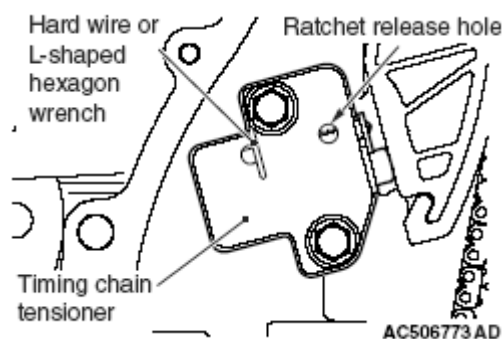


Fig. 102: Releasing Ratchet Of Timing Chain Tensioner

Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

6. Remove the timing chain tensioner.

INSTALLATION SERVICE POINTS

>>A<< TIMING CHAIN INSTALLATION

1. Set the timing marks of the camshaft sprockets and the crankshaft sprocket as shown in the figure.

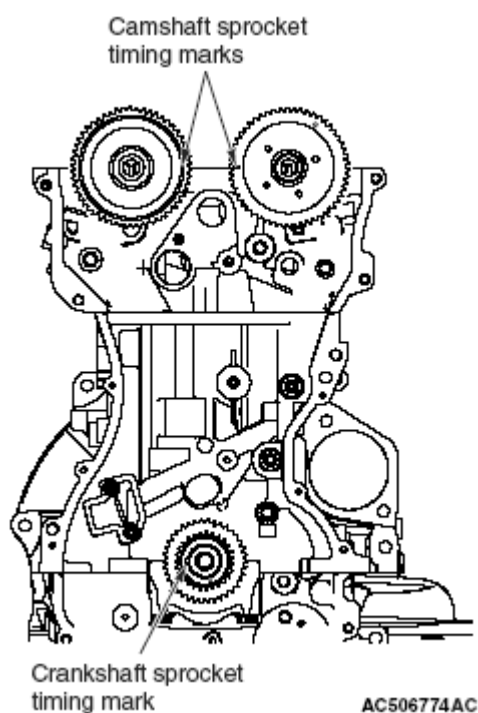


Fig. 103: Setting Timing Marks Of Camshaft Sprockets And Crankshaft Sprocket
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

2. Align each sprocket timing chain mating mark with the link plate (orange) of timing chain to avoid slack of the timing chain tension side, and install the timing chain to the sprockets.

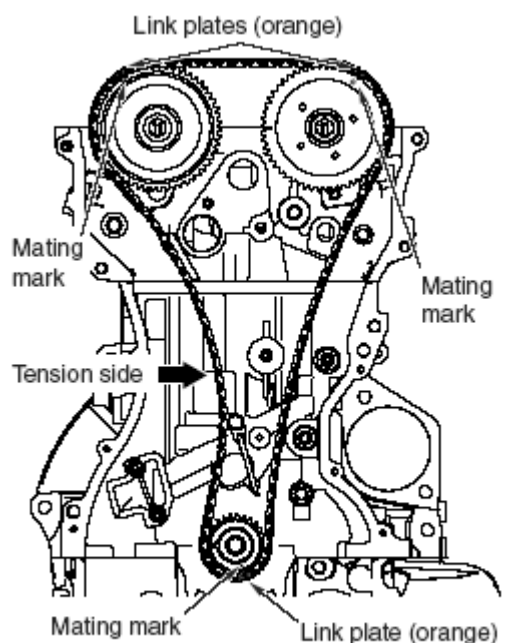


Fig. 104: Aligning Sprocket Timing Chain Mating Mark
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

>>B<< TIMING CHAIN TENSIONER INSTALLATION

1. Check that the sprocket timing chain mating marks align with the link plates (orange) of the timing chain, and install the timing chain tensioner to the cylinder block.

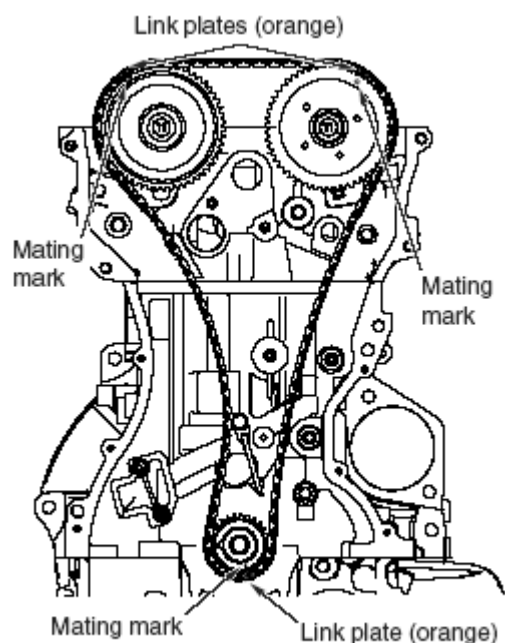


Fig. 105: Aligning Link Plates (Orange) Of Timing Chain
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

2. Remove the hard wire or L-shaped hexagon wrench fixing the plunger of the timing chain tensioner to apply tension to the timing chain.

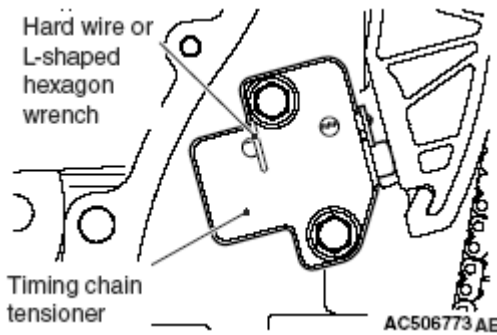


Fig. 106: Identifying Timing Chain Tensioner
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

>>C<< TIMING CHAIN CASE ASSEMBLY INSTALLATION

1. Remove sealant from the timing chain case assembly and the timing chain case assembly mounting surface of the cylinder block and the cylinder head.
2. Apply a bead of sealant to the timing chain case assembly mounting surface. The bead diameter shall be 4 or 5 mm (0.18 or 0.20 inch) for the areas shown by "A" in the figure and 2 or 3 mm (0.08 or 0.12 inch) for the other area.

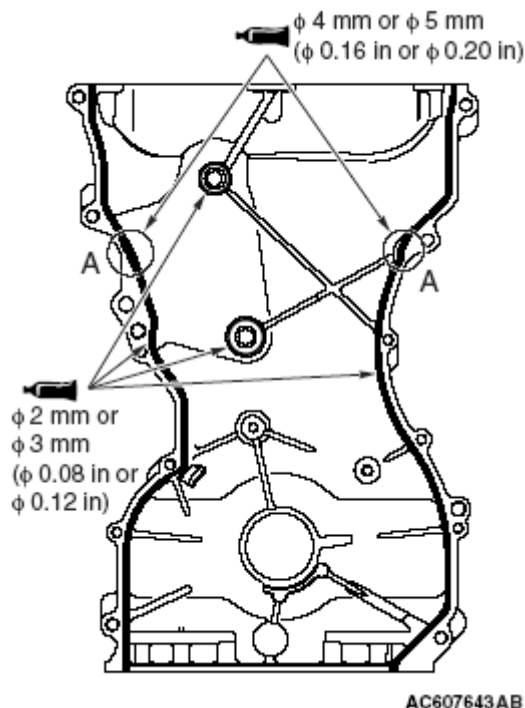


Fig. 107: Applying Sealant To Timing Chain Case Assembly Mounting Surface
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

Specified sealant: Three bond 1227D or equivalent

NOTE: Install the timing chain case assembly within 15 minutes after the application of sealant.

CAUTION: If the sealant contacts any other part during installation of the timing chain case assembly, apply sealant again before installing the timing chain case assembly.

3. Install the timing chain case assembly to the cylinder block and cylinder head so that the sealant does not contact other parts.
4. Insert the bolts to the timing chain case assembly as shown, and tighten them to the specified torque.

BOLT DIAMETER

Name	Symbol	Quantity	BOLT DIAMETER (D) x LENGTH (L) mm (in)
Flange bolt	A	6	6 x 25 (0.2 x 1.0)
	B	6	8 x 28 (0.3 x 1.1)
Bolt	C	1	6 x 25 (0.2 x 1.0)

NOTE: D: Nominal diameter, L: Nominal length

Tightening torque:

A, C: 10 ± 2 N.m (89 ± 17 in-lb)

B: 24 ± 4 N.m (13 ± 3 ft-lb)

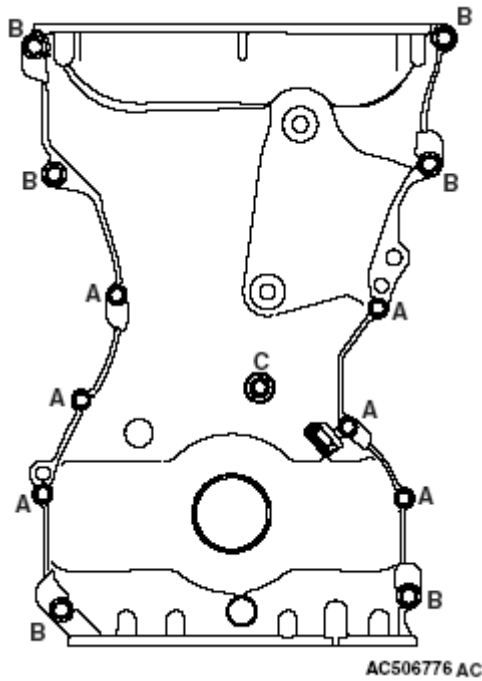


Fig. 108: Identifying Timing Chain Case Assembly Bolts Alphabetical Sequence
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

>>D<< WATER PUMP PULLEY INSTALLATION

Temporarily tighten the water pump pulley mounting bolts. Then, tighten them to the specified torque after the installation of drive belt.

Tightening torque: 9.0 ± 1.0 N.m (80 ± 9 in-lb)

OIL PUMP CHAIN

REMOVAL AND INSTALLATION

Pre-removal and post-installation operation

- Timing Chain Removal and Installation (Refer to **REMOVAL AND INSTALLATION**).

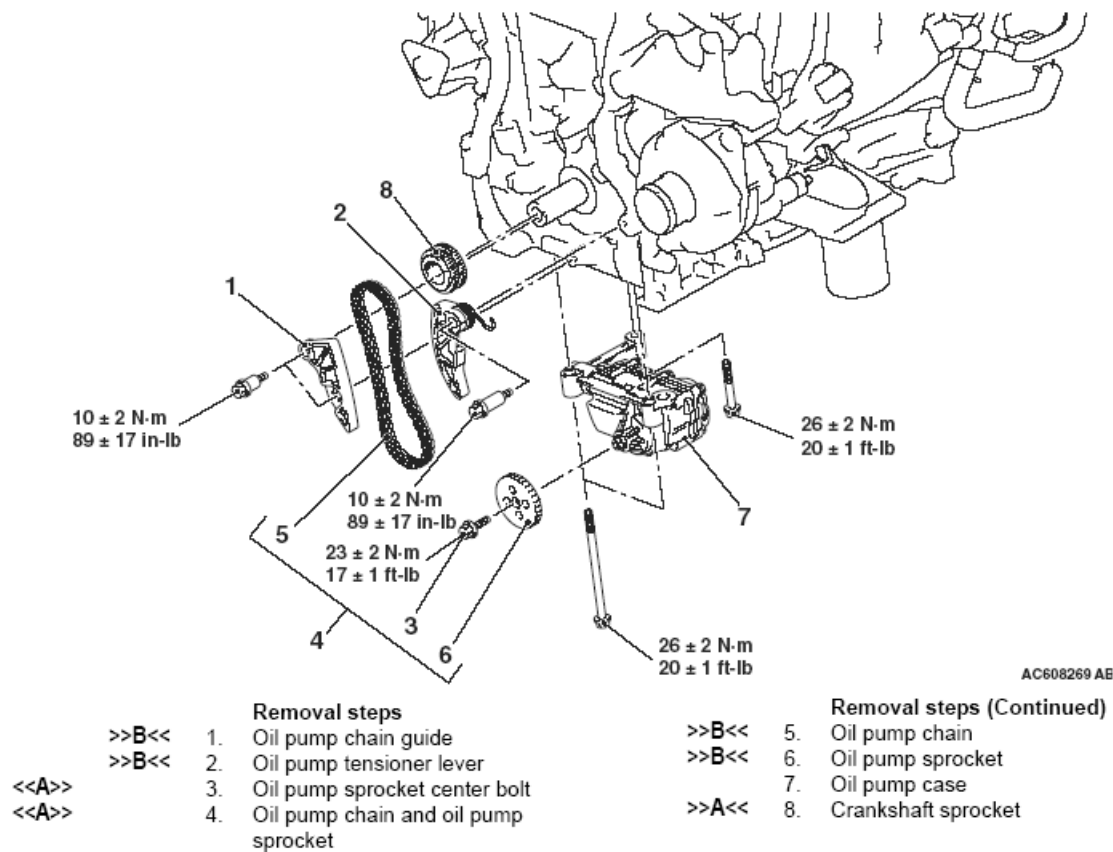


Fig. 109: Identifying Oil Pump Chain Removing/Installing Components With Torque Specifications
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

Required Special Tool:

- MB991346: Top Cover Wrench

REMOVAL SERVICE POINT

<<A>> OIL PUMP SPROCKET CENTER BOLT/OIL PUMP CHAIN AND OIL PUMP SPROCKET REMOVAL

1. Hold the oil pump sprocket with special tool MB991346.

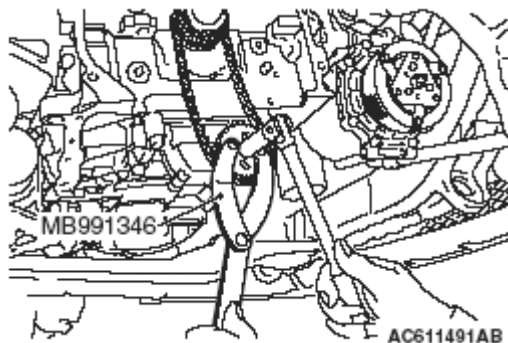


Fig. 110: Holding Oil Pump Sprocket With Special Tool MB991346
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

2. Loosen the oil pump sprocket center bolt and remove the oil pump chain and oil pump sprocket.

INSTALLATION SERVICE POINTS

>>A<< CRANKSHAFT SPROCKET INSTALLATION

1. Wipe the dirt off of the crankshaft sprocket and the crankshaft using a rag, and then remove the grease from the portion shown in the illustration.

NOTE: Remove grease to prevent a drop in the coefficient of friction of the pressing portion caused by adhesion of oil.

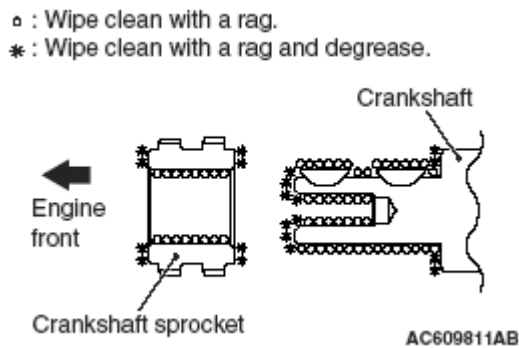


Fig. 111: Wiping Dirt Off Of Crankshaft Sprocket And Crankshaft
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

2. Set the No. 1 piston at top dead center of the compression stroke.
3. Install the crankshaft sprocket to the crankshaft.

>>B<< OIL PUMP SPROCKET/OIL PUMP CHAIN/OIL PUMP TENSIONER LEVER/OIL PUMP CHAIN GUIDE INSTALLATION


1. Set the No. 1 piston at top dead center of the compression stroke.
2. Install the oil pump sprocket to the oil pump case.
3. Install the oil pump chain to the crankshaft sprocket.
4. Install the oil pump chain to the oil pump sprocket.

OIL PUMP

REMOVAL AND INSTALLATION

Pre-removal and post-installation operation

- Oil Pan Removal and Installation (Refer to **OIL PAN**).

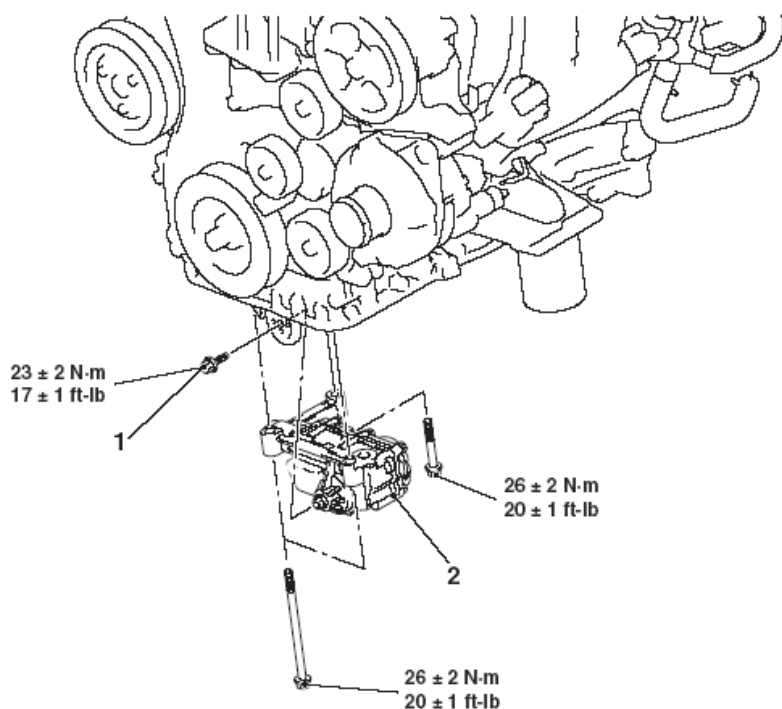

AC611705AB

- <<A>>
- Removal steps**
1. Oil pump sprocket center bolt
 2. Oil pump case

Fig. 112: Identifying Oil Pump Removing/Installing Components With Torque Specifications
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

Required Special Tool:

- MB991346: Top Cover Wrench

REMOVAL SERVICE POINT

<<A>> OIL PUMP SPROCKET CENTER BOLT REMOVAL

1. Secure the oil pump sprocket and the oil pump chain with tie-wrap to prevent slippage between the oil pump sprocket and the oil pump chain.
2. Hold the oil pump sprocket with special tool MB991346.

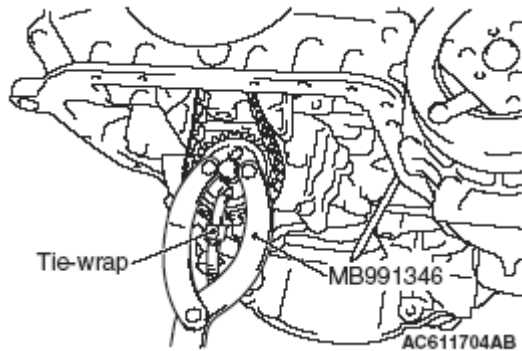


Fig. 113: Holding Oil Pump Sprocket With Special Tool MB991346
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

3. Remove the oil pump sprocket with the oil pump chain attached.

ENGINE ASSEMBLY

REMOVAL AND INSTALLATION


CAUTION: When the engine assembly replacement is performed, use scan tool MB991958 to initialize the learning value (Refer to INITIALIZATION PROCEDURE FOR LEARNING VALUE IN MFI ENGINE).

REMOVAL AND INSTALLATION CHART

Pre-removal operation	Post-installation operation
- Fuel Line Pressure Reduction [Refer to <u>FUEL PUMP CONNECTOR DISCONNECTION (HOW TO REDUCE PRESSURIZED FUEL LINES)</u>]. - Engine Room Under Cover Front Removal (Refer to <u>UNDER COVER</u>). - Engine Room Side Cover (RH) Removal (Refer to <u>UNDER COVER</u>). - Engine Coolant Draining (Refer to <u>ENGINE COOLANT REPLACEMENT</u>). - Engine Oil Draining (Refer to <u>ENGINE OIL REPLACEMENT</u>). - Transmission Fluid Draining (Refer to <u>TRANSMISSION FLUID REPLACEMENT</u>) < M/T >, (Refer to <u>CVT FLUID REPLACEMENT</u>) < CVT >. - Engine Upper Cover Removal (Refer to <u>CAMSHAFT</u>).	- Strut Tower Bar Installation (Refer to <u>STRUT TOWER BAR</u>). - Drive Shaft Installation (Refer to <u>DRIVE SHAFT ASSEMBLY</u>). - Radiator Installation (Refer to <u>RADIATOR</u>). - Engine-ECU Installation (Refer to <u>ENGINE-ECU</u>). - Battery and Battery Tray Installation - Air Cleaner Assembly Installation (Refer to <u>AIR CLEANER</u>). - Transmission Fluid Draining (Refer to <u>TRANSMISSION FLUID REPLACEMENT</u>) < M/T >, (Refer to <u>CVT FLUID REPLACEMENT</u>) < CVT >. - Engine Oil Refilling (Refer to <u>ENGINE OIL REPLACEMENT</u>). - Engine Coolant Refilling (Refer to <u>ENGINE COOLANT REPLACEMENT</u>).

- Air Cleaner Assembly Removal (Refer to **AIR CLEANER**).
- Battery and Battery Tray Removal
- Engine-ECU Removal (Refer to **ENGINE-ECU**).
- Radiator Removal (Refer to **RADIATOR**).
- Drive Shaft Removal (Refer to **DRIVE SHAFT ASSEMBLY**).
- Strut Tower Bar Removal (Refer to **STRUT TOWER BAR**).

- Drive Belt Tension Check (Refer to **ON-VEHICLE SERVICE**).
- Engine Room Side Cover (RH) Installation (Refer to **UNDER COVER**).
- Engine Room Under Cover Front Installation (Refer to **UNDER COVER**).
- Engine Upper Cover Installation (Refer to **CAMSHAFT**).
- Fuel Leak Check

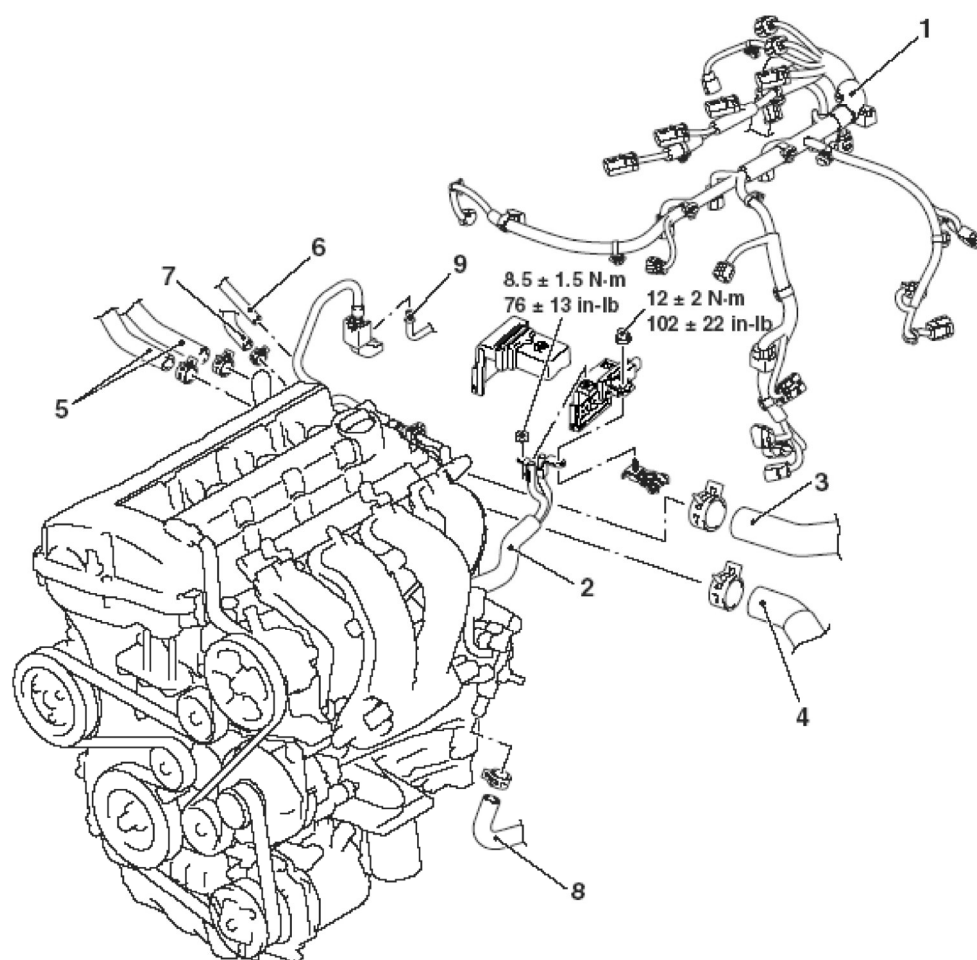

AC506785AC

Removal steps

1. Control wiring harness connection
2. Battery cable connection
3. Radiator upper hose connection
4. Radiator lower hose connection
5. Heater hose connection
6. Emission vacuum hose connection

<<A>> >>C<<


Removal steps (Continued)

7. Brake booster vacuum hose connection
8. Cooling water line hose connection
9. Fuel high-pressure hose connection
- Drive belt

Fig. 114: Identifying Engine Assembly Removing/Installing Components With Torque Specifications (1

Of 2)

Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

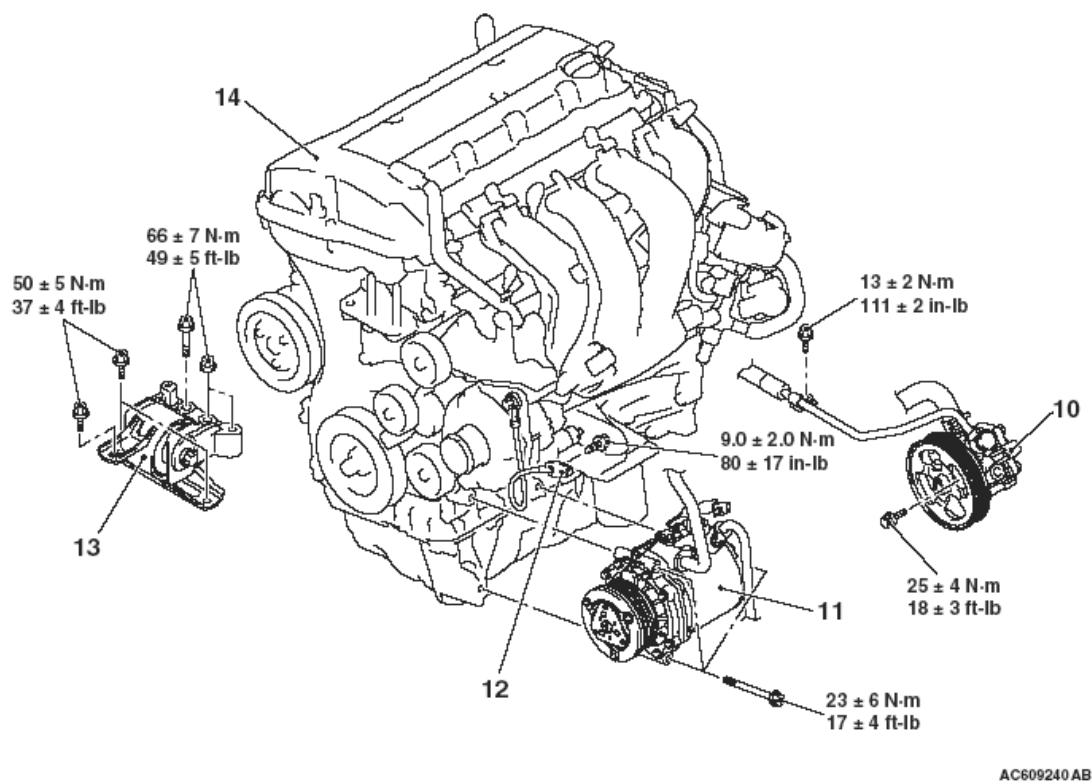

Removal steps		Removal steps (Continued)	
<>	10. Power steering oil pump assembly	<<D>>	• CVT assembly
<<C>>	11. A/C compressor and clutch assembly	<<E>> >>B<<	12. Grounding cable connection
<<D>>	• Manual transaxle assembly	<<F>> >>A<<	13. Engine mounting insulator
			14. Engine assembly

Fig. 115: Identifying Engine Assembly Removing/Installing Components With Torque Specifications (2 Of 2)

Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

Required Special Tools:

- MB991454: Engine Hanger Balancer
- MB991895: Engine Hanger
- MB991928: Engine Hanger
- MB992201: Engine Hanger Plate

REMOVAL SERVICE POINTS

<<A>> FUEL HIGH-PRESSURE HOSE REMOVAL

1. Remove the stopper of the fuel high-pressure hose.

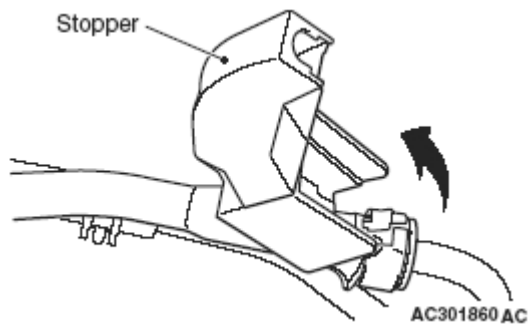


Fig. 116: Removing Stopper Of Fuel High-Pressure Hose
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

2. Raise the retainer of the fuel high-pressure hose and pull out the fuel high-pressure hose in the direction shown in the figure.

NOTE: If the retainer is released, install it securely after removing the fuel high-pressure hose.

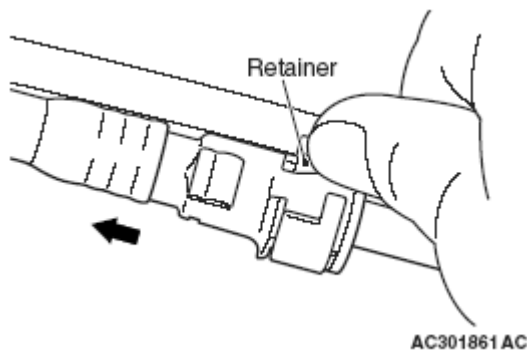


Fig. 117: Raising Retainer Of Fuel High-Pressure Hose
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

<> POWER STEERING OIL PUMP ASSEMBLY REMOVAL

1. Remove the power steering oil pump assembly with hose on it.
2. Tie the removed power steering oil pump with a string at a position where it will not interfere with the removal and installation of engine assembly.

<<C>> A/C COMPRESSOR AND CLUTCH ASSEMBLY REMOVAL

1. Remove the A/C compressor and clutch assembly together with the hose from the bracket.
2. Tie the removed A/C compressor and clutch assembly with a string at a position where it will not interfere with the removal and installation of engine assembly.

<<D>> MANUAL TRANSAXLE ASSEMBLY/CVT ASSEMBLY REMOVAL

1. Install the front end upper bar bolt to the position as shown in the figure.

2. Remove the transaxle assembly. (Refer to **TRANSAXLE ASSEMBLY**) < M/T>, (Refer to **TRANSAXLE ASSEMBLY**) < CVT>.

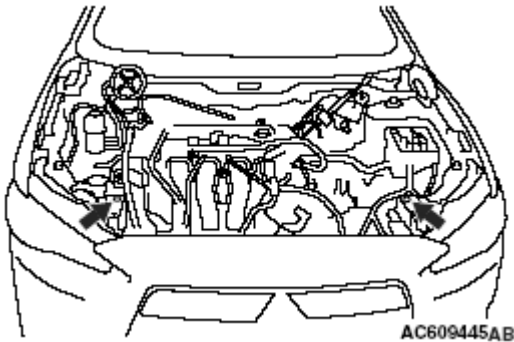


Fig. 118: Locating Front End Upper Bar Bolt
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

<<E>> ENGINE MOUNTING INSULATOR REMOVAL

1. Place a garage jack against the engine oil pan with a piece of wood in between to support the engine assembly.
2. When the transaxle assembly is removed, remove special tool MB991928 or MB991895 which supports the engine assembly.

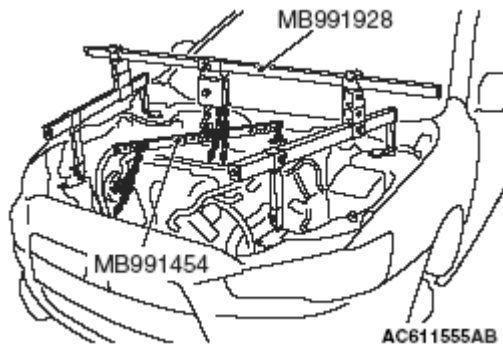


Fig. 119: Identifying Special Tool MB991928 Or MB991895 (1 Of 2)
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

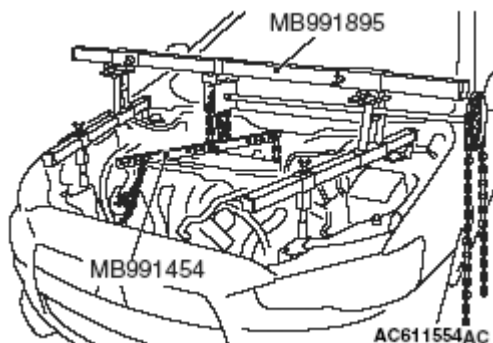


Fig. 120: Identifying Special Tool MB991928 Or MB991895 (2 Of 2)
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

3. Remove special tool MB992201.

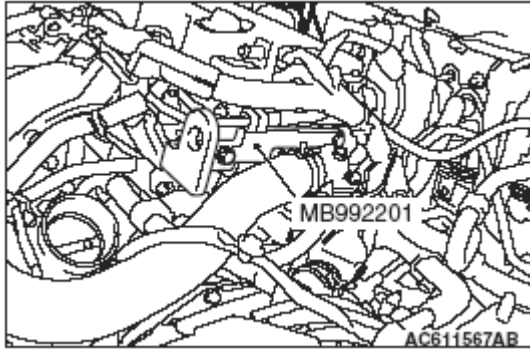


Fig. 121: Identifying Special Tool MB992201
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

4. Operate a garage jack so that the engine weight is not applied to the engine mounting insulator, and remove the engine mounting insulator.

<<F>> ENGINE ASSEMBLY REMOVAL

1. Mount the special tool MB991454 to the power steering oil pump bracket and the engine hanger, and set the chain block.

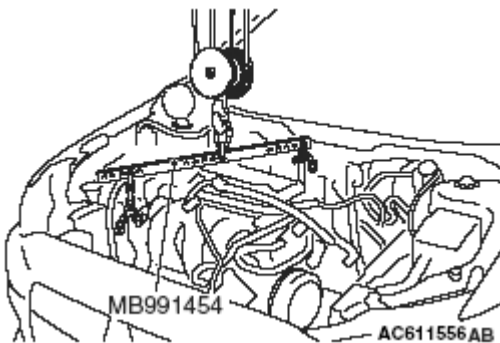


Fig. 122: Mounting Special Tool MB991454
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

2. After checking that all cables, hoses and wiring harness connectors and so on are disconnected from the engine, lift the engine assembly slowly with the chain block to remove the engine assembly upward from the engine compartment.

INSTALLATION SERVICE POINTS

>>A<< ENGINE ASSEMBLY INSTALLATION

Install the engine assembly, being careful not to pinch the cables, hoses, or wiring harness connectors.

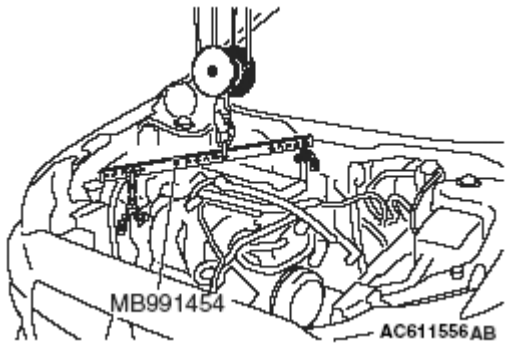


Fig. 123: Mounting Special Tool MB991454
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

>>B<< ENGINE MOUNTING INSULATOR INSTALLATION

1. Place a garage jack against the engine oil pan with a piece of wood in between, and install the engine mounting insulator while adjusting the position of the engine.
2. Install special tool MB991454.
3. Install special tool MB991928 or MB991895 which is used during installation of transaxle assembly to hold the engine assembly (Refer to TRANSAXLE ASSEMBLY) < M/T>, (Refer to TRANSAXLE ASSEMBLY) < CVT>.

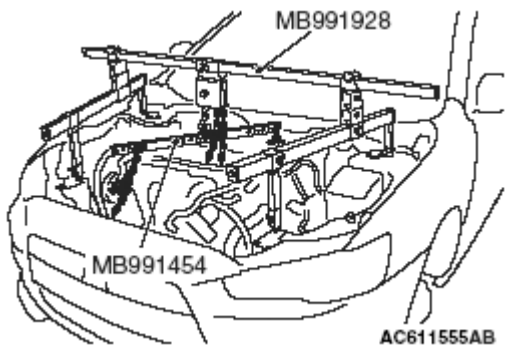


Fig. 124: Identifying Special Tool MB991928 And MB991454
Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

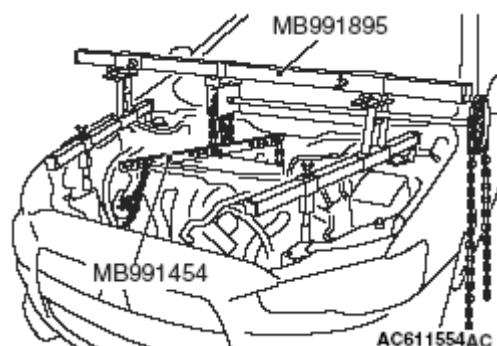


Fig. 125: Identifying Special Tool MB991895 And MB991454
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

>>C<< FUEL HIGH-PRESSURE HOSE INSTALLATION

CAUTION: After connecting the fuel high-pressure hose, slightly pull it in the pull-out direction to check that it is installed firmly. In addition, check that there is approximately 3 mm (0.12 inch) play. After the check, install the stopper securely.

Apply a small amount of engine oil to the fuel line pipe, and install the fuel high-pressure hose.

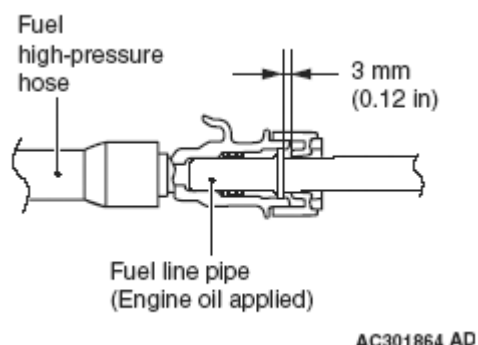


Fig. 126: Installing Fuel High-Pressure Hose
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.

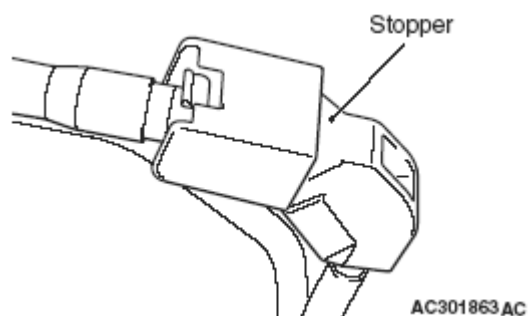


Fig. 127: Identifying Stopper
 Courtesy of MITSUBISHI MOTOR SALES OF AMERICA.