

## 2002-04 ENGINES

## 2.4L 4-Cylinder - Santa Fe

## GENERAL

## SPECIFICATIONS

## GENERAL SPECIFICATIONS

| Description                                                 | Specification                           | Limit              |
|-------------------------------------------------------------|-----------------------------------------|--------------------|
| <b>General</b>                                              |                                         |                    |
| Type                                                        | In-line, Double Overhead<br>Camshaft    |                    |
| Number of cylinders                                         | 4                                       |                    |
| Bore                                                        | 86.5 mm (3.41 in.)                      |                    |
| Stroke                                                      | 100 mm (3.94 in.)                       |                    |
| Total displacement                                          | 2351 cc (143.5 cu.in.)                  |                    |
| Compression ratio                                           | 10 : 1                                  |                    |
| Firing order                                                | 1 - 3 - 4 - 2                           |                    |
| <b>Valve timing</b>                                         |                                         |                    |
| Intake valve                                                |                                         |                    |
| Open (BTDC)                                                 | 12°                                     |                    |
| Close (ABDC)                                                | 56°                                     |                    |
| Exhaust valve                                               |                                         |                    |
| Open (BBDC)                                                 | 54°                                     |                    |
| Close (ATDC)                                                | 14°                                     |                    |
| <b>Cylinder head</b>                                        |                                         |                    |
| Flatness of gasket surface                                  | Max. 0.03 mm (0.0012 in.)               | 0.2 mm (0.008 in.) |
| Flatness of manifold mounting<br>surface                    | 0.15 mm (0.0059 in.)                    | 0.3 mm (0.012 in.) |
| Dimensions for reworking<br>oversize valve seat hole        |                                         |                    |
| Intake                                                      |                                         |                    |
| 0.3 mm (0.012 in.) O.S.                                     | 35.3 ~ 35.325 mm (1.39 ~ 1.3907<br>in.) |                    |
| 0.6 mm (0.024 in.) O.S.                                     | 35.6 ~ 35.625 mm (1.40 ~ 1.4026<br>in.) |                    |
| Exhaust                                                     |                                         |                    |
| 0.3 mm (0.012 in.) O.S.                                     | 33.3 ~ 33.325 mm (1.31 ~ 1.3120<br>in.) |                    |
| 0.6 mm (0.024 in.) O.S.                                     | 33.6 ~ 33.625 mm (1.32 ~ 1.3238<br>in.) |                    |
| Dimensions for reworking<br>oversize valve guide hole (both |                                         |                    |

## 2002 Hyundai Santa Fe

2002-04 ENGINES 2.4L 4-Cylinder - Santa Fe

|                                     |                                                |                        |
|-------------------------------------|------------------------------------------------|------------------------|
| intake and exhaust)                 |                                                |                        |
| 0.05 mm (0.002 in.) O.S.            | 12.05 ~ 12.068 mm (0.4751 in.)                 |                        |
| 0.25 mm (0.010 in.) O.S.            | 12.25 ~ 12.268 mm (0.4830 in.)                 |                        |
| 0.50 mm (0.020 in.) O.S.            | 12.50 ~ 12.518 mm (0.4928 in.)                 |                        |
| <b>Camshaft</b>                     |                                                |                        |
| Cam height                          |                                                |                        |
| Intake                              | 35.493 mm (1.3974 in.)                         | 34.993 mm (1.3776 in.) |
| Exhaust                             | 35.317 mm (1.3904 in.)                         | 34.817 mm (1.3707 in.) |
| Journal O.D.                        | 26 mm (1.02 in.)                               |                        |
| Bearing oil clearancce              | 0.040 ~ 0.076 mm (0.0020 ~ 0.0030 in.)         |                        |
| End play                            | 0.1 ~ 0.15 mm (0.004 ~ 0.006 in.)              |                        |
| <b>Valve</b>                        |                                                |                        |
| Valve length Intake                 | 109.5 mm (4.311 in.)                           |                        |
| Exhaust                             | 109.7 mm (4.319 in.)                           |                        |
| Stem O.D.                           |                                                |                        |
| Intake                              | 6.565 ~ 6.580 mm (0.2585 ~ 0.2591 in.)         |                        |
| Exhaust                             | 6.530 ~ 6.550 mm (0.2571 ~ 0.2579 in.)         |                        |
| Face angle                          | 45° ~ 45.5°                                    |                        |
| Thickness of valve head (margin)    |                                                |                        |
| Intake                              | 1.0 mm (0.039 in.)                             | 0.7 mm (0.028 in.)     |
| Exhaust                             | 1.5 mm (0.059 in.)                             | 1.0 mm (0.039 in.)     |
| Valve stem to valve guide clearance |                                                |                        |
| Intake                              | 0.020 ~ 0.047 mm (0.0008 ~ 0.0019 in.)         | 0.1 mm (0.0039 in.)    |
| Exhaust                             | 0.050 ~ 0.085 mm (0.0020 ~ 0.0033 in.)         | 0.15 mm (0.0059 in.)   |
| <b>Vavle guide</b>                  |                                                |                        |
| Length                              |                                                |                        |
| Intake                              | 45.5 mm (1.791 in.)                            |                        |
| Exhust                              | 50.5 mm (1.988 in.)                            |                        |
| Service over size                   | 0.05, 0.25, 0.50 mm (0.002, 0.010, 0.020 in.)  |                        |
| <b>Valve seat</b>                   |                                                |                        |
| Width of seat contact               | 0.9 ~ 1.3 mm (0.035 ~ 0.051 in.)               |                        |
| Seat angle                          | 44° ~ 44.5°                                    |                        |
| Service size                        | 0.3 mm (0.012 in.) 0.6 mm (0.024 in.) oversize |                        |
| <b>Vavle sprin</b>                  |                                                |                        |
| Free length                         | 45.82 mm (1.8039 in.)                          |                        |
| Load                                | 25.3kg / 40 mm (55.78 lb / 1.57                |                        |

## 2002 Hyundai Santa Fe

2002-04 ENGINES 2.4L 4-Cylinder - Santa Fe

|                                         |                                            |                     |
|-----------------------------------------|--------------------------------------------|---------------------|
| Out-of-square                           | in.) at installed height<br>Less than 1.5° |                     |
| <b>Cylinder block</b>                   |                                            |                     |
| Cylinder bore                           | 86.5+0.03 mm (3.406+0.0012 in.)            |                     |
| Out-of-round and taper of cylinder bore | Less than 0.01 mm (0.0004 in.)             |                     |
| Flatness of gasket surface              | Less than 0.05 mm (0.0020 in.)             | 0.1 mm (0.0039 in.) |
| <b>Piston</b>                           |                                            |                     |
| O.D.                                    | 86.47 ~ 86.5 mm (3.404 ~ 3.406 in.)        |                     |
| Piston - to - cylinder clearance        | 0.02 ~ 0.04 mm (0.0008 ~ 0.0016 in.)       |                     |
| Ring groove width                       |                                            |                     |
| No. 1                                   | 1.22 ~ 1.24 mm (0.048 ~ 0.049 in.)         |                     |
| No. 2                                   | 1.51 ~ 1.53 mm (0.059 ~ 0.060 in.)         |                     |
| Oil                                     | 2.81 ~ 2.83 mm (0.111 ~ 0.1114 in.)        |                     |
| Service size                            | 0.25 mm (0.010 in.) oversize               |                     |
| <b>Piston ring</b>                      |                                            |                     |
| Side clearnace                          |                                            |                     |
| No. 1                                   | 0.03 ~ 0.07 mm (0.0012 ~ 0.0028 in.)       |                     |
| No. 2                                   | 0.02 ~ 0.06 mm (0.0008 ~ 0.0024 in.)       |                     |
| Oil ring                                | 0.06 ~ 0.15 mm (0.0024 ~ 0.0059 in.)       | 0.1 mm (0.0039 in.) |
| End gap No. 1                           | 0.25 ~ 0.35 mm (0.0098 ~ 0.0138 in.)       | 0.8 mm (0.031 in.)  |
| No. 2                                   | 0.40 ~ 0.55 mm (0.0157 ~ 0.0216 in.)       | 0.8 mm (0.031 in.)  |
| Oil ring side rail                      | 0.10 ~ 0.40 mm (0.0039 ~ 0.0157 in.)       | 1.0 mm (0.039 in.)  |
| <b>Connecting rod</b>                   |                                            |                     |
| Bend                                    | 0.05 mm (0.0020 in.)                       |                     |
| Twist                                   | 0.1 mm (0.004 in.)                         |                     |
| Connecting rod big end to crankshaft    | 0.10 ~ 0.25 mm (0.0040 ~ 0.0098 in.)       | 0.4 mm (0.0157 in.) |
| Side clearance                          |                                            |                     |
| Piston pis installation force           | 1250 ± 500 kg (2756 ± 1100 lb.ft)          |                     |
| Connecting rod pin O.D                  | 48 ~ 48.015 mm (1.890 ~ 1.8903 in.)        |                     |
| Connecting rod bearing oil clearance    | 0.015 ~ 0.048 mm (0.0006 ~ 0.0019 in.)     | 0.1 mm (0.0039 in.) |

## 2002 Hyundai Santa Fe

2002-04 ENGINES 2.4L 4-Cylinder - Santa Fe

|                                                               |                                          |                      |
|---------------------------------------------------------------|------------------------------------------|----------------------|
| Crankshaft main bearing oil clearance                         |                                          |                      |
| No. 1, 2, 4, 5 journal                                        | 0.018 ~ 0.036 mm (0.0007 ~ 0.0014 in.)   | 0.1 mm (0.0039 in.)  |
| No. 3 journal                                                 | 0.024 ~ 0.042 mm (0.0009 ~ 0.0017 in.)   |                      |
| <b>Crankshaft</b>                                             |                                          |                      |
| Journal O.D                                                   | 56.982 ~ 57.000 mm (2.2434 ~ 2.2441 in.) |                      |
| Out - of - round of journal and pin                           | Less than 0.015 mm (0.0006 in.)          |                      |
| Taper of journal and pin                                      | Less than 0.005 mm (0.0002 in.)          |                      |
| End play                                                      | 0.05 ~ 0.25 mm (0.0020 ~ 0.0098 in.)     | 0.25 mm (0.0098 in.) |
| <b>Flywheel</b>                                               |                                          |                      |
| Runout                                                        |                                          | 0.13 mm (0.0051 in.) |
| Oil pressure at idle [Oil temperature is 75-90°C (167-194°F)] | 80 kPa (11.6 psi)                        |                      |
| <b>Oil pump</b>                                               |                                          |                      |
| Tip clearance                                                 |                                          |                      |
| Drive gear                                                    | 0.16 ~ 0.21 mm (0.0063 ~ 0.0083 in.)     | 0.25 mm (0.0098 in.) |
| Driven gear                                                   | 0.18 ~ 0.21 mm (0.0071 ~ 0.0083 in.)     | 0.25 mm (0.0098 in.) |
| Side clearance                                                |                                          |                      |
| Drive gear                                                    | 0.08 ~ 0.14 mm (0.0031 ~ 0.0055 in.)     | 0.25 mm (0.0098 in.) |
| Driven gear                                                   | 0.06 ~ 0.12 mm (0.0024 - 0.0047 in.)     | 0.25 mm (0.0098 in.) |
| <b>Relief spring</b>                                          |                                          |                      |
| Free length                                                   | 46.6 mm (1.835 in.)                      |                      |
| Load [61 N (13.5 lb)]                                         | 40.1 mm (1.579 in.)                      |                      |
| <b>Right silent shaft</b>                                     |                                          |                      |
| Front journal diameter                                        | 18.467 ~ 18.480 mm (0.7270 ~ 0.7276 in.) |                      |
| Rear journal diameter                                         | 40.951 ~ 40.967 mm (1.6516 - 1.6129 in.) |                      |
| Oil clearance                                                 |                                          |                      |
| Front                                                         | 0.020 ~ 0.061 mm (0.0008 ~ 0.0024 in.)   |                      |
| Rear                                                          | 0.050 ~ 0.091 mm (0.0020 - 0.0036 in.)   |                      |
| <b>Left silent shaft</b>                                      |                                          |                      |
| Front journal diameter                                        | 18.467 ~ 18.480 mm (0.7270 ~ 0.7276 in.) |                      |



## 2002 Hyundai Santa Fe

2002-04 ENGINES 2.4L 4-Cylinder - Santa Fe

|                                   |                                                                  |  |
|-----------------------------------|------------------------------------------------------------------|--|
| Rear journal diameter             | 40.951 ~ 40.967 mm (1.6122 ~ 1.6130 in.)                         |  |
| Oil clearance                     |                                                                  |  |
| Front                             | 0.020 ~ 0.054 mm (0.0008 ~ 0.0021 in.)                           |  |
| Rear                              | 0.042 ~ 0.083 mm (0.0017 ~ 0.0033 in.)                           |  |
| <b>Cooling method</b>             | Forced circulation with electric fan                             |  |
| <b>Cooling system quantity</b>    | 7.0 lit (7.4 U.S.qts., 6.1 Imp.qts.) [For DOHC]                  |  |
| <b>Thermostat</b>                 |                                                                  |  |
| Type                              | Wax pellet type with jiggle valve                                |  |
| Normal opening temperature        | 82 °C (180°F)                                                    |  |
| Opening temperature range         | 80.5 ~ 83.5°C (176 ~ 183°F)                                      |  |
| Wide open temperature             | 95 °C (203°F)                                                    |  |
| <b>Radiator cap</b>               |                                                                  |  |
| Main valve opening pressure       | 107.9 ± 14.7 kPa 1.1 ± 0.15 kg/cm <sup>2</sup> 15.64 ± 2.13 psi) |  |
| Main valve closing pressure       | 83.4 kPa (0.85 kg/cm <sup>2</sup> , 12.1 psi)                    |  |
| Vacuum valve opening pressure     | -6.86 kPa (-0.07 kg/cm <sup>2</sup> , -1.00 psi)                 |  |
| <b>Air cleaner</b>                |                                                                  |  |
| Type                              | Dry type                                                         |  |
| Element                           | Unwoven cloth type                                               |  |
| Exhaust pipe                      |                                                                  |  |
| Muffler                           | Expansion resonance type                                         |  |
| Suspension system                 | Rubber hangers                                                   |  |
| <b>Coolant temperature sensor</b> |                                                                  |  |
| Type                              | Thermister type                                                  |  |
| Resistance                        |                                                                  |  |
| 20°C (68°F)                       | 2.37 ± 0.24 kohms                                                |  |
| 80°C (176°F)                      | 0.29 ± 0.032 kohms                                               |  |

### Service Standards

| Standard value        |     |
|-----------------------|-----|
| Coolant concentration |     |
| Tropical area         | 40% |
| Other area            | 50% |

G00789945

**Fig. 1: Standard Value Table**

## 2002 Hyundai Santa Fe

2002-04 ENGINES 2.4L 4-Cylinder - Santa Fe

Courtesy of HYUNDAI MOTOR CO.

### Lubricant

|                |                                            |
|----------------|--------------------------------------------|
| Engine coolant | Ethylene glycol base for aluminum radiator |
|----------------|--------------------------------------------|

G00789946

**Fig. 2: Engine Coolant Specification**  
Courtesy of HYUNDAI MOTOR CO.

### Sealant

|                                   |                                                |
|-----------------------------------|------------------------------------------------|
| Engine coolant temperature sensor | LOCTITE 262, three bond No. 1324 or equivalent |
| Oil pressure switch               | 3M ATD No. 8660 or Three bond No. 1141E        |

G00789947

**Fig. 3: Sealant Specification Table**  
Courtesy of HYUNDAI MOTOR CO.

**NOTE:**

- O.D.= Outer Diameter**
- I.D.= Inner Diameter**
- O.S.= Oversize Diameter**
- U.S. = Undersize Diameter**

### Torque Specifications

**WARNING:** For updated reuse guidelines and tightening procedures of cylinder head, connecting rod and main bearing bolts, refer to **TSB 02-20-002 CYLINDER HEAD/CONNECTING ROD/MAIN BEARING BOLT REUSE GUIDELINES & TORQUE SPECS** .

### TORQUE SPECIFICATIONS

| Application                     | Ft. Lbs. (N.m) |
|---------------------------------|----------------|
| Alternator                      |                |
| Support Bolt                    | 15-18 (20-25)  |
| Brace Bolts                     |                |
| M8x90 mm                        | (1)            |
| M8x40 mm                        | 15-18 (20-25)  |
| Auto Tensioner Bolts            | 15-20 (20-27)  |
| A/C Compressor-To-Bracket Bolts | 17-20 (23-27)  |
| Balance Shaft Bolts             | 25-30 (34-40)  |
| Block Plug Caps                 | 15-20 (20-27)  |

## 2002 Hyundai Santa Fe

2002-04 ENGINES 2.4L 4-Cylinder - Santa Fe

|                                                  |                                   |
|--------------------------------------------------|-----------------------------------|
| Camshaft Bearing Cap Bolts                       | 14-15 (19-20)                     |
| Camshaft Sprocket Bolts                          | 59-74 (80-100)                    |
| CMPS Cylinder Bolt                               | 11-16 (11-22)                     |
| Coolant Pump Bolts                               | 15-20 (20-27)                     |
| Coolant Temperature Sensor                       | 15-30 (20-40)                     |
| Connecting Rod Cap Bolts                         |                                   |
| Step 1                                           | 15 (20)                           |
| Step 2                                           | Tighten An Additional 90 Degrees  |
| Crankshaft Pulley Bolt                           | 118-125 (160-170)                 |
| Cylinder Head Bolts <sup>(2)</sup>               |                                   |
| Using New Bolts <sup>(2)</sup>                   |                                   |
| Step 1                                           | 47 (64)                           |
| Step 2                                           | <sup>(3)</sup> Fully Loosen Bolts |
| Step 3                                           | 15 (20)                           |
| Step 4                                           | Tighten An Additional 90 Degrees  |
| Step 5                                           | Tighten An Additional 90 Degrees  |
| Using Original Bolts <sup>(2)</sup>              |                                   |
| Step 1                                           | 15 (20)                           |
| Step 2                                           | Tighten An Additional 90 Degrees  |
| Step 3                                           | Tighten An Additional 90 Degrees  |
| Damper Pulley-To-Crankshaft Sprocket             | 15-22 (20-30)                     |
| Driven Gear Bolts                                | 25-30 (34-40)                     |
| Drive Plate Bolts                                | 96-103 (130-140)                  |
| Engine Mounting Components                       |                                   |
| Engine Hanger Bolts                              |                                   |
| M8                                               | 18-22 (25-30)                     |
| M10                                              | 25-41 (35-55)                     |
| Engine Mounting Bracket Bolts & Nuts             | 44-59 (60-80)                     |
| Engine Mount Insulator Bolts                     | 66-81 (90-110)                    |
| Engine Support Bracket Fasteners                 | 41-48 (55-65)                     |
| Front Roll Stopper Bracket-To-Crossmember Bolts  | 30-41 (40-55)                     |
| Front Roll Stopper Insulator Fasteners           | 36-48 (50-65)                     |
| Rear Roll Stopper Bracket-To-Crossmember Bolts   | 36-48 (50-65)                     |
| Rear Roll Stopper Insulator Fasteners            | 36-48 (50-65)                     |
| Exhaust Components                               |                                   |
| Center Exhaust Pipe-To-Catalytic Converter Bolts | 22-30 (30-40)                     |
| Center Exhaust Pipe-To-Main Muffler              | 22-30 (30-40)                     |
| Exhaust Manifold Cover Bolts                     | 9-11 (12-15)                      |

## 2002 Hyundai Santa Fe

2002-04 ENGINES 2.4L 4-Cylinder - Santa Fe

|                                              |                                  |
|----------------------------------------------|----------------------------------|
| Exhaust Manifold                             |                                  |
| M8 Nuts                                      | 18-22 (25-30)                    |
| M10 Nuts                                     | 25-40 (34-54)                    |
| Front Exhaust Pipe Clamp Bolt                | 15-22 (20-30)                    |
| Front Exhaust Pipe-To-Exhaust Manifold Bolts | 30-37 (40-50)                    |
| Front Exhaust Pipe Bracket Bolts             | 15-22 (20-30)                    |
| Front Exhaust Manifold Bolt-To-Cylinder Head | 15-22 (20-30)                    |
| Main Muffler Hanger Support Bracket Bolt     | 7-14 (10-20)                     |
| Flywheel-To-Crankshaft Bolts                 | 96-103 (130-140)                 |
| Front Case Bolts                             | 15-20 (19-27)                    |
| Idler Pulley Bolts                           | 22-31 (30-42)                    |
| Intake Manifold                              |                                  |
| Bracket Bolts (Stay)                         | 13-18 (18-25)                    |
| Mounting Bolts/Nuts                          |                                  |
| Bolts                                        | 11-15 (15-20)                    |
| Nuts                                         | 22-31 (30-42)                    |
| Main Bearing Cap Bolts                       |                                  |
| Step 1                                       | 18 (25)                          |
| Step 2                                       | Tighten An Additional 90 Degrees |
| Oil Drain Plug                               | 25-33 (34-45)                    |
| Oil Filter Bracket Bolts                     | 15-20 (20-27)                    |
| Oil Pump                                     |                                  |
| Cover Bolts                                  | 11-13 (15-18)                    |
| Sprocket Nuts                                | 37-44 (50-60)                    |
| Oil Screen Bolts                             | 11-16 (15-22)                    |
| Oxygen Sensor                                | 29-37 (40-50)                    |
| Power Steering Pump Bracket Bolts            | 25-33 (35-45)                    |
| Relief Plug                                  | 29-37 (40-50)                    |
| Starter Bolts                                | 20-25 (27-34)                    |
| Stud Bolts                                   | 22-30 (30-40)                    |
| Tension Rod Bracket Bolt-To-Tension Rod      | 25-40 (35-55)                    |
| Tensioner Arm Assembly Bolts                 | 12-19 (17-26)                    |
| Tensioner Pulley Bolts                       | 31-41 (42-54)                    |
| Tensioner Pulley Bracket Bolts               | 17-20 (23-27)                    |
| Throttle Body Stay Bolts                     | 11-16 (15-22)                    |
| Throttle Body-To-Intake Manifold Bolts       | 11-16 (15-22)                    |
| Timing Belt Idler Bolts                      | 22-30 (30-40)                    |
| Timing Belt Tensioner Bolts                  | 31-40 (42-54)                    |
| Torque Converter-To-Drive Plate Bolts        | 33-39 (45-53)                    |

## 2002 Hyundai Santa Fe


2002-04 ENGINES 2.4L 4-Cylinder - Santa Fe

### Transaxle Mount

|                                          |                 |
|------------------------------------------|-----------------|
| Bracket Bolts                            | 44-59 (60-80)   |
| Insulator Bolts                          | 66-81 (90-110)  |
| <b>INCH Lbs. (N.m)</b>                   |                 |
| Air Cleaner Body Bolts                   | 71-89 (8-10)    |
| Air Cleaner Bracket Bolts                | 88-115 (10-13)  |
| Center Cover Bolts                       | 35-44 (4-5)     |
| Coolant Inlet Fitting                    | 89-133 (10-15)  |
| Coolant Pump Pulley Bolts                | 71-89 (8-10)    |
| Delivery Pipe-To-Cylinder Block Bolts    | 89-115 (10-13)  |
| Exhaust Hanger Bolts                     |                 |
| Hanger Bolt-To-Body                      | 88-133 (10-15)  |
| Hanger Bolt-To-Main Muffler              | 88-133 (10-15)  |
| Heat Protector-To-Exhaust Manifold Bolts | 106-133 (12-15) |
| Ignition Coil Bolts                      | 71-106 (8-12)   |
| Oil Level Gauge                          | 106-133 (12-15) |
| Oil Pan Bolts                            | 89-106 (10-12)  |
| Oil Pressure Switch                      | 71-106 (8-12)   |
| Oil Seal Case Bolts                      | 89-106 (10-12)  |
| Power Transistor Bolts                   | 89-106 (10-12)  |
| Radiator Fan Motor Bolts                 | 71-89 (8-10)    |
| Rear Oil Seal Case Bolts                 | 89-106 (10-12)  |
| Resonator Mounting Bolts                 | 71-89 (8-10)    |
| Rocker Cover Bolts                       | 71-89 (8-10)    |
| Timing Belt Cover                        |                 |
| Lower & Upper Cover Bolts                | 71-88 (8-10)    |
| Rear Cover Bolts                         |                 |
| Upper                                    | 88-106 (10-12)  |
| Right                                    | 88-106 (10-12)  |
| Valve Cover Bolts                        | 71-89 (8-10)    |

- (1) Tighten to 71-106 INCH lbs. (8-12 N.m).
- (2) Tighten in sequence with engine cold. See **Fig. 4**.
- (3) Fully loosen bolts in correct order. See **Fig. 5**.
- (4) Tighten to 71-89 INCH lbs. (8-10 N.m).
- (5) Tighten to 89-106 INCH lbs. (10-12 N.m)


← CAMSHAFT SPROCKET SIDE

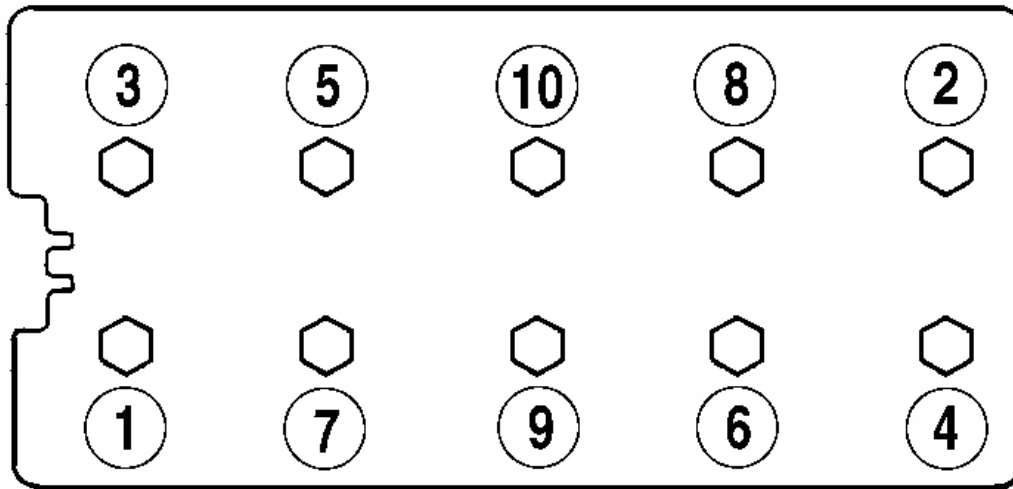

G00010614

**Fig. 4: Cylinder Head Bolt Removal Sequence**  
 Courtesy of NISSAN MOTOR CO., U.S.A.

## ← CAMSHAFT SPROCKET SIDE

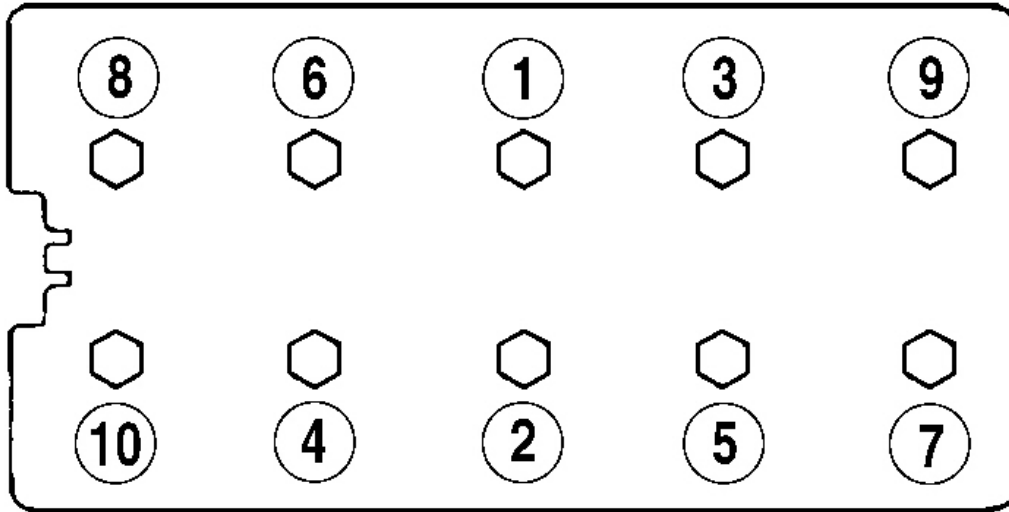

G00010615

**Fig. 5: Cylinder Head Bolt Tightening Sequence**  
Courtesy of HYUNDAI MOTOR CO.

**Checking Engine Oil**


1. Position a vehicle on a level surface.
2. Turn off the engine.

**NOTE:** If a vehicle that has not been used for a prolonged period, run the engine for several minutes.  
Turn off the engine and wait for 5 minutes at least, and then check the oil level.

3. Check that the engine oil level is within the level range indicated on the oil dipstick. If the oil level is found to have fallen to the lower limit (the "L" mark), refill to the "F" mark.

**NOTE:** When refilling, use the proper grade of engine oil.

4. Check that the oil is not dirty or mixed with coolant or gasoline and it has the proper viscosity.

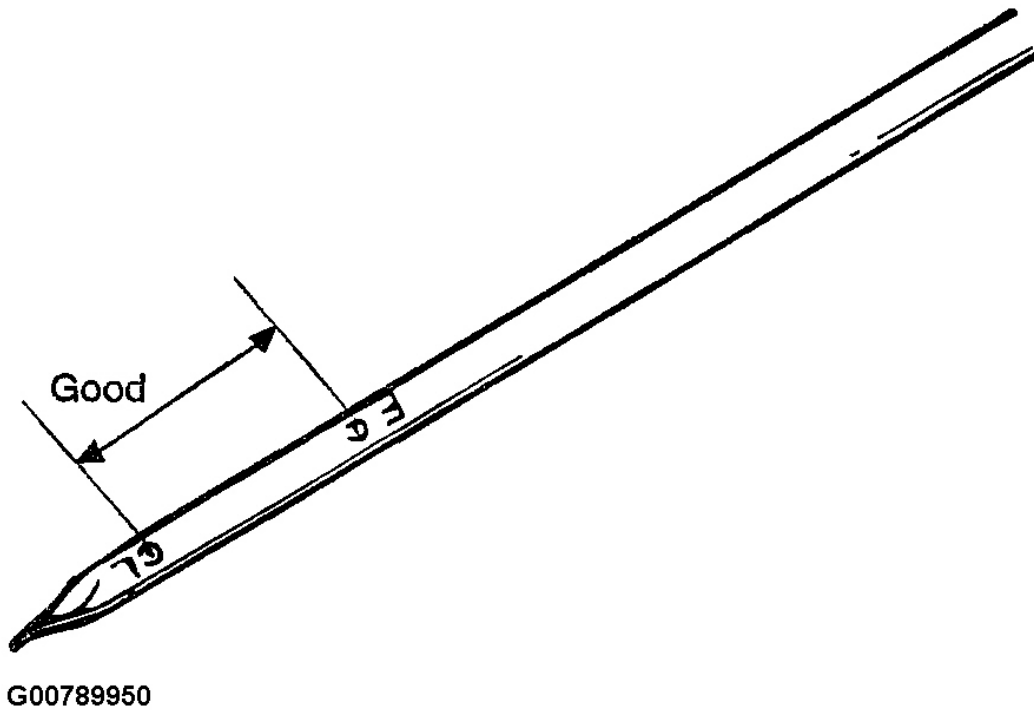

**Fig. 6: Identifying Good Oil Level**  
Courtesy of HYUNDAI MOTOR CO.

**Selection Of Engine Oil**


**Recommended API classification: SH OR ABOVE**

**RECOMMENDED SAE VISCOSITY GRADES :**



## 2002 Hyundai Santa Fe

2002-04 ENGINES 2.4L 4-Cylinder - Santa Fe

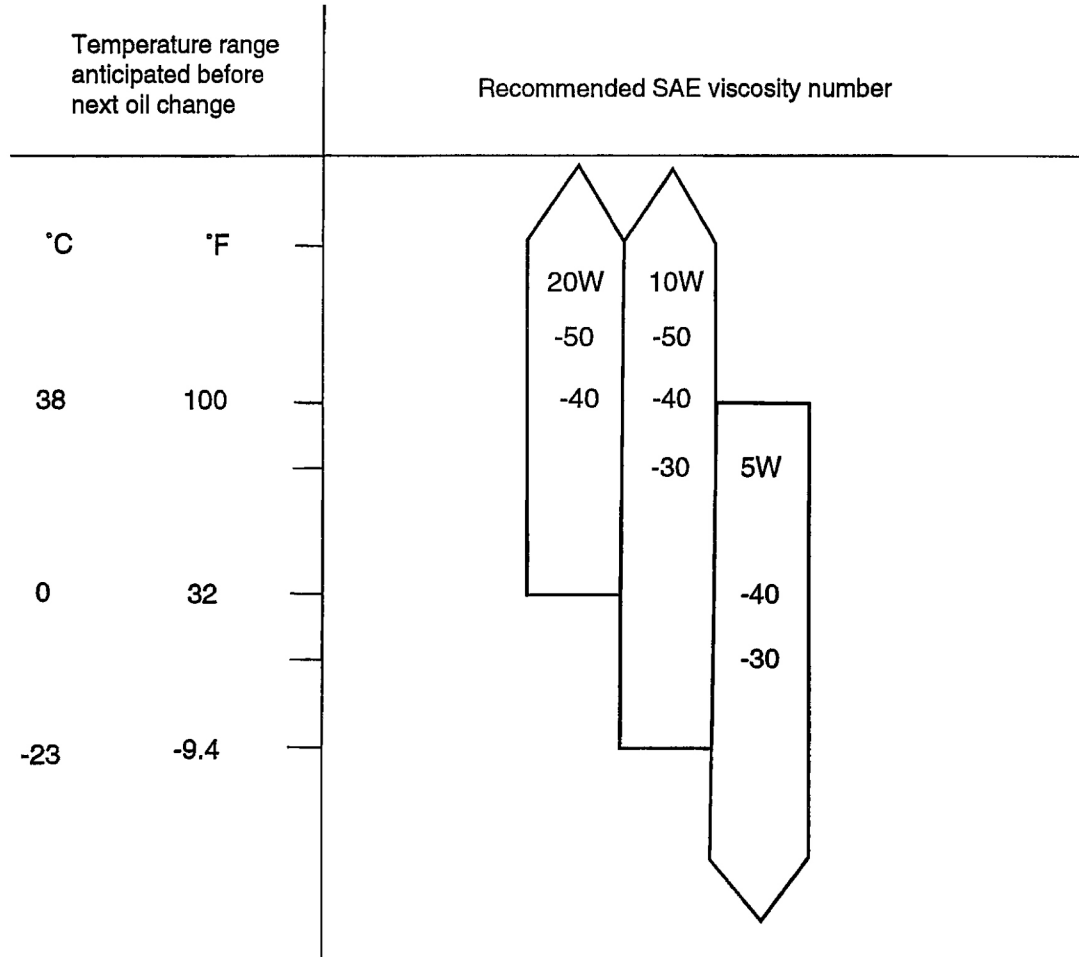

G00789951

**Fig. 7: Recommended SAE Viscosity Grades**  
Courtesy of HYUNDAI MOTOR CO.

**NOTE:** For best performance and maximum protection of all types of operation, select only those lubricants which:

1. Satisfy the requirements of the API classification.
2. Have the proper SAE grade number for expected ambient temperature range.

Lubricants which do not have both SAE grade number and an API service classification on the container should not be used.

### Changing Engine Oil

1. Run the engine until it reaches normal operating temperature.

2. Turn off the engine.
3. Remove the oil filler cap and the drain plug. Drain the engine oil.
4. Tighten the drain plug to the specified torque.

**Tightening torque**

Oil pan drain plug : 35 ~ 45 Nm (350 ~ 450 kg.cm, 25 ~ 33 lb.ft)

**NOTE:**        **Whenever tightening the oil drain plug, use a new drain plug gasket.**

5. Fill new engine oil through the oil filler cap opening.

**Capacity**

Drain and refill : 4.3 lit (4.53 U.S.qts., 3.78 Imp.qts.)


**NOTE:**        **Do not overfill. This will cause oil aeration and loss of oil pressure.**

6. Install the oil filler cap.
7. Start and run the engine.
8. Turn off the engine and then check the oil level. Add oil if necessary.

**Replacing The Oil Filter**

All Hyundai Motor Company engines are equipped with a high quality, disposable oil filter. This filter is recommended as a replacement filter for all vehicles. The quality of after market replacement filters vary considerably.

High quality replacement filters should be used to assure the most efficient service. Make sure that the rubber gasket from the old oil filter is completely removed from the contact surface on the engine block before installing a new filter.

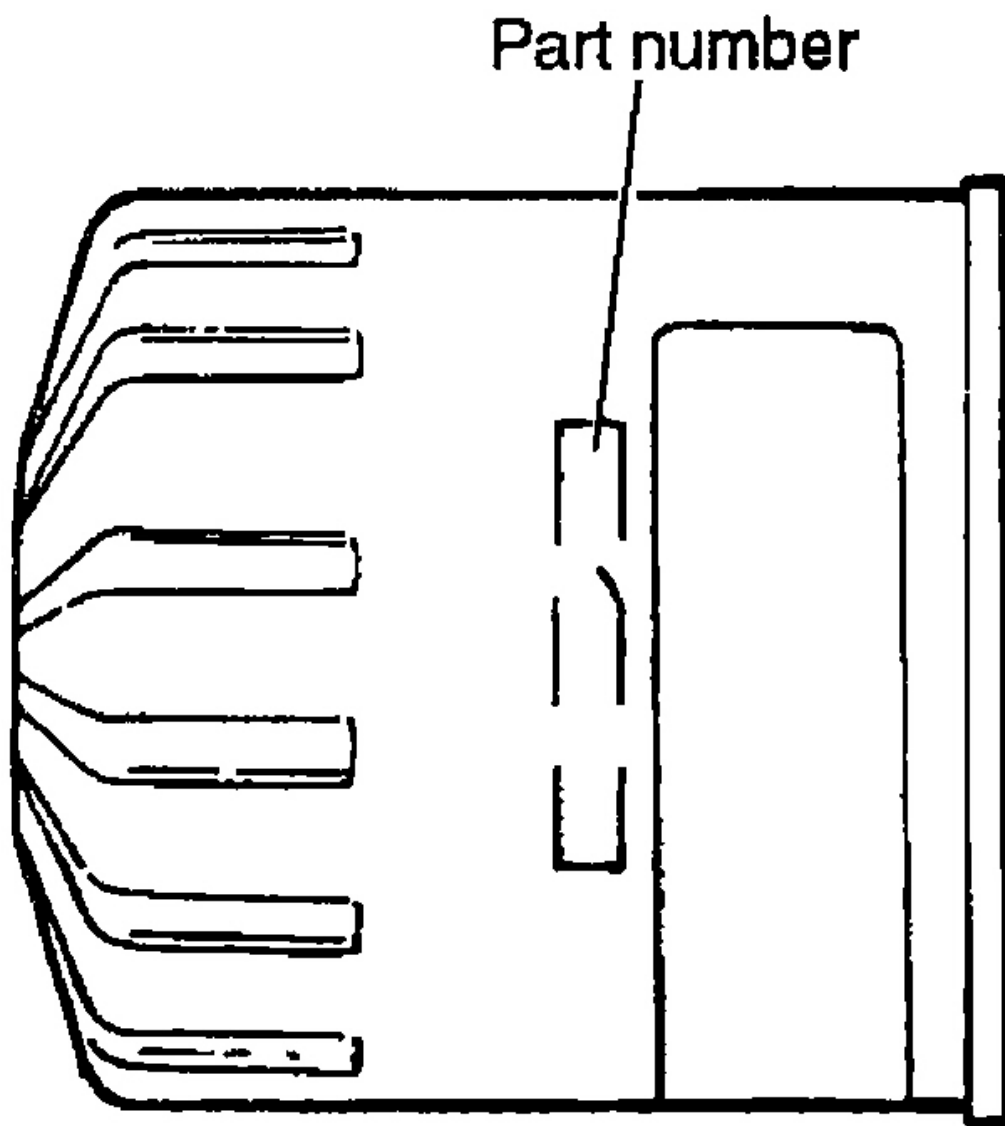


**G00789952**

**Fig. 8: Identifying Oil Filter Part Number**  
Courtesy of HYUNDAI MOTOR CO.

**Procedure For Replacing The Oil Filter**

1. Use a filter wrench to remove the oil filter.
2. Before installing a new oil filter on the engine, apply clean engine oil to the surface of the rubber gasket.

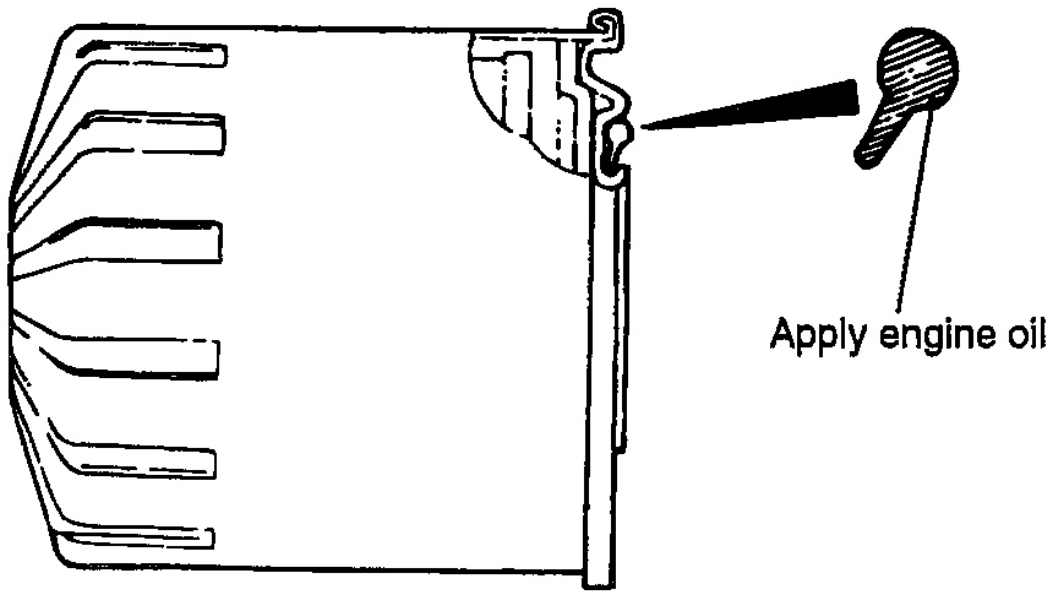

G00789953

**Fig. 9: Applying Engine Oil To Oil Filter Rubber Gasket**  
Courtesy of HYUNDAI MOTOR CO.

3. Tighten the oil filter to the specified torque.

Oil filter : 12 ~ 16 Nm (120 ~ 160 kg.cm, 9 ~ 12 lb.ft)

4. Start and run the engine and check for engine oil leak.
5. After turning off the engine, check the oil level and add oil as necessary.


#### Checking Coolant Leak

1. Loosen the radiator cap.
2. Confirm that the coolant level is up to the filler neck.
3. Install a radiator cap tester to the radiator filler neck and apply 150 kpa (21 psi, 1.53 kg/cm<sup>2</sup>) pressure. Hold it for two minutes in that condition while checking for leakage from the radiator, hoses or connections.

#### NOTE:

1. Radiator coolant may be extremely hot. Do not open the system because hot, or scalding water could gush out causing personal injury. Allow the vehicle to cool before servicing this system.
2. When the tester is removed, be careful not to spill any coolant from it.

3. Be sure to clean away completely any from the area.
  4. Be careful when installing and removing the tester and when testing, not to deform the filler neck of the radiator.
4. If there is leakage, repair or replace with the appropriate part.

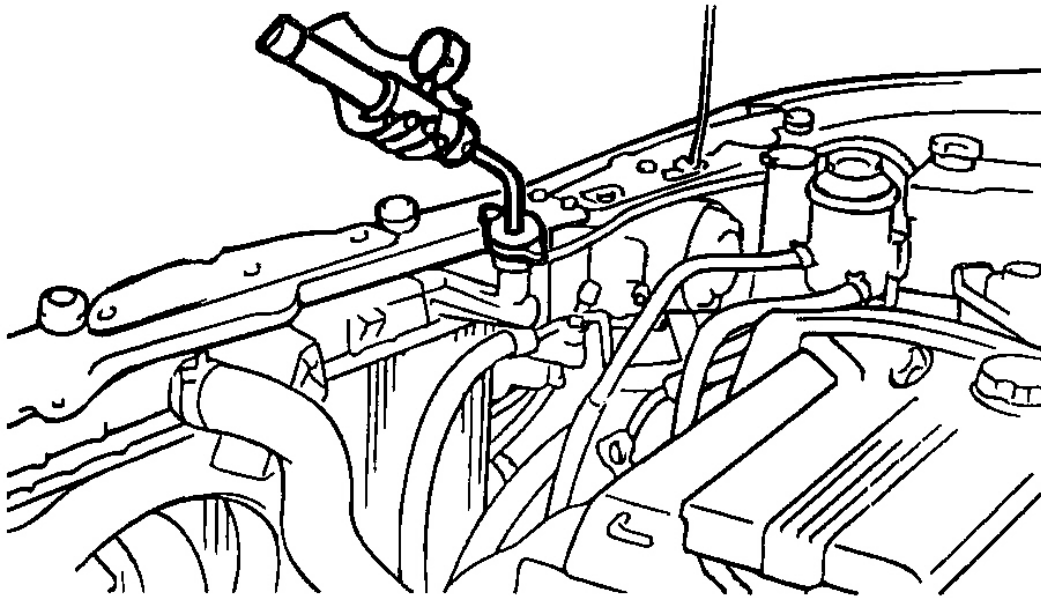

G00789954

**Fig. 10: Pressure Testing Cooling System**  
Courtesy of HYUNDAI MOTOR CO.

#### Radiator Cap Pressure Test

1. Use an adapter to attach the cap to the tester.
2. Increase the pressure until the gauge stops moving.


Main valve opening pressure : 107.9kPa $\pm$ 14.7kPa (1.1  $\pm$  0.15 kg/cm<sup>2</sup> , 15.64  $\pm$  2.13)

Main valve closing pressure : 83.4 kPa (0.85 kg/cm<sup>2</sup> , 12.1 psi)

3. Check that the pressure level is maintained at or above the limit.
4. Replace the radiator cap if the reading does not remain at or above the limit.

**NOTE:** Be sure that the cap is clean before testing, since rust or other foreign

material on the cap seal will cause an incorrect reading.

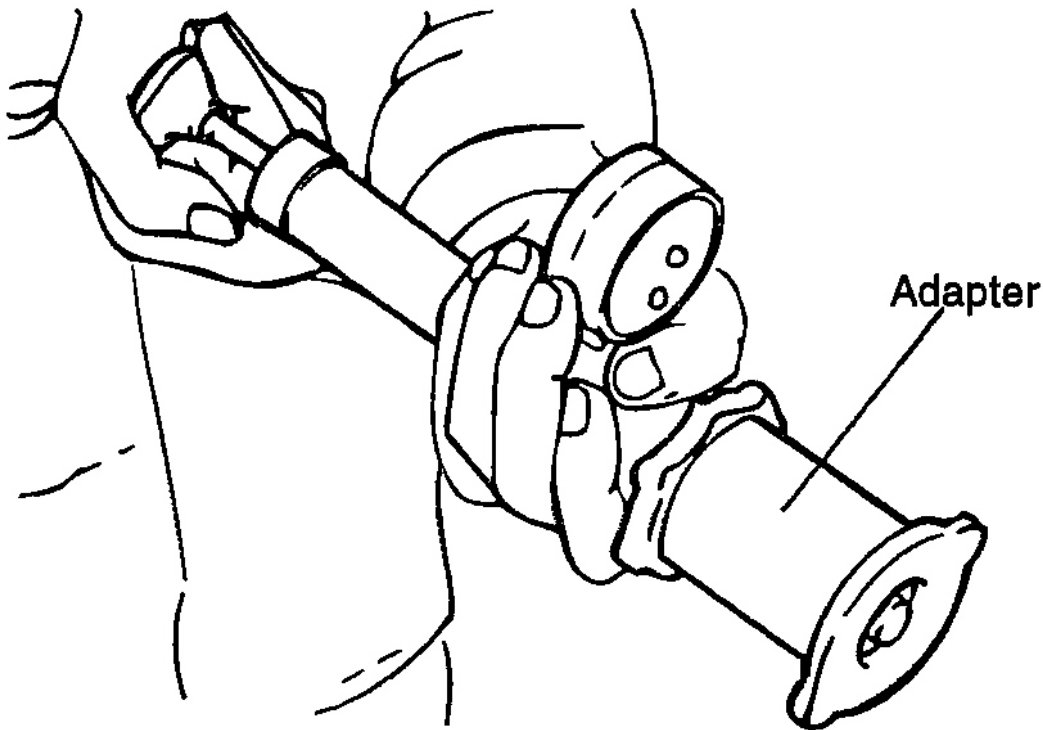


G00789955

**Fig. 11: Pressure Testing Radiator Cap**  
Courtesy of HYUNDAI MOTOR CO.

#### Specific Gravity Test

1. Measure the specific gravity of the coolant with a hydrometer.
2. Measure the coolant temperature and calculate the concentration from the relation between the specific gravity and temperature, using the following table for reference.

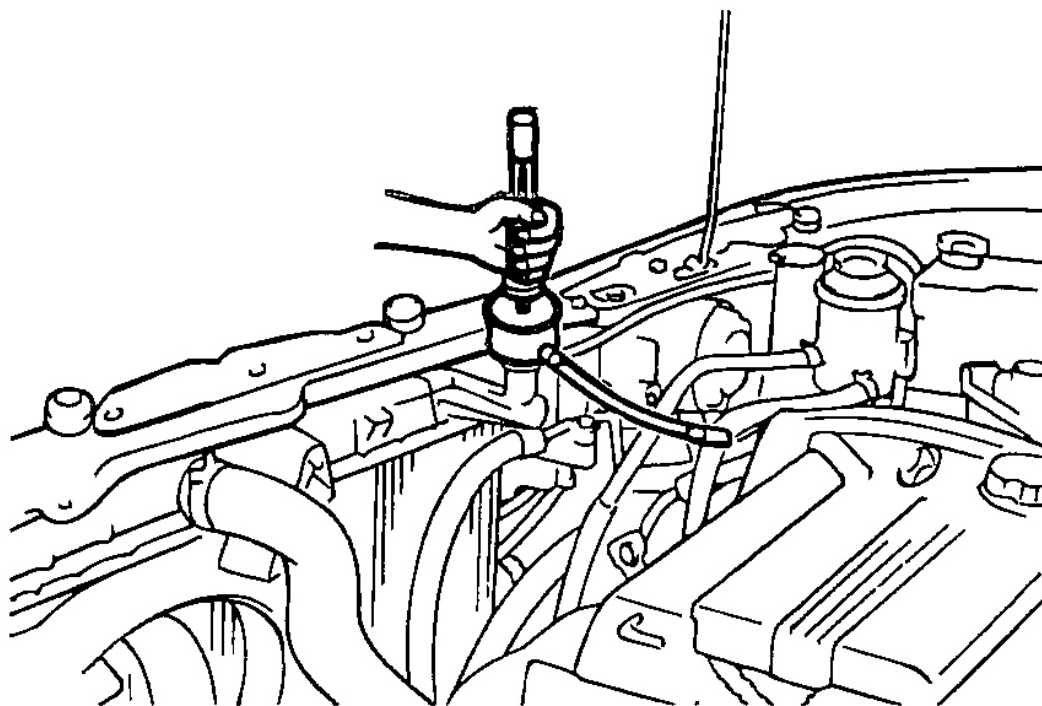

G00789956

**Fig. 12: Checking Coolant With Hydrometer**  
Courtesy of HYUNDAI MOTOR CO.

| Coolant temperature °C (°F) and specific gravity |         |         |          |          | Freezing temperature<br>°C (°F) | Safe operating temperature<br>°C (°F) | Coolant concentration<br>(Specific volume) |
|--------------------------------------------------|---------|---------|----------|----------|---------------------------------|---------------------------------------|--------------------------------------------|
| 10 (50)                                          | 20 (68) | 30 (86) | 40 (104) | 50 (122) |                                 |                                       |                                            |
| 1.054                                            | 1.050   | 1.046   | 1.042    | 1.036    | -16 (3.2)                       | -11 (12.2)                            | 30%                                        |
| 1.063                                            | 1.058   | 1.054   | 1.049    | 1.044    | -20 (-4)                        | -15 (5)                               | 35%                                        |
| 1.071                                            | 1.067   | 1.062   | 1.057    | 1.052    | -25 (-13)                       | -20 (-4)                              | 40%                                        |
| 1.079                                            | 1.074   | 1.069   | 1.064    | 1.058    | -30 (-22)                       | -25 (-13)                             | 45%                                        |
| 1.087                                            | 1.082   | 1.076   | 1.070    | 1.064    | -36 (-32.8)                     | -31 (-23.8)                           | 50%                                        |
| 1.095                                            | 1.090   | 1.084   | 1.077    | 1.070    | -42 (-44)                       | -37 (-35)                             | 55%                                        |
| 1.103                                            | 1.098   | 1.092   | 1.084    | 1.076    | -50 (-58)                       | -45 (-49)                             | 60%                                        |

G00789957

**Fig. 13: Coolant Concentration Table**  
Courtesy of HYUNDAI MOTOR CO.

**Example**

The safe operating temperature is -15°C (5°F) when the measured specific gravity is 1.058 at coolant temperature of 20°C (68°F)

**CAUTION:**

- If the concentration of the coolant is below 30%, its anti-corrosion properties will be adversely affected.
- If the concentration is above 60%, both the anti-freeze and engine cooling property will decrease, affecting the engine adversely. For these reasons, be sure to maintain the concentration level within the specified range.
- Do not mix types of anti-freeze.

| Antifreeze                        | Mixture ratio of anti freeze in coolant             |
|-----------------------------------|-----------------------------------------------------|
| ETHYLENE GLYCOL BASE FOR ALUMINUM | 50% [Except tropical areas]<br>40% [Tropical areas] |

G00789958


**Fig. 14: Recommended Coolant**  
Courtesy of HYUNDAI MOTOR CO.

**Checking Compression Pressure**

1. Before checking engine compression, check the engine oil level. Also check that the starter motor and battery are all in normal operating condition.
2. Start the engine and wait until the engine coolant temperature reaches 80 ~ 95°C (176 ~ 205°F).
3. Turn off the engine and disconnect the spark plug cables.
4. Remove the spark plugs.
5. Crank the engine to remove any foreign material in the cylinders.
6. Insert the compression gauge into the spark plug hole.
7. Depress the accelerator pedal to open the throttle fully.
8. Crank the engine and read the gauge.

Standard value : 1200 kpa (12.2 kg / cm<sup>2</sup> , 170 psi)



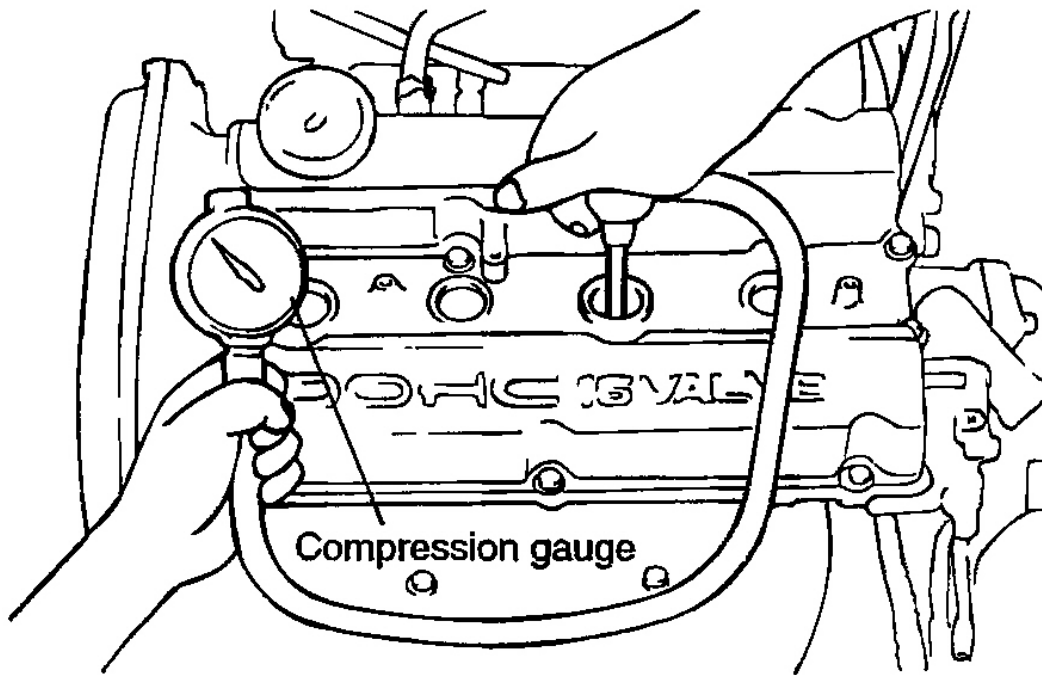

G00789959

**Fig. 15: Reading Compression Gauge**  
Courtesy of HYUNDAI MOTOR CO.

9. Repeat steps 6 to 8 for all cylinders, ensuring that the pressure difference for each of the cylinders is within the specified limit.

#### **Limit**

Max. 100 kpa (1.0 kg / cm<sup>2</sup> , 14 psi) between cylinder


10. If a cylinder's compression or pressure differential is outside the specification, add a small amount of oil through the spark plug hole, and repeat steps 6 to 9.
  1. If the addition of oil causes the compression to rise, it is likely that there may be wear between the piston ring and cylinder wall.
  2. If compression remains the same, valve seizure, poor valve seating or a compression leak from the cylinder head gasket are all possible causes.

#### **Tightening torque**

Spark plug : 20 ~ 30 Nm (200 ~ 300 kg.cm, 14 ~ 22 lb.ft)

#### **Adjusting Drive Belt Tension**

1. Check that the belts are not damaged and are properly placed for the pulley grooves.
2. Apply 100 N (22 lbs.) force to the back and midway portion of the belt between the pulleys as shown in the illustration and measure the amount of deflection with a tension gauge.

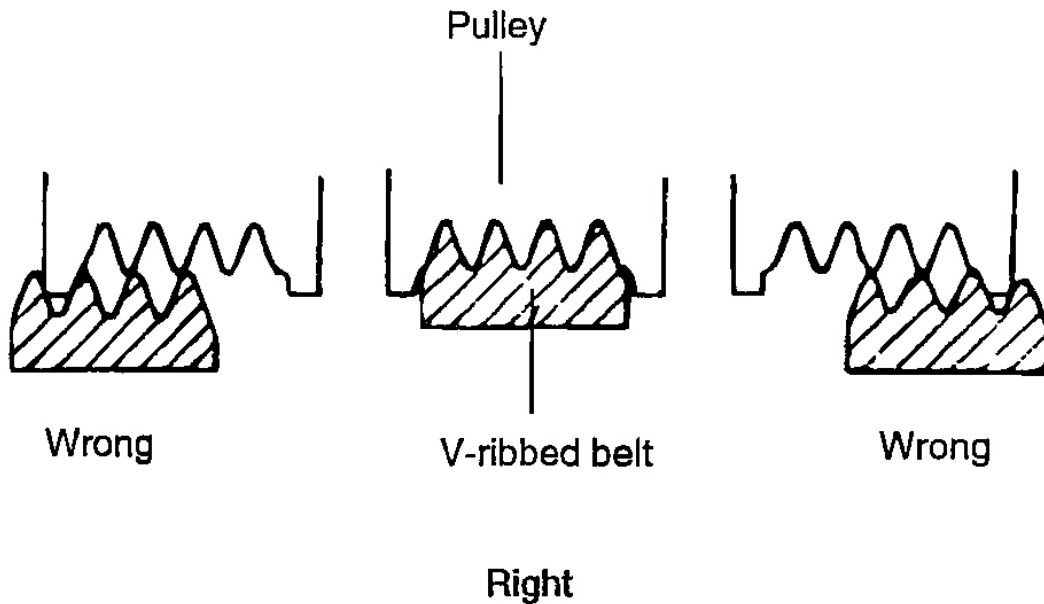

G00789960

**Fig. 16: Locating Belt On Pulley**

Courtesy of HYUNDAI MOTOR CO.

- CAUTION:**
1. When installing the V-ribbed belt, check that the V-ribs are properly aligned.
  2. If noise or slippage is detected, check the belt for wear, damage, or breakage on the pulley contact surface, and check the pulley for scoring. Also check the amount that the belt is deflected.

## 2002 Hyundai Santa Fe

2002-04 ENGINES 2.4L 4-Cylinder - Santa Fe


| Items               |                     | Inspection                    | Adjustment                   |                               |
|---------------------|---------------------|-------------------------------|------------------------------|-------------------------------|
|                     |                     |                               | New                          | Use                           |
| For alternator      | Deflection mm (in.) | 7.7 ~ 12.3<br>(0.303 ~ 0.484) | 6.3 ~ 7.3<br>(0.248 ~ 0.287) | 8.4 ~ 10.6<br>(0.330 ~ 0.417) |
|                     | Tension N (lb)      | 300 ~ 500<br>(67 ~ 112)       | 550 ~ 650<br>(124 ~ 146)     | 350 ~ 450<br>(79 ~ 101)       |
| For air conditioner | Deflection mm (in.) | 8<br>(0.31)                   | 5.0 ~ 5.5<br>(0.20 ~ 0.22)   | 6.0 ~ 7.0<br>(0.24 ~ 0.28)    |
|                     | Tension N (lb)      | 250 ~ 500<br>(56 ~ 112)       | 470 ~ 570<br>(106 ~ 128)     | 320 ~ 400<br>(72 ~ 90)        |
| For power steering  | Deflection mm (in.) | 6.0 ~ 9.0<br>(0.24 ~ 0.35)    | -                            | -                             |

G00789961

**Fig. 17: Standard Value Table**  
Courtesy of HYUNDAI MOTOR CO.

**NOTE:**

1. The belt tension must be measured half-way between the specified pulleys.
2. When a new belt is installed, adjust the tension to the central value of the standard range indicated under "New" in the above table. Let the engine idle for 5 minutes or more, and check the standard value indicated under "inspection".
3. When adjusting a belt which has been used, or a belt installed newly after 5 minutes or more of operation, refer to the standard value indicated under "Used" in Fig. 17.
4. Refer to the standard value indicated under "Inspection" for periodic inspections.

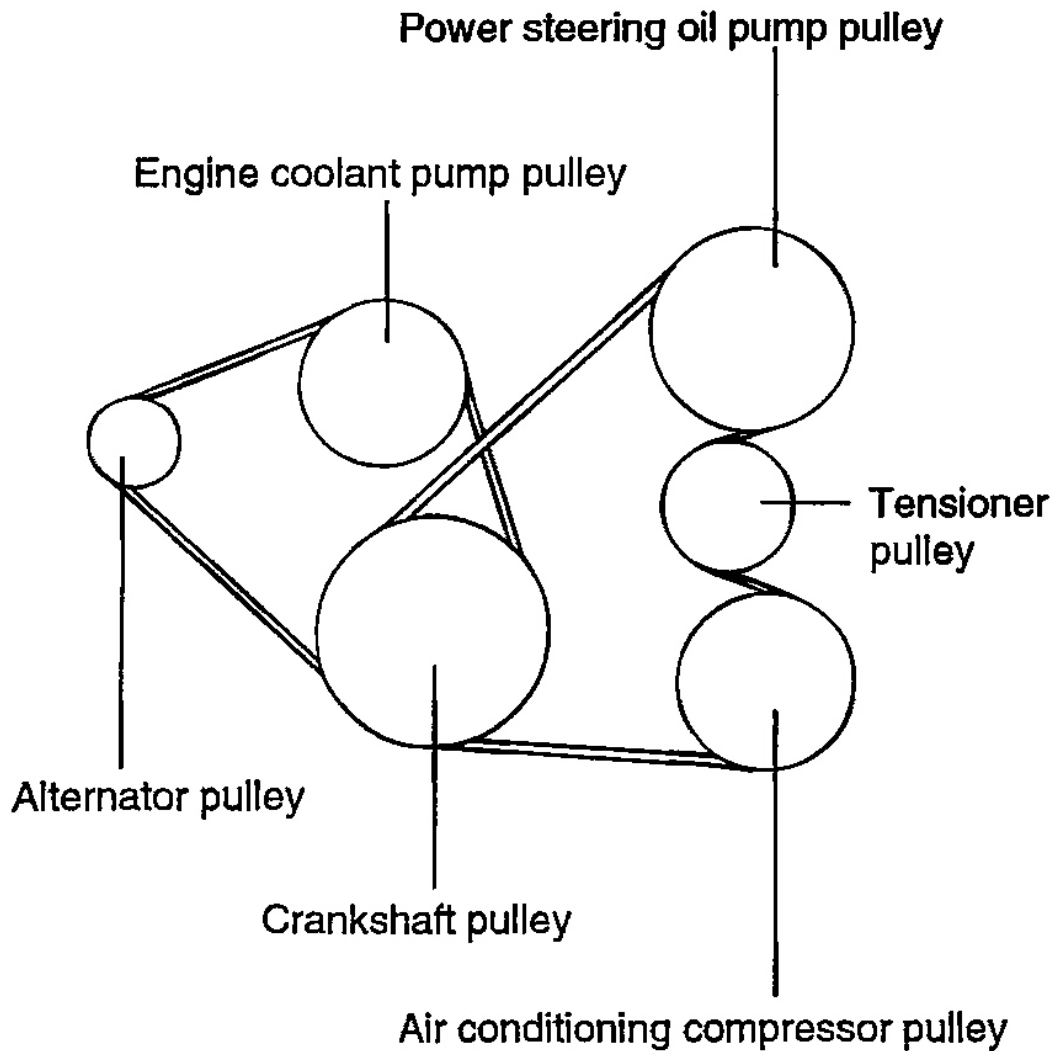


G00789962

**Fig. 18: Identifying Belts & Pulleys**  
Courtesy of HYUNDAI MOTOR CO.

**Type A Tension Gauge**

Do not let the dial section of the tension gauge contact other objects during measurement.

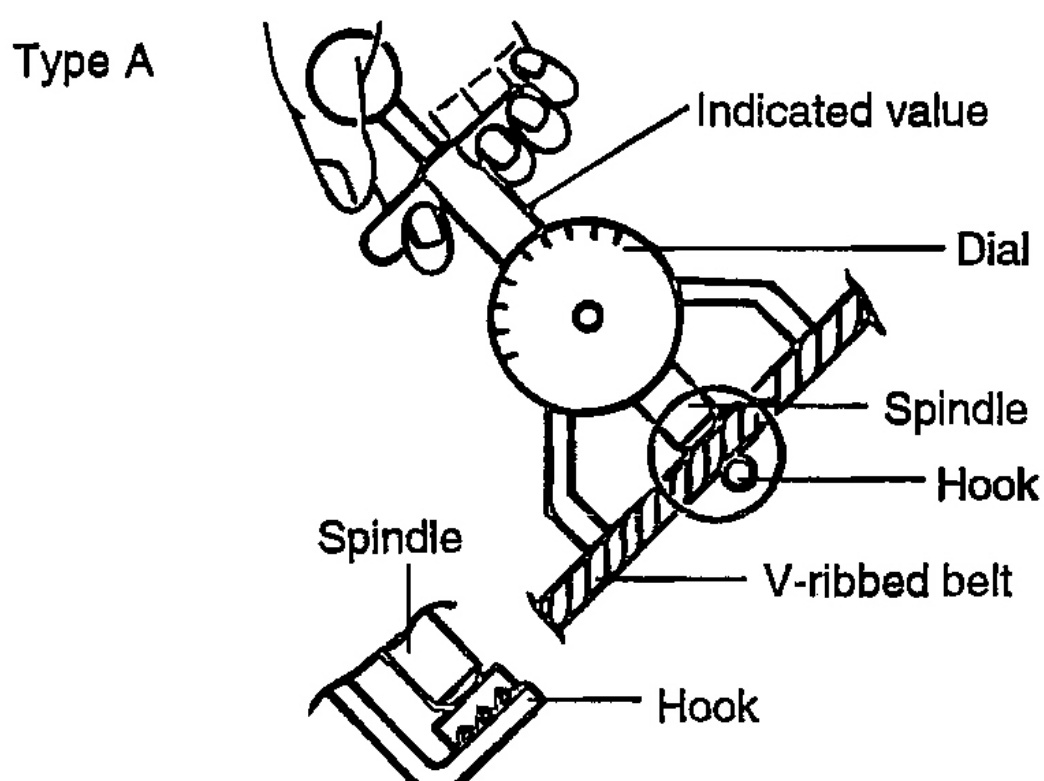


G00789963

**Fig. 19: Identifying Type A Tension Gauge**  
Courtesy of HYUNDAI MOTOR CO.

#### Type B Tension Gauge

1. When measuring, turn the reset button in the direction of the arrow and set the gauge needle to the RESET position.
2. If the tension gauge is removed from the belt, the needle will still indicate the tension. Read the tension value after removing the gauge.

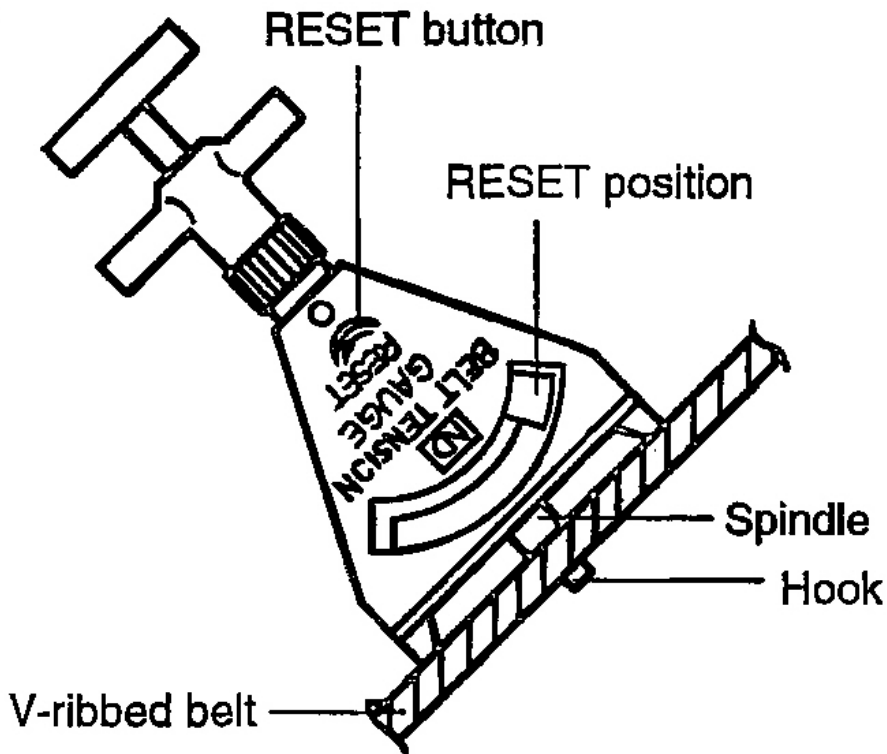**Type B**

G00789964

**Fig. 20: Identifying Type B Tension Gauge**  
Courtesy of HYUNDAI MOTOR CO.

**ADJUSTING THE ALTERNATOR BELT**

**CAUTION:** If the belt is too loose, it will cause noise or sudden wear.  
If the belt is too tight, the engine coolant pump bearing or the alternator can be damaged.

1. Loosen the alternator nut "A" and the tension adjuster lock bolt "B".
2. Using the tension adjuster bolt, adjust the belt tension to the specification.
3. Tighten the adjuster lock bolt "B".
4. Tighten the alternator nut "A".
5. Check the tension or the deflection of belt, and read just if necessary.


**Tightening torque**

Alternator nut A :

35 ~ 55 Nm (350 ~ 550 kg.cm, 25 ~ 40 lb.ft)

Adjuster lock bolt B :

20 ~ 25 Nm (200 ~ 250 kg.cm, 14 ~ 18 lb.ft)

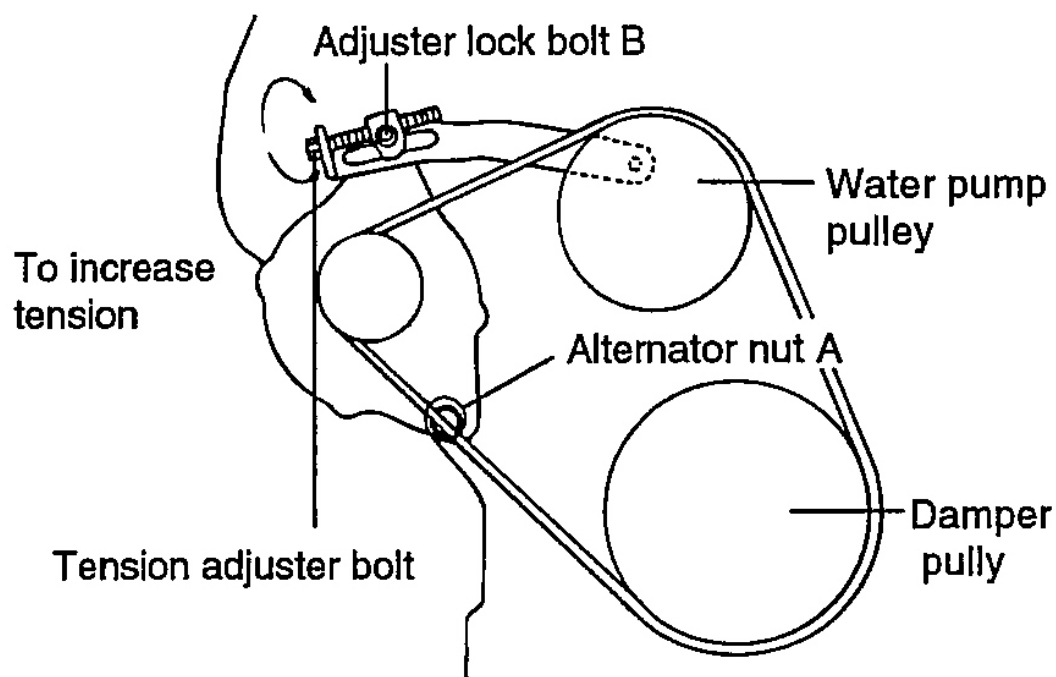


G00789965

**Fig. 21: Identifying Alternator Belt Tensioner Bolt**  
Courtesy of HYUNDAI MOTOR CO.

#### Adjusting Power Steering & Air Conditioner Belts

1. Loosen the tension pulley adjustment bolt A.
2. Adjust the belt deflection with adjustment bolt B.
3. Tighten bolt A.
4. Recheck the belt deflection and readjust, if necessary.

**NOTE:** Before rechecking, crank the engine one more revolution.

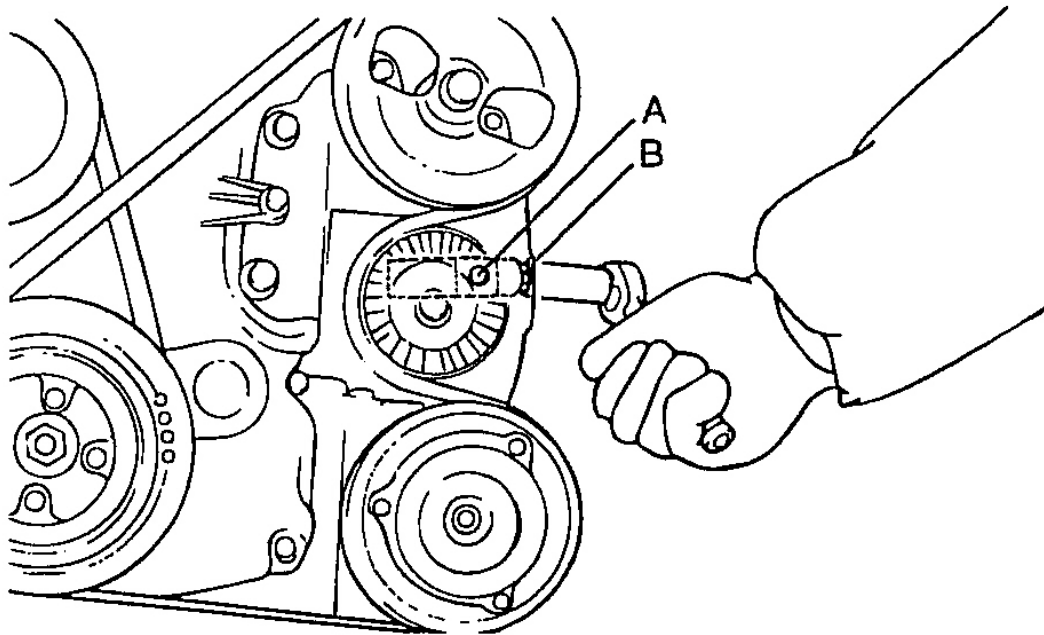

G00789966







**Fig. 22: Identifying Power Steering & Air Conditioner Belt Tensioner**  
Courtesy of HYUNDAI MOTOR CO.

#### **SPECIAL TOOLS**



## 2002 Hyundai Santa Fe

2002-04 ENGINES 2.4L 4-Cylinder - Santa Fe





| Tool (Number and name)                                   | Illustration                                                                        | Use                                                                                                |
|----------------------------------------------------------|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|
| Counter balance shaft bearing puller<br>(09212-32000)    |    | Removal of counter balance shaft front bearing                                                     |
| Counter balance shaft bearing puller<br>(09212-32100)    |    | Removal of counter balance shaft rear bearing (use with 09212-32300)                               |
| Counter balance shaft bearing installer<br>(09212-32200) |    | Installation of counter balance shaft front and rear bearing (use with 09212-32300)                |
| Guide plate<br>(09212-32300)                             |  | Removal and installation of counter balance shaft rear bearing (use with 09212-32100, 09212-32200) |
| Plug cap wrench<br>(09213-33000)                         |  | Removal and installation of front case cap plug                                                    |
| Crankshaft front oil seal installer<br>(09214-32000)     |  | Installation of the crankshaft front oil seal (use with 09214-32100)                               |

G00789967

**Fig. 23: Identifying Special Tools (1 Of 3)**  
 Courtesy of HYUNDAI MOTOR CO.

## 2002 Hyundai Santa Fe

2002-04 ENGINES 2.4L 4-Cylinder - Santa Fe


| Tool (Number and name)                                                                         | Illustration                                                                        | Use                                                                           |
|------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------|
| Crankshaft front oil seal guide<br>(09214-32100)                                               |    | Installation of the crankshaft front oil seal (use with 09214-32000)          |
| Camshaft oil seal installer<br>(09221-21000)                                                   |    | Installation of the camshaft oil seal (use with 09221-21100)                  |
| Camshaft oil seal guide<br>(09221-21100)                                                       |    | Used as a guide when pressing in the camshaft oil seal (use with 09221-21000) |
| Valve guide installer<br>(09221-3F000 A/B)                                                     |  | Removal and installation of valve guides                                      |
| Valve spring compressor<br>(09222-28000)<br>Valve spring compressor<br>holder<br>(09222-28100) |  | Removal and installation of inlet and exhaust valves                          |

G00789968

**Fig. 24: Identifying Special Tools (2 Of 3)**  
Courtesy of HYUNDAI MOTOR CO.

## 2002 Hyundai Santa Fe

2002-04 ENGINES 2.4L 4-Cylinder - Santa Fe

| Tool (Number and name)                                 | Illustration                                                                      | Use                                                                                                                                                  |
|--------------------------------------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| Valve stem oil seal install<br>(09222-28200)           |  | Installation of valve stem oil seals                                                                                                                 |
| Crankshaft rear oil seal<br>installer<br>(09231-21000) |  | <ol style="list-style-type: none"><li>1. Installation of the engine rear oil seal.</li><li>2. Installation of the crankshaft rear oil seal</li></ol> |

G00789969

**Fig. 25: Identifying Special Tools (3 Of 3)**  
Courtesy of HYUNDAI MOTOR CO.

### TROUBLESHOOTING

## 2002 Hyundai Santa Fe

2002-04 ENGINES 2.4L 4-Cylinder - Santa Fe

| Symptom                               | Probable cause                                                                                                                                                                                                                                                       | Remedy                                                                                                                               |
|---------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| Low compression                       | Damaged cylinder head gasket<br>Worn or damaged piston rings<br>Worn piston or cylinder<br><br>Worn or damaged valve seat                                                                                                                                            | Replace gasket<br>Replace rings<br>Repair or replace piston and/or cylinder block<br>Repair or replace valve and/or seat ring        |
| Oil pressure drop                     | Low engine oil level<br>Faulty oil pressure switch<br>Clogged oil filter<br>Worn oil pump gears or cover<br>Thin or diluted engine oil<br>Oil relief valve stuck (open)<br>Excessive bearing clearance                                                               | Check engine oil level<br>Replace<br>Replace<br>Replace<br>Change and find out cause<br>Repair<br>Replace                            |
| High oil pressure                     | Oil relief valve stuck (closed)                                                                                                                                                                                                                                      | Repair                                                                                                                               |
| Excessive engine vibration            | Loose engine roll stopper (front, rear)<br>Loose transaxle mount bracket<br>Loose engine mount bracket<br>Loose center member<br>Broken transaxle mount insulator<br>Broken engine mount insulator<br>Broken engine roll stopper insulator                           | Re-tighten<br>Re-tighten<br>Re-tighten<br>Re-tighten<br>Replace<br>Replace<br>Replace                                                |
| Noisy valves                          | Thin or diluted engine oil (low oil pressure)<br>Worn or damaged valve stem or valve guide                                                                                                                                                                           | Change<br>Replace                                                                                                                    |
| Connecting rod and/main bearing noise | Insufficient oil supply<br>Thin or diluted engine oil<br>Excessive bearing clearance                                                                                                                                                                                 | Check engine oil level<br>Change and find out cause<br>Replace                                                                       |
| Timing belt noise                     | Incorrect belt tension (Auto tensioner, timing belt)                                                                                                                                                                                                                 | Adjust belt tension                                                                                                                  |
| Low coolant level                     | Leakage of coolant<br>Damaged radiator core joint<br>Corrod or cracked hoses (radiator hose, heater hose, etc.)                                                                                                                                                      | Replace<br>Replace                                                                                                                   |
|                                       | Faulty radiator cap valve or setting of spring<br>Faulty thermostat<br>Faulty engine coolant pump                                                                                                                                                                    | Replace<br>Replace<br>Replace                                                                                                        |
| Clogged radiator                      | Foreign material in coolant                                                                                                                                                                                                                                          | Replace                                                                                                                              |
| Abnormally high coolant temperature   | Faulty thermostat<br>Faulty radiator cap<br>Restricted of flow in cooling system<br>Loose or missing drive belt<br>Faulty engine coolant pump<br>Faulty temperature sensor wiring<br>Faulty electric fan<br>Faulty thermo-sensor on radiator<br>Insufficient coolant | Replace<br>Replace<br>Replace<br>Adjust or replace<br>Replace<br>Repair or replace<br>Repair or replace<br>Replace<br>Refill coolant |
| Abnormally low coolant temperature    | Faulty thermostat<br>Faulty temperature sensor wiring                                                                                                                                                                                                                | Replace<br>Repair or replace                                                                                                         |

G00789970

**Fig. 26: Trouble Shooting Table (1 Of 2)**  
**Courtesy of HYUNDAI MOTOR CO.**

## 2002 Hyundai Santa Fe

2002-04 ENGINES 2.4L 4-Cylinder - Santa Fe

| Symptom                         | Probable cause                                                                                                                | Remedy                                             |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------|
| Leakage from oil cooling system | Loose connections<br>Broken pipe or muffler                                                                                   | Retighten<br>Repair or replace                     |
| Exhaust gas leakage             | Loose connections<br>Broken pipe or muffler                                                                                   | Retighten<br>Repair or replace                     |
| Abnormal noise                  | Detached baffle plate in muffler<br>Broken rubber hanger<br>Pipe or muffler contacting vehicle body<br>Broken pipe or muffler | Replace<br>Replace<br>Correct<br>Repair or replace |


G00789971

**Fig. 27: Trouble Shooting Table (2 Of 2)**  
Courtesy of HYUNDAI MOTOR CO.

## ENGINE BLOCK

### ENGINE BLOCK

#### Components

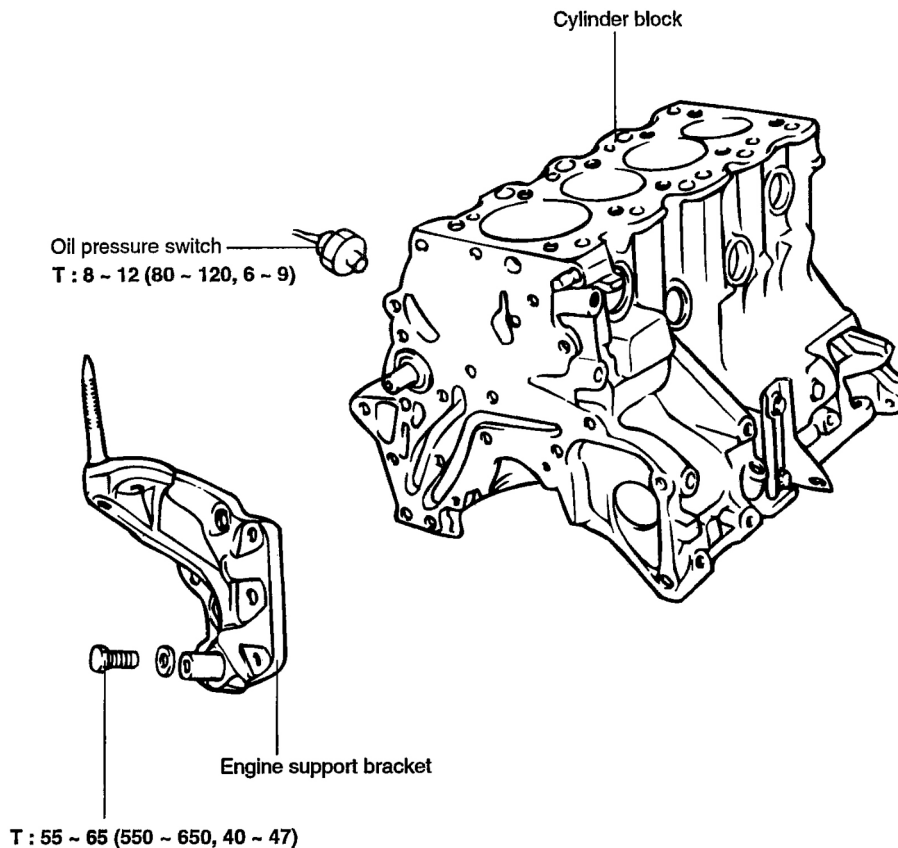

**TORQUE : Nm (kg-cm, lb-ft)**

G00789972

**Fig. 28: Engine Block Components**  
Courtesy of HYUNDAI MOTOR CO.

### Disassembly

Remove the following :

- Cylinder head. See CYLINDER HEAD.
- Timing belt. See TIMING BELT.
- Front case. See FRONT CASE.
- Flywheel.
- Pistons. See PISTON.
- Crankshaft. See CRANKSHAFT.

### Inspection


1. Check the cylinder block for scores, rust and corrosion. Also check for cracks or any other defects. Replace the block if defective.

2. Measure the cylinder bore with a cylinder gauge at the three levels indicated and in the directions of A and B.

Level 1: No. 1 piston ring position at TDC

Level 2 : Center of cylinder

Level 3 : Bottom of cylinder

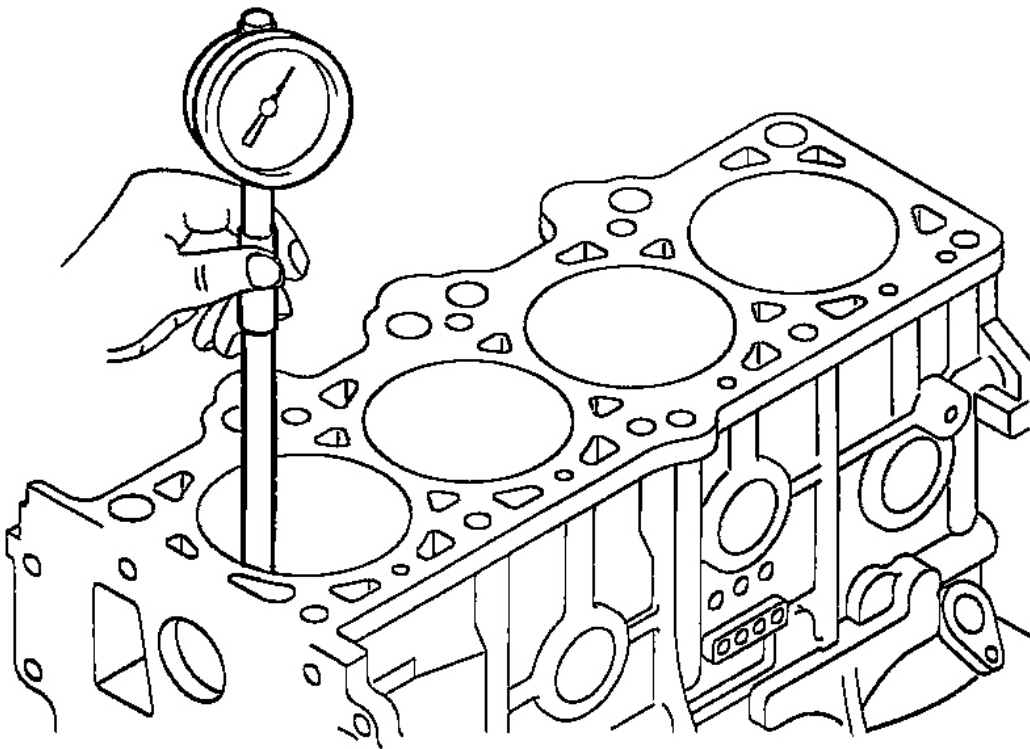

**G00789973**

**Fig. 29: Measuring The Cylinder Bore**  
Courtesy of HYUNDAI MOTOR CO.

3. If the cylinder bores show more than specified out-of-round or taper, or if the cylinder walls are badly scuffed or scored, the cylinder block should be rebored and honed. New oversize piston and rings should be installed.

**Standard value**

Cylinder bore :  $86.5 + 0.03$  mm ( $3.41 + 0.0012$  in.)

Out - of - round and taper of cylinder bore :

Max. 0.01 mm (0.0004 in.)

4. If a ridge exists at the top of the cylinder, cut it away with a ridge reamer.

**Piston service size and mark mm (in.)**


Identification Mark : 25

Size : 0.25 (0.010) O.S.

5. To rebore the cylinder bore to oversize, maintain the specified clearance between the oversize piston and the bore, and make sure that all pistons used are of the same oversize. The standard measurement of the piston outside diameter is taken at a level 16 mm (0.63 in.) from the center of pin hole and across the thrust faces.

**Piston - to - cylinder clearance**

0.02 ~ 0.04 mm (0.0008 ~ 0.0016 in)

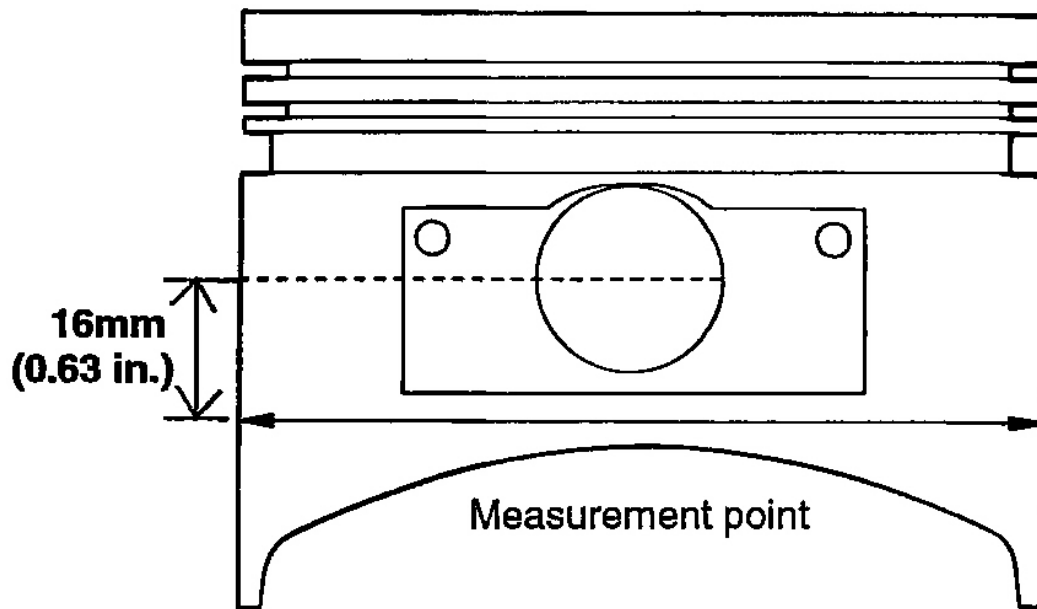

G00789974

**Fig. 30: Measuring Point On Piston Skirt**  
Courtesy of HYUNDAI MOTOR CO.



6. Check for damage and cracks.
7. Check the top surface of the cylinder block for flatness. If the top surface exceeds limits, surface to minimum limit or replace.


**Standard value**

Flatness of cylinder block : Max. 0.05mm (0.0020 in.)

**Service limit**

Flatness of cylinder block: 0.1 mm (0.0039 in.)

**NOTE:** When the cylinder head is assembled, grinding less than 0.2 mm (0.008 in.) is permissible.

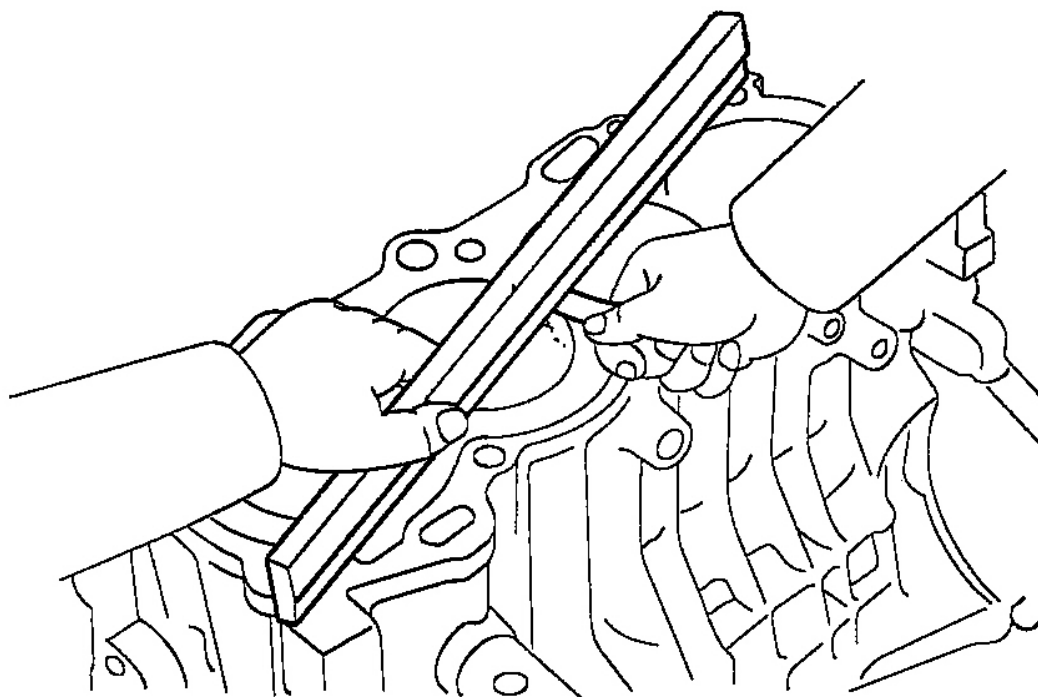

G00789975

**Fig. 31: Checking Top Surface Of Cylinder Block**  
Courtesy of HYUNDAI MOTOR CO.

**Boring Cylinder**

1. Oversize pistons should be selected according to the largest cylinder bore.

Identification Mark : 25

Size : 0.25 mm (0.010 in.) O.S.

**NOTE:**        **The size of a piston is stamped on top of the piston.**

2. Measure the outside diameter of the piston to be used.
3. On the basis of the measured O.D., calculate the new bore size.

New bore size = Piston O.D + 0.02 to 0.04 mm (0.0008 to 0.0016 in.) (clearance between piston and cylinder) - 0.02 mm (0.0008 in.) (honing margin.)

4. Bore each of cylinders to the calculated size.

**NOTE:**        **To prevent distortion that may result from temperature rise during honing, bore the cylinders, holes in the firing order sequence.**

5. Hone the cylinders, finishing them to the proper dimension (piston outside diameter + gap with cylinder).
6. Verify the clearance between the piston and cylinder.

**NOTE:**        **When boring cylinders, finish all four cylinders to the same oversize. Do not bore only one cylinder to the oversize.**


### Reassembly

Install the following parts by referring to their respective paragraphs.

1. Crankshaft
2. Flywheel
3. Piston
4. Cylinder head
5. Timing belt train
6. Front case

### ENGINE MOUNTS

#### Components

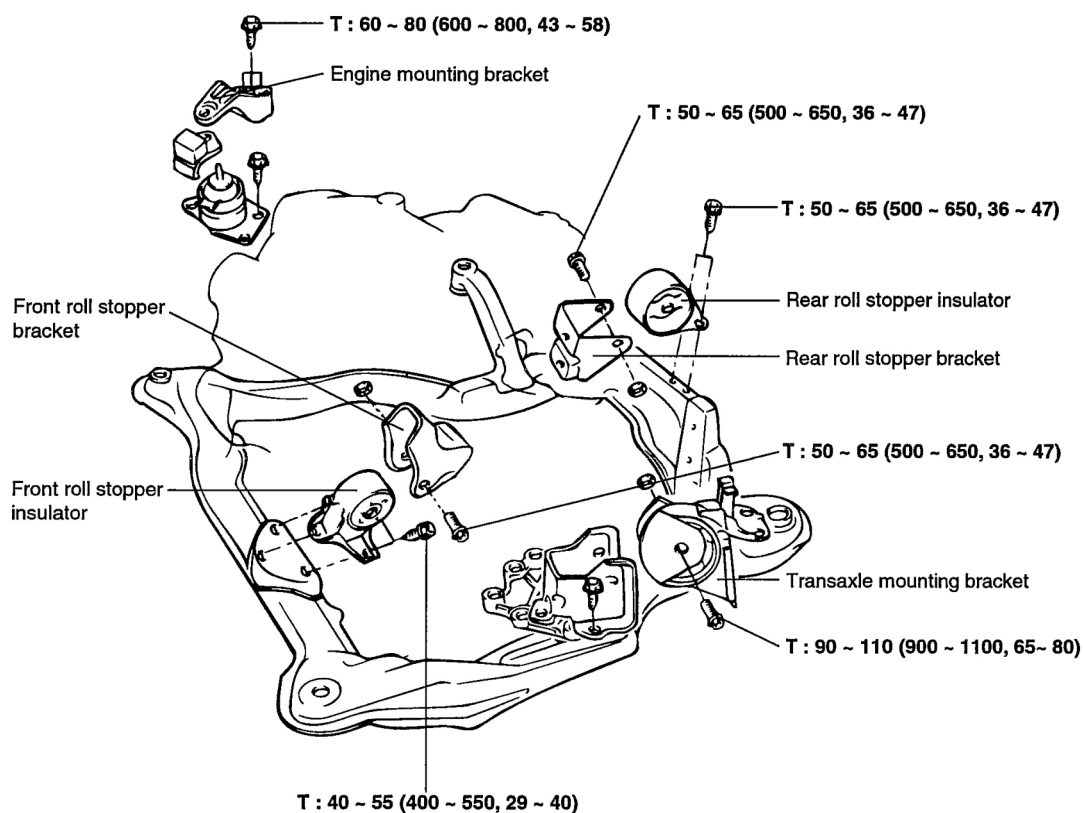


**TORQUE : Nm (kg.cm, lb-ft)**

G00789976

**Fig. 32: Engine Mount Components**  
Courtesy of HYUNDAI MOTOR CO.

### Removal

Attach a chain or cable to the engine hooks and lift enough so that there is no pressure on the motor mounts.

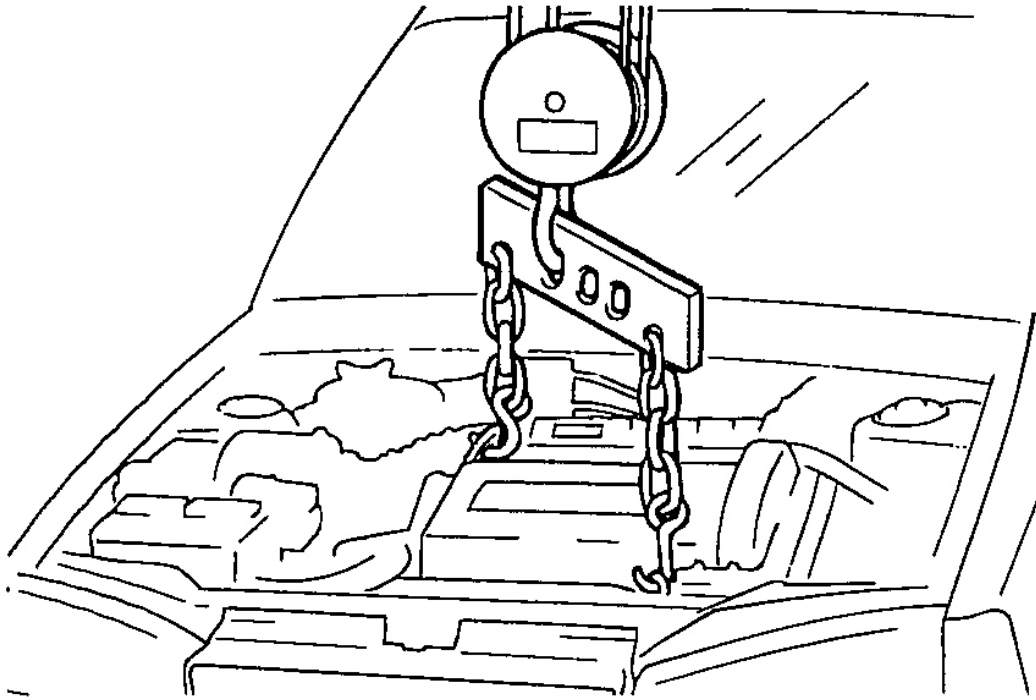


G00789977

**Fig. 33: Lifting Engine**  
Courtesy of HYUNDAI MOTOR CO.

**Engine Mounting**

1. Remove the engine mounting insulator bolts.
2. Remove the engine mounting bracket from the engine.

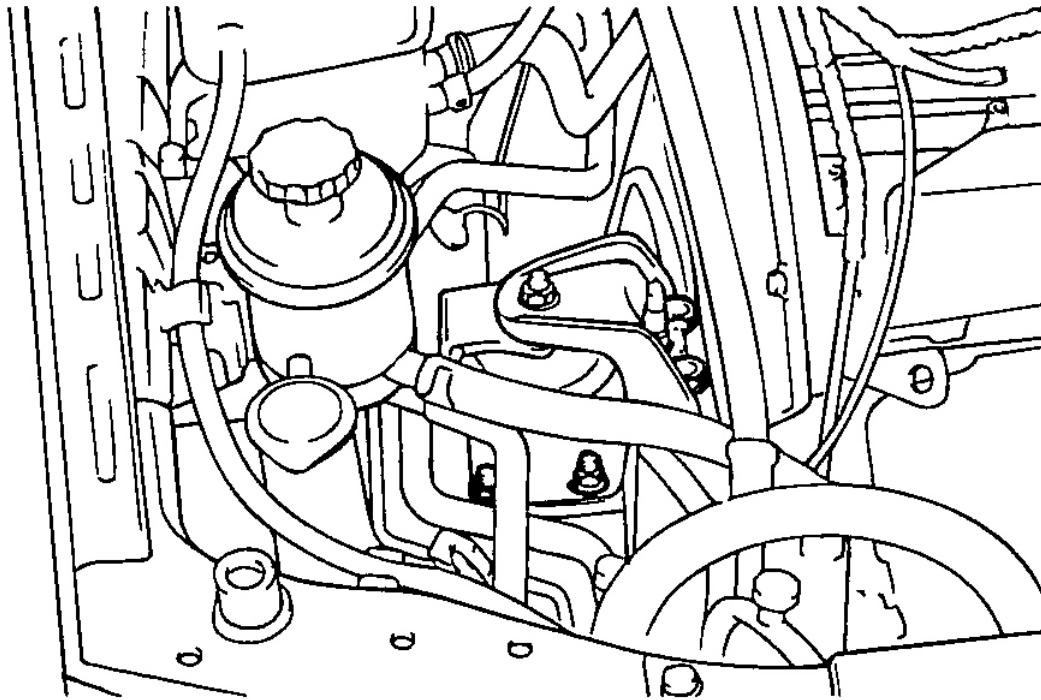


G00789978

**Fig. 34: Identifying Engine Mounting Bracket**  
Courtesy of HYUNDAI MOTOR CO.

**Transaxle Mounting**

1. Remove the transaxle mounting insulator bolts.
2. Remove the transaxle mounting bracket from the transaxle.

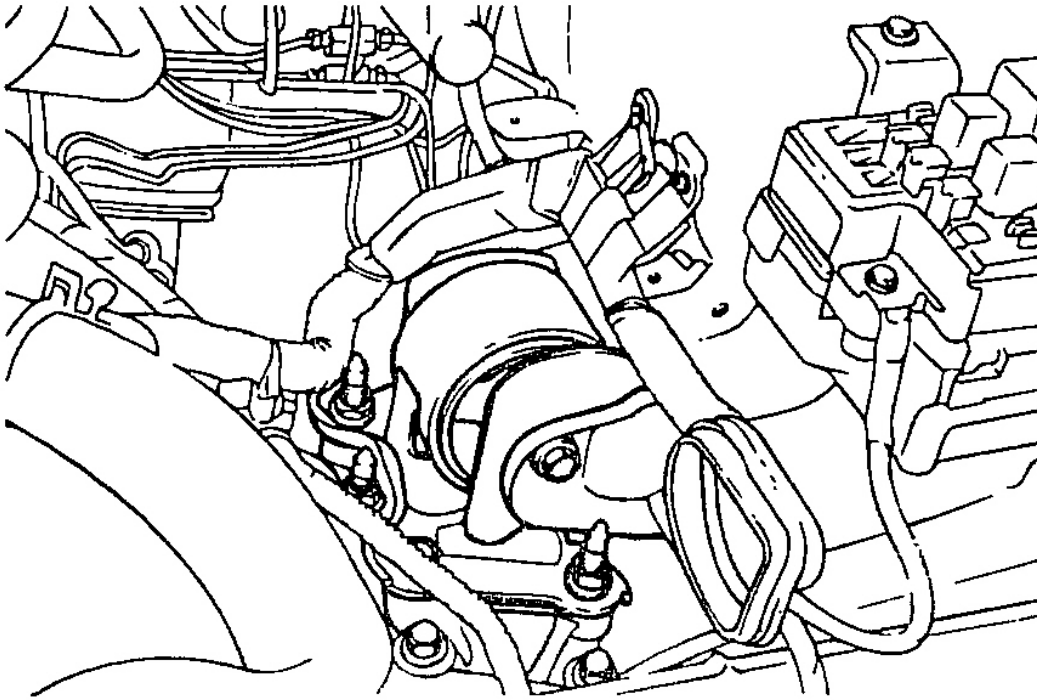


G00789979

**Fig. 35: Identifying Transaxle Bracket**  
Courtesy of HYUNDAI MOTOR CO.

**Front Roll Stopper**

Remove the front roll stopper bracket from the sub-frame.

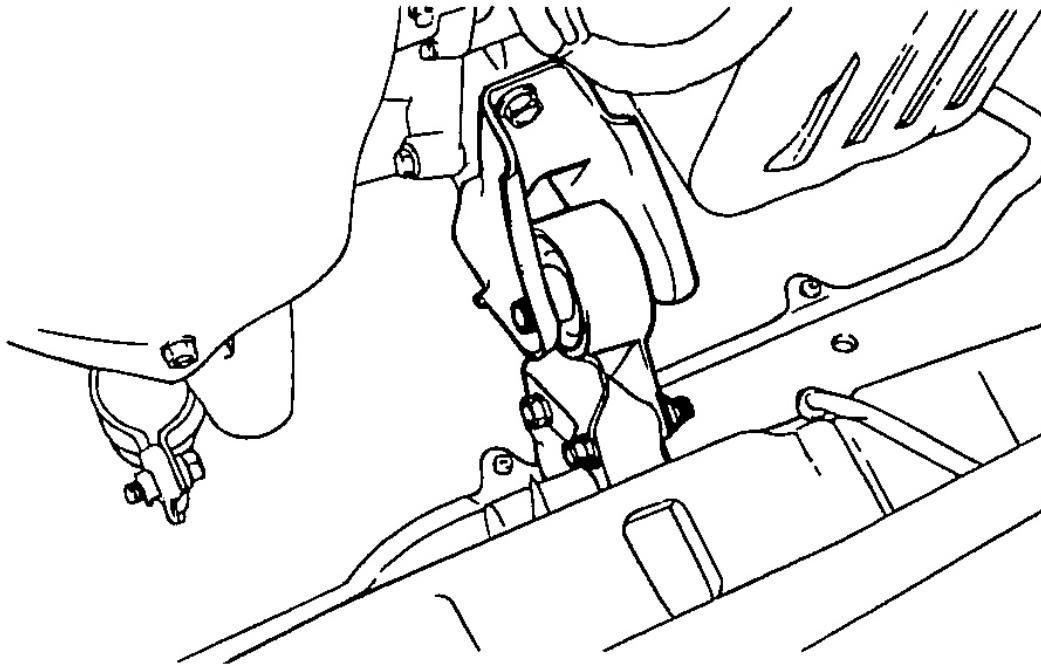


G00789980

**Fig. 36: Identifying Front Roller Stopper Bracket**  
Courtesy of HYUNDAI MOTOR CO.

**Rear Roll Stopper**

1. Remove the bolt from the rear roll stopper.
2. Remove the rear roll stopper from the subframe.

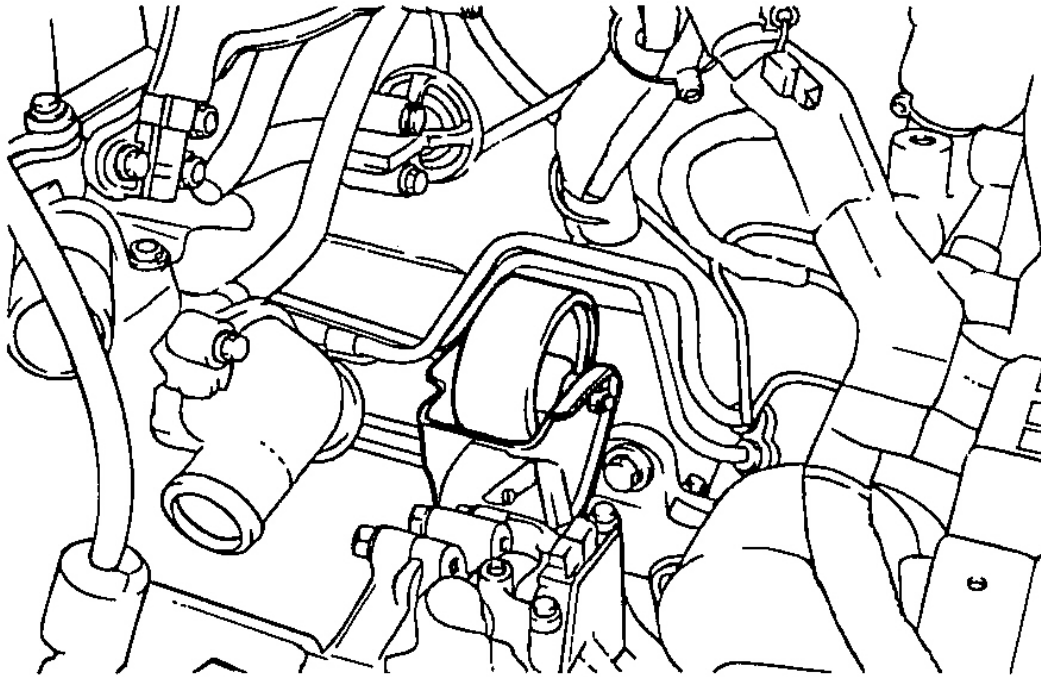


G00789981

**Fig. 37: Identifying Rear Roller Stopper Bracket**  
Courtesy of HYUNDAI MOTOR CO.


**Inspection Items**




**Transaxle mount**

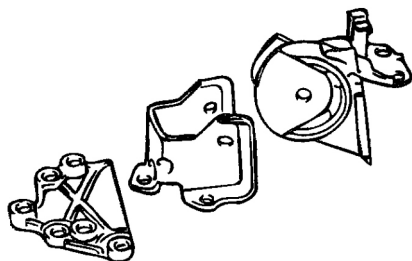


**Engine mount**

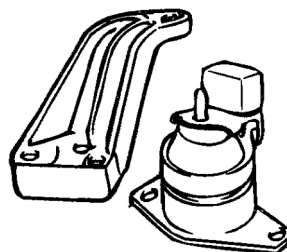

**Front roll stopper assembly**

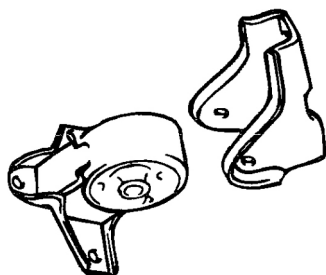

**Rear roll stopper assembly**

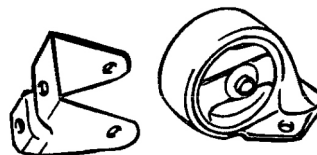


G00789982

**Fig. 38: View Of Inspection Items**  
Courtesy of HYUNDAI MOTOR CO.

## ENGINE AND TRANSAXLE ASSEMBLY


### Removal

1. Remove the battery.
2. Detach the air cleaner.

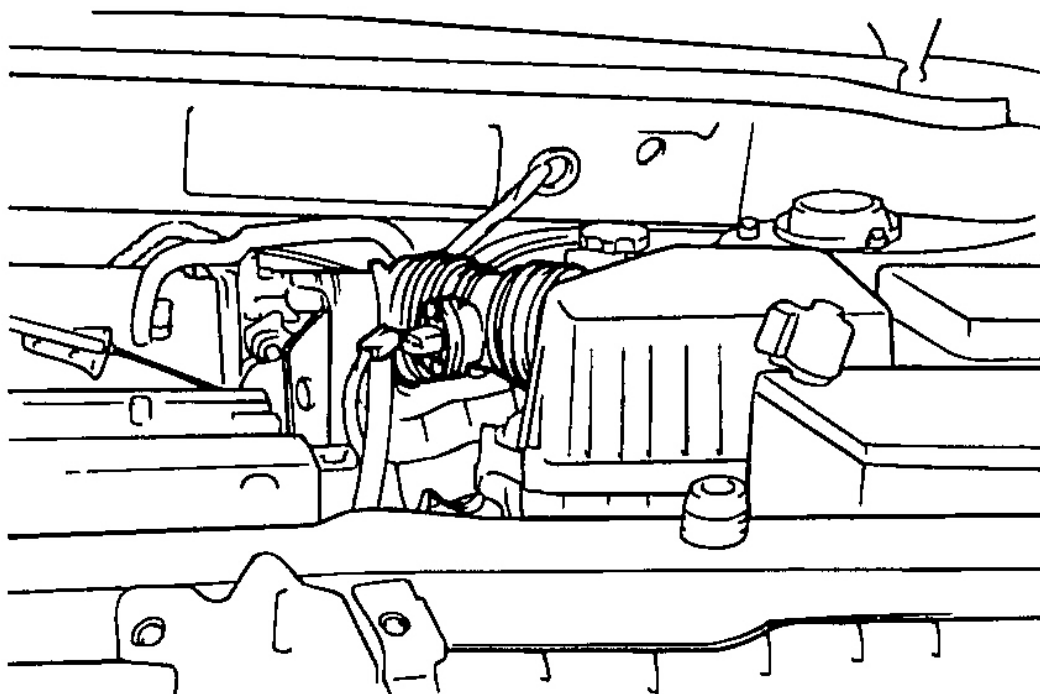**G00789983**


**Fig. 39: View Of Air Cleaner**  
**Courtesy of HYUNDAI MOTOR CO.**

3. Disconnect the engine harness connectors.
  1. Engine wiring connectors (alternator, starter, etc.)
  2. TPS connector
  3. Power steering switch connector, oil pressure gauge connector.
  4. Back up lamp switch connector.
  5. A/T solenoid, inhibitor switch connector.
  6. Coolant temperature sensor.
  7. Ignition coil, power TR connector.
  8. Idle speed control valve (ISC) connector.
  9. MAP and ATS connectors.
  10. Oxygen sensor connector.

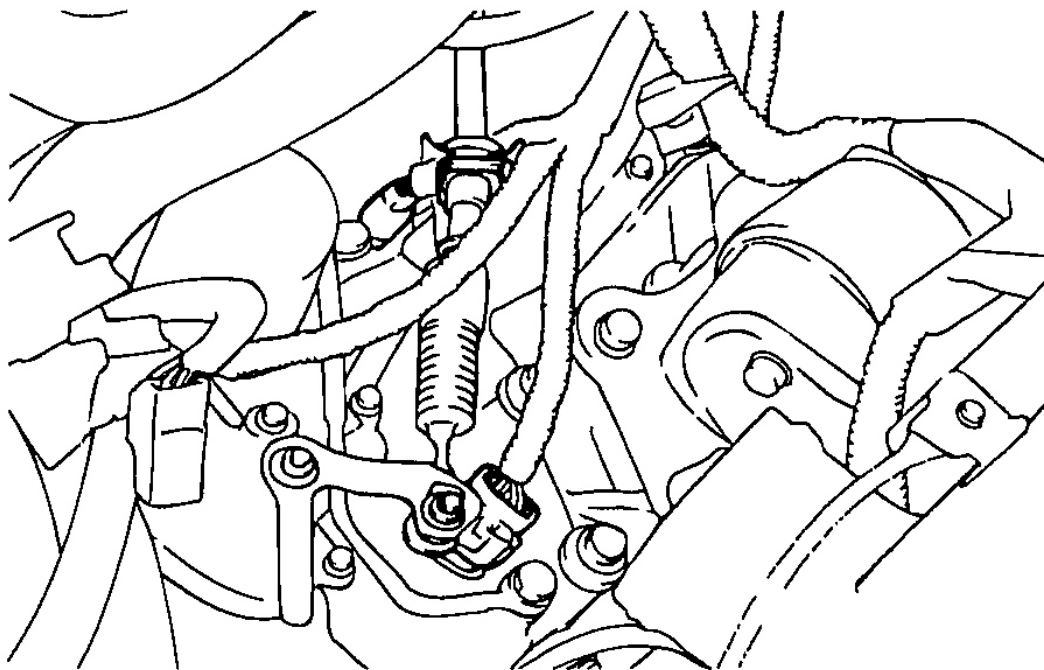

G00789984

**Fig. 40: View Transmission Range Sensor**  
Courtesy of HYUNDAI MOTOR CO.

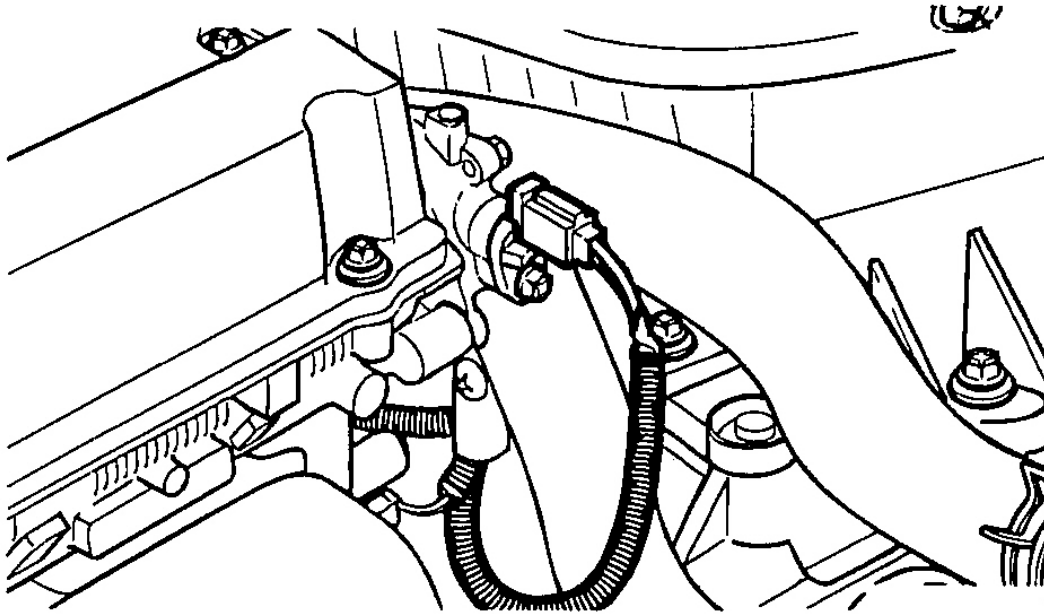

G00789985


**Fig. 41: View Engine Coolant Temperature Sensor**  
Courtesy of HYUNDAI MOTOR CO.

4. Drain the engine coolant.
5. For a vehicle with automatic transaxles, disconnect the transaxle oil cooler hoses.

**NOTE:** When disconnecting hoses, make identification marks to avoid making any mistake when installing them again.

**CAUTION:** Be careful not to spill any of oil or fluid out of the hoses. Plug the openings to prevent the entry of foreign material.


6. Disconnect the radiator upper and lower hoses on the engine side then remove the radiator assembly.

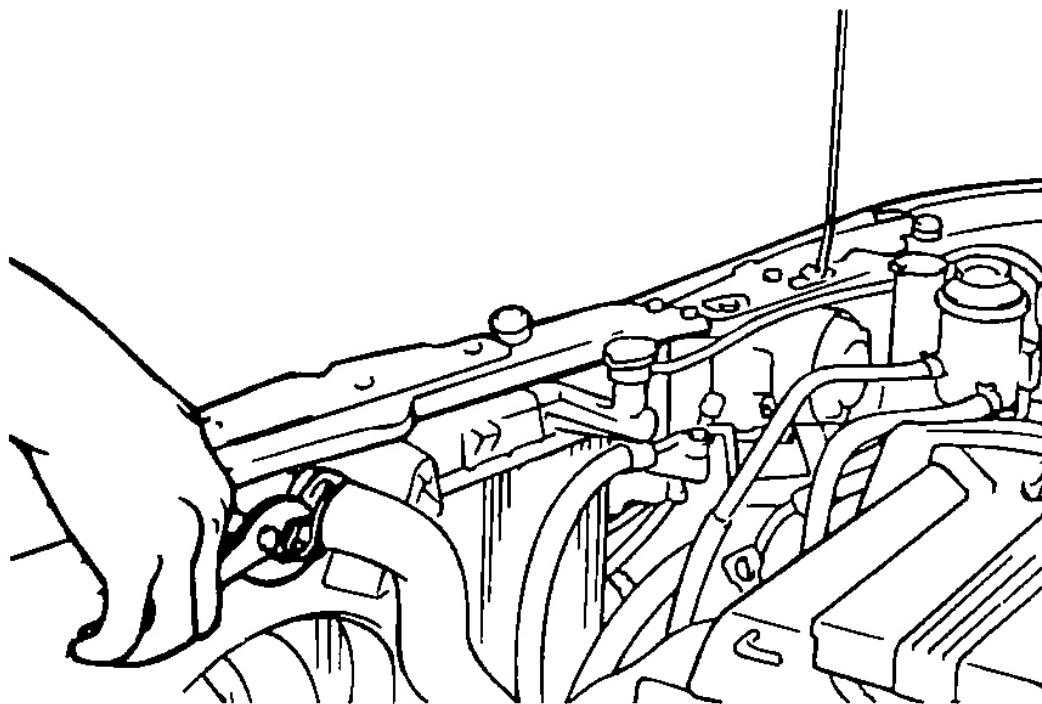

G00789986

**Fig. 42: Removing Upper Radiator Hose**  
Courtesy of HYUNDAI MOTOR CO.


7. Disconnect the engine ground.
8. Disconnect the brake booster vacuum hose.

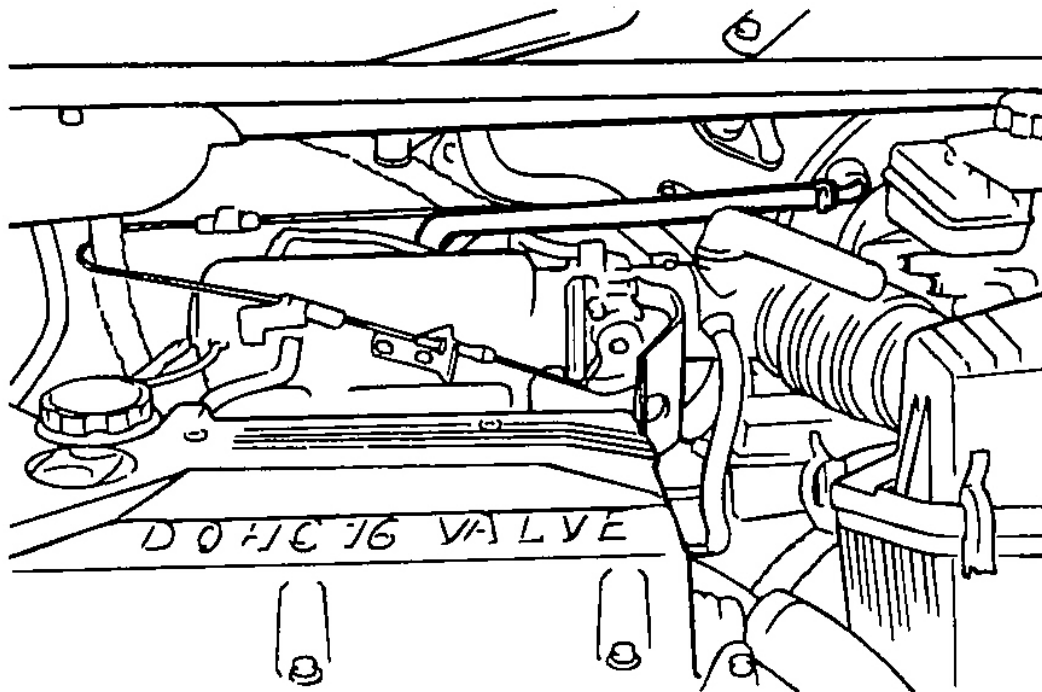

G00789987

**Fig. 43: Identifying Brake Booster Vacuum Hose**  
Courtesy of HYUNDAI MOTOR CO.


9. Disconnect the heater hoses (inlet and outlet) on the engine side.
10. Disconnect the accelerator cable at the engine side.

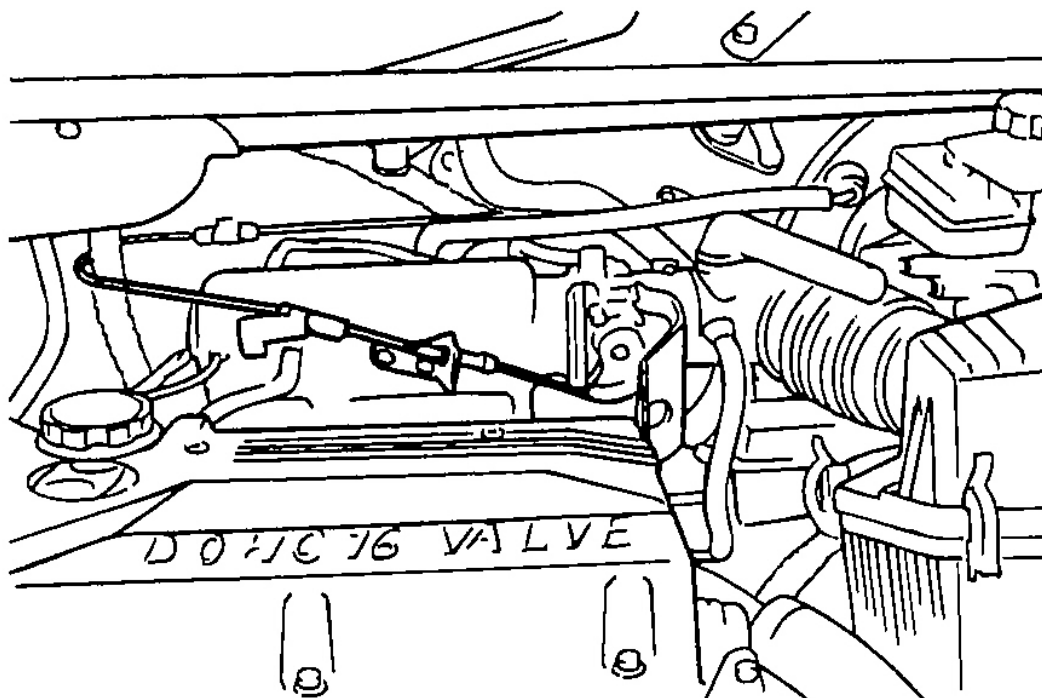

G00789988

**Fig. 44: Identifying Accelerator Cable**  
Courtesy of HYUNDAI MOTOR CO.

11. Using a special tool, remove the main fuel line at the delivery pipe (supply/return).
12. Disconnect the speedometer cable from the transaxle.
13. Disconnect the clutch cable or control cable from the transaxle.

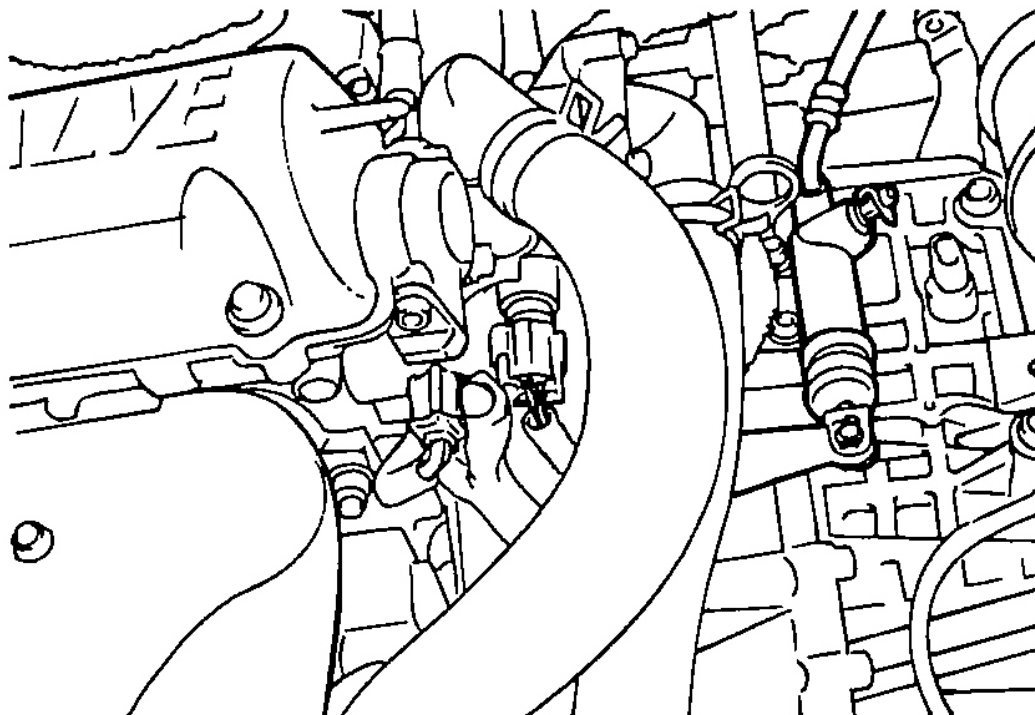


G00789989

**Fig. 45: Identifying Clutch Cable Or Control Cable**  
Courtesy of HYUNDAI MOTOR CO.

14. Disconnect the power steering suction hose and return hose from the pump.



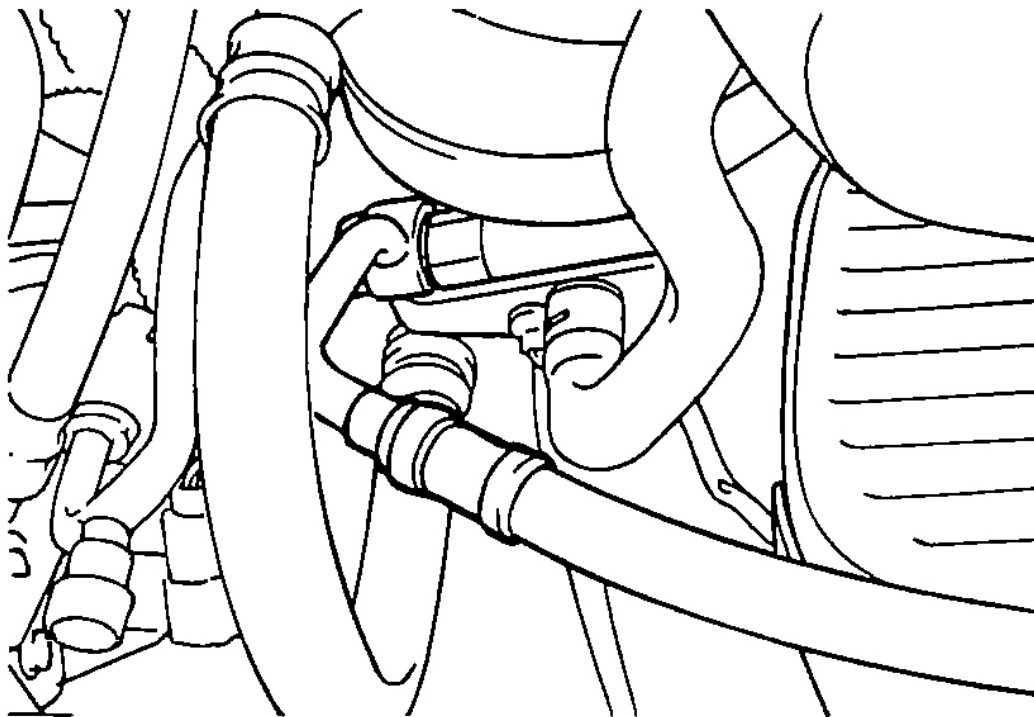


G00789990

**Fig. 46: Identifying Power Steering Hoses**  
Courtesy of HYUNDAI MOTOR CO.

15. Detach the steering dust cover in the engine compartment and then disconnect the gear box universal joint bolt.


**NOTE:**        **Make sure to make identification marks between the universal joint and the gear box for reassembly.**

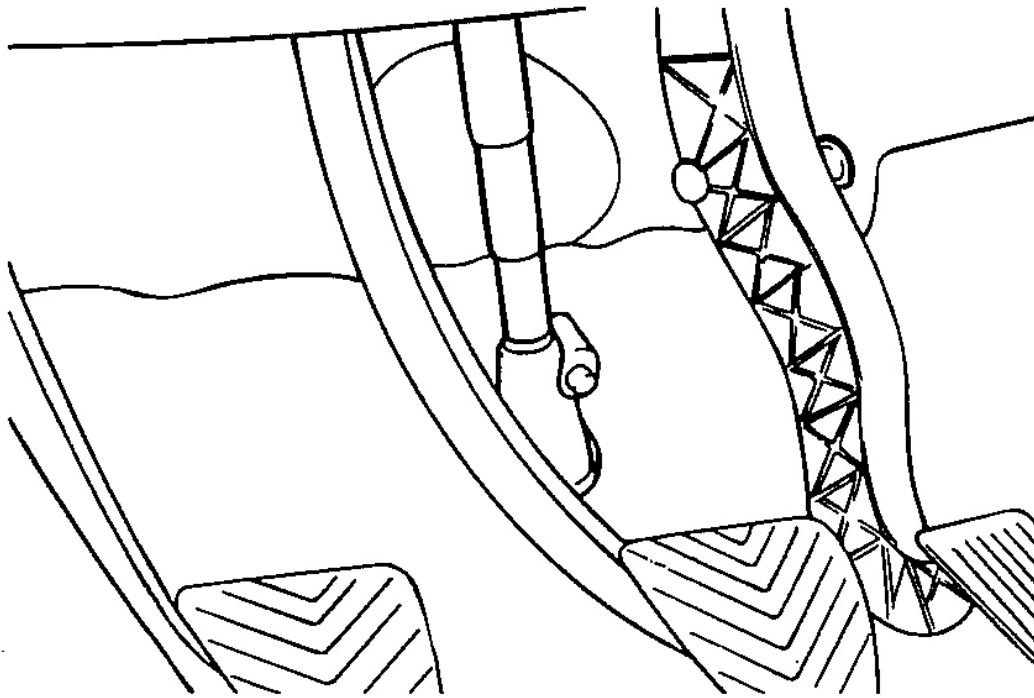

G00789991

**Fig. 47: Identifying Steering Column Through Floor Board Location**  
Courtesy of HYUNDAI MOTOR CO.


16. Raise the vehicle and then remove the front tire.
17. Remove the calliper assembly from the knuckle. Tie it using wire, hang it from the suspension.

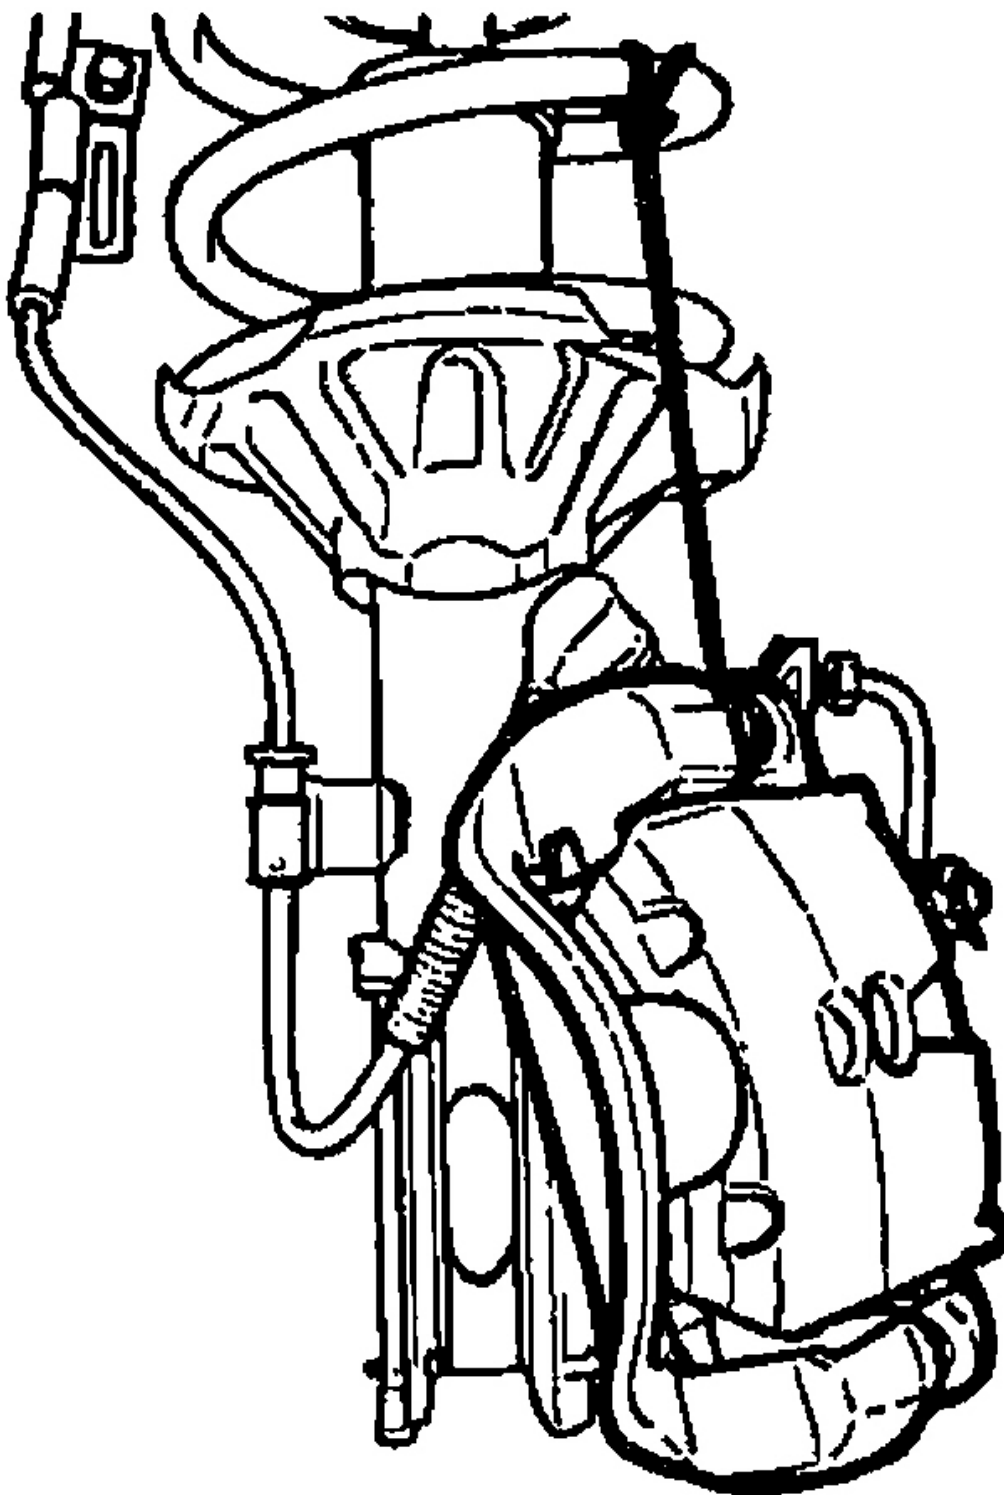

**G00789992**

**Fig. 48: Supporting Brake Caliper**  
Courtesy of HYUNDAI MOTOR CO.


18. Loosen the strut lower bolt and then remove it.

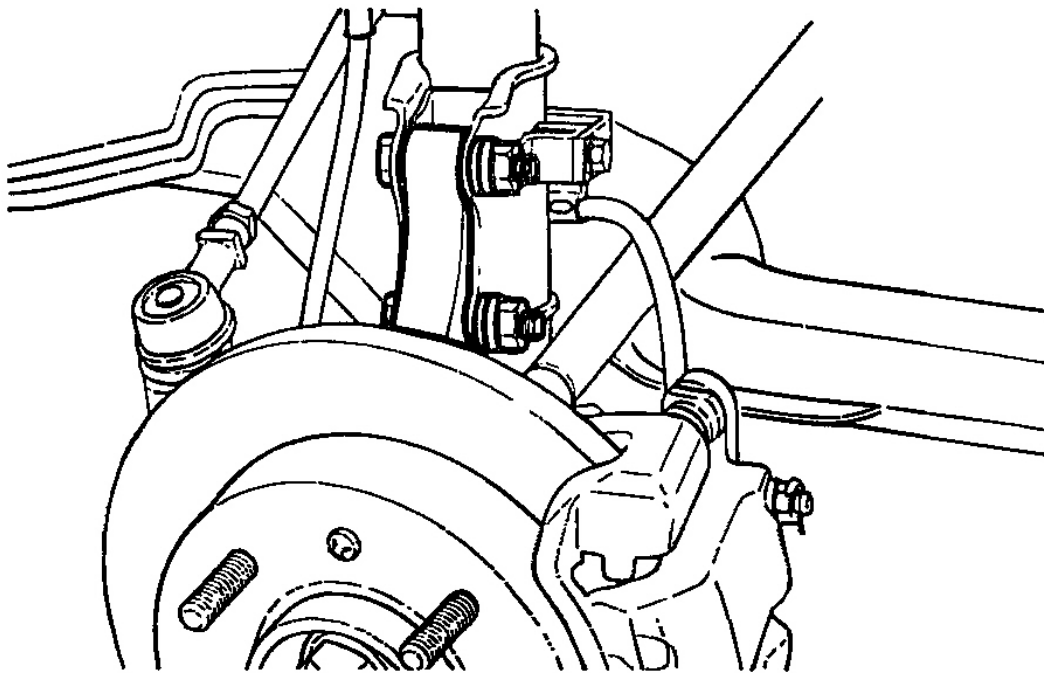

G00789993

**Fig. 49: Removing Knuckle From Strut**  
Courtesy of HYUNDAI MOTOR CO.


19. Drain the transaxle oil.

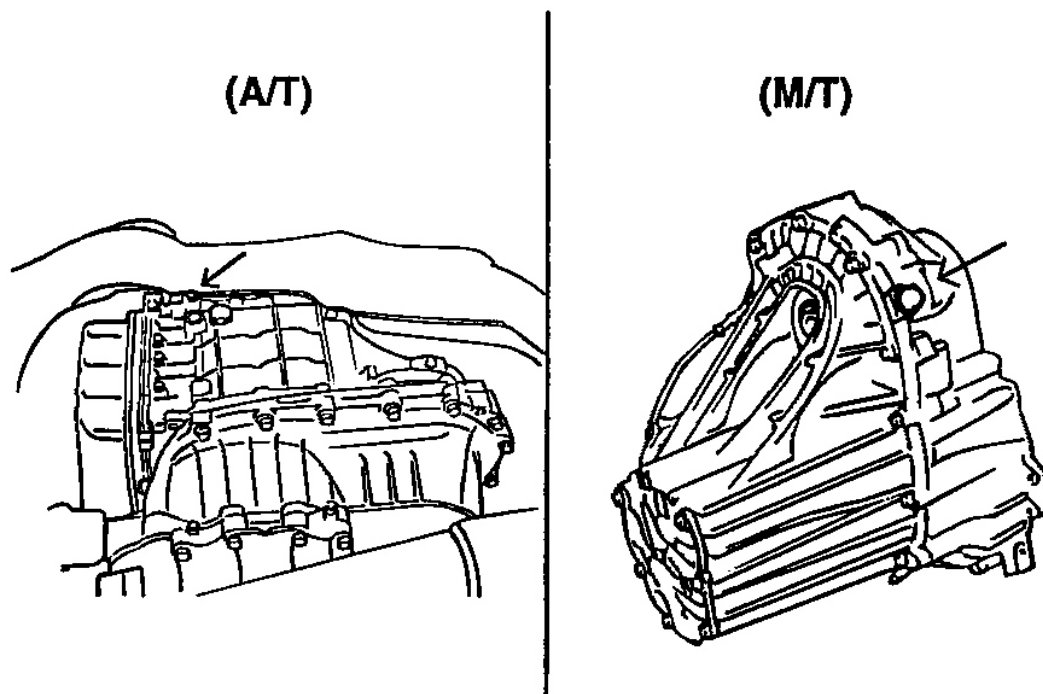

G00789994

**Fig. 50: Identifying Drain Plug Bolt**  
Courtesy of HYUNDAI MOTOR CO.


20. Remove the front muffler bolts.

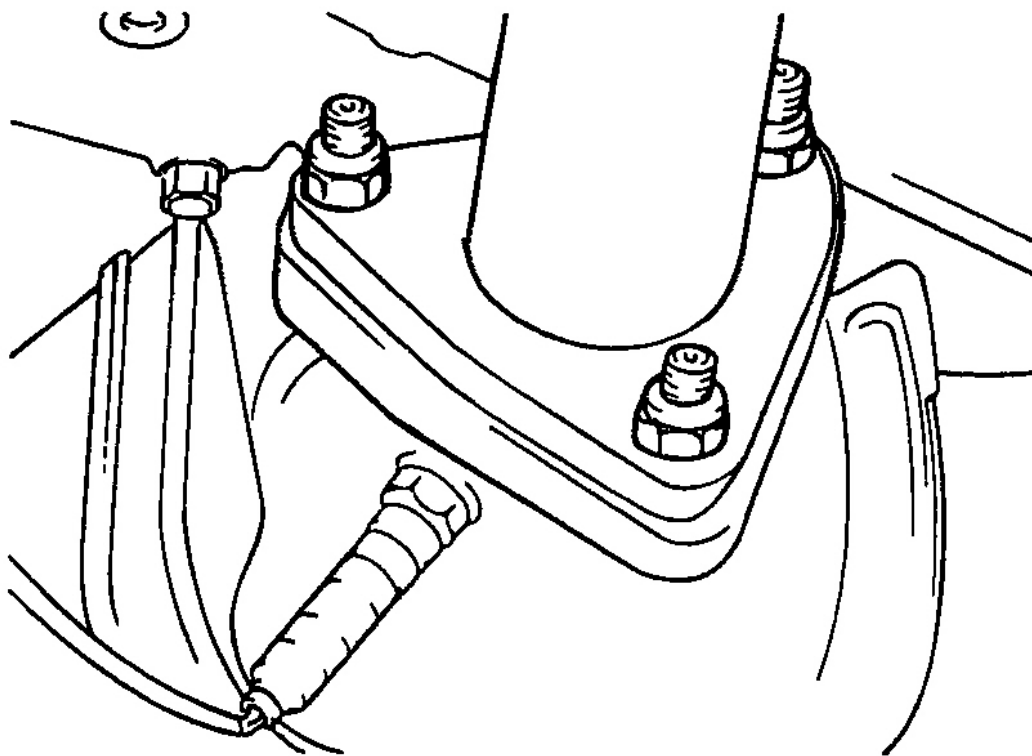

G00789995

**Fig. 51: Identifying Front Muffler Bolts**  
Courtesy of HYUNDAI MOTOR CO.

21. Remove the transaxle control rod and extension rod (M/T only).

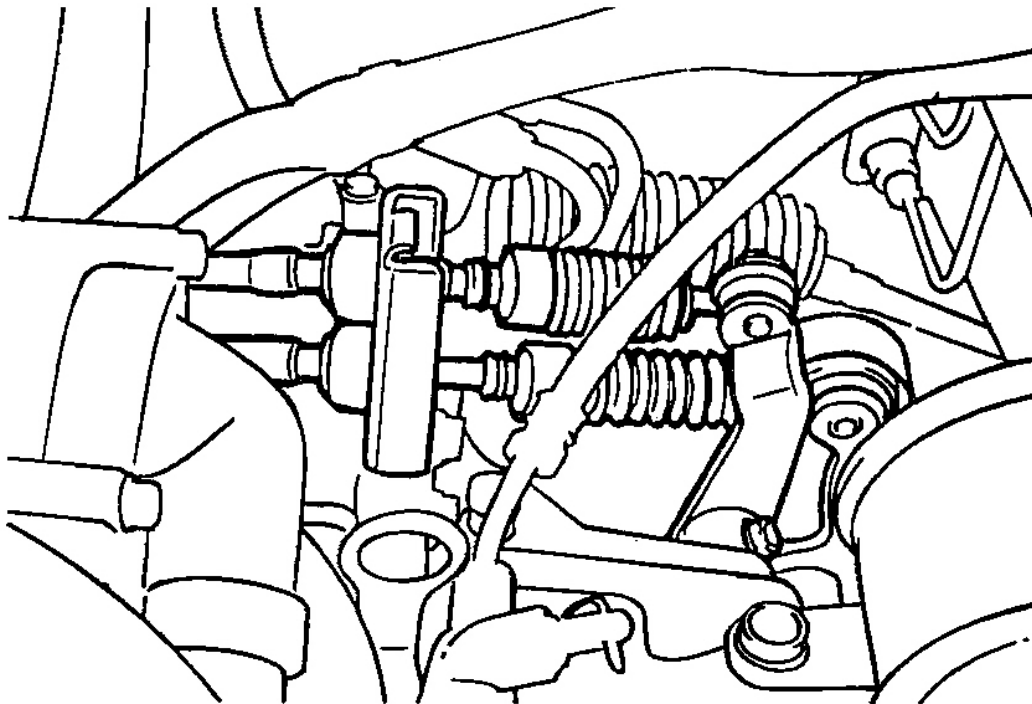


G00789996

**Fig. 52: Identifying Transaxle Control Rod & Extension Rod**  
Courtesy of HYUNDAI MOTOR CO.

22. Put the special fixture on the T/M jack and then adjust it to the sub-frame.

**NOTE:** Check that all the cables, harness connector and hose are disconnected from the engine and transaxle assembly.

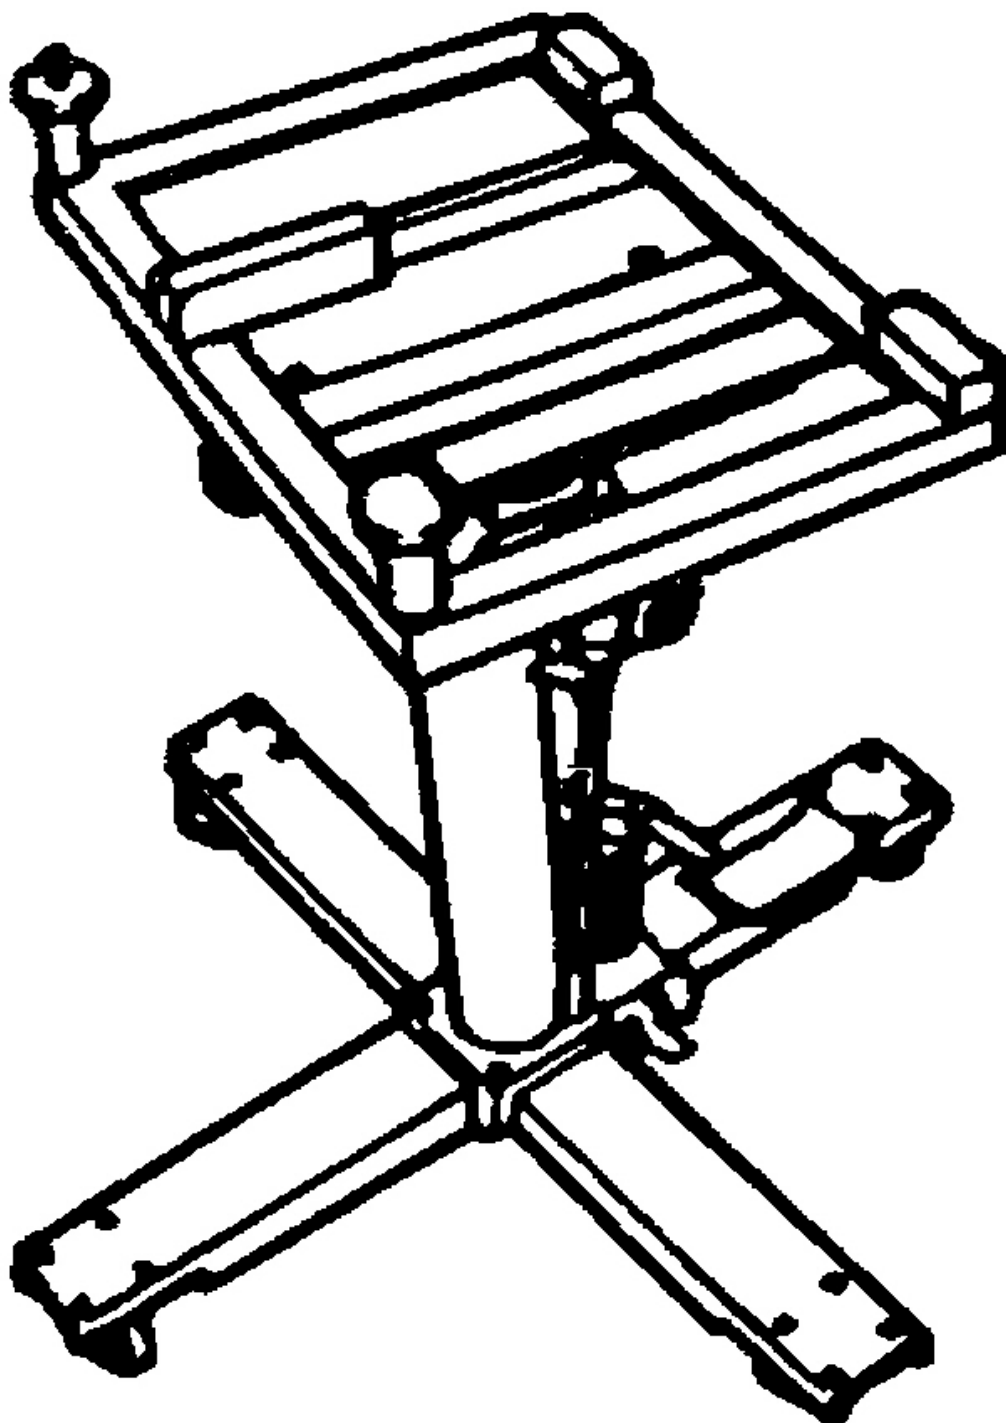


G00789997



**Fig. 53: Identifying T/M Jack**

Courtesy of HYUNDAI MOTOR CO.


23. Remove the engine mounting bracket and the transaxle mounting bracket.

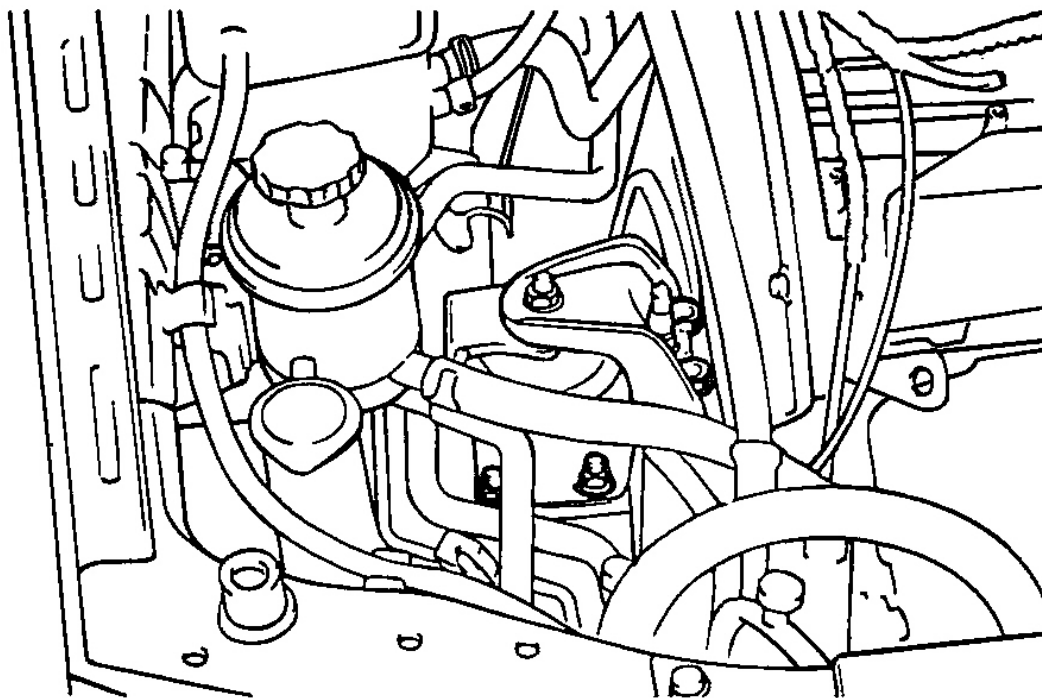

G00789998

**Fig. 54: Identifying Engine Mount Bracket**


Courtesy of HYUNDAI MOTOR CO.

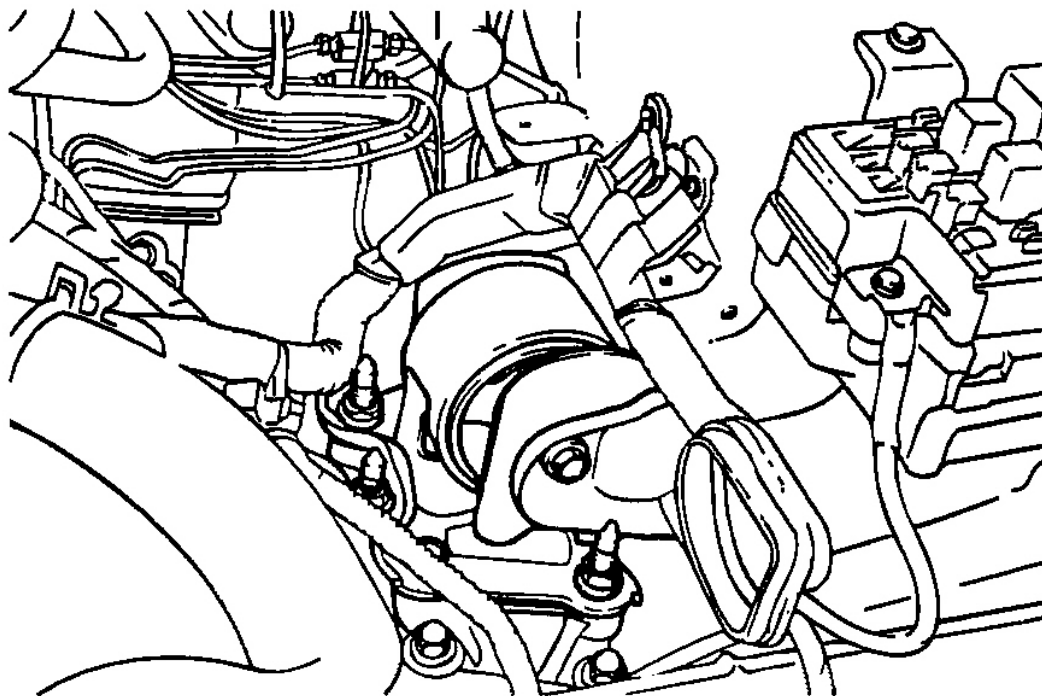

G00789999

**Fig. 55: Identifying Transaxle Mounting Bracket**  
Courtesy of HYUNDAI MOTOR CO.


24. Remove the sub-frame installation bolts.

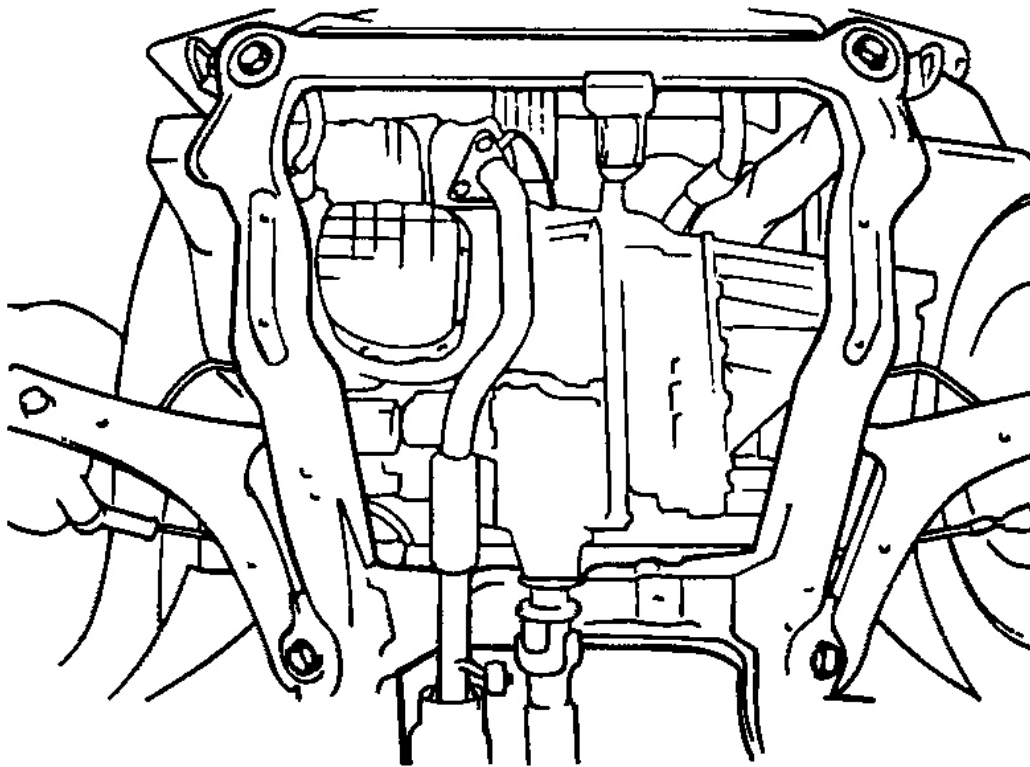

G00790000

**Fig. 56: Identifying Sub-Frame Bolts**  
Courtesy of HYUNDAI MOTOR CO.

25. After removing the drive shaft, lower the engine and transaxle assembly on the jack then, remove the front roll stopper and the rear roll stopper.
26. Remove the engine and transaxle assembly as a unit.

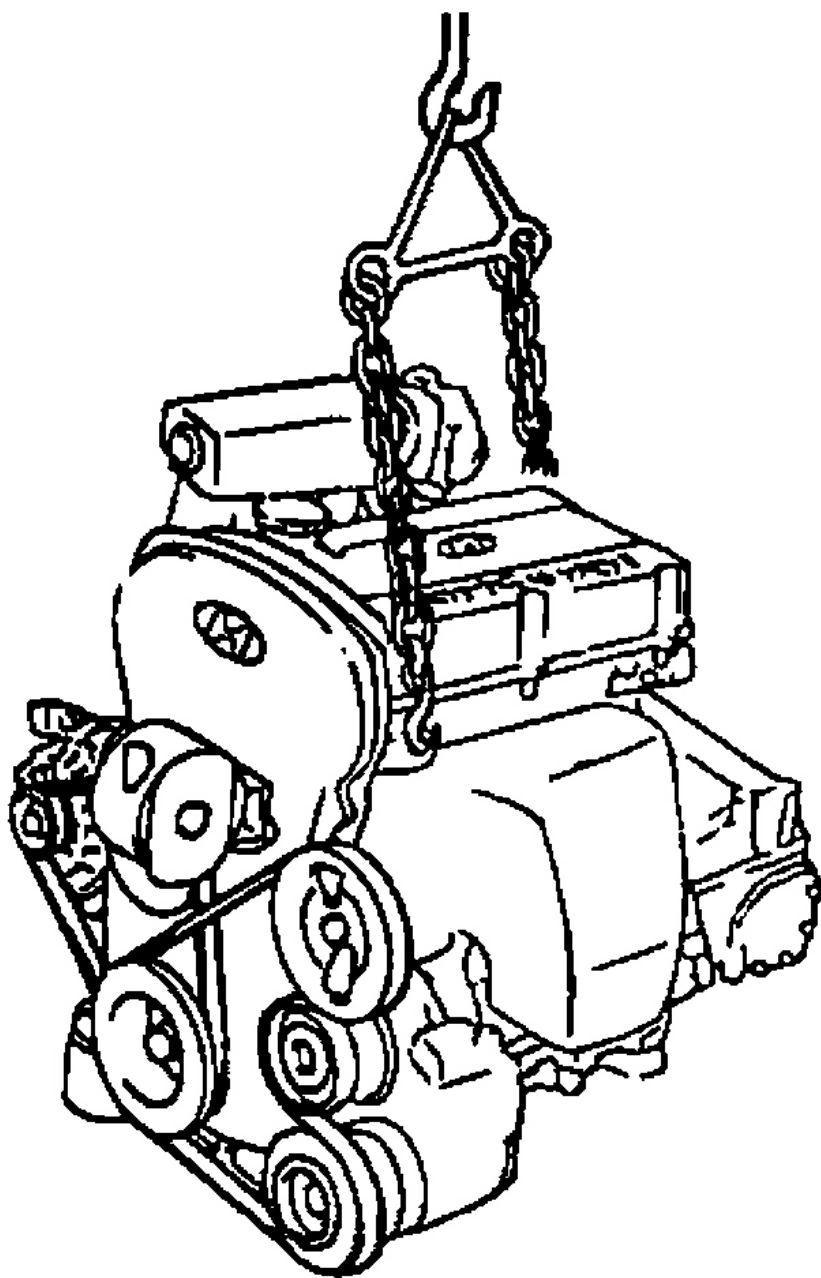

G00790001


**Fig. 57: Removing Engine**  
Courtesy of HYUNDAI MOTOR CO.

#### Installation

1. When installing the engine and transaxle, check the connections of harnesses, pipes, hoses, etc. make sure that none of them are caught, damaged, etc.
2. Install the front roll stopper to the bracket roughly.

**Tightening torque**

Service standard : 50 ~ 65 Nm (500 ~ 650 kg.cm, 36 ~ 47 lb.ft)

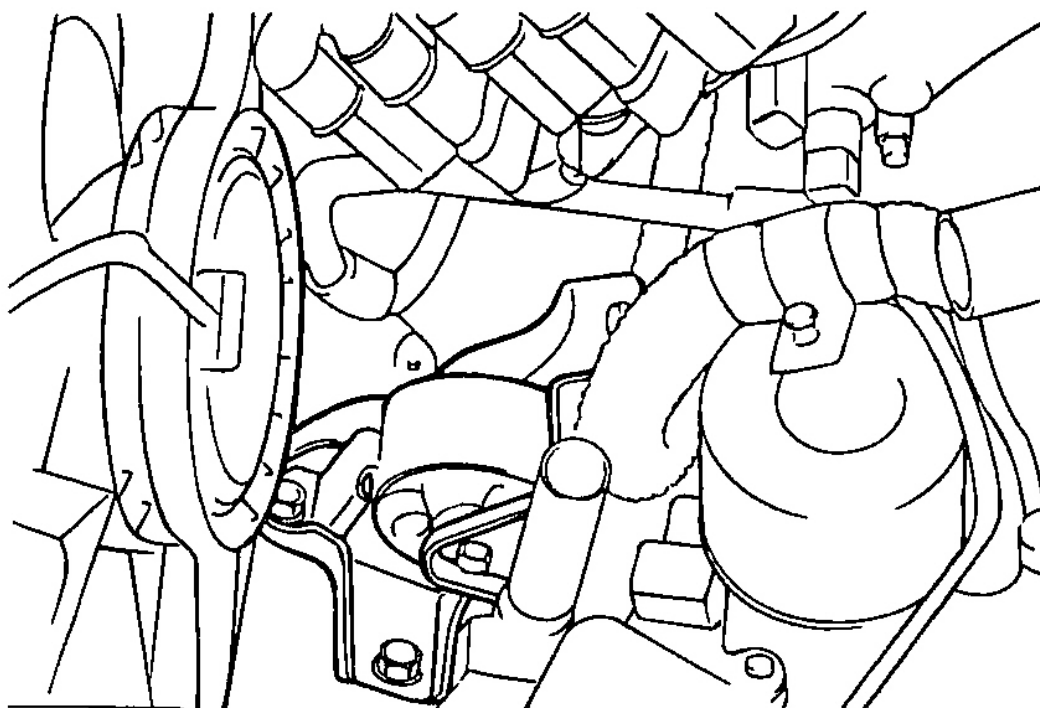


G00790002

**Fig. 58: Installing Front Roll Stopper**  
Courtesy of HYUNDAI MOTOR CO.

3. Install the rear roll stopper to the bracket.

**Tightening torque**



Service standard : 50 ~ 65 Nm (500 ~ 650 kg.cm, 36 ~ 47 lb.ft)

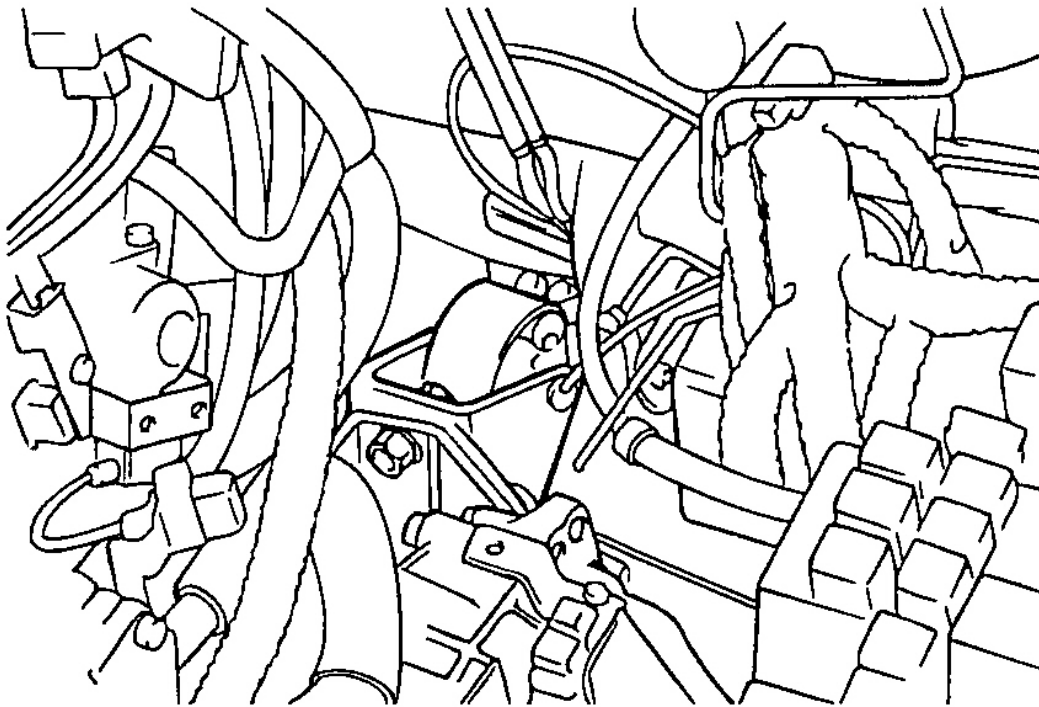

G00790003

**Fig. 59: Installing Rear Roll Stopper**  
Courtesy of HYUNDAI MOTOR CO.

4. Install the engine/transaxle to the sub-frame assembly. Use the T/M jack to raise the assembly slowly adjust it to the vehicle body.

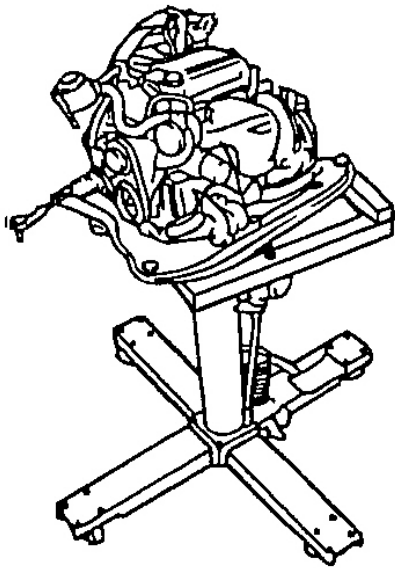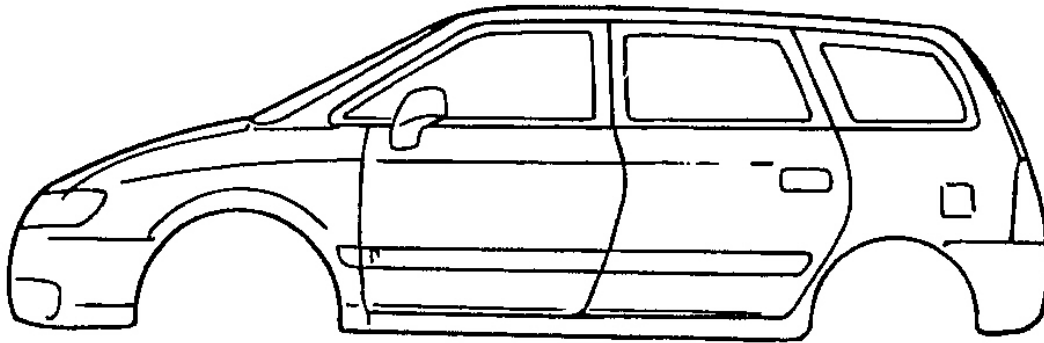

G00790004


**Fig. 60: View Of Engine On T/M Jack**  
Courtesy of HYUNDAI MOTOR CO.

5. Install the transaxle mounting bracket.

**Tightening torque**

Service standard:

90 ~ 110 Nm (900 ~ 1100 kg.cm, 65 ~ 80 lb.ft)

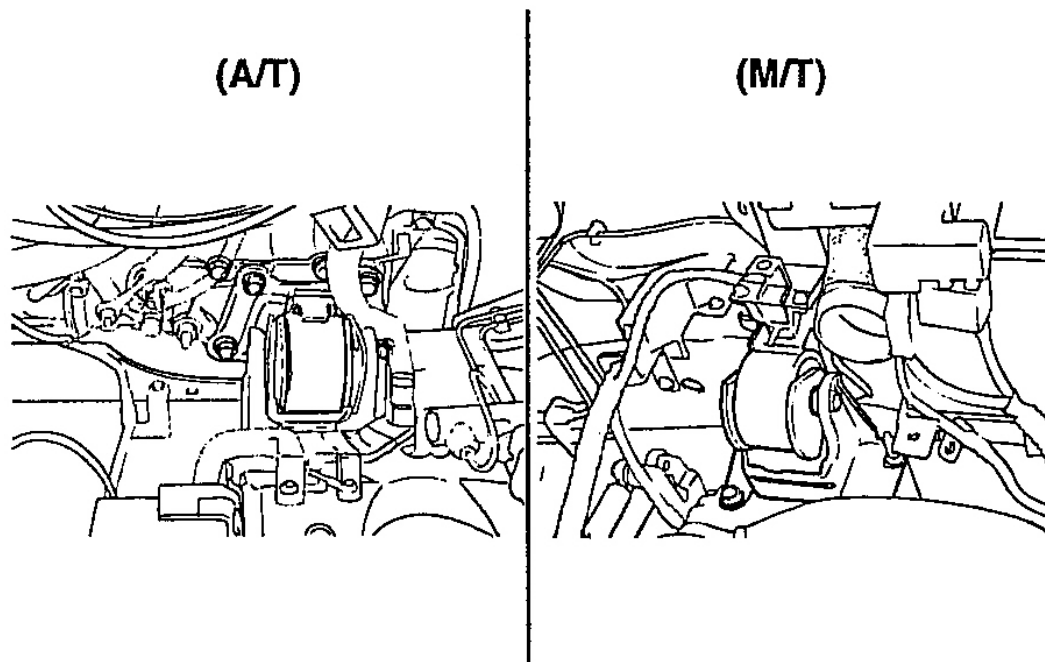

G00790005

**Fig. 61: Identifying Transaxle Mounting Bracket**  
Courtesy of HYUNDAI MOTOR CO.


6. Install the engine bracket (right side).

**Tightening torque**

Service standard :

60 ~ 80 Nm (600 ~ 800 kg.cm, 43 ~ 58 lb.ft)



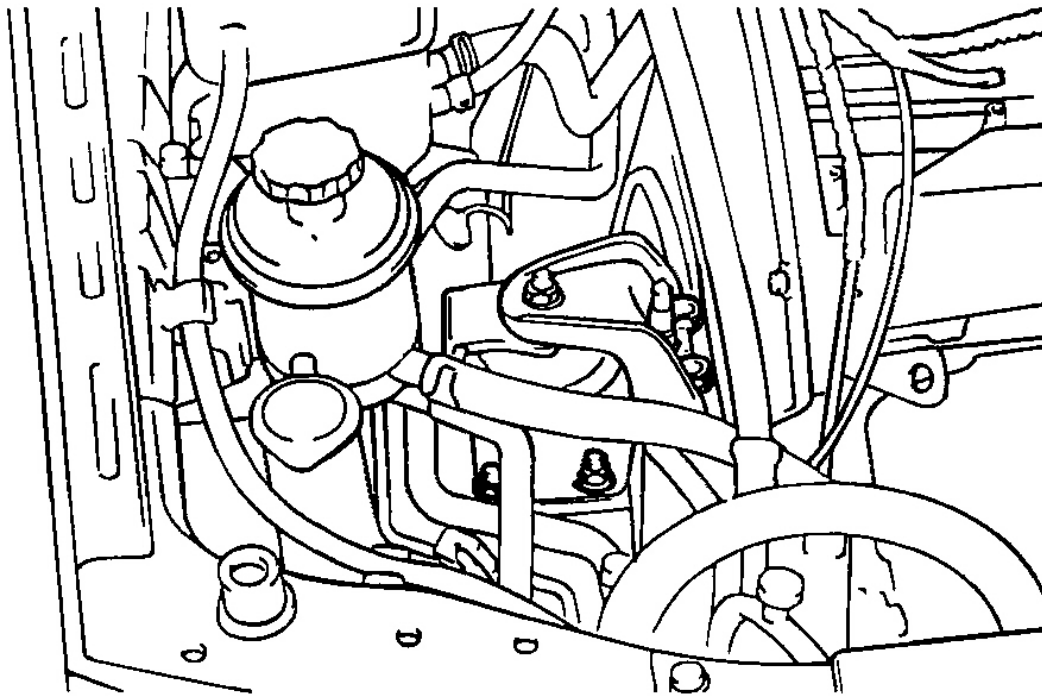


G00790006

**Fig. 62: Identifying Engine Bracket**  
Courtesy of HYUNDAI MOTOR CO.

7. To install all of parts, follow the removal procedures in the reverse order.
8. Refill the coolant and then check for leaks.
9. Refill the transaxle oil and check for leaks, then test its operation.
10. Check the operation of the transaxle control cable and accelerator cable.
11. Check the proper operation of each gauge.

## **FRONT CASE**

### **Components**

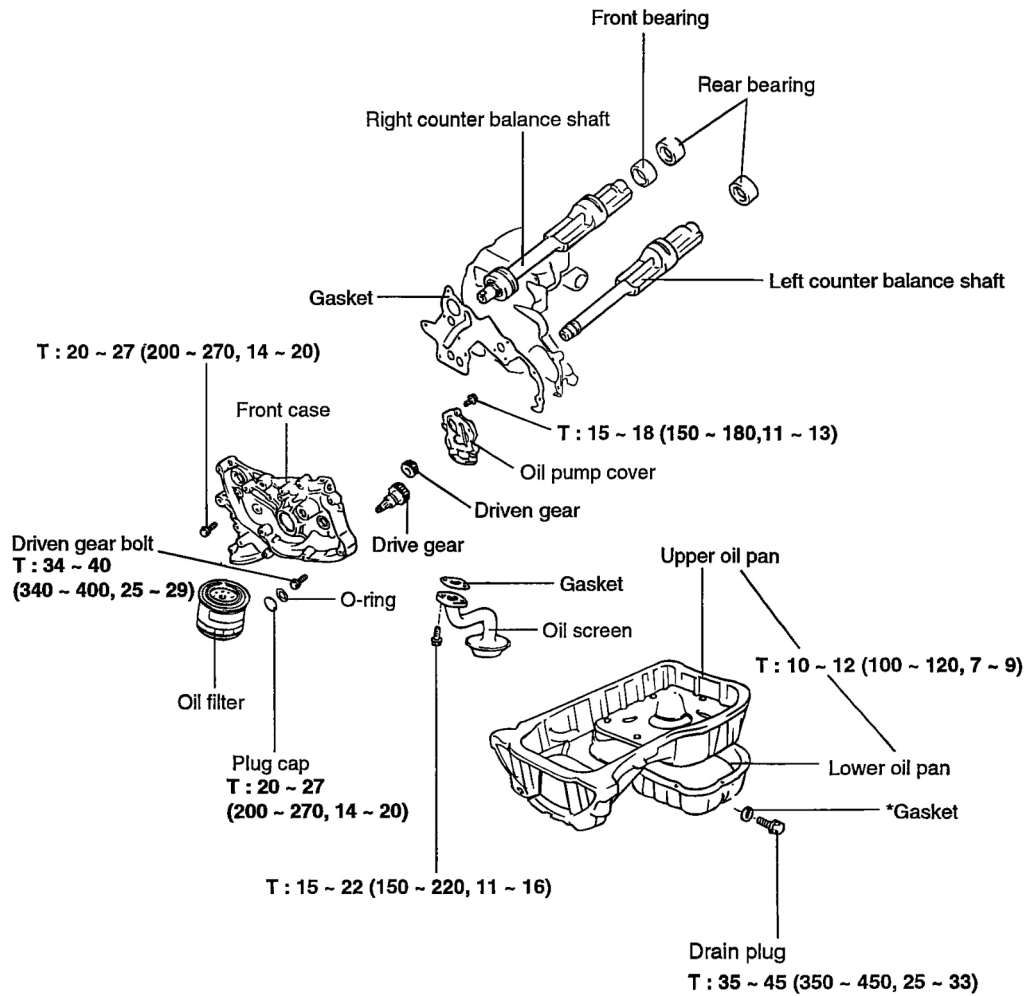

\*Drain plug gasket should not be used again.

**TORQUE : Nm (kg.cm, lb.ft)**


G00790007

**Fig. 63: Front Case Components**  
Courtesy of HYUNDAI MOTOR CO.

### Disassembly

1. Remove the timing belt. Refer to **TIMING BELT**.
2. Remove all the oil pan bolts.
3. Tap the oil pan with a rubber hammer and remove the pan. (upper and lower parts)
4. Remove the oil screen and gasket.
5. Remove the front case assembly.


6. Remove the oil pressure switch.

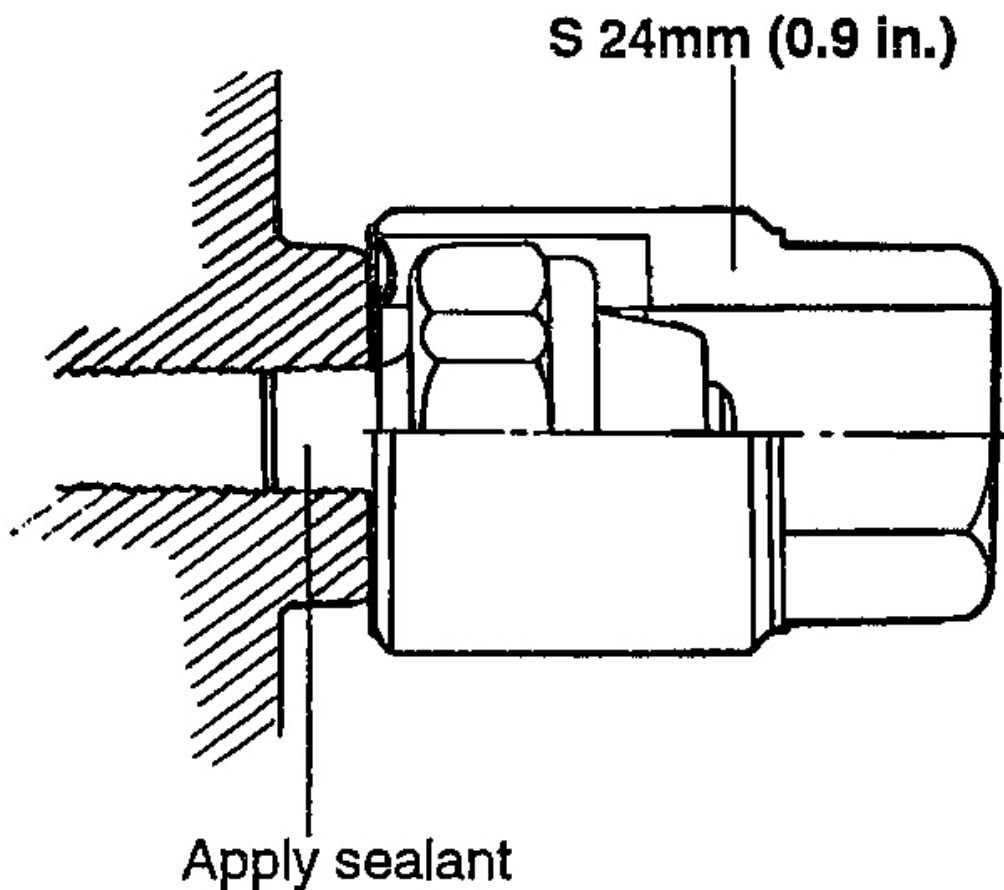

G00790008

**Fig. 64: Removing Oil Pressure Switch**  
Courtesy of HYUNDAI MOTOR CO.

7. Remove the oil filter bracket and gasket.
8. Using the special tool (09213-33000) remove the plug cap from the oil pump portion of the front case.

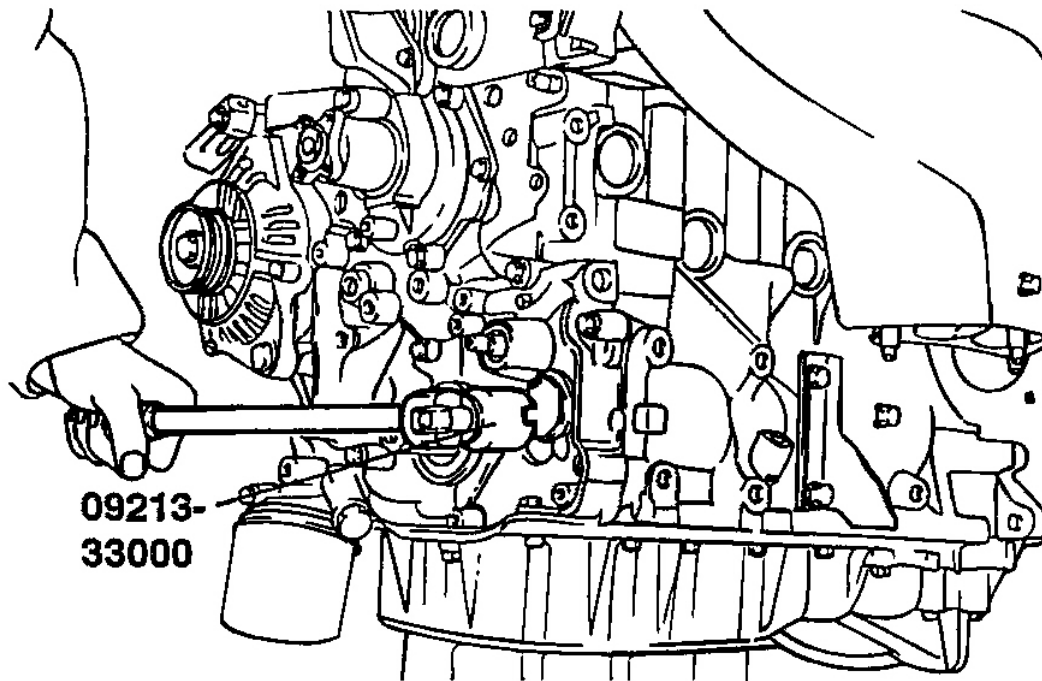


G00790009

**Fig. 65: Removing Plug Cap**

Courtesy of HYUNDAI MOTOR CO.


9. Remove the plug on the left side of the cylinder block and insert a screw driver with an 8 mm (0.32 in.) diameter into the plug hole. The screwdriver must be inserted more than 60 mm (2.4 in.)

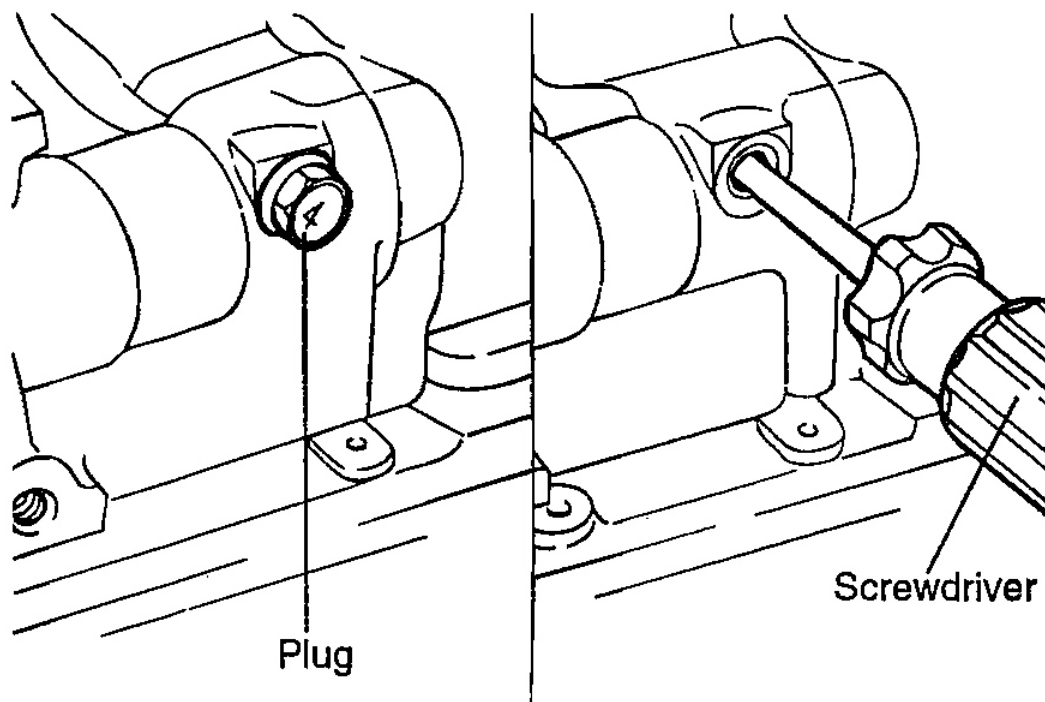

G00790010

**Fig. 66: Identifying Plug On Left Side Of Motor**  
Courtesy of HYUNDAI MOTOR CO.


10. Remove the oil pump driven gear and the left counter balance shaft retaining bolt.

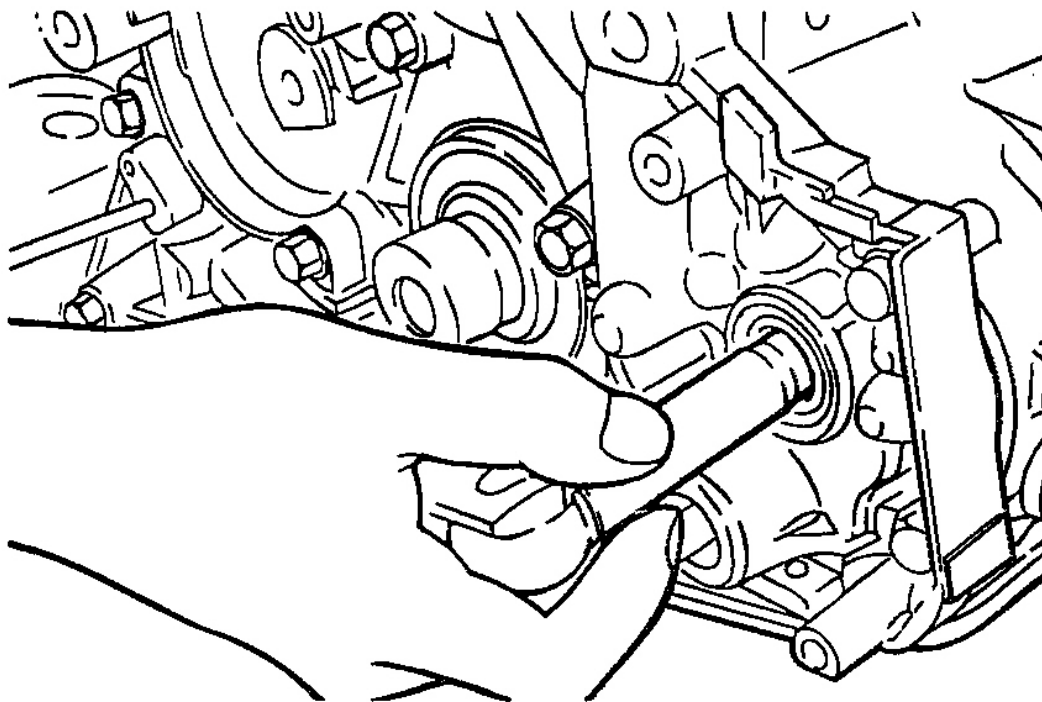

G00790011

**Fig. 67: Removing Counter Balance Shaft Retaining Bolt**  
Courtesy of HYUNDAI MOTOR CO.


11. Remove the front case mounting bolts and remove the front case assembly and gasket and then remove the two counter balance shafts from the cylinder block.

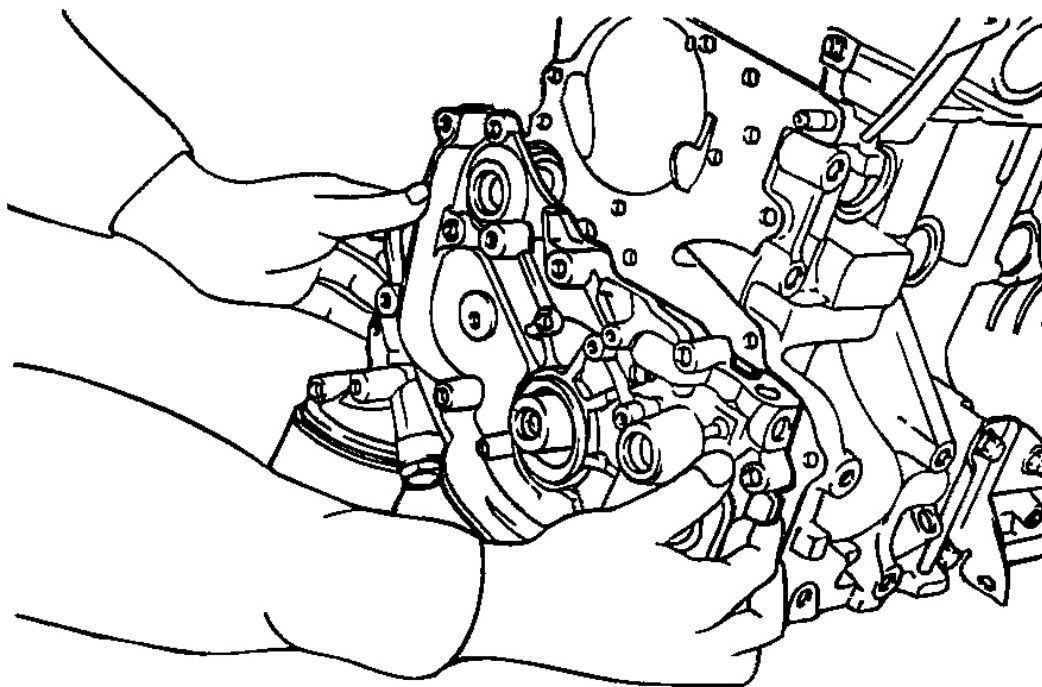

G00790012

**Fig. 68: Removing Front Case**  
Courtesy of HYUNDAI MOTOR CO.

12. Remove the oil pump cover from the front case.
13. Remove the oil pump gears from the front case.

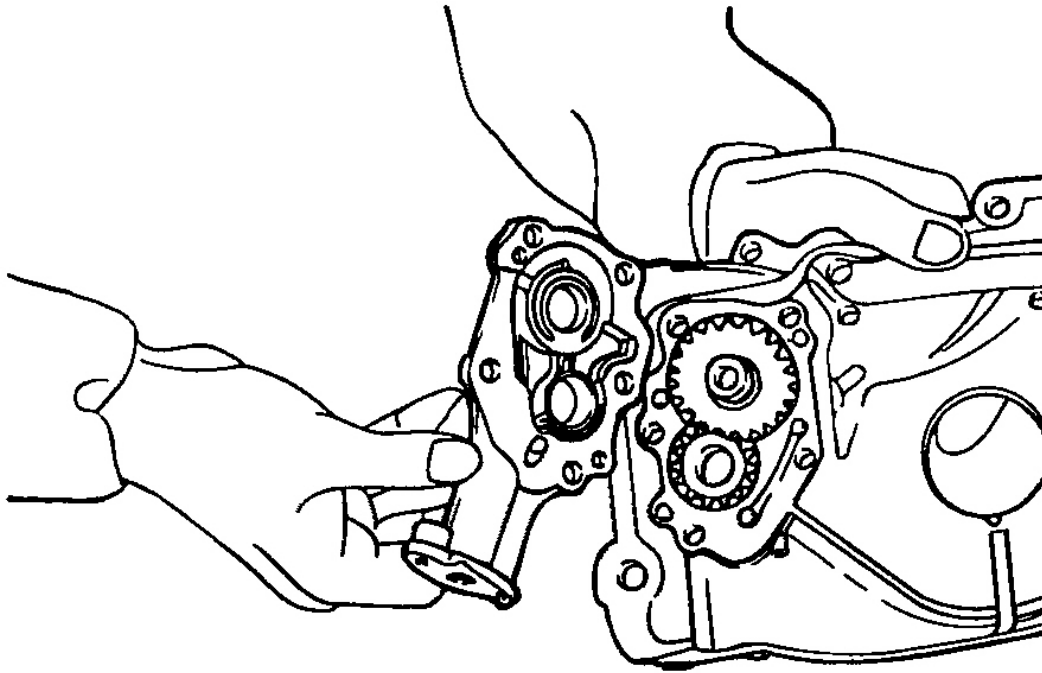

G00790013

**Fig. 69: Identifying Oil Pump Gears**  
Courtesy of HYUNDAI MOTOR CO.

14. Remove the screw driver.

(Used in Step 9)


#### Inspection

1. Check all oil holes for clogging. Clean the holes if necessary.
2. Check the counter balance shaft front bearing for wear, damage and seizure. If there is anything wrong with the bearing, replace the front case.
3. Check the front case for cracks and other damage.
4. Replace a cracked or damaged front case.

#### Counter Balance Shaft

1. Check the journals for wear or seizure.
2. If excessive wear or seizure is evident, check the bearing carefully.
3. If necessary, replace the counter balance shaft bearing or the shaft itself.

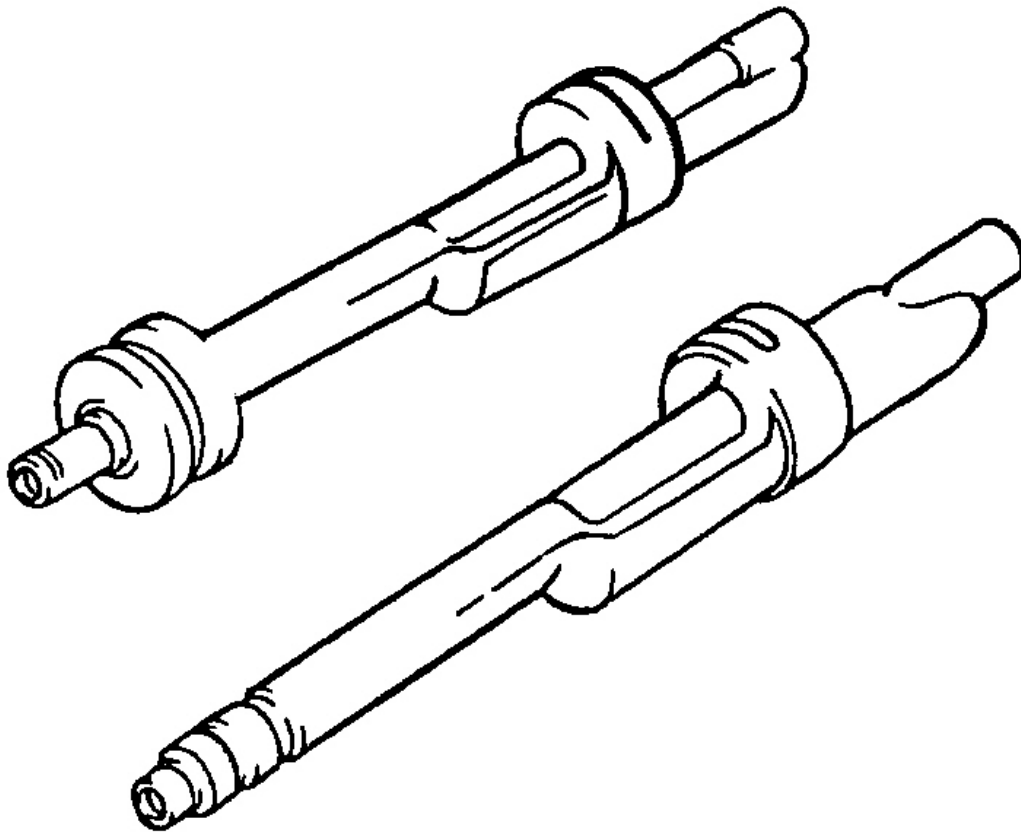

**G00790014**

**Fig. 70: Identifying Counter Balance Shaft**  
Courtesy of HYUNDAI MOTOR CO.


**Oil Seal**

1. Check the oil seal lip for wear and damage. Replace the oil seal if necessary.
2. Check the oil seal lip for deterioration. Replace the oil seal if necessary.

**Oil Pressure Switch**

1. Check the continuity between the terminal and the body with an ohmmeter.


If there is no continuity, replace the oil pressure switch.

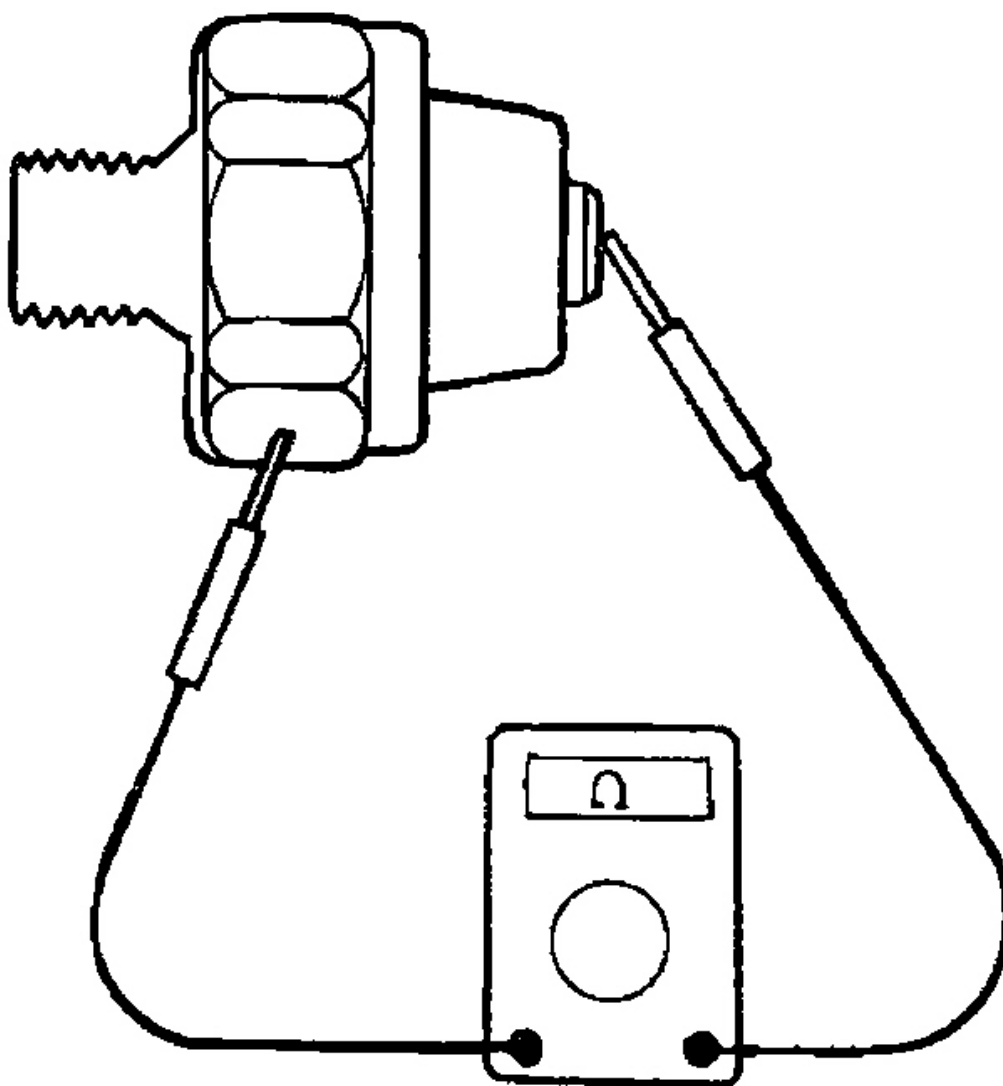

G00790015

**Fig. 71: Checking Oil Pressure Switch Continuity**  
Courtesy of HYUNDAI MOTOR CO.

2. Check the continuity between the terminal and the body when the fine wire is pushed. If there is continuity even when the fine wire is pushed, replace the switch.
3. If there is no continuity when a 50 kPa (7 psi) vacuum is applied through the oil hole, the switch is operating properly. Check for an air leak. If air leaks, the diaphragm is broken. Replace the switch.

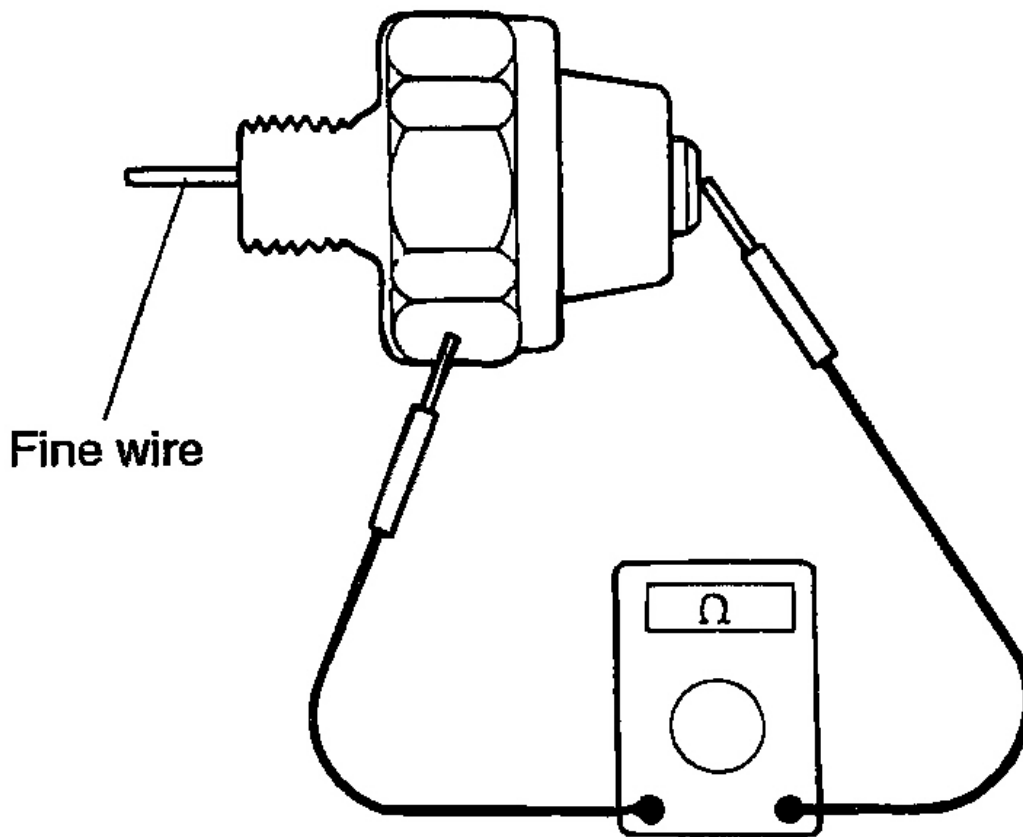

G00790016

**Fig. 72: Checking Oil Pressure Switch Continuity With Fine Wire**  
Courtesy of HYUNDAI MOTOR CO.

#### Oil Pump

1. Assemble the oil pump gear to the front case and rotate it to verify smooth rotation with no looseness.
2. Make sure that there is no ridge wear on the contact surface between the front case and the gear surface of the oil pump cover.
3. Install the drive and driven gears to the front case. Measure the tip clearance of the gears.

#### [Standard value]


Drive gear : 0.16 ~ 0.21 mm (0.0063 ~ 0.0083 in.)

Driven gear : 0.18 ~ 0.21 mm (0.0071 ~ 0.0083 in.)

**[Limit]**

Drive gear : 0.25 mm (0.0098 in)

Drive gear : 0.25 mm (0.0098 in.)

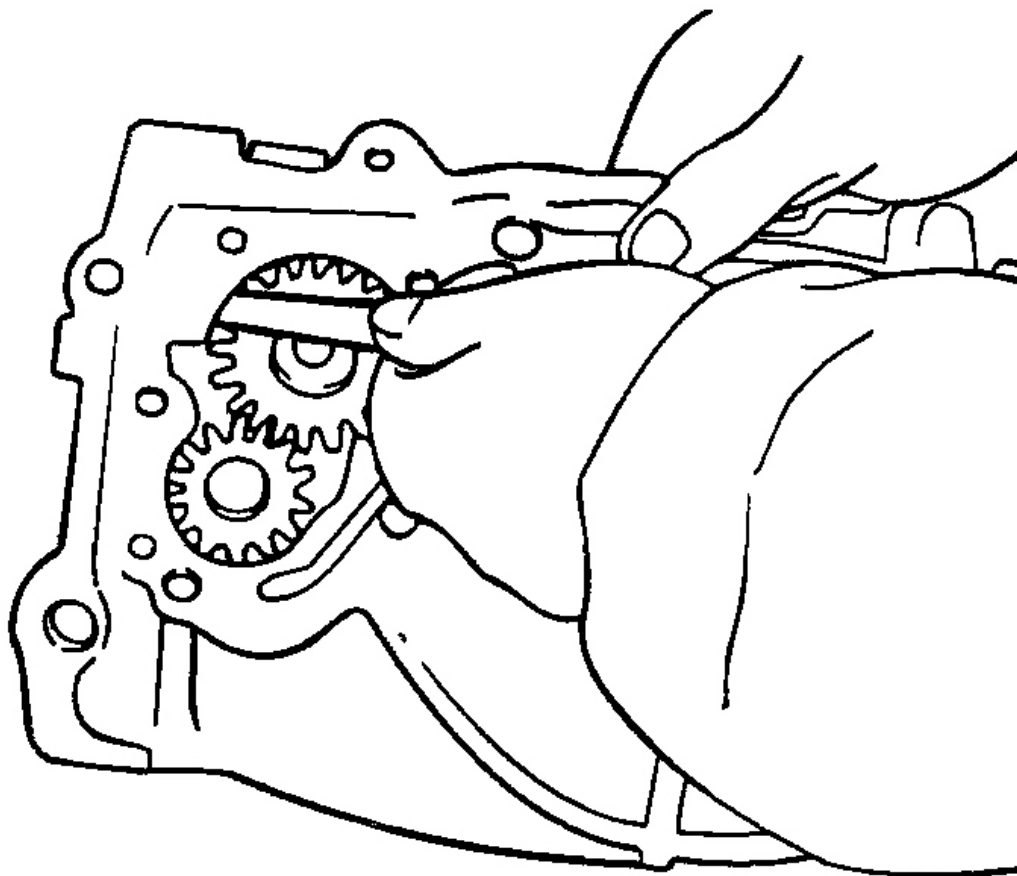

G00790017

**Fig. 73: Measuring Tip Clearance Of Drive & Driven Gears**  
Courtesy of HYUNDAI MOTOR CO.

4. Check the side clearance.

**[Standard value]**


Drive gear : 0.08 ~ 0.14 mm (0.0031 ~ 0.0055 in.)

Driven gear : 0.06 ~ 0.12 mm (0.0024 ~ 0.0047 in.)

**[Limit]**

Drive gear : 0.25 mm (0.0098 in)

Driven gear : 0.25 mm (0.0098 in.)

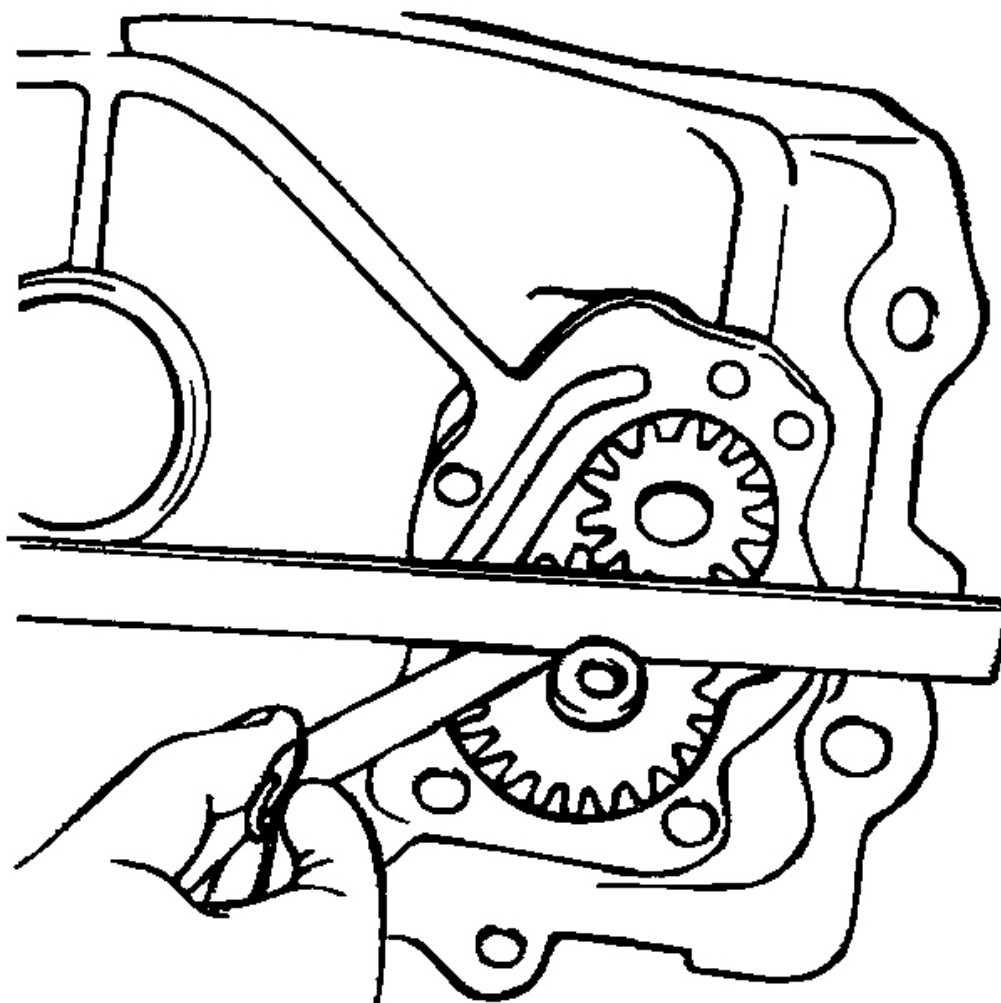


G00790018

**Fig. 74: Checking Side Clearance**  
Courtesy of HYUNDAI MOTOR CO.

**Counter Balance Shaft Bearing****Replacement**


1. Using a special tool, remove the front bearing of the right counter balance shaft from the cylinder block.

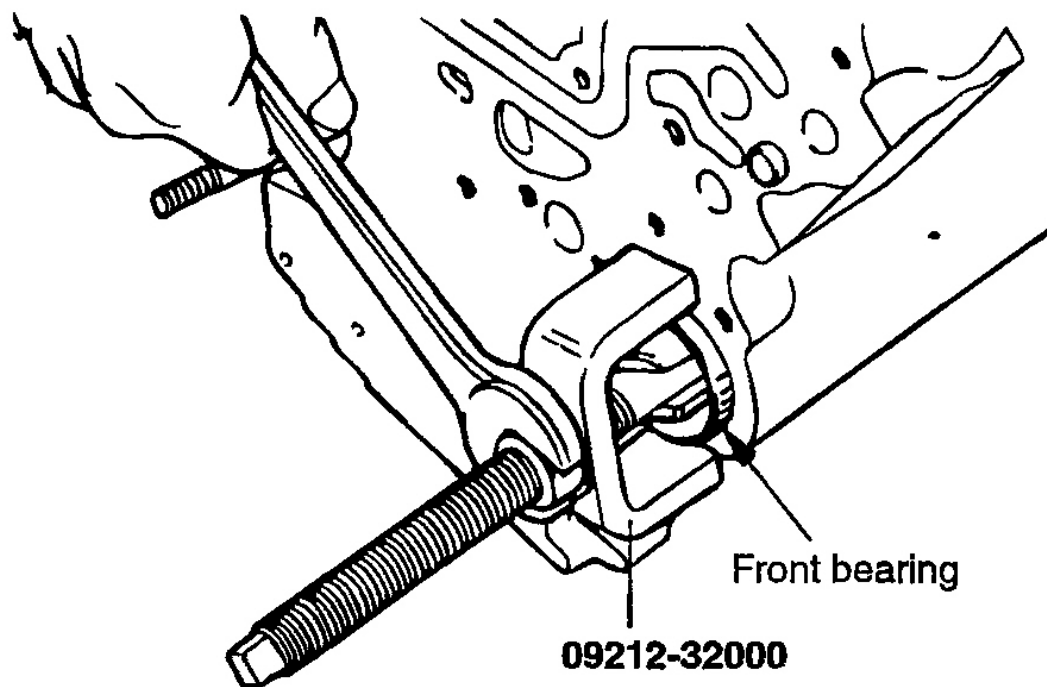

G00790019

**Fig. 75: Removing Right Front Bearing**  
Courtesy of HYUNDAI MOTOR CO.


2. Using a special tool, remove the rear bearing of the right counter balance shaft from the cylinder block.

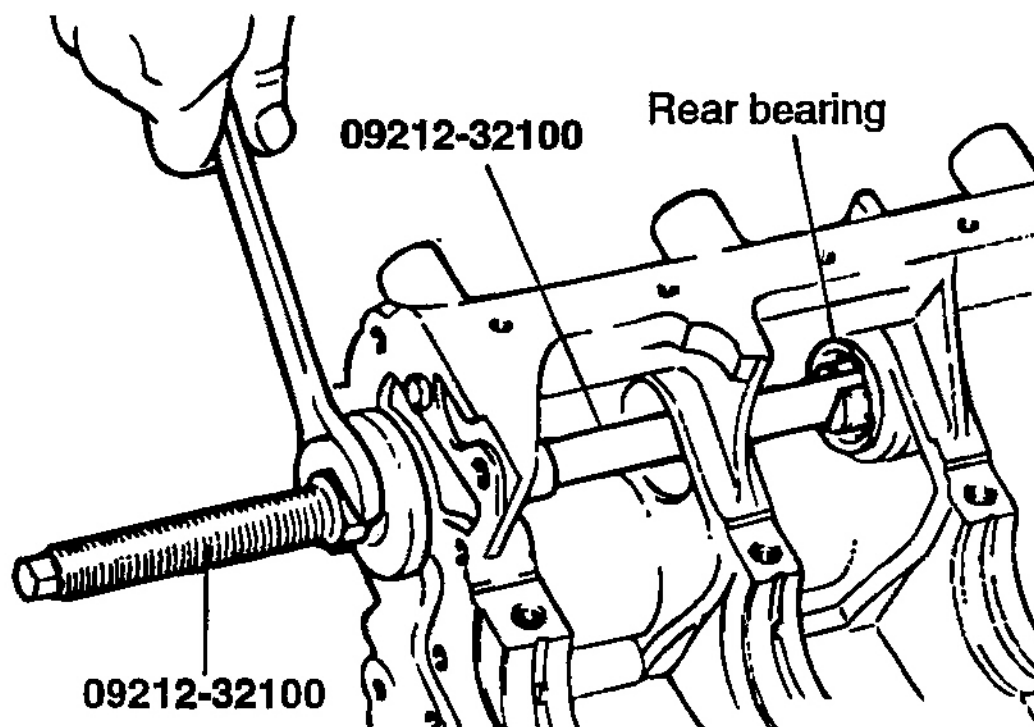

G00790020

**Fig. 76: Removing Right Rear Bearing**  
Courtesy of HYUNDAI MOTOR CO.

3. Using a special tool, remove the rear bearing of the left counter balance shaft from the cylinder block. At this time, install a special tool on the front surface of cylinder block to hold the bearing puller.

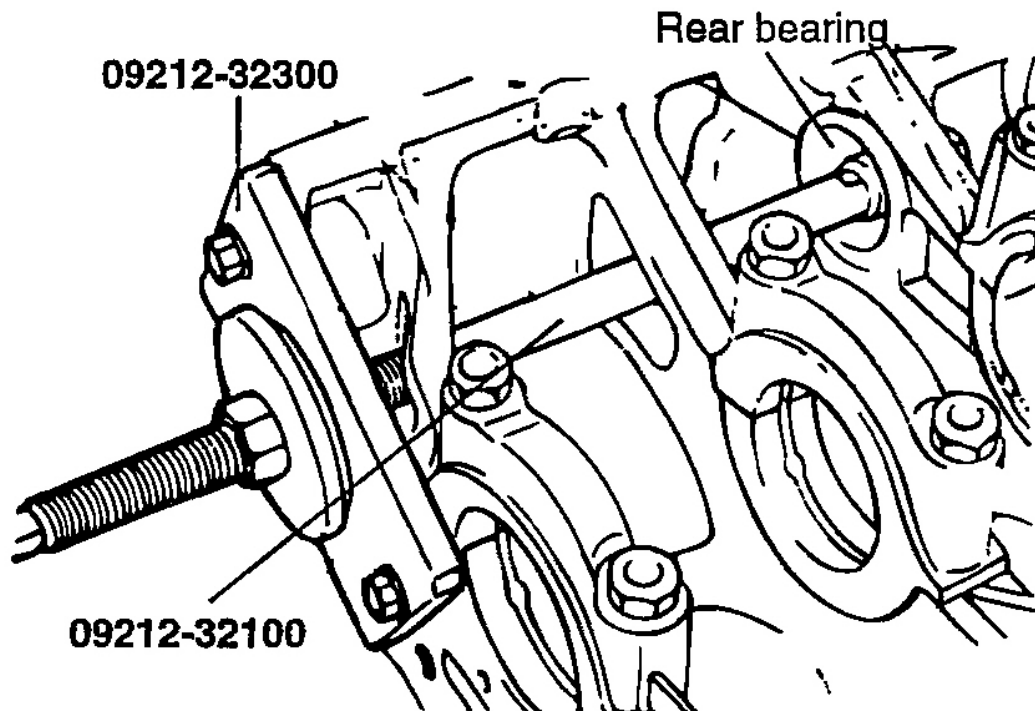

G00790021


**Fig. 77: Removing Left Rear Bearing**  
Courtesy of HYUNDAI MOTOR CO.

4. Using a special tool, install the rear bearing of the left counter balance shaft to the cylinder block.

**NOTE:**

1. Apply engine oil to the outside of rear bearing and bearing hole in cylinder block.
2. The left rear bearing has no oil holes.



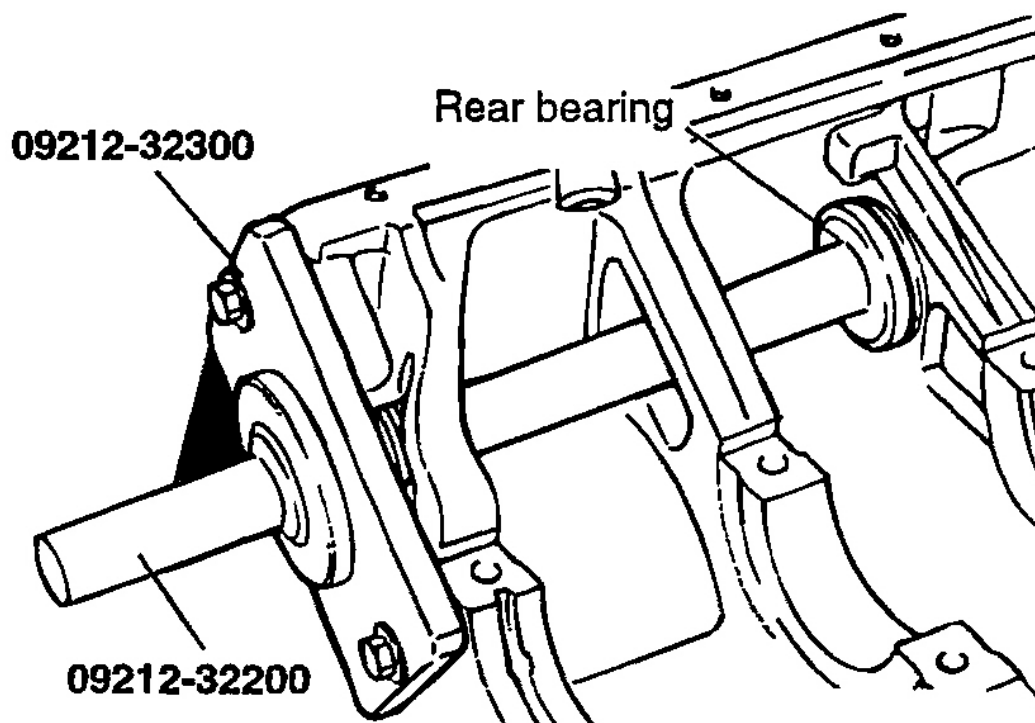



G00790022

**Fig. 78: Installing Left Rear Bearing**  
Courtesy of HYUNDAI MOTOR CO.

5. Using a special tool, install the rear bearing of the right counter balance shaft to the cylinder block.

**NOTE:**



1. Apply engine oil to the outside surface of the bearing.
2. Make sure that the bearing oil hole is aligned with the oil hole of cylinder block.

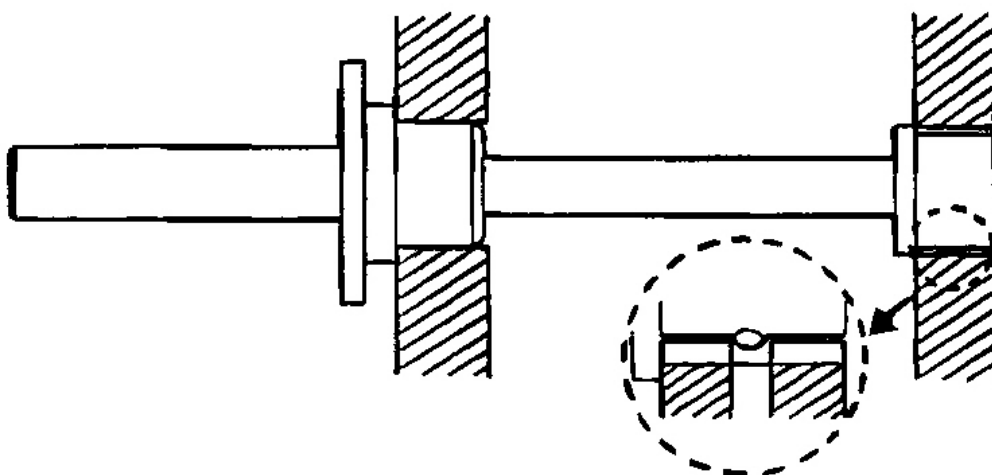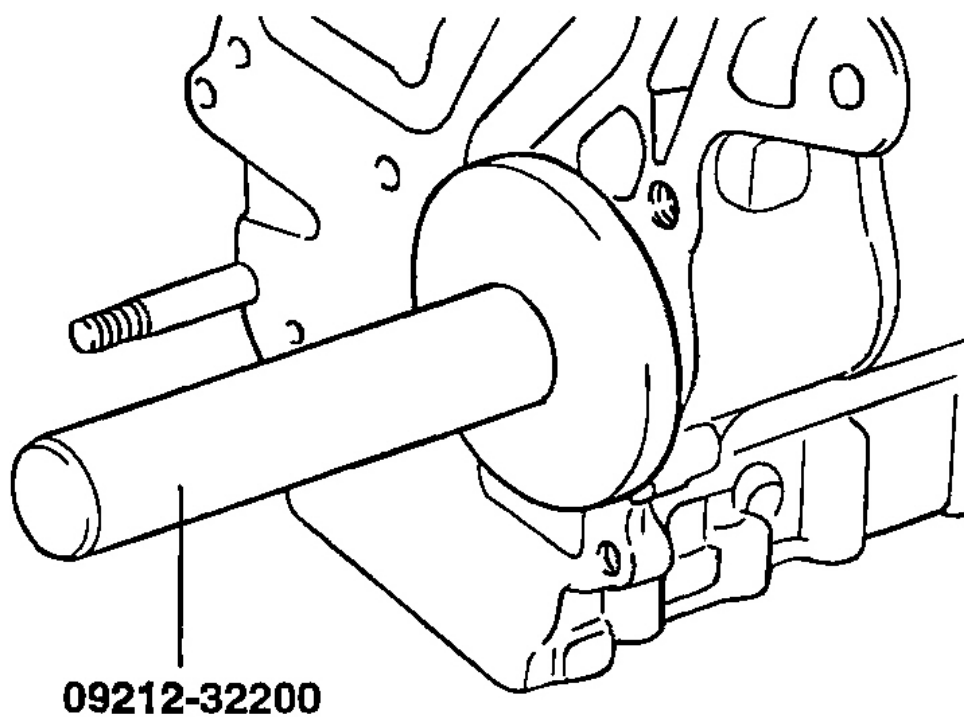

G00790023

**Fig. 79: Installing Right Rear Bearing**  
Courtesy of HYUNDAI MOTOR CO.

6. Using a special tool, install the front bearing of the right counter balance shaft to the cylinder block.

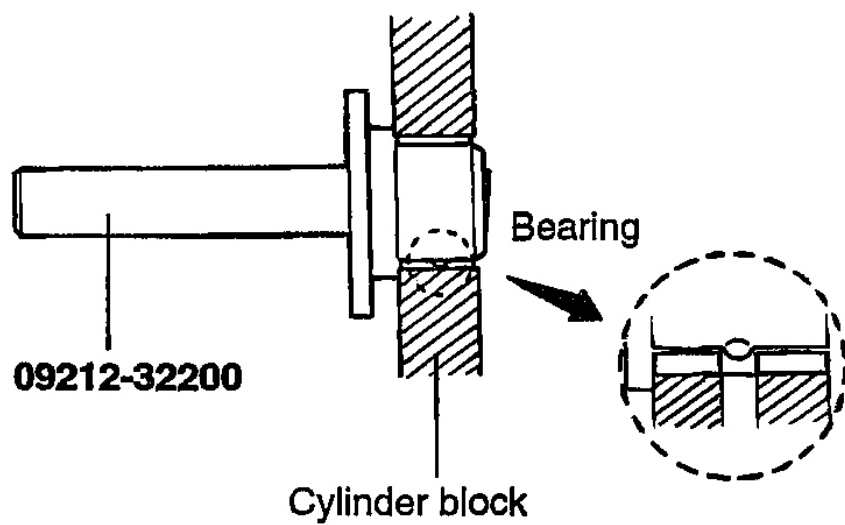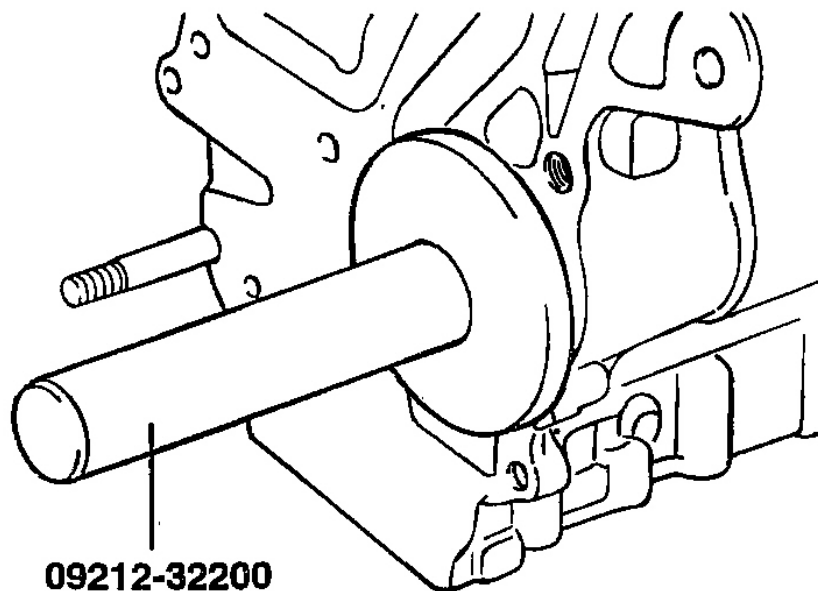


G00790024

**Fig. 80: Installing Right Front Bearing**

Courtesy of HYUNDAI MOTOR CO.

**NOTE:** Make sure that the bearing oil hole is aligned with the oil hole cylinder block.

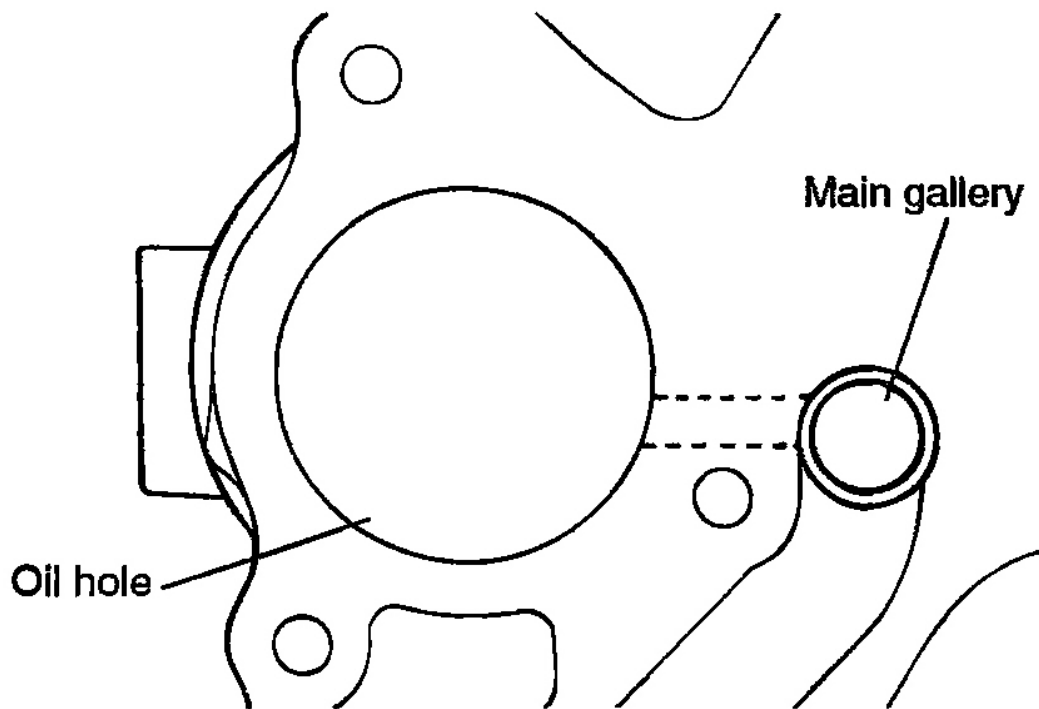


G00790025

**Fig. 81: Identifying Oil Hole**

Courtesy of HYUNDAI MOTOR CO.

**Reassembly**


1. Apply engine oil to the gear and align the two timing marks.

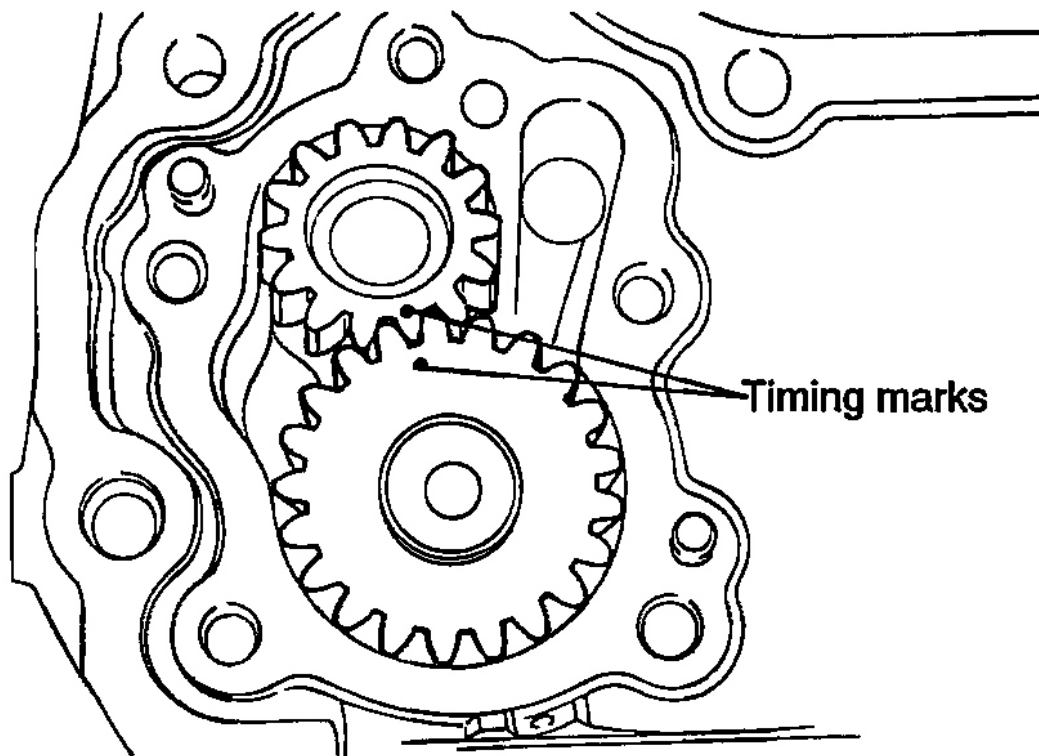

G00790026


**Fig. 82: Identifying Timing Marks**  
Courtesy of HYUNDAI MOTOR CO.

2. Using the special tool, the crankshaft front oil seal installer (09214-32000), install the crankshaft front oil seal into the front case.

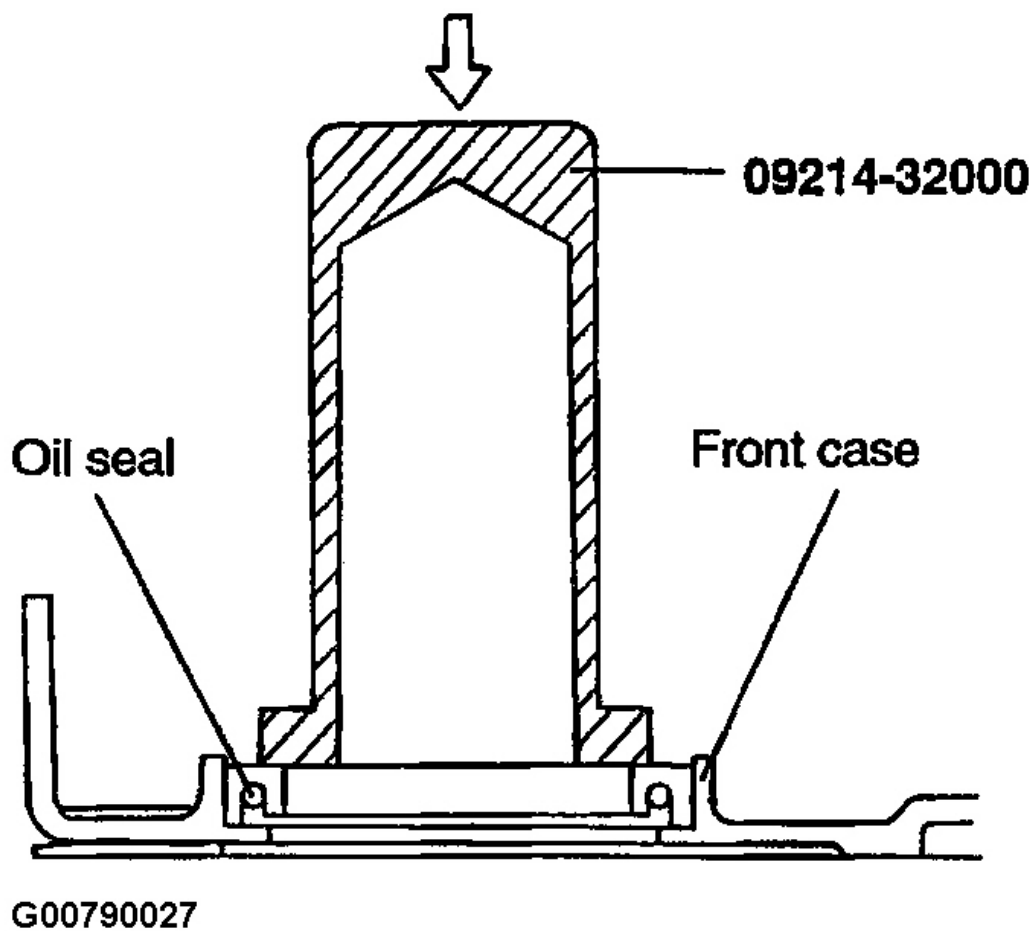


**Fig. 83: Installing Front Crankshaft Oil Seal**  
Courtesy of HYUNDAI MOTOR CO.

3. Set the special tool (09214-32100) on the front end of the crankshaft and apply a thin coat of engine oil to the outer circumference of the special tool to install the front case.

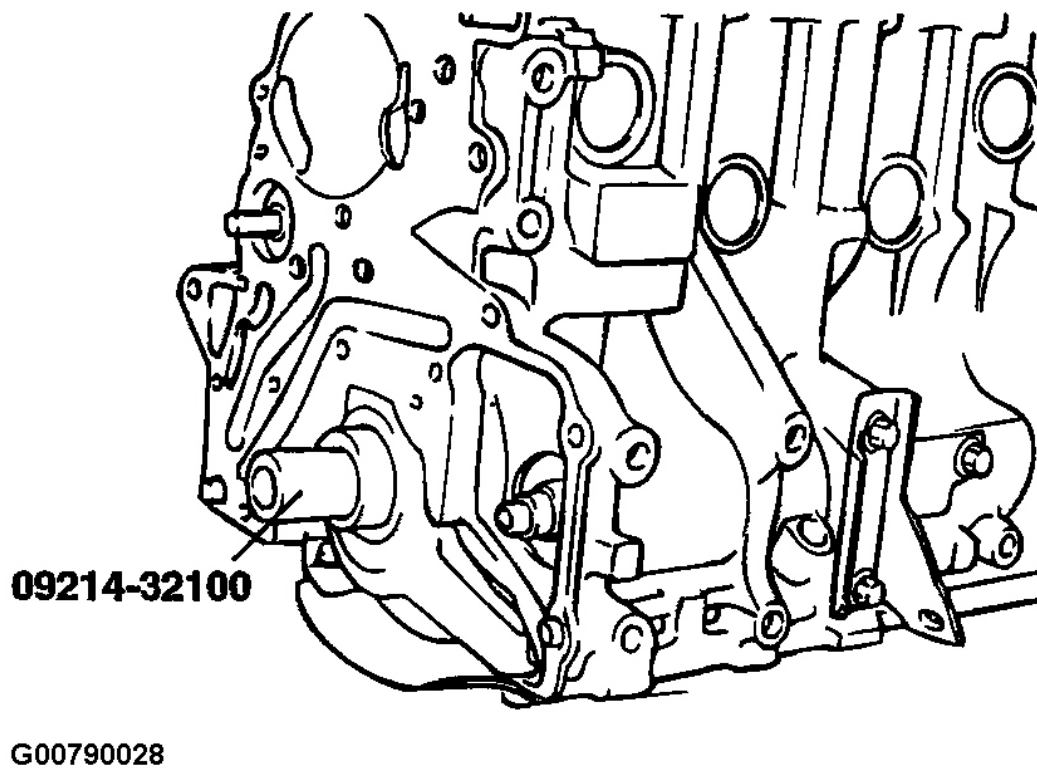

**Fig. 84: Identifying Special Tool**  
Courtesy of HYUNDAI MOTOR CO.

4. Install a new front case gasket to the front case assembly and tighten the flange bolts temporarily.

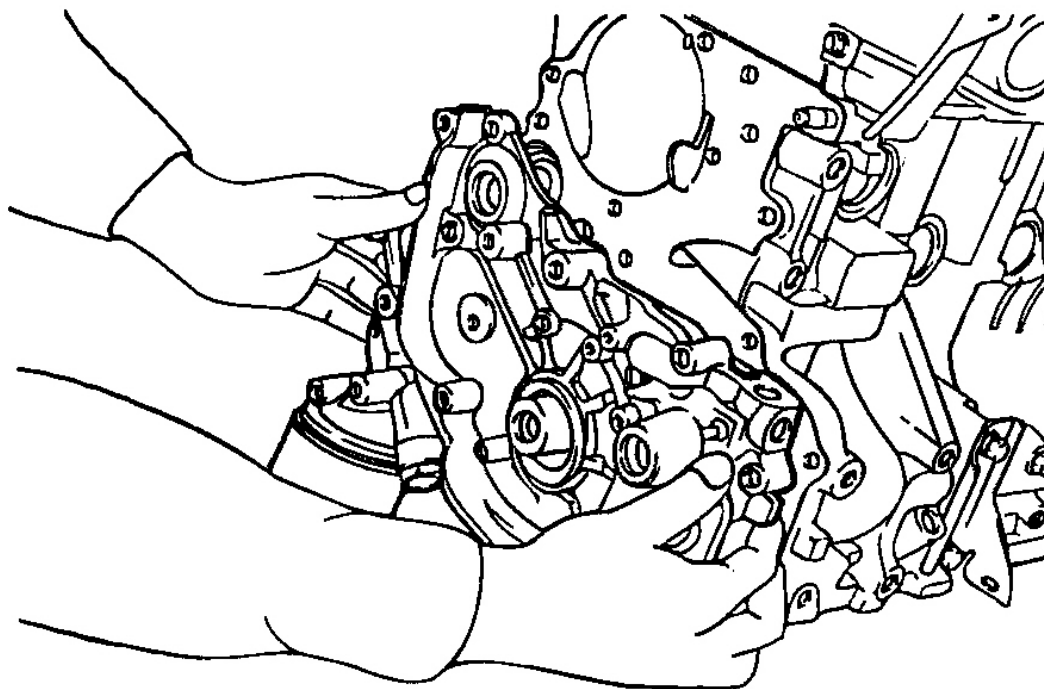

G00790029

**Fig. 85: Installing Front Case**  
Courtesy of HYUNDAI MOTOR CO.


5. Install the front case assembly with a new gasket. Tighten bolts to the specified torque.

**Front case assembly**

Tightening torque :

20 ~ 27 Nm (200 ~ 270 kg.cm, 14 ~ 20 lb.ft)




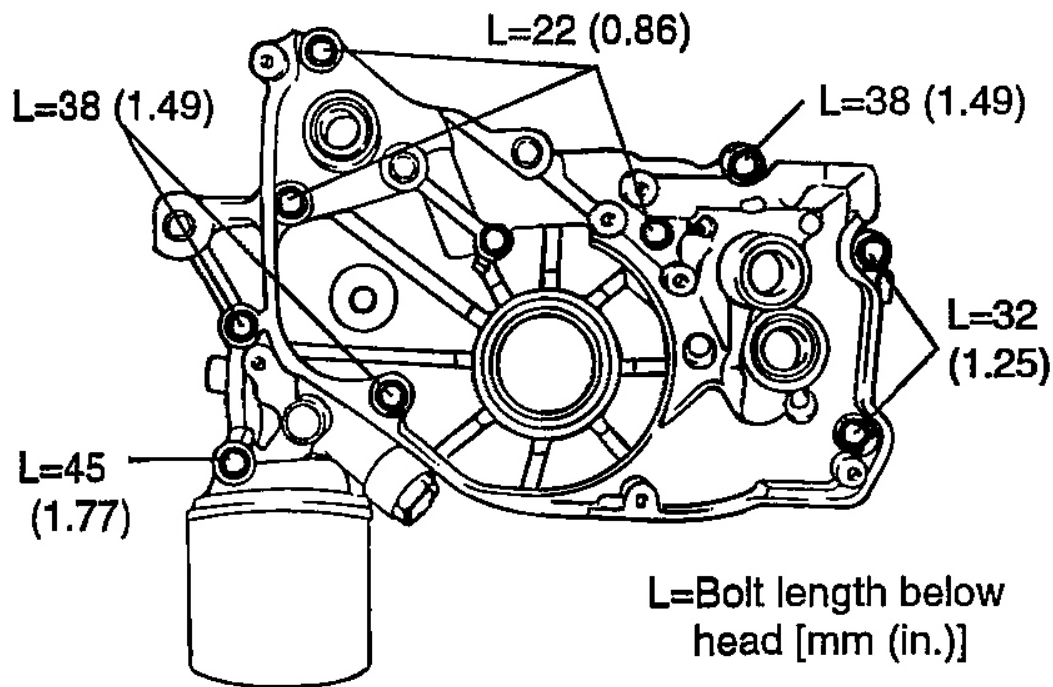

G00790030

**Fig. 86: Identifying Front Case Bolts**  
Courtesy of HYUNDAI MOTOR CO.


6. Insert a screw driver into the plug hole in left side of cylinder block. After verifying that the shaft is in the proper position, replace the bolt and tighten it.

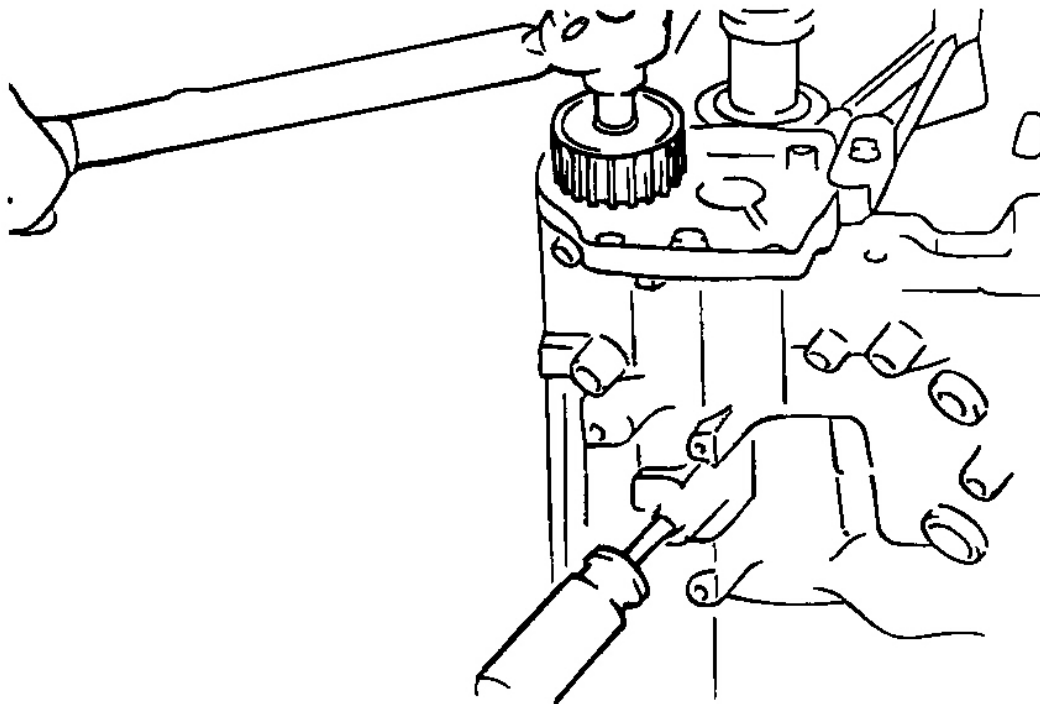

G00790031

**Fig. 87: Verifying Shaft Position**  
Courtesy of HYUNDAI MOTOR CO.

7. Install a new O-ring to the groove of the front case.
8. Using a special tool, install the plug case and tighten it to the specified torque.

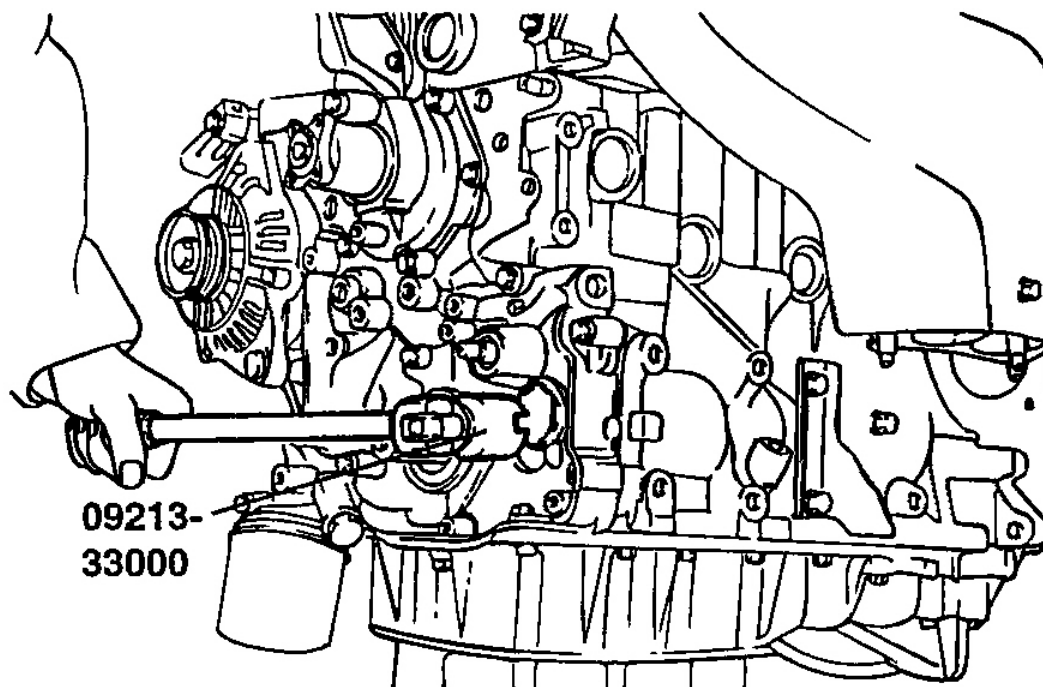

G00790032

**Fig. 88: Installing Plug Case**

Courtesy of HYUNDAI MOTOR CO.


**Plug cap**

Tightening torque : 20 ~ 27 Nm (200 ~ 270 kg.cm, 14 ~ 20 lb.ft)

9. Apply sealant to the groove of the pan flange as shown.

**NOTE:**

1. Apply sealant approximately 4 mm (0.16 in.) in thickness.
2. After the application of the sealant, install the oil pan within 15 minutes.

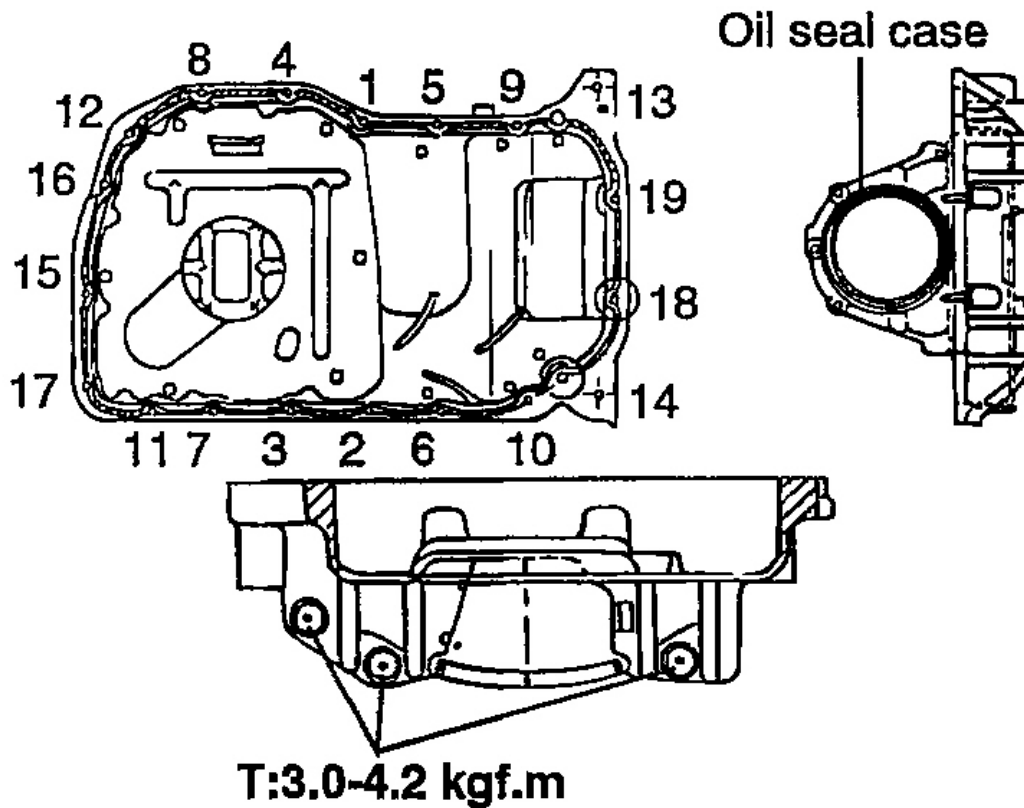

G00790033

**Fig. 89: Oil Pan Bolt Tightening Sequence**  
 Courtesy of HYUNDAI MOTOR CO.

10. Note the difference in bolt lengths at the locations shown.

Install the upper and lower oil pans and tighten the bolts to the specified torque.

#### **Tightening torque**

Oil pan bolt : 10 ~ 12 Nm (100 ~ 120 kg.cm, 7 ~ 9 lb.ft)

11. Using a 24 mm deep socket, install the oil pressure switch after applying sealant to the threaded area.


Sealant : Threebond 1104 or equivalent

**NOTE:** Do not torque the oil pressure switch excessively.

**Tightening torque**

Oil pressure switch :


8 ~ 12 Nm (80 ~ 120 kg.cm, 6 ~ 9 lb.ft)

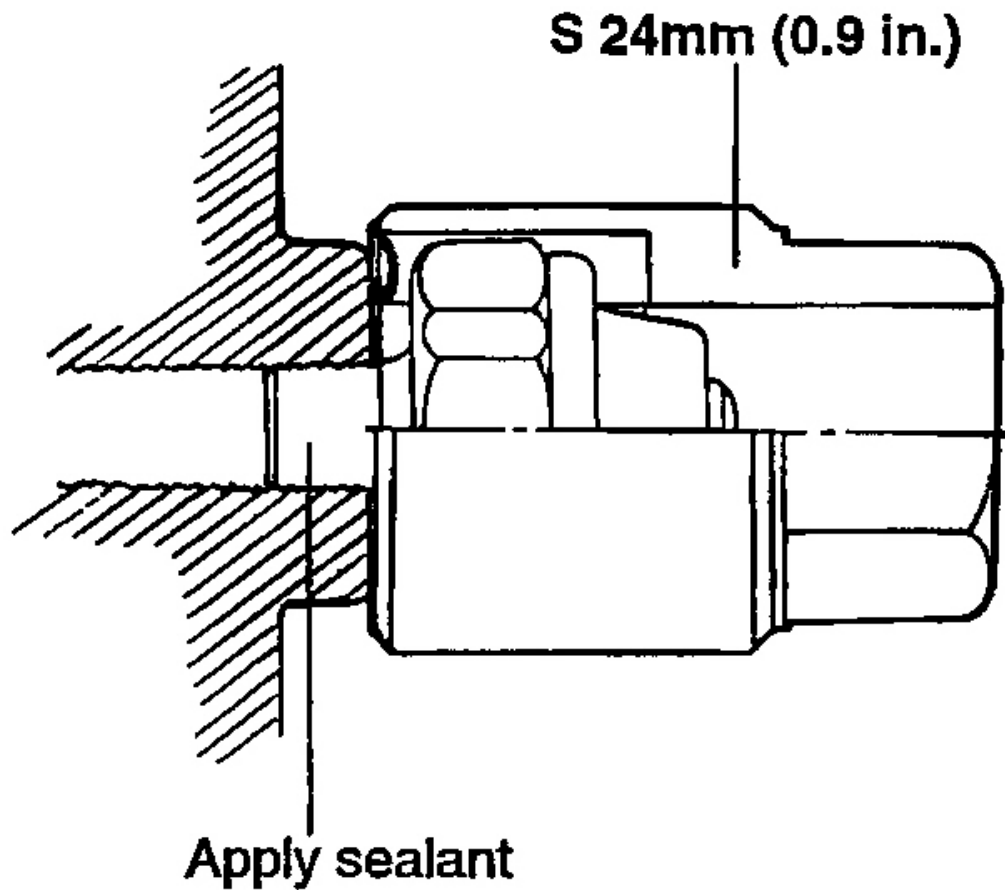

G00790034

**Fig. 90: Installing Oil Pressure Switch**  
Courtesy of HYUNDAI MOTOR CO.

**MAIN MOVING SYSTEM****CAMSHAFT****Components**

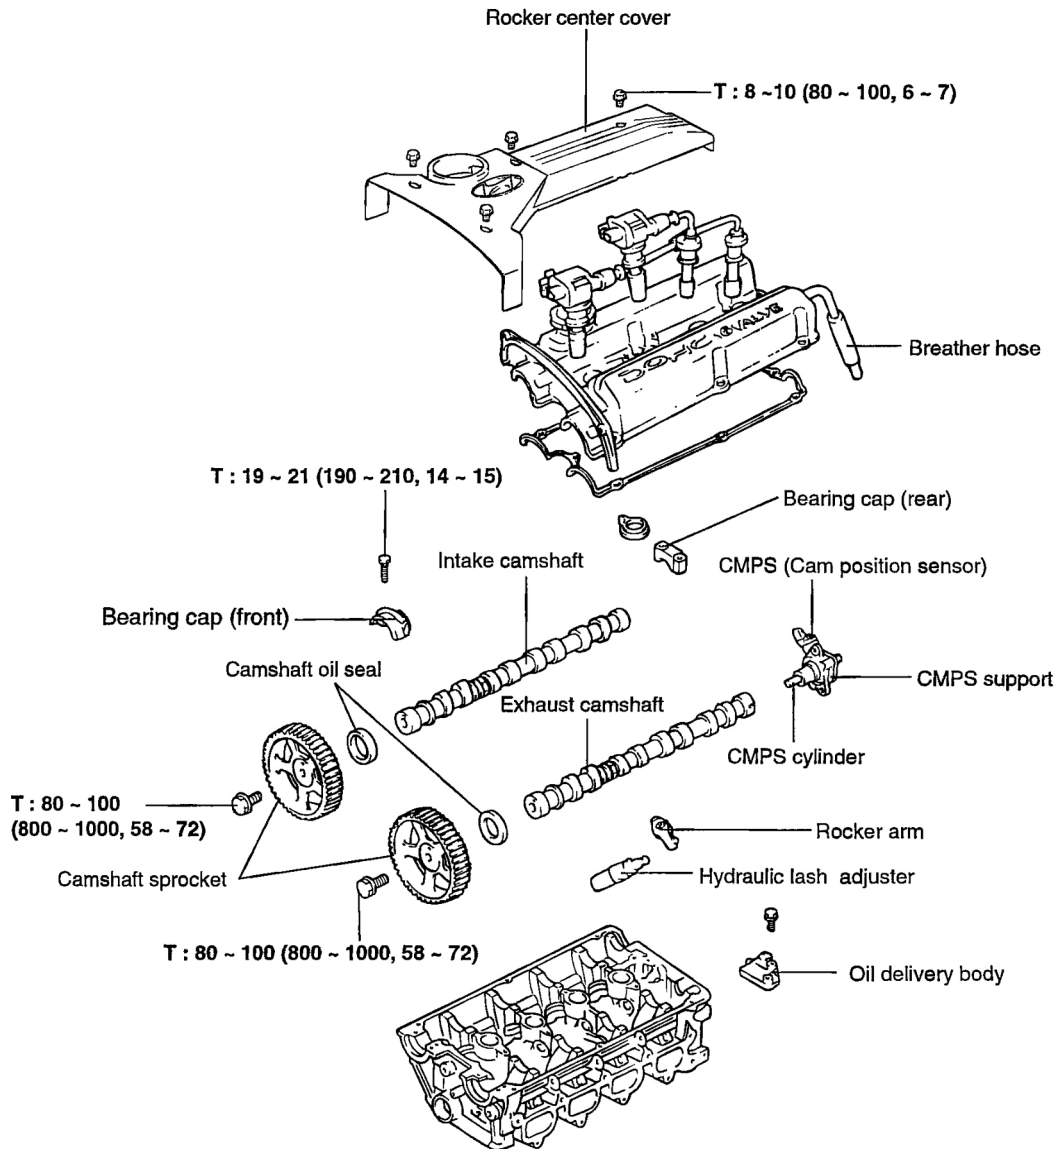

**TORQUE : Nm (kg.cm, lb.ft)**

G00790035


**Fig. 91: Camshaft Components**  
Courtesy of HYUNDAI MOTOR CO.

### Disassembly

1. Disconnect the negative terminal from the battery.
2. Drain the engine coolant.
3. Remove the breather hose between the air cleaner and the rocker cover.
4. Remove the air cleaner.

5. Remove the timing belt cover.
6. Remove the rocker cover and camshaft position sensor.
7. Loosen the camshaft sprocket bolts then remove the camshaft sprockets.
8. Loosen the camshaft bearing cap bolts and remove the bearing caps, camshafts, rocker arms and lash adjusters.

**CAUTION: Loosen the cap bolts in increments to avoid bending the camshafts.**

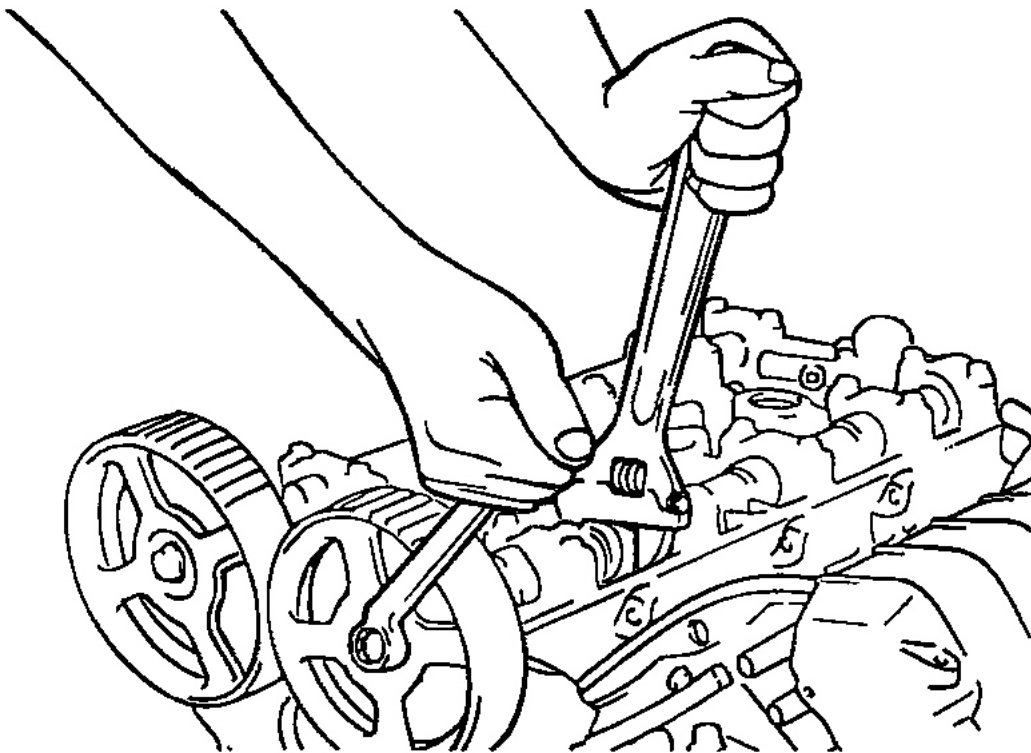

G00790036


**Fig. 92: Loosening Camshaft Sprocket Bolt**  
Courtesy of HYUNDAI MOTOR CO.

#### **Inspection**

##### **Rocker Arms**

1. Check rotation of the roller. If they do not rotate smoothly or are loose, replace them.
2. Check the roller surface. Replace if there is any dent, damage or evidence of seizure.

3. Check the valve contact surface for possible damage or evidence of seizure. Replace if necessary.

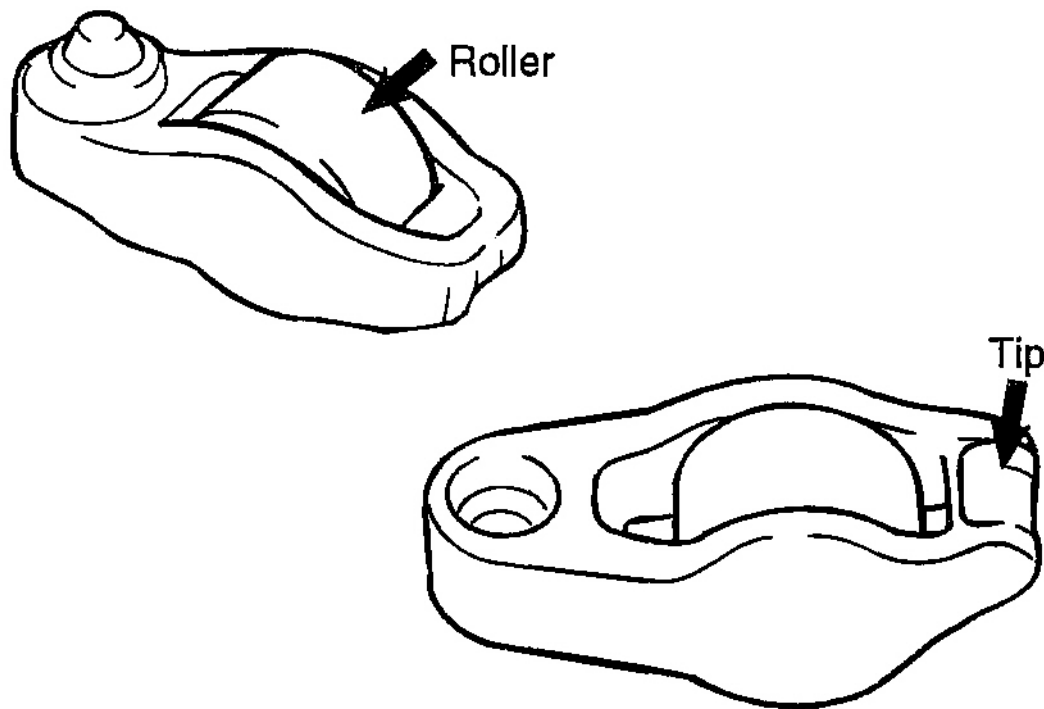

G00790037

**Fig. 93: Identifying Rocker Arms**  
Courtesy of HYUNDAI MOTOR CO.

#### CAMSHAFTS

1. Check the camshaft journals for wear. If the journals are badly worn, replace the camshaft.
2. Check the cam lobes for damage. If the lobe is damaged or worn excessively, replace the camshaft.

#### Cam height

[Standard]

Intake : 35.493 mm (1.3974 in.)


Exhaust : 35.317 mm (1.3904)

[Limit]



Intake : 34.993 mm (1.3776 in.)

Exhaust : 34.817 mm (1.3707 in.)

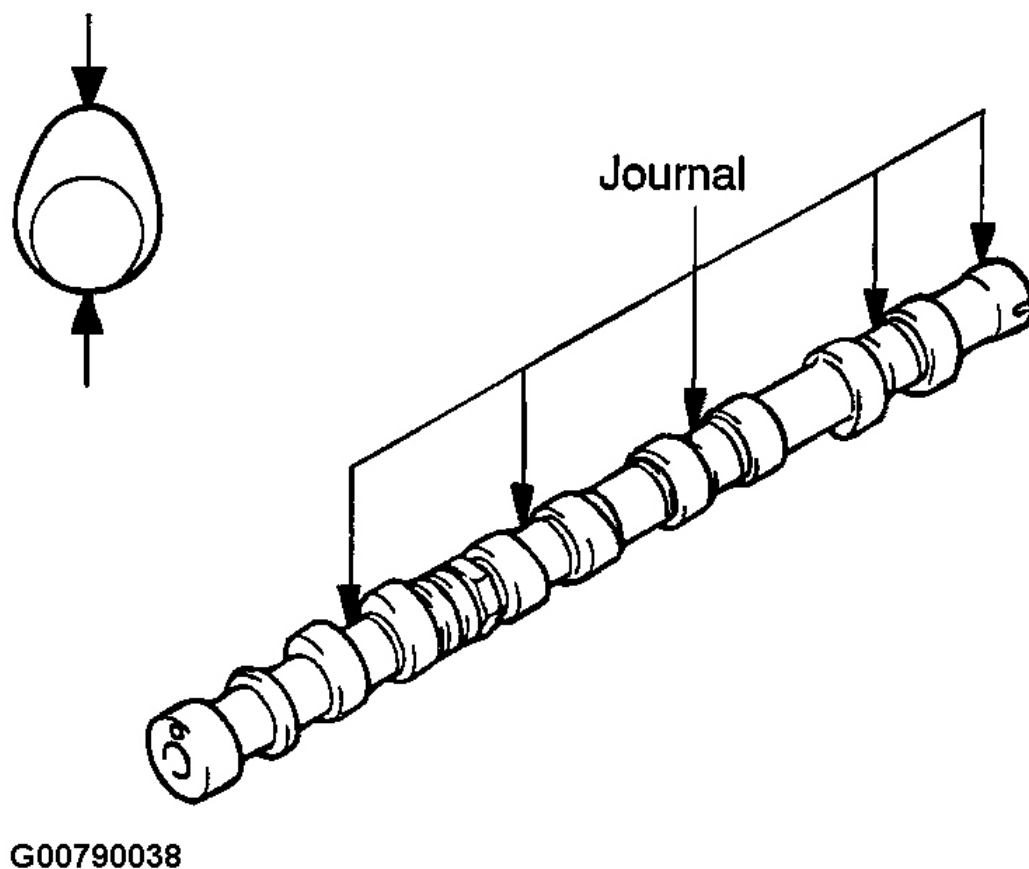

G00790038


**Fig. 94: Identifying Camshaft Journals & Lobes**  
Courtesy of HYUNDAI MOTOR CO.

#### Reassembly

1. Install the camshafts on the cylinder head. Do not install the rocker arms yet.

#### NOTE:


1. Apply engine oil to journals and cams of the camshafts.
2. The exhaust camshaft has a slit on its rear end for the crankshaft position sensor.

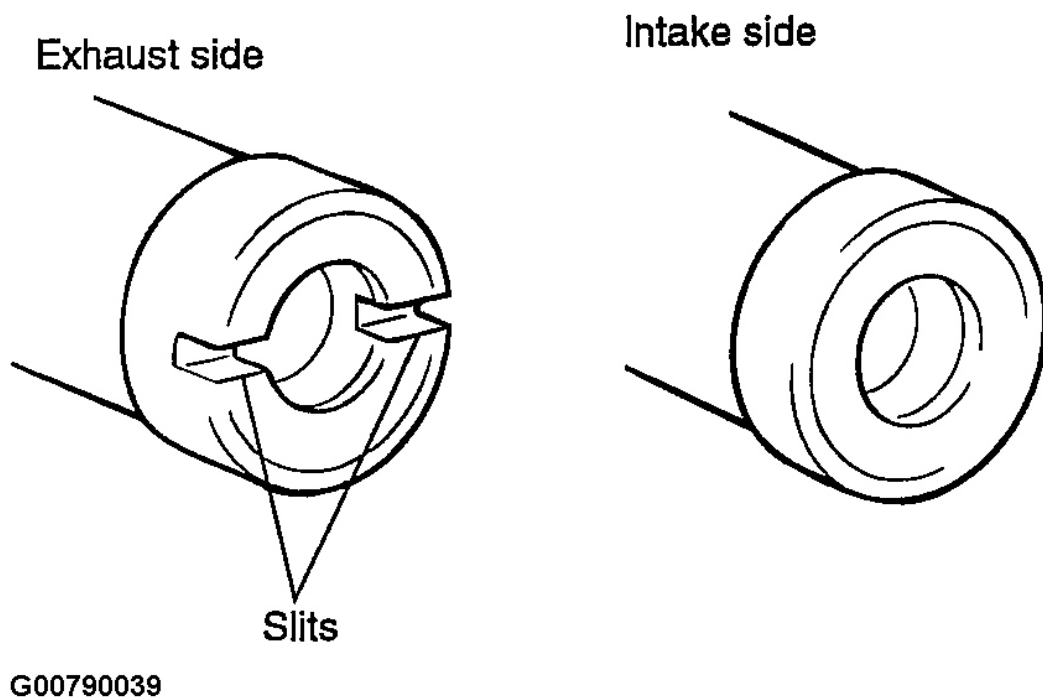

**Fig. 95: Identifying Camshafts**  
Courtesy of HYUNDAI MOTOR CO.


2. Install the bearing caps. The markings on the caps are for intake/exhaust identification.

I : Intake camshaft. E : Exhaust camshaft

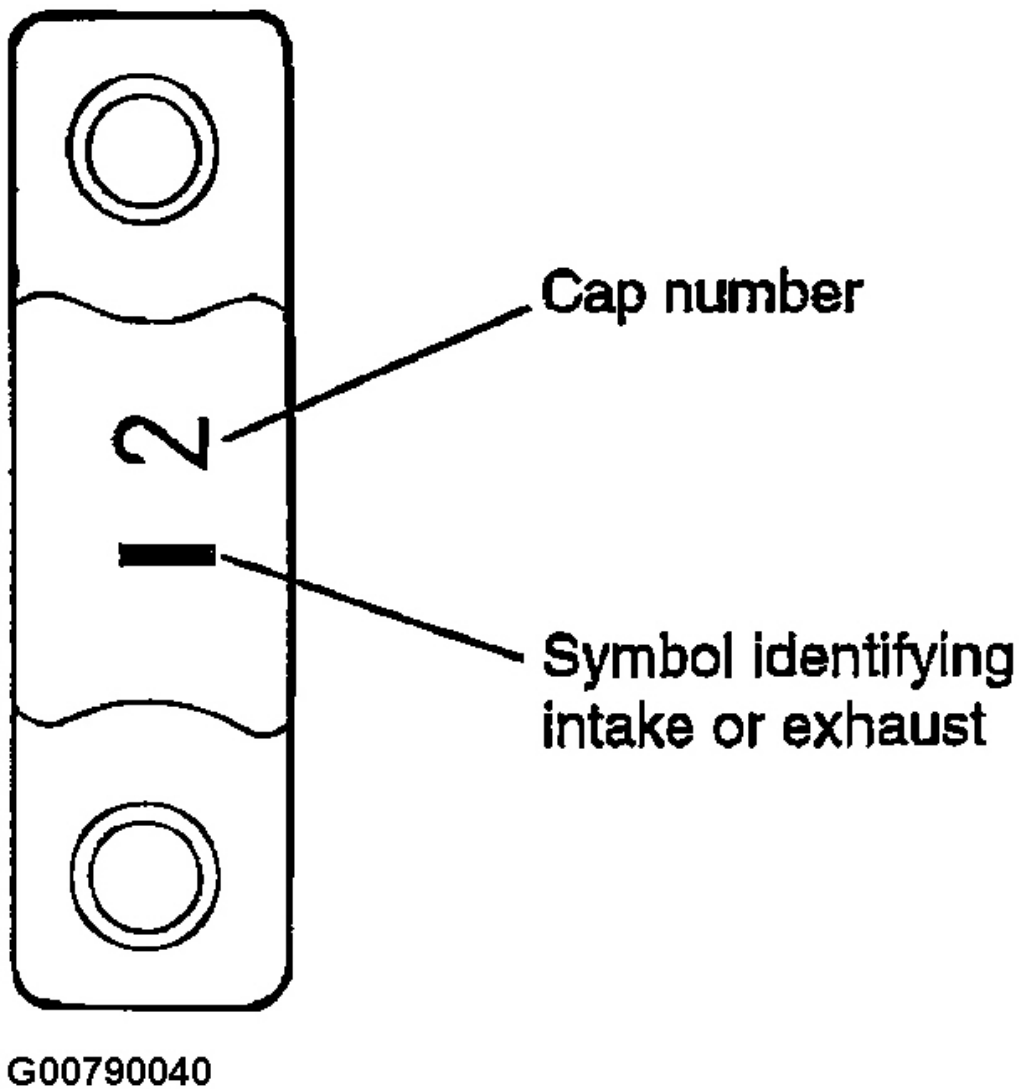

**Fig. 96: Identifying Camshaft Bearing Caps**  
Courtesy of HYUNDAI MOTOR CO.


3. Check that the camshaft can be easily turned by hand. After checking, remove the bearing caps and the camshafts, and then install the rocker arms.

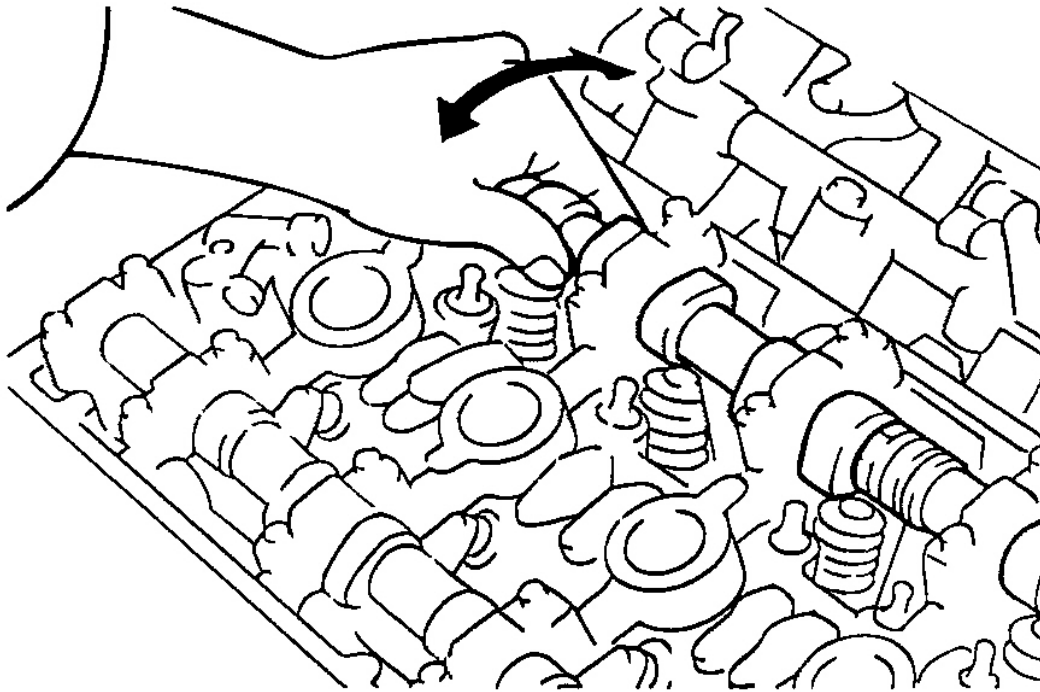

G00790041

**Fig. 97: Checking Rotational Force Of Camshaft**  
Courtesy of HYUNDAI MOTOR CO.

4. Make sure that the dowel pins on the camshaft sprocket ends are located on the top.

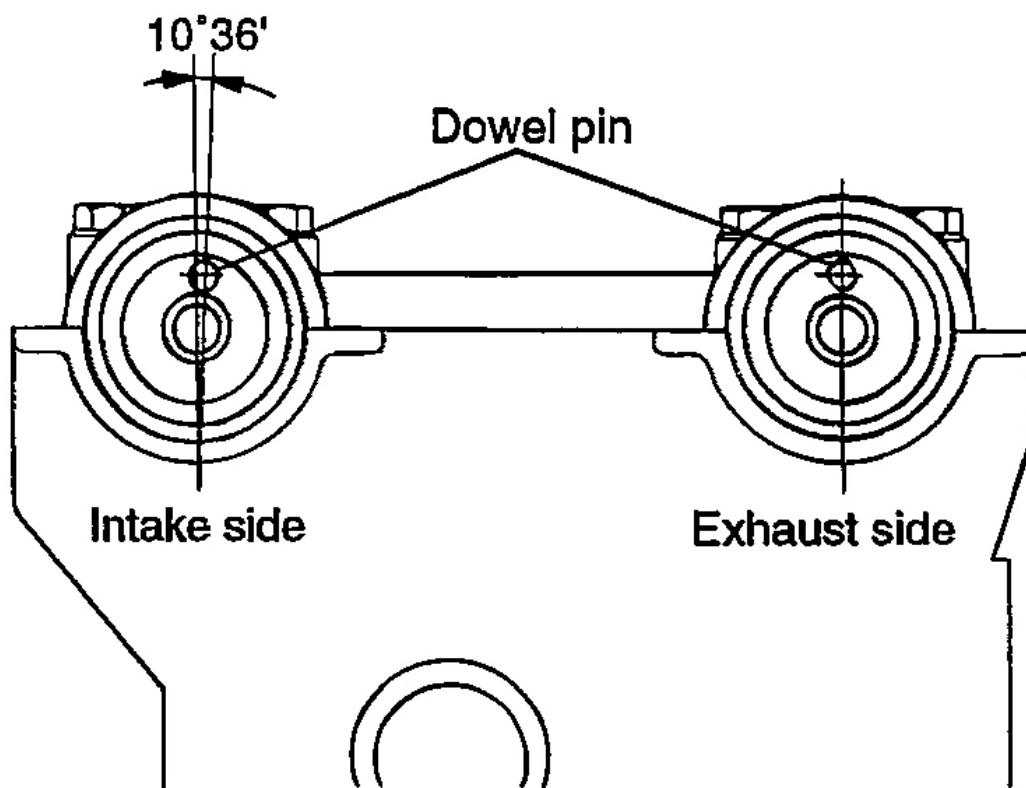

G00790042

**Fig. 98: Identifying Dowel Pins**

Courtesy of HYUNDAI MOTOR CO.


5. Tighten the bearing caps to the specified torque in two or three increments as shown.

**NOTE:** Tighten the rocker arms uniformly.

**Tightening torque**

Bearing cap bolts :

19 ~ 21 Nm (190 ~ 210 kg.cm, 14 ~ 15 lb.ft)

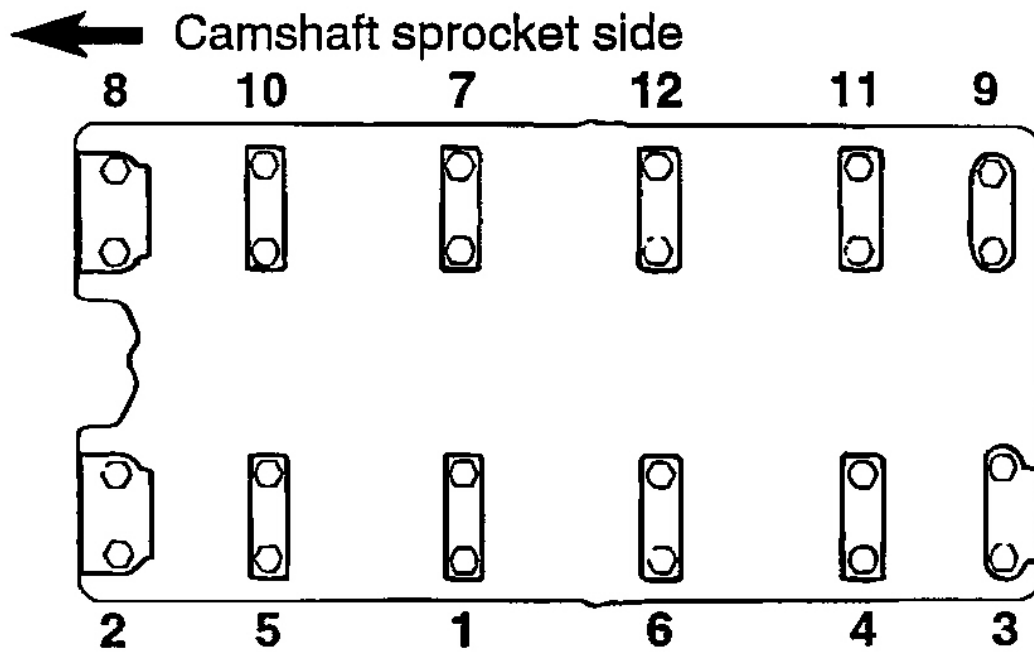


G00790043

**Fig. 99: Identifying Camshaft Bearing Cap Tightening Sequence**

Courtesy of HYUNDAI MOTOR CO.

6. Using the special tools, camshaft oil seal Installer and guide (09221-21000, 09221-21100). Be sure to apply engine oil to the external surface of the oil seal.

Insert the oil seal along the camshaft front end and install it by driving the installer with a hammer until the oil seal is fully seated.

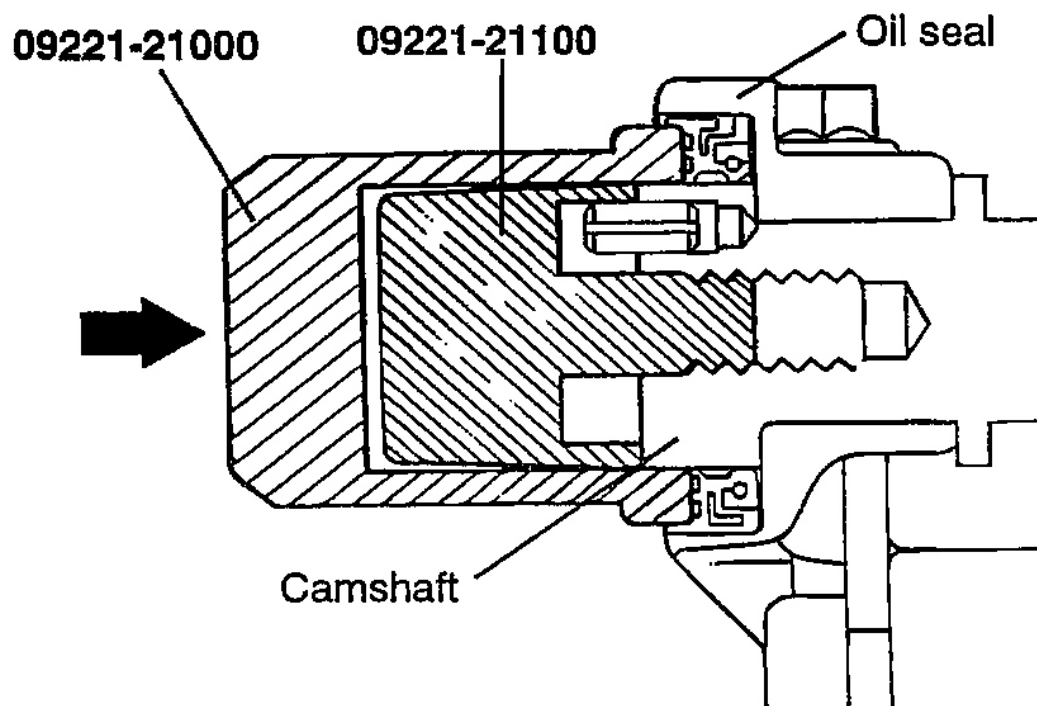

G00790044


**Fig. 100: Installing Camshaft Oil Seal**  
Courtesy of HYUNDAI MOTOR CO.

7. Install the camshaft sprocket bolts to the specified torque.

**Tightening torque**

Camshaft sprocket bolts :


80 ~ 100 Nm (800 ~ 1000 kg.cm, 58 ~ 72 lb.ft)

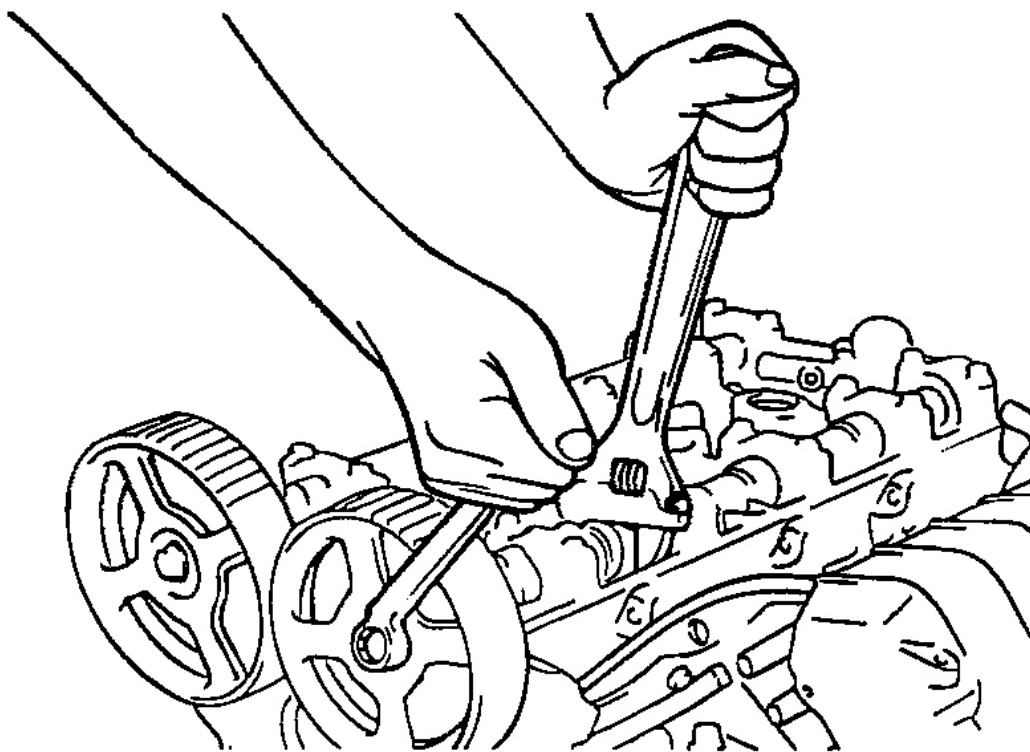

G00790045

**Fig. 101: Tightening Camshaft Sprocket**  
Courtesy of HYUNDAI MOTOR CO.



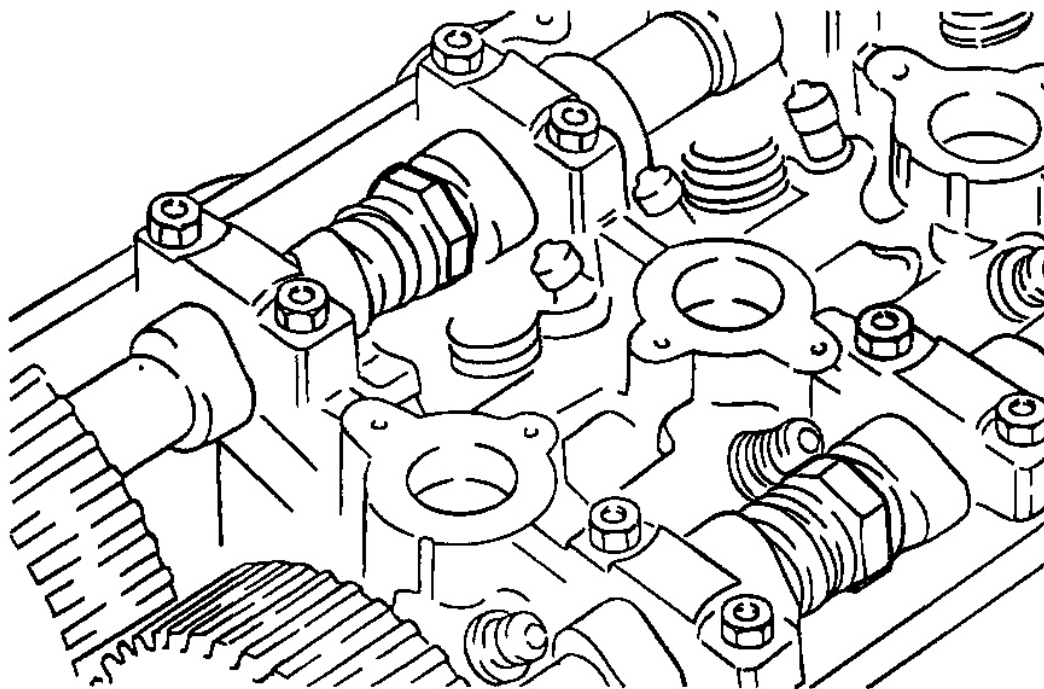

G00790046

**Fig. 102: View Of Camshafts**

Courtesy of HYUNDAI MOTOR CO.

8. Install the rocker cover. Apply sealant as shown.

**Tightening torque**


Rocker cover bolts : 8 ~ 10 Nm (80 ~ 100 kg.cm, 6 ~ 7 lb.ft)

Center cover bolts : 4 ~ 5 Nm (40 ~ 50 kg.cm, 3 ~ 4 lb.ft)

**Sealant**

A Portion : Threebond No. 10 or equivalent

B Portion : Threebond No. 1212D or equivalent

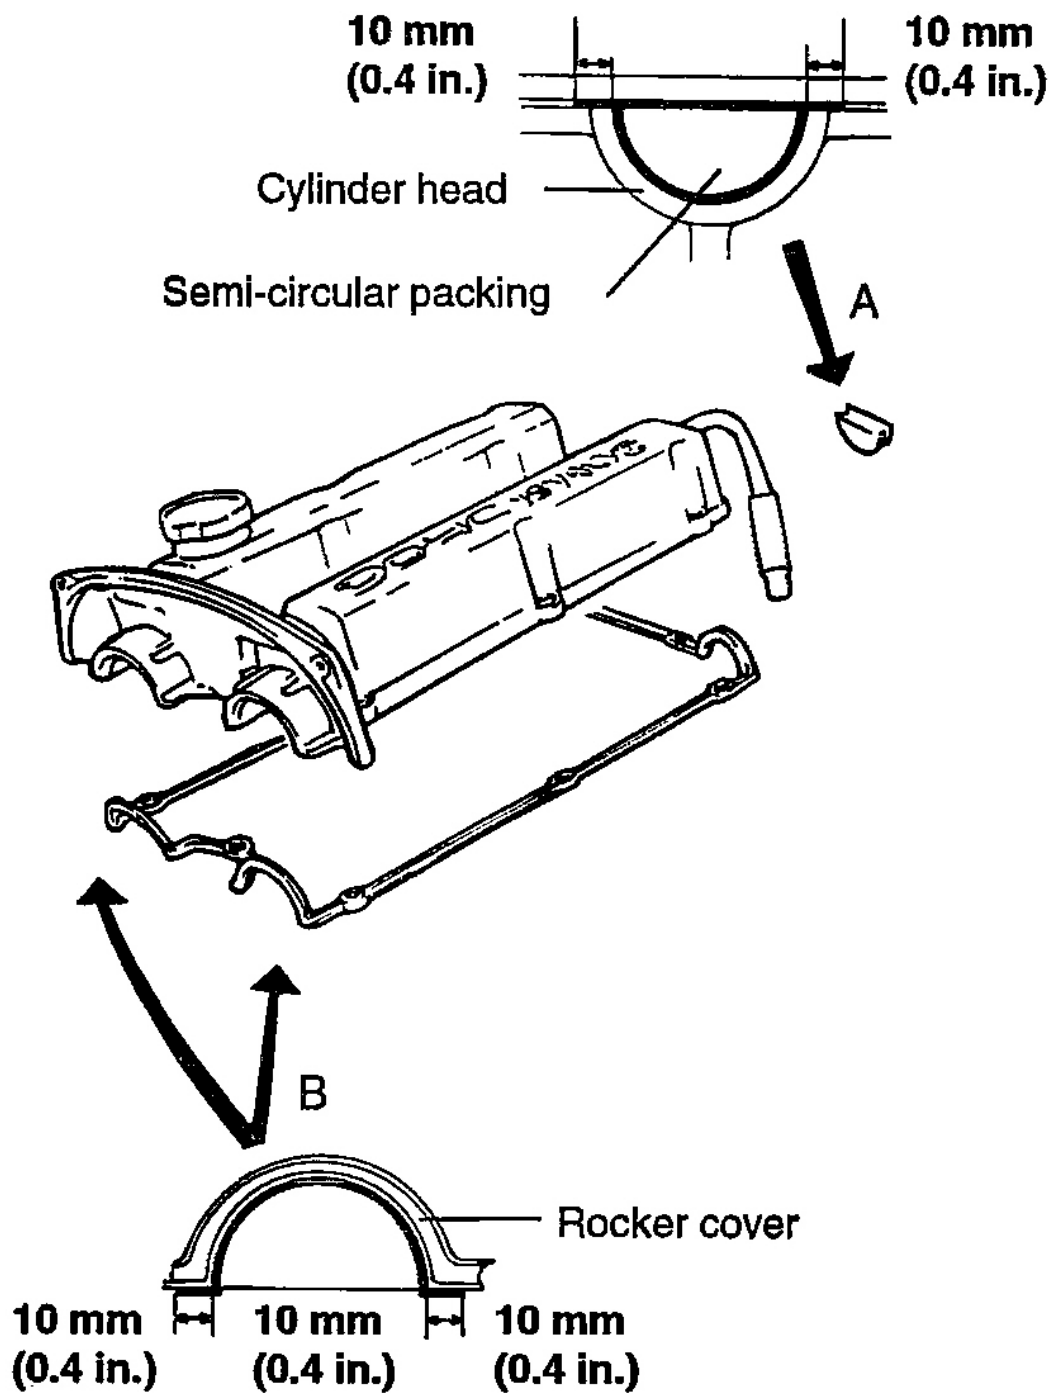


G00790047

**Fig. 103: Identifying Rocker Cover**  
 Courtesy of HYUNDAI MOTOR CO.

**Bolt**

A : 13EA (Rocker cover bolts)


B : 4EA (Center cover bolts)

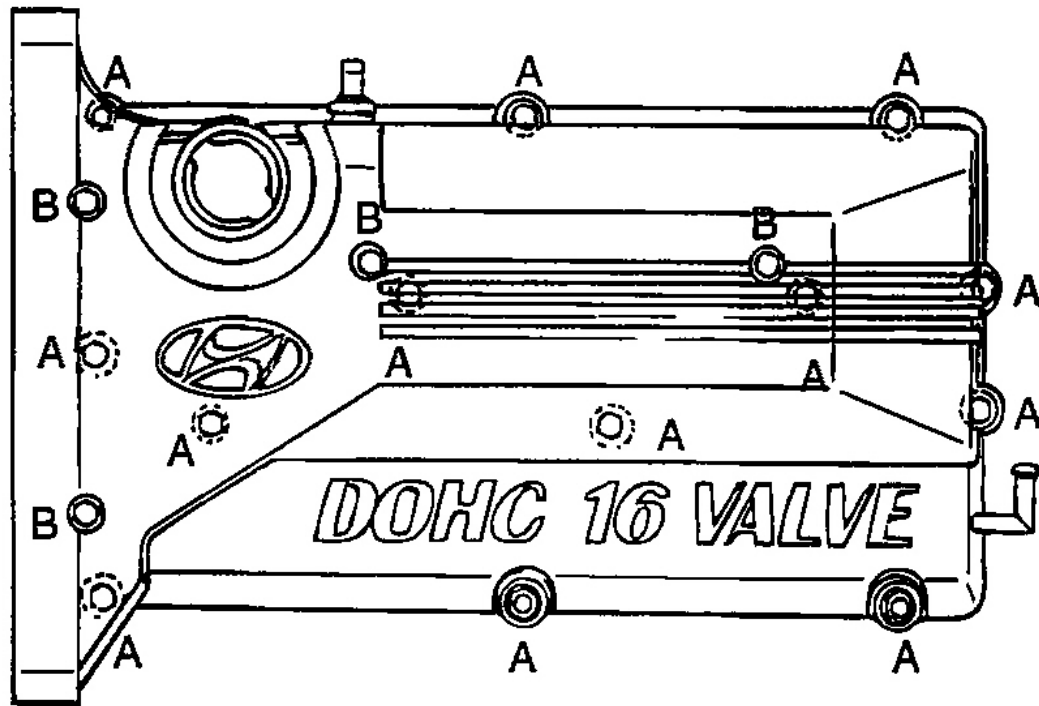

G00790048

**Fig. 104: Identifying Rocker Cover Bolts**  
Courtesy of HYUNDAI MOTOR CO.


9. Install the spark plugs, and ignition coils. Connect the secondary wires and then install the center cover.

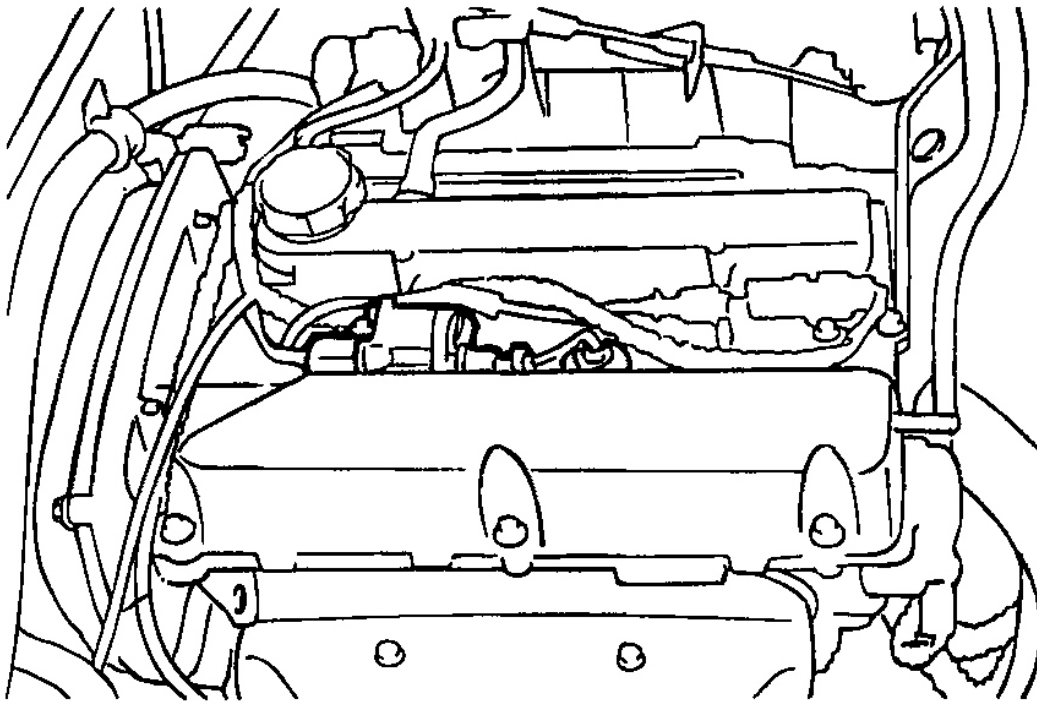

G00790049

**Fig. 105: View Of Rocker Cover Installed**  
Courtesy of HYUNDAI MOTOR CO.


10. Install the dowel pin on the sprocket side of the intake cam shaft.

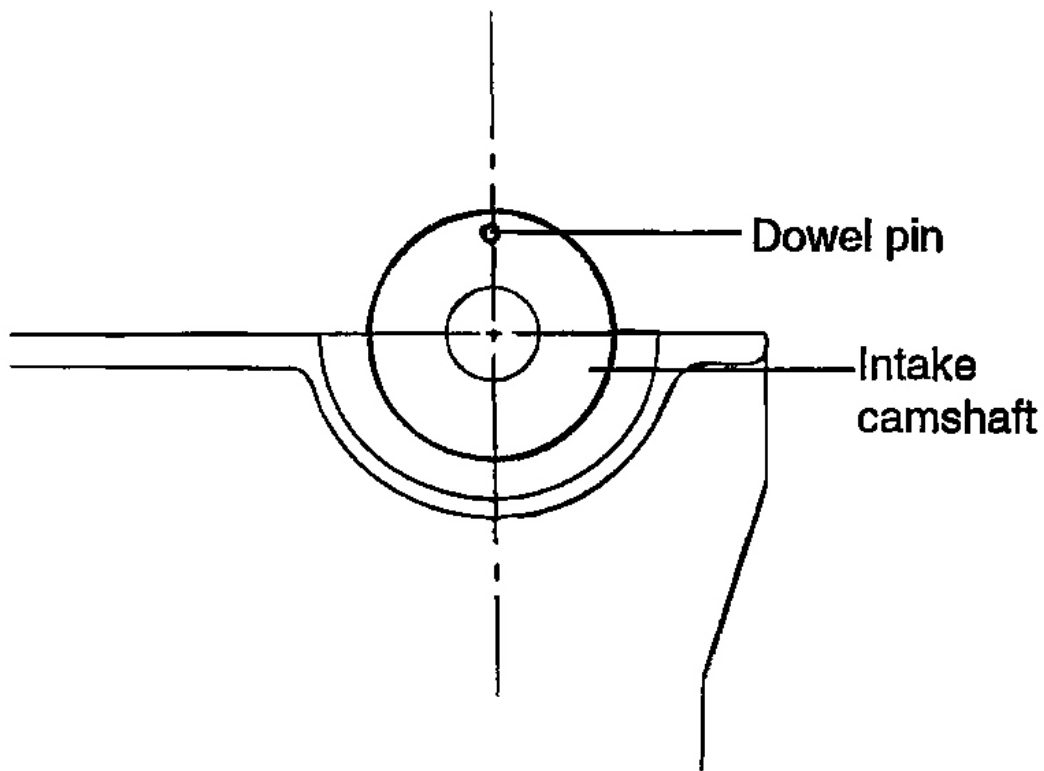

G00790050

**Fig. 106: Identifying Dowel Pin**  
Courtesy of HYUNDAI MOTOR CO.

11. Install the cam position sensor support assembly after installing the cam position sensor cylinder on the exhaust camshaft.

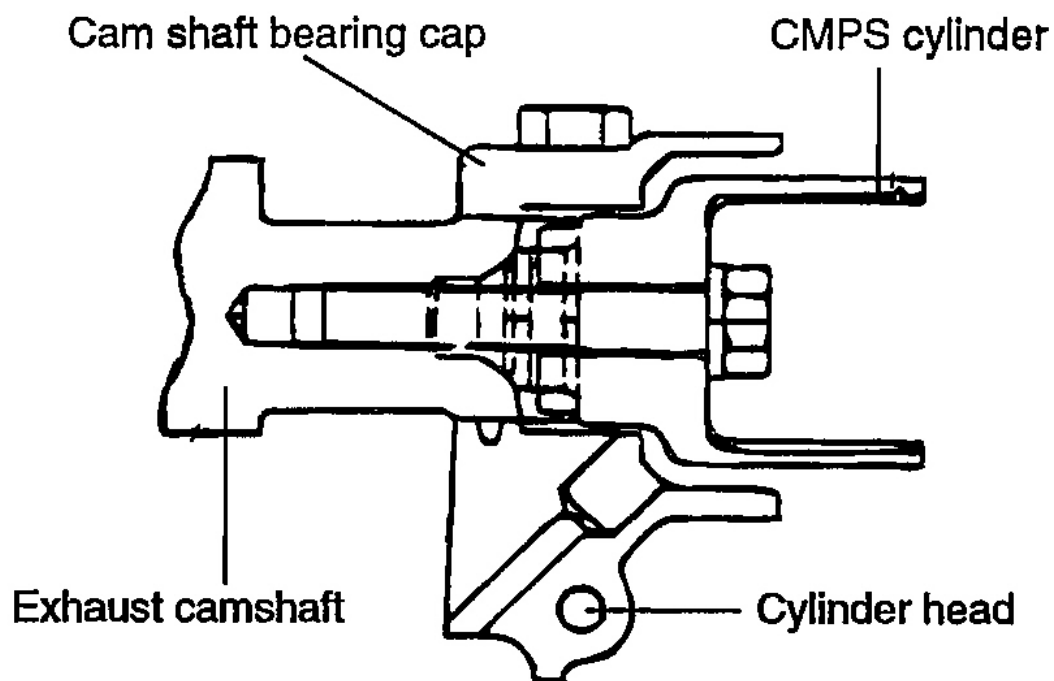


G00790051

**Fig. 107: View Cam Position Sensor Support Assembly**  
Courtesy of HYUNDAI MOTOR CO.

## PISTON

### Components

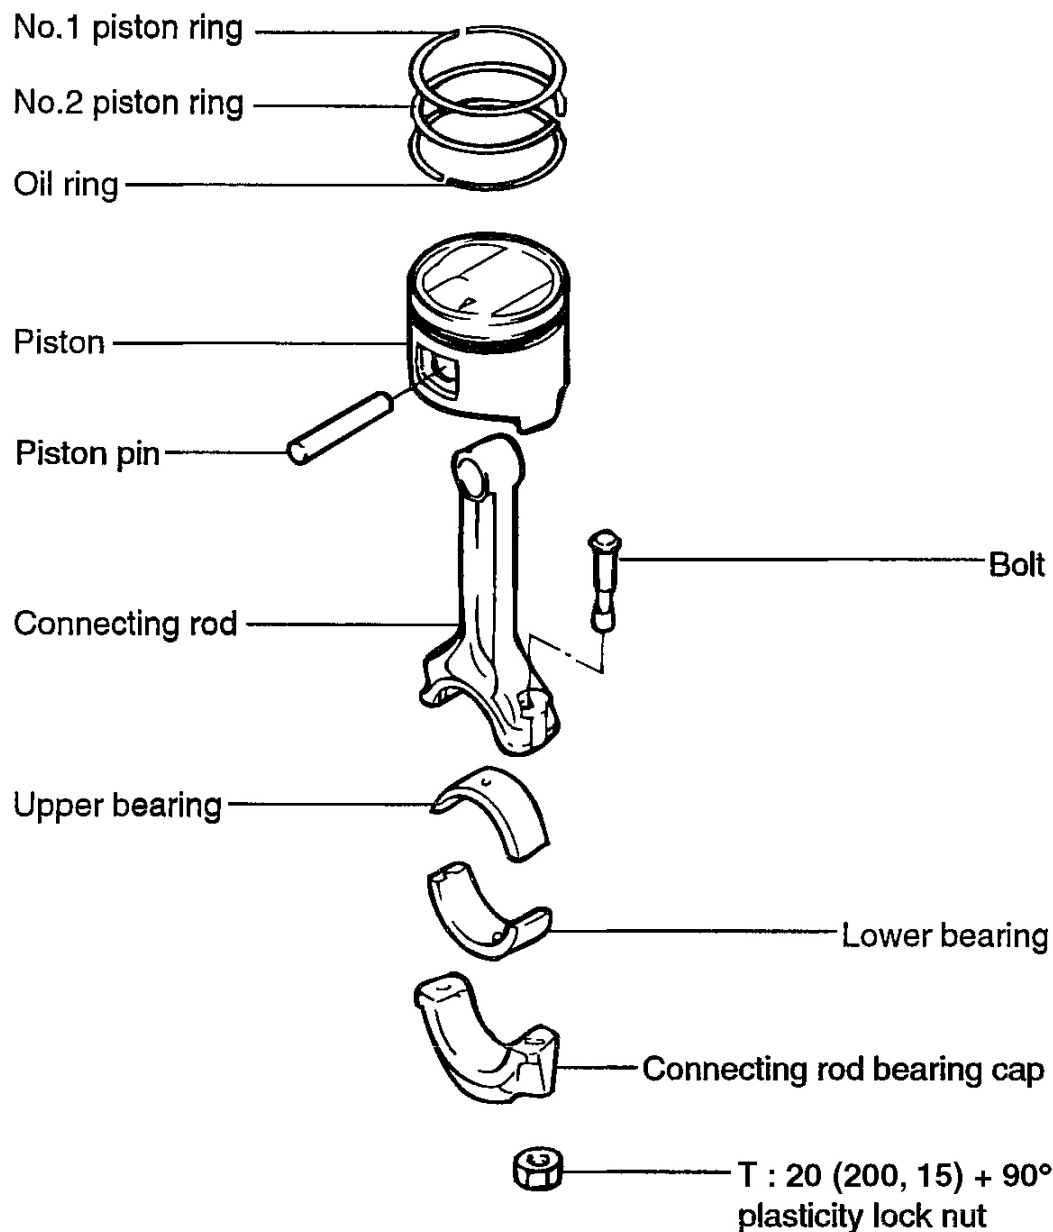

**TORQUE : Nm (kg.cm, lb.ft)**

G00790052

**Fig. 108: Piston Components**


Courtesy of HYUNDAI MOTOR CO.

Disassembly

Connecting Rod Cap

**NOTE:** Keep the bearings in order with their corresponding connecting rods (according to cylinder numbers) for proper reassembly.

1. Remove the connecting rod cap nuts and then remove the caps and the big end lower bearing. Mark for reassembly.
2. Push each piston-connecting rod assembly toward the top of the cylinder.

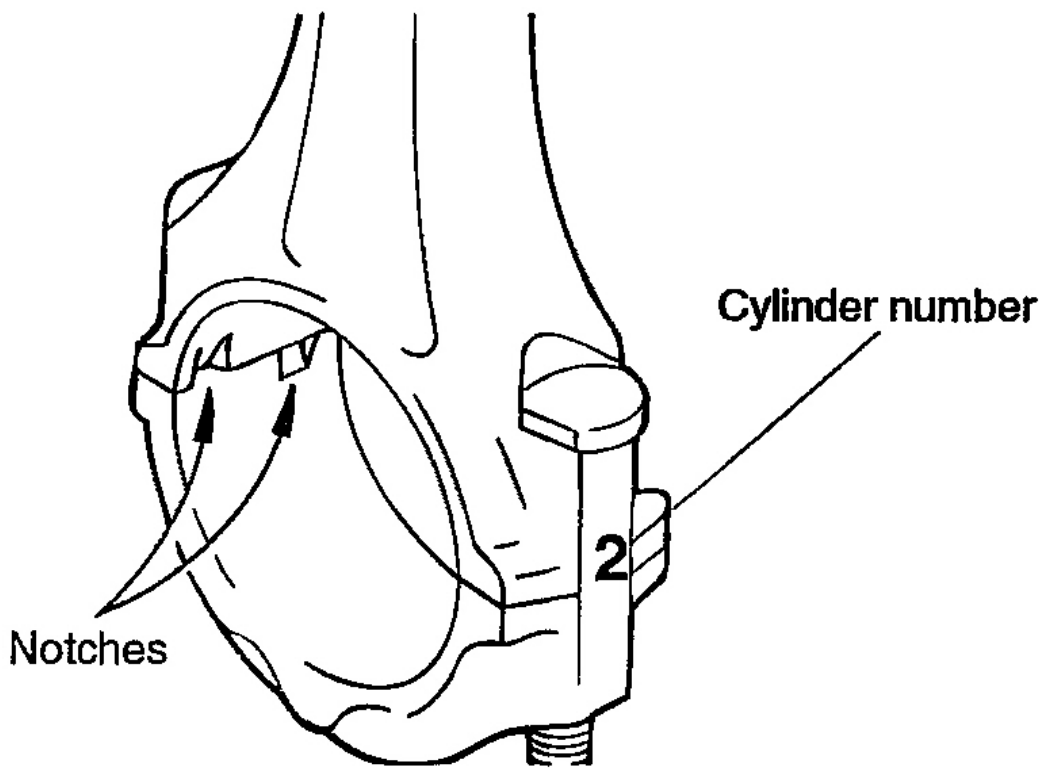


G00790053

**Fig. 109: Identifying Connecting Rod Bearing Notches**  
Courtesy of HYUNDAI MOTOR CO.

#### Disassembly & Reassembly Of Piston Pin

1. Use the special tools 09234 - 33001 and 09234 - 33002, disassemble and reassemble the piston and connecting rod.




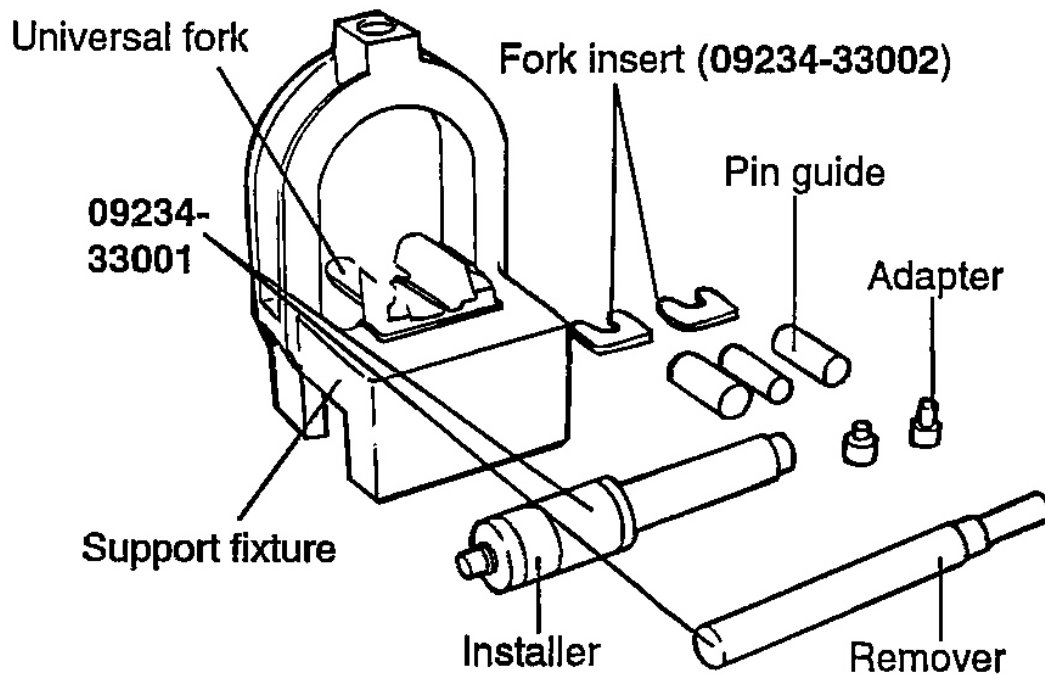

G00790054

**Fig. 110: Identifying Special Tools**  
Courtesy of HYUNDAI MOTOR CO.

2. The piston pin is a press fit in the rod little end, and the piston floats on the pin.
3. The tool consists of a support fixture with fork inserts, guides, adapters, an installer and a remover. The piston is supported in the support fixture while the pin is being installed or removed. Guides help position the pin as it is installed or removed, while the rod is supported by fork inserts.
4. To remove the pin from the piston, place the piston in the support fixture while the rod resting on the fork inserts. Pass the remover tool through the top of the support fixture and use it to press out the pin.

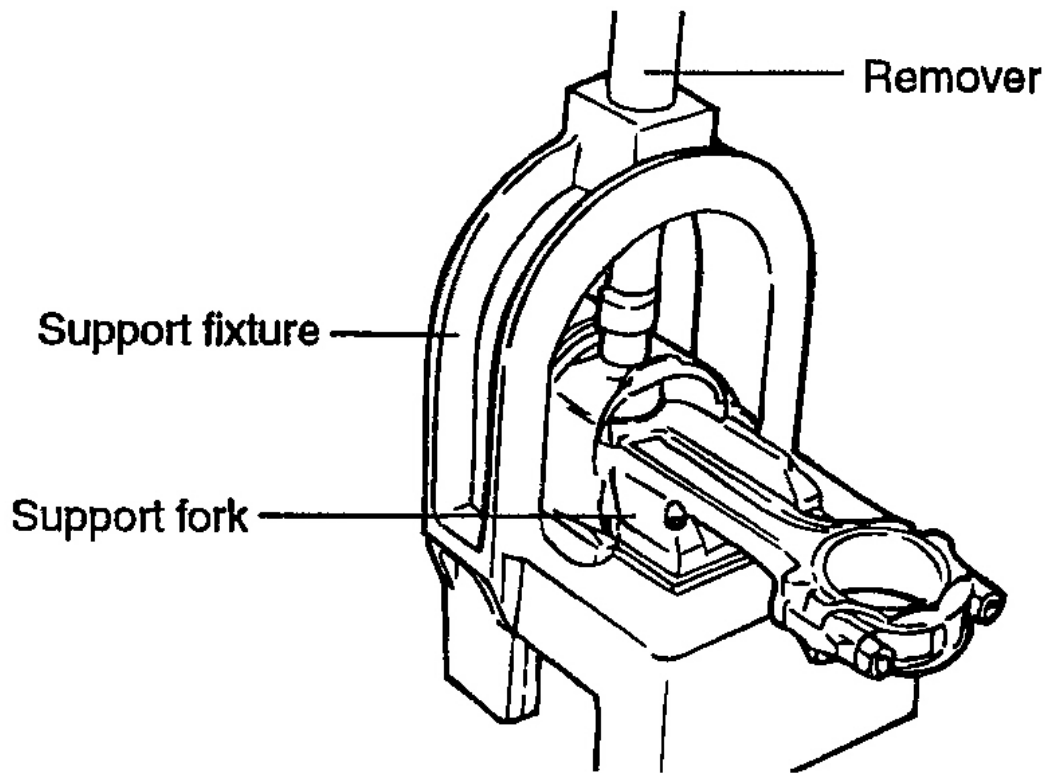


G00790055

**Fig. 111: Removing Piston Pin**  
Courtesy of HYUNDAI MOTOR CO.

5. To install a new pin, the proper fork inserts must be in place to support the rod.
6. Position the rod inside the piston. Insert the proper pin guide through on side of the piston and through the rod. Hand tap the pin guide so it is held by the piston. Insert the new pin into the piston from the other side and set the assembly into the support fixture with the pin guide facing down.

**NOTE:** The pin guide should be centered on the connecting rod though the piston. If assembled correctly, the pin guide will sit exactly under the center of the hole in the tool's arch, and rest evenly on the fork inserts. If the wrong size pin guide is used, the piston and pin will not line up with the support fixture.

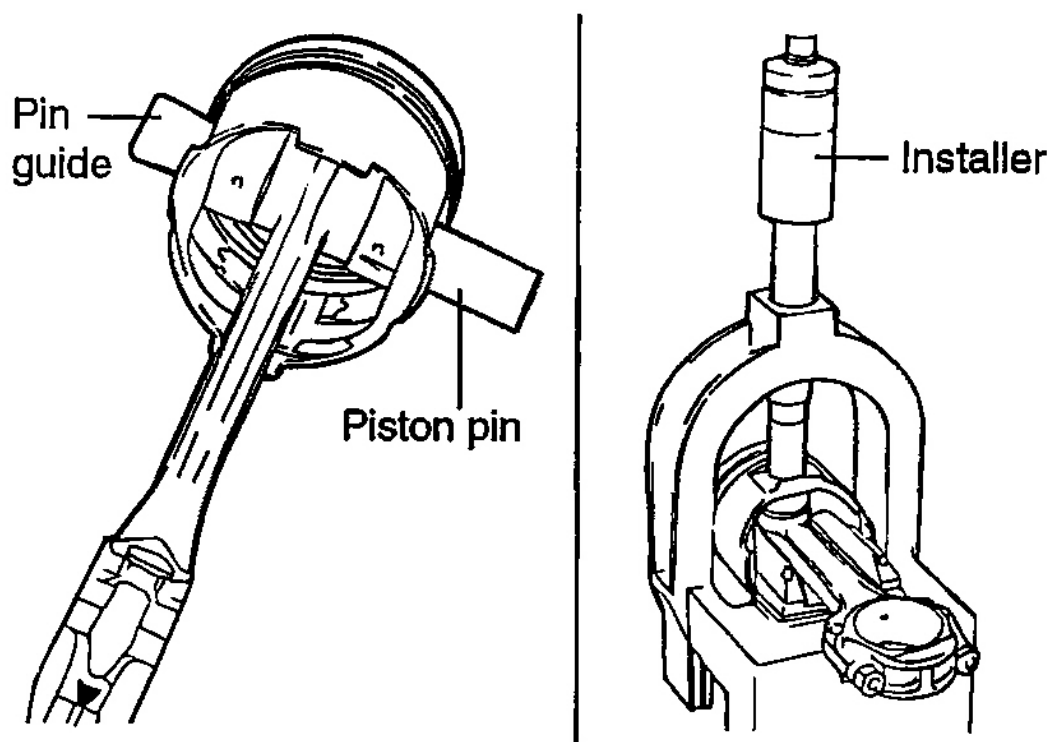


G00790056

**Fig. 112: Installing Piston Pin**  
Courtesy of HYUNDAI MOTOR CO.

7. Insert the installer tool through the hole in the arch of the support fixture and use an hydraulic press to force the piston pin through the rod little end. Continue pressing until the pin guide falls free and the installer tool seats against the top of the arch.

**CAUTION: Do not exceed 1250 +/- 500 kg (2756 +/- 1102 lb) of force when stopping the installing arbor sleeve against the arch.**

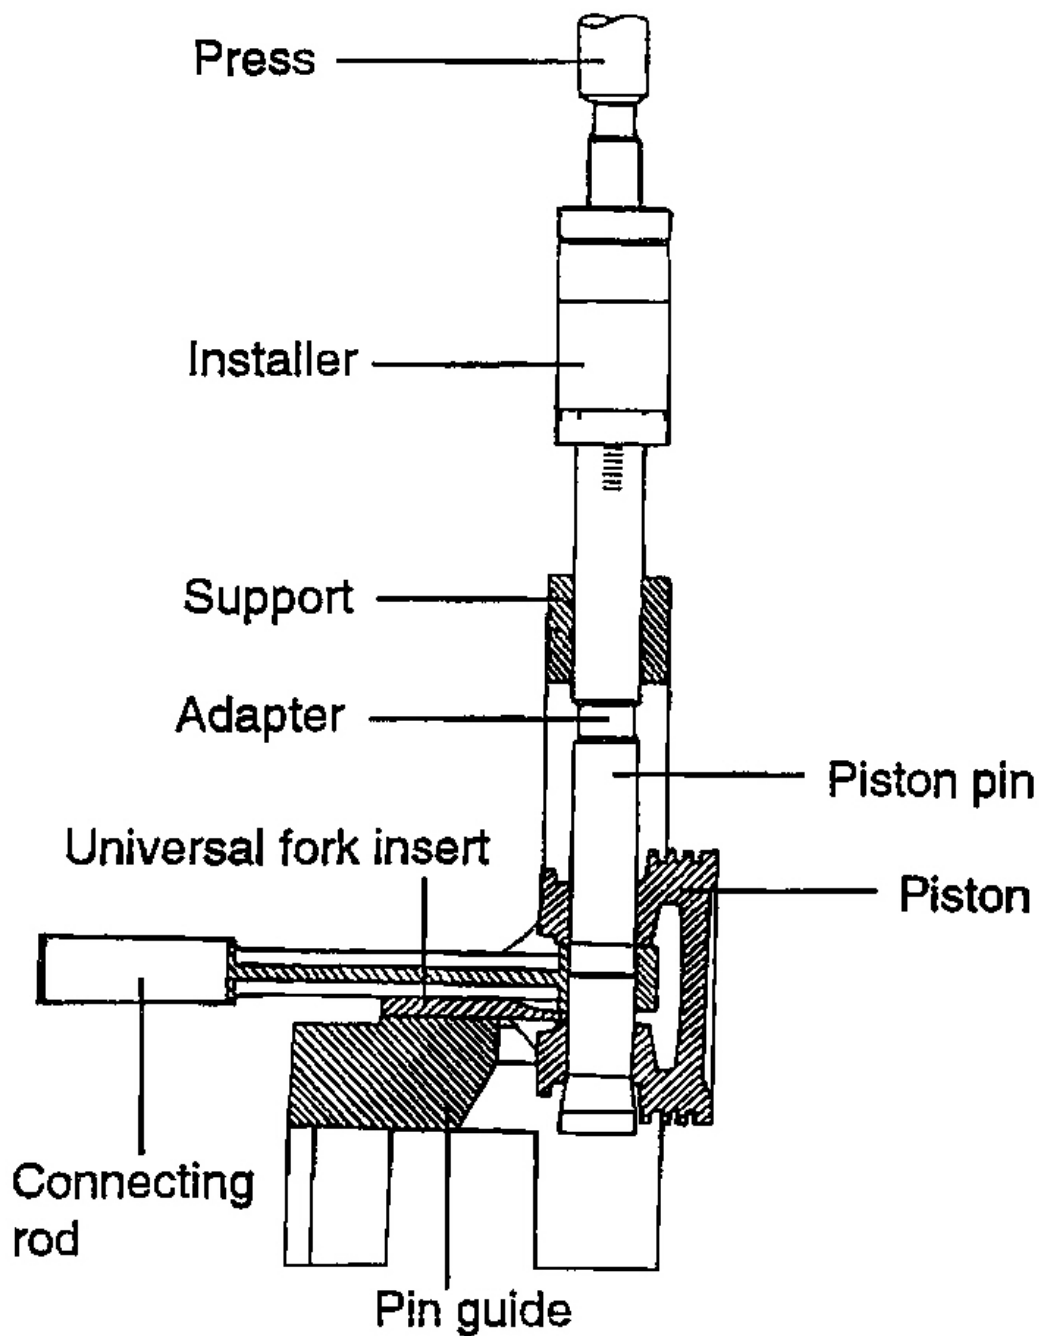

G00790057

**Fig. 113: Installing Piston Pin**  
 Courtesy of HYUNDAI MOTOR CO.

**Inspection****Piston & Piston Pins**

1. Check each piston for scuffing, scoring, wear and other defects. Replace any piston that is defective.
2. Check each piston ring for breakage, damage and abnormal wear. Replace the defective rings. When the piston requires replacement, its rings should also be replaced.
3. Check that the piston pin fits in the piston pin hole. Replace any piston and pin assembly that is defective. The piston pin must be smoothly pressed by hand into the pin hole (at room temperature).

**Piston Rings**

1. Measure the piston ring side clearance. If the measured value exceeds the service limit, insert a new ring in a ring groove to measure the side clearance. If the clearance still exceeds the service limit, replace the piston and rings together. If it is less than the service limit, replace only the piston ring only.


**Standard value**

Piston ring side clearance :

No. 1 : 0.03 ~ 0.07 mm (0.0012 ~ 0.0028 in.)

No. 2 : 0.02 ~ 0.06 mm (0.0008 ~ 0.0024 in.)

Oil ring : 0.06 ~ 0.15 mm (0.0024 ~ 0.0059 in.)

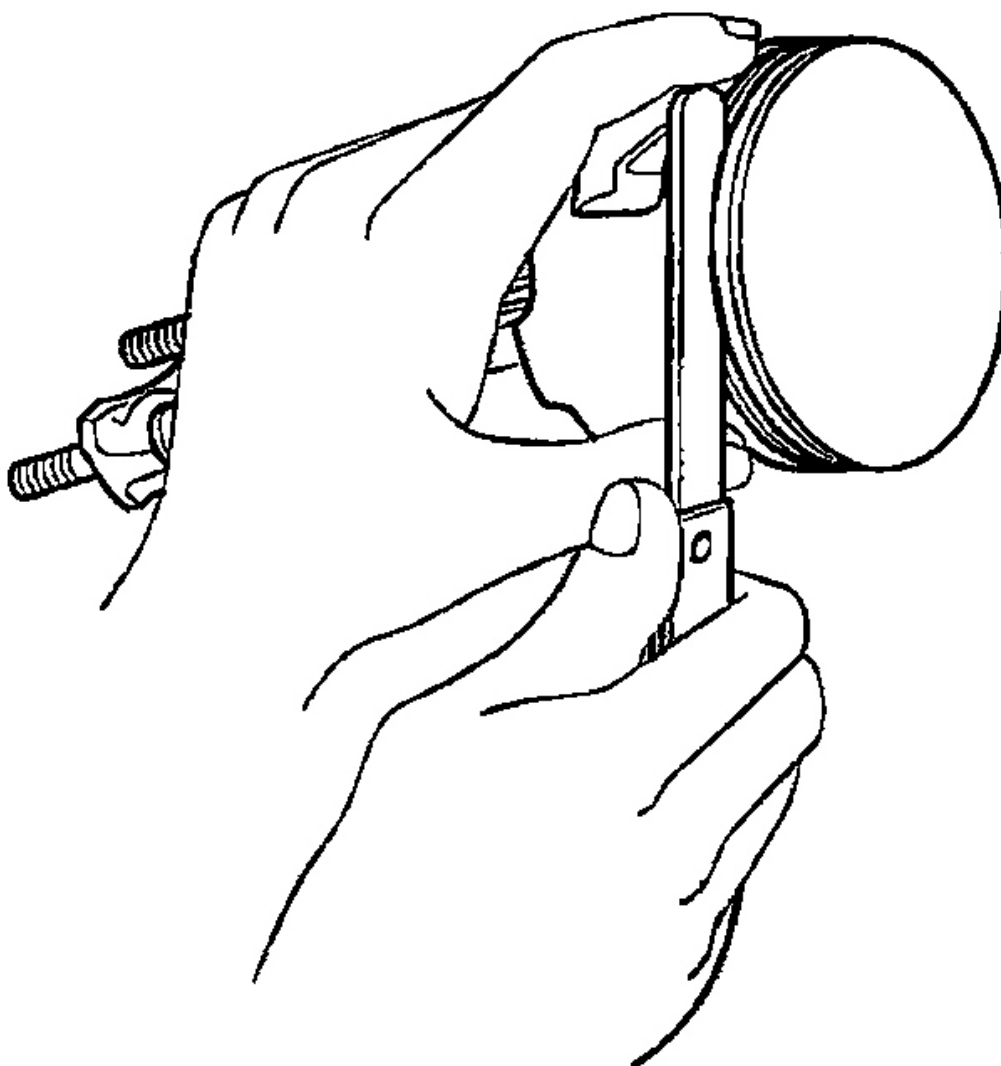**G00790058**

**Fig. 114: Measuring Piston Ring Side Clearance**  
Courtesy of HYUNDAI MOTOR CO.

2. To measure the piston ring end gap, insert a piston ring into the cylinder bore. Position the ring at right angles to the cylinder wall by gently pressing it down with a piston. Measure the gap with a feeler gauge. If the gap exceeds the service limit, replace the piston ring.

#### **Piston ring end gap**

## 2002 Hyundai Santa Fe

2002-04 ENGINES 2.4L 4-Cylinder - Santa Fe

[Standard dimensions]


No.1 : 0.25 - 0.35 mm (0.0098 - 0.0138 in.)

No.2 : 0.40 - 0.55 mm (0.0157 - 0.0216 in.)

[Limit]

No.1, No.2 : 0.8 mm (0.031 in.)

Oil ring side rail : 1.0 mm (0.039 in.)

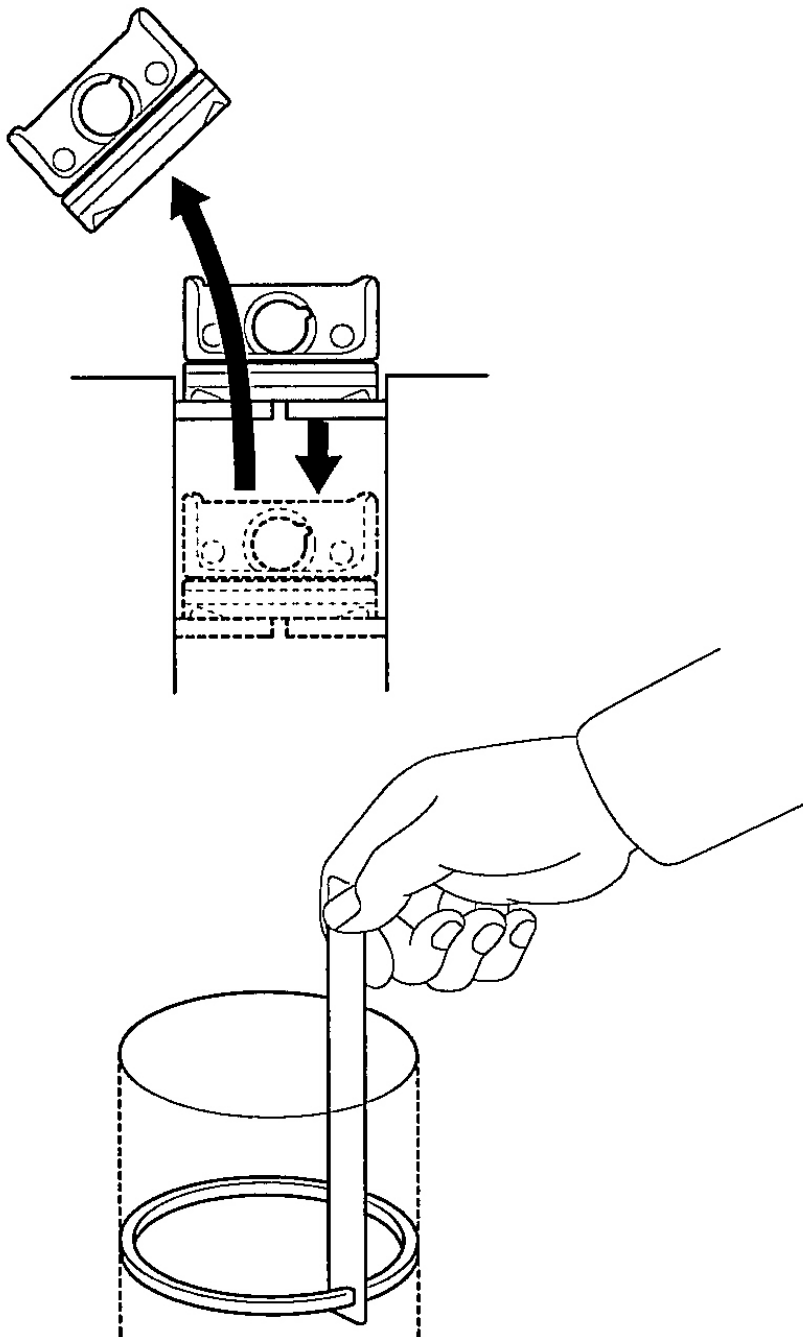


G00790059

**Fig. 115: Measuring Piston Ring End Gap**  
Courtesy of HYUNDAI MOTOR CO.

Connecting Rods




1. When the connecting rod cap is installed, make sure that cylinder numbers, marked on the rod end cap at disassembly, match. When a new connecting rod is installed, make sure that the notches for holding the bearing in place are on the same side.
2. Replace the connecting rod if it is damaged at either end of the thrust faces. If it has stratified wear in, or if the surface of, the inside diameter of the small end is severely rough, replace the rod.

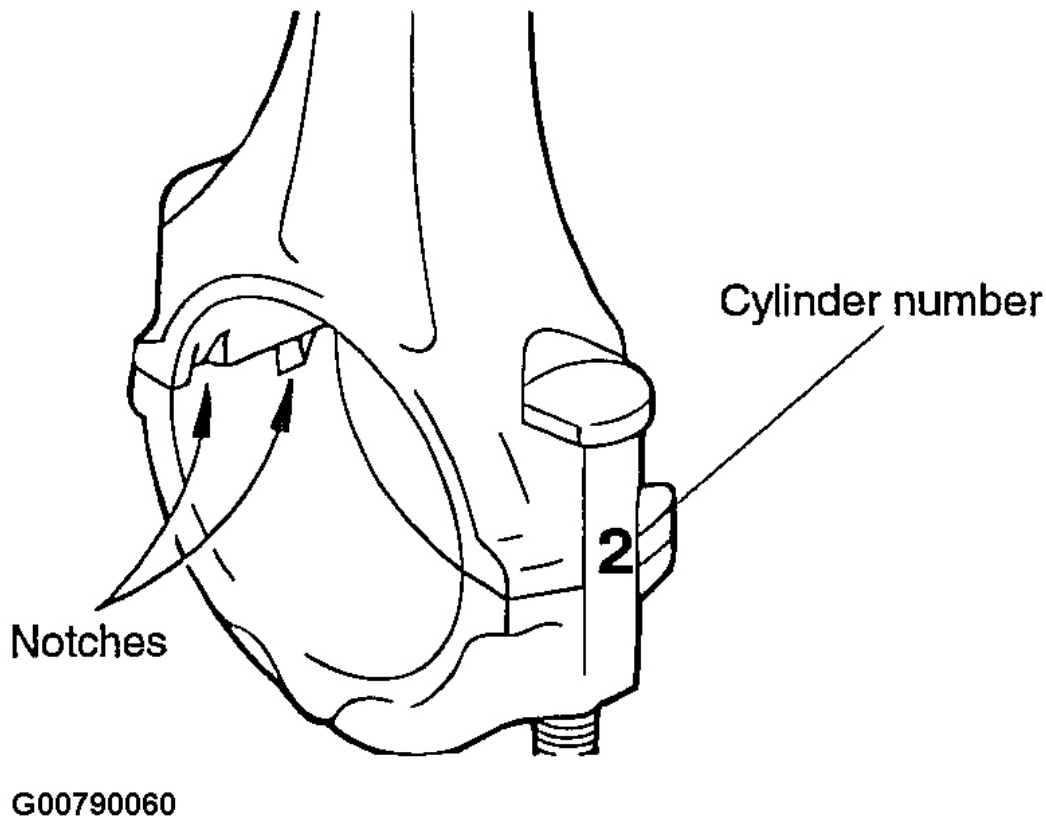

**Fig. 116: Identifying Connecting Rod Bearing Notches**  
Courtesy of HYUNDAI MOTOR CO.


#### Reassembly

1. Install the spacer.

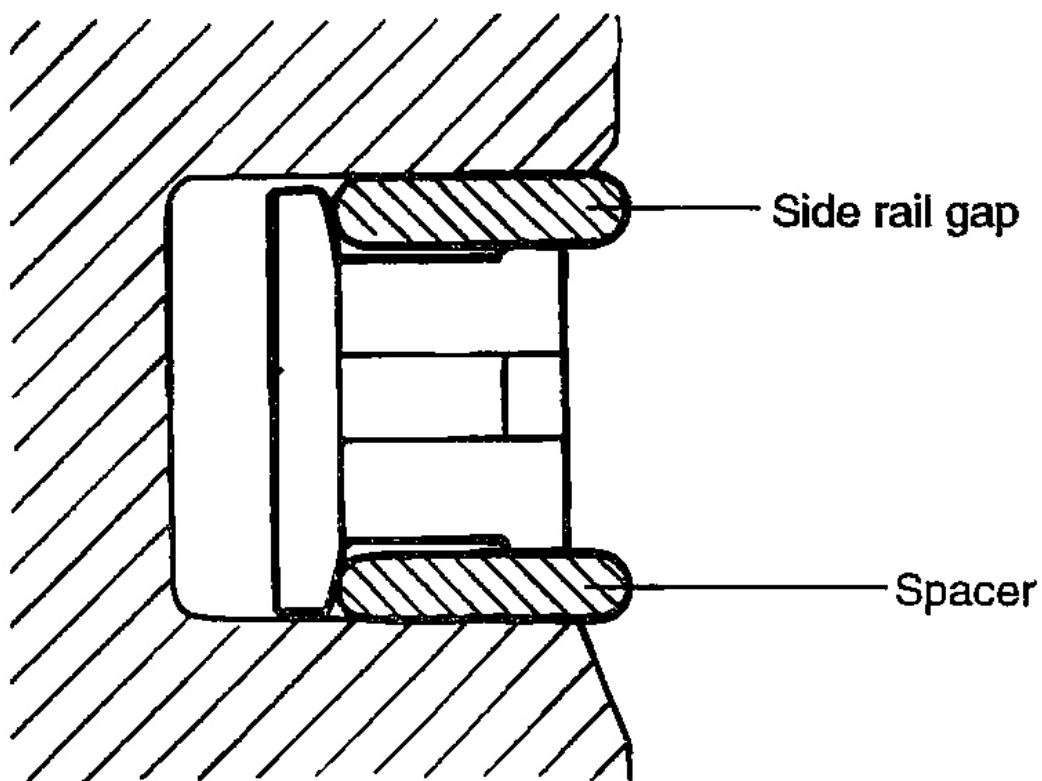

G00790061

**Fig. 117: Identifying Spacer Installation (1 Of 2)**  
Courtesy of HYUNDAI MOTOR CO.

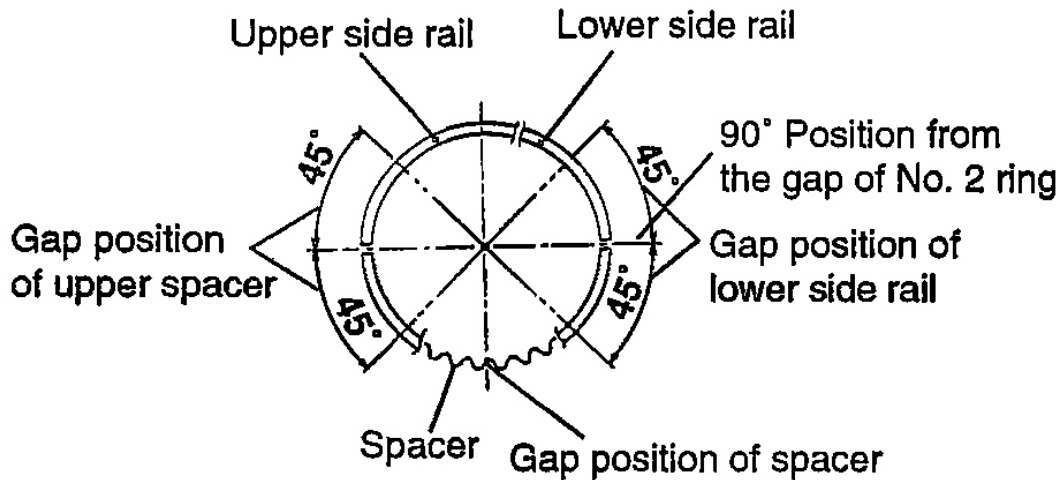


G00790062

**Fig. 118: Identifying Spacer Installation (2 Of 2)**  
Courtesy of HYUNDAI MOTOR CO.

2. Install the upper side rail. To install the side rail, first put one end of the side rail between the piston ring groove and spacer, hold it firmly, then press down with your finger the portion to be inserted into groove as illustrated.

**WARNING:** Do not use a piston ring expander when installing the side rail.


3. Install the lower side rail by the same procedure as described in Step No. 2.

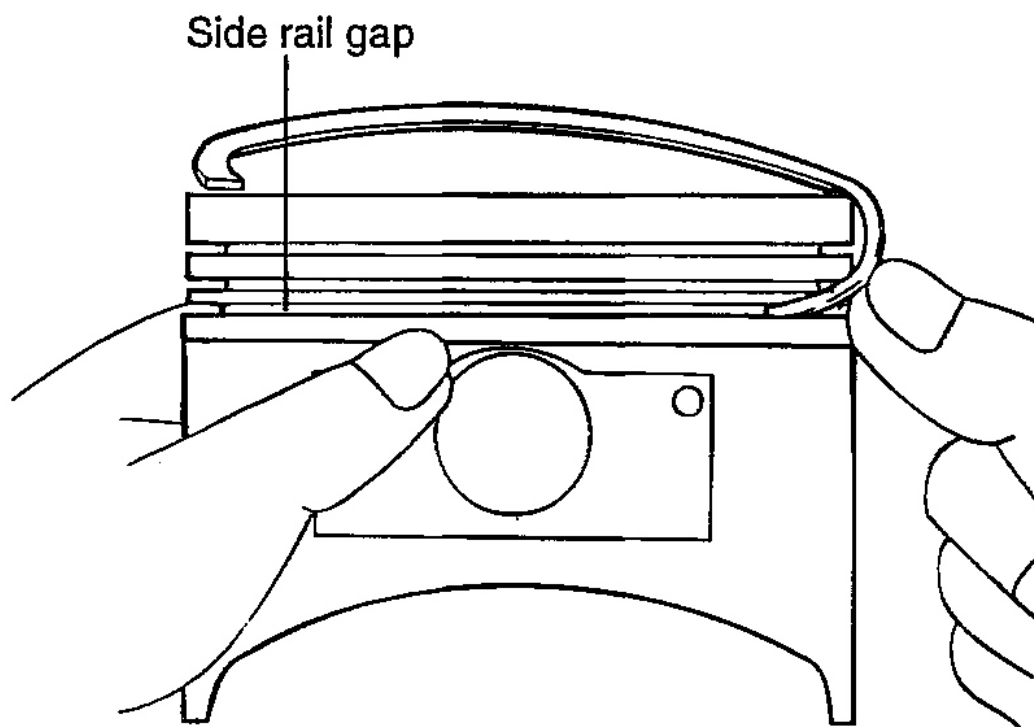

G00790063

**Fig. 119: Installing Side Rail**  
**Courtesy of HYUNDAI MOTOR CO.**

4. Apply engine oil around the piston and piston grooves.
5. Using piston ring expander, install the No. 2 piston ring.
6. Install the No. 1 piston ring.

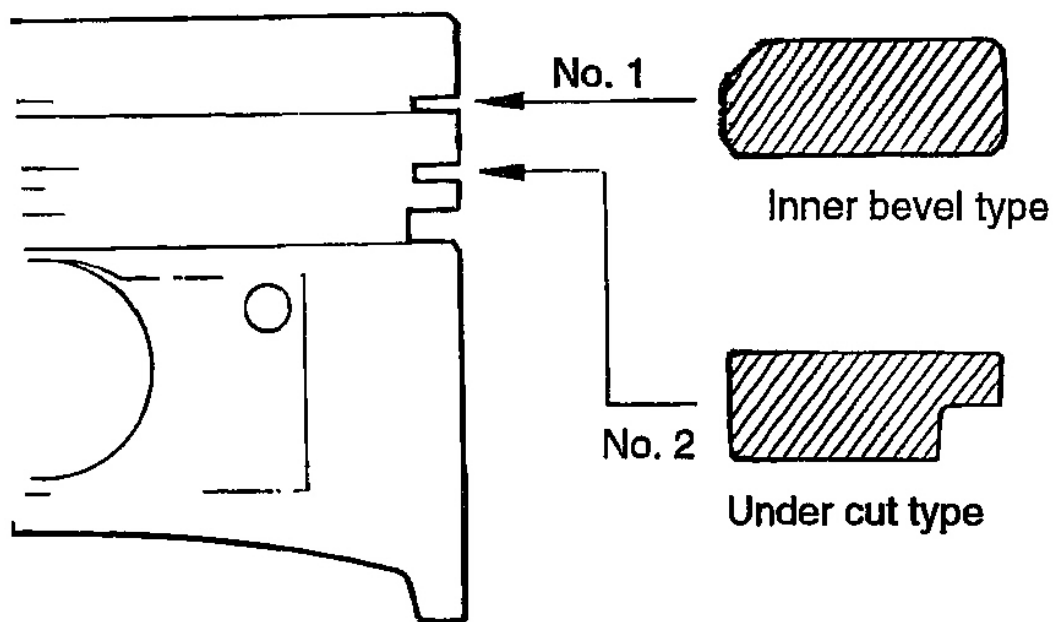


G00790064

**Fig. 120: Identifying Piston Rings**

Courtesy of HYUNDAI MOTOR CO.

7. Place each piston ring end gap as far apart from its neighboring gaps as possible. Make sure that gaps are not positioned in the thrust and pin directions.
8. Hold the piston rings firmly with a piston ring compressor as they are inserted into cylinder.

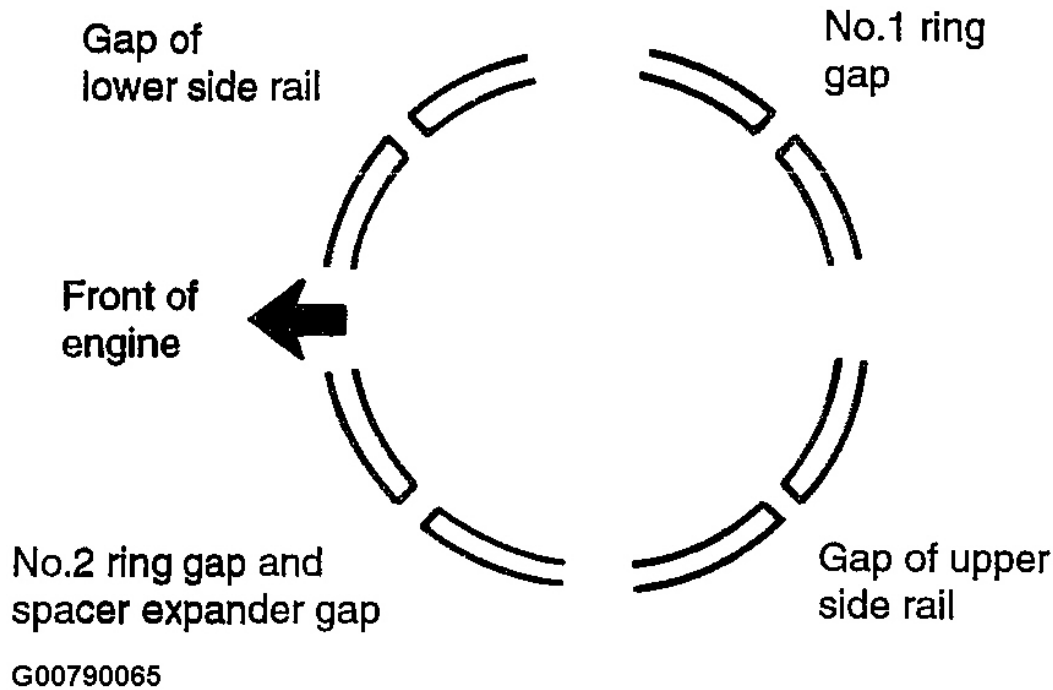


**Fig. 121: Identifying Piston Installation**  
Courtesy of HYUNDAI MOTOR CO.

9. Make sure that the front mark of the piston and the front mark (identification mark) of the connecting rod are directed toward the front of the engine.
10. When the connecting rod cap is installed, make sure that the cylinder numbers put on the rod and cap at disassembly match.
11. When a new connecting rod is installed, make sure that the notches for holding the bearing in place are on the same side.
12. Tighten the connecting rod cap nuts.

#### **Tightening torque**

Connecting rod cap nuts :

20 Nm (200 kg.cm, 15 lb.ft) + 90°

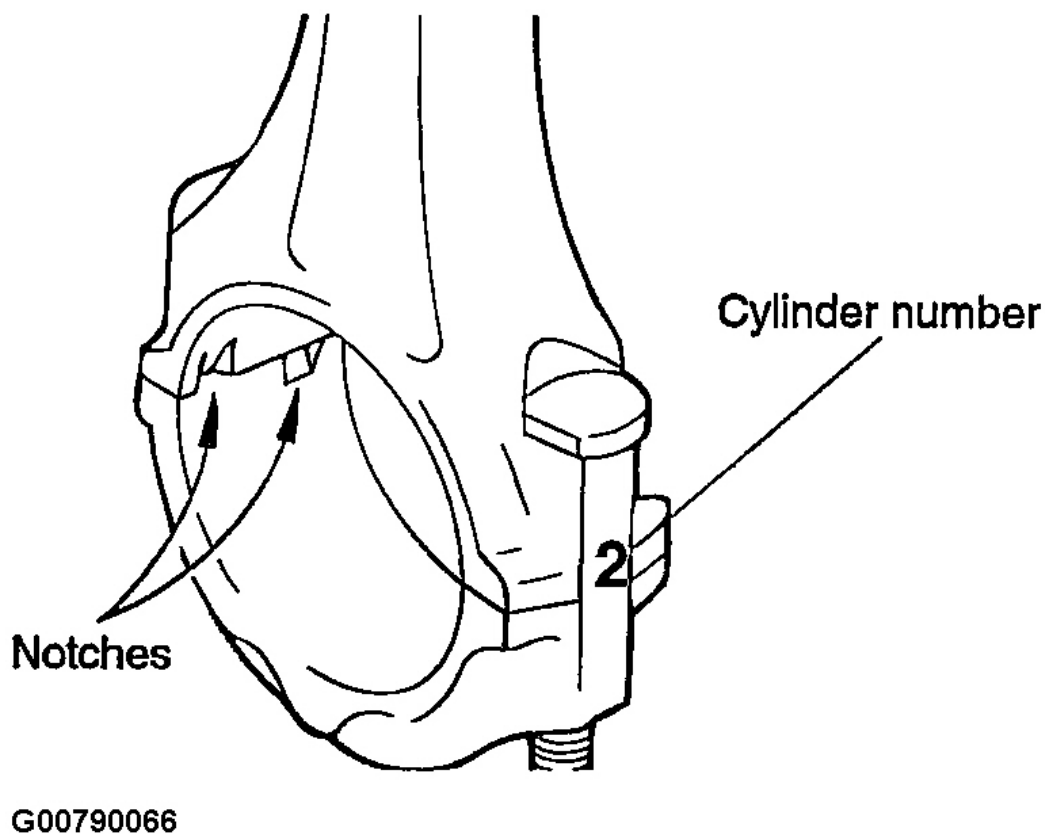

**Fig. 122: Identifying Connecting Rod Bearing Notches**  
Courtesy of HYUNDAI MOTOR CO.

13. Check the connecting rod side clearance.


#### **Connecting rod side clearance**

Standard : 0.10 ~ 0.25 mm (0.004 ~ 0.0098 in.)

Limit : 0.4 mm (0.0157 in.)

#### **CRANKSHAFT**

##### **Components**

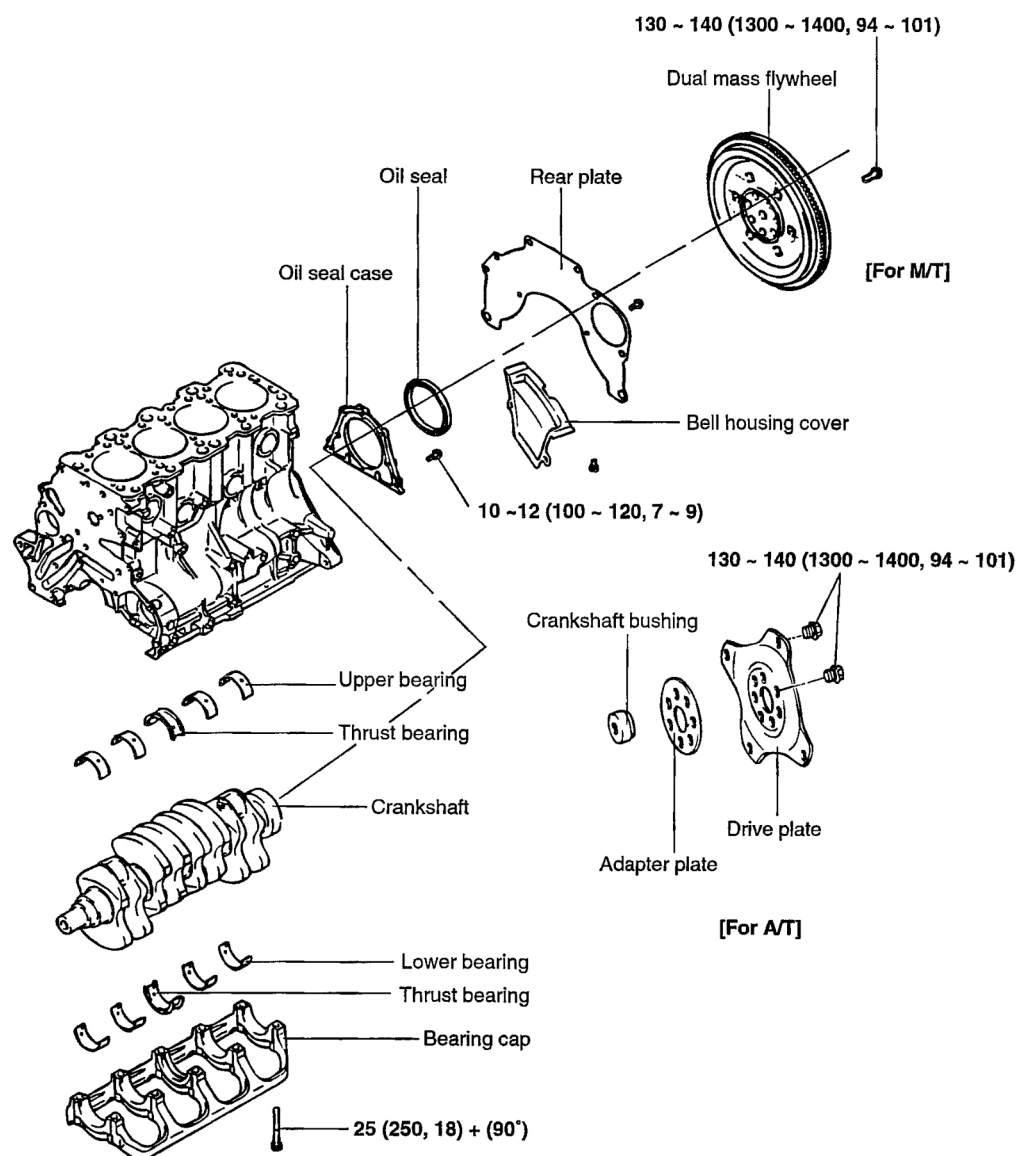

**TORQUE : Nm (kg·cm, lb·ft)**

G00790067

**Fig. 123: Crankshaft Components**  
Courtesy of HYUNDAI MOTOR CO.

### Disassembly

1. Remove the following components :
  - Timing belt. See **TIMING BELT**.
  - Front case. See **FRONT CASE**.



- Flywheel.
  - Cylinder head assembly. See **CYLINDER HEAD**.
  - Oil pan.
2. Remove the rear plate and the rear oil seal.
  3. Remove the connecting rod caps.

**NOTE:**        **Mark the main bearing caps to be able to reassemble in the original position and direction.**

4. Remove the main bearing caps and the crankshaft. Keep the bearings in order according to the cap number.

### **Inspection**

1. Check the crankshaft journals and pins for damage, uneven wear and cracks. Also check the oil holes for restrictions. Repair or replace any defective part.
2. Inspect the crankshaft journal for taper and out-of-round.


### **Standard value**

Crankshaft journal O.D :

56.982 ~ 57.000 mm (2.2434 ~ 2.2441 in.)

Crankshaft pin O.D :

44.980 - 45.000 mm (1.7709 - 1.7717 in.)

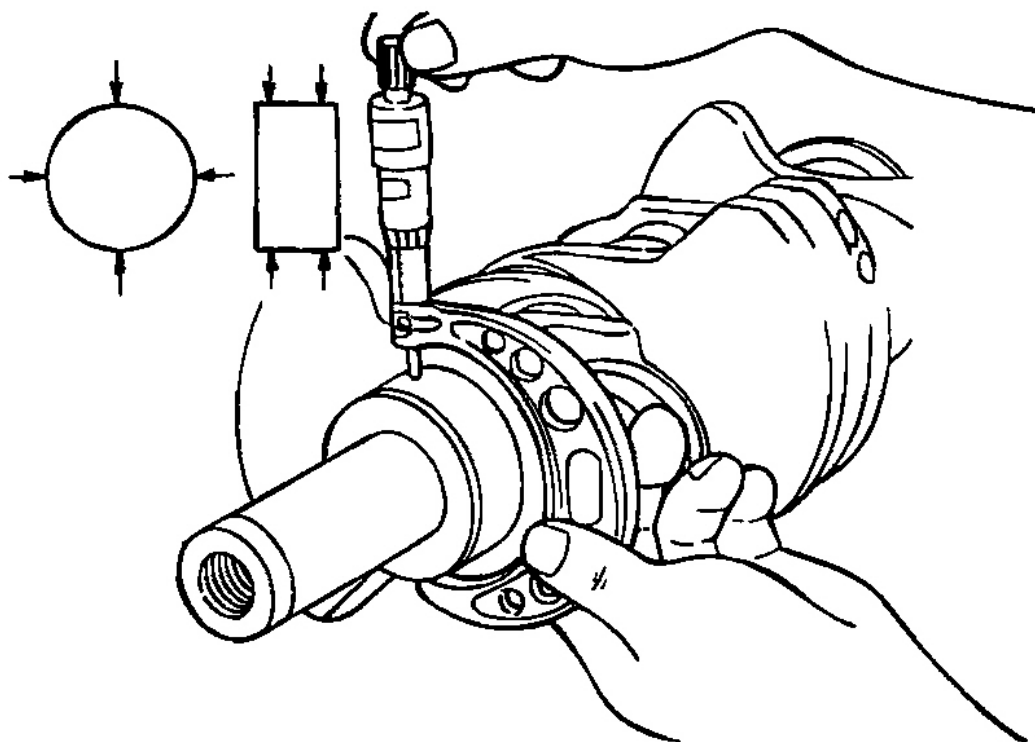

G00790068

**Fig. 124: Checking Crankshaft Journal**  
Courtesy of HYUNDAI MOTOR CO.

#### Main Bearings & Connecting Rod Bearings

Visually inspect each bearing for peeling, melting, seizure and improper contact. Replace any defective bearings.

#### Measuring Oil Clearance

Check the oil clearance by measuring the outside diameter of the crankshaft journal as well as the inside diameter of the bearing. The clearance can be obtained by calculating the difference between the measured diameters.


#### Standard value

Oil clearance

Crankshaft main bearing

No. 1,2,4,5 : 0.018 ~ 0.036 mm (0.0007 ~ 0.0014 in.)

No.3 : 0.024 ~ 0.042 mm (0.0009 ~ 0.0017 in.)

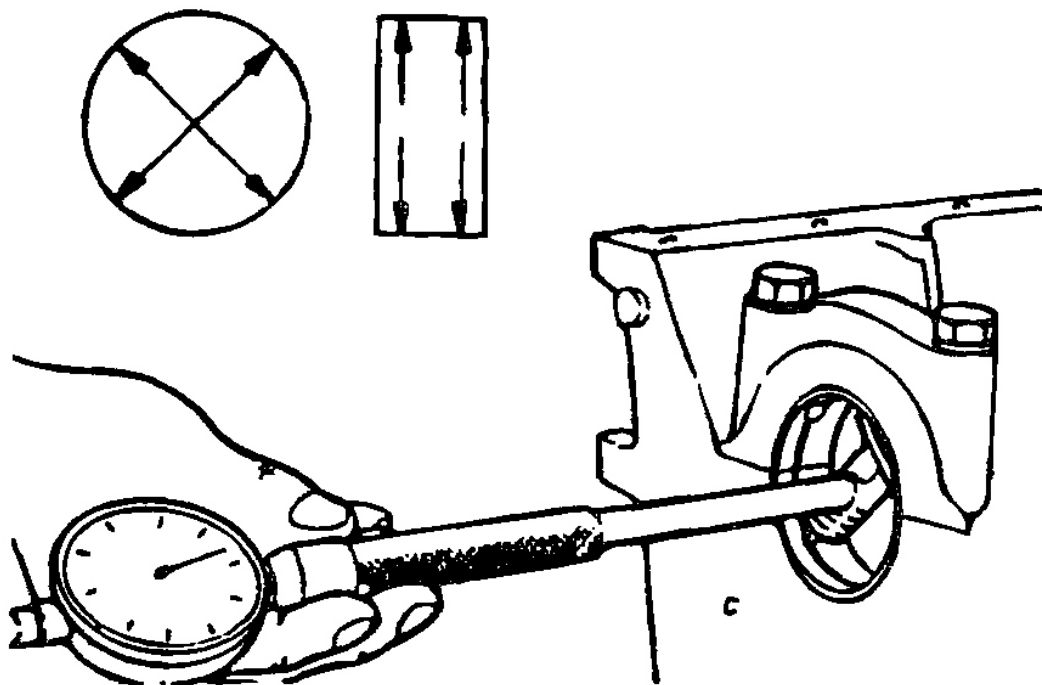


G00790069

**Fig. 125: Measuring Outside Diameter Of Crankshaft Journal**  
Courtesy of HYUNDAI MOTOR CO.

#### Reassembly


1. Install a grooved main bearing (upper bearing) on the cylinder block side.

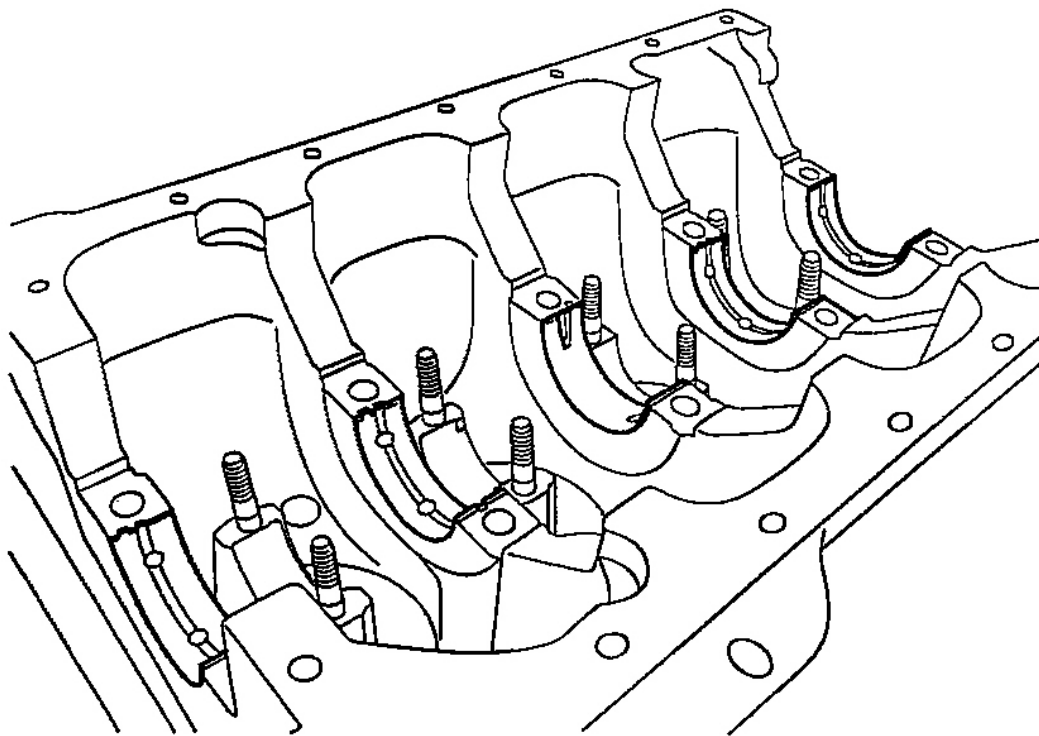

G00790070

**Fig. 126: Installing Grooved Main Bearings**  
Courtesy of HYUNDAI MOTOR CO.

2. Install a grooveless main bearing (lower bearing) on the main bearing cap side.
3. Both upper and lower center thrust bearings.

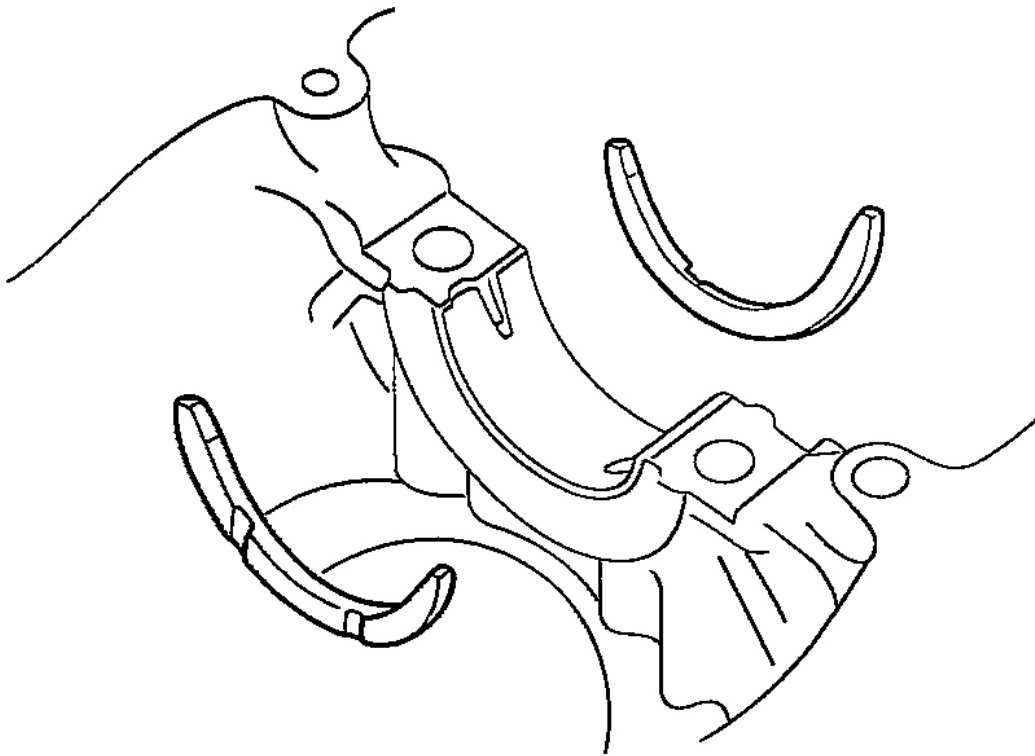

G00790071


**Fig. 127: Installing Thrust Bearings**  
 Courtesy of HYUNDAI MOTOR CO.

4. Apply engine oil to journals and pins. Install the crankshaft.
5. Install the bearing caps with the arrow mark directed toward the front of the engine. The cap number must be correct.
6. Tighten the cap bolts to the specified torque.

#### **Tightening torque**

Main bearing cap bolts : 25 Nm (250 kg.cm, 18lb.ft) + (90°)


7. Cap bolts should be tightened evenly in 4 to 5 increments before they are tightened to the specified torque.
8. Make sure that the crankshaft turns freely and check the end play of the crankshaft.
9. Using a special tool (09231 - 21000). Install the oil seal in the oil seal case. A new oil seal should be used.

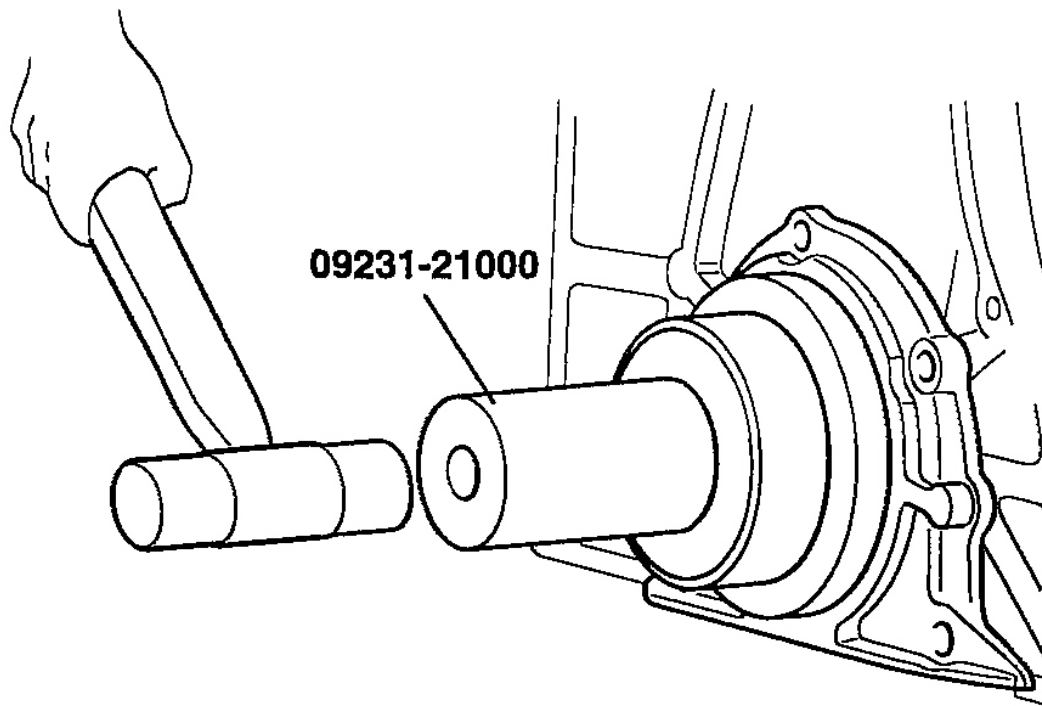

G00790072

**Fig. 128: Installing Oil Seal In Case**  
**Courtesy of HYUNDAI MOTOR CO.**

10. Install the oil seal into the oil seal case so that the oil hole in the separator may be directed downward (arrow in illustration).

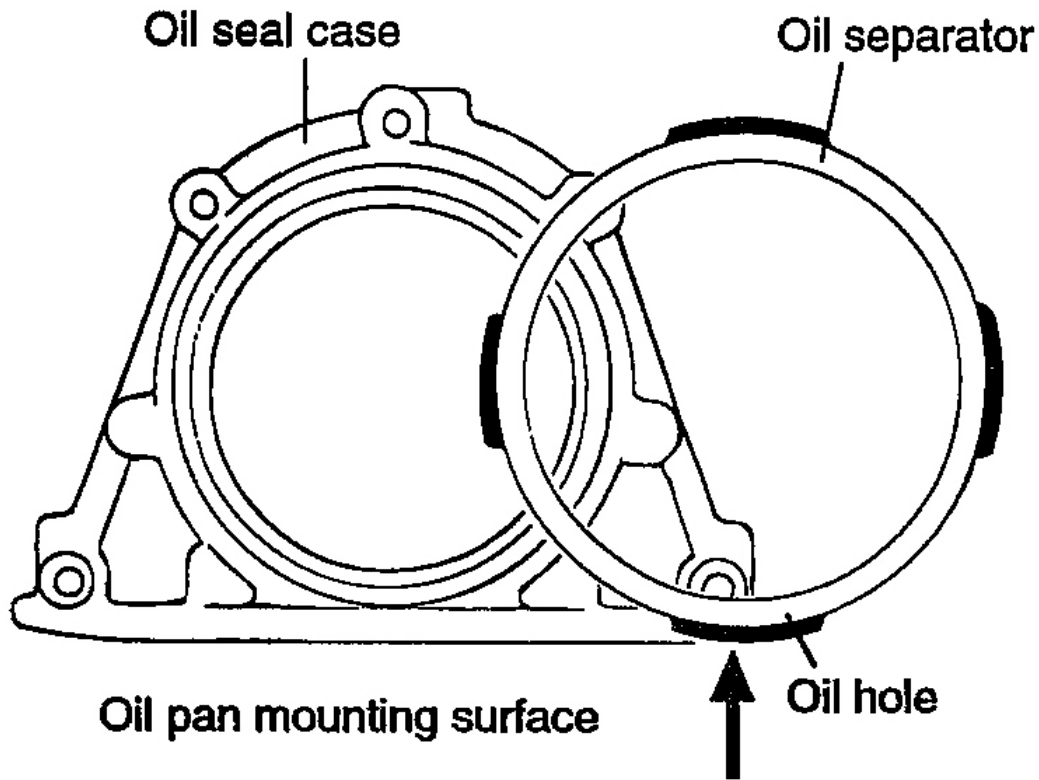

G00790073

**Fig. 129: Identifying Oil Separator**  
Courtesy of HYUNDAI MOTOR CO.

11. Install the new oil seal case gasket and oil seal case assembly.

**Tightening torque**

Oil seal case : 10 ~ 12 Nm (100 ~ 120 kg.cm, 7 ~ 9 lb.ft)

**(For M/T)**

12. Install the rear plate to the cylinder block.
13. Install the flywheel assembly and tighten the bolts to the specified torque.

**Tightening torque**

Flywheel bolt :

130 ~ 140 Nm (1300 ~ 1400 kg.cm, 94 ~ 101 lb.ft)

**(For A/T)**

14. Install the adapter plate to the cylinder block.
15. Install the drive plate and tighten the bolts to the specified torque.

### **Tightening torque**


Driver plate : 130 ~ 140 Nm (1300 ~ 1400 kg.cm, 94 ~ 101 lb.ft)

## **INTAKE AND EXHAUST SYSTEM**

### **EXHAUST MANIFOLD**

#### **Components**



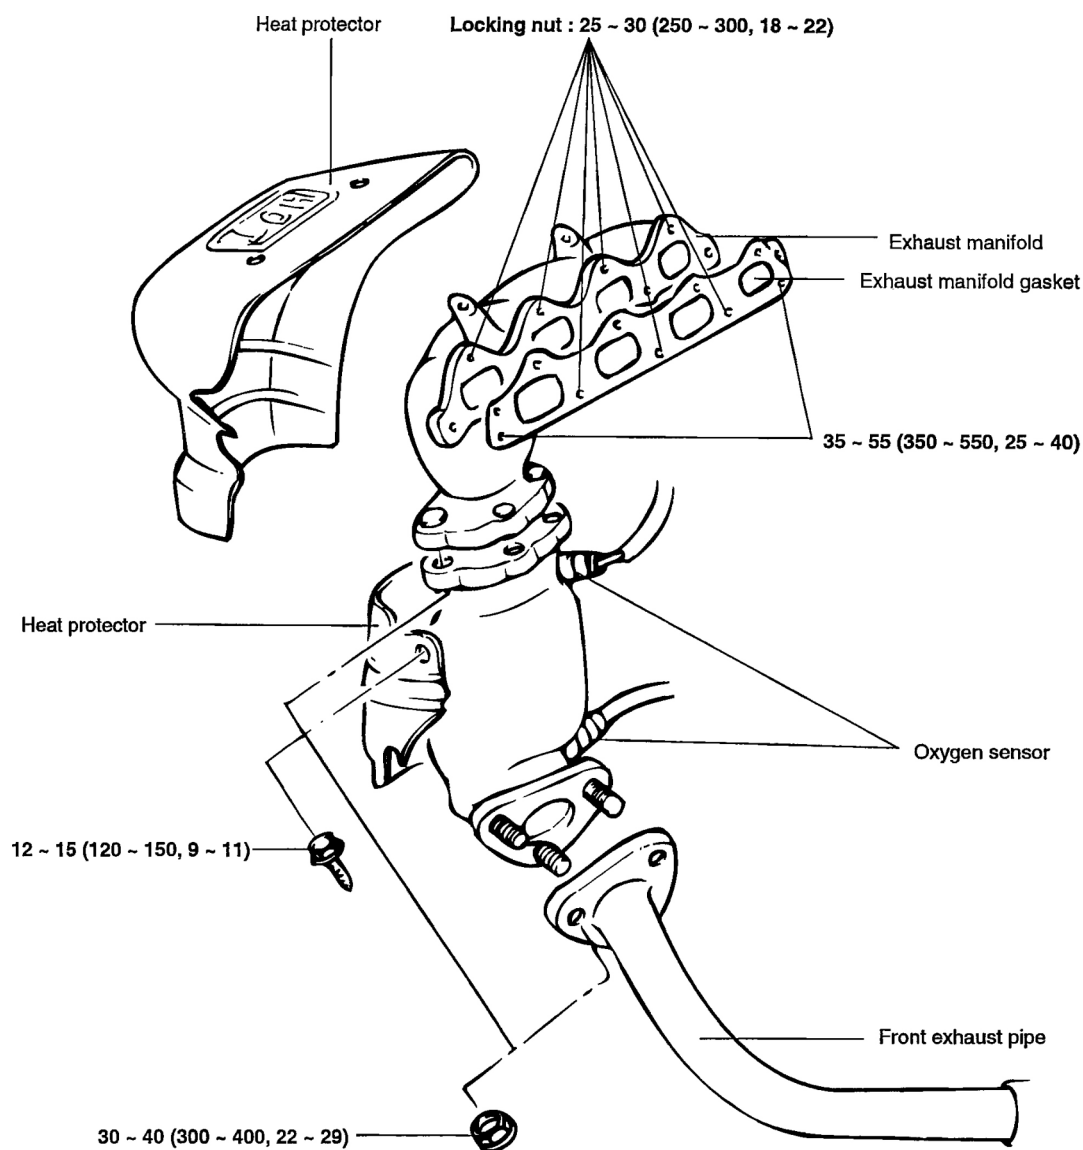

**TORQUE : Nm (kg.cm, lb.ft)**

G00790090

**Fig. 130: Exhaust Manifold Components**  
Courtesy of HYUNDAI MOTOR CO.

### Removal

1. Remove the heat protector.
2. Remove the exhaust manifold.
3. Remove the exhaust manifold gasket.

**Inspection**

1. Check for damage or cracking.
2. Using a straight edge and feeler gauge, check for distortion on the cylinder head matching surface.

Standard value : 0.15 mm (0.006 in.)

Service limit : 0.3 mm (0.012 in.)

3. Check the exhaust manifold for damage and cracking.

**Installation**

1. Install the exhaust manifold with its gasket.

**Tightening torque**


Exhaust manifold

M8 : 25 ~ 30 Nm (250 ~ 300 kg.cm, 18 ~ 22 lb.ft)

M10 : 35 ~ 35 Nm (350 ~ 550 kg.cm, 25 ~ 40 lb.ft)

**NOTE:**        **Do not use the used exhaust manifold gasket.**

**INTAKE MANIFOLD****Components**

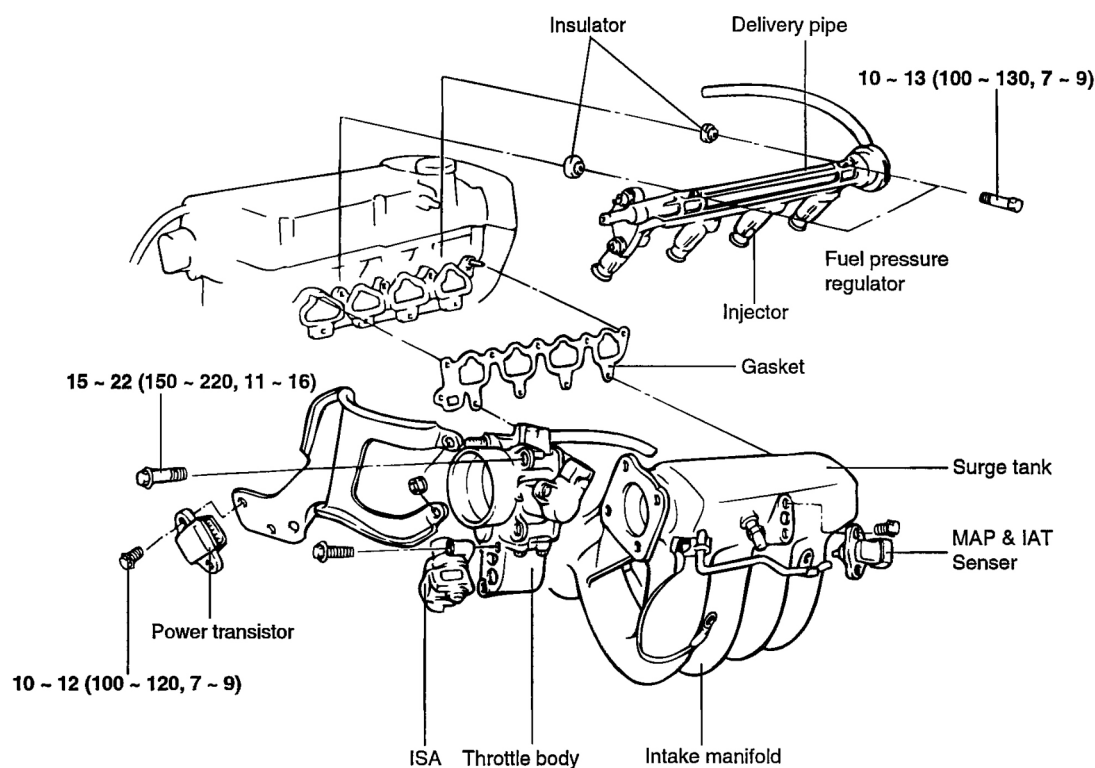


**TORQUE : Nm (kg-cm, lb-ft)**

G00790091

**Fig. 131: Intake Manifold Components**  
Courtesy of HYUNDAI MOTOR CO.

### Removal


1. Remove the air breather hose connected to the throttle body.

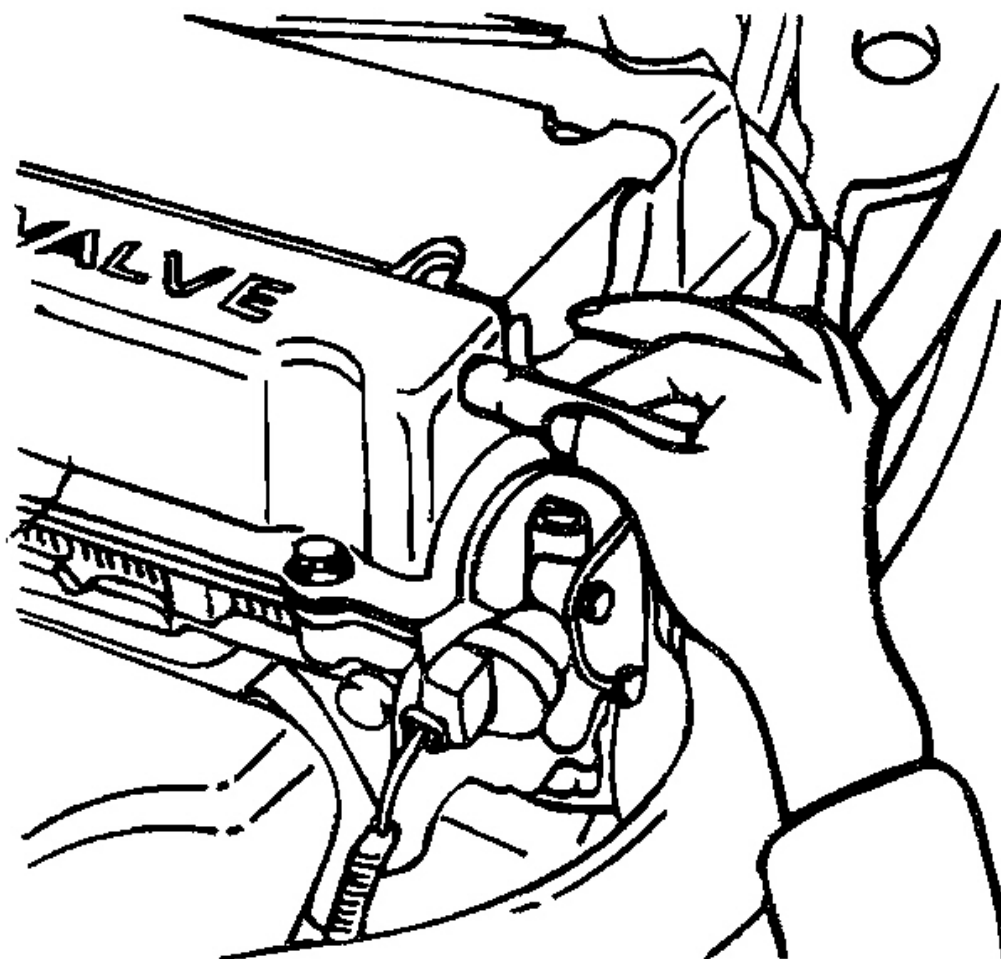

G00790092

**Fig. 132: Removing Air Breather Hose**  
Courtesy of HYUNDAI MOTOR CO.


2. Remove the accelerator cable.

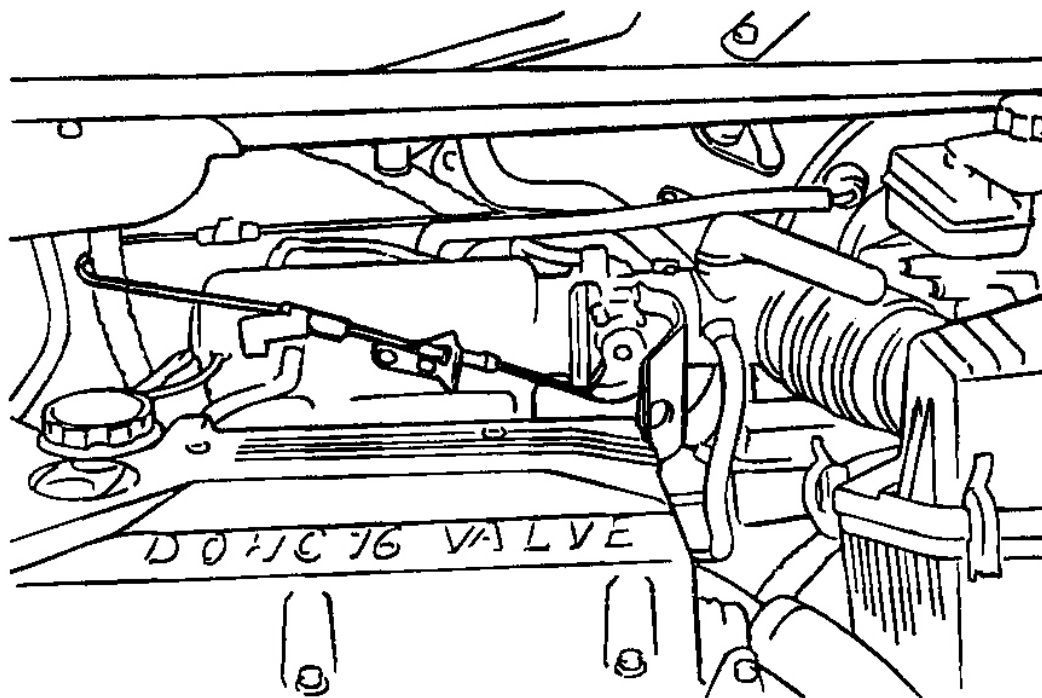

G00790093

**Fig. 133: Identifying Accelerator Cable**  
Courtesy of HYUNDAI MOTOR CO.


3. Remove the engine coolant hose and throttle body.
4. Remove the P.C.V. valve and brake boost vacuum hose.

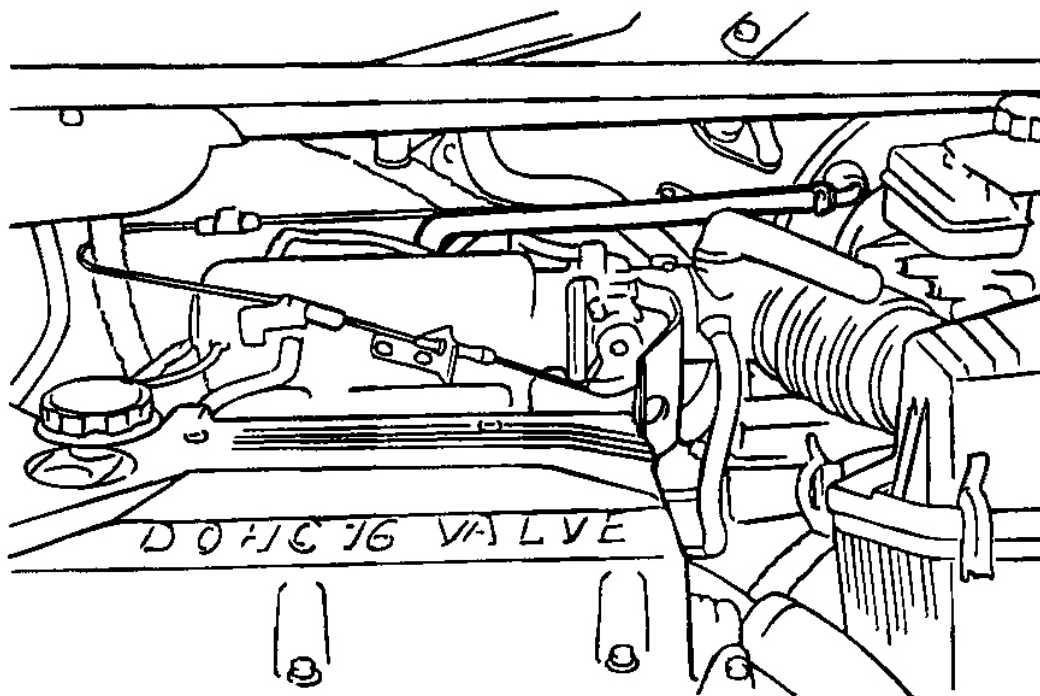

G00790094

**Fig. 134: Identifying Brake Booster Vacuum Hose**  
Courtesy of HYUNDAI MOTOR CO.


5. Disconnect the vacuum hose connector.
6. Remove the injector cover.

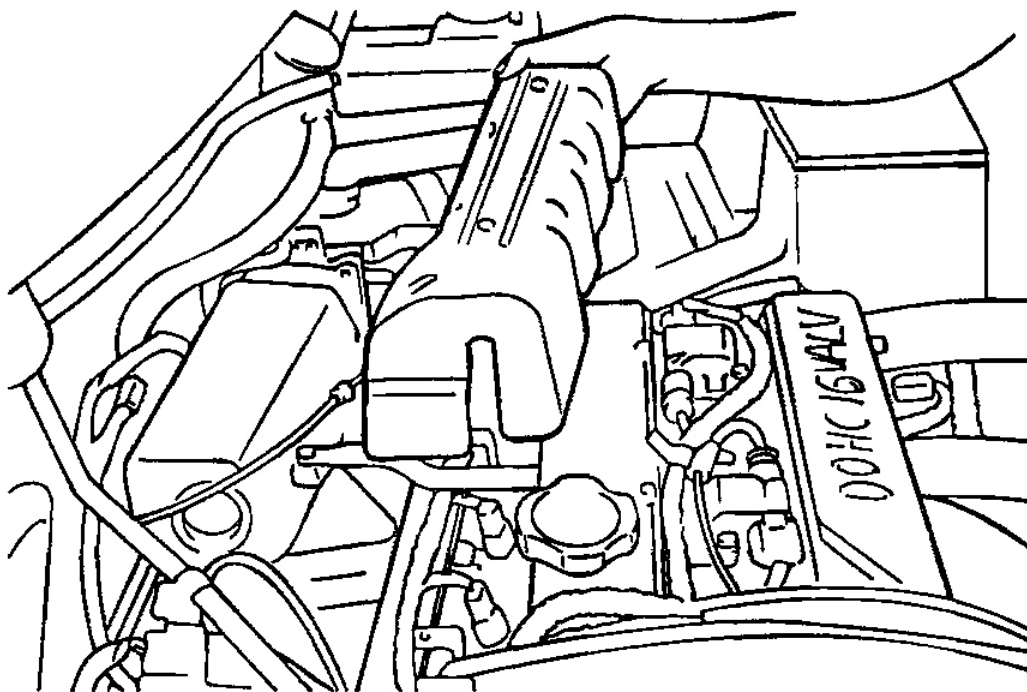

G00790095

**Fig. 135: Removing Injector Cover**  
Courtesy of HYUNDAI MOTOR CO.

7. Bleed off pressure in the fuel pipe line to prevent fuel from spilling and then disconnect the high pressure hose.
8. Disconnect the fuel injector harness connector.

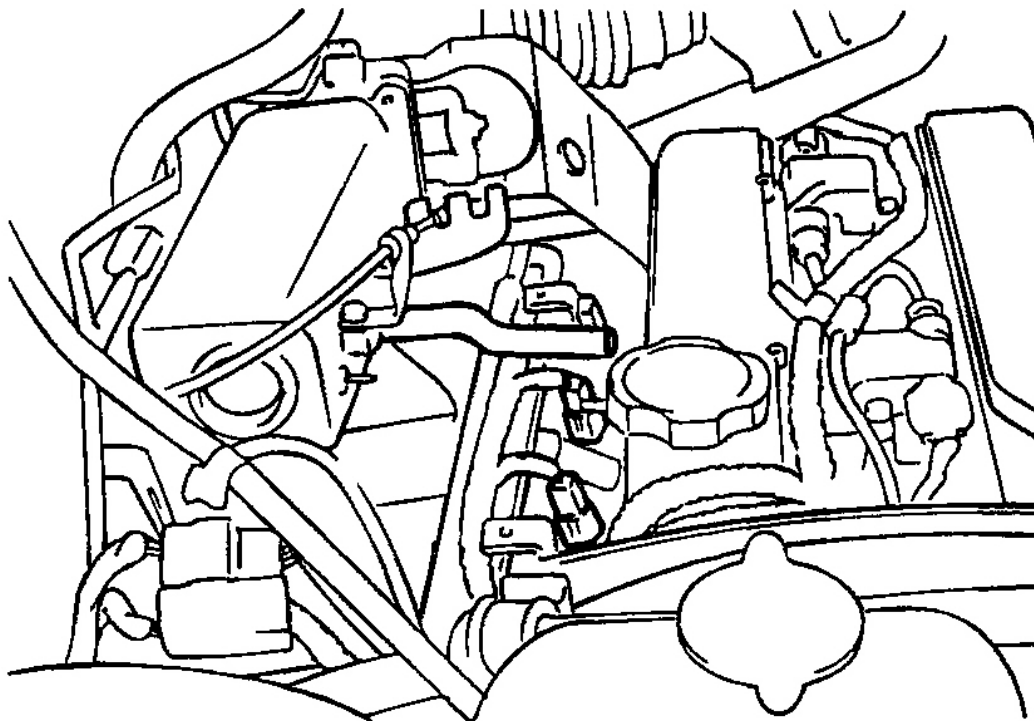


G00790096

**Fig. 136: View Of Injector Harness Connector**  
Courtesy of HYUNDAI MOTOR CO.

9. Remove the delivery pipe with fuel injectors and the pressure regulator.

**NOTE:** When the delivery pipe is removed, do not drop the injectors.




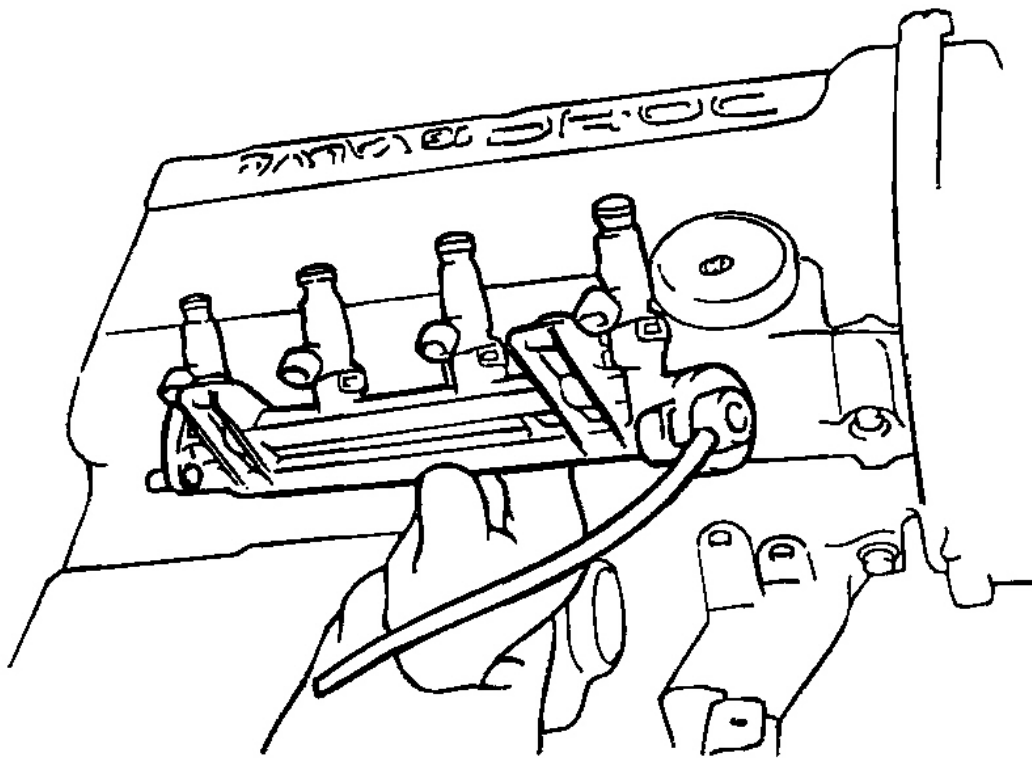

G00790097

**Fig. 137: Removing Fuel Delivery Pipe**  
Courtesy of HYUNDAI MOTOR CO.

10. Remove the intake manifold stay.

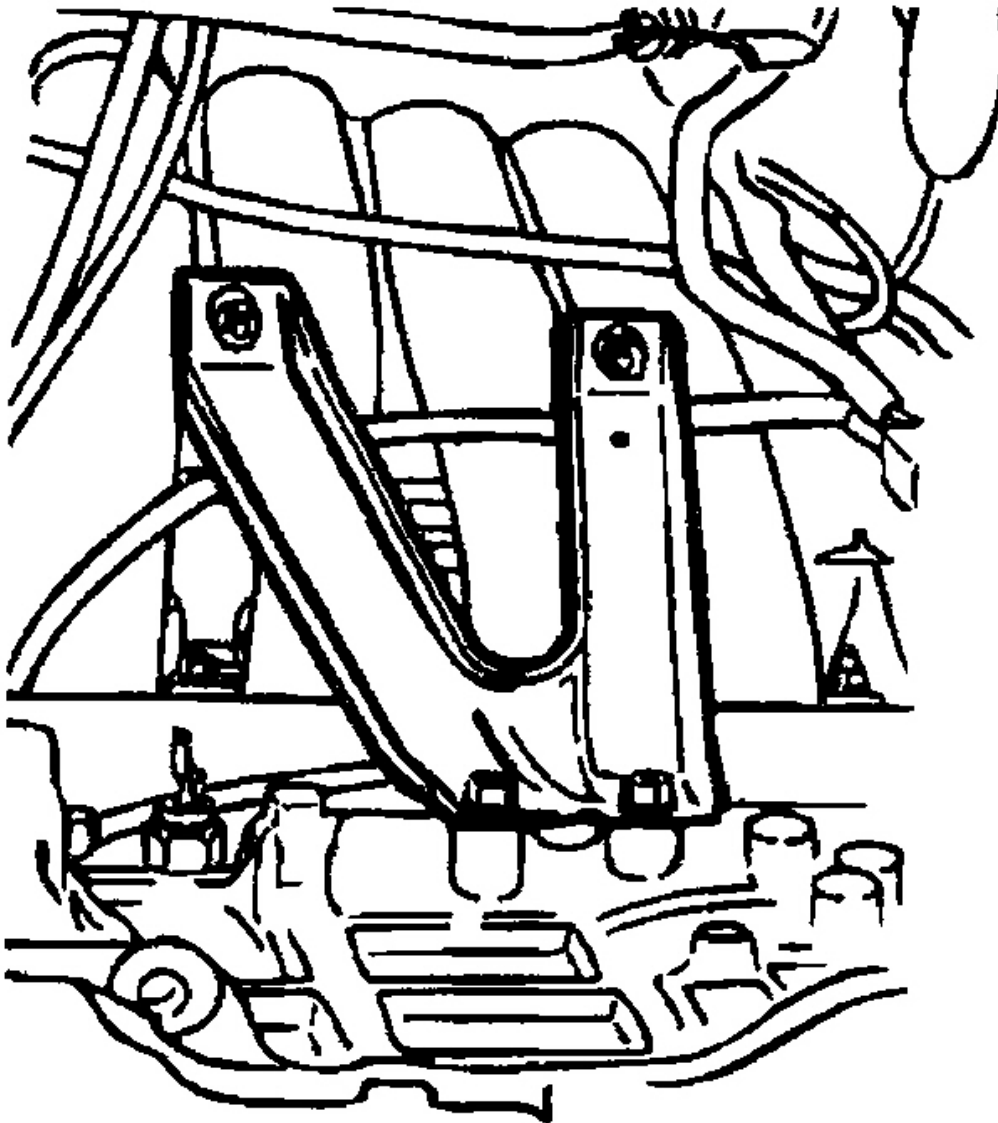

G00790098

**Fig. 138: Identifying Intake Manifold Stay**  
Courtesy of HYUNDAI MOTOR CO.

11. Remove the intake manifold.

#### Inspection

**Intake Manifold & Surge Tank**

1. Check the parts for damage or cracking.
2. Check for restrictions in the vacuum outlet port, water or gas passages.
3. Check for flatness using a straight edge and feeler gauge.

Standard value : 0.15 mm (0.06 in.) or less

Service limit : 0.2 mm (0.0078 in.)

**Installation**

1. Install the intake manifold and new gasket to the specified torque.

**Tightening torque**


Intake manifold

Bolt : 15 ~ 20 Nm (150 ~ 120 kg.cm, 11 ~ 14 lb.ft)

Nut : 30 ~ 42 Nm (300 ~ 420 kg.cm, 22 ~ 30 lb.ft)

2. Install the delivery pipe and injector assembly to the intake manifold.


**NOTE:**        **Make certain that there is no interferences between the injectors and injector ports on the intake manifold.**

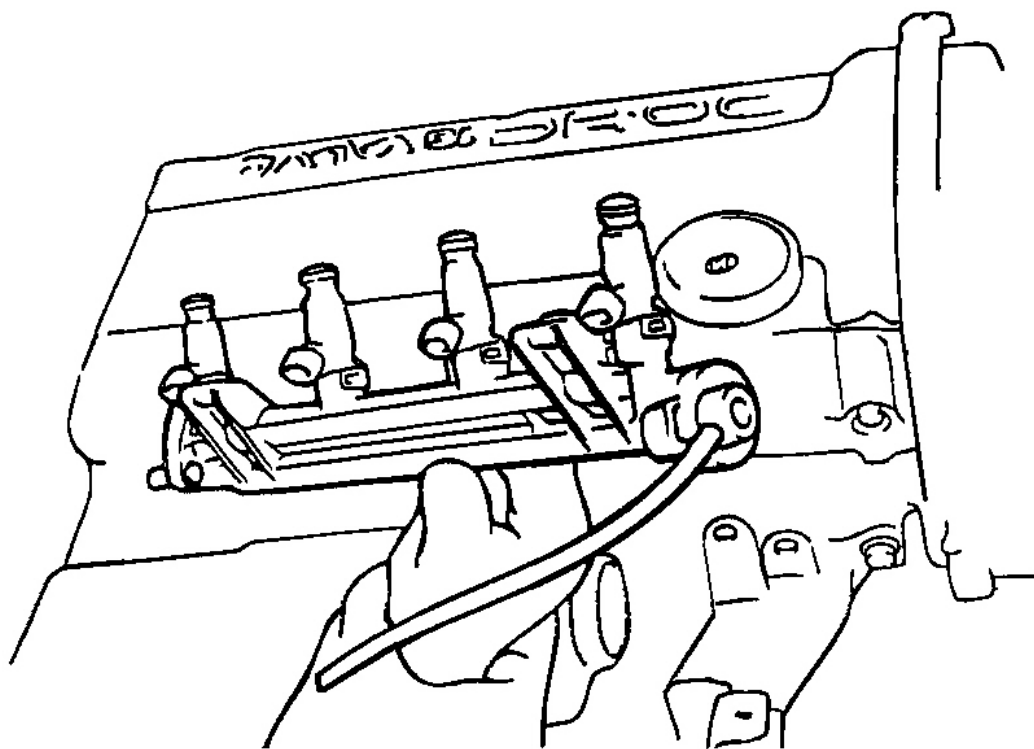

G00790099

**Fig. 139: Installing Fuel Delivery Pipe**  
Courtesy of HYUNDAI MOTOR CO.

3. Install the surge tank stay.
4. Connect the fuel injector connector and wiring harness and then install the cover.
5. Connect the high pressure hoses.

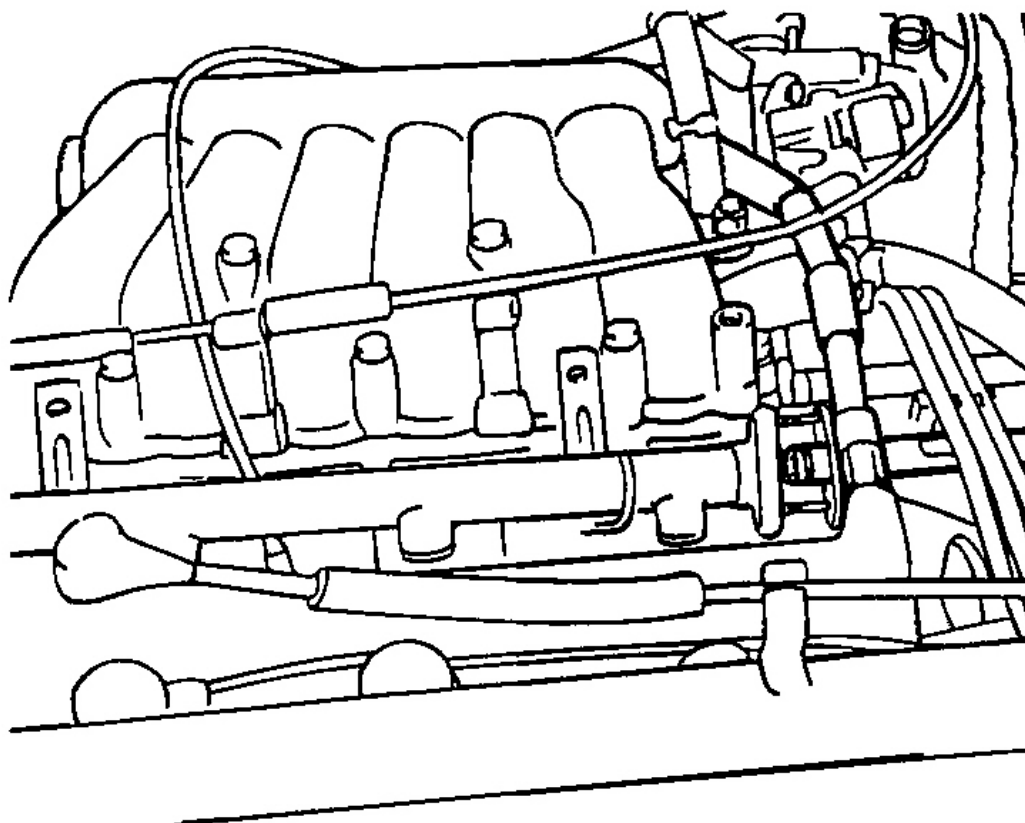

G00790100

**Fig. 140: Identifying High Pressure Hose**  
Courtesy of HYUNDAI MOTOR CO.

6. Connect the vacuum hoses.

### **Tightening torque**


Intake manifold stay and cylinder block :

18 ~ 25 Nm (180 ~ 250 kg.cm, 13 ~ 18 lb.ft)

7. Connect the PCV valve and brake boost hoses.
8. Install the air breather hose.
9. Install the accelerator cable.

### **MUFFLER**

## Components

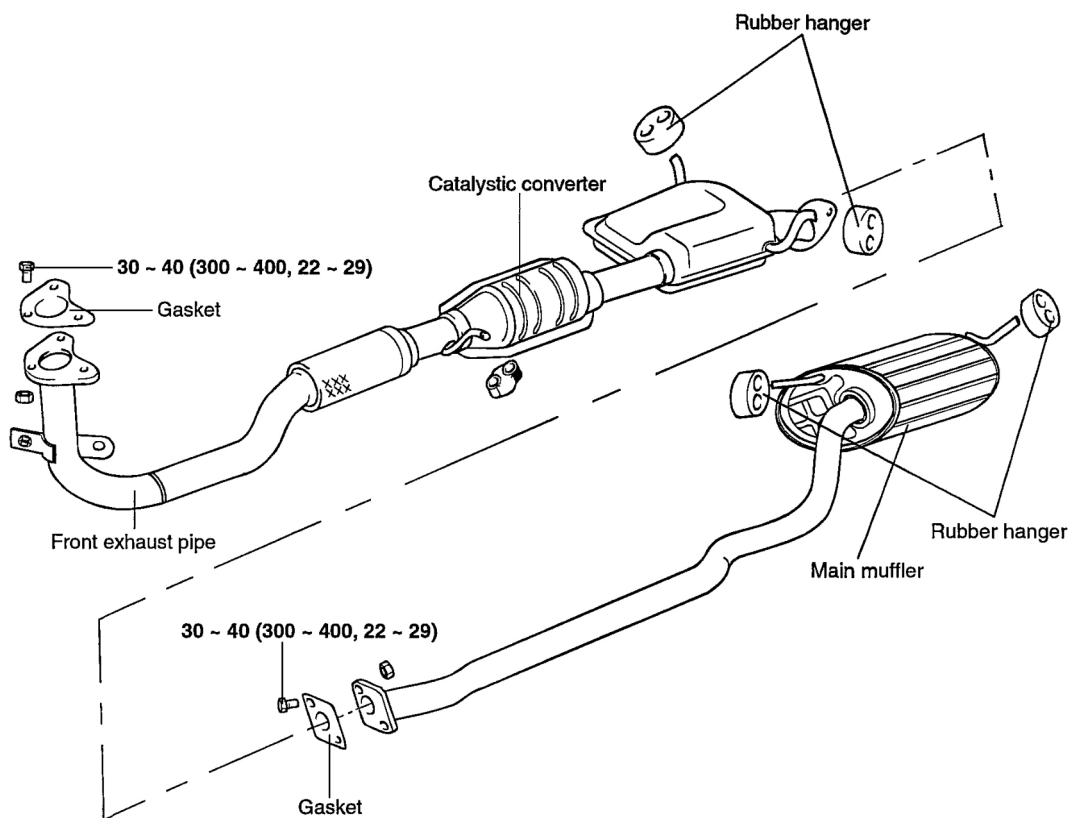

**TORQUE : N·m (kg·cm, lb·ft)**

G00790101


**Fig. 141: Muffler Components**  
Courtesy of HYUNDAI MOTOR CO.

## Removal

### Main Muffler

**CAUTION:** Before removing or inspecting the exhaust system, ensure that the exhaust system is cool.


1. Disconnect the main muffler from the center exhaust pipe.

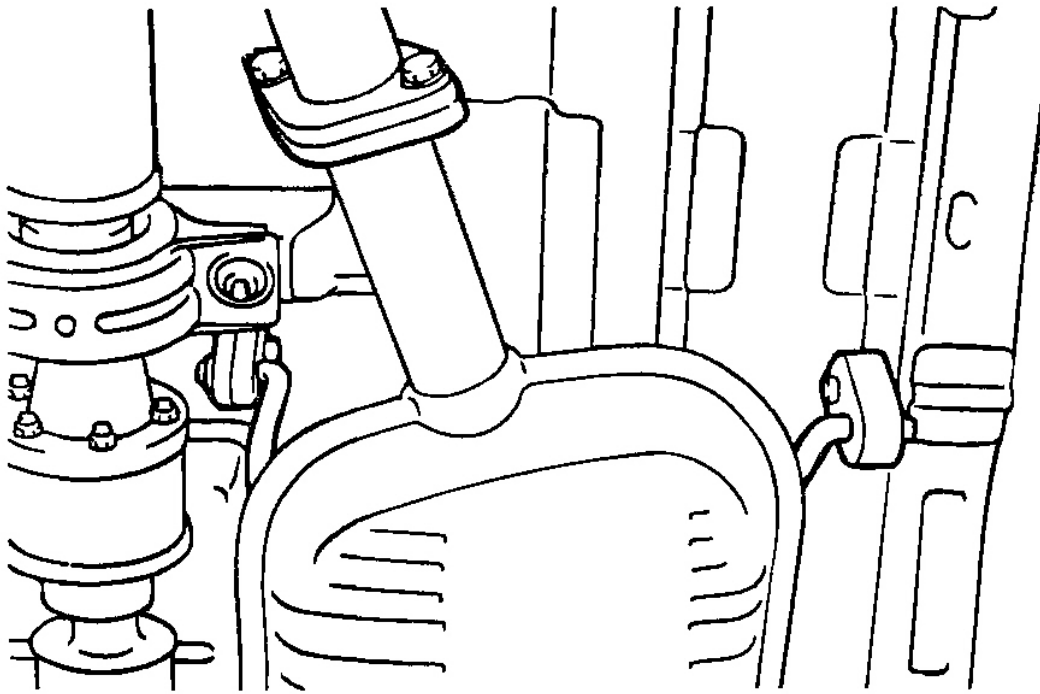

G00790102

**Fig. 142: View Of Exhaust Muffler**  
Courtesy of HYUNDAI MOTOR CO.


2. Remove the rubber hangers and remove the main muffler.

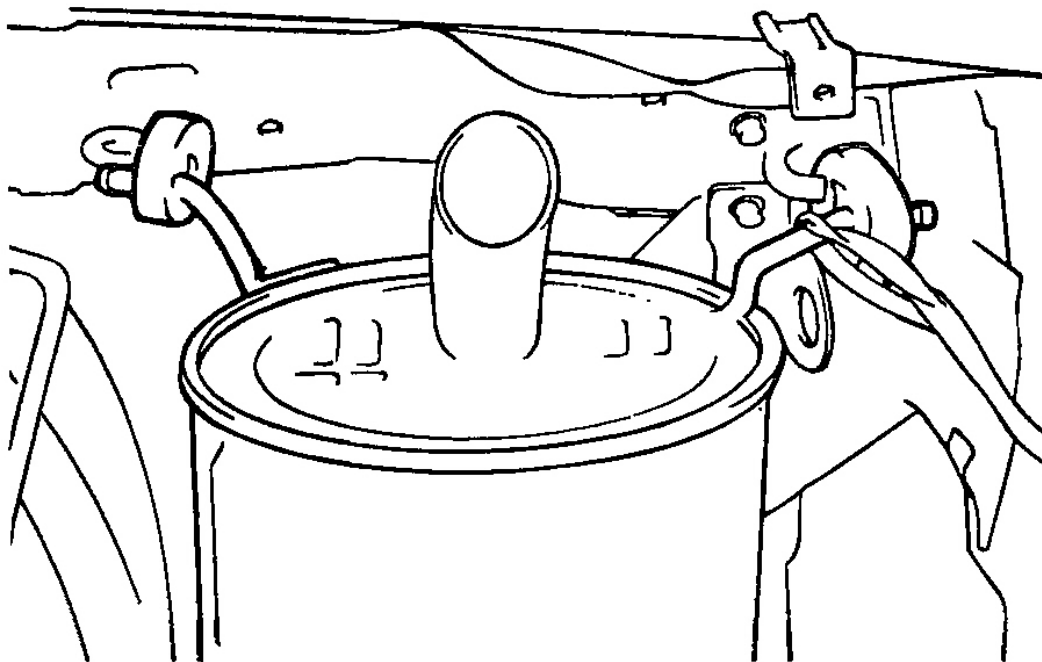

G00790103

**Fig. 143: View Of Muffler Hangers**  
Courtesy of HYUNDAI MOTOR CO.



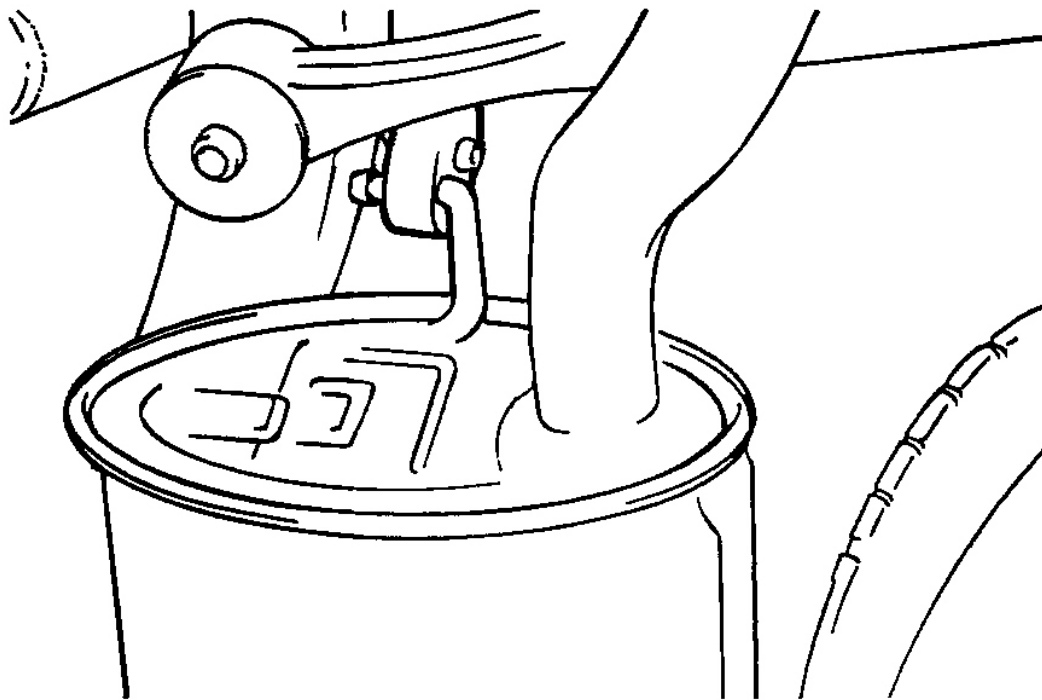


G00790104

**Fig. 144: View Of Muffler Hangers**  
Courtesy of HYUNDAI MOTOR CO.

**FRONT EXHAUST PIPE (INCLUDING CATALYTIC CONVERTER)**


1. Remove the front exhaust pipe from the center exhaust pipe.
2. Remove the front exhaust pipe bolts and exhaust manifold pipe mounting nuts.

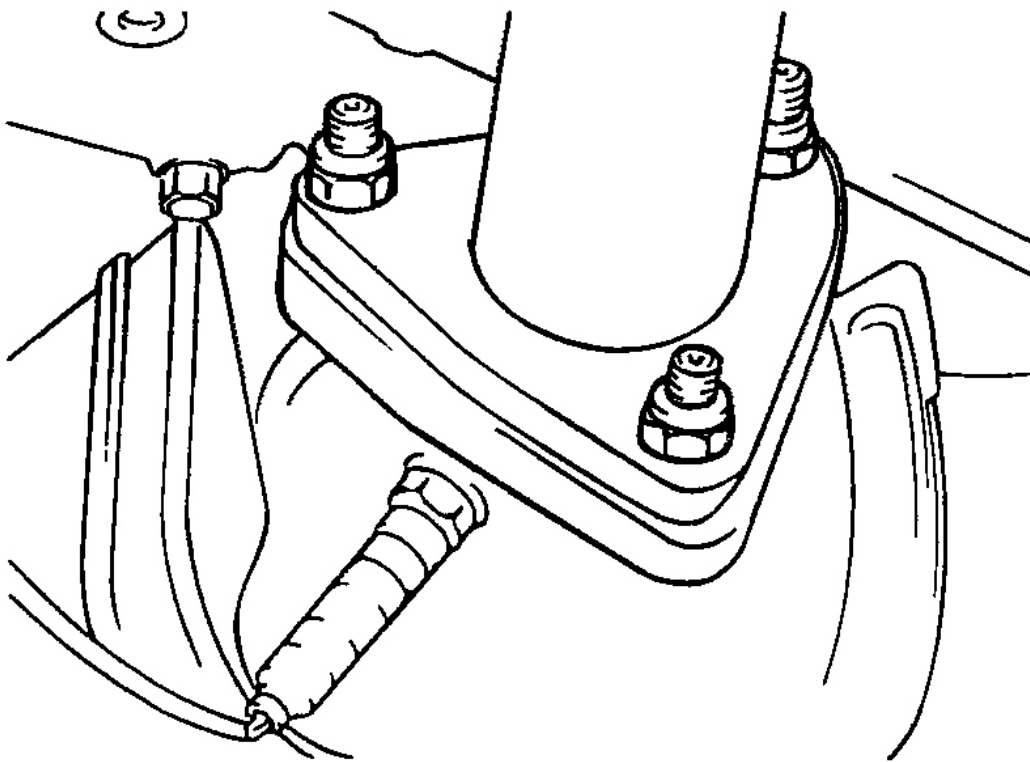

G00790105


**Fig. 145: View Of Exhaust Pipe**  
Courtesy of HYUNDAI MOTOR CO.

3. Remove the front exhaust pipe from the rubber hanger.

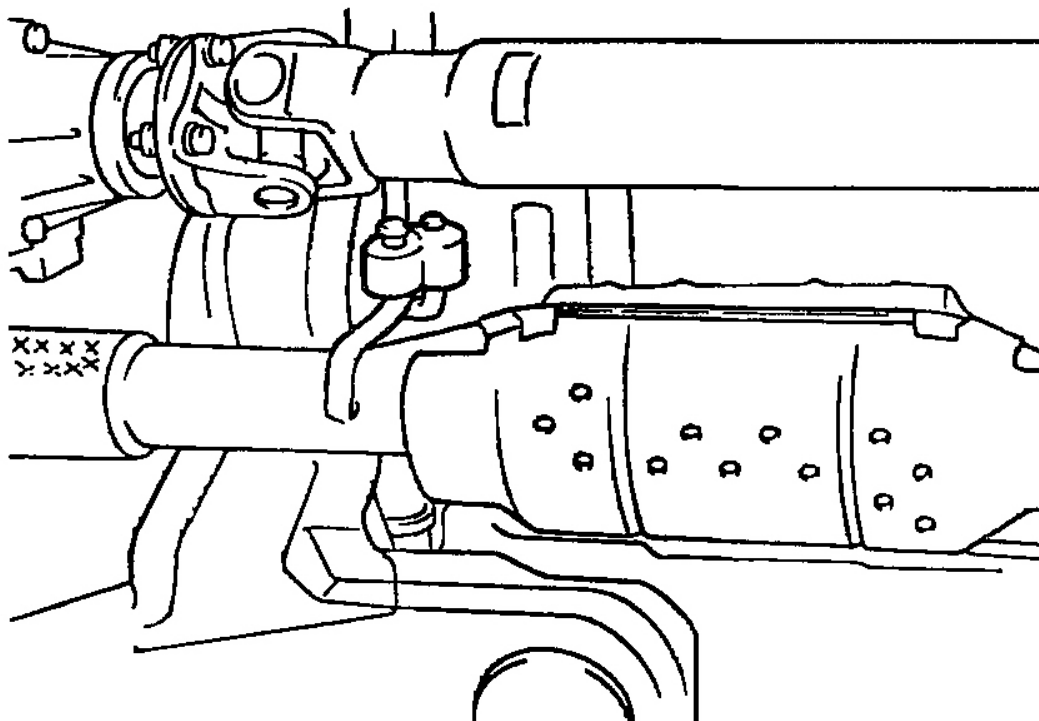

G00790106

**Fig. 146: View Of Front Exhaust Pipe & Rubber Hanger**  
Courtesy of HYUNDAI MOTOR CO.

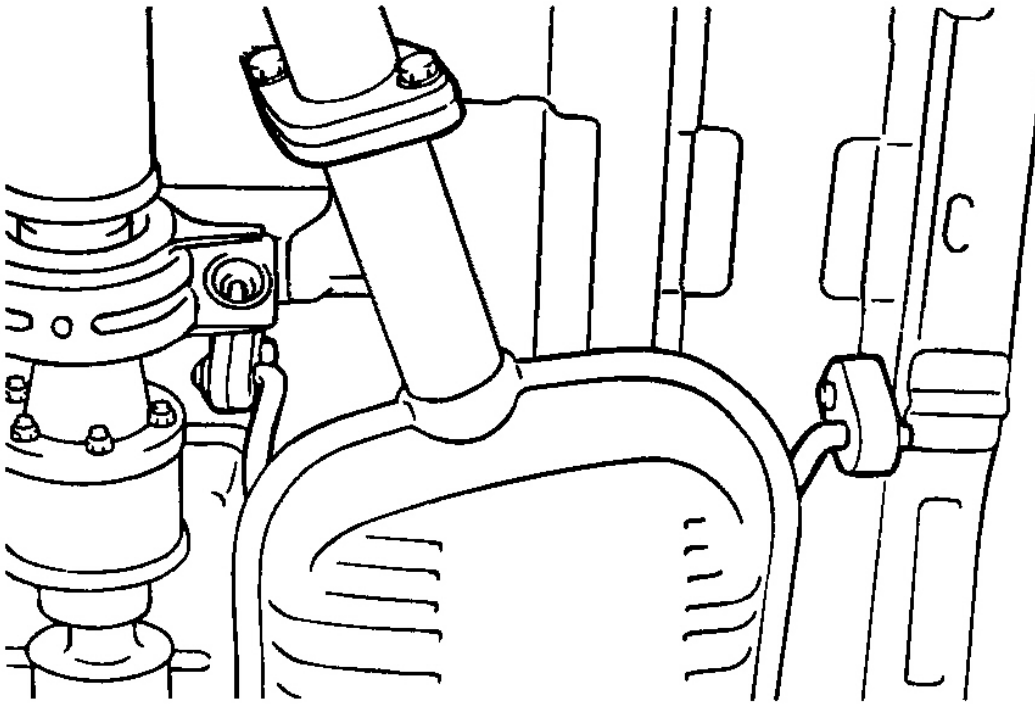

G00790107

**Fig. 147: View Of Front Exhaust Pipe & Rubber Hangers**  
Courtesy of HYUNDAI MOTOR CO.

#### **Inspection**


1. Check the mufflers and pipes for leaks, corrosion and damage.
2. Check the rubber hangers for deterioration and cracks.

#### **Installation**

1. Temporarily install the front exhaust pipe (catalytic converter assembly), the center exhaust pipe and the main muffler in this order.
2. Install the rubber hangers so that they hang equally (left and right).
3. Tighten the parts securely and then confirm that there is no interference with any of components.

#### **AIR CLEANER (ACL)**

#### **Components**

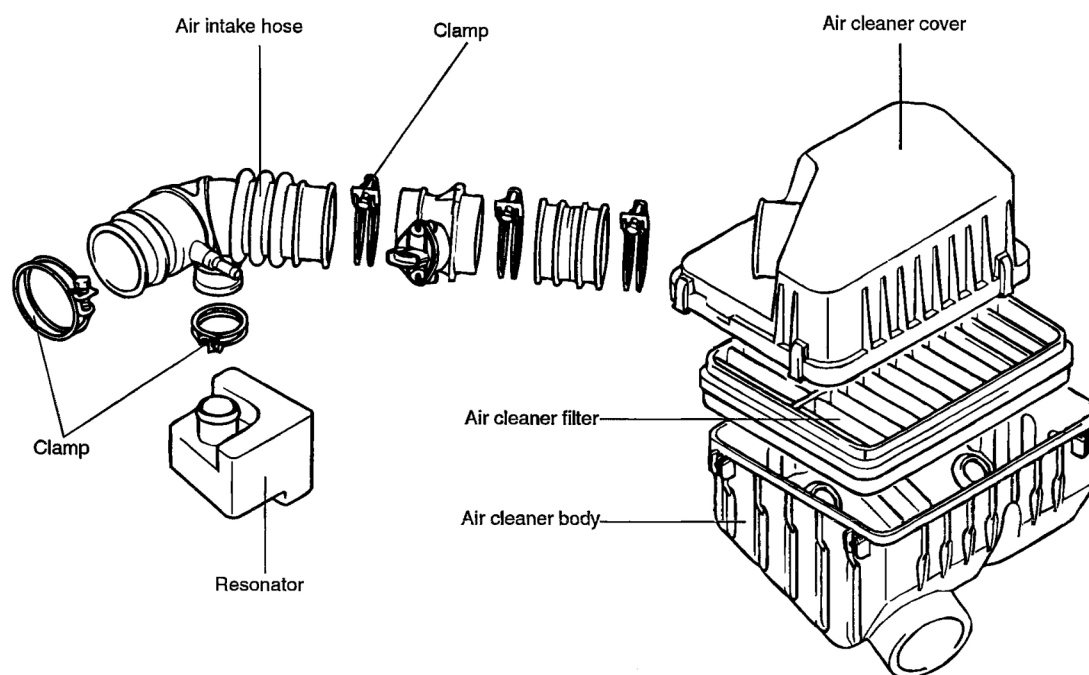


G00790108

**Fig. 148: Air Cleaner Components**  
Courtesy of HYUNDAI MOTOR CO.

### Removal

1. Disconnect the air flow sensor connector.
2. Remove the air intake hose at the air cleaner and the resonator.
3. Remove the three bolts attaching the air cleaner mounting brackets.
4. Detach the air cleaner.

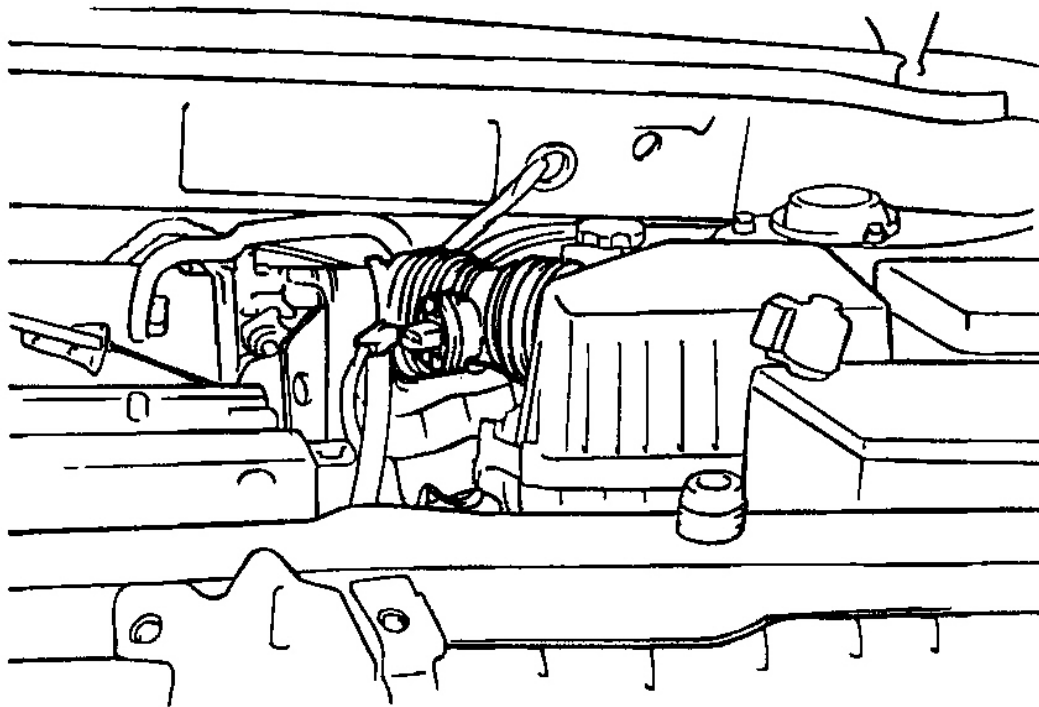

G00790109


**Fig. 149: View Of Air Cleaner**  
Courtesy of HYUNDAI MOTOR CO.

5. Remove the air flow sensor from the air intake hose.

**CAUTION: Do not pull on the air flow sensor wires.**

#### Inspection


1. Check the air cleaner body, cover, or filter for distortion, corrosion or damage.
2. Check the air duct for damage.

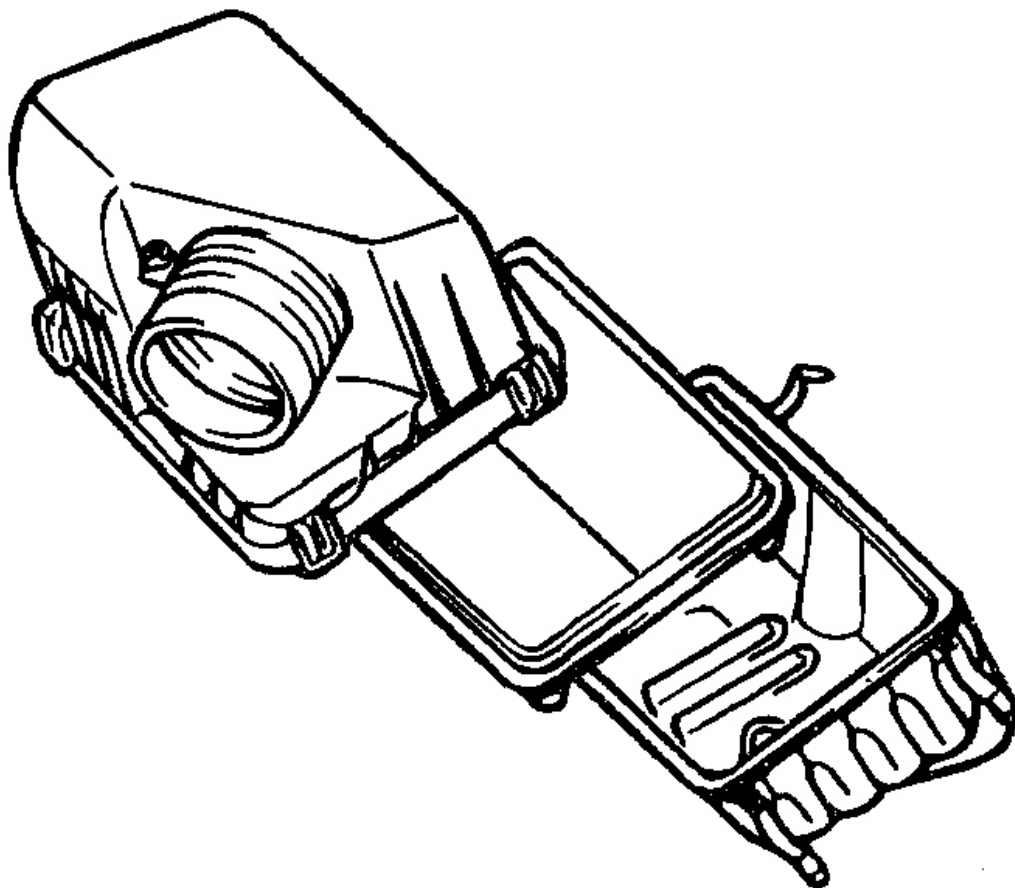

G00790110

**Fig. 150: Identifying Air Cleaner Cover Assembly**  
Courtesy of HYUNDAI MOTOR CO.

3. Check the air cleaner element for restriction, contamination or damage. If the element is slightly restricted, remove the dust and debris by blowing compressed air from the inside of the element.

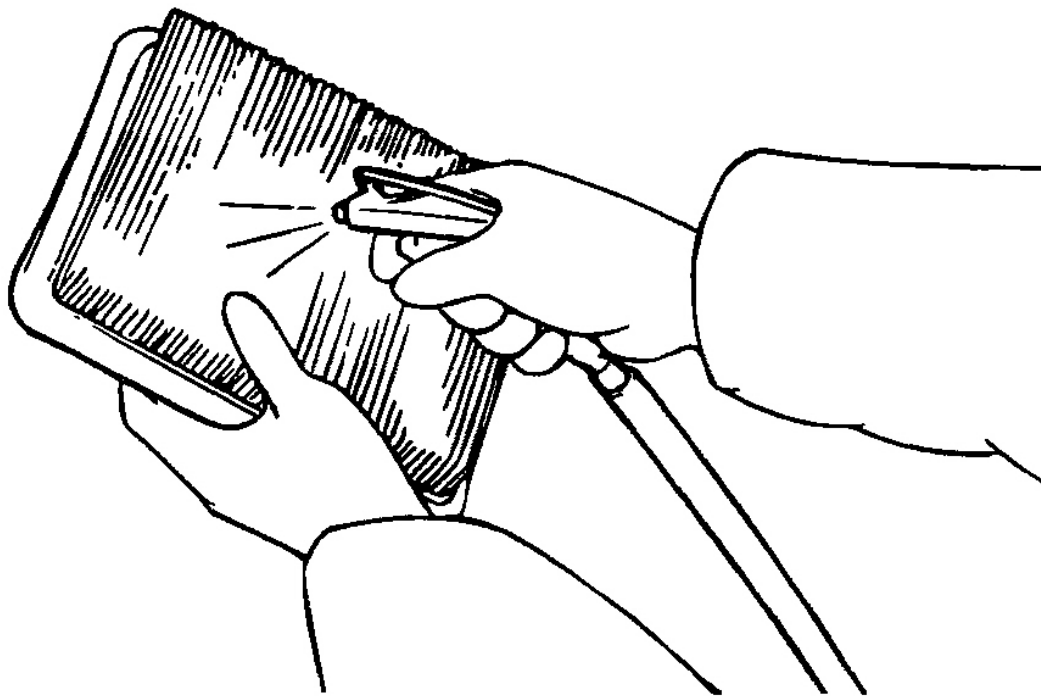

G00790111

**Fig. 151: Cleaning Air Filter**

Courtesy of HYUNDAI MOTOR CO.

#### Installation


Install the air cleaner assembly following the reverse order of removal.

## CYLINDER HEAD ASSEMBLY

### CYLINDER HEAD

#### Components



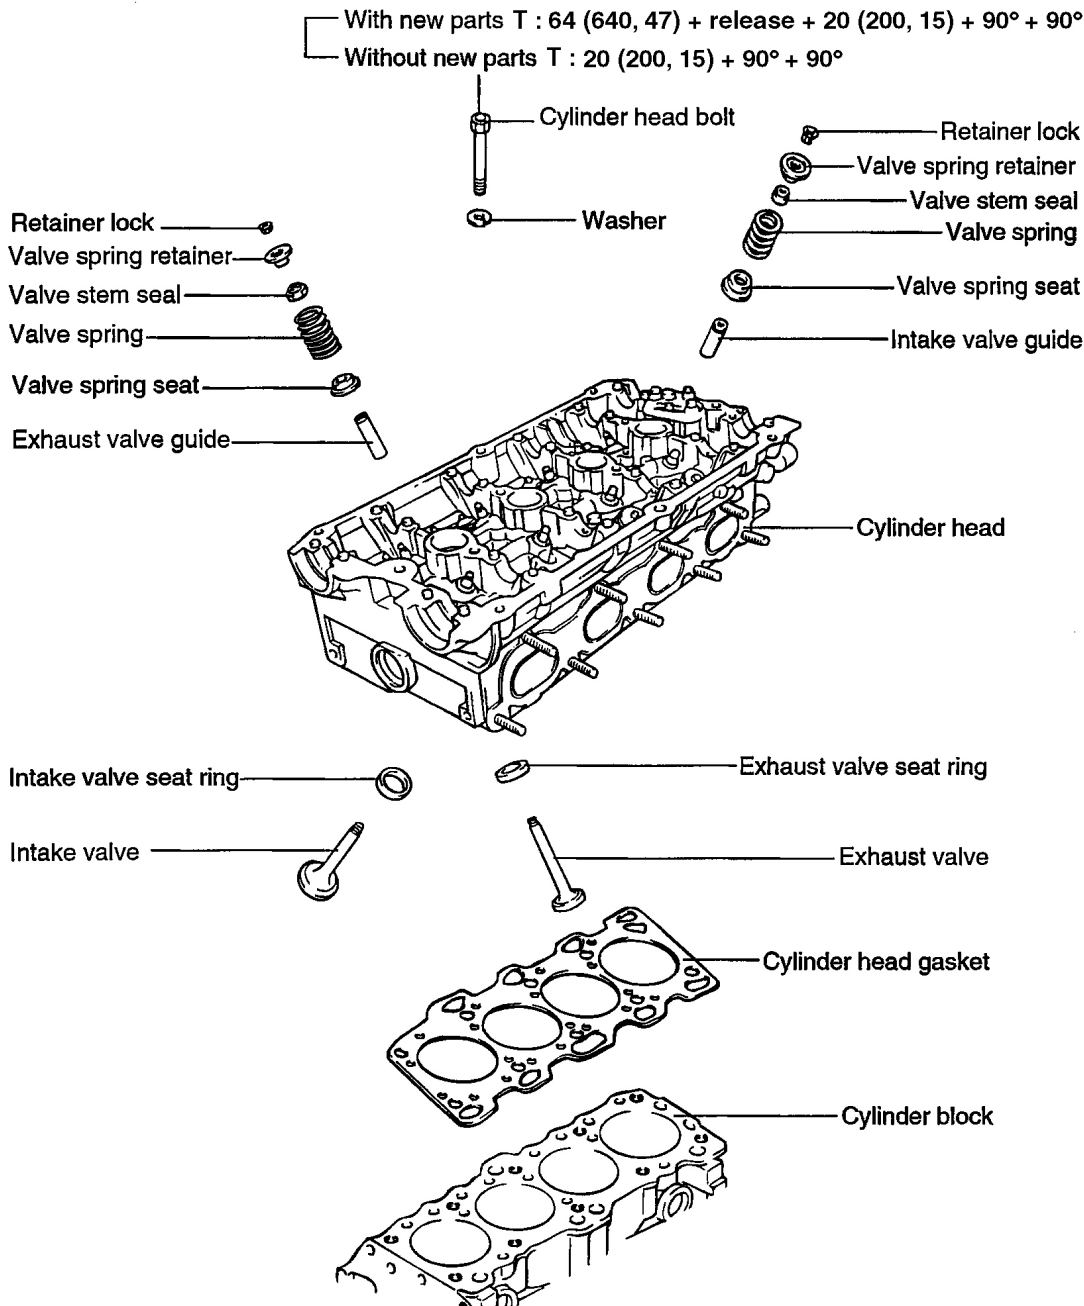

**TORQUE : Nm (kg·cm, lb·ft)**



G00790112

**Fig. 152: Cylinder Head Components**  
Courtesy of HYUNDAI MOTOR CO.

#### Disassembly

1. Using a tool, remove the cylinder head bolts in the order shown in the illustration.

← Camshaft sprocket side

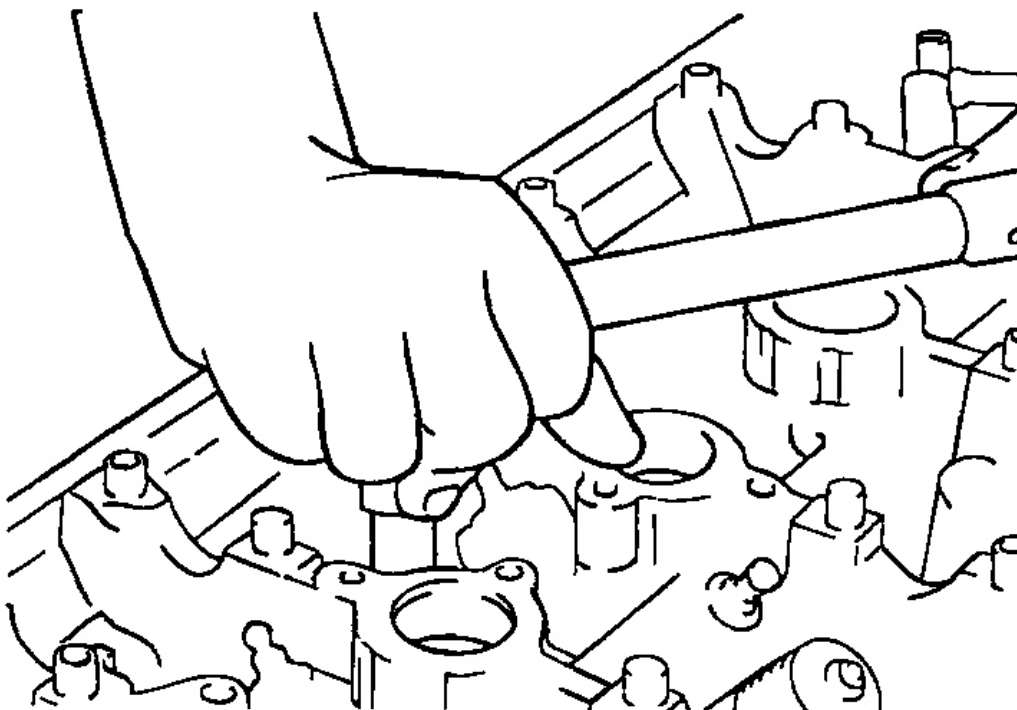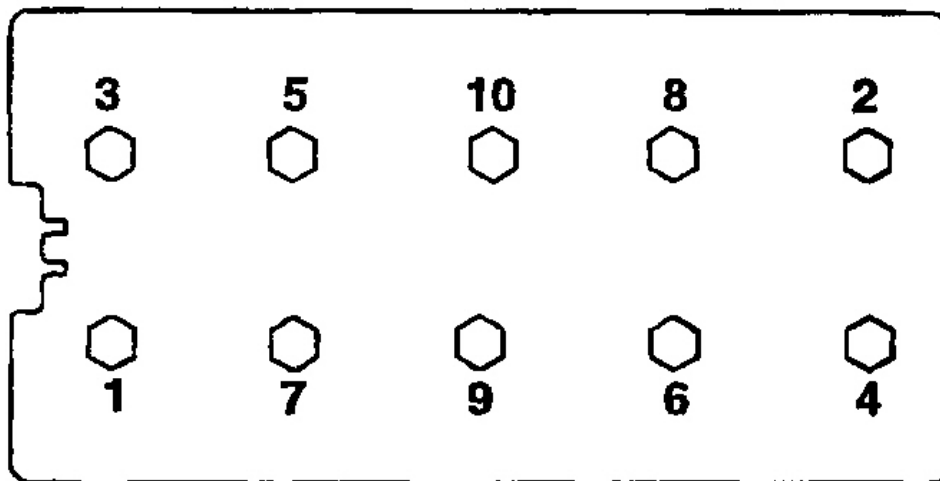


G00790113

**Fig. 153: Cylinder Head Bolt Removal Sequence**

Courtesy of HYUNDAI MOTOR CO.

2. Using the special tool (09222-28000, 09222-28100), remove the valve spring retainer lock. Then remove the spring retainer, valve spring, spring seat and valve.

**NOTE:** Arrange these parts so that they can be reinstalled in their original positions.

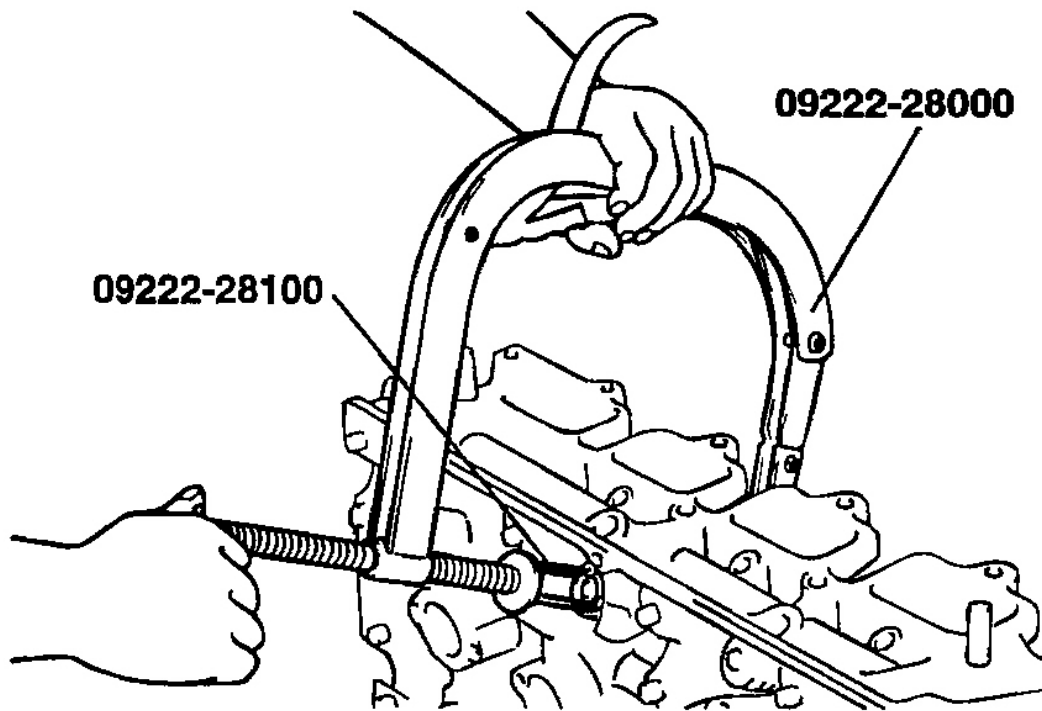

G00790114

**Fig. 154: Removing Valve Spring Retainer Locks**

Courtesy of HYUNDAI MOTOR CO.

3. Remove the valve stem seals with pliers.

**NOTE:** Do not reuse the valve stem seals.




G00790115

**Fig. 155: Removing Valve Stem Seals**  
Courtesy of HYUNDAI MOTOR CO.

**Inspection**

1. Check the cylinder head for cracks, damage and coolant leakage. If cracked, replace the cylinder head.
2. Remove scale, sealing compound and carbon deposits completely. After cleaning the oil passages, apply compressed air to verify that the passages are not clogged.

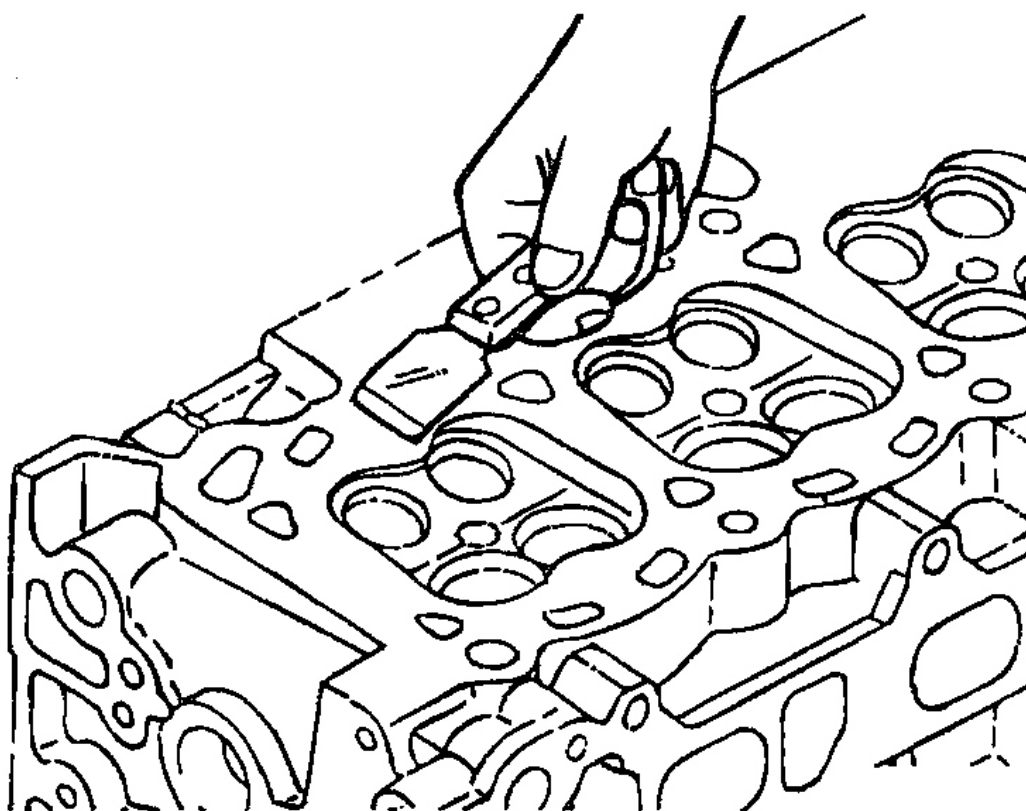

G00790116


**Fig. 156: Cleaning Cylinder Head Surface**  
Courtesy of HYUNDAI MOTOR CO.

3. Check the cylinder head surface for flatness in the direction as shown in the illustration. If flatness exceeds service limit in any direction, either replace the cylinder head or machine the cylinder head matching surface lightly.

#### **Flatness of cylinder head gasket surface**

Standard : Less than 0.03 mm (0.0012 in.)

Limit : 0.2 mm (0.008 in.)

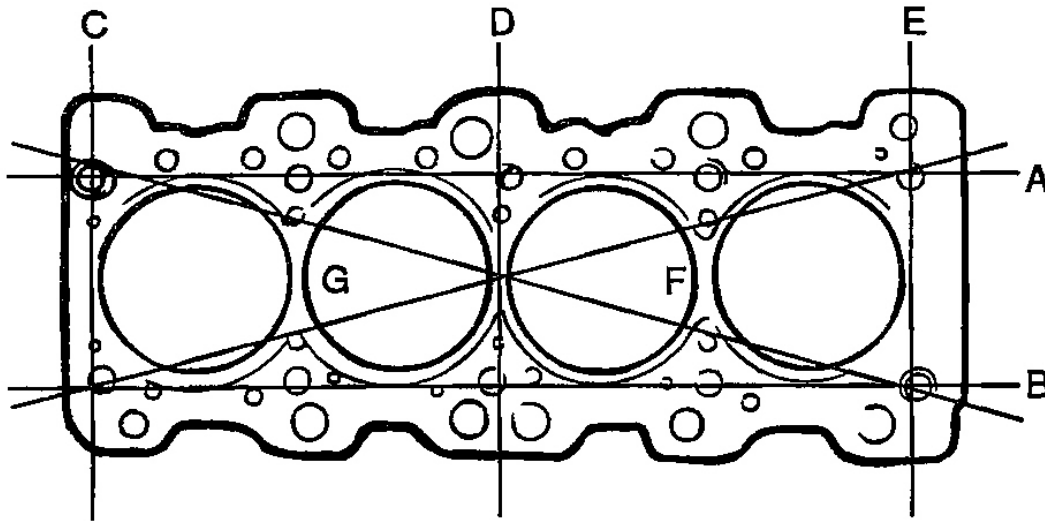


G00790117

**Fig. 157: Checking Cylinder Head Flatness**  
Courtesy of HYUNDAI MOTOR CO.

#### Valves

1. Using a wire brush, clean the valve thoroughly.

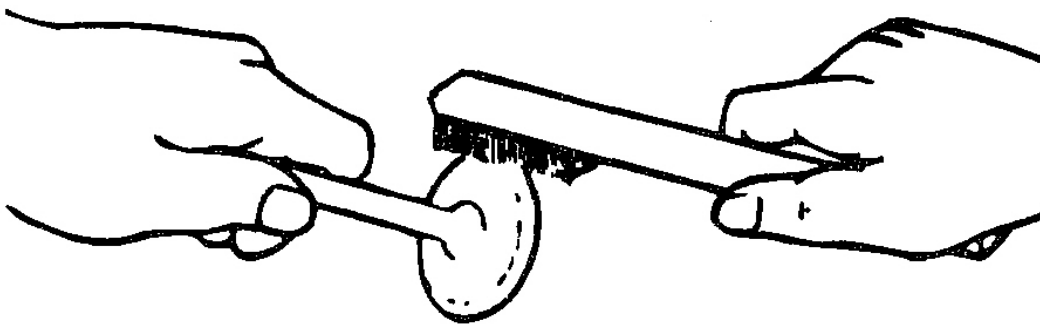

G00790118

**Fig. 158: Cleaning Valve**  
Courtesy of HYUNDAI MOTOR CO.

2. Check each valve for wear, damage and distortion of the head and the stem at B Position. Replace, if necessary. If stem end is hollowed out or worn, resurface as necessary. This correction must be limited to

a minimum. Also resurface the valve face.

Replace the valve if the margin has decreased to less than the service limit.

**Margin****[Standard]**


Intake : 1.0 mm (0.040 in.)

Exhaust : 1.5 mm (0.059 in.)

**[Limit]**

Intake : 0.7 mm (0.028 in.)

Exhaust : 1.0 mm (0.040 in.)

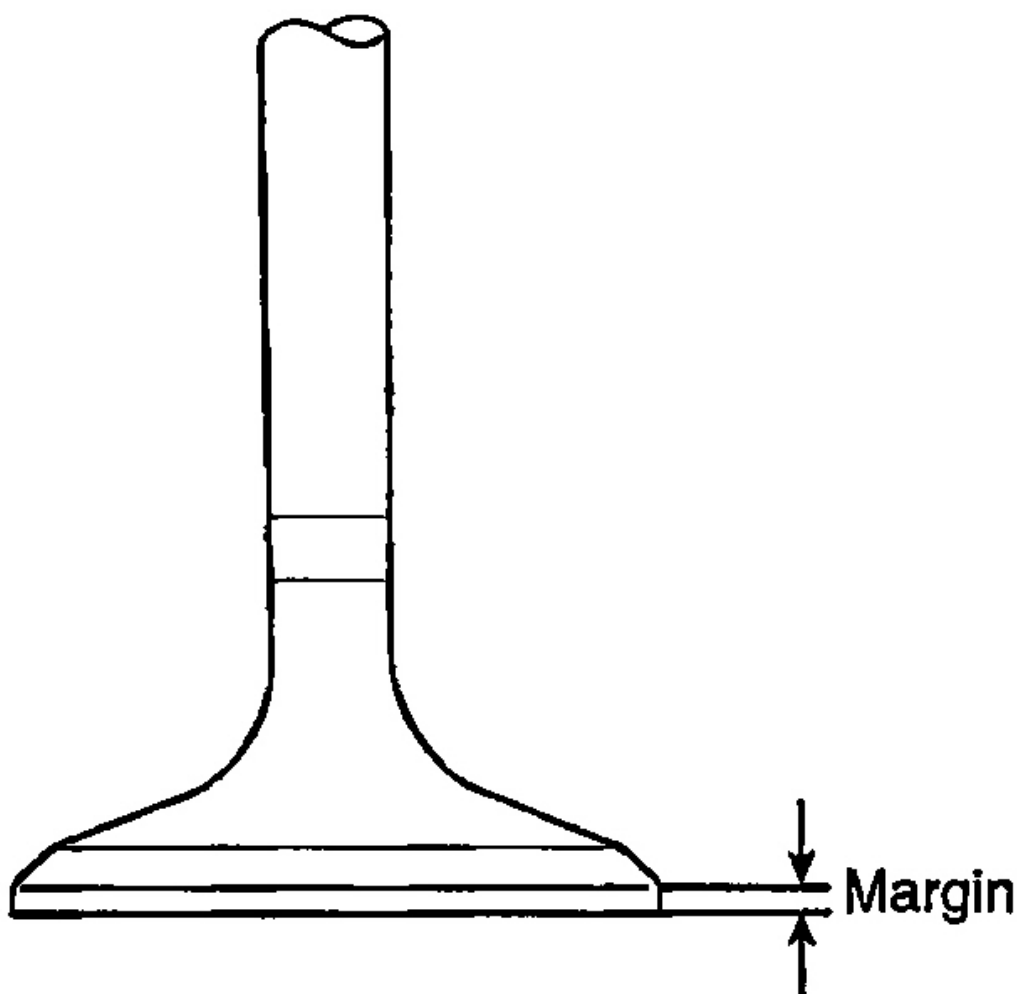

G00790119

**Fig. 159: Identifying Valve Margin**  
Courtesy of HYUNDAI MOTOR CO.

#### Valve Springs

1. Check the free height of each valve spring. If they exceed the service limit, replace the springs.
2. Using a square, test the squareness of each spring. If a spring is excessively out-of-square, replace it.

#### Valve spring

[Standard]



## 2002 Hyundai Santa Fe

2002-04 ENGINES 2.4L 4-Cylinder - Santa Fe

Free height : 45.82 mm (1.804 in.)


Load : 23.3kg / 40 mm (55.8 lb / 1.57 in.)

Out of square : 1.5° or less

[Limit]

Free height : 44.82 mm (1.7646 in.)

Out of square : 4°

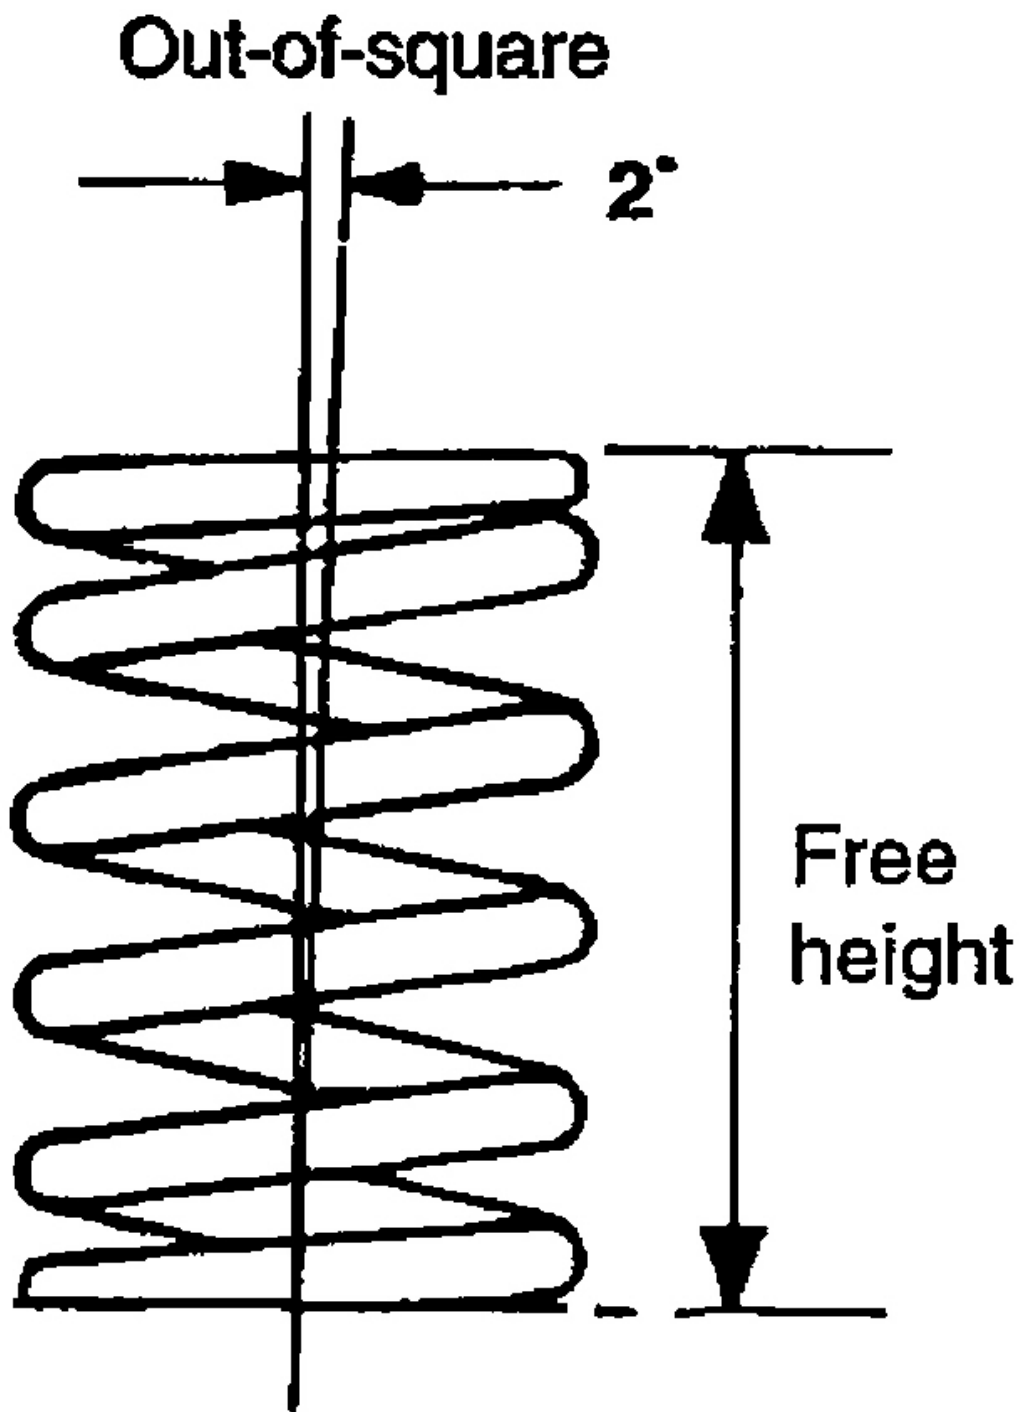

G00790120

**Fig. 160: Checking Valve Spring****Courtesy of HYUNDAI MOTOR CO.****Valve Guides**

Check the valve stem-to-guide clearance. If the clearance exceeds the service limit, replace the valve guide with the next oversize part.

**Valve stem-to-guide clearance**

[Standard]



Intake : 0.020 ~ 0.047 mm (0.0008 ~ 0.0020 in.)

Exhaust : 0.050 ~ 0.085 mm (0.0020 ~ 0.0033 in.)

[Limit]


Intake : 0.1 mm (0.0040 in)

Exhaust : 0.15 mm (0.0059 in.)

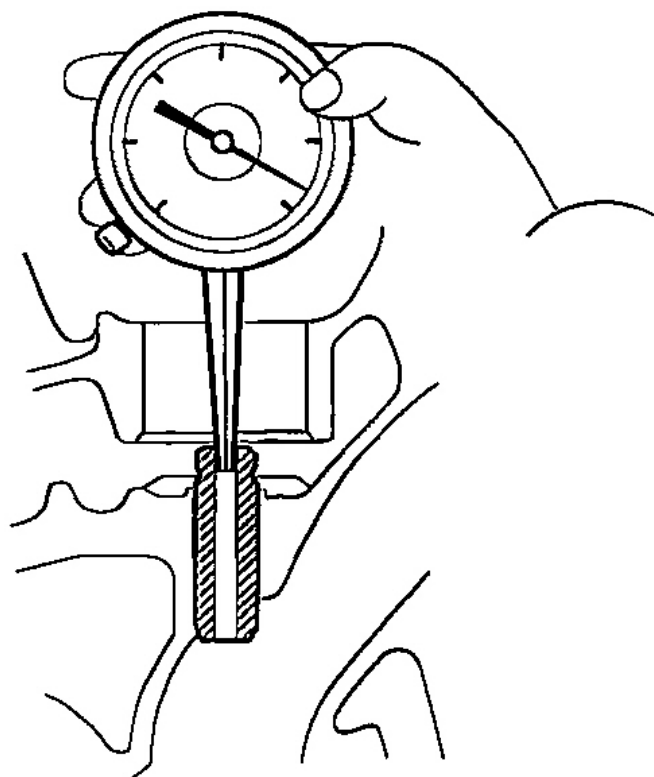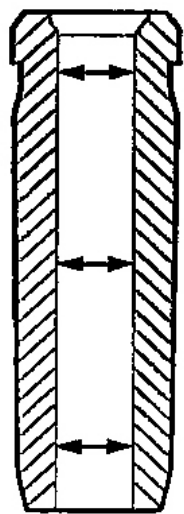

G00790121

**Fig. 161: Checking Valve Guides**  
Courtesy of HYUNDAI MOTOR CO.

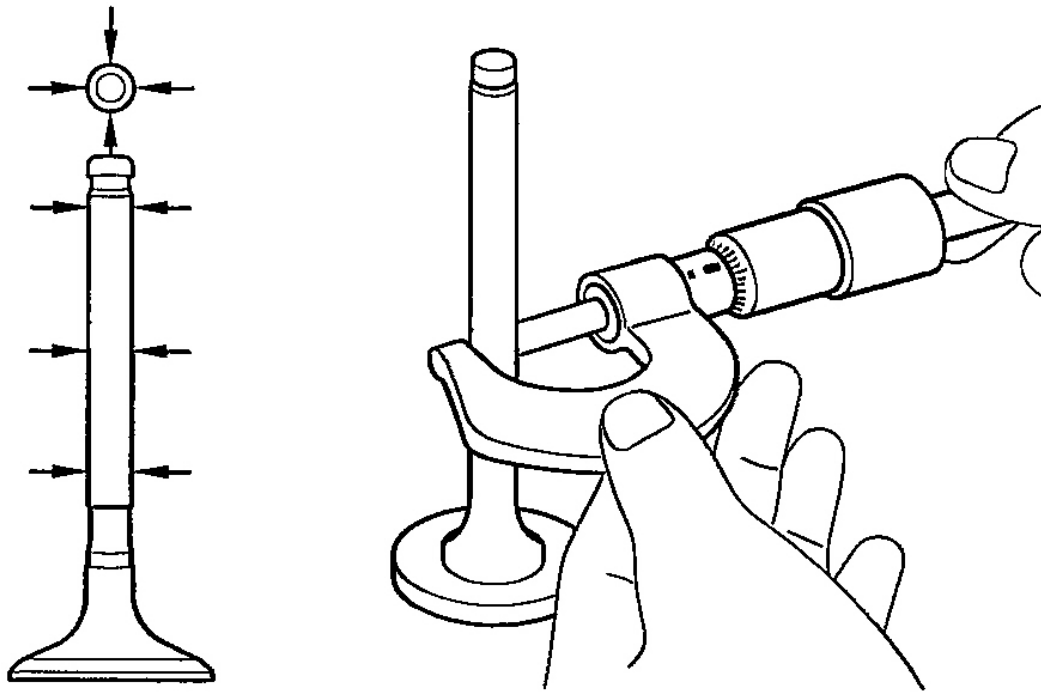


G00790122

**Fig. 162: Measuring Valve Stems**  
Courtesy of HYUNDAI MOTOR CO.

#### Replacing Valve Seat Ring

1. Cut away the inner face of the valve seat to reduce the wall thickness.

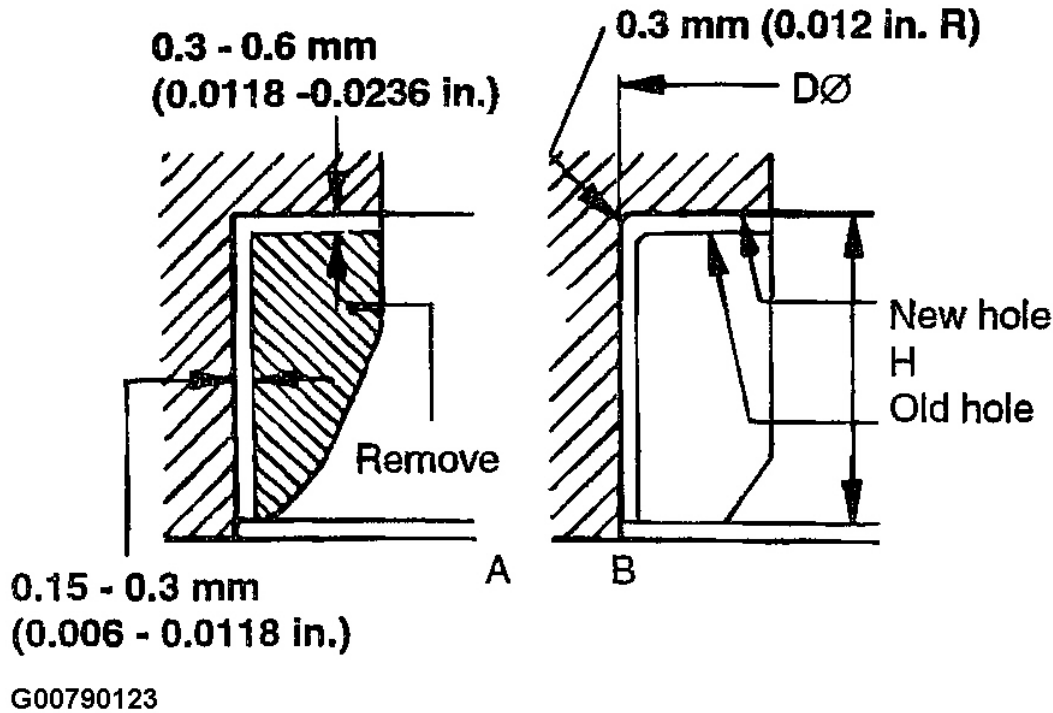

**Fig. 163: Cutting Inner Face Of Valve Seat**  
Courtesy of HYUNDAI MOTOR CO.

2. Enlarge the diameter of the valve seat so that it matches the specified oversize hole diameter of the new valve seat ring.
3. Heat the cylinder head to about 250°C (480°F) and press-fit an oversize seat ring for the bore in the cylinder head.
4. Using lapping compound, lap the valve to the new seat.

#### Valve seat contact width

0.9 ~ 1.3 mm (0.035 ~ 0.051 in.)

## 2002 Hyundai Santa Fe

2002-04 ENGINES 2.4L 4-Cylinder - Santa Fe


| Description                | Size mm (in.)                      | Size mark | Seat ring height H mm (in.)                          | Oversize hole diameter I.D. mm (in.)                           |
|----------------------------|------------------------------------|-----------|------------------------------------------------------|----------------------------------------------------------------|
| Intake valve<br>Seat ring  | 0.3(0.012) O.S.<br>0.6(0.024) O.S. | 30<br>60  | 7.9~8.1<br>(0.311~0.319)<br>8.2~8.4<br>(0.323~0.331) | 35.300~35.325 (1.3898~1.3907)<br>35.600~35.625 (1.4016~1.4026) |
| Exhaust valve<br>Seat ring | 0.3(0.012) O.S.<br>0.6(0.024) O.S. | 30<br>60  | 7.9~8.1<br>(0.311~0.319)<br>8.2~8.4<br>(0.323~0.331) | 33.300~33.325 (1.3110~1.3120)<br>33.600~33.625 (1.3228~1.3238) |

G00790124

**Fig. 164: Valve Seat Insert Oversizes**  
Courtesy of HYUNDAI MOTOR CO.

### Replacing Valve Guide

1. Using the special tool (09221-3F000 A/B), withdraw the old valve guide toward the bottom of cylinder head.
2. Recondition the valve guide hole so that it can match the newly press-fitted oversize valve guide.

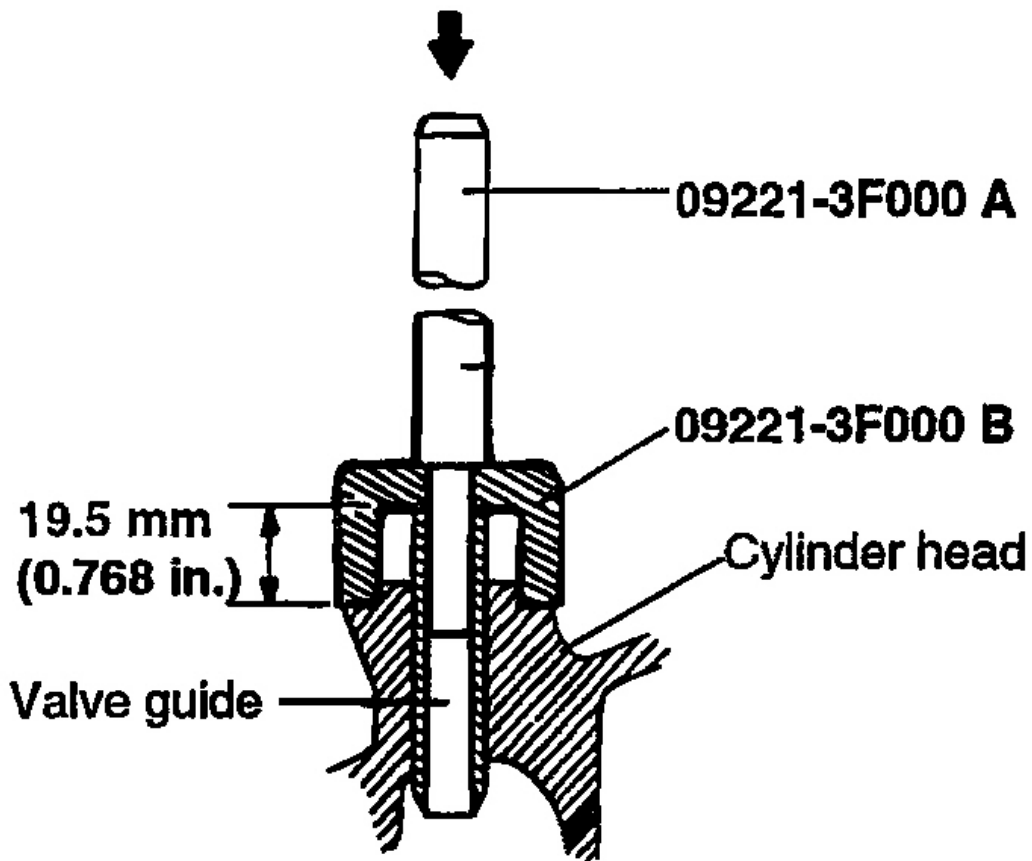


G00790125

**Fig. 165: Press Fit Valve Guide**  
Courtesy of HYUNDAI MOTOR CO.

- Using the special tool (09221-3F000 A/B), press-fit the valve guide. The valve guide must be press-fitted from the upper side of the cylinder head. Keep in mind that the intake and exhaust valve guides are different in length.

**NOTE:** Do not install a valve guide unless it is oversize.



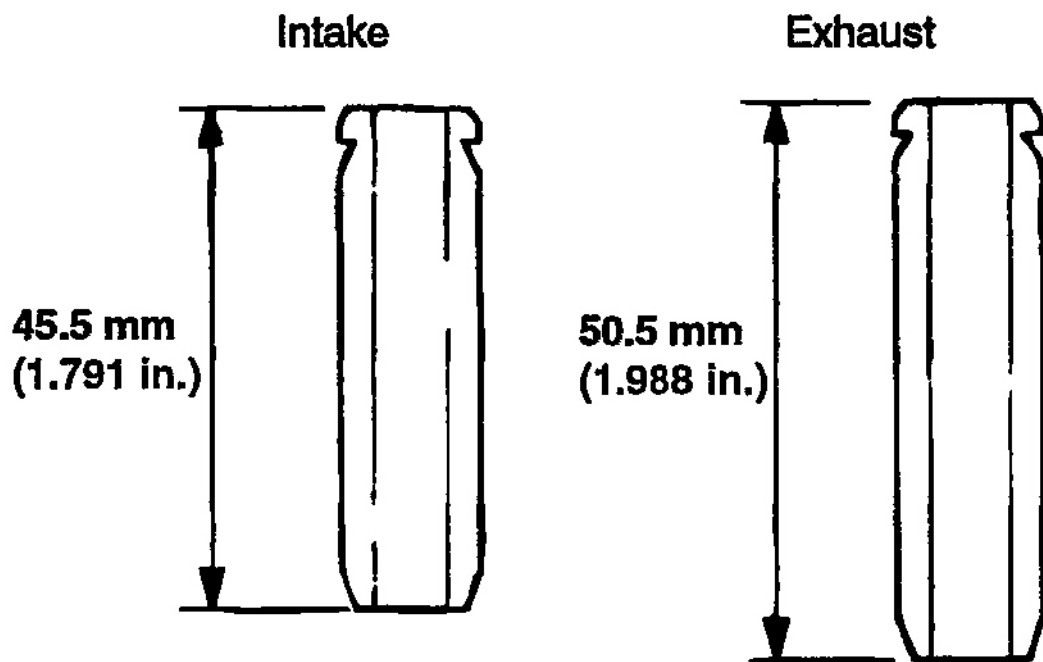

G00790126

**Fig. 166: Checking If Valve Is Fully Seated**  
Courtesy of HYUNDAI MOTOR CO.

4. After the valve guide is press-fitted, insert a new valve and check for proper stem-to-guide clearance.
5. After the valve guide is replaced, check that the valve is seated properly. Recondition the valve seats as necessary.

| Over size mm (in.) | Size mark | Oversize valve guide hole size mm (in.) |
|--------------------|-----------|-----------------------------------------|
| 0.05 (0.002)       | 5         | 12.050 ~ 12.068<br>(0.4744 ~ 0.4751)    |
| 0.25 (0.010)       | 25        | 12.250 ~ 12.268<br>(0.4823 ~ 0.4830)    |
| 0.50 (0.020)       | 50        | 12.500 ~ 12.518<br>(0.4921 ~ 0.4928)    |

G00790127

**Fig. 167: Valve Guide Oversizes**  
 Courtesy of HYUNDAI MOTOR CO.

#### Reassembly

**NOTE:**


1. Clean each part before assembly.
2. Apply engine oil to the sliding and rotating parts.

1. Install the spring seats.
2. Using a special tool (09222-28200), tap the seal in position lightly.

**NOTE:**


- Do not reuse old valve stem seals.
- Incorrect installation of the seal could result in oil leakage past the valve guides.

3. Apply engine oil to each valve. Insert the valve into the valve guide. Avoid pushing the valve into the seal by force. After inserting the valve, check that it moves smoothly.

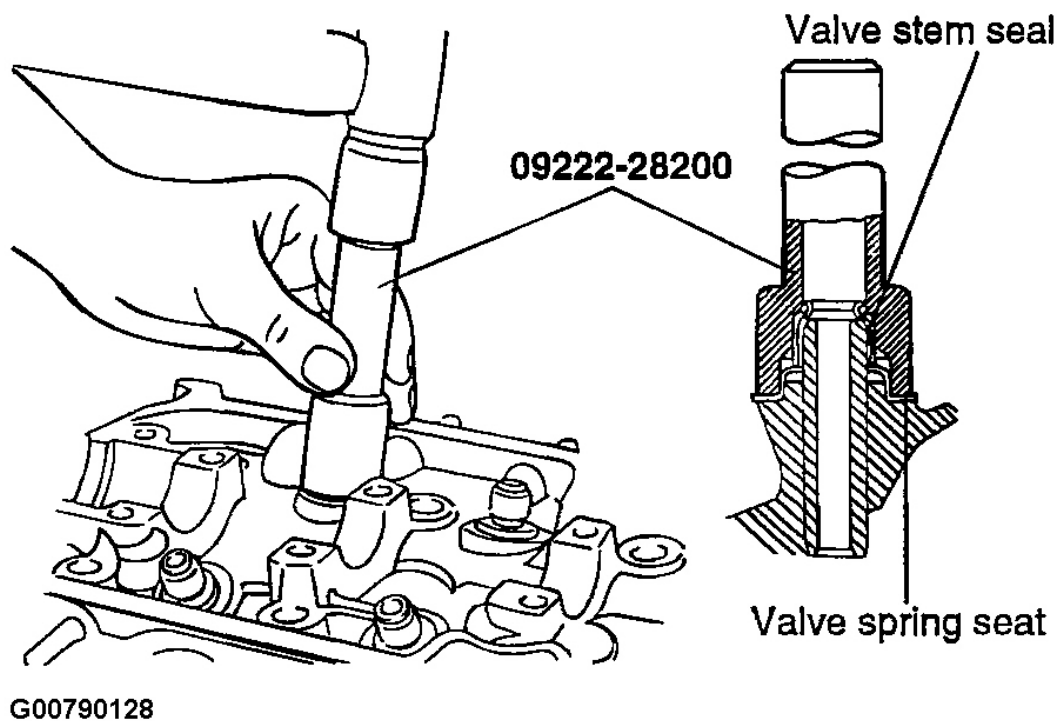

**Fig. 168: Installing Valve Stem Seal**  
 Courtesy of HYUNDAI MOTOR CO.

4. Place valve springs so that the side coated with enamel faces the valve spring retainer and then install the retainer.

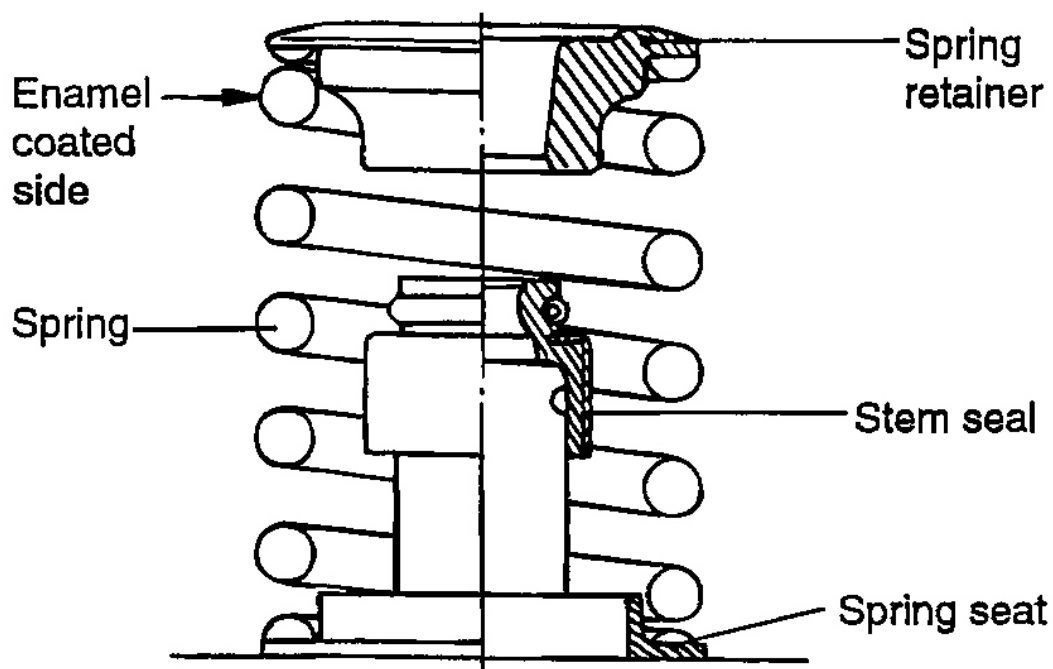


G00790129

**Fig. 169: Identifying Valve Spring Installation**

Courtesy of HYUNDAI MOTOR CO.

5. Using the special tool (09222-28000, 09222-28100), compress the spring and install the retainer locks. After installing the valves, ensure that the retainer locks are correctly in place before releasing the valve spring compressor.

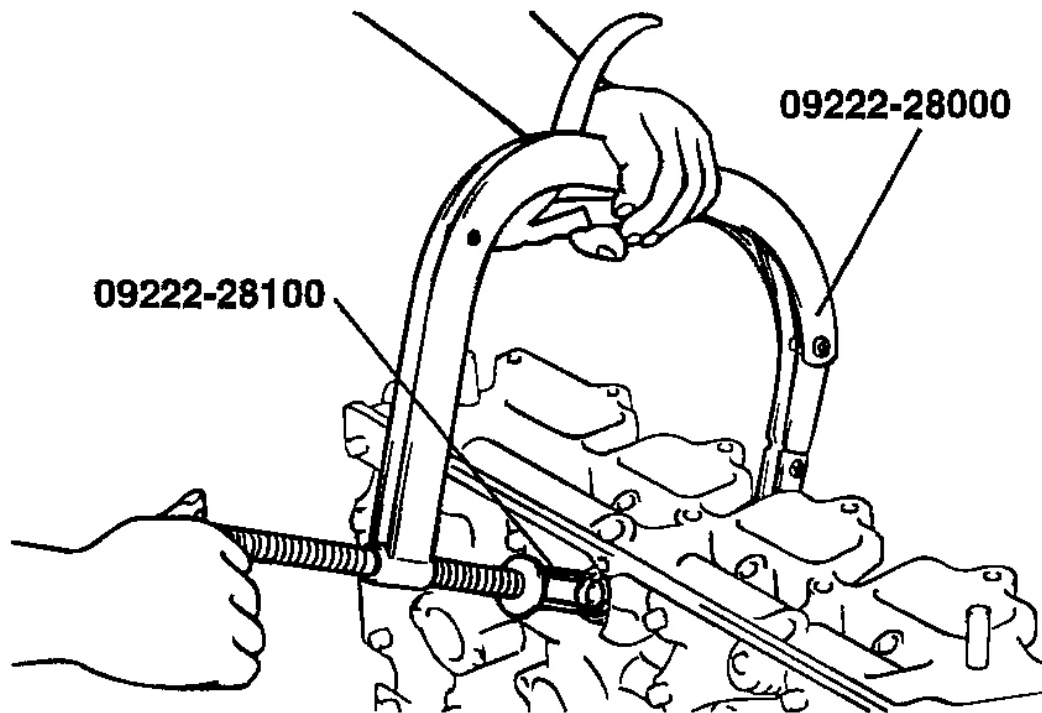

G00790130

**Fig. 170: Installing Valve Spring Retainer Locks**  
Courtesy of HYUNDAI MOTOR CO.



**NOTE:** When the spring is compressed, Check that the valve stem seal is not pressed against the bottom of the retainer.

6. Clean both gasket surfaces of the cylinder block and cylinder head.
7. Verify the identification marks on the cylinder head gasket.
8. Install the gasket so that the surface with the identification mark faces toward the cylinder head.

**NOTE:** Check and measure the length of each head bolt. Maximum length : 99.4 mm (3.9 in.)

9. Tighten the bolts to the specified torque.

← Camshaft sprocket side

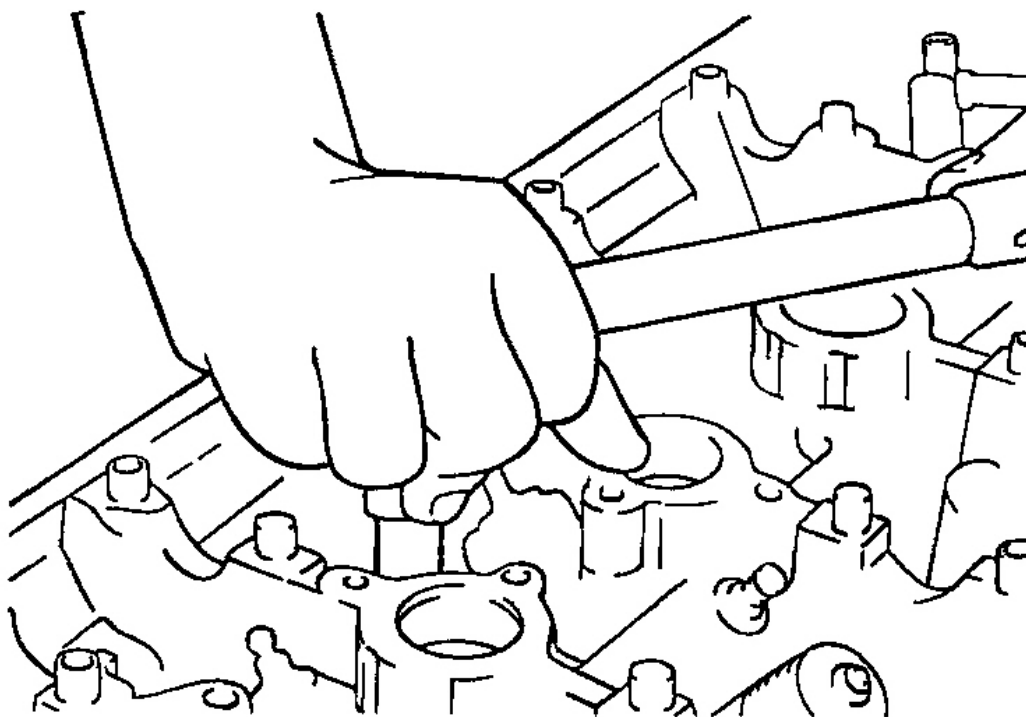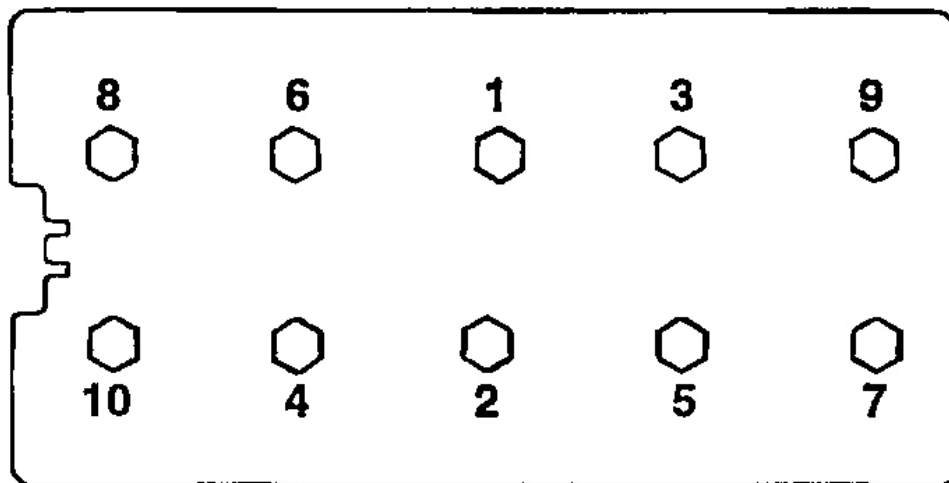

G00790131

**Fig. 171: Cylinder Head Bolt Tightening Sequence****Courtesy of HYUNDAI MOTOR CO.****Tightening torque**

With used parts (head bolt, cylinder head cylinder block) :


20Nm (200 kg.cm, 15 lb.ft) + 90° + 90°

With new parts (even if only one thing is replaced) :

64Nm (640 kg.cm, 47 lb.ft) + release + 20Nm

(200 kg.cm, 14 lb.ft) + 90° + 90°

**TIMING SYSTEM****TIMING BELT****Components**

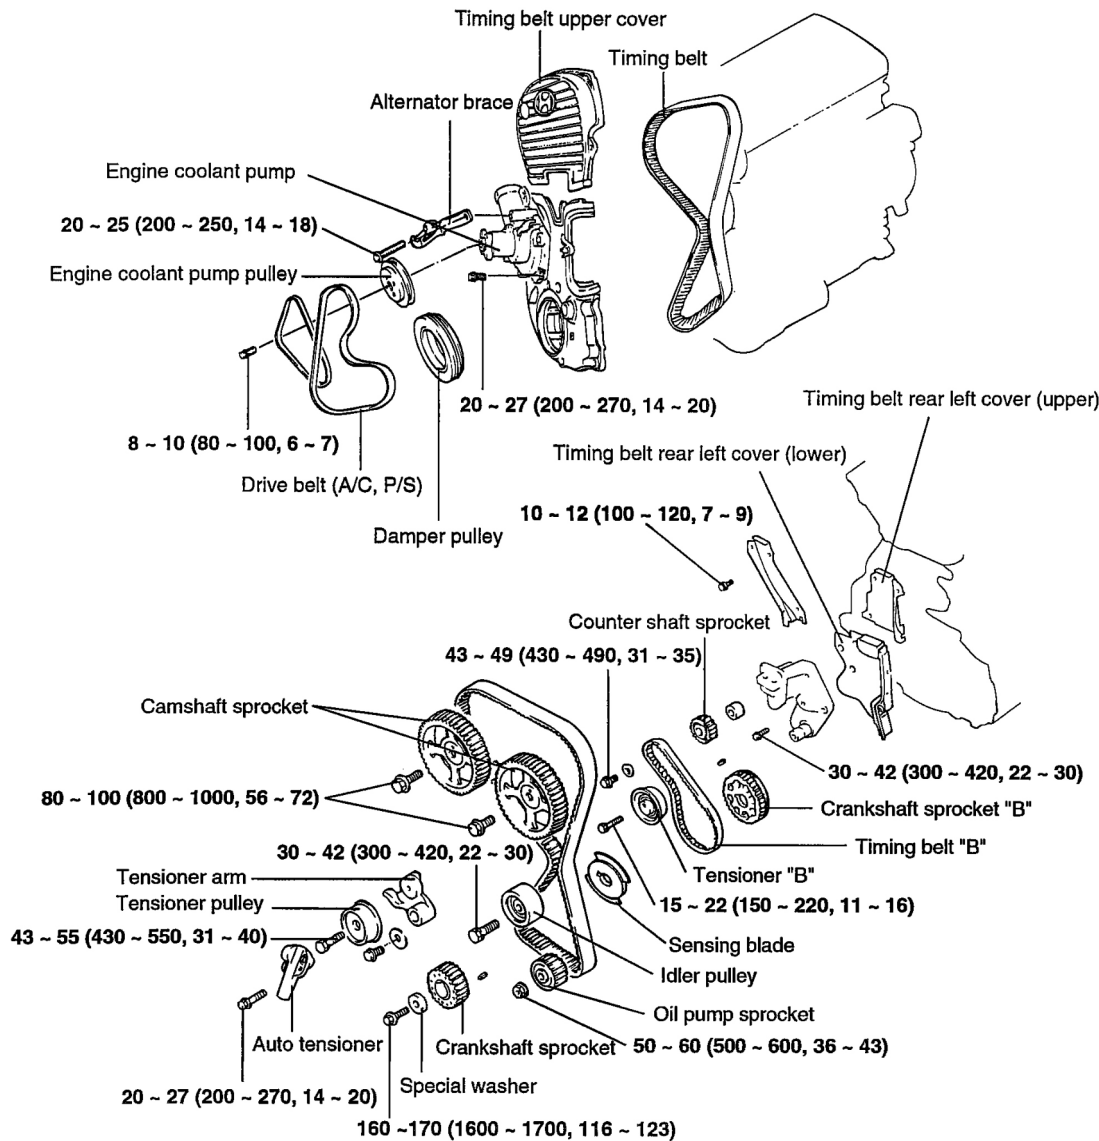

**TORQUE : Nm (kg·cm, lb·ft)**

G00790132

**Fig. 172: Timing Belt Components**  
Courtesy of HYUNDAI MOTOR CO.

### Removal


**CAUTION:** Rotate the crankshaft clockwise and align the timing marks to set the No. 1 cylinder's piston to TDC.  
At this time, the timing marks of the camshaft sprocket and cylinder head cover should coincide with each other and the dowel pin of the camshaft-sprocket should be at the upper side.



## 2002 Hyundai Santa Fe

2002-04 ENGINES 2.4L 4-Cylinder - Santa Fe

1. Remove the crankshaft pulley, engine coolant pump pulley and drive belt.
2. Remove the timing belt cover.
3. Remove the auto tensioner.

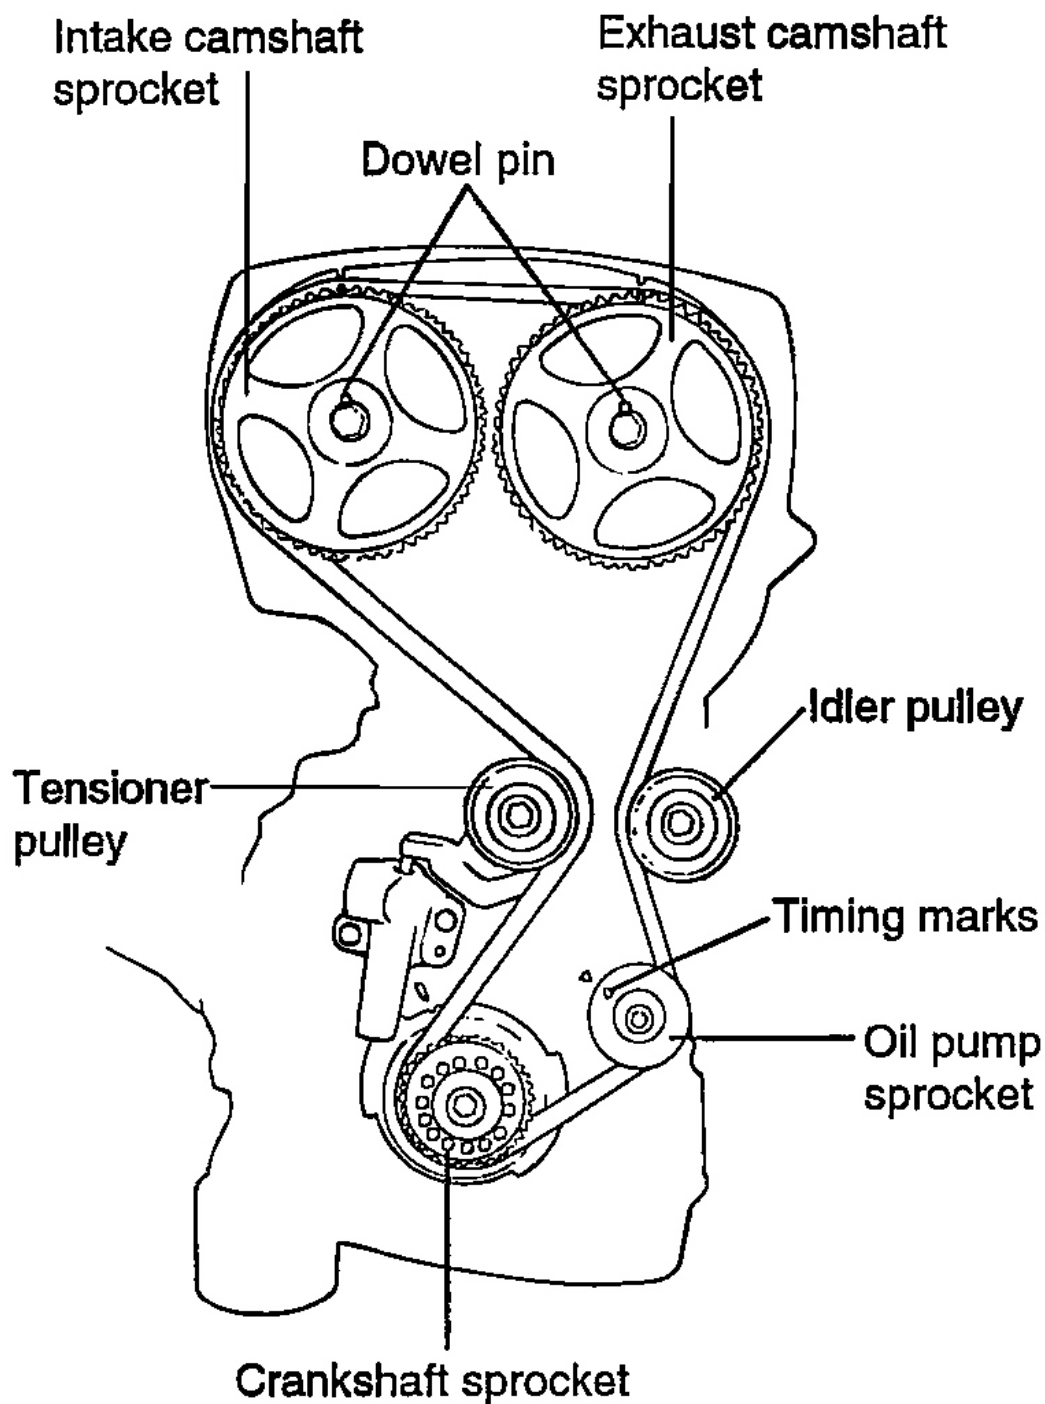


G00790133

**Fig. 173: Identifying Timing Belt & Pulleys**

Courtesy of HYUNDAI MOTOR CO.

**NOTE:** If the timing belt is reused, make an arrow mark indicating the turning direction (or the front of the engine) to make sure that the belt is reinstalled in the same direction as before.  
In this case the timing marks on the camshaft sprocket and on the locker cover should be aligned and the dowel pins on the camshaft sprockets should be positioned upward.

4. Remove the timing belt.

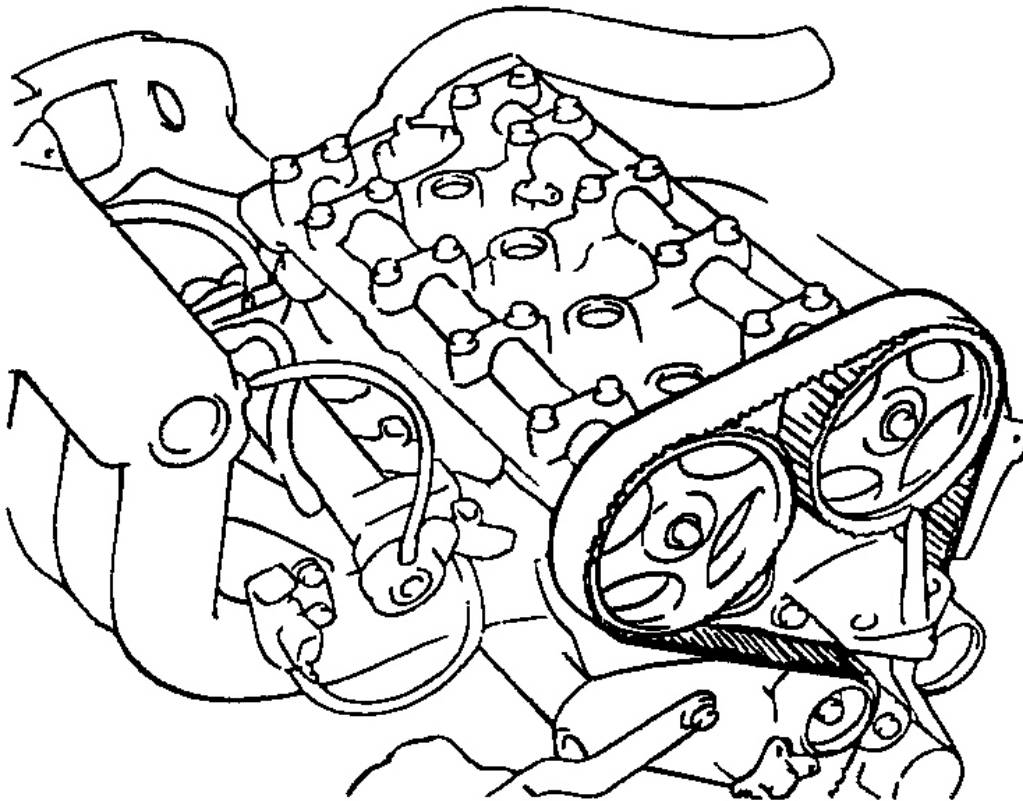


G00790134

**Fig. 174: View Of Timing Belt**  
Courtesy of HYUNDAI MOTOR CO.

5. Remove the camshaft sprockets.

**NOTE:** Be careful not to damage the cylinder head and camshaft sprocket with


the wrench.

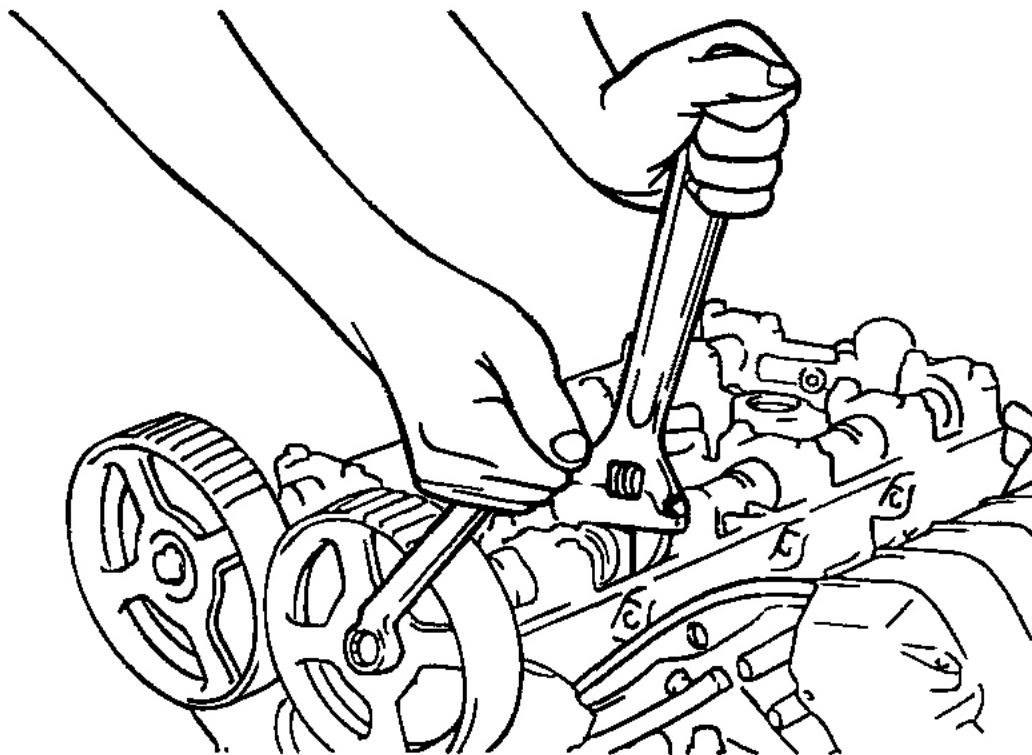

G00790135

**Fig. 175: Removing Camshaft Sprockets**  
Courtesy of HYUNDAI MOTOR CO.

6. When the oil pump sprocket nut is removed, first remove the plug at the left side of the cylinder block and insert a screwdriver to keep the left counter balance shaft in position. Use a screwdriver with a shaft measuring 8 mm (0.3in.) in diameter which can be inserted by more than 60 mm (2.36 in.)
7. Remove the oil pump sprocket retaining nut and the oil pump sprocket.

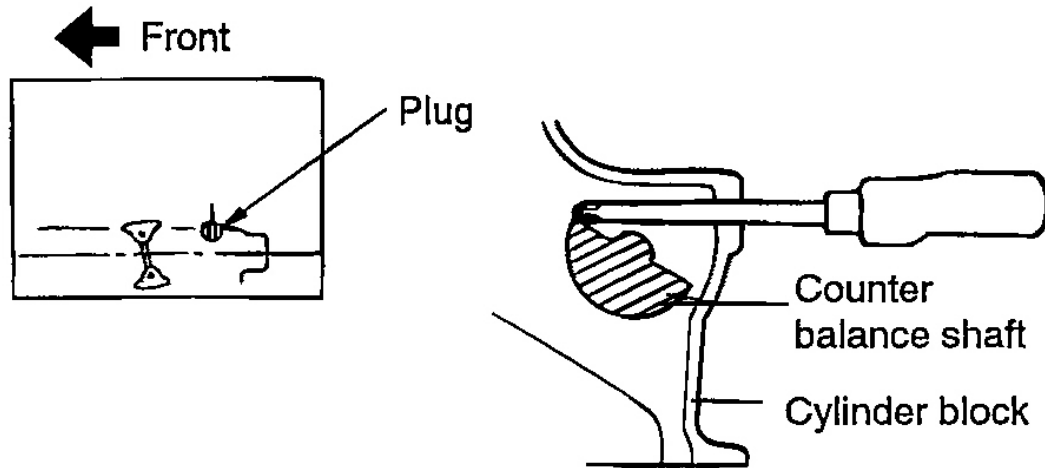


G00790136

**Fig. 176: Securing Counter Balance Shaft**  
Courtesy of HYUNDAI MOTOR CO.

8. Loosen the right counter balance shaft sprocket mounting bolt until it can be loosened by hand.
9. Next, remove the tensioner "B" and then the timing belt "B".

**CAUTION: After the timing belt "B" is removed, do not attempt to loosen bolts while holding the sprocket with pliers or any other tool.**

10. Remove the crankshaft sprocket "B" from the crankshaft.

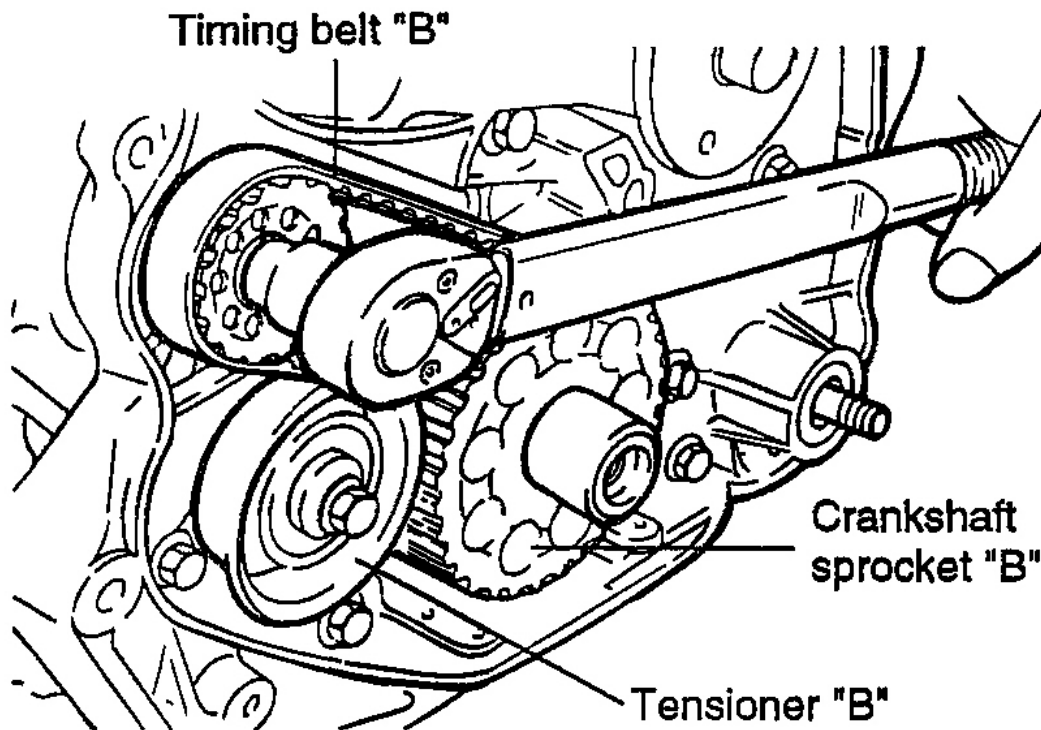

G00790137


**Fig. 177: Removing Crankshaft Sprocket "B"**

Courtesy of HYUNDAI MOTOR CO.

#### Inspection

##### Sprockets, Tensioner Pulley & Idler Pulley

1. Check the camshaft sprocket, crankshaft sprocket, tensioner pulley and idler pulley for abnormal wear, cracks or damage. Replace if necessary.
2. Inspect the tensioner pulley and the idler pulley for easy and smooth rotation and check for play or noise. Replace if necessary.
3. Replace the pulley if there is a grease leak from its bearing.

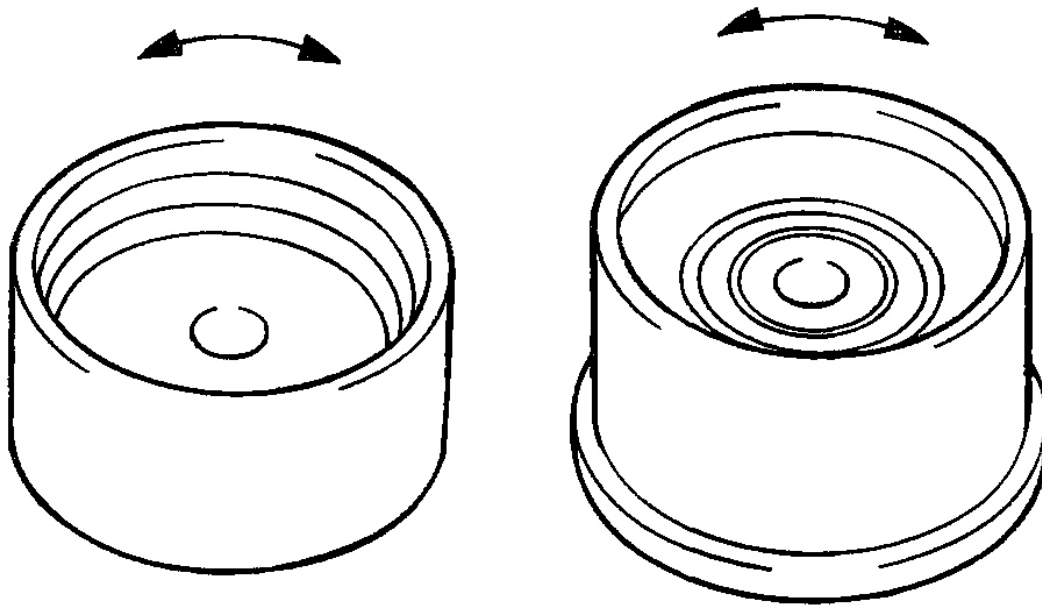


G00790138

**Fig. 178: Checking Pulley For Smooth Rotation**  
Courtesy of HYUNDAI MOTOR CO.

**Auto Tensioner**

1. Check the auto tensioner for leaking and replace if necessary.
2. Check the rod end for wear or damage and replace if necessary.

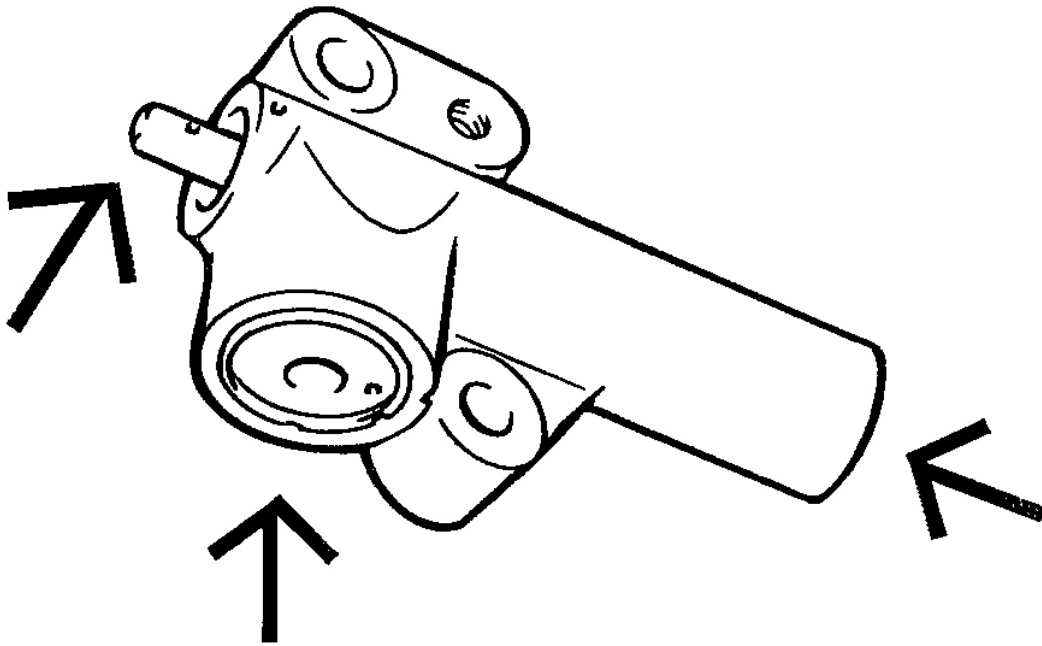


G00790139

**Fig. 179: Identifying Auto Tensioner**  
Courtesy of HYUNDAI MOTOR CO.

3. Measure the rod protrusion. If it is out of specification, replace the auto tensioner.

Standard value : 14.5 mm (0.57 in)



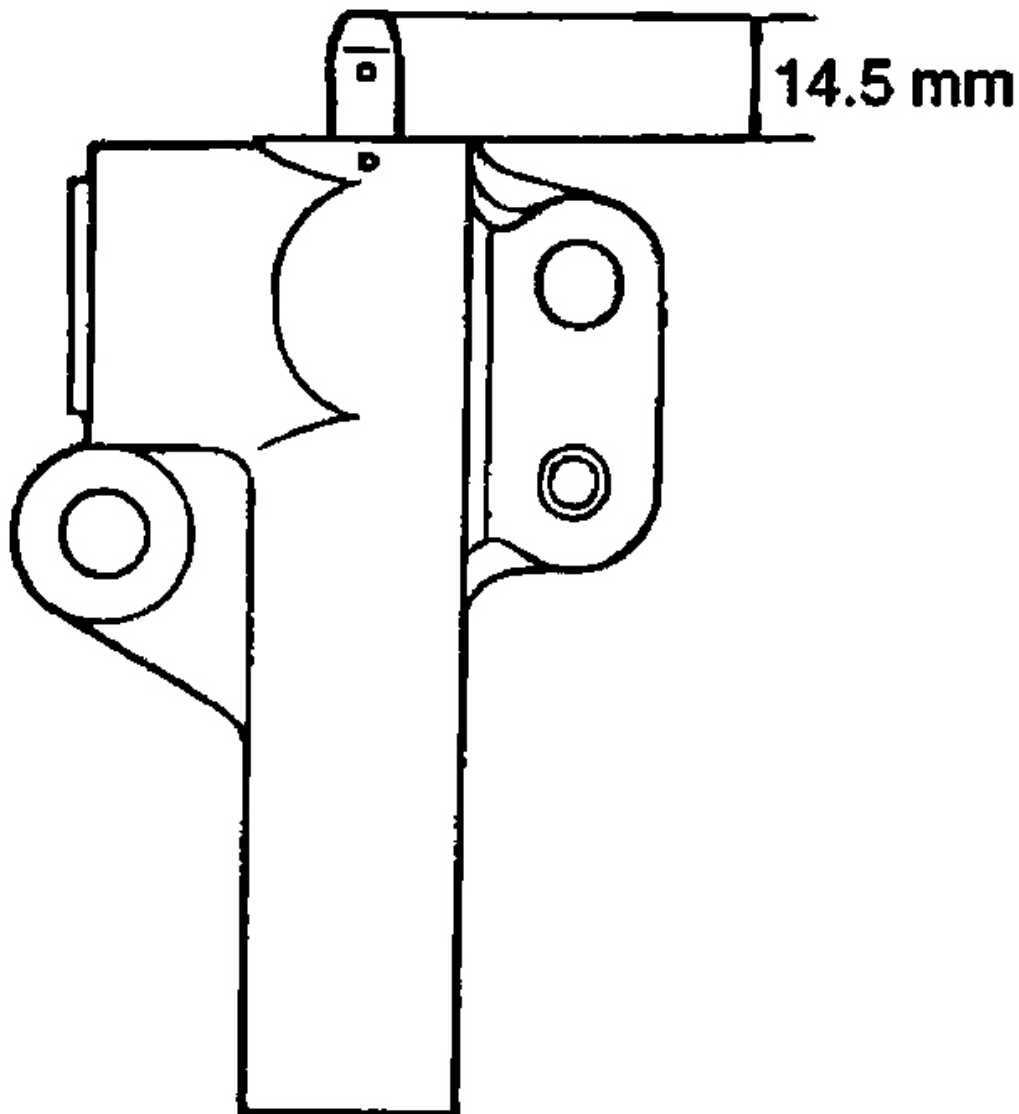


**G00790140**

**Fig. 180: Measuring Rod Protrusion**  
Courtesy of HYUNDAI MOTOR CO.

4. Using a soft jaw vise , compress the auto tensioner rod. slowly. If the rod can be easily retracted, replace the auto tensioner. You should feel extensive resistance when pushing the rod in. And it must be compressed in several steps.

**NOTE:** Clamp the auto tensioner in the vise so that it is level. Use soft jaws in the vise to avoid damaging the auto tensioner.

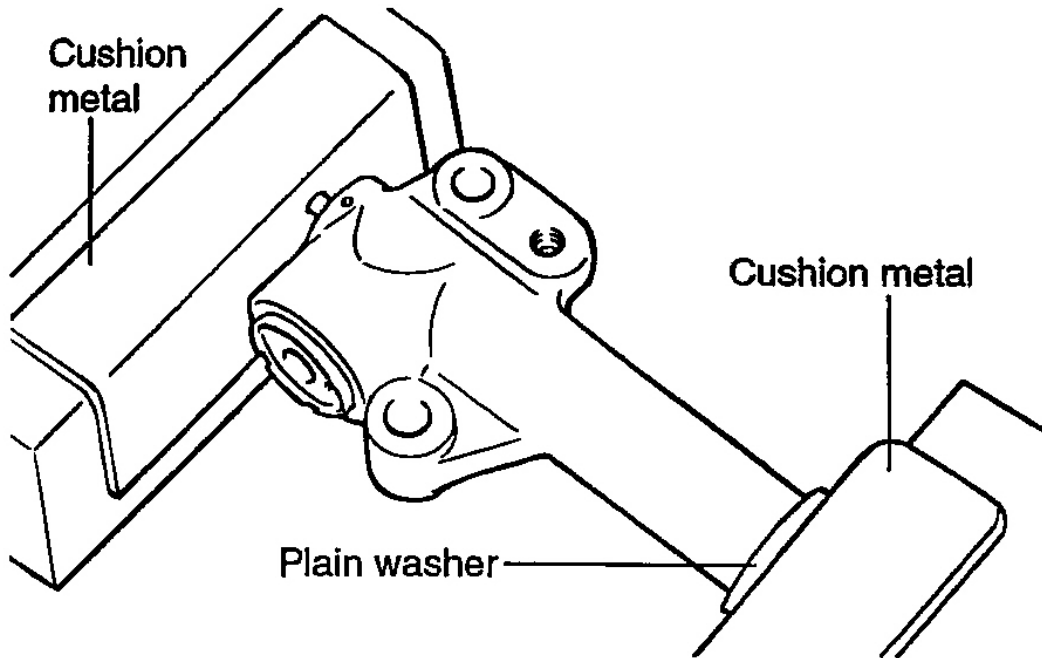

G00790141



**Fig. 181: Compressing Auto Tensioner Rod**  
Courtesy of HYUNDAI MOTOR CO.

#### Timing Belt

1. Check the belt for oil or dust deposit. Replace if necessary. Small deposits should be wiped away with a dry cloth or paper. Do not clean with solvent.
2. When the engine is overhauled or belt tension is adjusted, check the belt carefully. If any of the following flaws are evident, replace the belt with a new one.

## 2002 Hyundai Santa Fe





2002-04 ENGINES 2.4L 4-Cylinder - Santa Fe
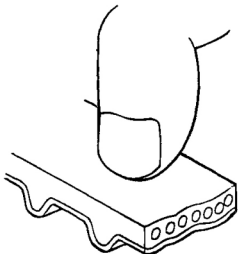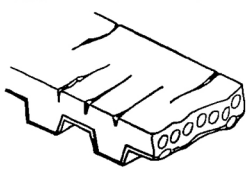
| Description                        | Flaw conditions                                                                                                                                                                                              |
|------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1. Hardened back surface of rubber | <p>Back surface is glossy, Non-elastic and so hard that, when your fingernail is pressed into it, no mark is produced.</p>  |
| 2. Cracked back surface of rubber  |                                                                                                                             |

G00790143



**Fig. 182: Checking Belt Surface With Finger Nail**

Courtesy of HYUNDAI MOTOR CO.
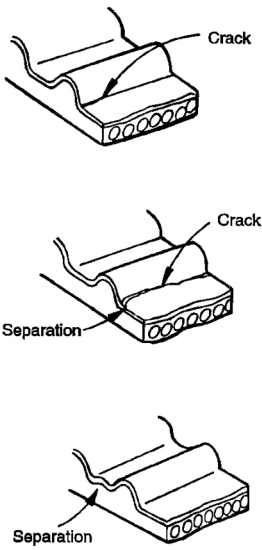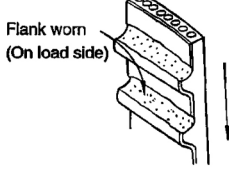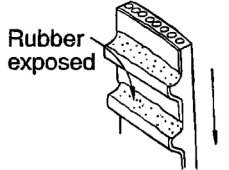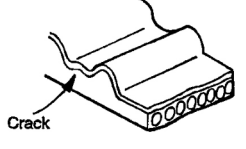
| Description                             | Flaw conditions                                                                                                                                                                                                       |
|-----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 3. Cracked or separating canvas         |                                                                                                                                      |
| 4. Badly worn out teeth (initial stage) | <p>Tooth flank shows canvas on the load side (Fluffy canvas fibers, rubber changed into white color and unclear canvastexture)</p>  |
| 5. Badly worn out teeth (last stage)    | <p>Tooth flank worn and rubber exposed on load side (tooth width reduced)</p>                                                      |
| 6. Cracked tooth bottom                 |                                                                                                                                    |

G00790144

**Fig. 183: Checking Belt For Damage (1 Of 2)**  
 Courtesy of HYUNDAI MOTOR CO.
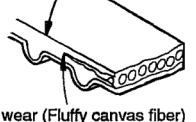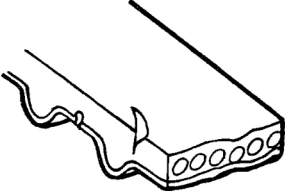
| Description                | Flaw conditions                                                                                                                                       |
|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| 7. Missing tooth           | <p>Tooth missing and canvas fiber exposed</p>                        |
| 8. Badly worn side of belt | <p>Rounded belt side</p> <p>Abnormal wear (Fluffy canvas fiber)</p>  |
| 9. Cracked side of belt    |                                                                     |


G00790145

**Fig. 184: Checking Belt For Damage (2 Of 2)**  
Courtesy of HYUNDAI MOTOR CO.

#### Installation

1. Install the crankshaft sprocket "B" into the crankshaft.


**CAUTION:** Pay attention to the direction of the flange. if it is installed in the wrong direction, a broken belt could result.

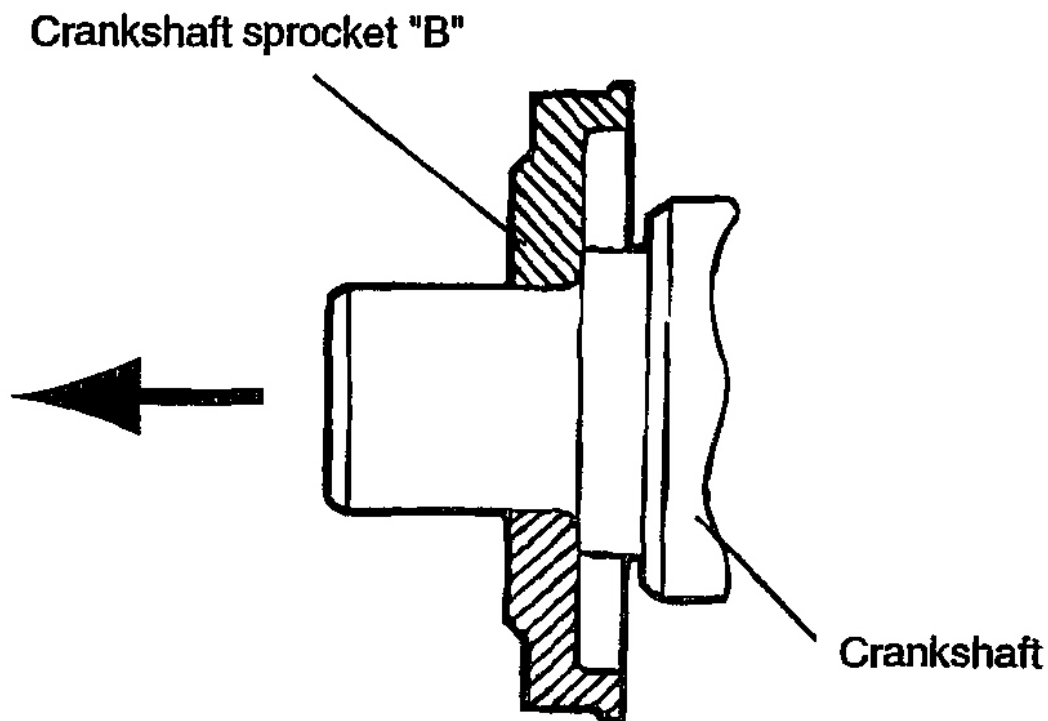

G00790146

**Fig. 185: Identifying Crankshaft Sprocket "B"**  
Courtesy of HYUNDAI MOTOR CO.

2. Apply engine oil to the outer surface of the spacer lightly and then install the spacer to the right counter balance shaft. Be sure to install in the direction shown in the illustration.
3. Install the counter balance shaft sprocket onto the right counter balance shaft and then tighten its flange bolt by hand tightly.

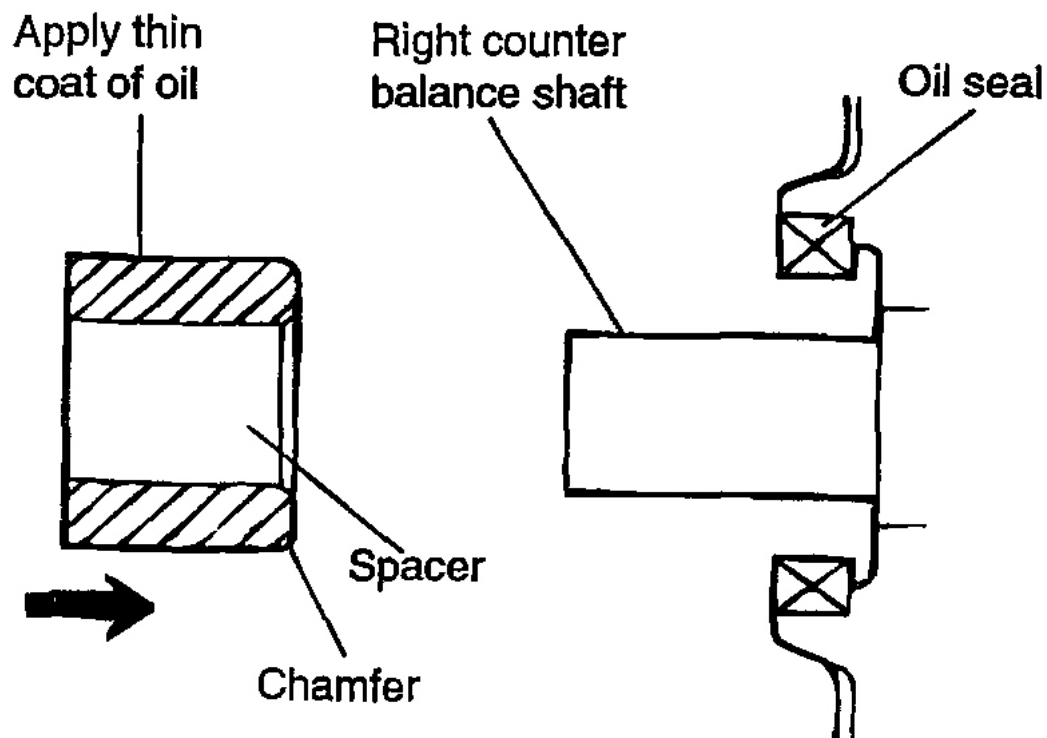


G00790147


**Fig. 186: Installing Counter Balance Shaft**  
Courtesy of HYUNDAI MOTOR CO.

4. Align the timing mark on each sprocket with the corresponding timing mark on the front case.

Timing mark (Slot in front case)

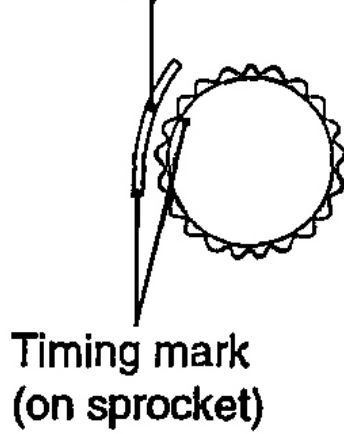

Timing mark (on front case)

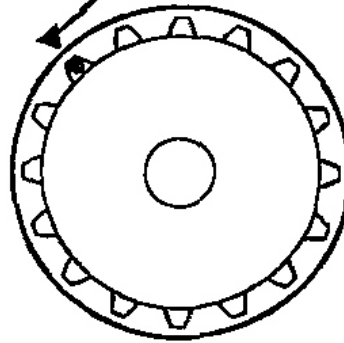

G00790148


**Fig. 187: Identifying Timing Marks**  
Courtesy of HYUNDAI MOTOR CO.

5. When the timing belt "B" is installed, make certain that its tension side has no slack.

Install the tensioner "B" so the center of the pulley is located on the left side of the mounting bolt and in the pulley flange faces the front of the engine.

Align the timing mark on the right counter balance shaft sprocket with the timing mark on the front case.




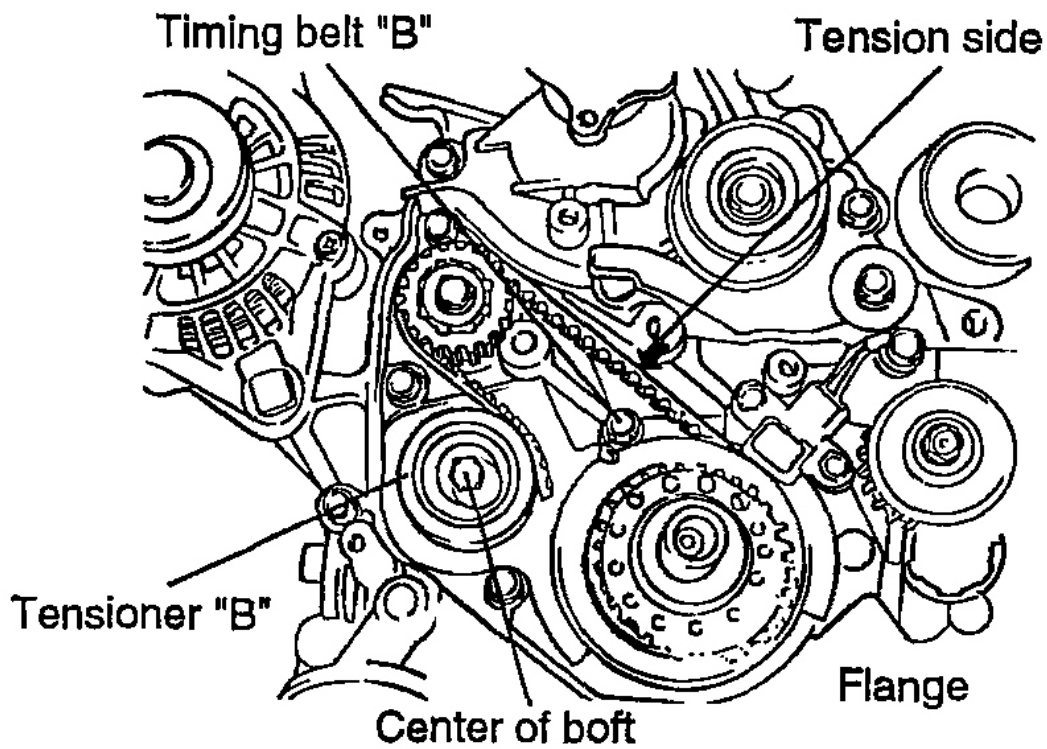

G00790149

**Fig. 188: Installing Timing Belt "B"**  
Courtesy of HYUNDAI MOTOR CO.

6. Lift the tensioner "B" to tighten the timing belt "B" so that its tension side is pulled tight. In this condition, tighten the bolt to secure tensioner "B". As the bolt is tightened, be careful to prevent the shaft from turning. If the shaft is turned, the belt will be tightened excessively.

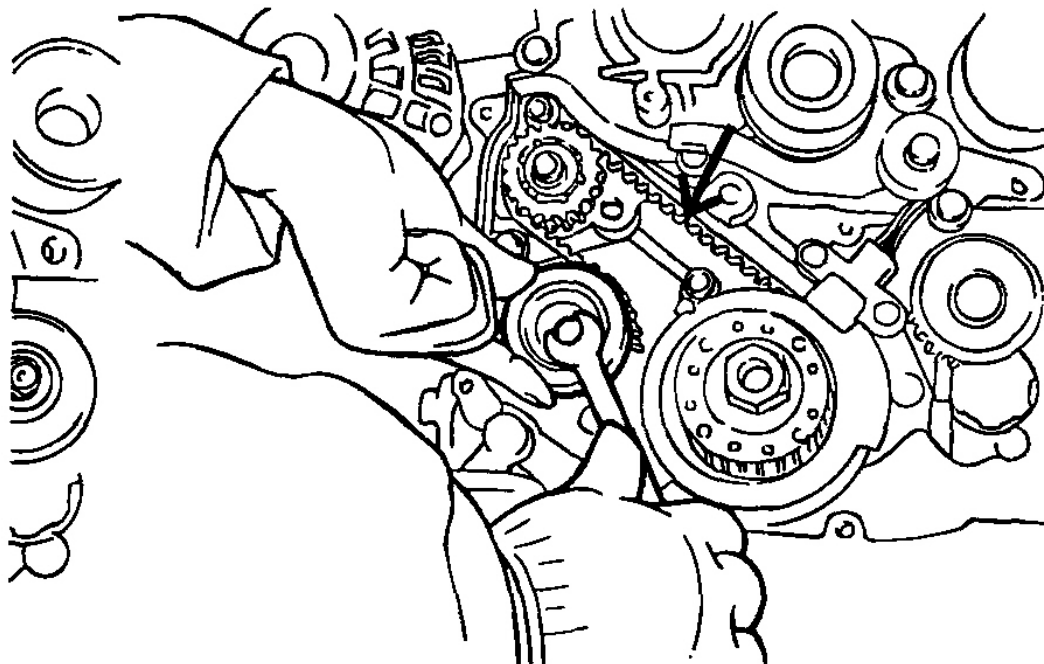

G00790150

**Fig. 189: Tightening Tensioner "B"**  
Courtesy of HYUNDAI MOTOR CO.

7. Check to ensure that the timing marks are in alignment.
8. Verify the tension of the timing belt.

Method 1 : Verify that, when the center of the span on the tension side is depressed with an index finger in the direction of arrow, the deflection of the belt is within specification.


Belt deflection : 5 ~ 7 mm (0.20 ~ 0.28 in)

Method 2 : Measure the tension of the timing belt by using a tension gauge.

| Span length      | Pressure                            | Torque                                               |
|------------------|-------------------------------------|------------------------------------------------------|
| 139mm (5.47 in.) | 0.42 kg/cm <sup>2</sup><br>(42 kPa) | 50 ~ 100Nm<br>(500 ~<br>1000kg.cm, 36<br>~ 72 lb.ft) |

G00790151

**Fig. 190: Belt Tension Specification Table**  
Courtesy of HYUNDAI MOTOR CO.

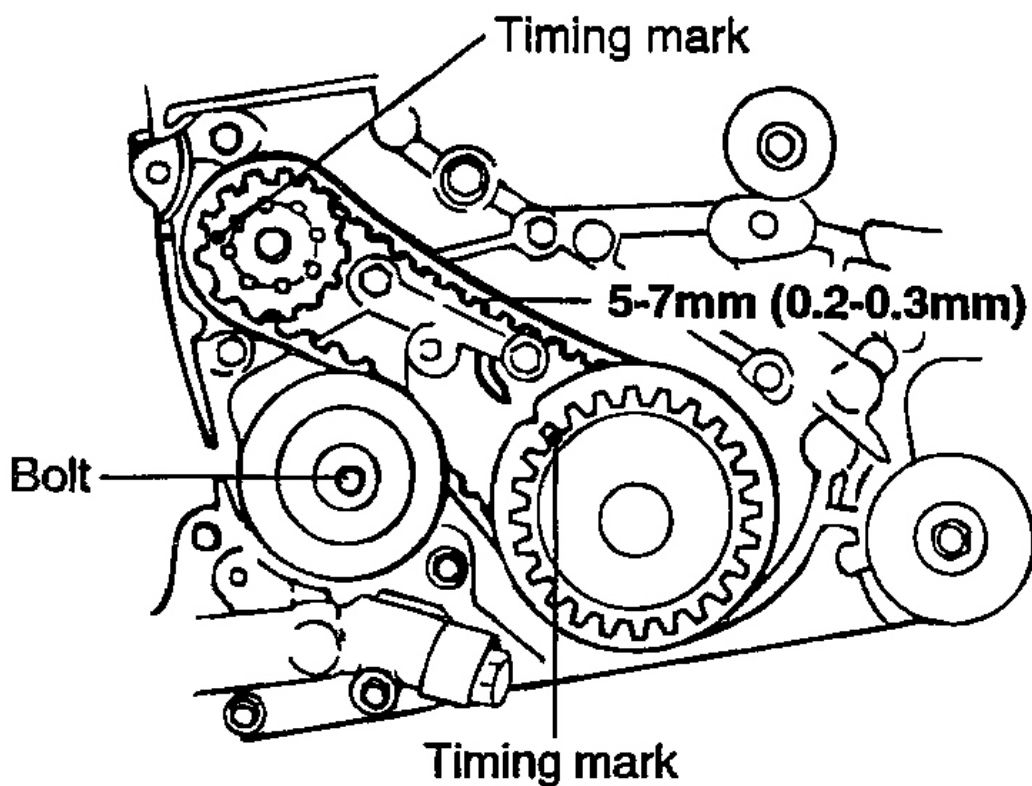


G00790152

**Fig. 191: View Of Timing Belt & Alignment Marks**

Courtesy of HYUNDAI MOTOR CO.

9. Install the flange and crankshaft sprocket onto the crankshaft. Be sure to install the as shown in the illustration.

**CAUTION:** Pay attention to the direction of the flange. If it is installed in the wrong direction, a broken belt could result.

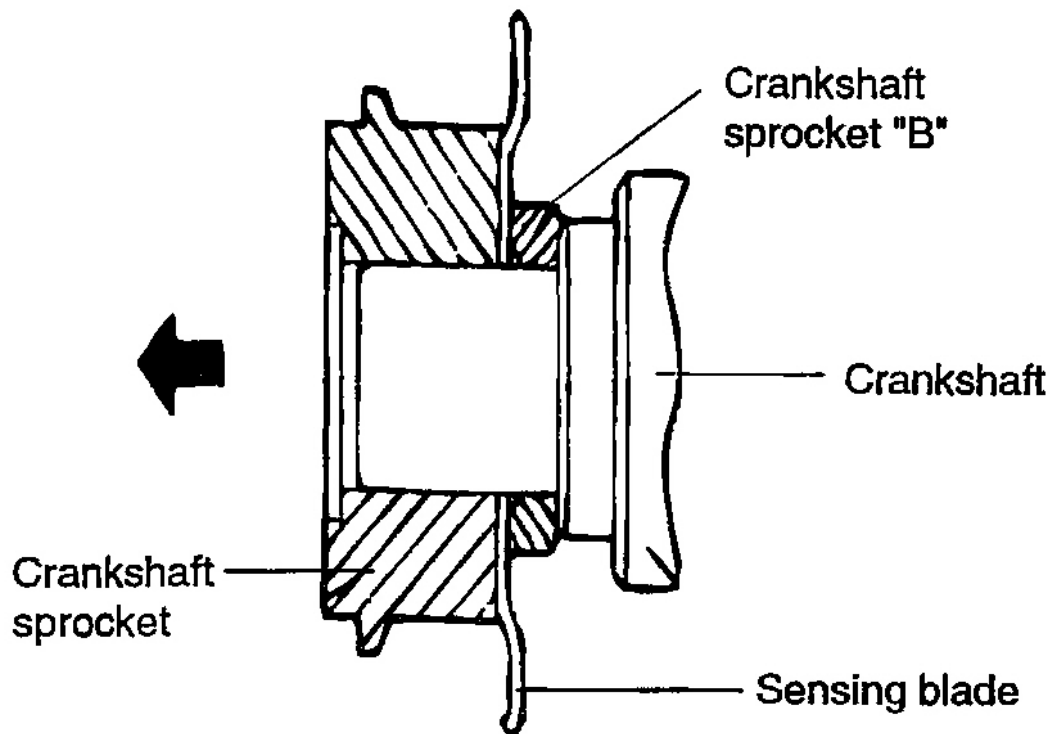

G00790153

**Fig. 192: Installing Crankshaft Sprocket**  
Courtesy of HYUNDAI MOTOR CO.


10. Install the special washer and sprocket bolt to the crankshaft and then tighten the sprocket bolt.

#### **Tightening torque**

Crankshaft sprocket bolt :


160 ~ 170 Nm (1600 ~ 1700 kg.cm, 116 ~ 123 lb.ft)

11. Insert a screwdriver through the plug hole in the left side of the cylinder block to keep the shaft in position.

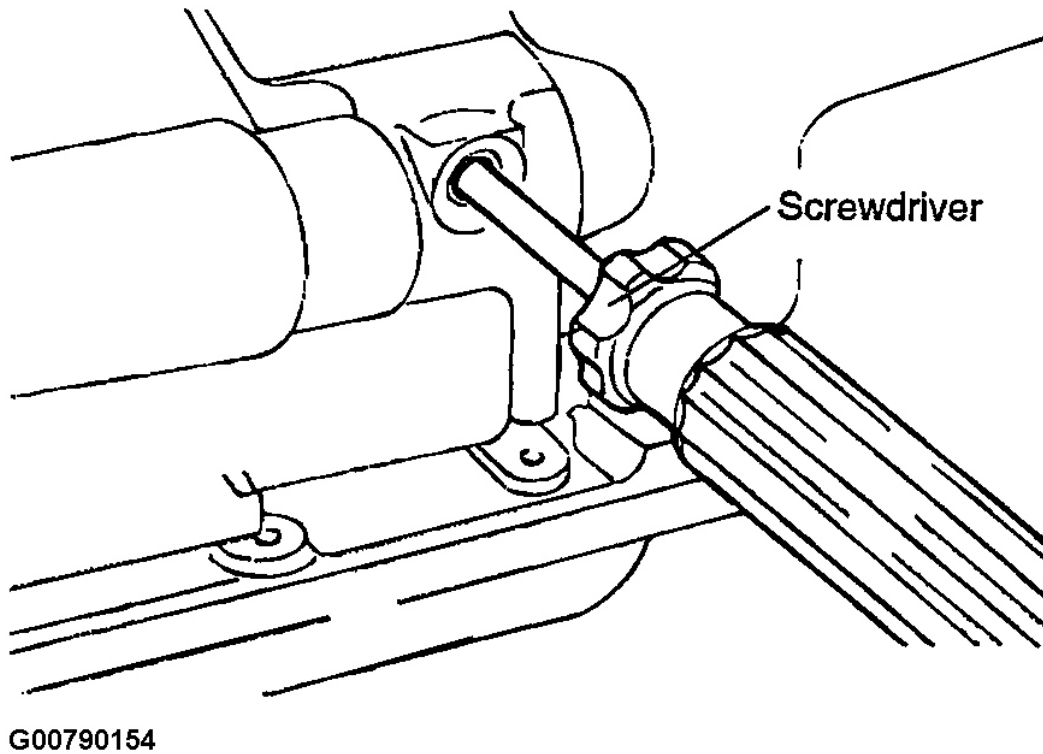

**Fig. 193: Identifying Screw Driver In Plug Hold**  
Courtesy of HYUNDAI MOTOR CO.

12. Install the oil pump sprocket and tighten the nut to the specified torque.

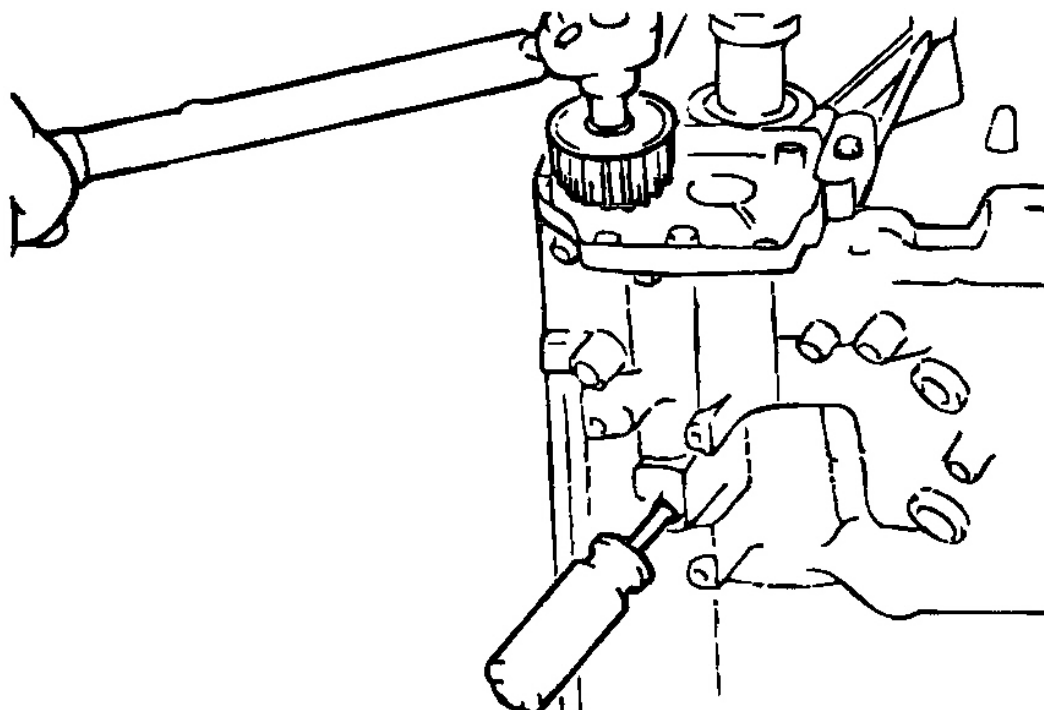

G00790155

**Fig. 194: Tightening Oil Pump Sprocket**  
Courtesy of HYUNDAI MOTOR CO.

**Tightening torque**

Oil pump sprocket

50 ~ 60 Nm (500 ~ 600 kg.cm, 36 ~ 43 lb.ft)

13. Install the camshaft sprocket and tighten the bolt to the specified torque.


**Tightening torque**

Camshaft sprocket bolt :

80 ~ 100 Nm (800 ~ 1000 kg.cm, 58 ~ 72 lb.ft)

14. Install the auto tensioner.

**CAUTION: Leave the set pin installed in the auto tensioner.**

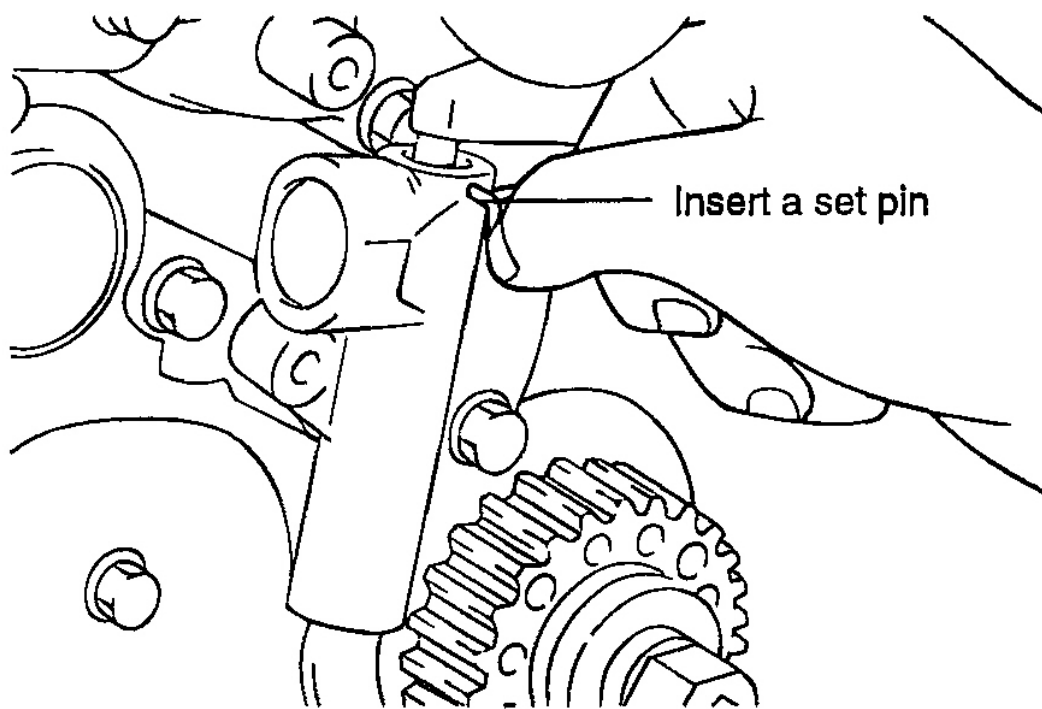


G00790156

**Fig. 195: Installing Auto Tensioner**  
Courtesy of HYUNDAI MOTOR CO.

**NOTE:** If the auto tensioner rod is in its fully extended position, reset it as follows.

1. Clamp it in a vise equipped with soft jaws, in a level position. Use a plain washer if there is a plug at the bottom of the auto tensioner.
2. Compress the rod slowly with the vise until the set hole in the rod is aligned with set hole in the cylinder.

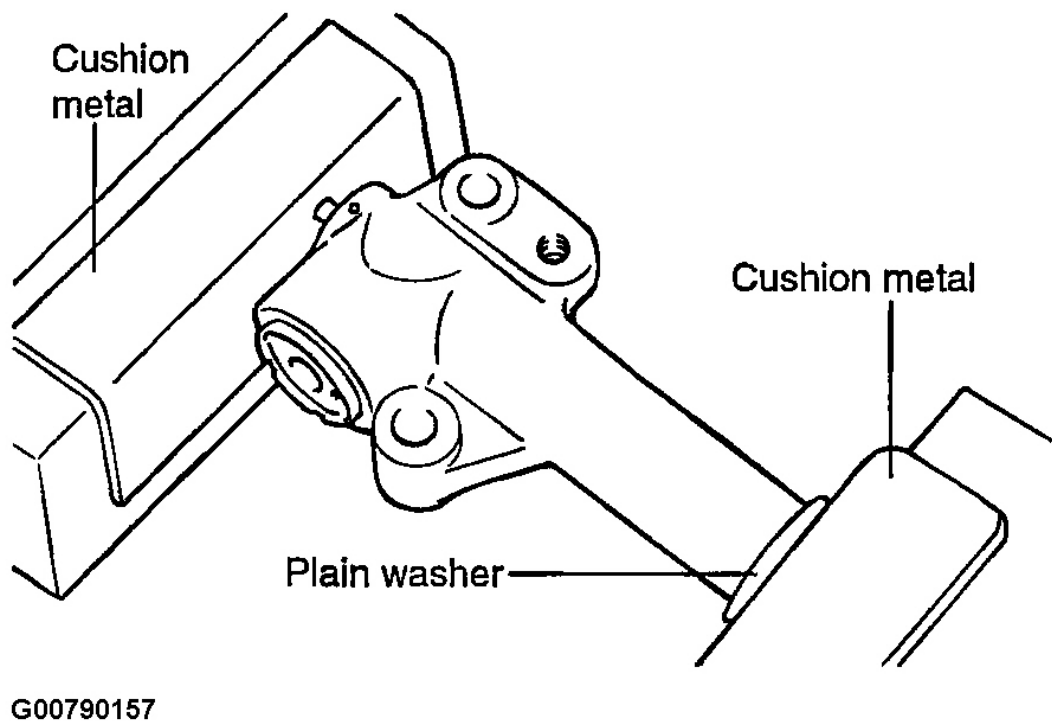

**Fig. 196: Compressing Rod In A Vise**  
Courtesy of HYUNDAI MOTOR CO.

3. Insert a set pin through the auto tensioner body and rod.

**CAUTION:** Leave the set pin installed in the auto tensioner.


15. Install the tensioner pulley onto the tensioner arm.

**Tightening torque**

Tensioner pulley

43 ~ 55 N.m (430 ~ 550 kg.cm, 31 ~ 40 lb.ft)



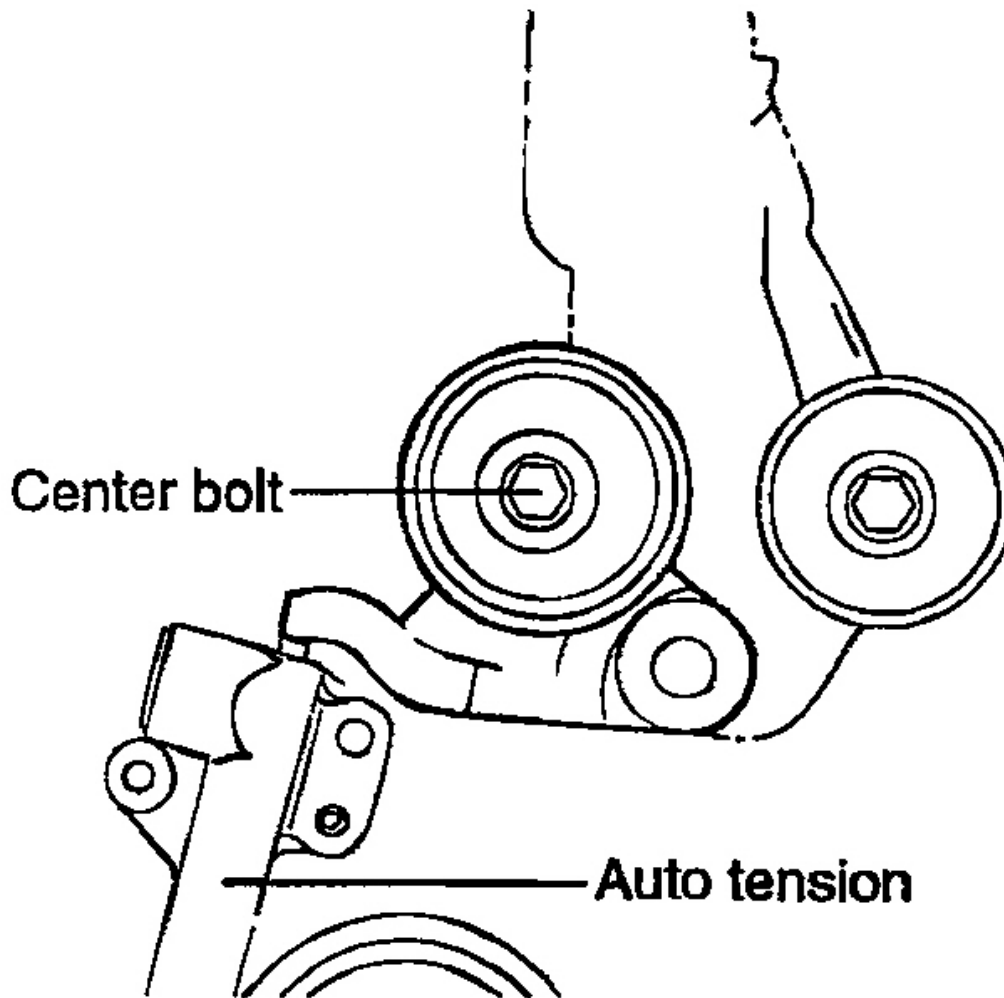

G00790158

**Fig. 197: Identifying Tensioner Pulley**  
Courtesy of HYUNDAI MOTOR CO.

16. Rotate the camshaft sprockets so that the dowel pin of the camshaft sprocket is at the upper side. Set the timing mark of sprocket correctly.


**NOTE:**

1. Before installing the timing belt, if the timing mark of the cam sprocket doesn't coincide with that of the rocker cover, do not rotate the cam sprocket more than 2 teeth of the sprocket in any direction. Rotating the sprocket more than 2 teeth may make the valve and piston touch each

other.

2. If it is necessary to rotate the cam sprocket more than 2 teeth, rotate the crank sprocket counter clock wise first based on the timing mark.


After the cam sprocket is properly timed return the crankshaft to TDC.

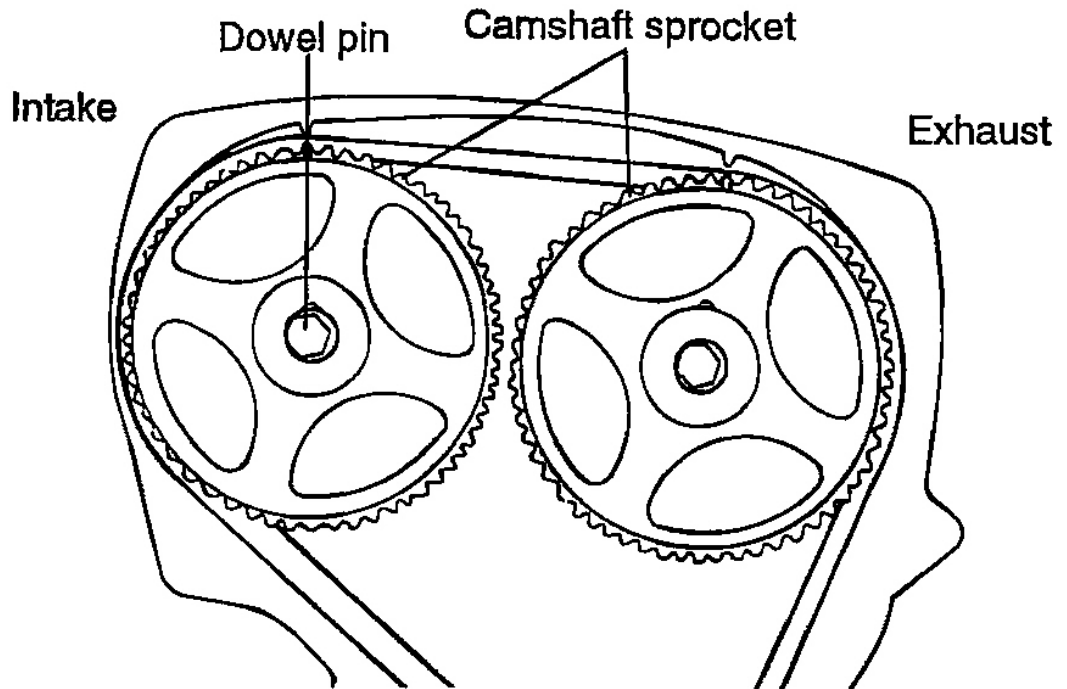

G00790159

**Fig. 198: Identifying Dowel Pin & Camshaft Timing Marks**  
Courtesy of HYUNDAI MOTOR CO.

3. When exhaust and intake camshaft sprocket is used and install it after checking I.D mark depending on the engine debasement.

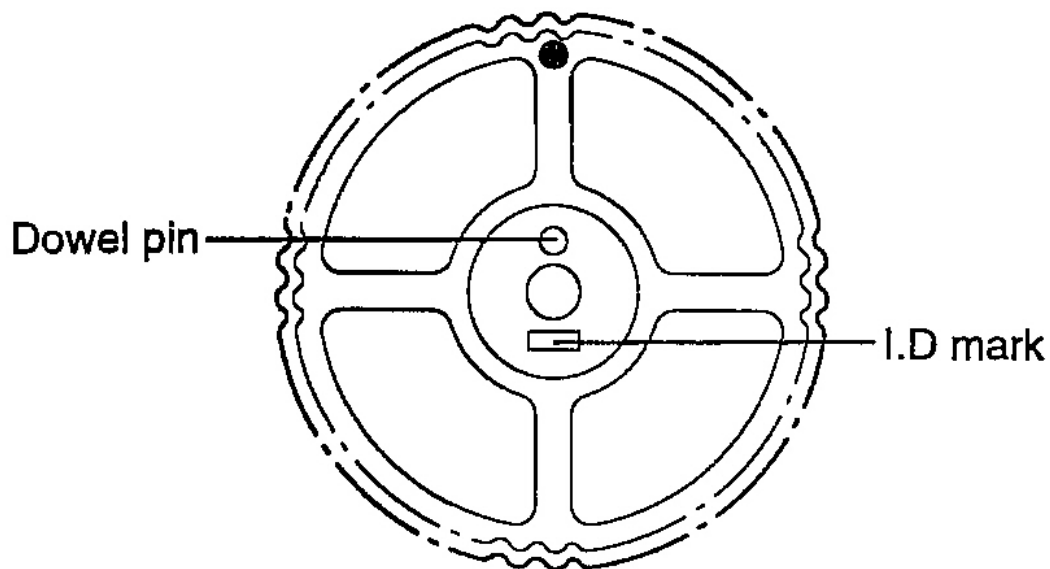


G00790160

**Fig. 199: Identifying Camshaft Sprocket I.D. Mark**  
Courtesy of HYUNDAI MOTOR CO.

17. Align the timing mark on each sprocket with the corresponding timing mark and install the belt as the following order.

Crankshaft sprocket - Oil pump sprocket - Idler pulley - Exhaust camshaft sprocket - Intake camshaft sprocket Tensioner pulley

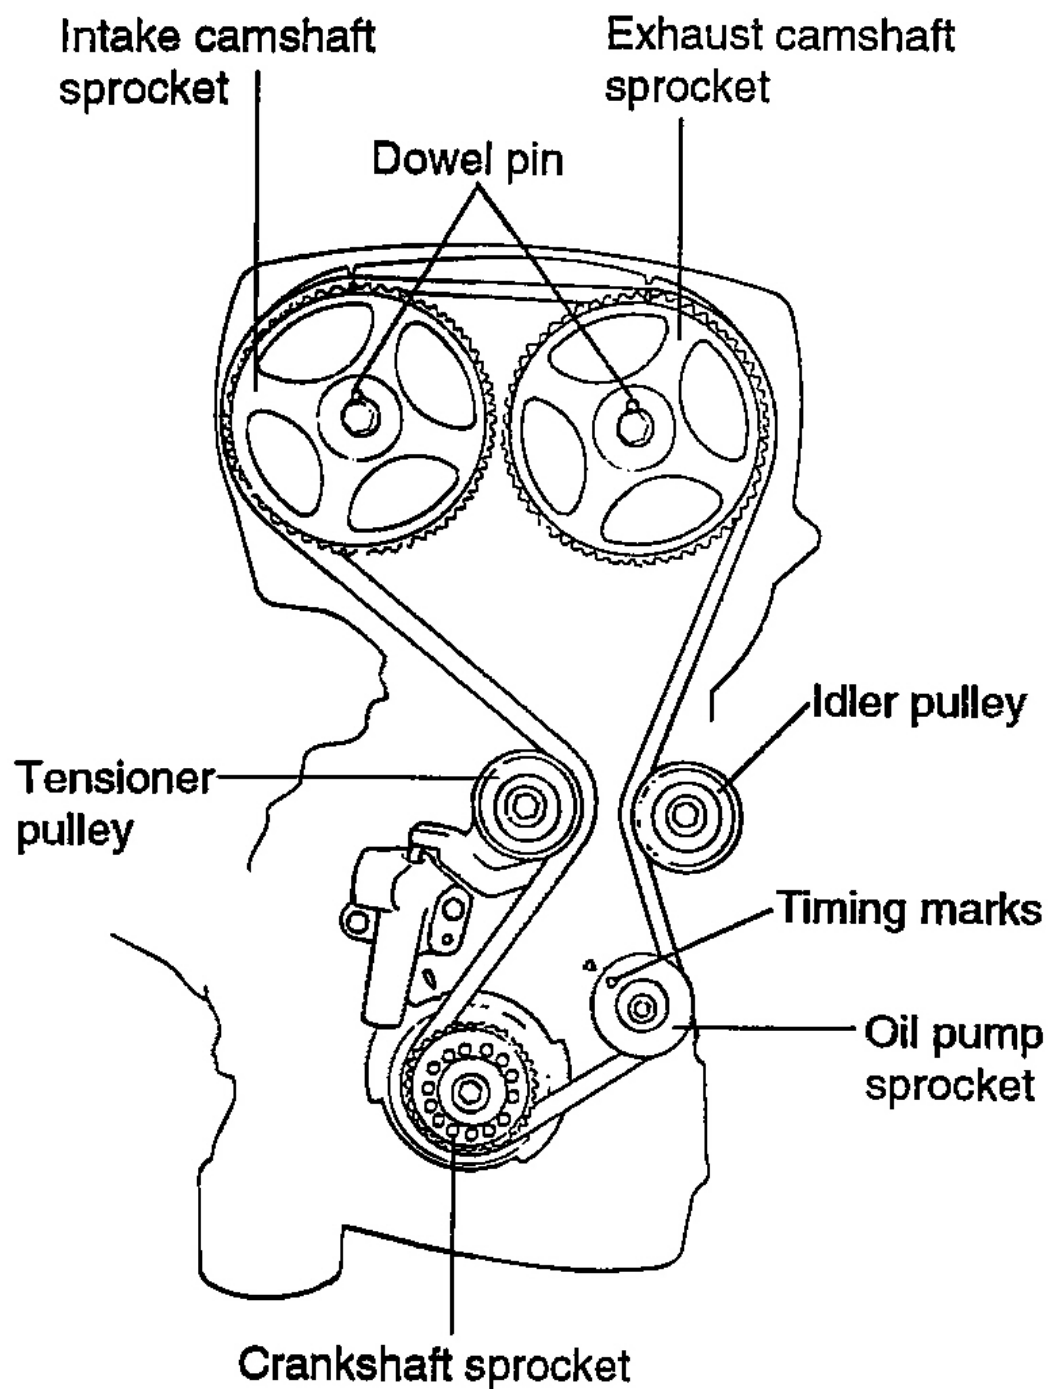


G00790161

**Fig. 200: Identifying Timing Belt & Pulleys**  
Courtesy of HYUNDAI MOTOR CO.

**NOTE:**

1. Be sure that the piston of No. 1 cylinder is located in TDC position (Compression stroke).
2. When aligning the timing mark on oil pump sprocket, remove the left plug of cylinder block, and then check that the count balance shaft is in the specified position by inserting the screwdriver (Diameter : 8 mm, inserting length : 60 mm or more)

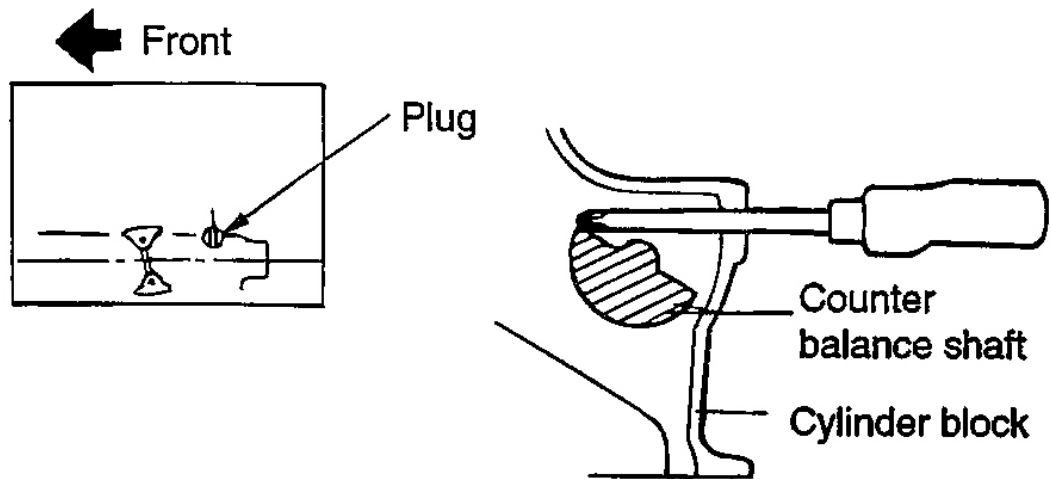

G00790162

**Fig. 201: Checking Counter Balance Shaft Position**  
Courtesy of HYUNDAI MOTOR CO.


3. After checking the timing mark, install the left plug of cylinder block.

**Tightening torque : 2.7 - 3.4 kgf.m**

**(Apply the liquid gasket : THREE BOND NO. 1212B or equivalent)**

18. Pull out the set pin.
19. Rotate the crankshaft two turns clockwise and leave it for about 5 minutes. Then, measure the auto tensioner protrusion "A" (Distance between the tensioner arm and auto tensioner body) to ensure that it is within the specification.


Standard value : 5.5-9 mm (0.22 - 0.35 in)

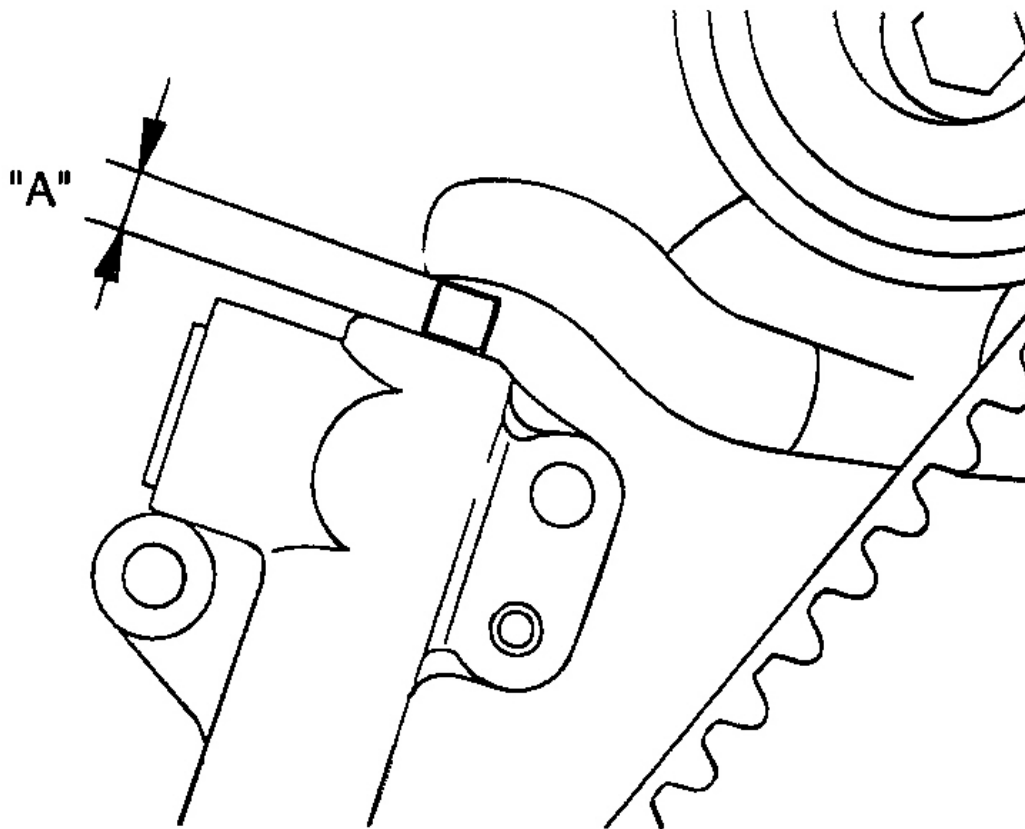

G00790163

**Fig. 202: Measuring Auto Tensioner Protrusion**  
Courtesy of HYUNDAI MOTOR CO.

20. Install the timing belt lower cover and the timing belt upper cover.

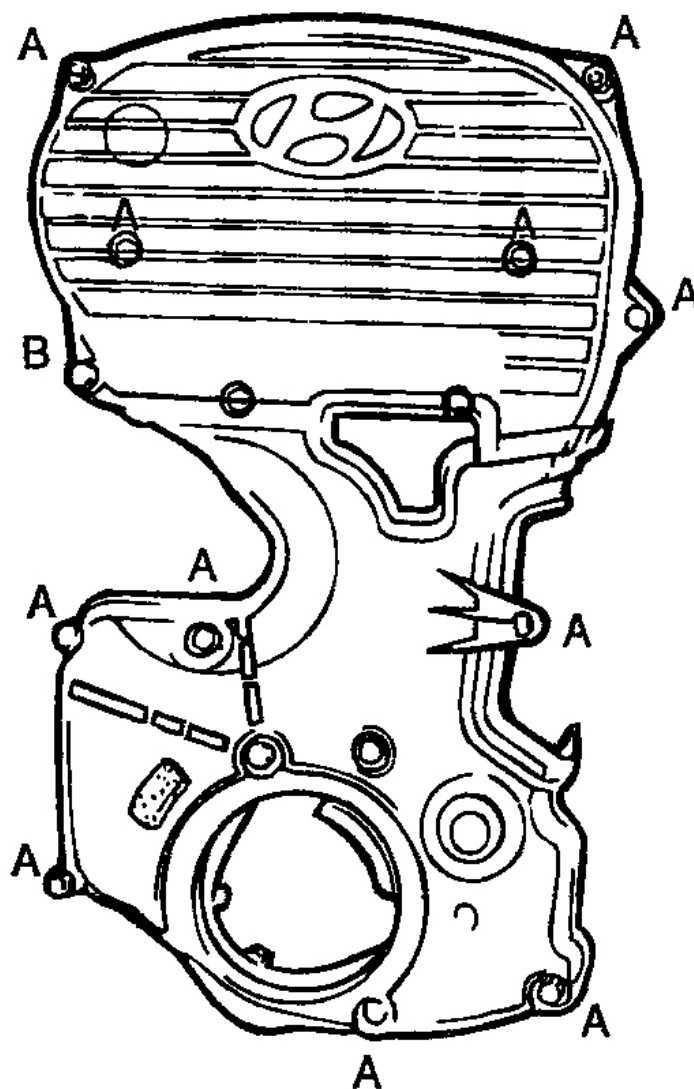

A:8-10 N.m (80-100 kg.cm, 6-7 lb.ft)

B:10-12 N.m (100-120 kg.cm, 7-9 lb.ft)

G00790164

**Fig. 203: Identifying Timing Belt Cover Bolts**  
Courtesy of HYUNDAI MOTOR CO.