

2009 ENGINE**5.7L - Service Information - Grand Cherokee****DESCRIPTION****DESCRIPTION**

The 5.7L engine (345 CID) eight-cylinder engine is a 90° V-Type lightweight, deep skirt cast iron block, aluminum heads, single cam, overhead valve engine with hydraulic roller tappets. The heads incorporate splayed valves with a hemispherical style combustion chamber and dual spark plugs. The cylinders are numbered from front to rear; 1, 3, 5, 7 on the left bank and 2, 4, 6, 8 on the right bank. The firing order is 1-8-4-3-6-5-7-2.

DIAGNOSIS AND TESTING**INTRODUCTION**

Engine diagnosis is helpful in determining the causes of malfunctions not detected and remedied by routine maintenance.

These malfunctions may be classified as either performance (e.g., engine idles rough and stalls) or mechanical (e.g., a strange noise).

See **PERFORMANCE** and **MECHANICAL** for possible causes and corrections of malfunctions.

Additional tests and diagnostic procedures may be necessary for specific engine malfunctions that can not be isolated with the Service Diagnosis charts. Information concerning additional tests and diagnosis is provided within the following diagnosis:

- Cylinder Compression Pressure Test. See **CYLINDER COMPRESSION PRESSURE LEAKAGE**.
- Cylinder Combustion Pressure Leakage Test. See **CYLINDER COMBUSTION PRESSURE LEAKAGE**.
- Engine Cylinder Head Gasket Failure Diagnosis. See **CYLINDER HEAD GASKET FAILURE**.
- Intake Manifold Leakage Diagnosis. See **INTAKE MANIFOLD LEAKAGE**.

PERFORMANCE

CONDITION	POSSIBLE CAUSE	CORRECTION
ENGINE WILL NOT START	1. Weak battery. 2. Corroded or loose battery connections.	1. Charge or replace as necessary. 2. Clean and tighten battery connections. Apply a coat of light mineral grease

2009 Jeep Grand Cherokee SRT-8

2009 ENGINE 5.7L - Service Information - Grand Cherokee

	3. Faulty starter. 4. Incorrect spark plug gap. 5. Dirt or water in fuel system. 6. Faulty fuel pump, relay or wiring.	to the terminals. 3. Refer to <u>Electrical/Starting - Diagnosis and Testing</u>. 4. Refer to <u>Electrical/Ignition Control - Specifications</u>. 5. Clean system and replace fuel filter. 6. See <u>Engine - Diagnosis and Testing</u>.	
ENGINE STALLS OR ROUGH IDLE	1. Idle speed set to low. 2. Vacuum leak.	1. See <u>Engine - Diagnosis and Testing</u>. 2. Inspect intake manifold and vacuum hoses, repair or replace as necessary.	
ENGINE LOSS OF POWER	1. Dirty or incorrectly gapped spark plugs. 2. Dirt or water in fuel system. 3. Blown cylinder head gasket. 4. Low compression. 5. Burned, warped or pitted valves. 6. Plugged or restricted exhaust system.	1. Replace spark plugs. 2. Clean system and replace fuel filter. 3. Replace cylinder head gasket. 4. See <u>Engine - Diagnosis and Testing</u>. 5. Replace as necessary. 6. Inspect and replace as necessary.	

CYLINDER COMPRESSION PRESSURE LEAKAGE

NOTE: The results of a cylinder compression pressure test can be utilized to diagnose several engine malfunctions.

NOTE: Ensure the battery is completely charged and the engine starter motor is in good operating condition. Otherwise the indicated compression pressures may not be valid for diagnosis purposes.

1. Clean the spark plug recesses with compressed air.
2. Remove the spark plugs and record the cylinder number of each spark plug for future reference.
3. Inspect the spark plug electrodes for abnormal firing indicators such as fouled, hot, oily, etc.
4. Disable the fuel system. Refer to **Fuel System/Fuel Delivery - Standard Procedure** and perform the fuel system pressure release procedure.
5. Insert a compression pressure gauge and rotate the engine with the engine starter motor for three revolutions.
6. Record the compression pressure on the 3rd revolution. Continue the test for the remaining cylinders.

NOTE: **The recommended compression pressures are to be used only as a guide to diagnosing engine problems. An engine should not be disassembled to determine the cause of low compression unless some malfunction is present.**

7. Compression should not be less than 689 kPa (100 psi) and not vary more than 25 percent from cylinder to cylinder.
8. If one or more cylinders have abnormally low compression pressures, repeat the compression test.

NOTE: **If the same cylinder or cylinders repeat an abnormally low reading on the second compression test, it could indicate the existence of a problem in the cylinder in question.**

9. If one or more cylinders continue to have abnormally low compression pressures, perform the cylinder combustion pressure leakage test. See **CYLINDER COMBUSTION PRESSURE LEAKAGE**.

CYLINDER COMBUSTION PRESSURE LEAKAGE

The combustion pressure leakage test provides an accurate means for determining engine condition.

Combustion pressure leakage testing will detect:

- Exhaust and intake valve leaks (improper seating).
- Leaks between adjacent cylinders or into water jacket.
- Any causes for combustion/compression pressure loss.

1. Check the coolant level and fill as required. DO NOT install the radiator cap.
2. Start and operate the engine until it attains normal operating temperature, then turn the engine OFF.
3. Remove the spark plugs.
4. Remove the oil filler cap.
5. Remove the air cleaner hose.
6. Calibrate the tester according to the manufacturer's instructions. The shop air source for testing should maintain 483 kPa (70 psi) minimum, 1,379 kPa (200 psi) maximum and 552 kPa (80 psi) recommended.
7. Perform the test procedures on each cylinder according to the tester manufacturer's instructions. Set

piston of cylinder to be tested at TDC compression, While testing, listen for pressurized air escaping through the throttle body, tailpipe and oil filler cap opening. Check for bubbles in the radiator coolant.

All gauge pressure indications should be equal, with no more than 25% leakage.

FOR EXAMPLE: At 552 kPa (80 psi) input pressure, a minimum of 414 kPa (60 psi) should be maintained in the cylinder.

Refer to **CYLINDER COMBUSTION PRESSURE LEAKAGE DIAGNOSIS CHART.**

CYLINDER COMBUSTION PRESSURE LEAKAGE DIAGNOSIS CHART

CONDITION	POSSIBLE CAUSE	CORRECTION
AIR ESCAPES THROUGH THROTTLE BODY	Intake valve bent, burnt, or not seated properly	Inspect valve and valve seat. Reface or replace, as necessary. Inspect valve springs. Replace as necessary.
AIR ESCAPES THROUGH TAILPIPE	Exhaust valve bent, burnt, or not seated properly	Inspect valve and valve seat. Reface or replace, as necessary. Inspect valve springs. Replace as necessary.
AIR ESCAPES THROUGH RADIATOR	Head gasket leaking or cracked cylinder head or block	Remove cylinder head and inspect. Replace defective part.
MORE THAN 50% LEAKAGE FROM ADJACENT CYLINDERS	Head gasket leaking or crack in cylinder head or block between adjacent cylinders	Remove cylinder head and inspect. Replace gasket, head, or block as necessary.
MORE THAN 25% LEAKAGE AND AIR ESCAPES THROUGH OIL FILLER CAP OPENING ONLY	Stuck or broken piston rings; cracked piston; worn rings and/or cylinder wall	Inspect for broken rings or piston. Measure ring gap and cylinder diameter, taper and out-of-round. Replace defective part as necessary.

MECHANICAL

ENGINE MECHANICAL DIAGNOSIS CHART

CONDITION	POSSIBLE CAUSES	CORRECTION
NOISY VALVES/LIFTERS	1. High or low oil level in crankcase. 2. Thin or diluted oil. 3. Low oil pressure. 4. Dirt in tappets/lash	1. Check for correct oil level. Adjust the oil level by draining or adding as needed. See <u>Engine/Lubrication/OIL - Standard Procedure.</u> 2. Change the engine oil. See <u>Engine/Lubrication/OIL - Standard Procedure.</u> 3. Check the engine oil level. If OK, Perform oil pressure test. See <u>Engine/Lubrication - Diagnosis and Testing.</u> 4. Clean and/or replace the hydraulic

2009 Jeep Grand Cherokee SRT-8

2009 ENGINE 5.7L - Service Information - Grand Cherokee

	adjusters. 5. Bent push rod(s). 6. Worn rocker arms 7. Worn tappets/lash adjusters. 8. Worn valve guides. 9. Excessive runout of valve seats or valve faces.	tappets/lash adjusters. See <u>Engine/Engine Block/LIFTER(S), Hydraulic - Diagnosis and Testing</u>. 5. Install new push rods. See <u>Engine/Cylinder Head/SPRING(S), Valve - Removal</u>. 6. Inspect the oil supply to the rocker arms and replace worn rocker arms as needed. See <u>Engine/Cylinder Head/ROCKER ARM, Valve - Removal</u>. 7. Install new hydraulic tappets/lash adjusters. See <u>Engine/Engine Block/LIFTER(S), Hydraulic - Removal</u>. 8. Inspect the valve guides for wear, cracks or looseness. If either condition exist, replace the cylinder head. 9. Grind the valves and seats. See <u>Engine/Cylinder Head/VALVES, Intake and Exhaust - Standard Procedure</u>.
CONNECTING ROD NOISE	1. Insufficient oil supply. 2. Low oil pressure. 3. Thin or diluted oil. 4. Excessive connecting rod bearing clearance. 5. Connecting rod journal out of round. 6. Misaligned connecting rods.	1. Check the engine oil level. 2. Check the engine oil level. If OK, Perform the engine oil pressure test. See <u>Engine/Lubrication - Diagnosis and Testing</u>. 3. Change the engine oil to correct the viscosity. See <u>Engine/Lubrication/OIL - Standard Procedure</u>. 4. Measure the bearings for correct clearance with plastigage. Repair as necessary. 5. Replace the crankshaft. See <u>Engine/Engine Block/CRANKSHAFT - Removal</u>. 6. Replace the bent connecting rods. See <u>Engine/Cylinder Head/SPRING(S), Valve - Removal</u>.
MAIN BEARING NOISE	1. Insufficient oil supply. 2. Low oil pressure. 3. Thin or diluted oil. 4. Excessive main bearing clearance. 5. Excessive end play.	1. Check the engine oil level. 2. Check the engine oil level. If OK, Perform the engine oil pressure test. See <u>Engine/Lubrication - Diagnosis and Testing</u>. 3. Change the engine oil to correct viscosity. See <u>Engine/Lubrication/OIL - Standard Procedure</u>. 4. Measure the bearings for correct clearance with plastigage. Repair as necessary. 5. Check the crankshaft thrust bearing for

2009 Jeep Grand Cherokee SRT-8

2009 ENGINE 5.7L - Service Information - Grand Cherokee

	6. Crankshaft main journal out of round or worn. 7. Loose flywheel or torque converter.	excessive wear on flanges. See <u>Engine/Engine Block/CAMSHAFT, Engine - Inspection.</u> 6. Replace the crankshaft. See <u>Engine/Engine Block/CRANKSHAFT - Removal.</u> 7. Inspect the crankshaft, flexplate/flywheel and bolts for damage. Tighten to correct torque.
LOW OIL PRESSURE	1. Low oil level. 2. Faulty oil pressure sending unit. 3. Clogged oil filter. 4. Worn oil pump. 5. Thin or diluted oil. 6. Excessive bearing clearance. 7. Oil pump relief valve stuck. 8. Oil pickup tube loose, broken, bent or clogged. 9. Oil pump cover warped or cracked.	1. Check the oil level and fill if necessary. 2. Install a new sending unit. 3. Install a new oil filter. See <u>Engine/Lubrication/FILTER, Engine Oil - Removal.</u> 4. Replace the oil pump assembly. See <u>Engine/Lubrication/PUMP, Engine Oil - Removal.</u> 5. Change the engine oil to correct viscosity. See <u>Engine/Lubrication/OIL - Standard Procedure.</u> 6. Measure the bearings for correct clearance with plastigage. Repair as necessary. 7. The oil pump pressure relief valve and spring should not be removed from the oil pump. If these components are disassembled and or removed from the pump the entire oil pump assembly must be replaced. See <u>Engine/Lubrication/PUMP, Engine Oil - Removal.</u> 8. Inspect the oil pickup tube and pump, and clean or replace as necessary. See <u>Engine/Lubrication/PAN, Oil - Removal.</u> 9. Install a new oil pump. See <u>Engine/Lubrication/PUMP, Engine Oil - Removal.</u>
OIL LEAKS	1. Misaligned or deteriorated gaskets. 2. Loose fastener, broken or porous metal part. 3. Front or rear crankshaft oil seal leaking. 4. Leaking oil gallery plug or cup plug.	1. Replace gasket. 2. Tighten, repair or replace the part. 3. Replace the front seal. See <u>Engine/Engine Block/SEAL, Crankshaft Oil - Removal.</u> 4. Remove and reseal threaded plug. Replace the cup style plug.
EXCESSIVE OIL CONSUMPTION OR	1. CCV System malfunction.	1. Check for correct operation. Refer to <u>Emissions Control - Description .</u>

2009 Jeep Grand Cherokee SRT-8

2009 ENGINE 5.7L - Service Information - Grand Cherokee

**SPARK PLUGS OIL
FOULED**

2. Defective valve stem seal (s).

3. Worn or broken piston rings.

4. Scuffed pistons/cylinder walls.

5. Carbon in oil control ring groove.

6. Worn valve guides.

7. Piston rings fitted too tightly in grooves.

2. Repair or replace the seal(s). See **Engine/Cylinder Head/SPRING(S), Valve - Removal.**3. Hone the cylinder bores and Install new rings. See **Engine/Engine Block/ROD, Piston and Connecting - Removal.**4. Hone the cylinder bores and replace pistons as required. See **Engine/Engine Block/ROD, Piston and Connecting - Removal.**5. Remove the rings and de-carbon the piston. See **Engine/Engine Block/RING(S), Piston - Standard Procedure.**

6. Inspect the valve guides for wear, cracks or looseness. If either condition exist, replace the cylinder head.

7. Remove the rings and check the ring end gap and side clearance. Replace if necessary. See **Engine/Engine Block/RING(S), Piston - Standard Procedure.****LUBRICATION**

CONDITION	POSSIBLE CAUSES	CORRECTION
OIL LEAKS	1. Gaskets and O-Rings. a. Misaligned or damaged. b. Loose fasteners, broken or porous metal parts. 2. Crankshaft rear seal. 3. Crankshaft seal flange. Scratched, nicked or grooved. 4. Oil pan flange cracked. 5. Front cover seal, damaged or misaligned. 6. Scratched or damaged vibration damper hub. 7. Crankshaft Rear Flange Microporosity.	1. Replace as necessary. a. Replace as necessary. b. Tighten fasteners, Repair or replace metal parts. 2. Replace as necessary. 3. Polish or replace crankshaft. 4. Replace oil pan. 5. Replace seal. 6. Polish or replace damper. 7. Replace Crankshaft.
OIL PRESSURE DROP	1. Low oil level. 2. Faulty oil pressure sending unit. 3. Low oil pressure. 4. Clogged oil filter. 5. Worn oil pump. 6. Thin or diluted oil.	1. Check and correct oil level. 2. Replace sending unit. 3. Check pump and bearing clearance. 4. Replace oil filter. 5. Replace as necessary. 6. Change oil and filter.

	7. Excessive bearing clearance. 8. Oil pump relief valve stuck. 9. Oil pickup tube loose or damaged.	7. Replace as necessary. 8. Replace oil pump. 9. Replace as necessary.
OIL PUMPING AT RINGS; SPARK PLUGS FOULING	1. Worn or damaged rings. 2. Carbon in oil ring slots. 3. Incorrect ring size installed. 4. Worn valve guides. 5. Leaking intake gasket(s). 6. Leaking valve guide seals.	1. Hone cylinder bores and replace rings. 2. Replace rings. 3. Replace rings. 4. Ream guides and replace valves. 5. Replace intake gasket(s). 6. Replace valve guide seals.

STANDARD PROCEDURE

REPAIR DAMAGED OR WORN THREADS

CAUTION: Be sure that the tapped holes maintain the original center line.

Damaged or worn threads can be repaired. Essentially, this repair consists of:

- Drilling out worn or damaged threads.
- Tapping the hole with a special Heli-Coil Tap.
- Installing an insert into the tapped hole to bring the hole back to its original thread size.

HYDROSTATIC LOCK

CAUTION: Do not attempt to run engine. Severe damage could occur.

When an engine is suspected of hydrostatic lock (regardless of what caused the problem), follow the steps below.

1. Perform the Fuel Pressure Release Procedure. Refer to Fuel System/Fuel Delivery - Standard Procedure.
2. Disconnect the negative battery cable(s) from the battery.
3. Inspect air cleaner, induction system, and intake manifold to make sure the system is dry and clear of foreign material.
4. Place a shop towel around the spark plugs to catch any fluid that may possibly be under pressure in the cylinder head. Remove the spark plugs.
5. With all spark plugs removed, rotate the crankshaft using a breaker bar and socket.
6. Identify the fluid in the cylinders (coolant, fuel, oil).

7. Make sure all fluid has been removed from the cylinders.
8. Repair engine or components as necessary to prevent this problem from occurring again.
9. Squirt a small amount of engine oil into the cylinders to lubricate the walls. This prevents damage on restart.
10. Install new spark plugs. Tighten the spark plugs to 41 N.m (30 ft. lbs.).
11. Drain engine oil. Remove and discard the oil filter.
12. Install the drain plug. Tighten the plug to 34 N.m (25 ft. lbs.).
13. Install a new oil filter.
14. Fill the engine crankcase with the specified amount and grade of oil. Refer to **Vehicle Quick Reference/Capacities and Recommended Fluids - Specifications** .
15. Connect the negative battery cable(s).
16. Start the engine and check for any leaks.

REMOVAL

REMOVAL

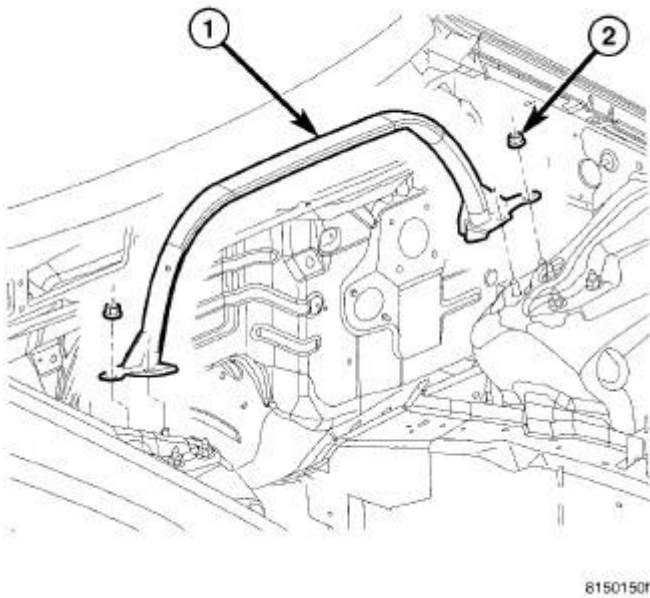


Fig. 1: STRUT TOWER SUPPORT
Courtesy of CHRYSLER LLC

1. Remove the strut tower support (1).

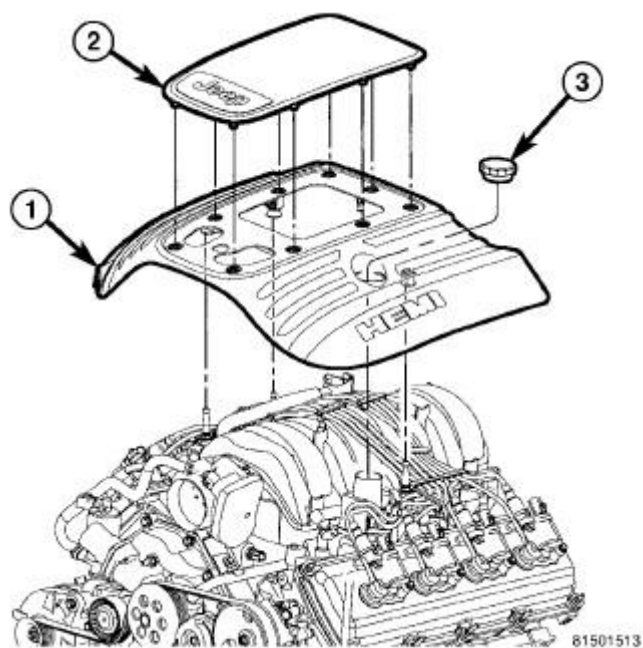


Fig. 2: ENGINE COVER

Courtesy of CHRYSLER LLC

2. Remove the engine cover (1).

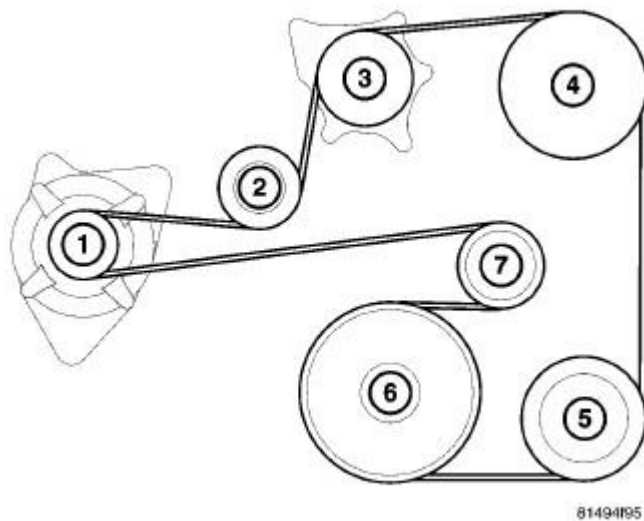


Fig. 3: Accessory Drive Belt Routing

Courtesy of CHRYSLER LLC

- | |
|------------------|
| 1 - GENERATOR |
| 2 - IDLER PULLEY |
| 3 - WATER PUMP |

- 4 - P/S PUMP
- 5 - A/C COMPRESSOR
- 6 - CRANKSHAFT
- 7 - BELT TENSIONER

3. Perform the Fuel System Pressure Release procedure. Refer to **Fuel System/Fuel Delivery - Standard Procedure**.
4. Disconnect the battery negative cable.
5. Remove the air cleaner resonator and duct work as an assembly.
6. Drain cooling system. Refer to **Cooling - Standard Procedure**.
7. Remove the accessory drive belt. Refer to **Cooling/Accessory Drive/BELT, Serpentine - Removal**.
8. Remove radiator fan shroud. Refer to **Cooling/Engine/FAN, Cooling - Removal**.


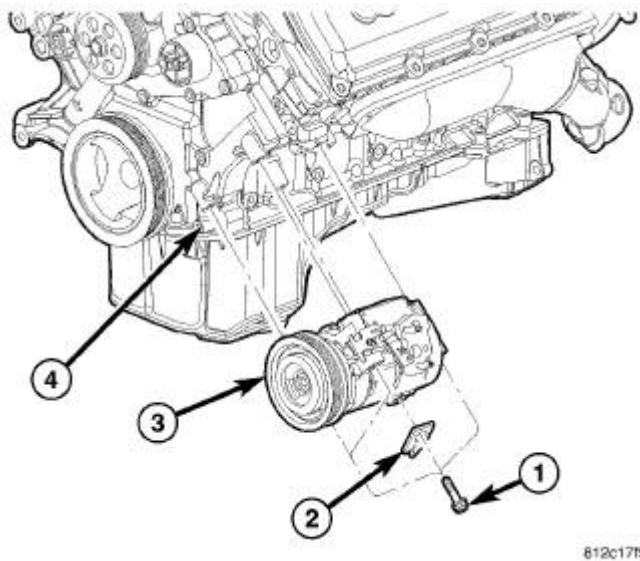


Fig. 4: COMPRESSOR-A/C 5.7L REMOVAL/INSTALLATION
Courtesy of CHRYSLER LLC

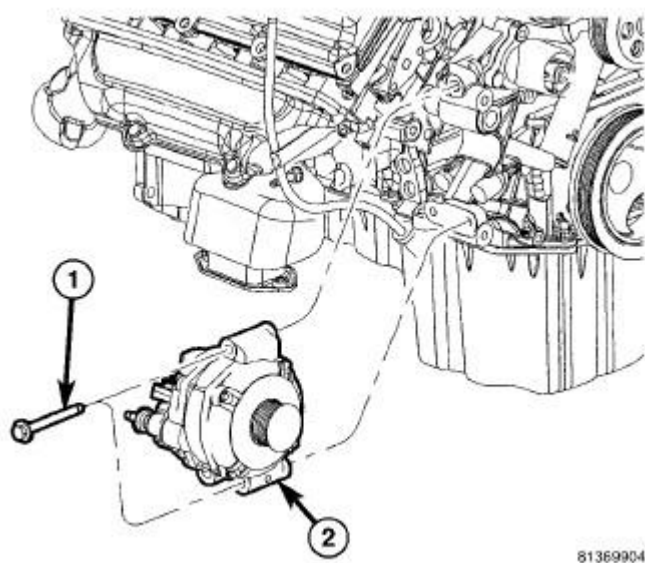
9. Remove the A/C compressor with the lines attached. Secure compressor out of the way.



81369904

Fig. 5: GENERATOR-5.7L
Courtesy of CHRYSLER LLC

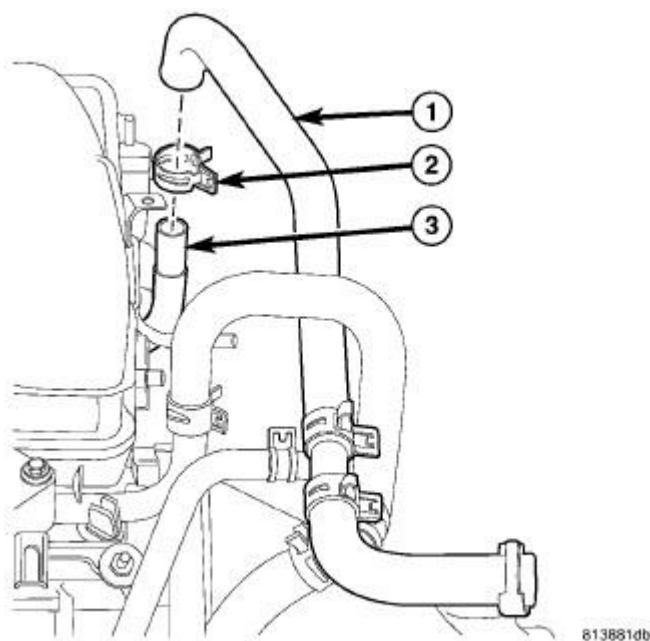10. Remove generator assembly. Refer to **Electrical - Engine Systems/Charging/GENERATOR - Removal**.
11. Remove the intake manifold and IAFM as an assembly. See **Engine/Manifolds/MANIFOLD, Intake - Removal**.
12. Remove the ground wires from the rear of each cylinder head.



813881db

Fig. 6: HEATER HOSE SUPPLY
Courtesy of CHRYSLER LLC

- 1 - Heater Hose
- 2 - Clamp
- 3 - Tube

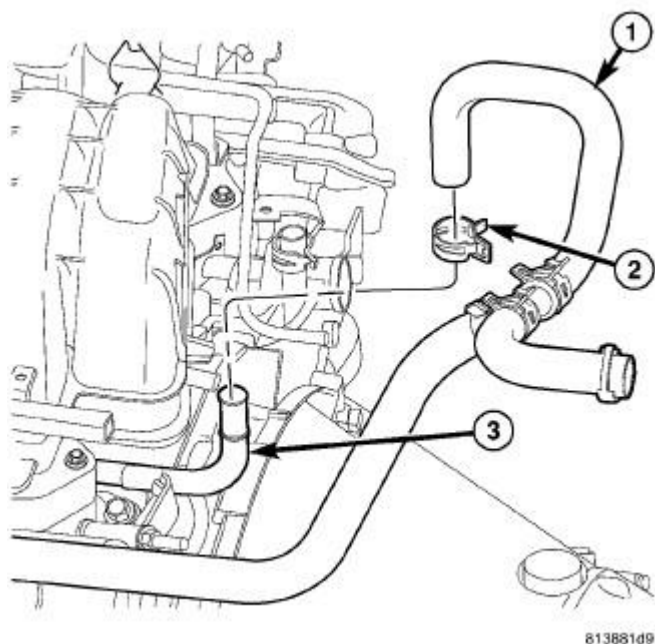


Fig. 7: HEATER HOSE RETURN
Courtesy of CHRYSLER LLC

- 1 - Heater Hose
- 2 - Clamp
- 3 - Tube

13. Disconnect the heater hoses (1).


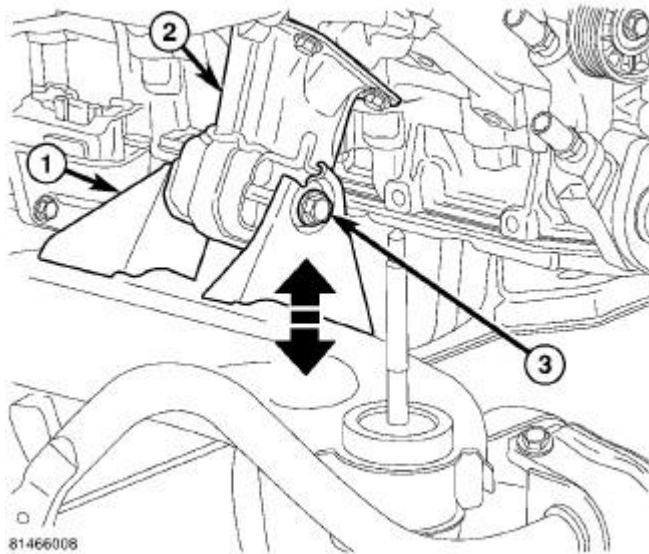


Fig. 8: ENGINE MOUNT BOLT
Courtesy of CHRYSLER LLC

NOTE: It is not necessary to disconnect P/S hoses from pump, for P/S pump removal.

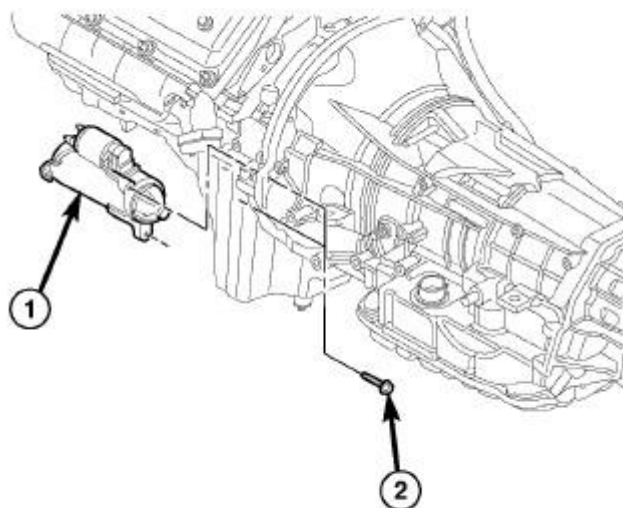14. Remove the power steering pump and set aside.
15. Disconnect the fuel supply line. Refer to **Fuel System/Fuel Delivery/FITTING, Quick Connect - Standard Procedure** .
16. Raise and support the vehicle on a hoist and drain the engine oil.
17. Remove engine front mount to frame bolts (3) and nuts.
18. Disconnect the transmission oil cooler lines from their retainers at the oil pan bolts.




81501507

Fig. 9: 5.7 STARTER

Courtesy of CHRYSLER LLC

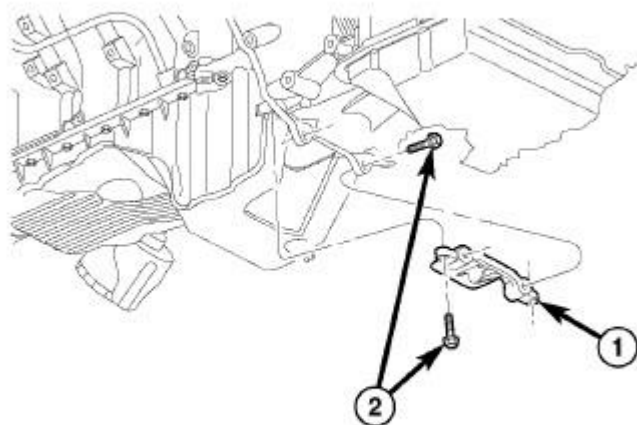19. Disconnect exhaust pipe at manifolds.
20. Disconnect the starter wires. Remove starter motor (1). Refer to **Electrical - Engine Systems/Starting/STARTER - Removal**.




815005aa

Fig. 10: Structural Dust Cover

Courtesy of CHRYSLER LLC

1 - STRUCTURAL COVER
2 - BOLTS

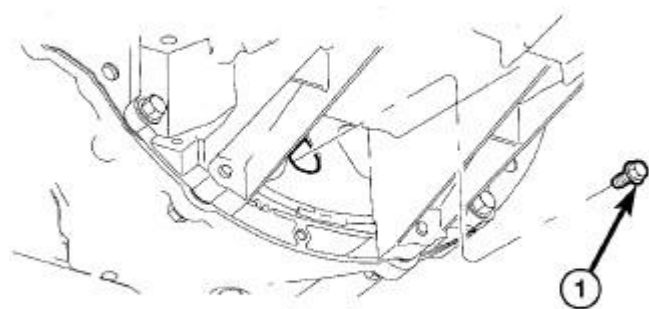21. Remove the structural dust cover (1).



813878a5

Fig. 11: Drive Plate Torque Converter Bolts
Courtesy of CHRYSLER LLC

1 - Bolts

22. Remove drive plate to converter bolts.

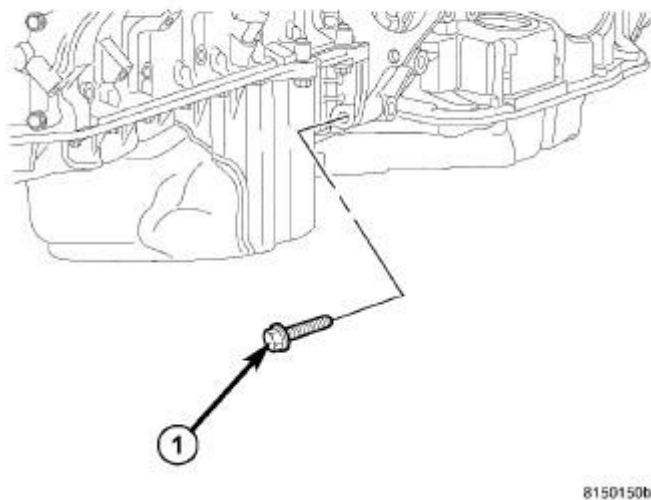


Fig. 12: OIL PAN TO TRANSMISSION BOLTS
Courtesy of CHRYSLER LLC

1 - BOLTS

23. Remove the oil pan to transmission bolts (1).

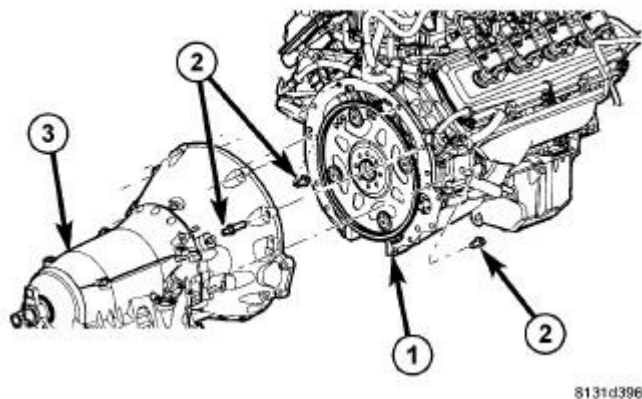


Fig. 13: Removing/Installing Transmission to Engine Bolts
Courtesy of CHRYSLER LLC

1 - ENGINE
2 - BOLTS
3 - TRANSMISSION

24. Remove transmission bell housing to engine block bolts (2).
25. Lower the vehicle.

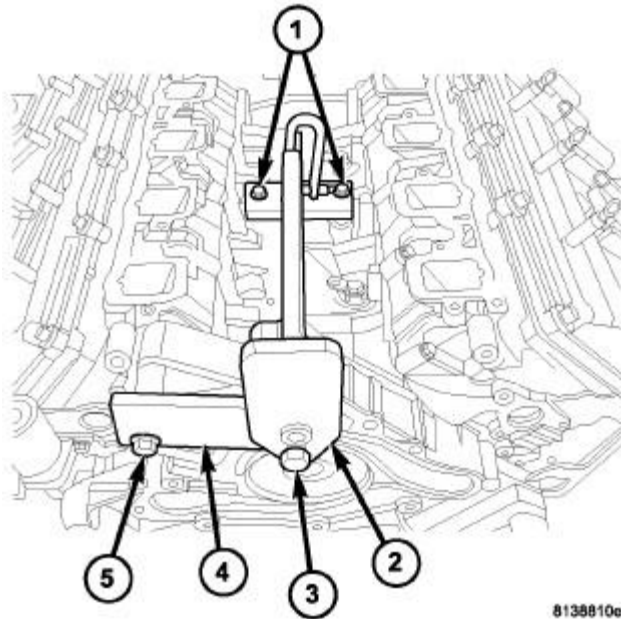


Fig. 14: ENGINE LIFT FIXTURE and ADAPTER
Courtesy of CHRYSLER LLC

- | |
|-------------------------|
| 1 - Bolts |
| 2 - Engine Lift Fixture |
| 3 - Adapter Bolt |
| 4 - Adapter |
| 5 - Adapter Nut |

26. Install engine lift fixture, special tool 8984A and 8984-UPD.
27. Separate engine from transmission, remove engine from vehicle, and install engine assembly on a repair stand.

INSTALLATION

INSTALLATION

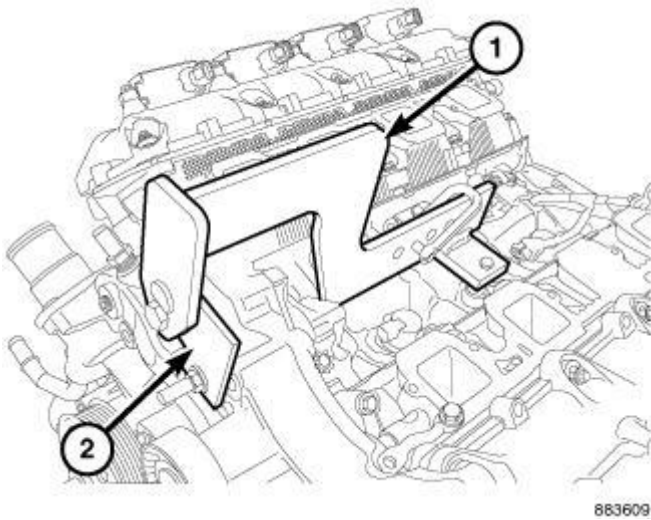


Fig. 15: Engine Lift Fixture & Adapter
Courtesy of CHRYSLER LLC

NOTE: Do not use air tools to install 8984A Engine Lift Fixture (1) and Adapter 8984A Eagle (2).

1. Install the engine lift fixture 8984A (1) and adapter 8984A Eagle (2).
2. Position the engine in the engine compartment.

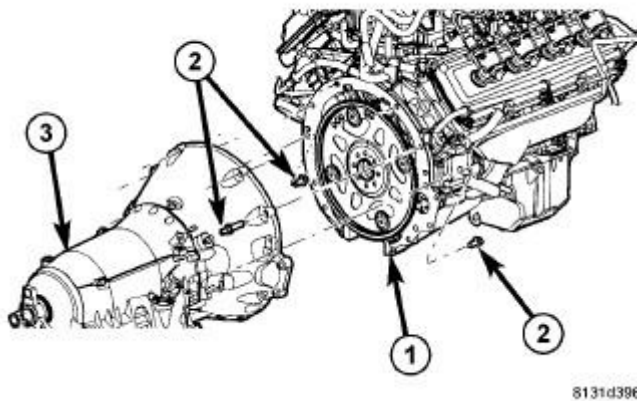


Fig. 16: Removing/Installing Transmission To Engine Bolts
Courtesy of CHRYSLER LLC

3. Lower and align the engine (1) with the transmission (3).
4. Install two transmission bell housing to engine block mounting bolts (2) finger tight.

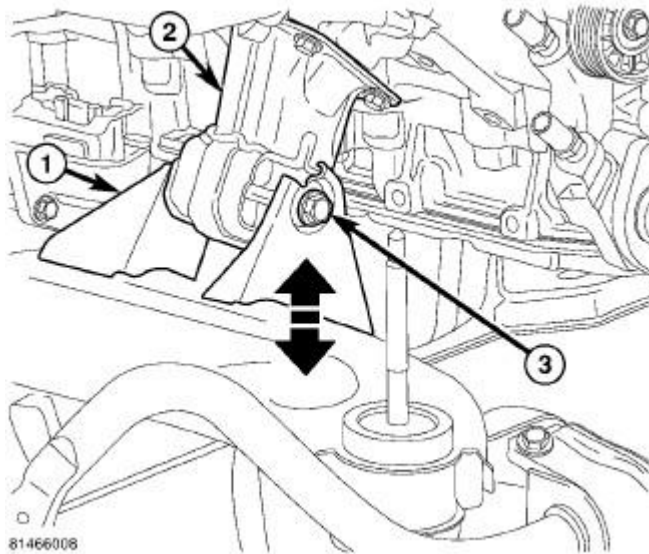


Fig. 17: ENGINE MOUNT BOLT
Courtesy of CHRYSLER LLC

5. Lower the engine assembly until the engine mount through bolts (3) line up in the frame brackets (1).
6. Raise and support the vehicle on a hoist.

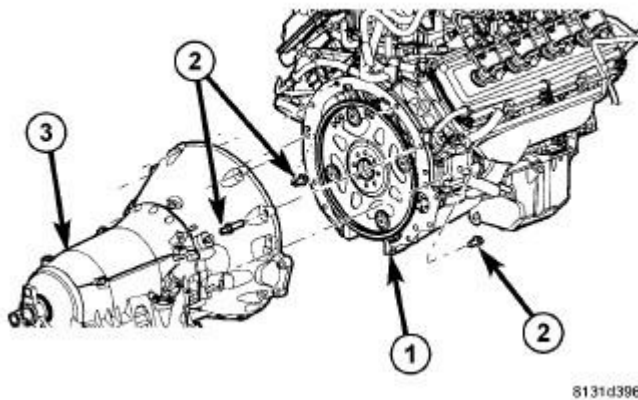


Fig. 18: Removing/Installing Transmission To Engine Bolts
Courtesy of CHRYSLER LLC

7. Install the remaining transmission bell housing to engine block mounting bolts (2) and tighten to 68 N.m (50 ft. lbs.)

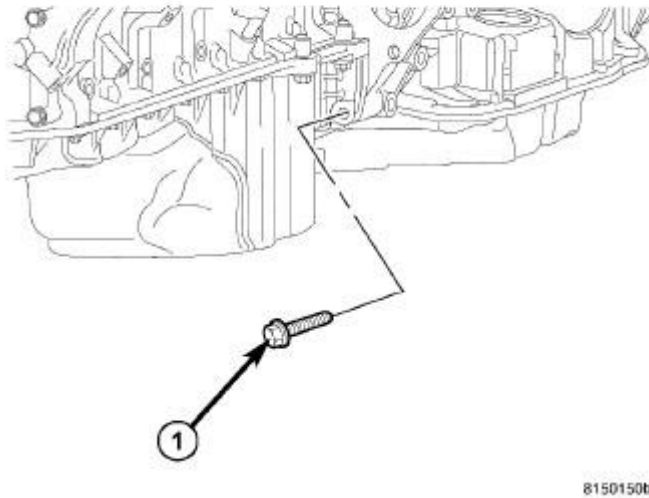


Fig. 19: OIL PAN TO TRANSMISSION BOLTS
Courtesy of CHRYSLER LLC

8. Install both the left and right side oil pan to transmission bolts (1) and tighten bolts to 54 N.m (40 ft. lbs.).
9. Connect the transmission oil cooler lines at the oil pan and tighten bolts to 12 N.m (9 ft. lbs.).


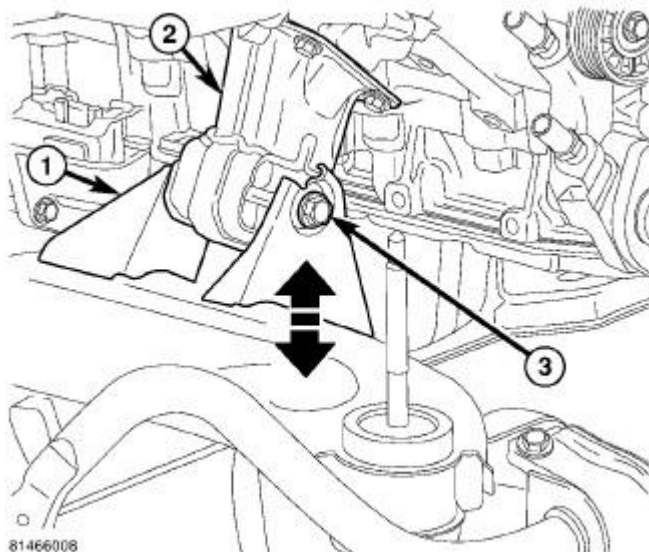


Fig. 20: ENGINE MOUNT BOLT
Courtesy of CHRYSLER LLC

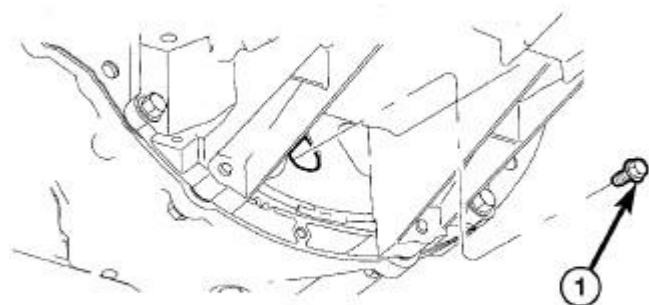
10. Install the engine mount through bolts (3) and nuts and tighten to 95 N.m (70 ft. lbs.).



813878a5

Fig. 21: Drive Plate Torque Converter Bolts
Courtesy of CHRYSLER LLC

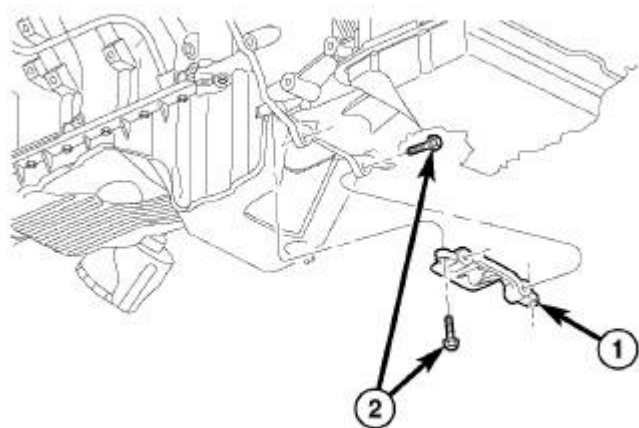11. Install all torque converter-to-flexplate bolts (1) by hand, verify the torque converter is pulled flush to the flexplate and tighten bolts to 31 N.m (23 ft. lbs.).



815006aa

Fig. 22: Structural Dust Cover
Courtesy of CHRYSLER LLC

CAUTION: The structural dust cover must be installed as described in the **Structural Dust Cover** installation procedure. Failure to do so will cause severe damage to the cover.

12. Install the structural dust cover (1). See **Engine/Engine Block/COVER, Structural Dust - Installation**.

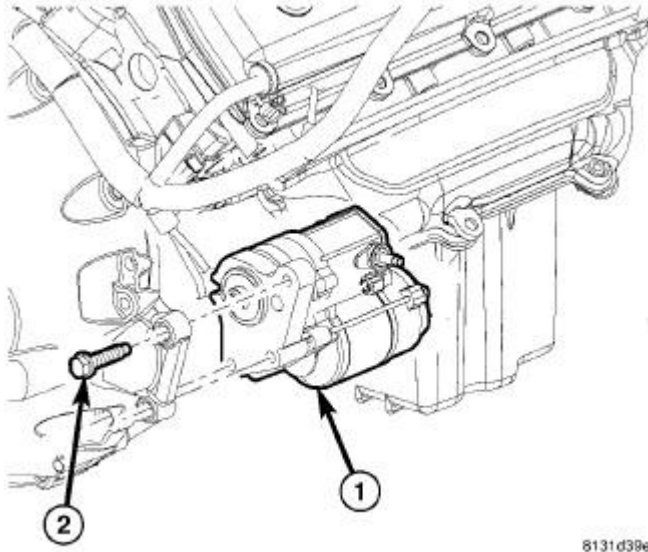


Fig. 23: Relocate Starter
Courtesy of CHRYSLER LLC

13. Install the starter (1) and connect the starter wires. Refer to **Electrical - Engine Systems/Starting/STARTER - Installation**.

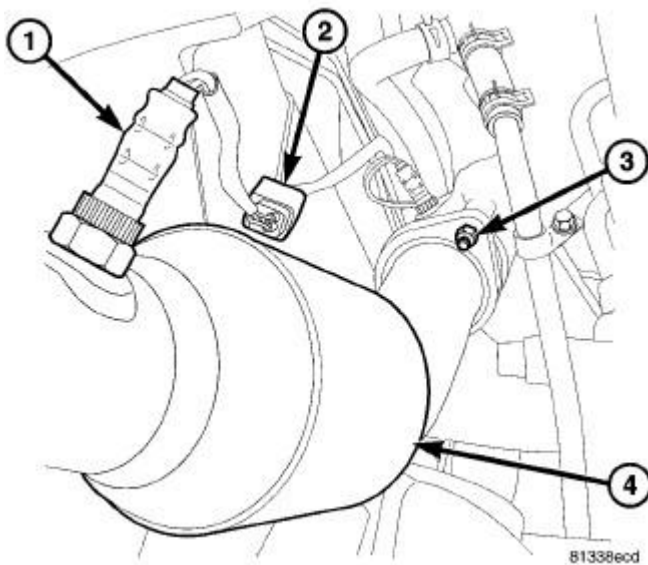


Fig. 24: LH CATALYTIC CONVERTER
Courtesy of CHRYSLER LLC

14. Install the front exhaust pipe/catalytic converter assembly (4) to the exhaust manifold flange and tighten the bolts and nuts (3) to 26 N.m (19 ft. lbs.).
15. Lower the vehicle.

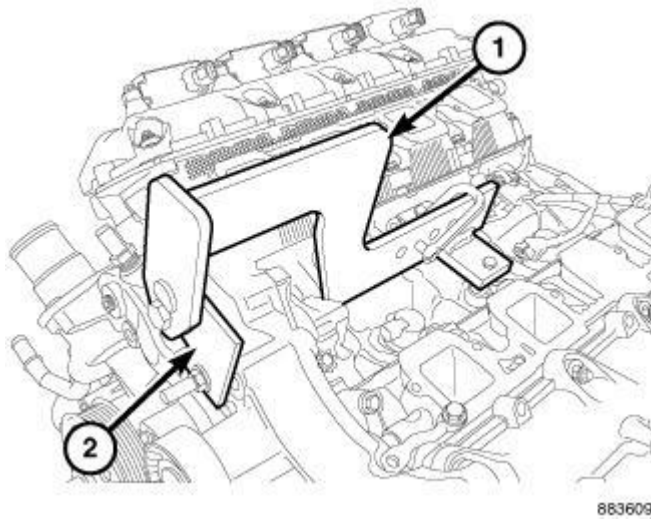


Fig. 25: Engine Lift Fixture & Adapter
Courtesy of CHRYSLER LLC

16. Remove the engine lift fixture 8984A and adapter 8984A Eagle (1,2).

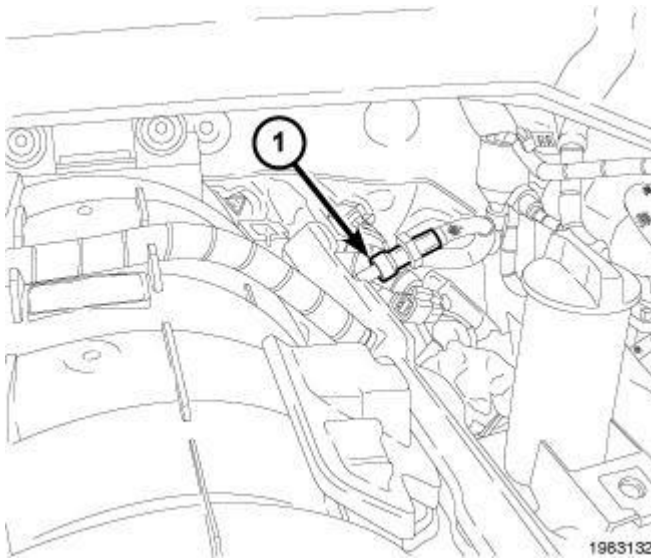


Fig. 26: Fuel Supply Line Quick Connect Fitting At Fuel Rail
Courtesy of CHRYSLER LLC

17. Connect the fuel supply line (1). Refer to **Fuel System/Fuel Delivery/FITTING, Quick Connect - Standard Procedure**.

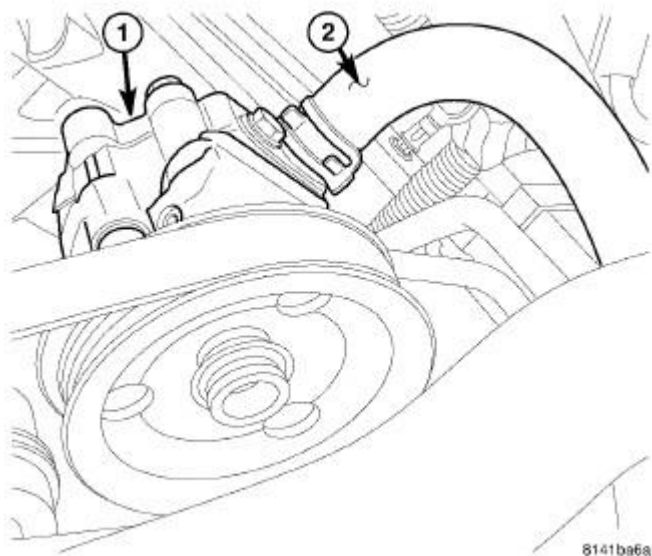


Fig. 27: RETURN HOSE - 5.7
Courtesy of CHRYSLER LLC

18. Install the power steering pump. Refer to **Steering/Pump - Installation** .

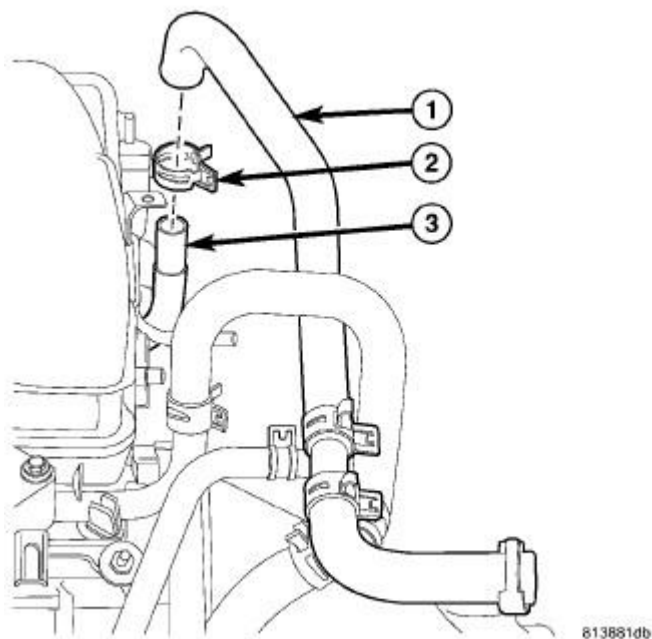


Fig. 28: HEATER HOSE SUPPLY
Courtesy of CHRYSLER LLC

19. Connect the heater hoses (1).

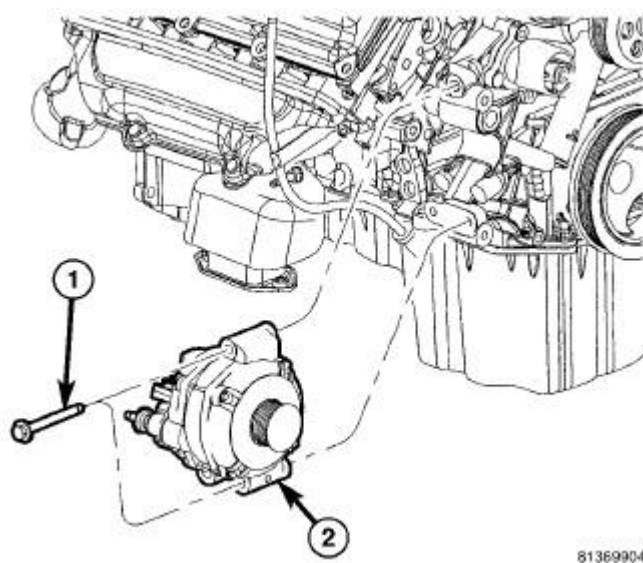


Fig. 29: GENERATOR-5.7L
Courtesy of CHRYSLER LLC

20. Reconnect the ground wires to the rear of each cylinder head.
21. Install the intake manifold. See **Engine/Manifolds/MANIFOLD, Intake - Installation**.
22. Install the generator (2), and wire connections. Refer to **Electrical - Engine Systems/Charging/GENERATOR - Installation** .

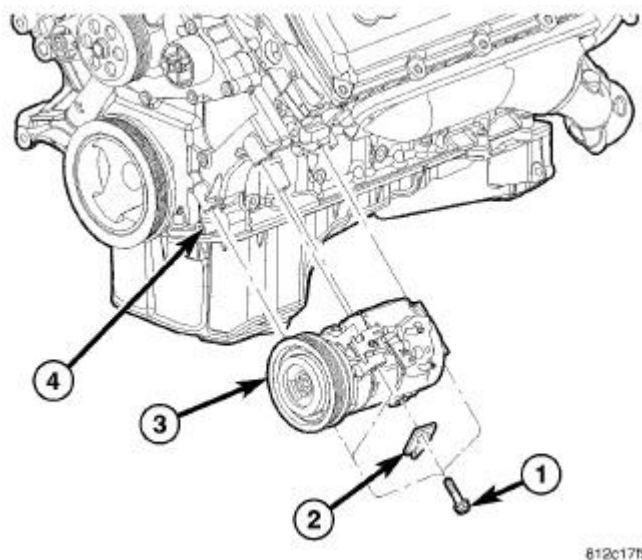


Fig. 30: COMPRESSOR-A/C 5.7L REMOVAL/INSTALLATION
Courtesy of CHRYSLER LLC

23. Install the A/C compressor (3). Refer to **Heating and Air Conditioning/Plumbing/COMPRESSOR, A/C - Installation** .

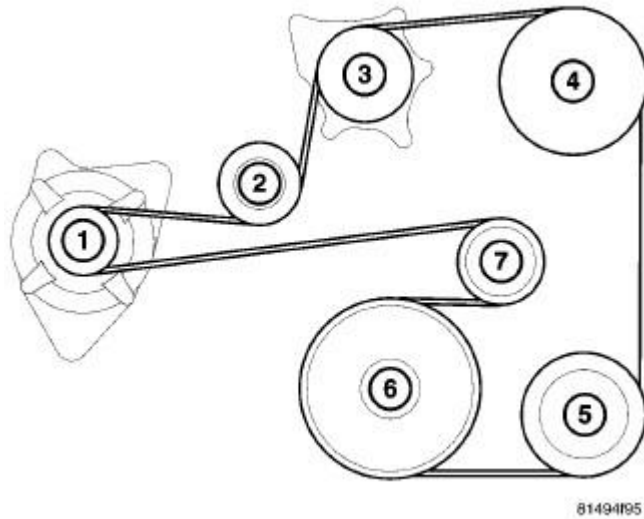


Fig. 31: Accessory Drive Belt Routing
Courtesy of CHRYSLER LLC

24. Install the accessory drive belt. Refer to **Cooling/Accessory Drive/BELT, Serpentine - Installation**.
25. Install the radiator fan and shroud assembly. Refer to **Cooling/Engine/FAN, Cooling - Installation**.
26. Connect the radiator lower hose.
27. Connect the transmission oil cooler lines to the radiator.
28. Connect the radiator upper hose.

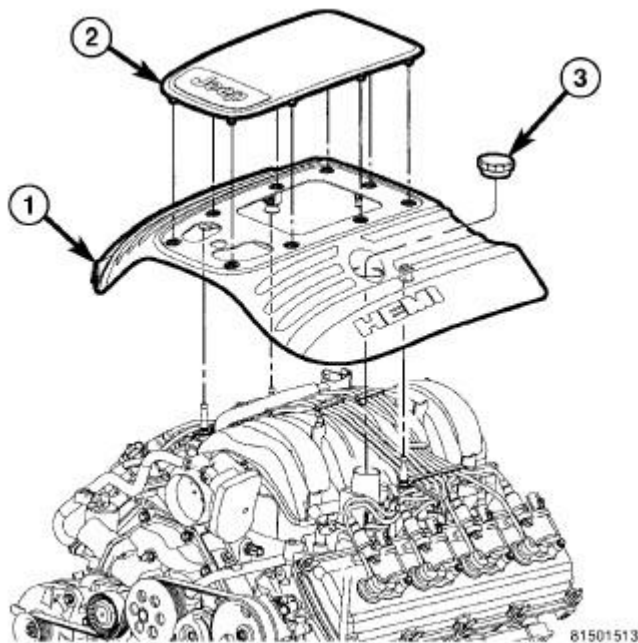


Fig. 32: ENGINE COVER

Courtesy of CHRYSLER LLC

29. Install the air cleaner resonator and duct work.
30. Add engine oil to the crankcase. Refer to **Vehicle Quick Reference/Capacities and Recommended Fluids - Specifications** .
31. Fill the cooling system. Refer to **Cooling - Standard Procedure** .
32. Install the engine cover (1).

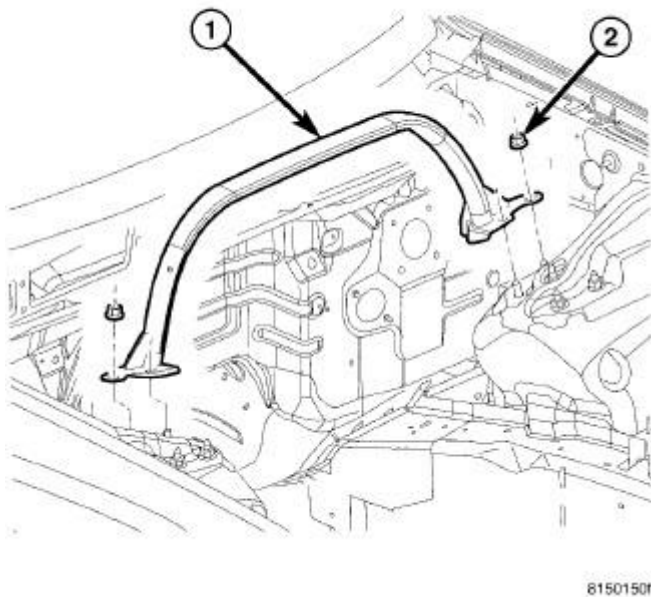


Fig. 33: STRUT TOWER SUPPORT
Courtesy of CHRYSLER LLC

33. Install the strut tower support (1).
34. Connect the negative battery cable.
35. Start the engine and inspect for leaks.
36. Road test the vehicle.

SPECIFICATIONS

SPECIFICATIONS

EAGLE ENGINE - 90° V-8 OHV

DESCRIPTION	SPECIFICATION	
	Metric	Standard
-		
Displacement	5.7 Liters	348 CID
Bore	99.5 mm	3.92 in.

2009 Jeep Grand Cherokee SRT-8

2009 ENGINE 5.7L - Service Information - Grand Cherokee

Stroke	90.9 mm	3.58 in.
Compression Ratio	10.5:1	
Max. Variation Between Cylinders	25%	
Firing Order	1-8-4-3-6-5-7-2	
Lubrication	Pressure Feed - Full Flow Filtration	
Cooling System	Liquid Cooled	
Cylinder Block	Cast Iron	
Cylinder Head	Aluminum	
Crankshaft	Nodular Iron	
Camshaft	Cast Iron	
Pistons	Aluminum Alloy	
Connecting Rods	Powdered Metal	

CYLINDER BLOCK

DESCRIPTION -	SPECIFICATION	
	Metric	Standard
Cylinder Bore Diameter	99.50 mm	3.92 in.
Out of Round (MAX)	0.0076 mm	0.0003 in.
Taper (MAX)	0.0127 mm	0.0005 in.
Lifter Bore Diameter	21.45 - 21.425 mm	0.8444 - 0.8435 in.

PISTONS

DESCRIPTION -	SPECIFICATION	
	Metric	Standard
Clearance Measured at 38.0 mm (1.5 in.) Below Deck	- 0.031 - 0.058 mm	- 0.012 - 0.023 in.
Ring Groove Diameter	-	-
Top Groove	90.4 - 90.6 mm	3.56 - 3.57 in.
Second Groove	88.4 - 88.7 mm	3.48 - 3.49 in.
Weight	413 grams	14.56 oz.
Piston Length	53.3 mm	2.10 in.
Ring Groove Width	-	-
No. 1	1.23 - 1.26 mm	0.048 - 0.0496 in.
No. 2	1.23 - 1.25 mm	0.048 - 0.0492 in.
No. 3	2.03 - 2.05 mm	0.079 - 0.080 in.

PISTON PINS

DESCRIPTION -	SPECIFICATION	
	Metric	Standard
Clearance In Piston	0.005 - 0.014 mm	0.0001 - 0.0005 in.
Diameter	24.004 - 24.007 mm	0.945 - 0.9451 in.

2009 Jeep Grand Cherokee SRT-8

2009 ENGINE 5.7L - Service Information - Grand Cherokee

Length

62.99 - 63.21 mm

2.47 - 2.48 in.

PISTON RINGS

DESCRIPTION -	SPECIFICATION	
	Metric	Standard
Ring Gap	-	-
Top Compression Ring	0.40 - 0.55 mm	0.015 - 0.021 in.
Second Compression Ring	0.24 - 0.51 mm	0.009 - 0.020 in.
Oil Control Rails	0.15 - 0.66 mm	0.0059 - 0.0259 in.
Side Clearance	-	-
Top Compression Ring	0.04 - 0.09 mm	0.001 - 0.0035 in.
Second Compression Ring	0.04 - .08 mm	0.001 - 0.0031 in.
Oil Control Rails	0.06 - 0.21 mm	0.002 - 0.008 in.
Ring Width	-	-
Top Compression Ring	1.17 - 1.19 mm	0.0460 - 0.0468 in.
Second Compression Ring	1.17 - 1.19 mm	0.0460 - 0.0468 in.
Oil Control Rails	0.387 - 0.413 mm	0.015 - 0.016 in.

CONNECTING RODS

DESCRIPTION -	SPECIFICATION	
	Metric	Standard
Piston Pin Bore Diameter	24.014 - 24.024 mm	0.9454 - 0.9458 in.
Side Clearance	0.10 - 0.35 mm	0.003 - 0.0137 in.

CRANKSHAFT

DESCRIPTION -	SPECIFICATION	
	Metric	Standard
Main Bearing Journal Diameter	64.988 - 65.012 mm	2.5585 - 2.5595 in.
Bearing Clearance	0.023 - 0.051 mm	0.0009 - 0.002 in.
Out of Round (MAX)	0.005 mm	0.0002 in.
Taper (MAX)	0.003 mm	0.0001 in.
End Play	0.052 - 0.282 mm	0.002 - 0.011 in.
End Play (MAX)	0.282 mm	0.011 in.
Connecting Rod Journal Diameter	53.992 - 54.008 mm	2.126 in.
Bearing Clearance	0.020 - 0.060 mm	0.0007 - 0.0023 in.
Out of Round (MAX)	0.005 mm	0.0002 in.
Taper (MAX)	0.003 mm	0.0001 in.

CAMSHAFT

DESCRIPTION -	SPECIFICATION	
	Metric	Standard
Bearing Journal Diameter		

2009 Jeep Grand Cherokee SRT-8

2009 ENGINE 5.7L - Service Information - Grand Cherokee

		-
No. 1	58.2 mm	2.29 in.
No. 2	57.8 mm	2.28 in.
No. 3	57.4 mm	2.26 in.
No. 4	57.0 mm	2.24 in.
No. 5	43.633 mm	1.72 in.
Bearing To Journal Clearance Standard	-	
No. 1	0.040 - 0.080 mm	0015 -.003 in.
No. 2	0.050 -0.090 mm	0.0019 -.0035 in.
No. 3	0.040 - 0.080 mm	0015 -.003 in.
No. 4	0.050 - 0.090 mm	0.0019 -.0035 in.
No. 5	0.040 - 0.080 mm	0015 -.003 in.
Camshaft End Play	080 - 0.290 mm	0.0031 - 0.0114 in.

VALVE TIMING

DESCRIPTION		SPECIFICATION
Intake		-
	Opens (BTDC)	21.7°
	Closes (ATDC)	236.3°
	Duration	258°
Exhaust		-
	Opens (BTDC)	270.2°
	Closes (ATDC)	17.8°
	Duration	288°
Valve Overlap		39.5°

CYLINDER HEAD

DESCRIPTION	SPECIFICATION	
	Metric	Standard
-		
Valve Seat Angle	44.5° - 45.0°	
Valve Seat Runout (MAX)	0.05 mm	0.0019 in.
Valve Seat Width (finish)	-	-
Intake	1.18 - 1.62 mm	0638 in.
Exhaust	1.48 - 1.92 mm	0.0583 - 0.0756 in.
Guide Bore Diameter (Std.)	7.975 - 8.00 mm	0.3134 - 0.315 in.

HYDRAULIC TAPPETS

DESCRIPTION	SPECIFICATION	
	Metric	Standard
-		
Body Diameter	21.387 - 21.405 mm	0.8420 - 0.8427 in.
Clearance (to bore)	0.020 - 0.063 mm	0.0008 - 0.0025 in.

2009 Jeep Grand Cherokee SRT-8

2009 ENGINE 5.7L - Service Information - Grand Cherokee

Dry Lash

3.0 mm (at the valve)

0.1181 in. (at the valve)

VALVES

DESCRIPTION -	SPECIFICATION	
	Metric	Standard
Face Angle	45.0° - 45.5°	
Head Diameter	-	
Intake	50.67 - 50.93 mm	1.99 - 2.01 in.
Exhaust	39.27 - 39.53 mm	1.55 - 1.56 in.
Length (overall)	-	
Intake	123.38 - 123.76 mm	4.857 - 4.872 in.
Exhaust	120.475 - 120.855 mm	4.743 - 4.758 in.
Stem Diameter	-	
Intake	7.935 - 7.953 mm	0.312 - 0.313 in.
Exhaust	7.932 - 7.950 mm	0.312 - 0.313 in.
Stem - to - Guide Clearance	-	
Intake	0.022 - 0.065 mm	0.0008 - 0.0025 in.
Exhaust	0.025 - 0.065 mm	0.0009 - 0.0025 in.
Valve Lift (@ zero lash)	-	
Intake	12.0 mm	0.472 in.
Exhaust	11.70 mm	0.460 in.

VALVE SPRING

DESCRIPTION -	SPECIFICATION	
	Metric	Standard
Spring Force (valve closed)	435.0 N +/- 22.0 N @ 45 mm	97.8 lbs +/- 5.0 lbs. @ 1.771 in.
Spring Force (valve open)	1077.0 N +/- 48.0 N @ 32.6 mm.	242.0 lbs. +/- 11 lbs. @ 1.283 in.
Free Length (approx).	55.6 mm	2.189 in.
Number of Coils	7.95	
Wire Diameter	4.95 x 4.1 mm	0.194 - 0.161 in.
Installed Height (spring seat to bottom of retainer)	46.0 mm	1.81 in.

OIL PUMP

DESCRIPTION -	SPECIFICATION	
	Metric	Standard
Clearance Over Rotors (MAX)	0.095 mm	0.0038 in.
Outer Rotor to Pump Body Clearance (MAX)	235 mm	0.009 in.
Tip Clearance Between Rotors (MAX)	0.150 mm	0.006 in.

2009 Jeep Grand Cherokee SRT-8

2009 ENGINE 5.7L - Service Information - Grand Cherokee

OIL PRESSURE

DESCRIPTION -	SPECIFICATION	
	Metric	Standard
At Curb Idle Speed (MIN)*	25 kPa	4 psi
@ 3000 RPM	170 - 758 kPa	25 - 110 psi
* CAUTION: If pressure is zero at curb idle, DO NOT run engine.		

TORQUE

TORQUE CHART 5.7L ENGINE

DESCRIPTION		N.m	Ft. Lbs.	In. Lbs.
Block Pipe Plugs (1/4 NPT)		20	15	-
	(3/8 NPT)	27	20	-
Camshaft Sprocket Bolt		122	90	-
Camshaft Tensioner Plate Bolts		28	21	-
Coil to Cylinder Head Cover Bolts		7	-	62
Timing Chain Case Cover Bolts		28	21	-
	Lifting Stud	55	41	-
Connecting Rod Cap Bolts		21 plus 90° Turn	15 plus 90° Turn	-
Main Bearing Cap Bolts M-12		27 plus 90° Turn	20 plus 90° Turn	-
Crossbolts M-8		28	21	-
Cylinder Head Bolts M-12 Bolts		-	-	-
	Step 1	34	25	-
	Step 2	54	40	-
	Step 3	Turn 90°	Turn 90°	-
		-	-	-
		-	-	-
M-8 Bolts	Step 1	20	15	-
	Step 2	34	25	-
Cylinder Head Cover Bolts		8	-	71
Exhaust Manifold to Cylinder Head		25	18	-
Flexplate to Crankshaft Bolts		95	70	-
Flywheel to Crankshaft Bolts		75	55	-
Front Insulator Through bolt/nut		95	70	-
Front Insulator to Block Bolts		95	70	-
Generator Mounting Bolt		55	41	-
Intake Manifold Bolts		12	9	-
Lifter Guide Holder		12	9	-

Oil Pan Bolts	12	9	-
Oil Dipstick Tube	12	9	-
Oil Pan Drain Plug	27	20	-
Oil Pump Attaching Bolts	28	21	-
Oil Pump Pickup Tube Bolt and Nut	28	21	-
Rear Seal Retainer Attaching Bolts	15	11	-
Rear Insulator to Bracket	68	50	-
Rear Insulator to Crossmember	41	30	-
Rear Insulator to Transmission	68	50	-
Rear Insulator Bracket Bolts	68	50	-
Rocker Arm Bolts	22	16	-
Spark Plugs	17	13	-
Thermostat Housing Bolts	28	21	-
Throttle Body Bolts	12	9	-
Vibration Damper Bolt	176	130	-
Water Pump to Timing Chain	28	21	-
Case Cover Bolts	28	21	-

SPECIAL TOOLS

SPECIAL TOOLS

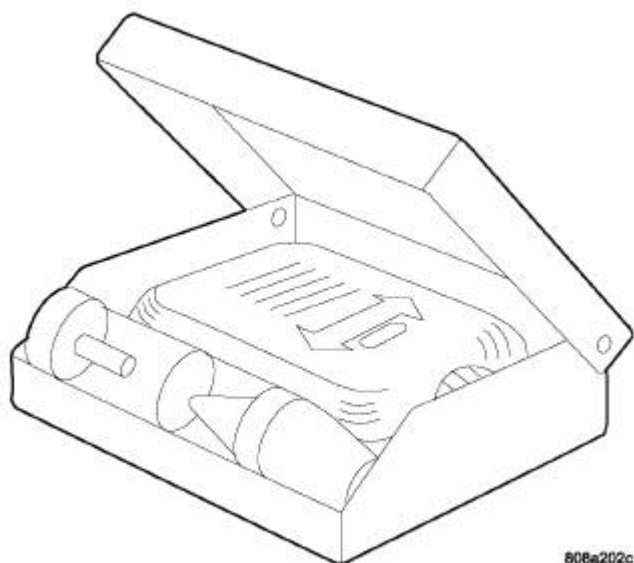


Fig. 34: BLOC-CHEK-KIT - C-3685-A
Courtesy of CHRYSLER LLC

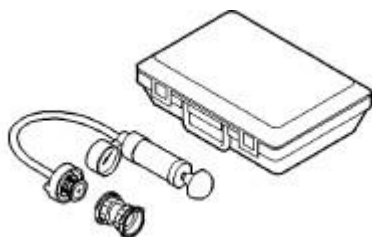


Fig. 35: TESTER, COOLING SYSTEM - 7700-A
Courtesy of CHRYSLER LLC

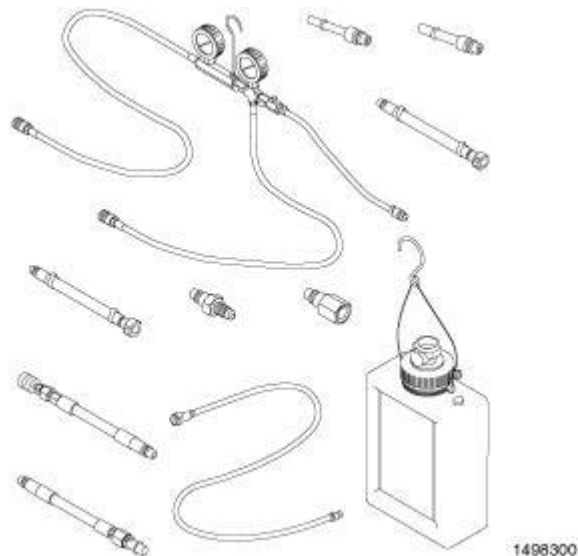


Fig. 36: DECAY TOOL, FUEL - 8978A
Courtesy of CHRYSLER LLC

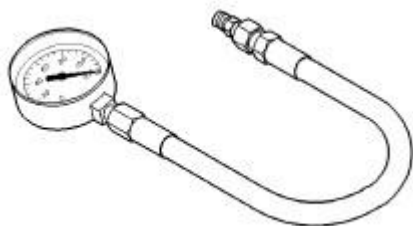


Fig. 37: GAUGE, PRESSURE - C-3292A
Courtesy of CHRYSLER LLC

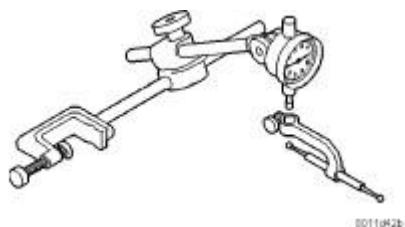


Fig. 38: SET, DIAL INDICATOR - C-3339A
Courtesy of CHRYSLER LLC

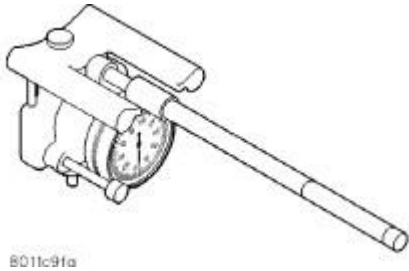


Fig. 39: CYLINDER INDICATOR - C-119
Courtesy of CHRYSLER LLC

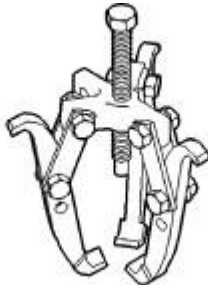


Fig. 40: PULLER - 1023
Courtesy of CHRYSLER LLC


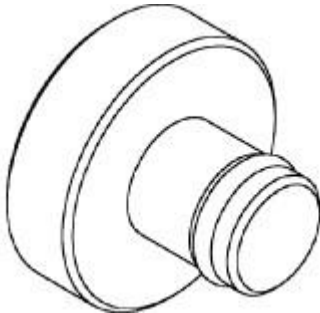


Fig. 41: INSERT, CRANKSHAFT - 8513A
Courtesy of CHRYSLER LLC

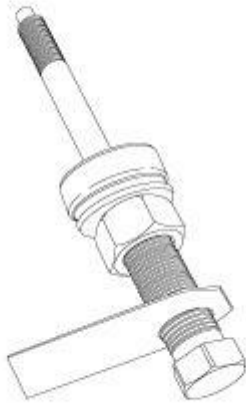

2065300

Fig. 42: INSTALLER, DAMPER - 8512A

Courtesy of CHRYSLER LLC

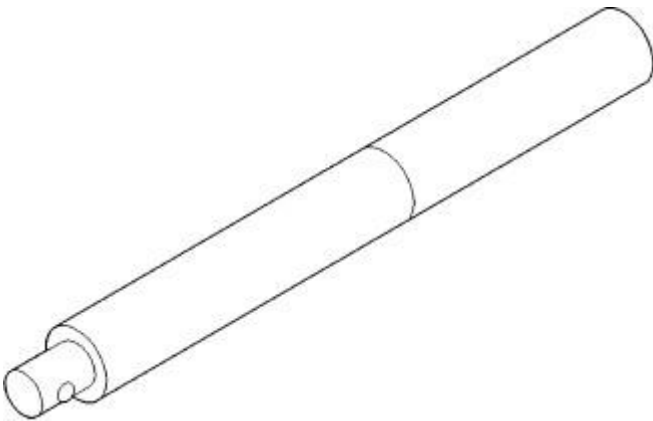


Fig. 43: DRIVER HANDLE, UNIVERSAL - C-4171

Courtesy of CHRYSLER LLC

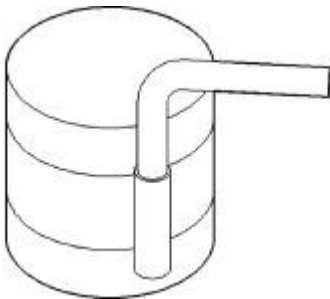


Fig. 44: COMPRESSOR, PISTON - C-385

Courtesy of CHRYSLER LLC

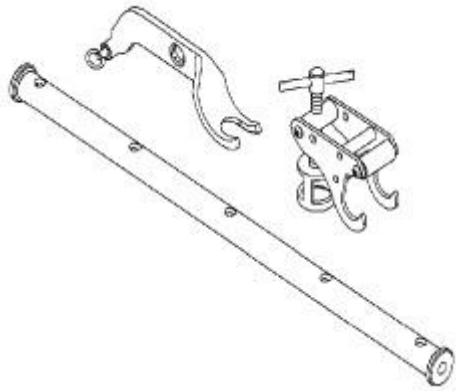


Fig. 45: COMPRESSOR, VALVE SPRING - 9065A
Courtesy of CHRYSLER LLC

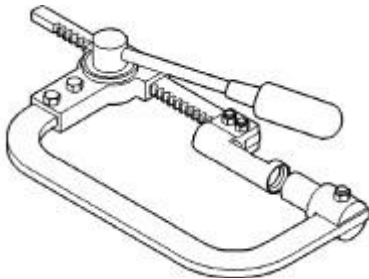


Fig. 46: COMPRESSOR, VALVE SPRING - C-3422-D
Courtesy of CHRYSLER LLC

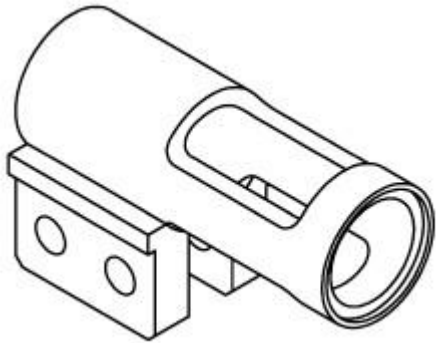


Fig. 47: ADAPTER, VALVE SPRING - 8464
Courtesy of CHRYSLER LLC

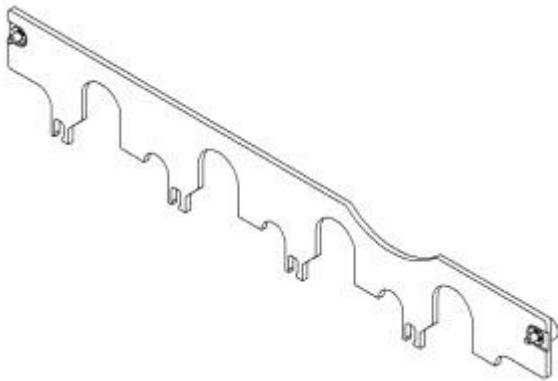


Fig. 48: RETAINER, PUSH ROD - 9070
Courtesy of CHRYSLER LLC

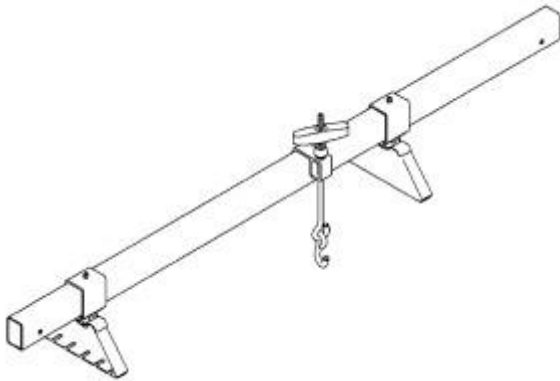


Fig. 49: SUPPORT FIXTURE, ENGINE - 8534B
Courtesy of CHRYSLER LLC

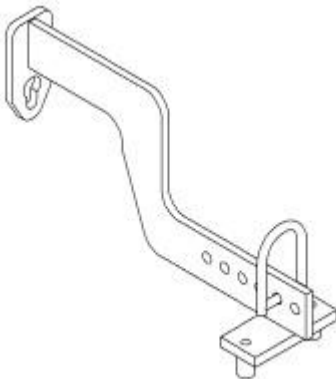


Fig. 50: ENGINE LIFT FIXTURE - 8984A
Courtesy of CHRYSLER LLC

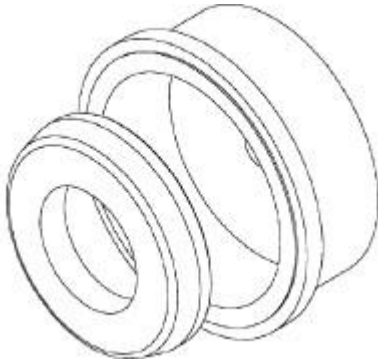


Fig. 51: INSTALLER, SEAL - 8349
Courtesy of CHRYSLER LLC

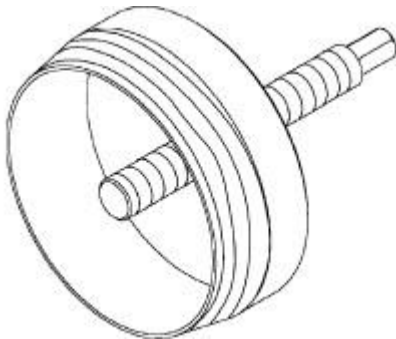


Fig. 52: REMOVER, SEAL - 8506
Courtesy of CHRYSLER LLC

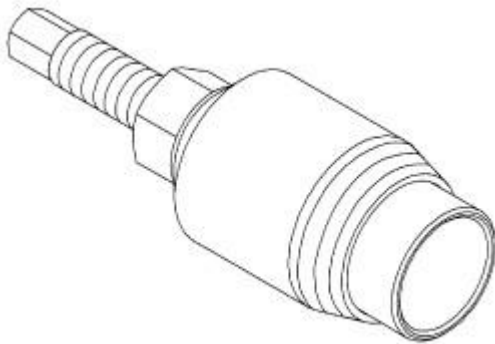


Fig. 53: REMOVER, SEAL - 9071
Courtesy of CHRYSLER LLC

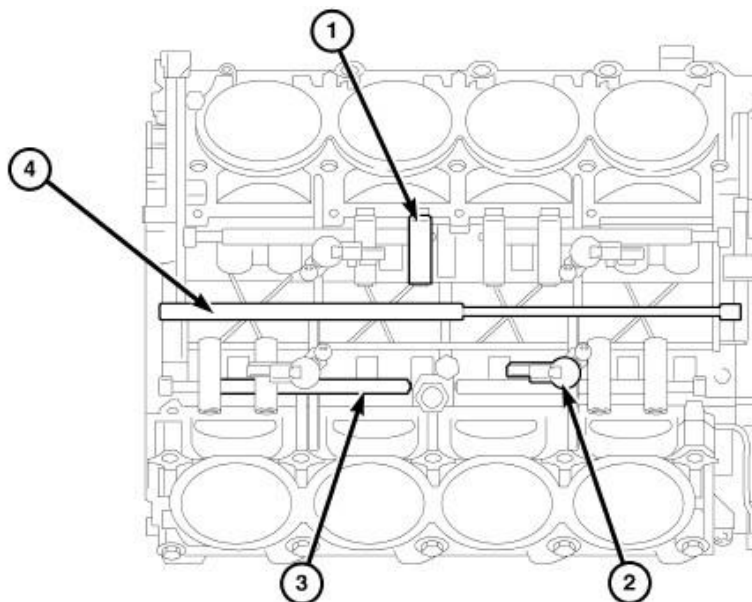


Fig. 54: INSTALLER, SEAL - 9072
Courtesy of CHRYSLER LLC

MDS SYSTEM

DESCRIPTION

DESCRIPTION



81d715d8

Fig. 55: Identifying Multiple Displacement System Components
Courtesy of CHRYSLER LLC

- 1 - DEACTIVATING LIFTERS
- 2 - SOLENOIDS
- 3 - LIFTER OIL GALLERY
- 4 - MAIN OIL GALLERY

The Multiple Displacement System (MDS) provides cylinder deactivation during steady-speed, low-

acceleration and shallow grade climbing conditions to increase fuel economy.

MDS can provide a 5-20 percent fuel economy benefit when operating in four-cylinder mode, depending on driving habits and vehicle usage. For EPA rating purposes, fuel economy is 8-15 percent higher than if the engine was operating on eight cylinders at all times.

MDS is integrated into the basic engine architecture, requiring a minimum of additional parts - four additional solenoids, an oil temperature sensor and a wire harness. Eight unique valve lifters and a modified camshaft are also required.

OPERATION

OPERATION

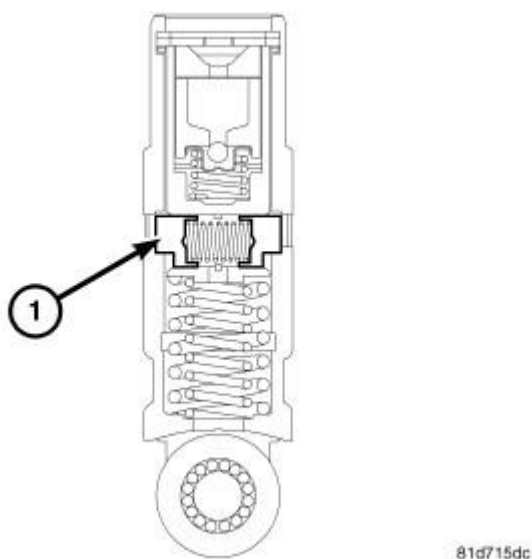


Fig. 56: MDS Lifter Cross Section
Courtesy of CHRYSLER LLC

The Multiple Displacement System (MDS) provides cylinder deactivation during steady speed, low acceleration and shallow grade climbing conditions to increase fuel economy. Both four and eight cylinder configurations have even firing intervals provide smooth operation. Two cylinders on each bank are active when the engine is in four-cylinder mode - every other cylinder in the firing order. All of the cylinders that are deactivated have unique hydraulic valve lifters that collapse when deactivated to prevent the valves from opening. Engine oil pressure is used to activate and deactivate the valves. It is delivered through special oil passages drilled into the cylinder block. Solenoid valves control the flow. When activated, pressurized oil pushes a latching pin on each valve lifter, which then becomes a "lost motion" link. Its base follows the camshaft, but its top remains stationary, held in place against the pushrod by light spring pressure but unable to move because of the much higher force of the valve spring.

NOTE: It is critical to use the recommended oil viscosity in 5.7L engines that use MDS.

Deactivation occurs during the compression stroke of each cylinder, after air and fuel enter the cylinder. Ignition then occurs, but the combustion products remain trapped in the cylinder under high pressure, because

the valves no longer open. No air enters or leaves. During subsequent piston strokes, this high-pressure gas is repeatedly compressed and expanded like an air spring, but fuel is not injected.

AIR INTAKE SYSTEM

AIR CLEANER

Removal

REMOVAL

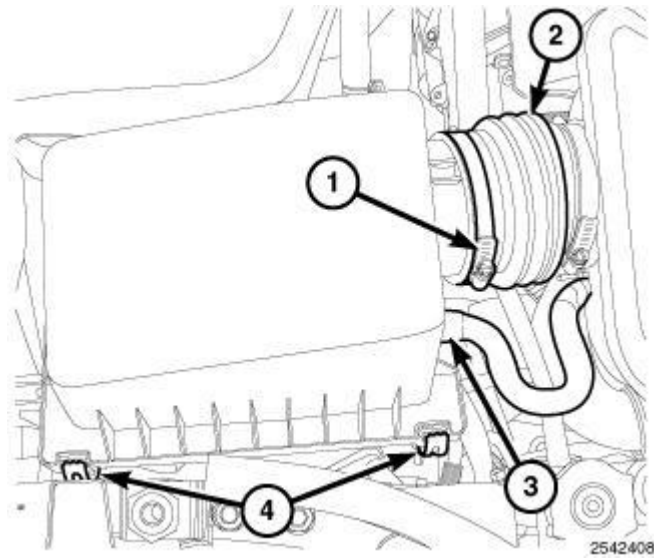


Fig. 57: Air Duct Clamp At Air Cleaner Cover
Courtesy of CHRYSLER LLC

NOTE: Air cleaner housing removal is not necessary for air filter element replacement.

1. Loosen the air duct clamp (1) at the air cleaner cover and disconnect the air duct (2).
2. Remove the make up air hose (3) at the air cleaner cover.
3. Release the 2 spring clips (4) from the air cleaner cover.
4. Remove the air cleaner cover from the housing assembly.
5. Remove the air filter element from the housing assembly.

Installation

INSTALLATION

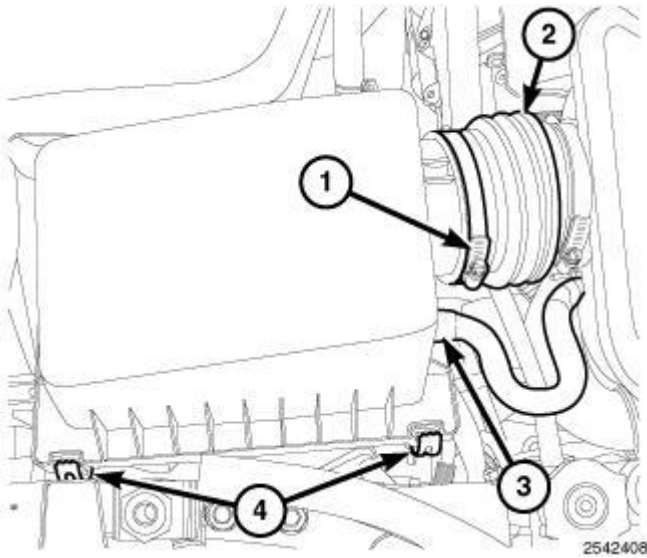


Fig. 58: Air Duct Clamp At Air Cleaner Cover
 Courtesy of CHRYSLER LLC

NOTE: Clean the inside of air cleaner housing before replacing the air filter element.

1. Install the air filter element into the housing assembly.
2. Position the air cleaner cover onto the housing assembly locating tabs.
3. Latch the 2 spring clips (4) and lock the air cleaner cover to the housing assembly.
4. Connect the make up air hose (3) to the air cleaner cover.
5. Connect the air duct (2) to the air cleaner cover and tighten the air duct clamp (1) to 5 N.m (45 in. lbs.).

BODY, AIR CLEANER

Removal

REMOVAL

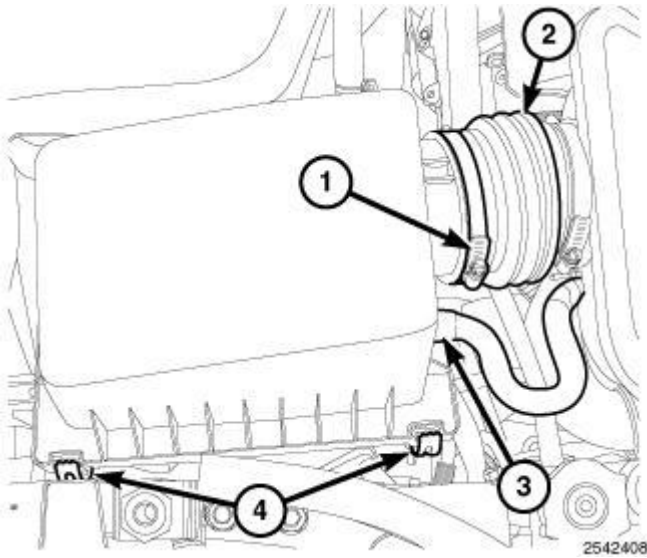


Fig. 59: Air Duct Clamp At Air Cleaner Cover
Courtesy of CHRYSLER LLC

1. Loosen the air duct clamp (1) at the air cleaner cover and disconnect the air duct (2).
2. Remove the make up air hose (3) at the air cleaner cover.
3. Release the 2 spring clips (4) from the air cleaner cover.
4. Remove the air cleaner cover from the housing assembly.
5. Remove the air filter element from the housing assembly.


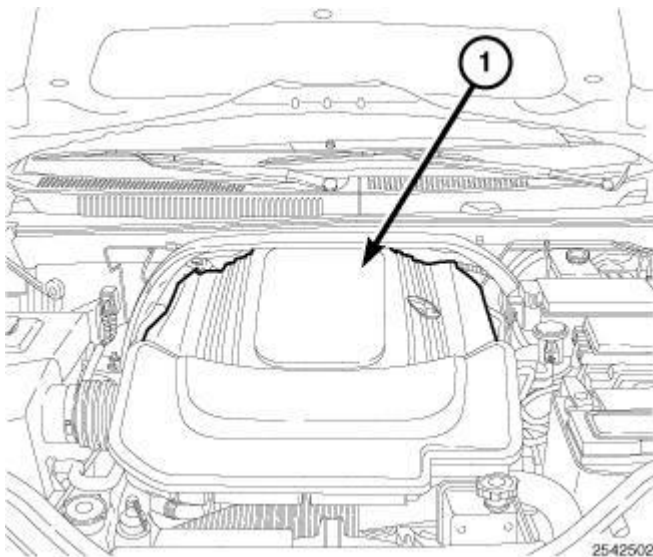


Fig. 60: Engine Cover
Courtesy of CHRYSLER LLC

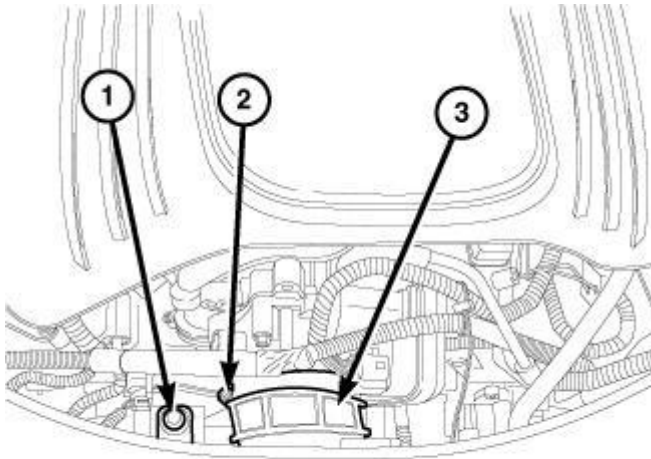
6. Lift and separate the engine cover retaining grommets from the ball studs and position the engine cover (1) aside.



2542517

Fig. 61: Air Cleaner Resonator Air Duct Clamp
Courtesy of CHRYSLER LLC

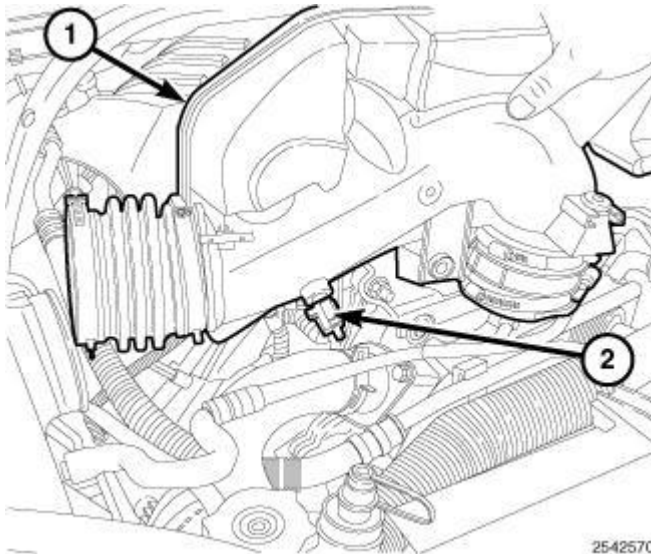
7. Remove the air cleaner resonator retaining bolt (1).
8. Loosen the air cleaner resonator air duct clamp (2) at the throttle body and disconnect the air duct (3).



2542570

Fig. 62: Air Cleaner Resonator
Courtesy of CHRYSLER LLC

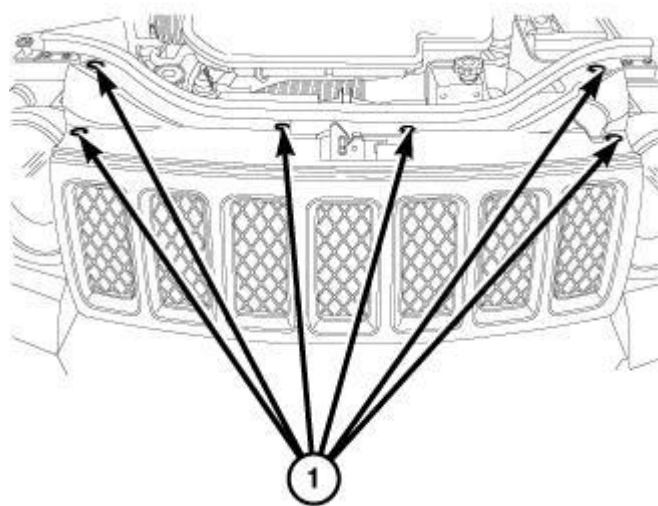
9. Carefully raise the air cleaner resonator (1) and disconnect the electrical connector at the Intake Air Temperature (IAT) sensor (2).
10. Remove the air cleaner resonator (1).



2542623

Fig. 63: Retaining Push Pins At Grille
Courtesy of CHRYSLER LLC

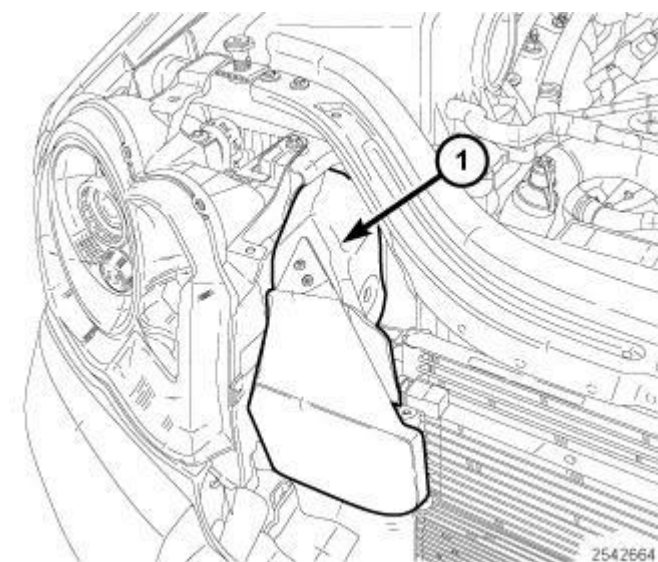11. Remove the 6 retaining push pins (1), tilt the grille forward and remove the grille.



2542664

Fig. 64: Housing Assembly Clean Air Tube
Courtesy of CHRYSLER LLC

12. Remove the housing assembly clean air tube (1).

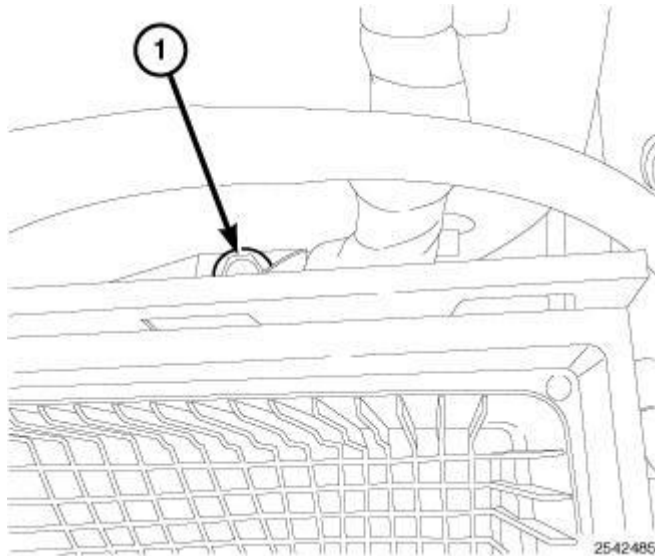


Fig. 65: Housing Assembly Retaining Bolt
Courtesy of CHRYSLER LLC

13. Remove the housing assembly retaining bolt (1) located at the back side of the housing near the strut tower.

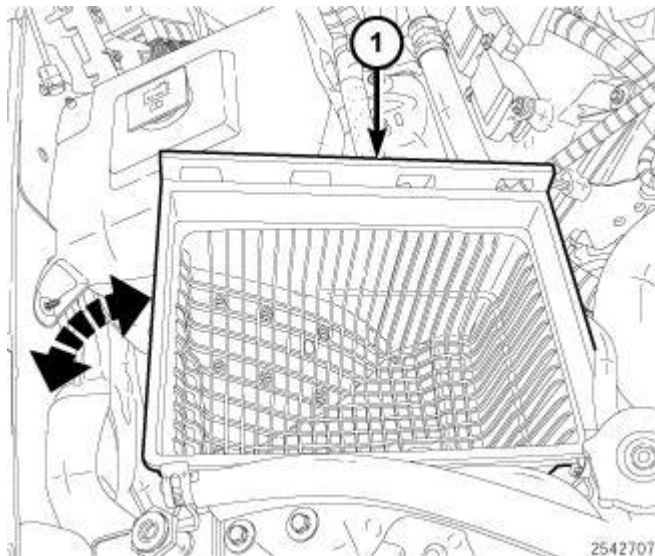


Fig. 66: Lifting Housing Assembly While Rotating Up Toward Engine
Courtesy of CHRYSLER LLC

14. Lift the housing assembly (1) while rotating up toward the engine and remove the housing.

Installation

INSTALLATION

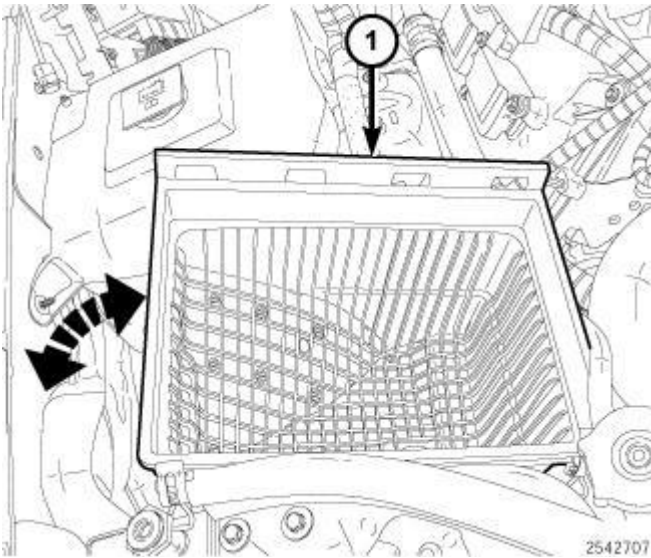


Fig. 67: Lifting Housing Assembly While Rotating Up Toward Engine
Courtesy of CHRYSLER LLC

1. Tilt the housing assembly (1) in the direction of the engine, lower and rotate toward the fender into position.

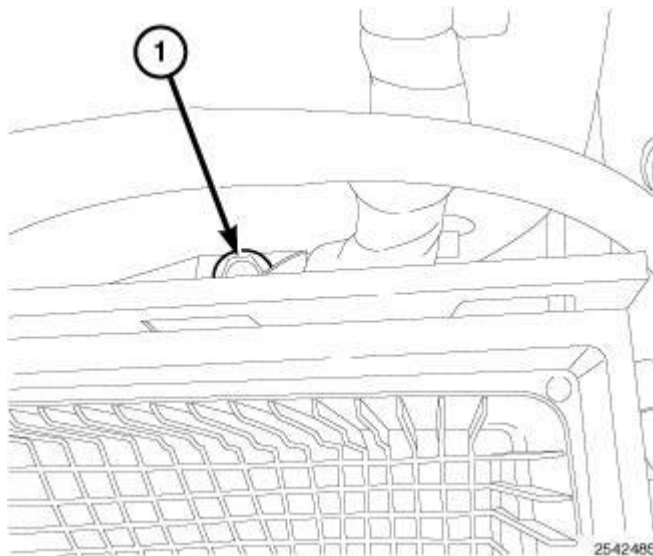


Fig. 68: Housing Assembly Retaining Bolt
Courtesy of CHRYSLER LLC

2. Install the housing assembly retaining bolt (1) located at the back side of the housing near the strut tower and tighten to 5 N.m (45 in. lbs.).

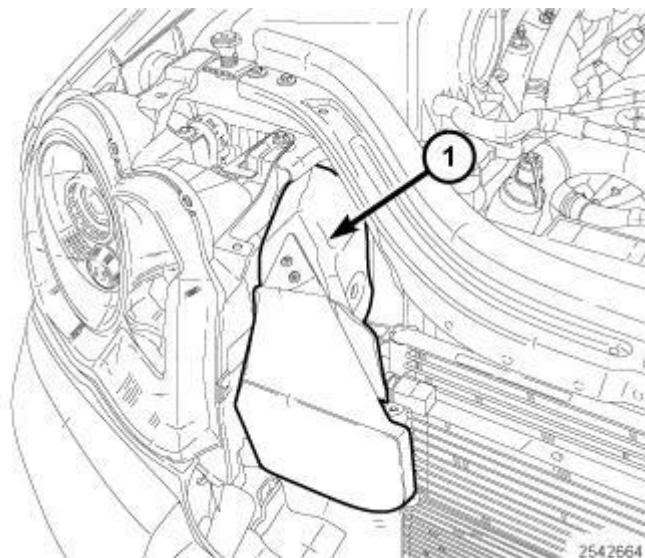


Fig. 69: Housing Assembly Clean Air Tube
Courtesy of CHRYSLER LLC

3. Install the housing assembly clean air tube (1).

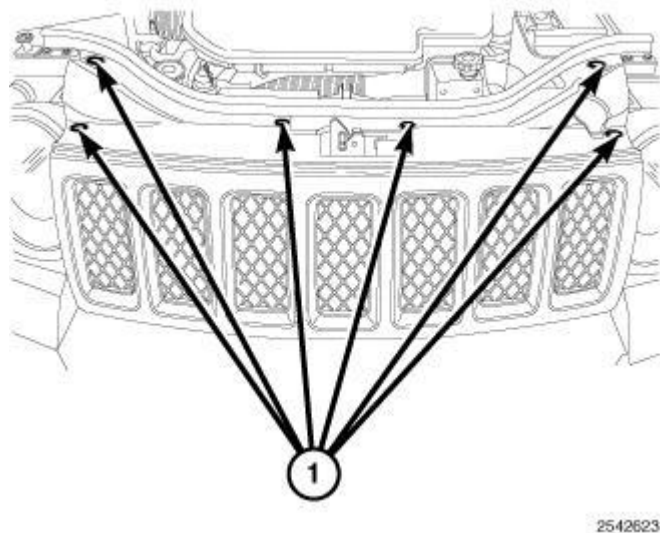


Fig. 70: Retaining Push Pins At Grille
Courtesy of CHRYSLER LLC

4. Position the grille into the lower locating tabs, tilt the grille back and install the 6 retaining push pins (1).

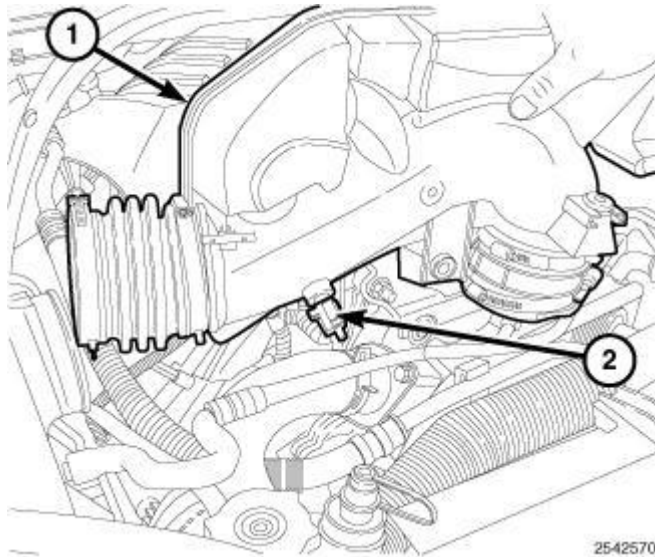


Fig. 71: Air Cleaner Resonator
Courtesy of CHRYSLER LLC

5. Carefully position the air cleaner resonator (1) and connect the electrical connector at the Intake Air Temperature (IAT) sensor (2).
6. Lower the air cleaner resonator (1) into position.

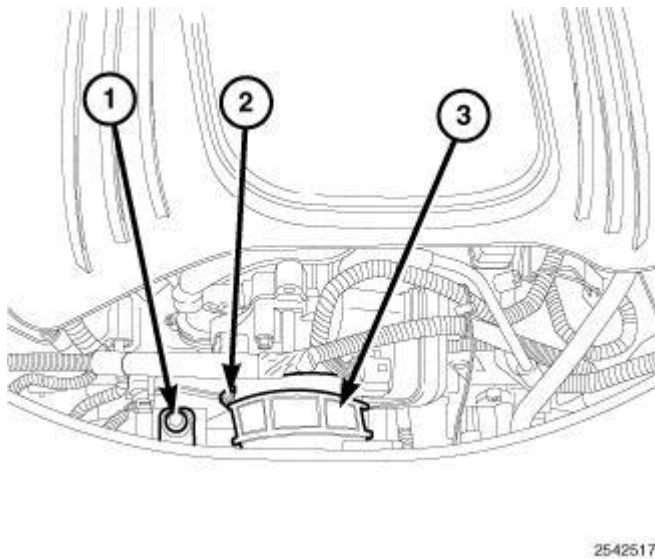


Fig. 72: Air Cleaner Resonator Air Duct Clamp
Courtesy of CHRYSLER LLC

7. Connect the air cleaner resonator air duct (3) onto the throttle body and tighten the air duct clamp (2) to 5 N.m (45 in. lbs.).
8. Install the air cleaner resonator retaining bolt (1) and tighten to 5 N.m (45 in. lbs.).

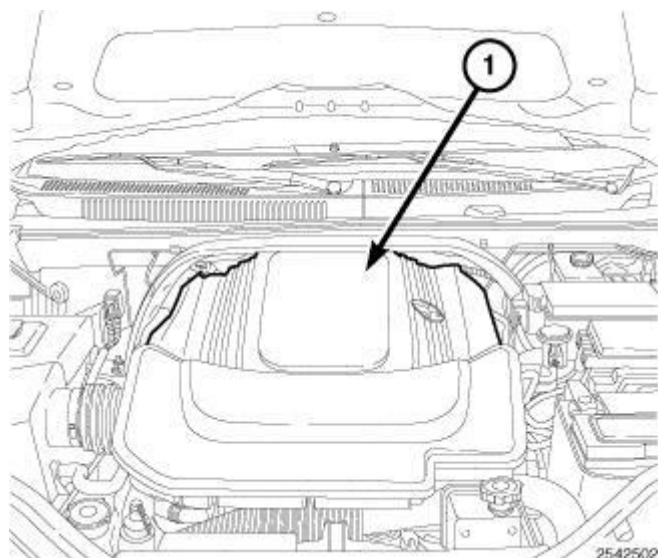


Fig. 73: Engine Cover
Courtesy of CHRYSLER LLC

9. Position the engine cover (1) and secure the retaining grommets to the ball studs.

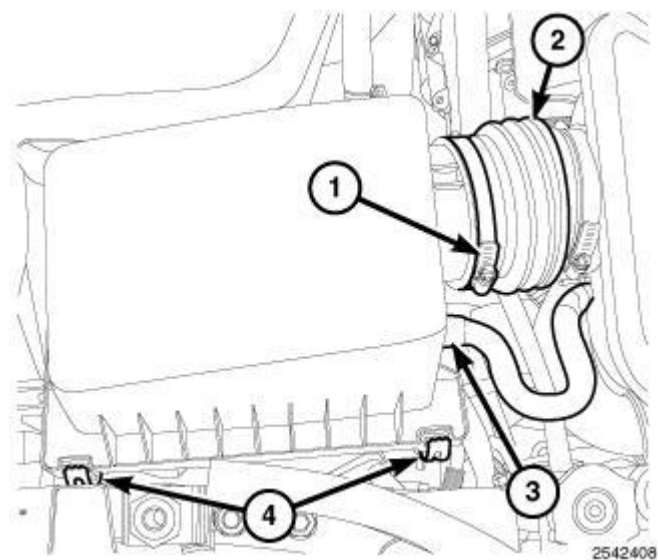


Fig. 74: Air Duct Clamp At Air Cleaner Cover
Courtesy of CHRYSLER LLC

NOTE: Clean the inside of air cleaner housing before replacing the air filter element.

10. Install the air filter element into the housing assembly.
11. Position the air cleaner cover onto the housing assembly locating tabs.
12. Latch the 2 spring clips (4) and lock the air cleaner cover to the housing assembly.
13. Connect the make up air hose (3) to the air cleaner cover.

14. Connect the air duct (2) to the air cleaner cover and tighten the air duct clamp (1) to 5 N.m (45 in. lbs.).

CYLINDER HEAD

OPERATION

CYLINDER HEAD

The cylinder head closes the combustion chamber allowing the pistons to compress the air fuel mixture to the correct ratio for ignition. The valves located in the cylinder head open and close to either allow clean air into the combustion chamber or to allow the exhaust gases out, depending on the stroke of the engine.

DIAGNOSIS AND TESTING

CYLINDER HEAD GASKET FAILURE

A cylinder head gasket leak can be located between adjacent cylinders or between a cylinder and the adjacent water jacket.

- Possible indications of the cylinder head gasket leaking between adjacent cylinders are:
 - Loss of engine power
 - Engine misfiring
 - Poor fuel economy
- Possible indications of the cylinder head gasket leaking between a cylinder and an adjacent water jacket are:
 - Engine overheating
 - Loss of coolant
 - Excessive steam (white smoke) emitting from exhaust
 - Coolant foaming

CYLINDER-TO-CYLINDER LEAKAGE TEST

To determine if an engine cylinder head gasket is leaking between adjacent cylinders, follow the procedures in the **CYLINDER COMPRESSION PRESSURE LEAKAGE**. An engine cylinder head gasket leaking between adjacent cylinders will result in approximately a 50 - 70% reduction in compression pressure.

CYLINDER-TO-WATER JACKET LEAKAGE TEST

WARNING: Use extreme care when the engine is operating with the coolant pressure cap removed. Failure to follow these instructions may result in possible serious or fatal injury.

VISUAL TEST METHOD

With the engine cool, remove the coolant pressure cap. Start the engine and allow it to warm up until thermostat

opens.

If a large combustion/compression pressure leak exists, bubbles will be visible in the coolant.

COOLING SYSTEM TESTER METHOD

CAUTION: With the cooling system tester in place, pressure builds up fast. Excessive pressure built up by continuous engine operation must be released to a safe pressure point. Never permit pressure to exceed 138 kPa (20 psi).

Install the Cooling System Tester 7700 or equivalent to pressure cap neck. Start the engine and observe the tester's pressure gauge. If the gauge pulsates with every power stroke of a cylinder a combustion pressure leak is evident.

CHEMICAL TEST METHOD

Combustion leaks into the cooling system can also be checked by using the Bloc-Chek Kit C-3685-A or equivalent. Perform the test following the procedures supplied with the tool kit.

REMOVAL

REMOVAL

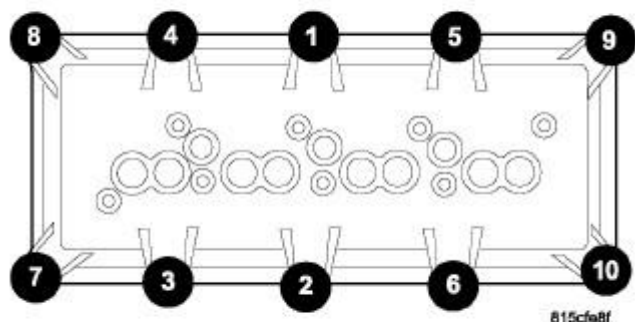


Fig. 75: 5.7L/6.1L COVER TORQUE SEQUENCE

Courtesy of CHRYSLER LLC

1. Perform the Fuel System Pressure Release procedure. Refer to **Fuel System/Fuel Delivery - Standard Procedure** . Disconnect the fuel supply line. Refer to **Fuel System/Fuel Delivery/FITTING, Quick**

Connect - Standard Procedure .

2. Disconnect the battery negative cable.
3. Drain cooling system. Refer to **Cooling - Standard Procedure .**
4. Remove the air cleaner resonator and duct work.
5. Remove closed crankcase ventilation system.
6. Disconnect the exhaust at the exhaust manifolds.
7. Disconnect the evaporation control system.
8. Disconnect heater hoses.
9. Remove the power steering pump.
10. Remove cylinder head cover bolts as shown in **Fig. 75.**

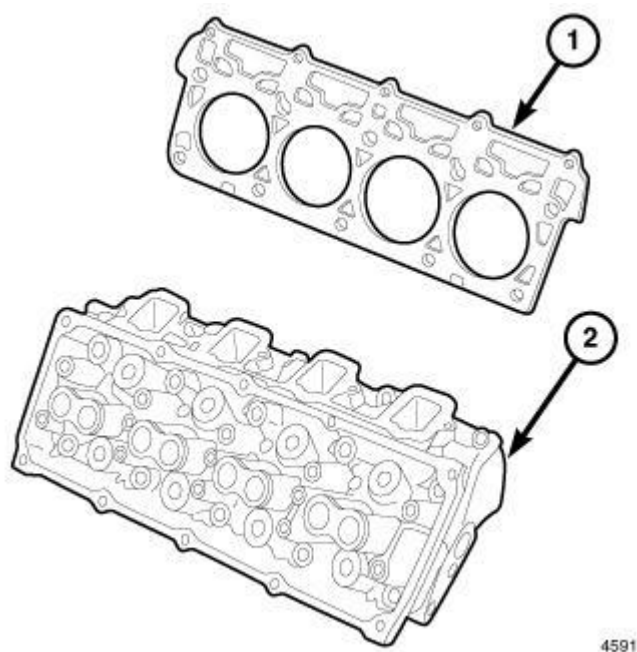


Fig. 76: 5.7L/6.1L CYLINDER HEAD COMPONENTS
Courtesy of CHRYSLER LLC

- | |
|-------------------------|
| 1 - CYLINDER HEAD COVER |
| 2 - GASKET |
| 3 - FASTENERS |
| 4 - CYLINDER HEAD |
| 5 - HEAD GASKET |

11. Remove cylinder head covers (1), using the sequence provided, and gaskets (2). See **Engine/Cylinder Head/COVER(S), Cylinder Head - Removal.**


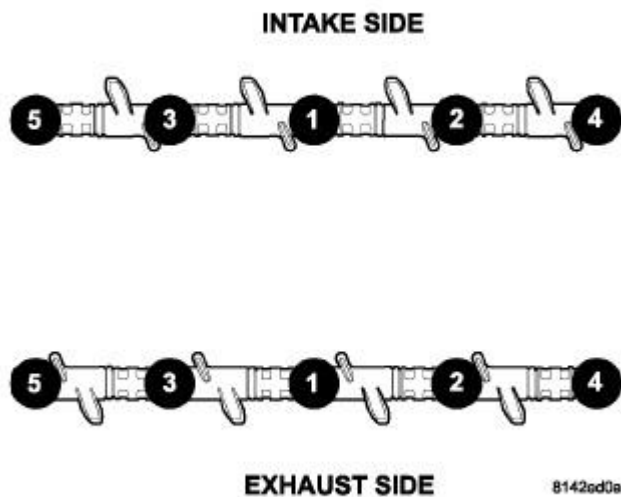


Fig. 77: ROCKER SHAFT TORQUE SEQUENCE

Courtesy of CHRYSLER LLC

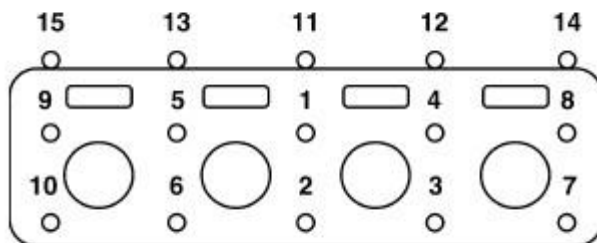12. Remove intake manifold and throttle body as an assembly. See [Engine/Manifolds/MANIFOLD, Intake - Removal](#).
13. Remove rocker arm assemblies and push rods. Identify to ensure installation in original locations. See [Engine/Cylinder Head/ROCKER ARM, Valve - Removal](#).



8100fa03

Fig. 78: CYLINDER HEAD TIGHTENING SEQUENCE**Courtesy of CHRYSLER LLC**

14. Remove the head bolts from each cylinder head, using the sequence provided, and remove cylinder heads. Discard the cylinder head gasket.


CLEANING**CLEANING**

Clean all sealing surfaces of the cylinder block and cylinder heads using Mopar® Brake Parts Cleaner (or equivalent).

INSPECTION**INSPECTION**

1. Inspect the cylinder head for out-of-flatness using a straightedge and a feeler gauge. If tolerances exceed 0.0508 mm (0.002 in.) replace the cylinder head.
2. Inspect the valve seats for damage. Service the valve seats as necessary.
3. Inspect the valve guides for wear, cracks or looseness. If either condition exist, replace the cylinder head.
4. Inspect the pushrods. Replace worn or bent pushrods.

INSTALLATION**INSTALLATION**

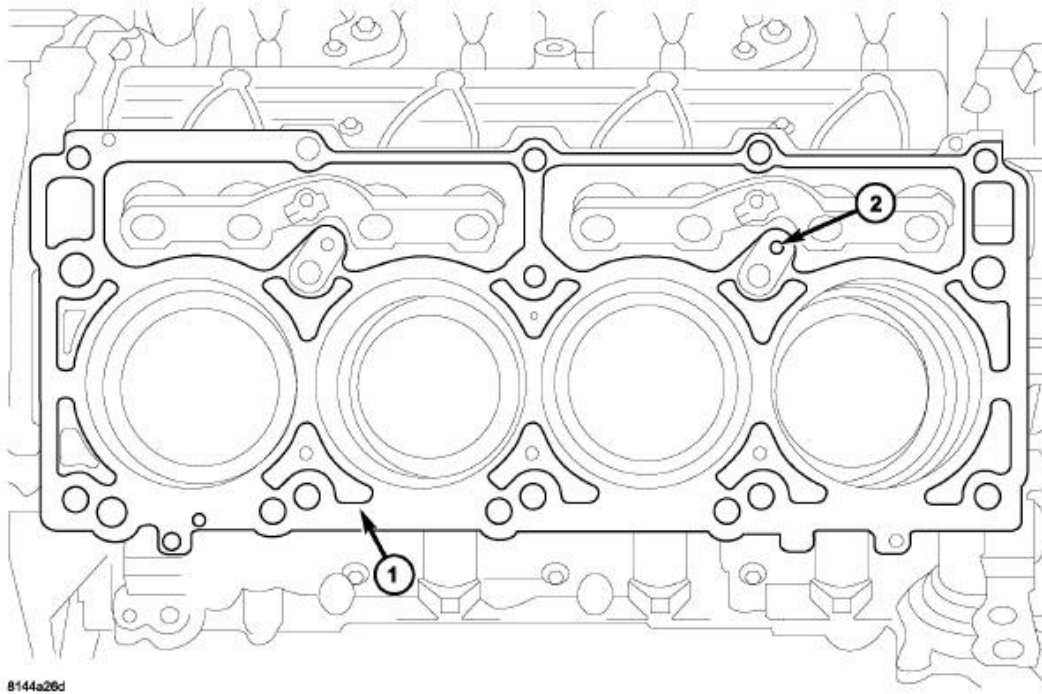**Fig. 79: HEAD GASKET INSTALLATION**

Courtesy of CHRYSLER LLC

- | |
|----------------------------------|
| 1 - HEAD GASKET
2 - OIL HOLES |
|----------------------------------|

1. Clean all surfaces of cylinder block and cylinder heads.
2. Clean cylinder block front and rear gasket surfaces using a suitable solvent.

CAUTION: The cylinder head gaskets are not interchangeable between the left and right sides. They are marked with an "L" and "R" to indicate the left or right side and they are marked "TOP" to indicate which side goes up.

CAUTION: The head gaskets are marked "TOP" to indicate which side goes up.


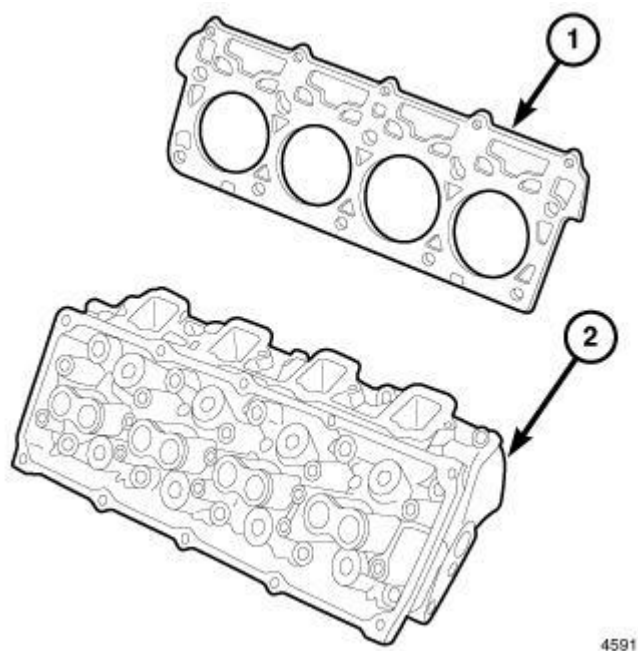


Fig. 80: 5.7L/6.1L CYLINDER HEAD COMPONENTS

Courtesy of CHRYSLER LLC

- | |
|--|
| 1 - CYLINDER HEAD COVER
2 - GASKET
3 - FASTENERS
4 - CYLINDER HEAD
5 - HEAD GASKET |
|--|

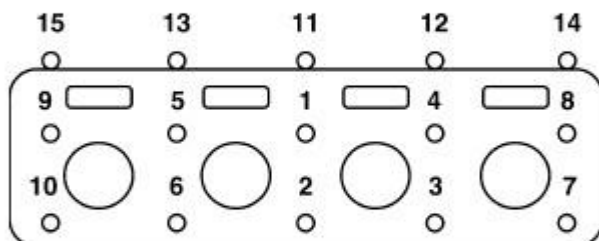3. Position new cylinder head gaskets (5) onto the cylinder block.
4. Position cylinder heads (4) onto head gaskets (5) and cylinder block.



8100fa03

Fig. 81: CYLINDER HEAD TIGHTENING SEQUENCE

Courtesy of CHRYSLER LLC

5. Tighten the cylinder head bolts in three steps using the sequence provided :

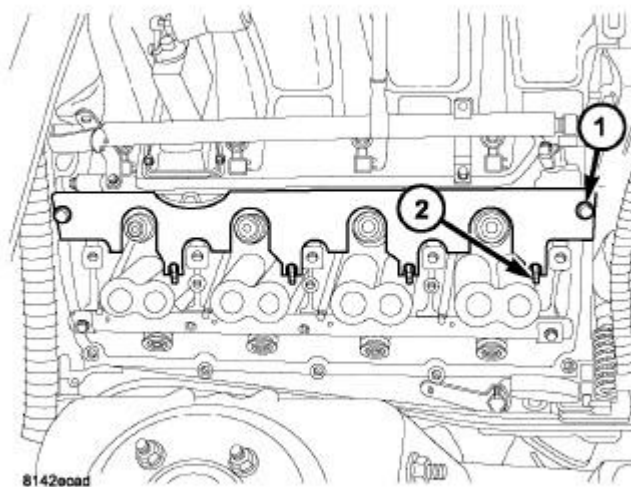


Fig. 82: PUSH ROD RETAINER 9070

Courtesy of CHRYSLER LLC

1 - PUSH ROD RETAINER FASTENER

2 - PUSH ROD RETAINER 9070

- Step 1 - Snug tighten M12 cylinder head bolts, in sequence, to 34 N.m (25 ft. lbs.) and M8 bolts to 20 N.m (15 ft. lbs.).
 - Step 2 - Tighten M12 cylinder head bolts, in sequence, to 54 N.m (40 ft. lbs.) and verify M8 bolts to 20 N.m (15 ft. lbs.).
 - Step 3 - Turn M12 cylinder head bolts, in sequence, 90 degrees and tighten M8 bolts to 34 N.m (25 ft. lbs.).
6. Install push rods and rocker arm assemblies in their original position, using push rod retainer 9070. See **Engine/Cylinder Head/ROCKER ARM, Valve - Installation.**
 7. Install the intake manifold and throttle body assembly. See **Engine/Manifolds/MANIFOLD, Intake - Installation.**
 8. If required, adjust spark plugs to specifications. Install the plugs.
 9. Connect the heater hoses.
 10. Install the fuel supply line.
 11. Install the power steering pump.
 12. Install the drive belt. Refer to **Cooling/Accessory Drive/BELT, Serpentine - Installation .**

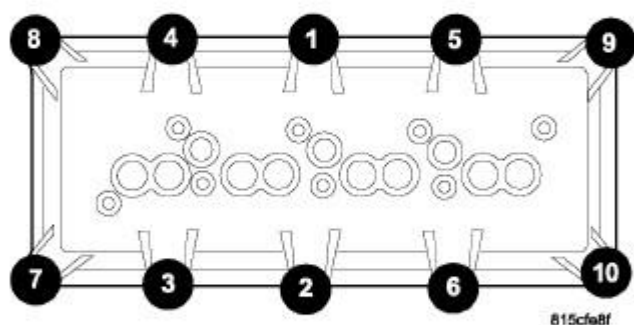


Fig. 83: 5.7L/6.1L COVER TORQUE SEQUENCE

Courtesy of CHRYSLER LLC

13. Install cylinder head covers (1). See **Engine/Cylinder Head/COVER(S), Cylinder Head - Installation.**
14. Connect the evaporation control system.
15. Install the air cleaner.

16. Fill cooling system. Refer to **Cooling - Standard Procedure** .
17. Connect the negative cable to the battery.
18. Start engine check for leaks.

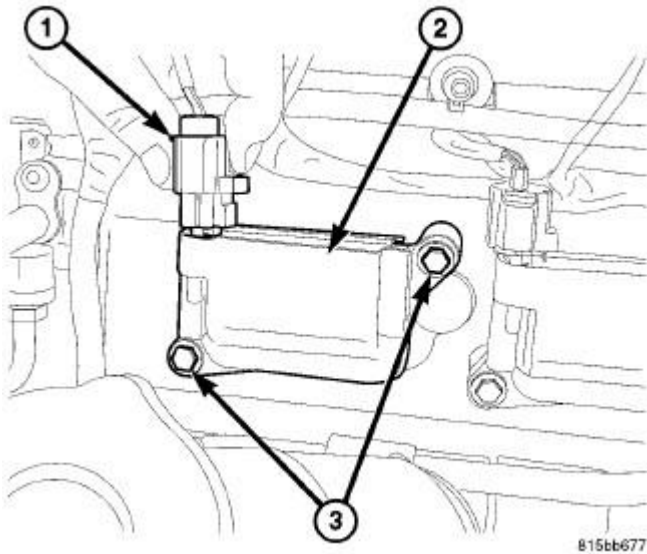
COVER(S), CYLINDER HEAD**Removal****REMOVAL**

Fig. 84: IGNITION COIL MOUNTING BOLTS - 5.7L/6.1L
Courtesy of CHRYSLER LLC

1. Disconnect negative battery cable.
2. Disconnect ignition coil connector (1).
3. Remove ignition coil retaining bolts (3).

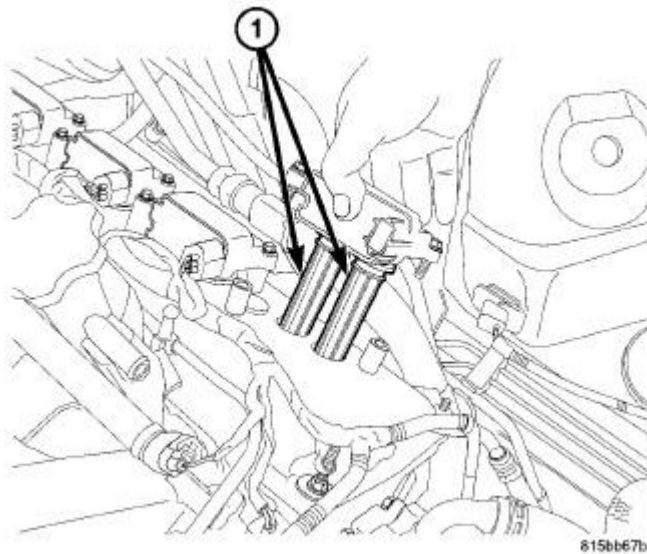


Fig. 85: Removing/Installing Ignition Coil
Courtesy of CHRYSLER LLC

4. Remove ignition coil (1).

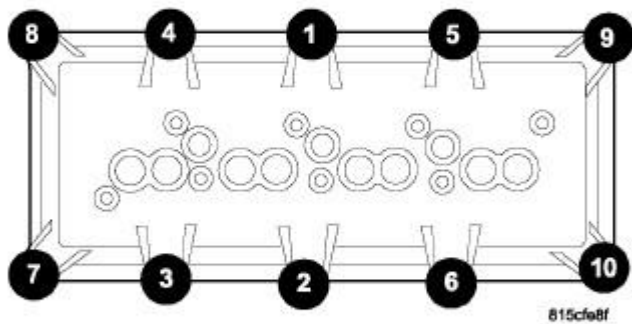


Fig. 86: 5.7L/6.1L COVER TORQUE SEQUENCE
Courtesy of CHRYSLER LLC

5. Remove cylinder head cover retaining bolts.

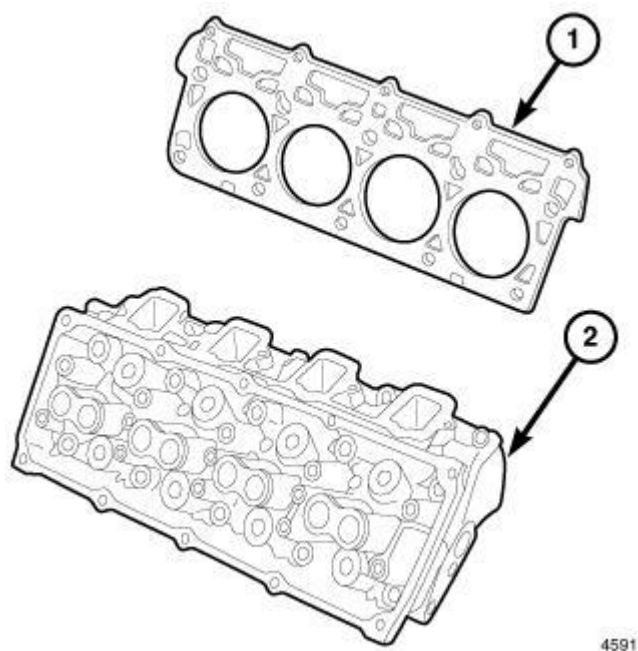


Fig. 87: 5.7L/6.1L CYLINDER HEAD COMPONENTS

Courtesy of CHRYSLER LLC

6. Remove cylinder head cover (1).

NOTE: The gasket (2) may be used again, provided no cuts, tears, or deformation have occurred.

Installation

INSTALLATION

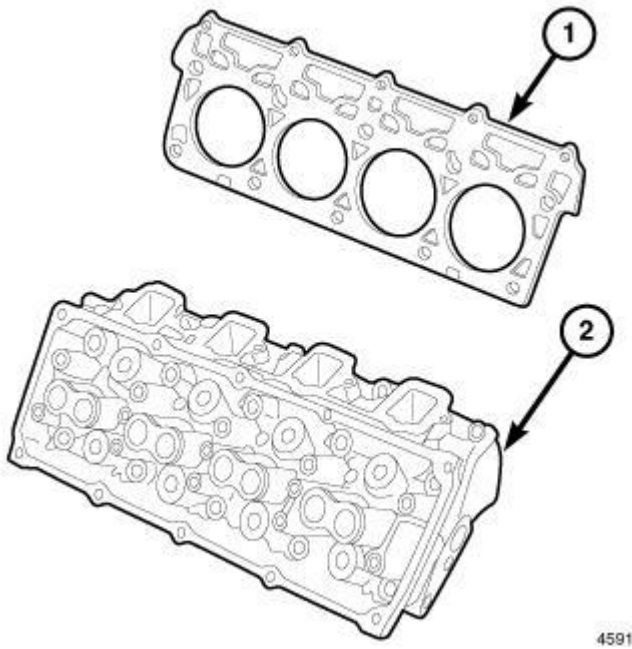


Fig. 88: 5.7L/6.1L CYLINDER HEAD COMPONENTS

Courtesy of CHRYSLER LLC

CAUTION: Do not use harsh cleaners to clean the cylinder head covers. Severe damage to covers may occur.

CAUTION: Do not allow other components including the wire harness to rest on or against the engine cylinder head cover. Prolonged contact with other objects may wear a hole in the cylinder head cover.

1. Clean cylinder head cover (1) and both sealing surface (4). Inspect and replace gasket (2) as necessary.
2. Install cylinder head cover and hand start all fasteners. Verify that all double ended studs (3) are in the correct location.

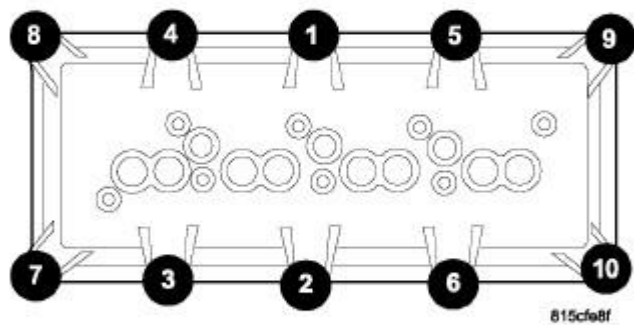


Fig. 89: 5.7/6.1L COVER TORQUE SEQUENCE

Courtesy of CHRYSLER LLC

3. Tighten cylinder head cover bolts and double ended studs to 8 N.m (70 in. lbs.) in the sequence shown in **Fig. 89**.

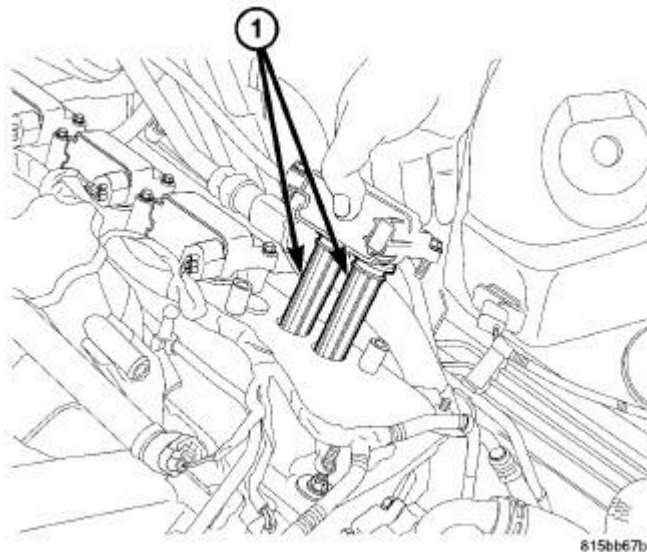


Fig. 90: Removing/Installing Ignition Coil

Courtesy of CHRYSLER LLC

4. Before installing coil(s), apply dielectric grease to inside of spark plug boots (1).
5. Install ignition coils.

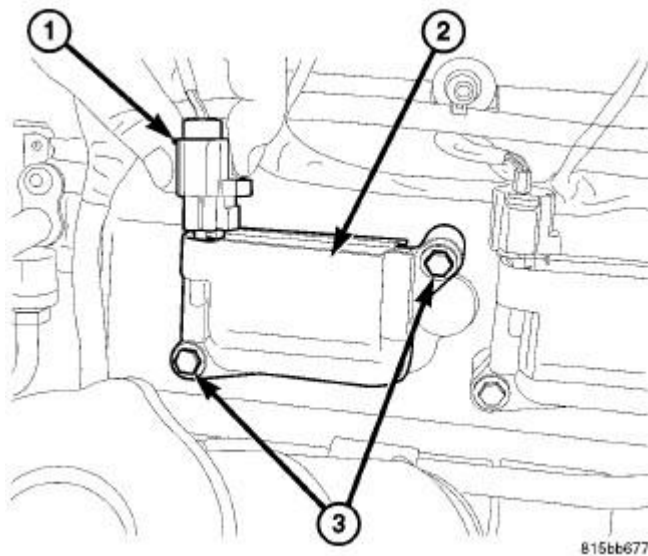


Fig. 91: IGNITION COIL MOUNTING BOLTS - 5.7L/6.1L
Courtesy of CHRYSLER LLC

6. Tighten fasteners (3) to 7 N.m (62 in. lbs.).
7. Connect ignition coil electrical connectors (1).
8. Install PCV hose.
9. Install the engine cover.
10. Connect the negative battery cable.

ROCKER ARM, VALVE

Removal

REMOVAL

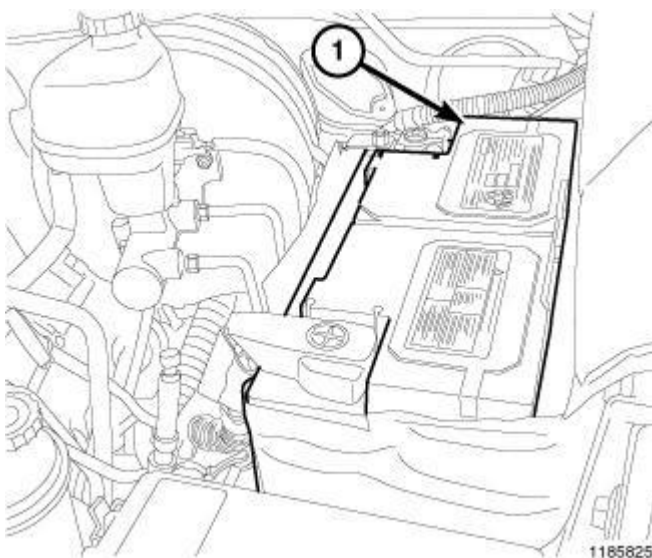


Fig. 92: Battery

Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable (1).
2. Remove the engine cover.

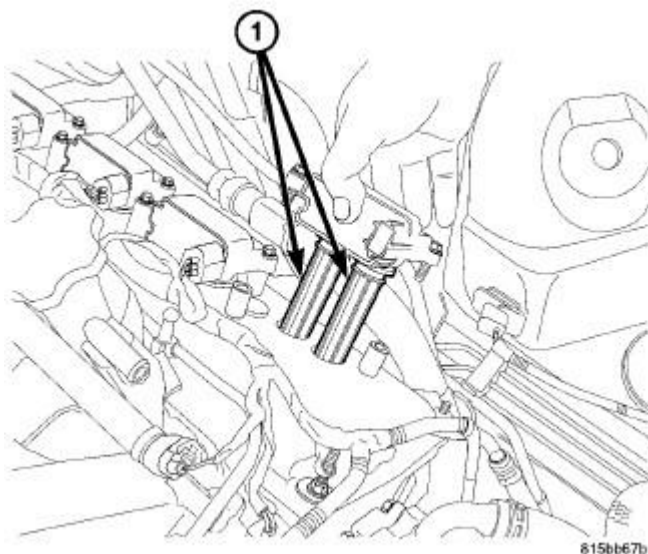


Fig. 93: Removing/Installing Ignition Coil

Courtesy of CHRYSLER LLC

3. Remove the ignition coils (1). Refer to **Electrical/Ignition Control/COIL, Ignition - Removal** .

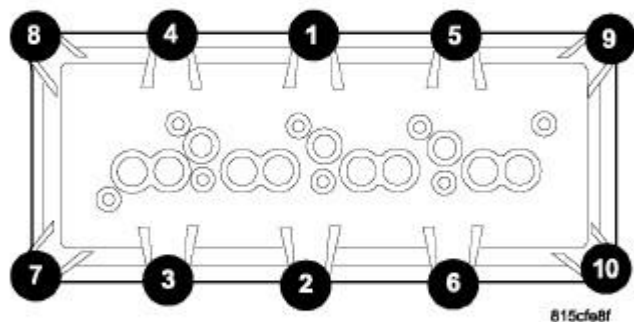


Fig. 94: 5.7L/6.1L COVER TORQUE SEQUENCE

Courtesy of CHRYSLER LLC

4. Using the sequence shown in **Fig. 94**, remove the cylinder head cover. See **Engine/Cylinder Head/COVER(S), Cylinder Head - Removal**.

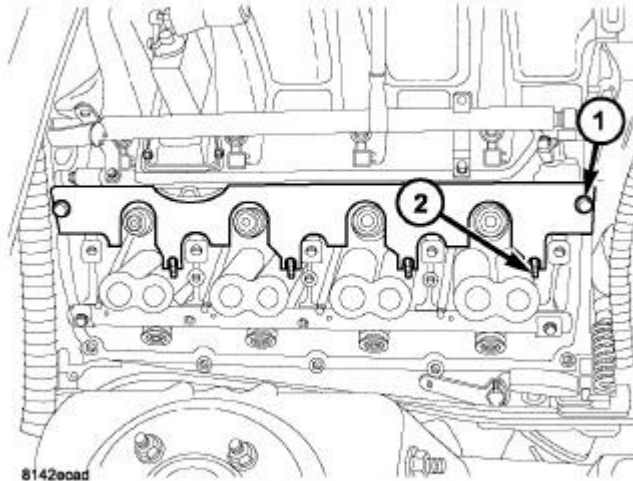


Fig. 95: PUSH ROD RETAINER 9070

Courtesy of CHRYSLER LLC

5. Install the pushrod retainer 9070 (1).

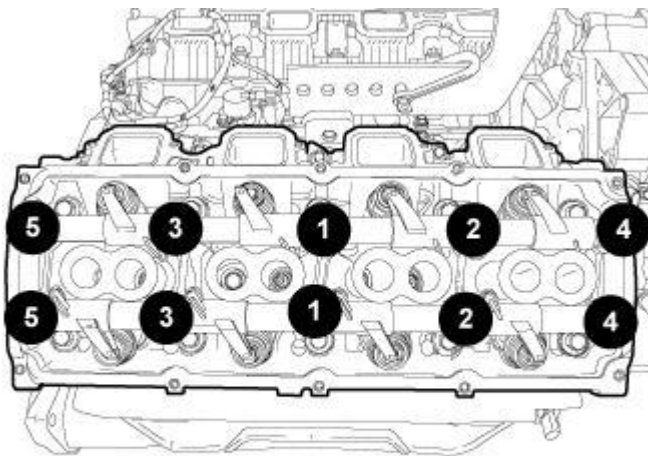


Fig. 96: Rocker Shafts Retaining Bolt Removal & Tightening Sequence

Courtesy of CHRYSLER LLC

6. Using the sequence shown in **Fig. 96**, loosen the rocker shafts retaining bolts.

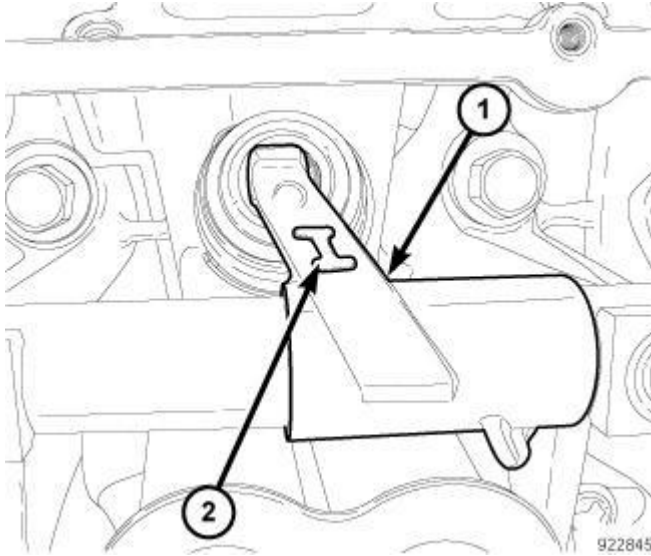


Fig. 97: Intake Rocker Arm Marking
Courtesy of CHRYSLER LLC

CAUTION: The rocker shaft assemblies are not interchangeable between the intake and the exhaust, failure to install them in the correct location could result in engine damage. The intake rocker arms (1) are marked with the letter "I" (2).

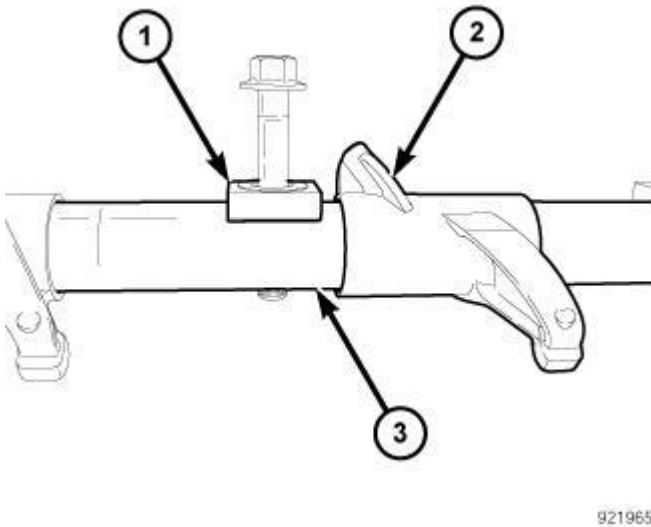


Fig. 98: Rocker Shaft Retainers
Courtesy of CHRYSLER LLC

CAUTION: Do not remove the retainers (1) from the rocker shaft (3).

7. Remove the rocker shaft (3). Note the rocker shaft location during removal.

CAUTION: The longer pushrods are for the exhaust side and the shorter pushrods are for the intake side.

8. Remove the pushrods. Note the pushrod location during removal.

Installation

INSTALLATION


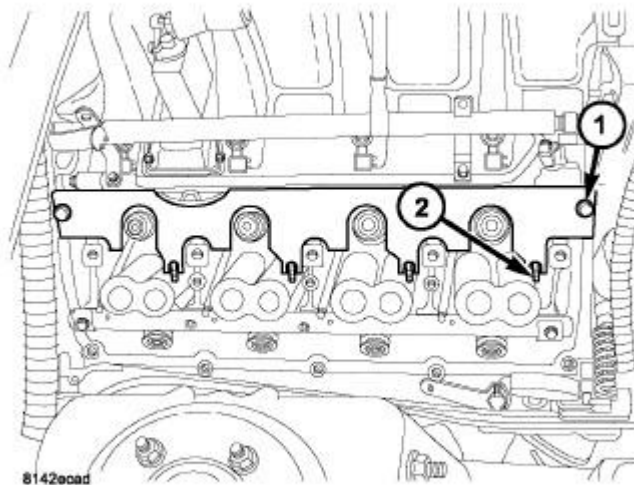


Fig. 99: PUSH ROD RETAINER 9070

Courtesy of CHRYSLER LLC

CAUTION: The longer pushrods are for the exhaust side and the shorter pushrods are for the intake side.

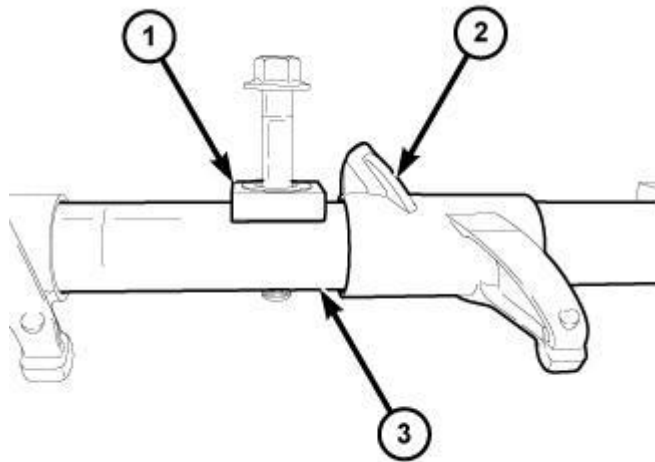1. Install the pushrods in the same order as removed.
2. Install the pushrod retainer 9070 (1).




921965

Fig. 100: Rocker Shaft Retainers

Courtesy of CHRYSLER LLC

CAUTION: Make sure that the retainers (1) and the rocker arms (2) are not overlapped when tightening bolts or engine damage could result.

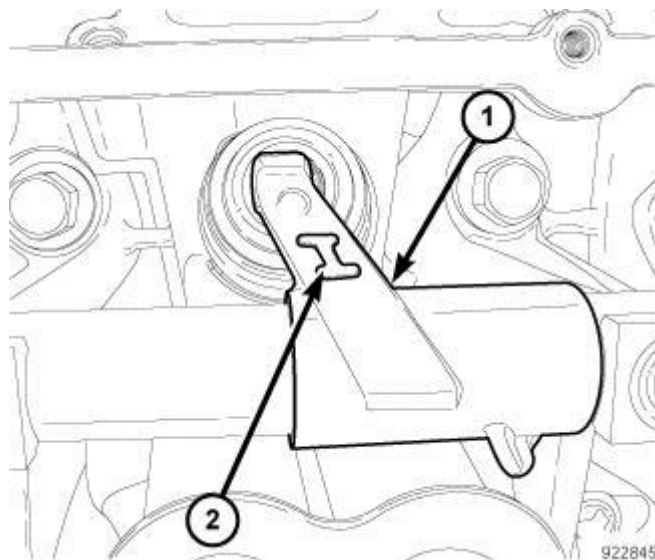CAUTION: Due to the changes in the pushrod clearance holes in the Eagle 5.7L cylinder heads, close attention must be given when installing the pushrod(s) into the tappet(s). Once the pushrod(s) have been installed, use a suitable light to look down through the pushrod hole(s). This will allow you to verify the pushrod(s) are centered properly in the tappet(s) and avoid engine damage. Recheck after the rocker shaft assembly has been installed and tightened to specification.




922845

Fig. 101: Intake Rocker Arm Marking

Courtesy of CHRYSLER LLC

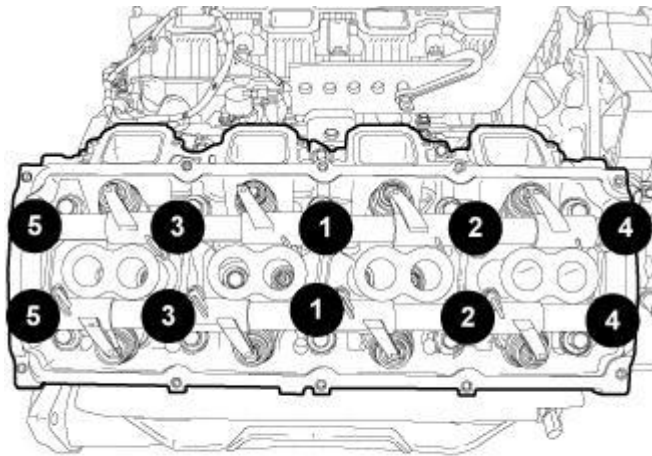CAUTION: The rocker shaft assemblies are not interchangeable between the intake and the exhaust, failure to install them in the correct location could result in engine damage. The intake rocker arms (1) are marked with the letter "I" (2).



921225

Fig. 102: Rocker Shafts Retaining Bolt Removal & Tightening Sequence

Courtesy of CHRYSLER LLC

3. Install the rocker shaft assemblies in the same order as removed.
4. Using the sequence shown in **Fig. 102**, tighten the rocker shaft bolts to 22 N.m (16 ft. lbs.).

CAUTION: Do Not rotate or crank the engine during or immediately after rocker arm installation. Allow the hydraulic roller tappets adequate time to bleed down (about five minutes).

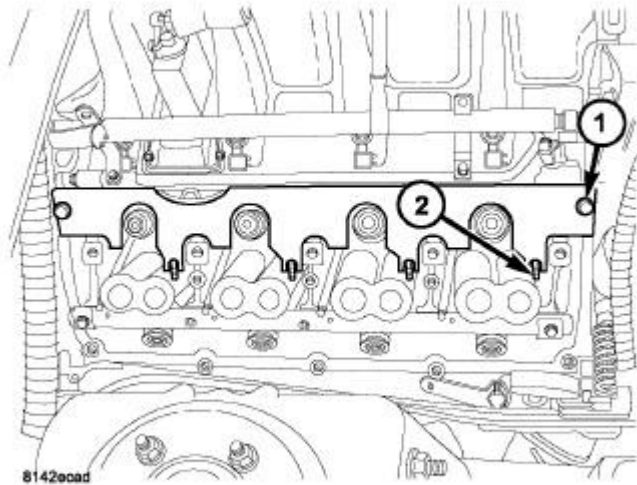


Fig. 103: PUSH ROD RETAINER 9070

Courtesy of CHRYSLER LLC

5. Remove pushrod retainer 9070 (1).

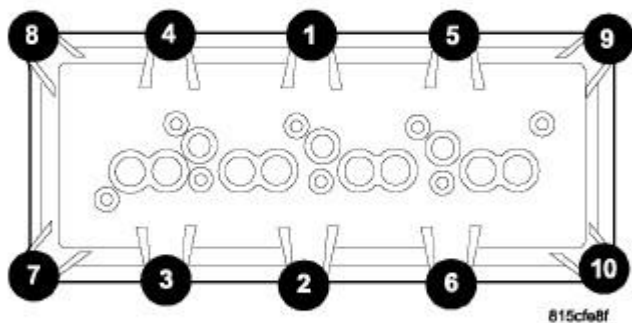


Fig. 104: 5.7L/6.1L COVER TORQUE SEQUENCE

Courtesy of CHRYSLER LLC

6. Using the sequence shown in **Fig. 104**, install the cylinder head cover. See **Engine/Cylinder Head/COVER(S), Cylinder Head - Installation**.

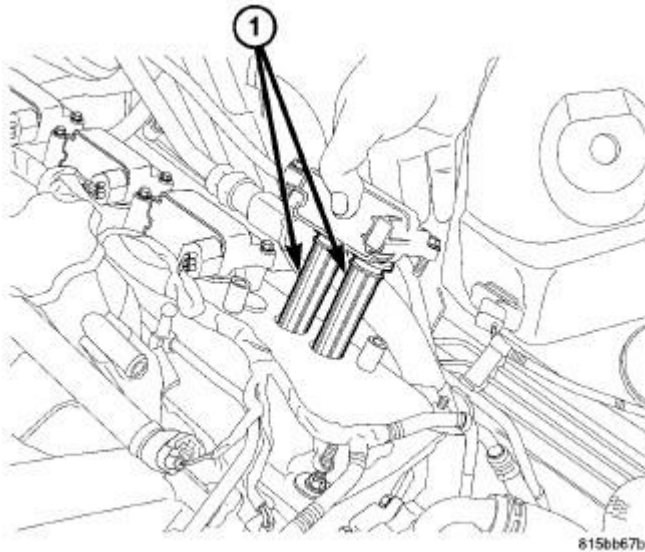


Fig. 105: Removing/Installing Ignition Coil
Courtesy of CHRYSLER LLC

7. Install the ignition coils (1). Refer to **Electrical/Ignition Control/COIL, Ignition - Removal**.
8. Install the engine cover.

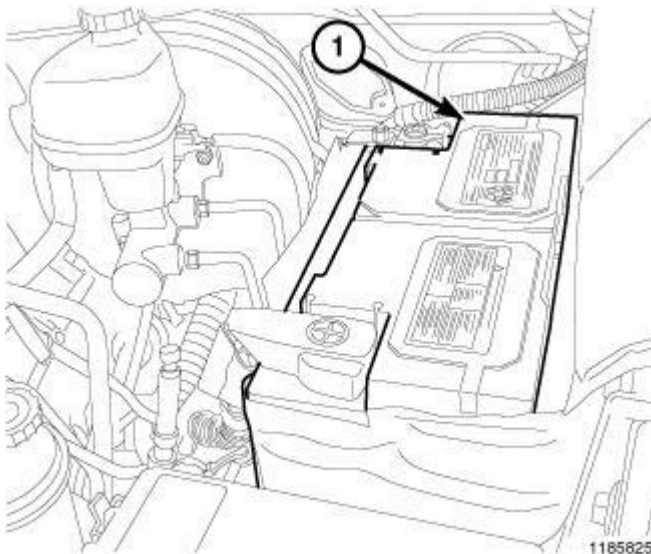


Fig. 106: Battery
Courtesy of CHRYSLER LLC

9. Connect the negative battery cable (1).

SEAL(S), VALVE GUIDE

Description**DESCRIPTION**

The valve guide seals are made of rubber and incorporate an integral steel valve spring seat. The integral garter spring maintains consistent lubrication control to the valve stems.

Removal**REMOVAL**

The valve stem seal is integral with the valve spring seat. For removal, see **Engine/Cylinder Head/SPRING(S), Valve - Removal**.

Installation**INSTALLATION**

The valve stem seal is integral with the valve spring seat. For installation, see **Engine/Cylinder Head/SPRING(S), Valve - Installation**.

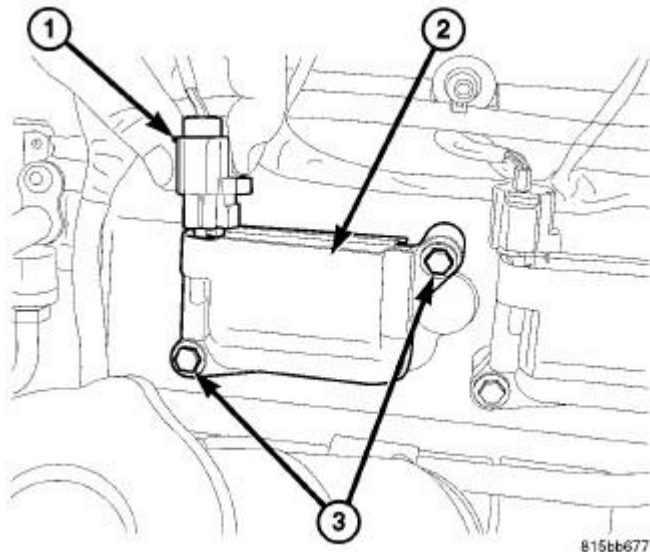
SPRING(S), VALVE**Removal****REMOVAL**

Fig. 107: IGNITION COIL MOUNTING BOLTS - 6.1L
Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.

2. Remove the air cleaner assembly. See Engine/Air Intake System/BODY, Air Cleaner - Removal.
3. Remove the air intake resonator. Refer to REMOVAL.
4. Remove the ignition coil electrical connectors (1).
5. Remove the ignition coils (2).
6. Remove the spark plugs.

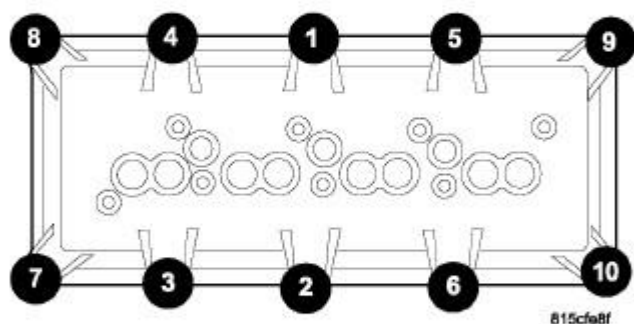


Fig. 108: 5.7/6.1L COVER TORQUE SEQUENCE
Courtesy of CHRYSLER LLC

7. Using the sequence shown in **Fig. 108**, remove the cylinder head cover retaining bolts and remove the cylinder head cover. See Engine/Cylinder Head/COVER(S), Cylinder Head - Removal.

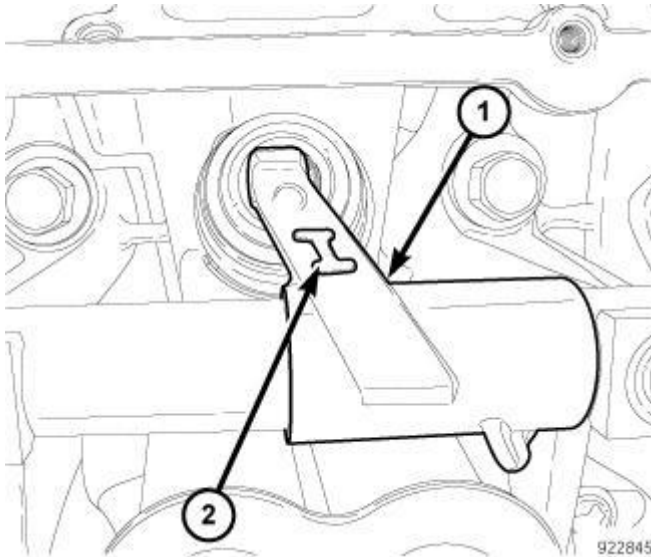


Fig. 109: Intake Rocker Arm Marking
 Courtesy of CHRYSLER LLC

CAUTION: The rocker shaft assemblies are not interchangeable between the intake and the exhaust, failure to install them in the correct location could result in engine damage. The intake rocker arms (1) are marked with the letter "I" (2).

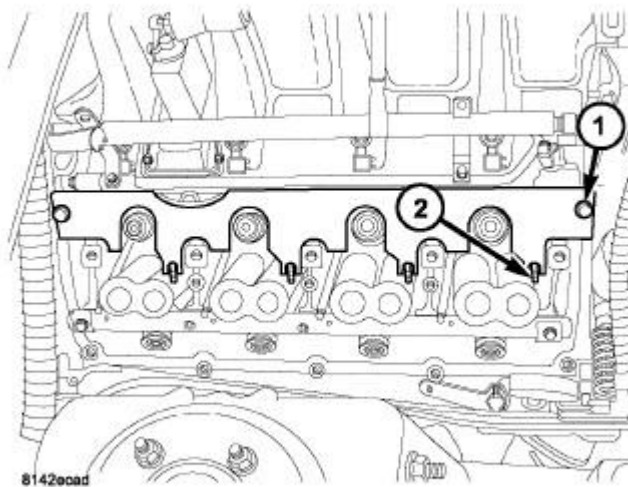


Fig. 110: PUSH ROD RETAINER 9070
 Courtesy of CHRYSLER LLC

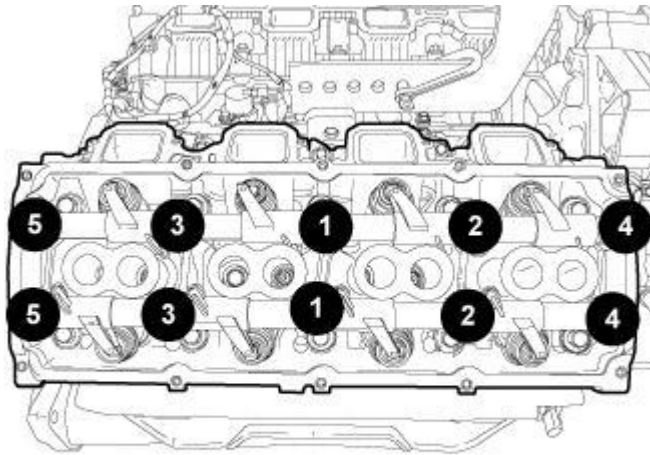
CAUTION: The piston must be at TDC and both valves closed on the cylinder to

be serviced.

CAUTION: The longer pushrods are for the exhaust side and the shorter pushrods are for the intake side.

NOTE: Pushrods must be installed in the same order as removed.

NOTE: If removing the intake valve spring, install the pushrod retainer 9070 (1).



921225

Fig. 111: Rocker Shafts Retaining Bolt Removal & Tightening Sequence
Courtesy of CHRYSLER LLC

8. Using the sequence shown in **Fig. 111**, remove the exhaust/intake rocker arm shaft retaining bolts.

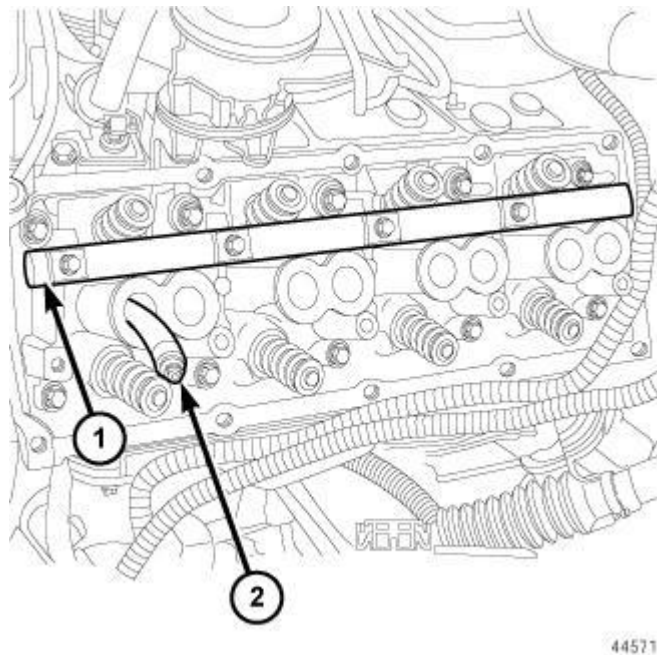


Fig. 112: ROCKER SHAFT
Courtesy of CHRYSLER LLC

NOTE: Tap the top of the valve spring retainer to loosen the spring retainers locks.

9. Install the rocker arm valve spring compressor shaft 9065A (1).
10. Install the spring compressor adapter arm 9065A if needed.
11. Insert an air hose (2) into the spark plug hole and charge the cylinder with air.

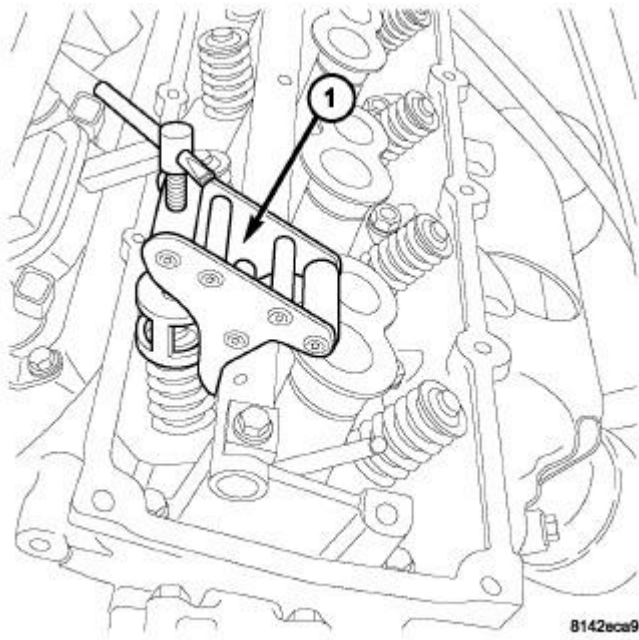


Fig. 113: Removing/Installing Valve Spring Intake
Courtesy of CHRYSLER LLC

NOTE: Tap the top of the valve spring retainer to loosen the spring retainers locks.

12. Compress the valve spring with valve spring compressor (1) and remove the valve retainer locks.
13. Release the spring compressor and remove valve spring.

NOTE: The valve springs are interchangeable between intake and exhaust.

14. Remove the valve seal.

NOTE: All valve springs and seals are removed in the same manner.

Installation

INSTALLATION

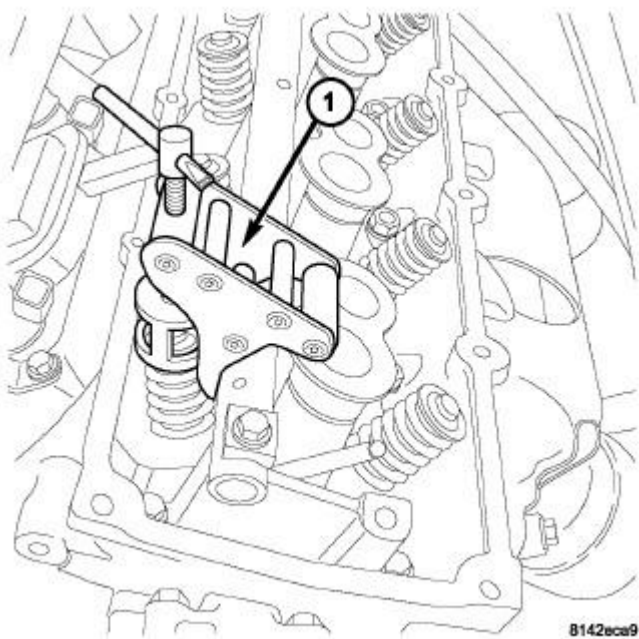


Fig. 114: Removing/Installing Valve Spring Intake
Courtesy of CHRYSLER LLC

1. Install the valve seal.
2. Install the valve spring.
3. Using the valve spring compressor 9065A (1), compress the valve spring and install the valve spring retainer and locks.
4. Remove the spring compressor.
5. Remove the air hose from the spark plug hole.

NOTE: All valve springs and seals are installed in the same manner.

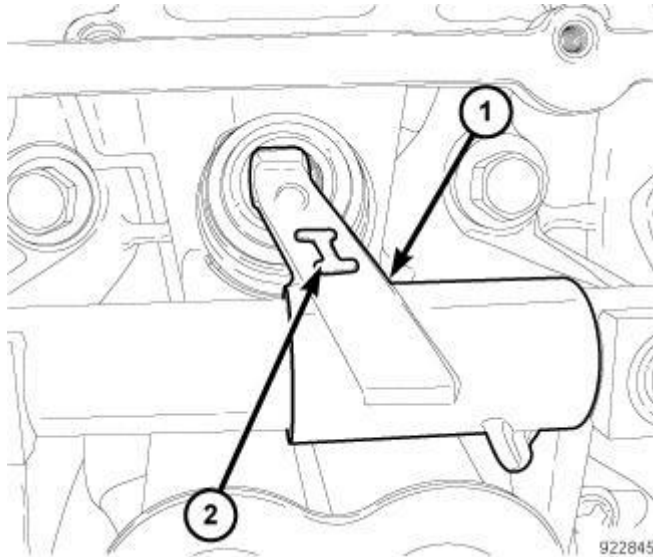


Fig. 115: Intake Rocker Arm Marking
 Courtesy of CHRYSLER LLC

CAUTION: The rocker shaft assemblies are not interchangeable between the intake and the exhaust, failure to install them in the correct location could result in engine damage. The intake rocker arms (1) are marked with the letter "I" (2).


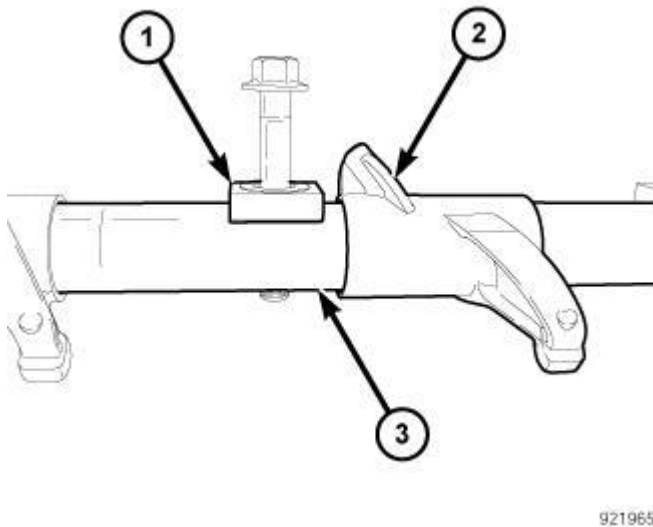


Fig. 116: Rocker Shaft Retainers
 Courtesy of CHRYSLER LLC

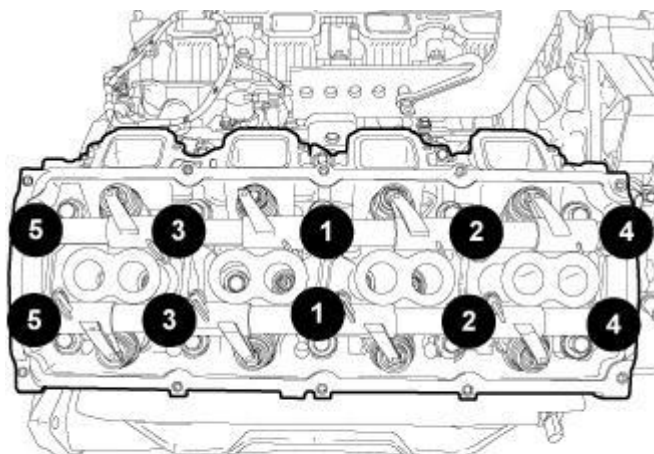CAUTION: Make sure that the retainers (1) and the rocker arms (2) are not overlapped when tightening bolts or engine damage could result.



921225

Fig. 117: Rocker Shafts Retaining Bolt Removal & Tightening Sequence

Courtesy of CHRYSLER LLC

CAUTION: Due to the changes in the pushrod clearance holes in the Eagle 5.7L cylinder heads, close attention must be given when installing the pushrod(s) into the tappet(s). Once the pushrod(s) have been installed, use a suitable light to look down through the pushrod hole(s). This will allow you to verify the pushrod(s) are centered properly in the tappet(s) and avoid engine damage. Recheck after the rocker shaft assembly has been installed and tightened to specification.

CAUTION: The longer pushrods are for the exhaust side and the shorter pushrods are for the intake side.

NOTE: Pushrods must be installed in the same order as removed.

6. Install the rocker arm shaft and pushrods. See Engine/Cylinder Head/ROCKER ARM, Valve - Installation.
7. Using the sequence shown in **Fig. 117**, tighten the rocker shaft bolts to 22 N.m (16 ft. lbs.).

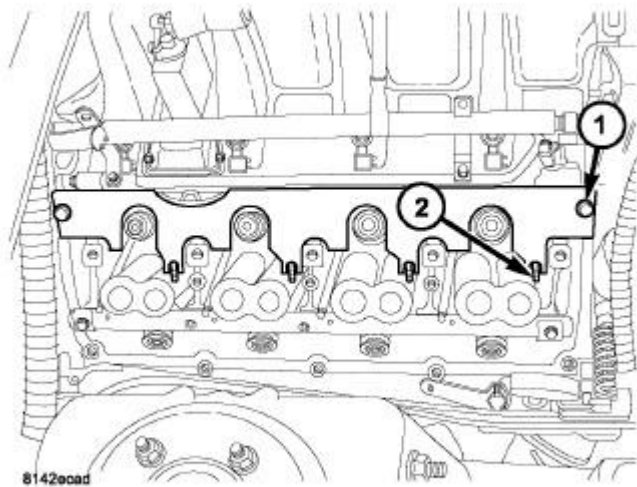


Fig. 118: PUSH ROD RETAINER 9070
Courtesy of CHRYSLER LLC

8. If used, remove the pushrod retainer 9070 (1).

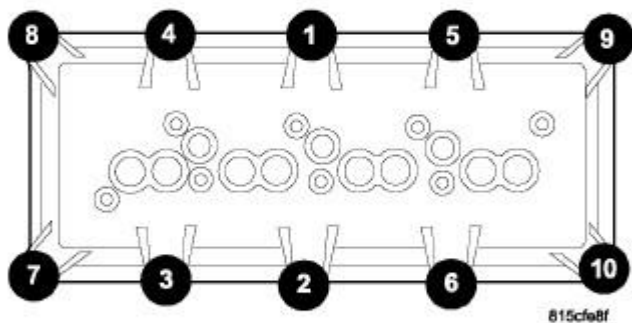


Fig. 119: 5.7/6.1L COVER TORQUE SEQUENCE
Courtesy of CHRYSLER LLC

CAUTION: Do not use harsh cleaners to clean the cylinder head covers. Severe damage to covers may occur.

CAUTION: Do not allow other components including the wire harness to rest on or against the engine cylinder head cover. Prolonged contact with other objects may wear a hole in the cylinder head cover.

9. Clean the cylinder head cover and both sealing surfaces, inspect and replace the gasket as necessary.
10. Install the cylinder head cover and hand start all fasteners. Verify that all double ended studs are in the correct location.
11. Using the sequence shown in **Fig. 119**, tighten the cylinder head cover retaining bolts to 8 N.m (71 in. lbs.).
12. Install the spark plugs.

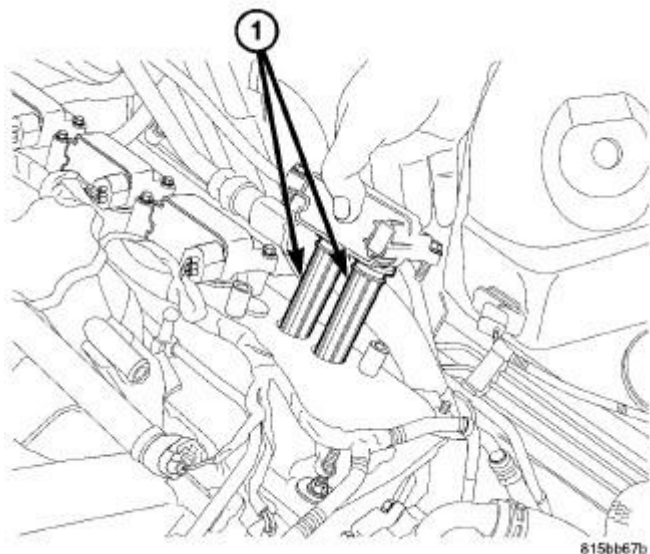


Fig. 120: Removing/Installing Ignition Coil
Courtesy of CHRYSLER LLC

13. Before installing the ignition coils, apply dielectric grease to the inside of the spark plug boots.

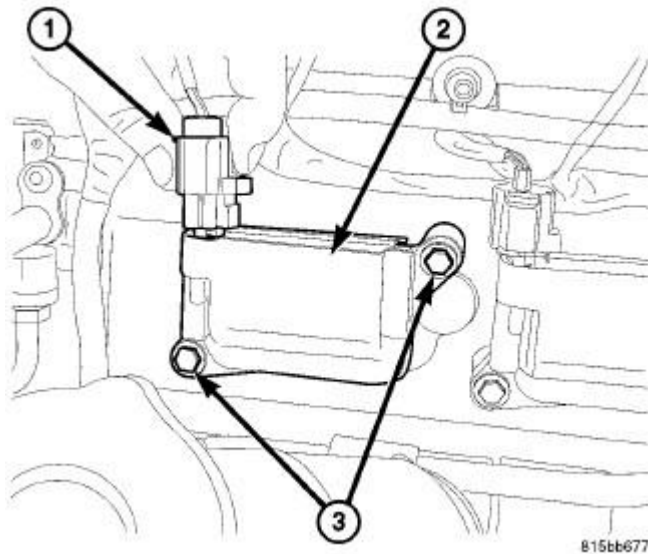


Fig. 121: IGNITION COIL MOUNTING BOLTS - 5.7L/6.1L
Courtesy of CHRYSLER LLC

14. Install the ignition coil (2) on the plugs and tighten the fasteners (3) to 7 N.m (62 in. lbs).
15. Connect the ignition coil electrical connectors (1).
16. Install the air cleaner assembly. See **Engine/Air Intake System/BODY, Air Cleaner - Installation.**
17. Install the air intake resonator. Refer to **INSTALLATION.**
18. Connect the negative battery cable.

VALVES, INTAKE AND EXHAUST

Description

VALVE GUIDES

The valve guides are made of powdered metal and pressed into the cylinder head. The guides are not replaceable or serviceable, and valve guide reaming is not recommended. If the guides are worn beyond acceptable limits, replace the cylinder heads.

VALVES

Both the intake and the exhaust valves are made of steel. The intake valve is 50.93 mm (2.00 inches) in diameter and the exhaust valve is 39.53 mm (1.55 inches) in diameter. All valves use three-bead lock keepers to retain the springs and promote valve rotation.

Standard Procedure

REFACING

VALVE FACE AND VALVE SEAT ANGLE CHART

2009 Jeep Grand Cherokee SRT-8

2009 ENGINE 5.7L - Service Information - Grand Cherokee

DESCRIPTION	SPECIFICATION	
	Metric	Standard
-		
Seat Width	-	
Intake	1.18 - 1.62 mm	0.0464 - 0.0637 in.
Exhaust	1.48 - 1.92 mm	0.058 - 0.075 in.
Face Angle	45° - 45 1/2°	
Seat Angle	44 1/2° - 45°	

NOTE: Valve seats that are worn or burned can be reworked, provided that correct angle and seat width are maintained. Otherwise the cylinder head must be replaced.

NOTE: When refacing valves and valve seats, it is important that the correct size valve guide pilot be used for reseating stones. A true and complete surface must be obtained.

1. Using a suitable dial indicator, measure the center of the valve seat. Total run out must not exceed 0.051 mm (0.002 in.).
2. Apply a small amount of Prussian Blue to the valve seat. Insert the valve into the cylinder head. Rotate valve while applying light pressure on the valve seat. Remove the valve and examine the valve face. If the blue is transferred below the top edge of the valve face, lower the valve seat using a 15 degree stone. If the blue is transferred to the bottom edge of the valve face, raise the valve seat using a 65 degree stone.
3. When the seat is properly positioned the width of the intake seat must be 1.18 - 1.62 mm (0.0464 - 0.0637 in.) and the exhaust seat must be 1.48 - 1.92 mm (0.058 - 0.075 in.).
4. Check the valve spring installed height after refacing the valve and seat. The installed height for both intake and exhaust valve springs must not exceed 46.0 mm (1.81 in.).
5. The valve seat must maintain a seat angle of 44 1/2° - 45°.
6. The valve face must maintain a face angle of 45° - 45 1/2°.

Removal**REMOVAL**

1. Remove the cylinder head. See **Engine/Cylinder Head - Removal**.
2. Compress valve springs using Valve Spring Compressor Tool C-3422-D and Adapter 8464.
3. Remove valve retaining locks, valve spring retainers, valve stem seals and valve springs.
4. Before removing valves, remove any burrs from valve stem lock grooves to prevent damage to the valve guides. Identify valves to ensure installation in original location.

Installation**INSTALLATION**

1. Clean valves thoroughly. Discard burned, warped and cracked valves.

2. Remove carbon and varnish deposits from inside of valve guides with a reliable guide cleaner.
3. Measure valve stems for wear. If wear exceeds 0.051 mm (0.002 inch), replace the valve.
4. Coat valve stems with lubrication oil and insert them in cylinder head.
5. If valves or seats are re-ground, check valve stem height. If valve is too long, replace cylinder head.
6. Install new seals on all valve guides. Install valve springs and valve retainers.
7. Compress valve springs with Valve Spring Compressor Tool special tool # C- 3422 and adapter 8464, install locks and release tool. If valves and/or seats are ground, measure the installed height of springs. Make sure the measurement is taken from bottom of spring seat in cylinder head to the bottom surface of spring retainer.
8. Install cylinder head. See **Engine/Cylinder Head - Installation.**

ENGINE BLOCK

CLEANING

CLEANING

Thoroughly clean the oil pan and engine block gasket surfaces.

Use compressed air to clean out:

- The galley at the oil filter adaptor hole.
- The front and rear oil galley holes.
- The MDS oil galley holes in the valley.
- The feed holes for the crankshaft main bearings.

Drill and tapped holes should be free of debris upon assembly.

Once the block has been completely cleaned, apply Loctite PST pipe sealant with Teflon 592 to the threads of the front and rear oil galley plugs, and coolant drain plugs. Tighten the oil galley 1/4 inch x 18 NPT plugs to 20 N.m (177 in. lbs.). Tighten the coolant drain 1/4 inch x 18 NPT plugs to 34 N.m (300 in. lbs.). Tighten the 3/8 inch x 18 NPT plugs to 27 N.m (240 in. lbs.).

INSPECTION

INSPECTION

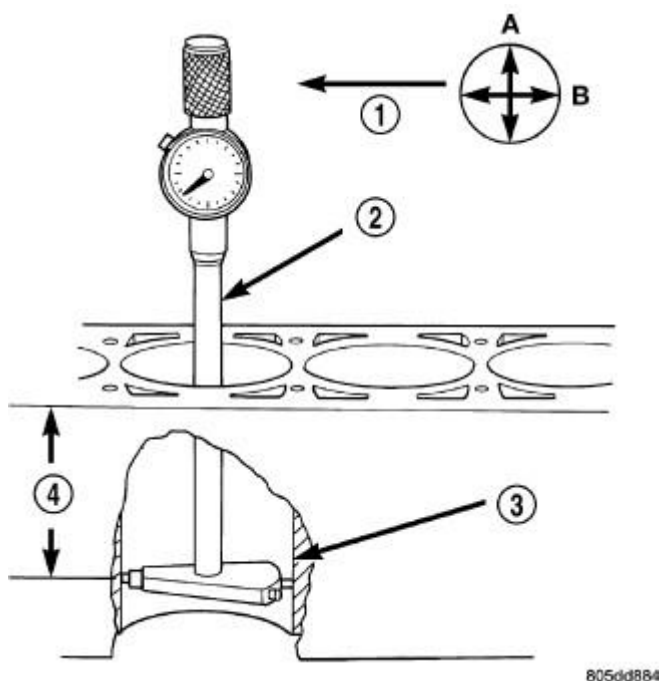



Fig. 122: Measuring Cylinder Bore Diameter Using Dial Bore Gauge
 Courtesy of CHRYSLER LLC

1. It is mandatory to use a dial bore gauge to measure each cylinder bore diameter. To correctly select the proper size piston, a cylinder bore gauge, capable of reading in 0.003 mm (.0001 in.) increments is required. If a bore gauge is not available, do not use an inside micrometer.
2. Measure the inside diameter of the cylinder bore at three levels below top of bore. Start perpendicular (across or at 90 degrees) to the axis of the crankshaft and then take two additional reading.
3. Measure the cylinder bore diameter crosswise to the cylinder block near the top of the bore. Repeat the measurement near the middle of the bore, then repeat the measurement near the bottom of the bore.
4. Determine taper by subtracting the smaller diameter from the larger diameter.
5. Rotate measuring device 90° and repeat steps above.
6. Determine out-of-roundness by comparing the difference between each measurement.
7. If cylinder bore taper does not exceed 0.025 mm (0.001 inch) and out-of-roundness does not exceed 0.015 mm (0.0006 inch), the cylinder bore can be honed. If the cylinder bore taper or out- of-round condition exceeds these maximum limits, the cylinder block must be replaced. A slight amount of taper always exists in the cylinder bore after the engine has been in use for a period of time.

ASSEMBLY, VARIABLE VALVE TIMING

Description

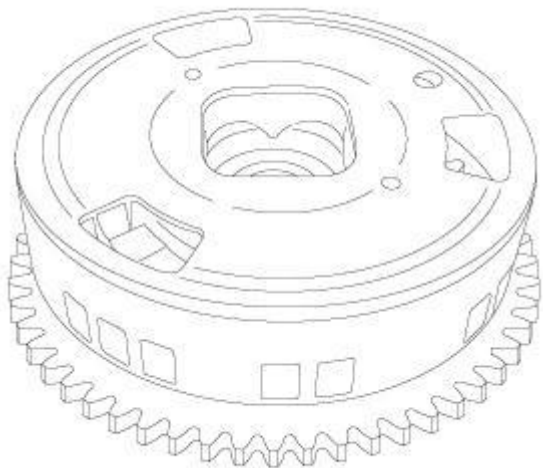DESCRIPTION



1225995

Fig. 123: Variable Cam Timing (VCT)

Courtesy of CHRYSLER LLC

The 5.7L Eagle engine is equipped with Variable Cam Timing (VCT). This system advances and/or retards the camshaft timing to improve engine performance, mid-range torque, idle quality, fuel economy, and reduce emissions. The VCT assembly is sometimes referred to as a camshaft phaser.

CAUTION: Never attempt to disassemble the camshaft phaser, severe engine damage could result.

The VCT assembly consists of the camshaft sprocket and a timing phaser. The VCT phaser assembly bolts to the camshaft and is serviced as an assembly.

Operation

OPERATION

The Variable Cam Timing (VCT) assembly is actuated with engine oil pressure. The oil flow to the VCT assemblies are controlled by an Oil Control Valve (OCV). The OCV consist of a Pulse Width Modulated (PWM) solenoid and a spool valve. The PCM actuates the OCV to control oil flow through the spool valve into the VCT assemblies. The VCT assembly consists of a rotor, stator, and sprocket. The stator is connected to the timing chain through the sprocket. The rotor is connected to the camshaft. Oil flow in to the VCT assembly rotates the rotor with respect to the stator, thus rotating the exhaust camshaft with respect to the timing chain and intake camshaft. An infinitely variable cam timing position can be achieved within the limits of the hardware. The CMP monitors the position of the camshaft with respect to the crankshaft and provides feedback to the PCM.

CAUTION: Never attempt to disassemble the camshaft phaser, severe engine damage could result.

Removal


REMOVAL

Fig. 124: Camshaft Phaser & Bolt
Courtesy of CHRYSLER LLC

CAUTION: Never attempt to disassemble the camshaft phaser, severe engine damage could result.

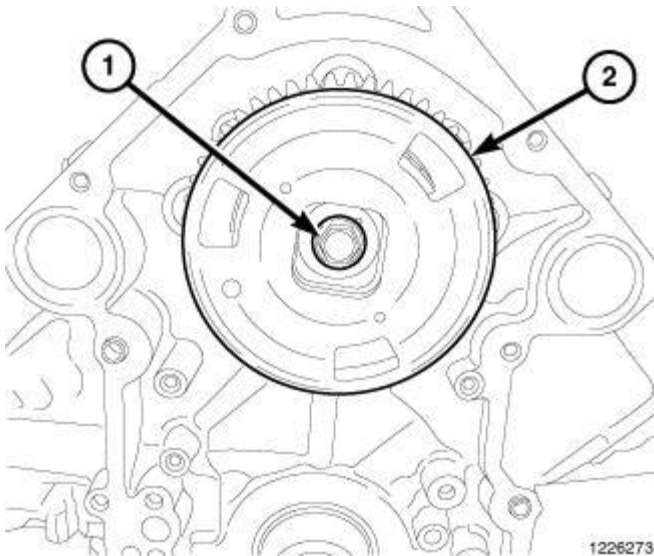1. Remove the timing chain and sprockets. See Engine/Valve Timing/CHAIN and SPROCKETS, Timing - Removal.
2. Remove the camshaft phaser bolt (1).
3. Remove camshaft phaser (2).

Installation**INSTALLATION**

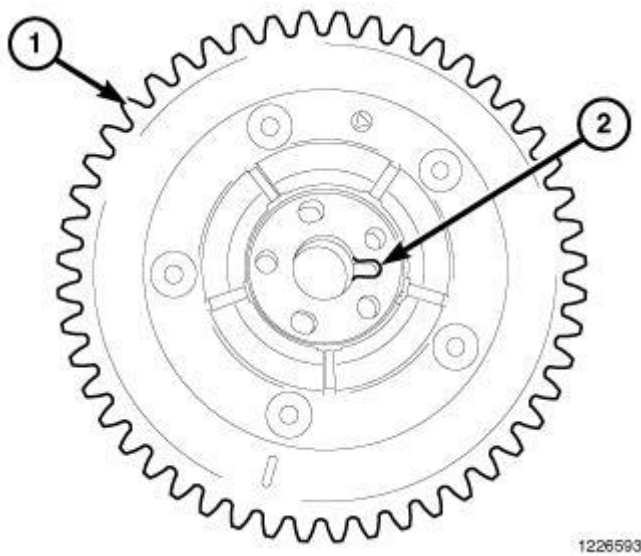


Fig. 125: Phaser Alignment Slot
Courtesy of CHRYSLER LLC

1. Align the slot (2) in the phaser (1) with the dowel on the camshaft.

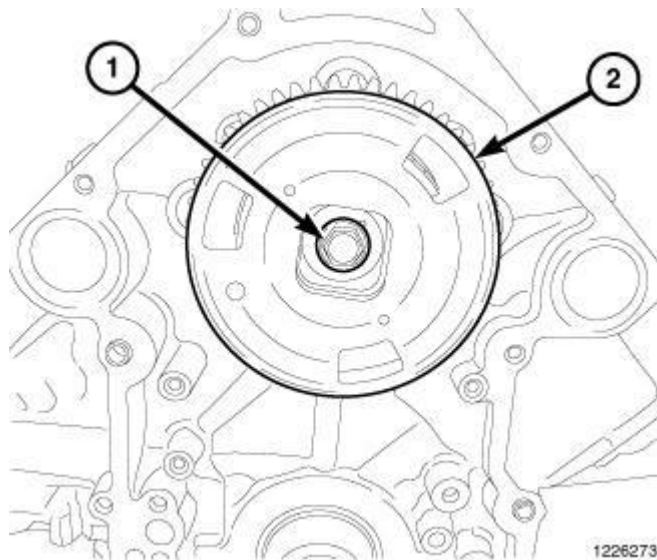


Fig. 126: Camshaft Phaser & Bolt
Courtesy of CHRYSLER LLC

CAUTION: Never attempt to disassemble the camshaft phaser, severe engine damage could result.

2. Position the phaser (2) in place and install phaser retaining bolt (1) and tighten to 122 N.m (90 ft. lbs.).
3. Install the timing chain and sprockets. See **Engine/Valve Timing/CHAIN and SPROCKETS, Timing - Installation**.

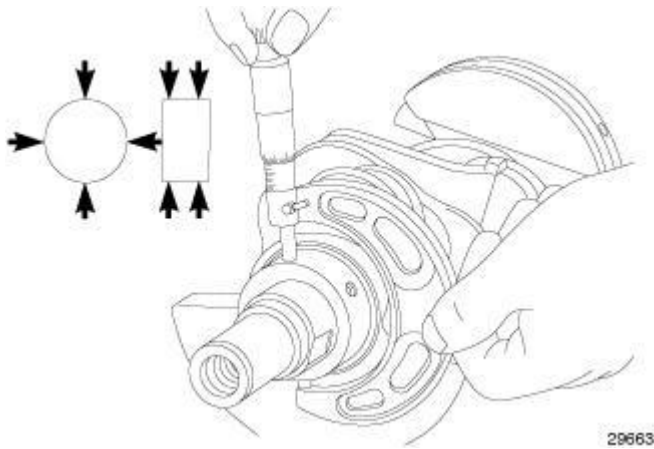
BEARING(S), CRANKSHAFT, MAIN**Standard Procedure****CRANKSHAFT MAIN BEARING - FITTING****MAIN BEARING JOURNAL DIAMETER (CRANKSHAFT REMOVED)**

Fig. 127: Crankshaft Journal Measurements - Typical
Courtesy of CHRYSLER LLC

With the crankshaft removed from the cylinder block.

Clean the oil off the main bearing journal.

Determine the maximum diameter of the journal with a micrometer. Measure at two locations 90° apart at each end of the journal.

The maximum allowable taper is 0.008 mm (0.0004 inch.) and maximum out of round is 0.005 mm (0.0002 inch). Compare the measured diameter with the journal diameter specification (Main Bearing Fitting Chart). Select the inserts required to obtain the specified bearing-to-journal clearance.

CRANKSHAFT MAIN BEARING SELECTION

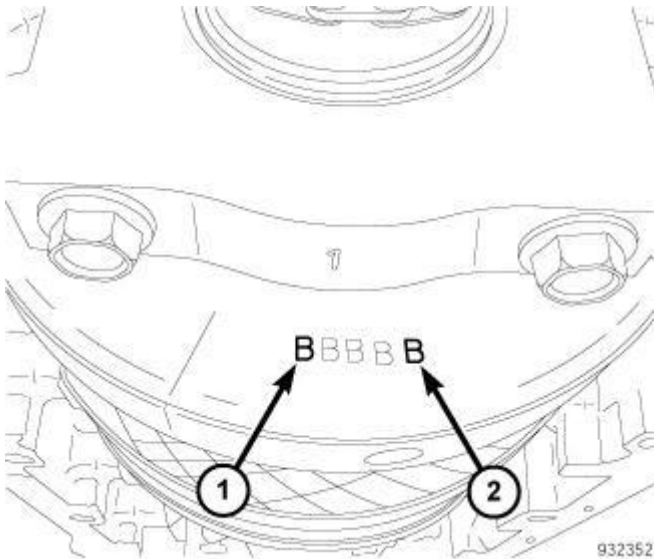


Fig. 128: Crankshaft Counterweight Stamped Grade Identification Marks
 Courtesy of CHRYSLER LLC

The main bearings are "select fit" to achieve proper oil clearances. For main bearing selection, the crankshaft counterweight has grade identification marks stamped into it. These marks are read from left to right. The left letter (1) refers to the number one main journal and the right letter (2) refers to the number 5 journal.

NOTE: Service main bearings are coded. These codes identify what size or grade of the bearing.

MAIN BEARING SELECTION CHART - 5.7L

GRADE MARKING	BEARING SIZE		FOR USE WITH JOURNAL SIZE	
	METRIC	STANDARD	METRIC	STANDARD
A	0.008 mm U/S	0.0004 in. U/S	64.988 - 64.995 mm	2.5585 - 2.5588 in.
B	NOMINAL		64.996 - 65.004 mm	2.5588 - 2.5592 in.
C	0.008 mm O/S	0.0004 in. O/S	65.005 - 65.012 mm	2.5592 - 2.5595 in.

Inspection

INSPECTION

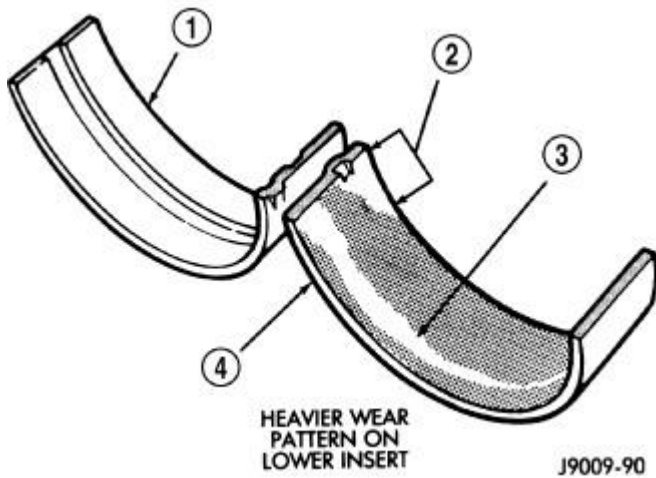


Fig. 129: Main Bearing Wear Patterns
Courtesy of CHRYSLER LLC

Wipe the inserts clean and inspect for abnormal wear patterns and for metal or other foreign material imbedded in the lining. Normal main bearing insert wear patterns are illustrated.

NOTE: If any crankshaft journals are scored, the crankshaft must be repaired or replaced.

Inspect the back of the inserts for fractures, scrapings or irregular wear patterns.

Inspect the upper insert locking tabs for damage.

Replace all damaged or worn bearing inserts.

CAMSHAFT, ENGINE

Removal

CAMSHAFT CORE HOLE PLUG

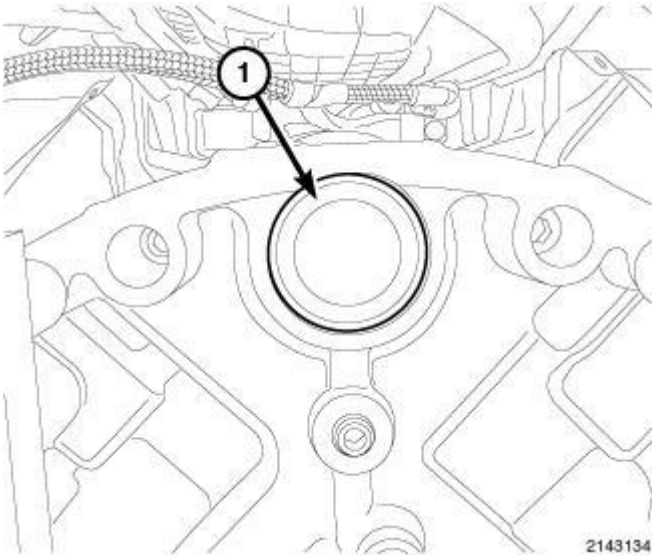


Fig. 130: Camshaft Core Hole Plug
Courtesy of CHRYSLER LLC

1. Perform the fuel system pressure release procedure. Refer to **Fuel System/Fuel Delivery - Standard Procedure** .
2. Remove the engine from the vehicle. See **Engine - Removal**.
3. Remove the flexplate. See **Engine/Engine Block/FLEXPLATE - Removal**.

CAUTION: Do not damage the rear surface of the camshaft or the core plug sealing surface, when removing the core plug.

4. Using a suitable sharp punch, punch a small hole in the camshaft core hole plug (1).
5. Insert a short sheet metal screw into the small hole in the camshaft core hole plug.
6. Using a suitable slide hammer puller, remove the rear camshaft core hole plug.

CAMSHAFT

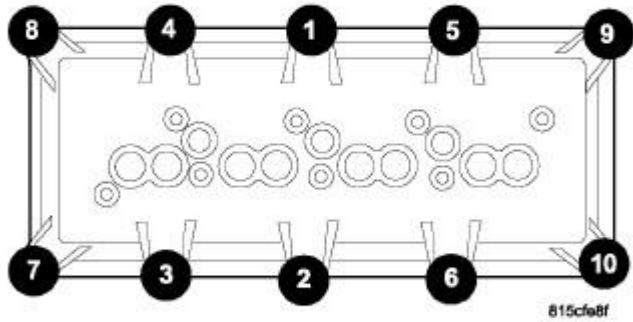


Fig. 131: 5.7L/6.1L COVER TORQUE SEQUENCE

Courtesy of CHRYSLER LLC

1. Remove the battery negative cable.
2. Remove the air cleaner assembly.
3. Drain coolant. Refer to **Cooling - Standard Procedure** .
4. Remove the accessory drive belt. Refer to **Cooling/Accessory Drive/BELT, Serpentine - Removal** .
5. Remove the generator.
6. Remove the A/C compressor, and set aside.
7. Remove the radiator. Refer to **Cooling/Engine/RADIATOR, Engine Cooling - Removal** .
8. Remove intake manifold. See **Engine/Manifolds/MANIFOLD, Intake - Removal**.
9. Remove cylinder head covers. See **Engine/Cylinder Head/COVER(S), Cylinder Head - Removal**.

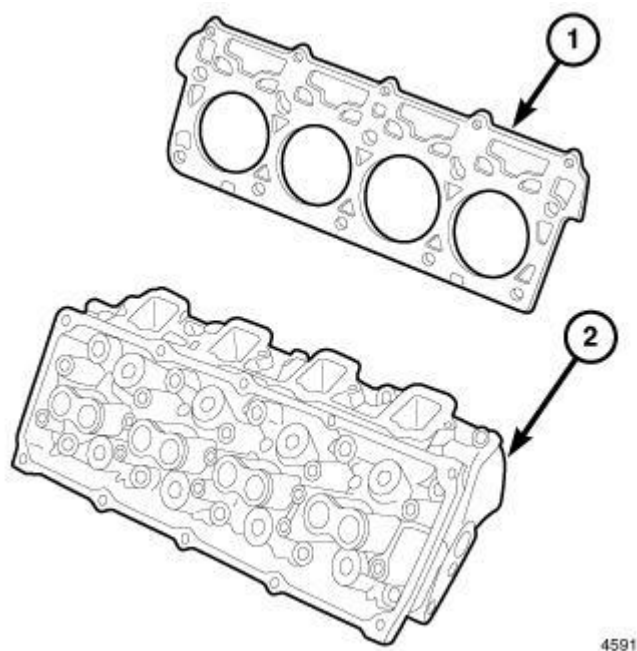


Fig. 132: 5.7L/6.1L CYLINDER HEAD COMPONENTS

Courtesy of CHRYSLER LLC

- | |
|-------------------------|
| 1 - CYLINDER HEAD COVER |
| 2 - GASKET |
| 3 - FASTENERS |
| 4 - CYLINDER HEAD |
| 5 - HEAD GASKET |

10. Remove both left and right cylinder heads (4). See **Engine/Cylinder Head - Removal**.
11. Remove the oil pan. See **Engine/Lubrication/PAN, Oil - Removal**.

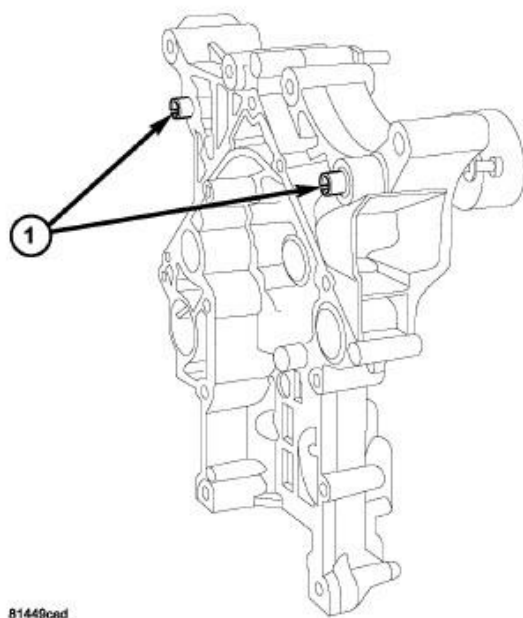


Fig. 133: FRONT COVER SLIDE BUSHINGS
Courtesy of CHRYSLER LLC

12. Remove timing case cover (1). See **Engine/Valve Timing/COVER(S), Engine Timing - Removal**.
13. Remove the oil pick up tube.

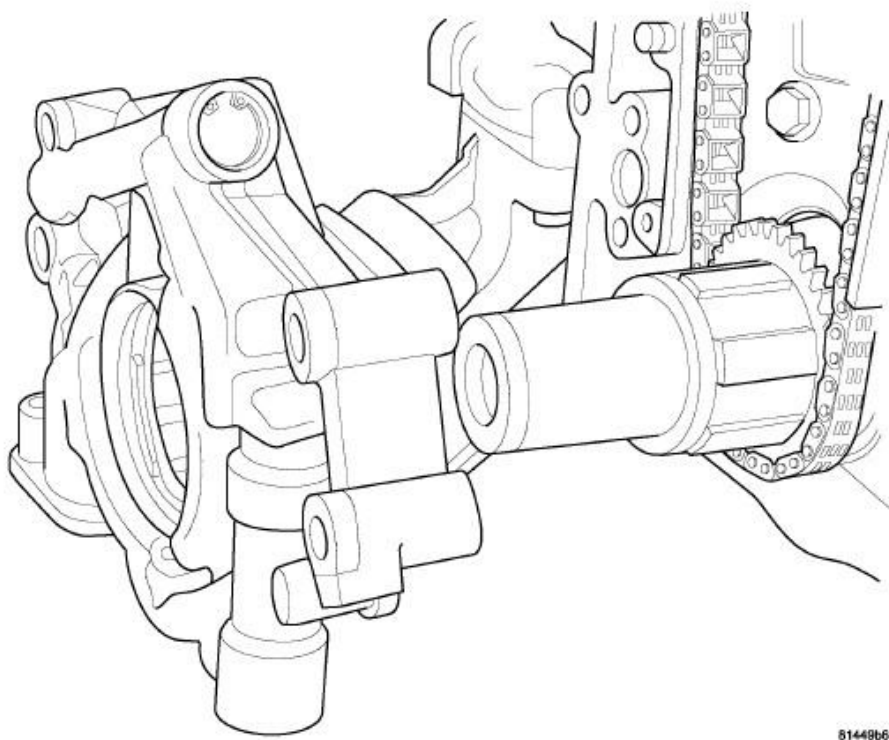


Fig. 134: OIL PUMP REMOVAL/INSTALLATION

Courtesy of CHRYSLER LLC

14. Remove the oil pump. See Engine/Lubrication/PUMP, Engine Oil - Removal.

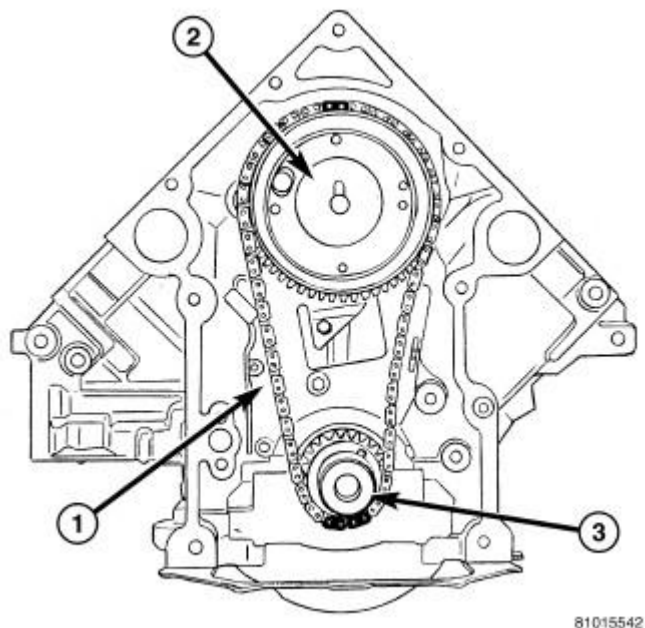


Fig. 135: 5.7L TIMING MARK ALIGNMENT
Courtesy of CHRYSLER LLC

- | |
|---|
| 1 - Chain Tensioner
2 - Camshaft Sprocket
3 - Crankshaft Sprocket |
|---|

15. Remove timing chain (2). See Engine/Valve Timing/CHAIN and SPROCKETS, Timing - Removal.
16. Remove camshaft tensioner/thrust plate assembly.

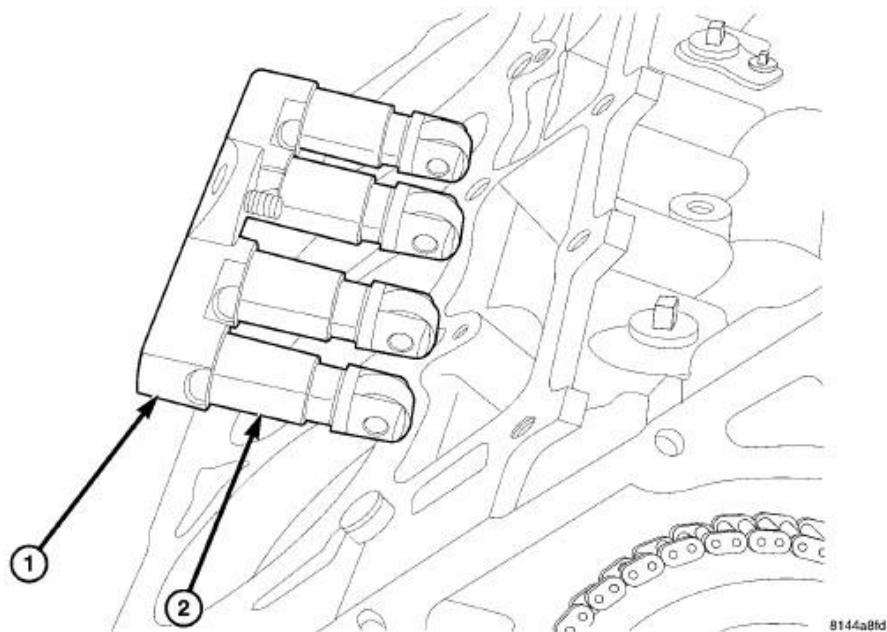


Fig. 136: HYDRAULIC ROLLER TAPPET REMOVAL/INSTALLATION
Courtesy of CHRYSLER LLC

- | |
|---|
| <p>1 - TAPPET RETAINER</p> <p>2 - HYDRAULIC ROLLER TAPPET</p> |
|---|

NOTE: Identify lifters to ensure installation in original location.

17. Remove the tappets (2) and retainer (1) assembly.

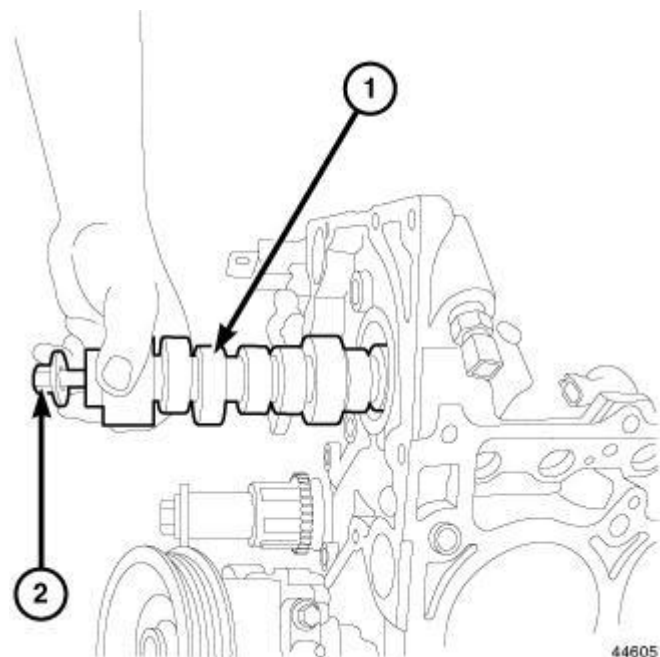



Fig. 137: CAMSHAFT REMOVAL/INSTALLATION

Courtesy of CHRYSLER LLC

18. Install a long bolt into front of camshaft to aid in removal of the camshaft. Remove camshaft, being careful not to damage cam bearings with the cam lobes.

Inspection**INSPECTION**

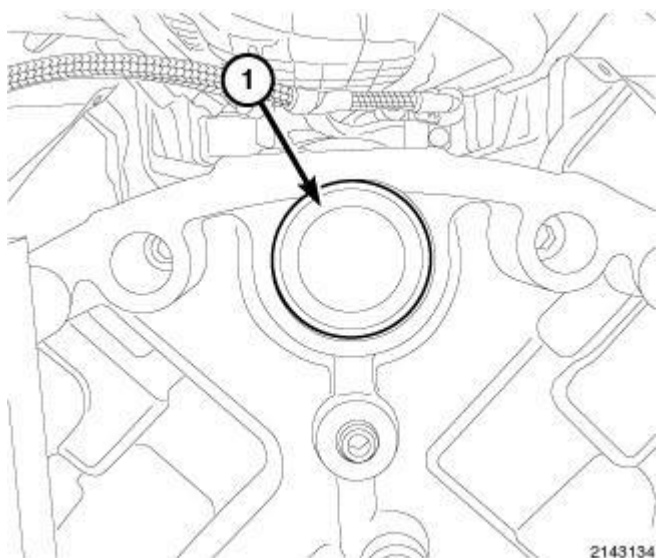The cam bearings are not serviceable. Do not attempt to replace cam bearings for any reason. If the cam bearings are damaged, the cylinder block must be replaced.

Installation**CAMSHAFT CORE HOLE PLUG****Fig. 138: Camshaft Core Hole Plug**

Courtesy of CHRYSLER LLC

1. Clean the core hole in the cylinder block.

NOTE: Do not apply adhesive to the new camshaft core hole plug. A new plug has adhesive pre-applied.

2. Install a new camshaft core hole plug (1) located at the rear of cylinder block, using a suitable flat faced tool. The plug must be fully seated on the cylinder block shoulder.
3. Install the flexplate. See **Engine/Engine Block/FLEXPLATE - Installation**.
4. Install the engine. See **Engine - Installation**.

CAMSHAFT

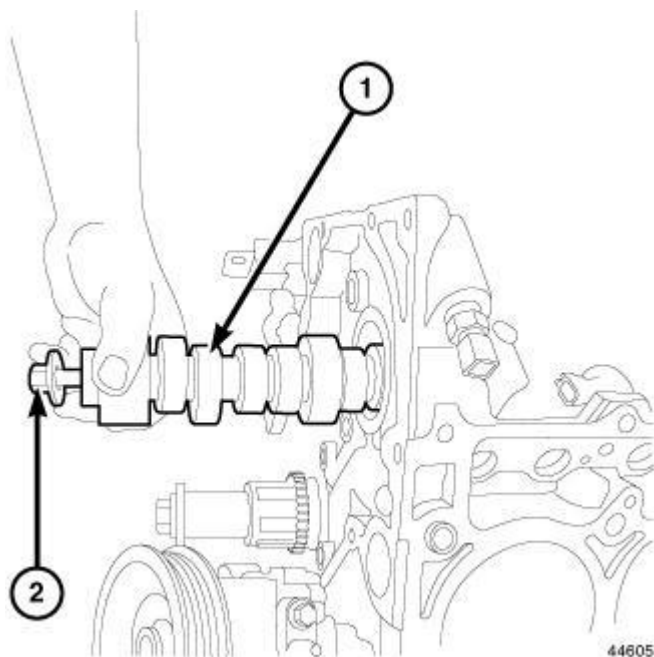


Fig. 139: CAMSHAFT REMOVAL/INSTALLATION

Courtesy of CHRYSLER LLC

CAUTION: 5.7L engines equipped with MDS uses a unique camshaft for use with the Multi Displacement System. When installing a new camshaft, the replacement camshaft must be compatible with the Multi Displacement System.

1. Lubricate camshaft lobes and camshaft bearing journals and insert the camshaft.


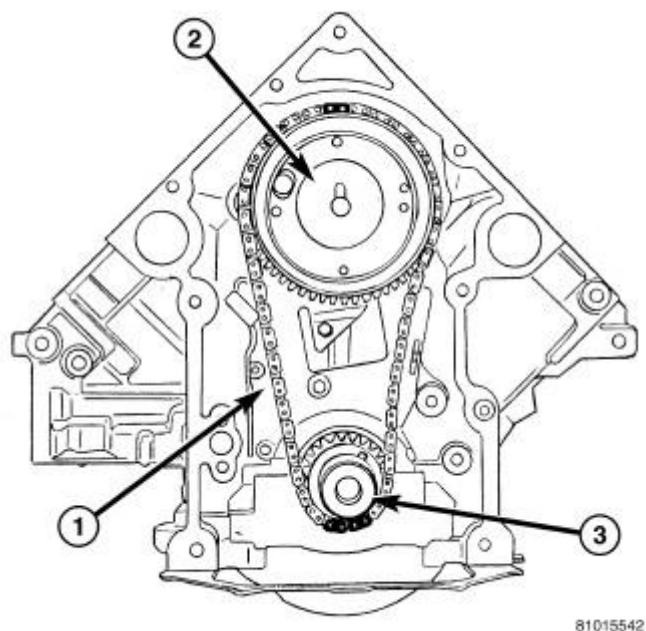


Fig. 140: 5.7L TIMING MARK ALIGNMENT
Courtesy of CHRYSLER LLC

- | |
|---|
| 1 - Chain Tensioner
2 - Camshaft Sprocket
3 - Crankshaft Sprocket |
|---|

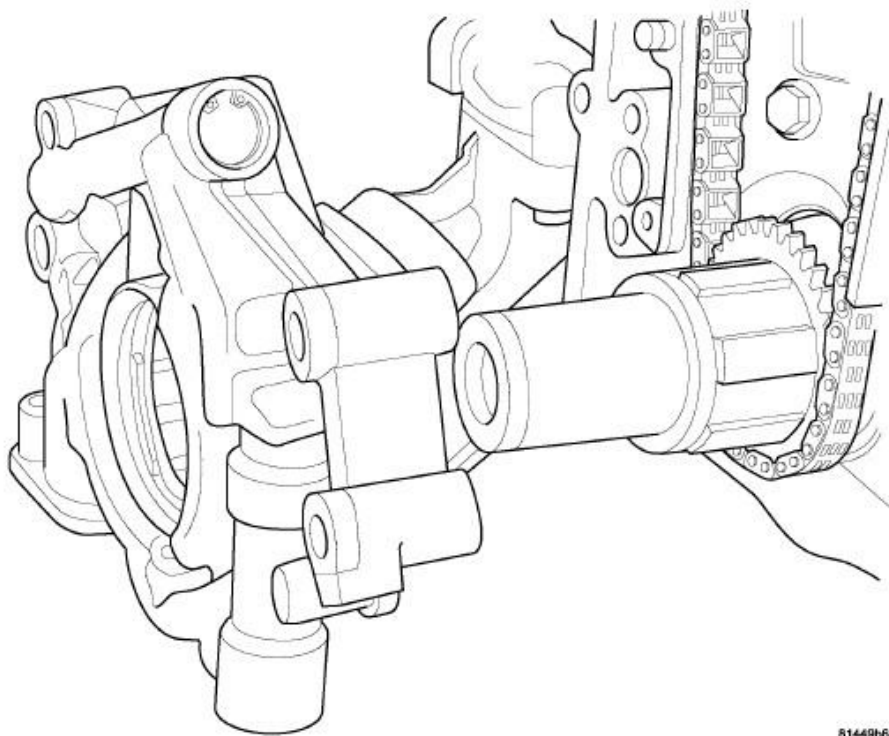2. Install camshaft Tensioner plate assembly. Tighten bolts to 28 N.m (250 in. lbs.).
3. Install timing chain and sprockets. See **Engine/Valve Timing/CHAIN and SPROCKETS, Timing - Installation**.
4. Measure camshaft end play. See **Engine - Specifications**. If not within limits install a new thrust plate.




81448b63

Fig. 141: OIL PUMP REMOVAL/INSTALLATION

Courtesy of CHRYSLER LLC

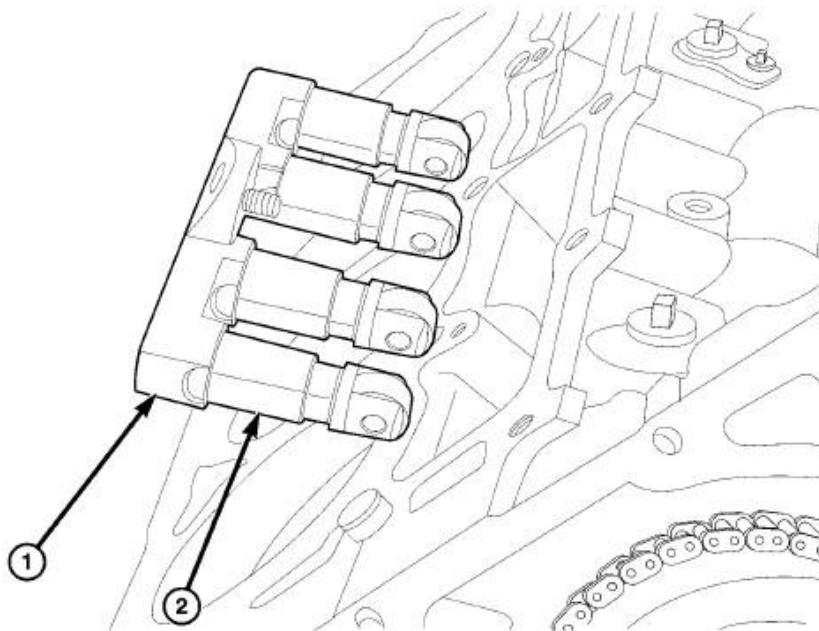5. Install the oil pump. See **Engine/Lubrication/PUMP, Engine Oil - Installation**.
6. Install the oil pick up tube.



8144a8fd

Fig. 142: HYDRAULIC ROLLER TAPPET REMOVAL/INSTALLATION

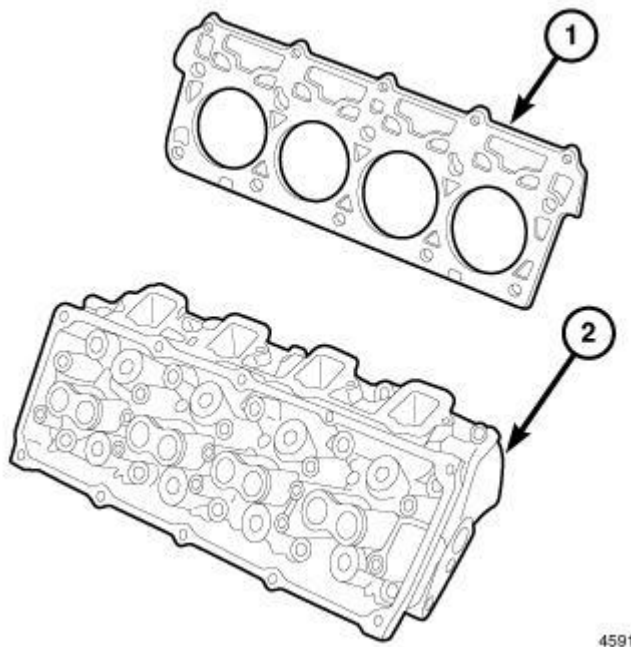
Courtesy of CHRYSLER LLC

- 1 - TAPPET RETAINER
- 2 - HYDRAULIC ROLLER TAPPET

7. Each tappet (2) reused must be installed in the same position from which it was removed. **When camshaft is replaced, all of the tappets must be replaced.**

CAUTION: Engines equipped with MDS use both standard roller tappets (2) and deactivating roller tappets (1). The deactivating roller tappets must be used in cylinders 1,4,6,7. The deactivating tappets can be identified by the two holes in the side of the tappet body (3), for the latching pins.

8. Install tappets (2) and retaining yoke assembly (1). See Engine/Engine Block/LIFTER(S), Hydraulic - Installation.



4591

Fig. 143: 5.7L/6.1L CYLINDER HEAD COMPONENTS
Courtesy of CHRYSLER LLC

- 1 - CYLINDER HEAD COVER
- 2 - GASKET
- 3 - FASTENERS
- 4 - CYLINDER HEAD
- 5 - HEAD GASKET

9. Install both left and right cylinder heads (4). See Engine/Cylinder Head - Installation.

10. Install push rods.

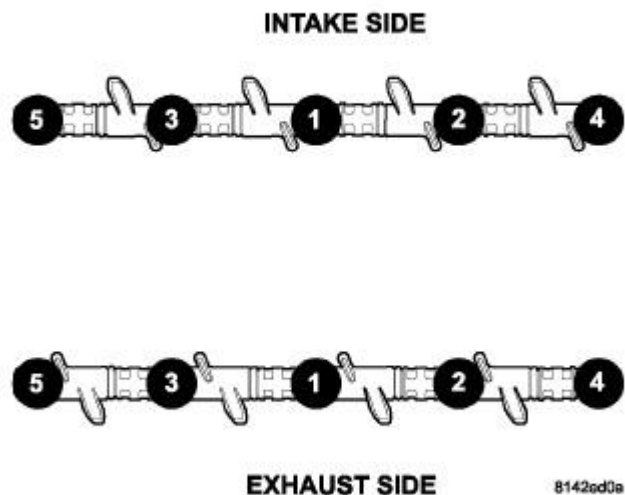


Fig. 144: ROCKER SHAFT TORQUE SEQUENCE
Courtesy of CHRYSLER LLC

11. Install rocker arms. See Engine/Cylinder Head/ROCKER ARM, Valve - Installation.

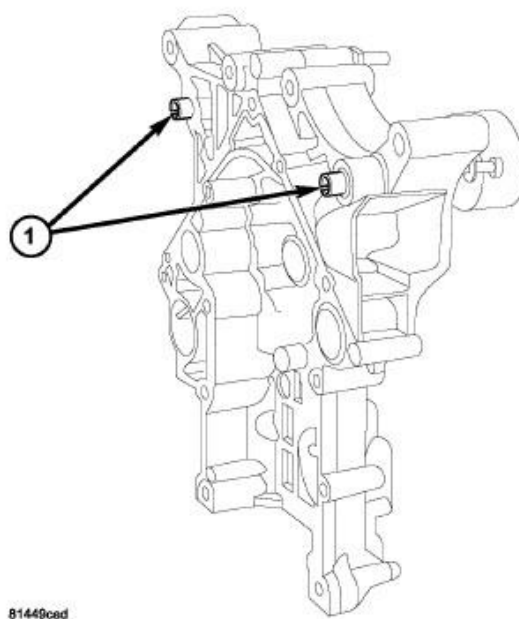


Fig. 145: FRONT COVER SLIDE BUSHINGS
Courtesy of CHRYSLER LLC

12. Install timing case cover. See Engine/Valve Timing/COVER(S), Engine Timing - Installation.
13. Install the oil pan. See Engine/Lubrication/PAN, Oil - Installation.

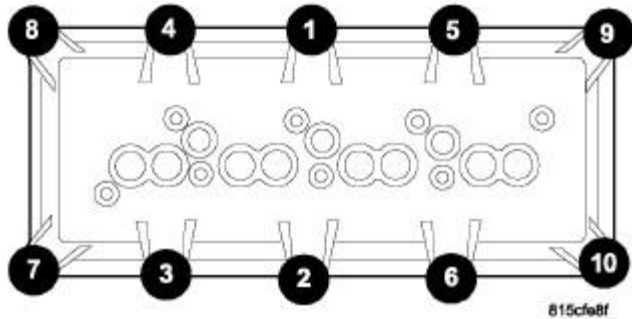


Fig. 146: 5.7L/6.1L COVER TORQUE SEQUENCE
Courtesy of CHRYSLER LLC

14. Install cylinder head covers. See Engine/Cylinder Head/COVER(S), Cylinder Head - Installation.

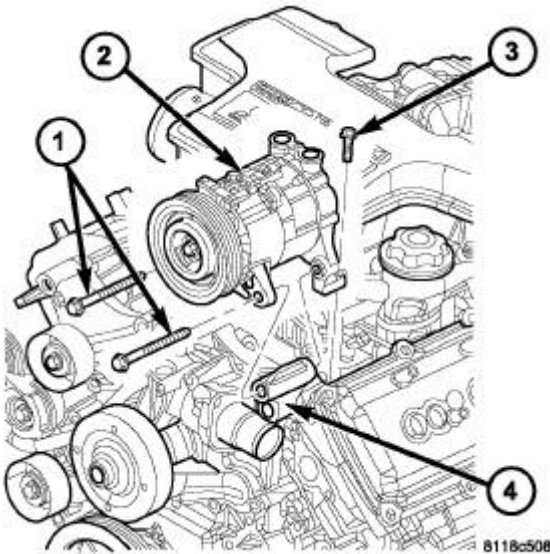


Fig. 147: A/C COMPRESSOR-5.7L ENGINE
Courtesy of CHRYSLER LLC

15. Install intake manifold. See **Engine/Manifolds/MANIFOLD, Intake - Installation**.
16. Install the A/C compressor (2).


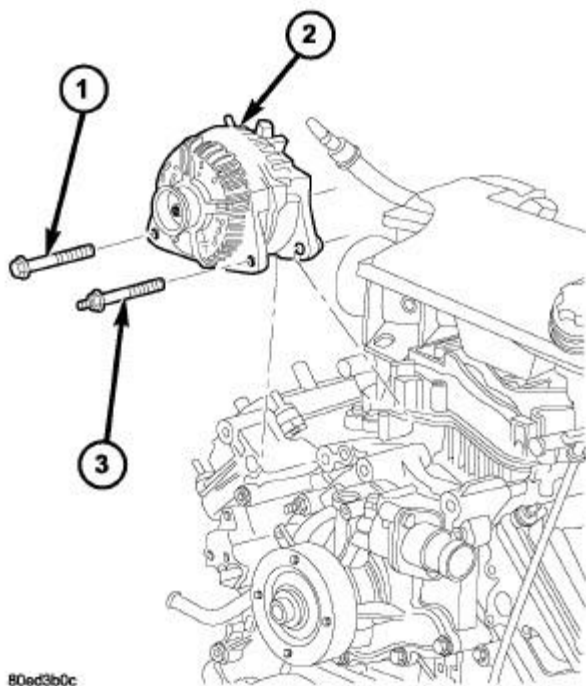


Fig. 148: REMOVE / INSTALL GENERATOR - 5.7L
Courtesy of CHRYSLER LLC

- | |
|--|
| 1 - MOUNTING BOLT
2 - GENERATOR
3 - MOUNTING STUD/BOLT |
|--|

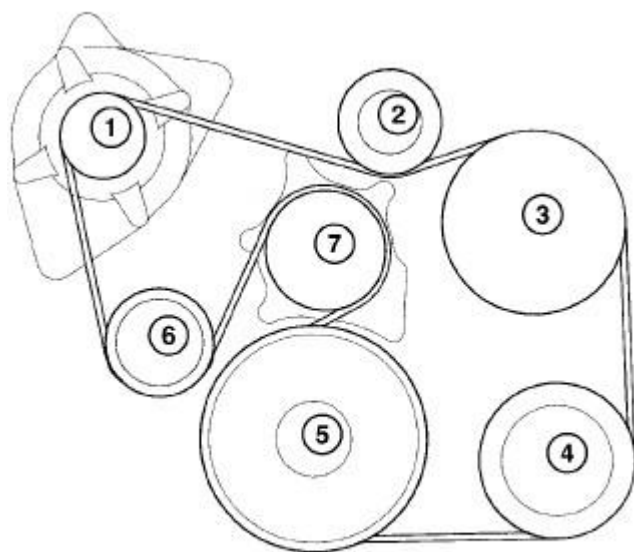17. Install the generator (2).



807439d

Fig. 149: Accessory Drive Belt Routing
Courtesy of CHRYSLER LLC


- | |
|---|
| <p>1 - GENERATOR
 2 - IDLER PULLEY
 3 - POWER STEERING PUMP
 4 - A/C COMPRESSOR
 5 - CRANKSHAFT
 6 - BELT TENSIONER
 7 - WATER PUMP</p> |
|---|

18. Install the accessory drive belt. Refer to Cooling/Accessory Drive/BELT, Serpentine - Installation .
19. Install the radiator. Refer to Cooling/Engine/RADIATOR, Engine Cooling - Installation .
20. Install the air cleaner assembly.
21. Install the battery negative cable.
22. Refill coolant. Refer to Cooling - Standard Procedure .
23. Refill engine oil.
24. Start engine and check for leaks.

COVER, STRUCTURAL DUST

Description

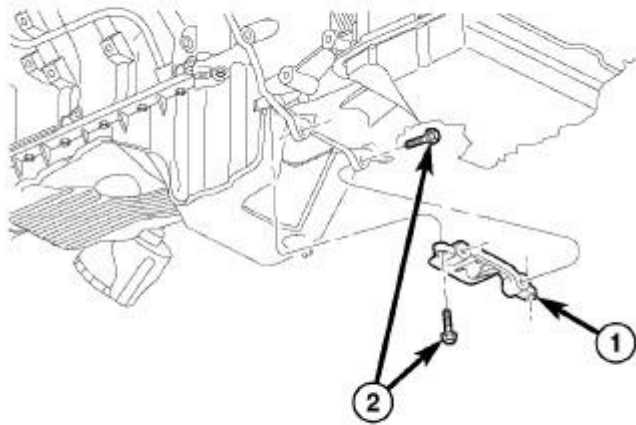DESCRIPTION



815005aa

Fig. 150: Structural Dust Cover
Courtesy of CHRYSLER LLC

- | |
|--|
| <p>1 - STRUCTURAL COVER</p> <p>2 - BOLTS</p> |
|--|

The structural dust cover (1) is made of die cast aluminum and joins the lower half of the transmission bell housing to the engine oil pan.

Operation

OPERATION

The structural cover provides additional powertrain stiffness and reduces noise and vibration.

Removal

REMOVAL

1. Raise and support the vehicle.

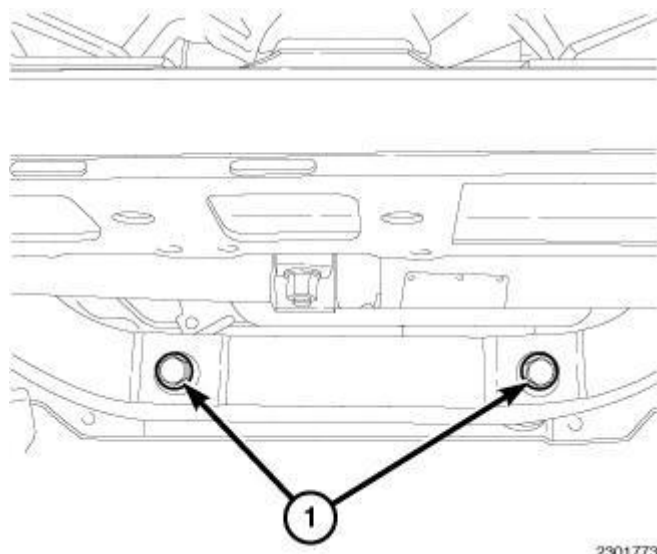


Fig. 151: Steering Rack To Frame Mounting Bolts
 Courtesy of CHRYSLER LLC

2. Remove the steering rack to frame mounting bolts (1) and lower the steering rack enough to gain clearance for the structural dust cover removal.

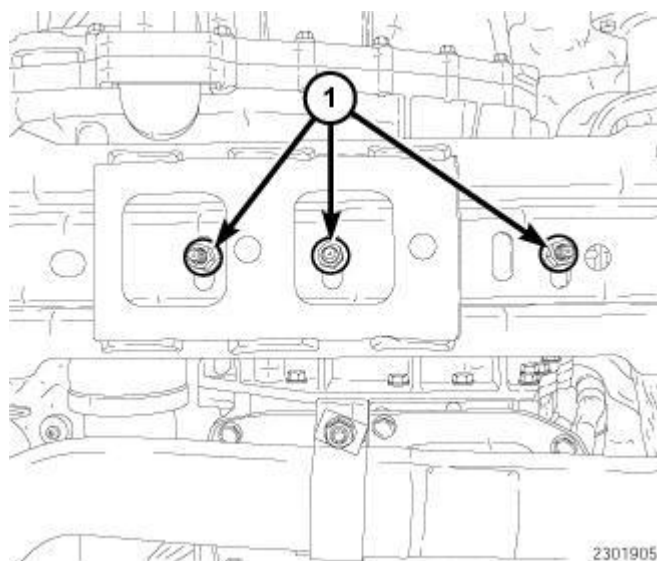


Fig. 152: Transmission Mount To Crossmember Retaining Nuts
 Courtesy of CHRYSLER LLC

3. Remove the transmission mount to crossmember retaining nuts (1).
4. Using a suitable jack, lift the transmission enough to gain clearance for the structural dust cover removal.

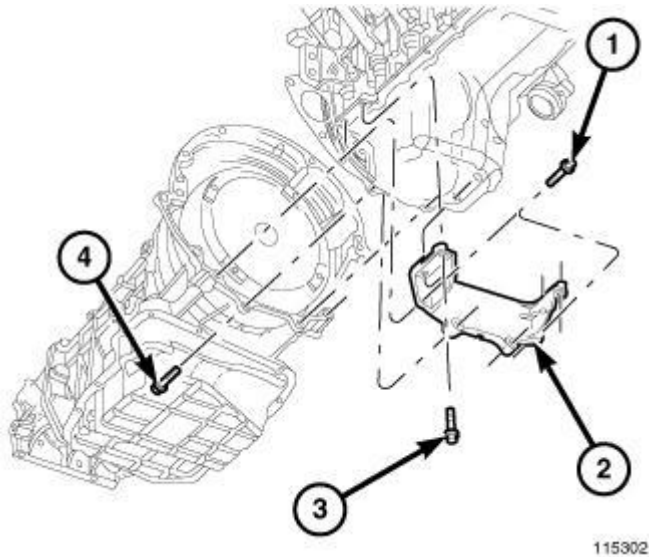


Fig. 153: Structural Cover
Courtesy of CHRYSLER LLC

5. Remove the structural dust cover retaining bolts (1,3 & 4).
6. Remove the structural dust cover (2).

Installation

INSTALLATION

CAUTION: The structural dust cover must be installed as described in the following steps. Failure to do so may cause severe damage to the cover.

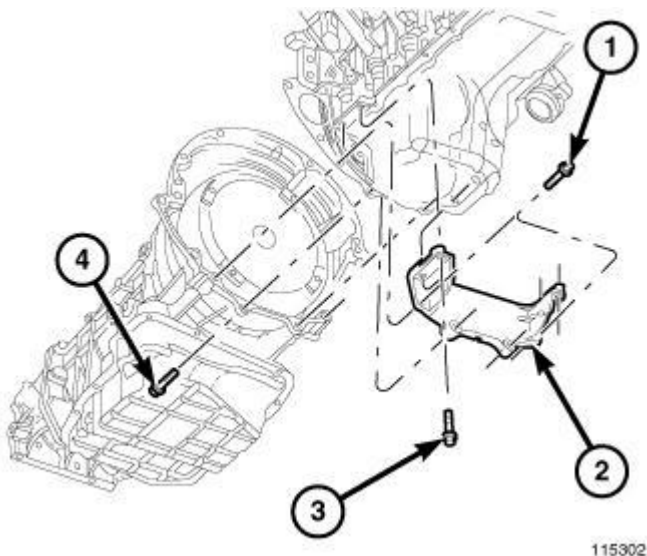


Fig. 154: Structural Cover
Courtesy of CHRYSLER LLC

1. Position the structural dust cover in the vehicle
2. Install all four bolts retaining the structural dust cover to the engine (3) hand tight.
3. Install the four cover to transmission bolts (1, 2 & 4) hand tight.

CAUTION: The structural dust cover must be held tightly against both the engine and the transmission bell housing during the tightening sequence. Failure to do so may cause severe damage to the cover.

4. Tighten the structural dust cover-to-transmission bolts (1, 2 & 4) to 9 N.m (80 in. lbs.).
5. Tighten the structural dust cover-to-engine block bolts (3) to 9 N.m (80 in. lbs.).
6. Retighten the structural dust cover-to-transmission bolts to 54 N.m (40 ft. lbs.).
7. Retighten the structural dust cover-to-engine block bolts to 54 N.m (40 ft. lbs.).


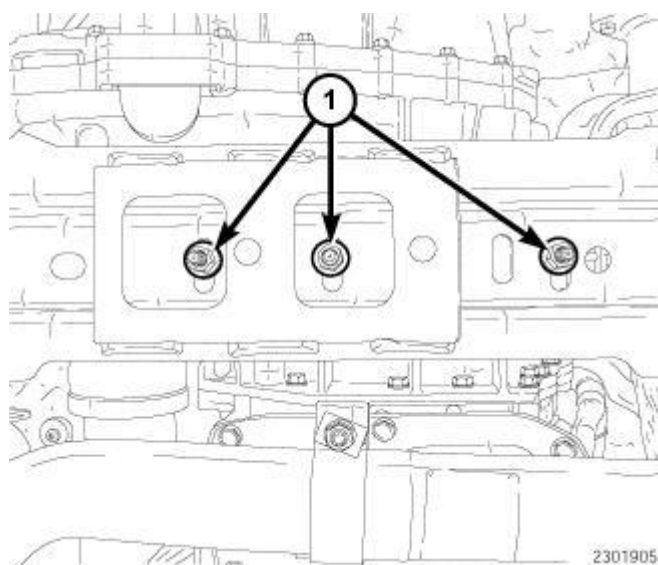


Fig. 155: Transmission Mount To Crossmember Retaining Nuts
Courtesy of CHRYSLER LLC

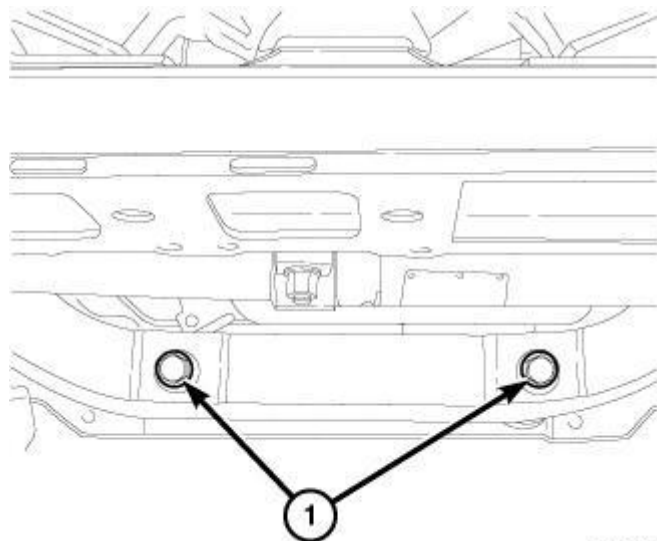8. Lower the transmission onto the crossmember and remove the jack.
9. Install the transmission mount to crossmember retaining nuts (1) and tighten to 54 N.m (40 ft. lbs.).



2301773


Fig. 156: Steering Rack To Frame Mounting Bolts
 Courtesy of CHRYSLER LLC

10. Position the steering rack to the frame, install the bolts (1) and tighten bolts/nuts to 258 N.m (190 ft. lbs.).
11. Lower the vehicle.

CRANKSHAFT

Removal

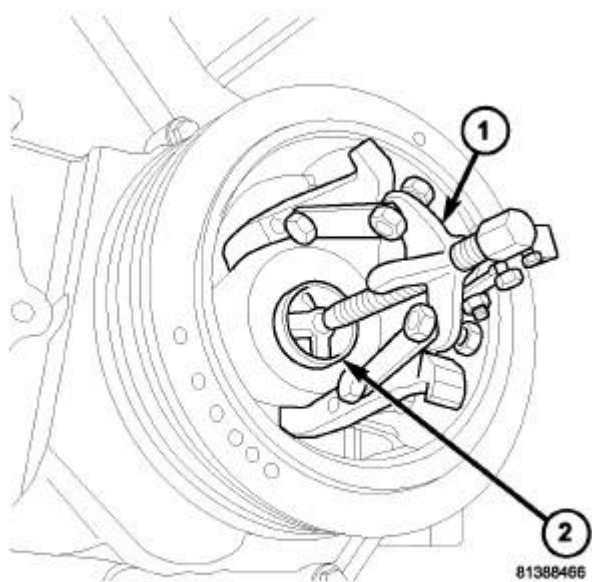REMOVAL



81388466


Fig. 157: CRANKSHAFT DAMPER REMOVAL

Courtesy of CHRYSLER LLC

1 - 3-Jaw Puller 1023

2 - Crankshaft Insert 8513A

1. Remove the vibration damper (1). See **Engine/Engine Block/DAMPER, Vibration - Removal**.

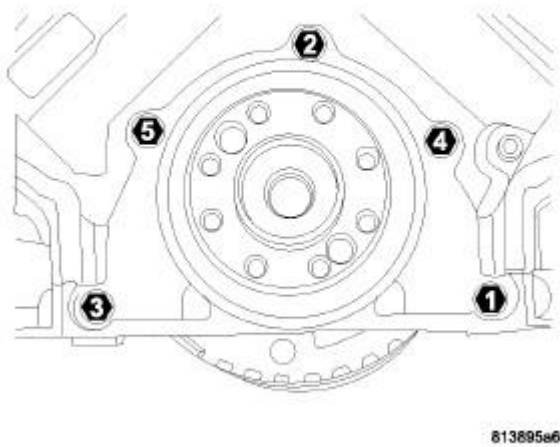**Fig. 158: REAR SEAL RETAINER TORQUE SEQUENCE**

Courtesy of CHRYSLER LLC

2. Remove the rear oil seal retainer. See **Engine/Engine Block/RETAINER, Crankshaft Rear Oil Seal - Removal**.
3. Remove the oil pan. See **Engine/Lubrication/PAN, Oil - Removal**.
4. Remove the oil pump pickup.
5. Remove the windage tray/oil pan gasket.

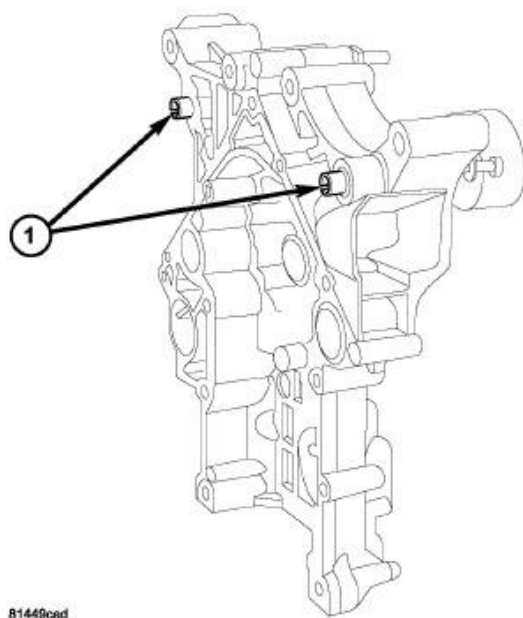


Fig. 159: FRONT COVER SLIDE BUSHINGS
Courtesy of CHRYSLER LLC

6. Remove the timing chain cover. See **Engine/Valve Timing/COVER(S), Engine Timing - Removal.**

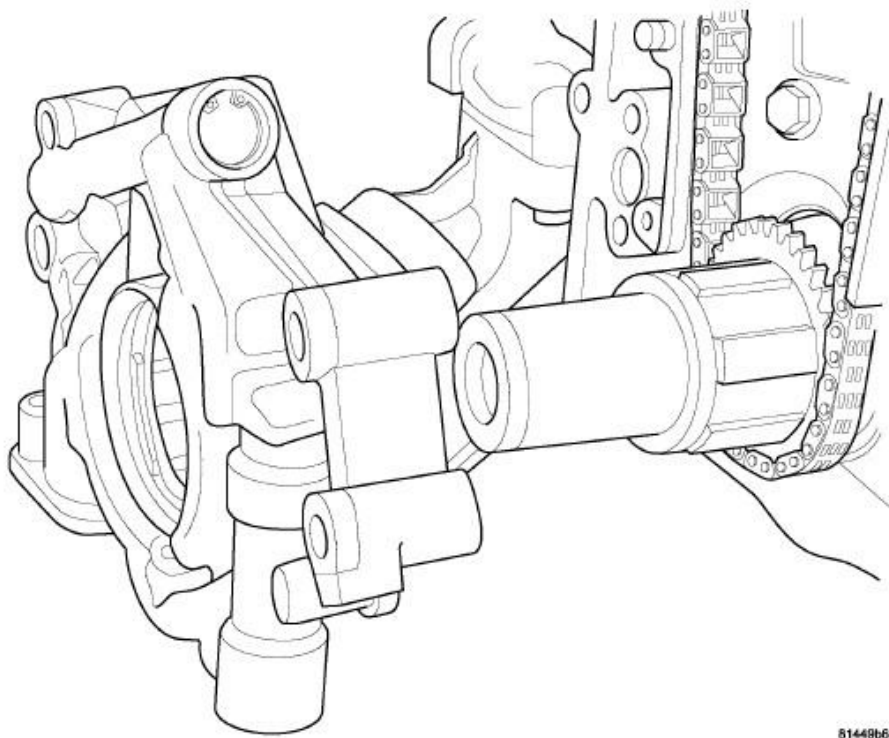


Fig. 160: OIL PUMP REMOVAL/INSTALLATION
Courtesy of CHRYSLER LLC

7. Remove the oil pump. See **Engine/Lubrication/PUMP, Engine Oil - Removal**.


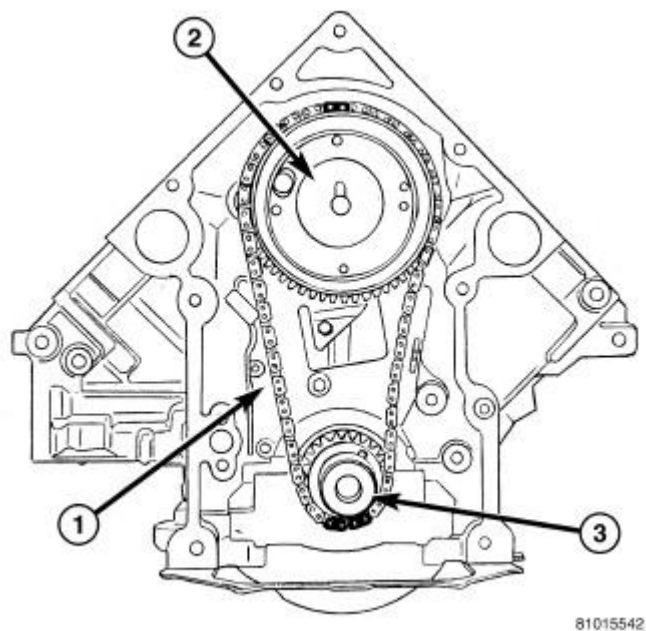


Fig. 161: 5.7L TIMING MARK ALIGNMENT
Courtesy of CHRYSLER LLC

- | |
|---|
| 1 - Chain Tensioner
2 - Camshaft Sprocket
3 - Crankshaft Sprocket |
|---|

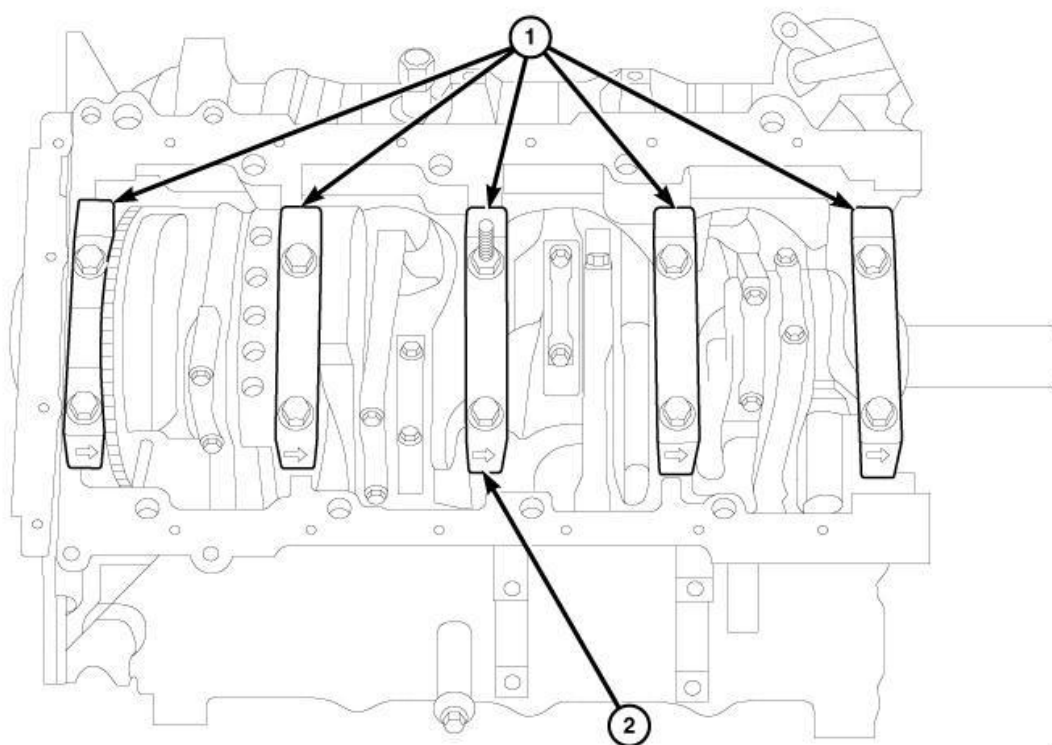8. Remove the timing drive (2). See **Engine/Valve Timing/CHAIN and SPROCKETS, Timing - Removal**.



44625

Fig. 162: MAIN BEARING CAPS**Courtesy of CHRYSLER LLC****1 - MAIN BEARING CAPS**

9. Identify rod bearing caps before removal. Remove rod bearing caps with bearings.
10. Identify main bearing caps (1) before removal.

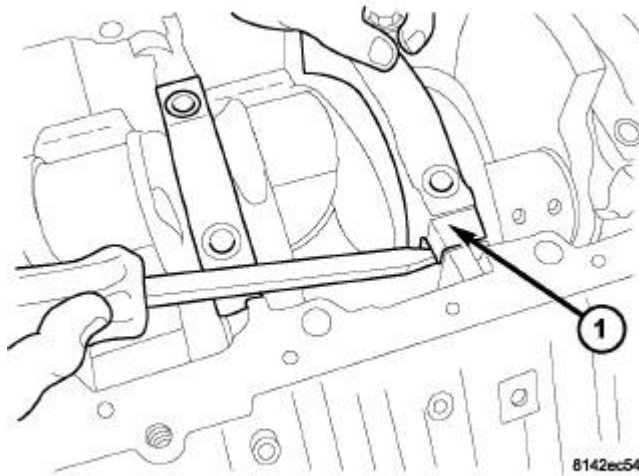


Fig. 163: MAIN CAP REMOVAL
Courtesy of CHRYSLER LLC

1 - MAIN CAP

11. Remove main bearing caps (1) and bearings one at a time.

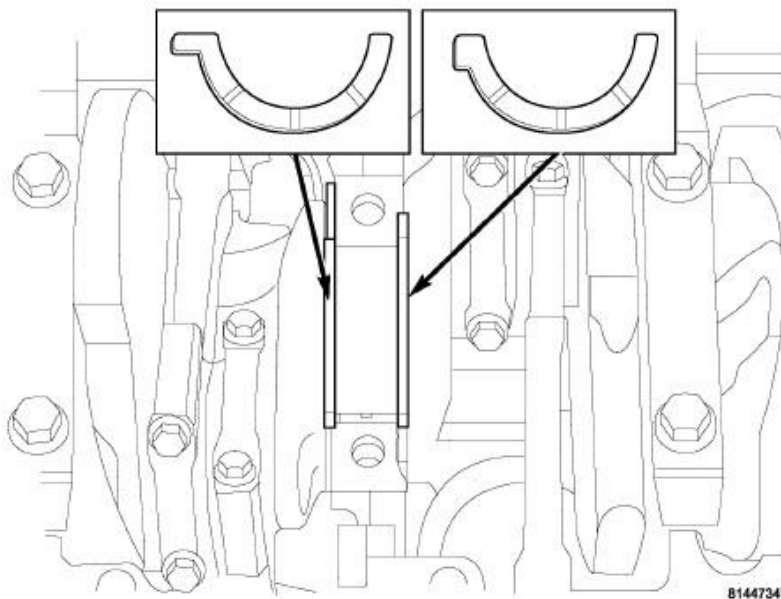
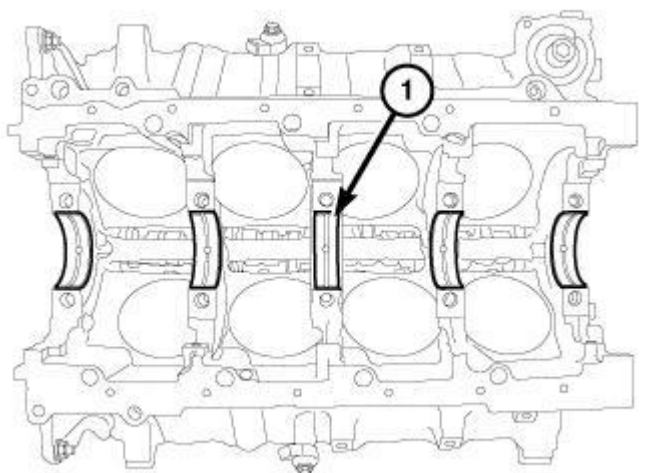


Fig. 164: THRUST WASHER LOCATION
Courtesy of CHRYSLER LLC

12. Remove the thrust washers.
13. Remove the crankshaft out of the block.


Installation**INSTALLATION**

475697

Fig. 165: Main Bearings

Courtesy of CHRYSLER LLC

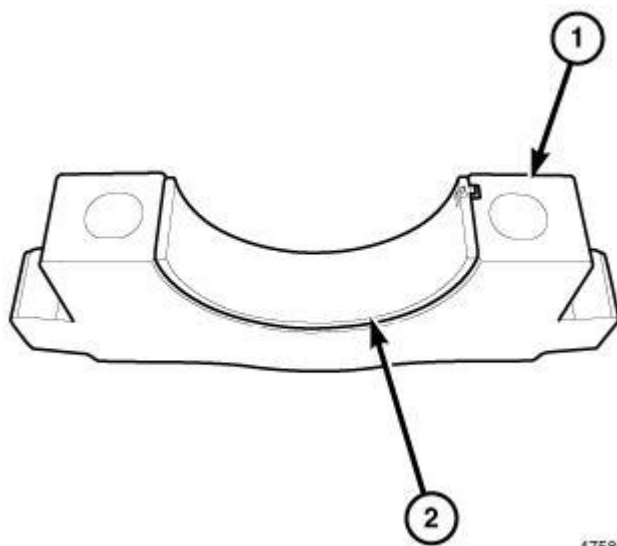1. Select the proper main bearings. See **Engine/Engine Block/BEARING(S), Crankshaft - Standard Procedure.**
2. Install main bearings in block (1).




475850

Fig. 166: Main Bearing Shells In The Bearing Caps

Courtesy of CHRYSLER LLC

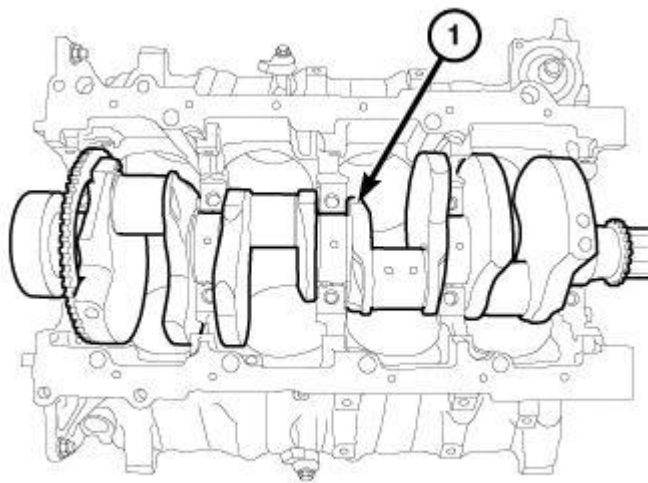
3. Install main bearing shells (2) in the bearing caps (1).



475840

Fig. 167: Crankshaft
Courtesy of CHRYSLER LLC

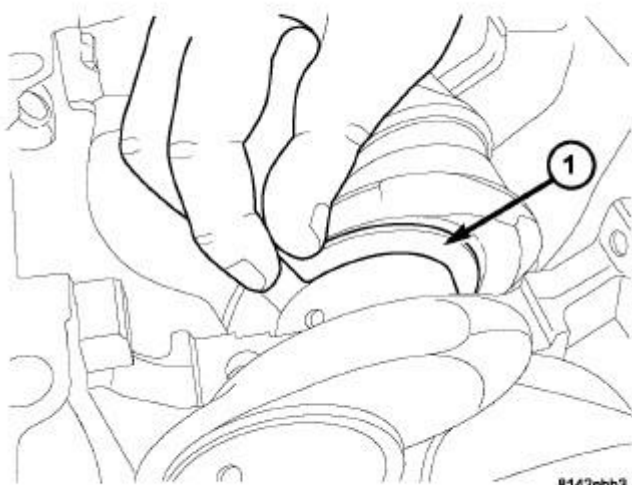
4. Lubricate the main bearing shells with clean engine oil.
5. Position the crankshaft (1) into the cylinder block.



8142ebb3

Fig. 168: THRUST WASHER REMOVAL/INSTALLATION
Courtesy of CHRYSLER LLC

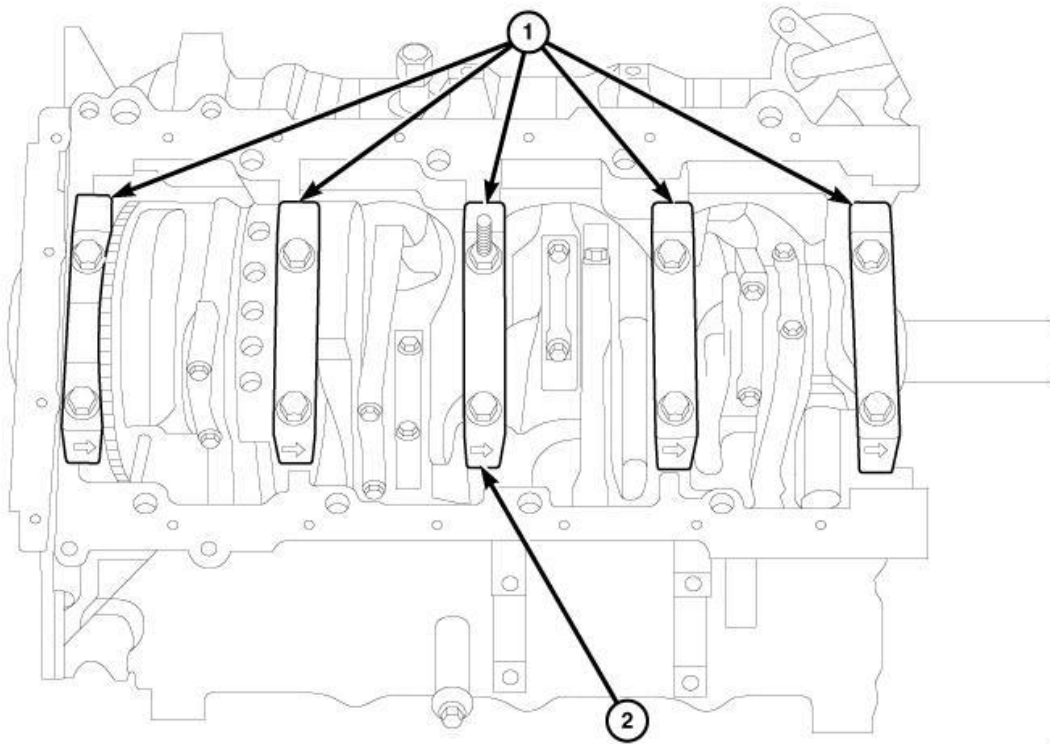6. Lubricate and install the thrust bearings (1).




44625

Fig. 169: MAIN BEARING CAPS

Courtesy of CHRYSLER LLC

NOTE: The main cap crossbolts are torqued after final torque of the main cap bolts. Always use a new washer/seal on crossbolts.

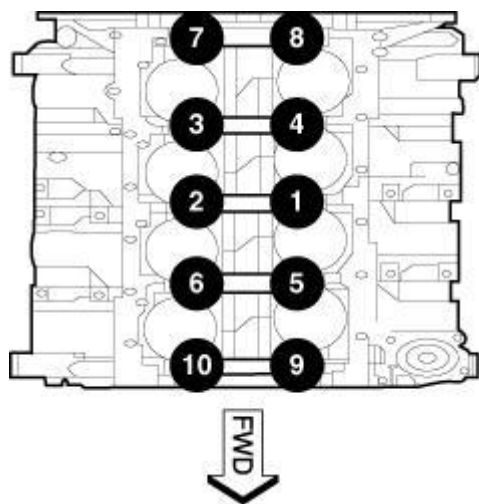7. Clean and oil all cap bolts. Install all main bearing caps (1) making sure the arrow (2) faces forward.



4715

Fig. 170: Main Bearing Cap Bolt Tightening Sequence

Courtesy of CHRYSLER LLC

8. Tighten main bearing cap bolts to 13 N.m (10 ft. lbs.) in the sequence shown in **Fig. 170**.
9. Tighten main bearing cap bolts to 27 N.m (20 ft. lbs.) in the sequence shown in **Fig. 170**.
10. Rotate main cap bolts an additional 90° in the sequence shown in **Fig. 170**.

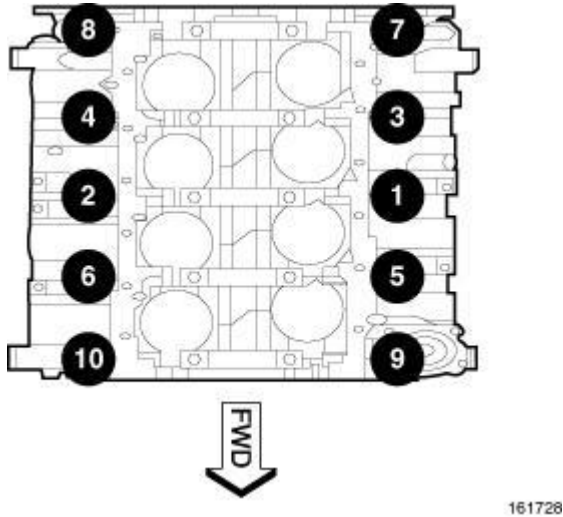


Fig. 171: Crossbolt Tightening Sequence
Courtesy of CHRYSLER LLC

11. Install the crossbolts with new seal washer. Starting with cross bolt A,
12. Tighten cross bolt to 28 N.m (21 ft. lbs.).
13. Repeat cross bolt tightening procedure.
14. Measure crankshaft end play. See **Engine/Engine Block/BEARING(S), Crankshaft - Standard Procedure**.
15. Position the connecting rods onto the crankshaft and install the rod bearing caps. See **Engine/Engine Block/ROD, Piston and Connecting - Installation**.

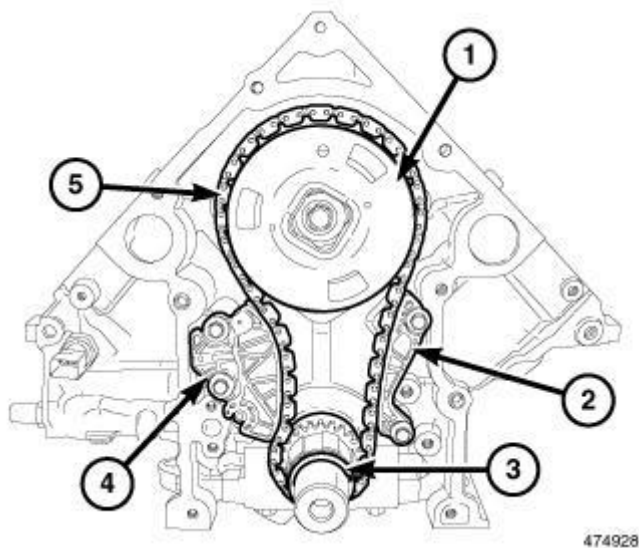


Fig. 172: Timing Chain

Courtesy of CHRYSLER LLC

16. Install timing chain (5) and sprockets (1, 3). See **Engine/Valve Timing/CHAIN and SPROCKETS, Timing - Installation**.
17. Install the timing chain tensioner (4) and guide (2).

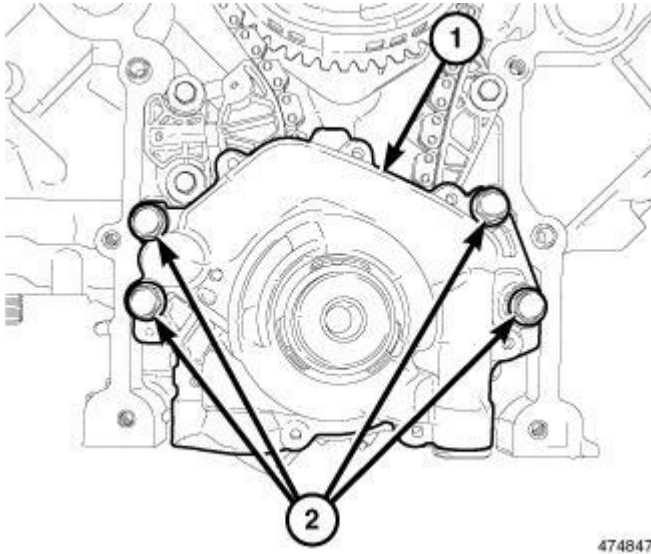


Fig. 173: Oil Pump Retaining Bolts
Courtesy of CHRYSLER LLC

18. Install the oil pump (1). See **Engine/Lubrication/PUMP, Engine Oil - Installation**.
19. Install the timing chain case cover (1). See **Engine/Valve Timing/COVER(S), Engine Timing - Installation**.

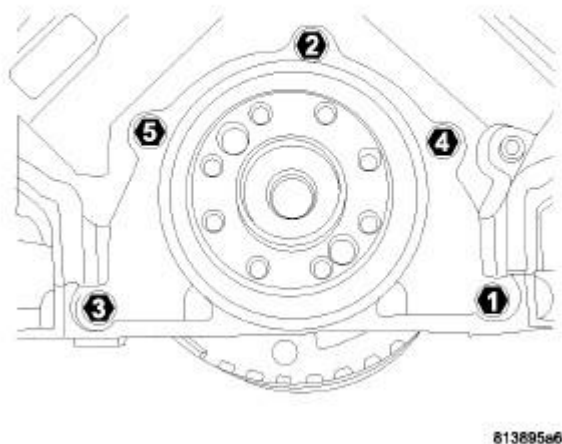


Fig. 174: REAR SEAL RETAINER TORQUE SEQUENCE

Courtesy of CHRYSLER LLC

20. Install the rear main seal and retainer. See **Engine/Engine Block/RETAINER, Crankshaft Rear Oil Seal - Installation.**

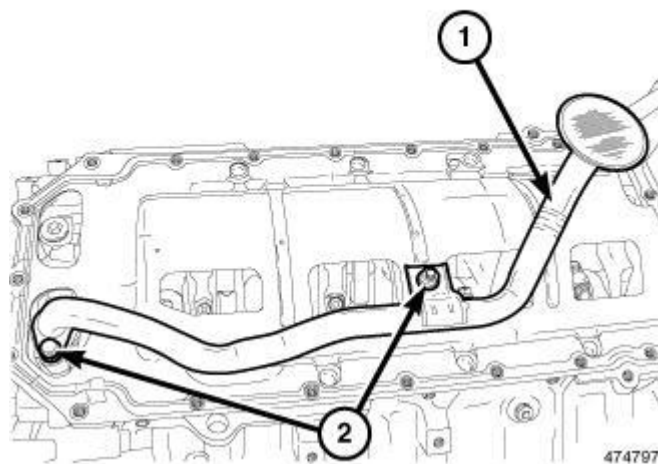


Fig. 175: Oil Pick Up Tube

Courtesy of CHRYSLER LLC

21. Install the windage tray/oil pan gasket.
22. Inspect oil pick up tube O-rings, replace as necessary.
23. Install the oil pick up tube (1) and tighten fasteners (2) to 28 Nm (248 in. lbs.).

24. Install the oil pan. See **Engine/Lubrication/PAN, Oil - Installation**.
25. Install the vibration damper. See **Engine/Engine Block/DAMPER, Vibration - Installation**.
26. Install the engine. See **Engine - Installation**.

DAMPER, VIBRATION

Removal

REMOVAL

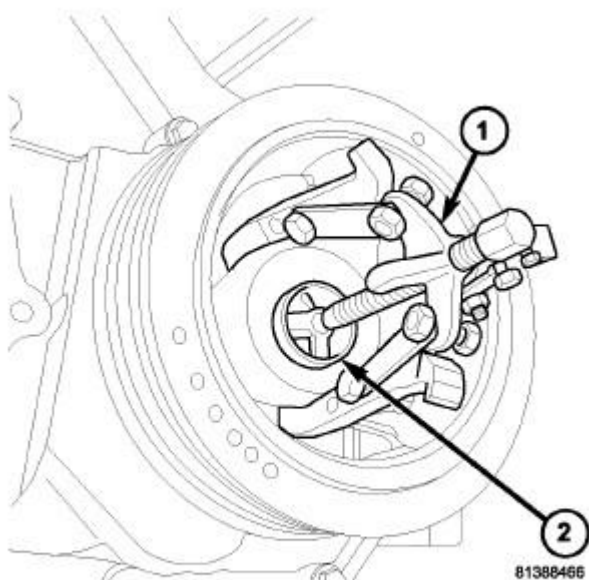


Fig. 176: CRANKSHAFT DAMPER REMOVAL
Courtesy of CHRYSLER LLC

- | |
|--|
| 1 - 3-Jaw Puller 1023
2 - Crankshaft Insert 8513A |
|--|

1. Disconnect negative cable from battery.
2. Remove accessory drive belt. Refer to **Cooling/Accessory Drive/BELT, Serpentine - Removal** .
3. Drain cooling system. Refer to **Cooling - Standard Procedure** .
4. Remove radiator upper hose.
5. Remove fan shroud. Refer to **Cooling/Engine/FAN, Cooling - Removal** .
6. Remove crankshaft damper bolt.
7. Remove damper using Crankshaft Insert 8513A and Three Jaw Puller 1023.

Installation

INSTALLATION

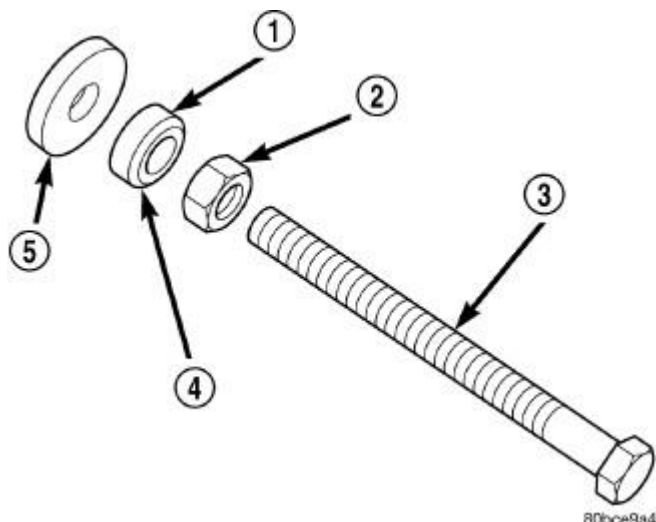


Fig. 177: Proper Assembly Method for Special Tool 8512A
Courtesy of CHRYSLER LLC

- | |
|---|
| <p>1 - BEARING
2 - NUT
3 - THREADED ROD
4 - BEARING HARDENED SURFACE (FACING NUT)
5 - HARDENED WASHER</p> |
|---|

CAUTION: To prevent severe damage to the Crankshaft, Damper or Damper Installer 8512A, thoroughly clean the damper bore and the crankshaft nose before installing Damper.

1. Slide damper onto crankshaft slightly.

CAUTION: Special Tool 8512A, is assembled in a specific sequence. Failure to assemble this tool in this sequence can result in tool failure and severe damage to either the tool or the crankshaft.

2. Assemble Damper Installer 8512A as follows, thread nut (2) onto the bolt (3) then install the roller bearing (1) followed by the hardened washer (5) slides onto the threaded rod (3). Once assembled coat the threaded rod's threads with Mopar® Nickel Anti-Seize (or equivalent).
3. Using Damper Installer 8512A, press damper onto crankshaft.
4. Install then tighten crankshaft damper bolt to 176 N.m (129 ft. lbs.).
5. Install radiator upper hose.
6. Install accessory drive belt. Refer to Cooling/Accessory Drive/BELT, Serpentine - Installation .
7. Refill cooling system. Refer to Cooling - Standard Procedure .
8. Connect negative cable to battery.

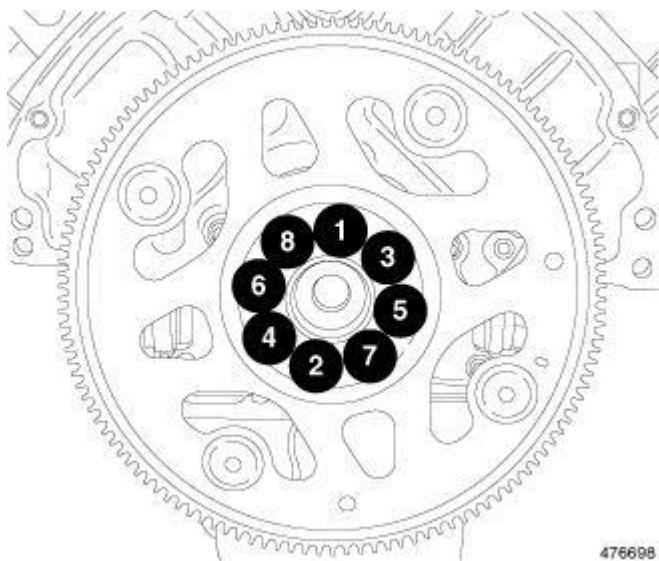
FLEXPLATE**Removal****REMOVAL**

Fig. 178: Flexplate Retaining Bolt Removal & Tightening Sequence
Courtesy of CHRYSLER LLC

1. Remove the transmission. Refer to **Transmission and Transfer Case/Automatic - 45RFE/545RFE - Removal**
2. Using the sequence shown in **Fig. 178**, remove the flexplate retaining bolts.
3. Remove the flexplate.

Installation**INSTALLATION**

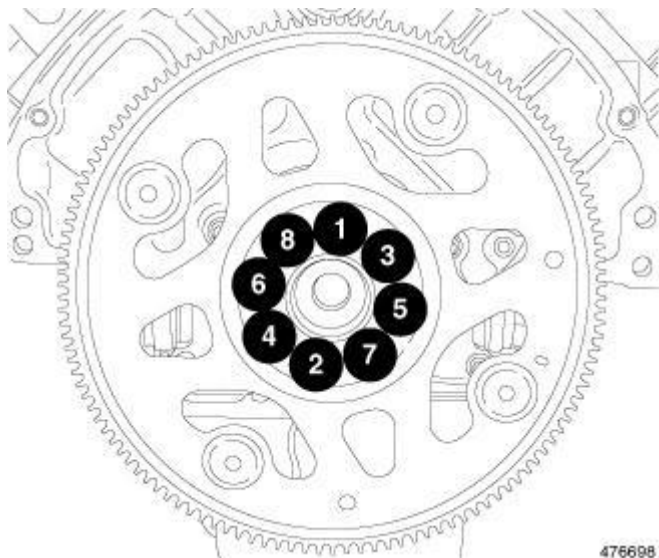


Fig. 179: Flexplate Retaining Bolt Removal & Tightening Sequence
 Courtesy of CHRYSLER LLC

1. Position the flexplate onto the crankshaft and install the retaining bolts hand tight.
2. Using the sequence shown in **Fig. 179**, tighten the flexplate retaining bolts to 95 N.m (70 ft. lbs.).
3. Install the transmission. Refer to **Transmission and Transfer Case/Automatic - 45RFE/545RFE - Installation**

LIFTER(S), HYDRAULIC, ROLLER

Diagnosis and Testing

HYDRAULIC TAPPETS

Check the oil pressure before disassembling any part of the engine to correct tappet noise. If vehicle has no oil pressure gauge, install a reliable gauge at the pressure sending-unit. The pressure should be between 207-552 kPa (30-80 psi) at 3,000 RPM.

Check the oil level after the engine reaches normal operating temperature. Allow five minutes for the oil level to stabilize before checking the oil level. The oil level in the pan should never be above the FULL mark or below the ADD OIL mark on the dipstick. Either of these two conditions could be responsible for noisy tappets.

OIL LEVEL - HIGH

If the oil level is above the FULL mark, it is possible for the connecting rods to dip into the oil. With the engine running, this condition could create foam in the oil pan. Foam in the oil pan would be fed to the hydraulic tappets by the oil pump causing them to lose length and allow the valves to seat noisily.

OIL LEVEL - LOW

Low oil level may allow the oil pump to take in air. When air is fed to the tappets, they lose length, which allows valves to seat noisily. Any leaks on the intake side of the oil pump through which air can be drawn

creates the same tappet action. Check the lubrication system from the intake strainer to the pump cover, including the relief valve retainer cap. When tappet noise is due to aeration, it may be intermittent or constant, and usually more than one tappet will be noisy. When the oil level and leaks have been corrected, operate the engine at fast idle. Run the engine for a sufficient amount of time to allow all of the air inside the tappets to be bleed out.

TAPPET NOISE DIAGNOSIS

1. To determine the source of tappet noise, crank the engine over with the cylinder head covers removed.
2. Feel each valve spring or rocker arm to detect the noisy tappet. The noisy tappet will cause the affected spring and/or rocker arm to vibrate or feel rough in operation.

NOTE: **Worn valve guides or cocked springs are sometimes mistaken for noisy tappets. If such is the case, noise may be dampened by applying side thrust on the valve spring. If noise is not appreciably reduced, it can be assumed the noise is in the tappet. Inspect the rocker arm pushrod sockets and pushrod ends for wear.**

3. Valve tappet noise ranges from light noise to a heavy click. A light noise is usually caused by excessive leak-down around the unit plunger, or by the plunger partially sticking in the tappet body cylinder. The tappet should be replaced. A heavy click is caused by a tappet check valve not seating, or by foreign particles wedged between the plunger and the tappet body. This will cause the plunger to stick in the down position. This heavy click will be accompanied by excessive clearance between the valve stem and rocker arm as valve closes. In either case, tappet assembly should be removed for inspection and cleaning.
4. The valve train generates a noise very much like a light tappet noise during normal operation. Care must be taken to ensure that tappets are making the noise. If more than one tappet seems to be noisy, it's probably not the tappets.

Removal

REMOVAL

1. Disconnect and isolate the negative battery cable.
2. Remove the cylinder head. See **Engine/Cylinder Head - Removal**

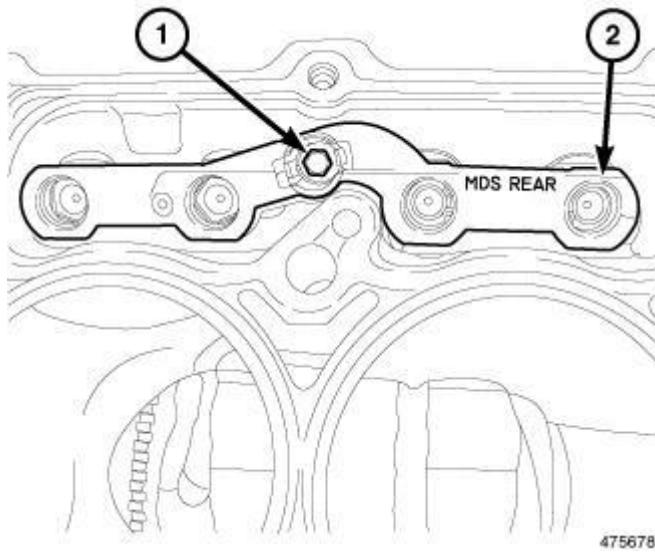


Fig. 180: Rear Multi-Displacement System Lifter Assembly
Courtesy of CHRYSLER LLC

3. Remove the tappet guide holder retaining bolt (1) from the tappet guide holder assembly (2).

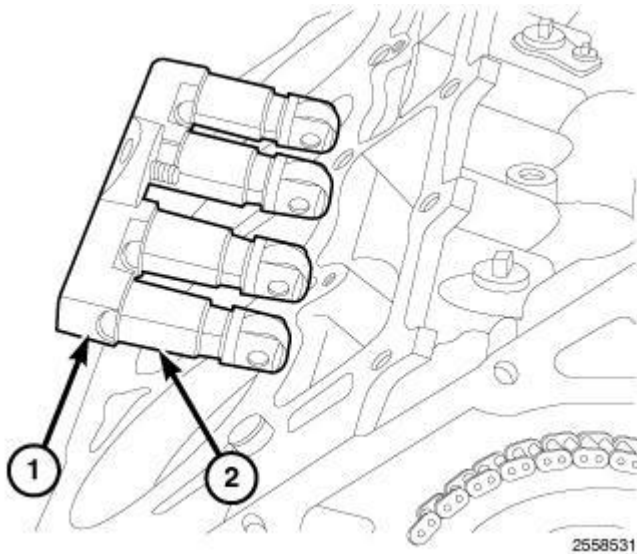


Fig. 181: Tappet Guide Holder Assembly
Courtesy of CHRYSLER LLC

CAUTION: The tappets and guide holder assembly must be installed as an assembly and in their original locations or engine damage could result.

CAUTION: If the tappets and guide holder assembly are to be reused, identify tappets to ensure installation in their original location.

4. Remove the tappet guide holder (1) and tappets (2) as an assembly.
5. Check the camshaft lobes for abnormal wear.

Installation

INSTALLATION

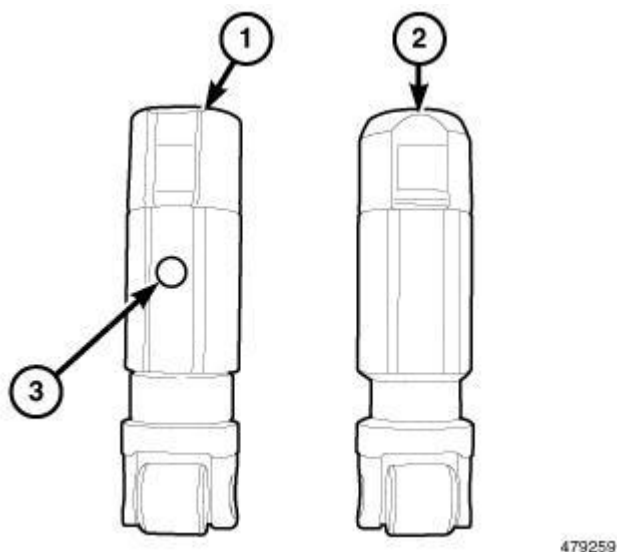


Fig. 182: Multi-Displacement System Lifter
Courtesy of CHRYSLER LLC

The Multiple Displacement System (MDS) provides cylinder deactivation during steady speed, low acceleration and shallow grade climbing conditions to increase fuel economy.

CAUTION: Engines equipped with MDS use both standard roller tappets (2) and deactivating roller tappets (1). The deactivating roller tappets must be used in cylinders 1,4,6,7. The deactivating tappets can be identified by the two holes in the side of the tappet body (3), for the latching pins.

CAUTION: The tappets and guide holder assembly must be installed as an assembly and in their original locations or engine damage could result.

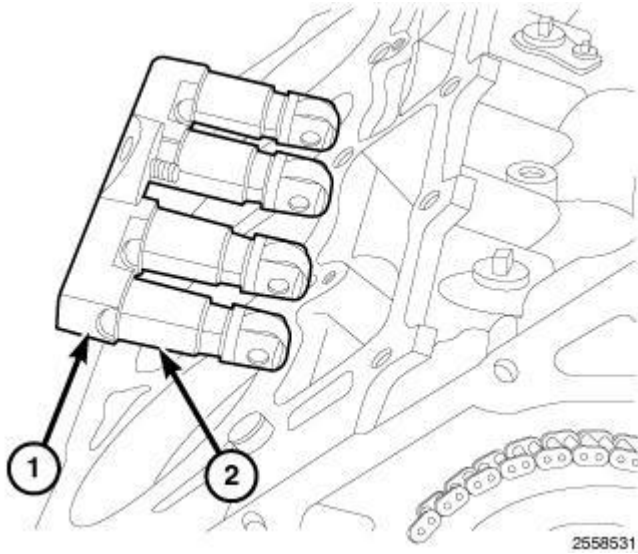


Fig. 183: Tappet Guide Holder Assembly
Courtesy of CHRYSLER LLC

1. Lubricate the tappet guide holder (1) and tappets (2).

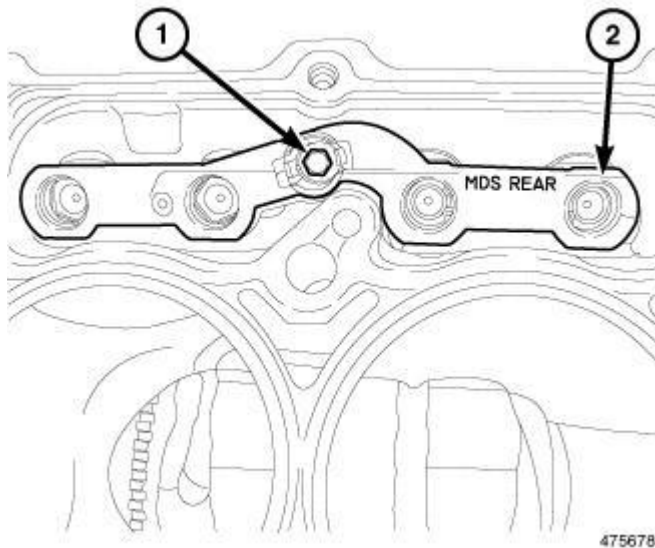


Fig. 184: Rear Multi-Displacement System Lifter Assembly
Courtesy of CHRYSLER LLC

CAUTION: If the tappets and guide holder assembly are to be reused, they must be installed in their original location.

2. Install the tappet guide holder (2) and tappets.
3. Tighten the tappet retainer bolt (1) to 12 N.m (9 ft. lbs.).
4. Install the cylinder head. See Engine/Cylinder Head - Installation.
5. Connect the negative battery cable.

CAUTION: To prevent damage to valve assemblies, do not run the engine above fast idle until all hydraulic tappets have filled with oil and have become quiet.

6. Start the engine and check for leaks.
7. Road test the vehicle.

RETAINER, CRANKSHAFT REAR OIL SEAL

Diagnosis and Testing

REAR SEAL AREA LEAKS

The crankshaft rear oil seal is integral to the crankshaft rear oil seal retainer and cannot be serviced separately.

Since it is sometimes difficult to determine the source of an oil leak in the rear seal area of the engine, a more involved inspection is necessary. The following steps should be followed to help pinpoint the source of the leak.

If the leakage occurs at the crankshaft rear oil seal area:

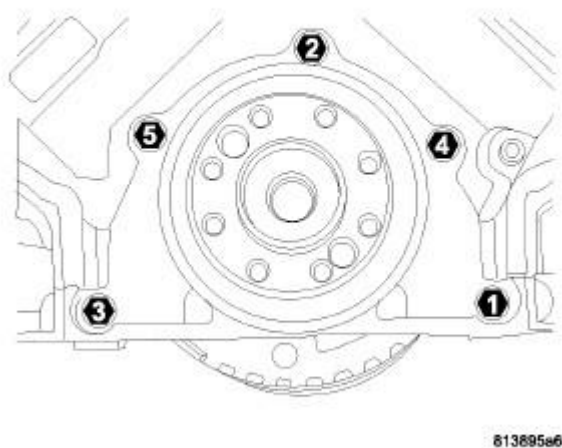
1. Raise and support the vehicle.
2. Remove the structural dust cover. See **Engine/Engine Block/COVER, Structural Dust - Removal**.
3. Inspect the rear of the cylinder block for evidence of oil leakage, note the following:
 - Circular spray pattern generally indicates seal leakage or crankshaft damage.
 - Where leakage tends to run straight down, possible causes are a porous block, camshaft bore cup plugs, oil galley pipe plugs, oil filter runoff, and main bearing cap to cylinder block mating surfaces. See appropriate component service information for proper repair procedures of these items.
4. If no leaks are detected, pressurize the crankcase as outlined in **AIR LEAK DETECTION TEST METHOD**.

CAUTION: Do not exceed 20.6 kPa (3 psi).

5. If the leak is not detected, very slowly turn the crankshaft and watch for leakage. If a leak is detected between the crankshaft and seal while slowly turning the crankshaft, it is possible the crankshaft seal surface is damaged. The seal area on the crankshaft could have minor nicks or scratches that can be polished out using an emery cloth.

CAUTION: Use extreme caution when crankshaft polishing is necessary to remove minor nicks or scratches. The crankshaft seal flange is specially machined to complement the function of the rear oil seal.

6. For bubbles that remain steady with shaft rotation, no further inspection can be done. See **Engine/Engine Block/RETAINER, Crankshaft Rear Oil Seal - Removal**.

Removal**REMOVAL****Fig. 185: REAR SEAL RETAINER TORQUE SEQUENCE**

Courtesy of CHRYSLER LLC

- NOTE:** The crankshaft rear oil seal is integral to the crankshaft rear oil seal retainer and must be replaced as an assembly.
- NOTE:** The crankshaft rear oil seal retainer can not be reused after removal.
- NOTE:** This procedure can be performed in vehicle.

1. Disconnect the negative battery cable.
2. Remove the transmission. Refer to **REMOVAL** .
3. Remove the flexplate. See **Engine/Engine Block/FLEXPLATE - Removal**.
4. Remove the oil pan. See **Engine/Lubrication/PAN, Oil - Removal**.
5. Using the sequence shown in **Fig. 185**, remove the rear oil seal retainer mounting bolts.
6. Carefully remove the retainer from the engine block.

Installation**INSTALLATION**

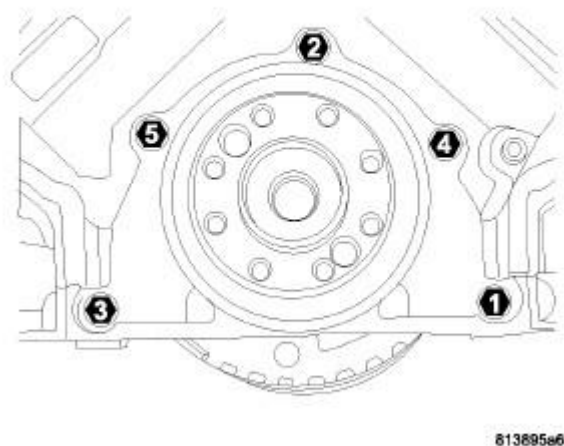


Fig. 186: REAR SEAL RETAINER TORQUE SEQUENCE

Courtesy of CHRYSLER LLC

NOTE: The crankshaft rear oil seal is integral to the crankshaft rear oil seal retainer and must be replaced as an assembly.

NOTE: The crankshaft rear oil seal retainer can not be reused after removal.

1. Thoroughly clean all gasket residue from the engine block.
2. Position the gasket onto the new crankshaft rear oil seal retainer.
3. Position the crankshaft rear oil seal retainer onto the engine block.
4. Using the sequence shown in **Fig. 186**, install the crankshaft rear oil seal retainer mounting bolts and tighten to 15 N.m (11 ft. lbs.).
5. Install the oil pan. See **Engine/Lubrication/PAN, Oil - Installation**.
6. Install the flexplate. See **Engine/Engine Block/FLEXPLATE - Installation**.
7. Install the transmission. Refer to **INSTALLATION**.
8. Fill the engine with oil.
9. Start the engine and check for leaks.

RING(S), PISTON

Standard Procedure

PISTON RING FITTING

PISTON RING END GAP

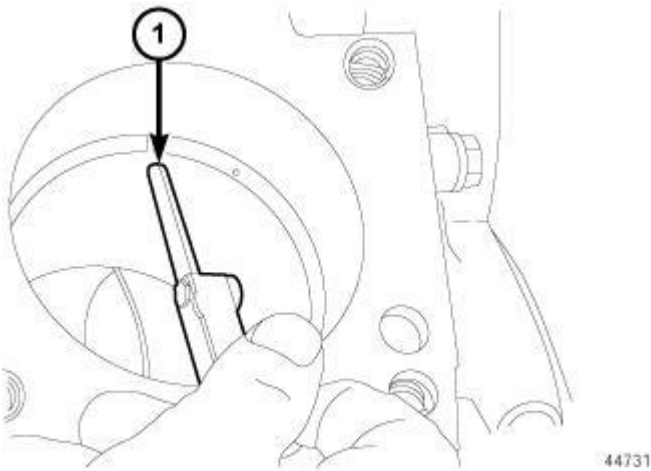


Fig. 187: Checking Piston Ring End Gap Using Feeler Gauge
Courtesy of CHRYSLER LLC

NOTE: Before reinstalling used rings or installing new rings, the ring clearances must be checked.

1. Wipe the cylinder bore clean.
2. Insert the ring in the cylinder bore.

NOTE: The ring gap measurement must be made with the ring positioned at least **12 mm (0.50 inch.)** from bottom of cylinder bore.

3. Using a piston, to ensure that the ring is squared in the cylinder bore, slide the ring downward into the cylinder.
4. Using a feeler gauge check the ring end gap. Replace any rings not within specification.

PISTON RING SIDE CLEARANCE

NOTE: Make sure the piston ring grooves are clean and free of nicks and burrs.

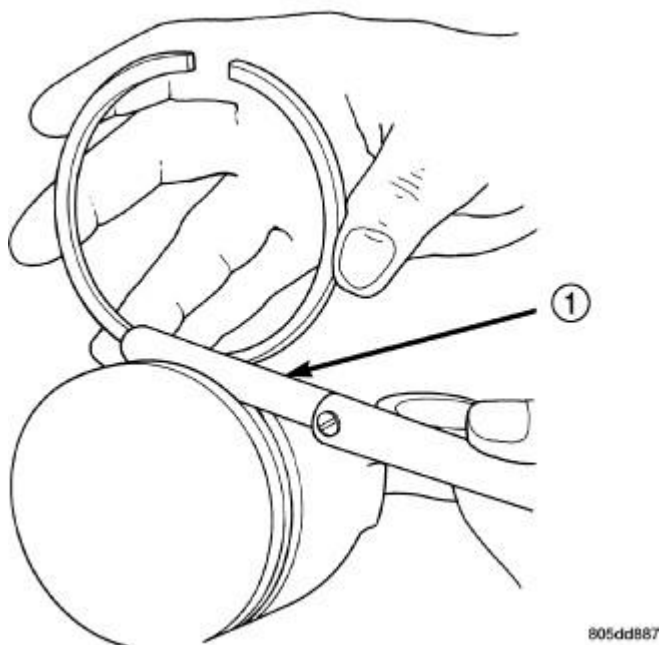


Fig. 188: Measuring Piston Ring Side Clearance
Courtesy of CHRYSLER LLC

1. Measure the ring side clearance as shown in **Fig. 188**. Make sure the feeler gauge (1) fits snugly between the ring land and the ring. Replace any ring not within specification.
2. Rotate the ring around the piston, the ring must rotate in the groove with out binding.

PISTON RING SPECIFICATION CHART

Piston Ring Position	Piston Ring Side Clearance	Maximum Clearance
Upper Ring	Metric -	-
	Standard 0.04 - 0.09 mm	0.11 mm
Intermediate Ring	Metric 0.0015 - 0.0035 in.	0.004 in.
	Standard -	-
Intermediate Ring	Metric 0.04 - 0.08 mm	0.10 mm
	Standard 0.0015 - 0.0031 in.	0.004 in.
Piston Ring Position	Piston Ring End Gap	Wear Limit
Upper Ring	Metric -	-
	Standard 0.40 - 0.55 mm	0.43 mm
Intermediate Ring	Metric 0.0157 - 0.0216 in.	0.017 in.
	Standard -	-
Oil Control Ring (Steel Rail)	Metric 0.24 - 0.51 mm	0.74 mm
	Standard 0.0094 - 0.0200 in.	0.029 in.
Oil Control Ring (Steel Rail)	Metric -	-
	Standard 0.015 - 0.66 mm	0.76 mm
	Standard 0.0059 - 0.0259 in.	0.030 in.

PISTON RING INSTALLATION



Fig. 189: SIDE RAIL - INSTALLATION

Courtesy of CHRYSLER LLC

NOTE: The No. 1 and No. 2 piston rings have a different cross section. Ensure No. 2 ring is installed with manufacturers I.D. mark (Dot) facing up, towards top of the piston.

NOTE: Piston rings are installed in the following order:

- Oil ring expander.
- Lower oil ring side rail.
- Upper oil ring side rail.
- No. 2 Intermediate piston ring.
- No. 1 Upper piston ring.

1. Install the oil ring expander.
2. Install upper side rail by placing one end between the piston ring groove and the expander ring. Hold end firmly and press down the portion to be installed until side rail is in position. Repeat this step for the lower side rail.


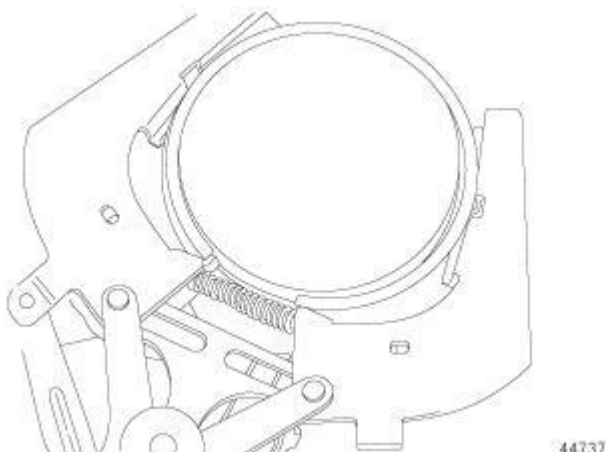


Fig. 190: UPPER AND INTERMEDIATE RINGS
Courtesy of CHRYSLER LLC

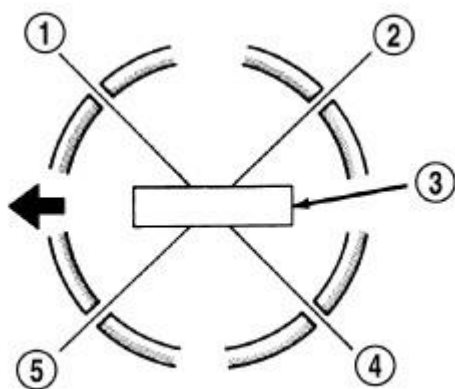3. Install No. 2 intermediate piston ring using a piston ring installer.
4. Install No. 1 upper piston ring using a piston ring installer.



RR09B48

Fig. 191: PISTON RING END GAP POSITION
Courtesy of CHRYSLER LLC

NOTE: Install the piston rings so the gaps positioned as indicated with the piston viewed from the top.

NOTE: Staggering ring gap is important for oil control.

5. Install the oil expander so the ring gap is located in the (1) position.
6. Install the oil ring rails so the ring gap is located in the (2,4) position.
7. Install the second compression ring so the ring gap is located in the (3) position.
8. Install the top compression so the ring gap is located in the (1) position.

ROD, PISTON AND CONNECTING

Description

DESCRIPTION

CAUTION: Do not use a metal stamp to mark connecting rods as damage may result, instead use ink or a scratch awl.

The pistons are made of a high strength aluminum alloy. Piston skirts are coated with a solid lubricant (Molykote®) to reduce friction and provide scuff resistance. The piston top ring groove and land is anodized. The connecting rods are made of forged powdered metal, with a fractured cap design.

Standard Procedure

PISTON FITTING

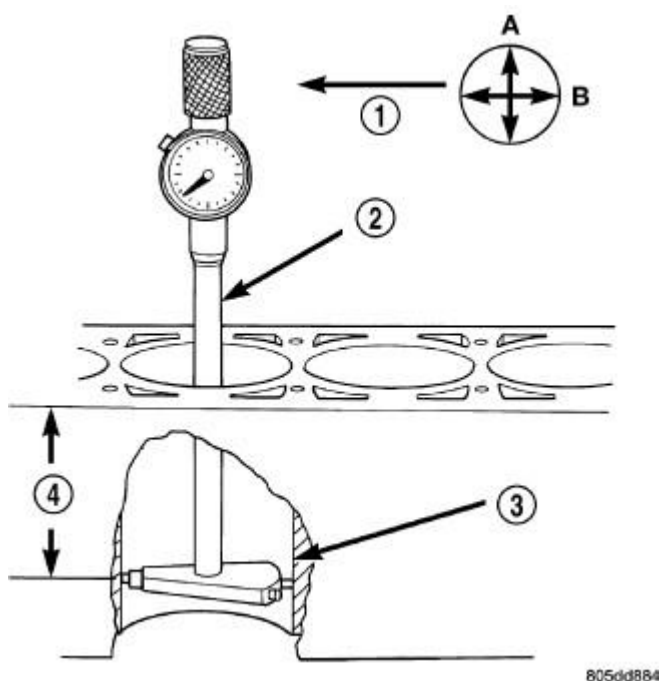


Fig. 192: Measuring Inside Diameter Of Cylinder Bore Using Dial Bore Gauge
Courtesy of CHRYSLER LLC

1. To correctly select the proper size piston, a cylinder bore gauge (2), capable of reading in 0.003 mm (0.0001 in.) INCREMENTS is required. If a bore gauge is not available, do not use an inside micrometer.
2. Measure the inside diameter of the cylinder bore at a point 38.0 mm (1.5 inches) below top of bore (4). Start perpendicular (across or at 90 degrees) to the axis of the crankshaft at point A (1) and then take an additional bore reading 90 degrees to that at point B (1).
3. The coated pistons will be serviced with the piston pin and connecting rod pre-assembled. The piston-rod assembly is specific for the left cylinder bank (odd numbered) and the right cylinder bank (even

numbered) and must not be interchanged.

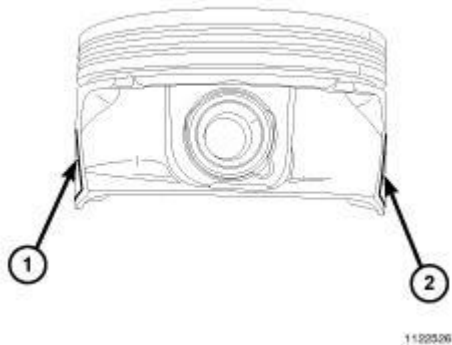


Fig. 193: Piston Diameter Measuring Points
Courtesy of CHRYSLER LLC

4. Measure the piston diameter with a micrometer at points (1,2).

Removal

REMOVAL


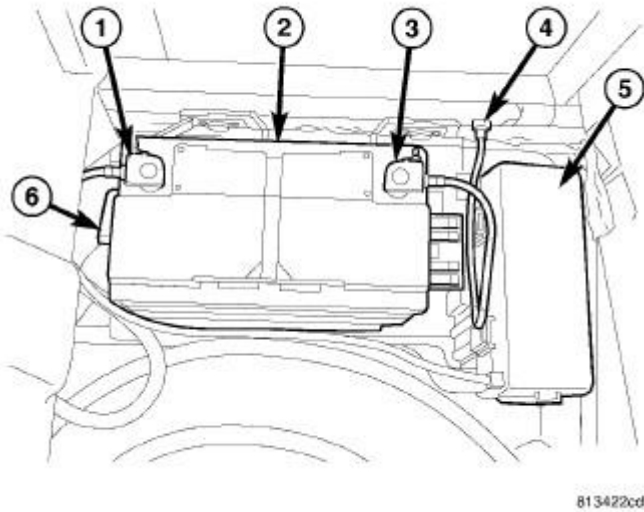


Fig. 194: Battery System Components And PDC Cover
Courtesy of CHRYSLER LLC

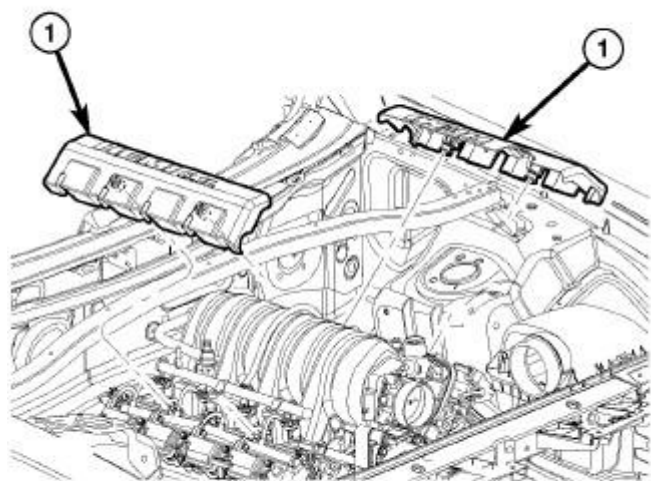
1. Perform the fuel system pressure release procedure. Refer to **Fuel System/Fuel Delivery - Standard Procedure** .
2. Disconnect and isolate the negative battery cable (3).



815caa1a

Fig. 195: Removing/Installing Engine Covers
Courtesy of CHRYSLER LLC

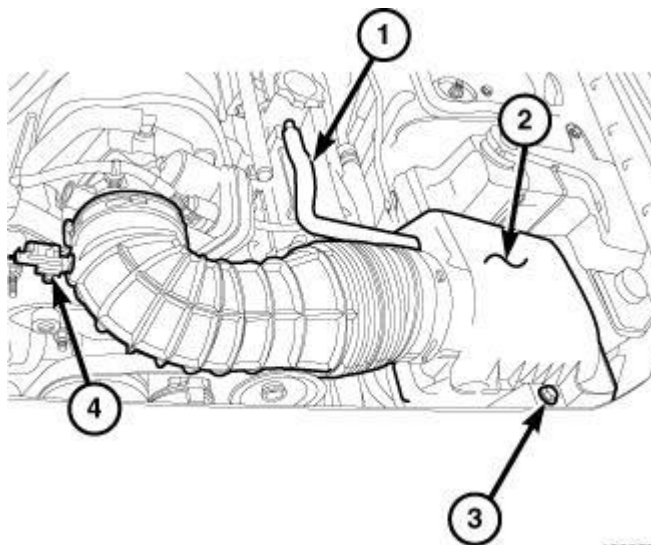3. Remove the engine covers (1).



163967

Fig. 196: Air Duct To Throttle Body
Courtesy of CHRYSLER LLC

4. Loosen clamp and disconnect the air duct at throttle body.
5. Disconnect the intake air temperature sensor (4) electrical connector.
6. Remove the makeup air hose (1).
7. Remove the air cleaner housing retaining bolt (3) and remove the air cleaner housing (2).

8. Remove the cylinder head(s). See **Engine/Cylinder Head - Removal**.
9. Raise and support the vehicle.

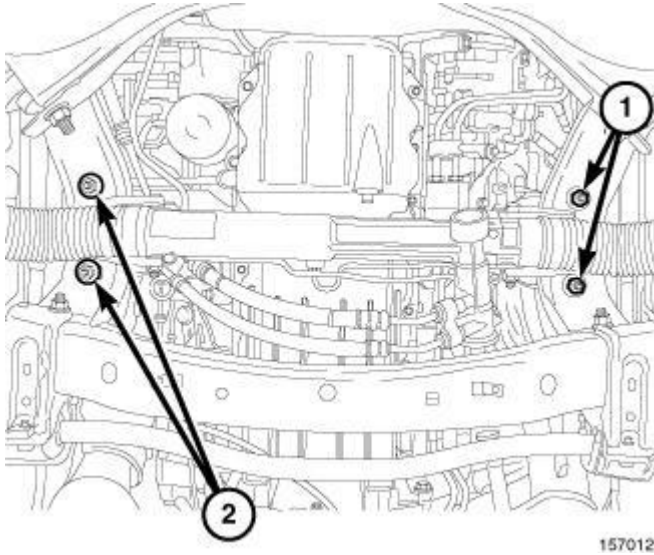


Fig. 197: Engine Mount Nuts
Courtesy of CHRYSLER LLC

10. Remove the engine mount nuts (1,2).

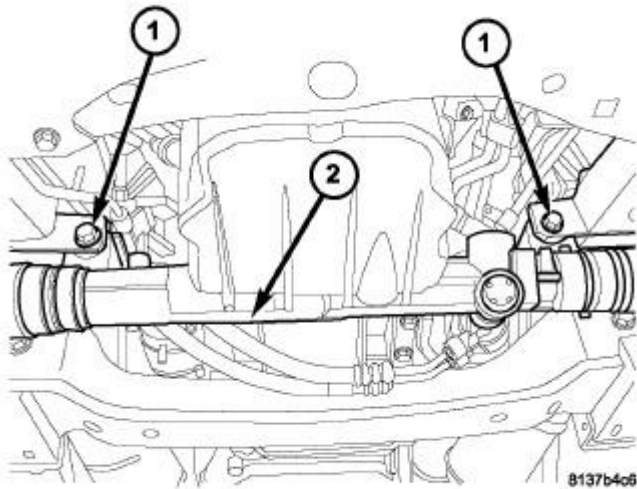


Fig. 198: GEAR MOUNTING BOLTS
Courtesy of CHRYSLER LLC

11. Remove the steering gear mounting bolts (1) and position the steering gear (2) aside.
12. Remove the engine oil dipstick and tube from the oil pan.
13. Lower the vehicle.

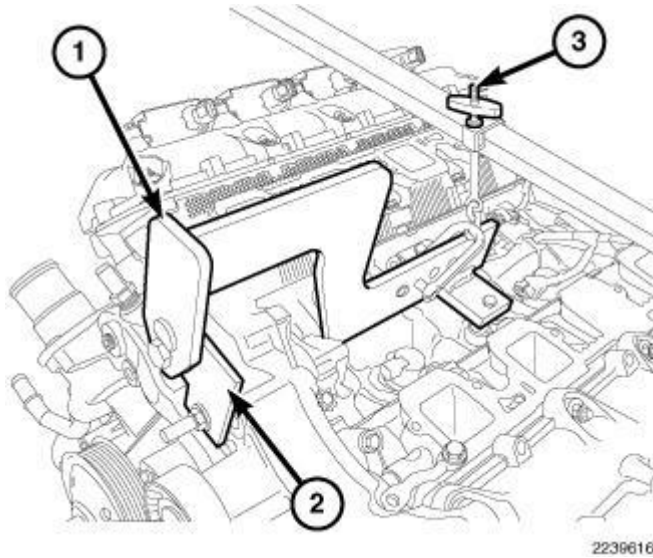


Fig. 199: Engine Lift Fixture & Adapter
Courtesy of CHRYSLER LLC

NOTE: Do not use air tools to install engine lift fixture.

14. Install the Engine Lift Fixture 8984A (1), Engine Lift Adapter 8984-UPD (2) and the Engine Support Fixture 8534B (3).
15. Raise the engine to provide clearance to remove the oil pan.
16. Raise and support the vehicle.
17. Remove the oil pan. See Engine/Lubrication/PAN, Oil - Removal.
18. Lower the vehicle.
19. Remove the timing chain cover. See Engine/Valve Timing/COVER(S), Engine Timing - Removal.
20. If necessary, remove the ridge on top of the cylinder bores with a reliable ridge reamer before removing the pistons from the cylinder block. **Be sure to keep the tops of the pistons covered during this operation.**

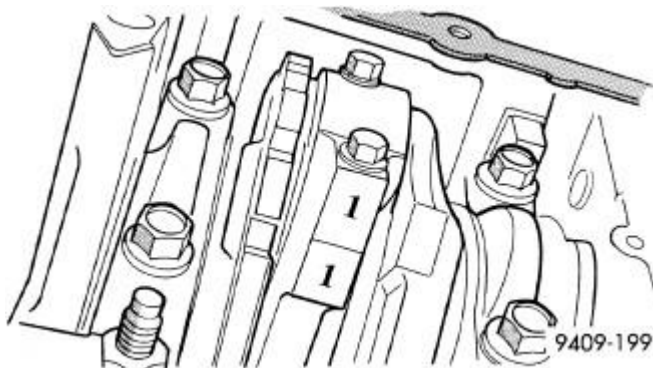


Fig. 200: Marking Connecting Rod & Bearing Cap Positions
Courtesy of CHRYSLER LLC

CAUTION: Do Not use a number stamp or a punch to mark connecting rods or caps, as damage to connecting rods could occur.

NOTE: Connecting rods and bearing caps are not interchangeable and should be marked before removal to ensure correct reassembly.

21. Raise and support the vehicle.
22. Mark the connecting rod and bearing cap positions using a permanent ink marker or scribe tool.

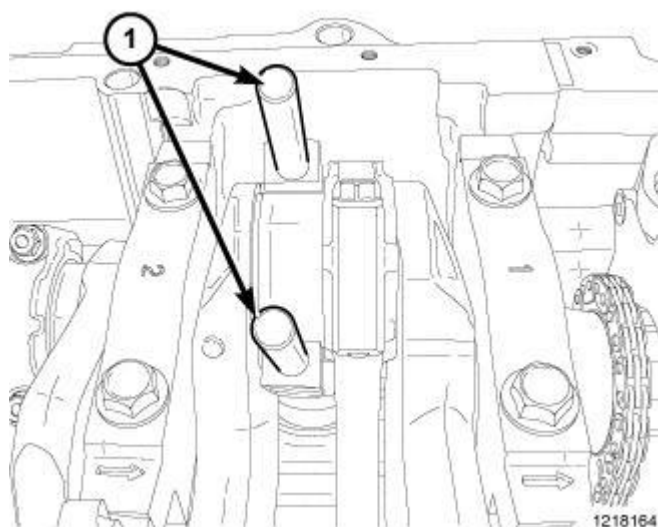


Fig. 201: Connecting Rod Guides
Courtesy of CHRYSLER LLC

CAUTION: Care must be taken not to damage the fractured rod and cap joint face surfaces, as engine damage may occur.

CAUTION: Care must be taken not to nick crankshaft journals, as engine damage may occur.

NOTE: Pistons and connecting rods assemblies must be removed from the top of cylinder block. When removing the piston and connecting rod assemblies from the engine, rotate the crankshaft so each connecting rod is centered in the cylinder bore.

23. Remove the connecting rod cap, install the Connecting Rod Guides 8507 (1) and carefully remove the piston from the cylinder bore, repeat this procedure for each piston being removed.
24. Immediately after removing the piston and connecting rod, install the bearing cap on the mating connecting rod to prevent damage to the fractured cap and rod surfaces.
25. Carefully remove the piston rings from the piston(s), starting from the top ring down.

Cleaning**CLEANING**

CAUTION: Do not use a wire wheel or other abrasive cleaning device to clean the pistons or connecting rods. The pistons have a moly coating, this coating must not be damaged.

1. Using a suitable cleaning solvent, clean the pistons in warm water and towel dry.
2. Use a wood or plastic scraper to clean the ring land grooves.

CAUTION: Do not remove the piston pin from the piston and connecting rod assembly.

Inspection**INSPECTION**

Check the connecting rod journal for excessive wear, taper and scoring. See **Engine/Engine Block/ROD, Piston and Connecting - Standard Procedure**.

Check the connecting rod for signs of twist or bending.

Check the piston for taper and elliptical shape before it is fitted into the cylinder bore. See **Engine/Engine Block/ROD, Piston and Connecting - Standard Procedure**.

Check the piston for scoring or scraping marks in the piston skirts. Check the ring lands for cracks and/or deterioration.

Installation**INSTALLATION**

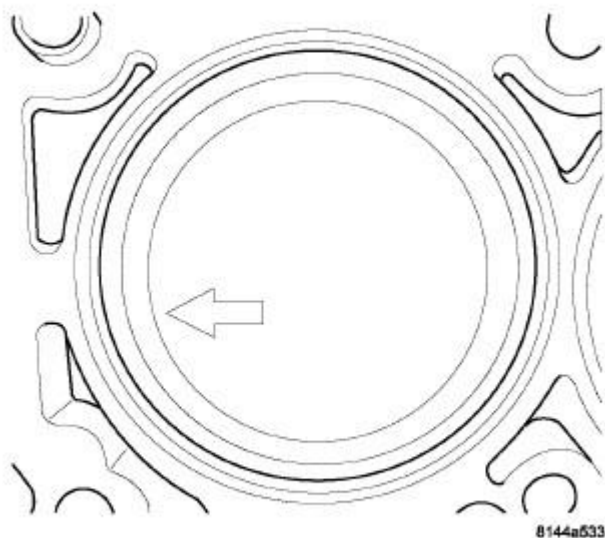


Fig. 202: PISTON DIRECTION ARROW

Courtesy of CHRYSLER LLC

1. Before installing piston and connecting rod assemblies into the bore, install the piston rings. See **Engine/Engine Block/RING(S), Piston - Standard Procedure**.
2. Immerse the piston head and rings in clean engine oil. Position a ring compressor over the piston and rings. Tighten ring compressor. **Make sure the position of the rings do not change during this operation.**
3. Position bearing onto connecting rod. Lubricate bearing surface with clean engine oil.
4. Install Connecting Rod Guides 8507 into connecting rod bolt threads.
5. The pistons are marked on the piston pin bore surface with an raised "F" or arrow on top of piston indicating installation position. This mark must be pointing toward the front of engine on both cylinder banks.
6. Wipe cylinder bore clean and lubricate with engine oil.
7. Rotate crankshaft until connecting rod journal is on the center of cylinder bore. Insert rod and piston into cylinder bore and carefully position connecting rod guides over crankshaft journal.
8. Tap piston down in cylinder bore using a hammer handle. While guiding the connecting rod into position on rod journal.

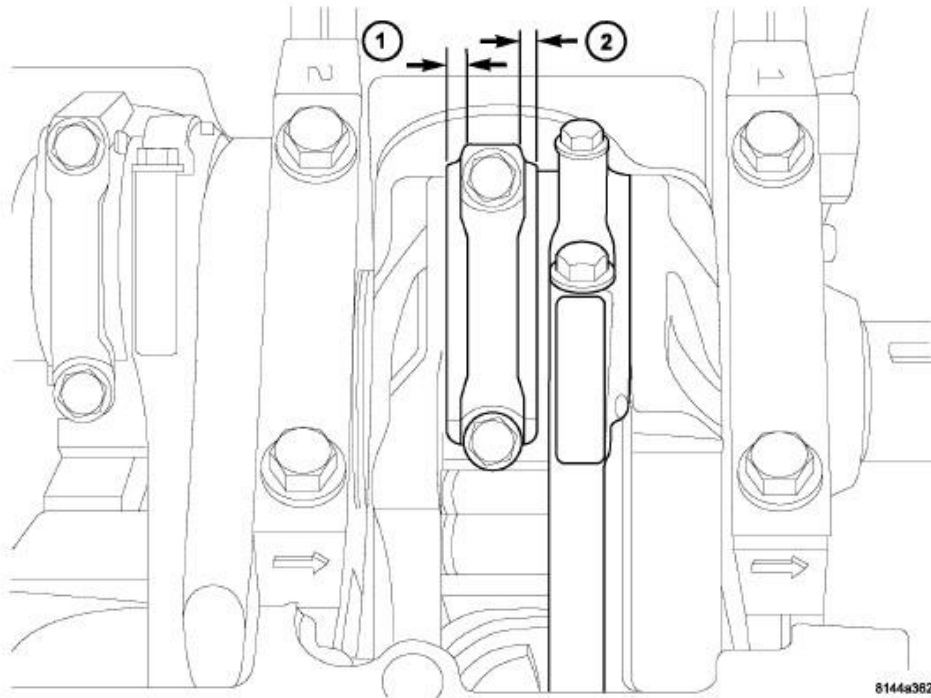


Fig. 203: CONNECTING ROD REMOVAL/INSTALLATION

Courtesy of CHRYSLER LLC

CAUTION: The connecting rod bolts must not be reused. Always replace the connecting rod bolts whenever they are loosened or removed.

9. Wipe connecting rod cap clean and install bearing.
10. Lubricate with clean engine oil and install new rod bolts.
11. Lubricate bearing surfaces with clean engine oil. Tighten bolts to 21 N.m (15 ft. lbs.) plus a 90° turn.
12. Cylinder head(s). See **Engine/Cylinder Head - Installation**.
13. Cylinder head covers. See **Engine/Cylinder Head/COVER(S), Cylinder Head - Installation**.
14. Install the intake manifold.
15. Oil pan and gasket/windage tray. See **Engine/Lubrication/PAN, Oil - Installation**.
16. Fill crankcase with proper engine oil to correct level.
17. Connect negative cable to battery.

SEAL, CRANKSHAFT OIL, FRONT

Removal

REMOVAL

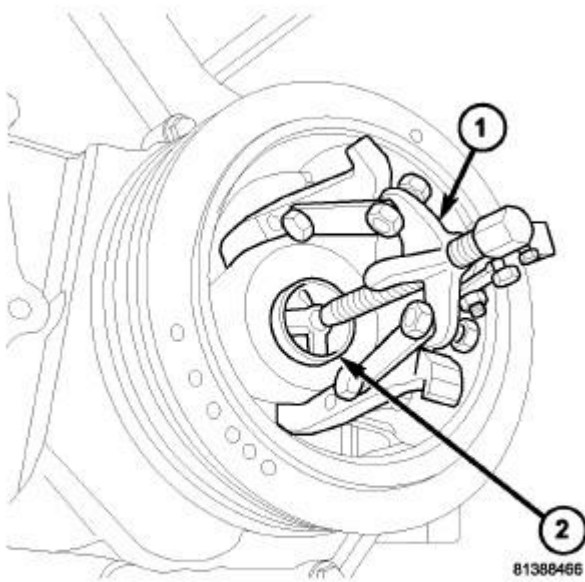


Fig. 204: CRANKSHAFT DAMPER REMOVAL
Courtesy of CHRYSLER LLC

- | |
|--|
| 1 - 3-Jaw Puller 1023
2 - Crankshaft Insert 8513A |
|--|

1. Disconnect negative cable from battery.
2. Remove accessory drive belt. Refer to **Cooling/Accessory Drive/BELT, Serpentine - Removal** .
3. Drain cooling system. Refer to **Cooling - Standard Procedure** .
4. Remove upper radiator hose.
5. Remove radiator shroud attaching fasteners.
6. Remove radiator cooling fan and shroud. Refer to **Cooling/Engine/FAN, Cooling - Removal** .
7. Remove crankshaft damper bolt.
8. Remove damper using Crankshaft insert 8513A (2) and Three Jaw Puller 1023 (1). See **Engine/Engine Block/DAMPER, Vibration - Removal**.

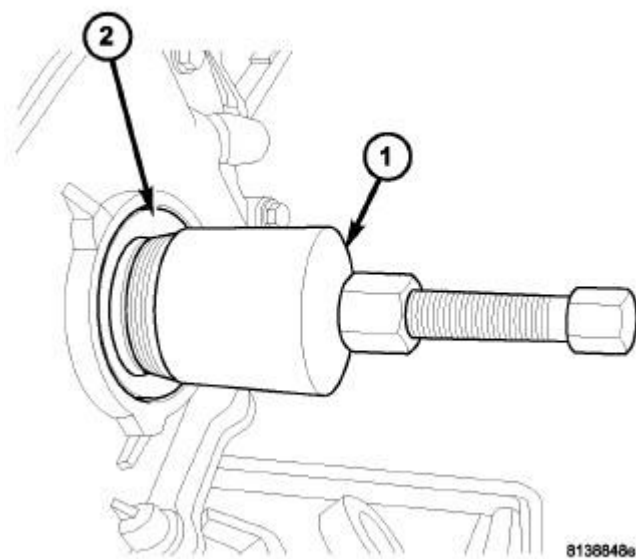



Fig. 205: FRONT CRANKSHAFT SEAL REMOVAL
Courtesy of CHRYSLER LLC

1 - Crankshaft Front Seal Remover 9071 2 - Seal
--

9. Using Crankshaft Front Seal Remover 9071 (1), remove crankshaft front seal (2).

Installation

INSTALLATION

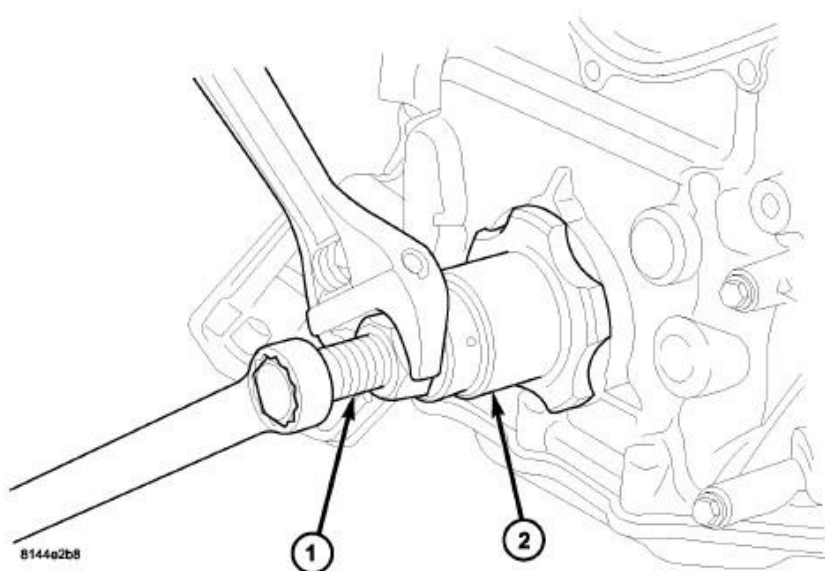**Fig. 206: FRONT SEAL INSTALLATION**

Courtesy of CHRYSLER LLC

CAUTION: The front crankshaft seal must be installed dry. Do not apply lubricant to the sealing lip or the outer edge.

1. Using Crankshaft Front Oil Seal Installer 9072 (2) and Damper Installer 8512A (1), install crankshaft front seal.

CAUTION: To prevent severe damage to the crankshaft or damper, thoroughly clean the damper bore and the crankshaft nose before installing damper.

2. Install vibration damper. See Engine/Engine Block/DAMPER, Vibration - Installation.
3. Install radiator cooling fan and shroud. Refer to Cooling/Engine/FAN, Cooling - Installation.
4. Install upper radiator hose.
5. Install accessory drive belt refer. Refer to Cooling/Accessory Drive/BELT, Serpentine - Installation.
6. Refill cooling system. Refer to Cooling - Standard Procedure
7. Connect negative cable to battery.

SEAL, CRANKSHAFT OIL, REAR

Description

DESCRIPTION

The crankshaft rear oil seal is integral to the crankshaft rear oil seal retainer, for more information refer to the

following;

- See **Engine/Engine Block/RETAINER, Crankshaft Rear Oil Seal - Diagnosis and Testing.**
- See **Engine/Engine Block/RETAINER, Crankshaft Rear Oil Seal - Removal.**
- See **Engine/Engine Block/RETAINER, Crankshaft Rear Oil Seal - Installation.**

SOLENOID, MULTIPLE DISPLACEMENT

Description

DESCRIPTION

The Multi Displacement System selectively deactivates cylinders 1,4,6, and 7, to improve fuel economy. It has two modes of operation:

- 8 cylinders for acceleration and heavy loads.
- 4 cylinders for cruising and city traffic.

The main components of the Multi Displacement System are:

- Unique MDS camshaft.
- Deactivating roller tappets.
- 4 control valves/solenoids.
- control valve/solenoid wiring harness.
- oil temp sensor.

Operation

OPERATION

Cylinder Deactivation

- Trap an exhaust charge from a normal combustion event
- Normal combustion event
- Don't open the exhaust valve
- Don't open the intake valve
- Piston is an air spring
- Cylinders deactivated in firing sequence

Cylinder Reactivation

- Open the exhaust valve
- Empty the cylinder
- Open the intake valve

- Normal combustion event
- Cylinders reactivated in firing sequence

Diagnosis and Testing

MDS SOLENOID

The Multi-Displacement System (MDS) has the following detectable issues:

- solenoid circuit
- fail to deactivate a cylinder(s)
- fail to reactivate a cylinder(s)
- low oil pressure

CONDITION	POSSIBLE CAUSES	CORRECTION
MDS does not activate	1. Low oil pressure.	1. Check for proper oil pressure.
-	2. Bad oil temperature sensor.	2. Replace the oil temperature sensor.
-	3. Malfunctioning MDS solenoid.	3. Replace the solenoid.
	4. Malfunctioning MDS tappet.	4. Replace tappet (s).
MDS does not deactivate	1. Low oil pressure.	1. Check or proper oil pressure.
-	2. Bad oil temperature sensor.	2. Replace the oil temp sensor.
-	3. Malfunctioning MDS solenoid.	3. Replace the solenoid.
-	4. Malfunctioning MDS tappet.	4. Replace tappet(s).

Removal

REMOVAL

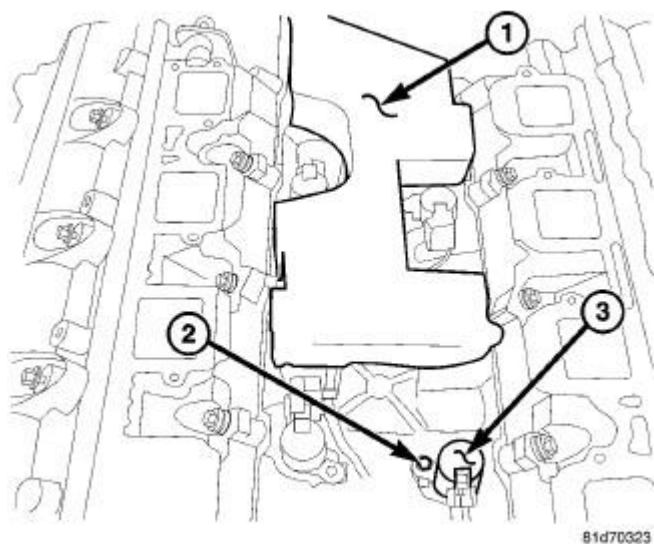


Fig. 207: Identifying MDS Solenoid & Intake Manifold Foam Insulator Pad

Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Remove the intake manifold. See Engine/Manifolds/MANIFOLD, Intake - Removal.
3. Remove foam insulator pad (1).

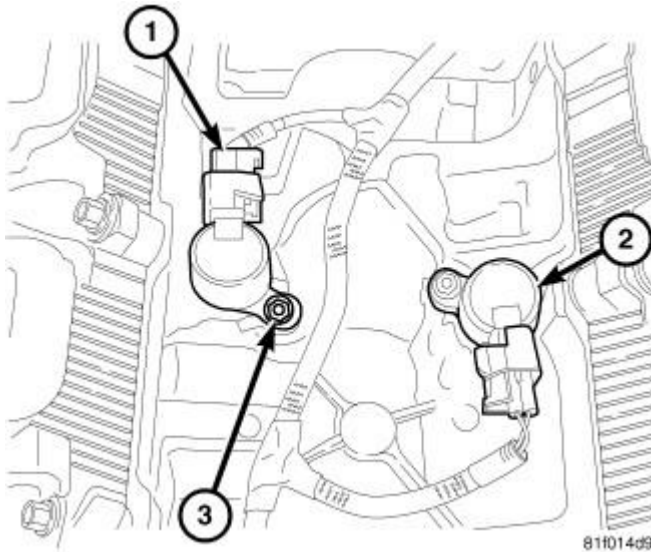


Fig. 208: Identifying MDS Solenoid Retaining Bolt & Electrical Connector
Courtesy of CHRYSLER LLC

4. Remove wiring harness connectors (1) from the MDS solenoid(s) (2) that require removal.
5. Remove hold down bolt (3) from MDS solenoid(s) (2).

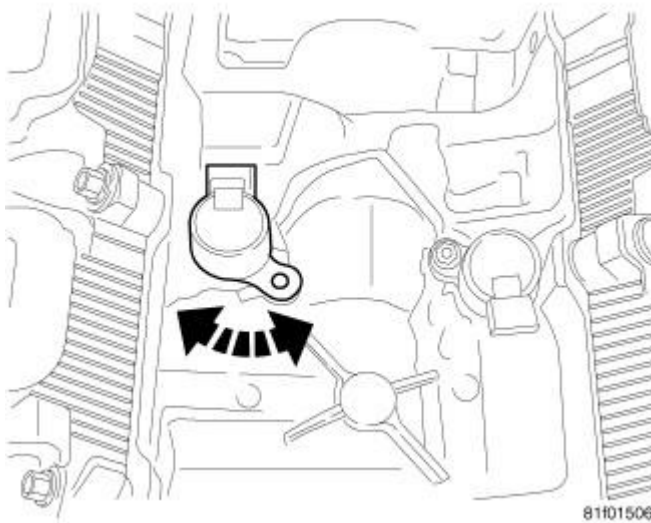


Fig. 209: MDS Solenoid Removal
Courtesy of CHRYSLER LLC

CAUTION: Do not try to pry the solenoid out. This could lead to breakage and contamination of the lubrication system.

6. Lightly tap on solenoid with a rubber mallet. Wiggle solenoid from side to side.
7. Remove MDS solenoid(s).

Installation

INSTALLATION

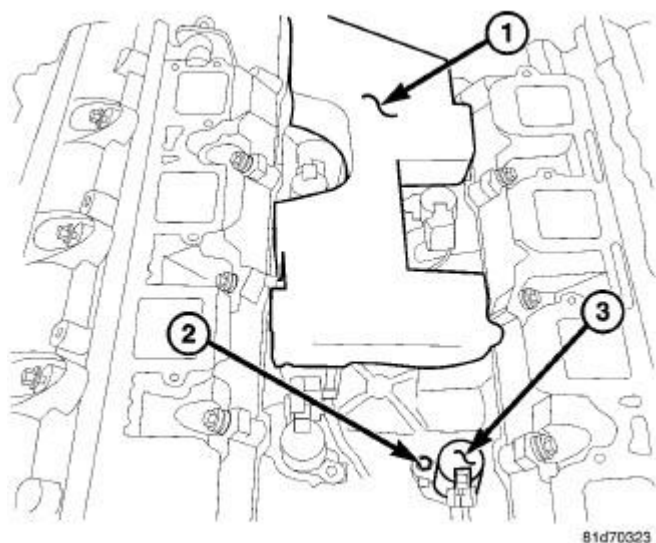


Fig. 210: Identifying MDS Solenoid & Intake Manifold Foam Insulator Pad
Courtesy of CHRYSLER LLC

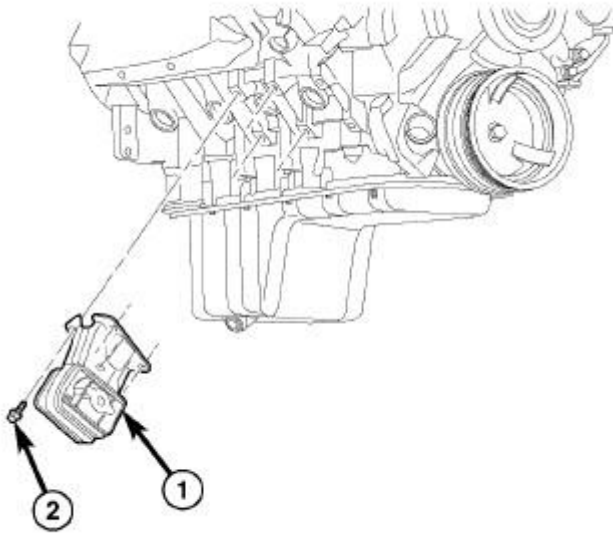
1. Verify that MDS bores are free of debris, before solenoid installation.
2. Install MDS solenoid(s) (3) fully into block.
3. Install hold down bolt (2) and tighten to 11 N.m (97 in. lbs.).
4. Reconnect the MDS wiring harness to the solenoid(s) (3).
5. Install foam insulator pad (1) if removed.
6. Install the intake manifold. See **Engine/Manifolds/MANIFOLD, Intake - Installation.**

ENGINE MOUNTING

INSULATOR, ENGINE MOUNT, FRONT

Removal

REMOVAL




81501652

Fig. 211: ENGINE MOUNT
Courtesy of CHRYSLER LLC

1. Disconnect negative battery cable.
2. Raise vehicle.
3. Remove engine mount thru bolts.
4. Raise engine using suitable jack.
5. Remove engine mount bolts (2).
6. Remove mount (1) from engine.

Installation

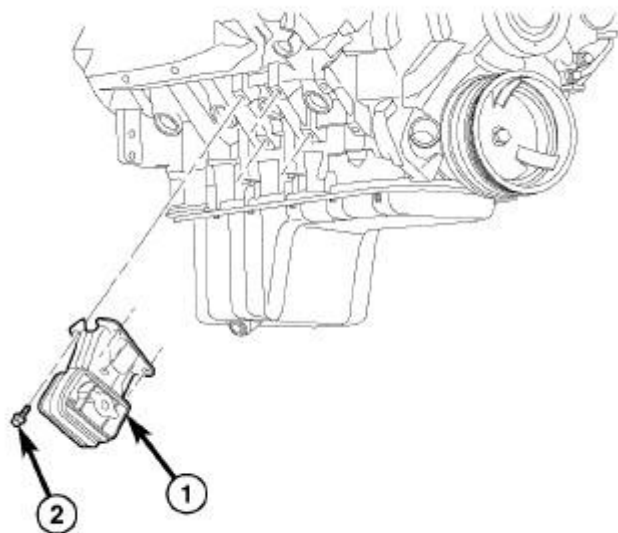INSTALLATION



81501652

Fig. 212: ENGINE MOUNT
Courtesy of CHRYSLER LLC

1. Install the engine mount (1).
2. Lower the engine.
3. Install the thru bolts and nuts
4. Lower vehicle.
5. Connect negative battery cable.

INSULATOR, ENGINE MOUNT, REAR

Removal

REMOVAL

4X2

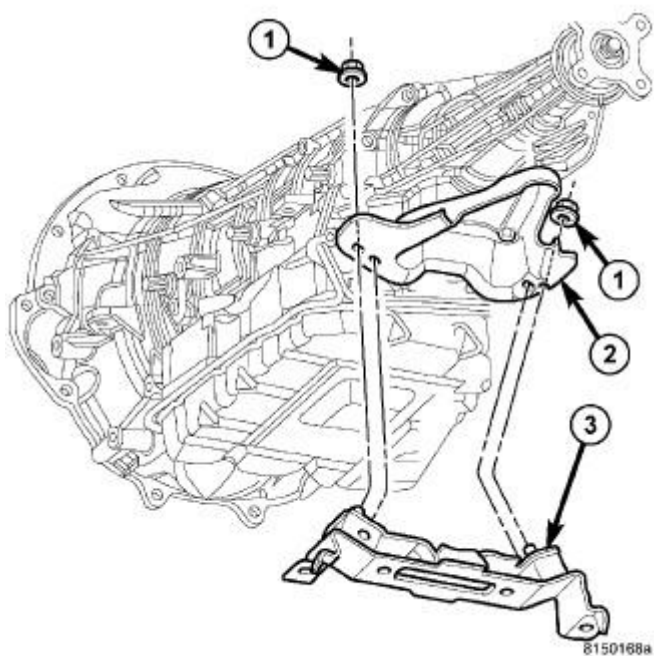
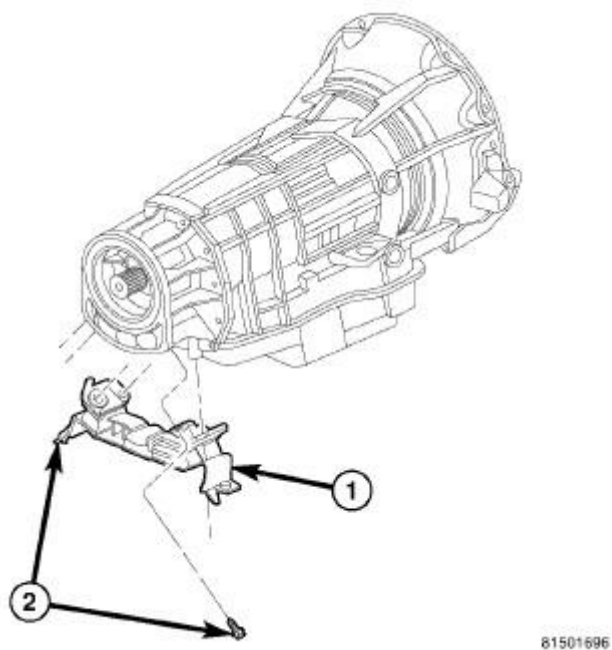


Fig. 213: 4X2 TRANSMISSION MOUNT

Courtesy of CHRYSLER LLC

1. Raise the vehicle on a hoist.
2. Using a suitable jack, support transmission.
3. Remove the crossmember.
4. Remove the fasteners (1) from the transmission mount to transmission.
5. Remove the mount (3).
6. Remove the transmission mount bracket (2), if required.

4X4

**Fig. 214: 4X4 TRANSMISSION MOUNT****Courtesy of CHRYSLER LLC**

1. Raise the vehicle on a hoist.
2. Using a suitable jack, support transmission.
3. Remove the crossmember.
4. Remove the fasteners (2) from the transmission mount (1) to transmission.
5. Remove the mount.

Installation**INSTALLATION****4X2**

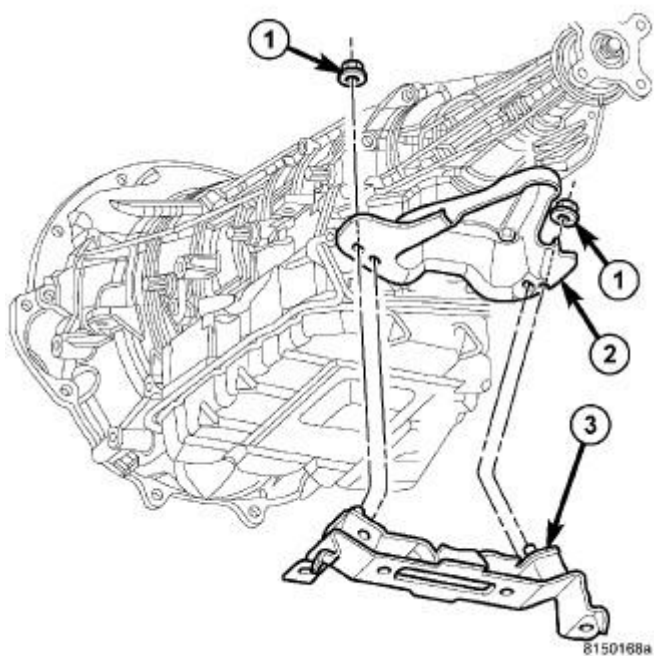
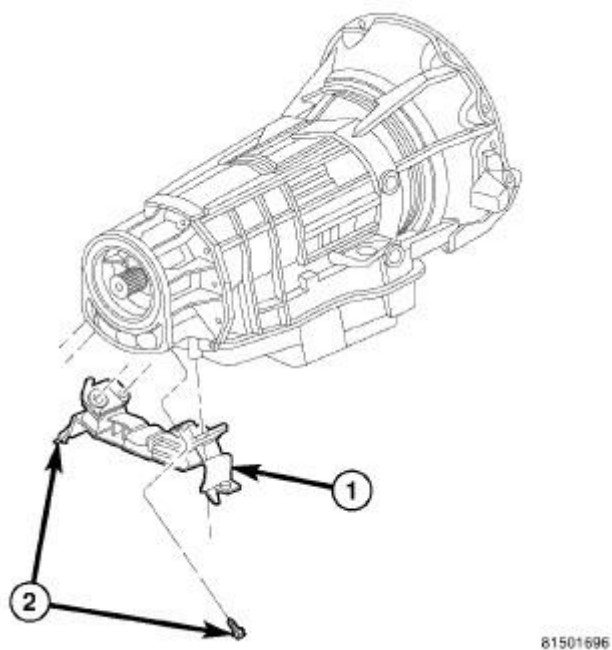


Fig. 215: 4X2 TRANSMISSION MOUNT

Courtesy of CHRYSLER LLC

1. Install the transmission mount bracket (2), if removed.
2. Position the transmission mount (3) on the transmission mount bracket (2). Install the fasteners (1) that attach the transmission mount to the bracket.
3. Tighten the bolts to 30 N.m (22 ft. lbs.).
4. Install the crossmember.

4X4


**Fig. 216: 4X4 TRANSMISSION MOUNT****Courtesy of CHRYSLER LLC**

1. Position the transmission mount (1) on the transmission. Install the bolts (2) that attach the transmission mount to the transmission.
2. Tighten the bolts to 30 N.m (22 ft. lbs.).
3. Install the crossmember.

LUBRICATION

DESCRIPTION

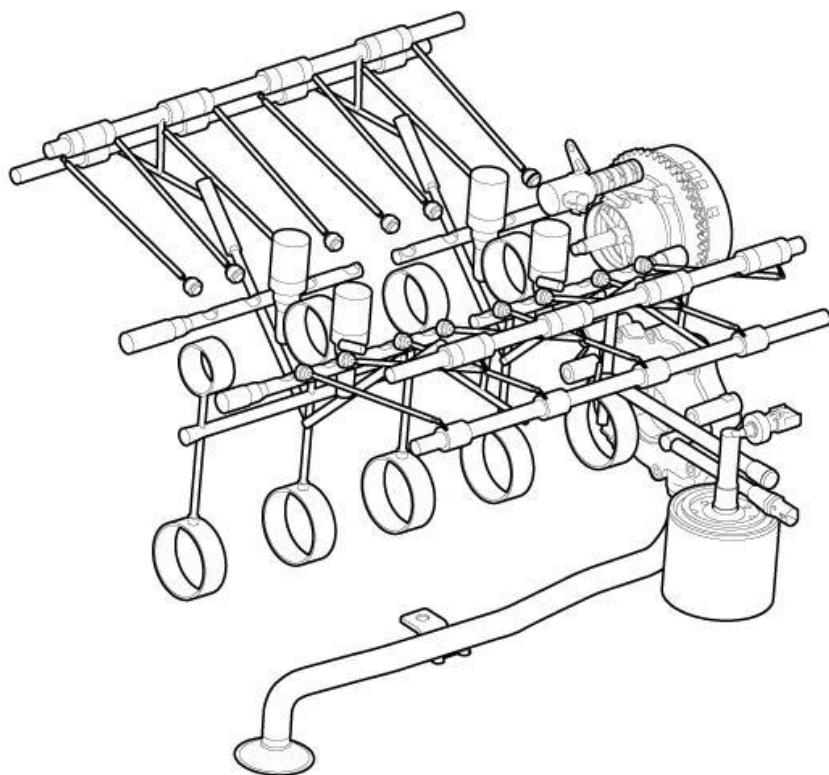DESCRIPTION



2390268

Fig. 217: 5.7L Multi-Displacement System Lubrication System
Courtesy of CHRYSLER LLC

The 5.7L MDS lubrication system is a full flow filtration pressure feed type.

DIAGNOSIS AND TESTING

CHECKING ENGINE OIL PRESSURE

1. Remove the oil pressure sending unit and install gauge assembly C-3292A.
2. Run the engine until thermostat opens.
3. Oil Pressure:
 - Curb Idle-25 kPa (4 psi) minimum
 - 3000 RPM-170 - 758 kPa (25 - 110 psi)
4. If oil pressure is 0 at idle, shut off engine. Check for a clogged oil pick-up screen or a pressure relief valve stuck open.

ENGINE OIL LEAK

Begin with a thorough visual inspection of the engine, particularly at the area of the suspected leak. If an oil leak source is not readily identifiable, the following steps should be followed:

1. Do not clean or degrease the engine at this time because some solvents may cause rubber to swell, temporarily stopping the leak.
2. Add an oil soluble dye (use as recommended by manufacturer). Start the engine and let idle for

approximately 15 minutes. Check the oil dipstick to make sure the dye is thoroughly mixed as indicated with a bright yellow color under a black light.

3. Using a black light, inspect the entire engine for fluorescent dye, particularly at the suspected area of the oil leak. If the oil leak is found and identified, repair per service information instructions.
4. If dye is not observed, drive the vehicle at various speeds for approximately 24 km (15 miles), and repeat inspection.

If the oil leak source is not positively identified at this time , proceed with AIR LEAK DETECTION TEST METHOD.

AIR LEAK DETECTION TEST METHOD

1. Remove the PCV valve from the IAFM. Cap or plug the PCV valve grommet.
2. Attach an air hose with a pressure gauge and regulator to the dipstick tube.

CAUTION: Do not subject the engine assembly to more than 20.6 kPa (3 PSI) of test pressure.

3. Gradually apply air pressure from 1 psi to 2.5 psi maximum while applying soapy water at the suspected source. Adjust the regulator to the suitable test pressure that provide the best bubbles which will pinpoint the leak source. If the oil leak is detected and identified, repair per service information procedures.
4. If the leakage occurs at the rear oil seal area, refer to INSPECTION FOR REAR SEAL AREA LEAKS.
5. If no leaks are detected, turn off the air supply and remove the air hose and all plugs and caps. Install the PCV valve.
6. Clean the oil off the suspect oil leak area using a suitable solvent. Drive the vehicle at various speeds approximately 24 km (15 miles). Inspect the engine for signs of an oil leak by using a black light.

INSPECTION FOR REAR SEAL AREA LEAKS

Since it is sometimes difficult to determine the source of an oil leak in the rear seal area of the engine, a more involved inspection is necessary. The following steps should be followed to help pinpoint the source of the leak.

If the leakage occurs at the crankshaft rear oil seal area:

1. Disconnect the battery.
2. Raise the vehicle.
3. Remove torque converter or clutch housing cover and inspect rear of block for evidence of oil. Use a black light to check for the oil leak:
 - a. Circular spray pattern generally indicates seal leakage or crankshaft damage.
 - b. Where leakage tends to run straight down, possible causes are a porous block, distributor seal, camshaft bore cup plugs oil galley pipe plugs, oil filter runoff, and main bearing cap to cylinder block mating surfaces.
4. If no leaks are detected, pressurize the crankcase as outlined in AIR LEAK DETECTION TEST

METHOD.

CAUTION: Do not exceed 20.6 kPa (3 psi).

5. If the leak is not detected, very slowly turn the crankshaft and watch for leakage. If a leak is detected between the crankshaft and seal while slowly turning the crankshaft, it is possible the crankshaft seal surface is damaged. The seal area on the crankshaft could have minor nicks or scratches that can be polished out with emery cloth.

CAUTION: Use extreme caution when crankshaft polishing is necessary to remove minor nicks and scratches. The crankshaft seal flange is especially machined to complement the function of the rear oil seal.

6. For bubbles that remain steady with shaft rotation, no further inspection can be done until disassembled.

FILTER, ENGINE OIL**Removal****REMOVAL**

All engines are equipped with a high quality full-flow, disposable type oil filter. Chrysler Corporation recommends a Mopar® or equivalent oil filter be used.

1. Position a drain pan under the oil filter.
2. Using a suitable oil filter wrench loosen filter.
3. Rotate the oil filter counterclockwise to remove it from the cylinder block oil filter boss.
4. When filter separates from cylinder block oil filter boss, tip gasket end upward to minimize oil spill. Remove filter from vehicle.

NOTE: Make sure filter gasket was removed with filter.

5. With a wiping cloth, clean the gasket sealing surface of oil and grime.

Installation**INSTALLATION**

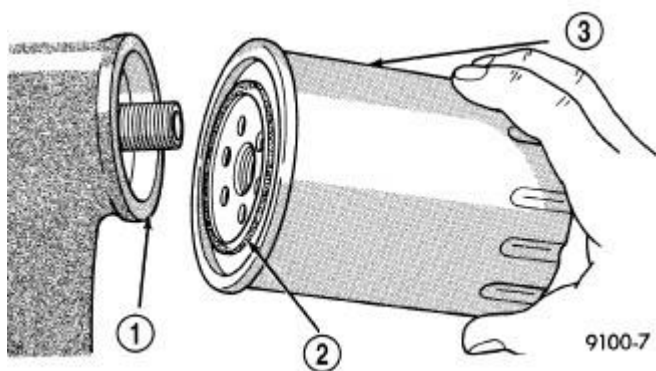


Fig. 218: Oil Filter Sealing Surface - Typical
Courtesy of CHRYSLER LLC

- | |
|--|
| 1 - SEALING SURFACE
2 - RUBBER GASKET
3 - OIL FILTER |
|--|

1. Lightly lubricate oil filter gasket (2) with engine oil.
2. Thread filter onto adapter nipple. When gasket makes contact with sealing surface, hand tighten filter one half turn, or 180°, do not over tighten.
3. Add oil, verify crankcase oil level and start engine. Inspect for oil leaks.

OIL

Standard Procedure

ENGINE OIL SERVICE

The engine oil level indicator is located at the right hand of the engine on the 5.7L engines.

CRANKCASE OIL LEVEL INSPECTION

CAUTION: Do not overfill crankcase with engine oil, pressure loss or oil foaming can result.

Inspect engine oil level approximately every 800 kilometers (500 miles). Unless the engine has exhibited loss of oil pressure, run the engine for about ten minutes before checking oil level. Checking engine oil level on a cold engine is not accurate.

To ensure proper lubrication of an engine, the engine oil must be maintained at an acceptable level. The acceptable levels are indicated between the ADD and SAFE marks on the engine oil dipstick.

1. Position vehicle on level surface.
2. With engine OFF, allow approximately five minutes for oil to settle to bottom of crankcase, remove engine oil dipstick.

3. Wipe dipstick clean.
4. Install dipstick and verify it is seated in the tube.
5. Remove dipstick, with handle held above the tip, take oil level reading.
6. Add oil only if level is below the ADD mark on dipstick.

ENGINE OIL CHANGE

Change engine oil at mileage and time intervals described in Maintenance Schedules. Refer to **Vehicle Quick Reference/Maintenance Schedules - Description** .

Run engine until achieving normal operating temperature.

1. Position the vehicle on a level surface and turn engine off.
2. Remove oil fill cap.
3. Hoist and support vehicle on safety stands.
4. Place a suitable drain pan under crankcase drain.
5. Remove drain plug from crankcase and allow oil to drain into pan. Inspect drain plug threads for stretching or other damage. Replace drain plug if damaged.
6. Install drain plug in crankcase. Torque to 27 N.m (20 ft. lbs.).
7. Lower vehicle and fill crankcase with specified type and amount of engine oil described in this part.
8. Install oil fill cap.
9. Start engine and inspect for leaks.
10. Stop engine and inspect oil level.

NOTE: Care should be exercised when disposing used engine oil after it has been drained from a vehicle engine. Refer to the WARNING at **CYLINDER-TO-WATER JACKET LEAKAGE TEST**.

PAN, OIL**Removal****REMOVAL**

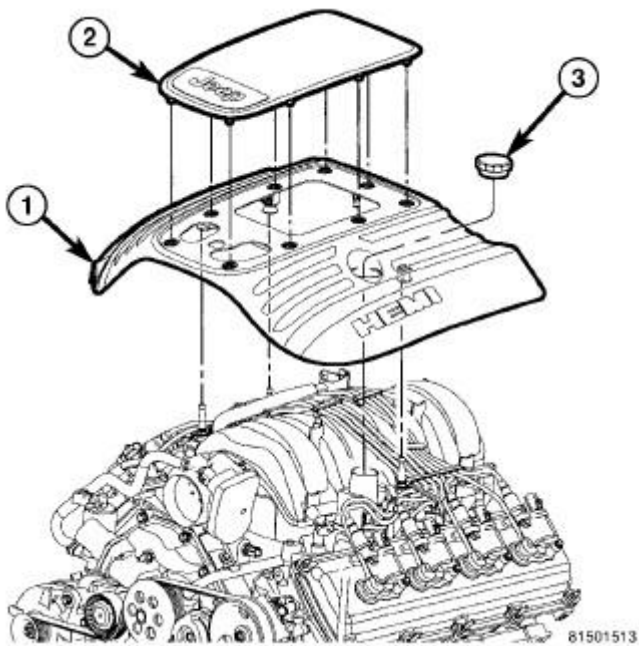


Fig. 219: ENGINE COVER
Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Remove the engine cover (1).

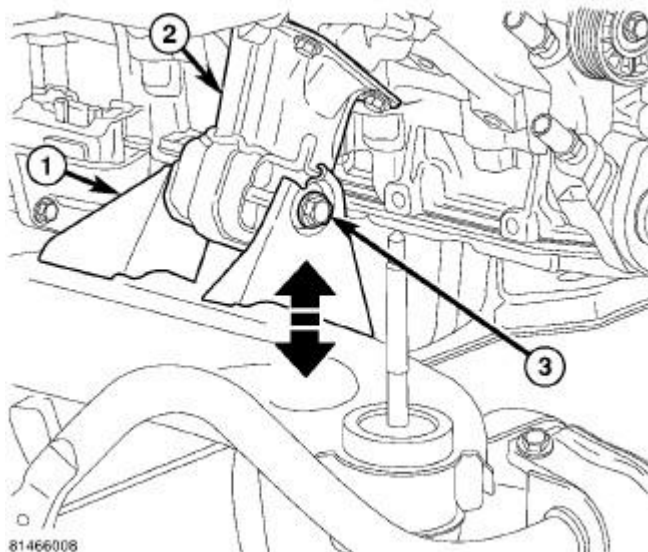


Fig. 220: ENGINE MOUNT BOLT
Courtesy of CHRYSLER LLC

3. Raise vehicle.
4. Remove both left and right side engine mount to frame bolts (3).

5. Drain engine oil and remove the oil filter.
6. Remove the engine oil dipstick and tube from the oil pan.
7. Lower the vehicle.


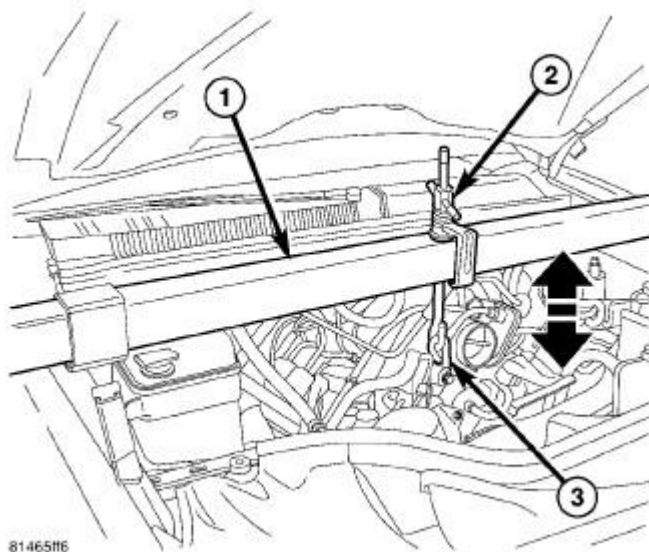


Fig. 221: ENGINE SUPPORT TOOL
Courtesy of CHRYSLER LLC

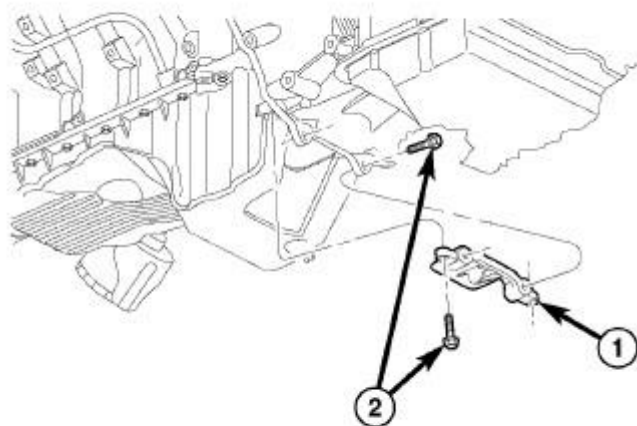
8. Install Engine Support Fixture 8534B (1). **Do not use the third leg.**
9. Raise engine using Engine Support Fixture 8534B (1) to provide clearance to remove oil pan.
10. Raise the vehicle.
11. Remove the front axle. Refer to **Differential and Driveline/Front Axle - C200FE - Removal**.



815005aa

Fig. 222: Structural Dust Cover
Courtesy of CHRYSLER LLC

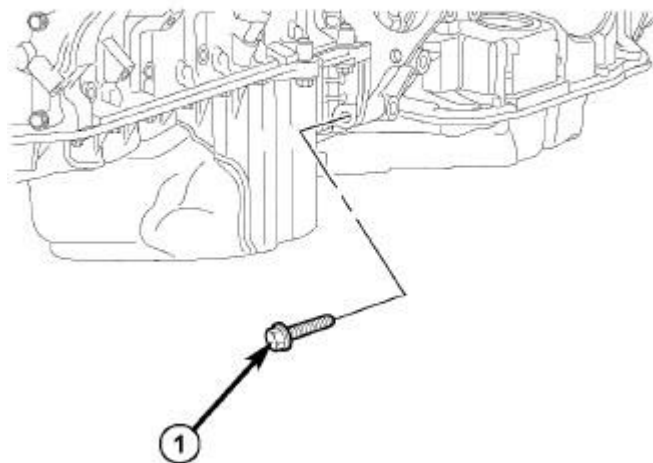12. Remove the structural dust cover (1). See **Engine/Engine Block/COVER, Structural Dust - Removal.**




8150150b

Fig. 223: OIL PAN TO TRANSMISSION BOLTS
Courtesy of CHRYSLER LLC

NOTE: Do not pry on oil pan or oil pan gasket. Gasket is integral to engine windage tray and does not come out with oil pan.

NOTE: The horizontal M10 fasteners are 5 mm longer in length, and must be reinstalled in original locations.

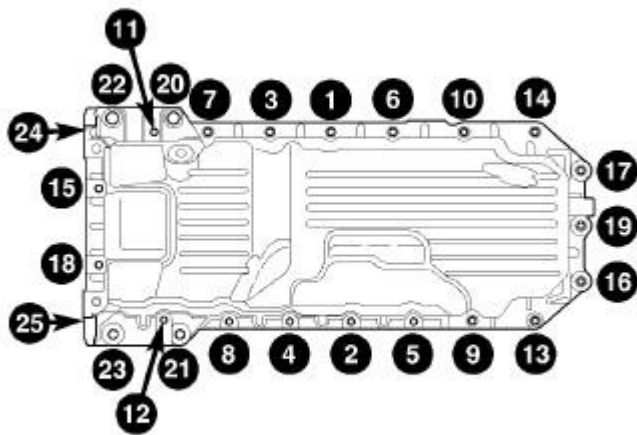13. Remove the M10 fasteners (1) (vertical and horizontal) from the rear of the oil pan to the transmission and engine.



8150068b

Fig. 224: Oil Pan Bolt Torque Sequence
Courtesy of CHRYSLER LLC

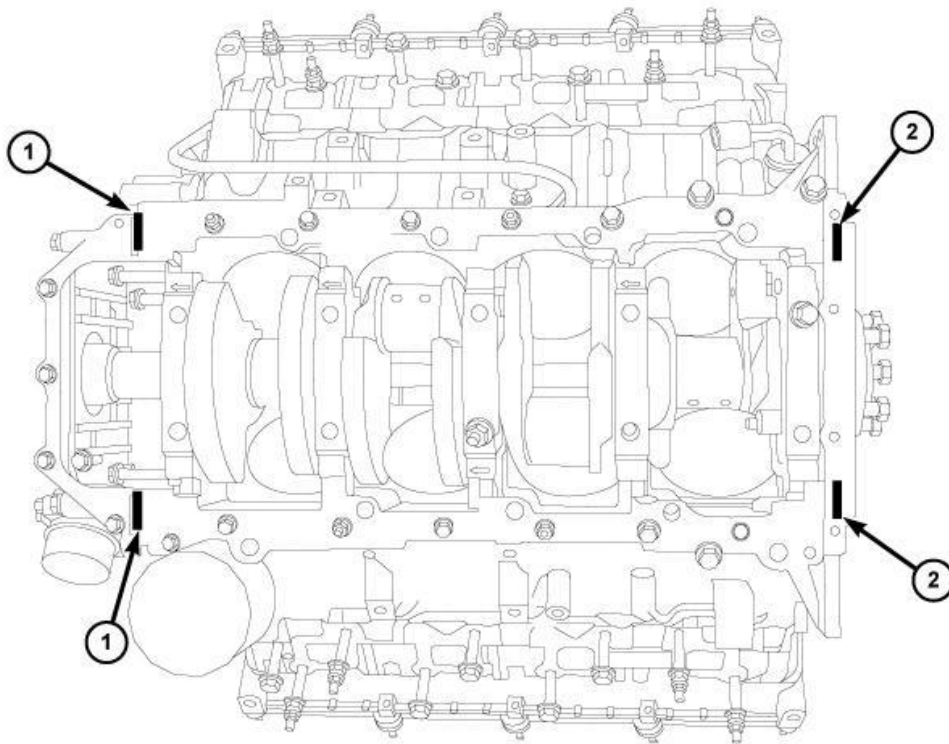
14. Remove the oil pan mounting bolts using the sequence provided, and oil pan.

NOTE: When the oil pan is removed, a new oil pan gasket/windage tray assembly must be installed. The old gasket cannot be reused.

15. Discard the integral windage tray and gasket and replace.

Installation

INSTALLATION



44843

Fig. 225: T-JOINT RTV APPLICATION

Courtesy of CHRYSLER LLC

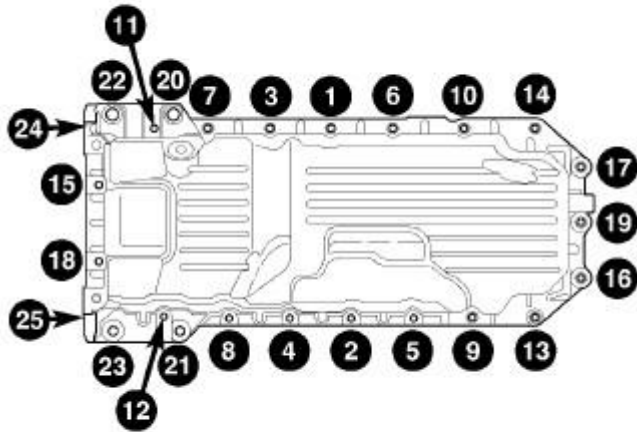
1. Clean the oil pan gasket mating surface of the block and oil pan.

NOTE: Mopar® Engine RTV must be applied to the 4 T-joints, (area where front cover, rear retainer, block, and oil pan gasket meet). The bead of RTV should cover the bottom of the gasket. This area is approximately 4.5 mm x 25 mm in each of the 4 T-joint locations.

2. Apply Mopar ® Engine RTV at the 4 T- joints.

NOTE: When the oil pan is removed, a new oil pan gasket/windage tray assembly must be installed. The old gasket cannot be reused.

3. Install a new oil pan gasket/windage tray assembly.
4. If removed, reinstall the oil pump pickup tube with new o-ring. Tighten tube to pump fasteners to 28 N.m (250 in. lbs.).



8150068b

Fig. 226: Oil Pan Bolt Torque Sequence

Courtesy of CHRYSLER LLC

NOTE: The horizontal M10 fasteners are 5 mm longer in length, and must be reinstalled in original locations.

NOTE: New M6 fasteners must be used when reinstalling the oil pan. Do not reuse the old M6 fasteners.

5. Align the rear of the oil pan with the rear face of the engine block, and install the M10 and M6 oil pan fasteners finger tight. Using the following torque sequence, torque the M6 mounting bolts to 5 N.m (44 in. lbs.).
6. Using the following torque sequence, tighten the M10 oil pan fasteners to 54 N.m (39 ft. lbs.).
7. Using the following torque sequence, tighten the M6 oil pan fasteners to 12 N.m (106 in. lbs.).

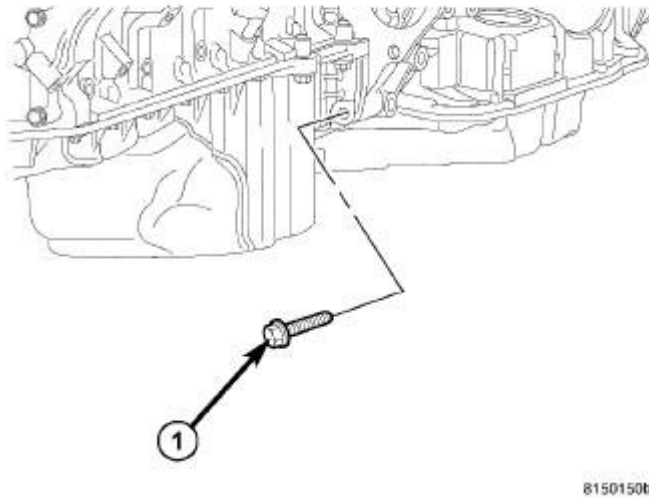


Fig. 227: OIL PAN TO TRANSMISSION BOLTS
Courtesy of CHRYSLER LLC

8. Install both the left and right side oil pan to transmission bolts (1). Tighten the bolts to 54 N.m (39 ft. lbs.).

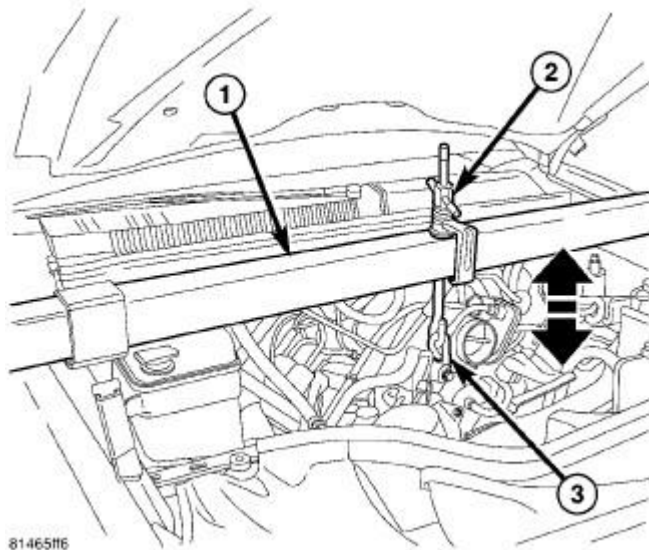


Fig. 228: ENGINE SUPPORT TOOL
Courtesy of CHRYSLER LLC

9. Lower the engine into mounts using Engine Support Fixture 8534B (1).

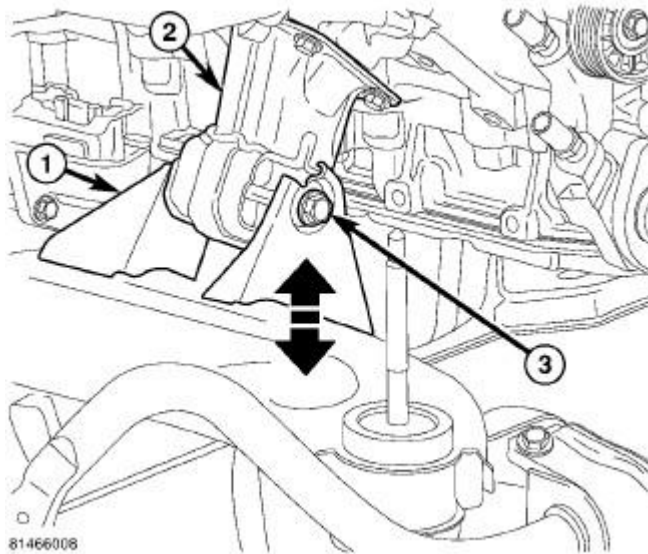


Fig. 229: ENGINE MOUNT BOLT
Courtesy of CHRYSLER LLC

10. Install both the left and right side engine mount bolts (3) and nuts. Tighten the studs and nuts to 54 N.m (39 ft. lbs.).
11. Install the engine oil dipstick and tube.

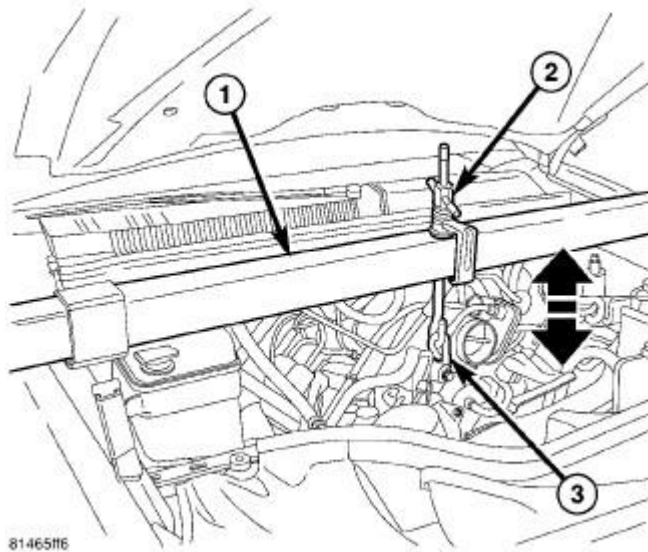
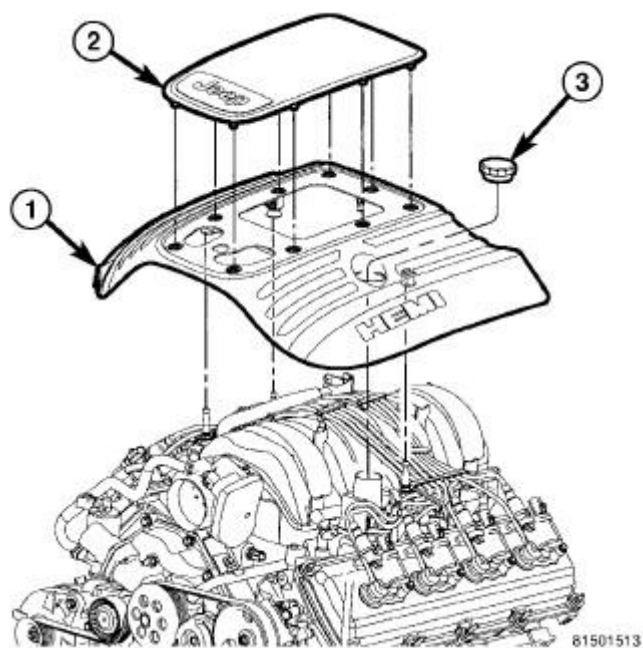



Fig. 230: ENGINE SUPPORT TOOL
Courtesy of CHRYSLER LLC

12. Remove Engine Support Fixture 8534B (1).
13. Install the front axle. Refer to **Differential and Driveline/Front Axle - C200FE - Installation** .

**Fig. 231: ENGINE COVER****Courtesy of CHRYSLER LLC**

14. Install the engine cover (1).
15. Fill engine oil.
16. Install oil filter, if removed.
17. Connect the negative battery cable.
18. Start engine and check for leaks.

PUMP, ENGINE OIL**Removal****REMOVAL**

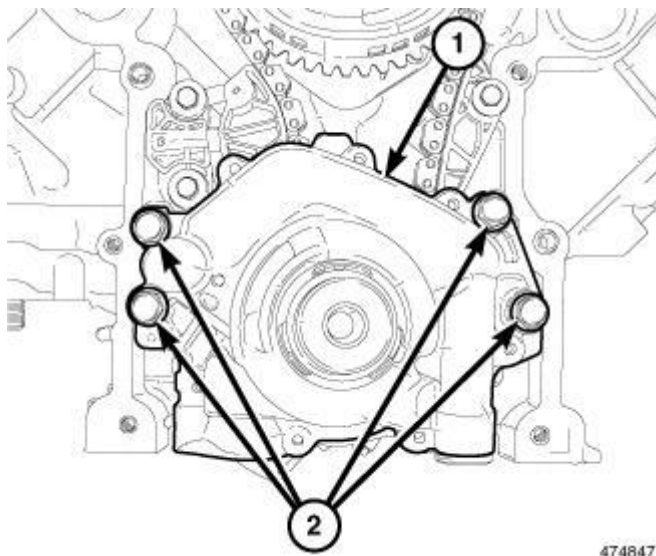**Fig. 232: Oil Pump Retaining Bolts**

Courtesy of CHRYSLER LLC

1. Remove the oil pan and pick-up tube. See Engine/Lubrication/PAN, Oil - Removal.
2. Remove the timing chain cover. See Engine/Valve Timing/COVER(S), Engine Timing - Removal.
3. Remove the four bolts (2) and the oil pump (1).

Cleaning**CLEANING**

1. Wash all parts in a suitable solvent.

Inspection**INSPECTION**

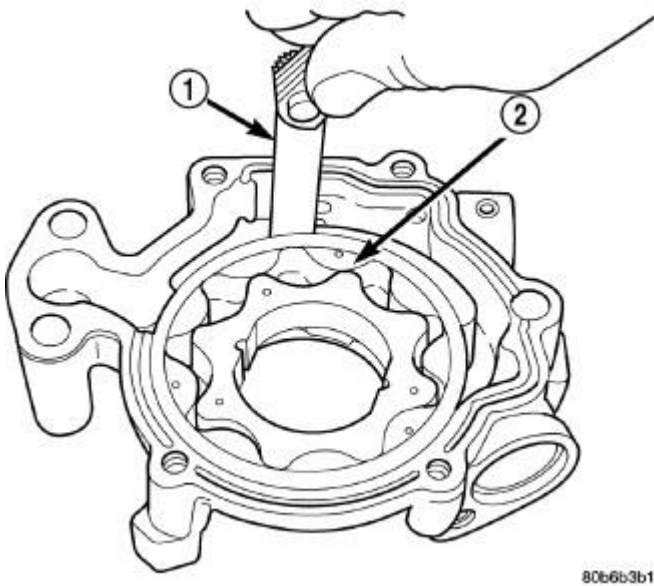


Fig. 233: Measuring Outer Rotor Clearance in Housing
Courtesy of CHRYSLER LLC

CAUTION: The oil pump pressure relief valve and spring should not be removed from the oil pump. If these components are disassembled and or removed from the pump the entire oil pump assembly must be replaced.

1. Remove the pump cover.
2. Clean all parts thoroughly. Mating surface of the oil pump housing should be smooth. If the pump cover is scratched or grooved the oil pump assembly should be replaced.
3. Slide outer rotor into the body of the oil pump. Press the outer rotor to one side of the oil pump body and measure clearance between the outer rotor (2) and the body. If the measurement is 0.235 mm (0.009 in.) or more the oil pump assembly must be replaced.

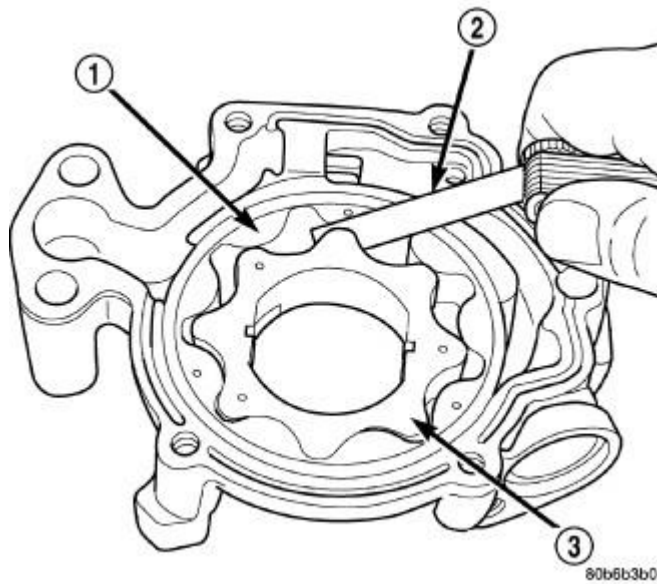


Fig. 234: Measuring Clearance Between Rotors
Courtesy of CHRYSLER LLC

4. Install the inner rotor into the oil pump body. Measure the clearance between the inner (3) and outer rotors (1). If the clearance between the rotors is 0.150 mm (0.006 in.) or more the oil pump assembly must be replaced.

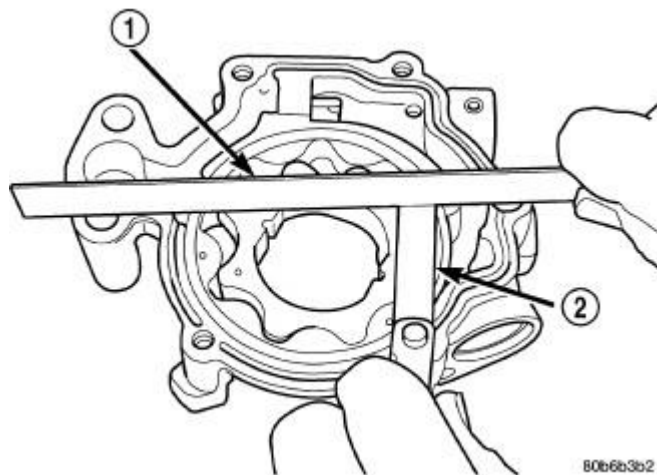



Fig. 235: Measuring Clearance Over Rotors
Courtesy of CHRYSLER LLC

5. Place a straight edge (1) across the body of the oil pump (between the bolt holes), if a feeler gauge (2) of 0.095 mm (0.0038 in.) or greater can be inserted between the straightedge and the rotors, the pump must be replaced.
6. Reinstall the pump cover. Tighten fasteners to 15 N.m (132 in. lbs.).

NOTE: The 5.7 Oil pump is serviced as an assembly. In the event the oil pump is not functioning or out of specification, it must be replaced as an assembly.

Installation

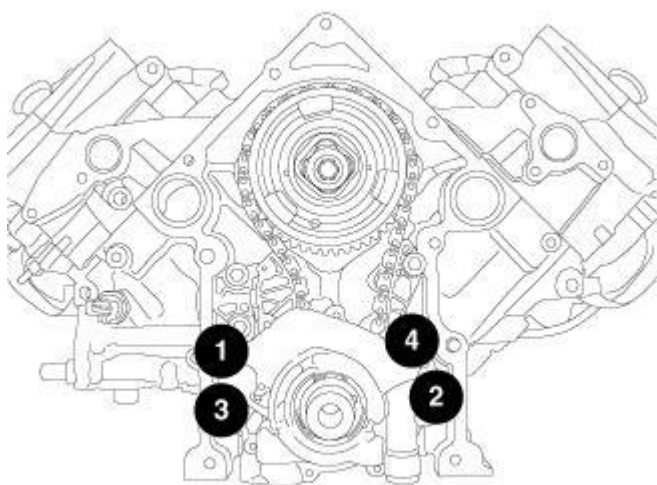INSTALLATION



439119

Fig. 236: Oil Pump Retaining Bolt Tightening Sequence
Courtesy of CHRYSLER LLC

1. Position the oil pump onto the crankshaft and install the 4 oil pump retaining bolts.
2. Tighten the oil pump retaining bolts to 28 N.m (250 in. lbs.) in the sequence shown in **Fig. 236**.
3. Install the timing chain cover. See **Engine/Valve Timing/COVER(S), Engine Timing - Installation**.
4. Install the pick-up tube and oil pan. See **Engine/Lubrication/PAN, Oil - Installation**.

SENSOR, OIL PRESSURE

Description

DESCRIPTION

The oil pressure sensor uses the following three circuits:

- Signal circuit to the PCM
- Sensor ground circuit from the PCM
- 5 volt reference circuit from the PCM

The oil pressure sensor returns a voltage signal back to the PCM with reference to oil pressure. Ground for the sensor is supplied by the PCM.

The oil pressure sensor is located on the right side of the engine block. The sensor screws into the engines main

oil gallery.

Removal

REMOVAL

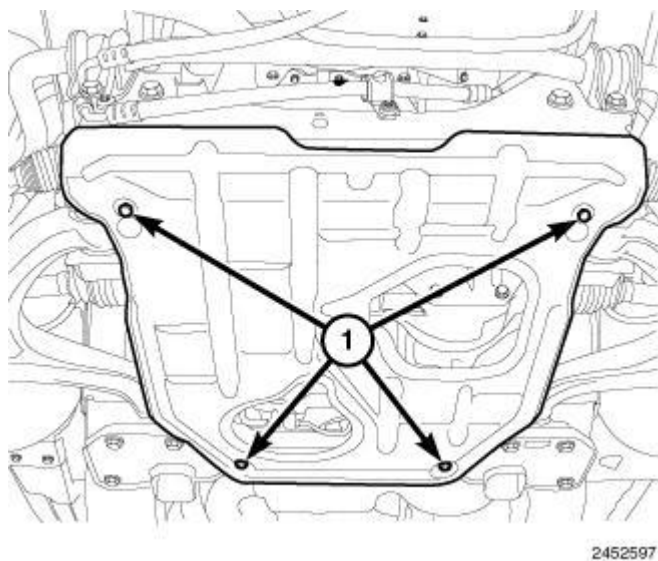


Fig. 237: Lower Splash Shield Retaining Bolts
Courtesy of CHRYSLER LLC

1. Disconnect and isolate the negative battery cable.
2. Raise and support the vehicle.
3. Remove the lower splash shield retaining bolts (1) and the splash shield.

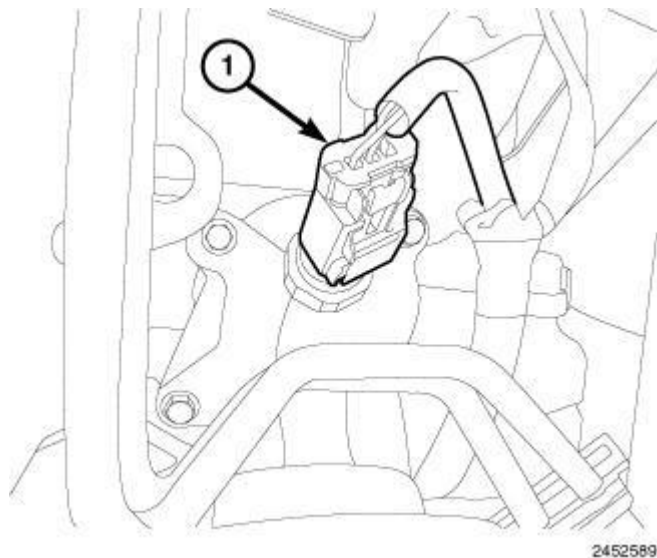


Fig. 238: Oil Pressure Sensor Electrical Connector
Courtesy of CHRYSLER LLC

4. Disconnect the oil pressure sensor electrical connector (1).

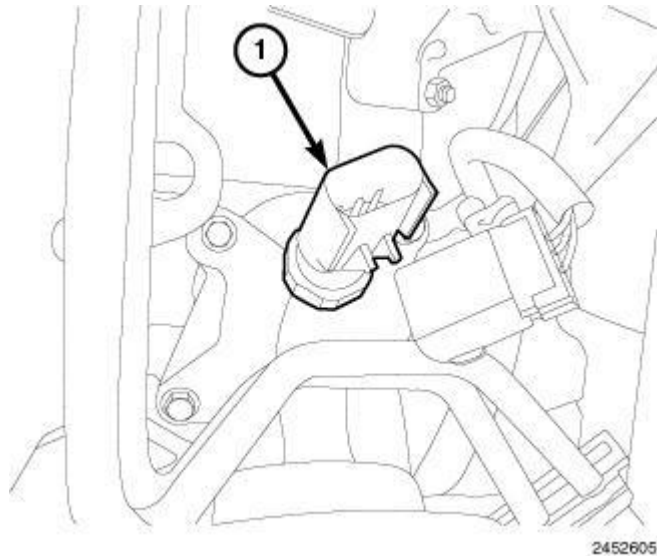


Fig. 239: Oil Pressure Sensor
Courtesy of CHRYSLER LLC

5. Remove the oil pressure sensor (1).

Installation

INSTALLATION

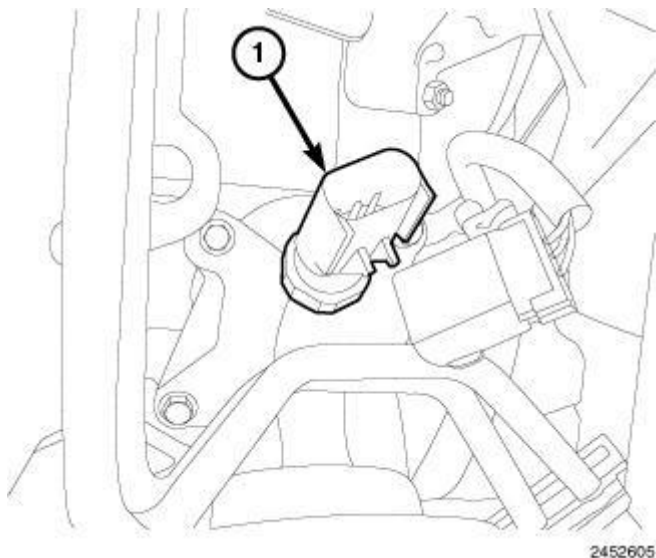


Fig. 240: Oil Pressure Sensor
Courtesy of CHRYSLER LLC

NOTE: Apply Mopar® Thread Sealant with PTFE to the sensor threads before installing into the engine block.

1. Install the oil pressure sensor (1).

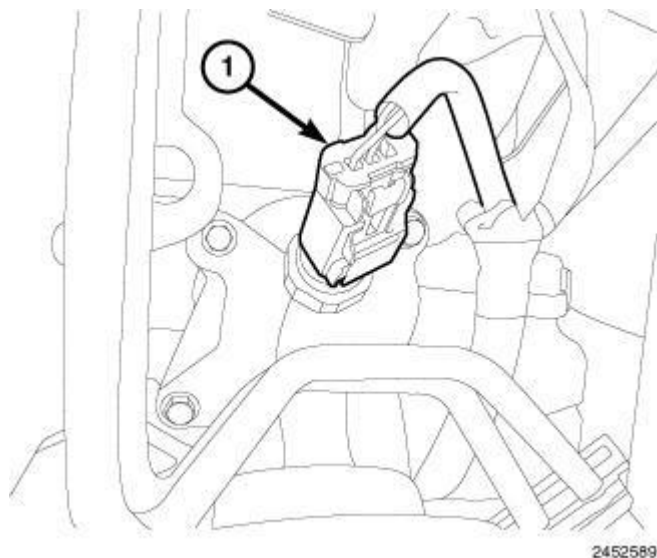


Fig. 241: Oil Pressure Sensor Electrical Connector
Courtesy of CHRYSLER LLC

2. Connect the oil pressure sensor electrical connector (1).

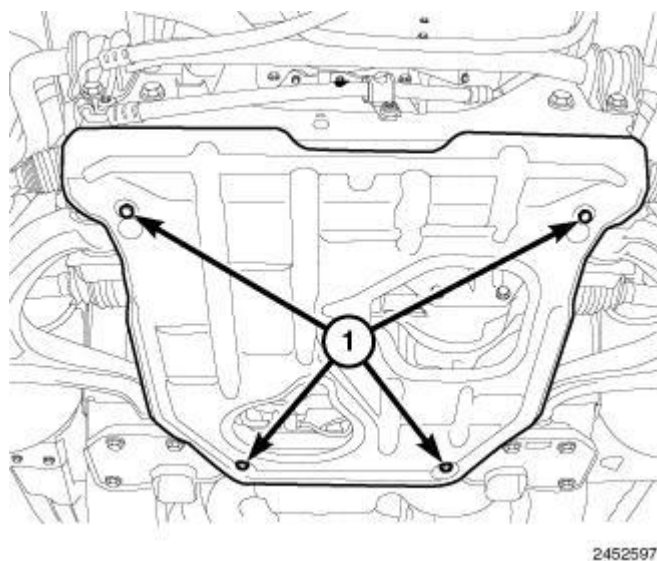


Fig. 242: Lower Splash Shield Retaining Bolts
Courtesy of CHRYSLER LLC

3. Position the lower splash shield and install the retaining bolts (1).
4. Lower the vehicle
5. Connect the negative battery cable.

SENSOR, OIL TEMPERATURE

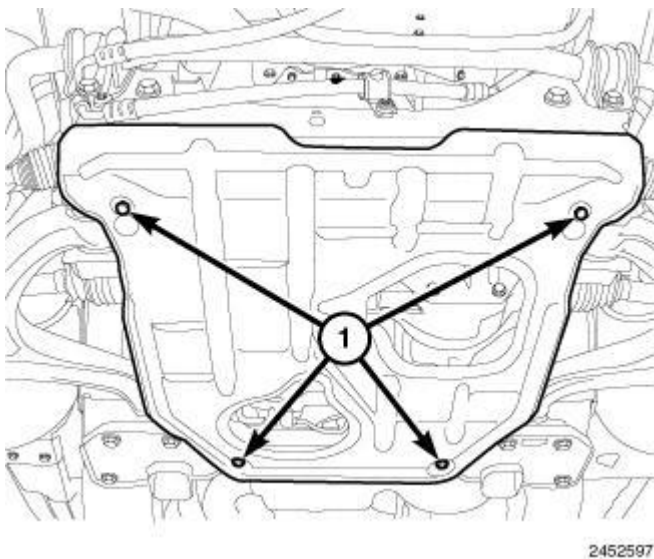
Description**DESCRIPTION**

The oil temperature sensor uses the following two circuits:

- Signal circuit to the PCM
- Ground circuit from the PCM

The oil temperature sensor is a Negative Thermal Coefficient sensor. The resistance of the sensor changes as oil temperature changes. This results in different output voltages back to the PCM.

The oil temperature sensor is located on the right side of the engine block.

Removal**REMOVAL**

2452597

Fig. 243: Lower Splash Shield Retaining Bolts
Courtesy of CHRYSLER LLC

1. Disconnect and isolate the negative battery cable.
2. Raise and support the vehicle.
3. Remove the lower splash shield retaining bolts (1) and the splash shield.

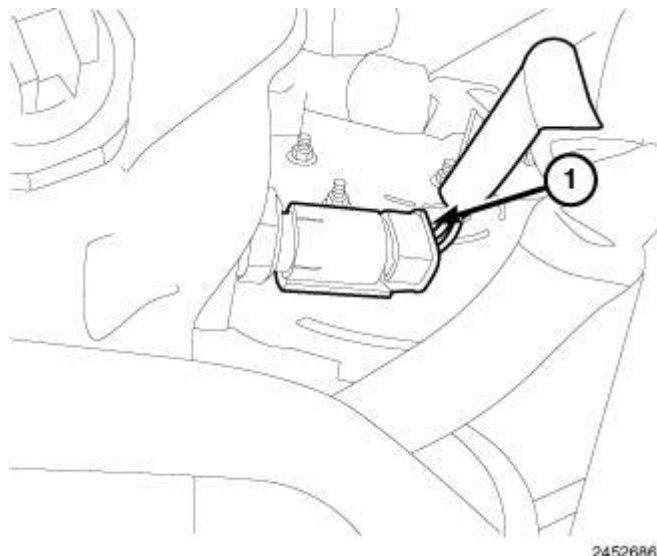


Fig. 244: Oil Temperature Sensor Electrical Connector
Courtesy of CHRYSLER LLC

4. Disconnect the oil temperature sensor electrical connector (1).

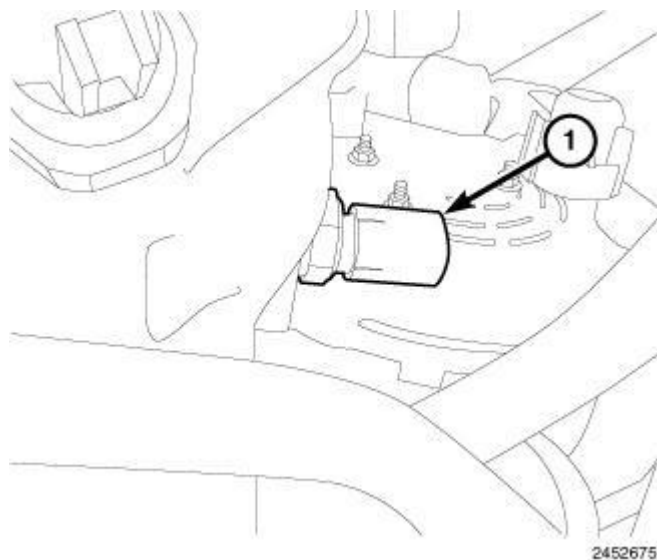


Fig. 245: Oil Temperature Sensor
Courtesy of CHRYSLER LLC

5. Remove the oil temperature sensor (1).

Installation

INSTALLATION

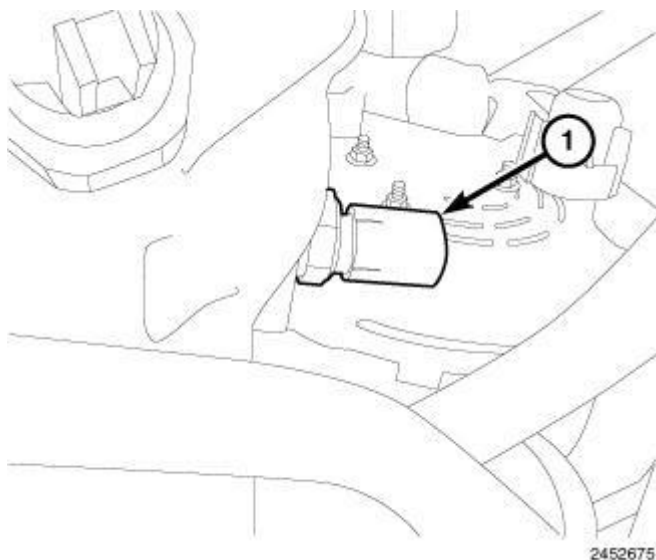


Fig. 246: Oil Temperature Sensor
Courtesy of CHRYSLER LLC

NOTE: Apply Mopar® Thread Sealant with PTFE to the sensor threads before installing into the engine block.

1. Install the oil temperature sensor (1).

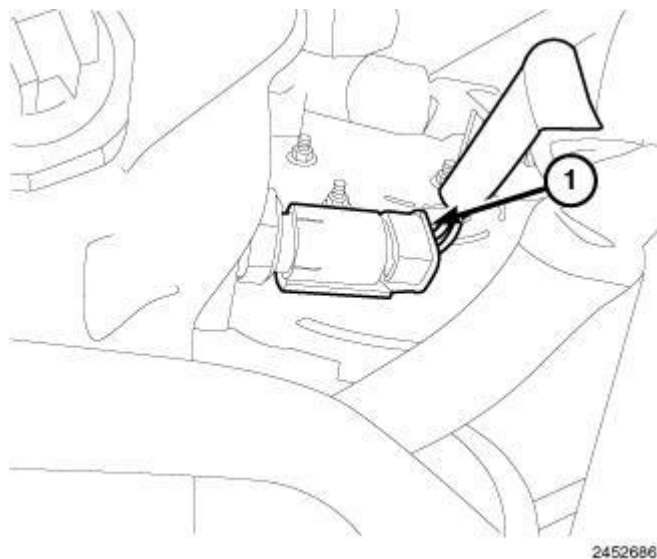


Fig. 247: Oil Temperature Sensor Electrical Connector
Courtesy of CHRYSLER LLC

2. Connect the oil temperature sensor electrical connector (1).

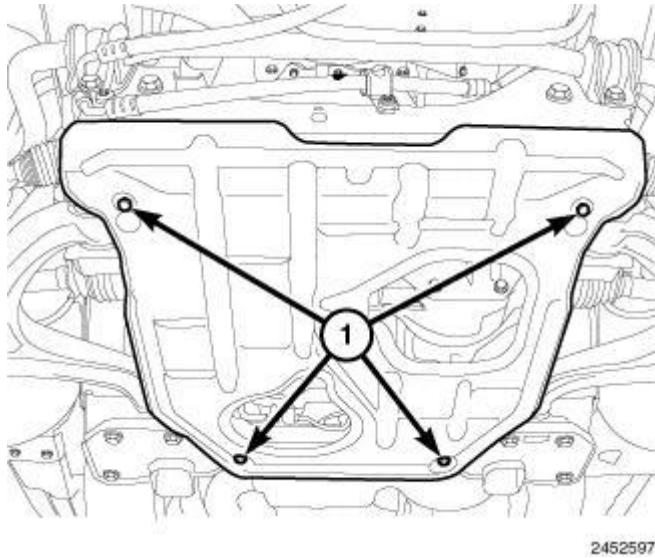


Fig. 248: Lower Splash Shield Retaining Bolts
Courtesy of CHRYSLER LLC

3. Position the lower splash shield and install the retaining bolts (1).
4. Lower the vehicle.
5. Connect the negative battery cable.

MANIFOLDS

MANIFOLD, EXHAUST

Description

DESCRIPTION

The exhaust manifolds are log style with a patented flow enhancing design to maximize performance. The exhaust manifolds are made of high silicon molybdenum cast iron. A multi-layer stainless steel exhaust manifold gasket is used to improve sealing to the cylinder head. The exhaust manifolds are covered by a three layer laminated heat shield for thermal protection and noise reduction. The heat shields are fastened with a torque prevailing nut that is backed off slightly to allow for the thermal expansion of the exhaust manifold, with the exception of the nut, which also secures the oil dipstick tube bracket. That nut should not be backed off.

Operation

OPERATION

The exhaust manifolds collect the engine exhaust exiting the combustion chambers, then channels the exhaust gases to the exhaust pipes attached to the manifolds.

Removal

REMOVAL

EXHAUST MANIFOLD - LEFT SIDE

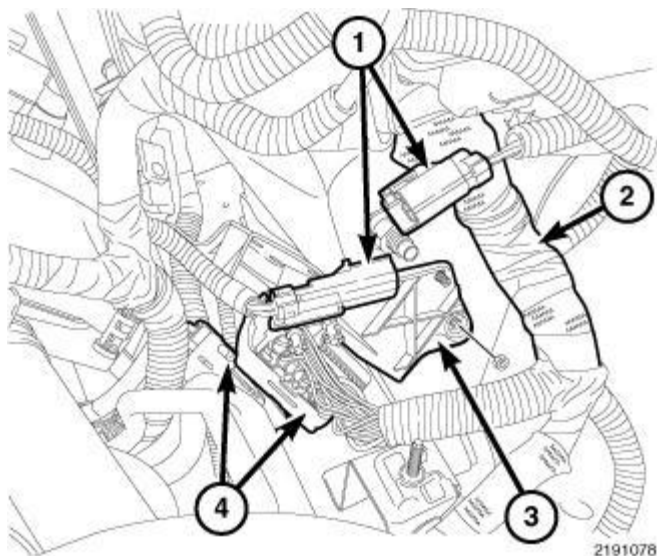


Fig. 249: Bulk Connector Retaining Bracket
Courtesy of CHRYSLER LLC

1. Lock the steering wheel in the center position.

CAUTION: Steering column module is centered to the vehicle's steering system. Failure to keep the system and steering column module centered and locked/inhibited from rotating can result in steering column module damage. Refer to Restraints/CLOCKSPRING - Standard Procedure .

2. Remove the engine cover.
3. Disconnect the battery terminals.
4. Remove the battery and battery tray. Refer to Electrical/Battery System/TRAY, Battery - Removal .

CAUTION: USE CAUTION WHEN CONNECTING, DISCONNECTING OR REPOSITIONING ANY WIRING HARNESS. DAMAGE COULD OCCUR TO THE WIRING HARNESS DUE TO VEHICLE MILEAGE, VEHICLE AGE AND ENVIRONMENTAL CONDITIONS.

5. Disconnect the bulk connector (4).
6. Disconnect the tail lamp harness.
7. Remove the nut from the bulk connector retaining bracket (3) and reposition the bracket.
8. Disconnect the power steering switch (1) and reposition the harness.
9. Disconnect power distribution center (PDC) connector and reposition harness.

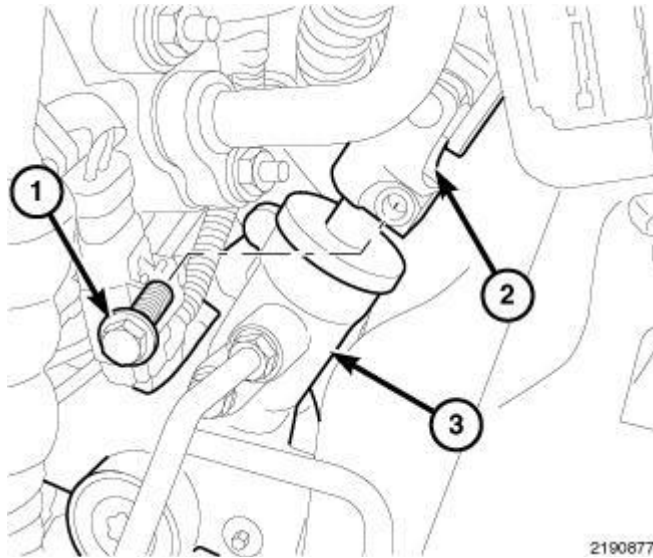


Fig. 250: Intermediate Steering Shaft
 Courtesy of CHRYSLER LLC

10. Remove the lower coupling pinch bolt (1) from the intermediate steering shaft (2) at the rack and pinion assembly (3).
11. Remove upper mounting bolt from dipstick tube.
12. Remove the two left front exhaust manifold heat shield nuts.
13. Lift and secure the vehicle.
14. Remove any skid plates (if equipped).
15. Remove the front propeller shaft (4 X 4 equipped vehicles). Refer to **Differential and Driveline/Propeller Shaft/SHAFT, Drive - Removal** .
16. Remove the front left side tire and wheel.
17. Remove the front left side wheelhouse splash shield. Refer to **Body/Exterior/SHIELD, Splash - Removal** .
18. Reposition any harnesses as needed.

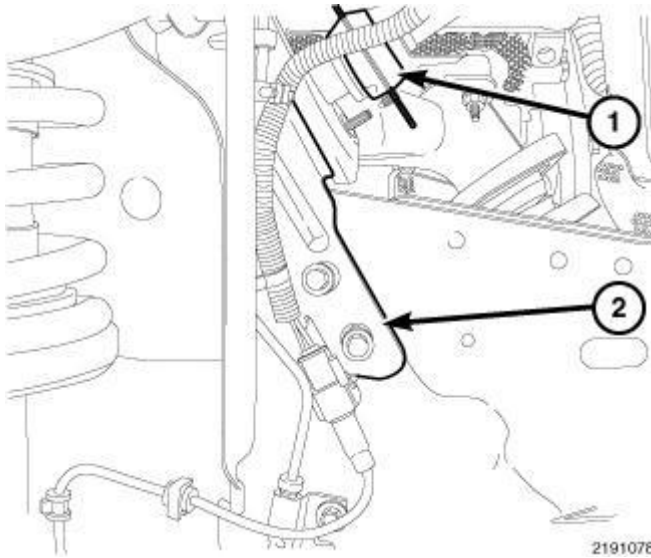


Fig. 251: Intermediate Steering Shaft Support Bracket
 Courtesy of CHRYSLER LLC

19. Remove the two bolts and two nuts from the intermediate steering shaft support bracket (2).
20. Remove the intermediate steering shaft support bracket (2).

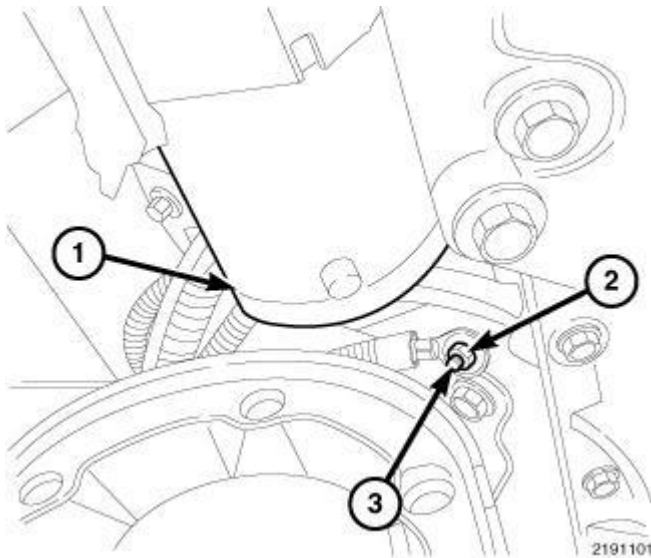


Fig. 252: Starter Nut
 Courtesy of CHRYSLER LLC

21. Remove the nut (2) from the battery ground harness, located in front of the starter (1).
22. Remove the battery ground harness.
23. Remove the lower stud/bolt (3) from the dipstick tube.
24. Remove the two left rear exhaust manifold heat shield nuts.
25. Saturate the front exhaust pipe/catalytic converter assembly bolts and nuts with heat valve lubricant. Allow 5 minutes for penetration.

26. Remove the bolts from the front left exhaust pipe/catalytic converter assembly.
27. Loosen the bolts from the front right exhaust pipe/catalytic converter assembly. **Do not remove the bolts.**
28. Lower the vehicle.

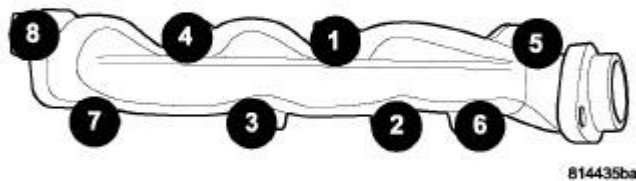


Fig. 253: Exhaust Manifold Bolt Tightening Sequence - Left
Courtesy of CHRYSLER LLC

29. Remove the eight bolts/studs from the exhaust manifold using the sequence provided.

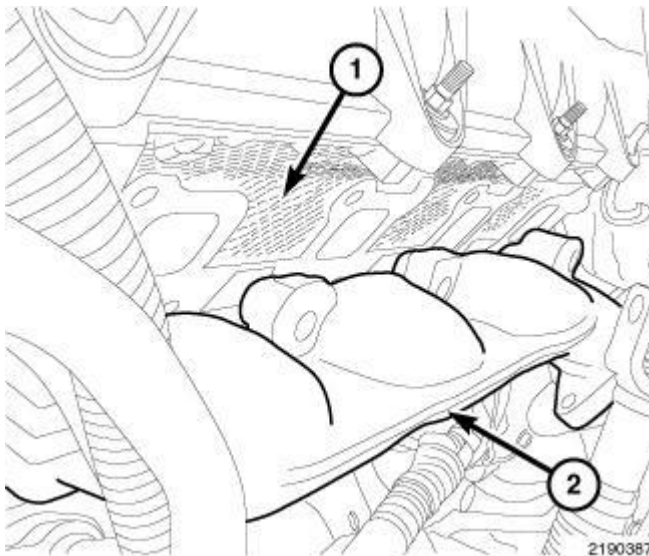


Fig. 254: Exhaust Manifold & Gasket From Front Of Vehicle
Courtesy of CHRYSLER LLC

30. Remove the exhaust manifold (2) and gasket from the front of the vehicle.
31. Inspect the exhaust manifold (2) for any damage. See **Engine/Manifolds/MANIFOLD, Exhaust - Inspection**.
32. Clean the mating surfaces (1, 2).

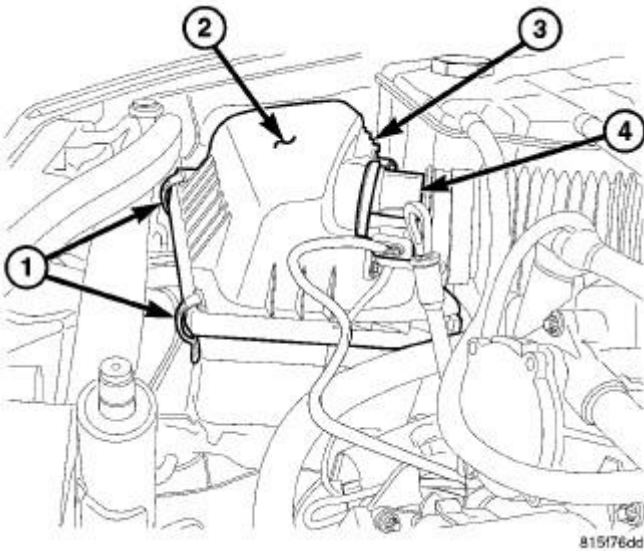
EXHAUST MANIFOLD - RIGHT SIDE

Fig. 255: AIR CLEANER COVER
Courtesy of CHRYSLER LLC

1. Partially drain the engine coolant. Refer to **Cooling - Standard Procedure** .
2. Remove the engine cover.
3. Disconnect the negative battery terminal.
4. Remove the air box assembly (2). Refer to **Engine/Air Intake System - Removal** .


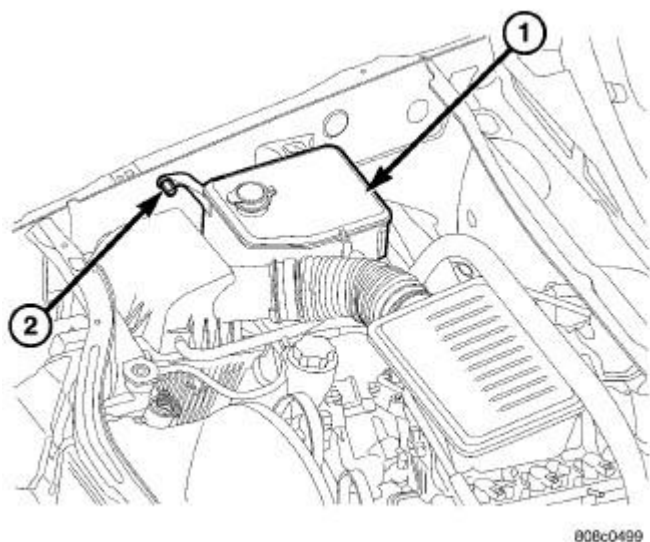


Fig. 256: Coolant Reservoir/Overflow Tank
Courtesy of CHRYSLER LLC

5. Remove the coolant recovery bottle (1). Refer to **Cooling/Engine/BOTTLE, Pressurized Coolant - Removal**.
6. Disconnect and re-position the upper right side engine harness.

CAUTION: USE CAUTION WHEN CONNECTING, DISCONNECTING OR REPOSITIONING ANY WIRING HARNESS. DAMAGE COULD OCCUR TO THE WIRING HARNESS DUE TO VEHICLE MILEAGE, VEHICLE AGE AND ENVIRONMENTAL CONDITIONS.

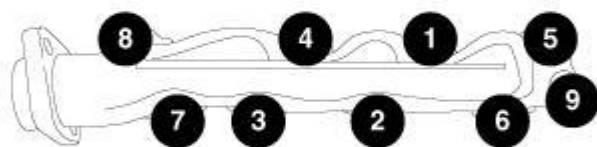7. If required, disconnect and re-position the heater hoses from the heater core tubes in the engine compartment.
8. Raise and secure the vehicle.
9. Remove any skid plates (if equipped).
10. Saturate the front exhaust pipe/catalytic converter assembly bolts and nuts with heat valve lubricant. Allow 5 minutes for penetration.
11. Disconnect and remove the upstream O2 sensor from the exhaust pipe/catalytic converter assembly. Refer to **Fuel System/Fuel Injection/SENSOR, Oxygen - Removal**.
12. Remove the bolts from the front right exhaust pipe/catalytic converter assembly.
13. Loosen the bolts from the front left exhaust pipe/catalytic converter assembly. **Do not remove the bolts.**
14. Remove the front right tire and wheel assembly.
15. Remove the front right side wheelhouse splash shield. Refer to **Body/Exterior/SHIELD, Splash - Removal**.
16. Lower the vehicle.
17. Remove the right side exhaust manifold heat shield.



44921

Fig. 257: Exhaust Manifold Bolt Tightening Sequence - Right
Courtesy of CHRYSLER LLC

18. Remove the eight bolts/studs from the exhaust manifold using the sequence provided.
19. Remove the exhaust manifold and gasket from the front of the vehicle.
20. Inspect the exhaust manifold for any damage. See **Engine/Manifolds/MANIFOLD, Exhaust - Inspection.**
21. Clean the mating surfaces.

Cleaning

CLEANING

Clean mating surfaces on cylinder head and manifold. Wash with solvent and blow dry with compressed air.

Inspection

INSPECTION

Inspect manifold for cracks.

Inspect mating surfaces of manifold for flatness with a straight edge. Gasket surfaces must be flat within 0.2 mm per 300 mm (0.008 inch per foot).

Installation

INSTALLATION

EXHAUST MANIFOLD - LEFT SIDE

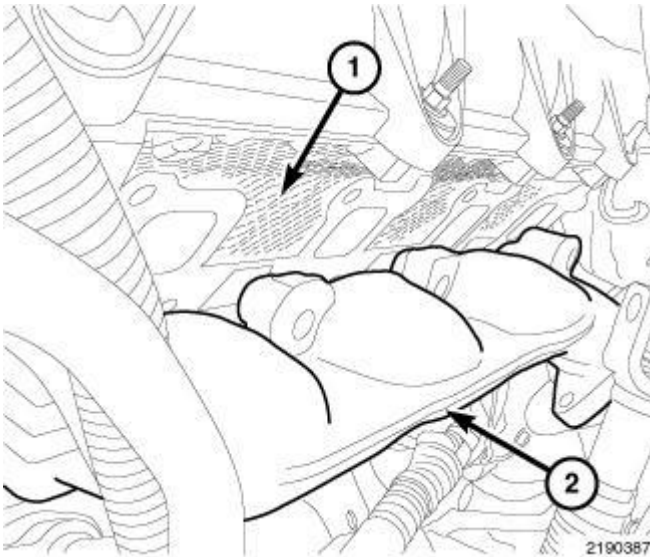


Fig. 258: Exhaust Manifold & Gasket From Front Of Vehicle
Courtesy of CHRYSLER LLC

1. Prior to installation, make sure all gasket mating surfaces (1, 2) are clean and free of any debris.
2. Inspect the exhaust manifold (2) for any damage. See **Engine/Manifolds/MANIFOLD, Exhaust - Inspection**.
3. Install manifold gasket and manifold (2) through the front of the vehicle.

NOTE: Make sure gasket is properly seated before tightening the manifold stud/bolts.

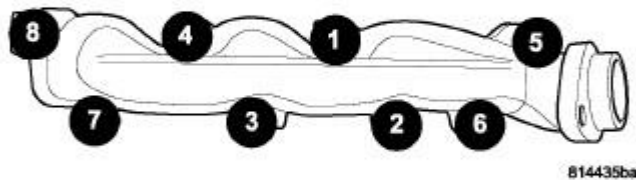


Fig. 259: Exhaust Manifold Bolt Tightening Sequence - Left
Courtesy of CHRYSLER LLC

4. Install the exhaust manifold heat shield. Tighten the nuts to 8 N.m (71 in. lbs.).
5. Install the dipstick tube upper mounting bolt. Tighten the bolt to 12 N.m (9 ft. lbs.).
6. Raise and secure the vehicle.
7. Install the bolts and nuts at the left front exhaust pipe/catalytic converter assembly to exhaust manifold flange. Do not tighten.
8. Position the exhaust pipe for proper clearance with the frame and underbody parts. A minimum clearance of 25.4 mm (1.0 in.) is required.
9. Once properly aligned, tighten the left front exhaust pipe/catalytic converter assembly to exhaust manifold bolts (2) to 26 N.m (19 in. lbs.).
10. Tighten the right front exhaust pipe/catalytic converter assembly to the exhaust manifold bolts to 26 N.m (19 in. lbs.).

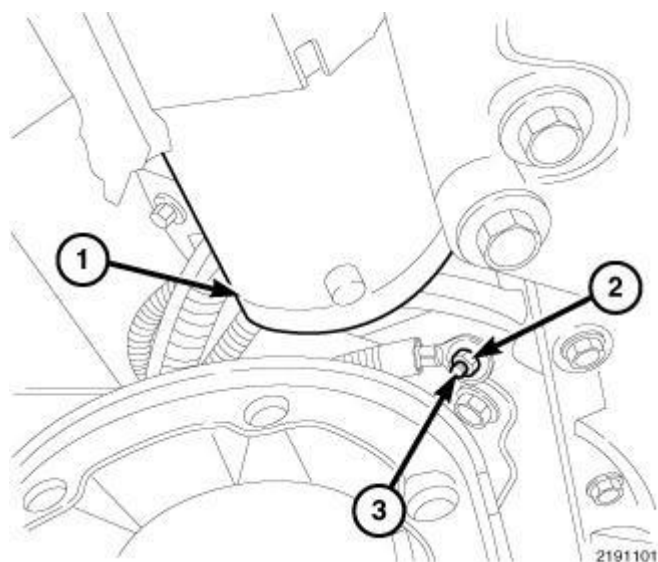


Fig. 260: Starter Nut
Courtesy of CHRYSLER LLC

11. Install the lower dipstick stud/bolt (3) located in front of the starter (1). Tighten the stud/bolt (3) to 12 N.m (9 ft. lbs.).
12. Install the battery ground harness to the lower dipstick stud/bolt (3). Tighten the nut (2) to 11 N.m (8 ft. lbs.).
13. Install the front propeller shaft (4 X 4 equipped vehicles). Refer to **Differential and Driveline/Propeller Shaft/SHAFT, Drive - Installation**.

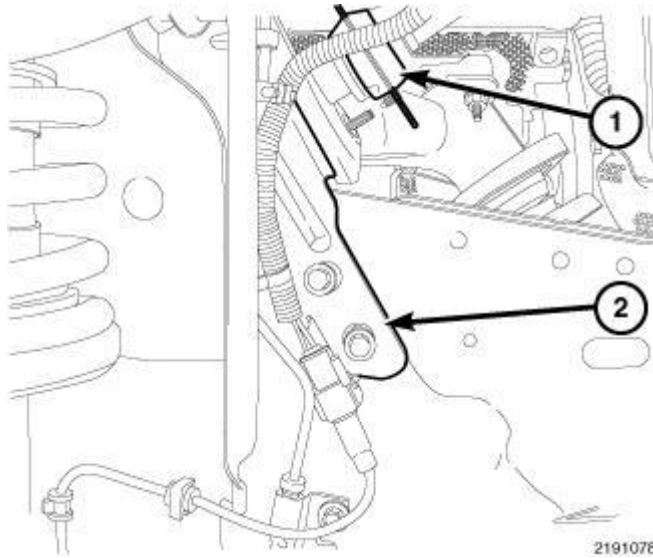


Fig. 261: Intermediate Steering Shaft Support Bracket
Courtesy of CHRYSLER LLC

14. Install the two bolts and two nuts from the intermediate steering shaft support bracket (2) to the frame. Tighten the bolts to 12 N.m (9 ft. lbs.).
15. Install the front left side wheelhouse splash shield. Refer to **Body/Exterior/SHIELD, Splash - Installation**.
16. Install any skid plates (if equipped). Refer to **Frame and Bumpers/Frame/PLATE, Skid - Installation**.
17. Install the front tire and wheel.
18. Lower the vehicle.

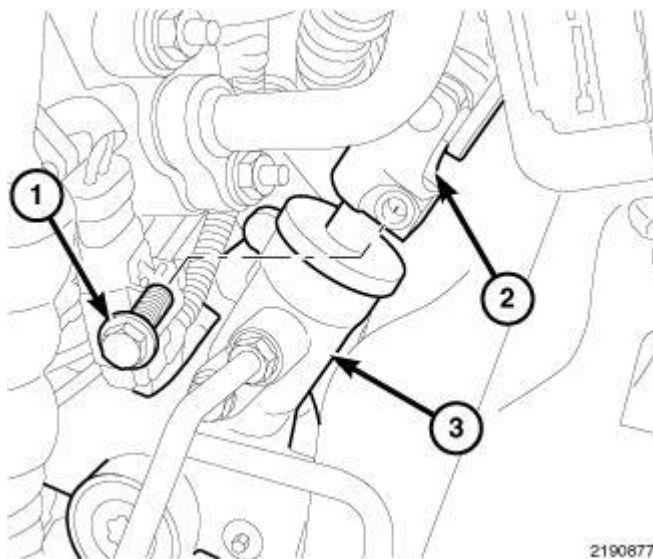


Fig. 262: Intermediate Steering Shaft
Courtesy of CHRYSLER LLC

19. Install the lower coupling pinch bolt (1) through the intermediate steering shaft (2) to the rack and pinion

assembly (3). Tighten the bolt (1) to 49 N.m (36 ft. lbs.)


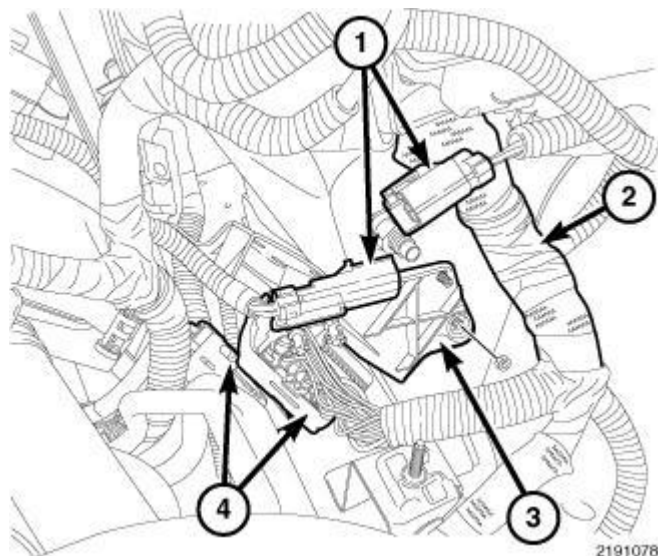


Fig. 263: Bulk Connector Retaining Bracket
Courtesy of CHRYSLER LLC

CAUTION: USE CAUTION WHEN CONNECTING, DISCONNECTING OR REPOSITIONING ANY WIRING HARNESS. DAMAGE COULD OCCUR TO THE WIRING HARNESS DUE TO VEHICLE MILEAGE, VEHICLE AGE AND ENVIRONMENTAL CONDITIONS.

20. Connect the power distribution center (PDC) connector and position the harness.
21. Connect the power steering switch and position the harness.
22. Position the bulk connector retaining bracket (3) and install the nut. Tighten the nut to 5 N.m (44 in. lbs.).
23. Connect the tail lamp harness (1).
24. Connect the bulk connector (4).
25. Install the battery tray. Refer to **Electrical - Engine Systems/Battery System/TRAY, Battery - Installation** .
26. Install the battery. Refer to **Electrical - Engine Systems/Battery System/BATTERY - Installation** .
27. Install the engine cover.
28. Start the engine and check for any leaks.

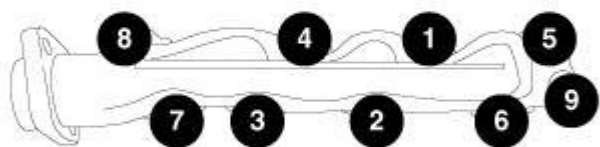EXHAUST MANIFOLD - RIGHT SIDE



44921

Fig. 264: Exhaust Manifold Bolt Tightening Sequence - Right
 Courtesy of CHRYSLER LLC

1. Prior to installation, make sure all gasket mating surfaces are clean and free of any debris.
2. Inspect the exhaust manifold for any damage. See **Engine/Manifolds/MANIFOLD, Exhaust - Inspection**.
3. Install manifold gasket and manifold through the front of the vehicle.

NOTE: **Make sure gasket is properly seated before tightening the manifold stud/bolts.**

4. Install the eight manifold studs/bolts using the sequence provided. Tighten the studs/bolts to 25 N.m (18 ft. lbs.).
5. Install the exhaust manifold heat shield. Tighten the nuts to 8 N.m (71 in. lbs.).
6. Raise and secure the vehicle.
7. Install the bolts and nuts at the right front exhaust pipe/catalytic converter assembly to exhaust manifold flange. Do not tighten.
8. Position the exhaust pipe for proper clearance with the frame and underbody parts. A minimum clearance of 25.4 mm (1.0 in.) is required.
9. Once properly aligned, tighten the right front exhaust pipe/catalytic converter assembly to exhaust manifold bolts to 26 N.m (19 in. lbs.).
10. Tighten the left front exhaust pipe/catalytic converter assembly to the exhaust manifold bolts to 26 N.m (19 in. lbs.).
11. Connect and install the upstream O2 sensor to the exhaust pipe/catalytic converter assembly. Refer to **Fuel System/Fuel Injection/SENSOR, Oxygen - Installation**.
12. Install the front right side wheelhouse splash shield. Refer to **Body/Exterior/SHIELD, Splash -**

Installation .

13. Install any skid plates (if equipped). Refer to **Frame and Bumpers/Frame/PLATE, Skid - Installation** .
14. Install the front tire and wheel.
15. Lower the vehicle.

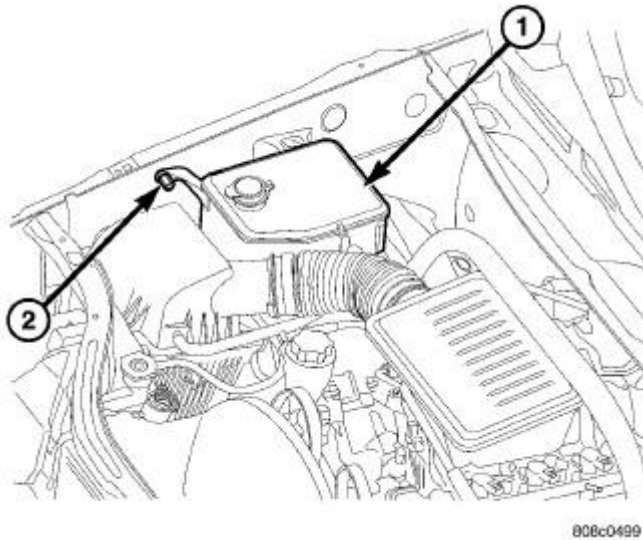


Fig. 265: Coolant Reservoir/Overflow Tank
Courtesy of CHRYSLER LLC

16. If required, connect and position the heater hoses from the heater core tubes in the engine compartment.

CAUTION: USE CAUTION WHEN CONNECTING, DISCONNECTING OR REPOSITIONING ANY WIRING HARNESS. DAMAGE COULD OCCUR TO THE WIRING HARNESS DUE TO VEHICLE MILEAGE, VEHICLE AGE AND ENVIRONMENTAL CONDITIONS.

17. Connect and position the upper right side engine harness.
18. Install the coolant recovery bottle (1). Refer to **Cooling/Engine/BOTTLE, Pressurized Coolant - Installation** .

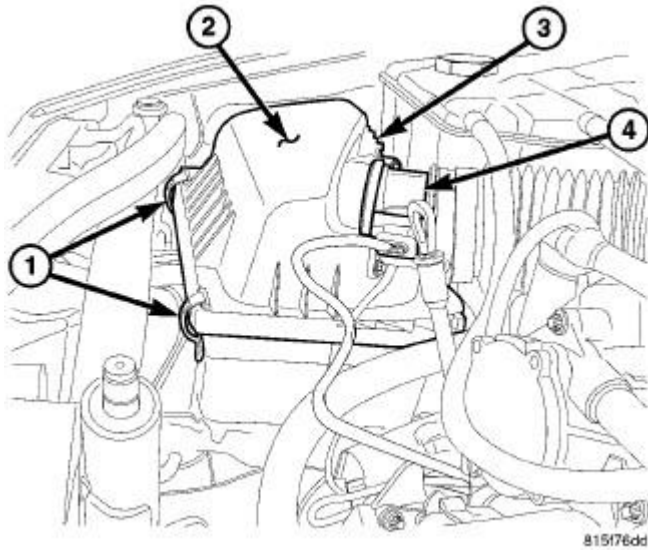



Fig. 266: AIR CLEANER COVER
Courtesy of CHRYSLER LLC

19. Install the air box assembly (2). Refer to **Engine/Air Intake System - Installation** .
20. Fill the engine coolant. Refer to **Cooling - Standard Procedure** .
21. Connect the negative battery terminal.
22. Install the engine cover.
23. Start the engine and check for any leaks.

MANIFOLD, INTAKE

Description

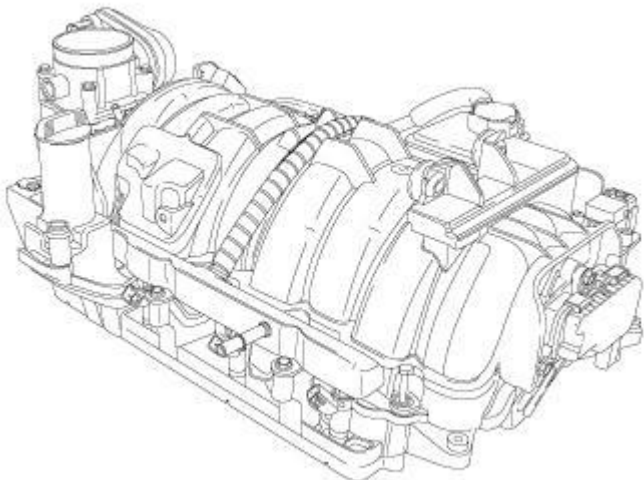DESCRIPTION



1126283

Fig. 267: Intake Manifold**Courtesy of CHRYSLER LLC**

The intake manifold is made of a composite material and features a dual shaft Short Runner Valve (SRV) system to maximize both low end torque and peak power. The SRV is bolted to the rear of the intake manifold and can be service separately from the manifold. The manifold uses a single plane sealing system with individual port seals and a separate PCV port seal to prevent leaks.


Diagnosis and Testing**INTAKE MANIFOLD LEAKAGE**

An intake manifold air leak is characterized by lower than normal manifold vacuum. Also, one or more cylinders may not be functioning.

WARNING: Use extreme caution when the engine is operating. Do not stand in a direct line with the fan. Do not put your hands near the pulleys, belts or the fan. Do not wear loose clothing. Failure to follow these instructions may result in possible serious or fatal injury.

1. Start the engine.
2. Spray a small stream of water at the suspected leak area.
3. If a change in RPM is observed the area of the suspected leak has been found.
4. Repair as required.

Removal**REMOVAL**

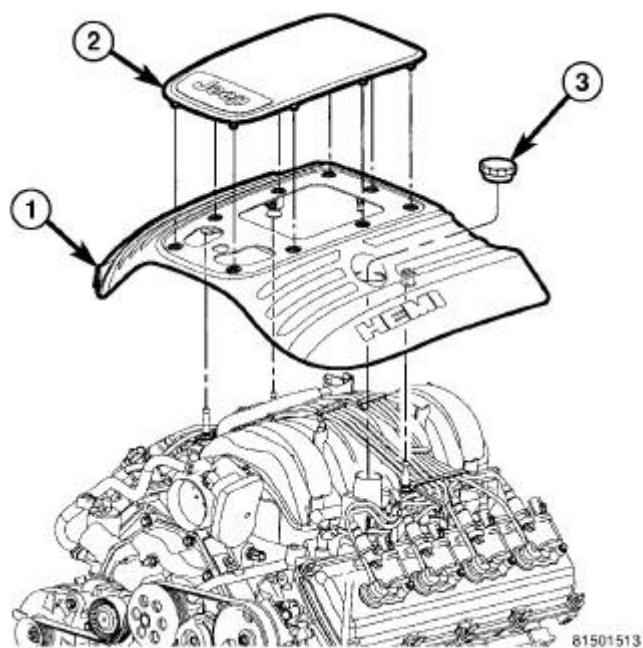**Fig. 268: ENGINE COVER**

Courtesy of CHRYSLER LLC

1. Remove engine cover (1).
2. Bleed fuel system. Refer to **Fuel System/Fuel Delivery - Standard Procedure**.
3. Disconnect negative cable from battery.
4. Remove air inlet hose.
5. Remove ignition wires from on top of intake manifold.
6. Disconnect electrical connectors for the following components:
 - Manifold Absolute Pressure (MAP) Sensor
 - Fuel Injectors
 - Electric Throttle Control (ETC)
7. Remove wire harness from intake manifold.
8. Disconnect brake booster hose, purge hose, and Make Up Air (MUA) hose.
9. Remove EGR tube from intake manifold.
10. Remove intake manifold retaining fasteners in a crisscross pattern starting from the outside bolts and ending at the middle bolts.
11. Remove intake manifold as an assembly.

Cleaning**CLEANING**

NOTE: There is NO approved repair procedure for the intake manifold. If severe

damage is found during inspection, the intake manifold must be replaced.

Before installing the intake manifold thoroughly clean the mating surfaces. Use a suitable cleaning solvent, then air dry.

Inspection

INSPECTION

1. Inspect the intake sealing surface for cracks, nicks and distortion.
2. Inspect the intake manifold vacuum hose fittings for looseness or blockage.

Installation

INSTALLATION

1. Position intake manifold.
2. Install intake manifold retaining bolts, and tighten in sequence from the middle bolts towards the outside in a crisscross pattern. Torque fasteners to 12 N.m (105 in. lbs.).
3. Install EGR tube.
4. Install wire harness on intake manifold.
5. Connect electrical connectors for the following components:

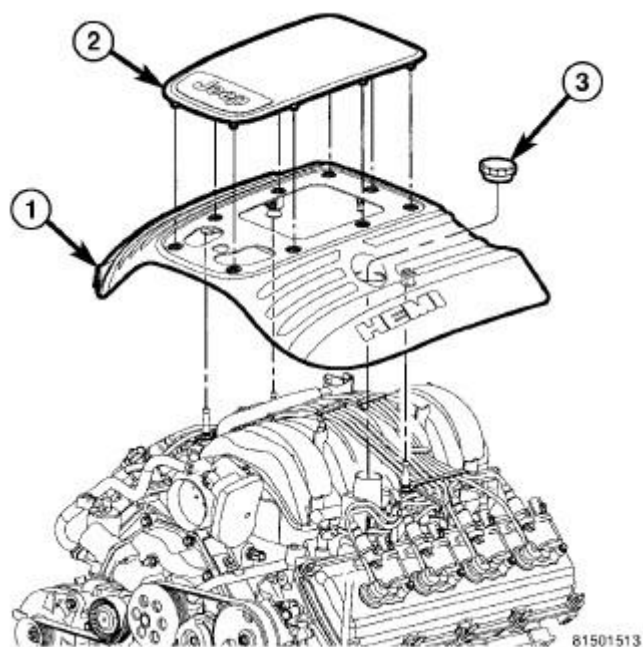


Fig. 269: ENGINE COVER
Courtesy of CHRYSLER LLC

- Manifold Absolute Pressure (MAP) Sensor

- Fuel Injectors
 - ETC (Electronic Throttle Control)
6. Install ignition wires.
 7. Connect Brake booster hose, purge hose, and MUA hose (Make Up Air hose).
 8. Install air inlet hose.
 9. Connect negative cable to battery.
 10. Install engine cover (1).

VALVE TIMING

CHAIN AND SPROCKETS, TIMING

Removal

REMOVAL

1. Disconnect the negative battery cable.
2. Drain the cooling system. Refer to Cooling - Standard Procedure .

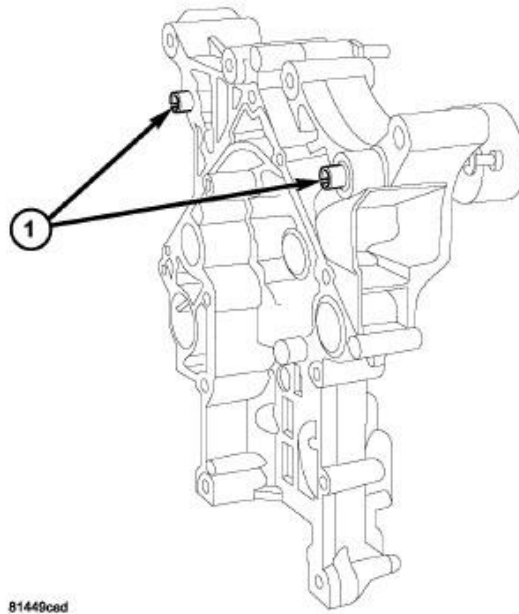


Fig. 270: FRONT COVER SLIDE BUSHINGS
Courtesy of CHRYSLER LLC

NOTE: It is not necessary to remove water pump for timing chain cover removal.

3. Remove the timing chain cover. See Engine/Valve Timing/COVER(S), Engine Timing - Removal.
4. Verify the slide bushings (1) remain installed in the timing chain cover during removal.

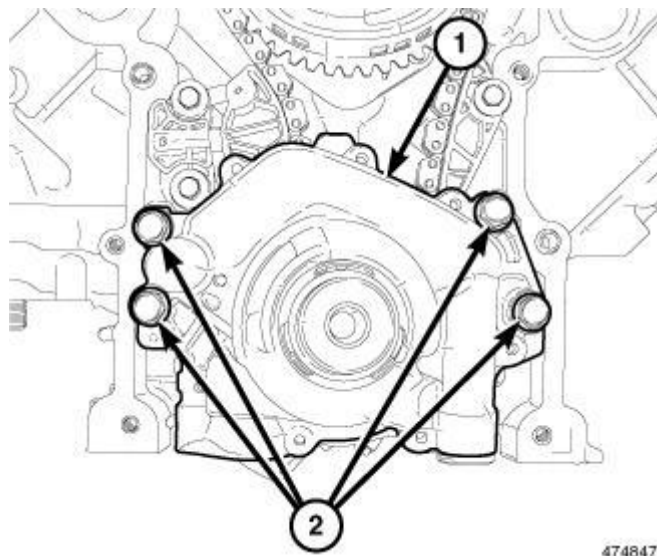


Fig. 271: Oil Pump Retaining Bolts
Courtesy of CHRYSLER LLC

5. Remove the oil pump retaining bolts (2) and remove the oil pump (1).

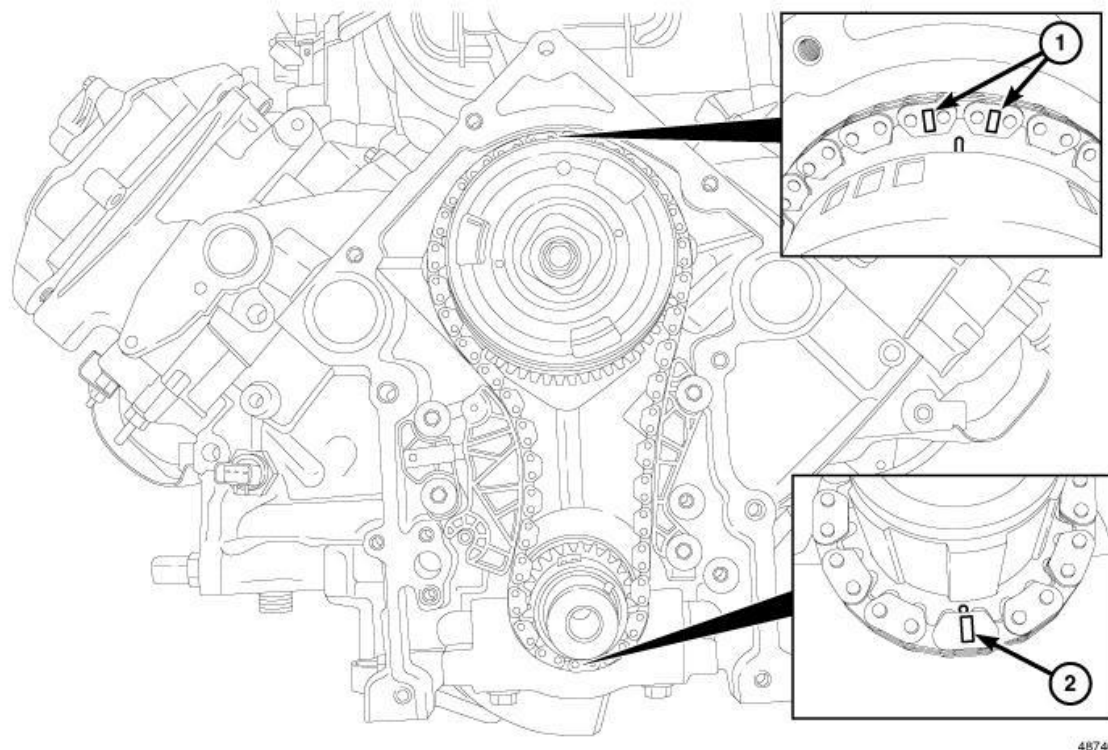


Fig. 272: Aligning Timing Marks With Timing Chain Sprockets
Courtesy of CHRYSLER LLC

6. Install the vibration damper bolt finger tight. Using a suitable socket and breaker bar, rotate the crankshaft to align the timing marks with the timing chain sprockets (1, 2).

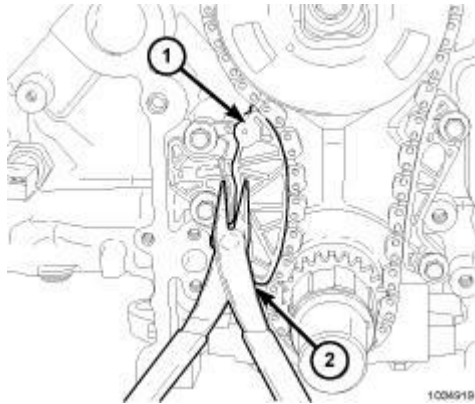


Fig. 273: Chain Tensioner Arm
Courtesy of CHRYSLER LLC

7. Retract the chain tensioner arm (1) until the hole in the arm lines up with the hole in the bracket.

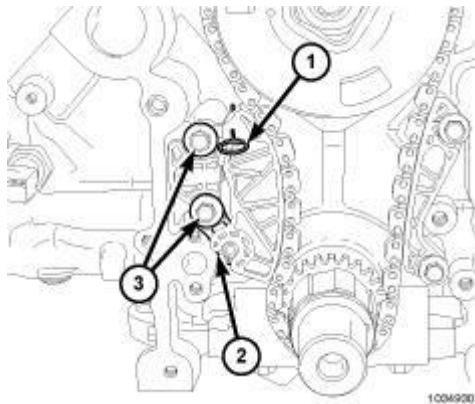


Fig. 274: Timing Chain Tensioner Pin
Courtesy of CHRYSLER LLC

8. Install the Tensioner Pin 8514 (1) into the chain tensioner holes.

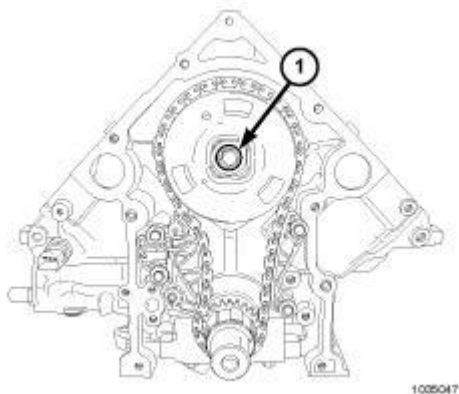


Fig. 275: Camshaft Phaser Retaining Bolt
Courtesy of CHRYSLER LLC

CAUTION: Never attempt to disassemble the camshaft phaser, severe engine damage could result.

9. Remove the camshaft phaser retaining bolt (1) and remove the timing chain with the camshaft phaser and crankshaft sprocket.

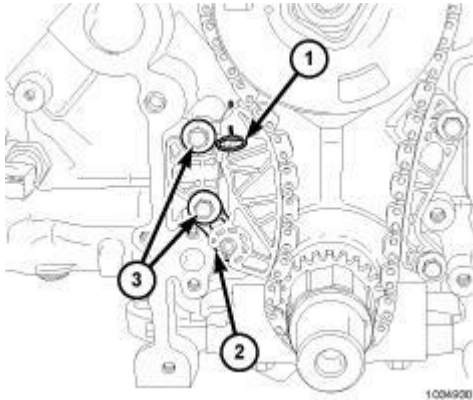


Fig. 276: Timing Chain Tensioner Pin
Courtesy of CHRYSLER LLC

NOTE: Inspect the timing chain tensioner and timing chain guide shoes for wear and replace as necessary.

10. If the timing chain tensioner is being replaced, remove the retaining bolts (3) and remove the timing chain tensioner (2).

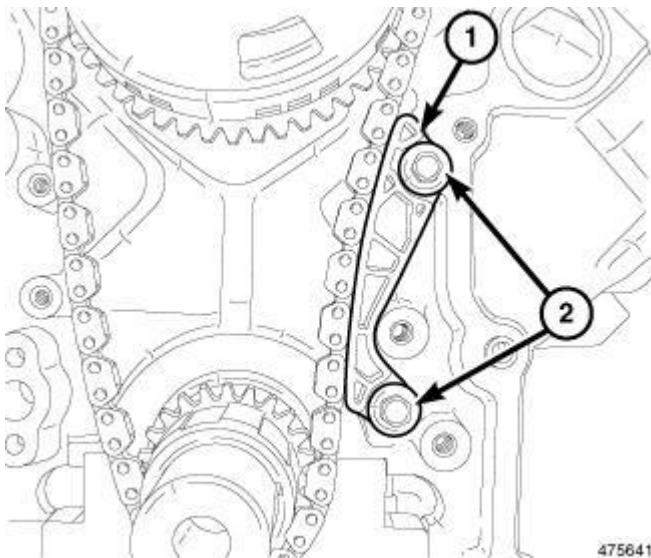
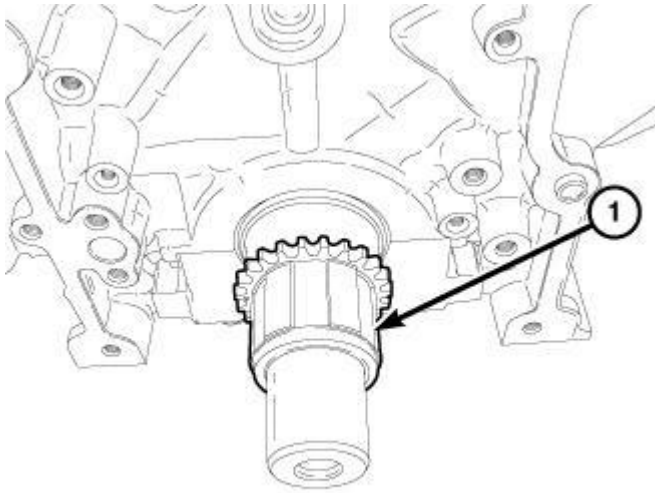


Fig. 277: Timing Chain Guide
Courtesy of CHRYSLER LLC


11. If the timing chain guide (1) is being replaced, remove the retaining bolts (2) and remove the timing chain guide.

Installation**INSTALLATION**

475580

Fig. 278: Crankshaft Sprocket
Courtesy of CHRYSLER LLC

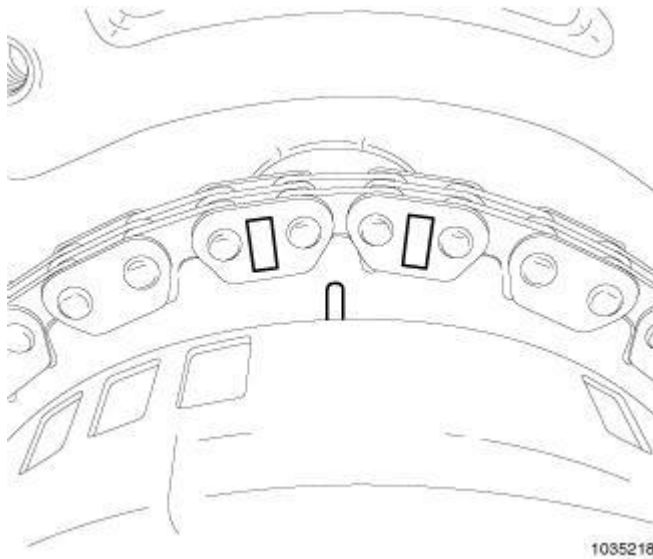
1. Install the crankshaft sprocket (1) and position halfway onto the crankshaft.



1035218

Fig. 279: Aligning Timing Chain & Camshaft Phaser Marks
Courtesy of CHRYSLER LLC

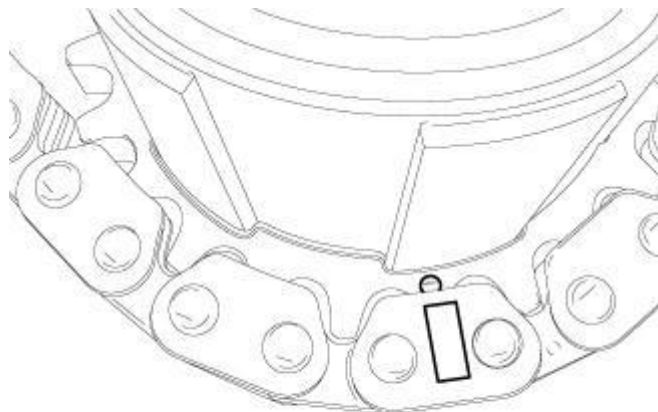
2. While holding the camshaft phaser in hand, position the timing chain on the camshaft phaser and align the timing marks as shown in **Fig. 279**.



475628

Fig. 280: Aligning Timing Chain & Crankshaft Sprocket Marks
Courtesy of CHRYSLER LLC

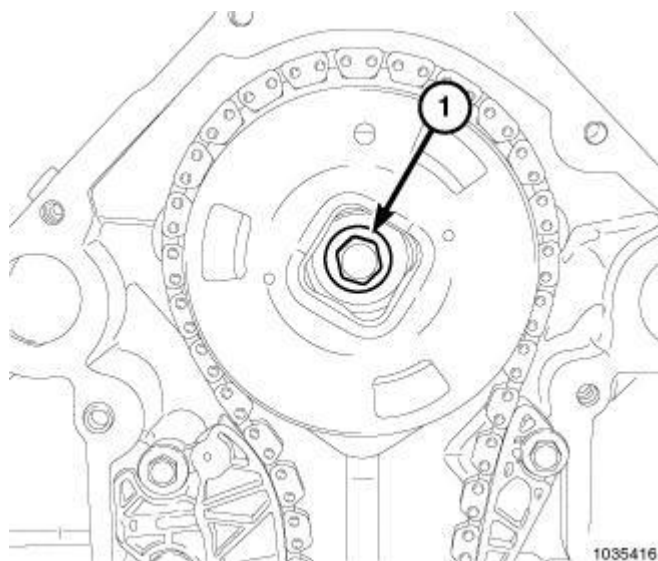3. While holding the camshaft phaser and timing chain in hand, position the timing chain on the crankshaft sprocket and align the timing mark as shown in **Fig. 280**.



1035416

Fig. 281: Camshaft Phaser Retaining Bolt
Courtesy of CHRYSLER LLC

4. Align the slot in the camshaft phaser with the dowel on the camshaft and position the camshaft phaser on the camshaft while sliding the crankshaft sprocket into position.
5. Install the camshaft phaser retaining bolt (1) finger tight.

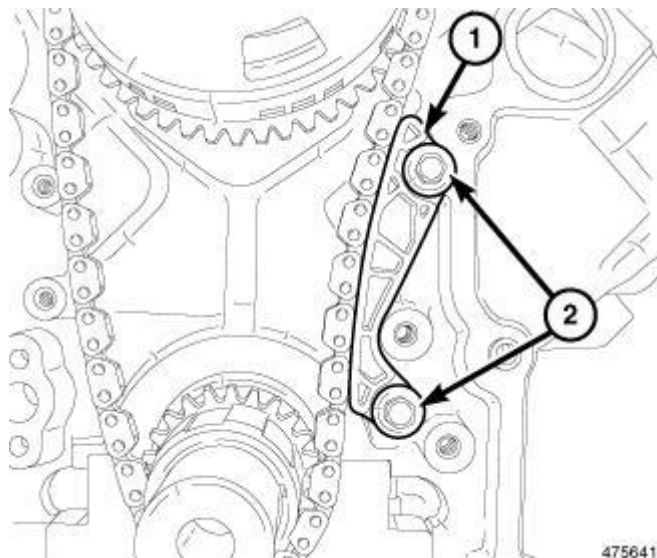


Fig. 282: Timing Chain Guide
Courtesy of CHRYSLER LLC

6. If removed, install the timing chain guide (1) and tighten the bolts (2) to 11 N.m (8 ft. lbs.).


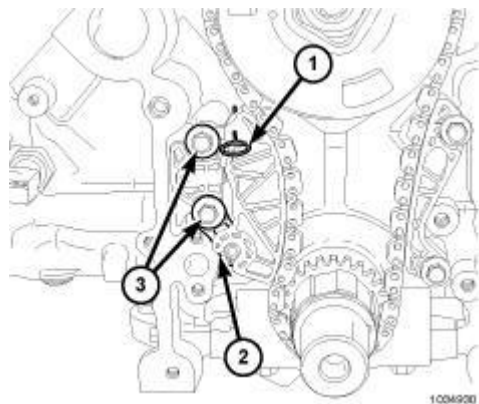


Fig. 283: Timing Chain Tensioner Pin
Courtesy of CHRYSLER LLC

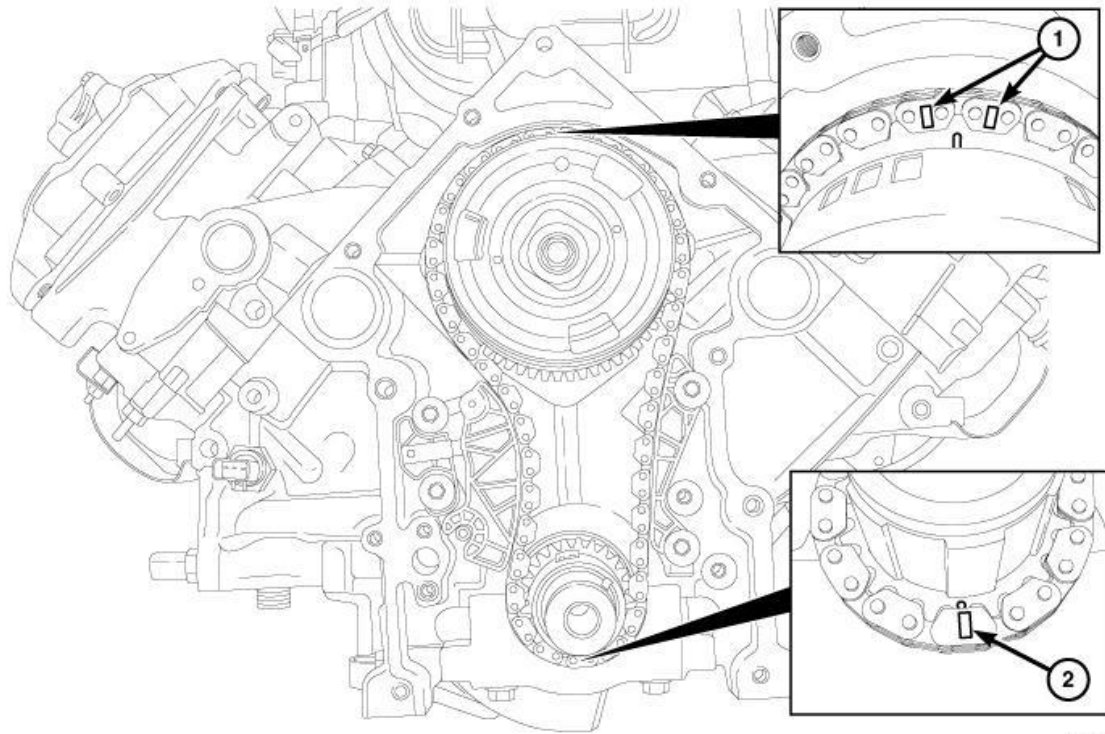
7. If removed, install the timing chain tensioner (2) and tighten the bolts (3) to 11 N.m (8 ft. lbs.).
8. Remove the tensioner pin 8514 (1).



487402

Fig. 284: Aligning Timing Marks With Timing Chain Sprockets
Courtesy of CHRYSLER LLC

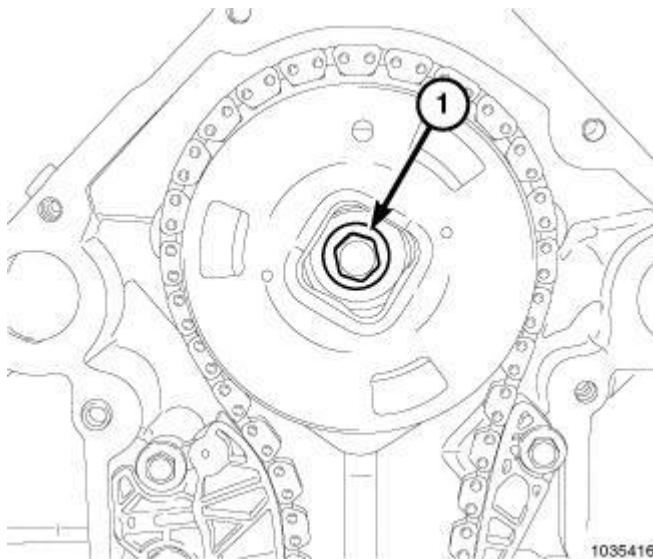9. Rotate the crankshaft two revolutions and verify the alignment of the timing marks (1, 2). If the timing marks do not line up, remove the camshaft sprocket and realign.



1035416

Fig. 285: Camshaft Phaser Retaining Bolt
Courtesy of CHRYSLER LLC

10. Tighten the camshaft phaser bolt (1) to 85 N.m (63 ft. lbs.).

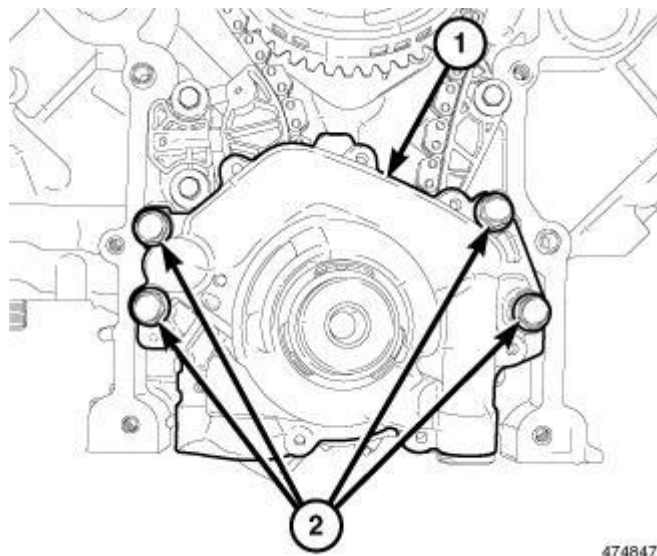


Fig. 286: Oil Pump Retaining Bolts
Courtesy of CHRYSLER LLC

11. Position the oil pump (1) onto the crankshaft and install the oil pump retaining bolts (2) finger tight.

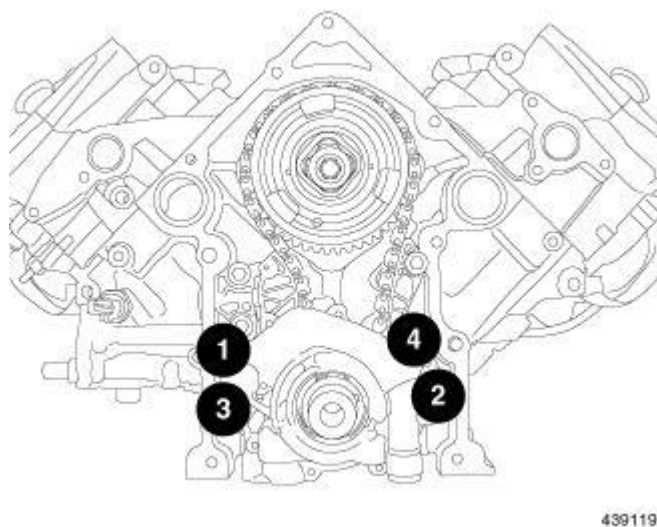


Fig. 287: Oil Pump Retaining Bolt Tightening Sequence
Courtesy of CHRYSLER LLC

12. Using the sequence shown in **Fig. 287**, tighten the oil pump retaining bolts to 28 N.m (21 ft. lbs.).

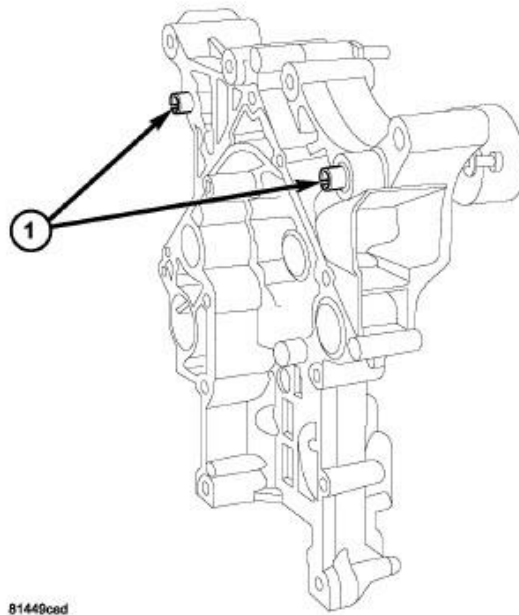


Fig. 288: FRONT COVER SLIDE BUSHINGS


Courtesy of CHRYSLER LLC

13. Verify the slide bushings (1) are installed in the timing chain cover.
14. Install the timing chain cover. See **Engine/Valve Timing/COVER(S), Engine Timing - Installation.**
15. Fill the engine with oil.
16. Fill the cooling system. Refer to **Cooling - Standard Procedure** .
17. Connect the negative battery cable.
18. Start the engine and check for leaks.

COVER(S), ENGINE TIMING

Removal

REMOVAL

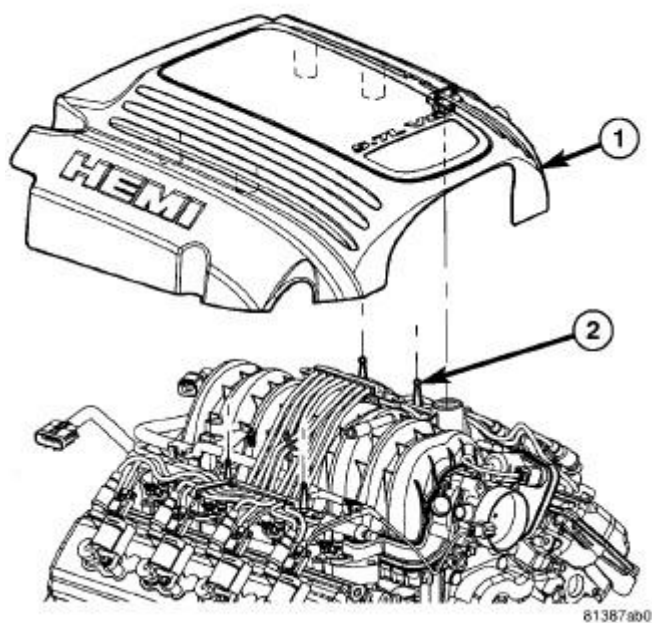**Fig. 289: ENGINE COVER**

Courtesy of CHRYSLER LLC

- | |
|---|
| 1 - Engine Cover
2 - Attaching Studs |
|---|

1. Disconnect the battery negative cable.
2. Remove the engine cover (1).
3. Remove air cleaner assembly.
4. Drain cooling system.
5. Remove accessory drive belt.
6. Remove the cooling fan.
7. Remove coolant bottle and washer bottle.
8. Remove fan shroud.

NOTE: It is not necessary to disconnect A/C lines or discharge freon.

9. Remove A/C compressor and set aside.

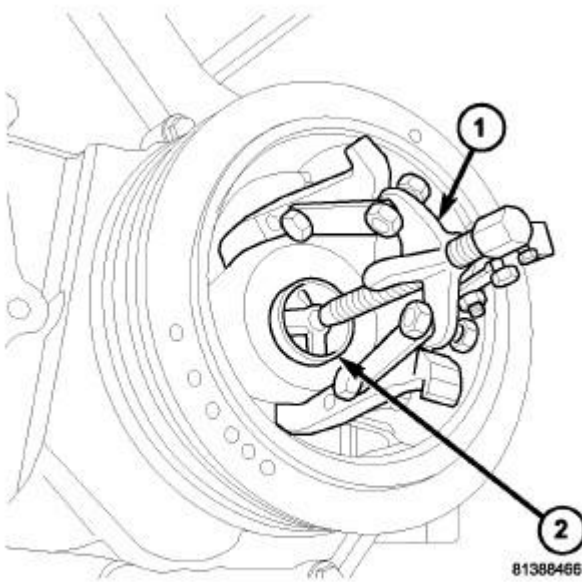


Fig. 290: CRANKSHAFT DAMPER REMOVAL
Courtesy of CHRYSLER LLC

1 - 3-Jaw Puller 1023 2 - Crankshaft Insert 8513A
--

10. Remove the generator.
11. Remove upper radiator hose.
12. Disconnect both heater hoses at timing cover.
13. Disconnect lower radiator hose at engine.
14. Remove accessory drive belt tensioner and both idler pulleys.
15. Remove crankshaft damper (2). See **Engine/Engine Block/DAMPER, Vibration - Removal**.

NOTE: Do not remove the hoses from the power steering pump.

16. Remove power steering pump and set aside.

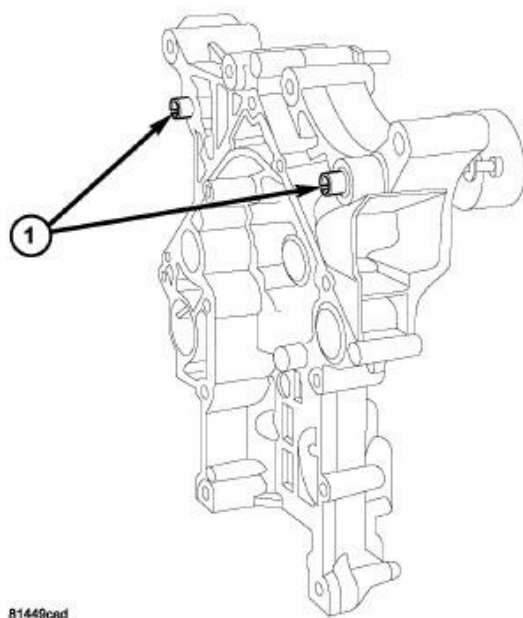


Fig. 291: FRONT COVER SLIDE BUSHINGS
Courtesy of CHRYSLER LLC

17. Remove the dipstick support bolt.
18. Drain the engine oil.
19. Remove the oil pan and pick up tube. See Engine/Lubrication/PAN, Oil - Removal.

NOTE: It is not necessary to remove water pump for timing cover removal.

20. Remove timing cover bolts and remove cover.
21. Verify that timing cover slide bushings (1) are located in timing cover.

Installation

INSTALLATION

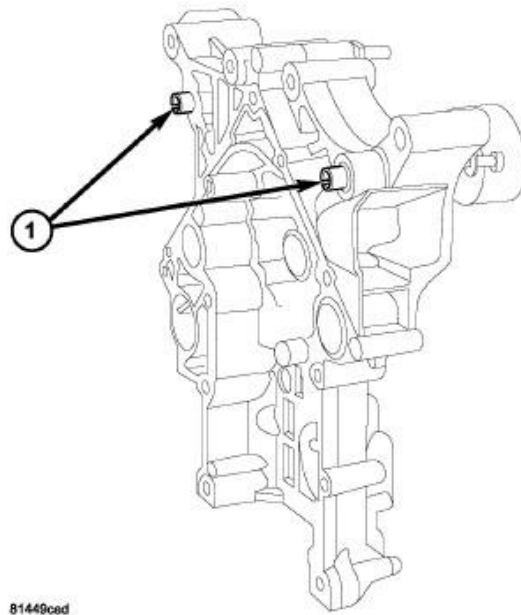



Fig. 292: FRONT COVER SLIDE BUSHINGS
Courtesy of CHRYSLER LLC

1. Clean timing chain cover and block surface.

NOTE: Always install a new gasket on timing cover.

2. Verify that the slide bushings (1) are installed in timing cover.
3. Install cover and new gasket. Tighten fasteners to 28 N.m (250 in. lbs.).

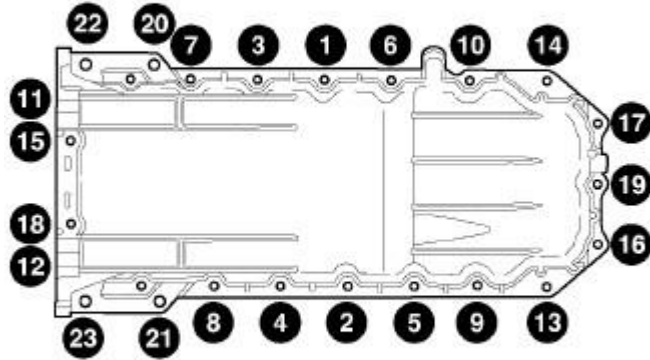NOTE: The large lifting stud is torqued to 55 N.m (40 ft. lbs.).



81387997

Fig. 293: Oil Pan Torque Sequence
Courtesy of CHRYSLER LLC

4. Install the oil pan and pick up tube. See [Engine/Lubrication/PAN, Oil - Installation](#).
5. Install the A/C compressor.
6. Install the generator.
7. Install power steering pump.
8. Install the dipstick support bolt.
9. Install the thermostat housing.
10. Install crankshaft damper. See [Engine/Engine Block/DAMPER, Vibration - Installation](#).
11. Install accessory drive belt tensioner assembly and both idler pulleys.

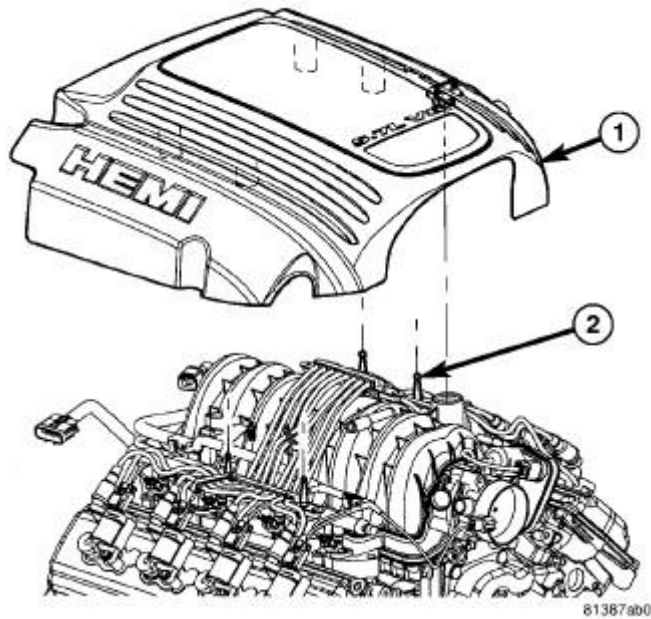


Fig. 294: ENGINE COVER
Courtesy of CHRYSLER LLC

- | |
|---|
| 1 - Engine Cover
2 - Attaching Studs |
|---|

12. Install radiator lower hose.
13. Install both heater hoses.
14. Install radiator fan shroud.
15. Install the cooling fan.
16. Install the accessory drive belt.
17. Install the coolant bottle and washer bottle.
18. Install the upper radiator hose.
19. Install the air cleaner assembly.
20. Fill cooling system.
21. Refill engine oil.
22. Connect the battery negative cable.
23. Install the engine cover (1).

TENSIONER, ENGINE TIMING

Description

DESCRIPTION

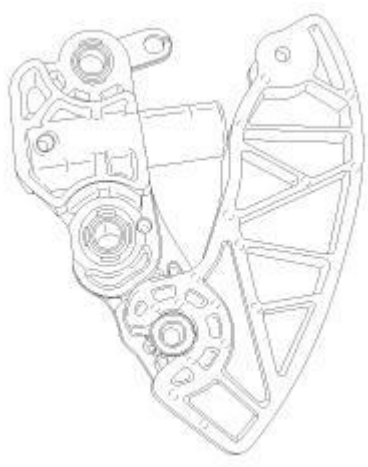


Fig. 295: Timing Chain Tensioner Arm
Courtesy of CHRYSLER LLC

The timing chain tensioner is a spring loaded design. It consists of two chain guide shoes. One shoe is fixed in place and the other is spring loaded to keep tension on the chain.

Operation

OPERATION

The timing chain tension is maintained by routing the timing chain through the tensioner assembly. A nylon shoe presses on the timing chain maintaining the correct chain tension.