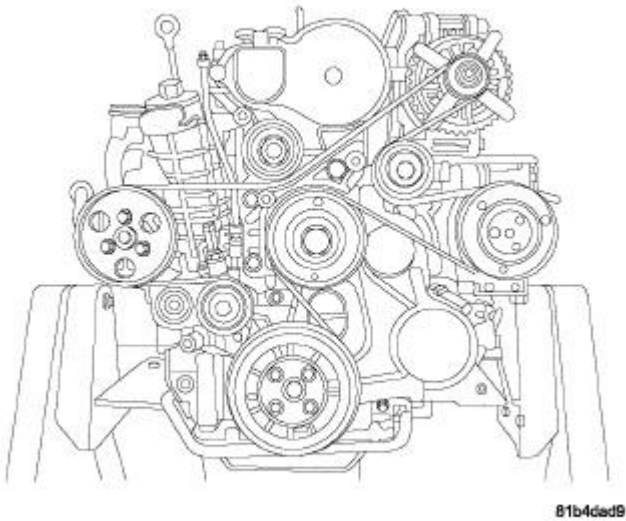


2010 ENGINE**2.8L Diesel - Service Information - Wrangler****DESCRIPTION****DESCRIPTION****Fig. 1: 2.8L ENGINE****Courtesy of CHRYSLER LLC**

The 2.8L (2776cc) four-cylinder "common rail" direct injection engine is an in-line overhead valve design. The engine utilizes a cast iron cylinder block. The engine has a one piece aluminum cylinder head with four valves per cylinder and dual overhead cam shafts. The 2.8L is turbocharged, intercooled and also equipped with a EGR cooler.

The identification stamp for the 2.8L is located on the left side of the engine block, above the starter. The engine code label is located on the front timing cover and is the same as the engine I.D. and serial number. There is also a fuel system label on the front timing cover used for fuel system identification during ECM programming.

STANDARD PROCEDURE**ENGINE GASKET SURFACE PREPARATION**

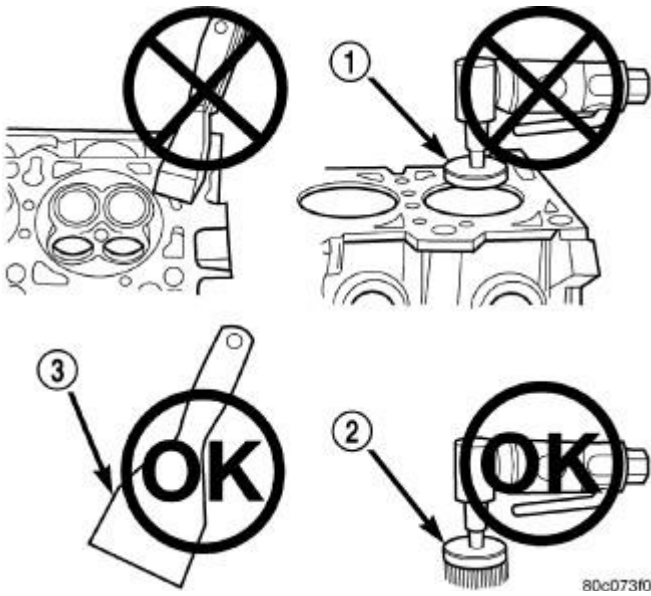


Fig. 2: Proper Tool Usage For Surface Preparation
Courtesy of CHRYSLER LLC

- | |
|---|
| 1 - ABRASIVE PAD
2 - 3M ROLOC™ BRISTLE DISC
3 - PLASTIC SCRAPER |
|---|

To ensure engine gasket sealing, proper surface preparation must be performed, especially with the use of aluminum engine components and multi-layer steel cylinder head gaskets.

Never use the following to clean gasket surfaces:


- Metal scraper
- Abrasive pad or paper to clean cylinder block and head
- High speed power tool with an abrasive pad (1), 3M Roloc™ Bristle Disc (2), or a wire brush (3)

NOTE: **Multi-Layer Steel (MLS) head gaskets require a scratch free sealing surface.**

Only use the following for cleaning gasket surfaces:

- Solvent or a commercially available gasket remover
- Plastic scraper
- Sealing surfaces must be free of grease or oil residue. Clean surfaces with Mopar® brake parts cleaner (or equivalent)

STANDARD PROCEDURE - COMPRESSION TEST

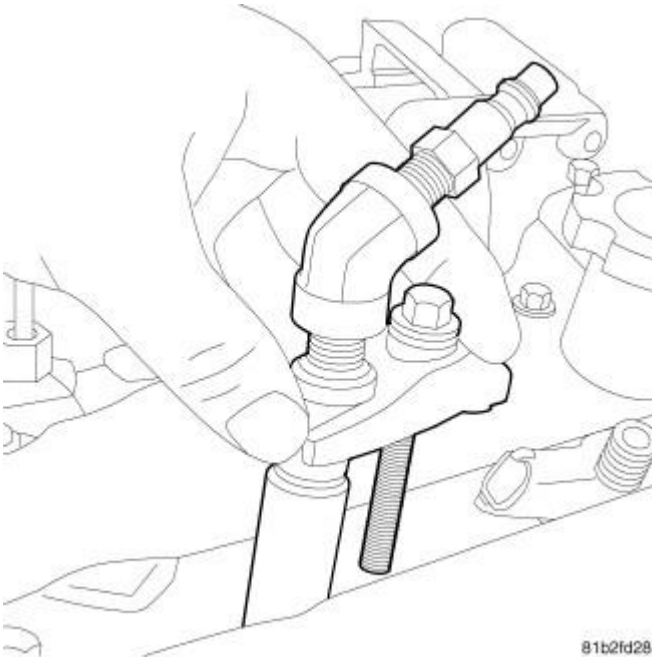**Fig. 3: COMPRESSION TESTER**

Courtesy of CHRYSLER LLC

1. Warm up engine to operating temperature (approximately 80 °C, 176 °F).
2. Shut off engine
3. Disconnect fuel feed and return lines from the fuel filter
4. Operate a vacuum pump connected to the return line until no more fuel comes out
5. Remove injectors
6. Crank engine several times with the starter to eliminate combustion residues in the cylinders
7. Insert Compression Test Adapter VM.1072A into injector hole of cylinder to be tested. Install injector retainer bolts and tighten.
8. Test compression pressure by cranking engine with starter for at least 8 revolutions.

Cylinder compression Difference Between Cylinders	10 Bar (44 psi)
--	------------------------

9. Carry out test procedure at the remaining cylinders in the same way.
10. Remove Compression Test Adapter VM.1072A from cylinder head.
11. Install injectors with new high pressure fuel tubes.

REMOVAL

REMOVAL - ENGINE

1. Disconnect the negative and positive battery cables.

2. Remove the battery.
3. Recover the refrigerant. Refer to **Heating and Air Conditioning/Plumbing - Standard Procedure**.
4. On manual transmission models, remove the shifter level. Refer to **Transmission and Transfer Case/Manual/LEVER, Shift - Removal**.
5. Remove the air cleaner body. See **Engine/Air Intake System/BODY, Air Cleaner - Removal**.

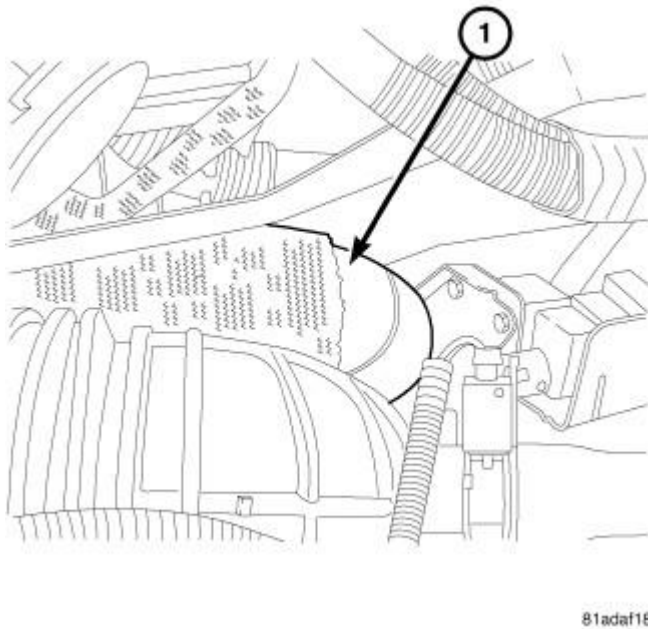


Fig. 4: CAC Turbo Outlet
Courtesy of CHRYSLER LLC

6. Remove the turbocharger air inlet tube at turbo.
7. Remove the right side charge air cooler hose at cooler.
8. Raise and support the vehicle. Refer to **Vehicle Quick Reference/Hoisting - Standard Procedure**.
9. Remove the front lower splash shield.
10. Drain the coolant. Refer to **Cooling - Standard Procedure**.
11. Drain the engine oil.
12. Remove the transmission skid plate.
13. Remove the catalytic converter. Refer to **Exhaust System/CONVERTER, Catalytic - Removal**.
14. Remove the left front wheelhouse splash shield. Refer to **Body/Exterior/SHIELD, Splash - Removal**.

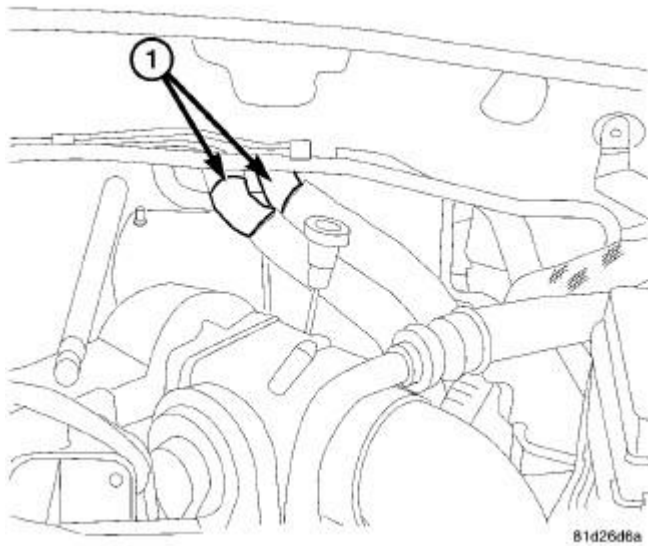


Fig. 5: HEATER CORE COOLANT HOSES
Courtesy of CHRYSLER LLC

15. Remove the coolant recovery bottle. Refer to **Cooling/Engine/BOTTLE, Coolant Recovery - Removal** .
16. Disconnect the engine harness connectors at right side firewall.
17. Remove the coolant hoses (1) from the heater core.
18. Remove the upper radiator hose at radiator.
19. Remove the fan assembly. Refer to **Cooling/Engine/FAN, Cooling - Removal** .
20. Remove the serpentine belt. Refer to **Cooling/Accessory Drive/BELT, Serpentine - Removal** .

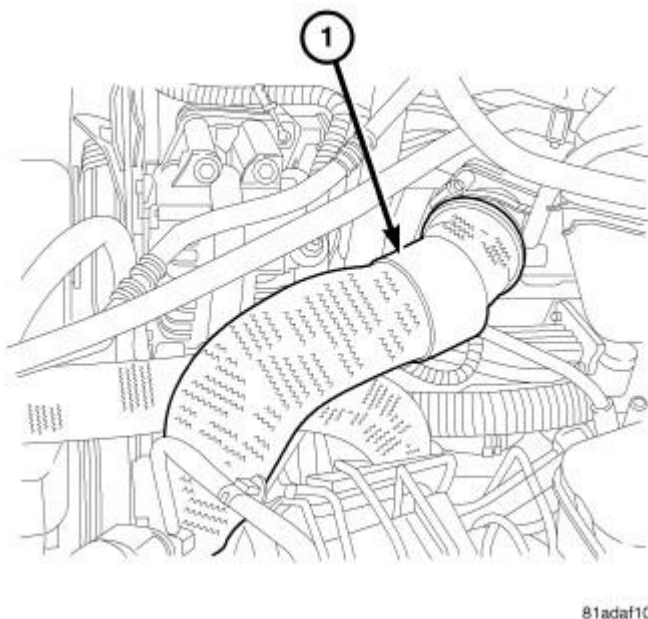
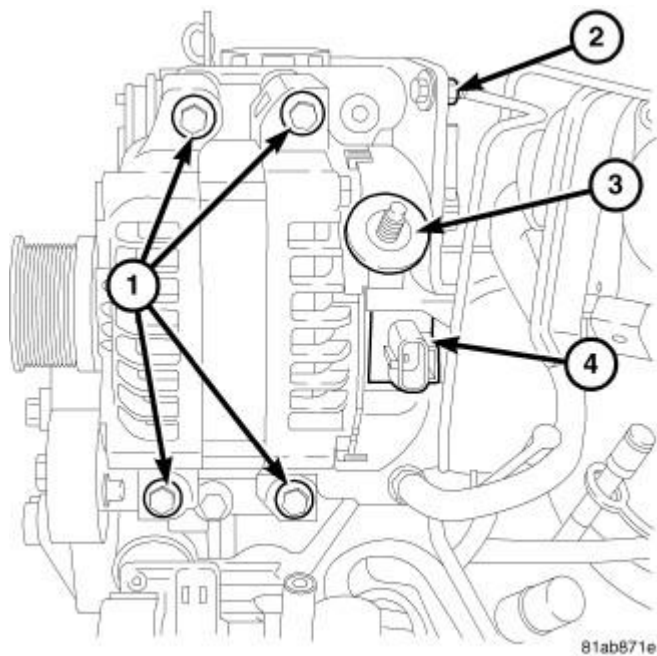


Fig. 6: Charge Outlet Hose


Courtesy of CHRYSLER LLC

21. Remove the left side charge air cooler hose at EGR air flow control valve.
22. Remove the left side charge air cooler hose at cooler.

**Fig. 7: GENERATOR**


Courtesy of CHRYSLER LLC

23. Remove the generator. Refer to **Electrical/Charging/GENERATOR - Removal** .

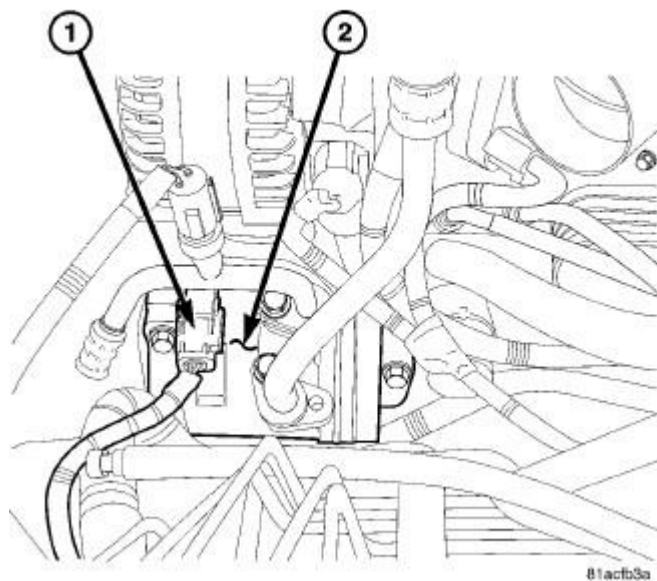**Fig. 8: A/C COMPRESSOR**

Courtesy of CHRYSLER LLC


24. Remove the A/C compressor. Refer to **Heating and Air Conditioning/Plumbing/COMPRESSOR, A/C - Removal**.

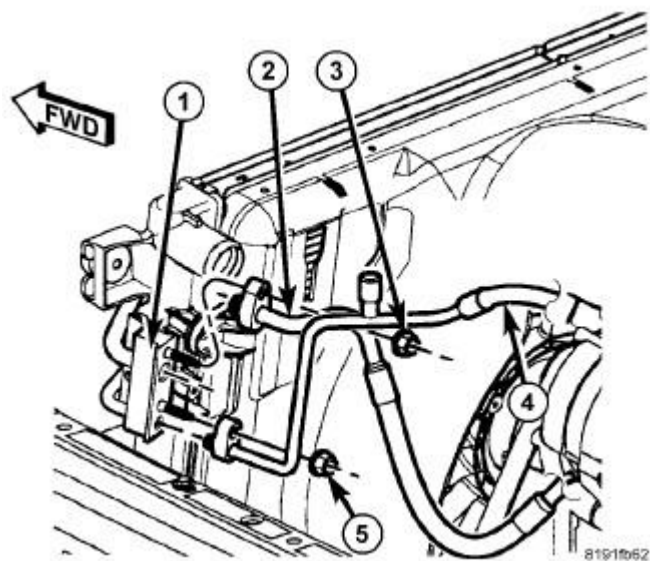**Fig. 9: Refrigerator Lines To Condenser**

Courtesy of CHRYSLER LLC

25. Remove the A/C suction and liquid line from the condenser.
26. Remove the A/C suction and liquid lines from the evaporator.

27. Remove and discard gasket/O-ring seals and install protective caps over openings.

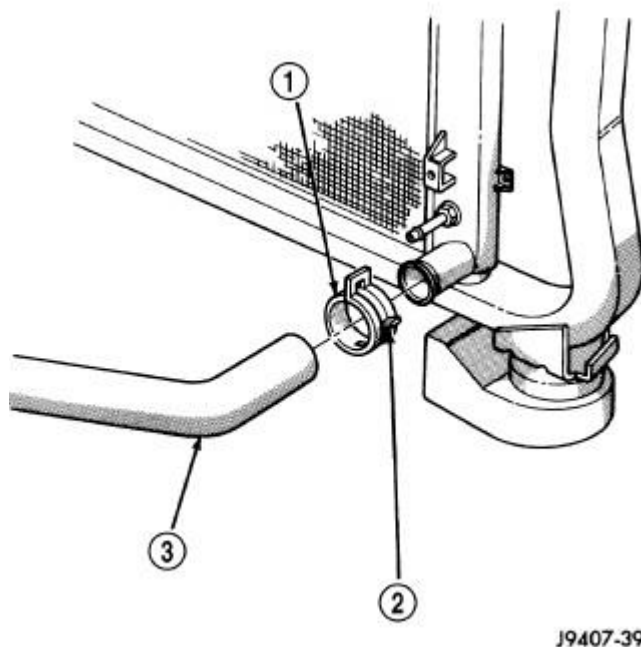

J9407-39

Fig. 10: Removing/Installing Lower Radiator Hose
Courtesy of CHRYSLER LLC

28. Remove the lower radiator hose at radiator.

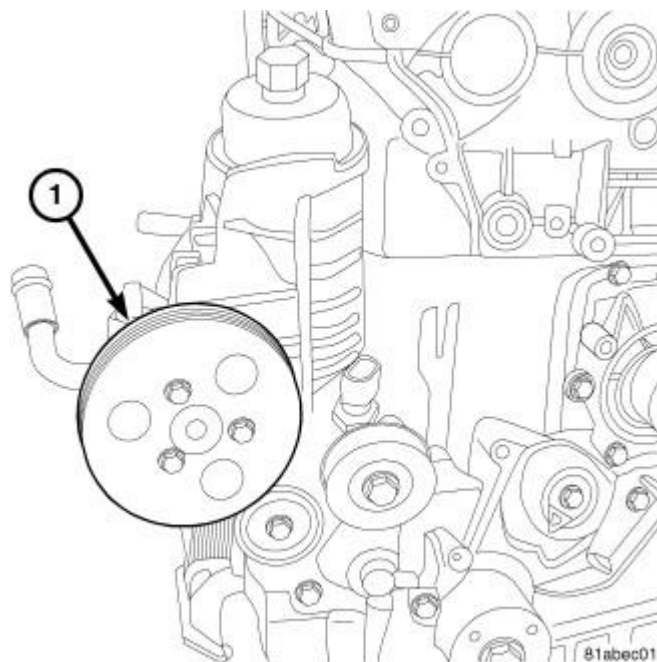


Fig. 11: POWER STEERING PUMP PULLEY
Courtesy of CHRYSLER LLC

29. Remove the power steering pump pulley (1).

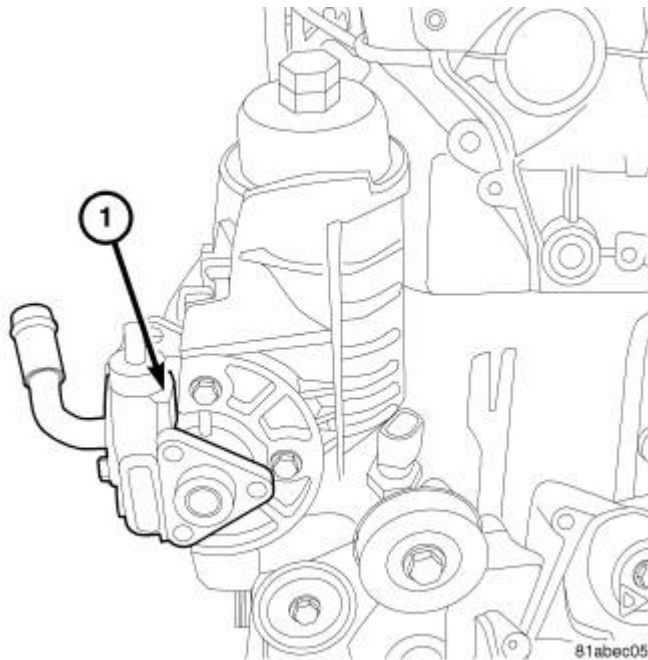


Fig. 12: Power Steering Pump
Courtesy of CHRYSLER LLC

30. Remove the power steering pump (1) and position aside.
31. Disconnect the oil pressure sensor harness connector.
32. Disconnect the EGR vacuum solenoid harness connector.


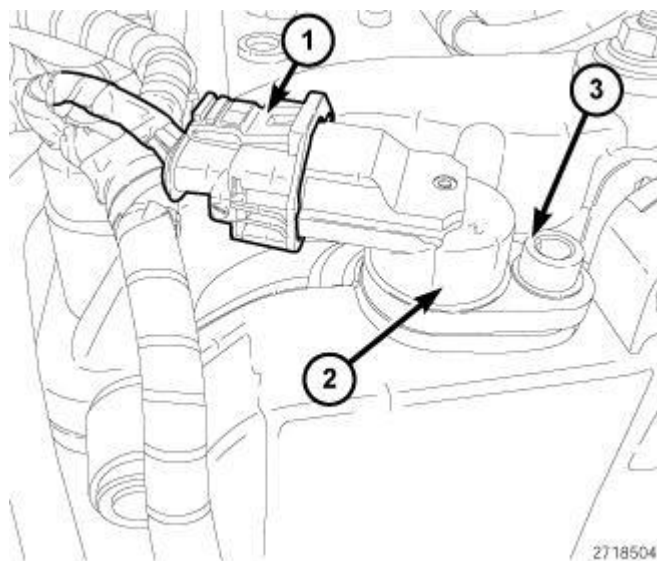


Fig. 13: CAMSHAFT POSITION SENSOR HARNESS CONNECTOR
Courtesy of CHRYSLER LLC


33. Disconnect the Camshaft Position Sensor (CMP) harness connector (1).

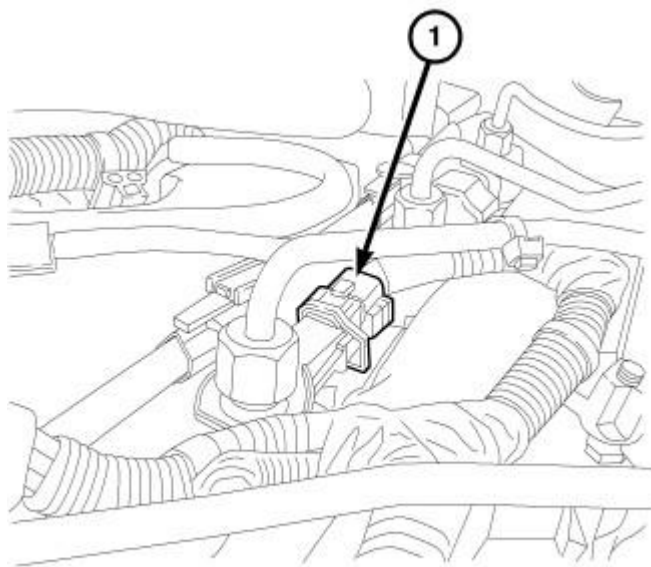

81adaf67

Fig. 14: INJECTOR CONNECTOR
Courtesy of CHRYSLER LLC

34. Disconnect the fuel injector harness connectors.

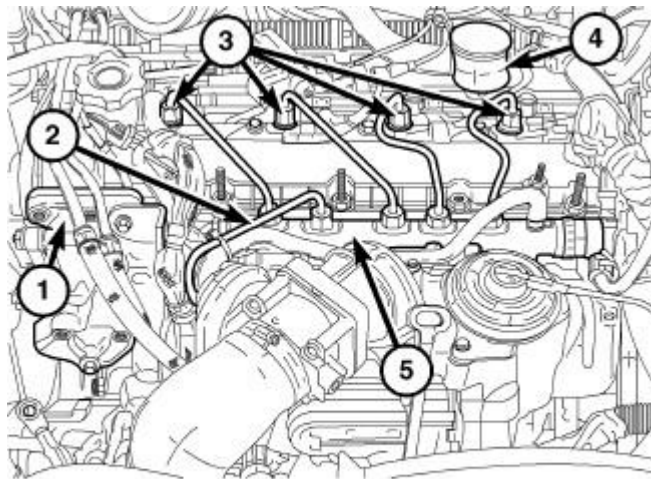


81daf5dc

Fig. 15: FUEL RAIL
Courtesy of CHRYSLER LLC

35. Disconnect the turbocharger actuator connector.
36. Disconnect the coolant temperature sensor harness connector.
37. Disconnect the fuel pressure sensor harness connector.
38. Disconnect the fuel pressure regulator harness connector.


39. Disconnect the EGR airflow control valve harness connector.

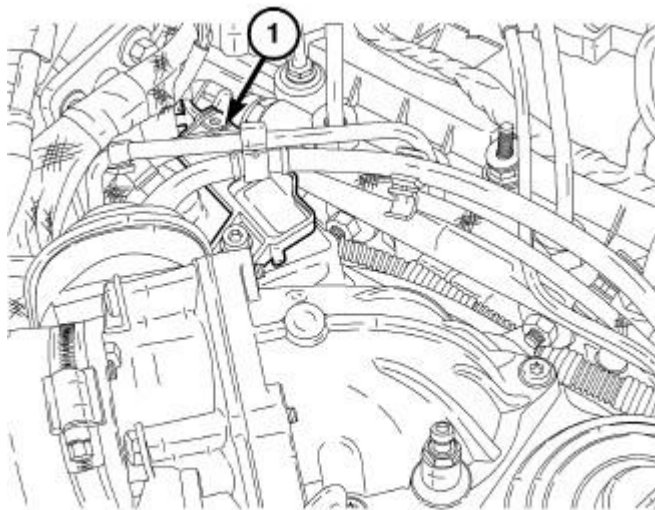

81daf5ed

Fig. 16: IAT/BPS SENSOR
Courtesy of CHRYSLER LLC


40. Disconnect the IAT/BPS harness connector (1).

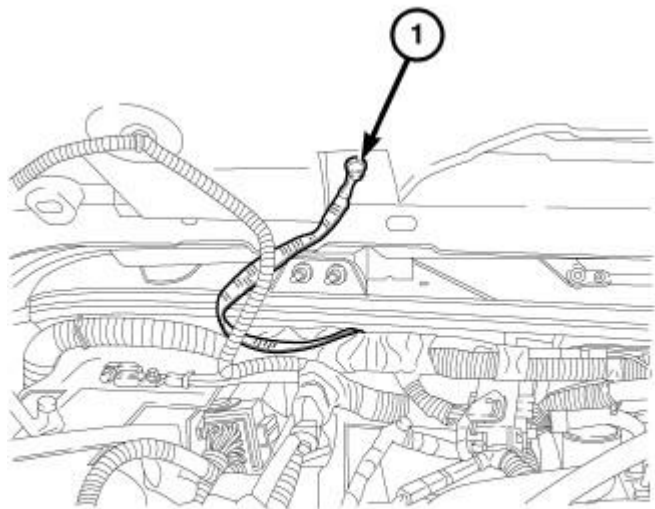

81adaf60


Fig. 17: Hood Ground Strap
Courtesy of CHRYSLER LLC

41. Disconnect the ground strap between the cowl and hood.

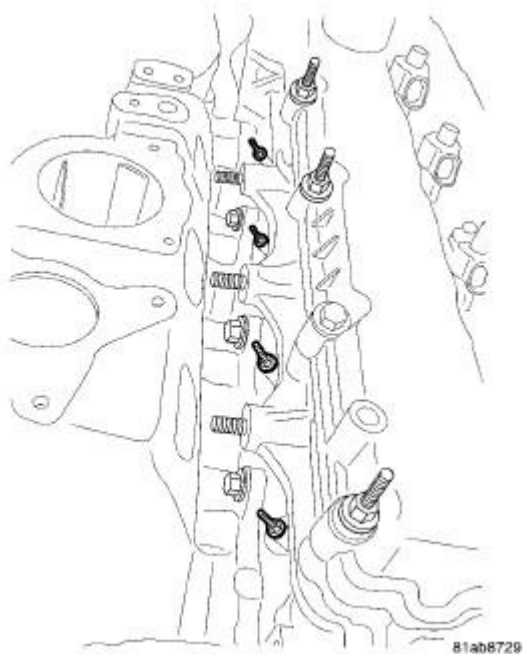**Fig. 18: Glow Plugs**

Courtesy of CHRYSLER LLC

42. Disconnect the glow plug harness connectors.
43. Position aside the upper engine harness.
44. Disconnect the brake booster vacuum hose.

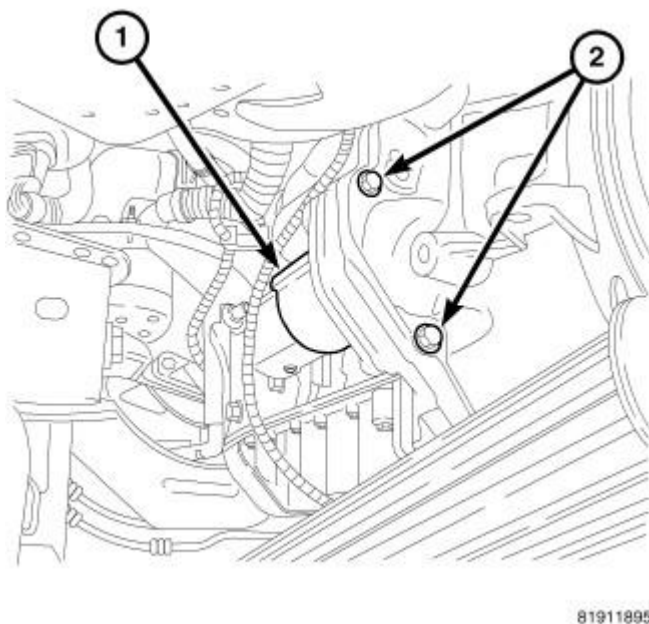**Fig. 19: STARTER MOUNTING 2.8L DIESEL**

Courtesy of CHRYSLER LLC

45. Remove the starter. Refer to **Electrical/Starting/STARTER - Removal**.

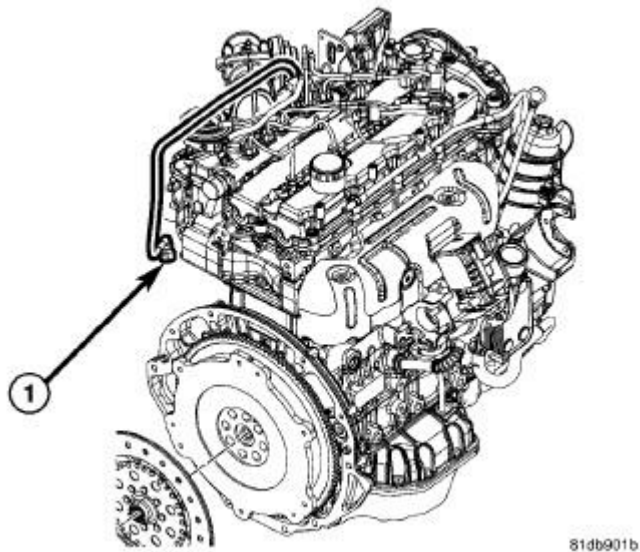


Fig. 20: Fuel Pump Return Line
Courtesy of CHRYSLER LLC

46. Disconnect the fuel quantity solenoid.
47. Disconnect the fuel supply and return tubes to high pressure pump.
48. Disconnect the fuel rail return line (1).
49. Remove bolt, and the engine ground cable at engine block.
50. Remove the crankshaft position sensor. Refer to **Fuel System/Fuel Injection/SENSOR, Crankshaft Position - Removal**.

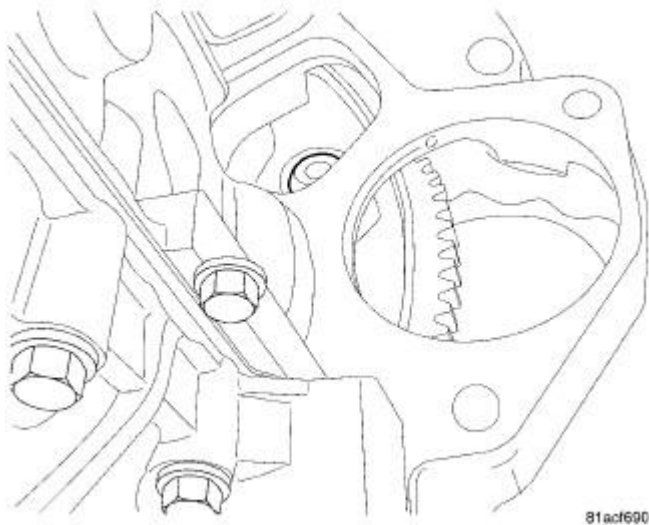
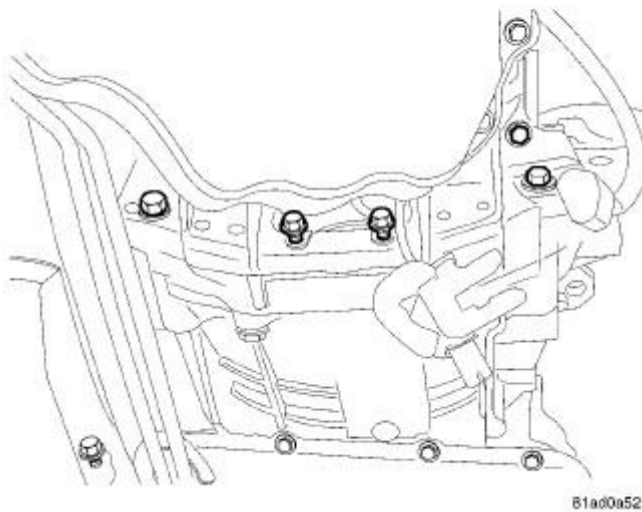
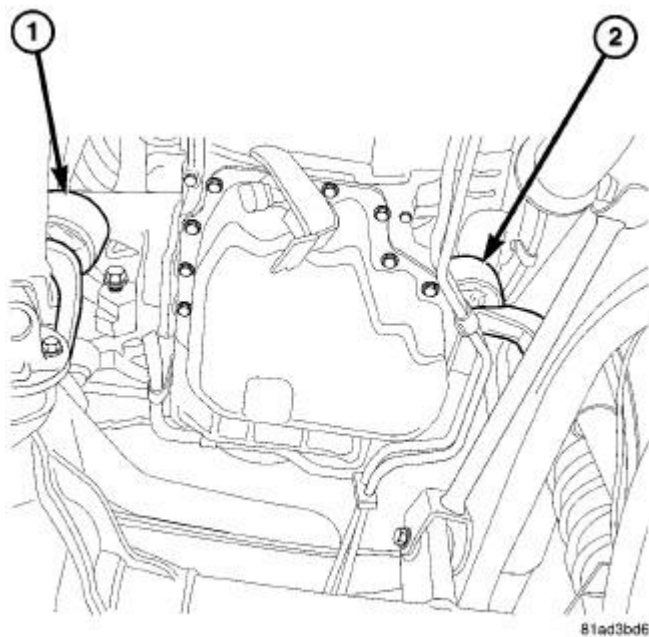


Fig. 21: FLEX PLATE BOLTS**Courtesy of CHRYSLER LLC**

51. Remove the torque converter to flex plate bolts.
52. On manual transmission models, remove the transfer skid plate.
53. On manual transmission models, remove the water and fuel separator. Refer to **Fuel System/Fuel Delivery/SEPARATOR and FILTER, Fuel and Water - Removal**.
54. On manual transmission models, remove the manual transmission. Refer to **Transmission and Transfer Case/Manual - Removal**.


**Fig. 22: BELL HOUSING BOLTS****Courtesy of CHRYSLER LLC**

55. Remove the bell housing bolts.
56. Remove the transmission oil line bracket at the oil pan.

**Fig. 23: ENGINE MOUNTS**

Courtesy of CHRYSLER LLC

57. Remove the nut from the left engine mount.
58. Remove the nut from the right engine mount.

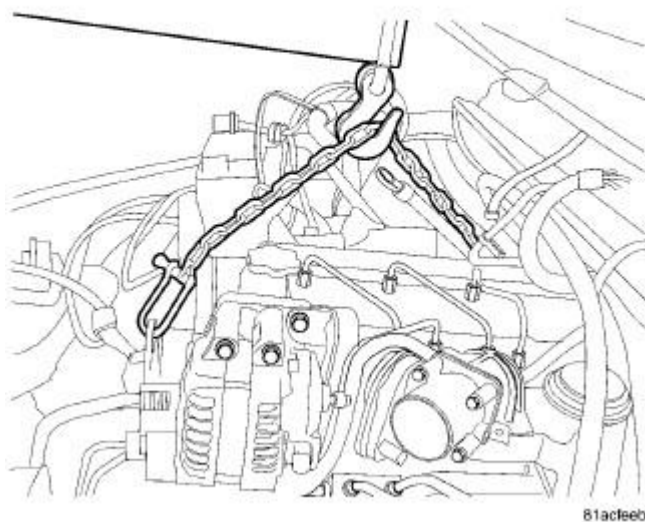**Fig. 24: ENGINE LIFT**

Courtesy of CHRYSLER LLC

59. Install the engine lift, and support the weight of the engine.
60. Remove the engine.

INSTALLATION

INSTALLATION - ENGINE

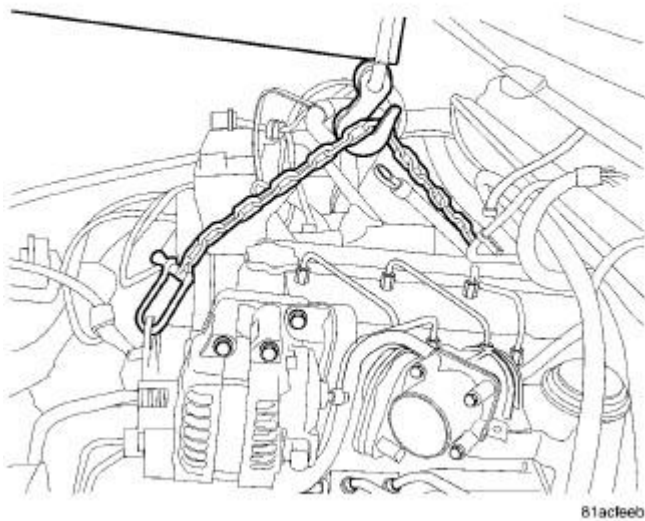
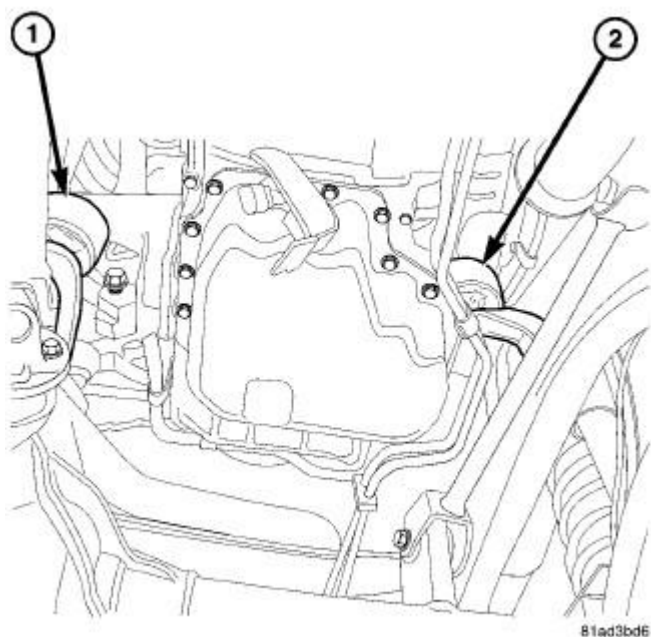



Fig. 25: ENGINE LIFT

Courtesy of CHRYSLER LLC

1. Install the engine.
2. Remove the engine lift.

**Fig. 26: ENGINE MOUNTS****Courtesy of CHRYSLER LLC**

3. Install the right engine mount nut. Tighten nut to 54 N.m (40 ft. lbs.).
4. Install the left engine mount nut. Tighten nut to 54 N.m (40 ft. lbs.).

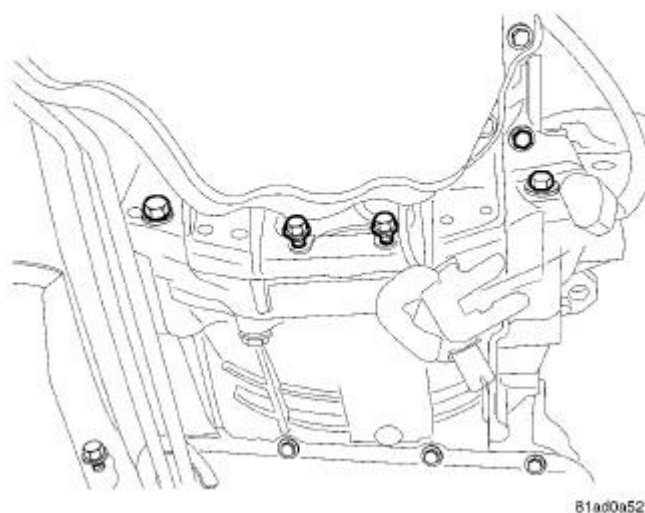**Fig. 27: BELL HOUSING BOLTS****Courtesy of CHRYSLER LLC**

5. Install the bell housing bolts:
 - Tighten upper bolts to 41 N.m (30 ft. lbs.).
 - Tighten lower bolts to 54 N.m (40 ft. lbs.).
 - Tighten collar bolts to 68 N.m (50 ft. lbs.).
6. Install the transmission oil line bracket at the oil pan.

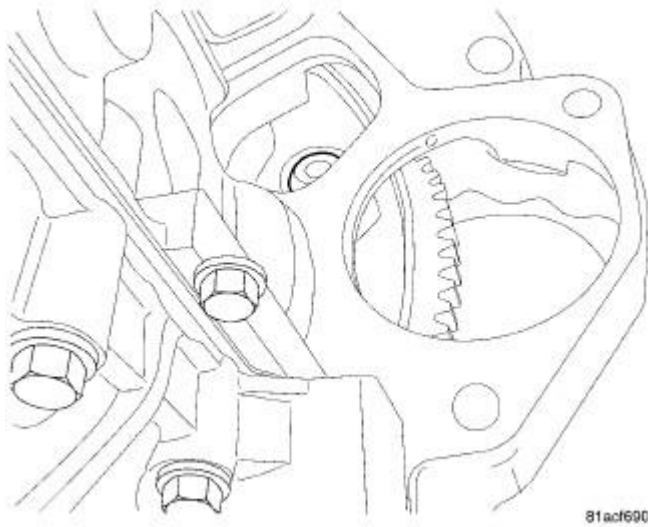


Fig. 28: FLEX PLATE BOLTS
Courtesy of CHRYSLER LLC

7. On manual transmission models, install the manual transmission. Refer to **Transmission and Transfer Case/Manual - Installation** .
8. On manual transmission models, install the water and fuel separator. Refer to **Fuel System/Fuel Delivery/SEPARATOR and FILTER, Fuel and Water - Installation** .
9. On manual transmission models, install the transfer skid plate.
10. Install the torque converter to flex plate bolts. Tighten bolts to 31 N.m (23 ft. lbs.).

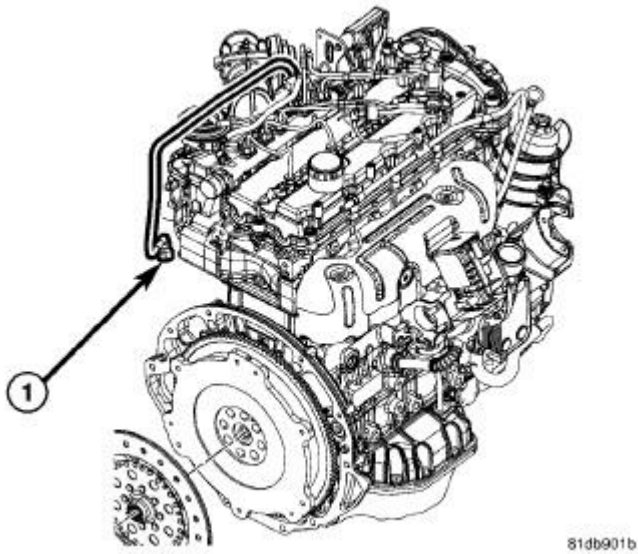


Fig. 29: Fuel Pump Return Line
Courtesy of CHRYSLER LLC

11. Install the crankshaft position sensor. Refer to **Fuel System/Fuel Injection/SENSOR, Crankshaft Position - Installation**.
12. Install the engine ground cable at engine block.
13. Connect the fuel pump return line (1).
14. Connect the fuel supply line to high pressure pump.
15. Connect the fuel quantity solenoid.

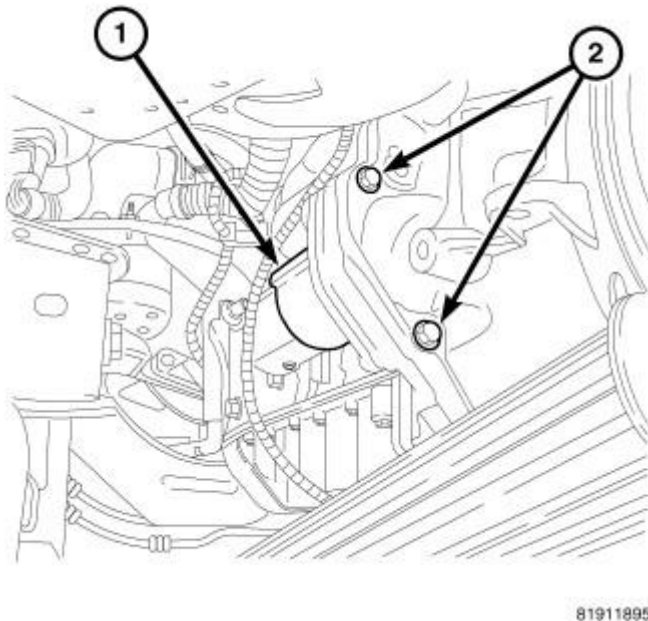


Fig. 30: STARTER MOUNTING 2.8L DIESEL

Courtesy of CHRYSLER LLC

16. Install the starter. Refer to **Electrical/Starting/STARTER - Installation** .


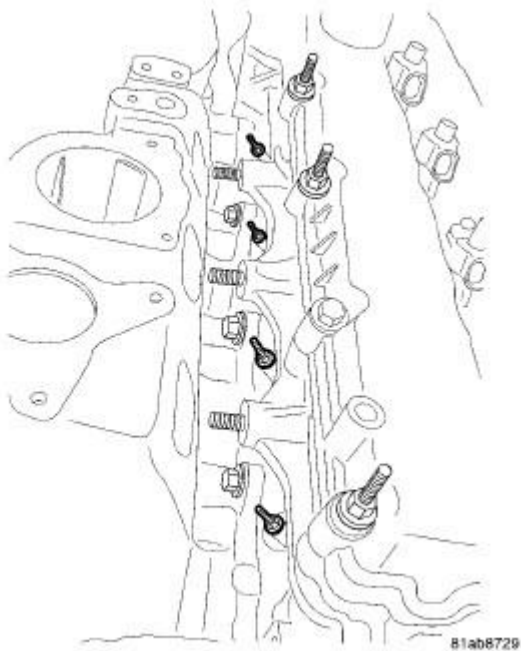


Fig. 31: Glow Plugs

Courtesy of CHRYSLER LLC


17. Connect the brake booster vacuum hose.
18. Position the upper engine wiring harness.
19. Connect the glow plug harness connectors.

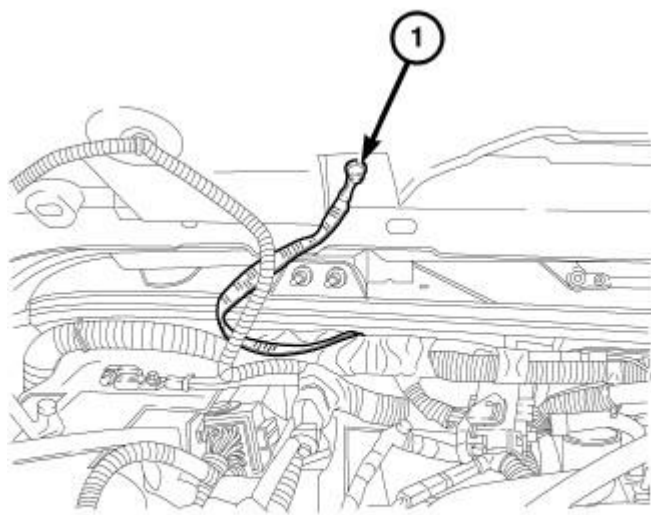

81adaf60

Fig. 32: Hood Ground Strap
Courtesy of CHRYSLER LLC


20. Connect the ground strap between the cowl and hood.

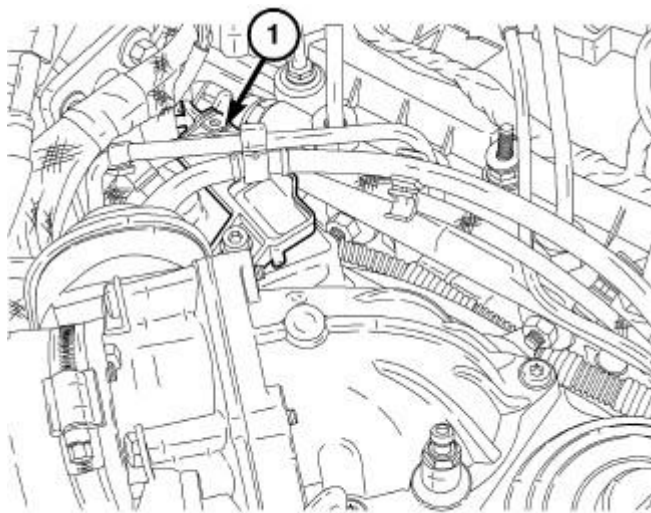

81daf5ed

Fig. 33: IAT/BPS SENSOR
Courtesy of CHRYSLER LLC

21. Connect the IAT/BPS harness connector (1).

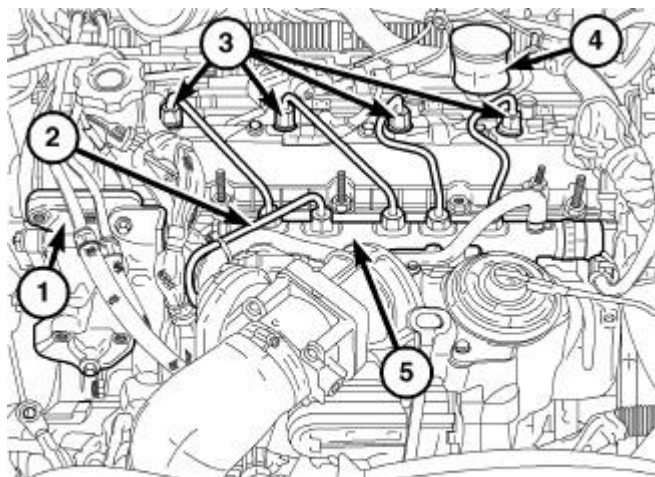


81daf5dc

Fig. 34: FUEL RAIL

Courtesy of CHRYSLER LLC

22. Connect the EGR airflow control valve harness connector.
23. Connect the fuel pressure regulator harness connector.
24. Connect the fuel pressure sensor harness connector.
25. Connect the coolant temperature sensor harness connector.
26. Connect the turbocharger actuator connector.

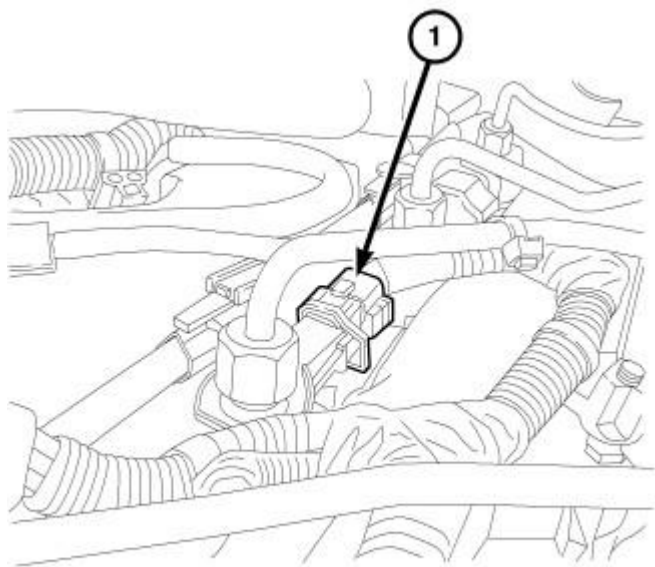

81adaf67

Fig. 35: INJECTOR CONNECTOR

Courtesy of CHRYSLER LLC

27. Connect the fuel injector harness connectors.

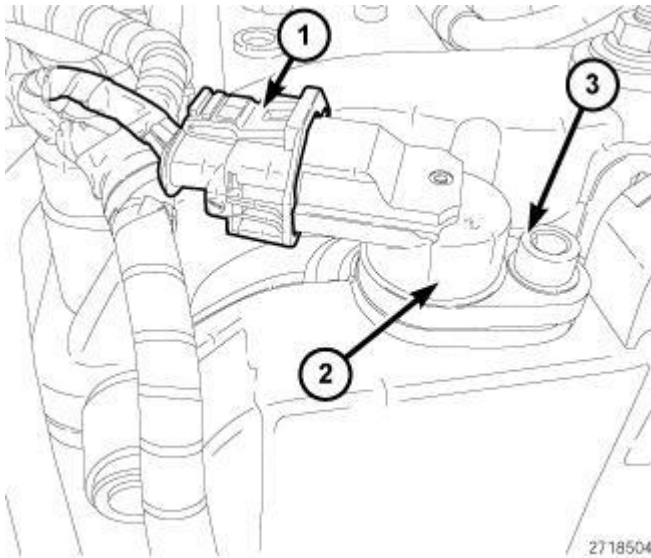


Fig. 36: CAMSHAFT POSITION SENSOR HARNESS CONNECTOR
Courtesy of CHRYSLER LLC

28. Connect the Camshaft Position Sensor (CMP) harness connector (1).

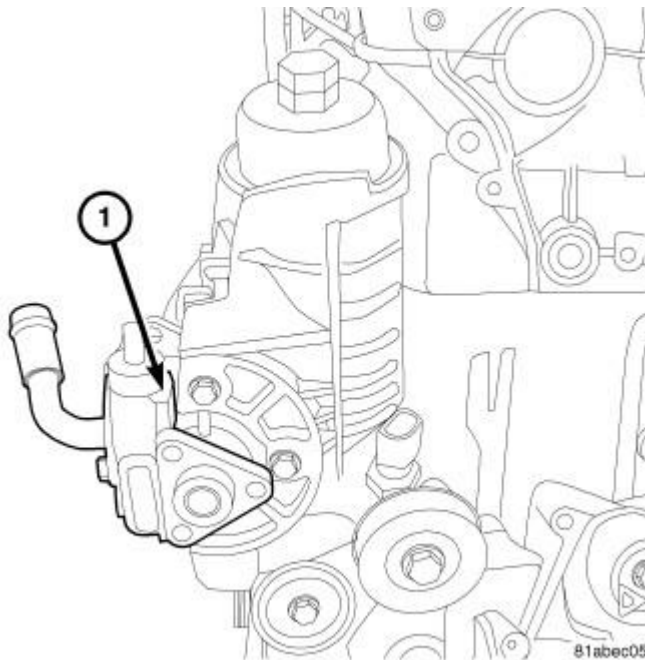


Fig. 37: Power Steering Pump
Courtesy of CHRYSLER LLC

29. Connect the EGR vacuum solenoid harness connector.
30. Connect the oil pressure sensor harness connector.
31. Install the power steering pump. Tighten the bolts to 33 N.m (24 ft. lbs.).

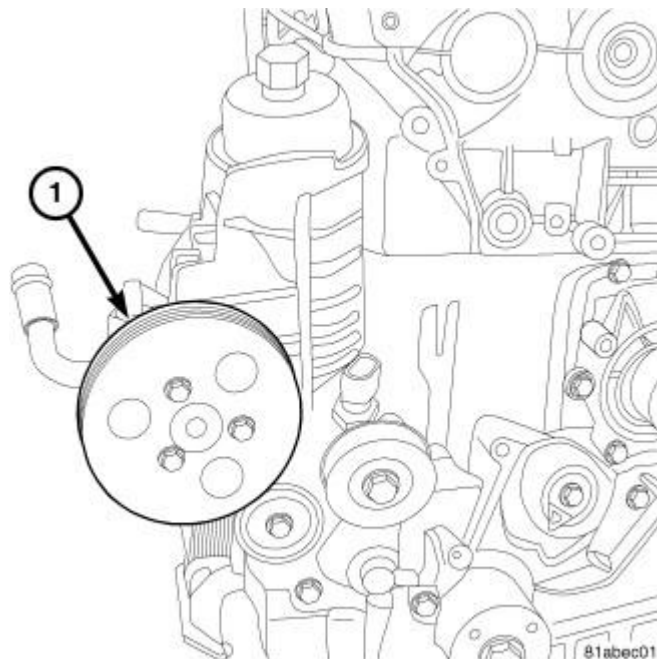


Fig. 38: POWER STEERING PUMP PULLEY
 Courtesy of CHRYSLER LLC

32. Install the power steering pump pulley. Tighten bolts to 33 N.m (24 ft. lbs.).

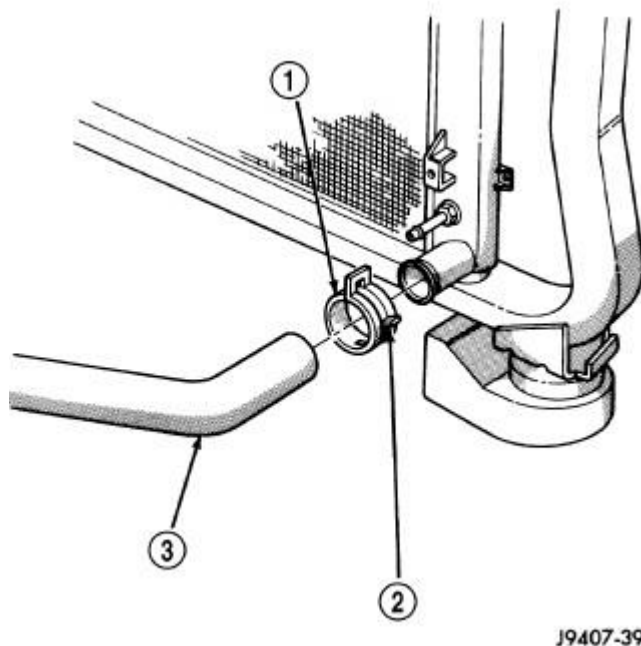


Fig. 39: Removing/Installing Lower Radiator Hose
 Courtesy of CHRYSLER LLC

33. Install the lower radiator hose at radiator.

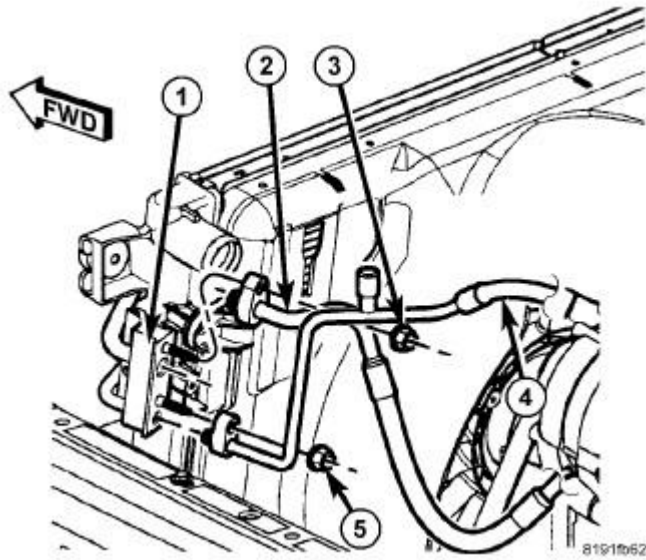


Fig. 40: Refrigerator Lines To Condenser
Courtesy of CHRYSLER LLC

34. Remove protective caps and lubricate install new gasket/O-ring seals.
35. Install the A/C suction and liquid lines to the expansion valve. Tighten the nut to 8 N.m (70 in. lbs.).
36. Install the A/C suction and liquid line from the condenser. Tighten the nuts to 23 N.m (17 ft. lbs.).

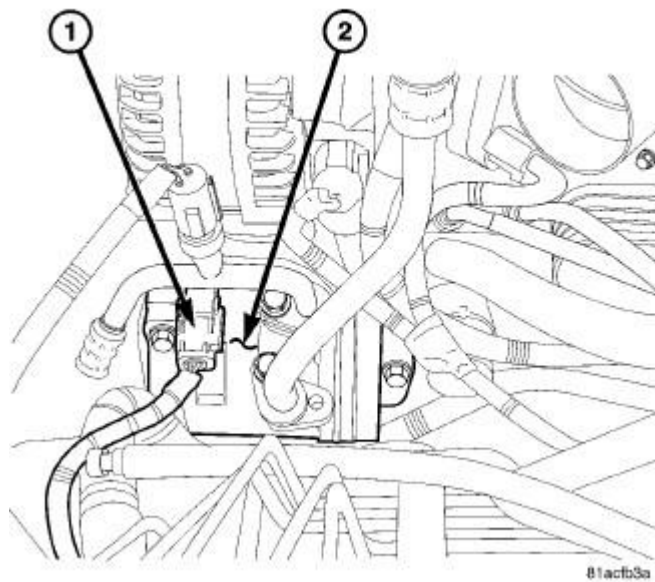


Fig. 41: A/C COMPRESSOR
Courtesy of CHRYSLER LLC

37. Install the A/C compressor. Refer to **Heating and Air Conditioning/Plumbing/COMPRESSOR, A/C -**

Installation .

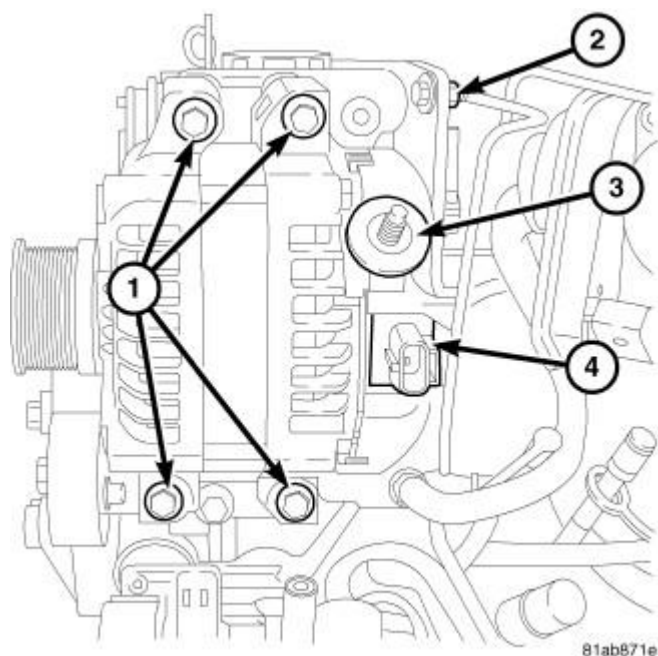


Fig. 42: GENERATOR
Courtesy of CHRYSLER LLC

38. Install the generator. Refer to **Electrical/Charging/GENERATOR - Installation** .

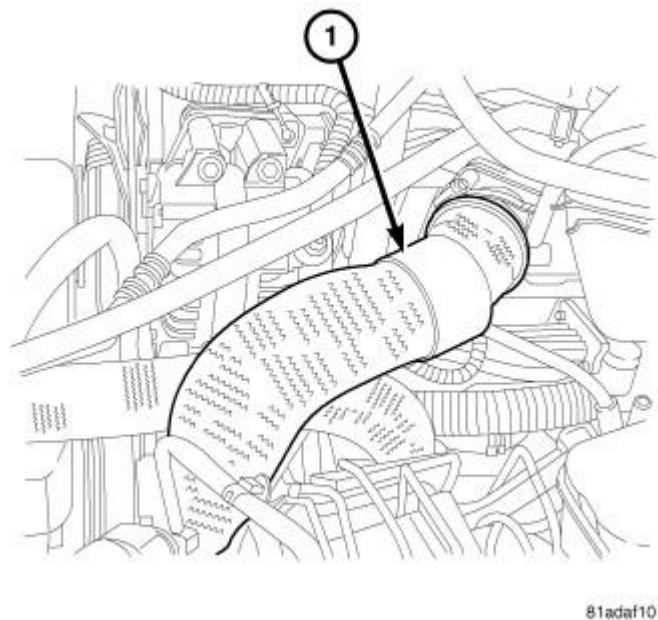


Fig. 43: Charge Outlet Hose
Courtesy of CHRYSLER LLC

39. Install the left side charge air cooler hose at cooler.

40. Install the left side charge air cooler hose at EGR air flow control valve.


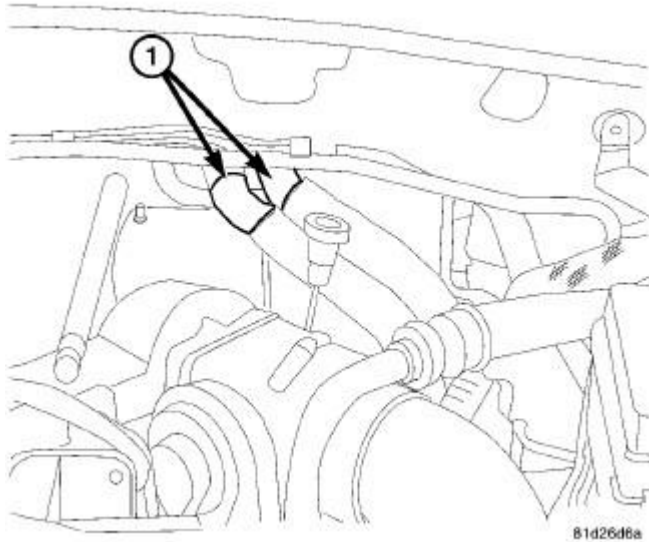


Fig. 44: HEATER CORE COOLANT HOSES
Courtesy of CHRYSLER LLC

41. Install the serpentine belt. Refer to **Cooling/Accessory Drive/BELT, Serpentine - Installation** .
42. Install the fan assembly. Refer to **Cooling/Engine/FAN, Cooling - Installation** .
43. Connect the upper radiator hose at radiator.
44. Install the coolant hoses (1) to the heater core.
45. Connect the engine harness connectors at right side firewall.
46. Install the coolant recovery bottle. Refer to **Cooling/Engine/BOTTLE, Coolant Recovery - Installation** .

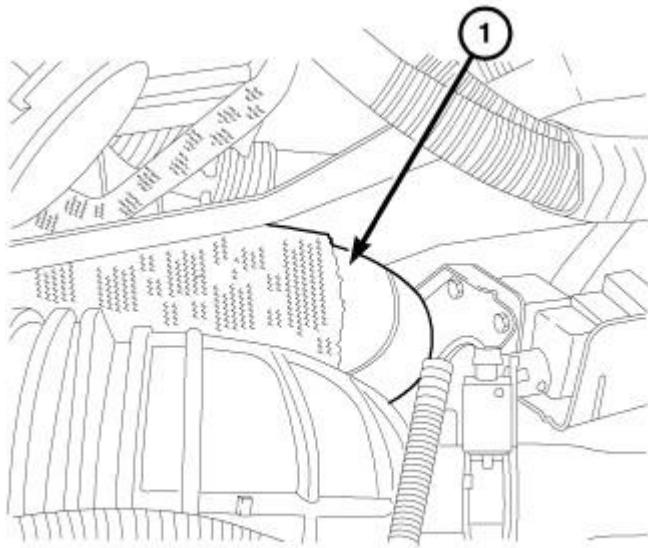

81adaf18

Fig. 45: CAC Turbo Outlet
Courtesy of CHRYSLER LLC

47. Install the left front wheel house splash shield. Refer to **Body/Exterior/SHIELD, Splash - Installation** .
48. Install the catalytic converter. Refer to **Exhaust System/CONVERTER, Catalytic - Installation** .
49. Install the transmission skid plate.
50. Install the front lower splash shield.
51. Lower the vehicle.
52. Install the right side charge air cooler hose.
53. Install the turbocharger air inlet tube at turbocharger.
54. Install the air cleaner body. See **Engine/Air Intake System/BODY, Air Cleaner - Installation**.
55. On manual transmission models, install the shifter lever. Refer to **Transmission and Transfer Case/Manual/LEVER, Shift - Installation** .
56. Fill the coolant. Refer to **Cooling - Standard Procedure** .
57. Fill the with recommended engine oil.
58. Charge the A/C system. Refer to **Heating and Air Conditioning/Plumbing - Standard Procedure** .
59. Install the battery.
60. Connect the positive and negative battery cables.
61. Start the engine and check for leaks.

SPECIFICATIONS

SPECIFICATIONS

SPECIFICATIONS (1 OF 2)

2010 Jeep Wrangler Sport

2010 ENGINE 2.8L Diesel - Service Information - Wrangler

2.8L Engine Specifications

Engine	2.8L JK/KA/KK
Engine Type	2.8L - 16 Valves
Displacement	2777 cc
Bore	94.00
Stroke	100.05
Power (VGT) JK - KA - KK	130 kW (177CV)@3800 RPM
Torque (ATX) JK	460 Nm @ 2000 RPM
Torque (MTX) JK	410 Nm @ 2000 - 2800 RPM
Cylinders	4 In line
Injection Order	1-3-4-2
Compression Ratio	17.0:1
Vacuum at idle	680 mm/HG (27.5 In/HG)
Idle Speed (ATX)	760 +/- 50 RPM
Idle Speed (MTX)	875 +/- 50 RPM
Maximum RPM in Gear	4500 RPM
Maximum RPM in neutral	ATX 2800 MTX 3500
Belt tension	Automatic Belt Tensioner
Thermostat opening	80°C +/- 2°C
Generator Rating	Denso 12V-180A
Emissions Level	EU4
Block configuration/Material	Open/Cast Iron
Cylinder Head	Dual Overhead Cam
Timing System	Belt
Fuel System	CP3.2+ 1,600 bar Fuel Pump, Piezo Injectors
Fuel Supply	Electric Fuel Pump In the Fuel Tank
Electronic Control Unit	EDC 16
Timing System	Belt Driven DOHC Overhead Camshaft
Air Intake	Dry Filter With turbocharger and Charge Air Cooler
Fuel System	Direct Fuel Injection Common Rail System
Emission devices	Cooled EGR (pneumatic) Electric Intake Throttle Fast Metallic Glow plugs
Combustion Cycle	4 Stroke
Cylinder Compression Difference Between Cylinders	10 bar (145 psi)
Cooling System	Water Cooling
Turbocharging:	Single VGT with REA
Intake Ports	Aluminum heads with traditional dual side intake and exhaust ports. One intake port is helical and the other has a directed entry.
Crankshaft	8 Counterweights with an incorporated balance

2010 Jeep Wrangler Sport

2010 ENGINE 2.8L Diesel - Service Information - Wrangler

	shaft gear.
Camshafts	2 overhead camshafts with axial front bearings and identical camshaft caps, finger followers, and hydraulic lifters.
Intake AND Exhaust Valves	Flat with fire deck face.
Intake Manifold	Aluminum, with Cast-in EGR passages, intake mixer, vacuum actuated EGR valve, electric intake throttle and a U-type EGR cooler
Lubrication	Pressure Lubricated By Rotary Pump
Minimum Oil Pressure (warm)	0.7 BAR at idle/2.5 BAR at 3800 RPM
Engine Rotation	Clockwise Viewed From Front Cover

SPECIFICATIONS (2 OF 2)

2.8L Engine Specifications	
Cylinder Head	
Cylinder head height	135.5 mm (5.334 in.)
Cylinder head flatness deformation tolerance	0.075 mm (0.003 in.)
Cylinder head gasket thickness	
0 Hole	1.10 mm (0.043 in)
1 Hole	1.20 mm (0.047 in)
2 Holes	1.30 mm (0.051 in)
Intake Manifold	
Intake manifold flatness deformation tolerance	0.075 mm (0.003 in.)
Exhaust Manifold	
Exhaust manifold flatness deformation tolerance	0.075 mm (0.003 in.)
Tappets	
Hydraulic tappet outside diameters	11.994 mm +/- 0.06 mm (0.472 in +/- 0.002)
Valves	
Intake valve face angle	45°30'
Exhaust valve face angle	45°30'
Intake Valve Head Diameter	32 mm (1.25 in.)
Exhaust Valve Head Diameter	29.4 mm (1.15 in.)
Intake Valve Stem Diameter	5.97 mm (0.235 in.)
Exhaust Valve Stem Diameter	5.96 mm (0.235 in.)
Intake Valve Guide Stem Clearance	
Min	0.030 mm (0.0012 in.)
Max	0.060 mm (0.0024 in.)
Exhaust Valve Guide Stem Clearance	
Min	0.040 mm (0.0016 in.)
Max	0.070 mm (0.0028 in.)
Valve Springs	
Free Length	50.8 mm (2 in.)

2010 Jeep Wrangler Sport

2010 ENGINE 2.8L Diesel - Service Information - Wrangler

Closed Valve	38 mm (1.49 in.)
Opened Valve	29 mm (1.14 in.)
Camshafts	
Camshaft End Play	
Max	0.350 mm (0.013 in.)
Min	0.150 mm (0.006 in.)
Outer Journal Diameter (at crankshaft)	25.95 mm +/- 0.01 mm (1.021 mm +/- .0004 in)
Inner Journal Diameter (at cylinder head)	26.00 mm + 0.015 mm (1.027 mm/.0006 in)
Crankshaft Journal Clearance.	
Max	0.075 mm (0.003 in.)
Min	0.030 mm (0.0012 in)
Connecting Rods	
Connecting Rod Diameter (Small End)	32 mm (1.26 in.)
Connecting Rod Diameter (Large End)	57.563 mm (2.266 in.)
Piston Pin	
Diameter	32 mm (1.26 in.)
Length	70.7 mm - 71.00 mm (2.78 in - 2.79 in.)
Crankshaft	
End Play	0.1 mm - 0.33 mm (0.004 in. - 0.013 in.)
Bearing Selection. Refer to Standard Procedure and Engine/Engine Block/CRANKSHAFT - Installation .	
Engine Block	
Cylinder Bore Internal Diameter	94 mm (3.700 in.)
Cylinder Bore Out-Of-Round	0.007 mm (0.0003 in.)
Oversized Piston	+0.40 mm (+0.015 in.)
Fuel System	
Injection Pressure	CRS 3.0 - 1600 Bar
High Pressure Pump	CP3.2+
ECU	EDC16CP31
Injectors	Piezo CRI 3.0
Glow Plugs	
Make/Type	Bosch/GLP2
Voltage	4.4V
Lubrication System	
Oil Pump Outer Rotor End Play	
Min	0.01 (0.0004 in.)
Max	0.09 (0.0036 in.)
Oil Pump Inner Rotor End Play	
Max	0.01 mm (0.0004 in.)
Min	0.09 mm (0.0036 in.)
Oil Pump Outer Rotor to Body Diameter Clearance	
Max	

2010 Jeep Wrangler Sport

2010 ENGINE 2.8L Diesel - Service Information - Wrangler

	0.130 mm (0.052 in.)
Min	0.230 mm (0.0091 in)
Oil Pressure Relief Valve	
Opening Pressure	5 Bar
Oil Pressure Valve Spring Free Length	46.8 mm (1.84 in)
Minimum Oil Pressure (Warm)	-
at Idle	0.7 Bar
at 3800 RPM	2.5 Bar
Cooling System	
Thermostat Opening Temperature	80°C (176°F)
Pressure Cap Setting	1.2 Bar
Engine Oil	
Specification	
Refer to Vehicle Quick Reference/Capacities and Recommended Fluids - Description .	
Coolant	
Specification. Refer to Vehicle Quick Reference/Capacities and Recommended Fluids - Description .	

CYLINDER HEAD GASKET SELECTION

Cylinder Head Gasket Selection		
-	Millimeters	Inches
DISTANCE FROM PISTON AT TDC TO CYLINDER BLOCK	0.300 - 0.399	0.0119 - 0.0158
CYLINDER HEAD GASKET THICKNESS	1.10	0.0434
PISTON CLEARANCE	0.700-0.800	0.0276 -0.0315
-		-
DISTANCE FROM PISTON AT TDC TO CYLINDER BLOCK	0.400 - 0.499	0.0158 - 0.0197
CYLINDER HEAD GASKET THICKNESS	1.20	0.0473
PISTON CLEARANCE	0.701-0.800	0.0276 -0.0315
-		-
DISTANCE FROM PISTON AT TDC TO CYLINDER BLOCK	0.500 - 0.600	0.0197 - 0.0237
CYLINDER HEAD GASKET THICKNESS	1.30	0.0512
PISTON CLEARANCE	0.700-0.800	0.0276 -0.0315

TORQUE**ENGINE BLOCK**

DESCRIPTION	N.m	Ft. Lbs.	In. Lbs.
Air Temp/Pressure sensor	12	-	106
Balance Shaft	33	24	-
Connecting Rod Caps	See Engine/Engine Block/ROD, Piston and Connecting - Installation.		

2010 Jeep Wrangler Sport

2010 ENGINE 2.8L Diesel - Service Information - Wrangler

Dipstick Tube (block)	11	-	97
Dipstick Tube (sump)	11	-	97
Engine Block Plug	30	22	-
Engine Mount Bolts	54	40	-
Lower Oil Pan	See Engine/Lubrication/PAN, Oil - Installation.		
Main Bearing Caps	See Engine/Engine Block/CRANKSHAFT - Installation.		
Oil Cooler	12	-	106
Oil Cooler Coolant Adapter Tube at Oil Filter Housing Bolt	11	-	97
Oil Cooler Coolant Tube Bolt	15	-	133
Oil Drain Plug	54	40	-
Oil Filter Cap	25	18	-
Oil Filter Housing	33	24	-
Oil Jet	11	-	97
Oil Pickup Tube	15	-	133
Oil Pressure Sensor	14	-	124
Upper Oil Pan (M6 bolt)	15	-	133
Upper Oil Pan (M8 bolt)	32	24	-

CYLINDER HEAD

DESCRIPTION	N.m	Ft. Lbs.	In. Lbs.
Camshaft Cap	11	-	97
Camshaft Position Sensor	11	-	97
Camshaft Sprocket	80	59	-
Cylinder Head Bolt	See Engine/Cylinder Head - Installation.		
Cylinder Head Cover	11	-	97
EGR Air Flow Control Valve Assembly	11	-	97
Exhaust Manifold	36	27	-
Front Camshaft Journal	11	-	97
Fuel injector	33	24	-
Fuel Injector Fuel Lines at Fuel Rail	5 + 75°	-	44 + 75°
Fuel Injector lines at the injector	28	20	-
Fuel Rail	24	18	-
Glow Plugs	14	-	124
High Pressure Fuel Line Bracket bolt	15	-	133
High Pressure Fuel Feed	5 + 75°	-	44 + 75°

2010 Jeep Wrangler Sport**2010 ENGINE 2.8L Diesel - Service Information - Wrangler**

Line at Fuel Rail			
High Pressure Fuel Feed Line at the High Pressure Pump	28	20	-
Intake Manifold Nuts	25	18	-
Turbocharger Nuts	32	24	-
Turbocharger Brace Bolts	32	24	-
Turbocharger Oil Feed Line at the Engine Block	32	24	-
Turbocharger Oil Feed Line Nipple at the Engine Block	32	24	-
Turbocharger Oil Feed Line Banjo Bolt at the Turbocharger	25	18	-
Turbocharger Oil Return Line	15	-	133
Vacuum Tube	11	-	97

FRONT ENGINE

DESCRIPTION	N.m	Ft. Lbs.	In. Lbs.
Accessory Belt Tensioner Bolt	45	33	-
Accessory Drive Idler Pulley Bolt	45	33	-
Camshaft Position Sensor	11	-	97
Crankshaft Pulley	32	24	-
Crankshaft Sprocket	100 + 120°	74 + 120°	-
Front Cover	33	24	-
Front Engine Lifting Bracket	45	33	-
Fuel Quantity Solenoid	11	-	97
High Pressure Fuel Pump Nuts	24	18	-
High Pressure Fuel Pump Sprocket Nut	88	65	-
Inner Front Cover	11	-	97
Outer Front Cover (lower)	11	-	97
Outer Front Cover (upper)	11	-	97
Timing Belt Tensioner	28	21	-
Water Pump	32	24	-

REAR ENGINE

DESCRIPTION	N.m	Ft. Lbs.	In. Lbs.

2010 Jeep Wrangler Sport

2010 ENGINE 2.8L Diesel - Service Information - Wrangler

Crankshaft Sensor	11	-	97
CKP Cover Plate	15	-	133
Flex Plate (ATX)	See <u>Engine/Engine Block/FLEXPLATE - Installation.</u>		
Rear Cover	15	-	133
Rear Lifting Bracket	45	33	-
Trans Adapter Plate (allen bolts)	79	58	-
Trans Adapter Plate (hex bolt)	45	33	-

ACCESSORY DRIVE

DESCRIPTION	N.m	Ft. Lbs.	In. Lbs.
A/C Compressor	32	24	-
A/C Compressor/Generator Bracket	45	33	-
A/C Compressor/Generator Bracket Support	25	18	-
Generator	33	24	-
Power Steering Pump	33	24	-
Power Steering Pump Pulley	33	24	-

SPECIAL TOOLS


SPECIAL TOOLS



80c13cec


Fig. 46: LOCKING TOOL - VM.1055

Courtesy of CHRYSLER LLC

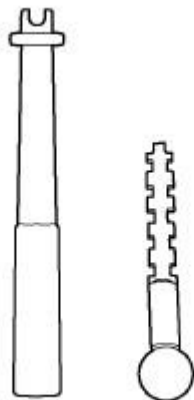


81214825

Fig. 47: REMOVER, SEAL - VM.1058
Courtesy of CHRYSLER LLC

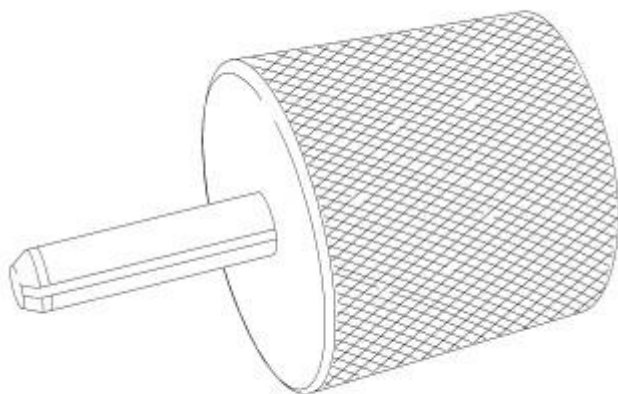

81dbodf6

Fig. 48: BALANCE SHAFT LOCK PIN - VM.10012
Courtesy of CHRYSLER LLC

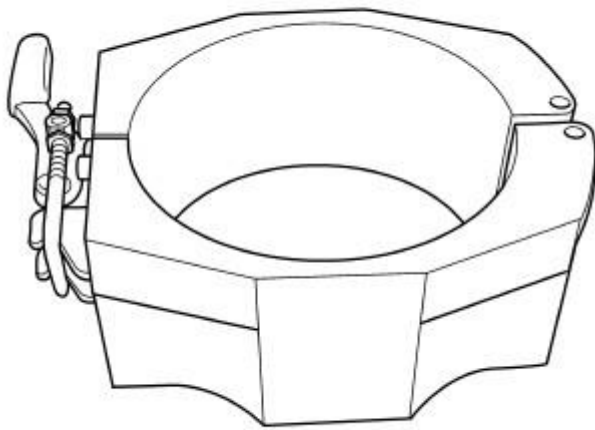

80c17156

Fig. 49: 2.8L PISTON INSTALLER - VM.1082
Courtesy of CHRYSLER LLC



81b79310

Fig. 50: FRONT AND REAR SEAL TOOL - VM.9990
Courtesy of CHRYSLER LLC


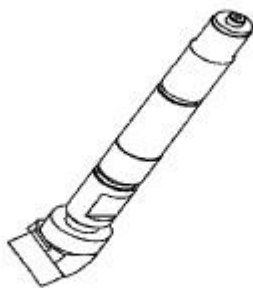


Fig. 51: ADAPTER, COMPRESSION TEST - VM.1072A
Courtesy of CHRYSLER LLC



Fig. 52: INSTALLER/GUIDE SEAL - 9937 -1, 9937-2
Courtesy of CHRYSLER LLC

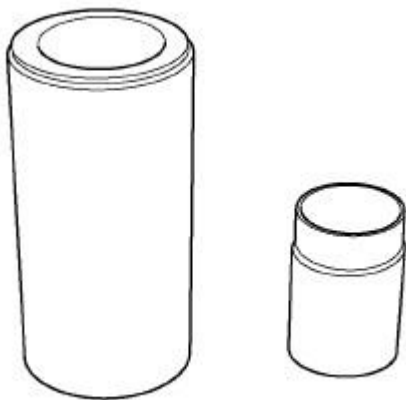

8121483c

Fig. 53: INSTALLER, SEAL - VM.1057

Courtesy of CHRYSLER LLC



Fig. 54: CAMSHAFT TIMING TOOL - VM.9991

Courtesy of CHRYSLER LLC

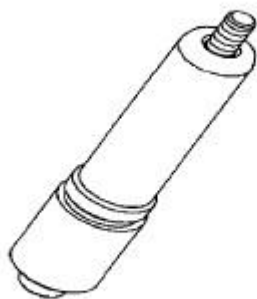


Fig. 55: CRANKSHAFT LOCKING TOOL - VM.9992

Courtesy of CHRYSLER LLC

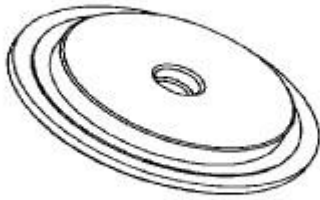


Fig. 56: CRANKSHAFT SEAL INSTALLER - VM.9993
Courtesy of CHRYSLER LLC

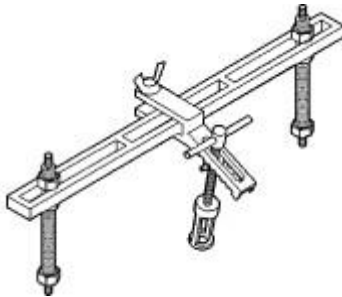


Fig. 57: Valve Spring Compressor MD998772A
Courtesy of CHRYSLER LLC


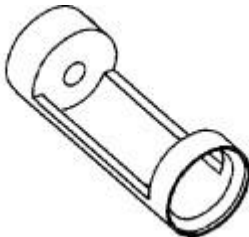


Fig. 58: Valve Spring Adapter MD998772A-15
Courtesy of CHRYSLER LLC

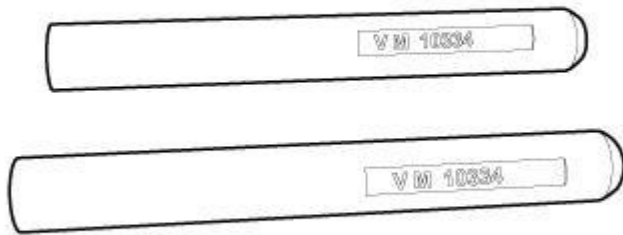

3021927


Fig. 59: EXHAUST MANIFOLD ALIGNMENT TOOL VM.10334

Courtesy of CHRYSLER LLC

CYLINDER HEAD

DESCRIPTION

DESCRIPTION

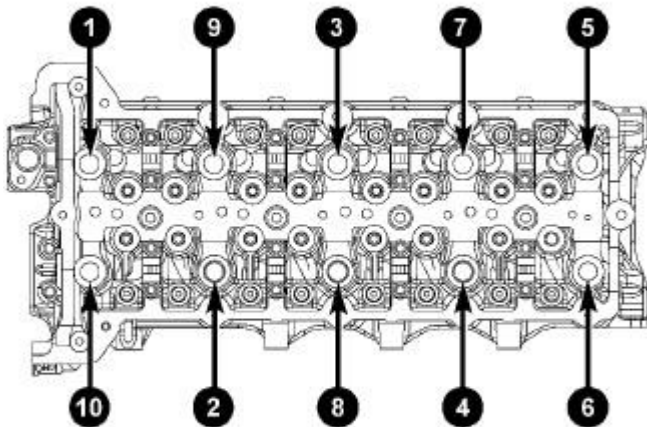

8196b560

Fig. 60: Cylinder Head Bolt Torque Sequence

Courtesy of CHRYSLER LLC

The 2.8L aluminum, overhead valve cylinder head is torqued in a cross pattern. The cylinder head itself is not resurfaceable.

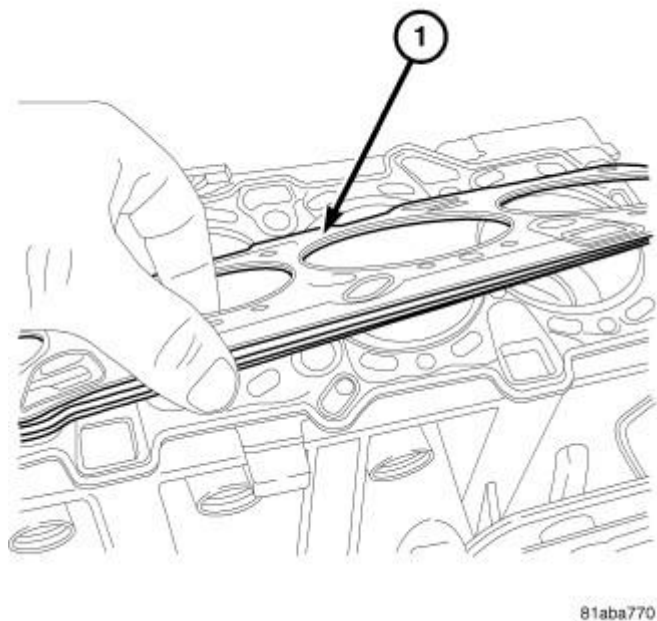


Fig. 61: MLS GASKET

Courtesy of CHRYSLER LLC

1. The cylinder head uses a selectable Multi-layered Steel gasket that is available in three sizes.

STANDARD PROCEDURE

VALVE SEALS - IN VEHICLE

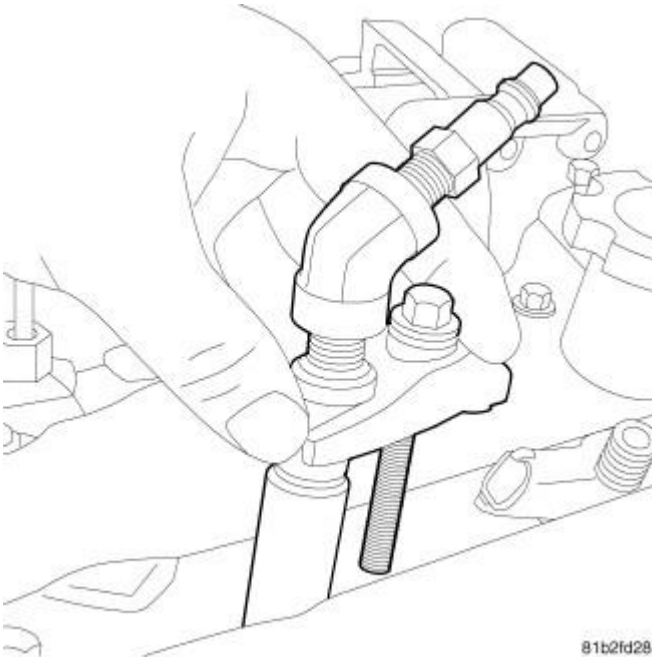


Fig. 62: COMPRESSION TESTER

Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Remove the cylinder head cover. See **Engine/Cylinder Head/COVER(S), Cylinder Head - Removal.**

NOTE: **Rocker arms and lifters must be kept in order of removal and stored in the up right position.**

3. Position the rocker arms aside. See **Engine/Cylinder Head/ROCKER ARM, Valve - Removal.**
4. Install the Compression Tester Adaptor Tool VM.1072A, into the injector hole and retain with an injector hold down (2) bolt.
5. Prepare Valve Spring Compressor Tool MD998772A for usage by inverting the tool to cylinder head holding screws so that the thread size matches the cylinder head.
6. Install Valve Spring Compressor Tool MD998772A onto cylinder head and using Valve Spring Adaptor MD998772A-15, place the adaptor over the valve spring.
7. Connect a regulated air supply (3) to Compression Test Adapter Tool VM.1072A and pressurize the cylinder.
8. Place shop towels around the working area of the cylinder head to prevent valve locks from accidentally entering the engine.

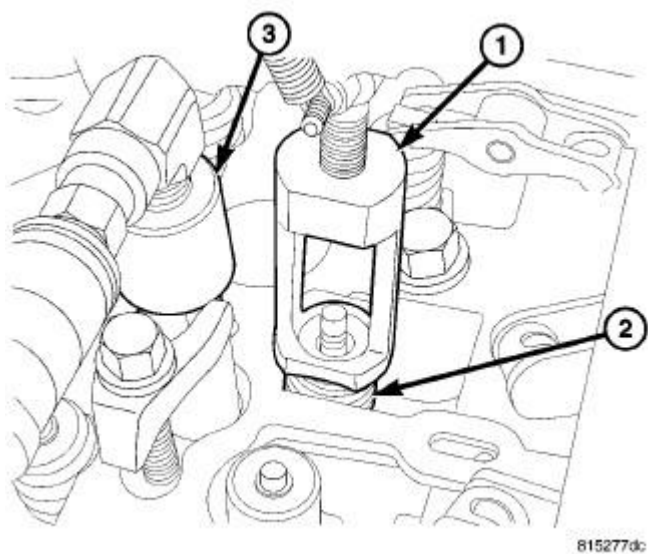


Fig. 63: MD998772A-15 ADAPTOR
Courtesy of CHRYSLER LLC

- | |
|--|
| <p>1 - MD998772A-15 ADAPTOR
2 - VALVE SPRING
3 - VM.1072A COMPRESSION TESTER ADAPTOR</p> |
|--|

9. Using Valve Spring Adaptor MD998772A-15 (1), collapse the valve spring (2) and remove the locks.
10. Remove the valve spring (2) assembly.

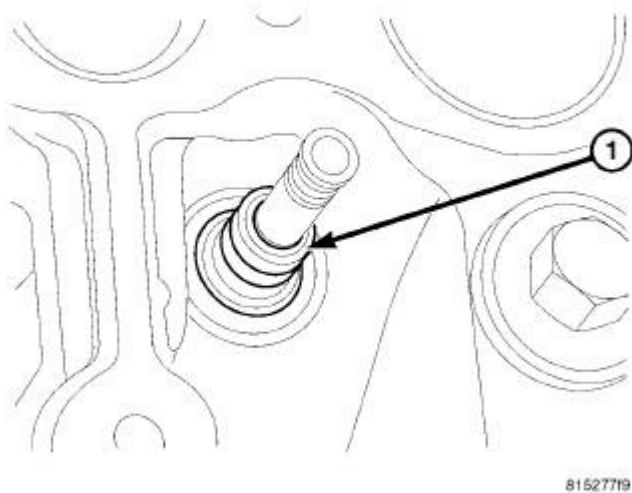


Fig. 64: VALVE SEAL
Courtesy of CHRYSLER LLC

1 - VALVE SEAL

11. Remove the valve seal (1).
12. Repeat this procedure for all cylinders.

VALVE SERVICE


This procedure is done with the engine cylinder head removed from the block.

DISASSEMBLY

1. Remove the engine cylinder head from the cylinder block. See **Engine/Cylinder Head - Removal**.
2. Use Valve Spring Compressor Tool and compress each valve spring.
3. Remove the valve locks, retainers, and springs.
4. Use a smooth stone or a jewelers file to remove any burrs on the top of the valve stem, especially around the groove for the locks.
5. Remove the valves, and place them in a rack in the same order as removed.

VALVE CLEANING

1. Clean all carbon deposits from the combustion chambers, valve ports, valve stems, valve stem guides and head.
2. Clean all residue and gasket material from the engine cylinder head machined gasket surface.

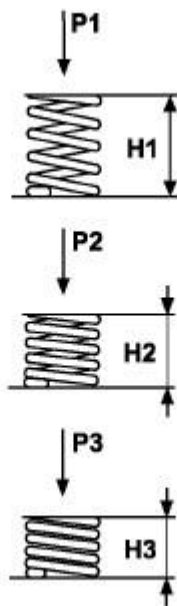INSPECTION

81202782

Fig. 65: VALVE SPRING CHART

Courtesy of CHRYSLER LLC

VALVE SPRING CHART


LOAD Kg		HEIGHT mm		STATE
P1	0.00	H1	50.8	FREE LENGTH
P2	182-5 +10%	H2	38.0	VALVE CLOSED
P3	395±5%	H3	29.0	VALVE OPEN

1. Inspect for cracks in the combustion chambers and valve ports.
2. Inspect for cracks on the exhaust seat.
3. Inspect for cracks in the gasket surface at each coolant passage.
4. Inspect valves for burned, cracked or warped heads.
5. Inspect for scuffed or bent valve stems.
6. Replace valves displaying any damage.
7. Check valve spring height .

VALVE SEAT REFACING

1. Install a pilot of the correct size in the valve guide bore. Reface the valve seat to the specified angle with a good dressing stone. Remove only enough metal to provide a smooth finish.
2. Use tapered stones to obtain the specified seat width when required.

VALVE GUIDES

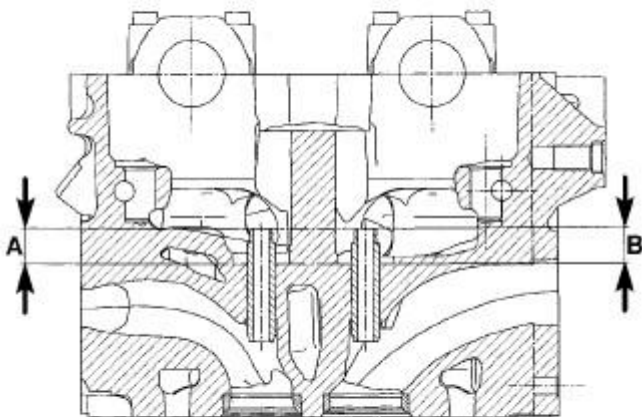

61b4f466

Fig. 66: VALVE HEIGHT

Courtesy of CHRYSLER LLC


1. Valve Guides height requirement.
2. Measurement A and B: 13.50 mm - 14.00 mm. (0.570 in - 0.590 in)

VALVE STEM-TO-GUIDE CLEARANCE MEASUREMENT

1. Measure and record internal diameter of valve guides. Valve guide internal diameter is 6.0 to 6.012 mm (0.2362 to 0.2366 in.).
2. Measure valve stems and record diameters. Intake valve stem diameter 5.952 to 5.97 mm (0.2343 to 0.2350 in). Exhaust valve stem diameter 5.942 to 5.96 mm (0.2339 to 0.2346 in).
3. Subtract diameter of valve stem from internal diameter of its respective valve guide to obtain valve stem clearance in valve guide. Clearance of inlet valve stem in valve guide is 0.03 to 0.06 mm (.0011 to .0023 in). Clearance of exhaust valve stem in valve guide is 0.04 to 0.07 mm (.0015 to .0027 in).
4. If valve stem clearance in valve guide exceeds tolerances, new valve guides must be installed.

REMOVAL**REMOVAL - CYLINDER HEAD**

1. Disconnect the battery cables.
2. Remove the battery.
3. Remove the intake manifold. See **Engine/Manifolds/MANIFOLD, Intake - Removal**.
4. Remove the exhaust manifold. See **Engine/Manifolds/MANIFOLD, Exhaust - Removal**.
5. Remove the camshafts. See **Engine/Cylinder Head/CAMSHAFT, Engine - Removal**.

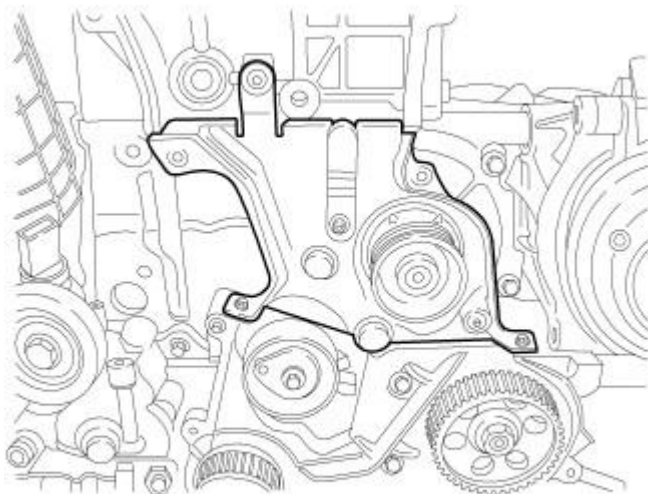

81aba73a

Fig. 67: INNER FRONT COVER
Courtesy of CHRYSLER LLC

6. Remove the inner timing belt cover.

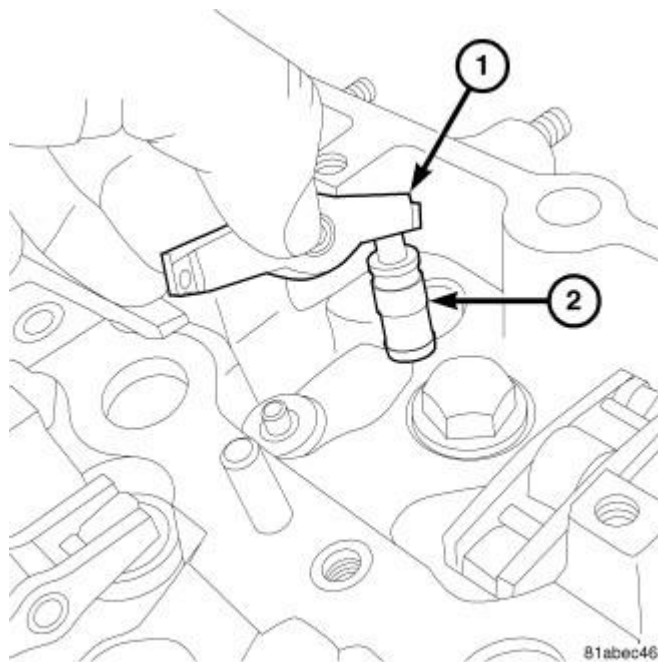


Fig. 68: ROCKER ARM AND LIFTER ASSEMBLY
Courtesy of CHRYSLER LLC

NOTE: Observe the position of the rocker arms and lifters. Always return the rocker arms and lifters to their original location.

7. Remove the rocker arms (1) and hydraulic lifters (2).
8. Remove the cylinder head bolts.
9. Remove the cylinder head.

CLEANING

CLEANING

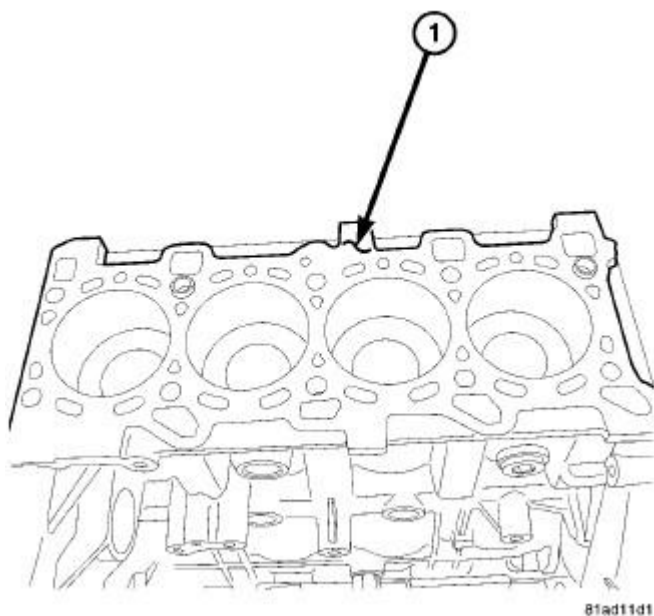


Fig. 69: ENGINE BLOCK

Courtesy of CHRYSLER LLC

Thoroughly clean the engine cylinder head and cylinder block mating surfaces. Clean the intake and exhaust manifold and engine cylinder head mating surfaces. Remove all gasket material and carbon. See **Engine - Standard Procedure**.

Check to ensure that no coolant or foreign material has fallen into the tappet bore area.

Remove the carbon deposits from the combustion chambers and top of the pistons.

INSPECTION

INSPECTION

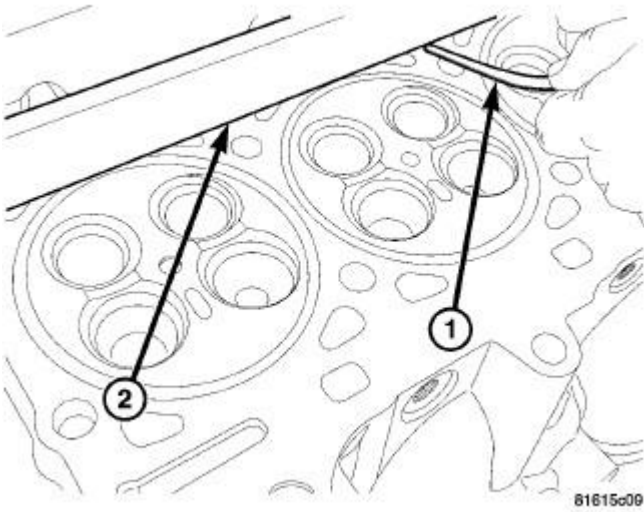


Fig. 70: Cylinder Head Flatness (1 Of 2)
Courtesy of CHRYSLER LLC

- | |
|---|
| 1 - FEELER GAUGE
2 - STEEL STRAIGHT EDGE |
|---|

CAUTION: The cylinder head surface and straight edge must be absolutely clean before the flatness measurement is taken. **DO NOT** check flatness across the combustion chamber area or on the marks left by the gasket stopper.

Use a cleaned straight edge (2) and feeler (1) gauge to check the flatness. Lie the straight edge (2) parallel across the cooling ports. Measure before each combustion chamber toward the outer edge of the cylinder head, above and below each combustion chamber, between each combustion chamber, top and bottom, on the cylinder head and block mating surfaces. The **maximum** allowed warpage is 0.075 mm (0.003 in.).

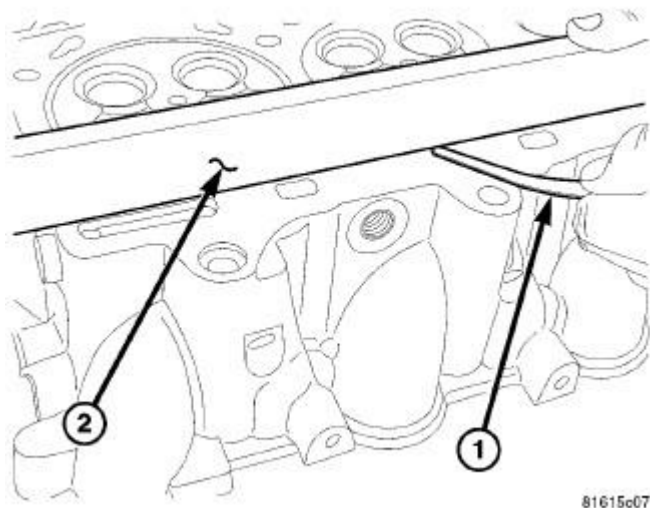


Fig. 71: Cylinder Head Flatness (2 Of 2)
Courtesy of CHRYSLER LLC

- 1 - Feeler Gauge
- 2 - Straight Edge

The minimum cylinder head thickness is 135.5 mm (5.33 in.).

INSTALLATION

INSTALLATION - CYLINDER HEAD


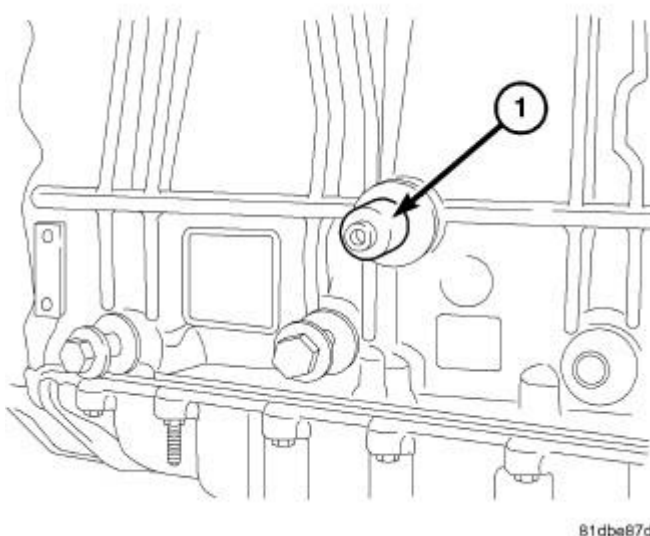


Fig. 72: Crankshaft Locking Tool
Courtesy of CHRYSLER LLC


1. Remove the crankshaft locking tool VM.9992 (1).

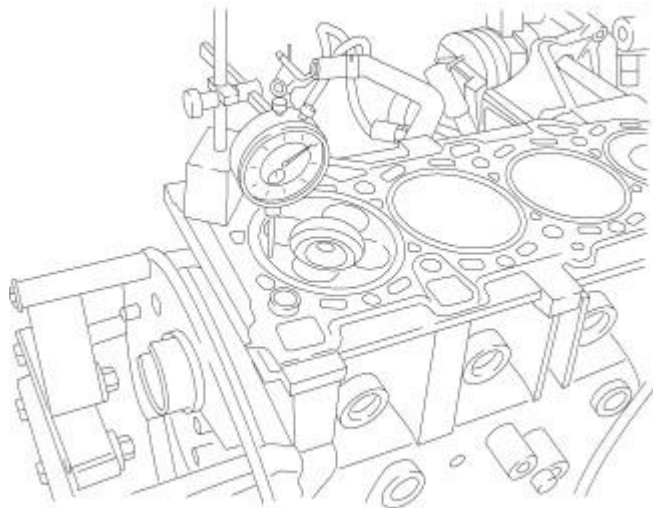

81ab861e

Fig. 73: DECK HEIGHT
Courtesy of CHRYSLER LLC

2. Set the number one piston to top dead center (TDC).

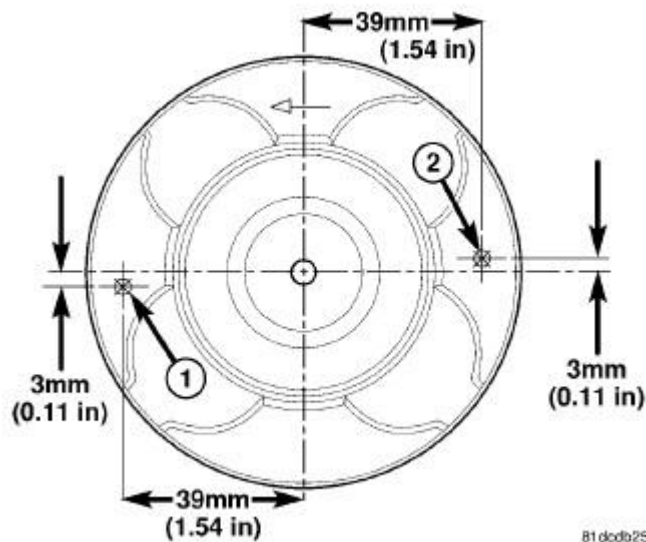

81d0db25

Fig. 74: PISTON PROTRUSION MEASUREMENT
Courtesy of CHRYSLER LLC


3. Zero the dial indicator on the top of the piston at location shown (1) in illustration.
4. Use the dial indicator to measure the height of the piston at top dead center.

5. Zero the dial indicator on the top of the piston at location shown (2) in illustration.
6. Use the dial indicator to measure the height of the piston at top dead center.
7. Repeat the procedure for each cylinder.
8. Average the 4 piston protrusion readings to determine the required gasket thickness.

CYLINDER HEAD GASKET SELECTION

Cylinder Head Gasket Selection		
-	Millimeters	Inches
DISTANCE FROM PISTON AT TDC TO CYLINDER BLOCK	0.300 - 0.399	0.0119 - 0.0158
CYLINDER HEAD GASKET THICKNESS	1.10	0.0434
PISTON CLEARANCE	0.701 - 0.800	0.0276 - 0.0315
-	-	-
DISTANCE FROM PISTON AT TDC TO CYLINDER BLOCK	0.400 - 0.499	0.0158 - 0.0197
CYLINDER HEAD GASKET THICKNESS	1.20	0.0473
PISTON CLEARANCE	0.701 - 0.800	0.0276 - 0.0315
-	-	-
DISTANCE FROM PISTON AT TDC TO CYLINDER BLOCK	0.500 - 0.600	0.0197 - 0.0237
CYLINDER HEAD GASKET THICKNESS	1.30	0.0512
PISTON CLEARANCE	0.700 - 0.800	0.0276 - 0.0315


9. Select the appropriate cylinder head gasket from the cylinder head gasket chart.

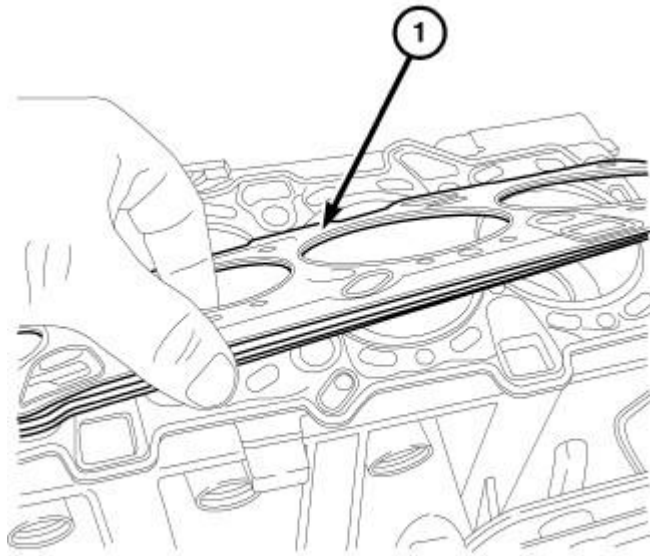

81aba770

Fig. 75: MLS GASKET
Courtesy of CHRYSLER LLC

10. Install the head gasket (1).

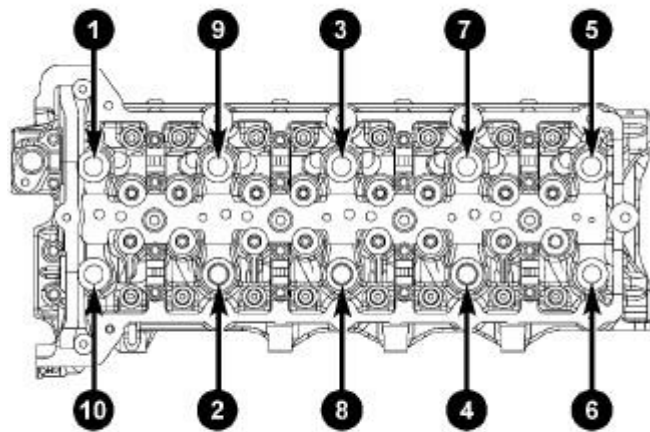

8196b560

Fig. 76: Cylinder Head Bolt Torque Sequence
Courtesy of CHRYSLER LLC

11. Install the cylinder head.

NOTE: Always use new cylinder head bolts whenever the existing bolts have been removed.

12. Install the cylinder head bolts. Using the pattern shown in illustration, tighten bolts to 30 N.m (22 ft. lbs.).
- Repeat the illustrated pattern, turning the bolts an additional 85 degrees.
 - Repeat the illustrated pattern, turning the bolts an additional 85 degrees.
 - Repeat the illustrated pattern, turning the bolts an additional 85 degrees for a total of 255 degrees.


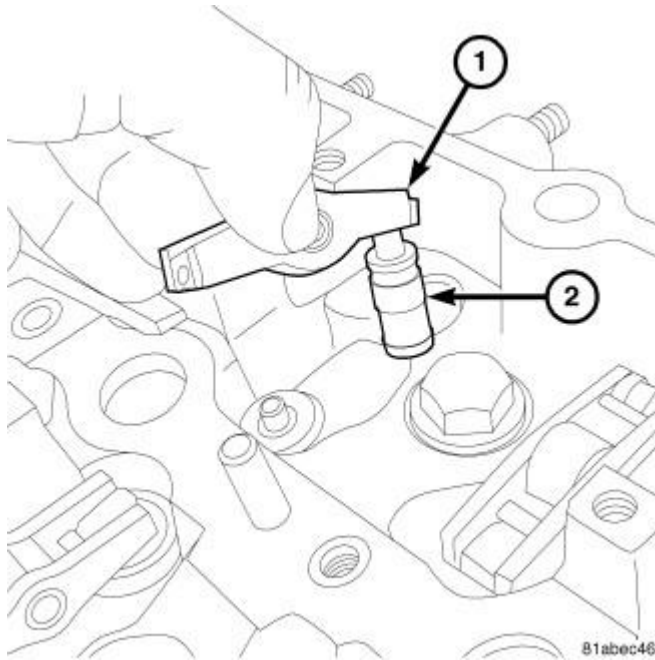


Fig. 77: ROCKER ARM AND LIFTER ASSEMBLY
Courtesy of CHRYSLER LLC

13. Install the hydraulic lifters (2) and rocker arms (1). Make sure to return the lifters and arms to their original position.

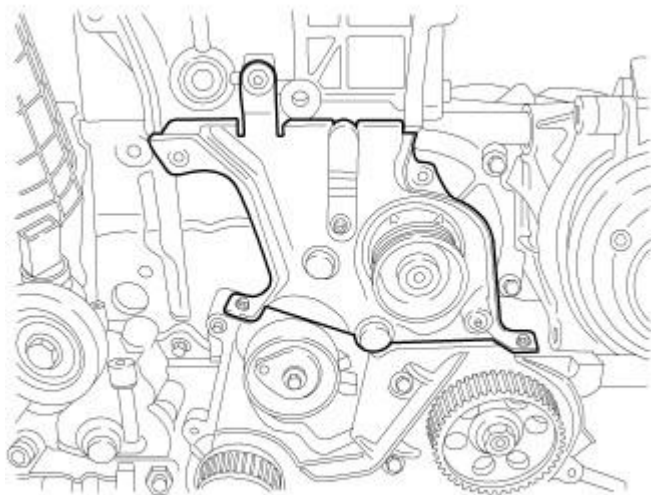


81aba73a

Fig. 78: INNER FRONT COVER

Courtesy of CHRYSLER LLC

14. Install the inner front cover. Tighten the bolts to 11 N.m (97 in. lbs.).
15. Install the camshafts. See **Engine/Cylinder Head/CAMSHAFT, Engine - Installation**.
16. Install the exhaust manifold. See **Engine/Manifolds/MANIFOLD, Exhaust - Installation**.
17. Install the intake manifold. See **Engine/Manifolds/MANIFOLD, Intake - Installation**.
18. Connect the battery.

CAMSHAFT, ENGINE**Description****DESCRIPTION**

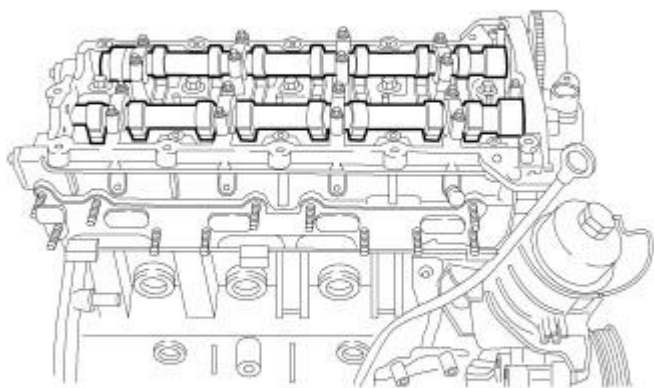


81ab85e1

Fig. 79: CAMSHAFTS

Courtesy of CHRYSLER LLC

The camshafts are made of cast iron with eight machined lobes and four bearing journals.

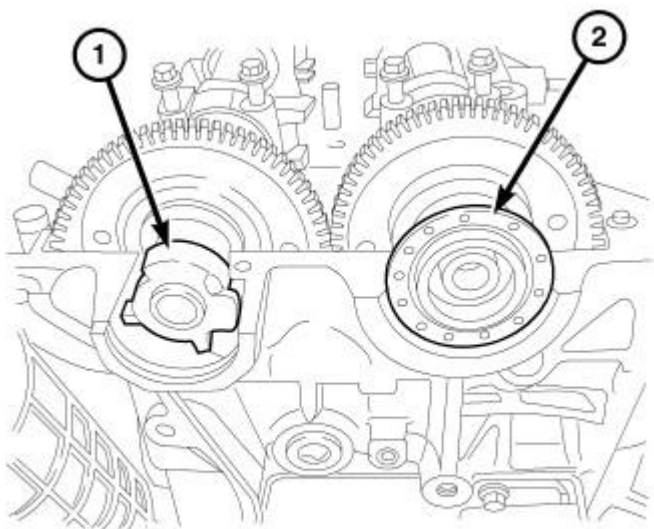


81ab85d1

Fig. 80: CAMSHAFT OIL SEAL

Courtesy of CHRYSLER LLC

1. The exhaust camshaft (1) incorporates the CMP sensor reluctor wheel. The intake camshaft uses a camshaft seal (2).

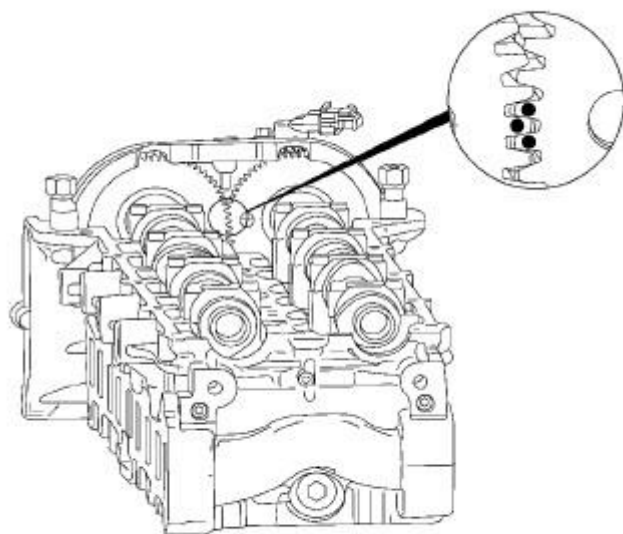


81b113a8

Fig. 81: Camshaft Timing Dots
Courtesy of CHRYSLER LLC

2. The dots on the back of the camshaft gears are for initial timing only. These dots are for timing the camshafts to each other. To correctly set engine timing, the camshafts must be set to 90° ATDC. The Camshaft Locking Tool VM.9991 is used to correctly set the camshafts to their proper location.

Removal

REMOVAL - CAMSHAFT

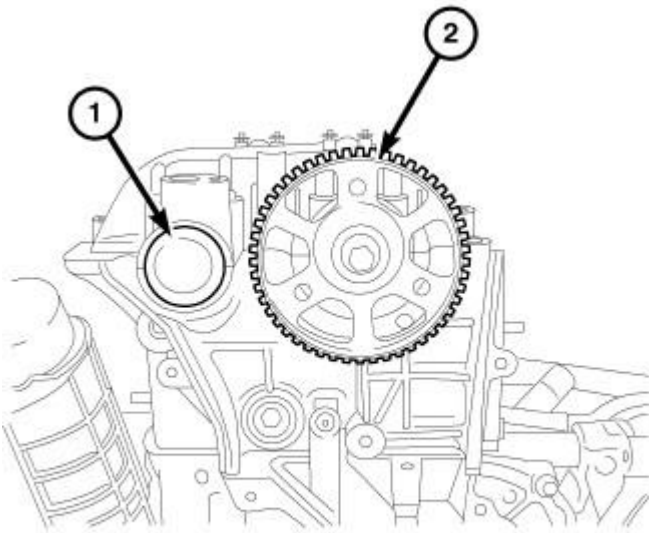


81ab85d9

Fig. 82: CAMSHAFT TIMING SPROCKET

Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Remove the intake camshaft sprocket (2). See Engine/Valve Timing/SPROCKET(S), Timing Belt and Chain - Removal.

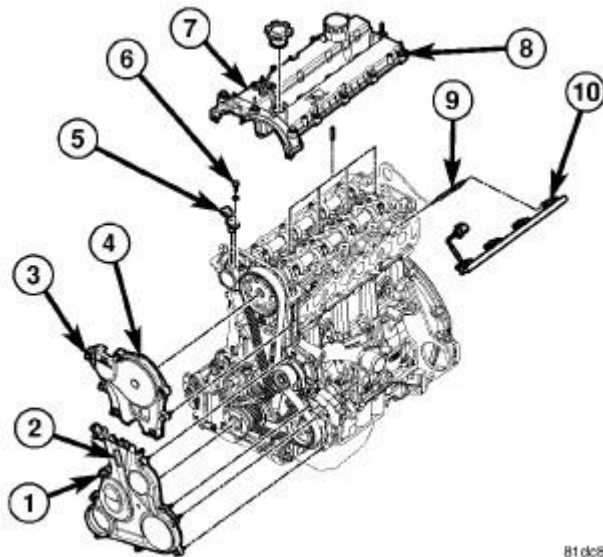

81dc875b

Fig. 83: Upper And Lower Front Covers

Courtesy of CHRYSLER LLC

3. Remove the cylinder head cover (7). See Engine/Cylinder Head/COVER(S), Cylinder Head - Removal.

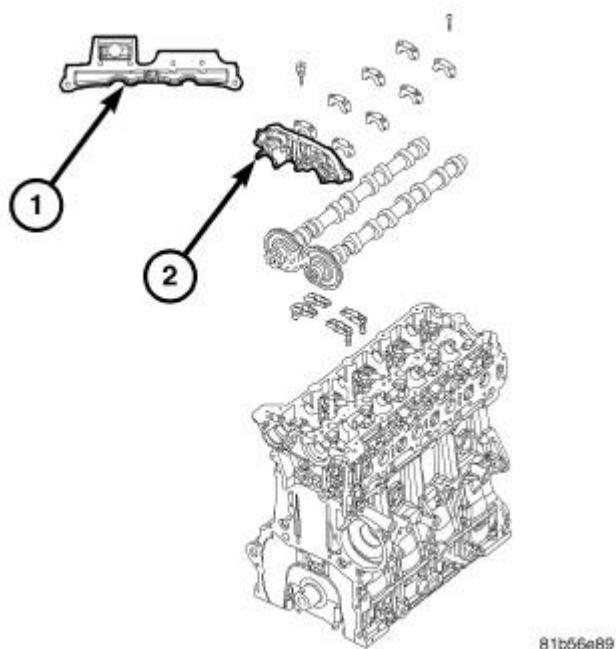


Fig. 84: Front Camshaft Bearing Journal
Courtesy of CHRYSLER LLC

4. Remove the front cam bearing journal (2).


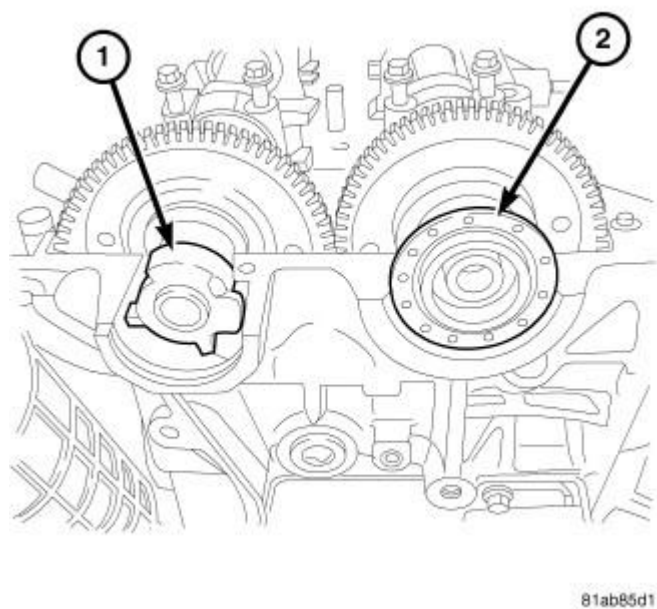


Fig. 85: CAMSHAFT OIL SEAL
Courtesy of CHRYSLER LLC


5. Remove the intake camshaft oil seal (2).

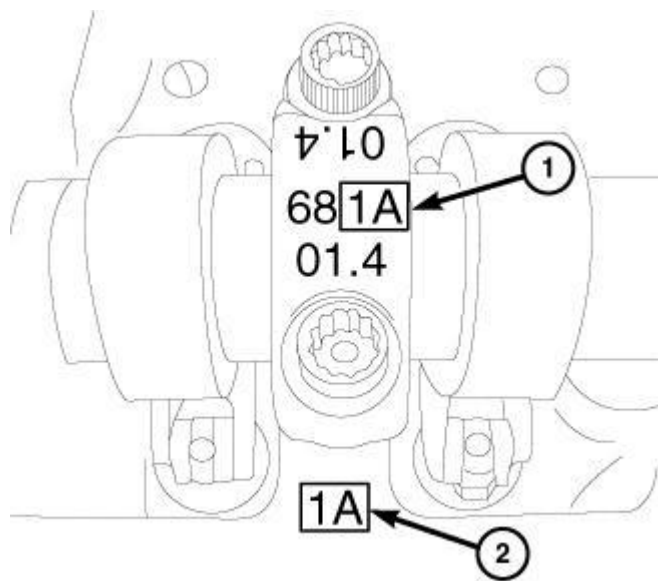

81417

Fig. 86: Identifying Camshaft Cap & Cylinder Head (Intake Side) Markings
Courtesy of CHRYSLER LLC

NOTE: Observe the position marks on the cylinder head and camshaft cap as a reference to its original location. The illustration is an example of the camshaft markings.

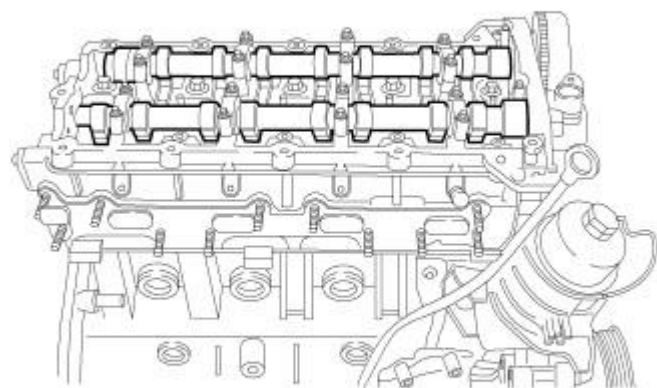

81ab85e1

Fig. 87: CAMSHAFTS
Courtesy of CHRYSLER LLC

NOTE: Intake and exhaust manifolds removed for clarity.

6. Using a circular pattern, remove bolts and the camshaft bearing caps.
7. Remove the camshafts.

Installation

INSTALLATION - CAMSHAFT

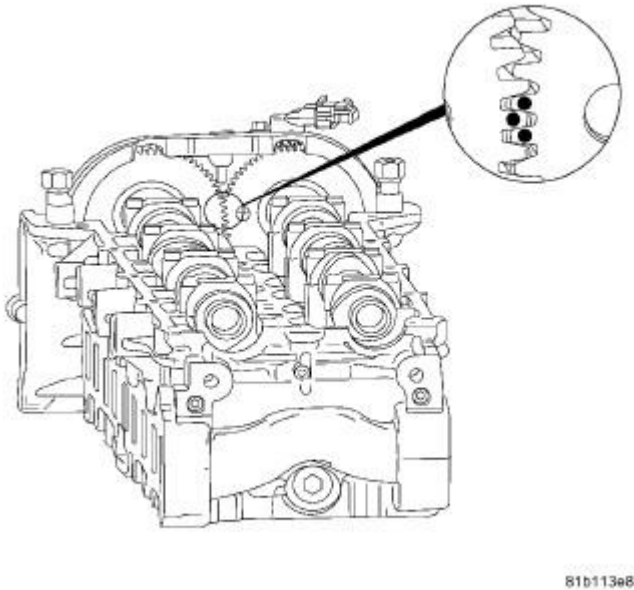


Fig. 88: Camshaft Timing Dots
Courtesy of CHRYSLER LLC

1. Lubricate the camshaft journals with Mopar® Engine Oil Supplement, or equivalent.

NOTE: The dots on the back of the camshaft gears are for initial timing only. These dots are for timing the camshafts to each other. To correctly set engine timing, the camshafts must be set to 90° ATDC. The camshaft locking tool is used to correctly set the camshafts to their proper location.

2. Make sure that the three small orientation dots marks on the back side of the camshaft gears are horizontal and facing each other.
3. Carefully install camshafts onto the camshaft journals.

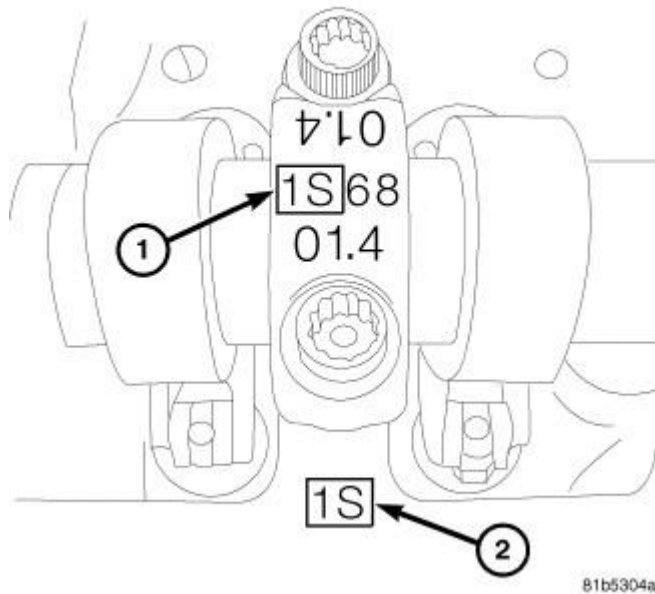


Fig. 89: Identifying Camshaft Cap & Cylinder Head (Exhaust Side) Markings
Courtesy of CHRYSLER LLC

4. The cylinder head and camshaft caps have markings to identify each cap to its correct location. In the illustration, 1S (1) is marked on the exhaust side camshaft cap and 1S (2) is the mark on the exhaust side of the cylinder head. It is critical that all of the camshaft caps are returned to their correct locations.


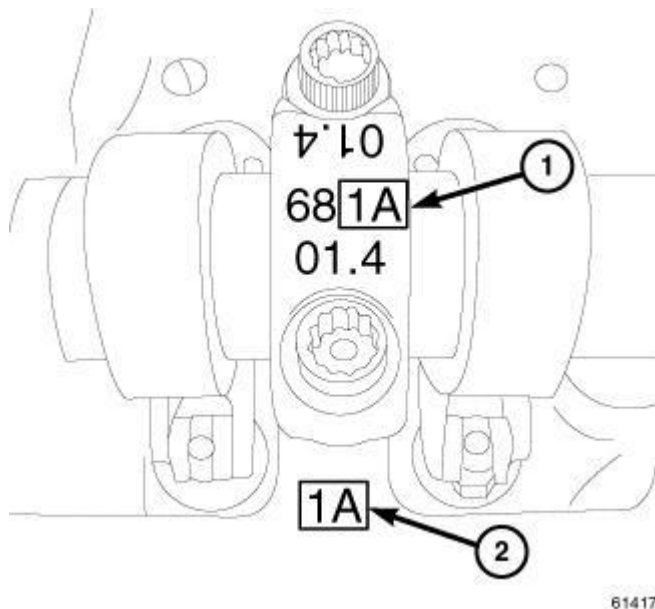


Fig. 90: Identifying Camshaft Cap & Cylinder Head (Intake Side) Markings
Courtesy of CHRYSLER LLC

5. The cylinder head and camshaft caps have markings to identify each cap to its correct location. In the illustration, 1A (1) is marked on the intake side camshaft cap and 1A (2) is the mark on the intake side of

the cylinder head. It is critical that all of the camshaft caps are returned to their correct locations.

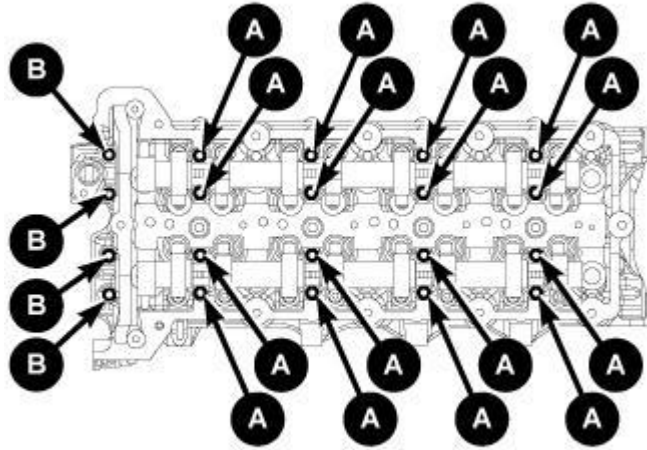


61631

Fig. 91: Identifying Camshaft Bolts
Courtesy of CHRYSLER LLC

NOTE: Whenever the camshaft caps are removed, always replace the bolts.

6. The camshaft bolts have 2 different bolt sizes.

- Bolts A are M6 35 mm.
- Bolts B are M6 45 mm.

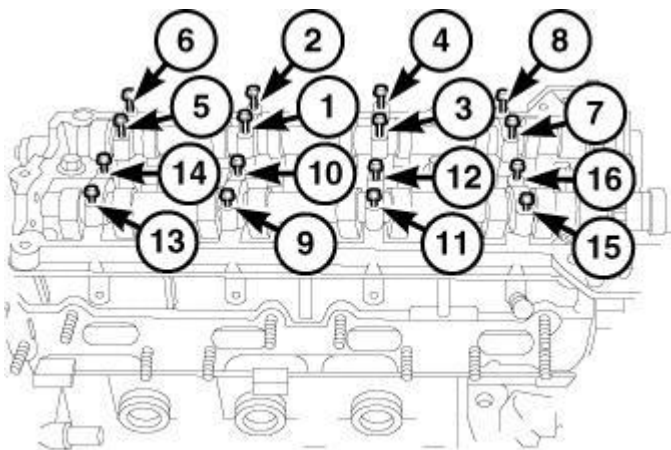


2711430

Fig. 92: Identifying Camshaft Bolt Tightening Sequence
Courtesy of CHRYSLER LLC

7. Using new bolts and the tightening sequence shown in illustration, install the camshaft bolts and tighten

bolts in one turn increments until finger tight.

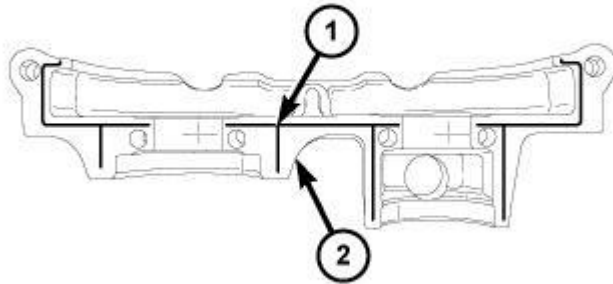


2711392

Fig. 93: Applying Sealant To Front Camshaft Bearing Journal
Courtesy of CHRYSLER LLC

NOTE: Be careful not to get ant Loctite® 510 onto the camshaft journal.

8. Apply a thin bead of Loctite® 510 to the front camshaft bearing journal (2) in the location shown in illustration (1).
9. Install the front camshaft bearing journal and tighten the new bolts finger tight.

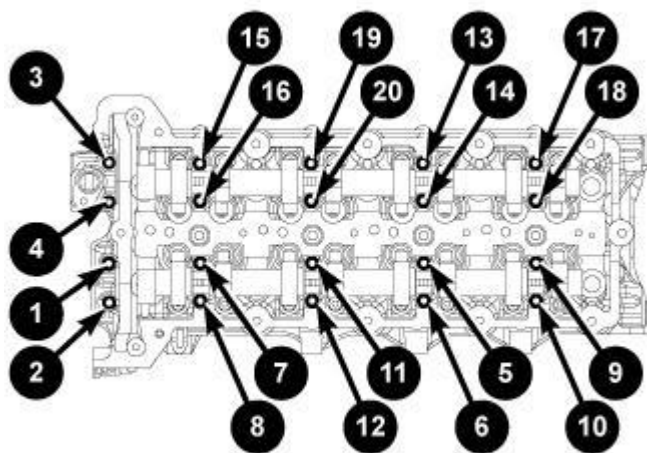

61633

Fig. 94: Camshaft Cap Bolt Torque Sequence
Courtesy of CHRYSLER LLC

10. Using the sequence shown in illustration, tighten the camshaft cap bolts to 11 N.m (97 in. lbs.).

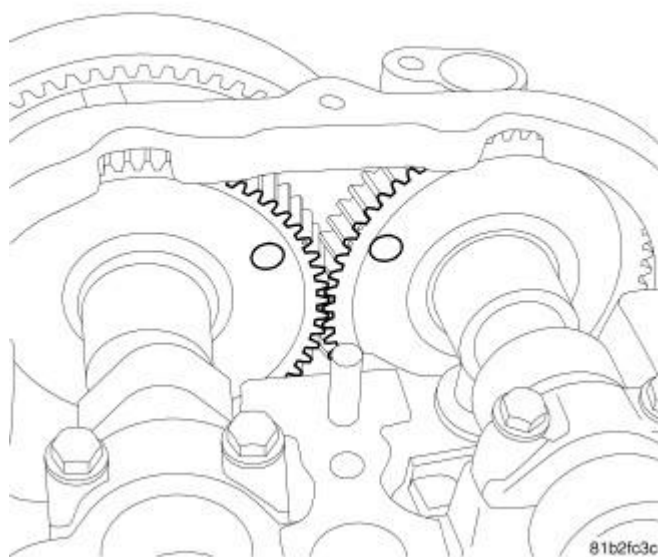


Fig. 95: Camshaft Marks At 90 Degrees ATDC
Courtesy of CHRYSLER LLC

11. Rotate the camshafts so that the camshaft locking tool VM.9991 fits into place.

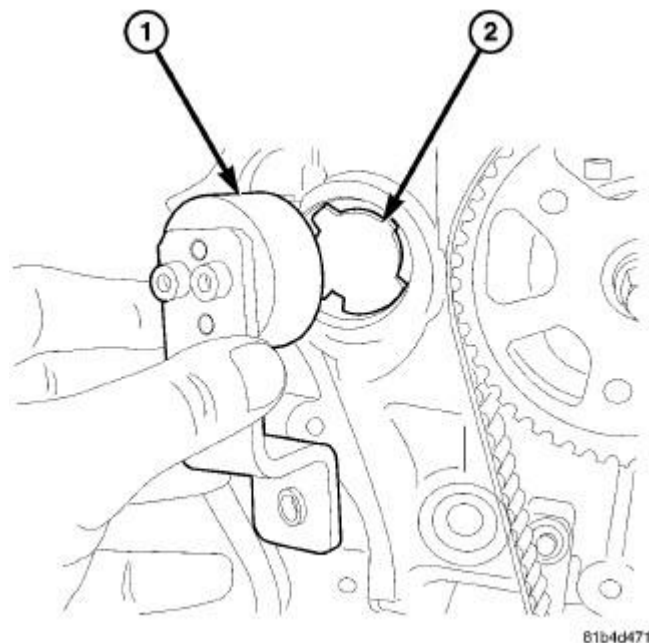


Fig. 96: INSTALLING CAMSHAFT LOCK TOOL
Courtesy of CHRYSLER LLC

12. Install the Camshaft Locking Tool VM.9991 (1) onto the camshaft position sensor tone wheel (2).

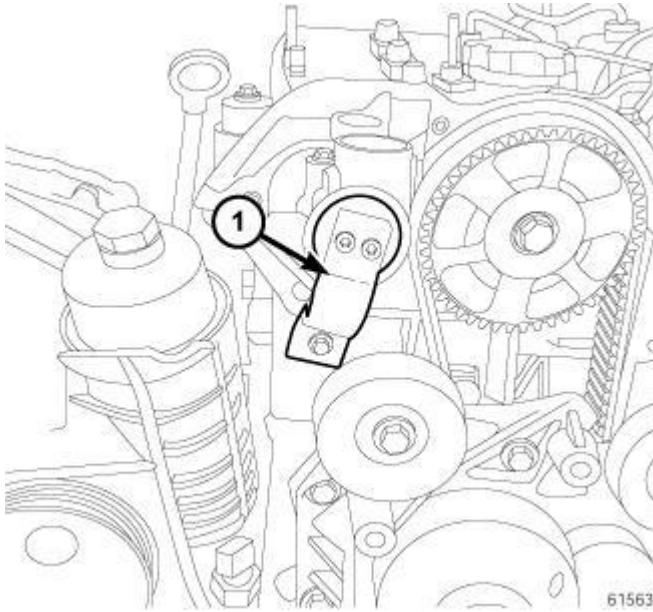


Fig. 97: CAMSHAFT LOCKING TOOL INSTALLED
Courtesy of CHRYSLER LLC

13. When the Camshaft Locking Tool VM.9991 is bolted in place, the camshafts are locked at 90 degrees ATDC.


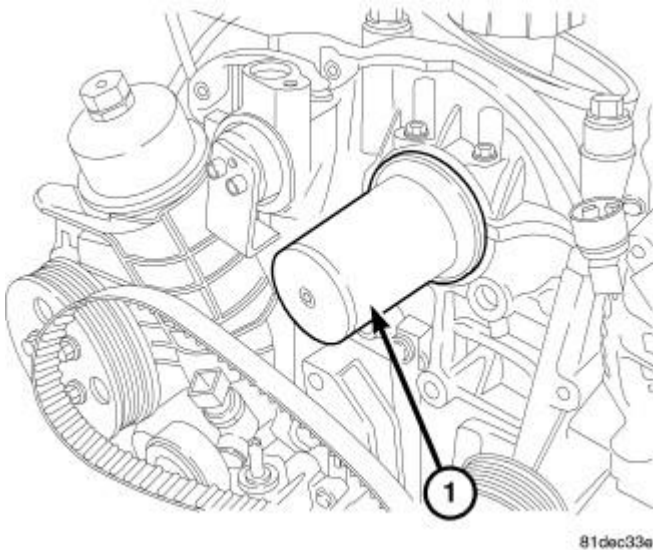


Fig. 98: CAMSHAFT OIL SEAL INSTALLATION
Courtesy of CHRYSLER LLC


14. Using the Seal Installer 9937-1 and 9937-2 (1), install the intake camshaft oil seal.

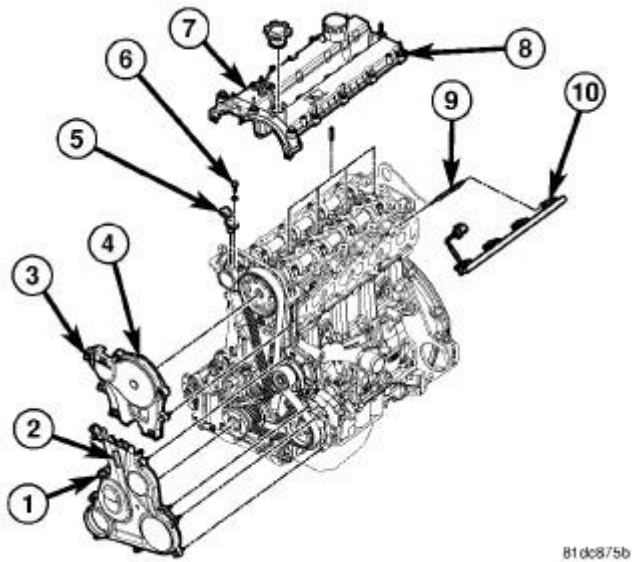

81dc875b

Fig. 99: Upper And Lower Front Covers
Courtesy of CHRYSLER LLC


15. Install the cylinder head cover (7). See **Engine/Cylinder Head/COVER(S), Cylinder Head - Installation.**

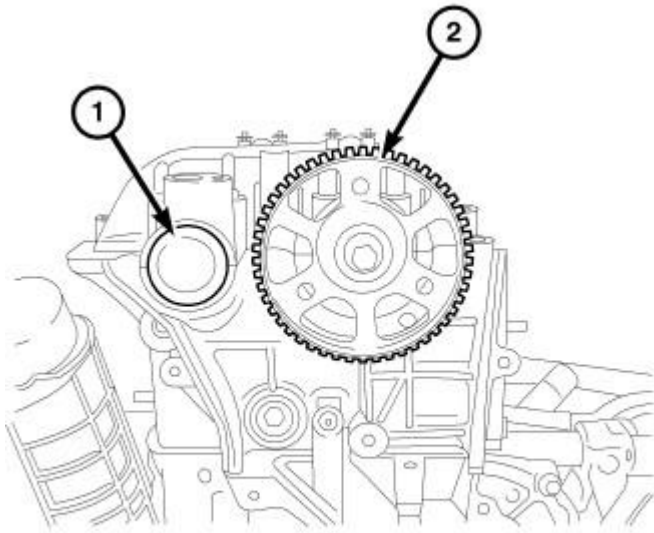

81ab85d9

Fig. 100: CAMSHAFT TIMING SPROCKET
Courtesy of CHRYSLER LLC

16. Install the camshaft sprocket (2). See **Engine/Valve Timing/SPROCKET(S), Timing Belt and Chain - Installation.**
17. Connect the negative battery cable.

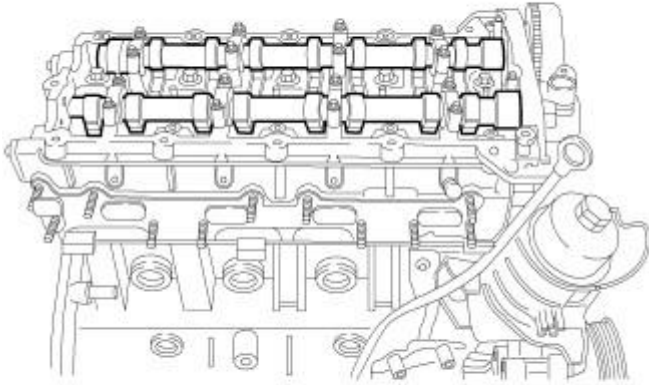CHECKING CAMSHAFT END PLAY

81ab85e1

Fig. 101: CAMSHAFTS

Courtesy of CHRYSLER LLC

1. After camshafts are properly installed in cylinder head cover check end play of camshafts with a dial indicator. The end play should be between 0.10 mm - 0.55 mm.

NOTE: If the camshaft endplay is not within specification, replace the cylinder head.

2. Measure the camshaft end play with a dial indicator. The end play should be between 0.15 mm 0.35 mm (0.006 in - 0.014 in.).

COVER(S), CYLINDER HEAD**Description****DESCRIPTION**

The cylinder head cover is made of an injection molded composite. The cylinder head cover also incorporates a oil drain back hole for the crankcase ventilation (CCV) system.

Removal**REMOVAL**

1. Disconnect the negative battery cable.

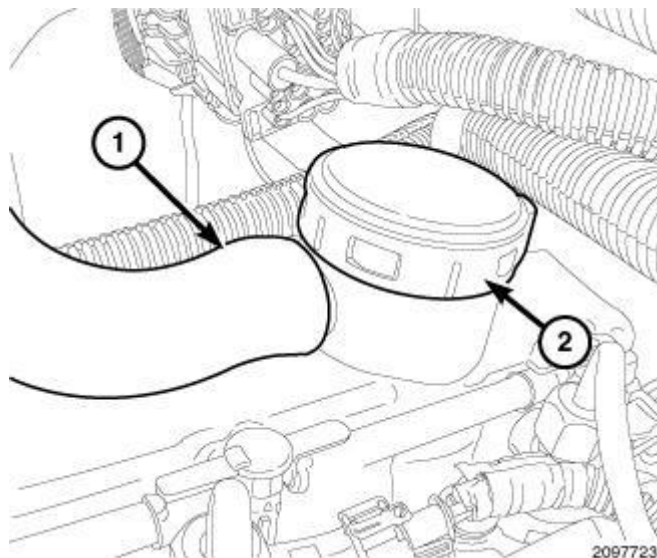


Fig. 102: Crankcase Vent Hose & Oil Separator
Courtesy of CHRYSLER LLC

2. Disconnect the crankcase vent hose (1) from the oil separator (2).

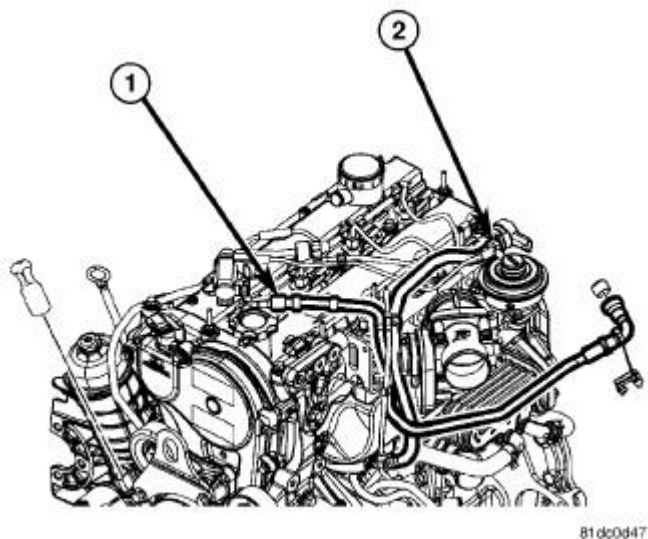


Fig. 103: Fuel Return Lines-Top
Courtesy of CHRYSLER LLC

3. Disconnect the fuel injector return line (1) from the fuel injectors.
4. Disconnect the vacuum line from the EGR solenoid to EGR valve (2).
5. Disconnect the EGR solenoid electrical connector.

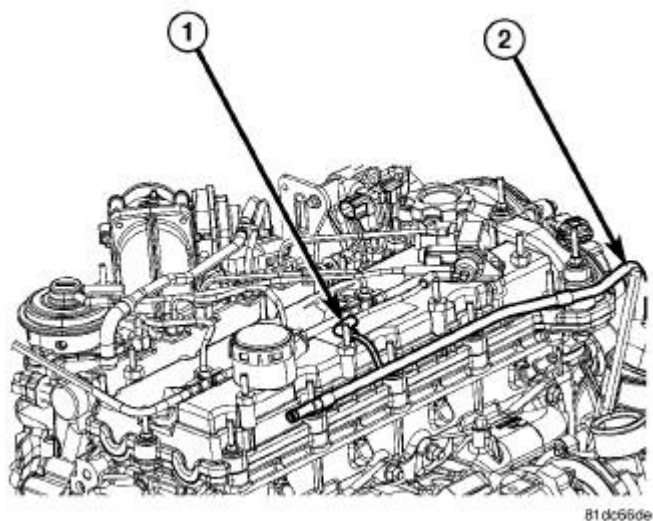


Fig. 104: Vacuum Supply Tube
Courtesy of CHRYSLER LLC

6. Disconnect the vacuum line (1) to the EGR solenoid.
7. Remove the retaining nuts and position aside the vacuum line (2).


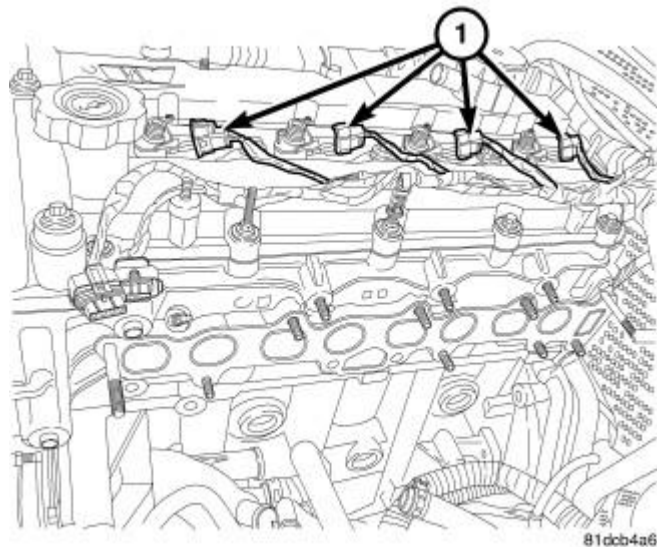


Fig. 105: Fuel Injector Harness
Courtesy of CHRYSLER LLC

8. Disconnect the fuel injector harness connectors from the fuel injectors (1).

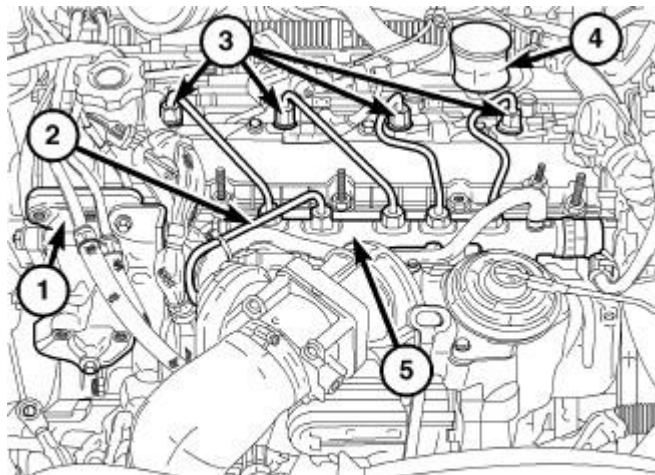


81daf5dc

Fig. 106: FUEL RAIL

Courtesy of CHRYSLER LLC

9. If necessary, loosen the fuel rail nuts.
10. Remove the fuel injector fuel lines (3) from the fuel injectors and the fuel rail. Install protective caps onto the fuel injector.

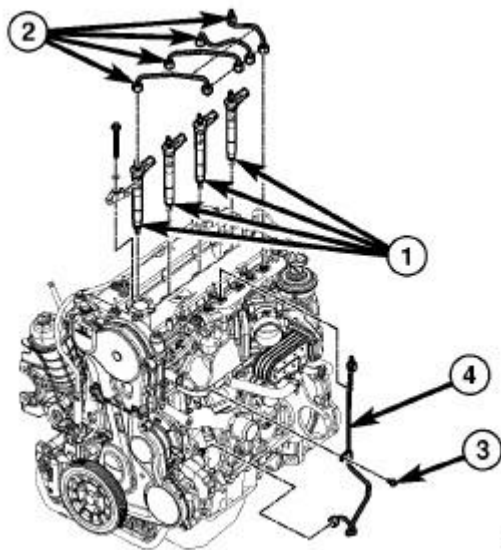


81dc90a1

Fig. 107: Diesel Fuel Injectors

Courtesy of CHRYSLER LLC

11. Remove the fuel injectors (1).

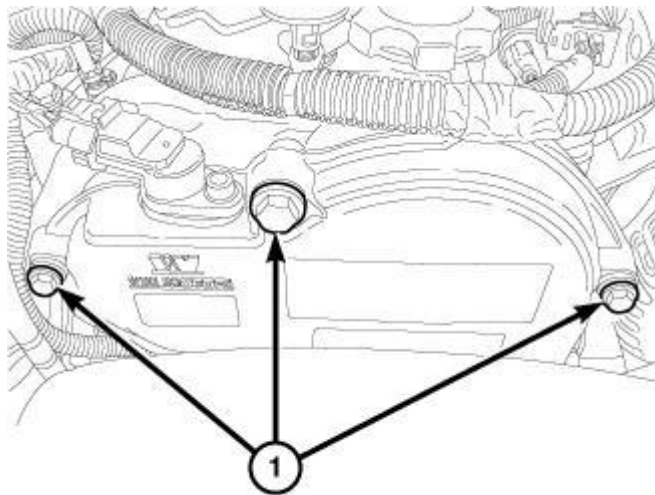


2097854

Fig. 108: Upper Cover Bolts
Courtesy of CHRYSLER LLC

NOTE: The upper cover bolts are encased in a collar which does not permit them to be removed.

12. Loosen the upper front timing cover bolts (1).

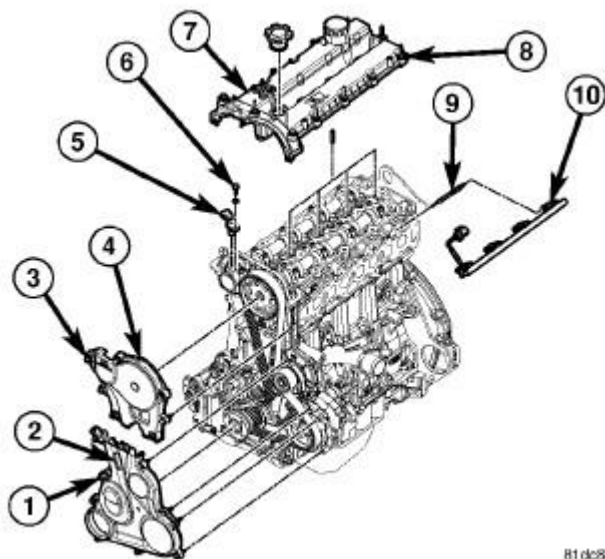

81dc875b


Fig. 109: Upper And Lower Front Covers
Courtesy of CHRYSLER LLC

13. Loosen the fasteners (8) and the cylinder head cover (7).

Installation

INSTALLATION


1. Clean and inspect the gasket surface of the cylinder head and the cylinder head cover gasket. Replace cylinder cover gasket if necessary.

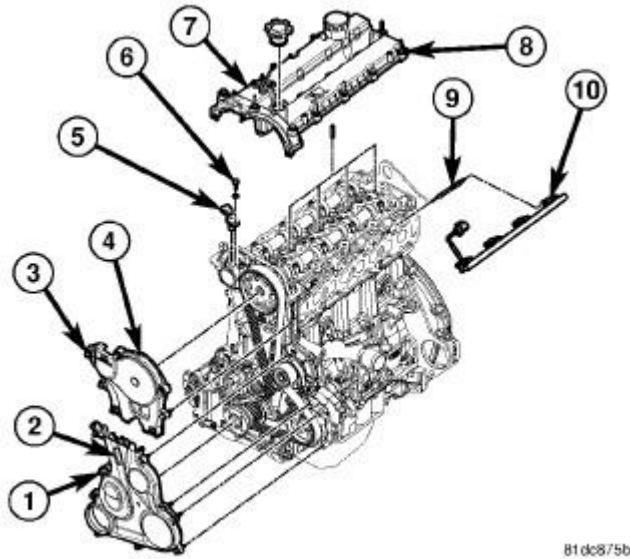

81dc875b

Fig. 110: Upper And Lower Front Covers
Courtesy of CHRYSLER LLC

2. Install the cylinder head cover (7). Tighten to 11 N.m (97 in. lbs.).

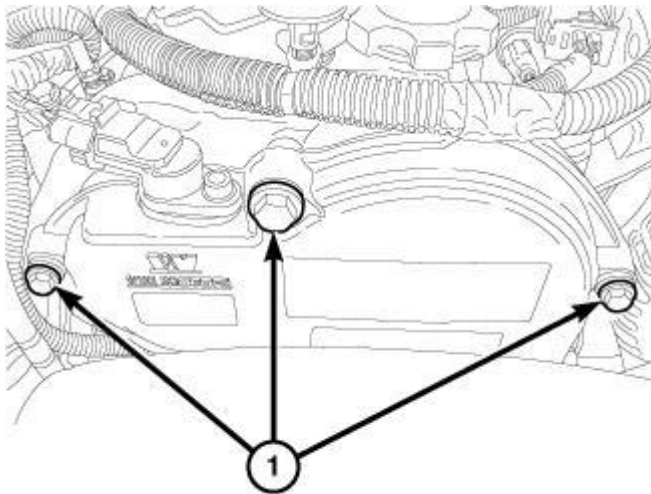

2097854

Fig. 111: Upper Cover Bolts
Courtesy of CHRYSLER LLC

3. Tighten the upper front timing cover bolts (1) to 11 N.m (97 in. lbs.).

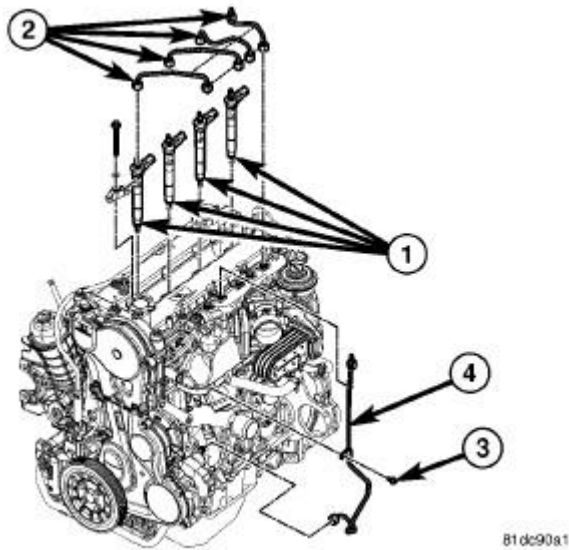


Fig. 112: Diesel Fuel Injectors
Courtesy of CHRYSLER LLC

4. Install fuel injectors, washer, and injector retainer claw.
5. Install the injector clamp bolts. Tighten injector clamp bolts to 33 N.m (24 ft. lbs.).

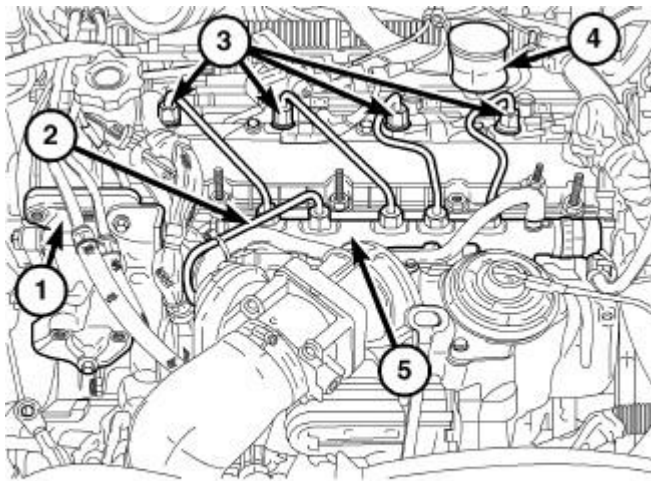


Fig. 113: FUEL RAIL
Courtesy of CHRYSLER LLC

6. Remove the protective caps and loosely install the high pressure fuel lines (3) onto the fuel injectors and the fuel rail.
7. If necessary, tighten the fuel rail nuts to 24 N.m (18 ft. lbs.).
8. Tighten the fuel lines (3) at the fuel injector to 28 N.m (20 ft. lbs.).
9. Tighten the fuel lines from the injectors to the fuel rail to 5 N.m (44 in. lbs.), plus an additional 75°.

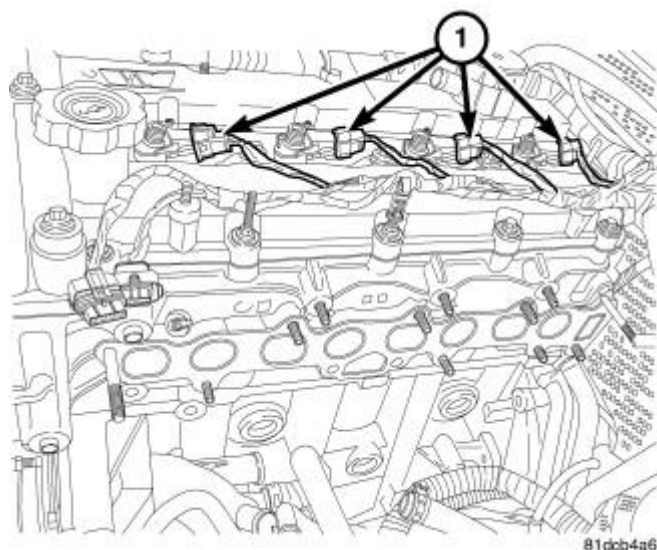


Fig. 114: Fuel Injector Harness
Courtesy of CHRYSLER LLC

10. Connect the fuel injector harness connectors (1) to the fuel injector.

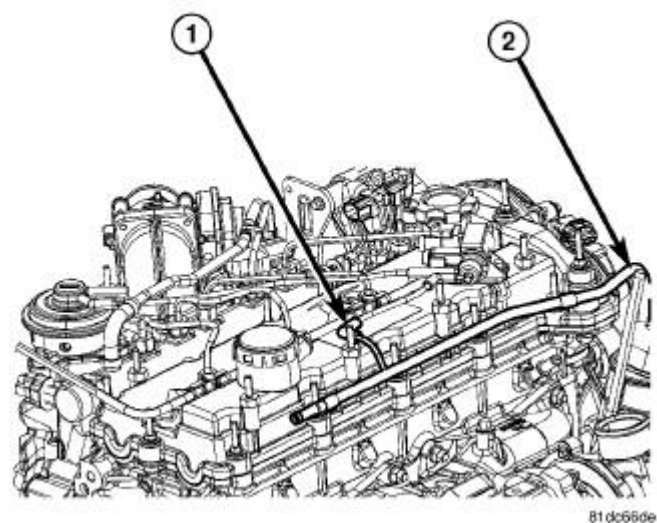


Fig. 115: Vacuum Supply Tube
Courtesy of CHRYSLER LLC

11. Install the vacuum line (2) and tighten the retaining nuts.
12. Connect the vacuum line (1) to the EGR solenoid.

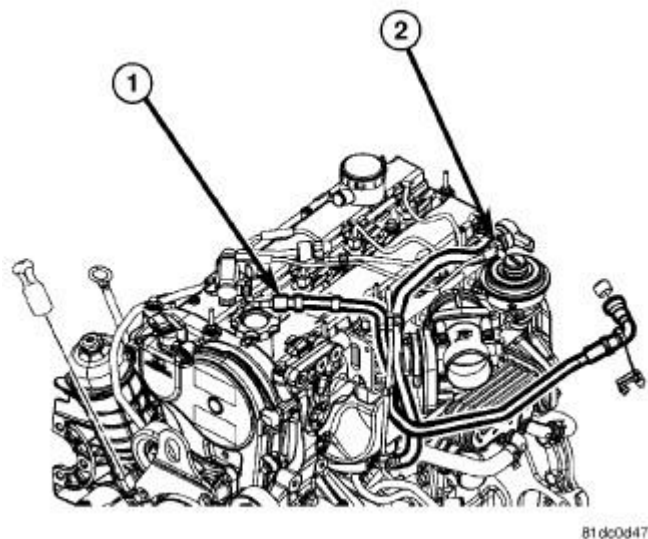


Fig. 116: Fuel Return Lines-Top
Courtesy of CHRYSLER LLC

13. Connect the EGR solenoid electrical connector.
14. Connect the vacuum line from the EGR solenoid to EGR valve (2).
15. Connect the fuel injector return lines (1) to the fuel injectors.

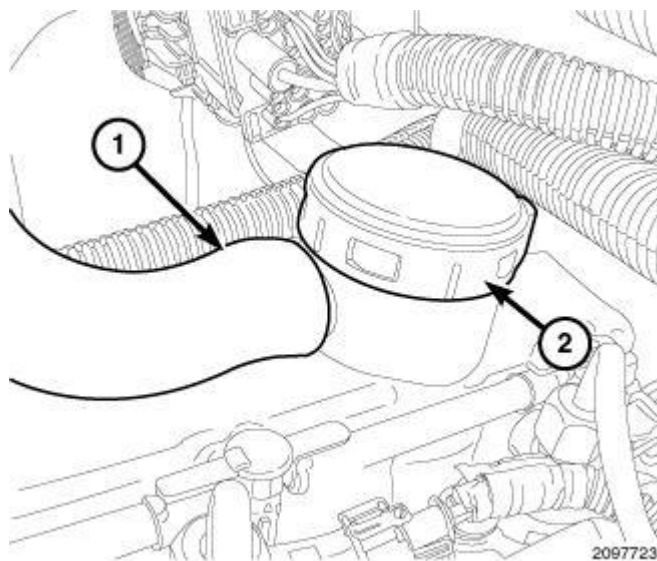


Fig. 117: Crankcase Vent Hose & Oil Separator
Courtesy of CHRYSLER LLC

16. Connect the crankcase vent hose (1) to the oil separator (2).
17. Connect the negative battery cable.

LIFTER(S), HYDRAULIC

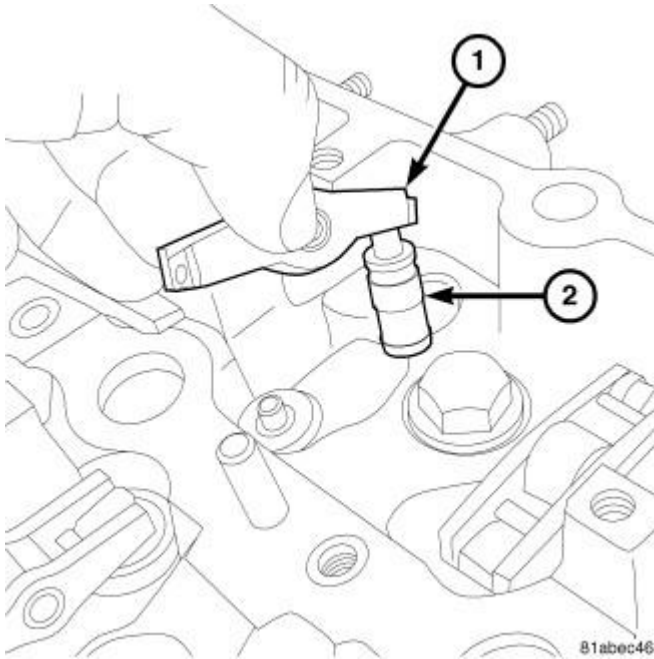
Description**DESCRIPTION**

Fig. 118: ROCKER ARM AND LIFTER ASSEMBLY
Courtesy of CHRYSLER LLC

Valve lash is controlled by hydraulic tappets (2) located inside the cylinder head, in tappet bores below the camshafts.

Removal**REMOVAL**

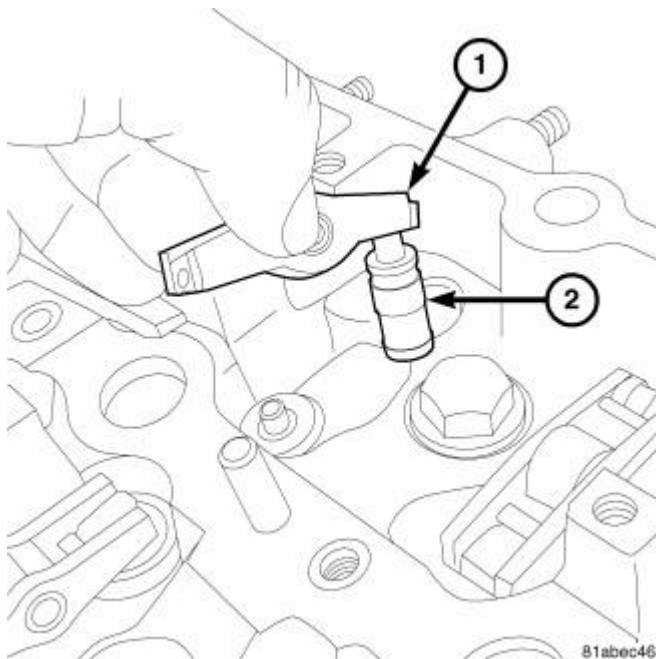


Fig. 119: ROCKER ARM AND LIFTER ASSEMBLY

Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Remove the camshafts. See **Engine/Cylinder Head/CAMSHAFT, Engine - Removal**.

NOTE: Always return the hydraulic lifters to their original location in the cylinder head.

3. Remove the rocker arms (1) and hydraulic lifters (2).

Inspection

INSPECTION

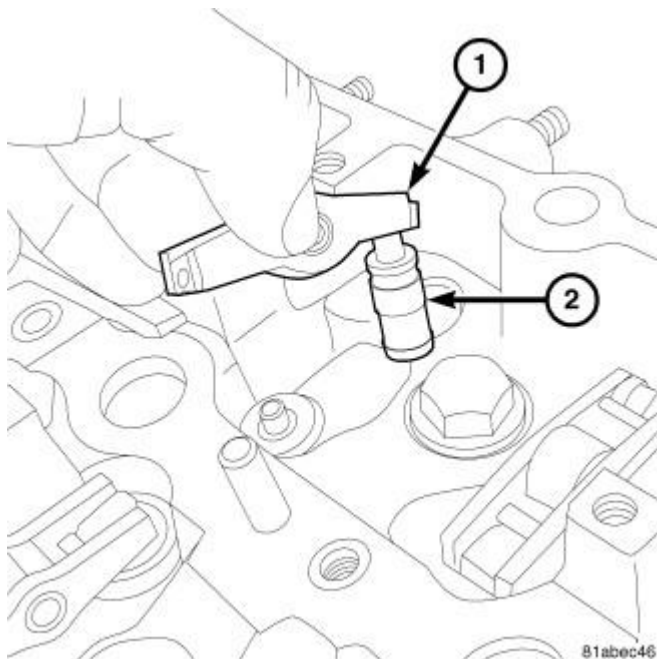


Fig. 120: ROCKER ARM AND LIFTER ASSEMBLY
Courtesy of CHRYSLER LLC

Clean each lifter assembly (1) in cleaning solvent to remove all varnish and sludge deposits. Inspect for indications of scuffing on the side and base of each lifter body.

Installation

INSTALLATION

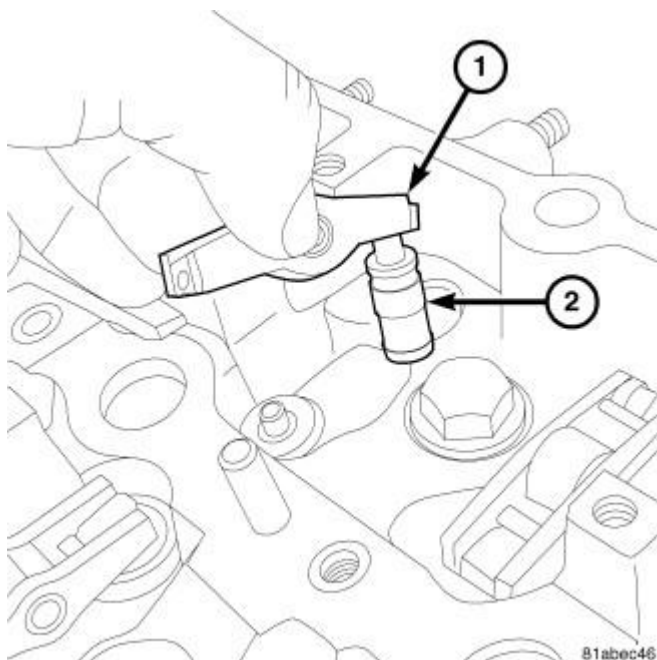
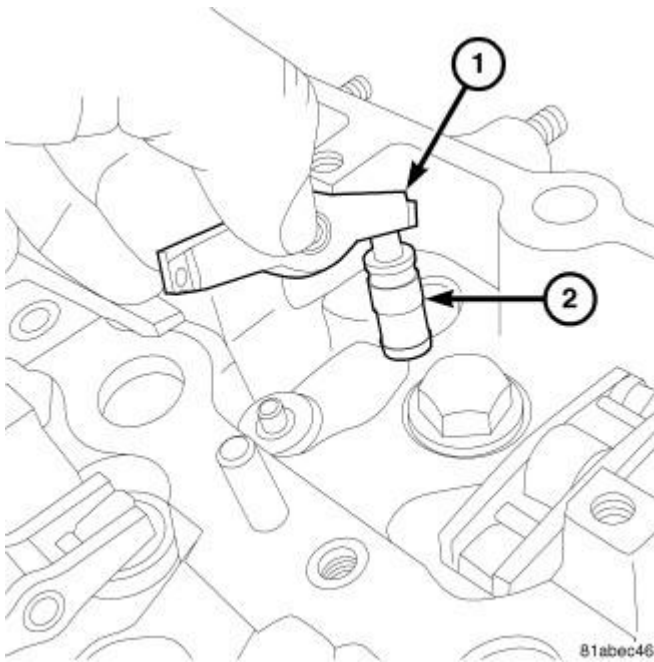


Fig. 121: ROCKER ARM AND LIFTER ASSEMBLY

Courtesy of CHRYSLER LLC

1. Install the rocker arms (1) and hydraulic lifters (2) into their original locations.
2. Install the camshafts. See **Engine/Cylinder Head/CAMSHAFT, Engine - Installation.**
3. Connect the negative battery cable.

ROCKER ARM, VALVE**Description****DESCRIPTION****Fig. 122: ROCKER ARM AND LIFTER ASSEMBLY****Courtesy of CHRYSLER LLC**

The rocker arms (1) are made of stamped steel and serviced as an assembly along with the lifter.

The rocker arms (1) are used as a link between the camshaft and valves. As the camshaft rotates, the lobes of the camshafts apply downward pressure on the rocker arms (1). This pressure is then applied to the hydraulic lifter (2) which opens the valve.

Removal**REMOVAL**

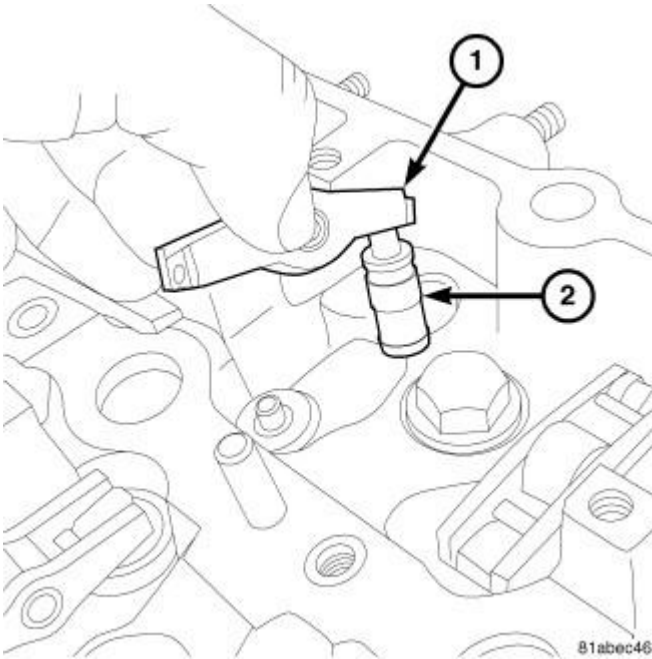


Fig. 123: ROCKER ARM AND LIFTER ASSEMBLY
Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Remove the camshafts. See **Engine/Cylinder Head/CAMSHAFT, Engine - Removal.**
3. Remove rocker arms (1) and lifters (2).

Installation

INSTALLATION

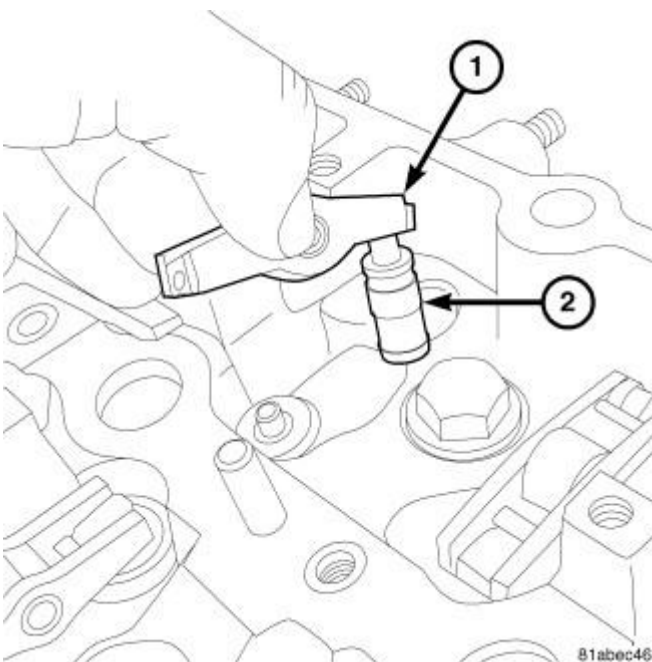
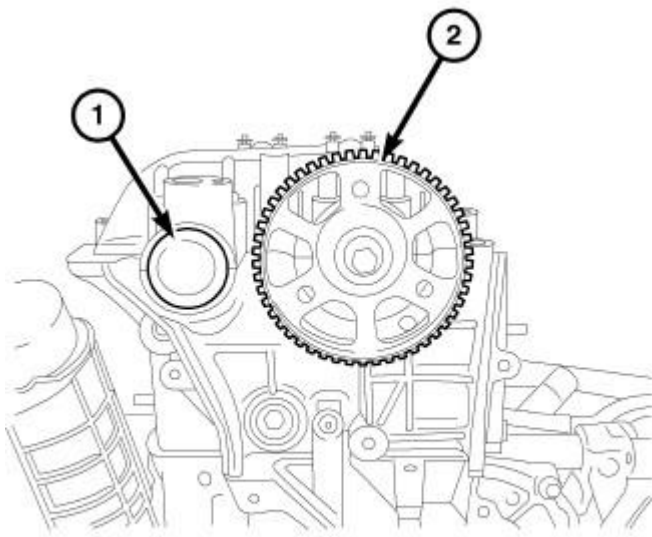


Fig. 124: ROCKER ARM AND LIFTER ASSEMBLY

Courtesy of CHRYSLER LLC

1. Clean and inspect gasket sealing surfaces.
2. Lubricate lifter ball end of lifter(s), valve(s), and rocker arm roller(s) with Mopar® Engine Oil Supplement or equivalent.
3. Connect rocker arm(s) to lifter and reposition on valve(s).
4. Install the camshafts. See **Engine/Cylinder Head/CAMSHAFT, Engine - Installation.**
5. Connect the negative battery cable.

SEAL(S), CAMSHAFT**Removal****REMOVAL - CAMSHAFT OIL SEAL**

81ab85d9

Fig. 125: CAMSHAFT TIMING SPROCKET

Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Remove the intake camshaft sprocket (2). See **Engine/Valve Timing/SPROCKET(S), Timing Belt and Chain - Removal.**

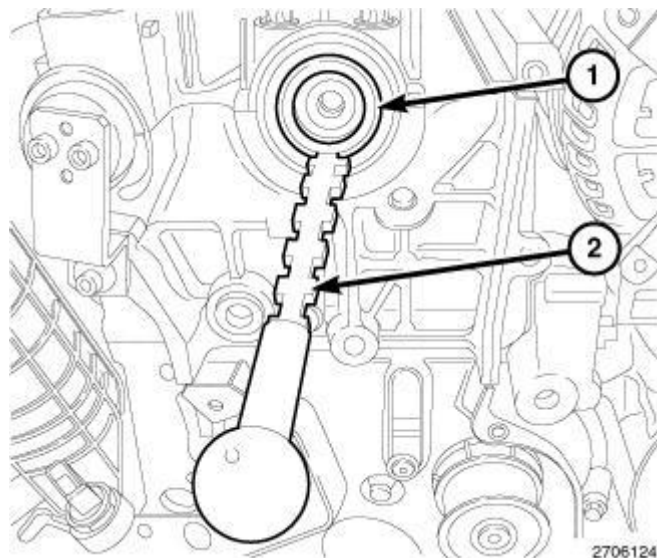


Fig. 126: SEAL REMOVER & SEAL
Courtesy of CHRYSLER LLC

3. Install the Seal Remover VM.1058 (2) into seal (1) as shown in illustration.

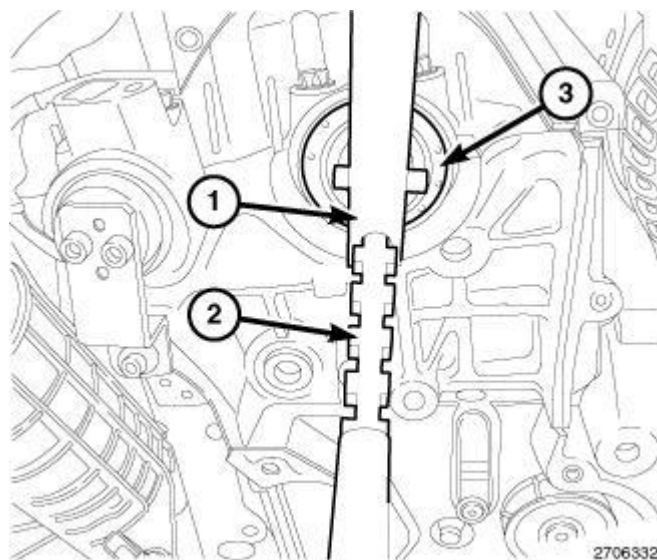


Fig. 127: Identifying Seal Remover Handle, Seal Remover & Intake Camshaft Oil Seal
Courtesy of CHRYSLER LLC

4. Position the Seal Remover Handle VM.1058 (1) onto Seal Remover VM.1058 (2) and remove the intake camshaft oil seal (3).

Installation

INSTALLATION - CAMSHAFT OIL SEAL

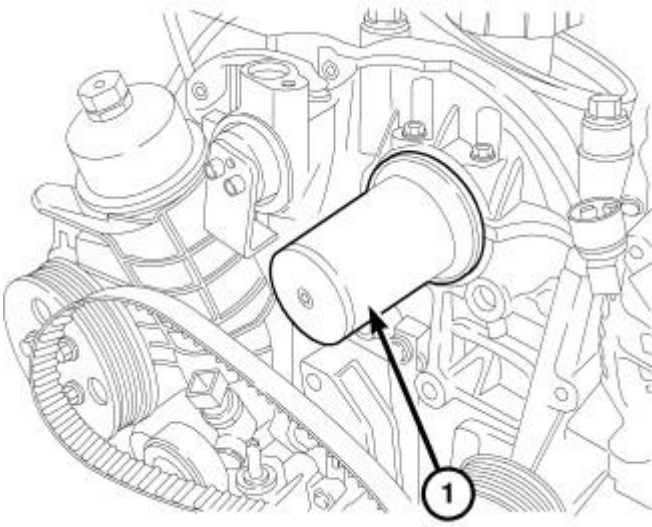


Fig. 128: CAMSHAFT OIL SEAL INSTALLATION
Courtesy of CHRYSLER LLC

1. Use the Seal Installer 9937-1 and 9937-2 (1) to install the intake camshaft oil seal.

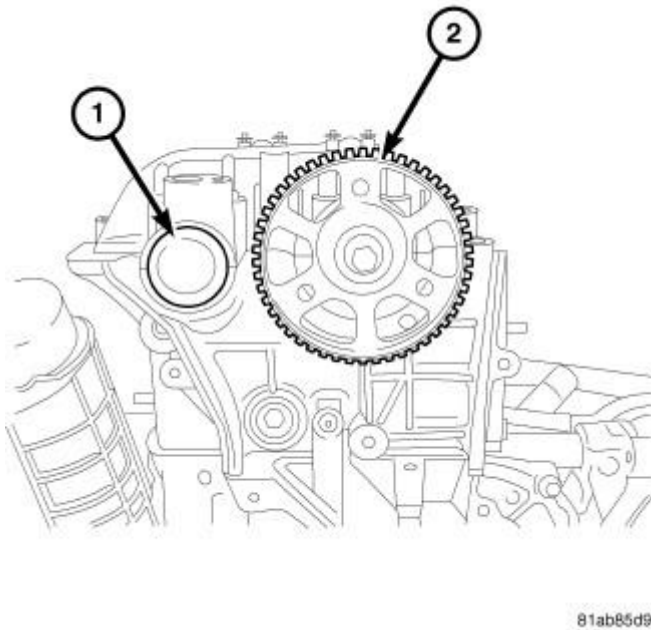


Fig. 129: CAMSHAFT TIMING SPROCKET
Courtesy of CHRYSLER LLC

2. Install the camshaft sprocket (2). See **Engine/Valve Timing/SPROCKET(S), Timing Belt and Chain - Installation**.
3. Connect the negative battery cable.

ENGINE BLOCK

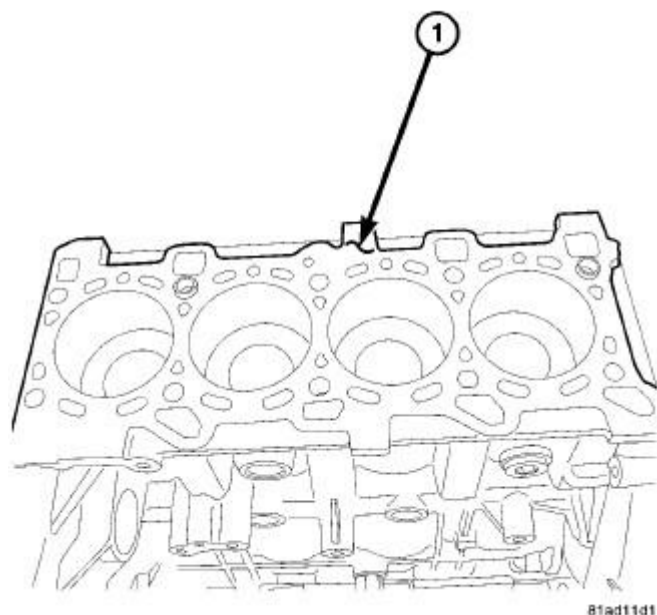
DESCRIPTION**DESCRIPTION**

Fig. 130: ENGINE BLOCK
 Courtesy of CHRYSLER LLC

The 2.8L CRD Diesel engine uses a cast iron engine block. The cylinder block has increased stiffness that reduces structural flexing and a fractured connecting rod cap design that can not distort connecting rod cap fit.

STANDARD PROCEDURE**BEARING SELECTION CHARTS****CONNECTING ROD BEARINGS - LARGE END**

Connecting Rod Journal Diameter - Connecting Rod Large End	Bearing Half	Connecting Rod Journal Diameter - Crankshaft			
		D	C	B	A
-	-	53.929 - 53.936	53.936 - 53.942	53.942 - 53.948	53.948 - 53.955
A 57.563 - 57.568	Upper Bearing Shell	Blue	Blue	Red	Red
	Lower Bearing Shell	Yellow	Blue	Blue	Red
-	-	-	-	-	-
	Upper Bearing	Yellow	Blue	Blue	Red

2010 Jeep Wrangler Sport

2010 ENGINE 2.8L Diesel - Service Information - Wrangler

B 57.568 - 57.573	Shell				
	Lower Bearing Shell	Yellow	Yellow	Blue	Blue
-					
C 57.573 - 57.578	Upper Bearing Shell	Yellow	Yellow	Blue	Blue
	Lower Bearing Shell	Green	Yellow	Yellow	Blue
-					
D 57.578 - 57.583	Upper Bearing Shell	Green	Yellow	Yellow	Blue
	Lower Bearing Shell	Green	Green	Yellow	Yellow

CRANKSHAFT BEARINGS

Cylinder Block Seat Diameter	Bearing Half	Crankshaft Main Journal Diameter			
		D	C	B	A
-	-	64.974 - 64.981	64.981 - 64.987	64.987 - 64.993	64.993 - 65.000
A 69.000 - 69.005	Upper Bearing Shell	Blue	Blue	Red	Red
	Lower Bearing Shell	Yellow	Blue	Blue	Red
-					
B 69.005 - 69.010	Upper Bearing Shell	Yellow	Blue	Blue	Red
	Lower Bearing Shell	Yellow	Yellow	Blue	Blue
-					
C 69.010 - 69.015	Upper Bearing Shell	Yellow	Yellow	Blue	Blue
	Lower Bearing Shell	Green	Yellow	Yellow	Blue
-					
D 69.015 - 69.020	Upper Bearing Shell	Green	Yellow	Yellow	Blue
	Lower Bearing Shell	Green	Green	Yellow	Yellow

BEARING(S), CONNECTING ROD

Removal

REMOVAL - CONNECTING ROD BEARINGS

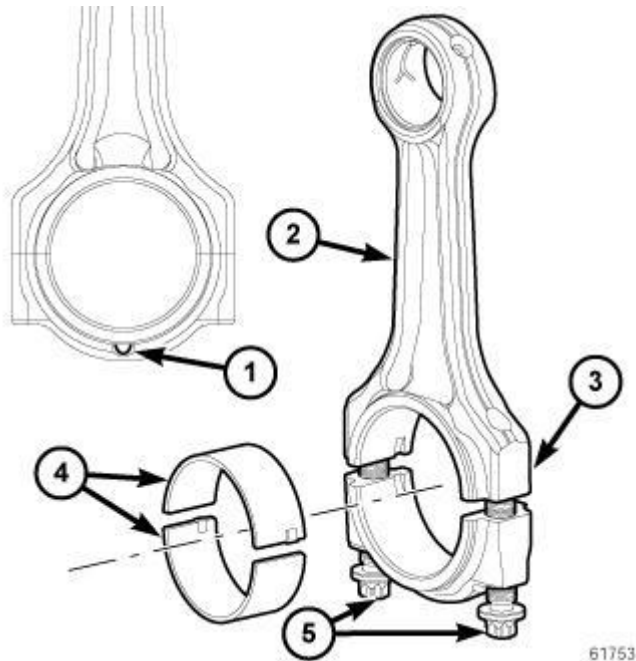


Fig. 131: CONNECTING ROD IDENTIFICATION

Courtesy of CHRYSLER LLC

- | |
|---|
| <p>1 - CONNECTING ROD PAWL
2 - CONNECTING ROD
3 - PAINTED CYLINDER IDENTIFIER
4 - CONNECTING ROD BEARINGS
5 - BOLTS</p> |
|---|

1. Remove the balance shaft module. See **Engine/Engine Block/MODULE, Balance Shaft - Removal**.
2. Remove the connecting rod bearing caps (1) one at a time and discard bolts (5).
3. Carefully remove the upper half and lower half of bearing (4) from the connecting rod (2).

Installation

INSTALLATION - CONNECTING ROD BEARINGS

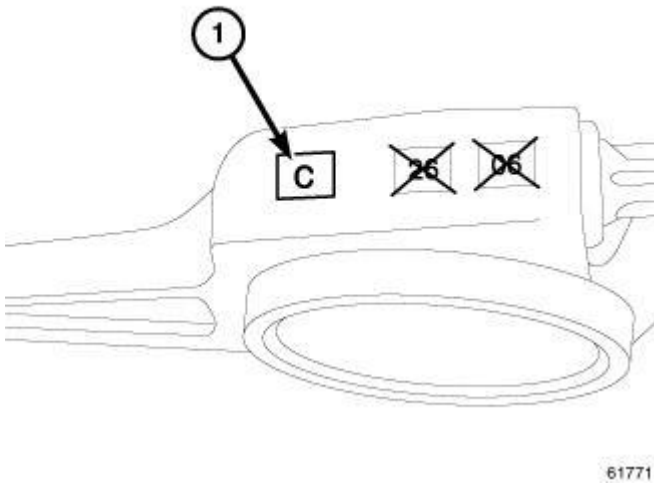


Fig. 132: CONNECTING ROD SIZE
 Courtesy of CHRYSLER LLC

1. Each connecting rod has its own letter class (1) to a specific connecting rod journal diameter.

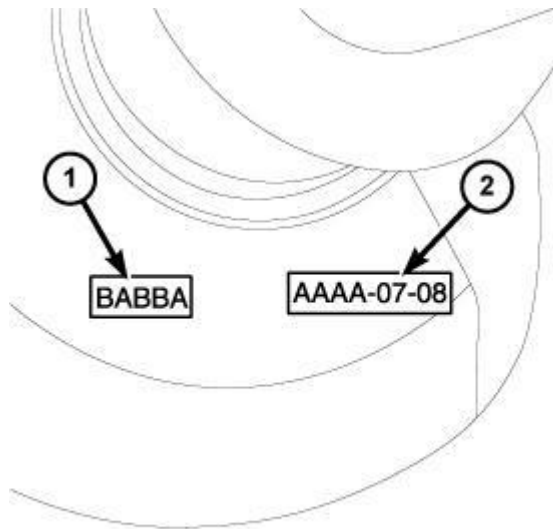


Fig. 133: MAIN BEARING SIZE MARK ON CRANK
 Courtesy of CHRYSLER LLC

2. To determine the correct bearing size for each cylinder. Each connecting rod letter class must be matched with the crankshaft letter class (2) with the bearing selection chart to determine the correct bearing color for each cylinder. The letters stamped into the crankshaft (2) are in the same order as the cylinders. The first letter corresponds to the first cylinder, the second to the second, etc. See bearing selection chart. See Engine/Engine Block - Standard Procedure.

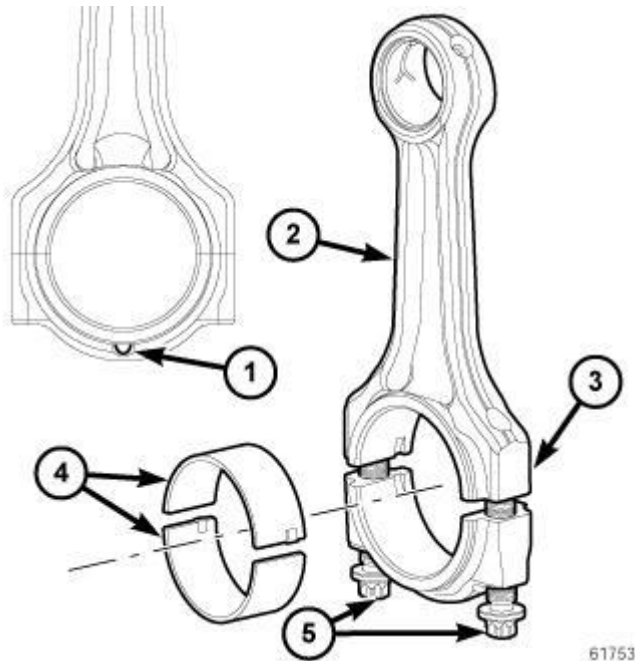


Fig. 134: CONNECTING ROD IDENTIFICATION
Courtesy of CHRYSLER LLC

- | |
|--|
| 1 - CONNECTING ROD PAWL
2 - CONNECTING ROD
3 - PAINTED CYLINDER IDENTIFIER
4 - CONNECTING ROD BEARINGS
- BOLTS |
|--|

CAUTION: Connecting rod bolts must be replaced when disassembled. When assembling the connecting rod (2), be sure that the connecting rod pawl (1) on each of the connecting rod caps is facing the rear (fly wheel) side of the engine.

NOTE: Do Not lubricate the new connecting rod bolts. They are already coated with a anti scuff treatment.

3. Assemble connecting rod bearings (4) and bearing caps to their respective connecting rods (2) ensuring that the serrations on the cap and reference marks are aligned.
4. Using new connecting rod bolts, tighten the connecting rod cap bolts to 10 N.m (88 in. lbs.).
5. Without loosening connecting rod bolts, tighten all bolts to 30 N.m (22 ft. lbs.).
6. Using a torque angle gauge, tighten each bolt an additional 40 degrees.
7. Using a torque wrench, recheck all rod bolt tightening to 88 N.m (65 ft. lbs).
8. Install the balance shaft module. See Engine/Engine Block/MODULE, Balance Shaft - Installation.

BEARING(S), CRANKSHAFT, MAIN

Removal

REMOVAL - CRANKSHAFT BEARINGS

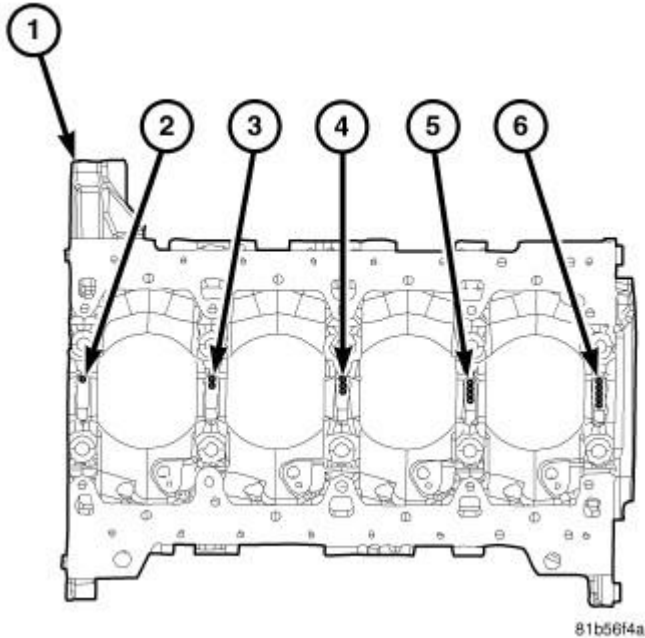


Fig. 135: CRANKSHAFT CAP LOCATION MARKS
Courtesy of CHRYSLER LLC

1. Remove the balance shaft assembly. See Engine/Engine Block/MODULE, Balance Shaft - Removal.

NOTE: Bearing caps (2-6) are not interchangeable and are marked to ensure according to their locations (2-6) in the block (1). Upper and lower bearing halves are NOT interchangeable, and must be installed facing in the correct direction.

2. Identify bearing cap locations (2-6) before removal.

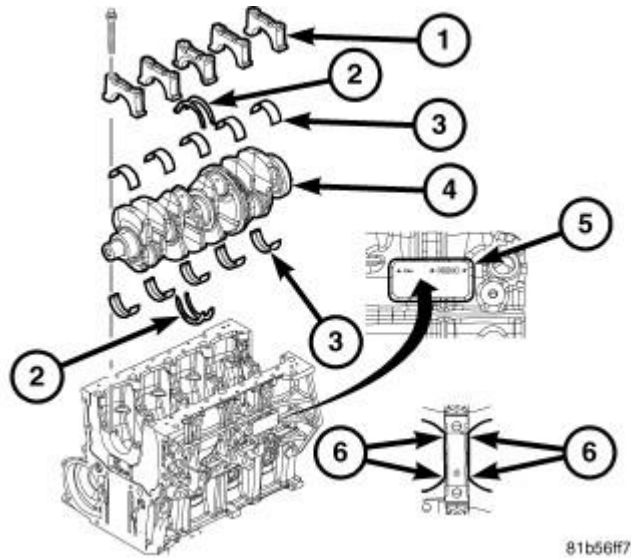


Fig. 136: CRANKSHAFT BEARING SIZE MARK


Courtesy of CHRYSLER LLC

3. Remove the bearing caps (1) one at a time, and if possible, replace the crankshaft bearings (3) one at a time. Carefully rotate upper half of bearing from between the carrier and the crankshaft (4). If the upper half of the bearing does not easily slide out of position, the crankshaft must be removed for further inspection. See Engine/Engine Block/CRANKSHAFT - Removal.

Installation

INSTALLATION

NOTE: The crankshaft cannot be machined, if badly worn or scored it must be replaced.

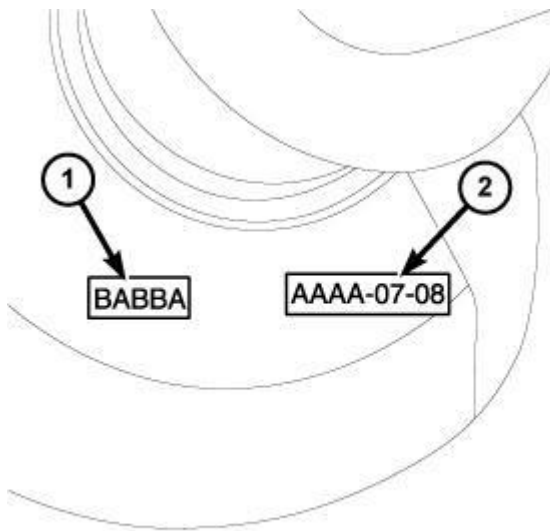


61703

Fig. 137: MAIN BEARING SIZE MARK ON CRANK

Courtesy of CHRYSLER LLC

1. Locate the crankshaft journal letter class (1) stamp on the crankshaft weight.

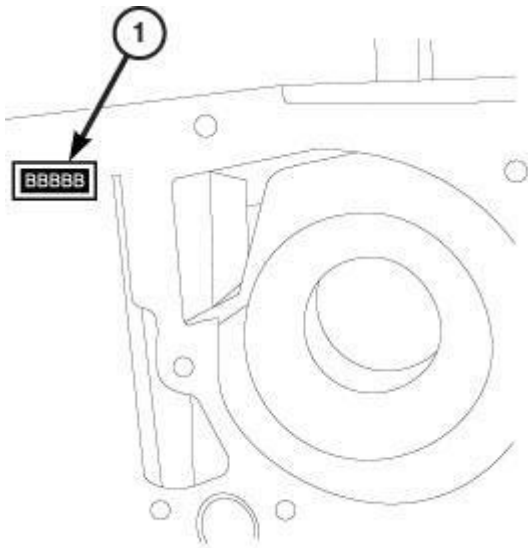


61705

Fig. 138: MAIN BEARING SIZE MARK ON BLOCK

Courtesy of CHRYSLER LLC

2. Locate the engine block crankshaft journal letter class stamp on the engine block (1) besides the water pump seat.

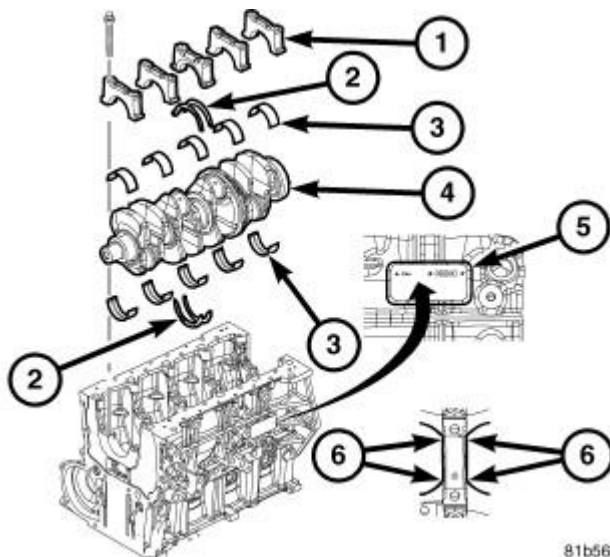

81b56ff7

Fig. 139: CRANKSHAFT BEARING SIZE MARK

Courtesy of CHRYSLER LLC

3. To determine the correct crankshaft journal size, each cylinder block seat diameter letter class must be matched with the crankshaft main journal diameter letter class. Both letter classes stamped on the cylinder

block as well as on the crankshaft weight are in a progressive order starting from the front of the engine. The first letter corresponds to the first cylinder, the second to the second, etc. Use the crankshaft bearing selection chart to determine the half shell color. See **Engine/Engine Block - Standard Procedure**.

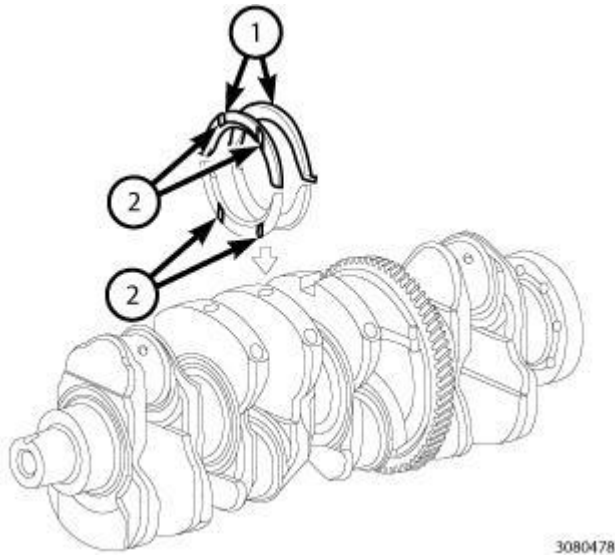


Fig. 140: Thrust Bearings & Oil Discharge Grooves Facing Toward Crankshaft
Courtesy of CHRYSLER LLC

4. When installing the thrust bearings (1) make sure the oil discharge grooves (2) face towards the crankshaft.
5. If the crankshaft was removed to install the bearings, install the crankshaft. See **Engine/Engine Block/CRANKSHAFT - Installation**.
6. Install the balance shaft assembly. See **Engine/Engine Block/MODULE, Balance Shaft - Installation**.

COVER, ENGINE, FRONT

Description

DESCRIPTION

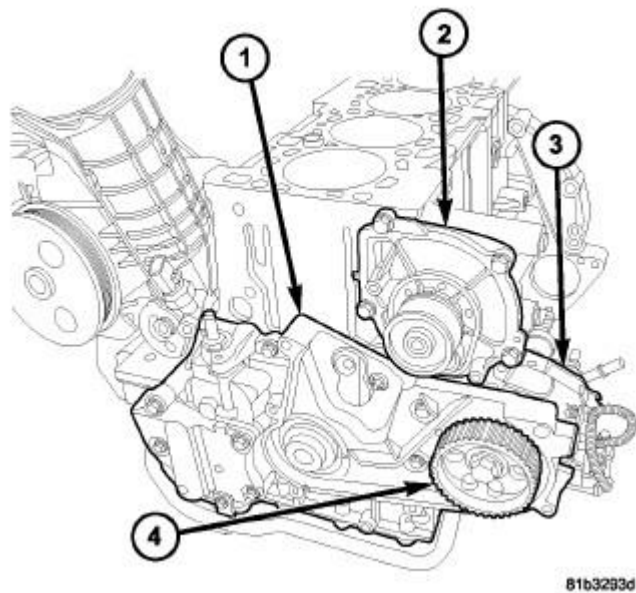


Fig. 141: OIL PUMP COVER ASSEMBLY

Courtesy of CHRYSLER LLC

The oil pump cover assembly on this engine is an aluminum cover that incorporates the oil pump.

Removal

REMOVAL - FRONT ENGINE COVER

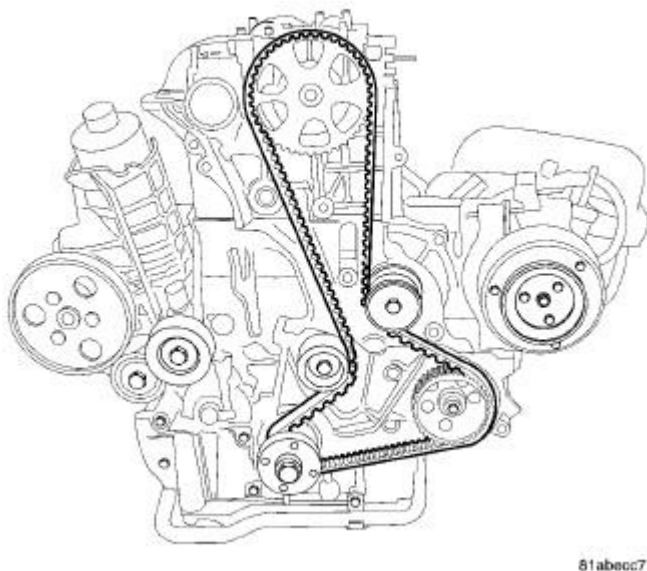
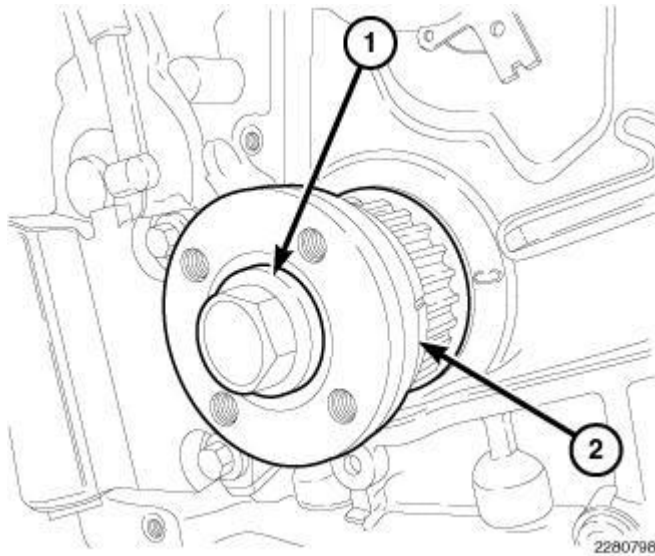


Fig. 142: TIMING BELT

Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Drain the cooling system. Refer to **Cooling - Standard Procedure** .
3. Remove the timing belt. See **Engine/Valve Timing/BELT, Timing - Removal**.

**Fig. 143: Crankshaft Sprocket And Bolt**

Courtesy of CHRYSLER LLC

NOTE: The crankshaft sprocket bolt is a left handed thread.

4. Remove bolt (1), and the crankshaft sprocket (2).

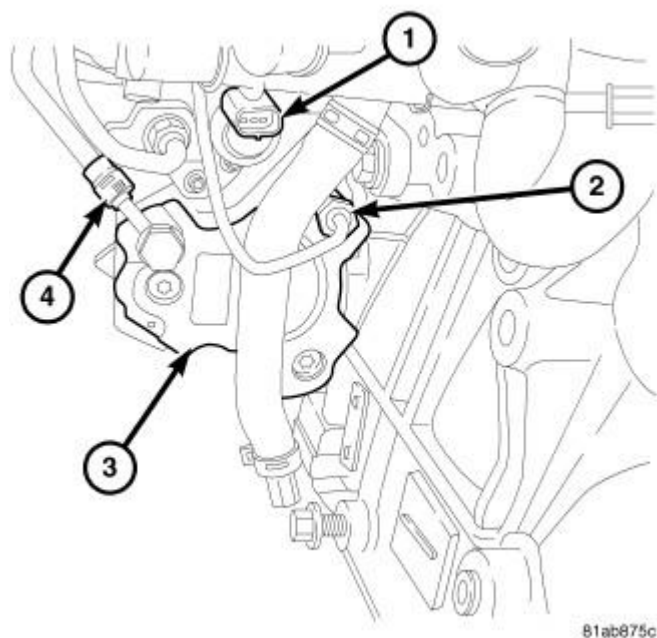


Fig. 144: High Pressure Fuel Line At Pump

Courtesy of CHRYSLER LLC

5. Remove the banjo bolt and the high-pressure fuel line (4) from rear of pump.
6. Remove the high-pressure fuel line (2) from rear of pump.
7. Disconnect fuel quantity solenoid (1) harness connector.

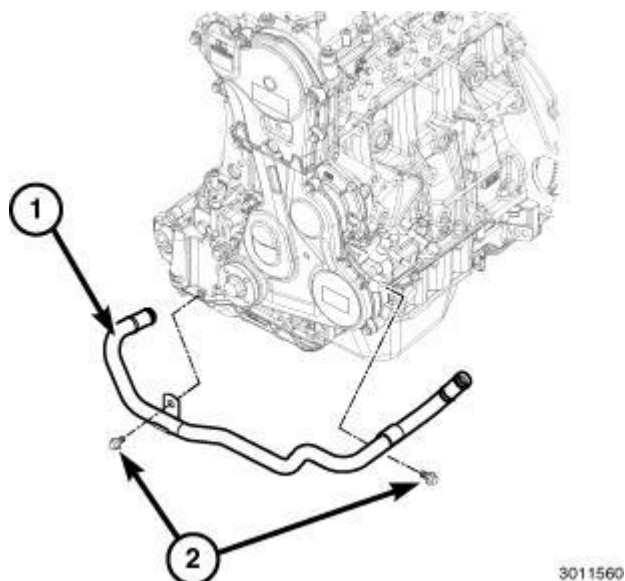


Fig. 145: Coolant Tube & Bolts

Courtesy of CHRYSLER LLC

8. Disconnect the coolant tube hose at oil cooler and by fuel injection pump.
9. Remove bolts (2), and the coolant tube (1).

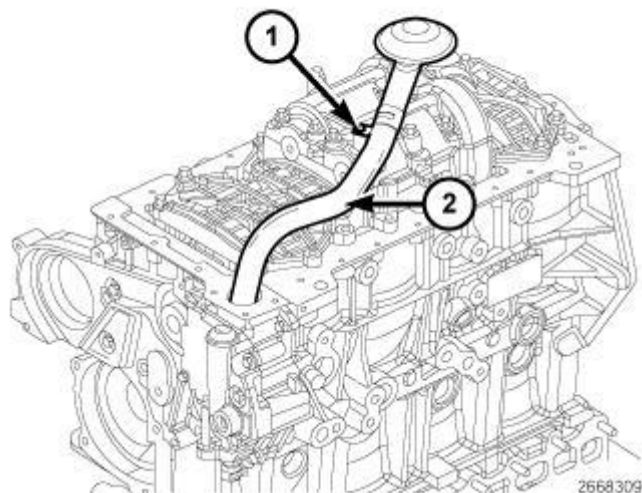


Fig. 146: Oil Pump Pickup Tube & Bolt
 Courtesy of CHRYSLER LLC

10. Remove the oil pump pickup tube. See Engine/Lubrication/PICK-UP, Oil Pump - Removal.

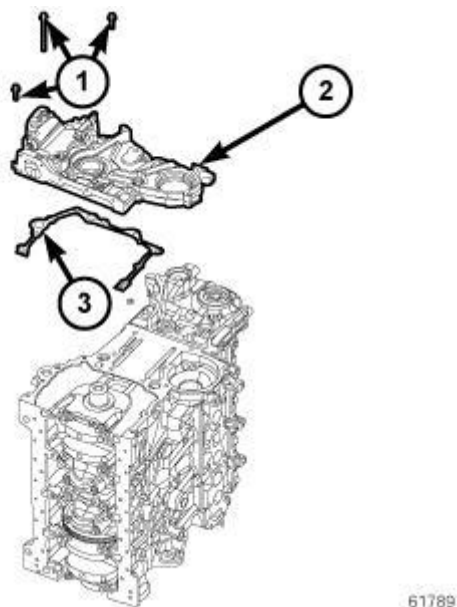


Fig. 147: FRONT COVER AND GASKET
 Courtesy of CHRYSLER LLC

11. Disconnect the vacuum hose at vacuum pump.
12. Remove the eight bolts (1), and the front cover assembly (2).

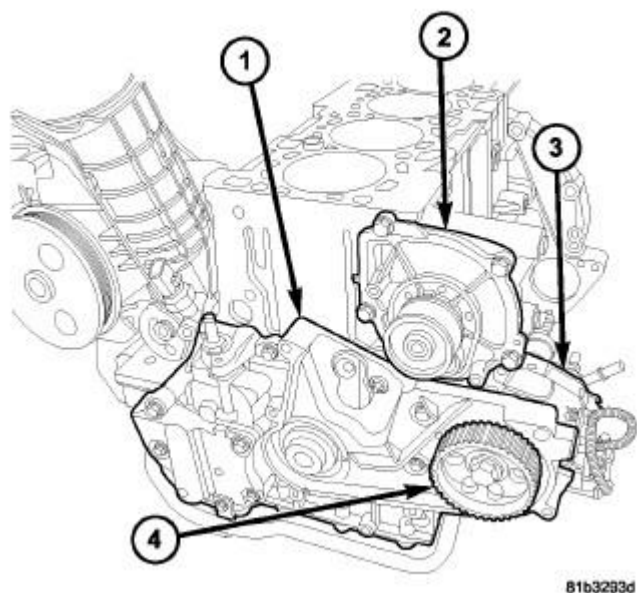


Fig. 148: OIL PUMP COVER ASSEMBLY

Courtesy of CHRYSLER LLC

13. If necessary, using Locking Tool VM.1055 remove the high pressure fuel pump (4) sprocket (4).
14. If necessary, remove nuts and the high pressure fuel pump (3).

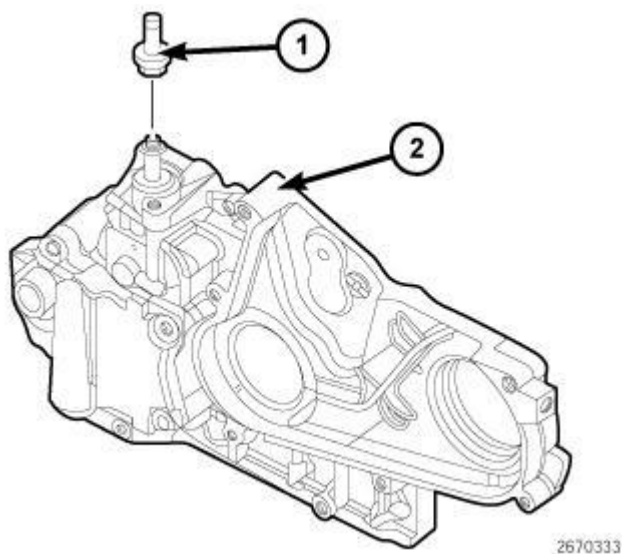


Fig. 149: Front Cover & Vacuum Pump Check Valve

Courtesy of CHRYSLER LLC

15. If necessary, remove the vacuum pump check valve.

Installation

INSTALLATION - FRONT ENGINE COVER

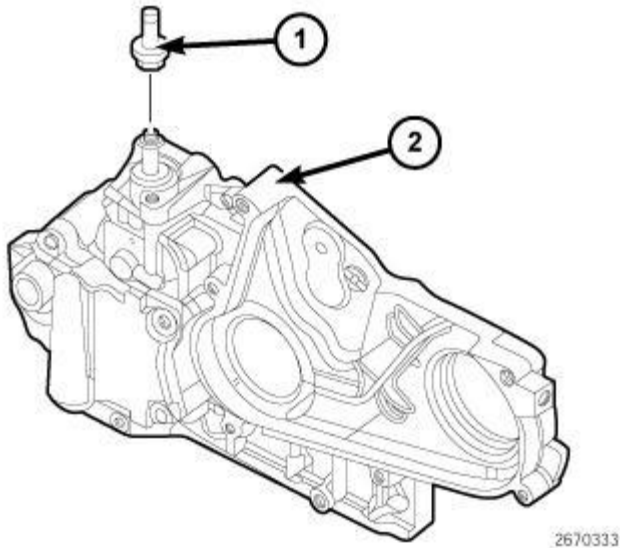


Fig. 150: Front Cover & Vacuum Pump Check Valve
Courtesy of CHRYSLER LLC

1. Clean all gasket mating surfaces.
2. If necessary, install the front crankshaft oil seal. See Engine/Engine Block/SEAL, Crankshaft Oil - Installation.
3. If necessary, transfer the vacuum pump check valve (1) and securely tighten.


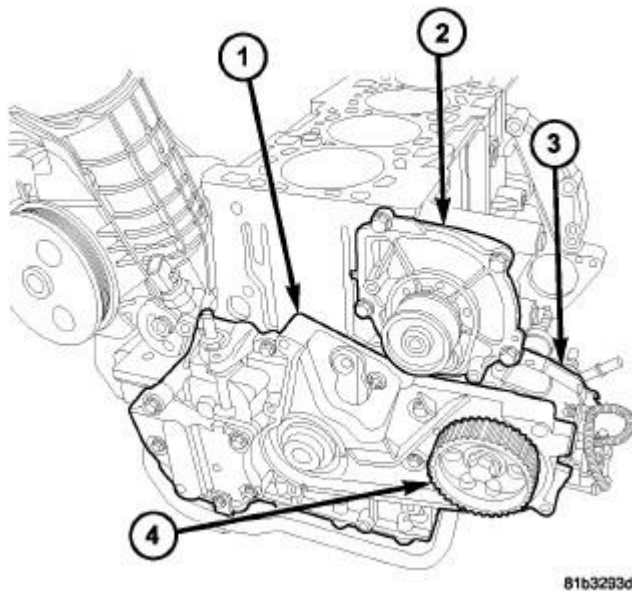


Fig. 151: OIL PUMP COVER ASSEMBLY
Courtesy of CHRYSLER LLC


4. If necessary, install the high pressure fuel pump (3). Tighten nuts to 24 N.m (18 ft. lbs.).
5. If necessary, using Locking Tool VM.1055, install the high pressure fuel pump sprocket (4). Tighten nut to 88 N.m (65 ft. lbs.).

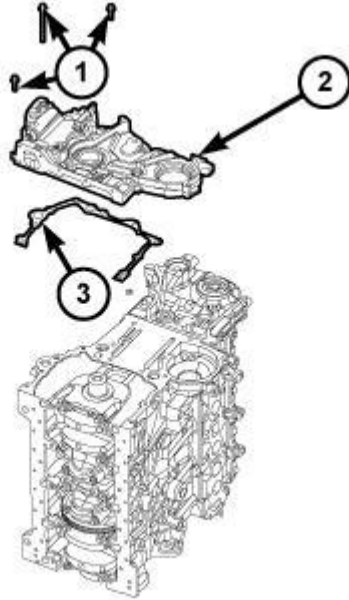

61789

Fig. 152: FRONT COVER AND GASKET
Courtesy of CHRYSLER LLC

6. Install the front cover gasket (3).
7. Install the front cover assembly (2) and tighten the eight bolts (1) finger tight.

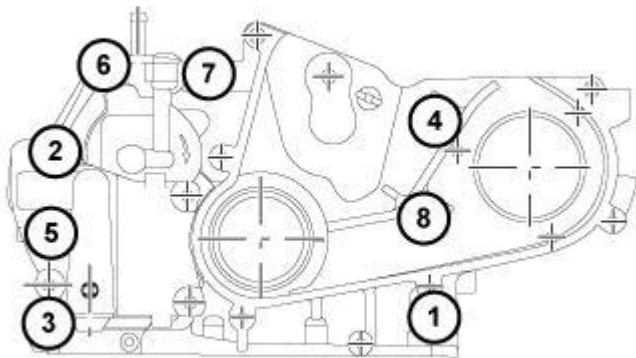

2670240

Fig. 153: Front Cover Assembly Bolt Tightening Sequence
Courtesy of CHRYSLER LLC

8. Using the tightening sequence shown in illustration, tighten bolts to 33 N.m (24 ft. lbs.).

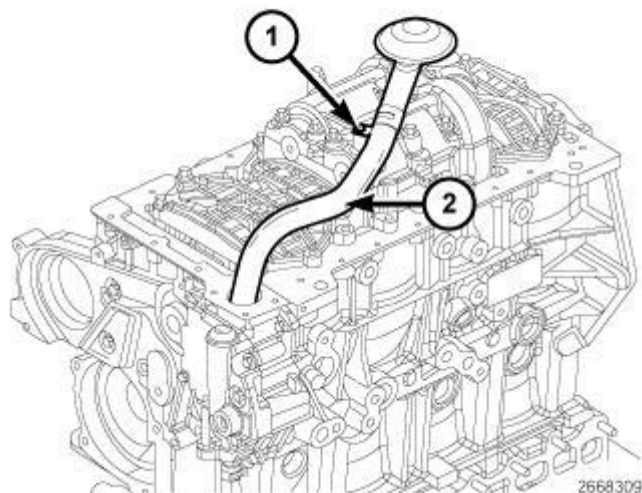


Fig. 154: Oil Pump Pickup Tube & Bolt
 Courtesy of CHRYSLER LLC

9. Install the oil pump pickup tube. See **Engine/Lubrication/PICK-UP, Oil Pump - Installation.**

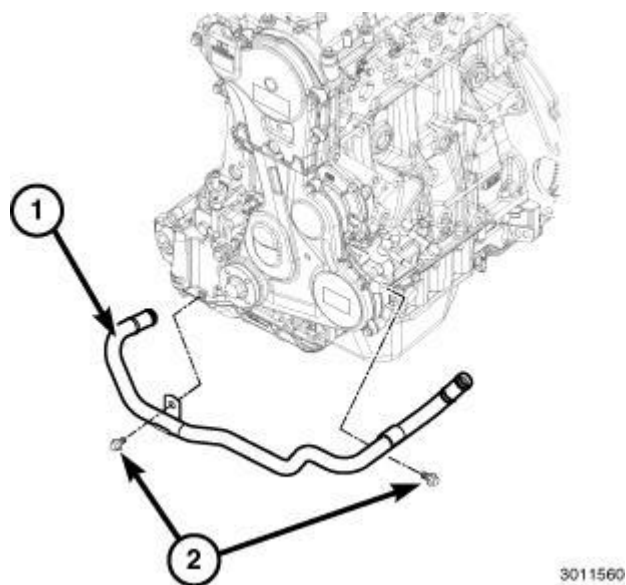


Fig. 155: Coolant Tube & Bolts
 Courtesy of CHRYSLER LLC

10. Install the coolant tube (1). Tighten bolts (2) to 15 N.m (133 in. lbs.).
11. Connect the coolant tube hose at oil cooler and by fuel injection pump.

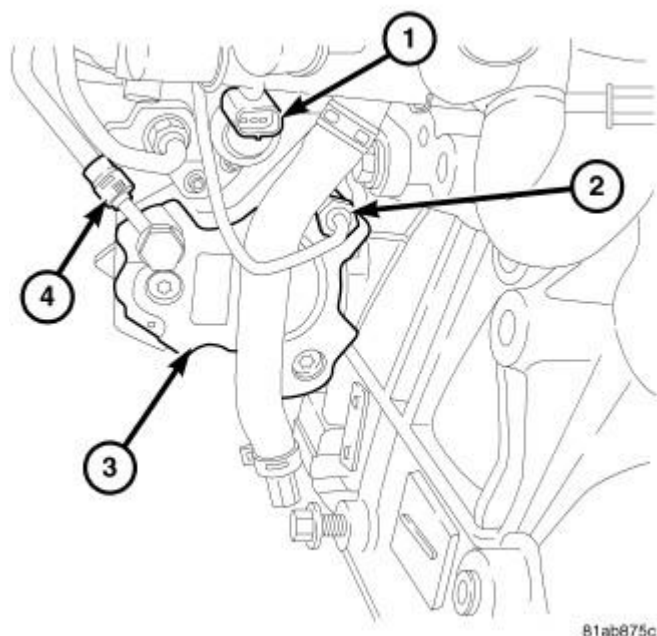


Fig. 156: High Pressure Fuel Line At Pump
Courtesy of CHRYSLER LLC

12. Connect fuel quantity solenoid (1) harness connector.
13. Install high-pressure fuel line (2) at rear of pump. Tighten line nut to 28 N.m (21 ft. lbs.).
14. Using new sealing washers, install high-pressure fuel line (4) at rear of pump. Tighten banjo bolt to 28 N.m (21 ft. lbs.).


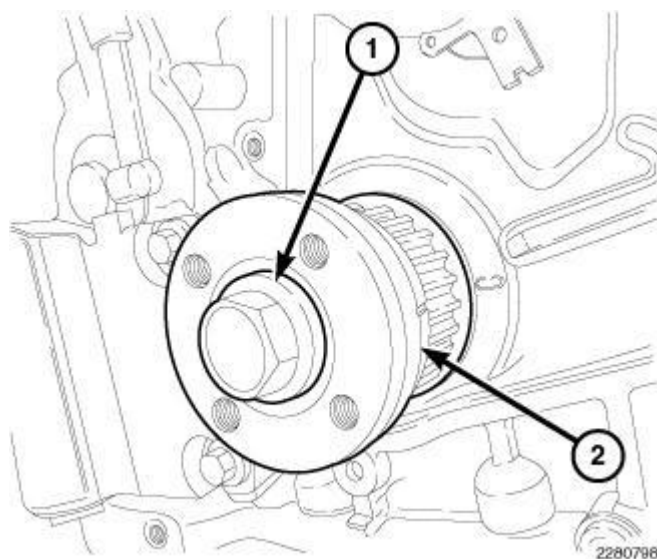


Fig. 157: Crankshaft Sprocket And Bolt
Courtesy of CHRYSLER LLC

NOTE: The crankshaft sprocket bolt is a left handed thread.

15. Install the crankshaft sprocket (2). Tighten bolt to 100 N.m (74 ft. lbs.) plus an additional 120 degrees.

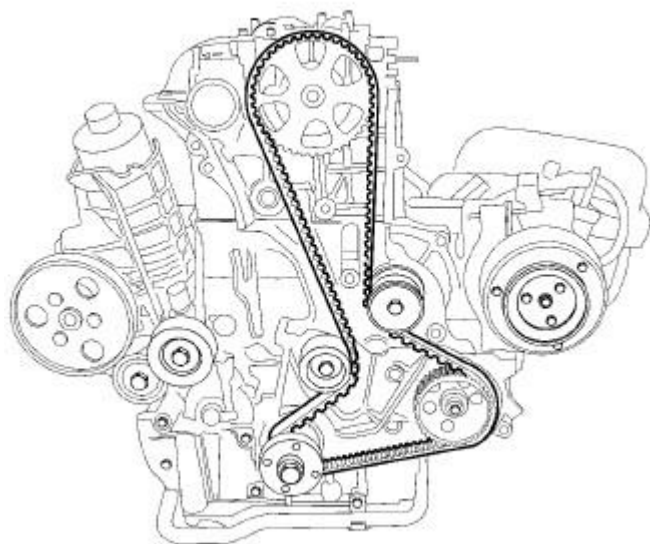

81ab0067


Fig. 158: TIMING BELT
Courtesy of CHRYSLER LLC

16. Install the timing belt. See **Engine/Valve Timing/BELT, Timing - Installation**.
17. Fill the cooling system. Refer to **Cooling - Standard Procedure**.
18. Connect the negative battery cable.

CRANKSHAFT

Description

DESCRIPTION

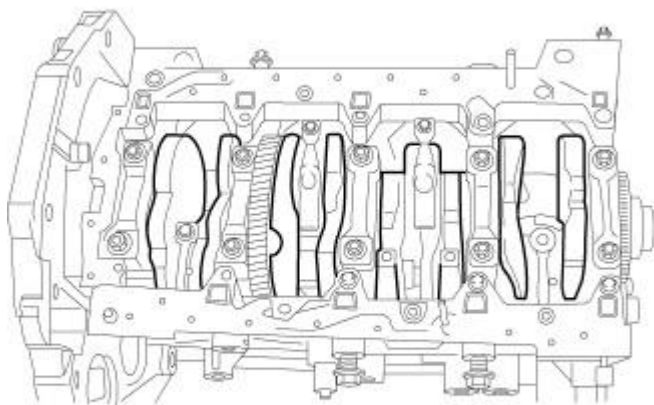


81ab8609

Fig. 159: CRANKSHAFT
Courtesy of CHRYSLER LLC

The crankshaft for the 2.8L is a forged steel type design with five main bearing journals. The crankshaft is located at the bottom of the engine block.

Standard Procedure

CHECKING CRANKSHAFT END PLAY

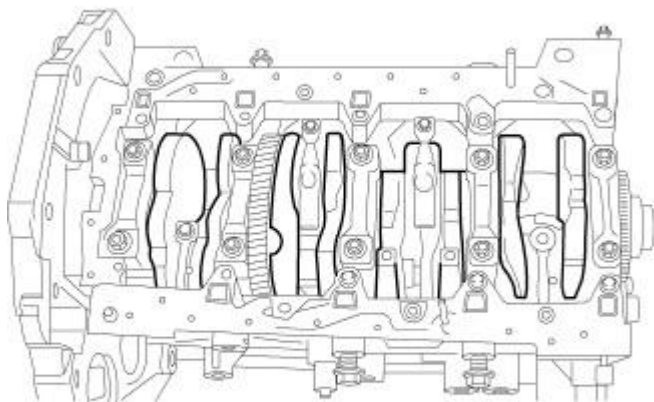


81ab8609

Fig. 160: CRANKSHAFT

Courtesy of CHRYSLER LLC

1. Mount a dial indicator to a stationary point at rear of engine. Locate the probe perpendicular against the flywheel.
2. Move the crankshaft all the way to the front of its travel.
3. Zero the dial indicator.
4. Move the crankshaft all the way to the rear and read dial indicator. For crankshaft end play clearances, see **Engine - Specifications**.

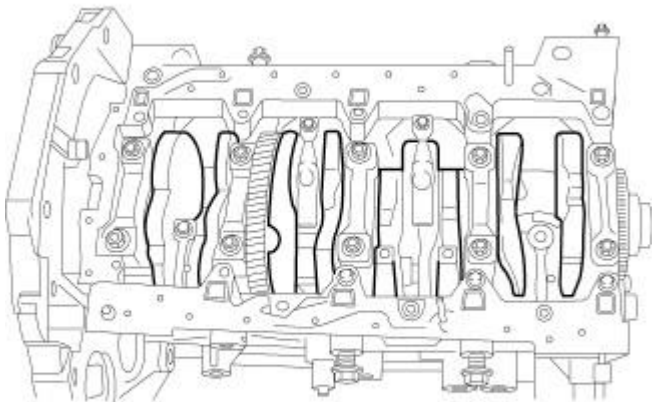Removal**REMOVAL**


81ab8609

Fig. 161: CRANKSHAFT**Courtesy of CHRYSLER LLC**

1. Remove the lower oil pan. See **Engine/Lubrication/PAN, Oil - Removal**.
2. Remove the upper oil pan. See **Engine/Lubrication/PAN, Oil - Removal**.
3. Remove the balance shaft assembly. See **Engine/Engine Block/MODULE, Balance Shaft - Removal**.
4. Remove the rear crankshaft oil seal carrier. See **Engine/Engine Block/SEAL, Crankshaft Oil - Removal**.
5. Remove the front cover and front crank oil seal. See **Engine/Engine Block/COVER, Engine - Removal**.
6. Remove the bearing caps from the piston rods.
7. Remove the bearing caps from the crankshaft journals.
8. Remove the crankshaft.

Installation

INSTALLATION

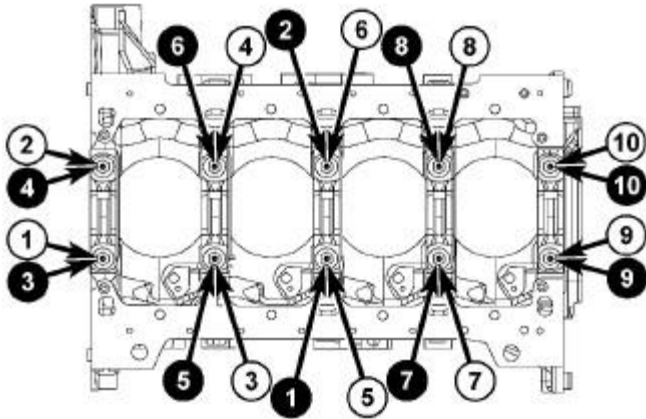

8199b73e

Fig. 162: Crankshaft Bolt Tightening Sequence
Courtesy of CHRYSLER LLC

1. Use the crankshaft bearing selection chart for main bearing selection. Refer to **Engine/Engine Block - Standard Procedure**.
2. Lubricate and install the crankshaft bearings. Make sure the thrust washer is not touching the engine block.
3. Install the crankshaft.

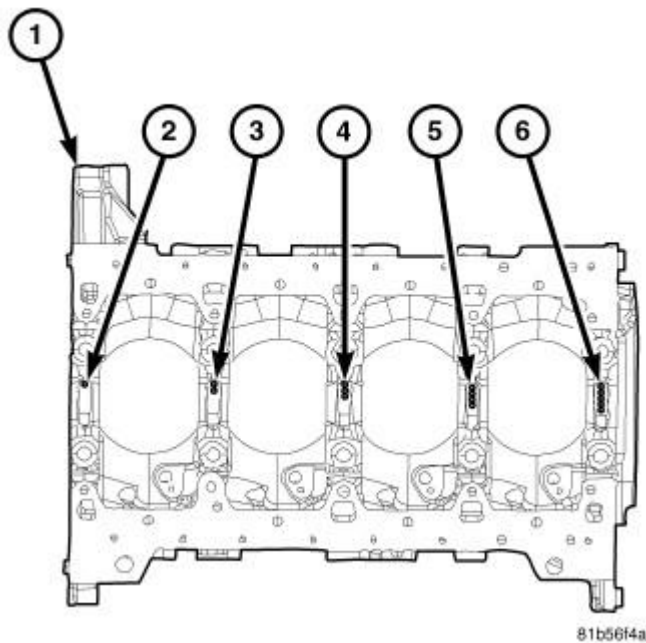


Fig. 163: CRANKSHAFT CAP LOCATION MARKS

Courtesy of CHRYSLER LLC

4. Using new bolts, install the main bearing caps in the same location as they were removed. The notches on the top of the bearing caps indicate their proper position. The front cap has one notch, the next cap two, etc.
5. Using the black number bubbles in the torque pattern, tighten the crankshaft bolts to 50 N.m (36 ft. lbs.).
6. Using the white number bubbles in the torque pattern, Turn the bolts an additional 90°.
7. Measure the crankshaft end play. Crankshaft end play must be between 0.1 mm and 0.33 mm (0.004 in. - 0.13 in.).
8. Install the connecting rod bearings.
9. Install the connecting rods. See Engine/Engine Block/ROD, Piston and Connecting - Installation.
10. Install the balance shaft assembly. See Engine/Engine Block/MODULE, Balance Shaft - Installation.
11. Install the upper oil pan. See Engine/Lubrication/PAN, Oil - Installation.
12. Install the lower oil pan. See Engine/Lubrication/PAN, Oil - Installation.
13. Install the front main seal carrier. See Engine/Engine Block/SEAL, Crankshaft Oil - Installation.
14. Install the rear main seal carrier. See Engine/Engine Block/SEAL, Crankshaft Oil - Installation.

DAMPER, VIBRATION

Removal

REMOVAL

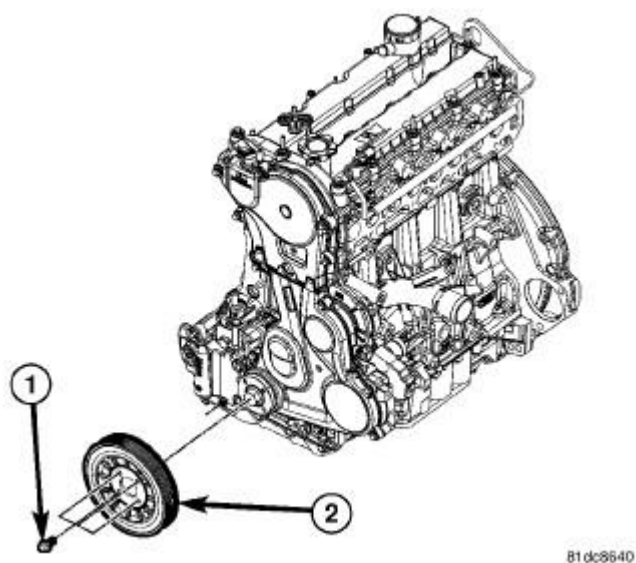


Fig. 164: Crankshaft Damper
Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Remove the accessory drive belt. Refer to Cooling/Accessory Drive/BELT, Serpentine - Removal.
3. Remove the bolts (1) and the vibration damper (2).

Installation

INSTALLATION

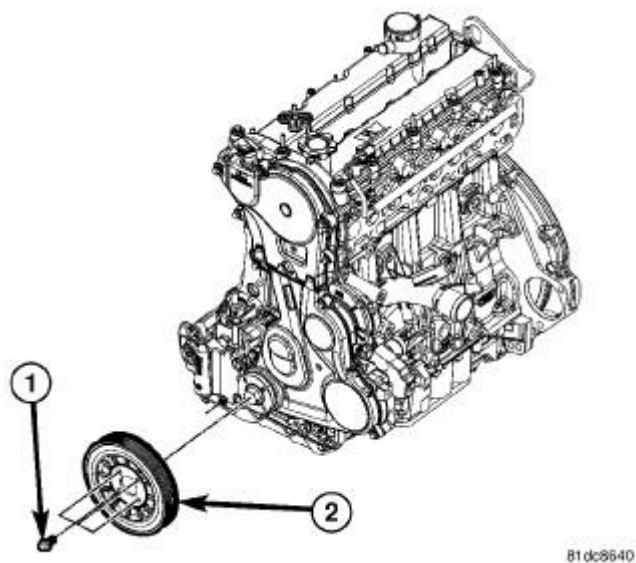



Fig. 165: Crankshaft Damper
Courtesy of CHRYSLER LLC

1. Install the vibration damper (2) and retaining bolts (1). Tighten the bolts to 32 N.m (24 ft. lbs.).
2. Install the accessory drive belt. Refer to **Cooling/Accessory Drive/BELT, Serpentine - Installation** .
3. Reconnect the negative battery cable.

FLEXPLATE

Removal

REMOVAL

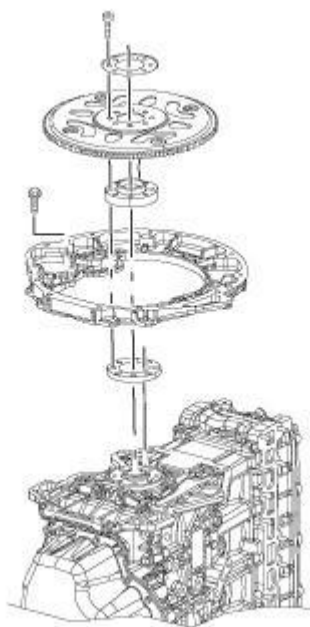

61731

Fig. 166: FLYWHEEL AND FLEX PLATE

Courtesy of CHRYSLER LLC

1. Remove the transmission.
2. Paint mark the flex plate hub to flex plate relation.
3. Remove the 40 mm flex plate bolts (1) and flex plate (2).

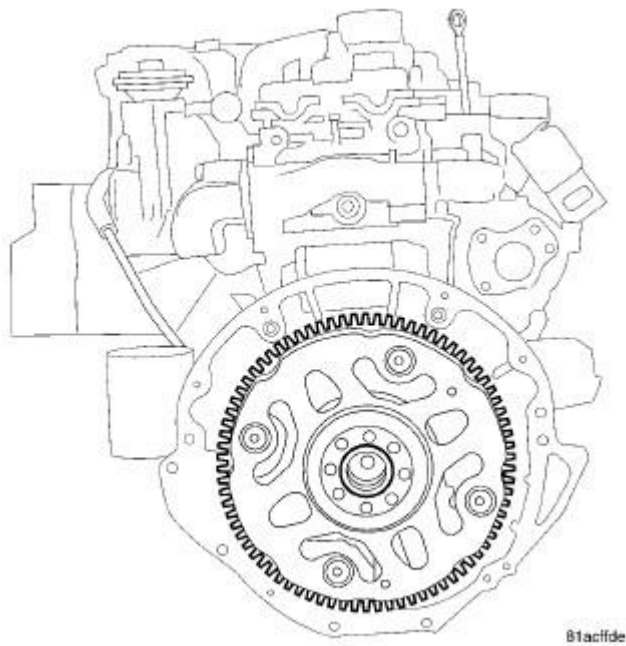


Fig. 167: FLEX PLATE - INSTALLED
Courtesy of CHRYSLER LLC

4. Inspect flex plate (2) for damage.

Installation

INSTALLATION

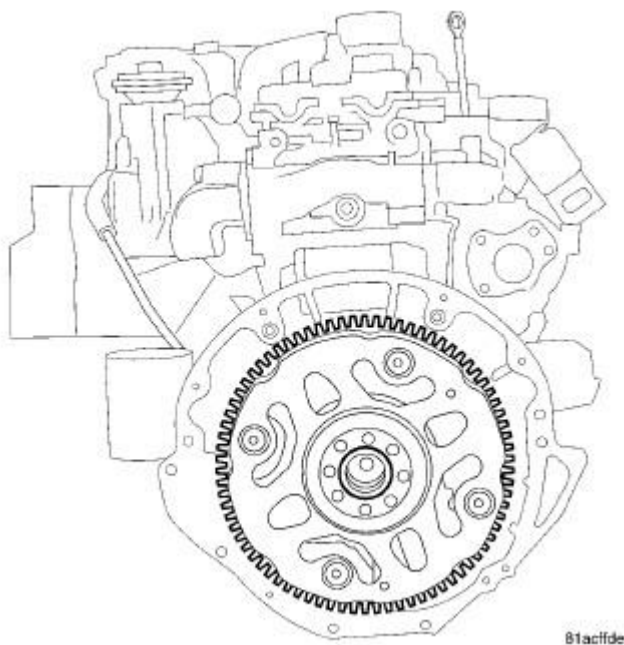



Fig. 168: FLEX PLATE - INSTALLED

Courtesy of CHRYSLER LLC

NOTE: Always use new flex plate or flywheel bolts.

1. Install the flex plate/flywheel hub and hand tighten the fasteners.

NOTE: Do not lubricate new bolts as they are already coated with an anti-scuff treatment.
Align the flex plate to hub paint marks, where applicable.

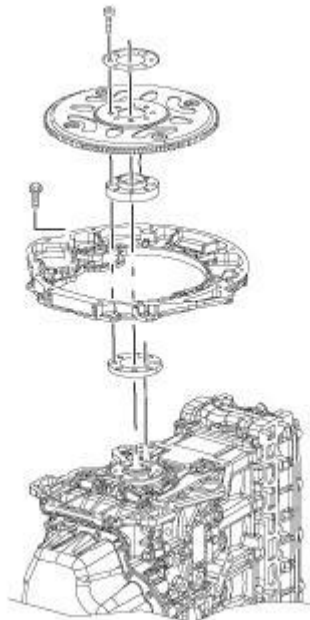

61731

Fig. 169: FLYWHEEL AND FLEX PLATE

Courtesy of CHRYSLER LLC


2. Install the flex plate or flywheel bolts. Use a cross pattern to torque the bolts to 50 N.m (37 ft. lbs.).
3. Using a torque wrench fitted with a Torque Angle Gauge, (Goniometer), loosen one flex plate/flywheel bolt at a time and tighten to 25 N.m (19 ft. lbs.) plus angle in relation to bolt length.

Bolt Length	Torque Angle
40 mm	60°
50 mm	75°
60 mm	90°

4. Install the transmission.

MODULE, BALANCE SHAFT

Description

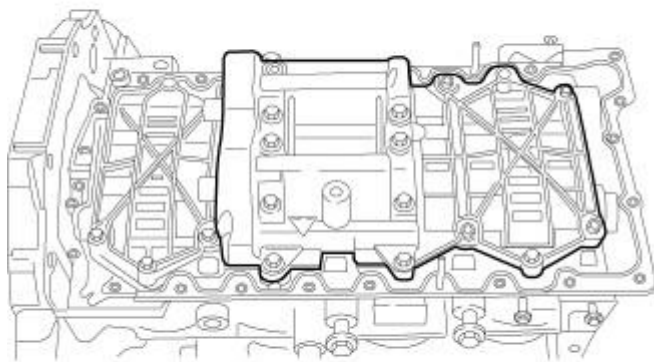DESCRIPTION

81ab8223

Fig. 170: Balance Shaft Module
Courtesy of CHRYSLER LLC

The balance shaft is gear-driven and is used to counteract engine vibration and roughness. The balance shaft assembly includes balancers on two shafts. It is only serviced as an assembly. Balance shafts must be timed to the crankshaft.

Removal**REMOVAL**

1. Disconnect the negative battery cable.
2. Lock the engine 90 degrees ATDC. See [Engine/Valve Timing - Standard Procedure](#).
3. Remove the oil pump pick-up tube. See [Engine/Lubrication/PICK-UP, Oil Pump - Removal](#).

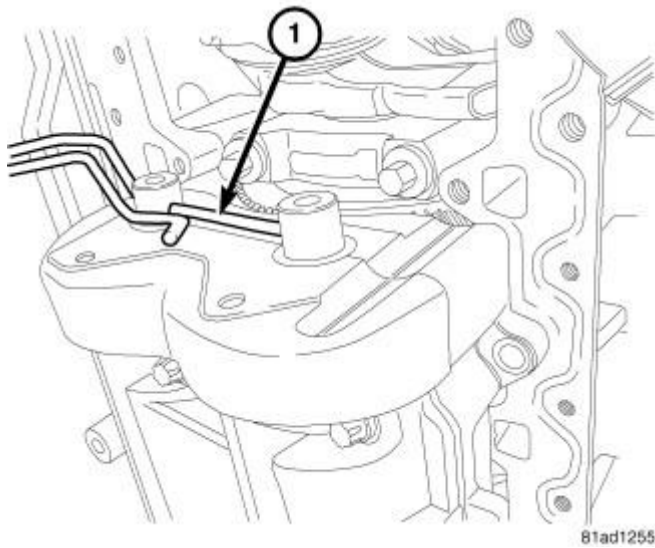


Fig. 171: BALANCE SHAFT TIMING TOOL
Courtesy of CHRYSLER LLC

4. Place a dowel rod (1) through the holes in the balance shaft axles to keep the balance shafts in the correct position for reassembly.

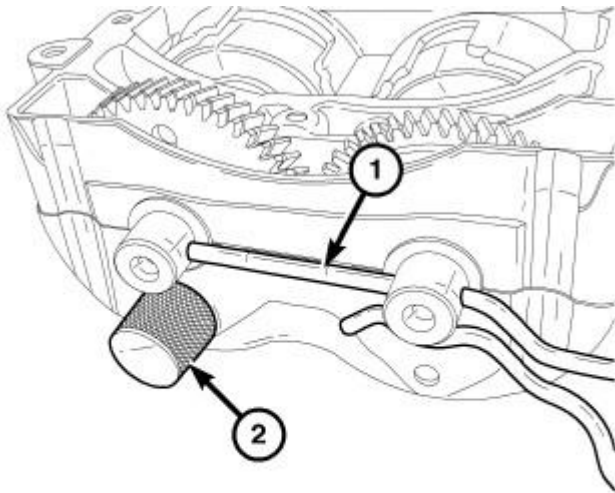



Fig. 172: BALANCE SHAFT TOOL INSTALLED
Courtesy of CHRYSLER LLC

WARNING: The balance shaft pin must be installed before the balance shaft assembly is removed from the engine. The balance shaft pin must always remain in the balance shaft assembly while the assembly is removed from the engine. Do not remove the balance shaft pin until

the balance shaft assembly is completely installed on the engine.

NOTE: The crankshaft must be positioned at 90° after TDC in order to install the Balance Shaft Locking Pin VM.10012 (2).

5. Insert the Balance Shaft Locking Pin VM.10012 (2) into the balance shaft assembly to lock the split gears together.

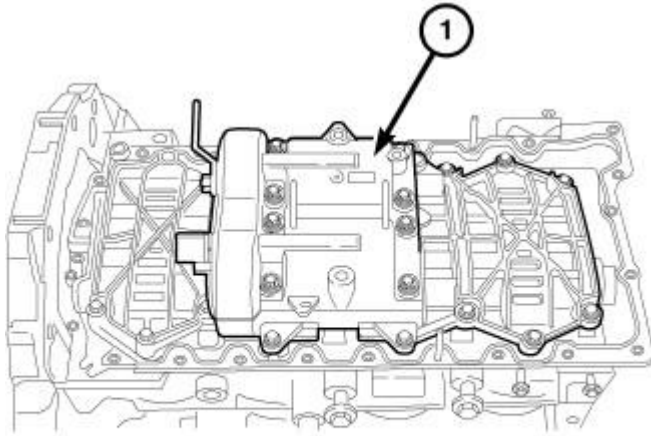


81de47f4

Fig. 173: Balance Shaft Housing
Courtesy of CHRYSLER LLC

6. Remove bolts and the balance shaft housing (1).

Installation

INSTALLATION

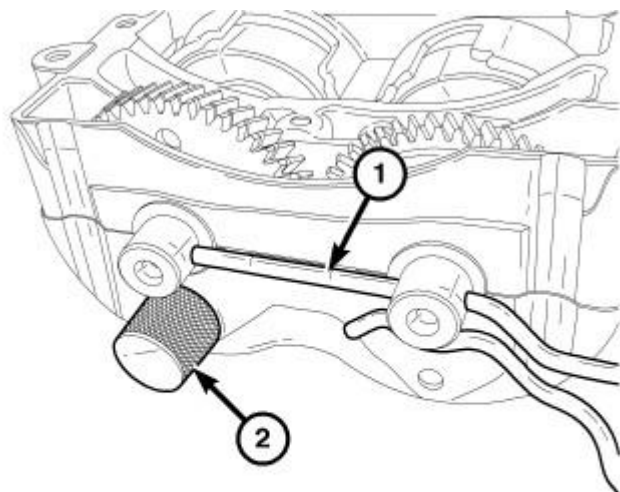


81ce8d7c

Fig. 174: BALANCE SHAFT TOOL INSTALLED

Courtesy of CHRYSLER LLC

1. The balance shafts must remain aligned by the alignment dowel rod (1) and the Balance Shaft Locking Pin VM.10012 (2) must remain in the balance shaft assembly until the assembly is completely installed to the engine.

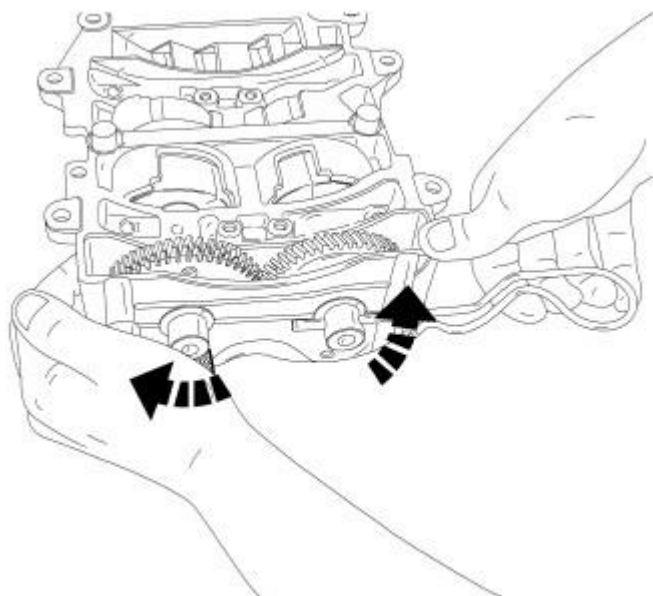


81ce8d81

Fig. 175: BALANCE SHAFT TOOL INSTALLATION

Courtesy of CHRYSLER LLC

2. The balance shaft pin should never be removed from the balance shaft assembly when the balance shaft


assembly is not installed in the engine. If the balance shaft was removed from the vehicle without the pin, or the pin was removed, use the dowel to load the spring while pressing the tool into place as shown in illustration.

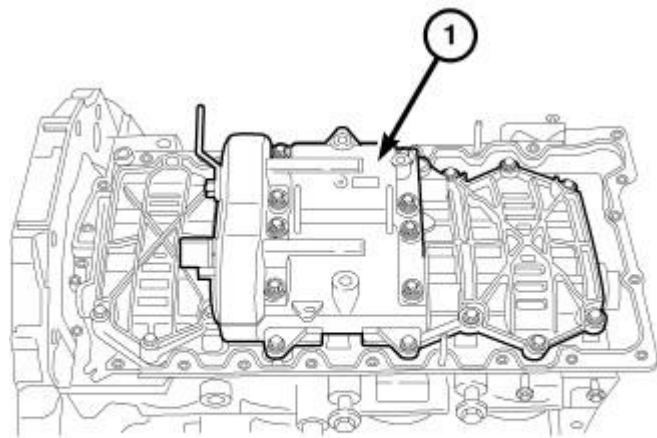

81de47f4

Fig. 176: Balance Shaft Housing
Courtesy of CHRYSLER LLC


3. Install the balance shaft housing (1) to the engine and tighten bolts finger tight.

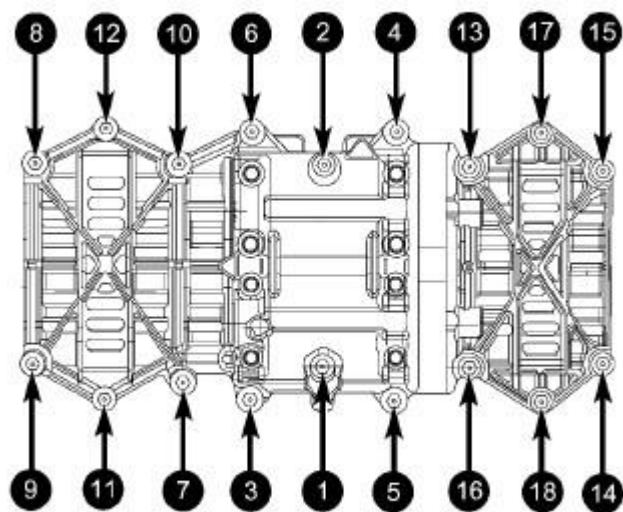

8199b736

Fig. 177: BALANCE SHAFT HOUSING TORQUE SEQUENCE
Courtesy of CHRYSLER LLC


4. Using the sequence shown in illustration, tighten balance shaft bolts to 33 N.m (24 ft. lbs.).

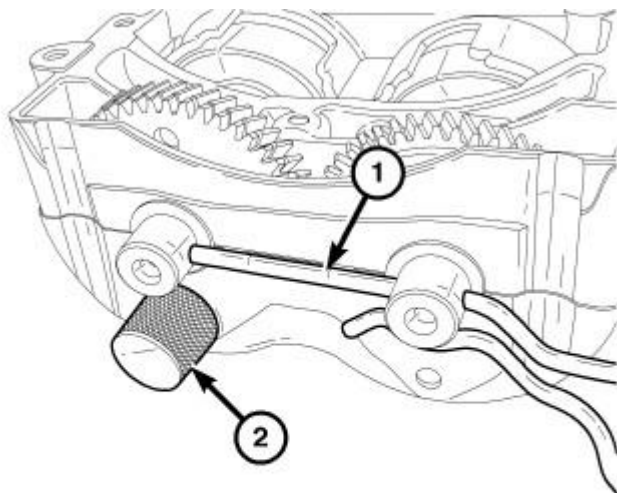

81ce8d7c

Fig. 178: BALANCE SHAFT TOOL INSTALLED
Courtesy of CHRYSLER LLC

5. Remove Balance Shaft Locking Pin VM.10012 (2).
6. Remove the balance shaft assembly dowel rod (1).

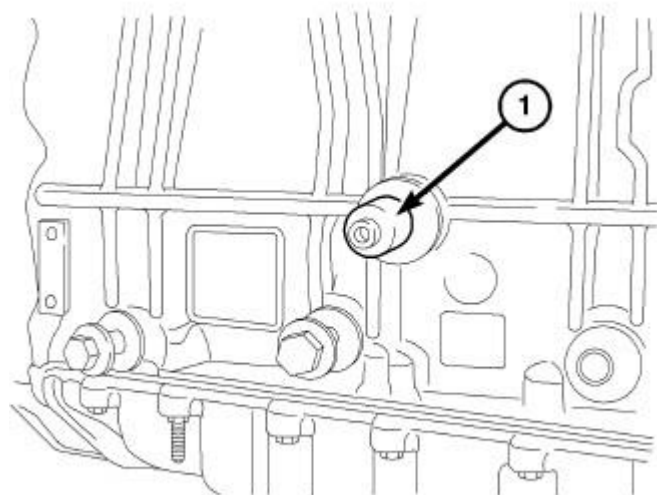

81dba87d

Fig. 179: Crankshaft Locking Tool
Courtesy of CHRYSLER LLC

7. Remove the Crankshaft Locking Tool VM.9992 (1).

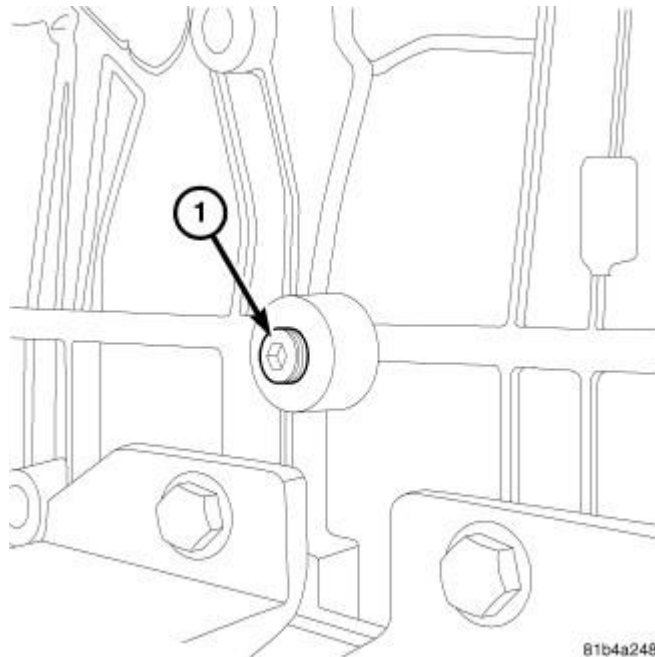


Fig. 180: CRANKSHAFT LOCK PLUG LOCATION

Courtesy of CHRYSLER LLC

8. Install the engine block plug (1). Tighten the engine block plug to 30 N.m (22 ft. lbs.).
9. Install the upper and lower timing cover. See **Engine/Valve Timing/COVER(S), Engine Timing - Installation.**
10. Install the oil pump pickup tube. See **Engine/Lubrication/PICK-UP, Oil Pump - Installation.**
11. Fill the engine oil.
12. Connect the negative battery cable.

PLATE, TRANSMISSION ADAPTER

Description

DESCRIPTION

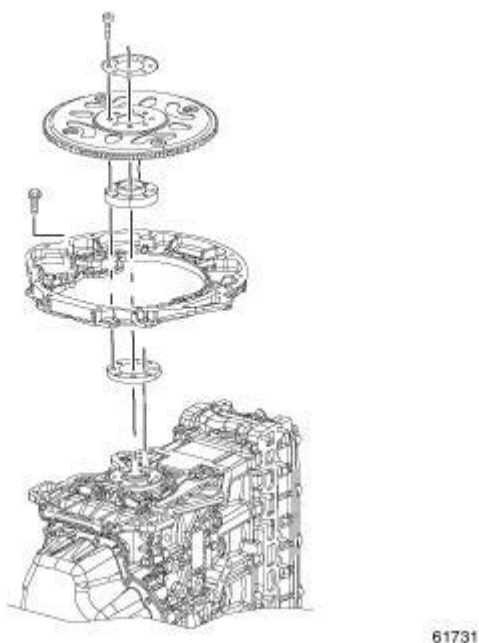


Fig. 181: FLYWHEEL AND FLEX PLATE

Courtesy of CHRYSLER LLC

The transmission plate adapter is the component that allows the transmission to be bolted to the engine.

Removal

REMOVAL

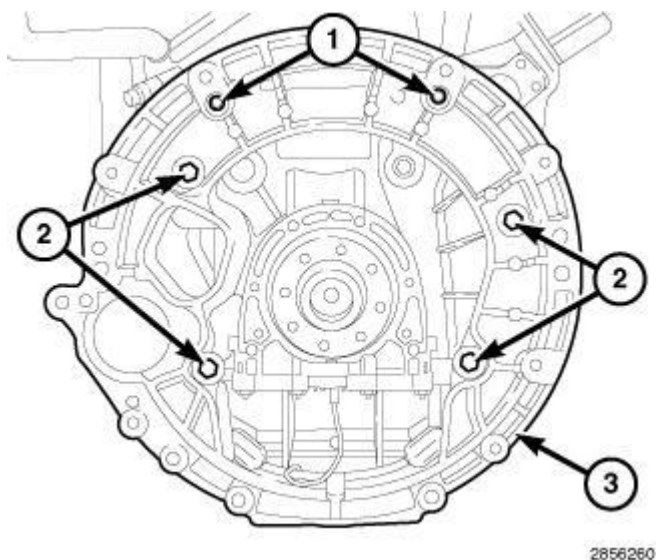


Fig. 182: Transmission Adapter Plate & Bolts

Courtesy of CHRYSLER LLC

1. Remove the flex plate. See **Engine/Engine Block/FLEXPLATE - Removal**.
2. On manual transmission models, remove the flywheel. Refer to **Clutch/FLYWHEEL - Removal**.

NOTE: Do not use any magnetic tools near the crankshaft sensor tone ring.

3. Remove bolts (1 and 2) and the transmission adapter plate (3).

Installation

INSTALLATION

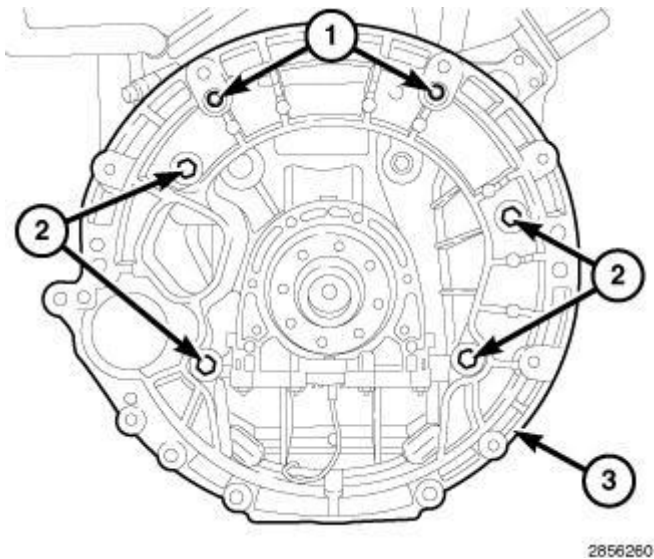


Fig. 183: Transmission Adapter Plate & Bolts
Courtesy of CHRYSLER LLC

NOTE: Do not use any magnetic tools near the crankshaft tone ring.

1. Install the transmission adapter plate (3). Tighten bolts (1 and 2) finger tight.
 - Tighten bolts (2) to 69 N.m (51 ft. lbs.).
 - Tighten bolts (1) to 79 N.m (58 ft. lbs.).
2. On manual transmission models, install the flywheel. Refer to Clutch/FLYWHEEL - Installation.
3. Install the flex plate. See Engine/Engine Block/FLEXPLATE - Installation.

PUMP, INTERNAL VACUUM

Description

DESCRIPTION

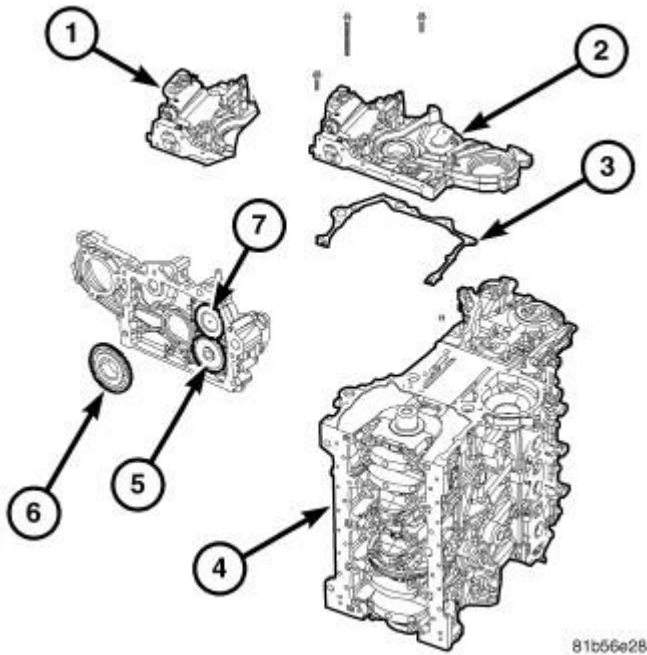


Fig. 184: VACUUM PUMP AND OIL PUMP

Courtesy of CHRYSLER LLC

The diesel engine uses an internal vacuum pump (7). This vacuum pump (7) is mounted in the engine front cover (2). The vacuum pump is driven by a sprocket (6) on the crankshaft.

Diagnosis and Testing

VACUUM PUMP

1. Connect a vacuum gauge to the booster check valve with a short length of hose and T-fitting.
2. Start the engine allowing the engine to run for 30 seconds. Vacuum should be 18 inches HG (609 millibars). Verify the vacuum line is not leaking. If no leak is present, replace vacuum pump. See Engine/Engine Block/PUMP, Internal Vacuum - Removal.

Removal

REMOVAL

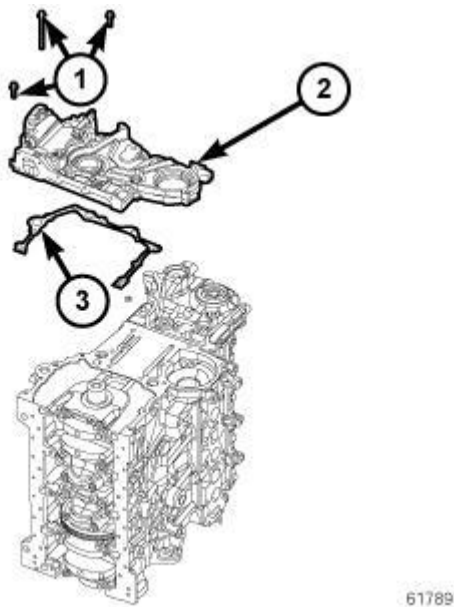


Fig. 185: FRONT COVER AND GASKET

Courtesy of CHRYSLER LLC

NOTE: The vacuum pump is not a serviceable item as it is part of the front cover. If diagnosis has directed you to replace the vacuum pump, then the front cover needs to be replaced.

1. Remove the front cover. See Engine/Engine Block/COVER, Engine - Removal.

Installation

INSTALLATION

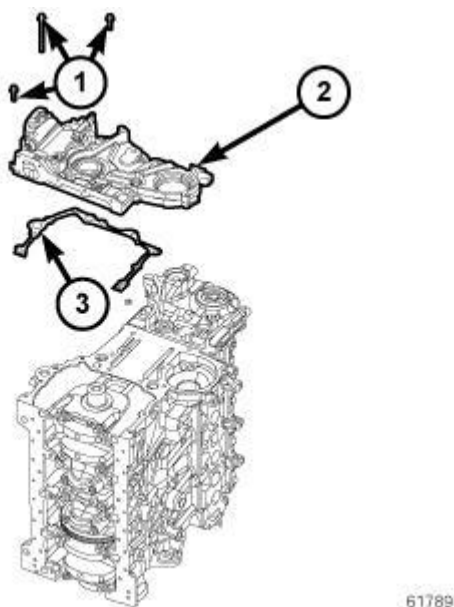
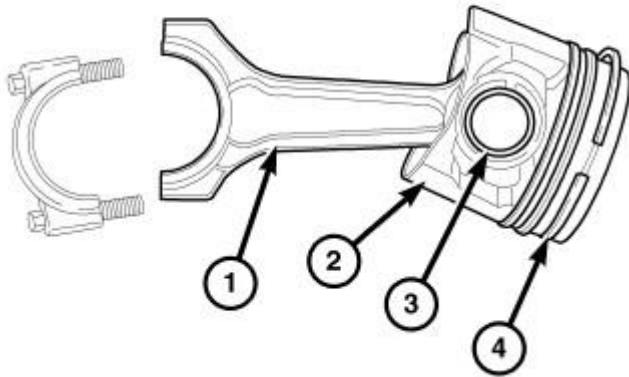


Fig. 186: FRONT COVER AND GASKET

Courtesy of CHRYSLER LLC

1. Install the front cover. See **Engine/Engine Block/COVER, Engine - Installation**.

ROD, PISTON AND CONNECTING**Description****DESCRIPTION**


81abebb4

Fig. 187: PISTON AND CONNECTING ROD

Courtesy of CHRYSLER LLC

The pistons (2) are of a free floating design. Oil jets in the engine block lubricate and cool the piston and piston pin (3) assembly. The connecting rods (1) have a pressed in place wrist pin bushing which is lubricated by the oil jets. Connecting rod (7) and bearing caps have cracked mating surfaces and are not interchangeable.

Standard Procedure**STANDARD PROCEDURE**

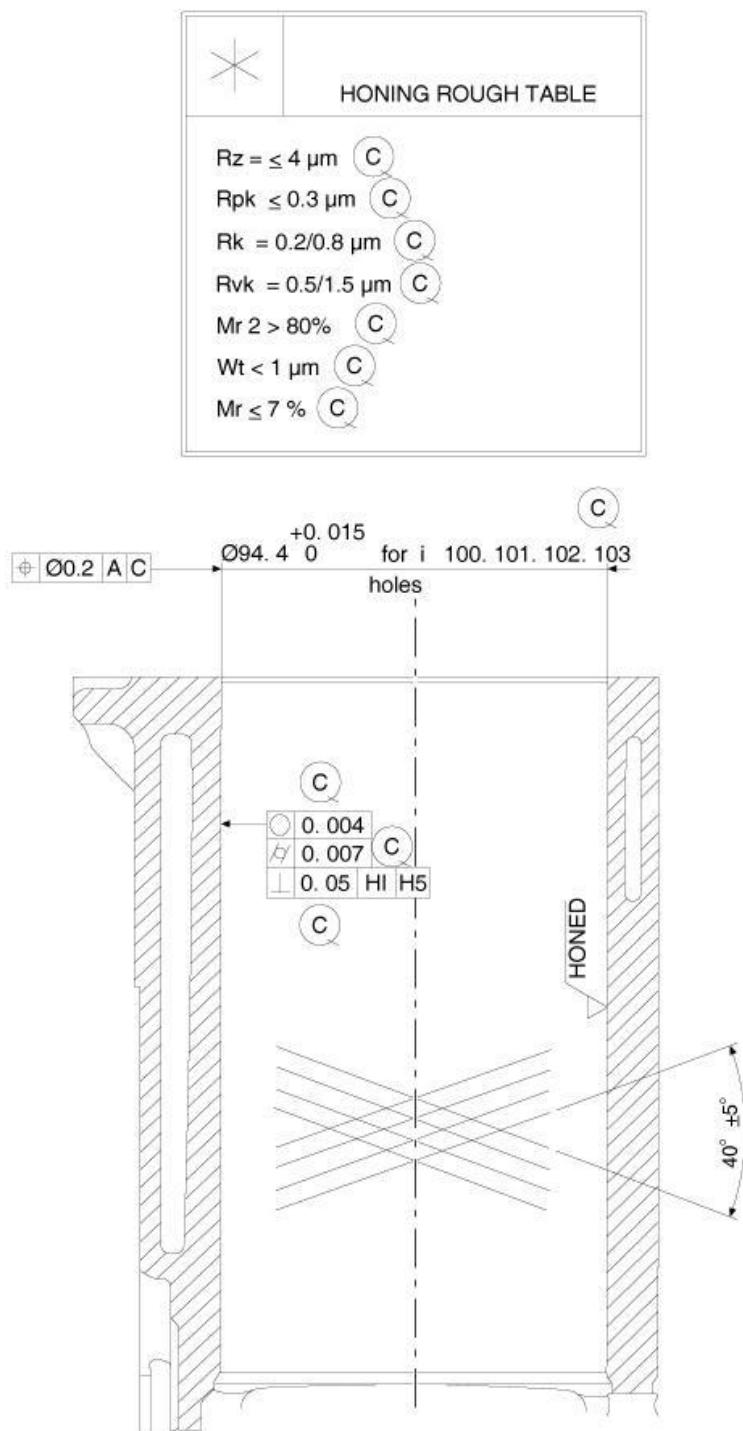

2109187

Fig. 188: Honing Rough Table
Courtesy of CHRYSLER LLC

Removal

REMOVAL

NOTE: Both the connecting rod and the connecting rod cap are paint marked to aid during assembly. Paint marks disappear after time. If the rod and the cap are not marked with paint, paint mark or scribe them before disassembly.

1. Disconnect negative battery cable.
2. Remove cylinder head. See Engine/Cylinder Head - Removal.
3. Raise vehicle on hoist.
4. Remove the lower oil pan. See Engine/Lubrication/PAN, Oil - Removal.
5. Remove upper oil pan. See Engine/Lubrication/PAN, Oil - Removal.
6. Remove the oil jets. See Engine/Lubrication/JET, Piston Oil Cooler - Removal.
7. Remove balance shaft assembly. See Engine/Engine Block/MODULE, Balance Shaft - Removal.
8. Remove top ridge of cylinder bores with a ridge reamer before removing pistons from cylinder block. **Be sure to keep top of pistons covered during this operation.**
9. Piston and connecting rods must be removed from top of cylinder block. Rotate crankshaft so that each connecting rod is centered in cylinder bore.

NOTE: Be careful not to nick or scratch crankshaft journals

10. After removal, install bearing cap on the mating rod and mark pistons with matching cylinder number when removed from engine block.

PISTON PIN - REMOVAL

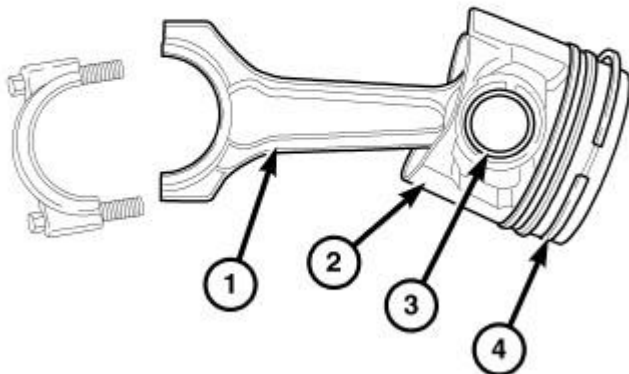


Fig. 189: PISTON AND CONNECTING ROD
Courtesy of CHRYSLER LLC

1. Secure connecting rods (1) in a soft jawed vice.

2. Remove 2 snap rings securing piston pin (3).
3. Push piston pin (3) out of piston (2) and connecting rod (1).

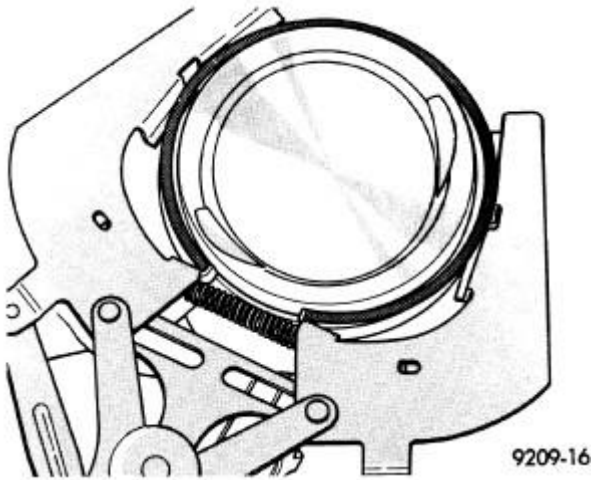
PISTON RING - REMOVAL

Fig. 190: PISTON RINGS - REMOVAL/INSTALLATION
Courtesy of CHRYSLER LLC

1. ID mark on face of top and second piston rings must point toward piston crown.
2. Using a suitable ring expander, remove top and second piston rings.
3. Remove upper oil ring side rail, lower oil ring side rail and then the oil expander from piston.
4. Carefully clean carbon from piston crowns, skirts and ring grooves ensuring the 4 oil holes in the oil control ring groove are clear.

Inspection**INSPECTION****PISTONS**


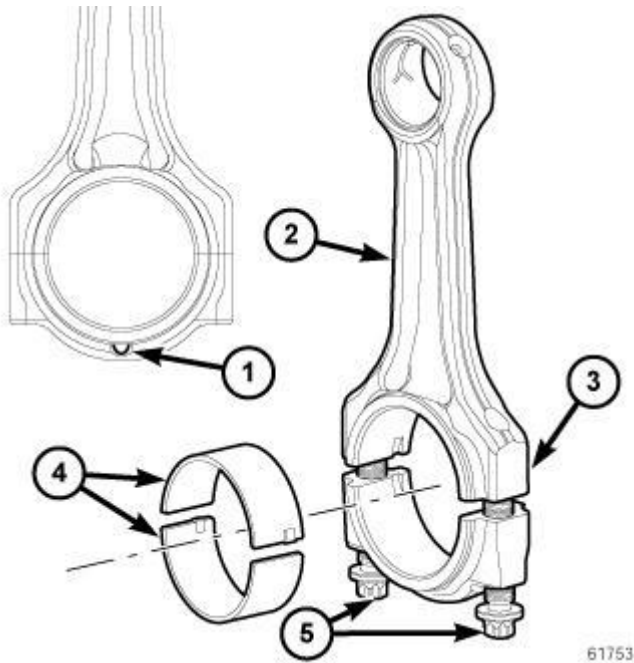


Fig. 191: CONNECTING ROD IDENTIFICATION
Courtesy of CHRYSLER LLC

- 1 - CONNECTING ROD PAWL
- 2 - CONNECTING ROD
- 3 - PAINTED CYLINDER IDENTIFIER
- 4 - CONNECTING ROD BEARINGS
- 5 - BOLTS

1. Piston Diameter: Size: 91.912 - 91.928 mm (3.6185 - 3.6192 in.) Maximum wear limit .05 mm (.0019 in.).
2. Check piston pin bores in piston for roundness. Make 3 checks at 120° intervals. Maximum out of roundness .05 mm (.0019 in.).
3. The piston diameter should be measured approximately 15 mm (.590 in.) up from the base.
4. Skirt wear should not exceed 0.1 mm (.00039 in.).
5. The clearance between the cylinder liner and piston should not exceed 0.065-0.083 mm (.0025-.0032 in.).

CONNECTING RODS

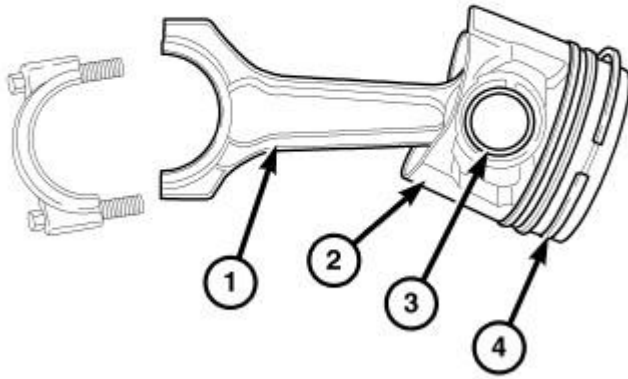

81abebb4


Fig. 192: PISTON AND CONNECTING ROD

Courtesy of CHRYSLER LLC

CAUTION: Connecting rod bolts must be replaced when disassembled. When assembling the connecting rod (2), be sure that the connecting rod pawl (1) on each of the connecting rod caps is facing the rear (fly wheel) side of the engine.

NOTE: Do Not lubricate the new connecting rod bolts. They are already coated with a anti scuff treatment.

1. Assemble connecting rod bearings (4) and bearing caps to their respective connecting rods (2) ensuring that the serrations on the cap and reference marks are aligned.
2. Tighten connecting cap bolts to 10 N.m (88 in. lbs.).
3. Without loosening connecting rod bolts, tighten all bolts to 30 N.m (22 ft. lbs.).
4. Using a torque angle gauge, tighten each bolt an additional 40°.
5. Recheck all bolt tightening with a torque wrench set to 88 N.m (65 ft. lbs.).
6. Check and record internal diameter of crank end of connecting rod (2).

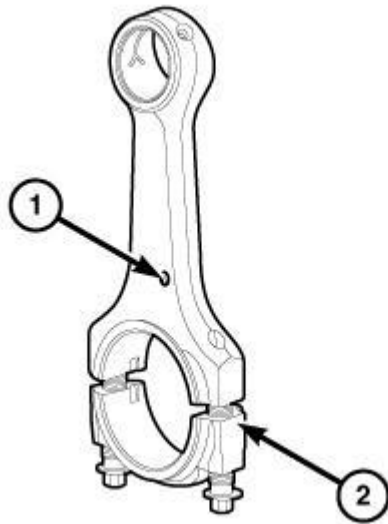


3080986

Fig. 193: Connecting Rod & Cap
Courtesy of CHRYSLER LLC

CAUTION: When changing connecting rods (2), DO NOT use a stamp to mark the cylinder location. Identify the connecting rods (2) and caps location using a paint marker. All four must have the same weight. Replacement connecting rods (2) will only be supplied in sets of four.

Connecting rods (2) are supplied in sets of four since they all must be of the same weight category. The weight of the connecting rod is identified by a paint mark (1) on the connecting rod.

PISTON PINS

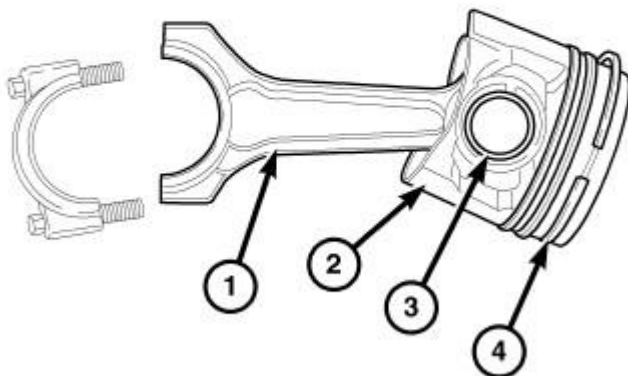


81abebb4

Fig. 194: PISTON AND CONNECTING ROD

Courtesy of CHRYSLER LLC

1. Measure the diameter of piston pin in the center and both ends. For specification, see **Engine - Specifications**.

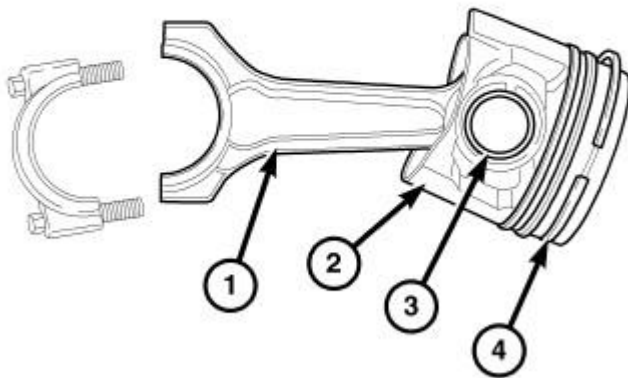Installation**INSTALLATION****PISTON PIN INSTALLATION**

81abebb4

Fig. 195: PISTON AND CONNECTING ROD

Courtesy of CHRYSLER LLC

1. Secure connecting rod (1) in soft jawed vice.
2. Lubricate piston pin (3) and piston (2) with clean engine oil.
3. Position piston (2) on connecting rod (1).

CAUTION: Ensure arrow on piston crown and the bearing cap numbers on the connecting rod are on the opposite side.

4. Install piston pin (1).
5. Install snap ring in piston (2) to retain piston pin (3).
6. Remove connecting rod (1) from vice.

PISTON RINGS - INSTALLATION

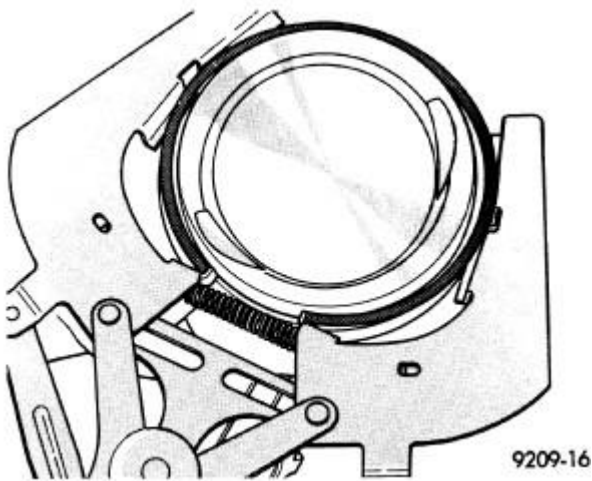


Fig. 196: PISTON RINGS - REMOVAL/INSTALLATION
Courtesy of CHRYSLER LLC

1. Install rings on the pistons using a suitable ring expander.

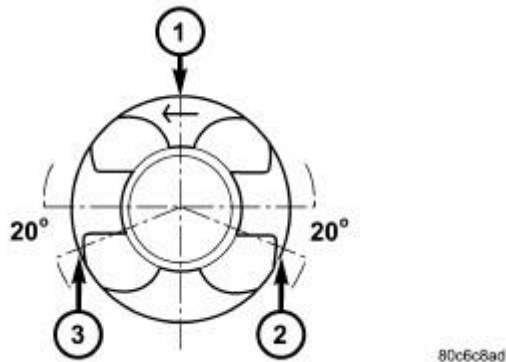


Fig. 197: PISTON RING GAP LOCATION
Courtesy of CHRYSLER LLC

- | |
|--|
| 1 - SECOND COMPRESSION RING GAP POSITION
2 - OIL CONTROL RING GAP POSITION
3 - TOP COMPRESSION RING GAP POSITION |
|--|

2. Top compression ring is tapered and chromium plated. The second ring is of the scraper type and must be installed with scraping edge facing bottom of the piston. The third is an oil control ring. Ring gaps must be positioned, before inserting piston into the liners, as follows .
3. Top ring gap must be positioned at the #3 position (looking at the piston crown from above).
4. Second piston ring gap should be positioned at the #1 position.
5. Oil control ring gap should be positioned at the #2 position.

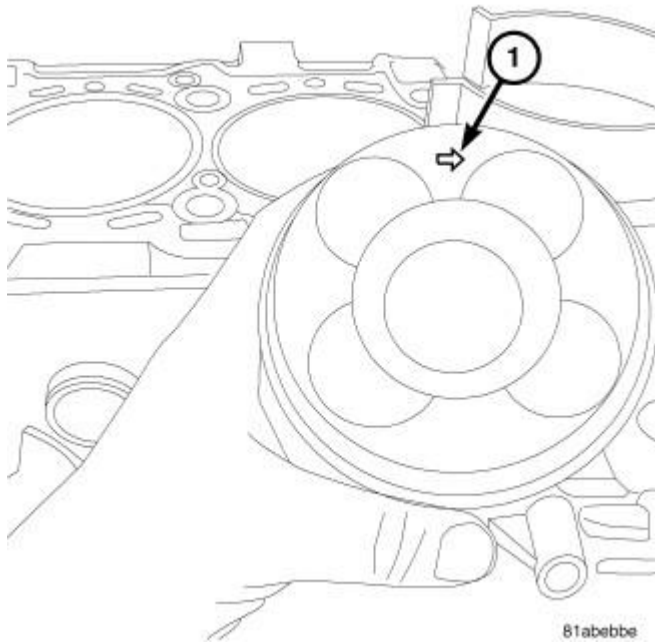


Fig. 198: PISTON DIRECTION
Courtesy of CHRYSLER LLC

6. When assembling pistons check that components are installed in the same position as before disassembly, determined by the numbers stamped on the crown of individual pistons. Engine cylinders are numbered starting from gear train end of the engine. **Face arrow on top of piston toward front of engine .** Therefore, the numbers stamped on connecting rod big end should face toward the injection pump side of engine. To insert piston into cylinder use a ring compressor as shown in illustration.

INSTALLATION


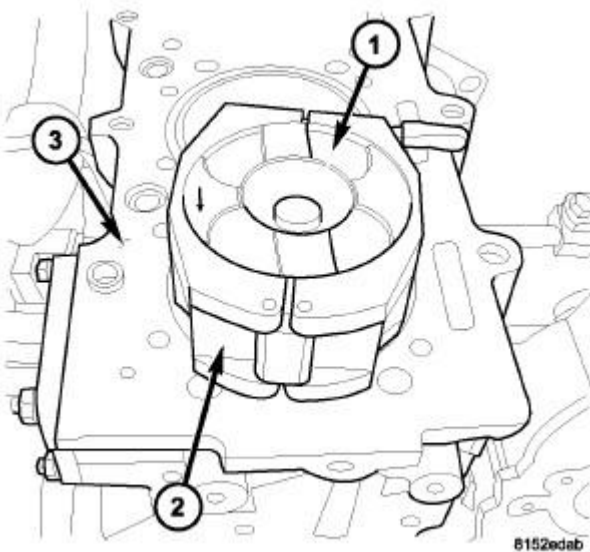


Fig. 199: PISTON INSTALLATION
Courtesy of CHRYSLER LLC

- 1 - PISTON
- 2 - PISTON RING COMPRESSOR
- 3 - ENGINE BLOCK


1. Before installing pistons, and connecting rod assemblies into the bore, be sure that compression ring gaps are staggered so that neither is in line with oil ring rail gap.
2. Before installing the ring compressor, make sure the oil ring expander ends are butted together.
3. Immerse the piston head and rings in clean engine oil, slide the piston ring compressor, over the piston and tighten. **Ensure position of rings does not change during this operation .**
4. Face arrow on piston towards front of engine.

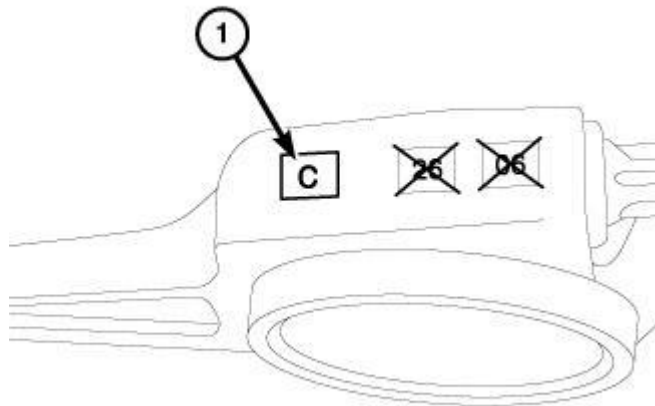

61771

Fig. 200: CONNECTING ROD SIZE
Courtesy of CHRYSLER LLC

5. The connecting rod bearing size (1) is stamped on the connecting rod.

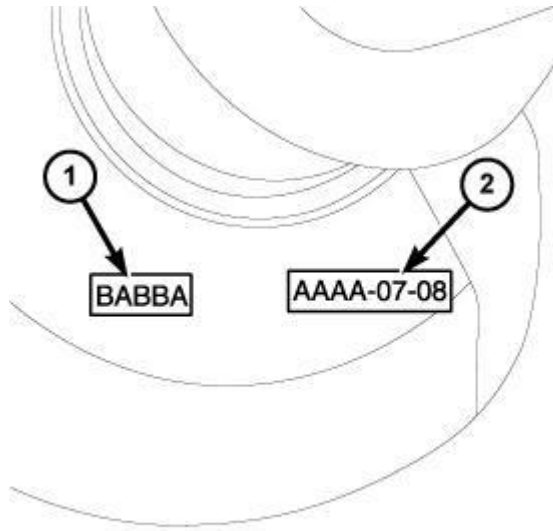

61703

Fig. 201: MAIN BEARING SIZE MARK ON CRANK

Courtesy of CHRYSLER LLC

6. Compare the crankshaft connecting rod journal diameter (2) with the bearing selection chart to determine the correct bearing size for each cylinder. The letters stamped into the crankshaft (2) are in the same order as the cylinders. The first letter corresponds to the first cylinder, the second to the second, etc. See **Engine/Engine Block - Standard Procedure**.

CAUTION: Care must be taken not to nick the crankshaft journal or cylinder bore when installing the pistons.


7. Rotate crankshaft so that the connecting rod journal is on the center of the cylinder bore. Insert rod and piston into cylinder bore and guide rod over the crankshaft journal.
8. Guide the piston down in cylinder bore, using a hammer handle. At the same time, guide connecting rod into position on connecting rod journal.

NOTE: The connecting rod bolts must be replaced every time they are loosened or removed.

9. Install connecting rod caps. Install rod bolts and tighten to 10 N.m (88 in. lbs.). Tighten bolts the next stage to 30 N.m (22 ft. lbs.) plus 40°. Then with a torque wrench set to 88 N.m (65 ft. lbs.), make a tightening check.
10. Install the oil jets. See **Engine/Lubrication/JET, Piston Oil Cooler - Installation**.
11. Install cylinder head. See **Engine/Cylinder Head - Installation**.
12. Install balance shaft assembly. See **Engine/Engine Block/MODULE, Balance Shaft - Installation**.
13. Install upper oil pan. See **Engine/Lubrication/PAN, Oil - Installation**.
14. Install the lower oil pan. See **Engine/Lubrication/PAN, Oil - Installation**.
15. Connect negative battery cable.

SEAL, CRANKSHAFT OIL, FRONT**Removal****REMOVAL**

1. Remove the crankshaft sprocket. See **Engine/Valve Timing/SPROCKET(S), Timing Belt and Chain - Removal**.

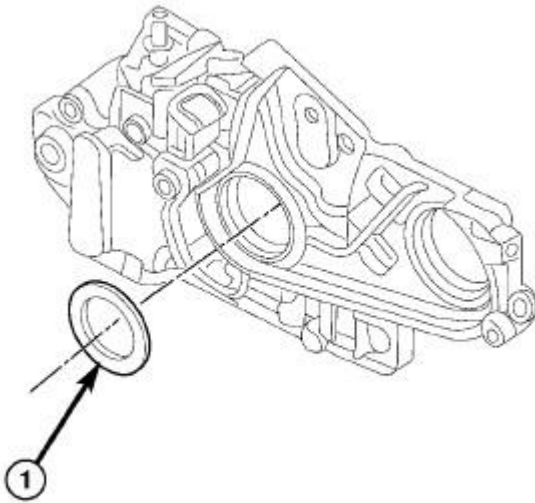

81df239a

Fig. 202: Front Crankshaft Oil Seal
Courtesy of CHRYSLER LLC

NOTE: Do not gouge or scratch the surface of the crankshaft when removing the front crankshaft oil seal.

2. Remove the front crankshaft oil seal (1).

Installation**INSTALLATION**

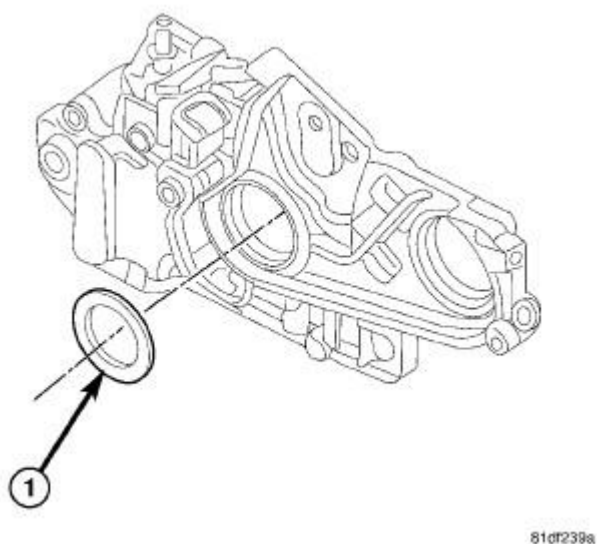


Fig. 203: Front Crankshaft Oil Seal
Courtesy of CHRYSLER LLC

1. Using Seal Installer 9937, install the front crankshaft oil seal (1).
2. Install the crankshaft sprocket. See **Engine/Valve Timing/SPROCKET(S), Timing Belt and Chain - Installation**.

SEAL, CRANKSHAFT OIL, REAR

Description

DESCRIPTION

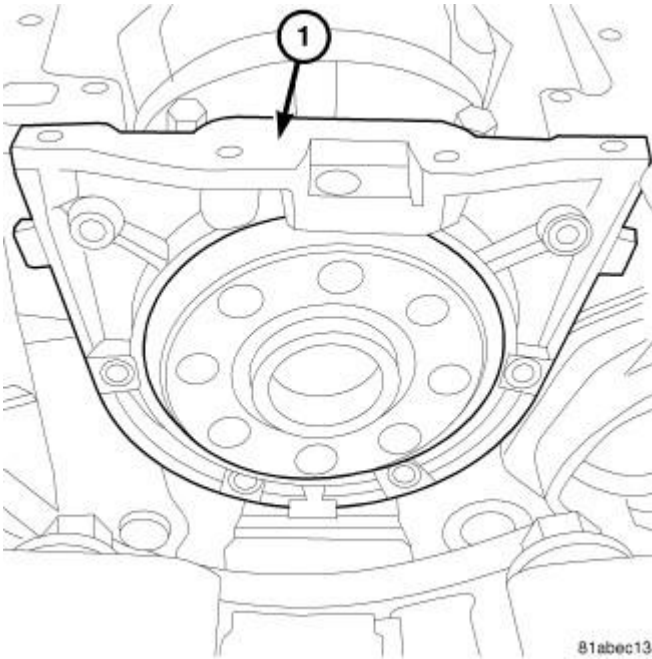


Fig. 204: Rear Crankshaft Seal & Rear Main Oil Seal Carrier
Courtesy of CHRYSLER LLC

The rear crankshaft seal consists of a seal and a seal carrier (1). The rear seal is inserted into the carrier. Once assembled the rear main seal assembly should not be separated to reduce the possibility of damage to the internal rear seal lip.

Removal

REMOVAL - REAR CRANKSHAFT OIL SEAL

NOTE: This must be done with either the engine or transmission removed from vehicle.

1. On automatic transmission vehicles, remove the flex plate. See **Engine/Engine Block/FLEXPLATE - Removal**.
2. On manual transmission vehicles, remove the flywheel. Refer to **Clutch/FLYWHEEL - Removal**.
3. Remove the Crankshaft Position (CKP) sensor. Refer to **Fuel System/Fuel Injection/SENSOR, Crankshaft Position - Removal**.

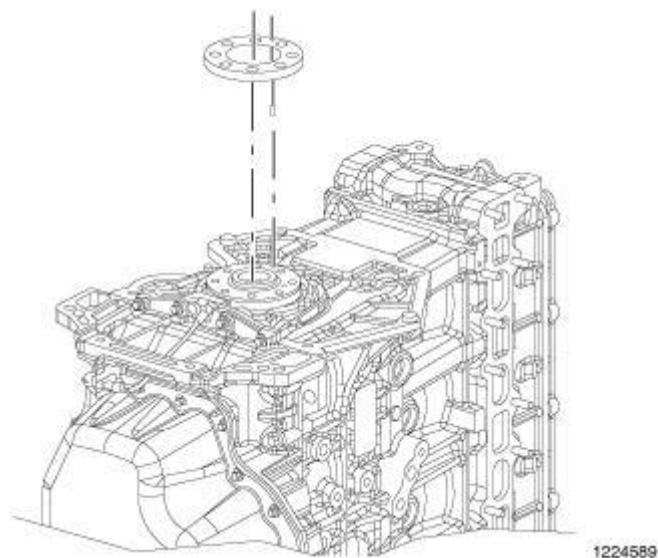


Fig. 205: Crankshaft Sensor Tone Wheel
Courtesy of CHRYSLER LLC

4. Remove the upper oil pan. See **Engine/Lubrication/PAN, Oil - Removal**.
5. Remove the crankshaft sensor tone wheel before removing the rear main oil seal.

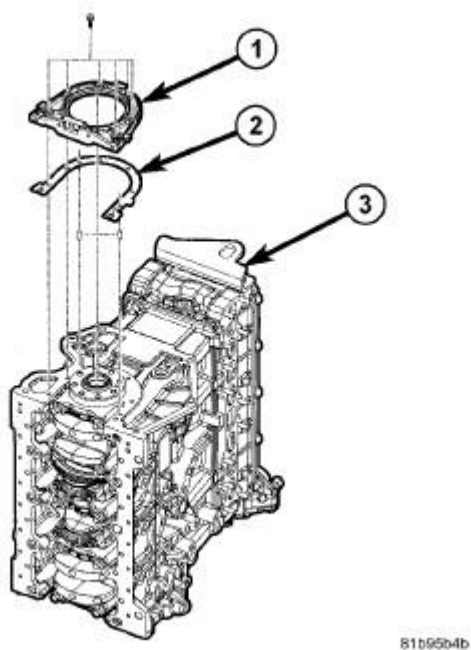
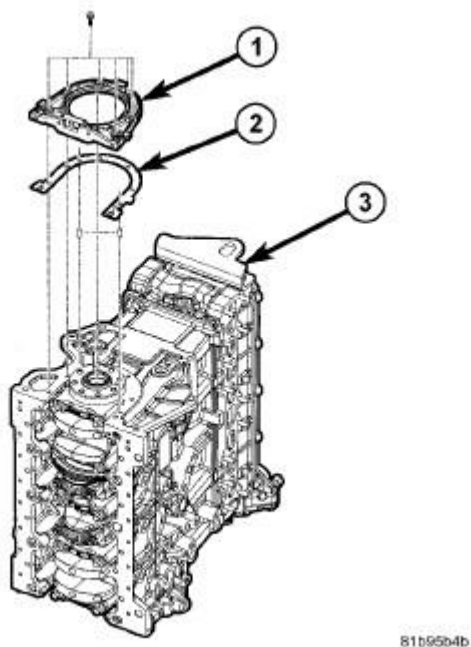


Fig. 206: REAR MAIN SEAL GASKET
Courtesy of CHRYSLER LLC

6. Remove the bolts that secure the rear oil seal carrier (1) to the engine block (3).
7. Remove the rear oil seal carrier and gasket (2).
8. Remove the rear crankshaft oil seal from the rear oil seal carrier (1).

Installation**INSTALLATION - REAR CRANKSHAFT OIL SEAL****Fig. 207: REAR MAIN SEAL GASKET****Courtesy of CHRYSLER LLC**

1. Clean the rear crankshaft oil seal and seal carrier sealing surfaces.
2. Position the rear main seal carrier gasket (2) onto the rear of the engine block.
3. Using Crankshaft Seal Installer VM.9993, install rear crankshaft oil seal into the rear main seal carrier (1).
4. Install the rear main seal carrier onto the engine block (3).

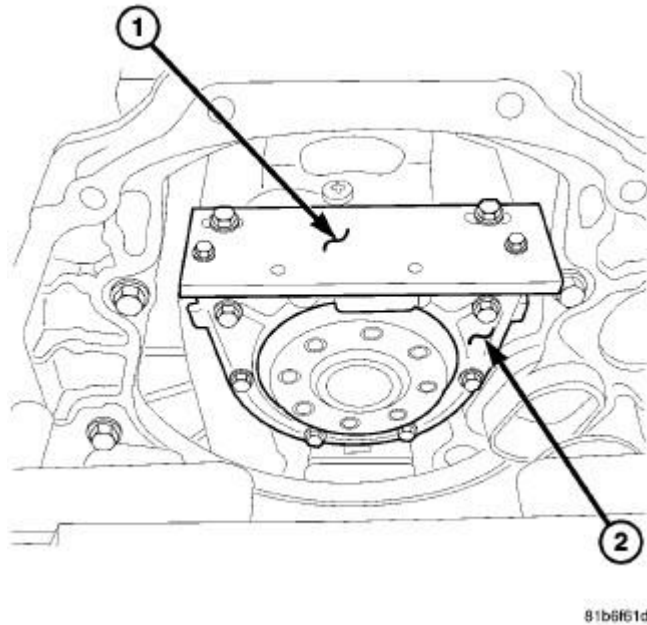


Fig. 208: REAR SEAL TOOL INSTALLED
Courtesy of CHRYSLER LLC

5. Loosely install the bolts that secure the rear oil seal carrier (2) to the engine block.
6. Using the Front and Rear Seal Tool VM.9990 (1) to set the depth of the rear main seal (2).

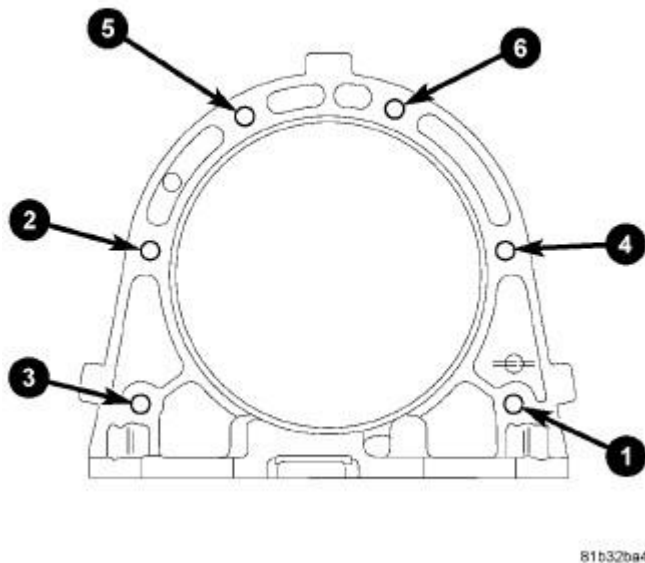


Fig. 209: REAR COVER TORQUE
Courtesy of CHRYSLER LLC

7. Using the sequence shown in illustration, tighten the rear cover bolts to 15 N.m (133 in. lbs.).
8. Install the upper oil pan. See **Engine/Lubrication/PAN, Oil - Installation**.

NOTE: Make sure the crankshaft sensor tone wheel is positioned correctly on the crankshaft.

9. Install the Crankshaft Position Sensor (CKP). Refer to **Fuel System/Fuel Injection/SENSOR, Crankshaft Position - Installation**.

NOTE: If equipped, manual transmission models with start/stop, there is a special tone wheel for this option that needs to be installed. (Refer to **Clutch/FLYWHEEL - Installation**).

10. Install the crankshaft sensor tone wheel to the rear of the crankshaft.
11. On manual transmission models, install the flywheel. Refer to **Clutch/FLYWHEEL - Installation**.
12. On automatic transmission vehicles, install the flex plate. See **Engine/Engine Block/FLEXPLATE - Installation**.

ENGINE MOUNTING

INSULATOR, ENGINE MOUNT, LEFT

Removal

REMOVAL - LEFT ENGINE MOUNT

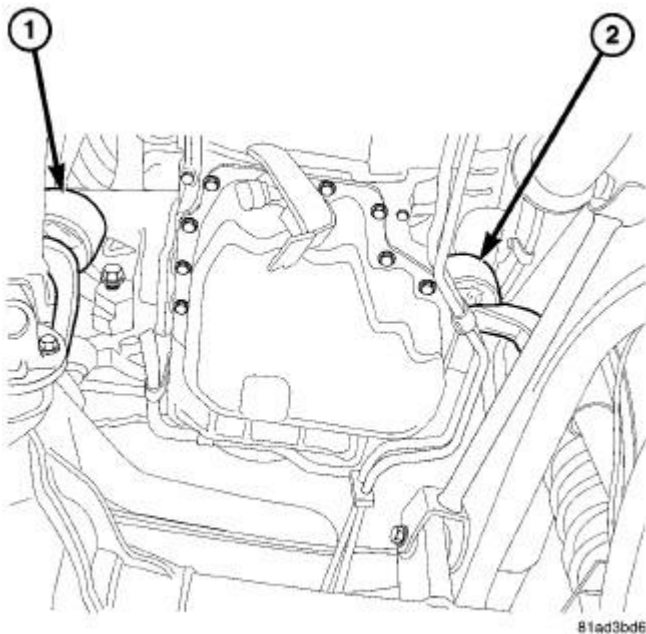


Fig. 210: ENGINE MOUNTS
Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.

NOTE: The viscous fan does not need to be totally removed from vehicle only from the mounting drive.

2. Remove the viscous fan and position aside. Refer to Cooling/Engine/DRIVE, Fan - Removal .
3. Raise and support the vehicle.
4. Remove the right side and left side lower engine mount nuts.
5. Install the Engine Support Fixture 8534B.
6. Raise the engine.
7. Remove the left front tire.
8. Remove the inner fender. Refer to Body/Exterior/SHIELD, Splash - Removal .
9. Remove upper nut, and the left engine mount (1).

Installation

INSTALLATION - LEFT ENGINE MOUNT

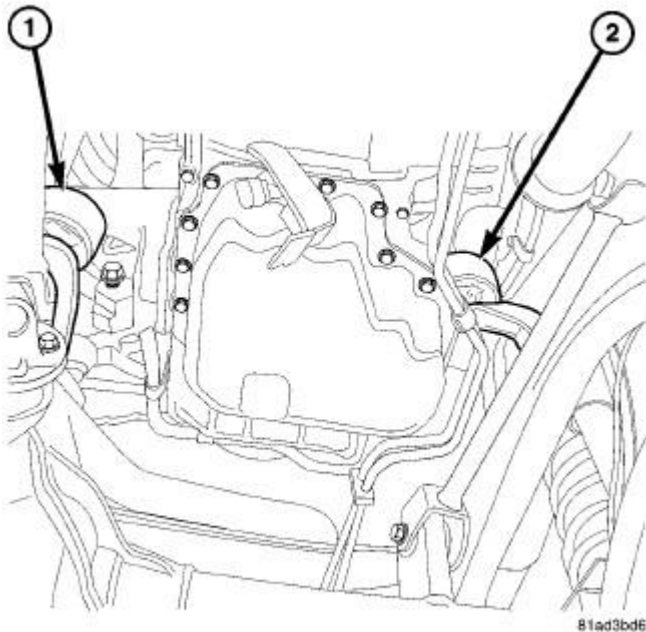


Fig. 211: ENGINE MOUNTS
Courtesy of CHRYSLER LLC

1. Position the left engine mount (1) and install the left upper retaining nut tight.
2. Lower the vehicle.

3. Lower the engine.
4. Remove the Engine Support Fixture 8534B.
5. Install the viscous fan. Refer to **Cooling/Engine/DRIVE, Fan - Installation** .
6. Tighten the left upper engine mount nut to 54 N.m (40 ft. lbs.).
7. Raise and support the vehicle.
8. Install the left and right lower engine mount nut. Tighten nut to 54 N.m (40 ft. lbs.).
9. Lower the vehicle.
10. Install the left inner splash shield. Refer to **Body/Exterior/SHIELD, Splash - Installation** .
11. Install the left front tire.
12. Connect the negative battery cable.

INSULATOR, ENGINE MOUNT, RIGHT

Removal

REMOVAL - RIGHT ENGINE MOUNT

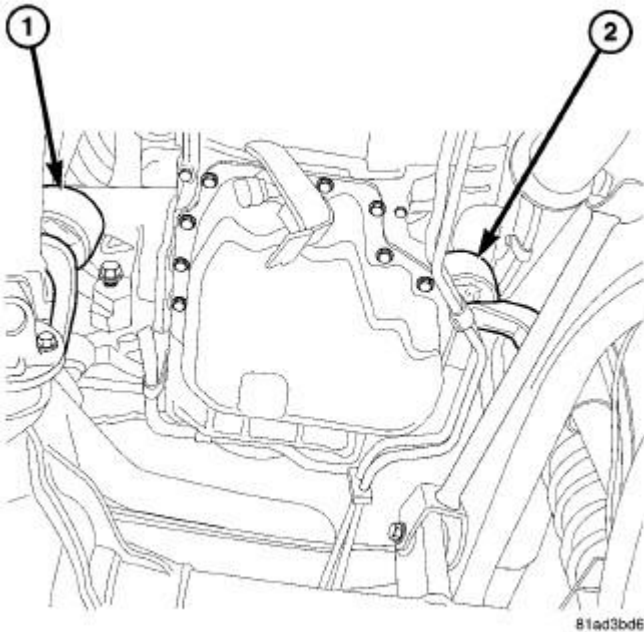


Fig. 212: ENGINE MOUNTS
Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.

NOTE: **The viscous fan does not need to be totally removed from vehicle only from the mounting drive.**

2. Remove the viscous fan and position aside. Refer to **Cooling/Engine/DRIVE, Fan - Removal** .
3. Raise and support the vehicle.
4. Remove the right side and left side lower engine mount nuts.
5. Install the Engine Support Fixture 8534B.
6. Raise the engine.
7. Remove the inner fender. Refer to **Body/Exterior/SHIELD, Splash - Removal** .
8. Remove upper nut, and the right engine mount (2).

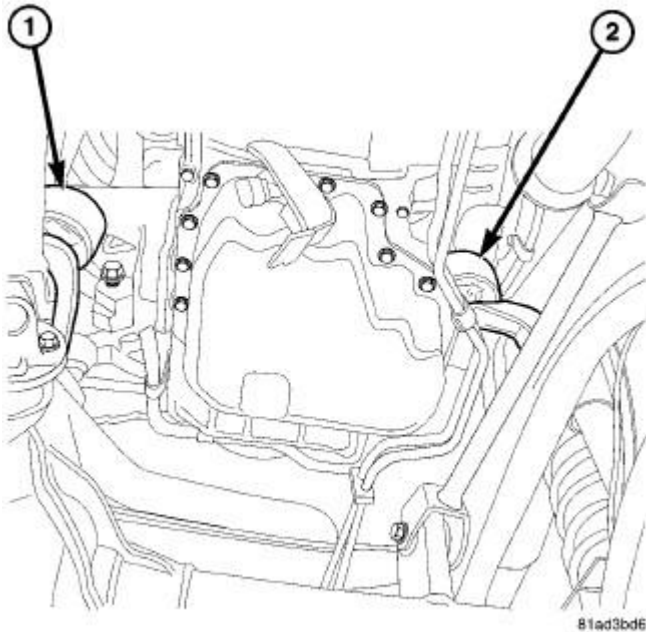
Installation**INSTALLATION - RIGHT ENGINE MOUNT**

Fig. 213: ENGINE MOUNTS
Courtesy of CHRYSLER LLC

1. Position the right engine mount (2) and install the retaining nut finger tight.
2. Lower the vehicle.
3. Lower the engine.
4. Remove the Engine Support Fixture 8534B.
5. Install the viscous fan. Refer to **Cooling/Engine/DRIVE, Fan - Installation** .
6. Tighten the right upper engine mount through bolts to 54 N.m (40 ft. lbs.).
7. Raise and support the vehicle.
8. Install the left and right lower engine mount nut. Tighten nut to 54 N.m (40 ft. lbs.).
9. Lower the vehicle.

10. Install the right inner splash shield. Refer to **Body/Exterior/SHIELD, Splash - Installation** .
11. Connect the negative battery cable.

LUBRICATION

COOLER, OIL

Description

DESCRIPTION

Engine coolant is used to cool the engine oil. A plate-style external heat exchanger is located on the oil filter housing which is on the right side of the engine. A gasket seals the oil cooler to the oil filter housing. Replace the gasket whenever the oil cooler is removed or replaced. The oil is fed to the oil cooler through the oil filter housing.

Removal

REMOVAL - OIL COOLER

1. Disconnect the negative battery cable.
2. Remove the belly pan.
3. Drain the engine oil.
4. Drain the cooling system. Refer to **Cooling - Standard Procedure** .

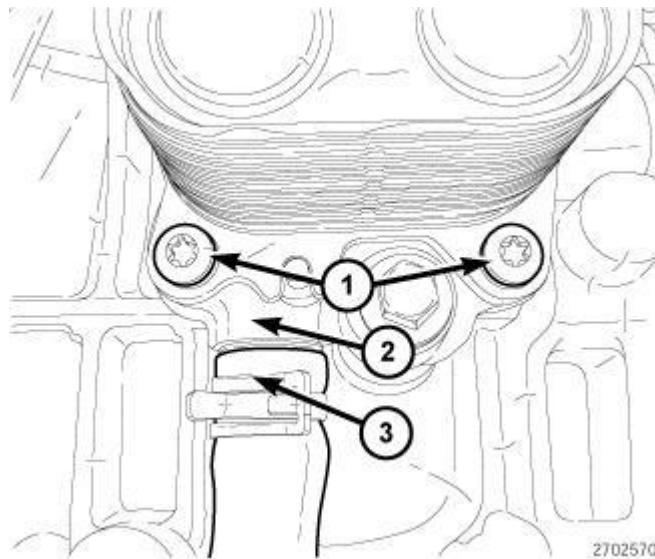


Fig. 214: COOLANT HOSE & OIL COOLER HOUSING
Courtesy of CHRYSLER LLC

5. Remove the two lower oil cooler bolts (1).

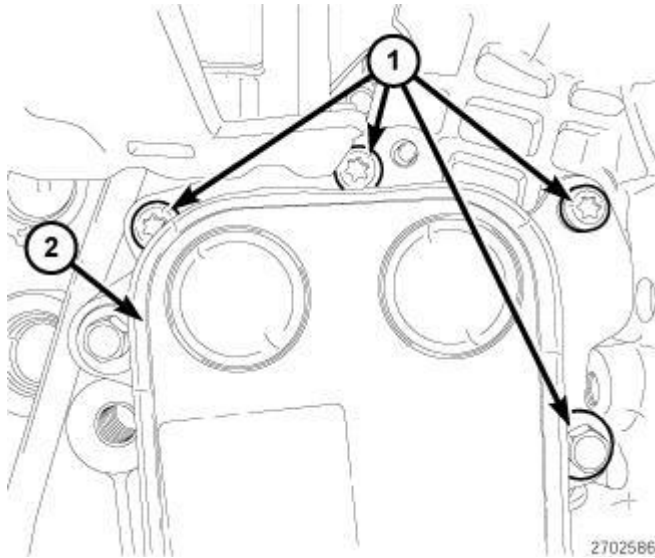


Fig. 215: ENGINE OIL COOLER & BOLTS

Courtesy of CHRYSLER LLC

6. Remove the air cleaner body and turbocharger air inlet tube. See Engine/Air Intake System/BODY, Air Cleaner - Removal.
7. Remove the Charge Air Cooler (CAC) hose from (CAC).
8. Remove the (CAC) hose from turbocharger.
9. Remove the four upper bolts (1) and the engine oil cooler (2).
10. Remove and discard the O-ring gasket.

Installation

INSTALLATION - OIL COOLER

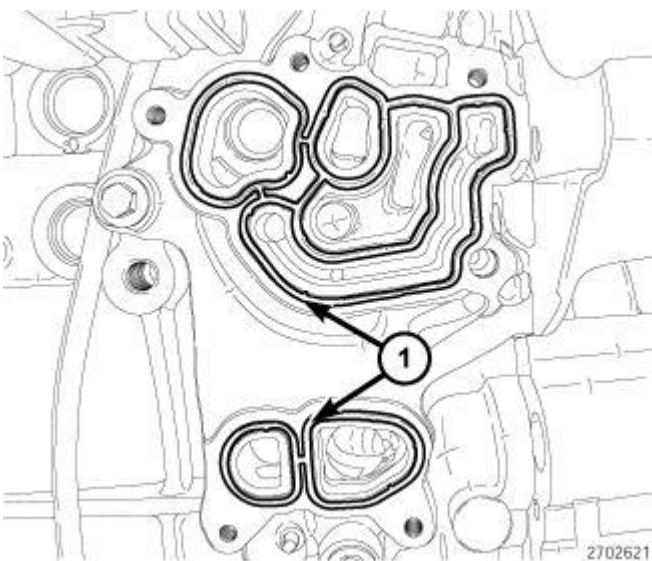


Fig. 216: O-RING GASKETS

Courtesy of CHRYSLER LLC

1. Clean all gasket mating surfaces.
2. Install a new O-ring gaskets (1).

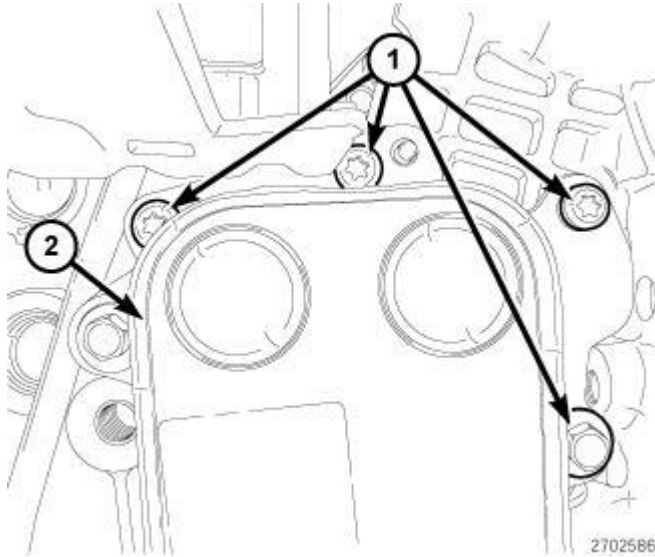


Fig. 217: ENGINE OIL COOLER & BOLTS
Courtesy of CHRYSLER LLC

3. Install the oil cooler (2). Tighten bolts (1) to 12 N.m (106 in. lbs.).
4. Install the (CAC) hose from turbocharger.
5. Install the Charge Air Cooler (CAC) hose from (CAC).
6. Install the air cleaner body and turbocharger air inlet tube. See Engine/Air Intake System/BODY, Air Cleaner - Installation.

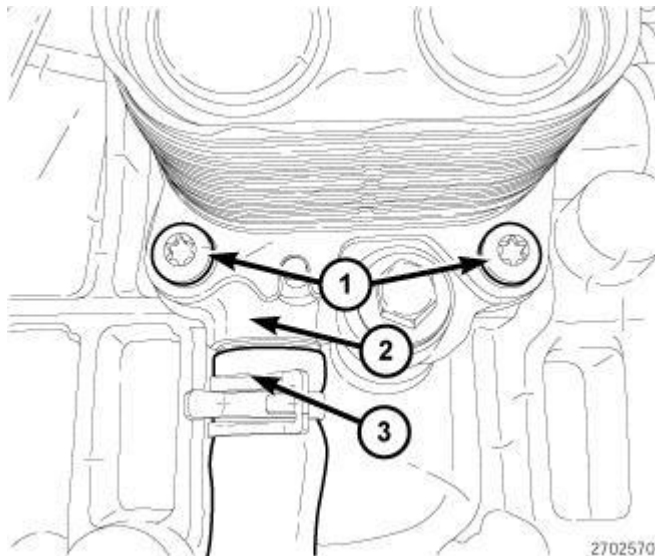



Fig. 218: COOLANT HOSE & OIL COOLER HOUSING
Courtesy of CHRYSLER LLC

7. Install the two lower oil cooler bolts (1). Tighten to 12 N.m (106 in. lbs.).
8. Install the belly pan.
9. Fill the cooling system. Refer to **Cooling - Standard Procedure** .
10. Fill the engine with recommended oil.
11. Connect the negative battery cable.
12. Start the engine and check for leaks.

FILTER, ENGINE OIL

Removal

REMOVAL - OIL FILTER

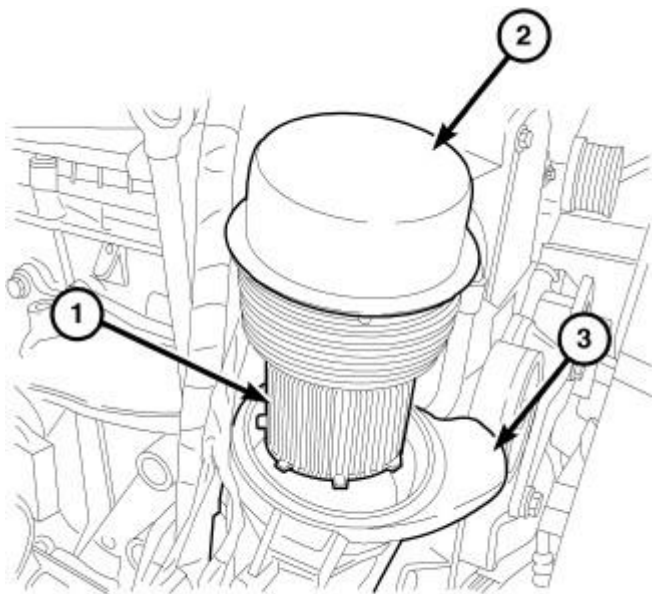

81ad6265


Fig. 219: OIL FILTER ADAPTER

Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Remove the air inlet tube from air cleaner housing and position aside.
3. Remove the oil filter housing cap (2) and the oil filter (1).

Installation

INSTALLATION - OIL FILTER

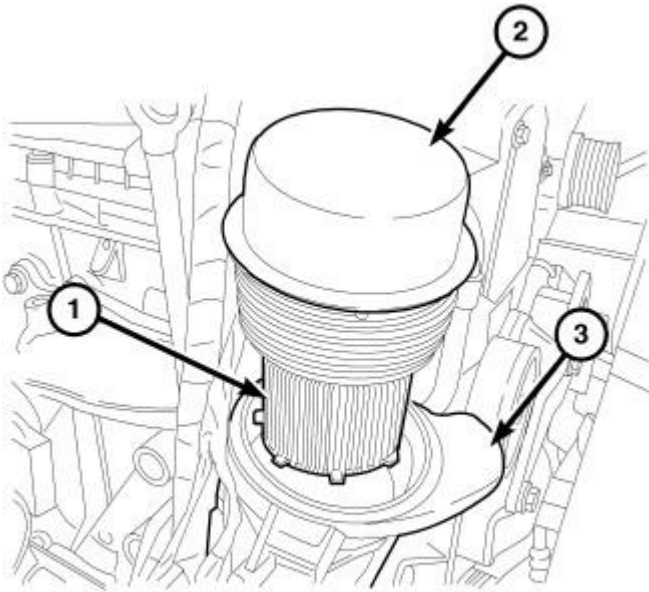

81ad6265

Fig. 220: OIL FILTER ADAPTER

Courtesy of CHRYSLER LLC

1. Install oil filter (1) and the oil filter housing cap (2). Tighten cap to 25 N.m (18 ft. lbs.).
2. Install the air inlet tube to air cleaner housing and securely tighten clamp.
3. Fill engine with the recommended engine oil.
4. Connect the negative battery cable.

HOUSING, OIL FILTER

Description


DESCRIPTION

The oil filter housing is mounted on the right side of the engine. The engine oil cooler is bolted to the oil filter housing.

Removal


REMOVAL - OIL FILTER HOUSING

1. Disconnect the negative battery cable.
2. Raise and support the vehicle.
3. Remove the underbody skid plate.
4. Drain the cooling system. Refer to **Cooling - Standard Procedure**.
5. Drain the engine oil.

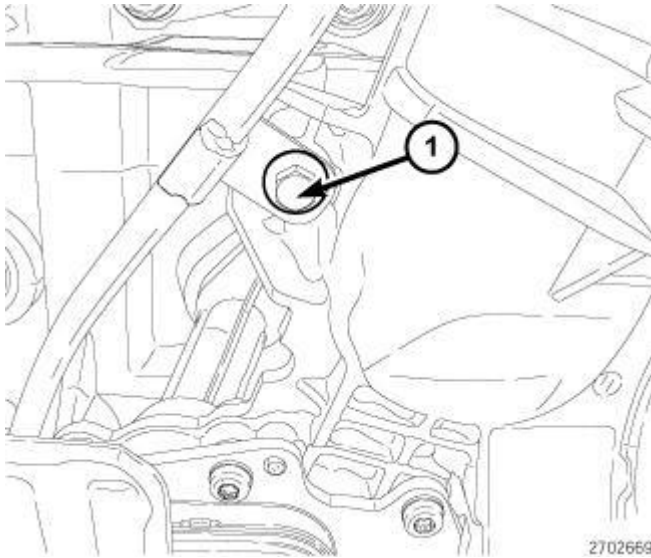**Fig. 221: UPPER OIL DIPSTICK BOLT**

Courtesy of CHRYSLER LLC

6. Remove the air cleaner body and turbocharger air inlet tube. See **Engine/Air Intake System/BODY, Air Cleaner - Removal**.
7. Remove the upper oil dipstick bolt (1).

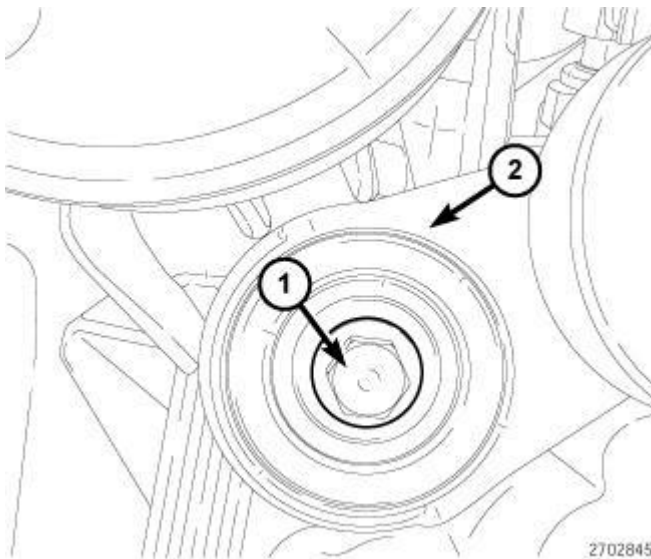**Fig. 222: SERPENTINE BELT TENSIONER & BOLT**

Courtesy of CHRYSLER LLC

8. Remove the serpentine belt. Refer to **Cooling/Accessory Drive/BELT, Serpentine - Removal**.
9. Remove the power steering pump and position aside.
10. Remove bolt (1) and the serpentine belt tensioner (2).

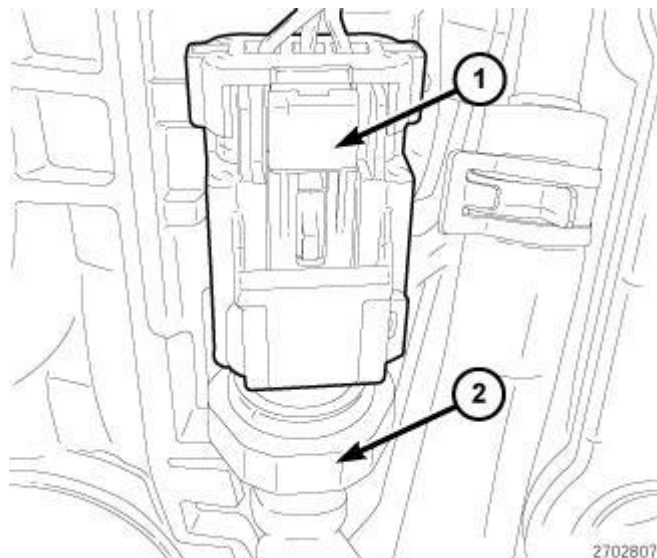


Fig. 223: OIL PRESSURE SWITCH
Courtesy of CHRYSLER LLC

11. Disconnect the oil pressure switch harness connector (1).

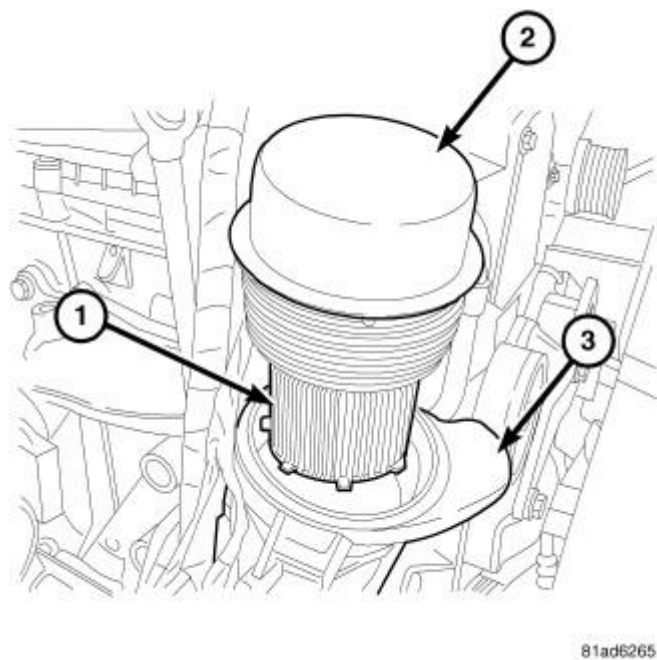


Fig. 224: OIL FILTER ADAPTER
Courtesy of CHRYSLER LLC

12. Remove the oil filter housing cap (2) and the oil filter (1).

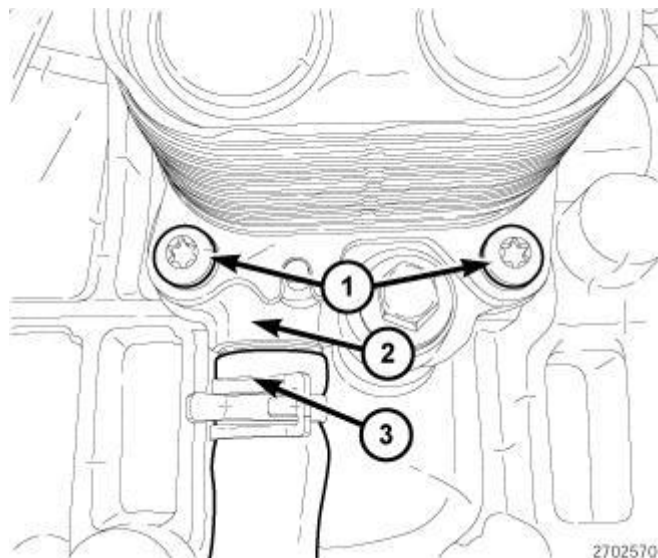


Fig. 225: COOLANT HOSE & OIL COOLER HOUSING
Courtesy of CHRYSLER LLC

13. Remove the coolant hose (3) from oil filter housing adapter (2).

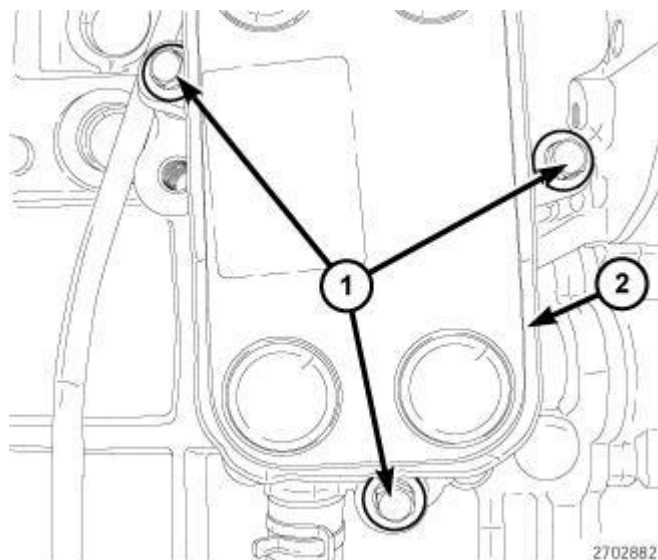


Fig. 226: OIL FILTER HOUSING ADAPTER & BOLTS
Courtesy of CHRYSLER LLC

14. Remove bolts (1) and the oil filter housing adapter (2).

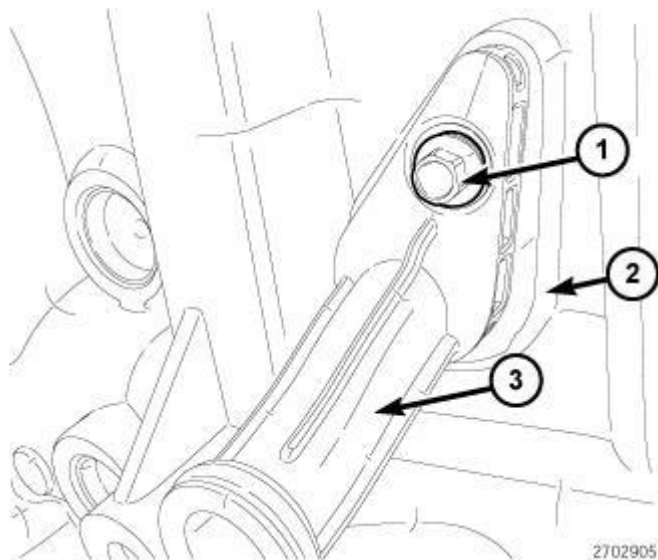


Fig. 227: IDENTIFYING COOLANT TUBE, ENGINE BLOCK & BOLT
Courtesy of CHRYSLER LLC

15. Remove bolt (1) and the coolant tube (3) and discard O-ring gasket.

Installation

INSTALLATION

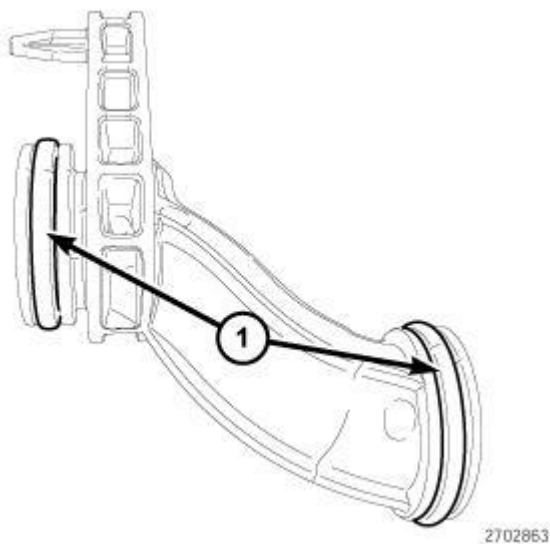


Fig. 228: IDENTIFYING O-RING SEALS
Courtesy of CHRYSLER LLC

1. Install new O-ring seals (1) to coolant tube.

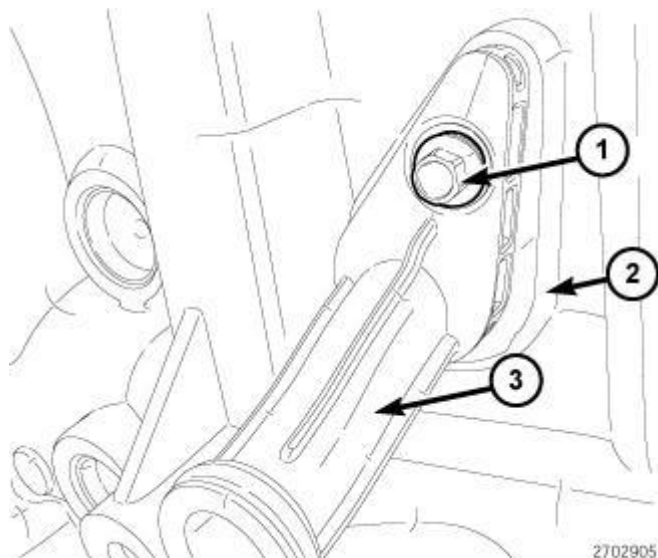


Fig. 229: IDENTIFYING COOLANT TUBE, ENGINE BLOCK & BOLT
Courtesy of CHRYSLER LLC

2. Install coolant tube (3) into engine block (2). Tighten bolt (1) to 11 N.m (97 in. lbs.).

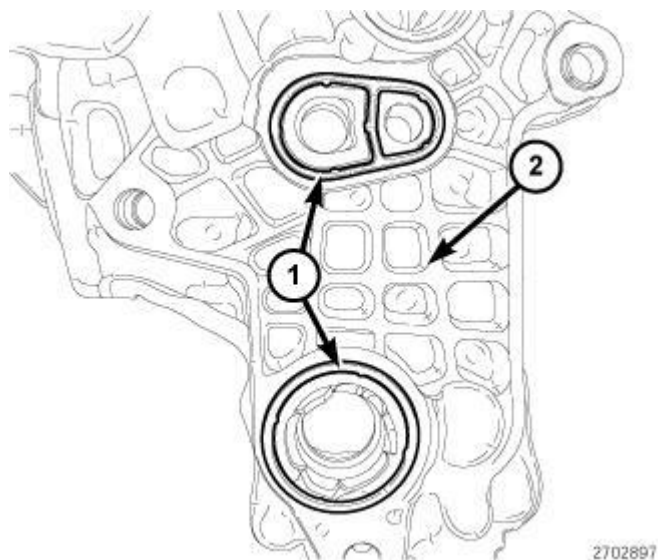


Fig. 230: O-RING SEALS & OIL FILTER HOUSING
Courtesy of CHRYSLER LLC

3. Install new O-ring seals (1) to the oil filter housing (2) adapter.

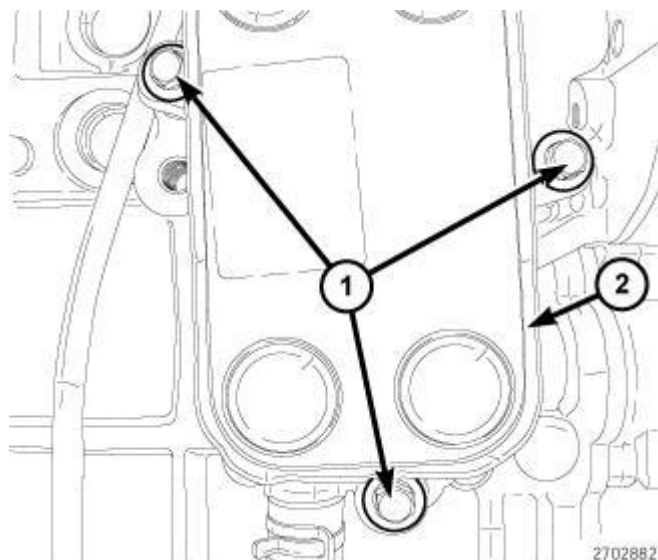


Fig. 231: OIL FILTER HOUSING ADAPTER & BOLTS

Courtesy of CHRYSLER LLC

4. Install the oil filter housing adapter (2). Tighten bolts (1) to 33 N.m (24 ft. lbs.).


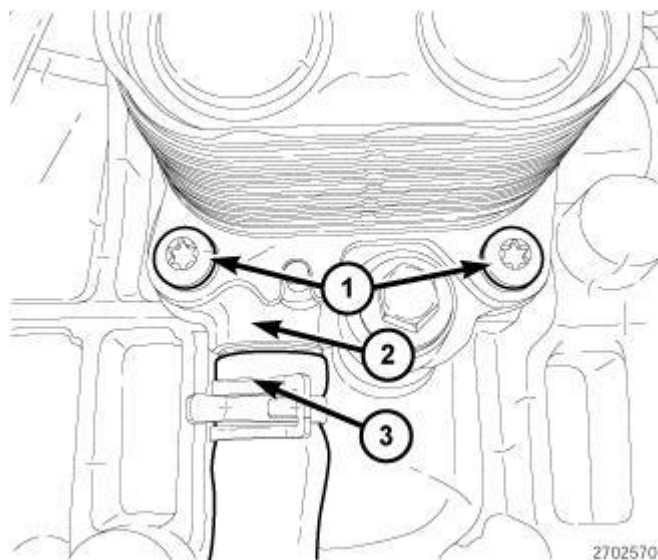


Fig. 232: COOLANT HOSE & OIL COOLER HOUSING

Courtesy of CHRYSLER LLC

5. Install the coolant hose (3) to the oil filter housing adapter (2).

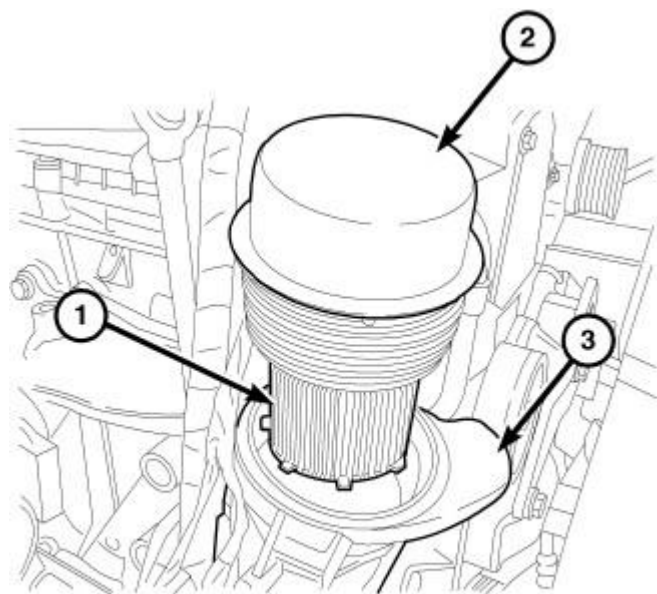


81ad6265

Fig. 233: OIL FILTER ADAPTER

Courtesy of CHRYSLER LLC

6. Install the oil filter (1) and the oil filter housing cap (2). Tighten to 25 N.m (18 ft. lbs.).

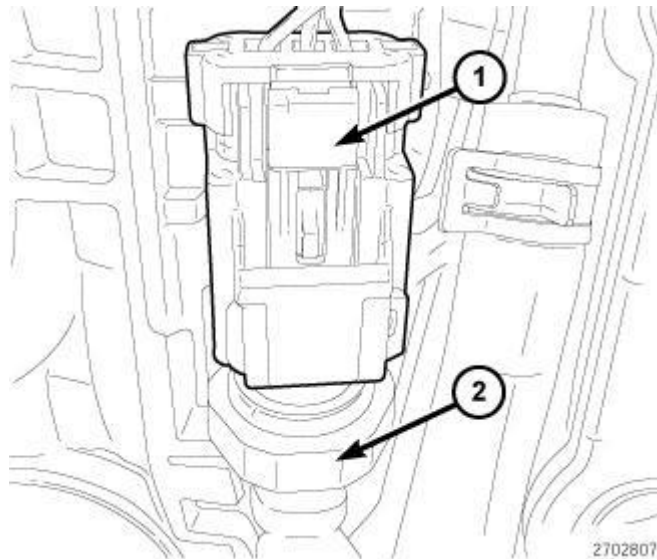

2702807

Fig. 234: OIL PRESSURE SWITCH

Courtesy of CHRYSLER LLC

7. Connect the oil pressure switch harness connector (1).

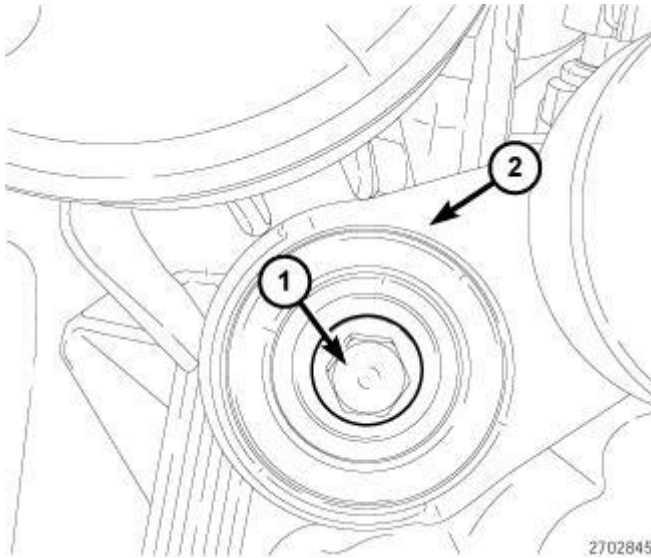


Fig. 235: SERPENTINE BELT TENSIONER & BOLT
 Courtesy of CHRYSLER LLC

8. Install the serpentine belt tensioner (2). Tighten bolt (1) to 45 N.m (33 ft. lbs.).
9. Install the power steering pump. Tighten bolts to 33 N.m (24 ft. lbs.).
10. Install the serpentine belt. Refer to **Cooling/Accessory Drive/BELT, Serpentine - Installation**.

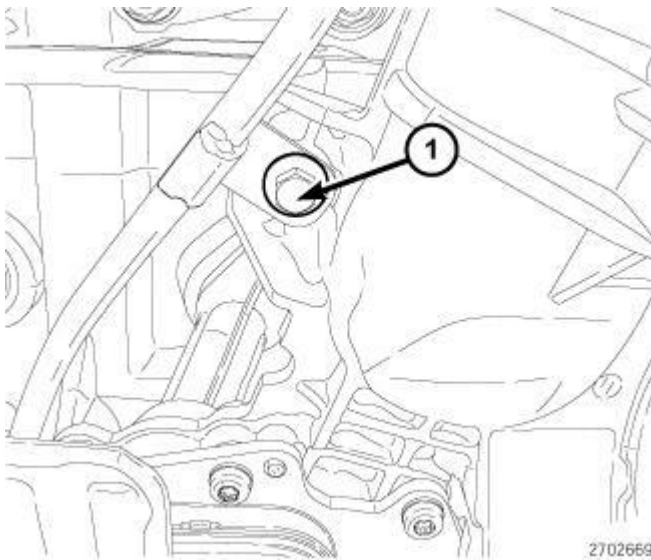


Fig. 236: UPPER OIL DIPSTICK BOLT
 Courtesy of CHRYSLER LLC


11. Install the upper oil dipstick bolt (1). Tighten bolt (1) to 33 N.m (24 ft. lbs.).
12. Install the turbocharger air inlet tube and air cleaner body. See **Engine/Air Intake System/BODY, Air Cleaner - Installation**.
13. Install the underbody skid plate.
14. Lower the vehicle.

15. Fill the engine with recommended oil.
16. Fill the cooling system. Refer to **Cooling - Standard Procedure** .
17. Connect the negative battery cable.
18. Start the engine and check for leaks.

JET, PISTON OIL COOLER

Description

DESCRIPTION

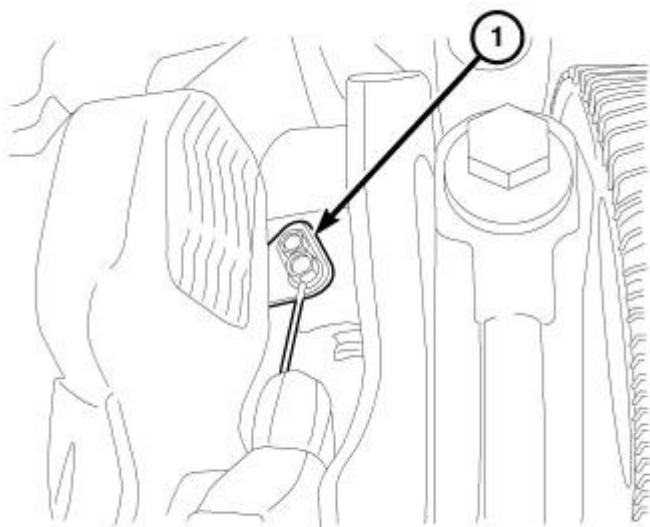

81abeb67


Fig. 237: OIL JET

Courtesy of CHRYSLER LLC

There are four oil jets installed in the engine block. These oil jets are used to cool and lubricate the piston assemblies.

Removal

REMOVAL

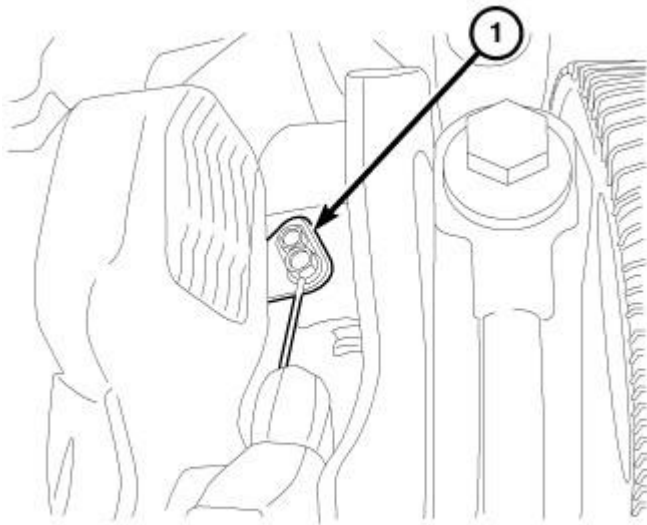

81abeb67

Fig. 238: OIL JET

Courtesy of CHRYSLER LLC


CAUTION: Use caution when removing and installing oil jets. Damage to oil jet nozzle could cause severe engine damage. Care must be taken not to damage the crankshaft tone ring when removing cylinder number four oil jet.

NOTE: To prevent damage to the oil jets, remove the oil jets before removing the pistons.

1. Disconnect negative battery cable.
2. Raise vehicle on hoist.
3. Remove the lower oil pan. See Engine/Lubrication/PAN, Oil - Removal.
4. Remove the oil pickup tube.
5. Remove the upper oil pan. See Engine/Lubrication/PAN, Oil - Removal.
6. Remove the balance shaft assembly. See Engine/Engine Block/MODULE, Balance Shaft - Removal.
7. Remove the oil jet.

Installation

INSTALLATION

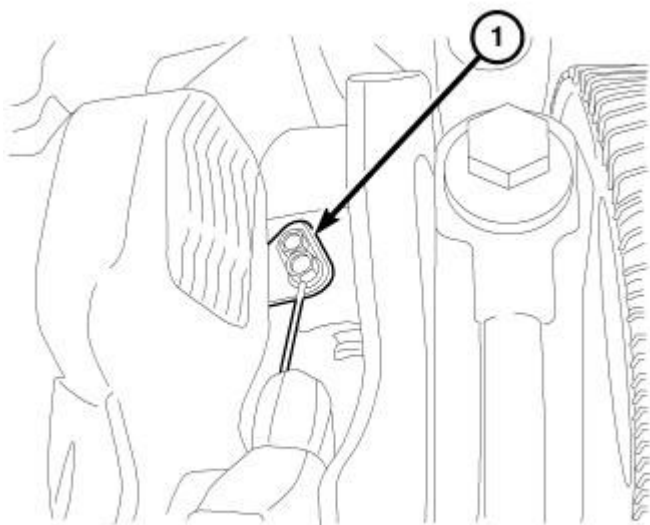


81abeb67

Fig. 239: OIL JET

Courtesy of CHRYSLER LLC

CAUTION: Use caution when removing and installing oil jets. Damage to oil jet nozzle could cause severe engine damage.

1. Lubricate O-ring on oil jet.
2. Install oil jet retaining bolt. Tighten bolt to 10.8 N.m (96 in. lbs.).

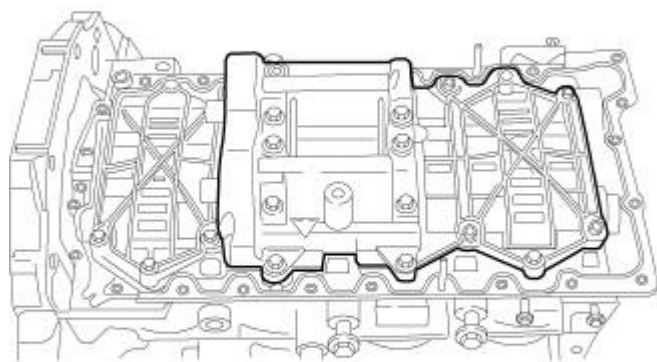


81ab8223

Fig. 240: Balance Shaft Module

Courtesy of CHRYSLER LLC


3. Install the balance shaft assembly. See **Engine/Engine Block/MODULE, Balance Shaft - Installation.**

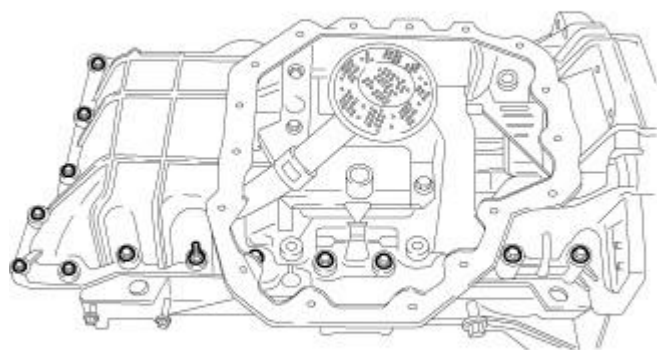

81abeb6e

Fig. 241: Upper Oil Pan Bolts
Courtesy of CHRYSLER LLC

4. Lubricate the oil pickup tube O-ring before installation.
5. Install the oil pickup tube and tighten the bolt to 15 N.m (12 lbs. ft.).

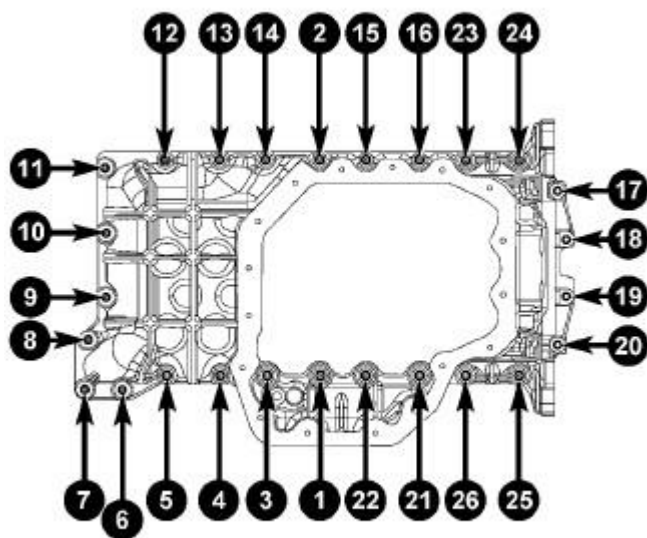


8196b3b5

Fig. 242: OIL SUMP TORQUE SEQUENCE

Courtesy of CHRYSLER LLC

6. Install the upper oil pan gasket.
7. Install the upper oil pan bolts in positions one and two, then follow the sequence shown in illustration for the remaining bolts. Once all of the bolts are installed, tighten the m6 bolts to 15 N.m (133 lbs. in.) and M8 bolts to 32 N.m (23 lbs. ft.).

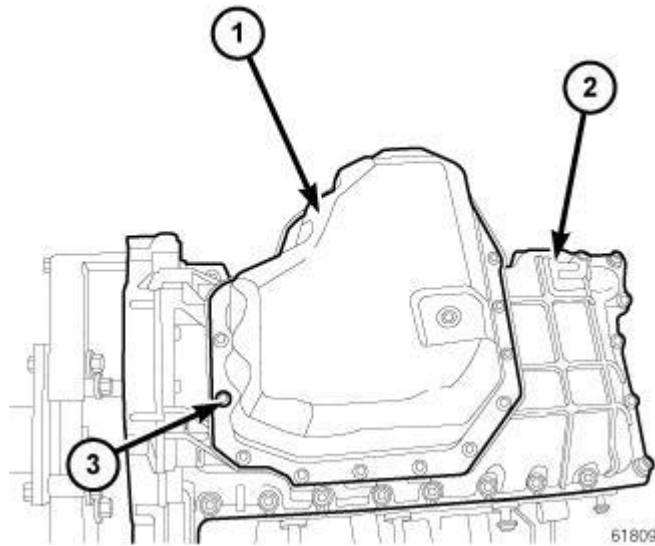**Fig. 243: LOWER OIL PAN**
Courtesy of CHRYSLER LLC

8. Install the lower oil pan gasket.

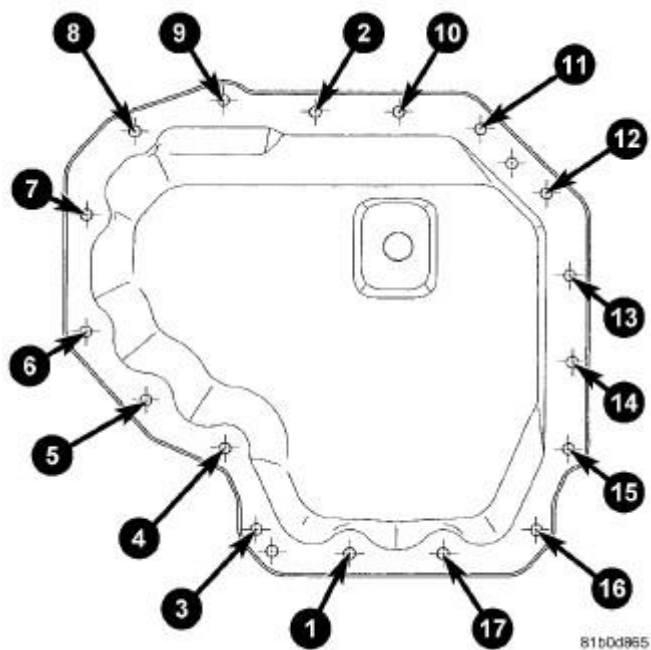


Fig. 244: LOWER OIL PAN TORQUE SEQUENCE

Courtesy of CHRYSLER LLC

9. Install bolts one and two into the lower oil pan, then follow the sequence for the remaining bolts.
10. Tighten the oil pan bolts in sequence to 15 N.m (133 lbs. in.).
11. Turn each bolt an additional 90°.
12. Refill engine oil to proper level.

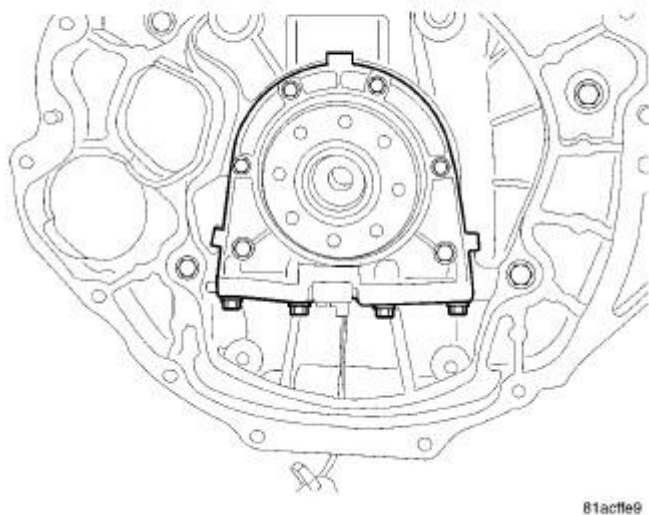


Fig. 245: REAM MAIN SEAL AND OIL PAN BOLTS
Courtesy of CHRYSLER LLC

13. Connect the crankshaft position sensor (CKP).
14. Connect negative battery cable.

OIL

Description

DESCRIPTION

Refer to the Lube and Maintenance section for oil specifications. Refer to Vehicle Quick Reference/Capacities and Recommended Fluids - Specifications .

PAN, OIL

Removal

REMOVAL - UPPER OIL PAN

1. Disconnect the negative battery cable.
2. Remove the air cleaner assembly. See Engine/Air Intake System/BODY, Air Cleaner - Removal.
3. Remove the upper dip stick bolt.
4. Raise and support the vehicle. Refer to Vehicle Quick Reference/Hoisting - Standard Procedure .


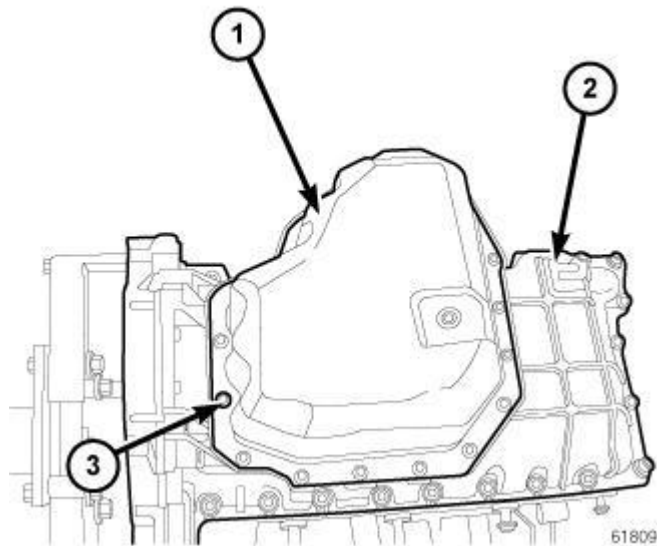


Fig. 246: LOWER OIL PAN
Courtesy of CHRYSLER LLC

5. Remove four bolts securing upper oil pan to transmission adapter plate.

6. Remove the lower oil pan. See **Engine/Lubrication/PAN, Oil - Removal**.
7. Remove the Crankshaft Position (CKP) sensor. Refer to **Fuel System/Fuel Injection/SENSOR, Crankshaft Position - Removal**.
8. Remove lower dipstick bolt and the oil dipstick.

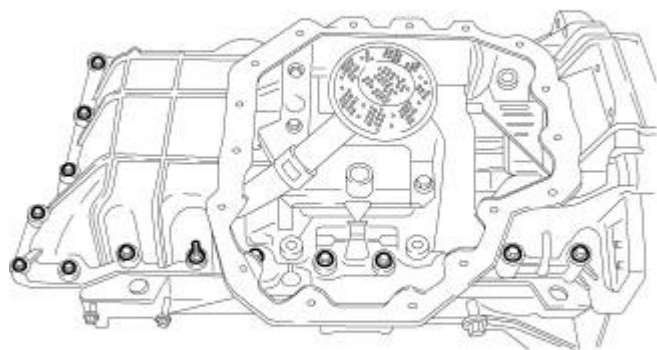


81abeb6e

Fig. 247: Upper Oil Pan Bolts
Courtesy of CHRYSLER LLC

9. Remove bolts and the upper oil pan.

REMOVAL - LOWER OIL PAN

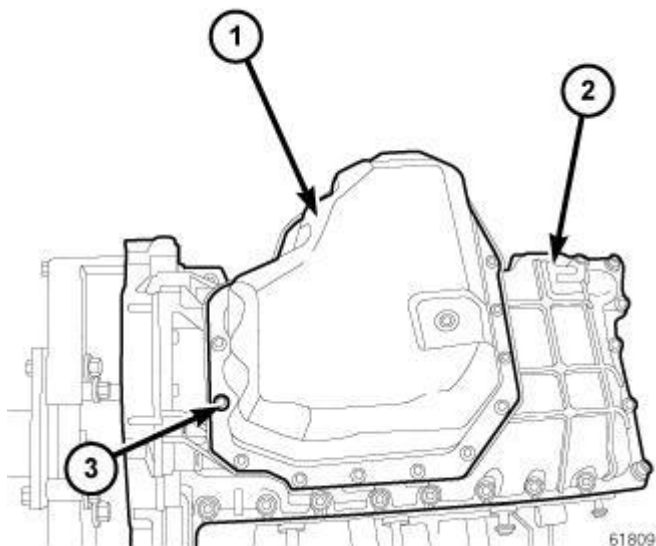


61809

Fig. 248: LOWER OIL PAN


Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Raise and support the vehicle. Refer to **Vehicle Quick Reference/Hoisting - Standard Procedure** .
3. Drain the engine oil.
4. Using a new copper sealing washer, install and tighten oil drain plug to 54 N.m (40 ft. lbs.).
5. Remove bolts (3) and the lower oil pan (1).
6. Remove and discard the oil pan gasket.

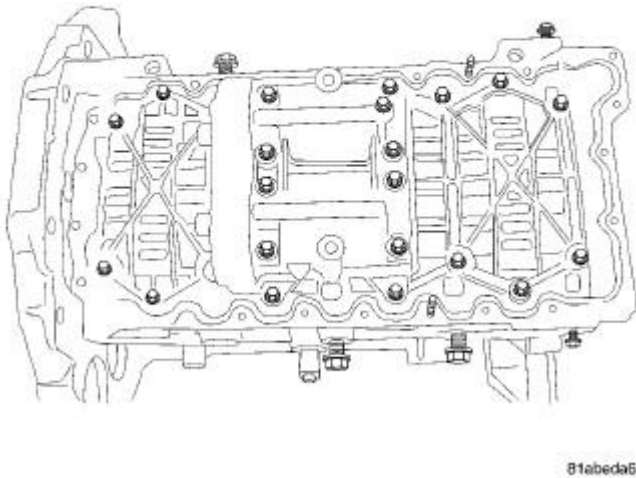Installation**INSTALLATION - UPPER OIL PAN****Fig. 249: Bolt Locations**

Courtesy of CHRYSLER LLC


1. Clean oil pan and engine block gasket surfaces.

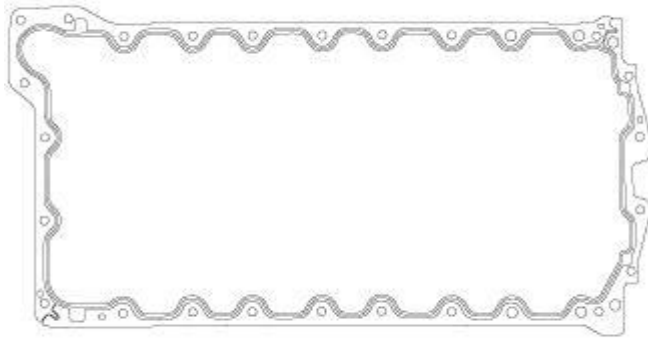

2252488

Fig. 250: Oil Pan Gasket Surface
Courtesy of CHRYSLER LLC

2. Install the upper oil pan gasket.

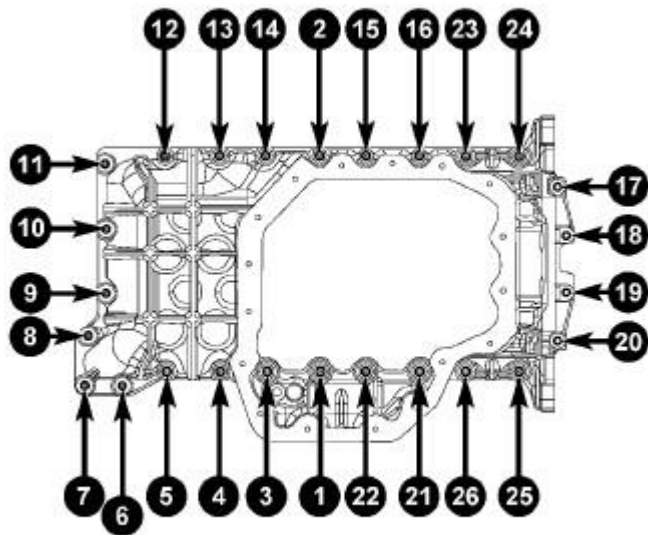

8196b3b5

Fig. 251: OIL SUMP TORQUE SEQUENCE
Courtesy of CHRYSLER LLC

3. Install the upper oil pan bolts in positions one and two, then follow the sequence illustrated for the remaining bolts. Once all of the bolts are installed, tighten the M6 bolts to 15 N.m (133 in. lbs.) and M8 bolts to 32 N.m (23 ft. lbs.).
4. Loosen all of the upper oil pan bolts and studs by 90 degrees and retighten the M6 bolts to 15 N.m (133

- in. lbs.) and M8 bolts to 32 N.m (23 ft. lbs.).
5. Install the oil dip stick. Tighten lower bolt to 11 N.m (97 in. lbs.).
 6. Install the lower oil pan. See **Engine/Lubrication/PAN, Oil - Installation**.
 7. Install the Crankshaft Position (CKP) sensor. Refer to **Fuel System/Fuel Injection/SENSOR, Crankshaft Position - Installation**.
 8. Install four bolts securing oil pan to transmission adapter plate and tighten to 69 N.m (51 ft. lbs.).
 9. Lower the vehicle.
 10. Install the upper dip stick bolt. Tighten upper bolt to 11 N.m (97 in. lbs.).
 11. Install the air cleaner assembly. See **Engine/Air Intake System/AIR CLEANER - Installation**.
 12. Refill engine with recommended engine oil.
 13. Connect the negative battery cable.

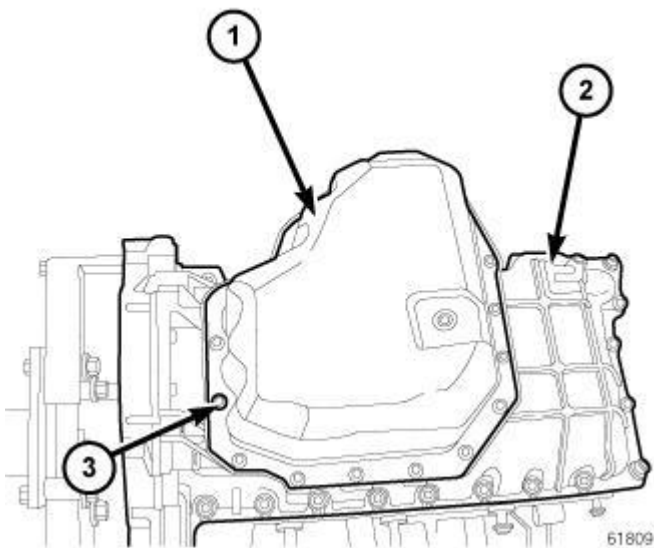
INSTALLATION - LOWER OIL PAN

Fig. 252: LOWER OIL PAN
Courtesy of CHRYSLER LLC

1. Make sure that the lower oil pan sealing surface is free of oil, debris and silicone.
2. Install the new lower oil pan gasket onto the oil pan.

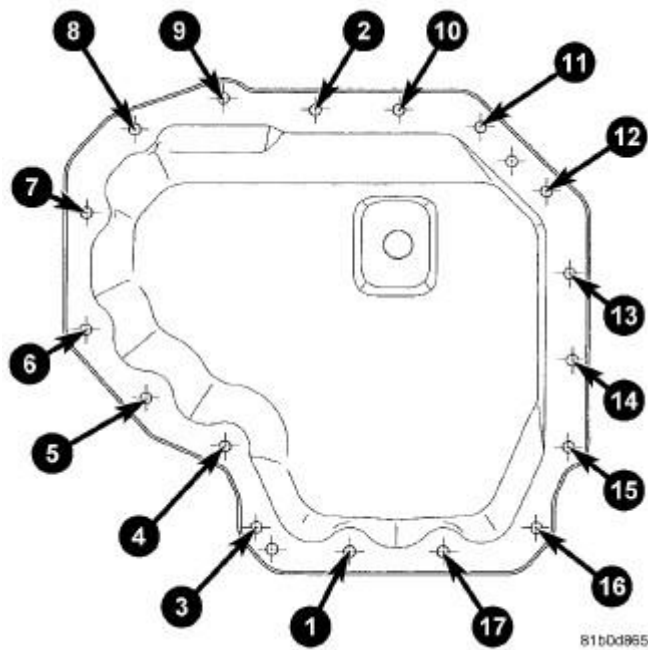


Fig. 253: LOWER OIL PAN TIGHTENING SEQUENCE


Courtesy of CHRYSLER LLC

3. Install bolts one and two into the lower oil pan and tighten to 15 N.m (133 in. lbs.).
4. Install the remaining bolts in the sequence shown in illustration.
5. Tighten the oil pan bolts in sequence to 15 N.m (133 in. lbs.).
6. Loosen each bolt 90 degrees and retighten bolts to 15 N.m (133 in. lbs.) using the sequence shown in illustration.
7. Fill the engine with recommended oil to proper level. Refer to **Vehicle Quick Reference/Capacities and Recommended Fluids - Specifications** .
8. Lower the vehicle.

PICK-UP, OIL PUMP

Removal

REMOVAL - OIL PUMP PICKUP TUBE

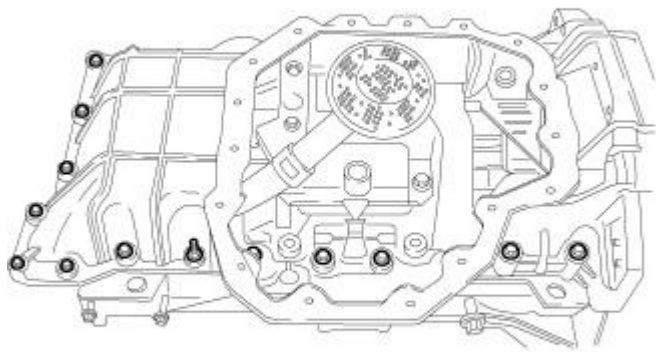

81abeb6e

Fig. 254: Upper Oil Pan Bolts
Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Raise vehicle on hoist.
3. Drain the oil.
4. Remove the upper oil pan. See **Engine/Lubrication/PAN, Oil - Removal.**

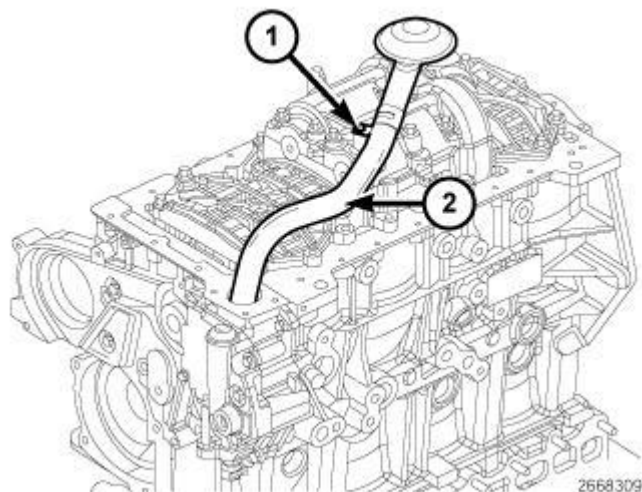


Fig. 255: Oil Pump Pickup Tube & Bolt
Courtesy of CHRYSLER LLC

5. Remove bolt (1) and the oil pump pickup tube (2) and discard O-rings.

Installation

INSTALLATION - OIL PUMP PICKUP TUBE

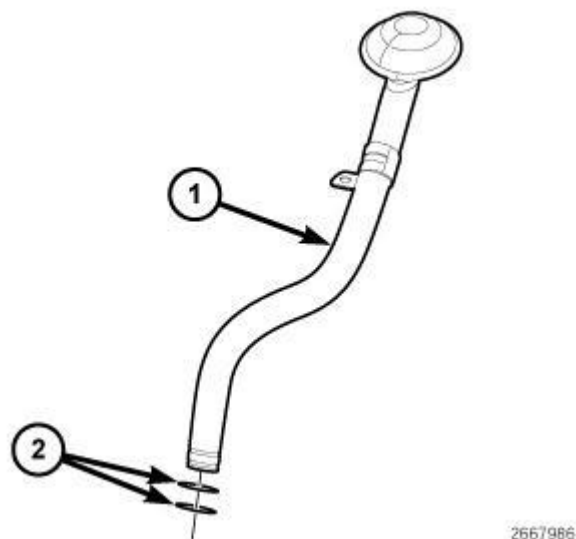


Fig. 256: Oil Pickup Tube & O-Rings
Courtesy of CHRYSLER LLC

1. Lubricate and install two new O-rings (2) on oil pickup tube (1).


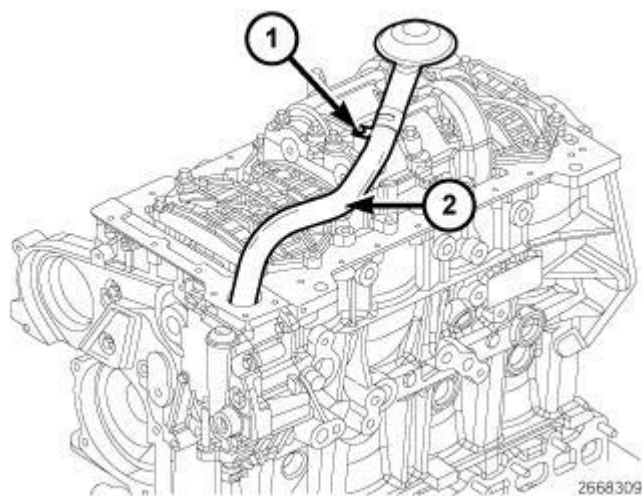


Fig. 257: Oil Pump Pickup Tube & Bolt
Courtesy of CHRYSLER LLC

2. Install the oil pickup tube (2). Tighten bolt (1) to 15 N.m (133 in. lbs.).

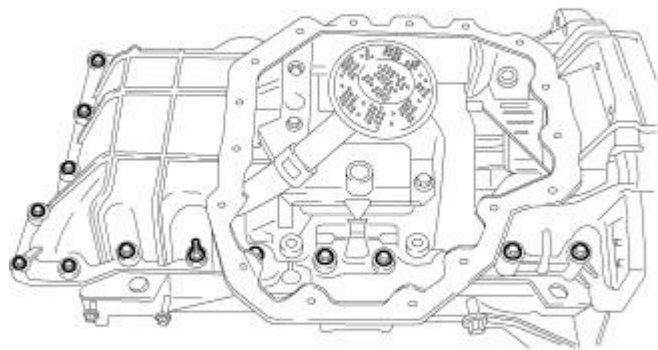

81abeb6e

Fig. 258: Upper Oil Pan Bolts
Courtesy of CHRYSLER LLC

3. Install the upper oil pan. See **Engine/Lubrication/PAN, Oil - Installation**.
4. Refill engine with recommended oil to proper level.
5. Connect the negative battery cable.

PUMP, ENGINE OIL

Removal

REMOVAL - OIL PUMP

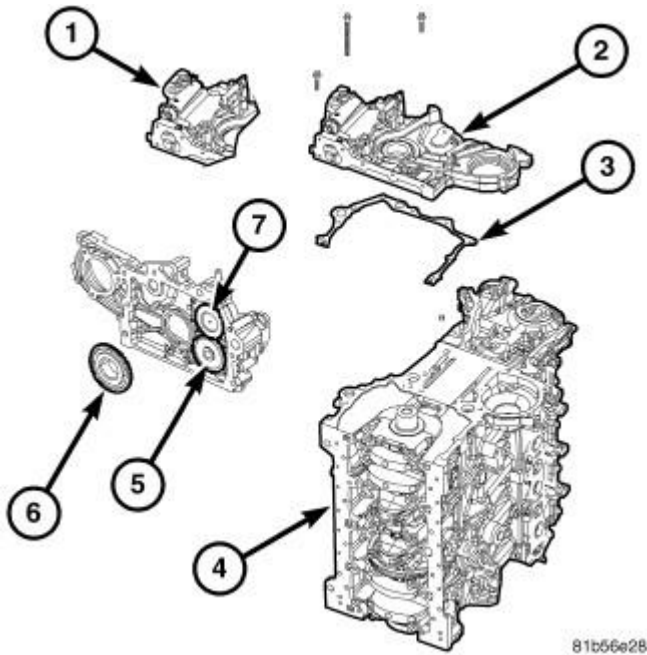


Fig. 259: VACUUM PUMP AND OIL PUMP

Courtesy of CHRYSLER LLC

NOTE: The oil pump is not a serviceable part. If oil pump failure has occurred or diagnosis has led you to replace the oil pump, then the front cover will have to be replaced.

1. Disconnect the negative battery cable.
2. Remove the front cover. See Engine/Engine Block/COVER, Engine - Removal.

Installation

INSTALLATION - OIL PUMP

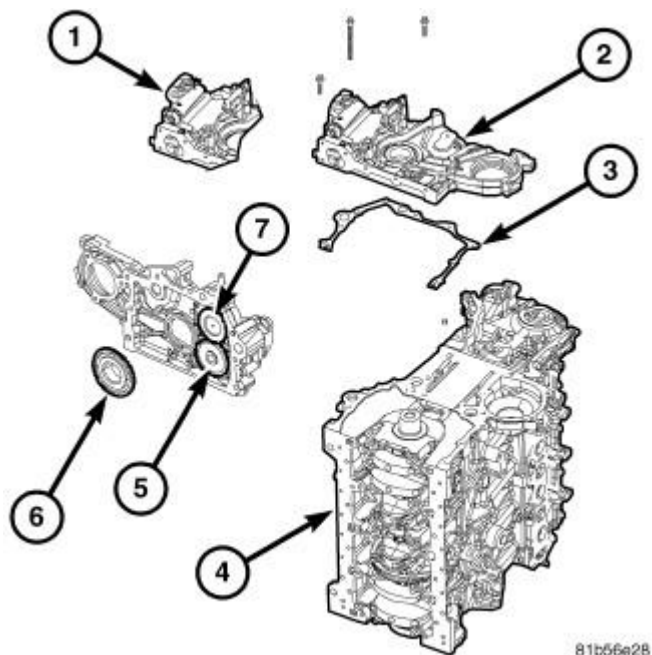


Fig. 260: VACUUM PUMP AND OIL PUMP

Courtesy of CHRYSLER LLC

1. Clean the gasket surfaces and sealing areas.
2. Lubricate oil pump rotor with engine oil.
3. Install front cover assembly. See **Engine/Engine Block/COVER, Engine - Installation**.
4. Connect the negative battery cable.

SENSOR, OIL PRESSURE

Description

DESCRIPTION

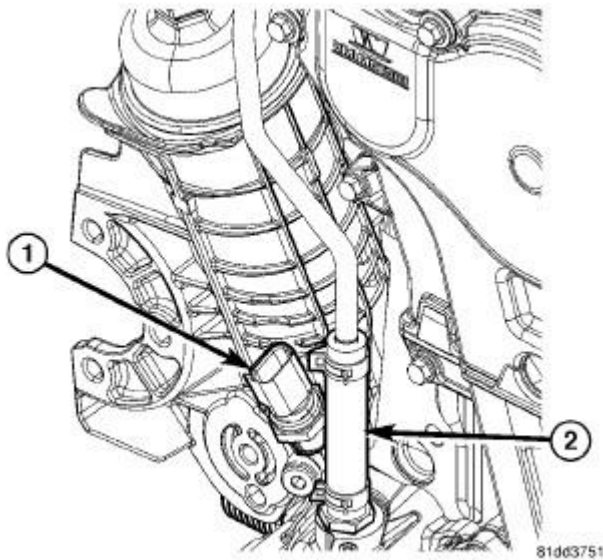


Fig. 261: OIL PRESSURE SENDING UNIT

Courtesy of CHRYSLER LLC

The oil pressure sending unit uses three circuits. They are:

- A signal circuit to the ECM.
- A sensor ground circuit through the ECM.
- A 5 volt reference circuit from the ECM.

The oil pressure sending unit returns a voltage signal back to the ECM relating oil pressure. Ground for the sensor is supplied by the ECM.

The oil pressure switch (1) is located on the right side of the engine block. The switch screws into the engines main oil gallery.

SEPARATOR, OIL

Removal

REMOVAL

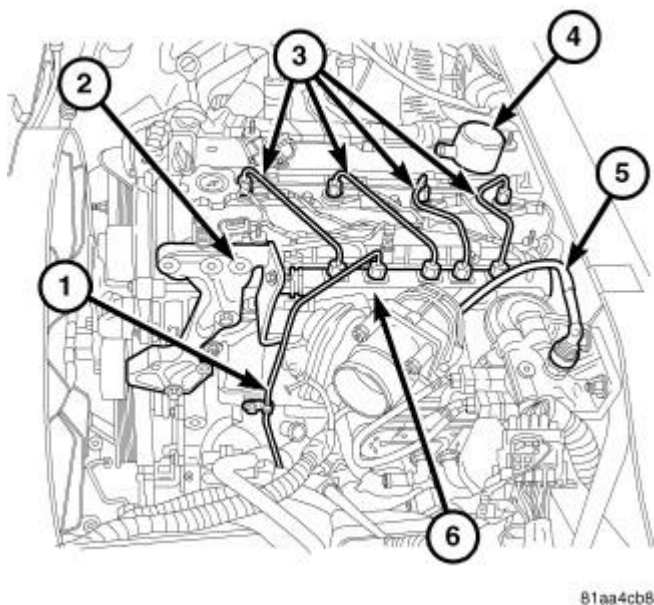


Fig. 262: FUEL RAIL

Courtesy of CHRYSLER LLC

1. Remove the engine cover. See Engine/Cylinder Head/COVER(S), Cylinder Head - Removal.

NOTE: Inspect the oil drain back access hole in the intake manifold/cylinder head cover to assure that it is free of obstruction.

2. Remove the oil separator fasteners and oil separator (4).

Installation

INSTALLATION

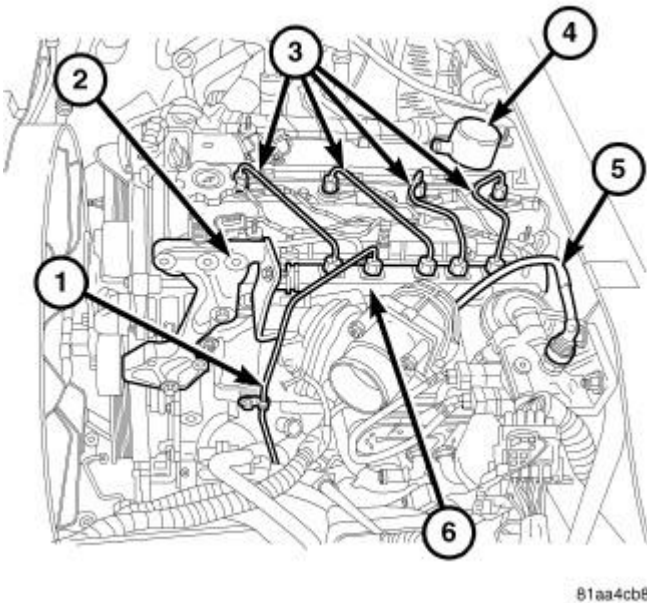


Fig. 263: FUEL RAIL

Courtesy of CHRYSLER LLC

NOTE: Inspect the oil drain back access hole in the intake manifold/cylinder head cover to assure that it is free of obstruction.

1. Lubricate the oil separator o-rings with clean engine oil.
2. Carefully position and push down on the oil separator to seat.
3. Install the oil separator retaining fasteners. Tighten fasteners to 10.8 N.m (96 lbs. in.).
4. Install the camshaft cover. See **Engine/Cylinder Head/COVER(S), Cylinder Head - Installation.**

VALVE, OIL PRESSURE RELIEF

Description

DESCRIPTION

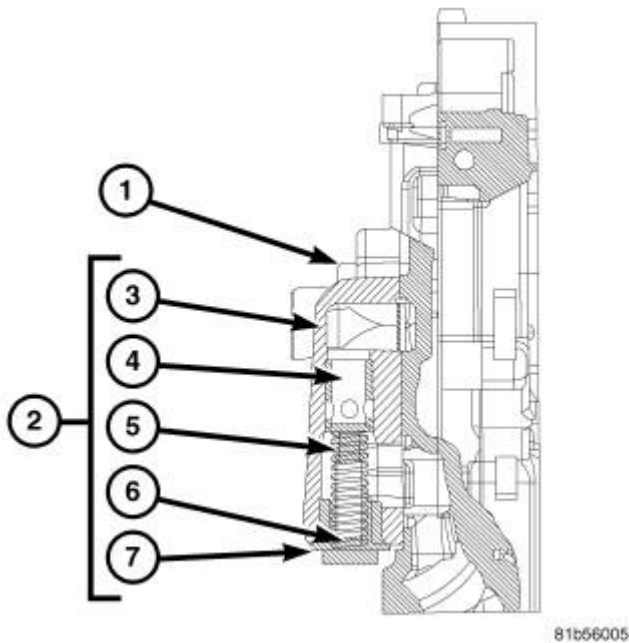


Fig. 264: Oil Pressure Relief Valve Components
 Courtesy of CHRYSLER LLC

The oil pressure relief valve is built into the front cover (1). The oil pressure relief valve assembly (2) consists of several components. The plunger (4) is held in place by the spring (5). The plug (6) keeps the plug and spring in place, and the o-ring (7) prevents oil from leaking past the plug (6).

In the case of excessively high oil pressure, the oil pressure on the piston (4) overcomes the spring (5) pressure and the piston is forced off its seat. When the piston is forced off its seat, a drain back passage is opened and the excess oil pressure is vented back into the crankcase.

MANIFOLDS

MANIFOLD, EXHAUST

Removal

REMOVAL

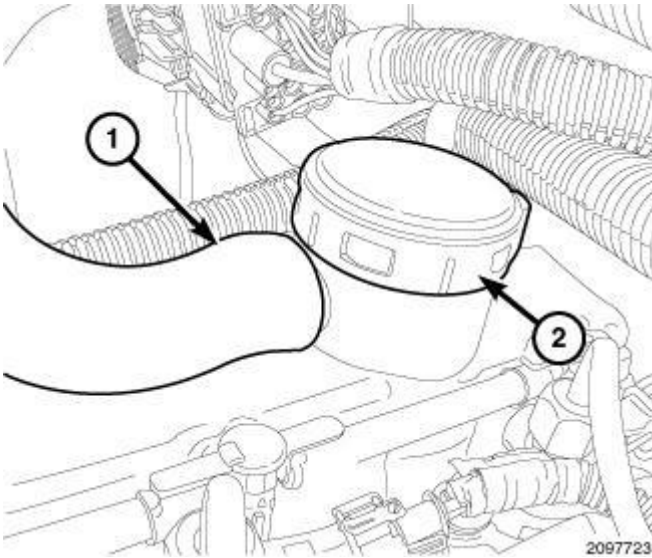


Fig. 265: Crankcase Vent Hose & Oil Separator
Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Remove the air cleaner assembly. See **Engine/Air Intake System/BODY, Air Cleaner - Removal**.
3. Disconnect the crankcase vent hose (1) from the oil separator (2).
4. Remove the air cleaner outlet tube.

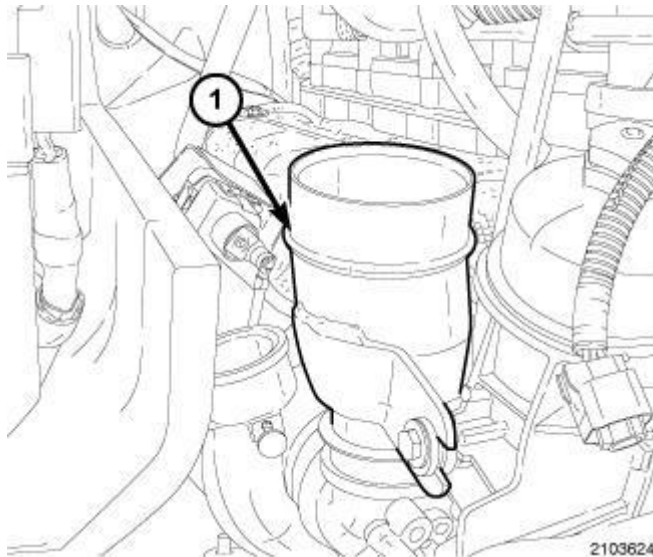


Fig. 266: Turbocharger Inlet Elbow
Courtesy of CHRYSLER LLC

5. Remove the air cleaner outlet tube from turbocharger inlet elbow.
6. Remove the turbocharger outlet hose from CAC inlet.

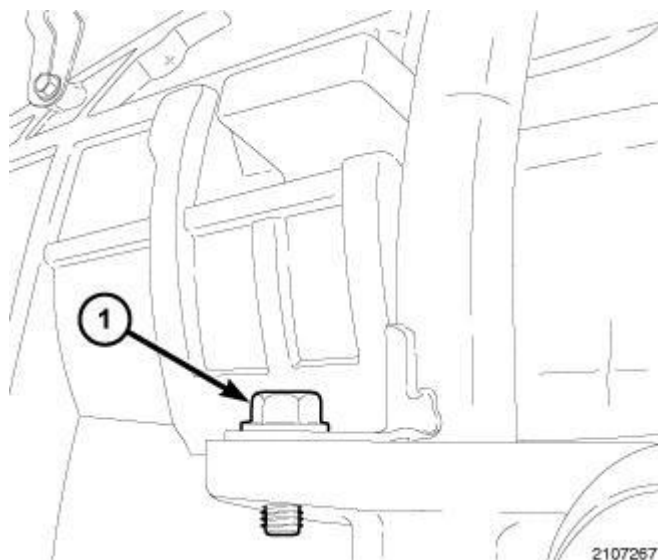


Fig. 267: Lower Transmission Fill Tube Bolt
Courtesy of CHRYSLER LLC

7. If equipped, remove the lower transmission fill tube bolt (1).

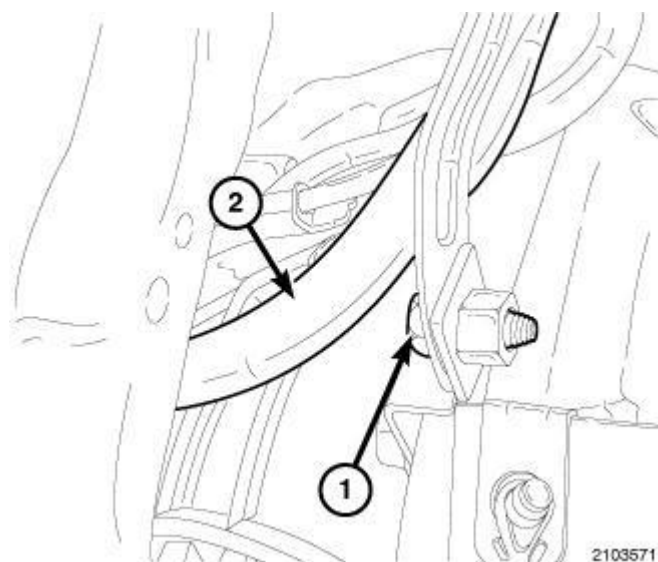


Fig. 268: Transmission Fill Tube And Bolt
Courtesy of CHRYSLER LLC

8. If equipped, remove the bolt (1) and the transmission fill tube (2).
9. Remove the catalytic converter. Refer to **Exhaust System/CONVERTER, Catalytic - Removal**.

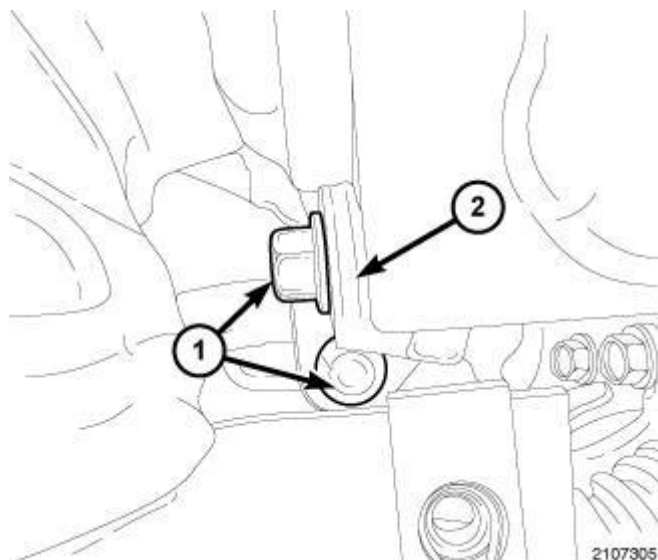


Fig. 269: Turbocharger Support Bracket
Courtesy of CHRYSLER LLC

10. Remove the bolts (1) from the turbocharger to engine support bracket and remove the bracket.


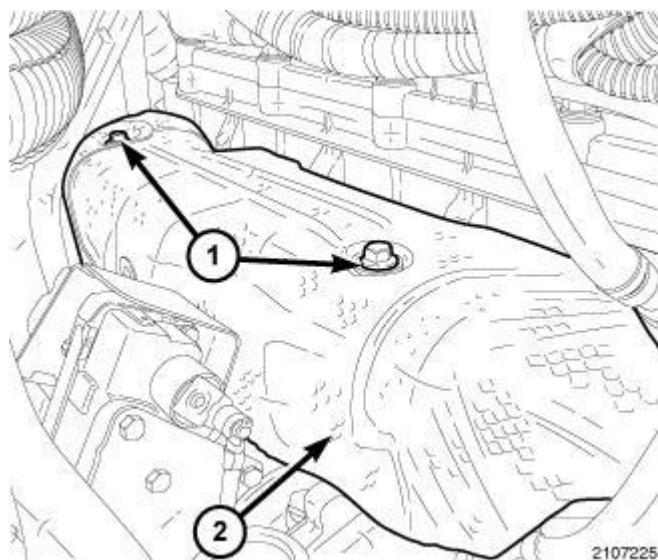


Fig. 270: Exhaust Manifold Heat Shield
Courtesy of CHRYSLER LLC


11. Remove the bolts (1) and exhaust manifold heat shield (2).

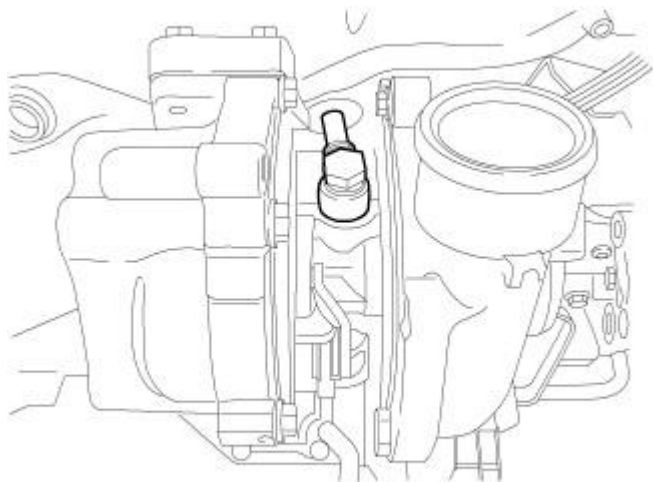

81abecdd

Fig. 271: TURBOCHARGER FEED LINE
Courtesy of CHRYSLER LLC

12. Remove the turbocharger oil feed line.

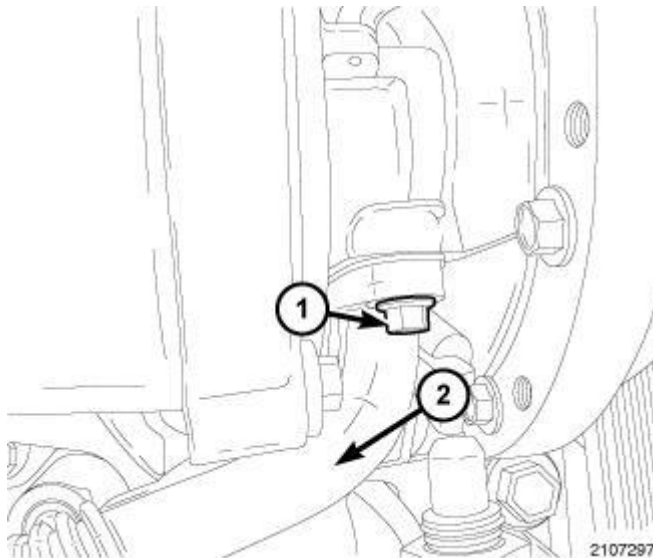

2107297

Fig. 272: Turbocharger Oil Return Line
Courtesy of CHRYSLER LLC

13. Remove the bolt (1) and turbocharger oil return line (2).

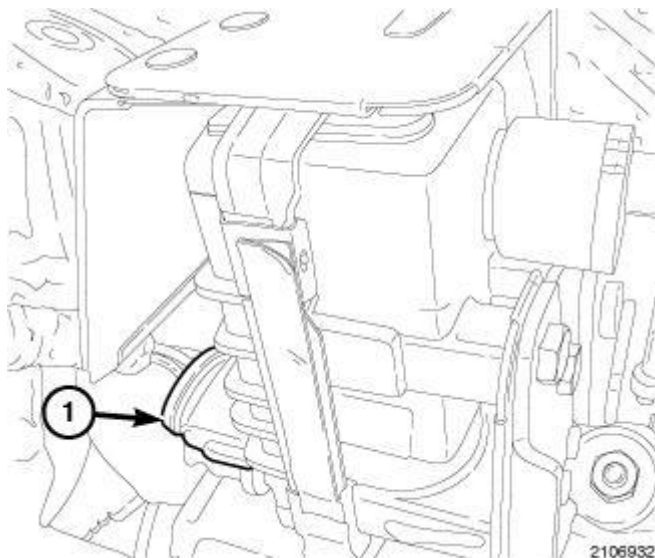


Fig. 273: Turbocharger Module Connector
Courtesy of CHRYSLER LLC

14. Disconnect the turbocharger module connector (1).

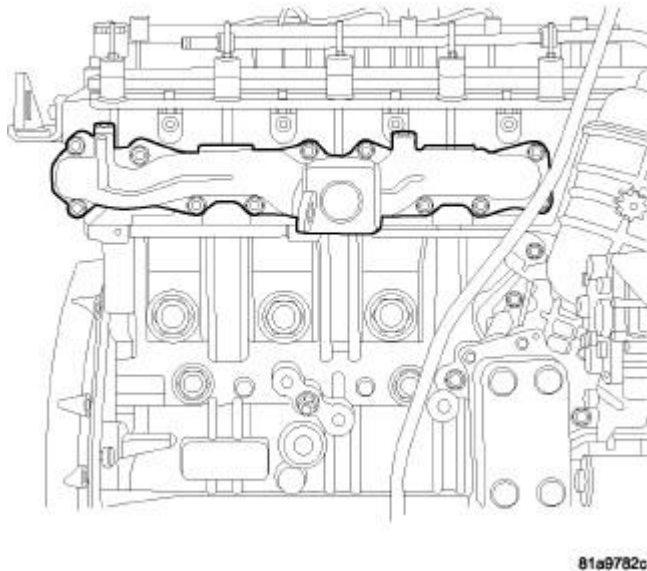


Fig. 274: MANIFOLD - EXHAUST
Courtesy of CHRYSLER LLC

NOTE: Turbocharger removed for clarity.

15. Remove the nuts and the exhaust manifold and turbocharger as an assembly.
16. If necessary, remove the turbocharger from exhaust manifold.


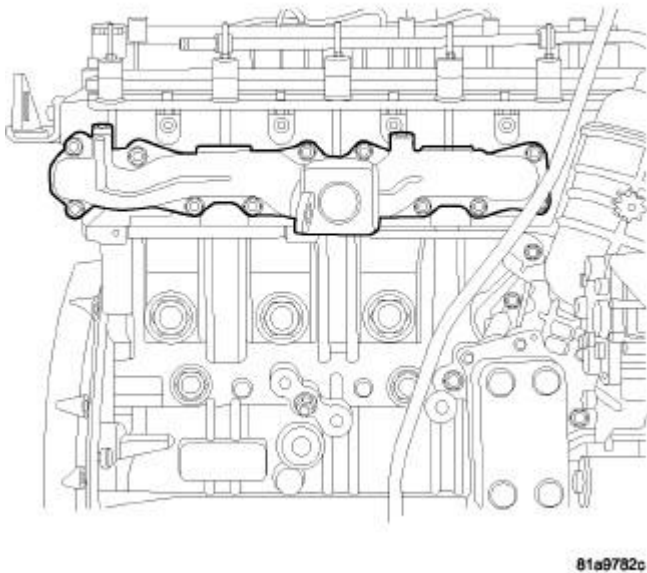
Installation**INSTALLATION**

Fig. 275: MANIFOLD - EXHAUST
Courtesy of CHRYSLER LLC

1. Clean and inspect the gasket surface of the exhaust manifold and cylinder head.
2. If necessary, clean and inspect the gasket surface of the exhaust manifold and turbocharger.
3. If necessary, using a new gasket install the turbocharger to the exhaust manifold. Tighten nuts to 32 N.m (23 ft. lbs.).
4. Using a new exhaust manifold gasket, install the exhaust manifold and the retaining nuts finger tight.

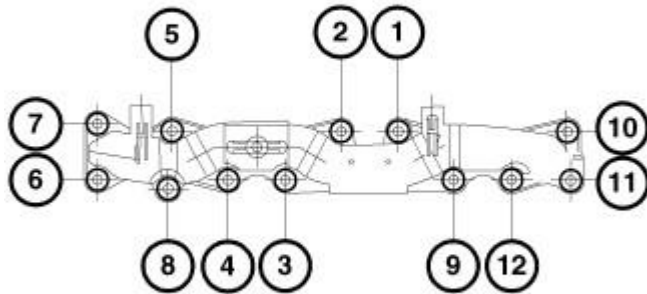


81ad7d48

Fig. 276: EXHAUST MANIFOLD TORQUE SEQUENCE

Courtesy of CHRYSLER LLC

5. Using the tightening sequence shown in illustration, tighten the exhaust manifold nuts to 36 N.m (27 ft. lbs.).
6. Repeat the same tightening procedure again.

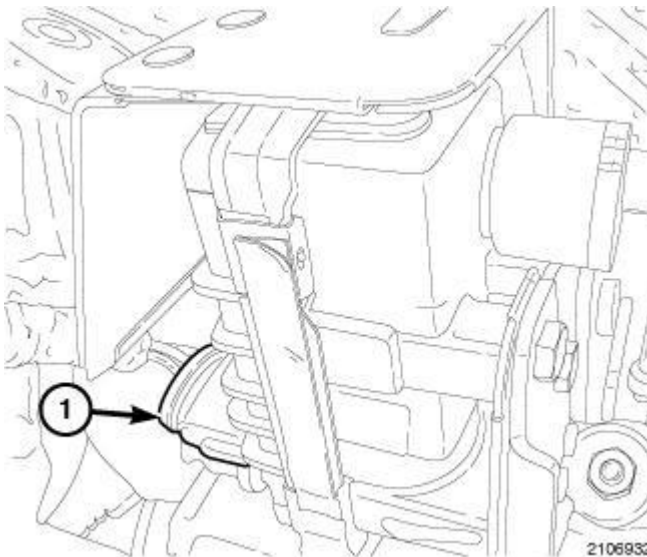

2106932

Fig. 277: Turbocharger Module Connector

Courtesy of CHRYSLER LLC

7. Connect the turbocharger module harness connector (1).

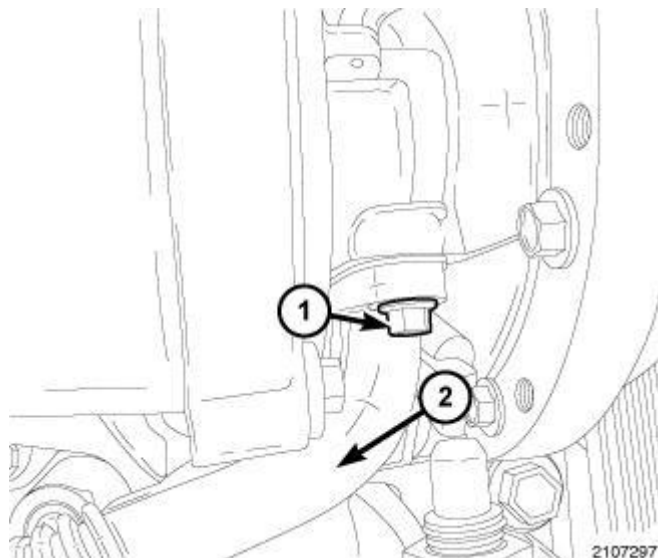


Fig. 278: Turbocharger Oil Return Line
Courtesy of CHRYSLER LLC

8. Install the turbocharger oil return line (2) and bolt (1). Tighten to 15 N.m (133 in. lbs.).

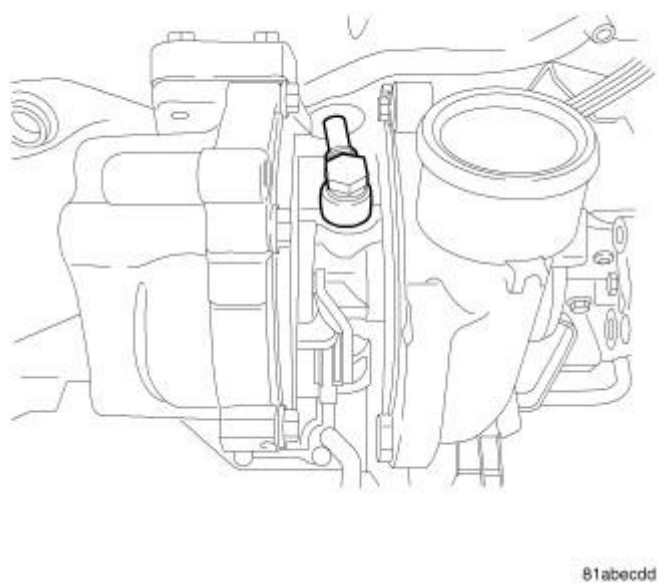


Fig. 279: TURBOCHARGER FEED LINE
Courtesy of CHRYSLER LLC

9. Install the turbocharger oil feed line. Tighten to 24 N.m (18 ft. lbs).

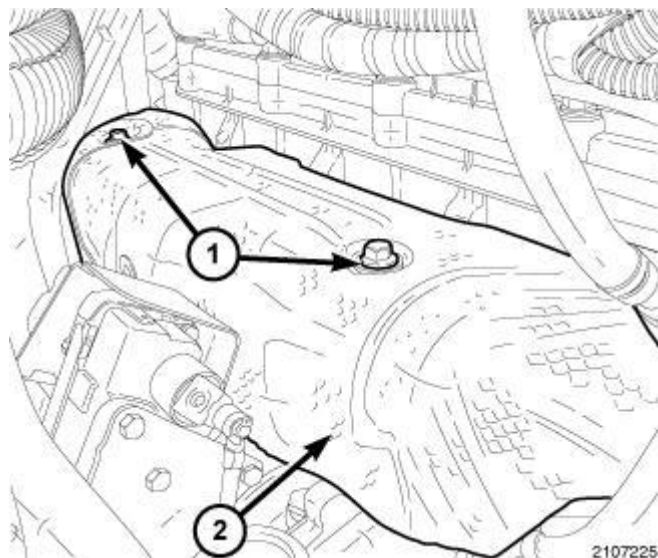


Fig. 280: Exhaust Manifold Heat Shield
 Courtesy of CHRYSLER LLC

10. Install the exhaust manifold heat shield (2) and the heat shield bolts (1).

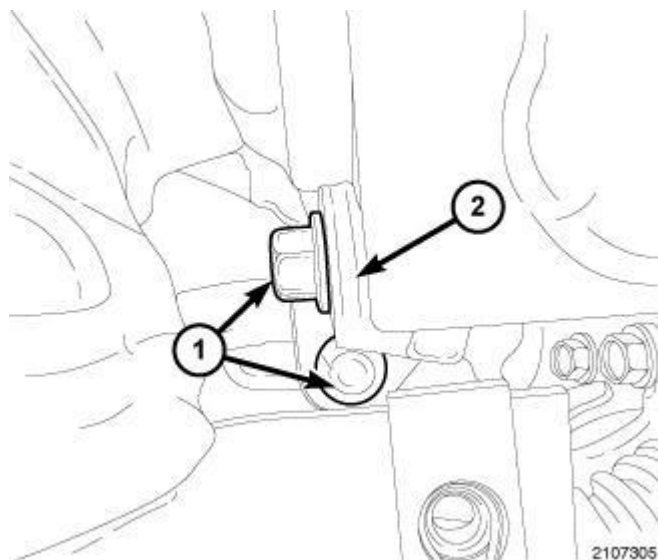


Fig. 281: Turbocharger Support Bracket
 Courtesy of CHRYSLER LLC

11. Position the turbocharger to engine support brace and install the bolts. Tighten to 32 N.m (23 ft. lbs).

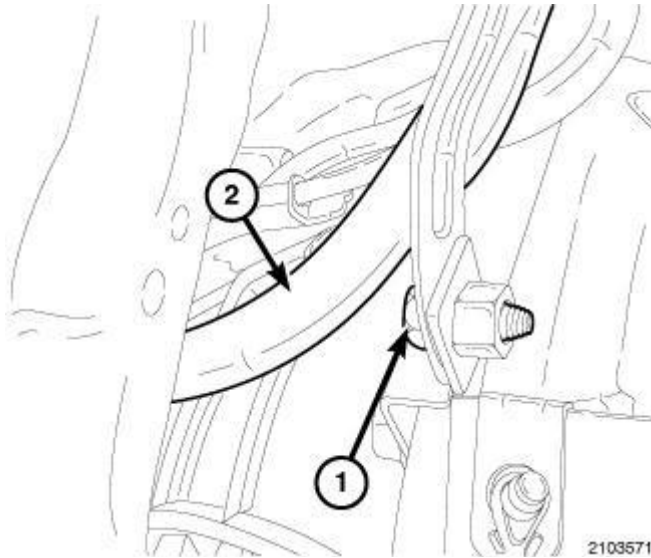


Fig. 282: Transmission Fill Tube And Bolt
 Courtesy of CHRYSLER LLC

12. Install the catalytic converter. Refer to **Exhaust System/CONVERTER, Catalytic - Installation** .
13. If equipped, install the transmission fill tube (2) and the bolt (1). Tighten to 11 N.m 97 in. lbs.).

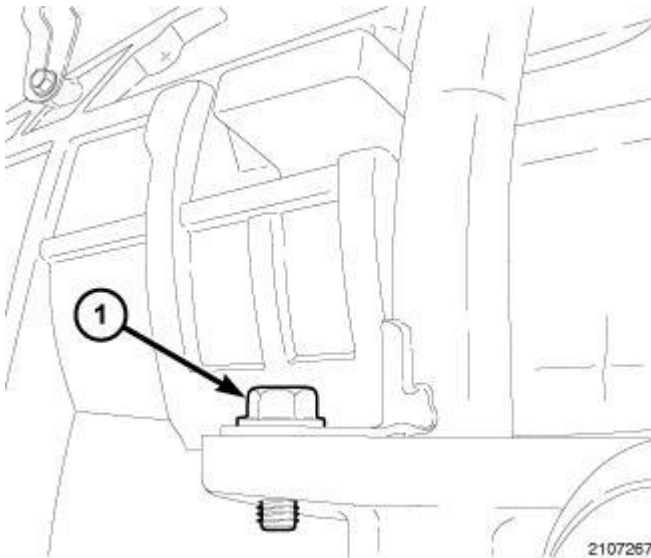


Fig. 283: Lower Transmission Fill Tube Bolt
 Courtesy of CHRYSLER LLC

14. If equipped, install the lower transmission fill tube bolt (1). Tighten to 11 N.m 97 in. lbs.).

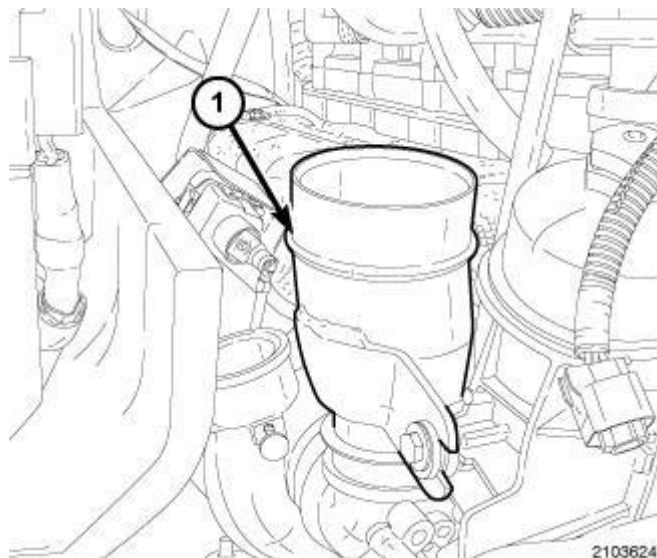


Fig. 284: Turbocharger Inlet Elbow
Courtesy of CHRYSLER LLC

15. Install the turbocharger outlet hose to CAC inlet.
16. Install the air cleaner outlet tube to turbocharger inlet elbow (1).

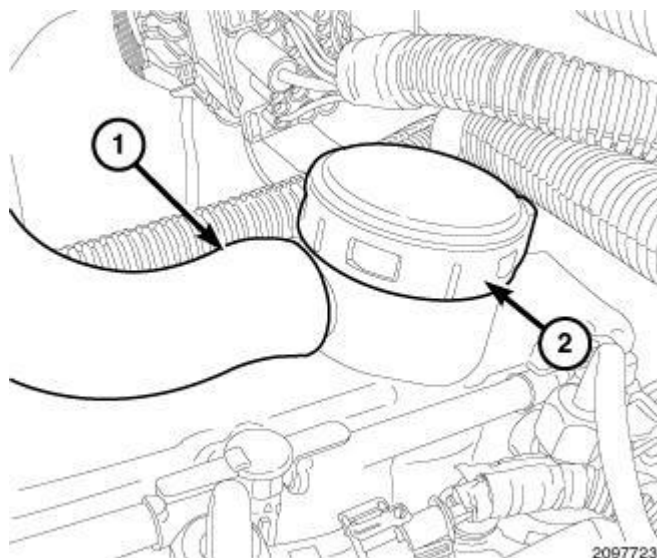


Fig. 285: Crankcase Vent Hose & Oil Separator
Courtesy of CHRYSLER LLC

17. Install the air cleaner outlet tube.
18. Connect the crankcase vent hose (1) to the oil separator (2).
19. Install the air cleaner assembly. See **Engine/Air Intake System/BODY, Air Cleaner - Installation.**
20. Connect the negative battery cable.

MANIFOLD, INTAKE

Removal

REMOVAL - INTAKE MANIFOLD

1. Disconnect the negative battery cable.
2. Center and lock the steering wheel.
3. Remove the front lower splash shield.
4. Drain the coolant system. Refer to **Cooling - Standard Procedure**.
5. Disconnect the high pressure line at high pressure pump.
6. Disconnect the airflow control valve inlet hose.
7. Disconnect coolant reservoir hose from radiator.
8. Remove the coolant hoses from the coolant recovery bottle.
9. Detach the relays from coolant reservoir.
10. Remove the coolant recovery bottle.
11. Remove the A/C suction line. Refer to **Heating and Air Conditioning/Plumbing/LINE, A/C Suction - Removal**.
12. Remove the A/C liquid line. Refer to **Heating and Air Conditioning/Plumbing/LINE, A/C Liquid - Removal**.
13. Remove the air cleaner assembly. See **Engine/Air Intake System/BODY, Air Cleaner - Removal**.
14. Remove the serpentine belt. Refer to **Cooling/Accessory Drive/BELT, Serpentine - Removal**.


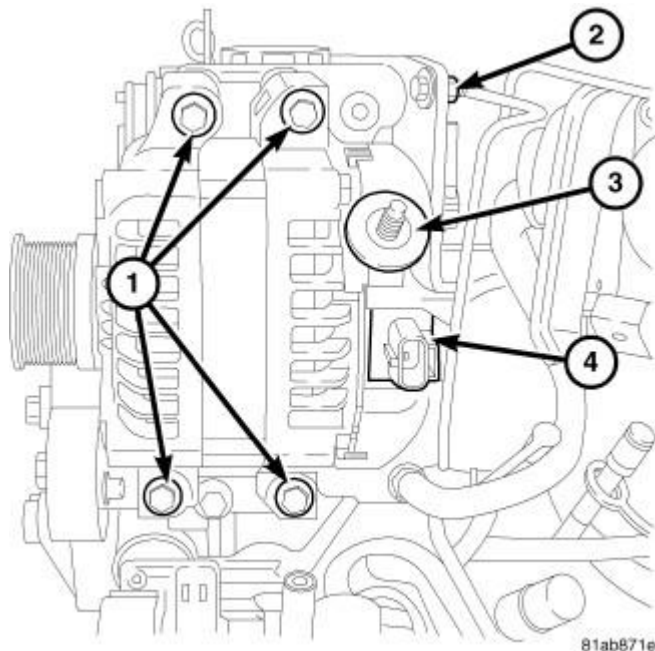


Fig. 286: GENERATOR
Courtesy of CHRYSLER LLC

15. Disconnect the generator harness connector (4).
16. Remove the battery feed wire from the generator (3).

17. Remove bolts (1) and the generator.

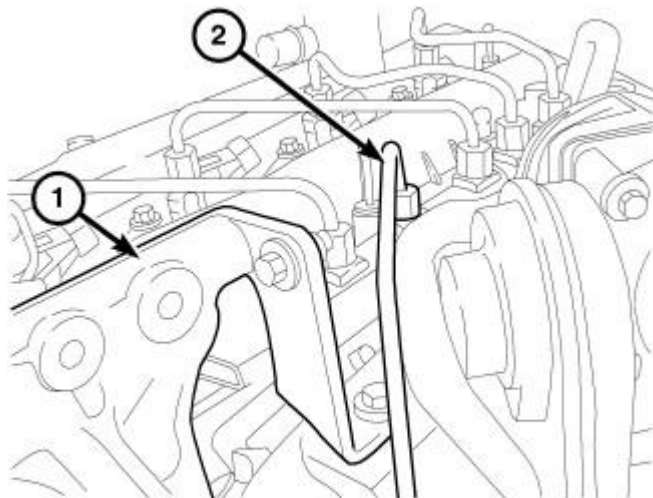

81ab8717

Fig. 287: GENERATOR BRACKET

Courtesy of CHRYSLER LLC

18. Remove the glow plug wire harness clip from generator mounting bracket.
19. Remove the generator brace.
20. Remove the generator mounting bracket (1).

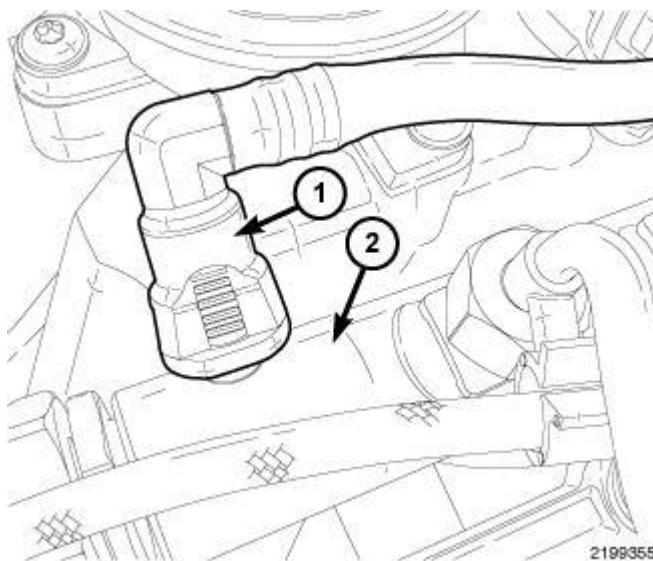


Fig. 288: Fuel Return Line & Fuel Rail

Courtesy of CHRYSLER LLC

21. Disconnect the fuel return (1) line from fuel rail (2).


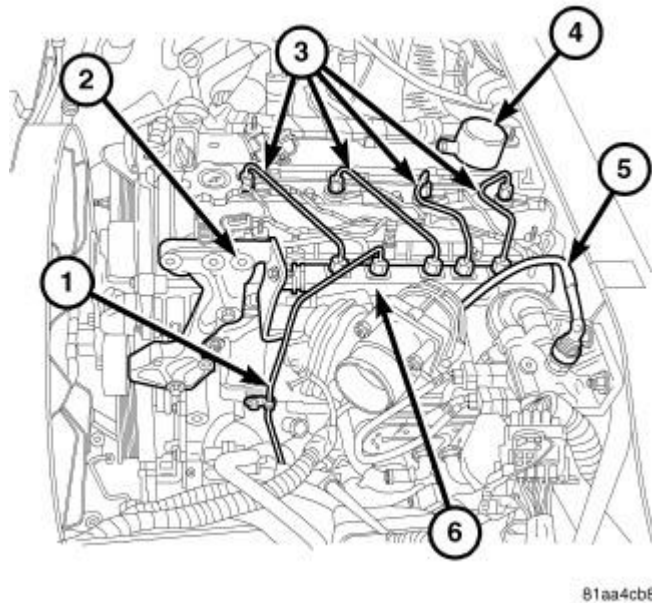


Fig. 289: FUEL RAIL

Courtesy of CHRYSLER LLC

NOTE: High pressure fuel lines must be replaced with new lines any time they are removed. Also, protective caps should be installed on the fuel injector any time the lines are removed.


22. Remove bolt securing high pressure line (1) to intake manifold.
23. Remove the high pressure fuel lines (3).
24. Disconnect the fuel rail pressure sensor harness connector.
25. Disconnect the fuel rail solenoid harness connector.
26. Remove the high pressure line from fuel rail and high pressure pump.
27. Remove nuts and the fuel rail (6).

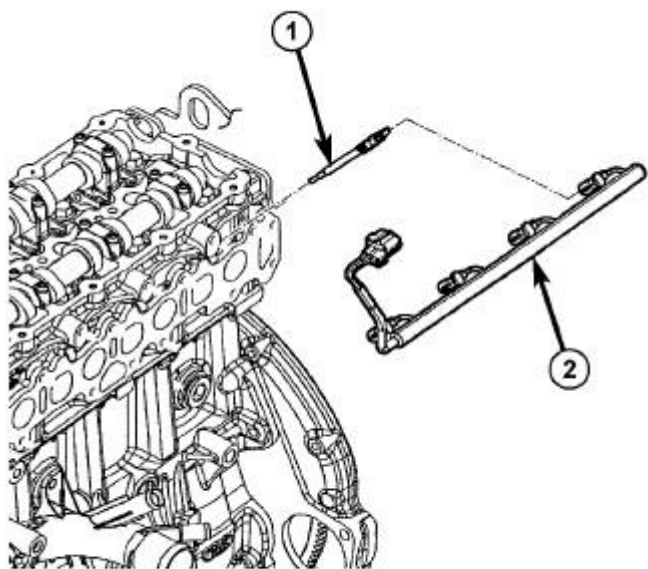

81b16a21

Fig. 290: Glow Plugs & Wiring Harness
Courtesy of CHRYSLER LLC

28. Disconnect and remove the glow plug wire harness (2).

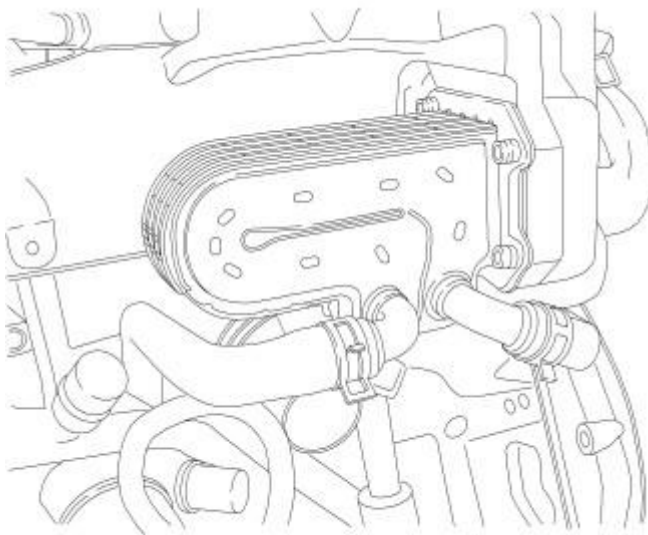

81ab86e4

Fig. 291: EGR COOLER
Courtesy of CHRYSLER LLC

29. Disconnect the IAT/BPS harness connector.

30. Remove the coolant hoses from EGR cooler.
31. Remove the EGR cooler.
32. Disconnect the EGR valve vacuum tube.

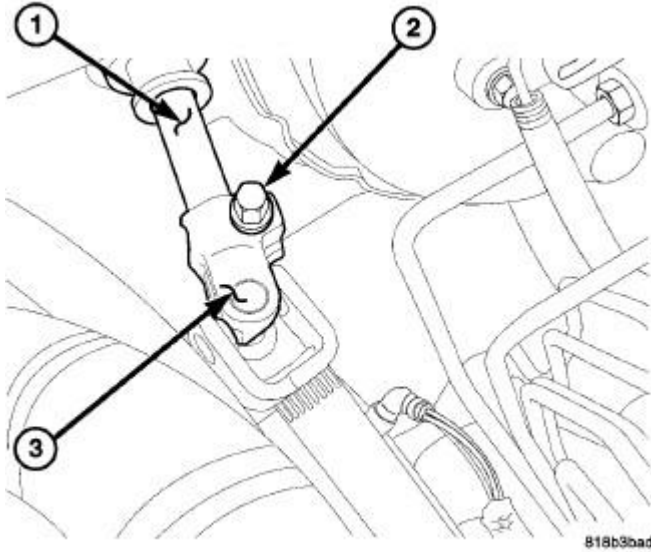


Fig. 292: PINCH BOLT AT THE COLUMN SHAFT
Courtesy of CHRYSLER LLC

33. Remove the left front wheelhouse splash shield. Refer to **Body/Exterior/SHIELD, Splash - Removal** .

NOTE: Care should be given not to allow the steering wheel to rotate after the intermediate shaft is separated from coupler.

34. Remove the pinch bolt (2) at the upper intermediate shaft (1).
35. Separate the upper coupler on the lower shaft (3) from the upper intermediate shaft (1) and position aside.

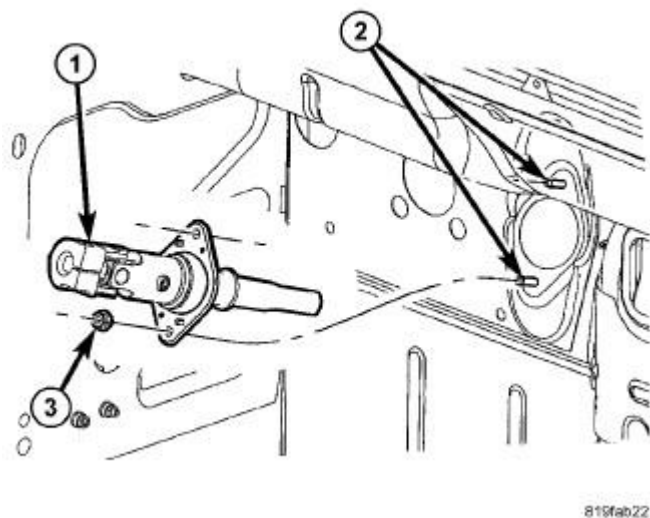


Fig. 293: Upper Intermediate Shaft To Cowl
Courtesy of CHRYSLER LLC

36. Remove the two nuts (3) securing the upper intermediate shaft to the cowl and remove the shaft (1) from the studs (2).

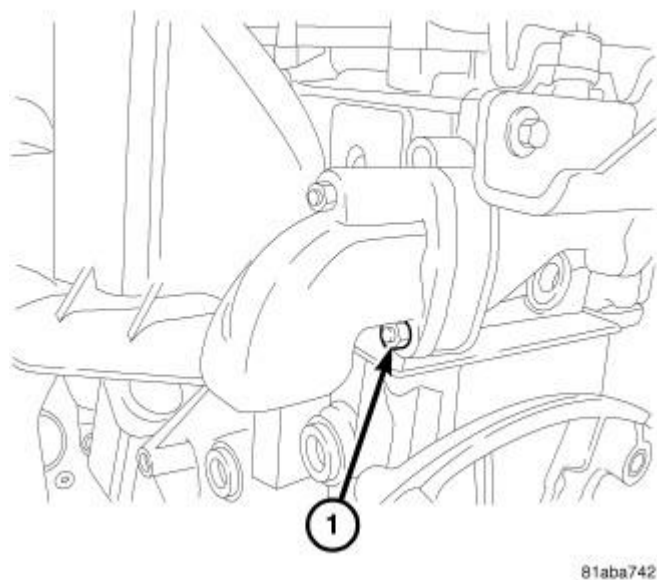


Fig. 294: Intake Manifold Nuts
Courtesy of CHRYSLER LLC

37. Remove the intake manifold retaining nuts.

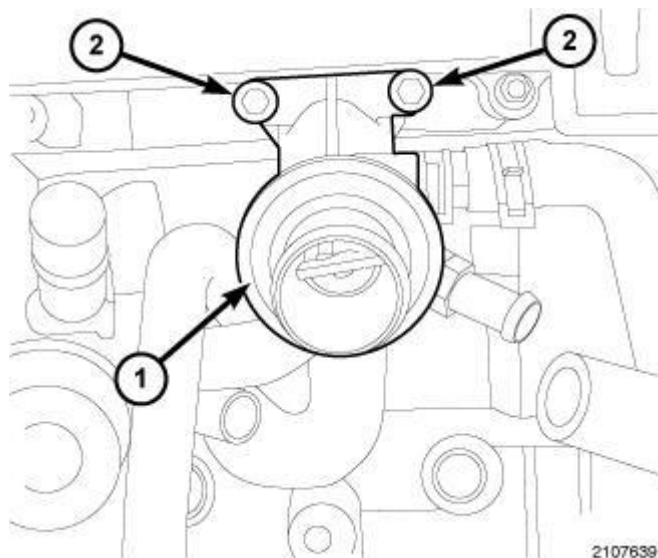


Fig. 295: Thermostat Housing & Bolts
 Courtesy of CHRYSLER LLC

38. Remove the thermostat housing (1).

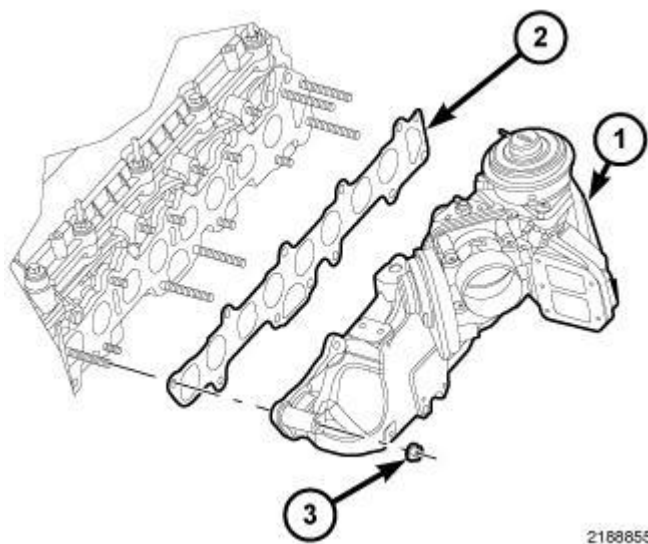


Fig. 296: Identifying Manifold Retaining Nuts, Intake Manifold & Intake Manifold Gasket
 Courtesy of CHRYSLER LLC

39. Remove the intake manifold (1).
40. Remove the intake manifold gasket (2).

Installation

INSTALLATION - INTAKE MANIFOLD

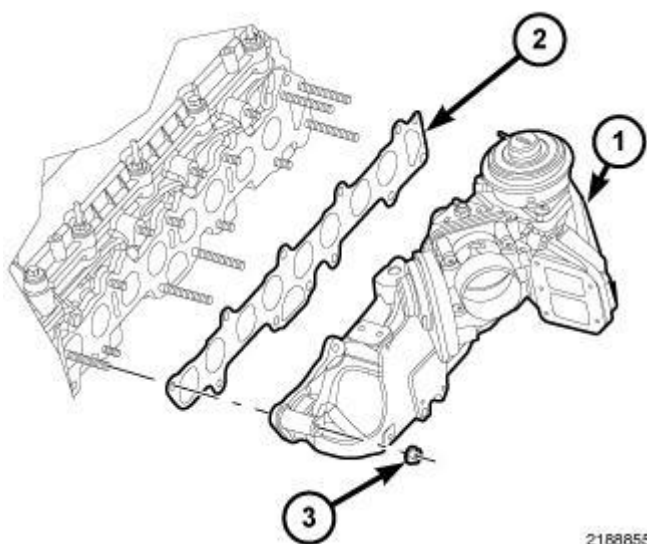


Fig. 297: Identifying Manifold Retaining Nuts, Intake Manifold & Intake Manifold Gasket
Courtesy of CHRYSLER LLC

1. Clean and inspect the gasket surface of the intake manifold.
2. Clean and inspect the gasket surface of the cylinder head.
3. Install the intake manifold gasket (2).
4. Install the intake manifold (1).


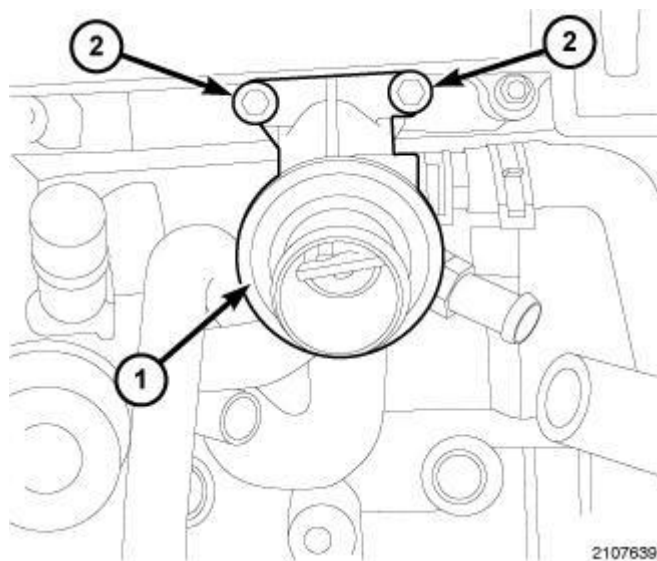


Fig. 298: Thermostat Housing & Bolts
Courtesy of CHRYSLER LLC


5. Install the thermostat housing (1) and tighten nuts (2) finger tight.

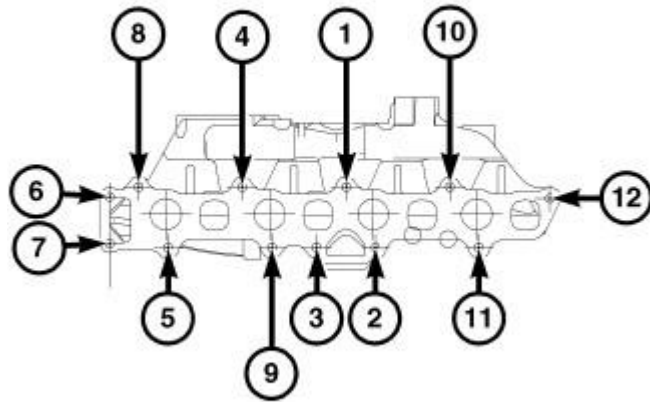

81adb13b

Fig. 299: Intake Manifold Bolt Tightening Sequence
Courtesy of CHRYSLER LLC

6. Install the intake manifold retaining nuts. Using the sequence shown in illustration, tighten the intake manifold nuts to 25 N.m (18 ft. lbs.).

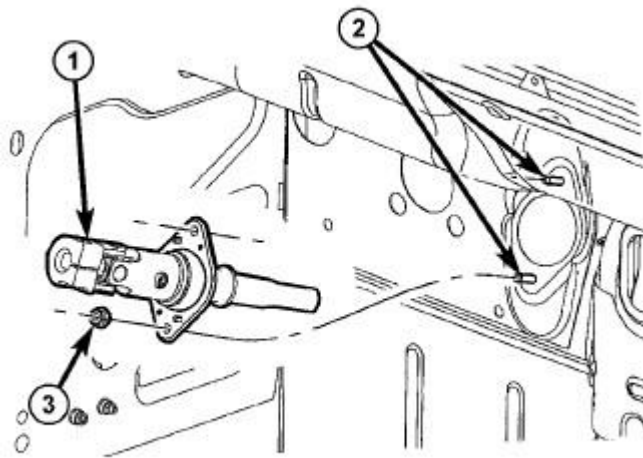

819fab22

Fig. 300: Upper Intermediate Shaft To Cowl
Courtesy of CHRYSLER LLC

7. Install the intermediate shaft (1) to studs (2) at cowl.
8. Install the mounting nuts (3). Tighten to 13 N.m (115 in. lbs.).

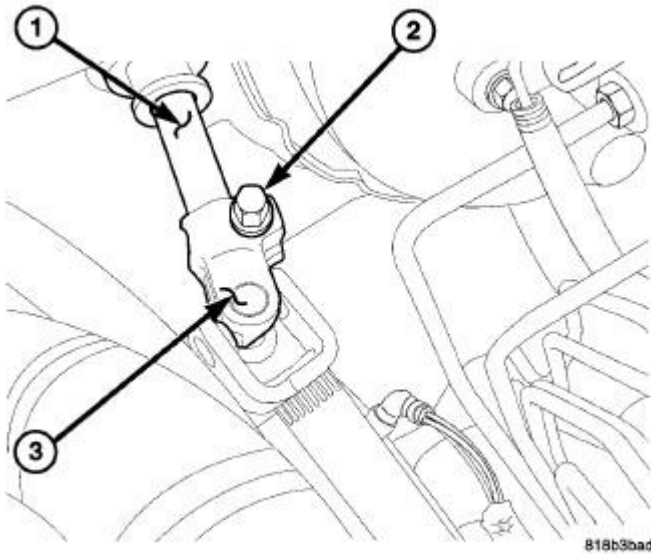


Fig. 301: PINCH BOLT AT THE COLUMN SHAFT
 Courtesy of CHRYSLER LLC

NOTE: Care should be given not to allow the steering wheel to rotate after the intermediate shaft is separated from coupler.

9. Install the lower intermediate shaft coupler (3) to upper intermediate shaft (1).
10. Install the pinch bolt (2). Tighten to 49 N.m (36 ft. lbs.).
11. Install the left front wheelhouse splash shield.


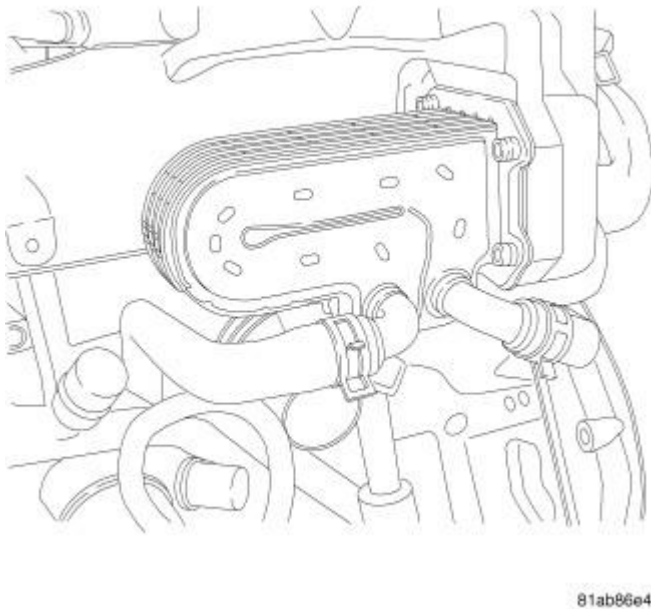


Fig. 302: EGR COOLER

Courtesy of CHRYSLER LLC


12. Connect the EGR valve vacuum tube.
13. Clean the gasket mating surfaces.
14. Using a new gasket, install the EGR cooler. Tighten to 15 N.m (177 in. lbs.).
15. Install the coolant hoses to the EGR cooler.
16. Connect the IAT/BPS harness connector.

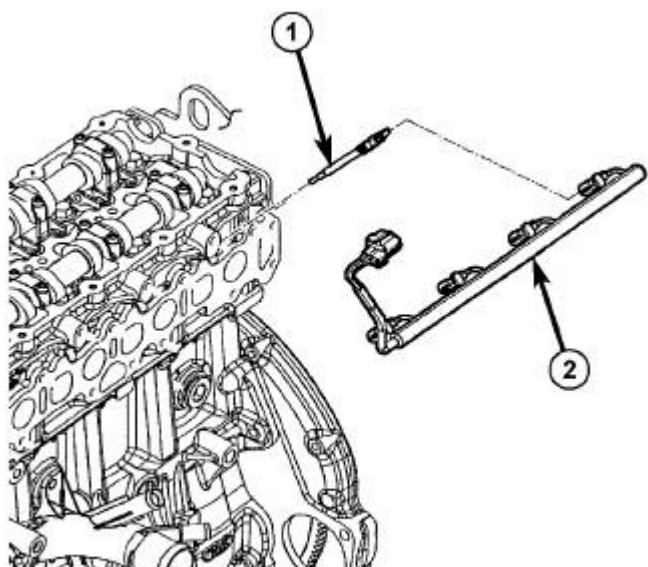

81b16a21

Fig. 303: Glow Plugs & Wiring Harness
Courtesy of CHRYSLER LLC

17. Install and connect the glow plug wire harness (2).

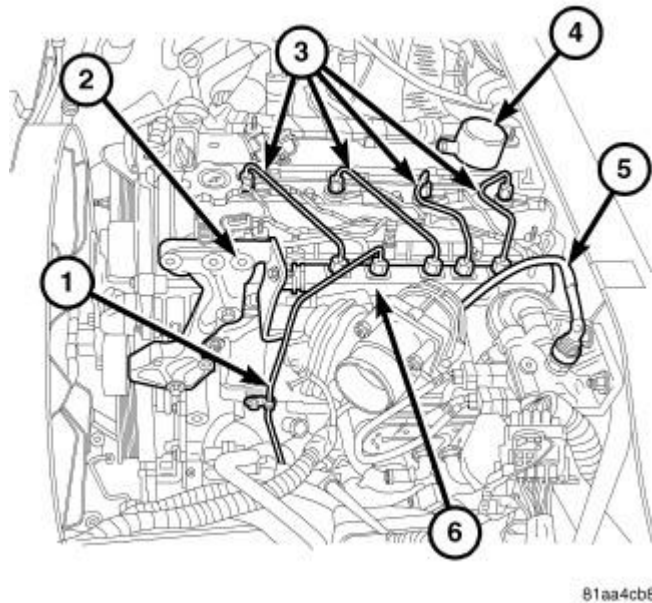**Fig. 304: FUEL RAIL**

Courtesy of CHRYSLER LLC

18. Install the fuel rail (6). Tighten nuts to 24 N.m (18 ft. lbs.).
19. Connect the fuel rail solenoid harness connector.
20. Connect the fuel rail pressure sensor harness connector.

NOTE: High pressure fuel lines must be replaced with new lines any time they are removed.

21. Position the high pressure line and install the high pressure line to fuel rail and high pressure pump. Tighten high pressure at fuel rail to 5 N.m (44 in. lbs.) plus an additional 75 degrees, and 28 N.m (20 ft. lbs.) at high pressure pump.
22. Remove the protective caps and install new high pressure fuel lines (3). Tighten 5 N.m (44 in. lbs.) plus an additional 75 degrees at the fuel rail side, and 28 N.m (20 ft. lbs.) at the fuel injectors.
23. Install bolt securing high pressure line (1) to intake manifold. Tighten bolt to 15 N.m (133 in. lbs.).

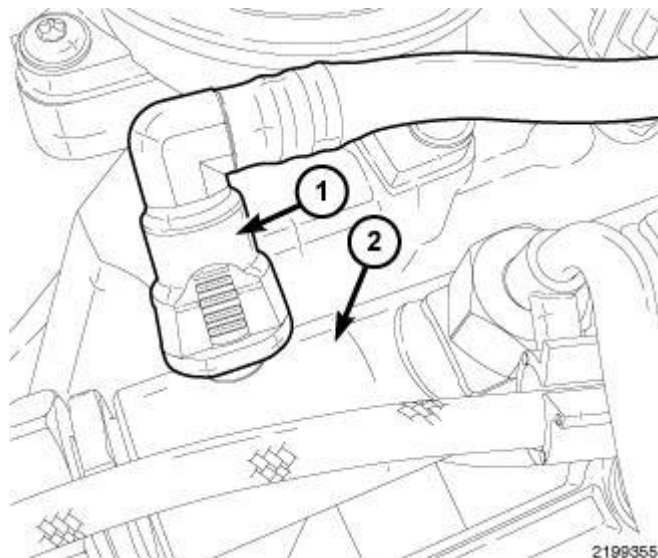


Fig. 305: Fuel Return Line & Fuel Rail
Courtesy of CHRYSLER LLC

24. Connect the fuel return line (1) to fuel rail (2).

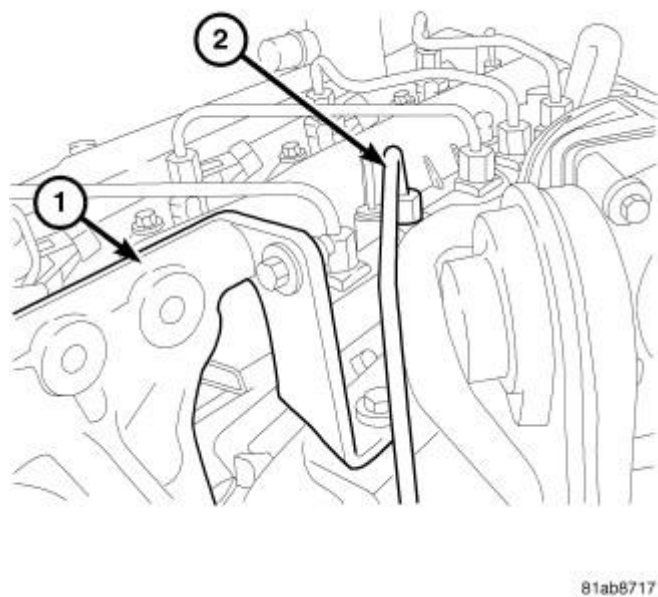


Fig. 306: GENERATOR BRACKET
Courtesy of CHRYSLER LLC

25. Install the generator bracket (1). Tighten to 45 N.m (33 ft. lbs.).
26. Install the generator brace.
27. Remove the glow plug wire harness clip from generator mounting bracket.

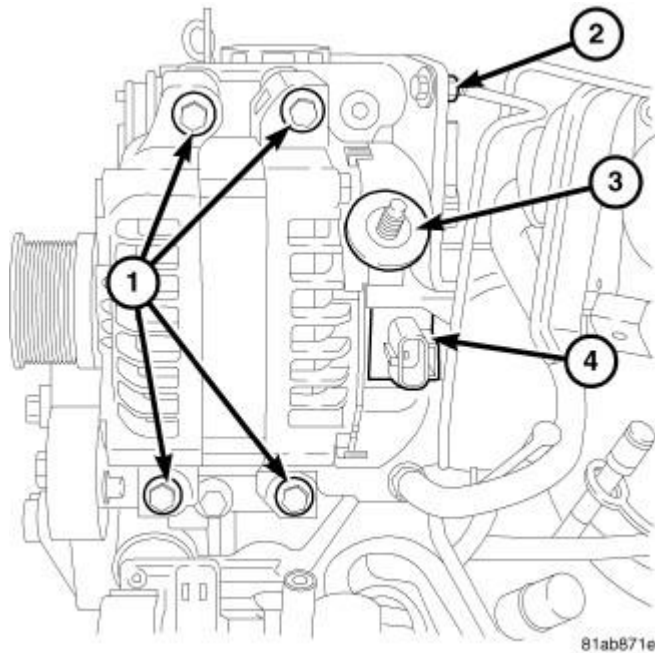


Fig. 307: GENERATOR

Courtesy of CHRYSLER LLC

28. Install the generator. Tighten to 33 N.m (24 ft. lbs).
29. Install the battery feed wire to the generator (3).
30. Connect the generator connector (4).
31. Install the serpentine belt. Refer to **Cooling/Accessory Drive/BELT, Serpentine - Installation**.
32. Install the air cleaner assembly. See **Engine/Air Intake System/BODY, Air Cleaner - Installation**.
33. Install the A/C liquid line. Refer to **Heating and Air Conditioning/Plumbing/LINE, A/C Liquid - Installation**.
34. Install the A/C suction line. Refer to **Heating and Air Conditioning/Plumbing/LINE, A/C Suction - Installation**.
35. Install the coolant recovery bottle. Tighten to 10 N.m (89 in. lbs.)
36. Attach the relays to the coolant reservoir.
37. Install the coolant hoses to the coolant recovery bottle.
38. Connect coolant reservoir hose to radiator.
39. Connect the airflow control valve inlet hose.
40. Fill the cooling system. Refer to **Cooling - Standard Procedure**.
41. Install the front lower splash shield.
42. Remove the steering wheel lock
43. Connect the negative battery cable.
44. Start the engine and check for leaks.

TURBOCHARGER SYSTEM

COOLER AND HOSES, CHARGE AIR**Removal****REMOVAL**

WARNING: If the engine was just turned off, the air intake system tubes may be hot.

NOTE: When servicing the Air Charge Cooler and/or Turbocharger, the Air Charger Hose (orange) seal located between the Air Charge Hose and Turbocharger must be replaced.

NOTE: Note the location of the rubber charge air cooler to A/C condenser and air charger cooler to radiator air seals. The seals are use to prevent overheating and improve charge air and A/C efficiency.

WARNING: Refer to the applicable warnings and cautions for this system before performing the following operation. Refer to Heating and Air Conditioning/Plumbing - Warning . Refer to Heating and Air Conditioning/Plumbing - Caution . Failure to follow these instructions may result in possible serious or fatal injury.

1. Disconnect the battery negative cable.
2. Raise and support the vehicle.
3. Remove the wheelhouse splash shield. Refer to Body/Exterior/SHIELD, Splash - Removal .

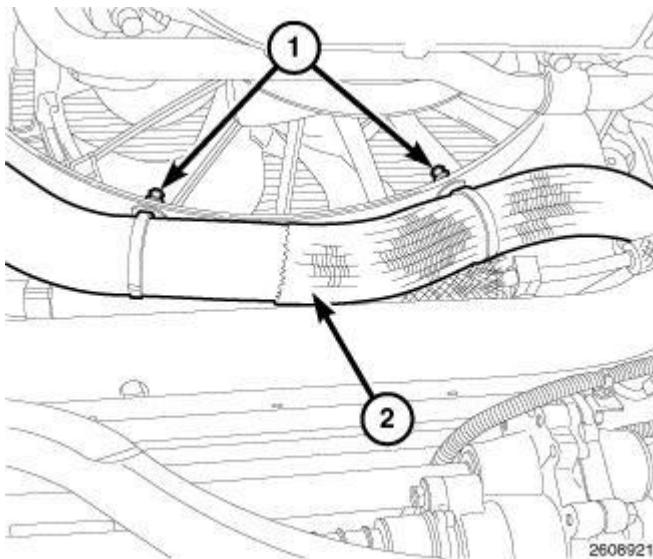


Fig. 308: Radiator Hose And Fan Shroud Retainers
Courtesy of CHRYSLER LLC

4. Remove the lower radiator seal push pins.
5. Remove the lower radiator hose to fan shroud retainers (1).
6. Remove the lower electric cooling fan mounting bolts.
7. Drain the coolant from the radiator. Refer to **Cooling - Standard Procedure**.
8. Remove the lower radiator hose (2).
9. Lower the vehicle.

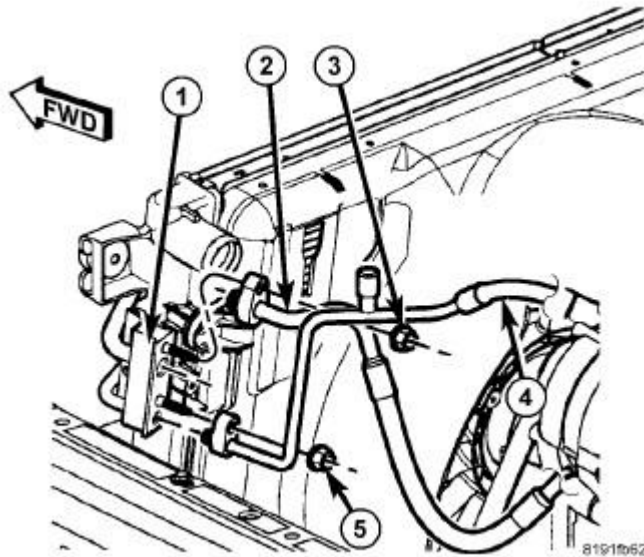


Fig. 309: Refrigerator Lines To Condenser
Courtesy of CHRYSLER LLC

10. Remove the grille. Refer to **Body/Exterior/GRILLE - Removal**.
11. Recover the refrigerant from the refrigerant system. Refer to **Heating and Air Conditioning/Plumbing - Standard Procedure**.
12. Remove the air filter housing assembly. See **Engine/Air Intake System/BODY, Air Cleaner - Removal**.
13. Remove the viscous fan, cooling fan and fan shroud as an assembly. Refer to **Cooling/Engine/FAN, Cooling - Removal**.
14. Remove the upper radiator hose.
15. Remove the nuts (3 and 5) that secure the A/C discharge line (2) and A/C liquid line (4) to the A/C condenser (1).
16. Disconnect the A/C discharge and liquid lines from the A/C condenser and remove and discard the O-ring seals and gaskets.
17. Install plugs into, or tape over the opened refrigerant line fittings and condenser ports.

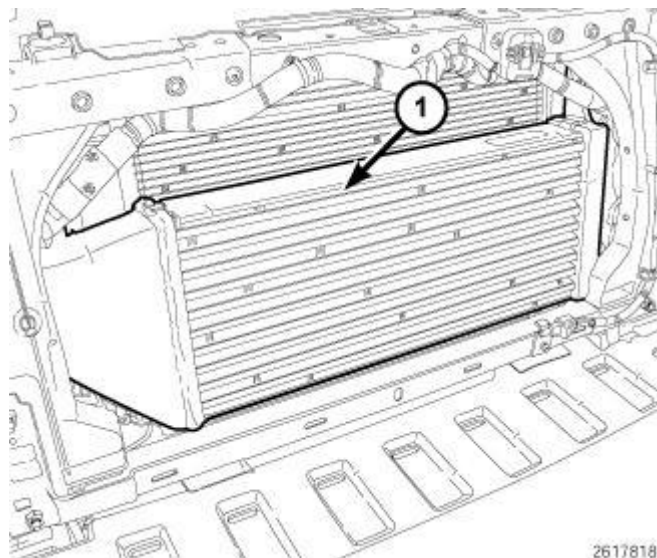


Fig. 310: Charge Air Cooler
Courtesy of CHRYSLER LLC

18. Remove the hoses from the charge air cooler (1).
19. Remove the radiator mounting bolts.

NOTE: Care must be taken not to damage the charge air cooler fins and the fins of other ancillary cooler components.

20. Remove the radiator, A/C condenser and charge air cooler as an assembly.
21. Remove the charge air cooler to condenser bolts and separate the charge air cooler (1).

Installation

INSTALLATION

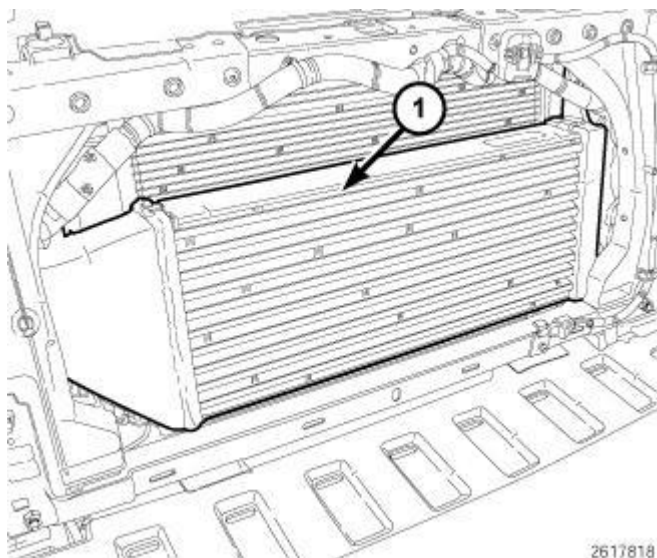


Fig. 311: Charge Air Cooler


Courtesy of CHRYSLER LLC

NOTE: When servicing the Air Charge Cooler and/or Turbocharger, the Air Charger Hose (orange) seal located between the Air Charge Hose and Turbocharger must be replaced.

1. Install the charge air cooler to the A/C condenser/radiator assembly. Tighten the bolts to 10 N.m (89 in. lbs.).

NOTE: Care must be taken not to damage the charge air cooler fins and the fins of other ancillary cooler components.

2. Position the radiator, A/C condenser and charge air cooler into the vehicle as an assembly.
3. Install the radiator mounting bolts. Tighten the bolts to 9 N.m (81 in. lbs.).
4. Install the hoses to the charge air cooler (1). Tighten the clamps to 11 N.m (95 in. lbs.).

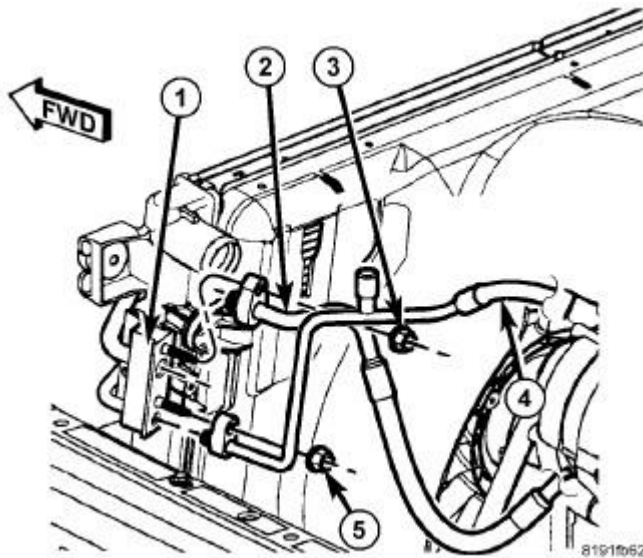**Fig. 312: Refrigerator Lines To Condenser**

Courtesy of CHRYSLER LLC

5. Remove the tape or plugs from the opened refrigerant line fittings and condenser ports.
6. Lubricate a new rubber O-ring seals with clean refrigerant oil and install them and new gaskets onto the refrigerant line fittings. Use only the specified O-ring seals as they are made of a special material for the R-134a system. Use only refrigerant oil of the type recommended for the A/C compressor in the vehicle.
7. Connect the A/C discharge line (2) and the A/C liquid line (4) to the A/C condenser (1). Install the retaining nuts (3 and 5). Tighten the nuts to 23 N.m (17 ft. lbs.).
8. Install the upper radiator hose.
9. Install the viscous fan, cooling fan and fan shroud as an assembly. Refer to **Cooling/Engine/FAN**,

Cooling - Installation .

10. Install the air filter housing assembly. See **Engine/Air Intake System/BODY, Air Cleaner - Installation**.
11. Charge the refrigerant system. Refer to **Heating and Air Conditioning/Plumbing - Standard Procedure**.
12. Install the grille. Refer to **Body/Exterior/GRILLE - Installation**.

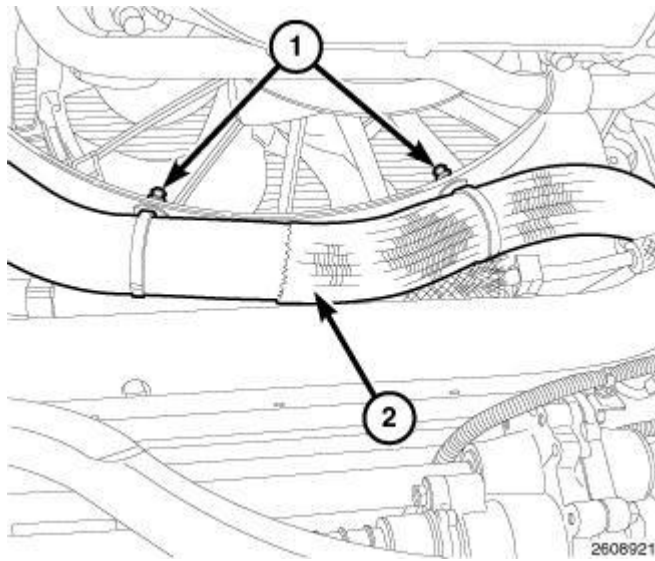


Fig. 313: Radiator Hose And Fan Shroud Retainers
 Courtesy of CHRYSLER LLC

13. Raise and support the vehicle.
14. Install the lower radiator hose (2).
15. Install the lower electric cooling fan bolts. Tighten the bolts to 6 N.m (53 in. lbs.).
16. Install the lower radiator hose to fan shroud retainers (1).
17. Install the lower radiator seal push pins.
18. Install the wheelhouse splash shield. Refer to **Body/Exterior/SHIELD, Splash - Installation**.
19. Lower the vehicle.
20. Fill the cooling system. Refer to **Cooling - Standard Procedure**.
21. Connect the battery negative cable.
22. Start engine and check for leaks.

TURBOCHARGER

Removal

REMOVAL

To remove the turbocharger, see **Engine/Manifolds/MANIFOLD, Exhaust - Removal**.

Installation

INSTALLATION

To install the turbocharger, see [Engine/Manifolds/MANIFOLD, Exhaust - Installation](#).

VALVE TIMING

STANDARD PROCEDURE

LOCKING ENGINE 90 DEGREES AFTER TDC

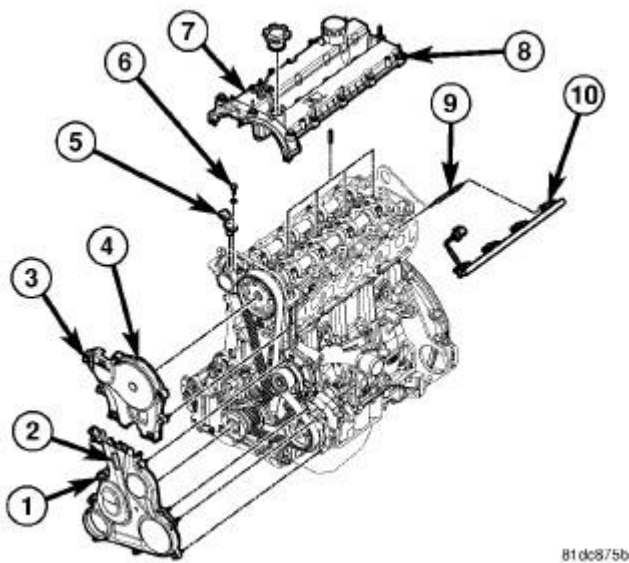


Fig. 314: Upper And Lower Front Covers

Courtesy of CHRYSLER LLC

1. Disconnect negative battery cable.
2. Remove the upper (4) and lower (2) front covers. See [Engine/Valve Timing/COVER\(S\), Engine Timing - Removal](#).

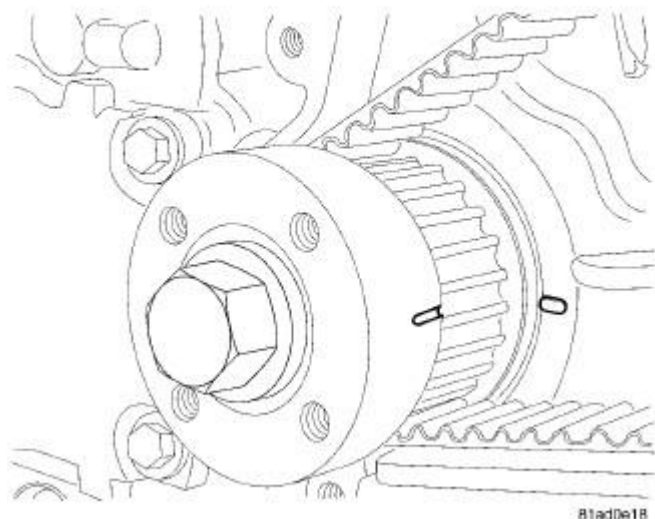


Fig. 315: CRANKSHAFT TIMING MARKS

Courtesy of CHRYSLER LLC

3. Rotate the engine until the 90° ATDC marks on the crankshaft timing belt drive sprocket and timing belt cover are aligned.


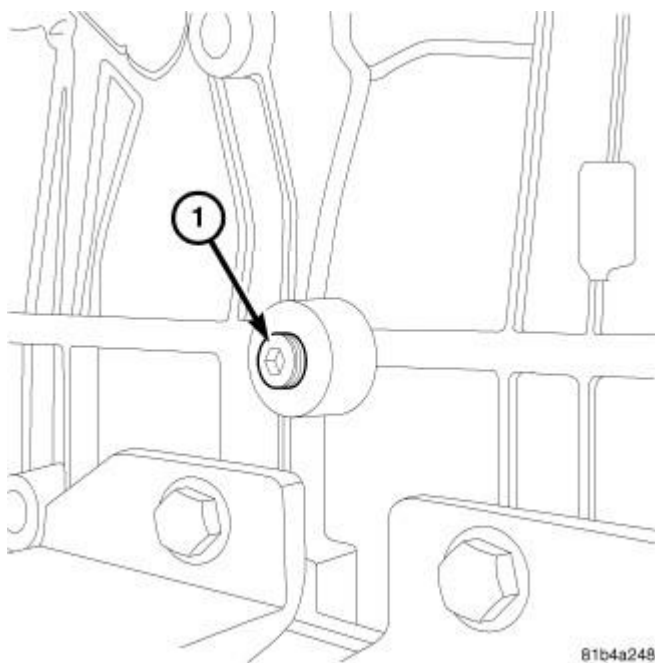


Fig. 316: CRANKSHAFT LOCK PLUG LOCATION

Courtesy of CHRYSLER LLC

4. Remove the engine block plug (1) for the crankshaft locking tool. The crankshaft locking tool is installed

in the high pressure injection pump side of the engine slightly rearward of the engine mount.

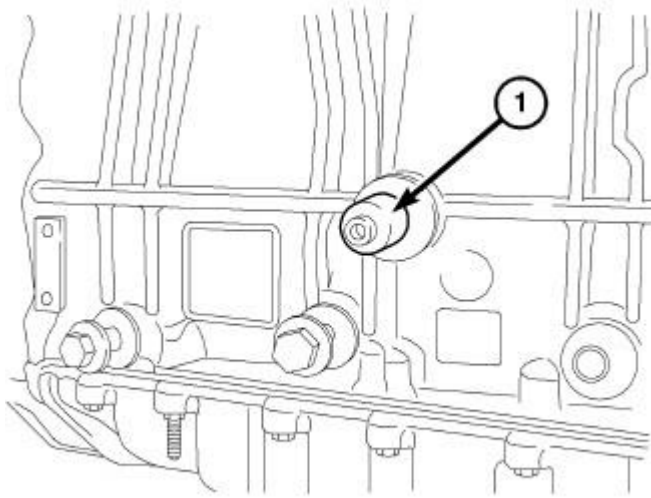


81dba87d

Fig. 317: Crankshaft Locking Tool
Courtesy of CHRYSLER LLC

5. Install the Crankshaft Locking Tool VM.9992 into the high pressure pump side of the engine block. Make sure that the outer portion of the tool threads into the block and the bolt threads into the crankshaft. If the bolt does not thread into the crankshaft, the crankshaft is not at 90° ATDC. If necessary, realign the 90° ATDC marks on the crankshaft timing belt drive sprocket and timing belt cover.

Camshaft Timing Procedure

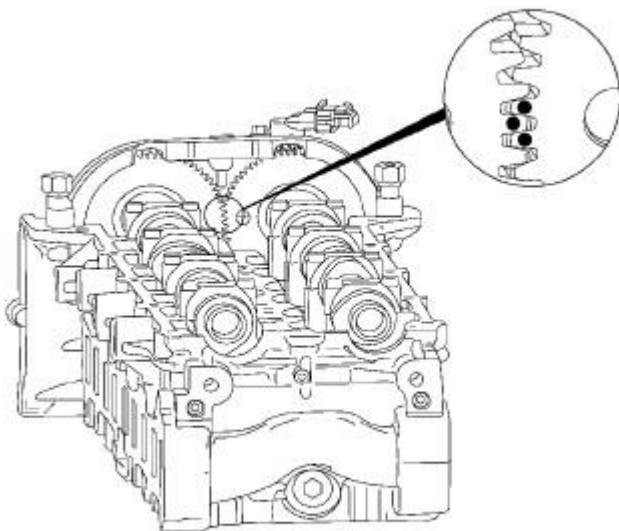

81b113a8

Fig. 318: Camshaft Timing Dots

Courtesy of CHRYSLER LLC

NOTE: In order to validate camshaft timing, the cylinder head cover and timing belt should already have been removed.

CAUTION: The camshaft dots time the camshafts to each other. Later in the procedure we will rotate the camshafts so they are timed to the crankshaft.

1. Line up the camshaft gear dots.

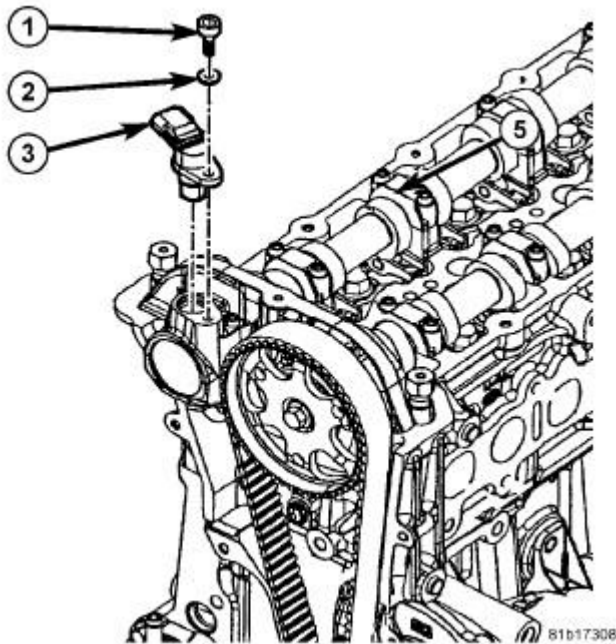


Fig. 319: Camshaft Position Sensor
Courtesy of CHRYSLER LLC

2. Disconnect the camshaft position sensor harness connector.
3. Remove bolt (1) and the camshaft position sensor (3).

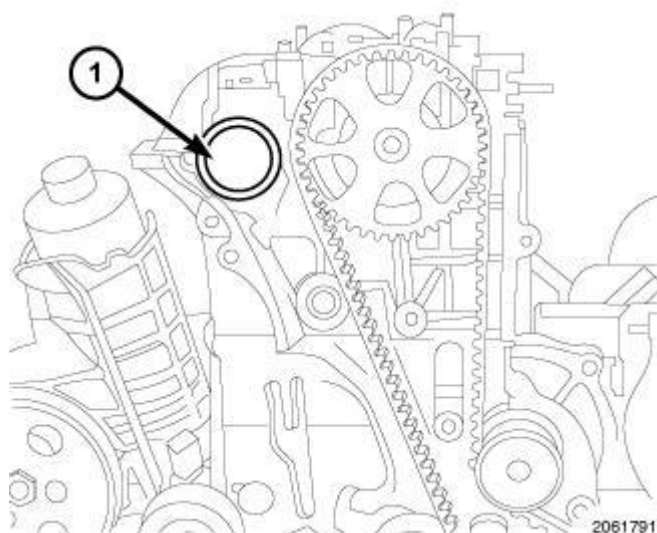


Fig. 320: EXHAUST CAMSHAFT OIL SEAL
Courtesy of CHRYSLER LLC

4. Remove the exhaust camshaft oil seal (1) to expose the camshaft reluctor.

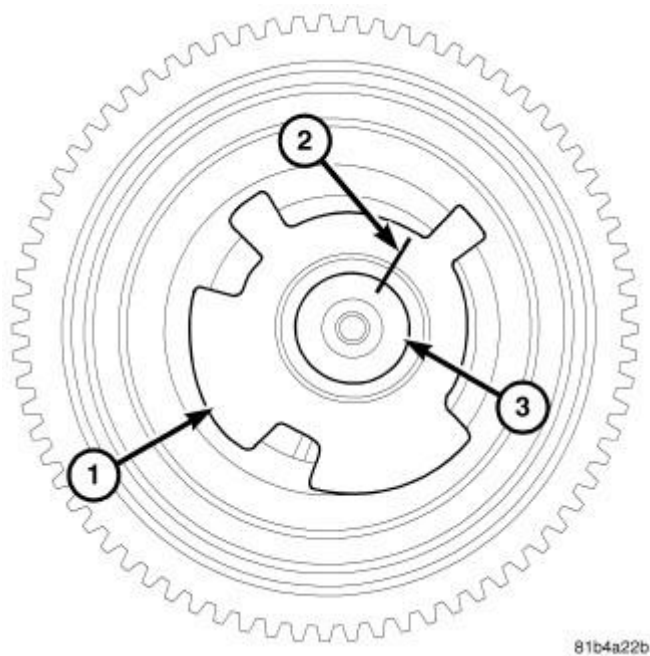


Fig. 321: Marking CMP Sensor Reluctor Wheel & Exhaust Camshaft
Courtesy of CHRYSLER LLC

5. Mark the camshaft tone wheel with a paint marker.

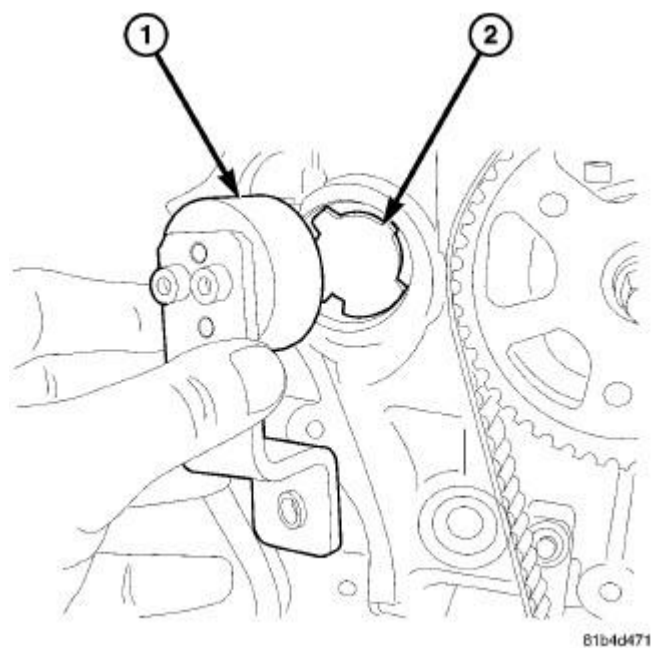


Fig. 322: INSTALLING CAMSHAFT LOCK TOOL

Courtesy of CHRYSLER LLC

CAUTION: Do not rotate the camshaft using the Camshaft Locking Tool VM.9991. The tone wheel may spin on the camshaft. If the tone wheel is rotated on the camshaft, the camshaft must be replaced.

6. Rotate the camshafts until the Camshaft Locking Tool VM.9991 can be installed.
7. Install the Camshaft Locking Tool VM.9991.

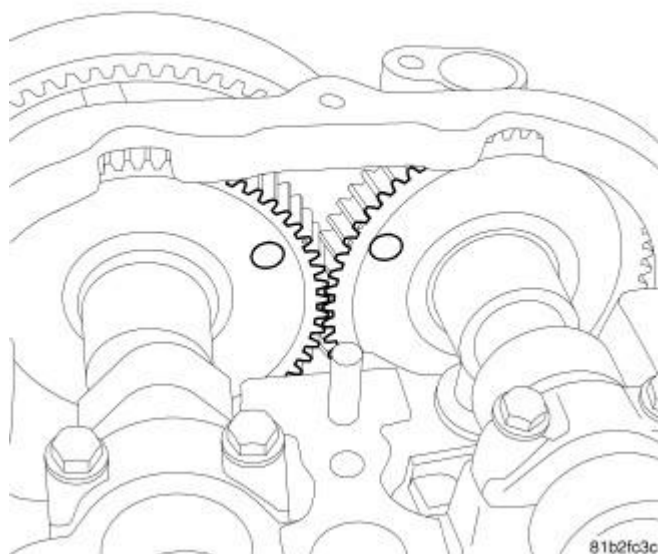


Fig. 323: Camshaft Marks At 90 Degrees ATDC
Courtesy of CHRYSLER LLC

8. Verify the camshafts are set correctly at 90° ATDC as shown in illustration.

BELT, TIMING

Removal

REMOVAL - TIMING BELT

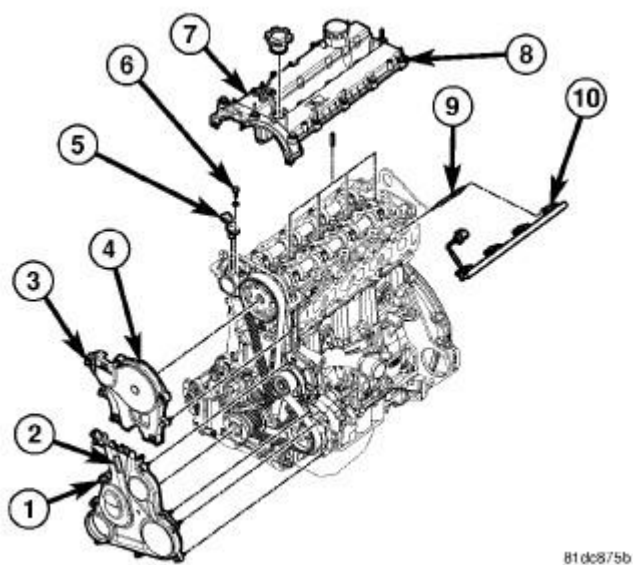


Fig. 324: Upper And Lower Front Covers
Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Remove the air cleaner body. See **Engine/Air Intake System/BODY, Air Cleaner - Removal**.
3. Remove the upper and lower timing belt covers. See **Engine/Valve Timing/COVER(S), Engine Timing - Removal**.

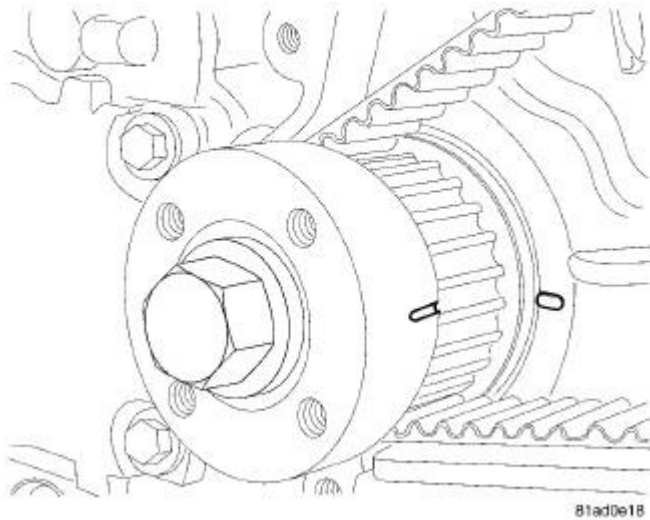


Fig. 325: CRANKSHAFT TIMING MARK
Courtesy of CHRYSLER LLC

4. Rotate the engine until the crankshaft 90° ATDC marks on the crankshaft timing belt drive sprocket and timing cover are aligned.

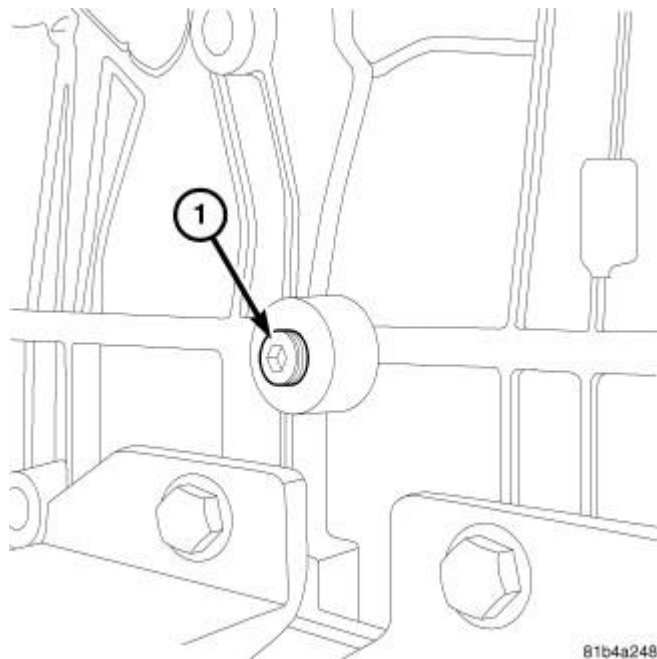


Fig. 326: CRANKSHAFT LOCK PLUG LOCATION
Courtesy of CHRYSLER LLC

5. Remove the engine block plug (1).

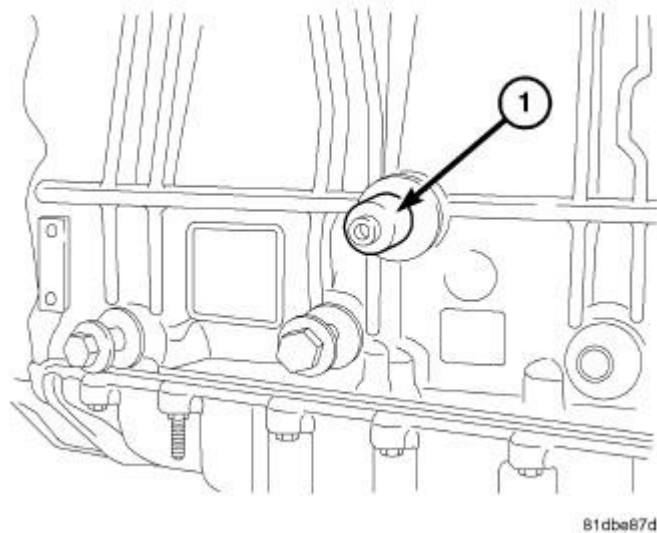


Fig. 327: Crankshaft Locking Tool
Courtesy of CHRYSLER LLC

6. Install the Crankshaft Locking Tool VM.9992 (1).

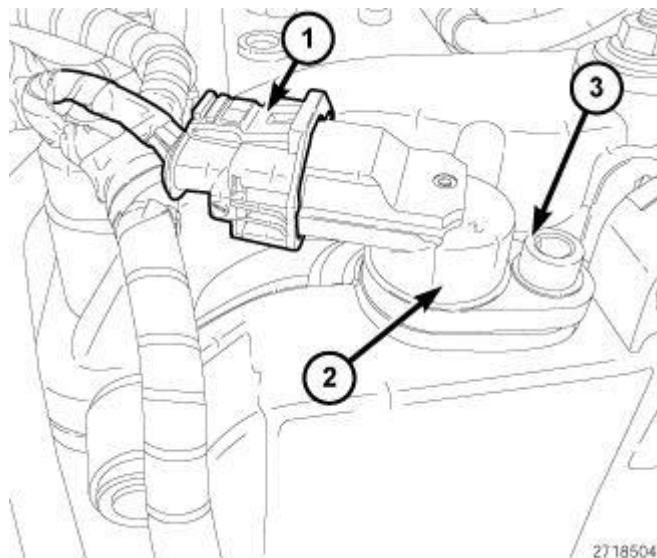


Fig. 328: CAMSHAFT POSITION SENSOR HARNESS CONNECTOR
Courtesy of CHRYSLER LLC

7. Disconnect the Camshaft Position Sensor (CMP) harness connector (1).
8. Remove bolt (3) the CMP sensor (2).

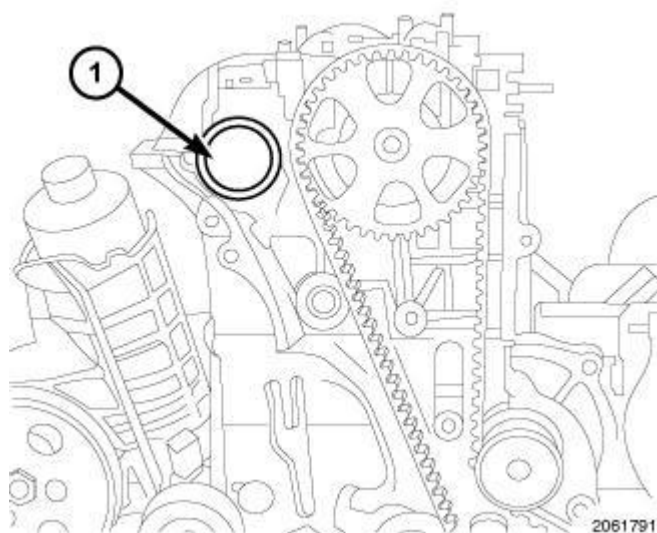


Fig. 329: EXHAUST CAMSHAFT OIL SEAL
Courtesy of CHRYSLER LLC

9. Remove the exhaust camshaft oil seal (1) to expose the camshaft reluctor.

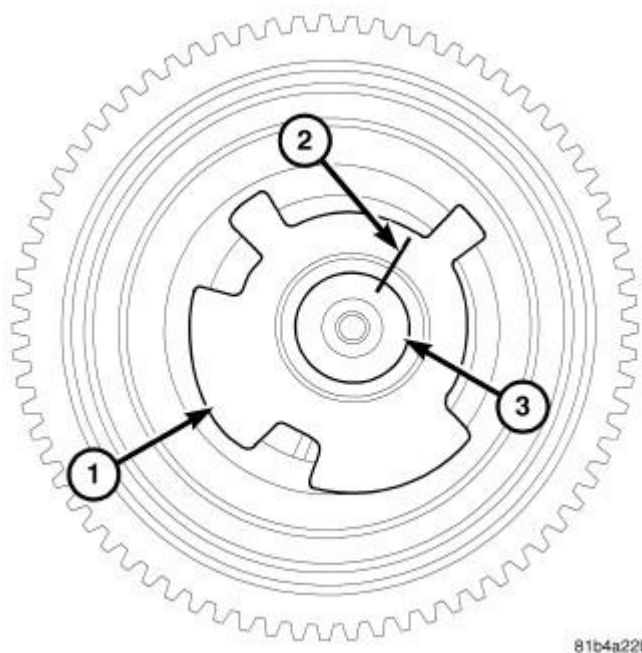


Fig. 330: Marking CMP Sensor Reluctor Wheel & Exhaust Camshaft
Courtesy of CHRYSLER LLC

10. Use a paint pen to mark the location of the reluctor wheel (1) on the camshaft (2).

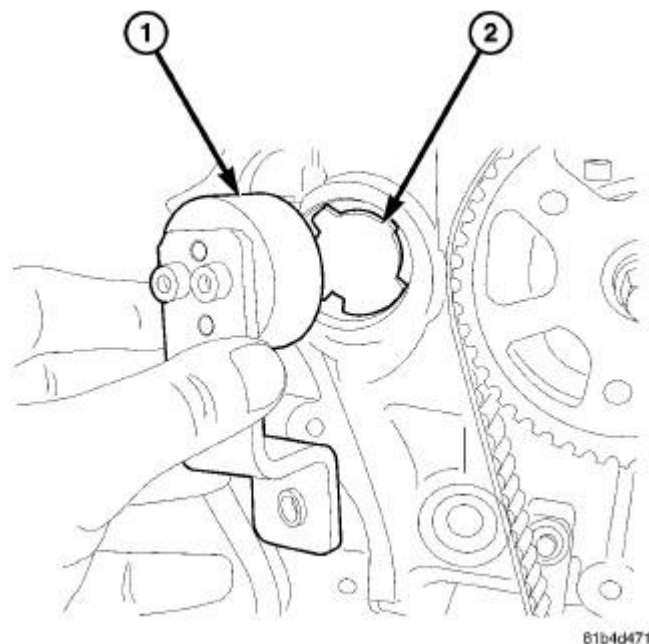


Fig. 331: INSTALLING CAMSHAFT LOCK TOOL
Courtesy of CHRYSLER LLC

11. Install the Camshaft Locking Tool VM.9991 (1).

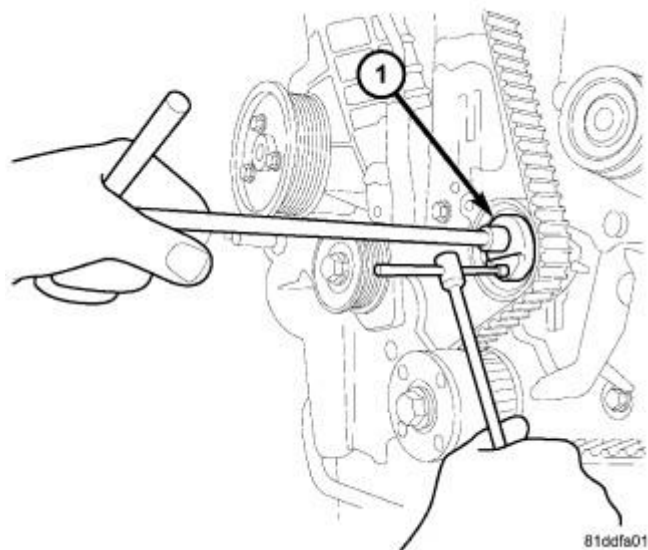


Fig. 332: Timing Belt Tensioner Bolt
Courtesy of CHRYSLER LLC

12. Loosen the timing belt tensioner bolt (1), and remove the timing belt.

Installation

INSTALLATION - TIMING BELT

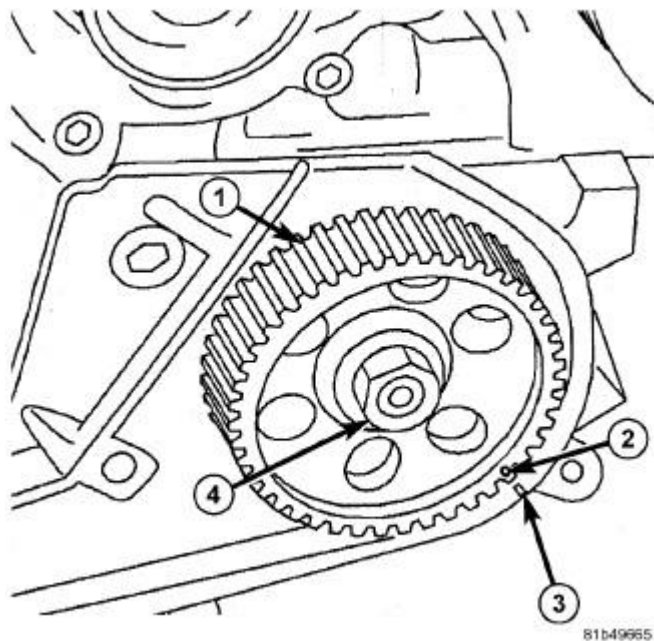


Fig. 333: Fuel Injection Pump Timing Marks
Courtesy of CHRYSLER LLC

1. Align the high pressure fuel pump sprocket timing mark (2) with the timing mark (3) on the block.

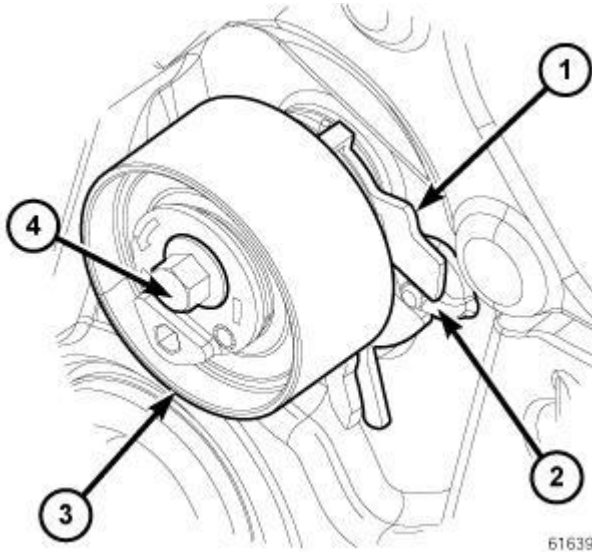


Fig. 334: Timing Belt Tensioner
Courtesy of CHRYSLER LLC

2. Verify that the bolt (4) is finger tight and tensioner alignment plate (1) is aligned with the boss (2) on the engine cover.


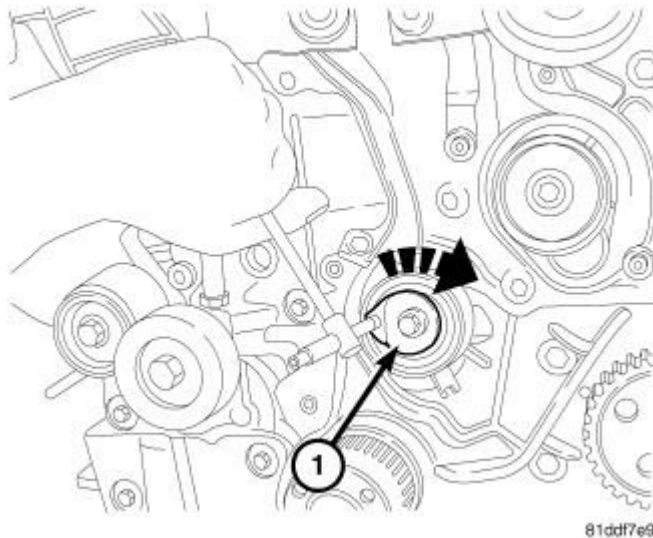


Fig. 335: Timing Belt Tensioner Adjustment
Courtesy of CHRYSLER LLC

3. Turn the timing belt tensioner (1) clockwise to unload the tensioner enough for the timing belt to be installed.

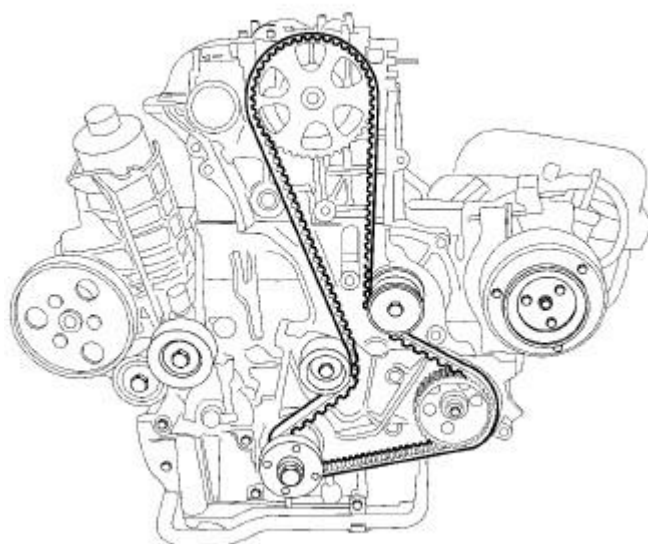

81abcc7

Fig. 336: TIMING BELT

Courtesy of CHRYSLER LLC

NOTE: DO NOT remove the timing belt from the package until it is going to be installed. DO NOT expose timing belt to oil, grease or water contamination. DO NOT crimp belt at a sharp angle. DO NOT clean belt, pulleys or tensioner with solvent. Check that pulleys and bearings are not seized or damaged before installing belt.

4. Install the timing belt on the components in the following order.

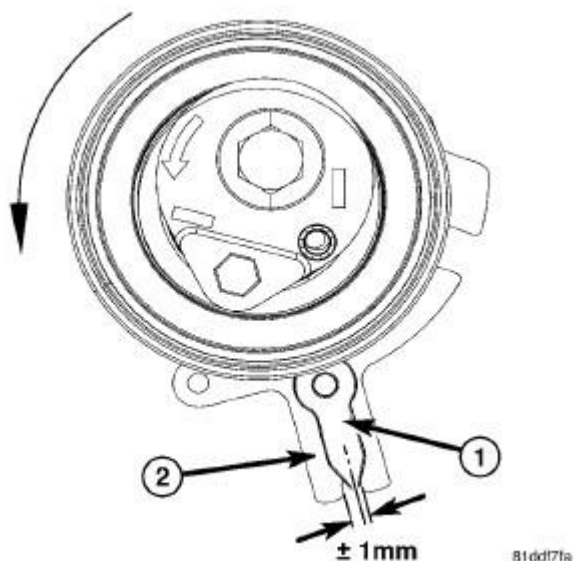
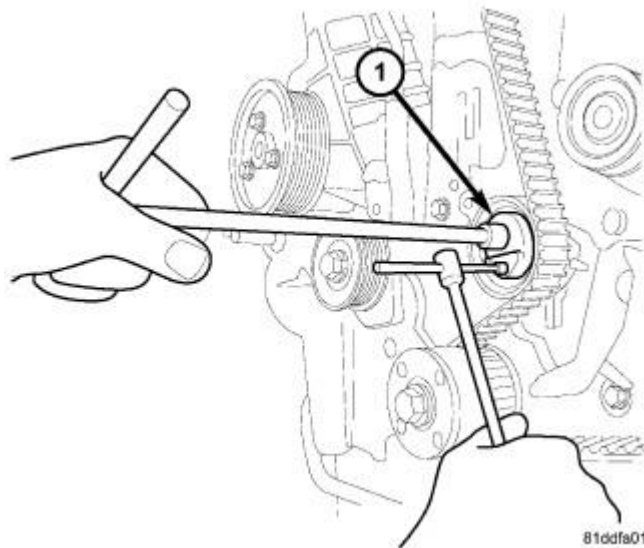


Fig. 337: Identifying Tensioner Indicator & Tensioner Gage Slot

Courtesy of CHRYSLER LLC

NOTE: Turning the belt tensioner counter clockwise moves the pointer in a clockwise direction. Also, if the tensioner bolt is too loose this will cause the tensioner alignment slot to jump off the alignment boss on timing cover.

- Crankshaft sprocket (1).
 - High pressure fuel pump (2).
 - Water pump pulley (3).
 - Intake camshaft pulley (4).
 - Timing belt tensioner (5).
5. Adjust timing belt tensioner by lining up the load indicator arrow (1) to the center of the tensioner load gage (2) as shown in illustration.

**Fig. 338: Timing Belt Tensioner Bolt**

Courtesy of CHRYSLER LLC

6. Tighten the timing belt tensioner bolt (1) to 28 N.m (21 ft. lbs.).

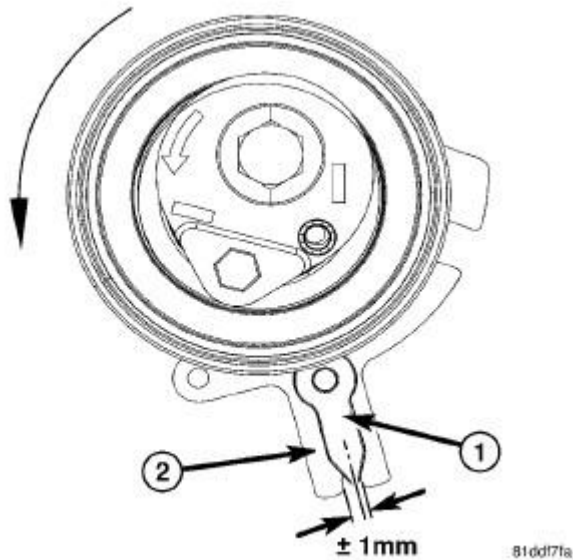


Fig. 339: Identifying Tensioner Indicator & Tensioner Gage Slot
Courtesy of CHRYSLER LLC

7. Verify the tensioner load indicator (1) is still centered in the tensioner load gage (2). If the indicator is not centered in the gage as shown in illustration, see Engine/Valve Timing/TENSIONER, Engine Timing - Adjustments.

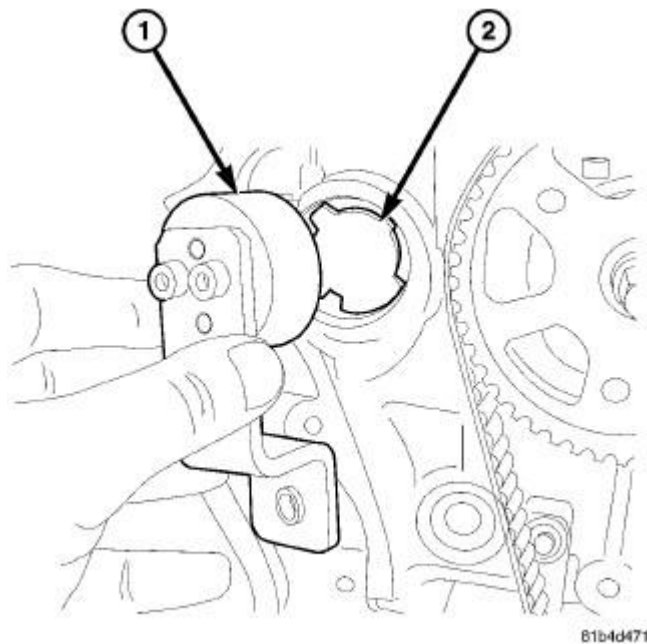


Fig. 340: INSTALLING CAMSHAFT LOCK TOOL
Courtesy of CHRYSLER LLC

8. Remove the Camshaft Locking Tool VM.9991 (1).

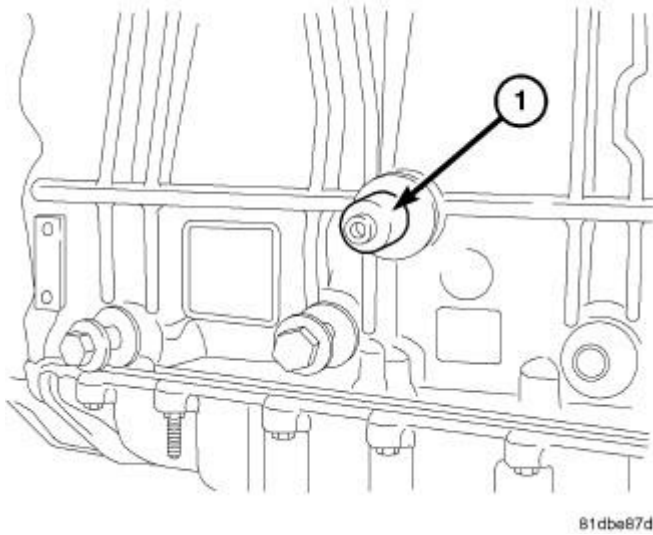


Fig. 341: Crankshaft Locking Tool
Courtesy of CHRYSLER LLC

9. Remove the Crankshaft Locking Tool VM.9992 (1).

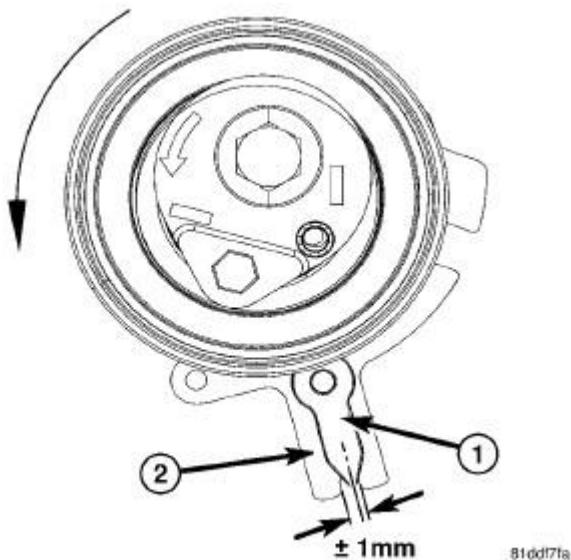


Fig. 342: Identifying Tensioner Indicator & Tensioner Gage Slot
Courtesy of CHRYSLER LLC

NOTE: In order to rotate the engine, the Camshaft Locking Tool VM.9991 and the Crankshaft Locking Tool VM.9992 need to be removed.

10. Rotate engine 2 complete revolutions and then recheck tensioner alignment. Verify that the tension indicator (1) is centered in the slot on the tensioner gage (2) slot as shown in illustration. Readjust tensioner alignment is necessary.

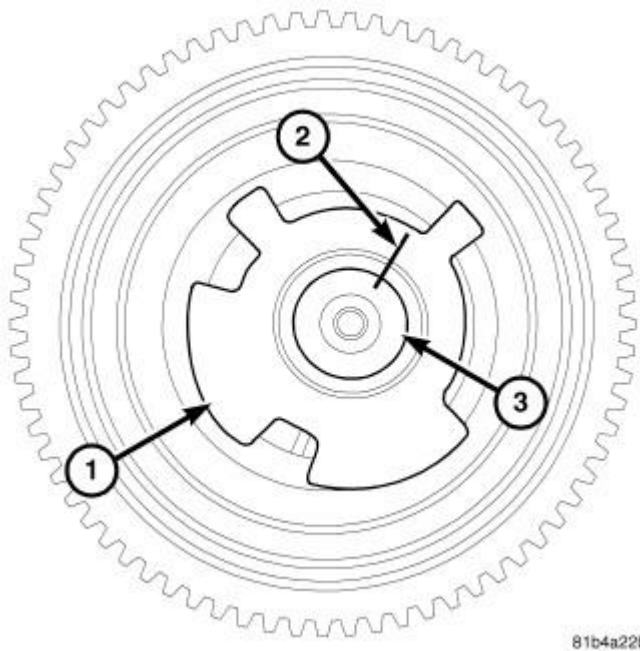


Fig. 343: Marking CMP Sensor Reluctor Wheel & Exhaust Camshaft
Courtesy of CHRYSLER LLC

11. Verify that the reluctor wheel (1) has not moved on the camshaft. If the witness marks are not aligned, the reluctor wheel (1) has spun on the camshaft (3) during the assembly process, and the exhaust camshaft must be replaced.

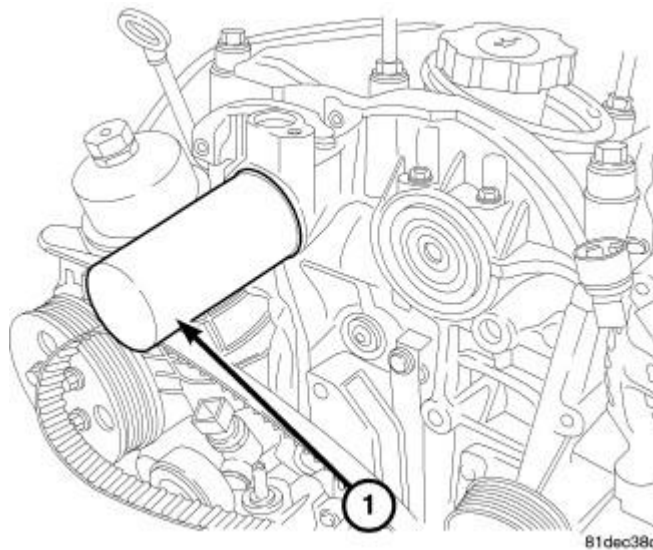


Fig. 344: Camshaft Oil Seal
Courtesy of CHRYSLER LLC

12. Use Seal Installer VM.1057 (1) to install the exhaust camshaft seal.

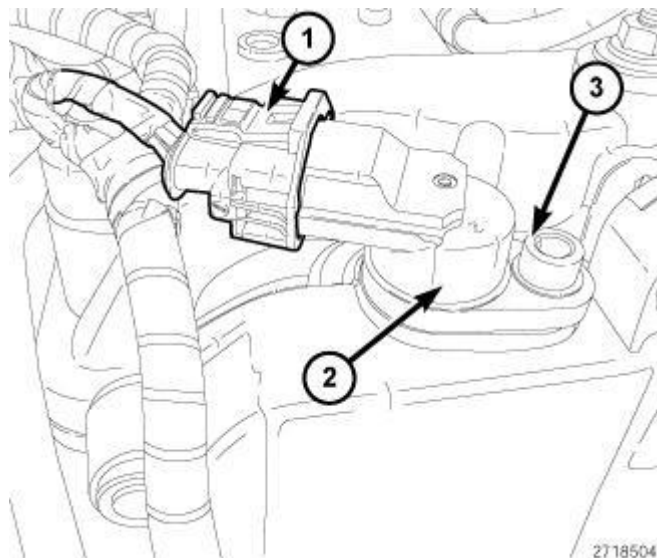


Fig. 345: CAMSHAFT POSITION SENSOR HARNESS CONNECTOR

Courtesy of CHRYSLER LLC

13. Install the Camshaft Position Sensor CMP sensor (2). Tighten bolt (3) to 11 N.m (97 in. lbs.).
14. Connect the (CMP) harness connector (1).

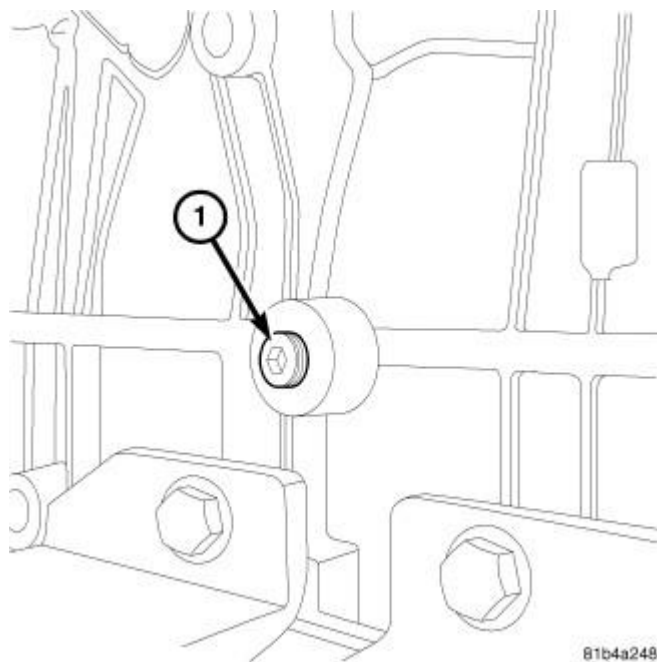


Fig. 346: CRANKSHAFT LOCK PLUG LOCATION

Courtesy of CHRYSLER LLC

15. Install the engine block plug (1). Tighten the engine block plug to 30 N.m (22 ft. lbs.).

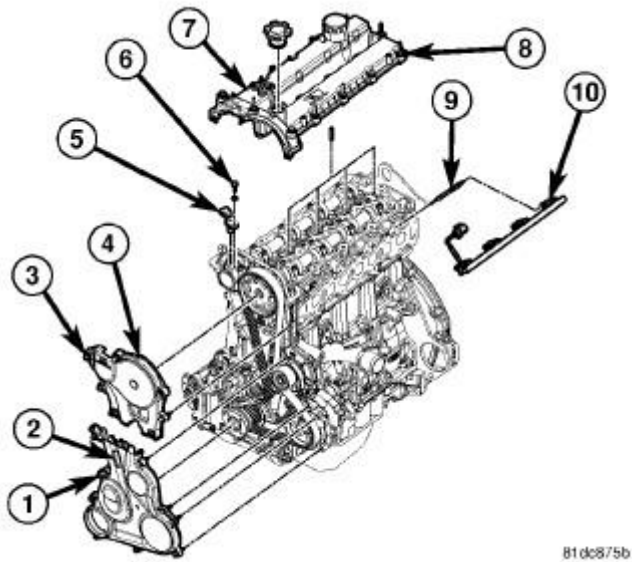


Fig. 347: Upper And Lower Front Covers
Courtesy of CHRYSLER LLC

16. Install the upper and lower outer timing belt covers. See **Engine/Valve Timing/COVER(S), Engine Timing - Installation.**
17. Install the air cleaner body. See **Engine/Air Intake System/BODY, Air Cleaner - Installation.**
18. Connect the negative battery cable.

COVER(S), ENGINE TIMING

Removal

REMOVAL - INNER TIMING BELT COVER


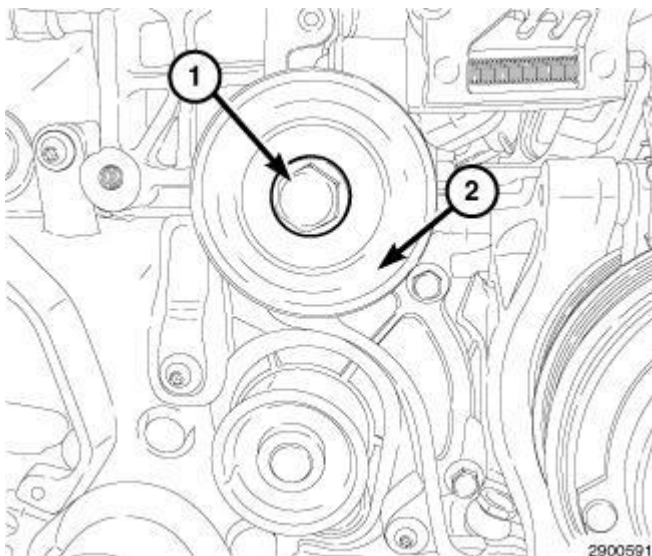


Fig. 348: Idler Pulley & Bolt

Courtesy of CHRYSLER LLC


1. Disconnect the negative battery.
2. Remove the timing belt. See **Engine/Valve Timing/BELT, Timing - Removal**.
3. Remove bolt (1) and the Idler pulley (2).

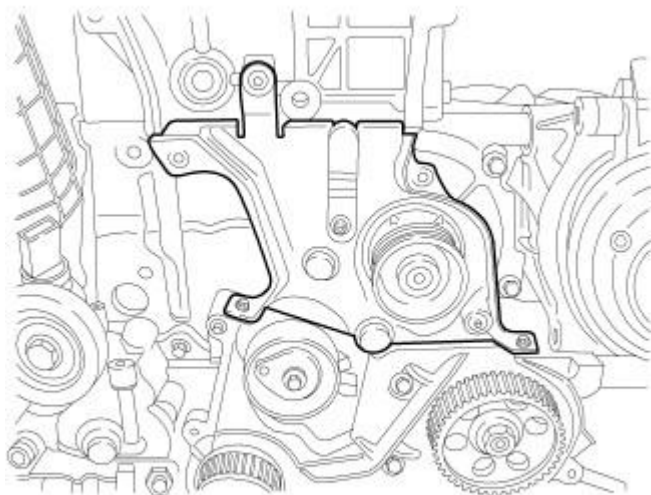

81aba73a

Fig. 349: INNER FRONT COVER**Courtesy of CHRYSLER LLC**

4. Remove bolts and the inner timing belt cover.

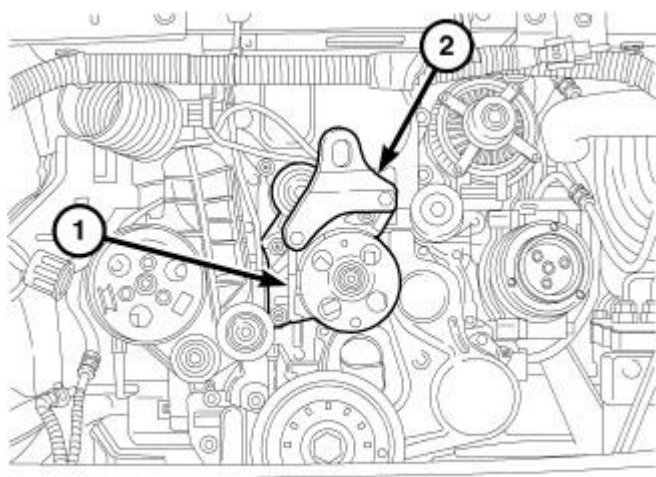REMOVAL - UPPER AND LOWER TIMING BELT OUTER COVERS

81dcb3a7

Fig. 350: Accessory Pulley & Engine Lifting Bracket
Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Remove the fan blade/viscous fan drive assembly from water pump. Refer to **Cooling/Engine/DRIVE, Fan - Removal**.
3. Remove the front engine lift bracket (2).
4. Remove the accessory drive idler pulley bracket (1).

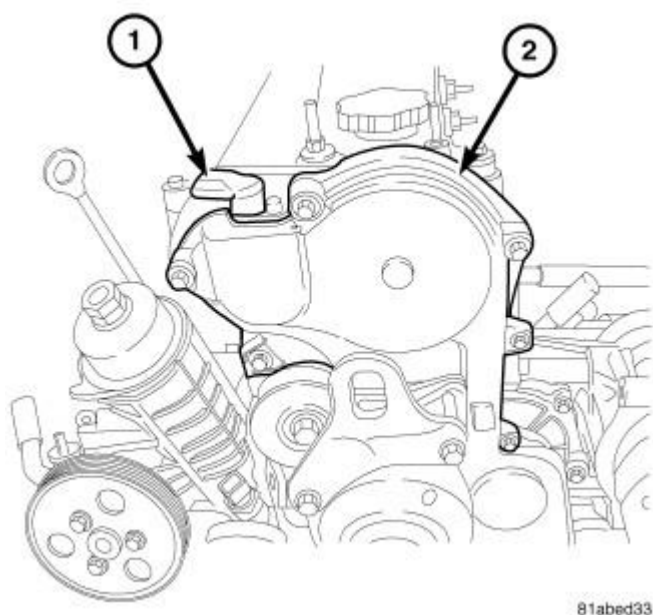


Fig. 351: UPPER FRONT COVER
Courtesy of CHRYSLER LLC

5. Remove the upper front cover (2).

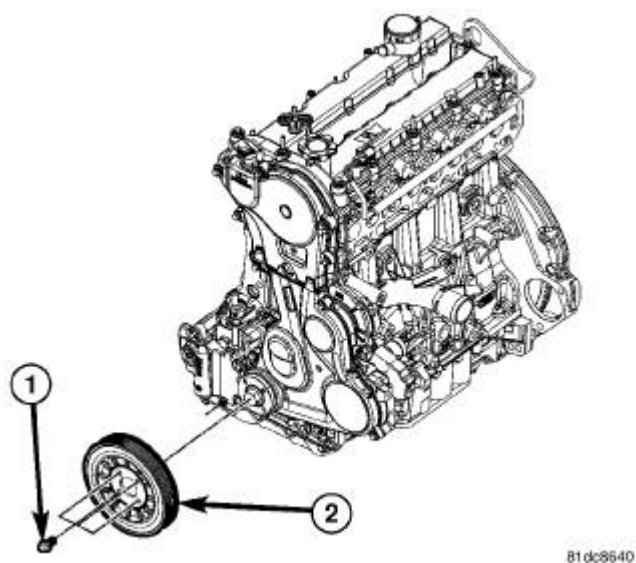


Fig. 352: Crankshaft Damper & Bolt
Courtesy of CHRYSLER LLC

6. Remove the bolts (1) and the crankshaft damper (2).


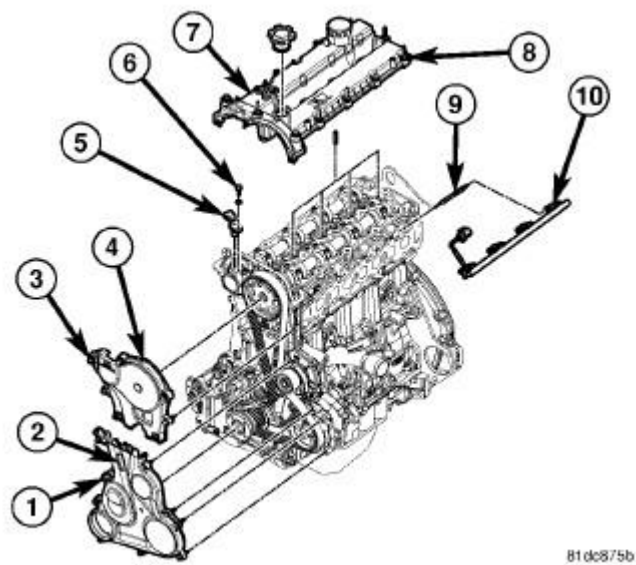


Fig. 353: Upper And Lower Front Covers
Courtesy of CHRYSLER LLC

7. Remove the lower front cover (2).

Installation

INSTALLATION - INNER TIMING BELT COVER

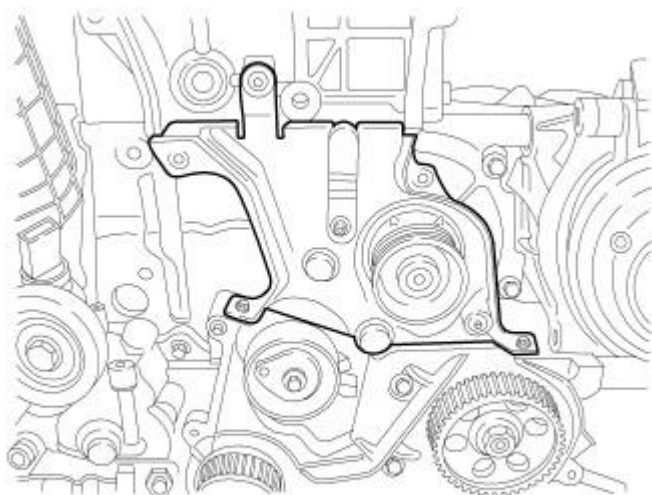


81aba73a

Fig. 354: INNER FRONT COVER

Courtesy of CHRYSLER LLC

1. Install the inner timing belt cover. Tighten the bolts to 8 N.m (71 in. lbs.).

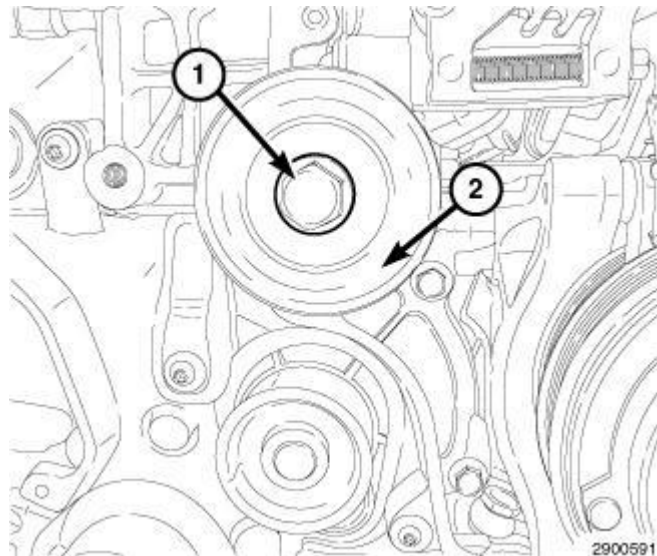


2900591

Fig. 355: Idler Pulley & Bolt

Courtesy of CHRYSLER LLC

2. Install the idler pulley (2). Tighten bolt (1) to 45 N.m (33 ft. lbs.).
3. Install the timing belt. See **Engine/Valve Timing/BELT, Timing - Installation.**
4. Connect the negative battery cable.


INSTALLATION - UPPER AND LOWER OUTER TIMING BELT COVERS

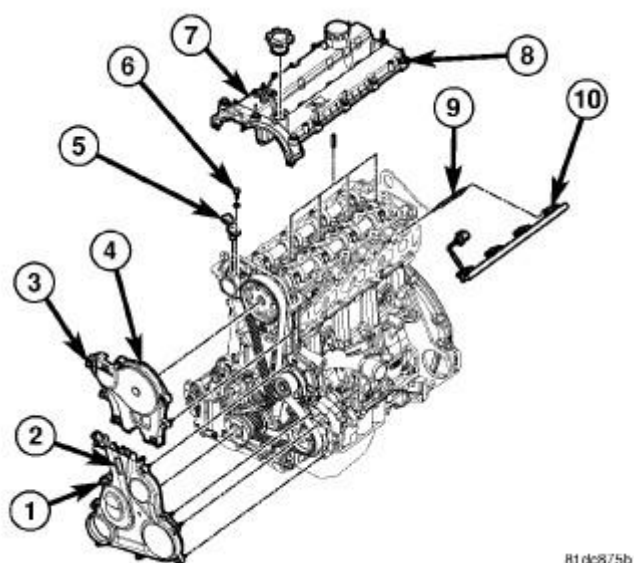

81dc875b

Fig. 356: Upper And Lower Front Covers
Courtesy of CHRYSLER LLC

1. Install the lower timing belt cover (2). Tighten the bolts to 8 N.m (71 in. lbs.).

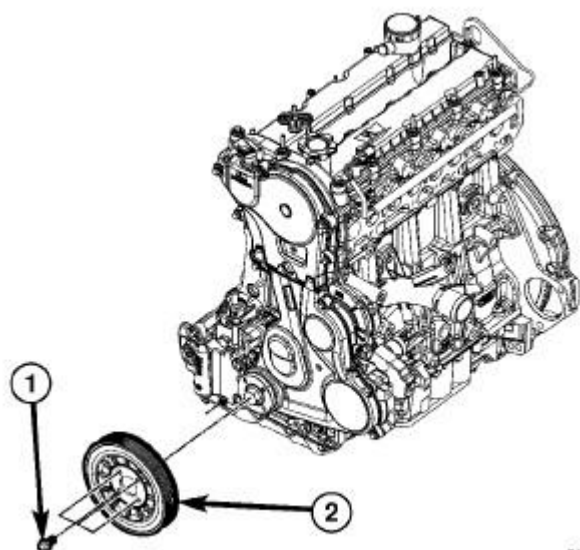

81dc8640

Fig. 357: Crankshaft Damper & Bolt
Courtesy of CHRYSLER LLC

2. Install the crankshaft damper (2). Tighten the bolts (1) to 32 N.m (23 in. lbs.).

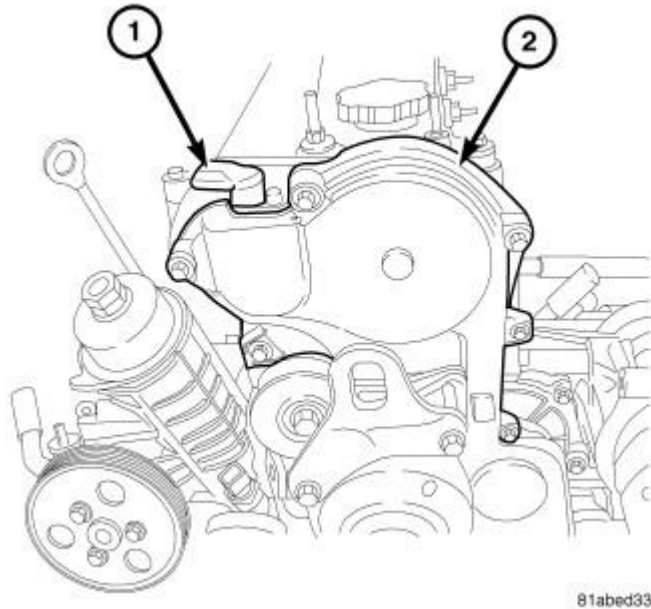


Fig. 358: UPPER FRONT COVER
Courtesy of CHRYSLER LLC

3. Install the upper timing belt cover (2). Tighten the bolts to 8 N.m (71 in. lbs.).

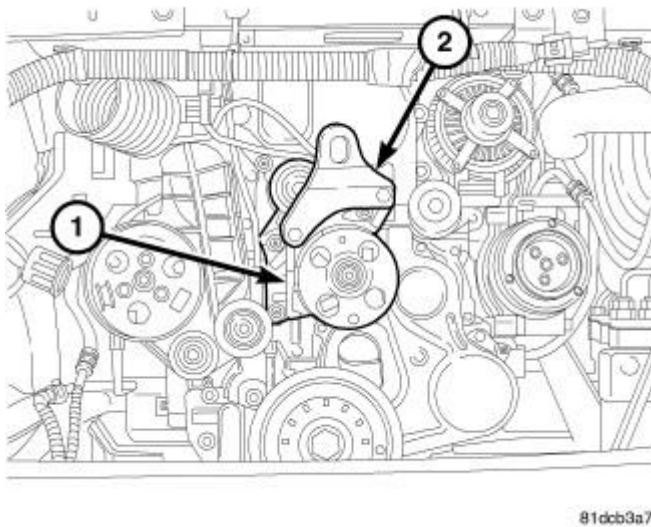


Fig. 359: Accessory Pulley & Engine Lifting Bracket
Courtesy of CHRYSLER LLC

4. Install the accessory drive idler pulley bracket. Tighten the bolts to 45 N.m (33 ft. lbs.).
5. Install the front engine lift bracket (2). Tighten the bolts to 45 N.m (33 ft. lbs.).
6. Install the fan blade/viscous fan drive assembly onto the water pump. Refer to **Cooling/Engine/DRIVE, Fan - Installation**.
7. Connect the negative battery cable.

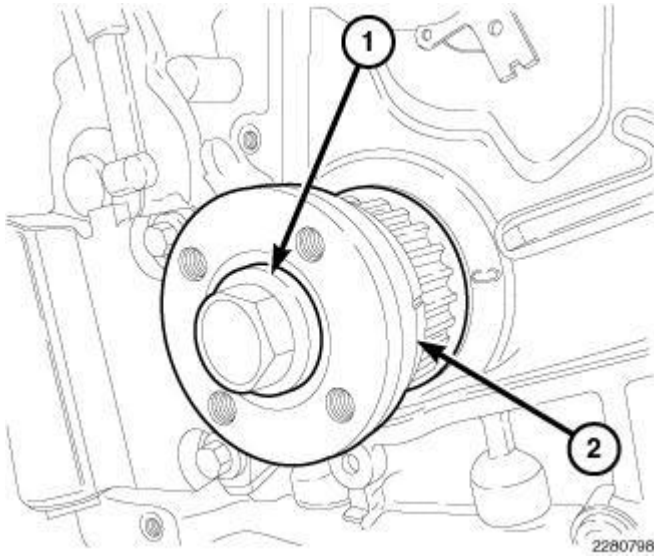
SPROCKET(S), TIMING BELT AND CHAIN**Removal****REMOVAL - CRANKSHAFT SPROCKET**

Fig. 360: Crankshaft Sprocket And Bolt
Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Remove the timing belt. See **Engine/Valve Timing/BELT, Timing - Removal**.

NOTE: **The crankshaft sprocket bolt is a left handed thread.**

3. Remove bolt (1), and the crankshaft sprocket (2).

REMOVAL - CAMSHAFT SPROCKET

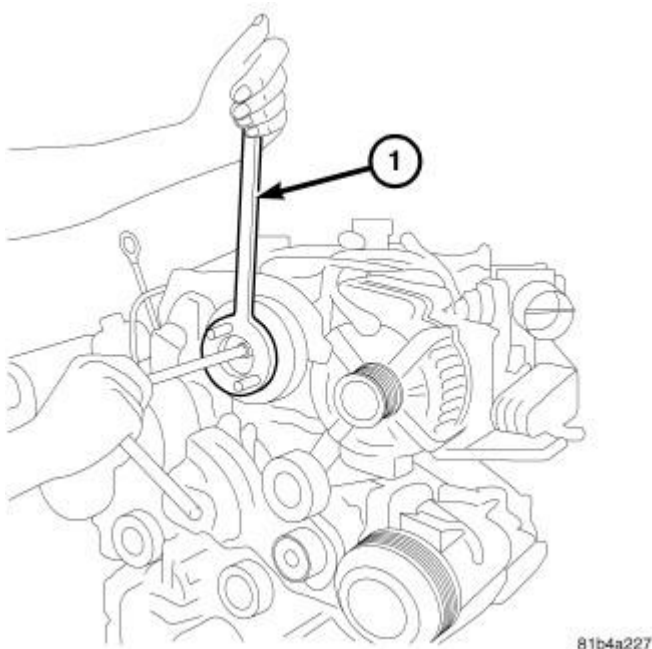


Fig. 361: REMOVE/INSTALL CAMSHAFT SPROCKET BOLT
 Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Remove timing belt. See **Engine/Valve Timing/BELT, Timing - Removal**.
3. Using Locking Tool VM.1055 (1) to hold the intake camshaft sprocket, remove the bolt.
4. Remove the camshaft sprocket.

Installation

INSTALLATION - CRANKSHAFT SPROCKET

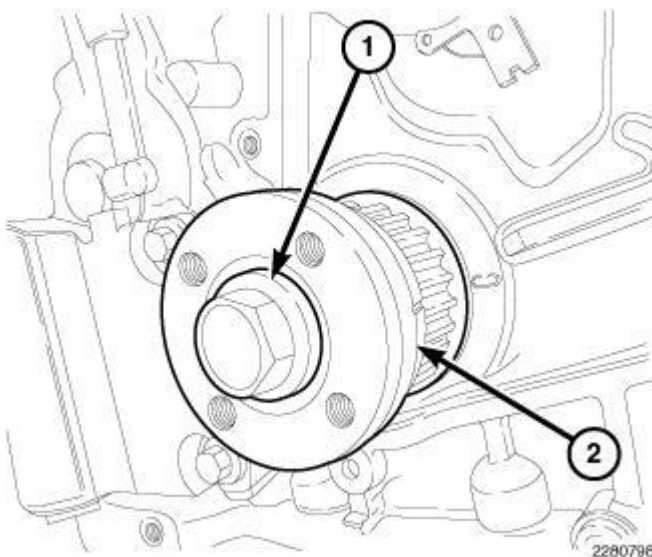


Fig. 362: Crankshaft Sprocket And Bolt

Courtesy of CHRYSLER LLC

NOTE: The crankshaft sprocket bolt is a left handed thread.

1. Install the crankshaft sprocket (2). Tighten bolt to 100 N.m (74 ft. lbs.) plus an additional 120 degrees.
2. Install the timing belt. See Engine/Valve Timing/BELT, Timing - Installation.
3. Connect the negative battery cable.

INSTALLATION - CAMSHAFT SPROCKET

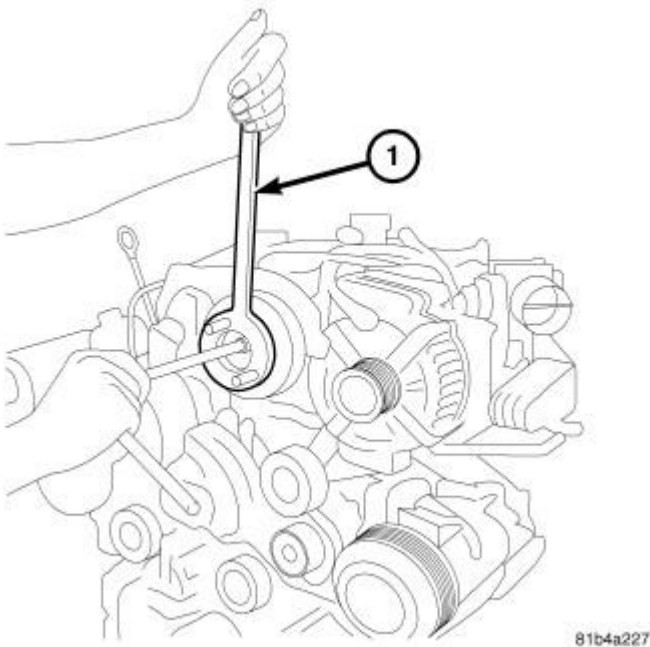



Fig. 363: REMOVE/INSTALL CAMSHAFT SPROCKET BOLT
Courtesy of CHRYSLER LLC

1. Install the camshaft sprocket and tighten bolt finger tight.
2. Using locking Tool VM.1055 (1) to hold the camshaft sprocket, tighten the camshaft sprocket (2) bolt to 64 N.m (47 ft. lbs.).
3. Install the timing belt. See Engine/Valve Timing/SPROCKET(S), Timing Belt and Chain - Installation.
4. Connect the negative battery cable.

TENSIONER, ENGINE TIMING

Removal

REMOVAL - TIMING BELT TENSIONER

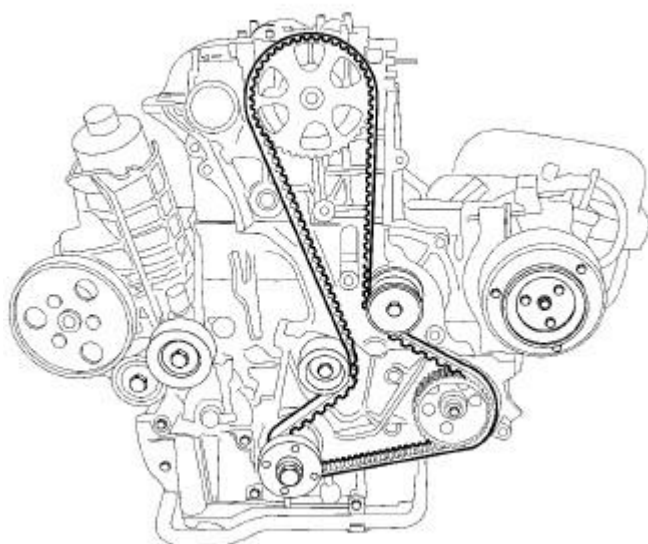


81abec7

Fig. 364: TIMING BELT

Courtesy of CHRYSLER LLC

1. Disconnect the negative battery cable.
2. Remove the timing belt. See **Engine/Valve Timing/BELT, Timing - Removal**.

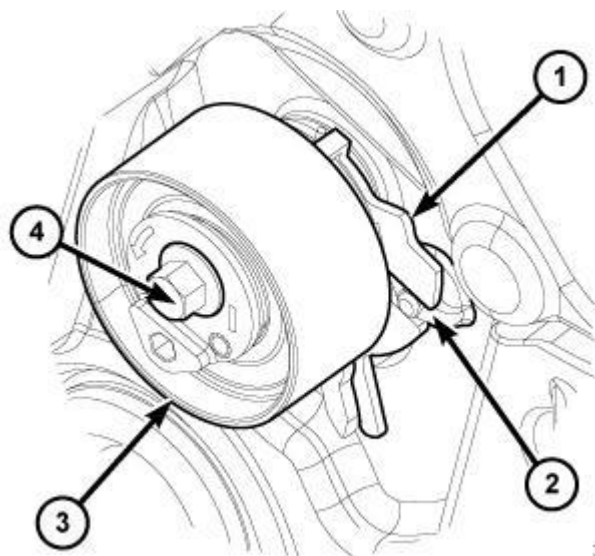

363321

Fig. 365: TIMING BELT TENSIONER

Courtesy of CHRYSLER LLC

3. Remove bolt (4), and timing belt tensioner (3).

Installation

INSTALLATION - TIMING BELT TENSIONER

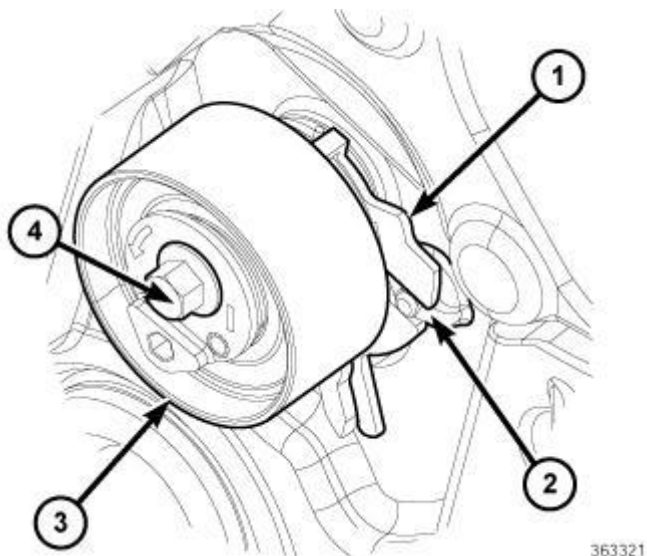


Fig. 366: TIMING BELT TENSIONER
Courtesy of CHRYSLER LLC

1. Install the timing belt tensioner (3). Do not tighten bolt (4) at this time. Verify that the slot in the tensioner alignment plate (1) is aligned with the boss (2) in the rear timing belt cover.

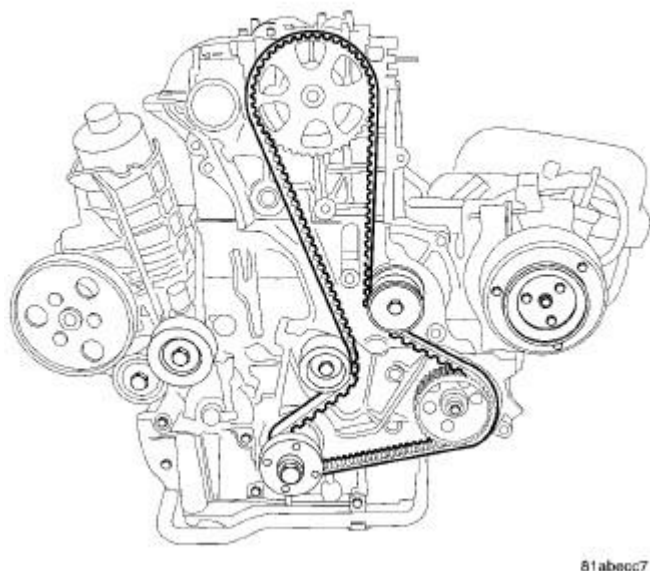


Fig. 367: TIMING BELT
Courtesy of CHRYSLER LLC

NOTE: DO NOT remove the timing belt from the package until it is going to be

installed. **DO NOT** expose timing belt to oil, grease or water contamination. **DO NOT** crimp belt at a sharp angle. **DO NOT** clean belt, pulleys or tensioner with solvent. Check that pulleys and bearings are not seized or damaged before installing belt.

2. Install the timing belt. See Engine/Valve Timing/BELT, Timing - Installation.
3. Connect the negative battery cable.

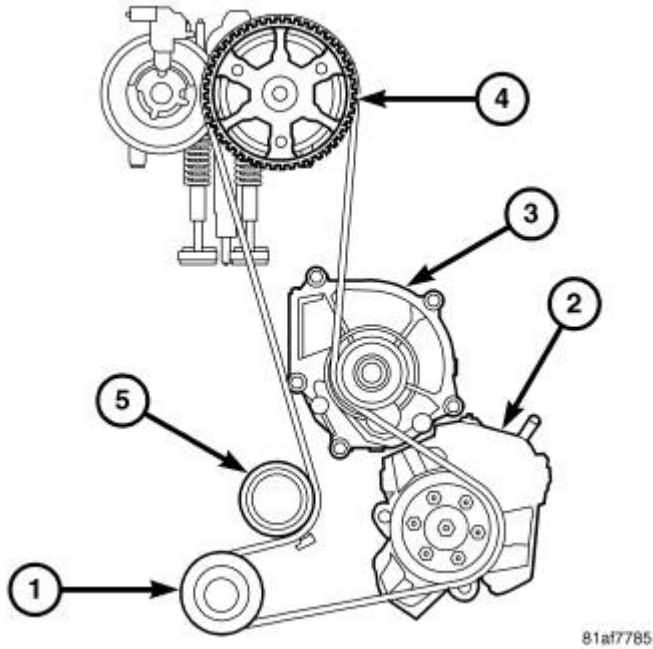


Fig. 368: Timing Belt Routing
Courtesy of CHRYSLER LLC

Adjustments

ADJUSTMENT

1. With the upper and lower front covers removed and the timing belt installed, loosen timing belt tensioner.

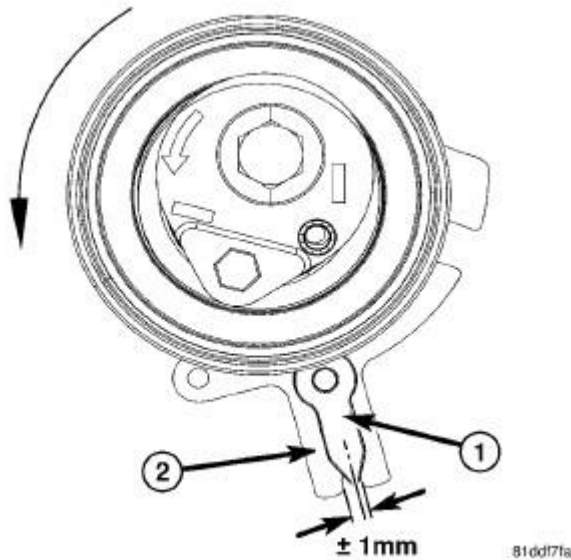


Fig. 369: Identifying Tensioner Indicator & Tensioner Gage Slot
Courtesy of CHRYSLER LLC

NOTE: Turning the belt tensioner counterclockwise moves the pointer in a clockwise direction. Also, if the tensioner bolt is too loose this will cause the tensioner alignment slot to jump off the alignment boss on timing cover.

2. Adjust timing belt tensioner by lining up the load indicator arrow (1) to the center of the tensioner load gage (2) as shown in illustration. Tighten the timing belt tensioner bolt to 28 N.m (21 ft. lbs.).

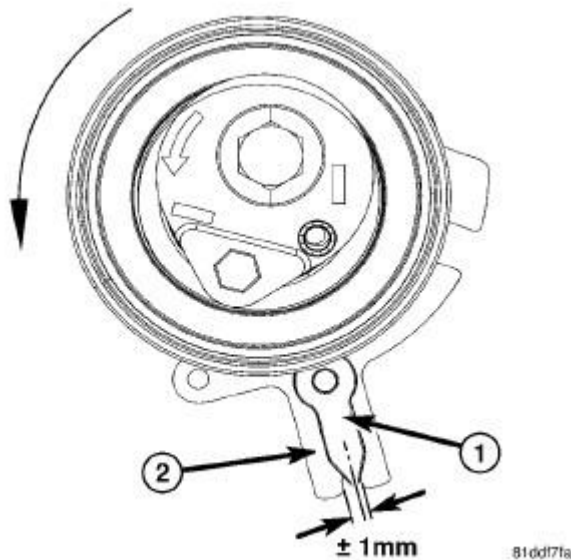


Fig. 370: Identifying Tensioner Indicator & Tensioner Gage Slot
Courtesy of CHRYSLER LLC

3. Rotate engine 2 complete revolutions and then recheck tensioner alignment. Verify that the tension indicator (1) is centered in the slot on the tensioner gage (2) slot as shown in illustration. Readjust tensioner alignment as necessary.

AIR INTAKE SYSTEM

AIR CLEANER

Removal

REMOVAL - AIR CLEANER

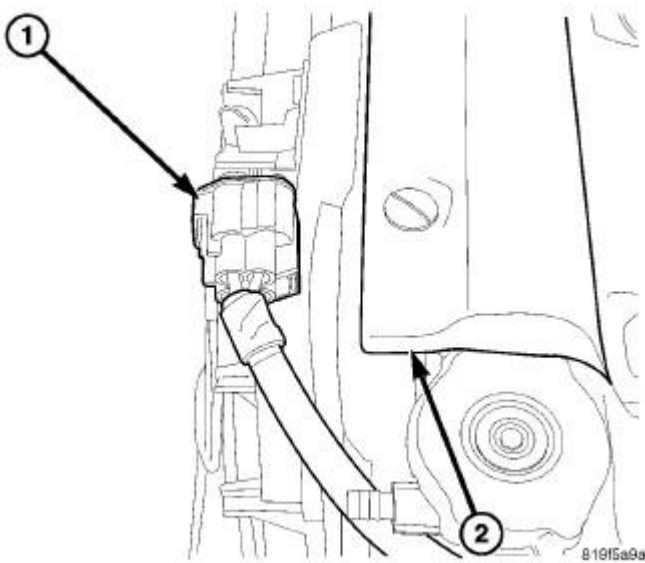


Fig. 371: Radiator Fan Electrical Connector
Courtesy of CHRYSLER LLC

- | |
|---|
| 1 - ELECTRICAL CONNECTOR
2 - UPPER RADIATOR SEAL |
|---|

1. Disconnect the cooling fan harness connector (1).

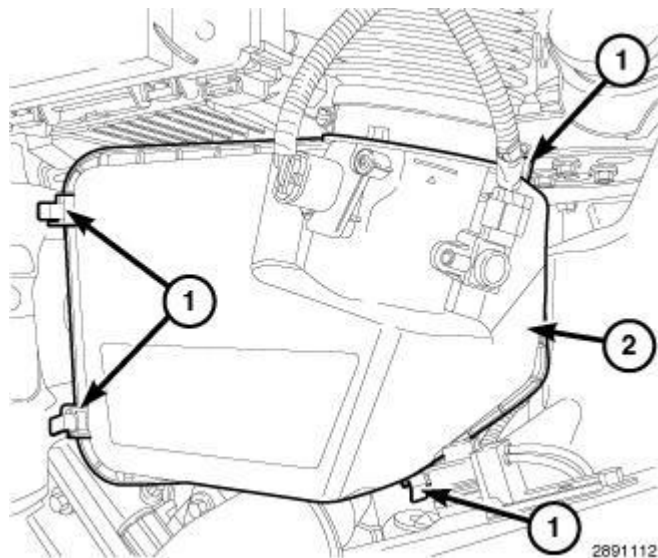


Fig. 372: Lock Tabs & Housing Cover
Courtesy of CHRYSLER LLC

2. Release the four lock tabs (1) and remove the housing cover (2).

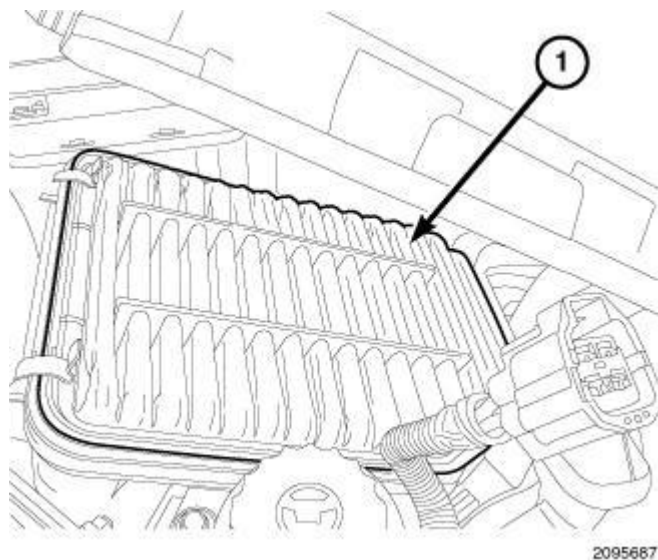


Fig. 373: Housing Cover For Filter Element
Courtesy of CHRYSLER LLC

3. Remove the air filter element.
4. If necessary, clean the inside of the air cleaner housing.

Installation

INSTALLATION - AIR CLEANER

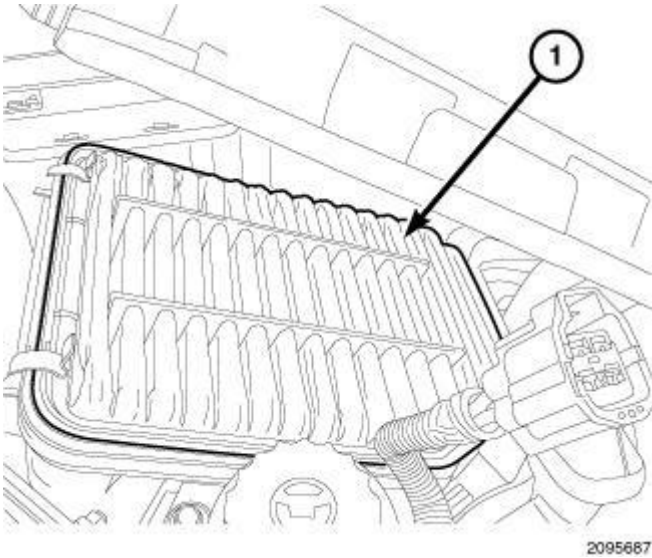


Fig. 374: Housing Cover For Filter Element
Courtesy of CHRYSLER LLC

1. Install new air filter element (1).

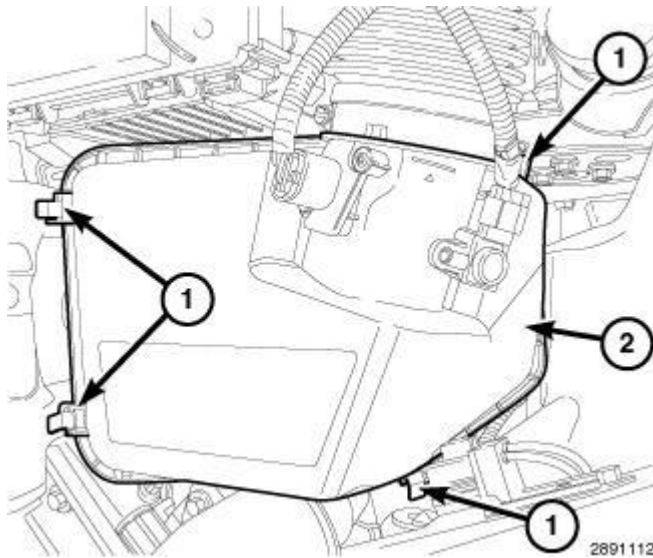


Fig. 375: Lock Tabs & Housing Cover
Courtesy of CHRYSLER LLC

2. Install housing cover (2) and the four snap lock tabs (1) in place.

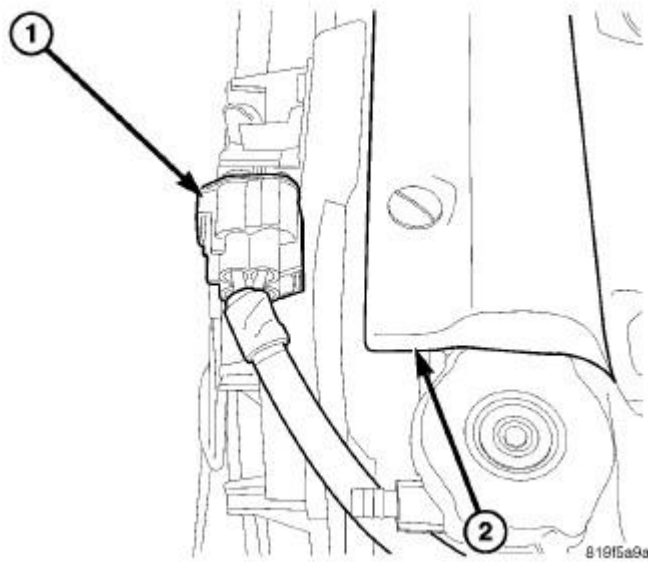


Fig. 376: Radiator Fan Electrical Connector
Courtesy of CHRYSLER LLC

- | |
|---|
| <p>1 - ELECTRICAL CONNECTOR
2 - UPPER RADIATOR SEAL</p> |
|---|

3. Connect the cooling fan electrical connector (1).

BODY, AIR CLEANER

Removal

REMOVAL

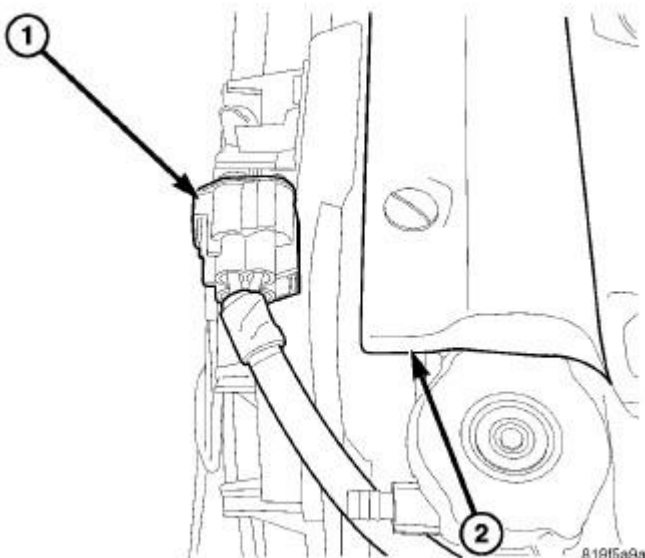
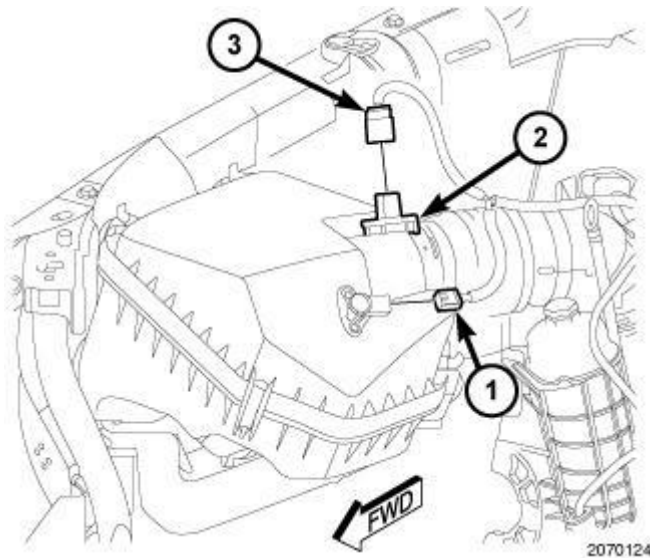


Fig. 377: Radiator Fan Electrical Connector

Courtesy of CHRYSLER LLC

- 1 - ELECTRICAL CONNECTOR
- 2 - UPPER RADIATOR SEAL

1. Disconnect the cooling fan electrical connector (1).

**Fig. 378: Cooling Fan Electrical Connector, Air Cleaner Housing And MAF Sensor**

Courtesy of CHRYSLER LLC

2. Loosen worm clamp and remove the air cleaner outlet tube from air cleaner housing (2).
3. Disconnect the IAT sensor (1).
4. Release the lock tab and disconnect the MAF sensor (3).

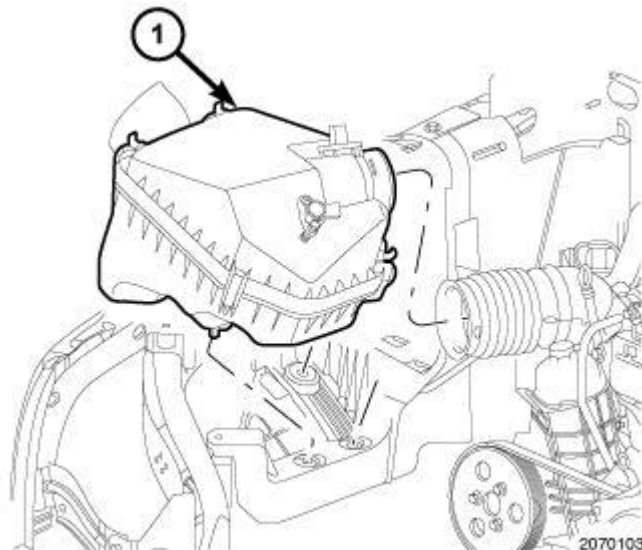


Fig. 379: Air Cleaner Assembly
Courtesy of CHRYSLER LLC

5. To remove the air cleaner assembly, first lift up on air cleaner body to release the three tabs; then disconnect the inlet tube from housing and remove the air cleaner assembly.

Installation

INSTALLATION

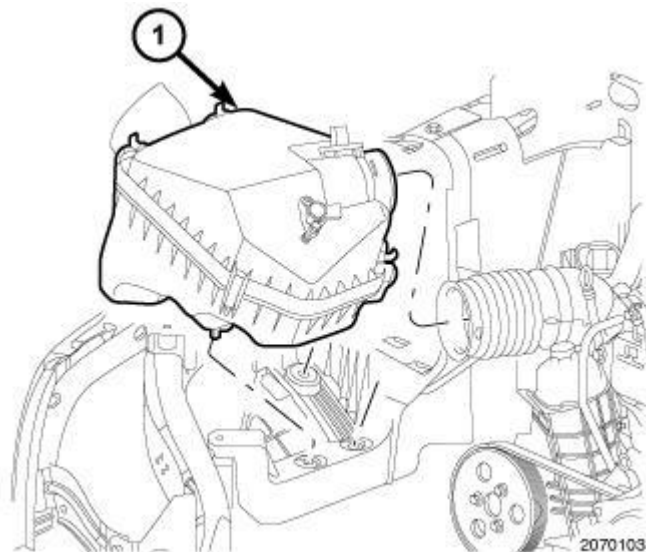


Fig. 380: Air Cleaner Assembly
Courtesy of CHRYSLER LLC

1. Install the air cleaner assembly (1) and connect the inlet tube.

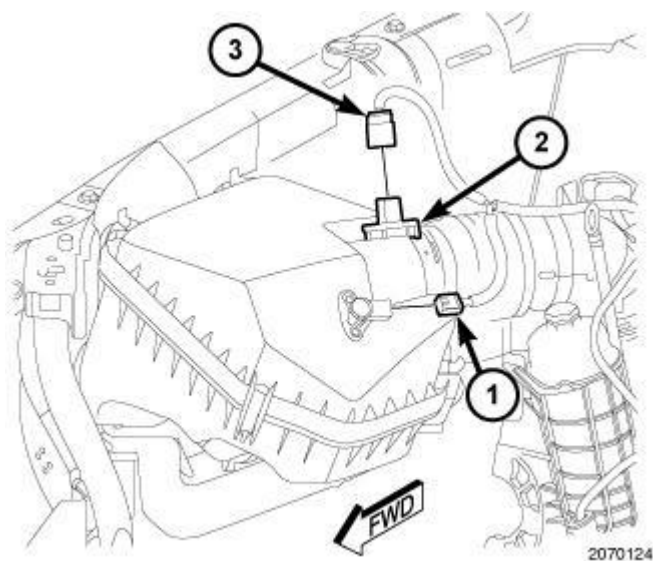


Fig. 381: Cooling Fan Electrical Connector, Air Cleaner Housing And MAF Sensor
Courtesy of CHRYSLER LLC

2. Connect the MAF sensor (3).
3. Connect the IAT sensor (1).
4. Install the air cleaner outlet tube and tighten the worm clamp (2).

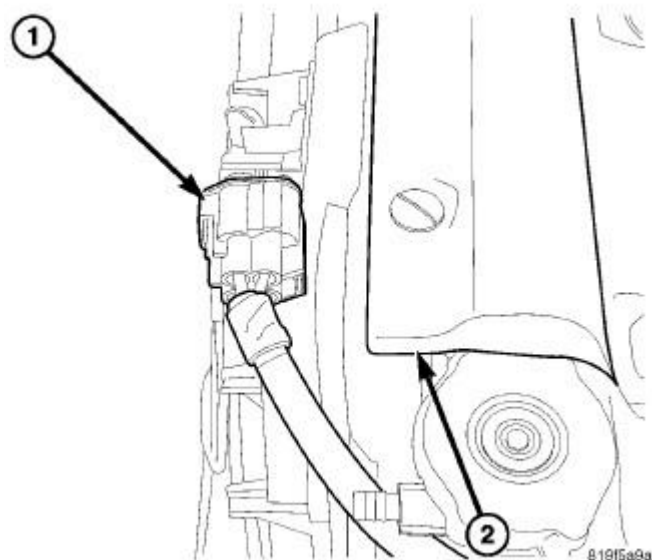


Fig. 382: Radiator Fan Electrical Connector
Courtesy of CHRYSLER LLC

- | |
|---|
| 1 - ELECTRICAL CONNECTOR
2 - UPPER RADIATOR SEAL |
|---|

5. Connect the cooling fan electrical connector (1).